

PRIMERGY TX1310 M1

System configurator and order-information guide

June 2014

Contents

Instructions

Configuration diagram

Configurator

0 System software

- I Basic unit
- II Processor
- III Memory
- IV Graphics
- V Accessible drives
- VI RAID Controller
- VII Hard disk drives
- VIII Communikation/Network
- IX Miscellaneous
- X Country specific power cords

Change report



PRIMERGY Server

Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

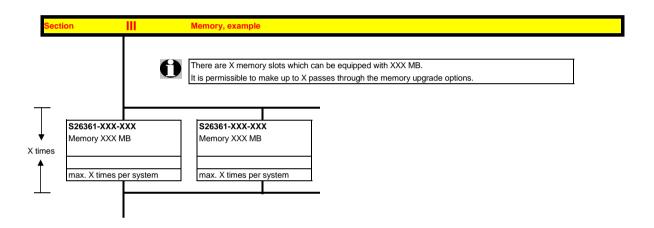

In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information.



For further information see:


http://ts.fujitsu.com/products/standard_servers/index.html (internet)


https://partners.ts.fujitsu.com/com/comer-supply/configurators/primergy_config/current/Pages/default.aspx

(extranet)

Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted

Configuration diagram PRIMERGY TX1310 M1

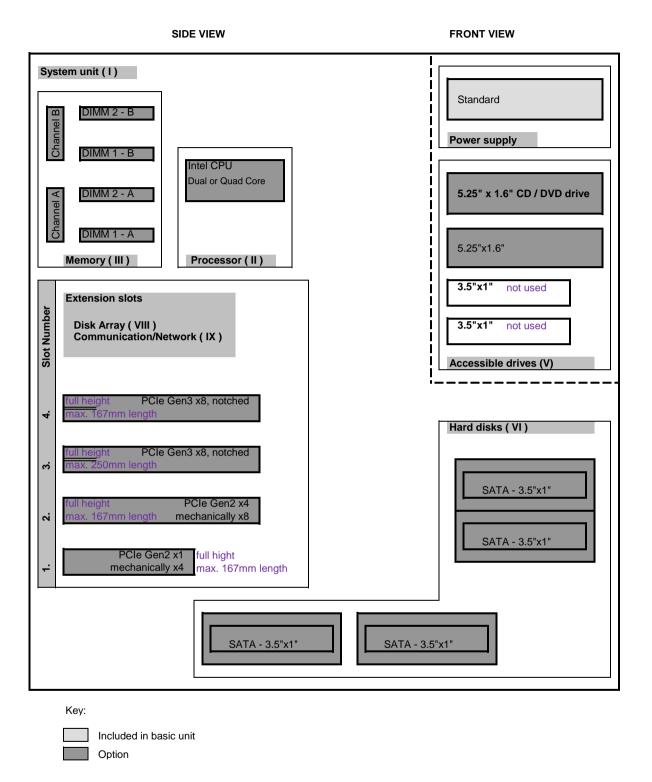

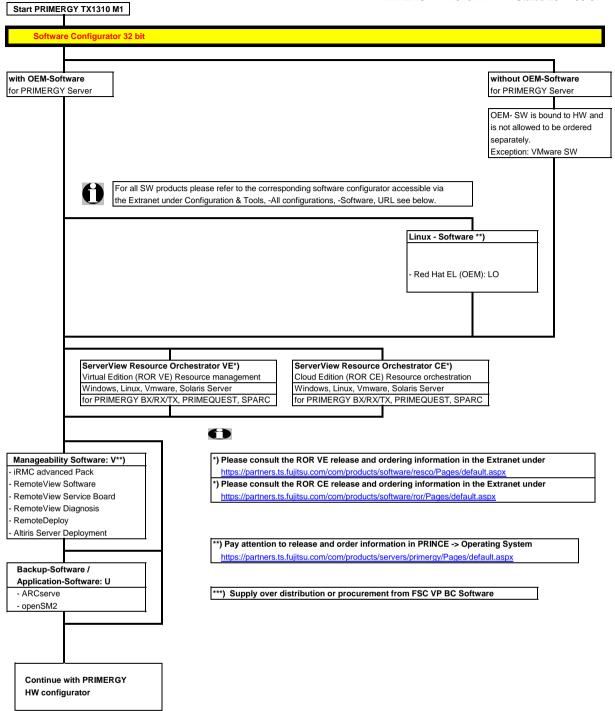

 $\underline{\text{https://partners.ts.fujitsu.com/com/products/servers/primergy/opsys/relcurrsys/Pages/default.aspx}$

https://partners.ts.fujitsu.com/com/products/servers/primergy/opsys/relcurrsys/Pages/default.aspx

for internal users:

for partners:

Continue with PRIMERGY

HW configurator

Start PRIMERGY TX1310 M1

Section

Basic unit



System unit consisting of:

- * Housing including standard power supply (no redundancy)
- * Imprint of MAC Adress on system label and delivery note as standard
- * heat sink for CPU

Systemboard with:

* 4 PCI expansion slots:

1x PCle Gen2 x1, mechanically x4 (not available for S26361-K1488-V201 base unit)
1x PCle Gen2 x4, mechanically x8 (not available for S26361-K1488-V201 base unit)

2x PCle Gen3 x8, notched (possible to plug x16 cards)

- * Slot for optional TPM module
- * 4 memory slots for up to 32GB (1600MHz PC3 12800) unbuffered DDR III RAM (ECC)

max. 8GB modul per slot (2 memory slots for S26361-K1488-V201 base unit)

- * 2 bays 5.25" for accessible drives
- * 4 LFF (3.5" Large Form Factor) bays 1" high for no hot plug SATA HD
- * SATA controller with up to 4 HDD's using Intel C226 Chipset
- * Intel CPU internal Graphics Controller (pGFX) with shared Memory

1600 x 1200 pixel with 16 bit colours and 75 Hz

1280 x 1024 pixel with 16/32 bit colours and 120/75 Hz

1152 x 864 pixel with 16/32 bit colours and 160/100Hz

1024 x 768 pixel with 16/32 bit colours and 200/120Hz

800 x 600 and 640 x 480 pixel with 32 bit colours and 200Hz

- * Intel 10/100/1000 Mb/s ("Clarkville" Intel i217LM) on-board LAN supporting WoL and PXE
- * Intel 10/100/1000 Mb/s ("Springville" Intel i210) on-board LAN supporting WoL, PXE and iSCSI boot

Cables included in Base Unit:

- 1. SATA cabel for CD/DVD
- 2. 4 x SATA cabel in basic unit

ServerView Suite Software package incl. ServerView Installation Manager, Management Software and Updates

External Interfaces:

1x RS-232-C (serial, 9 pins)

1x VGA (15 pins)


1xUSB3.0 Intern (Type A) for backup devices or USB Stick


4x USB 3.0 (2x frontside, 2x rearside)


5x USB 2.0 (4x rearside, 1x internal USSD / UFM)


2x LAN RJ45


Α

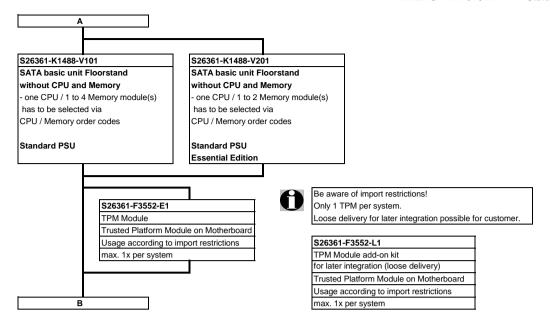


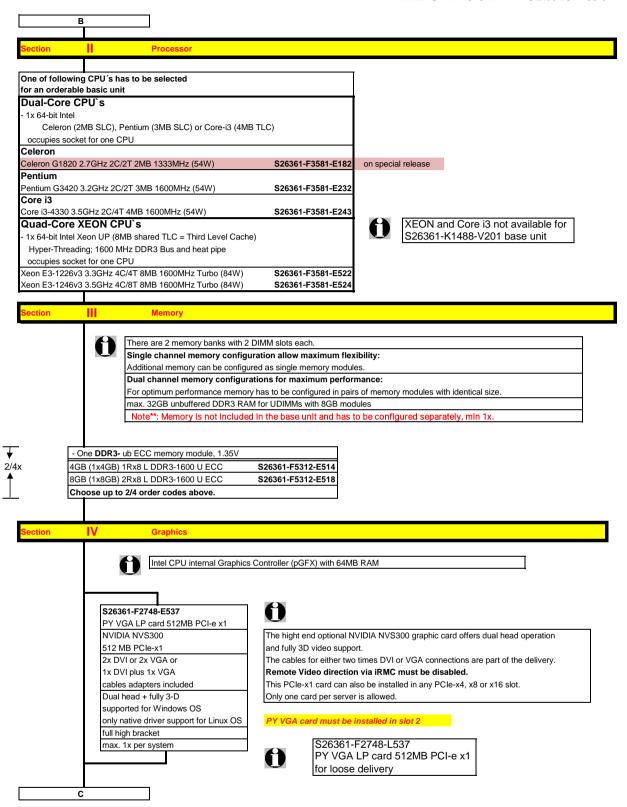

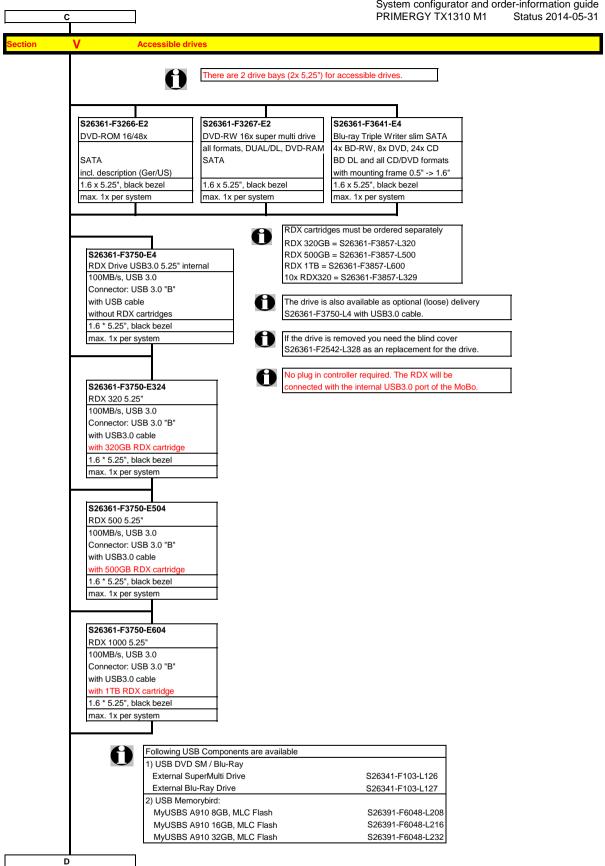

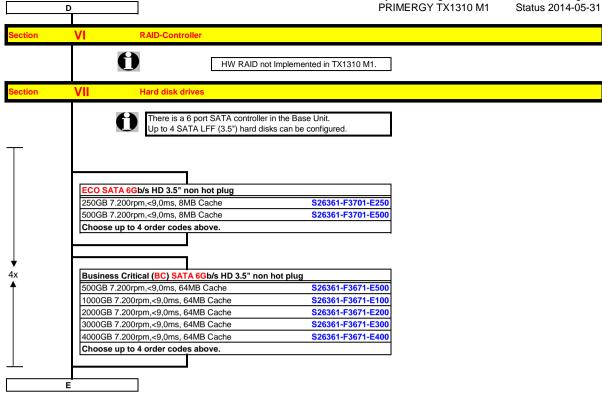

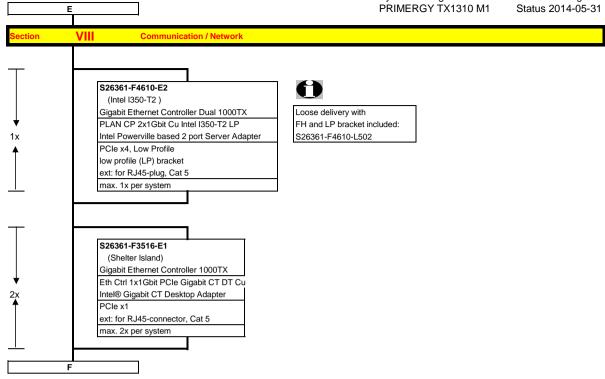

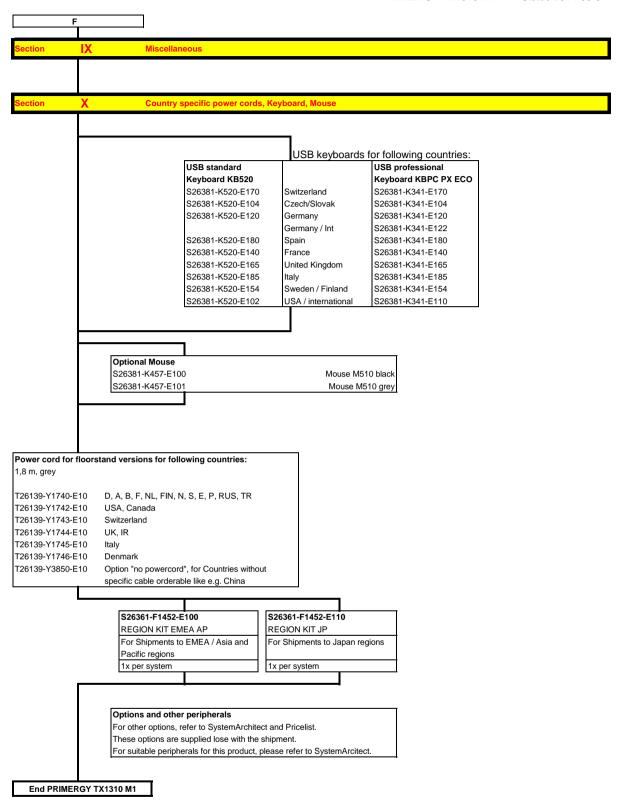

Change Report

Date	Order number	Changes
2014-05-15		added Infoboxes for RDX
2014-03-31		First Release