
ASSEMBLY INSTRUCTIONS, ELO SELF SERVICE STAND

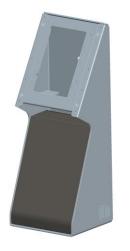

 
ēlo

E796783 ELO-STAND-SELF-SERVICE-15-22-COUNTERTOP

Contents for Kit: E796783, ELO-STAND-SELF-SERVICE-15-22-COUNTERTOP



Head Assembly Qty. 1



Countertop Base Qty. 1



Display Bracket, Android Qty. 1



USB Hub Qty. 1



Cable Cover, Windows Qty. 1




Display Bracket, Windows Qty. 1




Qty. 2

Screws			
Bag A	Qty.10	SCREW, M4X8, PAN-HEAD, CROSS- RECESS	
Bag B	Qty.4	SCREW, M4X8, FLAT-HEAD, CROSS-RECESS	
Bag C	Qty.3	SCREW, M3X8, PAN-HEAD, CROSS-RECESS,	
Bag D	Qty.4	SCREW, 3mm X8L, THREAD-FORMING, PAN-HEAD	
Bag I	Qty.4	SCREW, M4X8, PAN-HEAD, CROSS-RECESS	
Bag L	Qty.4	SCREW, M4X6, PAN-HEAD, CROSS-RECESS	
Bag S	Qty.2	SCREW, M4X5, PAN-HEAD, CROSS-RECESS	
Bag T	Qty.2	SCREW, M3X10, PAN-HEAD, CROSS-RECESS	

Panel Hardware			
Qty.2	SCREW, M6X14, PAN-HEAD, CROSS- RECESS		
Qty.2	BACKER BOARD SPACER		
Qty.2	THUMB SCREW		

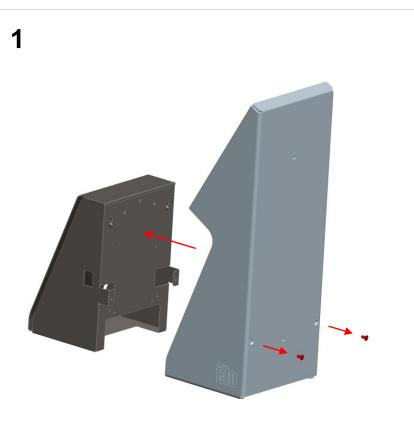


Remove and save (2) screws on rear of Head, pull out printer tray.

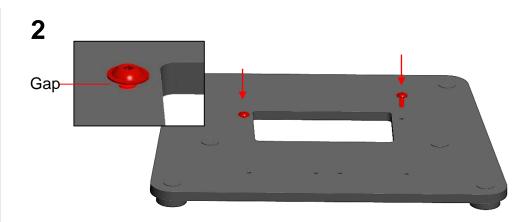


Add (2) screws from bag "A"; leave ~3mm (1/8") gap for Head.

3

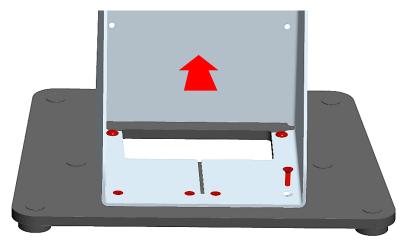


Align slots on bottom rear of Head with (2) screws on base and slide on stand. Add (4) screws from bag "B". Tighten (2) previous screws at rear.

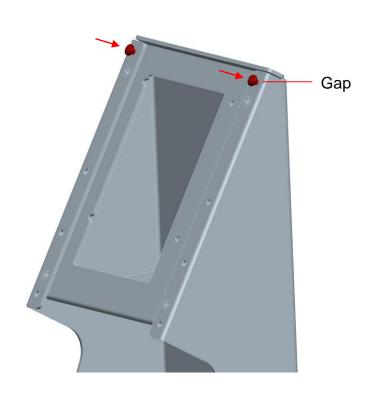


Add (2) screws from bag "A"; leave ~3mm (1/8") gap (for Display Bracket).

5


Choose Android or Windows Display Bracket

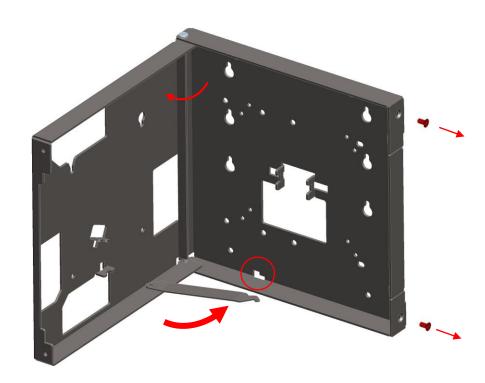

Remove and save (2) screws, open cover of Display Bracket; pivot out and fix prop.

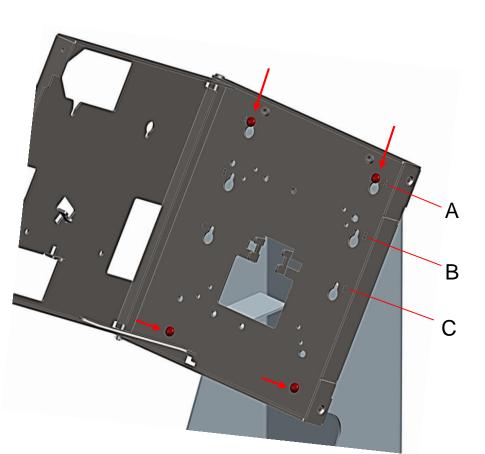

Assemble Display Bracket onto Head. Position "A" for 15", 22" in landscape. Position "B" for 15" in portrait Position "C" for 22" in portrait Add (2) screws from bag "A" at bottom holes.

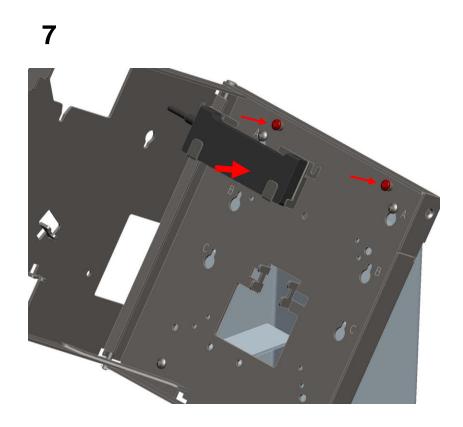

Assemble USB Hub. Add (2) screws from bag "S"; leave ~3mm (1/8") gap for USB bracket to slide on; tighten screws.

If using an EMV Cradle, follow those instructions before moving on.

For Android, continue to step 8 For Windows, continue to step 12

Android Landscape (For Portrait, go to step **10**)

9

Top Landscape


8




Cable direction


Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket.

Remove cable cover(s) before mounting displays on stand.

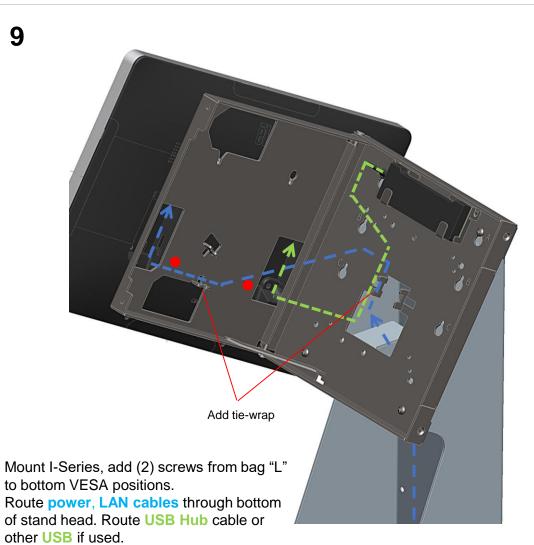

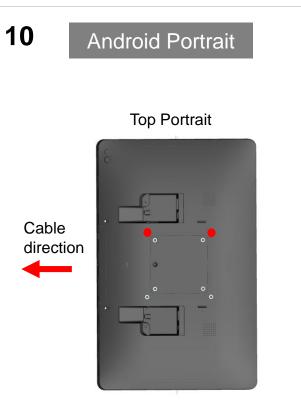


Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket. Remove cable cover(s) before mounting displays on stand.

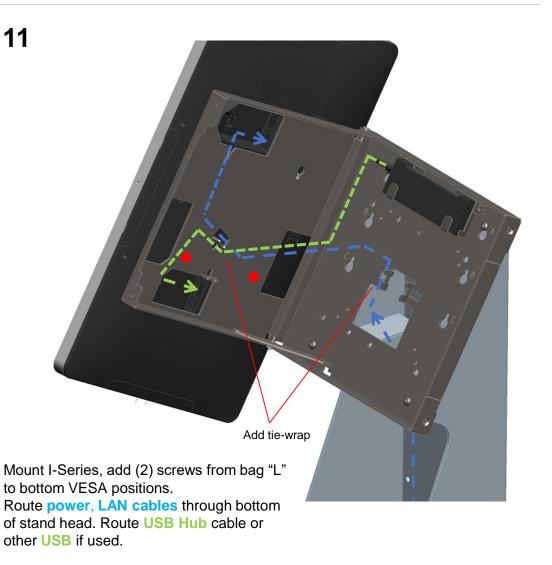

Windows Landscape (For Portrait, go to step 15)


Remove original plastic cable cover.

Add (2) screws from bag "L" to top VESA positions ("A" label below). Leave ~3mm (1/8") gap for mounting to Display Bracket.

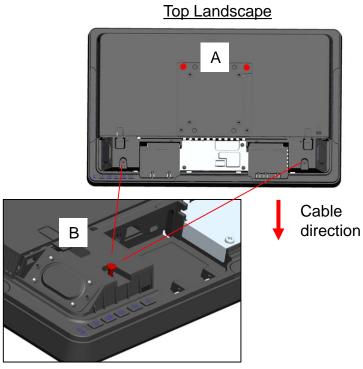

Add (2) screws from bag "T" at positions labeled "B". Leave ~3mm (1/8") gap for later mounting of Cable Bracket. 13 Add tie-wrap

Mount I-Series, add (2) screws from bag "L" to bottom VESA positions. Route **power**, LAN cables through bottom of stand head to I-Series. Route USB Hub cable or other USB, if used. To I-Series.

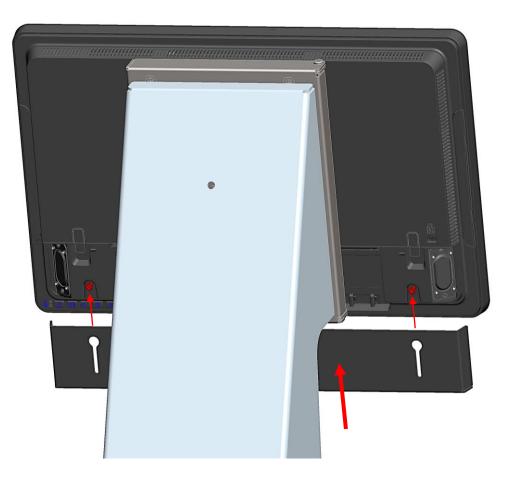


Attach metal Cable Cover and tighten (2) screws.


Windows Portrait

Remove original plastic cable cover.

Add (2) screws from bag "L" at positions shown on VESA mount ("A" label below). Leave ~3mm (1/8") gap for mounting to Display Bracket.

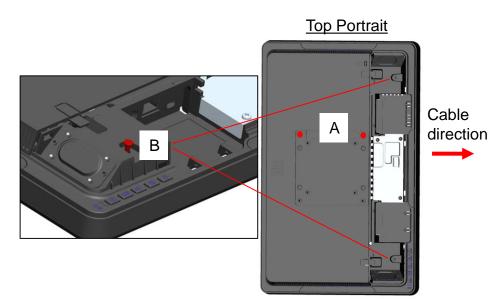


Add (2) screws from bag "T" at positions labeled "B". Leave ~3mm (1/8") gap for later mounting of Cable Bracket.

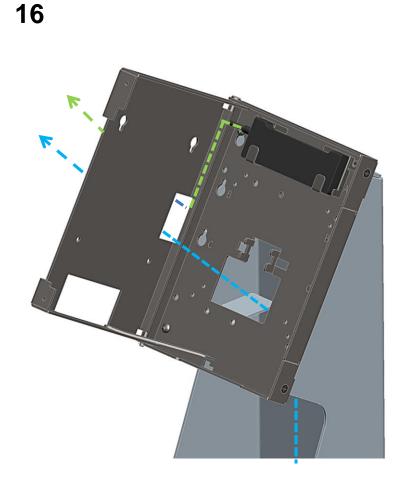

Before attaching I-Series, route **power**, **LAN cables** through bottom of stand head and through Display Bracket. Route **USB Hub** cable or other **USB** if used.


ēlo

17a

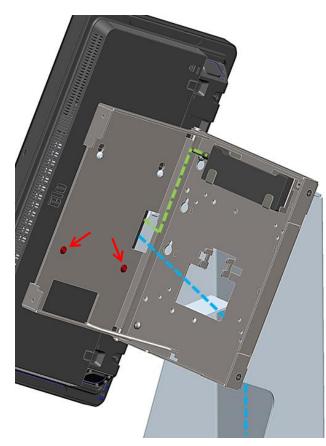


Mount I-Series, add (2) screws from bag "L" to bottom VESA positions.

17b

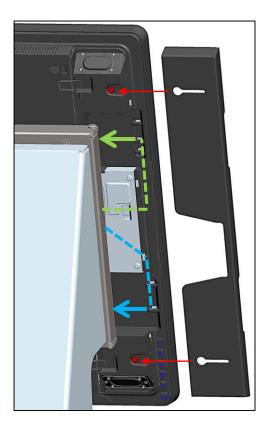

17c

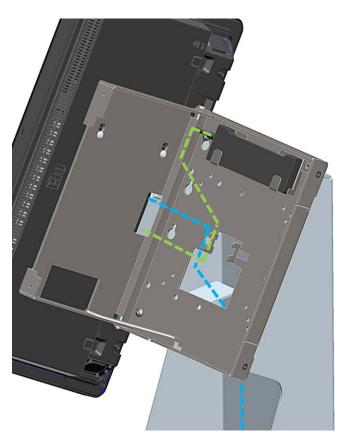


Close Display Bracket and attach cables to I-Series. Attach metal Cable Cover and tighten (2) screws. Open Display Bracket, rout and tie-wrap cables.



If no printer, skip to step **23**


18

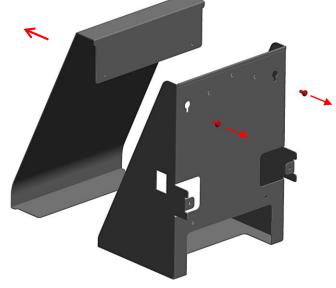


If using printer, remove cover to add printer.

Go to step **19** for **Star** printers. For **Epson TM-T88**, go to step **22**. Add (2) screws from bag "C" to printer tray; use Star printer bracket to set depth of screws than remove Star bracket.

19

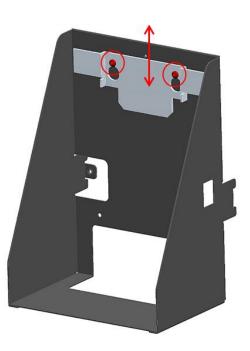


20 Add Star printer bracket to printer; refer to Star instructions.

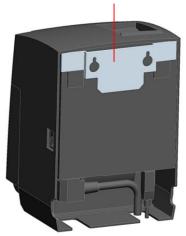



21

Add Star printer with bracket to printer tray. Secure printer to printer tray using 3rd screw from bag "C".

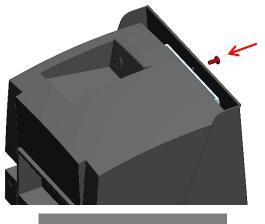

Continue to step 23

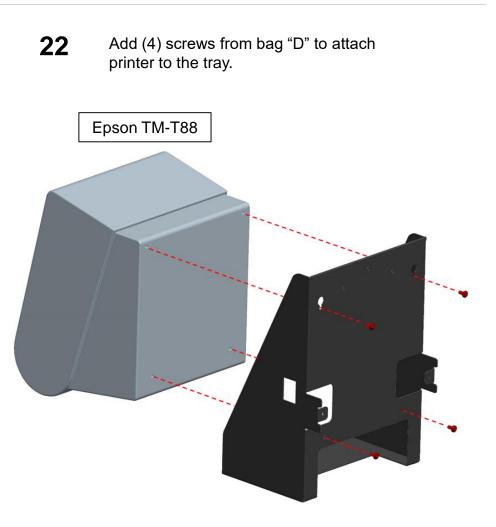

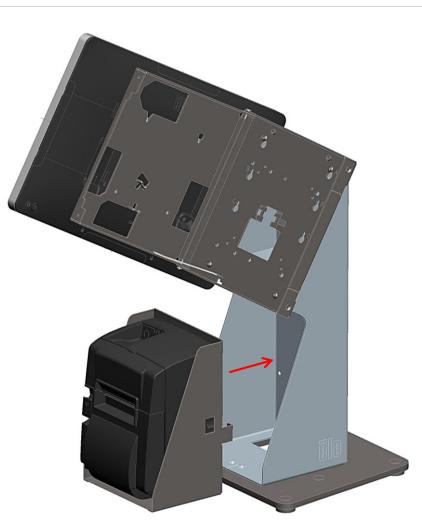

Route cables from/to printer as needed, slide in printer tray assembly (or printer tray with cover if no printer).





Close Display Bracket and add (2) screws saved from step 5. Secure printer assembly with (2) screws saved from step 1. If installing an EMV Cradle, finish by adding (1) screw from bag "N".

EMV-SELF-SERV-ING-RP757

25

EMV-SELF-SERV-15-22-ING-IPP320/350/315 EMV-SELF-SERV-15-22-VF-MX915-ING-ISC250

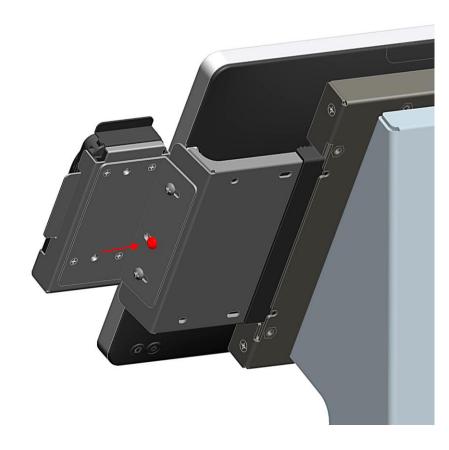

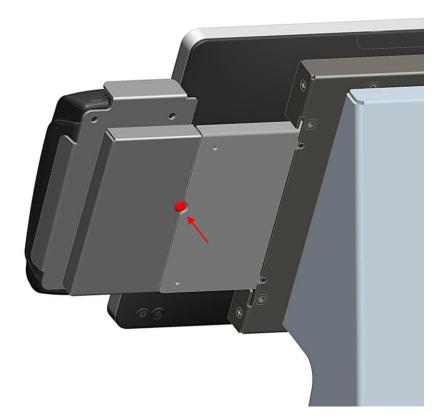

© Copyright 2019 Elo Touch Solutions, Inc. 15

For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.

ASSEMBLY INSTRUCTIONS, ELO SELF SERVICE STAND



ēlo

E796965 ELO-STAND-SELF-SERVICE-15-22-FLOOR-TOP E797162 ELO-STAND-SELF-SERVICE-15-22-FLOOR-BASE

Contents for Kit: E796965 ELO-STAND-SELF-SERVICE-15-22-FLOOR-TOP





Cable Cover, Windows Qty. 1



Straps Qty. 3



Display Bracket, Android Qty. 1



Floor-Head Assembly Qty. 1

Display Bracket, Windows Qty. 1


Annal P

USB Hub Qty. 1

Tie-wrap Qty. 2


Screws		
Bag A	Qty.10	SCREW, M4X8, PAN-HEAD, CROSS-RECESS
Bag B	Qty.4	SCREW, M4X8, FLAT-HEAD, CROSS-RECESS
Bag C	Qty.3	SCREW, M3X8, PAN-HEAD, CROSS-RECESS
Bag D	Qty.4	SCREW, 3mm X8L, THREAD-FORMING, PAN-HEAD
Bag K	Qty.6	SCREW, M5X10, FLAT-HEAD, CROSS-RECESS
Bag L	Qty.4	SCREW, M4X6, PAN-HEAD, CROSS-RECESS
Bag S	Qty.2	SCREW, M4X5, PAN-HEAD, CROSS-RECESS
Bag T	Qty.2	SCREW, M3X10, PAN-HEAD, CROSS-RECESS

Panel Hardware			
Qty.2	SCREW, M6X14, PAN-HEAD, CROSS- RECESS		
Qty.2	BACKER BOARD SPACER		
Qty.2	THUMB SCREW		

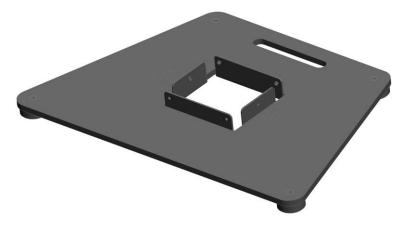


Floor Base Qty. 1


ēlo

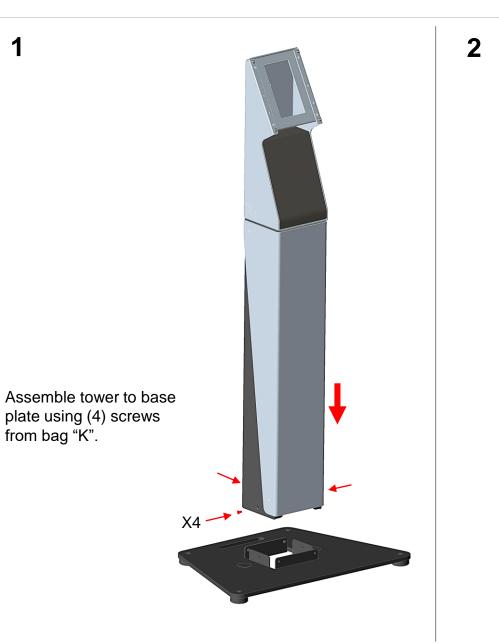


1

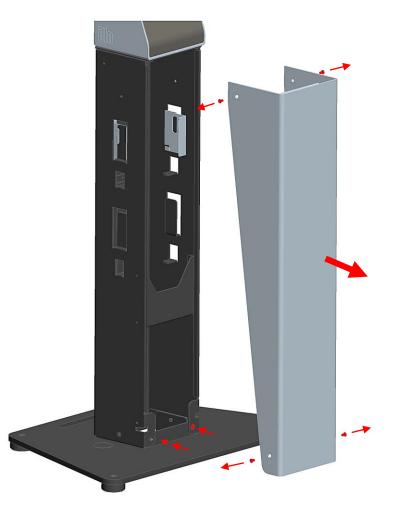


Remove and save the (4) screws on the left and right of the stand front cover. Pull off the silver cover and set aside. Add (2) remaining screws from bag "K" to bottom front of stand.

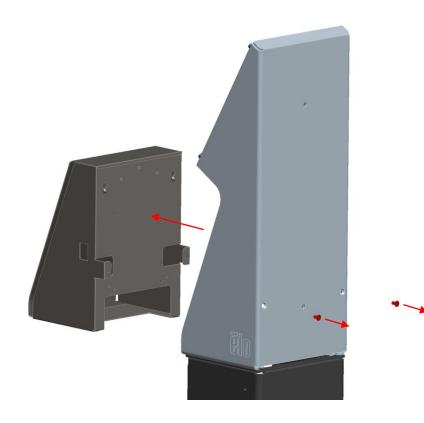


Remove and save (2) screws on rear of Head, pull out printer tray.

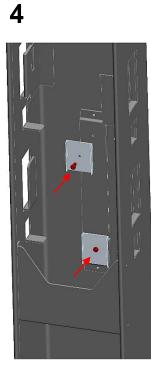

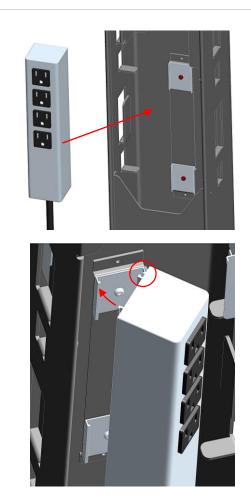


(Power strip shown available from McMaster-Carr, item #7361K43)

Add power strip brackets (supplied with power strip) using (2) screws from bag "L". Hook one side of power strip onto brackets than push to snap down. 5

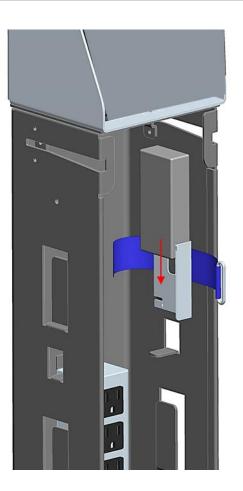


Add power bricks into tower using provided straps.

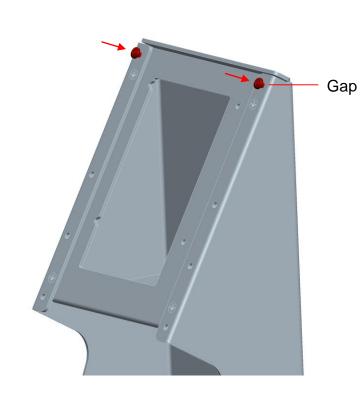


Add (2) screws from bag "A"; leave ~3mm (1/8") gap (for Display Bracket).

7


Choose Android or Windows Display Bracket

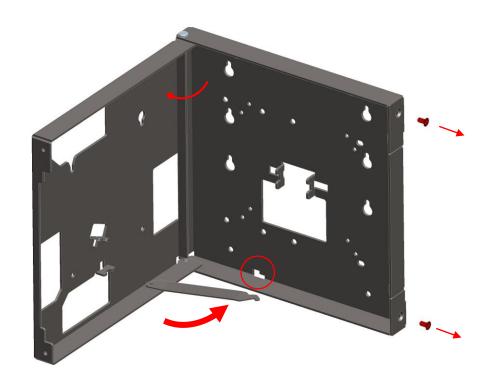

Remove and save (2) screws, open cover of Display Bracket; pivot out and fix prop.

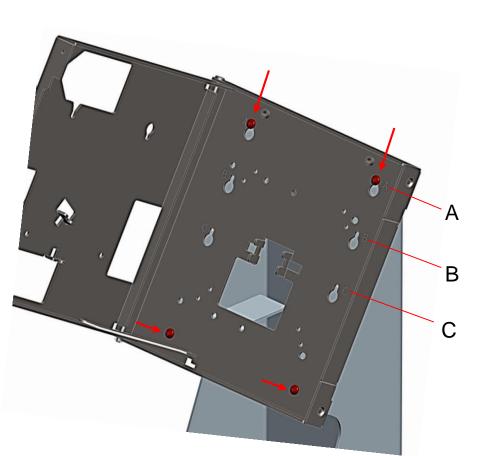

Assemble Display Bracket onto Head. Position "A" for 15", 22" in landscape. Position "B" for 15" in portrait Position "C" for 22" in portrait Add (2) screws from bag "A" at bottom holes.

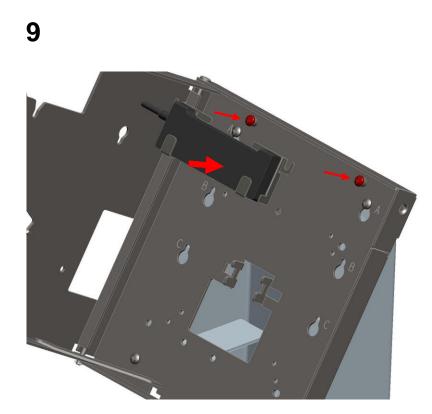

Assemble USB Hub. Add (2) screws from bag "S"; leave ~3mm (1/8") gap for USB bracket to slide on; tighten screws.

If using an EMV Cradle, follow those instructions before moving on.

For Android, continue to step **10** For Windows, continue to step **14**

Android Landscape (For Portrait, go to step 12)


Top Landscape




Cable direction


Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket.

Remove cable cover(s) before mounting displays on stand.

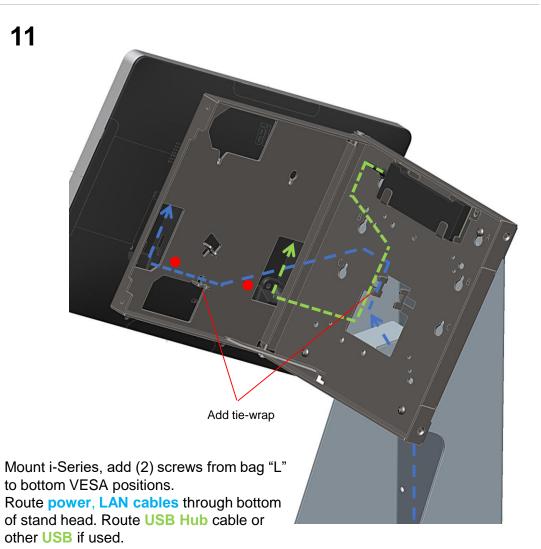

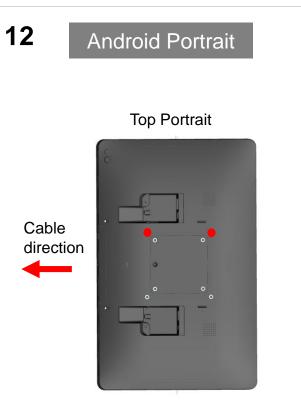

Add (2) screws from bag "L" to top VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket. Remove cable cover(s) before mounting displays on stand.

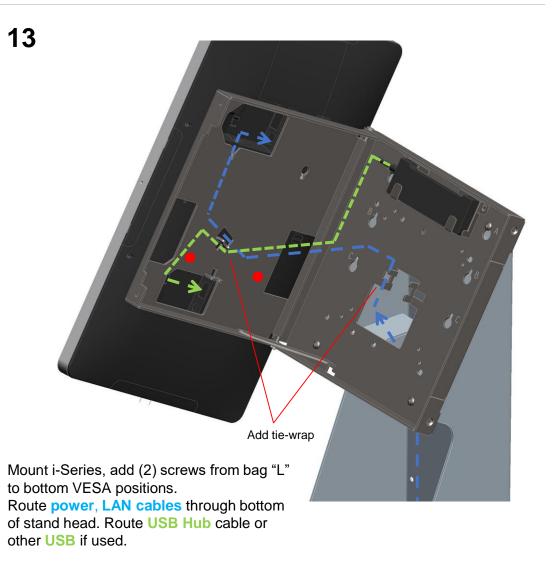


Windows Landscape (For Portrait, go to step 17)

15


Remove original plastic cable cover.

Add (2) screws from bag "L" to top VESA positions ("A" label below). Leave ~3mm (1/8") gap for mounting to Display Bracket.

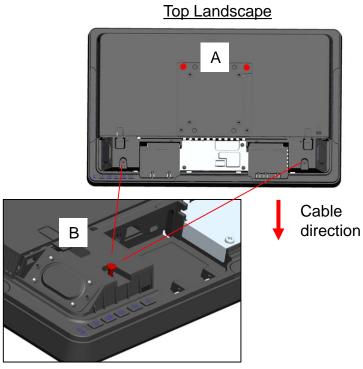

Add (2) screws from bag "T" at positions labeled "B". Leave ~3mm (1/8") gap for later mounting of Cable Bracket. Add tie-wrap

Mount i-Series, add (2) screws from bag "L" to bottom VESA positions. Route **power**, **LAN cables** through bottom of stand head to i-Series. Route **USB Hub** cable or other **USB**, if used. To i-Series.

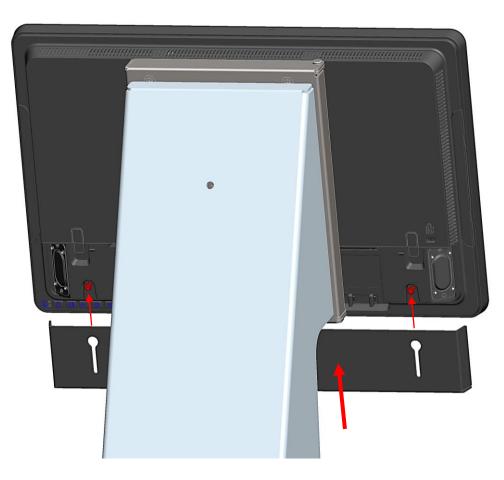


Attach metal Cable Cover and tighten (2) screws.


Windows Portrait

Remove original plastic cable cover.

Add (2) screws from bag "L" at positions shown on VESA mount ("A" label below). Leave ~3mm (1/8") gap for mounting to Display Bracket.

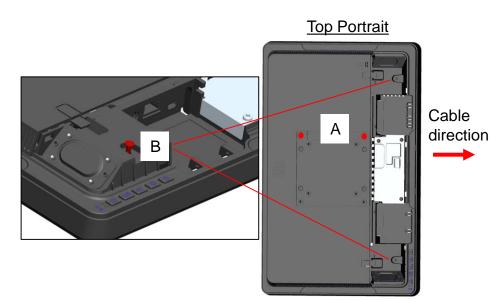


Add (2) screws from bag "T" at positions labeled "B". Leave ~3mm (1/8") gap for later mounting of Cable Bracket.

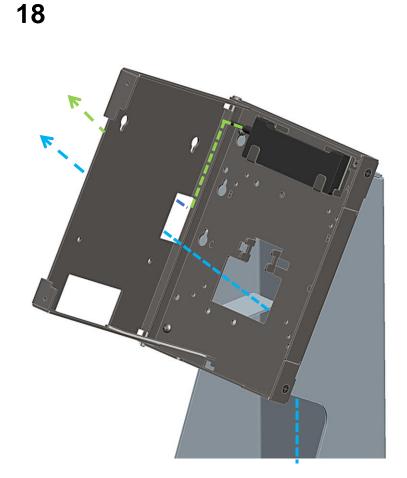


Before attaching i-Series, route **power**, **LAN cables** through bottom of stand head and through Display Bracket. Route **USB Hub** cable or other **USB** if used.

19a

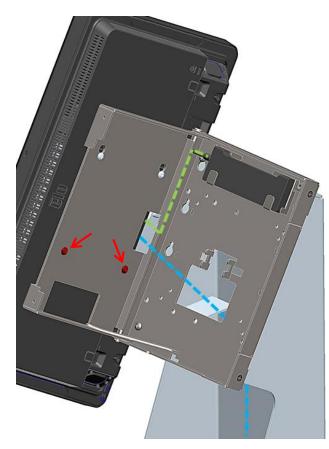


Mount i-Series, add (2) screws from bag "L" to bottom VESA positions.


19b

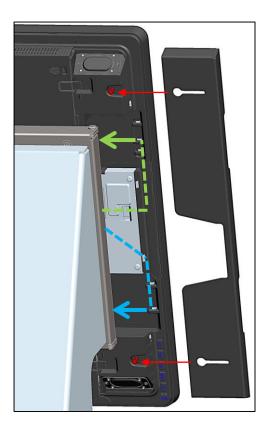

19c

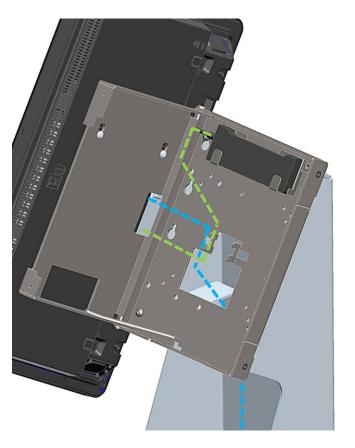

Close Display Bracket and attach cables to i-Series. Attach metal Cable Cover and tighten (2) screws. Open Display Bracket, rout and tie-wrap cables.

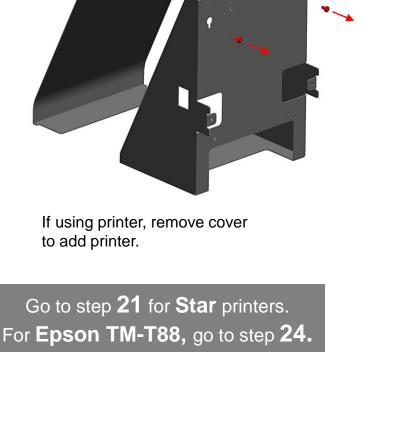


If no printer, skip to step **25**


K

21


Add (2) screws from bag "C" to printer tray; use Star printer bracket to set depth of screws than remove Star bracket.

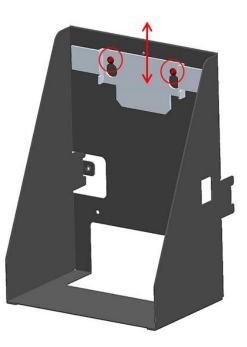

22 Add Star printer bracket to printer; refer to Star instructions.

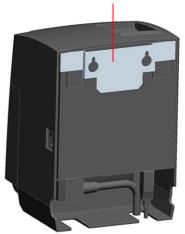


23 Add Star printer with bracket to printer tray. Secure printer to printer tray using 3rd screw from bag "C".

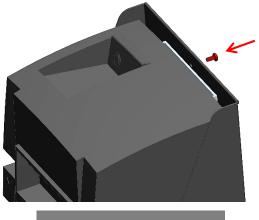

Continue to step 25


24 Add (4) screws from bag "D" to attach printer to the tray. Epson TM-T88

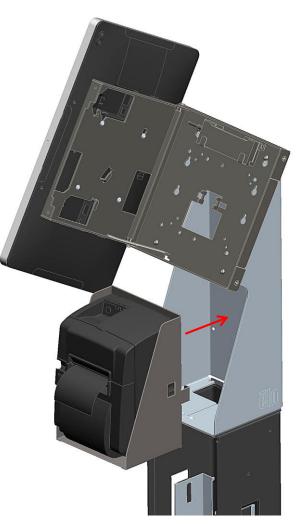

Route cables from/to printer as needed, slide in printer tray assembly (or printer tray with cover if no printer).




Close Display Bracket and add (2) screws saved from step 7. Secure printer assembly with (2) screws saved from step 3.

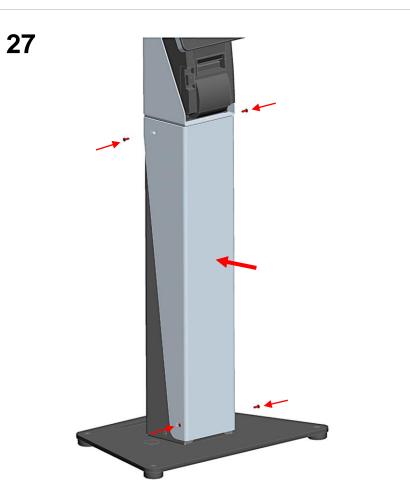

Replace floor stand cover and secure using (4) screws saved from step 2.

28

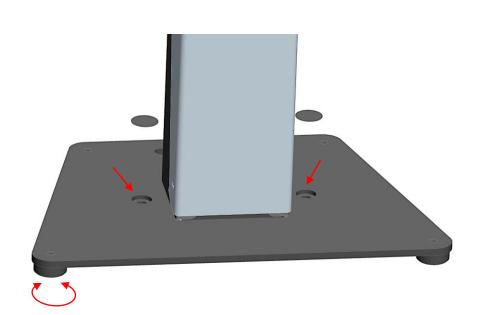


(2) bolt holes available on top of base to secure stand to floor. Feet can be adjusted in case of uneven surfaces.


If installing an EMV Cradle, finish by adding (1) screw from bag "N".

EMV-SELF-SERV-ING-RP757

29

EMV-SELF-SERV-15-22-ING-IPP320/350/315 EMV-SELF-SERV-15-22-VF-MX915-ING-ISC250

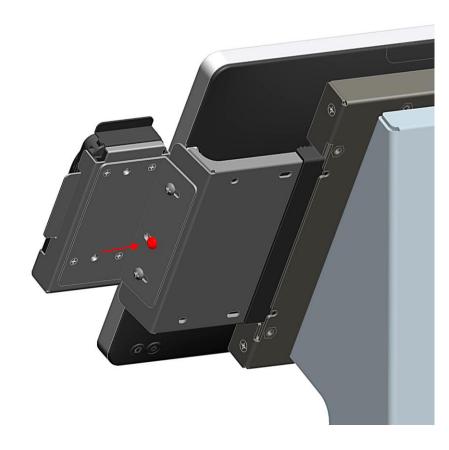

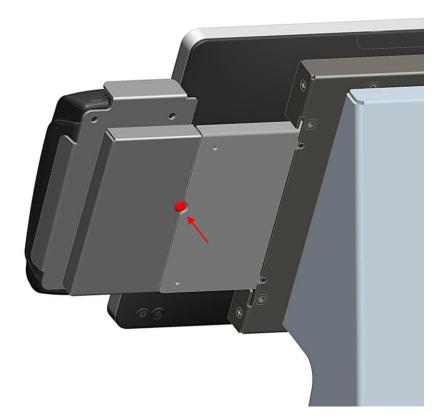


© Copyright 2019 Elo Touch Solutions, Inc. 19


For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.




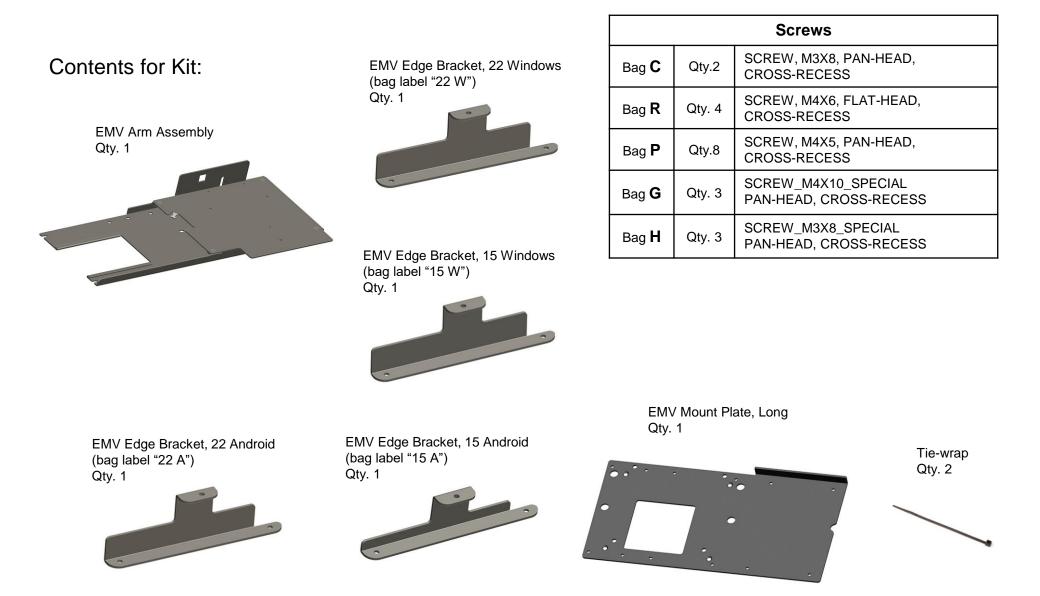

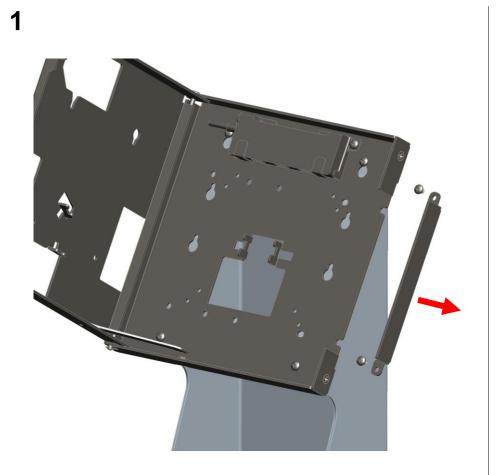


Remove Fill Plate on Display Bracket.


2

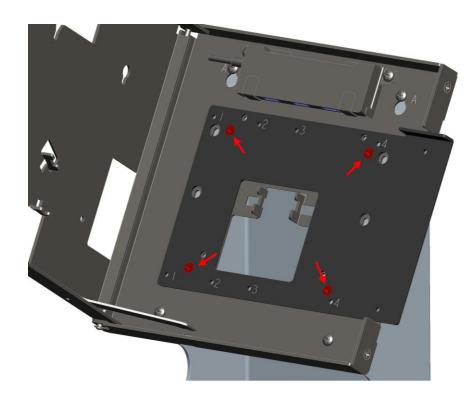


Add the EMV Mount Plate to the Display Bracket using (4) screws from bag "R".

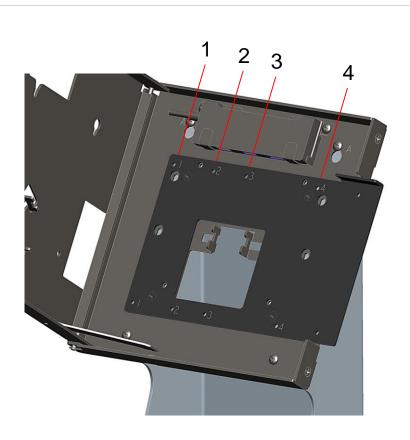

Add (2) screws to EMV Mount Plate from bag "P" at position 1, 2,3 or 4. Leave ~3mm (1/8") gap (for EMV Arm). Position "1" for 15" in portrait. Position "2" for 22" in portrait. Position "3" for 15" in landscape. Position "4" for 22" in landscape.

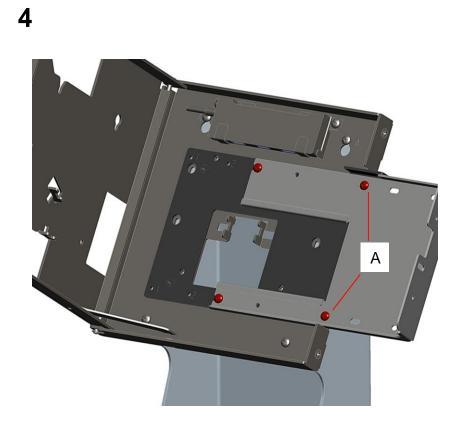


Assemble EMV Arm to Display Bracket. Add (2) screws from bag "P" at right most position "A" to secure EMV Arm to Display Bracket.

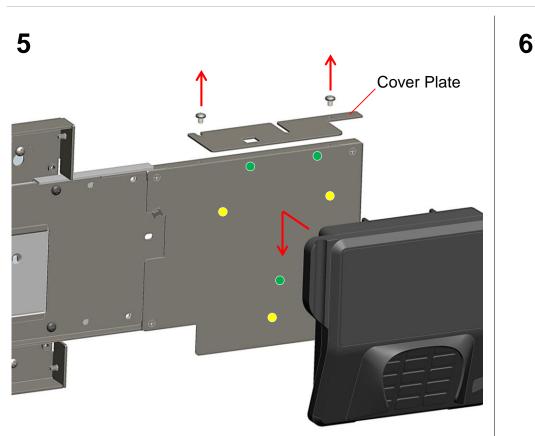

Remove and save EMV Cover Plate and screws. Add (3) screws for mounting EMV terminal:

- Use bag "G" for Ingenico iSC250
- Use bag "H" for Verifone MX915

Attach EMV terminal cable to terminal and slide terminal onto (3) Arm Assembly screws.

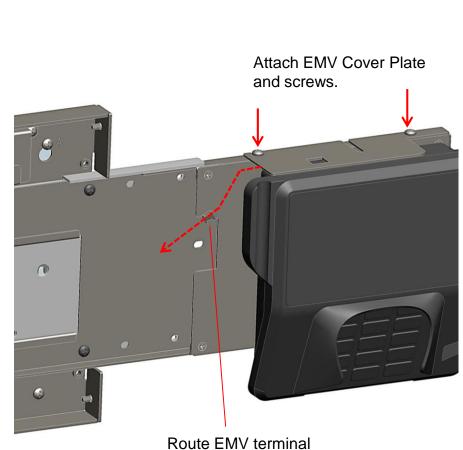

Route EMV terminal cable and tie-wrap.

0 0 0 0 Remove plastic cover from right edge of display. Add Edge Bracket using (2) screws from bag "C". Use Edge Bracket "15 A" for Android 15" Use Edge Bracket "22 A" for Android 22" Use Edge Bracket "15 W" for Windows 15" Use Edge Bracket "22 W" for Windows 22" Return to Wallaby assembly guide


to complete installation

For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.

Contents for Kit:

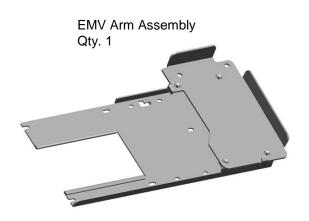

EMV Edge Bracket, 22 Windows (bag label "22 W") Qty. 1




EMV Edge Bracket, 15 Windows (bag label "15 W") Qty. 1



Bag C	Qty.2	SCREW, M3X8, PAN-HEAD, CROSS-RECESS
Bag R	Qty. 4	SCREW, M4X6, FLAT-HEAD, CROSS-RECESS
Bag P	Qty.8	SCREW, M4X5, PAN-HEAD, CROSS-RECESS
Bag J	Qty. 2	SCREW, #10,0.5"L, PAN-HEAD, THREAD-FORMING,CROSS-RECESS

Screws

 EMV Edge Bracket, 22 Android (bag label "22 A") Qty. 1



EMV Edge Bracket, 15 Android (bag label "15 A") Qty. 1





EMV Mount Plate, Long Qty. 1



Tie-wrap Qty. 2




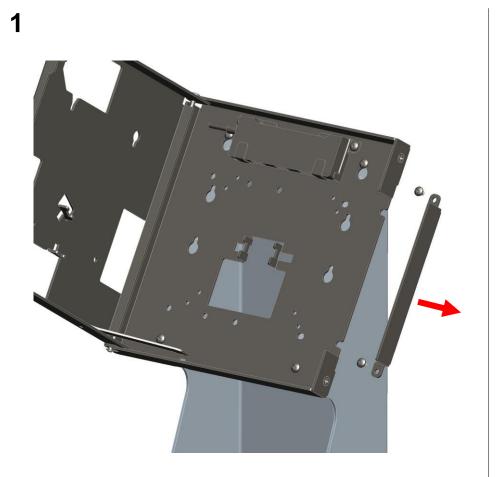

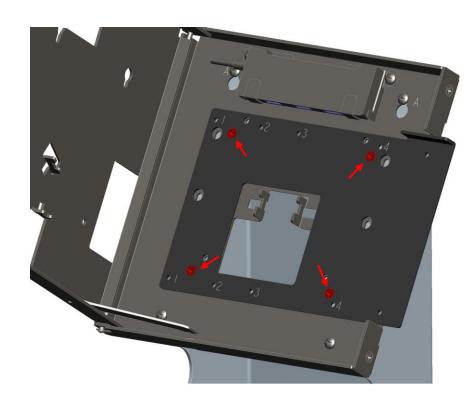


Remove Fill Plate on Display Bracket.

Add the EMV Mount Plate to the Display Bracket using (4) screws from bag "R".

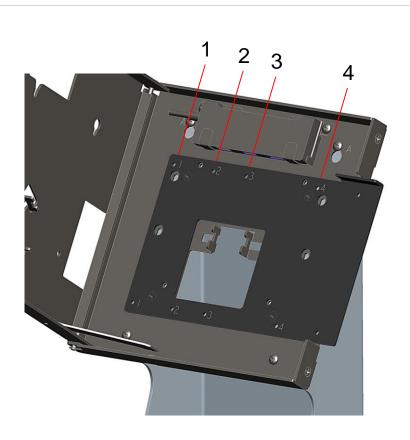

Add (2) screws to EMV Mount Plate from bag "P" at position 1, 2,3 or 4. Leave ~3mm (1/8") gap (for EMV Arm). Position "1" for 15" in portrait. Position "2" for 22" in portrait. Position "3" for 15" in landscape. Position "4" for 22" in landscape.

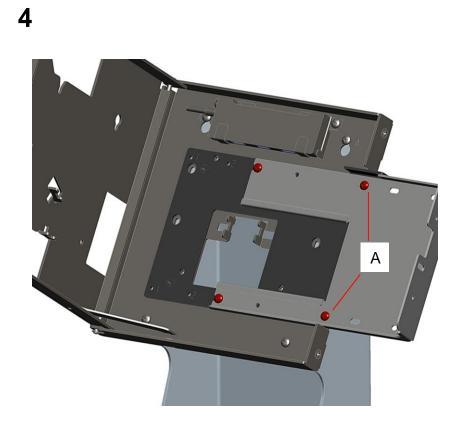


Assemble EMV Arm to Display Bracket. Add (2) screws from bag "P" at right most position "A" to secure EMV Arm to Display Bracket.



Slide Ingenico IPP320/350 onto sled. 6



Add screws from bag "J"; do not over tighten. Add zip-tie.

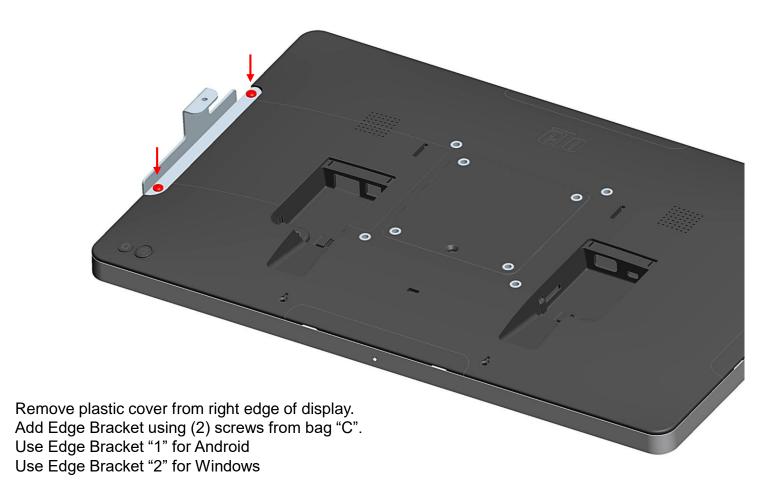



Return to Wallaby assembly guide to complete installation

For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.


Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.

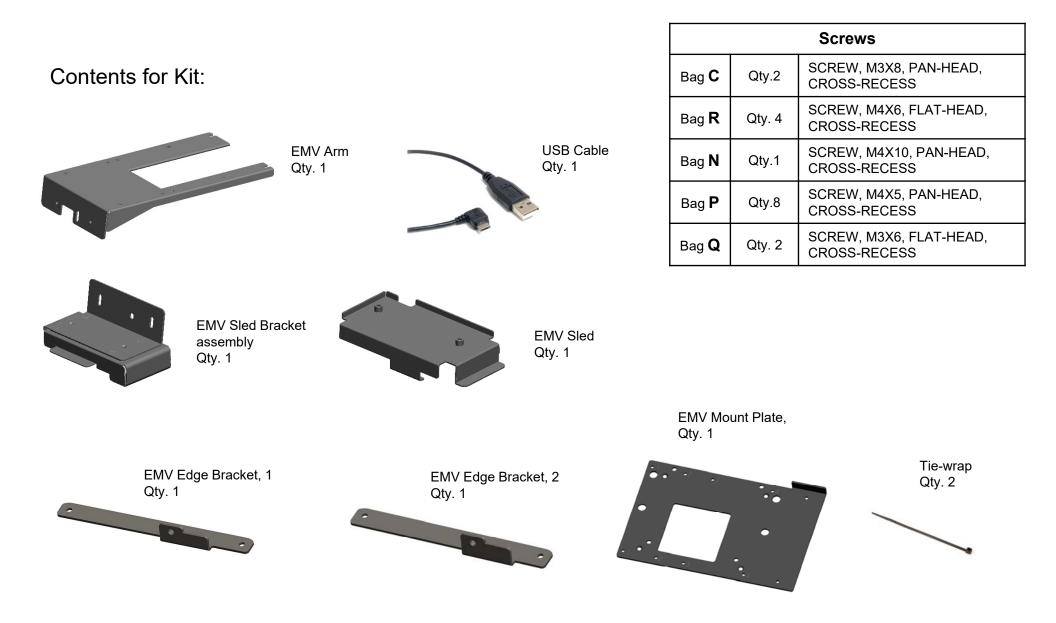

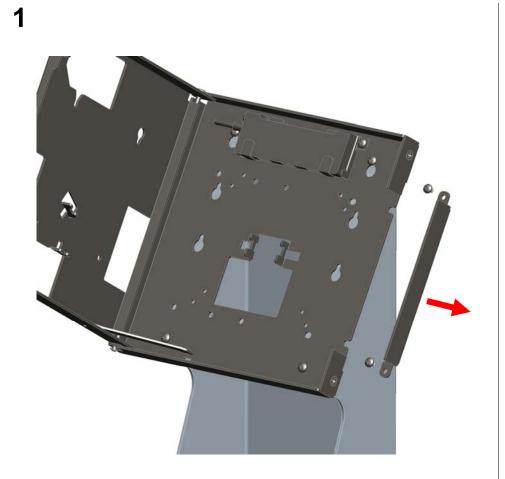


2

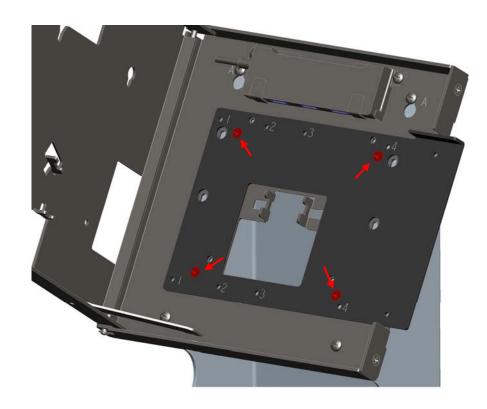


Remove Fill Plate on Display Bracket.

Add the EMV Mount Plate to the Display Bracket using (4) screws from bag "R".

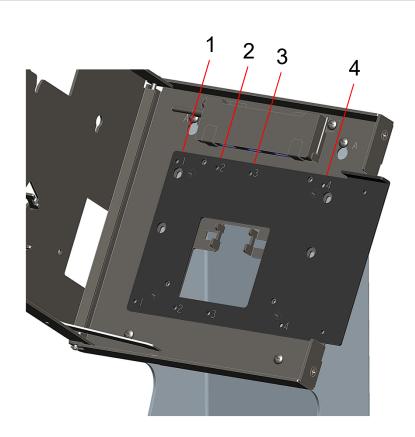

Add (2) screws to EMV Mount Plate from bag "P" at position 1, 2,3 or 4. Leave ~3mm (1/8") gap (for EMV Arm).

Position "1" for 15" in portrait. Position "2" for 22" in portrait.. Position "3" for 15" in landscape. Position "4" for 22" in landscape.

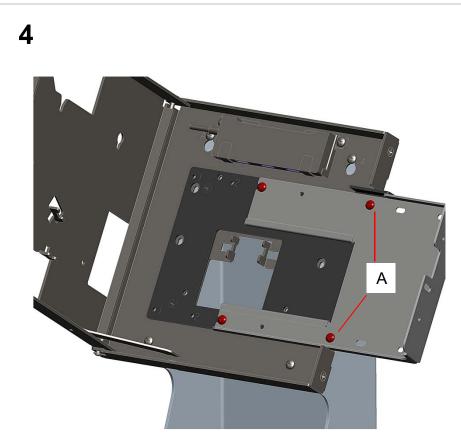


Assemble EMV Arm to Display Bracket. Add (2) screws from bag "P" at right most position "A" to secure EMV Arm to Display Bracket.



5

Slide RP757 onto sled.

6

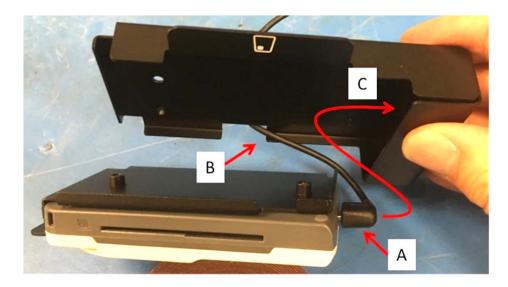


Add USB cable to RP757 (A), insert RP757 + sled into sled bracket (C) shown. Make sure cable exits through slot (B) when assembled.



7

Secure sled to sled bracket using (2) screws from bag "Q".

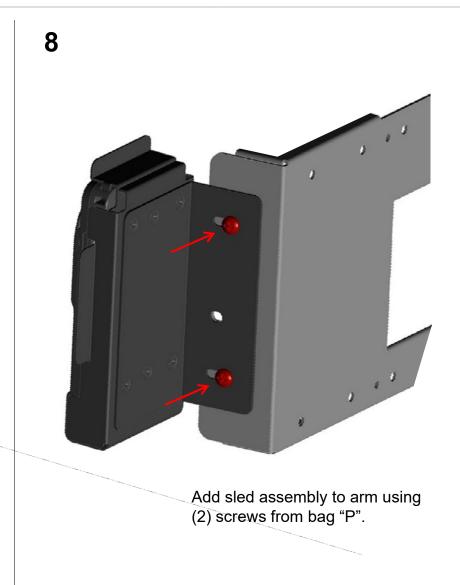



Return to Wallaby assembly guide to complete installation

For more information, go to <u>www.elotouch.com/support</u>, or call the office nearest you.

Elo reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products. Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc. All other trademarks are the property of their respective owners.

© 2019 Elo Touch Solutions, Inc. All rights reserved.