

# PRIMERGY TX100 S3p

## System configurator and order-information guide

**June 2014** 

## **Contents**

Instructions

Configuration diagram

Configurator

0 System software

- I Basic unit
- II Processor
- III Memory
- IV Graphics
- V Accessible drives
- VI RAID Controller
- VII Hard disk drives
- VIII Communikation/Network
- IX Miscellaneous
- X Country specific power cords

Change report



**PRIMERGY Server** 

## Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

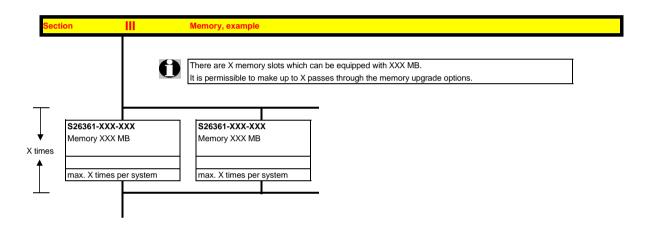

In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information.



#### For further information see:


http://ts.fujitsu.com/products/standard\_servers/index.html (internet)

https://partners.ts.fujitsu.com/com/com/corder-supply/configurators/primergy\_config/current/Pages/default.aspx (6

(extranet)

Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted

## Configuration diagram PRIMERGY TX100 S3p

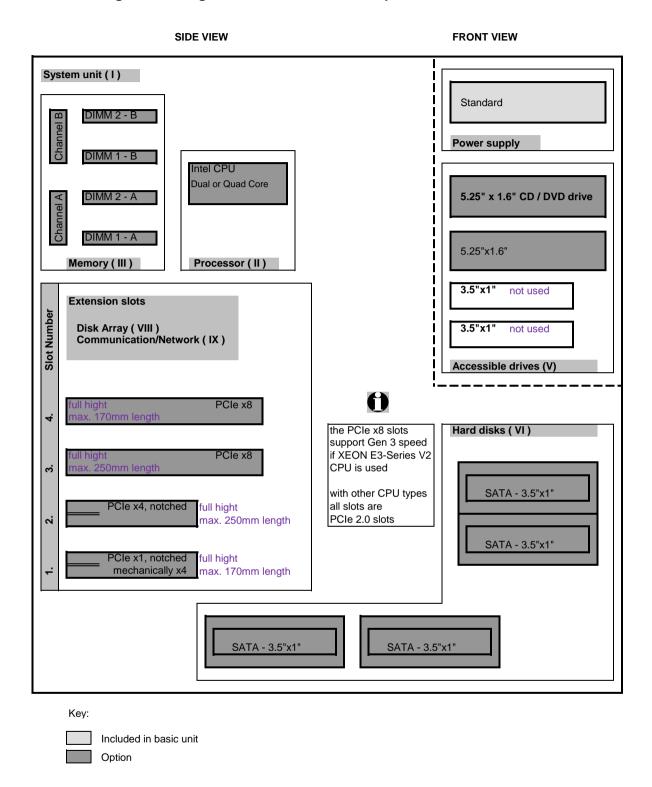

#### Start PRIMERGY TX100 S3p

Section

Basic unit



#### System unit consisting of:

- \* Housing including standard power supply (no redundancy)
- \* Imprint of MAC Adress on system label and delivery note as standard
- \* heat sink for CPU

#### Systemboard with:

- \* 4 PCI expansion slots:
  - 1x PCle x1, mechanically x4, notched (possible to plug x16 cards)
  - 1x PCle x4, notched; fits for lp (low profile) and fh (full high) formfactor cards
  - 2x PCle x8
  - all slots are PCle 2.0 slots; PCle 1.0 cards are fully supported as well
- \* Slot for optional TPM module
- 4 memory slots for up to 32GB (1066MHz PC3 8500 / 1333MHz PC3 10600) unbuffered DDR III RAM (ECC) max. 8GB modul per slot
- \* 2 bays 5.25" for accessible drives
- \* 4 LFF (3.5" Large Form Factor) bays 1" high for no hot plug SATA HD
- \* SATA controller with up to 4 HDD's using Intel C202 Chipset
- \* ATI ES1000 64MB
  - 1600 x 1200 pixel with 16 bit colours and 75 Hz
  - 1280 x 1024 pixel with 16/32 bit colours and 120/75 Hz
  - 1152 x 864 pixel with 16/32 bit colours and 160/100Hz
  - 1024 x 768 pixel with 16/32 bit colours and 200/120Hz
  - 800 x 600 and 640 x 480 pixel with 32 bit colours and 200Hz
- \* Intel 10/100/1000 Mb/s ("Lewisville" 82579LM) on-board LAN
- \* Intel 10/100/1000 Mb/s ("Hartwell" 82574L) on-board LAN supporting WoL, PXE and iSCSI boot

#### Cables included in Base Unit:

- 1. SATA cabel for CD/DVD
- 2. 4 x SATA cabel in basic unit (depends on base unit)

ServerView Suite Software package incl. ServerStart, ServerBooks, Management Software and Updates

#### External Interfaces:


1x RS-232-C (serial, 9 pins)


1x VGA (15 pins)


10x USB 2.0 ( 2x frontside, 4x rearside, 2x internal for backup devices, 1x internal USB Stick, 1x internal USSD / UFM)


2x LAN RJ45


Α

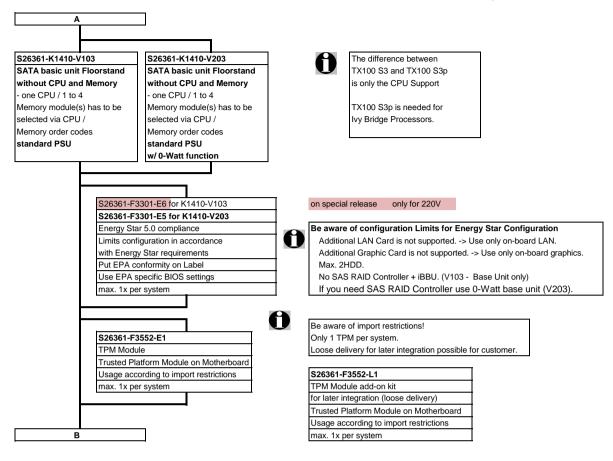


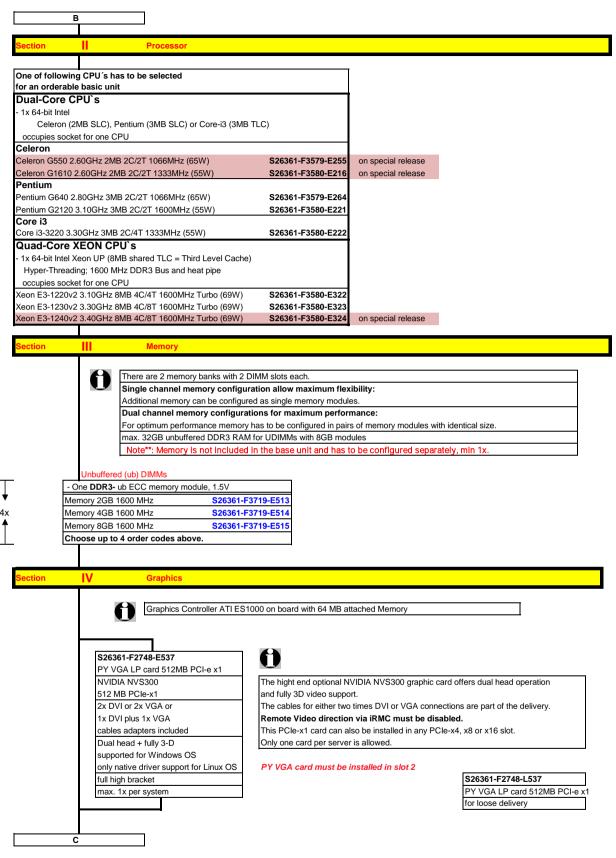


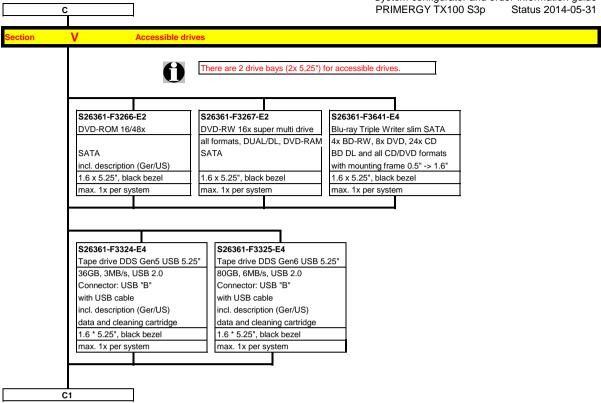

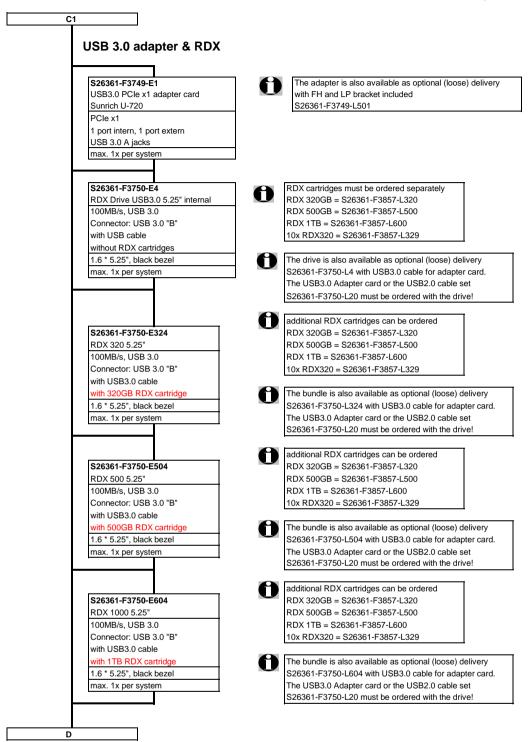

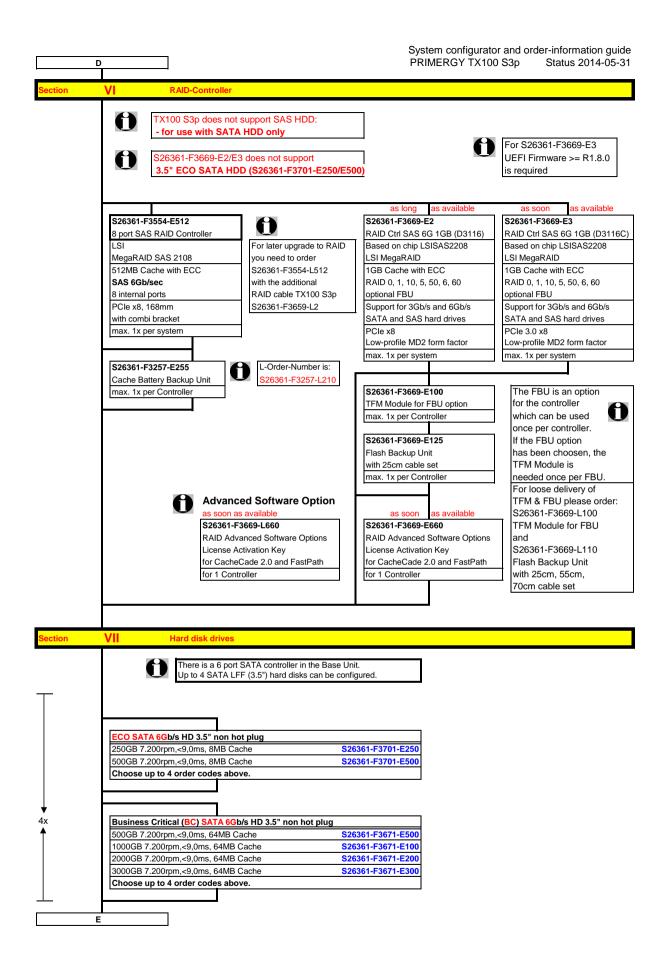

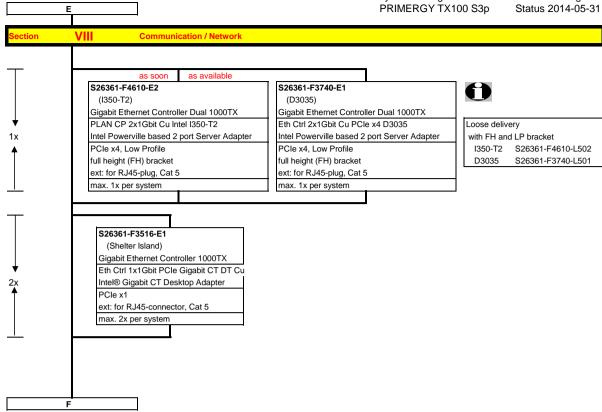

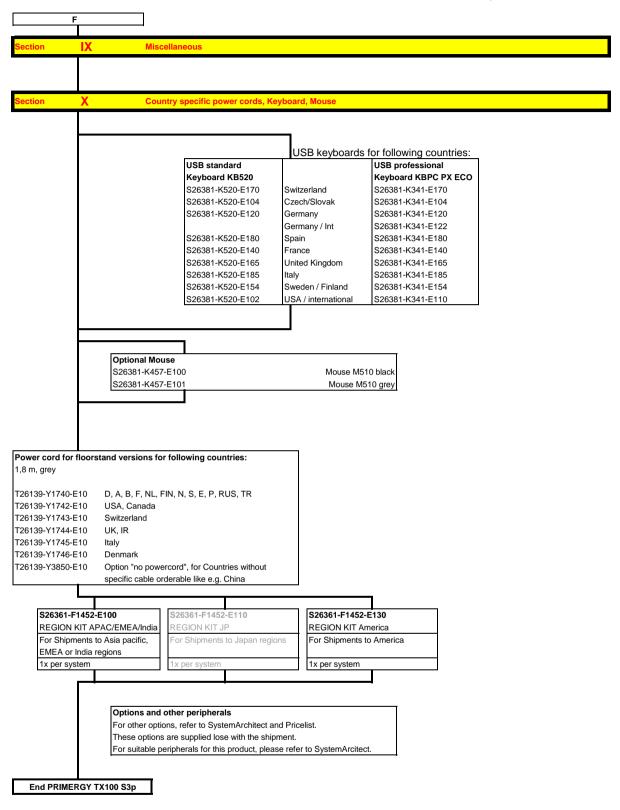

## **Change Report**

Date	Order number	Changes
2013-10-18	Optional USB Comps	no longer available
2013-05-21	S26361-F3671-E*	HDD description updated.
2013-05-21		Restriction for 3.5" ECO SATA HDD with RAID Ctrl SAS added.
2013-03-25	S26361-F3669-E660/L660	RAID advanced SW options added
2013-03-25	S26361-F3669-E3	RAID Ctrl SAS 6G 1GB (D3116C) added
2013-03-25	S26361-F3857-E4	removed due to EOL
2013-03-14	S26361-F3750-E324/504/E604	RDX & Cartridge bundles added
2013-02-15	S26361-F3580-E2xx	Added Celeron/Pentium Processor
2013-01-14	S26361-F3750-L20	Hint for "RDX Drive USB2.0 cable set" added
2012-12-07		new keyboard numbers introduced
2012-12-07		new mouse numbers introduced
2012-11-22	F3749-E4 and F3750-E4	"as soon as available" removed
2012-11-22	S26361-F3857-E4	"as long as available" added
2012-10-08	S26361-F3749-Exx	Added RDX Drive
2012-10-08	S26361-F3750-Ex	Added USB3.0 Adapter
2012-08-24	S26361-F3669-E2	Cougar3 order number changed from E1 to E2
2012-07-16	S26361-F3857-L160/L169	RDX Cartridge 160GB is EOL => removed
2012-04-27		Removed Core Edition Variants
2012-04-02	S26361-F3579-E264	Added new Pentium and Celeron CPU
2012-03-30		First Release
1		