

PRIMERGY TX120 S3

System configurator and order-information guide

November 2012

Contents

Instructions

Configuration diagram

Configurator

Software Configurator EM64T

- I Basic unit
- II Processor
- III Memory
- **IV** Graphics
- V Accessible drives
- VI Hard disk drives
- VII SAS-Controller
- VIII Disk array
- IX Communication/Network
- X Energy Star restrictions
- XI System management options
- XII Miscellaneous
- XIII Country specific power cords

Change report



PRIMERGY Server

Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

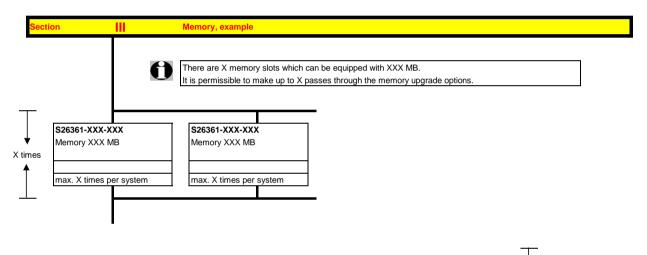

In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information. $\label{eq:please} % \begin{center} \beg$




For further information see:

http://ts.fujitsu.com/products/standard_servers/inc (internet)

 $\underline{\text{https://partners.ts.fujitsu.com/com/order-supply/configurators/primergy_config/current/Pages/default.aspx} \ \textbf{(extranet)}$

Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted

Configuration diagram PRIMERGY TX120 S3

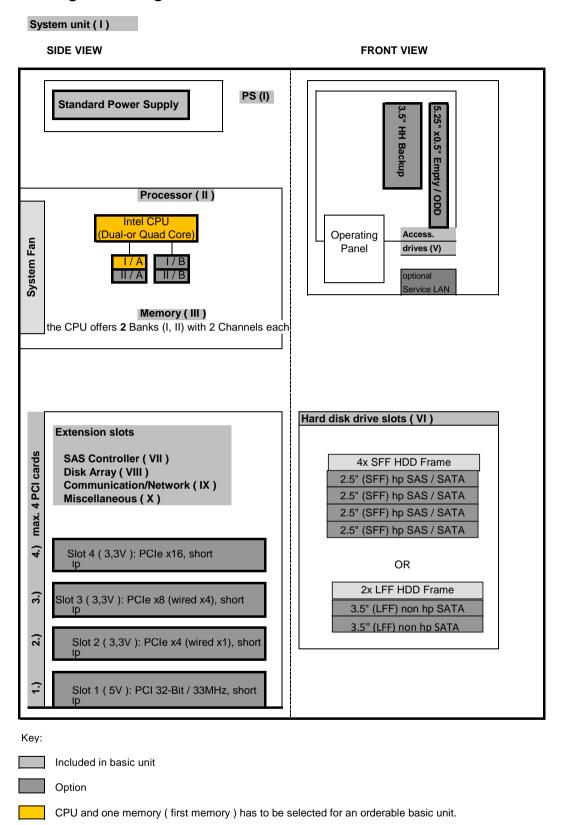

Section

Basic unit

System unit Floorstand including:

* Two lockable front covers

Door #1 for accessible drive bays

Door #2 for hot plug HDD bays (Type 1 base unit only)

Both doors may be locked or door #1 may be left open while door #2 is still locked

* HD type depending on base unit:

Type 1: 4x hot plug SFF (2.5") SAS or SATA HDD (SFF base units only)

Type 2: 2x non hot plug LFF (3.5") SATA HDD (LFF base units only)

- * 1 power supply (Standard PSU with 250W) with 0-Watt Option
- * Two System fans (No Hot-plug, No redundancy)
- * 1 bay 5.25" for accessible drives (slim line)
- * 1 bay 3.5" (HH) for accessible drives (DDS or RDX)

Systemboard D3049 with:

- * heat pipe for the CPU
- * Chipset Intel® C202 (codenamed Bromolow Cougar Point Essential)
- * 4 PCI slots: 1 x PCle x16 Gen2 (Ip)
 - 1 x PCle x4 (x8 connected) Gen2 (lp)
 - 1 x PCle x1 (x4 connected) Gen2 (lp)
 - 1 x 32Bit / PCI 33MHz-5V, (Ip)
- * 4 memory slots for max. 32GB with 4x 8GB unbuffered DDR3 RAM
- Memory is divided into 4 DIMMs (2 channels with 2 slots per channel)
- First Memory (one module) has to be selected for an orderable basic unit
- Memory upgrade is possible module wise
- SDDC (Chipkill) is not supported
- * SATA-Controller on board (supporting RAID 0/1)
- 2x1 Gbit Ethernet LAN on board (Intel Hartwell and Intel Lewisville) with ToE;

and iSCSI boot integrated in System BIOS as selectable option

* iRMC S3 (integrated Remote Management Controller) on-board server management controller with dedicated 10/100/1000 Service LAN-port and

integrated graphics controller (max. Resolution: 1600 x 1200 at 16 bpp)

Interfaces:


- * 1x RS-232-C (9-pin) (usable for BMC or OS or shared)
- * 1x VGA (15 pin
- * 10x USB **2.0** (UHCI) with **480MBit/s** (6x external at the rear, 2x external at the frontside,

2x internal USB Interfaces for backup devices, uSSD and internal memory stick, no USB wakeup)


* 3x LAN RJ45 including 1x maintanence-LAN RJ45 switchable (iRMC)


*internal Cables:


- 1. SATA cable for BD/DVD.
- 2. HDD Backplane cable (Type 1 base unit only) or SATA cable for up to 2 HDDs (Type 2 base unit only)
- * ServerView Suite Software package incl. ServerStart, ServerBooks, Management Software and Updates
- * Documentation engl. (multilingual on CD)

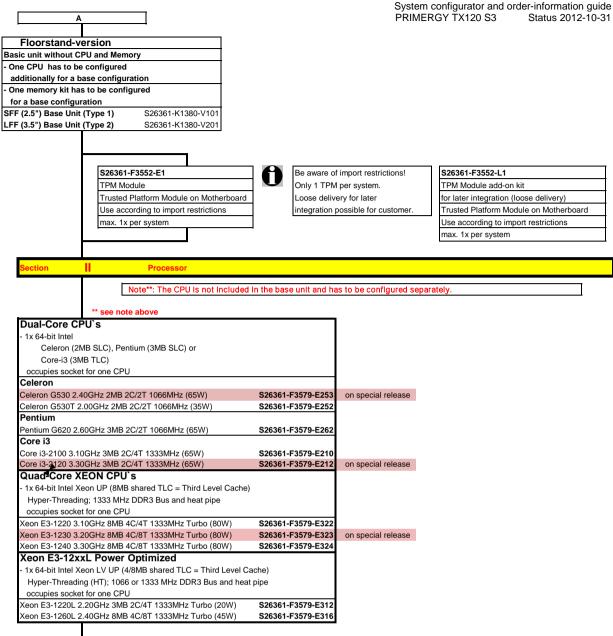



В

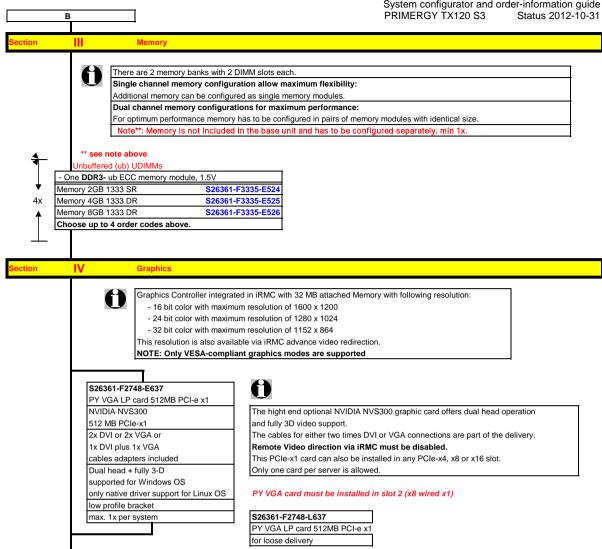


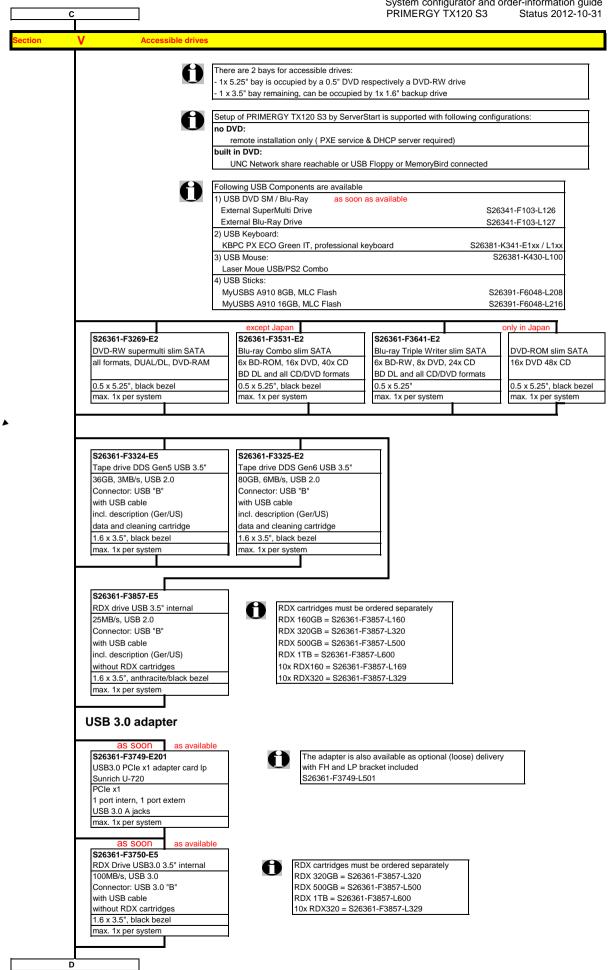


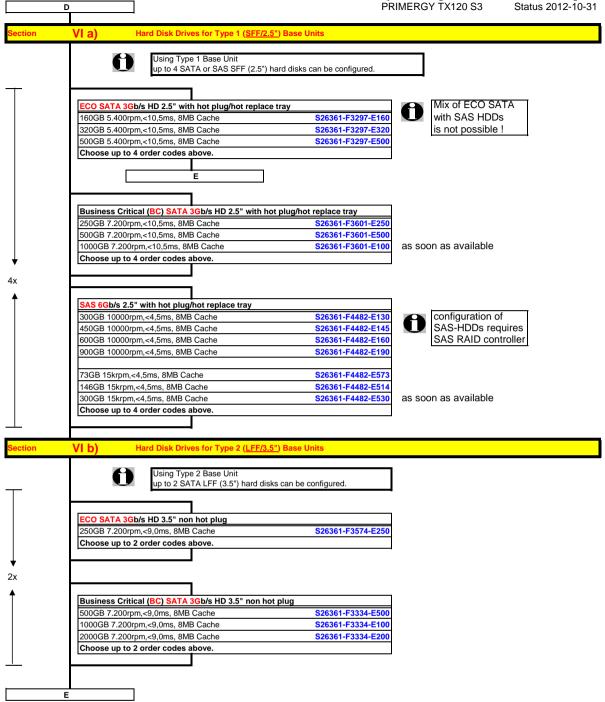

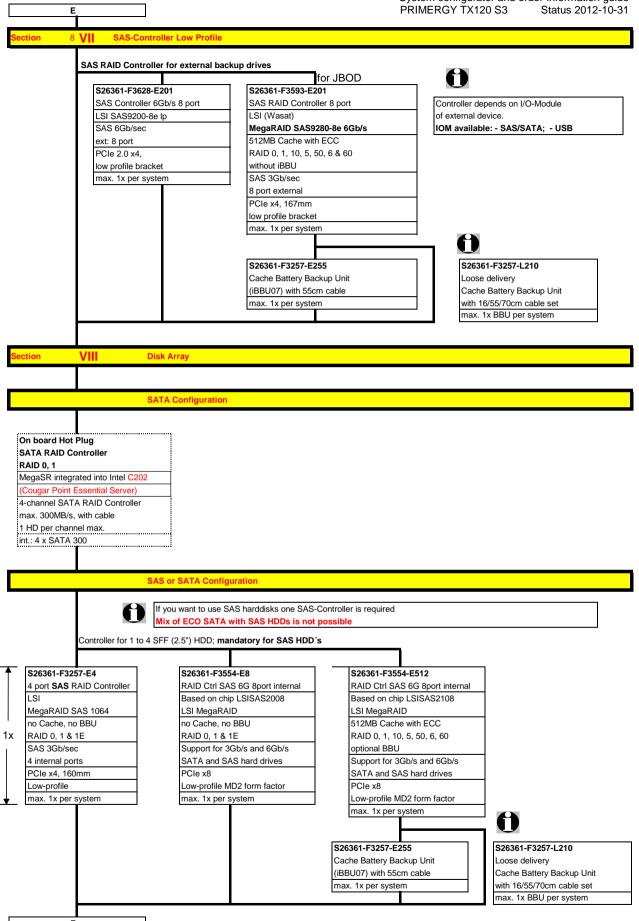

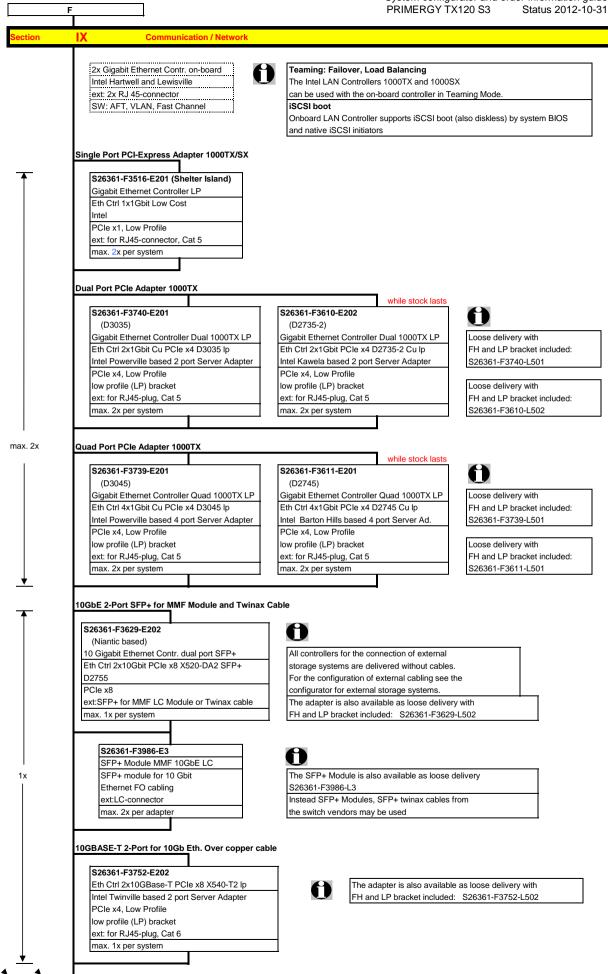

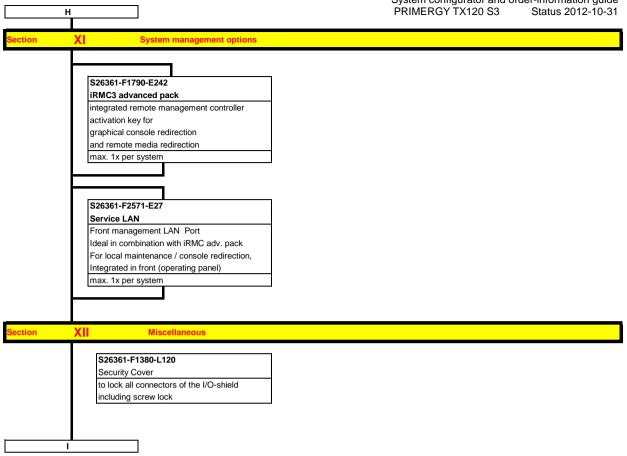

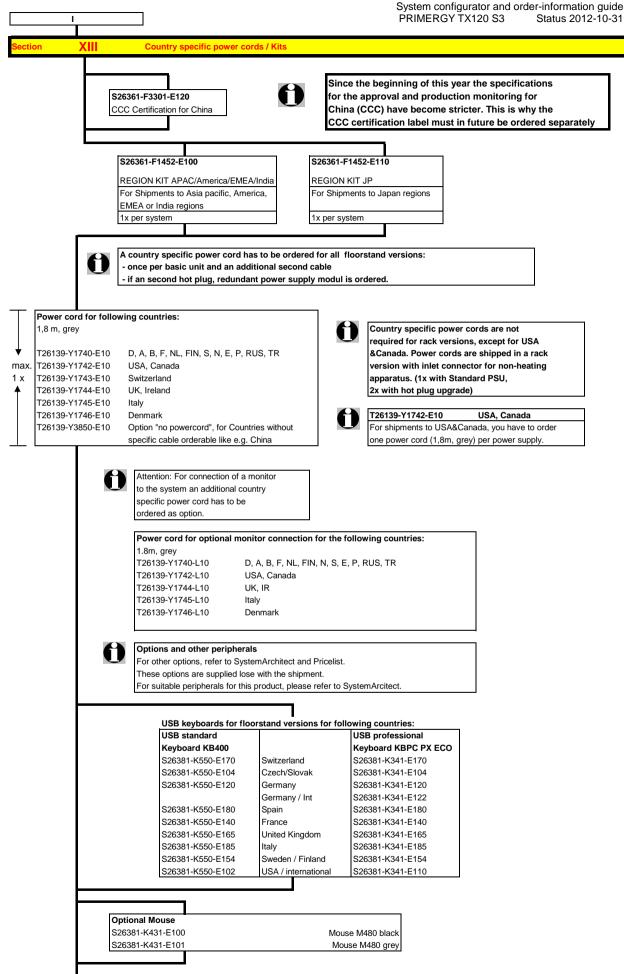

End PRIMERGY TX120 S3

Change Report

Date	Order number	Changes
2012-10-08	S26361-F3749-Exx	Added RDX Drive
2012-10-08	S26361-F3750-Ex	Added USB3.0 Adapter
2012-01-30	S26361-F3641-E2	new Blue-ray Triple Writer added
2011-12-21	S26361-F4482-E114	SAS HD 6G 144GB - no longer available
2011-10-01	S26361-F3601-E250	new BC SATA HD - now available
2011-08-09		Celeron CPUs with FCS in September 2011 added
2011-07-11	S26361-F1452-E100	Region kit integrated
2011-06-01		First Release