

# PRIMERGY TX1310 M1

## System configurator and order-information guide

## **April 2017**

#### **Contents**

Instructions

Configuration diagram

Configurator

- 0 System software
- I Basic unit
- II Processor
- **III** Memory
- **IV** Graphics
- V Accessible drives
- VI RAID Controller
- VII Hard disk drives
- VIII Communikation/Network
- IX Miscellaneous
- X Country specific power cords

Change report



**PRIMERGY Server** 

#### Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

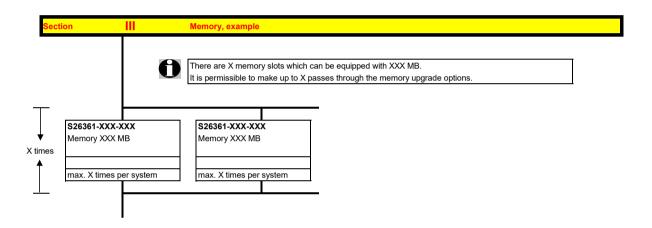

In one chapter you can only select as many components (here 4x) as the arrow indicates.



 $\label{thm:please} \mbox{ Please note that there are information symbols which indicate necessary information.}$ 



#### For further information see:


http://ts.fujitsu.com/products/standard\_servers/index.html (internet)

https://partners.ts.fujitsu.com/com/order-supply/configurators/primergy\_config/Pages/default.aspx

(extranet)


Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted


#### **Configuration diagram PRIMERGY TX1310 M1**

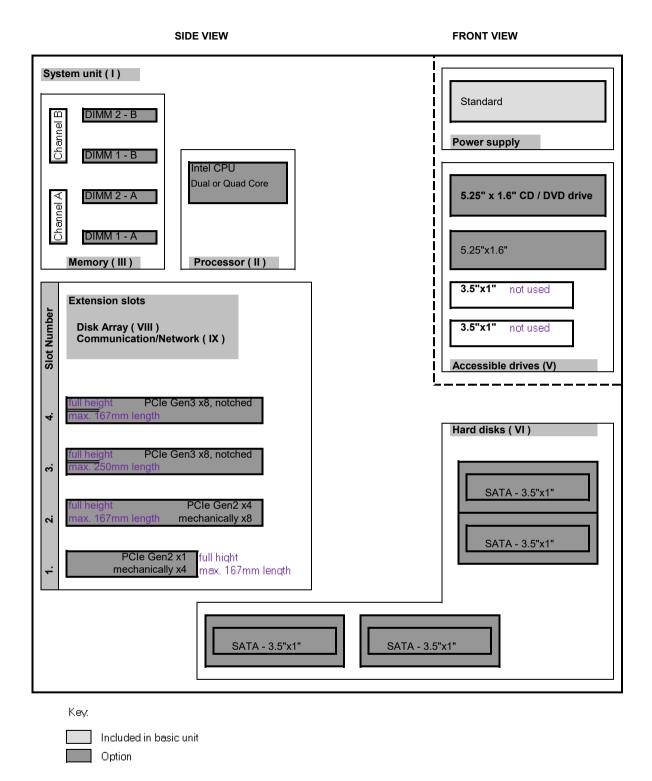



#### Start PRIMERGY TX1310 M1 Basic unit System unit consisting of: Housing including standard power supply (no redundancy) Imprint of MAC Adress on system label and delivery note as standard heat sink for CPU Systemboard with: \* 4 PCI expansion slots: 1x PCle Gen2 x1, mechanically x4 (not available for S26361-K1488-V201 base unit) (not available for S26361-K1488-V201 base unit) 1x PCle Gen2 x4, mechanically x8 2x PCle Gen3 x8, notched (possible to plug x16 cards) Slot for optional TPM module 4 memory slots for up to 32GB (1600MHz PC3 12800) unbuffered DDR III RAM (ECC) max. 8GB modul per slot (2 memory slots for S26361-K1488-V201 base unit) 2 bays 5.25" for accessible drives 4 LFF (3.5" Large Form Factor) bays 1" high for no hot plug SATA HD SATA controller with up to 4 HDD's using Intel C226 Chipset Intel CPU internal Graphics Controller (pGFX) with shared Memory 1600 x 1200 pixel with 16 bit colours and 75 Hz 1280 x 1024 pixel with 16/32 bit colours and 120/75 Hz 1152 x 864 pixel with 16/32 bit colours and 160/100Hz 1024 x 768 pixel with 16/32 bit colours and 200/120Hz 800 x 600 and 640 x 480 pixel with 32 bit colours and 200Hz Intel 10/100/1000 Mb/s ("Clarkville" Intel i217LM) on-board LAN supporting WoL and PXE Intel 10/100/1000 Mb/s ("Springville" Intel i210) on-board LAN supporting WoL, PXE and iSCSI boot Cables included in Base Unit: 1. SATA cabel for CD/DVD 2. 4 x SATA cabel in basic unit ServerView Suite Software package incl. ServerView Installation Manager, Management Software and Updates External Interfaces: 1x RS-232-C (serial, 9 pins) 1x VGA (15 pins) 1xUSB3.0 Intern (Type A) for backup devices or USB Stick 4x USB 3.0 (2x frontside, 2x rearside) 5x USB 2.0 (4x rearside, 1x internal USSD / UFM) 2x LAN RJ45 S26361-K1488-V101 S26361-K1488-V201 S26361-K1488-V902 SATA basic unit Floorstand SATA basic unit Floorstand SATA basic unit Floorstand without CPU and Memory without CPU and Memory without CPU and Memory one CPU / 1 to 2 Memory module(s) one CPU / 1 to 4 Memory module(s) one CPU / 1 to 4 Memory module(s) has to be selected via has to be selected via has to be selected via CPU / Memory order codes CPU / Memory order codes CPU / Memory order codes Standard PSU Standard PSU Standard PSU SX131 M1 - Universal Storage Server **Essential Edition** Be aware of import restrictions! S26361-F3552-E1 Only 1 TPM per system. TPM Module Loose delivery for later integration possible for customer. Trusted Platform Module on Motherboard Usage according to import restrictions S26361-F3552-L1 TPM Module add-on kit max. 1x per system for later integration (loose delivery) Trusted Platform Module on Motherboard Usage according to import restrictions


max. 1x per system

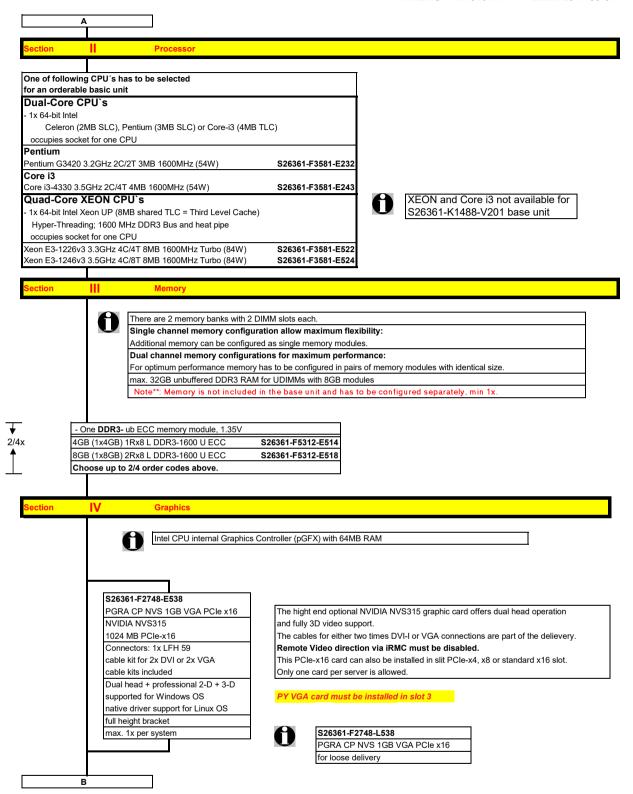

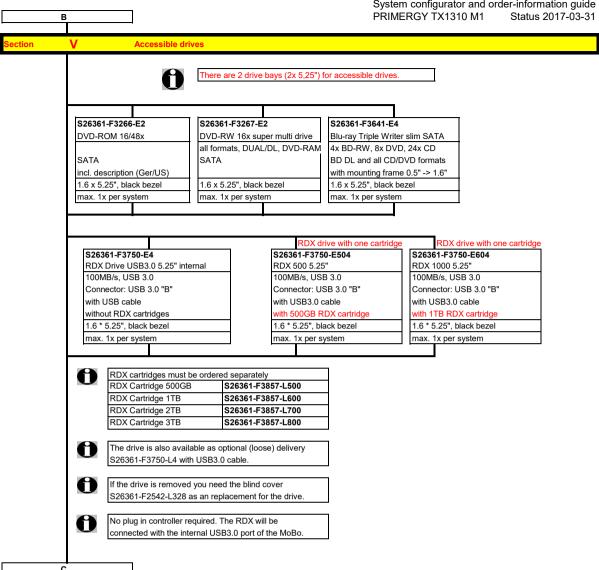

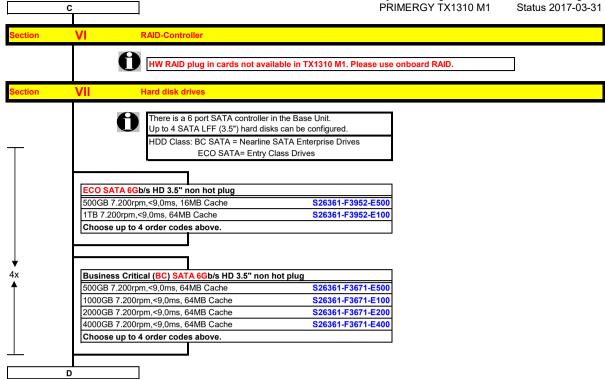

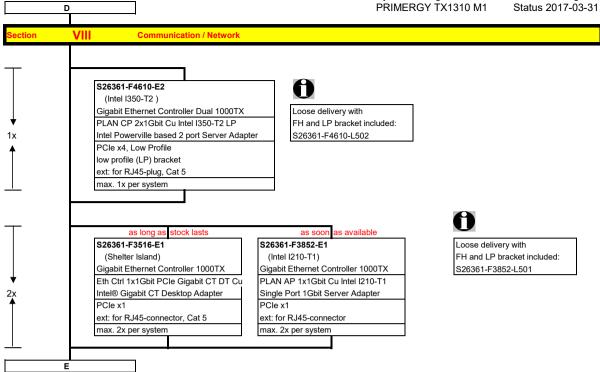

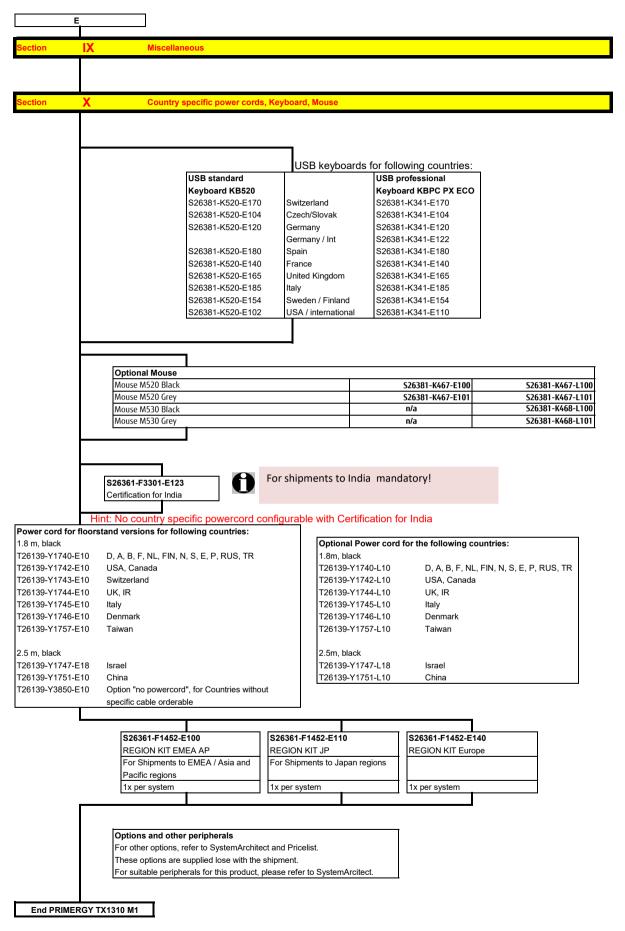

### **Change Report**

Date	Order number	Changes
	S26361-F3581-E182	CPU removed (EOL)
2017-02-01	S26361-F3857-L800	added 3TB cartrige, removed 320GB cartrige
2016-12-22	HDDs	S26361-F3671-E300/S26361-F3905-E600 removed
2016-12-13	T26139-Y1747-E18/L18	added power cord for Israel
2016-12-08	S26361-F3701-E500	removed (EoL)
2016-12-08	S26361-F3952-E500	added
2016-07-12	S26361-F3952-E100	now available
2016-06-06	S26361-F3701-E250/L250	removed (EoL)
2016-04-05	T26139-Y1757-E10	added power cord for Taiwan
2016-03-21	S26361-F1452-E140	added region kit Europe
2016-03-21	S26381-K468-L100	Added M530 mouse black
2016-03-14	T26139-Y1742-E10	changed color to black
	S26361-F3952-E100	Added 3.5" ECO SATA HDD 1TB
2015-12-10	USB accessories	S26381-K457-E101/*-L101 mouse option removed (EOL)
2015-10-14	USB accessories	Update of order codes for successor mouse models
2015-07-20	S26361-F2748-E537	NVS300 EOL and deleted, successor NVS315 available
2015-06-11	T26139-Y1751-E10	country specific power codes updated and optional power cords added
	S26361-K1488-V902	Base Unit for SX131 M1 - Universal Storage Server added
2015-02-17	S26361-F3905-E600	6TB SATA 6G 7.2Krpm 512e HDD added
2014-12-15	S26361-F2748-E538	PGRA CP NVS 1GB VGA PCle x16 added plus EOL dates for predessesor / first delivery
2014-10-09	S26361-F3852-E1	added new Single Port 1Gbit NIC
2014-07-24		SW-Pages and external USB devices removed from configurator
2014-06-30	S26361-F3301-E123	Added certification for India
2014-05-15		added Infoboxes for RDX
2014-03-31		First Release