

Hardware connection

First of all, connect battery to DC INPUT, and turn on Main switch to start up inverter.




Software updates

Open the InfiniVMasterCPU_Reflash




Update the software


- 1、 showed in the picture, Choose the corresponding COM, Click “update”。

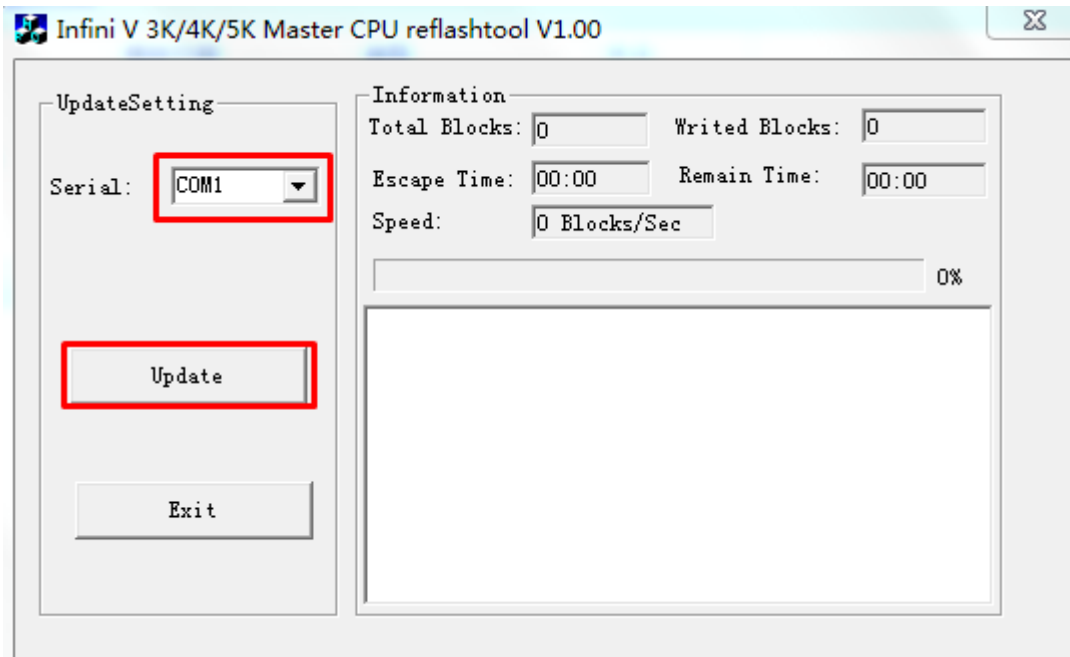


2、 The following window will pop up after clicking the Updata, click "yes"

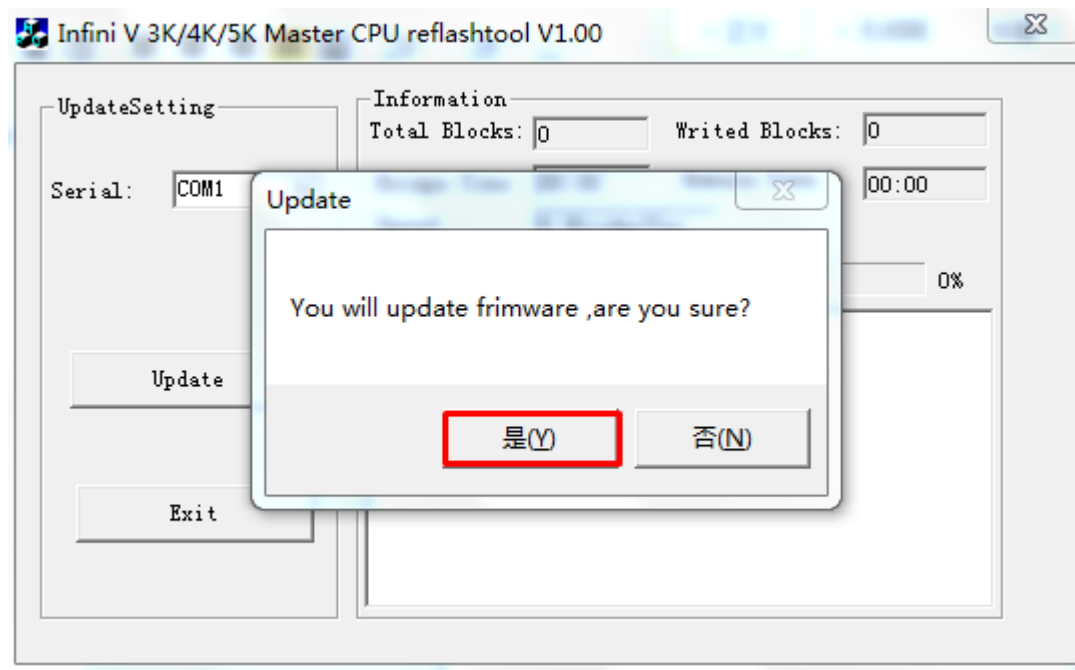

3、 A moment later, began to update the program as shown in the figure below

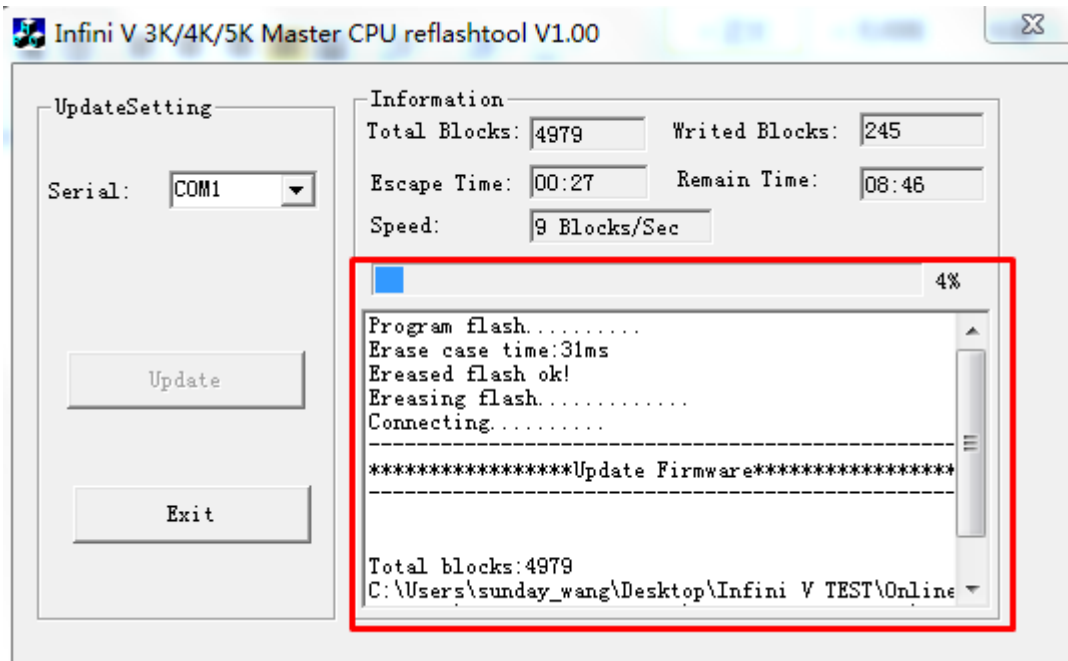

- 4、 Click "ok" below if upgrade is complete, Master CPU update is complete. If Slave CPU is also needed to upgrade, please open Slave upgrade package.

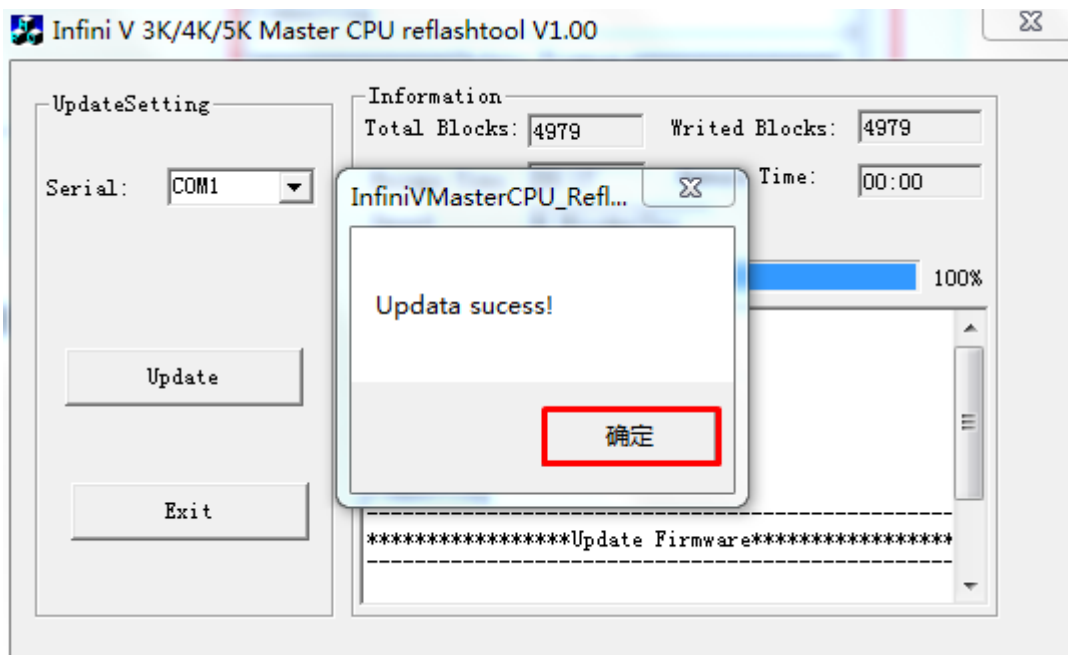

UpdateSetting

Serial: COM1

Update

 
Exit

Information

Total Blocks: 4979 Writed Blocks: 4979

Escape Time: 09:17 Remain Time: 00:00

Speed: 8 Blocks/Sec



```
Reflash case time:557952ms
Verify flash data ok!
Verify flash data.....
Program flash.....
Erase case time:31ms
Ereased flash ok!
Ereasing flash.....
Connecting.....
-----
*****Update Firmware*****
-----
```