

SwitchBlade x8106

Layer 3+ Chassis Switch

AT-SBx81CFC400

Controller Fabric Card (AlliedWare Plus v5.4.5-1)

AT-SBx8106 Chassis

AT-SBx81GT24 Ethernet Line Card

AT-SBx81GT40 Ethernet Line Card


AT-SBx81GP24 Ethernet PoE Line Card

AT-SBx81GS24a Ethernet SFP Line Card

AT-SBx81XS6 Ethernet SFP+ Line Card

AT-SBxPWRSYS1 and AT-SBxPWRSYS2 System Power Supplies

AT-SBxPWRPOE1 PoE Power Supply

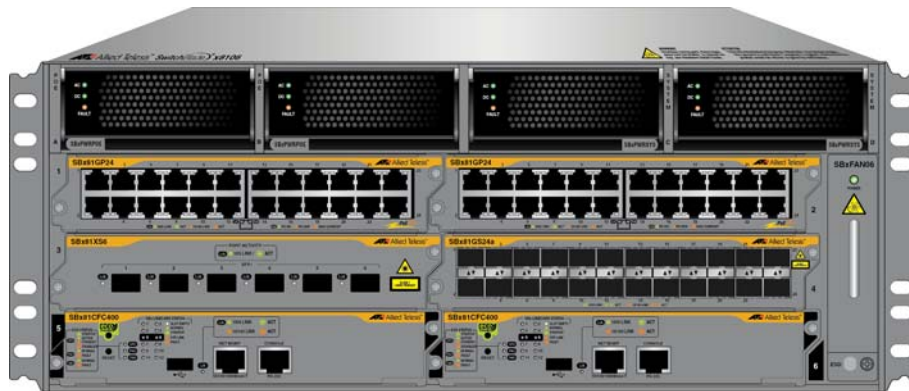

Installation Guide

Copyright © 2015 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis and the Allied Telesis logo are trademarks of Allied Telesis, Incorporated. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Electrical Safety and Emissions Standards

This product meets the following standards

U.S. Federal Communications Commission

Radiated Energy

Note: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Note: Modifications or changes not expressly approved of by the manufacturer or the FCC, can void your right to operate this equipment.

Industry Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

European Union Restriction of the Use of Certain Hazardous Substances (RoHS) in Electrical and Electronic Equipment

This Allied Telesis RoHS-compliant product conforms to the European Union Restriction of the Use of Certain Hazardous Substances (RoHS) in Electrical and Electronic Equipment. Allied Telesis ensures RoHS conformance by requiring supplier Declarations of Conformity, monitoring incoming materials, and maintaining manufacturing process controls.

EMI/RFI Emissions: FCC Class A, EN55022 Class A, EN61000-3-2, EN61000-3-3, CISPR Class A, VCCI Class A, AS/NZS Class A

Warning: In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Immunity: EN55024

Electrical Safety: EN60950-1 (TUV), UL 60950-1 (cUL_{US}), EN60825


Safety Agency Approvals: cUL_{US}, TUV, C-TICK, CE



Laser Safety

EN60825

Translated Safety Statements

Important: The  indicates that a translation of the safety statement is available in a PDF document titled “Translated Safety Statements” on our web site at <http://www.alliedtelesis.com/support>.

Contents

Preface	15
Safety Symbols Used in this Document	16
Contacting Allied Telesis	17
Chapter 1: Chassis and Power Supplies	19
AT-SBx8106 Chassis	20
Slots for the Ethernet Line and Controller Cards	23
Power Supplies and Power Supply Slots	24
LEDs	26
AT-SBxFAN06 Module	29
LED	29
Power Supply Interfaces (Opto-couplers)	30
LED	30
Chapter 2: Ethernet Line Cards	33
Ethernet Line Cards	34
AT-SBx81GT24 Line Card	35
LEDs	35
AT-SBx81GT40 Line Card	37
LEDs	38
AT-SBx81GP24 PoE Line Card	40
LEDs	41
AT-SBx81GS24a SFP Line Card	43
LEDs	43
AT-SBx81XS6 SFP+ Line Card	45
LEDs	45
10/100/1000Base-T Twisted Pair Ports	47
Connector Type	47
Speed	47
Duplex Mode	47
Maximum Distance	48
Cable Requirements	48
Automatic MDIX Detection	49
Port Pinouts	49
Power over Ethernet on the AT-SBx81GP24 Line Card	50
Powered Device Classes	50
Power Budget	51
PoE Wiring	51
Chapter 3: AT-SBx81CFC400 Controller Fabric Card	53
Controller Fabric Cards for the AT-SBx8106 Chassis	54
Hardware Components of the AT-SBx81CFC400 Card	56
Guidelines	58
Dual Controller Cards	60
SYS Status LEDs	62
eco-friendly Button	64

SBx Linecard Status LEDs.....	65
Console (RS-232) Port.....	66
Ethernet Management Port (NET MGMT)	67
NET MGMT LED	67
USB Port	69
Reset Button	70
AlliedWare Plus Software Releases for the Hardware Components	72
Chapter 4: Safety Precautions and Site Requirements	73
Reviewing Safety Precautions	74
Selecting a Site for the SwitchBlade x8112	78
Installation Tools and Material	80
Chapter 5: Installing the Chassis in an Equipment Rack	81
Required Tools and Material	82
Preparing the Equipment Rack	83
Unpacking the AT-SBx8106 Chassis	86
Removing the Rubber Feet	88
Adjusting the Equipment Rack Brackets	90
Installing the Chassis in the Equipment Rack	92
Removing the Shipping Brace	96
Installing the Chassis Grounding Wire	97
Chapter 6: Installing the Power Supplies	99
Protecting Against Electrostatic Discharge (ESD)	100
Installing AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies	101
Installing AT-SBxPWRPOE1 PoE Power Supplies	107
Installing AT-SBxPWRSYS1 DC System Power Supplies	112
Chapter 7: Installing the AT-SBx81CFC400 Controller and Ethernet Line Cards	119
Guidelines to Handling the Controller and Line Cards	120
Installing the AT-SBx81CFC400 Controller Fabric Card	122
Installing the Ethernet Line Cards	128
Installing the Blank Slot Covers	132
Chapter 8: Installing the Transceivers and Cabling the Ports	135
Cabling Guidelines for the Twisted Pair Ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards	136
Connecting Cables to the AT-SBx81GT40 Line Card	137
Guidelines to Installing SFP and SFP+ Transceivers	139
Installing SFP Transceivers in the AT-SBx81GS24a Line Card	140
Installing SFP+ Transceivers in the AT-SBx81XS6 Line Card	144
Installing AT-SP10TW Cables in the AT-SBx81XS6 Line Card	148
Cabling the NET MGMT Port on the AT-SBx81CFC400 Card	150
Chapter 9: Powering On the Chassis	153
Verifying the Installation	154
Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply	155
Powering On the AT-SBxPWRPOE1 Power Supply	158
Powering On the AT-SBxPWRSYS1 DC System Power Supply	161
Choosing a Method for Attaching the Grounding Wire	163
Connecting the Grounding Wire with the Grounding Terminal	163
Connecting the Grounding Wire with Bare Wire	166
Choosing a Method for Attaching the Power Wires	168
Connecting the DC Power Wires with the Straight Terminals	168
Connecting the DC Power Wires with the Right Angle Terminals	177
Connecting Bare DC Power Wires	183
Monitoring the Initialization Process	187

Using the LEDs to Monitor the Initialization Process	187
Using the Console Port to Monitor the Initialization Process	187
Chapter 10: Verifying the Hardware Operations of the Chassis	191
Using the LEDs to Verify the Chassis.....	192
Using Local Management to Verify the Chassis.....	194
Starting a Local Management Session	194
Entering the AlliedWare Plus Operating System Commands	195
Chapter 11: Troubleshooting	197
AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies	198
AT-SBxPWRSYS1 DC System Power Supply	200
Ethernet Line Cards.....	202
Twisted Pair Ports	203
Power Over Ethernet.....	205
Fiber Optic Transceivers	207
AT-SBx81CFC400 Controller Fabric Card	208
AT-SBxFAN06 Fan Module	209
Local (Console) Management Session.....	210
Power Supply Interfaces (Opto-couplers).....	211
Chapter 12: Replacing Modules	213
Replacing AT-SBxPWRSYS1, AT-SBxPWRSYS2, or AT-SBxPWRPOE1 Power Supplies	214
Replacing the AT-SBxPWRSYS1 DC Power Supply	220
Replacing Ethernet Line Cards.....	231
Replacing the AT-SBx81CFC400 Controller Fabric Card	233
Replacing the AT-SBxFAN06 Fan Module	235
Removing the AT-SBxFAN06 Fan Module	235
Installing a New AT-SBxFAN06 Fan Module	238
Appendix A: Technical Specifications	241
Physical Specifications	241
Environmental Specifications	243
Power Specifications	244
Safety and Electromagnetic Emissions Certifications	246
Port Pinouts	247

Figures

Figure 1: AT-SBx8106 Chassis	20
Figure 2: Front View of the AT-SBx8106 Chassis	21
Figure 3: Rear View of the AT-SBx8106 Chassis	21
Figure 4: AT-SBx8106 Chassis with Line Cards, Controller Cards, and Power Supplies	22
Figure 5: Ethernet Line and Controller Cards Slots	23
Figure 6: Power Supply Units	24
Figure 7: Power Supply Slots	25
Figure 8: AT-SBxFAN06 Module	29
Figure 9: Power Supply Interfaces (Opto-couplers)	30
Figure 10: Ethernet Line Cards	34
Figure 11: AT-SBx81GT24 Line Card	35
Figure 12: Port LEDs on the AT-SBx81GT24 Line Card	36
Figure 13: AT-SBx81GT40 Line Card	37
Figure 14: Port LEDs on an RJ Point 5 Cable Connector for the AT-SBx81GT40 Line Card	38
Figure 15: Port LEDs on an RJ Point 5 Cable Connector for the AT-SBx81GT40 Line Card	38
Figure 16: AT-SBx81GP24 PoE Line Card	40
Figure 17: Port LEDs on the AT-SBx81GP24 PoE Line Card	41
Figure 18: AT-SBx81GS24a SFP Line Card	43
Figure 19: Port LEDs on the AT-SBx81GS24a SFP Line Card	44
Figure 20: AT-SBx81XS6 Line Card	45
Figure 21: SFP+ Slot LEDs on the AT-SBx81XS6 Line Card	45
Figure 22: Controller Fabric Cards for the AT-SBx8106 Chassis	54
Figure 23: AT-SBx81CFC400 Controller Fabric Card	56
Figure 24: 100 - 125 VAC 125 V NEMA 5-20 Plug and Receptacle	79
Figure 25: Reserving Vertical Rack Space	84
Figure 26: Rack Mounting Hole Locations	85
Figure 27: Components of the AT-SBx8106 Chassis	86
Figure 28: Components of the AT-SBx8106 Chassis (Continued)	87
Figure 29: Turning the Chassis Upside Down	88
Figure 30: Removing the Rubber Feet	89
Figure 31: Rack Mounting Bracket Locations	91
Figure 32: Rack Bracket Locations for Reverse Position of Chassis	91
Figure 33: Lifting the AT-SBx8106 Chassis into the Equipment Rack	93
Figure 34: Installing the Rack Mount Screws	94
Figure 35: Tightening the Rack Mount Screws	95
Figure 36: Removing the Shipping Brace	96
Figure 37: Stripping the Grounding Wire	97
Figure 38: Removing the Grounding Lug	97
Figure 39: Attaching the Grounding Wire to the Grounding Lug	98
Figure 40: Installing the Grounding Lug and Wire	98
Figure 41: ESD Socket and Wrist Strap	100
Figure 42: Power Supply Slots	102
Figure 43: Removing the Blank Slot Cover from Power Supply Slot C	102
Figure 44: Items Included with the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply	103
Figure 45: Unlocking the Handle on the Power Supply	104
Figure 46: Inserting the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply	104
Figure 47: Lowering the Handle on the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply	105
Figure 48: Removing the Blank Slot Cover from Power Supply Slot A	108
Figure 49: Items Included with the AT-SBxPWRPOE1 Power Supply Module	109

Figure 50: Unlocking the Handle on the AT-SBxPWRPOE1 Power Supply	110
Figure 51: Inserting the AT-SBxPWRPOE1 Power Supply	110
Figure 52: Locking the Handle on the AT-SBxPWRPOE1 Power Supply	111
Figure 53: Removing the Blank Slot Cover from Power Supply Slot C.....	113
Figure 54: Items Included with the AT-SBxPWRSYS1 DC Power Supply Module.....	114
Figure 55: On/Off Switch on the AT-SBxPWRSYS1 DC Power Supply	115
Figure 56: Loosening the Handle Locking Screw on the AT-SBxPWRSYS1 DC Power Supply	115
Figure 57: Raising Handle on the AT-SBxPWRSYS1 DC Power Supply	116
Figure 58: Inserting the AT-SBxPWRSYS1 DC System Power Supply.....	116
Figure 59: Locking the Handle on the AT-SBxPWRSYS1 DC System Power Supply.....	117
Figure 60: Aligning Card in Slot	121
Figure 61: Slots 5 and 6 for the AT-SBx81CFC400 Card	122
Figure 62: Items Included with the AT-SBx81CFC400 Controller Fabric Card.....	123
Figure 63: Removing the AT-SBx81CFC400 Controller Fabric Card from the Anti-static Bag.....	123
Figure 64: Opening the Locking Handles on the AT-SBx81CFC400 Controller Fabric Card	124
Figure 65: Removing the Battery Insulator	124
Figure 66: Aligning the AT-SBx81CFC400 Card in the Chassis Slot.....	125
Figure 67: Closing the Locking Levers on the AT-SBx81CFC400 Controller Fabric Card	126
Figure 68: Tightening the Thumb Screws on the AT-SBx81CFC400 Card	127
Figure 69: Removing an Ethernet Line Card from the Anti-static Bag	129
Figure 70: Aligning an Ethernet Line Card in a Chassis Slot.....	129
Figure 71: Seating an Ethernet Line Card on the Backplane Connector.....	130
Figure 72: Tightening the Thumb Screws on an Ethernet Line Card.....	131
Figure 73: Installing a Blank Slot Cover.....	132
Figure 74: Tightening the Thumbscrews on a Blank Slot Cover.....	133
Figure 75: RJ Point 5 Cable Connector for AT-SBx81GT40 Line Card.....	137
Figure 76: Connecting Cables to Ports on the AT-SBx81GT40 Line Card.....	138
Figure 77: Removing the Dust Cover from an SFP Slot in the AT-SBx81GS24a Line Card	140
Figure 78: Handle on SFP Transceiver.....	140
Figure 79: Inserting the SFP Transceiver in the AT-SBx81GS24a Line Card	141
Figure 80: Removing the Dust Cover from the SFP Transceiver in the AT-SBx81GS24a Line Card.....	142
Figure 81: Verifying the Position of the Handle on an SFP Transceiver in the AT-SBx81GS24a Line Card.....	142
Figure 82: Attaching a Fiber Optic Cable to an SFP Transceiver in the AT-SBx81GS24a Line Card	143
Figure 83: Removing the Dust Cover from an SFP+ Slot in the AT-SBx81XS6 Line Card	144
Figure 84: Handle on SFP+ Transceiver	145
Figure 85: Installing an SFP+ Transceiver in the AT-SBx81XS6 Line Card	145
Figure 86: Removing the Dust Cover from an SFP+ Transceiver in the AT-SBx81XS6 Line Card.....	146
Figure 87: Verifying the Position of the Handle on the SFP+ Transceiver in the AT-SBx81XS6 Line Card	146
Figure 88: Attaching a Fiber Optic Cable to an SFP+ Transceiver in the AT-SBx81XS6 Line Card	147
Figure 89: Removing the Dust Cover From an SFP+ Slot in the AT-SBx81XS6 Line Card	148
Figure 90: Installing the AT-SP10TW Cable in the AT-SBx81XS6 Line Card	149
Figure 91: AC Sockets on the Rear Panel of the AT-SBx8106 Chassis.....	155
Figure 92: Connecting the AC Power Cord for the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply	156
Figure 93: Securing the Power Cord for the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply to an Anchor..	157
Figure 94: Connecting the AC Power Cord for the AT-SBxPWRPOE1 Power Supply.....	158
Figure 95: Securing the Power Cord for the AT-SBxPWRPOE1 Power Supply to an Anchor	159
Figure 96: Dress and Secure AC Power Cords	160
Figure 97: Components of the AT-SBxPWRSYS1 DC Power Supply	162
Figure 98: Grounding Wire Terminal.....	163
Figure 99: Stripping the Stranded Grounding Wire.....	163
Figure 100: Attaching the Stranded Grounding Wire to the Grounding Terminal	163
Figure 101: Removing the Nut and Washer from the Grounding Post	164
Figure 102: Installing the Grounding Wire	165
Figure 103: Stripping the solid or Stranded Grounding Wire	166
Figure 104: Attaching the Bare Grounding Wire to the Grounding Post.....	166
Figure 105: Securing the Bare Grounding Wire to the Grounding Post.....	167
Figure 106: Power Wire Terminals	168
Figure 107: Stripping the Power Wires	169
Figure 108: Attaching the Power Wires to the Straight Terminal Lugs.....	169
Figure 109: On/Off Switch on the AT-SBxPWRSYS1 DC Power Supply	170

Figure 110: Opening the Plastic Cover.....	171
Figure 111: Removing the Terminal Screws.....	172
Figure 112: Connecting the Positive (+) Power Wire with a Straight Terminal.....	173
Figure 113: Connecting the Negative (-) Power Wire with a Straight Terminal	174
Figure 114: Closing the Plastic Cover over the Terminal Connectors	175
Figure 115: Tightening the Handle Locking Screw	176
Figure 116: Stripping the Power Wires.....	177
Figure 117: Attaching the Power Wires to the Right Angle Terminals.....	177
Figure 118: Removing the Plastic Cover	178
Figure 119: Removing the Terminal Screws.....	179
Figure 120: Connecting the Positive (+) Power Wire with a Right Angle Terminal.....	180
Figure 121: Connecting the Negative (-) Power Wire with a Right Angle Terminal.....	181
Figure 122: Tightening the Handle Locking Screw	182
Figure 123: Stripping Solid or Stranded DC Power Wires.....	183
Figure 124: Connecting the Positive Lead Wire	184
Figure 125: Connecting the Negative Lead Wire.....	185
Figure 126: Switch Initialization Messages.....	188
Figure 127: Switch Initialization Messages (Continued)	189
Figure 128: Connecting the Management Cable to the Console RS-232 Port.....	194
Figure 129: SHOW VERSION Command.....	195
Figure 130: SHOW CARD Command.....	196
Figure 131: Disconnecting the AC Power Cord from the AC Socket on the Back Panel.....	215
Figure 132: Lifting the Locking Handle on the Power Supply.....	216
Figure 133: Removing the Power Supply from the Chassis	217
Figure 134: Installing a Blank Power Supply Slot Cover	218
Figure 135: Lowering the Locking Handle on the Power Supply Slot Cover	219
Figure 136: Loosening the Screw on the Locking Handle	220
Figure 137: Opening the Plastic Window on the Terminal Block.....	221
Figure 138: Removing the Negative Lead Wire.....	222
Figure 139: Removing the Positive Lead Wire from the Terminal Block	223
Figure 140: Reinstalling the Screws on the Positive and Negative Terminals.....	224
Figure 141: Closing the Plastic Cover	225
Figure 142: Removing the Grounding Wire	226
Figure 143: Reinstalling the Nut and Washer on the Grounding Post.....	227
Figure 144: Lifting the Locking Handle and Removing the Power Supply.....	228
Figure 145: Installing a Blank Power Supply Slot Cover	229
Figure 146: Lowering the Locking Handle on the Power Supply Slot Cover	230
Figure 147: Loosening the Screw on the AT-SBxFAN06 Fan Module	236
Figure 148: Loosening the AT-SBxFAN06 Fan Module from the Backplane Connector.....	236
Figure 149: Withdrawing the AT-SBxFAN06 Fan Module 25 mm (1 in.) from the Chassis	237
Figure 150: Removing the AT-SBxFAN06 Fan Module from the Chassis.....	238
Figure 151: Installing a New AT-SBxFAN06 Fan Module.....	239
Figure 152: Securing the AT-SBxFAN06 Fan Module on the Backplane Connector	240
Figure 153: Tightening the Screw on the AT-SBxFAN06 Fan Module	240
Figure 154: Pin Numbers for RJ-45 and RJ Point 5 Ports (Front View)	247

Tables

Table 1. LEDs on the AT-SBxPWRSYS1 and AT-SBxPWRSYS2 Power Supplies	27
Table 2. LEDs on the AT-SBxPWRSYS1 DC System Power Supply	27
Table 3. LEDs on the AT-SBxPWRPOE1 PoE Power Supply	28
Table 4. Power LED on the AT-SBxFAN06 Module	29
Table 5. Power LED on the Power Supply Interface	31
Table 6. Port LEDs on the AT-SBx81GT24 Line Card	36
Table 7. Port LEDs on the AT-SBx81GT40 Line Card	39
Table 8. Port LEDs on the AT-SBx81GP24 PoE Line Card	41
Table 9. Port LEDs on the AT-SBx81GS24a SFP Line Card	44
Table 10. SFP+ Slot LEDs on the AT-SBx81XS6 Line Card	46
Table 11. Twisted Pair Cable for the AT-SBx81GT24 and AT-SBx81GT40 Line Cards	48
Table 12. Twisted Pair Cable for the AT-SBx81GP24 Line Card	49
Table 13. IEEE802.3af and IEEE802.3at Powered Device Classes	50
Table 14. Maximum Number of Powered Devices	51
Table 15. Components on the AT-SBx81CFC400 Controller Fabric Card	56
Table 16. SYS (System) Status LEDs	62
Table 17. SBx Linecard Status LEDs	65
Table 18. NET MGMT Port LED	68
Table 19. AlliedWare Plus Operating System Releases for the Hardware Components	72
Table 20. Front Panel to Rack Rail Dimensions	90
Table 21. Product Dimensions	241
Table 22. Product Weights	241
Table 23. Environmental Specifications	243
Table 24. Acoustic Noise Test Components	243
Table 25. AC Voltage and Frequency Requirements	244
Table 26. DC Voltage Requirements	244
Table 27. Typical Power Savings in eco-friendly Mode	244
Table 28. Maximum Power Consumption	244
Table 29. Maximum Power Efficiency	245
Table 30. Heat Dissipation	245
Table 31. Available Power Over Ethernet with One PoE Power Supply	245
Table 32. Available Power Over Ethernet with Two PoE Power Supplies	246
Table 33. PoE Mode on the AT-SBx81GP24 PoE Line Card	246
Table 34. Safety and Electromagnetic Emissions	246
Table 35. MDI Pin Signals (10Base-T or 100Base-TX)	247
Table 36. MDI-X Pin Signals (10Base-T or 100Base-TX)	247
Table 37. 1000Base-T Connector Pinouts	248

Preface

This guide contains the hardware installation instructions for the Layer 3+ SwitchBlade x8106 Chassis Switch. The preface contains the following sections:

- ❑ “Safety Symbols Used in this Document” on page 16
- ❑ “Contacting Allied Telesis” on page 17

Note

This version of the installation guide applies to release 5.4.5-1 of the AlliedWare Plus™ Operating System for the SwitchBlade x8106 Chassis Switch and AT-SBx81CFC400 Controller Fabric Card.

Safety Symbols Used in this Document

This document uses the following conventions.

Note

Notes provide additional information.



Caution

Cautions inform you that performing or omitting a specific action may result in equipment damage or loss of data.



Warning

Warnings inform you that performing or omitting a specific action may result in bodily injury.



Warning

Laser warnings inform you that an eye or skin hazard exists due to the presence of a Class 1 laser device.

Contacting Allied Telesis

If you need assistance with this product, you may contact Allied Telesis technical support by going to the Support & Services section of the Allied Telesis web site at **www.alliedtelesis.com/support**. You can find links for the following services on this page:

- ❑ 24/7 Online Support — Enter our interactive support center to search for answers to your product questions in our knowledge database, to check support tickets, to learn about RMAs, and to contact Allied Telesis technical experts.
- ❑ USA and EMEA phone support — Select the phone number that best fits your location and customer type.
- ❑ Hardware warranty information — Learn about Allied Telesis warranties and register your product online.
- ❑ Replacement Services — Submit a Return Merchandise Authorization (RMA) request via our interactive support center.
- ❑ Documentation — View the most recent installation and user guides, software release notes, white papers, and data sheets for your products.
- ❑ Software Downloads — Download the latest software releases for your managed products.

For sales or corporate information, go to **www.alliedtelesis.com/purchase** and select your region.

Chapter 1

Chassis and Power Supplies

This chapter describes the Layer 3+ SwitchBlade x8106 Chassis Switch in the following sections:

- ❑ “AT-SBx8106 Chassis” on page 20
- ❑ “Slots for the Ethernet Line and Controller Cards” on page 23
- ❑ “Power Supplies and Power Supply Slots” on page 24
- ❑ “AT-SBxFAN06 Module” on page 29
- ❑ “Power Supply Interfaces (Opto-couplers)” on page 30

Note

This version of the installation guide applies to release 5.4.5-1 of the AlliedWare Plus™ Operating System for the SwitchBlade x8106 Chassis Switch and AT-SBx81CFC400 Controller Fabric Card.

AT-SBx8106 Chassis

The SwitchBlade x8106 product is a modular Layer 3+ Ethernet switch. The main components are the AT-SBx8106 Chassis, Ethernet line cards, a controller card, system power supply, Power over Ethernet Plus (PoE+) power supply, and fan module.

The AT-SBx8106 Chassis is shown in Figure 1.

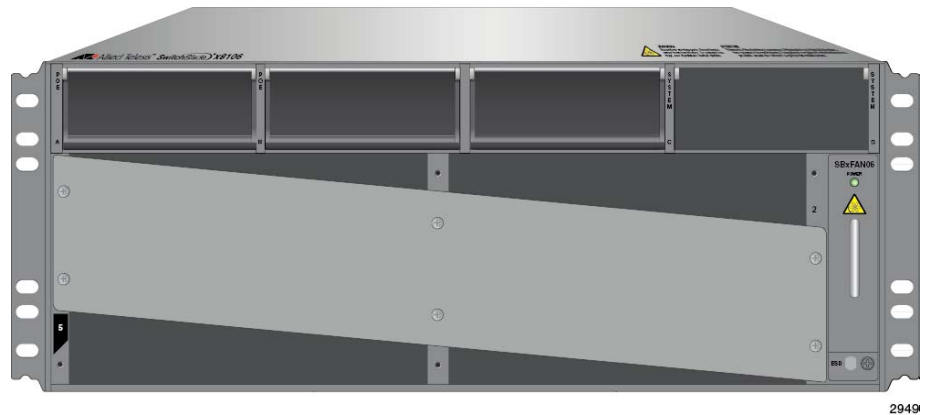


Figure 1. AT-SBx8106 Chassis

The chassis has slots for the following components:

- ☐ Four Ethernet line cards
- ☐ Two AT-SBx81CFC400 Controller Fabric Cards
- ☐ Two AC or DC system power supplies
- ☐ Two Power over Ethernet Plus (PoE+) power supplies
- ☐ One AT-SBxFAN06 Fan Module

The chassis components are identified in Figure 2 on page 21 and Figure 3 on page 21.

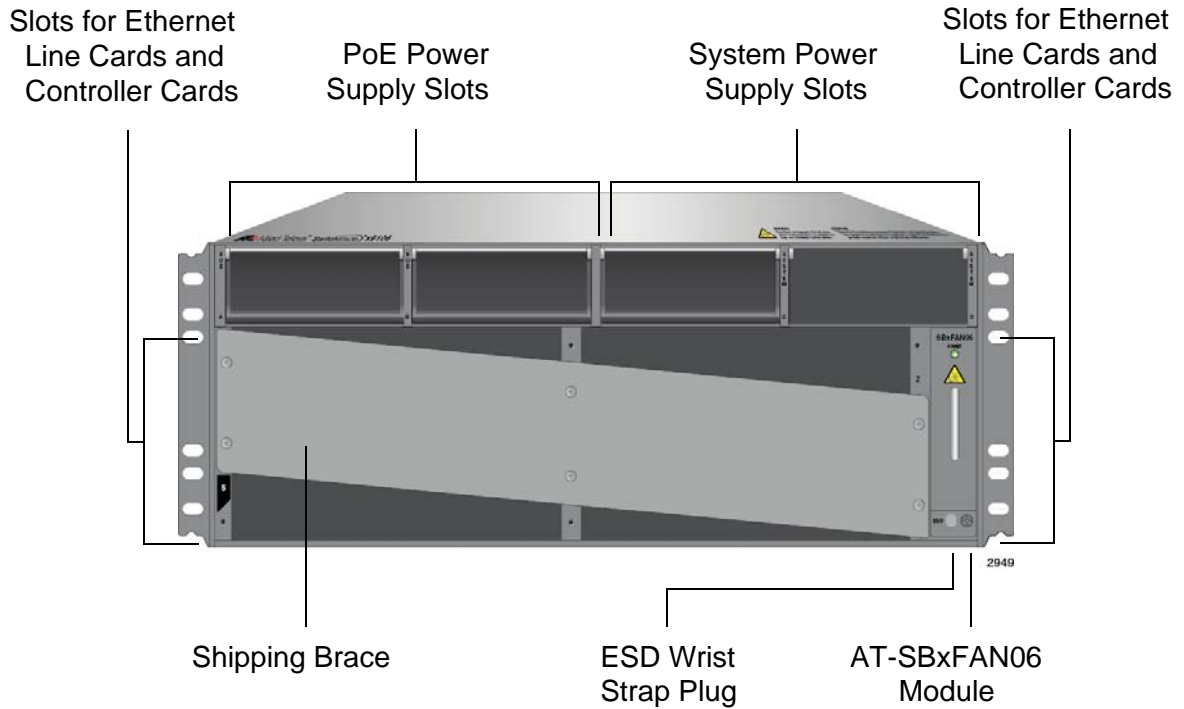


Figure 2. Front View of the AT-SBx8106 Chassis

Note

Do not remove the shipping brace from the front of the chassis until after the unit is installed in the equipment rack. You might bend the chassis and cause misalignment of the slots and card guides if you lift the chassis into the equipment rack without the shipping brace.

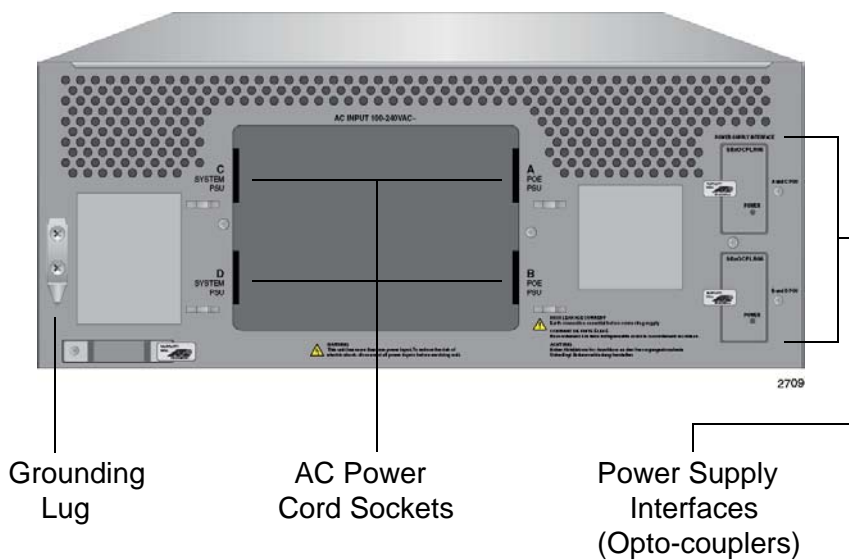


Figure 3. Rear View of the AT-SBx8106 Chassis

Figure 4 is an example of a fully populated chassis.

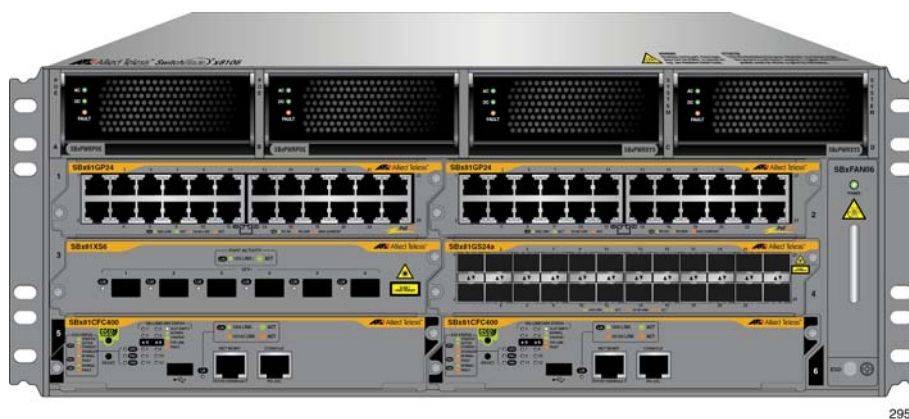


Figure 4. AT-SBx8106 Chassis with Line Cards, Controller Cards, and Power Supplies

Slots for the Ethernet Line and Controller Cards

The chassis has slots for four Ethernet line cards and two AT-SBx81CFC400 Controller Cards. The slot definitions are predefined and may not be changed. Figure 5 identifies the slots.

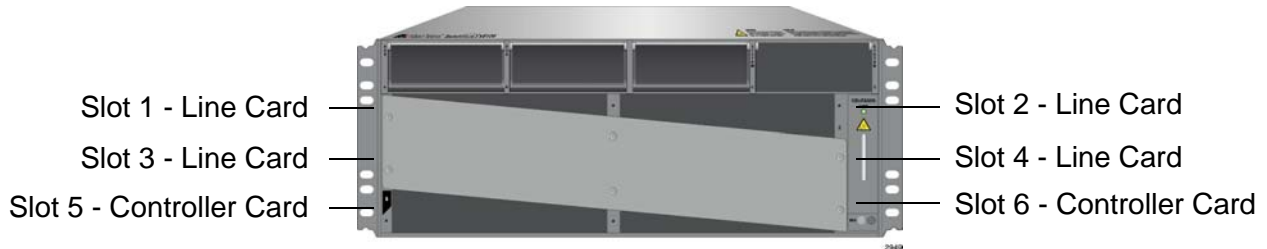


Figure 5. Ethernet Line and Controller Cards Slots

Slots 1 to 4 are for the Ethernet line cards. The cards may be installed in any order or variety in the slots. For more information on the Ethernet cards, refer to Chapter 2, “Ethernet Line Cards” on page 33.

Slots 5 and 6 are for the AT-SBx81CFC400 Controller Fabric Card. The chassis must have at least one controller card. Installing a second controller card in the chassis provides these benefits:

- ☐ Management redundancy
- ☐ Increased traffic bandwidth

For more information on the controller card, refer to Chapter 3, “AT-SBx81CFC400 Controller Fabric Card” on page 53.


Power Supplies and Power Supply Slots

There are four power supplies for the chassis. They are shown in Figure 6.




2342

AT-SBxPWRSYS1 AC Power Supply for the Ethernet line cards, controller card, and fan module.

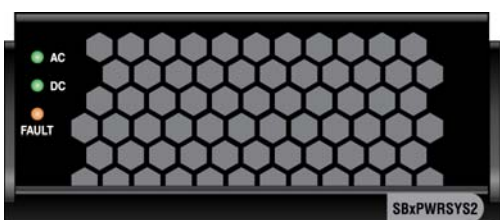

4032

AT-SBxPWRSYS2 AC Power Supply for the Ethernet line cards, controller card, and fan module.

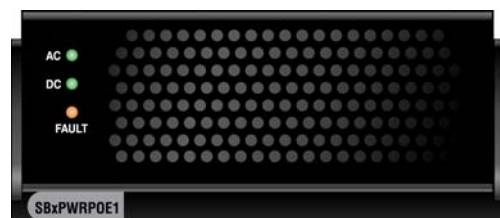

2344

AT-SBxPWRPOE1 AC Power Supply with 1200 W PoE budget for the ports on the AT-SBx81GP24 PoE Ethernet Line Card.



2508


AT-SBxPWRSYS1 DC Power Supply for the Ethernet line cards, controller card, and fan module.

Figure 6. Power Supply Units

Note

Allied Telesis is discontinuing the AT-SBxPWRSYS1 AC Power Supply and replacing it with the AT-SBxPWRSYS2 AC Power Supply.

The power supplies are installed in the four slots across the top of the front of the chassis. The slots are labelled A to D. Refer to Figure 7 on page 25.

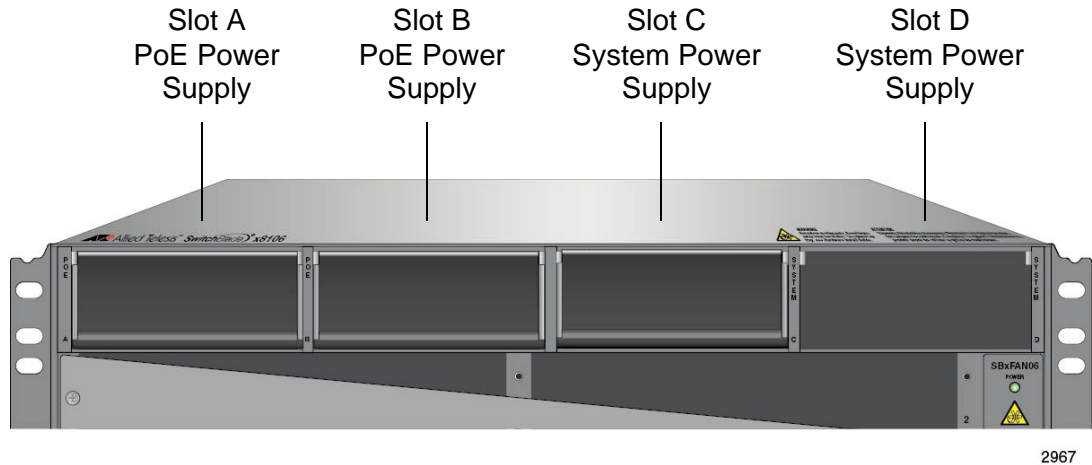

2967

Figure 7. Power Supply Slots

Slots C and D are for system power supplies. The three system power supplies are listed here:

- ☐ AT-SBxPWRSYS1 AC Power Supply
- ☐ AT-SBxPWRSYS2 AC Power Supply
- ☐ AT-SBxPWRSYS1 DC Power Supply

System power supplies provide power for all the hardware components of the chassis, except for the PoE feature on the ports of the AT-SBx81GP24 PoE Line Card. Please review the following items concerning the system power supplies:

- ☐ The chassis must have at least one system power supply.
- ☐ A single power supply can power a fully populated chassis.
- ☐ Installing a second system power supply adds power redundancy to the chassis.
- ☐ System power supplies are installed in slots C and D of the chassis.
- ☐ If you are installing only one system power supply, you may install it in either slot.
- ☐ The AT-SBxPWRSYS1 and AT-SBxPWRSYS2 AC System Power Supplies use the AC connectors on the back panel of the chassis and are intended for AC environments.
- ☐ The AT-SBxPWRSYS1 DC System Power Supply has DC power connectors on its front panel and is intended for DC environments.
- ☐ The system power supplies are hot swappable. You do not have to power off the unit to replace a power supply.
- ☐ The AT-SBxPWRSYS1 AC and AT-SBxPWRSYS2 AC System Power Supplies are compatible and can be used in the same

chassis.

- ❑ The AT-SBxPWRSYS2 AC System Power Supply was added to the management software in release 5.4.5-1. It will work with earlier releases, but Allied Telesis recommends updating the software on controller cards with previous versions to the latest release to ensure full compatibility.

Note

The AT-SBxPWRSYS1 DC Power Supply is not compatible with the other system or PoE power supplies and should not be operated in the same chassis with other power supplies. You may, however, operate the chassis for a short period of time with AC and DC power supplies if you are converting it from one type of power supply to another, such as from AC to DC. This allows you to transition the chassis without having to power it off.

Slots A and B are for the AT-SBxPWRPOE1 AC Power Supply. The unit provides power to the PoE feature on the twisted pair ports on the AT-SBx81GP24 Line Card. For more information, refer to “Power over Ethernet on the AT-SBx81GP24 Line Card” on page 50. Please review the following items concerning the PoE power supply:

- ❑ You may install either one or two power supplies in the chassis.
- ❑ PoE power supplies are installed in slots A and B of the chassis.
- ❑ If you are installing only one power supply, you may install it in either slot A or B.
- ❑ A single PoE power supply provides up to 1200 watts of power for PoE. Two PoE power supplies provide up to 2400 watts of power.
- ❑ The PoE power supply is hot swappable. You do not have to power off the chassis to install or replace it.
- ❑ The total number of powered devices the chassis can support on the ports on AT-SBx81GP24 Line Cards depends on the number of AT-SBxPWRPOE1 AC Power Supplies in the chassis and the power requirements of the devices. For instance, a chassis can support 40 ports of Class 4, PoE+ (IEEE 802.3at) powered devices with one power supply or 80 ports with two power supplies. For further information, refer to “Power over Ethernet on the AT-SBx81GP24 Line Card” on page 50.

Note

Power supplies are not included with the chassis and must be purchased separately.

LEDs The LEDs on the AT-SBxPWRSYS1 and AT-SBxPWRSYS2 System Power Supplies are described in Table 1 on page 27.

Table 1. LEDs on the AT-SBxPWRSYS1 and AT-SBxPWRSYS2 Power Supplies

LED	State	Description
AC	Solid Green	The power supply is receiving AC power that is within the normal operating range.
	Off	The power supply is not receiving power from the AC power source.
DC	Solid Green	The power supply is providing DC power that is within the normal operating range.
	Off	The power supply is not generating DC power or the power is outside the normal operating range.
Fault	Solid Amber	A power supply has detected a fault condition, such as an under-voltage, or over-temperature condition.
	Off	The power supply is operating normally or is powered off.

The LEDs on the AT-SBxPWRSYS1 DC System Power Supply are described in Table 2.

Table 2. LEDs on the AT-SBxPWRSYS1 DC System Power Supply

LED	State	Description
DC IN	Solid Green	The power supply is receiving DC power that is within the normal operating range.
	Off	The power supply is not receiving power from the DC power source.
DC OUT	Solid Green	The DC power that the module is providing to the chassis components is within the normal operating range.
	Off	The power supply is not generating DC power or the power is outside the normal operating range.
Fault	Solid Amber	The power supply has detected a fault condition, such as an under-voltage, or over-temperature condition.
	Off	The power supply is operating normally or is powered off.

The LEDs on the AT-SBxPWRPOE1 PoE Power Supply are described in Table 3.

Table 3. LEDs on the AT-SBxPWRPOE1 PoE Power Supply

LED	State	Description
AC	Solid Green	The power supply is receiving AC power that is within the normal operating range.
	Off	The power supply is not receiving power from the AC power source.
DC	Solid Green	The DC power provided by the power supply to the line cards over the backplane is within the normal operating range.
	Off	The power supply is not providing any DC power or the power is not within the normal operating range.
Fault	Solid Amber	The power supply has detected a fault condition, such as an under-voltage or over-temperature condition.
	Off	The power supply is operating normally or is powered off.

AT-SBxFAN06 Module

The AT-SBxFAN06 Module, shown in Figure 8, is the cooling unit for the chassis. It is a field- replaceable assembly that is factory installed and shipped with the AT-SBx8106 Chassis.

The module is controlled by the AT-SBx81CFC400 Controller Fabric Card. The fan speeds are automatically adjusted according to the internal operating temperature of the switch. The fans are at their lowest speed when the ambient temperature coming into the fan is approximately 20° C. The fan speeds increase to provide additional cooling as the ambient temperature rises.



Figure 8. AT-SBxFAN06 Module

Note

Only an authorized service technician should replace the fan module.

LED The POWER LED on the AT-SBxFAN06 Module is described in Table 4.

Table 4. Power LED on the AT-SBxFAN06 Module

LED	State	Description
Power	Solid Green	The AT-SBxFAN06 Module is receiving power.
	OFF	The AT-SBxFAN06 Module is not receiving power or has failed.

Power Supply Interfaces (Opto-couplers)

The chassis has two power supply interfaces, also referred to as opto-couplers, in the lower right corner on the rear panel. The interfaces, labeled Power Supply Interface, are used by the active master controller card to obtain status information from the power supplies. The interfaces are shown in Figure 9.

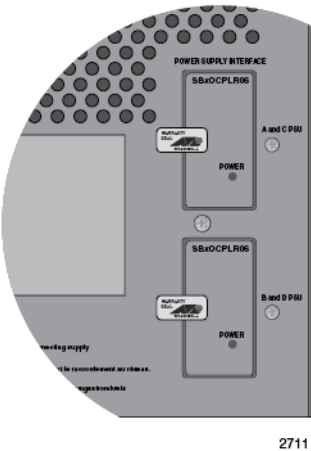



Figure 9. Power Supply Interfaces (Opto-couplers)

The controller card uses the top interface to communicate with the power supplies in slots A and C, and the bottom interface to communicate with the power supplies in slots B and D.

**Caution**
Power supply interfaces are not hot swappable. They should only be serviced by an authorized service technician.

LED Each interface has one LED, labeled Power. The LED is described in Table 5 on page 31.

Table 5. Power LED on the Power Supply Interface

LED	State	Description
Power	Solid Green	The interface is operating normally.
	Off	<p>The possible causes of this LED state are listed here:</p> <ul style="list-style-type: none"> - The corresponding power supply slots of the interface are empty. - The power supplies in the power supply slots are powered off or have failed. - The power supplies in the power supply slots are powered on and functioning normally, but the power supply interface has failed.

Chapter 2


Ethernet Line Cards

This chapter describes the Ethernet line cards for the SwitchBlade x8106 Chassis Switch in the following sections:


- ❑ “Ethernet Line Cards” on page 34
- ❑ “AT-SBx81GT24 Line Card” on page 35
- ❑ “AT-SBx81GT40 Line Card” on page 37
- ❑ “AT-SBx81GP24 PoE Line Card” on page 40
- ❑ “AT-SBx81GS24a SFP Line Card” on page 43
- ❑ “AT-SBx81XS6 SFP+ Line Card” on page 45
- ❑ “10/100/1000Base-T Twisted Pair Ports” on page 47
- ❑ “Power over Ethernet on the AT-SBx81GP24 Line Card” on page 50

Ethernet Line Cards


The Ethernet line cards for the AT-SBx8106 Chassis and AT-SBx81CFC400 Controller Fabric Card are shown in Figure 10.

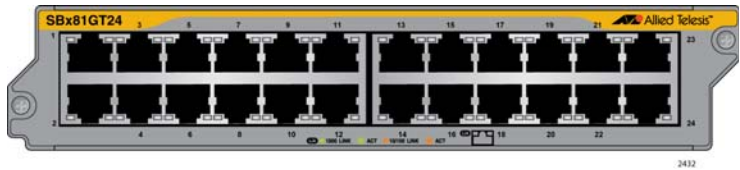


AT-SBx81GT24 Ethernet Line Card with 24 10/100/1000Base-T twisted pair ports.

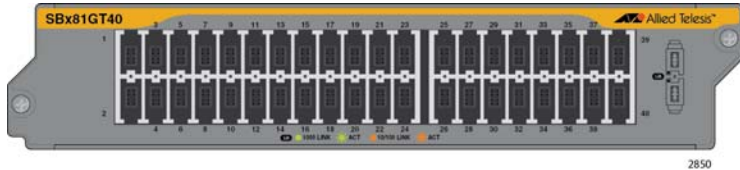


AT-SBx81GT40 Ethernet Line Card with 40 10/100/1000Base-T twisted pair ports, with RJ point 5 connectors.

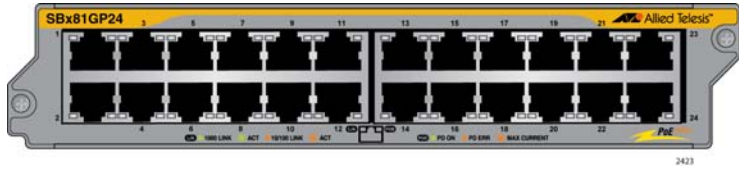

AT-SBx81GP24 Ethernet Line Card with 24 10/100/1000Base-T twisted pair ports, with PoE+.

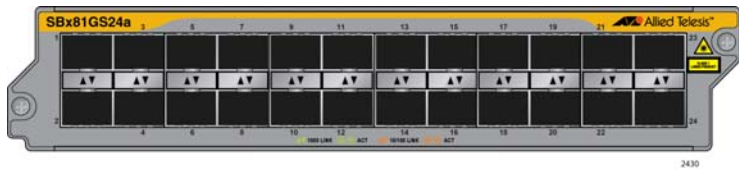

AT-SBx81GS24a SFP Ethernet Card with 24 slots for 100 or 1000Mbps, fiber optic or twisted pair SFP transceivers.

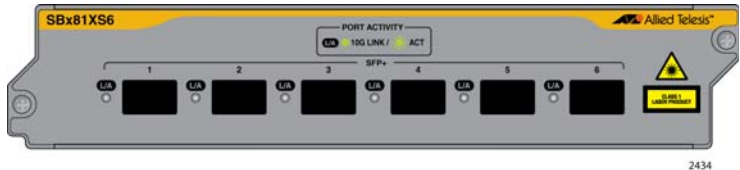

AT-SBx81XS6 SFP+ Ethernet Card with six slots for 10Gbps, fiber optic SFP+ transceivers, or Twinax direct connect cables.

Figure 10. Ethernet Line Cards

AT-SBx81GT24 Line Card

The AT-SBx81GT24 Line Card, shown in Figure 11, is a Gigabit Ethernet switch.



Figure 11. AT-SBx81GT24 Line Card

Here are the main features of the line card:

- ☐ 24 10/100/1000Base-T ports
- ☐ RJ-45 connectors
- ☐ 100 meters (328 feet) maximum operating distance per port
- ☐ Auto-Negotiation for speed and duplex mode
- ☐ Automatic MDIX detection for ports operating at 10/100Base-TX, (Automatic MDIX detection does not apply to 1000Base-T operation.)
- ☐ Port Link/Activity (L/A) LEDs
- ☐ 16K entry MAC address table
- ☐ 12 Mb buffer memory
- ☐ Jumbo frame support:
 - 9710 bytes for ports operating at 10 or 100 Mbps.
 - 10240 bytes for ports operating at 1000 Mbps
- ☐ Non-blocking full wire speed switching on all packet sizes, with two AT-SBx81CFC400 Controller Fabric Cards
- ☐ Hot swappable

The cable requirements for the ports on the AT-SBx81GT24 Line Card are listed in Table 11 on page 48.

LEDs Each port on the AT-SBx81GT24 Line Card has two LEDs. The LEDs are shown in Figure 12 on page 36 and described in Table 6 on page 36.

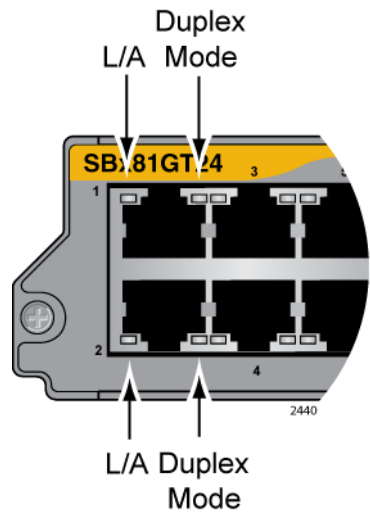


Figure 12. Port LEDs on the AT-SBx81GT24 Line Card

Table 6. Port LEDs on the AT-SBx81GT24 Line Card

LED	State	Description
L/A	Solid Green	The port has established an 1000 Mbps link to a network device.
	Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	The port has established a 10 or 100 Mbps link to a network device.
	Flashing Amber	The port is transmitting or receiving data at 10 or 100.
	Off	The port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
Duplex Mode	Solid Green	The port is operating in full duplex mode.
	Solid Amber	The port is operating in half duplex mode.
	Flashing amber	The port is operating in half duplex mode, with collisions.
	Off	The port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

AT-SBx81GT40 Line Card

The AT-SBx81GT40 Line Card, shown in Figure 13, is a Gigabit Ethernet switch.

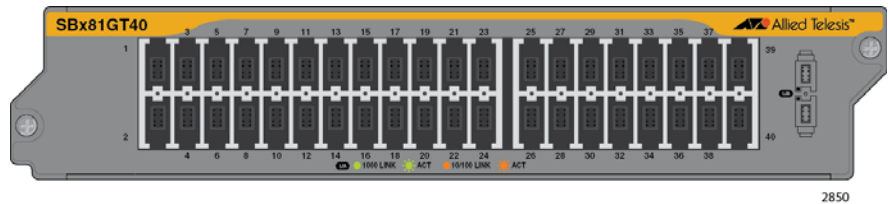


Figure 13. AT-SBx81GT40 Line Card

Here are the main features of the line card:

- ☐ 40 10/100/1000Base-T ports
- ☐ RJ point 5 connectors
- ☐ 100 meters (328 feet) maximum operating distance per port
- ☐ Auto-Negotiation for speed
- ☐ Full-duplex mode only
- ☐ Automatic MDIX detection for ports operating at 10/100Base-TX, (Automatic MDIX detection does not apply to 1000Base-T operation.)
- ☐ Port Link/Activity (L/A) LEDs
- ☐ 32K entry MAC address table
- ☐ 32 Mb buffer memory
- ☐ Jumbo frame support:
 - 10240 octets for tagged and untagged traffic between ports on the same line card
 - 10232 octets for untagged traffic between ports on different line cards
 - 10236 octets for tagged traffic between ports on different line cards
- ☐ Non-blocking full wire speed switching on all packet sizes, with two AT-SBx81CFC400 Controller Fabric Cards
- ☐ Hot swappable

Note

The ports on the line card do not support half-duplex operation.

The cable requirements for the ports on the AT-SBx81GT40 Line Card are listed in Table 11 on page 48.

LEDs The LEDs for a port on the AT-SBx81GT40 Line Card are found on the RJ point 5 cable connector. The LEDs are shown in Figure 14.

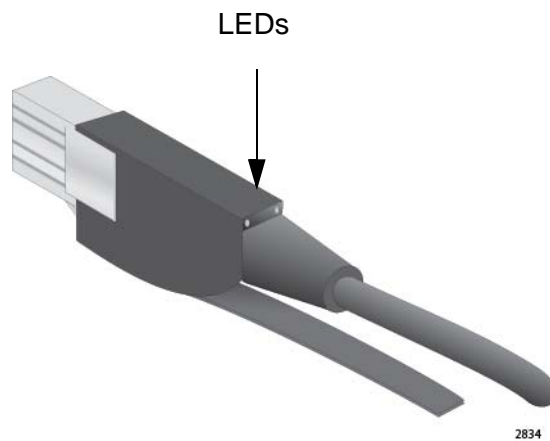


Figure 14. Port LEDs on an RJ Point 5 Cable Connector for the AT-SBx81GT40 Line Card

Only the left LED is active. Refer to Figure 15. It displays link and activity information about a port. The states of the LED are defined in Table 7 on page 39.

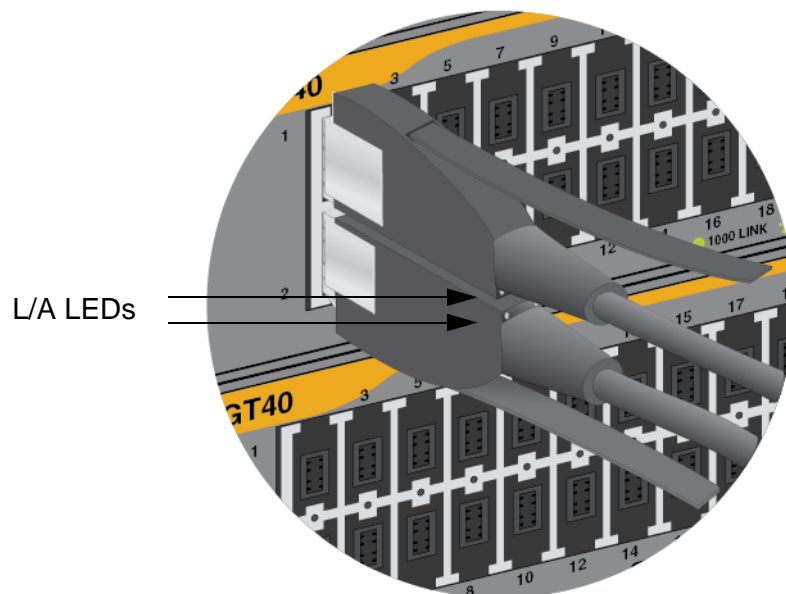


Figure 15. Port LEDs on an RJ Point 5 Cable Connector for the AT-SBx81GT40 Line Card

Table 7. Port LEDs on the AT-SBx81GT40 Line Card

LED	State	Description
L/A	Solid Green	The port has established an 1000 Mbps link to a network device.
	Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	The port has established a 10 or 100 Mbps link to a network device.
	Flashing Amber	The port is transmitting or receiving data at 10 or 100.
	Off	The port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
Right LED	-	This LED is not used.

AT-SBx81GP24 PoE Line Card

The AT-SBx81GP24 PoE Line Card, shown in Figure 16, is a Gigabit Ethernet switch with Power over Ethernet Plus (PoE+) on all the ports.

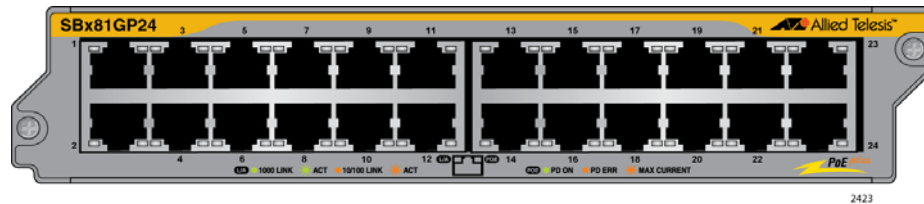


Figure 16. AT-SBx81GP24 PoE Line Card

Here are the main features of the line card:

- ❑ 24 10/100/1000Base-T ports
- ❑ RJ-45 connectors
- ❑ 100 meters (328 feet) maximum operating distance per port
- ❑ Auto-Negotiation for speed and duplex mode
- ❑ Automatic MDIX detection for ports operating at 10/100Base-TX, (Automatic MDIX detection does not apply to 1000Base-T operation.)
- ❑ Port Link/Activity (L/A) and PoE+ LEDs
- ❑ 16K entry MAC address table
- ❑ 12 Mb buffer memory
- ❑ PoE+ on all ports
- ❑ Up to 30W per port for PoE+
- ❑ PoE device classes 0 to 4
- ❑ Jumbo frame support:
 - 9710 bytes for ports operating at 10 or 100 Mbps.
 - 10240 bytes for ports operating at 1000 Mbps
- ❑ Non-blocking full wire speed switching on all packet sizes, with two AT-SBx81CFC400 Controller Fabric Cards
- ❑ Hot swappable

The cable requirements of the PoE ports on the AT-SBx81GP24 Ethernet Line Card are listed in Table 12 on page 49.

LEDs Each port on the AT-SBx81GP24 PoE Line Card has two LEDs. The LEDs are shown in Figure 17 and described in Table 8.

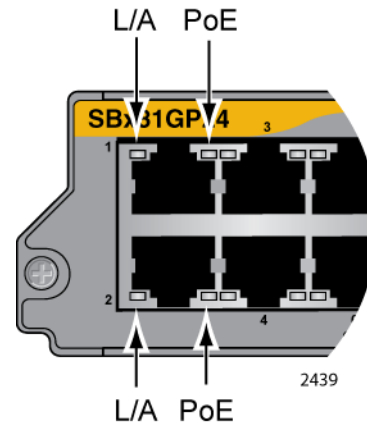


Figure 17. Port LEDs on the AT-SBx81GP24 PoE Line Card

Table 8. Port LEDs on the AT-SBx81GP24 PoE Line Card

LED	State	Description
L/A	Solid Green	The port has established an 1000 Mbps link to a network device.
	Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	The port has established a 10 or 100 Mbps link to a network device.
	Flashing Amber	The port is transmitting or receiving data at 10 or 100 Mbps.
	Off	The port has not established a link with another network device or the LEDs are turned off. To turn on the LEDs, use the eco-friendly button.
PoE	Green	The switch is detecting a powered device (PD) on the port and is delivering power to it.
	Solid Amber	The switch has shutdown PoE+ on the port because of a fault condition.
	Flashing Amber	The switch is detecting a PD on the port but is not delivering power to it because the maximum power budget has been reached.

Table 8. Port LEDs on the AT-SBx81GP24 PoE Line Card (Continued)

LED	State	Description
PoE	Off	<p>This LED state can result from the following conditions:</p> <ul style="list-style-type: none">❑ The port is not connected to a PD.❑ The PD is powered off.❑ The port is disabled in the management software.❑ PoE is disabled on the port.❑ The LEDs on the Ethernet line cards are turned off. To turn on the LEDs, use the eco-friendly button.

AT-SBx81GS24a SFP Line Card

The AT-SBx81GS24a SFP Line Card, shown in Figure 18, is a Gigabit Ethernet switch.

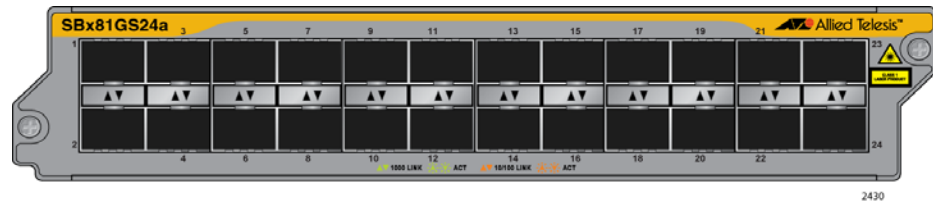


Figure 18. AT-SBx81GS24a SFP Line Card

Here are the main features of the line card:

- ❑ 24 slots for small form-factor pluggable (SFP) transceivers
- ❑ Supports 100Base-FX and 1000Base-SX/LX fiber optic transceivers
- ❑ Supports 100Base-BX and 1000Base-LX bidirectional (BiDi) fiber optic transceivers
- ❑ Supports 10/100/1000Base-T and 1000Base-T twisted pair transceivers
- ❑ Port Link/Activity (L/A) LEDs
- ❑ 32K entry MAC address table
- ❑ 24 Mb buffer memory
- ❑ Jumbo frame support:
 - 9710 bytes for ports operating at 10 or 100 Mbps.
 - 10240 bytes for ports operating at 1000 Mbps
- ❑ Non-blocking full wire speed switching on all packet sizes, with two AT-SBx81CFC400 Controller Fabric Cards.
- ❑ Hot swappable

Contact your Allied Telesis sales representative for a list of supported transceivers.

LEDs The SFP slots on the AT-SBx81GS24a SFP Line Card have one LED each, as shown in Figure 19 on page 44 and described in Table 9 on page 44.

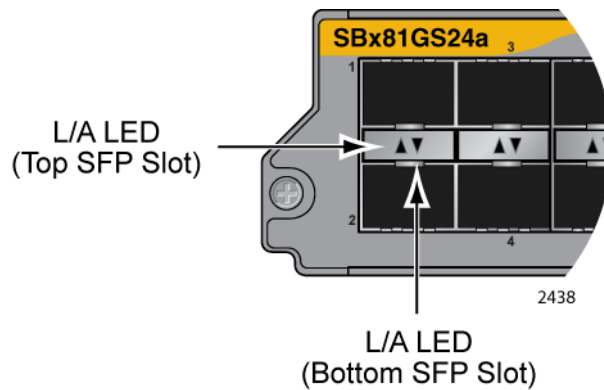


Figure 19. Port LEDs on the AT-SBx81GS24a SFP Line Card

Table 9. Port LEDs on the AT-SBx81GS24a SFP Line Card

LED State	Description
Solid Amber	The SFP transceiver in the slot has established a 10 or 100 Mbps link to a network device.
Blinking Amber	The SFP transceiver is transmitting and/or receiving data at 10 or 100 Mbps.
Solid Green	The SFP transceiver in the slot has established an 1000 Mbps link to a network device.
Blinking Green	The SFP transceiver is transmitting and/or receiving data at 1000 Mbps.
Off	The slot is empty or the SFP transceiver has not established a link to a network device.

AT-SBx81XS6 SFP+ Line Card

The AT-SBx81XS6 Line Card, shown in Figure 20, is a 10Gbps Ethernet switch.

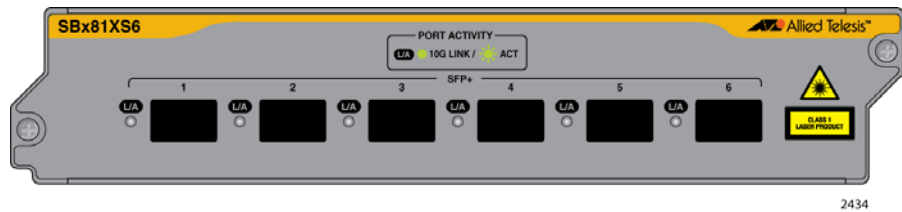


Figure 20. AT-SBx81XS6 Line Card

Here are the main features of the line card:

- ☐ Six slots for 10Gbps SFP+ transceivers
- ☐ Supports 10GBase-SR/LR fiber optic transceivers
- ☐ Supports AT-SP10TW direct connect twinax cables with SFP+ transceiver-style connectors
- ☐ Port Link/Activity (L/A) LEDs
- ☐ 32K entry MAC address table
- ☐ 24 Mb buffer memory
- ☐ Jumbo frame support:
 - 9710 bytes for ports operating at 10 or 100 Mbps.
 - 10240 bytes for ports operating at 1000 Mbps
- ☐ Hot swappable

Contact your Allied Telesis sales representative for a list of supported transceivers.

LEDs The AT-SBx81XS6 Line Card has one LED for each SFP+ slot. The LED is shown in Figure 21 and described in Table 10 on page 46.

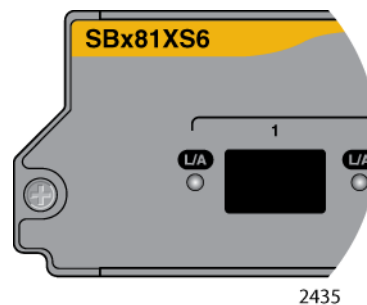


Figure 21. SFP+ Slot LEDs on the AT-SBx81XS6 Line Card

Table 10. SFP+ Slot LEDs on the AT-SBx81XS6 Line Card

LED	State	Description
L/A	Solid Green	The transceiver has established a link with a network device.
	Flashing Green	The transceiver is transmitting or receiving data at 10 Gbps.
	Off	<p>This LED state can result from the following conditions:</p> <ul style="list-style-type: none"> ❑ The transceiver slot is empty. ❑ The transceiver has not established a link with a network device. ❑ The LEDs on the Ethernet line cards are turned off. To turn on the LEDs, use the eco-friendly button.

10/100/1000Base-T Twisted Pair Ports

This section applies to the 10/100/1000Base-T ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 PoE Ethernet Line Cards.

Connector Type The ports on the AT-SBx81GT24 and AT-SBx81GP24 Line Cards have 8-pin RJ-45 connectors. The ports on the AT-SBx81GT40 Line Card have 8-pin RJ point 5 connectors. The ports use four pins at 10 or 100 Mbps and all eight pins at 1000 Mbps. The pin assignments are listed in “Port Pinouts” on page 247.

Speed The ports can operate at 10, 100, or 1000 Mbps. The speeds can be set automatically through Auto-Negotiation, the default setting, or manually with the AlliedWare Plus Operating System.

Note

Twisted-pair ports have to be set to Auto-Negotiation to operate at 1000 Mbps. You cannot manually set twisted-pair ports to 1000 Mbps.

Duplex Mode The twisted-pair ports on the AT-SBx81GT24 and AT-SBx81GP24 Line Cards can operate in either half- or full-duplex mode at 10 or 100 Mbps. Ports operating at 1000 Mbps can only operate in full-duplex mode. The twisted-pair ports are IEEE 802.3u-compliant and Auto-Negotiate the duplex mode setting.

You can disable Auto-Negotiation on the ports and set the duplex mode manually.

Note

Switch ports that are connected to 10 or 100 Mbps end nodes that are not using Auto-Negotiation should not use Auto-Negotiation to set their speed and duplex mode settings, because duplex mode mismatches might occur. You should disable Auto-Negotiation and set the speed and duplex mode settings manually with the AlliedWare Plus Operating System.

Note

The ports on the AT-SBx81GT40 Line Card only support full-duplex mode.

Maximum Distance

The ports have a maximum operating distance of 100 meters (328 feet).

Cable Requirements

The cable requirements for the ports on the AT-SBx81GT24 and AT-SBx81GT40 Line Cards are listed in Table 11.

Table 11. Twisted Pair Cable for the AT-SBx81GT24 and AT-SBx81GT40 Line Cards

Cable Type	10Mbps	100Mbps	1000Mbps
Standard TIA/EIA 568-B-compliant Category 3 shielded or unshielded cabling with 100 ohm impedance and a frequency of 16 MHz.	Yes	Yes	No
Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) shielded or unshielded cabling with 100 ohm impedance and a frequency of 100 MHz.	Yes	Yes	Yes
Standard TIA/EIA 568-B-compliant Category 6 or 6a shielded cabling.	Yes	Yes	Yes

Note

Patch cables for the AT-SBx81GT40 Line Card, in lengths of 1 meter and 3 meters with RJ point 5 and RJ-45 connectors, are available from Allied Telesis. Contact your Allied Telesis sales representative for information.

The cable requirements for the PoE ports on the AT-SBx81GP24 Ethernet Line Card are given in Table 12 on page 49.

Table 12. Twisted Pair Cable for the AT-SBx81GP24 Line Card

Cable Type	10Mbps			100Mbps			1000Mbps		
	Non-PoE	PoE	PoE+	Non-PoE	PoE	PoE+	Non-PoE	PoE	PoE+
Standard TIA/EIA 568-B-compliant Category 3 shielded or unshielded cabling with 100 ohm impedance and a frequency of 16 MHz.	Yes	No	No	Yes	No	No	No	No	No
Standard TIA/EIA 568-A-compliant Category 5 shielded or unshielded cabling with 100 ohm impedance and a frequency of 100 MHz.	Yes	Yes	No	Yes	Yes	No	Yes	No	No
Standard TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) shielded or unshielded cabling with 100 ohm impedance and a frequency of 100 MHz.	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Standard TIA/EIA 568-B-compliant Category 6 or 6a shielded cabling.	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Automatic MDIX Detection

The 10/100/1000 Mbps twisted-pair ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards are IEEE 802.3ab compliant and feature automatic MDIX detection when operating at 10 or 100 Mbps. (Automatic MDIX detection does not apply to 1000 Mbps.) This feature automatically configures the ports to MDI or MDI-X depending on the wiring configurations of the end nodes.

Ports connected to network devices that do not support automatic MDIX detection default to MDIX.

You may disable automatic MDIX detection on the individual ports and configure the MDI/MDI-X settings manually with the POLARITY command.

Port Pinouts

Refer to Table 35 on page 247 for the pinouts of the twisted-pair ports when they operate at 10 or 100 Mbps in the MDI configuration and Table 36 on page 247 for the MDI-X configuration. For the port pinouts when they operate at 1000 Mbps, refer to Table 37 on page 248.

Power over Ethernet on the AT-SBx81GP24 Line Card

This section applies to the AT-SBx81GP24 PoE Line Card. The twisted-pair ports on the line card support Power over Ethernet (PoE). PoE is a mechanism by which the ports supply power to network devices over the twisted pair cables that carry the network traffic. This feature can simplify network installation and maintenance because it allows you to use the switch as a central power source for other network devices.

Devices that receive their power over Ethernet cables are called powered devices (PD), examples of which include wireless access points, IP telephones, web cams, and even other Ethernet switches. A PD connected to a port on the switch receives both network traffic and power over the same twisted-pair cable.

The AT-SBx81GP24 Line Card automatically determines whether a device connected to a port is a PD. A PD has a signature resistor or signature capacitor that the line card can detect over the Ethernet cabling. If the resistor or capacitor is present, the switch assumes that the device is a PD.

A port connected to a network node that is not a PD (that is, a device that receives its power from another power source) functions as a regular Ethernet port, without PoE. The PoE feature remains enabled on the port but no power is delivered to the device.

Powered Device Classes

The IEEE 802.3af and 802.3at standards define five powered device classes. The classes are defined by the power requirements of the powered devices. The classes are shown in Table 13. The AT-SBx81GP24 Line Card supports all five classes.

Table 13. IEEE802.3af and IEEE802.3at Powered Device Classes

Class	Usage	Maximum Power Output on the PoE Port	PD Power Range
0	Default	15.4W	.044W to 12.95W
1	Optional	4.0W	0.44W to 3.84W
2	Optional	7.0W	3.84W to 6.49W
3	Optional	15.4W	6.49W to 12.95W
4	Optional	30.0W	12.95W to 25.9W

Power Budget

The power for PoE on the ports on the AT-SBx81GP24 Line Card is provided by the AT-SBxPWRPOE1 Power Supply. It can provide up to 1200 watts of power for powered devices. You may install up to two power supplies in the chassis for a total of 2400 watts for the powered devices.

The number of powered devices the chassis can support at one time depends on the number of AT-SBxPWRPOE1 Power Supplies in the chassis and the power requirements of the powered devices in your network. Table 14 lists the maximum number of powered devices by class, for one or two power supplies. The numbers assume that the powered devices require the maximum amount of power for their classes.

Note

The maximum number of PoE ports in the SwitchBlade x8106 Switch is 240 ports.

Table 14. Maximum Number of Powered Devices

Class	Maximum Number of Ports with One PoE PSU (1200 W)	Maximum Number of Ports with Two PoE PSU's (2400 W)
0	77	155
1	240	240
2	171	240
3	77	155
4	40	80

PoE Wiring

The IEEE 802.3af and 802.3at standards define two methods for delivering power to powered devices over the four pairs of strands that comprise a standard Ethernet twisted-pair cable. The methods are called Alternatives A and B. In Alternative A, power is supplied to powered devices on strands 1, 2, 3, and 6, which are the same strands that carry the 10/100Base-TX network traffic. In Alternative B, power is delivered on strands 4, 5, 7, and 8. These are the unused strands.

Note

1000BASE-T cables carry the network traffic on all eight strands of the Ethernet cable.

The PoE implementation on the AT-SBx81GP24 Line Card is Alternative A. Power is transmitted on strands 1, 2, 3, and 6. Thus, the line card can support PDs that receive power using Alternative A.

PDs that comply with the IEEE 802.3af and 802.3at standards are required to support both power delivery methods. However, non-standard PDs and PDs that were manufactured before the completion of the IEEE 802.3af and 802.3at standards and that support only Alternative B will not work with the AT-SBx81GP24 PoE Line Card.

Chapter 3

AT-SBx81CFC400 Controller Fabric Card

This chapter describes the AT-SBx81CFC400 Controller Fabric Card in the following sections:

- ❑ “Controller Fabric Cards for the AT-SBx8106 Chassis” on page 54
- ❑ “Hardware Components of the AT-SBx81CFC400 Card” on page 56
- ❑ “Guidelines” on page 58
- ❑ “Dual Controller Cards” on page 60
- ❑ “SYS Status LEDs” on page 62
- ❑ “eco-friendly Button” on page 64
- ❑ “SBx Linecard Status LEDs” on page 65
- ❑ “Console (RS-232) Port” on page 66
- ❑ “Ethernet Management Port (NET MGMT)” on page 67
- ❑ “USB Port” on page 69
- ❑ “Reset Button” on page 70
- ❑ “AlliedWare Plus Software Releases for the Hardware Components” on page 72


Controller Fabric Cards for the AT-SBx8106 Chassis

There are two controller fabric cards for the AT-SBx8106 Chassis. The cards are listed here:

- ❑ AT-SBx81CFC400 Card
- ❑ AT-SBx81CFC960 Card

The controller fabric cards are shown in Figure 22.

AT-SBx81CFC400 Controller Fabric Card

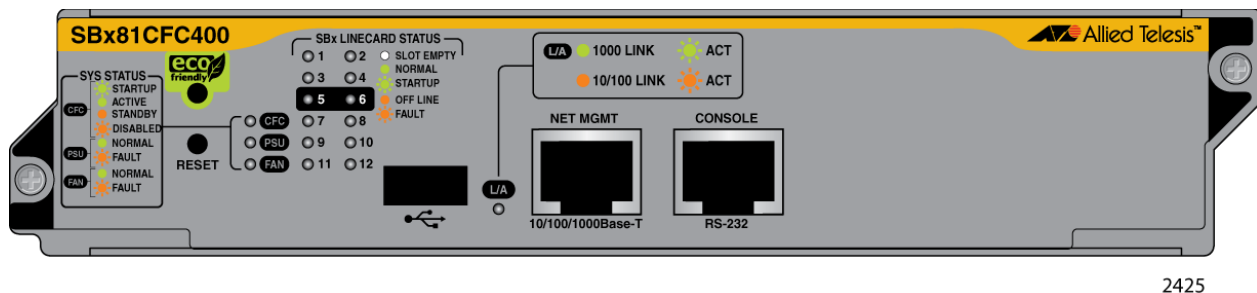

AT-SBx81CFC960 Controller Fabric Card

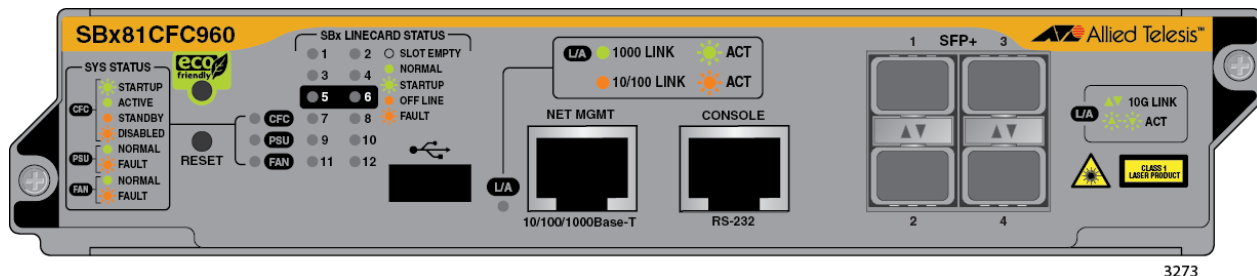


Figure 22. Controller Fabric Cards for the AT-SBx8106 Chassis

Two main differences between the controller cards are listed here:

- ❑ The AT-SBx81CFC960 Controller Fabric Card has four SFP+ slots. You may use the slots to add four additional networking ports to the chassis or to build a stack of two chassis with the VCStack Plus feature. The AT-SBx81CFC400 Controller Fabric Card does not have SFP+ slots and, consequently, does not support the VCStack Plus feature.
- ❑ The AT-SBx81CFC400 Card supports the five Ethernet line cards in Figure 10 on page 34. The AT-SBx81CFC960 Card supports the same cards, plus the AT-SBx81XS16 Card, which has sixteen slots for SFP+ transceivers. The AT-SBx81CFC400 Card does not support the AT-SBx81XS16 Card.

This manual describes the AT-SBx81CFC400 Controller Fabric Card. For information on the AT-SBx81CFC960 Card, refer to the *SwitchBlade x8106 Chassis Switch and AT-SBx81CFC960 Card Installation Guide*.

Note

You may not install both types of controller cards in the same chassis. When installing two controller cards in a chassis, be sure both cards are the same type.

Hardware Components of the AT-SBx81CFC400 Card

The components on the AT-SBx81CFC400 Controller Fabric Card are identified in Figure 23 and briefly described in Table 15.

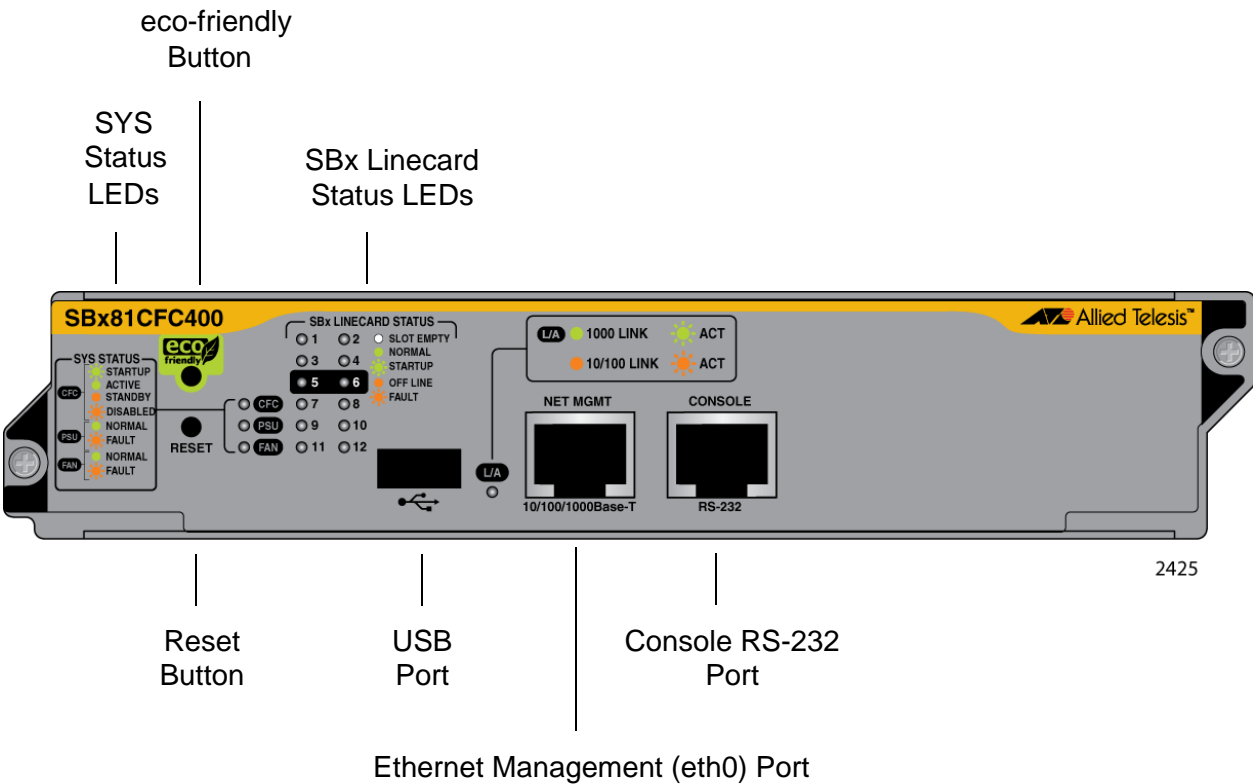


Figure 23. AT-SBx81CFC400 Controller Fabric Card

Table 15. Components on the AT-SBx81CFC400 Controller Fabric Card

Component	Description
SYS Status LEDs	Displays general status information about the controller card, power supplies, and fan module. For more information, refer to “SYS Status LEDs” on page 62.
eco-friendly Button	Turns the LEDs on and off. For more information, refer to “eco-friendly Button” on page 64.
SBx Linecard Status LEDs	Displays general information about the controller and Ethernet line cards. For more information, refer to “SBx Linecard Status LEDs” on page 65.

Table 15. Components on the AT-SBx81CFC400 Controller Fabric Card

Component	Description
Console RS-232 Port	Provides local management of the switch. The switch does not require an IP address for local management. For more information, refer to “Console (RS-232) Port” on page 66.
NET MGMT (eth0) Port	Provides maintenance access to the controller card. For more information, refer to “Ethernet Management Port (NET MGMT)” on page 67.
USB Port	Used with a USB flash memory drive for management functions, such as storing backup copies of the switch configuration or transferring configurations between switches. For more information, refer to “USB Port” on page 69.
Reset Button	Resets the controller and Ethernet line cards. For more information, refer to “Reset Button” on page 70.

Guidelines

Here are some of the functions of the controller card:

- ❑ Chassis Management — The controller card is used to monitor and configure the parameter settings on the Ethernet line cards. The controller card supports local management sessions through the Console RS-232 port and remote management sessions with Telnet, Secure Shell (SSH), or SNMP clients on workstations on your network.
- ❑ Management software — The controller card stores its own management software as well as the management software for the Ethernet line cards. It downloads the firmware to the cards over the backplane in the chassis when the chassis is powered on or reset, as part of the initialization process.
- ❑ Configuration Settings — The controller card also maintains a configuration database in which it stores its own settings as well as the settings of the Ethernet line cards. When a change is made to a configuration setting on a line card, the controller card transmits the change over the backplane to the appropriate line card and updates its configuration database. The database is retained even when the chassis is powered off because controller card stores it in nonvolatile memory. You may download the database to a management workstation or network server to maintain a history of configurations or to transfer a configuration to multiple chassis.
- ❑ Backplane Control — The chassis has a backplane. The Ethernet line cards use the backplane to forward traffic to each other when the ingress and egress ports of packets are located on different cards. The backplane is managed by the controller card. The bandwidth of the backplane depends on the number of controller cards in the chassis. Each line card slot has up to 40Gbps of backplane bandwidth when the chassis has one AT-SBx81CFC400 Controller Fabric Card and up to 80Gbps with two controller cards.

Here are the guidelines to the controller card:

- ❑ The chassis must have at least one controller card. The line cards do not forward traffic if the chassis does not have at least one controller card.
- ❑ The chassis can have either one or two controller cards.
- ❑ Two controller cards are recommended for redundancy and to increase the per slot backplane bandwidth from 40 to 80Gbps.
- ❑ The controller cards are installed in slots 5 and 6 in the chassis.

Here are other features of the controller card:

- ❑ LEDs for monitoring the status of the Ethernet line cards.
- ❑ Power-saving eco-friendly button for turning the port and status LEDs on and off on the line cards and control cards.
- ❑ Reset switch for resetting the chassis.
- ❑ SD card slot for data storage and retrieval.
- ❑ Console RS-232 for local management.
- ❑ NET MGMT port and inband interface for remote Telnet, SSH, and SNMP management.
- ❑ Hot swappable.

Dual Controller Cards

You may install either one or two controller cards in the chassis. Here are the advantages to having two controller cards in the chassis.

- ❑ Having a second controller card improves the performance of the chassis by increasing the backplane bandwidth for the Ethernet line cards. Two controller cards increase the bandwidth for each slot to up to 80 Gbps.
- ❑ Installing a second controller card adds redundancy. If a controller card fails in the chassis, the second card enables the Ethernet line cards to maintain network operations.

Here are the guidelines to dual controller cards:

- ❑ One card operates as the active master card and the other as the standby master card. You can determine the state of a controller card by the M/S LED. For information, refer to “SYS Status LEDs” on page 62.
- ❑ The controller cards automatically determine their states when the chassis is powered on or reset. The card that boots up first is designated as the active master card. If both cards boot up at the same time, the card in slot 5 is designated as the active master card.
- ❑ All management sessions have to be conducted through the active controller card.
- ❑ You have to use the Console RS-232 port on the active controller card to establish a local management session with the chassis.
- ❑ When the chassis is powered on or reset, the two controller cards perform an initialization process, part of which involves the inactive card synchronizing its management files with the active card. During this phase of the initialization process, which may take several minutes, the inactive card does not participate with the active card in forwarding traffic over the backplane and its SFP+ slots are nonfunctional. After the inactive card has finished the initialization process, it joins with the active card in forwarding traffic on the backplane and activates its SFP+ slots. For more information, refer to “Monitoring the Initialization Process” on page 187.

Two controller cards provide an active/active architecture. The packet processors on both controller cards are fully utilized, doubling the available backplane bandwidth to up to 80Gbps per line card slot.

One of the controller cards becomes the active master. In normal operations, this is the controller card in slot 5. The active master manages the system and processes CPU bound network traffic. The standby master runs all network protocol modules and is kept in sync with the active master card, so as to be available in hot-standby for near instantaneous fail over, if required.

If the active master card is hot-swapped out, the standby master becomes the active master. It takes over all control functions almost instantaneously. Testing has shown no noticeable disruption to streaming video.

You can determine the state of the controller card by viewing the CFC LED on the card. The controller card is the active master when the LED is solid green and the standby master when the LED is solid amber.

SYS Status LEDs

The SYS (System) Status LEDs on the controller fabric card display general status information about the controller card, power supplies, and fan module. The LEDs are defined in Table 16 on page 62.

Table 16. SYS (System) Status LEDs

LED	State	Description
CFC	Solid Green	Indicates that the AT-SBx81CFC400 Controller Fabric Card is operating normally as the active master controller card.
	Flashing Green	Indicates that the controller card is initializing its management software or synchronizing its database with the active master controller card.
	Solid Amber	Indicates that the controller card is operating normally as the standby master controller card.
	Flashing Amber	Indicates that the controller card is disabled. An active master controller card might disable a standby master controller card if the two cards have incompatible versions of the management software and are unable to resolve the problem, possibly because of insufficient free flash memory.
PSU	Solid Green	Indicates that the power supplies are operating properly.
	Flashing Amber	<p>Indicates that a power supply is experiencing a problem. Possible causes are:</p> <ul style="list-style-type: none"> ❑ The input AC voltage from a power source is not within the normal operating range of a power supply module. ❑ The output DC voltage from a power supply module to the line cards is not within the normal operating range. ❑ A power supply is experiencing high temperature. ❑ A power supply has failed. <p>Check the status LEDs on the individual power supply modules to determine which module has a fault condition.</p>

Table 16. SYS (System) Status LEDs (Continued)

LED	State	Description
FAN	Solid Green	Indicates that the fan module is operating properly.
	Flashing Amber	Indicates that the fan module has a problem. The fans are operating below the normal operating range or have stopped.

eco-friendly Button

You may use the eco-friendly button on the controller card to turn the LEDs on or off. You may turn off the LEDs when you are not using them to monitor the control and Ethernet line cards, to conserve electricity. When the LEDs are off, the overall power consumption of the chassis is slightly reduced, approximately 3 watts in a system with 240 active copper ports.

The button controls all of the port LEDs on the Ethernet line cards and controller card, except for the CFC LED, which is always on, and the L/A LED for the NET MGMT port. The button does not control the LEDs on the fan module and power supply systems.

SBx Linecard Status LEDs

The SBx Linecard Status LEDs display general status information about the Ethernet line cards and controller cards. There is one LED for each slot. LEDs 1 to 6 correspond to slots 1 to 6 in the AT-SBx8106 Chassis. LEDs 7 to 12 are not used. If the chassis has two controller cards, the SBx Status LEDs on both cards are active. The LEDs are defined in Table 17.

Table 17. SBx Linecard Status LEDs

LEDs	State	Description
1 to 12	Off	Indicates that the slot is empty.
	Solid Green	Indicates that the Ethernet line or controller card is operating normally.
	Flashing Green	Indicates that the card is booting up, running in test mode, or loading its configuration settings.
	Solid Amber	<p>Indicates that the card is in an off-line state. Possible causes are:</p> <ul style="list-style-type: none"> ❑ An Ethernet line card with this LED state may have encountered a problem initializing the management software. ❑ An Ethernet line card that displays this LED state might not be able to boot up because the controller card does not have the appropriate load file and needs to be updated to the most recent release of the AlliedWare Plus Operating System. ❑ A standby master controller card that displays this LED state may have been disabled by the active master controller card because the cards have incompatible versions of the AlliedWare Plus Operating System and were unable to resolve the problem, possibly because of insufficient free flash memory. <p>You may remove a line or controller card from the chassis when it is in this state.</p>
	Flashing Amber	Indicates that the card is reporting a fault condition. Use the management commands to determine the specific problem.

Console (RS-232) Port

The Console Port is used to conduct local management sessions with the switch. Local management sessions are established with a terminal or PC with a terminal emulation program, and the management cable that comes with the card.

Local management is not conducted over a network. Consequently, the AT-SBx81CFC400 Controller Fabric Card does not need an Internet Protocol (IP) address for this type of management.

Your initial management session with the switch must be a local management session. For instructions on how to start a local management session, refer to “Using Local Management to Verify the Chassis” on page 194 or the Software Reference for SwitchBlade x8100 Series Switches.

Ethernet Management Port (NET MGMT)

The controller card uses the NET MGMT port as a separate routed eth0 interface. The interface is not part of the switching matrix of the Ethernet line cards, but the CPU on the controller card can route traffic in or out of the port from the line cards.

Here are the guidelines to using the port:

- ❑ The port should only be used for initial configuration and maintenance access to the chassis.
- ❑ If the chassis has two controller cards, you must use the NET MGMT port on the active controller card to access the switch. The NET MGMT port on the standby controller card is inactive. To determine the status of the controller cards, refer to the CFC LEDs, described in Table 16 on page 62.
- ❑ The NET MGMT port has a standard RJ-45 8-pin connector and operates at 10, 100, or 1000 Mbps in either half- or full-duplex mode.
- ❑ The cable requirements for the port are the same as the ports on the AT-SBx81GT24 Line Card, listed in Table 11 on page 48. For the port pinouts, refer to “Port Pinouts” on page 247.
- ❑ The default setting for the port is Auto-Negotiation, which sets the speed and duplex mode automatically. You may disable Auto-Negotiation and configure the port manually.
- ❑ The wiring configuration of the NET MGMT port is set automatically with automatic MDIX detection. You may disable automatic MDIX detection and set the wiring configuration manually.
- ❑ The port is referred to as eth0 in the management software.

For instructions on how to configure the NET MGMT port, refer to the Software Reference for SwitchBlade x8100 Series Switches.

NET MGMT LED

The Network Management (NET MGMT) port on the AT-SBx81CFC400 Controller Fabric Card has one Status LED, described in Table 18 on page 68.

Table 18. NET MGMT Port LED

LED	State	Description
L/A	Solid Green	The port has a valid 1000 Mbps link.
	Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
	Solid Amber	The port has a valid 10 or 100 Mbps link.
	Flashing Amber	The port is transmitting or receiving data at 10 or 100 Mbps.
	Off	The port has not established a link to a network device.

USB Port

The USB port supports a flash drive. You may use a flash drive to perform the following management functions:

- ❑ Use Allied Telesis Management Framework to provide a centralized network backup location.
- ❑ Store backup copies of the configuration files on the AT-SBx81CFC400 Controller Fabric Card.
- ❑ Transfer configuration files between controller cards in different chassis that are to have similar configurations.
- ❑ Transfer release and GUI files between controller cards.
- ❑ Store or transfer log files.
- ❑ Store or transfer debug files (for example, the output of the `SHOW TECH-SUPPORT` command).
- ❑ Boot the AlliedWare Plus Operating System and master configuration file from flash drive.

The port is compatible with USB v1.0 and v2.0 flash drives. Operating the controller card with a flash drive is optional.

Reset Button

You may use the Reset button to reset either the controller card or all of the cards in the chassis. The action depends on the number of AT-SBx81CFC400 Controller Cards in the chassis and, if the chassis has two controller cards, whether you reset the active or standby master controller card.

The possible actions are described here:

- ❑ If the chassis has only one controller card, pressing the Reset button resets the controller card and all of the Ethernet line cards in the chassis. You may perform this function if the chassis and line cards are experiencing a problem.



Caution

The controller and Ethernet line cards do not forward network traffic for about three minutes while they initialize the AlliedWare Plus Operating System and configure their parameter settings. Some network traffic may be lost.

- ❑ If the chassis has two controller cards, pressing the Reset button on the active master controller card resets the controller card, but not the Ethernet line cards. The standby master controller card immediately becomes the new active master card and the Ethernet line cards continue to forward traffic. The reset controller card is unavailable for about two minutes while it initializes its AlliedWare Plus Operating System, after which it becomes the standby master controller card in the chassis.

Note

The available bandwidth of the backplane in the chassis is reduced for about one minute while the reset controller card initializes its management software. This may reduce network performance.

- ❑ If the chassis has two controller cards, pressing the Reset button on the standby master controller card resets that card, but not the active master controller card or the Ethernet line cards.

Note

The available bandwidth of the backplane in the chassis is reduced for about one minute while the standby master controller card initializes its management software and synchronizes its database with the active master controller card. This may reduce network performance.

Note

To reset individual line cards in the chassis, use the REBOOT or RELOAD command in the AlliedWare Plus Operating System.

AlliedWare Plus Software Releases for the Hardware Components

Table 19 lists the releases of the AlliedWare Plus Operating System for the hardware components of the SwitchBlade x8106 product.

Table 19. AlliedWare Plus Operating System Releases for the Hardware Components

Model Number	Initial Release
AT-SBx8106 Chassis	5.4.2
AT-SBx81GT24 Line Card	5.4.2
AT-SBx81GT40 Line Card	5.4.3
AT-SBx81GP24 Line Card	5.4.2
AT-SBx81GS24a Line Card	5.4.2
AT-SBx81XS6 Line Card	5.4.2
AT-SBx81CFC400 Controller Card	5.4.2
AT-SBxPWRSYS1 AC System Power Supply	5.4.2
AT-SBxPWRSYS2 AC System Power Supply	5.4.5-1
AT-SBxPWRPOE1 PoE Power Supply	5.4.2
AT-SBxPWRSYS1 DC System Power Supply	5.4.3
AT-SBxFAN12 Fan Module	5.4.2

Chapter 4

Safety Precautions and Site Requirements


This chapter contains the safety precautions and guidelines for selecting a site for the chassis. The chapter contains the following sections:

- ❑ “Reviewing Safety Precautions” on page 74
- ❑ “Selecting a Site for the SwitchBlade x8112” on page 78
- ❑ “Installation Tools and Material” on page 80

Reviewing Safety Precautions


Please review the following safety precautions before you begin to install the switch.

Note

The  indicates that a translation of the safety statement is available for viewing in portable document format (PDF) titled **Translated Safety Statements** from our web site at www.alliedtelesis.com/support.




Warning

Class 1 Laser product.  L1

 


Warning

Do not stare into the laser beam.  L2




Warning

To prevent electric shock, do not remove the cover. No user-serviceable parts inside. This unit contains hazardous voltages and should only be opened by a trained and qualified technician. To avoid the possibility of electric shock, disconnect electric power to the product before connecting or disconnecting the LAN cables.  E1




Warning

Do not work on equipment or cables during periods of lightning activity.  E2




Warning


Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord.  E3




Warning

Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts.  E4


Note

Pluggable Equipment. The socket outlet shall be installed near the equipment and shall be easily accessible.  E5


**Caution**

Air vents must not be blocked and must have free access to the room ambient air for cooling.  E6


**Warning**

Operating Temperature. This product is designed for a maximum ambient temperature of 40° degrees C.  E7


Note

All Countries: Install product in accordance with local and National Electrical Codes.  E8

**Warning**


When installing this equipment, always ensure that the frame ground connection is installed first and disconnected last.  E11

**Caution**

Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.  E21

**Caution**

Risk of explosion if battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Attention: Le remplacement de la batterie par une batterie de type incorrect peut provoquer un danger d'explosion. La remplacer uniquement par une batterie du même type ou de type équivalent recommandée par le constructeur. Les batteries doivent être éliminées conformément aux instructions du constructeur.  E22



Warning

Mounting of the equipment in the rack should be such that a hazardous condition is not created due to uneven mechanical loading. *See* E25



Warning

Remove all metal jewelry, such as rings and watches, before installing or removing a line card from a powered-on chassis. *See* E26



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. *See* E28



Warning

This unit might have more than one power cord. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. *See* E30

Note

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (T_{mra}). *See* E35



Caution

Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. *See* E36




Warning

Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuits (e.g., use of power strips). *See* E37




Warning

To reduce the risk of electric shock, the PoE ports on this product must not connect to cabling that is routed outside the building where this device is located.  E40




Warning

This product may have multiple AC power cords installed. To de-energize this equipment, disconnect all power cords from the device.  E43




Caution

An Energy Hazard exists inside this equipment. Do not insert hands or tools into open chassis slots or sockets.  E44




Warning

This equipment shall be installed in a Restricted Access location.  E45



Warning

High Leakage Current exists in this chassis. Connect external ground wire before connecting AC power supply(s).  E46

Selecting a Site for the SwitchBlade x8112

Please perform the following procedure to determine the suitability of the site for the chassis:

1. Verify that the equipment rack is safely secured so that it will not tip over. You should install devices starting at the bottom of the rack, with the heavier devices near the bottom.
2. Verify that the power outlets for the chassis are located near the unit and are easily accessible.
3. Verify that the power sources are on different A/C circuits to protect the unit from a power circuit failure.
4. Verify that the site has dedicated power circuits or power conditioners to supply reliable electrical power to the network devices.
5. Verify that the site allows for easy access to the ports on the front of the chassis so that you can easily connect and disconnect the network cables, as well as view the unit's LEDs.
6. Verify that the site allows for adequate air flow around the unit and through the cooling vents. The ventilation direction for the main section of the chassis is from left to right (when facing the front of the chassis), with the fan module drawing air out of the chassis. The power supplies have fans that draw air from the front to the back.
7. Verify that the site has a reliable and earth (grounded) power supply source, preferably dedicated and filtered.
8. Verify that the twisted pair cabling is not exposed to sources of electrical noise, such as radio transmitters, broadband amplifiers, power lines, electric motors, and fluorescent fixtures.
9. Verify that the site protects the chassis from moisture, water, and dust.

Here are other guidelines to consider:

- ☐ Switch ports are suitable for intra-building connections, or where non-exposed cabling is required.
- ☐ Do not place objects on top of the chassis.
- ☐ The power cords provided with the AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies for 100-125 VAC installations have 20 Amp, 125 V NEMA 5-20P plugs. The plugs are only compatible with NEMA 5-20R receptacles. See Figure 24 on page 79.

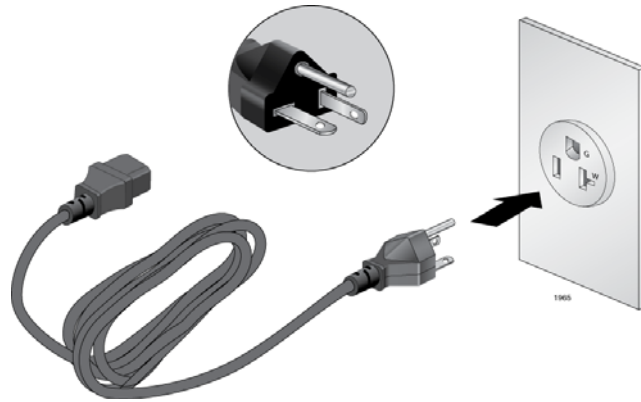


Figure 24. 100 - 125 VAC 125 V NEMA 5-20 Plug and Receptacle

Installation Tools and Material

Here are the installation tools and material you need to have to install the product.

Installing the chassis in an equipment rack requires the following items:

- ❑ #2 Phillips-head screwdriver
- ❑ Six equipment rack screws
- ❑ Flat-head screwdriver
- ❑ #2 Phillips-head 10 inch-lbs torque screwdriver (optional)

The grounding wire requires the following items:

- ❑ #2 Phillips-head screwdriver
- ❑ Crimping tool
- ❑ 10 AWG stranded grounding wire
- ❑ #2 Phillips-head 20 inch-lbs torque screwdriver (optional)

The AT-SBxPWRSYS1 DC Power Supply requires the following items:

- ❑ Two 8 AWG stranded power wires
- ❑ One 10 AWG stranded grounding wire
- ❑ 8 mm wrench
- ❑ #1 Phillips-head screwdriver
- ❑ #3 Phillips-head screwdriver
- ❑ #3 Phillips-head 30 to 40 inch-lbs torque screwdriver (optional)

The AT-SBx81CFC400 Controller Fabric Card and Ethernet line cards require the following items:

- ❑ #2 Phillips-head screwdriver
- ❑ #2 Phillips-head, 5 inch-lbs torque screwdriver (optional)

Chapter 5

Installing the Chassis in an Equipment Rack

This chapter describes how to install the AT-SBx8106 Chassis in an equipment rack. This chapter contains the following sections:

- ❑ “Required Tools and Material” on page 82
- ❑ “Preparing the Equipment Rack” on page 83
- ❑ “Unpacking the AT-SBx8106 Chassis” on page 86
- ❑ “Removing the Rubber Feet” on page 88
- ❑ “Adjusting the Equipment Rack Brackets” on page 90
- ❑ “Installing the Chassis in the Equipment Rack” on page 92
- ❑ “Removing the Shipping Brace” on page 96
- ❑ “Installing the Chassis Grounding Wire” on page 97

Required Tools and Material

Here is a list of the tools and screws for mounting the chassis in an equipment rack:

- ❑ #2 Phillips-head screwdriver
- ❑ Six equipment rack screws
- ❑ Flat-head screwdriver
- ❑ #2 Phillips-head 10 inch-lbs torque screwdriver (optional)

Here is a list of the tools and wire for installing the grounding wire on the chassis:

- ❑ #2 Phillips-head screwdriver
- ❑ Crimping tool
- ❑ 10 AWG stranded grounding wire
- ❑ #2 Phillips-head 20 inch-lbs torque screwdriver (optional)



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. *See* E30

Preparing the Equipment Rack

This section explains how to prepare the equipment rack for the chassis. The procedure requires the following items:

- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ Two equipment rack screws (not provided)

To prepare the equipment rack for the AT-SBx8106 Chassis, perform the following procedure:

**Caution**

The chassis is heavy and should be mounted as low as possible in the equipment rack to maximize vertical stability.

1. Reserve 190.0 mm (7.5") of vertical rack space for the installation of the AT-SBx8106 Chassis, as shown in Figure 25 on page 84.
2. Do not mount any equipment within 152.4 mm (6") above this space during installation. This additional vertical space is temporary and allows you enough room to lift and tilt the chassis into its position in the equipment rack without striking other equipment. You may use this additional space for other network equipment after the chassis is installed.

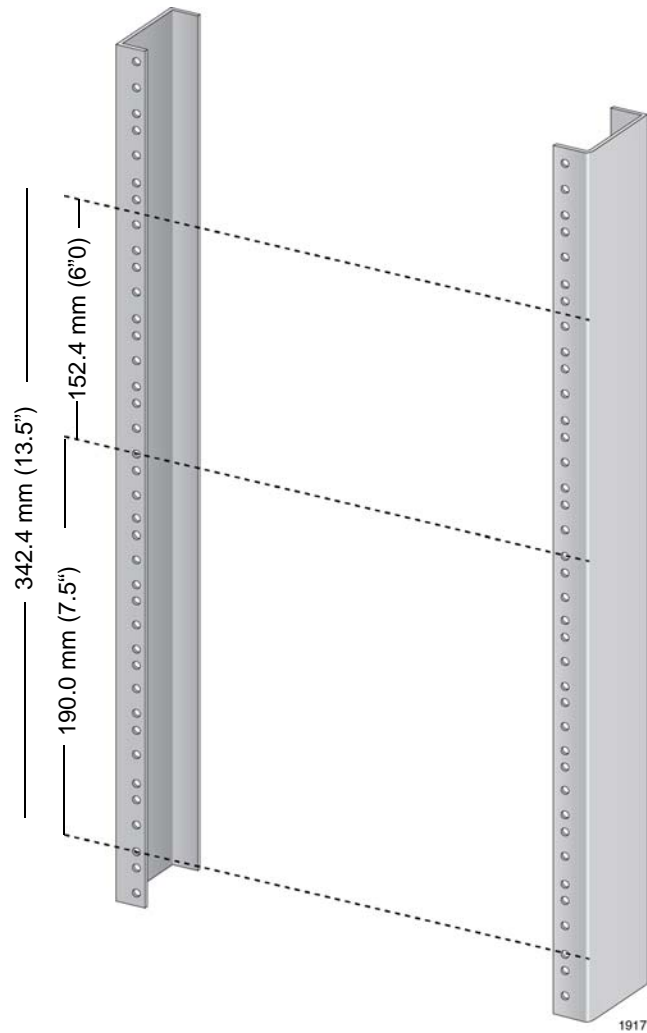


Figure 25. Reserving Vertical Rack Space

3. Identify the lowest 1/2" screw hole pattern on the rack mounting rails within the space reserved for the AT-SBx8106 Chassis.
4. Install one rack mount screw in each vertical rail, at the same height in the top screw hole of the lowest 1/2" hole pattern, as shown in Figure 26. The screws are used to support the chassis while you secure it to the rack. Do not fully tighten the screws at this time. The screw heads should protrude from the rack approximately 6.4 mm (.25 in).

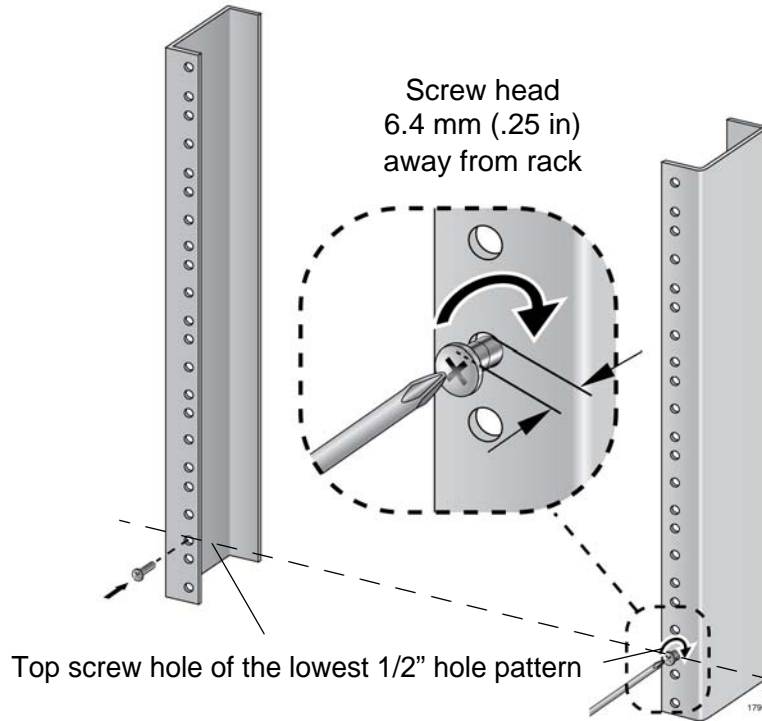



Figure 26. Rack Mounting Hole Locations

5. After installing the two screws in the equipment rack, go to “Unpacking the AT-SBx8106 Chassis” on page 86.

Unpacking the AT-SBx8106 Chassis

To unpack the AT-SBx8106 Chassis, perform the following procedure:

1. Remove all components from the shipping package.
2. Verify the contents of the shipping container by referring to Figure 27 here and Figure 28 on page 87. If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

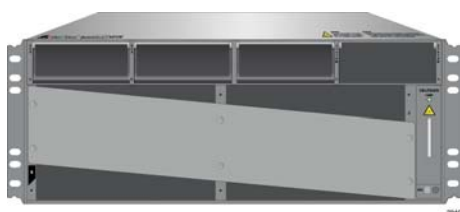

One AT-SBx8106 Chassis



One AT-SBxFAN06 Module pre-installed in the vertical slot on the right side of the front panel



Four blank line card slot covers



Three blank power supply slot covers pre-installed in power supply slots A to C on the front panel




One grounding lug pre-installed in the lower left corner on the back panel

Figure 27. Components of the AT-SBx8106 Chassis



Two equipment rack brackets pre-installed on the sides of the chassis.

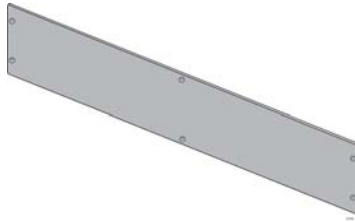

One shipping brace pre-installed diagonally across the line card slots on the front panel



One wrist strap

Figure 28. Components of the AT-SBx8106 Chassis (Continued)

Removing the Rubber Feet

The chassis comes with rubber feet on the base panel for tabletop installation, which is not recommended for this product. Allied Telesis recommends removing the feet before installing the chassis in the equipment rack. To remove the rubber feet, perform the following procedure:



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when lifting the chassis.

Note

Do not remove the shipping brace from the front of the chassis until after the unit is installed in the equipment rack. You might bend the chassis and cause misalignment of the slots and card guides if you lift the chassis without the shipping brace.

1. Place the unit upside down on a level, secure surface, as shown in Figure 29.

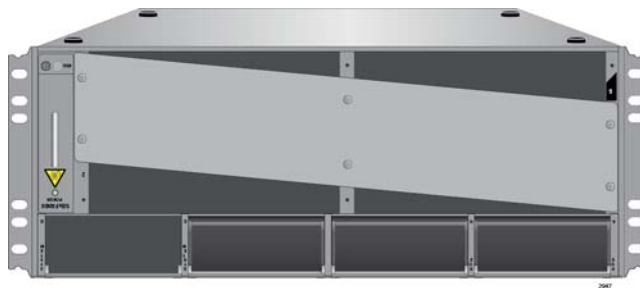


Figure 29. Turning the Chassis Upside Down

2. Using a flat-head screwdriver, pry the rubber feet from the bottom of the chassis, as shown in Figure 30 on page 89.



Figure 30. Removing the Rubber Feet

3. Turn the chassis over.
4. Go to the next procedure, “Adjusting the Equipment Rack Brackets” on page 90.

Adjusting the Equipment Rack Brackets

The chassis has two pre-installed equipment rack brackets. You may adjust the brackets so that the front of the chassis is flush with, extends beyond, or is recessed behind the front of the equipment rack. You may also install the brackets so that the rear panel of the chassis is flush with the front of the equipment rack.

You adjust the brackets by removing them and re-installing them in different positions on the sides of the chassis. The bracket positions are listed in Table 20 and illustrated in Figure 31 on page 91 and Figure 32 on page 91. Please review the following information before moving the brackets:

- ❑ Position A, the default position, positions the chassis so that the front of the unit is flush with the front of the equipment rack.
- ❑ Position B recesses the front of the chassis by 27.39 mm (1.1 in).
- ❑ Positions C to E extend the front of the chassis beyond the front of the rack from 27.39 mm (1.1 in) to 140.85 mm (5.545 in).
- ❑ Position F installs the chassis with the rear panel flush with the front of the equipment rack.
- ❑ To install the rack mount brackets in position “E,” you have to remove the two chassis screws from the bottom-middle section of the chassis and re-install them in front where the rack mount bracket screws were originally, as shown in Figure 31 on page 91.
- ❑ The dimension (X) between the front panel and the rack rails is given for each rack mounting bracket position in Table 20.

Table 20. Front Panel to Rack Rail Dimensions

Figure #	Front Panel Position	Dimension X Front Panel to Rack Rail
31	A (Factory Installed - Flush)	3.69 mm (0.145 in)
31	B (Recessed)	-27.39 mm (-1.078 in)
31	C	27.39 mm (1.078 in)
31	D	47.71 mm (1.878 in)
31	E	140.85 mm (5.545 in)
32	F (Reverse Position)	374.16 mm (14.731 in)

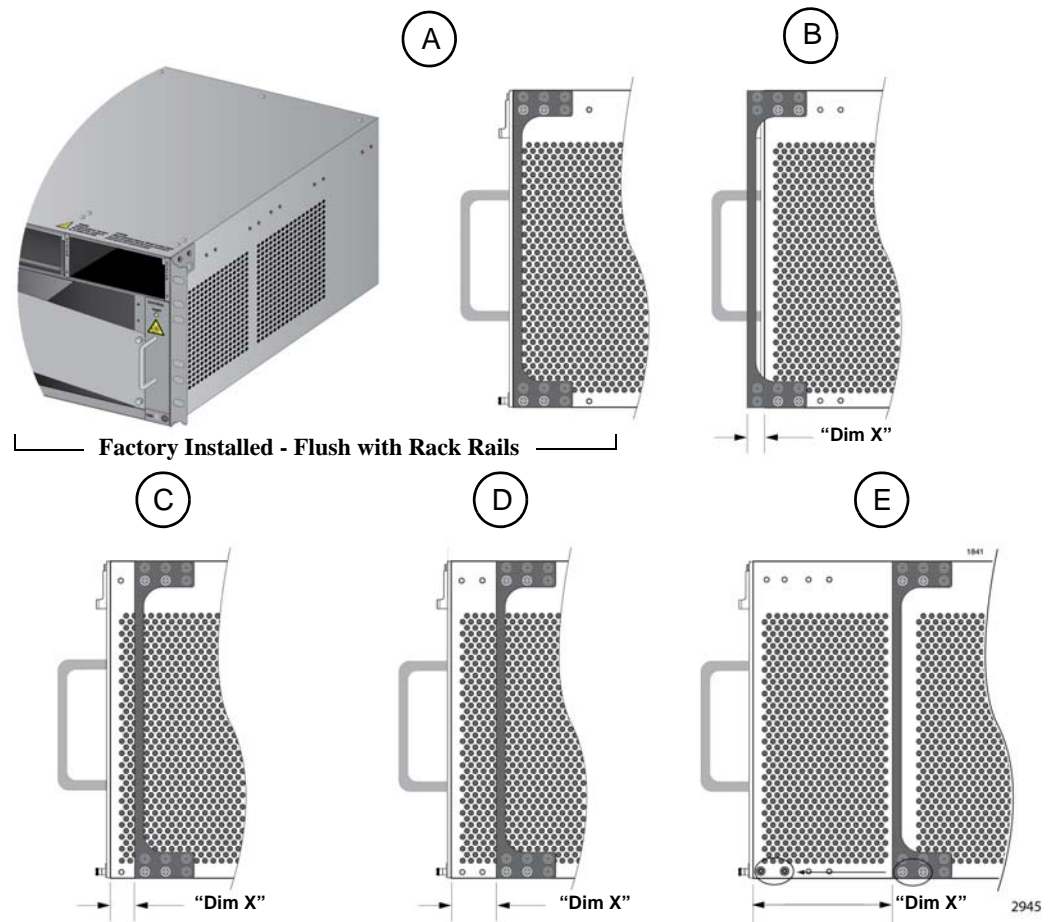


Figure 31. Rack Mounting Bracket Locations

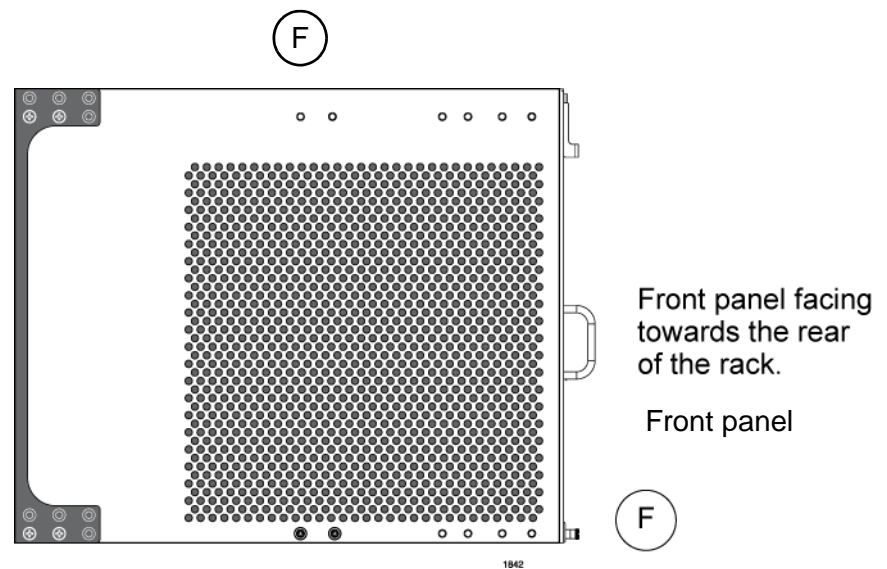


Figure 32. Rack Bracket Locations for Reverse Position of Chassis

Installing the Chassis in the Equipment Rack

The procedure in this section explains how to install the chassis in the equipment rack. The procedure requires the following items:

- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ Six equipment rack screws (not provided)
- ❑ #2 Phillips-head, 10 inch-lbs torque screwdriver (optional — not provided)



Caution

Do not remove the shipping brace from the front of the AT-SBx8106 Chassis until after the unit is securely mounted in the rack. The plate prevents twisting of the chassis frame and mechanical misalignment of the line card slots during shipping and installation.



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. *See* E30



Warning

To prevent injuring yourself or damaging the device, do not attempt to install the chassis in the equipment rack alone. Allied Telesis recommends a minimum of three people for this procedure.

Before installing the chassis in the rack, review the following checklist:

- ❑ Did you reserve sufficient space in the equipment rack for the chassis and install two screws in the rack on which to rest the chassis while securing it to the rack? If not, then perform “Preparing the Equipment Rack” on page 83.
- ❑ Did you adjust the brackets so that the front of the chassis will be positioned correctly in the equipment rack for your installation? If not, then perform “Adjusting the Equipment Rack Brackets” on page 90.

To install the AT-SBx8106 Chassis in the equipment rack, perform the following procedure:

1. While facing the front of the chassis, tilt the top of the chassis toward you.

2. Lift the AT-SBx8106 Chassis into the equipment rack and set the bottom of the equipment rack brackets firmly on the two equipment rack screws you installed in “Preparing the Equipment Rack” on page 83, as shown in Figure 33.

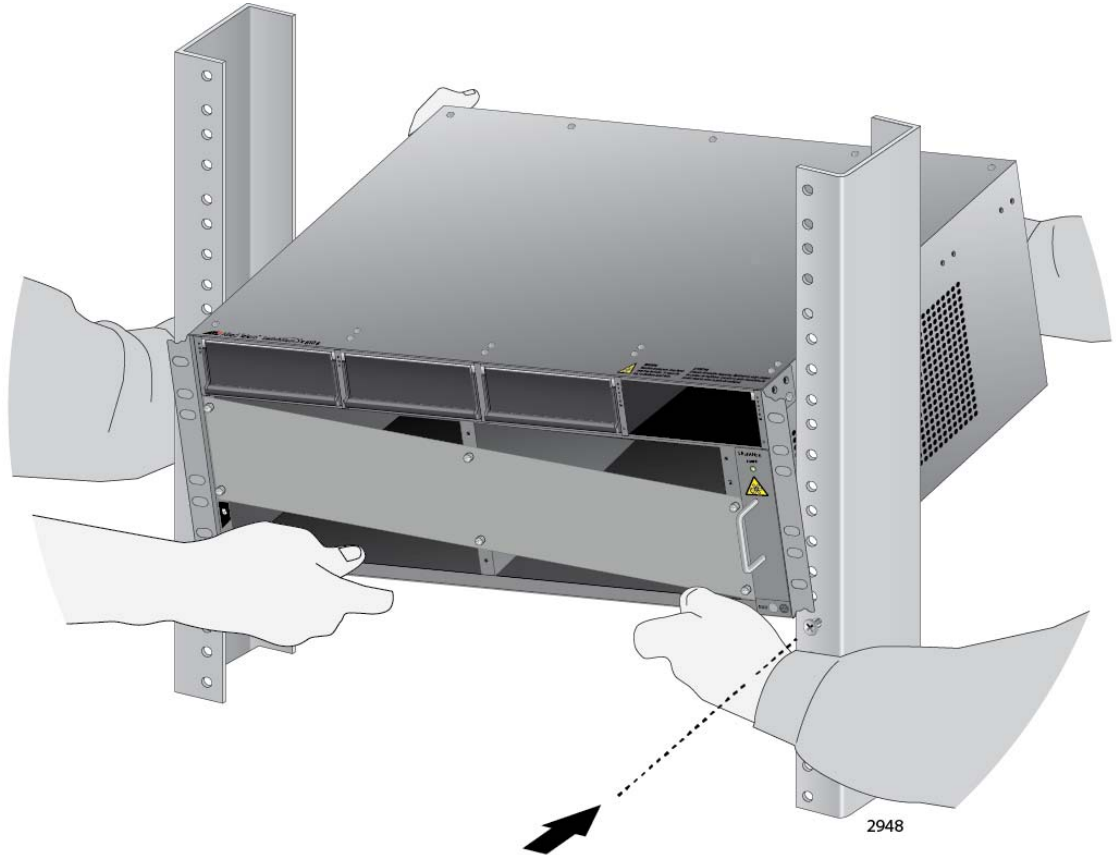


Figure 33. Lifting the AT-SBx8106 Chassis into the Equipment Rack

3. With the bottom of the rack mount ears resting on the two rack mount screws, tilt the top of the chassis back until both rackmount brackets are flush and parallel with the vertical rack rails.
4. Install four rack mount screws (not provided) to secure the chassis to the equipment rack, as shown in Figure 34 on page 94.

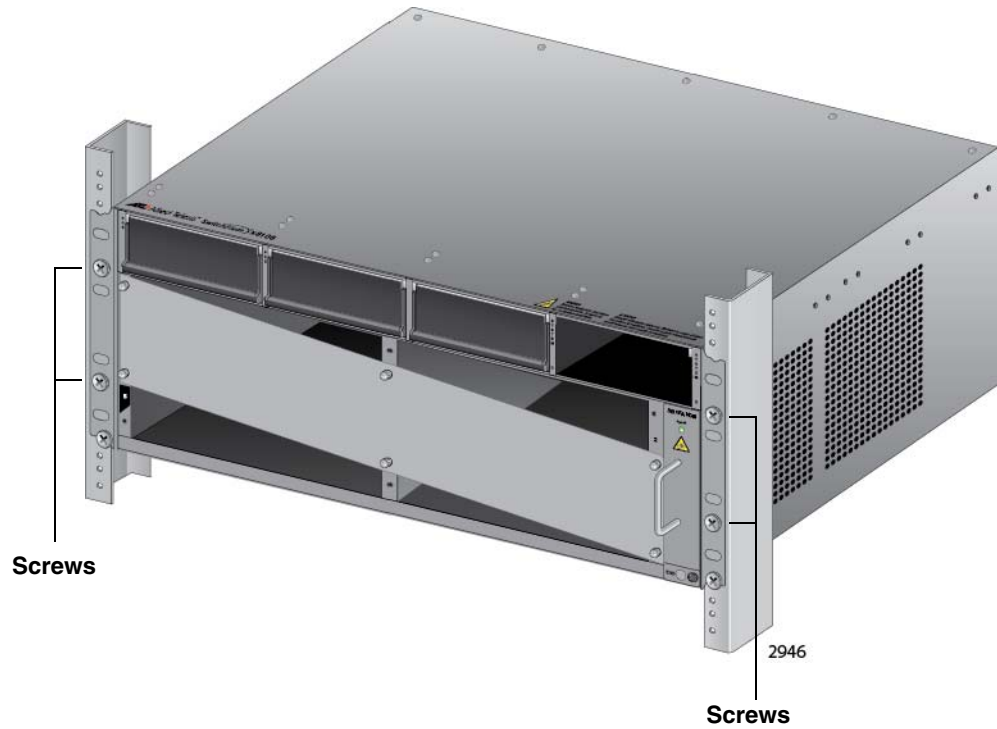


Figure 34. Installing the Rack Mount Screws

5. Tighten all six screws shown in Figure 35 on page 95 to secure the chassis to the equipment rack, Allied Telesis recommends tightening the screws to 10 inch-lbs.

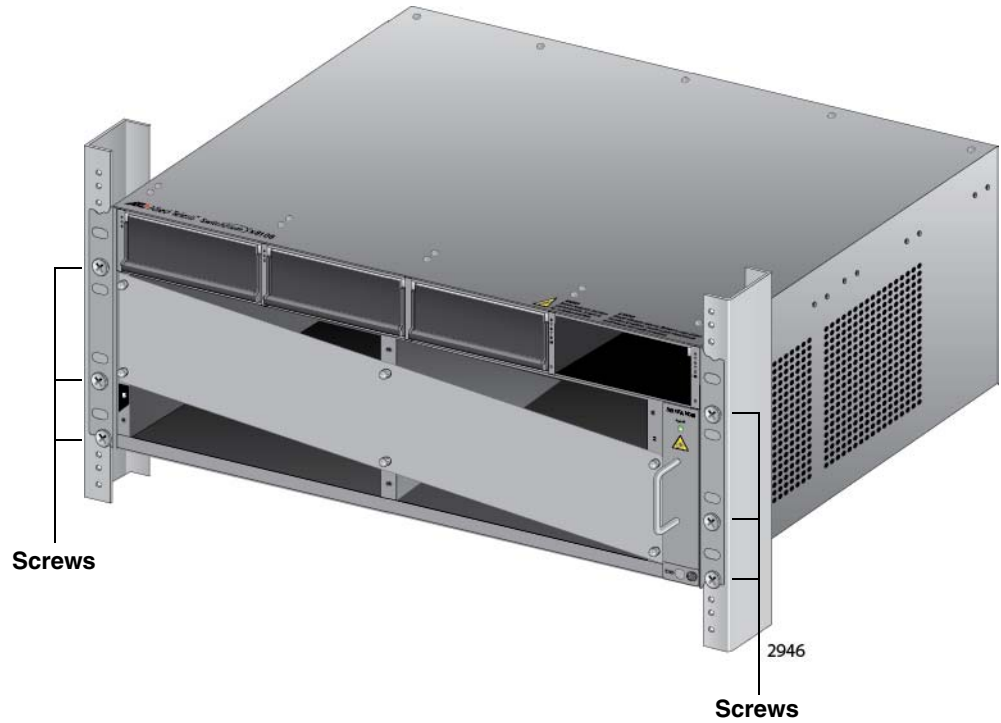


Figure 35. Tightening the Rack Mount Screws

6. Go to "Removing the Shipping Brace" on page 96.

Removing the Shipping Brace

Now that the chassis is installed in the equipment rack, you may remove the shipping brace from the front of the unit. To remove the shipping brace, remove the six mounting screws with a #2 Phillips-head screwdriver (not provided). Refer to Figure 36.

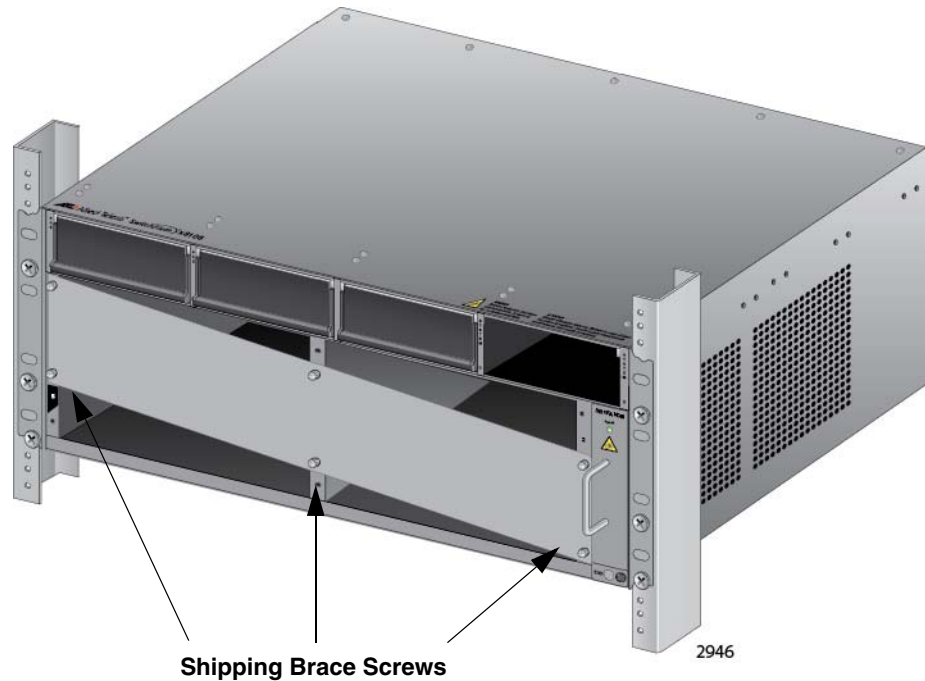


Figure 36. Removing the Shipping Brace

After removing the shipping plate, go to "Installing the Chassis Grounding Wire" on page 97.

Installing the Chassis Grounding Wire

This procedure explains how to connect a grounding wire to the chassis. The chassis requires a permanent connection for the line cards and power supplies to a good earth ground. The procedure requires the following items:

- ❑ Grounding lug (pre-installed on the rear panel of the chassis)
- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ Crimping tool (not provided)
- ❑ 10 AWG stranded grounding wire (not provided)
- ❑ #2 Phillips-head, 20 inch-lbs torque screwdriver (optional — not provided)

To connect the chassis to an earth ground, perform the following procedure:

1. Prepare an adequate length of stranded grounding wire (10 AWG) for the ground connection by stripping it as shown in Figure 37.

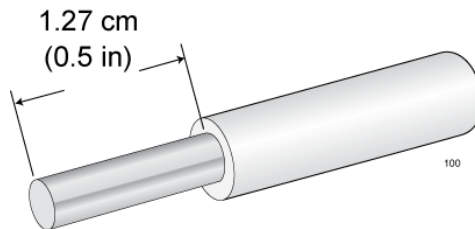


Figure 37. Stripping the Grounding Wire

2. Remove the two screws that secure the grounding lug to the rear panel of the chassis, as shown in Figure 38.

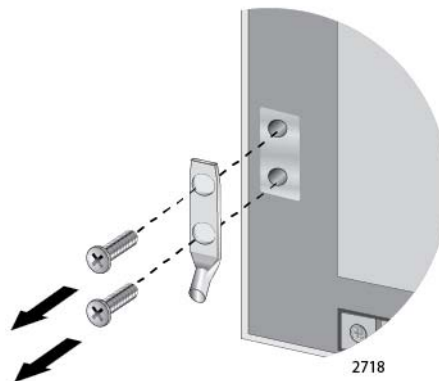


Figure 38. Removing the Grounding Lug

3. Insert one end of the grounding wire into the grounding lug, as shown in Figure 39, and use a crimping tool to secure the wire to the grounding lug.

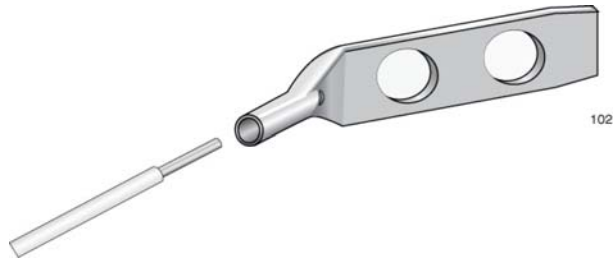


Figure 39. Attaching the Grounding Wire to the Grounding Lug

4. Install the grounding lug on the rear panel of the chassis, as shown in Figure 40.

Allied Telesis recommends tightening the screws to 20 inch-lbs.

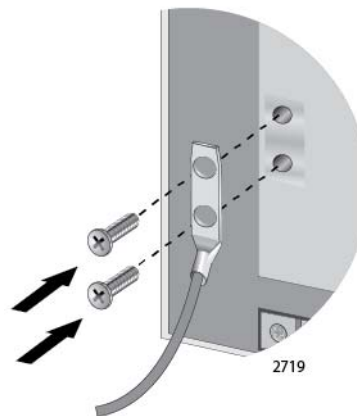


Figure 40. Installing the Grounding Lug and Wire

5. Connect the other end of the grounding wire to the building protective earth.
6. Go to Chapter 6, "Installing the Power Supplies" on page 99.

Chapter 6

Installing the Power Supplies

This chapter explains how to install the power supplies. It has the following sections:

- ❑ “Protecting Against Electrostatic Discharge (ESD)” on page 100
- ❑ “Installing AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies” on page 101
- ❑ “Installing AT-SBxPWRPOE1 PoE Power Supplies” on page 107
- ❑ “Installing AT-SBxPWRSYS1 DC System Power Supplies” on page 112

Protecting Against Electrostatic Discharge (ESD)

To protect the equipment from damage by Electrostatic Discharge (ESD) during the installation procedure, observe proper ESD protection when handling the SwitchBlade x8106 line cards and power supplies. You should be properly grounded with a wrist or foot strap.



Caution

Electrostatic Discharge (ESD) can damage the components on the SwitchBlade x8106 line cards and power supplies. Be sure to follow proper ESD procedures during the installation.

To guard against ESD, perform this procedure:

1. Verify that the chassis is electrically connected to earth ground.
2. Connect the wrist strap that comes with the chassis to the ESD socket in the bottom right corner of the AT-SBx8106 Chassis, shown in Figure 41. This ensures that ESD voltages safely flow to ground.



Figure 41. ESD Socket and Wrist Strap

3. When you put on the ESD-preventive wrist strap, be sure it makes good contact with your skin.

Installing AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies

The chassis must have at least one system power supply. You may install two system power supplies in the chassis for power redundancy. For background information, refer to “Power Supplies and Power Supply Slots” on page 24.



Caution

The electronic components in the power supply can be damaged by electro-static discharges (ESD). Follow the procedure in “Protecting Against Electrostatic Discharge (ESD)” on page 100 to guard against ESD damage when unpacking and installing the power supply.



Caution

The following procedure assumes that this is the initial installation of the chassis and that the chassis is powered off. However, if you are installing the AT-SBxPWRSYS2 Power Supply in an active, operational chassis, you should connect the AC power cord to the appropriate connector on the back panel of the unit before installing the power supply. Otherwise, the active master controller card might restart its operating system when you install the power supply. This might result in a temporary interruption of network operations of the chassis if the unit has only one controller card. This guideline does not apply to the AT-SBxPWRSYS1 AC or DC Power Supply or the AT-SBxPWRPOE1 Power Supply.

To install AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies, perform the following procedure:

1. Choose a slot in the chassis for the power supply.

System power supplies are installed in slots C and D in the chassis. Refer to Figure 42 on page 102. If you are installing only one power supply, you may install it in either slot, but Allied Telesis recommends slot D because the slot does not come with a blank power supply panel.

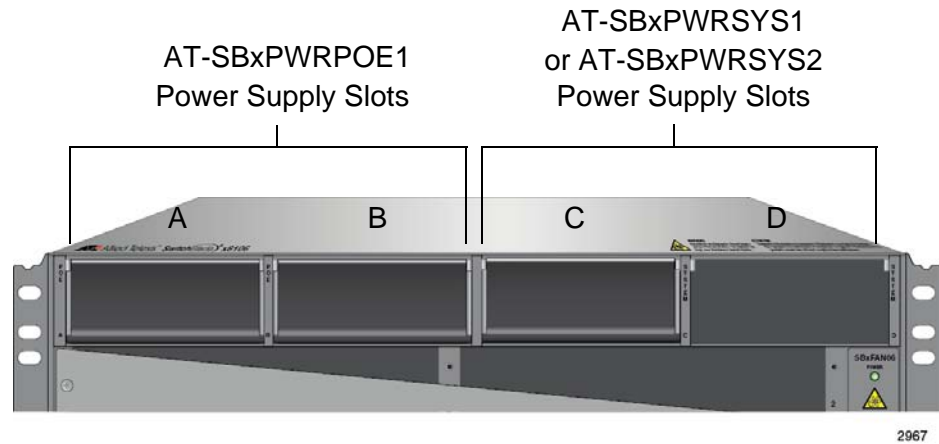


Figure 42. Power Supply Slots



Caution

The AT-SBxPWRSYS1 and AT-SBxPWRSYS2 Power Supplies will not work in slot A or B.

2. If the chassis already has a power supply in slot D, remove the blank power supply panel from slot C by lifting the blank panel handle and sliding it out of the slot, as shown in Figure 43.

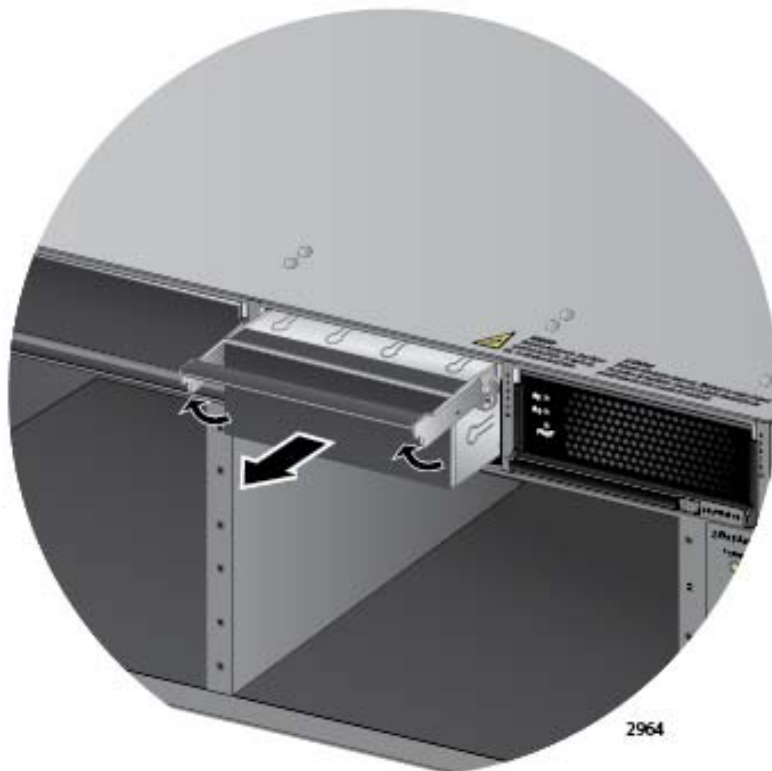


Figure 43. Removing the Blank Slot Cover from Power Supply Slot C

3. Remove the new power supply from the shipping package and verify the package contents, listed in Figure 44.

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.



Figure 44. Items Included with the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply

Note

Store the packaging material in a safe location. You must use the original shipping material if you need to return the unit to Allied Telesis.

Note

The tie wrap is used to secure the power cord to the chassis in "Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply" on page 155.

4. Move the locking handle on the power supply to the unlocked or up position. See Figure 45.



Figure 45. Unlocking the Handle on the Power Supply

5. Align and insert the power supply into the power supply slot. Figure 46 shows the power supply installed in slot D.



Figure 46. Inserting the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply

6. Lower the power supply locking handle to secure the power supply to the chassis, as shown in Figure 47.



Figure 47. Lowering the Handle on the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supply

Note

If the module does not fully seat in the chassis slot, check to be sure you are installing a system power supply and not a PoE power supply. The model name of the module is included on a label on the locking handle. For more information, refer to “Power Supplies and Power Supply Slots” on page 24.

7. To install a second system power supply, repeat this procedure.
8. After installing the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies, do one of the following:
 - ☐ If you purchased the AT-SBxPWRPOE1 Power Supply for the ports on the AT-SBx81GP24 PoE Line Cards, go to “Installing AT-SBxPWRPOE1 PoE Power Supplies” on page 107.
 - ☐ Otherwise, go to Chapter 7, “Installing the AT-SBx81CFC400 Controller and Ethernet Line Cards” on page 119.

Note

Retain the tie wrap that comes with the power supply. The tie wrap is used to secure the power cord to the chassis in “Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply” on page 155.

Installing AT-SBxPWRPOE1 PoE Power Supplies

This section contains the installation procedure for the AT-SBxPWRPOE1 Power Supply. The module provides the power for the PoE+ ports on the AT-SBx81GP24 PoE Line Card. For background information, refer to “Power Supplies and Power Supply Slots” on page 24.



Warning

The electronic components in the power supply can be damaged by electro-static discharges (ESD). Follow the procedure in “Protecting Against Electrostatic Discharge (ESD)” on page 100 to guard against ESD damage when unpacking and installing the power supply.

To install the power supply, perform the following procedure:

1. Choose a slot for the AT-SBxPWRPOE1 System Power Supply in the chassis.

You may install it in either slot A or B, shown in Figure 42 on page 102.

2. Raise the handle on the blank panel covering the selected slot and slide the panel from the chassis. Figure 48 on page 108 shows the blank panel being removed from slot A.



Figure 48. Removing the Blank Slot Cover from Power Supply Slot A

3. Remove the power supply from the shipping package and verify that the shipping package contains the items listed in Figure 49 on page 109.

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.



Figure 49. Items Included with the AT-SBxPWRPOE1 Power Supply Module

Note

Store the packaging material in a safe location. You must use the original shipping material if you need to return the unit to Allied Telesis.

Note

The tie wrap is used to secure the power cord to the chassis in “Powering On the AT-SBxPWRPOE1 Power Supply” on page 158.

4. Raise the locking handle on the AT-SBxPWRPOE1 Power Supply, as shown Figure 50 on page 110.

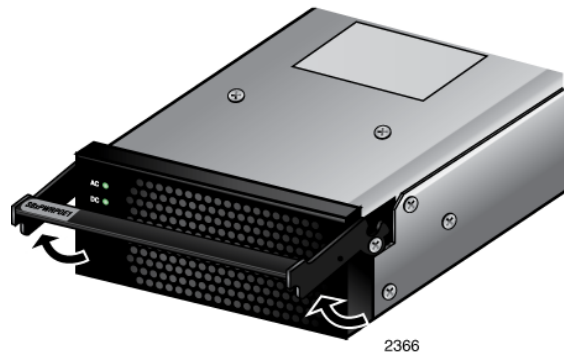


Figure 50. Unlocking the Handle on the AT-SBxPWRPOE1 Power Supply

5. Align and insert the AT-SBxPWRPOE1 Module into slot A or B.
Figure 51 shows the power supply module aligned in slot A.



Caution

The AT-SBxPWRPOE1 AC Power Supply will not work in slot C or D.

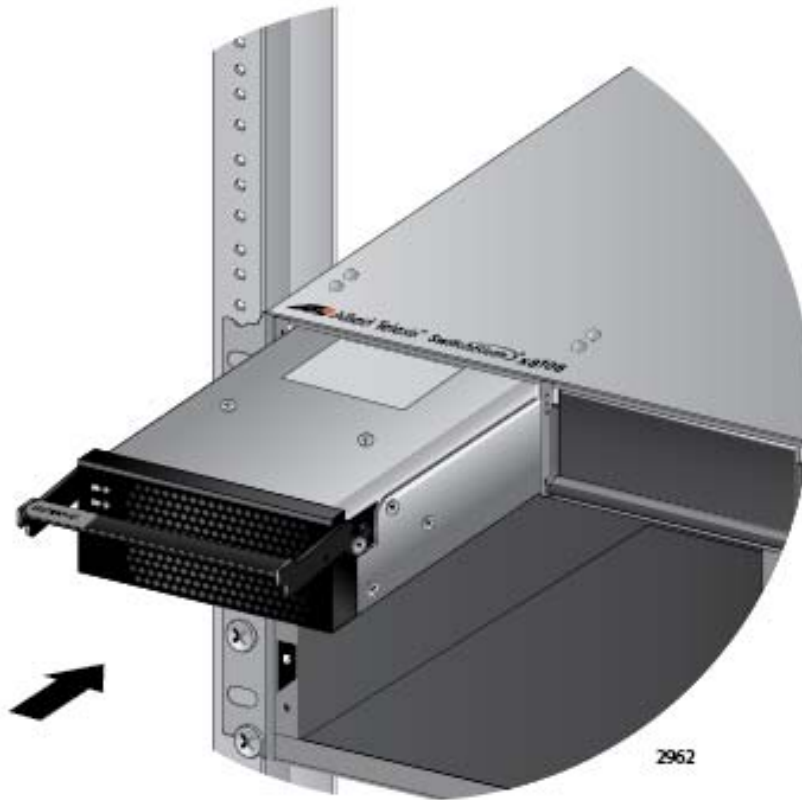


Figure 51. Inserting the AT-SBxPWRPOE1 Power Supply

6. Lower the locking handle of the power supply module to secure the module in the slot, as shown in Figure 52.



Figure 52. Locking the Handle on the AT-SBxPWRPOE1 Power Supply

Note

If the module does not fully seat in the chassis slot, check to be sure you are installing a PoE power supply and not a system power supply. The model name of the module is included on a label on the locking handle. For more information, refer to “Power Supplies and Power Supply Slots” on page 24.

7. To install a second AT-SBxPWRPOE1 Power Supply, repeat this procedure.
8. After installing the AT-SBxPWRPOE1 Power Supplies, go to Chapter 7, “Installing the AT-SBx81CFC400 Controller and Ethernet Line Cards” on page 119.

Note

Retain the tie wrap that comes with the power supply. You use it to secure the power cord to the chassis when you power on the unit in “Powering On the AT-SBxPWRPOE1 Power Supply” on page 158.

Installing AT-SBxPWRSYS1 DC System Power Supplies

This section contains the installation procedure for the AT-SBxPWRSYS1 DC System Power Supply. For background information, refer to “Power Supplies and Power Supply Slots” on page 24.



Warning

The electronic components in the power supply can be damaged by electro-static discharges (ESD). Follow the procedure in “Protecting Against Electrostatic Discharge (ESD)” on page 100 to guard against ESD damage when unpacking and installing the power supply.

To install the power supply, perform the following procedure:

1. Choose a slot in the chassis for the AT-AT-SBxPWRSYS1 DC System Power Supply.

System power supplies are installed in slots C and D in the chassis. Refer to Figure 42 on page 102. If you are installing only one power supply, you may install it in either slot, but Allied Telesis recommends slot D because the slot does not come with a blank power supply panel.



Caution

The AT-SBxPWRSYS1 DC System Power Supply will not work in slot A or B.

2. If the chassis already has a power supply in slot D, remove the blank power supply panel from slot C by lifting the blank panel handle and sliding it out of the slot, as shown in Figure 53 on page 113.


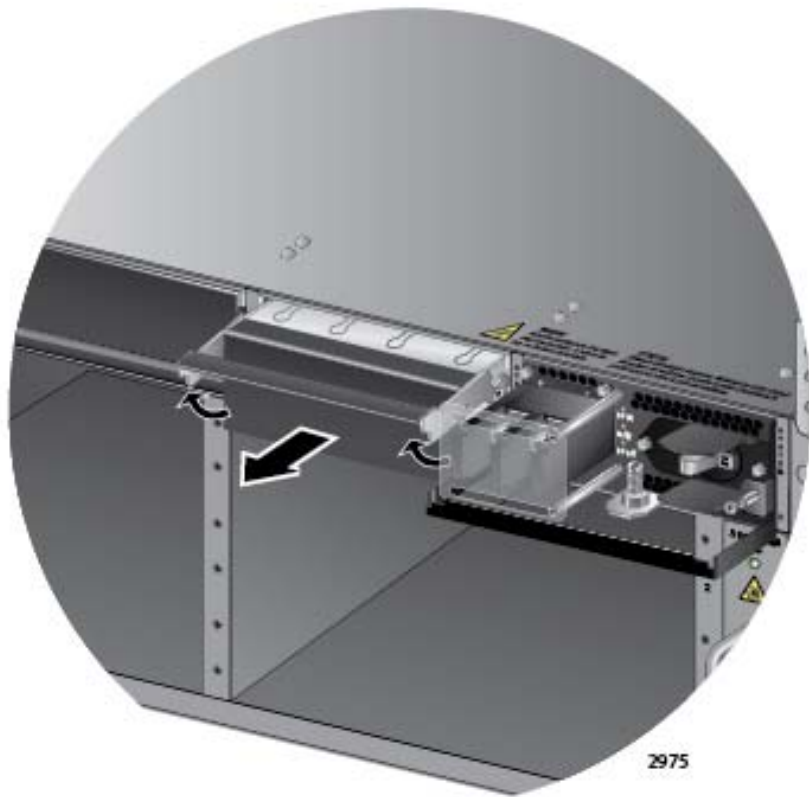


Figure 53. Removing the Blank Slot Cover from Power Supply Slot C

3. Remove the power supply from the shipping package and verify that the shipping package contains the items listed in Figure 54 on page 114.

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

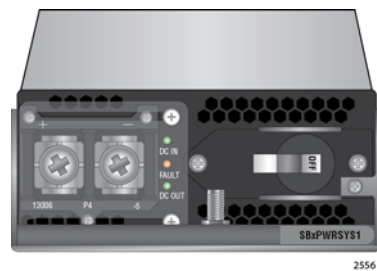

One AT-SBxPWRSYS1 DC Power Supply Module



Two straight power wire ring lugs



One grounding wire ring lug



Two right angle power wire ring lugs

Figure 54. Items Included with the AT-SBxPWRSYS1 DC Power Supply Module

Note

Store the packaging material in a safe location. You must use the original shipping material if you need to return the unit to Allied Telesis.

4. Verify that the On/Off switch on the power supply is in the Off position. Refer to Figure 55 on page 115.

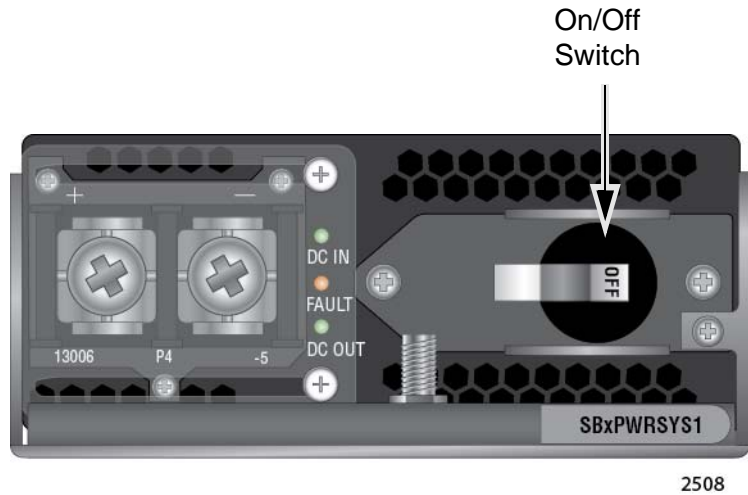


Figure 55. On/Off Switch on the AT-SBxPWRSYS1 DC Power Supply

5. With a #2 Phillips-head screwdriver, loosen the handle locking screw on the power supply, as shown in Figure 56.

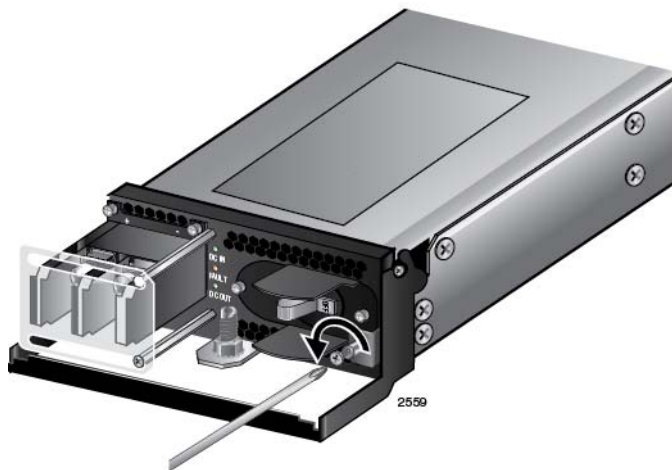


Figure 56. Loosening the Handle Locking Screw on the AT-SBxPWRSYS1 DC Power Supply

6. Raise the locking handle on the AT-SBxPWRSYS1 DC Power Supply, as shown Figure 57 on page 116.



Figure 57. Raising Handle on the AT-SBxPWRSYS1 DC Power Supply

7. Align and insert the AT-SBxPWRSYS1 Module into slot C or D. Figure 58 shows the power supply installed in slot D.



Caution

The AT-SBxPWRSYS1 DC System Power Supply will not work in slot A or B.



Figure 58. Inserting the AT-SBxPWRSYS1 DC System Power Supply

8. Lower the locking handle of the power supply module to secure the module in the slot, as shown in Figure 59.



Figure 59. Locking the Handle on the AT-SBxPWRSYS1 DC System Power Supply

Note

Do not tighten the handle locking screw yet. You may need to slightly lift the handle to move the plastic guard panel when you connect the positive and negative wires in “Powering On the AT-SBxPWRSYS1 DC System Power Supply” on page 161.

9. To install a second AT-SBxPWRSYS1 DC System Power Supply, repeat this procedure.
10. After installing the power supplies, go to Chapter 7, “Installing the AT-SBx81CFC400 Controller and Ethernet Line Cards” on page 119.

Note

Retain the five wire ring lugs that come with the power supply. You use them to wire the power supply in “Powering On the AT-SBxPWRSYS1 DC System Power Supply” on page 161

Chapter 7

Installing the AT-SBx81CFC400 Controller and Ethernet Line Cards

This chapter describes how to install the controller and Ethernet line cards. The chapter has the following sections:

- ❑ “Guidelines to Handling the Controller and Line Cards” on page 120
- ❑ “Installing the AT-SBx81CFC400 Controller Fabric Card” on page 122
- ❑ “Installing the Ethernet Line Cards” on page 128
- ❑ “Installing the Blank Slot Covers” on page 132

Guidelines to Handling the Controller and Line Cards

Please observe the following guidelines when handling the controller and Ethernet line cards:

- ❑ The cards are hot swappable and can be installed or removed while the chassis is powered on.
- ❑ Always wear an anti-static device when handling the cards.



Caution

The electronic components on the controller and line cards can be damaged by electro-static discharges (ESD). Follow the procedure in “Protecting Against Electrostatic Discharge (ESD)” on page 100 to guard against ESD damage when unpacking and installing the line cards.

- ❑ Hold a card by its faceplate and edges.
- ❑ Never touch the electronic components on the top or bottom of a card.
- ❑ To avoid damaging the components on the bottom of a card, do not set it down on a table or desk. If you need to set down a card, return it to its anti-static bag and packaging container.
- ❑ Do not remove a card from its anti-static bag until you are ready to install it in the chassis.
- ❑ If you need to remove a card from the chassis, immediately return it in its anti-static bag and packaging container.
- ❑ Never hold or lift a controller card by the handles on the front faceplate. You might bend or damage the handles.



Caution

Keep a card level as you slide it into or out of the chassis. You might damage the components on the top or bottom of a card if you slide it at an angle. Refer to Figure 60 on page 121.

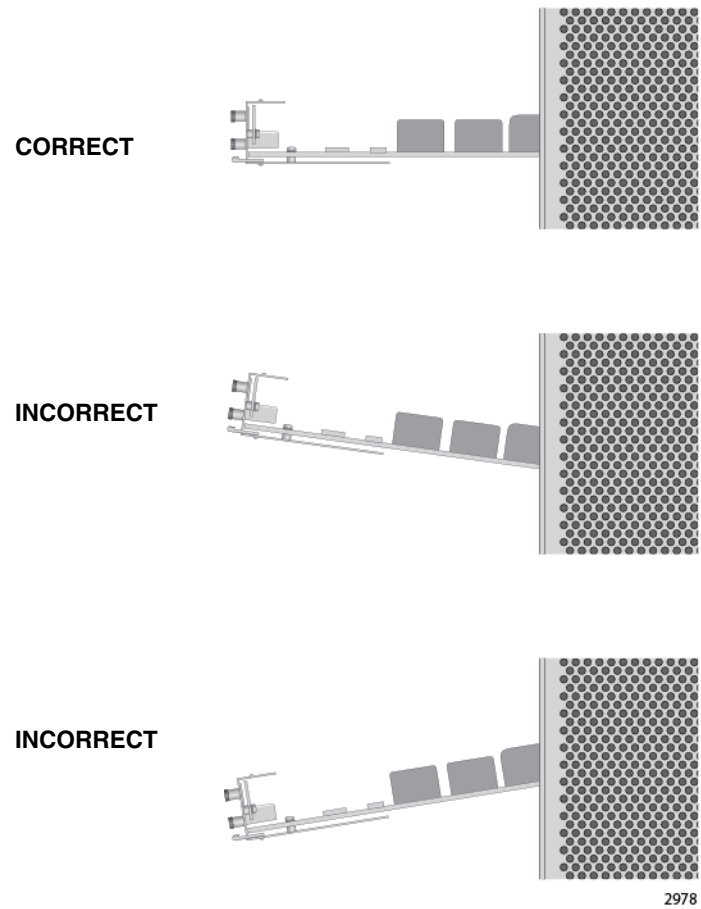


Figure 60. Aligning Card in Slot

Installing the AT-SBx81CFC400 Controller Fabric Card

This section contains the installation procedure for the AT-SBx81CFC400 Controller Fabric Card. You may install either one or two controller cards in the unit. The chassis must have at least one controller card. The cards must be installed in slots 5 and 6 in the chassis.

Note

Please review “Guidelines to Handling the Controller and Line Cards” on page 120 before performing this procedure:

This procedure requires the following tools:

- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ #2 Phillips-head, 5 inch-lbs torque screwdriver (optional — not provided))

To install the AT-SBx81CFC400 Card, perform the following procedure:

1. Choose a slot in the chassis for the AT-SBx81CFC400 Controller Fabric Card.

The card must be installed in slot 5 or 6, shown in Figure 61. If you are installing only one controller card, Allied Telesis recommends installing it in slot 5.

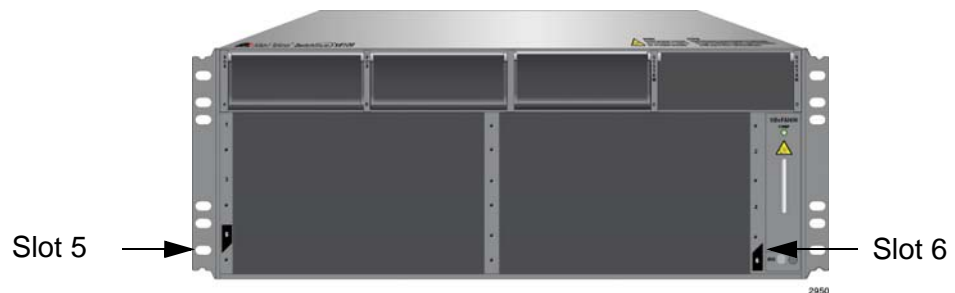


Figure 61. Slots 5 and 6 for the AT-SBx81CFC400 Card

2. Remove the new AT-SBx81CFC400 Control Card from the shipping package and verify the package contents, listed in Table 62 on page 123.

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

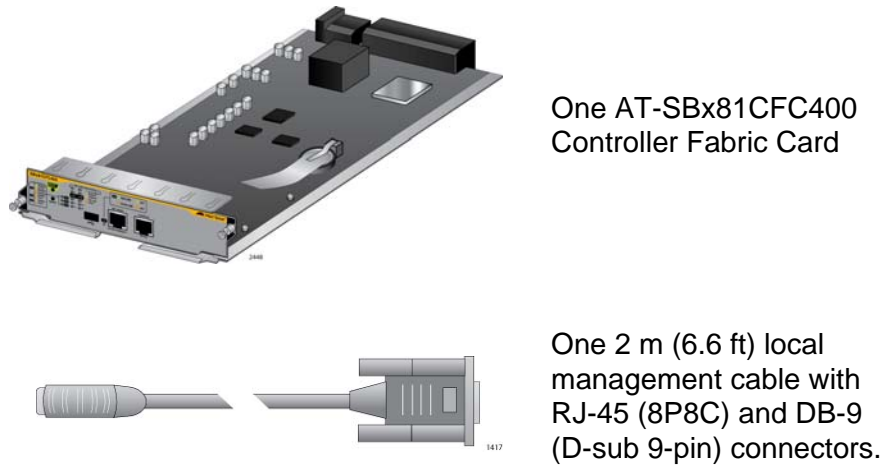


Figure 62. Items Included with the AT-SBx81CFC400 Controller Fabric Card

Note

Store the packaging material in a safe location. You should use the original shipping material if you need to return the unit to Allied Telesis.

3. Carefully remove the controller card from the anti-static bag. Refer to Figure 63.



Figure 63. Removing the AT-SBx81CFC400 Controller Fabric Card from the Anti-static Bag

4. Move the locking handles on the front panel to the open position, as shown in Figure 64 on page 124.

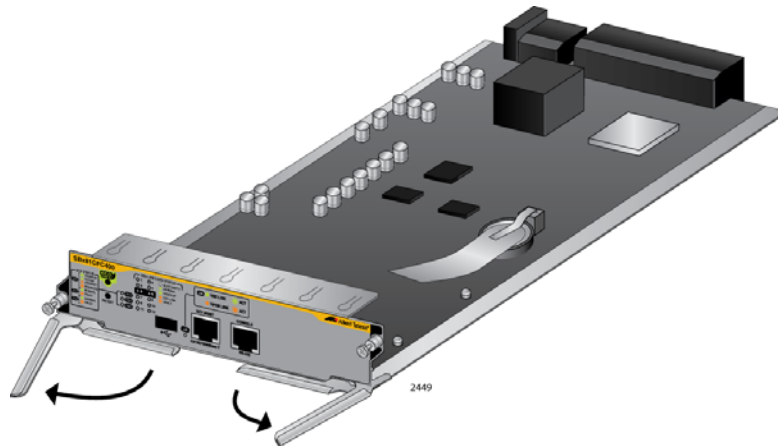


Figure 64. Opening the Locking Handles on the AT-SBx81CFC400 Controller Fabric Card

5. Remove the battery insulator tab on the controller card by sliding it out from between the battery and battery clip, as shown in Figure 65.

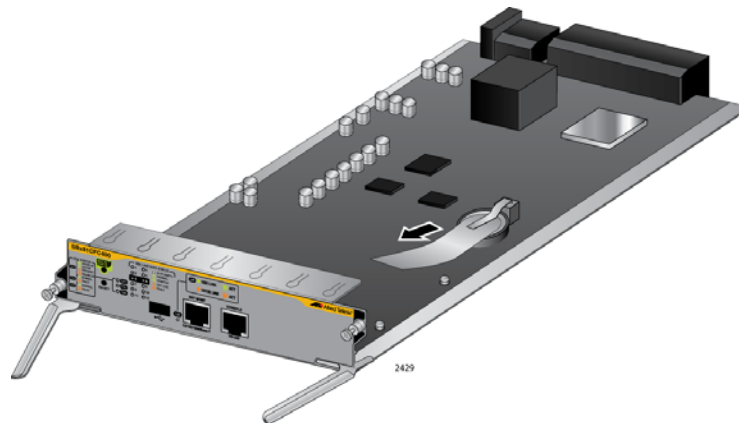


Figure 65. Removing the Battery Insulator

6. Align the edges of the AT-SBx81CFC400 Controller Fabric Card with the internal chassis card guides in slot 5 or 6 of the AT-SBx8106 Chassis. Figure 66 on page 125 shows the AT-SBx81CFC400 Card aligned in slot 5.

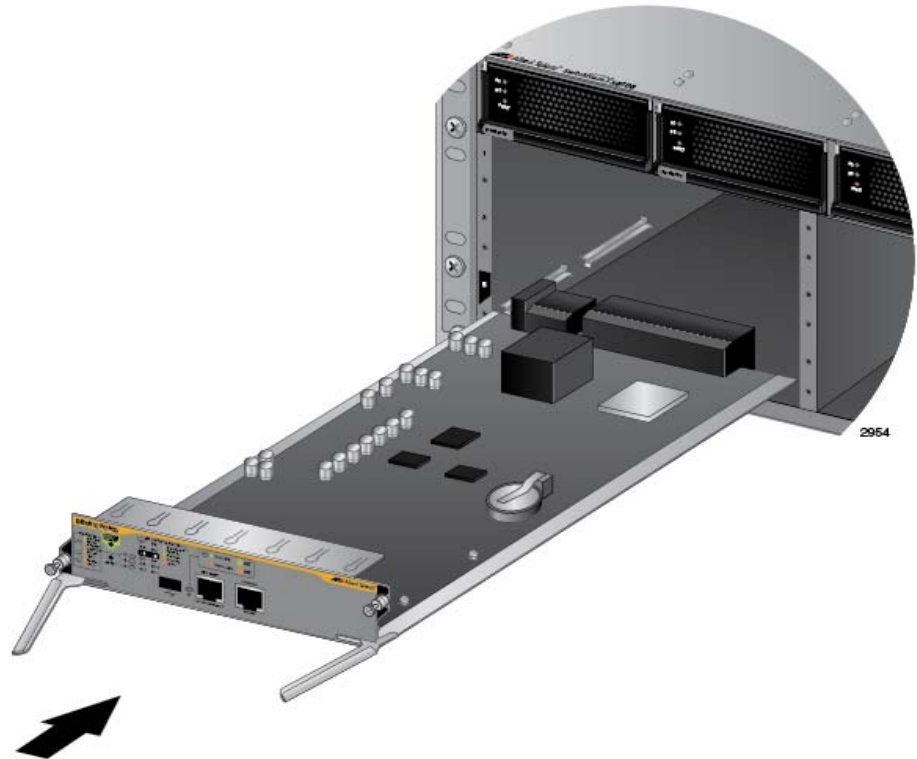


Figure 66. Aligning the AT-SBx81CFC400 Card in the Chassis Slot

7. Slowly and carefully slide the card into the slot.

**Caution**

Keep the card level with the chassis as you slide it into the slot. You might damage the components on the top or bottom of the card if you slide it in at an angle. Refer to Table 60 on page 121.

**Caution**

Do not force the AT-SBx81CFC400 Card into the slot. If you feel resistance, remove it and try again. Be sure that the edges of the card are properly aligned with the card guides.

8. When you feel the card make contact with the connector on the backplane of the chassis, carefully close the two locking levers on the front panel of the controller card to secure it in the chassis, as shown in Figure 67 on page 126.



Figure 67. Closing the Locking Levers on the AT-SBx81CFC400 Controller Fabric Card

9. Finger tighten the two thumbscrews on the card to secure the card to the chassis, as shown in Figure 68 on page 127.



Figure 68. Tightening the Thumb Screws on the AT-SBx81CFC400 Card

10. Tighten the screws with a #2 Phillips-head screwdriver to secure the controller card to the chassis.

Allied Telesis recommends tightening the screws to 5 inch-lbs.

11. if you have a second AT-SBx81CFC400 Controller Fabric Card, repeat this procedure to install it in the chassis.
12. Go to “Installing the Ethernet Line Cards” on page 128.

Installing the Ethernet Line Cards

This section contains the installation procedure for the Ethernet line cards.

The illustrations in the procedure show the AT-SBx81GP24 Line Card. The procedure is the same for all the cards.

Note

Please review “Guidelines to Handling the Controller and Line Cards” on page 120 before performing this procedure.

This procedure requires the following tools:

- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ #2 Phillips-head, 5 inch-lbs torque screwdriver (optional — not provided)

To install the Ethernet line cards, perform the following procedure:

1. Choose a slot in the chassis for the Ethernet line card. The Ethernet line cards may be installed in slots 1 to 4.
2. Remove the line card from the shipping package. If it is missing or damaged, contact your Allied Telesis sales representative for assistance.

Note

Store the packaging material in a safe location. You should use the original shipping material if you need to return the unit to Allied Telesis.

3. Carefully remove the Ethernet line card from the anti-static bag. Refer to Figure 69 on page 129.

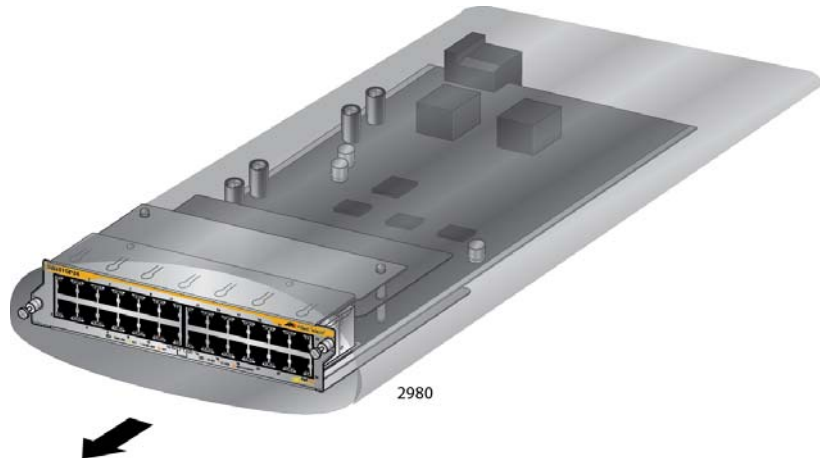


Figure 69. Removing an Ethernet Line Card from the Anti-static Bag

4. Align the line card with the internal chassis card guides in the selected slot in the chassis.

Figure 70 shows an Ethernet line card aligned with slot 1.

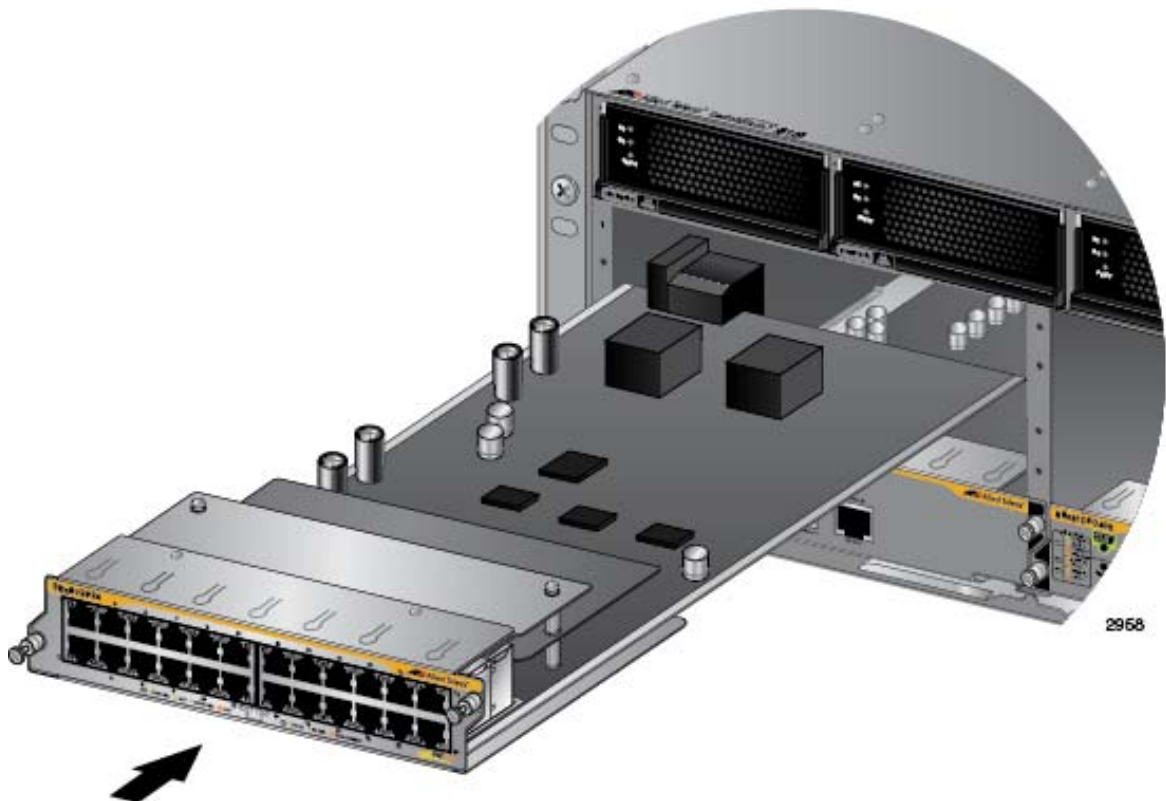


Figure 70. Aligning an Ethernet Line Card in a Chassis Slot

5. Slowly and carefully slide the card into the slot.



Caution

Keep the card level with the chassis as you slide it into the slot. You might damage the components on the top or bottom of the card if you slide it in at an angle. Refer to Figure 60 on page 121.



Caution

Do not force the card into the slot. If you feel resistance, remove the card and try again. Be sure that the edges of the card are properly aligned with the card guides.

6. When you feel the line card make contact with the connector on the backplane of the chassis, gently press on both sides of the faceplate to seat the card on the connector. Refer to Figure 71.



2981

Figure 71. Seating an Ethernet Line Card on the Backplane Connector

7. Finger tighten the two thumbscrews on each side of the line card to secure it to the chassis, as shown in Figure 72 on page 131.



Figure 72. Tightening the Thumb Screws on an Ethernet Line Card

8. Tighten the two screws with a # 2 Phillips-head screwdriver to secure the line card to the chassis.

Allied Telesis recommends tightening the screws to 5 inch-lbs.

9. Repeat this procedure to install the remaining Ethernet line cards.
10. After installing the line cards, go to “Installing the Blank Slot Covers” on page 132.

Installing the Blank Slot Covers

After installing the AT-SBx81CFC400 Controller Fabric Cards and Ethernet line cards, check the front panel for unused slots and cover them with the blank slot covers included with the chassis, as explained in this procedure. The fan module may not be able to maintain adequate airflow across the controller and line cards if the chassis is not completely enclosed. If there are no unused slots, go to Chapter 8, “Installing the Transceivers and Cabling the Ports” on page 135.

To install the blank panels on the unused slots, perform the following procedure:

1. Position a blank slot cover over an unused slot, as shown in Figure 73.

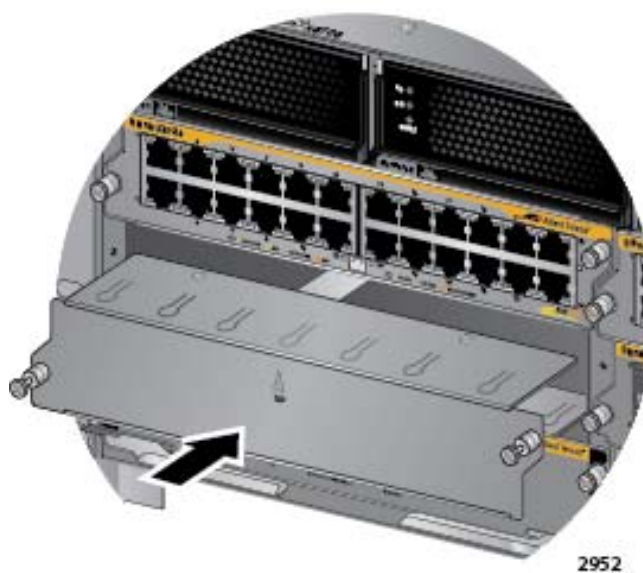


Figure 73. Installing a Blank Slot Cover

2. Finger tighten the two thumbscrews to attach the blank panel to the chassis, as shown in Figure 74 on page 133.



Figure 74. Tightening the Thumbscrews on a Blank Slot Cover

3. Tighten the two screws with a # 2 Phillips-head screwdriver to secure the blank slot cover to the chassis.

Allied Telesis recommends tightening the screws to 5 inch-lbs.

4. Repeat this procedure to cover the remaining empty slots with blank slot covers.
5. Store any unused blank panels in a secure location for future use.
6. Go to Chapter 8, “Installing the Transceivers and Cabling the Ports” on page 135.

Chapter 8

Installing the Transceivers and Cabling the Ports

This chapter describes how to install the fiber optic transceivers and attach the cables to the ports on the line cards. The chapter has the following sections:

- ❑ “Cabling Guidelines for the Twisted Pair Ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards” on page 136
- ❑ “Guidelines to Installing SFP and SFP+ Transceivers” on page 139
- ❑ “Installing SFP Transceivers in the AT-SBx81GS24a Line Card” on page 140
- ❑ “Installing SFP+ Transceivers in the AT-SBx81XS6 Line Card” on page 144
- ❑ “Installing AT-SP10TW Cables in the AT-SBx81XS6 Line Card” on page 148
- ❑ “Cabling the NET MGMT Port on the AT-SBx81CFC400 Card” on page 150

Cabling Guidelines for the Twisted Pair Ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards

Here are the guidelines to cabling the 10/100/1000Base-T twisted pair ports on the AT-SBx81GT24, AT-SBx81GP24, and AT-SBx81GT40 Line Cards:

- ❑ The 10/100/1000Base-T twisted pair ports on the AT-SBx81GT24 and AT-SBx81GP24 Line Cards have 8-pin RJ45 connectors.
- ❑ The 10/100/1000Base-T twisted pair ports on the AT-SBx81GT40 Line Card have 8-pin RJ point 5 connectors.
- ❑ The cable specifications for the 10/100/1000Base-T twisted pair ports on the AT-SBx81GT24 and AT-SBx81GT40 Line Cards are listed in Table 11 on page 48.
- ❑ The cable specifications for the 10/100/1000Base-T twisted pair ports on the AT-SBx81GP24 Line Card are listed in Table 12 on page 49.
- ❑ The connectors on the cables should fit snugly into the ports, and the tabs should lock the connectors into place.
- ❑ The default setting for PoE on the ports on the AT-SBx81GP24 Line Card is enabled.
- ❑ The default speed setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation.
- ❑ The default speed setting of Auto-Negotiation is not appropriate for ports connected to network devices that do not support Auto-Negotiation and have fixed speeds of 10 or 100 Mbps. For those switch ports, disable Auto-Negotiation and set the port's speed manually to match the speeds of the network devices.
- ❑ The 10/100/1000Base-T ports must be set to Auto-Negotiation, the default setting, to operate at 1000Mbps.
- ❑ The default duplex mode setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation for duplex modes.
- ❑ The default duplex mode setting of Auto-Negotiation is not appropriate for ports connected to network devices that do not support Auto-Negotiation and have a fixed duplex mode. Disable Auto-Negotiation on those ports and set their duplex modes manually to avoid the possibility of duplex mode mismatches. A switch port using Auto-Negotiation defaults to half-duplex if it detects that the end node is not using Auto-Negotiation. This can result in a mismatch if the end node is operating at a fixed duplex mode of full-duplex.

- ❑ The default wiring configuration of the ports is automatic MDIX detection, which configures the MDI/MDIX setting automatically. This setting is appropriate for switch ports that are connected to network devices that also support the feature.
- ❑ The default wiring configuration of automatic MDIX detection is not appropriate for ports that are connected to network devices that do not support the feature. On those ports, you should disable automatic MDIX detection and set the wiring configuration manually with the POLARITY command.

Connecting Cables to the AT- SBx81GT40 Line Card

Here are a few additional guidelines to connecting cables to ports on the AT-SBx81GT40 Line Card:

- ❑ The ports require the RJ point 5 cable connector shown in Figure 75.



Figure 75. RJ Point 5 Cable Connector for AT-SBx81GT40 Line Card


 
- ❑ To connect a cable to a port in the top role on the line card, orient the connector with the release tab on top. To connect a cable to a port in the bottom role, orient the connector with the release tab on the bottom. Refer to Figure 76 on page 138.
- ❑ To remove a cable from a port, pull gently on the release tab and slide the cable connector from the port.

Note

Patch cables for the AT-SBx81GT40 Line Card, in lengths of 1 meter and 3 meters with RJ point 5 and RJ-45 connectors, are available from Allied Telesis. Contact your Allied Telesis sales representative for information.

Connecting a cable to a port
in the top row.

Release Tab

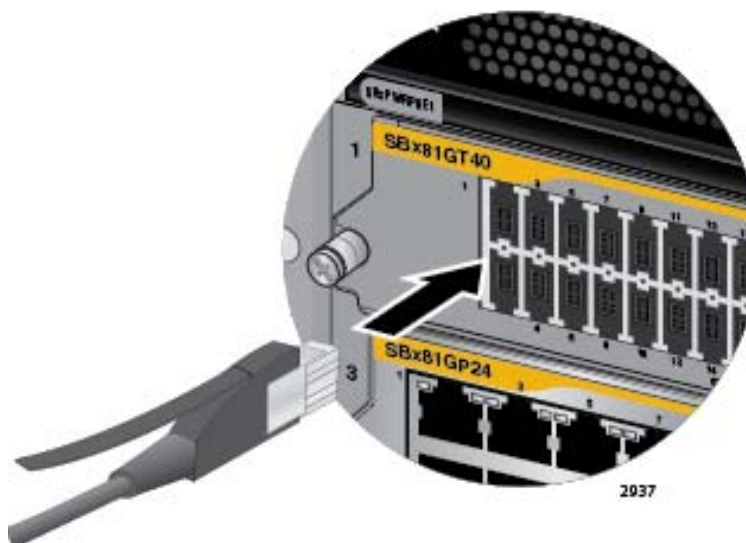

Connecting a cable to a port
in the bottom row.



Figure 76. Connecting Cables to Ports on the AT-SBx81GT40 Line Card

Guidelines to Installing SFP and SFP+ Transceivers

Please review the following guidelines before installing fiber optic transceivers in the AT-SBx81GS24a and AT-SBx81XS6 Line Cards:

- ❑ You should install a transceiver in a line card before connecting its network cable.
- ❑ A fiber optic transceiver is dust sensitive. Always keep the protective cover in the optical bores when a fiber optic cable is not installed, or when you store the transceiver. When you do remove this cover, retain it for future use.
- ❑ Your Allied Telesis sales representative can provide you with a list of supported transceivers for the line cards.
- ❑ The operational specifications and fiber optic cable requirements of the transceivers are provided in the documents included with the devices.
- ❑ The SFP and SFP+ transceivers and AT-SP10TW cables are hot-swappable. You may install them while the chassis is powered on.
- ❑ Unnecessary removal or insertion of transceivers can lead to premature failures.



Warning

Transceivers can be damaged by static electricity. Follow the procedure in “Protecting Against Electrostatic Discharge (ESD)” on page 100 to guard against ESD damage when unpacking and installing the devices.



Caution

The temperature of an operational transceiver can exceed 70 C (158 F). Exercise caution when removing or handling a transceiver with unprotected hands.

Installing SFP Transceivers in the AT-SBx81GS24a Line Card

Please review the information in “Guidelines to Installing SFP and SFP+ Transceivers” on page 139 before performing this procedure.

To install SFP transceivers in AT-SBx81GS24a Line Cards, perform the following procedure:

1. Remove the transceiver from its shipping container and store the packaging material in a safe location.
2. Remove the dust cover from the SFP slot chosen for the transceiver. Figure 77 shows the dust cover being removed from slot 1.



Figure 77. Removing the Dust Cover from an SFP Slot in the AT-SBx81GS24a Line Card

3. To install the transceiver in an SFP slot on the top row of the line card, orient the transceiver with the handle on top, as shown in Figure 78. To install it into a slot on the bottom row of the line card, orient it with the handle on the bottom.

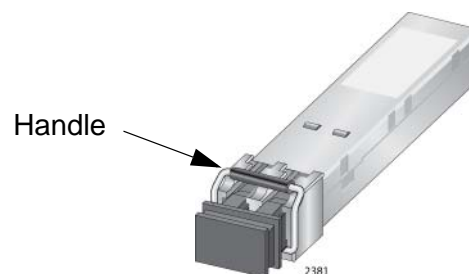


Figure 78. Handle on SFP Transceiver

4. Slide the transceiver into the slot until it clicks into place, as shown in Figure 79.

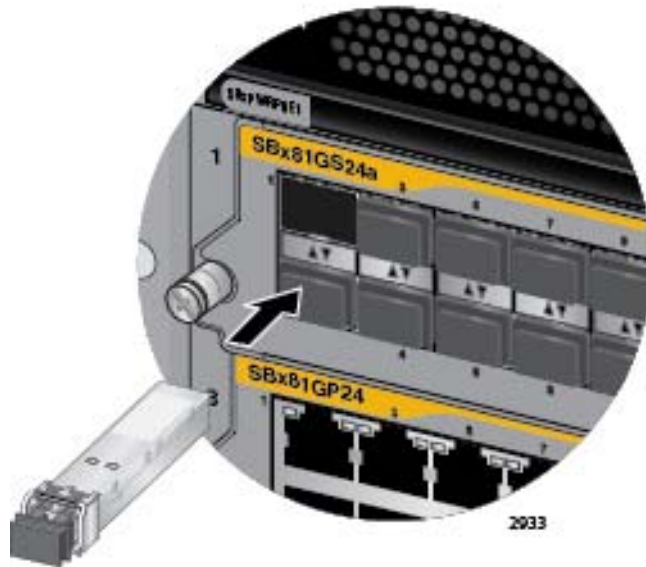


Figure 79. Inserting the SFP Transceiver in the AT-SBx81GS24a Line Card

Note

If you are ready to attach the fiber optic cable to the transceiver, continue with the next step. Otherwise, repeat steps 1 to 4 to install the remaining SFP transceivers in the line cards.

5. Remove the protective cover from the SFP transceiver, as shown in Figure 80 on page 142.



Figure 80. Removing the Dust Cover from the SFP Transceiver in the AT-SBx81GS24a Line Card

Note

The dust cover protects the fiber optic port on the SFP transceiver from dust contamination. It should not be removed until you are ready to connect the fiber optic cable.

6. Before connecting the cable, verify the position of the handle on the SFP transceiver. The handle should be in the up position if the transceiver is in the top row on the line card, as shown in Figure 81, or the down position if the transceiver is in the bottom row.

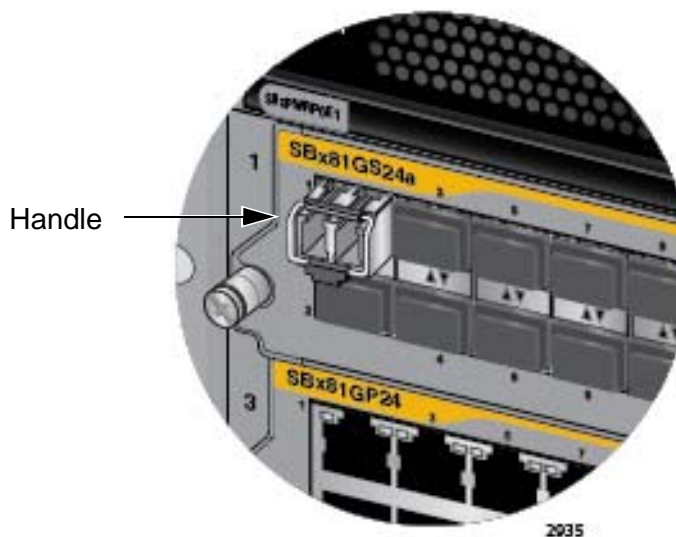


Figure 81. Verifying the Position of the Handle on an SFP Transceiver in the AT-SBx81GS24a Line Card

7. Connect the fiber optic cable to the port on the transceiver, as shown in Figure 82. The connector should snap into the port.

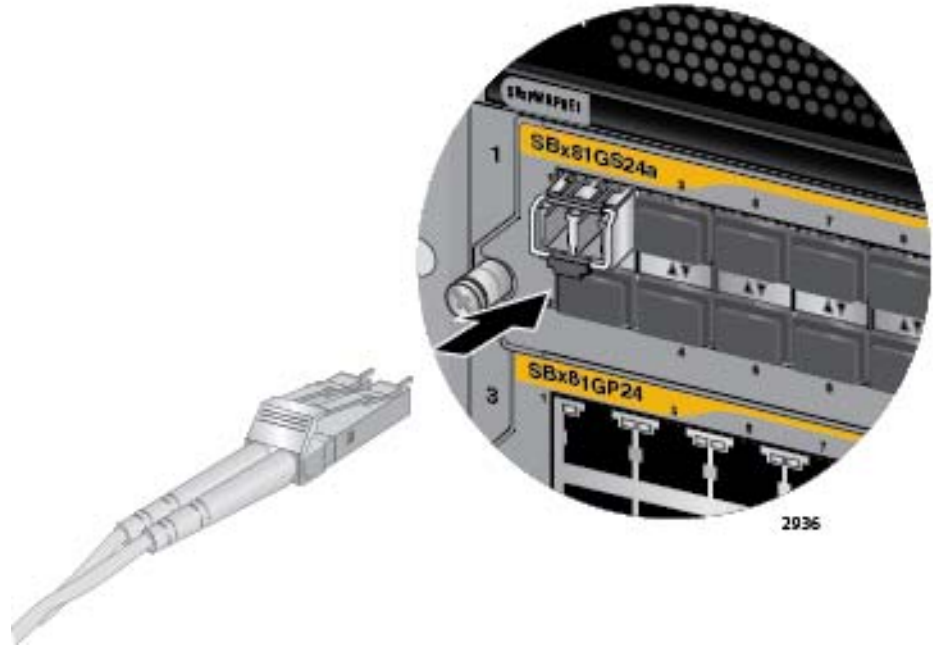


Figure 82. Attaching a Fiber Optic Cable to an SFP Transceiver in the AT-SBx81GS24a Line Card

8. Repeat this procedure to install additional SFP transceivers.

After installing and cabling the SFP transceivers, do one of the following:

- ☐ To install and cable additional transceivers, go to the appropriate section in this chapter for instructions.
- ☐ After cabling all the ports in the chassis, go to Chapter 9, "Powering On the Chassis" on page 153.

Installing SFP+ Transceivers in the AT-SBx81XS6 Line Card

Please review the information in “Guidelines to Installing SFP and SFP+ Transceivers” on page 139 before performing this procedure.

To install 10 Gbps SFP+ transceivers in the AT-SBx81XS6 Line Card, perform the following procedure:

1. Remove the dust plug from the slot chosen for the SFP+ transceiver. Figure 83 shows the dust plug removed from slot 1.



Figure 83. Removing the Dust Cover from an SFP+ Slot in the AT-SBx81XS6 Line Card

Note

Do not remove the dust plug from the SFP+ slot if you are not installing the transceiver at this time. The dust plug protects the line card from dust contamination.

2. Orient the SFP+ transceiver with the handle on top, as shown in Figure 84 on page 145.

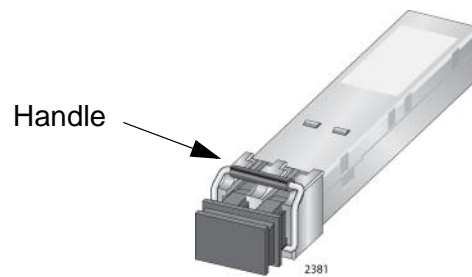


Figure 84. Handle on SFP+ Transceiver

3. Slide the transceiver into the slot until it clicks into place, as shown in Figure 85.



Figure 85. Installing an SFP+ Transceiver in the AT-SBx81XS6 Line Card

Note

If you are ready to attach the fiber optic cable to the transceiver, continue with the next step. Otherwise, repeat steps 1 to 3 to install the remaining SFP transceivers in the line cards.

4. Remove the protective cover from the SFP transceiver, as shown in Figure 86 on page 146.



Figure 86. Removing the Dust Cover from an SFP+ Transceiver in the AT-SBx81XS6 Line Card

Note

The dust cover protects the fiber optic port on the SFP transceiver from dust contamination. It should not be removed until you are ready to connect the fiber optic cable.

5. Before connecting the cable, verify the position of the handle on the SFP+ transceiver. The handle should be in the up position, as shown in Figure 87.

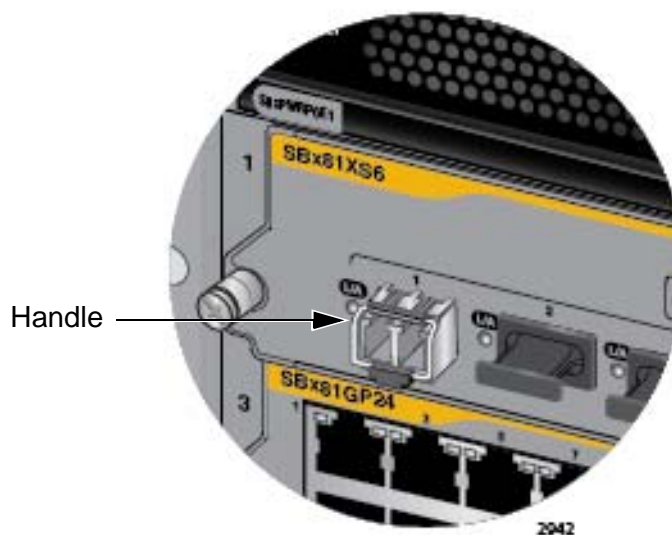


Figure 87. Verifying the Position of the Handle on the SFP+ Transceiver in the AT-SBx81XS6 Line Card

6. Connect the fiber optic cable to the port on the transceiver, as shown in Figure 88. The connector should snap into the port.



Figure 88. Attaching a Fiber Optic Cable to an SFP+ Transceiver in the AT-SBx81XS6 Line Card

7. Repeat this procedure to install additional SFP+ transceivers in the AT-SBx81XS6 Line Cards.

After installing and cabling the SFP+ transceivers, do one of the following:

- ☐ To install and cable additional transceivers, go to the appropriate section in this chapter for instructions.
- ☐ After cabling all the ports in the chassis, go to Chapter 9, "Powering On the Chassis" on page 153.

Installing AT-SP10TW Cables in the AT-SBx81XS6 Line Card

This procedure explains how to connect AT-SP10TW Cables to the SFP+ slots in the AT-SBx81XS6 Line Card. The cables may be used in place of fiber optic cables and transceivers for 10 Gbps links of up to 7 meters.

Note

The AT-SP10TW Cables are supported in the AT-SBx81XS6 and AT-SBx81XS16 Line Cards. They are not supported in the AT-SBx81GS24a Line Card.

To install AT-SP10TW Cables, perform the following procedure:

1. Remove the dust plug from an SFP+ slot. You may install AT-SP10TW Cables into any of the slots in the line card. Refer to Figure 89.



Figure 89. Removing the Dust Cover From an SFP+ Slot in the AT-SBx81XS6 Line Card

Note

Do not remove the dust plug from an SFP+ slot if you are not installing the transceiver at this time. The dust plug protects the line card from dust contamination.

2. Slide the connector into the slot until it clicks into place, as shown in Figure 90 on page 149.

The connector on the AT-SP10TW Cable has to be oriented such that the release tab is on top when you slide the connector into the slot.



Figure 90. Installing the AT-SP10TW Cable in the AT-SBx81XS6 Line Card

3. Install the other end of the cable into an SFP+ slot on another network device.
4. Repeat this procedure to install additional AT-SP10TW Cables.

Note

To remove the connector and cable from the SFP+ slot, gently push on the connector, pull on the release tab, and slide the connector from the slot.

After installing the AT-SP10TW Cables, do one of the following:

- ☐ To install and cable additional transceivers, go to the appropriate section in this chapter for instructions.
- ☐ After cabling all the ports in the chassis, go to Chapter 9, “Powering On the Chassis” on page 153.

Cabling the NET MGMT Port on the AT-SBx81CFC400 Card

For background information on the NET MGMT port on the controller card, refer to “Ethernet Management Port (NET MGMT)” on page 67.

Note

The NET MGMT port is referred to as “eth0” in the management software.

Here are the guidelines to using the NET MGMT port:

- ❑ The cabling requirements of the port are the same as the ports on the AT-SBx81GT24 Line Card, in Table 11 on page 48.
- ❑ The default speed setting for the port is Auto-Negotiation. This setting is appropriate if the port is connected to a network device that also support Auto-Negotiation.
- ❑ The default speed setting of Auto-Negotiation is not appropriate if the port is connected to a network device that does not support Auto-Negotiation and has a fixed speed of 10 or 100 Mbps. In this situation, disable Auto-Negotiation and set the port's speed manually to match the speed of the network device.
- ❑ The port must be set to Auto-Negotiation, the default setting, to operate at 1000Mbps.
- ❑ The default duplex mode setting for the port is Auto-Negotiation. This setting is appropriate if the port is connected to a network device that also support Auto-Negotiation for the duplex mode.
- ❑ The default duplex mode setting of Auto-Negotiation is not appropriate if the port is connected to a network device that does not support Auto-Negotiation and has a fixed duplex mode. In this situation, you should disable Auto-Negotiation on the port and set its duplex mode manually to avoid the possibility of a duplex mode mismatch. With Auto-Negotiation, the port defaults to half-duplex if it detects that the end node is not using Auto-Negotiation. This can result in a mismatch if the end node is operating at a fixed duplex mode of full-duplex.
- ❑ The default wiring configuration of the port is automatic MDIX detection, which configures the MDI/MDIX setting automatically. This setting is appropriate for port if it is connected to a network device that also support the feature.
- ❑ The default wiring configuration of automatic MDIX detection is not appropriate for the NET MGMT port if it is connected to a network device that does not support the feature. You should disable automatic MDIX detection and set the wiring configuration manually with the POLARITY command.

After cabling the NET MGMT port, do one of the following:

- ❑ To install and cable additional transceivers, go to the appropriate section in this chapter for instructions.
- ❑ After cabling all the ports in the chassis, go to Chapter 9, “Powering On the Chassis” on page 153.

Chapter 9

Powering On the Chassis

This chapter describes how to power on the chassis and monitor the initialization process. The chapter contains the following sections:

- ❑ “Verifying the Installation” on page 154
- ❑ “Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply” on page 155
- ❑ “Powering On the AT-SBxPWRPOE1 Power Supply” on page 158
- ❑ “Powering On the AT-SBxPWRSYS1 DC System Power Supply” on page 161
- ❑ “Monitoring the Initialization Process” on page 187

Verifying the Installation

Please perform the following procedure before powering on the chassis:

1. Verify that the grounding lug on the back panel of the chassis is properly grounded. For instructions, refer to “Installing the Chassis Grounding Wire” on page 97.
2. Verify that all empty slots on the front panel of the chassis are covered with slot covers. If there are open slots, perform the procedure “Installing the Blank Slot Covers” on page 132.
3. Verify that dust plugs are installed in all empty SFP and SFP+ slots on the AT-SBx81GS24a and AT-SBx81XS6 Line Cards.
4. Verify that dust covers are installed on all SFP and SFP+ transceivers that do not have cables.
5. Verify that the chassis has at least one AT-SBx81CFC400 Controller Fabric Card in slot 5 or 6.
6. Verify that the chassis has at least one AT-SBxPWRSYS1 Power Supply in slot C or D.
7. If the chassis has AT-SBx81GP24 Line Cards, verify that the chassis has at least one AT-SBxPWRPOE1 Power Supply in slot A or B.
8. When you installed the AT-SBx81CFC400 Controller Fabric Card, did you remove the battery insulator, shown in Figure 65 on page 124? If not, remove the controller card from the chassis, remove the insulator from the battery, and reinstall the card.

You may now power on the chassis. For instructions, refer to the appropriate section in this chapter:

- ❑ “Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply” on page 155
- ❑ “Powering On the AT-SBxPWRPOE1 Power Supply” on page 158
- ❑ “Powering On the AT-SBxPWRSYS1 DC System Power Supply” on page 161

If the chassis has multiple power supplies, you may power them on in any order. You may also power them on simultaneously.

Powering On the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply

The procedure in this section explains how to power on the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supplies in slots C and D on the front panel. If you have not installed the power supplies, refer to “Installing AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies” on page 101 for installation instructions.

Note

If the chassis has both system and PoE power supplies, you may power them on in any order or simultaneously.




Caution

If the chassis has two AT-SBxPWRSYS2 Power Supplies, you must power them on within 90 seconds of each other. Otherwise, the active master controller card might restart its operating software, which will delay the initialization process of the chassis.

To power on the AC system power supplies, perform the following procedure:

1. Identify AC sockets C and D in the recessed panel on the back panel of the chassis, shown in Figure 91. These sockets are for the AC system power supplies in slots C and D on the front panel of the chassis.

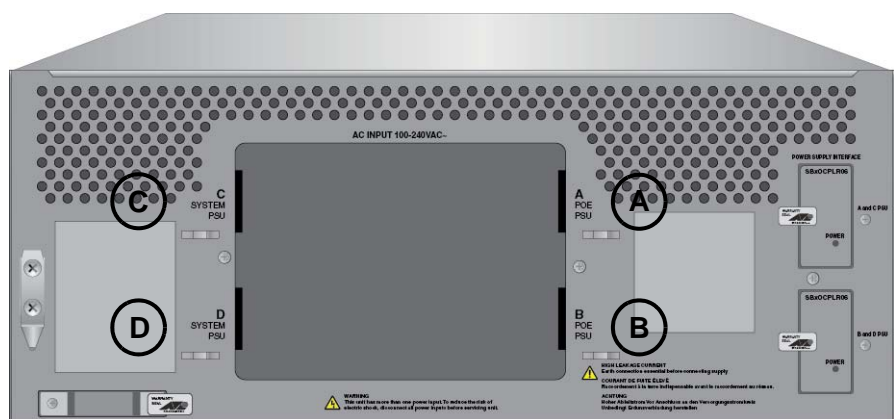

2709

Figure 91. AC Sockets on the Rear Panel of the AT-SBx8106 Chassis

2. Plug the AC power cord that comes with the power supply into a plug whose corresponding slot on the front panel has a system power supply.

If there are two system power supplies, you may power on either supply first. In the illustration in Figure 92 an AC power cord is connected to connector D for the system power supply in slot D on the front panel.



Figure 92. Connecting the AC Power Cord for the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply

3. Use the twist tie included with the power supply to secure the cord to an anchor on the chassis to protect it from being accidentally pulled out, as shown in Figure 93 on page 157.



Figure 93. Securing the Power Cord for the AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC Power Supply to an Anchor

4. Connect the power cord to an appropriate AC power source to power on the power supply.
5. If the chassis has two AT-SBxPWRSYS1 or AT-SBxPWRSYS2 AC System Power Supplies, repeat this procedure to power on the second power supply.



Caution

If the chassis has two AT-SBxPWRSYS2 Power Supplies, you must power them on within 90 seconds of each other. Otherwise, the active master controller card might restart its operating system, which will delay the initialization process of the chassis.

After powering on the AC system power supplies, do one of the follow:

- ❑ If the chassis has AT-SBxPWRPOE1 PoE Power Supplies, perform the procedure in “Powering On the AT-SBxPWRPOE1 Power Supply” on page 158.
- ❑ Otherwise, go to “Monitoring the Initialization Process” on page 187.

Powering On the AT-SBxPWRPOE1 Power Supply

If you have not already installed the AT-SBxPWRPOE1 Power Supplies, refer to “Installing AT-SBxPWRPOE1 PoE Power Supplies” on page 107 for installation instructions. To power on the power supplies, perform the following procedure:

1. Identify AC sockets A and B in the recessed panel on the back panel of the chassis, shown in Figure 91 on page 155. The sockets are for the AT-SBxPWRPOE1 Power Supplies in slots A and B on the front panel of the chassis.
2. Plug the AC power cord that comes with the power supply into one of the plugs, as shown in Figure 94.

The plug should have a power supply in the corresponding slot in the front panel. If the chassis has two AT-SBxPWRPOE1 Power Supplies, you may power on either supply first.

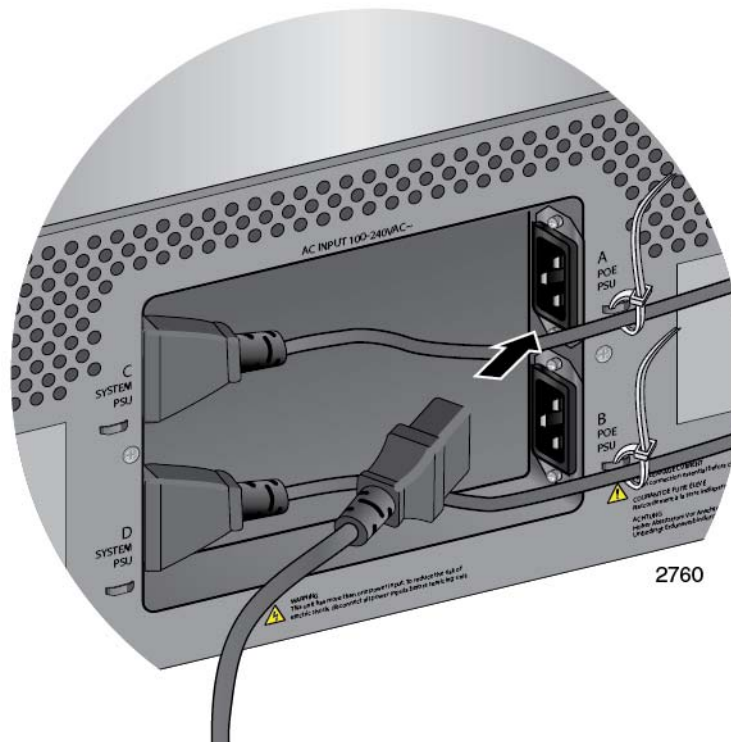


Figure 94. Connecting the AC Power Cord for the AT-SBxPWRPOE1 Power Supply

3. Use the twist tie that comes with the power supply to secure the cord to an anchor on the chassis, as shown in Figure 95.

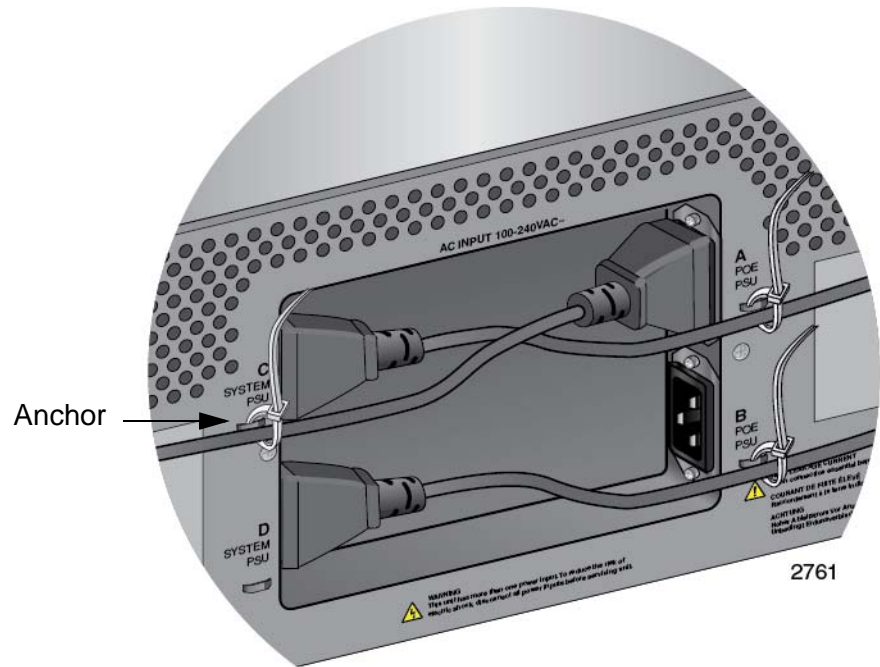


Figure 95. Securing the Power Cord for the AT-SBxPWRPOE1 Power Supply to an Anchor

4. Connect the power cord to an appropriate AC power source to power on the power supply.
5. If the chassis has two AT-SBxPWRPOE1 Power Supplies, repeat this procedure to power on the second power supply.

Figure 96 on page 160 is an illustration of the power cords for a chassis with four power supplies.

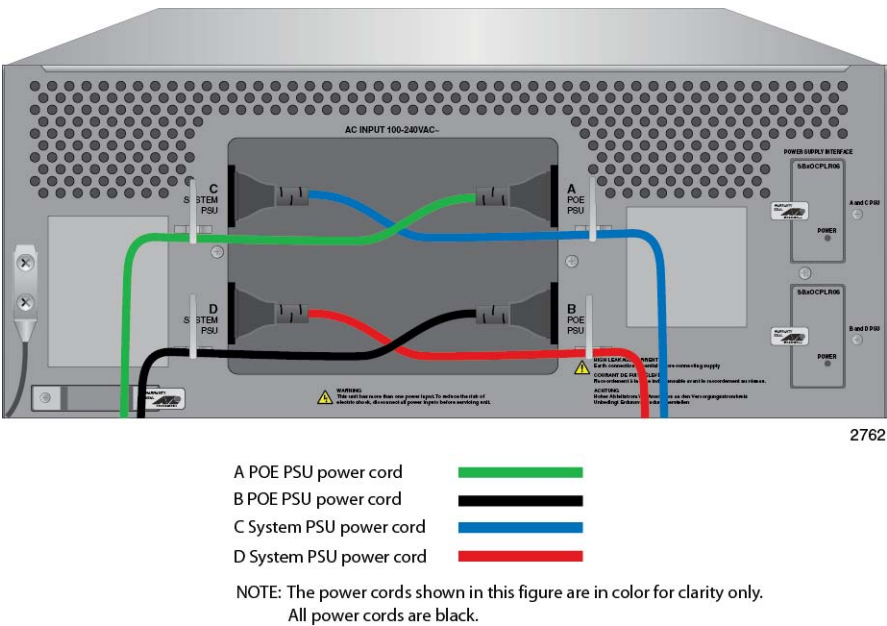


Figure 96. Dress and Secure AC Power Cords

- 6. Go to “Monitoring the Initialization Process” on page 187.

Powering On the AT-SBxPWRSYS1 DC System Power Supply

This section contains instructions on how to power on the AT-SBxPWRSYS1 DC Power Supply. For installation instructions, refer to “Installing AT-SBxPWRSYS1 DC System Power Supplies” on page 112.

The power supply unit has a ground connection and positive and negative DC terminals. You may install the ground and power lead wires with the terminal lugs that come with the unit or with bare wire. The wire requirements are slightly different for terminal installation versus bare wire installation. Here are the wire requirements if you are using the terminal lugs that come with the power supply:

- ☐ Two 8 AWG stranded power wires (not provided)
- ☐ One 10 AWG stranded grounding wire (not provided)

Here are the wire requirements for bare wire installation:

- ☐ Two 8 AWG solid or stranded power wires (not provided)
- ☐ One 10 AWG solid or stranded grounding wire (not provided)

Here is a list of the required tools:

- ☐ Crimping tool (not provided)
- ☐ 8 mm wrench (not provided)
- ☐ #1, #2, and #3 Phillips-head screwdrivers (not provided)
- ☐ #3 Phillips-head 30 to 40 inch-lbs Phillips-head torque screwdriver (optional - not provided)

Here are the procedures for powering on the AT-SBxPWRSYS1 DC Power Supply:

- ☐ “Choosing a Method for Attaching the Grounding Wire” on page 163
- ☐ “Connecting the Grounding Wire with the Grounding Terminal” on page 163
- ☐ “Connecting the Grounding Wire with Bare Wire” on page 166
- ☐ “Choosing a Method for Attaching the Power Wires” on page 168
- ☐ “Connecting the DC Power Wires with the Straight Terminals” on page 168
- ☐ “Connecting the DC Power Wires with the Right Angle Terminals” on page 177
- ☐ “Connecting Bare DC Power Wires” on page 183

The components of the power supply are identified in Figure 97.

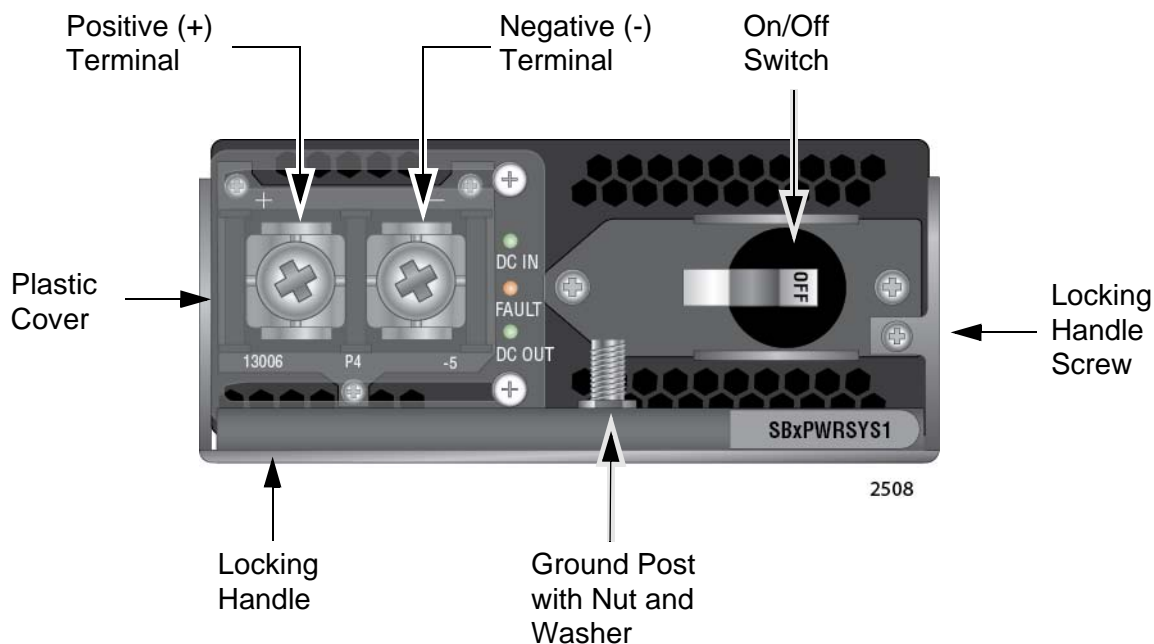


Figure 97. Components of the AT-SBxPWRSYS1 DC Power Supply



Warning

As a safety precaution, install a circuit breaker with a minimum value of 50 Amps between the equipment and the DC power source.

Always connect the wires to the LAN equipment first before you connect the wires to the circuit breaker. Do not work with HOT feeds to avoid the danger of physical injury from electrical shock. Always be sure that the circuit breaker is in the OFF position before connecting the wires to the breaker. *E9*



Warning

For centralized DC power connection, install only in a restricted access area. *E23*

Note

A tray cable is required to connect the power source if the unit is powered by centralized DC power. The tray cable must be a UL listed Type TC tray cable and rated at 600 V and 90 degrees C, with two conductors, 8 AWG. *E24*

Choosing a Method for Attaching the Grounding Wire

You may attach the grounding wire to the power supply using the supplied terminal, shown in Figure 98, or bare wire.



Figure 98. Grounding Wire Terminal

The two methods are described in the following sections:

- ❑ “Connecting the Grounding Wire with the Grounding Terminal”
- ❑ “Connecting the Grounding Wire with Bare Wire” on page 166

Connecting the Grounding Wire with the Grounding Terminal

To attach a grounding wire with the grounding terminal provided with the power supply, perform the following procedure:

1. Prepare an adequate length of stranded 10 AWG grounding wire by stripping it as shown in Figure 99.

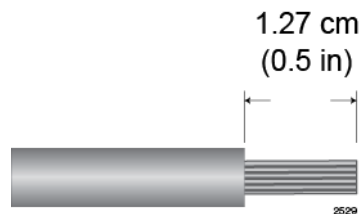


Figure 99. Stripping the Stranded Grounding Wire

Note

You must use stranded wire when using the grounding terminal to connect the ground wire to the grounding post. You may not use solid wire.

2. Insert the grounding wire into the grounding terminal provided with the power supply and use a crimping tool to secure it to the grounding terminal. See Figure 100.

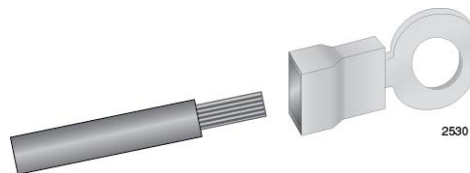


Figure 100. Attaching the Stranded Grounding Wire to the Grounding Terminal

3. Use an 8 mm wrench to remove the grounding post nut and washer, shown in Figure 101, from the power supply.

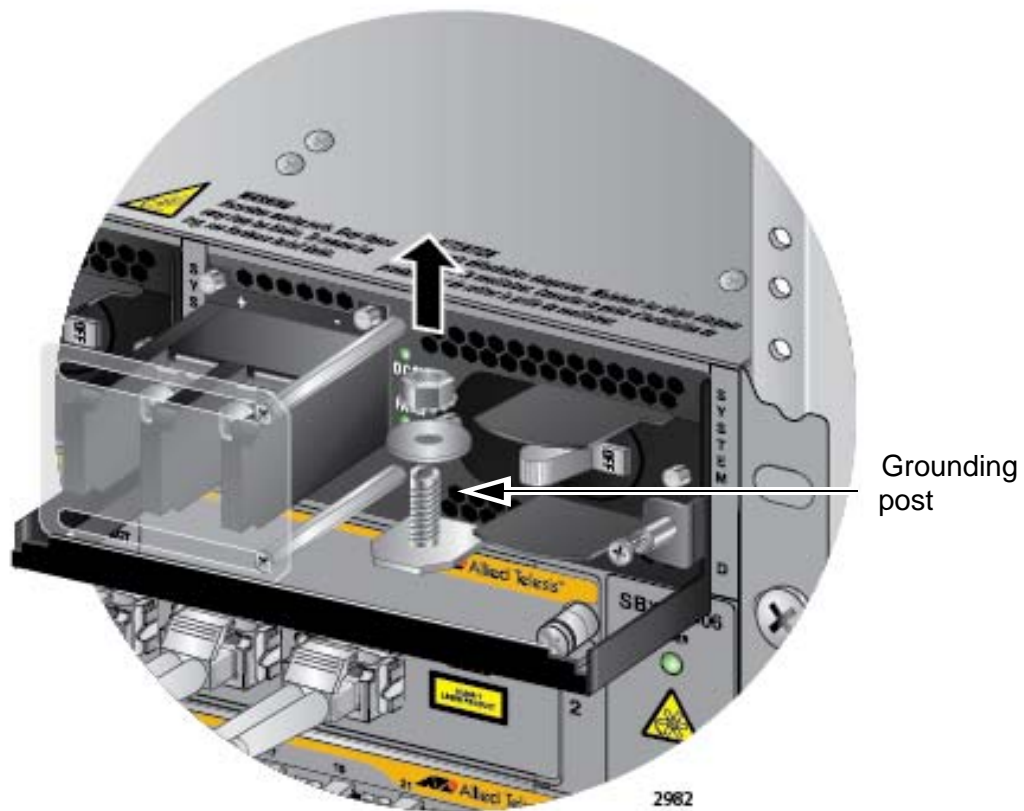


Figure 101. Removing the Nut and Washer from the Grounding Post

4. Attach the grounding lug and wire to the grounding post and secure them with the nut and washer removed in the previous step, and an 8 mm wrench.

Review the following before installing the grounding wire:

- ☐ You should angle the wire to the right so that you can open the plastic window to access the positive and negative terminals on the terminal block.
- ☐ You may route the cable either above or below the locking handle.

The grounding wire is illustrated in Figure 102 on page 165.

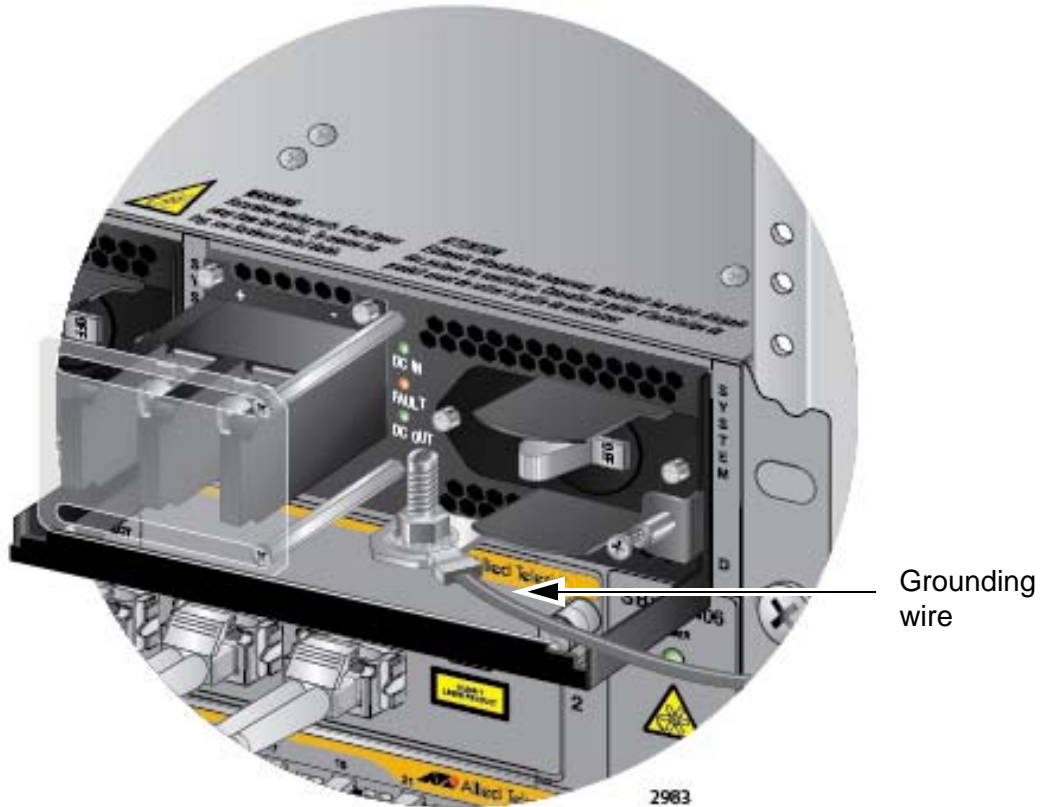


Figure 102. Installing the Grounding Wire

5. Connect the other end of the grounding wire to the building protective earth.

**Warning**

When installing this equipment, always ensure that the power supply ground connection is installed first and disconnected last. ⚡ E11

Note

This system will work with a positive grounded or negative grounded DC system. ⚡ E13

After connecting the grounding wire, go to “Choosing a Method for Attaching the Power Wires” on page 168.

Connecting the Grounding Wire with Bare Wire

To attach the grounding wire to the power supply with bare wire, perform the following procedure:

1. Prepare an adequate length of solid or stranded 10 AWG grounding wire by stripping it as shown in Figure 103.

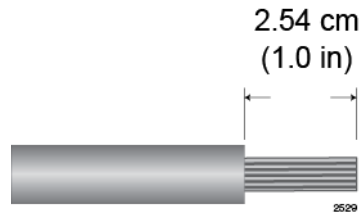


Figure 103. Stripping the solid or Stranded Grounding Wire

2. Use an 8 mm wrench to remove the grounding post nut and washer, shown in Figure 101 on page 164, from the grounding post on the power supply.
3. Wrap the grounding wire clockwise around the base of the grounding post, as shown in Figure 104.

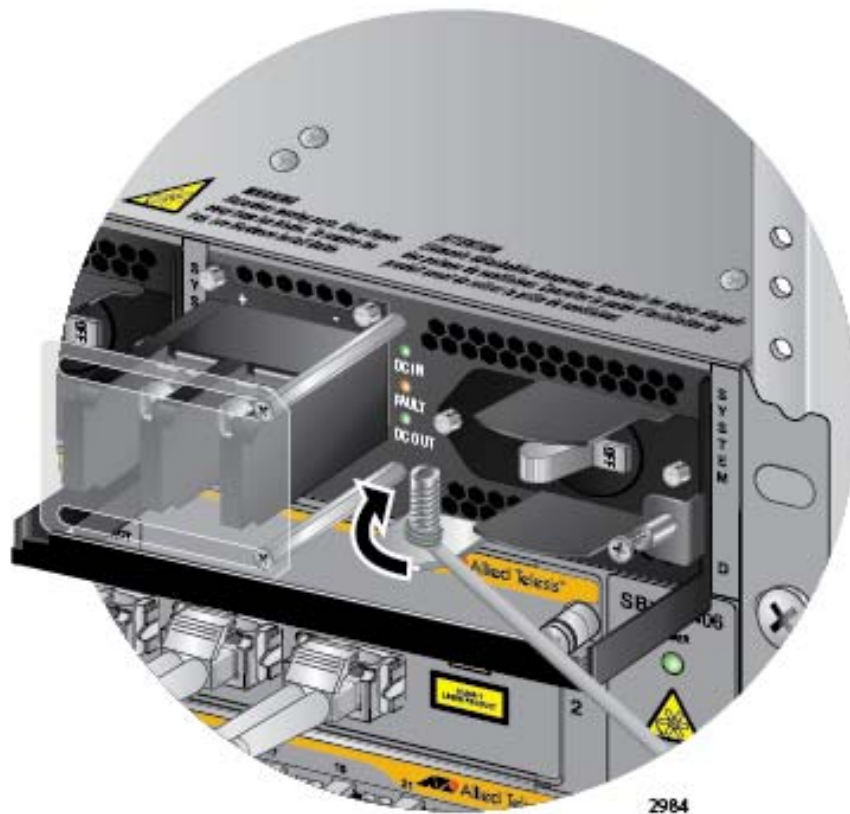


Figure 104. Attaching the Bare Grounding Wire to the Grounding Post

4. Secure the wire with the nut and washer removed in step 2, and an 8 mm wrench, as shown in Figure 105.

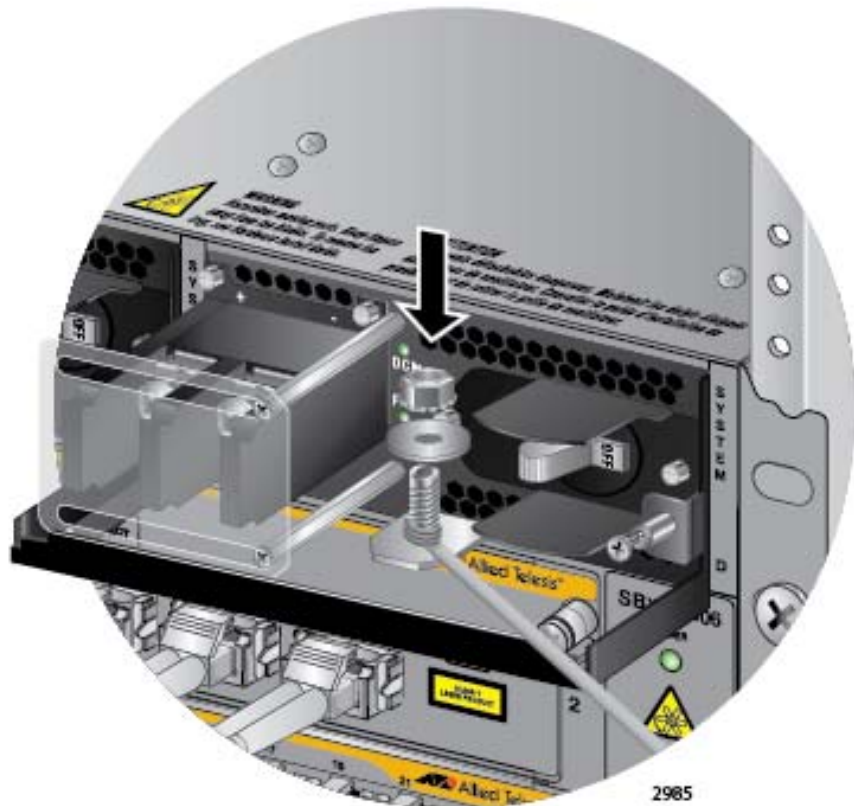


Figure 105. Securing the Bare Grounding Wire to the Grounding Post

5. After connecting the grounding wire, go to “Choosing a Method for Attaching the Power Wires” on page 168.

Choosing a Method for Attaching the Power Wires

The AT-SBxPWRSYS1 DC Power Supply comes with the two sets of power wire terminals shown in Figure 106. You may use either set to connect the positive (+) and negative (-) wires to the terminal block on the power supply. The straight terminals are used to route the wires above or below the terminal block. The right angle terminals are used to route the power wires directly away from the terminal block.



Straight Terminals

Right Angle Terminals

Figure 106. Power Wire Terminals

Note

The right angle terminals require the removal of the plastic cover from the terminal block.

You may also install the wires using bare wires.

Here are the procedures to wiring the positive and negative terminal block on the power supply:

- ❑ “Connecting the DC Power Wires with the Straight Terminals”
- ❑ “Connecting the DC Power Wires with the Right Angle Terminals” on page 177
- ❑ “Connecting Bare DC Power Wires” on page 183

Connecting the DC Power Wires with the Straight Terminals

To use the straight terminals to connect the DC power wires to the positive and negative terminals on the power supply, perform the following procedure:

1. Prepare adequate lengths of two stranded 8 AWG power wires by stripping them as shown in Figure 107 on page 169.



Warning

Do not strip more than the recommended amount of wire. Stripping more than the recommended amount can create a safety hazard by leaving exposed wire on the terminal block after installation. *GE* E10

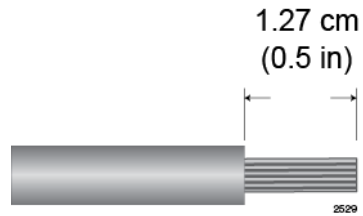


Figure 107. Stripping the Power Wires

Note

You must use stranded wires with the terminal lugs. You may not use solid wires.

2. Insert the power wires into the terminals included with the power supply and use a crimping tool to secure the wires to the terminals. See Figure 108.

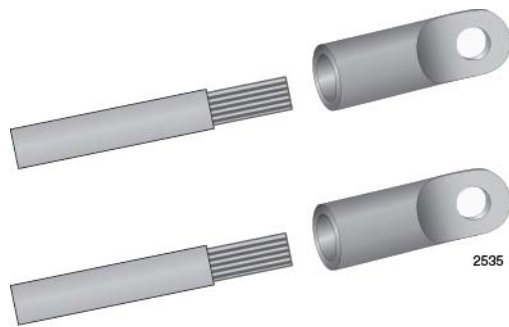


Figure 108. Attaching the Power Wires to the Straight Terminal Lugs

3. Verify that the On/Off switch on the AT-SBxPWRSYS1 DC Power Supply is in the Off position. Refer to Figure 109 on page 170.

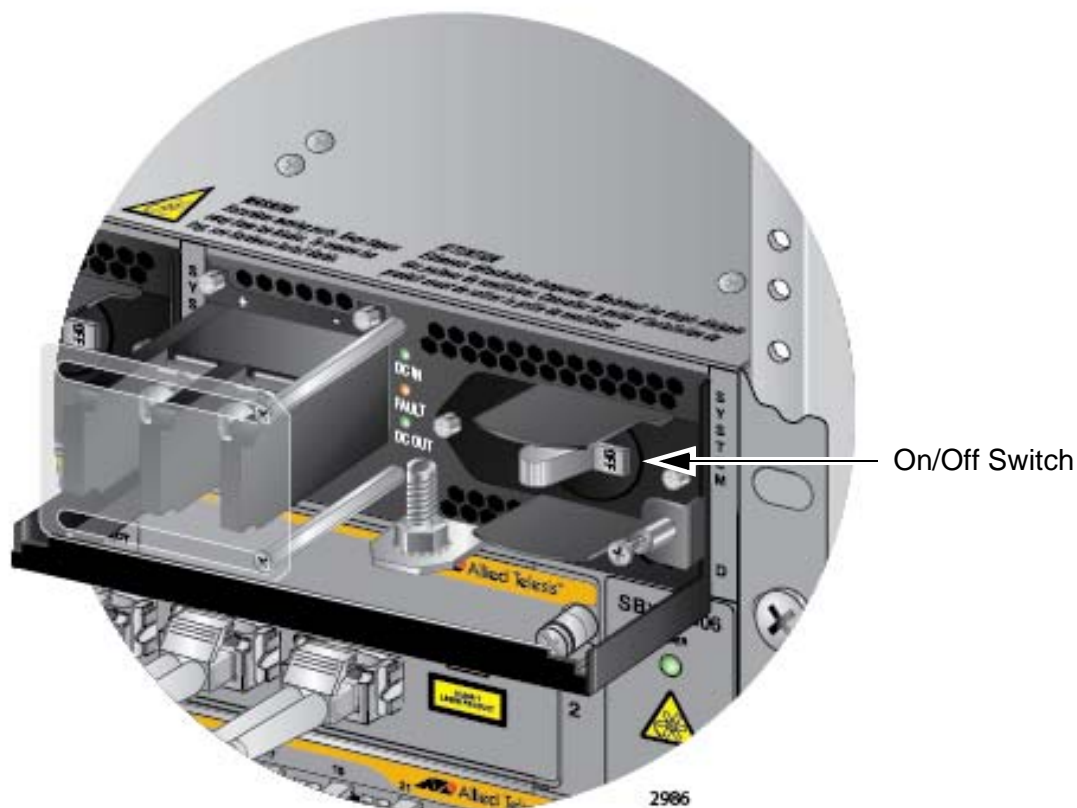


Figure 109. On/Off Switch on the AT-SBxPWRSYS1 DC Power Supply

4. Use a #1 Phillips-head screwdriver to loosen the two screws on the plastic cover over the positive and negative terminals on the power supply and slide the cover to the right, as shown in Figure 110 on page 171. You may need to slightly lift the locking handle to access the bottom screw.

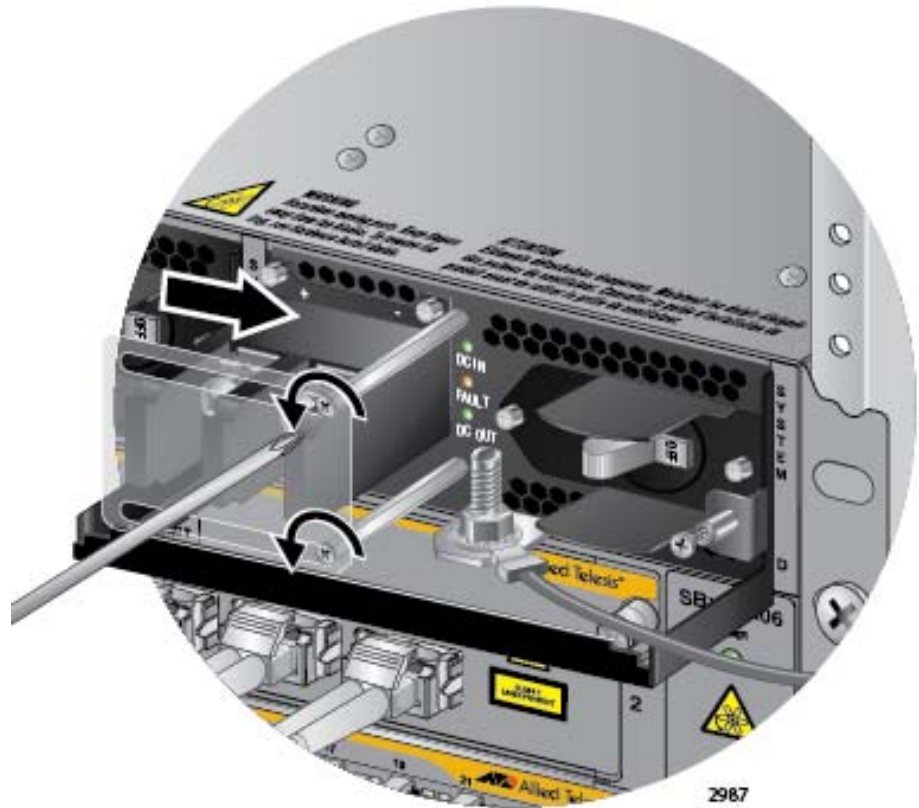


Figure 110. Opening the Plastic Cover

5. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 111 on page 172.



Figure 111. Removing the Terminal Screws

6. With a #3 Phillips-head screwdriver, connect the positive (+) power lead wire to the positive terminal on the power supply, with one of the terminal screws removed in the previous step. The positive terminal is on the left. You may attach the terminals with the wires either above or below the terminal block. Figure 112 on page 173 shows the positive wire above the terminal block.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

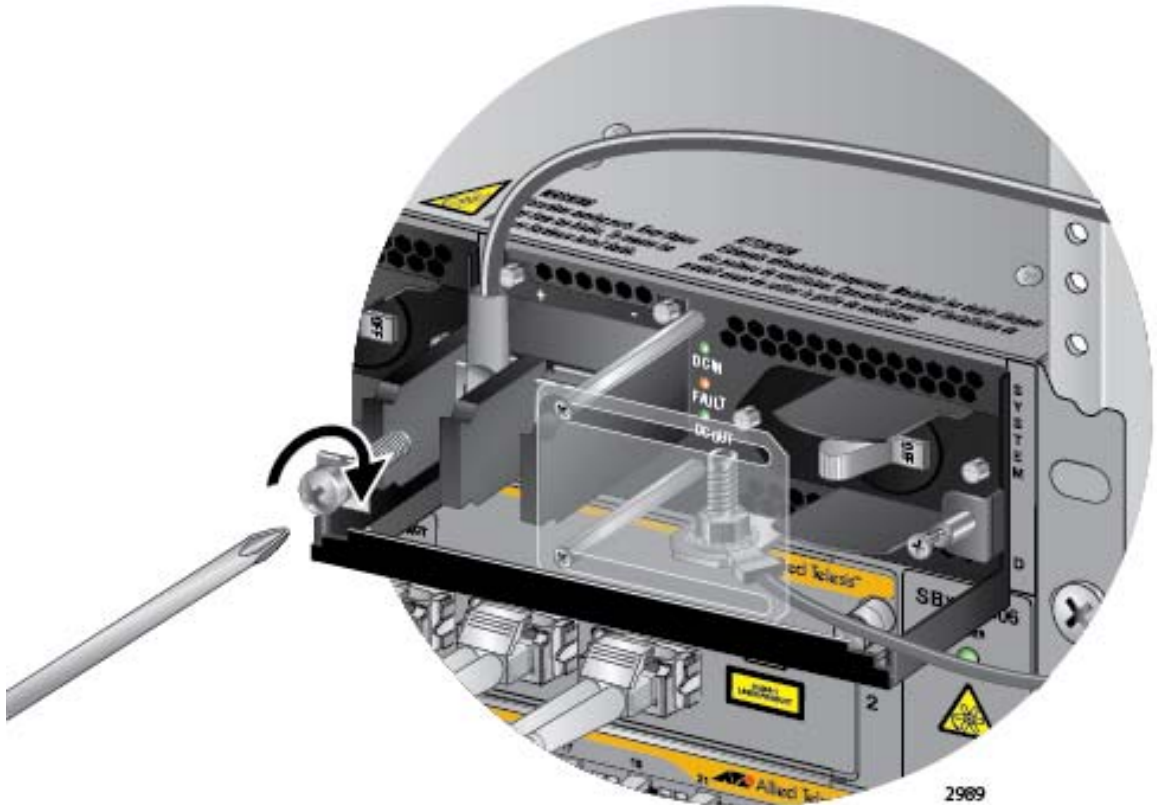


Figure 112. Connecting the Positive (+) Power Wire with a Straight Terminal

7. With a #3 Phillips-head screwdriver, connect the negative (-) power lead wire to the negative terminal on the power supply, with the remaining terminal screw removed in step 5. The negative terminal is on the right. You may attach the terminals with the wires either above or below the terminal block. Figure 113 on page 174 shows the wires above the terminal block.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

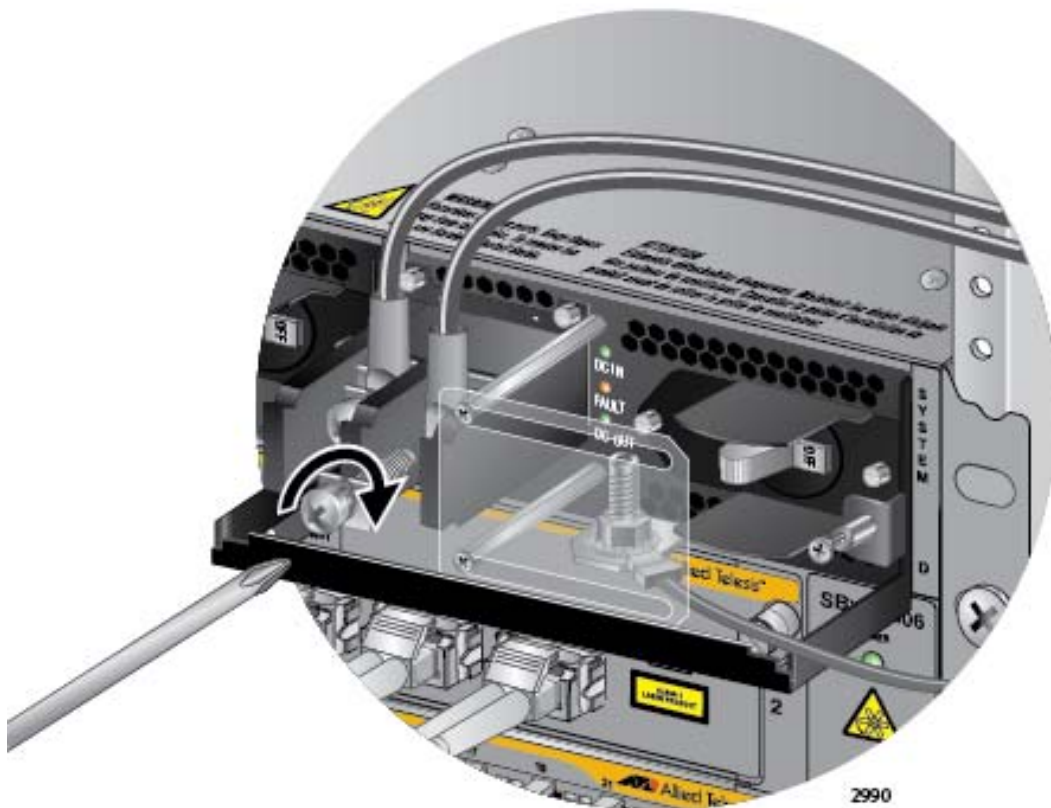


Figure 113. Connecting the Negative (-) Power Wire with a Straight Terminal



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. ⚡ E12

8. Slide the plastic cover to the left and lightly tighten the two screws with a #1 Phillips-head screwdriver to secure the cover. See Figure 114 on page 175. You might need to slightly lift the locking handle to access the bottom screw.



Caution

Do not over tighten the screws or you may crack or break the plastic cover.

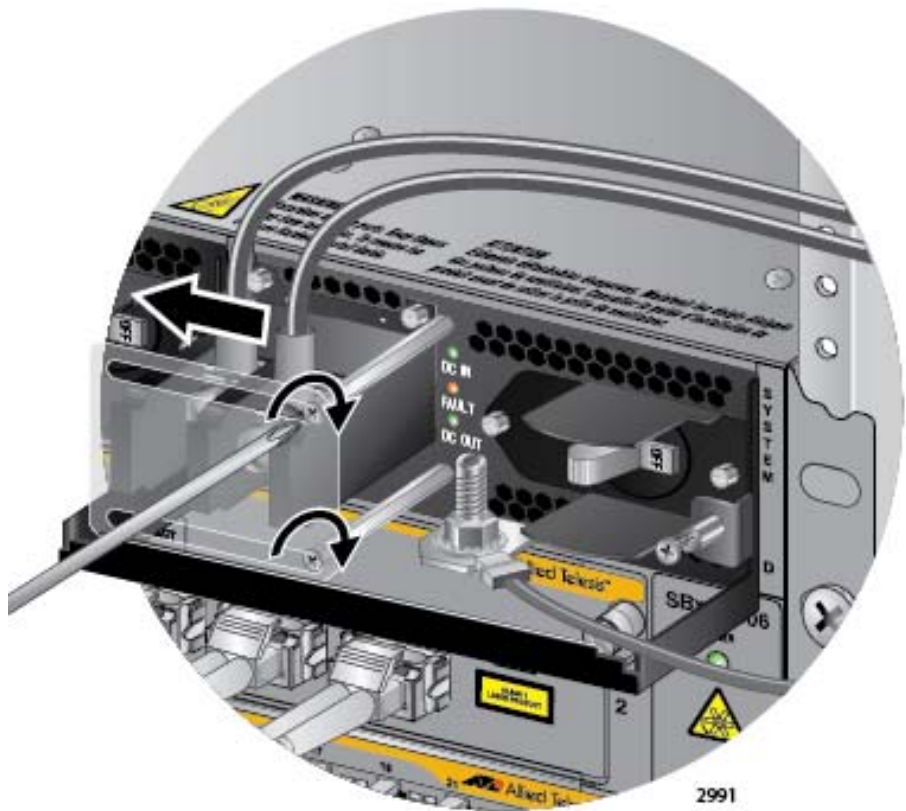


Figure 114. Closing the Plastic Cover over the Terminal Connectors

9. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 115 on page 176.

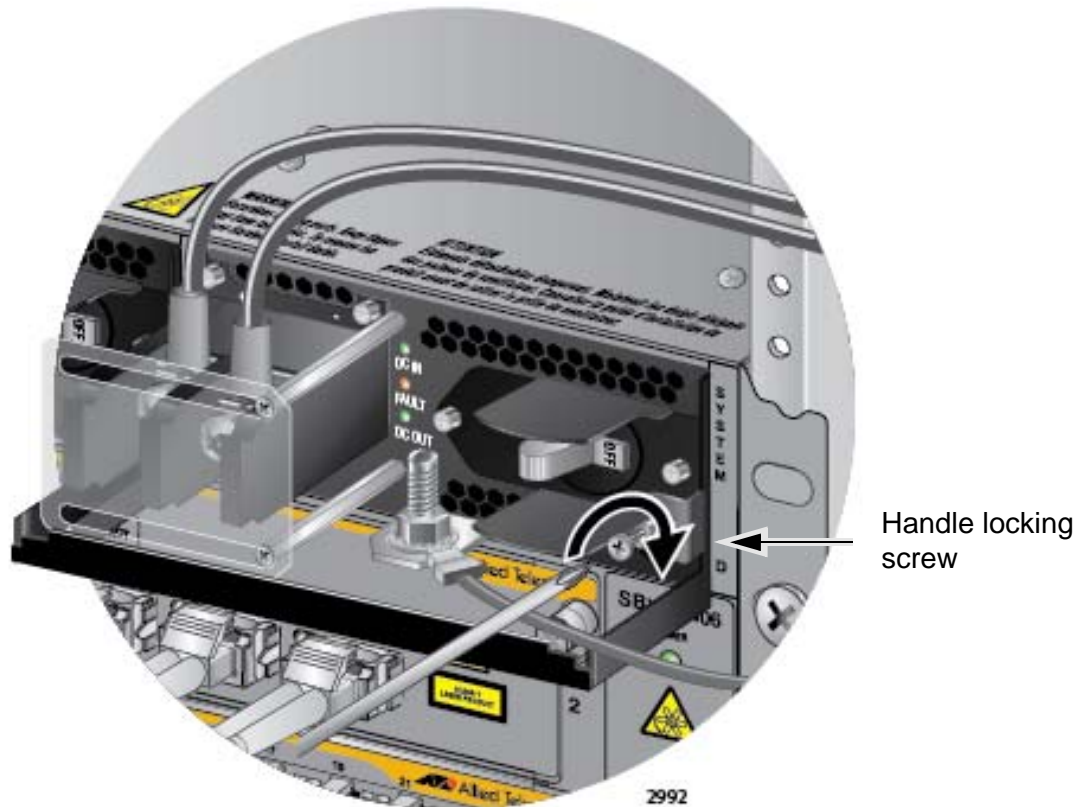


Figure 115. Tightening the Handle Locking Screw

10. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
11. Connect the power wires to the circuit breaker.
12. Turn the circuit breaker on.
13. Turn the On/Off switch on the power supply to the On position. See Figure 109 on page 170.
14. Do one of the following:
 - ❑ If the chassis has two AT-SBxPWRSYS1 DC Power Supplies, repeat this procedure to power on the second power supply.
 - ❑ Otherwise, go to “Monitoring the Initialization Process” on page 187.

Connecting the DC Power Wires with the Right Angle Terminals

To connect the DC power wires to the positive and negative terminals on the power supply with the right angle terminals, perform the following procedure:

1. Prepare adequate lengths of two stranded 8 AWG power wires by stripping them as shown in Figure 116.



Warning

Do not strip more than the recommended amount of wire. Stripping more than the recommended amount can create a safety hazard by leaving exposed wire on the terminal block after installation. E10

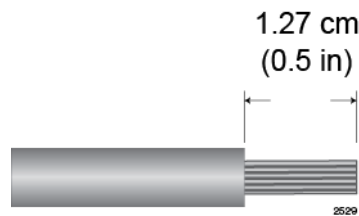


Figure 116. Stripping the Power Wires

Note

You must use stranded wires with the terminal lugs. You may not use solid wires.

2. Verify that the On/Off switch on the AT-SBxPWRSYS1 DC Power Supply is in the Off position. Refer to Figure 109 on page 170.
3. Insert the power wires into the right angle terminals included with the power supply and use a crimping tool to secure the wires to the terminals. See Figure 117,

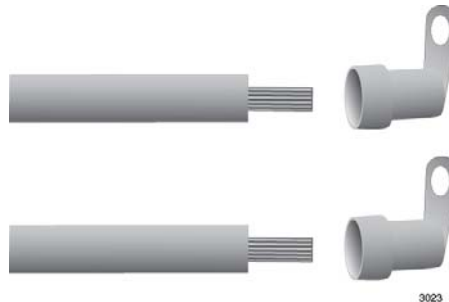


Figure 117. Attaching the Power Wires to the Right Angle Terminals

4. Using a #1 Phillips-head screwdriver, remove the two screws that secure the plastic cover over the positive and negative terminals and remove the plastic cover from the power supply, as shown in Figure 118. You may need to lift the locking handle slightly to access the bottom screw.

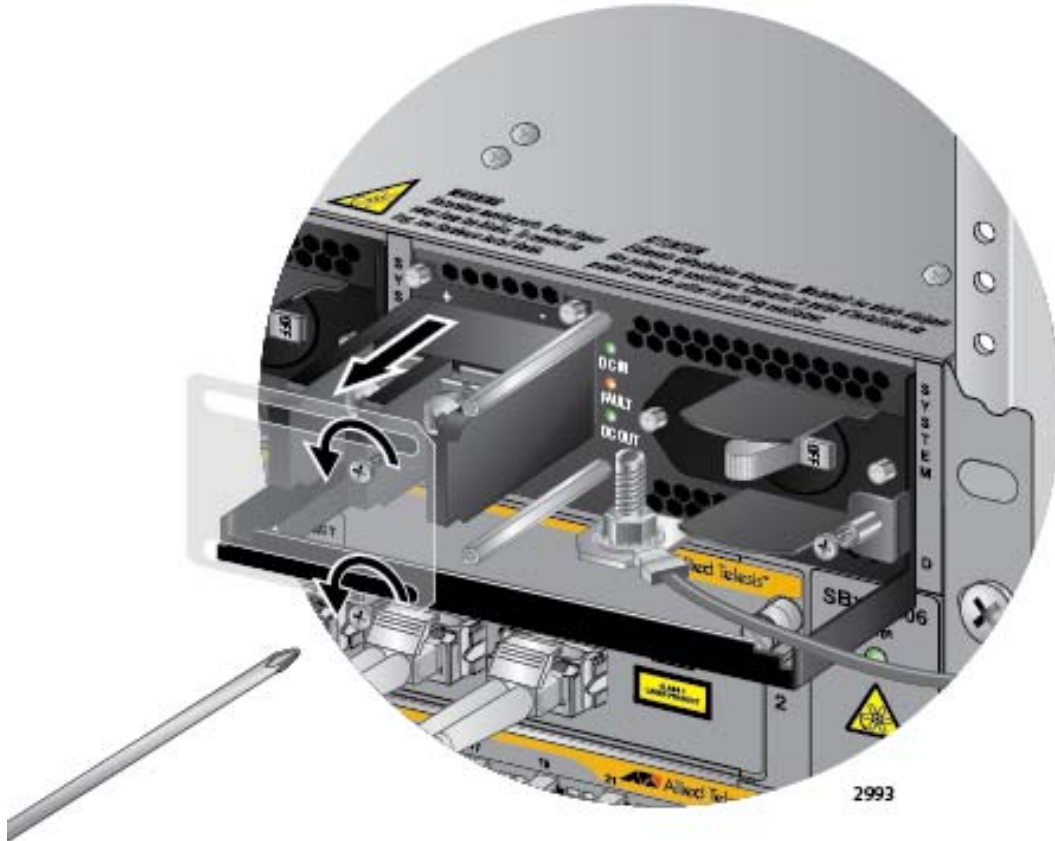


Figure 118. Removing the Plastic Cover

Note

The plastic cover is not used with the right angle terminals.

5. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 119 on page 179.



Figure 119. Removing the Terminal Screws

6. With a #3 Phillips-head screwdriver, connect the positive (+) power lead wire to the positive terminal on the power supply, with one of the terminal screws removed in the previous step. The positive terminal is on the left. Refer to Figure 120 on page 180.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

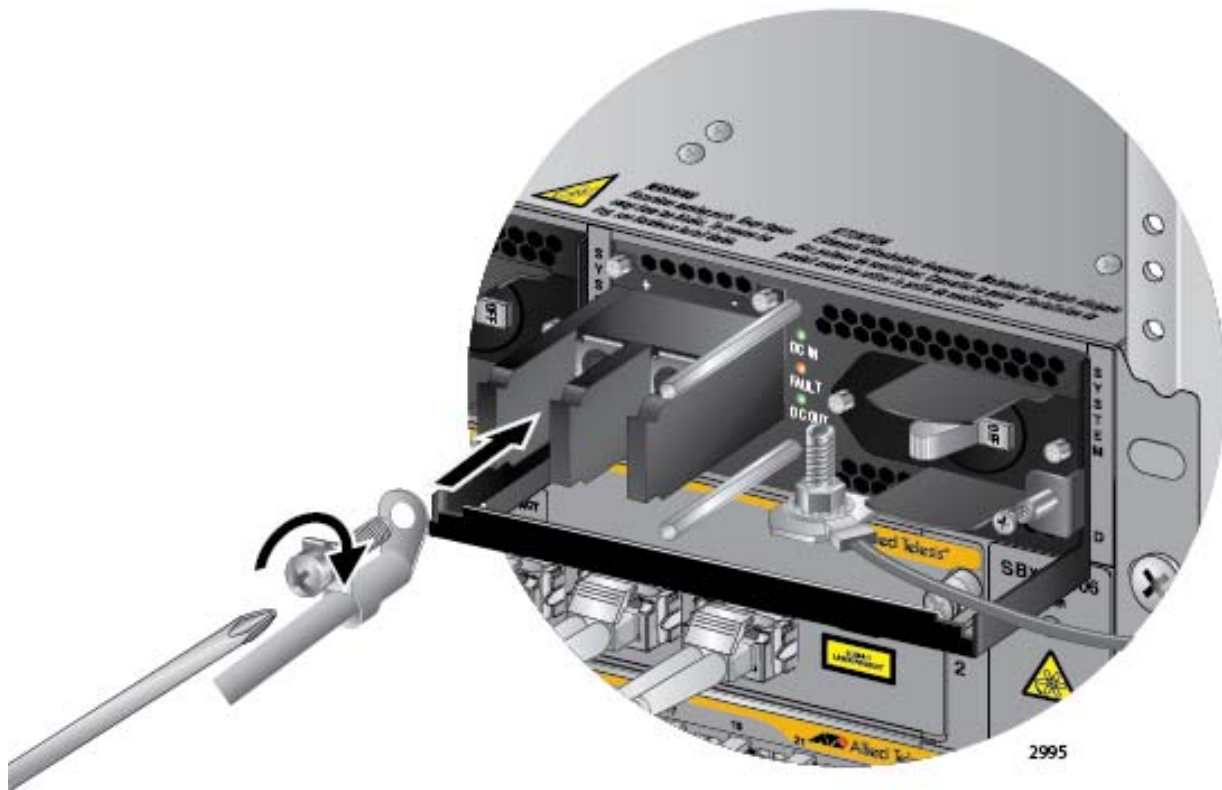


Figure 120. Connecting the Positive (+) Power Wire with a Right Angle Terminal

7. With a #3 Phillips-head screwdriver, connect the negative (-) power lead wire to the negative terminal on the power supply, with the remaining terminal screw removed in step 5. The negative terminal is on the right. Refer to Figure 121 on page 181.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.



Figure 121. Connecting the Negative (-) Power Wire with a Right Angle Terminal



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. ⚡ E12

8. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 122 on page 182.

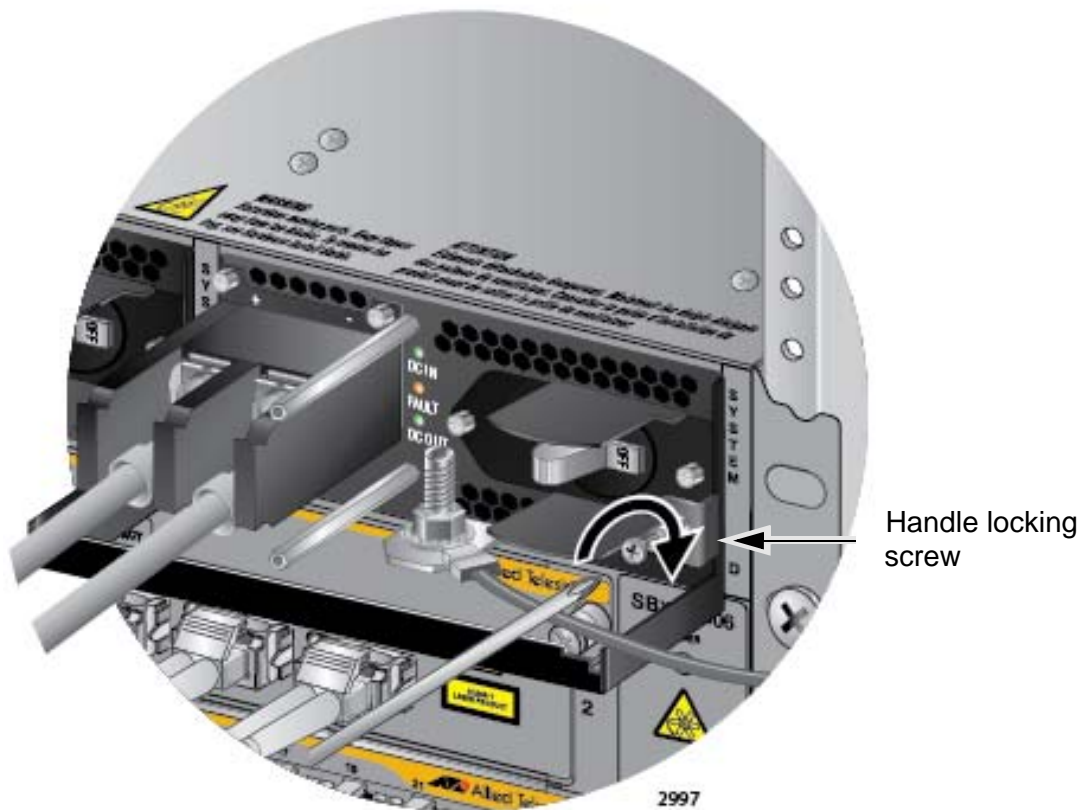


Figure 122. Tightening the Handle Locking Screw

9. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
10. Connect the power wires to the circuit breaker.
11. Turn the circuit breaker on.
12. Turn the On/Off switch on the power supply to the On position. See Figure 109 on page 170.
13. Do one of the following:
 - ❑ If the chassis has two AT-SBxPWRSYS1 DC Power Supplies, repeat this procedure to power on the second power supply.
 - ❑ Otherwise, go to “Monitoring the Initialization Process” on page 187.

Connecting Bare DC Power Wires

To attach bare lead wires to the positive and negative terminals on the power supply, perform the following procedure:

1. Prepare adequate lengths of two solid or stranded 8 AWG DC power wires by stripping them as shown in Figure 123.

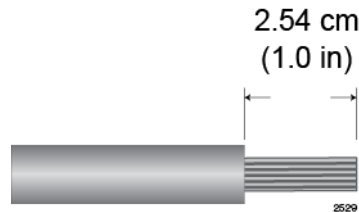


Figure 123. Stripping Solid or Stranded DC Power Wires

2. Use a #1 Phillips-head screwdriver to loosen the two screws on the plastic cover over the positive and negative terminals on the power supply and slide the cover to the right, as shown in Figure 110 on page 171. You may need to lift the locking handle slightly to access the bottom screw.
3. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 111 on page 172.
4. Wrap the positive lead wire clockwise around one of the terminal screws and secure the screw and wire to the positive terminal connection on the terminal block with a #3 Phillips-head screwdriver. The positive terminal is on the left.

You may attach the wire to the terminal so that it extends either above or below the terminal block. Figure 124 on page 184 shows the wire above the terminal block. Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.



Figure 124. Connecting the Positive Lead Wire

5. Wrap the negative lead wire clockwise around the remaining terminal screw and secure the screw and wire to the negative terminal connection on the terminal block with a #3 Phillips-head screwdriver, as shown in Figure 125 on page 185. The negative terminal is on the right.

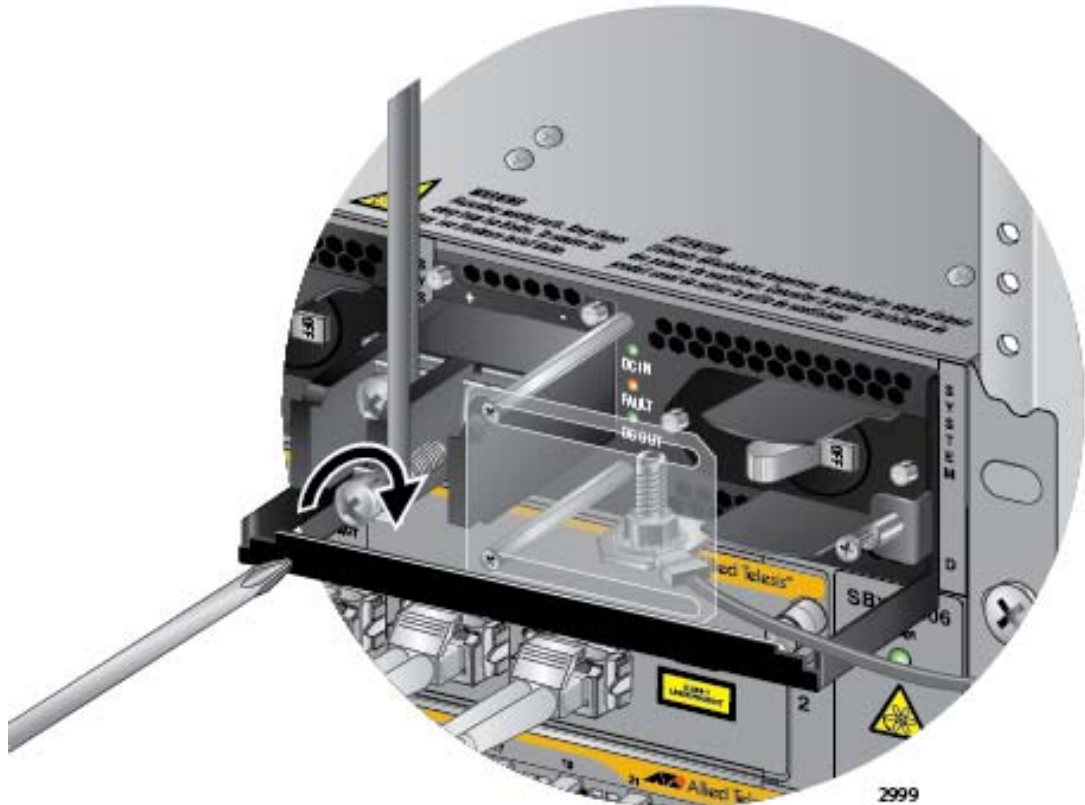


Figure 125. Connecting the Negative Lead Wire

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. ⚡ E12

6. Slide the plastic cover to the left and lightly tighten the two screws with a #1 Phillips-head screwdriver to secure the cover. See Figure 114 on page 175. You might need to slightly lift the locking handle to access the bottom screw.



Caution

Do not over tighten the screws or you may crack or break the plastic cover.

7. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 115 on page 176.
8. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
9. Connect the power wires to the circuit breaker.
10. Turn the circuit breaker on.
11. Turn the On/Off switch on the power supply to the On position. See Figure 109 on page 170.
12. Do one of the following:
 - ❑ If the chassis has two AT-SBxPWRSYS1 DC Power Supplies, repeat this procedure to power on the second power supply.
 - ❑ Otherwise, go to “Monitoring the Initialization Process” on page 187.

Monitoring the Initialization Process

The line and controller cards perform an initialization process when you power or reset the chassis. The initialization process takes approximately two minutes to complete. The line cards do not begin to forward traffic from their ports until the process is finished.

The process has two phases. In the first phase, which takes approximately one minute, the controller card loads and initializes its AlliedWare Plus Operating System and, if there are two controller cards in the chassis, sets its active or standby state. In the second phase, the Ethernet line cards receive their management software from the active controller card, initialize the software, and configure their parameter settings according to the configurations provided by the active controller card. This phase also takes one minute, after which, the line cards begin to forward traffic.

You may monitor the initialization process by viewing either the LEDs on the cards or the messages on the Console port, as explained in the following sections.

Using the LEDs to Monitor the Initialization Process

To monitor the first phase of the initialization process in which the controller card initializes its AlliedWare Plus Operating System and establishes its active master or standby master state, examine the CFC LED in the System Status LEDs on the card. The LED flashes green while the card initializes its management software. When this phase is finished, the card changes the LED to solid green if it is the active master or solid amber if it is the standby master.

To monitor phase 2 in which the line cards initialize and configure their management software, watch the SBx Linecard Status LEDs. There are twelve LEDs (numbered 1 to 12), one for each slot. The LED for a slot flashes green while the corresponding line card initializes its management software and configures its settings in accordance with the settings from the active controller card. The LED changes to solid green when the line card completes the initialization process and begins forwarding traffic.

Using the Console Port to Monitor the Initialization Process


Another way to monitor the initialization process of the chassis is to connect a terminal or PC with a terminal emulator program to the Console port on the controller card and watch the status messages. If the chassis has two controller cards, you should use the Console port on the controller card in slot 5. (The settings for the terminal or terminal emulator program are found in “Using Local Management to Verify the Chassis” on page 194.) Figure 126 on page 188 and Figure 127 on page 189 illustrate the messages. The controller and line cards are fully initialized and forwarding network traffic when the Console port displays the “awplus login” prompt.

Verifying release... OK

Booting...

Starting base/first... [OK]

Mounting virtual filesystems... [OK]

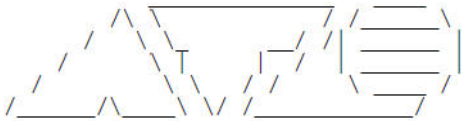

Allied Telesis Inc.

AlliedWare Plus (TM) v5.4.3

Current release filename: SBx31CFC400-5.4.3.rel

Original release filename: SBx31CFC400-5.4.3.rel

Built: Tue Oct 11 16:36:59 NZDT 2011 by: maker@maker06-build

Mounting static filesystems... [OK]

Checking flash filesystem... [OK]

Mounting flash filesystem... [OK]

Checking for last gasp debug output... [OK]

Checking NVS filesystem... [OK]

Mounting NVS filesystem... [OK]

Starting base/rename-eth... [OK]

Starting base/arm_sysctl... [OK]

Starting base/dbus... [OK]

Starting base/syslog... [OK]

Starting base/lif_ok... [OK]

.

.

.

Received event modules.done

Received event board.inserted

Received event hardware.done

Starting network/startup... [OK]

Starting network/stackd... [OK]

Starting network/election.timeout... [OK]

Received event network.enabled

Initializing HA processes:

08:24:38 awplus-5 chassis[1492]: Card 5 (AT-SBx81CFC400) has joined chassis

08:24:40 awplus-5 chassis[1492]: Card 5 (AT-SBx81CFC400) has become the Active C

08:24:40 awplus-5 chassis[1492]: Card 1 (AT-SBx81GP24) has joined chassis

08:24:40 awplus-5 chassis[1492]: Card 2 (AT-SBx81GP24) has joined chassis

08:24:40 awplus-5 chassis[1492]: Card 3 (AT-SBx81GT40) has joined chassis

08:24:40 awplus-5 chassis[1492]: Card 4 (AT-SBx81GT40) has joined chassis

Received event vcs.elected-slave

08:24:44 awplus-5 chassis[1492]: Card has booted as one off boot, SW version au.

Figure 126. Switch Initialization Messages

```
auth, bgpd, cntd, epsr, exfx, hostd, hsl  
imi, imiproxyd, irdpd, lacp, lldpd, loopprot, mstp  
nsm, openhpid, ospf6d, ospfd, pdmd, pimd, ripd  
ripngd, rmon, sflowd, vrrpd  
.  
.  
.  
Received event network. active  
  
Loading configuration file from active CFC, please wait.  
.  
  
done!  
Received event network. configured  
  
awplus login:
```

Figure 127. Switch Initialization Messages (Continued)

Chapter 10

Verifying the Hardware Operations of the Chassis

This chapter describes how to verify the operations of the chassis. The chapter contains the following sections:

- ❑ “Using the LEDs to Verify the Chassis” on page 192
- ❑ “Using Local Management to Verify the Chassis” on page 194

Note

Allied Telesis recommends using both methods to confirm the initial operations of the chassis, controller cards, and line cards.

Using the LEDs to Verify the Chassis

After powering on the chassis for the first time and waiting a minimum of three minutes for the line and controller cards to complete the initialization process, check the operational status of the various hardware components by examining the LEDs, as explained in this procedure:

1. Check the LEDs on the power supplies:
 - ❑ AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 AC Power Supplies: The power supplies are operating properly when the AC and DC LEDs are solid green and Fault LEDs are off. If there is a problem, refer to “AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies” on page 198 for troubleshooting suggestions.
 - ❑ AT-SBxPWRSYS1 DC Power Supply: The power supply is operating properly when the DC IN and DC OUT LEDs are solid green and the Fault LED is off. If there is a problem, refer to “AT-SBxPWRSYS1 DC System Power Supply” on page 200 for troubleshooting suggestions.
2. Check the Power LED on the AT-SBxFAN12 module. The module is operating normally when the LED is solid green. If the LED is off, the fan module has a problem or failed. Power off the chassis and contact your Allied Telesis representative for assistance. Do not operate the chassis without a fully operational fan unit.
3. If the chassis has one controller card, check the CFC LED on the card. It should be solid green. If the LED is flashing green, the card is still initializing its AlliedWare Plus Operating System. Wait another minute and check the LED again. If the LED is still flashing green, the card may have encountered a problem that prevents it from completing the initialization process. Power off the chassis and replace the controller card.

Note

If all the LEDs on the controller card are off, they may have been turned off. Try pressing the eco-friendly button on the card to turn them on.

4. If the chassis has two controller cards, check the CFC LEDs on both cards. The cards are operating correctly when the LEDs are solid green on one card and solid amber on the other. If both LEDs are flashing green, the controller cards are still completing the initialization process. If the LEDs do not change to solid green and amber after another minute, the cards may have encountered a problem that

prevents them from completing the initialization process. Power off the chassis and replace the cards.

5. To check the status of the Ethernet line cards, inspect the SBx Linecard Status LEDs on the controller card. (If the chassis has two controller cards, you may use the LEDs on either card.) The AT-SBx8106 Chassis uses SBx Linecard Status LEDs 1 to 6, but not 7 to 12. A line card is operating normally when its corresponding LED is solid green. The LED flashes green as the card initializes its management software. If an LED is flashing green after two minutes, the corresponding line card may have a problem and cannot complete the initialization process. For example, the line card in slot 2 of the chassis is operating normally when the SBx Linecard Status, number 2 LED is solid green. For troubleshooting suggestions, refer to “Ethernet Line Cards” on page 202.
6. To check the status of the links of the individual ports on the line cards, inspect the L/A LEDs on the cards. The LEDs should be solid or flashing green on ports that are connected to active network devices. If there is a problem with a link, refer to “Twisted Pair Ports” on page 203 and “Fiber Optic Transceivers” on page 207 for troubleshooting suggestions.
7. To check the status of PoE on the ports of the AT-SBx81GP24 Line Card, use the PoE LEDs, shown in Figure 17 on page 41. The LEDs are solid green when ports are delivering power to powered devices on your network. If there is a problem, refer to “Power Over Ethernet” on page 205 for troubleshooting suggestions.

Using Local Management to Verify the Chassis

This section explains how to use the commands in the AlliedWare Plus Operating System on the controller card to confirm the operations of the chassis. The section has the following procedure:

- ❑ “Starting a Local Management Session” on page 194
- ❑ “Entering the AlliedWare Plus Operating System Commands” on page 195

The initial management session of the switch must be a local management session. For instructions on how to configure the chassis for remote management with a Telnet or Secure Shell client, refer to the *Software Reference for SwitchBlade x8100 Series Switches*.

Starting a Local Management Session

To start a local management session, perform the following procedure:

1. Connect the RJ-45 end of the management card included with the AT-SBx81CFC400 Controller Fabric Card to the Console RS-232 port on the front panel of the AT-SBx81CFC400 Control Card, as shown in Figure 128. If the chassis has two controller cards, you must connect the cable to the Console RS-232 port on the active master card. To determine which card is the active master controller card, examine the CFC LEDs. The LEDs are green on the active master controller card and amber on the standby master controller card.

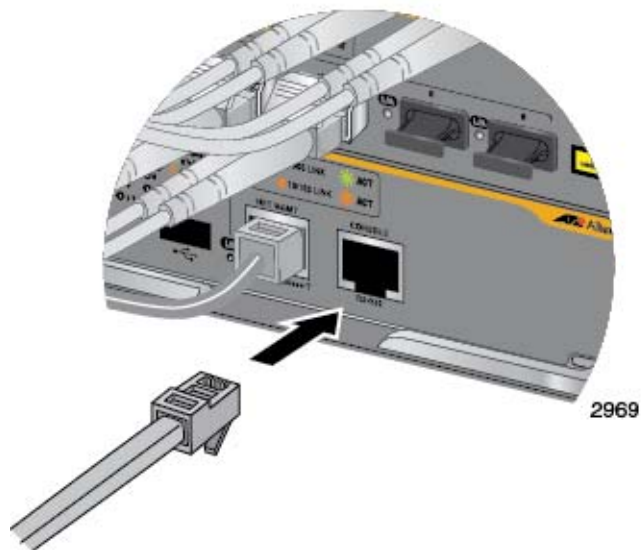


Figure 128. Connecting the Management Cable to the Console RS-232 Port

2. Connect the other end of the cable to an RS-232 port on a terminal or personal computer with a terminal emulation program.

3. Configure the VT-100 terminal or terminal emulation program as follows:

- ☐ Baud rate: 115,200 bps
- ☐ Data bits: 8
- ☐ Parity: None
- ☐ Stop bits: 1
- ☐ Flow controller: None

Note

The port settings are for a DEC VT100 or ANSI terminal, or an equivalent terminal emulator program.

4. Press Enter. You are prompted for a user name and password.
5. Enter the default user name and password. They are “manager” and “friend” (without the quotes), respectively

Note

User names and passwords are case sensitive.

The local management session starts and the command line interface (CLI) prompt is displayed.

Entering the AlliedWare Plus Operating System Commands

To confirm the operations of the chassis with the commands in the AlliedWare Plus Operating System, perform the following procedure:

1. Enter the SHOW VERSION command in the User Exec or Privileged Exec mode to display the software version number of the management software on the controller card. An example of the command is shown in Figure 129.

```
awplus# show version

AlliedWare Plus (TM) 5.4.4

Build name : SBx81CFC400-5.4.5-1.rel ← Software Version Number
Build date : Wed Dec 15 12:13:19 NZDR 2013
Build type : RELEASE
NEW-SNMP SNMP agent software
(c) 1996, 1998-2000 The Regents of the University of California.
All rights reserved;
.
.
.
```

Figure 129. SHOW VERSION Command

2. Compare the version number displayed by the `SHOW VERSION` command with the information in Table 19 on page 72 to confirm that the version of the AlliedWare Plus Operating System on the controller card supports all the hardware components in the chassis. If necessary, update the management software on the controller card.
3. To display the status of the power supplies, fan module, and AT-SBx81CFC400 Controller Fabric Cards, use the `SHOW SYSTEM ENVIRONMENT` command in the User Exec or Privileged Exec mode. The Status column in the display provides the states of the modules. Components are operating normally when they have an “Ok” status.
4. To display the status of the line cards, use the `SHOW CARD` command in the Privileged Exec mode. A line card has a state of “Online” when it is operating normally. An example of the status information is shown in Figure 130.

```
awpl us# show card
```

Slot	Card Type	State
1	AT-SBx81GP24	Online
2	AT-SBx81XS6	Online
3	AT-SBx81GP24	Online
4	AT-SBx81GS24a	Online
5	AT-SBx81CFC400	Online (Active)
6	AT-SBx81CFC400	Online (Standby)

Figure 130. `SHOW CARD` Command

5. To display the states of the individual ports on the Ethernet line cards, use the `SHOW INTERFACE STATUS` command in the Privileged Exec mode.
6. To check the status of PoE on the ports of the AT-SBx81GP24 Line Card, use the `SHOW POWER-INLINE` or `SHOW POWER-INLINE INTERFACE` command in the User Exec or Privileged Exec mode.

For information about the command line interface, refer to the *Software Reference for SwitchBlade x8100 Series Switches* on the Allied Telesis web site.

Chapter 11

Troubleshooting

This chapter contains information on how to troubleshoot the SwitchBlade x8106 product.

Note

If you are unable to resolve a hardware problem with the instructions in this chapter, contact Allied Telesis Technical Support for further assistance. Refer to “Contacting Allied Telesis” on page 17 for contact information.

The following troubleshooting information is available:

- ❑ “AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies” on page 198
- ❑ “AT-SBxPWRSYS1 DC System Power Supply” on page 200
- ❑ “Ethernet Line Cards” on page 202
- ❑ “Twisted Pair Ports” on page 203
- ❑ “Power Over Ethernet” on page 205
- ❑ “Fiber Optic Transceivers” on page 207
- ❑ “AT-SBx81CFC400 Controller Fabric Card” on page 208
- ❑ “AT-SBxFAN06 Fan Module” on page 209
- ❑ “Local (Console) Management Session” on page 210
- ❑ “Power Supply Interfaces (Opto-couplers)” on page 211

AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies

The AT-SBxPWRSYS1 and AT-SBxPWRSYS2 AC System Power Supplies and AT-SBxPWRPOE1 PoE Power Supply are operating normally when the AC and DC LEDs are solid green and the Fault LED is off. Possible fault conditions and their solutions are described here:

Fault Condition 1: If the AC LED is off, the power supply is not receiving power, has overheated and been disabled, or has failed and needs to be replaced. Try the following:

- ❑ Verify that there is a power cord connected to the power supply's connector on the back panel of the chassis. For example, if a power supply in slot C does not have power, check for a power cord on connector C on the back panel.
- ❑ Verify that the power cord is securely connected to the chassis and the AC power source.
- ❑ Verify that the AC power has power by connecting another device to it.
- ❑ Verify that the power from the AC power source is within the required levels for your region.
- ❑ If the chassis is still operating, use the SHOW PSU or SHOW PSU ALL command from a local or remote management session to determine if the power supply has overheated and shutdown.

Fault Condition 2: If the AC LED is solid green and the DC LED is off, the power unit is generating insufficient DC power. Replace the power supply.

Fault Condition 3: If the Fault LED is solid amber, try the solutions in Fault Condition 1. If they do not resolve the problem, replace the power supply.

Note

The power supplies are hot swappable in a redundant configuration. This allows the AT-SBx8106 Chassis to continue operating while you exchange power supplies.

Fault Condition 4: If the LEDs on the power supply indicate normal operations but the PSU LED on the active master controller card is showing a fault condition, the problem may be with one of the two power supply interfaces (opto-couplers) on the rear panel of the chassis. For troubleshooting suggestions, refer to "Power Supply Interfaces (Opto-couplers)" on page 211.



Caution

The power supply interfaces are *not* hot swappable and should only be serviced by an authorized service technician.

AT-SBxPWRSYS1 DC System Power Supply

If you suspect a problem with the DC power supply, examine its LEDs. The power supply is operating normally when the DC IN and DC OUT LEDs are solid green and the Fault LED is off. Possible fault conditions and their solutions are described here:

Fault Condition 1: If the DC IN LED is off, the power supply is not receiving power, has overheated and been disabled, or has failed and needs to be replaced. Try the following:

- ❑ Verify that the On/Off switch on the power supply is in the On position.
- ❑ Verify that the DC circuit breaker is on.
- ❑ Verify that the positive and negative power wires are correctly and securely connected to the terminal block on the power supply and circuit breaker.
- ❑ Verify that the DC circuit break has power by attaching another device to it.
- ❑ Verify that the power from the DC circuit break is within the required levels of the power supply. Refer to “Power Specifications” on page 244.
- ❑ If the chassis is still operating, use the SHOW PSU or SHOW PSU ALL command from a local or remote management session to determine if the power supply has overheated and shutdown.

Fault Condition 2: If the DC IN LED is solid green but the DC OUT LED is off, the power unit is generating insufficient DC power. Replace the power supply.

Fault Condition 3: If the Fault LED is solid amber, try the solutions in Fault Condition 1. If they do not resolve the problem, replace the power supply.

Note

The power supply is hot swappable. If the chassis has two power supplies and one of them fails, you do not have to power off the operational power supply to replace the failed unit.

Fault Condition 4: If the LEDs on the power supply indicate normal operations but the PSU LED on the active master control card is off or is showing a fault condition, try the following suggestions:

- ❑ The control card may not be able to detect the DC power supply because it is not running the most recent version of the management software. For instructions on how to verify the

software version on the control card, refer to “Using Local Management to Verify the Chassis” on page 194 and “AlliedWare Plus Software Releases for the Hardware Components” on page 72.

- ❑ The problem may be with one of the two power supply interfaces (opto-couplers) on the rear panel of the chassis. For troubleshooting suggestions, refer to “Power Supply Interfaces (Opto-couplers)” on page 211.

**Caution**

The power supply interfaces are *not* hot swappable and should only be serviced by an authorized service technician.

Ethernet Line Cards

A quick and easy way to check the overall health of the Ethernet line cards in the chassis is with the SBx STATUS LEDs on the controller card. (If the chassis has two controller cards, you may use the LEDs on either card.) There are twelve LEDs, numbered 1 to 12. The AT-SBx8106 Chassis uses LEDs 1 to 6, but not 7 to 12. LED 1 is for slot 1, LED 2 for slot 2, and so on. The cards in the slots are operating normally when the LEDs are green. The card in slot 2 of the chassis, for example, is operating normally when the SBx STATUS LED 2 on the controller card is solid green.

If you suspect a problem with an Ethernet line card or controller card, try the following:

- ❑ If all the L/A LEDs on the card are off, try pressing the eco-friendly button on the active master controller card to verify that the LEDs on the line cards are on.
- ❑ Check the card's status LED in the SBx STATUS LEDs on the controller card. If the LED is flashing amber, the card is initializing its management software. Wait one to two minutes for the card to complete the process. If the LED does not change to green, try installing the line card in a different slot. If the problem remains, the card cannot complete the initialization process. Try installing the card in another chassis with a different controller card.
- ❑ If the card's status LED in the SBx STATUS LEDs on the controller card is solid amber, the card might not be able to boot up because the controller card does not have its load file and needs to be updated.

Here are some other steps to try:

- ❑ Check that the card is completely installed in the slot and that the front plate is flush with the front of the chassis.
- ❑ Try resetting the card with the REBOOT CARD command. The example of the command restarts the card in slot 2:

```
awpl us# reboot card 2
Reboot card 2 system? (y/n)? y
awpl us#
```

- ❑ Try installing the card in a different slot. If it works in the new slot, the problem is with the previous slot.
- ❑ Try installing the card in a different chassis. If it works in the new chassis, the problem is with the previous chassis. If the problem persists, the problem is with the card.
- ❑ Use the SHOW CARD command to display card status information, as shown in Figure 130 on page 196.

Twisted Pair Ports

This section applies to the twisted pair ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards. To determine whether a twisted pair port on one of the cards has established a link to a network device, examine its L/A LED. The L/A LEDs for the ports on the AT-SBx81GT24 and AT-SBx81GP24 Line Cards are illustrated in Figure 12 on page 36 and Figure 17 on page 41, respectively. The L/A LEDs for the ports on the AT-SBx81GT40 Line Card are shown in Figure 15 on page 38.

A L/A LED is solid or flashing green when a port is operating at 1000 Mbps and solid or flashing amber at 10 or 100 Mbps.

If a port is cabled to a network device but the L/A LED is off, try the following:

- ❑ If all the L/A LEDs on the cards are off, try pressing the eco-friendly button on the active master controller card to verify that the LEDs on the line cards are on.
- ❑ Verify that the network device connected to the port is powered on and operating properly.
- ❑ Check that the twisted pair cable is securely connected to the ports on the line card and the end node.
- ❑ Make sure that the twisted pair cable does not exceed 100 m (328 ft).
- ❑ Refer to Table 11 on page 48 and Table 12 on page 49 to verify the appropriate categories of twisted-pair cables for the AT-SBx81GT24 and AT-SBx81GP24 Line Cards, respectively.
- ❑ Verify that the twisted-pair cable is not faulty by replacing it with a known good cable.
- ❑ Make sure that the operating parameters of the ports on the line card and network device are compatible.

If the L/A LED for a port is on, signalling a link to the network device, but link performance is poor or intermittent, the problem may be from a bad cable. Try replacing the cable.

Another source of poor or intermittent performance on a link can be a speed or duplex mode mismatch between a port and network device. Here are some items to consider when resolving this type of problem:

- ❑ The default speed setting for the ports on the AT-SBx81GT24 and AT-SBx81GP24 Line Cards is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Aut-Negotiation.

- ❑ The default speed setting of Auto-Negotiation is not appropriate for ports connected to network devices that do not support Auto-Negotiation and have fixed speeds of 10 or 100 Mbps. For those switch ports, you should disable Auto-Negotiation and set the port's speed manually to match the speeds of the network devices.
- ❑ The ports must be set to Auto-Negotiation, the default setting, to operate at 1000Mbps.
- ❑ The default duplex mode setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation for duplex modes.
- ❑ The default duplex mode setting of Auto-Negotiation is not appropriate for ports connected to network devices that do not support Auto-Negotiation and have a fixed duplex mode. Disable Auto-Negotiation on those ports and set the duplex modes manually to avoid the possibility of duplex mode mismatches. A switch port using Auto-Negotiation defaults to half-duplex if it detects that the end node is not using Auto-Negotiation, which can result in a mismatch if the end node is operating at a fixed duplex mode of full-duplex.

Note

The AT-SBx81GT40 Line Card does not support half-duplex mode.

Yet another source for a poor or intermittent link can be a MDI/MDIX wiring configuration mismatch. The wiring configurations of the ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards are set automatically with automatic MDIX detection when the ports are operating at 10 or 100 Mbps. (Automatic MDIX detection does not apply to the ports when they are operating at 1000 Mbps.) You may not disable this feature on the ports. For automatic MDIX detection to work successfully, the network device connected to a port must also support the feature. If it does not, a port on the switch defaults to MDIX. This may require the use of a crossover cable. Here are the guidelines to choosing straight-through or crossover cables for the ports:

- ❑ You may use straight-through cables on ports that are connected to network devices that operate at 1000 Mbps.
- ❑ You may use straight-through or crossover cables on ports that are connected to network devices that support automatic MDIX detection and that operate at 10 or 100 Mbps.
- ❑ You *must* use straight-through cables on ports that are connected to network devices that have a fixed wiring configuration of MDI and that operate at 10 or 100 Mbps.
- ❑ You *must* use crossover cables on ports that are connected to network devices that have a fixed wiring configuration of MDIX and that operate at 10 or 100 Mbps.

Power Over Ethernet

This section applies only to the AT-SBx81GP24 Line Card. Each port has two LEDs. The left LED provides port link and activity status and the right LED provides PoE status information. The PoE LED is solid green when a port is delivering power to a powered device (PD). The PoE LED of a port that is not delivering power will be flashing amber, steady amber, or off. If a powered device is not receiving power from a port on the line card, try the following:

- ❑ If all the L/A LEDs on the line cards in the chassis are off, try pressing the eco-friendly button on the active master controller card to turn on the LEDs.
- ❑ Check to be sure that the chassis has at least one AT-SBxPWRPOE1 Power Supply and that the unit is operating properly. The AC and DC LEDs should be solid green and the Fault LED should be off. For troubleshooting suggestions, refer to “AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies” on page 198.
- ❑ Review the PD’s documentation to confirm that it supports Mode A of the IEEE 802.3at standard. Mode A is one of two modes that define the connector pins that deliver the power from the port on the line card to the PD. In Mode A, the power is carried on pins 1, 2, 3, and 6 on the RJ-45 port, the same pins that carry the network traffic. The second mode, Mode B, defines pins 4, 5, 7, and 8 as the power carriers. The AT-SBx81GP24 Line Card does not support Mode B. Most powered devices are designed to accept power by either mode, but some legacy devices may only support one mode. This can be verified by reviewing the device’s documentation or data sheet. Legacy devices that only support Mode B will not work with this line card.
- ❑ Review the device’s documentation or data sheet to confirm that its power requirements do not exceed 30 W.
- ❑ Verify that you are using the appropriate category of twisted-pair cable by referring to Table 12 on page 49.
- ❑ Try replacing the twisted-pair cable, as explained in “Cabling Guidelines for the Twisted Pair Ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards” on page 136.
- ❑ Use the SHOW POWER-INLINE command in the management software to determine whether PoE is enabled on the port. The default setting for PoE is enabled.
- ❑ Use the SHOW POWER-INLINE command to determine whether the PoE power setting for the port has been reduced from the default setting of 30 W, to a value below the power requirements of the device.

- ❑ Use the `SHOW POE CARD` command to determine whether the switch has reach its maximum power budget.
- ❑ Try connecting the PD to a port on a different AT-SBx81GP24 Line Card.

Fiber Optic Transceivers

The L/A LEDs for the transceiver slots on the AT-SBx81GS24a and AT-SBx81XS6 Line Cards are solid or flashing green when ports on transceivers have links to end nodes. If a transceiver is cabled to an end node but the L/A LED is off, try the following:

- ❑ If all the L/A LEDs on the line cards in the chassis are off, try pressing the eco-friendly button on the active master controller card to turn on the LEDs.
- ❑ Check that the transceiver is firmly inserted into the slot on the line or controller card.
- ❑ Check that both ends of the cable are securely connected to the ports on the transceiver and end node.
- ❑ Verify that the end node is powered on and operating properly.
- ❑ Try replacing the cable.

Here are additional steps for fiber optic transceivers:

- ❑ Review the operating specifications of the transceiver and end node to verify that the devices have the same speed and duplex mode.
- ❑ Check that the operating specifications, including wavelength and maximum operating distance, of the transceiver are compatible with the fiber optic port on the end node.
- ❑ Make sure that you are using the appropriate type of fiber optic cable and that the cable length does not exceed the allowed maximum distance. The cable specifications for the transceivers are provided in the installation instructions that ship with the modules.
- ❑ Use a fiber optic tester to test whether the optical signal is too weak (i.e., sensitivity) or too strong (i.e., maximum input power). The operating specifications of the fiber optic transceivers are shipped with the units.
- ❑ Check the two strands of the fiber optic cable to be sure that the receive fiber connector is connected to the transmit connector on the remote end node, and that the transmit fiber connector is connected to the receive connector on the end node.

AT-SBx81CFC400 Controller Fabric Card

If the chassis has one controller card and the card fails, all network operations stop. The Ethernet line cards stop forwarding all network traffic until the controller card is replaced.

If the chassis has two controller cards and one fails, the Ethernet line cards continue to forward traffic, but the bandwidth of the backplane is reduced, which, depending on the number of Ethernet line cards present and the amount of traffic traversing the backplane, may result in slower network operations.

If the chassis has one controller card, examine the M/S LED on the card. The LED should be solid green. If the LED is flashing amber, the card is initializing its management software. Wait one or two minutes for the card to complete the process and check the LED again. If it has not changed to solid green, the card cannot complete the initialization process. Try moving the controller card to the other controller card slot, slot 5 or 6, to see if it works in a different slot. You might also try connecting a terminal or PC with a terminal emulator program to the Console RS232 port to watch for any error messages.

If the chassis has two controller cards, check the M/S LEDs on both cards. The LEDs should be solid green on one card and solid or flashing amber on the other card. If the LEDs are both flashing amber, they are initializing their management software. Wait one or two minutes for the cards to complete the process and check the LEDs again. If both LEDs are still flashing amber, the cards cannot complete the initialization process. Try replacing the cards.

The controller card has an onboard battery to maintain the date and time when the chassis is powered off or reset. If you manually set the date and time but the card loses the information after you power off or reset the unit, you may have forgotten to remove the battery insulator when you installed the card in the chassis. The insulator is shown in Figure 65 on page 124. The only way to remedy the problem is to remove the controller card from the chassis and remove the battery insulator. If the chassis has only one controller card, removing the card causes the Ethernet line cards to stop forwarding traffic.

AT-SBxFAN06 Fan Module

The AT-SBxFAN06 Fan Module is operating correctly when the POWER LED on the module is solid green. If the LED on the fan module is off, check the FAN LED in the SYS STATUS section on the active master controller card. The LED should be green. If the FAN LED is off or flashing amber, one or more fans in the module are no longer operating properly. You may also view the status of the unit with the SHOW FANMODULE command in the management software.

You may notice changes in the fan speeds. This is normal. The active master controller card automatically adjusts the fan speeds according to the internal temperature of the chassis.

Note

The AT-SBxFAN06 Fan Module is hot swappable. You do not have to power off the AT-SBx8106 Chassis to replace the module.

Local (Console) Management Session

If you are unable to establish a local management session with the switch through the Console RS-232 port on the active master controller card, do the following:

- ❑ Check to be sure that the RJ-45 serial management cable is securely connected to the Console RS-232 port on the active master controller card and the RS-232 port on the terminal or personal computer.
- ❑ If the chassis has two controller cards, verify that the management cable is connected to the console port on the active master controller card by examining the M/S LEDs on the cards. The LEDs are solid green on the active master controller card and solid or flashing amber on the standby master controller card.
- ❑ Check to be sure that the operating parameters on the terminal or the terminal emulation program, if you are using a personal computer, have been set correctly. The default settings for the RJ-45 serial terminal port are located in “Using Local Management to Verify the Chassis” on page 194.
- ❑ Check to be sure that the terminal emulator application is compatible with a VT-100 terminal.

Power Supply Interfaces (Opto-couplers)

The two power supply interfaces in the lower right corner of the rear panel are used by the active master controller card to obtain status information from the power supplies. The interfaces are shown in Figure 9 on page 30.

Each power supply interface supports two power units. The top interface supports the power supplies in slots A and C. The bottom interface supports the supplies in slots B and D.

An interface is operating normally when its Power LED is solid green. The LED of an interface is off if the two corresponding power supply slots are empty or the power supplies are not powered on. For example, the LED for the bottom interface will be off if power supply slots B and D are empty or the power supplies are off.

The network operations of the chassis are not affected if one or both of the interfaces fail. However, the active master controller card changes the PSU LED to flashing amber to signal that it cannot communicate with the power supplies.

Note

The power supply interfaces are *not* hot swappable and can only be serviced by an authorized service technician.

If the Power LED on a power supply interface is off, do the following:

1. Check that there are power supplies in the corresponding slots in the front panel and that the power supplies are powered on. (The Power LED on an interface is off when the slots are empty or the power supplies are not powered on.)
2. Inspect the LEDs on the power supplies to check for a fault condition. If there is a fault condition, go to “AT-SBxPWRSYS1, AT-SBxPWRSYS2, and AT-SBxPWRPOE1 Power Supplies” on page 198 for troubleshooting suggestions. If the LEDs indicate the power supplies are operating normally, go to step 3.
3. Check the PSU LED on the active master controller card. If the LED is solid green, the power supplies and interfaces are operating normally. No corrective steps are required. If the PSU LED is solid amber but the LEDs on the power supplies indicate normal operations, there may be a problem with a power supply interface. Contact your Allied Telesis sales representative for assistance.

Chapter 12

Replacing Modules

This chapter contains procedures on how to replace modules in the unit. The chapter contains the following sections:

- ❑ “Replacing AT-SBxPWRSYS1, AT-SBxPWRSYS2, or AT-SBxPWRPOE1 Power Supplies” on page 214
- ❑ “Replacing the AT-SBxPWRSYS1 DC Power Supply” on page 220
- ❑ “Replacing Ethernet Line Cards” on page 231
- ❑ “Replacing the AT-SBx81CFC400 Controller Fabric Card” on page 233
- ❑ “Replacing the AT-SBxFAN06 Fan Module” on page 235

Replacing AT-SBxPWRSYS1, AT-SBxPWRSYS2, or AT-SBxPWRPOE1 Power Supplies

This section contains the procedure for removing or replacing AT-SBxPWRSYS1, AT-SBxPWRSYS2, or AT-SBxPWRPOE1 Power Supplies in the AT-SBx8106 Chassis.

Note

The illustrations in the following procedure show the removal of an AT-SBxPWRSYS1 AC System Power Supply from slot D. The procedure is the same for all the AC power supplies.

Note

Allied Telesis recommends generating a backup copy of the configuration file in the controller card before removing or replacing a power supply. For instructions, refer to the Software Reference for SwitchBlade x8100 Series Switches on the Allied Telesis web site.

Note

The power supplies are hot swappable.



Caution

When installing the AT-SBxPWRSYS2 Power Supply in an active, operational chassis, you should connect the AC power cord to the chassis before installing the power supply. Attaching the power cord after installing the AT-SBxPWRSYS2 Power Supply might cause the active master controller card to restart its operating system. This can result in a temporary interruption of network operations of the chassis if it has only one controller card. This guideline does not apply to the AT-SBxPWRSYS1 AC or DC Power Supply or AT-SBxPWRPOE1 Power Supply.

To remove AC power supplies from the chassis, perform the following procedure:

1. Disconnect the AC power cord for the power supply from the AC power source and the corresponding AC socket on the back panel of the chassis. The figure in Figure 131 on page 215 shows the removal of the power cord from connector D, which powers off the power supply in slot D on the front panel.

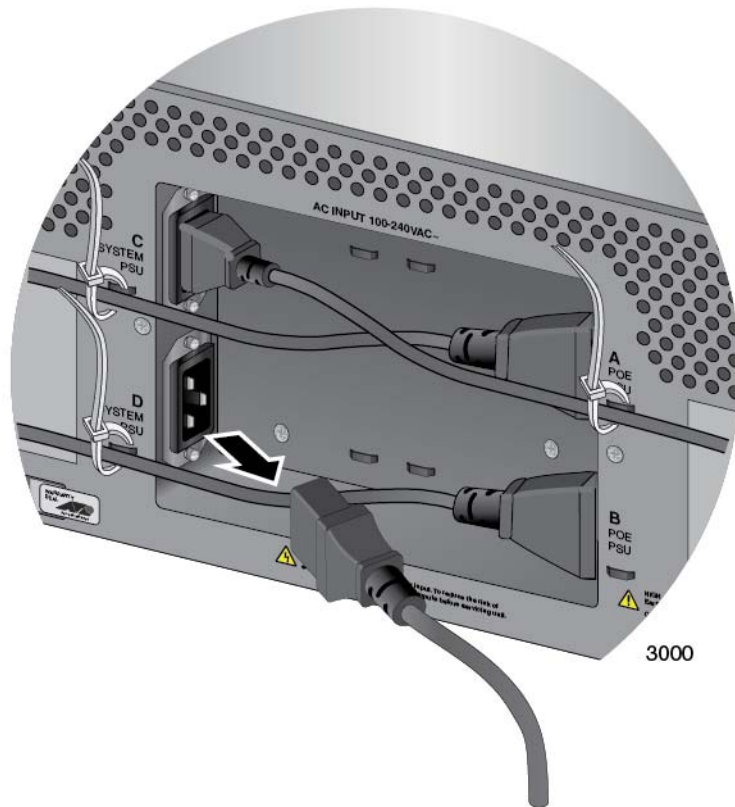


Figure 131. Disconnecting the AC Power Cord from the AC Socket on the Back Panel

2. Lift the locking hand on the power supply. Refer to Figure 132 on page 216.



Figure 132. Lifting the Locking Handle on the Power Supply

3. Carefully pull on the locking handle to slide the power supply from the chassis. Refer to Figure 133 on page 217.



Warning

The power supply is heavy. Use both hands to hold the module as you remove it from the chassis.



Figure 133. Removing the Power Supply from the Chassis

4. Do one of the following:
 - ☐ To install a new power supply, refer to Chapter 6, “Installing the Power Supplies” on page 99.
 - ☐ If you are not installing a new power supply, continue with the rest of this procedure to install a blank slot cover.
5. Place the locking handle on the slot cover in the up position and slide the cover into the empty power supply slot. Refer to Figure 134 on page 218.

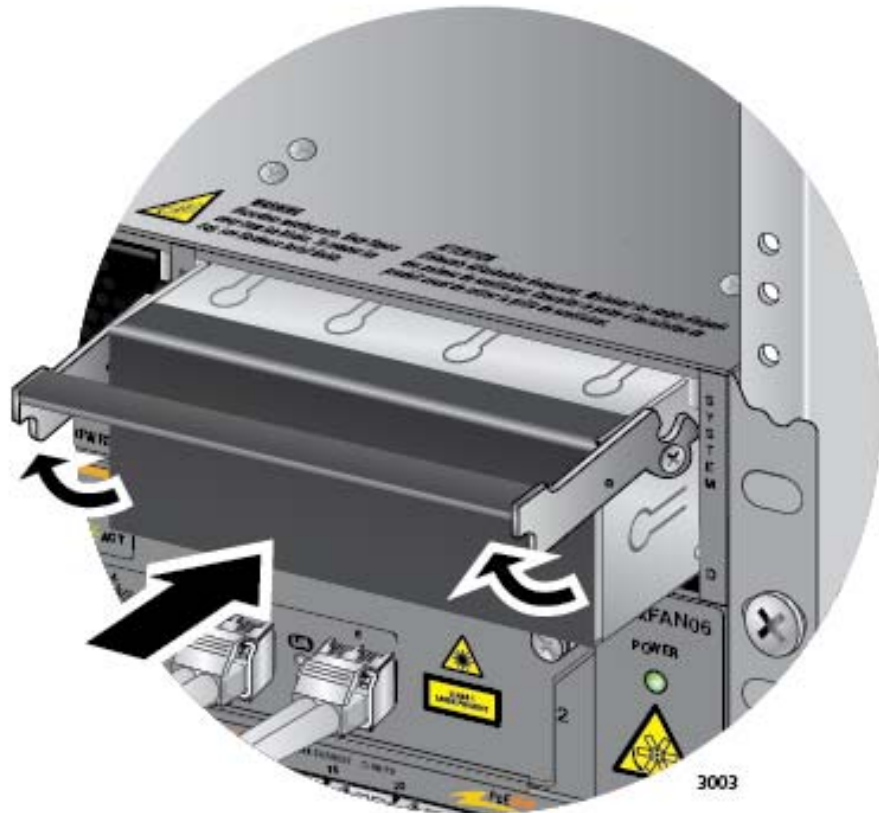


Figure 134. Installing a Blank Power Supply Slot Cover

6. Lower the locking handle to secure the slot cover in the slot. Refer to Figure 135 on page 219.



Figure 135. Lowering the Locking Handle on the Power Supply Slot Cover

Replacing the AT-SBxPWRSYS1 DC Power Supply

To remove or replace the AT-SBxPWRSYS1 DC Power Supply, perform the following procedure:

1. Turn off the circuit breaker to the AT-SBxPWRSYS1 DC Power Supply.
2. Turn off the On/Off switch on the front panel of the power supply. Refer to Figure 109 on page 170.
3. Use a #2 screwdriver to loosen the screw on the locking handle. Refer to Figure 136.

Note

Do not lift the locking handle yet.

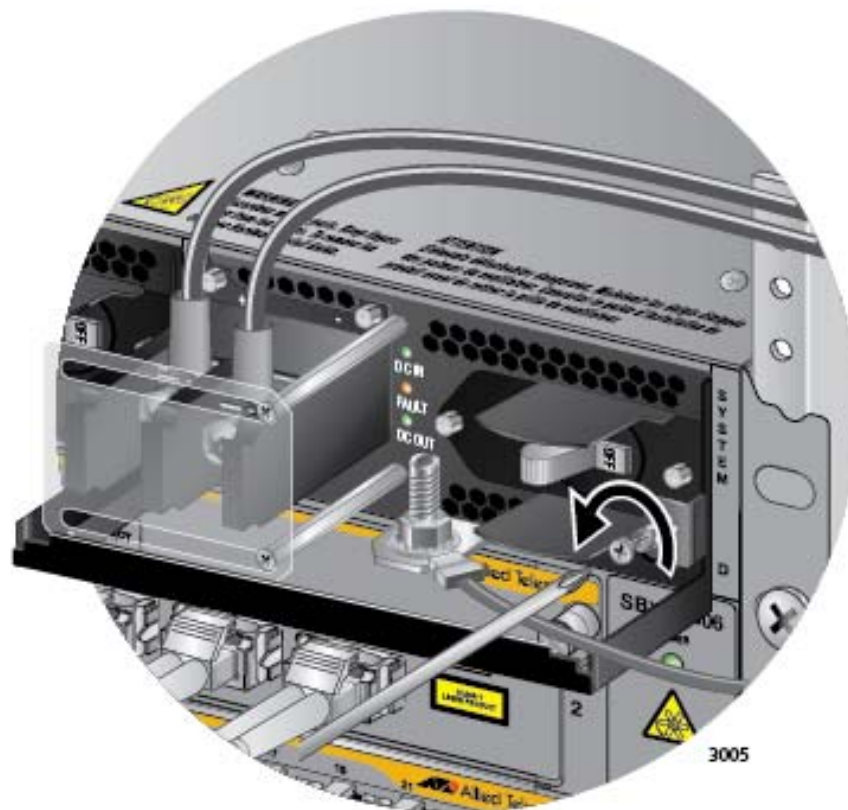


Figure 136. Loosening the Screw on the Locking Handle

Note

If the power wires are connected to the terminal block with the right angle terminals, go to step 5.

4. Use a #1 screwdriver to loosen the two screws that secure the plastic cover over the terminal block and slide the cover to the right. You may need to slightly lift the locking handle to access the bottom screw. Refer to Figure 137.

The plastic cover may not be present if the lead wires are connected to the terminal block with the right angle terminals. If this is the case, you may skip this step.

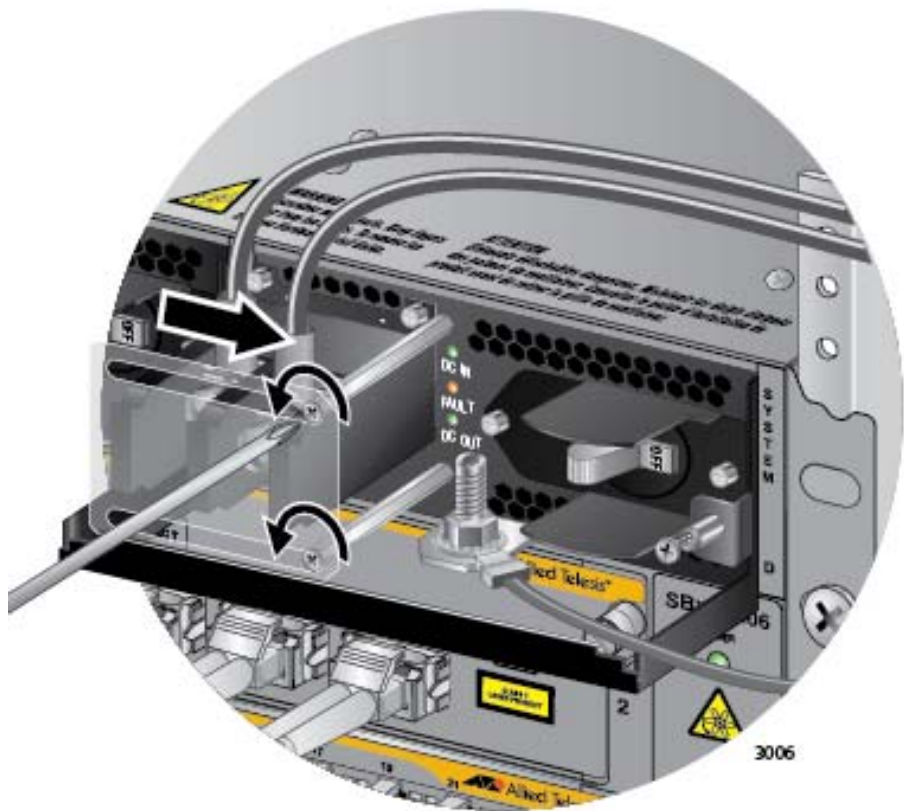


Figure 137. Opening the Plastic Window on the Terminal Block

5. Use a #3 screwdriver to remove the negative (-) lead wire from the terminal block. The negative lead wire is on the right. Refer to Figure 138 on page 222.

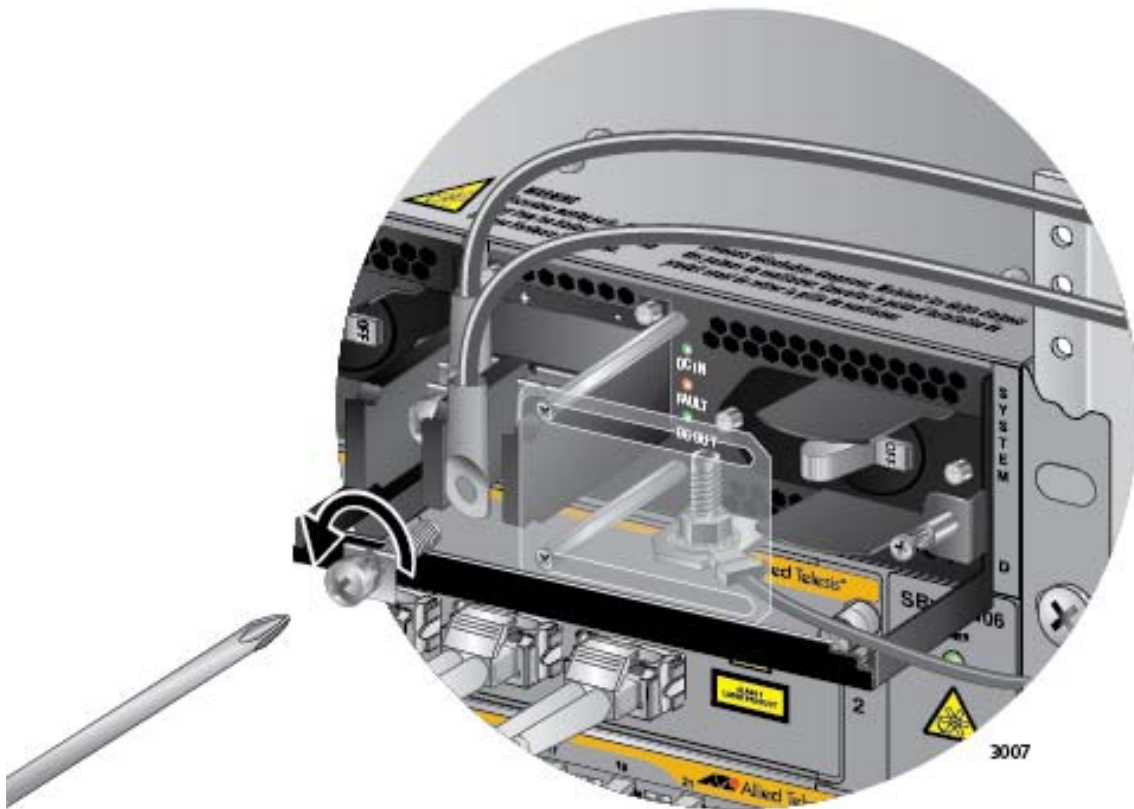


Figure 138. Removing the Negative Lead Wire

6. Use a #3 screwdriver to remove the positive (+) lead wire from the terminal block. Refer to Figure 139 on page 223.



Figure 139. Removing the Positive Lead Wire from the Terminal Block

7. Reinstall the two screws on the negative (-) and positive (+) terminals. Refer to Figure 140 on page 224.

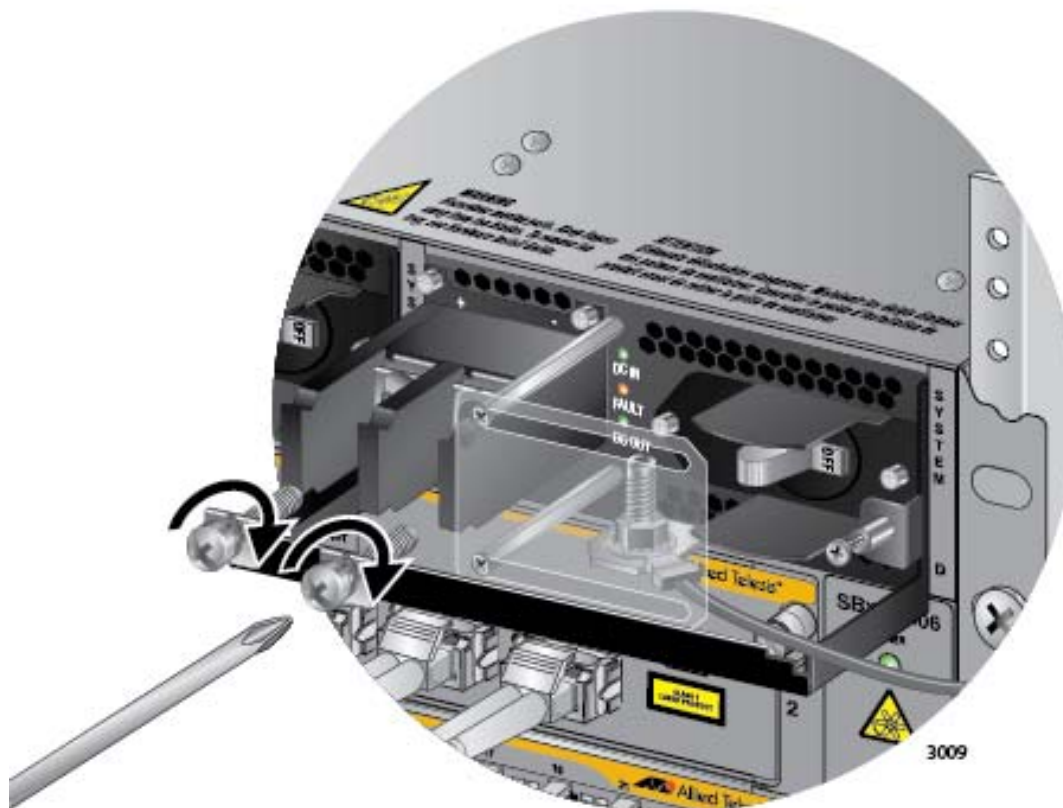


Figure 140. Reinstalling the Screws on the Positive and Negative Terminals

8. Slide the plastic cover to the left and lightly tighten the two screws to secure it in place. Refer to Figure 141 on page 225.



Caution

Do not over tighten the screws or you may crack or break the plastic cover.

The plastic cover may not be present if the lead wires were connected to the terminal block with the right angle terminals. If this is the case, you may either skip this step or reinstall the plastic cover on the power supply.

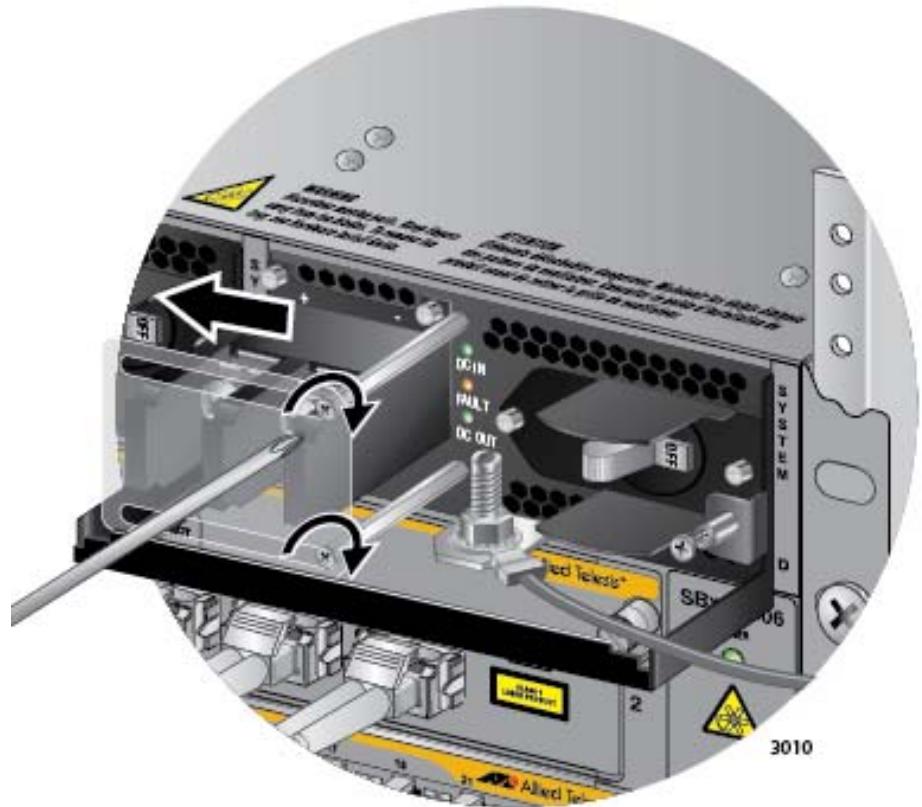


Figure 141. Closing the Plastic Cover

9. Use an 8 mm wrench to remove the grounding wire from the grounding post. Refer to Figure 142 on page 226.

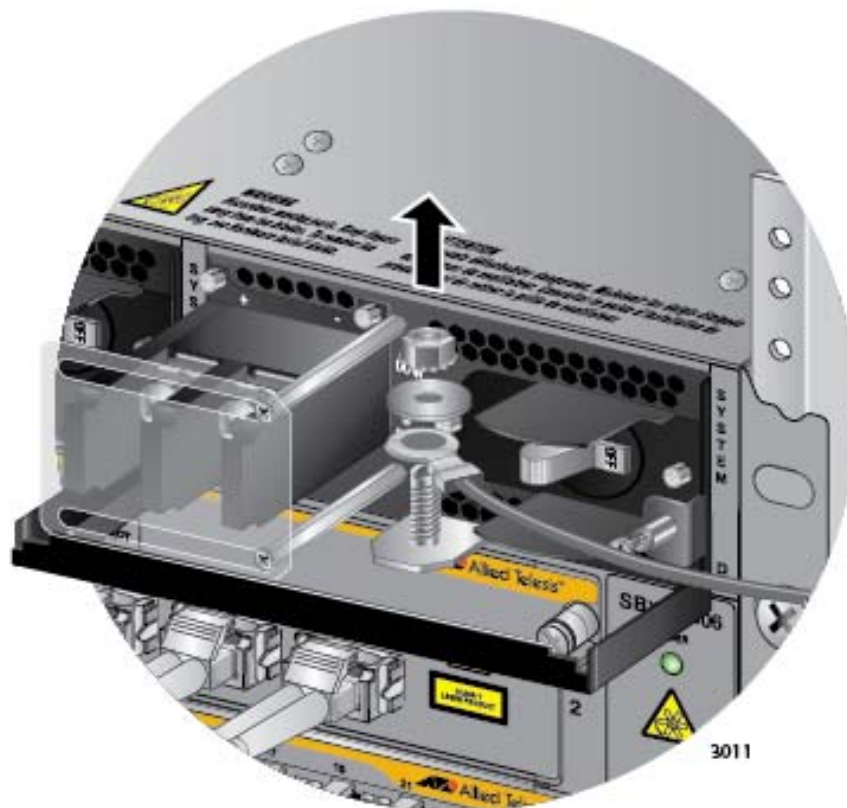


Figure 142. Removing the Grounding Wire

10. Reinstall the nut and washer on the grounding post. Refer to Figure 143 on page 227.

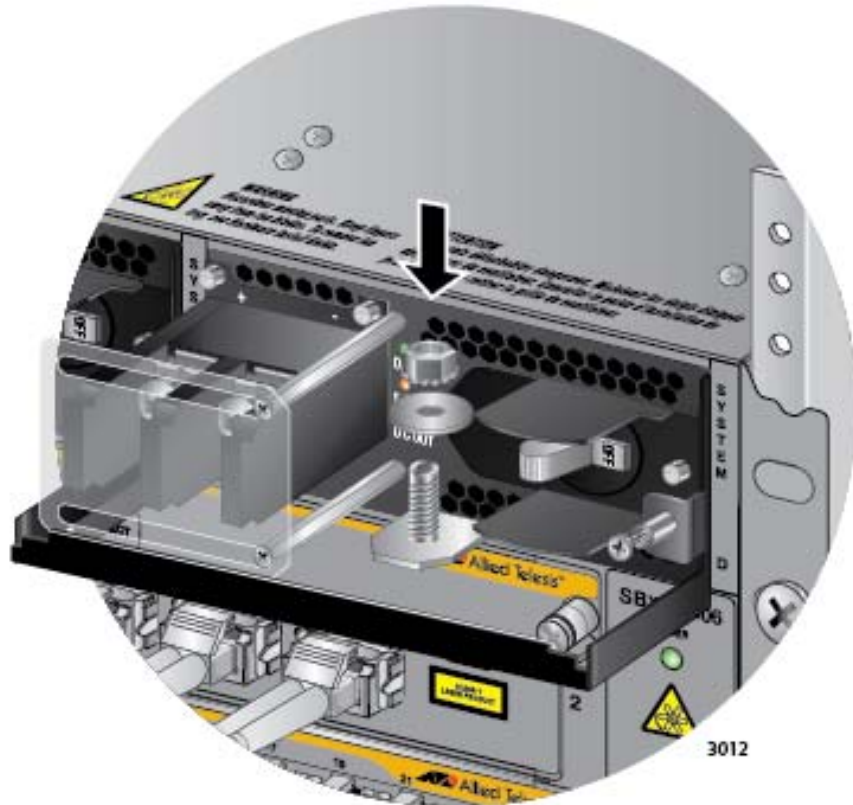


Figure 143. Reinstalling the Nut and Washer on the Grounding Post

11. Lift the locking handle and slide the power supply from the chassis. Refer to Figure 144 on page 228.



Warning

The power supply is heavy. Use both hands to hold the module as you remove it from the chassis.

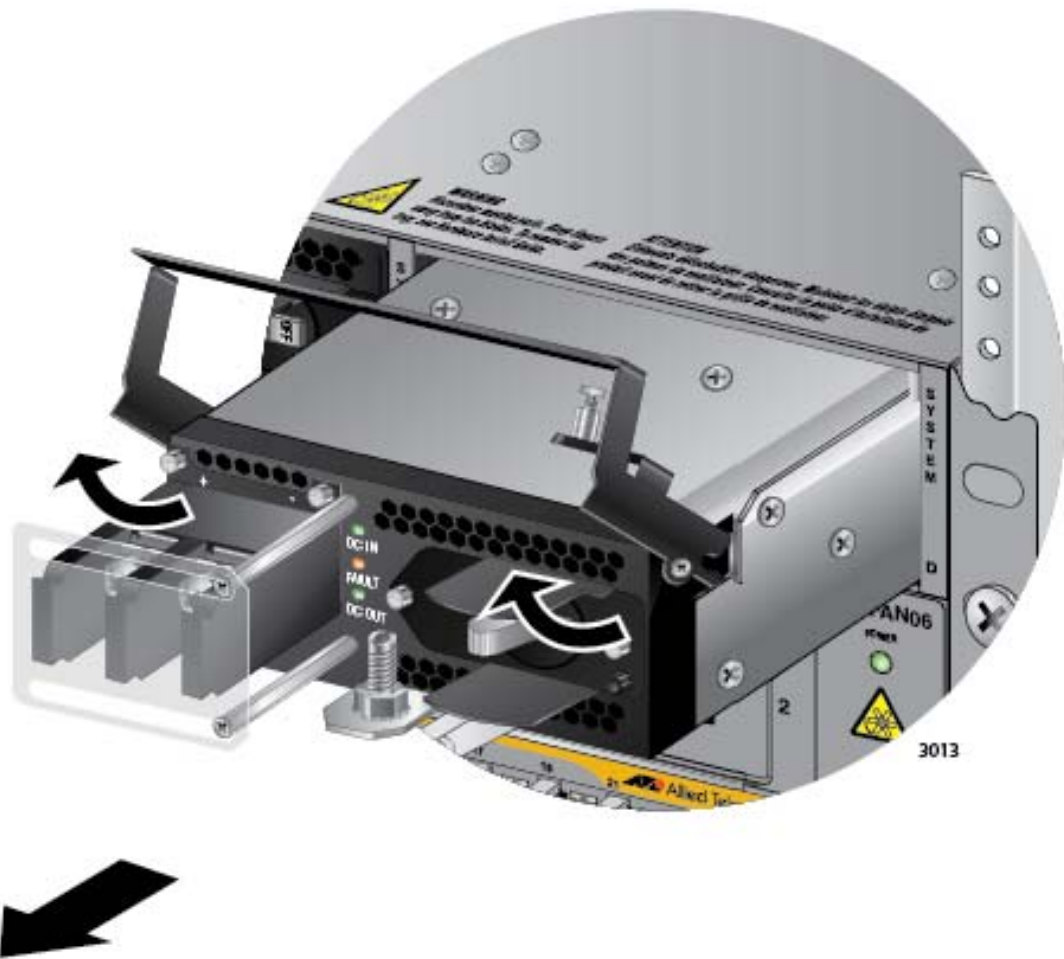


Figure 144. Lifting the Locking Handle and Removing the Power Supply

12. Do one of the following:

- ☐ To install a new power supply, refer to Chapter 6, “Installing the Power Supplies” on page 99.
- ☐ If you are not installing a new power supply, continue with this procedure to install a blank slot cover.

13. Place the locking handle on the slot cover in the up position and slide the cover into the empty power supply slot. Refer to Figure 145 on page 229.

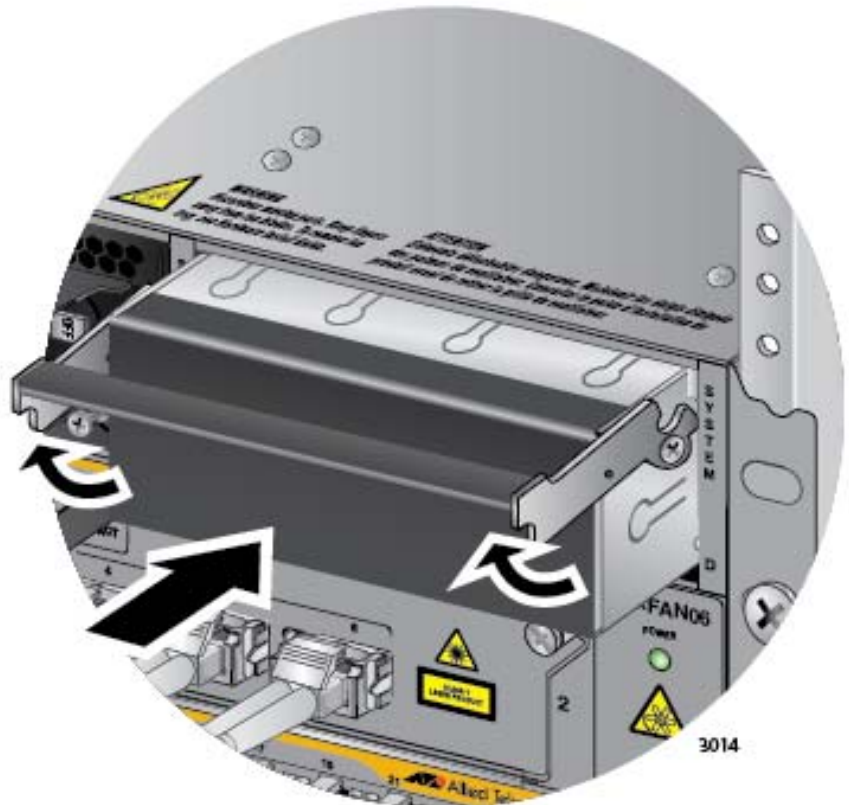


Figure 145. Installing a Blank Power Supply Slot Cover

14. Lower the locking handle to secure the slot cover to the slot. Refer to Figure 146 on page 230.



Figure 146. Lowering the Locking Handle on the Power Supply Slot Cover

Replacing Ethernet Line Cards

This section contains the procedure for replacing Ethernet line cards in the chassis.

Note

Please review “Guidelines to Handling the Controller and Line Cards” on page 120 before performing this procedure.

This procedure requires the following tool:

- ❑ #2 Phillips-head screwdriver (not provided)

The Ethernet line cards are hot swappable and can be removed while the chassis is powered on.

To remove an Ethernet line card from the chassis, perform the following procedure:

1. Label and remove the cables from the Ethernet line card.
2. If the line card has fiber optic transceivers, install dust covers on the ports.
3. If the line card has transceivers, label and remove the transceivers.
4. Use a #2 Phillips-head screwdriver to loosen the two screws on the faceplate of the card.
5. Carefully pull on the screws to disconnect the line card from the connector on the backplane.
6. Carefully slide the card from the chassis.



Caution

Keep the card level as you slide it out of the chassis. You might damage the components on the top or bottom of the card if you slide it out at an angle. Refer to Figure 60 on page 121.

7. Do one of the following:
 - ❑ For instructions on how to install the line card in another slot of the chassis or a different chassis, refer to “Installing the Ethernet Line Cards” on page 128.
 - ❑ If you do not plan to immediately install another line card in the same slot, you should cover the slot with a blank cover. For

instructions, refer to “Installing the Blank Slot Covers” on page 132.

- ☐ If you do not plan to immediately install the card in another chassis, continue with this procedure.

8. Store the line card in an anti-static bag.
9. Return the line card to its shipping container.

Replacing the AT-SBx81CFC400 Controller Fabric Card

This section contains the procedure for replacing a controller card in the chassis.

Note

Please review “Guidelines to Handling the Controller and Line Cards” on page 120 before performing this procedure.

This procedure requires the following tool:

- #2 Phillips-head screwdriver (not provided)

The controller card is hot swappable and can be removed while the chassis is powered on.

Here are the general steps if the chassis has only one controller card and that card has failed such that it is no longer responding to management commands and the Ethernet line cards have stopped forwarding traffic:

1. Power off the chassis.
2. Remove the failed controller card. Refer to the instructions in this section.
3. Install the new controller card. You may install the new controller card in the same slot as the failed card or in the other controller card slot. For instructions, refer to “Installing the AT-SBx81CFC400 Controller Fabric Card” on page 122.
4. Power on the chassis.
5. Restore the configuration to the Ethernet line and controller cards by uploading the latest archived copy of the configuration file for the chassis to the new controller card. If you do not have an archived copy of the configuration settings of the chassis, restore the configuration manually.

Here are the general steps If the chassis has two controller cards and one cards has failed:

1. If the chassis is powered off, power it on.

Note

You should not replace a controller card in a chassis that has two controller cards while the unit is powered off, especially if you are replacing a failed controller card in slot 5. If you replace a failed controller card while the chassis is powered off, the Ethernet line cards might lose their configurations if the new controller card is designated as the active card when you power on the chassis.

2. Remove the failed controller card. Refer to the instructions in this section.
3. Install the new controller card. For instructions, refer to “Installing the AT-SBx81CFC400 Controller Fabric Card” on page 122.

To remove a controller card from the chassis, perform the following procedure:

1. Disconnect the cables from the NET MGMT and Console ports on the controller card.
2. Use a #2 Phillips-head screwdriver to loosen the two screws on the faceplate of the card.
3. Carefully pull out the handles of the faceplate to disconnect the controller card from the connector on the backplane of the chassis.
4. Carefully slide the controller card from the chassis.



Caution

Keep the card level as you slide it out of the chassis. You might damage the components on the top or bottom of the card if you slide it out at an angle. Refer to Figure 60 on page 121.

5. Do one of the following:
 - ☐ For instructions on how to install a new controller card in the chassis, refer to “Installing the AT-SBx81CFC400 Controller Fabric Card” on page 122.
 - ☐ If you do not plan to immediately install another controller card in the slot, cover the slot with a blank cover. For instructions, refer to “Installing the Blank Slot Covers” on page 132.
 - ☐ If you do not plan to immediately install the controller card in another chassis, continue with this procedure.
6. Store the controller card in an anti-static bag.
7. Return the card to its shipping container.

Replacing the AT-SBxFAN06 Fan Module

This section contains the procedures for replacing the AT-SBxFAN06 Fan Module. The module is located in the slot on the right side of the front panel.



Caution

Although the fan module is hot swappable and can be replaced while the chassis is powered on, the line cards and power supplies may overheat if the chassis is operated for more than one or two minutes without a fan module.



Warning

The fan module has hazardous moving parts. Keep fingers away from moving fan blades.

Note

Only an authorized service technician should replace the fan module.

Removing the AT-SBxFAN06 Fan Module

To remove the fan module from the chassis, perform the following procedure:

1. If necessary, disconnect or reroute network cables that are blocking access to the fan module.
2. Use a #2 Phillips head screwdriver to loosen the screw at the base of the fan module. Refer to Figure 147 on page 236.



Figure 147. Loosening the Screw on the AT-SBxFAN06 Fan Module

3. Carefully pull on the handle to disconnect the fan module from the connector on the backplane of the chassis. Refer to Figure 148.



Figure 148. Loosening the AT-SBxFAN06 Fan Module from the Backplane Connector

4. Slowly pull the module out 25 mm (1 in.). Refer to Figure 149.



Figure 149. Withdrawing the AT-SBx81CFC400 Fan Module 25 mm (1 in.) from the Chassis

5. Wait ten seconds for the fans to stop.



Warning

The fan module has hazardous moving parts. Keep fingers away from moving fan blades.

6. After the fans have stopped, slide the module from the chassis. Refer to Figure 150 on page 238.

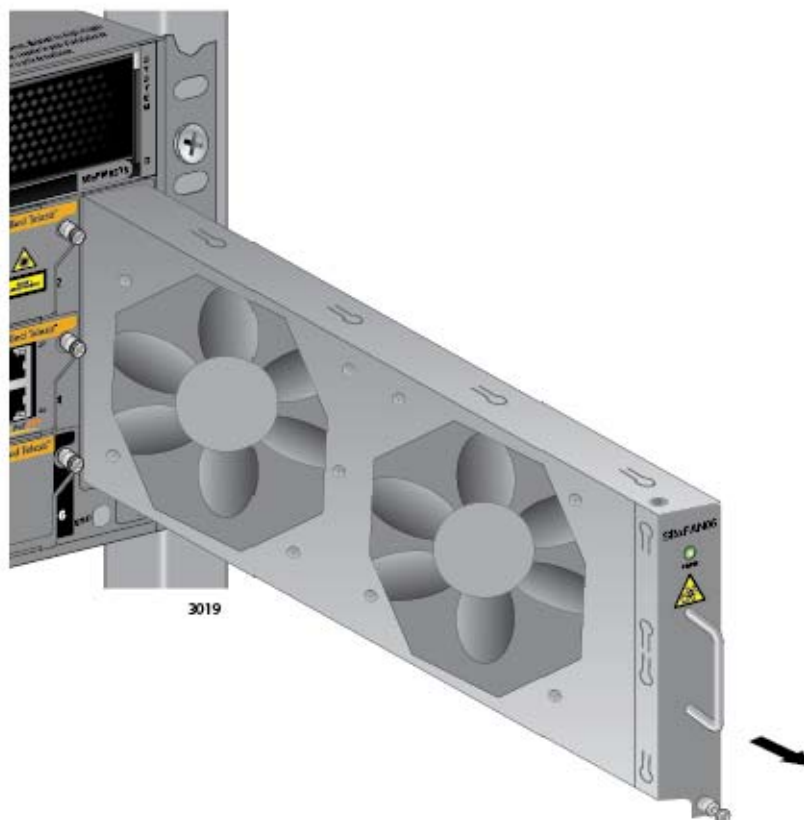


Figure 150. Removing the AT-SBxFAN06 Fan Module from the Chassis

Installing a New AT-SBxFAN06 Fan Module

This procedure assumes that you have already removed the old fan module from the chassis and are continuing directly from the previous procedure, “Removing the AT-SBxFAN06 Fan Module” on page 235. To install the new fan module, perform the following procedure

1. Orient the new module with the LED and module name on top and carefully slide the module into the slot in the chassis. Refer to Figure 151 on page 239.

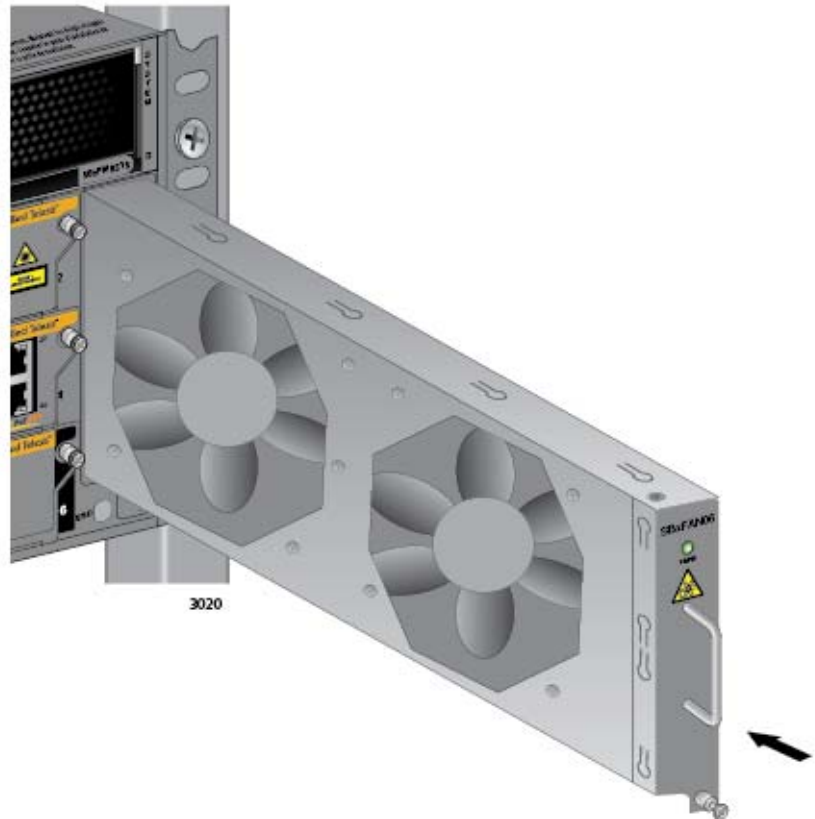


Figure 151. Installing a New AT-SBxFAN06 Fan Module

2. When you feel the fan module make contact with the connector on the backplane, gently push on the top and bottom of the faceplate to seat the module on the connector. Refer to Figure 152 on page 240.



Figure 152. Securing the AT-SBxFAN06 Fan Module on the Backplane Connector

3. With a #2 Phillips-head screwdriver, tighten the screw at the base of the module to secure the module to the chassis. Refer to Figure 153.



Figure 153. Tightening the Screw on the AT-SBxFAN06 Fan Module

4. Reconnect any network cables you may have disconnected to access the fan module.

Appendix A

Technical Specifications

Physical Specifications

Dimensions (W x D x H)

Table 21. Product Dimensions

AT-SBx8106 Chassis	48.03 cm x 38.79 cm x 17.63 cm (18.91 in x 15.27 in x 6.94 in)
AT-SBxPWRSYS1 AC System Power Supply	10.16 cm x 32.21 cm x 4.34 cm (4.00 in x 12.68 in x 1.71 in)
AT-SBxPWRSYS2 AC System Power Supply	10.16 cm x 32.21 cm x 4.34 cm (4.00 in x 12.68 in x 1.71 in)
AT-SBxPWRPOE1 PoE Power Supply	10.16 cm x 32.21 cm x 4.34 cm (4.00 in x 12.68 in x 1.71 in)
AT-SBxPWRSYS1 DC System Power Supply	10.16 cm x 34.2 cm x 4.34 cm (4.00 in x 13.46 in x 1.71 in)
AT-SBxFAN12 Tray Module	2.74 cm x 33.35 cm x 26.04 cm (1.08 in x 13.13 in x 10.25 in)
All Cards AT-SBx81GT24 Line Card AT-SBx81GT40 Line Card AT-SBx81GP24 PoE Line Card AT-SBx81GS24a SFP Line Card AT-SBx81XS6 SFP+ Line Card AT-SBx81CFC400 Controller Fabric Card	20.67 x 31.32 cm x 4.06 cm (8.14 in x 12.33 in x 1.6 in)

Weight (Kilograms)

Table 22. Product Weights

AT-SBx8106 Chassis	14.42 kg (31.80 lb) with three PSU and six line card blank panels
AT-SBx81GT24 Line Card	0.93 kg (2.05 lb)

Table 22. Product Weights (Continued)

AT-SBx81GT40 Line Card	1.04 kg (2.30 lb)
AT-SBx81GP24 PoE Line Card	1.06 kg (2.34 lb)
AT-SBx81GS24a SFP Line Card	1.06 kg (2.34 lb)
AT-SBx81XS6 SFP+ Line Card	1.06 kg (2.34 lb)
AT-SBx81CFC400 Controller Fabric Card	1.09 kg (2.40 lb)
AT-SBxPWRSYS1 AC System Power Supply	2.75 kg (6.05 lb) with power cord
AT-SBxPWRSYS2 AC System Power Supply	2.70 kg (6.00 lb) with power cord
AT-SBxPWRPOE1 PoE Power Supply	2.73 kg (6.00 lb) with power cord
AT-SBxPWRSYS1 DC System Power Supply	1.9 kg (4.2 lb)
AT-SBxFAN12 Tray Module	1.82 kg (4.00 lb)

Environmental Specifications

Table 23. Environmental Specifications

Operating Temperature	-0° C to 40° C (32° F to 104° F)
Storage Temperature	-25° C to 70° C (-13° F to 158° F)
Operating Humidity	5% to 90% non-condensing
Storage Humidity	5% to 95% non-condensing
Operating Altitude Range	Up to 3,000 m (9,843 ft)
Acoustic Noise	76.7 dB

Note

The acoustic noise was measured at 40° C with the following products installed:

Table 24. Acoustic Noise Test Components

Product	Quantity
AT-SBx8106 Chassis	1
AT-SBx81CFC400 Controller Fabric Card	2
AT-SBx81GP24 PoE Line Card	5
AT-SBx81XS6 SFP+ Line Card	5
AT-SBxPWRSYS1 AC System Power Supply	2
AT-SBxPWRPOE1 PoE Power Supply	2
AT-SBxFAN12 Tray Module	1

Power Specifications

AC Voltage, Frequency Requirements (Volts, Hertz)

Table 25. AC Voltage and Frequency Requirements

AT-SBxPWRSYS1 AC Power Supply	100 - 120 / 200 - 240 VAC, 16/8A, 50/60 Hz, (per input)
AT-SBxPWRSYS2 AC Power Supply	100 - 120 / 200 - 240 VAC, 18/8A, 50/60 Hz, (per input)
AT-SBxPWRPOE1 AC Power Supply	100 - 120 / 200 - 240 VAC, 16/8A, 50/60 Hz, (per input)

DC Voltage Requirements

Table 26. DC Voltage Requirements

AT-SBxPWRSYS1 DC Power Supply	40 - 60V dc (-0% - +20%), 36A (maximum per input)
-------------------------------	---

Typical power savings in eco-friendly mode (Watts)

Table 27. Typical Power Savings in eco-friendly Mode

AT-SBx81GT24	0.12 W
AT-SBx81GT40	0.79 W
AT-SBx81GP24	0.24 W
AT-SBx81GS24a	0.20 W
AT-SBx81XS6	0.10 W

Maximum power consumption (Watts)

Table 28. Maximum Power Consumption

AT-SBx81GT24	34.4 W
AT-SBx81GT40	53.9 W
AT-SBx81GP24	34.4 W
AT-SBx81GS24a	56.3 W
AT-SBx81XS6	54.8 W

Table 28. Maximum Power Consumption (Continued)

AT-SBx81CFC400	48.3 W
----------------	--------

Maximum power supply efficiency (based on 100V input voltage)

Table 29. Maximum Power Efficiency

AT-SBxPWRSYS1 AC	Up to 90%
AT-SBxPWRSYS2 AC	Up to 85%
AT-SBxPWRPOE1 AC	Up to 90%
AT-SBxPWRSYS1 DC	Up to 90%

Heat dissipation (British Thermal Units/hour)

Table 30. Heat Dissipation

AT-SBx81GT24	146.72 BTU/hr
AT-SBx81GT40	183.74 BTU/hr
AT-SBx81GP24	146.72 BTU/hr
AT-SBx81GS24a	240.13 BTU/hr
AT-SBx81XS6	233.73 BTU/hr
AT-SBx81CFC400	206.01 BTU/hr
AT-SBxPWRSYS1 AC	5118.21 BTU/hr
AT-SBxPWRSYS2 AC	5118.21 BTU/hr
AT-SBxPWRPOE1 AC	5118.21 BTU/hr
AT-SBxPWRSYS1 DC	5118.21 BTU/hr

Available Power over Ethernet (Watts/port):

Table 31. Available Power Over Ethernet with One PoE Power Supply

One PoE Power Supply Installed	1200 W @ 56 VDC
IEEE 802.3at Class 4 (30 W /port)	40 ports Maximum
IEEE 802.3af Class 3 (15.4 W /port)	77 ports Maximum
IEEE 802.3af Class 2 (7.3 W /port)	171 ports Maximum

Table 31. Available Power Over Ethernet with One PoE Power Supply

IEEE 802.3af Class 1 (4.0 W /port)	240 ports Maximum
------------------------------------	-------------------

Table 32. Available Power Over Ethernet with Two PoE Power Supplies

Two PoE Power Supply Installed	2400 W @ 56 VDC
IEEE 802.3at Class 4 (30 W /port)	80 ports Maximum
IEEE 802.3af Class 3 (15.4 W /port)	155 ports Maximum
IEEE 802.3af Class 2 (7.3 W /port)	240 ports Maximum
IEEE 802.3af Class 1 (4.0 W /port)	240 ports Maximum

PoE Mode

Table 33. PoE Mode on the AT-SBx81GP24 PoE Line Card

IEEE 802.3af / IEEE 802.3at:	Alternative Mode A
------------------------------	--------------------

Safety and Electromagnetic Emissions Certifications

Safety and Electromagnetic Emissions:

Table 34. Safety and Electromagnetic Emissions

EMI/RFI	FCC Class A, EN55022 Class A, EN61000-3-2, EN61000-3-3, CISPR Class A, VCCI Class A, AS/NZS Class A
Immunity	EN55024
Electrical Safety	EN60950-1 (TUV), UL60950-1 (cUL _{us}), EN60825
Safety Agency Approvals	cUL _{us} , TUV, C-TICK, CE

Port Pinouts

This section has the pinouts for the ports on the AT-SBx81GT24, AT-SBx81GT40, and AT-SBx81GP24 Line Cards, and the NET MGMT port on the AT-SBx81CFC400 Controller Fabric Card.

Figure 154 illustrates the pin layouts for RJ-45 and RJ point 5 ports.

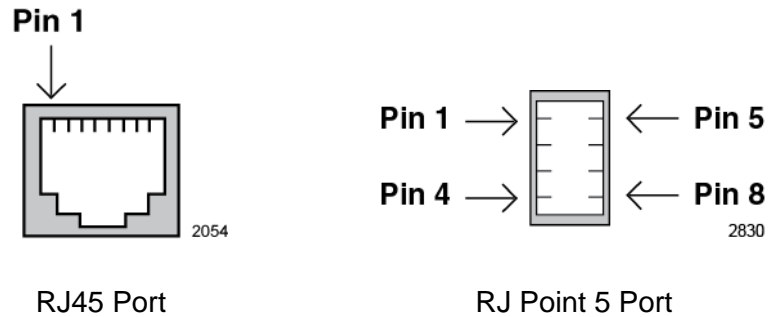


Figure 154. Pin Numbers for RJ-45 and RJ Point 5 Ports (Front View)

Table 35 lists the pin signals when a twisted-pair port is operating in the MDI configuration.

Table 35. MDI Pin Signals (10Base-T or 100Base-TX)

Pin	Signal
1	TX+
2	TX-
3	RX+
6	RX-

Table 36 lists the port pin signals for the MDI-X configuration.

Table 36. MDI-X Pin Signals (10Base-T or 100Base-TX)

Pin	Signal
1	RX+
2	RX-
3	TX+
6	TX-

Table 37 lists the port pin signals when a 10/100/1000Base-T port is operating at 1000 Mbps.

Table 37. 1000Base-T Connector Pinouts

Pin	Pair	Signal
1	1	TX and RX+
2	1	TX and RX-
3	2	TX and RX+
4	3	TX and RX+
5	3	TX and RX-
6	2	TX and RX-
7	4	TX and RX+
8	4	TX and RX-