



Installing AIR-OEAP1810

The Cisco Aironet® OfficeExtend Access Point 1810 ships with a Cradle, Cisco local power supply AIR-PWR-D and two screws. The OfficeExtend Access Point is factory assembled prior to shipping and only needs to be inserted into the Cradle before placing it on a table. The Cradle has rubber legs and can be

secured on the table if needed with the help of two screws. Given below are the physical dimensions of the OfficeExtend Access Point with and without the cradle.

Figure 1: Cisco OfficeExtend 1810 Physical Dimensions without cradle



Figure 2: Cisco OfficeExtend 1810 Physical Dimensions with Cradle

