

Head Office: Mississauga

1608 Bonhill Road
Mississauga, ON L5T 1C7
1 (800) 567-2221 • info@mitsair.com

Hydronics & Unico Division

6125 Netherhart Rd
Mississauga, ON L5T 1G5
(905) 362-5293 • hydronics@mitsair.com

Barrie Branch

691 Dunlop Street W.
Barrie, ON L4N 9W9
1 (800) 688-1673 • barrie@mitsair.com


London Branch

90 Towerline Place
London, ON N6E 2T1
(519) 914-9000 • london@mitsair.com

Windsor Branch

11629 County Road 42
Tecumseh, ON N8N 0H1
(519) 914-0332 • windsor@mitsair.com


SIMPLIFIED LOW VOLTAGE WIRING DIAGRAM MITS AIR™ “U” SERIES ADD-ON HEAT PUMP WITH CASED A-COIL

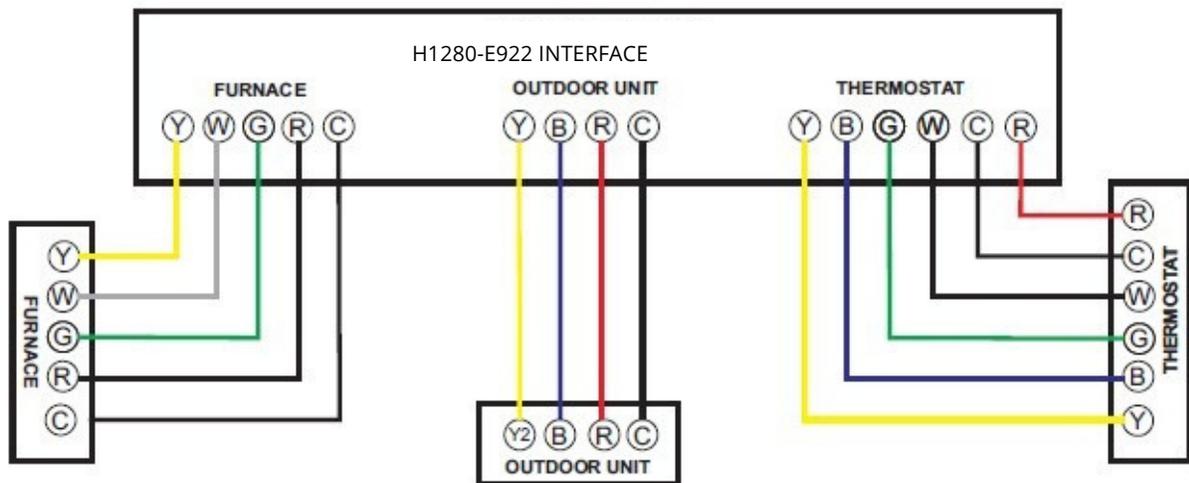

MOD30-24HFN1-MW
MOD30U-30HFN1-MR0(X)
MOE31U-36HFN1-M
MOE30U-48HFN1-M-[X1]
MOE30U-55HFN1-M

Notes:

1. **Thermostat** is a **Heat Pump** type.
2. “**B**” configuration is used for the reversing valve.
3. Change switch 4-2 to “**ON**” and restore power. _____
4. Do **not** remove metering device from indoor coil.

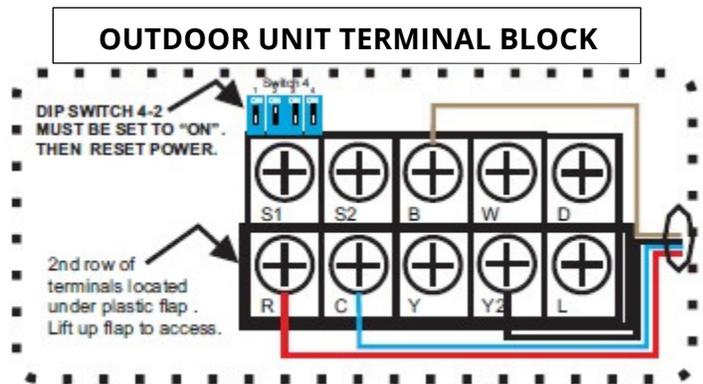

Head Office: Mississauga

1608 Bonhill Road
Mississauga, ON L5T 1C7
1 (800) 567-2221 • info@mitsair.com

Hydronics & Unico Division

6125 Netherhart Rd
Mississauga, ON L5T 1G5
(905) 362-5293 • hydronics@mitsair.com

Barrie Branch

691 Dunlop Street W.
Barrie, ON L4N 9W9
1 (800) 688-1673 • barrie@mitsair.com


London Branch

90 Towerline Place
London, ON N6E 2T1
(519) 914-9000 • london@mitsair.com

Windsor Branch

11629 County Road 42
Tecumseh, ON N8N 0H1
(519) 914-0332 • windsor@mitsair.com

SIMPLIFIED LOW VOLTAGE WIRING DIAGRAM MITS AIRTM "U" SERIES OUTDOOR UNIT WITH "MVC" SERIES AIR HANDLER

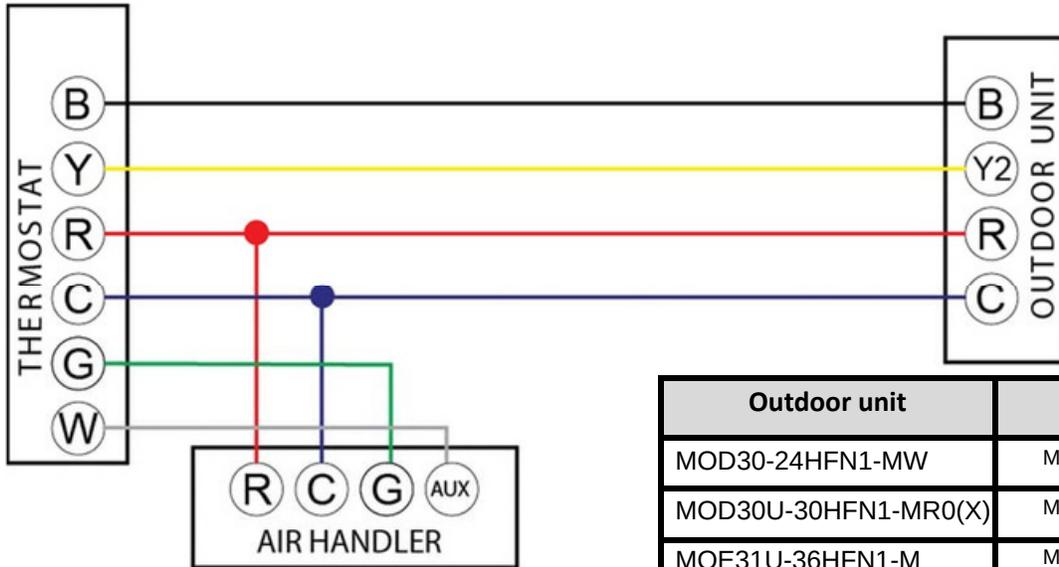

Outdoor unit	Air Handler
MOD30-24HFN1-MW	MVC-24 HWFN1-M
MOD30U-30HFN1-MR0(X)	MVC-30 HWFN1-M
MOE31U-36HFN1-M	MVC-36 HWFN1-M
MOE30U-48HFN1-M-[X1]	MVC-48 HWFN1-M
MOE30U-55HFN1-M	MVC-60 HWFN1-M

INDOOR AIR HANDLER
Switch S-4-2 of air handler must be turned "OFF" to allow auxiliary heat.

Jumper between W1 and W2 to enable full auxiliary heat.

SW-4-1 OFF

Notes:

1. Thermostat is a **Heat Pump** type.
2. "B" configuration is used for the reversing valve.
3. Reset power after changing dip switch 4-2 to "ON".
4. Follow thermostat manufacturer's instructions to enable emergency heat.

