



## Repair Parts List

Key No.	Part Description	No. Used	HT7-01	HT20	VT14-02	VT19	VT20-02
1	Bladder - Vinyl	1	U20-7	U20-13	U20-13	U20-8	U20-13
2	Cover Flange	1	U31-442P	U31-446P	U31-446P	U31-446P	U31-446P
3†	Flanged Nut - 5/16 - 18 Hex.	6	U36-202BT	U36-202BT	U36-202BT	U36-202BT	U36-202BT
4	Air Valve with Cap	1	U212-160	U212-160	U212-160	U212-160	U212-160

Key No.	Part Description	No. Used	VT36-02	VT52-02	VT96-02	VT99
1	Bladder - Vinyl	1	U20-9	U20-10	U20-14	U20-20
2	Cover Flange	1	U31-446P	U31-447P	U31-447P	U231-462P
3†	Flanged Nut - 5/16 - 18 Hex.	6	U36-202BT	U36-202BT	U36-202BT	U36-202BT
4	Air Valve with Cap	1	U212-160	U212-160	U212-160	U212-160

† Standard hardware items, may be purchased locally.

**For parts or assistance, call Simer Customer Service at 1-800-468-7867**