

# Introduction

**Thank you for purchasing the Vodafone 905SH.**

- For proper handset use, read this manual beforehand.
- This manual was created exclusively for Vodafone 905SH handsets sold in Japan.
- Keep this manual in a convenient place for reference.
- Accessible Vodafone services may vary by service area, subscription, etc.

**905SH is compatible with 3G network technology.**

## **Note**

- Copying this manual in whole or part without authorisation is prohibited.
- Manual content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this manual. Please contact Customer Service, General Information (see **P.20-26**) about unclear or missing information.












# Symbols


## Multi Selector

Use Multi Selector to select menu items, move cursor and scroll, etc.

In this manual, Multi Selector operations are indicated as shown to the right.

### • Basic Multi Selector Operations


- : Press  or 
- : Press  or 
- : Press , ,  or 

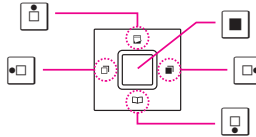

## Side Keys

Use Side Keys to control compatible functions such as TV and mobile camera.


In this manual, Side Keys are indicated as shown below.

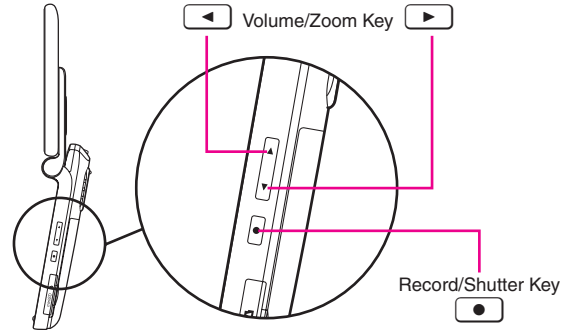

- Note** ▶
- In this manual, most operations are described with handset in portrait position (see **P.1-11**) in Standby.
  - Sample screen shots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.

## Abbreviated Steps


Handset operations starting from Main Menu are abbreviated as follows:

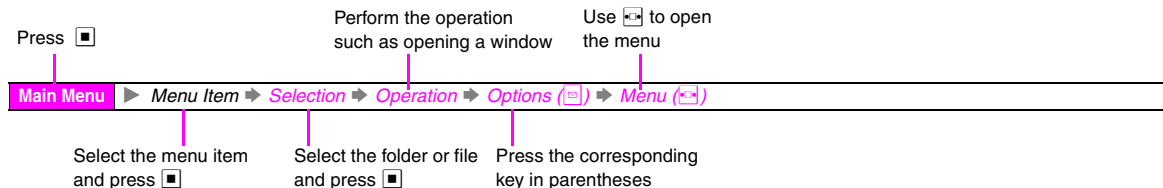


In this **Vodafone 905SH Instruction Manual**, **Vodafone 905SH** is abbreviated as **905SH**.

# Accessories


## ■ Lithium-ion Battery (Type 1) (SHBAK1)

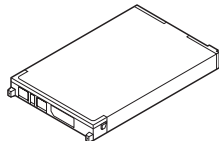


## ■ AC Charger (SHCAK1)

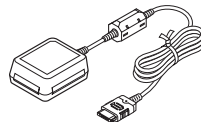

## ■ Utility Software (CD-ROM)\*

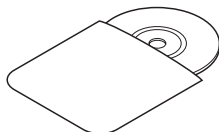

## ■ Headphones (with Built-in TV Antenna) (SHLV01)

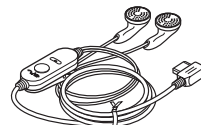

\*Upgrades or updates of included Utility Software may become available on the Vodafone Website (<http://www.vodafone.jp>) without prior notification. Please check for the newest version of Utility Software and download as required.

\*Complimentary sample not available for purchase

**Note** ▶ Supplied Utility Software is designed exclusively for 905SH/705SH.

- Tip** ▶
- For accessory-related information, please contact Vodafone Customer Centre, General Information (see **P.20-26**).
  - 905SH is compatible with miniSD™ Memory Card; miniSD™ Memory Card is not included in this package. Purchase miniSD™ Memory Card to use Memory Card-related handset functions.
  - In this manual, miniSD™ Memory Card is referred to as "Memory Card".

# Contents

Symbols .....	i
Accessories .....	iii
Contents .....	iv
Safety Precautions .....	xviii
General Notes .....	xxviii
Specific Absorption Rate (SAR) .....	xxxiii

## 1 Getting Started

Function & Feature Preview .....	1-2
USIM Card .....	1-4
■ General Information & Precautions .....	1-4
■ Inserting & Removing USIM Card .....	1-5
■ USIM PINs .....	1-6
Handset Parts & Functions .....	1-7
■ Handset .....	1-7
■ Display Indicators .....	1-9
■ Display Positions .....	1-11
Battery & Charger .....	1-12
■ Getting Started .....	1-12
■ Installing & Removing Battery .....	1-16
■ AC Charger .....	1-17
■ Desktop Holder .....	1-18
■ In-Car Charger .....	1-19
Handset Power On/Off .....	1-20
■ My Details .....	1-21
■ Keypad Lock .....	1-21
■ Large Font Mode .....	1-22
■ Pen Light .....	1-22
Handset Menus .....	1-23
■ Main Menu .....	1-23

■ User Shortcuts .....	1-24
● Assign .....	1-24
● Move .....	1-24
● Set to Default .....	1-24
■ Multi Job .....	1-26
Security Codes .....	1-27
■ Handset Code .....	1-27
■ Centre Access Code .....	1-27
■ Network Password .....	1-27

## 2 Basic Handset Operations

Initiating a Call .....	2-2
■ Emergency Calls .....	2-3
■ Redial .....	2-4
■ Placing an International Call .....	2-5
Incoming Call .....	2-6
■ Calling from Received Calls .....	2-8
Answer Phone .....	2-9
■ Activating & Cancelling .....	2-9
■ Playing Messages .....	2-10
Engaged Call Operations .....	2-11
■ Earpiece Volume .....	2-11
■ Voice Output .....	2-11
● Loudspeaker .....	2-11
● Mute .....	2-11
● Hold .....	2-11
■ Voice Memo .....	2-12
● Play .....	2-12
■ Other Engaged Call Operations .....	2-12

<b>Call Log</b> .....	<b>2-13</b>	<b>Conversion Methods (Japanese Only)</b> .....	<b>3-10</b>
● Delete .....	2-13	■ Phonetic Conversion .....	3-10
● Delete All .....	2-13	■ One-Hiragana Conversion.....	3-10
■ Using Call Log.....	2-13	■ Hiragana to Katakana/Alphanumerics Conversion.....	3-10
● Call .....	2-13	■ Quick Conversion (for Hiragana) .....	3-11
● Create Message .....	2-13	■ Conversion Settings .....	3-12
<b>Call Timers/Data Counter</b> .....	<b>2-14</b>	● Optional Predictive Functions .....	3-12
■ Call Timers .....	2-14	● Set Low Priority .....	3-12
● Clear Timers .....	2-14	● Reset Learning .....	3-12
■ Data Counter .....	2-14	<b>Editing Characters</b> .....	<b>3-12</b>
● Clear Counter .....	2-14	■ Deleting & Replacing.....	3-12
<b>Call Costs</b> .....	<b>2-15</b>	■ Copy/Cut & Paste .....	3-12
● Clear Costs .....	2-15	■ Deleting Text On and After Cursor .....	3-13
● Cost Units.....	2-15	<b>Additional Functions</b> .....	<b>3-13</b>
■ Limit Call Costs .....	2-15	■ Copying from Phone Book .....	3-13
● Max Cost .....	2-15	■ Using Text Templates .....	3-14
<b>Manner Mode</b> .....	<b>2-16</b>	■ Changing Font Size .....	3-14
■ Minding Mobile Manners .....	2-16		
■ Activating & Cancelling.....	2-17		
■ Activating/Cancelling Offline Mode.....	2-18		
		<b>4 Phone Book</b>	
<b>3 Entering Characters</b>		<b>Overview</b> .....	<b>4-2</b>
<b>Character Selection</b> .....	<b>3-2</b>	<b>Saving to Phone Book</b> .....	<b>4-3</b>
■ Entry Modes .....	3-2	■ Phone Book Entry Items .....	4-3
■ Key Assignments.....	3-3	■ New Phone Book Entries .....	4-4
<b>Entering Characters</b> .....	<b>3-5</b>	■ Saving from Call Log .....	4-8
■ Kanji, Hiragana & Katakana .....	3-5	■ Phone Book Memory Status .....	4-8
■ Entering Alphanumerics .....	3-7	<b>Using Phone Book</b> .....	<b>4-8</b>
■ Symbols, Pictographs & Emoticons .....	3-7	■ Dialling from Phone Book.....	4-8
■ Mail & Web Extensions .....	3-8	<b>Editing Phone Book Entries</b> .....	<b>4-10</b>
■ Character Code .....	3-8	■ Correction/Change .....	4-10
■ Pager Code .....	3-8	■ Copying Phone Book Entries .....	4-10
		■ Deleting Phone Book Entries .....	4-11
		<b>Category Settings</b> .....	<b>4-11</b>
		■ Changing Category Name.....	4-11
		■ Customising Handset Responses .....	4-12

<b>Contact Groups</b> .....	<b>4-12</b>
■ Creating Contact Groups.....	4-12
■ Saving Group Members .....	4-12
■ Editing Contact Groups .....	4-13
■ Editing Group Members .....	4-13
<b>Speed Dial List</b> .....	<b>4-14</b>
■ Saving Phone Numbers .....	4-14
■ Speed Dial.....	4-14
● Delete .....	4-14
● Clear All .....	4-14
<b>Vodafone Address Book (VAB)</b> .....	<b>4-15</b>
■ VAB Sync Commands & Features.....	4-15
■ Service Usage Outline .....	4-16
■ Saving User ID & Password .....	4-17
■ Backup & Restore .....	4-17
■ Synchronising Phone Book.....	4-18
■ Opening Log.....	4-18
<b>My Details</b> .....	<b>4-18</b>
■ Opening My Details .....	4-18
● Edit/Add Details .....	4-18
● Delete .....	4-18

## 5 Video Call

<b>Getting Started</b> .....	<b>5-2</b>
<b>Initiating a Video Call</b> .....	<b>5-3</b>
<b>Answering a Video Call</b> .....	<b>5-3</b>
<b>Engaged Video Call Operations</b> .....	<b>5-4</b>
● Camera Picture.....	5-4
● Earpiece Volume .....	5-4
● Mute.....	5-4
● Video Output.....	5-4
● Switch Images .....	5-5
● Lateral Display Size .....	5-6
● Loudspeaker .....	5-6
● Open Phone Book .....	5-6
● Transfer Audio.....	5-6
● Hold .....	5-6
● Mirror Image .....	5-6
● Exposure .....	5-6
● Help .....	5-6
<b>Video Call Settings</b> .....	<b>5-7</b>
● Camera Picture.....	5-7
● Lateral Display Size .....	5-7
● Loudspeaker .....	5-7
● Incoming Picture .....	5-7
● Outgoing Picture.....	5-7
● Backlight .....	5-7
● Mute Microphone .....	5-8
● Hold Guidance Pict.....	5-8

# 6 TV

<b>Basics</b> .....	6-2
<b>Getting Started</b> .....	6-3
■ Precautions .....	6-3
■ One Seg Digital Television Broadcasts .....	6-4
■ Antenna .....	6-4
■ Incoming Transmissions .....	6-5
■ Key Assignments .....	6-7
■ Window Description .....	6-8
■ Channel Setup .....	6-8
<b>Digital TV</b> .....	6-9
■ Watching Digital TV .....	6-9
■ TV Listing (Japanese Only) .....	6-10
■ Subtitle & Sound Settings .....	6-10
● Display Subtitle .....	6-10
● Subtitle Position .....	6-10
● Subtitle Language .....	6-11
● Sound Type .....	6-11
■ Data Broadcast (Japanese Only) .....	6-11
● Navigate .....	6-11
● Change View .....	6-12
● Image Location .....	6-12
● Delete Station Data .....	6-12
● Disclosure Settings .....	6-12
■ TV Link .....	6-12
■ Recording & Playback .....	6-13
● Set Recording .....	6-14
● Rename .....	6-15
● Information .....	6-15
● Delete .....	6-15
■ TV Timer & Timer Recording .....	6-16
● Edit .....	6-17
● Delete .....	6-17
● TV Alarm .....	6-17
■ Channel Lists .....	6-18
● Set Area Info .....	6-18
● Set Channels .....	6-18
● Change CH Name .....	6-19
● Reset .....	6-19
● Save Channel .....	6-19
● Move .....	6-19
● Delete .....	6-19
■ TV Settings .....	6-19
● Navi Key Settings .....	6-19
● Adjust Brightness .....	6-19
● Tone Control .....	6-20
● Sound Output .....	6-20
● Calls & Alarms .....	6-20
● Auto Power Off .....	6-20
● Activate TV .....	6-21
● Answer Call .....	6-21
<b>Analogue TV</b> .....	6-21
■ Watching Analogue TV .....	6-21
■ Analogue TV Functions .....	6-22
● Playback Jump .....	6-22
● Edit Channel .....	6-22
● Landscape .....	6-23



## 7 FM Radio

<b>Getting Started</b> .....	7-2
■ Precautions .....	7-2
■ Key Assignments .....	7-3
■ Window Description .....	7-4
<b>Using FM Radio</b> .....	7-4
■ Station Setup .....	7-4
■ Listening .....	7-5
■ Now On Air .....	7-5
<b>Station Lists</b> .....	7-6
■ Editing Station Lists .....	7-6
● Auto Scan & Save .....	7-6
■ Stations .....	7-7
● Save Station .....	7-7
● Station Name .....	7-7
● Frequency .....	7-7
● Move .....	7-7
● Delete .....	7-7
<b>FM Settings</b> .....	7-8
● Sound Output .....	7-8
● Auto switch off .....	7-8
● Phone Closing .....	7-8
● Navi Key Settings .....	7-8
● Switch List to .....	7-8

## 8 Camera

<b>Getting Started</b> .....	8-2
■ Mobile Camera Basics .....	8-2
■ Camera Display Indicators .....	8-3
■ Key Assignments .....	8-4
<b>Still Images</b> .....	8-5
■ Photo Camera Mode .....	8-5
■ Capturing Still Images .....	8-6
■ Still Image Functions .....	8-7
<b>Video</b> .....	8-8
■ Video Camera Mode .....	8-8
■ Recording Video .....	8-9
■ Video Recording Operations .....	8-10
<b>Opening Images &amp; Playing Video</b> .....	8-11
■ Opening Still Images .....	8-11
■ Playing Video .....	8-11
● SD Video .....	8-11
<b>Special Shooting Modes</b> .....	8-11
■ Self-timer .....	8-11
■ Continuous Shoot (Photo Camera) .....	8-12
■ Adding Frames (Photo Camera) .....	8-14
■ Camera Effects (Photo Camera) .....	8-15
<b>Sending Images</b> .....	8-15
■ Still Images .....	8-15
■ Video Clips .....	8-16
<b>Camera Settings</b> .....	8-16
■ Shooting Options .....	8-16
● Hide Indicators/Normal Finder .....	8-16
● Shutter Sound .....	8-16
● Mobile Light .....	8-17
● Display Size .....	8-17

■ Image Settings .....	8-17	<b>Playing Video</b> .....	<b>9-12</b>
● Exposure .....	8-17	■ Playback .....	9-13
● Picture Size.....	8-18	■ Playback Settings .....	9-14
● Picture/Video Quality .....	8-18	● Playback Pattern .....	9-14
● Scene .....	8-18	● Backlight .....	9-14
● Record Time/Size .....	8-19	● Display Size .....	9-14
● Microphone .....	8-19	● Sound Settings .....	9-14
● Video Encode .....	8-19	● Title/Artist.....	9-15
■ Additional Settings.....	8-20	<b>Editing Video</b> .....	<b>9-15</b>
● Internal Camera/External Camera.....	8-20	■ Clipping Portions between Two Points .....	9-15
● Save to.....	8-20	■ Cropping Video Clips.....	9-16
● Auto Save .....	8-20	■ Adding Subtitles .....	9-16
		● Duration .....	9-17
		● Display Position .....	9-17
		● Font Size.....	9-17
		● Scrolling.....	9-18
		● Background Colour.....	9-18
		● Font Colour .....	9-18
		● Highlight.....	9-19
		● Blink.....	9-19
		● Reset .....	9-19
		<b>Managing Video &amp; Music Files</b> .....	<b>9-19</b>
		■ Adding New Playlist.....	9-20
		■ Adding Files to Playlists .....	9-20
		■ Editing SD AUDIO Files.....	9-21
		■ Deleting Files in SD VIDEO & SD AUDIO .....	9-21
<b>9 Media Player</b>			
<b>Media Player Basics</b> .....	<b>9-2</b>		
■ Downloading Music/Video .....	9-2		
■ Saving Music Files from PCs .....	9-3		
<b>Recording Music</b> .....	<b>9-4</b>		
■ Connecting to Audio Sources .....	9-6		
■ Recording .....	9-7		
■ Recording Settings .....	9-8		
● Monitor Level .....	9-8		
● Synch Recording .....	9-8		
● Bit Rate .....	9-8		
● Auto Mark Level.....	9-8		
<b>Playing Music</b> .....	<b>9-9</b>		
■ Playback .....	9-10		
■ Playback Settings .....	9-11		
● Tone Control .....	9-11		
● Playback Pattern.....	9-11		

<b>10</b>	<b>Managing Files (Data Folder)</b>	
<b>Data Folder</b>		<b>10-2</b>
■ Window Description		10-2
■ Major Icons		10-3
■ Display Settings		10-4
<b>Opening Files</b>		<b>10-5</b>
■ CCF Files		10-7
■ SVG Files		10-7
■ MMS Mail Attachments		10-8
■ Printing Images		10-8
<b>Managing Files &amp; Folders</b>		<b>10-9</b>
■ Adding Folders		10-9
■ Changing File/Folder Name		10-9
■ Deleting Files & Folders		10-10
■ Copying/Moving Files		10-10
<b>Using Files</b>		<b>10-11</b>
■ Wallpaper		10-11
■ Saving to Phone Book		10-11
■ Ringvideo & Ringtone		10-11
<b>Editing Still Images</b>		<b>10-12</b>
■ Changing Image Size		10-12
■ Visual Effects (Retouch)		10-13
■ Adding Text & Stamps		10-13
■ Face Arrange		10-14
■ Additional Picture Effects		10-15
● Add Frame		10-15
● Rotate		10-15
● Reformat file		10-15
■ Panorama Images		10-16
■ Split Screen		10-17

<b>Text Templates</b>		<b>10-17</b>
■ New Entry		10-17
■ Opening Templates		10-18
■ Editing Templates		10-18
■ Deleting Templates		10-18
<b>Memory Card</b>		<b>10-18</b>
■ Precautions		10-19
■ Inserting & Removing Memory Card		10-19
■ Format Card		10-20
■ Backup & Restore		10-21
■ Additional Function		10-22
● SD Local Contents		10-22
<b>Digital Print Order Format (DPOF)</b>		<b>10-23</b>
■ Selecting Images & Prints		10-23
■ Print Settings		10-23
● For All Pictures		10-23
● Add Date		10-23
● Index Print		10-24
● Check Settings		10-24
● Reset Settings		10-24

<b>11</b>	<b>Additional Settings</b>	
<b>Mode Settings</b>		<b>11-2</b>
■ Activating a Mode		11-2
● Mode Settings		11-2
■ Customising Modes		11-2
● Personalise		11-2
● Any Key Answer		11-2
● Answer Phone		11-2
■ Reset		11-2
● Set to Default		11-2

<b>Display</b> .....	<b>11-3</b>	<b>Additional Sound Settings</b> .....	<b>11-14</b>
■ Display Settings.....	11-3	● Surround.....	11-14
● Wallpaper.....	11-3	● Ringer Output .....	11-14
● System Graphics .....	11-3	● Earpiece Volume .....	11-14
● Font Settings.....	11-4	<b>Date &amp; Time</b> .....	<b>11-14</b>
● Clock/Calendar .....	11-4	● Set Date/Time.....	11-14
● Show Indicators .....	11-4	● Set Time Zone/Daylight Saving .....	11-15
● Show Operator Name .....	11-4	● Date/Time Format.....	11-15
● Greeting Message .....	11-5	● Calendar Format.....	11-15
■ Language Setting .....	11-5	● Wake-up Alarm .....	11-15
● Language .....	11-5	<b>User Dictionary</b> .....	<b>11-16</b>
■ Custom Screens.....	11-5	■ Entries (Japanese Only).....	11-16
● Delete .....	11-7	● New Entry .....	11-16
● Web Access.....	11-7	● Edit/Delete .....	11-16
■ Light Settings.....	11-8	■ 905SH Download Dictionary (Japanese Only) .....	11-16
● Backlight.....	11-8	● Acquire Dictionary .....	11-16
● Display Saving .....	11-8	● Cancel .....	11-16
■ External Display Settings .....	11-8	● Info .....	11-16
● Switch On/Off .....	11-8	<b>Handset Security</b> .....	<b>11-17</b>
● Backlight .....	11-8	■ Face Recognition.....	11-17
● LCD Contrast .....	11-9	● Conductor Setting.....	11-19
● Caller Display.....	11-9	● Security Level .....	11-19
■ Viewing Images on External Devices .....	11-9	■ PIN .....	11-20
<b>Sounds &amp; Alerts</b> .....	<b>11-11</b>	● PIN Entry .....	11-20
■ Customising Handset Responses .....	11-11	● Change PIN.....	11-20
● Volume.....	11-11	■ Handset Locks.....	11-20
● Ringtone/videos.....	11-11	● Handset Lock.....	11-20
● Vibration.....	11-12	● Function Lock .....	11-21
● Event Light.....	11-12	● Phone Book Lock.....	11-21
● Status Light.....	11-13	■ Secret Mode .....	11-21
■ Customising System Sounds .....	11-13	● Show Secret Data.....	11-21
● Keypad Tones .....	11-13	■ Changing Handset Code .....	11-22
● Warning Tone & Power On/Off Sound .....	11-13	● Chng Handset Code .....	11-22

<b>Reset</b> .....	<b>11-22</b>	<b>Location Info</b> .....	<b>12-15</b>
● Reset Settings .....	11-22	● URL Setting .....	12-15
● Reset All .....	11-22	● Datum On/Off .....	12-15
<b>Call Settings</b> .....	<b>11-23</b>		
■ International Call .....	11-23		
● Int'l Prefix .....	11-23		
● Country Codes .....	11-23		
■ Additional Settings.....	11-24		
● Minute Minder .....	11-24		
● Display Call Cost .....	11-24		
● Call Time Counter.....	11-24		
<b>12 Connectivity</b>			
<b>Bluetooth®</b> .....	<b>12-2</b>		
■ Getting Started .....	12-2		
■ Transferring Files via Bluetooth® .....	12-4		
■ Connecting Handsfree Devices .....	12-8		
■ Bluetooth® Settings.....	12-8		
● Device Name .....	12-8		
● Bluetooth Timeout .....	12-8		
● Handsfree Setting .....	12-9		
● OPP Authentication .....	12-9		
● Device Details.....	12-9		
<b>Infrared</b> .....	<b>12-9</b>		
■ Getting Started .....	12-9		
■ Transferring Files via Infrared.....	12-10		
<b>Mass Storage</b> .....	<b>12-14</b>		
<b>Network Information</b> .....	<b>12-14</b>		
● Network Info.....	12-14		
<b>Internet Settings</b> .....	<b>12-14</b>		
● Retrieve NW Info.....	12-14		
● Clear DNS Cache .....	12-14		
● White List .....	12-15		
		<b>13 Tools</b>	
		<b>Calendar</b> .....	<b>13-2</b>
		■ Opening Calendar .....	13-2
		● Default View.....	13-2
		● Set Holiday .....	13-3
		● Quick Entry .....	13-3
		■ Saving Entries .....	13-3
		● Assign Tone .....	13-5
		● Assign Video.....	13-5
		● Duration .....	13-5
		● Repeat .....	13-5
		● Secret .....	13-5
		■ Opening Entries .....	13-6
		■ Searching Entries by Subject .....	13-6
		■ Editing Entries .....	13-6
		■ Deleting Entries .....	13-7
		● This Appointment/All This Day.....	13-7
		● All This Month/All This Week .....	13-7
		● Up to Last Month/Up to Last Week .....	13-7
		● All Appointments .....	13-7
		<b>Tasks</b> .....	<b>13-8</b>
		■ Saving Entries .....	13-8
		● Assign Tone .....	13-9
		● Assign Video.....	13-9
		● Duration .....	13-10
		● Secret .....	13-10
		■ Opening Entries .....	13-10
		■ Searching Entries by Subject .....	13-10
		■ Editing Entries .....	13-11

■ Deleting Entries .....	13-11	<b>Create QR Codes .....</b>	<b>13-22</b>
● This Task .....	13-11	● Phone Book .....	13-22
● All Tasks/All Comp. Tasks .....	13-11	● Text Input .....	13-22
<b>Alarm .....</b>	<b>13-11</b>	● Data Folder .....	13-23
■ Setting Alarm .....	13-11	<b>Text Scanner .....</b>	<b>13-23</b>
● Assign Tone .....	13-13	● Scanning during Text Entry .....	13-25
● Assign Video .....	13-13	<b>Stopwatch .....</b>	<b>13-25</b>
● Snooze .....	13-13	<b>Countdown Timer .....</b>	<b>13-25</b>
● Alarm Volume .....	13-13	<b>Expenses Memo .....</b>	<b>13-26</b>
● Vibration .....	13-13	● Add New Expense .....	13-26
● Duration .....	13-13	● Totals .....	13-26
■ Cancelling & Reactivating Alarm .....	13-14	● Edit Category .....	13-26
● Switch Off .....	13-14	<b>Electronic Books .....</b>	<b>13-27</b>
● Switch On .....	13-14	■ Reading Content .....	13-27
■ Deleting Alarm .....	13-14	■ Using E-Book Images .....	13-30
● Reset Alarm .....	13-14	● Embedded Information .....	13-30
● Clear All .....	13-14	■ Using a Dictionary .....	13-30
<b>Auto Power On .....</b>	<b>13-14</b>	● Look Up Word .....	13-30
<b>World Clock .....</b>	<b>13-15</b>	<b>Phone Help .....</b>	<b>13-30</b>
■ Setting Time Zone & Daylight Saving .....	13-15	<b>14 Optional Services</b>	
■ Opening World Clock .....	13-15	<b>Optional Services Overview .....</b>	<b>14-2</b>
<b>Calculator .....</b>	<b>13-16</b>	<b>Call Forwarding .....</b>	<b>14-2</b>
<b>Voice Recorder .....</b>	<b>13-17</b>	● Call Forwarding .....	14-2
■ Preparation .....	13-17	● Cancel All .....	14-3
■ Recording .....	13-17	● Status .....	14-3
■ Playback .....	13-18	<b>Voicemail .....</b>	<b>14-3</b>
■ Recording Setting .....	13-18	● Voicemail .....	14-3
● Save Recording To .....	13-18	● Cancel All .....	14-4
<b>Barcode .....</b>	<b>13-19</b>	● Status .....	14-4
● Scanning during Text Entry .....	13-21	● Call Voicemail .....	14-4
● Open Barcode .....	13-22	● Voicemail Centre Numbers .....	14-4
● Scanned Results .....	13-22	■ Missed Call Notification .....	14-5
		● Activate/Cancel .....	14-5

<b>Call Waiting</b> .....	<b>14-5</b>
● Call Waiting On/Off.....	14-5
● Status .....	14-5
● Incoming Calls .....	14-5
<b>Conference Call</b> .....	<b>14-6</b>
● Dial New Number.....	14-6
● Swap Calls.....	14-6
● Conference Call .....	14-6
<b>Call Barring</b> .....	<b>14-7</b>
■ Restricting Outgoing Calls.....	14-8
● Set/Cancel Restriction .....	14-8
● Status .....	14-8
■ Restricting Incoming Calls.....	14-8
● Set/Cancel Restriction .....	14-8
● Status .....	14-8
■ Rejecting a Call .....	14-9
● Set Reject Number .....	14-9
● Switch On/Off .....	14-9
■ Rejecting Calls without Caller ID.....	14-9
● Withheld Call .....	14-9
■ Changing Network Password .....	14-9
● Change NW Password.....	14-9
<b>Caller ID</b> .....	<b>14-10</b>
● Show My Number .....	14-10
● Status .....	14-10

## 15 Messaging

<b>Basics</b> .....	<b>15-2</b>
■ Messaging Folders .....	15-2
■ Window Description.....	15-3
■ Views.....	15-4
■ Customising Handset Address.....	15-5
<b>Sending Text Messages</b> .....	<b>15-6</b>
■ Basics.....	15-6
■ Creating & Sending a Message.....	15-7
■ SMS/MMS Send Options .....	15-12
● Delivery Report.....	15-12
● Expiry Time.....	15-12
● Priority .....	15-12
■ Using Drafts.....	15-12
■ Using Templates.....	15-13
<b>Incoming Text Messages</b> .....	<b>15-13</b>
■ Opening New Messages .....	15-13
■ Retrieving Complete MMS Messages .....	15-15
■ Retrieving Mail List .....	15-15
● Get.....	15-16
● Remote Forward .....	15-16
● Delete .....	15-16
● Message Details .....	15-16

<b>Using Messages</b> .....	<b>15-16</b>
■ Checking Messages.....	15-16
● Display Effect.....	15-17
● Background Colour/Display Speed.....	15-17
■ Replying to Messages.....	15-18
■ Forwarding Messages.....	15-19
■ Linked Info.....	15-19
■ Protecting Messages.....	15-20
■ Deleting Messages.....	15-21
■ Saving Attachments to Data Folder.....	15-22
■ My Folders.....	15-22
<b>Additional Functions</b> .....	<b>15-24</b>
■ Speed Mail List.....	15-24
■ Speed Mail.....	15-25
■ Auto Resend.....	15-25
■ General Settings.....	15-25
● Home Download.....	15-25
● Delivery Report.....	15-26
● Anti Spam Measures.....	15-26
● Signature.....	15-26
● Auto Delete.....	15-26
● Message Notice.....	15-27
● Scroll Unit.....	15-27
● Message Type.....	15-27
■ SMS Settings.....	15-27
● Expiry Time.....	15-27
● Message Centre.....	15-27
■ MMS Settings.....	15-28
● Expiry Time.....	15-28
● Picture Appearance.....	15-28
● Send File Settings.....	15-28
● Auto Play File.....	15-28
● SMIL Settings.....	15-28
● Slide Auto Play.....	15-28

## 16 Web

<b>Getting Started</b> .....	<b>16-2</b>
<b>Using Web</b> .....	<b>16-3</b>
■ Opening Vodafone Web Menu.....	16-3
■ Entering URLs Directly.....	16-5
<b>Basic Operations</b> .....	<b>16-5</b>
<b>Advanced Features</b> .....	<b>16-7</b>
■ Bookmarks & Saved Pages.....	16-7
● Edit.....	16-8
● Bookmarks Folder.....	16-9
● Rename.....	16-9
● Move.....	16-9
● Delete.....	16-9
■ Saving to Data Folder.....	16-9
■ Using Linked Info.....	16-10
<b>Streaming</b> .....	<b>16-11</b>
● Streaming from Media Player.....	16-12
<b>Additional Functions</b> .....	<b>16-12</b>
■ Sub Menu Settings.....	16-12
● Change View.....	16-12
● Copy Text.....	16-12
● Reload.....	16-12
● Enter URL.....	16-12
● Home.....	16-12
● Access History.....	16-12
● Send.....	16-13
● Properties.....	16-13
● Delete Browser Data.....	16-13
● Search.....	16-13
● Current Cert.....	16-13
● Uploading Files.....	16-13



■ Basic Settings.....	16-14
● Font Size.....	16-14
● Scroll Unit.....	16-14
● Char-code.....	16-14
● Send Referrer.....	16-14
● Cookies.....	16-14
● Downloads.....	16-14
● Manufacture Number.....	16-14
● Location.....	16-14
● Download to.....	16-15
■ Security.....	16-15
● Secure Prompt.....	16-15
● Root Certificates/Current Cert.....	16-15
● Authentication.....	16-15

## 17 V-applications

<b>Getting Started</b> .....	<b>17-2</b>
■ V-appli Library.....	17-2
■ V-applications on Memory Card.....	17-3
■ Video Output.....	17-3
■ Downloading V-applications.....	17-4
<b>Using V-applications</b> .....	<b>17-5</b>
■ Starting V-applications.....	17-5
■ Exit, Pause & Resume.....	17-5
<b>Managing V-applications</b> .....	<b>17-6</b>
■ Opening V-application Properties.....	17-6
■ Moving V-applications to Memory Card.....	17-6
■ Deleting V-applications.....	17-6
■ Screensaver.....	17-7
■ Setting Permissions.....	17-8

■ V-application Operational Settings.....	17-8
● Application Volume.....	17-8
● Backlight.....	17-8
● Blink.....	17-9
● Vibration.....	17-9
● Calls & Alarms.....	17-9
● Surround.....	17-9
■ Reset.....	17-9
● Set to Default.....	17-9
● Memory All Clear.....	17-10

## 18 Entertainment

<b>Vodafone live! CAST (Japanese Only)</b> .....	<b>18-2</b>
■ Basics.....	18-2
■ Service Registration & Content Subscription.....	18-2
■ Opening Received Information.....	18-2
■ Using Information.....	18-3
<b>Near chat (Japanese Only)</b> .....	<b>18-4</b>
■ Basics.....	18-4
■ Using Near chat.....	18-4
● Latest Information.....	18-5
<b>ComicSurfing (Japanese Only)</b> .....	<b>18-6</b>

## 19 Vodafone live! FeliCa

<b>Basics</b> .....	<b>19-2</b>
■ Starting IC-appli.....	19-3
<b>Using Vodafone live! FeliCa</b> .....	<b>19-3</b>
<b>Vodafone live! FeliCa Settings</b> .....	<b>19-4</b>
■ IC Card Status.....	19-4
■ IC Card Lock.....	19-4
■ Remote Lock.....	19-5
■ Interface Settings.....	19-7
■ Resetting Defaults.....	19-7

## 20 Appendix

Function List .....	20-2
Troubleshooting .....	20-4
Software Update.....	20-9
Character Code List.....	20-10
Pictograph List.....	20-16
Specifications.....	20-17
Memory List.....	20-18
Index.....	20-19
Warranty & After-Sales Services .....	20-25
Customer Service .....	20-26

# Safety Precautions

- Read safety precautions before using handset.
- Observe precautions to avoid injury to self or others, or damage to property.
- Vodafone is not liable for any damages resulting from use of this product.

## Before Using Handset

### ■ Symbols

Make sure you thoroughly understand these symbols before reading on.

Symbols and their meanings are described below:



**DANGER**

Great risk of death or serious injury from improper use



**WARNING**

Risk of death or serious injury from improper use



**CAUTION**

Risk of injury or damage to property from improper use

### ■ Symbols



Prohibited Actions



Compulsory Actions



Attention Required

# DANGER

## Handset, Battery & Charger

**Use specified battery, Charger and Desktop Holder only (see P.iii).**



Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

**Do not short-circuit Charger terminals.**



Keep metal objects away from Charger terminals. Keep handset away from necklaces, hairpins, etc.  
Battery may leak, overheat, burst or ignite causing injury.  
Use a case to carry battery.

## Battery

**Prevent injury from battery leakage, breakage or fire.**



**Do not:**

- Heat or dispose of battery in fire
- Open/modify/disassemble battery
- Damage or solder battery
- Use a damaged or deformed battery
- Use non-specified charger (see P.ii)
- Force battery into handset
- Charge battery near fire or sources of heat; or expose it to extreme heat
- Use battery for other equipment

**If battery fluid contacts eyes, do not rub them. Rinse with clean water and consult a doctor immediately.**



Eyes may be severely damaged.

# WARNING

## Handset, Battery & Charger

---

### Do not insert foreign objects into the handset, Charger or Desktop Holder.



Do not insert metal or flammable objects into handset, Charger or Desktop Holder; may cause fire or electric shock. Keep out of children's reach.

---

### Keep handset out of rain or extreme humidity.



Fire or electric shock may result.

---

### Keep handset away from liquid-filled containers.



Keep the handset, Charger and Desktop Holder away from chemicals or liquids; fire or electric shock may result.

---

### Keep battery, handset, Charger or Desktop Holder away from microwave ovens.



Battery, handset, Charger or Desktop Holder may leak, burst, overheat or ignite, leading to accidents or injury.

---

### Do not disassemble or modify handset or related hardware.



- Do not open handset, Charger or Desktop Holder; may cause electric shock or injury. Contact Vodafone Customer Centre, Customer Assistance for repairs.
- Do not modify handset, Charger or Desktop Holder; fire or electric shock may result.

---

### Do not use Mobile Light near people's faces.



Eyesight may be temporarily affected leading to accidents.

---

#### CAUTION:

Use of controls, adjustments or performance of procedure other than those specified herein may result in hazardous radiation exposure. As the emission level from Mobile Light LED used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Servicing is limited to qualified servicing station only.

---

### If water or foreign matter is inside handset:



Discontinue handset use to prevent fire/electric shock. Turn off handset, remove battery and unplug Charger, then contact Vodafone Customer Centre, Customer Assistance.

---

### Avoid sources of fire.



Prevent fire or explosion. Do not use handset in the presence of gas or fine particles (coal, dust, metal, etc.).

---

### Do not subject handset to strong shocks or impacts.



Strong shocks or impacts to handset, Charger or Desktop Holder may cause malfunction or injury. Should handset be damaged, remove battery then contact Vodafone Customer Centre, Customer Assistance. Discontinue handset use; fire or electric shock may occur.

# WARNING

## Handset, Battery & Charger

### If an abnormality occurs:

If a handset emits an unusual sound, smoke or odour, discontinue use; may cause fire or electric shock. Turn off handset, remove battery and unplug Charger; contact Vodafone Customer Centre, Customer Assistance.



## Handset

### Take measures to prevent accidents.

- For safety, never use handset while driving. Pull over beforehand. Mobile phone use while driving is prohibited by the revised Road Traffic Law (effective 1 November 2004).
- Do not use Headphones while driving or riding a bicycle. Accidents may result.
- Moderate volume outside, especially at level/road crossings to avoid accidents.



### Do not swing handset by Headphones or handstrap.

May result in injury or breakage.



### Turn handset power off before boarding aircraft.

Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.



### Adjust vibration and Ringtone settings:

Users with a heart condition/pacemaker/defibrillator should adjust handset settings accordingly.



### During thunderstorms, turn power off; find cover.

There is a risk of lightning strike or electric shock.



# WARNING

## Charger

---

### Use only the specified voltage.

Non-specified voltages may cause fire or electric shock.

- **AC Charger:** AC 100V-240V Input
- **In-Car Charger:** DC 12V-24V Input



---

### Do not use In-Car Charger if vehicle has a positive earth.

Fire may result. Use In-Car Charger only inside vehicles with a negative earth.



---

### Charger care

- Do not touch blades with wet hands. Electric shock may occur.
- Do not use multiple cords in one outlet; may cause excess heat/fire.
- Do not bend, twist, pull or set objects on cord. Exposed wire may cause fire or electric shock.



---

### Do not short-circuit Charger terminals.

May cause overheating, fire or electric shock. Keep metal away from terminals.



---

### Do not use Desktop Holder inside vehicles.

Extreme temperature or vibration may cause fire or damage handset, etc.



---

### Take measures to prevent accidents.

Secure In-Car Charger to avoid injury or accidents.



---

### Damaged AC Charger/In-Car Charger cord:

May cause fire or electric shock; discontinue use and purchase a new Charger.



---

### During thunderstorms:

Unplug Charger to avoid damage, fire or electric shock.



---

### Charger/Desktop Holder use and children:

May cause electric shock/injury; keep out of reach.



# WARNING

## Battery

- If battery does not charge properly, stop charging. Battery may overheat, burst or ignite.
- If there is leakage or abnormal odour, avoid fire sources. Battery may catch fire or burst.



If there is abnormal odour, excessive heat, discolouration or distortion, remove battery from handset.  
It may leak, overheat or explode.



## Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

### **Persons with implanted pacemaker/defibrillator should keep handset more than 22 cm away.**

Radio waves can interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



### **Turn handset off in crowds or trains where persons with implanted pacemaker/defibrillator may be near.**

Radio waves can interfere with implanted pacemakers or defibrillators causing such devices to malfunction.



### **Observe these rules inside medical facilities:**

- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a mobile handset.
- Keep handset off in hospitals.
- Keep handset off in hospital lobbies. Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.



### **Consult manufacturer for radio wave effects on electronic medical equipment.**





# CAUTION

## Handset, Battery & Charger

### Handset care



- Place handset on stable surfaces to avoid malfunction or injury.
- Keep handset away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage or burnout.
- Keep handset away from direct sunlight (inside vehicles, etc.) or heat sources. Distortion, discolouration or fire may occur. Battery shape may be affected.
- Keep handset out of extremely cold places to avoid malfunction or accidents.
- Keep handset away from fire sources to avoid malfunction or accidents.

### Usage environment



- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using handset on the beach. Sand may cause malfunction or accidents.
- Keep handset away from credit cards, telephone cards, etc. to avoid data loss.

## Handset

### Handset temperature



Handset may become hot while in use. Avoid prolonged contact with skin especially at high temperature. May cause burn injuries.

### Avoid leaving handset in extreme heat (inside vehicles, etc.).



Handset may become hot to the touch, leading to burn injuries.

### Volume settings



Moderate handset volume; excessive volume may damage ears or hearing.

### Headphones



- Do not force plugs or pull on cord; may damage plugs or cord.
- Keep plugs clean to avoid noise and malfunction.

### Inside vehicles



Handset use may cause electronic equipment to malfunction.

# ⚠ CAUTION

## Handset

**If you experience any skin irritation associated with handset use, discontinue handset use and consult a doctor.**

See handset materials below. Some materials may cause skin irritation, rashes, or itchiness depending on your physical condition.



Parts	Materials & Finishing
Housing (Display side)	Magnesium alloy/Acrylic baking finish (sealer: epoxy baking finish)
Housing (Display back/Keypad/Keypad back side), battery cover	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)
Housing ornament (Display back side)	ABS resin (chrome plating on nickel plating)
Display window, External Display window, lens cover, Mobile Light cover	Acrylic resin
Back ornament plate (for blue and black)	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)
Back ornament plate (for white)	ABS resin/Acrylic UV curing painting (sealer: acrylic UV curing painting, discontinuous deposition)
Antenna	ABS resin/Brass/PA/Elastomer/SUS
Logo badge	Acrylic UV curing resin/Aluminium (base)
Infrared Port	ABS resin (infrared grade)
Protector (Display edges)	Nylon
LCD rotation stopper (stop pad), Portrait/Macro Selector	ABS resin
Cabinet cover (below Keypad)	Elastomer
Multi Selector (centre)	ABS resin (chrome plating on nickel plating)
Multi Selector (Cursor Keys), Start Key, Power On/Off Key, Mail Key, Vodafone Web Key, Side Keys, Shortcuts & A/a Key, Clear/Back Key, Multimedia/Text Key, TV/Multi Job/Manner Key, Keypad	PC resin/Paint
Memory Card Slot cover, External Device Connector cover, VIDEO OUT/Headphone/Optical Digital Line In Connector cover	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)/Elastomer
Battery	PC resin
Charger Terminal	SUS/Gold plating (sealer: nickel)
Screw (all pieces)	SWCH12A/Ni plating
USIM pin	Copper alloy/Gold plating (sealer: nickel)
USIM holder	SUS

# CAUTION

## Charger

### Charger & In-Car Charger

- Grasp plug (not cord) to disconnect Charger. May cause fire/electric shock.
- Keep cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if plug is hot or improperly connected. May cause fire/electric shock.
- Keep In-Car Charger socket clean. May overheat and cause injury.



### Do not touch Desktop Holder while in use.

May cause burn injuries.



### Use only the specified fuse.

1 A fuse for In-Car Charger.  
Or may cause breakage/fire.



### Always charge battery in a well-ventilated area.

Avoid covering/wrapping Charger and Desktop Holder; may cause damage/fire.



### Do not use In-Car Charger when engine is off.

To avoid weakening the car battery, always start engine before charging the handset using In-Car Charger.



### During periods of disuse

Always unplug AC Charger or In-Car Charger after use.



### Handset maintenance

Always disconnect AC Charger or In-Car Charger when cleaning handset, to prevent shock/injury.



### Installing In-Car Charger

Properly position the cable for safe driving to avoid injury or accidents.



# CAUTION

## Battery

Do not throw or abuse battery. Battery may overheat, burst or ignite.



Do not leave battery in direct sunlight or inside a closed vehicle; may reduce battery performance or overheat. An overheated battery may cause fire.



Do not expose battery to liquids. Performance may deteriorate.



If battery fluid contacts skin or clothes, rinse with clean water immediately.



Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take exhausted battery to a Vodafone shop, or follow the local disposal regulations.



Keep battery out of children's reach.



- Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.
- If your child is using handset, explain all instructions and supervise usage.
- If there is abnormal odour or excessive heat, stop using battery and call Vodafone Customer Centre, Customer Assistance.
- Charge battery at least once every six months; an uncharged battery may become unusable.



# General Notes

## General Use

- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset or Memory Card data. Keep a copy of Phone Book entries, etc. in a separate place.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- **Beware of eavesdropping.**  
Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

### **Eavesdropping**

Deliberate/accidental interception of communications constitutes eavesdropping.

## Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

## Aboard Aircraft

Never use handset aboard aircraft (keep power off).

Handset use may impair aircraft operation.

## Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. Vodafone is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.
- Exposing lens to direct sunlight may damage colour filter and affect image colour.
- Do not drop or subject handset to shocks.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.
- Never disassemble or modify handset.
- Avoid scratching handset Display.
- When closing handset, keep straps, etc. outside to avoid damaging the Display.
- When using Headphones, moderate volume to avoid sound bleed.
- **Handset is not water-proof. Avoid exposure to liquids and high humidity.**
  - Keep handset away from precipitation.
  - Cold air from air conditioning, etc. may condense causing corrosion.
  - Avoid dropping handset in damp places (toilet, bathroom, etc.).
  - On the beach, keep handset away from water and direct sunlight.
  - Perspiration may seep inside handset causing malfunction.
- **Avoid heavy objects or excessive pressure. May cause malfunction or injury.**
  - Do not sit down with handset in a back pocket.
  - Do not place heavy objects on handset in a bag.
- Connect only the specified products to VIDEO OUT/ Headphone Connector. Non-specified devices may malfunction or cause damage.
- Always turn off handset before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

## Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

Video recording and playback are based on **MPEG-4**.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No licence is granted or implied for any other use. Additional information may be obtained from MPEG LA. See <http://www.mpegla.com>.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional licence and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional licence may be obtained from MPEG LA, LLC.

See <http://www.mpegla.com> for additional details.



905SH employs RSA®BSAFE™ software developed by RSA Security Inc.

RSA is a registered trademark of RSA Security Inc. BSAFE is a registered trademark of RSA Security Inc. in the United States and/or other countries.

This product is equipped with JBlend™ designed to accelerate the performance of Java™ Application. Powered by JBlend™ Copyright 1997-2006 Aplix Corporation. All rights reserved.



JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries. Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



miniSD™ is a trademark of the SD Card Association.



Verance

Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501  
5,506,865 5,109,390 5,511,073 5,228,054 5,535,239  
5,267,261 5,544,196 5,267,262 5,568,483 5,337,338  
5,600,754 5,414,796 5,657,420 5,416,797 5,659,569  
5,710,784 5,778,338

## NetFront®

This product employs NetFront Browser (Internet browser) and NetFront SMIL Player (SMIL player) developed by ACCESS Co., Ltd.

Copyright© 2004-2006 ACCESS Co., Ltd.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd in Japan or other countries.

This product includes a module developed by Independent JPEG Group.

Bluetooth is a registered trademark of the Bluetooth SIG, Inc.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sharp is under license. Other trademarks and trade names are those of their respective owners.

The frequency band used for the Bluetooth® function of 905SH is shared with other industrial, scientific or medical equipment (microwave ovens, etc.), and used at premises radio stations, amateur radio stations, etc. (hereinafter "other radio stations").

- 1 Before using the Bluetooth® function, visually check that there are no other radio stations sharing the same frequency band nearby.
- 2 Should interference occur between 905SH and other radio stations, move to other place or stop the Bluetooth® function (stop the transmission) immediately.
- 3 For additional information and support, contact us at the following number.

### Vodafone Customer Centre, General Information

From a Vodafone handset, call toll free at 157 for General Information.

From landlines, see **P.20-26** "Customer Service".

- This radio equipment operates in the 2.4 GHz band using the FH-SS modulation, and its maximum communication distance is ten metres.

2.4FH1





This product employs Macromedia® Flash® Lite™ technology developed by Adobe Systems Incorporated.  
Copyright© 1995-2006 Adobe Systems Incorporated. All rights reserved.  
Macromedia, Flash, Macromedia Flash and Macromedia Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.




macromedia  
**FLASH  
ENABLED**

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Powered by Mascot Capsule®/Micro3D Edition™  
Mascot Capsule is a registered trademark of HI Corporation  
© 2002-2006 HI Corporation. All rights reserved.

Chaku-Uta and Chaku-Uta Full are registered trademarks of Sony Music Entertainment (Japan) Inc.

FeliCa is a contactless IC card technology developed by Sony Corporation.  
FeliCa is a trademark of Sony Corporation.  
 is a trademark of FeliCa Network, Inc.

ComicSurfing is a trademark or registered trademark of CELSYS, Inc.

Vodafone, Vodafone live!, the speech mark symbol and My Vodafone are trademarks or registered trademarks of Vodafone Group Plc.

Video Call, V-application, Custom Screen, Sky Mail, Movie Sha-mail, Sha-mail, 3D Pictogram, Input Memory, Near chat and Multi Job are trademarks or registered trademarks of Vodafone K.K.

Cycloid is a registered trademark of SHARP Corporation.

CP8 PATENT

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 905SH is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

# Specific Absorption Rate (SAR)

## 905SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg\*.

This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

The highest SAR value for 905SH is 0.69 W/kg. Tests for SAR are conducted with handset transmitting at its highest certified power level, and follow the testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications (Protection from Radio Wave Environment)

<http://www.tele.soumu.go.jp/e/ele/index.htm>

Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/index02.html> (Japanese only)

---

\*Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

## ***Getting Started***



**Data Folder**

Access handset image and sound files from here; files are organised by file type.

**P.10-2**

**Memory Card**

Save files to Memory Card to expand handset memory or backup your handset files.

**P.10-18**

**Display**

Change Wallpaper, System Graphics, Fonts, et cetera to customise handset interface.

**P.11-3**

**Custom Screen**

Load uni-themed Wallpaper, Indicators, Ringtones, and more, all at the same time.

**P.11-5**

**Display Language**

Change Phone Settings to make handset user interface appear in either English or Japanese.

**P.11-5**

**Video Output**

View previously saved handset still/video images on an external display or send real-time images.

**P.11-9**

**Bluetooth® & Infrared**

Wirelessly exchange handset files with compatible devices. Use Bluetooth® headsets, etc.

**P.12-2, P.12-9**

**Mass Storage**

Use a PC to directly access Memory Card content while card is inserted into handset.

**P.12-14**

**Calendar & Tasks**

Add events by date with time parameters; set Reminder, add stamps and set other options.

**P.13-2, P.13-8**

**Voice Recorder**

Save voice memos on handset or Memory Card; send via MMS or use as Ringtone.

**P.13-17**

**Barcodes & Text Scanner**

Scan UPC/QR Codes and text or create QR Codes from Phone Book entries, etc.

**P.13-19, P.13-23**

**Vodafone live! FeliCa**

Hold handset over compatible reader/writers to use e-money services, etc. all around Japan.

**P.19-2**

**Optional Services****Call Forwarding**

Automatically divert all or all unanswered incoming calls to another preset phone number.

**P.14-2**

**Voicemail**

Redirect all or unanswered calls to Voicemail; access messages from 905SH/touchtone landline.

**P.14-3**

**Missed Call Notification**

Receive records of calls missed while handset is off/out-of-range and Voicemail is active.

**P.14-5**

**Call Waiting**

Reduce missed calls! Answer incoming calls even while the handset is already engaged.

**P.14-5**

**Conference Call**

Switch between open lines or connect multiple lines at once for wireless teleconferencing.

**P.14-6**

**Call Barring**

Restrict all incoming/outgoing calls or apply restrictions by type of call/current location.

**P.14-7**

**Caller ID**

Set 905SH to show/hide your phone number for all outgoing calls or enter show/hide prefix.

 
**P.14-10**

# USIM Card

## General Information & Precautions

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including the handset number, and limited storage for Phone Book entries and SMS messages. USIM Card must be inserted to use this handset.

- Save contacts on USIM Card Phone Book (see **P.4-3**).
- Insert into compatible Vodafone handsets to access files.
- Do not apply excessive force to insert/remove USIM Card.
- Do not insert USIM Card into any other IC card device. Vodafone is not liable for resulting damages.
- Keep the USIM Card IC chip clean.
- Use a dry, soft cloth to clean the USIM Card.
- Do not attach labels to USIM Card. Malfunction may result.



**Note** ▶ Some downloaded files may be inaccessible after repairs, USIM Card replacement or handset upgrade/replacement.

### ■ If Handset is Dropped or Subjected to Shocks

905SH may not recognise USIM Card; **REFRESH** appears and handset returns to Standby. This is not a malfunction.

If **Insert USIM Card** appears or 905SH does not restart, clean and properly reinsert USIM Card then restart 905SH.


### Important

- USIM Card is the property of Vodafone.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to Vodafone upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Backup USIM Card files. Vodafone is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).

## Inserting & Removing USIM Card


- Follow the steps below after removing battery (see P.1-16).
- Do not force USIM Card into or out of handset; damage may result.
- Avoid touching USIM Card IC chip; doing so may hinder performance (see P.1-4).  
Avoid touching USIM Card terminals as well.

### Inserting

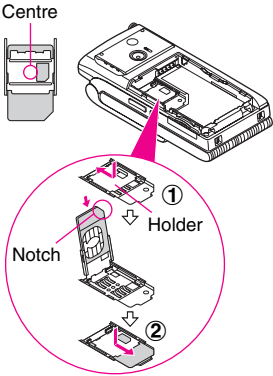- 1 Press down the centre of the holder to slide it as shown in ①, then lift it**
  - 2 Slide USIM Card into the holder (with IC chip facing inward) until it stops**
  - 3 Set down the holder, then press down its centre to slide it back in as shown in ②**
  - 4 Insert battery (Steps 3 - 4 "Inserting" on P.1-16)**
- 

### Removing

Take care not to lose removed USIM Card.

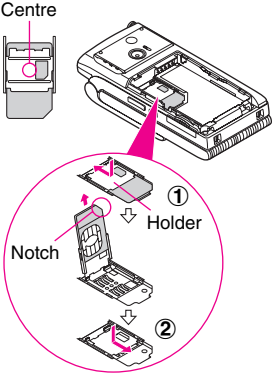- 1 Press down the centre of the holder to slide it as shown in ①, then lift it**
  - 2 Slide out USIM Card**
  - 3 Set down the holder, then press down its centre to slide it back in as shown in ②**
  - 4 Insert battery (Steps 3 - 4 "Inserting" on P.1-16)**
- 

## USIM PINs

There are two Security Codes for USIM Card: **PIN1** and **PIN2**.

### PIN1

A 4-digit to 8-digit Security Code to prevent unauthorised use of Vodafone handset.

- PIN1 is **9999** by default; change as needed (see **P.11-20** "Change PIN").
- Activate PIN Entry (see **P.11-20**) to require PIN1 entry each time handset (USIM Card inserted) is turned on.

### PIN2

Required to clear Call Costs or set Max Cost (see **P.2-15**). PIN2 is **9999** by default; change as needed (see **P.11-20** "Change PIN").

## PIN Lock & PUK Code


PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times consecutively. Cancel PIN Lock (see **P.11-20**) by entering the Personal Unblocking Key (PUK Code). For information on PUK Code, contact Vodafone Customer Centre, General Information (see **P.20-26**).

- Note** ▶
- If PUK Code is incorrectly entered ten times consecutively, USIM Card is locked and handset is disabled. Write down PUK Code.
  - For USIM Card unlocking procedures, call Vodafone Customer Centre, General Information (see **P.20-26**).
  - Emergency calls (110, etc.) are not possible when PIN Entry (see **P.11-20**) is active. For more, see **P.2-3** "Emergency Calls".



# Handset Parts & Functions

## Handset

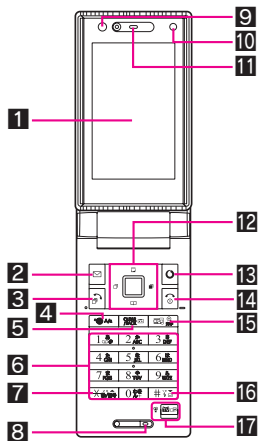**1 Display****2 Mail Key**


Open Messaging menu or execute Soft Key functions (see P.1-23).

**3 Start Key**

Initiate/answer calls. Open records of All Calls.

**4 Shortcuts & A/a Key**

Open Shortcuts menu. In text entry windows, toggle upper/lower case roman letters or standard/small hiragana/katakana.

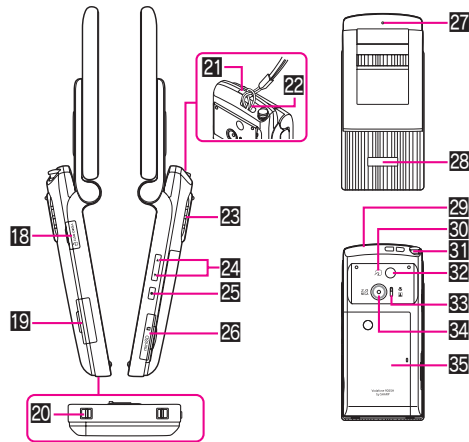**5 Clear/Back Key**

Delete entries, escape/return to previous window.

**6 Keypad****7 \* Key**

In text entry windows, toggle Symbol/Pictograph Lists.

**8 Microphone**

**Tip** ▶ Descriptions (P.1-7 - 1-9) are illustrative of general handset usage.


**9 Internal Camera**

Use during Video Call.

**10 Light Sensor**

Detects ambient light level to adjust Display Brightness automatically (see **P.6-19**, **P.11-8**). Do not place labels or stickers.

**11 Earpiece****12 Multi Selector & Keypad Lock Key**

Select menu items, move cursor, scroll, etc. In Standby, press  for 1+ seconds to activate/cancel Keypad Lock.

**13 Vodafone Web Key**

Open Vodafone Web Main Menu or execute Soft Key functions (see **P.1-23**).

**14 Power On/Off Key**

Press and hold to turn handset power on/off.

**15 Multimedia/Text Key**

Start Media Player or toggle between character entry modes. In Standby, press for 1+ seconds to activate/cancel Large Font Mode.

**16 # Key**

In text entry windows, enter comma, full stop, line break, space, etc.

**17 TV/Multi Job/Manner Key**

Activate TV in Standby or toggle multiple active function windows (see **P.1-26**). Press for 1+ seconds to activate/cancel Manner mode.

**18 VIDEO OUT/Headphone/Optical Digital Line In Connector**

Connect Headphones (with built-in TV antenna), optional Video Cable, etc.

**19 External Device Connector**

Connect Charger here.

**20 Charger Terminal****21 Infrared Port**

Use for infrared data transmissions.

**22 Strap Eyelet**

Attach straps as shown.

**23 Speaker****24 Volume/Zoom Key**

Adjust volume while watching TV or zoom in/out while mobile camera is active.

**25 Record/Shutter Key**

Start/stop TV recording or capture images with mobile camera. In Standby, press for 1+ seconds to activate mobile camera (in portrait position) or Pen Light (in closed position).

**26 Memory Card Slot**

Insert Memory Card here.

**27 Small Light****28 External Display****29 Internal Antenna Location**

Handset transmits/receives signals via Internal Antenna for calls and Vodafone live! services.

**30  Logo**

Vodafone live! FeliCa contactless IC Card embedded (see **P.19-3**).

**31 Antenna**

Extend for TV/FM reception.


**32 Mobile Light**

Flashes for calls/new mail; use as strobe/Pen Light.

**33 Portrait () / Macro () Selector**

**34 External Camera (lens cover)****35 Battery Cover**

- Note** ▶
- Antenna (see **P.1-7 31**) is for TV and FM reception and does not affect voice quality.
- Internal Antenna (see P.1-7 29)**
- Do not cover or place stickers, etc. over the area containing Internal Antenna.
  - Voice quality varies with handset usage/location.
  - For better reception in Standby, close handset (closed position: see **P.1-11**).
  - Avoid attaching metallic straps. Antenna sensitivity will be affected.

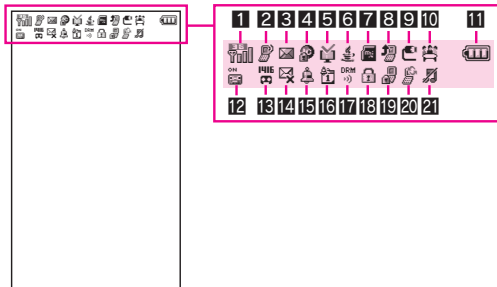**Display Indicators****Display****1 Signal Strength**

: Within Range

: Strong, : Moderate, : Low, : Weak

**out**: Out-of-Range

**2 Voice/Video Call, Offline Mode (see P.2-18)**

**Packet Transmission (see P.16-2), SSL (see P.16-3)**

: Incoming Voice Call, : Voice Call in Progress

: Video Call in Progress, : Offline Mode

: Packet Transmission Ready

: Packet Transmission in Progress

: SSL

**3 Mail (see P.15-3)**

: Unread Mail, : Unread Delivery Report

(red): Memory Low

: Receiving Mail, : Sending Mail

**4 IC Card Lock Active (see P.19-4)****5 TV Timer/TV Recording Timer Set (see P.6-16)****6 V-application (see P.17-5), Music Player (see P.9-10)**

**TV (see P.6-13), FM Radio (see P.7-4)**

: Active V-application, (grey): Paused V-application

: Music Player Active, : TV Recording in Progress

: FM Radio Active

**7 Memory Card Status, Auto Delivery Info**

**CAST Info (see P.18-2), Software Update (see P.20-9)**

: Inserted, : In Use, : Formatting, : Unusable

: Auto Delivery Info, : CAST Info

: Software Update, : Software Update Result

**8 Call Forwarding/Voicemail (see P.14-2)**

**Multi Job (see P.1-26)**

: Call Forwarding or Voicemail Active

Appears when **Always** (forwarding condition) is set for Voice Calls.

: Multiple Functions (Multi Job) Active

**9 External Transmission**

- : USB Transmission Ready
- : USB Transmission in Progress
- : Infrared Connection in Progress
- : Infrared Transmission in Progress
- : Bluetooth® Transmission Ready  
Appears in grey when Visibility is set to **Hide My Phone**.
- : Bluetooth® Transmission in Progress
- : Bluetooth® Talk in Progress

**10 Mode (see P.11-2), Loudspeaker (see P.2-11)****Microphone Mute (see P.2-11)**

- : Meeting, : Activity, : Car, : Headset, : Manner
- : Loudspeaker Active, : Microphone Muted
- : Loudspeaker Active & Microphone Muted

**11 Battery Strength (see P.1-15)**

Indicator may appear vertically (e.g. ).

**12 Answer Phone (see P.2-9)**

- : Answer Phone Active
- : Answer Phone Active & Message Recorded
- : Answer Phone Cancelled & Message Recorded

**13 New Voicemail (see P.14-4)****14 Message Delivery Failure (see P.15-9)****15 Alarm Set (see P.13-11)**

- : Reminder Set, : Reminder Unset

**17 Copyright Information**

- : Content Key Received

When Content Key memory is low, (below 10 %) or (below 5 %) appears.

**18 Secret Mode Active (see P.11-21)****19 Function Lock (see P.11-21), Keypad Lock (see P.11-21)**

- : Function Lock active, : Keypad Lock active

**20 Infrared Transmission Ready****21 Ringtone (see P.11-11), Vibration (see P.11-12)**

- : Silent, : Increasing Volume, : Vibration Active
- : Silent & Vibration Active

**External Display**

See major External Display indicators below.

**1 : Battery Strength**

: IC Card Lock Active

**2 Time****3 : Signal Strength****Additional Indicators**

Indicator and number of calls/messages, etc. appear for missed calls, new mail/information, etc.


<b>Missed Calls</b>		<b>Alarm</b>	
<b>Answer Phone Message</b>		<b>Schedule Reminder</b>	
<b>New Messages</b>		<b>Task Reminder</b>	
<b>New Delivery Report</b>		<b>Auto Delivery Info</b>	
<b>Message Delivery Failure</b>		<b>Bluetooth® Notification</b>	
<b>CAST Info</b>		<b>CAST Reception Failure</b>	
<b>Content Key</b>		<b>TV Alarm (Record)</b>	
<b>TV Alarm (Watch)</b>			

Up to two indicators appear at the same time. Press or to view more.

## Display Positions


### ■ Closed Position

Handset is closed. Keep handset in this position when not in use.

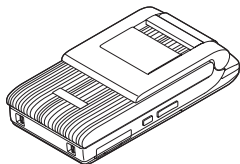


### ■ Portrait Position

Handset is open. Place or answer calls, enter text, etc.

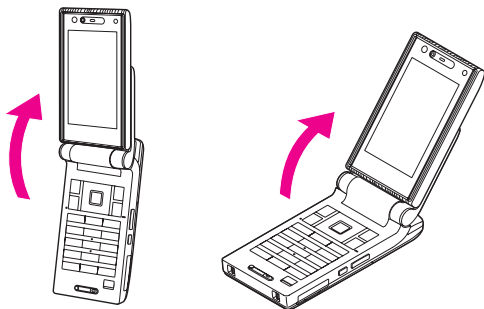

### ■ Cycloid Position

Open 905SH and rotate Display 90 degrees clockwise to use the following functions in wide view: Digital TV, Analogue TV, TV Player, mobile camera, Video Camera, Video Player, Video Call and compatible V-applications.

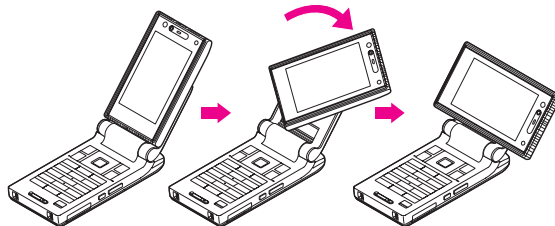

- Note** ▶
- Do not carry 905SH with Display in Cycloid position. Display may be damaged.
  - Do not forcefully rotate Display; damage may result.
  - In Cycloid position, use Loudspeaker or Headphones for conversations. (Use Earpiece in portrait position.)

- Tip** ▶ Rotating Display into Cycloid position while 905SH is in Standby automatically activates TV. To change this setting, see P.6-21 "Activate TV".

# Battery & Charger

## Getting Started

Charge battery before first use/after period of disuse.

### Battery Life

- Do not use/store battery at extreme temperatures; this may shorten battery life.  
Ideally, use/store between 5°C - 35°C.
- Use specified Charger only; others may damage handset/ battery or overheat or ignite battery.
- Replace battery if operating time shortens noticeably.

### Charging


- Do not use Charger for other purposes.
- Contact with metal may short, overheat or burst battery.
- Small Light illuminates red while charging. (It may take longer for the light to illuminate when handset is off.)
- Charging takes approximately 140 - 145 minutes (with handset off).
  - **Charging time may vary by ambient temperature.**

- 905SH and Charger may warm during charging.
- Separate Charger from TV/radio if interference occurs.

### Precautions

- Clean device charging terminals with a dry cotton swab.
- Avoid:
  - Extreme temperatures
  - Humidity, dust and vibration
  - Direct sunlight
- Charge battery at least once every six months; an uncharged battery may become unusable.
- Use a case when carrying battery separately.

#### Tip ►

- Battery must be inside handset to charge it.
- While charging battery with handset on,  flashes until battery is fully charged.
- Battery will charge regardless of handset position.

## Estimated Hours of Use (fully charged battery)

<b>Continuous Talk Time</b>	3 hours
<b>Continuous Standby Time</b>	360 hours
<b>Continuous Operating Time</b>	5.5 hours
<b>Continuous Playback Time</b>	13 hours
<b>Continuous Video Call Time</b>	90 minutes (with Internal Camera in use) 70 minutes (with External Camera in use)
<b>Continuous TV Reception Time</b>	4 hours (Digital)/1.5 hours (Analogue)
<b>Continuous TV Recording Time</b>	3 hours (Digital)/1 hour (Analogue)

Values calculated with Backlight Brightness set to **Auto**.

- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals. Continuous Talk Time may be less than half this value if handset is out-of-range or signal is weak.
- Continuous Standby Time is an average measured with a new, fully charged battery, in closed position without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if handset is out-of-range or signal is weak. Standby Time may vary by environment (battery status, temperature, etc.).
- Continuous Operating Time is the length of time handset keys can be pressed continuously without calls.
- Continuous Playback Time is measured while music plays (Tone Control set to **Normal**) using Headphones, Offline Mode cancelled, and in closed position.
- Continuous TV Reception Time is measured while watching TV (Adjust Brightness set to **Level 2**) using Headphones.
- The above values (Battery Time) are nominal values, measured under stable signal conditions.

## Battery Time

Using handset in poor conditions may shorten Battery Time:


- **Poor Usage Conditions**
  - Extreme temperatures (use within a range of 5°C to 35°C)
  - Impaired handset, battery or Charger terminals
  - Signal is weak/handset is out-of-range
- **Power Consuming Operations**
  - TV or FM is active
  - Recording/playing TV programs
  - Activating/using V-applications
  - Repeated mobile camera use or barcode scanning
  - Frequent use of Mobile Light
  - Playing video images
  - Frequent use of Pen Light
  - Continuous Keypad use (keeping backlights on for long periods)
  - Using Music Player/Voice Recorder
  - Frequent Bluetooth® transmissions
  - Frequent infrared transfers
  - Frequent opening/closing of handset
- **Power Consuming Settings**
  - Increasing Backlight Time Out/Display Saving time
  - Setting Backlight to illuminate brighter
  - Using 905SH in good light with Backlight set to **Auto**
  - Activating Bluetooth® in Standby

## Extend Battery Time

Select shorter Display Saving/Backlight time (see P.11-8) to extend Battery Time.

## When Battery Runs Out

A message appears and short beeps sound.

Press  to stop short beeps. (Short beeps do not sound in Manner mode.)

## During Voice Call

A double beep sounds every five seconds. After 20 seconds, the call ends and handset shuts down.


## During Video Call

A message appears and call ends with a double beep, then short beeps sound. Handset shuts down after 20 seconds.

## Battery Disposal

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take exhausted battery to a Vodafone shop, or follow the local disposal regulations.

## Battery Strength

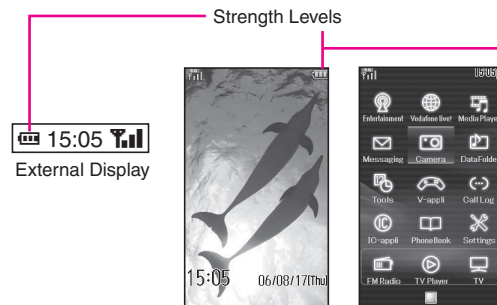


When battery runs out, **Battery low. Please connect to charger!** appears and short beeps sound. Handset shuts down after 20 seconds.



## Indicator

Battery Strength indicator varies as shown.

Charge or replace when level is low.

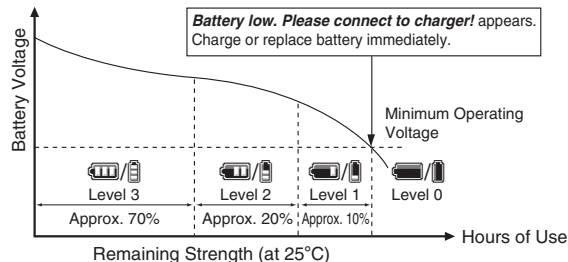

## Battery Strength & Environment

At low temperatures, battery is consumed faster.

At high temperatures, battery lasts longer.

- Note** ▶
- Battery Strength indicator is for reference only.
  - At Level 1, some functions including TV, Video Camera, Music Player and Voice Recorder do not operate (see P.6-9, P.6-13, P.6-15, P.8-9, P.9-9, P.13-17).

## Small Light & Battery Strength Indicator

### Handset Power On

Small Light	Indicator (🔋 / 📶)	Conditions
Off	Flashes	Ambient temperature is outside the range of 5°C to 35°C
Flashes red	Flashes	Battery life has ended, or battery defect
Illuminates red	Flashes	Charging
Off	On	Charging completed/ Standby


### Handset Power Off

Small Light	Indicator (🔋 / 📶)	Conditions
Flashes red	Off	Battery life has ended, or battery defect
Illuminates red	Off	Charging
Off	Off	Charging completed


## Installing & Removing Battery

### Inserting

- 1 Press down and slide cover as shown**

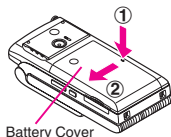


- 2 Lift and remove cover as shown**

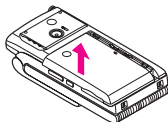


- 3 Insert battery**

- With printed side up, fit tabs into battery cavity slots.

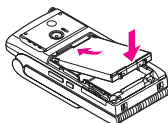

- 4 Close cover**


- Position and slide the cover as shown until it stops.

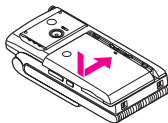


### Removing

- Turn handset power off before removing battery.
- Do not remove battery immediately after saving files, sending messages, etc.

- 1 Press down and slide cover as shown**

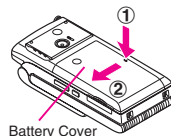


- 2 Lift and remove cover as shown**

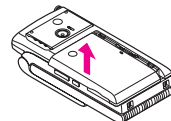

- 3 Remove battery**


- Take hold of Battery Tab here and lift as shown.

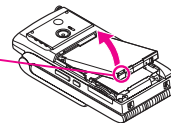

**Tip ▶ This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.**

- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown to the right.
- To avoid fire or electric shock, do not:
  - Short-circuit battery
  - Disassemble battery




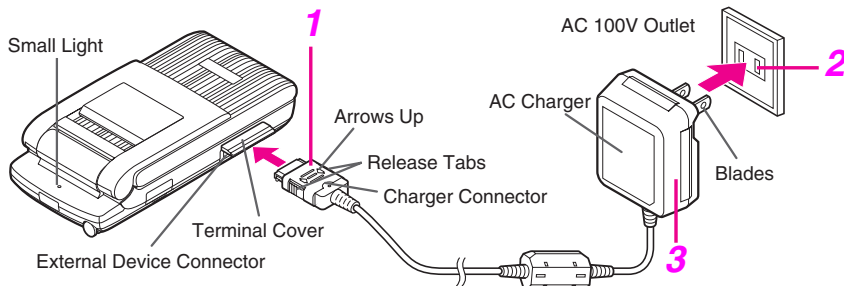

## Use specified Charger only.


### 1 Open Terminal Cover to connect Charger

- Insert connector until it clicks.
- Use slot to gently pull Terminal Cover down and out as shown.

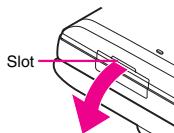

### 2 Plug Charger into AC outlet

 - Charging starts and Small Light illuminates red (see P.1-15). Charging takes approximately 140 minutes.
- Charging is complete when Small Light goes out.
- Extend Charger blades. (Fold back when not in use.)



### 3 After Charging

#### Unplug Charger from AC outlet, then 905SH


- Squeeze release tabs to remove connector.
- Replace Terminal Cover to protect External Device Connector.

#### Note

- Do not pull, bend or twist AC Charger cord.
- AC Charger is compatible with household currents between AC 100V and 240V.

## Desktop Holder

Desktop Holder may be purchased separately.

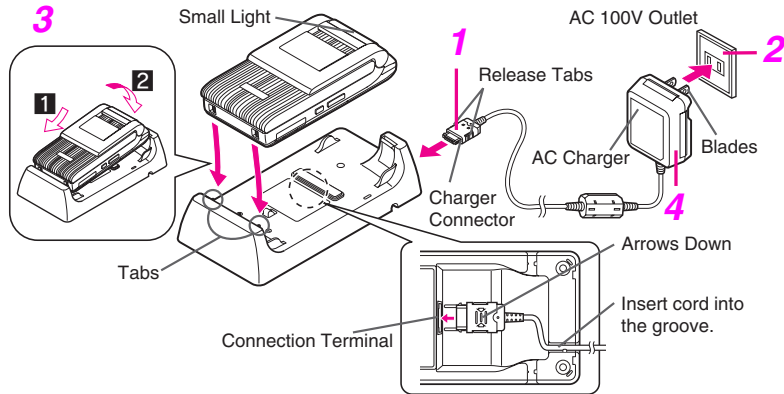


**Use specified Charger only.**

### 1 Plug Charger connector into Desktop Holder until it clicks

- Connection Terminal is on the back of Desktop Holder.

### 2 Plug Charger into AC outlet

 - Extend Charger blades. (Fold back when not in use.)



### 3 Gently insert handset into Desktop Holder

- Fit tabs into slots as shown in **1** and push handset as indicated in **2** until it clicks into place (resting flat).
- Charging starts and Small Light illuminates red (see P.1-15). Charging takes approximately 140 minutes.
- Charging is complete when Small Light goes out.


### 4 After Charging

#### Unplug Charger from outlet and remove handset

- To remove connector, squeeze release tabs.

## In-Car Charger

In-Car Charger may be purchased separately.

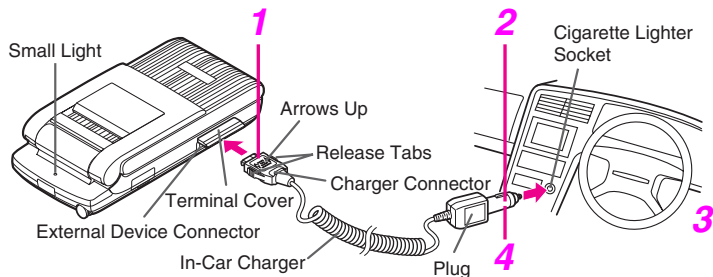

### 1 Open Terminal Cover to connect Charger

- Insert connector until it clicks.

### 2 Plug Charger into cigarette lighter socket

### 3 Start car engine

- Charging starts and Small Light illuminates red (see P.1-15). Charging takes approximately 145 minutes.
- Charging is complete when Small Light goes out.

- Tip** ►
- For more information, see In-Car Charger manual.
  - Use optional In-Car Holder to secure handset.


### 4 After Charging

#### Unplug Charger from cigarette lighter socket, then 905SH

- Squeeze release tabs to remove connector.
- Replace Terminal Cover to protect External Device Connector.

- Note** ►
- Use In-Car Charger only when vehicle has a negative earth.
  - Disconnect Charger before leaving vehicle to prevent charging with engine off.
  - Do not use In-Car Charger with Desktop Holder.
  - Avoid charging battery inside extremely hot vehicles.
  - Never use handset while driving.

# Handset Power On/Off

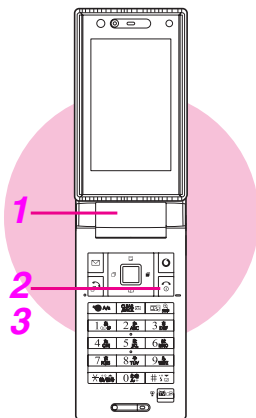

Standby

## 1 Open handset

## 2 Press and hold

After Power On Graphic, handset enters Standby.

## 3 Turning Off

### Press for 2+ seconds

After Power Off Graphic, handset shuts down.

#### My Details Setup & Network Information

■ When handset is turned on for the first time, setup confirmation appears after Power On Graphic.

Press **Yes** → Enter last name → Press → Enter first name → Press

■ Handset initiates Network information retrieval when , or is pressed for the first time; press **Yes**.

- Retrieve Network information to use Vodafone live! services, TV and TV Player. (Clock is set automatically after retrieval.)
- To update Network information manually, see **P.12-14** "Retrieve NW Info".
- Unless otherwise noted, operations in this manual are described with Clock set.


#### Return to Standby

■ Press to return to Standby from function windows, menus, etc.

- When a confirmation appears, press **Yes**. Handset returns to Standby.

- Note** ▶
- USIM Card data is read after turning power on. Signal strength indicator may take some time to appear. It may take longer when turning power on for the first time.
  - **Insert USIM Card** appears when USIM Card is not inserted (see **P.1-4**).

**Tip** ▶ Display turns off after a period of inactivity.

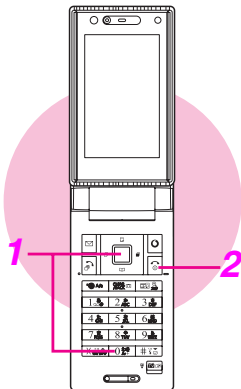

## My Details

**1** Press

Handset phone number appears.

- To add, edit or delete My Details, see **P.4-18**.

**2** Press to exit

## Keypad Lock

Use Keypad Lock to lock handset keys and prevent accidental operation/function activation.

### Activating

**1** Press for 1+ seconds

appears and Keypad Lock is set.

### Cancelling


**1** Press for 1+ seconds

 
disappears.

**Note** ▶ Emergency calls (110, etc.) are possible even when Keypad Lock is active. For more, see **P.2-3** "Emergency Calls".

### Tip ▶ When Keypad Lock is Active

- Incoming calls temporarily cancel Keypad Lock. To answer a call, press . [Activate Any Key Answer (see **P.11-2**) to answer calls with other keys (see **P.2-6**).] Keypad Lock reactivates after the call.
- Handset power does not turn off even if is pressed for 2+ seconds.

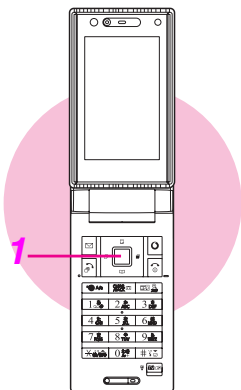


1  
2

## Large Font Mode

- 1** In Standby, press  for 1+ seconds

Font size is set as follows.

Menu	Large
Editor	Huge
Messaging	Huge
Browser	Huge

- 2** To cancel, press  for 1+ seconds in Standby

Font Size settings, except those changed in Large Font Mode, return to previous state.




**Tip** ▶ Large Font Mode is cancelled if font size is changed for all the items.

## Pen Light

Use handset as a flashlight in closed position.

 
- 1** Press  for 1+ seconds

Mobile light illuminates.

-  To change illumination colour, press  or  while on.


- 2** Press  to turn off

**Note** ▶ Do not point Pen Light at people or look at it directly.

1  
2



# Handset Menus

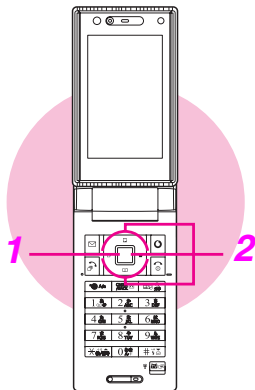

Main Menu

## Main Menu

Access functions/operations from **Main Menu**.

- 1** Press Main Menu opens.
- 2** Use to select an item and press Sub Menu opens (see P.20-2 - 20-3).

### Soft Keys

■ Soft Key functions appear at the bottom of Display.

MS Size 1898

ueda mikio

Good morning!

Good morning! I'm glad the weather is nice today. We'll be meeting Miss Kawahashi at the usual place by the cafe. We don't know the time yet. lol let y...

Options Edit Send


Press to select or execute the assigned function or operation.

Press to select or execute the assigned function or operation.

Press to select or execute the assigned function or operation.

## ■ Main Menu Items

<b>Entertainment</b>	Launch Vodafone live! CAST, Near chat or ComicSurfing
<b>Vodafone live!</b>	Access the Mobile Internet
<b>Media Player</b>	Record music or play/download music/video
<b>Messaging</b>	Open/create messages, etc.
<b>Camera</b>	Capture still images or record video
<b>Data Folder</b>	Open files saved on handset/ Memory Card
<b>Tools</b>	Use Calendar, Alarms, etc.
<b>V-appli</b>	Use/download V-applications
<b>Call Log</b>	Check Dialed Numbers, Received Calls, Call Costs, etc.
<b>IC-appli</b>	Use/download IC-appli
<b>Phone Book</b>	Search contacts, add entries, etc.
<b>Settings</b>	Customise handset interface, sounds, etc.
<b>FM Radio</b>	Listen to FM radio
<b>TV Player</b>	Play recorded programs
<b>TV</b>	Watch Digital/Analogue TV

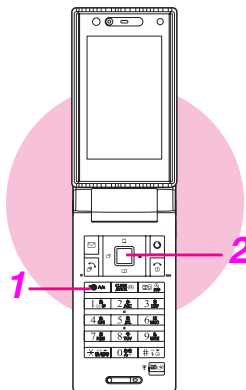

## User Shortcuts

### Using Shortcuts

Create shortcuts to functions and folders.


- Default Shortcuts:

- Main Menu, Enter Number, Received, Create New, Calculator, Alarms, Custom Screens, Near chat, Sounds & Alerts, Display, Bluetooth®, V-appli, IC-appli and Expenses Memo.

**1** Press

Shortcuts menu opens.

**2** Select a function and press

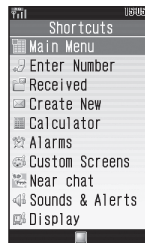

### Editing Shortcuts

Edit items except **Main Menu** and **Enter Number**.

#### Assign

Change default shortcuts

Press ➔ Select an item ➔ Press ➔ Options ➔ Select **Assign** ➔ Press ➔ Select new item ➔ Press **Assign**

#### Move

Change the order of items

Press ➔ Select an item ➔ Press ➔ Options ➔ Select **Move** ➔ Press ➔ Select target location with ➔ Press

#### Set to Default

Restore default shortcuts


Press ➔ Press ➔ Options ➔ Select **Set to Default** ➔ Press ➔ Press **Yes**

## Quick Operations

In Standby, enter numbers to access functions. Accessible functions vary by entered digits. To activate functions, press corresponding Soft Key.

Function \ Digits	1	2	3	4	5 - 6	7 - 12	13 - 32
Speed Dial (see P.4-14)	○ <sup>1</sup>	×	×	×	×	×	×
Calculator (see P.13-16)	○	○	○	○	○	○	×
Expenses Memo (see P.13-26)	○	○	○	○	○	×	×
Speed Mail (see P.15-25)	○ <sup>2</sup>	×	×	×	×	×	×
Calendar (see P.13-2)	×	×	×	○ <sup>3</sup>	×	×	×
Set Alarm (see P.13-11)	×	×	×	○ <sup>4</sup>	×	×	×
Place International Calls (see P.2-5)	×	×	×	×	○	○	○

<sup>1</sup>Except for 0 and 1.

<sup>2</sup>Press  Mail after entering a number. Save entries to Speed Mail List (see P.15-24) beforehand.



<sup>3</sup>Enter four digits for month and day and press  to view entries up to 12 months forward of current date.


<sup>4</sup>Enter four digits for time (24-hour format) to set Alarm.

### Example: Enter 1111 to use Calculator

**1** Press    

**2** Press 

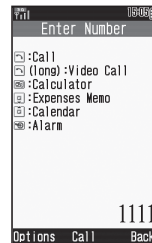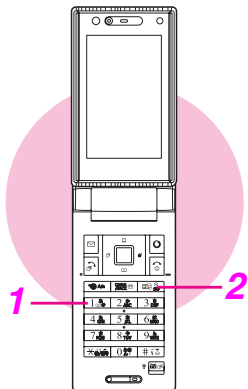

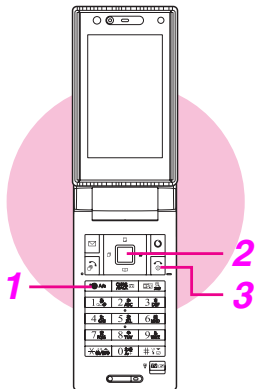


## Multi Job

Open a function window while another is active.

### 1 In a function window, press

Shortcuts menu opens.



- Some shortcuts are disabled.
- Multi Job cannot be activated from some windows/under some conditions (e.g. while watching TV in Cycloid position, when a V-application is active, etc.).
- In text/phone number entry windows, press

 for 1+ seconds.


### 2 Select a function and press



Menu/window opens ( appears).

- Two function windows may appear in TV window.



 Press  to toggle active windows. (Multiple windows may not be available from some windows/under some conditions.)

### 3 Press to exit

The other window appears ( disappears).

 When a confirmation appears, press  **Yes**.

## Handling Incoming Calls

 Press  to answer the call. End the call to return.

# Security Codes

Handset Code, Centre Access Code and Network Password are needed for handset use.

## Handset Code

**9999** or the 4-digit number selected at initial subscription; required to use/change some handset functions.

- ✗ appears when Handset Code is entered.
- If **Handset code is incorrect!** appears, re-enter code.
- Change Handset Code as needed (see **P.11-22**).

## Centre Access Code

The 4-digit number in the contract; required to access Voice-mail via landlines or subscribe to fee-based information.

Do not attempt to change Centre Access Code. Contact Vodafone Customer Centre, General Information (see **P.20-26**) for details.

- Note** ▶
- Write down Handset Code, Centre Access Code and Network Password. If lost, contact Vodafone Customer Centre, General Information (see **P.20-26**).
  - Do not reveal Handset Code, Centre Access Code and Network Password. Vodafone is not liable for misuse or damages.

## Network Password


The 4-digit number selected at initial subscription; required to restrict handset services (see **P.14-7**).

- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Centre Access Code must be changed. For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).
- Change Network Password as needed (see **P.14-9**).

## ***Basic Handset Operations***

# Initiating a Call


See **P.2-5** to initiate international calls from Japan and **P.5-3** for Video Calls.

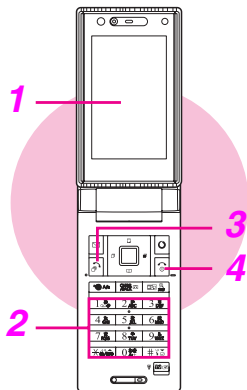

## 1 Confirm handset is on

- Check signal strength (see **P.1-9** ).
- Handset will not transmit when **out**, , , or appears (see **P.20-4 - 20-6**).

## 2 Enter a phone number

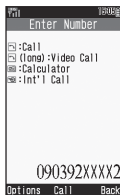

- Include dialing code for all numbers.
- To send/block Caller ID, enter a phone number and press **Options** → Select **Show My ID** or **Hide My ID** → Press

## 3 Confirm the number and press

### Correcting Numbers

- Use to move cursor and press to delete the digit above the cursor. Move cursor and press for 1+ seconds to delete the digits above and after the cursor.
- Before moving cursor, press for 1+ seconds to delete the entire number and return to Standby.
- If you misdial, press to hang up and try again.

### Busy Numbers

- Press to end the call and try again later.

## 4 Press to end call

- Alternatively, close handset.
- Calling Numbers Not Saved in Phone Book
  - **Would you like to save this number to your Phone Book?** appears after calls.
    - To save, press **Yes** → Perform Step 4 in "Saving from Call Log" on **P.4-8**
    - Press **No** to end without saving.
  - To hide this confirmation, see **P.4-4** "Confirmation for Unsaved Numbers".

- Note** ▶
- In Cycloid position, use Loudspeaker or Headphones (with built-in TV antenna) for conversations.
  - Use Earpiece (see **P.1-7 11**) in portrait position.
  - Do not cover handset microphone (see **P.1-7 8**) while talking on the phone.
  - Avoid covering area over Internal Antenna (see **P.1-7 28**).
  - Voice quality is affected depending on how and where handset is used.


- Tip** ▶
- Check Call Timers (see **P.2-14**) and Call Costs (see **P.2-15**).
  - For operations during a call, see **P.2-11 - 2-12**.

## Emergency Calls

Emergency calls (110, 119, 118, etc.) are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls	Active Restriction	Emergency Calls
Max Cost (see P.2-15)	Possible	Handset Lock (see P.11-20)	Possible
Offline Mode (see P.2-18)	Not Possible	PIN Entry (see P.1-6, P.11-20)	Not Possible
Function Lock (see P.11-21)	Possible	Outgoing Calls (see P.14-8)	Possible
Keypad Lock (see P.1-21)	Possible		



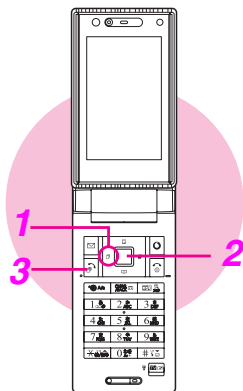

## Redial

Place calls from Dialed Numbers. Up to 30 recently dialed numbers are saved.

**1** Press ()



Dialed numbers appear with date and time.

 
- Name appears if saved in Phone Book.
- Press or to see more.
- Use to open Received Calls or All Calls.

**2** Select a record and press

**3** Press

905SH dials the number.


### Indicators



- Tip** ▶
- When the same number is dialed more than once, only the last record appears. (Records for Voice Calls and Video Calls appear separately.)
  - Records remain even after handset power is turned off.
  - When there are 30 records, oldest records are replaced by new ones. To delete records manually, see **P.2-13**.

## Placing an International Call

- When calling Vodafone handsets, country code is not required. (Calls cannot be placed when outside Japan as 905SH does not support international roaming.)
- Service requires an additional contract. For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).

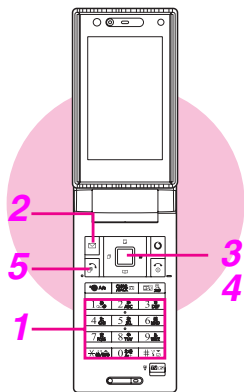

### 1 Enter a phone number

- Include dialling code for landline numbers.

#### Quick Operations

Enter a phone number ➔ Press ➔  
 Select a country ➔ Press ➔ Skip ahead to Step 5

#### Direct Entry

Press for 1+ seconds (+ appears) ➔  
 Enter a country code ➔ Enter a phone number including the dialling code ➔ Skip ahead to Step 5

- Omit the first 0 of the dialling code except when calling Italy (country code: 39) or Russia (country code: 7).

### 2 Press **Options**

### 3 Select *Int'l Call* and press

Country names appear.


### 4 Select a country and press

To call unlisted countries, select **Enter Code** ➔ Press ➔ Enter country code ➔ Press

### 5 Press

- Tip** ➔
- In Standby, press for 1+ seconds to enter + (a substitute symbol for international prefix). To change the default international prefix (**0046010**), see **P.11-23** "Int'l Prefix".
  - To save frequently used country codes, see **P.11-23** "Country Codes".

# Incoming Call

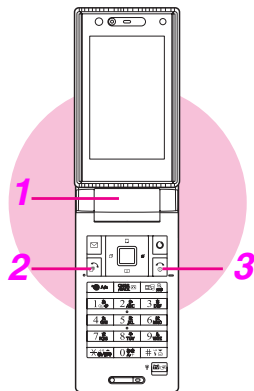

## 1 When a call arrives, open handset

 


- Number appears when Caller ID is sent.
- Name appears if saved in Phone Book.
- To reject an incoming call, press while handset is ringing/vibrating.
  - Standby returns; record appears in Received Calls.
- Answering a Video Call: see **P.5-3**

## 2 Press

When Any Key Answer (see **P.11-2**) is Active

- Press any of the following keys to answer calls:



## 3 Press to end call

- Alternatively, close handset.
- **Calls from Numbers Not Saved in Phone Book**
- **Would you like to save this number to your Phone Book?** appears after calls.
  - To save, press **Yes** ▶ Perform Step 4 in "Saving from Call Log" on **P.4-8**
  - Press **No** to end without saving.
- To hide this confirmation, see **P.4-4** "Confirmation for Unsaved Numbers".


- Tip** ▶
- When Caller ID is not sent, **Withheld** appears instead of the phone number.
  - Up to 30 received call records are saved (see **P.2-13**).
  - Use Quick Recorder (see **P.2-10**) to record caller messages on handset when Answer Phone is inactive.
  - Change Ringtone volumes/patterns, vibration patterns and Mobile Light colours (see **P.11-11 - 11-13**).
  - To answer calls while watching TV, see **P.6-5**.

### Answering Calls with Headphones

- Press Call Button for 1+ seconds to answer a call.
  - To end the call, press Call Button for 1+ seconds until a beep sounds.

## Redirecting a Call

### Call Forwarding: see P.14-2

Direct incoming calls to a specified number by pressing  **Fwd**.

### Voicemail: see P.14-3

Unanswered calls are forwarded to Voicemail Centre.

Activate Missed Call Notification (see **P.14-5**) for records of calls missed while 905SH is off/out-of-range.



### Answer Phone: see P.2-9


Record caller messages on handset.


Use Quick Recorder (see **P.2-10**) to record caller messages on handset when Answer Phone is inactive.


## Information

Information window opens for Missed Calls or Answer Phone messages.

- Select **Call** and press  to see details (see **P.2-13**).
- Select **Voice Message** and press  to play recorded messages (see **P.2-10**).

Information window opens for other items as well. Select an item and press  to jump to the corresponding window.

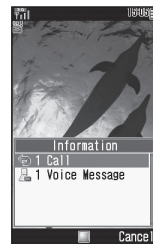

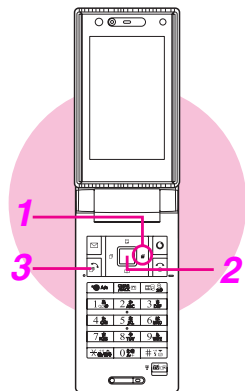

## Calling from Received Calls

Up to 30 received calls are saved. When Caller ID is sent, numbers appear. Place calls directly to those numbers.

**1** Press ()



Received numbers appear with date and time.

- Name appears if saved in Phone Book.
- Press or to see more.
- Use to open Dialed Numbers or All Calls.

**2** Select a record and press

**3** Press

905SH dials the number.

### Indicators

 
	Answered Voice Call		Answered Video Call
	Missed Voice Call		Missed Video Call
	Rejected Voice Call		Rejected Video Call
	Missed Call Notification		Forwarded to Voicemail Centre
	Answer Phone Answered		

- Tip** ▶
- Names in Secret Mode entries appear only in Secret Mode.
  - Records remain even after handset power is turned off.
  - When there are 30 records, oldest records are replaced by new ones. To delete records manually, see **P.2-13**.

# Answer Phone

Record caller messages on handset.

- Answer Phone cannot be used when handset is off, out-of-range or in Offline Mode. Use Voicemail to record caller messages when Answer Phone is not available (see **P.14-3**).
- Record up to 90 seconds or 20 messages between Answer Phone and Voice Memo (see **P.2-12**).
- Answer Phone is inactive by default.



## Activating & Cancelling

Main Menu ▶ Tools ▶ Answer Phone ▶ Settings

### 1 Select **Switch On/Off** and press

- To sample outgoing message, select **Guidance Message** ▶ Press
- Press to stop.

**Tip** ▶ Alternatively, press for 1+ seconds in Standby to activate/cancel Answer Phone.

- Note** ▶
- When less than 12 seconds remain or 20 messages are recorded, Answer Phone is disabled. Delete messages to activate Answer Phone.
  - Answer Phone is not available for incoming Video Calls.
  - In Manner mode, Manner settings take priority over (see **P.11-2 "Mode Settings"**).

### 2 Activating

#### 1 Choose **On** and press

- Press to return to Standby ( appears). ( appears when messages are recorded.)

### Cancelling

#### 1 Choose **Off** and press

## When Answer Phone is Active

- For incoming calls, outgoing message plays and recording starts.
  - Recording continues even if handset is closed.
  - To answer calls, press during recording (no message will be recorded).
  - When recording ends, appears.
- If recording capacity becomes full after the recording, Answer Phone is cancelled and appears.

## Playing Messages

Main Menu ▶ Tools ▶ Answer Phone

### 1 Select *Play Ans. Phone* and press

Number of recordings appears and playback starts from the most recent message. After all messages have played, playback ends automatically.

- Press to stop playback.
- To skip a message, press **Next** or .
- To play the previous message, press twice during playback.
- To delete a message, press **Delete** during playback ▶ Press **Yes**

- Tip** ▶
- Alternatively, press in Standby to play messages.
  - Message playback stops for incoming calls. Press to answer the call.

### Earpiece Volume

- Follow these steps to activate or mute Earpiece for outgoing message/caller message recordings.

Press ▶ Select *Tools* ▶ Press ▶ Select *Answer Phone* ▶ Press ▶ Select *Settings* ▶ Press ▶ Select *Volume* ▶ Press ▶ Select *Link to Profile or Silent* ▶ Press

- For *Link to Profile*, current Earpiece Volume applies.

### Answer Time

- Adjust ring time between 0 and 59 seconds (Answer Phone waits to answer calls).

Press ▶ Select *Tools* ▶ Press ▶ Select *Answer Phone* ▶ Press ▶ Select *Settings* ▶ Press ▶ Select *Answer Time* ▶ Press ▶ Enter time (00 - 59) ▶ Press

- To start recording immediately after a call arrives, enter **00** for time ▶ Press
- Answer Time is **09** seconds by default.
- When Answer Phone and Voicemail or Call Forwarding are both active, the function with the shortest ring time takes priority.

#### Example:

**Ring time for Answer Phone: 9 seconds**

**Ring time for Voicemail or Call Forwarding: 10 seconds**

In this example, Answer Phone responds first. (Priority may change depending on signal conditions.)


- If Answer Phone is full or handset is in Offline Mode or out-of-range, incoming calls are handled by Voicemail or Call Forwarding.

### Quick Recorder

- Use Quick Recorder to record caller messages on handset when Answer Phone is inactive. When a call arrives, follow these steps. Outgoing message plays and caller's message is recorded.

Press **Options** ▶ Select *Record Message* ▶ Press

# Engaged Call Operations

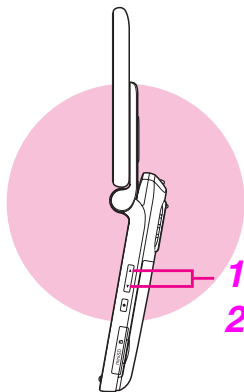

## Earpiece Volume

Adjust Earpiece Volume (5 levels).

- Volume level remains as set even after handset power is turned off.
- To adjust Earpiece Volume in Standby, see P.11-14.
- Earpiece Volume is **Level 3** by default.

**1** During a call, press ◀ or ▶

**2** Press ◀ (up) or ▶ (down) to adjust volume

## Voice Output

**Loudspeaker** Use Loudspeaker for handsfree conversations

During a call, press ■.

■ To cancel, press ■.

**Mute** Mute your handset microphone  
Other party's voice can be heard

During a call, press ◻ **Mute**.

■ To cancel, press ◻ **Unmute**.

**Hold** Hold tone sounds and each other's voice is not heard

■ Subscription to Call Waiting (see P.14-5) or Conference Call (see P.14-6) is required.

During a call, press ◻ **Options** ➔ **Select Hold** ➔ **Press** ■

■ To cancel, press ◻ **Options** ➔ **Select Retrieve** ➔ **Press** ■


■ Alternatively, press Ⓜ.

## Touch Tones

■ Use Touch Tones to send alphanumeric messages to pagers or operate a home answerphone remotely.

- Use 0 - 9, \* and # to send Touch Tones.



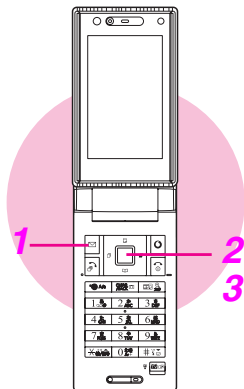

## Voice Memo

Record up to 90 seconds between Voice Memo and Answer Phone (see **P.2-9**).

**1** During a call, press **Options**

**2** Select **Record** and press

Recording starts.

**3** Press to stop

- Alternatively, end call to stop. (Recordings remain even after handset power is turned off.)

Play

Play Voice Memos

**Main Menu** ► *Tools* ► *Answer Phone*

Select **Play Ans. Phone** ► Press

 
For details, see **P.2-10** "Playing Messages".

## Other Engaged Call Operations

<b>Open Phone Book Entry</b>	Open Phone Book entries or check My Details Press <b>Options</b> ► Select <b>Phone Book List</b> ► Press  ► Select an entry (or My Details) ► Press
<b>Save Phone Book Entry</b>	Save the other party's number to Phone Book Press <b>Options</b> ► Select <b>Phone Book List</b> ► Press  ► Press <b>Options</b> ► Select <b>Add New Entry</b> ► Press  ► Perform from Step 2 on <b>P.4-4</b>
<b>Open Message</b>	Check received/sent/draft messages Press <b>Options</b> ► Select <b>Messaging</b> ► Press  ► Select an item ► Press
<b>Create Message</b>	Create a new message Press <b>Options</b> ► Select <b>Messaging</b> ► Press  ► Select <b>Create Message</b> ► Press  ► Perform from Step 3 on <b>P.15-7</b>
<b>Dial New Number</b>	Call another number Press <b>Options</b> ► Select <b>Dial New Number</b> ► Press  ► Enter a phone number ► Press
<b>Enable/Disable DTMF</b>	Select whether to send Touch Tones during a call Press <b>Options</b> ► Select <b>Disable DTMF</b> or <b>Enable DTMF</b> ► Press

**Tip** ► To switch sound output between handset and handsfree devices during a call, see **P.12-8** "Sound Output".

# Call Log



Open the following records:

All Calls	All dialled/received calls
Dialled Numbers	All dialled calls
Received Calls	All received calls

## 1 Press

All Calls opens.

Press to open others.

## 2 Select a record and press

Record details appear.

**Tip** ▶ Press to open All Calls during a call.

### Delete

Delete records one at a time

Press → Select a record → Press **Options** → Select *Delete* → Press → Press **Yes**

### Delete All

Delete all records

Press → Open *All Calls, Dialled Numbers or Received Calls* → Press **Options** → Select *Delete All* → Press → Press **Yes**

**Tip** ▶ To save phone numbers to Phone Book, see P.4-8 "Saving from Call Log".

## Using Call Log

### Call

Place calls

 
Press → Select a record → Press **Options** → Select *Call or Video Call* → Press To edit numbers before dialling, select a record and press **Options** → Select *Edit Before Call* → Press → Edit number → Press (Long Press for Video Calls)

### Create Message

Create messages

Press → Select a record → Press **Options** → Select *Create Message* → Press → Press → Perform from Step 5 on P.15-8

# Call Timers/Data Counter



## Call Timers

Check estimated time of the most recent call (Last Call Time) and all calls made since Clear Timers was last applied (All Calls Time).

- Times for Dialed Calls and Received Calls appear separately.
- To show elapsed Call Time during a call, see P.11-24 "Call Time Counter".

**Main Menu** ▶ Call Log ➔ Call Timers

- 1** Select **Dialed Calls** or **Received Calls** and press **[■]**
- 2** Press **[■]** to return to Call Timers menu
  - Press **[⏏]** to return to Standby.

**Tip** ▶

- Last Call Time and All Calls Time remain even after handset power is turned off.
- Ring time for incoming or outgoing calls is not counted. On hold time is counted.

**Clear Timers** Reset Call Timers

**Main Menu** ▶ Call Log ➔ Call Timers

Select **Clear Timers** ➔ Press **[■]** ➔ Enter Handset Code ➔ Press **[■]** ➔ Press **[⏏]** **Yes**

## Data Counter

Check estimated volume of the most recent or all packet transmissions (sent, received and total). Charges do not appear.

**Main Menu** ▶ Call Log ➔ Data Counter

- 1** Select **Last Data** or **All Data** and press **[■]**
- 2** Press **[■]** to return to Data Counter menu
  - Press **[⏏]** to return to Standby.

 
**Clear Counter** Reset Data Counter

**Main Menu** ▶ Call Log ➔ Data Counter

Select **Clear Counter** ➔ Press **[■]** ➔ Press **[⏏]** **Yes**

# Call Costs

Check estimated call charge of the most recent call or all calls. To show Call Cost automatically after each call, see P.11-24 "Display Call Cost".



**Main Menu** ▶ Call Log ▶ Call Costs

**1** Select **Last Call** or **All Calls** and press **[OK]**

**2** Press **[OK]** to return to Call Costs menu  
• Press **[End Call]** to return to Standby.

**Tip** ▶  
• Call Costs remain even after handset power is turned off.  
• Sum of charges appears for Conference Call (Optional Service).

**Clear Costs** Reset Call Costs

**Main Menu** ▶ Call Log ▶ Call Costs

Select **Clear Costs** ▶ Press **[OK]** ▶ Enter PIN2 ▶ Press **[OK]** ▶ Press **[OK]** **Yes**

**Cost Units** Set currency and conversion rate (per yen) to show converted amount in Call Costs

Default YEN 1

**Main Menu** ▶ Call Log ▶ Call Costs ▶ Cost Units

Select **Set Units** ▶ Press **[OK]** ▶ Enter PIN2 ▶ Press **[OK]** ▶ Enter currency ▶ Press **[OK]** ▶ Enter conversion rate ▶ Press **[OK]** ▶ Press **[OK]**

▶ To check current cost unit, select **Read Units** ▶ Press **[OK]**

## Limit Call Costs

**Max Cost** Set a limit of total call charges  
When the limit is reached, outgoing calls are blocked

**Main Menu** ▶ Call Log ▶ Call Costs

Select **Max Cost** ▶ Press **[OK]** ▶ Select **Set Limit** ▶ Press **[OK]** ▶ Enter PIN2 ▶ Press **[OK]** ▶ Enter the amount ▶ Press **[OK]**

▶ To check the set limit, select **Max Cost** ▶ Press **[OK]** ▶ Select **Read Limit** ▶ Press **[OK]**

▶ To check the remaining amount, select **Residual Credit** ▶ Press **[OK]**

**Note** ▶ Emergency calls (110, etc.) are possible even when the limit is reached. For more, see P.2-3 "Emergency Calls".

# Manner Mode

## Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theatres, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, lifts, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner-Related Features

### ■ Manner Mode: see P.2-17

Press Manner Key to automatically mute all Ringtones and activate Vibration mode for incoming calls, mail, etc.

### ■ Vibration Mode: see P.11-12

Activate Vibration mode to use handset vibration to alert you to incoming calls, mail, etc. in public places.

### ■ Volume Settings: see P.11-11

Decrease or mute Ringtone volume for incoming calls, mail, etc. as well as tones for Web or V-applications when carrying handset in public places.

### ■ Offline Mode: see P.2-18

 
Use Offline Mode to temporarily suspend all handset transmissions. In Offline Mode, incoming/outgoing calls and Vodafone live! transmissions are blocked.

### ■ Answer Phone: see P.2-9

Use Answer Phone to handle incoming calls when it is inappropriate or unsafe to answer.

## Activating & Cancelling




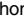
Activate/cancel Manner mode in Standby, while browsing the Mobile Internet or while using Media Player, TV, FM Radio or V-applications.



### Activating

#### 1 Press for 1+ seconds

 appears and Manner mode is set.

-  (Answer Phone),  (Vibration),  (Silent) and  (Increasing Volume) appear as set in Manner settings (see P.11-2 "Mode Settings").

### Cancelling


#### 1 Press for 1+ seconds

 disappears and Manner mode is cancelled.

#### When Manner Mode is Active

- Keypad Tones, Power On/Off and error tones are muted. Beeps for Switch Line (see P.14-6) are heard.
  - Even in Manner mode, Ringtone can be heard through Headphones. Volume is fixed to **Level 1**.
- Shutter click and Self-timer tone sound even in Manner mode.
- Settings for Manner mode (see P.11-2 "Mode Settings") are applied to Answer Phone, Ringtones, Vibration, Mobile Light, etc.

- Tip** ▶
- When Answer Phone is recording messages, the other party's voice is heard through Earpiece.
  - To change Manner settings, see P.11-2 "Mode Settings".

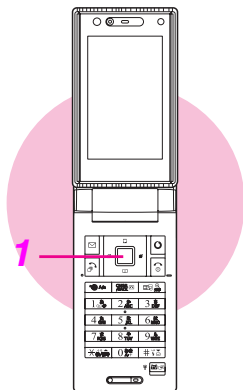

## Activating/Canceling Offline Mode

Use Offline Mode to temporarily suspend all handset transmissions.

- In Offline Mode, incoming/outgoing calls and Vodafone live! transmissions are blocked.
- Offline Mode is **Off** by default.

### Activating

Main Menu ► Settings ► Network Settings  
 (F5) ► Offline Mode

**1** Choose **On** and press

appears and Offline Mode is set.

### Canceling

Main Menu ► Settings ► Network Settings  
 (F5) ► Offline Mode

**1** Choose **Off** and press

disappears and Offline Mode is cancelled.

- Tip** ►
- When Offline Mode is set while a V-application (see P.17-2) is paused, confirmation appears. Press  **Yes** to enter Offline Mode. (Network connection is disabled until Offline Mode is cancelled.)
  - Emergency calls (110, etc.) are not possible in Offline Mode. For more, see P.2-3.


## *Entering Characters*




# Character Selection

Use Kana and Pager (see **P.3-8**) to enter alphanumerics, Symbols, hiragana, kanji, katakana and Pictographs. Unless otherwise noted, text entry operations are described for use in text entry windows using Kana Mode.

## Entry Modes

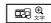
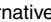
Press  to toggle between character entry modes as follows:

a → 1 → 区 → 漢 → ア → ア → a → a

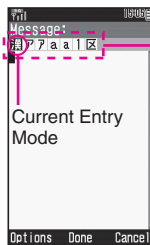




### Available Modes

漢	Kanji (hiragana)
ア	Double-byte katakana
ア	Single-byte katakana
A	Double-byte alphanumerics (upper/lower case)
a	Double-byte alphanumerics (lower case)
A	Single-byte alphanumerics (upper/lower case)
a	Single-byte alphanumerics (lower case)
1	Single-byte number
区	Character Code

- Alternatively, use  to toggle between entry modes after pressing  once.
- A and A appear in upper/lower case mode (see right).

## Upper & Lower Case

- In double or single-byte alphanumerics mode, press  to toggle between upper/lower case and lower case modes. In Pager Mode (see **P.3-8**), while selecting double or single-byte entry mode, press  to toggle upper and lower case.

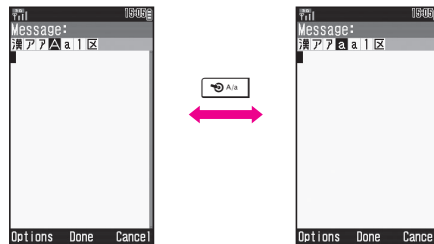

Double-byte Alphanumerics (Upper/Lower Case)

Double-byte Alphanumerics (Lower Case)

- Tip** ▶
- Handset Character Codes correspond to 6,355 kanji.
  - Some characters are not available for mail addresses, etc.



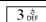

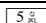
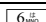
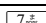
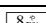
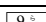
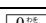
 
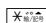
## Key Assignments


Multiple characters are assigned to each key. Press a key to toggle between character options for that key.

**Example: In katakana entry, press  three times for ウ.**

When entering characters, press  to toggle options in reverse. (Not available for single-byte numbers or Character Codes.)

**Example: Enter 1, then press  to return to あ.**

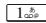Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	あいうえおあいうえお	アイウエオアイウエオ	@/_-1	1	1
	かきくけこ	カキクケコ	ABCabc2	2	2
	さしすせそ	サシスセソ	DEFdef3	3	3
	たちつてとっ	タチツテトツ	GHIghi4	4	4
	なにぬねの	ナニヌネノ	JKLjkI5	5	5
	はひふへほ	ハヒフヘホ	MNOmno6	6	6
	まみむめも	マミムメモ	PQRSpqrs7	7	7
	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8	8
	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
	わをんー ・	ワヲンー ・	0	0 + <sup>1</sup>	0
	Log List, Pictograph List, Symbol List	Log List, Pictograph List, Symbol List <sup>3</sup>	Log List, Pictograph List, Symbol List <sup>3</sup>	* P (Pause) ? - <sup>4</sup> Log List, Single-byte Symbol List, Pictograph List	_____
	、 . ♯ (Line Break) ? ! □ (Space)		、 . ♯ (Line Break) ?! □ (Space)	#	_____

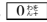











<sup>1</sup> Press  for 1+ seconds to enter + (available for phone number entry).

<sup>2</sup> - is available only in single-byte katakana entry.

<sup>3</sup> Double or single-byte according to the entry mode.



<sup>4</sup> P (Pause), ? and - are for phone number entry.

## Key Assignments (Continued)

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion (Up) <sup>5</sup>	Cursor Up			
	Conversion (Down) <sup>6</sup>	Cursor Down ↵ (Line Break)			
	Cursor Left				
	Cursor Right				
	Change Entry Mode				
	Toggle Case (for some characters)	Toggle Case + Toggle Mode (upper/lower and lower case)		_____	_____
 Press	Delete One Character, Cancel Conversion	Delete One Character			Delete Code/ One Character
 Long Press	Delete before or after cursor				
	Recover up to 64 deleted characters <sup>7</sup>				
	OK				
	Phonetic Conversion	_____			_____
	Hiragana to Katakana/ Alphanumerics Conversion	_____			_____

<sup>5</sup>Cursor moves up except during conversion.

<sup>6</sup>Cursor moves down except during conversion.

<sup>7</sup>Press  once for each character to recover immediately after deleting. (Not available after deleting text with  (Long Press).)

# Entering Characters

## Kanji, Hiragana & Katakana

Following the example below, enter **鈴木** to learn how to enter characters in kanji (hiragana) entry mode.

### 1 Press **3 DEF** three times

Word suggestions change as hiragana are entered.



### 2 Press **□**

- When the next character is on the same key, press **□** first.



### Katakana Entry

- Switch to double or single-byte katakana mode to enter katakana. Alternatively, enter hiragana and then select katakana from the word suggestion list.
- To convert hiragana to katakana/alphanumerics only, see **P.3-10** "Hiragana to Katakana/Alphanumerics Conversion".

### 3 Press **3 DEF** three times and press **✕ 無/12%**



### 4 Press **2 ABC** twice

- To enter unconverted hiragana, skip ahead to Step 6.



### 5 Press **↓** (convert) and use **↓** to select a word

- The most recent selection appears first in the list.

■ To see other suggestions, press **☐ Prev** or **☐ Next**.

■ To exit the list, press **CLEAR END**.

■ To change segment, see **P.3-6** "Segmenting Phrases".



### 6 Press **□**

### Predictive & Previous Usage

- Use these functions to convert hiragana to kanji more quickly.

Predictive	Word suggestions change as up to five hiragana are entered
Previous Usage	Suggests words/characters likely to follow entry based on previous entries

- Both functions are active by default (see P.3-12 "Optional Predictive Functions").
- To lower priority of particular types of words (names of people, places, etc.) in the word suggestion list, see P.3-12 "Set Low Priority".

 
### User Dictionary

- Save frequently used words/phrases to select from the word suggestion list (see P.11-16).

### Segmenting Phrases

If the word is not listed, press  after Step 5 on P.3-5 to exit. Use  to segment hiragana to convert separately.

**Example: Segment みち into み and ち.**



### Selecting Multiple Converted Words

Press .

**Example: To enter 西山大輔**




### Small Kana (っ, ツ, etc.)



Enter small hiragana あ, い, う, え, お, っ, や, め and よ as well as small katakana.




### Adding ° or °

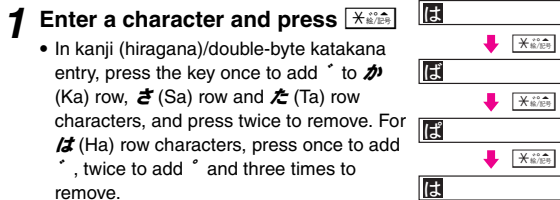

### Tip ▶ In Single-byte Katakana Entry

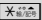- Press  once to add single-byte ° or twice for °°.
- Press  to remove ° or °°.



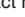
### Space

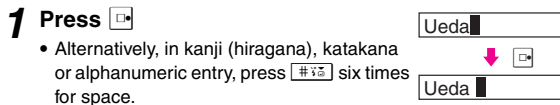

## Line Break

Insert line breaks in text, Text Templates, etc.

### 1 Press at the end of text

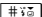

- To insert line breaks in text, press  until  appears. In kanji (hiragana) entry mode, then press .



## Entering Alphanumerics

Enter alphanumerics in double or single-byte alphanumerics mode. Alternatively, enter numbers in single-byte number mode.

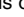

- When the next character is on the same key (example: entering **a** then **b**), press  first to move cursor.
- In double or single-byte alphanumerics mode, press  to toggle between upper/lower and lower case modes.
- To convert hiragana to katakana/alphanumerics only, see **P.3-10** "Hiragana to Katakana/Alphanumerics Conversion".

## Symbols, Pictographs & Emoticons

### Symbols & Pictographs




Pictographs do not appear in e-mail or on incompatible Vodafone handsets.

### 1 Press to open Log List (Log List is available in some entry modes; see P.3-3)

Recently used Symbols/Pictographs appear.

- appears by default or when Log List is deleted.


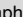
### 2 Use to select one and press

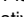- Repeat Step 2 to enter more.
- To see more lists, press ; toggles as follows: Symbol List(s) → Log List.
- To see Pictographs, press ; toggles as follows: Pictograph Lists → Log List.
  - Alternatively, press  repeatedly to scroll through Symbols or Pictographs.









### 3 Press a key ( - ) to exit list and enter the assigned character

- Alternatively, press  to exit list.

- Tip** ▶
- Double-byte Symbols appear only in double-byte entry modes. (All Pictographs are double-byte.)
  - Single-byte Symbols do not appear in Log List.
  - Alternatively, enter **きごう** and press  (convert). Some Symbols can be selected.
  - For available Pictographs, see **P.20-16**.
  - Enter a descriptive word such as **はーと** or **はな** and press  (convert). Corresponding Pictographs can be selected.

### Deleting Log List

- In a text entry window, press  **Options** → **Select Input/Conversion** → Press  → **Select Clear Symbols** → Press  → Press  **Yes**
  - To return to the text entry window, press  → Press 



## Emoticons

1 Press  **Options**

2 Select **Emoticons** and press 

Enter two digits (01 - 50) to jump to the emoticon assigned to the number.

3 Select an emoticon and press 

- Tip ▶
- For other emoticons, enter **かお** and press  (convert). Alternatively, enter a descriptive word such as **カーイ** or **うーん** and press  (convert). Corresponding emoticons can be selected.
  - Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the word suggestion list. To disable this function, see **P.3-12** "Optional Predictive Functions" (Pre-used Emoticon).

## Mail & Web Extensions

1 Press  **Options**

2 Select **Quick Address List** and press 

3 Select an extension and press 

- Mail addresses and URLs are single-byte.

## Character Code

1 In Character Code entry mode, enter four digits (see P.20-10)

## Pager Code



1 Press  **Options**

2 Select **Input/Conversion** and press 

3 Select **Input Method** and press 

4 Select **Pager Code** and press 


**Pager Code** \_\_ appears at the bottom.

 To switch to Kana Mode, select **Kana** ▶ Press 


5 Enter two digits (see P.3-9)

- Pager Mode is active until switched to Kana Mode.

### Character Entry Modes


■ For text entry in Pager Mode, press  to toggle between entry modes as follows:

Single-byte lower case ( P ) → Character Code ( 区 )  
→ Double-byte lower case ( P )

■ While selecting an entry mode, press  to toggle between upper and lower case modes.

- Tip ▶
- Hiragana to Katakana/Alphanumerics Conversion is disabled in Pager Mode.
  - To enter ' or ` , see Pager Code List on **P.3-9**.

## Pager Code List



- Blanks indicate no entry.
- Grey background indicates upper and lower case available. Press  to switch immediately after character entry.



### Double-byte upper case

		Second digit (Press next)									
		1	2	3	4	5	6	7	8	9	0
First digit (Press first)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&		☎	*1
	8	や	(	ゆ	)	よ	✖	#	Space	♥	*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん			6	7	8	9	0

### Double-byte lower case

		Second digit (Press next)									
		1	2	3	4	5	6	7	8	9	0
First digit (Press first)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0				,	.					

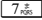\*1 Press   to insert line breaks (in mail message text, Text Templates, etc.).

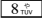\*2 Press   to toggle between upper and lower case.

- ♥ and ☎ are double-byte.

### Single-byte upper case

		Second digit (Press next)									
		1	2	3	4	5	6	7	8	9	0
First digit (Press first)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&		☎	*1
	8	ヤ	(	ユ	)	ヨ	✖	#	Space	♥	*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン			6	7	8	9	0

### Single-byte lower case

		Second digit (Press next)									
		1	2	3	4	5	6	7	8	9	0
First digit (Press first)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0				,	.					





## Quick Conversion (for Hiragana)

Quick Conversion helps reduce keystrokes needed to enter frequently used words.


A list of word suggestions appears based on the key pressed.




**Example: To enter 微妙**

Normal Conversion	6 <sup>ひ</sup> 6 <sup>め</sup> * <sup>めい</sup> (ひ) 7 <sup>め</sup> 7 <sup>め</sup> (め)
	8 <sup>ひ</sup> 8 <sup>め</sup> 8 <sup>め</sup> 8 <sup>め</sup> 8 <sup>め</sup> 8 <sup>め</sup> (よ)
	1 <sup>ひ</sup> 1 <sup>め</sup> 1 <sup>め</sup> (う) (convert)
Quick Conversion	6 <sup>ひ</sup> * <sup>めい</sup> (ば) 7 <sup>め</sup> (ま) 8 <sup>め</sup> (や) 1 <sup>め</sup> (あ) (convert)

### 1 Enter hiragana and press

Cursor turns green.

- While cursor is green, use  to segment entered hiragana and then convert one segment at a time.

 To cancel Quick Conversion, press  Press  for normal conversion

### 2 Use to select a word and press

**Note** ▶ Use Quick Conversion in kanji (hiragana) mode only.

**Tip** ▶ The most recent selection (mostly nouns) appears first.

## One Hiragana Predictive Entry

Enter hiragana and initiate Quick Conversion. Words starting with a hiragana in the same row (あいうえお for あ) appear. Word suggestions vary by time of day.

**Example: When あ is entered**

5:00 - 10:59	11:00 - 16:59	17:00 - 22:59	23:00 - 4:59
朝一番 朝帰り 行ってきます いってらっしゃい ...	あちい～ 後でね いただきま～す♪ 移動中 ...	遊ぼう 明日 急いで行くよ 今どこ? ...	アウチ!! ありがとう いえー!!! 行こうね ...

- Words in the list are preset by time blocks.
- If Clock is unset, only words for 11:00 - 16:59 are available.

## One Hiragana Word Call

Enter the first hiragana of entries you used Quick Conversion for. The most recent selection appears first.

**Example: You entered あたあさわ and selected お父さん last time.**



## Conversion Settings

**Optional Predictive Functions** Activate or cancel Predictive, Previous Usage or Pre-used Emoticon

Press  **Options** → **Select Input/Conversion** → Press  Default On (all)  
 → **Select Predictive, Previous Usage or Pre-used Emoticon** → Press  → **Choose On (activate) or Off** → Press

**Set Low Priority** Select types of words to lower their priorities in the word suggestion list

Press  **Options** → **Select Input/Conversion** → Press   
 → **Select Set Low Priority** → Press  → **Select an item**  
 → Press  → Press  **OK**

- To select multiple items, select and press  for each item before pressing  **OK**.

**Reset Learning** Clear log of words selected in kanji conversion, Predictive, etc.

Press  **Options** → **Select Input/Conversion** → Press   
 → **Select Reset Learning** → Press  → Press  **Yes**

- Words saved in User Dictionary remain.

## Editing Characters

### Deleting & Replacing

**1** Use  **+** to select a character and press  **CLEAR BACK (DS)**

- The highlighted character is deleted.

- Place cursor at the end of text and press  **CLEAR BACK (DS)** for 1+ seconds to delete all text. When cursor is located amidst a block of text, characters on and after cursor are deleted.



**2** Enter another character

### Copy/Cut & Paste



When **Options** appears, copy or cut and paste text into the same window or another.

**1** Press  **Options**

**2** Select **Copy** or **Cut** and press

### 3 Use to select the first character of text and press

Start point is set.



 To change the start point, press  **Quit**.

### 4 Select the end point and press

### 5 Open text paste target window

### 6 Press **Options**

### 7 Select *Paste* and press

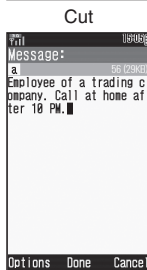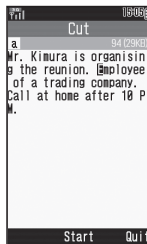

## Deleting Text On and After Cursor

### 1 Select the first character of text

### 2 Press **Options**

### 3 Select *Delete Posterior* and press

## Additional Functions

### Copying from Phone Book

Insert Phone Book entry items into text entry windows. Select from phone numbers, mail addresses, Category, postal address, Homepage, Note, and Birthday.

### 1 Press **Options**

- Move cursor to target location beforehand.


### 2 Select *Advanced* and press

### 3 Select *Phone Book* and press

### 4 Open a Phone Book entry or *My Details*

### 5 Use to select an item and press

Item is inserted following a comma and the entry name.

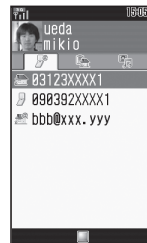

## Using Text Templates






Insert text saved in Text Templates (see P.10-17) into text entry windows.

- 1 Press  **Options**
- 2 Select *Text Templates* and press 
- 3 Select *Call Templates* and press 
- 4 Select text and press 

Text is inserted.

### Saving to Text Templates

- Follow these steps to save text in text entry windows to Text Templates.

Press  **Options** → Select *Text Templates* →  
Press  → Select *Save Templates* → Press  →  
Select the first character of text → Press  →  
Select the end point → Press 

- Enter up to 256 characters.

## Changing Font Size

- 1 Press  **Options**
- 2 Select *Advanced* and press 
- 3 Select *Font Size* and press 
- 4 Select a size and press 

Tip ► Setting applies to *Editor* Font Size in Display Font Settings (see P.11-4).


## *Phone Book*

# Overview


Save frequently used phone numbers and mail addresses to Phone Book.

- Entry names appear for calls from numbers saved in Phone Book.
- Set Ringtone/Ringvideo by caller/sender, sort entries into Categories, etc. See **P.4-3** for more about Phone Book entry items.


## ■ Dialling from Phone Book

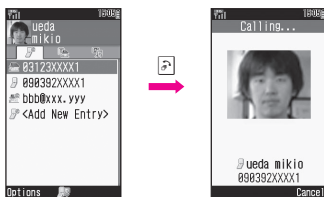

## ■ When a Call Arrives

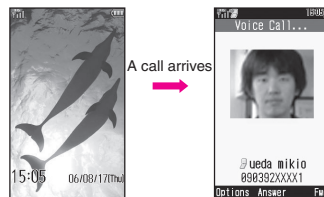

## ■ Sending SMS/MMS messages from Phone Book

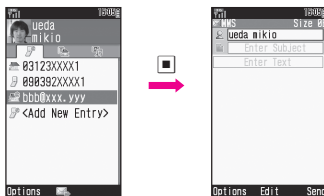

**Tip** ▶ Use Phone Book Lock (see **P.11-21**) to protect entries from accidental alteration and to restrict access to Phone Book information.

### Service Dial

■ Dial service dial numbers saved on compatible USIM Cards to use services.

**Press** **■** **▶ Select Phone Book** **▶ Press** **■** **▶ Select Service Dial No.** **▶ Press** **■** **▶ Select service** **▶ Press** **■**

- For details, contact the service providers.

### Note ▶ Back-up Important Information

When battery is exhausted/removed for long periods, Phone Book entries may be lost; handset damage may also affect handset information recovery. Vodafone is not liable for damages from lost/alterted data.

# Saving to Phone Book

## Phone Book Entry Items

Save up to 750 entries in 905SH Phone Book; USIM Card Phone Book entry limit varies according to card specifications.

Item	Description	Item	Description
<b>Last Name:</b>	Enter up to 32 characters. (Select <b>Name:</b> when saving to USIM Card.)	<b>Note:</b> *	Add personal details. Enter up to 256 characters.
<b>First Name:</b>			
<b>Reading:</b>	Enter up to 64 characters	<b>Birthdate:</b> *	Enter birth date
<b>Add Phone Number:</b>	Enter up to three numbers on handset/two on USIM Card (32 digits each)	<b>Picture:</b> *	Set an image to appear for incoming calls/mail
<b>Add Email Address:</b>	Enter up to three addresses on handset/one on USIM Card (128 single-byte alphanumerics each)	<b>Tone/Video for Voice Call:</b> *	Set Ringtone/Ringvideo, Mobile Light or Vibration by caller/sender
		<b>Tone/Video for Video Call:</b> *	
<b>Category:</b>	Sort entries into 16 Categories (11 on some USIM Cards). Category names can be changed. Set Ringtone/Ringvideo, Mobile Light and Vibration by Category (handset only).	<b>Tone/Video for New Message:</b> *	
		<b>Light for Voice Call:</b> *	
		<b>Light for Video Call:</b> *	
		<b>Light for New Message:</b> *	
<b>Address:</b> *	Enter postal code (20 characters), country name (32 characters), state/province (64 characters), city name (64 characters) and street name/number (64 characters)	<b>Vibration for Incoming Call:</b> *	
		<b>Vibration for New Message:</b> *	
<b>Homepage:</b> *	Save URLs. Enter up to 1,024 bytes.	<b>Secret:</b> *	Restrict access to Phone Book entries by saving them as Secret Mode entries

\*Not supported on USIM Card.

**Note** ▶ Depending on the USIM Card in use, some items may not be supported, and character entry limits or number of Categories may be lower. Also, the number of phone numbers or mail addresses per entry may be lower. Name does not appear in recipient/sender field of e-mail to/from addresses saved only in USIM Card Phone Book.



## New Phone Book Entries

Enter a name, reading, phone number and mail address.  
For other items, see **P.4-5 - 4-7**.

Storage media is set to handset (**Phone**) by default.

Main Menu ▶ Phone Book

### 1 Select **Add New Entry** and press **■**

Phone Book Details appears.

■ If storage media confirmation appears, select **To Phone** or **To USIM**  
▶ Press **■**

### 2 Select **Last Name:** and press **■**

### 3 Enter last name and press **■**

### 4 Select **First Name:** and press **■**

### 5 Enter first name and press **■**

Characters entered for names (reading for kanji) appear.

• To correct reading, see **P.4-7**.

### 6 Select **Add Phone Number:** and press **■**

### 7 Enter a phone number and press **■**

• Include dialling code for landline numbers.

### 8 Select an icon and press **■**

• To save additional phone numbers, repeat Steps 6 - 8.

### 9 Select **Add Email Address:** and press **■**



Phone Book  
Details

### 10 Enter a mail address and press **■**

### 11 Select an icon and press **■**

• To save additional mail addresses, repeat Steps 9 - 11.

### 12 Press **○** **Save**

**Note** ▶ To save an entry, enter at least one of the following: a) last name; b) first name; c) phone number; or d) mail address.

#### Incoming Calls while Creating Entry

■ Contents are temporarily saved. To continue with the entry, end the call or press **■** during the call.

#### Storage Media

■ Follow these steps to set default storage media for new entries.

Press **■** ▶ **Select Phone Book** ▶ Press **■** ▶  
**Select Settings** ▶ Press **■** ▶ **Select Save New Entry** ▶ Press **■** ▶ **Select Phone, USIM Memory or Ask Each Time** ▶ Press **■**

• **Phone** is set by default.  
• For **Ask Each Time**, select storage media for each new entry.

#### Confirmation for Unsaved Numbers

■ Follow these steps to show/hide confirmation for saving to Phone Book after calls with unsaved numbers.

Press **■** ▶ **Select Phone Book** ▶ Press **■** ▶  
**Select Settings** ▶ Press **■** ▶ **Select New Number Prompt** ▶ Press **■** ▶ **Select Incoming Call or Outgoing Call** ▶ Press **■** ▶ **Choose On or Off** ▶ Press **■**

• Both are **On** by default.

## Personal Ringtone/Ringvideo

Select Ringtones or Ringvideos for incoming calls/mail from numbers/addresses saved in Phone Book.

- Select from preset patterns or use the following melody or video files in Data Folder.
  - Files in Ring Songs-Tones or Music folder (file name: 55 characters or less including extension)
  - Files in Videos folder (file name: 55 characters or less including extension)
- Save files to Data Folder (Videos) before assigning video.
- Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns. Complete other fields.

### 1 Select *Tone/Video for Voice Call*., *Tone/Video for Video Call*: or *Tone/Video for New Message*: and press

### 2 *Ringtone*

#### 1 Select *Assign Tone* and press

■ To cancel assigned tone, select *Remove Tone/Video*  
➔ Press  ➔ Press   **Yes**

#### 2 Select *Preset Sounds*, *Ring Songs-Tones or Music* and press

### *Ringvideo*

#### 1 Select *Assign Video* and press

■ To cancel assigned video, select *Remove Tone/Video*  
➔ Press  ➔ Press   **Yes**

### 3 Select a file and press

■ For *Preset Sounds*, select a tone ➔ Press

#### Setting Ring Time for Incoming Mail

#### ■ After Step 3, Select *Tone/Video for New Message*: ➔

Press  ➔ Select *Duration* ➔ Press  ➔ Enter time ➔  
Press

- Note** ▶
- When source file in Data Folder is deleted, renamed or moved to another folder/Memory Card, tone/video set in Sounds & Alerts (see P.11-11 "Ringtone/videos") applies. (This also applies if source file is copyrighted and the licence expires.)
  - To apply settings to Secret Mode entries, first activate Secret Mode.

## Personal Mobile Light

Select whether to flash Mobile Light for incoming calls/mail from numbers/addresses saved in Phone Book.

- Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns. Complete other fields.

### 1 Select *Light for Voice Call*., *Light for Video Call*: or *Light for New Message*: and press

## 2 Activating/Deactivating

- 1 Select **Switch On/Off** and press
- 2 Select **On, Link to Sound or Off** and press 
  - **Link to Sound:** Mobile Light flashes only when Ringtone is a compatible SMAF file.

### Light Colour

- 1 Select **Light Colour** and press
- 2 Select a colour and press 
  - To check colours, select one and press  **Check**.
  - Press  **Stop** to stop.

### Personal Vibration

Select whether to vibrate handset for incoming calls/mail from numbers/addresses saved in Phone Book. Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns. Complete other fields.

- 1 Select **Vibration for Incoming Call: or Vibration for New Message:** and press
- 2 Select **Switch On/Off** and press

- 3 Select **On, Link to Sound or Off** and press 
  - **Link to Sound:** Handset vibrates only when Ringtone is a compatible SMAF file.

- 4 Select **Vibration Pattern** and press

- 5 Select a pattern and press

### Personal Picture

Save an image to each Phone Book entry; saved image appears for calls/mail from phone numbers/mail addresses saved in that entry.

Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns. Complete other fields.

- 1 Select **Picture:** and press 
  - To cancel saved image, select **Remove Picture** → Press  → Press  **Yes**

## 2 Selecting from Data Folder

- 1 Select **Assign Picture** and press
- 2 Select an image and press

### Capturing New Image

- 1 Select **Take Picture** and press
- 2 Frame image on Display and press 
  - Captured image appears.
- 3 Press

- Note** ▶
- Setting is cancelled when source file in Data Folder is deleted, renamed or moved to Memory Card.
  - To apply the setting to Secret Mode entries, first activate Secret Mode.

## Saving Secret Mode Entries

Restrict access to Phone Book entries by saving them as Secret Mode entries.

Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns.

Complete other fields.

**1** Select **Secret:** and press

**2** Choose **On** and press


- Note** ▶
- Activate Secret Mode (see P.11-21) to open Secret Mode entries.
  - To cancel **Off**, activate Secret Mode (see P.11-21) and choose **Off** in Step 2. To edit Phone Book entries, see P.4-10 "Editing Phone Book Entries".

## Other Phone Book Entry Items

- For descriptions of each item, see P.4-3.
- Follow these steps after opening Phone Book Details (see P.4-4). When finished, Phone Book Details returns. Complete other fields.

<b>Reading</b>	Select <b>Reading:</b> ▶ Press <input type="checkbox"/> ▶ Enter reading ▶ Press <input type="checkbox"/>
<b>Category</b>	Select <b>Category:</b> ▶ Press <input type="checkbox"/> ▶ Select a Category ▶ Press <input type="checkbox"/>
<b>Address</b>	Select <b>Address:</b> ▶ Press <input type="checkbox"/> ▶ Select <b>Postal Code:</b> ▶ Press <input type="checkbox"/> ▶ Enter postal code ▶ Press <input type="checkbox"/> ▶ Select <b>Country:</b> ▶ Press <input type="checkbox"/> ▶ Enter country name ▶ Press <input type="checkbox"/> ▶ Select <b>State/Province:</b> ▶ Press <input type="checkbox"/> ▶ Enter name ▶ Press <input type="checkbox"/> ▶ Select <b>City:</b> ▶ Press <input type="checkbox"/> ▶ Enter name ▶ Press <input type="checkbox"/> ▶ Select <b>Street &amp; Number:</b> ▶ Press <input type="checkbox"/> ▶ Enter street name/number ▶ Press <input type="checkbox"/> ▶ Press <input type="text" value="OK"/>
<b>Homepage</b>	Select <b>Homepage:</b> ▶ Press <input type="checkbox"/> ▶ Enter URL ▶ Press <input type="checkbox"/>
<b>Note</b>	Select <b>Note:</b> ▶ Press <input type="checkbox"/> ▶ Enter text ▶ Press <input type="checkbox"/>
<b>Birthday</b>	Select <b>Birthday:</b> ▶ Press <input type="checkbox"/> ▶ Enter date ▶ Press <input type="checkbox"/>

## Saving from Call Log

**1** Use  to open Dialed Numbers or Received Calls

**2** Use  to select a record and press  **Options**

**3** Select **Save Number** and press 

**4** **New Entry**

**1** Select **As New Entry** and press 

Phone number is entered automatically and Phone Book Details (see **P.4-4**) appears. Complete other fields.

### Add to Existing Entry

**1** Select a Phone Book entry and press 

Phone number is entered automatically and Phone Book Details (see **P.4-4**) appears. Complete other fields.

**Note** ▶ **Withheld** records cannot be saved. New numbers cannot be saved to 905SH Phone Book entries with three phone numbers or USIM Card entries with two phone numbers.

## Phone Book Memory Status

**Main Menu** ▶ *Phone Book* ▶ *Manage Entries*

**1** Select **Memory Status** and press 

Numbers of entries on handset and USIM Card appear.

 Press  to exit.

## Using Phone Book

### Dialling from Phone Book

Search Phone Book by katakana row (default search method) to call numbers within entries.

- To dial numbers saved in Secret Mode entries, first activate Secret Mode (see **P.11-21**).
- To search by other methods, see **P.4-9**.



**1** Press 

**2** Use  to specify katakana row

- Alternatively, enter Reading to search Phone Book.


**3** Use  to select an entry and press 


Phone Book entry opens. (Window Description: see **P.4-9**)

-  For entries with multiple numbers, use  to select one.

**4** Press 

905SH dials the number.

-  To place Video Calls, press  ▶ Select **Video Call** ▶ Press 

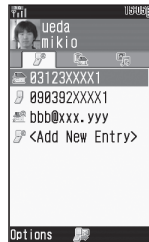

## Switching Between 905SH &amp; USIM Card

- Press **[F4]** → Press **[Options]** → Select **Settings** → Press **[F4]** → Select **Select Phone Book** → Press **[F4]** → Select **Phone, USIM Memory or Both** → Press **[F4]**
- **Phone** is set by default.
  - For **Both**, entries in both storage media appear.

## Phone Book Search Methods

By Reading	Shows entries that start with specified Reading
By Category	Opens entries in the specified Category
By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row

By **a-ka-sa-ta-na** is set by default.

**Main Menu** ▶ Phone Book ▶ Settings ▶ Sort Entries

### 1 Select By Reading, By Category or By a-ka-sa-ta-na and press **[F4]**




- Dialling Methods:

By Reading	Enter Reading → Select an entry → Press <b>[F4]</b> → Press <b>[F4]</b>
By Category	Select a Category → Press <b>[F4]</b> → Select an entry → Press <b>[F4]</b> → Press <b>[F4]</b>
By a-ka-sa-ta-na	Use <b>[F4]</b> to specify a row → Select an entry → Press <b>[F4]</b> → Press <b>[F4]</b>

For entries with multiple numbers, select one and press **[F4]**.

**Tip** ▶ In Standby, press **[F4]** and follow the steps above.

## Window Description

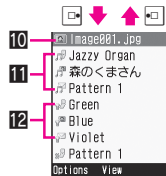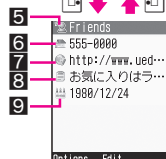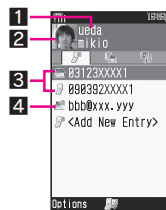

- 1 Name
- 2 Image Set for Picture
- 3 Phone Number
- 4 Mail Address
- 5 Category Name
- 6 Address
- 7 Homepage
- 8 Note
- 9 Birthday
- 10 Name of Image Set for Picture
- 11 Ringtone/Ringvideo Settings
- 12 Mobile Light Settings
- 13 Vibration Settings
- 14 Secret Mode Status

**Tip** ▶ To see details or use saved information, select an item and press **[F4]**. To add information, select an item in angle brackets (**<Add New Entry>**, etc.) and press **[F4]**.

## Editing Phone Book Entries

To edit Secret Mode entries, first activate Secret Mode (see P.11-21).

### Correction/Change

**1** Press , then select an entry

**2** Press  **Options**



**3** Select **Edit** and press 

**4** Select an item and press 

Edit contents.

- See procedure for saving items to Phone Book (see P.4-4 - 4-7).
- Edit Reading after editing names.

**5** Press  when finished

- To edit other items, repeat Steps 4 - 5.
- To cancel, press  ➔ Press  **Yes**

**6** Press  **Save**

The entry is overwritten.

### Copying Phone Book Entries

Exchange entries between handset and USIM Card. USIM Card does not support some Phone Book entry items (see P.4-3). Those items are deleted when Phone Book entries are copied from handset.

#### One Entry

**1** Press , then select an entry

**2** Press  **Options**

**3** Select **Manage Entries** and press 

**4** **Handset to USIM Card**

**1** Select **Copy Entry to USIM** and press 

**2** Press  **Yes**


**USIM Card to Handset**

**1** Select **Copy Entry to Phone** and press 

#### All Entries

If handset or USIM Card memory is low, entries cannot be copied all at once.





**Main Menu** ► **Phone Book** ➔ **Manage Entries** ➔ **Copy All**

**1** Select **USIM to Phone** or **Phone to USIM** and press 

**2** Press  **Yes**

## Deleting Phone Book Entries




### One by One

- 1 Press , then select an entry
- 2 Press  **Options**
- 3 Select **Delete** and press 
- 4 Press  **Yes**

**Tip** ▶ The source files remain in Data Folder, even when deleting entries containing melodies, video or images set for incoming calls/mail or Picture.

### All at Once

**Main Menu** ▶ *Phone Book* ▶ *Manage Entries* ▶ *Delete All*









- 1 Select **Phone Entries**, **USIM Entries** or **Both Entries** and press 
- 2 Press  **Yes**
- 3 Enter Handset Code
- 4 Press 

## Category Settings

Customise Category options; create new Category names.

### Changing Category Name

**Main Menu** ▶ *Phone Book* ▶ *Category Control*

- 1 Use  to select  or 
- 2 Select a Category and press  **Options**
  - **No Category** (on handset) cannot be renamed.
- 3 Select **Edit Name** and press 
  - ▶ To change icons, select **Change Icon** ▶ Press  ▶ Select an icon ▶ Press  (Omit the next steps.)
- 4 Enter a name
  - Enter up to 16 characters on handset; USIM Card character entry limit varies according to card specifications.
- 5 Press 
  - Repeat Steps 1 - 5 for other Categories.








## Customising Handset Responses

Set Ringtone/Ringvideo, Mobile Light or Vibration for incoming calls/mail by Category.

Category settings for incoming calls/mail are not available for Categories on USIM Card.

**Main Menu** ► Phone Book ► Category Control

- 1** Use  to select 
- 2** Select a Category and press  **Options**
- 3** Select **Assign Ringtone, Assign Event Light or Assign Vibration** and press 
- 4** Select **For Voice Call, For Video Call or For New Message** and press 
  - See the corresponding procedure for each setting.
    - Ringtone/Ringvideo: perform from Step 2 in "Personal Ringtone/Ringvideo" on P.4-5
    - Mobile Light: perform Step 2 in "Personal Mobile Light" on P.4-5
    - Vibration: perform from Step 2 in "Personal Vibration" on P.4-6

**Note** ► Personal Ringtone/Ringvideo, Mobile Light and Vibration settings (see P.4-5 - 4-6) take priority.

## Contact Groups

Create Contact Groups to send MMS messages to multiple recipients at one time (see "Contact Groups" in Step 4 on P.15-7).

### Creating Contact Groups

Create up to five Contact Groups.






**Main Menu** ► Phone Book ► Contact Groups ► Add New Group

- 1** Enter a Group name and press 

### Saving Group Members

Save up to 20 members per Group.





**Main Menu** ► Phone Book ► Contact Groups

- 1** Select a Group and press 
- 2** Select **Assign New Entry** and press 
- 3** Select an entry and press 
  - For entries with multiple numbers/addresses, use  to select a Vodafone handset number or mail address ► Press 
  - To add other numbers/mail addresses, repeat Steps 2 - 3.

## Editing Contact Groups





### Renaming Groups

**Main Menu** ▶ Phone Book ▶ Contact Groups

- 1 Select a Group and press  **Options**
- 2 Select *Edit Name* and press 
- 3 Enter a name and press 
  - Enter up to 16 characters.
- 4 Press  **Yes**

### Deleting Groups




**Main Menu** ▶ Phone Book ▶ Contact Groups

- 1 Select a Group and press  **Options**
- 2 Select *Delete* and press 
- 3 Press  **Yes**
- 4 Enter Handset Code and press 

## Editing Group Members

### Deleting Members





**Main Menu** ▶ Phone Book ▶ Contact Groups ▶ Open a Group

- 1 Select a member and press  **Options**
- 2 Select *Remove Entry* and press 
- 3 Press  **Yes**

**Tip** ▶ Source Phone Book entries remain even after deleting members.

### Changing Members

**Main Menu** ▶ Phone Book ▶ Contact Groups ▶ Open a Group

- 1 Select a member and press  **Options**
- 2 Select *Re-assign Entry* and press 
- 3 Select an entry and press 
  - For entries with multiple numbers/addresses, use  to select a Vodafone handset number or mail address ▶ Press 
- 4 Press  **Yes**

# Speed Dial List

## Saving Phone Numbers

Save phone numbers to Speed Dial List for easy dialling. Voicemail Centre number is preset in Speed Dial 1 and cannot be changed.

**Main Menu** ▶ Phone Book ▶ Speed Dial List

**1** Select from 2 to 9 and press **[OK]**

**2** Select an entry and press **[OK]**

For entries with multiple numbers, use **[↓]** to select one → Press **[OK]**

To overwrite existing number, press **[OK]** **Yes** after Step 2.

### Saving from Phone Book

Open a Phone Book entry and select a phone number → Press **[OK]** **Options** → Select **Add Speed Dial** → Press **[OK]** → Select from 2 to 9 → Press **[OK]**

To overwrite existing number, press **[OK]** **Yes** after the above steps.

**Note** ▶ Saved phone numbers are deleted from Speed Dial List when edited in Phone Book or when source Phone Book entries are deleted.

**Tip** ▶ Use Headphones with built-in TV antenna to call the number saved in Speed Dial 2

## Speed Dial

To dial numbers saved in Secret Mode entries, first activate Secret Mode (see P.11-21).

**1** Press a key (**[2<sup>ACC</sup>]** - **[9<sup>OVZ</sup>]**) for 1+ seconds

905SH dials the number. (Name appears if saved.)

Alternatively, select a name from Speed Dial List and press **[↵]**.

**Delete**

Delete entries one at a time

**Main Menu** ▶ Phone Book ▶ Speed Dial List

Select an entry → Press **[OK]** **Options** → Select **Delete** → Press **[OK]** → Press **[OK]** **Yes**

**Tip** ▶ Source Phone Book entries remain even after deleting Speed Dial entries.

**Clear All**

Return Speed Dial List to default setting

**Main Menu** ▶ Phone Book ▶ Speed Dial List

Press **[↓]** → Press **[OK]** **Options** → Select **Clear All** → Press **[OK]** → Press **[OK]** **Yes**


### Using Headphones with Built-in TV Antenna

In Standby, press Call Button for 1+ seconds until a double beep sounds; 905SH dials the number saved in Speed Dial 2.

To end the call, press Call Button for 1+ seconds until a beep sounds.

# Vodafone Address Book (VAB)

Back up Phone Book content in VAB; add Phone Book changes to VAB anytime. Edit VAB online via PC; add VAB changes to Phone Book anytime. Restore lost or altered Phone Book content from VAB.

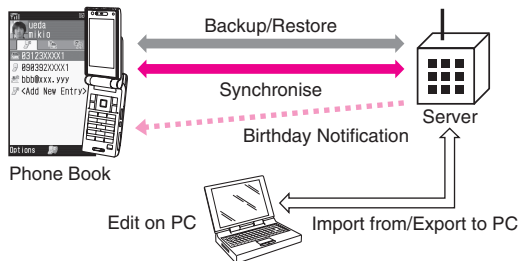

- VAB requires a separate contract and basic monthly fee.
- Use VAB to add Phone Book content to a new compatible Vodafone handset; some conditions apply (see P.4-16).
- Use a PC to edit VAB online (<http://www.vodafone.jp/en/VAB/>).
- Save birthday information to VAB; use a PC to activate Birthday Notification online to receive SMS reminders.

**Note** ▶ Sync commands (Backup, Restore and Synchronise) all incurs transmission fees.

## VAB Sync Commands & Features

Backup/ Restore	Backup	Export Phone Book content to VAB <sup>1</sup>
	Restore	Import VAB content to Phone Book <sup>2</sup>
Synchronise	Normal	Synchronise Phone Book and VAB <sup>3</sup>
	Sync from Client	Add Phone Book changes to VAB <sup>4</sup>
	Sync from Server	Add VAB changes to Phone Book <sup>5</sup>
Edit on PC	Import from PC	Upload PC address book info to VAB
	Export to PC	Export VAB content to PC address book
Send Notice	Birthday Notification	VAB sends reminders via SMS to 905SH

<sup>1</sup>Any existing VAB content is deleted.

<sup>2</sup>Any existing Phone Book content is deleted.

<sup>3</sup>If the same entry item is edited in Phone Book and VAB, VAB content is referenced.

<sup>4</sup>Unrelated VAB changes remain.

<sup>5</sup>Unrelated Phone Book changes remain.

## Service Usage Outline

### Complete Contract

Visit a Vodafone shop or dial 157 from a Vodafone handset for Vodafone Customer Centre, General Information.



### Receive User ID & Password

After subscription, User ID and Password arrive via SMS.  
 • Handset phone number serves as User ID.



### Save User ID & Password

See P.4-17 for procedures.



### Use VAB

Export Phone Book content to VAB.

• Using sync commands incurs transmission fees.

**Tip ▶** If User ID and Password SMS does not arrive, dial 157 for Customer Service or follow these steps:

Press  ⇒ Select *My Vodafone* ⇒ Press  ⇒  
 Select *利用状況の確認* ⇒ Press  ⇒ Select  
*ボータフォード・リスト・編集用パスワード確認* ⇒ Press   
 ⇒ Select *サイン・ナメー設定・各種メー設定へ* ⇒  
 Press  ⇒ Select the text entry field ⇒ Press   
 ⇒ Enter Centre Access Code ⇒ Press  ⇒  
 Select *OK* ⇒ Press  ⇒ Select *パスワード確認* ⇒  
 Press  ⇒ Follow onscreen instructions

## Precautions

### ■ Unsynchronisable Items

- VAB restoration cancels these Phone Book settings:
  - Category, Picture, Tone/Video (for Voice Call, Video Call, New Message), Light (for Voice Call, Video Call, New Message), Vibration (for Incoming Call, New Message)

### ■ Unintentional Phone Book or VAB Content Deletion

- When no Phone Book content exists, selecting *Normal*, *Sync from Client* or *Backup* deletes all VAB content.
- When no VAB content exists, selecting *Normal*, *Sync from Server* or *Restore* deletes all Phone Book content.

### ■ Phone Book ⇔ VAB Content Capacity Disparities

When the number of savable items varies between Phone Book and VAB entries, Synchronisation reflects lower limit.

### ■ VAB Transfers to New Handsets

- **VAB-Compatible Vodafone 3G handsets**  
VAB content remains as last saved.
- **Other Vodafone 3G handsets**  
Service contract and VAB content remain (accessible via PC).
- **Vodafone V3/V4/V5/V6/V8 series**  
Service contract is terminated and VAB content is deleted.







## Contract Termination

VAB content is deleted upon contract termination.

### Saving User ID & Password

After completion of contract, User ID and Password arrive via SMS. Save them on 905SH to activate VAB.

**Main Menu** ▶ Phone Book ➔ VF Address Book

- 1 Select **Sync Settings** and press 
  - 2 **User ID**
    - 1 Select **User ID** and press 
    - 2 Enter handset number and press 
- Password**
- 1 Select **Password** and press 
  - 2 Enter Password and press 
- 3 Press  **Save**

## Backup & Restore

### Backup (Phone Book → VAB)

**Main Menu** ▶ Phone Book ➔ VF Address Book

- 1 Select **Backup** and press 
- 2 Press  **Yes**
- 3 Enter Handset Code and press 
- 905SH connects to the Server and Backup starts.
  - After Backup, details appear.
  - To cancel, press  **Cancel** ➔ Press  **Yes**
- 4 Press  to exit

### Restore (VAB → Phone Book)

**Main Menu** ▶ Phone Book ➔ VF Address Book

- 1 Select **Restore** and press 
- 2 Press  **Yes**
- 3 Enter Handset Code and press 
- 905SH connects to the Server and Restore starts.
  - After Restore, details appear.
  - To cancel, press  **Cancel** ➔ Press  **Yes**
- 4 Press  to exit

## Synchronising Phone Book

For details, see the table on P.4-15.

**Main Menu** ▶ Phone Book ▶ VF Address Book

### 1 Select **Normal**, **Sync from Client** or **Sync from Server** and press **■**

- If this is your first use of VAB (new handset), Synchronisation is performed via **Normal** regardless of selection.

### 2 Press **☐** **Yes**

### 3 Enter Handset Code and press **■**

905SH connects to the Server and Synchronisation starts.

- After Synchronisation, details appear.
- To cancel, press **☐** **Cancel** ▶ Press **☐** **Yes**

### 4 Press **■** to exit

## Opening Log

View result of Backup, Restore or Synchronisation.

**Main Menu** ▶ Phone Book ▶ VF Address Book

### 1 Select **View Log** and press **■**

- Press **■** to exit.

## My Details

### Opening My Details

Confirm handset number (phone number on USIM Card). Save name, reading, phone number, mail address, personal data, etc.

**Main Menu** ▶ Phone Book

### 1 Select **My Details** and press **■**

- My Details are similar to Phone Book entries (see P.4-9).

### 2 Press **☐** to exit

**Tip** ▶ Exchange My Details via Bluetooth® (see P.12-2) or infrared (see P.12-9) with compatible devices.

**Edit/Add Details** Edit/add My Details

**Main Menu** ▶ Phone Book ▶ My Details

Press **☐** **Options** ▶ Select **Edit/Add Details** ▶ Press **■**  
▶ Select an item ▶ Press **■**

- For more, see P.4-4.

**Note** ▶ Phone number in **Tel 1**: cannot be changed.

**Delete** Clear My Details

**Main Menu** ▶ Phone Book ▶ My Details

Press **☐** **Options** ▶ Select **Delete** ▶ Press **■** ▶  
Press **☐** **Yes**

**Note** ▶ Phone number in **Tel 1**: remains.


## *Video Call*



# Getting Started

Communicate with another party using live video images.

- Use Video Call with compatible handsets only.
- Use Internal Camera to send your own image.
- Use External Camera to send higher quality images.

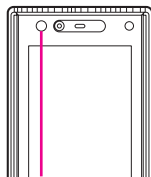

Internal Camera

**Note** ▶ In Cycloid position, use Loudspeaker or Headphones (with built-in TV antenna) for telephone calls. (Use Earpiece in portrait position.)

## Window Description

Portrait Position



Cycloid Position  
(Lateral Display Size: Enlarge)



Other Party's Image<sup>1</sup>

Your Image<sup>1</sup>

Other Party's Name/Number<sup>2</sup>

<sup>1</sup>Change incoming/outgoing image size/position (see P.5-5 "Switch Images").

<sup>2</sup>Name appears if saved in Phone Book.

## Important Video Call Usage Notes

- Video Calls cannot be placed while TV is active. Exit TV and try again.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Depending on the other party's handset specifications or settings, incoming image may appear small or not at all.
- Rapid motion can make images appear choppy or distorted.
- Conversations may be hampered by ambient noise. Use Headphones to reduce noise.
- Increasing Earpiece Volume for Loudspeaker (see P.5-6, P.5-7) use may cause feedback/interference. Moderate volume or use Headphones.
- Handset temperature may rise during Video Calls; this is normal.

**Tip** ▶ In Cycloid position, outgoing Internal Camera image is always zoomed in (2x). Place handset on stable surface as needed to adjust the distance.

## Initiating a Video Call

**1** Enter a phone number

**2** Press  **Options**

**3** Select **Video Call** and press 


When the call is answered, incoming image appears.

- Incoming image may not appear depending on handset settings. (Video Call charges apply.)

■ For operations during a Video Call, see **P.5-4**.

**4** Press  to end call

- Alternatively, close handset (closed position) to end calls. (Note, however, that if Headphones or a Bluetooth® headset is in use, line will remain open even when handset is closed.)

- Tip** ▶
- Enter a phone number (or select a record from Call Log) and press  for 1+ seconds to initiate a Video Call.
  - To initiate a Video Call from Phone Book, see **P.4-8**. To select a record from Call Log, see **P.2-13**.



## Answering a Video Call

**1** When a Video Call arrives, open handset

*Incoming Video Call* appears.

**2** **Answer with Video Image**

**1** Press 

Internal Camera image is sent.

■ For operations during a Video Call, see **P.5-4**.

**Answer with Voice Only**

**1** Press  **Options**

**2** Select **Hide Picture** and press 

- Outgoing image is suppressed. (Video Call charges apply.)

■ For operations during a Video Call, see **P.5-4**.

**3** Press  to end call

- Alternatively, close handset (closed position) to end calls. (Note, however, that if Headphones or a Bluetooth® headset is in use, line will remain open even when handset is closed.)

**Note** ▶ Loudspeaker (see **P.5-6**, **P.5-7**) is temporarily cancelled when receiving Video Calls in Manner mode. To reactivate, set to **Loudspeaker On** during a call.



## Rejecting/Redirecting Video Calls

- When a Video Call arrives, press **Options** ➔ **Select** **Reject Call or Forward** ➔ Press .

## Engaged Video Call Operations

Follow these steps in portrait position (not available in Cycloid position).

### Camera Picture

Change outgoing image

Default Internal Camera

During a call, press .

- Image toggles as follows: External Camera image → Alternative Image → Internal Camera image.
- Press to toggle image in reverse order.
- To change Alternative Image during a call, press **Options** ➔ **Select** **Settings** ➔ Press ➔ Perform from "Select **Alternative Image**" in "Camera Picture" on **P.5-7**

### Earpiece Volume

Adjust Earpiece Volume (5 levels)

Default Level 3

During a call, press or ➔ Press (up) or (down) to adjust level

- Each press changes volume by one level.
- Volume level remains as set even after handset power is turned off.

### Mute

Mute handset microphone

During a call, press **Mute**.

- To cancel, press **Unmute**.

### Video Output

View Video Call images on an external device

- Connect Video Cable to 905SH and device, and activate Video Output (see **P.11-10**).

During a call, press .


- Images appear on the device when initiating Video Calls.
- Press to toggle display between the device and handset.
- Only incoming/outgoing image appears on the device. (Images do not appear on handset and device simultaneously.)
- To switch device Display Size, see **P.11-10**.

### Note


- Voice is heard from handset.
- Images may not appear on the device while menus and other windows are open.

## Switch Images

Change incoming/outgoing image size/position

During a call, press .

- Incoming Priority is set when initiating Video Calls.
- In portrait position, images toggle as shown below.

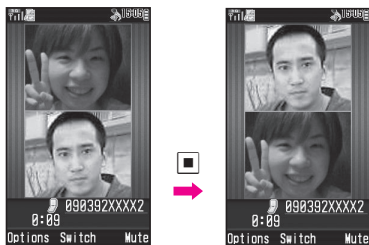

Incoming Priority

Outgoing Priority



Incoming Only



Outgoing Only


- In Cycloid position, images toggle as shown to the right.

## Lateral Display Size: Enlarge



Incoming/Outgoing Image


Outgoing/Incoming Image

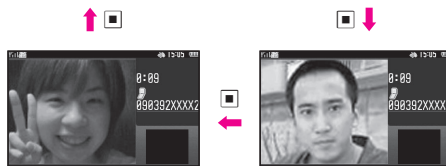

Incoming Only


Outgoing Only

## Lateral Display Size: Original Size

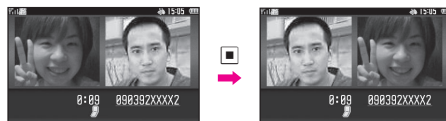

Incoming/Outgoing Image

Outgoing/Incoming Image

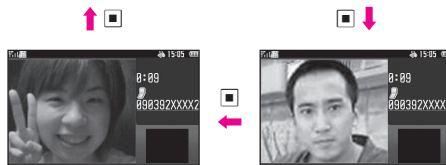

Incoming Only

Outgoing Only

- Note** ▶ Outgoing image appears on other party's handset even when Incoming Only is active.

**Lateral Display Size** Change incoming/outgoing image size for Cycloid position

Default: Enlarge

During a call, press  **Options** → Select **LateralDisplaySize** → Press  → Select **Original Size or Enlarge** → Press 

**Loudspeaker** Cancel or activate Loudspeaker

During a call, press  **Options** → Select **Loudspeaker Off or Loudspeaker On** → Press 





**Open Phone Book** Open/save Phone Book entries or My Details

### Opening Phone Book

During a call, press  **Options** → Select **Open Phone Book** → Press  → Select an entry (or My Details) → Press 

- **My Details** appears only when **Sort Entries** is set to **By Reading** or **By Category** (see P.4-9 "Phone Book Search Method".)

### Saving Entries

During a call, press  **Options** → Select **Open Phone Book** → Press  → Press  **Options** → Select **Add New Entry** → Press  → Perform from Step 2 on P.4-4

**Transfer Audio** Select sound output when a handsfree device, etc. is used for conversations

During a call, press  **Options** → Select **Settings** → Press  → Select **Transfer Audio** → Press  → Select **To Phone or To Bluetooth** → Press 

**Hold** Pause live voice/image transmissions  
Send Hold Guidance Picture






During a call, press  **Options** → Select **Hold** → Press   
 To resume, press .

**Mirror Image** Activate/cancel reversed Internal Camera image

During a call, press  **Options** → Select **Settings** → Press  → Select **Mirror Image** → Press  → Choose **On** or **Off** → Press 





- External Camera image, Alternative Image and incoming images cannot be reversed.
- Mirror Image is **On** when initiating Video Calls.

**Exposure** Adjust outgoing image brightness (5 levels: -2 to +2)






During a call, press  **Options** → Select **Settings** → Press  → Select **Exposure** → Press  → Use  to adjust level → Press 

- Alternative Image appearance is fixed.
- Exposure is **Level 0** when initiating Video Calls.

**Help** View a summary of key assignments

During a call, press  **Options** → Select **Help** → Press   
 Press  to return.

### Other Engaged Call Operations

- **Mobile Light**  
Press  for 1+ seconds to turn on or off.
  - Use Mobile Light as a strobe for External Camera.
- **Digital Zoom**  
Press  (zoom in) or  (zoom out).
  - Not available for Alternative Image.
  - In Cycloid position, Internal Camera image is always zoomed in.
- To change Incoming Picture, Outgoing Picture, Backlight or Hold Guidance Pict (see P.5-7) during a call, press  **Options**, select **Settings** and press .
  - Options menu is available in portrait position only.

# Video Call Settings

To change these settings during calls, see P.5-4 - 5-6.

## Camera Picture

Outgoing image is either live video via Internal Camera or Alternative Image when initiating Video Calls

Default Internal Camera

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Camera Picture

Select **Default Image** → Press  → Select **Internal Camera or Alternative Image** → Press

To change Alternative Image, select **Alternative Image** → Press  → Select **Preset Picture or My Pictures** → Press  → Select an image → Press  → Press

To use Custom Screen image, select **Alternative Image** → Press  → Select **Custom Screen** → Press  → Press

- External Camera image is selectable during a call.

## Lateral Display Size

Change incoming/outgoing image size for Video Calls in Cycloid position

Default Enlarge

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Lateral Display Size

Select **Original Size or Enlarge** → Press

## Loudspeaker

Activate/cancel Loudspeaker for Video Calls

Default On

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Loudspeaker

Choose **On (activate Loudspeaker) or Off** → Press

## Incoming Picture

Select quality of incoming images

Default Normal

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Incoming Picture

Select **Normal, Quality Prior or Frame Rate Prior** → Press

- Select **Quality Prior** for higher quality and **Frame Rate Prior** for faster frame rate.

## Outgoing Picture

Select quality of outgoing images

Default Normal

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Outgoing Picture

Select **Normal, Quality Prior or Frame Rate Prior** → Press

- Select **Quality Prior** for higher quality and **Frame Rate Prior** for faster frame rate.

## Backlight

Select a Backlight status for Video Calls

Default Always On

## Main Menu

Settings → Call/Video Call (☎) → Video Call → Backlight

Select **Always On, Always Off or Normal Setting** → Press

- Selecting **Normal Setting** applies Display Backlight setting (see P.11-8).

**Mute  
Microphone**

Mute handset microphone for Video Calls

Default: Off

**Main Menu**▶ Settings ▶ Call/Video Call (☎) ▶ Video Call ▶  
Mute Microphone**Choose *On (mute)* or *Off* ▶ Press** **Hold Guidance  
Pict**Select image that can be sent while calls are  
on hold

Default: Picture 1

**Main Menu**▶ Settings ▶ Call/Video Call (☎) ▶ Video Call ▶  
Hold Guidance Pict**Preset Picture****Select *Preset Picture* ▶ Press**  **▶ Select an image**  
**▶ Press**  **▶ Press** **Data Folder Images****Select *My Pictures* ▶ Press**  **▶ Select an image ▶**  
**Press**  **▶ Press** **Custom Screens****Select *Custom Screen* ▶ Press**  **▶ Press**

*TV*



# Basics

## ■ One Seg Compatibility

905SH supports One Seg terrestrial digital television broadcast services developed for mobile devices.

- Set up a channel list for the current service area or access programs via the electronic program guide (EPG).
- View text-based data broadcasts, for interactive and program-related info.
- Record programs manually or save shows to Reservation List to record them or activate TV at the set time.
- View analogue broadcast channels as well.



## ■ Cycloid Position

Rotate Display into landscape orientation to watch TV in wide-screen mode. In portrait mode, view data in full or half screen.

Rotating Display into Cycloid position in Standby activates TV (default). When new mail arrives while 905SH is in Cycloid position, return to portrait mode to read the message without interrupting TV viewing.



### Watch Live Television → P.6-9

Set up a channel list for your service area to access available programming. Rotate Display to landscape view to activate TV in Standby. Access TV programming from TV Listing (EPG).

### Access Messaging → P.6-6

Use messaging functions in the lower half of Display while watching TV in portrait mode. In Cycloid position, return Display to portrait mode to check newly arrived messages.

### Handle Incoming Calls → P.6-5

While handset is ringing in Cycloid position, return Display to portrait mode to pause TV and answer the call. Alternatively, answer the call in Cycloid position while TV plays.

### Access TV Listing (EPG) → P.6-10

Access TV Listing (EPG) to find program channels and times; set Reservations by date and time to record shows or activate TV.

### View Data Broadcasts → P.6-11

In addition to high-quality audio and visuals, enjoy text and other data broadcasts including various program-related information.

### Record & Play Back Shows → P.6-13

Save a show to Reservation List or record it manually; watch TV while recording to Memory Card for later viewing on 905SH.

### Reserve TV Programs → P.6-16

Activate TV at a specified time or record a show; enter dates & times manually or reference TV Listing electronic program guide.

# Getting Started

## Precautions

- Keypad and battery cover heat up while using TV. Avoid prolonged contact with skin, and do not cover handset with paper, cloth, etc. May cause burn injuries or malfunction.
- 905SH TV is exclusively for Japan use due to differing broadcast frequencies overseas.
- Do not use TV while driving or riding a bicycle. Accidents may result. Mobile phone use while driving is prohibited by the revised Road Traffic Law (effective 1 November 2004). Even as a pedestrian, to avoid accidents, always pay attention to your surroundings, especially when near level/road crossings.
- Audiovisual quality may be affected by Voice Call conversations, incoming messages or nearby mobile phones.

**Note** ▶ Vodafone is not liable for any damages resulting from accidental loss/alteration of handset or Memory Card data. Information saved on handset (TV links, channel list, etc.) is not transferable to other Vodafone handsets. Delete all data on disused handset whenever possible.

- Note** ▶
- USIM Card removal/service termination disables TV.
  - TV may be disabled after a period of handset use without a Network connection. Retrieve Network information (see **P.12-14**) to activate TV.

### Data Broadcast Network Connection

A confirmation appears the first time a Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed, etc.


## Poor Reception Areas

Programing may not be viewable or record properly when:

- Far from or too close to broadcasting stations
- In mountainous areas or near buildings
- Aboard trains or in vehicles
- Near high-voltage lines, neon lights or wireless stations
- Near railroad tracks or highways
- In tunnels or underground shopping malls
- In any other areas where jamming signal exists or reception is unstable

**Note** ▶ In One Seg, block noise may appear or audio may be muted depending on signal conditions.

## Battery

When battery is low () , TV does not activate. If battery runs low during use, TV ends automatically.

## Charging

Use TV when battery is adequately charged or charging.

- When battery is low (🔋), Analogue TV is unavailable, even if 905SH is connected to Charger; Digital TV is available.
- To avoid interference, separate Charger and Antenna.
- Charging takes longer when TV is active.

## One Seg Digital Television Broadcasts

### Terrestrial Digital TV Broadcasts for Mobile Devices

In Japan, the 6 MHz band assigned to each channel for terrestrial digital broadcasting is divided into 13 segments, 12 of which are used for broadcasting to households. The remaining "One Seg" is dedicated to mobile devices. One Seg service began on 1 April 2006 in the three largest urban areas and 13 prefectures. For details, access the Association for Promotion of Digital Broadcasting Website: <http://www.d-pa.org/english/> (PC)  
<http://www.d-pa.org/1seg/k/> (Mobile) Japanese Only

## 905SH One Seg Support

905SH is equipped for One Seg digital broadcast reception.

 
- Tip** ▶
- One Seg terrestrial digital broadcasting is transmitted within the UHF spectrum.
  - Unless otherwise noted, One Seg and terrestrial analogue broadcasting are referred to as "Digital TV" and "Analogue TV" respectively in this manual.

## Antenna


### Digital TV Reception

To improve reception, extend Antenna or use optional TV Antenna Connection Cable.

- Pull Antenna by top bead until it clicks.
- After use, gently retract Antenna into 905SH.



- Antenna folds and rotates 360°; adjust for best reception.
- Antenna is slightly skewed for easy folding and may not pull straight out; this is by design.

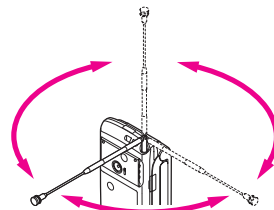

## Analogue TV Reception Devices

Use Antenna, Headphones (with built-in TV antenna) or optional TV Antenna Connection Cable. Input changes according to device and media.


Device	VHF	UHF	CATV*
None	Antenna		—
Headphones	Headphones	Antenna	—
TV Antenna Connection Cable	TV Antenna Connection Cable		

\*To watch CATV, use TV Antenna Connection Cable.


- Extend Antenna fully. Adjust length for better TV reception when transmission source is near.
- When using Headphones, straighten cord for better reception.

## Incoming Transmissions

### Incoming Calls

TV pauses. Press  to answer the call. End the call to return. (Handset returns to Standby after Video Calls.)

- To receive and answer calls without interrupting TV viewing, see P.6-20 "Calls & Alarms".
- Recording continues even when calls (except Video Calls) arrive.
- If TV ends during a call (due to low battery, etc.), handset returns to Standby after the call. If other functions are in use at the same time, handset returns to active function window.

- Note** ▶
- In Cycloid position, use Headphones or Loudspeaker for conversations. Use Earpiece in portrait position.
  - Press  to toggle between Headphones and Loudspeaker.
  - Incoming calls or Voice Call conversations may affect analogue TV reception.

- Tip** ▶ To answer calls by rotating Display from Cycloid to portrait position, see P.6-21 "Answer Call".

### Incoming Calls in Cycloid Position

- Set 905SH to show incoming call notice or enable call functions without interrupting TV viewing; see P.6-20 "Calls & Alarms".



- Press to answer calls without interrupting TV viewing.
  - Use Headphones or Loudspeaker for conversations. Use Earpiece in portrait position (TV pauses).
  - TV audio is muted during calls.
  - Press to toggle between Headphones and Loudspeaker.
- Placing handset in portrait position opens Call window.
  - Press to toggle between TV and Call windows.
- To end the call, press . (TV window returns.)

### Incoming Messages

A double beep sounds and a notice (default: sender name) appears.

- When mail arrives in Cycloid position, place handset in portrait position to open Received Msg. folder in the lower half of Display. (This function is not available when another function is active or when Message Notice (see P.15-27) is set to **Off**. Press to toggle windows (see P.6-10).
- Information window opens when handset returns to Standby.
- To change/hide notice or mute alert sound, see P.15-27 "Message Notice".




**Note** ▶ Incoming messages may affect Analogue TV reception.

### Using Headphones

- When Headphones are connected to handset, sounds for incoming calls/mail and Alarm are heard from Headphones and handset speaker.
  - To disable speaker, see P.11-14 "Ringer Output".

## Key Assignments

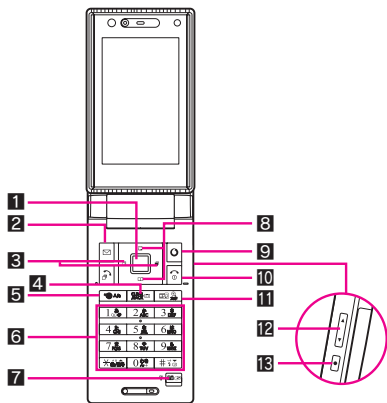

### 1 Execute Data Broadcast Item

### 2 Open Options Menu

### 3 Channel Advance

Press  (reverse) or  (forward).

- Press for 1+ seconds to find channels automatically (see P.6-9, P.6-21 "Auto Search").

### 4 Return to Previous Data Broadcast Window

### 5 Open Shortcuts Menu (Multi Job)

### 6 Direct Channel Access

- With handset in portrait position, press a key for 1+ seconds to reassign current channel to it.
- While viewing data broadcast, press to execute operation/function assigned to that key.

### 7 Activate TV (TV Key)

- In Standby, press to activate TV; last used mode appears.
- While watching TV, toggle active function windows.
- Press for 1+ seconds to activate/cancel Manner mode.

### 8 Select Data Broadcast Item

### 9 Toggle Panel On/Off

- Press for 1+ seconds to access EPG.

### 10 Exit TV

### 11 Switch Channel List

- Press for 1+ seconds to toggle between Digital and Analogue TV.

### 12 Volume Control

Press  (up) or  (down).

- Press  for 1+ seconds to mute. To cancel, press  (volume 1 returns).

### 13 Record

- Press for 1+ seconds to record programs.

**Help**

■ View a summary of key assignments.


**Activate TV and press**  **Options** ➔ **Select Help** ➔

**Press**

■ Press  to return.


## Window Description

### Digital TV

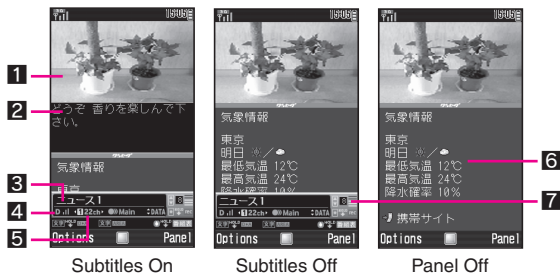

- |                                      |                     |
|--------------------------------------|---------------------|
| 1 TV Image                           | 4 Signal Conditions |
| 2 Subtitle Text                      | 5 Channel           |
| 3 Program/Station Name<br>(Panel On) | 6 Data Broadcast    |
|                                      | 7 Volume            |


### Analogue TV

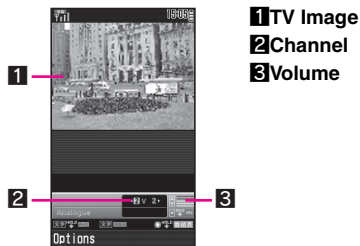

## Channel Setup

905SH contains channel information for each area. Before watching TV for the first time, set up an area-based channel list. Retrieve Network information (see P.12-14) and follow these steps.

- 1 Press .  
*No channel is set. Set?* appears.
- 2 Press **Yes**.
- 3 Select an area and press .
- 4 Select a prefecture and press .
- 5 Select a district and press .

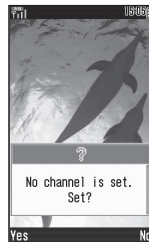

- After setup (approx. 60 seconds), digital TV channel list appears.
- To set up Digital TV channel list without specifying an area, select **Other Region** ► Press .
  - To set up Analogue TV channel list, activate Analogue TV and perform update in Set Channels (see P.6-18).

- 6 Press .  
Analogue TV channel list appears.
- 7 Press .
  - To watch TV, select **Digital TV** or **Analogue TV** and press .

- Tip** ►
- Setup may not complete correctly depending on the area or service availability.
  - To set up more channel lists or edit contents, see P.6-18.

# Digital TV

## Watching Digital TV


Main Menu ▶ TV

### 1 Select Digital TV and press

TV window opens.

 Key Assignments: see P.6-7


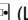



 Data Broadcast: see P.6-11

 Subtitle & Sound Settings: see P.6-10



### 2 Use Keypad to select a channel

- Other Channel Selection Methods:


Channel Advance	Press  <sup>1</sup>
Auto Search	Use  (Long Press) <sup>2</sup>
Switch Channel List	Press  ➔ Use  to select a list ➔ Press 


<sup>1</sup>Channels saved in the active channel list appear by default. To see all receivable channels, see P.6-19 "Navi Key Settings".


<sup>2</sup>When a stable signal is found, search stops automatically.

- Press a key for 1+ seconds to assign current channel to that key for the active channel list (see P.6-19 "Save Channel").

 (up) or  (down) to adjust volume.

 for 1+ seconds to mute.

■ To cancel, press .

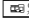
 for 1+ seconds to toggle Digital and Analogue TV.

### 3 To exit, press then Yes

#### Watching TV in Cycloid Position

- Rotate Display to Cycloid position for widescreen viewing.



- Rotating Display to Cycloid position in Standby activates TV.
  - After 3 seconds Panel turns off; press  to toggle Panel on/off.
- Data, TV Listing, Help, etc. are not available in Cycloid position.








## Subtitle Language




Select subtitle language

- Available when multiple languages are supported.  
Default Language 1

Press  **Options** → **Select Subtitle Language** →  
Press  → **Select Language 1 or Language 2** →  
Press 

## Sound Type


Select sound options for bilingual broadcasts, etc.

Press  **Options** → **Select Sound Type** → Press  →  
**Select Main, Sub or Main + Sub** → Press 

- Depending on the program, **Sound 2 (Main)**, **Sound 2 (Sub)** or **Sound 2(Main+Sub)** may also be selectable.

## Subtitle Text

- To show subtitles, choose **On** or **On (In-Call/Manner)** for Display Subtitle.
  - In portrait position, subtitles appear in subtitle area.
  - In Cycloid position, subtitles appear superimposed on TV images.
  - If not supported, subtitles do not appear regardless of the setting.
  - On programs supporting subtitles, subtitle area remains open even when no subtitles are available.

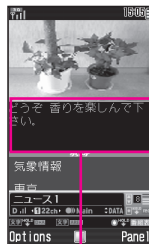

Subtitle Area

## Data Broadcast (Japanese Only)

Follow onscreen instructions to access text-based data broadcasts, including program-related information as well as interactive television services and more.

- Data broadcast information is viewable on 905SH only in portrait position.
- Data broadcast information viewing is free, however, using data links/related services incurs Network connection fees; Network connection confirmation appears each time.




Data Broadcast

## Basic Operations

By default, available information appears at the bottom of Display automatically. Data broadcast navigation varies by program.

Activate TV (Steps 1- 2 on P.6-9) then follow these steps:

**Navigate**  Navigate menus, execute commands, etc.

**Use**  to select an item → Press 

## Data Broadcast Settings

Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:

**Change View** View data broadcast on full Display

Press **Options** → **Select Change View (data)** →  
Press

- To cancel, press **TV**.

**Image Location** Select storage media for images obtained from data broadcast

Press **Options** → **Select Settings** → Press →  
**Select Set Broadcast Data** → Press → **Select Image Location** → Press → **Select Phone Memory or Memory Card** → Press

**Delete Station Data** Delete program-related/personal information saved from data broadcasts

### Deleting by Station

Press **Options** → **Select Settings** → Press →  
**Select Set Broadcast Data** → Press → **Select Delete Station Data** → Press → **Select a station** →  
Press **Options** → **Select Delete** → Press →  
Press **Yes**

### Deleting All

Press **Options** → **Select Settings** → Press →  
**Select Set Broadcast Data** → Press → **Select Delete Station Data** → Press → Press **Options**  
→ **Select Delete All** → Press → **Enter Handset Code** → Press → Press **Yes**

### Disclosure Settings

Show or hide Network connection confirmation  
Send, hide or confirm before sending location information  
Send or hide manufacture number

**Default** Notify Connection: On  
Location: Check Each Time  
Manufacture Number: Off

Press **Options** → **Select Settings** → Press →  
**Select Set Broadcast Data** → Press → **Select Notify Connection, Location or Manufacture Number**  
→ Press → **Choose On or Off** → Press

- For Location, select **On**, **Off** or **Check Each Time**.

## TV Link

Some programs offer links to information via the Mobile Internet. Save your favourite links to TV Link.

- TV Link Indicators:

	Note	Linked information
	Station Link	URL to access broadcast station server
	Mobile Link	URL to access Mobile Internet site

- Connection fees may apply.

## Saving TV Links


Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:

**1** Tune in to a program offering data broadcast then select a link source and press

- Link navigation varies by program. Follow onscreen instructions to save links.




### 1 Select TV Link and press



TV Link list appears.

To open properties, select a link → Press  **Options** →

Select **Information** → Press 


Press  to return.

To delete a link, select one → Press  **Options** → Select **Delete?** → Press  → Press  **Yes**

To delete all links, press  **Options** → Select **Delete All** → Press  → Enter Handset Code → Press  → Press  **Yes**

### 2 Select a link and press

Content appears.

- If the link has expired, **Rights expired.** appears. Press  to return to TV Link list.

### Recording Current Program

Record clips on Memory Card while watching TV.

- Insert a Memory card formatted for 905SH beforehand.
- Do not remove Memory Card while recording. Doing so may damage the card or result in lost files.
- Make sure there is enough free memory.
- If battery runs low while recording, recording stops. Charge battery while recording.
- Saved files cannot be copied/forwarded, attached to MMS or exported to other display devices.
- Estimated recording times for 256 MB Memory Card with no files or recordings are 80 minutes (Digital TV) and 72 minutes (Analogue TV).
- Save up to 100 Digital TV recordings on a Memory Card.
- Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:

### 1 Press for 1+ seconds

Recording starts.





- While recording, TV mode, channel list and active channel are all fixed; channels cannot be edited/saved.
- When provided, data broadcast is recorded at the same time. To record shows alone, see **P.6-14** "Set Recording".

To adjust volume or mute, see **P.6-9**.

- Volume is fixed for recordings.


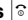



## 2 To stop, press for 1+ seconds

- Recording stops and is saved.
- To cancel and exit, press  ➔ Press  **No**
  - Press  **Yes** instead of  **No** to save recording and exit.

- Note** ▶
- Recording stops if Memory Card memory/battery runs low or when answering Video Calls while recording. (Recording is saved.)
  - Incoming calls or Voice Call conversations may affect analogue TV recording.
  - When a Memory Card file is set as Ringtone/Ringvideo, default Ringtone/Ringvideo may sound/play for calls received while recording.
  - Under copyright law, duplicated material is limited to private use. Unauthorised reproduction or use is prohibited.
  - Vodafone is not liable for any damages resulting from accidental loss or alteration of recordings.
  - Programs recorded onto Memory Card cannot be recopied to other media digitally.

### When Timer Recording Time Arrives

- Confirmation appears. To start timer recording, follow these steps to stop current recording and exit TV.  
**Press  ➔ Press  (Long Press) ➔ Press **
  - To exit Digital TV, then press  **Yes**.

### Copyright Protection

#### ■ Digital TV Recording

905SH encryption technology complies with ISDB-T mobile Video profile (SD-Video standard) for copyright protection. This technology prevents unauthorised copying or playback through data encryption and authentication.

#### ■ Analogue TV Recording






905SH encryption technology is applied to recordings based on each Vodafone handset number for copyright protection. This technology prevents copying or playback on mobile phones with different phone numbers through data encryption and authentication.

#### ■ Data Broadcast Recording Setting

- Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:
- Data broadcast content is only viewable in portrait mode.

#### Set Recording

Set 905SH to record shows alone or include text

Press  **Options** ➔ **Select Settings** ➔ Press  **Default** **Image + text** ➔  
**Select Set Broadcast Data** ➔ Press  ➔ **Select Set Recording** ➔ Press  ➔ **Select Image + text or Image only** ➔ Press 

## Playing Recorded Programs

Main Menu ▶ TV Player

### 1 Use to select "D" (Digital)

Video List appears.


- To play Analogue TV recordings, select "A".




### 2 Select a file and press

Playback starts. (The last played file plays from where it stopped.)

- After playback, Video List returns.

 To adjust volume or mute, see **P.6-9**.

- Alternatively, for Analogue TV recordings, use  to adjust volume.

 To pause playback, press  (Digital) or  (Analogue).

- To resume, press  (Digital) or  (Analogue) again.

 To fast forward/rewind, press  or .

- For Digital TV recordings, each press increases the speed.

Fast forwarding: 1.33x - 120x (five levels)

Fast rewinding: 2x - 120x (four levels)

(Sounds play faster in 1.33x fast forwarding.)

- To cancel, press .

### 3 To stop, press for 1+ seconds

- For Analogue TV recordings, press .

**Tip** ▶ During playback, press  **Options** to access the following.



- Subtitle/sound settings (see **P.6-10**)
- Data broadcast (see **P.6-11**)
- Adjust Brightness, Tone Control (see **P.6-19**, **P.6-20**)

## Video List Operations

**Rename** Change file name




Select a file ▶ Press  **Options** ▶ Select **Rename** ▶ Press  ▶ Enter name ▶ Press 

**Information** Open file properties

Select a file ▶ Press  **Options** ▶ Select **Information** ▶ Press  ▶ Press  to return.

**Delete** Delete files

### Deleting Single Files

Select a file ▶ Press  **Options** ▶ Select **Delete** ▶ Press  ▶ Press  **Yes**

### Deleting All Files

Press  **Options** ▶ Select **Delete All** ▶ Press  ▶ Enter Handset Code ▶ Press  ▶ Press  **Yes**

## TV Timer & Timer Recording

Save up to five timer entries to watch/record programs.

- Maximum continuous recording time per entry is 4 hours (when saving to Memory Card with capacity of 1 GB or more).
- If battery runs low while recording, recording stops. Charge battery while recording.

### Setting Timer via EPG

Main Menu ▶ TV

- 1 Select **Reservation List** and press
- 2 Press **Options**
- 3 Select **New Entry** and press
- 4 Select **From TV Listing** and press

EPG application starts.

- For more, read the instructions on the application.

### Setting Timer Manually

#### New Entry

Main Menu ▶ TV

- 1 Select **Reservation List** and press
- 2 Press **Options**
- 3 Select **New Entry** and press

- 4 Select **Manual** and press

- 5 Select **Programming (watching)** or **Recording and press**

- 6 Enter start date/time and press

- 7 Enter end date/time and press

The last watched channel is entered below **Channel:**. To proceed without changing any settings, skip ahead to Step 9.

- 8 Enter/edit items as needed

- Select an item and press . Complete selection/entry and press .

<b>Digital/Analogue:</b>	Select <b>Digital</b> or <b>Analogue</b>
<b>Channel:</b>	Select a channel
<b>TV station:</b>	Enter/edit station name
<b>Program:</b>	Enter program name
<b>Record TV data:</b>	Select <b>Image + text</b> or <b>Image only</b> (see P.6-14 "Set Recording")

- In addition, edit set date/time in **Start Date & Time:** or **End Date & Time:** or change timer type in **Program type:**.

- 9 Press **Save**

The entry is saved.

#### Timer Recording Precautions

- End the current operations.
- Adjust Antenna angle for better TV reception.
- Make sure battery is adequately charged. (Charge battery while recording.)
- Make sure there is enough free space on Memory Card.

## Error Messages

- Entry is not saved when the following messages appear. Check start date/time, end date/time or channel.
  - **Invalid ending data/time! Cannot save.**
  - **Reservation Times overlapping!**
  - **The maximum recording time is 4 hours.**

## Warning Messages

- Recording may fail or may not complete properly when the following messages appear. (Entry is saved.)
  - **Starting time passed already. Will be recorded from the middle.**
  - **Reservation Time partly overlapping!**
  - **No Memory Card. Reservation is saved correctly.**
  - **Low on free space! Please insert another memory card.**
  - **Please charge the battery before recording.**
  - **Recording may stop due to temperature raised by long time recording.**

## Timer Recording Time

- Digital TV reception is slightly delayed on handset. Therefore, portions aired immediately before the timer start time may be included in recordings.
  - Recording ends a few seconds after the timer end time.

## Edit/Delete Entries

Edit

Edit timer settings

Main Menu ▶ TV ▶ Reservation List

Select an entry ▶ Press  Options ▶ Select Edit ▶ Press  ▶ Edit (see Step 8 on P.6-16) ▶ Press  Save

Delete

Delete entries

Main Menu ▶ TV ▶ Reservation List


Select an entry ▶ Press  Options ▶ Select Delete ▶ Press  ▶ Press  Yes

## Reminder Settings






Activate TV (Steps 1- 2 on P.6-9) then follow these steps:

TV Alarm

Select timing/duration of TV Alarms and whether to sound Alarm tone, vibrate handset or illuminate Mobile Light with TV Alarm notices

 Default Alarm/Vibration/Light: On  
Reminder Time: 1 minute before  
Duration: 10 seconds






## Alarm (Tone)/Vibration/Mobile Light

Press  Options ▶ Select Settings ▶ Press  ▶ Select TV Alarm ▶ Press  ▶ Select Alarm, Vibration or Light ▶ Press  ▶ Choose On or Off ▶ Press 

## Reminder Time

Press  Options ▶ Select Settings ▶ Press  ▶ Select TV Alarm ▶ Press  ▶ Select Reminder Time ▶ Press  ▶ Select 1 minute before, 3 minutes before or 5 minutes before ▶ Press 

## Duration


Press  Options ▶ Select Settings ▶ Press  ▶ Select TV Alarm ▶ Press  ▶ Select Duration ▶ Press  ▶ Select 10 sec., 20 sec. or 30 sec. ▶ Press 



## At TV Alarm Time

TV and Alarm Activates. Alarm ends after the set duration. Recording starts at timer recording time.

- Timer activates even in closed position.
- **Finish application.** appears if TV cannot activate due to the current operation. To enable timer activation, press  to end the operation.

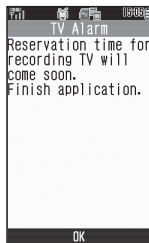

### Warning Messages

- If the following message appears, recording may fail or may not complete properly.
  - **Low on free space! Please insert another memory card.**
- If the following message appears, recording will not start.
  - **Cannot record Memory Card is not inserted. Please install it.**

### Recording Result

- **Could not start recording.** appears when recording failed due to low battery, no Memory Card, memory shortage, use of other functions, etc.
- **Recording aborted.** appears when recording was interrupted due to memory shortage, Memory Card removal, etc.

## Channel Lists

Edit the channel list created with channel setup (see **P.6-8**) or set up other channel lists.

- Save up to 10 channel lists (**Ch. List 1 - Ch. List 9** and **Ch. List 0**).
- Setup may not complete correctly depending on the area or service availability. Perform Update All or Update Further to update channels.

### Adding/Editing Channel Lists

Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:

#### Set Area Info Set up new channel lists

- Press  **Options** ➔ **Select Switch Ch. List to** ➔  
 Press  ➔ **Select a channel list** ➔ Press  **Options**  
 ➔ **Select Set Area Info** ➔ Press  ➔ **Select an area**  
 ➔ Press  ➔ **Select a prefecture** ➔ Press  ➔  
**Select a district** ➔ Press
- Channel setup starts (see **P.6-8**).

#### Set Channels Update channel lists

- Press  **Options** ➔ **Select Switch Ch. List to** ➔  
 Press  ➔ **Select a channel list** ➔ Press  **Options**  
 ➔ **Select Set Channels** ➔ Press  ➔ **Select Update**  
**All or Update Further** ➔ Press
- Channel setup starts (see **P.6-8**).
  - For **Update All**, confirmation appears. Press  **Yes**.

- Tip** ➤
- Select **Update All** to overwrite all channels in the list.
  - Select **Update Further** to add new channels to current list. (Digital TV channels assigned to the same keys are overwritten.)

**Change CH Name**

Rename channel lists

Press **Options** ➔ **Select Switch Ch. List to** ➔  
 Press ➔ **Select a channel list** ➔ Press **Options**  
 ➔ **Select Change CH Name** ➔ Press ➔ **Enter name** ➔ Press

**Reset**

Delete all channels in a channel list

Press **Options** ➔ **Select Switch Ch. List to** ➔  
 Press ➔ **Select a channel list** ➔ Press **Options**  
 ➔ **Select Reset** ➔ Press ➔ Press **Yes**

**Channels**

Activate TV (Steps 1- 2 on **P.6-9**) then follow these steps:

**Save Channel**

Save current channel to active channel list

Press **Options** ➔ **Select Save Channel** ➔ Press   
 ➔ **Select a key to assign** ➔ Press   
 To overwrite a saved channel, select one and press ➔  
 Press **Yes**

- Alternatively, press a key for 1+ seconds in TV window to assign current channel to it. To overwrite a saved channel, press **Yes**.

**Move**

Reassign channels to other keys by swapping positions between two channels

Press **Options** ➔ **Select Select/Edit Channel** ➔  
 Press ➔ **Select a channel** ➔ Press **Options** ➔  
**Select Move** ➔ Press ➔ Use to select a target key ➔ Press

**Delete**

Delete channels

Press **Options** ➔ **Select Select/Edit Channel** ➔  
 Press ➔ **Select a channel** ➔ Press **Options** ➔  
**Select Delete** ➔ Press ➔ Press **Yes**

**TV Settings****Navi Key Settings**

Assign key function to

Default: CH Switch

**Main Menu** ➔ **TV** ➔ **Setting** ➔ **Navi Key Settings**

**Select CH Switch or By Manual** ➔ Press

<b>CH Switch</b>	Toggle active channel list channels
<b>By Manual</b>	Toggle all receivable channels

**Adjust Brightness**

Set Display Brightness for TV viewing

Default: Auto

**Main Menu** ➔ **TV** ➔ **Setting** ➔ **Adjust Brightness**

Use to adjust level (1 to 5) or select **Auto** ➔ Press

**Note** ➔

- For **Auto**, Light Sensor (see **P.1-8 10**) detects ambient light level to adjust Display Brightness automatically. Brightness may take a moment to adjust immediately after opening 905SH or sudden changes in ambient light. Do not place labels or stickers over Light Sensor.
- This setting does not affect Backlight Brightness (see **P.11-8**).

**Tone Control**

Switch audio quality by content or set surround effect

■ Available for Digital TV.  
Default Normal

**Main Menu** ▶ TV ▶ Setting ▶ Tone Control

Select a mode ▶ Press

**Sound Output**

Select *Earphone* or *Loudspeaker*

Default Earphone

**Main Menu** ▶ TV ▶ Setting ▶ Sound Output

Select *Earphone* or *Loudspeaker* ▶ Press

- Audio is heard through Headphones even in Manner mode.

**Note** ▶ When *Loudspeaker* is set, audio cannot be heard from Headphones. Select *Earphone* in the above operation.

**Calls & Alarms**

Select a handset response to incoming calls or Alarm while watching TV

Default Voice/Video Call: Calls & Alarms, Alarm: Alarm Priority

**Main Menu** ▶ TV ▶ Setting ▶ Calls & Alarms

**Incoming Calls**

Select *For Voice Call* or *For Video Call* ▶ Press  ▶

Select *Calls & Alarms* or *Notice a Call* ▶ Press

**Alarm**

Select *Alarm* ▶ Press  ▶ Select *Alarm Priority* or *Alarm Notice* ▶ Press

<b>Calls &amp; Alarms/ Alarm Priority</b>	TV pauses for incoming calls or Alarm
<b>Notice a Call/ Alarm Notice</b>	A message appears for incoming calls or Alarm

**Auto Power Off**

Set TV to end automatically after a period of time (Auto Exit Time) or when handset is closed (Phone Closing)

Default Auto Exit Time: Off, Phone Closing: Off

**Main Menu** ▶ TV ▶ Setting ▶ Auto Power Off

**Auto Exit Time**

Select *Auto Exit Time* ▶ Press  ▶ Select *Off*, *10 min.*, *30 min.*, *60 min.* or *120 min.* ▶ Press

**Phone Closing**

Select *Phone Closing* ▶ Press  ▶ Choose *On* (TV ends when handset is closed) or *Off* ▶ Press

**Tip** ▶ Phone Closing *On* is effective only when TV is active. However, it does not apply during TV timer time or when handset is closed in Cycloid position.

**Activate TV**

Activate or cancel auto TV activation when Display is rotated to landscape in Standby

Default: Set Horizontal

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Turn Display to Activate TV

Select **Set Horizontal** or **Off** ▶ Press **■**

**Answer Call**

Activate or cancel auto call answer when Display is returned to portrait for incoming calls received when TV is on in landscape

Default: Off

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Turn Display to Answer Call

Select **Return to Normal (activate)** or **Off** ▶ Press **■**

# Analogue TV

## Watching Analogue TV

**Main Menu**

▶ TV

### 1 Select Analogue TV and press **■**

TV window opens.

Key Assignments: see P.6-7



### 2 Use Keypad to select a channel

• Other Channel Selection Methods:

<b>Channel Advance</b>	Press <b>■</b> <sup>1</sup>
<b>Auto Search</b>	Use <b>■</b> (Long Press) <sup>2</sup>
<b>Switch Channel List</b>	Press <b>☰</b> ▶ Use <b>↓</b> to select a list ▶ Press <b>■</b>

<sup>1</sup> Channels saved in the active channel list appear by default. To see all receivable channels, see P.6-19 "Navi Key Settings".

<sup>2</sup>When a stable signal is found, search stops automatically.

• Press a key for 1+ seconds to assign the current channel to that key for the active channel list (see P.6-19 "Save Channel").

Press **◀** (up) or **▶** (down) to adjust volume.

Press **▶** for 1+ seconds to mute.

■ To cancel, press **◀**.

Press **☰** for 1+ seconds to toggle Analogue and Digital TV.

### 3 To exit, press **⏏**

## Analogue & Digital TV Function Differences



- Functions unique to Digital TV:
  - Subtitle/sound settings (see **P.6-10**)
  - Data broadcast (see **P.6-11**)
  - TV Link (see **P.6-12**)
  - Disclosure settings (see **P.6-12**)
  - Tone Control (see **P.6-20**)
- Functions unique to Analogue TV:
  - Playback Jump (see right)
  - Edit Channel (see right)
  - Landscape (see **P.6-23**)

## Analogue TV Functions

**Playback Jump** Jump to specific points of the currently playing clip


**Main Menu** ▶ TV Player ▶ Use  to select "A" ▶ Play a file

### Jumping

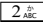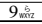Press  (jump to 12.5% point) -  (jump to 95.0% point).

### Starting Over

Press .






**Edit Channel** Rename or reassign channels; set channels to hide when navigating channels with 

**Main Menu** ▶ TV ▶ Analogue TV








### Renaming Channels

Press  **Options** ▶ Select **Select/Edit Channel** ▶  
 Press  ▶ Select a channel ▶ Press  **Options** ▶  
 Select **Edit** ▶ Press  ▶ Select **Name:** ▶ Press  ▶  
 Enter name ▶ Press  ▶ Press  **Save**

### Reassigning Channels

Press  **Options** ▶ Select **Select/Edit Channel** ▶  
 Press  ▶ Select a channel ▶ Press  **Options** ▶  
 Select **Edit** ▶ Press  ▶ Select **Channel Selected:**  
 ▶ Press  ▶ Select a channel ▶ Press  ▶  
 Press  **Save**

### Activating/Canceling Skip

Press  **Options** ▶ Select **Select/Edit Channel** ▶  
 Press  ▶ Select a channel ▶ Press  **Options** ▶  
 Select **Edit** ▶ Press  ▶ Select **Skip:** ▶ Press  ▶  
 Choose **On or Off** ▶ Press  ▶ Press  **Save**

Default Normal

Main Menu ▶ TV ▶ Setting ▶ Landscape

Select **Normal**, **Wide** or **Cinema** ▶ Press 

<b>Normal</b>	Standard 4:3 view with margins at both sides
<b>Wide</b>	Horizontally stretched widescreen view
<b>Cinema</b>	Enlarged view with the original aspect ratio maintained (top and bottom portions are cropped to fit Display)


## *FM Radio*

## Getting Started

- Keypad and battery cover heat up while using FM. Avoid prolonged contact with skin, and do not cover handset with paper, cloth, etc. May cause burn injuries or malfunction.
- 905SH FM (76.0-90.0 MHz) tuner is exclusively for Japan use.
- Do not use FM while driving or riding a bicycle. Accidents may result. Mobile phone use while driving is prohibited by the revised Road Traffic Law (effective 1 November 2004). Even as a pedestrian, to avoid accidents, always pay attention to your surroundings, especially when near level/road crossings.
- Incoming messages or nearby mobile phones may affect FM reception.

## Precautions

### Battery

When battery is low () , FM does not activate. If battery runs low during use, FM ends automatically.


### Antenna

For better FM reception, extend Antenna or connect Headphones.

- Extend Antenna fully. Adjust length for better audio quality when transmission source is near.
- When using Headphones, straighten cord for better reception.


### Charging

Use FM when battery is adequately charged or charging.

- If battery is low () FM will not activate even while charging.
- To avoid interference, separate Charger and Antenna.
- Charging takes longer when FM is active.



## Incoming Calls

FM pauses. Press  to answer; end call to return to FM. If battery is low, Main Menu or Multi Job window returns.

## Incoming Mail

A double beep sounds and a notice appears. Information window opens when handset returns to Standby.


## Poor Reception Areas

You may experience poor reception when:



- Far from or too close to broadcasting stations
- In mountainous areas or near buildings
- Aboard trains or in vehicles
- Near high-voltage lines, neon lights or wireless stations
- Near railroad tracks or highways
- In tunnels or underground shopping malls
- In any other areas where jamming signal exists or reception is unstable

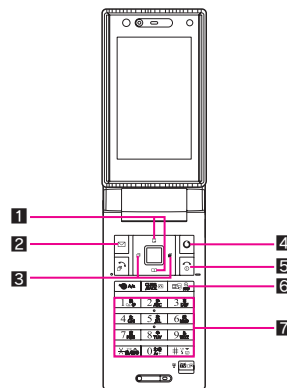

**Tip** ► Find stations automatically (see P.7-5 "Auto Search").

## Key Assignments



### 1 Volume Control

Press  (up) or  (down).

- Press  for 1+ seconds to mute. To cancel, press  (volume 1 returns).

### 2 Open Options Menu

### 3 Station Advance

- Press for 1+ seconds to find stations automatically (see P.7-5 "Auto Search").

### 4 Now On Air

### 5 Exit FM




### 6 Switch Station List

- Press for 1+ seconds to enter station directly.


### 7 Direct Station Access

- Press a key for 1+ seconds to assign current station to it.

### Help

- View a summary of key assignments.
  - **Activate FM and press**  **Options** ➔ **Select Help** ➔ **Press** 
    - Press  to return.

### Window Description

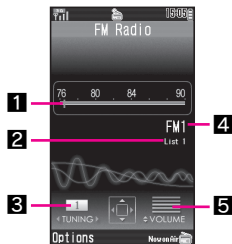

- 1** Frequency
- 2** Station List
- 3** Station Key
- 4** Station Name
- 5** Volume

### Handset Closed



- FM remains active even if handset is closed.
  - Activate Phone Closing (see P.7-8) to exit FM when handset is closed.

## Using FM Radio


### Station Setup

Before using FM for the first time, set up an area-based station list.

To edit list after setup or to set up another one, see P.7-6.

- 1** Press , select **FM Radio** and press .

*You can find available stations now. Start Auto Scan & Save?* appears.

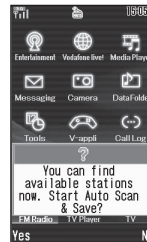

- 2** Press  **Yes**

Auto Scan & Save starts. When finished, station list appears.

- 3** Press .

FM window opens.

- 4** Press  to exit

## Listening

### 1 Press , select **FM Radio** and press

FM window opens.







 Key Assignments: see **P.7-3**

 Now On Air: see right









### 2 Use Keypad to select a station

- Other Station Selection Methods:

<b>Station Advance</b>	Use 
<b>Auto Search</b>	Use  (Long Press)*
<b>Direct Frequency Entry</b>	Press  (Long Press) → Enter a frequency → Press 
<b>Switch Station List</b>	Press  → Select a list → Press 

\*When a stable signal is found, search stops automatically.

- To change frequency by 0.1 MHz, see **P.7-8** "Navi Key Settings".
- Press a key for 1+ seconds to assign the current frequency to that key for the active station list (see **P.7-7** "Save Station").
  -  Press  (up) or  (down) to adjust volume.
  -  Press  for 1+ seconds to mute.
    - To cancel, press  (volume 1 returns).

### 3 Press to exit

## Now On Air









Access information (music title, artist name, etc.) on the current broadcast. Most content is in Japanese.


- Some programs may not provide information.
- 905SH connects to the Network to access information.

### Reception Area

Set a reception area for the active station list to access Now On Air information.

 **Main Menu** ▶ **FM Radio**

- 1 Press  **Options**
- 2 Select **Now On Air** and press 
- 3 Select **Set Area** and press 
- 4 Select an area and press 
- 5 Select a prefecture and press   
Reception area is set.  
 To start over from Step 4, press  **Edit**.
- 6 Press  to return

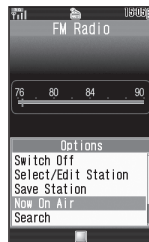

## Now On Air Reception Area

Area	Prefecture
Hokkaido/Tohoku	Hokkaido, Aomori, Iwate, Miyagi, Akita, Yamagata, Fukushima
Hokuriku/Koshinetsu	Niigata, Yamanashi, Nagano, Toyama, Ishikawa, Fukui
Kanto	Ibaraki, Tochigi, Gunma, Saitama, Chiba, Tokyo, Kanagawa
Tokai	Shizuoka, Aichi, Gifu, Mie
Kansai	Shiga, Kyoto, Osaka, Hyogo, Nara, Wakayama
Chugoku	Tottori, Shimane, Okayama, Hiroshima, Yamaguchi
Shikoku	Tokushima, Kagawa, Ehime, Kochi
Kyushu/Okinawa	Fukuoka, Saga, Nagasaki, Kumamoto, Oita, Miyazaki, Kagoshima, Okinawa

## Now On Air

Set a reception area before accessing information.

Main Menu ▶ FM Radio

### 1 Press (Now On Air )

Now On Air information appears.

- Browse information, open links, etc.

To return to FM window, press  **Options**


▶ Select **Exit** ▶ Press 



## Station Lists

Edit the station list created with station setup (see P.7-4) or set up another one. Save up to two station lists (**List 1** and **List 2**).

### Editing Station Lists


Activate FM (Step 1 in "Listening" on P.7-5; press  to switch station list) then follow these steps:

Auto Scan & Save

Refresh active station list

Press  **Options** ▶ Select **Search** ▶ Press  ▶ Select **Auto Scan & Save** ▶ Press  ▶ Select **Refresh List or Add Station** ▶ Press 

- Auto Scan & Save starts (see P.7-4).

For **Refresh List**, confirmation appears. Press  **Yes**.

Tip ▶

- Select **Refresh List** to overwrite all stations in the list.
- Select **Add Station** to add new stations to current list.

## Stations

Activate FM (Step 1 in "Listening" on P.7-5; press to switch station list) then follow these steps:

**Save Station** Save current station to active station list

Press **Options** → Select **Save Station** → Press → Select a key to assign → Press → Enter station name → Press

To overwrite a saved station, select one → Press → Press **Yes** → Enter station name → Press

- Alternatively, press a key for 1+ seconds in FM window to assign current station to it. Enter station name and press to complete.

**Station Name** Edit station name

Press **Options** → Select **Select/Edit Station** → Press → Select a station → Press **Options** → Select **Edit** → Press → Select **Station Name** → Press → Enter name → Press → Press **Save**

## Frequency

Charge station frequency

### Auto Search

Press **Options** → Select **Select/Edit Station** → Press → Select a station → Press **Options** → Select **Edit** → Press → Select **Frequency** → Press → Select **Auto Search** → Press → Select **Search Upwards** or **Search Downwards** → Press → Press → Press **Save**

### Manual Search

Press **Options** → Select **Select/Edit Station** → Press → Select a station → Press **Options** → Select **Edit** → Press → Select **Frequency** → Press → Select **Manual Search** → Press → Use to select frequency → Press → Press **Save**

## Move

Reassign stations to other keys

Press **Options** → Select **Select/Edit Station** → Press → Select a station → Press **Options** → Select **Move** → Press → Use to select a target key → Press

## Delete

Delete saved station

Press **Options** → Select **Select/Edit Station** → Press → Select a station → Press **Options** → Select **Delete** → Press → Press **Yes**

# FM Settings

**Sound Output** Select **Earphone** or **Loudspeaker**

Default: Earphone

**Main Menu** ▶ FM Radio ▶ Options (☰) ▶ Settings ▶ Sound Output

Select **Earphone** or **Loudspeaker** ▶ Press

- Audio is heard through Headphones even in Manner mode.

**Note** ▶ When **Loudspeaker** is set, audio cannot be heard from Headphones. Select **Earphone** in the above operation.

**Auto switch off** Set FM to end automatically after 30, 60 or 90 minutes

Default: Off

**Main Menu** ▶ FM Radio ▶ Options (☰) ▶ Settings ▶ Auto switch off

Select **Off**, **after 30min.**, **after 60min.** or **after 90min.** ▶ Press

**Phone Closing** Set FM to end when handset is closed

Default: Off

**Main Menu** ▶ FM Radio ▶ Options (☰) ▶ Settings ▶ Phone Closing

Choose **On** (FM ends when handset is closed) or **Off** ▶ Press

**Navi Key Settings**

Assign key function to

Default: Switch Station

**Main Menu** ▶ FM Radio ▶ Options (☰) ▶ Settings ▶ Navi Key Settings

Select **Switch Station** or **Manual Search** ▶ Press

**Switch Station** Toggle active station list stations

**Manual Search** Change frequency by 0.1 MHz

**Switch List to** Switch active station list

Default: List 1

**Main Menu** ▶ FM Radio ▶ Options (☰) ▶ Settings ▶ Switch List to

Select **List 1** or **List 2** ▶ Press

## *Camera*

# Getting Started

905SH features a 2.0 megapixel CCD camera. Capture still images (see **P.8-5**) or record video (see **P.8-8**).

**Tip** ▶ Use Internal Camera (see **P.1-7 9**) or External Camera (see **P.1-7 34**); unless otherwise noted, mobile camera operations are described for External Camera.

## Mobile Camera Basics

- Clean dust/smudges from lens cover (see **P.1-7 34**) with a soft cloth before use.
- Handset movement may blur images; hold 905SH firmly or place it on a stable surface and use Self-timer.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Subjecting the lens to direct sunlight will damage the camera's colour filter.

### Shutter Click

- Shutter click volume is fixed, and sounds even in Manner mode.
- To change shutter click sound for still images, see **P.8-16**.

### Incoming Calls/Alarm while Using Camera

- Mobile camera shuts down for incoming calls and Alarm. End the call or close Alarm Time notice to reactivate camera.
- When recording video, Alarm Times are announced after exiting mobile camera.
- Captured image/recorded video is temporarily saved. End the call or close Alarm Time notice to return.

### Precautions for Video Recording

- When battery is low, Video Camera is not available. If battery runs low while recording video, recording stops. (Recorded video is saved.)

### Auto Shut-off

- Before image capture, mobile camera shuts down after three minutes of inactivity and handset returns to Standby.


### Exporting Images

- View images and video on PCs, TVs or other display devices via optional Video Cable (see **P.11-9** "Viewing Images on External Devices").



## Camera Display Indicators

### Photo Camera Mode

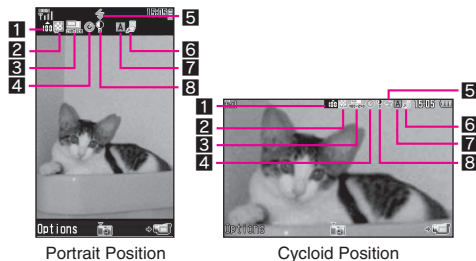

Portrait Position

Cycloid Position

#### 1 Capacity (see P.8-5)

- 101 or more
- Red background: 3 or less

#### 2 Picture Quality (see P.8-18)

- Normal, Fine, High Quality

#### 3 Picture Size (see P.8-18)

#### 4 Self-timer (see P.8-11)

- Self-timer Active

#### Continuous Shoot (see P.8-12)

- Captured/Total

- 4 Pictures, 9 Pictures,

- Overlapped, Bracket

- etc.: Self-timer and Continuous Shoot are active.

- Index Image (composite image for Overlapped) is on Display.

#### 5 Mobile Light (see P.8-17)

- On, Automatic, Low Light

#### 6 Save to (see P.8-20)

- Handset, Memory Card (Pictures),  
Memory Card (DCIM), Ask Each Time


#### 7 Scene (see P.8-18)

- Automatic, Night, Sports, Characters

#### 8 Exposure (see P.8-17)

- Dark ◀ Standard ▶ Bright

### Video Camera Mode

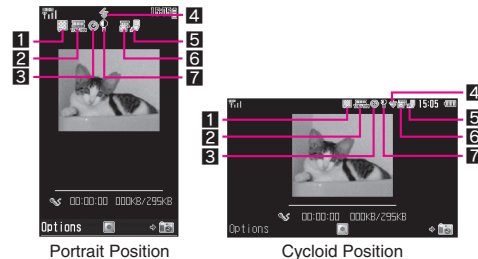

Portrait Position

Cycloid Position

#### 1 Video Quality (see P.8-18)

- Normal, Fine, High Quality

#### 2 Record Size (see P.8-19)

#### 3 Self-timer (see P.8-11)

- Self-timer Active

#### 4 Mobile Light (see P.8-17)

- On, Auto

#### 5 Save to (see P.8-20)

- Handset, Memory Card, Ask Each Time


**6 Record Time (see P.8-19)**

: For Message, : Extended Video (3GP),

: Extended Video (ASF), : Extended Video (Large, Small)

**7 Exposure (see P.8-17)**

Dark ◀ Standard ▶ Bright

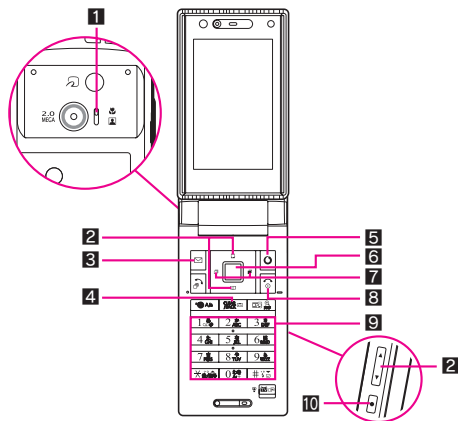**Key Assignments****1 Portrait ()/Macro () Selector**

Slide to Macro to capture images as close as 10 cm. Allow at least 80 cm for Portrait.

**2 Digital Zoom**

/◀ (zoom in), /▶ (zoom out)

**3 Options****4 Cancel****5 Toggle Mode****6 Shutter****7 Exposure**

(darker), (brighter)

**8 End****9 Function Shortcuts**

Activate mobile camera and press the following keys to use the corresponding functions.

	Maximise or cancel Digital Zoom
	Hide indicators to frame image on full Display (see <b>P.8-16</b> "Hide Indicators/Normal Finder")
	Toggle Viewfinder size (see <b>P.8-17</b> "Display Size")
	Switch save location (see <b>P.8-20</b> "Save to")
	Change image size (see <b>P.8-18</b> "Picture Size" or <b>P.8-19</b> "Record Time/Size")
	Switch Scene options for image capture (see <b>P.8-18</b> )
	Turn Microphone on/off for video recording (see <b>P.8-19</b> )
	Change image quality (see <b>P.8-18</b> )
	Activate/cancel Self-timer (see <b>P.8-11</b> )
	Change Mobile Light colour while the light illuminates (see <b>P.8-17</b> )
	Open Help (see <b>P.8-5</b> )
	Toggle between Internal Camera and External Camera (see <b>P.8-20</b> "Internal Camera/External Camera")
	Turn Mobile Light on/off (see <b>P.8-17</b> )

- Available options vary by selected image capture mode/Display position. For details, see **P.8-7** - **8-8** "Still Image Functions" and **P.8-10** "Video Recording Operations".

**10 Shutter**

## Help

■ Activate mobile camera and press **0** to view a summary of key assignments.

■ Press **↓** to scroll down.

■ Press **□** to return.

**Alternatively, press **☰** **Options** ➔ **Select Help** ➔**

**Press **□****

## Still Images

### Photo Camera Mode

Capture images to send via MMS, save as Wallpaper, etc.  
Various settings and functions are available for camera use.

<b>Picture Size</b>	<b>Portrait</b> W 1224 x H 1632 dots W 960 x H 1280 dots (Quad-VGA) W 768 x H 1024 dots (XGA) W 480 x H 640 dots (VGA) W 240 x H 400 dots W 240 x H 320 dots (QVGA) W 120 x H 160 dots (QQVGA)
	<b>Cycloid Position</b> W 1200 x H 720 dots W 400 x H 240 dots
	<b>Internal Camera (Portrait Position Only)</b> W 240 x H 320 dots (QVGA) W 120 x H 160 dots (QQVGA)

<b>Format</b>	JPEG (.jpg) <sup>1</sup>
<b>Save Location</b>	Handset Data Folder (Pictures) or Memory Card Data Folder (Pictures/DCIM <sup>2</sup> )
<b>Picture Quality</b>	Normal/Fine/High Quality
<b>Digital Zoom</b>	<b>Portrait</b> W 1224 x H 1632 dots: None W 960 x H 1280 dots: 1 - 1.25x W 768 x H 1024 dots: 1 - 1.6x W 480 x H 640 dots: 1 - 2.5x W 240 x H 400 dots: 1 - 4x W 240 x H 320 dots: 1 - 10x W 120 x H 160 dots: 1 - 20x <b>Cycloid Position</b> W 1200 x H 720 dots: None W 400 x H 240 dots: 1 - 3x <b>Internal Camera (Portrait Position Only)</b> W 240 x H 320 dots: None W 120 x H 160 dots: 1 - 2x
<b>MMS Attachment</b>	OK
<b>Memory Capacity</b>	Portrait position: 1,270 files <sup>3</sup> Cycloid position: 1,010 files <sup>3</sup>

<sup>1</sup>Default file names appear as *Image001.jpg*, *Image002.jpg*, etc.

<sup>2</sup>Save W 480 x H 640 dots or larger images.

<sup>3</sup>Approximate values for handset Data Folder, with default image size and quality.

- Tip** ▶
- Select storage media beforehand or each time you save an image (see **P.8-20** "Save to").
  - Saved video, Chaku-Uta®, melodies or V-applications reduce still image memory.
  - To check memory status, see **P.10-2**.
  - Images captured in portrait position at or above W 480 x H 640 dots are saved as landscape images. (Images appear as portrait images when viewed on 905SH.)
    - Open image Details and see Resolution for true image dimensions and orientation.
  - Images captured in Cycloid position are saved as portrait images. (Images also appear as portrait images when viewed on PCs.)

## Capturing Still Images

Main Menu ▶ Camera

### 1 Frame image on Display

- In Video Camera mode, press (+ ) to switch to Photo Camera.
- Key Assignments: see **P.8-4**
- Special Shooting Modes: see **P.8-11**
- Camera Settings: see **P.8-16**



Photo Camera

### 2 Press or

Shutter clicks and the captured image appears on Display.

- When Auto Save is active, captured image is saved automatically and Viewfinder returns.
- To start over, press .
- To send image via MMS, press (M) ➔ Perform from Step 3 on **P.15-7**



### 3 Press to save



Image is saved and Viewfinder returns for another shot.

- When confirmation for save location appears, select a location ➔ Press
- To open saved images, see **P.8-11** "Opening Still Images".

### 4 Press to exit


## Tip ► When Captured Image is Unsaved

**Finished?** appears when closing mobile camera before returning to Viewfinder.

- Press  **Yes** to end. Handset returns to Standby.
- Press  **No** to return to captured image.

### Cycloid Position


- Activate mobile camera and rotate Display clockwise to capture images in Cycloid position.

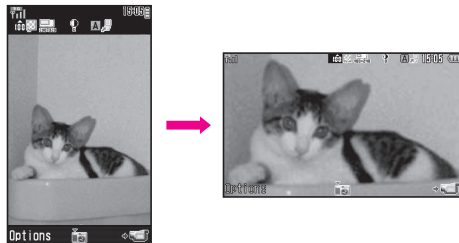

- Viewfinder orientation does not change if handset is rotated while Options menu appears, during camera startup or while saving captured images; return to portrait position then try again from Viewfinder window.

## Still Image Functions

### Before Image Capture

Press  **Options** to use the following functions:

<b>Exposure</b>	Adjust amount of light (see P.8-17)	
<b>Picture Size</b>	Select image size (see P.8-18)	
<b>Picture Quality</b>	Select <b>Normal</b> , <b>Fine</b> or <b>High Quality</b> (see P.8-18)	
<b>My Pictures</b>	Access Data Folder files (see P.8-11)	
<b>Modes<sup>1</sup></b>	<b>Mobile Light</b>	Select mode and colour (see P.8-17)
	<b>Scene</b>	Select a mode according to lighting or subject (see P.8-18)
	<b>Self-timer</b>	Set Self-timer (see P.8-11)
	<b>Add Frame<sup>2</sup></b>	Add frames (see P.8-14)
	<b>Continuous Shoot<sup>2</sup></b>	Capture images sequentially (see P.8-12)
	<b>Camera Effects<sup>2</sup></b>	Capture images with special effects (see P.8-15)
<b>Settings</b>	<b>Hide Indicators/Normal Finder<sup>3</sup></b>	Hide indicators to frame image on full Display (see P.8-16)
	<b>Shutter Sound</b>	Change shutter click sound (see P.8-16)
	<b>Save Pictures to</b>	Select handset or Memory Card (see P.8-20)
	<b>Auto Save</b>	Select whether to save captured image automatically (see P.8-20)

<sup>1</sup> Available for External Camera.


<sup>2</sup> Available in portrait position only.

<sup>3</sup> Available in portrait (Picture Size: **240 x 400**) and landscape.

<b>Internal Camera/ External Camera<sup>2</sup></b>	Toggle between Internal Camera and External Camera (see <b>P.8-20</b> )
<b>Help</b>	View a summary of key assignments for portrait position (see <b>P.8-5</b> )

<sup>2</sup>Available in portrait position only.

### Before Saving

Press  **Options** to use the following functions:

<b>Save pictures to</b>	Select handset or Memory Card (see <b>P.8-20</b> )
<b>My Pictures</b>	Access Data Folder; delete saved files

# Video

## Video Camera Mode

Record short video clips to send via MMS. Use Memory Cards to save long recordings (recording time depends on the card capacity).

<b>Image Size</b>	W 240 x H 176 dots (HQVGA) W 176 x H 144 dots (QCIF) W 128 x H 96 dots (SubQCIF)	W 480 x H 640 dots (VGA) W 240 x H 320 dots (QVGA)	
<b>Format</b>	MPEG-4 or H263 (.3gp) <sup>1,2</sup>	MPEG-4 (.3gp) <sup>1</sup>	MPEG-4 (.ASF) <sup>3</sup>
<b>Save Location</b>	Handset or Memory Card Data Folder (Videos) <sup>4</sup>	Memory Card Data Folder (Videos)	Memory Card (SD VIDEO)
<b>Video Quality</b>	Normal/Fine/High Quality	High Quality	
<b>Digital Zoom</b>	Up to 4.6x		
<b>MMS Attachment</b>	OK		N/A
<b>Recording Time (per shot)</b>	<b>For Message<sup>5</sup></b>	Approx. 60 seconds (Normal) Approx. 50 seconds (Fine) Approx. 30 seconds (High Quality)	—
	<b>Extended Video</b>	30 minutes	Capacity-based

<sup>1</sup>Default file names appear as **video0001.3gp**, **video0002.3gp**, etc.

<sup>2</sup>MPEG-4 only for HQVGA.

<sup>3</sup>Default file names appear as **MOL001.ASF**, **MOL002.ASF**, etc.

<sup>4</sup>Memory Card only for HQVGA.

<sup>5</sup>Maximum time for SubQCIF and QCIF.

- Tip ▶**
- For best results, record within 1.5 metres, in good light.
  - Select storage media beforehand or each time you save a video file (see **P.8-20** "Save to").
  - Saved still images, Chaku-Uta®, melodies or V-applications reduce video memory.
  - To check memory status, see **P.10-2**.

## Recording Video

Make sure battery is adequately charged and there is enough free memory before recording video. When battery is low, Video Camera is not available. If battery runs low or memory becomes full while recording video, recording stops.

Main Menu ▶ Camera


### 1 Press (+ )

Video Viewfinder appears.

- Omit this step if Video Camera is already active.

### 2 Frame image on Display

- Key Assignments: see **P.8-4**
- Special Shooting Modes: see **P.8-11**
- Camera Settings: see **P.8-16**

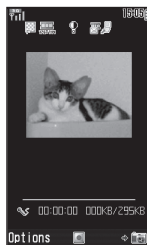

Video Camera

### 3 Press or

Recording begins after a tone.

- To start over, press .

### 4 To stop, press or

Recording stops with a tone.

- Recording stops automatically when maximum recording time is reached or memory becomes full.

- When Auto Save is active, recorded video is saved automatically and Viewfinder returns.

- To play back, select **Preview** ▶

Press .

- Press during playback to toggle Display Size.

- To start over, press .

### 5 To save, select **Save** and press

Video is saved and Viewfinder returns for another shot.


- When confirmation for save location appears, select a location ▶ Press .

### 6 Press to exit

**Tip ▶** When Recorded Video is Unsaved


**Finished?** appears.

- Press **Yes** to end. Handset returns to Standby.
- Press **No** to return to Menu.

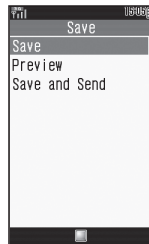

## Video Recording Operations

### Before Recording

Press  **Options** to use the following functions:

<b>Exposure</b>	Adjust amount of light (see <b>P.8-17</b> )	
<b>Record Time/Size</b>	Select a format based on recording time and image size (see <b>P.8-19</b> )	
<b>Video Quality<sup>1</sup></b>	Select <b>Normal</b> , <b>Fine</b> or <b>High Quality</b> (see <b>P.8-18</b> )	
<b>My Videos</b>	Access Data Folder files (see <b>P.8-11</b> )	
<b>Modes</b>	<b>Mobile Light<sup>2</sup></b>	Select mode and colour (see <b>P.8-17</b> )
	<b>Self-timer<sup>2</sup></b>	Set Self-timer (see <b>P.8-11</b> )
	<b>Display Size<sup>3</sup></b>	Change Viewfinder size (see <b>P.8-17</b> )
<b>Settings</b>	<b>Microphone</b>	Activate to record sound (see <b>P.8-19</b> )
	<b>Video Encode<sup>3</sup></b>	Select a video encoding format (see <b>P.8-19</b> )
	<b>Save Videos to<sup>4</sup></b>	Select handset or Memory Card (see <b>P.8-20</b> )
	<b>Auto Save</b>	Select whether to save recorded video automatically (see <b>P.8-20</b> )

<sup>1</sup>Available for SubQCIF, QCIF and HQVGA.

<sup>2</sup>Available for External Camera.

<sup>3</sup>Available for SubQCIF and QCIF.

<sup>4</sup>Available when Record Time/Size is set to **For Message**.

<b>Internal Camera/ External Camera<sup>3, 5</sup></b>	Toggle between Internal Camera and External Camera (see <b>P.8-20</b> )
<b>Help<sup>5</sup></b>	View a summary of key assignments for standard position (see <b>P.8-5</b> )

<sup>3</sup>Available for SubQCIF and QCIF.

<sup>5</sup>Available in portrait position only.

### Before Saving

The following menu items appear after recording:

<b>Save</b>	Save video to handset or Memory Card (see <b>P.8-9</b> )
<b>Preview</b>	Play video (see <b>P.8-9</b> )
<b>Save and Send<sup>*</sup></b>	Attach video to MMS Mail (see <b>P.8-16</b> )

<sup>\*</sup>Available when Record Time/Size is set to **For Message**. If **Send&Not Save** is set for Send File Settings (see **P.15-28**), **Multimedia** appears.



# Opening Images & Playing Video

To open files from Data Folder, see **P.10-5**.

## Opening Still Images

**Main Menu** ▶ **Camera** ▶ **Activate Photo Camera**

- 1 Press **Options**
- 2 Select **My Pictures** and press
  - When Memory Card is inserted, select **Pictures** or **Camera Images** (DCIM) ▶ Press
    - To switch between 905SH and Memory Card, press **Options** ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press
  - To open a created sub folder or a sub folder in DCIM, select it ▶ Press
- 3 Select a file and press
  - To open other files, press ▶ Select one ▶ Press

## Playing Video

**Main Menu** ▶ **Camera** ▶ **Activate Video Camera**

- 1 Press **Options**
- 2 Select **My Videos** and press
  - To switch between 905SH and Memory Card, press **Options** ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press
  - To open a created sub folder, select it ▶ Press
- 3 Select a file and press 

Video plays. Press to pause/resume playback.

  - To play other files, press ▶ Select one ▶ Press

SD Video

Play QVGA or VGA size (.ASF) video

**Main Menu** ▶ **Media Player** ▶ **Videos** ▶ **SD VIDEO**

Select a file ▶ Press

To open other files, press ▶ Select one ▶ Press

# Special Shooting Modes

## Self-timer

Delay shutter release by 10 seconds after Shutter Key is pressed to capture still images or record video.

- Switch to External Camera to use Self-timer.
- Follow these steps before capturing an image (after Step 1 on **P.8-6**) or recording video (after Step 2 on **P.8-9**).
- Self-timer is **Off** by default.

- 1 Press **Options**
- 2 Select **Modes** and press
- 3 Select **Self-timer** and press
- 4 Choose **On** and press 

Viewfinder returns (⊙ appears).

  - To cancel, choose **Off** ▶ Press
- 5 Frame image on Display and press or 


Tone sounds and countdown starts.

  - After 10 seconds, shutter is released and captured image appears or video recording starts.
  - To cancel Self-timer during countdown, press **Cancel**.
    - Viewfinder returns. (Self-timer remains active.)

## 6 Saving Still Images

### 1 Press

Self-timer is cancelled and Viewfinder returns.


- When confirmation for save location appears, select a location ➔ Press 

### Saving Video

#### 1 To stop, press

#### 2 To save, select **Save and press**

Self-timer is cancelled and Viewfinder returns.


- When confirmation for save location appears, select a location ➔ Press 

## 7 Press to exit

- When Captured Image/Recorded Video is Unsaved: see **P.8-7** or **P.8-9**

**Note** ▶ Self-timer is not available when shooting speed for Continuous Shoot (see **P.8-13**) is **Manual**.

#### Self-timer Details

- To release shutter manually during countdown, press . Image is captured or video recording starts and Self-timer is cancelled.
- Incoming calls and Alarm interrupt countdown. (Self-timer remains active.)
- Available functions during countdown are Zoom, Mobile Light and Exposure.

## Continuous Shoot (Photo Camera)



Capture a series of 4 or 9 separate images automatically with a single press of the Shutter Key. Select from three speed settings or choose the manual option to control the rate at which images are captured.

<b>4 Pictures</b> <sup>1</sup>	Capture four separate images with Index Image <sup>2</sup>
<b>9 Pictures</b> <sup>3</sup>	Capture nine separate images with Index Image <sup>2</sup>
<b>Overlapped</b> <sup>3</sup>	Capture five images to create a composite image
<b>Bracket</b> <sup>3</sup>	Capture nine separate images with Index Image <sup>2</sup> . Exposure and Mobile Light colour vary slightly for each shot.

<sup>1</sup>Available when Picture Size is **480 x 640** or smaller. (Index image is not created for **480 x 640**.)

<sup>2</sup>Index Image consists of reduced images of each shot.

<sup>3</sup>Available when Picture Size is **240 x 400** or smaller.

- Press  or  for the first shot. Handset captures the rest automatically.
- In 4 Pictures or 9 Pictures mode, select shutter interval from three levels, or select **Manual** to release shutter manually.
- Switch to External Camera to use Continuous Shoot.
- Available in portrait position only.


- Follow these steps before capturing an image (after Step 1 on P.8-6).

**1** Press  **Options**

**2** Select **Modes** and press 

**3** Select **Continuous Shoot** and press 

**4** Select from **4 Pictures** to **Bracket** and press 

- To cancel, choose **Off** → Press  (Omit the next steps.)





**5** Select **speed** and press 

Viewfinder returns with the corresponding indicator (see P.8-3).



- Manual** is not available when Self-timer (see P.8-11) is active.
- Available shooting speed options vary by selected Picture Size.


**6** Frame image on **Display** and press  or 

The first frame is captured with subsequent frames captured at selected speed.

- For manual control (4 Pictures and 9 Pictures modes), press  or  for each frame.
- To stop before capturing all frames, press  **Cancel**.
- To save captured images, skip ahead to Step 8.
- To discard captured images, press . (Viewfinder returns with Continuous Shoot active.)


## 7 Index Image or a composite image appears

- When Picture Size is **480 x 640**, the first captured image appears.
- Use  to toggle between frames and Index Image.
  - To save images individually, select a frame or Index Image and proceed to Step 8.
- To send image via MMS, press  (M)
  - Perform from Step 3 on P.15-7

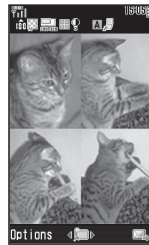

4 Pictures

## 8 To save, press

- When confirmation for save location appears, select a location → Press 

## 9 Saving All Images




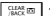
### 1 Select All Pictures and press

Images are saved and Viewfinder returns with Continuous Shoot active.

### Saving the Selected Image

#### 1 Select Selected Picture and press

Image is saved and captured image returns with Continuous Shoot active.



- To save other images, use  to select one → Press  → Select **Selected Picture** → Press 
  - Press  to return to Viewfinder.

## 10 Press to exit

- When Captured Image is Unsaved: see P.8-7


**Note** ▶ In low light or while Mobile Light is on, shooting speed may slow down.

**Tip** ▶ **When Only Selected Image is Saved**  
**Finished?** appears when closing mobile camera before returning to Viewfinder.

- Press  **Yes** to end. Handset returns to Standby.
- Press  **No** to return to captured image.

### Adding Frames (Photo Camera)



- In addition to Preset Frames, use transparent PNG files (40 KB or smaller) obtained via Web, MMS, etc.
- Select Picture Size **240 x 400** or smaller to add frames.
- Switch to External Camera to add frames.
- Available in portrait position only.
- Follow these steps before capturing an image (after Step 1 on P.8-6); after Viewfinder returns, complete image capture.

- 1** Press  **Options**
- 2** Select **Modes** and press 
- 3** Select **Add Frame** and press 

## 4 Preset Frames

**1** Select **Preset Frames** and press 

**2** Select a frame and press 




- To check frames, select one and press  **View**.
  - Press  to return.

### Original Frames

**1** Select **My Pictures** and press 

- Some images may not be used as a frame.

**2** Select a frame and press 

- To check frames, select one and press  **Options** →  
Select **View** → Press 
  - Press  to return.

**3** Press 

### Cancelling

**1** Choose **Off** and press 

**Tip** ▶ In Continuous Shoot, frame is added to each image.

## Camera Effects (Photo Camera)

Capture images with special effects.




- Select Picture Size **240 x 400** or smaller to use Camera Effects.
- Switch to External Camera to use Camera Effects.
- Available in portrait position only.
- Follow these steps before capturing an image (after Step 1 on **P.8-6**); after Viewfinder returns, complete image capture.

**1** Press  **Options**

**2** Select **Modes** and press 

**3** Select **Camera Effects** and press 

**4** Select an effect and press 

- To check effects, press  **View**.
- Press  to return.
- To cancel, choose **Off** ➔ Press 


## Sending Images

### Still Images

Capture and send images as MMS Mail attachments.


To attach images in Data Folder, see **P.10-8**.

#### 1 Capture an image



- Perform Steps 1 - 2 on **P.8-6**.
- To attach Continuous Shoot images, after Step 7 on **P.8-13**, use  to select a frame or Index Image.

#### 2 Press ()

Image is saved to Data Folder and Mail Composition window opens with image attached.

- To attach images without saving to Data Folder, see **P.15-28** "Send File Settings".
- When confirmation for save location appears, select a location ➔ Press 

#### 3 Complete other fields and send MMS Mail (perform from Step 3 on **P.15-7**)

**Note** ➤ When  () is pressed in Cycloid position, Mail Composition window appears rotated 90 degrees. Return to portrait position to complete and send MMS Mail.

**Tip** ➤ Make sure recipient's handset is attachment-compatible. For information about Mail service and compatibility with other handset models, contact Vodafone Customer Centre, General Information (see **P.20-26**).

## Video Clips

Send recorded video clips via MMS.



- For details of attachable files, see the table on **P.8-8**.
- To attach video files saved in Data Folder, see **P.10-8**.

### 1 Record video (perform Steps 1 - 4 on P.8-9)

### 2 Select **Save and Send** and press

Video is saved to Data Folder and Mail Composition window opens with the video file attached.

- To attach video without saving to Data Folder, see **P.15-28** "Send File Settings".

 When confirmation for save location appears, select a location  $\rightarrow$  Press 

### 3 Complete other fields and send MMS Mail (perform from Step 3 on P.15-7)

- Note**  $\blacktriangleright$
- Send video clips to MMS- or VGS-compatible Vodafone handsets.
  - Only MPEG 4-compatible Vodafone handsets support video files recorded on 905SH.

- Tip**  $\blacktriangleright$  For information about Mail service and compatibility with other handset models, contact Vodafone Customer Centre, General Information (see **P.20-26**).

## Camera Settings



- Available options vary by selected image capture mode.
- Shortcut keys are assigned to some functions (see **P.8-4** "Function Shortcuts").

### Shooting Options




Follow these steps before capturing an image (after Step 1 on **P.8-6**) or recording video (after Step 2 on **P.8-9**); after Viewfinder returns, complete image capture/recording.

#### Hide Indicators/ Normal Finder

Hide indicators to frame image on full Display



Photo Camera		Video Camera	
--------------	--	--------------	---

\*Available in portrait (Picture Size: **240 x 400**) and landscape.



Press  **Options**  $\rightarrow$  **Select Settings**  $\rightarrow$  Press   $\rightarrow$  **Select *Hide Indicators* or *Normal Finder***  $\rightarrow$  Press 

#### Shutter Sound

Change shutter click sound

Photo Camera		Video Camera	
--------------	--	--------------	---

Press  **Options**  $\rightarrow$  **Select Settings**  $\rightarrow$  Press   $\rightarrow$  **Select *Shutter Sound***  $\rightarrow$  Press   $\rightarrow$  **Select a pattern**  $\rightarrow$  Press 

-  To check sound, select a pattern and press  **Play**.
- Volume is fixed.
  - Shutter click sound for Continuous Shoot is unique and fixed.

## Mobile Light

Select mode and colour

Photo Camera	<input type="radio"/>	Video Camera	<input type="radio"/>
--------------	-----------------------	--------------	-----------------------

<sup>1</sup>Available for External Camera.<sup>2</sup>**Low Light** is not available.

Default: Off/White

## Mode

Press **Options** ➔ **Select Modes** ➔ Press ➔ **Select Mobile Light** ➔ Press ➔ **Select Switch On/Off** ➔ Press ➔ **Select a mode** ➔ Press

- Setting returns to default after exiting mobile camera.

<b>On</b>	Mobile Light activates (and brightens for still image capture)
<b>Automatic</b>	Mobile Light activates when light is low and brightens for image capture
<b>Low Light</b>	Mobile Light activates and brightness is constant

## Colour

Press **Options** ➔ **Select Modes** ➔ Press ➔ **Select Mobile Light** ➔ Press ➔ **Select Light Colour** ➔ Press ➔ **Select a colour** ➔ Press

To return to Viewfinder, press ➔ Press ➔ Press

- Note** ▶
- Do not use Mobile Light near people's faces or look into the light yourself.
  - Even when **On** or **Automatic** is selected, Mobile Light may not illuminate if battery is low.

## Display Size

Change Viewfinder size for video

Photo Camera	<input type="checkbox"/>	Video Camera	<input type="checkbox"/>
--------------	--------------------------	--------------	--------------------------

<sup>\*</sup>Available when Record Time/Size is SubQCIF or QCIF.

Default: Original Size

Press **Options** ➔ **Select Modes** ➔ Press ➔ **Select Display Size** ➔ Press ➔ **Select Original Size or Enlarge** ➔ Press

## Image Settings

Follow these steps before capturing an image (after Step 1 on **P.8-6**) or recording video (after Step 2 on **P.8-9**); after Viewfinder returns, complete image capture/recording.

## Exposure

Adjust brightness for still images and video

Photo Camera	<input type="radio"/>	Video Camera	<input type="radio"/>
--------------	-----------------------	--------------	-----------------------

Default: 0 (standard)

Press **Options** ➔ **Select Exposure** ➔ Press ➔ **Use to adjust level**

- Setting returns to default when exiting Photo Camera/Video Camera or when switching between Internal Camera and External Camera (see **P.8-20**).

## Picture Size

Select still image size

Photo Camera	<input type="radio"/>	Video Camera	<input checked="" type="radio"/>
--------------	-----------------------	--------------	----------------------------------

Default Portrait position: 240 x 320, Cycloid position: 400 x 240

Press **Options** ➔ **Select Picture Size** ➔ Press ➔ **Select a size (see P.8-5)** ➔ Press

- Select **240 x 320** or **120 x 160** for Internal Camera.
- To change video image size, see **P.8-19** "Record Time/Size".

## Picture/Video Quality

Select image or video quality

Photo Camera	<input type="radio"/>	Video Camera	<input checked="" type="radio"/>
--------------	-----------------------	--------------	----------------------------------

\*Not available when Record Time/Size is QVGA or VGA.

Default Normal (Photo Camera), Fine (Video Camera)

Press **Options** ➔ **Select Picture Quality or Video Quality** ➔ Press ➔ **Select quality** ➔ Press

- The image quality increases as follows: **Normal** → **Fine** → **High Quality**. Saving higher quality images/video requires more space in memory.

## Scene

Select a mode according to lighting or subject

Photo Camera	<input type="radio"/>	Video Camera	<input checked="" type="radio"/>
--------------	-----------------------	--------------	----------------------------------

\*Available for External Camera.

Press **Options** ➔ **Select Modes** ➔ Press ➔ **Select Scene** ➔ Press ➔ **Select a mode** ➔ Press

- Setting returns to default when exiting Photo Camera/Video Camera or when switching between Internal Camera and External Camera (see **P.8-20**).

<b>Automatic</b>	Automatic adjustment
<b>Night</b>	Use in low light conditions
<b>Sports</b>	Best suited for action sports or fast-moving subjects
<b>Characters</b>	Most suitable for high contrast black and white subjects



**Record Time/  
Size**

Select **For Message** to record short video (up to 295 KB) to send via MMS  
For longer recording, select **Extended Video**

Photo Camera	X	Video Camera	O
--------------	---	--------------	---

Press **Options** ➔ **Select Record Time/Size** ➔  
Press ➔ **Select For Message or Extended Video**  
➔ Press ➔ **Select an option** ➔ Press

For Extended Video options, press **Yes** after the above steps.

- Extended Video recordings are saved to Memory Card.

<b>VGA (3gp)*</b>	W 480 dots x H 640 dots Format: MPEG-4 (.3gp)
<b>VGA (asf)*</b>	W 480 dots x H 640 dots Format: MPEG-4 (.ASF)
<b>QVGA (3gp)*</b>	W 240 dots x H 320 dots Format: MPEG-4 (.3gp)
<b>QVGA (asf)*</b>	W 240 dots x H 320 dots Format: MPEG-4 (.ASF)
<b>HQVGA*</b>	W 240 dots x H 176 dots Format: MPEG-4 (.3gp)
<b>Large (QCIF)</b>	W 176 dots x H 144 dots Format: MPEG-4 or H263 (.3gp)
<b>Small (SubQCIF)</b>	W 128 dots x H 96 dots Format: MPEG-4 or H263 (.3gp)

\*Available for **Extended Video**.

**Microphone**

Record sound together with video

Photo Camera	X	Video Camera	O
--------------	---	--------------	---

Press **Options** ➔ **Select Settings** ➔ Press ➔  
**Select Microphone** ➔ Press ➔ **Choose On or Off**  
➔ Press

**Video Encode**

Select a video encoding format

Photo Camera	X	Video Camera	O*
--------------	---	--------------	----

\*Available when Record Time/Size is SubQCIF or QCIF.  
Default: MPEG4 (Japan)

Press **Options** ➔ **Select Settings** ➔ Press ➔  
**Select Video Encode** ➔ Press ➔ **Select H.263**  
**(Europe) or MPEG4 (Japan)** ➔ Press

## Additional Settings

Follow these steps before capturing an image (after Step 1 on **P.8-6**) or recording video (after Step 2 on **P.8-9**); after Viewfinder returns, complete image capture/recording.

**Internal Camera/ External Camera** Switch between Internal Camera and External Camera

Photo Camera	<input type="radio"/>	Video Camera	<input type="radio"/>
--------------	-----------------------	--------------	-----------------------

<sup>1</sup>Available in portrait position only.

<sup>2</sup>Available when Record Time/Size is SubQCIF or QCIF.

Default External Camera

Press **Options** ➔ **Select Internal Camera or External Camera** ➔ Press

**Note** ➔ Internal Camera switches to External Camera when rotating Display to Cycloid position. External Camera remains active after Display is back into portrait position.

## Save to

Select a save location for images or video

Photo Camera	<input type="radio"/>	Video Camera	<input type="radio"/>
--------------	-----------------------	--------------	-----------------------

<sup>1</sup>Available when Record Time/Size is set to **For Message**.

Default Handset

Press **Options** ➔ **Select Settings** ➔ Press ➔ **Select Save Pictures to or Save Videos to** ➔ Press ➔ **Select a location or Ask Each Time** ➔ Press

- For **Ask Each Time**, confirmation appears each time you save an image or video.

Camera Mode/Size	Save Location
Photo Camera (Portrait: 240 x 400 or smaller) (Cycloid: 400 x 240)	Phone Memory [handset] Memory Card
Photo Camera (Portrait: 480 x 640 or larger) (Cycloid: 1200 x 720)	Phone Memory [handset] SD (Pictures) [Memory Card] SD (DCIM) [Memory Card]
Video Camera	To Phone Memory [handset] To Memory Card

- Note** ➔
- **Ask Each Time** is not available when Auto Save (see below) is active.
  - To save to Memory Card, insert a card before saving image or recording video.

## Auto Save

Select whether to save captured images or recorded video automatically

Photo Camera	<input type="radio"/>	Video Camera	<input type="radio"/>
--------------	-----------------------	--------------	-----------------------

Default Off


Press **Options** ➔ **Select Settings** ➔ Press ➔ **Select Auto Save** ➔ Press ➔ **Choose On or Off** ➔ Press

- Note** ➔ Auto Save is not available when **Ask Each Time** is set for Save Pictures to or Save Videos to (see above).

## *Media Player*

## Media Player Basics

Use Media Player to record and listen to music (Music Player) or play video (Video Player). Save video/music files to handset or Memory Card (including SD VIDEO and SD AUDIO). To open files, specify the location first.

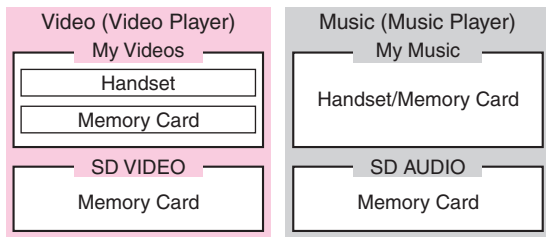

- For Playlist details, see **P.9-19**.
- Playback stops when battery is low. Charge battery and resume from where it stopped (see Step 1 on **P.9-10** or **P.9-13**).
- Consume media as it downloads (Streaming: see **P.16-11**).

### Incoming Calls/Mail during Playback

- Playback stops for incoming calls or Alarm.
  - When playback stops while streaming, the URL is saved to Access History (see **P.16-12**).
- A notification appears for incoming mail without interrupting playback.

## Downloading Music/Video

Open music/video-related links in Vodafone Web Menu directly from Media Player to download music (Chaku-Uta<sup>®</sup>) and video.

- Read information (price, expiry date, etc.) on the source site.
- Use Music Search (see below) to search by title, artist, etc.

Main Menu ► Media Player

- 1 Select *Music* or *Videos* and press**
- 2 Select *Download Music* or *Download Videos* and press**

905SH connects to the Network and the corresponding Vodafone Web Menu appears.

- Follow the links to download music/video.

### Music Search

- Follow these steps to access the Vodafone Music Search site.

**In Step 1, select *Music* ► Press  ► Select *Music Search* ► Press**

- Fill in fields or follow links to search for/download music.

## Saving Music Files from PCs

Save music files onto Memory Cards from CDs, etc. using PCs or other devices to play them on handset Music Player.

### Precautions for Handling Music Files on PCs

#### Respect copyrights.

- Comply with copyright and other intellectual property laws when using music saved on Memory Cards.
- Under copyright law, music saved on Memory Cards is limited to private use.

#### Use music files compliant with the SD-Audio standard.

- 905SH supports Secure MP3, Secure AAC and AAC files compliant with the SD-Audio standard.
  - For AAC files, see "Precautions for Handling AAC Files".

#### Save music to the specified directory.

- Save music to either of the following folders on Memory Card using a Memory Card reader/writer or other compatible device.
  - PRIVATE/VODAFONE/My Items/Sounds & Ringtones
  - PRIVATE/VODAFONE/My Items/Music

**Tip** ▶ For more about saving music files from PCs, see "Utility Software Starter Guide" on Utility Software CD-ROM.

## Precautions for Handling AAC Files

### Use software supporting AAC conversion.

- Use software such as iTunes to convert music to AAC format.
- iTunes is an example only. Vodafone does not guarantee compatibility with any software.
- For software usage and specifications, see the provider's website, etc.

iTunes is a registered trademark of Apple Computer, Inc. registered in the United States and other countries.

### Supported bit rate and sampling frequency are as follows.

Bit Rate (kbps)	16 <sup>*1</sup> , 24 <sup>*1</sup> , 32, 48, 64, 96 <sup>*2</sup> , 128 <sup>*2</sup>
Sampling Frequency (Hz)	16000, 22050, 24000, 32000, 44100, 48000

<sup>\*1</sup> Monaural only.

<sup>\*2</sup> Stereo only.

**Note** ▶ Artist names for AAC files do not appear on 905SH.

## Recording Music

Connect 905SH to audio sources supporting optical output to record music onto Memory Cards.

- 905SH encryption technology complies with Secure Digital Music Initiative (SDMI) for copyright protection. This technology prevents unauthorised copying or playback through data encryption and authentication.
- Analogue recording is not supported.

### Required Cables for Recording Music

- Optical Conversion Cable (optional accessory)
- Optical digital connecting cable (sold separately)

### Recording Time

Estimated Recording Time for Memory Card with no Files or Recordings:

Card Capacity (Example)	Bit Rate/Recording Time	
	96 kbps	128 kbps
64 MB	80 minutes	60 minutes

Bit rate measures audio compression rate or the quality of audio data recorded per second. Sound quality improves at higher rates.

### Precautions before Recording

#### Charge battery while recording.

- Recording stops when battery level falls too low. Always use AC Charger when recording to ensure a stable power supply.
- When battery is low, Music Player will not record. If battery runs low while recording, recording stops.

#### Music is recorded onto Memory Card.

- To start Music Player, insert a Memory Card formatted for 905SH (see P.10-19, P.10-20).

#### Activate Offline Mode to prevent disruptions (see Steps 1 - 2 on P.9-7).

- Incoming communications may disrupt recording or damage outputs of audio sources. (To place calls or send mail, stop recording and cancel Offline Mode.)


#### Do not remove Memory Card while recording.

- Doing so may damage the card or result in lost files.

#### Note ▶

- Under copyright law, duplicated material is limited to private use. Unauthorised reproduction or use is prohibited.
- Vodafone is not liable for any damages resulting from accidental loss or alteration of recordings.
- Music recorded onto Memory Card cannot be recopied to other media digitally.

## Recording Window Indicators

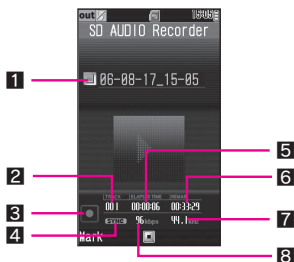

### 1 Title

### 2 Track Number

### 3 Status

- : Recording, ■: Stopped

### 4 Synch Recording (see P.9-8)

- Synch Recording On

### 5 Elapsed Time

### 6 Remaining Recording Time

- Reduces after each recording

### 7 Sampling Frequency (see P.9-6)

### 8 Bit Rate (see P.9-8)

## Track Bookmarks

Add Bookmarks to music in Playlist to divide it into tracks for Repeat or Random Play. Track Bookmarks are created when a period of silence is detected between music files.

- When recording from CD/MD players, etc., track numbers remain the same as the original.
- If Music Player does not detect a period of silence, recorded music files are all combined and saved as a single track.
- When Synch Recording is **On**, recording pauses after a period of silence. Recording resumes when sound (next music) is detected.
  - When Synch Recording is **On**, recording stops after 15 seconds of pause.
- Brief sound dropouts occur when Track Bookmarks are created.
- Track Bookmarks may not be created automatically depending on the connected audio source. In this case, divide music into tracks manually (see Step 4 on P.9-7).

**Note** ▶ Recording may result in silence or a single music file with a low volume level if the music consists of long periods of silence or sustained low volume level.

## Sampling Frequency

Sampling frequency is the number of times an audio signal is measured (sampled) per second, expressed in kilohertz (kHz). Similar to bit rate, higher rates translate into better sound quality. Sampling frequency is automatically set to 32 kHz, 44.1 kHz or 48 kHz according to the recording method or audio source.

When recording from DVD players, cancel DTS.

**Note** ▶ Recording results may not be satisfactory depending on the signal format.

## Connecting to Audio Sources

### Precautions

**Connect Optical Conversion Cable with an optical digital connecting cable, then to 905SH gently. Disconnect Optical Conversion Cable gently by holding the plug and handset.**

- Do not use excessive force when connecting/disconnecting cables; doing so may damage cable, Mini Plug or Headphone/Optical Digital Line In Connector.


**Use specified Optical Conversion Cable only.**

- Non-specified cables may not function properly and damage may result.

## Cable Connections

Use Optical Digital Audio Toslink-Mini or Mini-Mini Cables (sold separately) with Optical Conversion Cable to connect audio sources to 905SH.

- Use Optical Conversion Cable only for recording music.
- Optical Conversion Cable is designed exclusively for 905SH and other specified Vodafone handsets. Do not use for other devices to prevent damage or malfunction.

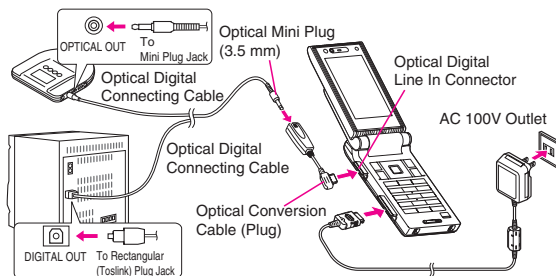



## Recording

- Most operations are described with Synch Recording active.
- Read the precautions on **P.9-4** before recording.
- To listen to music while recording, adjust Monitor Level before recording (see **P.9-8**).
- Prepare an audio source and pause playback at the beginning of music.

Main Menu ▶ Media Player ▶ Music

### 1 Select **SD AUDIO Recorder** and press

**Receive calls during recording?** appears.

- To prevent disruption by calls, press  **No** in Step 2 to activate Offline Mode (see **P.2-18**).
- If Offline Mode is already active, skip ahead to Step 3.
- **SD AUDIO Recorder** can only be selected when a Memory Card is inserted.

### 2 Press **No**

Recording window opens.

- Customise settings before recording (see **P.9-8** "Recording Settings").

■ To accept incoming calls, mail, etc. while recording, press  **Yes**.

### 3 Press

Handset is ready for Synch Recording (see **P.9-8**).

■ When Synch Recording is **Off**, press  again.

### 4 Start playback

Recording starts automatically when handset detects sound.

■ To create Track Bookmarks (see **P.9-5**) manually, press  **Mark** while recording.

### 5 To stop recording, stop playback on the audio source

Recording pauses, then stops after 15 seconds.

- If  **No** was pressed in Step 2, Offline Mode is cancelled after recording ends.

■ When Synch Recording is **Off**, press  to stop recording.



- Note** ▶
- Do not remove Memory Card or battery while recording. Doing so may damage the card or result in lost information.
  - Do not touch cables or plugs while recording. May cause noise or skipping.
  - When recording from PCs or BS/CS digital tuners, recording level may decrease.
  - Unchecked files recorded with J-SH51/J-SH52 will be deleted when the Memory Card is used for 905SH Music Player.

- Tip** ▶
- Alarm is disabled while recording, and starts after Music Player stops/closes.
  - Recorded music is saved by date and time by default.

## Recording Settings

Follow these steps after Step 2 on P.9-7.




### Monitor Level

Set volume level to listen to music while recording

Press  **Options** ➔ **Select Monitor Level** ➔ **Press**  Default Level 3  
 ➔ **Use**  **to adjust level** ➔ **Press** 




### Synch Recording

Start recording automatically when playback starts on audio sources

Press  **Options** ➔ **Select Synch Recording** ➔ **Press**  Default On  
 ➔ **Choose On or Off** ➔ **Press** 

### Bit Rate



Select a bit rate (see P.9-4 "Recording Time")

Press  **Options** ➔ **Select Bit Rate** ➔ **Press**  Default Normal (96 kbps)  
 ➔ **Select Normal (96 kbps) or High-quality (128 kbps)**  
 ➔ **Press** 

- Sound quality is better at 128 kbps. However, recording time shortens as more space is required in memory.

### Auto Mark Level

Select sensitivity to detect silence for creating Track Bookmarks

Press  **Options** ➔ **Select Auto Mark Level** ➔ **Press**  Default -41dB  
 ➔ **Select -41dB or -59dB** ➔ **Press** 

- Select **-59dB** for soft music to prevent unintended Track Bookmark creation.

# Playing Music

Play music on Memory Card.


- Use Headphones to listen to music without bothering others.
- Alternatively, use handset speaker.

## Precautions before Playing Music

- Music Player is not compatible with some recording/playback formats. Music may not play depending on the Memory Card status.
- Grasp the plug when connecting or disconnecting Headphones. Do not bend the plug to avoid damaging the cord or Headphone Connector.
- Use only the specified accessories (Headphones, etc.). Other devices may not function properly and cause damage to Headphone Connector.
- When battery is low, Music Player will not play. If battery runs low during playback, Music Player shuts off.

- Tip ▶**
- To answer calls during playback with Headphones, press Call Button for 1+ seconds.
  - Turn down the volume if distortion is noticeable in speaker sound.
  - Large files may take longer to open. My Music and Playlists may take longer to open if large files are saved.

## Playback Window Indicators

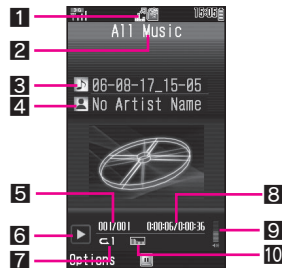

### 1 Playback in Progress

### 2 Playlist Name

### 3 Title

### 4 Artist Name

- **No Artist Name** appears if not available.

### 5 Track Number

### 6 Status

- ▶: Playing, ■: Paused, ■: Fast Forwarding, ■: Fast Rewinding

### 7 Playback Pattern (see P.9-11)

- ◁ 1: Repeat, ◁ : Repeat All, ↺ : Random

- Indicator does not appear for Normal.

### 8 Elapsed Time

### 9 Volume

### 10 Tone Control (see P.9-11)

- ▮ : Bass, (◀▶): Surround, (◀▶): Surround Bass, Karaoke: Karaoke, Rock: Rock, Hall: Hall, HipHop: Hiphop

- Indicator does not appear for Normal.

## Playback

Main Menu ▶ Media Player ▶ Music

### 1 Select *My Music* or *SD AUDIO* and press

For *My Music*, use to select *Music Folder* or *Ring Songs-Tones*.

To play the last played file from where it stopped, select *Last Played Music* ▶ Press



My Music

### 2 Select *All Music* or a Playlist and press

Three Playlists (*アーティスト1* to *アーティスト3*) are saved by default.

To search files, press **Options** ▶ Select **Search** ▶ Press ▶ Enter search text ▶ Press ▶ When no matching text is found, text entry window returns. Change text and try again.

To sort files, press **Options** ▶ Select **Sort** ▶ Press ▶ Select a sort option ▶ Press ▶ Files in SD AUDIO cannot be sorted.

To check file/Playlist properties, select a file or Playlist ▶ Press **Options** ▶ Select **Information** ▶ Press (Press to scroll down.) ▶ To return, press ▶ Press

### 3 Select a file and press

Playback window opens and playback starts.

- Playback stops after the last file when Playback Pattern is set to **Normal** (see P.9-11).

To pause playback, press .

Press (up) or (down) to adjust volume.

- The setting remains until you change it.

**Note** ▶ Playback pauses for Alarm, then resumes automatically. However, playback stops when Snooze is set.





**Tip** ▶ Use LCD Remote/Mic (optional accessory) for music played via Music menu.

## Playback Operations

<b>Replay</b>	Press Press repeatedly to play previous files. <sup>1</sup>
<b>Skip Forward</b>	Press <sup>2</sup>
<b>Fast Forward</b>	Press and hold Release for playback.
<b>Fast Rewind</b>	Press and hold Release for playback.
<b>Pause</b>	Press Press again to resume playback.
<b>Mute</b>	Press  (Long Press) Press  to play sound.

<sup>1</sup>In Random Play, only replays the current file.

<sup>2</sup>Not available for the last file when Playback Pattern is set to **Normal**.

- Tip** ▶
- Press  to create mail messages and use Phone Book, etc. during playback; however, some functions are not available.
  - **Stop music?** appears when  is pressed in Standby. Press  **Yes** or  **No**.

## Playback Settings

### Tone Control

Increase bass for dynamic sound or create a surround field

Default Normal

**Main Menu** ▶ *Media Player* ▶ *Music* ▶ *Settings*

Select **Tone Control** ▶ Press  ▶ Select an effect  
▶ Press 

<b>Normal</b>	No sound effects
<b>Bass</b>	Boosts bass frequencies
<b>Surround</b>	Adds surround effect
<b>Surround Bass</b>	Adds surround effect with enhanced bass
<b>Karaoke</b>	Adds softening effect ideal for vocals
<b>Rock</b>	Adds low to high frequencies, enhancing balance
<b>Hall</b>	Boosts high frequencies, enhancing reverberation
<b>Hiphop</b>	Boosts bass to midrange, enhancing resonance

### Playback Pattern

Play files repeatedly or in random order

Default Normal

**Main Menu** ▶ *Media Player* ▶ *Music* ▶ *Settings*

Select **Playback Pattern** ▶ Press  ▶ Select a pattern  
▶ Press 


<b>Normal</b>	Play in order until the last file ends
<b>Repeat</b>	Repeat one file
<b>Repeat All</b>	Repeat all files in the current Playlist
<b>Random</b>	Play files in the current Playlist in random order

# Playing Video

Play video files recorded with mobile camera or obtained via Web, MMS, etc.

- Watch video in standard or Cycloid position.
- Sounds play from handset speaker.
- Alternatively, use Headphones to listen.

## Playback Window Indicators

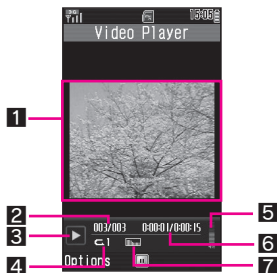

### 1 Video Image/Subtitles

### 2 Clip Number

### 3 Status

- ▶: Playing, ▢: Paused, ▶: Advancing Frame,
- ▶▶: Fast Forwarding, ◀◀: Fast Rewinding

### 4 Playback Pattern (see P.9-14)

- Indicators are the same as those for Music Player (see P.9-9).

### 5 Volume

### 6 Elapsed Time

## 7 Sound Settings (see P.9-14)

🔊 : Bass, ⏮⏭: Surround, ⏮⏭⏭: Surround + Bass

- Indicator does not appear when Surround and Bass are **Off**.

## Watching Video in Cycloid Position

- Rotate Display to Cycloid position for widescreen viewing.



**Tip** ▶ Press **[2 AC]** during playback to toggle Display Size (see P.9-14).

## Playback

Play video on Video Player. To change playback settings, see **P.9-14**. To add subtitles, see **P.9-16**.

Main Menu ▶ Media Player ▶ Videos


### 1 Select *My Videos* or *SD VIDEO* and press **■**

- For **SD VIDEO**, skip ahead to Step 4.
- To play the last played file from where it stopped, select **Last Played Video** ▶ Press **■**

### 2 Select *Phone Memory* or *Memory Card* and press **■**

### 3 Select *All Videos* or a *Playlist* and press **■**

- To search files, press **Ⓞ** **Options** ▶ Select **Search** ▶ Press **■** ▶ Enter search text ▶ Press **■**
  - When no matching text is found, text entry window returns. Change text and try again.
- To sort files, press **Ⓞ** **Options** ▶ Select **Sort** ▶ Press **■** ▶ Select a sort option ▶ Press **■**
  - Files in **SD VIDEO** cannot be sorted.
- To check file/Playlist properties, select a file or Playlist ▶ Press **Ⓞ** **Options** ▶ Select **Information** ▶ Press **■** (Press **↓** to scroll down.)
  - Press **■** to return.

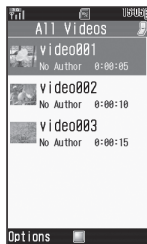

All Videos

## 4 Select a file and press **■**

Playback window opens and playback starts.

- Playback stops after the last file when Playback Pattern is set to **Normal** (see **P.9-14**).
- To change playback settings while playing or paused, press **Ⓞ** **Options** ▶ Select **Settings** ▶ Press **■** ▶ See **P.9-14**
- To edit video, see **P.9-15**.
- To pause playback, press **■**.
  - For frame advance, pause playback and press **⏮** for 1+ seconds.
- Press **↑** (up) or **↓** (down) to adjust volume.
  - The setting remains until you change it.
- To toggle Display Size (see **P.9-14**), press **2.0x** during playback.
  - Subtitles appear only in Normal size.
- Playback Operations: see **P.9-10**

**Tip** ▶ Video recorded on other devices may appear rotated.

## Playback Settings

### Playback Pattern

Play files repeatedly or in random order

■ Available for files in My Videos only.

Default: Normal

Main Menu ▶ Media Player ▶ Videos ▶ Settings

Select **Playback Pattern** ▶ Press  ▶ Select a pattern ▶ Press

Normal	Play in order until the last file ends
Repeat	Repeat one file
Repeat All	Repeat all files in the current Playlist
Random	Play files in the current Playlist in random order

### Backlight

Select a Backlight status for playback

Default: Always On

Main Menu ▶ Media Player ▶ Videos ▶ Settings

Select **Backlight** ▶ Press  ▶ Select a pattern ▶ Press

Always On	Backlight remains on during playback
Always Off	Backlight remains off during playback
Normal Settings	Applies Display Backlight setting (see P.11-8)

### Display Size

Change playback size

Default: Enlarge

Main Menu ▶ Media Player ▶ Videos ▶ Settings

Select **Display Size** ▶ Press  ▶ Select **Normal, Enlarge, Full Screen, Wide Screen or Cinema Screen** ▶ Press

- Alternatively, press  during playback to toggle Display Size as follows: Full Screen (no indicators) → Full Screen (with indicators) → Wide Screen (no indicators) → Wide Screen (with indicators) → Cinema Screen (no indicators) → Cinema Screen (with indicators) → Normal → Enlarge
  - Press  in paused Full Screen, Wide Screen or Cinema Screen view to show or hide indicators.

### Sound Settings

Activate/cancel Surround/Bass; use Headphones for a more pleasant sound experience

Default: Off (both)

Main Menu ▶ Media Player ▶ Videos ▶ Settings ▶ Sound Settings

### Surround

Select **Surround** ▶ Press  ▶ Choose **On or Off** ▶ Press

### Bass

Select **Bass** ▶ Press  ▶ Choose **On or Off** ▶ Press



Main Menu ▶ Media Player ▶ Videos ▶ Settings ▶ Title/Artist

**Title**Select **Title** ▶ Press  ▶ Choose **On or Off** ▶ Press **Author**Select **Artist** ▶ Press  ▶ Choose **On or Off** ▶ Press 

## Editing Video

Crop	Select Two Points	Save portion between two points as a new file
	Delete Before	Save portion after selected point as a new file
	Delete After	Save portion before selected point as a new file
Subtitle		Add subtitle text to video

- Note** ▶
- Some files may not be edited.
  - Edited video may not play properly if Memory Card is not formatted for 905SH.
  - To save to Memory Card, a maximum of 1.2 MB of free memory is required in addition to the file size.

## Clipping Portions between Two Points

Follow these steps after Step 4 on P.9-13.

- 1 While paused or during playback, press  **Options**
- 2 Select **Edit** and press
- 3 Press  **Yes**
  - Incoming transmissions are blocked during editing.
- 4 Select **Crop** and press
- 5 Select **Select Two Points** and press 

Video plays.

  - Press  to pause/start video.
- 6 Press  **Start** at the start point
 

The start point is specified and playback resumes.
- 7 Press  **End** at the end point
 

The portion is saved and playback starts.

**Note** ▶ Portions over 30 minutes may not be saved.

## Cropping Video Clips

Delete the portion before or after the selected point to save the rest as a new file.

Follow these steps after Step 4 on P.9-13.


**1** While paused or during playback, press  **Options**

**2** Select **Edit** and press 

**3** Press  **Yes**



- Incoming transmissions are blocked during editing.

**4** Select **Crop** and press 

**5** Select **Delete Before** or **Delete After** and press 

Video plays.

**6** Press  at approximate start point

- The portion before or after the selected point will be deleted.
- To adjust start point, press  to start/pause video.
- To cancel, press .

**7** Press  **Cut**

The remaining portion is saved and playback starts.

**Note** ▶ Portions over 30 minutes may not be saved.

## Adding Subtitles

Set subtitles to appear while playing video. Select timing, add effects, etc.

### Entering Text

After entry, set timing and time period for subtitles.

- Save up to ten subtitles of up to 48 single-byte alphanumeric per entry.
- Follow these steps after Step 4 on P.9-13.

**1** While paused or during playback, press  **Options**


**2** Select **Edit** and press 


**3** Press  **Yes**

- Incoming transmissions are blocked during editing.

**4** Select **Subtitle** and press 

**5** Select a number and press 

**6** Enter text and press 

- Press  to pause/play video.

**7** Press  **Start** at the start point

## 8 Press **End** at the end point

Edit Subtitle menu opens.

- If video has ended before pressing **End**, start over from Step 7.

To edit text, select **Edit Text**

Press **Edit Text** → Edit text → Press **Done**

## 9 Change display settings (see right) and add effects (see P.9-18 - 9-19)

- To complete without changing display settings or adding effects, proceed to Step 10.

## 10 After completing all the settings, press **OK**

- To add more, repeat Steps 5 - 10.


To edit saved subtitles, select one → Press **Edit Text** → Press **Edit Text** → Edit → Press **Done** → Perform from Step 9

To delete saved subtitles, select one → Press **Options** → Select **Delete** → Press **Done** → Press **Yes**

## 11 Press **Save**

## 12 Select **Overwrite or Create New** and press **Done**

Playback starts.

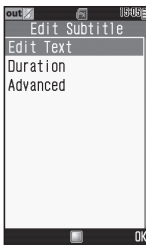

Edit Subtitle Menu

## Display Settings

Follow these steps in Step 9 on the left.

**Duration** Set timing and time period for subtitles

Select **Duration** → Press **Done** → Press **Start** at the start point → Press **End** at the end point

When finished, perform from Step 10 on the left.

**Display Position** Set position for subtitles to appear

Select **Advanced** → Press **Done** → Select **Display Position** → Press **Done** → Use **Arrow** to select a position → Press **Done**

When finished, press **Clear** → Perform from Step 10 on the left.

**Font Size** Change font size of subtitles

Select **Advanced** → Press **Done** → Select **Font Size** → Press **Done** → Select **Large (20 x 20)** or **Small (12 x 12)** → Press **Done**

When finished, press **Clear** → Perform from Step 10 on the left.

## Scrolling

Select a direction and visual effect for subtitle scroll

**Default** Direction: Stop, Effect: Frame In

## Scroll Direction

Select **Advanced** ➔ Press  ➔ Select **Scrolling** ➔ Press  ➔ Select **Direction** ➔ Press  ➔ Select **Stop, Left to Right or Right to Left** ➔ Press

When finished, press  ➔ Press  ➔ Perform from Step 10 on P.9-17

## Scroll Effects

Select **Advanced** ➔ Press  ➔ Select **Scrolling** ➔ Press  ➔ Select **Effect** ➔ Press  ➔ Select an effect ➔ Press

<b>Frame In</b>	Subtitle comes in from an end, then disappears in the centre
<b>Frame Out</b>	Subtitle appears in the centre and scrolls out
<b>Rolling</b>	Subtitle scrolls from end to end

When finished, press  ➔ Press  ➔ Perform from Step 10 on P.9-17

## On-Screen Time

Select **Advanced** ➔ Press  ➔ Select **Scrolling** ➔ Press  ➔ Select **On-Screen Time** ➔ Press  ➔ Enter time ➔ Press

When finished, press  ➔ Press  ➔ Perform from Step 10 on P.9-17

## Background Colour

Select from seven background colours

**Default** Black

Select **Advanced** ➔ Press  ➔ Select **Background Colour** ➔ Press  ➔ Select a colour ➔ Press

When finished, press  ➔ Perform from Step 10 on P.9-17

## Adding Text Effects

- Up to two effects can be applied per entry.
- Follow these steps in Step 9 on P.9-17.

## Font Colour

Change font colours

**Default** White

## Changing Colour of Entire Text

Select **Advanced** ➔ Press  ➔ Select **Font Colour** ➔ Press  ➔ Select **All** ➔ Press  ➔ Select a colour ➔ Press

When finished, press  ➔ Perform from Step 10 on P.9-17

## Changing Colour of Portion

Select **Advanced** ➔ Press  ➔ Select **Font Colour** ➔ Press  ➔ Select **Select Text** ➔ Press  ➔ Use  to select the first character of text ➔ Press  ➔ Use  to select the end point ➔ Press  ➔ Select a colour ➔ Press

When finished, press  ➔ Perform from Step 10 on P.9-17

## Highlight

Highlight subtitles

Select **Advanced** ➔ Press **■** ➔ Select **Highlight** ➔ Press **■** ➔ Use **⏏** to select the first character of text ➔ Press **■** ➔ Use **⏏** to select the end point ➔ Press **■** ➔ Select a colour ➔ Press **■**

When finished, press **⏏** ➔ Perform from Step 10 on P.9-17

## Blink

Set subtitles to flash

Select **Advanced** ➔ Press **■** ➔ Select **Blink** ➔ Press **■** ➔ Use **⏏** to select the first character of text ➔ Press **■** ➔ Use **⏏** to select the end point ➔ Press **■**

When finished, press **⏏** ➔ Perform from Step 10 on P.9-17

## Reset


Reset Advanced subtitle settings

Select **Advanced** ➔ Press **■** ➔ Press **⏏** **Reset** ➔ Press **⏏** **Yes**

- Reset does not affect Duration setting.

## Managing Video & Music Files

Organise video/music files on handset in My Videos and My Music. All files are saved in **All Videos** or **All Music**. Use Playlists to organise them.

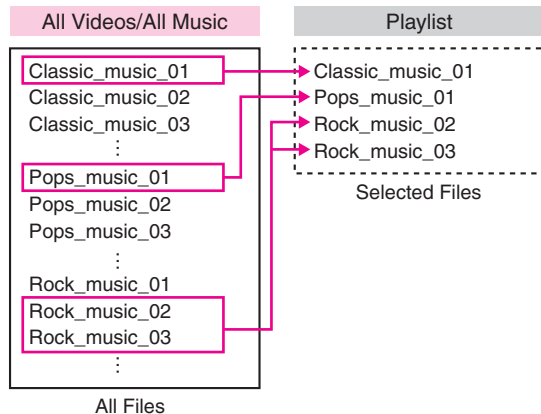

- Playlists store only file locations. Source files remain in All Videos or All Music.
- Three Playlists are saved by default. To create new Playlists, see P.9-20.
- Use **Music Manager** on the supplied Utility Software CD-ROM to create Playlists and organise music files via PCs.

**Note** ➔ To save video to Memory Card, a maximum of 1.2 MB of free memory is required in addition to the file size.

## Adding New Playlist

Create up to 99 Playlists in *My Videos*, *My Music* and *SD AUDIO* each.

- Playlists cannot be added into *SD VIDEO*.
- **Playlist 1** to **Playlist 3** (or **ﾌﾞﾚｲｽﾄ 1** to **ﾌﾞﾚｲｽﾄ 3**) are saved in *My Videos* and *My Music* by default.

Main Menu ▶ Media Player

### 1 Video Playlists

- 1 Select *Video* and press
- 2 Select *My Videos* and press
- 3 Select *Phone Memory* or *Memory Card*

### Music Playlists

- 1 Select *Music* and press
- 2 Select *My Music* or *SD AUDIO*

### 2 Press

- To delete Playlists, select one ▶ Press  **Options** ▶ Select **Delete Playlist** ▶ Press  ▶ Press  **Yes**
- To rename Playlists, select one ▶ Press  **Options** ▶ Select **Edit List Title** ▶ Press  ▶ Enter new name ▶ Press



My Videos

### 3 Press **Options**

### 4 Select *Add New Playlist* and press

### 5 Enter name and press

## Adding Files to Playlists

Add files to Playlists from *All Videos* or *All Music*.

- Playlists store only file locations. Source files remain in All Videos or All Music.
- Files in *SD VIDEO* cannot be added to Playlists.

Main Menu ▶ Media Player

### 1 Adding Video Files

- 1 Select *Video* and press
- 2 Select *My Videos* and press
- 3 Select *Phone Memory* or *Memory Card*

### Adding Music Files

- 1 Select *Music* and press
- 2 Select *My Music* or *SD AUDIO*

### 2 Press

- To delete saved files, select a Playlist ▶ Press  ▶ Select a file ▶ Press  **Options** ▶ Select **Delete** ▶ Press  ▶ Press  **Yes**
- To move files within a list, select a Playlist ▶ Press  ▶ Select a file ▶ Press  **Options** ▶ Select **Change Order** ▶ Press  ▶ Use  to move file ▶ Press

### 3 Select *All Videos* or *All Music* and press

### 4 Select a file and press **Options**

### 5 Select *Add to Playlist* and press

## 6 Select a Playlist and press

File is added to the end of the Playlist.

### Editing SD AUDIO Files

Edit titles and artist names of files in SD AUDIO.

Main Menu ▶ Media Player ▶ Music ▶ SD AUDIO

#### 1 Select a Playlist and press

#### 2 Select a file and press Options

#### 3 Select *Edit* and press

#### 4 *Editing Titles*

##### 1 Select *Title* and press

##### 2 Enter title and press

#### *Editing Artist Name*

##### 1 Select *Artist* and press

##### 2 Enter name and press

### Deleting Files in SD VIDEO & SD AUDIO

Delete video files in SD VIDEO and music files in **All Music** of SD AUDIO.

Source files will be deleted.

#### Deleting Video Files

Main Menu ▶ Media Player ▶ Videos ▶ SD VIDEO

#### 1 Select a file and press Options

#### 2 Select *Delete* and press

#### 3 Press Yes

#### Deleting Music Files

Main Menu ▶ Media Player ▶ Music ▶ SD AUDIO ▶ All Music

#### 1 Select a file and press Options

#### 2 Select *Delete Track* and press

#### 3 Press Yes

#### Deleting Files in My Videos/My Music


- Delete files in All Videos and All Music from **Videos** and **Ring Songs·Tones/Music** in Data Folder respectively (see P.10-10).

## ***Managing Files (Data Folder)***



# Data Folder

905SH files are organised in folders by file format.

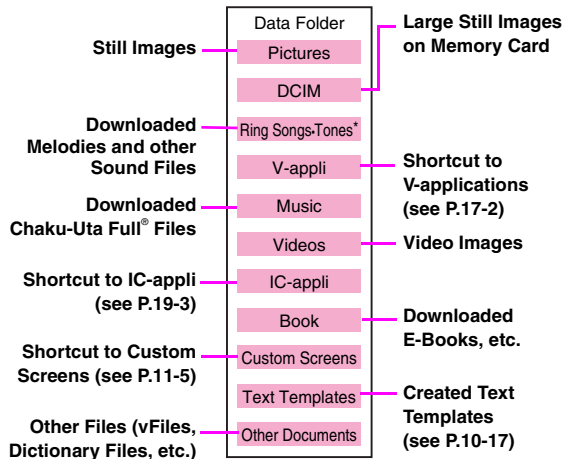

\* 青春アミーゴ is saved in Ring Songs-Tones by default.

Licence: T-0640119




- Tip** ▶
- Access the corresponding Vodafone Web Menu directly from **Pictures**, **Ring Songs-Tones**, **V-appli**, **Music**, **Videos**, **IC-appli**, **Book** and **Custom Screens**.
  - Exchange files via Bluetooth® (see P.12-2) or infrared (see P.12-9) with compatible Vodafone handsets.

## Window Description

To open Data Folder from Standby, follow these steps.

- Press  ➔ **Select Data Folder** ➔  
Press

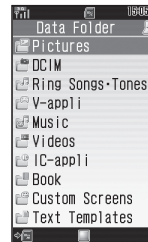

## Memory Status


- To check memory usage status, open Data Folder and follow these steps.

**Select Memory Status** ➔ Press  ➔ **Select Phone Memory or Memory Card** ➔ Press

- Delete messages/files when memory is low. Handset performance may be affected when memory is full.

## File List

In Data Folder, select a folder and press . File list appears.

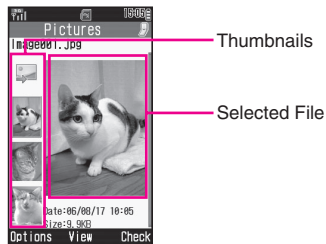

Pictures

List appearance may differ when Memory Card is not inserted.

## Major Icons

### Still Image & Animation Files

Icon	Format & Extension	Description
	JPEG (.jpg)	JPEG image
	PNG (.png)	PNG image
	E-Animation (NEVA files) (.nva)	Animation (may include sound)
	SVG (.svgz)	SVG-T file

### Video Files

Icon	Format & Extension	Description
	MPEG-4 (.3gp)	3GPP video image
	MPEG-4 or H.263 (.3gp or .mp4)	3GPP video image

### Sound Files

Icon	Format & Extension	Description
	SMAF (.mmf)	Melody via Web (may include images)
	Audio (.mp4)	Downloaded Chaku-Uta®
	Voice (.amr)	Voice/sound recorded on Voice Recorder

- Tip** ▶
- appears for copyright protected files. appears for files in the public domain.
  - appears for files used for Wallpaper, System Graphics, Ringtone, Ringvideo, etc.
  - appears for copy/forward protected files.

## Display Settings

### Switching File List View



Inline









Grid



Preview

Main Menu ▶ Data Folder








- 1 Select a folder and press** 
  - Select a folder other than Ring Songs-Tones, V-appli, Music, IC-appli and Text Templates.
- 2 Press**  **Options**
- 3 Select *Manage Items* and press** 
- 4 Select *Change List View* and press** 
- 5 Select *Inline View, Grid View or Preview View* and press** 
  - **Preview View** appears for folders other than Book, Videos, Custom Screens and Other Documents.

**Tip** ▶ Alternatively, press  in file list to toggle the view. (Not available when Multi Job is active.)

### Sorting Files

Sort files by name, date, size or type. Select **Unsorted** to list files randomly.

Main Menu ▶ Data Folder

- 1 Select a folder and press** 
    - Select a folder other than V-appli, IC-appli and Text Templates.  
 To open a created sub folder or a sub folder in DCIM, select it  
→ Press 
  - 2 Press**  **Options**
    - If **Download** is highlighted in file list, skip ahead to Step 4.
  - 3 Select *Manage Items* and press** 
  - 4 Select *Sort* and press** 
  - 5 Select a method and press** 
- Note** ▶ It may take a while to sort many files.
- Tip** ▶ To reverse the order, sort by the same method again.


# Opening Files

Main Menu ▶ Data Folder

## 1 Select a folder and press

File list appears.

- To switch between 905SH and Memory Card, press **Options** ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press
- To open a created sub folder or a sub folder in DCIM, select it ▶ Press

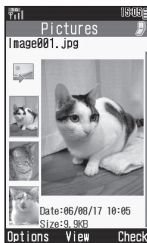

File List (Pictures)

## 2 Select a file and press

The content plays or appears.

- Press to zoom in. (Press repeatedly to zoom in more.)
  - To zoom out, press .
- Press (up) or (down) to adjust volume.
- To switch sound file name display, select a file ▶ Press **Options** ▶ Select **Item Displayed** ▶ Press ▶ Select **File Name** or **Title** (default) ▶ Press

## 3 Press to return to file list

- Press twice to return to file list from zoomed view.
- From file list, press to return to Data Folder.

**Tip** ▶ Remote control on LCD Remote/Mic (optional accessory) is disabled for Music Player activated via Data Folder.

## Activating Mobile Camera

- Open file list in Pictures, DCIM or Videos folder and follow these steps.

Press **Options** ▶ Select **Take Picture or Record Video** ▶ Press

- Mobile camera activates in Photo Camera mode from Pictures and DCIM folders, or in Video Camera mode from Videos folder.
- To capture still images, see **P.8-6**.
- To record video, see **P.8-9**.

## Activating Voice Recorder

- Open file list in Ring Songs·Tones folder and follow these steps.

Press **Options** ▶ Select **Record Voice** ▶ Press

- To record voice/sounds, perform from Step 2 on **P.13-17**.

## Selecting Multiple Files

Select multiple files in a folder to move, copy or delete them all at the same time.

Main Menu ▶ Data Folder

### 1 Select a folder and press

- Select a folder other than V-appli, IC-appli and Text Templates.
- To open a created sub folder or a sub folder in DCIM, select it  
➔ Press

### 2 Select a file and press **Check**

- appears.
- To uncheck, select a file with  ➔ Press **Uncheck**

### 3 Repeat Step 2 to select more

- Copy, move, or delete files.

## Slide Show

Main Menu ▶ Data Folder

### 1 Select **Pictures** or **DCIM** and press

- To open a created sub folder or a sub folder in DCIM, select it  
➔ Press

### 2 Select a file and press **Options**

### 3 Select **Slide Show** and press

Slide Show starts.

- All images in the folder appear sequentially.
- When Speed is set to **Manual**, press or to advance or reverse frames.

### 4 Press to stop

#### Setting Interval

- Follow these steps after Step 3.

Press **Set** ➔ **Select Speed** ➔ Press ➔  
**Select Fast, Normal, Slow or Manual** ➔ Press

- Speed is **Normal** by default.

#### Repeat Slide Show

- Follow these steps after Step 3.

Press **Set** ➔ **Select Repeat** ➔ Press ➔  
**Choose On or Off** ➔ Press

- For **Off**, all images in the folder appear then file list returns.
- Repeat is **On** by default.

## Properties

Main Menu ▶ Data Folder


### 1 Select a folder and press

- Select a folder other than Text Templates.
- To open a created sub folder or a sub folder in DCIM, select it  
➔ Press

## 2 Select a file and press **Options**

- Select multiple files as needed.

## 3 Select *Details* or *Information* and press

- Press  to scroll down.
- The following information appears:  
File name, type, size, last modified date, vendor, copy/forward protection and other restrictions (number of times to open, expiry term), etc.
  - Available information vary by file.


## CCF Files

Save CCF files designed for コミックサーフィン (ComicSurfing) application (see **P.18-6**) to Book folder to read comics, photo books, etc.

Main Menu ▶ Data Folder

### 1 Select *Book* and press

### 2 Select a CCF file and press

- コミックサーフィン (ComicSurfing) application starts.
- For operations, read the instructions on the application.
  - When a V-application is paused, **Application suspended. End application?** appears. Press  **Yes** to start ComicSurfing.

**Tip** ▶ When ComicSurfing is paused, properties of opened CCF file may not be accessible.

## SVG Files

905SH supports **SVG-T** (Scalable Vector Graphics-Tiny). View graphics in SVG files, including tables and maps.


- To create SVG files via PC, use PC Document Conversion Utility on Utility Software CD-ROM.
- For more information on SVG-T, visit [http://j.sst.ne.jp/svg/index\\_pdc.html](http://j.sst.ne.jp/svg/index_pdc.html) (Japanese only).












Main Menu ▶ Data Folder

### 1 Select *Other Documents* and press
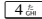
### 2 Select an SVG file and press

The content appears.

- Press  **Options** to use the following functions.
- Key Assignments:

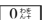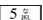Line Scroll	
Page Scroll	 (Up),  (Left),  (Right),  (Down)
Zoom	 (Zoom Out),  (Zoom In)
Rotate	 (Counterclockwise),  (Clockwise)
Key Action Mode	
Set Default	

**Note** ▶ Some features may not be available depending on the SVG file.

## MMS Mail Attachments

Attach files to MMS Mail from Data Folder. Use Text Templates to paste the saved text into message text.

Main Menu ► Data Folder

- 1 Select a folder and press
- 2 Select a file and press  Options
- 3 Select **Send** and press 
  - For files in Text Templates folder, select **Send Template** ► Press  ► Skip ahead to Step 5
- 4 Select **As Message** and press 
  - For large JPEG images, select attachment size ► Press
- 5 Complete other fields and send MMS Mail (perform from Step 3 on P.15-7)

## Printing Images

Connect 905SH to a printer via Bluetooth® and print JPEG/ PNG images.

- Use a Bluetooth®-compatible printer.
- Activate Bluetooth® on the printer.

Main Menu ► Data Folder

- 1 Select **Pictures, DCIM or Other Documents** and press 
  - To open a created sub folder or a sub folder in DCIM, select it ► Press
- 2 Select a still image and press  Options
- 3 Select **Print** and press
- 4 Select **Via Bluetooth** and press 
  - Device search starts.
- 5 Select a device and press 
  - When requested, enter passcode ► Press
  - When transmission is in progress, press  **Yes**.
- 6 Press  **Yes**
  - Offline Mode is set and printing starts.
    - When printing completes, printer stops automatically.
  - To cancel, press  **Cancel**.

- Note** ▶
- Images may not be printed correctly depending on the file or printer status.
  - Copy protected files cannot be printed even if printing rights are granted.

## Managing Files & Folders

### Adding Folders

- Assign different names to folders within a layer.
- Folders cannot be added to DCIM, V-appli, IC-appli or Text Templates folder.

Main Menu ▶ Data Folder

#### 1 Select a folder and press

- Select a folder other than DCIM, V-appli, IC-appli and Text Templates.

#### 2 Press Options

#### 3 Select *Manage Items* and press

#### 4 Select *Create Folder* and press

#### 5 Enter name and press

### Changing File/Folder Name

- File extensions do not change.
- Assign different names to files/folders within a layer.
  - Single-byte Symbols ¥, /, :, ;, ., <, >, !, ?, # and " are not supported.
- Make sure there is enough free memory.
- Folders/files in DCIM, V-appli, IC-appli or Text Templates folder cannot be renamed.
  - Text blocks that appear in Text Templates file list are initial portions of Text Templates. They are not file names and thus cannot be changed with these steps. (To change them, edit the initial portions of Text Templates.)

Main Menu ▶ Data Folder

#### 1 Select a folder and press

- Select a folder other than DCIM, V-appli, IC-appli and Text Templates.

#### 2 Select a file or folder and press Options

#### 3 Select *Manage Items* and press

#### 4 Select *Rename* and press

#### 5 Edit name and press












## Deleting Files & Folders

Delete files and created folders in Data Folder.

To delete files in Text Templates folder, see **P.10-18** "Deleting Templates". To delete V-applications and IC-appli, see **P.17-6** "Deleting V-applications".

Main Menu ▶ Data Folder










- 1 Select a folder and press** 
  - Select a folder other than V-appli, IC-appli and Text Templates.
- 2 Deleting Folders**
  - 1 Select a folder and press**  **Options**
  - Deleting Single Files**
    - 1 Select a file and press**  **Options**
  - Deleting Multiple Files**
    - 1 Perform from Step 2 on P.10-6 to select multiple files and press**  **Options**
  - Deleting All Created Folders & Files**
    - 1 Select a file and press**  **Options**
    - 2 Select *Manage Items* and press** 
- 3 Select *Delete* or *Delete All* and press** 
  - For deleting folders or *Delete All*, enter Handset Code  
▶ Press 
- 4 Press**  **Yes**

## Copying/Moving Files

Copy or move files to the corresponding folder on Memory Card or to created sub folders within the folder (handset or Memory Card).

- Copy or move files in DCIM folder to Pictures folder (handset or Memory Card).
- Copy/forward protected files cannot be copied.
- Some files may not be copied or moved.
- Files in V-appli, IC-appli and Text Templates folders cannot be copied or moved.

Main Menu ▶ Data Folder

- 1 Select a folder and press** 
    - Select a folder other than V-appli, IC-appli and Text Templates.  
■ To open a created sub folder or a sub folder in DCIM, select it  
▶ Press 
  - 2 Copying/Moving Single Files**
    - 1 Select a file and press**  **Options**
  - Copying/Moving Multiple Files**
    - 1 Perform from Step 2 on P.10-6 to select multiple files and press**  **Options**
  - 3 Select *Copy* or *Move* and press** 
  - 4 Select *Phone* or *Memory Card* and press** 
    - To move files set as Wallpaper or used for other functions, press  **Yes**.
    - To copy/move to created sub folders, select a folder ▶ Press 
  - 5 Select *Copy here..* or *Move here..* and press** 
- Note** ▶ If a copy protected file is included in the selected files, only the remaining files are copied.

- Note** ▶
- Files copied or moved to Memory Card may not be usable on other Vodafone handsets or PCs, etc.
  - Name of copied or moved file may change when the same name already exists in the folder.

## Using Files

Use Data Folder files as Wallpaper, Phone Book Picture, Ringtone and Ringvideo.

- **Set as Wallpaper, Add to Ph.Book, Set as Ring Video** and **Set as Ringtone** appear only for compatible files.
- Some files may not be used depending on the size.

- Note** ▶ Some copyright protected files (⇒ or ↘) cannot be used even if **Set as Wallpaper, Add to Ph.Book, Set as Ring Video** or **Set as Ringtone** appears.

### Wallpaper

**Main Menu** ▶ Data Folder

- 1 Select Pictures, DCIM or Other Documents and press** ■

▶ To open a created sub folder or a sub folder in DCIM, select it  
▶ Press ■

- 2 Select a file and press** [Envelope] **Options**

- 3 Select Set as Wallpaper and press** ■

▶ For images smaller or larger than Display, select **Centred, Full Screen** or **Fit Image** ▶ Press ■

- 4 Press** ■

Wallpaper is set.

### Saving to Phone Book

**Main Menu** ▶ Data Folder

- 1 Select Pictures, Ring Songs-Tones, Videos or Music and press** ■

- 2 Select a file and press** [Envelope] **Options**

- 3 Select Add to Ph.Book and press** ■

▶ For more, perform Step 4 in "Saving from Call Log" on P.4-8.

### Ringvideo & Ringtone

Assign video or sound file as Ringvideo or Ringtone for Voice Calls.

#### Ringvideo

**Main Menu** ▶ Data Folder ▶ Videos

- 1 Select a file and press** [Envelope] **Options**

- 2 Select Set as Ring Video and press** ■

#### Ringtone

**Main Menu** ▶ Data Folder

- 1 Select Ring Songs-Tones or Music and press** ■

- 2 Select a file and press** [Envelope] **Options**

- 3 Select Set as Ringtone and press** ■

# Editing Still Images

## Changing Image Size

Resize images in Pictures folder to use for Wallpaper, Alarm, etc.

- Alternatively, crop image for size or zoom in/out on portions. (File size changes when images are resized.)
- **Picture Editor** appears only for compatible files.


### Resize to Preset Size

Main Menu ▶ Data Folder ▶ Pictures ▶ Select a file ▶ Options  
() ▶ Edit ▶ Picture Editor ▶ Resize

#### 1 Select from **To Wallpaper** to **Alarm** and press



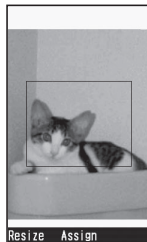

A rectangle appears on the image (except for **To Wallpaper** and **Power On/Off**).

To Wallpaper	W 240 x H 400 dots
Power On/Off	W 240 x H 400 dots
QVGA	W 240 x H 320 dots
For Incoming Call	W 176 x H 144 dots
Alarm	W 240 x H 104 dots



For Incoming Call

#### 2 Use to specify display area

- Display area may be unspecifiable depending on image size.
- ▶ To zoom in/out, press  **Resize** ▶ Press  (zoom in) or  (zoom out)
- ▶ To start over from size selection, press .

3 Press 

4 Press  **Save**



5 Enter name and press 



Image is saved to Data Folder as a new entry.

## Cropping Images

Main Menu ▶ Data Folder ▶ Pictures ▶ Select a file ▶ Options  
() ▶ Edit ▶ Picture Editor ▶ Resize





1 Select **Cut** and press 

2 Use  to move + to the upper left corner of the portion to crop and press 

3 Use  to move + to the lower right corner of the portion to crop and press 

▶ To cancel, press  ▶ Start over from Step 1

4 Use  to specify display area

- Display area may be unspecifiable depending on image size.
- ▶ To zoom in/out, press  **Resize** ▶ Press  (zoom in) or  (zoom out)
- ▶ To cancel, press  ▶ Start over from Step 1

5 Press 

6 Press  **Save**

7 Enter name and press 

Image is saved to Data Folder as a new entry.

## Visual Effects (Retouch)

Dress up images with pre-loaded visual effects.

- Apply to W 52 x H 52 dots or larger JPEG/PNG images including Continuous Shoot images.
- **Picture Editor** appears only for compatible files.

**Main Menu** ▶ Data Folder ▶ Pictures ▶ Select a file ▶ Options  
() ▶ Edit ▶ Picture Editor ▶ Retouch

### 1 Select an effect and press

- Retouch Effects:

<b>Sepia</b>	Renders image in sepia tone
<b>Sparkling</b>	Adds sparkling effect to bright portions of image
<b>Ripples</b>	Superimposes widening rings over image
<b>Tile</b>	Adds a brick frame around image
<b>Emboss</b>	Renders image in black and white relief
<b>Oil Painting</b>	Renders image as a blurred image
<b>Clear Frame</b>	Adds a transparent 3D frame around image
<b>Round Frame</b>	Adds a round, opaque frosting around image
<b>Soft Frame</b>	Adds a soft, opaque edged frame around image
<b>Zigzag Frame</b>	Adds a jagged edged frame around image

▶ To start over, press .

### 2 Press

### 3 Press **Save**

### 4 Enter name and press

Image is saved to Data Folder as a new entry.

**Note** ▶ Edited images may be too large to save or send via MMS.


## Adding Text & Stamps

- **Picture Editor** appears only for compatible files.


**Main Menu** ▶ Data Folder ▶ Pictures ▶ Select a file ▶ Options  
() ▶ Edit ▶ Picture Editor

### 1 Adding Text

#### 1 Select **Paste** and press

▶ To specify colour, press  **Colour** ▶ Select a combination ▶ Press 

#### 2 Select **Free Text** and press

▶ To enter the date, select **Date** ▶ Press  ▶ Skip ahead to Step 2


#### 3 Enter text and press

- Enter up to 16 characters.
- Alternatively, use Scan Code/Text Scanner to insert text.

### Adding Stamps

#### 1 Select **Stamp** and press

#### 2 Select a stamp and press

▶ To change the stamp, press .

### 2 Use to move text or stamp to target location and press

### 3 Press **Save**

### 4 Enter name and press

Image is saved to Data Folder as a new entry.

## Face Arrange

Make smiley, angry or sad faces.

- Apply to JPEG and PNG images.
- Face Arrange may not fit all images. Adjust position and size as required (see right).
- **Picture Editor** appears only for compatible files.

### Main Menu

Data Folder ▶ Pictures ▶ *Select a file* ▶ Options  
 (☰) ▶ Edit ▶ Picture Editor ▶ Face Arrange

## 1 Select a type and press

- Face Arrange Types:

<b>Collage: Right-half</b>	Copies right side of face onto left side
<b>Collage: Left-half</b>	Copies left side of face onto right side
<b>Grin</b>	Pulls eyes down & mouth up
<b>Mad</b>	Pulls eyes up & mouth down
<b>Sad</b>	Pulls eyes & mouth down
<b>Big Eyes</b>	Adds graphic eyes
<b>Burning Eyes</b>	Adds flames in the eyes
<b>Crying</b>	Adds tears
<b>Aristocrat</b>	Adds a monocle and moustache
<b>Angry Mark</b>	Adds a stress mark to face

■ To check current positions of targets, press **Parts**.

■ Press to return.

■ To start over, press .

**2** Press

**3** Press **Save**

**4** Enter name and press

Image is saved to Data Folder as a new entry.

**Note** ▶ When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

## Adjusting Face Arrange Position


Change the default positions and sizes of targets to fit the image. Changes apply to the current image only.

**1** In Step 1 on the left, press **Parts**

**2** Press **Modify**

A rectangle appears with + in the upper left corner.

**3** Set the face line

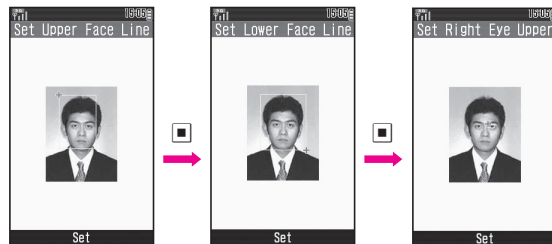


Use to move + to the upper left corner

Use to move + to the lower right corner

■ To start over, press .

Face line is set

## 4 Set the eyes and then mouth in the same way

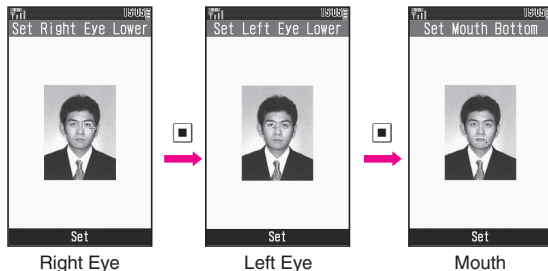

- When finished, all the targets appear.
- To readjust targets, start over from Step 2 on P.10-14.
- To restore the original positions, press **CLEAR TARGET (ON)**. (Not available after setting mouth position.)

5 Press **■**

6 Press **□** **Yes**

Image is saved to Data Folder as a new entry with Face Arrange positions adjusted, and Face Arrange menu returns.

- Complete Face Arrange. Face Arrange is applied to the adjusted positions.

## Additional Picture Effects

**Picture Editor** appears only for compatible files.

**Add Frame** Add Frame to JPEG and PNG images

**Main Menu** ▶ Data Folder ▶ Pictures ▶ *Select a file* ▶ Options  
(□) ▶ Edit ▶ Picture Editor ▶ Add Frame

Select a frame ▶ Press **■** ▶ Press **■** ▶ Press **□** **Save**  
▶ Enter name ▶ Press **■**  
■ To change the frame, press **CLEAR TARGET (ON)** before assigning it.

**Rotate** Rotate images

**Main Menu** ▶ Data Folder ▶ Pictures ▶ *Select a file* ▶ Options  
(□) ▶ Edit ▶ Picture Editor ▶ Rotate

Select a type ▶ Press **■** ▶ Press **■** ▶ Press **□** **Save**  
▶ Enter name ▶ Press **■**  
■ To start over from type selection, press **CLEAR TARGET (ON)** before second press of **■**.

**Reformat file** Convert file format and change file size

**Main Menu** ▶ Data Folder ▶ Pictures ▶ *Select a file* ▶ Options  
(□) ▶ Edit ▶ Picture Editor ▶ Reformat file

### Converting File Format

Select **File Format** ▶ Press **■** ▶ Select a format ▶  
Press **■** ▶ Press **CLEAR TARGET (ON)** ▶ Press **□** **Save** ▶ Enter  
name ▶ Press **■**

- Changing file format may affect file size and image quality.



## Split Screen

Combine up to four reduced images into one.

- Apply to JPEG and PNG images.
- Make sure there is enough free memory.
- Images are placed in the upper left, upper right, lower left and lower right in numerical order.



Split Picture

Main Menu ▶ Data Folder ▶ Pictures ▶ *Select a file* ▶  
Options (F3) ▶ Edit ▶ Composite

\*This image appears in the upper left when combined.

### 1 Select **SplitPicture 240x400** or **SplitPicture 240x320** and press **Enter**

Upper left image is set.

### 2 Select **2** and press **Enter**

### 3 Select an image and press **Enter**

Two images are set.

## 4 Repeat Steps 2 - 3 to add images

- In Step 2, select **3** or **4**.

▶ To preview Split Picture, press **Options**

▶ Select **Full Screen** ▶ Press **Enter**

▶ Press **Enter** to return.

▶ To change images, select one ▶ Press **Enter**

▶ Press **Options** ▶ **Change** ▶ Select an image ▶

Press **Enter**

▶ To delete images, select one ▶ Press **Options**

▶ Select **Remove** ▶ Press **Enter**

▶ Press **Options** ▶ **Yes**



Split Picture  
Preview

## 5 Press **Options** ▶ **Save**

## 6 Enter name and press **Enter**

Image is saved to Data Folder as a new entry.

## Text Templates

Save frequently used phrases for use in mail message, etc.  
Save up to 50 entries of up to 256 characters each.

### New Entry

Main Menu ▶ Data Folder ▶ Text Templates ▶ <Add New Entry>

## 1 Enter text and press **Enter**

Tip ▶ To paste saved text into text entry windows, see **P.3-14** "Using Text Templates". Alternatively, see **P.10-8** to open Data Folder and paste saved text into message text.



## Opening Templates

**Main Menu** ► *Data Folder* ► *Text Templates*

### 1 Select a file and press

Press  to return.

## Editing Templates

**Main Menu** ► *Data Folder* ► *Text Templates* ► *Select a file* ► *Options* () ► *Edit*

### 1 Edit text and press

File is overwritten.

## Deleting Templates

Delete single Text Templates.

**Main Menu** ► *Data Folder* ► *Text Templates* ► *Select a file* ► *Options* () ► *Delete*

### 1 Press **Yes**

## Memory Card

905SH is compatible with miniSD™ Memory Card; miniSD™ Memory Card is not included in this package. Purchase miniSD™ Memory Card to use Memory Card-related handset functions.

- Format a new miniSD™ Memory Card for use with 905SH (see **P.10-20**).
- To learn how to save a particular file to Memory Card, refer to that section of the manual.

### Memory Card Memory Status

**Press**  ► **Select *Data Folder*** ► **Press**  ► **Select *Memory Status*** ► **Press**  ► **Select *Memory Card*** ► **Press**

- A portion of Memory Card is reserved for storing copyright information, etc.

- Note** ►
- Vodafone is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
  - miniSD™ Memory Cards do not have Write Protection Switch. There is a risk of accidental erasure or overwriting of files.

- Tip** ► The manufacturer recommends the use of 32/64/128/256/512 MB or 1 GB cards.

## Precautions


- To reduce risk of malfunction, use only recommended miniSD™ Memory Cards.
- Turn handset power off before inserting or removing a Memory Card.
- Do not place labels or stickers on Memory Card. These items may affect card performance or result in lost information.
- Use an oil-based felt pen to write on Memory Card. Using a pencil or ballpoint pen may damage the card or result in lost information.
- Never disassemble or modify a Memory Card.
- Do not expose Memory Card to strong impacts, pressure or liquids.
- Do not touch Memory Card terminals or expose them to metal objects.
- Do not expose Memory Card to direct sunlight or excessive heat (e.g. inside vehicles, etc.).
- Keep a Memory Card away from dust or high humidity.
- Do not use in the presence of corrosive gases.
- Avoid heat sources and do not dispose of in fire.
- A Memory Card is a consumable item. Card performance deteriorates with usage.

## Inserting & Removing Memory Card


### Inserting

Turn handset power off.


#### 1 Open cover

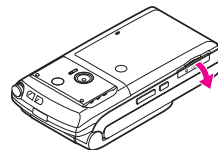

#### 2 With logo side up, insert card until it clicks

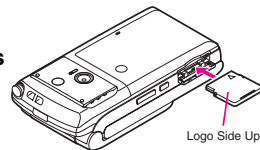

#### 3 Close cover

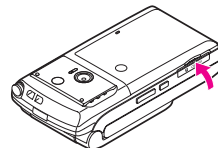

- Note** ▶
- Do not force Memory Card into handset; damage may result.
  - Do not insert other objects into Memory Card Slot; may damage handset/card.


- Tip** ▶ Insert a Memory Card and turn handset power on. Standby appears. Memory Card load times vary by card size and the amount of information saved.

## Removing

Turn handset power off.


### 1 Open cover and gently push down on card

- With a light push, card pops out.

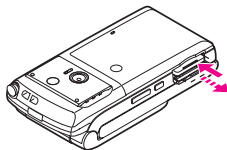


### 2 Remove card

- Using the notch on its edge, pull card straight out.

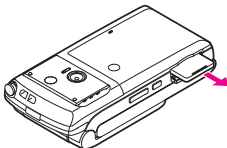

### 3 Close cover

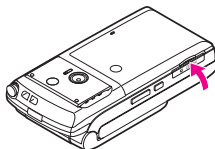

- Note** ▶ Never remove Memory Card or battery while files are being accessed. Damage to handset/card may result and files/data may be damaged/lost.

## Format Card

When using a new miniSD™ Memory Card, format it on 905SH for use with 905SH before trying to save files, etc.

Main Menu ▶ Settings ▶ Connectivity ( ) ▶ Memory Card ▶ Format Card

### 1 Press Yes

Offline Mode is set.

When handset is connected to the Network, press  Yes .

### 2 Enter Handset Code and press

### 3 Press Yes

To cancel, press  No .

- Note** ▶
- Before formatting a Memory Card, make sure there is no important information saved on the card. Format Card deletes all files from Memory Card.
  - Never remove Memory Card or battery while formatting.
  - An improperly formatted Memory Card may not function as it should with 905SH.

## Backup & Restore


Back up information to Memory Card, and restore to handset in case of accidental loss/alteration of data.

- All contents are copied to Memory Card as a single file. (File name is the date of transfer.)
- The following folders/entries can be transferred at once:
  - Received Msg.
  - Drafts
  - Sent Messages
  - Phone Book
  - Contact Groups
  - Calendar
  - Tasks
  - Text Templates
  - Bookmarks
  - User Dictionary
- Templates and Unsent Messages are not transferable.
- Select an item to back up or transfer all at once.

**Tip** ► Copy handset entries as backups, share information between miniSD™ Memory Card-compatible handsets, or transfer entries to a newly purchased handset.

### Precautions

- Backup/Restore is not available when battery is low or while handset is in use.
- Transmissions are blocked during Backup or Restore.

- When restoring data from Memory Card, select an item; when prompted, delete corresponding data on 905SH to proceed.
- Some items may not be transferable. Some backup files may not be usable on other Vodafone handsets or PCs, etc.
- When a V-application is paused, **Application suspended. End application?** appears. Press  **Yes** to start Backup or Restore.
- When handset or Memory Card memory is low, entries may not transfer correctly.
- Handset stores up to 300 entries between Calendar and Tasks. If the limit is reached during a transfer, the remaining entries will not be received.
- MMS Notice transfers as standard message and thus the remaining portion is not retrievable.
- Backup file contents can only be accessed when restored to handset.
- Observe the following when transferring data backed up on other Vodafone handsets to handset.
  - Messages may not transfer depending on the size.
  - Handset stores up to 500 messages between Drafts, Templates, Unsent Messages and Sent Messages. If the limit is reached during a transfer, the remaining messages will not be received.
  - Sky Mail may transfer as MMS depending on the Vodafone handset used for backup.

- Observe the following when transferring data backed up on handset to other Vodafone handsets.
  - Messages in Spam Folder are saved as standard received messages.
  - SMS addressed to multiple recipients may not be saved or only the first entered recipient remains if transferred from Drafts.

### Handset to Memory Card

Main Menu ▶ Settings ▶ Connectivity (📶) ▶ Memory Card ▶ Backup/Restore ▶ Backup

#### 1 Enter Handset Code and press

#### 2 Press **Yes**

Offline Mode is set.

■ When handset is connected to the Network, press .

#### 3 Select an item and press

■ **Save phone book pictures as well?** appears for **Select All** and **Phone Book**. Press  **Yes** or  **No**.

■ To cancel, press  **Cancel**.

### Memory Card to Handset

Handset data is overwritten after restoring.

Main Menu ▶ Settings ▶ Connectivity (📶) ▶ Memory Card ▶ Backup/Restore ▶ Restore

#### 1 Enter Handset Code and press

#### 2 Press **Yes**

Offline Mode is set.

■ When handset is connected to the Network, press .

### 3 Select an item and press

• Some items may not be selected.

■ For **Select All**, select a file ▶ Press  ▶ Press  **Yes**

### 4 Select a file and press

• If there is more than one file, check the date of transfer to select.

Example: Example: **060817XX** indicates the file was transferred on 17 August 2006. (XX: 00 - 99 or aa - zz)

• For **Select All**, repeat Step 4 for each item.

■ To delete files on Memory Card, select one ▶ Press  **Delete** ▶ Press  **Yes**

### 5 Press **Yes**

■ To cancel, press  **Cancel**.

**Tip** ▶ For Tasks, due dates that cannot be set on 905SH are overwritten with the restored date and time.

### Additional Function

**SD Local Contents** Open HTML files on Memory Card to access linked Memory Card files or Mobile Internet sites

■ Available only when HTML files are saved on Memory Card.

Main Menu ▶ Settings ▶ Connectivity (📶) ▶ Memory Card ▶ SD Local Contents

#### Select a title ▶ Press

• SD Local Contents are saved in PRIVATE/VODAFONE/Local Contents folder when viewed on PCs.

# Digital Print Order Format (DPOF)

**Digital Print Order Format (DPOF)** is a standard specification for requesting prints from digital cameras. Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

- DPOF does not support images obtained via Web, MMS, etc.
- If Memory Card capacity becomes insufficient while in use, a warning message appears. Delete files and try again.
- For printing procedures, see the printer manual.


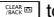
## Selecting Images & Prints

**Main Menu** ▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶ DPOF ▶ Number of Copies ▶ For Each Pictures

### 1 Select a folder and press

Thumbnails appear.

### 2 Use to select an image and press **Count**

- To open images, select one ▶ Press 
- Press  to return.

### 3 Enter a number of copies to print (00 - 99) and press

- To return, press  ▶ Press 
- To cancel, enter **00** ▶ Press 

### 4 Repeat Steps 2 - 3 for other images

## 5 Press **Done**


- Note** ▶
- DPOF settings made on other devices are unusable; delete existing settings to create new ones on 905SH.
  - Some settings may not be supported depending on the printer or printing services.
  - Process may take a while if print settings are made for many images.
  - If image files are deleted or renamed on PCs or other devices, print settings change. Perform Reset Settings (see P.10-24) and start over with settings.

## Print Settings

**For All Pictures** Apply a number to all DCF images to print the same number of copies

**Default** 0 Copy each

**Main Menu** ▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶ DPOF ▶ Number of Copies ▶ For All Pictures

Enter a number (01 - 99) ▶ Press 

**Add Date** Add dates to prints

**Default** Off

**Main Menu** ▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶ DPOF ▶ Settings ▶ Add Date

Choose **On** or **Off** ▶ Press 

## Index Print

Create Index Print (a print with thumbnails)

Default: Off

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶  
DPOF ▶ Settings ▶ Index Print

Choose **On (require)** or **Off** ▶ Press

## Check Settings

View current print settings

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶  
DPOF

Select **Check Settings** ▶ Press

## Reset Settings

Reset DPOF settings

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Memory Card ▶  
DPOF

Select **Reset Settings** ▶ Press  ▶ Press  **Yes**

## ***Additional Settings***



# Mode Settings

Activate Normal, Meeting, Activity, Car, Headset or Manner mode to change multiple 905SH settings at one time; each mode is a basket of defaults tailored to each usage pattern.

## Activating a Mode

**Mode Settings** Select from six modes

Default Normal

**Main Menu** ► *Settings* ► *Phone Settings* (☰) ► *Mode Settings*

Select a mode ► Press

## Customising Modes

**Personalise** Customise volume, Ringtone/Ringvideo, system sounds, vibration and Mobile/Small Light settings for each mode

**Main Menu** ► *Settings* ► *Phone Settings* (☰) ► *Mode Settings*

Select a mode ► Press  **Options** ► Select **Personalise** ► Press  ► Select an item ► Press  ► Customise settings (see P.11-11 "Volume" to P.11-13 "Warning Tone & Power On/Off Sound")

**Any Key Answer** Activate or cancel Any Key Answer (see P.2-6) for each mode

Default Normal/Meeting/Activity/Manner: Off, Car/Headset: On

**Main Menu** ► *Settings* ► *Phone Settings* (☰) ► *Mode Settings*

Select a mode ► Press  **Options** ► Select **Personalise** ► Press  ► Select **Any Key Answer** ► Press  ► Choose **On** (activate) or **Off** ► Press

**Answer Phone** Activate or cancel Answer Phone for incoming calls in Manner mode

Available for Manner mode only.

Default On

**Main Menu** ► *Settings* ► *Phone Settings* (☰) ► *Mode Settings*

Select **Manner** ► Press  **Options** ► Select **Personalise** ► Press  ► Select **Answer Phone** ► Press  ► Choose **On** (activate) or **Off** ► Press

**Note** ► In Manner mode, Answer Phone setting in Mode Settings takes priority over that in Tools (see P.2-9).

## Reset

**Set to Default** Reset settings for each mode

**Main Menu** ► *Settings* ► *Phone Settings* (☰) ► *Mode Settings*

Select a mode ► Press  **Options** ► Select **Set to Default** ► Press  ► Enter Handset Code ► Press  ► Press  **Yes**

# Display

## Display Settings

**Wallpaper** Use Wallpaper to show an image in Standby

Default: Dolphin

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ Wallpaper

### Preset Images

Select **Preset Pictures** ▶ Press  ▶ Select an image ▶ Press

### Data Folder Images

Select **My Pictures, DCIM or Other Documents** ▶ Press  ▶ Select an image ▶ Press  ▶ Press

■ For images smaller or larger than Display, select **Centred, Full Screen** or **Fit Image** ▶ Press  ▶ Press

### Cancelling

Select **Blank** ▶ Press

#### Restoring Custom Screen Wallpaper

■ When Wallpaper is set while Custom Screen is active, Wallpaper takes priority over Custom Screen Wallpaper. (Custom Screen remains active.)

To restore Custom Screen Wallpaper, follow these steps after opening Wallpaper menu.

Select **Custom Screen** ▶ Press  ▶ Press

**Note** ▶

- Some images may be incompatible/not appear correctly.
- When a V-application is set as Screensaver, Wallpaper may not appear.

**Tip** ▶ Using Wallpaper shortens Battery Time.

**System Graphics** Use images for Power On/Off, incoming calls and Alarm windows

Default: Power On/Power Off: Preset Animation  
Voice Call/Video Call/Alarm: Pattern 1

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ System Graphics

### Power On/Power Off

Select **Power On or Power Off** ▶ Press  ▶ Select **Preset Animation, My Pictures or Other Documents** ▶ Press

■ For **My Pictures** and **Other Documents**, select an image ▶ Press  ▶ Press

### Incoming Calls/Alarm

Select **Voice Call, Video Call or Alarm** ▶ Press  ▶ Select from **Pattern 1 to Pattern 3, My Pictures or Other Documents** ▶ Press

■ For **My Pictures** and **Other Documents**, select an image ▶ Press  ▶ Press

• Select **My Pictures** or **Other Documents** to use images in Data Folder. If a rectangle appears, use  to specify display area and press .

#### Restoring Custom Screen System Graphics

■ When System Graphics are set while Custom Screen is active, System Graphics take priority over Custom Screen System Graphics. (Custom Screen remains active.) To restore to Custom Screen System Graphics for **Voice Call, Video Call** or **Alarm**, follow these steps after opening the corresponding menu.

Select **Custom Screen** ▶ Press  ▶ Press

- Note** ▶
- Ringtone and Ringvideo images for Mode Settings may take priority over System Graphics for incoming calls.
  - Ringtone, Ringvideo and Picture images for Phone Book entries take priority over System Graphics for incoming calls with caller ID.

**Font Settings**

Change font size/weight for menus, text entry, mail messages and Web

**Default** Font Size: Standard, Font Weight: Normal

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Display ▶  
Font Settings

**Font Size**

Select **Font Size** ▶ Press  ▶ Select an item ▶  
Press  ▶ Select a size ▶ Press

**Font Weight**

Select **Font Weight** ▶ Press  ▶ Select a weight ▶  
Press

- Selected font weight applies to all windows.

**Tip** ▶ Some windows may not support Font Settings.

**Clock/  
Calendar**


Show or hide Clock/Calendar in Standby

**Default** Clock (M)

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Display ▶  
Standby Display ▶ Clock/Calendar

Select a type ▶ Press

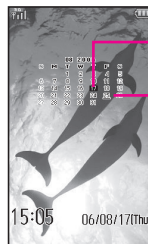**Calendar Contents****Current Date**

- Highlighted

**Scheduled Date**

- Underlined (see P.13-2 "Calendar" for schedules)

**Clock + 1 Month**

**Note** ▶ Calendar appears on Wallpaper.

**Tip** ▶ When a V-application is set as Screensaver, Calendar may not appear.

**Show  
Indicators**

Show or hide indicators/Soft Keys in Standby

**Default** Status Area: On, Softkey Area: Off

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Display ▶  
Standby Display ▶ Show Indicators

Select **Status Area** or **Softkey Area** ▶ Press  ▶  
Choose **On** or **Off** ▶ Press

**Show  
Operator Name**

Show or hide the name of your service provider (**Vodafone JP**, etc.) in Standby

**Default** Off

**Main Menu**

▶ Settings ▶ Phone Settings (☰) ▶ Display ▶  
Standby Display ▶ Show Operator Name

Choose **On** (name appears) or **Off** ▶ Press

### Greeting Message

Create a short text message to appear on Display each time handset power is activated

Default Off

### Main Menu

▶ Settings ▶ Phone Settings (☎) ▶ Display ▶ Greeting Message

### Edit Message

Select **Edit Message** ▶ Press  ▶ Enter a message

▶ Press

- Enter up to 10 characters.

### Switch On/Off

Select **Switch On/Off** ▶ Press  ▶ Choose **On** or **Off** ▶ Press

## Language Setting

### Language

Switch handset interface between Japanese and English

Default Automatic

### Main Menu

▶ Settings ▶ Phone Settings (☎) ▶ 言語選択

Select **Automatic**, **English** or **日本語** ▶ Press

- For **Automatic**, interface language switches according to language information on USIM Card.

## Custom Screens

Download and install applications that load single-themed handset Wallpaper, menu windows, indicators, Ringtones and more, all at the same time.

- In addition to preloaded Custom Screens, use Custom Screens downloaded via Web.
- See P.11-7 to use preloaded Custom Screens (**Luminous**, **Vertical** and **Simple**).
- **カスタモご紹介** (☎) in handset Data Folder (Custom Screens) opens a list of downloadable Custom Screens, which is also a doorway to **カスタモ for 905SH** Mobile Internet site offering Custom Screens for 905SH.
- **Luminous** is installed by default.

## Downloading Custom Screens

To download Custom Screens, open handset Data Folder (Custom Screens).

- Some Custom Screens are fee-based.
- To use fee-based Custom Screens, download Custom Screen Keys to handset (see right).
- Custom Screens and Custom Screen Keys are downloaded via Web. Make sure signal is strong.
- Custom Screens can also be downloaded via **カスタモ** (<http://www.custamo.com/>) using a PC.

**Note** ▶ Read information (Custom Screen Key price, expiry date, etc.) on Custom Screen download page.

Main Menu ▶ Data Folder ▶ Custom Screens

### 1 Select **Download** and press

905SH connects to the Network and **カスタモ for 905SH** appears.

▶ To view a list of downloadable Custom Screens first, select **カスタモご紹介** (☰) ▶ Press  ▶ Press  ▶ Press  **Yes**

### 2 Download a Custom Screen

- Read through information on the site.
- When using a PC, download a Custom Screen to the following directory on a Memory Card. Do not change file name, extension, etc.
  - PRIVATE/VODAFONE/My Items/Themes

## Purchasing Custom Screen Keys

Main Menu ▶ Data Folder

### 1 Select **Custom Screens** and press

Available Custom Screens appear.

- Fee-based Custom Screen Indicators:

Key Found  Key Not Found

- appears for the current Custom Screen.
- ▶ To switch between 905SH and Memory Card, press  **Options**
  - ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press

### 2 Select a Custom Screen for which to download the Key and press **Options**

- Select one with .

### 3 Select **Activate** and press

### 4 Press **Activate**

905SH connects to the Network and download page appears.

- Custom Screen Key download page contains the following information:
  - Custom Screen Key price
  - Payment method
  - Terms of service
  - Link to customer enquiry service
- ▶ To cancel, press  **Cancel**.

### 5 Read through terms of service and download Custom Screen Key following online instructions

## 6 After download, press **OK**

Data Folder (Custom Screens) returns.

Delete

Delete Custom Screen and Custom Screen Key

Main Menu ▶ Data Folder ▶ Custom Screens

Select a Custom Screen ▶ Press **Options** ▶ Select **Delete** ▶ Press ▶ Press **Yes**

- To delete the corresponding Custom Screen Key at the same time, press **Yes**.
- To cancel, press **No**. (Only Custom Screen will be deleted.)

- Custom Screen Keys cannot be deleted independently.
- Delete **カスタムご紹介** () as needed.

Web Access

Access Custom Screen source sites

Main Menu ▶ Data Folder ▶ Custom Screens

Select a Custom Screen ▶ Press **Options** ▶ Select **Web Access** ▶ Press

## Custom Screen Setup

Custom Screen setup may take some time. (Pressing does not cancel setup.)

### ■ Preset Custom Screens

Main Menu ▶ Settings ▶ Phone Settings () ▶ Custom Screens ▶ Preset Screens

## 1 Select **Luminous**, **Vertical** or **Simple** and press

### ■ Custom Screens in Data Folder

Main Menu ▶ Data Folder

## 1 Select **Custom Screens** and press

Available Custom Screens appear.

(Fee-based Custom Screen Indicators: see P.11-6)

- To switch between 905SH and Memory Card, press **Options**
  - ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press

## 2 Select a Custom Screen and press

- Custom Screens with cannot be set.
- Select a Custom Screen and press **Options** to open properties, change file names or copy/move to other folders (see P.10-6, P.10-9, P.10-10).

## 3 Press

Custom Screen is set and Data Folder (Custom Screens) returns.

- Note** ▶
- Some Custom Screens may not contain files for Wallpaper, System Graphics, Ringtones or Ringvideos; default settings apply for these functions.
  - Custom Screen setup may fail when battery is low or depending on the contents.

**Tip** ▶ Once installed, Custom Screen remains active even after Memory Card is removed or replaced with another.

## Light Settings

### Backlight

Select Display and Keypad Backlight illumination time or Display Brightness

**Default** Time Out: 15 seconds, Brightness: Auto

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ Backlight

### Backlight Illumination Time

Select **Time Out** ▶ Press  ▶ Select time ▶ Press

To disable Backlight, choose **Off** ▶ Press

### Display Brightness

Select **Brightness** ▶ Press  ▶ Use  to adjust level ▶ Press

- Note** ▶
- For **Auto**, Light Sensor (see P.1-8 ) detects ambient light level to adjust Display Brightness automatically. Brightness may take a moment to adjust immediately after opening 905SH or sudden changes in ambient light. Do not place labels or stickers over Light Sensor.
  - Brightness for V-applications is Level 3 even if Display Backlight is **Auto** and V-application Backlight is **Normal Settings**.

**Tip** ▶ Keypad light Brightness is fixed.

### Display Saving

Select a period of inactivity after which Display turns off

**Default** 2 minutes

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ Display Saving

Select a period ▶ Press

**Tip** ▶ During a call, Display turns off/Backlight turns off automatically after Display Saving/Backlight time. To turn it back on, press a key other than .

## External Display Settings

### Switch On/Off

Activate or deactivate External Display

**Default** On

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ External Display ▶ Switch On/Off

Choose **On** (activate) or **Off** ▶ Press

### Backlight

Select Backlight illumination time for External Display

**Default** 15 seconds

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Display ▶ External Display ▶ Backlight

Select time ▶ Press

To disable Backlight, choose **Off** ▶ Press

## LCD Contrast

Adjust External Display Contrast from nine levels

Default: Level 5

### Main Menu

Settings → Phone Settings (☎) → Display → External Display → LCD Contrast

Use **↓** to adjust level → Press **■**

## Caller Display

Show or hide caller's number or name on External Display

Default: On

### Main Menu

Settings → Phone Settings (☎) → Display → External Display → Caller Display


Choose **On (show)** or **Off** → Press **■**

## Viewing Images on External Devices

Use optional Video Cable to connect 905SH to a TV, VCR, etc. to view images or exportable V-applications saved on 905SH/Memory Card.

- Exportable Sources (some images and sounds will not play on external devices):
  - V-applications
  - Images in Data Folder
  - Video Player
  - Video Call
- When Video Player, V-applications or Video Call images are viewed on external devices, images do not appear on handset Display.
- Handset TV images are not exportable.
- Not available when handset is closed.

## Connecting to External Devices

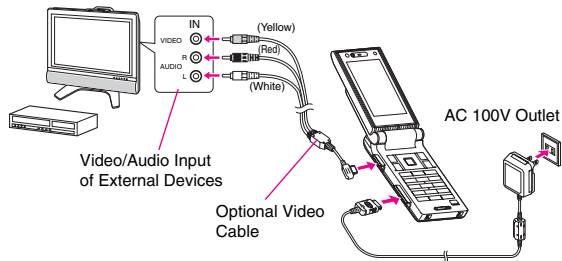

## Precautions

Observe the following when connecting TV, VCR, etc. and handset:

- Turn off the device before connecting/disconnecting Video Cable.
- Connect Video Cable only to the video/audio inputs of the device and VIDEO OUT Connector of 905SH. Video Cable is designed exclusively for 905SH.
- Plug in firmly. To disconnect, grasp the plug and pull gently.
- Do not pull, twist or bend Video Cable to avoid damaging the cable and handset VIDEO OUT Connector.



## Activating Video Output





- Connect 905SH to device before activating Video Output.
- While Video Output is in use, control the volume on the connected device (except for Video Calls). Turn down the volume before disconnecting from handset.
- Video Output is **Off** by default.

Main Menu ▶ Settings ▶ Phone Settings (☎) ▶ Display ▶ Video Output ▶ Switch On/Off

### 1 Choose **On** and press

 To cancel, choose **Off** ▶ Press 
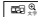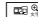
### 2 Open exportable images, video, etc.

- When exporting V-application, video or Video Call images, press  to toggle display between device and handset.
  - Video restarts each time display is switched.
  - For V-applications, press  twice to switch from device to handset.
- Video Output is cancelled when handset is closed or when Display turns off for Display Saving.
- Exiting Video Output:
  - Press  (Video Calls end).
  - Alternatively, press  for video.

## Switch Display Size

- Activate Video Output and follow these steps.

Select **Display Size** ▶ Press  ▶ Select **Standard or Large** ▶ Press 

## Rotate Image

- Activate Video Output and follow these steps.

Select **Rotation Setting** ▶ Press  ▶ Select from **No Rotation to 180°** ▶ Press 

- Images in Pictures folder, V-applications and Video Call images cannot be rotated.

**Note** ▶ Images may be noisy or distorted depending on the device. Images may be cropped vertically when Display Size is **Large**.

**Tip** ▶ Battery drains faster when Video Output is in use.

## Selecting TV System

TV System is **NTSC** by default.

Main Menu ▶ Settings ▶ Phone Settings (☎) ▶ Display ▶ Video Output ▶ TV System

### 1 Select **NTSC** or **PAL** and press

**Note** ▶ Use **NTSC** in Japan. Outside Japan, select either according to available TV system.

# Sounds & Alerts

## Customising Handset Responses

**Volume** Set Ringtone volume/general volume

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ Volume

Select an item ▶ Press **■** ▶ Use **⊕** to adjust level ▶ Press **■**

- Select from five levels. When **Increasing Volume** is set, volume increases every four seconds from Level 1 to Level 5. **Increasing Volume** is not available for **General Volume**.

**Ringtone/ videos** Set Ringtones or Ringvideos for incoming communications

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ Ringtone/videos

### Assign Tone in Preset Sounds

Select an item ▶ Press **■** ▶ Select **Assign Tone** ▶ Press **■** ▶ Select **Preset Sounds** ▶ Press **■** ▶ Select a tone ▶ Press **■**

- To play tones, select one and press **■** **Play**.
  - Press **■** **Stop** to stop.

### Assign Tone in Data Folder

Select an item ▶ Press **■** ▶ Select **Assign Tone** ▶ Press **■** ▶ Select **Ring Songs·Tones or Music** ▶ Press **■** ▶ Select a file ▶ Press **■**

- To play files, select one and press **■** **Options** ▶ Select **Play** ▶ Press **■**
  - Press **■** to stop.

### Assign Video

Select an item ▶ Press **■** ▶ Select **Assign Video** ▶ Press **■** ▶ Select **video** ▶ Press **■**

- To play video files, select one and press **■** **Options** ▶ Select **Play** ▶ Press **■**
  - Press **■** to stop.

### Duration (Not Available for Voice/Video Call)

Select an item ▶ Press **■** ▶ Select **Duration** ▶ Press **■** ▶ Enter time (01 - 99 seconds) ▶ Press **■**

### Restoring Custom Screen Ringtone/Ringvideo

- When Ringtone/Ringvideo is set while Custom Screen is active, Ringtone/Ringvideo takes priority over Custom Screen Ringtone/Ringvideo. (Custom Screen remains active.) To restore Custom Screen Ringtone/Ringvideo, select **Custom Screen** instead of **Assign Tone** or **Assign Video** and press **■**.

- Note** ▶
- Some files may not be usable.
  - Default Ringtone/Ringvideo may sound/play for Voice Calls when recording TV programs, downloading files, streaming, etc.
  - V-application set as Screensaver that also responds to incoming communications may take priority.
  - Video files over 3 MB and 3GPP video cannot be set as Ringvideo.

## Vibration

Handset vibrates for incoming calls/mail

Default Off

## Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Sounds &amp; Alerts ▶ Vibration

## Activating/Deactivating

Select an item ▶ Press  ▶ Select *Switch On/Off*  
 ▶ Press  ▶ Select *On, Link to Sound or Off* ▶  
 Press

- **Link to Sound:** Handset vibrates only when Ringtone is a compatible SMAF file.

## Vibration Pattern

Select an item ▶ Press  ▶ Select *Vibration Pattern* ▶ Press  ▶ Select from *Pattern 1 to Pattern 5* ▶ Press

- To check vibration patterns, select one and press  **Check**.
  - Press  **Stop** to stop.

**Note** ▶ Disable vibration when charging.

## Event Light

Select whether to flash Mobile Light for incoming calls/mail

Default On/Blue

## Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Sounds &amp; Alerts ▶ Event Light

## Activating/Deactivating

Select an item ▶ Press  ▶ Select *Switch On/Off*  
 ▶ Press  ▶ Select *On, Link to Sound or Off* ▶  
 Press

- **Link to Sound:** Mobile Light flashes only when Ringtone is a compatible SMAF file.

## Selecting Light Colour

Select an item ▶ Press  ▶ Select *Light Colour* ▶  
 Press  ▶ Select a colour ▶ Press

- To check colours, select one and press  **Check**.
  - Press  **Stop** to stop.

## Status Light

Select whether to flash Mobile/Small Light for missed incoming calls/mail

- Available for Normal mode only.
- Default: On (Mobile Light)/Blue

## Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ Status Light

## Activating/Deactivating

Select an item ▶ Press ▶ Select **Switch On/Off**  
▶ Press ▶ Choose **On (Mobile Light), On (Small Light) or Off** ▶ Press

## Selecting Mobile Light Colour

Select an item ▶ Press ▶ Select **MobileLight Colour** ▶ Press ▶ Select a colour ▶ Press

- To check colours, select one and press **Check**.
- Press **Stop** to stop.

## Customising System Sounds

### Keypad Tones

A tone sounds when a key is pressed

Default: Touch Tone

## Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ System Sounds ▶ Keypad Tones

## Assign Touch Tone

Select **Touch Tone** ▶ Press

## Assign a Pattern

Select **Pattern 1, Pattern 2 or Pattern 3** ▶ Press

- To check patterns, select one and press **Play**.
- Press **Stop** to stop.

## Disable Keypad Tones

Choose **Off** ▶ Press

## Warning Tone & Power On/Off Sound

Select a tone to sound for errors or when turning power on/off as well as its duration

- Default: Warning Tone: Sound Effect 6 (0.5 seconds)
- Power On/Off Sound: Sound Effect 8 (3 seconds)

## Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ System Sounds

## Sound Patterns in Preset Sounds

Select an item ▶ Press ▶ Select **Tone or Sound**  
▶ Press ▶ Select **Preset Sounds** ▶ Press ▶  
Select a tone ▶ Press

- To play tones, select one and press **Play**.
- Press **Stop** to stop.

## Sound Patterns in Data Folder

Select an item ▶ Press ▶ Select **Tone or Sound** ▶  
Press ▶ Select **Ring Songs-Tones** ▶ Press ▶  
Select a file ▶ Press

- To play files, select one and press **Options** ▶ Select **Play** ▶ Press
- Press **Stop** to stop.

## Duration

Select an item ▶ Press ▶ Select **Duration** ▶  
Press ▶ Select/enter time ▶ Press

## Disable Tone

Select an item ▶ Press ▶ Select **Tone or Sound**  
▶ Press ▶ Choose **Off** ▶ Press

## Additional Sound Settings

**Surround** Activate or deactivate speaker surround

Default On

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Sounds & Alerts ▶ Surround

Select **On**, **Link to Sound or Off** ▶ Press

**Ringer Output** Set ringer source when using Headphones, etc.

Default Earphone/Speaker

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Ringer Output

Select **Earphone** or **Earphone/Speaker** ▶ Press

- Even if **Earphone** is selected, Ringtone sounds from speaker when Headphones are not connected.

**Earpiece Volume** Setting applies when placing/answering calls

Default Level 3

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Earpiece Volume

Use  to adjust level ▶ Press

## Date & Time

See indicated pages for these items.

<b>World Clock</b>	See P.13-15	<b>Alarm</b>	See P.13-11
--------------------	-------------	--------------	-------------

**Set Date/Time** Set the date and time

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Date & Time ▶ Set Date/Time

### When Time Format is 24 Hour

Enter the year ▶ Enter the month ▶ Enter the day ▶ Enter the time ▶ Press

### When Time Format is 12 Hour

Enter the year ▶ Enter the month ▶ Enter the day ▶ Enter the time ▶ Use  to select am or pm ▶ Press

- Note** ▶
- Entry order varies by Date Format (see P.11-15). Use the letters below the entry fields as a guide.
  - When removing the battery for replacement, etc., Clock settings remain. However, should the handset go without power for an extended period of time (approximately five days), Clock will need to be reset.

- Tip** ▶
- The day of the week is set automatically.
  - When Clock has not been set, --/-- --:-- appears for date and time in Call Log, etc.
  - To correct numbers, use  to move cursor and re-enter digits.
  - Choose a Clock type or use Calendar for Standby (see P.11-4).

### Set Time Zone/ Daylight Saving

Change Time Zone or activate Daylight Saving

**Default** Time Zone: Tokyo, Daylight Saving: Off

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Date & Time

### Time Zone

Select **Set Time Zone** ▶ Press  ▶ Use  to select a **Time Zone** ▶ Press

■ If your zone is not preset, press  **Custom** ▶ Enter city name (up to 16 characters) ▶ Press  ▶ Use  to select + or - ▶ Press  ▶ Enter time difference ▶ Press

### Daylight Saving

Select **Daylight Saving** ▶ Press  ▶ Choose **On** ▶ Press

■ To cancel, select **Daylight Saving** ▶ Press  ▶ Choose **Off** ▶ Press

- Activate Daylight Saving to advance handset local time by one hour.

### Date/Time Format

Change date/time format

**Default** Time Format: 24 Hour, Date Format: Y/M/D

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Date & Time

### Time Format

Select **Time Format** ▶ Press  ▶ Select **24 Hour or 12 Hour** ▶ Press

### Date Format

Select **Date Format** ▶ Press  ▶ Select **D.M.Y, M-D-Y or Y/M/D** ▶ Press

### Calendar Format

Select whether to start the week on Sunday or Monday

**Default** Sunday-Saturday

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Date & Time  
▶ Calendar Format

Select **Sunday-Saturday or Monday-Sunday** ▶ Press

### Wake-up Alarm

Set handset to turn on automatically to announce Alarm Time

**Default** Off

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Date & Time  
▶ Wake-up Alarm

Choose **On** ▶ Press

■ To cancel, choose **Off** ▶ Press

# User Dictionary

## Entries (Japanese Only)

Save frequently used words/phrases. Assign a reading (keyword) in hiragana to each entry. In text entry windows, enter a reading and convert. Saved words/phrases appear among word suggestions.

- Save up to 100 entries.
- Save up to five words/phrases per reading.

**New Entry** Save words/phrases to User Dictionary

**Main Menu** ▶ Settings ▶ Phone Settings (☎) ▶ User Dictionary ▶ New Entry

**Enter a word/phrase** ▶ Press  ▶ **Enter a reading (keyword)** ▶ Press

- Enter up to 15 characters per word/phrase and eight characters in hiragana per reading.

**Edit/Delete** Edit or delete entries

**Main Menu** ▶ Settings ▶ Phone Settings (☎) ▶ User Dictionary ▶ Edit Dictionary

### Edit

**Select a word/phrase** ▶ Press  ▶ **Edit the word/phrase** ▶ Press  ▶ **Edit reading** ▶ Press  ▶ Press  **Yes**

### Delete

**Select a word/phrase** ▶ Press  **Delete** ▶ Press  **Yes**

## 905SH Download Dictionary (Japanese Only)

Download specialised 905SH Download Dictionaries from Sharp's Space Town Mobile Internet site (see **P.16-7**). Activate up to five dictionaries at one time to improve handset character conversion. Dictionary words appear among word suggestions.

**Acquire Dictionary** Activate downloaded dictionary

**Main Menu** ▶ Settings ▶ Phone Settings (☎) ▶ User Dictionary ▶ Acquire Dictionary

**Select from Dictionary 1 to Dictionary 5** ▶ Press  ▶ **Select a dictionary** ▶ Press

- ▶ To replace dictionaries, select one and press  ▶ Select a dictionary ▶ Press

**Note** ▶ Some dictionary files may not be usable.

**Cancel** Cancel dictionary

**Main Menu** ▶ Settings ▶ Phone Settings (☎) ▶ User Dictionary ▶ Acquire Dictionary

**Select a dictionary** ▶ Press  **Options** ▶ **Select Cancel** ▶ Press

**Info** View dictionary information

**Main Menu** ▶ Settings ▶ Phone Settings (☎) ▶ User Dictionary ▶ Acquire Dictionary

**Select a dictionary** ▶ Press  **Options** ▶ **Select Info** ▶ Press

- ▶ Press  to exit.

# Handset Security

## Face Recognition

Activate Face Recognition to lock 905SH automatically when it is turned on, closed and reopened in Standby or when Display turns back on after shutdown, etc. Match your face in the live camera image against saved portrait to unlock.

Precautions for capturing portrait/scanning face:

- Make sure your face is clearly visible; facial features may be obscured by hair, coloured glasses, masks, etc.
- Face should be lit evenly and brightly (avoid backlight and strong light).

- Note** ▶
- Identification accuracy is not guaranteed. Vodafone cannot be held liable for misuse or any damages associated with the use of Face Recognition.
  - Handset Code is required to activate/cancel Face Recognition. Changing the code (see P.11-22) helps enhance security.
  - Vodafone live! FeliCa is available even when Face Recognition is active.

## Saving User Information

Save a name and portrait as well as a question and an answer to the question. In case recognition fails, enter the answer to unlock 905SH.

- Save up to five users (with up to five portraits each).
- If no question or answer is saved, enter Handset Code to unlock 905SH.

Main Menu ▶ Settings ▶ Phone Settings (☰) ▶ Locks ▶ Face Recognition ▶ User Registration

- 1 Enter Handset Code and press
- 2 Select from *User 1 to User 5* and press  Options
- 3 Select *New Entry* and press 
  - To edit user information, select *User Edit* ▶ Press
  - To delete users, select *Delete User* ▶ Press  ▶ Press  Yes
- 4 Select *Name:* and press
- 5 Enter a name and press
- 6 Select *Register Riddle:* and press
- 7 Enter a question and press
- 8 Select *Register Answer:* and press
- 9 Enter the answer and press 
  - Capture and save portrait if not already saved (see P.11-18).
- 10 Press  Save to save




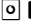
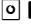


## ■ Saving Portraits

Save up to five portraits per user. Change location, face angle, accessory, brightness, etc. for each shot.

- Saving multiple portraits increases recognition accuracy. However, security will be compromised.
- A person's portraits can be saved to multiple users; this may increase recognition accuracy.
- Look straight into lens and frame whole face with no expression; adjust face size (may not be saved if too small). Stay still until shooting is completed.
- Follow these steps after Step 9 on P.11-17.

### 1 Select *Face Image* and press

### 2 Select from *Image 1 to Image 5* and press **Capture**



- To overwrite saved portrait, press  **Yes**.
- To delete portraits, select one  Press  **Delete**  Press  **Yes**
  - Deleting all portraits cancels Face Recognition.

### 3 Frame your face on Display and press

- Stay still until shooting is completed.
- If **Cannot save. Please change the shooting condition.** appears, start over from Step 2.

### 4 Press **Yes**

Portrait is saved.

- To save more, repeat Steps 2 - 4.
- To save user information, press  then  **Save**.

**Note** ▶ Do not wear a mask when capturing portraits, even for use with **Mask** (see P.11-19 "Security Level").

## ■ Activating & Cancelling

- Save a user beforehand.
- Face Recognition is **Off** by default.

**Main Menu** ▶ Settings ▶ Phone Settings (☰) ▶ Locks ▶ Face Recognition ▶ Switch On/Off

### 1 Choose **On** or **Off** and press

### 2 Enter Handset Code and press

**Tip** ▶ Activate Face Recognition to lock 905SH automatically when it is turned on or when Display turns off automatically (e.g. 905SH is closed in Standby).

## ■ Scanning Face

Face Recognition window opens when: 905SH is turned on; closed in Standby then reopened; Display turns back on after shutdown, etc.

- Clean dust/smudges from lens cover of Internal Camera with a soft cloth before use.
- 905SH may not lock when Display turns back on with a resumed function window/menu open. Face Recognition window opens when handset returns to Standby.

### 1 Face the Display

- To show operational tips, select **Panda** in Conductor Setting (see P.11-19).
- 905SH is unlocked when your face matches saved portrait.

## When Face Recognition Fails

■ **Function locking.** appears. Follow these steps to unlock 905SH.

Press **[ ]** ➔ **Enter Handset Code** ➔ **Press [ ]**

- To retry Face Recognition, press **[ ]** **Recog**.

■ When saved question appears, press **[ ]**, enter the answer and press **[ ]**.

- If the answer is incorrect, **The Answer is wrong** appears. Press **[ ]** to re-enter the answer, or follow these steps to unlock 905SH.

Press **[ ]** ➔ **Press [ ]** ➔ **Enter Handset Code** ➔

**Press [ ]**

**Tip** ➤ When wearing a mask, set Security Level (see right) to **Mask** to make your face recognisable. However, security will be compromised.

## Face Recognition Settings

**Conductor Setting** Show or hide operational tips during recognition

Default Off

**Main Menu** ➤ *Settings* ➤ *Phone Settings (☰)* ➤ *Locks* ➤ *Face Recognition* ➤ *Conductor Setting*

Select **Off, Panda or Preview** ➔ **Press [ ]**

<b>Off</b>	<i>Please wait...</i> appears
<b>Panda</b>	Panda graphic appears with operational tips
<b>Preview</b>	Internal Camera Viewfinder appears for guidance

**Security Level** Select accuracy level

Default Normal

**Main Menu** ➤ *Settings* ➤ *Phone Settings (☰)* ➤ *Locks* ➤ *Face Recognition* ➤ *Security Level*

Select **High, Normal, Low or Mask** ➔ **Press [ ]**

<b>High</b>	Unsaved faces are least likely recognised by mistake; your face may be hard to recognise
<b>Normal</b>	Standard recognition accuracy
<b>Low</b>	Your face is most recognisable; unsaved faces are most likely recognised by mistake
<b>Mask</b>	905SH recognises faces with masks. (Accuracy is equal to that of <b>Low</b> .)

## PIN

For more information on PIN, see **P.1-6**.

### PIN Entry

Select whether to require PIN every time handset is turned on (with USIM Card inserted)

Default: Off

### Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Locks ▶ PIN Entry ▶ Switch On/Off

Choose **On** or **Off** ▶ Press  ▶ Enter PIN1 ▶ Press

### PIN Lock

■ PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times consecutively. To cancel PIN1 Lock or PIN2 Lock, follow these steps.

**Open a function requiring PIN1 or PIN2** ▶ Enter **Personal Unblocking Key (PUK Code)** ▶ Press  ▶ Enter new PIN1 or PIN2 ▶ Press  ▶ Re-enter PIN1 or PIN2 ▶ Press

- For information on Personal Unblocking Key (PUK Code), contact Vodafone Customer Centre, General Information (see **P.20-26**).
- If PUK Code is incorrectly entered ten times, USIM Card is locked. (Count continues even if handset power is turned off.)
- For procedures required to unlock USIM Card, contact Vodafone Customer Centre, General Information (see **P.20-26**).

### Change PIN

Change PIN1 or PIN2

■ Activate PIN Entry first.

### Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Locks

### PIN1

Select **PIN Entry** ▶ Press  ▶ Select **Change PIN** ▶ Press  ▶ Enter current PIN1 ▶ Press  ▶ Enter new PIN1 ▶ Press  ▶ Re-enter new PIN1 ▶ Press

### PIN2

Select **Change PIN2** ▶ Press  ▶ Enter current PIN2 ▶ Press  ▶ Enter new PIN2 ▶ Press  ▶ Re-enter new PIN2 ▶ Press

## Handset Locks

### Handset Lock

Activate Handset Lock to require Handset Code each time handset power is turned on

Default: Off

### Main Menu

▶ Settings ▶ Phone Settings (☰) ▶ Locks ▶ Handset Lock

Choose **On** ▶ Press  ▶ Enter Handset Code ▶ Press

■ To cancel, choose **Off** ▶ Press  ▶ Enter Handset Code ▶ Press

**Note** ▶ Emergency calls (110, etc.) are possible even when Handset Lock is active. For more, see **P.2-3** "Emergency Calls".

**Function Lock** Restrict access to handset functions

Default: Off

**Main Menu** ▶ Settings ▶ Phone Settings (Ⓜ) ▶ Locks ▶  
Function Lock

**Enter Handset Code** ▶ Press [ ]

■ To unlock, enter Handset Code in Standby or during a call ▶  
Press [ ]

- Function Lock remains active even if handset power is deactivated, then reactivated.

#### When Function Lock is Active

■ In Standby, press [ ] for 2+ seconds to deactivate handset power, [ ] for 1+ seconds to activate/cancel Keypad Lock, [0] - [9] to enter Handset Code or [ ] to edit Handset Code entry.

■ During a call, press [ ] to end the call, [ ] or [ ] to show/hide Options or switch images during Video Calls, [ ] to mute/unmute Microphone, [ ] to switch between callers in Call Waiting, [0] - [9] to enter Handset Code or [ ] to edit Handset Code entry.

■ When a call arrives, press [ ] to show Options. Answer calls by pressing [ ] or keys for Any Key Answer (see P.2-6), or reject calls by pressing [ ]. Press [ ] to forward incoming calls (when **No Answer** is set for Diverts).

**Note** ▶ Emergency calls (110, etc.) are possible even when Function Lock is active. For more, see P.2-3 "Emergency Calls".

**Phone Book Lock** Protect Phone Book entries from accidental alteration and restrict access to Phone Book information

Default: Off

**Main Menu** ▶ Settings ▶ Phone Settings (Ⓜ) ▶ Locks ▶  
Phone Book Lock

**Choose On** ▶ Press [ ] ▶ **Enter Handset Code** ▶  
**Press** [ ]

■ To cancel, choose **Off** ▶ Press [ ] ▶ Enter Handset Code ▶  
Press [ ]

**Note** ▶ When Phone Book Lock is active, the following Phone Book operations are disabled:  
■ Searching, saving, editing and dialling, including Speed Dial (see P.4-14).

#### Secret Mode

Activate Secret Mode to open Secret Mode entries.

**Show Secret Data** Activate or cancel Secret Mode

Default: Off

**Main Menu** ▶ Settings ▶ Phone Settings (Ⓜ) ▶ Locks ▶  
Show Secret Data

**Choose On** ▶ Press [ ] ▶ **Enter Handset Code** ▶  
**Press** [ ]

■ To cancel Secret Mode, choose **Off** ▶ Press [ ]

**Note** ▶ Do not save confidential information in Phone Book/schedule entries. Handset Code and thus Secret Mode entries may be compromised.

### When Secret Mode is Off

- Phone Book Names/Picture images do not appear for incoming calls/mail from numbers/addresses in Secret Mode entries. Personal Ringtones/Ringvideos are disabled. Names for numbers in Secret Mode entries do not appear in Call Log or list of received messages.

## Changing Handset Code

**Chng Handset Code** Whenever necessary, change Handset Code

Default:9999

**Main Menu** ► Settings ► Phone Settings (☰) ► Locks ► Chng Handset Code

**Enter current Handset Code** ► Press [OK] ► **Enter new Handset Code** ► Press [OK] ► **Re-enter new Handset Code** ► Press [OK]

## Reset

### Reset Settings

Cancel custom settings and return handset functions to their default settings

### Main Menu

► Settings ► Phone Settings (☰) ► Master Reset  
► Reset Settings

**Enter Handset Code** ► Press [OK] ► Press [OK] **Yes**

► Press [OK] **Yes**

- Phone Book entries are unaffected.
- A confirmation appears (before entering Handset Code) in the following cases. Press [OK] **Yes** to proceed.
  - V-application is active
  - Music Player is active
  - Bluetooth® is active
  - Infrared is active

**Note** ► Some default settings may not be restored.

### Reset All

Clear all Phone Book entries, Data Folder files, etc.

### Main Menu

► Settings ► Phone Settings (☰) ► Master Reset  
► Reset All

**Enter Handset Code** ► Press [OK] ► Press [OK] **Yes**

► Press [OK] **Yes**

- A confirmation appears (before entering Handset Code) in the following cases. Press [OK] **Yes** to proceed.
  - V-application is active
  - Music Player is active
  - Bluetooth® is active
  - Infrared is active

- Note** ▶
- Files and records deleted by Reset All cannot be restored. Handset Code returns to the default setting. Reset All deletes downloaded V-applications and IC-appli.
  - カスタムご紹介** (≡) in Data Folder (Custom Screens) and V-applications are restored.
  - Reset All is disabled if IC Card (see **P.19-2**) data remains. Delete IC Card data beforehand.

## Call Settings

See indicated pages for these items.

<b>Voicemail/Diverts</b>	See P.14-3, P.14-2	<b>Show My Number</b>	See P.14-10
<b>Call Waiting</b>	See P.14-5	<b>Call Barring</b>	See P.14-7

### International Call

**Int'l Prefix** Save frequently used international prefix

Default 0046010

**Main Menu** ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Int'l Calling ▶ Int'l Prefix

Enter a prefix ▶ Press

**Country Codes** Change, add or delete Country Codes

**Main Menu** ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Int'l Calling ▶ Country Codes

### Change

Select a country ▶ Press  ▶ Select **Change** ▶  
Press  ▶ Enter a country name ▶ Press  ▶  
Enter country code ▶ Press

### Add

Select a blank entry ▶ Press  ▶ Enter a country  
name ▶ Press  ▶ Enter country code ▶ Press

### Delete

Select a country ▶ Press  ▶ Select **Delete** ▶  
Press  ▶ Press  **Yes**

## Additional Settings

**Minute Minder** Handset beeps once each minute during calls

Default Off

**Main Menu** ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Minute Minder

Choose **On (handset beeps)** or **Off** ▶ Press

- Handset beeps every minute.

**Display Call Cost** Show or hide Call Cost after each call

Default Off

**Main Menu** ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Time & Cost ▶ Display Call Cost

Choose **On (Call Cost appears)** or **Off** ▶ Press

**Call Time Counter** Show or hide elapsed Call Time during a call

Default On

**Main Menu** ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Time & Cost ▶ Call Time Counter

Choose **On (Call Time appears)** or **Off** ▶ Press

## *Connectivity*



# Bluetooth®

## Getting Started

Bluetooth® is a wireless technology that allows 905SH to communicate with other 905SH within ten metres or with other compatible devices (PCs, mobile phones, handsfree devices, etc.).

In this chapter, "files" refers collectively to the following: Bookmarks, Tasks, Text Templates, Phone Book and Calendar entries; Messaging and Data Folder files.

Handset Bluetooth® Specifications:

<b>Communication System</b>	Bluetooth® specification Ver. 1.2
<b>Bluetooth® Profiles Supported</b>	Headset Profile Hands-Free Profile Dial-up Networking Profile ObjectPush Profile File Transfer Profile Basic Imaging Profile
<b>Output</b>	Bluetooth® Power Class 2

## Precautions

- Bluetooth® connections are available with compatible devices supporting the same profile.
- Bring handsets to within ten metres. Bluetooth® connection/transfer rate is affected by distance between handsets, obstructions, signal conditions, handset status, etc.
- Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on the status of other devices used in the spectrum, Bluetooth® connection may slow down/terminate, or the range may decrease.
- Connect 905SH to one device at a time via Bluetooth®.

**Note** ▶ Bluetooth® connection may not be possible with some Bluetooth® devices.


- Handset shall be connected to certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG.
- Depending on characteristics or specifications of the certified Bluetooth® devices, connection or data transfers may fail, or operational procedures, display content and actual operations may differ from those described in this manual.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- For details about headset/handsfree devices, see the device manuals.

## Activating Bluetooth®



Activate Bluetooth® before receiving files or connecting handset to handsfree devices.


Bluetooth® is **Off** by default.

**Main Menu** ▶ *Settings* ▶ *Connectivity* (☰) ▶ *Bluetooth* ▶ *Switch On/Off*

**1** Choose **On** and press 

 appears.

 To cancel, choose **Off** ▶ Press 


- When transmission is in progress, press  **Yes**.

**Note** ▶ Handset must be in Standby to accept connection requests from other devices or to receive files; these functions are disabled even in Standby if Function Lock/Keypad Lock is active or firmware update is in progress.

## Bluetooth® Connection

Activate Bluetooth® (see P.12-2) on recipient device. Connection starts when a request is received from the other device. (Authorisation Code may be required.)

### Example

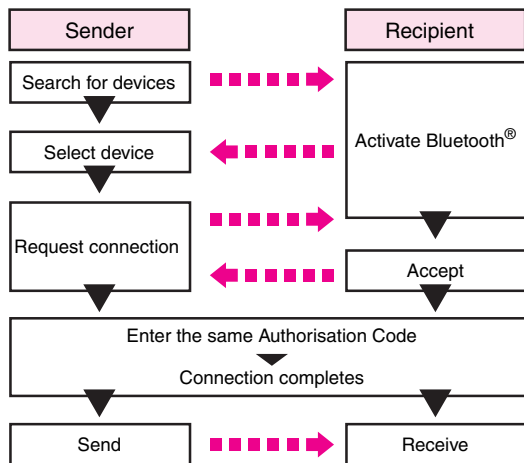

### Authorisation Code

- Authorisation Codes (4 to 16 digits) are specific for Bluetooth® connection. Pairing is possible when Authorisation Codes of both devices match.
  - Authorisation Codes are not necessary for paired devices.

## Device Search & Pairing

Search for Bluetooth® devices for pairing. Paired devices are automatically registered to handset.

- Authorisation Codes are not necessary for paired devices.
- Search for up to 16 devices at a time.
- Device search is disabled if 32 devices are already registered.
- Activate Bluetooth® on devices to be paired with.

Main Menu ► Settings ► Connectivity (الاتصال) ► Bluetooth

### 1 Select Search for Devices and press

Found devices are listed after search. (The previous search result appears, if any.)

- Device Indicators:

PC      Wireless headset      PDA  
 Handsfree device      Mobile phone      Printer  
 Others

Press  **Cancel** to cancel.

### 2 Select a device and press

When transmission is in progress, press  **Yes**.

### 3 Enter the same Authorisation Code (4 to 16 digits) for handset and the other device and press

When pairing is complete, **Pairing is successful.** appears and handset returns to Standby.

- For handsfree devices, enter specified Authorisation Code.
- Complete code entry within 30 seconds.

### Pairing with Handsfree Devices

- Start device search with handsfree devices for pairing.  
**Handset receives a connection request** → Press **Yes**  
 → **Enter Authorisation Code** → Press
- Activate Bluetooth® (see P.12-2) on handset and set Visibility (see below) to **Show My Phone**.

### Opening Paired Device List

**Main Menu** ▶ *Settings* ▶ *Connectivity (📶)* ▶ *Bluetooth*

#### 1 Select Paired Devices and press

List of all paired devices appears.

- To open list of handsfree devices only, press .
- To rename paired devices, select one → Press **Options** → Select **Change Name** → Press → Enter name (up to 16 characters) → Press
- To delete paired devices, select one → Press **Options** → Select **Delete** → Press → Press **Yes**

### Visibility

Allow other Bluetooth® devices to find 905SH during device search.

- Set Visibility to **Hide My Phone** to hide 905SH from other Bluetooth® devices.
- Visibility is set to **Show My Phone** by default.

**Main Menu** ▶ *Settings* ▶ *Connectivity (📶)* ▶ *Bluetooth* → *Visibility*

#### 1 Select **Show My Phone** or **Hide My Phone** and press

## Transferring Files via Bluetooth®

### Transfer Options

<b>One File Transfer</b>	Transfer files one at a time. Received files are saved to corresponding functions.
<b>All File Transfer</b>	Transfer all files by function
<b>Receive Folder</b>	Receive a folder and its contents. Folders are saved to Data Folder. (905SH does not support sending folders.)

- Note** ▶
- During infrared transfers or Bluetooth® transmissions, handset automatically enters Offline Mode. Thus transfers are disabled while receiving calls/messages, during calls, while using Web or Media Player, while editing mail, etc. Offline Mode is cancelled after transfers.
  - Some files may not be saved correctly.

### Transferable Files

Function	One File	All Files	Notes
<b>Phone Book</b>	Available	Available	In One File transfers, the following settings are lost: Category, Ringtone, Light, Vibration and Secret. All File transfer includes My Details. Picture setting may be lost depending on the image.

Function	One File	All Files	Notes
<b>Calendar</b>	Available	Available <sup>1</sup>	In One File transfers, Reminder tone and Secret Mode settings are lost. Entries with start date/time that cannot be set on 905SH are lost.
<b>Tasks</b>	Available	Available <sup>1</sup>	In One File transfers, Reminder tone and Secret Mode settings are lost. Entries with due date/time that cannot be set on 905SH are overwritten with the date/time of transfer.
<b>Text Templates</b>	Available <sup>2</sup>	Available	
<b>Bookmarks</b>	N/A <sup>3</sup>	Available	
<b>Received Msg.</b>	N/A <sup>3</sup>	Available <sup>4</sup>	
<b>Sent Messages</b>	N/A <sup>3</sup>	Available	
<b>Drafts</b>	N/A <sup>3</sup>	Available <sup>5</sup>	
<b>Data Folder</b>	Available	Available <sup>6</sup>	Copy protected files are not transferable. Send files from DCIM folder one at a time; received DCIM folder files are saved to Pictures folder.

<sup>1</sup>In All File transfers, Calendar and Tasks are sent together from **Appointments/Tasks**.

<sup>2</sup>Only receiving files is supported.

<sup>3</sup>Received files are saved to Other Documents folder as unknown files and cannot be used as Bookmarks or messages.

<sup>4</sup>All File transfers save Spam Folder messages to the incoming message folder on recipient Vodafone handsets (except 905SH) and MMS Notice as SMS messages, invalidating complete message retrieval.

<sup>5</sup>In All File transfers, SMS addressed to multiple recipients may not be saved on recipient Vodafone handsets (except 905SH), or only the first entered recipient remains.

<sup>6</sup>Receive folders one at a time into handset Data Folder.

**Note** ▶

- Handset stores up to 300 entries between Calendar and Tasks. If the limit is reached during a transfer, the remaining entries will not be received.
- Transfer most Memory Card Data Folder files one at a time. Send DCIM folder files one by one; received DCIM files are automatically saved in Pictures folder.
- Templates and Unsent Messages are not transferable.
- Messages may not be received depending on the size.
- Handset stores up to 500 messages between Drafts, Templates, Unsent Messages and Sent Messages. If the limit is reached during a transfer, the remaining messages will not be received.
- Sky Mail may be received as MMS on 905SH depending on the sender Vodafone handset.

## One File Transfer

### Sending

- Send one file from Phone Book, Calendar, Tasks or Data Folder (see P.12-4 "Transferable Files").

- 1 Select a file and press **Options**
- 2 Select **Send**, **Send Entry** or **Send My Card** and press
- 3 Select **Via Bluetooth** and press

- When there is no entry in Paired Devices, device search starts.
  - To send files to unpaired devices, select **More Devices** → Press → Select **Refresh** → Press → Device search starts

- 4 Select a device and press
  - When transmission is in progress, press **Yes**.

### 5 Prepare recipient device

- 6 Press **Yes**
  - Offline Mode is set and transfer starts.
  - When requested, enter Authorisation Code → Press

### Receiving

Main Menu ▶ Settings → Connectivity (📶) → Bluetooth → Switch On/Off

- 1 Choose **On** and press
  - Bluetooth® is activated.
- 2 When connection is requested, **Calling not available during operation, OK?** appears
  - To accept connection request from unpaired devices, press **Yes** → Enter Authorisation Code → Press

- 3 Press **Yes**

Offline Mode is set.

### 4 Transfer starts and confirmation appears

- Press **Cancel** to cancel.
- Press to end.

### 5 Press **Yes** to save

- To cancel transfer, press **No** → Press **Yes**
- For Data Folder files, select **Phone** or **Memory Card** → Press

## All File Transfer

### Sending

Main Menu ▶ Settings → Connectivity (📶) → Bluetooth

- 1 Select **Send All** and press
  - When there is no entry in Paired Devices, device search starts.
    - To send files to unpaired devices, select **More Devices** → Press → Select **Refresh** → Press → Device search starts
- 2 Select a device and press
  - When transmission is in progress, press **Yes**.
- 3 Press **Yes**
  - Offline Mode is set.
- 4 Enter Handset Code and press
- 5 Prepare recipient device
- 6 Select an item and press
  - Transfer starts.
    - When requested, enter Authorisation Code → Press
    - For Phone Book, **Picture data in Phone Book transfer?** appears. Press **Yes** or **No**.

## Receiving

Main Menu ► Settings ► Connectivity ( ) ► Bluetooth ► Switch On/Off

### 1 Choose *On* and press

Bluetooth® is activated.

### 2 When connection is requested, *Calling not available during operation, OK?* appears

To accept connection request from unpaired devices, press  **Yes**  
► Enter Authorisation Code ► Press

### 3 Press **Yes**

Offline Mode is set.

### 4 Transfer starts and confirmation appears

Press  **Cancel** to cancel.  
Press  to end.

## 5 Adding Files

#### 1 Select *As New Items* and press

When transfer completes, handset returns to Standby.

Press  **Cancel** to cancel.  
Press  to end.

#### Overwriting Existing Files

#### 1 Select *Delete All & Save* and press

#### 2 Press **Yes**

#### 3 Enter Handset Code and press

When transfer completes, handset returns to Standby.

- When Phone Book is overwritten, My Details except handset phone number is overwritten as well.

Press  **Cancel** to cancel.  
Press  to end.

## Receiving Folders

Receive folders from compatible devices and save to handset Data Folder.

- 905SH does not support sending folders.
- 905SH receives folders when it can newly create a folder, or a folder with the same name already exists in the same layer as that of sender's.
- For sender's procedures, see the device manual.

Main Menu ► Settings ► Connectivity ( ) ► Bluetooth ► Switch On/Off

### 1 Choose *On* and press

Bluetooth® is activated.

### 2 When connection is requested, *Calling not available during operation, OK?* appears

To accept connection request from unpaired devices, press  **Yes**  
► Enter Authorisation Code ► Press

### 3 Press **Yes**

Offline Mode is set and transfer starts. When finished, handset returns to Standby.

Press  **Cancel** to cancel.  
Press  to end.

## Connecting Handsfree Devices

- Pair with handsfree devices beforehand (see P.12-3).

**Main Menu** ▶ Settings ▶ Connectivity (☰) ▶ Bluetooth ▶ Paired Devices

### 1 Press

List of paired handsfree devices appears.

### 2 Select a device and press

The device is connected and  (checked) appears.

When transmission is in progress, press  **Yes**.

To disconnect, select a device ▶ Press

To rename paired devices, select one ▶ Press  **Options** ▶ Select **Change Name** ▶ Press  ▶ Enter name ▶ Press

### Sound Output

- Switch sound output between handset and handsfree devices.

While talking on the phone, press  **Options** ▶

Select **Transfer Audio** ▶ Press  ▶ Select **To Handset or To Bluetooth** ▶ Press

- Select **To Handset** to talk on handset.
- If **To Bluetooth** is selected while a handsfree device is not connected, list of paired handsfree devices appears.

- Note** ▶
- While talking on handsfree devices, adjust volume on the device.
  - Place calls from handsfree devices while handset is in Standby.

- Tip** ▶
- Devices marked with  reconnect to handset when placing or receiving calls.
  - indicates that the device is not selected. When  is set to the connected device, a confirmation appears.

## Bluetooth® Settings

**Device Name** Specify a Bluetooth® name for handset

**Default** Vodafone 905SH

**Main Menu** ▶ Settings ▶ Connectivity (☰) ▶ Bluetooth ▶ My Device Settings ▶ Device Name

**Enter name** ▶ Press

- Enter up to 16 characters. (Pictographs are not available.)

**Bluetooth Timeout** Set idle time after which Bluetooth® is cancelled

**Default** No Timeout

**Main Menu** ▶ Settings ▶ Connectivity (☰) ▶ Bluetooth ▶ My Device Settings ▶ Bluetooth Timeout

**Select time** ▶ Press

- To cancel, select **No Timeout** ▶ Press

### Handsfree Setting

Select whether to talk handsfree when placing calls from handset

Default: Handsfree mode

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Bluetooth ▶ My Device Settings ▶ Handsfree Setting

Select **Private mode** or **Handsfree mode** ▶ Press

- When placing calls from handsfree devices, only handsfree conversation is available regardless of the setting.

### OPP Authentication

Select whether or not to require Authorisation Code for file transfers

Default: On

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Bluetooth ▶ My Device Settings ▶ OPP Authentication

Choose **On (require)** or **Off** ▶ Press

### Device Details

Open Bluetooth®-related handset properties

### Main Menu

▶ Settings ▶ **Connectivity** (☰) ▶ Bluetooth ▶ My Device Settings

Select **Device Details** ▶ Press

# Infrared

## Getting Started

Infrared is a wireless technology that allows 905SH to communicate with other compatible devices (PCs, mobile phones, etc.).

In this chapter, "files" refers collectively to the following: Bookmarks, Tasks, Text Templates, Phone Book and Calendar entries; Messaging and Data Folder files.

- 905SH complies with IrMC 1.2, but some files may not be exchanged.
- Infrared transfers are disabled while sending/receiving mail or using Web.
- Transfers in direct sunlight, under fluorescent lighting or near infrared equipment may fail.

**Tip** ▶ When transfer fails, **Device not found. Reconnect?** appears. Take the precautions on **P.12-10** and press  **Yes** to try again.


### Authorisation Code

- Authorisation Codes (four digits) are specific for infrared transfers. All File transfers are possible when Authorisation Codes of both devices match.



## Precautions

- Align Infrared Ports within 20 centimetres with no obstructions between handsets.

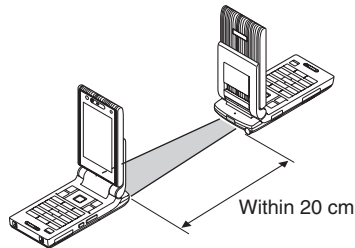

- Keep Infrared Ports aligned during transfer.
- Dust/oil may impair file transfers; clean Infrared Ports with a soft cloth beforehand.

## Transferring Files via Infrared

### Transfer Options

<b>One File Transfer</b>	Transfer files one at a time. Received files are saved to corresponding functions.
<b>All File Transfer</b>	Transfer all files by function
<b>Receive Folder</b>	Receive a folder and its contents. Folders are saved to Data Folder. (905SH does not support sending folders.)

- Note** ▶
- Transfers are disabled while using Web or Media Player, while editing mail or files, etc.
  - Some files may not be saved in whole or part.

## Transferable Files

Function	One File	All Files	Notes
<b>Phone Book</b>	Available	Available	In One File transfers, the following settings are lost: Category, Ringtone, Light, Vibration and Secret. All File transfer includes My Details. Picture setting may be lost depending on the image.
<b>Calendar</b>	Available	Available <sup>1</sup>	In One File transfers, Reminder tone and Secret Mode settings are lost. Entries with start date/time that cannot be set on 905SH are lost.
<b>Tasks</b>	Available	Available <sup>1</sup>	In One File transfers, Reminder tone and Secret Mode settings are lost. Entries with due date/time that cannot be set on 905SH are overwritten with the date/time of transfer.

<sup>1</sup>In All File transfers, Calendar and Tasks are sent together from **Appointments/Tasks**.

Function	One File	All Files	Notes
<b>Text Templates</b>	Available <sup>2</sup>	Available	
<b>Bookmarks</b>	N/A <sup>3</sup>	Available	
<b>Received Msg.</b>	N/A <sup>3</sup>	Available <sup>4</sup>	
<b>Sent Messages</b>	N/A <sup>3</sup>	Available	
<b>Drafts</b>	N/A <sup>3</sup>	Available <sup>5</sup>	
<b>Data Folder</b>	Available	Available <sup>6</sup>	Copy protected files are not transferable. Send files from DCIM folder one at a time; received DCIM folder files are saved to Pictures folder.

<sup>2</sup>Only receiving files is supported.

<sup>3</sup>Received files are saved to Other Documents folder as unknown files and cannot be used as Bookmarks or messages.

<sup>4</sup>All File transfers save Spam Folder messages to the incoming message folder on recipient Vodafone handsets (except 905SH) and MMS Notice as SMS messages, invalidating complete message retrieval.

<sup>5</sup>In All File transfers, SMS addressed to multiple recipients may not be saved on recipient Vodafone handsets (except 905SH), or only the first entered recipient remains.





<sup>6</sup>Receive folders one at a time into handset Data Folder.

- Note** ▶
- Handset stores up to 300 entries between Calendar and Tasks. If the limit is reached during a transfer, the remaining entries will not be received.
  - Transfer most Memory Card Data Folder files one at a time. Send DCIM folder files one by one; received DCIM files are automatically saved in Pictures folder.
  - Templates and Unsent Messages are not transferable.
  - Messages may not be received depending on the size.
  - Handset stores up to 500 messages between Drafts, Templates, Unsent Messages and Sent Messages. If the limit is reached during a transfer, the remaining messages will not be received.
  - Sky Mail may be received as MMS on 905SH depending on the sender Vodafone handset.

## One File Transfer

### ■ Sending

Send one file from Phone Book, Calendar, Tasks or Data Folder (see **P.12-10** "Transferable Files").

- 1 Select a file and press**  **Options**
- 2 Select *Send*, *Send Entry* or *Send My Card* and press** 
- 3 Select *Via Infrared* and press** 
- 4 Prepare recipient device**
- 5 Press**  **Yes**

Offline Mode is set and transfer starts. When finished, file list returns.

## Receiving

Main Menu ► Settings ► **Connectivity** (↔) ► Infrared ► Switch On/Off

- Select On (5 min.) and press** 

Infrared is activated and handset returns to Standby.

  - Acquire infrared transmission within five minutes.
- When connection is requested, *Calling not available during operation, OK?* appears**
- Press**  **Yes**

Offline Mode is set.
- Transfer starts and confirmation appears**
  - Press  **Cancel** to cancel.
  - Press  to end.
- Press**  **Yes** **to save**
  - To cancel transfer, press  **No** ► Press  **Yes**
  - For Data Folder files, select **Phone** or **Memory Card** ► Press

**Note** ► Handset must be in Standby to receive files; this function is disabled even in Standby if Function Lock/Keypad Lock is active or firmware update is in progress.

## All File Transfer

### Sending

Main Menu ► Settings ► **Connectivity** (↔) ► Infrared

- Select *Send All* and press**
- Press**  **Yes**

Offline Mode is set.
- Enter Handset Code and press**
- Select an item and press**
- Prepare recipient device**
- Enter Authorisation Code and press** 

Transfer starts. When finished, Send All menu returns.

  - For Phone Book, **Picture data in Phone Book transfer?** appears. Press  **Yes** or  **No**.

### Receiving

Main Menu ► Settings ► **Connectivity** (↔) ► Infrared ► Switch On/Off

- Select On (5 min.) and press** 

Infrared is activated and handset returns to Standby.

  - Acquire infrared transmission within five minutes.
- When connection is requested, *Calling not available during operation, OK?* appears**
- Press**  **Yes**

Offline Mode is set.

## 4 Enter Authorisation Code and press

- Enter the same Authorisation Code as sender's.

## 5 Transfer starts and confirmation appears

- Press **Cancel** to cancel.
- Press to end.

## 6 Adding Files

### 1 Select *As New Items* and press

When transfer completes, handset returns to Standby.

- Press **Cancel** to cancel.
- Press to end.

### Overwriting Existing Files

#### 1 Select *Delete All & Save* and press

#### 2 Press **Yes**

#### 3 Enter Handset Code and press

When transfer completes, handset returns to Standby.

- When Phone Book is overwritten, My Details except handset phone number is overwritten as well.
- Press **Cancel** to cancel.
  - Press to end.

## Receiving Folders

Receive folders from compatible devices and save to handset Data Folder.

- 905SH does not support sending folders.
- 905SH receives folders when it can newly create a folder, or a folder with the same name already exists in the same layer as that of sender's.
- For sender's procedures, see the device manual.

Main Menu ► Settings ► **Connectivity** (⌘) ► Infrared ► Switch On/Off

### 1 Select *On (5 min.)* and press

Infrared is activated and handset returns to Standby.

- Acquire infrared transmission within five minutes.

### 2 When connection is requested, *Calling not available during operation, OK?* appears

#### 3 Press **Yes**

Offline Mode is set and transfer starts. When finished, handset returns to Standby.

- Press **Cancel** to cancel.
  - Press to end.
- Press **Yes**
  - If a folder with the same name already exists, press **Yes** or **No**.

## Mass Storage

Activate Mass Storage and connect 905SH to a PC via USB Cable to access Memory Card from the PC without removing the card from 905SH.

- Activating Mass Storage activates Offline Mode.
- Mass Storage is not available when battery is low, when a V-application is paused or while Music Player is active.

Main Menu ► Settings ► Connectivity (F4)

- 1 Select Mass Storage and press**  **OK**  
*Calling not available during operation, OK?* appears.
- 2 Press**  **Yes**
- 3 Connect 905SH to a PC via USB Cable**
  - If it is already connected, remove it then reconnect it.
- 4 Press**  **Cancel** to exit
- 5 Press**  **Yes**
  - Safely remove handset (recognised as removable hardware device) on the PC, then disconnect USB Cable.

## Network Information

Network Info Check Network information

Main Menu ► Settings ► Network Settings (F4)

Select **Network Info** ► Press  **OK**

## Internet Settings

Retrieve NW Info Retrieve Network information manually

Main Menu ► Settings ► Network Settings (F4) ► Internet Setting

Select **Retrieve NW Info** ► Press  **OK** ►

Press  **Yes**

Clear DNS Cache Clear Vodafone live! Server addresses stored on handset

Main Menu ► Settings ► Network Settings (F4) ► Internet Setting

Select **Clear DNS Cache** ► Press  **OK**

## White List

Create/delete White List  
Push data (e.g. MMS) from listed addresses is always accepted

### Main Menu

▶ Settings ▶ Network Settings (☰) ▶ Internet Setting ▶ White List

## Creating Entries

Press [☰] **Yes** ▶ Enter Handset Code ▶ Press [■]  
▶ Select **Create New** ▶ Press [■] ▶ Select **SMSC Address or SM Orig. Address** ▶ Press [■] ▶ Enter address ▶ Press [■] ▶ Press [○] **Save**

- Enter up to 20 digits for SMSC Address (Centre Number) and SM Orig. Address (sender address).

## Deleting Entries

Press [☰] **Yes** ▶ Enter Handset Code ▶ Press [■]  
▶ Select an entry ▶ Press [☰] **Options** ▶ Select **Delete** ▶ Press [■] ▶ Press [☰] **Yes**

**Note** ▶ Creating White List may affect mail reception.

# Location Info

## URL Setting

Set URL of map information provider

### Main Menu

▶ Settings ▶ Network Settings (☰) ▶ Location Info ▶ URL Setting

## Select URL ▶ Press [■]

- To view complete URLs, select one ▶ Press [☰] **Options** ▶ Select **Display** ▶ Press [■]
- To edit URLs, select one ▶ Press [☰] **Options** ▶ Select **Edit** ▶ Press [■] ▶ Edit URL ▶ Press [■]
  - Default URL cannot be edited.
- To delete URLs, select one ▶ Press [☰] **Options** ▶ Select **Delete** ▶ Press [■] ▶ Press [☰] **Yes**
  - Default URL cannot be deleted.
- To add URLs, select a blank entry ▶ Press [■] ▶ Enter URL ▶ Press [■]

## Datum On/Off

Choose whether or not to send your location information automatically upon request

Default: On

### Main Menu

▶ Settings ▶ Network Settings (☰) ▶ Location Info ▶ Datum On/Off

Choose **On** (send) or **Off** ▶ Enter Handset Code ▶ Press [■]

## *Tools*

# Calendar

## Opening Calendar

- Open Calendar in Month View (one or two-month view) or Week View.
- Calendar appears in one-month view by default.

**Main Menu** ▶ *Tools*

### 1 Select *Calendar* and press

Calendar of the current month opens.

- If Clock is unset, use to select a Time Zone ▶ Press ▶ Enter date/time ▶ Press
- To open Help (Key Assignments), press **Options** ▶ Select **Help** ▶ Press
- Press to return.



Calendar Window  
(One-Month View)

## Key Assignments

Key	Month View	Week View
	Open the previous month <sup>1</sup>	Open the previous week
	Open the next month <sup>1</sup>	Open the next week
	Toggle between Month View (one-month → two-month) and Week View	
	Select the current date	
	Quick Entry (Icons) <sup>2</sup>	—
	Select the previous/next week <sup>1</sup>	Select the previous/next time block
	Select date <sup>1</sup>	

<sup>1</sup>In two-month view, display changes by two months.

<sup>2</sup>Available in one-month view.

**Default View** Set to open Calendar in Month View or Week View

Default Month View (one-month)

**Main Menu** ▶ *Tools* ▶ *Calendar*

Press **Options** ▶ Select **Default View** ▶ Press ▶ Select a type ▶ Press



## Set Holiday

Set Calendar date colour

Default Sunday: Red, Saturday: Blue, Others: Black



Main Menu ▶ Tools ▶ Calendar

### By Days of the Week

Press  **Options** ▶ Select **Set Holiday** ▶ Press  ▶  
Select **By Week** ▶ Press  ▶ Select a day ▶  
Press  ▶ Select a colour ▶ Press 


### By Date

Select a date ▶ Press  **Options** ▶ Select **Set Holiday** ▶ Press  ▶ Select **By Date** ▶ Press  ▶  
Select a colour ▶ Press 

 To use the colour set for the day of the week, select **Same as Week** ▶ Press 

## Quick Entry

Create new entry quickly by entering an icon

 Available in one-month view.

Main Menu ▶ Tools ▶ Calendar

Select a date ▶ Press  ▶ Select a category ▶ Press 
















Tip ▶ To edit the entry, see P.13-6.

## Saving Entries


Organise daily, weekly, monthly and yearly schedule.

Save up to 300 entries between Calendar and Tasks (see P.13-8).

Main Menu ▶ Tools ▶ Calendar

- 1 Select a day and press 
- 2 Select **<Add New Entry>** and press 
- 3 Enter subject and press 
  - Enter up to 32 characters. Subject is mandatory.
- 4 Enter start date/time and press 
- 5 Select **End:** and press 
- 6 Enter end date/time and press 
- 7 Select **Category:** and press 
- 8 Select a category and press 
  - To proceed without setting Reminder, skip ahead to Step 13.
- 9 Select **Reminder:** and press 
- 10 Select **Reminder Time:** and press 
- 11 Select from **At Start Time to 1 hour before** and press 
  -  For custom Reminder Time, select **Other** ▶ Press  ▶ Enter date/time ▶ Press 
  -  To set tone/video and duration, see P.13-5.

**12 Press**  **OK**

- If **OK** does not appear, press .
- Repeat: see P.13-5

**13 Select Location:** and press **14 Enter location and press** 

- Enter up to 16 characters.



**15 Select Description:** and press **16 Enter schedule details and press** 

- Enter up to 128 characters.
- Secret: see P.13-5

**17 Press**  **Save**

The entry is saved.

**Note** ▶ When entries are transferred to other devices, date/time or other information may appear different depending on the recipient device.

**Tip** ▶  (Reminder set) or  (Reminder unset) appears on scheduled day. (Indicator disappears after scheduled time.)




New Entry Window



**At Reminder Time**

Reminder is activated, sounding/vibrating, etc. according to related settings.


- If 905SH is off but Wake-up Alarm (see P.11-15) is **On**, 905SH turns on at Reminder Time; Reminder activates and 905SH sounds/vibrates according to related settings. However, if 905SH is shutting down at Reminder Time, 905SH restarts and Reminder activates within two minutes of shutdown time.
- Image appears if System Graphics is set (see P.11-3). However, video and SMAF file images take priority over System Graphics.

**Stopping Reminder**

Press  **Cancel**,  or .

- When handset was off at Reminder Time, **Switch Phone On?** appears. Press  **Yes** or  **No**.
  - Handset turns off after 20 seconds of inactivity.

**Opening Entries**

While Reminder is activated, press . (Entries cannot be opened when handset was off at Reminder Time.)

- Tip** ▶
- If Reminder Time arrives during a call or while recording video, Reminder will not be announced. End the call or exit mobile camera to reactivate Reminder.
  - Active Reminder stops for incoming calls. Information window opens after the call ends.

## Calendar Options

Follow these steps after Step 12 on P.13-4. After each setting, New Entry window returns. Complete other settings.

### Assign Tone

Set a tone to sound at Reminder Time

Default: Alert 1

### Preset Sounds

Select **Reminder**: → Press  → Select **Assign Tone/Video**: → Press  → Select **Assign Tone** → Press  → Select **Preset Sounds** → Press  → Select a tone → Press  → Press  **OK**

- To play tones, select one and press  **Play**.
- Press  **Stop** to stop.

### Sounds in Data Folder

Select **Reminder**: → Press  → Select **Assign Tone/Video**: → Press  → Select **Assign Tone** → Press  → Select **Ring Songs-Tones or Music** → Press  → Select a file → Press  → Press  **OK**

- To play files, select one and press  **Options** → Select **Play** → Press
- Press  **Stop** to stop.

### Assign Video

Set a video file to play with Reminder

Select **Reminder**: → Press  → Select **Assign Tone/Video**: → Press  → Select **Assign Video** → Press  → Select a video file → Press  → Press  **OK**

- To play video files, select one and press  **Options** → Select **Play** → Press
- Press  **Stop** to stop.

### Duration

Set how long Reminder operates

Default: 15 seconds

Select **Reminder**: → Press  → Select **Duration**: → Press  → Select time → Press  → Press  **OK**

- For custom Duration, select **Other** → Press  → Enter time → Press  → Press  **OK**

### Repeat

Assign schedule type (once only, daily, weekly, monthly or yearly) for each event

Default: Once Only

### Once Only Schedule

Select **Repeat**: → Press  → Select **Once Only** → Press

### Repetitive Schedule

Select **Repeat**: → Press  → Select from **Day to Every Year** → Press  → Enter repeat time (00 - 99 times) → Press

- Start date and time are reflected in the items. For **Month**, if the day is 29, 30 or 31, entries are saved for the valid months only.
- Repeat time is not available for **Every Year**; the schedule is repeated until deleted.
- Set Repeat time to **00** to repeat until deleted.

### Secret

Restrict access to entries

Default: Off

Select **Secret**: → Press  → Choose **On or Off** → Press





- Activate Secret Mode (see P.11-21) to open/edit Secret Mode entries.




## Opening Entries

Main Menu ▶ Tools ▶ Calendar




### 1 Select a date and press

- In one-month view or Week View, category, start time and subject of up to three entries of the selected day appear at the bottom of Calendar.

Alternatively, to specify date, press  **Options** ▶ Select **Go to** ▶ Press  ▶ Select **Enter Date** ▶ Press  ▶ Enter date ▶ Press 

Alternatively, to open current date, press  **Options** ▶ Select **Go to** ▶ Press  ▶ Select **Today** ▶ Press 

### 2 Select an entry and press

To send the entry via MMS, press  **Options** ▶ Select **Send** ▶ Press  ▶ Select **As Message** ▶ Press  ▶ Complete and send message (Perform from Step 3 on P.15-7.)

### 3 Press to exit

#### Memory Status

After Step 1, press  **Options** ▶ Select **Memory Status** ▶ Press 

## Searching Entries by Subject

Main Menu ▶ Tools ▶ Calendar

### 1 Press **Options**

### 2 Select **Find** and press

### 3 Enter search text and press

- Enter up to 32 characters.

### 4 Select an entry and press

## Editing Entries

Main Menu ▶ Tools ▶ Calendar

### 1 Select a date and press

### 2 Select an entry and press **Options**

### 3 Select **Edit** and press

### 4 Select an item and press

- For details, see procedure for saving entries.

### 5 When finished editing, press **Save**

## Deleting Entries

This Appointment/  
All This Day

Delete one entry or all entries of the day

Main Menu ▶ Tools ▶ Calendar

### One Entry

Select a date ▶ Press  ▶ Select an entry ▶  
Press  Options ▶ Select *Delete* ▶ Press  ▶ Select  
*This Appointment* ▶ Press  ▶ Press  Yes

### All Entries of the Day

Select a date ▶ Press  Options ▶ Select *Delete* ▶  
Press  ▶ Select *All This Day* ▶ Press  ▶  
Press  Yes

All This Month/  
All This Week

Delete all entries of the month or week

■ Open Calendar in Month View for *All This Month* and Week View for *All This Week*.

Main Menu ▶ Tools ▶ Calendar

### Month

Select a month ▶ Press  Options ▶ Select *Delete*  
▶ Press  ▶ Select *All This Month* ▶ Press  ▶  
Press  Yes

• *All This Month* appears only when there is an entry in the month.

### Week

Select a week ▶ Press  Options ▶ Select *Delete* ▶  
Press  ▶ Select *All This Week* ▶ Press  ▶  
Press  Yes

• *All This Week* appears only when there is an entry in the week.

Up to Last Month/  
Up to Last Week

Delete entries up to the end of the previous  
month or week

■ Open Calendar in Month View for *Up to Last Month* and Week View for *Up to Last Week*.

Main Menu ▶ Tools ▶ Calendar

### Up to the End of Previous Month

Select a month ▶ Press  Options ▶ Select *Delete*  
▶ Press  ▶ Select *Up to Last Month* ▶ Press   
▶ Press  Yes

• *Up to Last Month* appears only when there is an entry up to the end of the previous month.

### Up to the End of Previous Week

Select a week ▶ Press  Options ▶ Select *Delete* ▶  
Press  ▶ Select *Up to Last Week* ▶ Press  ▶  
Press  Yes

• *Up to Last Week* appears only when there is an entry up to the end of the previous week.

All Appointments

Delete all entries

Main Menu ▶ Tools ▶ Calendar

Press  Options ▶ Select *Delete* ▶ Press  ▶ Select  
*All Appointments* ▶ Press  ▶ Enter Handset Code  
▶ Press  ▶ Press  Yes

### Deleting Repetitive Entries

■ A confirmation appears except for *All Appointments*.

To delete, press  Yes.

■ To retain repetitive entries, press  No.

# Tasks

Save event with deadlines.

- Check completed tasks (see **P.13-10**).
- Save up to 300 entries between Tasks and Calendar (see **P.13-3**).

## Saving Entries

Main Menu ▶ Tools ▶ Tasks

- 1 Select <Add New Entry> and press**
- 2 Enter subject and press**
  - Enter up to 32 characters. Subject is mandatory.
- 3 Enter due date/time and press**
  - To proceed without setting Reminder, skip ahead to Step 8.
- 4 Select *Reminder:* and press**
- 5 Select *Reminder Time:* and press**
- 6 Select from *At Due Time to 1 hour before* and press**
  - For custom Reminder Time, select ***Other*** ▶ Press ▶ Enter date/time ▶ Press
  - To set tone/video and duration, see **P.13-9 - 13-10**.

**7** Press **OK**


**8** Select ***Description:*** and press

**9** Enter task details and press

- Enter up to 128 characters.
- Secret: see **P.13-10**

**10** Press **Save**

The entry is saved.

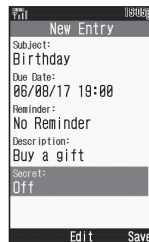

New Entry Window

## At Reminder Time

Reminder is activated, sounding/vibrating, etc. according to related settings.

- If 905SH is off but Wake-up Alarm (see **P.11-15**) is **On**, 905SH turns on at Reminder Time; Reminder activates and 905SH sounds/vibrates according to related settings. However, if 905SH is shutting down at Reminder Time, 905SH restarts and Reminder activates within two minutes of shutdown time.
- Image appears if System Graphics is set (see **P.11-3**). However, video and SMAF file images take priority over System Graphics.

### Stopping Reminder

- Press ,  or .
- When handset was off at Reminder Time, **Switch Phone On?** appears. Press  or .
- Handset turns off after 20 seconds of inactivity.

### Opening Entries

- While Reminder is activated, press . (Entries cannot be opened when handset was off at Reminder Time.)

- Tip** ▶
- If Reminder Time arrives during a call or while recording video, Reminder will not be announced. End the call or exit mobile camera to reactivate Reminder.
  - Active Reminder stops for incoming calls. Information window opens after the call ends.

## Task Options

Follow these steps after Step 7 on P.13-8. After each setting, New Entry window returns. Complete other settings.

**Assign Tone** Set a tone to sound at Reminder Time

Default Alert 1

### Preset Sounds

**Select Reminder:** → Press  → **Select Assign Tone/Video:** → Press  → **Select Assign Tone** → Press  → **Select Preset Sounds** → Press  → **Select a tone** → Press  → Press  **OK**

- To play tones, select one and press .
- Press  to stop.

### Sounds in Data Folder

**Select Reminder:** → Press  → **Select Assign Tone/Video:** → Press  → **Select Assign Tone** → Press  → **Select Ring Songs-Tones or Music** → Press  → **Select a file** → Press  → Press  **OK**

- To play files, select one and press  → **Select Play** → Press
- Press  to stop.

**Assign Video** Set a video file to play with Reminder

**Select Reminder:** → Press  → **Select Assign Tone/Video:** → Press  → **Select Assign Video** → Press  → **Select a video file** → Press  → Press  **OK**

- To play video files, select one and press  → **Select Play** → Press
- Press  to stop.

**Duration**

Set how long Reminder operates

Default: 15 seconds

Select **Reminder**: → Press  → Select **Duration**: → Press  → Select time → Press  → Press  **OK**

For custom Duration, select **Other** → Press  → Enter time → Press  → Press  **OK**

**Secret**

Restrict access to entries

Default: Off

Select **Secret**: → Press  → Choose **On or Off** → Press

- Activate Secret Mode (see P.11-21) to open/edit Secret Mode entries.

**Opening Entries****Main Menu** ▶ Tools**1 Select Tasks and press** 

- For open completed (checked) entries, use  to select  (Completed Tasks).
- For open uncompleted (unchecked) entries, use  to select  (Incomplete Tasks).

**2 Select an entry and press** 

- To send the entry via MMS, press  **Options** → Select **Send** → Press  → Select **As Message** → Press  → Complete and send message (Perform from Step 3 on P.15-7.)

**3 Press**  **to end****Completed Tasks**

- To mark Tasks as completed, follow these steps after Step 1.
  - Select an unchecked entry () → Press  → Press 
    - To cancel checks, select a checked entry () → Press  → Press

**Memory Status**

- After Step 1, press  **Options** → Select **Memory Status** → Press

**Searching Entries by Subject****Main Menu** ▶ Tools ▶ Tasks

- Select an entry and press  **Options**
- Select **Find** and press
- Enter search text and press 
  - Enter up to 32 characters.
- Select an entry and press



## Editing Entries

Main Menu ► Tools ► Tasks

- 1 Select an entry and press Options
- 2 Select *Edit* and press
- 3 Select an item and press
  - For details, see procedure for saving entries.
- 4 When finished editing, press Save

## Deleting Entries

This Task Delete one entry

Main Menu ► Tools ► Tasks

Select an entry ► Press Options ► Select *Delete*  
► Press ► Select *This Task* ► Press ►  
Press Yes

All Tasks/  
All Comp. Tasks Delete all tasks or all completed tasks

Main Menu ► Tools ► Tasks

### All Tasks

Press Options ► Select *Delete* ► Press ►  
Select *All Tasks* ► Press ► Enter Handset Code  
► Press ► Press Yes

### All Completed Tasks

Press Options ► Select *Delete* ► Press ► Select  
*All Comp. Tasks* ► Press ► Press Yes

- *All Comp. Tasks* appears only when there is a completed entry.

# Alarm

## Setting Alarm

Set Alarm to sound at a specific time each day or on specific days of the week. Save up to 5 Alarm settings.

Main Menu ► Tools ► Alarms

- 1 Select -- : -- and press
- 2 Enter time and press
- 3 Select *Repeat:* and press
- 4 *Daily*

1 Select *Every Day* and  
press

### Specified Day of the Week

1 Select *Selected Days* and  
press

To select all, press Options ► Select *Select All* ►  
Press ► Skip ahead to Step 4

2 Select a day of the week and press

The day is set and  appears.


- To cancel, highlight the selected day and press .

3 Repeat Step 2 to select more

4 Press OK when finished

### One Time Alarm

1 Select *Once Only* and press

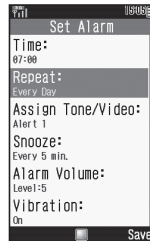

Alarm Settings

**5** Press  **Save**

Alarm is set.

- For more settings, start over from Step 1 on **P.13-11**.

**6** Press  to exit

Handset returns to Standby and  appears.



**At Alarm Time**

Alarm is activated, sounding/vibrating, etc. according to related settings.

- If 905SH is off but Wake-up Alarm (see **P.11-15**) is **On**, 905SH turns on at Alarm Time; Alarm activates and 905SH sounds/vibrates according to related settings. However, if 905SH is shutting down at Alarm Time, 905SH restarts and Alarm activates within two minutes of shutdown time.
- Image appears if System Graphics is set (see **P.11-3**). However, video and SMAF file images take priority over System Graphics.





**Stopping Alarm**

■ Press ,  or .

- When handset was off at Alarm Time, **Switch Phone On?** appears. Press  **Yes** or  **No**.
  - Handset turns off after 20 seconds of inactivity.

**Snooze**

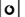- When Snooze (see **P.13-13**) is set, Alarm repeats at the set interval.
  - When other Alarm Time arrives while **Switch Phone On?** appears, the other Alarm is activated.
  - Accept incoming calls (except when handset was off at Alarm Time). End the call to reactivate Snooze.
  - If other Alarm Time arrives while Snoozing, the other Alarm is activated only after Snooze is cancelled.
- To cancel Snooze, follow these steps while Alarm is activated or Snoozing.
 

Press , **Cancel**,  or  → Press  **Yes**

  - Snooze is cancelled automatically 60 minutes after initial Alarm Time.

- Tip** ▶
- If Alarm Time arrives during a call or while recording video, no tone will sound. End the call or exit mobile camera to reactivate Alarm.
  - In Manner mode, volume depends on Manner settings (**Silent** by default).
  - If Auto Power On Time and Alarm Time are the same, Alarm is activated after handset turns on.
  - When handset turns on at Alarm Time with PIN Entry (see **P.11-20**) active, tone is fixed to **Alert 1** except when a tone in Preset Sounds is assigned.
  - When battery is removed and reinstalled after Alarm is set, handset may not turn on at Alarm Time. To prevent this, turn handset on and then off.

## Alarm Options

Follow these steps after Step 2 on P.13-11. After each setting, Alarm settings window returns. Complete other settings.

### Assign Tone

Set a tone to sound at Alarm Time

Default Alert 1

### Preset Sounds

Select **Assign Tone/Video**: ➔ Press ➔ Select **Assign Tone** ➔ Press ➔ Select **Preset Sounds** ➔ Press ➔ Select a tone ➔ Press

- To play tones, select one and press **Play**.
- Press **Stop** to stop.

### Sounds in Data Folder

Select **Assign Tone/Video**: ➔ Press ➔ Select **Assign Tone** ➔ Press ➔ Select **Ring Songs-Tones or Music** ➔ Press ➔ Select a file ➔ Press

- To play files, select one and press **Options** ➔ Select **Play** ➔ Press
- Press **Clear** to stop.

### Assign Video

Set a video file to play with Alarm

Select **Assign Tone/Video**: ➔ Press ➔ Select **Assign Video** ➔ Press ➔ Select a video file ➔ Press

- To play video files, select one and press **Options** ➔ Select **Play** ➔ Press
- Press **Clear** to stop.

### Snooze

Set Alarm to activate at set intervals after initial Alarm Time

Default Every 5 minutes

Select **Snooze**: ➔ Press ➔ Select an interval ➔ Press

- For custom intervals, select **Other** ➔ Press ➔ Enter interval ➔ Press

### Alarm Volume

Set volume from seven levels

Default Level 5

Select **Alarm Volume**: ➔ Press ➔ Use to adjust level ➔ Press

### Vibration

Set handset to vibrate at Alarm Time

Default On

Select **Vibration**: ➔ Press ➔ Select **On, Link to Sound or Off** ➔ Press

- For details on **Link to Sound**, see P.11-12 "Vibration".

### Duration

Set how long Alarm operates

Default 10 seconds

Select **Duration**: ➔ Press ➔ Select duration ➔ Press


- For custom Duration, select **Other** ➔ Press ➔ Enter time ➔ Press

## Cancelling & Reactivating Alarm

**Switch Off** Cancel Alarm and retain the settings

**Main Menu** ▶ *Tools* ▶ *Alarms*


Select an entry ▶ Press  **Options** ▶ Select **Switch Off** ▶ Press 

-  disappears.
- Reactivate Alarm to use the same settings.

**Switch On** Reactivate Alarm with the same settings, or change current settings

**Main Menu** ▶ *Tools* ▶ *Alarms*

Select an entry ▶ Press  **Options** ▶ Select **Switch On** ▶ Press 

- ▶ To change settings, select an entry ▶ Press  ▶ Edit settings
  - For details, see procedure for saving entries.

## Deleting Alarm

**Reset Alarm** Delete Alarm settings one by one

**Main Menu** ▶ *Tools* ▶ *Alarms*

Select an entry ▶ Press  **Options** ▶ Select **Reset Alarm** ▶ Press  ▶ Press  **Yes**

**Clear All** Delete all Alarm settings

**Main Menu** ▶ *Tools* ▶ *Alarms*


Select **Clear All** ▶ Press  ▶ Press  **Yes**

## Auto Power On

Use Auto Power On to activate handset power automatically at a specific time each day. Auto Power On is **Off** by default.

**Main Menu** ▶ *Tools* ▶ *Auto Power On* ▶ *Switch On/Off*

### 1 Choose **On** and press

- ▶ To cancel Auto Power On, choose **Off** ▶ Press  (Omit the next steps.)

### 2 Select **Set Time** and press

### 3 Enter time and press

**Note** ▶ When Auto Power On time arrives while handset is turned on for Alarm, handset does not turn on completely until Alarm stops or Snooze is cancelled.

**Tip** ▶ When battery is removed and reinstalled after Auto Power On is set, handset may not turn on at Auto Power On Time. To prevent this, turn handset on and then off.

# World Clock

Display local date/time (see P.11-14) and the date/time of another area in the world.

- Select from preset Time Zones or specify a new one; enter area name and time difference between new and local areas.
- To set World Clock to appear in Standby, see P.11-4 "Clock/Calendar".
- Time Zone is set to **Tokyo** by default.

## Setting Time Zone & Daylight Saving

Activate Daylight Saving to advance the selected area's time by one hour.

Main Menu ▶ Tools ▶ World Clock

1 Press

2 **Time Zone**

1 Select **Set Time Zone** and press

2 Use to specify an area and press

- To add Time Zone, press **Custom** ▶ Enter city name (up to 16 characters) ▶ Press ▶ Use to select + or - ▶ Press ▶ Enter time difference ▶ Press

### Daylight Saving

1 Select **Daylight Saving** and press

2 Choose **On** and press

- To cancel, choose **Off** ▶ Press

## Opening World Clock

Main Menu ▶ Tools

1 Select **World Clock** and press



- Tip ▶
- To change local Time Zone, see P.11-15.
  - To set World Clock to appear in Standby, select **World Clock (L)**, **World Clock (S)**, **World Clock+1mo.** or **World Clock+2mos.** for Clock/Calendar (see P.11-4).


# Calculator



Use Calculator for basic arithmetic (up to 12 digits) and percentage calculation, or currency conversion (Money Converter).


Main Menu ▶ Tools










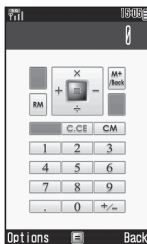


## 1 Select *Calculator* and press

Calculator opens.


- Alternatively, enter digits in Standby and press  to open Calculator.
- Use Keypad to enter digits, and the keys in the table below for calculation.

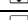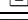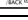- ▶ To copy the result, press  **Options** ▶ Select **Copy** ▶ Press 

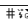

<b>+</b> (Add)	
<b>-</b> (Subtract)	
<b>x</b> (Multiply)	
<b>÷</b> (Divide)	
<b>=</b> (Equal)	
<b>C.CE</b> (Clear)	
<b>CM</b> (Clear Memory)	
<b>RM</b> (Recall Memory)	
<b>M+</b> (Add Memory)	 <sup>1</sup>
<b>.</b> (Decimal)	
<b>+/-</b> (Switch)	
<b>%</b> (Percent)	 <sup>2</sup>

<sup>1</sup>Not available when result is 0.

<sup>2</sup>Press  **Options** and select %.

## 2 Press to exit

### Money Converter

- To change exchange rate, open Calculator and follow these steps.

Press  **Options** ▶ Select **Money Converter** ▶


Press  ▶ Select **Exchange Rate** ▶ Press  ▶


Select **Domestic or Foreign** ▶ Press  ▶ Enter

rate ▶ Press 

- Exchange rate is 1 for both conversions by default.

- To convert foreign currencies, follow these steps.

Enter amount of money and press  **Options** ▶

Select **Money Converter** ▶ Press  ▶ Select to

**Domestic or to Foreign** ▶ Press 

- Conversion is based on the preset exchange rate.

- Tip** ▶
- Entered numbers, results and numbers saved in Memory are not affected by incoming calls. End the call to return.
  - Clear Memory before starting Memory calculations.
  - Numbers saved in Memory remain even if Calculator is closed, but are cleared when handset power is turned off.

# Voice Recorder

Use handset microphone to record short voice memos and save files on handset or Memory card; record and save longer recordings on Memory Card.

- Modes:

	Recording Time	Storage Media
<b>For Message</b>	Up to three minutes (attachable to MMS)	Handset or Memory Card <sup>1</sup>
<b>Extended Voice</b>	Up to approximately 10 hours	Memory Card <sup>2</sup>

<sup>1</sup>Specify storage media before recording, or set 905SH to ask each time; when set to ask, always record with Memory Card inserted.

<sup>2</sup>Insert Memory Card to record in Extended Voice mode.

- **For Message** is set by Default.

## Preparation

- When battery is low, Voice Recorder does not activate. If battery runs low while recording in Extended Voice mode, **Battery low. Please connect to charger!** appears and Voice Recorder shuts off.
- Conversations during calls cannot be recorded.
- If incompatible microphone is connected, recording may fail.

## Recording

Main Menu ▶ Tools

### 1 Select **Voice Recorder** and press

- To switch mode, press **Options** ▶ Select **Record Time** ▶ Press ▶ Select **For Message** or **Extended Voice** ▶ Press
- To switch storage media, see P.13-18.

### 2 Press

Recording starts.

### 3 **For Message**

#### 1 Press to stop

- Recording stops automatically when maximum recording time is reached.
- To play the recording, select **Playback** ▶ Press
- Press to pause.
- Press to return.
- To start over without saving, press ▶ Repeat from Step 2
- To send via MMS, select **Save and Send** ▶ Press ▶ Complete and send message (Perform from Step 3 on P.15-7.)
  - When **Ask Each Time** is selected in **Save Recording To** setting, select **To Phone Memory** or **To Memory Card** ▶ Press

#### 2 Select **Save** and press


Recording is saved to handset or Memory Card.

- When **Ask Each Time** is selected in **Save Recording To** setting, select **To Phone Memory** or **To Memory Card** ▶ Press

### Extended Voice

#### 1 Press to stop

Recording is saved to Memory Card.

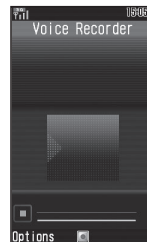

- Note** ▶
- Avoid shocks to 905SH; may cause noise or skipping.
  - Recording window may take longer to open as more Voice files are saved on Memory Card.

- Tip** ▶
- Alarm is disabled while recording, and starts after Voice Recorder stops/closes.
  - Attach saved Voice file or record voice directly from Mail Composition windows (see P.15-10).

## Playback

Play sounds from handset speaker, or use Headphones.

**Main Menu** ▶ *Tools* ▶ *Voice Recorder*

**1** Press **Options**

**2** Select **Ring Songs/Tones** and press

- ▶ To switch between 905SH and Memory Card, press **Options** ▶ Select **Change to Phone** or **Change to Memory Card** ▶ Press

**3** Select a file and press

Playback starts.

- ▶ Press (up) or (down) to adjust volume.



## Deleting Files

- ▶ Follow these steps after Step 2 on the left.  
**Select a file** ▶ Press **Options** ▶ **Select Delete** ▶ Press ▶ Press **Yes**

## Incoming Calls/Mail during Playback

- ▶ Playback stops for incoming calls or Alarm.
- ▶ A notification appears for incoming mail without interrupting playback.

## Recording Setting

**Save Recording To**

Select storage media for **For Message**

Default Phone Memory

**Main Menu** ▶ *Tools* ▶ *Voice Recorder*

Press **Options** ▶ **Select Save Recording To** ▶ Press ▶ **Select Phone Memory, Memory Card or Ask Each Time** ▶ Press

- Set to **Ask Each Time** to select media after every recording.



# Barcode

Scan printed barcodes with mobile camera or download/exchange QR Codes via Web, MMS, etc.


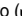





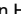

- Scan UPC (JAN) or QR Codes. Handset automatically detects code type and reads data.
- In Continuous mode, scan up to 50 UPC (JAN) or 16 QR Codes at one time. In some cases, continuous scans may be disrupted depending on barcode data or data size.
- Zoom is not available.

- Note** ▶
- Scan may fail if the barcode is dirty or unclear.
  - Use Mobile Light when scanning barcodes indoors.
  - Capture one barcode at a time; otherwise scan may fail.

- Tip** ▶
- A UPC (Universal Product Code) or JAN (Japanese Article Number) is a series of varying width vertical lines (bars) and spaces. Bars and spaces together are elements, combinations of which represent different numbers. 905SH cannot read other one-dimensional barcodes (ITF Code, Code39, Codabar/NW-7, etc.).
  - A QR (Quick Response) Code is a matrix symbology consisting of an array of nominally square cells, which allows omni-directional reading of up to 4,296 alphanumeric and byte data, as well as kanji and kana.

Main Menu ▶ Tools ▶ Barcode ▶ Scan Barcode


## 1 Frame barcode in the centre of Display

- Slide Portrait/Macro Selector (see P.1-7 ) to Macro ().
- Hold handset approximately 10 cm away from barcode.
- ▶ Use  to adjust brightness.
- ▶ To activate or cancel Continuous mode, press  **Options** ▶ Select **Continuous Scan** ▶ Press  ▶ Choose **On** or **Off** ▶ Press .
- ▶ Press  to toggle Mobile Light on/off.
- ▶ To open Help (Key Assignments), press  .
  - Press  to return.





## 2 Press

Mobile camera scans the barcode.

- If recognition takes time, move handset slowly and adjust the distance from barcode.
- ▶ Press  **Cancel** to stop scan ▶ Start over from Step 1

## 3 Barcode recognition tone sounds and scan results appear


- ▶ Using Scan Results: see P.13-20
- ▶ To start over, press  **Cancel** ▶ Press  **Yes** ▶ Repeat from Step 1



### Continuous Mode

- After scanning, **Scan completed. Scan new?** appears.  
To scan next code, press  Yes → Frame the code on Display → Press   
To exit, press  No → Scan results appear

### Split Data

- After scanning, **Split data. Scan next symbol?** appears.  
To scan next code, press  Yes → Frame the code on Display → Press   
To cancel, press  No → Press  Yes
- Scan results do not appear until all split data is scanned.
- The scanning status appears on the first line of Display. For example,  indicates that 1 of 4 codes has been scanned.

## Using Scan Results

<b>Place Calls<sup>1</sup></b>	Select a number starting with <b>TEL:</b> <sup>2</sup> → Press <input type="checkbox"/> → The number appears → Press <input type="checkbox"/>
<b>Send Mail<sup>3</sup></b>	Select a mail address including @ → Press <input type="checkbox"/> → Complete and send message (Perform from Step 5 on P.15-8.)
<b>Quote &amp; Send Mail</b>	Press <input type="checkbox"/> Options → Select <b>Send Message</b> → Press <input type="checkbox"/> → Press <input type="checkbox"/> → Complete and send message (Perform from Step 3 on P.15-7.) ■ To use a part of text, press <input type="checkbox"/> Cut in Send Message window → Select the first character of text → Press <input type="checkbox"/> → Select the end point → Press <input type="checkbox"/>
<b>Save to Phone Book<sup>1,3</sup></b>	Select a number starting with <b>TEL:</b> <sup>2</sup> or mail address including @ → Press <input type="checkbox"/> Options → Select <b>Save to Ph.Book</b> → Press <input type="checkbox"/> → Select <b>As New Entry</b> → Press <input type="checkbox"/> → Perform from Step 2 on P.4-4
<b>Access Mobile Internet Sites<sup>4</sup></b>	Select a URL starting with <b>http://</b> or <b>rtsp://</b> → Press <input type="checkbox"/> → 905SH connects to the Network
<b>Save to Data Folder (Images &amp; Melodies)</b>	Select an image or melody file → Press <input type="checkbox"/> Options → Select <b>To Data Folder</b> → Press <input type="checkbox"/>

<sup>1</sup> Available when text is in **TEL:\*** format.

<sup>2</sup> Text strings of 10 to 32 digits starting with 0 are recognised as phone numbers.

<sup>3</sup> Available when text is in **\*@\*** format.

<sup>4</sup> Available when text is in **http://\*** or **rtsp://\*** format.

- \* represents one or more alphanumeric.

<b>Saving</b>	Press <b>[Options]</b> ➔ Select <b>Save</b> ➔ Press <b>[Enter]</b> <ul style="list-style-type: none"> <li>• Save up to 10 items.</li> <li>• To open saved items, see <b>P.13-22</b> "Scanned Results".</li> </ul>
<b>Use for System Graphics</b>	Select an image ➔ Press <b>[Options]</b> ➔ Select <b>As System</b> ➔ Press <b>[Enter]</b> ➔ Select an item ➔ Press <b>[Enter]</b> ➔ Press <b>[Enter]</b>
<b>Copy Text</b>	<b>Text</b> Press <b>[Options]</b> ➔ Select <b>Copy</b> ➔ Press <b>[Enter]</b> ➔ Select the first character of text ➔ Press <b>[Enter]</b> ➔ Select the end point ➔ Press <b>[Enter]</b>
	<b>URL<sup>4</sup></b> Select a URL starting with <b>http://</b> or <b>rtsp://</b> ➔ Press <b>[Options]</b> ➔ Select <b>Copy URL</b> ➔ Press <b>[Enter]</b>
	<b>Mail Address<sup>3</sup></b> Select a mail address including <b>@</b> ➔ Press <b>[Options]</b> ➔ Select <b>Copy Address</b> ➔ Press <b>[Enter]</b>
	<b>Phone Number<sup>1</sup></b> Select a number starting with <b>TEL:</b> <sup>2</sup> ➔ Press <b>[Options]</b> ➔ Select <b>Copy Telephone</b> ➔ Press <b>[Enter]</b>
<b>Wallpaper</b>	Select an image ➔ Press <b>[Options]</b> ➔ Select <b>As Wallpaper</b> ➔ Press <b>[Enter]</b> ➔ Select an item ➔ Press <b>[Enter]</b> ➔ Press <b>[Enter]</b>
<b>Open Images or Play Melodies</b>	Select an image or melody file ➔ Press <b>[Enter]</b>
<b>Open Properties</b>	Select an image or melody file ➔ Press <b>[Options]</b> ➔ Select <b>Property</b> ➔ Press <b>[Enter]</b>

<sup>1</sup> Available when text is in **TEL:\*** format.

<sup>2</sup> Text strings of 10 to 32 digits starting with 0 are recognised as phone numbers.

<sup>3</sup> Available when text is in **\*@\*** format.

<sup>4</sup> Available when text is in **http://\*** or **rtsp://\*** format.

• \* represents one or more alphanumerics.

### **MEMORY:** or **MAILTO:**

- When **MEMORY:** or **MAILTO:** appears in scan results, press **[Enter]** to enter the items underlined with a dotted line automatically in Phone Book Details or SMS/MMS messages. However, text after an invalid character is not underlined and is not copied.

**Scanning during Text Entry** Scan barcodes during text entry and insert scan results into current cursor position

**In a text entry window, press [Options] ➔ Select Scan ➔ Press [Enter] ➔ Select Scan Code ➔ Press [Enter] ➔ Frame barcode in the centre of Display ➔ Press [Enter] ➔ Press [Enter]**

- To use a part of text, press **[Cut]** ➔ Select the first character of text ➔ Press **[Enter]** ➔ Select the end point ➔ Press **[Enter]**

**Note** ▶ Barcodes/text cannot be scanned when:

- Entering text during a call
- Entering text in Reading window (E-Book)
- V-application is active

**Open Barcode**

Read saved barcode images in Data Folder

**Main Menu** ▶ *Tools* ▶ *Barcode* ▶ *Open Barcode***Select a barcode image** ▶ Press 

- For split data, press  **Yes** to scan next code.
  - To cancel, press  **No** ▶ **Delete all information, OK?** appears ▶ Press  **Yes**
- When scanning fails, press  ▶ Select next barcode image manually ▶ Press

- Note** ▶
- Resized QR Codes may be invalid.
  - When invalid, **This data may be incorrect.** appears.

**Scanned Results**

Open files saved in Scanned Results

**Main Menu** ▶ *Tools* ▶ *Barcode* ▶ *Scanned Results***Select a file** ▶ Press 

- To open properties, select a file ▶ Press  **Options** ▶ Select **Information** ▶ Press 
    - Press  to return.
  - To delete files, select one ▶ Press  **Options** ▶ Select **Delete** ▶ Press  ▶ Press  **Yes**
- Opened results cannot be re-saved.
  - Some files such as large images may not open.

# Create QR Codes

Create QR Codes from entered text, Phone Book, Pictures, Ring Songs-Tones, and Text Templates.

- Save up to the equivalent of 513 digits, 311 alphanumerics or 131 kanji per QR Code.
- Large items are divided into maximum of 16 QR Codes.
- Created QR Codes are saved to Data Folder (Pictures). To open them, see **P.10-5**.

**Phone Book**

Encode name, reading, phone numbers, mail addresses and note

**Main Menu** ▶ *Tools* ▶ *Barcode* ▶ *Create QR Code* ▶ *Phone Book***Select an entry** ▶ Press  ▶ **QR Code appears** ▶ Press 

- Only name, reading, phone numbers, mail addresses and note are encoded.

**Text Input**

Enter and encode text

**Main Menu** ▶ *Tools* ▶ *Barcode* ▶ *Create QR Code* ▶ *Text Input***Enter text** ▶ Press  ▶ **QR Code appears** ▶ Press

Select a folder ➤ Press  ➤ Select an item ➤  
Press  ➤ QR Code appears ➤ Press

#### Switching Storage Media

While created QR Code appears, press  **Options** ➤  
Select **Save To** ➤ Press  ➤ Select **Phone or  
Memory Card** ➤ Press

#### Attaching to MMS Mail

While created QR Code appears, press  **Options** ➤  
Select **Send As** ➤ Press  ➤ Perform from Step 3  
on P.15-7

#### Incoming Calls while Creating QR Code

Contents are temporarily saved. End the call to return.

## Text Scanner


Scan text (URLs, mail addresses, phone numbers or roman letters) with mobile camera.

- Scan up to 256 characters continuously.
- Scan up to 60 single-byte characters within 3 lines. Scanning over 35 characters at one time may yield poor results.
- Some symbols may not be read.
- Text mode is set to **Auto** each time Text Scanner is activated. Change the mode if text is distorted in **Auto** (such as white text in black background).
- Zoom is not available.

- Note** ▶
- Text Scanner will not activate if music is playing; when **Stop music?** appears, press  **Yes** to proceed.
  - Text Scanner will not activate if a V-application is active.
  - When handset is too hot, **Heat warning: camera temporarily disabled.** appears and mobile camera remains off. If 905SH becomes too hot while in use, **Temperature is high. Closing camera...** appears and scanning ends.

## 1 Frame text on Display

- Adjust to frame text in [ ]. Letters at the ends may be distorted.
- Slide Portrait/Macro Selector (see P.1-7 83) according to text size.
- Hold handset approximately 10 cm away from barcode.
- Use to adjust brightness.
- To switch text mode, press **Options** ▶ Select **Reversed Text** ▶ Press ▶ Select **Auto, Normal** or **Reversed** ▶ Press
- Press to toggle Mobile Light on/off.
- To open Help (Key Assignments), press **012**.
  - Press to return.

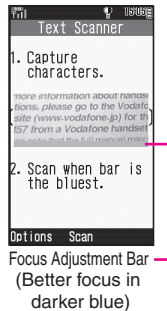


## 2 Press

Text Scanner reads the text.

- Press to stop scan ▶ Start over from Step 1

## 3 Use to select a line and press

- Text Scanner reads one line per scan.

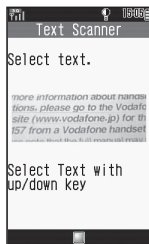

## 4 Scan results appear

905SH automatically registers scan results as a URL, Email Address, Phone Number or Text; if incorrect, change mode.

- If text exceeds limit, results appear with overage truncated.
- To change mode, press **Options** ▶ Select **Change Mode** ▶ Press ▶ Select a type ▶ Press (Scan results and alternatives list change accordingly.)
- To edit, press **Options** ▶ Select **Select/Edit** ▶ Press ▶ Select the character to edit ▶ Select an alternative from the list or enter the correction directly from Keypad
- To start over, press ▶ Press **Yes** ▶ Repeat from Step 1

## 5 Press

- To use scan results, see P.13-20 - 13-21.

### Scanning More Text

- After Step 5, press **Options** ▶ Select **Continue Part** or **Scan More** ▶ Press
- **Continue Part**  
Select **Continue Part** to enter additional text. (Mode remains the same.)
- **Scan More**  
Select **Scan More** to enter text after a line break.
- **Continue Part** and **Scan More** are disabled once 256 characters have been scanned.

**Scanning during Text Entry** Scan text during text entry and insert scan results into current cursor position

In a text entry window, press **Options** → **Select Scan** → Press **■** → **Select Text Scanner** → Press **■** → **Frame text in the centre of Display** → Press **■** → **Select a line** → Press **■** → Press **■**

- To change mode or edit scan results, see Step 4 on P.13-24.

## Stopwatch

Record elapsed time for up to 24 hours (23 hours 59 minutes 59.9 seconds) in 0.1-second increments.

Use lap time feature to segment elapsed time.

- Save times (including the last four lap times) to handset Text Templates.
- Stopwatch is disabled when battery is low. Stopwatch ends when battery runs low.

**Main Menu** ▶ **Tools** ▶ **Stopwatch**

### 1 Press **■**

Stopwatch starts.

- To record Lap times, press **■** **LAP**.
  - The last four Lap times are recorded. The records are deleted when Stopwatch is cancelled.

### 2 Press **■** to stop countdown

- To save the records to Text Template, press **Options** → **Select Save to Templates** → Press **■**
  - To check saved records, open Text Templates (see P.10-17).
- Press **■** to resume.
- To clear the records, press **Options** → **Select Reset** → Press **■**

### 3 Press **CLEAR (BACK)** then **■** **Yes** to exit

- Tip** ▶
- Records are deleted when Stopwatch is cancelled. Save records to Text Templates.
  - Stopwatch setting is not affected by incoming calls. End the call to return.
  - Alarm is disabled while Stopwatch window is open, but is reactivated automatically when handset returns to Standby.

## Countdown Timer

Set Countdown Timer up to 60 minutes in 1-second increments. Alarm Tone sounds and Mobile Light flashes when set time elapses.

**Main Menu** ▶ **Tools** ▶ **Countdown Timer**

### 1 Enter time (00:01 - 60:00) and press **■**

- To edit entered time, use **■** to move cursor and enter correct time. If **■** is already pressed, follow the steps below.
- When times over 60 minutes (60:00) are entered, the last set time returns.
- To change time, press **■** **Edit** → Enter time → Press **■**

### 2 Press **■**

Countdown starts.

### 3 Press **[Mute]** to stop countdown

- Press **[Mute]** to resume.
- To reset, stop countdown and press **[Mute]** **Reset**.

### 4 Press **[CLEAR BACK]** then **[Mute]** **Yes** to exit

#### Countdown Timer End

- Tone sounds according to **General Volume** setting.
  - Alarm stops automatically after 60 seconds. Press **[Mute]** **Cancel** to stop manually.
  - In Manner mode, Manner settings take priority.
  - When the set timer time has elapsed during a call, **Timer Expired** appears after **[Mute]** is pressed to end the call.

- Tip** ▶
- Countdown is not affected by incoming calls. End the call to return.
  - Alarm is disabled while Countdown Timer window is open, but is reactivated automatically when handset returns to Standby.

## Expenses Memo

Use Expenses Memo to add expenses, such as travel expenses. Enter up to 30 entries (up to 29,999,999.70 yen in total, 999,999.99 yen per entry).

#### Add New Expense

Enter monetary figure and categorise it

**Main Menu** ▶ **Tools** ▶ **Expenses Memo** ▶ **Add New Expense**

**Enter amount** ▶ **Press [Mute]** ▶ **Select a category** ▶

**Press [Mute]**

- Shortcut: In Standby, enter amount ▶ Press **[Mute]** ▶ Press **[Mute]** ▶ Select a category ▶ Press **[Mute]**
- The entry date and figure are saved.
- If Clock is unset, entry date and time will be saved as --/-- --:--.

#### Totals

Check entries

**Main Menu** ▶ **Tools** ▶ **Expenses Memo**

**Select Totals** ▶ **Press [Mute]**

- Use **[Up]** to scroll through entries.
- To change category, select an entry ▶ Press **[Mute]** ▶ Select a category ▶ Press **[Mute]**
  - To enter custom category name, select **Other** in category list ▶ Press **[Mute]** ▶ Enter name (up to 14 characters) ▶ Press **[Mute]** (Preset category names are not affected.)
- To change entry amount, select an entry ▶ Press **[Mute]** **Options** ▶ Select **Change Amount** ▶ Press **[Mute]** ▶ **Edit** ▶ Press **[Mute]**
- To delete an entry, select one ▶ Press **[Mute]** **Options** ▶ Select **Delete Item** ▶ Press **[Mute]** ▶ Press **[Mute]** **Yes**
- To delete all entries, select an entry ▶ Press **[Mute]** **Options** ▶ Select **Delete All** ▶ Press **[Mute]** ▶ Press **[Mute]** **Yes**

#### Edit Category

Rename categories

**Main Menu** ▶ **Tools** ▶ **Expenses Memo**

**Select Edit Category** ▶ **Press [Mute]** ▶ **Select a category** ▶ **Press [Mute]** ▶ **Edit** ▶ **Press [Mute]**

- Enter up to 14 characters.



# Electronic Books


Read XPDF or Text format E-Books from Memory Card.




- E-Book dictionaries turn 905SH into an electronic dictionary.
- Download titles via Sharp's Space Town (see **P.16-7**).
- Adjust Text Code (see **P.13-28**) for E-Books in other languages.
- 905SH may not support some embedded sounds/images.
- E-Book folder cannot be accessed during Synchronisation.

## Reading Content

Main Menu ▶ Tools





### 1 Select *E-Book* and press

Book contents list appears. (When you press  to close Reading window, the same page will open next time.)

■ To read E-Books saved in other folders, press  **Options** ▶ Select **Switch Folders** ▶ Press  ▶ Select a folder ▶ Press 

- Selected item appears next time E-Book is selected.
- Access E-Books saved in **Book** and **Book (SD)** from Tools or Data Folder (Book).

### 2 Select an E-Book and press

- ○% indicates location of the current page.
- If the E-Book is password protected, enter password ▶ Press  ▶ Reading window opens
- To see the title, author, etc., press  **Options** ▶ Select **Property** ▶ Press 
  - Press  to exit.





### 3 Press to close

- The last page opened will appear next time.

- Note** ▶
- E-Books automatically close for low battery, five minutes of inactivity, or Memory Card removal.
  - Only **zbf**, **zbf**, **txt** or **text** files appear in contents list.
  - Revised E-Books are not supported.

#### Key Assignments

■ Operations vary by text orientation as follows.

	Horizontal	Vertical
	Scroll up (by line)	Backward (by page)
	Scroll down (by line)	Forward (by page)
	Backward (by page)	Scroll left (by line)
	Forward (by page)	Scroll right (by line)

## Text Operations

- Jump to the first or last page.  
Press **[Options]** ➔ **Select *Jump to Top* or *Jump to Bottom*** ➔ Press **[ ]**
- Move to a specific location.  
Press **[Options]** ➔ **Select *Move to specified %*** ➔  
Press **[ ]** ➔ **Enter location by percentage (00 - 99%)**  
➔ Press **[ ]**
- Select a chapter when a table of contents is contained.  
Press **[Options]** ➔ **Select *Contents*** ➔ Press **[ ]** ➔  
**Select a chapter** ➔ Press **[ ]**
- Move back to link source or open link again.  
Press **[Options]** ➔ **Select *Back* or *Next*** ➔ Press **[ ]**
- Return to E-Book list.  
Press **[Options]** ➔ **Select *Back to List*** ➔ Press **[ ]**
- See P.13-29 to use Bookmarks.

## Using Linked Info/Copying Text

- Use linked numbers, addresses or URLs to place calls, send messages or access Mobile Internet sites.  
**Select an item** ➔ Press **[ ]** ➔ Press **[Options]** ➔ **Yes**
  - Some linked information may not be usable.
- Copy text (up to 20 characters).  
**In Reading window, press [Options] ➔ Select *Copy***  
➔ Press **[ ]** ➔ **Perform from Step 3 in "Copy/Cut & Paste" on P.3-13**
  - Dictionary index text and search results cannot be copied.
  - Images and ruby annotations cannot be copied.

## Reading Window Settings

- Press **[Options]** ➔ **Select *Display Settings*** ➔ Press **[ ]**  
➔ **Select an item** ➔ Press **[ ]** ➔ **Change the setting** ➔  
Press **[ ]**

Item	Description	Default
Font Size	Select <i>Tiny, Small, Standard, Large</i> or <i>Huge</i>	Standard
Text Orientation	Read text vertically or horizontally	Vertical*
Ruby	Show ruby annotations	Off
Text Code	Set encoding to <i>Shift-JIS, Latin-1</i> or <i>Latin-9</i>	Shift-JIS

\*May vary by E-Book.

- Above settings are not available for some content.

## Mask & Jump

- Some E-Books may contain hidden text or images (masked info) or links (jump links).
  - Select masked info and press to see the text or image. Press again to hide.
  - Select a jump link and press to jump to the specified page. Press to return.

## Folders and Files in E-Book Folders

- Open E-Book list first.
  - **Adding Folders**  
Press **Options** → Select *New Folder* → Press → Enter folder name → Press
  - **Editing Folder/File Names**  
Select a folder/file → Press **Options** → Select *Change Name* → Press → Edit → Press
  - **Deleting Folders/Files**  
Select a folder/file → Press **Options** → Select *Delete* → Press → Press **Yes**
  - **Moving Files**  
Select a file → Press **Options** → Select *Move* → Press → Select a location → Press → Press

**Tip** ► The above operations are not available for E-Books in Data Folder (handset/Memory Card). For managing folders/files on handset, see **P.10-9**.

## Bookmark

Add bookmarks to return to the pages easily.  
Use two bookmarks per E-Book (for up to five E-Books).

### 1 Press

■ If **Marker** is not on Display, press **Options** → Select **Bookmark** → Press

### 2 Select **Bookmark1** or **Bookmark2** and press

Bookmark is added.

## Auto Bookmark

- When Reading window is closed, Auto Bookmark 1 is added to the last page opened. When the same E-Book is opened and closed again, Auto Bookmark 1 changes to Auto Bookmark 2.
  - Each E-Book holds up to two Auto Bookmarks, the oldest of which is deleted first when a new one is added.

## Opening Bookmarked Page

- In Reading window, press **Options** → Select **Move to Bookmark** → Press → Select **Bookmark1**, **Bookmark2**, **Auto Bookmark1** or **Auto Bookmark2** → Press

## Using E-Book Images

**Embedded Information** Save images as Wallpaper or use information contained in images

**Main Menu** ▶ Tools ▶ E-Book ▶ Open E-Book

Select an image ▶ Press 




- Soft Key Assignments:

<b>Assign</b>	Save images as Wallpaper
<b>Jump to</b>	Select jump information to move to other pages. Use linked information to send MMS messages or access Mobile Internet sites (E-Book will close). See P.13-28 "Using Linked Info/Copying Text".
<b>Switch</b>	Hidden text or images appear
<b>Play</b>	Animation plays

## Using a Dictionary

**Look Up Word** Use downloaded E-Book dictionaries to look up word definitions, etc.

**Main Menu** ▶ Tools ▶ E-Book

Select a dictionary ▶ Press  ▶ Select an entry field ▶ Press  ▶ Enter a word ▶ Press 

- Select an entry and press  to view its definitions.
- Key Assignments: see P.13-27


## Phone Help

Learn when/how to use Keypad functions/shortcuts. Most Phone Help functions are inaccessible from menu items.

**Main Menu** ▶ Tools

### 1 Select *Phone Help* and press

Phone Help window opens.

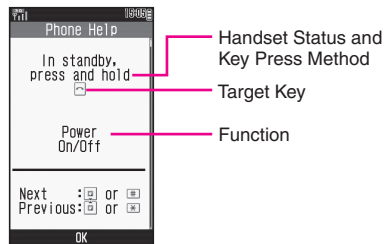

### 2 Use to toggle guides

- Alternatively, press  or .

### 3 Press to exit

## *Optional Services*

## Optional Services Overview

- When **out** appears, access services from a touch-tone landline.
- For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).

<b>Call Forwarding</b>	When you know you won't be able to receive calls made to 905SH, automatically divert incoming calls to another phone number (see right)
<b>Voicemail</b>	Set 905SH to forward all or all unanswered calls to Voicemail Centre. Access caller messages from 905SH in service area or from a touch-tone phone anywhere (see <b>P.14-3</b> ). <b>■ Missed Call Notification</b> Records of calls missed while 905SH is off/out-of-range and Voicemail is active.
<b>Call Waiting*</b>	Call Waiting alerts you to incoming calls when the line is already engaged. After the tone, place the current call on hold and answer the second, or alternate between calls (see <b>P.14-5</b> ).
<b>Conference Call*</b>	Open a second line while the first is engaged. Switch back and forth between two lines or talk on both simultaneously. Add other parties to an existing conversation and talk on up to five lines simultaneously (see <b>P.14-6</b> ).
<b>Call Barring</b>	Restrict incoming/outgoing calls depending on conditions (see <b>P.14-7</b> )
<b>Caller ID</b>	Show or hide your own number when placing calls (see <b>P.14-10</b> )

\*An additional contract is required.

## Call Forwarding

- Voicemail and Call Forwarding can only be set simultaneously when Call Forwarding is set to Video Calls.
- Call Forwarding is not available when **All Outgoing Calls** or **All Incoming Calls** in Call Barring is active.

<b>Call Forwarding</b>	Initiate Call Forwarding
<b>Main Menu</b>	▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Voicemail/Diverts ▶ Diverts

### Direct Entry

- Select a call type ▶ Press  ▶ Select **Always or No Answer** ▶ Press  ▶ Select **Enter Phone Number** ▶ Press  ▶ Enter a phone number ▶ Press
- For **No Answer**, select ring time ▶ Press
  - Include dialling code for landline numbers.

### Phone Book

- Select a call type ▶ Press  ▶ Select **Always or No Answer** ▶ Press  ▶ Select an entry ▶ Press  ▶ Press
- For entries with multiple numbers, select an entry ▶ Press  ▶ Select a number ▶ Press  ▶ Press
  - For **No Answer**, select ring time ▶ Press

### Incoming Calls while Call Forwarding is Active

- To answer calls, press **[\*]** while handset is ringing/vibrating.
  - When **Always** is set, handset does not ring/vibrate for calls.

#### Note ▶ Phone Numbers Beginning with the Following Numbers Cannot be Saved:

- **1** (Public Service Numbers: 110, 119, 118, etc.)
- **00** (International call numbers: 001, 0041, etc.)
- **0120** (Toll-free numbers)
- **0990** (Fee-based services: Dial Q2, etc.)

#### Forwarding Video Calls

Video Calls are forwarded only to Video Call-compatible devices that comply with 3G-324M.

- Tip ▶ Adjust ring time to set the response priority when using Call Forwarding together with Answer Phone (see **P.2-9**).
- Example: Ring time for Call Forwarding: 10 seconds**  
**Ring time for Answer Phone: 9 seconds**
- In this example, Answer Phone responds first. (Priority may change depending on signal conditions.)

### Cancel All

Cancel Call Forwarding

Main Menu ▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Voicemail/Diverts

Select **Cancel All** ▶ Press **[\*]** ▶ Press **[\*]** **Yes**

- Cancel All also cancels Voicemail.

### Status

Check Call Forwarding status

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Voicemail/Diverts ▶ Status

Select **Always or No Answer** ▶ Press **[\*]**

- Call Forwarding status appears.
  - Press **[\*]** to return.

## Voicemail

- Calls are diverted to Voicemail Centre via Call Forwarding function; Voicemail and Call Forwarding can only be set simultaneously when Call Forwarding is set to Video Calls.
- Voicemail is not available when **All Outgoing Calls** or **All Incoming Calls** in Call Barring is active.
- For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).
- Activate Missed Call Notification (see **P.14-5**) for records of calls missed while 905SH is off/out-of-range.

### Voicemail

Initiate Voicemail

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Voicemail/Diverts ▶ Voicemail ▶ Activate

Select **Always or No Answer** ▶ Press **[\*]**

- For **No Answer**, select ring time ▶ Press **[\*]**

**Incoming Calls while Voicemail is Active**

- To answer calls, press **[\*]** while handset is ringing/vibrating.
  - When **Always** is set, handset does not ring/vibrate for calls.

**Tip** ▶ Adjust ring time to set the response priority when using Voicemail together with Answer Phone (see **P.2-9**).

**Example: Ring time for Voicemail: 10 seconds**

**Ring time for Answer Phone: 9 seconds**

In this example, Answer Phone responds first. (Priority may change depending on signal conditions.)

**Cancel All**

Cancel Voicemail

**Main Menu**

▶ **Settings** ▶ **Call/Video Call** (☎) ▶ **Call Settings**  
 ▶ **Voicemail/Diverts**

**Select Cancel All** ▶ Press **[\*]** ▶ Press **[\*]** **Yes**

- Cancel All also cancels Call Forwarding.

**Status**

Check Voicemail status

**Main Menu**

▶ **Settings** ▶ **Call/Video Call** (☎) ▶ **Call Settings**  
 ▶ **Voicemail/Diverts** ▶ **Status**

**Select Always or No Answer** ▶ Press **[\*]**

- Voicemail status appears.
  - Press **[\*]** to return.

**Call Voicemail**

Check Voicemail messages

Press **[1000]** for 1+ seconds.

- Follow the voice guidance for further operations after handset connects to Voicemail Centre.
- Alternatively, follow these steps in Standby.
  - Press **[\*]** ▶ Select **Phone Book** ▶ Press **[\*]** ▶ Select **Call Voicemail** ▶ Press **[\*]**
  - Press **[\*]** ▶ Select **Settings** ▶ Press **[\*]** ▶ Use **[\*]** to select **Call/Video Call** ▶ Select **Call Settings** ▶ Press **[\*]** ▶ Select **Voicemail/Diverts** ▶ Press **[\*]** ▶ Select **Voicemail** ▶ Press **[\*]** ▶ Select **Call Voicemail** ▶ Press **[\*]**

**Tip** ▶ **[\*]** appears when new messages are recorded, and disappears after they are checked from handset.

**Voicemail Centre Numbers**

Change Voicemail Centre numbers

**Default** Number for Setting: 09066517000, Number for Playing: 1416

**Main Menu**

▶ **Settings** ▶ **Call/Video Call** (☎) ▶ **Call Settings**  
 ▶ **Voicemail/Diverts** ▶ **Voicemail** ▶ **Settings**

**Number for Setting**

**Select Number for Setting** ▶ Press **[\*]** ▶ **Enter Centre Number** ▶ Press **[\*]**

**Number for Playing**

**Select Number for Playing** ▶ Press **[\*]** ▶ **Enter Mailbox No.** ▶ Press **[\*]**



## Missed Call Notification

Activate this function for records of calls missed while 905SH is off/out-of-range and Voicemail is active.

Activate/  
Cancel

Activate or cancel Missed Call Notification


Main Menu ► Settings ► Call/Video Call (☎) ► Call Settings

Select **out Missed Calls** ► Press **■** ► Press **■**

- Follow the voice guidance for further operations after 905SH connects to the Network.

### Retrieving Missed Call Notification Records

- Missed Call Notification records are stored at the Centre. When 905SH is turned on or comes into range, Information window (see **P.2-7**) appears with Missed Call records.
- Information window may take some time to open.

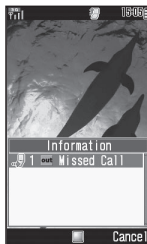

## Call Waiting

An additional contract is required.

Call Waiting  
On/Off

Activate or cancel Call Waiting

Main Menu ► Settings ► Call/Video Call (☎) ► Call Settings  
► Call Waiting

Choose **On or Off** ► Press **■**

Status

Check Call Waiting status

Main Menu ► Settings ► Call/Video Call (☎) ► Call Settings  
► Call Waiting

Select **Status** ► Press **■**

- Call Waiting status appears.
- Press **■** to return.

Incoming Calls Place Line 1 on hold to answer Line 2

When a tone sounds during a call, press **☎**.

- Press **☎** to switch between two lines.

### Closing Handset while Someone is on Hold

- All lines are disconnected.

### Pressing **☎** while Someone is on Hold

- Active line ends and short beeps sound; to re-engage the party on hold:

Press **☎** **Options** ► Select **Retrieve** ► Press **■**

**Line 1 Ends while Line 2 is on Hold**

■ Short beeps sound. To re-engage the party on hold:

Press **[\*]** **[Options]** ➔ **Select Retrieve** ➔ **Press** **[\*]**

- Tip** ▶
- Handset does not ring or vibrate for incoming calls while a line is engaged. A tone sounds from Earpiece.
  - When Voicemail or Call Forwarding is active, unanswered calls are transferred to Voicemail Centre or the forwarding number. When active service is set to **Always Call Waiting** is disabled.

## Conference Call

An additional contract is required.

**Dial New Number**

Open another line during a call

**Enter a phone number during a call** ➔ **Press** **[\*]**

- Line 2 is open. Line 1 is placed on hold.
- Press **[\*]** to select a number from Phone Book or press **[\*]** for 1+ seconds to select from Call Log.

**Swap Calls**

Switch between two open lines

During a call, press **[\*]**.

- The line switches. The other line is placed on hold.

**Closing Handset while Someone is on Hold**

■ All lines are disconnected.

**Pressing **[\*]** while Someone is on Hold**

■ Active line ends and short beeps sound; to re-engage the party on hold:

Press **[\*]** **[Options]** ➔ **Select Retrieve** ➔ **Press** **[\*]**

**Line 1 Ends while Line 2 is on Hold**

■ Short beeps sound. To re-engage the party on hold:

Press **[\*]** **[Options]** ➔ **Select Retrieve** ➔ **Press** **[\*]**

**Conference Call**

Use up to five lines simultaneously

Press **[\*]** **[Options]** while switching between two lines ➔ **Select Multi Party** ➔ **Press** **[\*]** ➔ **Select Conference All** ➔ **Press** **[\*]**

**Ending Calls during Conference Call**

■ All lines are disconnected.

**Some Lines End during Conference Call**

■ Other lines remain connected.

# Call Barring

Restrict incoming/outgoing Voice Calls, Video Calls or SMS messages.

Following restrictions are available:

Outgoing Calls	All Outgoing Calls	Restrict all non-emergency calls
	Bar Int'l Call*	Allow only domestic calls
	Only Local & Home*	Restrict all international calls except to Japan
Incoming Calls	All Incoming Calls	Reject all calls
	Bar if Abroad	Reject calls when outside Japan

\*905SH does not support international roaming and thus calls cannot be placed when outside Japan.

Reject incoming calls according to phone numbers, or reject incoming calls without Caller ID.

Rejected Numbers	Reject calls from designated numbers
Withheld Call	Reject incoming calls without Caller ID

- Note** ▶
- Network Password selected at initial subscription (see **P.1-27**) is required to change Call Barring settings.
  - If Network Password is incorrectly entered three times, Call Barring settings are locked. To resolve, Network Password and Centre Access Code must be changed. For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).
  - **All Outgoing Calls** and **All Incoming Calls** are disabled when Call Forwarding or Voicemail is active.

**Tip** ▶ If call is attempted when Call Barring is active, **Call Barred**. appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

## Fixed Dialling Number

- Allow calls only to designated numbers.
  - This function is available only for compatible USIM Cards.
  - To send SMS to designated numbers, save SMS Centre Number (+819066519300) to Fixed Dialling Number list. (Do not change Centre Number unless instructed to do so.)

## Restricting Outgoing Calls

### Set/Cancel Restriction

Set or cancel restriction of outgoing calls

### Main Menu

▶ *Settings* ▶ *Call/Video Call* (☎) ▶ *Call Settings*  
▶ *Call Barring* ▶ *Outgoing Calls*

### Each Restriction

Select restriction ▶ Press  ▶ Choose *On* (set) or *Off* ▶ Press  ▶ Enter Network Password ▶ Press

### Cancelling All Restrictions

Select *Cancel All* ▶ Press  ▶ Enter Network Password ▶ Press

**Tip** ▶ Emergency calls (110, etc.) are possible even when outgoing calls are restricted. For more, see P.2-3 "Emergency Calls".

### Status

Check Call Barring status for outgoing calls

### Main Menu

▶ *Settings* ▶ *Call/Video Call* (☎) ▶ *Call Settings*  
▶ *Call Barring* ▶ *Outgoing Calls*

Select restriction ▶ Press  ▶ Select *Status* ▶ Press

- Call Barring status appears.  
▶ Press  to return.

## Restricting Incoming Calls

### Set/Cancel Restriction

Set or cancel restriction of incoming calls

### Main Menu

▶ *Settings* ▶ *Call/Video Call* (☎) ▶ *Call Settings*  
▶ *Call Barring* ▶ *Incoming Calls*

### Each Restriction

Select restriction ▶ Press  ▶ Choose *On* (set) or *Off* ▶ Press  ▶ Enter Network Password ▶ Press

### Cancelling All Restrictions

Select *Cancel All* ▶ Press  ▶ Enter Network Password ▶ Press

### Status

Check Call Barring status for incoming calls

### Main Menu

▶ *Settings* ▶ *Call/Video Call* (☎) ▶ *Call Settings*  
▶ *Call Barring* ▶ *Incoming Calls*

Select restriction ▶ Press  ▶ Select *Status* ▶ Press

- Call Barring status appears.  
▶ Press  to return.

## Rejecting a Call

Designate phone numbers to reject, then set Switch On/Off to **On**.

### Set Reject Number

Designate phone numbers to reject

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Call Barring ▶ Rejected Numbers ▶ Set Reject Number

## Adding Numbers

Select ----- ▶ Press [■] ▶ Enter a number ▶

Press [■]

- To select from Phone Book, select ----- ▶ Press [☐] Options
  - ▶ Select **Ph.Book List** ▶ Press [■] ▶ Select an entry ▶ Press [■]
  - For entries with multiple numbers, select one ▶ Press [■]
  - Name appears for numbers saved in Phone Book.
- To select from Call Log, select ----- ▶ Press [☐] Options
  - ▶ Select **From Call Log** ▶ Press [■] ▶ Use [☐] to select a type ▶ Select a record ▶ Press [■]

## Editing Numbers

Select an entry ▶ Press [■] ▶ Edit the number ▶

Press [■]

## Deleting Numbers

Select an entry ▶ Press [☐] Options ▶ Select **Delete**

▶ Press [■] ▶ Press [☐] **Yes**

### Switch On/Off

Reject calls from designated numbers

Default: Off

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶  
Call Barring ▶ Rejected Numbers ▶ Switch On/Off

Choose **On (reject)** or **Off** ▶ Press [■]

## Rejecting Calls without Caller ID

### Withheld Call

Reject incoming calls without Caller ID

Default: Off

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Call Barring ▶ Withheld Call

Choose **On (reject)** or **Off** ▶ Press [■]

## Changing Network Password

### Change NW Password

Change Network Password

### Main Menu

▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings  
▶ Call Barring ▶ Change NW Password

Enter current Network Password ▶ Press [■] ▶

Enter new Network Password ▶ Press [■] ▶ Enter

new Network Password again ▶ Press [■]

# Caller ID

Show or hide your own phone number when placing calls. Regardless of this setting, sending or blocking Caller ID can be selected for each call. Enter the following numbers/symbols before a phone number when placing a call.

<b>Send</b>	1*86 or 806 or *67* or *31* 1*#
<b>Block</b>	1*86 404 or #1* 31* 1*#

<b>Show My Number</b>	Send or block Caller ID
Default: On	

<b>Main Menu</b>	▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Show My Number
------------------	--

**Choose On (send) or Off ▶ Press**

<b>Status</b>	Check Caller ID status
---------------	------------------------

<b>Main Menu</b>	▶ Settings ▶ Call/Video Call (☎) ▶ Call Settings ▶ Show My Number
------------------	--

**Select Status ▶ Press**

- Caller ID status appears.  
▶ Press  to return.

## ***Messaging***

# Basics

Use SMS and MMS for messaging.


<b>SMS (Short Message Service)</b>	Use this basic Vodafone live! service to exchange short text messages of up to 160 alphanumeric characters with Vodafone handsets.
<b>MMS (Multimedia Messaging Service)</b>	Exchange text messages of up to 30,000 alphanumeric characters with MMS-compatible Vodafone handsets, email-compatible mobiles, PCs and other like devices. Attach images/sounds for multimedia messages.

See **P.15-6** for mail composition basics.

- Tip** ▶
- An additional contract is required to use MMS and receive e-mail from PCs, etc.
  - Address questions about messaging to Vodafone Customer Centre, General Information (see **P.20-26**).

## Messaging Folders

Messages are organised in folders by type.

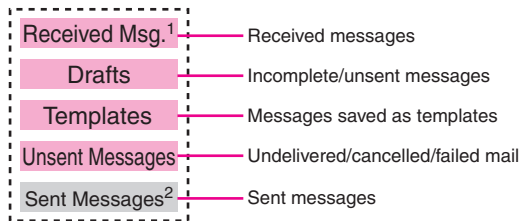

<sup>1</sup> **Received Folder** and **Folder 1 - Folder 7** (My Folders) appear within when Received Msg. View (see **P.15-4**) is set to **Folder View**. **Spam Folder** appears as well if Anti Spam Measures (see **P.15-26**) is active.

<sup>2</sup> **Sent Folder** and **Folder 1 - Folder 7** (My Folders) appear within when Sent Msg. View (see **P.15-4**) is set to **Folder View**.

**Memory Status**

■ Press  ➔ **Select Messaging** ➔ Press  ➔ **Select Memory Status** ➔ Press  ➔ **Select Received: or Sent:** ➔ Press

■ Press  to return.



## Window Description

### Messaging Folder Contents

Select a Messaging folder and press **[ ]** to open it.

#### Message Type/Status

- Message Status:

Unread	Read
Sent	Failed
Replied	Forwarded
MMS Notice	Unread Delivery Report

SMS appears below SMS messages ().

- Message Settings:

Attachments	Protected
Priority (High)	Priority (Low)
SMS Mail on USIM Card	

#### Sender or Recipient

- Number, address or name appears.

#### Message Text



- Tip** ▶
- Name does not appear for e-mail from address saved only in USIM Card Phone Book.
  - Follow these steps to sort messages.  
Press **[ ]** **Options** ➔ **Select View Settings** ➔  
Press **[ ]** ➔ **Select Sort** ➔ Press **[ ]** ➔ **Select an option** ➔ Press **[ ]**
  - To change message list view, see P.15-4.

## Message Contents

Select a message and press **[ ]** to open it.



#### Message Number

#### Sender or Recipient

- Number, address or name appears.

#### Subject (MMS Mail only)

#### Received or Sent Date & Time

#### Message Text

- Tip** ▶
- To activate Display Backlight, press **[0.2.1]** - **[9.0.0]**.
  - Press **[#1.5]** to open previous message (older one), or press **[\*4.0.5]** to open next one (newer one).

## Views

### Message List Views



Two-line View



Sender+Preview



Subjects+Preview



Sender



Subjects

Message List View is **Sender+Preview** by default.

Main Menu ► Messaging ► Settings ► General Settings

- 1 Select **Message List View** and press
- 2 Select a view and press

Tip ► Alternatively, open a Messaging folder and follow these steps.

Press  **Options** ► **Select View Settings** ►  
Press  ► **Perform from Step 1**

### Folder View

Set folders to appear in Received Msg. and Sent Messages folders. Organise messages into folders manually or automatically (see P.15-22). Received Msg. View and Sent Msg. View are **List View** (folders are hidden) by default.

Main Menu ► Messaging ► Settings ► General Settings

- 1 Select **Received Msg. View** or **Sent Msg. View** and press 
  - When the folder contains a locked folder, enter Handset Code  
► Press
- 2 Select **Folder View** and press 
  - To hide folders, select **List View** ► Press

## Customising Handset Address

Change alphanumerics before @ of the default handset mail address.

Default	□□□□□□□□□□@△.vodafone.ne.jp
Custom	Account Name ↓ Domain Name
	Entered Account Name @ △.vodafone.ne.jp
	△ varies by subscription area.
	If you have further questions, please contact Vodafone Customer Centre, General Information (see P.20-26).

- Handset must connect to the Network to customise handset address.
- Retrieve Network information (see P.1-20) before customizing handset address.
- Customising handset mail address helps reduce spam.
- Default Account Name is random alphanumerics.

Main Menu ▶ Vodafone live! ▶ Vodafone live!

- 1 Select **My Vodafone** and press
- 2 Select **各種変更手続き** and press
- 3 Select **オプションメール設定・各種メール設定** and press
- 4 Select the text entry field below **暗証番号を入力してください。** and press

- 5 Enter **Centre Access Code** and press

Centre Access Code: see P.1-27

- 6 Select **OK** and press

- 7 Select 1. **各種メール設定** and press

- 8 Select 1. **メールアドレス編集** and press

- 9 Select the text entry field below **ご希望のアカウントを入力してください。** and press

- 10 Enter an address and press

- 11 Select **OK** and press

**Note** ▶ This procedure may change without prior notice. For further information, contact Vodafone Customer Centre, General Information (see P.20-26).


# Sending Text Messages

## Basics

Available entry items vary by Message Type.

	Recipient	Subject	Message	Attachments
<b>SMS</b>	Available	N/A	Available	N/A
<b>MMS</b>	Available	Available	Available	Available

Message Type changes to MMS automatically when subject is entered, a file is attached, etc.

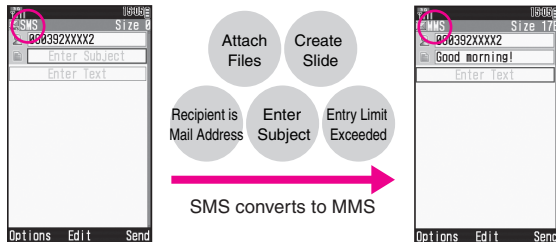

SMS messages are converted to MMS messages when:

- Recipient's Vodafone handset number is over 20 digits
- Priority is not **Normal**


## Character Entry Limits

Character entry limits vary by Message Type.

<b>SMS</b>	160 single-byte alphanumerics
<b>MMS</b>	Approximately 30,000 single-byte alphanumerics

- Send up to 300 KB including message text via MMS. Message text character limit differs by attachment size or number of recipients.
- Approximate mail size appears in Mail Composition window (see P.15-7).

## Mail Composition Overview

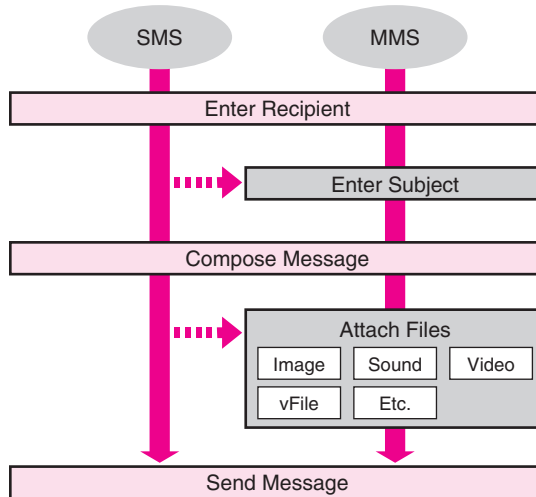

## Creating & Sending a Message


- Read through the basic information on **P.15-6** beforehand.
- Save Signature and activate Auto Insert (see **P.15-26**) to enter signature into message text automatically.
- Create Contact Groups beforehand to send the same message to multiple recipients at one time (see **P.4-12**).
- Save frequently used numbers/addresses to Speed Mail List (see **P.15-24**).
- Use Multi Job (see **P.1-26**) to view other messages while creating a message.


### 1 Press , select **Messaging** and press

- Alternatively, press   in Standby.

### 2 Select **Create Message** and press

Mail Composition window opens.

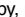- Shortcut: In Standby, press  for 1+ seconds

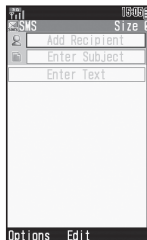

Mail Composition Window

### Incoming Calls while Creating Message

- Content is saved temporarily. End the call to return.

### 3 Select recipient field and press

Select Recipient window opens.


- Entering Recipients: see **P.15-9**

### 4 **Phone Book**

#### 1 Select **Phone Book** and press

#### 2 Select a recipient and press

- To search Phone Book, perform Steps 2 - 3 in "Dialling from Phone Book" on **P.4-8**.

- When multiple items are saved, select one → Press 




Select Recipient Window

### **Contact Groups** (see **P.4-12**)

#### 1 Select **Select Group** and press

#### 2 Select a Group and press

- Press  to return. Omit this step when only one member is saved.

- To add recipients (when multiple members are saved), select **Add Recipient** → Press  → Repeat Step 4 → Press 

### **Sent Mail Records**

#### 1 Select a recipient and press

- Sent mail records are names, phone numbers or mail addresses with the corresponding indicators (☎, etc.).

### **Speed Mail List** (see **P.15-24**)

#### 1 Select **Speed Mail List** and press

#### 2 Select a recipient and press

### **Direct Entry**

#### 1 Select **Enter Number** or **Enter Address** and press

#### 2 Enter recipient's Vodafone handset number or mail address and press

## 5 Press (for SMS) or (for MMS)

For MMS, subject entry window opens. Alternatively, enter the first character to open subject entry window.

- When sending an SMS message, skip ahead to Step 7.
- To edit recipients, see P.15-9 "Entering Recipients".




## 6 Enter subject and press

- Enter up to 40 single-byte alphanumerics (13 single-byte katakana or 13 double-byte characters).

## 7 Press then enter a message



- Alternatively, enter the first character; message text entry window opens automatically.




■ Entering Characters: see P.3-5

- To enter Signature, press  **Options** → Select **Advanced** → Press  → Select **Signature** → Press 
  - Activate Auto Insert (see P.15-26) to enter Signature automatically.



## 8 Press

- When sending an SMS message or to proceed without attaching files, skip ahead to Step 10.



■ To edit the message, select message text field → Press  → Edit → Press 

■ To change font size/colour, select message text field → Press  **Options** → Select **Font Size** or **Font Colour** → Press  → Select a size or colour → Press 

■ Font size/colour can be changed for MMS messages when Compose SMIL (see P.15-28) is active.

■ To delete the message, select message text field → Press  **Options** → Select **Remove Text** → Press 



■ To preview 3D Pictogram, select message text field → Press  **Options** → Select **3D Pictogram** → Press 

- Preview how the message appears on 3D Pictogram-compatible recipient handsets.

■ SMS/MMS Send Options: see P.15-12

■ Saving to Drafts: see P.15-12



■ Creating Templates: see P.15-13


## 9 Attach files or create slides

■ Attaching Files: see P.15-10

■ Creating Slides: see P.15-11

## 10 Press **Send**

- Message is sent even if handset is closed. To cancel, select the message in Unsent Messages and press  **Cancel** then  **Yes**. (Message is not sent if cancelled quick enough.)

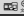**Tip** ▶ Select subject or message text field and press  to open text entry window in single-byte number entry mode.

### Sending from Phone Book Entries

- Open a Phone Book entry and follow these steps.
  - Phone Numbers  
**Select a number** → Press **[ ]** → **Select Create Message** → Press **[ ]** → Press **[ ]** → **Perform from Step 5 on P.15-8**
  - Mail Addresses  
**Select a mail address** → Press **[ ]** → Press **[ ]** → **Perform from Step 5 on P.15-8**

### When Recipient Handset is Off or Out-of-Range

- Messages are stored at the Centre, and delivered when recipient handset detects signal.
  - To select storage period, see **P.15-27** or **P.15-28** "Expiry Time". Messages are deleted if not received by the specified Expiry Time.

### Delivery Failure

- Information window opens (✘ appears) for delivery failure.  
**To send unsent messages, press [ ]** → **Select a message** → Press **[ ]** → Press **[ ]** **Resend** → Press **[ ]** **Yes**
- Activate Auto Resend (see **P.15-25**) to reattempt to send unsent messages automatically up to two times.
  - If messages are not sent after two Automatic Resend attempts, follow the above steps to send manually.
  - Automatic Resend may send the same message twice.

### Entering Recipients

- To add recipients, open Mail Composition window and follow these steps.  
**Select recipient field** → Press **[ ]** → **Select Add Recipient** → Press **[ ]** → **Perform Step 4 on P.15-7**
  - Press **[ ]** to return.
  - Enter up to 20 recipients in total.
- To switch recipient status between To, Cc (carbon copy) and Bcc (blind carbon copy), open Mail Composition window and follow these steps.  
**Select recipient field** → Press **[ ]** → **Select a recipient** → Press **[ ]** **Options** → **Select Change to To, Change to Cc or Change to Bcc** → Press **[ ]**
  - Other recipients cannot see numbers/addresses set to Bcc.
- To change/edit, open Mail Composition window and follow these steps.  
**Select recipient field** → Press **[ ]** → **Select a recipient** → Press **[ ]** → **Edit** → Press **[ ]**
  - Press **[ ]** to return.
- To delete, open Mail Composition window and follow these steps.  
**Select recipient field** → Press **[ ]** → **Select a recipient** → Press **[ ]** **Options** → **Select Delete** → Press **[ ]**
  - To delete all, select **Delete All** instead of **Delete** → Press **[ ]** → Press **[ ]** **Yes**
  - Press **[ ]** to return.

**Note** ▶ When a mail address is entered, do not use single-byte katakana or Pictographs in message text and subject. They may not appear properly on recipient devices.

## Attaching Files

Attach images, sound files, vFiles (Phone Book/schedule entries), etc. to MMS messages.

- Attach up to 20 files or 300 KB including message text.
- Confirm compatibility with recipient handsets (file format, services, etc.) before sending files.
- Follow these steps after Step 8 on **P.15-8**; after Mail Composition window returns, complete and send message.

**1** Press **Options**, select **Insert Item** and press

### 2 Image Files

**1** Select **Picture** and press

**2** Select a folder and press

- To capture an image, select **Take Picture** ➔ Press ➔ Press to shoot ➔ Press (Omit the next step.)
  - When confirmation for save location appears, select a location ➔ Press

**3** Select a file and press

- For large JPEG images, select attachment size ➔ Press

### Sound Files

**1** Select **Sound** and press

**2** Select a folder and press

- To record sound, select **Record Voice** ➔ Press ➔ Press to start recording ➔ Press to stop ➔ Select **Accept** ➔ Press ➔ Select **To Phone Memory** or **To Memory Card** ➔ Press (Omit the next step.)

**3** Select a file and press

### Video Files

**1** Select **Video** and press

**2** Select **Saved Videos** and press

- To record video, select **Record Video** ➔ Press ➔ Press to start recording ➔ Press to stop ➔ Select **Accept** ➔ Press ➔ Select **To Phone Memory** or **To Memory Card** ➔ Press (Omit the next step.)

**3** Select a file and press

### Phone Book Entries

**1** Select **Attach Contact** and press

**2** Select an entry and press

### Schedule Entries

**1** Select **Attach Appointment** and press

**2** Select a date with schedule and press

**3** Select an entry and press

### Attaching Other Files

**1** Select **Others** and press

**2** Select a file and press

#### Deleting Attachments

- In Mail Composition window, select a file ➔ Press **Options** ➔ Select **Remove Item** ➔ Press



## Adding Attachments

- In Mail Composition window, press **Options** → Select **Insert Item** → Press **Options** → Perform Step 2 on P.15-10
  - Cancel Compose SMIL (see P.15-28) to send files as attachments. (Compose SMIL is cancelled by default.)
  - Activate Compose SMIL to create slides (see below).

## Creating Slides

Combine message text with image/sound or video to create a slide. Multiple slides in a message appear sequentially in numerical order on MMS-compatible recipient devices.


- Activate Compose SMIL beforehand (see P.15-28).
- Create up to 20 slides or 300 KB including message text.
- Attaching multiple files may create a slide automatically.
- When Compose SMIL is **Off** or the recipient handset is incompatible, slides are sent as attachments.
- Insert one image, sound or video file (or one image and one sound file) per slide.

Follow these steps in Step 9 on P.15-8.

- 1 Press **Options**
- 2 Select **Add Slide** and press **Options**
- 3 Select **Add Slide After** or **Add Slide Before** and press **Options**

New slide appears.

- Select **Add Slide After** to set the entered message text as the first slide and insert a new slide after it.
- Select **Add Slide Before** to set the entered message text as the second slide and insert a new slide before it.

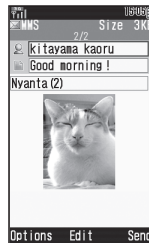

## 4 Enter text/insert a file

- To add slides, repeat Steps 1 - 4.
- Use **Options** to toggle slides.
- To set display time, use **Options** to select a slide → Select message text field or a file → Press **Options** → Select **Slide Duration** → Press **Options** → Select time → Press **Options**
  - To enter display time, select **Custom Time** → Press **Options** → Enter time → Press **Options**
- To switch message text and file (image or video) positions, select image or video → Press **Options** → Select **Move to Above** or **Move to Below** → Press **Options**
- To delete slides, use **Options** to select one → Select message text field or a file → Press **Options** → Select **Remove Slide** → Press **Options** → Press **Yes**
- To replace files, use **Options** to select a slide → Select a file → Press **Options** → Select **Replace Picture, Replace Sound** or **Replace Video** → Press **Options**
  - Insert new file.
- To delete files, use **Options** to select a slide → Select a file → Press **Options** → Select **Remove Picture, Remove Video, Remove Sound** or **Remove Item** → Press **Options**

## SMS/MMS Send Options

- Settings are valid for one message.
- Follow these steps after Step 8 on **P.15-8**; after Mail Composition window returns, complete and send message.

### Delivery Report

Confirm SMS/MMS delivery (see **P.15-14**)

■ Available only when messaging Vodafone handsets.  
Default Off

Press **Options** → **Select Messaging Settings** →

Press → **Select Delivery Report** → Press →

Choose **On (request) or Off** → Press

■ Press to return to Mail Composition window.

### Expiry Time

Set a time limit to store sent messages at the Centre

Default Maximum

Press **Options** → **Select Messaging Settings** →

Press → **Select Expiry Time** → Press → **Select**

**a limit** → Press

■ Press to return to Mail Composition window.

### Priority

Set priority when sending mail

■ SMS Priority is **Normal**. Setting other priority changes Message Type to MMS.  
Default Normal

Press **Options** → **Select Messaging Settings** →

Press → **Select Priority** → Press → **Select**

**priority** → Press

■ Press to return to Mail Composition window.

- Priority setting does not affect delivery speed.

## Using Drafts

### Saving to Drafts

- When memory is full, delete messages (see **P.15-21**) before creating new ones.
- Follow these steps after Step 8 on **P.15-8**.

**1** Press **Options**

**2** Select **Save to Drafts** and press

Message is saved to Drafts folder.

**Note** ▶ Recipient status (To/Cc/Bcc) or the order in which attachments appear may change when saving MMS messages.

### Sending from Drafts

**Main Menu** ▶ *Messaging*

**1** Select **Drafts** and press

Saved messages appear.

■ To open properties, select a message → Press **Options** → Select **Message Details** → Press




■ Press to return.

■ To delete draft messages, select one → Press **Options** → Select **Delete** → Press → Press **Yes**

## 2 Select a message and press

Mail Composition window opens with some fields filled in.

## 3 Edit/send the message

- For details, see procedures for creating a message (see P.15-7 - 15-8).
- Sent messages are deleted from Drafts.
- To save edited message to Drafts again, press  **Options** → Select **Save to Drafts** → Press  → Select **Save as New** or **Save** (overwrite) → Press 

## Using Templates

### Creating Templates

Save created messages as templates.  
Follow these steps after Step 8 on P.15-8.

## 1 Press **Options**




## 2 Select **Save as Template** and press

## 3 Enter name and press

### Creating a Message from Templates

**Main Menu** ▶ *Messaging*





## 1 Select **Templates** and press

- To open properties, select a template → Press  **Options** → Select **Message Details** → Press 
  - Press  to return.

## 2 Select a template and press

Mail Composition window opens.

## 3 Edit/send the message


- For details, see procedures for creating a message (see P.15-7 - 15-8).
- To save edited message to Templates again, press  **Options**
  - Select **Save as Template** → Press  → Select **Save as New** or **Save** (overwrite) → Press 
    - For **Save as New**, enter name → Press 

## Incoming Text Messages

### Opening New Messages

## 1 Delivery Notice appears and Information window opens ( appears) for new mail

- If closed, open 905SH for new mail to see Delivery Notice appear and Information window open.
- Incoming Messages: see P.6-6

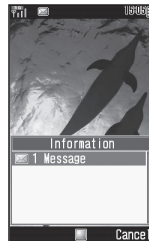

## 2 Select Message and press

Received Msg. folder opens.

- Alternatively, press  while Delivery Notice appears.

When folders appear (see **P.15-4** "Folder View"), select one  $\rightarrow$  Press



## 3 Select a message and press


Message window opens.

- 3D animation plays for compatible messages (see **P.15-17** "3D Pictogram").

To cancel 3D Pictogram, see **P.15-17** "Display Effect".

To retrieve complete MMS messages, see **P.15-15**.

Using Messages: see **P.15-16**

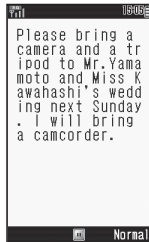

**Tip**  $\rightarrow$  When no Delivery Notice or Information window appears, open from Received Msg. folder (see **P.15-16** "Checking Messages").

### Delivery Report

- When messages are sent with Delivery Report **On** (see **P.15-12**, **P.15-26**), handset receives a Delivery Report from the Centre. To open Delivery Report, follow these steps in Information window.

**Select Delivery Report**  $\rightarrow$  Press   $\rightarrow$  **Select a message with unconfirmed Delivery Report**  $\rightarrow$

Press   $\rightarrow$  Press  **Report**

- When Report list appears, press  to open first report  $\rightarrow$  Press   $\rightarrow$  Select next report  $\rightarrow$  Press

### New Mail Out of Standby

- A double beep sounds and a notice such as **New Message from (Sender's name)** appears.
  - To change/hide notice or mute double beep, see **P.15-27** "Message Notice".
- Information window opens when handset returns to Standby.

## Retrieving Complete MMS Messages

Centre sends initial portion of MMS message when:

- The message was sent to multiple recipients
- Files are attached to the message

✉ (MMS Notice) appears for MMS messages in Received Msg. folder when the remaining portion is at the Centre.

- Tip** ▶
- To retrieve complete MMS via Mail List, see **P.15-16**.
  - To always retrieve complete MMS automatically, set Home Download (see **P.15-25**) to **Always Download**. Home Download is set to **DL only Tel. No.** by default; complete MMS is automatically received when sent from Vodafone handset numbers.

Main Menu ▶ Messaging

### 1 Select **Received Msg.** and press **■**

- When folders appear, select one ▶ Press **■**

### 2 Select a message with **✉** and press **■**

### 3 Press **○** **More**

Download starts.

- After download, complete message appears.

- To cancel download, press **○** **Cancel** ▶ Press **○** **Yes**

**Note** ▶ Messages up to 300 KB can be retrieved.

## Retrieving Mail List

Retrieve a list of messages stored at the Centre (Server Mail).

Main Menu ▶ Messaging

### 1 Select **Server Mail Box** and press **■**

- To open retrieved Mail List, select **Mail List** ▶ Press **■**
- To retrieve all Server Mail, select **Get All Mails** ▶ Press **■** ▶ Press **○** **Yes** (Omit the next steps.)
- To delete all Server Mail, select **Delete All Mails** ▶ Press **■** ▶ Enter Handset Code ▶ Press **■** ▶ Press **○** **Yes** (Omit the next steps.)
  - It may take some time to delete all Server Mail.

### 2 Select **Get Mail List** and press **■**

### 3 Press **○** **Yes**

After retrieval, Mail List appears.

- When Mail List has already been retrieved, it is refreshed.
- To cancel retrieval, press **○** **Cancel** ▶ Press **○** **Yes**
- Using Mail List: see **P.15-16**

#### Server Status

- To check Server status, follow these steps after Step 1 above.
  - Select Mailbox Volume** ▶ Press **■**
    - Press **○** to return.
    - To update Server Mail Volume, press **■** ▶ Press **○** **Yes**

## Using Mail List

**Get** Retrieve complete MMS messages

- Select a message** → Press  → Press  **Yes**  
 To retrieve all Server Mail, press  **Options** → Select **Get All**  
 → Press  → Press  **Yes**
- Retrieved messages are deleted from Mail List and saved to Received Msg. folder.
  - To select multiple messages to retrieve, see P.15-18.

**Remote Forward** Forward Server Mail directly to other Vodafone handsets, PCs, etc.

- Select a message** → Press  **Options** → Select **Remote Forward** → Press  → **Select To:** → Press  → **Enter recipients (perform Step 4 on P.15-7)** → Press  **Send**

**Delete** Delete Server Mail

- Select a message** → Press  **Options** → **Select Delete**  
 → Press  → Press  **Yes**  
 To delete all Server Mail, press  **Options** → Select **Delete All** → Press  → **Enter Handset Code** → Press  → Press  **Yes**

**Message Details** Open Server Mail properties

- Select a message** → Press  **Options** → Select **Message Details** → Press   
 Press  to return.

## Using Messages

### Checking Messages

To open Received Msg. folder while using another function, press  for 1+ seconds.

- While watching TV, Received Msg. folder opens in the lower half of Display.


**Main Menu** ► *Messaging*

### 1 Select *Received Msg., Drafts, Templates, Unsent Messages or Sent Messages* and press

Messages appear.






- While Delivery Notice appears, press  to open Received Msg. folder.
- When folders appear, select one → Press
- To open properties (not available for unsent messages), select a message → Press  **Options** → Select **Message Details** → Press 
  - Press  to scroll down.
  - Press  to return.
- To open sender/recipient details, select a received or sent message → Press  **Options** → Select **View Mail Address** → Press  → **Select sender or recipient** → Press 
  - To return, press  **CLEAR** → Press  **BACK** → Press  **CLEAR**
- Open sender/recipient details and press  **Options** to copy number/address, save to Phone Book or set as an auto sort key (see P.15-23).

## 2 Select a message and press







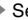

- When an image is attached, press  to open it. Images may not appear if file size is too large.
- Mail Composition window (see P.15-7) opens after opening messages in Drafts or Templates.








 Use  to scroll.

 To change font size, press  **Options**  Select **Font Size**  Press   Select a size  Press 

 To play slides (not available for unsent messages), press  **Options**  Select **Slide Play** (for slides in Drafts and Templates, select **Preview Message**)  Press 

■ Press  to stop.

 To copy contents of received or sent messages, press  **Options**  Select **Copy**  Press   Select **Address, Subject** or **Message text**  Press 

■ For **Message text**, use  to select the first character of text  Press   Use  to select the end point  Press 

■ To paste text into another window, see P.3-12 "Copy/Cut & Paste".

**Note**  Attached text file contents may not appear correctly.

### Editing Sent/Unsent Messages

■ Select **Sent Messages** or **Unsent Messages** and press  in Step 1 on P.15-16 and follow these steps.

Select a message  Press  **Options**  Select **Edit & Send or Edit**  Press   Press   Perform from Step 5 on P.15-8

## 3D Pictogram


To animate Pictographs, Emoticons and compatible words such as **おはよう**, **食事** and **新幹線** included in the first 150 characters of message text, in 3D, follow these steps after Step 1 on P.15-16.

**1** Select a message and press 

**2** Press  **Options**

**3** Select **3D Pictogram** and press 

 Press  **Normal** to stop animation.

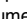• Press  to pause/resume.




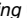
### 3D Pictogram Settings

**Display Effect** Enable or disable 3D Pictogram upon opening received messages **Default** Only Unread


**Main Menu**  **Messaging**  **Settings**  **General Settings**  **3D Pictogram**  **Display Effect**

Select **Always, Only Unread** or **Disable**  Press 

**Background Colour/Display Speed** Change background colour and animation speed **Default** White/Standard

**Main Menu**  **Messaging**  **Settings**  **General Settings**  **3D Pictogram**

### Background Colour

Select **Background Colour**  Press   Select a colour  Press 





### Display Speed

Select **Display Speed**  Press   Select speed  Press 

## Selecting Multiple Messages

Select multiple messages to protect, delete, change the status of or move all selected items simultaneously.




Main Menu ► Messaging

- 1 **Select a folder and press** 
  - When folders appear within, select one ► Press 
- 2 **Select a message and press**  **Check**
  - appears.
  - To unselect, select a message with  ► Press  **Uncheck**
- 3 **Repeat Step 2 as required**
  - To unselect all, select a message with  ► Press  **Options**
  - Select **Unselect All** ► Press 


## Switch to Read/Unread

Change received message status to read or unread.


Main Menu ► Messaging

- 1 **Select Received Msg. and press** 
  - When folders appear, select one ► Press 
- 2 **Switching Status of a Message**
  - 1 **Select a message and press**  **Options**

**Switching Status of Selected Messages**




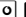



  - 1 **Select messages (perform from Step 2 above) and press**  **Options**
    - Skip ahead to Step 4.

- 3 Select **Advanced** and press 

- 4 Select **Switch To Unread** or **Switch to Read** and press 

## Replying to Messages

Main Menu ► Messaging

- 1 **Select Received Msg. and press** 
    - When folders appear, select one ► Press 
  - 2 **Select a message and press** 
    - To reply to sender only without quoting text, press  **Reply**
      - Skip ahead to Step 6
  - 3 Press  **Options**
  - 4 **Select Reply or Reply All and press** 
    - Select **Reply All** to send the same message to the sender and up to 19 recipients (To/Cc) of the original message at one time. **Reply All** may not appear for some messages.
  - 5 **Select Reply or Reply with History and press** 
    - Mail Composition window opens.
    - Select **Reply with History** to quote the original message text when replying.
  - 6 **Complete and send message (perform from Step 5 on P.15-8)**
- Tip ► For **Reply All**, your handset may be included in recipients.



## Forwarding Messages

Main Menu ► Messaging

- 1 Select **Received Msg.** and press   
 When folders appear, select one ► Press
- 2 Select a message and press
- 3 Press **Options**
- 4 Select **Forward** and press   
 Mail Composition window opens.
- 5 Select recipient field and press   
 Select Recipient window opens.
- 6 Enter recipients and press   
 To enter a recipient, perform Step 4 on P.15-7.
- 7 Press **Send**
  - Files attached to the original message are automatically attached to forwarded messages.

### Forwarding Server Mail

- Follow these steps after Step 1 above.   
 Select an MMS Notice (MMS) ► Press **Options** ►   
 Select **Remote Forward** ► Press ► Perform from Step 5 above
  - Some messages may not be forwardable.

## Linked Info


### Saving to Phone Book

Save a linked phone number/mail address from within message text or sender's/recipient's number/address to Phone Book. In message text, available numbers/addresses are selectable with .

Main Menu ► Messaging



- 1 Select **Received Msg., Unsent Messages or Sent Messages** and press   
 When folders appear, select one ► Press
- 2 Select a message and press
- 3 **Saving Sender's/Recipient's Address**
  - 1 Press **Options**
  - 2 Select **Save Address** and press
  - 3 Select a phone number or mail address and press**Saving Linked Info**
  - 1 Select a phone number or mail address and press
  - 2 Select **Save to Phone Book or Save Address** and press
- 4 Select **As New Entry** and press   
 Number or address is entered in corresponding Phone Book field. Complete other fields and save (see P.4-4).   
 To save to an existing Phone Book entry, open one ► Press ► Press **Save**

## Using Linked Info

Use linked numbers, addresses or URLs (*http://*, *https://* or *rtsp://*) within message text to place calls, send messages or access Mobile Internet sites. Available numbers/addresses/URLs are selectable with .

Main Menu ► Messaging

### 1 Select *Received Msg.*, *Unsent Messages* or *Sent Messages* and press

 When folders appear, select one ► Press 

### 2 Select a message and press

### 3 *Placing Calls*



#### 1 Select number and press

#### 2 Select *Call* or *Video Call* and press

### *Sending Messages*

#### 1 Select number or address and press

#### 2 Select *Create Message* and press

 To complete and send message, press  ► Perform from Step 5 on P.15-8

### *Accessing Mobile Internet Sites*

#### 1 Select a URL and press

#### 2 Press **Yes**

905SH connects to the Network.



- Video/sound plays for *rtsp://* URLs (see P.16-11 "Streaming").

## Protecting Messages

Protect important messages in Received Msg., Sent Messages or Templates folder from unintentional deletion. Protected messages cannot be deleted.


Main Menu ► Messaging

### 1 Select *Received Msg.*, *Templates* or *Sent Messages* and press

 When folders appear, select one ► Press 

### 2 *Protecting a Message*

#### 1 Select a message and press **Options**

- To cancel protection, select a message with .

### *Protecting Selected Messages*

#### 1 Select messages (perform from Step 2 in "Selecting Multiple Messages" on P.15-18) and press **Options**

### 3 Select *Lock* or *Unlock* and press

 appears for protected messages.

## Deleting Messages

Protected messages cannot be deleted.

### Selecting Messages to Delete

Main Menu ► Messaging

#### 1 Select *Received Msg., Drafts, Templates, Unsent Messages* or *Sent Messages* and press

When folders appear, select one ► Press

#### 2 *Deleting a Message*

##### 1 Select a message and press **Options**

##### *Deleting Selected Messages*

##### 1 Select messages (perform from Step 2 in "Selecting Multiple Messages" on P.15-18) and press **Options**

#### 3 Select *Delete* and press

#### 4 Press **Yes**

Tip ► It may take some time to delete messages.

### Deleting Server Mail

■ Select *Received Msg.* in Step 1 above and follow these steps.

Select an MMS Notice (MMS) ► Press **Options** ►

Select *Remote Delete* ► Press ► Press **Yes**

• Some messages cannot be deleted.

## Delete All

Main Menu ► Messaging

#### 1 Select *Received Msg., Drafts, Templates, Unsent Messages* or *Sent Messages* and press

When folders appear, select one ► Press

#### 2 Press **Options**

• To delete messages in Templates, Drafts or Unsent Messages, skip ahead to Step 4.

#### 3 Select *Advanced* and press

#### 4 Select *Delete All* and press

When folder contains protected messages, select *Delete All* or *Except locked msg.* ► Press


#### 5 Enter Handset Code and press

## Saving Attachments to Data Folder

Save attached images, sounds, vFiles (Phone Book/schedule entries, etc.) and other files to Data Folder.



Main Menu ► Messaging

### 1 Select *Received Msg. or Sent Messages* and press

When folders appear, select one ► Press 


### 2 Select a message and press

### 3 Select a file and press Options

To open properties, select *Details* ► Press   
 Press  to return.

### 4 Select *Save to Data Folder* and press

### 5 Enter name and press

To save without changing file name, press  and proceed to Step 6.

### 6 Select *Save here..* and press

Message window returns.

When memory is full, a confirmation appears. Delete files (see P.10-10) and try again.

To save to Memory Card, press  Options ► Select *Change to Memory Card* ► Press  ► Select *Save here..* ► Press 

## My Folders

Organise received/sent messages into My Folders. Activate Folder View beforehand (see P.15-4).

### Adding My Folders

Create up to 13 folders in addition to default Folder 1 - 7.

Main Menu ► Messaging

### 1 Select *Received Msg. or Sent Messages* and press

### 2 Press Options

### 3 Select *Create New Folder* and press

### 4 Enter name and press

Enter up to 10 characters.

## Renaming My Folders

Main Menu ► Messaging

- 1 Select **Received Msg. or Sent Messages** and press
- 2 Select a folder (**My Folder**) and press  **Options**
- 3 Select **Rename** and press 
  - If selected folder is locked, enter Handset Code ► Press
- 4 Enter name and press 
  - Enter up to 10 characters.

## Moving Messages

Incoming linked messages cannot be moved.

Main Menu ► Messaging

- 1 Select **Received Msg. or Sent Messages** and press
- 2 Select a folder and press 
  - If selected folder is locked, enter Handset Code ► Press
- 3 Select a message and press  **Options**
  - To move multiple messages at one time, perform Steps 2 - 3 in "Selecting Multiple Messages" on P.15-18, then press  **Options** and skip ahead to Step 5.
- 4 Select **Advanced** and press
- 5 Select **Move to Folder** and press
- 6 Select a folder and press

## Setting Auto Sort Keys

Set keys (sender/recipient, MMS subject or SMS message text string) by folder to sort received/sent messages automatically.

- Specify up to 20 keys per folder.
- Keys in folders with smaller numbers have higher priority.

Main Menu ► Messaging ► Settings ► My Folders

- 1 Select **Received Folder or Sent Folder** and press
- 2 Select a folder and press 
  - Auto sort keys are not available for Spam Folder (see P.15-26 "Anti Spam Measures").
  - If selected folder is locked, enter Handset Code ► Press
- 3 Select a blank entry and press 
  - To delete entries, select one ► Press  **Options** ► Select **Delete** or **Clear All** ► Press  ► Press  **Yes**
- 4 **Sort by Sender/Recipient**
  - 1 Select **Address** and press
  - 2 Enter sender/recipient (perform Step 4 on P.15-7)
    - To change entries, select one ► Press  **Options** ► Select **Replace** ► Press  ► Perform Step 4 on P.15-7
- 4 **Sort by Subject (MMS) or Text String (SMS)**
  - 1 Select **Subject** and press
  - 2 Enter text and press 
    - Enter up to 40 single-byte alphanumerics (13 single-byte katakana or 13 double-byte characters).

## Folder Lock

Lock folders to require Handset Code entry for access.

**Main Menu** ► *Messaging*

- 1** Select **Received Msg. or Sent Messages** and press **■**
- 2** Select a folder (**My Folder**) and press **☰** **Options**
- 3** Select **Lock Folder** and press **■**  
 To cancel, select **Unlock Folder** ► Press **■**
- 4** Enter Handset Code and press **■**

## Deleting Folders

Empty folder (move or delete messages) beforehand.

**Main Menu** ► *Messaging*

- 1** Select **Received Msg. or Sent Messages** and press **■**
- 2** Select a folder (**My Folder**) and press **☰** **Options**
- 3** Select **Delete** and press **■**  
 Confirmation appears when auto sort keys are set to the folder. Press **☰** **Yes** to delete folder.
- 4** Enter Handset Code and press **■**

## Additional Functions

### Speed Mail List

Save up to ten frequently used numbers/addresses here to use Speed Mail (see **P.15-25**). When creating messages, reference recipient addresses from Speed Mail List (see **P.15-7**).

**Main Menu** ► *Messaging* ► *Settings* ► *Speed Mail List*

- 1** Select a blank entry and press **■**  
 To change entries, select one ► Press **■** ► Edit number/address ► Press **■** ► Press **☰** **Yes**  
 To delete entries, select one ► Press **☰** **Options** ► Select **Delete** or **Clear All** ► Press **■** ► Press **☰** **Yes**

### 2 Phone Book

- 1** Select **Phone Book** and press **■**
- 2** Select an entry and press **■**

To search Phone Book, perform Steps 2 - 3 in "Dialling from Phone Book" on **P.4-8**.

### Direct Entry

- 1** Select **Enter Number** or **Enter Address** and press **■**
- 2** Enter recipient's Vodafone handset number or mail address and press **■**

### Adding to Speed Mail List while Creating Message

- Follow these steps after Step 3 on P.15-7.  
Select **Speed Mail List** → Press  → Select a blank entry → Press  → Press  **Yes** → Perform Step 2 in "Speed Mail List" on P.15-24

## Speed Mail

Create mail from Standby using numbers/addresses saved to Speed Mail List.

- 1 In Standby, press Speed Mail List entry number with Keypad** ( -  and )
- 2 Press**  **Mail**  
Mail Composition window opens with the recipient entered.
- 3 Press**
- 4 Complete and send message (perform from Step 5 on P.15-8)**

## Auto Resend

Activate Auto Resend to send unsent messages (failed due to out-of-range, etc.) automatically when signal returns.

- Resend is attempted up to two times for each message.
- Messages are sent in the same order they were created.
- Auto Resend is **Off** by default.

Main Menu ► Messaging ► Settings ► General Settings ► Auto Resend

### 1 Choose **On** and press

- To cancel, choose **Off** → Press 
  - Remaining failed messages will not be sent automatically.

## General Settings

Home Download Set complete MMS retrieval to auto or manual

**Default** DL only Tel. No.

Main Menu ► Messaging ► Settings ► General Settings ► Home Download

Select **Always Download**, **DL only Tel. No.** or **Always Defer** → Press

**Delivery Report**

Confirm SMS/MMS delivery (see **P.15-14**)

■ Available only when messaging Vodafone handsets.

Default Off

**Main Menu**

► *Messaging* ► *Settings* ► *General Settings* ► *Delivery Report*

**Choose *On* (request) or *Off* ► Press** ■

- If *On*, reports arrive for all messages to Vodafone handsets. To confirm the delivery of single messages, see **P.15-12**.

**Anti Spam Measures**

Filter incoming messages from numbers or addresses not saved in Phone Book

Default Off

**Main Menu**

► *Messaging* ► *Settings* ► *General Settings* ► *Anti Spam Measures*

**Enter Handset Code ► Press** ■ ► **Choose *On* or *Off* ► Press** ■

- When Anti Spam Measures is active, unsolicited messages (spam) are filtered into ***Spam Folder***.
- Handset does not respond to filtered messages. (No Ringtones, Information window, etc.)
- Anti Spam Measures also filters messages from addresses saved only in USIM Card Phone Book.

**Signature**

Save a name, etc. to insert into message text

Default Auto Insert: Off

**Main Menu**

► *Messaging* ► *Settings* ► *General Settings* ► *Signature*

**Edit**

**Select *Edit* ► Press** ■ ► **Enter/edit signature ► Press** ■

- Enter up to 100 single-byte alphanumerics (33 single-byte katakana or 33 double-byte characters).

**Auto Insert**

**Select *Auto Insert* ► Press** ■ ► **Choose *On* or *Off* ► Press** ■

- When signature is not saved, enter signature ► Press ■
- Activate Auto Insert to enter signature into message text automatically. Signature is not entered when text exceeds limit or when forwarding messages with multiple slides.

**Auto Delete**

Select whether to automatically delete oldest received messages to make room for new ones

Default Off

**Main Menu**

► *Messaging* ► *Settings* ► *General Settings* ► *Auto Delete*

**Choose *On* (delete) or *Off* ► Press** ■

- Protect important messages against deletion (see **P.15-20**).
- Oldest unprotected sent messages are always deleted when Sent memory is full.



**Message Notice**

Change/hide notice or activate/mute alert sound (double beep) for messages received during handset use

**Default** View Setting: Name, Alert Sound: On

**Main Menu**

Messaging → Settings → General Settings → Message Notice

**View Setting**

Select **View Setting** → Press  → Select **Name, Address, Name & Subject** or **Off** → Press

**Alert Sound**

Select **Alert Sound** → Press  → Choose **On** or **Off** → Press

- Alert sound is heard while streaming even if Alert Sound is **Off**.

**Scroll Unit**

Select from three scroll units

**Default** Single Line

**Main Menu**

Messaging → Settings → General Settings → Scroll Unit

Select **Single Line, Half Page** or **Whole Page** → Press

**Message Type**

Limit outgoing Message Type to SMS only, MMS only or enable both

**Default** Free

**Main Menu**

Messaging → Settings → General Settings → Message Type

Select **Free, SMS** or **MMS** → Press

**SMS Settings****Expiry Time**

Set a time limit to store sent messages at the Centre

**Default** Maximum

**Main Menu**

Messaging → Settings → SMS Settings → Expiry Time

Select **Maximum, 30 minutes, 1 hour, 6 hours, 1 day** or **1 week** → Press

- Expiry Time applies to SMS Centre Number set to **Setting1 (Default)** in Message Centre (see below).

**Message Centre**

Set SMS Centre Number

**Default** Setting1 (+819066519300)

**Main Menu**

Messaging → Settings → SMS Settings → Message Centre

**Adding Centre Number**

Select **Setting2** or **Setting3** → Press  → Enter SMS Centre Number → Press

**Editing Centre Number**

Select **Setting1 (Default), Setting2** or **Setting3** → Press  → Edit SMS Centre Number → Press

**Deleting Centre Number**

Select **Setting2** or **Setting3** → Press  **Options** → Select **Delete** → Press  → Press  **Yes**

**Setting Centre Number**

Select **Setting2** or **Setting3** → Press  **Options** → Select **Set Default** → Press

- Selected number moves to **Setting1 (Default)** and shifts the others down.

**Note** ▶ Do not change Centre Number unless instructed to do so.

## MMS Settings

**Expiry Time** Set a time limit to store sent messages at the Centre

Default Maximum

**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ Expiry Time

Select **Maximum, 30 minutes, 1 hour, 6 hours, 1 day or 1 week** ▶ Press

**Picture Appearance** Set display size for images in received messages

Default Normal

**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ Picture Appearance

Select **Normal or Fit for screen** ▶ Press

- Slides always play at Normal size.

**Send File Settings** Select whether to save newly captured images to Data Folder before attaching them to messages

Default Send & Save

**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ Send File Settings

Select **Send & Save or Send&Not Save** ▶ Press

**Auto Play File** Select whether to open/play attached images/sounds automatically

Default Pictures: On, Sounds: Off

**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ Auto Play File

### Images

Select **Pictures** ▶ Press  ▶ Choose **On (open) or Off** ▶ Press

### Sounds

Select **Sounds** ▶ Press  ▶ Choose **On (play) or Off** ▶ Press

- Images/sounds always open/play when playing slides.
- Auto Play File settings do not apply to html messages.

**SMIL Settings** Enable/disable slide creation; set the initial display duration for created slides

Default Compose SMIL: Off, Slide Duration: 03 seconds

**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ SMIL Settings

### Enabling/Disabling Slide Creation

Select **Compose SMIL** ▶ Press  ▶ Choose **On or Off** ▶ Press

### Slide Duration

Select **Slide Duration** ▶ Press  ▶ Enter time ▶ Press

**Slide Auto Play** Select whether to play received slides automatically when opened

Default Off


**Main Menu** ▶ Messaging ▶ Settings ▶ MMS Settings ▶ Slide Auto Play

Choose **On (play) or Off** ▶ Press

*Web*

# Getting Started


Access the Mobile Internet via Vodafone Web.

- Browse for image or sound files as well as information.
- Retrieve Network information (see **P.1-20**) before using Web.
- Some page content may automatically activate Network connection (📶 appears) and thus transmission fees apply. To disconnect, press .

- Tip** ▶
- Web appears as **Vodafone live!** on handset.
  - An additional contract is required to use Web service.
  - Address questions about Vodafone Web to Vodafone Customer Centre, General Information (see **P.20-26**).

## Web Content

Sample Web information page:

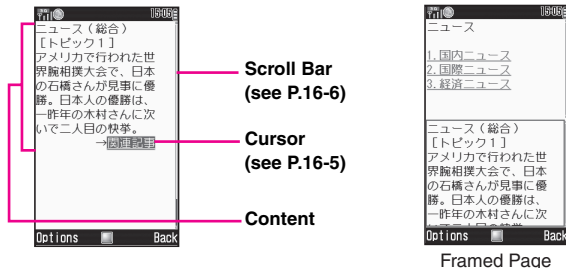

**Note** ▶ Requested pages may not appear due to transmission conditions/Server status.

## Cache Memory

- Cache Memory temporarily holds copies of retrieved pages; when full, oldest are deleted to make room for new ones.
- Previously viewed pages may load from Cache Memory.
- Cached items with expiry dates are deleted upon expiry.

## ■ SSL

Secure Sockets Layer (SSL) is an encryption protocol for secure Internet transmissions of important/sensitive information such as credit card numbers. Electronic certificates are saved on handset (see **P.16-15** "Root Certificates").

### Disclaimer

- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. Vodafone, VeriSign Japan, Baltimore Technologies Japan, Entrust Japan, GeoTrust Japan, RSA Security and SECOM Trust Systems cannot be held liable for any damages associated with the use of SSL.

# Using Web



## Opening Vodafone Web Menu

Select topics from Vodafone Web Menu to access sites.

**Main Menu** ▶ *Vodafone live!*

### 1 Select *Vodafone live!* and press



Vodafone Web Main Menu appears.

- Shortcut: In Standby, press  
- Vodafone Web Main Menu is subject to change.

### 2 Highlight a menu item

### 3 Press

905SH connects to the Network.




- 905SH remains connected to the Network even if it is closed.  
 To disconnect, press .

### 4 Repeat Steps 2 - 3 to open additional links

 Basic Operations: see **P.16-5**

### 5 Press then **Yes** to exit

### Page Jump

- Press  **Back** to see the previous page.
  - To return to the initial page, press  **Options** ▶ Select **Forward** ▶ Press 

### Jump to Page Top or Bottom

- Press **Options** → Select **Advanced** → Press → Select **Jump to Top** or **Jump to Bottom** → Press

### Opening Secure Pages

- **Entering secure area.** appears for secure pages. Press to open the secure page.
  - appears for secure connections.
  - To disable confirmations, see **P.16-15** "Secure Prompt".

### When Authentication is Required

- Some pages require user authentication for access.  
If requested, enter user ID or password → Press → Press **Send**

### Help

- Follow these steps to view a summary of key assignments.  
Press **Options** → Select **Help** → Press → Press to return.

**Tip** ▶ Previously retrieved pages may open directly from Cache Memory without connecting to the Network.

## Using Access History

Open previously viewed pages. Access History stores up to 300 pages; when full, oldest are deleted to make room for new ones.

**Main Menu** ▶ *Vodafone live!* → **Access History**

### 1 Select an item and press

- To open properties, select an item → Press **Options** → Select **Details** → Press
  - Press to return.
- To send URLs via SMS/MMS, select an item → Press **Options** → Select **Send** → Press → Complete and send message (Perform from Step 3 on **P.15-7**.)

### 2 Press then **Yes** to exit

#### Sorting Items

- Open Access History and follow these steps.  
Press **Options** → Select **Sort** → Press → Select **By Domain** or **By Date** → Press

#### Deleting Access History

- Open Access History and follow these steps.  
Select an item → Press **Options** → Select **Delete** → Press → Press **Yes**
  - To delete all, press **Options** → Select **Delete All** → Press → Enter Handset Code → Press → Press **Yes**

## Entering URLs Directly

Enter URLs directly to access Mobile Internet sites.

To use Access History, see **P.16-4**.

**Main Menu** ▶ *Vodafone live!*

**1** Select **Enter URL** and press **■**

**2** Enter URL and press **■**

Information appears.

▶ To select from previously entered URLs, press **☰ Options** → Select **Enter URL Logs** → Press **■** → Select a URL → Press **■**

- Up to 10 entries are saved. When full, oldest entries are deleted to make room for new ones.

**3** Press **⏪** then **☑ Yes** to exit


**Note** ▶ Some sites may not be accessible via 905SH; site images and layouts, etc. may differ from those viewed via PC.

## Basic Operations

### Using Cursor

Use cursor to select underlined menu items.

Use **⏴** to scroll through items.

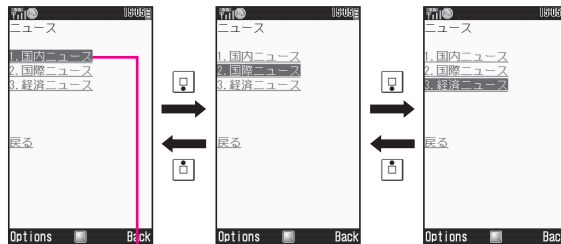


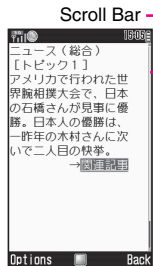
Cursor

Use **⏴** to move left and right when multiple items are listed in one row. Cursor does not appear for unselectable items.



## Scrolling Pages


### Non-Framed Pages

Scroll bar appears on the right when page content continues beyond view. Slider indicates current page position. Use  to scroll; slider moves accordingly.



### Framed Pages

Press  to select other frames. Use  to scroll.

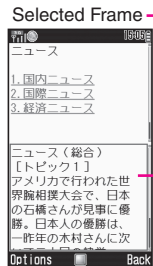

### Viewing Single Frame

Open a framed page and follow these steps.


Press  to select a frame ➔ Press  Options ➔

Select **Open This Frame** ➔ Press 




Press  to return.

## Text Entry & Item Selection

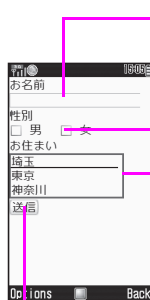
Enter text or select items to send information.



### Text Entry Field



Highlight  and press . Text entry window opens. Enter text and press .

### Check-box

Highlight  (check-box) and press . The box changes to , indicating that the item is selected.



In addition to ,  may also appear as selection indicators.
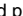
### Menu List

Highlight the field and press  to select an item. Some menu lists support multiple selection; select items and press  to exit list.

### Command Button

Use to send, reset, etc.

Highlight  and press  to execute the indicated command.



### Input Memory

- Entered text (except Security Code) is saved to Input Memory. Use saved text in other applications.
- Up to 20 entries are saved. When full, oldest entries are deleted to make room for new ones.

### Using Input Memory

- In a text entry window, press **Options** ➔ **Select Advanced** ➔ **Press** ➔ **Select Input Memory** ➔ **Press** ➔ **Select text** ➔ **Press**

## Advanced Features

### Bookmarks & Saved Pages

Bookmark sites or save page content to Saved Pages.

Item	Description
Bookmarks	Save links to Mobile Internet sites. 905SH connects to the Network to access the site. <ul style="list-style-type: none"><li>• Create folders to organise Bookmarks.</li></ul>
Saved Pages	Save page content; 905SH opens saved pages without connecting to the Network. <ul style="list-style-type: none"><li>• Save frequently used items to Saved Pages.</li></ul>

### Space Town

- **Sharp Space Town** is bookmarked by default. Space Town (Japanese Only) is dedicated to Vodafone handsets manufactured by Sharp. Visit Space Town to download Wallpaper, games, Dictionary files, etc.

### Saving Bookmarks & Pages

**Main Menu** ➔ *Vodafone live!* ➔ *Vodafone live!* ➔ *Open a page*

#### 1 Press **Options**

- **Bookmark** or **Save This Page** appears only for savable pages.

#### 2 **Bookmarks**

- 1 Select **Bookmark** and press
- 2 Select **Add This Page** and press
- 3 Enter title and press

#### **Saved Pages**

- 1 Select **Save This Page** and press
- 2 Enter title and press

- If the same title exists, **Name already exists. Replace page?** appears. To save with another title, press **No** ➔ **Change title** ➔ **Press** ➔ To overwrite the page, press **Yes**.

### Saving URLs to Bookmarks






- Enter URLs directly to save site references to Bookmarks.  
**Press** ➔ **Select Vodafone live!** ➔ **Press** ➔ **Select Bookmarks** ➔ **Press** ➔ **Press** **Options** ➔ **Select Add New Bookmark** ➔ **Press** ➔ **Enter URL** ➔ **Press** ➔ **Enter title** ➔ **Press**


## Opening Bookmarks & Saved Pages

Main Menu ▶ Vodafone live!

### 1 Bookmarks




#### 1 Select **Bookmarks** and press

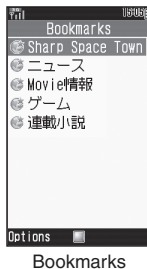
- To send URLs via MMS/SMS, select a title → Press  **Options** → Select **Send** → Press  → Complete and send message (Perform from Step 3 on P.15-7.)
- To open properties, select a title → Press  **Options** → Select **Details** → Press  → Press  to exit.



### Saved Pages

#### 1 Select **Saved Pages** and press

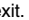- To open properties, select a title → Press  **Options** → Select **Details** → Press  → Press  to exit.

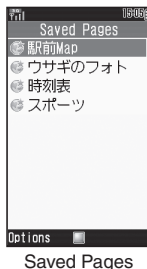

### 2 Select a title and press

#### Opening Bookmarks Online

- Press  **Options** → Select **Bookmark** → Press  → Select **Open Page** → Press  → Select a title → Press 

## Editing Bookmarks & Saved Pages

Open Bookmarks or Saved Pages first (perform Step 1 on the left).

### Bookmarks

Edit Edit titles or URLs

#### Titles

- Select a title → Press  **Options** → Select **Edit** → Press  → Select **Title:** → Press  → Enter title → Press  → Press  **Save**

#### URLS

- Select a title → Press  **Options** → Select **Edit** → Press  → Select **URL:** → Press  → Enter URL → Press  → Press  **Save**

## Bookmarks Folder

Sort Bookmarks into folders

### Creating a Folder

Press **Options** → Select *Create Folder* → Press → Enter a name → Press

### Moving to Folder

Select a title → Press **Options** → Select *Move* → Press → Press **Folder** → Select a folder → Press → Press

■ To move back from folders, select a title → Press **Options** → Select *Move* → Press → Press **Parent** → Press

### Changing Folder Names

Select a folder → Press **Options** → Select *Rename* → Press → Enter name → Press

## ■ Saved Pages

### Rename

Change titles

Select a title → Press **Options** → Select *Rename* → Press → Enter title → Press

## ■ Bookmarks & Saved Pages

### Move

Change the order of entries

Select a title → Press **Options** → Select *Move* → Press → Use to select target location → Press

## Delete

Delete entries

Select a title or folder → Press **Options** → Select *Delete* → Press → Press **Yes** ■ To delete all titles/folders, press **Options** → Select *Delete All* → Press → Enter Handset Code → Press → Press **Yes**

## Saving to Data Folder

Save images, sounds, etc. to Data Folder.

**Main Menu** ► *Vodafone live!* ► *Vodafone live!* ► *Open a page*

**1** Press **Options**

**2** Select *Handle File(s)* and press

• If no other files are contained on the page, skip ahead to Step 4.

**3** Select a file and press

■ To open files, select *View* or *Play* → Press

■ Press to return.

■ To open properties, select *Details* → Press

■ Press to exit.

**4** Select *Save* and press

Data Folder opens.



■ To switch between 905SH and Memory Card, press **Options** → Select *Change to Phone* or *Change to Memory Card* → Press

■ To save to a sub folder, select folder → Press

## 5 Press

File is saved to Data Folder.

- Handle File(s) menu may return with available file functions.
- When memory is full, notification appears. Delete files and try again (see P.10-10).

 If the same file name exists, select **Rename**, **Overwrite** or **Cancel** → Press 

### Selecting Linked Files

 Confirmation appears. To download files, press  **Yes**.

## Using Linked Info

Use linked numbers (**TEL:**), addresses or URLs (**http://**, **https://** or **rtsp://**) to place calls, send messages or access Mobile Internet sites.

- Available only when number, address or URL is underlined.
- Underlined words may serve as a linked number, address or URL.

**Main Menu**  *Vodafone live!*

## 1 Open a page containing a phone number, mail address or URL

## 2 Dialling Numbers

**1** Highlight number and press 



**2** Select **Call** or **Video Call** and press 

905SH dials the number.

### Sending Messages

**1** Highlight number or mail address and press 

**2** Select **Create Message** and press 

 To complete and send message, press  → Perform from Step 5 on P.15-8

### Accessing Mobile Internet Sites


**1** Highlight a URL and press 

905SH connects to the Network.

- Video/sound plays for **rtsp://**URLs.


### Saving to Phone Book


 To save as new entry, open page and follow these steps.


Select a phone number or mail address → Press 

→ Select **Save to Phone Book** → Press  →

Select **As New Entry** → Press 

 Phone Book Details (see P.4-4) appears. Complete other fields and save.

 To save as new item, open page and follow these steps.

Select a phone number or mail address → Press 

→ Select **Save to Phone Book** → Press  →

Select an entry → Press  → Press  **Save**

# Streaming

Enjoy audiovisual media while it downloads.


- Only compatible files support streaming.
- Downloaded content cannot be saved.

**Main Menu** ▶ *Vodafone live!* ▶ *Vodafone live!* ▶ *Open a page*

## 1 Select a file and press

Streaming begins. (Playing Music/Video: see P.9-9, P.9-12)

 To pause a stream, press .






- Press  to resume.
- Streaming requires a continuous Network connection. (Transmission fees apply.)

**Note** ▶ 





- Closing 905SH pauses an active stream.
- Paused streams stop after five minutes of inactivity, and **Reconnect?** appears.

**Tip** ▶ Up to 10 previously accessed URLs are saved. When full, oldest URLs are deleted to make room for new ones.




## Changing Display Size

- Press  to toggle Display Size for current stream.
  - Display Size toggles as follows: **Enlarge** → **Full Screen** (no indicators) → **Full Screen** (with indicators) → **Normal**
  - Display Size cannot be changed while stream is paused.
- Display Size may not change depending on file/stream.
- Change Display Size setting for streaming while streaming. Press  **Options** ▶ **Select Settings** ▶ Press  ▶ **Select Display Size** ▶ Press  ▶ **Select Normal, Enlarge or Full Screen** ▶ Press 

## Backlight

- Adjust streaming Backlight while streaming. Press  **Options** ▶ **Select Settings** ▶ Press  ▶ **Select Backlight** ▶ Press  ▶ **Select Always On, Always Off or Normal Settings** ▶ Press 
- Selecting **Normal Settings** applies Display Backlight setting (see P.11-8).

## Incoming Calls/Mail while Streaming

- Streaming stops for incoming calls. Press  to answer calls.
  - To reject calls, press  **Options** ▶ **Select Reject Call** ▶ Press 
- After the call, **Reconnect?** appears.
- A double beep sounds for incoming mail even if Sound Alert for Message Notice (see P.15-27) is Off.

**Streaming from Media Player** Access Mobile Internet sites from Media Player

**Main Menu** ▶ *Media Player* ▶ *Streaming*

## Resuming the File Played Last

Select **Last Played** ▶ Press **■**

- File plays from where it stopped.

## Entering URLs

Select **Enter URL** ▶ Press **■** ▶ Enter URL ▶ Press **■**

- Enter up to 1,024 single-byte alphanumerics.

## Using Bookmarks

Select **Bookmarks** ▶ Press **■** ▶ Select an entry ▶ Press **■**

## Using Access History

Select **History** ▶ Press **■** ▶ Select an entry ▶ Press **■**

- To open properties, select **History** ▶ Press **■** ▶ Select an entry ▶ Press **■** **Options** ▶ Select **Detail** ▶ Press **■** ▶ Press **■** to exit.
- To edit and access URLs, select **History** ▶ Press **■** ▶ Select an entry ▶ Press **■** **Options** ▶ Select **Edit URL** ▶ Press **■** ▶ Edit URL ▶ Press **■**

**Tip** ▶ Select **Settings** in Streaming menu and press **■** to set Backlight and Display Size (see P.16-11).

# Additional Functions

## Sub Menu Settings

- Access Options menu settings from an open page.

**Change View** Change page size

Press **■** **Options** ▶ Select **Change View** ▶ Press **■** ▶ Select **Fit for screen or Original Size** ▶ Press **■**

**Copy Text** Copy text

Press **■** **Options** ▶ Select **Copy Text** ▶ Press **■** ▶ Perform from Step 3 in "Copy/Cut & Paste" on P.3-13

**Reload** Update page content

Press **■** **Options** ▶ Select **Reload** ▶ Press **■**

- Reload simultaneously updates the corresponding content saved in Saved Pages.

**Enter URL** Enter URL directly to access Mobile Internet sites

Press **■** **Options** ▶ Select **Enter URL** ▶ Press **■** ▶ Perform from Step 2 in "Entering URLs Directly" on P.16-5

**Home** Open Vodafone Web Main Menu

Press **■** **Options** ▶ Select **Home** ▶ Press **■**

**Access History** Previously visited Mobile Internet site links

Press **■** **Options** ▶ Select **Access History** ▶ Press **■** ▶ Perform from Step 1 in "Using Access History" on P.16-4

**Send**

Send URLs via SMS/MMS

Press **Options** → **Select Advanced** → Press **Enter** →  
**Select Send** → Press **Enter** → **Complete and send message (Perform from Step 3 on P.15-7.)**

**Properties**

Open information details

Press **Options** → **Select Advanced** → Press **Enter** →  
**Select Details** → Press **Enter**  
 Press **Enter** to return.

**Delete Browser Data**

Clear Cache, Cookies, Access History or Authentication Information

Press **Options** → **Select Advanced** → Press **Enter** →  
**Select Delete Browser Data** → Press **Enter** → **Select Clear Cache, Clear Cookies, Clear Histories or Clear Auth. Info.** → Press **Enter** → Press **Yes**

- For **Clear Auth. Info.**, enter Handset Code → Press **Enter**
- Deleted Items:

<b>Cache</b>	Temporarily saved information in Cache Memory
<b>Cookies</b>	Information sent by a server for user identification
<b>Histories</b>	URLs of previously accessed Mobile Internet sites
<b>Auth. Info.</b>	User ID or password previously entered for authentication

**Search**

Search current page

Press **Options** → **Select Advanced** → Press **Enter** →  
**Select Search** → Press **Enter** → **Enter text to search** →  
 Press **Enter**

- First search result is highlighted; press **Enter** to jump to next.  
 To cancel, press **Cancel**.

**Current Cert.**

View electronic certificates for a secure page

Press **Options** → **Select Browser Settings** → Press **Enter** →  
**Select Security** → Press **Enter** → **Select Current Cert.** → Press **Enter**

- To open certificates, select one → Press **Enter**
- Press **Back** to return.

**Uploading Files**

Upload images or other Data Folder files to the Centre via Mobile Internet sites

■ Open compatible site first.  
**Select Browse...** → Press **Enter** → **Select a file** → Press **Enter** →  
**Select Send** → Press **Enter**

- Example above is for reference only. Follow site instructions for specific procedure.
- Files are uploadable only via pages supporting uploads.

## Basic Settings

### Font Size

Change character size

Default Standard

Main Menu ► Vodafone live! ► Browser Settings ► Font Size

Select a size ► Press

### Scroll Unit

Select from three scroll units

Default Single Line

Main Menu ► Vodafone live! ► Browser Settings ► Scroll Unit

Select a unit ► Press

### Char-code

Change encoding when text appears distorted

Default Automatic

Main Menu ► Vodafone live! ► Browser Settings ► Char-code

Select an option ► Press

- Use Automatic whenever possible.

### Send Referrer

Select whether or not to allow access to referrer information

Default Allow

Main Menu ► Vodafone live! ► Browser Settings ► Send Referrer

Select Allow or Do not allow ► Press

### Cookies

Enable or disable cookies (see P.16-13)

Default Enabled

Main Menu ► Vodafone live! ► Browser Settings ► Cookies

Select Enabled, Disabled or Confirm ► Press

### Downloads

Select whether to download images and sounds on Mobile Internet sites automatically or to open text information only

Default Show images/Play sounds

Main Menu ► Vodafone live! ► Browser Settings ► Downloads

### Images

Select Images ► Press  ► Select Show images or Do not show ► Press

### Sounds

Select Sounds ► Press  ► Select Play sounds or Do not play ► Press

### Manufacture Number

Select whether or not to send handset manufacture number automatically for authentication

Default Off

Main Menu ► Vodafone live! ► Browser Settings ► Manufacture Number

Choose On (send) or Off ► Press

### Location

Choose whether or not to send location information automatically

Default Confirm

Main Menu ► Vodafone live! ► Browser Settings ► Location

Enter Handset Code ► Press  ► Select Confirm, Send or Not Send ► Press

- When Datum On/Off (see P.12-15) is Off, location information is not sent.



## Download to

Select whether to save downloaded files on handset or Memory Card

Default: Phone Preferred

**Main Menu** ▶ Vodafone live! ▶ Browser Settings ▶ Download to

Select **Phone Preferred** or **Prefer Card** ▶ Press

- If selected memory is low, downloaded files cannot be saved. Delete files and try again.
- Saving to Memory Card is prohibited depending on the file; such files are saved to handset.

## Security

### Secure Prompt

Show or hide confirmations before entering and exiting secure pages (see P.16-4)

Default: Show

**Main Menu** ▶ Vodafone live! ▶ Browser Settings ▶ Security ▶ Secure Prompt

Select **Show** or **Do not show** ▶ Press

### Root Certificates/ Current Cert.

Open electronic certificates issued by Certificate Authorities saved on handset

**Main Menu** ▶ Vodafone live! ▶ Browser Settings ▶ Security

Select **Root Certificates (preloaded)** or **Current Cert. (saved from secure page)** ▶ Press

- ▶ To open certificates, select one ▶ Press
- ▶ Press  to return.

## Authentication

Previously entered user ID or password is entered automatically for authentication

Default: Per browsing

**Main Menu** ▶ Vodafone live! ▶ Browser Settings ▶ Security ▶ Authentication

Select **Per browsing, On (always authenticate)** or **Off** ▶ Press

- For **Per browsing**, entered user ID or password remains for automatic authentication and is deleted upon exiting Web.

**Tip** ▶ Saved user ID or password is applicable to Basic/Digest authentication. Some sites may employ other HTTP authentication schemes.

## *V-applications*

# Getting Started

Download V-applications, including games.

- Download and use 905SH compatible V-applications.
- Use wide-view V-applications in Cycloid position.
- 905SH contains 16 default V-Applications:  
**2006 Real Soccer Demo\***, **ワザヘンLIVE\***, **頭文字D3体験版\***, **NINJA WARRIORS\***, **ミッサーフィン**, **対戦バクマン/試**, **SuperボンバーマンBT体験版**, **EX野球ミラクル対戦無料版**, **最強!エアホッケー体験**, **対戦!ゲームパック**, **Asphalt2Demo**, **ワザヘン!**, **Arkanoid-LINK-**, **ちかチャット**, **TVnano番組表** and **V-kara player 2**.

\*Wide-view V-application.

- **青春アミーゴ** is saved in Data Folder (Ring Songs-Tones) for V-kara player 2.

License: T-0640119 

- Tip** ▶
- Separate subscriptions are required for V-applications downloaded via Web.
  - Address questions about V-applications to Vodafone Customer Centre, General Information (see **P.20-26**).
  - Some preloaded V-applications can be deleted (see **P.17-6**). To restore them, perform Memory All Clear (see **P.17-10**).

## IC-appli

- IC-appli, a V-application required to use Vodafone live! FeliCa, is preloaded on handset (see **P.19-2**). IC-appli settings and usage patterns resemble those of other V-applications.

## Network V-applications




- Network V-applications require a Network connection.
  - Before using a Network V-application, a message appears indicating that a Network connection is required. To skip this confirmation, see **P.17-8**.



## V-appli Library

Open V-appli Library to access V-applications saved on handset or Memory Card.

Main Menu ▶ V-appli

### 1 Select V-appli and press

- To switch between 905SH and Memory Card, press  **Options**
  - ➔ Select **Change to Phone** or **Change to Memory Card** ➔ Press 
- To open Java™ Licence Information, select **Information** ➔ Press 

- Tip** ▶ When  is pressed in Standby with a V-application paused, **Application is suspended.** appears. Select **End** and press  to open V-appli Library.


## Memory Status

- Press  ➔ Select **Data Folder** ➔ Press  ➔ Select **Memory Status** ➔ Press  ➔ Select **Phone Memory or Memory Card** ➔ Press 

## Remote Control

Use handset to control a TV, VCR, etc. (A compatible V-Application is required.)

- Align Infrared Port (right) with infrared port of target device.
- Maximum usage distance is approximately five metres (with a fully charged battery).
- Remote control operation may not be possible depending on ambient light level, obstacles, etc.

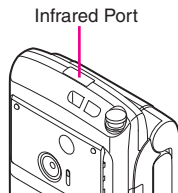

## V-applications on Memory Card

Synchronise Memory Cards used on other Vodafone handsets, PCs and other devices to update V-appli Library. Retrieve Network information beforehand (see **P.1-20**).

Main Menu ► V-appli ► Settings ► Synchronisation

1 Press **Yes**

Tip ► It may take some time to update V-appli Library depending on the number of files saved, etc.

## Video Output

Connect 905SH to a TV, VCR, etc. with the supplied Video Cable to view V-applications on the target device.

- Use Video Output with compatible V-applications; confirm compatibility in **Video out** in properties (see **P.17-6**).
- Before performing the steps below, connect Video Cable to 905SH and device (see **P.11-10**).

Main Menu ► V-appli ► V-appli

1 Select a V-application and press

2 Press

V-application appears on the device.

- Press to toggle display between the device and handset.

Note ►

- For eye safety, avoid playing V-applications on an external device for long periods.
- V-applications started from Screensaver do not support Video Output.

## Downloading V-applications

- Retrieve Network information beforehand (see **P.1-20**).
- Some V-applications can be downloaded to Memory Cards.
- Make sure signal is strong.

**Main Menu** ▶ *V-appli* ▶ *V-appli* ▶ *Download*

### 1 Open a Mobile Internet site offering V-applications

### 2 Select a V-application and press

Properties appear.

- When a V-application is paused (⏸ appears in grey), press  **Yes**.

### 3 Press

Download starts.

- Download may take time.

- Press  to cancel.

### 4 Downloaded V-application is automatically saved and a confirmation appears

- When you download a new version of V-application set as Screensaver (see **P.17-7**), Screensaver may be cancelled.

### 5 Press **Yes**


Web closes and V-appli Library opens.

- To return to the site, press  **No**.
- Starting V-applications: see **P.17-5**

**Tip** ▶ Some V-applications require Centre Access Code or permission settings. Follow onscreen prompts to use the V-application (may only be available in Japanese).

## Properties

Check V-application properties before completing download.

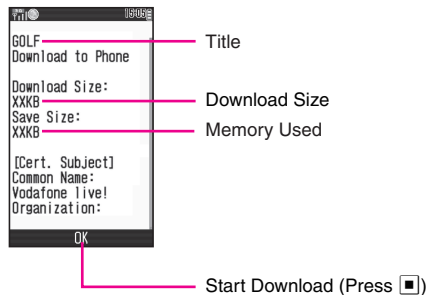

# Using V-applications

## Starting V-applications

Main Menu ▶ V-appli

### 1 Select *V-appli* and press

V-appli Library opens (see P.17-2).

### 2 Select a V-application and press

V-application starts (⏸ appears).

- For operations, refer to the source Mobile Internet site, etc.
- If the V-application cannot be used, V-appli Library returns.

**Tip ▶** V-applications automatically pause for incoming transmissions. To set 905SH to ignore them, see P.17-9 "Calls & Alarms".

## Starting Network V-applications

- If a Network connection confirmation appears after Step 2 above:

**Choose Yes or No ▶ Press ▶ V-application starts**

- To skip confirmation, select **Blanket** for Network Access (see P.17-8 "Setting Permissions").

- Some V-applications require permission settings (see P.17-8).

## Exit, Pause & Resume

### Exiting or Pausing V-applications

#### 1 Press while using a V-application

#### 2 *Exiting V-application*

##### 1 Select *End* and press

- ⏸ (grey) disappears and V-appli Library returns.

#### *Pausing V-application*

##### 1 Select *Suspend* and press

Handset returns to Standby.

- V-application resumes from pause point.

### Resuming V-applications

#### 1 While a V-application is paused, press in Standby

- ⏸ (grey) appears while a V-application is paused.

#### 2 Select *Resume* and press



To end the V-application, select **End** ▶ Press

To open Main Menu and keep the V-application paused, select **Cancel** ▶ Press



# Managing V-applications

## Opening V-application Properties

Main Menu ► V-appli ► V-appli

- 1 Select a V-application and press  **Options**
- 2 Select **Information** and press 



<b>Title</b>	Title of the V-application
<b>Vendor</b>	Name of the distributor (or supplier/manufacturer)
<b>Version</b>	Version of the V-application
<b>Description</b>	Description of the V-application
<b>Save Size</b>	Downloaded file size
<b>Recorded</b>	Record game scores, etc. up to this size
<b>Screensaver</b>	Compatibility with Screensaver
<b>Profile</b>	Versions: VSCL (Overseas)/JSCL (Domestic)
<b>Link</b>	Link to source Mobile Internet site
<b>Video out</b>	Compatibility with Video Output
<b>Certification</b>	Trusted/Untrusted
<b>Cert. Subject</b>	Authority of Certification (Common Name, Country and Organization)
<b>Push</b>	Compatibility with automatic Network connection
<b>IC Support</b>	Compatibility with IC-appli
<b>Karaoke Support</b>	Compatibility with Karaoke
<b>Comic Support</b>	Compatibility with comic viewing




- Press  to scroll down.
- Press  to return.

## Moving V-applications to Memory Card

To move a V-application set as Screensaver, cancel Screensaver first.

Main Menu ► V-appli ► V-appli

- 1 Select a V-application and press  **Options**
- 2 Select **Move to Card** and press 



- When an older version of the V-application is saved, press  **Yes** or  **No**.
  - Press  **Yes** to overwrite.

- Note** ►
- V-applications cannot be moved to Memory Card when the same V-application is already saved or when Memory Card memory is low.
  - Some V-applications cannot be moved to Memory Card.

## Deleting V-applications

To delete a V-application set as Screensaver, cancel Screensaver first.

Main Menu ► V-appli ► V-appli

- 1 Select a V-application and press  **Options**
- 2 Select **Delete** and press 
- 3 Press  **Yes**
  - Handset Code may be required.

- Tip** ► Some preloaded V-applications can be deleted. To restore them, perform Memory All Clear (see P.17-10).

## Screensaver

Set a V-application to activate when handset enters Standby.

### Activating/Canceling Screensaver

Screensaver is **Off** by default.

Main Menu ▶ V-appli ▶ Settings ▶ Screensaver ▶ Switch On/Off

#### 1 Choose **On** and press

To cancel, choose **Off** ▶ Press

### Setting Screensaver

- Only one compatible V-application can be set for Screensaver.
- Screensaver cannot be set when another V-application is paused (⏸ appears in grey).
- IC-appli and V-applications on Memory Card cannot be set.

Main Menu ▶ V-appli ▶ V-appli

#### 1 Select a V-application and press Options

#### 2 Select **Set as Screensaver** and press

- **Set as Screensaver** appears for compatible V-applications.

### Activation Time

- Enter time delay before Screensaver activates in Standby.  
Press  ▶ Select **V-appli** ▶ Press  ▶ Select **Settings** ▶ Press  ▶ Select **Screensaver** ▶ Press  ▶ Select **Activation Time** ▶ Press  ▶ Enter time (01-10 seconds) ▶ Press
- Activation Time is **3** seconds by default.

### Suspend Time

- Set run time after which Screensaver pauses.  
Press  ▶ Select **V-appli** ▶ Press  ▶ Select **Settings** ▶ Press  ▶ Select **Screensaver** ▶ Press  ▶ Select **Suspend Time** ▶ Press  ▶ Select time ▶ Press
- Suspend time is **Off** by default.

- Note** ▶
- Screensaver does not start when Headphones are connected.
  - Connecting Headphones (with Memory Card inserted) cancels an active Screensaver.
  - Screensaver may not start when an external device (handsfree kit, etc.) is connected to handset.
  - Screensaver which responds to incoming transmissions may cancel out selected Mode Settings profile.



## Setting Permissions





Customise the method of confirmation, etc. for each V-application operation below.

- Settings:

<b>Phone Call</b>	Place Voice Calls
<b>Network Access</b>	Connect to the Network
<b>Messaging</b>	Send/receive messages
<b>Autorun</b>	Execute Autorun files
<b>Bluetooth Conn.</b>	Connect via Bluetooth®
<b>Local Connection</b>	Connect to other devices
<b>Read User Data</b>	Access Phone Book, Calendar, etc.
<b>Write User Data</b>	Edit Phone Book, Calendar, etc.
<b>Use Multimedia</b>	Use Media Player
<b>Location Access</b>	Send location information

- These settings are also available for V-applications on Memory Card.
- Permission settings may not be available for some V-applications.

**Main Menu** ▶ V-appli ▶ V-appli

- 1 Select a V-application and press  **Options**
- 2 Select **Permission** and press 
- 3 Select an item and press 
- 4 Select an option and press 

- Some options may not appear.

<b>Session</b>	Confirmation appears every time the V-application starts
<b>Ask Once</b>	Confirmation appears before the specific operation
<b>Blanket</b>	No confirmation
<b>No</b>	Reject the operation

## Resetting Permission Settings

- Follow these steps after Step 2 on the left.  
Select **Reset** ▶ **Press**  ▶ **Press**  **Yes**

## V-application Operational Settings

**Application Volume** Adjust the volume of V-application sounds  
Default: Level 3

**Main Menu** ▶ V-appli ▶ Settings ▶ Application Volume

Use  to adjust level ▶ **Press** 

- In Manner mode, vibration set in Manner settings applies.

**Backlight** Select a Backlight status for V-applications  
Default: Normal Settings

**Main Menu** ▶ V-appli ▶ Settings ▶ Backlight ▶ Switch On/Off

Select **Always On**, **Always Off** or **Normal Settings** ▶ **Press** 

<b>Always On</b>	Backlight remains on while V-application runs
<b>Always Off</b>	Backlight remains off while V-application runs
<b>Normal Settings</b>	Applies Display Backlight setting (see P.11-8)

- Note** ▶ Brightness for V-applications is Level 3 even if Display Backlight (see P.11-8) is **Auto** and V-application Backlight is **Normal Settings**.

**Blink**

When activated, Backlight flashes while compatible V-applications play

Default On

**Main Menu** ▶ V-appli ▶ Settings ▶ Backlight ▶ Blink

Choose **On (activate) or Off** ▶ Press

**Vibration**

When activated, handset vibrates while compatible V-applications play

Default On

**Main Menu** ▶ V-appli ▶ Settings ▶ Vibration

Choose **On (activate) or Off** ▶ Press

- In Manner mode, vibration set in Manner settings applies.

**Calls & Alarms**

Select a handset response to incoming calls, etc. while a V-application is active

Default Call/Message/Alarm/Start Priority

**Main Menu** ▶ V-appli ▶ Settings ▶ Calls & Alarms

Select from **Voice Call to Start Demand** ▶ Press

▶ Select a handset response ▶ Press

<b>Call/Message/Alarm/Start Priority</b>	V-application pauses for incoming call/mail, Alarm or V-appli Request
<b>Call/Message/Alarm/Start Notice</b>	A message appears for incoming calls, mail, etc. For example, <b>090392XXXX1</b> appears. Press <input type="checkbox"/> to answer the call.

- Regardless of the setting, a message appears for V-applications started from Screensaver.

**Surround**

Set surround effect for V-applications

Default On

**Main Menu** ▶ V-appli ▶ Settings ▶ Surround

Choose **On or Off** ▶ Press

**Reset**

**Set to Default** Reset V-application settings

**Main Menu** ▶ V-appli ▶ Settings ▶ Set to Default

Enter Handset Code ▶ Press  ▶ Press  **Yes**

- The settings affected by Set to Default:

<b>Application Volume</b>		Level 3
<b>Backlight</b>	<b>Switch On/Off</b>	Normal Settings
	<b>Blink</b>	On
<b>Vibration</b>		On
<b>Calls &amp; Alarms</b>	<b>Voice Call</b>	Call Priority
	<b>Video Call</b>	Call Priority
	<b>Incoming Message</b>	Message Priority
	<b>Alarm</b>	Alarm Priority
	<b>Start Demand</b>	Start Priority
<b>Screensaver</b>	<b>Switch On/Off</b>	Off
	<b>Activation Time</b>	03 seconds
	<b>Suspend Time</b>	Off
<b>Surround</b>		On

Memory All  
Clear

Restore V-appli Library to default setting

Main Menu ► V-appli ► Settings ► Memory All Clear

Enter Handset Code ► Press  ► Press  Yes

- Note** ►
- Memory All Clear deletes downloaded V-applications, IC-appli and NAVI-appli. However, Memory All Clear is disabled if IC Card data remains. Delete IC Card data beforehand (see **P.19-2**).
  - Memory All Clear resets Near chat application password and thus cancels Near chat access restriction.
  - Preloaded V-applications are restored.

*Entertainment*

# Vodafone live! CAST (Japanese Only)

## Basics

Subscribe to Japanese mobile periodicals that download to 905SH automatically overnight.

- A separate subscription and registration are required.
- Retrieve Network information (see **P.1-20**) before using Vodafone live! CAST.

## Vodafone live! CAST Content

Sample Vodafone live! CAST information page:



Content

Cursor (see P.16-5)

## Service Registration & Content Subscription

Complete service registration to use Vodafone live! CAST, then subscribe to content.

Registration and subscription require Mobile Internet use (connection fees apply). Confirm signal strength beforehand.

**Main Menu** ▶ Entertainment ▶ Cast

### 1 Select **Join/CancelService** and press

905SH connects to the Network and service registration page opens.

- Follow onscreen instructions.

## Opening Received Information

### Newly Arrived Information


### 1 Delivery Notice appears and Information window opens ( appears) for new information

- If closed, open 905SH for new information to see Delivery Notice appear and Information window open.

### 2 Select **Cast** and press

Information appears.

- Follow onscreen instructions.
- Information handling is similar to that of Web.
  - Using Cursor: see **P.16-5**
  - Saving to Data Folder: see **P.16-9**
  - Using Linked Info: see **P.16-10**

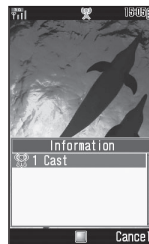

Information

### 3 Press to exit

#### Requesting Re-Delivery

■ If information delivery fails, follow these steps to request re-delivery of latest information. (Make sure signal is strong and stable.)

Press  → Select **Entertainment** → Press  →  
Select **Cast** → Press  → Select **Demand**  
**Re-delivery** → Press  → Press  **Yes**

#### Stored Information

Main Menu ▶ Entertainment → Cast

### 1 Latest Information

1 Select **What's New** and press 

#### Back Issues

1 Select **Back Number** and press 













2 Select date and press 

### 2 Select an item and press

Information appears.

### 3 Press to exit

## Using Information

Save Sound/ Chaku-Uta®	Select <b>Save</b> → Press 
Change Font Size	Press  <b>Options</b> → Select <b>Font Size</b> → Press  → Select a size → Press 
Change Scroll Unit	Press  <b>Options</b> → Select <b>Scroll Unit</b> → Press  → Select a unit → Press 
Copy Text	Press  <b>Options</b> → Select <b>Copy</b> → Press  → Perform from Step 3 in "Copy/ Cut & Paste" on <b>P.3-12</b>
Open Properties	Press  <b>Options</b> → Select <b>Property</b> → Press  ■ Press  to exit.

## Near chat (Japanese Only)

- In the event that this handset may be used by a minor, access to this application may be password restricted by a supervising adult. In this case, Handset Code access must also be managed to prevent the execution of Memory All Clear (see **P.17-10**) that may be used to reset the application password. For more about password restriction, see Near chat V-application instructions.
- Because Near chat employs Bluetooth® technology, users may receive unsolicited connection requests from unknown sources. To reject such requests, press  **No** in Step 2 on **P.18-5** "Receiving Near chat Request".

### Basics

Use this application to exchange real-time text messages with compatible Bluetooth® devices within ten metres.

- Because this application employs Bluetooth® technology transmission/connection fees do not apply.
- Usage requires the pre-installed Near chat V-application.

- Note** ▶
- Near chat range may vary by ambient conditions.
  - Near chat V-application cannot be deleted.

### Using Near chat

#### Setup

Activate the following Bluetooth® settings beforehand.

<b>Bluetooth®</b>	See <b>P.12-2</b> (choose <b>On</b> )
<b>Visibility</b>	See <b>P.12-4</b> (select <b>Show My Phone</b> )
<b>V-appli Request</b>	See <b>P.18-5</b> (choose <b>On</b> )

- Note** ▶
- Always activate Bluetooth® to use Near chat.
  - When Bluetooth® is active and Visibility is set to **Show My Phone**, 905SH may receive unsolicited connection requests from other Bluetooth® devices.
  - Set Visibility to **Show My Phone** and activate V-appli Request to receive Near chat request from other parties.

## V-appli Request

V-appli Request is **On** by default.

**Main Menu** ▶ Settings ▶ **Connectivity** (↔) ▶ Bluetooth ▶  
V-appli Request ▶ Switch On/Off

### 1 Choose **On** or **Off** and press **■**

■ For **On**, if **Activate Bluetooth?** appears, press **☐** **Yes**.

## Sending Near chat Request

**Main Menu** ▶ Entertainment

### 1 Select **Near chat** and press **■**

■ If **Activate Bluetooth?** appears, press **☐** **Yes**.

### 2 Send **Near chat** request via the application

- Near chat starts when the other party accepts your request.
- For details, read the instructions on the application.

### 3 To end **Near chat**, exit the application (see P.17-5)

## Receiving Near chat Request

### 1 When a **Near chat** request arrives, a tone sounds and **Bluetooth® Notification** appears

- After 30 seconds of inactivity, the tone sounds again, notification appears and Information window opens.
- Check request log in Latest Information (see below).



### 2 Press **☐** **Yes**

Near chat V-application starts.

- For details, read the instructions on the application.
- To reject request, press **☐** **No**.

### 3 To end **Near chat**, exit the application (see P.17-5)

**Latest Information** Open details of the most recently received Near chat request

**Main Menu** ▶ Settings ▶ **Connectivity** (↔) ▶ Bluetooth

Select **V-appli Request** ▶ Press **■** ▶ Select **Latest Information** ▶ Press **■**

■ Press **■** to exit.



# ComicSurfing (Japanese Only)

Activate ComicSurfing V-application to read comics, photo books and other CCF files saved in Data Folder (Book).

To read fee-based CCF files, download Content Keys.

Main Menu ▶ Entertainment

## 1 Select *ComicSurfing* and press

ComicSurfing V-application starts.

- For operations, read the instructions on the application.
- When a V-application is paused, **Application suspended**.

**End application?** appears. Press  **Yes** to start ComicSurfing.

**Note** ▶ When purchasing a new handset, move CCF files via Memory Card and retrieve Content Key to open the files. Some files may need to be re-downloaded.

**Tip** ▶ Save CCF files to handset/Memory Card Data Folder (Book).

*Vodafone live! FeliCa*

# Basics

**Vodafone live! FeliCa** encompasses a range of IC Card-based services available via FeliCa-compatible Vodafone handsets.

905SH supports Vodafone live! FeliCa. To use services such as e-money, e-ticketing and reward point systems, simply hold handset over a compatible reader/writer at a shop or restaurant, etc.

## FeliCa

- A contactless IC card technology enabling wireless data transmissions with compatible reader/writer terminals

## IC Card

- The FeliCa chip embedded in FeliCa-compatible handsets
- Holds information required to use Vodafone live! FeliCa

## IC-appli

- V-applications required to use Vodafone live! FeliCa
  - Edy e-money IC-appli is preloaded on 905SH.
    - Edy is a prepaid e-money service run by bitWallet Inc.

**Note** ▶ IC Card data content varies by service and usage history. Procedures to delete IC Card data vary by IC-appli; contact the service provider for details.

## Service Usage Outline

### Download IC-appli

**Download IC-appli via Mobile Internet site.**

- IC-appli is saved to IC-appli folder.



### Complete Registration/Set Up

**Activate IC-appli, complete registration/customise settings.**

- Charge accounts, check balance or payment records, etc.



### Use Service

**To use Vodafone live! FeliCa at shops, restaurants, and locations, place  logo over reader/writer.**

- Use e-money/e-tickets to shop/travel and earn reward points.


- Note** ▶
- IC-appli registration and usage vary; contact the service provider for details.
  - Vodafone is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.
  - Keep service passwords/customer service contact information, etc. in a separate place.

## Starting IC-appli

To use Vodafone live! FeliCa, activate a service IC-appli and complete service registration, setup, charge, balance check, etc.


Main Menu ▶ IC-appli

### 1 Select **IC-appli** and press

To download an IC-appli, select **Download** ▶ Press 

### 2 Select an application and press

IC-appli starts.

To end the IC-appli, press 

**Note** ▶ IC-appli cannot be started during calls or when another V-application is active.

**Tip** ▶ IC-appli settings and usage patterns resemble those of other V-applications (see P.17-6 - 17-9). However, IC-appli cannot be set as Screensaver.


## Using Vodafone live! FeliCa

Follow these steps to conduct a transaction.

Example: making an electronic payment:

- Complete registration, setup and charge in advance.
- Complete transactions without activating an IC-appli.

### 1 Place logo over reader/writer

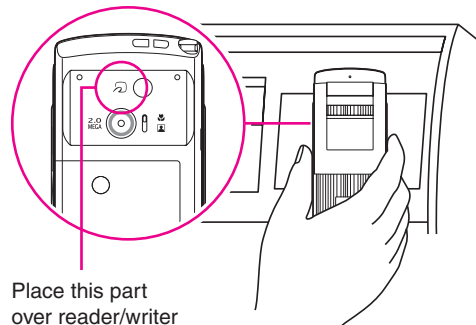

Place this part  
over reader/writer

- Confirm scan results on reader/writer display.
- If recognition is slow, move handset around slightly.

**Note** ▶ 

- Align handset parallel to reader/writer.
- Foreign articles can block/hamp recognition.

- Tip** ▶
- When placed over sensor, 905SH may display a message, vibrate or activate Mail, Web or a V-application for some services. To disable response, see **P.19-7** "Interface Settings".
  - Reader/writer will scan FeliCa IC Card even during calls or Vodafone live! transmissions. (It may take some time.)

#### When Handset Power is Off

- Transactions possible; IC-appli do not start automatically.
  - After installing/reinstalling battery, always turn on handset power to use Vodafone live! FeliCa.

#### When Battery is Low

- Vodafone live! FeliCa is not available. Charge it beforehand.

## Vodafone live! FeliCa Settings

### IC Card Status

**Main Menu** ▶ *IC-appli* ▶ *IC Card Settings*

#### 1 Select **IC Card Status** and press

- If IC Card lock is set, press  **Yes** ▶ Enter Handset Code  
▶ Press
- Press  to exit.

### IC Card Lock

Use this function to restrict access to/prevent unauthorised use of Vodafone live! FeliCa on 905SH.

- Activate IC Card Lock remotely (see **P.19-5** "Remote Lock").
- IC Card Lock is **Off** by default.

**Main Menu** ▶ *IC-appli* ▶ *IC Card Settings* ▶ *IC Card Lock*

#### 1 Enter Handset Code and press

#### 2 Choose **On** and press

- To cancel, choose **Off** ▶ Press  (Omit the next step.)

#### 3 Press **Yes**

## Remote Lock

Send mail with specified subject (Mail Remote Lock) or call from a specified phone (Call Remote Lock).

### Preparation on Handset

#### Mail Remote Lock Password/Address

Save a password for Mail Remote Lock, and set mail address to send IC Card Lock notice to.

**Main Menu** ▶ *IC-appli* ▶ *IC Card Settings* ▶ *Remote Lock*

- 1 Enter Handset Code and press**
- 2 Select *Mail Remote Lock* and press**
- 3 Select *Remote Lock PW* and press**
- 4 Enter a password and press** 
  - Enter between 5 and 16 alphanumeric.
- 5 Select *Email Lock Notice* and press**
- 6 Select *Phone Book, Enter Number or Email Address* and press**
- 7 Select/enter mail address or Vodafone handset number and press** 
  - To enable Mail Remote Lock, perform from Step 3 in "Remote Lock Setup" on P.19-6 and choose **On** in Step 4.
- 8 To save settings without enabling Mail Remote Lock, press**  **Save**

#### Call Remote Lock Number/Count for Lock

Save up to two phone numbers from which to call handset, and set Missed Call count required to activate IC Card Lock (default count is 3 times).

Enable Remote Lock activation via public phones.

**Main Menu** ▶ *IC-appli* ▶ *IC Card Settings* ▶ *Remote Lock*

- 1 Enter Handset Code and press**
- 2 Select *Call Remote Lock* and press**
- 3 Select *Phone No. to Lck 1* and press** 
  - To enable activation via public phone, select **Set Public Phone** ▶ Press  ▶ Choose **On** ▶ Press
  - To disable activation via public phone, choose **Off**.
- 4 Select *Phone Book or Enter Number* and press**
- 5 Select/enter a phone number and press** 
  - To save second phone number, select **Phone No. to Lck 2** ▶ Press  ▶ Repeat Steps 4 - 5
- 6 Select *Count for Lock* and press** 
  - **3 times** is set by default.
- 7 Enter Missed Call count (3 - 10 consecutive times) required to activate IC Card Lock and press** 
  - To enable Call Remote Lock, perform from Step 3 in "Remote Lock Setup" on P.19-6 and choose **On** in Step 4.
- 8 To save settings without enabling Call Remote Lock, press**  **Save**

## Remote Lock Setup

Activate or cancel Mail Remote Lock/Call Remote Lock. Both Remote Locks are **Off** by default.

**Main Menu** ▶ *IC-appli* ▶ *IC Card Settings* ▶ *Remote Lock*

- 1 Enter Handset Code and press
- 2 Select **Mail Remote Lock** or **Call Remote Lock** and press
- 3 Select **Switch On/Off** and press
- 4 Choose **On** and press 
  - To cancel, choose **Off** ▶ Press 
    - Saved mail address and phone numbers remain. Reactivate Remote Lock to use the same setting.

5 Press  **Save**

## Activating Remote Lock

### ■ Via Mail

- 1 Use MMS/e-mail to send password to handset
  - Enter password as subject; leave other fields blank.
  - To confirm IC Card Lock status, send a message via phone or PC with specified mail address (see P.19-5 "Mail Remote Lock Password/Address").

### After Handset Receives Message

- IC Card Lock is set and notice is sent from handset to specified mail address.

**Note** ▶ If 905SH cannot receive mail IC Card Lock is not set.

### ■ Via Phone

- 1 Using one of the specified phones, call handset
- 2 End the call

The call is recorded as a Missed Call on your handset.

- Within three minutes, repeat Steps 1 - 2 until the specified number of Missed Calls are recorded.
- Payphones can be used for this function if Set Public Phone is activated beforehand.
- Send Caller ID when placing calls from specified phone. (Caller ID is not required for payphones.)

### After Specified Number of Missed Calls

- IC Card Lock is set; a message announces Remote Lock activation.

**Note** ▶

- Missed Call count is reset by incoming calls from numbers not saved for this function. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

## Interface Settings

Set 905SH response to reader/writer commands: Choose **On** for **V-appli** to activate V-application, **Browser** to access Mobile Internet sites, **Messaging** to activate mail, **Vibration** to vibrate handset, and **Pop-up Message** to open pop-up message. Interface Settings is **On** for all items by default.

**Main Menu** ▶ IC-appli ▶ IC Card Settings ▶ Interface Settings

- 1 Enter Handset Code and press**
- 2 Select from V-appli to Pop-up Message and press**
- 3 Choose On or Off and press**

## Resetting Defaults

Cancel custom settings and return Vodafone live! FeliCa settings to their defaults.

**Main Menu** ▶ IC-appli ▶ IC Card Settings ▶ Set to Default

- 1 Enter Handset Code and press**
- 2 Press**  **Yes**

**Note** ▶

- Set to Default does not affect downloaded IC-appli.
- Reset All (see P.11-22)/Memory All Clear (see P.17-10) return IC-appli settings to defaults and delete downloaded IC-appli. Reset All and Memory All Clear are disabled if IC Card data remains.



## *Appendix*

# Function List





Main Menu	Sub Menu	Refer to
<b>Entertainment</b>	Cast	P.18-2
	Near chat	P.18-4
	ComicSurfing	P.18-6
<b>Vodafone live!</b>	Vodafone live!	P.16-3
	Bookmarks	P.16-7
	Saved Pages	P.16-7
	Enter URL	P.16-5
	Access History	P.16-4
	Browser Settings	P.16-14
<b>Media Player</b>	Music	P.9-10
	Videos	P.9-13
	Streaming	P.16-11
<b>Messaging</b>	Received Msg.	P.15-16
	Create Message	P.15-7
	Drafts	P.15-12
	Templates	P.15-13
	Unsent Messages	P.15-16
	Sent Messages	P.15-16
	Server Mail Box	P.15-15
	Settings	P.15-24
	Memory Status	P.15-2
<b>Camera</b>	—	P.8-2

Main Menu	Sub Menu	Refer to
<b>Data Folder</b>	Pictures	P.10-2
	DCIM	P.10-2
	Ring Songs-Tones	P.10-2
	V-appli	P.17-2
	Music	P.10-2
	Videos	P.10-2
	IC-appli	P.19-3
	Book	P.10-2
	Custom Screens	P.11-5
	Text Templates	P.10-17
	Other Documents	P.10-2
	Memory Status	P.10-2
<b>Tools</b>	Calendar	P.13-2
	Alarms	P.13-11
	Auto Power On	P.13-14
	Calculator	P.13-16
	Answer Phone	P.2-9
	Voice Recorder	P.13-17
	Barcode	P.13-19
	E-Book	P.13-27
	Stopwatch	P.13-25
	Tasks	P.13-8
	World Clock	P.13-15
	Countdown Timer	P.13-25
	Expenses Memo	P.13-26
	Phone Help	P.13-30

Main Menu	Sub Menu	Refer to
V-appli	V-appli	P.17-2
	Settings	P.17-3
	Information	P.17-2
Call Log	All Calls	P.2-13
	Dialled Numbers	P.2-13
	Received Calls	P.2-13
	Call Timers	P.2-14
	Data Counter	P.2-14
	Call Costs	P.2-15
	IC-appli	IC-appli
IC Card Settings		P.19-4
Phone Book	Phone Book List	P.4-2
	Add New Entry	P.4-4
	Call Voicemail	P.14-4
	Category Control	P.4-11
	My Details	P.4-18
	Speed Dial List	P.4-14
	Contact Groups	P.4-12
	VF Address Book	P.4-15
	Settings	P.4-9
	Manage Entries	P.4-8
	Service Dial No.	P.4-2

Main Menu	Sub Menu	Refer to	
Settings	Phone Settings	Mode Settings	P.11-2
		Custom Screens	P.11-5
		Display	P.11-3
		Sounds & Alerts	P.11-11
		Date & Time	P.11-14
		言語選択 (Language)	P.11-5
		User Dictionary	P.11-16
		Turn Display to	P.6-21
		Ringer Output	P.11-14
		Earpiece Volume	P.11-14
		Locks	P.11-17
		Software update	P.20-9
		Master Reset	P.11-22
	Connectivity	Bluetooth	P.12-2
		Infrared	P.12-9
		Mass Storage	P.12-14
		Memory Card	P.10-18
	Call/Video Call	Call Settings	P.11-23
		Video Call	P.5-7
	Network Settings	Offline Mode	P.2-18
		Internet Setting	P.12-14
		Location Info	P.12-15
Network Info		P.12-14	
FM Radio	—	P.7-2	
TV Player	—	P.6-15	
TV	Digital TV	P.6-9	
	Analogue TV	P.6-21	
	TV Link	P.6-12	
	TV Listing	P.6-10	
	Reservation List	P.6-16	
	Setting	P.6-19	

# Troubleshooting

Problem	Possible Cause	Solution
905SH won't turn on	<ul style="list-style-type: none"> <li>• Did you press  for 2+ seconds?</li> <li>• Battery may need to be charged.</li> <li>• Battery may not be properly installed.</li> </ul>	<ul style="list-style-type: none"> <li>• Press  for 2+ seconds.</li> <li>• Charge battery or install a charged battery.</li> <li>• Install battery properly.</li> </ul>
905SH won't respond	<ul style="list-style-type: none"> <li>• Is <b>Switch On/Off</b> in PIN Entry <b>On</b>?</li> </ul>	<ul style="list-style-type: none"> <li>• If <b>On</b>, PIN1 is required. Enter PIN1 according to onscreen instructions. For more, see <b>P.11-20</b>.</li> </ul>
<b>Insert USIM Card</b> appears in Standby and 905SH is unresponsive	<ul style="list-style-type: none"> <li>• USIM Card may not be properly inserted.</li> <li>• The correct USIM Card may not be inserted.</li> <li>• There may be debris on IC chip/terminals.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure USIM Card is properly inserted. If the message still appears, USIM may be damaged.</li> <li>• Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.</li> <li>• Clean relevant parts with a dry cloth and re-insert.</li> </ul>
Keypad won't respond	<ul style="list-style-type: none"> <li>• Keypad Lock may be active. ( appears)</li> <li>• Function Lock may be active. ( appears)</li> </ul>	<ul style="list-style-type: none"> <li>• Cancel Keypad Lock (see <b>P.1-21</b>).</li> <li>• Cancel Function Lock (see <b>P.11-21</b>).</li> </ul>
Cannot place call from Phone Book	<ul style="list-style-type: none"> <li>• The number may be saved as Secret Mode entry.</li> <li>• Phone Book Lock may be active.</li> </ul>	<ul style="list-style-type: none"> <li>• Activate Secret Mode (see <b>P.1-21</b>).</li> <li>• Cancel Phone Book Lock (see <b>P.11-21</b>).</li> </ul>
out appears in Standby and call won't connect	<ul style="list-style-type: none"> <li>• 905SH may be outside the service area or otherwise beyond signal transmission range.</li> </ul>	<ul style="list-style-type: none"> <li>• Move to a place where signal is strong and retry.</li> </ul>

Problem	Possible Cause	Solution
<b>Call won't connect and there's a beeping tone</b>	<ul style="list-style-type: none"> <li>• Did you include the dialling code or the first 0?</li> <li>• 905SH may be out-of-range. (<b>out</b> appears)</li> <li>• 905SH Offline Mode may be active. (☒ appears)</li> </ul>	<ul style="list-style-type: none"> <li>• Dial the number including the dialling code or 0.</li> <li>• Move to a place where signal is strong and retry.</li> <li>• Cancel Offline Mode (see <b>P.2-18</b>).</li> </ul>
<b>Call is choppy or cut off</b>	<ul style="list-style-type: none"> <li>• Network signal may be weak.</li> <li>• Battery may need to be charged or replaced.</li> </ul>	<ul style="list-style-type: none"> <li>• Move to a place where signal is strong and retry.</li> <li>• Charge battery or install a charged battery.</li> </ul>
<b>Line is noisy during calls</b>	<ul style="list-style-type: none"> <li>• Network signal may be weak or unstable.</li> </ul>	—
<b>Battery won't charge</b>	<ul style="list-style-type: none"> <li>• AC Charger may not be properly connected to 905SH or Desktop Holder.</li> <li>• AC Charger may not be firmly plugged in to outlet.</li> <li>• Battery may not be properly installed.</li> <li>• 905SH may not be properly inserted into Desktop Holder.</li> <li>• There may be debris on terminals: (905SH, battery or Desktop Holder); connector (AC Charger); Connection Terminal (Desktop Holder); External Device Connector.</li> <li>• Battery may not charge outside 5°C to 35°C.</li> <li>• Battery may be terminally exhausted or defective.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure connector is securely inserted and try again.</li> <li>• Remove plug from outlet, re-insert and try again.</li> <li>• Open 905SH, install battery properly and try again.</li> <li>• Remove 905SH and re-insert correctly.</li> <li>• Clean all terminals with a cotton swab and try again.</li> <li>• Charge within an ambient temperature of 5°C - 35°C.</li> <li>• Replace battery with a new one.</li> </ul>
<b>Battery charges quickly</b>	<ul style="list-style-type: none"> <li>• Remaining charge shortens charging time.</li> </ul>	—
<b>905SH/Charger/Desktop Holder feels warm</b>	<ul style="list-style-type: none"> <li>• During charging, AC Charger or Desktop Holder normally becomes warm; 905SH may feel warm to the touch during extended periods of use.</li> </ul>	<ul style="list-style-type: none"> <li>• Unless 905SH/accessories become very hot to the touch, this should be considered normal; regardless, avoid prolonged skin contact which could cause burn injuries (see <b>P.xxiv</b>).</li> </ul>
<b>Battery Time seems shorter than usual</b>	<ul style="list-style-type: none"> <li>• Environmental factors (temperature, charging/signal conditions), usage or settings can affect Battery Time.</li> </ul>	<ul style="list-style-type: none"> <li>• For more on Battery Time, usage factors and ways to extend Battery Time, see <b>P.1-13 - 1-14</b>.</li> </ul>

Problem	Possible Cause	Solution
Display flickers	<ul style="list-style-type: none"> <li>• Display may flicker under fluorescent lights.</li> </ul>	—
Chaku-Uta <sup>®</sup> , music or video sound skips	<ul style="list-style-type: none"> <li>• When Surround is on, opening 905SH while Chaku-Uta<sup>®</sup>, music or video plays causes a momentary delay in playback by design; this is not a malfunction.</li> </ul>	—
Display went dark	<ul style="list-style-type: none"> <li>• Leaving 905SH open with no key presses for a preset period cancels Backlight (Time Out) then panel (Display Saving); this is not a malfunction.</li> </ul>	<ul style="list-style-type: none"> <li>• Press any key to reactivate Display backlight</li> </ul>
Cannot watch TV	<ul style="list-style-type: none"> <li>• Network information may need to be retrieved.</li> <li>• TV is disabled when USIM Card is not inserted or after subscription termination.</li> </ul>	<ul style="list-style-type: none"> <li>• Retrieve Network information (see <b>P.12-14</b>).</li> </ul>

**Tip** ► For repairs and after-sales services, contact Vodafone Customer Centre, Customer Assistance (see **P.20-26**).

## Warning Signs

### ■ **out** appears

Handset is out-of-range.  
Move for a better signal.

### ■ **Battery low. Please connect to charger! appears and short beeps sound**

Battery is low (see **P.1-15**).  
Charge or replace battery immediately.

### ■ **appears**

Keypad Lock is active (see **P.1-21**).  
Cancel to use Keypad. Press keys for Any Key Answer (see **P.2-6**) to answer calls.

### ■ **appears**

Function Lock is active (see **P.11-21**).  
Cancel to place calls, etc.  
Press keys for Any Key Answer (see **P.2-6**) to answer calls.

## V-application Display Messages

Display	Cause & Solution
<p>Application suspended. End application?</p> <p>Application is suspended.</p>	<ul style="list-style-type: none"> <li>• A V-application is paused.</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Close application and try again.</li> </ul>
<p>○○ Download to Phone</p> <p>Download Size: XXKB Save Size: XXKB Download? Battery low. Download may not be completed.</p>	<ul style="list-style-type: none"> <li>• Download may fail due to low battery.</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Charge battery then try again.</li> </ul>
<p>○○ Not Enough Memory in Phone. Download to Memory Card</p> <p>Download Size: XXKB Save Size: XXKB Download?</p>	<ul style="list-style-type: none"> <li>• Memory is full.</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Press <input type="checkbox"/> to download or <input type="checkbox"/> to cancel.</li> </ul>

Display	Cause & Solution
<p>Exceeds limit. Cannot save.</p>	<ul style="list-style-type: none"> <li>• 100 V-applications are already saved. (The message disappears automatically.)</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Delete applications (see <b>P.17-6</b>) and try again.</li> </ul>
<p>Same Version Found Continue Download?</p>	<ul style="list-style-type: none"> <li>• The same version of selected V-application is already saved.</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Press <input type="checkbox"/> <b>Yes</b> to download or <input type="checkbox"/> <b>No</b> to cancel.</li> </ul>
<p>New Version Found Continue Download?</p>	<ul style="list-style-type: none"> <li>• An older version of the same V-application is saved.</li> </ul> <p>↓</p> <ul style="list-style-type: none"> <li>• Press <input type="checkbox"/> <b>Yes</b> to download or <input type="checkbox"/> <b>No</b> to cancel.</li> </ul>

**Tip ▶** V-applications cannot be downloaded when the following messages appear:

- *Improper data. Cannot download application.*
- *Application size too large. Cannot download.*

### ■ When MMS is not delivered as sent

Causes include the following. For details, contact Vodafone Customer Centre, General Information (see **P.20-26**).

- **Recipient is not subscribed to MMS, Super Mail or Long Mail.**
- **Recipient handset is not MMS-compatible.**
  - The maximum size of messages/attachments recipient handsets can receive varies by make and model.
- **Recipient handset is not JPEG-compatible.**
  - Some Long Mail-compatible handsets may only be able to process PNG images; convert JPEG files to PNG, then attach and send (see **P.10-15**).

### ■ When handset memory is insufficient

New messages cannot be delivered (✉ appears in red). Undeliverable mail is saved at the Centre.

- Delete messages to free memory for new ones (see **P.15-21**).  
When memory is available, new messages are delivered automatically.
- Delete unprotected messages automatically to receive new ones (see **P.15-26**).
- Even if memory is not full, handset cannot receive new messages larger than remaining memory.



# Software Update

Check for 905SH firmware updates and download as required.

- Choose to begin update or schedule update.
- 905SH is disabled until update is complete. Update may take up to approximately 30 minutes.
- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Keep 905SH in a place where signal is strong and stable.
- Charge battery (🔋 appears) beforehand; a low battery may cause update to fail.
- Do not remove battery during update; update may fail.
- To reduce risk of failure, disconnect USB Cable from 905SH beforehand.

## Starting Software Update

Turn power off to end all active functions/applications, then restart 905SH and follow these steps.

Main Menu ▶ Settings ▶ Phone Settings (📞) ▶ Software update

### 1 Select Software update and press

Confirmation appears.

- Follow onscreen instructions. (🔋 appears during update).
- Update may take up to approximately 30 minutes.
- Confirmation appears and Information window opens (🔋 appears) for successful update.
  - While confirmation appears, press  to acknowledge update completion and cancel Information window.

**Note** ▶ Update failure may disable 905SH. Contact Vodafone Customer Centre, Customer Assistance (see P.20-26).

## Update Result

While Information window appears, select **Update result**

▶ Press

- Press  again to exit.

In Standby, press  ▶ Select **Settings** ▶ Press  ▶

Use  to select **Phone Settings** ▶ Select **Software**

**update** ▶ Press  ▶ Select **Update result** ▶ Press

- Press  again to exit.

## Scheduled Update

Confirmation appears at scheduled update time. Press  or wait approximately ten seconds for update to start.

- Update will not start while 905SH is in use. When the current operation ends, confirmation appears. After ten minutes, scheduled update is automatically cancelled.
- Update automatically cancels Keypad Lock.

**Note** ▶

- 905SH Phone Book entries, media files, and other content are not affected by firmware updates, but users should always back-up important information (note that some files cannot be copied). Vodafone is not liable for damages from lost information, etc.
- If 905SH does not return to Standby after update, turn power off and restart 905SH.













# Pictograph List

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--



# Specifications

## ■ 905SH

<b>Weight</b>	Approximately 140 g (with battery)
<b>Continuous Talk Time</b>	Approximately 180 minutes
<b>Continuous Standby Time (closed position)</b>	Approximately 360 hours
<b>Video Call Continuous Talk Time</b>	Approximately 90 minutes (with Internal Camera in use) Approximately 70 minutes (with External Camera in use)
<b>Charging Time (power off)</b>	AC Charger: Approximately 140 minutes In-Car Charger: Approximately 145 minutes
<b>Dimensions (W x H x D)</b>	Approximately 49 x 105 x 27 mm (closed position, 27 mm at thickest point)
<b>Maximum Output</b>	0.25 W

- Values above were calculated with battery installed.

- Continuous Talk Time is an average measured with a new, fully charged battery, with stable signals. Continuous Talk Time may be less than half this value if signal is weak.
- Continuous Standby Time is an average measured with a new, fully charged battery, in closed position without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if 905SH is out-of-range/signal is weak. Standby Time may vary by environment (battery status, ambient temperature, etc.).
- Talk Time/Standby Time decrease with frequent use of Display/Keypad backlights.
- Talk Time/Standby Time may decrease when a V-application is active.
- Talk Time/Standby Time decrease with handset use in poor signal conditions (see **P.1-13** "Battery Time").
- Display employs precision technology, however, some pixels may appear brighter/darker.

## ■ AC Charger

<b>Power Source</b>	AC 100V-240V, 50/60 Hz
<b>Power Consumption</b>	12VA
<b>Output Voltage/Current</b>	DC 5.2V/650 mA
<b>Charging Temperature</b>	5°C to 35°C
<b>Dimensions (W x H x D)</b>	Approximately 55 x 45 x 22 mm (without protruding parts, cord)
<b>Cord Length</b>	Approximately 1.5 m

## ■ Battery

<b>Voltage</b>	3.7V
<b>Battery Type</b>	Lithium-ion
<b>Capacity</b>	910 mAh
<b>Dimensions (W x H x D)</b>	Approximately 35.8 x 4.5 x 55 mm (without protruding parts)

## ■ Headphones (with Built-in TV Antenna)

<b>Weight</b>	Approximately 23 g
<b>Cord Length</b>	Approximately 1.6 m

# Memory List

Messaging	
<b>Received Msg.</b>	Approximately 4 MB
<b>Drafts</b>	Approximately 2 MB*
<b>Sent Messages</b>	Approximately 2 MB*
<b>Unsent Messages</b>	Approximately 2 MB*
<b>Templates</b>	Approximately 2 MB*

\*Drafts, Sent Messages, Unsent Messages and Templates share memory.

V-applications	
<b>V-appli</b>	Approximately 20 MB* (100 items) on handset

\*Shared with other folders in Data Folder.

Data Folder	
<b>Data Folder</b>	Approximately 20 MB*

\*Shared with V-appli Library.

# Index

Number
3D Pictogram (Messaging) ..... 15-17

## A

AC Charger..... 1-17
Access History ..... 16-4, 16-12
Acquire Dictionary ..... 11-16
Activation Time (V-application) ..... 17-7
Add Date.....10-23
Add Email Address.....4-3
Add Frame (Picture Editor).....10-15
Add Frame (still image capture)....8-14
Adjust Brightness (TV) .....6-19
Alarm Volume.....13-13
Alarms .....13-11
Alarms (cancelling/reactivating)....13-14
All Calls .....2-13
Alternative Image .....5-7
Analogue TV .....6-21
Answer Phone.....2-9
Answer Phone (Manner mode).....11-2
Anti Spam Measures .....15-26
Any Key Answer ..... 2-6, 11-2
Application Volume (V-application) .... 17-8
Assign Ringtone.....4-12
Assign Tone/Video .... 13-5, 13-9, 13-13
Authentication .....16-15
Authentication Information..... 16-13
Authorisation Code ..... 12-3, 12-9
Auto Bookmark.....13-29
Auto Delete.....15-26

Auto Mark Level.....9-8
Auto Play File..... 15-28
Auto Power Off (TV) .....6-20
Auto Power On.....13-14
Auto Resend ..... 15-25
Auto Save (mobile camera) .....8-20
Auto switch off (FM Radio).....7-8

## B

Back (E-Book)..... 13-28
Backlight (Display/Keypad) ..... 11-8
Backlight (Media Player).....9-14, 16-11
Backlight (V-application)..... 17-8
Backlight (Video Call) .....5-7
Backup .....10-22
battery .....1-12, 1-16
Battery Strength ..... 1-14, 1-15
Bit Rate.....9-8
Blink.....17-9
Bluetooth Timeout.....12-8
Bluetooth® .....12-2
Bookmarks.....16-7, 16-8
Bracket .....8-12
Brightness (Backlight) .....11-8
Browser Data .....16-13
By a-ka-sa-ta-na.....4-9
By Category .....4-9
By Reading.....4-9

## C

Cache.....16-13
Cache Memory .....16-2

Calculator..... 13-16
Calendar ..... 13-2
Calendar Format..... 11-15
Call Barring..... 14-7
Call Costs.....2-15
Call Forwarding .....14-2
Call Notice/Priority (V-application) ..... 17-9
Call Remote Lock ..... 19-5
Call Settings ..... 11-23
Call Time Counter ..... 11-24
Call Timers.....2-14
Call Voicemail .....14-4
Call Waiting.....14-5
Caller Display (External Display) ..... 11-9
Caller ID (sending/blocking).....2-2, 14-10
Calls & Alarms (TV).....6-20
Calls & Alarms (V-application) ..... 17-9
calls (ending).....2-2
calls (placing) .....2-2, 5-3
Camera Effects .....8-7, 8-15
Camera Picture.....5-4, 5-7
Category Control.....4-11, 4-12
Centre Access Code ..... 1-27
Change List View (Data Folder) .... 10-4
Change NW Password ..... 14-9
Change PIN..... 11-20
Change to Bcc ..... 15-9
Change to Cc ..... 15-9
Change to To ..... 15-9
Change View ..... 16-12
channel list setup (TV).....6-8
Character Code list ..... 20-10



Greeting Message .....	11-5	Input Memory .....	16-7	Memory Card .....	10-18
<b>H</b>		Insert Item .....	15-10	Memory Status (Phone Book) .....	4-8
Handle File(s) .....	16-9	Interface Settings .....	19-7	Memory Status (Data Folder) .....	10-2
Handset Code .....	1-27	international calls .....	2-5	Memory Status (Memory Card) ...	10-18
Handset Lock .....	11-20	Internet Setting .....	12-14	Memory Status (Messaging) .....	15-2
handset security .....	11-17	Int'l Calling .....	11-23	Memory Status (V-appli Library) ...	17-2
handsfree devices (connecting)....	12-8	Int'l Prefix .....	11-23	Merge Panorama .....	10-16
Handsfree Setting .....	12-9	<b>K</b>		Message Centre .....	15-27
Help (mobile camera) .....	8-5	key assignments (text entry) .....	3-3	Message List View .....	15-4
Help (Web) .....	16-4	Keypad Lock .....	1-21	Message Notice .....	15-27
Hide Indicators .....	8-16	Keypad Tones .....	11-13	Message Notice/Priority (V-application) .....	17-9
Hide Picture .....	5-3	<b>L</b>		Message Type .....	15-27
Hiragana to Katakana/Alphanumerics Conversion .....	3-10	Landscape (Analogue TV) .....	6-23	Messaging .....	15-2
Hold (Video Call) .....	5-6	Language .....	11-5	Messaging (checking messages) .....	15-13, 15-16
Hold (Voice Call) .....	2-11	Large Font Mode .....	1-22	Messaging (creating & sending messages) .....	15-7
Hold Guidance Pict .....	5-8	Last Played .....	9-10, 9-13, 16-12	Messaging (deleting messages)....	15-21
Home .....	16-12	Latest Information (Near chat) .....	18-5	Messaging Settings .....	15-12
Home Download .....	15-25	LCD Contrast (External Display).....	11-9	Microphone .....	8-19
<b>I</b>		Location (Browser Settings) .....	16-14	Minute Minder .....	11-24
IC Card .....	19-2	Loudspeaker .....	2-11, 5-6, 5-7	Mirror Image .....	5-6
IC Card Lock .....	19-4	<b>M</b>		Missed Call Notification.....	14-5
IC Card Status .....	19-4	mail address (customising handset address) .....	15-5	MMS .....	15-2
IC-appli .....	19-2	Mailbox Volume .....	15-15	MMS (retrieving remaining portion) .....	15-15, 15-16
Image Location (Digital TV) .....	6-12	Mail Remote Lock .....	19-5	MMS Settings .....	15-28
In-Car Charger .....	1-19	Main Menu .....	1-23	mobile camera .....	8-2
incoming calls (answering) .....	2-6, 5-3	Manner mode .....	2-16	Mobile Internet (accessing).....	16-3
Incoming Calls (Call Barring) .....	14-8	Manufacture Number .....	16-14	Mobile Light .....	8-17
incoming calls (Video Call).....	5-3	Mass Storage .....	12-14	Mode Settings .....	11-2
incoming calls (Voice Call) .....	2-6	Master Reset .....	11-22	Money Converter .....	13-16
Incoming Picture .....	5-7	Max Cost .....	2-15	Monitor Level .....	9-8
Index Print .....	10-24	Memory All Clear .....	17-10		
Information .....	2-7				

Move to Card.....	17-6
Multi Job.....	1-26
Multi Selector.....	i
Music Player.....	9-9
Music Search .....	9-2
Mute.....	2-11, 5-4
Mute Microphone.....	5-8
My Details.....	1-21, 4-18
My Folders.....	15-23

## N

Navi Key Settings (FM Radio).....	7-8
Navi Key Settings (TV) .....	6-19
Near chat .....	18-4
Network Info.....	12-14
Network Password.....	1-27, 14-9
Network Settings .....	12-14
Network V-applications .....	17-2
Next (E-Book).....	13-28
Normal Finder .....	8-16
Now On Air (FM Radio) .....	7-5

## O

Offline Mode.....	2-18
One-Hiragana Conversion .....	3-10
One Hiragana Predictive Entry.....	3-11
One Hiragana Word Call.....	3-11
One Seg (Digital TV).....	6-4
OPP Authentication.....	12-9
Outgoing Calls (Call Barring) .....	14-8
Outgoing Picture .....	5-7
out-of-range .....	1-9, 20-6
Overlapped.....	8-12

## P

packet transmission volume .....	2-14
Pager Code .....	3-8
Pager Code list .....	3-9
Paired Devices .....	12-4
Paste.....	3-12
Paste (Picture Editor).....	10-13
Pen Light .....	1-22
Permission .....	17-8
Phone Book .....	4-2
Phone Book (deleting entries) .....	4-11
Phone Book (editing) .....	4-10
Phone Book (quoting information).....	3-13
Phone Book (saving).....	4-3
Phone Book (searching) .....	4-9
Phone Book Lock .....	11-21
Phone Closing (FM Radio).....	7-8
Phone Help.....	13-30
Phonetic Conversion.....	3-10
Photo Camera mode .....	8-5
Pictograph list .....	20-16
Pictographs.....	3-7
Picture (Phone Book).....	4-6
Picture Appearance (Messaging)....	15-28
Picture Editor.....	10-12
Picture Quality (mobile camera) ...	8-18
Picture Size.....	8-18
PIN .....	1-6, 11-20
PIN Entry .....	11-20
Playback Pattern.....	9-11, 9-14
playing music .....	9-2
Playlist.....	9-19
portrait position.....	1-11

Power Off Sound .....	11-13
Power On Sound .....	11-13
power on/off.....	1-20
Predictive (conversion).....	3-6
Previous Usage (conversion).....	3-6
Print .....	10-8
Priority.....	15-12
program guide .....	6-10
properties.....	17-4
properties (Data Folder) .....	10-6, 15-22
properties (Messaging)	
.....	15-12, 15-13, 15-16
properties (Mobile Internet sites)	
.....	16-9, 16-13
properties (Music Player) .....	9-10
properties (V-application).....	17-6

## Q

Quick Conversion.....	3-11
Quick Entry (schedule icons).....	13-3
Quick Operations .....	1-25

## R

Received Calls.....	2-8, 2-13
Received Msg. View .....	15-4
Record Time (Voice Recorder) ....	13-17
Record Time/Size (Video Camera)...	8-19
recording TV programs.....	6-13
Rejected Numbers.....	14-9
Reload .....	16-12
Remote Lock.....	19-5
Reply .....	15-18
Reply All.....	15-18
Reset (V-application).....	17-8
Reset All.....	11-22

Reset Learning .....	3-12
Reset Settings (DPOF) .....	10-24
Reset Settings .....	11-22
Resize (Picture Editor) .....	10-12
Restore .....	10-22
Retouch .....	10-13
Retrieve NW Info .....	1-20, 12-14
Ringer Output .....	11-14
Ringtone/videos .....	11-11
Root Certificates .....	16-15
Rotate .....	10-15
Ruby (E-Book) .....	13-28

## S

Save Address (Messaging) .....	15-19
Save and Send .....	8-16
Save Pictures to (mobile camera) .....	8-20
Save Recording To (Voice Recorder) .....	13-18
Save Station (FM Radio) .....	7-7
Save to Data Folder .....	15-22
Save to Phone Book .....	16-10
Save Videos to .....	8-20
Saved Pages .....	16-7, 16-8
Scan Barcode .....	13-19
Scan Text .....	13-24
Scene .....	8-18
schedule (opening entries) .....	13-6
Screensaver .....	17-7
scroll bar .....	16-6
Scroll Unit .....	15-27, 16-14
Scrolling .....	9-18
SD AUDIO Recorder .....	9-7
SD Local Contents .....	10-22

Search .....	16-13
Search for Devices .....	12-3
Secret (Phone Book) .....	4-7
Secret (schedule) .....	13-5
Secret (Tasks) .....	13-10
Secure Prompt .....	16-15
Security (Browser Settings) .....	16-15
Security Level (Face Recognition) .....	11-19
Self-timer .....	8-11
Send (URL) .....	16-4, 16-13
Send All (Bluetooth®) .....	12-6
Send All (Infrared) .....	12-12
Send File Settings .....	15-28
Send Referrer .....	16-14
Sent Messages .....	15-2
Sent Msg. View .....	15-4
Server Mail Box .....	15-15
Service Dial No. .....	4-2
Set Area .....	7-5
Set as Ring Video .....	10-11
Set as Ringtone .....	10-11
Set as Wallpaper .....	10-11
Set Date/Time .....	11-14
Set Holiday .....	13-3
Set Low Priority .....	3-12
Set Recording .....	6-14
Set Time Zone .....	11-15, 13-15
Set to Default .....	17-9
Set to Default (Mode Settings) .....	11-2
Set to Default (Vodafone live! FeliCa) .....	19-7
Sharp Space Town .....	16-7
Shortcuts .....	1-24
Show Indicators .....	11-4
Show My Number .....	14-10

Show Operator Name .....	11-4
Show Secret Data .....	11-21
Shutter Sound .....	8-16
Side Keys .....	i
Signature .....	15-26
Slide Auto Play .....	15-28
Slide Duration .....	15-11, 15-28
Slide Show .....	10-6
slides .....	15-11
Small Light .....	1-15
SMIL Settings .....	15-28
SMS .....	15-2
SMS Settings .....	15-27
Snooze .....	13-13
Soft Key .....	1-23
Software update .....	20-9
Sort (Data Folder) .....	10-4
Sort (Media Player) .....	9-10, 9-13
Sort (Messaging) .....	15-3
Sound Output (FM Radio) .....	7-8
Sound Output (TV) .....	6-20
Sound Settings (Video Player) .....	9-14
Sound Type (Digital TV) .....	6-11
Sounds & Alerts .....	11-11
Speed Dial .....	4-14
Speed Mail .....	15-24, 15-25
Split Picture .....	10-17
SSL .....	16-3
Stamp (Picture Editor) .....	10-13
Standby .....	1-20
station list setup (FM Radio) .....	7-4
Status Light .....	11-13
Stopwatch .....	13-25
Streaming .....	16-11

Subtitle (Video Player) .....	9-16
Subtitles (TV) .....	6-10
Surround .....	11-14, 17-9
Suspend Time (V-application) .....	17-7
SVG files .....	10-7
Swap Calls .....	14-6
Switch Images .....	5-5
Switch to Read (Messaging) .....	15-18
Switch To Unread (Messaging) .....	15-8
Symbols .....	3-7
Sync Settings (Phone Book) .....	4-17
Synch Recording .....	9-8
Synchronisation (Memory Card) ...	17-3
Synchronisation (Phone Book) ...	4-15, 4-18
System Graphics .....	11-3
System Sounds .....	11-13

## T

Tasks .....	13-8
Tasks (opening entries) .....	13-10
Templates .....	15-13
text (editing) .....	3-12
text (entering) .....	3-5
Text Code (E-Book) .....	13-28
Text Orientation (E-Book) .....	13-28
Text Templates .....	3-14, 10-17
Time Format .....	11-15
timer recording (TV) .....	6-16
Tone Control (Digital TV) .....	6-20
Tone Control (Music Player) .....	9-11
Totals .....	13-26
Touch Tones .....	2-11
Transfer Audio (Video Call) .....	5-6
Turn Display to .....	6-21

TV .....	6-2
TV Alarm .....	6-17
TV Channels (setting up, adding, editing or deleting) .....	6-8, 6-18, 6-22
TV Link .....	6-12
TV Player .....	6-15
TV System .....	11-10
TV timer .....	6-16

## U

Unsent Messages .....	15-2
uploading .....	16-13
URL Setting .....	12-15
User Dictionary .....	11-16
USIM Card .....	1-4

## V

V-appli Library .....	17-2
V-appli Request .....	18-5
V-appli Settings .....	17-8
V-application .....	17-2
V-application (deleting) .....	17-6
V-application (downloading) .....	17-4
V-application (exiting or pausing) ...	17-5
V-application (resetting) .....	17-9
V-application (resuming) .....	17-5
V-application (starting) .....	17-5
Via Infrared .....	12-11
Vibration .....	11-12, 13-13, 17-9
Video Call .....	5-2
Video Call settings .....	5-7
Video Camera mode .....	8-8
Video Encode (mobile camera) .....	8-19
Video Output .....	5-4, 11-9, 17-3
Video Quality (mobile camera) .....	8-18

View Log (Phone Book) .....	4-18
Visibility .....	12-4
Vodafone Address Book .....	4-15
Vodafone live! .....	16-3
Vodafone live! CAST .....	18-2
Vodafone live! FeliCa .....	19-2
Voice Memo .....	2-12
Voice Recorder .....	13-17
Voicemail .....	14-3
Volume (Answer Phone) .....	2-10
Volume (Earpiece Volume) .....	2-11, 5-4, 11-14
volume (Media Player) .....	9-10, 9-13
Volume (Ringtone/general volume) ...	11-11

## W

Wake-up Alarm .....	11-15
Wallpaper .....	11-3
Warning Tone .....	11-13
Web .....	16-2
Web content .....	16-2
White List .....	12-15
Withheld Call .....	14-9
World Clock .....	13-15



# Warranty & After-Sales Services

## ■ Warranty

Warranty is provided when you purchase 905SH.

- **Check the name of distributor and date of purchase.**
- **Read through contents and keep in a safe place.**
- **The warranty term is described in the warranty.**

## ■ After-Sales Services

See **P.20-4** "Troubleshooting" before contacting Vodafone for service or repairs. If you cannot find solutions or solve problems, contact Vodafone Customer Centre, Customer Assistance (see **P.20-26**) in your subscription area and provide a detailed description of the problem.

- **Repairs within warranty are performed under terms and conditions described.**
- **Out of warranty, possible repairs are performed upon request at subscriber expense.**

For other services, contact the distributor, the nearest Vodafone shop or Vodafone Customer Centre, General Information (see **P.20-26**). Replacement parts are available for 6 years after termination of production.

### Note ▶

- Vodafone is not liable for any damages resulting from use of this product.
- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.

# Customer Service

If you have questions about Vodafone handsets or services, please call General Information. For repairs, please call Customer Assistance.

## Vodafone Customer Centres

From a Vodafone handset, call toll free at 157 for General Information or 113 for Customer Assistance

## Vodafone International Call Centre

From outside Japan, dial +81-3-5351-3491  
(International charges will apply.)

■ Call these numbers toll free from landlines.

Subscription Area	Service Centre	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎0088-240-157
	Customer Assistance	☎0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎0088-241-157
	Customer Assistance	☎0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎0088-242-157
	Customer Assistance	☎0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113
Tokushima, Kagawa, Ehime, Kochi	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113

# Vodafone 905SH Instruction Manual

August 2006, First Edition

**Vodafone K.K.**

For additional information, please visit a Vodafone shop.

**Model: Vodafone 905SH**

**Manufacturer: SHARP CORPORATION**



モバイル・リサイクル・ネットワーク  
携帯電話・PHSのリサイクルにご協力を。

**Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:**

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.