

INDEX

PART NAME	GROUP NUMBER	PART NAME	GROUP NUMBER
A		H	
Armature assy. (starter motor)	11005	Housing assy. (starter motor rear end)	11130
		Housing kit (starter motor rear end)	11130
B		I	
Band (starter motor cover)	11126	Insulator (starter motor brush end plate)	11431
Bearing (starter motor drive housing)	11135	Insulator (starter motor brush holder)	11062
Bezel (ignition switch)	11580	Insulator (starter motor switch)	11068
Bezel (ignition switch)	11584	Insulator (starter motor switch spring)	11181
Block (headlamp switch junction)	11A647-8		
Bolt (starter motor through)	11091, 10120		
Bracket (headlamp switch)	11A668	K	
Brush (starter motor)	11055-6	KIT - refer to appropriate noun name For example	
Brush set (starter motor)	11057	Housing kit (starter motor rear end)	11130
Bushing (starter motor drive housing)	11135		
Bushing (starter motor brush end plate)	11052	Knob (light sensor switch)	11666
Bushing (starter motor field terminal insulator)	11107	Knob & shaft assy. (headlamp switch)	11661
C		L	
Clip (headlamp switch)	11A671	Lens (instrument panel headlamp switch)	11A667
Coil (starter motor field)	11082	Lever (starter motor drive)	11067
Coil assy. (starter motor field)	11082		
Connector (starter motor solenoid)	11072		
Control assy. (starter motor relay)	11A126		
Cover (ignition switch)	11A604		
Cover (starter motor plunger)	11060		
Cylinder & keys (ignition switch lock)	11582		
D		N	
Drive assy. (starter motor)	11350	Nut (headlamp switch)	11650
		Nut (ignition switch retaining)	11A578
		Nut (instrument panel vent control attaching)	11662
F		P	
Flange (starter motor coil retainer)	11106	Pin (ignition switch actuating rod)	11A601
		Plate & bushing assy. (starter motor front end)	11049
		Plunger assy. (starter motor solenoid)	11393
		Point kit (starter motor contact)	11134
		Post (starter motor contact)	11176
G		R	
Gasket (starter motor drive housing)	11003	Retainer (headlamp switch)	11A669
Gasket (starter motor plunger cover)	11065	Retainer (starter motor drive ring)	11223
Gasket assy. (headlamp switch)	11A683	Ring (starter motor drive stop)	11222
		Rivet (starter motor pin lever)	11139
Grommet (starter motor terminal insulator)	11A120	Rod (ignition switch actuating)	11A599

11001-2 STARTER MOTOR

HOW TO FIND STARTERS and COMPONENTS

By IDENTIFICATION:

1. Refer to Identification Chart below.
2. Check marking (on starter housing) against Identification numbers.
3. Select and refer to appropriate Parts List Section and Number.
4. If basic number is not known refer to Illustration Page shown in the Ford Car Master Illustrations Catalog (Form FP-7635-B), or to the Alphabetical Index at the beginning of this section.
5. Select part number shown for affected Parts List. If more than one part number is shown refer to Description and Restrictions for clarification.
6. Quantity of parts shown in columns A, B or C etc.
7. Parts are listed numerically.

By MODEL APPLICATION:

1. Refer to Model Application Chart beginning on next page.
2. Refer to appropriate Year, Model and Engine.

Identification Example

C4OF 11001-A is listed in Parts List Section 110.2, Column 2A.

Model Application Example

1965 Falcon (8 cyl.) uses starter C2OZ 11002-A. Internal parts for this starter are listed in Parts List Section 110.2, Column 2A.

IDENTIFICATION CHART

IDENTIFICATION	MAKE	PARTS LIST SECT.&NO.	TYPE	SERVICE STARTER ASSEMBLY	REPLACED BY	ILLUS. Sec. 110 PAGE
C8VF 11000-A	Ford	110.4A	12 volt positive engagement	*C8VY 11002-A	C8VY 11002-C	3
D0VF 11000-A	Ford	110.4C	12 positive engagement	D0VY 11002-A		3
D2VF 11000-AA	Ford	110.4D	12 volt positive engagement	D0VY 11002-A		3
C4DF 11001-A	Ford	110.3A	12 volt positive engagement	*C2DZ 11002-A	C3OZ 11002-C	2
C4DF 11001-B	Ford	110.3A	12 volt positive engagement	*C2DZ 11002-A	C3OZ 11002-C	2
C4OF 11001-A	Ford	110.2A	12 volt positive engagement	*C2OZ 11002-A	C2OZ 11002-B	2
C4ZF 11001-A	Ford	110.2A	12 volt positive engagement	*C2OZ 11002-A	C2OZ 11002-B	2
C5AF 11001-A	Ford	110.2B	12 volt positive engagement	C3OZ 11002-C		2
C5TF 11001-A	Ford	110.2C	12 volt positive engagement	*C5TZ 11002-A	C5TZ 11002-D	2
C6AF 11001-A	Ford	110.2G	12 volt positive engagement	*C6AZ 11002-A	C3OZ 11002-C	2
C6AF 11001-B	Ford	110.3B	12 volt positive engagement	C5TZ 11002-D		2
C6OF 11001-A	Ford	110.2E	12 volt positive engagement	C6OZ 11002-A		2
C6VF 11001-A	Ford	110.2D	12 volt positive engagement	*C6VY 11002-A	C3OZ 11002-C or C6AZ 11002-A	2
C7AF 11001-A	Ford	110.2F	12 volt positive engagement	C3OZ 11002-C		2
C7AF 11001-B	Ford	110.2A	12 volt positive engagement	*C2OZ 11002-B	D4OZ 11002-A	2
C7AF 11001-C	Ford	110.2F	12 volt positive engagement	C3OZ 11002-C		2
C7AF 11001-D	Ford	110.3D	12 volt positive engagement	*C5TZ 11002-A	C5TZ 11002-D	2
C7AF 11001-E	Ford	110.2G	12 volt positive engagement	*C6AZ 11002-A	C3OZ 11002-C	2
C7AF 11001-F	Ford	110.2C	12 volt positive engagement	C5TZ 11002-D		2
C7DF 11001-A	Ford	110.3C	12 volt positive engagement	*C2DZ 11002-A	C3OZ 11002-C	2
C7OF 11001-A	Ford	110.2B	12 volt positive engagement	C3OZ 11002-C		2
C7ZF 11001-A	Ford	110.2E	12 volt positive engagement	C6OZ 11002-A		2
C8AF 11001-A	Ford	110.2H	12 volt positive engagement	*C8AZ 11002-A	C4TZ 11002-B	2
C8VF 11001-A	Ford	110.4B	12 volt positive engagement	*C8VY 11002-B	C8VY 11002-C	3
C9AF 11001-A	Ford	110.4B	12 volt positive engagement	C8VY 11002-C		3
C9AF 11001-B	Ford	110.2F	12 volt positive engagement	C3OZ 11002-C		2
C9ZF 11001-A	Ford	110.2A	12 volt positive engagement	*C2OZ 11002-A	C2OZ 11002-B	2
D0AF 11001-A	Ford	110.2L	12 volt positive engagement	C3OZ 11002-C		2
D0AF 11001-B	Ford	110.2M	12 volt positive engagement	*C2OZ 11002-B	D4OZ 11001-A	2
D0AF 11001-C	Ford	110.2K	12 volt positive engagement	C5TZ 11002-D		2
D0AF 11001-E	Ford	110.2J	12 volt positive engagement	C3OZ 11002-C		2
D0DF 11001-A	Ford	110.3E	12 volt positive engagement	C3OZ 11002-C		2
D0OF 11001-A	Ford	110.2L	12 volt positive engagement	C3OZ 11002-C		2
D0TF 11001-A	Ford	110.2L	12 volt positive engagement	C4TZ 11002-B		2
D0ZF 11001-A	Ford	110.2M	12 volt positive engagement	*C2OZ 11002-B	D4OZ 11002-A	2
D0ZF 11001-B	Ford	110.2N	12 volt positive engagement	C6OZ 11002-A		2
D1AF 11001-AA	Ford	110.2R	12 volt positive engagement	D1AZ 11002-A		2
D12F 11001-AA	Ford	110.3F	12 volt positive engagement	D1FZ 11002-A		2
D12F 11001-AB	Ford	110.3G	12 volt positive engagement	D2FZ 11002-A		2
D2AF 11001-AA	Ford	110.2S	12 volt positive engagement	D1AZ 11002-A		2
D2AF 11001-CA	Ford	110.2U	12 volt positive engagement	*C2OZ 11002-B	D4OZ 11002-A	2
D2AF 11001-DA	Ford	110.2P	12 volt positive engagement	C5TZ 11002-D		2
D2AF 11001-EA	Ford	110.4D	12 volt positive engagement	C8VY 11002-C		2
D2OF 11001-AA	Ford	110.2Q	12 volt positive engagement	C3OZ 11002-C		2
D2TF 11001-AA	Ford	110.2S	12 volt positive engagement	C4TZ 11002-B		2
D2ZF 11001-AA	Ford	110.2U	12 volt positive engagement	*C2OZ 11002-B	D4OZ 11002-A	2
D2ZF 11001-BA	Ford	110.2T	12 volt positive engagement	C6OZ 11002-A		2
D2ZF 11001-AA	Ford	110.3G	12 volt positive engagement	D2FZ 11002-A		2
D2ZF 11001-AB	Ford	110.3H	12 volt positive engagement	D2FZ 11002-A		2

11001-2 STARTER APPLICATION CHART

Determine year, model, engine and/or identification. Find service Starter as well as Armature, Brushes, Drive and Bearings in adjacent columns.

(Also see Page 1 of this section for PARTS LIST instructions and STARTER IDENTIFICATION CHART)

MODEL	ENGINE		IDENT.	PARTS LIST SECT. & NO.	SERVICE STARTER ASSEMBLY	STARTER COMPONENTS			BEARING		ILLUS. SECT. 110 PAGE
	CYL.	C.I.D.				ARMATURE	BRUSH SET	DRIVE	F R T.	R E A R	
1965											
A B(S/T)	6&8	240,289	C5TF 11001-A, C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B(A/T), F, X	6&8	240,260, 289	C40F 11001-A, C4ZF 11001-A, C7AF 11001-B	110. 2A	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, F, S, X	6&8	200,352, 390,427	C5AF 11001-A	110. 2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F, X	6	170	C4DF 11001-A,B	110. 3A	C2DZ 11002-A (SA-528) r/b C3OZ 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2

1966

A,B,F,U,X(S/T)	6&8	240,289	C5TF 11001-A, C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, U(S/T)	8	289	C6AF 11001-B	110. 3B	C5TZ 11002-D (SA-661)	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
A,B(A/T) F, X	6&8 8	240,289 289	C40F 11001-A, C4ZF 11001-A, C7AF 11001-B	110. 2A	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, S	6&8	200,352, 390,427	C5AF 11001-A	110. 2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F, X(A/T or 4 speed)	6	200									
A, B, S	6&8	200,352, 390,427	C7AF 11001-A	110. 2F	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, S	6&8	200,352, 390,427	C6VF 11001-A	110. 2D	C6VY 11002-A r/b C3OZ 11002-C	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
A	8	428									
F, X(A/T or 4 speed)	6	200									
S	8	428	C6VF 11001-A	110. 2D	C6VY 11002-A r/b C6AZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
A, S	8	428	C6AF 11001-A	110. 2G	C6AZ 11002-A (SA-648)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
B, F, X(S/T)	6	200	C60F 11001-A	110. 2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
U	6	170									
U, X	6	All	C4DF 11001-B	110. 3A	C2DZ 11002-A (SA-528) r/b C3OZ 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2

1967

X	6	170	C4DF 11001-B	110-3A	C2DZ 11002-A (SA-528) r/b C3OZ 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
X	6	170	C7DF 11001-A	110. 3C	C2DZ 11002-A (SA-528) r/b C3OZ 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
X(S/T)	6	170	C7ZF 11001-A	110. 2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
B, F, X(S/T)	6	200	C60F 11001-A, C7ZF 11001-A	110. 2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
U	6	170	C7ZF 11001-A								
B, F, X(A/T)	6	200	C5AF 11001-A, C70F 11001-A	110. 2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2

c - Use C2DF 11052-A d - Use C0DZ 11135-A e - Use C2DF 11135-A g - Use C6VY 11135-A h - Use C4TZ 11052-A

11001-2 STARTER APPLICATION CHART - continued

(Also see Page 1 of this section for PARTS LIST instructions and STARTER IDENTIFICATION CHART)

MODEL	ENGINE		IDENT.	PARTS LIST SECT. & NO.	SERVICE STARTER ASSEMBLY	STARTER COMPONENTS			BEARING		ILLUS. SECT. 110 PAGE
	CYL.	C.I.D.				ARMATURE	BRUSH SET	DRIVE	F	R	
A(S/T)	6	240	C5TF 11001-A, C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A	6	240	C40F 11001-A C7AF 11001-B	110. 2A	C2OZ 11002-B (SA-660) r/b D40Z 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, X(A/T)	8	289									
F	8	289									
X(S/T)	8	289									
A	6	240	C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, U(3 or 4 speed S/T)	8	289									
A, B, U(3 or 4 speed S/T)	8	289	C6AF 11001-B, C7AF 11001-D	110. 3B 110. 3D	C5TZ 11002-A (SA-629) R/B C5TZ 11002-D	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
A, S	8	390, 427, 428	C5AF 11001-A, C70F 11001-A	110. 2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, F, S	8	390	C7AF 11001-A, C	110. 2F	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, S	8	427									
A, S	8	428	C6AF 11001-A, C7AF 11001-E	110. 2G	C6AZ 11002-A (SA-648)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2

1968

X	6	170	C7DF 11001-A	110. 3C	C2DZ 11002-A (SA-528) R/B C3OZ 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
U	6	170	C7ZF 11001-A, B	110. 2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
X(S/T)	6	170									
B, F, X(S/T)	6	200									
A(S/T w/T/E)	6	240	C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A(A/T w/Imco)	6	240	C7AF 11001-B	110. 2A	C2OZ 11002-B (SA-660) r/b D40Z 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
B, X(A/T w/Imco)	8	289									
F(w/T/E)	8	289									
A, B, F, X(A/T w/Imco)	8	302									
B, F, X, U S/T	8	289	C7AF 11001-D	110. 3D	C5TZ 11002-A (SA-629) R/B C5TZ 11002-D	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
A, B, F, X(S/T w/T/E)	8	302	C7AF 11001-F	110. 2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, F	8	390	C7AF 11001-C	110. 2F	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A, B, F(S/T)	8	427									
B, F, X(A/T)	6	200	C70F 11001-A	110. 2B							
F	8	390	C70F 11001-A	110. 2B							
A	8	428	C7AF 11001-E	110. 2G	C6AZ 11002-A (SA-648)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
A, B, F, S	8	390									
A(A/T)	8	427									
B, F	8	427, 428	C8AF 11001-A	110. 2H	C8AZ 11002-A (SA-659) R/B C4TZ 11002-B	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
S	8	429	C8VF 11000-A	110. 4A	C8VY 11002-A (SA-652) R/B C8VY 11002-C	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3
S	8	429	C9AF 11001-A	110. 4B	C8VY 11002-C (SA-658)	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3

c - Use C2DF 11052-A d - Use C0DZ 11135-A e - Use C2DF 11135-A g - Use C6VY 11135-A

h - Use C4TZ 11052-A

May, 1975

COPYRIGHT © 1975 —

FORD MOTOR COMPANY

— DEARBORN, MICHIGAN

FINAL ISSUE

SECTION 110

FORD CAR PARTS

See PAGE 1 of THIS SECTION
for STARTER COMPONENT INFORMATION

11001-2 STARTER APPLICATION CHART - continued

(Also see Page 1 of this section for Parts List instructions and STARTER IDENTIFICATION CHART)

MODEL	ENGINE		IDENT.	PARTS LIST SECT. & NO.	SERVICE STARTER ASSEMBLY	STARTER COMPONENTS				BEARING		ILLUS. SECT. 110 PAGE
	CYL.	C.I.D.				ARMATURE	BRUSH SET	DRIVE	F R T.	R E A R		
<i>1969</i>												
X	6	170	C7DF 11001-A	110.3C	★C2DZ 11002-A (SA-528) R/B C30Z 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2	
U, X	6	170	C7ZF 11001-A	110.2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2	
F, X	6	200	C70F 11001-A	110.2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2	
A	6	240	C7AF 11001-B	110.2A	C2OZ 11002-B (SA-660)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2	
B, F	6	250	C9ZF 11001-A		r/b D40Z 11002-A							
A,B,F,X,U(A/T)	8	302,351										
A	6	240	C7AF 11001-F	110.2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2	
A,B,F(S/T)	8	302,351										
A, B, F, S	8	390	C7AF 11001-C, C70F 11001-A, C9AF 11001-B	110.2F 110.2B 110.2F	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2	
B, F	8	428	C8AF 11001-A	110.2H	★C8AZ 11002-A (SA-659) R/B C4TZ 11002-B	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2	
	8	428 CJ	C8AF 11001-A									
A(P/C)	8	428	C7AF 11001-E	110.2G	C6AZ 11002-A (SA-648)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2	
A, S	8	429	C9AF 11001-A	110.4B	C8VY 11002-C (SA-658)	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3	
F-Boss	8	429 Spec										

1970

P	6	170	D0DF 11001-A	110.3E	C3OZ 11002-C (SA-628)	D0DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	h	b	2
P, U	6	170	C7ZF 11001-A	110.2E	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F	6	200	C7ZF 11001-A								
P-with S/T	6	200									
X	6	170	C7DF 11001-A	110.3C	★C2DZ 11002-A (SA-528) R/B C30Z 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
F	6	200	C7DF 11001-A								
F	6	200	C70F 11001-A	110.2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F	6	200	C7AF 11001-B	110.2A	C2OZ 11002-B (SA-660) r/b D40Z 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F, P, X- with A/T	6	200	D00F 11001-A	110.2L	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
F, P, X	6	200	D0ZF 11001-B	110.2N	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
P(A/T)	6	200	C7DF 11001-A	110.3C	C2DZ 11002-A (SA-528) r/b C30Z 11002-C	C4DZ 11005-A	C2DZ 11057-A	C4DZ 11350-B	c	e	2
P(A/T)	6	200	C70F 11001-A	110.2B	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F	6	250	D0ZF 11001-A	110.2M	C2OZ 11002-B (SA-660) r/b D40Z 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A(A/T)	6	240	C7AF 11001-B	110.2A	C2OZ 11002-B (SA-660)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F	6	250	C9ZF 11001-A		r/b D40Z 11002-A						
A, B, F(A/T)	8	302, 351	C7AF 11001-B								
U	8	302	C7AF 11001-F	110.2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
A(S/T)	6	240	C7AF 11001-F								
A, B, F(S/T)	8	302, 351	C7AF 11001-F								

b - Use D0AZ 11135-B

c - Use C2DF 11052-A

d - Use C0DZ 11135-A

e - Use C2DF 11135-A

g - Use C6VY 11135-A

h - Use C4TZ 11052-A

11001-2 STARTER APPLICATION CHART - continued

(Also see Page 1 of this section for PARTS LIST instructions and STARTER IDENTIFICATION CHART)

MODEL	ENGINE		IDENT.	PARTS LIST SECT. & NO.	SERVICE STARTER ASSEMBLY	STARTER COMPONENTS				ILLUS. SECT. 110 PAGE	
	CYL.	C.I.D.				ARMATURE	BRUSH SET	DRIVE	BEARING		
									F R T.		R E A R
<i>1970 - continued</i>											
A(A/T) B, P	6 6	240 250	D0AF 11001-B D0AF 11001-B	110.2M	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A, B, F, X- with A/T	8	302, 351	D0AF 11001-B								
A(S/T) A, B, F, X- with S/T	6 8	240 302, 351	D0AF 11001-C D0AF 11001-C	110.2K	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A	8	390, 428	D00F 11001-A	110.2L	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A	8	390, 428	D0AF 11001-A D0AF 11001-E	110.2L 110.2J	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A A(P/C)	8 8	390 428	C9AF 11001-B	110.2F	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	d	2
F(CJ)	8	428	C8AF 11001-A	110.2H	C8AZ 11002-A (SA-659) r/b C4TZ 11002-B	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	g	2
F(CJ)	8	428	D0TF 11001-A	110.2L	C4TZ 11002-B (SA-625)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	c	b	
A B(Spec)	8 8	429 429	C9AF 11001-A	110.4B	C8VY 11002-C (SA-658)	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3
S	8	429	D0VF 11000-A	110.4C	D0VY 11002-A (SA-663) r/b D4VY 11002-A	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3

1971

L	4	All	D12F 11001-AA D12F 11001-AB	110.3F	D1FZ 11002-A (SA-665)	D0DZ 11005-A	D1FZ 11057-A	C4DZ 11350-B	h	b	2
L	4	All	D22F 11001-AA	110.3G	D2FZ 11002-A (SA-665-A)	D2FZ 11005-A	D1FZ 11057-A	C4DZ 11350-B	h	b	2
P(A/T)	6	200	D00F 11001-A	110.2L	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
P, U P(S/T)	6 6	170 200	D0ZF 11001-B	110.2N	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A(A/T) B, P	6 6	240 250	D0AF 11001-B D0AF 11001-B	110.2M	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A, B, F(A/T)	8	302, 351	D0AF 11001-B								
A(S/T) A, B, F(S/T)	6 8	240 302, 351	D0AF 11001-C	110.2K	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
F P	6 8	250 302	D0ZF 11001-A	110.2M	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
U	8	302	C7AF 11001-F	110.2C	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A	8	390	D0AF 11001-A	110.2L	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A	8	400	D1AF 11001-AA	110.2R	D1AZ 11002-A (SA-671)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A, B, F	8	429	C9AF 11001-A	110.4B	C8VY 11002-C (SA-658)	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3
S	8	429	D0VF 11000-A	110.4C	D0VY 11002-A (SA-663) r/b D4VY 11002-A	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3

b - Use D0AZ 11135-B c - Use C2DF 11052-A d - Use C0DZ 11135-A g - Use C6VY 11135-A h - Use C4TZ 11052-A

May, 1975

COPYRIGHT © 1975 - FORD MOTOR COMPANY - DEARBORN, MICHIGAN

FINAL ISSUE

11001-2 STARTER APPLICATION CHART - continued

(Also see Page 1 of this section for PARTS LIST instructions and STARTER IDENTIFICATION CHART)

MODEL	ENGINE		IDENT.	PARTS LIST SECT. & NO.	SERVICE STARTER ASSEMBLY	STARTER COMPONENTS				ILLUS. SECT. 110 PAGE	
	CYL.	C.I.D.				ARMATURE	BRUSH SET	DRIVE	BEARING		
									F	R	
									T.	E	A
										A	R
1972											
L	4	All	D22F 11001-AA D22F 11001-AB	110.3G 110.3H	D2FZ 11002-A (SA-665A)	D2FZ 11005-A	D1FZ 11057-A	C4DZ 11350-B	c	b	2
F P	6 8	250 302	D22F 11001-AA	110.2U	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
P, U(S/T)	6	170, 200	D2ZF 11001-BA	110.2T	C6OZ 11002-A (SA-633)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
U	8	302	D2AF 11001-DA	110.2P	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
P(A/T)	6	200	D20F 11001-AA	110.2Q	C3OZ 11002-C (SA-628)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
B, F-w/S/T	8	302,351	D2AF 11001-DA	110.2P	C5TZ 11002-D (SA-661)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A(A/T) B, P A, B, F(A/T)	6 6 8	240 250 302, 351	D2AF 11001-CA	110.2U	C2OZ 11002-B (SA-660) r/b D4OZ 11002-A	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A, B, S	8	400	D2AF 11001-AA	110.2S	D1AZ 11002-A (SA-671)	D0AZ 11005-A	C0DZ 11057-B	C6VY 11350-A	h	b	2
A, B, F	8	429	D2AF 11001-EA	110.4D	C8VY 11002-C (SA-658)	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3
S	8	429	D0VF 11000-A	110.4C	D0VY 11002-A (SA-663) r/b D4VY 11002-A	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3
S	8	429, 460	D2VF 11000-AA	110.4D	D0VY 11002-A (SA-663) r/b D4VY 11002-A	D0AZ 11005-A	C0DZ 11057-B	C8VY 11350-A	h	g	3

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11A000 Refer to Starter Parts List - Section 110, page 1						
11001-2 STARTER MOTOR - ATTACHING PARTS						
65/70	A, S	6&8	Exc. 240,260, 289	Bolt-hex.head-5/16"-18 x 1 1/8"	3	352464-S8(BB139)
65/70	B, F, P, X	6	All		3	
71/	P	6	All		3	
				Lockwasher-spring-5/16"	3	34806-S7(X64)
65/70	A, B, F, X	8	240 260,289	Bolt-hex.head-3/8"-16 x 1 1/8"	2	354135-S7-8 (BB155A)
				Lockwasher-spring-3/8"	2	34807-S8(X66)
71/	A	6	240	Bolt -3/8"-16 x 1 1/4"	2	378487-S(BB545F)
		8	302,351, 400			
71	A(A/T)	8	429		2	
71	A(S/T)	8	429			
71/	B, F	6&8	250,302 351		2	
71/	P	6&8	All		2	
71/	A(S/T)	8	429	Bolt-3/8"-16 x 2 3/8"	1	378488-S(BB545M)
71/	B	8	429		1	
71/	A, B, F, L, S	4	All	Bolt-3/8"-16 x 1 9/16"	3	380209-S(BB545H)
11003 Refer to Starter Parts List - Section 110, page 1						

b - Use D0AZ 11135-B c - Use C2DF 11052-A d - Use C0DZ 11135-A g - Use C6VY 11135-A h - Use C4TZ 11052-A

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11A004 WIRE ASSY. - STARTER MOTOR RELAY TO SOLENOID						
70	A(taxi, P/C)	6&8	All	#D0AB 11A004-A	1	D0AZ 11A004-A
71	A(taxi, P/C)	6&8	All	#D1AB 11A004-AB	1	D1AZ 11A004-A
72	A(taxi, P/C) "Before 1/3/72"	6&8	Exc. 429P/C	#D2AB 11A004-AA, AB	1	D2AZ 11A004-C
72	A(Taxi, P/C) "From 1/3/72"	6&8	Exc. 429 P/C	#D2AB 11A004-AC	1	D2AZ 11A004-E
72	A(P/C)	8	429P/C	#D2AB 11A004-BF, DA	1	D2AZ 11A004-F
11005 Refer to Starter Parts List - Section 110, page 1						
11006 SHIELD - STARTER MOTOR RELAY						
68/	A, B, F, S	8	429, 460		1	D0VY 11006-A
11K013-102 Refer to Starter Parts List - Section 110, page 1						
11103 Refer to Starter Parts List - Section 110, page 1						
11A103 WIRING - STARTER MOTOR CIRCUIT JUMPER EXTENSION						
65/66	A (C4) "Before 12/13/65"	6&8	All	Ident. C5AB 11A103-A -Not Replaced	1	*C5AZ 11A103-A
65/67	A "From 12/13/65"	6&8	All	Refer to Group 12638		
68	A(63C, 76B)	8	All	Ident. C8AF 11A103-A-not replaced	1	*C8AZ 11A103-A
69/70	A(63C, 65C, 76B)	8	All	Ident. C9AB 11A103-B	1	C9AZ 11A103-A
71	A(65F, H, 76H)-bucket seats			#D1AB 11A103-AB	1	D1AZ 11A103-A
72	B(4 speed floor shift) "Before 10/1/71"			#D2OB 11A103-AC	1	D2OZ 11A103-A
72	B(4 speed floor shift)- "From 10/1/71"			#D2OB 11A103-AD	1	D2OZ 11A103-B
71	P(S/T)			#D1DB 11A103-AA	1	D1DZ 11A103-A
71	P(A/T)-column shift			#D1DB 11A103-BA, BB, BC	1	D1DZ 11A103-C
72	P(S/T floor shift) "Before 10/1/71"			#D2DB 11A103-BA	1	D2DZ 11A103-B
72	P(S/T floor shift) "From 10/1/71"			#D2DB 11A103-BB	1	D2DZ 11A103-D
72	P(A/T floor shift) "Before 10/1/71"			#D2DB 11A103-AB	1	D2DZ 11A103-A
72	P(A/T floor shift) "From 10/1/71"			#D2DB 11A103-AC	1	D2DZ 11A103-C
71	A(65F, H, 76H)	8	All	Screw No. 10-16 x 3/8" attach wiring to cowl panel Clip	1 1	42120-S(U248) 353547-S(GG173)
11104-26 Refer to Starter Parts List-Section 110, page 1						
11A126 CONTROL ASSY. - STARTER MOTOR RELAY						
68	B, F	8	428CJ	Ident. C8AF 11A126-A-not replaced (11/72)	1	*C8AZ 11A126-A
11A127 SWITCH ASSY. - IGNITION KEY - WARNING						
70/71	A, B, F, L, P, S				1	D0AZ 11A127-B
72	A, B, F, L, P, S				1	D2AZ 11A127-B
11A128 TERMINAL AND WIRING - IGNITION KEY - WARNING SWITCH						
70	A, B, F (fixed column)			#D0ZA 11A128-A	1	D0ZZ 11A128-A
70	A, F(tilt column)			#D0ZA 11A128-B, #D1AA 11A128-AB	1	D1AZ 11A128-C
71/	A, F(tilt column)				1	
71/	A (fixed column)			#D1AA 11A128-BB	1	D1AZ 11A128-D
71/	P			#D1DA 11A128-AA	1	
71	S(fixed column)			#D1AA 11A128-BA	1	
71/	F, L(fixed column)				1	
72	B			#D2OA 11A128-AB	1	D2OZ 11A128-A
72	S(fixed column)				1	
70	P(with locking column) - "Before 1/12/70"			#D0OA 11A128-A	1	D0OZ 11A128-A
70	P(with locking column) - "From 1/12/70"			#D0DA 11A128-B	1	D0DZ 11A128-A
70	S(fixed column)			#D0AA 11A128-D	1	D0AZ 11A128-D
70/71	S(tilt column)			#D0AA 11A128-E, D1AA 11A128-AB.	1	D1AZ 11A128-C
72	S(tilt column)			#D2SA 11A128-AB	1	D2SZ 11A128-A
71/	A, F, P			Screw No. 8-15 x 5/8"(attach wiring to steering column flange)	AR	52554-S(U230)
11130 - 11375 - Refer to Starter Parts List - Section 110 page 1						

Identification Marking

May, 1975

COPYRIGHT © 1975 -

FORD MOTOR
COMPANY

- DEARBORN, MICHIGAN

FINAL ISSUE

SECTION 110

FORD CAR PARTS

See PAGE 1 of THIS SECTION
for STARTER COMPONENT INFORMATION

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11382 SCREW - STARTER MOTOR SPRING TO SHAFT and PINION						
65	A (with F/M/2)	6&8	All	3/8"-24 x 11/16"-trans. converter tabs to fly wheel	3	B 11382
11390 - 11431 - Refer to Starter Parts List - Section 110 page 1						
11450 SWITCH - STARTER MOTOR RELAY - SOLENOID						
65/70/65/69/71/65/70/65/71	A, F, U P S L X B	6&8 6 6&8 4 6&8 6&8	All All All All All All	Ident. 2701966, 2702610, FDR 11450-A, C4AF 11450-A,B, C6AF 11450-A, C7AF 11450-A, C9AF 11450-A	1 1 1 1 1 1	B6AZ 11450-A (SW-3)
				Bolt-pan head, slotted-1/4"-28 x 5/8"	1	38229-S7-8(U145)
				Nut-hex. -5/16"-24	2	33923-S7(M32)
				Washer-flat-5/16"	2	44722-S8(X19)
				Lockwasher-external tooth-5/16"	2	*34941-S7
				Lockwasher-spring-5/16"	2	34806-S7(X64)
				Screw-hex, head-No. 14-10 x 1/2"	2	*31519-S8
				Nut-hex. -No. 10-32	2	34079-S7(M163)
				Washer-flat-No. 10	2	351256-S7(XX54)
				Lockwasher-spring-No. 10	2	34803-S7(X60)
				Nut-hex. -5/16"-18	2	381561-S (MM295AD)
72	B	6&8	All	#D2SF 11450-AB	1	D2OZ 11450-A
72	S	8	400		1	(SW-1080)
11500 SWITCH ASSY. - WINDSHIELD WASHER PUSH BUTTON						
66/69	U	6&8	170,289		1	2C 11500-A (SW-287)
11572 SWITCH ASSY. - IGNITION						
65/67	A	6&8	All		1	C5AZ 11572-B
66/67	B	6&8	All		1	(SW-417)
66/67	X	6&8	All		1	
65/67	S	8	All		1	
67	F	6&8	All		1	
68/69	A	6&8	All	Kit consists of: (1) C8AZ 11572-A and	1	D1AZ 11572-C
68/69	B, F, S	6&8	All	(1) C9AZ 14313-A		(SW-1054)
70	P (non-locking column)	6	All			
68/70	X	6&8	All			
70	A, B, S	6&8	All		1	D0AZ 11572-B
70	P (locking column) "From 10/1/69"	6	All			(SW-926)
70	P (locking column) "Before 10/1/69"	6	All		1	D0AZ 11572-A
70	F	6&8	All		1	(SW-882)
71/	A	6&8	All		1	D1AZ 11572-B
						(SW-1038)
65	B, F, X	6&8	All		1	C3AZ 11572-A
66	F, U	6&8	All		1	(SW-353)
71	B, S	6&8	All	Repl. by D4DZ 11572-A (6-74)	1	*D1AZ 11572-A
71/	F, P	6&8	All		1	(SW-992)
72	B, S	6&8	All	#D2OB 11572-AB	1	D2OZ 11572-A
						(SW-1079)
71	L	4	All	"Before 12/3/70"	1	D1FZ 11572-A
						(SW-979)
71/	L	4	All	"From 12/3/70"	1	D1FZ 11572-B
						(SW-979-A)
67/	U	6&8	All		1	C7UZ 11572-A
						(SW-583)
65/69	A, B, F, S, X	6&8	All	Nut-hex. -No. 10-32	3	34079-S7(M163)
				Lockwasher-spring-No. 10	3	34803-S7(X60)
71/	A, F, L, P, S			Nut 1/4"-20(attach ignition switch to steering column)	2	383256-S (MM296AE)
72	L			Screw No. 8-18 x 3/8"(attach switch to steering column)	1	42119-S(U246)
72	P			Nut 1/4"-20(attach ignition switch to steering column)	3	33795-S(M49)

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11A574 SPACER - IGNITION SWITCH BEZEL						
69	F	6&8	All		1	C9ZZ 11A574-A
11A578 NUT - IGNITION SWITCH RETAINING						
67	A				1	C7AZ 11A578-A
11580 BEZEL - IGNITION SWITCH						
65/66	S	8	390,428		1	C5SZ 11580-B
11581 SPRING - IGNITION SWITCH RETAINING						
65	B, F, X	6&8	All	Use with C3AZ 11572-A switch	1	1A 11581-B
66	F, U	6&8	All		1	
11582 CYLINDER and KEY ASSY. - IGNITION SWITCH LOCK						
65/66	A	6&8	All		1*	C9AZ 11582-A (SW-814)
66	B, X	6&8	All		1*	
67/69	A, B, F, S				1	
67/70	X	6&8	All		1	
70	P (non-locking column)	6	All		1	
65/66	S	8	All		1	
70/	A, B, F, L, S	6&8	All		1	D2AZ 11582-B
70/	P (locking column)	6&8	All		1	(SW1114)
65	A	6&8	All		1*	CC5AB 11582-A
66	A, B, X				1*	CC5AB 11582-B
65	B, X	6&8	All		1*	C5OZ 11582-A
65/66	F	6&8	All		1	(SW-422)
65	B, X	6&8	All		1*	CC5OB 11582-A
66/	U	6&8	All	Includes instruction sheet No. 1287	1	C3AZ 11582-A (SW-351)
11584 BEZEL - IGNITION SWITCH						
65	A	6&8	All		1	C5AZ 11584-A
66	A	6&8	All		1	C6AZ 11584-A
68	A	6&8	All		1	
69	A	6&8	All		1	C9AZ 11584-A
70	P (non-locking column)	6	All		1	
65	B, F, X	6&8	All		1	C3AZ 11584-A
66	F	6&8	All		1	
66/67	B, X	6&8	All		1	C6OZ 11584-A
67/68	F	6&8	All		1	
68/69	B	6&8	All		1	C8OZ 11584-A
68/70	X	6&8	All		1	
69	F	6&8	All		1	C9ZZ 11584-A
65/66	S	8	390,428	Refer to Group 11580		
67	S	8	390,428		1	C7SZ 11584-A
68/69	S	6&8	All		1	C8SZ 11584-A
66/	U	6&8	All		1	C3TZ 11584-A
68	A	6&8	All	Seal	1	*379381-S
11A592 SHIELD - IGNITION SWITCH TERMINAL						
67	A	6&8	All		1	*C7AZ 11A592-A
66	S	8	390,428		1	*C6SZ 11A592-A
67	S	8	390,428		1	*C7SZ 11A592-A

* U.S. only * Canada only

May, 1975

COPYRIGHT © 1975 —

FORD MOTOR
COMPANY

— DEARBORN, MICHIGAN

FINAL ISSUE

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11A599 ROD - IGNITION SWITCH ACTUATING						
70/	A (fixed column)	6&8	All		1	D0AZ 11A599-A
71/	F (fixed column)	6&8	All		1	
70	A (tilt column) "Before 6/1/70"	6&8	All		1	D0AZ 11A599-B
70/71	S (fixed column)	8	All		1	
70/71	B	6&8	All		1	D00Z 11A599-A
72	B	6&8	All		1	D2OZ 11A599 A
72	S (fixed column)	8	All		1	
72	S (tilt column)	8	All		1	D2SZ 11A599-A
70	F	6&8	All		1	D0ZZ 11A599-A
71	L	4	All		1	D1FZ 11A599-A
70/	P	6	All		1	D0DZ 11A599-A
70/71	S (tilt column)	8	All		1	D0SZ 11A599-A
70/	A (tilt column) "From 6/1/70"	6&8	All		1	
71/	F (tilt column)	6&8	All	Floor shift	1	
11A601 PIN - IGNITION SWITCH ACTUATING ROD						
70/	P (locking column)	6	All		1	D0AZ 11A601-A
70/	A, B, F (fixed column)	6&8	All		1	
71/	L	4	All		1	
70/	S (fixed column)	8	All		1	
11A604 COVER - IGNITION SWITCH						
70/71	S	8	All	Plastic	1	D0SZ 11A604-A
11A647-8 BLOCK - HEADLAMP SWITCH JUNCTION - Also Refer to Group 14448						
65	F	6&8	All		1	C4VY 11A647-A
65/	A, S	6&8	All		1	C5AZ 11A647-A
11650 NUT - HEADLAMP SWITCH						
65/66	A	6&8	All	Not replaced	1	★C5AZ 11650-A
68	A	6&8	All		1	
69/70	A	6&8	All		1	C9AZ 11650-A
71/	A	6&8	All		1	D1AZ 11650-A
68	A			Seal	1	★379381-S
68/71	B	6&8	All		1	C8OZ 11650-A
68/70	X	6&8	All		1	
65/66	F, X	6&8	All		1	C5ZZ 11650-A
67/68	F	6&8	All		1	C7ZZ 11650-A
69/70	F	6&8	All		1	C9ZZ 11650-A
71/	F	6&8	All		1	D1ZZ 11650-B
71/	L	4	All		1	D1FZ 11650-A
70/	P	6	All		1	D0DZ 11650-A
68	S	8	All	"Before 10/4/67"	1	C2TZ 11650-A
68/71	S	8	All	"From 10/4/67"	1	C8SZ 11650-B
72	S	8	All		1	D2LY 11650-A
66	U	6&8	All		1	C3TZ 11650-A
68/	U	6&8	All		1	
67	U	6&8	All		1	C6TZ 11650-A
67	X (less A/C)	6&8	All		1	C5ZZ 11650-A
67	X (w/A/C)	6&8	All	Not replaced	1	★C7DZ 11650-A
11654 SWITCH - HEADLAMP - ON INSTRUMENT PANEL						
65/67	A (less roof lamp wiring)	6&8	All	Ident. C5AB 11654-A, B	1	C5AZ 11654-A
65/68	A (Taxi-with roof lamp wiring)	6&8	All		1	(SW-629)
68/70	A (54A, B, E, 57B, 62, 63B, 65C, 76A, 71B, C, D, H, J) -w/o hidden headlamps	6&8	All		1	
70/71	B -w/o hidden headlamps	6&8	All		1	
71/	A	6&8	All		1	
68/69	B	6&8	All		1	
71	F (63, 65C)	6&8	All		1	
72	F (63D, R) "Before 1/3/72"	6&8	All		1	
72	B	6&8	All		1	
72	F "From 1/3/72"	6&8	All		1	

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11654 SWITCH - HEADLAMP - ON INSTRUMENT PANEL - continued						
68/70	A(54C, 57F, 63C, 65A, 71AE, 76B)- with hidden headlamps	6&8	All	Ident. C8AB 11654-C	1	C8AZ 11654-A (SW-644)
70/71	B-with hidden headlamps	6&8	All		1	
65/66	B	6&8	All	Ident. C5OB 11654-A	1	C5OZ 11654-A (SW-631)
67	B	6&8	All	Ident. C5GB 11654-A-includes retainer (C5ZZ 11A669-A)	1	C5GY 11654-C (SW-630)
65	F "Before 8/17/64"	6&8	All		1	C5ZZ 11654-A (SW-440)
65	F "From 8/17/64 to 11/16/64"	6&8	All	Ident. C5DB 11654-A-repl.by D3ZZ 11654-A	1	★C5DZ 11654-A
66	F	6&8	All	(9-74)	1	(SW-435)
71	F(65, 76)	6&8	All		1	
72	F(exc.63D,R) "Before 1/3/72"	6&8	All		1	
70/72	P "Before 1/3/72"	6&8	All		1	
72	P "From 1/3/72"	6&8	All	Repl.by C5AZ 11654-A (2-75)	1	★D2DZ 11654-A (SW-435-A)
65/68	F "From 11/16/64"	6&8	All	Ident. C5ZB 11652-A -includes bracket and C5DZ 11654-A switch	1	C5ZZ 11654-B (SW-441)
69	F	6&8	All	Ident. C9ZB 11652-C	1	C9ZZ 11654-A (SW-817)
70	F	6&8	All	Ident. D0ZB 11652-B	1	D0ZZ 11654-A (SW-928)
71	L "Before 6/15/71"	4	All		1	D1FZ 11654-B (SW-952A)
71/72	L "From 6/15/71 to 1/3/72"	4	All	R/B D2FZ 11654-B (2-73)	1	★D2FZ 11654-A (SW-1095)
72	L "From 1/3/72"	4	All		1	D2FZ 11654-B (SW-1095-A)
65/67	S	8	390,428	Ident. C5SB 11654-B, C6SB 11654-A	1	C5SZ 11654-C
70/71	S	8	429		1	(SW-438)
68/69	S	8	All		1	D0VY 11654-B (SW-871A)
72	S	8	All		1	D2SZ 11654-A (SW 1063)
66/	U	6&8	All	Ident. C5TB 11652-A or D2TB 11652-AA- includes bracket & C5TZ 11654-C switch	1	C5TZ 11654-A (SW 439)
66/	U	6&8	All	Ident. C5TB 11654-A or D2TB 11654-AA	1	C5TZ 11654-C (SW-718)
65	X	6&8	All	Ident. C5ZB 11652-A	1	C5ZZ 11654-B (SW-441)
65/70	X	6&8	All	Ident. C5DB 11654-A	1	C5DZ 11654-A (SW-435)
66/70	X	6&8	All	Ident. C6DB 11652-A-includes bracket and C5DZ 11654-A switch	1	C6DZ 11654-A (SW-544)
72	S			Nut-7/16"-28	1	351038-S(MM41)
11654 HEADLAMP LIGHTING SWITCH KIT						
65/66	F	6&8	All	Consists of (1) D3ZB 11654-AA and	1	D3ZZ 11654-A
71/72	F	6&8	All	(1) D3TB 11671-AA	1	(SW-1245)
70/72	P	6&8	All		1	
11661 KNOB and SHAFT ASSY. - HEADLAMP SWITCH						
65/66	A	6&8	All		1	C5AZ 11661-B
67	A	6&8	All	Bright-includes set screw-less shaft-Refer to Group 11663	1	C7AZ 11661-A
68	A	6&8	All		1	C8AZ 11661-A
69/70	A	6&8	All		1	C9AZ 11661-B
71/	A	6&8	All		1	D1AZ 11661-A
66	B(54, 62, 63B, 71B, 71D, 76B)	6&8	All		1	C6OZ 11661-A
66	B(63C, 63D, 71E, 76C, 76D)	6&8	All		1	C6OZ 11661-B
67	B(54A, 62A, 66A, 71D-less A/C)	6&8	All	Bright-shaft 2 5/8" long	1	C7OZ 11661-B

YEAR	MODEL	CYL.	C.I.D.	DESCRIPTION	QTY.	PART NUMBER
11661 KNOB and SHAFT ASSY. - HEADLAMP SWITCH - continued						
67	B(54B,62B,63,66B,66D,71B,71E,76)	6&8	All	Bright-shaft 2 7/8" long	1	C7OZ 11661-A
67	B(54A, 62A, 66A, 71D-w/A/C)	6&8	All		1	
68/69	B	6&8	All		1	C8OZ 11661-A
70/71	B	6&8	All		1	D0OZ 11661-A
72	B	6&8	All	Includes insert	1	D2OZ 11661-A
65/66	F	6&8	All		1	C5ZZ 11661-B
67	F	6&8	All	Bright-shaft 3 3/4" long	1	C7ZZ 11661-A
68	F	6&8	All		1	C8ZZ 11661-B
69/70	F	6&8	All		1	C9ZZ 11661-A
71/	F	6&8	All		1	D1ZZ 11661-B
71	L	" Before 6/15/71"	4	All	1	D1FZ 11661-A
71/	L	" From 6/15/71"	4	All	1	D2FZ 11661-A
70/71	P	" Before 6/15/71"	6&8	All	1	D0DZ 11661-A
71/	P	" From 6/15/71"	6&8	All	1	D2DZ 11661-A
65/66	S	8	390,428		1	C4SZ 11661-A
67	S	8	390,428	Bright-with black insert-shaft 4 1/4" long	1	C7SZ 11661-A
68	S	"Before 12/18/68"	8	All	1	C8SZ 11661-B
68	S	"From 12/18/68"	8	All	1	★C8SZ 11661-D
69	S	"Before 11/18/68"	8	All	1	C9SZ 11661-A
69/71	S	"From 11/18/68"	8	All	1	C9SZ 11661-B
72	S	8	All	Includes insert	1	D2SZ 11661-A
66	U	6&8	170,289	Black knob-shaft 3 3/16" long	1	C3TZ 11661-D
67	U	6&8	All	Black-shaft 3 1/4" long	1	C7TZ 11661-A
68/	U	6&8	All		1	C8TZ 11661-A
67	X(less A/C)	6&8	All	Bright-shaft 3 3/4" long	1	C7DZ 11661-A
67	X(w/A/C)	6&8	All	Bright-shaft 4" long	1	★C7DZ 11661-B
68/70	X	6&8	All	Chrome	1	C8DZ 11661-A
11663 SHAFT - HEADLAMP SWITCH KNOB						
67	A	6&8	All		1	C6GY 11663-A
11666 KNOB - LIGHT SENSOR SWITCH						
68	A, F(w/auto.headlamp dimmer)				1	C8AZ 11666-A
68/69	B, S, X				1	
				Screw socket head-No. 8-32 x 1/4"	1	375504-S8(UU28A)
11A667 LENS - INSTRUMENT PANEL HEADLAMP SWITCH						
65/66	S	8	390,428	Lights	1	C4SZ 11A667-A
11A668 BRACKET - HEADLAMP SWITCH						
71/	A	6&8	All		1	D1AZ 11A668-A
72	S				1	D2SZ 11A668-A
11A669 RETAINER - HEADLAMP SWITCH						
71/72	A	"Before 1/17/72"	6&8	All	2	D1AZ 11A669-A
72	A	"From 1/17/72"	6&8	All	2	D2AZ 11A669-A
68/	B (without A/C)	6&8	All		1	C8OZ 11A669-A
68/70	X (without A/C)	6&8	All		1	
68/69	B, X(with A/C)	6&8	All		1	C8OZ 11A669-B
65	F	"Before 11/16/64"	6&8	All	1	★C5ZZ 11A669-A
65	X	"Before 12/7/64"	6&8	All	1	
67	B	6&8	All		1	
65	F	"From 11/16/64"	6&8	All		Serviced in assy. -refer to Group 11654
65	X	"From 12/7/64"	6&8	All		Serviced in assy. -refer to Group 11654
71/	F	6&8	All		1	D1ZZ 11A669-A
70/71	P	6&8	All		1	D0DZ 11A669-A
72	P	6&8	All		1	D1DZ 11A669-A
67	S	8	390,428	Includes attaching parts	1	★C7SZ 11A669-A
11A670 SEAL - HEADLAMP SWITCH						
65/66	S	8	390,428	Sponge rubber	1	C4SZ 11A670-A
11A683 GASKET ASSY. - HEADLAMP SWITCH						
72	S				1	D2SZ 11A683-A

FORD CAR PARTS

(FORD 12 VOLT 4 1/2" POSITIVE ENGAGEMENT STARTER)

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS													
		A	B	C	D	E	F	G	H	J	K	L	M		
SPRING - DRIVE ROLLER BIAS	★B7TZ 11A000-B	4	4	4	4	4	4	4							
ARMATURE	D0AZ 11005-A (SM-335)	A	B	C	D	E	F	G	H	J	K	L	M		
SEAL - REAR HOUSING - BEARING	D0AZ 11K013-A		B		D		F	G	H	J	K	L	M		
WASHER - ARMATURE THRUST	11036														
Asbestos-5/8" I.D. x 1 1/4" O.D. x 3/32" thick	C0DZ 11036-A (SZ-628)	A	B	C	D	E	F	G	H	J	K	L	M		
Steel-1/2" I.D. x 23/32" O.D. x 1/32" thick	C6VY 11036-A (SZ-640)				D			G		J	K	L	M		
PLATE and BUSHING - BRUSH END	C4TZ 11049-A (SH-172)	A	B	C	D	E	F	G	H	J	K	L	M		
BUSHING - BRUSH END PLATE	C4TZ 11052-A (MC-170)	A	B	C	D	E	F	G	H	J	K	L	M		
BRUSH - non-insulated	18 11056	A	B	C	D	E	F	G	H	J	K	L	M		
Insulated	C4TZ 11056-A								H						
BRUSH SET	★C0DF 11056-B								H						
	C0DZ 11057-B (SB-134)	A	B	C	D	E	F	G	H	J	K	L	M		
Consists of															
1-C5AF 11055-A Brush	1-C0DF 11056-B Brush	1-18	11056	Brush	1-25247-S7	Screw									
SPRING - BRUSH	B 11059	4	4	4	4	4	4	4	4		4	4	4		
	D1AZ 11059-A (MS-502)										4				
COVER - PLUNGER	C0DZ 11060-C (SZ-589)	A	B	C	D	E	F	G	H	J	K	L	M		
INSULATOR BRUSH HOLDER	C4TZ 11062-A								2						
	★C9AZ 11062-A Not Replaced (2/73)	2	2	2	2	2	2	2		2	2	2	2		
GASKET - PLUNGER COVER	C0DF 11065-A (SZ-591)	A	B	C	D	E	F	G	H		K	L	M		
LEVER - DRIVE	C0DF 11067-B (SZ-593)	A	B	C	D	E	F	G	H	J	K	L	M		
Pin-dowel-1/4" x 11/16"	73266-S(N84A)	A	B	C	D	E	F	G	H	J	K	L	M		
INSULATOR - SWITCH	11068														
3/16" I.D. x 3/8" O.D. x 5/32" thick	C2DZ 11068-A	4	4	4	4	4	4	4	4	4	4	4	4		
COIL - FIELD	11082-5														
Complete	C6VY 11082-A (SC-398)	A	B	C	D	E	F	G		J	K	L	M		
R. H.	★C6AZ 11085-A Not Replaced (2/73)			C	D			G		J	K	L	M		
L. H.	★C6AZ 11083-A Not Replaced (2/73)	A	B	C	D	E	F	G		J	K	L	M		
Actuating	C2OZ 11083-D	A	B	C	D	E	F	G		J	K	L	M		
Frame and coil assy.	C8AZ 11083-A (SC-408)								H			L			
Lower	★C6AZ 11084-A Not Replaced (2/73)			C	D			G		J	K	L	M		
BOLT - THRU	11091														
Bolt-hex. head-1/4"-20 x 6 9/16"	C3AZ 10120-A (GY-740)	2	2	2	2	2	2	2	2	2	2	2	2		
Lockwasher-internal tooth-1/4"	34905-S7(X97)	2	2	2	2	2	2	2	2	2	2	2	2		
WASHER - FIELD TERMINAL -	B5A 11093-A	A	B	C	D	E	F	G							
3/8" I.D. (oblong) x 11/16" O.D. x 1/16" thick	18 11094-B	A	B	C	D	E	F	G							
WASHER - FIELD TERMINAL INSULATING -															
11/32" I.D. x 25/32" O.D. x 1/8" thick	B5A 11095-A	A	B	C	D	E	F	G							
WASHER - FIELD TERMINAL SCREW -															
11/32" I.D. x 11/16" O.D. x 1/16" thick	C0DZ 11102-C (SZ-656)	A	B	C	D	E	F	G		J	K	L	M		
TERMINAL KIT - FIELD															
Consists of															
1-B5A 11093-A Washer	1-B5A 11095-A Washer	2-33923-S7	Nut												
1-18 11094-B Washer	1-C0DF 11102-B Terminal	1-34806-S7	Lockwasher												
	1-18 11107-B Bushing														
Terminal Field	C0DZ 11102-D	A	B	C	D	E	F	G	H	J	K	L	M		
SPRING - PLUNGER RETURN	C1VF 11103-A (SZ-630)	A	B	C	D	E	F	G	H	J	K	L	M		

(FORD 12 VOLT 4½" POSITIVE ENGAGEMENT STARTER)

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS													
		2A THRU 2M													
		A	B	C	D	E	F	G	H	J	K	L	M		
SLEEVE - COIL RETAINING	C0DF 11105-A	A	B	C	D	E	F	G	H	J	K	L	M		
FLANGE - COIL RETAINING	C0DF 11106-A	A	B	C	D	E	F	G	H	J	K	L	M		
BUSHING - FIELD TERMINAL INSULATOR	18 11107-B	A	B	C	D		F	G							
BAND - COVER	C2OZ 11126-A	A	B	C	D	E	F	G	H	J	K	L	M		
Screw-round head, slotted-No. 10-32 x 1 5/8"	27185-S2(U177A)	A	B	C	D	E	F	G		J	K	L	M		
Nut-hex, -No. 10-32	34079-S7(M163)	A	B	C	D	E	F	G		J	K	L	M		
HOUSING - DRIVE END	11130														
	D0TZ 11130-A (SE-130)				C										
Screw-drive-No. 6 x 7/32"	375605-S(UU16)	A			D	E	F	G							
Housing kit (drive end)	DIAZ 11130-D (SE-130A)						E					K		M	
Consists of															
1-D0AZ 11K013-A	Seal	1-D0AF 11130-F	Housing	1-D1PF 11A130-AA	Lubricant										
1-C2DZ 11222-A	Ring	1-C2DZ 11223-A	Retainer	1-C6VF 11383-A	Washer										
1-L.S. PK108															
Housing kit (drive end)	DIAZ 11130-B (SE-129A)		B		D		F	G	H	J		L			
Consists of															
1-D0AZ 11K013-A	Seal	1-D2AF 11130-AA	Housing	1-D1PF 11A130-AA	Lubricant										
1-C2DZ 11222-A	Ring	1-C2DZ 11223-A	Retainer	1-C6VF 11383-A	Washer										
1-L.S. PK108															
Housing kit (drive end)	DIAZ 11130-C (SE-73B)	A												M	
Consists of															
1-D0AZ 11K031-A	Seal	1-D2AF 11130-EA	Housing	1-C2DZ 11222-A	Ring										
1-C2DZ 11223-A	Retainer	1-D1PF 11A130-AA	Lubricant	1-C6VF 11383-A	Washer										
1-L.S. PK108															
POINT KIT - CONTACT	11134														
	C2OZ 11134-B (SZ-641)	A	B	C	D	E	F	G	H	J	K	L	M		
Consists of															
1-C2DZ 11068-A	Insulator	1-C2OZ 11176-B	Post	1-57013-S	Screw-No.8-32 x 3/8"										
1-C2OF 11116-B	-Spring	1-C2OZ 11181-A	Insulator												
BEARING - DRIVE	*B7TZ 11135-A	A	B	C	D	E	F	G							
BEARING or BUSHING - DRIVE HOUSING	11135														
Bushing-15/32" I.D. x 17/32" O.D. x 13/16" long	C0DZ 11135-A (MC-12)	A	B	C		E	F								
Bearing-15/32" I.D. x 5/8" O.D. x 3/8" long	C6VY 11135-A (MC-189)				D			G	H						
	D0AZ 11135-B (MC-209)									J	K	L	M		
POST - CONTACT	C2OZ 11176-B	A	B	C	D	E	F	G	H	J	K	L	M		
ROLLER - DRIVE	*B7TZ 11178-A	4	4	4	4	4	4	4	4						
INSULATOR - SWITCH SPRING	C2OZ 11181-A	A	B	C	D	E	F	G	H	J	K	L	M		
RING - DRIVE STOP	C2DZ 11222-A (SZ-604)		B	C	D	E	F	G	H	J	K	L	M		
RETAINER - DRIVE STOP RING	C2DZ 11223-A (SZ-605)		B	C	D	E	F	G	H	J	K	L	M		
DRIVE ASSEMBLY - Includes attaching parts	C6VY 11350-A (SD-175)	A	B	C	D	E	F	G	H	J	K	L	M		
SPRING - DRIVE	*B7TZ 11375-A	A	B	C	D	E	F	G	H						
SCREW - POLE PIECE	11415														
Screw-flat head, socket-7/16"-14 x 21/32"	68 10044	3	3	3	3	3	3	3		3	3	3	3		
WASHER - DRIVE SPLIT	*B7TZ 11425-A		2	2	2	2	2	2	2						

NOTICE: When the parts list suffix is shown in the quantity required column, the quantity is one (1).

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS												
		N	P	Q	R	S	T	U	V	W	X	Y	Z	
ARMATURE	D0AZ 11005-A (SM-335)	N	P	Q	R	S	T	U						
SEAL - REAR HOUSING - BEARING	D0AZ 11K013-A	N	P	Q	R	S	T	U						
WASHER - ARMATURE THRUST	11036													
Asbestos-5/8" I.D. x 1 1/4" O.D. x 3/32" thick	C0DZ 11036-A (SZ-628)	N	P	Q	R	S	T	U						
Steel-1/2" I.D. x 23/32" O.D. x 1/32" thick	C6VY 11036-A (SZ-640)		P											
PLATE & BUSHING - BRUSH END	C4TZ 11049-A (SH-172)	N	P	Q	R	S	T	U						
BUSHING - BRUSH END PLATE	C4TZ 11052-A (MC-170)	N	P	Q	R	S	T	U						
BRUSH ASSY. -GROUND	18 11056-A	N	P	Q	R		T	U						
-Insulated	C4TZ 11056-A			Q										
BRUSH SET	C0DZ 11057-B (SB-134)	N	P	Q	R	S	T	U						
Consists of														
1-C5AF 11055-A Brush	1-C0DF 11056-B Brush	1-18	11056	Brush	1-25247-S7	Screw								
SPRING - BRUSH	B 11059	4			4									
	D1AZ 11059-A		4	4		4	4	4						
COVER - PLUNGER	C0DZ 11060-C	N	P	Q	R	S	T	U						
INSULATOR - BRUSH HOLDER - not replaced	★C9AZ 11062-A	2	2	2	2									
	C4TZ 11062-A			2										
GASKET PLUNGER COVER	C0DF 11065-A (SZ-591)	N	P		R	S	T	U						
LEVER - DRIVE	C0DF 11067-B (SZ-593)	N	P	Q	R	S	T	U						
Pin-dowel-1/4" x 11/16"	73266-S(N84A)	N	P											
INSULATOR - BRUSH - 3/16" I. D. x 3/8" O. D. x 5/32" thick	C2DZ 11068-A	N	P	Q										
Insulator - switch	C4TZ 11068-A			4										
COIL FIELD	11082-5													
Complete	C6VY 11082-A (SC-398)	N	P	Q	R	S	T	U						
Actuating	C2OZ 11083-D	N	P	Q	R	S	T	U						
Frame and coil assy.	C8AZ 11083-A					S								
R. H.	★C0DF 11084-A	N												
L. H.	★C0DF 11085-A	N												
R. H. - not replaced (2-73)	★C6AZ 11085-A	N	P	Q	R	S	T	U						
L. H. - not replaced (2-73)	★C6AZ 11083-A	N	P	Q	R	S	T	U						
Lower - not replaced (2-73)	★C6AZ 11084-A	N	P	Q	R	S	T	U						
BOLT - THRU	11091													
	C3AZ 10120-A (GY-740)	2	2	2	2	2	2	2						
Lockwasher	34905-S7(X97)	2	2	2	2	2	2	2						

DESCRIPTION AND RESTRICTIONS	PART NUMBER		STARTER PARTS LISTS											2N THRU 2Z			
			N	P	Q	R	S	T	U	V	W	X	Y	Z			
WASHER - FIELD TERMINAL	B5A	11093-A	N	P		R		T	U								
TERMINAL KIT - FIELD	C0DZ	11102-C (SZ-656)	N	P	Q	R	S	T	U								
Consists of																	
1-B5A 11093-A Washer	1-B5A	11095-A Washer				2-33923-S7										Nut	
1-18 11094-B Washer	1-C0DF	11102-B Terminal				1-34806-S7										Lockwasher	
	1-18	11107-B Bushing															
SPRING - PLUNGER RETURN	C1VF	11103-A (SZ-630)	N	P	Q	R	S	T	U								
SLEEVE COIL RETAINING	C0DF	11105-A	N	P	Q	R	S	T	U								
FLANGE COIL RETAINING	C0DF	11106-A	N	P	Q	R	S	T	U								
BAND - COVER	C2OZ	11126-A	N	P	Q	R	S	T	U								
Screw-round hd, slotted-No. 10-32 x 1 5/8"	27185-S2(U177A)		N	P	Q	R	S	T	U								
Nut-hex, -No. 10-32	34079-S7(M163)		N	P	Q	R	S	T	U								
HOUSING KIT (DRIVE END)		11130															
	D1AZ	11130-D (SE-130A)	N	P				T									
Consists of																	
1-D0AZ 11K013-A Seal	1-C2DZ	11222-A Ring				1-D1PF	11A130-AA									Lubricant	
1-D0AF 11130-F Housing	1-C2DZ	11223-A Retainer				1-C6VF	11383-A									Washer	
1-I.S. PK108																	
	D1AZ	11130-B (SE-129A)			Q												
Consists of																	
1-D0AZ 11K013-A Seal	1-D1PF	11A130-AA Lubricant				1-C2DZ	11223-A									Retainer	
1-C2DZ 11222-A Ring	1-D2AF	11130-AA Housing				1-C6VF	11383-A									Washer	
1-I.S. PK108																	
	D1AZ	11130-A (SE-133)				R	S										
Consists of																	
1-D0AZ 11K013-A Seal	1-C2DZ	11222-A Ring				1-D1PF	11A130-AA									Lubricant	
1-D2AF 11130-GA Housing	1-C2DZ	11223-A Retainer				1-C6VF	11383-A									Washer	
1-I.S. PK108																	
	D1AZ	11130-C (SE-73B)							U								
Consists of																	
1-D0AZ 11K013-A Seal	1-D2AF	11130-EA Housing				1-C2DZ	11222-A									Ring	
1-C2DZ 11223-A Retainer	1-D1PF	11A130-AA Lubricant				1-C6VF	11383-A									Washer	
1-L.S. PK108																	
POINT KIT - CONTACT		11134															
	C2OZ	11134-B (SZ-641)	N	P	Q	R	S	T	U								
Consists of																	
1-C2DZ 11068-A Insulator	C2OZ	11176-B Post				1-57013-S										Screw-No.8-32 x 3/8"	
1-C2OF 11116-B Spring	1-C2OZ	11181-A Insulator															
BEARING or BUSHING - DRIVE HOUSING		11135															
	D0AZ	11135-B (MC-209)	N	P	Q	R	S	T	U								
POST - CONTACT	C2OZ	11176-B	N	P	Q	R	S	T	U								
INSULATOR - SWITCH SPRING	C2OZ	11181-A	N	P	Q	R	S	T	U								
RING - DRIVE STOP RING	C2DZ	11222-A (SZ-604)	N	P	Q	R	S	T	U								
RETAINER - DRIVE STOP RING	C2DZ	11223-A (SZ-605)	N	P		R	S	T	U								
DRIVE ASSEMBLY - Includes attaching parts	C6VY	11350-A (SD-175)	N	P	Q	R	S	T	U								
SCREW - POLE PIECE		11415															
Screw-flat hd, socket-7/16"-14 x 21/32"	68	10044	3	3	3	3	3	3	3								

NOTICE: When the parts list suffix is shown in the quantity required column, the quantity is one (1).

FORD CAR PARTS

See SECTION 110, PAGE 1
for PARTS LIST INSTRUCTIONS

(FORD 12 VOLT 4" POSITIVE ENGAGEMENT STARTER)

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS 3A THRU 3M												
		A	B	C	D	E	F	G	H	J	K	L	M	
SPRING - DRIVE ROLLER BIAS	★B7TZ 11A000-B	4	4	4	4									
ARAMATURE	C4DZ 11005-A (SM-306)	A	B	C	D									
	D0DZ 11005-A (SM-333)					E								
	D2FZ 11005-A (SM-333-A)						F	G	H					
SEAL - REAR HOUSING BEARING	D0AZ 11K013-A					E	F	G	H					
WASHER - ARMATURE THRUST - Leather-5/8" I.D. x 1 1/8" O.D. x 3/32" thick	C2DF 11036-A (SZ-626)	A	B	C	D	E	F	G	H					
PLATE and BUSHING - FRONT END	D4FZ 11049-A (SH-176)	A	B	C	D	E	F	G	H					
BUSHING - BRUSH END PLATE	C2DF 11052-A (MC-93)	A	B	C	D	E	F	G	H					
BRUSH	11056													
Ground	C2DF 11056-A	A	B	C	D	E								
Ground	C2DZ 11056-C	A	B	C	D	E	F	G	H					
Insulated	C2DZ 11056-B	A	B	C	D	E								
BRUSH SET	C2DZ 11057-A (SB-97)	A	B	C	D	E								
Consists of														
1-C2DF 11056-A	Brush-ground	1-C2DZ 11056-C	Brush-ground	1-25247-S7	Screw									
1-C2DZ 11056-B	Brush-insulated			1-Instruction sheet No. 716										
KIT-STARTER BRUSH SET	D1FZ 11057-A (SB-164)						F	G	H					
Consists of														
1-D12F 11056-AA	Brush	1-D12F 11056-CA	Brush	1-D12F 11055-BA	Brush									
1-25247-S7	Screw													
SPRING - BRUSH	C2DZ 11059-A	4	4	4	4	4	4	4	4					
COVER - PLUNGER	C2DF 11060-A	A	B	C	D	E	F	G	H					
INSULATOR - BRUSH HOLDER	C2DF 11062-A	2	2	2	2	2	2	2	2					
GASKET - PLUNGER COVER	C2DF 11065-A (SZ-592)	A	B	C	D	E	F	G	H					
KIT - DRIVE LEVER AND PIN	D1FZ 11067-A (SZ-694)	A	B	C	D	E	F	G	H					
Consists of														
1-D32F 11067-AA	Lever	1-306308-S	Pin											
INSULATOR - SWITCH - 3/16" I.D. x 3/8" O.D. x 5/32" thick	C2DZ 11068-A	A	B	C	D	E	F	G	H					
Screw-pan head, cross recess-No. 5-40 x 1/2"	373805-S7-8 (BB636C)	A	B	C	D	E	F	G	H					
Nut-hex. -No. 5-40	373804-S7-6 (MM151C)	A	B	C	D	E	F	G	H					
COIL - FIELD - COMPLETE	C2DZ 11082-C (SC-348)	A	B	C	D	E	F							
	D2FZ 11082-A (SC-348A)							G	H					
BOLT - THRU - hex. head-1/4"-20 x 5 9/16"	C2DF 11091-A	2	2	2	2	2	2	2	2					
WASHER - FIELD TERMINAL - 3/8" I.D. (oblong) x 5/8" O.D. x 3/64" thick	C2DZ 11093-A	A	B											
WASHER - FIELD TERMINAL INSULATING - 11/32" I.D. x 25/32" O.D. x 1/8" thick	18 11094-B	A	B											
WASHER - FIELD TERMINAL SCREW - 11/32" I.D. x 11/16" O.D. x 1/16" thick	B5A 11095-A	A	B											
TERMINAL - FIELD	C2DZ 11102-B	A	B											

(FORD 12 VOLT 4" POSITIVE ENGAGEMENT STARTER)

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS												
		A	B	C	D	E	F	G	H	J	K	L	M	
TERMINAL KIT - FIELD	C6DZ 11102-B (SZ-657)	A	B		D	E	F	G	H					
Consists of														
1-C2DZ 11093-A Washer	*1-B5A 11095-A Washer													
1-18 11094-B Washer	*1-7RA 11095 Washer													
	1-C7AF 11102-A Terminal													
SPRING - PLUNGER RETURN	C2DF 11103-A (SZ-629)	A	B	C	D	E	F	G	H					
SLEEVE - COIL RETAINING	C2DZ 11105-A	A	B	C	D	E	F	G	H					
FLANGE - COIL RETAINING	D2FZ 11106-A	A	B	C	D	E	F	G						
BUSHING - FIELD TERMINAL INSULATOR	C2DZ 11107-A	A	B											
BAND - COVER	C2DF 11126-A	A	B	C	D	E								
	D1FZ 11126-A (SZ-675)						F	G	H					
Screw-round head, slotted-No. 10-32 x 1 5/8"	27185-S7(U177A)	A	B	C	D	E								
Nut-hex, -No. 10-32	34079-S7(M163)	A	B	C	D	E								
HOUSING (DRIVE END)	11130													
	C2DZ 11130-A (SE-72)	A		C		E								
Not replaced	*C6AZ 11130-A (SE-125)		B		D									
Housing kit (drive end)	D1FZ 11130-B (SE-131A)						F	G	H					
Consists of														
1-D0AZ 11K013-A Seal	1-D12F 11130-AB Housing													
1-C2DZ 11222-A Ring	1-D1FZ 11223-A Retainer													
1-Instruction Sheet														
POINT KIT - CONTACT	C2DZ 11134-A (SZ-601)	A	B	C	D	E								
Consists of														
1-C2DF 11068-A Insulator	1-C2DZ 11176-B Post													
1-C2DF 11116-B Spring	1-C2DF 11181-A Insulator													
	D1FZ 11134-A (SZ-693)						F	G	H					
Consists of														
1-C2DF 11068-A Insulator	1-D12F 11116-BA Spring													
1-C2DF 11181-A Insulator	1-41034-S Screw													
BEARING - DRIVE HOUSING	C2DF 11135-A (MC-113)	A	B	C	D									
15/32" I.D. x 17/32" O.D. x 5/8" long	C0DZ 11135-B D0AZ 11135-B (MC-209)	A	B	C	D		E	F	G	H				
INSULATOR - SWITCH SPRING	C2DF 11181-A	A	B	C	D	E	F	G	H					
RING - DRIVE STOP	C2DZ 11222-A (SZ-604)	A	B	C	D	E	F	G	H					
RETAINER - DRIVE STOP RING	C2DZ 11223-A (SZ-605)	A	B	C	D	E								
	D1FZ 11223-A (SZ-685)						F	G	H					
DRIVE ASSEMBLY - STARTER MOTOR - includes attaching parts	C4DZ 11350-B (SD-165)	A	B	C	D	E	F	G	H					
SCREW - POLE PIECE - flat head, socket -7/16"-14 x 15/32"	C2DF 11415-A	3	3	3	3	3	3	3	3					
INSULATOR - FRONT END PLATE	C2DZ 11431-A	4	4	4	4	4								
	D1FZ 11431-A						2	2	2					

* Alternate

NOTICE: When the parts list suffix is shown in the quantity required column, the quantity is one (1).

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS 4A THRU 4M												
		A	B	C	D	E	F	G	H	J	K	L	M	
GASKET - DRIVE HOUSING	C8VY 11003-A	A	B	C	D									
ARMATURE	D0AZ 11005-A (SM-335)	A	B	C	D									
WASHER - ARMATURE THRUST	C0DZ 11036-A (SZ-628)	A	B	C	D									
Drive pinion thrust	C6VY 11036-A (SZ-640)	A	B	C	D									
PLATE ASSY. - BRUSH END	C4TZ 11049-A (SH-172)	A	B	C	D									
BUSHING - BRUSH END PLATE	C4TZ 11052-A (MC-170)	A	B	C	D									
BRUSH - non-insulated	18 11056	A	B	C										
BRUSH SET	C0DZ 11057-B (SB-134)	A	B	C	D									
Consists of														
1-C5AF 11055-A Brush	1-C0DF 11056-B Brush	1-18	11056	Brush	1-24242-S	Screw								
SPRING - BRUSH	B 11059 D1AZ 11059-A	4	4	4										
INSULATOR - BRUSH HOLDER - not replaced	★C9AZ 11062-A		2	2	2									
LEVER ASSY. - DRIVE	C8VY 11067-A (SZ-647)	A	B	C	D									
INSULATOR - STARTER MOTOR SWITCH - 3/16" I.D. x 3/8" O.D. x 5/32" thick	C2DZ 11068-A	4	4											
CONNECTOR - SOLENOID	C8VY 11072-A (SZ-654)	A	B											
COIL - FIELD														
Complete	C8VY 11082-A (SC-405)	A	B	C	D									
Upper - not replaced (2-73)	★C8VY 11083-A	A	B	C	D									
Lower - not replaced (2-73)	★C8VY 11083-B	A	B	C	D									
Right - not replaced (2-73)	★C8VY 11085-A	A	B	C	D									
Left - not replaced (2-73)	★C8VY 11083-C	A	B	C	D									
BOLT - STARTER THRU	11091													
Bolt-hex. head-1/4" -20 x 6 9/16"	C3AZ 10120-A (GY-740)	2	2	2	2									
Lockwasher 1/4"	34805-S7(X62)	2	2	2	2									

**(FORD 12 VOLT 4 1/2" POSITIVE ENGAGEMENT -
SOLENOID ACTUATED STARTER)**

DESCRIPTION AND RESTRICTIONS	PART NUMBER	STARTER PARTS LISTS 4A THRU 4M												
		A	B	C	D	E	F	G	H	J	K	L	M	
TERMINAL KIT - FIELD	C8VY 11102-A (SZ-648)	A	B	C	D									
Consists of														
	1-C9AF 11102-A Terminal													
	1-C8VF 11449-B Sleeve													
SPRING - PLUNGER RETURN	C8VY 11103-B (SZ-655)	A	B	C	D									
GROMMET - TERMINAL INSULATOR	C8VY 11A120-A (SZ-651)	A	B	C	D									
SPACER - SOLENOID	C8VY 11A122-A	A	B	C	D									
BAND - STARTING MOTOR	C8VY 11126-A (SZ-650)	A	B	C	D									
HOUSING ASSY. - DRIVE END	C8VY 11130-B (SE-127)	A	B	C	D									
BEARING - DRIVE HOUSING	C6VY 11135-A (MC-189)	A	B	C	D									
RIVET - PIN LEVER	C8VY 11139-A	A	B	C	D									
RETAINER - DRIVE STOP	C2DZ 11222-A (SZ-604)	A	B	C	D									
RETAINER - DRIVE STOP RING	C2DZ 11223-A (SZ-605)	A	B	C	D									
DRIVE ASSEMBLY	C8VY 11350-A (SD-176)	A	B	C	D									
SOLENOID ASSY.	C8VY 11390-A (SW-675)	A	B	C	D									
PLUNGER ASSY. - SOLENOID	C8VY 11393-A (SZ-653)	A	B	C	D									
SCREW - POLE PIECE - flat head, socket-7/16"-14 x 15/32"	C2DF 11415-A	4	4	4	4									

NOTICE: When the parts list suffix is shown in the quantity required column, the quantity is one (1).