ETISALAT Plug & Play Firmware

D-link DIR-868L

User Manual



Wireless AC1750Dual Band Gigabit Router

System Requirements

Network Requirements

- An Ethernet-based cable or DSL modem
- IEEE 802.11ac/n/g/b/a wireless clients
- 10/100/1000 Mbps Ethernet

Web-based Configuration Utility Requirements Computer with the following:

- Windows®, Macintosh, or Linux-based operating system
- An installed Ethernet adapter

Browser Requirements:

- Internet Explorer 7 or higher
- Firefox 12 or higher
- Safari 4 or higher
- Chrome 20 or higher

Windows® Users: Make sure you have the latest version of Java Installed. Visit www.java.com to download the latest version.


mydlink Requirements

- IPhone/iPad/iPod touch (iOS 4.3 or higher)
- Android device (2.3.3 or higher)
- Computer with the following browser requirements:
- Internet Explorer 7 or higher
- Firefox 12 or higher
- Safari 5 or higher
- Chrome 20 or higher

iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc.

Version 1.0 Page 1 of 14


Hardware Overview LEDs

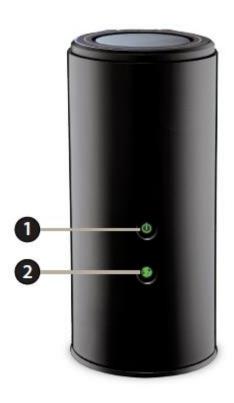

| 1 | A solid green light indicates a proper connection to the power supply. The light will blin the WPS process. The light will light solid orange during boot up. | | | |
|---|---|--|--|--|
| 2 | I INTARNAT I ELL | A solid light indicates connection on the Internet port. If the LED is orange, the connection is good but the router cannot connect to the Internet. | | |

Version 1.0 Page **2** of **14**

Hardware Overview Connections

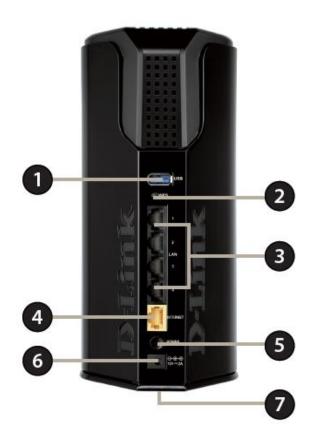

| 1 | USB 3.0 Port | Connect a USB flash drive to share content , or connect it to a USB printer to share it on your network. |
|---|-------------------------|--|
| 2 | WPS Button | Press to start the WPS process and automatically create a secure connection to a WPS client. |
| 3 | Gigabit LAN Ports (1-4) | Connect Ethernet devices such as computers, switches, storage (NAS) devices and game consoles. |
| 4 | Gigabit Internet Port | Using an Ethernet cable, connect your broadband modem to this port. |
| 5 | Power Button | Press the power button to power on and off. |
| 6 | Power Receptor | Receptor for the supplied power adapter. |
| 7 | Reset Button | Insert a paperclip in the hole for several seconds to reset the router to default settings. |


Version 1.0 Page **3** of **14**

Admin Login Page

If this is your first time installing the router, open your web browser and, enter The IP address of the router (default: http://192.168.1.1)




a. Give the default Username and Password to login to the router (*Username and Password will be mentioned on the sticker at the back of your router*)

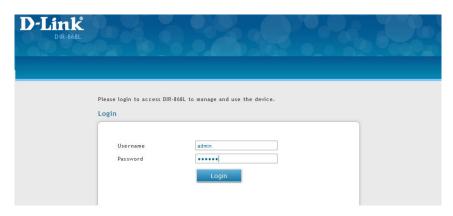

Note: If no admin password mentioned, use "admin" as username and password.

b. To Change "admin" password

Go to Administration » Users and edit admin.

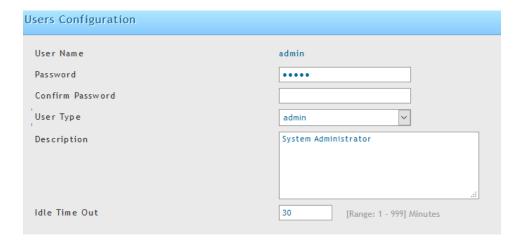

Version 1.0 Page 4 of 14


1) WAN Setting (Setup INTERNET Connection)

To configure wan settings,

Go to Network » WAN » WAN IPv4 Configuration

a) Connection Mode – Auto via ACS (For ETISALAT Plug & Play Connection)

*All configuration including username, password and Vlan Id information will be pushed by Etisalat ACS.

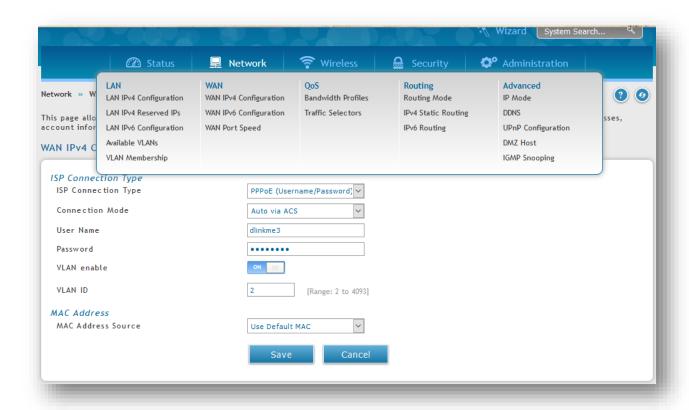

Version 1.0 Page 5 of 14

b) ISP Connection type - PPPoE (Manual)

Give the Username and Password provided by your ISP in the User Name and Password column and save the settings, enable Vlan only if it is required by ISP.

| | Status | Network | ? Wireless | Security | • Administration | | | | | | |
|----------------|--|----------|--|------------|--------------------------------|------------|--|--|--|--|--|
| Network » WAN | letwork » WAN » WAN IPv4 Configuration | | | | | | | | | | |
| | | | insure that you have t ded by your ISP or net | | n information such as the IP A | Addresses, | | | | | |
| WAN IPv4 Con | figuration | | | | | | | | | | |
| ISP Connection | on Type | | | | | | | | | | |
| ISP Connection | on Type | PPPoE (I | Jsername/Password) 🗸 | | | | | | | | |
| Connection A | Node | Manual | configuration \vee | | | | | | | | |
| User Name | | usernam | e | | | | | | | | |
| Password | | ••••• | •• | | | | | | | | |
| Service | | | | (Optional) | | | | | | | |
| Authenticatio | on Type | Auto-ne | gotiate | | | | | | | | |
| Reconnect M | ode | Alwa | ys On OOn Demand | | | | | | | | |
| Domain Name | System (DNS) Sei | vers | | | | | | | | | |
| DNS Server So | ource | Get Dyn | amically from ISP | | | | | | | | |
| VLAN enable | | ON III |] | | | | | | | | |
| VLAN ID | | 2 | [Range: 2 to 4093] | | | | | | | | |
| MAC Address | | | | | | | | | | | |
| MAC Address | Source | Use Def | ault MAC ~ | | | | | | | | |
| | | | | | | | | | | | |


Version 1.0 Page **6** of **14**

2) LAN Setting & DHCP

To change lan setting and DHCP,

Go to Network » LAN » LAN IPv4 Configuration

. By default the IP address is 192.168.1.1 & DHCP Pool is 100 $^{\sim}254$

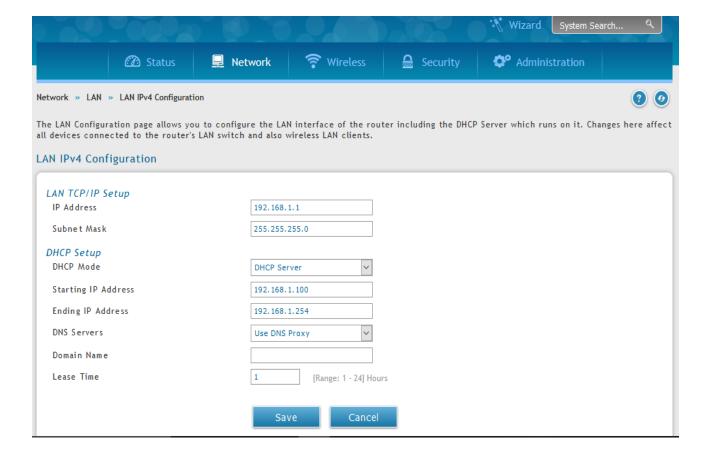

Version 1.0 Page **7** of **14**

3) Wireless Configuration


Go to Wireless » Profiles

Then Right click and Edit 2.4GHz or 5GHz to change the SSID and Security.

a. 2.4 GHz

| 1 | D-Link [®] | | Logged in as: admin (admin) Serial: EC22801FDCB6 Firmware: ET868-1.01b69 |
|-----|---------------------------------|-----------------|---|
| | Wireless Profiles Configuration | | (X) |
| | Profile Name | D-Link Test | |
| L | SSID | DIR-868L_2.4GHz | [Length: 1 -32] |
| Wir | Broadcast SSID | ON III | |
| A p | Security | WPA+WPA2 | |
| Pr | Encryption | TKIP+CCMP ~ | |
| SI | Authentication | PSK ~ | h |
| | WPA Password | ••••• | |
| | | | * |
| d | | | |
| g | | | |
| g | | | |
| SI | | | Save |
| B | | | |
| | Add New Profile | | |
| | | | |

b. 11AC 5 GHz

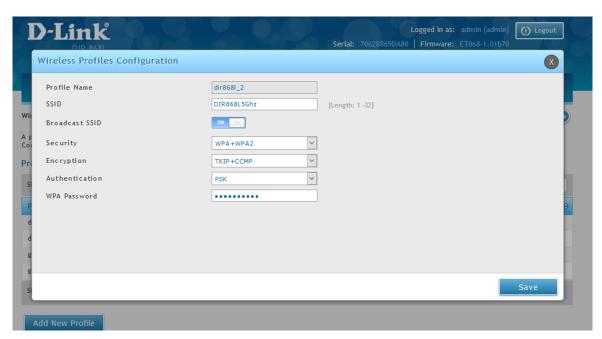


Version 1.0 Page 8 of 14

4) Port Forwarding

a. To create port forwarding rules,

Go to Security » Firewall » Port Forwarding and then "Add New Port Forwarding Rule",

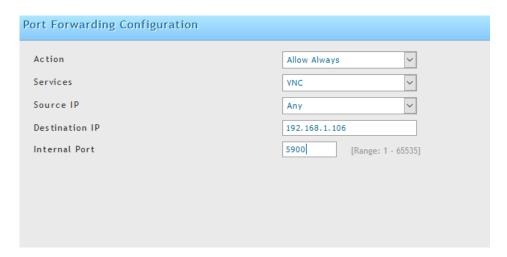

You can choose the predefined services or the added custom services.


| | a |) Status | <u>=</u> | Network | | SWireless | | Security | Q ° | Admii | nistration | 1 | |
|---|--|----------|----------|---------|---|-----------|---|----------------|------------|-------|------------|--------|--|
| Security » Firewall » Port Forwarding | | | | | | | | | | | | | |
| Port forwarding f 21). | ort forwarding feature allows external devices to pass through your router's firewall for services such as a web server (port 80), FTP server (1). | | | | | | | | | | | | |
| Port Forwardi | ng | | | | | | | | | | | | |
| Show 10 V | entries | | | | | | | | | | | | |
| Action | Û | Service | ⇔ | Status | ⇔ | Source IP | ⇔ | Destination IP | | ⇔ | Interna | l Port | |
| Allow Always | | VNC | | Enabled | | ANY | | 192.168.1.106 | | | 5900 | | |
| Showing 1 to 1 of 1 entries 1 Next > La | | | | | | | | | | | | | |
| Add New Port Forwarding Rule | | | | | | | | | | | | | |


b. Custom services

Go to Security» Firewall » Custom Services and "Add New Custom Service",

Version 1.0 Page **9** of **14**

^{*}Custom service is required if the service is not listed on the available services.

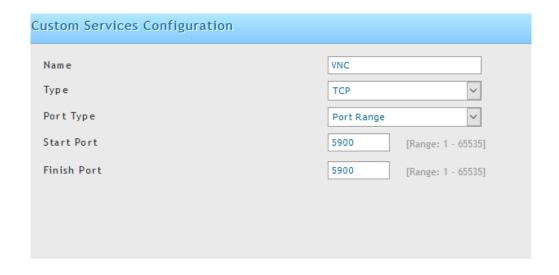

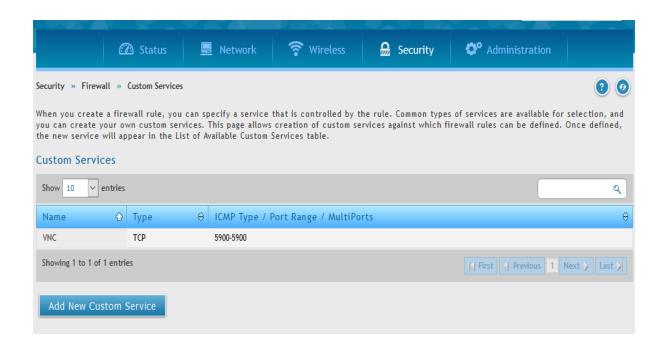

Version 1.0 Page **10** of **14**

5) Firewall Rules

To add firewall rule to allow or deny network access, **go to Security » Firewall » Firewall Rules IPv4** and "Add New IPv4 Firewall Rule",





Version 1.0 Page **11** of **14**


6) Parental Control

First Enable Content Filtering

Go to Security » Content Filtering

| Security » Content Filtering | | 9 | | | | | | |
|--|-------------|---|--|--|--|--|--|--|
| This content filtering option allows the user to block access to certain Internet sites. Up to 32 key words in the site's name (web site URL) can be specified, which will block access to the site. To setup URLs, go to Approved URLs and Blocked Keywords page. | | | | | | | | |
| Content Filtering | | | | | | | | |
| Enable Content Filtering | ON III | | | | | | | |
| | Save Cancel | | | | | | | |

Then Go to Security » Content Filtering » Blocked Keywords and "Add New Blocked Keyword",

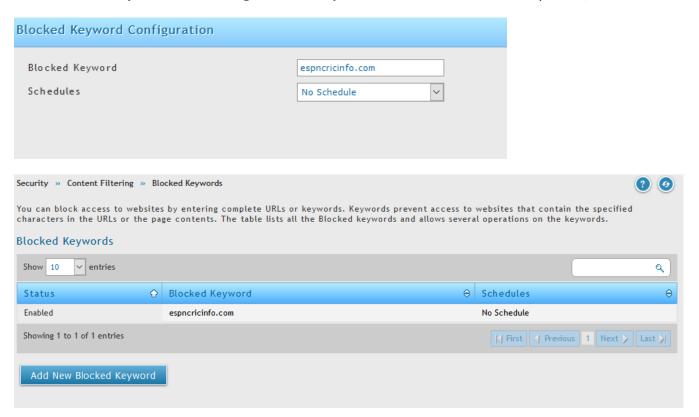

Version 1.0 Page 12 of 14


We can also Schedule the URL blocking,

Go to Security » Firewall » Schedules and "Add New Schedule ",

| Schedule Configuration | |
|------------------------|----------------------|
| Schedule Name | Work |
| Time of Day | |
| Time of Day | Custom |
| Start Time | |
| Start Time | 07:30 AM |
| | HH MM AM/PM |
| | 07 29 08 30 AM |
| End Time | |
| End Time | 04:30 PM |
| | HH MM AM/PM |
| | 03 29 AM 04 30 PM |

| Security » Firewall » Schedules | | | | | | | | |
|--|---------------------|---|--------------------------------------|--|--|--|--|--|
| When you create a firewall rule, you can specify a schedule when the rule applies. The table lists all the Available Schedules for this device and allows several operations on the Schedules. | | | | | | | | |
| Schedules | | | | | | | | |
| Show 10 v entries Q | | | | | | | | |
| Name 💮 | Day of Week | ⊖ | Time of Day Θ | | | | | |
| Work | Mon,Tue,Wed,Thu,Sun | | 07:30 AM - 04:30 PM | | | | | |
| Showing 1 to 1 of 1 entries | | | First Previous 1 Next Last | | | | | |
| Add New Schedule | | | | | | | | |

Then Go to Security » Content Filtering and Select the schedule you have created,

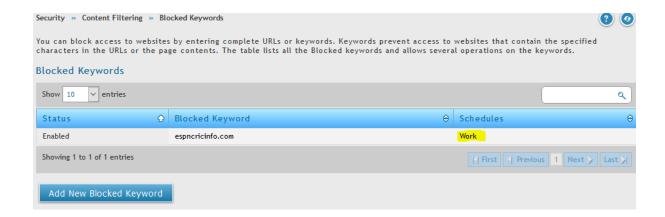

Version 1.0 Page **13** of **14**

7) <u>Dynamic DNS</u>

To enable Dynamic DNS Go to Network » Advanced » DDNS

| S | |
|--------------------------------|--------------|
| Network Name | Internet |
| Select the Dynamic DNS Service | dyndns.org ~ |
| Status | |
| Server Address | dyndns.org |
| Host and Domain Name | Dlink |
| Username | dir |
| Password | ••• |
| Confirm Password | |
| Use Wildcards | OFF |
| Update Period | |

8) To Reset & Reboot the router

Go to Administration »Firmware » Backup/Restore

| D-Lit | 1 k ° ≀-868L | | | Serial: 7062B869DA8 | Logged in as: admin (admin) Firmware: ET868-1.01b70 Wizard System Se | |
|-----------------------------------|---|-------------------------|---------------------|------------------------|---|------------|
| | Status Output Description Output Descripti | Network | 🛜 Wireless | Security | O Administration | |
| Administration » | Firmware » Backup / | Restore | | | | ? • |
| This page allows reboot the route | | tion related operations | which includes back | up, restore and factor | y default. This page also allo | ws user to |
| Backup / Rest | core | | | | | |
| Save Current | Settings | Back | up | | | |
| Restore Save | d Settings | Browse | . No file selected. | | | |
| | | Resto | pre | | | |
| Factory Defa | ult settings | Defa | ult | | | |
| Reboot | | Rebo | oot | | | |

-----END-----

Version 1.0 Page **14** of **14**