EUT Internal Photos

Figure 8
Internal View (Removed Battery Cover)



Figure 9
Internal View (Removed Cover)







Figure 11 Internal View (Internal Board, Front View)

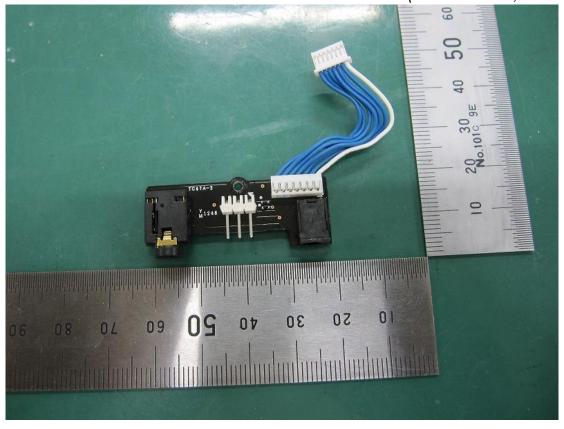
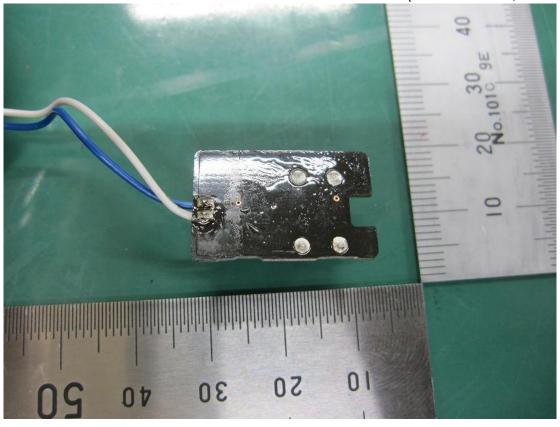


Figure 12 Internal View



Figure 13 Internal View (Internal Board, Back View)





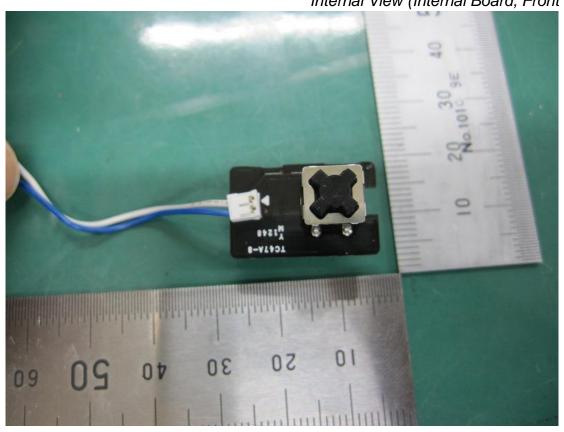
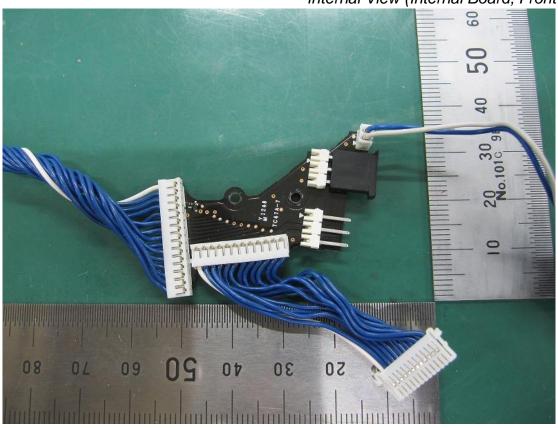


Figure 15 Internal View (Internal Board, Front View)





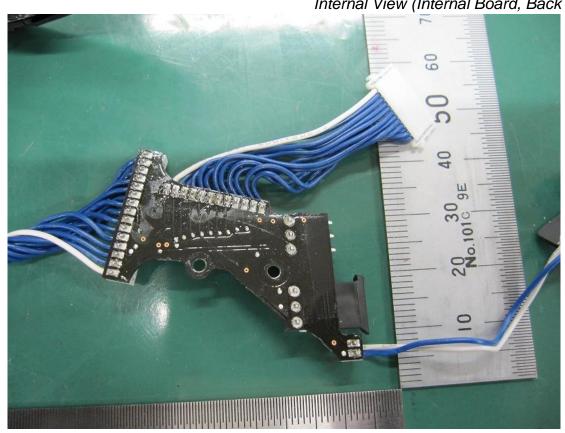
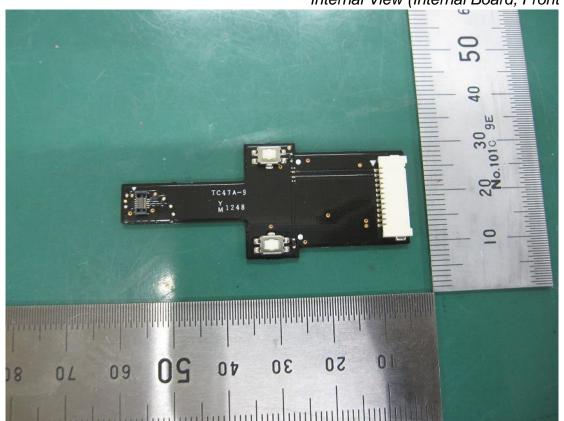


Figure 17
Internal View (Internal Board, Front View)





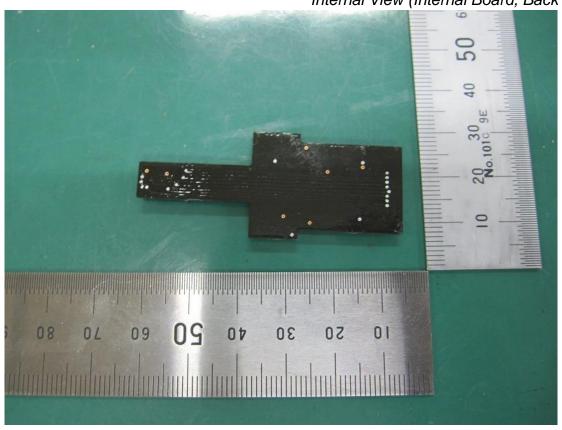


Figure 19 Internal View (Antenna Connect View)

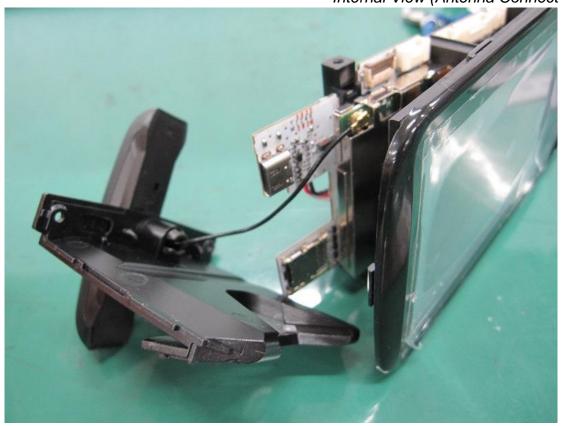






Figure 21 Internal View (Antenna View)

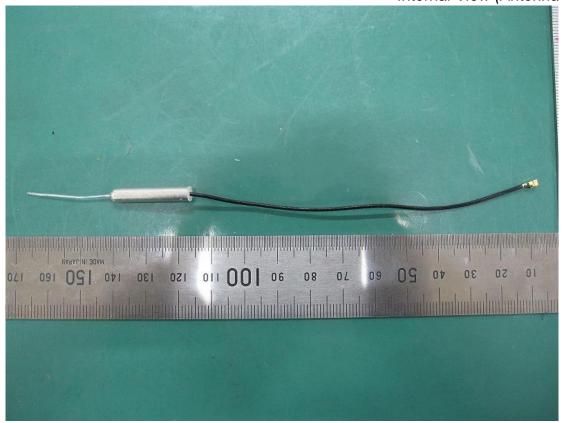


Figure 22 Internal View



Figure 23 Internal View (Internal Board, Front View)

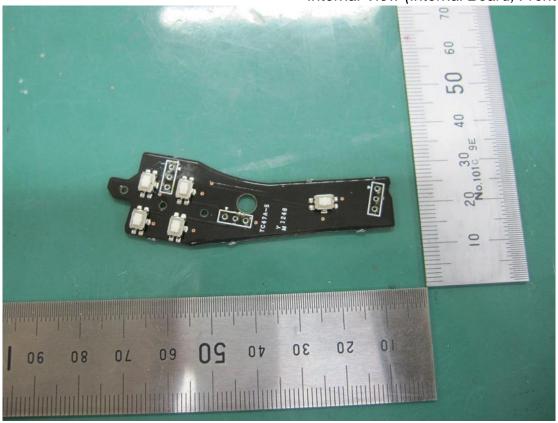






Figure 25 Internal View (Internal Board, Front View)







Figure 27 Internal View





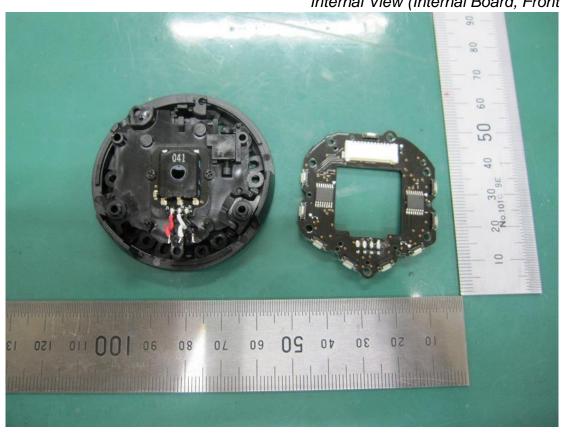


Figure 29 Internal View (Internal Board, Back View)



Figure 30 Internal View



Figure 31
Internal View (Removed LCD Panel, LCD Panel/Front View)





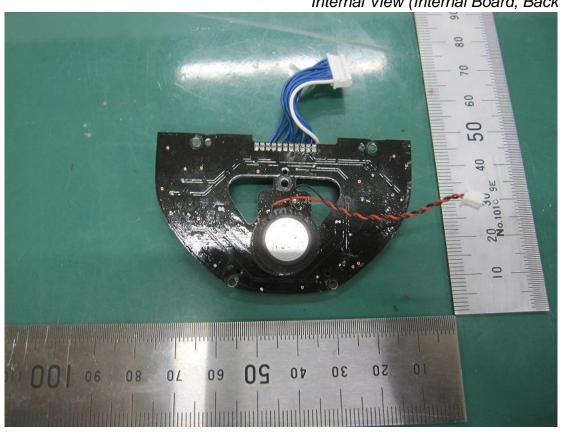


Figure 33 Internal View (Internal Board, Front View)

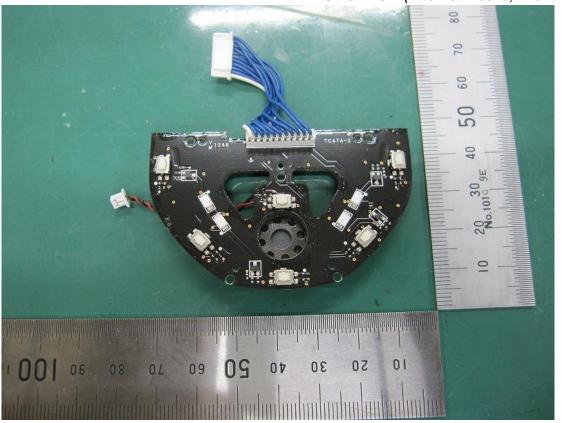


Figure 34
Internal View

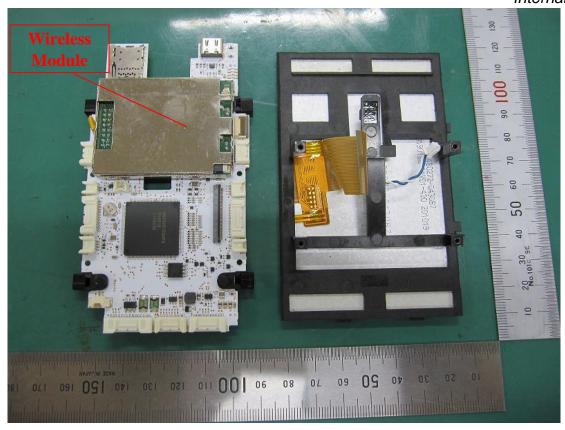


Figure 35
Internal View (Removed LCD Panel, LCD Panel/Back View)



Figure 36
Internal View (Removed Wireless Module Shielded Case)

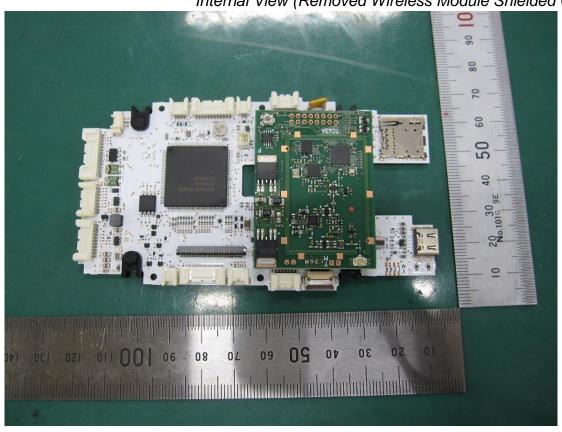
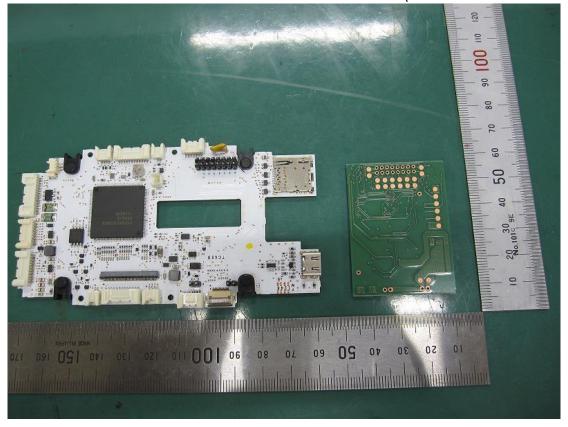


Figure 37
Internal View (Removed Wireless Module)





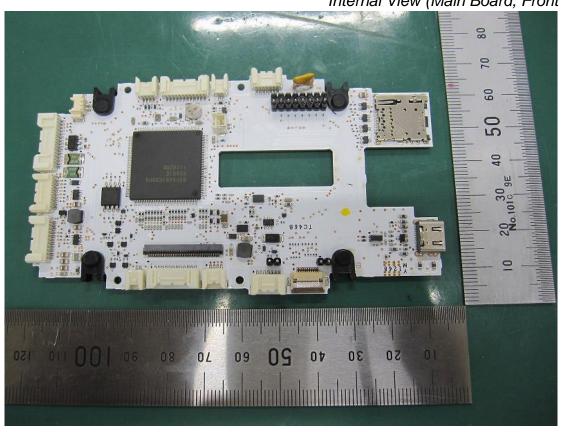


Figure 39
Internal View (Main Board, Back View)

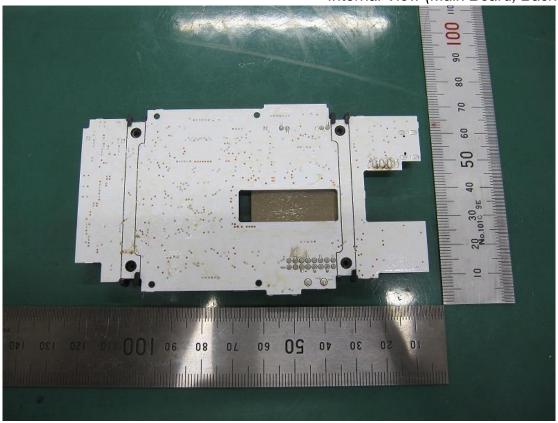


Figure 40 Internal View (Wireless Module, Front View)

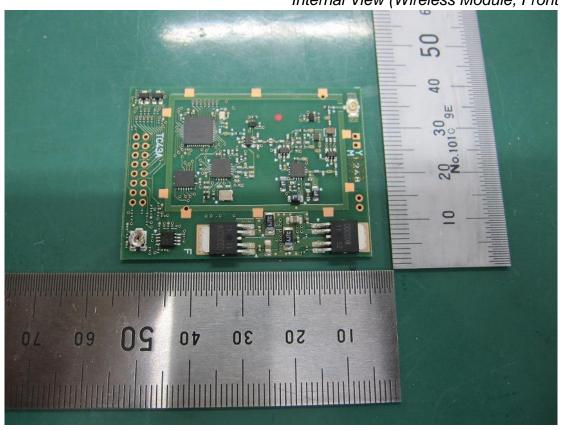


Figure 41 Internal View (Wireless Module, RF IC View)

