

Z723EL

Wireless Home Phone Base Station **USER MANUAL**

Z079584508939

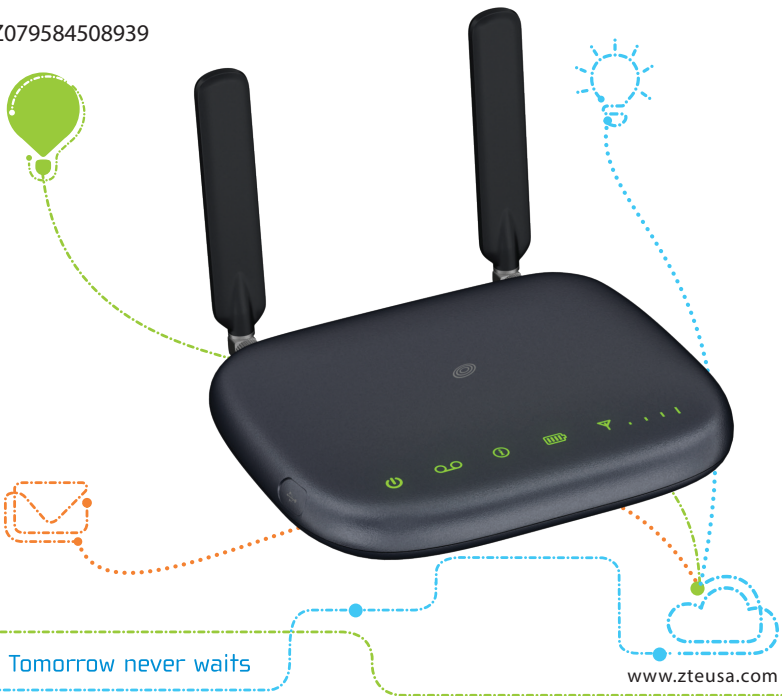 


TABLE OF CONTENTS

Getting Started.	1
Know Your Device.	1
Install Your Battery	4
Charge Your Battery	5
Status Indicators.	6
Device Installation	8
Using Your Z723EL	9
Power On or Off	9
Connect Your Z723EL to a Phone	9
Phone Calls	10
Adjust Volume	10
Manage Your Voicemail	11
Set Up a Conference Call	12
Use Call Waiting	12
Forward Incoming Calls	13
Use TTY Mode	14
Use Advanced Settings	15
Specifications.	16
Troubleshooting.	17

Copyright © 2017 ZTE CORPORATION
All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.


TABLE OF CONTENTS

Regulatory and Safety Information.	18
FCC Compliance.	18
RF Exposure	19
CTIA Requirements	19
Safety Precautions	20
Cleaning and Maintaining	22
Warranty	23
Limited Warranty	23
Limitation of Liability.	24

GETTING STARTED



Know Your Device

 Your Z723EL Wireless Home Phone Base Station lets you make calls with your wireless service provider's cellular network.

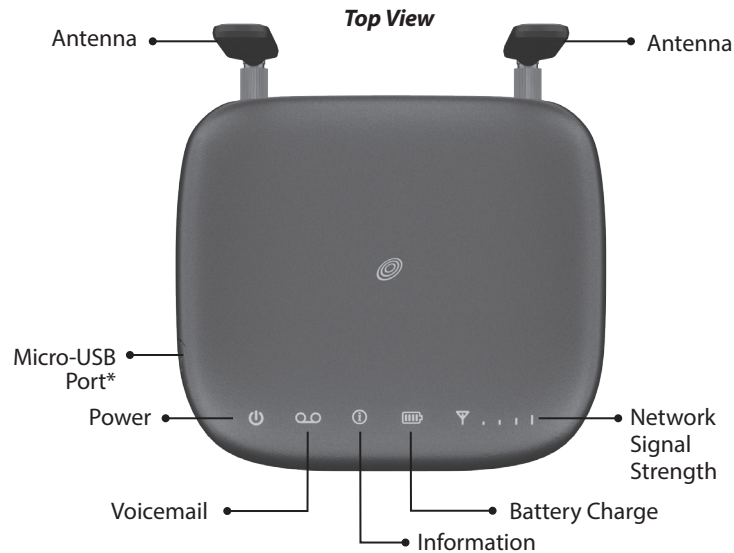

*For use by manufacturer.

  GETTING STARTED

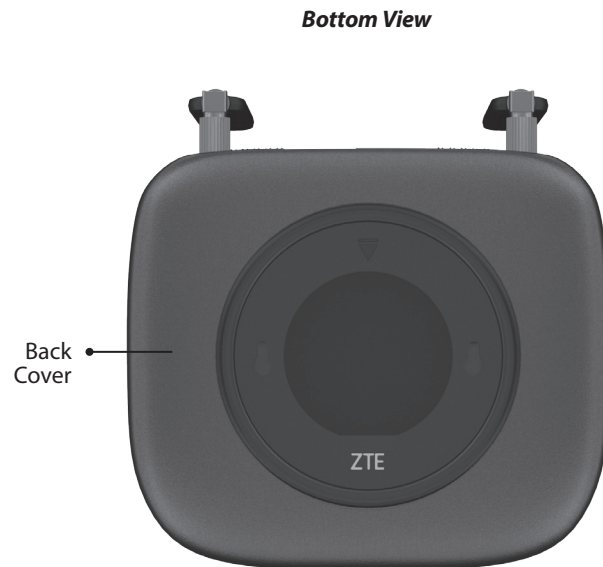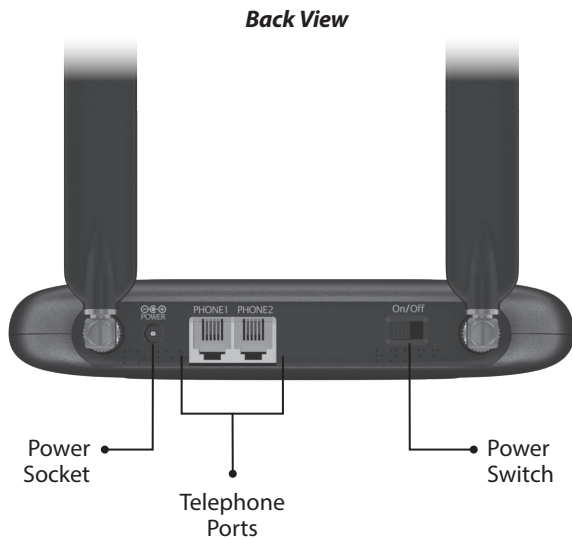

Note: Your Z723EL comes with an installed nano-SIM card.

GETTING STARTED

Install Your Battery

1. With the back cover facing upright, sandwich the device between your hands. Slide your top hand down to remove the back cover.



 
2. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.



3. Replace the back cover.

Charge Your Battery

1. Connect the adapter to the power socket on the Z723EL. Do not force the connector into the power socket.
2. Connect the charger to a standard AC power outlet.

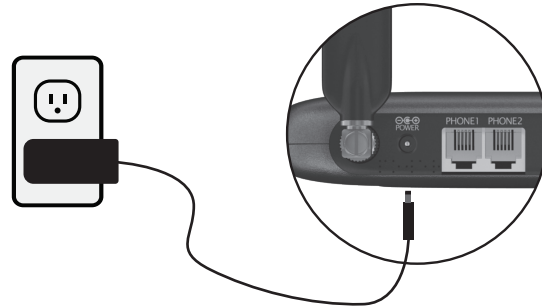






3. Disconnect the charger when the battery is fully charged.

GETTING STARTED

Status Indicators

The indicator lights show the device's status.

INDICATOR	STATUS	DESCRIPTION
 Power	Green Solid	On
	Green Blinking	Shutting down
	No Light	Off
 Voicemail	Green Blinking	New voicemail message(s)
	No Light	No voicemail message(s)
 Information	Green Solid	Software update in progress
	Green Rapid Blinking	Ready to update
	Green Slow Blinking	Software update successful
	Red Blinking	Update failed


INDICATOR	STATUS	DESCRIPTION
 Battery Charge	Green Solid	High (battery in use)
	Green Blinking	High (charging)
	Yellow Solid	Medium (battery in use)
	Yellow Blinking	Medium (charging)
	Red Solid	Low (battery in use)
	Red Blinking	Low (charging)
	No Light	No battery installed
 Network Signal Strength	Green Solid (icon and bars)	Signal strength (low to high)
	Red Blinking (icon and bars)	Device is not working normally
	Red Solid (icon), No Light (bars)	Searching for service; limited to no service; LTE or IMS registration failed

GETTING STARTED

Device Installation

The Z723EL works with your wireless service provider's cellular network instead of your home's phone jacks.

 Position your Z723EL in a location that has a strong signal, typically near a window or outside wall.

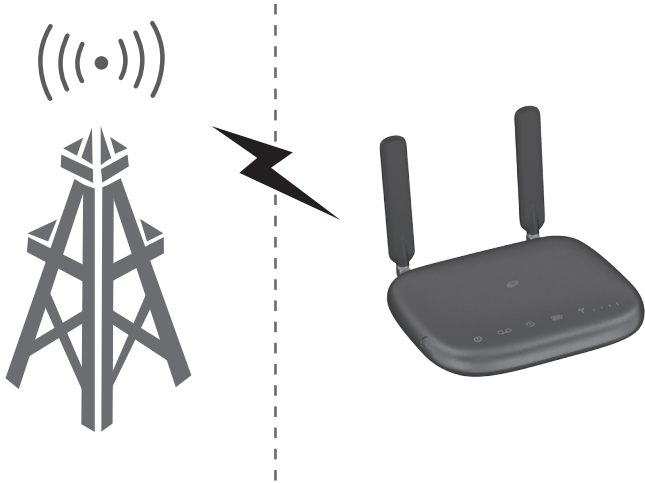

USING YOUR Z723EL

Power On or Off

 
- To power on your Z723EL, slide the **Power Switch** to the **On** position.
- To power off, slide the **Power Switch** to the **Off** position.



Note: When powered off, the Z723EL will not send or receive calls.

Connect Your Z723EL to a Phone

Using a phone cable (not included), connect your home phone to the **PHONE 1** port.

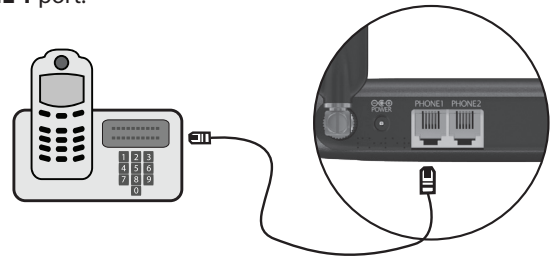

Note: The **PHONE 2** port can be used to connect an additional phone or cordless base station. All telephones connected to the Z723EL will share the same telephone number.

USING YOUR Z723EL

Phone Calls

Place a Call by Dialing

1. Pick up the handset of the connected home phone.
2. Dial the phone number.
3. Wait 4 to 8 seconds for the call to be connected automatically.

Note: You will need to dial 10 digits, even for local numbers.

Answer a Call

When the phone rings, pick up the handset to answer it. If the telephone has a hands-free function, you can answer the call by pressing the hands-free button.

End a Call

During a call, hang up your home phone by pressing a hands-free function or returning the phone receiver to its base.

Adjust Volume

You can adjust the call volume using the volume controls of any connected phone or the Z723EL's Volume Setting Mode. There are five settings, volume levels 1-5; level 4 is the default.

1. While on a call, quickly press ** or ## to enter Volume Setting Mode.
2. Press * to turn the volume down or # to turn the volume up.

3. To exit Volume Setting Mode, press any other key or wait 5 seconds.

Note: If your home phone(s) have volume controls, they are independent of the Z723EL's Volume Setting Mode.

Manage Your Voicemail

Your Z723EL can divert calls to voicemail, so callers can leave voicemail messages when they cannot reach you.

When a voicemail message is waiting, the voicemail indicator on the Z723EL flashes, and an intermittent dial tone can be heard when any connected handset is picked up to place a call.

Check Your Voicemail Messages

1. Dial **1** or ***86** on the connected home phone. Wait 4 to 8 seconds to be connected to your voicemail inbox.
2. If prompted, enter your voicemail password.
3. Follow the prompts to listen to and manage your voicemail messages.

Set Voicemail Options

1. Call voicemail, as explained above.
2. Follow the system prompts to set options such as a password and voice recording.

USING YOUR Z723EL

Set Up a Conference Call

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call. With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, press the **Flash** (or **Talk**) key on your phone.
3. When you hear a dial tone, dial the second number.
4. When you're connected to the second party, press the **3** key and the **Flash** (or **Talk**) key to complete the three-way connection.
5. To end the conference call, hang up your home phone or return the phone receiver to its base.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Use Call Waiting

Call waiting allows you to be notified of incoming calls while on a call.

To place the current call on hold and accept the incoming call, press the **Flash** (or **Talk**) key. You can then press the **Flash** (or **Talk**) key anytime to switch back and forth between calls.

Notes:

If your phone does not have a Flash (or Talk) key, use the off-hook mechanism supported by your phone instead.

The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Forward Incoming Calls

The call forwarding feature allows you to forward your incoming calls to another phone number, such as your mobile phone or office number. If you've enabled call forwarding, your home phone will not receive calls until you turn this service off.

Note: Airtime applies to forwarded calls even if you send the call to landline phones. Contact your service provider for assistance on how to set an available option (**Always forward**, **When busy**, **When unanswered**, or **When unreachable**).

USING YOUR Z723EL

Use TTY Mode

Your Z723EL is compatible with TTY devices. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone.

To set the TTY mode or turn TTY support off, dial ***983*889*n#** on your connected phone, replacing **n** with one of the following numbers:

- Replace **n** with **0** for **TTY Off** mode. Users who can hear and talk can turn off TTY support.
- Replace **n** with **1** for **TTY Full** mode. Users who cannot talk or hear can use this mode to send and receive text messages through a TTY device.
- Replace **n** with **2** for **VCO** mode. Users who can talk but cannot hear can use this mode to talk through the phone and receive responses via text messages.
- Replace **n** with **3** for **HCO** mode. Users who can hear but cannot talk can use this mode to listen to calls and respond via text messages.

Use Advanced Settings

COMMAND	DESCRIPTION
*983*3284#	Reset your device to factory settings.
*983*238*xx#	Set the auto-dialing time. Replace xx with a number indicating the desired time in seconds, from 4 through 12. The default time is 4 s.
*983*338*xx#	Set the flash diagnostic time. Replace xx with a number indicating the desired time in milliseconds, from 200 through 1200. The default time is 700 ms.
*983*808*n#	Set the data transmission mode for Caller ID. Replace n with 0 for FSK or 1 for DTMF . The default mode is FSK.

SPECIFICATIONS

DEVICE	
Model	Z723EL
Dimension	1.11 x 6.30 x 5.51 in.
Weight	Approximately 13.5 oz. (383.5 g)
Frequency	1.1 G
Supported Technology	LTE

BATTERY	
Limited Charge Voltage	4.35 V
Type	Lithium-ion
Capacity	2300 mAh
Talk Time	Approximately 3 hours
Standby Time	Approximately 13 hours

TROUBLESHOOTING

PROBLEM	SUGGESTED SOLUTION
There is no dial tone.	After turning the Z723EL on, wait 1 to 2 minutes before making a call.
	Move the device to a location with better signal reception.
The connection sounds distorted/noisy.	Remove any electrical appliances that are too close to the phone or router.
	The cable or phone set might be damaged. Try using a different cable or phone, or contact the dealer.
There is a busy tone when the phone is removed from the receiver.	Place the phone back on the receiver and try again.
After dialing, there is no tone.	After dialing, wait 4 to 8 seconds for the call to connect.

For more assistance, please visit www.zteusa.com.

REGULATORY AND SAFETY INFORMATION

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radiation exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

The FCC grant can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: SRQ-Z723EL**.

CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

REGULATORY AND SAFETY INFORMATION

- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.

The device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Safety Precautions

Some electronic devices may be susceptible to electromagnetic interference. Position the device away from TV sets, radios, and other electronic equipment to avoid electromagnetic interference.

- The Z723EL may interfere with medical devices such as hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using the Z723EL.
- Please keep yourself at least 20 cm away from the Z723EL.
- Do not use your Z723EL in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.

- Only use original accessories, or accessories that are authorized by ZTE, with the Z723EL. Unauthorized accessories may affect the Z723EL performance, damage the Z723EL, or cause danger to you.
- Do not attempt to dismantle the Z723EL. There are no user serviceable parts.
- Do not allow the Z723EL or accessories to come into contact with liquid or moisture at any time. Do not immerse the Z723EL in any liquid.
- Do not place objects on top of the Z723EL. This may lead to overheating of the device.
- The device must be placed in a ventilated environment for use.
- Do not expose the Z723EL to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the Z723EL or charger.
- Keep the length of the cable between the Z723EL and the phone less than 32 feet.
- The Z723EL is for indoor use only. Do not use the Z723EL outside. Do not connect telephone extensions that run outside of the building. These can result in lightning damage to your unit.

WARNING: This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.

REGULATORY AND SAFETY INFORMATION

Cleaning and Maintaining

- Use an antistatic cloth to clean the Z723EL. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your Z723EL before you clean it.
- Use the Z723EL within the temperature range of 14°F to 131°F (-10°C to 55°C), and store within the temperature range of -4°F to 149°F (-20°C to 65°C). The humidity range is 5% to 95%.
- Do not use your Z723EL during a thunderstorm. Remove the main power pack from the wall socket.
- Do not take out your nano-SIM card unnecessarily. The nano-SIM card may be easily lost or can be damaged by static electricity.

WARRANTY

Limited Warranty

This warranty does not apply to defects or errors in the Product caused by:

- i. Reasonable abrasion.
- ii. End User's failure to follow ZTE's installation, operation, or maintenance instructions or procedures.
- iii. End User's mishandling, misuse, negligence, improper installation, disassembly, storage, servicing, or operation of the Product.
- iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
- v. Power failure, surge, fire, flood, accident, action of third parties, or other event outside ZTE's reasonable control.
- vi. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
- vii. Any other cause beyond the range of normal usage intended for the Product.

End User shall have no right to reject or return the Product, or receive a refund for the Product from ZTE under the above-mentioned situations.

This warranty is End User's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

WARRANTY

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental, or consequential damages resulting from or arising out of or in connection with use of this product, whether or not ZTE had been advised, knew, or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

