

PRIMERGY TX140 S1

System configurator and order-information guide

November 2012

Contents

Instructions

Configuration diagram

Configurator

Software Configurator 32-bit and 64-bit

- I Basic unit
- II Processor
- III Memory
- **IV** Graphics
- V Energy Star restrictions
- VI Accessible drives
- VII Hard disk drives
- VIII SAS / SCSI Controller
- IX Disk array
- X Communication/Network
- XI System management options
- XII Miscellaneous
- XIII Country specific power cords

Change report





PRIMERGY Server

Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

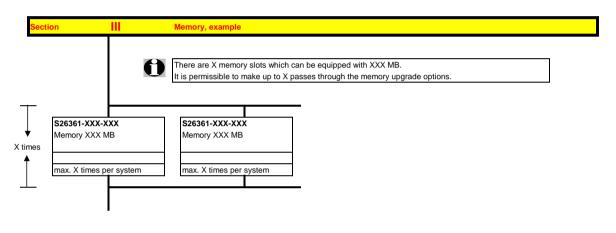

In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information.



Further information in the internet see:

http://ts.fujitsu.com/products/standard_servers/index.html (internet)


https://partners.ts.fujitsu.com/com/order-supply/configurators/primergy_config/current/Pages/default.aspx

(extranet)

Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted


Configuration diagram PRIMERGY TX140 S1 LFF (3.5") System Unit

System unit (1)

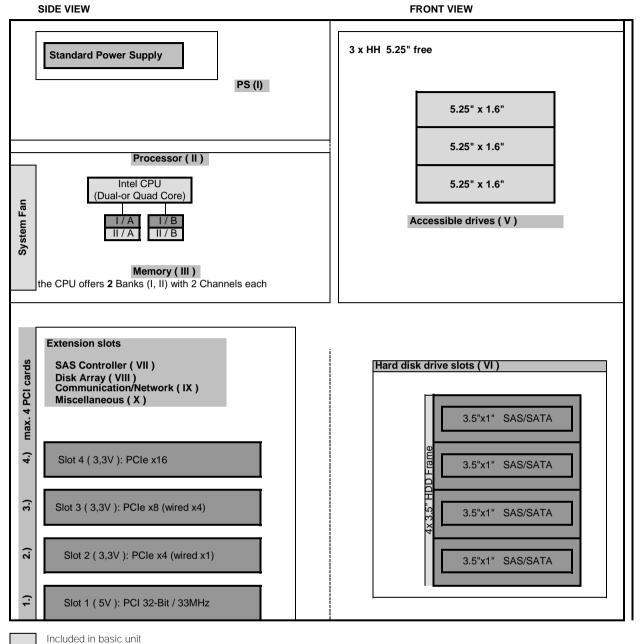

Option

Configuration diagram PRIMERGY TX140 S1 LFF (3.5") System Unit

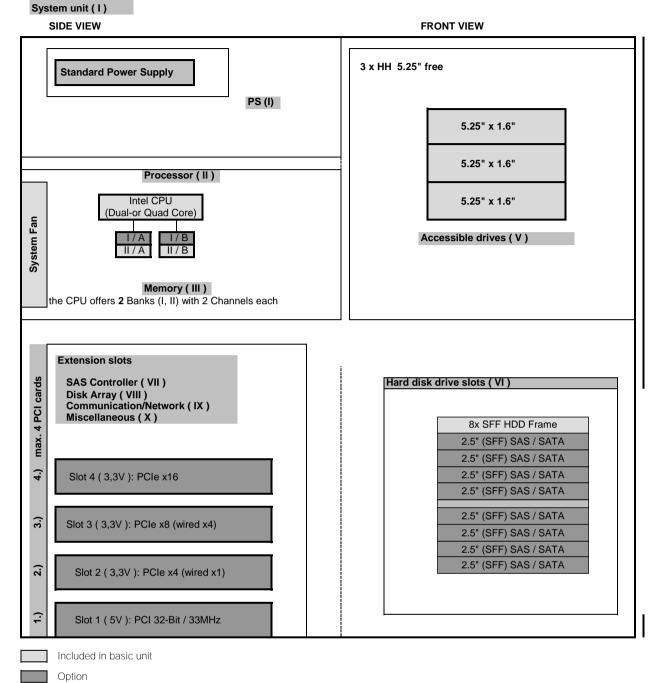

Section

Basic unit

System unit, Rack and Floorstand, including:

Two lockable front covers in floorstand version

Door #1 for accessible drive bays Door #2 for hot plug HDD bays

Both doors may be locked or door #1 may be left open while door #2 is still locked

* backplane with 4 bays for hot-plug HD's. Type depending on base unit:

Type 1: 4x hot plug LFF (3.5") SAS or SATA HDD (LFF base units only)

Type 2: 8x hot plug SFF (2.5") SAS or SATA HDD (SFF base units only)

- * 1 power supply (Standard Ps with 300W)
- * System fan (No Hot-plug, No redundancy)
- * 3 bays 5.25" for accessible drives (half Hight)
- Systemboard D3049 with:
- heat pipe for the CPU
- * Chipset Intel® C202 (codenamed Bromolow Cougar Point Essential)
- * 4 PCI slots: 1 x PCle x16 Gen2
 - 1 x PCle x4 (x8 connected) Gen2 1 x PCle x1 (x4 connected) Gen2
 - 1 x 32Bit / PCI 33MHz, (5V)
- 4 memory slots for max. 32GB with 4x 8GB unbuffered DDR3 RAM or
- Memory is divided into 4 DIMMs (2 channels with 2 slots per channel)
- First Memory (one module) has to be selected for an orderable basic unit
- Memory upgrade is possible module wise
- SDDC (Chipkill) is not supported
- * SATA-Controller on board (supporting RAID 0/1)
- * 2x1 Gbit Ethernet LAN on board (Intel Hartwell and Intel Lewisville) with ToE;
- and iSCSI boot integrated in System BIOS as selectable option
- * iRMC S3 (integrated Remote Management Controller) on-board server management controller with dedicated 10/100Management LAN-port and

integrated graphics controller (max. Resolution: 1600 x 1200 at 16 bpp)


Interfaces:


- * 1x RS-232-C (9-pin) (usable for BMC or OS or shared)
- * 1x VGA (15 pin)
- * 10x USB 2.0 (UHCI) with 480MBit/s (6x external at the rear, 2x external at the frontside,
- 2x internal USB Interfaces for UFM, backup device or int. Card reader, no USB wakeup)
- * 2x LAN RJ45, 1x Service-LAN RJ45 switchable


internal Cables:


- 1. SATA cable for BD/DVD.
- 2. Cable for HDD Backplane
- ServerView Suite Software package incl. ServerStart, ServerBooks, Management Software and Updates
- * Documentation engl. (multilingual on CD)


Α

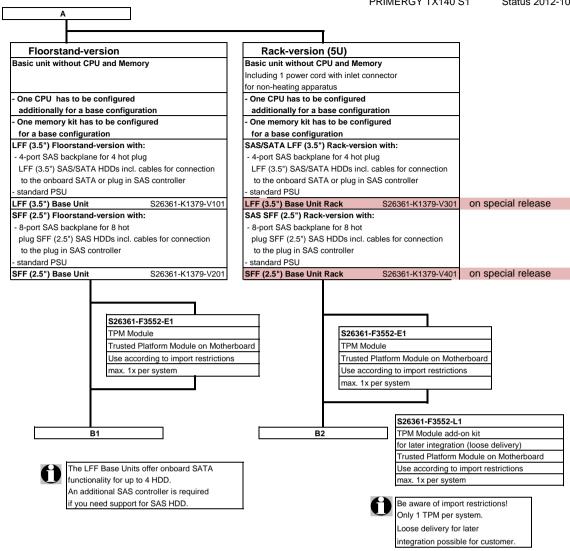


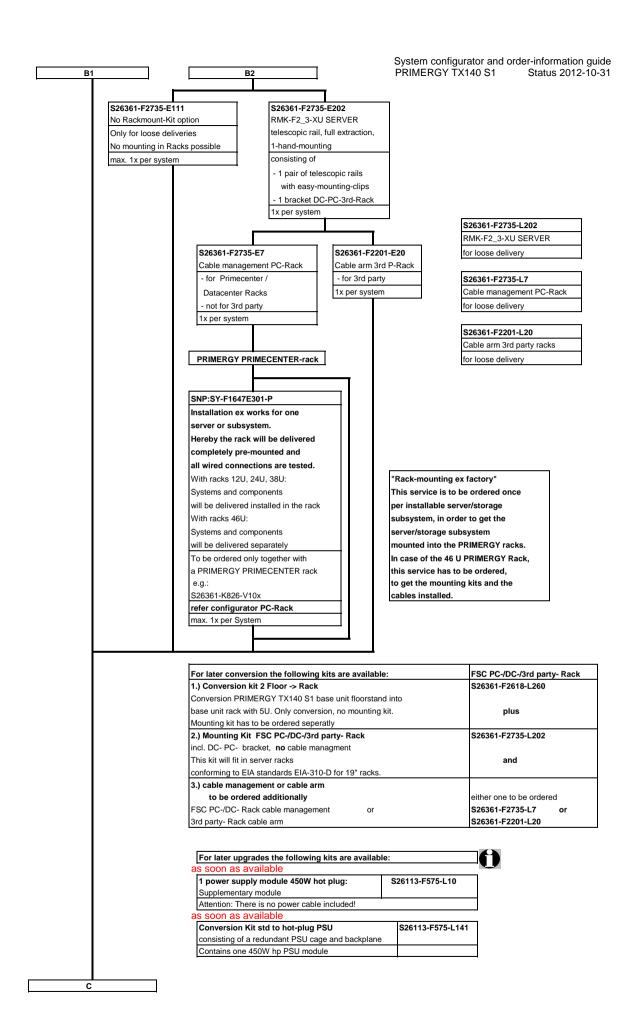


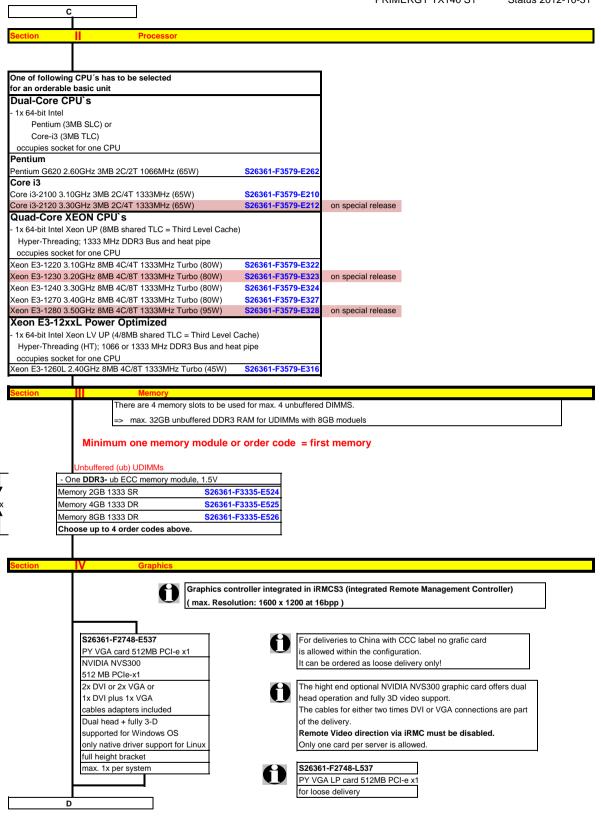


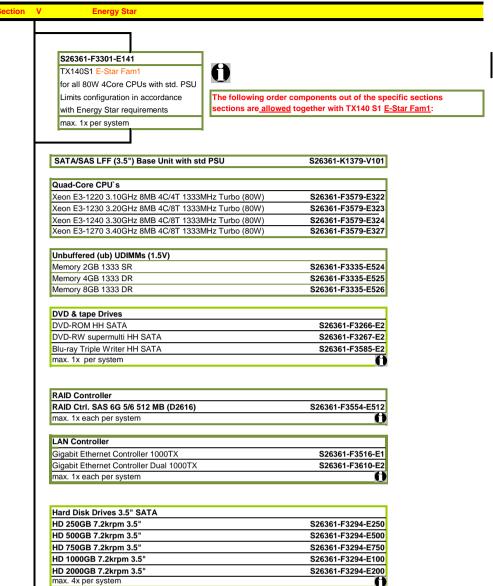


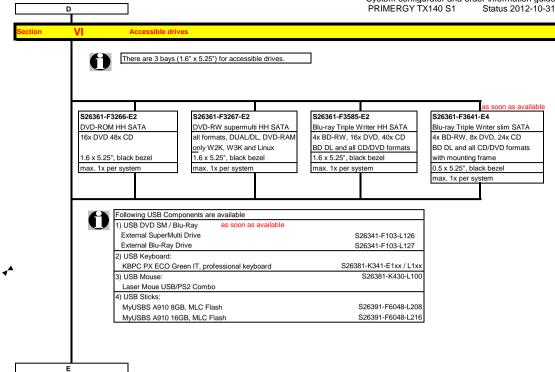


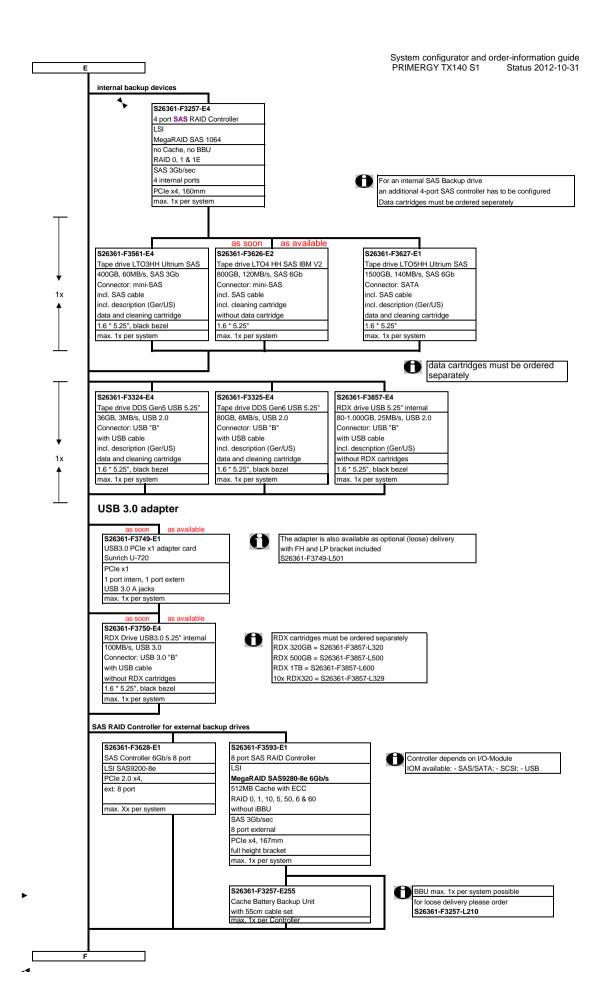

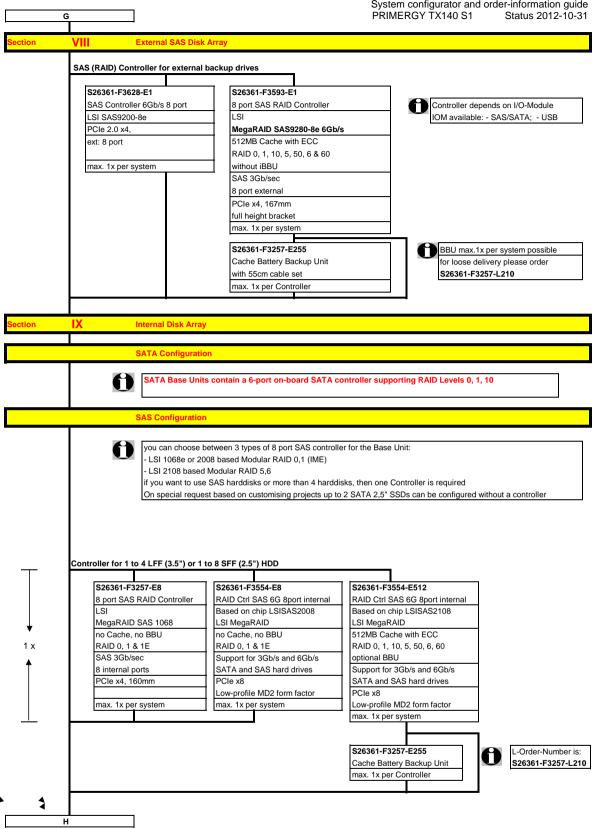

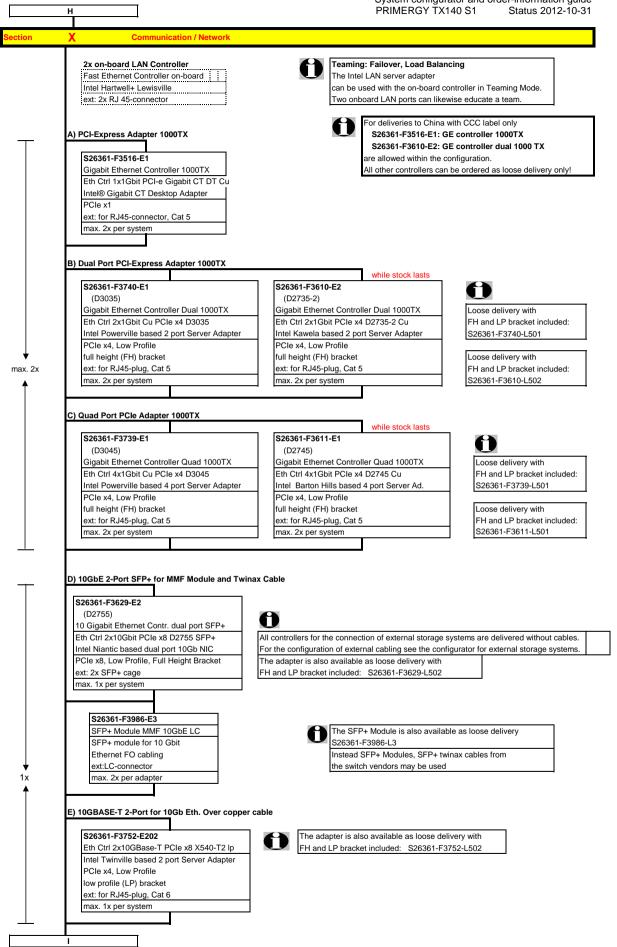

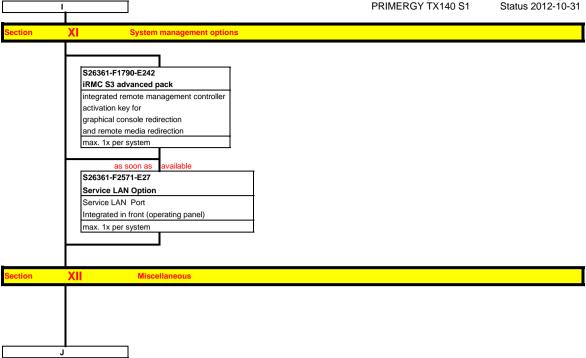

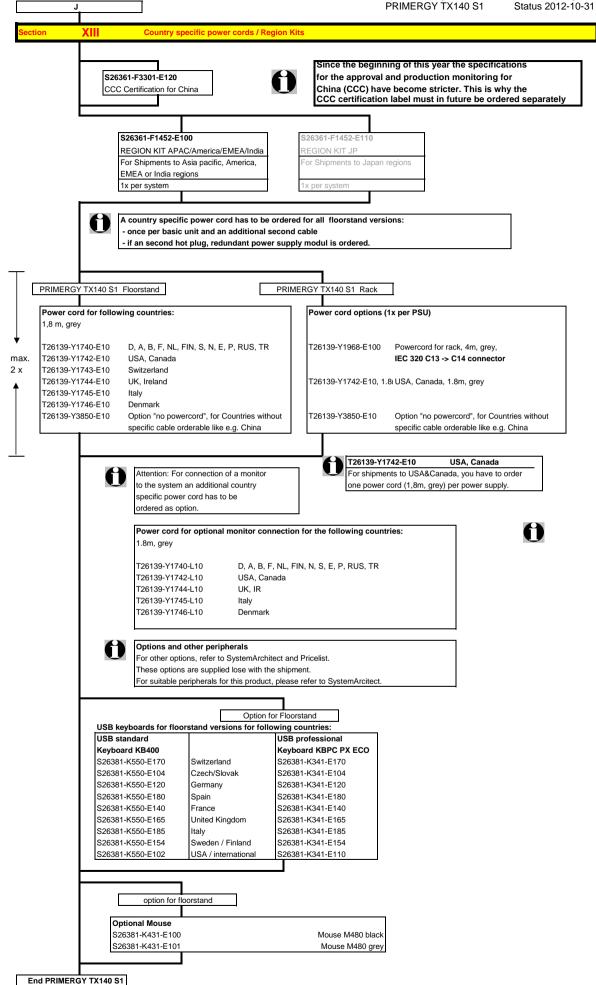

Change Report

Date	Order number	Changes
2012-10-08	S26361-F3749-Exx	Added USB3.0 Adapter
2012-10-08	S26361-F3750-Ex	Added RDX Drive
28.02.2012	S26361-F3301-E120	add CCC Certification
2012-02-09	S26361-F3641-E4	BD slim writer added
2012-02-09	S26113-F575-L141	conversion kit std to hp introduced
2011-12-21	S26361-F4482-E114	SAS HD 6G 144GB - no longer available
2011-10-01	S26361-F3601-E250	new BC SATA HD - now available
2011-10-01	S26361-F3298-E64	64 GB SSD - no longer available
2011-06-21	S26361-F3294-E750	750GB SATA disk eliminated due to EOL
2011-06-21	S26361-F3291-E514	146GB SAS disk eliminated due to EOL
2011-06-01		First Release