

SST Storage System Master Index

FEBRUARY 2022

To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335

Table of Contents

	<i>Page #</i>
Part Number References	2-8
Drawer Liner References	9-21
Drawer 1	9
Drawer 2	9
Drawer 3	10
Drawer 4	10
Drawer 5	11
Drawer 6	11
Drawer 7	12
Drawer 8	12
Drawer 9	13
Drawer 10	13
Drawer 11	14
Drawer 12	14
Drawer 13	15
Drawer 14	15
Drawer 15	16
Drawer 16	16
Drawer 17	17
Drawer 18	17
Drawer 19	18
Drawer 20	18
Drawer 21	19
Drawer 22	19
Drawer 23	20
Drawer 24	20
Drawer 25	21
Essential Tools Not Located in Storage Cabinets	22-23
Hybrid Electric Vehicle (HEV) Workstation	24

To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
00001-00010-01	POWER STEERING PUMP PRESSURE GAUGE SET	9	00002-90080	SUBFRAME ALIGNMENT PINS	11
*00001-47092	ADAPTER	9	*00002-A0830	CABLE KIT	IN SHOP
*00001-47093	ADAPTER	9	*00002-A0870	PRINTER	IN SHOP
*00002-00008	90 DEGREE FITTING	9	00002-ESUPPT-01	ENGINE SUPPORT BAR	IN SHOP
00002-00039	39MM SOCKET	11	00002-JUMPR-KIT	OBD-II JUMPER CONNECTOR KIT (4 COMPONENTS)	5
*00002-00907-10	PULLER RING HALF	15	*00002-V8150	TESTER	IN SHOP
*00002-00907-11	REPLACER SHAFT COLLAR	15	*01014-00094	RADIO ANTENNA	8
*00002-00907-12	TUBE REMOVER / REPLACER (140MM/ 5 1/2 INCH)	15	*01014-00095	RADIO ADAPTER	8
*00002-00907-13	COLLET HALVES (FOR ATM FRONT PUMP)	15	*01014-00096	GPS ANTENNA	8
*00002-00907-14	5TH GEAR HUB PULLER	15	*01014-00097	GPS ANTENNA ADAPTER	8
*00002-00907-7	REMOVER / REPLACER (400MM/ 15 3/4 INCH)	15	*01014-00098	XM ANTENNA	8
*00002-00907-8	FORCING SCREW	15	*01014-00099	XM ANTENNA ADAPTER	8
*00002-00907-9	BEARING PULLER 304839 JAW	15	01018-00118	SUPRA DIAGNOSTIC CABLE	21
00002-00909-01	ALL TRAC TOOL SET	9	*01216-00111	TAPERED TAP	5
00002-00920	DRIVER HANDLE	12	*01216-00112	STRAIGHT TAP	5
00002-00921	REAR AXLE SEAL & BEARING DRIVER	6	*01216-00113	SLIDE HAMMER	5
00002-00922	REAR AXLE SEAL & BEARING DRIVER	6	*01216-00114	PLUG PULLER (X3)	5
00002-01775	SEAT HEATER ATTACHMENT KIT	21	*01216-00115	RUBBER PLUG (X5)	5
*00002-01780	REPLACEMENT NEEDLES	21	*01216-00116	PIPE PLUG (X10)	5
00002-02955	BEAM TORQUE WRENCH	1	*01216-00117	TAP ALIGNMENT BRIDGE W/ BOLTS	5
00002-04020-KIT	PRIUS-PHV HV BATTERY STRAP	6	01413-00002 (GRX-5100T)	HIGH VOLTAGE BATTERY SERVICE UNIT	HEV
00002-06020-01	PLASTIC PRY TOOL KIT	21	01413-00003 (A580)	INTERLOCK CONNECTOR	HEV
*00002-06100	LARGE ANGLED GROMMET PRY TOOL	21	01413-00004 (A533)	LOW VOLTAGE CABLE (R)	HEV
*00002-06200	LARGE ANGLED PRY TOOL	21	01413-00005 (A573)	AC POWER CORD (S)	HEV
*00002-06300	THIN, FLAT PRY TOOL	21	01413-00006 (A574 / A575)	D/C ADAPTER KIT (T / U)	HEV
*00002-06400	INTERIOR CURVED PRY TOOL	21	01413-00007 (A571)	UNIVERSAL HIGH VOLTAGE CABLE (V)	HEV
*00002-06500	ANGLED GROMMET PRY TOOL	21	01413-00008 (A572)	UNIVERSAL LOW VOLTAGE CABLE (W)	HEV
*00002-06600	FLAT GROMMET PRY TOOL	21	01413-00009 (A505)	HIGH VOLTAGE CABLE (E)	HEV
*00002-06700	PANEL CLIP PRY TOOL	21	01413-00010 (A296)	UNIVERSAL FUSE BOX	HEV
*00002-06800	SMALL ANGLED GROMMET PRY TOOL	21	01413-00012 (A586)	A/C CIRCUIT TESTER	HEV
*00002-06900	SMALL PRY TOOL	21	01413-00013 (A501)	HIGH VOLTAGE CABLE (A)	HEV
*00002-09077-01	OCCUPANT SEAT WEIGHTS	24	01413-00014 (A502)	HIGH VOLTAGE CABLE (B)	HEV
*00002-09077-TRV	SEAT WEIGHT TRAY	24	01413-00015 (A503)	HIGH VOLTAGE CABLE (C)	HEV
00002-09090-01	OCCUPANT CLASSIFICATION SEAT WEIGHT SET	24	01413-00016 (A504)	HIGH VOLTAGE CABLE (D)	HEV
*00002-10001	CARRYING CASE W/ INSERT	15	01413-00017 (BCU - 64)	INTERFACE ECU - 64	HEV
00002-11100-02	TRANSMISSION FILL SYSTEM	IN SHOP	01413-00018 (A507)	HIGH VOLTAGE CABLE (G)	HEV
00002-12000-01	KDSS FLUID PRESSURE PUMP KIT	IN SHOP	01413-00019 (A541)	CELL VOLTAGE CABLE (J)	HEV
00002-12001-01	VEHICLE DRAIN TUBE AUGER	7	01413-00020 (A551)	TEMPERATURE SENSOR CABLE (K)	HEV
*00002-12020-01	FORCING BOLT	13	01413-00021 (A552)	CELL VOLTAGE CABLE (L)	HEV
*00002-13525-01	POWER STEERING ADAPTER	9	01413-00022 (A531)	LOW VOLTAGE CABLE (P)	HEV
*00002-13526-01	POWER STEERING ADAPTER	9	01413-00023 (A532)	LOW VOLTAGE CABLE (Q)	HEV
*00002-16500	FABRIC FASTENERS	21	01413-00024 (A521)	STACK BALANCE HARNESS (I)	HEV
*00002-17750	SEAT HEATER ATTACHMENT TOOL	21	01413-00031 (A564)	BANANA JACK EXTENSION CABLE (X)	HEV
00002-1ESBU-KIT	ENGINE SUPPORT BAR BRACKET	IN SHOP	*01413-00069	MILLIOHM METER UNIT	HEV
*00002-211711-01	SHAFT PROTECTOR	24	*01413-00070	CLIP-TYPE TEST LEAD SET	HEV
00002-2SUPP	RATCHETING STRAP (2)	6	*01413-00071	TEMPERATURE SENSOR	HEV
00002-35000	3/4 INCH DRIVE TORQUE WRENCH	IN SHOP	01413-00072	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE M	HEV
00002-35001	NUT WRENCH HOLDING TOOL	1	01413-00073	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE L	HEV
00002-35027	27MM HEX SOCKET	5	01413-00074	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE XL	HEV
*00002-48043-01	POWER STEERING PUMP ADAPTER	9			
*00002-48044-01	POWER STEERING PUMP ADAPTER	9			
00002-71368-01	PRY TOOL	20			

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
01413-00075	CANVAS GLOVE BAG (3)	HEV	01813-00057	8MM MAGNETIC EXTENSION	HEV
01413-00076	GLOVE INFLATOR	HEV	01813-00058	NUTSTARTER - COMPOSITE	HEV
01413-00077-1	42" LOOPER TUBE, ORANGE (4)	HEV	01813-00059	DIE CUT FOAM	HEV
01413-00077-2	BASE, CONE (4)	HEV	*01815-00102	DIGITAL ANGLE GAUGE	IN SHOP
01413-00078	4-6FT ADJUSTABLE BARRIER (4)	HEV	01815-00104	DRIVE HANDLE ADAPTER	12
01413-00080	ARC PROTECTIVE HELMET & FACE SHIELD	HEV	01815-00105	DRIVE HANDLE ADAPTER	12
01413-00081	LARGE INSULATED MAT (30" X 48")	HEV	*01816-00103	3 LINE LASER, SMALL TRIPOD, TARGET LASER BOARD	IN SHOP
01413-00082	SMALL INSULATED MAT (12" X 30") (3)	HEV	*01816-00104	TRIPOD	IN SHOP
01413-00083	CAUTION TAPE, ROLL	HEV	*01816-00105	LASER MEASURE	IN SHOP
01413-00088	INSULATED APRON	HEV	*01816-00108	DIGITAL T-BEVEL	IN SHOP
*01414-00100	INVERTER CAP PLUG	21	*01816-00109	LASER ENHANCING GLASSES	IN SHOP
01416-00119 A & B (A619)	HIGH VOLTAGE CABLE	HEV	07112-66040-01	PRESSURE PLATE REMOVER	20
01416-00120 (A620)	CELL VOLTAGE CABLE	HEV	07112-76060-01	MAGNETIC CLUTCH STOPPER	20
01416-00121 (A621)	TEMPERATURE SENSOR CABLE	HEV	09013-1C160-01	TORXPLUS SOCKET, T40	1
01418-00106 (A702)	CELL VOLTAGE INTERFACE	HEV	09013-1C551-01	TORX SOCKET, E14	1
01418-00107 (A703)	TEMPERATURE SENSOR INTERFACE	HEV	09013-1C560-01	TORX SOCKET, E16	1
01418-00109 (A704)	CELL VOLTAGE INTERFACE	HEV	09013-6C600-01	LONG BALL HEXAGON WRENCH 5MM	10
01418-00110 (A705)	TEMPERATURE SENSOR INTERFACE	HEV	09013-7C310	10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)	1
01418-00111 (A706)	CELL VOLTAGE AND TEMPERATURE SENSOR INTERFACE	HEV	09032-00100-01	GASKET SEAL CUTTER	4
01418-00112 (A707)	UNIVERSAL CELL VOLTAGE BCU CABLE	HEV	09042-2C100	CRIMPER	20
01418-00113 (A708)	UNIVERSAL TEMPERATURE BCU CABLE	HEV	09043-50080	8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)	1
01418-00114 (A709)	VOLTAGE BCU CABLE	HEV	*09200-WA020	FUEL HOSE ADAPTER	25
*01717-00122	TPWS TESTER	24	*09200-WA190	CRANKSHAFT SOCKET	25
*01717-00123	OBD-II DONGLE	24	*09200-WA520	FUEL INJECTOR FIXTURE	25
*01717-00124	POWER SUPPLY	24	*09200-WA550-01	6CYL OIL PRESSURE ADAPTER	25
*01717-00125	USB CABLE	24	*09200-WA570	FLEX PLATE ALIGNMENT PIN	25
*01717-00126	MAGNET	24	*09200-WA680	FUEL INJECTOR FIXTURE SPACERS	25
*01717-00127	RJ45 CABLE	24	*09200-WA830	FUEL INJECTOR INSTALLATION GAUGE	25
01813-00034	SOCKET-8MM STD 3/8", 6 PT	HEV	*09200-WA960	CRANKCASE PRESSURE ADAPTER	25
01813-00035	SOCKET-10MM STD 3/8", 6 PT	HEV	*09200-WA970	4 CYL OIL PRESSURE ADAPTER	25
01813-00036	SOCKET-12MM STD 3/8", 6 PT	HEV	*09200-WA980	FUEL INJECTOR CAPS	25
01813-00037	SOCKET-14MM STD 3/8", 6 PT	HEV	*09202-00010-01	ADAPTER	4
01813-00038	SOCKET-8MM DP 3/8", 6 PT	HEV	09202-00018-01	VALVE SPRING COMPRESSOR ADAPTER 12	4
01813-00039	SOCKET-10MM DP 3/8", 6 PT	HEV	09202-00020-01	VALVE SPRING COMPRESSOR ADAPTER	4
01813-00040	SOCKET-12MM DP 3/8", 6 PT	HEV	09202-43013-01	VALVE SPRING COMPRESSOR W/ADAPTER	4
01813-00041	SOCKET-14MM DP 3/8", 6 PT	HEV	09213-54015-01	CRANKSHAFT PULLEY HOLDING TOOL	8
01813-00042	10MM MAGNETIC EXTENSION	HEV	09213-58012-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00043	TORQUE WRENCH 3/8"	HEV	09213-58013-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00044	RATCHET 3/8"	HEV	09213-58014-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00045	3/8" X 6" EXTENSION	HEV	09213-70011-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00046	3/8" X 3" EXTENSION	HEV	*09214-00011	BOLT	8
01813-00047	#2 X 6" PHILLIPS SCREWDRIVER	HEV	*09214-00021-01	BOLT	8
01813-00048	#1 X 6" PHILLIPS SCREWDRIVER	HEV	*09214-00030-01	BOLT	8
01813-00049	3/16" X 6" CABINET TIP SCREWDRIVER	HEV	*09216-04010	BELT TENSION WRENCH	1
01813-00050	5/16" X 6" FLAT TIP SCREWDRIVER	HEV	09216-42010	BELT TENSION WRENCH SET	1
01813-00051	7" DIAGONAL CUTTERS	HEV	*09216-42020	ADAPTER	1
01813-00052	8" NEEDLE NOSE PLIER	HEV	09221-18010-01	PISTON PIN REMOVER	2
01813-00053	6" NEEDLE NOSE PLIER	HEV	09221-18020-01	GUIDE PIN REMOVER	2
01813-00054	MAGNETIC PICKUP TOOL	HEV	09223-15020	CRANKSHAFT REAR OIL SEAL REPLACER	3
01813-00055	FLASHLIGHT	HEV	09223-15030	CRANKSHAFT REAR OIL SEAL REPLACER	3
01813-00056	3/8" DRIVE EXT W/SCREWDRIVER HANDLE	HEV	09223-22010	CRANKSHAFT FRONT OIL SEAL REPLACER	2
			09223-46011-01	CRANKSHAFT FRONT OIL SEAL REPLACER	13

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09223-47020-01	REAR CRANKSHAFT SEAL INSTALLER	5	*09268-44080-01	ADAPTER, M8	22
09223-56010-01	CRANKSHAFT REAR OIL SEAL REPLACER	7	*09268-44100-01	ADAPTER, M10	22
09223-63010-01	CRANKSHAFT REAR OIL SEAL REPLACER	2	*09268-44120-01	ADAPTER, M12	22
09223-75010-01	OIL SEAL REPLACER	6	09268-45101-1A	EFI FUEL PRESSURE GAUGE SET	22
09223-78010-01	CRANKSHAFT OIL SEAL REPLACER	3	*09268-52011	INJECTION MEASURING ATTACHMENT	22
09224-00010-01	OXYGEN SENSOR SOCKET	1	09268-74010-01	INJECTOR REMOVER	1
09224-74010-01	ENGINE BALANCER BACKLASH TOOL	1	09276-75010-01	HYDRAULIC LASH ADJUSTER	1
09228-06500-02A	OIL FILTER WRENCH	3	*09300-WA070	8MM HEX EXTENSION	25
09228-07502	OIL FILTER WRENCH	3	09308-00010	OIL SEAL PULLER	3
*09248-05410	VALVE LIFTER PRESS	4	09309-12020-01A	5TH GEAR REPLACER	13
*09248-05420	VALVE LIFTER STOPPER (7MM AND 9MM)	4	*09309-36010-01	TRANSMISSION REAR BEARING REPLACER	9
*09248-07010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR	3	09309-37010-01	TRANSMISSION BEARING REPLACER	2
*09248-07020-01	ADJUSTING SHIM REMOVER	3	*09316-12010	TRANSFER BEARING REPLACER	9
09248-55040	VALVE CLEARANCE ADJUST TOOL SET	4	*09316-20011-01	TRANSFER BEARING REPLACER	9
09248-77010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR SET	3	*09318-12010	SPANNER WRENCH	9
09249-37010-01	VVT SET BOLT WRENCH	1	09318-12010-4PIN	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET KIT	14
09249-63010-01	TORQUE WRENCH ADAPTER	13	09318-12010-8PIN	8 PIN SOCKET KIT	14
09250-53010-01	SPACER, ENGINE MOUNT	1	*09318-12010-8PIN-1	8 PIN SOCKET	14
09260-39021-01	INJECTOR SEAL TOOL SET	1	*09318-12010-8PIN-2	PIN INSTALLER/REMOVER	14
09260-39030-01	INJECTOR SEAL TOOL SET	1	*09318-12010-8PIN-3	REPLACEMENT PINS (QTY. 8)	14
*09261-03011-01	HOLDER	1	*09318-12010-INST	PIN INSTALLER/REMOVER	14
*09261-03020-01	GUIDE	1	*09318-12010-PINS	SOCKET PIN SET (QTY. 4)	14
*09261-03030-01	GUIDE	1	*09318-12010-SOCK	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET	14
*09268-00020-01	T-JOINT	22	*09318-20010-01	SIDE BEARING NUT WRENCH	9
*09268-00030-01	FUEL TUBE CONNECTOR	22	*09322-03010-01	INPUT SHAFT HOLDING SOCKET	5
*09268-08070-01	HOSE	22	*09322-03020-01	INPUT SHAFT HOLDING JOINT BAR	5
09268-21010-01	FUEL HOSE PULLER	1	*09322-03030-01	INPUT SHAFT HOLDING PLATE	5
*09268-27011	NO. 2 UNION	22	09322-35010-01	INPUT SHAFT HOLDING TOOL SET	5
09268-31012	INJECTION MEASURING TOOL SET	22	09325-40010-01	TRANSMISSION OIL PLUG	7
*09268-41061	NO. 3 UNION	22	*09326-03010-01	OUTPUT SHAFT ADJUSTING NUT WRENCH	6
*09268-41071	NO. 4 UNION	22	*09326-03020-01	SOCKET ADAPTER	6
*09268-41081	NO. 6 UNION	22	09326-35010-01	OUTPUT SHAFT ADJUSTING NUT WRENCH AND ADAPTER	6
*09268-41091	NO. 7 UNION	22	09326-35020-01	OUTPUT SHAFT ADJUSTING NUT WRENCH	4
*09268-41100	CLAMP	22	09326-71010-01	OUTPUT SHAFT HOLDING WRENCH	10
*09268-41110	ADAPTER	22	09326-71020-01	LOCK NUT SOCKET WRENCH	7
*09268-41120	3-WAY	22	09326-71030-01	OUTPUT SHAFT HOLDING PLATE	10
*09268-41130	ADAPTER	22	09330-00021	COMPANION FLANGE HOLDING TOOL	12
*09268-41140	ADAPTER	22	*09330-00030	PIN	12
*09268-41160	ADAPTER	22	09340-00010-01	QUICK CONNECT REMOVER	12
*09268-41250-01	T-JOINT	22	09387-00010-01	TRANSFER OIL SEAL REPLACER	6
*09268-41260-01	EFI FUEL PRESSURE GAUGE ASSEMBLY	22	09387-00090	BEARING RETAINER INSTALLER	2
*09268-41280-01	HOSE JOINT	22	09387-00130-01	COUNTER DRIVE GEAR NUT WRENCH	1
*09268-41300	CLAMP	22	09388-40010-01	INPUT SHAFT OIL SEAL REPLACER	2
*09268-41310	CLAMP	22	09500-WA020	AXLE SHAFT REMOVAL TOOL	23
*09268-41400	CLAMP	22	*09500-WA030	AXLE SHAFT COLLAR	25
*09268-41500	CLAMP	22	*09500-WA170	50MM WRENCH	25
*09268-41500-01	FUEL TUBE CONNECTOR	22	*09502-12010-01	BEARING REPLACER	9
*09268-41500-01	HOSE BANDS (6)	22	09506-42010-01	BEARING RACE REPLACER	17
*09268-41600	ADAPTER	22	09506-42020-01	BEARING RACE REPLACER	17
*09268-43080-01	UNION, M8	23	09506-42030-01	BASE	17
*09268-43100-01	UNION, M10	22	09509-25011	REAR AXLE BEARING LOCK NUT WRENCH	12
*09268-43120-01	UNION, M12	22			

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09518-36030-01	OIL SEAL & BEARING REPLACER	2	09634-60013	STEERING KNUCKLE CENTERING GAUGE	12
09520-01010-02	DRIVE SHAFT REMOVER ATTACHMENT	5	09634-60014	STEERING KNUCKLE CENTERING GAUGE	12
09520-10021	TRANS HOUSING REMOVER	3	09649-17010	STEERING KNUCKLE TOOL	15
09520-32040-01	SLIDE HAMMER (5LB.)	7	*09650-14010-01	WHEEL GUIDE PINS	25
09521-25011-01	REAR AXLE SHAFT PULLER	7	09670-00010-01	FRONT CROSS MEMBER GUIDE TOOL	12
09521-25023-01	REAR AXLE SHAFT PULLER ADAPTER	6	*09700-WA010	STRUT BOLT SOCKET	25
09521-26000-01	REAR AXLE SHAFT PULLER SPACER	6	*09700-WA020	5MM STRUT BOLT	25
09521-60010-01	REAR AXLE SHAFT PULLER ADAPTER	6	*09700-WA040	FLEX PLATE HOLDING TOOL	25
09527-10011-01	REAR AXLE SHAFT BEARING REMOVER	15	09700-WA050-01	TRANSMISSION RELEASE TOOL	17
09527-17011	REAR AXLE BEARING REMOVER	14	09700-WA250	STRUT BOLT SOCKET 6MM STRUT BOLT	17
*09528-00002-1	GUIDE PIN C	14	09709-00002	BRAKE PEDAL FORCE GAUGE	18
*09528-00002-2	GUIDE PIN B	14	09709-29018	LSPV GAUGE SET	18
*09528-00002-3	GUIDE PIN A	14	09710-04101-01	FRONT SPEED SENSOR INSTALLER	7
*09528-05000-01	CENTER BOLT	14	*09710-07021	BUSHING REMOVER	13
*09528-05010-01	HANDLE, COMPRESSOR PLATE 1&2	14	*09710-07031	BUSHING REPLACER	13
*09528-05030-01	WRENCH, SIDE GEAR A	14	*09710-07041	UPPER ARM BASE	13
*09528-05040-01	WRENCH, SIDE GEAR B	14	*09710-07051	UPPER ARM BASE	13
*09528-05050-01	WRENCH, SIDE GEAR C	14	*09710-07062	BUSHING REPLACER	13
09528-52010-01	DIFFERENTIAL GEAR REMOVER & REPLACER SET	14	*09710-07071	UPPER ARM SPACER	13
09554-14010-01	SEAL INSTALLER	13	*09710-07081	LOWER ARM BASE	13
09554-42010-01	OIL SEAL REPLACER	17	09710-18010-01	REAR SUSPENSION BUSH KIT	13
09556-16030-01	DIFFERENTIAL DRIVE PINION HOLDING TOOL #28	11	09710-18020-01	REAR SUSPENSION BUSH KIT	13
09556-30010	DIFFERENTIAL BEARING REMOVER	12	09710-18030-01	REAR SUSPENSION BUSH KIT	13
09564-32011-01	PRELOAD ADAPTER	11	09710-18040-01	FRONT SUSPENSION BUSH KIT	13
09564-33010	DIFFERENTIAL PRELOAD ADAPTER	1	09710-28012-01	FRONT SUSPENSION BUSHING TOOL SET	13
09564-50010-01	DIFFERENTIAL PRELOAD ADAPTER	5	*09711-40010-01	TOE CONTROL LINK REPLACER ARM NO. 1	14
09570-18010-01	REAR DIFF MOUNT CUSHION, R/R	15	*09712-40010-01	TOE CONTROL LINK REPLACER ARM NO. 2	14
09570-18020-01	REAR DIFF MOUNT CUSHION, R/R	15	09716-18010-01	REAR SUSPENSION BUSH R/R	13
09570-22011	DIFFERENTIAL MOUNTING CUSHION REMOVER / REPLACER	7	09716-18020-01	FRONT SUSPENSION BUSH R/R	13
09570-60010-01	DIFFERENTIAL MOUNTING CUSHION REMOVER AND REPLACER	15	09716-18030-01	FRONT SUSPENSION BUSH	13
09607-60020-01	FRONT WHEEL ADJUSTING NUT WRENCH	15	*09719-00010	COMPRESSOR	16
*09608-02011	COVER	15	*09719-00020	PISTON DRIVER	16
*09608-02021	BOLT & NUT COVER	15	09719-14020	REAR DISC BRAKE TOOL SET	16
*09608-02041	RETAINER (WASHER)	15	09726-02041-01	OIL SEAL REPLACER	6
09608-10010-01	STEERING KNUCKLE OIL SEAL REPLACER	11	09726-18010-01	STUD BOLT SOCKET	13
09608-16042	FRONT HUB BEARING ADJUSTING TOOL	15	*09727-00010	BOLT SET	14
09608-32010	STEERING KNUCKLE OIL SEAL REPLACER	12	*09727-00031-01	TOE CONTROL LINK COMPRESSOR ARM	14
09610-20012-01	PITMAN ARM PULLER	13	09727-22011-ST	COIL SPRING COMPRESSOR	14
09611-20015-01	TIE ROD END PULLER	14	09727-30050-01	TOE CONTROL LINK REPLACEMENT KIT	14
09611-22012-01	TIE ROD END PULLER	13	09727-58010-01	REBOUND SPRING ADJUST PULLER	10
09612-00012-01	RACK & PINION HOLDING TOOL	13	09727-58020-01	ADAPTER 12	10
09612-30012	STEERING WORM BEARING PULLER	12	09727-58030-01	ADAPTER 14	10
09613-22011	STEERING RACK SHAFT BUSHING PULLER	11	09727-58100-01	SHOCK ROD HOLDING TOOL	10
09616-00010-02	STEERING SOCKET	12	09727-58110-01	ATTACHMENT 12	10
09616-00020-01	STEERING WORM BEARING ADJUSTING SOCKET	12	09727-58120-01	ATTACHMENT 16	10
09628-00011-01	BALL JOINT PULLER	14	09727-58130-01	ATTACHMENT 22	10
09628-62011-01	BALL JOINT PULLER	13	09727-58140-01	ATTACHMENT 25	10
09631-10021-01	RACK & PINION STOPPER ADJUSTMENT TOOL	13	09729-22031	FRONT SPRING UPPER SEAT HOLDER	11
09631-12071	STEERING RACK OIL SEAL TEST TOOL	11	09730-00010	AIR TUBE SEPARATOR	11
09631-12090	SEAL RING TOOL	13	09737-00013-01	BRAKE BOOSTER PUSH ROD GAUGE	16
			09737-00020-01	BRAKE BOOSTER PUSH ROD WRENCH	16
			09756-00010	REAR DISC BRAKE ADJUSTER	16

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09756-48020-1B	ELECTRONIC PARKING BRAKE RELEASE TOOL	24	*09900-WA280-01	DRIVE WRENCH ADAPTER	25
*09756-48060-01	EPB TOOL COMPONENT	24	*09902-WA010	FUEL INJECTOR SEAL INSTALLER	25
*09756-48070-01	EPB TOOL COMPONENT	24	*09902-WA020	FUEL INJECTOR SEAL REMOVAL PLIERS	25
09760-60020	KDSS FLUID PRESSURE PUMP KIT	IN SHOP	09905-00040	CONNECTOR PLIER	17
*09800-WA020	WIPER ARM PULLER	25	09922-10010-01	VARIABLE OPEN WRENCH	12
*09800-WA030	HOOD SUPPORT EXTENSIONS	25	09929-00020-01	CRIMPING TOOL S	17
*09800-WA070	FUEL FILLER TUBE	25	09930-00010-01	DRIVE SHAFT NUT CHISEL	15
*09800-WA110	WINDOW ADJUSTMENT TOOL	25	09930-42010-01	DRIVE PINION SHAFT NUT CHISEL	17
09800-WA120-01	WINDOW SUCTION CUP TOOL	23	09950-30012-01	UNIVERSAL PULLER SET "A"	9
*09800-WA130	WINDOW ADJUSTMENT WRENCH	25	09950-40011	UNIVERSAL PULLER SET "B"	8
*09800-WA220	WINDOW ADJUSTMENT MEASURING TOOL	25	09950-50013-01	UNIVERSAL PULLER SET "C"	24
*09800-WA290	FUEL PUMP LOCK RING	25	09950-60010-01	REPLACER SET #1	24
09800-WA300-01	ACC100 RAIL	IN SHOP	09950-60020-01	REPLACER SET #2	8
09800-WA320	WINDOW ADJUSTER	20	09950-60030-01	REPLACER SET #3	11
*09800-WA330	DOOR LATCH SPACER	25	*09951-00180-01	REPLACER 18	24
*09800-WA340	BODY GAP GAUGES	25	*09951-00190-01	REPLACER 19	24
09801-18010-01	DOOR GLASS BOLT HOLDING TOOL	11	*09951-00200-01	REPLACER 20	24
*09808-01010-01	HANDLE	4	*09951-00210-01	REPLACER 21	24
*09808-01030-01	CROSSBAR	4	*09951-00220-01	REPLACER 22	24
*09808-01040-01	50MM JAW SET	4	*09951-00230-01	REPLACER 23	24
*09808-01060-01	18MM JAW SET	4	*09951-00240-01	REPLACER 24	24
*09808-01070-01	105MM JAW SET	4	*09951-00250-01	REPLACER 25	24
*09808-01080-01	SLIDING JAW SET	4	*09951-00260-01	REPLACER 26	24
09808-01110-01	CLAW	10	*09951-00270-01	REPLACER 27	24
09808-14010-01	FUEL SENDER LOCK RING WRENCH	4	*09951-00280-01	REPLACER 28	24
09808-14031-KIT	FUEL SENDER LOCK NUT WRENCH	4	*09951-00290-01	REPLACER 29	24
09808-14040-01	FUEL PUMP RETAINER TOOL	22	*09951-00300-01	REPLACER 30	24
09808-14050-01	FUEL PUMP HOLDING TOOL	22	*09951-00310-01	REPLACER 31	24
09812-18010-01	TOOL, FRONT DOOR GLASS ADJ	20	*09951-00320-01	REPLACER 32	24
09812-18020-01	TOOL, FRONT DOOR GLASS FIX	20	*09951-00330-01	REPLACER 33	24
09820-63020-02	ALTERNATOR CLUTCH HOLDING TOOL SET	20	*09951-00340-01	REPLACER 34	24
*09821-63010-02	INSERT	20	*09951-00350-01	REPLACER 35	24
09843-18040	DIAGNOSIS CHECK WIRE #2	18	*09951-00360-01	REPLACER 36	24
09843-18061	SRS CHECK WIRE	21	*09951-00370-01	REPLACER 37	24
09870-00005-01	A/C LINE DISCONNECT KIT	11	*09951-00380-01	REPLACER 38	24
*09870-00015	LOW SIDE A/C LINE DISCONNECT TOOL	11	*09951-00390-01	REPLACER 39	24
*09870-00025	HIGH SIDE A/C LINE DISCONNECT TOOL	11	*09951-00400-01	REPLACER 40	24
09870-60000	LASER RADAR ADJUSTING REFLECTOR	IN SHOP	*09951-00410-01	REPLACER 41	24
09870-60040-02	REFLECTOR C	23	*09951-00420-01	REPLACER 42	24
09890-47010-01	ANTI-STATIC MAT SET	21	*09951-00430-01	REPLACER 43	24
*09891-04010-01	ANTI-STATIC MAT	21	*09951-00440-01	REPLACER 44	24
*09891-04020-01	WRIST BAND	21	*09951-00450-01	REPLACER 45	24
*09891-04030-01	GROUNDING WIRE NO. 1	21	*09951-00460-01	REPLACER 46	24
*09891-04040-01	GROUNDING WIRE NO. 2	21	*09951-00470-01	REPLACER 47	24
*09891-47010-1A	SQUEEGEE	21	*09951-00480-01	REPLACER 48	24
09891-47020-01	INVERTER CASE SEPERATOR	21	*09951-00490-01	REPLACER 49	24
09893-10060-01	AC LEAK TEST HIGH ADAPTER	17	*09951-00500-01	REPLACER 50	24
09893-10070-01	AC LEAK TEST LOW ADAPTER	17	*09951-00510-01	REPLACER 51	24
09893-42010-01	BATTERY HANGER	17	*09951-00520-01	REPLACER 52	24
*09898-00020-01	ATTACHMENT B	IN SHOP	*09951-00530-01	REPLACER 53	24
*09900-WA040	BREAKER BAR	25	*09951-00540-01	REPLACER 54	24
09900-WA230-01	WINDOW PLASTIC PRY TOOL	10	*09951-00550-01	REPLACER 55	24

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
*09951-00560-01	REPLACER 56	24	*09954-05060	CLAW NO. 6	24
*09951-00570-01	REPLACER 57	24	*09954-05070	CLAW NO. 7	24
*09951-00580-01	REPLACER 58	24	*09954-05080	CLAW NO. 8	24
*09951-00590-01	REPLACER 59	24	*09955-03011-01	PULLER JAW (SET OF 2)	9
*09951-00600-01	REPLACER 60	24	*09955-03021-01	PULLER JAW (SET OF 3)	9
*09951-00610-01	REPLACER 61	24	*09955-03030-01	LOWER PLATE 130MM	9
*09951-00620-01	REPLACER 62	24	*09955-03040-01	LOWER PLATE 150MM	9
*09951-00630-01	REPLACER 63	24	*09955-04011	CLAW NO. 1	8
*09951-00640-01	REPLACER 64	24	*09955-04021	CLAW NO. 2	8
*09951-00650-01	REPLACER 65	24	*09955-04031	CLAW NO. 3	8
*09951-00680-01	REPLACER 68	8	*09955-04041	CLAW NO. 4	8
*09951-00710-01	REPLACER 71	8	*09955-04051	CLAW NO. 5	8
*09951-00720-01	REPLACER 72	8	*09955-04061	CLAW NO. 6	8
*09951-00730-01	REPLACER 73	8	*09955-04071-01	CLAW NO. 7	8
*09951-00750-01	REPLACER 75	11	09955-04160-01	CLAW NO.16	17
*09951-00770-01	REPLACER 77	11	*09955-05010-01	ADAPTER NO. 1	24
*09951-00780-01	REPLACER 78	8	*09955-05020-01	ADAPTER NO. 2	24
*09951-00790-01	REPLACER 79	8	*09955-05030-01	ADAPTER NO. 3	24
*09951-00810-01	REPLACER 81	11	*09955-05040-01	ADAPTER NO. 4	24
*09951-00890-01	REPLACER 89	8	*09956-03010-01	ADAPTER 16MM	9
*09951-00900-01	REPLACER 90	11	*09956-03020-01	ADAPTER 18MM	9
*09951-00910-01	REPLACER 91	8	*09956-03030-01	ADAPTER 20MM	9
*09951-01000-01	REPLACER 100	11	*09956-03040-01	ADAPTER 22MM	9
*09951-01030-01	REPLACER 103	11	*09956-03050-01	ADAPTER 24MM	9
*09951-01100-01	REPLACER 110	11	*09956-03060-01	ADAPTER 26MM	9
*09951-03010-01	PULLER HEAD	9	*09956-03070-01	ADAPTER 28MM	9
*09951-04010	HANGER 150	8	*09956-03080-01	ADAPTER 10MM	9
*09951-04020	HANGER 200	8	09956-03090-01	ADAPTER LONG 18 MM	17
*09951-05010	HANGER 150	24	*09957-04010	ATTACHMENT	8
09951-07100-01	HANDLE ASSEMBLY 100 - 4.25 INCH	12	*09957-04010	ATTACHMENT	24
09951-07150-01	HANDLE ASSEMBLY 150 - 6.25 INCH	12	*09958-04011	HOLDER	8
09951-07200-01	HANDLE ASSEMBLY 200 - 8.25 INCH	12	*09959-04010	CASE	8
09951-07360-01	HANDLE ASSEMBLY 360 - 14.625 INCH	12	09960-10010	VARIABLE PIN WRENCH SET	1
*09952-04010	SLIDE ARM	8	09960-20010-01	BALL JOINT PULLER	14
*09952-05010	SLIDE ARM	24	*09961-00010	CASE	1
*09952-06010-01	ADAPTER	24	*09961-00020	HOLDER ASSEMBLY	1
*09953-03010-01	FORCING SCREW	9	09961-00950	TORQUE WRENCH ADAPTER	13
*09953-04010	CENTER BOLT 100	8	09961-01270	TORQUE WRENCH ADAPTER	1
*09953-04020	CENTER BOLT 150	8	*09962-00010	ARM	1
*09953-04030	CENTER BOLT 200	8	*09962-00020	ARM B	1
*09953-05010	CENTER BOLT 100	24	*09962-01000	VARIABLE PIN WRENCH ARM ASSEMBLY	1
*09953-05020	CENTER BOLT 150	24	*09963-00350	PIN 3.5	1
*09954-03010-01	PULLER LEG	9	*09963-00400	PIN 4	1
*09954-04010	ARM 25	8	*09963-00450	PIN 4.5	1
*09954-04020	ARM 100	8	*09963-00500	PIN 5	1
*09954-04030	ARM 150	8	*09963-00600	PIN 6	1
*09954-04040	ARM 200	8	*09963-00700	PIN 7	1
*09954-05010-01	CLAW NO. 1	24	*09963-01000	PIN 10	1
*09954-05020	CLAW NO. 2	24	*09989-00010-01	ATTACHMENT A	IN SHOP
*09954-05030	CLAW NO. 3	24	*09989-0010-L	ATTACHMENT A (LONG)	IN SHOP
*09954-05040	CLAW NO. 4	24	09992-00242-01	TURBO BOOST PRESSURE GAUGE SET	22
*09954-05050-01	CLAW NO. 5	24	*09992-00320	GAUGE ASSEMBLY	22

* This tool is a component of an essential kit.

Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
*09992-00330	HOSE	22	*90155-60003	SCREW	24
*09992-00340	HOSE	22	*90179-10016	NUT	1
09992-00350-01	ABS TRAC ACTUATOR AIR BLEED TOOL	16	*90405-09015	NO. 1 UNION	22
*09993-01010	OVERFLOW LEVEL GAUGE	9	*90467-13001	CLIP	22
*09993-01020	VACUUM REGULATOR	9	*90480-01601	GROMMET	1
*09993-01030	FILLER PLUG ADAPTER	9	*90480-13005	GROMMET	1
09993-01100	18MM ADAPTER	4	*91111-51014	BOLT	8
09993-01110	10MM ADAPTER	4	*91551-80650-01	BOLTS (2)	8
09993-01120	ADAPTER, FILLER PLUG EXTENSION	4	*91651-60855-01	BOLT	8
09993-19025	OVERFLOW LEVEL GAUGE SET	9	*95333-06030	HOSE	22
*09993-20010	TANK ASSEMBLY	9	*95336-08070	HOSE	22
09999-00110	WHEEL LOCK MASTER KEY SET	16	*96150-02000	C-RING	22
09999-00310	SPARE TIRE LOCK MASTER KEY SET	16	CR435	REPLACEMENT BATTERIES FOR 09800-WA320	20
09999-00410	TRD MASTER KEY SET	16	DCA-8000P T	DIAGNOSTIC CHARGER	IN SHOP
09999-00411	TRD MASTER KEY SET SUPPLEMENT	16	DSS-5000P T	HANDHELD TESTER	IN SHOP
09999-00510	SUPRA MASTER WHEEL LOCK SET	21	*PP207-1	STANDARD CASE	9
10002-00101-4	FLUID EXTRACT TANK	IN SHOP	*PP207-1	STANDARD CASE	9
11014-00007	ANTENNA TEST KIT	8	*PP691-1	PROTECTIVE RUBBER BOOT AND HOOK FOR PS4X24 SCOPES	9
11021-00027	TERMINAL GAUGE TOOL	5	SU003-03936-01	PULLER FUEL HOSE	1
11216-00011	ENGINE BLOCK OIL PLUG REPAIR	5	*TA000-2	BNC TO 4MM TEST LEADS 3M, BLACK	9
11413-00005	MILLIOHM METER KIT	HEV	*TA001-1	MULTI-METER PROBE - BLACK	9
11717-00012	TPWS TESTER KIT	24	*TA002-1	MULTI-METER PROBE - RED	9
*11815-00009	DIGITAL ANGLE GAUGE KIT	IN SHOP	*TA003-1	SMALL CROCODILE CLIP BLACK	9
11816-00010	RADAR SENSOR CALIBRATION KIT	IN SHOP	*TA004-1	SMALL CROCODILE CLIP RED	9
11819-00026	TERMINAL REMOVAL TOOL KIT	5	*TA005-1	DOLPHIN CLIP - BLACK	9
11919-00023	SUPRA TOOL KIT 1	25	*TA006-1	DOLPHIN CLIP - RED	9
11919-00024	SUPRA TOOL KIT 2	25	*TA008-1	BACK-PINNING PROBES	9
*13847	HOSE	9	*TA010-1	20:1 ATTENUATOR	9
*13850	HOSE	9	*TA018-1	20/60A CLAMP	9
*34661	MALE CONNECTOR	9	*TA019-1	600A CLAMP	9
*34662	FEMALE CONNECTOR	9	*TA030-1	CABLE IDENTIFIER KIT (5MM)	9
*47083	PRESSURE TEST GAUGE (40 INCH HOSE)	18	*TA034-1	FUSE BREAKOUT ATC	9
*47084	PRESSURE TEST GAUGE (100 INCH HOSE)	18	*TA035-1	FUSE BREAKOUT MINI	9
*202851	90 DEGREE ELBOW FITTING (5/8 INCH HEXAGON)	18	*TA125, 126, 127, 128-4	BNC TO 4MM, 3M (10FT) PREMIUM, BLUE, RED, GREEN, YELLOW	9
*206754	HOSE CLAMPS	15	TS2PS2CH-REQ	PICOSCOPE KIT 2-CHANNEL	9
*211711	SHAFT PROTECTOR	15	TS2PS4CH-UPG	PICOSCOPE KIT 4-CHANNEL	9
*308335	ADAPTER, 7MM	18	TSADVUNIT	TECHSTREAM ADVI	IN SHOP
*308336	ADAPTER, 8MM	18	N/A	USB NAVIGATION AND FIRMWARE UPDATE	2
*308337	ADAPTER, 10MM	18			
*308344	CARRYING CASE	9			
*310604	PRESSURE GAUGE	9			
49B025001	SEAL INSTALLER	12			
49D0131A0	INJECTOR SEAL INSTALLER SET	10			
49D015001	COOLANT TEMP SENSOR SOCKET	10			
49E033101	DUST COVER INSTALLER	10			
49F011104	INSTALLER	10			
49G028205	OIL SEAL INSTALLER	10			
49G030796	SEAL INSTALLER	10			
49U034204	DUST BOOT INSTALLER	10			
49UB71525	BEARING INSTALLER	10			
541808	MAGNETIC CAR TOPPER, HIGH VOLTAGE (2)	HEV			
*90119-08216	BOLT	8			

 

 



 



























* This tool is a component of an essential kit.

Drawer Liner Reference

TOOLS

00002-02955	BEAM TORQUE WRENCH
00002-35001	NUT WRENCH HOLDING TOOL
09013-1C160-01	TORXPLUS SOCKET, T40
09013-1C551-01	TORX SOCKET, E14
09013-1C560-01	TORX SOCKET, E16
09013-7C310	10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)
09043-50080	8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)
09216-42010	BELT TENSION WRENCH SET
09224-00010-01	OXYGEN SENSOR SOCKET
09224-74010-01	ENGINE BALANCER BACKLASH TOOL
09249-37010-01	VVT SET BOLT WRENCH
09250-53010-01	SPACER, ENGINE MOUNT
09260-39021-01	INJECTOR SEAL TOOL SET
09260-39030-01	INJECTOR SEAL TOOL SET
09268-21010-01	FUEL HOSE PULLER
09268-74010-01	INJECTOR REMOVER
09276-75010-01	HYDRAULIC LASH ADJUSTER
09387-00130-01	COUNTER DRIVE GEAR NUT WRENCH
09564-33010	DIFFERENTIAL PRELOAD ADAPTER
09960-10010	VARIABLE PIN WRENCH SET
09961-01270	TORQUE WRENCH ADAPTER
SU003-03936-01	PULLER FUEL HOSE


 






DRAWER 1

<p>09216-42010 BELT TENSION WRENCH SET COMPONENTS: 09216-42010 BELT TENSION WRENCH</p> 	<p>09961-01270 TORQUE WRENCH ADAPTER</p> 	<p>09276-54010 09960-10010 VARIABLE PIN WRENCH SET COMPONENTS: 09960-10010 CASE 09960-02000 HOLDER ASSEMBLY 09960-02010 ARM 09960-02020 ARM B 09960-02030 ARM C 09960-02040 PIN A 09960-02050 PIN B 09960-02060 PIN C 09960-02070 PIN D 09960-02080 PIN E 09960-02090 PIN F 09960-02100 PIN G 09960-02110 PIN H 09960-02120 PIN I 09960-02130 PIN J 09960-02140 PIN K 09960-02150 PIN L 09960-02160 PIN M 09960-02170 PIN N 09960-02180 PIN O 09960-02190 PIN P 09960-02200 PIN Q 09960-02210 PIN R 09960-02220 PIN S 09960-02230 PIN T 09960-02240 PIN U 09960-02250 PIN V 09960-02260 PIN W 09960-02270 PIN X 09960-02280 PIN Y 09960-02290 PIN Z 09960-02300 PIN AA 09960-02310 PIN AB 09960-02320 PIN AC 09960-02330 PIN AD 09960-02340 PIN AE 09960-02350 PIN AF 09960-02360 PIN AG 09960-02370 PIN AH 09960-02380 PIN AI 09960-02390 PIN AJ 09960-02400 PIN AK 09960-02410 PIN AL 09960-02420 PIN AM 09960-02430 PIN AN 09960-02440 PIN AO 09960-02450 PIN AP 09960-02460 PIN AQ 09960-02470 PIN AR 09960-02480 PIN AS 09960-02490 PIN AT 09960-02500 PIN AU 09960-02510 PIN AV 09960-02520 PIN AW 09960-02530 PIN AX 09960-02540 PIN AY 09960-02550 PIN AZ 09960-02560 PIN BA 09960-02570 PIN BB 09960-02580 PIN BC 09960-02590 PIN BD 09960-02600 PIN BE 09960-02610 PIN BF 09960-02620 PIN BG 09960-02630 PIN BH 09960-02640 PIN BI 09960-02650 PIN BJ 09960-02660 PIN BK 09960-02670 PIN BL 09960-02680 PIN BM 09960-02690 PIN BN 09960-02700 PIN BO 09960-02710 PIN BP 09960-02720 PIN BQ 09960-02730 PIN BR 09960-02740 PIN BS 09960-02750 PIN BT 09960-02760 PIN BU 09960-02770 PIN BV 09960-02780 PIN BV 09960-02790 PIN BW 09960-02800 PIN BX 09960-02810 PIN BY 09960-02820 PIN BY 09960-02830 PIN BZ 09960-02840 PIN CA 09960-02850 PIN CB 09960-02860 PIN CC 09960-02870 PIN CD 09960-02880 PIN CD 09960-02890 PIN CE 09960-02900 PIN CF 09960-02910 PIN CF 09960-02920 PIN CG 09960-02930 PIN CH 09960-02940 PIN CH 09960-02950 PIN CI 09960-02960 PIN CI 09960-02970 PIN CJ 09960-02980 PIN CK 09960-02990 PIN CK 09960-03000 PIN CL 09960-03010 PIN CL 09960-03020 PIN CM 09960-03030 PIN CM 09960-03040 PIN CN 09960-03050 PIN CN 09960-03060 PIN CO 09960-03070 PIN CO 09960-03080 PIN CP 09960-03090 PIN CP 09960-03100 PIN CQ 09960-03110 PIN CQ 09960-03120 PIN CR 09960-03130 PIN CR 09960-03140 PIN CS 09960-03150 PIN CS 09960-03160 PIN CT 09960-03170 PIN CT 09960-03180 PIN CU 09960-03190 PIN CU 09960-03200 PIN CV 09960-03210 PIN CV 09960-03220 PIN CW 09960-03230 PIN CW 09960-03240 PIN CX 09960-03250 PIN CX 09960-03260 PIN CY 09960-03270 PIN CY 09960-03280 PIN CZ 09960-03290 PIN CZ 09960-03300 PIN DA 09960-03310 PIN DA 09960-03320 PIN DB 09960-03330 PIN DB 09960-03340 PIN DC 09960-03350 PIN DC 09960-03360 PIN DD 09960-03370 PIN DD 09960-03380 PIN DE 09960-03390 PIN DE 09960-03400 PIN DE 09960-03410 PIN DE 09960-03420 PIN DE 09960-03430 PIN DE 09960-03440 PIN DE 09960-03450 PIN DE 09960-03460 PIN DE 09960-03470 PIN DE 09960-03480 PIN DE 09960-03490 PIN DE 09960-03500 PIN DE</p>	<p>00002-02955 BEAM TORQUE WRENCH</p> 	<p>09230-53010-01 SPACER, ENGINE MOUNT</p> 
<p>09216-42010 ADAPTER</p> 	<p>09387-00130-01 COUNTER DRIVE GEAR NUT WRENCH</p> 	<p>09268-21010-01 FUEL HOSE PULLER</p> 	<p>00002-35001 NUT WRENCH HOLDING TOOL</p> 	<p>09224-74010-01 ENGINE BALANCER BACKLASH TOOL</p> 
<p>09260-39030-01 INJECTOR SEAL TOOL SET COMPONENTS: 09260-39030-01 09261-03011-01 09261-03020-01</p> 	<p>09268-37010-01 VVT SET BOLT WRENCH</p> 	<p>09268-74010-01 INJECTOR REMOVER</p> 	<p>09043-50080 10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)</p> 	<p>09043-50080 8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)</p> 
<p>09260-39021-01 INJECTOR SEAL TOOL SET COMPONENTS: 09261-03011-01 09261-03020-01</p> 	<p>09564-33010 DIFFERENTIAL PRELOAD ADAPTER</p> 	<p>SU003-03936-01 PULLER FUEL HOSE</p> 	<p>09013-7C310 10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)</p> 	<p>09224-00010-01 OXYGEN SENSOR SOCKET</p> 
<p>09260-39021-01 INJECTOR SEAL TOOL SET COMPONENTS: 09261-03011-01 09261-03020-01</p> 	<p>09268-74010-01 INJECTOR REMOVER</p> 	<p>09013-1C560-01 TORX SOCKET, E16</p> 	<p>09013-1C560-01 TORX SOCKET, E14</p> 	<p>09013-1C561-01 TORX SOCKET, E16</p> 
<p>09260-39030-01 INJECTOR SEAL TOOL SET COMPONENTS: 09261-03011-01 09261-03020-01</p> 	<p>09564-33010 DIFFERENTIAL PRELOAD ADAPTER</p> 	<p>09013-1C560-01 TORX SOCKET, E16</p> 	<p>09013-1C561-01 TORX SOCKET, E14</p> 	<p>09013-1C561-01 TORX SOCKET, E16</p> 
<p>09260-39030-01 INJECTOR SEAL TOOL SET COMPONENTS: 09261-03011-01 09261-03020-01</p> 	<p>09564-33010 DIFFERENTIAL PRELOAD ADAPTER</p> 	<p>SU003-03936-01 PULLER FUEL HOSE</p> 	<p>09276-75010-01 HYDRAULIC LASH ADJUSTER</p> 	<p>09013-1C160-01 TORXPLUS SOCKET, T40</p> 

TOOLS

09221-18010-01	PISTON PIN REMOVER
09221-18020-01	GUIDE PIN REMOVER
09223-22010	CRANKSHAFT FRONT OIL SEAL REPLACER
09223-63010-01	CRANKSHAFT REAR OIL SEAL REPLACER
09309-37010-01	TRANSMISSION BEARING REPLACER
09387-00090	BEARING RETAINER INSTALLER
09388-40010-01	INPUT SHAFT OIL SEAL REPLACER
09518-36030-01	OIL SEAL & BEARING REPLACER
N/A	USB NAVIGATION AND FIRMWARE UPDATE

DRAWER 2


<p>09221-18010-01 PISTON PIN REMOVER</p> 	<p>09388-40010-01 INPUT SHAFT OIL SEAL REPLACER</p> 
<p>09221-18020-01 GUIDE PIN REMOVER</p> 	<p>09309-37010-01 TRANSMISSION BEARING REPLACER</p> 
<p>09387-00090 BEARING RETAINER INSTALLER</p> 	<p>09518-36030-01 OIL SEAL & BEARING REPLACER</p> 
<p>09223-22010 CRANKSHAFT FRONT OIL SEAL REPLACER</p> 	<p>09223-63010-01 CRANKSHAFT REAR OIL SEAL REPLACER</p> 

Drawer Liner Reference

TOOLS

09213-58012-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-58013-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-58014-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-70011-01	CRANKSHAFT PULLEY HOLDING TOOL
09223-15020	CRANKSHAFT REAR OIL SEAL REPLACER
09223-15030	CRANKSHAFT REAR OIL SEAL REPLACER
09223-78010-01	CRANKSHAFT OIL SEAL REPLACER
09228-06500-02A	OIL FILTER WRENCH
09228-07502	OIL FILTER WRENCH
09248-77010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR SET
09308-00010	OIL SEAL PULLER
09520-10021	TRANS HOUSING REMOVER

 
DRAWER 3

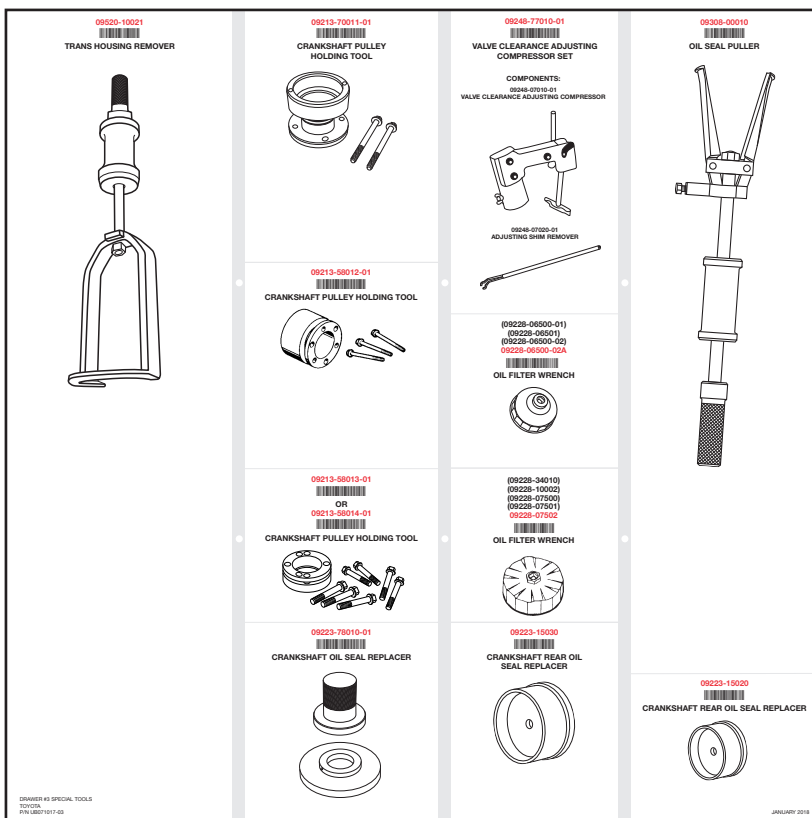

TOOLS

09032-00100-01	GASKET SEAL CUTTER
09202-00018-01	VALVE SPRING COMPRESSOR ADAPTER 12
09202-00020-01	VALVE SPRING COMPRESSOR ADAPTER
09202-43013-01	VALVE SPRING COMPRESSOR W/ADAPTER
09248-55040	VALVE CLEARANCE ADJUST TOOL SET
09326-35020-01	OUTPUT SHAFT ADJUSTING NUT WRENCH
09808-14010-01	FUEL SENDER LOCK RING WRENCH
09808-14031-KIT	FUEL SENDER LOCK NUT WRENCH
09993-01100	18MM ADAPTER
09993-01110	10MM ADAPTER
09993-01120	ADAPTER, FILLER PLUG EXTENSION

 DRAWER 4

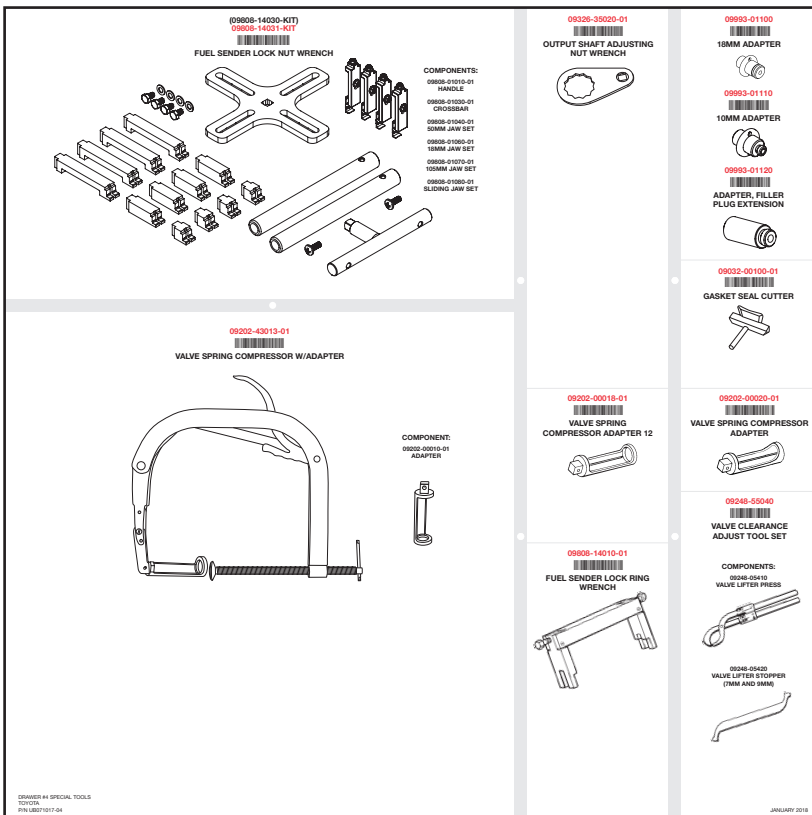

Drawer Liner Reference

TOOLS

- 00002-35027
- 00002-JUMPR-KIT
- 09223-47020-01
- 09322-35010-01
- 09520-01010-02
- 09564-50010-01
- 11021-00027
- 11216-00011
- 11819-00026

- 27MM HEX SOCKET
- OBD-II JUMPER CONNECTOR KIT (4 COMPONENTS)
- REAR CRANKSHAFT SEAL INSTALLER
- INPUT SHAFT HOLDING TOOL SET
- DRIVE SHAFT REMOVER ATTACHMENT
- DIFFERENTIAL PRELOAD ADAPTER
- TERMINAL GAUGE TOOL
- ENGINE BLOCK OIL PLUG REPAIR
- TERMINAL REMOVAL TOOL KIT

DRAWER 5

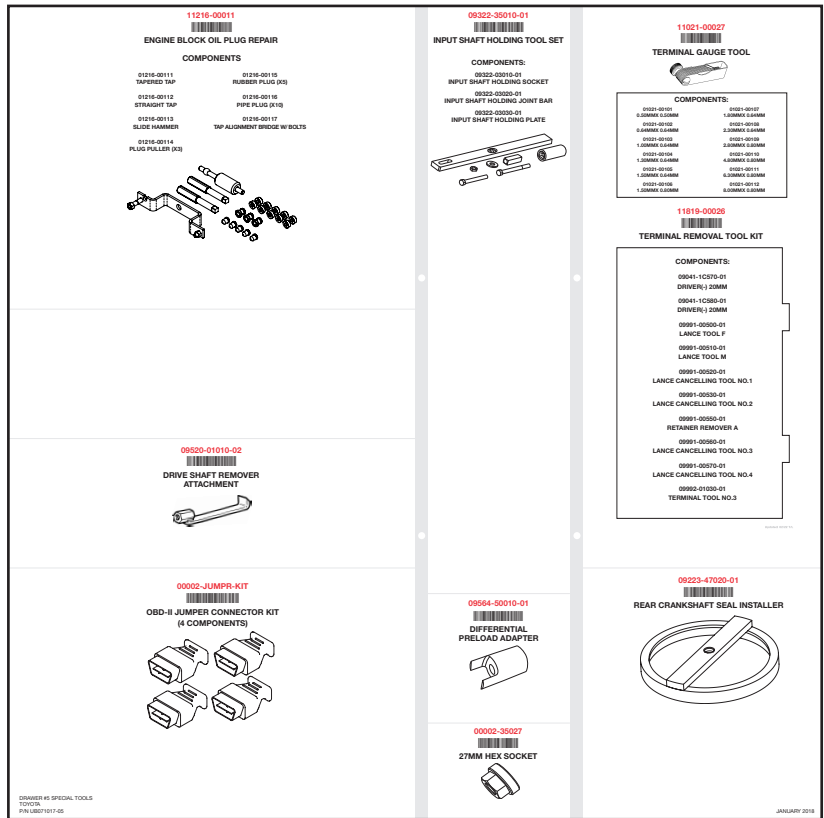 


Diagram of Drawer 5 showing the layout of tools. The tools are organized into sections with their respective part numbers, descriptions, and component lists.

- 11216-00011**: ENGINE BLOCK OIL PLUG REPAIR. Components: 01216-0011 TAPERED TAP, 01216-0012 STRAIGHT TAP, 01216-0013 SLICE MARKER, 01216-0014 PLUG PULLER (2).
- 09323-35010-01**: INPUT SHAFT HOLDING TOOL SET. Components: 09323-0010-01 INPUT SHAFT HOLDING SOCKET, 09323-0015-01 INPUT SHAFT HOLDING JOINT BAR, 09323-0020-01 INPUT SHAFT HOLDING PLATE.
- 11021-00027**: TERMINAL GAUGE TOOL. Components: 11021-0017, 11021-0018, 11021-0019, 11021-0020, 11021-0021, 11021-0022, 11021-0023, 11021-0024, 11021-0025, 11021-0026, 11021-0027, 11021-0028, 11021-0029, 11021-0030.
- 11819-00026**: TERMINAL REMOVAL TOOL KIT. Components: 09041-1C570-01 DRIVER(L) 20MM, 09041-1C580-01 DRIVER(R) 20MM, 09091-00560-01 LANCE TOOL F, 09091-00510-01 LANCE TOOL M, 09091-00520-01 LANCE CANCELLING TOOL NO.1, 09091-00530-01 LANCE CANCELLING TOOL NO.2, 09091-00540-01 BEARING REMOVER A, 09091-00560-01 LANCE CANCELLING TOOL NO.3, 09091-00570-01 LANCE CANCELLING TOOL NO.4, 09092-01030-01 TERMINAL TOOL NO.3.
- 09320-01010-02**: DRIVE SHAFT REMOVER ATTACHMENT.
- 00002-JUMPR-KIT**: OBD-II JUMPER CONNECTOR KIT (4 COMPONENTS).
- 09564-50010-01**: DIFFERENTIAL PRELOAD ADAPTER.
- 00002-35027**: 27MM HEX SOCKET.
- 09223-47020-01**: REAR CRANKSHAFT SEAL INSTALLER.

09091E H4 SPECIAL TOOLS TOOLBOX P/N: 09091017-05 JANUARY 2018

TOOLS

- 00002-00921
- 00002-00922
- 00002-04020-KIT
- 00002-2SUPP
- 09223-75010-01
- 09326-35010-01
- 09387-00010-01
- 09521-25023-01
- 09521-26000-01
- 09521-60010-01
- 09726-02041-01

- REAR AXLE SEAL & BEARING DRIVER
- REAR AXLE SEAL & BEARING DRIVER
- PRIUS-PHV HV BATTERY STRAP
- RATCHETING STRAP (2)
- OIL SEAL REPLACER
- OUTPUT SHAFT ADJUSTING NUT WRENCH AND ADAPTER
- TRANSFER OIL SEAL REPLACER
- REAR AXLE SHAFT PULLER ADAPTER
- REAR AXLE SHAFT PULLER SPACER
- REAR AXLE SHAFT PULLER ADAPTER
- OIL SEAL REPLACER

DRAWER 6

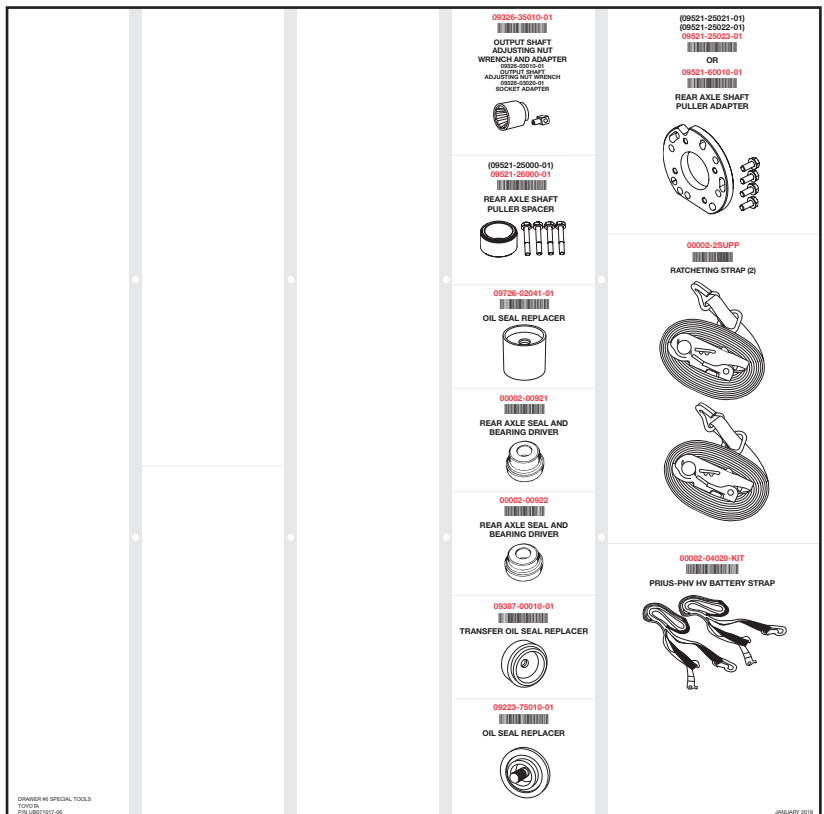 


Diagram of Drawer 6 showing the layout of tools. The tools are organized into sections with their respective part numbers, descriptions, and component lists.

- 09326-35010-01**: OUTPUT SHAFT ADJUSTING NUT WRENCH AND ADAPTER. Components: 09326-0010-01 OUTPUT SHAFT ADJUSTING NUT WRENCH, 09326-0015-01 ADAPTER.
- 09521-25000-01**: REAR AXLE SHAFT PULLER SPACER.
- 09726-02041-01**: OIL SEAL REPLACER.
- 00002-00921**: REAR AXLE SEAL AND BEARING DRIVER.
- 00002-00922**: REAR AXLE SEAL AND BEARING DRIVER.
- 09387-00010-01**: TRANSFER OIL SEAL REPLACER.
- 09223-75010-01**: OIL SEAL REPLACER.
- 09521-25021-01**: REAR AXLE SHAFT PULLER ADAPTER. OR 09521-25022-01.
- 00002-2SUPP**: RATCHETING STRAP (2).
- 00002-04020-KIT**: PRIUS-PHV HV BATTERY STRAP.


09091E H4 SPECIAL TOOLS TOOLBOX P/N: 09091017-05 JANUARY 2018

Drawer Liner Reference

TOOLS

- 00002-12001-01 VEHICLE DRAIN TUBE AUGER
- 09223-56010-01 CRANKSHAFT REAR OIL SEAL REPLACER
- 09325-40010-01 TRANSMISSION OIL PLUG
- 09326-71020-01 LOCK NUT SOCKET WRENCH
- 09520-32040-01 SLIDE HAMMER (5LB.)
- 09521-25011-01 REAR AXLE SHAFT PULLER
- 09570-22011 DIFFERENTIAL MOUNTING CUSHION
REMOVER/REPLACER
- 09710-04101-01 FRONT SPEED SENSOR
INSTALLER

 
DRAWER 7

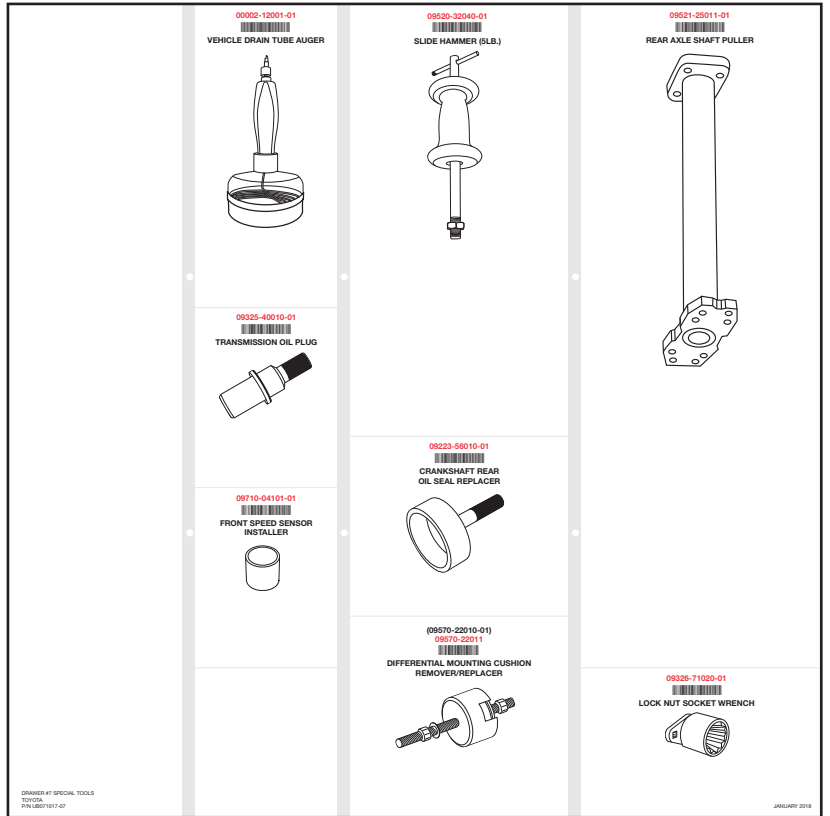

TOOLS

- 09213-54015-01 CRANKSHAFT PULLEY HOLDING TOOL
- 09950-40011 UNIVERSAL PULLER SET "B"
- 09950-60020-01 REPLACER SET #2
- 11014-00007 ANTENNA TEST KIT

 DRAWER 8

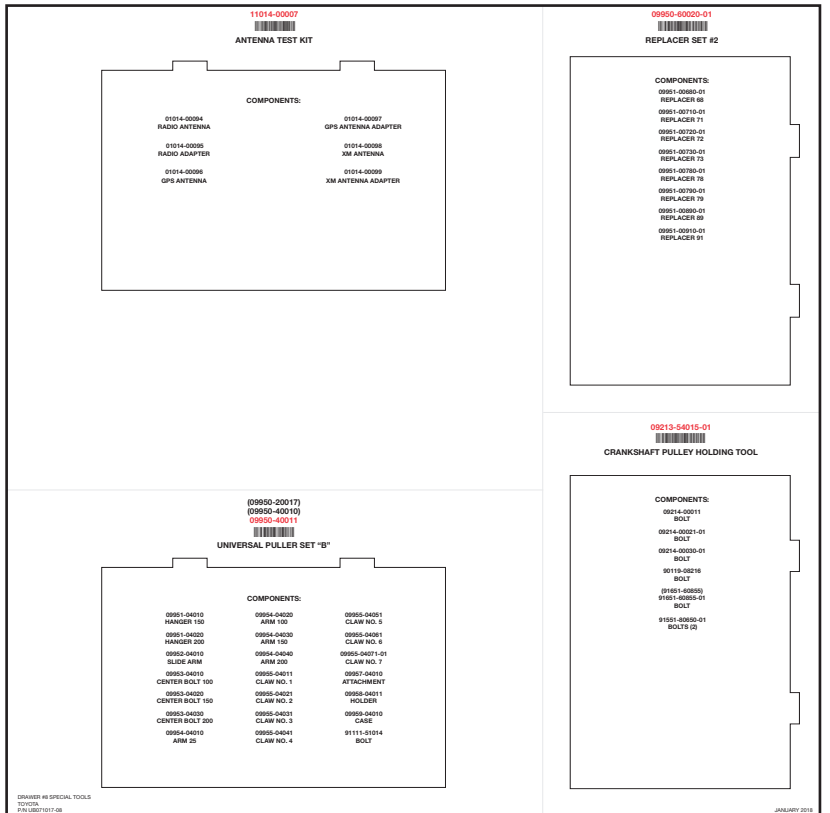


Drawer Liner Reference

TOOLS

00002-00039
00002-90080
09556-16030-01

09564-32011-01
09608-10010-01
09613-22011
09631-12071
09729-22031
09730-00010
09801-18010-01
09870-00005-01
09951-00750-01
09951-00770-01
09951-00810-01
09951-00900-01
09951-01000-01
09951-01030-01
09951-01100-01

 39MM SOCKET
SUBFRAME ALIGNMENT PINS
DIFFERENTIAL DRIVE PINION HOLDING TOOL #28
TOOL #28
PRELOAD ADAPTER
STEERING KNUCKLE OIL SEAL REPLACER
STEERING RACK SHAFT BUSHING PULLER
STEERING RACK OIL SEAL TEST TOOL
FRONT SPRING UPPER SEAT HOLDER
AIR TUBE SEPARATOR
DOOR GLASS BOLT HOLDING TOOL
A/C LINE DISCONNECT KIT
REPLACER 75
REPLACER 77
REPLACER 81
REPLACER 90
REPLACER 100
REPLACER 103
REPLACER 110

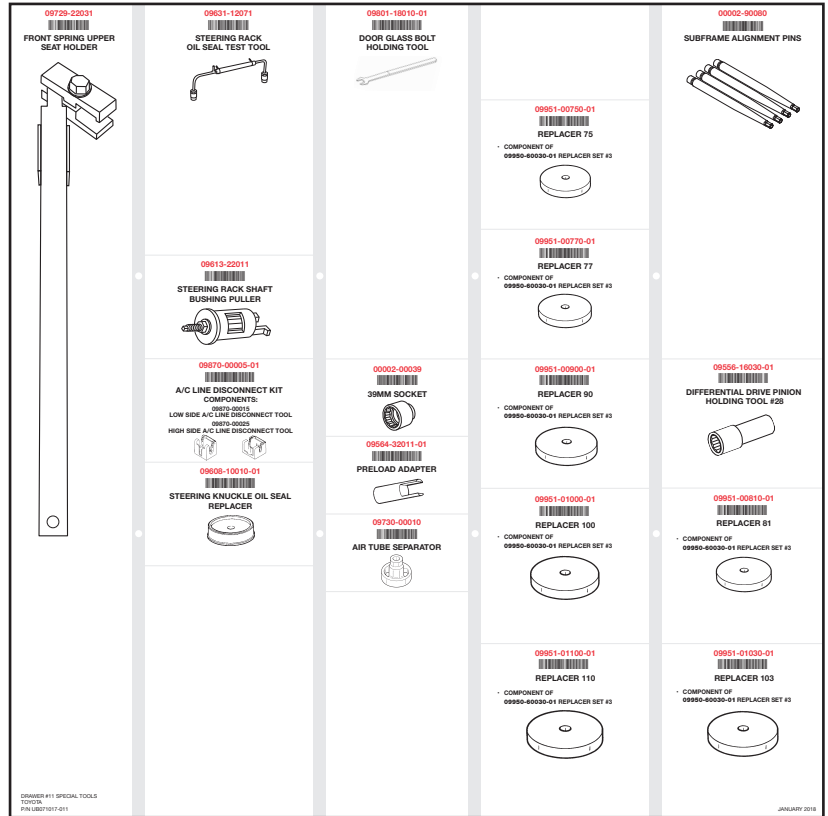


DRAWER 11

TOOLS

00002-00920
01815-00104
01815-00105
09330-00021
09340-00010-01
09509-25011
09556-30010
09608-32010
09612-30012
09616-00010-02
09616-00020-01
09634-60013
09634-60014
09670-00010-01
09922-10010-01
09951-07100-01
09951-07150-01
09951-07200-01
09951-07360-01
49B025001

 DRIVER HANDLE
DRIVE HANDLE ADAPTER
DRIVE HANDLE ADAPTER
COMPANION FLANGE HOLDING TOOL
QUICK CONNECT REMOVER
REAR AXLE BEARING LOCK NUT WRENCH
DIFFERENTIAL BEARING REMOVER
STEERING KNUCKLE OIL SEAL REPLACER
STEERING WORM BEARING PULLER
STEERING SOCKET
STEERING WORM BEARING ADJUSTING SOCKET
STEERING KNUCKLE CENTERING GAUGE
STEERING KNUCKLE CENTERING GAUGE
FRONT CROSS MEMBER GUIDE TOOL
VARIABLE OPEN WRENCH
HANDLE ASSEMBLY 100 - 4.25 INCH
HANDLE ASSEMBLY 150 - 6.25 INCH
HANDLE ASSEMBLY 200 - 8.25 INCH
HANDLE ASSEMBLY 360 - 14.625 INCH
SEAL INSTALLER
STEERING WORM BEARING ADJUSTING SOCKET
STEERING SOCKET
QUICK CONNECT REMOVER
REAR AXLE BEARING LOCK NUT WRENCH
STEERING KNUCKLE OIL SEAL REPLACER

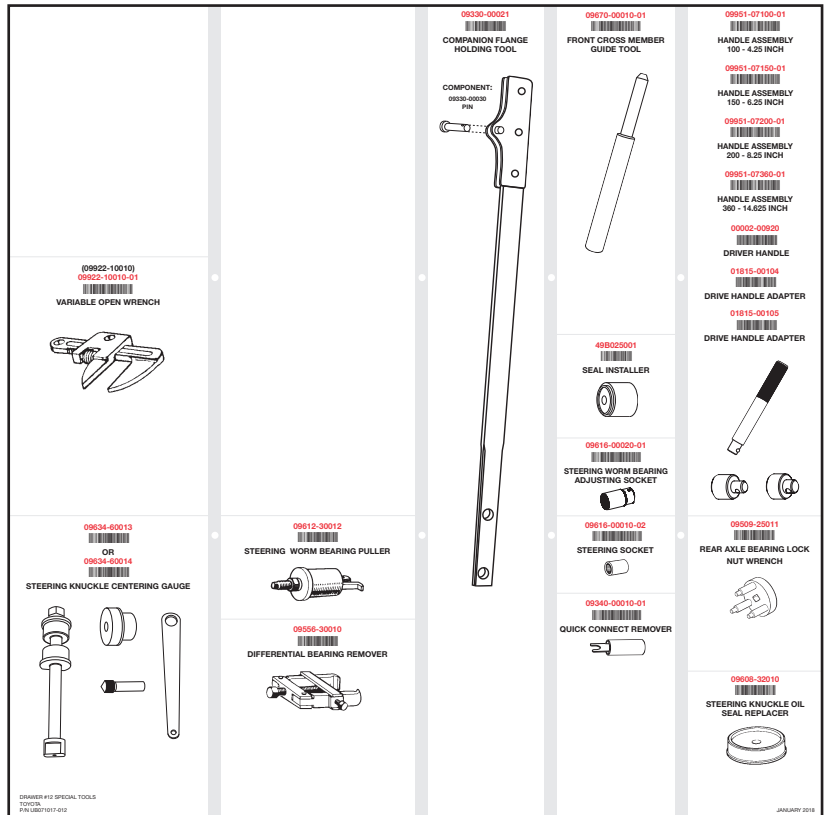


DRAWER 12

Drawer Liner Reference

TOOLS

09223-46011-01	CRANKSHAFT FRONT OIL SEAL REPLACER
09249-63010-01	TORQUE WRENCH ADAPTER
09309-12020-01A	5TH GEAR REPLACER
09554-14010-01	SEAL INSTALLER
09610-20012-01	PITMAN ARM PULLER
09611-22012-01	TIE ROD END PULLER
09612-00012-01	RACK & PINION HOLDING TOOL
09628-62011-01	BALL JOINT PULLER
09631-10021-01	RACK & PINION STOPPER ADJUSTMENT TOOL
09631-12090	SEAL RING TOOL
09710-18010-01	REAR SUSPENSION BUSH KIT
09710-18020-01	REAR SUSPENSION BUSH KIT
09710-18030-01	REAR SUSPENSION BUSH KIT
09710-18040-01	FRONT SUSPENSION BUSH KIT
09716-18010-01	REAR SUSPENSION BUSH R/R
09716-18020-01	FRONT SUSPENSION BUSH R/R
09716-18030-01	FRONT SUSPENSION BUSH
09726-18010-01	STUD BOLT SOCKET
09961-00950	TORQUE WRENCH ADAPTER
09710-07021	BUSHING REMOVER
09710-07031	BUSHING REPLACER
09710-07041	UPPER ARM BASE
09710-07051	UPPER ARM BASE
09710-07062	BUSHING REPLACER
09710-07071	UPPER ARM SPACER
09710-07081	LOWER ARM BASE

 
DRAWER 13

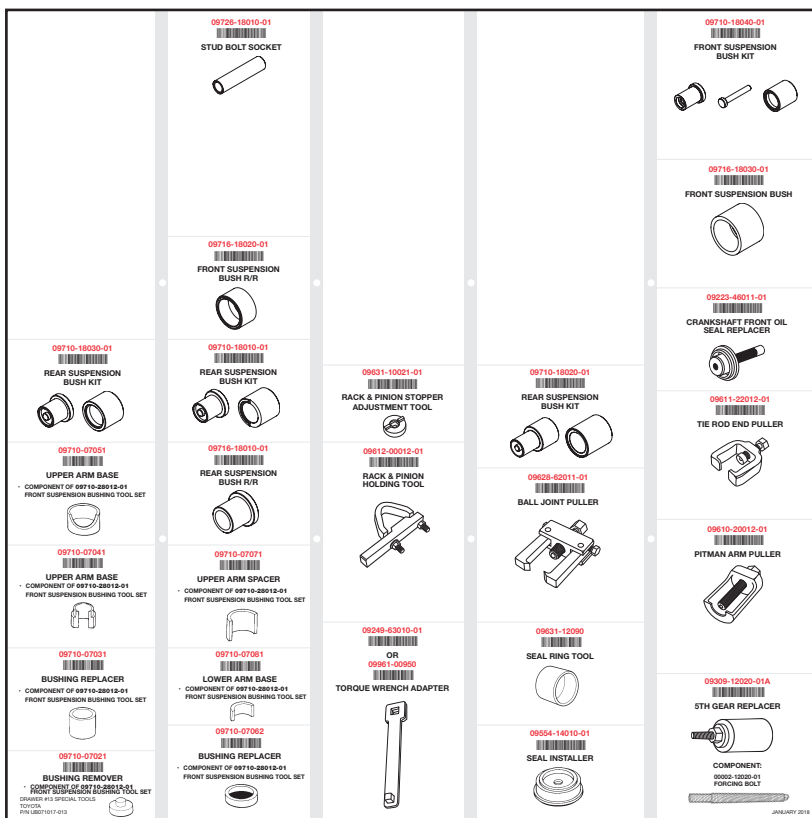

TOOLS

09318-12010-4PIN	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET KIT
09318-12010-8PIN	8 PIN SOCKET KIT
09527-17011	REAR AXLE BEARING REMOVER
09528-52010-01	DIFFERENTIAL GEAR REMOVER & REPLACER SET
09611-20015-01	TIE ROD END PULLER
09628-00011-01	BALL JOINT PULLER
09727-22011-ST	COIL SPRING COMPRESSOR
09727-30050-01	TOE CONTROL LINK REPLACEMENT KIT
09960-20010-01	BALL JOINT PULLER

 DRAWER 14

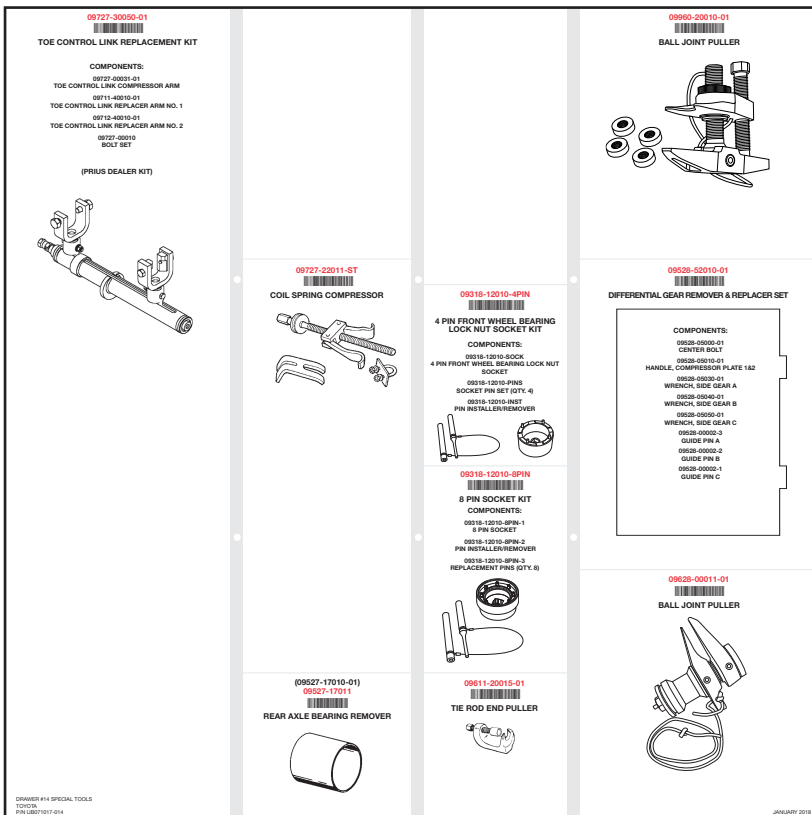


Drawer Liner Reference

TOOLS

- 09527-10011-01 REAR AXLE SHAFT BEARING REMOVER
- 09570-18010-01 REAR DIFF MOUNT CUSHION, R/R
- 09570-18020-01 REAR DIFF MOUNT CUSHION, R/R
- 09570-60010-01 DIFFERENTIAL MOUNTING CUSHION REMOVER AND REPLACER
- 09607-60020-01 FRONT WHEEL ADJUSTING NUT WRENCH
- 09608-16042 FRONT HUB BEARING ADJUSTING TOOL
- 09649-17010 STEERING KNUCKLE TOOL
- 09930-00010-01 DRIVE SHAFT NUT CHISEL

 
DRAWER 15

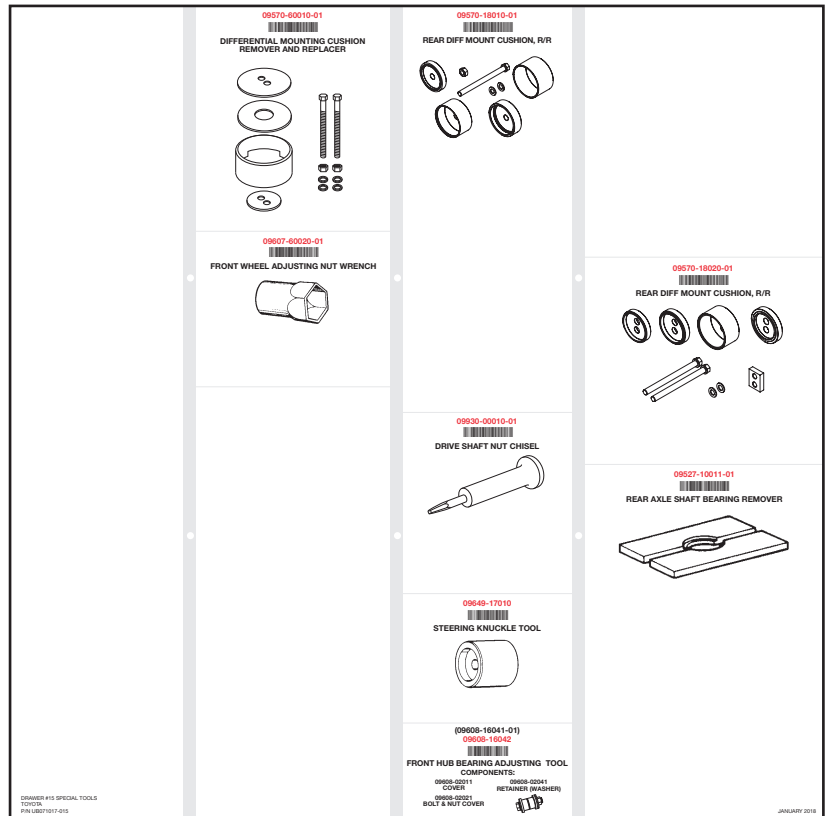

TOOLS

- 09719-14020 REAR DISC BRAKE TOOL SET
- 09737-00013-01 BRAKE BOOSTER PUSH ROD GAUGE
- 09737-00020-01 BRAKE BOOSTER PUSH ROD WRENCH
- 09756-00010 REAR DISC BRAKE ADJUSTER
- 09992-00350-01 ABS TRAC ACTUATOR AIR BLEED TOOL
- 09999-00110 WHEEL LOCK MASTER KEY SET
- 09999-00310 SPARE TIRE LOCK MASTER KEY SET
- 09999-00410 TRD MASTER KEY SET
- 09999-00411 TRD MASTER KEY SET SUPPLEMENT

 DRAWER 16

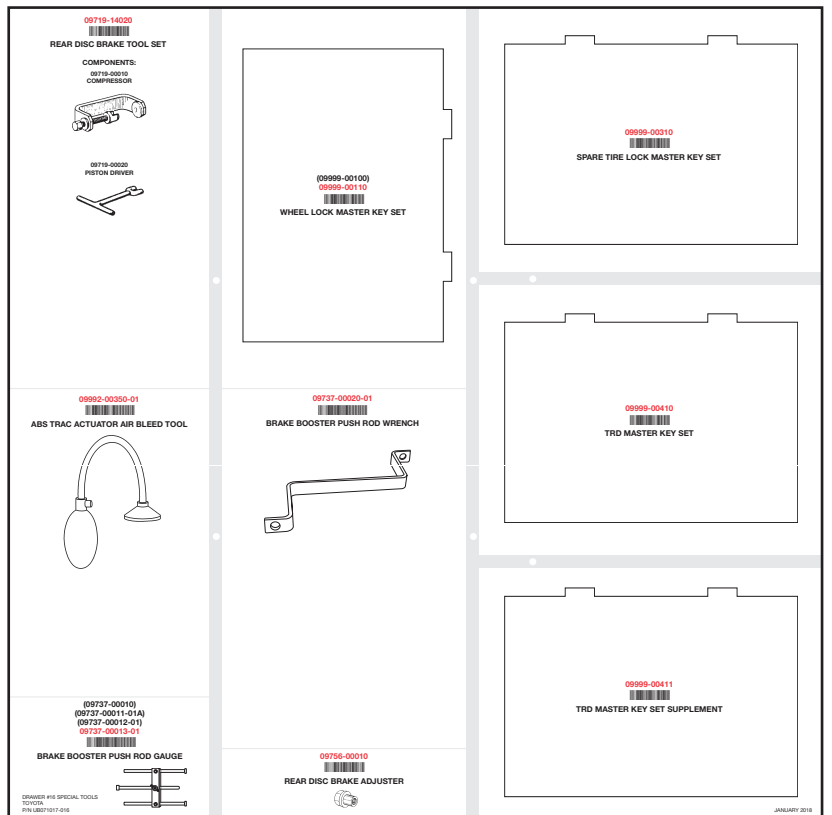


Drawer Liner Reference

TOOLS

09506-42010-01	BEARING RACE REPLACER
09506-42020-01	BEARING RACE REPLACER
09506-42030-01	BASE
09554-42010-01	OIL SEAL REPLACER
09700-WA050-01	TRANSMISSION RELEASE TOOL
09700-WA250	STRUT BOLT SOCKET 6MM STRUT BOLT
09893-10060-01	AC LEAK TEST HIGH ADAPTER
09893-10070-01	AC LEAK TEST LOW ADAPTER
09893-42010-01	BATTERY HANGER
09905-00040	CONNECTOR PLIER
09929-00020-01	CRIMPING TOOL S
09930-42010-01	DRIVE PINION SHAFT NUT CHISEL
09955-04160-01	CLAW NO.16
09956-03090-01	ADAPTER LONG 18 MM

 
DRAWER 17

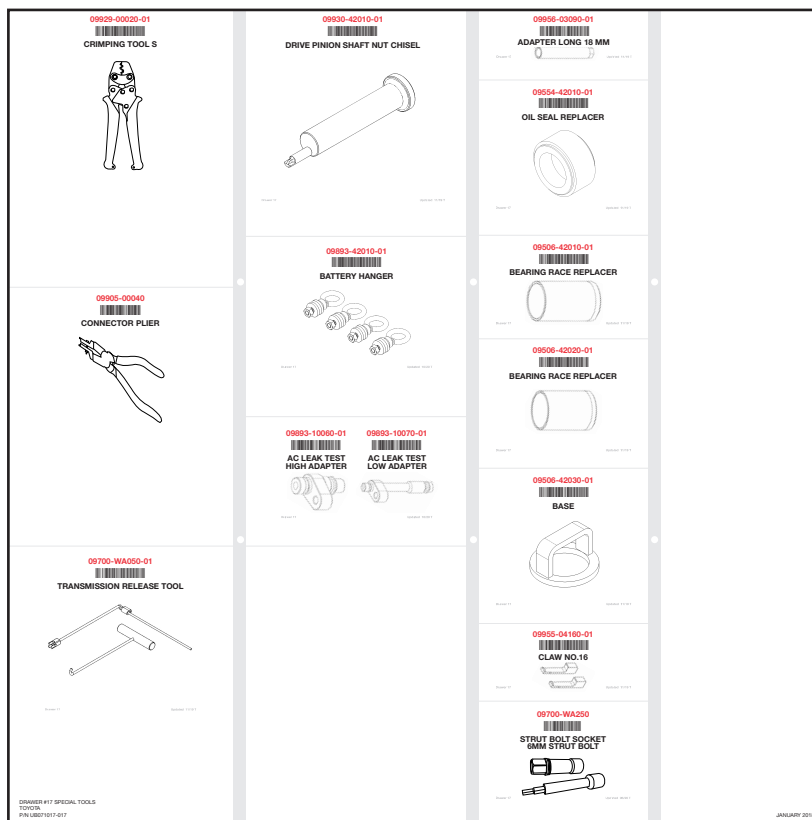

TOOLS

09709-00002	BRAKE PEDAL FORCE GAUGE
09709-29018	LSPV GAUGE SET
09843-18040	DIAGNOSIS CHECK WIRE #2

 
DRAWER 18

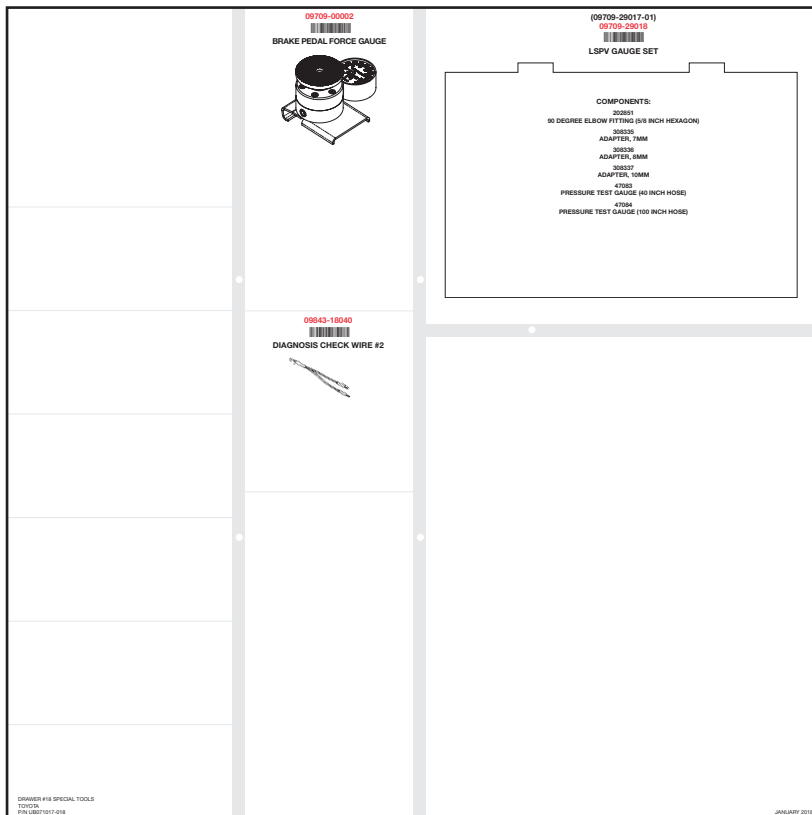

Drawer Liner Reference

TOOLS

 DRAWER 19




DRAWER #19 SPECIAL TOOLS
TOOLKIT
P/N: 08071017-019

JANUARY 2018

TOOLS

DRAWER 20

 - 00002-71368-01 PRY TOOL
- 07112-66040-01 PRESSURE PLATE REMOVER
- 07112-76060-01 MAGNETIC CLUTCH STOPPER
- 09042-2C100 CRIMPER
- 09800-WA320 WINDOW ADJUSTER
- 09812-18010-01 TOOL, FRONT DOOR GLASS ADJ
- 09812-18020-01 TOOL, FRONT DOOR GLASS FIX
- 09820-63020-02 ALTERNATOR CLUTCH HOLDING TOOL SET
- CR435 REPLACEMENT BATTERIES FOR 09800-WA320

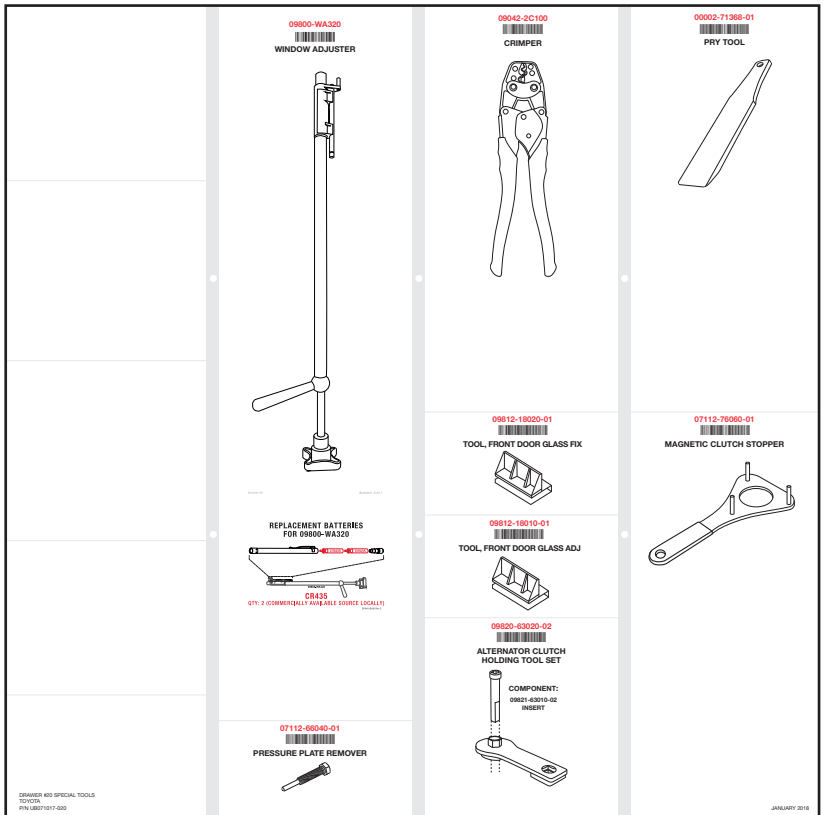

DRAWER #20 SPECIAL TOOLS
TOOLKIT
P/N: 08071017-020

JANUARY 2018

Drawer Liner Reference

TOOLS


- 00002-01775 SEAT HEATER ATTACHMENT KIT
- 00002-06020-01 PLASTIC PRY TOOL KIT
- 01018-00118 SUPRA DIAGNOSTIC CABLE
- 09843-18061 SRS CHECK WIRE
- 09890-47010-01 ANTI-STATIC MAT SET
- 09891-47020-01 INVERTER CASE SEPERATOR
- 09999-00510 SUPRA MASTER WHEEL LOCK SET

DRAWER 21


00002-01775
SEAT HEATER ATTACHMENT KIT

COMPONENTS:

00002-17750 SEAT HEATER ATTACHMENT TOOL

 


09892-18060 FABRIC FASTENERS




00002-01780 REPLACEMENT NEEDLES

09891-47020-01 INVERTER CASE SEPERATOR




09843-18060
09843-18061 SRS CHECK WIRE

 


CONTAINS 41 SPECIAL TOOLS
TOOLKIT
P/N: 09811017-021

01018-00118
SUPRA DIAGNOSTIC CABLE

 


09999-00510
ANTI-STATIC MAT SET



09891-47010-1A ROULEEUSE
09891-47010-01 ANTI-STATIC MAT
09891-47020-01 WRIST BAND
09891-47020-01 GROUNDING WIRE NO.1
09891-47020-01 GROUNDING WIRE NO.2
01018-00118 SUPRA DIAGNOSTIC CABLE
09891-47010-01 INVERTER CAP PLUG

09999-00510
SUPRA MASTER WHEEL LOCK SET

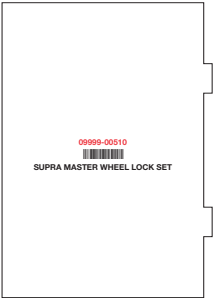

00002-06020-01
PLASTIC PRY TOOL KIT

COMPONENTS:

00002-06100 LARGE ANGGLED GROMMET PRY TOOL
00002-06030 LARGE ANGGLED PRY TOOL
00002-06040 THIN FLAT PRY TOOL
00002-06050 INTERIOR CURVED PRY TOOL
00002-06060 ANGGLED GROMMET PRY TOOL
00002-06070 FLAT GROMMET PRY TOOL
00002-06080 PANEL CLIP PRY TOOL
00002-06090 SMALL ANGGLED GROMMET PRY TOOL
00002-06100 SMALL PRY TOOL

JANUARY 2018

TOOLS

- 09268-31012 INJECTION MEASURING TOOL SET
- 09268-45101-1A EFI FUEL PRESSURE GAUGE SET
- 09808-14040-01 FUEL PUMP RETAINER TOOL
- 09808-14050-01 FUEL PUMP HOLDING TOOL
- 09992-00242-01 TURBO BOOST PRESSURE GAUGE SET

DRAWER 22

09992-00241-01
09992-00242-01
TURBO BOOST PRESSURE GAUGE SET

COMPONENTS:

09992-00230 GAUGE ASSEMBLY
09992-00239 HOSE
09992-00240 HOSE

09268-45101-01
09268-45101-1A
EFI FUEL PRESSURE GAUGE SET

COMPONENTS:


09268-41250-01 T-JOINT	09268-41100-01 UNION, M10
09268-41260-01 EFI FUEL PRESS GA ASSEMBLY	09268-41120-01 UNION, M12
09268-41260-01 HOSE JOINT	09268-44030-01 ADAPTER, M8
09268-41500-01 FUEL TUBE CONNECTOR	09268-44100-01 ADAPTER, M10
09268-41700-01 HOSE BANDS (8)	09268-44120-01 ADAPTER, M12
09268-08070-01 HOSE	09268-00030-01 T-JOINT
09268-43080-01 UNION, M8	09268-00030-01 FUEL TUBE CONNECTOR

09268-41045
09268-41046
09268-41047
09268-31012
INJECTION MEASURING TOOL SET


COMPONENTS:

09268-27011 NO. 3 INJECTOR ADAPTER	09268-41130 NO. 3 INJECTOR ADAPTER	09268-52011 INJECTOR BRASS BUSHING ATTACHMENT
09268-41061 NO. 3 INJECTOR ADAPTER	09268-41140 NO. 3 INJECTOR ADAPTER	09400-09016 NO. 1 UNION
09268-41071 NO. 4 INJECTOR ADAPTER	09268-41160 NO. 4 INJECTOR ADAPTER	09401-13001 CLIP
09268-41081 NO. 6 INJECTOR ADAPTER	09268-41300 NO. 6 INJECTOR ADAPTER	09268-08030 HOSE
09268-41091 NO. 7 INJECTOR ADAPTER	09268-41310 NO. 7 INJECTOR ADAPTER	09268-08070 HOSE
09268-41100 CLAMP	09268-41400 CLAMP	09130-08050 C-RING
09268-41110 CLAMP	09268-41500 CLAMP	
09268-41120 3-WAY ADAPTER	09268-41600 ADAPTER	

09808-14040-01
FUEL PUMP RETAINER TOOL



09808-14050-01
FUEL PUMP HOLDING TOOL



JANUARY 2018


Drawer Liner Reference

TOOLS

09500-WA020
09800-WA120-01
09870-60040-02

AXLE SHAFT REMOVAL TOOL
WINDOW SUCTION CUP TOOL
REFLECTOR C

 DRAWER 23

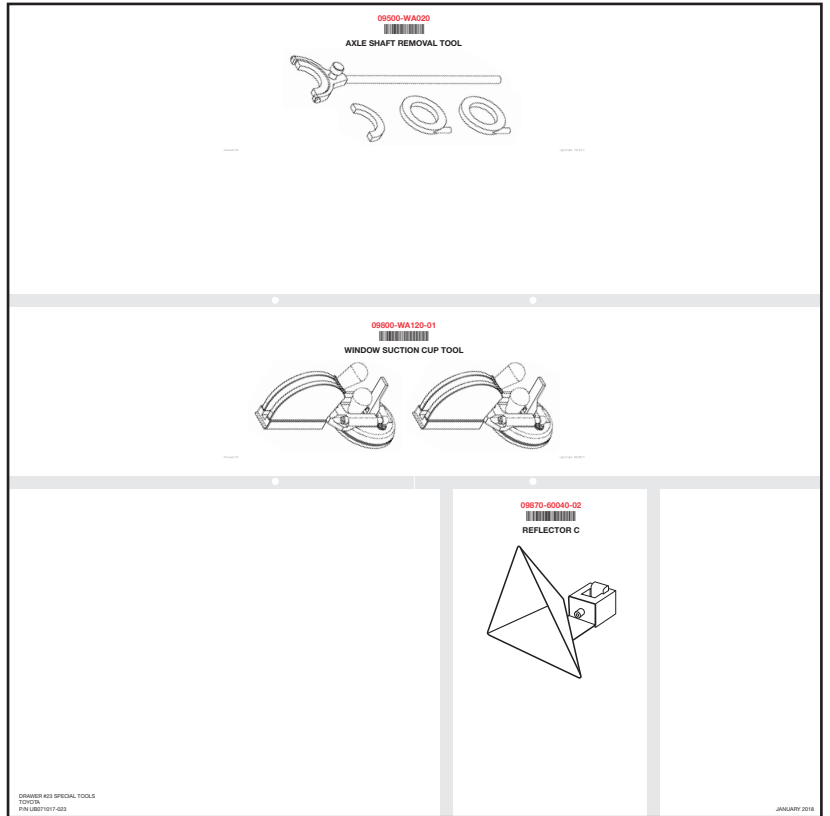


TOOLS

00002-09090-01
09756-48020-1B
09950-50013-01
09950-60010-01
11717-00012

OCCUPANT CLASSIFICATION SEAT WEIGHT SET
ELECTRONIC PARKING BRAKE RELEASE TOOL
UNIVERSAL PULLER SET "C"
REPLACER SET #1
TPWS TESTER KIT

 DRAWER 24

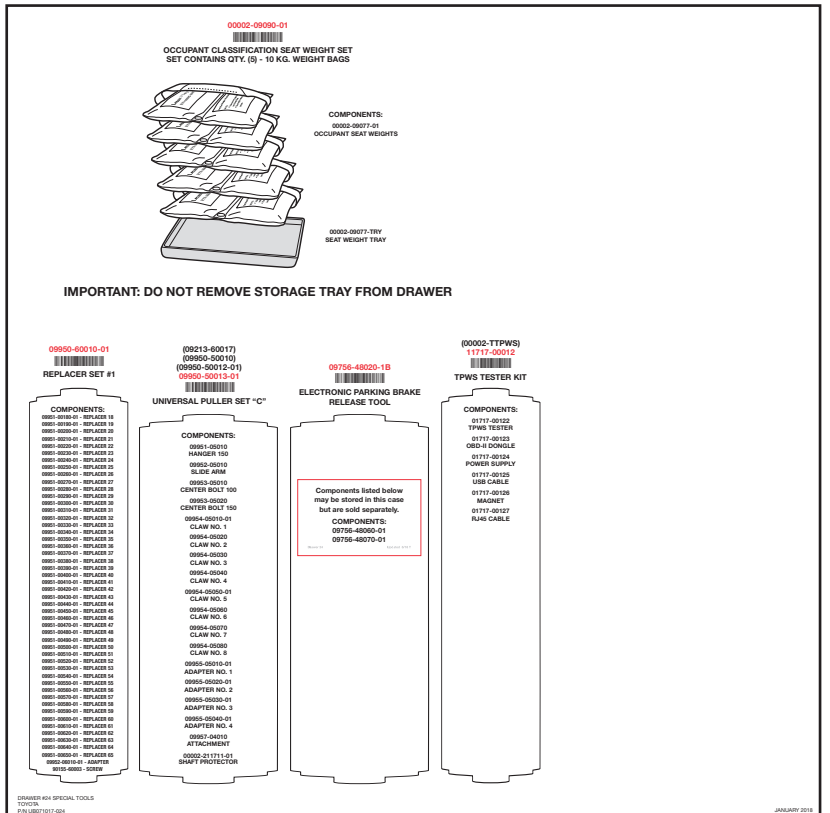

Drawer Liner Reference

TOOLS

11919-00023
11919-00024

SUPRA TOOL KIT 1
SUPRA TOOL KIT 2

DRAWER 25

11919-00023

SUPRA TOOL KIT 1

COMPONENTS:

- 0902-WA20 FUEL INJECTOR SEAL REMOVAL PLIERS
- 0900-WA70 FUEL FILLER TUBE
- 0900-WA20 AXLE SHAFT COLLAR
- 0900-WA10 90MM WRENCH
- 0900-WA80 FUEL INJECTOR INSTALLATION GAUGE
- 0200-WA10 CRANKSHAFT FOCKET
- 0900-WA60 BREAKER BAR
- 0900-WA20 FLEX PLATE ALIGNMENT PIN
- 0902-WA10 FUEL INJECTOR SEAL INSTALLER
- 0900-WA20 DRIVE WRENCH ADAPTER
- 0900-WA20 WIPER ARM PULLER
- 0900-WA20 HOOD SUPPORT EXTENSIONS
- 0910-WA10 STRUT BOLT SOCKET
- 0910-WA20 8MM STRUT BOLT
- 0900-WA20 8MM HEX EXTENSION

11919-00024

SUPRA TOOL KIT 2


COMPONENTS:

- 0200-WA90 4 CYL OIL PRESSURE ADAPTER
- 0900-WA30 DOOR LATCH SPACER
- 0200-WA50-01 6 CYL OIL PRESSURE ADAPTER
- 0910-WA90 FLEX PLATE HOLDING TOOL
- 0900-WA20 FUEL HOSE ADAPTER
- 0900-WA20 FUEL PUMP LOCK RING
- 0900-WA90 CRANKCASE PRESSURE ADAPTER
- 0900-WA10 WINDOW ADJUSTMENT TOOL
- 0200-WA50 FUEL INJECTOR FITTURE
- 0900-WA90 FUEL INJECTOR CAPS
- 0900-WA90 BODY GAP GAUGES
- 0900-WA90 FUEL INJECTOR FITTURE SPACERS
- 0900-WA20 WINDOW ADJUSTMENT MEASURING TOOL
- 0900-WA10 WINDOW ADJUSTMENT WRENCH
- 0900-14010-01 WHEEL GUIDE PINS

DESIGNED BY SPECIAL TOOLS
REVISED
P/N: 09011011-005

JANUARY 2018

 
Essential Tools Not Located in Storage Cabinets

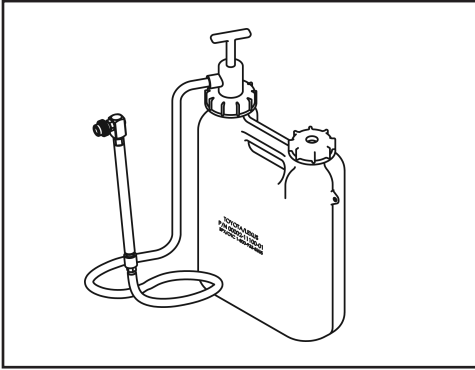


00002-11100-02 TRANSMISSION FILL SYSTEM



 
00002-35000 3/4 INCH DRIVE TORQUE WRENCH

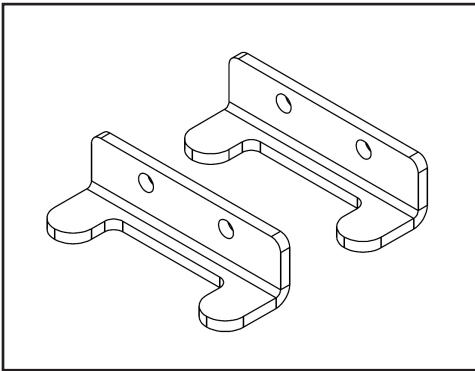

 
00002-1ESBU-KIT ENGINE SUPPORT BAR BRACKET

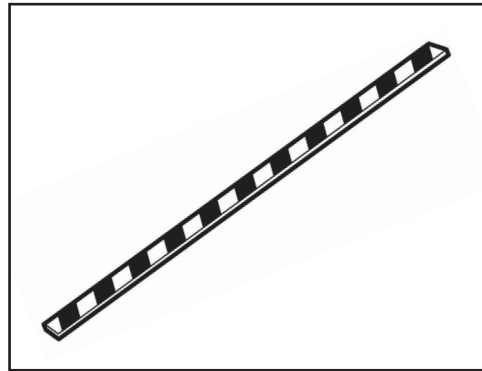


09800-WA300-01 ACC100 RAIL

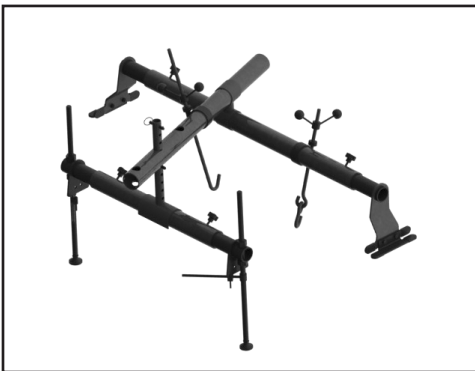 


00002-ESUPPT-01 ENGINE SUPPORT BAR

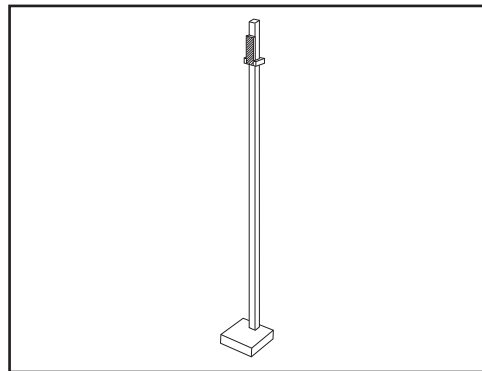 

 09870-60000 LASER RADAR ADJUSTING REFLECTOR

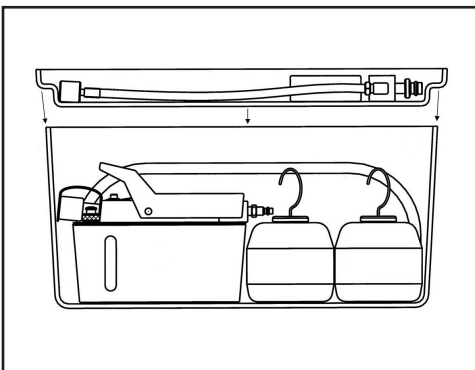

 
00002-12000-01 KDSS FLUID PRESSURE PUMP KIT OR
09760-60020 KDSS FLUID PRESSURE PUMP KIT

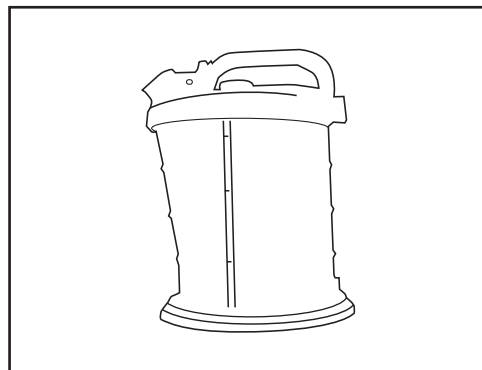

10002-00101-4 FLUID EXTRACT TANK

Note: Size of tools shown on this page are not to scale.

 
Essential Tools Not Located in Storage Cabinets

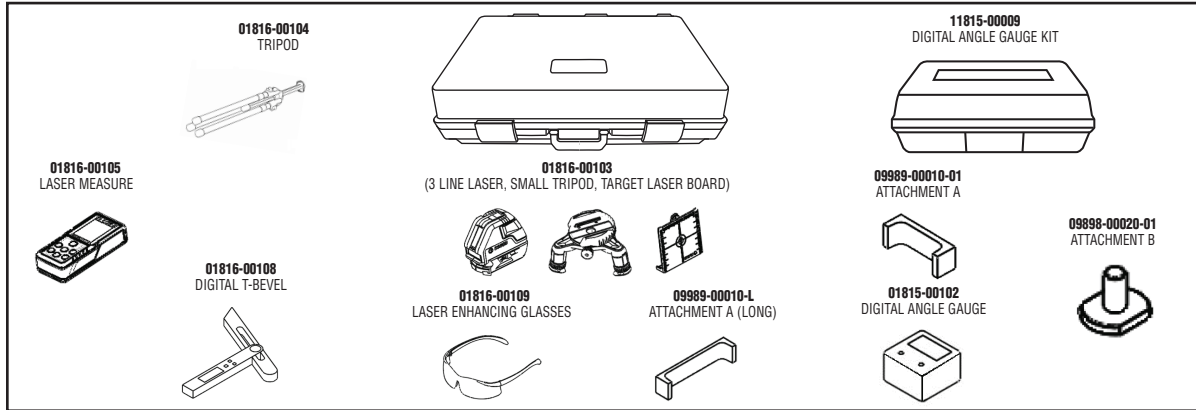

11816-00010 RADAR SENSOR CALIBRATION KIT



 DCA-8000P T DIAGNOSTIC CHARGER

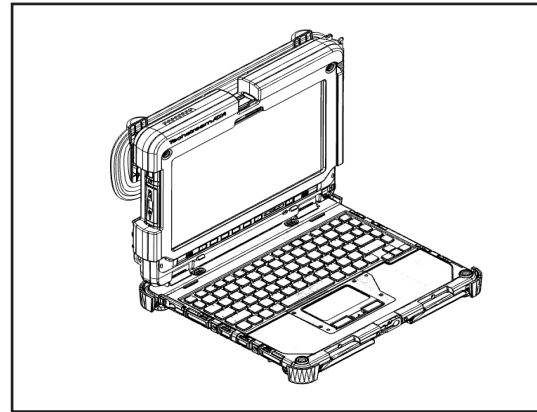

TSADVUNIT TECHSTREAM ADVI

 


DSS-5000P T HANDHELD TESTER


Note: Size of tools shown on this page are not to scale.

Essential Tools Not Located in Storage Cabinets


Hybrid Electric Vehicle (HEV) Workstation

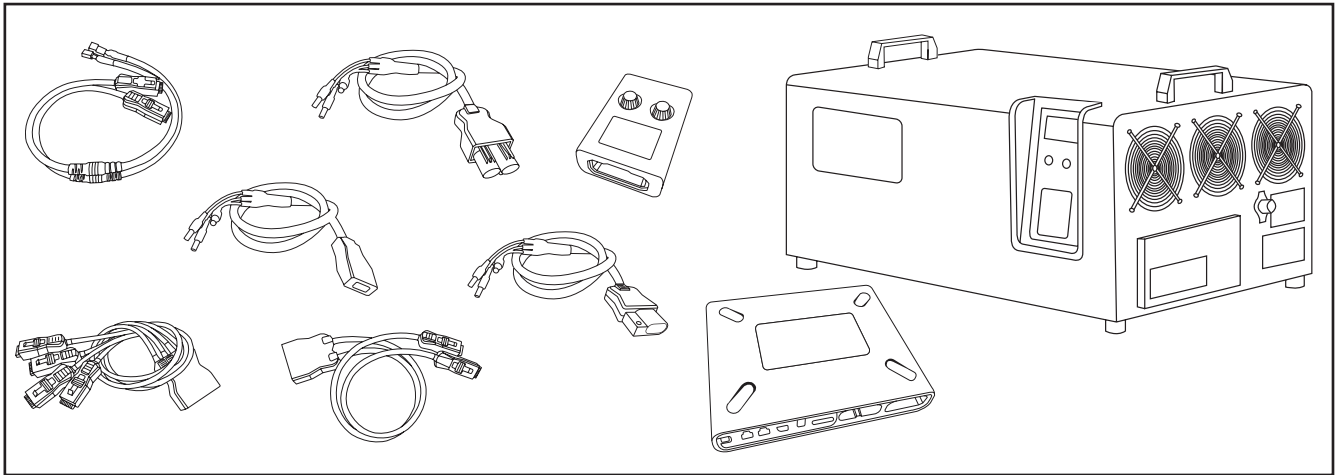

 11413-00002 HIGH VOLTAGE BATTERY SERVICE KIT (GRX 5100)

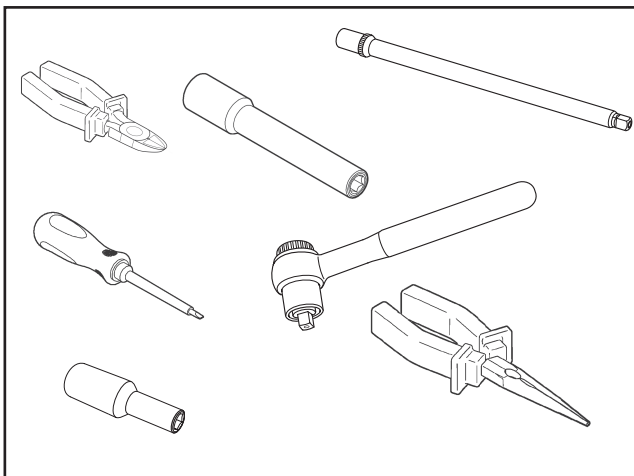


11813-00003 INSULATED TOOLS

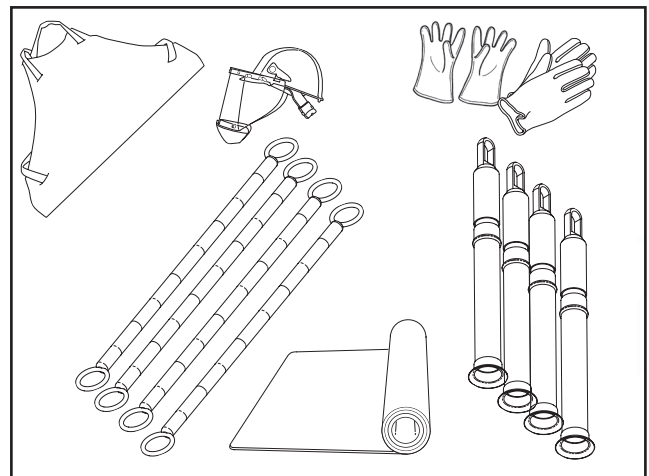 

11413-00004 PERSONAL PROTECTIVE EQUIPMENT (PPE)

 (11413-00007 INSULATED TOOLS AND PPE KIT)

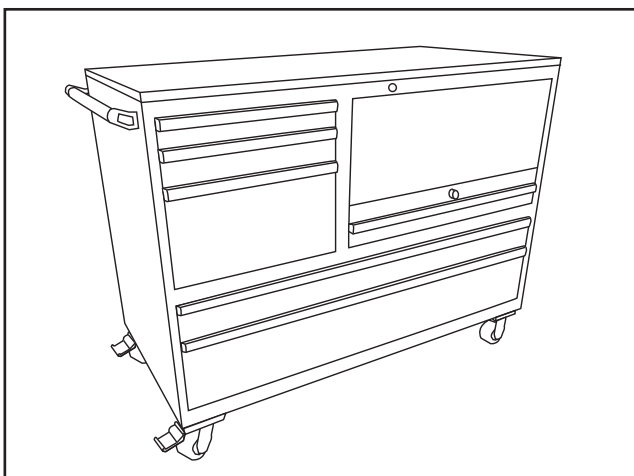

11413-00006 HEV TOOL STORAGE CABINET



11413-00005 MILLIOHM METER KIT



To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335