

---

# **SST Storage System Master Index**

---

**MARCH 2021**

**To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335**



# Table of Contents

---

	<i>Page #</i>
<b>Part Number References</b> .....	<b>2-8</b>
<b>Drawer Liner References</b> .....	<b>9-21</b>
Drawer 1 .....	9
Drawer 2 .....	9
Drawer 3 .....	10
Drawer 4 .....	10
Drawer 5 .....	11
Drawer 6 .....	11
Drawer 7 .....	12
Drawer 8 .....	12
Drawer 9 .....	13
Drawer 10 .....	13
Drawer 11 .....	14
Drawer 12 .....	14
Drawer 13 .....	15
Drawer 14 .....	15
Drawer 15 .....	16
Drawer 16 .....	16
Drawer 17 .....	17
Drawer 18 .....	17
Drawer 19 .....	18
Drawer 20 .....	18
Drawer 21 .....	19
Drawer 22 .....	19
Drawer 23 .....	20
Drawer 24 .....	20
Drawer 25 .....	21
<b>Essential Tools Not Located in Storage Cabinets</b> .....	<b>22-23</b>
<b>Hybrid Electric Vehicle (HEV) Workstation</b> .....	<b>24</b>

**To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335**

# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
00001-00010-01	POWER STEERING PUMP PRESSURE GAUGE SET	9	00002-71368-01	PRY TOOL	20
*00001-47092	ADAPTER	9	00002-90080	SUBFRAME ALIGNMENT PINS	11
*00001-47093	ADAPTER	9	*00002-A0830	CABLE KIT	IN SHOP
*00002-00008	90 DEGREE FITTING	9	*00002-A0870	PRINTER	IN SHOP
00002-00039	39MM SOCKET	11	00002-ESUPPT-01	ENGINE SUPPORT BAR	IN SHOP
*00002-00907-10	PULLER RING HALF	15	00002-JUMPR-KIT	OBD-II JUMPER CONNECTOR KIT (4 COMPONENTS)	5
*00002-00907-11	REPLACER SHAFT COLLAR	15	*00002-V8150	TESTER	IN SHOP
*00002-00907-12	TUBE REMOVER / REPLACER (140MM/ 5 1/2 INCH)	15	*01014-00094	RADIO ANTENNA	8
*00002-00907-13	COLLET HALVES (FOR ATM FRONT PUMP)	15	*01014-00095	RADIO ADAPTER	8
*00002-00907-14	5TH GEAR HUB PULLER	15	*01014-00096	GPS ANTENNA	8
*00002-00907-7	REMOVER / REPLACER (400MM/ 15 3/4 INCH)	15	*01014-00097	GPS ANTENNA ADAPTER	8
*00002-00907-8	FORCING SCREW	15	*01014-00098	XM ANTENNA	8
*00002-00907-9	BEARING PULLER 304839 JAW	15	*01014-00099	XM ANTENNA ADAPTER	8
00002-00909-01	ALL TRAC TOOL SET	9	01018-00118	SUPRA DIAGNOSTIC CABLE	21
00002-00920	DRIVER HANDLE	12	*01216-00111	TAPERED TAP	5
00002-00921	REAR AXLE SEAL & BEARING DRIVER	6	*01216-00112	STRAIGHT TAP	5
00002-00922	REAR AXLE SEAL & BEARING DRIVER	6	*01216-00113	SLIDE HAMMER	5
00002-01775	SEAT HEATER ATTACHMENT KIT	21	*01216-00114	PLUG PULLER (X3)	5
*00002-01780	REPLACEMENT NEEDLES	21	*01216-00115	RUBBER PLUG (X5)	5
00002-02955	BEAM TORQUE WRENCH	1	*01216-00116	PIPE PLUG (X10)	5
00002-04020-KIT	PRIUS-PHV HV BATTERY STRAP	6	*01216-00117	TAP ALIGNMENT BRIDGE W/ BOLTS	5
00002-06020-01	PLASTIC PRY TOOL KIT	21	01413-00002 (GRX-5100T)	HIGH VOLTAGE BATTERY SERVICE UNIT	HEV
*00002-06100	LARGE ANGLED GROMMET PRY TOOL	21	01413-00003 (A580)	INTERLOCK CONNECTOR	HEV
*00002-06200	LARGE ANGLED PRY TOOL	21	01413-00004 (A533)	LOW VOLTAGE CABLE (R)	HEV
*00002-06300	THIN, FLAT PRY TOOL	21	01413-00005 (A573)	AC POWER CORD (S)	HEV
*00002-06400	INTERIOR CURVED PRY TOOL	21	01413-00006 (A574 / A575)	D/C ADAPTER KIT (T / U)	HEV
*00002-06500	ANGLED GROMMET PRY TOOL	21	01413-00007 (A571)	UNIVERSAL HIGH VOLTAGE CABLE (V)	HEV
*00002-06600	FLAT GROMMET PRY TOOL	21	01413-00008 (A572)	UNIVERSAL LOW VOLTAGE CABLE (W)	HEV
*00002-06700	PANEL CLIP PRY TOOL	21	01413-00009 (A505)	HIGH VOLTAGE CABLE (E)	HEV
*00002-06800	SMALL ANGLED GROMMET PRY TOOL	21	01413-00010 (A296)	UNIVERSAL FUSE BOX	HEV
*00002-06900	SMALL PRY TOOL	21	01413-00012 (A586)	A/C CIRCUIT TESTER	HEV
*00002-09077-01	OCCUPANT SEAT WEIGHTS	24	01413-00013 (A501)	HIGH VOLTAGE CABLE (A)	HEV
*00002-09077-TRY	SEAT WEIGHT TRAY	24	01413-00014 (A502)	HIGH VOLTAGE CABLE (B)	HEV
00002-09090-01	OCCUPANT CLASSIFICATION SEAT WEIGHT SET	24	01413-00015 (A503)	HIGH VOLTAGE CABLE (C)	HEV
*00002-10001	CARRYING CASE W/ INSERT	15	01413-00016 (A504)	HIGH VOLTAGE CABLE (D)	HEV
00002-11100-02	TRANSMISSION FILL SYSTEM	IN SHOP	01413-00017 (BCU - 64)	INTERFACE ECU - 64	HEV
00002-12000-01	KDSS FLUID PRESSURE PUMP KIT	IN SHOP	01413-00018 (A507)	HIGH VOLTAGE CABLE (G)	HEV
00002-12001-01	VEHICLE DRAIN TUBE AUGER	7	01413-00019 (A541)	CELL VOLTAGE CABLE (J)	HEV
*00002-12020-01	FORCING BOLT	13	01413-00020 (A551)	TEMPERATURE SENSOR CABLE (K)	HEV
*00002-13525-01	POWER STEERING ADAPTER	9	01413-00021 (A552)	CELL VOLTAGE CABLE (L)	HEV
*00002-13526-01	POWER STEERING ADAPTER	9	01413-00022 (A531)	LOW VOLTAGE CABLE (P)	HEV
*00002-16500	FABRIC FASTENERS	21	01413-00023 (A532)	LOW VOLTAGE CABLE (Q)	HEV
*00002-17750	SEAT HEATER ATTACHMENT TOOL	21	01413-00024 (A521)	STACK BALANCE HARNESS (I)	HEV
00002-1ESBU-KIT	ENGINE SUPPORT BAR BRACKET	IN SHOP	01413-00031 (A564)	BANANA JACK EXTENSION CABLE (X)	HEV
*00002-211711-01	SHAFT PROTECTOR	24	*01413-00069	MILLIOHM METER UNIT	HEV
00002-2SUPP	RATCHETING STRAP (2)	6	*01413-00070	CLIP-TYPE TEST LEAD SET	HEV
00002-35000	3/4 INCH DRIVE TORQUE WRENCH	IN SHOP	*01413-00071	TEMPERATURE SENSOR	HEV
00002-35001	NUT WRENCH HOLDING TOOL	1	01413-00072	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE M	HEV
00002-35027	27MM HEX SOCKET	5	01413-00073	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE L	HEV
*00002-48043-01	POWER STEERING PUMP ADAPTER	9			
*00002-48044-01	POWER STEERING PUMP ADAPTER	9			

\* This tool is a component of an essential kit.

# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
01413-00074	INSULATED GLOVE SET, RUBBER WITH LEATHER PROTECTORS, SIZE XL	HEV	01813-00054	MAGNETIC PICKUP TOOL	HEV
01413-00075	CANVAS GLOVE BAG (3)	HEV	01813-00055	FLASHLIGHT	HEV
01413-00076	GLOVE INFLATOR	HEV	01813-00056	3/8" DRIVE EXT W/SCREWDRIVER HANDLE	HEV
01413-00077-1	42" LOOPER TUBE, ORANGE (4)	HEV	01813-00057	8MM MAGNETIC EXTENSION	HEV
01413-00077-2	BASE, CONE (4)	HEV	01813-00058	NUTSTARTER - COMPOSITE	HEV
01413-00078	4-6FT ADJUSTABLE BARRIER (4)	HEV	01813-00059	DIE CUT FOAM	HEV
01413-00080	ARC PROTECTIVE HELMET & FACE SHIELD	HEV	*01815-00102	DIGITAL ANGLE GAUGE	IN SHOP
01413-00081	LARGE INSULATED MAT (30" X 48")	HEV	01815-00104	DRIVE HANDLE ADAPTER	12
01413-00082	SMALL INSULATED MAT (12" X 30") (3)	HEV	01815-00105	DRIVE HANDLE ADAPTER	12
01413-00083	CAUTION TAPE, ROLL	HEV	*01816-00103	3 LINE LASER, SMALL TRIPOD, TARGET LASER BOARD	IN SHOP
01413-00088	INSULATED APRON	HEV	*01816-00104	TRIPOD	IN SHOP
*01414-00100	INVERTER CAP PLUG	21	*01816-00105	LASER MEASURE	IN SHOP
01416-00119 A & B (A619)	HIGH VOLTAGE CABLE	HEV	*01816-00108	DIGITAL T-BEVEL	IN SHOP
01416-00120 (A620)	CELL VOLTAGE CABLE	HEV	*01816-00109	LASER ENHANCING GLASSES	IN SHOP
01416-00121 (A621)	TEMPERATURE SENSOR CABLE	HEV	07112-66040-01	PRESSURE PLATE REMOVER	20
01418-00106 (A702)	CELL VOLTAGE INTERFACE	HEV	07112-76060-01	MAGNETIC CLUTCH STOPPER	20
01418-00107 (A703)	TEMPERATURE SENSOR INTERFACE	HEV	09013-1C160-01	TORXPLUS SOCKET, T40	1
01418-00109 (A704)	CELL VOLTAGE INTERFACE	HEV	09013-1C551-01	TORX SOCKET, E14	1
01418-00110 (A705)	TEMPERATURE SENSOR INTERFACE	HEV	09013-1C560-01	TORX SOCKET, E16	1
01418-00111 (A706)	CELL VOLTAGE AND TEMPERATURE SENSOR INTERFACE	HEV	09013-6C600-01	LONG BALL HEXAGON WRENCH 5MM	10
01418-00112 (A707)	UNIVERSAL CELL VOLTAGE BCU CABLE	HEV	09013-7C310	10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)	1
01418-00113 (A708)	UNIVERSAL TEMPERATURE BCU CABLE	HEV	09032-00100-01	GASKET SEAL CUTTER	4
01418-00114 (A709)	VOLTAGE BCU CABLE	HEV	09042-2C100	CRIMPER	20
*01717-00122	TPWS TESTER	24	09043-50080	8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)	1
*01717-00123	OBD-II DONGLE	24	*09200-WA020	FUEL HOSE ADAPTER	25
*01717-00124	POWER SUPPLY	24	*09200-WA190	CRANKSHAFT SOCKET	25
*01717-00125	USB CABLE	24	*09200-WA520	FUEL INJECTOR FIXTURE	25
*01717-00126	MAGNET	24	*09200-WA550-01	6CYL OIL PRESSURE ADAPTER	25
*01717-00127	RJ45 CABLE	24	*09200-WA570	FLEX PLATE ALIGNMENT PIN	25
01813-00034	SOCKET-8MM STD 3/8", 6 PT	HEV	*09200-WA680	FUEL INJECTOR FIXTURE SPACERS	25
01813-00035	SOCKET-10MM STD 3/8", 6 PT	HEV	*09200-WA830	FUEL INJECTOR INSTALLATION GAUGE	25
01813-00036	SOCKET-12MM STD 3/8", 6 PT	HEV	*09200-WA960	CRANKCASE PRESSURE ADAPTER	25
01813-00037	SOCKET-14MM STD 3/8", 6 PT	HEV	*09200-WA970	4 CYL OIL PRESSURE ADAPTER	25
01813-00038	SOCKET-8MM DP 3/8", 6 PT	HEV	*09200-WA980	FUEL INJECTOR CAPS	25
01813-00039	SOCKET-10MM DP 3/8", 6 PT	HEV	*09202-00010-01	ADAPTER	4
01813-00040	SOCKET-12MM DP 3/8", 6 PT	HEV	09202-00018-01	VALVE SPRING COMPRESSOR ADAPTER 12	4
01813-00041	SOCKET-14MM DP 3/8", 6 PT	HEV	09202-00020-01	VALVE SPRING COMPRESSOR ADAPTER	4
01813-00042	10MM MAGNETIC EXTENSION	HEV	09202-43013-01	VALVE SPRING COMPRESSOR W/ADAPTER	4
01813-00043	TORQUE WRENCH 3/8"	HEV	09213-54015-01	CRANKSHAFT PULLEY HOLDING TOOL	8
01813-00044	RATCHET 3/8"	HEV	09213-58012-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00045	3/8" X 6" EXTENSION	HEV	09213-58013-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00046	3/8" X 3" EXTENSION	HEV	09213-58014-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00047	#2 X 6" PHILLIPS SCREWDRIVER	HEV	09213-70011-01	CRANKSHAFT PULLEY HOLDING TOOL	3
01813-00048	#1 X 6" PHILLIPS SCREWDRIVER	HEV	*09214-00011	BOLT	8
01813-00049	3/16" X 6" CABINET TIP SCREWDRIVER	HEV	*09214-00021-01	BOLT	8
01813-00050	5/16" X 6" FLAT TIP SCREWDRIVER	HEV	*09214-00030-01	BOLT	8
01813-00051	7" DIAGONAL CUTTERS	HEV	*09216-04010	BELT TENSION WRENCH	1
01813-00052	8" NEEDLE NOSE PLIER	HEV	09216-42010	BELT TENSION WRENCH SET	1
01813-00053	6" NEEDLE NOSE PLIER	HEV	*09216-42020	ADAPTER	1
			09223-15020	CRANKSHAFT REAR OIL SEAL REPLACER	3
			09223-15030	CRANKSHAFT REAR OIL SEAL REPLACER	3

\* This tool is a component of an essential kit.

# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09223-22010	CRANKSHAFT FRONT OIL SEAL REPLACER	2	*09268-43080-01	UNION, M8	23
09223-46011-01	CRANKSHAFT FRONT OIL SEAL REPLACER	13	*09268-43100-01	UNION, M10	22
09223-47020-01	REAR CRANKSHAFT SEAL INSTALLER	5	*09268-43120-01	UNION, M12	22
09223-56010-01	CRANKSHAFT REAR OIL SEAL REPLACER	7	*09268-44080-01	ADAPTER, M8	22
09223-63010-01	CRANKSHAFT REAR OIL SEAL REPLACER	2	*09268-44100-01	ADAPTER, M10	22
09223-75010-01	OIL SEAL REPLACER	6	*09268-44120-01	ADAPTER, M12	22
09223-78010-01	CRANKSHAFT OIL SEAL REPLACER	3	09268-45101-1A	EFI FUEL PRESSURE GAUGE SET	22
09224-00010-01	OXYGEN SENSOR SOCKET	1	*09268-52011	INJECTION MEASURING ATTACHMENT	22
09224-74010-01	ENGINE BALANCER BACKLASH TOOL	1	09268-74010-01	INJECTOR REMOVER	1
09228-06500-02A	OIL FILTER WRENCH	3	09276-75010-01	HYDRAULIC LASH ADJUSTER	1
09228-07502	OIL FILTER WRENCH	3	*09300-WA070	8MM HEX EXTENSION	25
*09248-05410	VALVE LIFTER PRESS	4	09308-00010	OIL SEAL PULLER	3
*09248-05420	VALVE LIFTER STOPPER (7MM AND 9MM)	4	09309-12020-01A	5TH GEAR REPLACER	13
*09248-07010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR	3	*09309-36010-01	TRANSMISSION REAR BEARING REPLACER	9
*09248-07020-01	ADJUSTING SHIM REMOVER	3	09309-37010-01	TRANSMISSION BEARING REPLACER	2
09248-55040	VALVE CLEARANCE ADJUST TOOL SET	4	*09316-12010	TRANSFER BEARING REPLACER	9
09248-77010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR SET	3	*09316-20011-01	TRANSFER BEARING REPLACER	9
09249-37010-01	VVT SET BOLT WRENCH	1	*09318-12010	SPANNER WRENCH	9
09249-63010-01	TORQUE WRENCH ADAPTER	13	09318-12010-4PIN	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET KIT	14
09250-53010-01	SPACER, ENGINE MOUNT	1	09318-12010-8PIN	8 PIN SOCKET KIT	14
09260-39021-01	INJECTOR SEAL TOOL SET	1	*09318-12010-8PIN-1	8 PIN SOCKET	14
09260-39030-01	INJECTOR SEAL TOOL SET	1	*09318-12010-8PIN-2	PIN INSTALLER/REMOVER	14
*09261-03011-01	HOLDER	1	*09318-12010-8PIN-3	REPLACEMENT PINS (QTY. 8)	14
*09261-03020-01	GUIDE	1	*09318-12010-INST	PIN INSTALLER/REMOVER	14
*09261-03030-01	GUIDE	1	*09318-12010-PINS	SOCKET PIN SET (QTY. 4)	14
*09268-00020-01	T-JOINT	22	*09318-12010-SOCK	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET	14
*09268-00030-01	FUEL TUBE CONNECTOR	22	*09318-20010-01	SIDE BEARING NUT WRENCH	9
*09268-08070-01	HOSE	22	*09322-03010-01	INPUT SHAFT HOLDING SOCKET	5
09268-21010-01	FUEL HOSE PULLER	1	*09322-03020-01	INPUT SHAFT HOLDING JOINT BAR	5
*09268-27011	NO. 2 UNION	22	*09322-03030-01	INPUT SHAFT HOLDING PLATE	5
09268-31012	INJECTION MEASURING TOOL SET	22	09322-35010-01	INPUT SHAFT HOLDING TOOL SET	5
*09268-41061	NO. 3 UNION	22	09325-40010-01	TRANSMISSION OIL PLUG	7
*09268-41071	NO. 4 UNION	22	*09326-03010-01	OUTPUT SHAFT ADJUSTING NUT WRENCH	6
*09268-41081	NO. 6 UNION	22	*09326-03020-01	SOCKET ADAPTER	6
*09268-41091	NO. 7 UNION	22	09326-35010-01	OUTPUT SHAFT ADJUSTING NUT WRENCH AND ADAPTER	6
*09268-41100	CLAMP	22	09326-35020-01	OUTPUT SHAFT ADJUSTING NUT WRENCH	4
*09268-41110	ADAPTER	22	09326-71010-01	OUTPUT SHAFT HOLDING WRENCH	10
*09268-41120	3-WAY	22	09326-71020-01	LOCK NUT SOCKET WRENCH	7
*09268-41130	ADAPTER	22	09326-71030-01	OUTPUT SHAFT HOLDING PLATE	10
*09268-41140	ADAPTER	22	09330-00021	COMPANION FLANGE HOLDING TOOL	12
*09268-41160	ADAPTER	22	*09330-00030	PIN	12
*09268-41250-01	T-JOINT	22	09340-00010-01	QUICK CONNECT REMOVER	12
*09268-41260-01	EFI FUEL PRESSURE GAUGE ASSEMBLY	22	09387-00010-01	TRANSFER OIL SEAL REPLACER	6
*09268-41280-01	HOSE JOINT	22	09387-00090	BEARING RETAINER INSTALLER	2
*09268-41300	CLAMP	22	09387-00130-01	COUNTER DRIVE GEAR NUT WRENCH	1
*09268-41310	CLAMP	22	09388-40010-01	INPUT SHAFT OIL SEAL REPLACER	2
*09268-41400	CLAMP	22	09500-WA020	AXLE SHAFT REMOVAL TOOL	23
*09268-41500	CLAMP	22	*09500-WA030	AXLE SHAFT COLLAR	25
*09268-41500-01	FUEL TUBE CONNECTOR	22	*09500-WA170	50MM WRENCH	25
*09268-41500-01	HOSE BANDS (6)	22	*09502-12010-01	BEARING REPLACER	9
*09268-41600	ADAPTER	22			

\* This tool is a component of an essential kit.

# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09506-42010-01	BEARING RACE REPLACER	17	09628-00011-01	BALL JOINT PULLER	14
09506-42020-01	BEARING RACE REPLACER	17	09628-62011-01	BALL JOINT PULLER	13
09506-42030-01	BASE	17	09631-10021-01	RACK & PINION STOPPER ADJUSTMENT TOOL	13
09509-25011	REAR AXLE BEARING LOCK NUT WRENCH	12	09631-12071	STEERING RACK OIL SEAL TEST TOOL	11
09518-36030-01	OIL SEAL & BEARING REPLACER	2	09631-12090	SEAL RING TOOL	13
09520-01010-02	DRIVE SHAFT REMOVER ATTACHMENT	5	09634-60013	STEERING KNUCKLE CENTERING GAUGE	12
09520-10021	TRANS HOUSING REMOVER	3	09634-60014	STEERING KNUCKLE CENTERING GAUGE	12
09520-32040-01	SLIDE HAMMER (5LB.)	7	09649-17010	STEERING KNUCKLE TOOL	15
09521-25011-01	REAR AXLE SHAFT PULLER	7	*09650-14010-01	WHEEL GUIDE PINS	25
09521-25023-01	REAR AXLE SHAFT PULLER ADAPTER	6	09670-00010-01	FRONT CROSS MEMBER GUIDE TOOL	12
09521-26000-01	REAR AXLE SHAFT PULLER SPACER	6	*09700-WA010	STRUT BOLT SOCKET	25
09521-60010-01	REAR AXLE SHAFT PULLER ADAPTER	6	*09700-WA020	5MM STRUT BOLT	25
09527-10011-01	REAR AXLE SHAFT BEARING REMOVER	15	*09700-WA040	FLEX PLATE HOLDING TOOL	25
09527-17011	REAR AXLE BEARING REMOVER	14	09700-WA050-01	TRANSMISSION RELEASE TOOL	17
*09528-00002-1	GUIDE PIN C	14	09700-WA250	STRUT BOLT SOCKET 6MM STRUT BOLT	17
*09528-00002-2	GUIDE PIN B	14	09709-00002	BRAKE PEDAL FORCE GAUGE	18
*09528-00002-3	GUIDE PIN A	14	09709-29018	LSPV GAUGE SET	18
*09528-05000-01	CENTER BOLT	14	09710-04101-01	FRONT SPEED SENSOR INSTALLER	7
*09528-05010-01	HANDLE, COMPRESSOR PLATE 1&2	14	*09710-07021	BUSHING REMOVER	13
*09528-05030-01	WRENCH, SIDE GEAR A	14	*09710-07031	BUSHING REPLACER	13
*09528-05040-01	WRENCH, SIDE GEAR B	14	*09710-07041	UPPER ARM BASE	13
*09528-05050-01	WRENCH, SIDE GEAR C	14	*09710-07051	UPPER ARM BASE	13
09528-52010-01	DIFFERENTIAL GEAR REMOVER & REPLACER SET	14	*09710-07062	BUSHING REPLACER	13
09554-14010-01	SEAL INSTALLER	13	*09710-07071	UPPER ARM SPACER	13
09554-42010-01	OIL SEAL REPLACER	17	*09710-07081	LOWER ARM BASE	13
09556-16030-01	DIFFERENTIAL DRIVE PINION HOLDING TOOL #28	11	09710-18010-01	REAR SUSPENSION BUSH KIT	13
09556-30010	DIFFERENTIAL BEARING REMOVER	12	09710-18020-01	REAR SUSPENSION BUSH KIT	13
09564-32011-01	PRELOAD ADAPTER	11	09710-18030-01	REAR SUSPENSION BUSH KIT	13
09564-33010	DIFFERENTIAL PRELOAD ADAPTER	1	09710-18040-01	FRONT SUSPENSION BUSH KIT	13
09564-50010-01	DIFFERENTIAL PRELOAD ADAPTER	5	09710-28012-01	FRONT SUSPENSION BUSHING TOOL SET	13
09570-18010-01	REAR DIFF MOUNT CUSHION, R/R	15	*09711-40010-01	TOE CONTROL LINK REPLACER ARM NO. 1	14
09570-18020-01	REAR DIFF MOUNT CUSHION, R/R	15	*09712-40010-01	TOE CONTROL LINK REPLACER ARM NO. 2	14
09570-22011	DIFFERENTIAL MOUNTING CUSHION		09716-18010-01	REAR SUSPENSION BUSH R/R	13
	REMOVER / REPLACER	7	09716-18020-01	FRONT SUSPENSION BUSH R/R	13
09570-60010-01	DIFFERENTIAL MOUNTING CUSHION REMOVER		09716-18030-01	FRONT SUSPENSION BUSH	13
	AND REPLACER	15	*09719-00010	COMPRESSOR	16
09607-60020-01	FRONT WHEEL ADJUSTING NUT WRENCH	15	*09719-00020	PISTON DRIVER	16
*09608-02011	COVER	15	09719-14020	REAR DISC BRAKE TOOL SET	16
*09608-02021	BOLT & NUT COVER	15	09726-02041-01	OIL SEAL REPLACER	6
*09608-02041	RETAINER (WASHER)	15	09726-18010-01	STUD BOLT SOCKET	13
09608-10010-01	STEERING KNUCKLE OIL SEAL REPLACER	11	*09727-00010	BOLT SET	14
09608-16042	FRONT HUB BEARING ADJUSTING TOOL	15	*09727-00031-01	TOE CONTROL LINK COMPRESSOR ARM	14
09608-32010	STEERING KNUCKLE OIL SEAL REPLACER	12	09727-22011-ST	COIL SPRING COMPRESSOR	14
09610-20012-01	PITMAN ARM PULLER	13	09727-30050-01	TOE CONTROL LINK REPLACEMENT KIT	14
09611-20015-01	TIE ROD END PULLER	14	09727-58010-01	REBOUND SPRING ADJUST PULLER	10
09611-22012-01	TIE ROD END PULLER	13	09727-58020-01	ADAPTER 12	10
09612-00012-01	RACK & PINION HOLDING TOOL	13	09727-58030-01	ADAPTER 14	10
09612-30012	STEERING WORM BEARING PULLER	12	09727-58100-01	SHOCK ROD HOLDING TOOL	10
09613-22011	STEERING RACK SHAFT BUSHING PULLER	11	09727-58110-01	ATTACHMENT 12	10
09616-00010-02	STEERING SOCKET	12	09727-58120-01	ATTACHMENT 16	10
09616-00020-01	STEERING WORM BEARING ADJUSTING SOCKET	12	09727-58130-01	ATTACHMENT 22	10

\* This tool is a component of an essential kit.



# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
09727-58140-01	ATTACHMENT 25	10	09893-10060-01	AC LEAK TEST HIGH ADAPTER	17
09729-22031	FRONT SPRING UPPER SEAT HOLDER	11	09893-10070-01	AC LEAK TEST LOW ADAPTER	17
09730-00010	AIR TUBE SEPARATOR	11	09893-42010-01	BATTERY HANGER	17
09737-00013-01	BRAKE BOOSTER PUSH ROD GAUGE	16	*09898-00020-01	ATTACHMENT B	IN SHOP
09737-00020-01	BRAKE BOOSTER PUSH ROD WRENCH	16	*09900-WA040	BREAKER BAR	25
09756-00010	REAR DISC BRAKE ADJUSTER	16	09900-WA230-01	WINDOW PLASTIC PRY TOOL	10
09756-48020-1B	ELECTRONIC PARKING BRAKE RELEASE TOOL	24	*09900-WA280-01	DRIVE WRENCH ADAPTER	25
*09756-48060-01	EPB TOOL COMPONENT	24	*09902-WA010	FUEL INJECTOR SEAL INSTALLER	25
*09756-48070-01	EPB TOOL COMPONENT	24	*09902-WA020	FUEL INJECTOR SEAL REMOVAL PLIERS	25
*09800-WA020	WIPER ARM PULLER	25	09905-00040	CONNECTOR PLIER	17
*09800-WA030	HOOD SUPPORT EXTENSIONS	25	09922-10010-01	VARIABLE OPEN WRENCH	12
*09800-WA070	FUEL FILLER TUBE	25	09929-00020-01	CRIMPING TOOL S	17
*09800-WA110	WINDOW ADJUSTMENT TOOL	25	09930-00010-01	DRIVE SHAFT NUT CHISEL	15
09800-WA120-01	WINDOW SUCTION CUP TOOL	23	09930-42010-01	DRIVE PINION SHAFT NUT CHISEL	17
*09800-WA130	WINDOW ADJUSTMENT WRENCH	25	09950-30012-01	UNIVERSAL PULLER SET "A"	9
*09800-WA220	WINDOW ADJUSTMENT MEASURING TOOL	25	09950-40011	UNIVERSAL PULLER SET "B"	8
*09800-WA290	FUEL PUMP LOCK RING	25	09950-50013-01	UNIVERSAL PULLER SET "C"	24
09800-WA300-01	ACC100 RAIL	IN SHOP	09950-60010-01	REPLACER SET #1	24
09800-WA320	WINDOW ADJUSTER	20	09950-60020-01	REPLACER SET #2	8
*09800-WA330	DOOR LATCH SPACER	25	09950-60030-01	REPLACER SET #3	11
*09800-WA340	BODY GAP GAUGES	25	*09951-00180-01	REPLACER 18	24
09801-18010-01	DOOR GLASS BOLT HOLDING TOOL	11	*09951-00190-01	REPLACER 19	24
*09808-01010-01	HANDLE	4	*09951-00200-01	REPLACER 20	24
*09808-01030-01	CROSSBAR	4	*09951-00210-01	REPLACER 21	24
*09808-01040-01	50MM JAW SET	4	*09951-00220-01	REPLACER 22	24
*09808-01060-01	18MM JAW SET	4	*09951-00230-01	REPLACER 23	24
*09808-01070-01	105MM JAW SET	4	*09951-00240-01	REPLACER 24	24
*09808-01080-01	SLIDING JAW SET	4	*09951-00250-01	REPLACER 25	24
09808-01110-01	CLAW	10	*09951-00260-01	REPLACER 26	24
09808-14010-01	FUEL SENDER LOCK RING WRENCH	4	*09951-00270-01	REPLACER 27	24
09808-14031-KIT	FUEL SENDER LOCK NUT WRENCH	4	*09951-00280-01	REPLACER 28	24
09808-14040-01	FUEL PUMP RETAINER TOOL	22	*09951-00290-01	REPLACER 29	24
09808-14050-01	FUEL PUMP HOLDING TOOL	22	*09951-00300-01	REPLACER 30	24
09812-18010-01	TOOL, FRONT DOOR GLASS ADJ	20	*09951-00310-01	REPLACER 31	24
09812-18020-01	TOOL, FRONT DOOR GLASS FIX	20	*09951-00320-01	REPLACER 32	24
09820-63020-02	ALTERNATOR CLUTCH HOLDING TOOL SET	20	*09951-00330-01	REPLACER 33	24
*09821-63010-02	INSERT	20	*09951-00340-01	REPLACER 34	24
09843-18040	DIAGNOSIS CHECK WIRE #2	18	*09951-00350-01	REPLACER 35	24
09843-18061	SRS CHECK WIRE	21	*09951-00360-01	REPLACER 36	24
09870-00005-01	A/C LINE DISCONNECT KIT	11	*09951-00370-01	REPLACER 37	24
*09870-00015	LOW SIDE A/C LINE DISCONNECT TOOL	11	*09951-00380-01	REPLACER 38	24
*09870-00025	HIGH SIDE A/C LINE DISCONNECT TOOL	11	*09951-00390-01	REPLACER 39	24
09870-60000	LASER RADAR ADJUSTING REFLECTOR	IN SHOP	*09951-00400-01	REPLACER 40	24
09870-60040-02	REFLECTOR C	23	*09951-00410-01	REPLACER 41	24
09890-47010-01	ANTI-STATIC MAT SET	21	*09951-00420-01	REPLACER 42	24
*09891-04010-01	ANTI-STATIC MAT	21	*09951-00430-01	REPLACER 43	24
*09891-04020-01	WRIST BAND	21	*09951-00440-01	REPLACER 44	24
*09891-04030-01	GROUNDING WIRE NO. 1	21	*09951-00450-01	REPLACER 45	24
*09891-04040-01	GROUNDING WIRE NO. 2	21	*09951-00460-01	REPLACER 46	24
*09891-47010-1A	SQUEEGEE	21	*09951-00470-01	REPLACER 47	24
09891-47020-01	INVERTER CASE SEPERATOR	21	*09951-00480-01	REPLACER 48	24

\* This tool is a component of an essential kit.



# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
*09951-00490-01	REPLACER 49	24	*09954-04020	ARM 100	8
*09951-00500-01	REPLACER 50	24	*09954-04030	ARM 150	8
*09951-00510-01	REPLACER 51	24	*09954-04040	ARM 200	8
*09951-00520-01	REPLACER 52	24	*09954-05010-01	CLAW NO. 1	24
*09951-00530-01	REPLACER 53	24	*09954-05020	CLAW NO. 2	24
*09951-00540-01	REPLACER 54	24	*09954-05030	CLAW NO. 3	24
*09951-00550-01	REPLACER 55	24	*09954-05040	CLAW NO. 4	24
*09951-00560-01	REPLACER 56	24	*09954-05050-01	CLAW NO. 5	24
*09951-00570-01	REPLACER 57	24	*09954-05060	CLAW NO. 6	24
*09951-00580-01	REPLACER 58	24	*09954-05070	CLAW NO. 7	24
*09951-00590-01	REPLACER 59	24	*09954-05080	CLAW NO. 8	24
*09951-00600-01	REPLACER 60	24	*09955-03011-01	PULLER JAW (SET OF 2)	9
*09951-00610-01	REPLACER 61	24	*09955-03021-01	PULLER JAW (SET OF 3)	9
*09951-00620-01	REPLACER 62	24	*09955-03030-01	LOWER PLATE 130MM	9
*09951-00630-01	REPLACER 63	24	*09955-03040-01	LOWER PLATE 150MM	9
*09951-00640-01	REPLACER 64	24	*09955-04011	CLAW NO. 1	8
*09951-00650-01	REPLACER 65	24	*09955-04021	CLAW NO. 2	8
*09951-00680-01	REPLACER 68	8	*09955-04031	CLAW NO. 3	8
*09951-00710-01	REPLACER 71	8	*09955-04041	CLAW NO. 4	8
*09951-00720-01	REPLACER 72	8	*09955-04051	CLAW NO. 5	8
*09951-00730-01	REPLACER 73	8	*09955-04061	CLAW NO. 6	8
*09951-00750-01	REPLACER 75	11	*09955-04071-01	CLAW NO. 7	8
*09951-00770-01	REPLACER 77	11	09955-04160-01	CLAW NO.16	17
*09951-00780-01	REPLACER 78	8	*09955-05010-01	ADAPTER NO. 1	24
*09951-00790-01	REPLACER 79	8	*09955-05020-01	ADAPTER NO. 2	24
*09951-00810-01	REPLACER 81	11	*09955-05030-01	ADAPTER NO. 3	24
*09951-00890-01	REPLACER 89	8	*09955-05040-01	ADAPTER NO. 4	24
*09951-00900-01	REPLACER 90	11	*09956-03010-01	ADAPTER 16MM	9
*09951-00910-01	REPLACER 91	8	*09956-03020-01	ADAPTER 18MM	9
*09951-01000-01	REPLACER 100	11	*09956-03030-01	ADAPTER 20MM	9
*09951-01030-01	REPLACER 103	11	*09956-03040-01	ADAPTER 22MM	9
*09951-01100-01	REPLACER 110	11	*09956-03050-01	ADAPTER 24MM	9
*09951-03010-01	PULLER HEAD	9	*09956-03060-01	ADAPTER 26MM	9
*09951-04010	HANGER 150	8	*09956-03070-01	ADAPTER 28MM	9
*09951-04020	HANGER 200	8	*09956-03080-01	ADAPTER 10MM	9
*09951-05010	HANGER 150	24	09956-03090-01	ADAPTER LONG 18 MM	17
09951-07100-01	HANDLE ASSEMBLY 100 - 4.25 INCH	12	*09957-04010	ATTACHMENT	8
09951-07150-01	HANDLE ASSEMBLY 150 - 6.25 INCH	12	*09957-04010	ATTACHMENT	24
09951-07200-01	HANDLE ASSEMBLY 200 - 8.25 INCH	12	*09958-04011	HOLDER	8
09951-07360-01	HANDLE ASSEMBLY 360 - 14.625 INCH	12	*09959-04010	CASE	8
*09952-04010	SLIDE ARM	8	09960-10010	VARIABLE PIN WRENCH SET	1
*09952-05010	SLIDE ARM	24	09960-20010-01	BALL JOINT PULLER	14
*09952-06010-01	ADAPTER	24	*09961-00010	CASE	1
*09953-03010-01	FORCING SCREW	9	*09961-00020	HOLDER ASSEMBLY	1
*09953-04010	CENTER BOLT 100	8	09961-00950	TORQUE WRENCH ADAPTER	13
*09953-04020	CENTER BOLT 150	8	09961-01270	TORQUE WRENCH ADAPTER	1
*09953-04030	CENTER BOLT 200	8	*09962-00010	ARM	1
*09953-05010	CENTER BOLT 100	24	*09962-00020	ARM B	1
*09953-05020	CENTER BOLT 150	24	*09962-01000	VARIABLE PIN WRENCH ARM ASSEMBLY	1
*09954-03010-01	PULLER LEG	9	*09963-00350	PIN 3.5	1
*09954-04010	ARM 25	8	*09963-00400	PIN 4	1

\* This tool is a component of an essential kit.

# Part Number References

TOOL #	TOOL DESCRIPTION	DRAWER #	TOOL #	TOOL DESCRIPTION	DRAWER #
*09963-00450	PIN 4.5	1	49E033101	DUST COVER INSTALLER	10
*09963-00500	PIN 5	1	49F011104	INSTALLER	10
*09963-00600	PIN 6	1	49G028205	OIL SEAL INSTALLER	10
*09963-00700	PIN 7	1	49G030796	SEAL INSTALLER	10
*09963-01000	PIN 10	1	49U034204	DUST BOOT INSTALLER	10
*09989-00010-01	ATTACHMENT A	IN SHOP	49UB71525	BEARING INSTALLER	10
*09989-0010-L	ATTACHMENT A (LONG)	IN SHOP	541808	MAGNETIC CAR TOPPER, HIGH VOLTAGE (2)	HEV
09992-00242-01	TURBO BOOST PRESSURE GAUGE SET	22	*90119-08216	BOLT	8
*09992-00320	GAUGE ASSEMBLY	22	*90155-60003	SCREW	24
*09992-00330	HOSE	22	*90179-10016	NUT	1
*09992-00340	HOSE	22	*90405-09015	NO. 1 UNION	22
09992-00350-01	ABS TRAC ACTUATOR AIR BLEED TOOL	16	*90467-13001	CLIP	22
*09993-01010	OVERFLOW LEVEL GAUGE	9	*90480-01601	GROMMET	1
*09993-01020	VACUUM REGULATOR	9	*90480-13005	GROMMET	1
*09993-01030	FILLER PLUG ADAPTER	9	*91111-51014	BOLT	8
09993-01100	18MM ADAPTER	4	*91551-80650-01	BOLTS (2)	8
09993-01110	10MM ADAPTER	4	*91651-60855-01	BOLT	8
09993-01120	ADAPTER, FILLER PLUG EXTENSION	4	*95333-06030	HOSE	22
09993-19025	OVERFLOW LEVEL GAUGE SET	9	*95336-08070	HOSE	22
*09993-20010	TANK ASSEMBLY	9	*96150-02000	C-RING	22
09999-00110	WHEEL LOCK MASTER KEY SET	16	CR435	REPLACEMENT BATTERIES FOR 09800-WA320	20
09999-00310	SPARE TIRE LOCK MASTER KEY SET	16	DCA-8000P T	DIAGNOSTIC CHARGER	IN SHOP
09999-00410	TRD MASTER KEY SET	16	DSS-5000P T	HANDHELD TESTER	IN SHOP
09999-00411	TRD MASTER KEY SET SUPPLEMENT	16	*PP207-1	STANDARD CASE	9
09999-00510	SUPRA MASTER WHEEL LOCK SET	21	*PP207-1	STANDARD CASE	9
10002-00101-4	FLUID EXTRACT TANK	IN SHOP	*PP691-1	PROTECTIVE RUBBER BOOT AND HOOK FOR PS4X24 SCOPES	9
11014-00007	ANTENNA TEST KIT	8			
11216-00011	ENGINE BLOCK OIL PLUG REPAIR	5	SU003-03936-01	PULLER FUEL HOSE	1
11413-00005	MILLIOHM METER KIT	HEV	*TA000-2	BNC TO 4MM TEST LEADS 3M, BLACK	9
11717-00012	TPWS TESTER KIT	24	*TA001-1	MULTI-METER PROBE - BLACK	9
*11815-00009	DIGITAL ANGLE GAUGE KIT	IN SHOP	*TA002-1	MULTI-METER PROBE - RED	9
11816-00010	RADAR SENSOR CALIBRATION KIT	IN SHOP	*TA003-1	SMALL CROCODILE CLIP BLACK	9
11919-00023	SUPRA TOOL KIT 1	25	*TA004-1	SMALL CROCODILE CLIP RED	9
11919-00024	SUPRA TOOL KIT 2	25	*TA005-1	DOLPHIN CLIP - BLACK	9
*13847	HOSE	9	*TA006-1	DOLPHIN CLIP - RED	9
*13850	HOSE	9	*TA008-1	BACK-PINNING PROBES	9
*34661	MALE CONNECTOR	9	*TA010-1	20:1 ATTENUATOR	9
*34662	FEMALE CONNECTOR	9	*TA018-1	20/60A CLAMP	9
*47083	PRESSURE TEST GAUGE (40 INCH HOSE)	18	*TA019-1	600A CLAMP	9
*47084	PRESSURE TEST GAUGE (100 INCH HOSE)	18	*TA030-1	CABLE IDENTIFIER KIT (5MM)	9
*202851	90 DEGREE ELBOW FITTING (5/8 INCH HEXAGON)	18	*TA034-1	FUSE BREAKOUT ATC	9
*206754	HOSE CLAMPS	15	*TA035-1	FUSE BREAKOUT MINI	9
*211711	SHAFT PROTECTOR	15	*TA125, 126, 127, 128-4	BNC TO 4MM, 3M (10FT) PREMIUM, BLUE, RED, GREEN, YELLOW	9
*308335	ADAPTER, 7MM	18	TS2PS2CH-REQ	PICOSCOPE KIT 2-CHANNEL	9
*308336	ADAPTER, 8MM	18	TS2PS4CH-UPG	PICOSCOPE KIT 4-CHANNEL	9
*308337	ADAPTER, 10MM	18	TSADVUNIT	TECHSTREAM ADVI	IN SHOP
*308344	CARRYING CASE	9	N/A	USB NAVIGATION AND FIRMWARE UPDATE	2
*310604	PRESSURE GAUGE	9			
49B025001	SEAL INSTALLER	12			
49D0131A0	INJECTOR SEAL INSTALLER SET	10			
49D015001	COOLANT TEMP SENSOR SOCKET	10			

 

 
 








 
 


 


 

 







\* This tool is a component of an essential kit.

# Drawer Liner Reference

## TOOLS

00002-02955	BEAM TORQUE WRENCH
00002-35001	NUT WRENCH HOLDING TOOL
09013-1C160-01	TORXPLUS SOCKET, T40
09013-1C551-01	TORX SOCKET, E14
09013-1C560-01	TORX SOCKET, E16
09013-7C310	10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)
09043-50080	8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)
09216-42010	BELT TENSION WRENCH SET
09224-00010-01	OXYGEN SENSOR SOCKET
09224-74010-01	ENGINE BALANCER BACKLASH TOOL
09249-37010-01	VVT SET BOLT WRENCH
09250-53010-01	SPACER, ENGINE MOUNT
09260-39021-01	INJECTOR SEAL TOOL SET
09260-39030-01	INJECTOR SEAL TOOL SET
09268-21010-01	FUEL HOSE PULLER
09268-74010-01	INJECTOR REMOVER
09276-75010-01	HYDRAULIC LASH ADJUSTER
09387-00130-01	COUNTER DRIVE GEAR NUT WRENCH
09564-33010	DIFFERENTIAL PRELOAD ADAPTER
09960-10010	VARIABLE PIN WRENCH SET
09961-01270	TORQUE WRENCH ADAPTER
SU003-03936-01	PULLER FUEL HOSE

 





## DRAWER 1

<p>09216-42010 BELT TENSION WRENCH SET COMPONENTS: 09216-42010 BELT TENSION WRENCH</p> 	<p>09961-01270 TORQUE WRENCH ADAPTER</p> 	<p>09276-54010 09960-10010 VARIABLE PIN WRENCH SET COMPONENTS: 09960-10010 CASE 09960-02000 HOLDER ASSEMBLY 09960-02010 ARM 09960-02020 ARM B 09960-02030 ARM C 09960-02040 PIN A 09960-02050 PIN B 09960-02060 PIN C 09960-02070 PIN D 09960-02080 PIN E 09960-02090 PIN F 09960-02100 PIN G 09960-02110 PIN H 09960-02120 PIN I 09960-02130 PIN J 09960-02140 PIN K 09960-02150 PIN L 09960-02160 PIN M 09960-02170 PIN N 09960-02180 PIN O 09960-02190 PIN P 09960-02200 PIN Q 09960-02210 PIN R 09960-02220 PIN S 09960-02230 PIN T 09960-02240 PIN U 09960-02250 PIN V 09960-02260 PIN W 09960-02270 PIN X 09960-02280 PIN Y 09960-02290 PIN Z 09960-02300 PIN AA 09960-02310 PIN AB 09960-02320 PIN AC 09960-02330 PIN AD 09960-02340 PIN AE 09960-02350 PIN AF 09960-02360 PIN AG 09960-02370 PIN AH 09960-02380 PIN AI 09960-02390 PIN AJ 09960-02400 PIN AK 09960-02410 PIN AL 09960-02420 PIN AM 09960-02430 PIN AN 09960-02440 PIN AO 09960-02450 PIN AP 09960-02460 PIN AQ 09960-02470 PIN AR 09960-02480 PIN AS 09960-02490 PIN AT 09960-02500 PIN AU 09960-02510 PIN AV 09960-02520 PIN AW 09960-02530 PIN AX 09960-02540 PIN AY 09960-02550 PIN AZ 09960-02560 PIN BA 09960-02570 PIN BB 09960-02580 PIN BC 09960-02590 PIN BD 09960-02600 PIN BE 09960-02610 PIN BF 09960-02620 PIN BG 09960-02630 PIN BH 09960-02640 PIN BI 09960-02650 PIN BJ 09960-02660 PIN BK 09960-02670 PIN BL 09960-02680 PIN BM 09960-02690 PIN BN 09960-02700 PIN BO 09960-02710 PIN BP 09960-02720 PIN BQ 09960-02730 PIN BR 09960-02740 PIN BS 09960-02750 PIN BT 09960-02760 PIN BU 09960-02770 PIN BV 09960-02780 PIN BV 09960-02790 PIN BW 09960-02800 PIN BX 09960-02810 PIN BY 09960-02820 PIN BY 09960-02830 PIN BZ 09960-02840 PIN CA 09960-02850 PIN CB 09960-02860 PIN CB 09960-02870 PIN CC 09960-02880 PIN CC 09960-02890 PIN CD 09960-02900 PIN CD 09960-02910 PIN CE 09960-02920 PIN CE 09960-02930 PIN CF 09960-02940 PIN CF 09960-02950 PIN CG 09960-02960 PIN CG 09960-02970 PIN CH 09960-02980 PIN CH 09960-02990 PIN CI 09960-03000 PIN CI</p> 	<p>00002-02955 BEAM TORQUE WRENCH</p> 	<p>09230-53010-01 SPACER, ENGINE MOUNT</p> 
<p>09216-42010 ADAPTER</p> 	<p>09387-00130-01 COUNTER DRIVE GEAR NUT WRENCH</p> 	<p>00002-35001 NUT WRENCH HOLDING TOOL</p> 	<p>09224-74010-01 ENGINE BALANCER BACKLASH TOOL</p> 	
<p>09224-00010-01 OXYGEN SENSOR SOCKET</p> 	<p>09249-37010-01 VVT SET BOLT WRENCH</p> 	<p>09043-50080 8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)</p> 	<p>09043-50100-01 10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)</p> 	
<p>09260-39030-01 INJECTOR SEAL TOOL SET COMPONENTS: 09260-39030-01 09260-39021-01 09260-39030-01</p> 	<p>09268-21010-01 FUEL HOSE PULLER</p> 	<p>09268-74010-01 INJECTOR REMOVER</p> 	<p>09013-7C310 10MM BI-HEXAGON SOCKET (1/2 INCH DRIVE)</p> 	
<p>09564-33010 DIFFERENTIAL PRELOAD ADAPTER</p> 	<p>09268-74010-01 INJECTOR REMOVER</p> 	<p>09043-50080 8MM BI-HEXAGON WRENCH (1/2 INCH DRIVE)</p> 	<p>09224-00010-01 OXYGEN SENSOR SOCKET</p> 	
<p>09960-10010 VARIABLE PIN WRENCH SET</p> 	<p>SU003-03936-01 PULLER FUEL HOSE</p> 	<p>09276-75010-01 HYDRAULIC LASH ADJUSTER</p> 	<p>09013-1C560-01 TORX SOCKET, E14</p> 	
<p>09961-01270 TORQUE WRENCH ADAPTER</p> 	<p>09276-75010-01 HYDRAULIC LASH ADJUSTER</p> 	<p>09013-1C561-01 TORX SOCKET, E16</p> 	<p>09013-1C160-01 TORXPLUS SOCKET, T40</p> 	

## TOOLS

09223-22010	CRANKSHAFT FRONT OIL SEAL REPLACER
09223-63010-01	CRANKSHAFT REAR OIL SEAL REPLACER
09309-37010-01	TRANSMISSION BEARING REPLACER
09387-00090	BEARING RETAINER INSTALLER
09388-40010-01	INPUT SHAFT OIL SEAL REPLACER
09518-36030-01	OIL SEAL & BEARING REPLACER
N/A	USB NAVIGATION AND FIRMWARE UPDATE

## DRAWER 2

 
<p>09388-40010-01 INPUT SHAFT OIL SEAL REPLACER</p> 	<p>09309-37010-01 TRANSMISSION BEARING REPLACER</p> 
<p>09387-00090 BEARING RETAINER INSTALLER</p> 	<p>09518-36030-01 OIL SEAL &amp; BEARING REPLACER</p> 
<p>09223-22010 CRANKSHAFT FRONT OIL SEAL REPLACER</p> 	<p>09223-63010-01 CRANKSHAFT REAR OIL SEAL REPLACER</p> 

# Drawer Liner Reference

## TOOLS

09213-58012-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-58013-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-58014-01	CRANKSHAFT PULLEY HOLDING TOOL
09213-70011-01	CRANKSHAFT PULLEY HOLDING TOOL
09223-15020	CRANKSHAFT REAR OIL SEAL REPLACER
09223-15030	CRANKSHAFT REAR OIL SEAL REPLACER
09223-78010-01	CRANKSHAFT OIL SEAL REPLACER
09228-06500-02A	OIL FILTER WRENCH
09228-07502	OIL FILTER WRENCH
09248-77010-01	VALVE CLEARANCE ADJUSTING COMPRESSOR SET
09308-00010	OIL SEAL PULLER
09520-10021	TRANS HOUSING REMOVER


## DRAWER 3

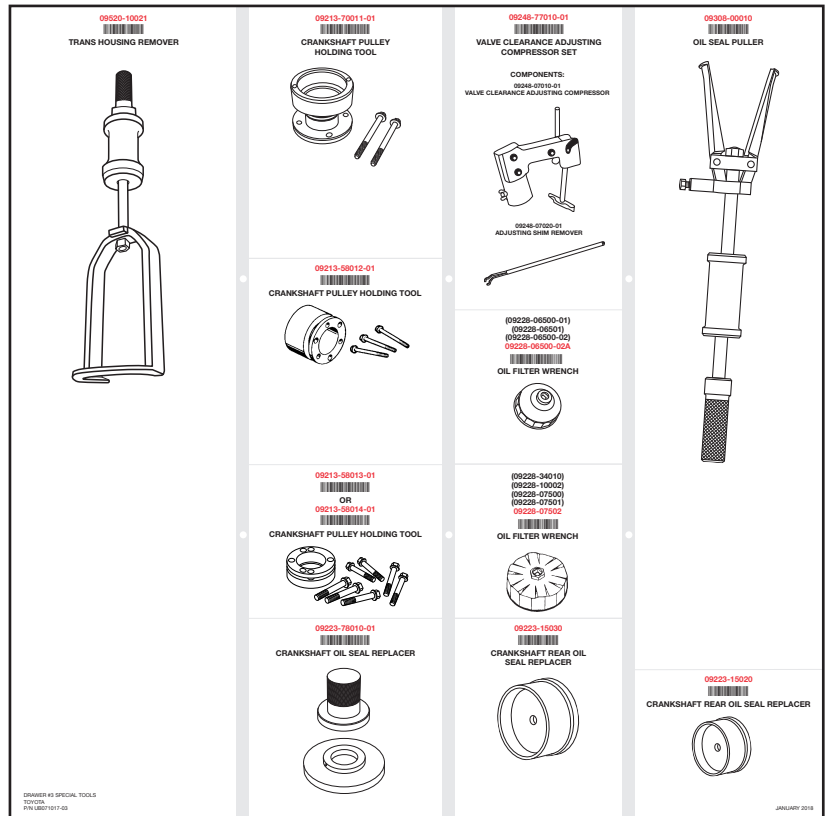

## TOOLS

09032-00100-01	GASKET SEAL CUTTER
09202-00018-01	VALVE SPRING COMPRESSOR ADAPTER 12
09202-00020-01	VALVE SPRING COMPRESSOR ADAPTER
09202-43013-01	VALVE SPRING COMPRESSOR W/ADAPTER
09248-55040	VALVE CLEARANCE ADJUST TOOL SET
09326-35020-01	OUTPUT SHAFT ADJUSTING NUT WRENCH
09808-14010-01	FUEL SENDER LOCK RING WRENCH
09808-14031-KIT	FUEL SENDER LOCK NUT WRENCH
09993-01100	18MM ADAPTER
09993-01110	10MM ADAPTER
09993-01120	ADAPTER, FILLER PLUG EXTENSION
 
## DRAWER 4

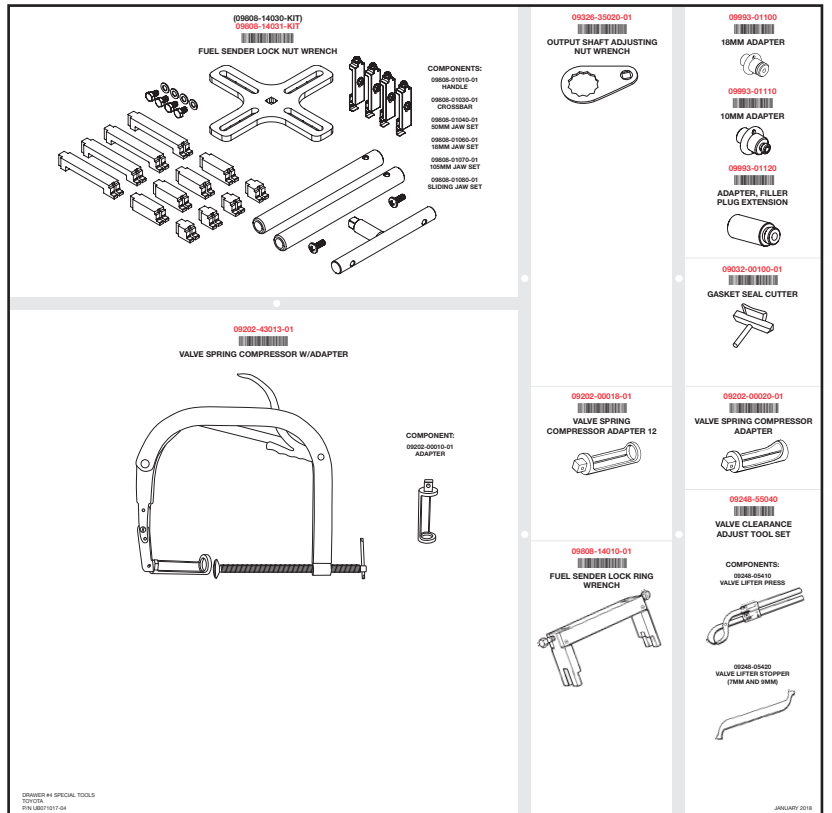


# Drawer Liner Reference

## TOOLS

00002-35027  
00002-JUMPR-KIT  
  
09223-47020-01  
09322-35010-01  
09520-01010-02  
09564-50010-01  
11216-00011

27MM HEX SOCKET  
OBD-II JUMPER CONNECTOR KIT  
(4 COMPONENTS)  
  
REAR CRANKSHAFT SEAL INSTALLER  
INPUT SHAFT HOLDING TOOL SET  
DRIVE SHAFT REMOVER ATTACHMENT  
DIFFERENTIAL PRELOAD ADAPTER  
ENGINE BLOCK OIL PLUG REPAIR
 
## DRAWER 5

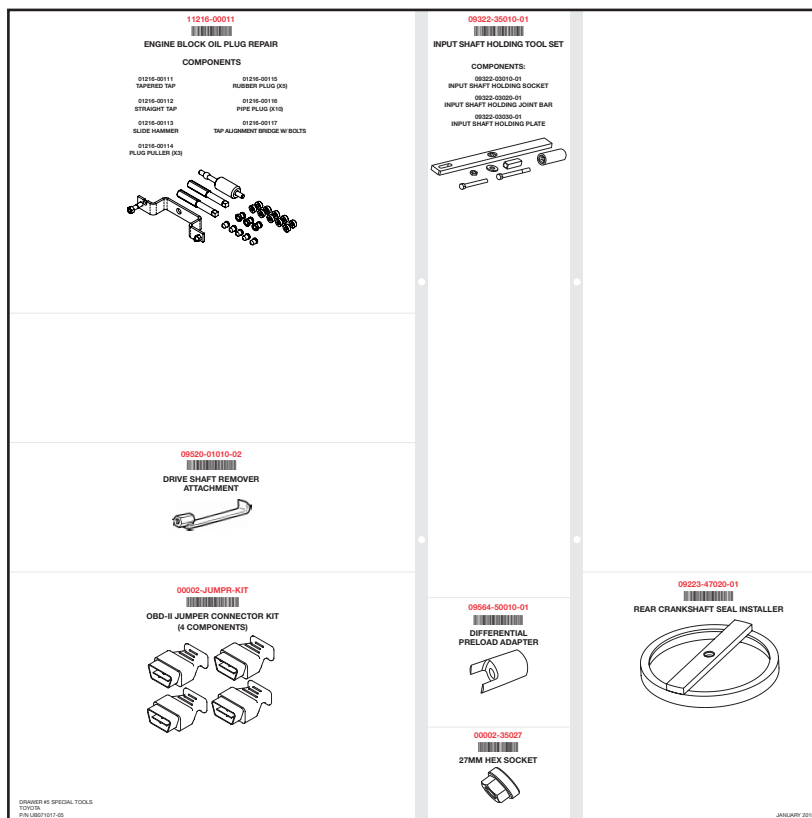


## TOOLS

00002-00921  
00002-00922  
00002-04020-KIT  
00002-2SUPP  
09223-75010-01  
09326-35010-01  
  
09387-00010-01  
09521-25023-01  
09521-26000-01  
09521-60010-01  
09726-02041-01

REAR AXLE SEAL & BEARING DRIVER  
REAR AXLE SEAL & BEARING DRIVER  
PRIUS-PHV HV BATTERY STRAP  
RATCHETING STRAP (2)  
OIL SEAL REPLACER  
OUTPUT SHAFT ADJUSTING NUT WRENCH  
AND ADAPTER  
  
TRANSFER OIL SEAL REPLACER  
REAR AXLE SHAFT PULLER ADAPTER  
REAR AXLE SHAFT PULLER SPACER  
REAR AXLE SHAFT PULLER ADAPTER  
OIL SEAL REPLACER
 
## DRAWER 6

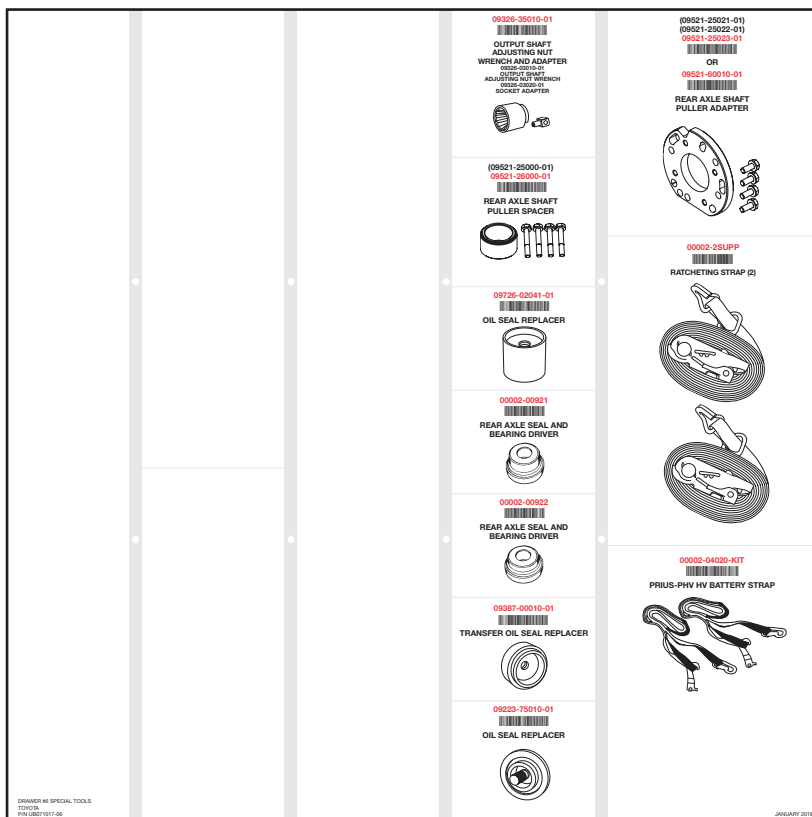


# Drawer Liner Reference

## TOOLS

- 00002-12001-01 VEHICLE DRAIN TUBE AUGER
- 09223-56010-01 CRANKSHAFT REAR OIL SEAL REPLACER
- 09325-40010-01 TRANSMISSION OIL PLUG
- 09326-71020-01 LOCK NUT SOCKET WRENCH
- 09520-32040-01 SLIDE HAMMER (5LB.)
- 09521-25011-01 REAR AXLE SHAFT PULLER
- 09570-22011 DIFFERENTIAL MOUNTING CUSHION  
REMOVER/REPLACER
- 09710-04101-01 FRONT SPEED SENSOR  
INSTALLER

 
## DRAWER 7

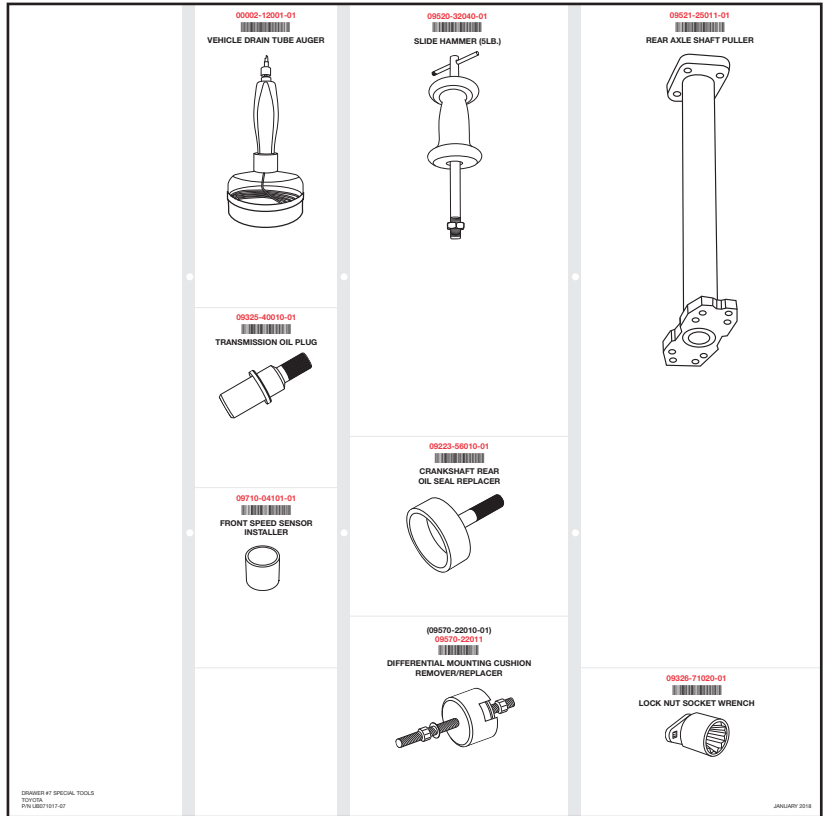

## TOOLS

- 09213-54015-01 CRANKSHAFT PULLEY HOLDING TOOL
- 09950-40011 UNIVERSAL PULLER SET "B"
- 09950-60020-01 REPLACER SET #2
- 11014-00007 ANTENNA TEST KIT
 
## DRAWER 8

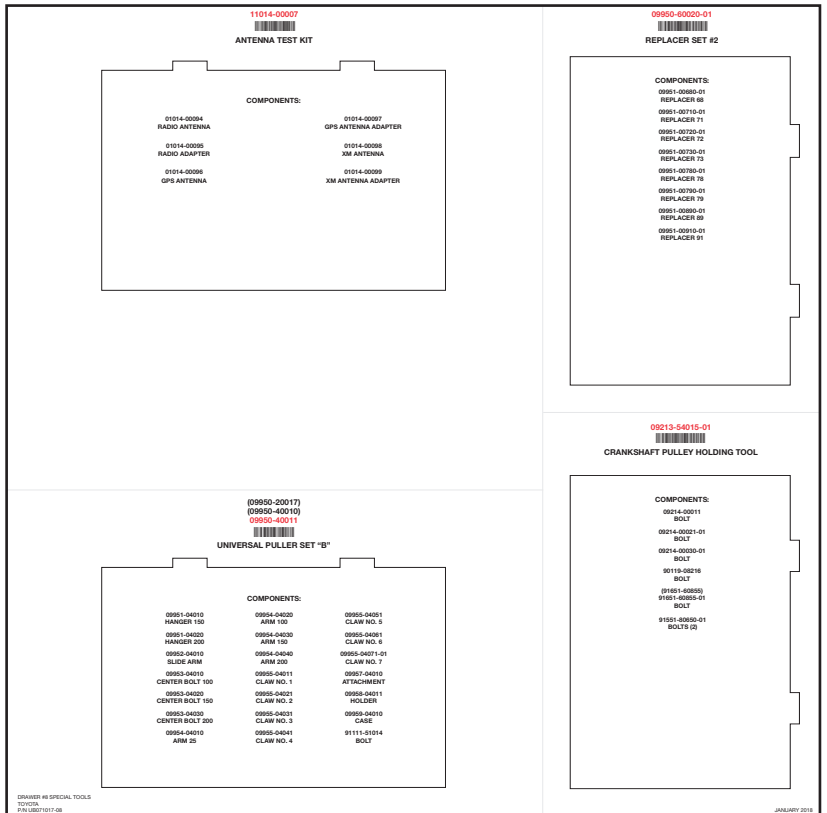






# Drawer Liner Reference

## TOOLS

00002-00039  
00002-90080  
09556-16030-01  
  
09564-32011-01  
09608-10010-01  
09613-22011  
09631-12071  
09729-22031  
09730-00010  
09801-18010-01  
09870-00005-01  
09951-00750-01  
09951-00770-01  
09951-00810-01  
09951-00900-01  
09951-01000-01  
09951-01030-01  
09951-01100-01

39MM SOCKET  
SUBFRAME ALIGNMENT PINS  
DIFFERENTIAL DRIVE PINION HOLDING TOOL #28  
TOOL #28  
PRELOAD ADAPTER  
STEERING KNUCKLE OIL SEAL REPLACER  
STEERING RACK SHAFT BUSHING PULLER  
STEERING RACK OIL SEAL TEST TOOL  
FRONT SPRING UPPER SEAT HOLDER  
AIR TUBE SEPARATOR  
DOOR GLASS BOLT HOLDING TOOL  
A/C LINE DISCONNECT KIT  
REPLACER 75  
REPLACER 77  
REPLACER 81  
REPLACER 90  
REPLACER 100  
REPLACER 103  
REPLACER 110
 
## DRAWER 11

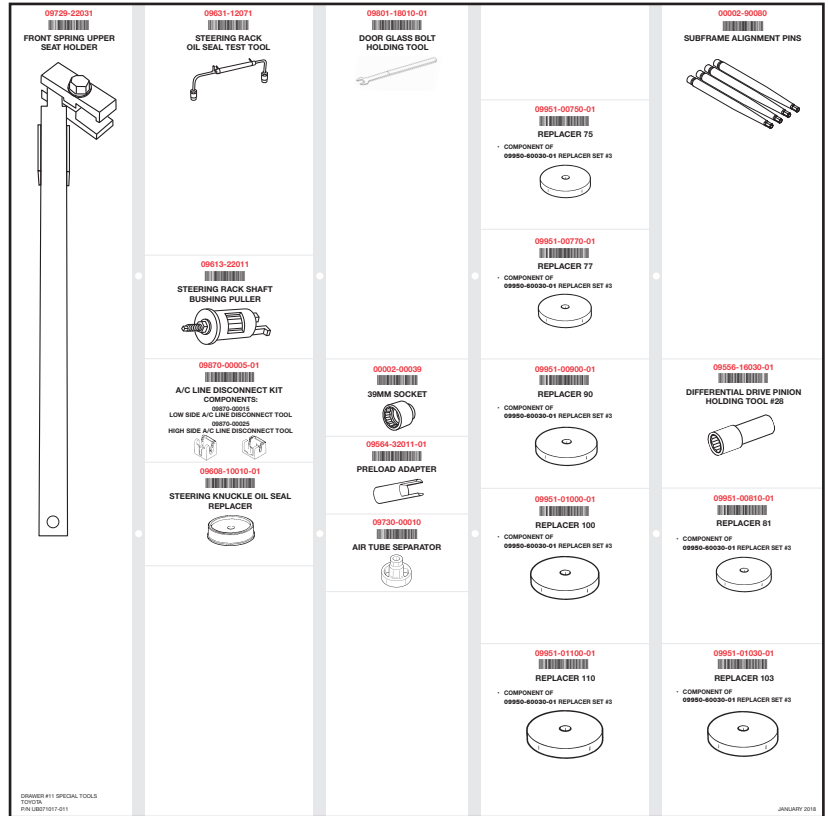


## TOOLS

00002-00920  
01815-00104  
01815-00105  
09330-00021  
09340-00010-01  
09509-25011  
09556-30010  
09608-32010  
09612-30012  
09616-00010-02  
09616-00020-01  
09634-60013  
09634-60014  
09670-00010-01  
09922-10010-01  
09951-07100-01  
09951-07150-01  
09951-07200-01  
09951-07360-01  
49B025001

DRIVER HANDLE  
DRIVE HANDLE ADAPTER  
DRIVE HANDLE ADAPTER  
COMPANION FLANGE HOLDING TOOL  
QUICK CONNECT REMOVER  
REAR AXLE BEARING LOCK NUT WRENCH  
DIFFERENTIAL BEARING REMOVER  
STEERING KNUCKLE OIL SEAL REPLACER  
STEERING WORM BEARING PULLER  
STEERING SOCKET  
STEERING WORM BEARING ADJUSTING SOCKET  
STEERING KNUCKLE CENTERING GAUGE  
STEERING KNUCKLE CENTERING GAUGE  
FRONT CROSS MEMBER GUIDE TOOL  
VARIABLE OPEN WRENCH  
HANDLE ASSEMBLY 100 - 4.25 INCH  
HANDLE ASSEMBLY 150 - 6.25 INCH  
HANDLE ASSEMBLY 200 - 8.25 INCH  
HANDLE ASSEMBLY 360 - 14.625 INCH  
SEAL INSTALLER  
STEERING WORM BEARING ADJUSTING SOCKET  
STEERING SOCKET  
QUICK CONNECT REMOVER  
REAR AXLE BEARING LOCK NUT WRENCH  
STEERING KNUCKLE OIL SEAL REPLACER
 
## DRAWER 12

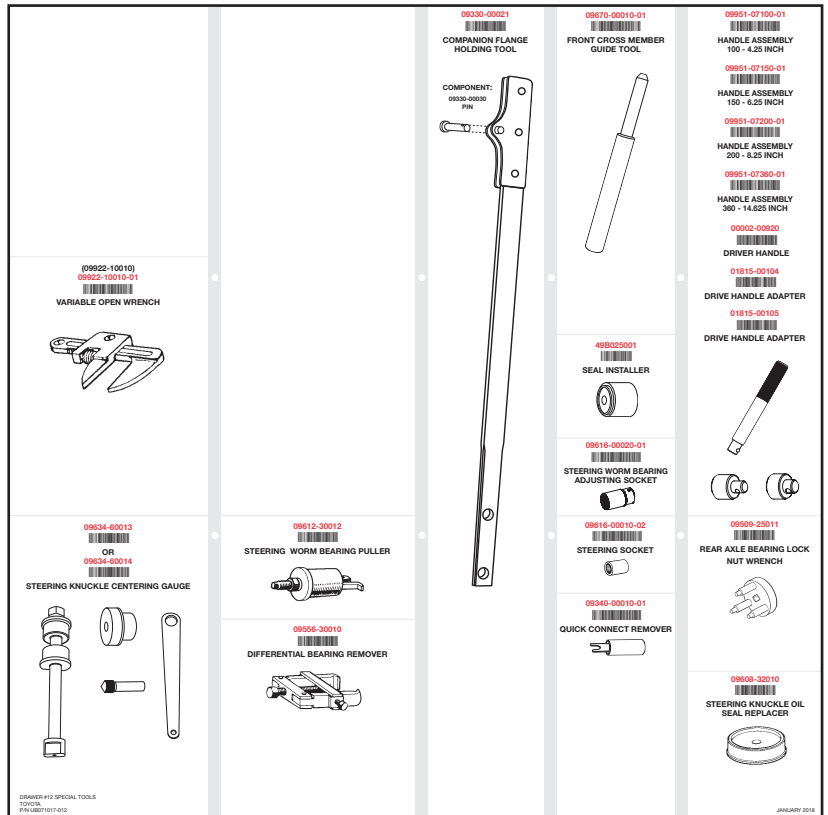


# Drawer Liner Reference

## TOOLS

09223-46011-01	CRANKSHAFT FRONT OIL SEAL REPLACER
09249-63010-01	TORQUE WRENCH ADAPTER
09309-12020-01A	5TH GEAR REPLACER
09554-14010-01	SEAL INSTALLER
09610-20012-01	PITMAN ARM PULLER
09611-22012-01	TIE ROD END PULLER
09612-00012-01	RACK & PINION HOLDING TOOL
09628-62011-01	BALL JOINT PULLER
09631-10021-01	RACK & PINION STOPPER ADJUSTMENT TOOL
09631-12090	SEAL RING TOOL
09710-18010-01	REAR SUSPENSION BUSH KIT
09710-18020-01	REAR SUSPENSION BUSH KIT
09710-18030-01	REAR SUSPENSION BUSH KIT
09710-18040-01	FRONT SUSPENSION BUSH KIT
09716-18010-01	REAR SUSPENSION BUSH R/R
09716-18020-01	FRONT SUSPENSION BUSH R/R
09716-18030-01	FRONT SUSPENSION BUSH
09726-18010-01	STUD BOLT SOCKET
09961-00950	TORQUE WRENCH ADAPTER
09710-07021	BUSHING REMOVER
09710-07031	BUSHING REPLACER
09710-07041	UPPER ARM BASE
09710-07051	UPPER ARM BASE
09710-07062	BUSHING REPLACER
09710-07071	UPPER ARM SPACER
09710-07081	LOWER ARM BASE

 
## DRAWER 13

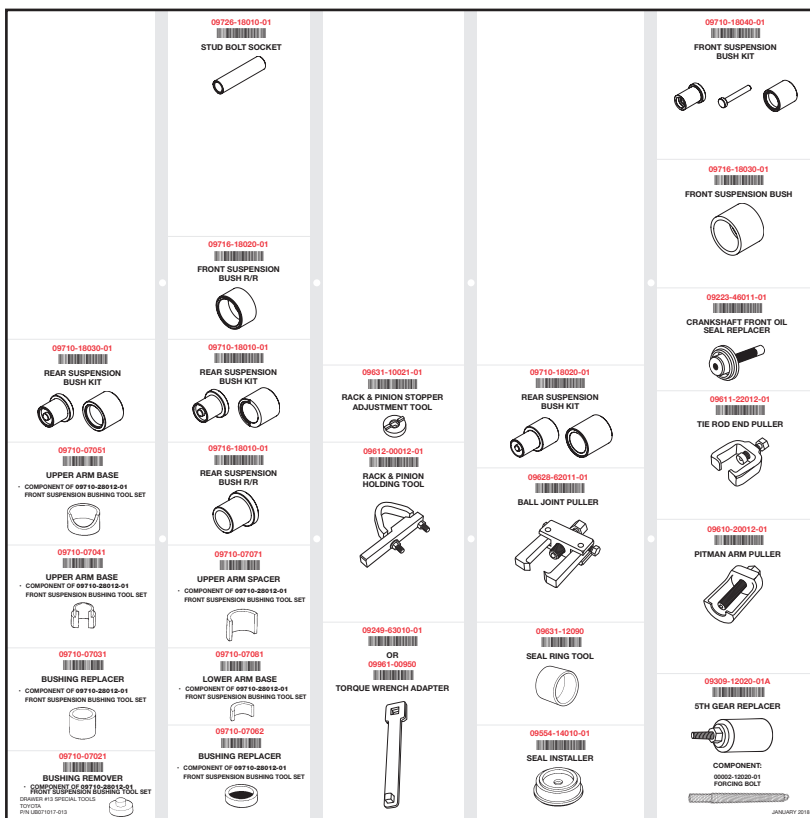

## TOOLS

09318-12010-4PIN	4 PIN FRONT WHEEL BEARING LOCK NUT SOCKET KIT
09318-12010-8PIN	8 PIN SOCKET KIT
09527-17011	REAR AXLE BEARING REMOVER
09528-52010-01	DIFFERENTIAL GEAR REMOVER & REPLACER SET
09611-20015-01	TIE ROD END PULLER
09628-00011-01	BALL JOINT PULLER
09727-22011-ST	COIL SPRING COMPRESSOR
09727-30050-01	TOE CONTROL LINK REPLACEMENT KIT
09960-20010-01	BALL JOINT PULLER
 
## DRAWER 14

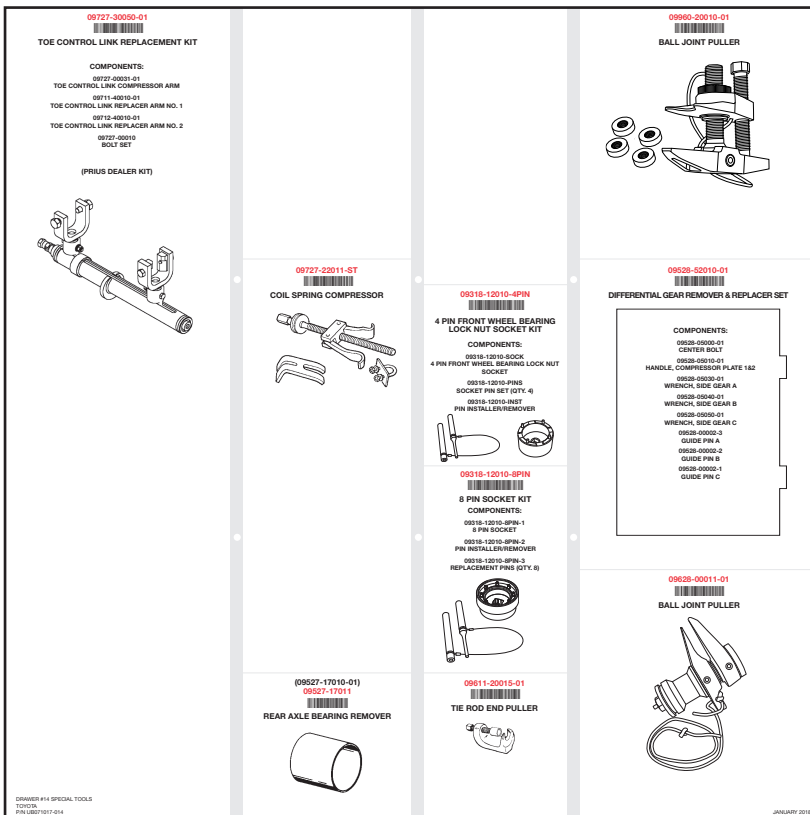


# Drawer Liner Reference

## TOOLS

- 09527-10011-01 REAR AXLE SHAFT BEARING REMOVER
- 09570-18010-01 REAR DIFF MOUNT CUSHION, R/R
- 09570-18020-01 REAR DIFF MOUNT CUSHION, R/R
- 09570-60010-01 DIFFERENTIAL MOUNTING CUSHION REMOVER AND REPLACER
- 09607-60020-01 FRONT WHEEL ADJUSTING NUT WRENCH
- 09608-16042 FRONT HUB BEARING ADJUSTING TOOL
- 09649-17010 STEERING KNUCKLE TOOL
- 09930-00010-01 DRIVE SHAFT NUT CHISEL

 
## DRAWER 15

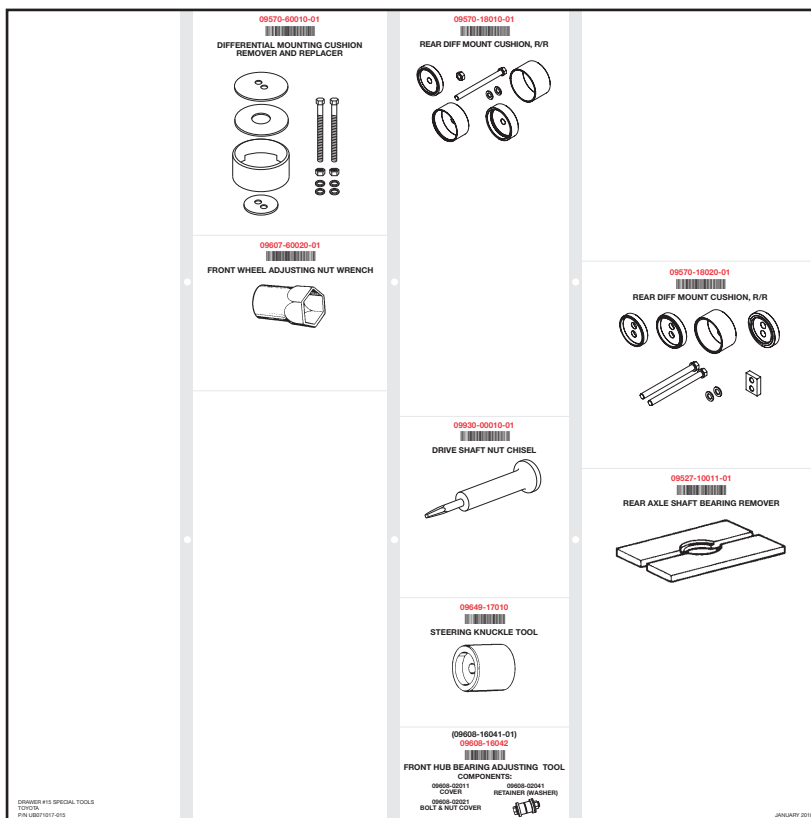

## TOOLS

- 09719-14020 REAR DISC BRAKE TOOL SET
- 09737-00013-01 BRAKE BOOSTER PUSH ROD GAUGE
- 09737-00020-01 BRAKE BOOSTER PUSH ROD WRENCH
- 09756-00010 REAR DISC BRAKE ADJUSTER
- 09992-00350-01 ABS TRAC ACTUATOR AIR BLEED TOOL
- 09999-00110 WHEEL LOCK MASTER KEY SET
- 09999-00310 SPARE TIRE LOCK MASTER KEY SET
- 09999-00410 TRD MASTER KEY SET
- 09999-00411 TRD MASTER KEY SET SUPPLEMENT
 
## DRAWER 16

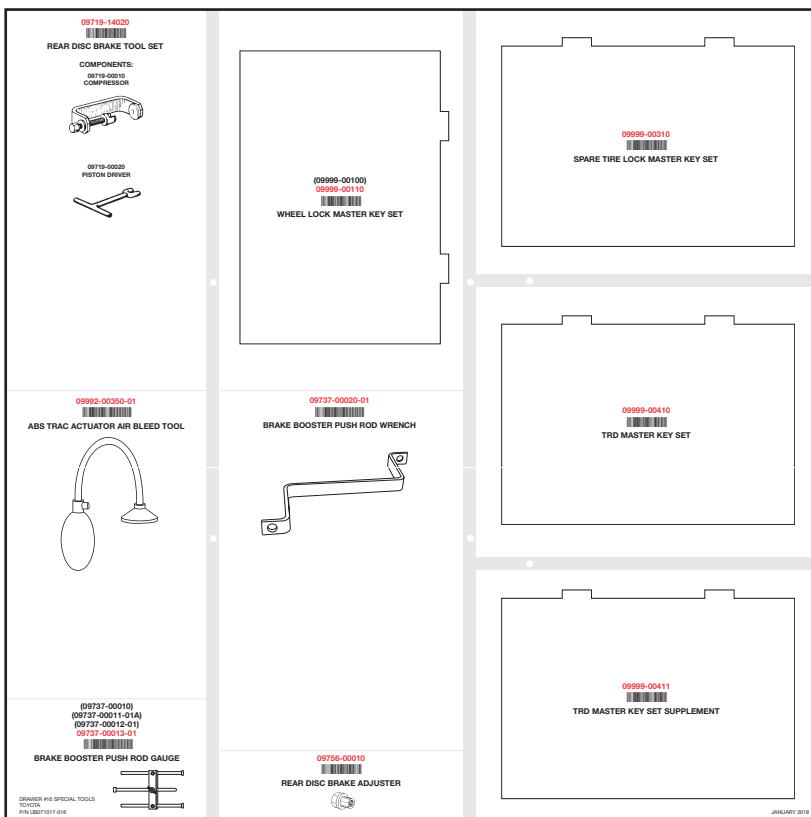


# Drawer Liner Reference

## TOOLS

09506-42010-01	BEARING RACE REPLACER
09506-42020-01	BEARING RACE REPLACER
09506-42030-01	BASE
09554-42010-01	OIL SEAL REPLACER
09700-WA050-01	TRANSMISSION RELEASE TOOL
09700-WA250	STRUT BOLT SOCKET 6MM STRUT BOLT
09893-10060-01	AC LEAK TEST HIGH ADAPTER
09893-10070-01	AC LEAK TEST LOW ADAPTER
09893-42010-01	BATTERY HANGER
09905-00040	CONNECTOR PLIER
09929-00020-01	CRIMPING TOOL S
09930-42010-01	DRIVE PINION SHAFT NUT CHISEL
09955-04160-01	CLAW NO.16
09956-03090-01	ADAPTER LONG 18 MM

 
## DRAWER 17

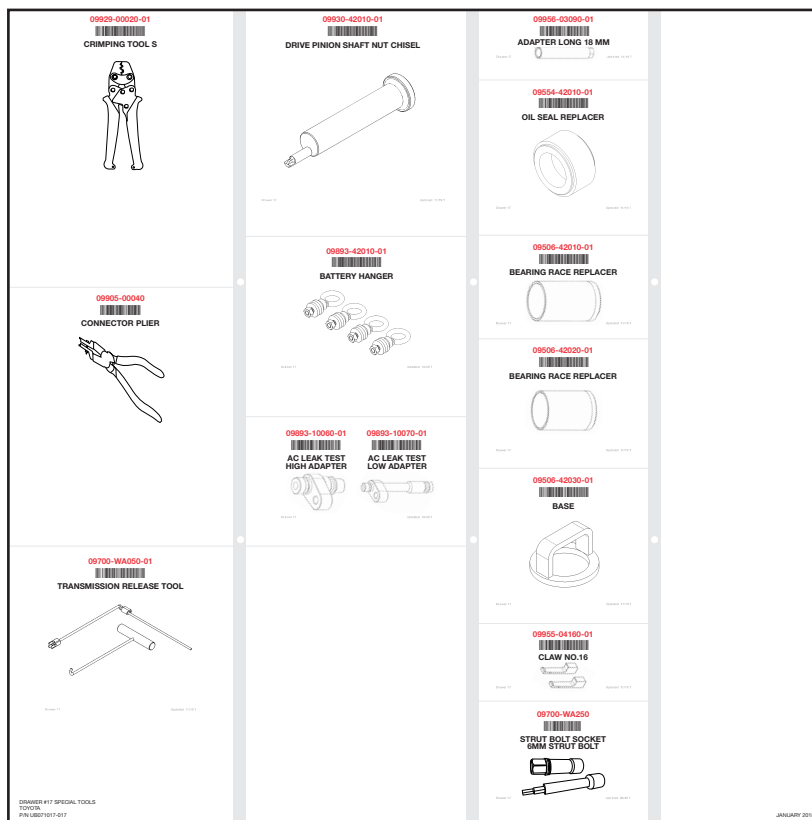

## TOOLS

09709-00002	BRAKE PEDAL FORCE GAUGE
09709-29018	LSPV GAUGE SET
09843-18040	DIAGNOSIS CHECK WIRE #2

 
## DRAWER 18

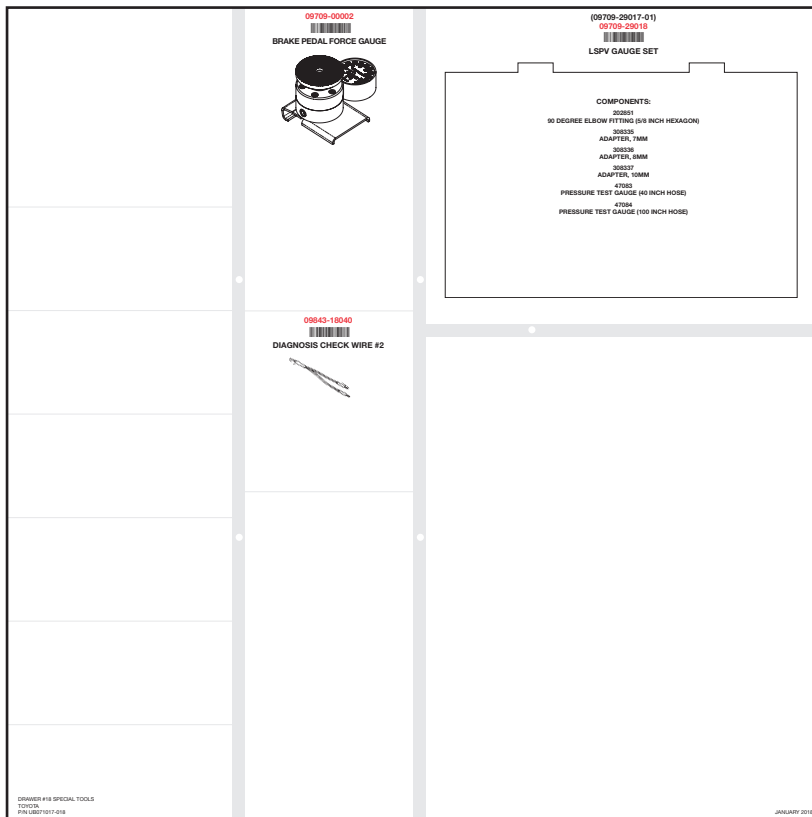

# Drawer Liner Reference

## TOOLS
 
## DRAWER 19




DRAWER #19 SPECIAL TOOLS  
TOOLKIT  
P/N: 08071017-019

JANUARY 2019

## TOOLS
 
## DRAWER 20

- 00002-71368-01 PRY TOOL
- 07112-66040-01 PRESSURE PLATE REMOVER
- 07112-76060-01 MAGNETIC CLUTCH STOPPER
- 09042-2C100 CRIMPER
- 09800-WA320 WINDOW ADJUSTER
- 09812-18010-01 TOOL, FRONT DOOR GLASS ADJ
- 09812-18020-01 TOOL, FRONT DOOR GLASS FIX
- 09820-63020-02 ALTERNATOR CLUTCH HOLDING TOOL SET
- CR435 REPLACEMENT BATTERIES FOR 09800-WA320

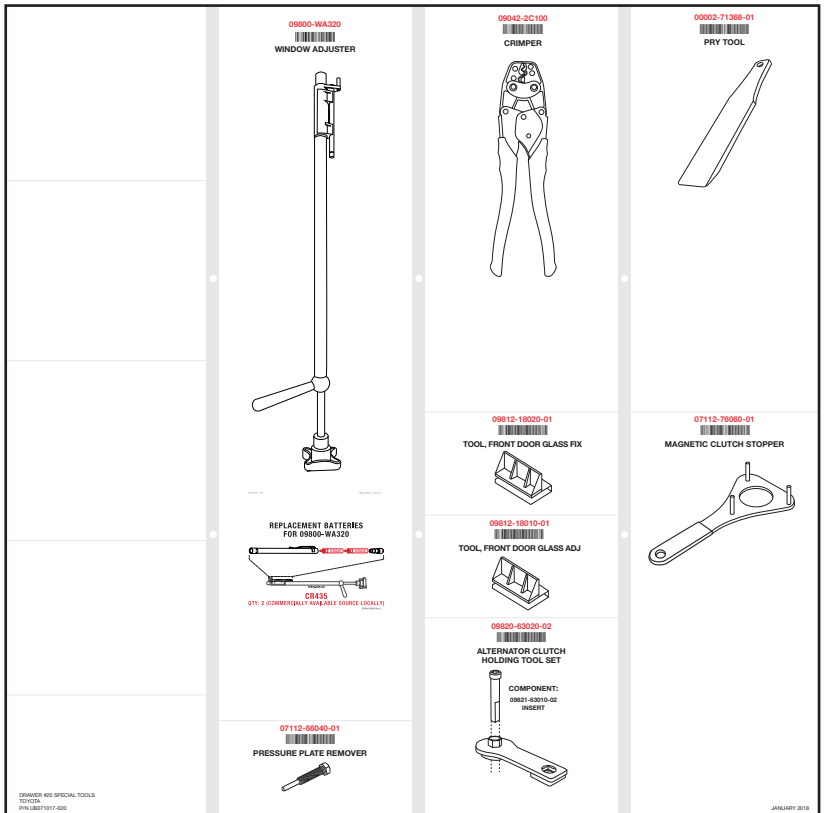

DRAWER #20 SPECIAL TOOLS  
TOOLKIT  
P/N: 08071017-020

JANUARY 2019

# Drawer Liner Reference

## TOOLS


- 00002-01775 SEAT HEATER ATTACHMENT KIT
- 00002-06020-01 PLASTIC PRY TOOL KIT
- 01018-00118 SUPRA DIAGNOSTIC CABLE
- 09843-18061 SRS CHECK WIRE
- 09890-47010-01 ANTI-STATIC MAT SET
- 09891-47020-01 INVERTER CASE SEPERATOR
- 09999-00510 SUPRA MASTER WHEEL LOCK SET

## DRAWER 21


**00002-01775**  
SEAT HEATER ATTACHMENT KIT

COMPONENTS:

 
00002-17750 SEAT HEATER ATTACHMENT TOOL




09892-18060 FABRIC FASTENERS




00002-01780 REPLACEMENT NEEDLES




**01018-00118**  
SUPRA DIAGNOSTIC CABLE



 
**09999-00510**  
SUPRA MASTER WHEEL LOCK SET

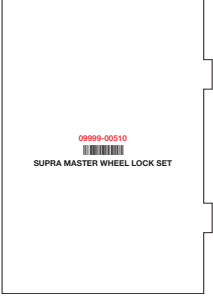


**09891-47020-01**  
INVERTER CASE SEPERATOR



 **09843-18060**  
**09843-18061**  
SRS CHECK WIRE



**09990-47010-01**  
ANTI-STATIC MAT SET



09891-47010-1A ROULEEUSE  
09891-47010-01 ANTI-STATIC MAT  
09891-47020-01 WRIST BAND  
09891-47020-01 GROUNDING WIRE NO.1  
09891-47020-01 GROUNDING WIRE NO.2  
01018-00100 INVERTER CAP PLUG

**00002-06020-01**  
PLASTIC PRY TOOL KIT

COMPONENTS:

00002-06100 LARGE ANGLED GROMMET PRY TOOL  
00002-06030 LARGE ANGLED PRY TOOL  
00002-06040 THIN FLAT PRY TOOL  
00002-06050 INTERIOR CURVED PRY TOOL  
00002-06060 ANGLED GROMMET PRY TOOL  
00002-06070 FLAT GROMMET PRY TOOL  
00002-06080 PANEL CLIP PRY TOOL  
00002-06090 SMALL ANGLED GROMMET PRY TOOL  
00002-06100 SMALL PRY TOOL

DRAWER 21 SPECIAL TOOLS TOOLBOX P/N: 08211017-0201

JANUARY 2018

## TOOLS

- 09268-31012 INJECTION MEASURING TOOL SET
- 09268-45101-1A EFI FUEL PRESSURE GAUGE SET
- 09808-14040-01 FUEL PUMP RETAINER TOOL
- 09808-14050-01 FUEL PUMP HOLDING TOOL
- 09992-00242-01 TURBO BOOST PRESSURE GAUGE SET


## DRAWER 22

**09992-00241-01**  
**09992-00242-01**  
TURBO BOOST PRESSURE GAUGE SET

COMPONENTS:

09992-00230 GAUGE ASSEMBLY  
09992-00230 HOSE  
09992-00240 HOSE

**09808-14040-01**  
FUEL PUMP RETAINER TOOL



**09268-45101-01**  
**09268-45101-1A**  
EFI FUEL PRESSURE GAUGE SET

COMPONENTS:


09268-41250-01 T-JOINT	09268-41100-01 UNION, M10
09268-41260-01 EFI FUEL PRESS GA ASSEMBLY	09268-41120-01 UNION, M12
09268-41260-01 HOSE JOINT	09268-44030-01 ADAPTER, M8
09268-41500-01 FUEL TUBE CONNECTOR	09268-44100-01 ADAPTER, M10
09268-41700-01 HOSE BANDS (8)	09268-44120-01 ADAPTER, M12
09268-08070-01 HOSE	09268-00030-01 T-JOINT
09268-43080-01 UNION, M8	09268-00030-01 FUEL TUBE CONNECTOR

**09268-31012**  
INJECTION MEASURING TOOL SET

COMPONENTS:

09268-27011 NO. 3 INJECTOR ADAPTER	09268-41130 NO. 3 INJECTOR ADAPTER	09268-52011 INJECTOR REMAINING ATTACHMENT
09268-41001 NO. 3 INJECTOR ADAPTER	09268-41140 NO. 3 INJECTOR ADAPTER	09400-08010 NO. 1 UNION
09268-41071 NO. 4 INJECTOR ADAPTER	09268-41160 NO. 4 INJECTOR ADAPTER	09401-13001 CLIP
09268-41081 NO. 6 INJECTOR ADAPTER	09268-41300 NO. 6 INJECTOR ADAPTER	09268-08030 HOSE
09268-41091 NO. 7 INJECTOR ADAPTER	09268-41310 NO. 7 INJECTOR ADAPTER	09268-08070 HOSE
09268-41100 CLAMP	09268-41400 CLAMP	09130-08050 C-RING
09268-41110 CLAMP	09268-41500 CLAMP	
09268-41120 3-WAY ADAPTER	09268-41600 ADAPTER	

**09808-14050-01**  
FUEL PUMP HOLDING TOOL



DRAWER 22 SPECIAL TOOLS TOOLBOX P/N: 08211017-0202

JANUARY 2018

 
# Drawer Liner Reference

## TOOLS

09500-WA020  
09800-WA120-01  
09870-60040-02

AXLE SHAFT REMOVAL TOOL  
WINDOW SUCTION CUP TOOL  
REFLECTOR C

## DRAWER 23

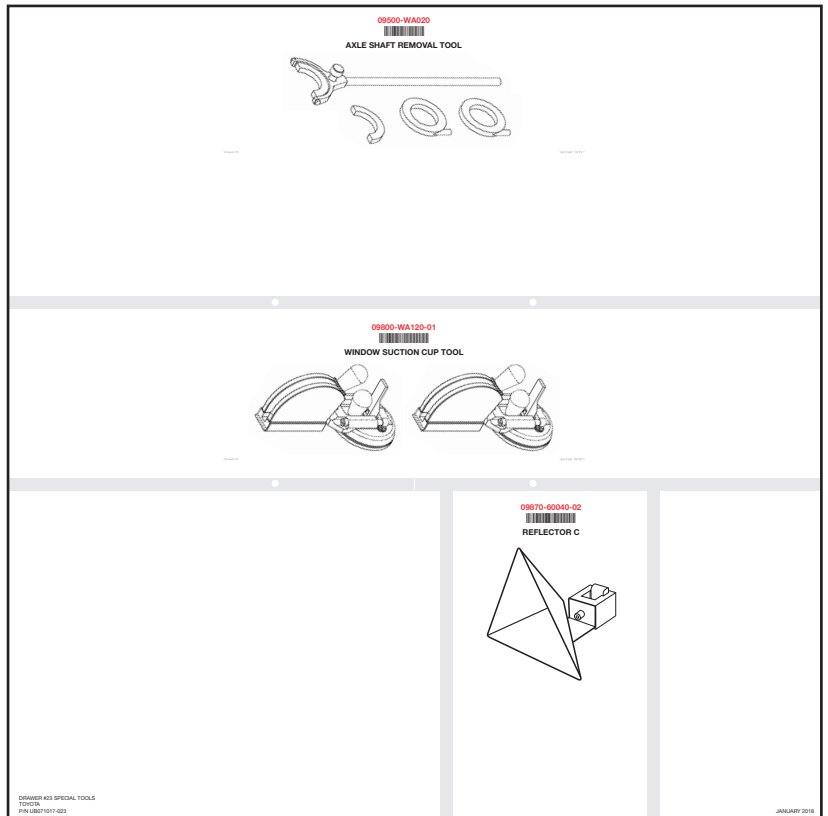


## TOOLS

00002-09090-01  
09756-48020-1B  
09950-50013-01  
09950-60010-01  
11717-00012

OCCUPANT CLASSIFICATION SEAT WEIGHT SET  
ELECTRONIC PARKING BRAKE RELEASE TOOL  
UNIVERSAL PULLER SET "C"  
REPLACER SET #1  
TPWS TESTER KIT
 
## DRAWER 24

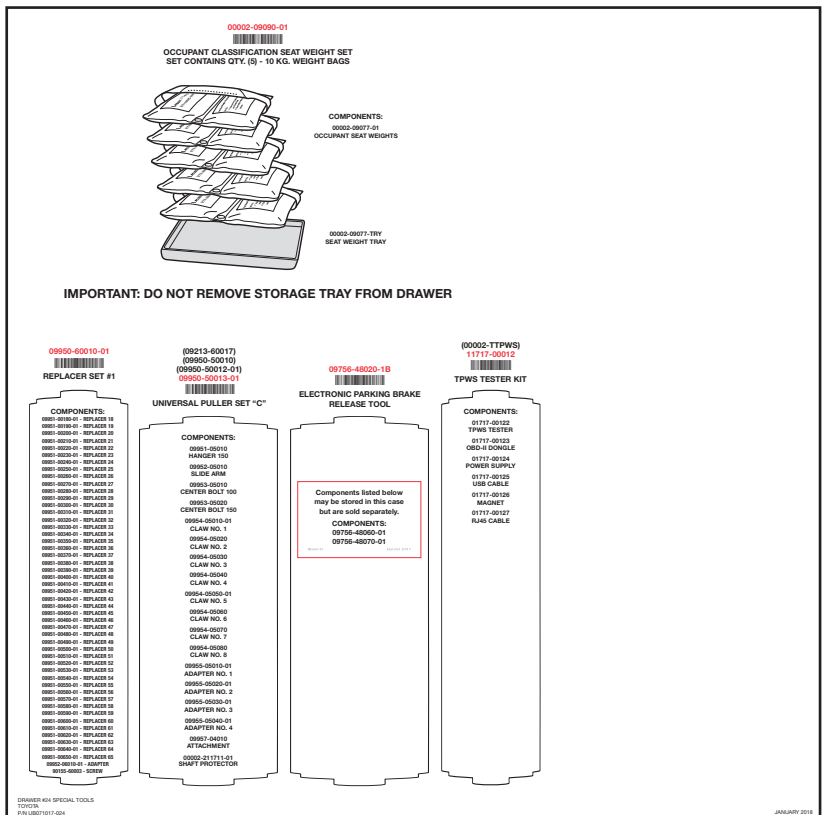



# Drawer Liner Reference

## TOOLS

11919-00023  
11919-00024

SUPRA TOOL KIT 1  
SUPRA TOOL KIT 2

## DRAWER 25

11919-00023

SUPRA TOOL KIT 1

**COMPONENTS:**

- 0902-WA20 FUEL INJECTOR SEAL REMOVAL PLIERS
- 0900-WA70 FUEL FILLER TUBE
- 0900-WA20 AXLE SHAFT COLLAR
- 0900-WA10 90MM WRENCH
- 0900-WA80 FUEL INJECTOR INSTALLATION GAUGE
- 0200-WA10 CRANKSHAFT FOCKET
- 0900-WA60 BREAKER BAR
- 0900-WA70 FLEX PLATE ALIGNMENT PIN
- 0902-WA10 FUEL INJECTOR SEAL INSTALLER
- 0900-WA20 DRIVE WRENCH ADAPTER
- 0900-WA20 WIPER ARM PULLER
- 0900-WA20 HOOD SUPPORT EXTENSIONS
- 0910-WA10 STRUT BOLT SOCKET
- 0910-WA20 8MM STRUT BOLT
- 0900-WA20 8MM HEX EXTENSION

11919-00024

SUPRA TOOL KIT 2


**COMPONENTS:**

- 0200-WA90 4 CYL OIL PRESSURE ADAPTER
- 0900-WA30 DOOR LATCH SPACER
- 0200-WA50-01 6 CYL OIL PRESSURE ADAPTER
- 0910-WA90 FLEX PLATE HOLDING TOOL
- 0900-WA20 FUEL HOSE ADAPTER
- 0900-WA30 FUEL PUMP LOCK RING
- 0900-WA90 CRANKCASE PRESSURE ADAPTER
- 0900-WA10 WINDOW ADJUSTMENT TOOL
- 0200-WA50 FUEL INJECTOR FITTURE
- 0900-WA90 FUEL INJECTOR CAPS
- 0900-WA90 BODY GAP GAUGES
- 0900-WA90 FUEL INJECTOR FITTURE SPACERS
- 0900-WA20 WINDOW ADJUSTMENT MEASURING TOOL
- 0900-WA10 WINDOW ADJUSTMENT WRENCH
- 0900-14010-01 WHEEL GUIDE PINS

DESIGNED BY SPECIAL TOOLS  
REVISED  
P/N: 09011011-005

JANUARY 2018

 
# Essential Tools Not Located in Storage Cabinets

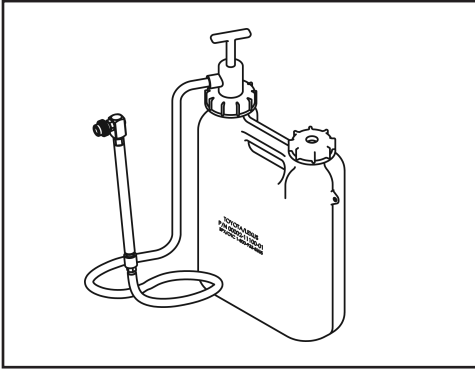


00002-11100-02 TRANSMISSION FILL SYSTEM



 
00002-35000 3/4 INCH DRIVE TORQUE WRENCH

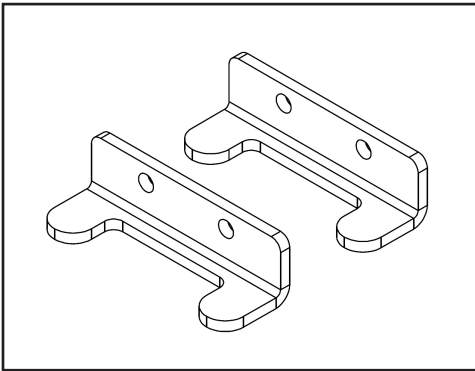

 
00002-1ESBU-KIT ENGINE SUPPORT BAR BRACKET

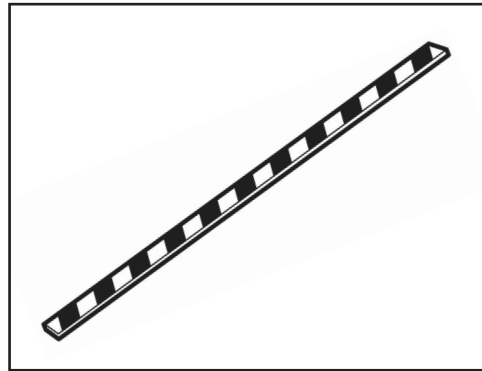


09800-WA300-01 ACC100 RAIL

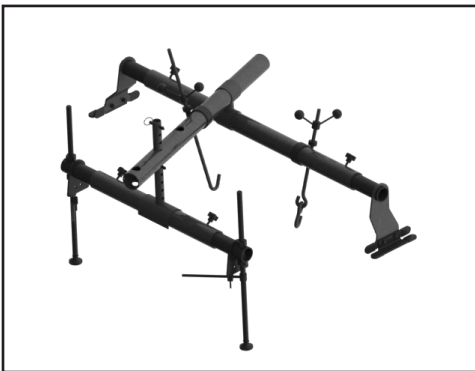 


00002-ESUPPT-01 ENGINE SUPPORT BAR

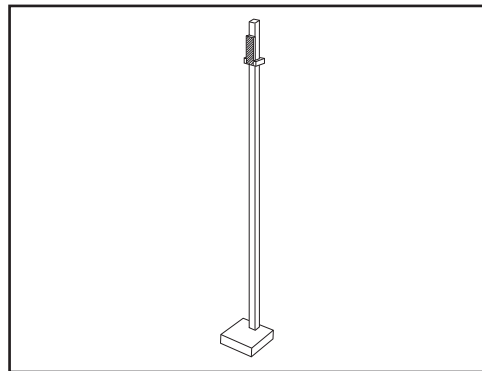 

 09870-60000 LASER RADAR ADJUSTING REFLECTOR

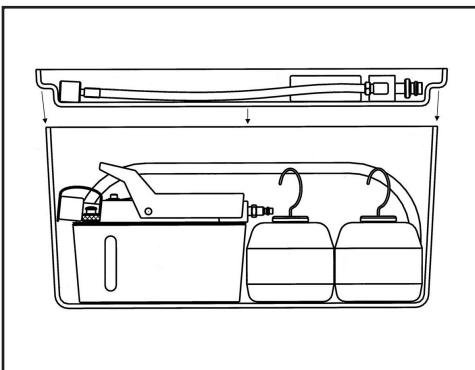

 
00002-12000-01 KDSS FLUID PRESSURE PUMP KIT

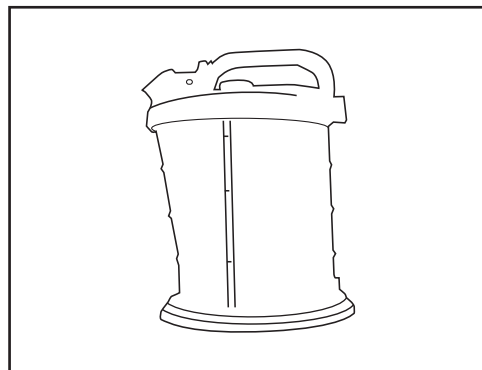

10002-00101-4 FLUID EXTRACT TANK

Note: Size of tools shown on this page are not to scale.


# Essential Tools Not Located in Storage Cabinets

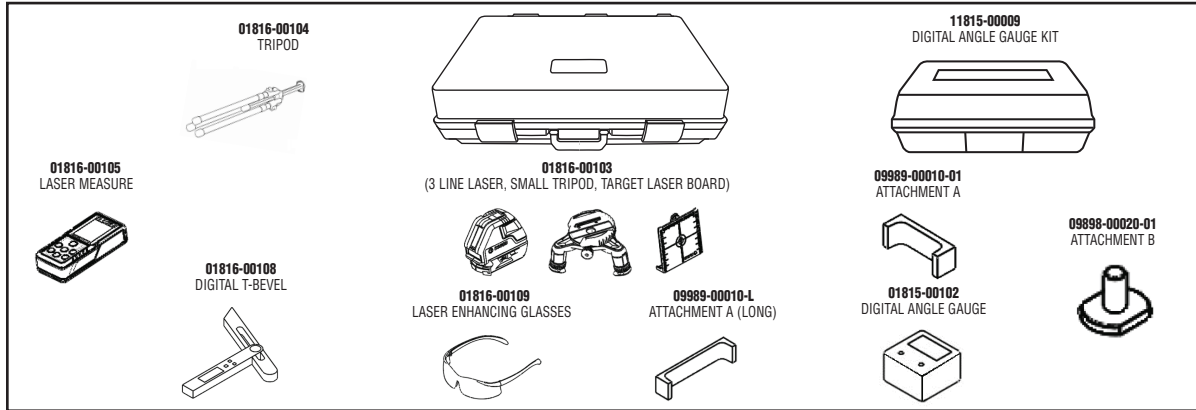 

11816-00010 RADAR SENSOR CALIBRATION KIT



 DCA-8000P T DIAGNOSTIC CHARGER

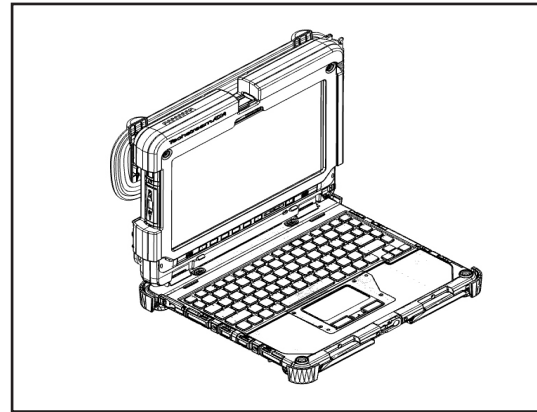

TSADVUNIT TECHSTREAM ADVI




DSS-5000P T HANDHELD TESTER


Note: Size of tools shown on this page are not to scale.

# Essential Tools Not Located in Storage Cabinets

 
## Hybrid Electric Vehicle (HEV) Workstation

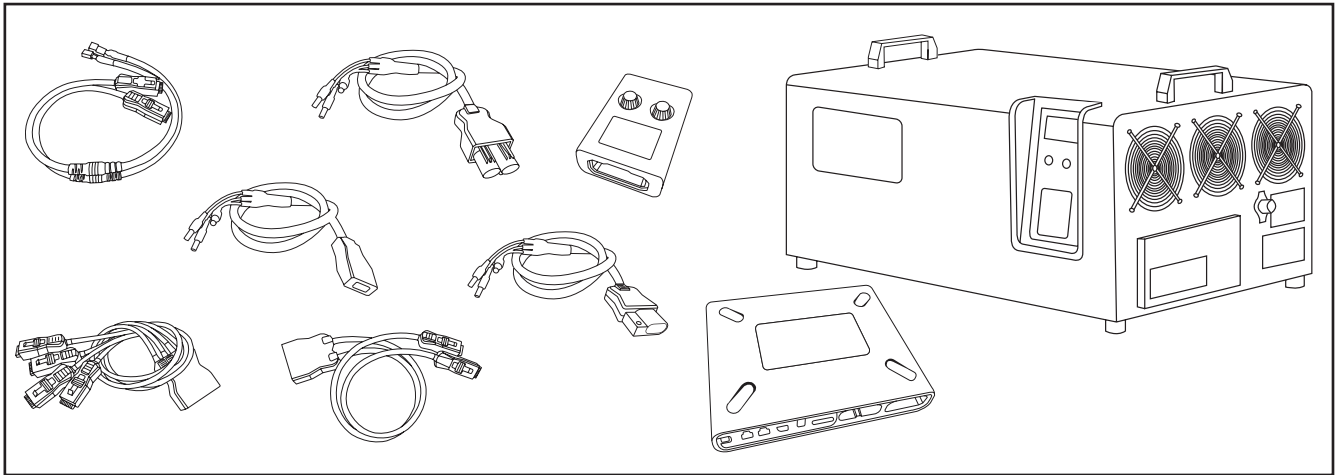

 11413-00002 HIGH VOLTAGE BATTERY SERVICE KIT (GRX 5100)

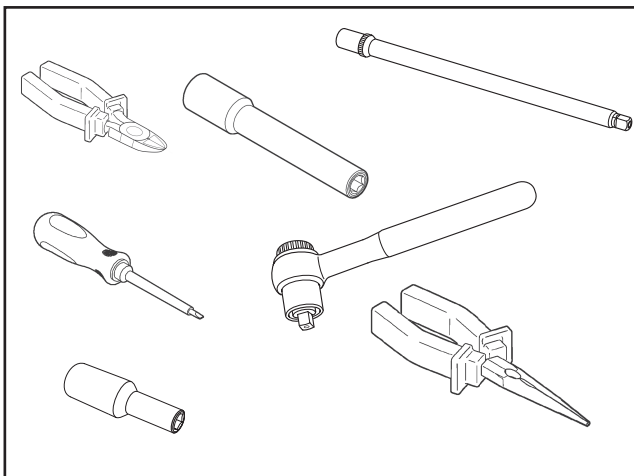


11813-00003 INSULATED TOOLS

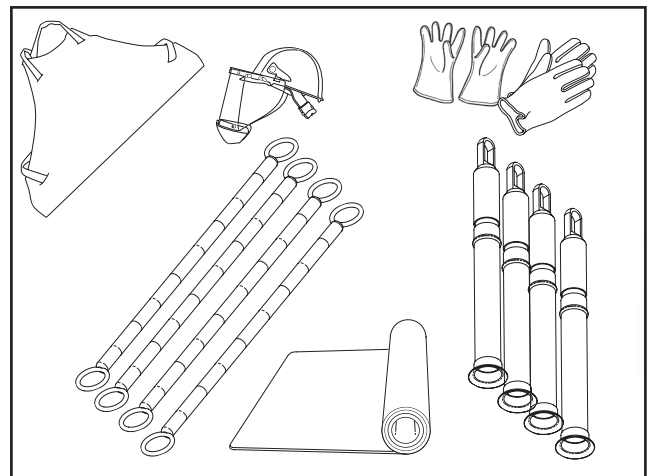 

11413-00004 PERSONAL PROTECTIVE EQUIPMENT (PPE)

 (11413-00007 INSULATED TOOLS AND PPE KIT)

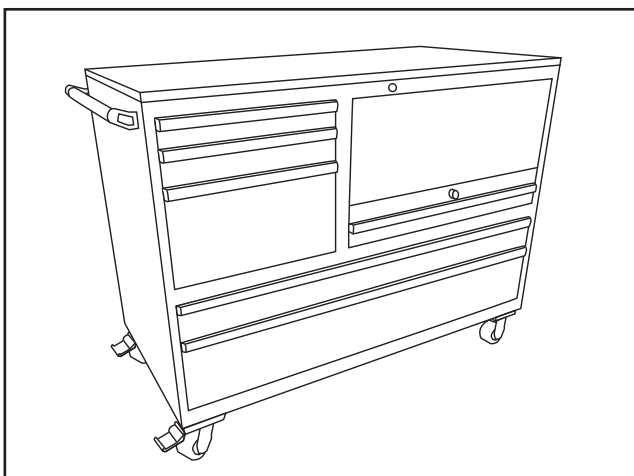

11413-00006 HEV TOOL STORAGE CABINET



11413-00005 MILLIOHM METER KIT





To Order Special Service Tools Call Bosch/OTC at 1-800-933-8335