



CLI Reference Guide

T1700G-28TQ

**JetStream 24-Port Gigabit Stackable
Smart Switch with 4 10GE SFP+ Slots**



COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK®** is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2016 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

<http://www.tp-link.com>

CONTENTS

Preface	1
Chapter 1 Using the CLI	4
1.1 Accessing the CLI	4
1.1.1 Logon by Telnet	4
1.1.2 Logon by SSH	5
1.2 CLI Command Modes	10
1.3 Security Levels	13
1.4 Conventions	14
1.4.1 Format Conventions	14
1.4.2 Special Characters	14
1.4.3 Parameter Format	14
Chapter 2 User Interface	15
2.1 enable	15
2.2 service password-encryption	15
2.3 enable password	16
2.4 enable secret	17
2.5 configure	18
2.6 exit	18
2.7 end	18
2.8 show history	19
2.9 clear history	19
Chapter 3 Stack	21
3.1 switch priority	21
3.2 switch renumber	21
3.3 switch stack-port	22
3.4 switch provision	23
3.5 show switch	23
Chapter 4 IEEE 802.1Q VLAN Commands	25
4.1 vlan	25
4.2 interface vlan	25
4.3 name	26
4.4 switchport general allowed vlan	26
4.5 switchport pvid	27

4.6	show vlan summary.....	28
4.7	show vlan brief.....	28
4.8	show vlan.....	28
4.9	show interface switchport.....	29
Chapter 5	MAC-based VLAN Commands.....	30
5.1	mac-vlan mac-address.....	30
5.2	mac-vlan.....	30
5.3	show mac-vlan.....	31
5.4	show mac-vlan interface.....	32
Chapter 6	Protocol VLAN Commands.....	33
6.1	protocol-vlan template.....	33
6.2	protocol-vlan vlan.....	34
6.3	protocol-vlan.....	34
6.4	show protocol-vlan template.....	35
6.5	show protocol-vlan vlan.....	35
Chapter 7	Voice VLAN Commands.....	37
7.1	voice vlan.....	37
7.2	voice vlan aging.....	37
7.3	voice vlan priority.....	38
7.4	voice vlan mac-address.....	38
7.5	switchport voice vlan mode.....	39
7.6	switchport voice vlan security.....	40
7.7	show voice vlan.....	40
7.8	show voice vlan oui.....	41
7.9	show voice vlan switchport.....	41
Chapter 8	Etherchannel Commands.....	43
8.1	channel-group.....	43
8.2	port-channel load-balance.....	44
8.3	lacp system-priority.....	45
8.4	lacp port-priority.....	45
8.5	show etherchannel.....	46
8.6	show etherchannel load-balance.....	46
8.7	show lacp.....	47
8.8	show lacp sys-id.....	47
Chapter 9	User Management Commands.....	49

9.1	user name (password).....	49
9.2	user name (secret)	50
9.3	user access-control ip-based	51
9.4	user access-control mac-based	52
9.5	user access-control port-based	52
9.6	telnet.....	53
9.7	show user account-list.....	54
9.8	show user configuration.....	54
9.9	show telnet-status.....	55
Chapter 10 HTTP and HTTPS Commands.....		56
10.1	ip http server	56
10.2	ip http max-users	56
10.3	ip http session timeout.....	57
10.4	ip http secure-server.....	58
10.5	ip http secure-protocol.....	58
10.6	ip http secure-ciphersuite	59
10.7	ip http secure-max-users.....	59
10.8	ip http secure-session timeout.....	60
10.9	ip http secure-server download certificate.....	61
10.10	ip http secure-server download key	61
10.11	show ip http configuration.....	62
10.12	show ip http secure-server	63
Chapter 11 Binding Table Commands.....		64
11.1	ip source binding	64
11.2	ip dhcp snooping	65
11.3	ip dhcp snooping vlan.....	66
11.4	ip dhcp snooping information option	66
11.5	ip dhcp snooping information strategy	67
11.6	ip dhcp snooping information remote-id	67
11.7	ip dhcp snooping information circuit-id.....	68
11.8	ip dhcp snooping trust	69
11.9	ip dhcp snooping mac-verify.....	69
11.10	ip dhcp snooping limit rate.....	70
11.11	ip dhcp snooping decline rate.....	71
11.12	show ip source binding.....	71
11.13	show ip dhcp snooping.....	72

11.14	show ip dhcp snooping interface	72
Chapter 12 ARP Inspection Commands.....		74
12.1	ip arp inspection(global)	74
12.2	ip arp inspection trust	74
12.3	ip arp inspection(interface)	75
12.4	ip arp inspection limit-rate	75
12.5	ip arp inspection recover	76
12.6	show ip arp inspection	77
12.7	show ip arp inspection interface	77
12.8	show ip arp inspection statistics	78
12.9	clear ip arp inspection statistics	78
Chapter 13 DoS Defend Commands.....		79
13.1	ip dos-prevent	79
13.2	ip dos-prevent type	79
13.3	show ip dos-prevent	80
Chapter 14 System Log Commands.....		81
14.1	logging buffer	81
14.2	logging buffer level	81
14.3	logging file flash	82
14.4	logging file flash frequency	83
14.5	logging file flash level	83
14.6	logging host index.....	84
14.7	logging monitor	85
14.8	logging monitor level.....	85
14.9	clear logging	86
14.10	show logging local-config	86
14.11	show logging loghost.....	87
14.12	show logging buffer	87
14.13	show logging flash	88
Chapter 15 SSH Commands.....		89
15.1	ip ssh server	89
15.2	ip ssh version.....	89
15.3	ip ssh algorithm	90
15.4	ip ssh timeout.....	90
15.5	ip ssh max-client.....	91

15.6	ip ssh download	91
15.7	remove public-key	92
15.8	show ip ssh	93
Chapter 16 IEEE 802.1X Commands		94
16.1	dot1x system-auth-control	94
16.2	dot1x handshake	94
16.3	dot1x auth-method	95
16.4	dot1x guest-vlan(global)	96
16.5	dot1x quiet-period	96
16.6	dot1x timeout	97
16.7	dot1x max-reauth-req	98
16.8	dot1x	98
16.9	dot1x guest-vlan(interface)	99
16.10	dot1x port-control	99
16.11	dot1x port-method	100
16.12	radius	101
16.13	radius server-account	102
16.14	show dot1x global	103
16.15	show dot1x interface	103
16.16	show radius accounting	104
16.17	show radius authentication	104
Chapter 17 MAC Address Commands		105
17.1	mac address-table static	105
17.2	mac address-table aging-time	106
17.3	mac address-table filtering	106
17.4	mac address-table max-mac-count	107
17.5	show mac address-table	108
17.6	show mac address-table aging-time	109
17.7	show mac address-table max-mac-count	109
17.8	show mac address-table interface	110
17.9	show mac address-table count	110
17.10	show mac address-table address	111
17.11	show mac address-table vlan	111
Chapter 18 System Configuration Commands		112
18.1	system-time manual	112
18.2	system-time ntp	112

18.3	system-time dst predefined	114
18.4	system-time dst date	115
18.5	system-time dst recurring	116
18.6	hostname	117
18.7	location	117
18.8	contact-info	118
18.9	ip address	118
18.10	ip address-alloc	119
18.11	reset.....	120
18.12	reboot.....	120
18.13	copy running-config startup-config	121
18.14	copy startup-config tftp	121
18.15	copy tftp startup-config	122
18.16	boot application	123
18.17	remove backup-image.....	123
18.18	firmware upgrade.....	124
18.19	ping	125
18.20	tracert.....	126
18.21	show system-info	127
18.22	show image-info	127
18.23	show boot	127
18.24	show running-config	128
18.25	show startup-config	128
18.26	show system-time.....	129
18.27	show system-time dst.....	129
18.28	show system-time ntp.....	129
18.29	show cable-diagnostics interface gigabitEthernet.....	130
18.30	show cpu-utilization	130
18.31	show memory-utilization	131
Chapter 19 IPv6 Address Configuration Commands		132
19.1	ipv6 enable	132
19.2	ipv6 address autoconfig.....	132
19.3	ipv6 address link-local	133
19.4	ipv6 address dhcp	133
19.5	ipv6 address ra	134
19.6	ipv6 address eui-64	135
19.7	ipv6 address	135

19.8	show ipv6 interface.....	136
Chapter 20 Ethernet Configuration Commands		137
20.1	interface gigabitEthernet	137
20.2	interface range gigabitEthernet	137
20.3	interface ten-gigabitEthernet	138
20.4	interface range ten-gigabitEthernet.....	138
20.5	description	139
20.6	shutdown	140
20.7	flow-control	140
20.8	duplex	141
20.9	jumbo	141
20.10	speed	142
20.11	storm-control pps.....	143
20.12	storm-control.....	143
20.13	bandwidth	144
20.14	clear counters	145
20.15	show interface status.....	145
20.16	show interface counters.....	146
20.17	show interface configuration.....	146
20.18	show storm-control	147
20.19	show bandwidth	148
Chapter 21 QoS Commands.....		149
21.1	qos	149
21.2	qos dscp	149
21.3	qos queue cos-map.....	150
21.4	qos queue dscp-map	151
21.5	qos queue mode	152
21.6	qos queue weight	153
21.7	show qos interface.....	154
21.8	show qos cos-map.....	155
21.9	show qos dscp-map.....	155
21.10	show qos queue mode	155
21.11	show qos status	156
Chapter 22 Port Mirror Commands		157
22.1	monitor session destination interface.....	157
22.2	monitor session source interface.....	158

22.3	show monitor session	159
Chapter 23 Port Isolation Commands		160
23.1	port isolation	160
23.2	show port isolation interface	161
Chapter 24 Loopback Detection Commands		162
24.1	loopback-detection(global)	162
24.2	loopback-detection interval.....	162
24.3	loopback-detection recovery-time	163
24.4	loopback-detection(interface)	163
24.5	loopback-detection config.....	164
24.6	loopback-detection recover	165
24.7	show loopback-detection global	165
24.8	show loopback-detection interface	166
Chapter 25 ACL Commands.....		167
25.1	access-list create	167
25.2	mac access-list	167
25.3	access-list standard	168
25.4	access-list extended	169
25.5	rule	170
25.6	access-list policy name.....	171
25.7	access-list policy action	171
25.8	access-list bind acl	172
25.9	access-list bind(interface).....	172
25.10	access-list bind(vlan).....	173
25.11	show access-list	173
25.12	show access-list policy	174
25.13	show access-list bind.....	174
Chapter 26 MSTP Commands		175
26.1	debug spanning-tree.....	175
26.2	spanning-tree(global).....	176
26.3	spanning-tree(interface)	176
26.4	spanning-tree common-config	177
26.5	spanning-tree mode.....	178
26.6	spanning-tree mst configuration	178
26.7	instance	179

26.8	name	180
26.9	revision	180
26.10	spanning-tree mst instance	181
26.11	spanning-tree mst.....	181
26.12	spanning-tree priority.....	182
26.13	spanning-tree tc-defend.....	183
26.14	spanning-tree timer.....	183
26.15	spanning-tree hold-count.....	184
26.16	spanning-tree max-hops.....	185
26.17	spanning-tree bpdudfilter.....	185
26.18	spanning-tree bpduguard	186
26.19	spanning-tree guard loop.....	186
26.20	spanning-tree guard root.....	187
26.21	spanning-tree guard tc.....	187
26.22	spanning-tree mcheck	188
26.23	show spanning-tree active.....	189
26.24	show spanning-tree bridge	189
26.25	show spanning-tree interface	189
26.26	show spanning-tree interface-security	190
26.27	show spanning-tree mst	191
Chapter 27 IGMP Snooping Commands		192
27.1	ip igmp snooping(global)	192
27.2	ip igmp snooping(interface).....	192
27.3	ip igmp snooping rtime	193
27.4	ip igmp snooping mtime.....	193
27.5	ip igmp snooping report-suppression	194
27.6	ip igmp snooping immediate-leave.....	194
27.7	ip igmp snooping drop-unknown	195
27.8	ip igmp snooping last-listener query-inteval	195
27.9	ip igmp snooping last-listener query-count.....	196
27.10	ip igmp snooping vlan-config.....	196
27.11	ip igmp snooping multi-vlan-config.....	198
27.12	ip igmp snooping querier vlan	199
27.13	ip igmp snooping querier vlan (general query).....	199
27.14	ip igmp snooping max-groups	200
27.15	ip igmp profile	201
27.16	deny	202

27.17	permit.....	202
27.18	range.....	202
27.19	ip igmp filter	203
27.20	clear ip igmp snooping statistics.....	204
27.21	show ip igmp snooping	204
27.22	show ip igmp snooping interface	204
27.23	show ip igmp snooping vlan	205
27.24	show ip igmp snooping multi-vlan	206
27.25	show ip igmp snooping groups.....	206
27.26	show ip igmp snooping querier.....	207
27.27	show ip igmp profile.....	208
Chapter 28 MLD Snooping Commands.....		209
28.1	ipv6 mld snooping(global)	209
28.2	ipv6 mld snooping(interface)	209
28.3	ipv6 mld snooping rtime.....	210
28.4	ipv6 mld snooping mtime.....	210
28.5	ipv6 mld snooping report-suppression	211
28.6	ipv6 mld snooping immediate-leave	211
28.7	ipv6 mld snooping drop-unknown	212
28.8	ipv6 mld snooping last-listener query-inteval	212
28.9	ipv6 mld snooping last-listener query-count.....	213
28.10	ipv6 mld snooping vlan-config	213
28.11	ipv6 mld snooping multi-vlan-config	214
28.12	ipv6 mld snooping querier vlan.....	216
28.13	ipv6 mld snooping querier vlan (general query).....	216
28.14	ipv6 mld snooping max-groups	217
28.15	ipv6 mld profile.....	218
28.16	deny	219
28.17	permit.....	219
28.18	range.....	219
28.19	ipv6 mld filter.....	220
28.20	clear ipv6 mld snooping statistics.....	221
28.21	show ipv6 mld snooping	221
28.22	show ipv6 mld snooping interface	221
28.23	show ipv6 mld snooping vlan	222
28.24	show ipv6 mld snooping multi-vlan.....	223
28.25	show ipv6 mld snooping groups	223

28.26	show ipv6 mld snooping querier.....	224
28.27	show ipv6 mld profile.....	224
Chapter 29 SNMP Commands.....		225
29.1	snmp-server.....	225
29.2	snmp-server view.....	225
29.3	snmp-server group.....	226
29.4	snmp-server user.....	227
29.5	snmp-server community.....	229
29.6	snmp-server host.....	229
29.7	snmp-server engineID.....	231
29.8	snmp-server traps snmp.....	232
29.9	snmp-server traps link-status.....	233
29.10	snmp-server traps.....	233
29.11	snmp-server traps mac.....	234
29.12	snmp-server traps vlan.....	235
29.13	rmon history.....	236
29.14	rmon event.....	237
29.15	rmon alarm.....	238
29.16	rmon statistics.....	239
29.17	show snmp-server.....	240
29.18	show snmp-server view.....	240
29.19	show snmp-server group.....	241
29.20	show snmp-server user.....	241
29.21	show snmp-server community.....	241
29.22	show snmp-server host.....	242
29.23	show snmp-server engineID.....	242
29.24	show rmon history.....	243
29.25	show rmon event.....	243
29.26	show rmon alarm.....	244
29.27	show rmon statistics.....	244
Chapter 30 ARP Commands.....		245
30.1	arp.....	245
30.2	clear arp-cache.....	245
30.3	arp timeout.....	246
30.4	show arp.....	246
30.5	show ip arp (interface).....	247

30.6	show ip arp summary	247
Chapter 31 Static Routes Commands		249
31.1	interface vlan	249
31.2	interface loopback	249
31.3	switchport.....	250
31.4	shutdown	250
31.5	ip route.....	251
31.6	description	251
31.7	show interface vlan.....	252
31.8	show ip interface.....	252
31.9	show ip interface brief.....	253
31.10	show ip route	253
31.11	show ip route specify	254
31.12	show ip route summary	255

Preface

This Guide is intended for network administrator to provide referenced information about CLI (Command Line Interface). The device mentioned in this Guide stands for T1700G-28TQ JetStream 24-Port Gigabit Stackable Smart Switch with 4 10GE SFP+ Slots without any explanation.

Overview of this Guide

Chapter 1: Using the CLI

Provide information about how to use the CLI, CLI Command Modes, Security Levels and some Conventions.

Chapter 2: User Interface

Provide information about the commands used to switch between five CLI Command Modes.

Chapter 3: Stack

Provide information about the commands used for configuring stack.

Chapter 4: IEEE 802.1Q VLAN Commands

Provide information about the commands used for configuring IEEE 802.1Q VLAN.

Chapter 5: MAC-based VLAN Commands

Provide information about the commands used for configuring MAC-based VLAN

Chapter 6: Protocol VLAN Commands

Provide information about the commands used for configuring Protocol VLAN.

Chapter 7: Voice VLAN Commands

Provide information about the commands used for configuring Voice VLAN.

Chapter 8: Etherchannel Commands

Provide information about the commands used for configuring LAG (Link Aggregation Group) and LACP (Link Aggregation Control Protocol).

Chapter 9: User Management Commands

Provide information about the commands used for user management.

Chapter 10: HTTP and HTTPS Commands

Provide information about the commands used for configuring the HTTP and HTTPS logon.

Chapter 11: Binding Table Commands

Provide information about the commands used for binding the IP address, MAC address, VLAN and the connected Port number of the Host together.

Chapter 12: ARP Inspection Commands

Provide information about the commands used for protecting the switch from the ARP cheating or ARP Attack.

Chapter 13: DoS Defend Command

Provide information about the commands used for DoS defend and detecting the DoS attack.

Chapter 14: System Log Commands

Provide information about the commands used for configuring system log.

Chapter 15: SSH Commands

Provide information about the commands used for configuring and managing SSH (Security Shell).

Chapter 16: IEEE 802.1X Commands

Provide information about the commands used for configuring IEEE 802.1X function.

Chapter 17: MAC Address Commands

Provide information about the commands used for Address configuration.

Chapter 18: System Configuration Commands

Provide information about the commands used for configuring the System information and System IP, reboot and reset the switch, upgrade the switch system and commands used for cable test.

Chapter 19: IPv6 Address Configuration Commands

Provide information about the commands used for configuring the System IPv6 addresses.

Chapter 20: Ethernet Configuration Commands

Provide information about the commands used for configuring the Bandwidth Control, Negotiation Mode, and Storm Control for ethernet ports.

Chapter 21: QoS Commands

Provide information about the commands used for configuring the QoS function.

Chapter 22: Port Mirror Commands

Provide information about the commands used for configuring the Port Mirror function.

Chapter 23: Port Isolation Commands

Provide information about the commands used for configuring Port Isolation function.

Chapter 24: Loopback Detection Commands

Provide information about the commands used for configuring the Loopback Detection function.

Chapter 25: ACL Commands

Provide information about the commands used for configuring the ACL (Access Control List).

Chapter 26: MSTP Commands

Provide information about the commands used for configuring the MSTP (Multiple Spanning Tree Protocol).

Chapter 27: IGMP Snooping Commands

Provide information about the commands used for configuring the IGMP Snooping (Internet Group Management Protocol Snooping).

Chapter 28: MLD Snooping Commands

Provide information about the commands used for configuring the MLD Snooping (Multicast Listener Discovery Snooping).

Chapter 29: SNMP Commands

Provide information about the commands used for configuring the SNMP (Simple Network Management Protocol) functions.

Chapter 30: ARP Commands

Provide information about the commands used for configuring the ARP (Address Resolution Protocol) functions.

Chapter 31: Static Routes Commands

Provide information about the commands used for configuring the Static Route function.

Chapter 1 Using the CLI

1.1 Accessing the CLI

You can log on to the switch and access the CLI by logging on to the switch remotely by a Telnet or SSH connection through an Ethernet port.

1.1.1 Logon by Telnet

To log on to the switch by a Telnet connection, please take the following steps:

1. Click **Start** and type in **cmd** in the Search programs and files window and press the **Enter** button.

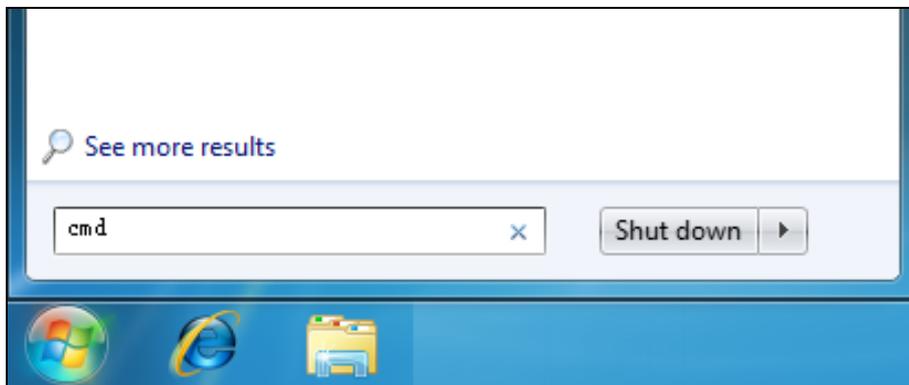


Figure 1-1 Run Window

2. Telnet the switch_IP (factory setting is 192.168.0.1) in the prompt cmd window and press **Enter**.

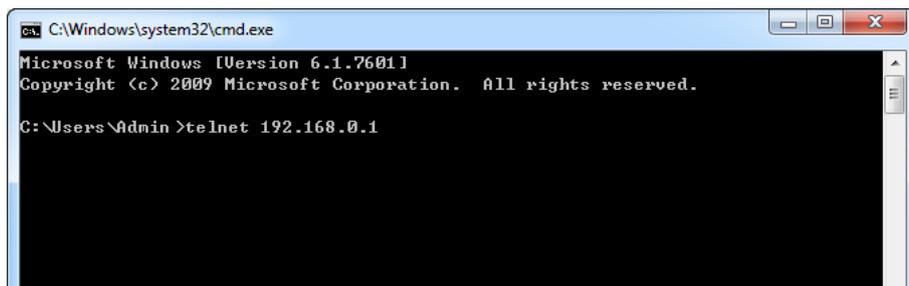


Figure 1-2 Type in the telnet command

3. Type in the User name and Password (the factory default value for both of them are admin) and press the **Enter** button to enter User EXEC Mode , which is shown as Figure 1-3.

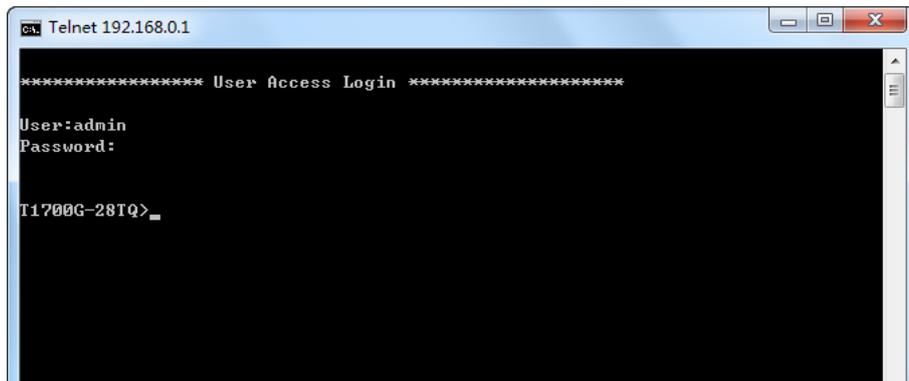


Figure 1-3 Log in the Switch

4. Type in **enable** command to enter Privileged EXEC Mode.

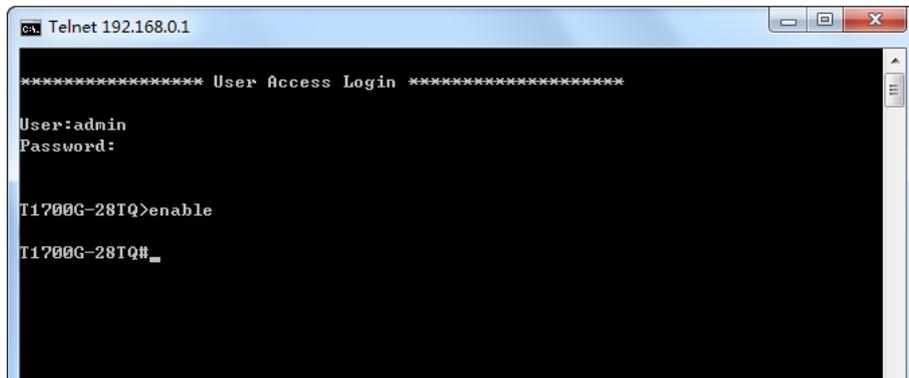


Figure 1-4 Enter into Privileged EXEC Mode

1.1.2 Logon by SSH

To log on by SSH, a Putty client software is recommended. There are two authentication modes to set up an SSH connection:

Password Authentication Mode: It requires username and password, which are both **admin** by default.

Key Authentication Mode: It requires a public key for the switch and a private key for the SSH client software. You can generate the public key and the private key through Putty Key Generator.



Note:

Before SSH login, please follow the steps shown in Figure 1-5 to enable the SSH function through Telnet connection.

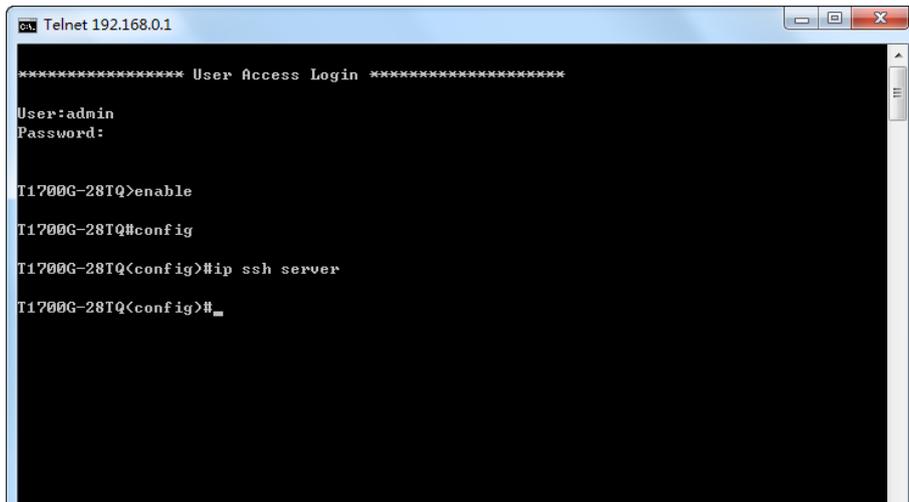


Figure 1-5 Enable SSH function

➤ **Password Authentication Mode**

1. Open the software to log on to the interface of PuTTY. Enter the IP address of the switch into **Host Name** field; keep the default value 22 in the **Port** field; select **SSH** as the Connection type.

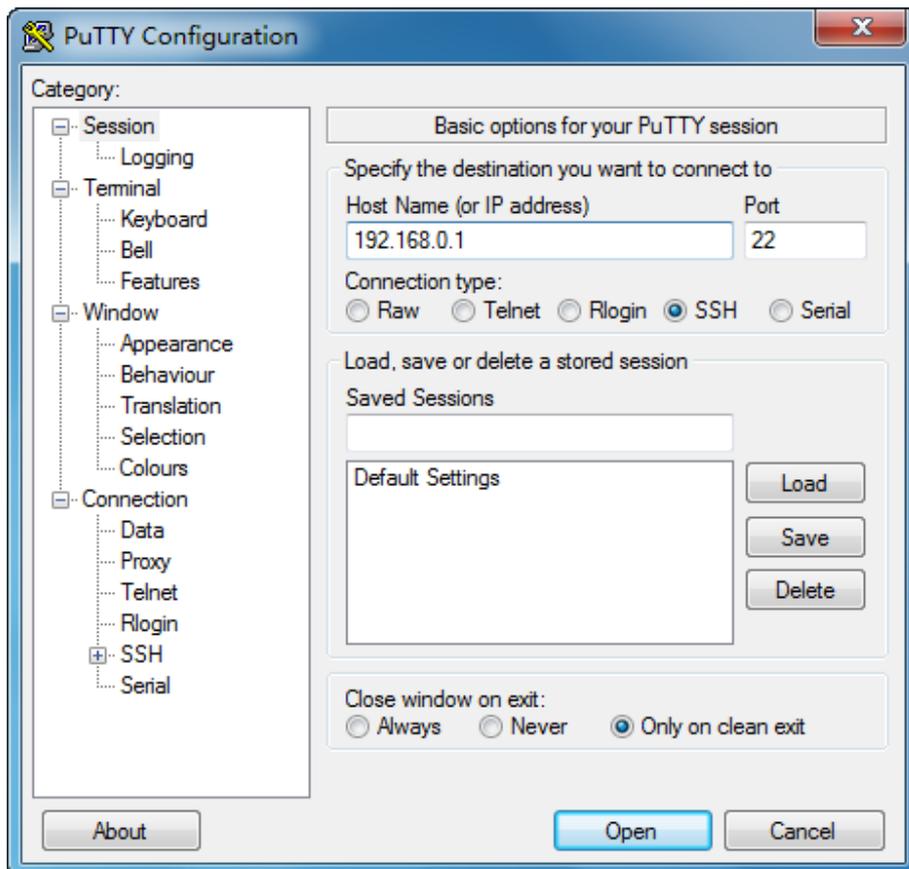


Figure 1-6 SSH Connection Config

2. Click the **Open** button in the above figure to log on to the switch. Enter the login user name and password to log on the switch, and then enter enable to enter Privileged EXEC Mode, so you can continue to configure the switch.

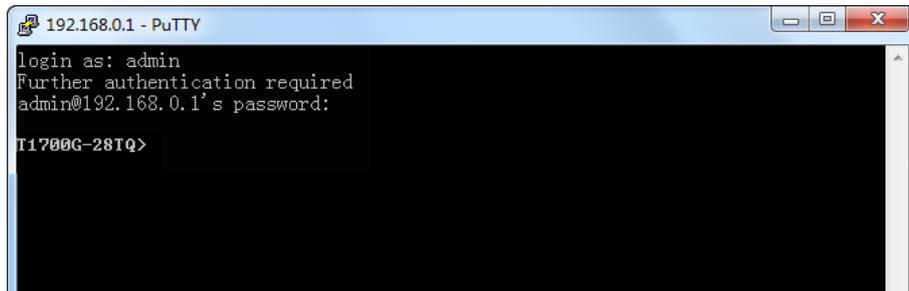


Figure 1-7 Log on the Switch

➤ Key Authentication Mode

1. Select the key type and key length, and generate SSH key.

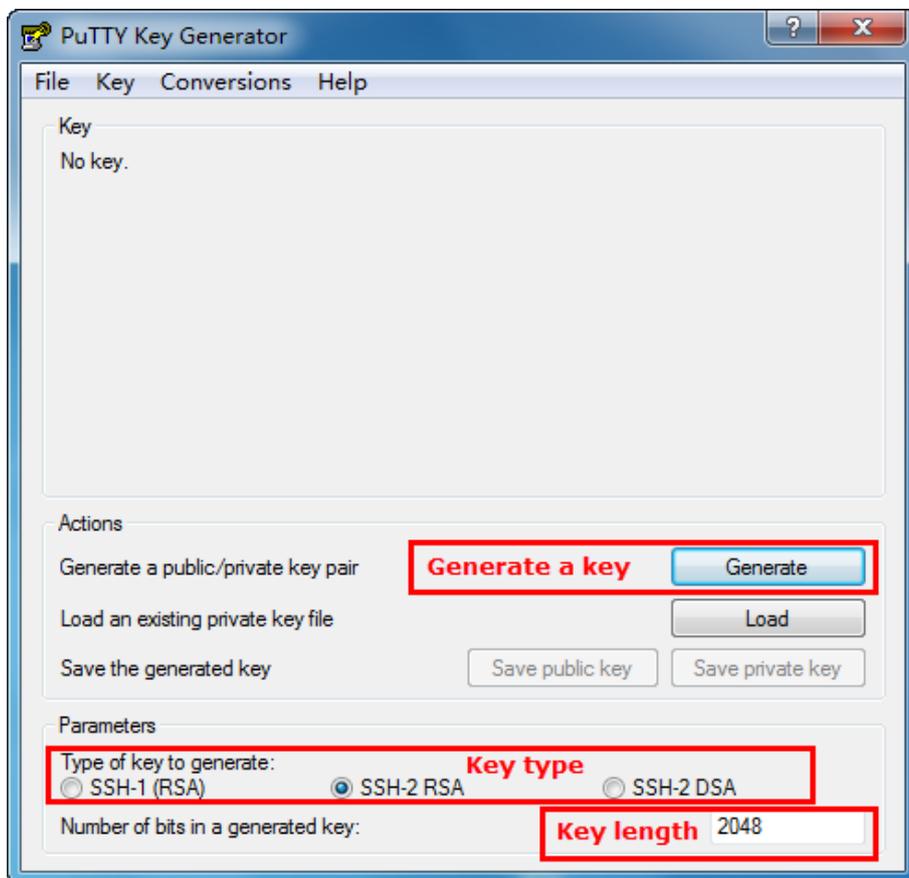


Figure 1-8 Generate SSH Key

⚠ Note:

1. The key length is in the range of 512 to 3072 bits.
2. During the key generation, randomly moving the mouse quickly can accelerate the key generation.

2. After the key is successfully generated, please save the public key and private key to a TFTP server.

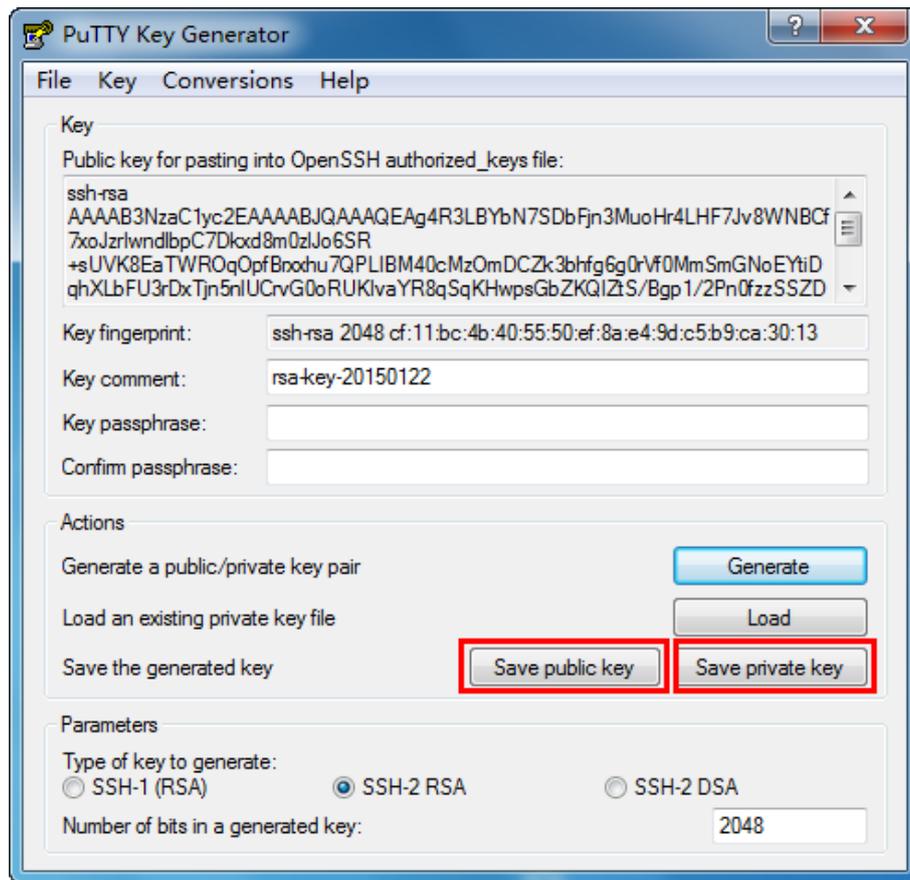


Figure 1-9 Save the Generated Key

3. Log on to the switch by Telnet and download the public key file from the TFTP server to the switch, as the following figure shows:

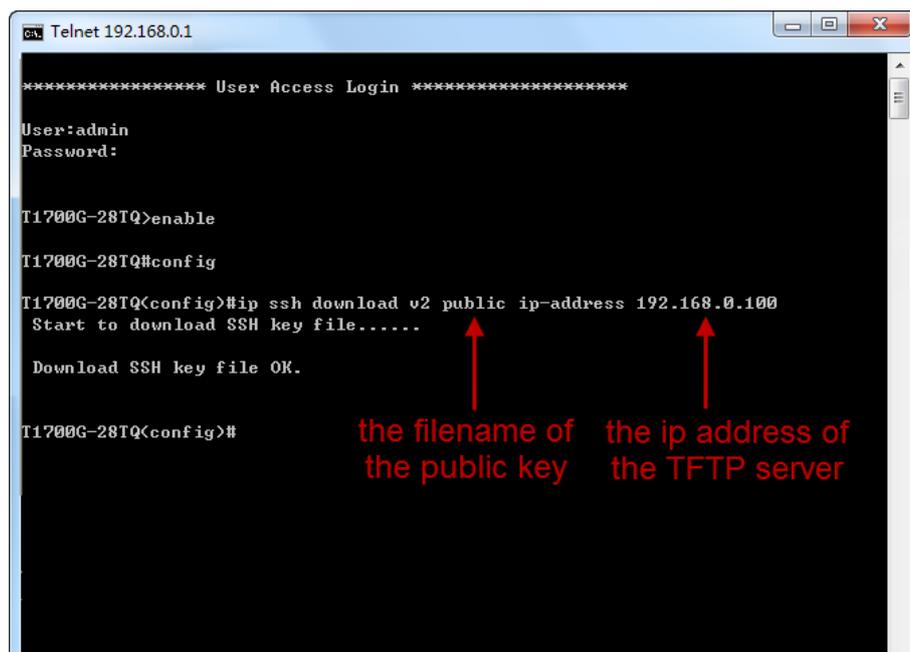


Figure 1-10 Download the Public Key

 **Note:**

1. The key type should accord with the type of the key file.
2. The SSH key downloading can not be interrupted.
4. After the public key is downloaded, please log on to the interface of PuTTY and enter the IP address for login.

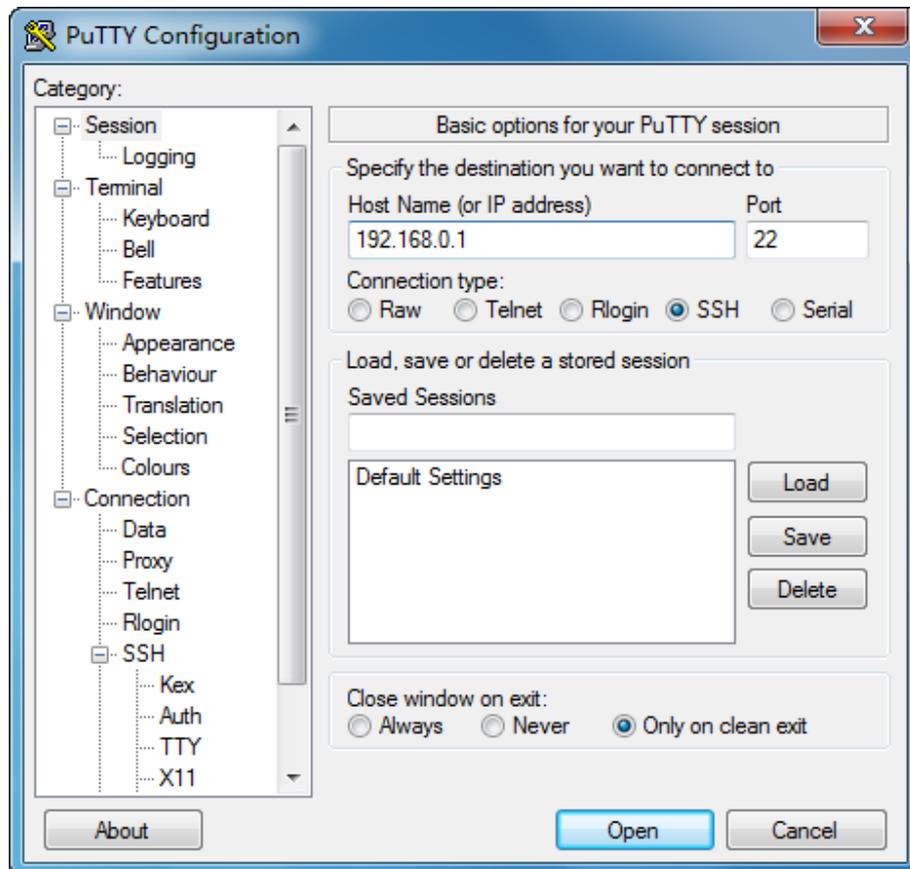


Figure 1-11 SSH Connection Config

5. Click **Browse** to download the private key file to SSH client software and click **Open**.

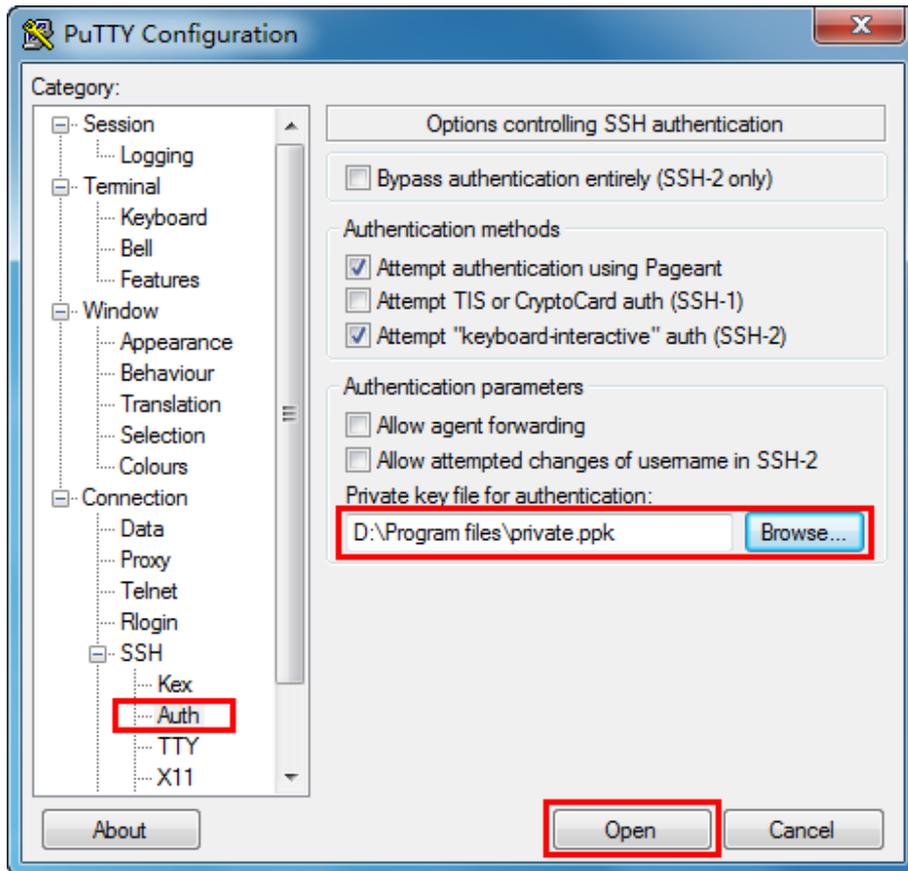


Figure 1-12 Download the Private Key

6. After successful authentication, please enter the login user name. If you log on to the switch without entering password, it indicates that the key has been successfully downloaded.


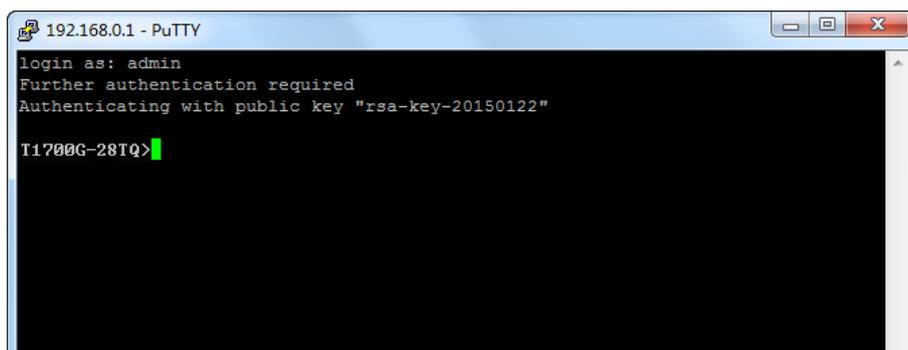


Figure 1-13 Log on the Switch

1.2 CLI Command Modes

The CLI is divided into different command modes: User EXEC Mode, Privileged EXEC Mode, Global Configuration Mode, Interface Configuration Mode and VLAN Configuration Mode. Interface Configuration Mode can also be divided into Interface Ethernet, Interface link-aggregation and some other modes, which is shown as the following diagram.

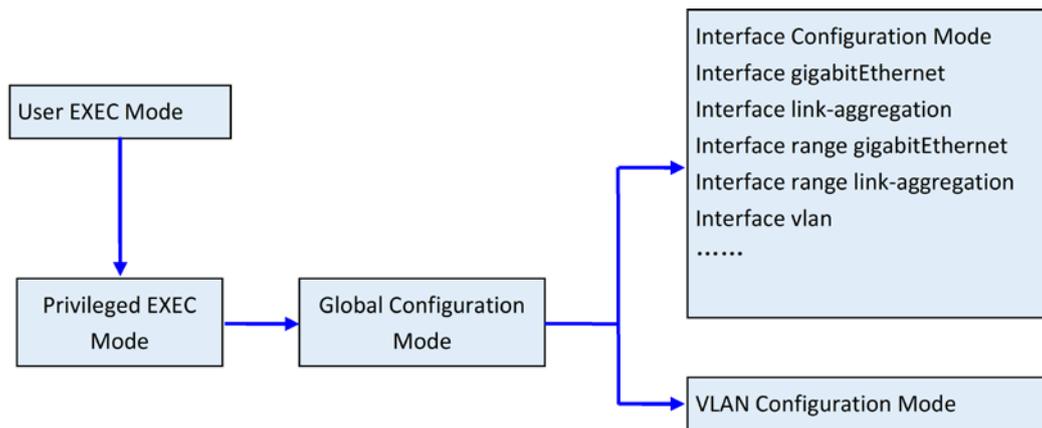

The following table gives detailed information about the Accessing path, Prompt of each mode and how to exit the current mode and access the next mode.

Mode	Accessing Path	Prompt	Logout or Access the next mode
User EXEC Mode	Primary mode once it is connected with the switch.	T1700G-28TQ>	Use the exit command to disconnect the switch. Use the enable command to access Privileged EXEC mode.
Privileged EXEC Mode	Use the enable command to enter this mode from User EXEC mode.	T1700G-28TQ#	Enter the exit command to return to User EXEC mode. Enter configure command to access Global Configuration mode.
Global Configuration Mode	Use the configure command to enter this mode from Privileged EXEC mode.	T1700G-28TQ(config)#	Use the exit or the end command or press Ctrl+Z to return to Privileged EXEC mode. Use the interface gigabitEthernet/ten-gigabitEthernet port, interface port-channel lagid or interface range gigabitEthernet/ten-gigabitEthernet port-list, interface range port-channel lag-list command to access interface Configuration mode. Use the vlan vlan-list to access VLAN Configuration mode.

Mode	Accessing Path	Prompt	Logout or Access the next mode
Interface Configuration Mode	Layer 2 Interface: Use the interface gigabitEthernet/ten-gigabitEthernet port, interface port-channel lagid or interface range gigabitEthernet/ten-gigabitEthernet port-list, interface range port-channel lag-list command to enter this mode from Global Configuration mode.	T1700G-28TQ(config-if)# or T1700G-28TQ(config-if-range)#	Use the end command or press Ctrl+Z to return to Privileged EXEC mode. Enter the exit or the # command to return to Global Configuration mode. A port number must be specified in the interface command.
Interface Configuration Mode	Layer 3 Interface: Use the no switchport command to enter Routed Port mode from Interface Configuration mode. Use the interface vlan vlan-id command to enter VLAN Interface mode from Global Configuration mode. Use the interface loopback id command to enter Loopback Interface mode from Global Configuration mode.	T1700G-28TQ(config-if)# or T1700G-28TQ(config-if-range)#	Use the switchport command to switch to the Layer 2 interface mode. Use the end command or press Ctrl+Z to return to Privileged EXEC mode. Enter the exit or the # command to return to Global Configuration mode.
VLAN Configuration Mode	Use the vlan vlan-list command to enter this mode from Global Configuration mode.	T1700G-28TQ (config-vlan)#	Use the end command or press Ctrl+Z to return to Privileged EXEC mode. Enter the exit command or the # command to return to Global configuration mode.

 **Note:**

1. The user is automatically in User EXEC Mode after the connection between the PC and the switch is established by a Telnet/SSH connection.

2. Each command mode has its own set of specific commands. To configure some commands, you should access the corresponding command mode firstly.
 - **Global Configuration Mode:** In this mode, global commands are provided, such as the Spanning Tree, Schedule Mode and so on.
 - **Interface Configuration Mode:** In this mode, users can configure one or several ports, different ports corresponds to different commands
 - a). Interface gigabitEthernet/ten-gigabitEthernet: Configure parameters for an Ethernet port, such as Duplex-mode, flow control status.
 - b). Interface range gigabitEthernet/ten-gigabitEthernet: Configure parameters for several Ethernet ports.
 - c). Interface link-aggregation: Configure parameters for a link-aggregation, such as broadcast storm.
 - d). Interface range link-aggregation: Configure parameters for multi-trunks.
 - e). Interface vlan: Configure parameters for the vlan-port.
 - **VLAN Configuration Mode:** In this mode, users can create a VLAN and add a specified port to the VLAN.
3. Some commands are global, that means they can be performed in all modes:
 - **show:** display all information of switch, for example: statistic information, port information, VLAN information.

1.3 Security Levels

This switch's security is divided into two levels: User level and Admin level.

User level only allows users to do some simple operations in User EXEC Mode; Admin level allows you to monitor, configure and manage the switch in Privileged EXEC Mode, Global Configuration Mode, Interface Configuration Mode and VLAN Configuration Mode.

Users get the privilege to the User level once logging in by Telnet/SSH. However, Guest users are restricted to access the CLI.

Users can enter Privileged EXEC mode from User EXEC mode by using the **enable** command. In default case, no password is needed. In Global Configuration Mode, you can configure password for Admin level by **enable password** command. Once password is configured, you are required to enter it to access Privileged EXEC mode.

1.4 Conventions

1.4.1 Format Conventions

The following conventions are used in this Guide:

- Items in square brackets [] are optional
- Items in braces { } are required
- Alternative items are grouped in braces and separated by vertical bars. For example: **speed** {10 | 100 | 1000 | 10000}
- Bold indicates an unalterable keyword. For example: **show logging**
- Normal Font indicates a constant (several options are enumerated and only one can be selected). For example: **mode** {dynamic | static | permanent}
- Italic Font indicates a variable (an actual value must be assigned). For example: **bridge aging-time** *aging-time*

1.4.2 Special Characters

You should pay attentions to the description below if the variable is a character string:

- These six characters " < > , \ & can not be input.
- If a blank is contained in a character string, single or double quotation marks should be used, for example 'hello world', "hello world", and the words in the quotation marks will be identified as a string. Otherwise, the words will be identified as several strings.

1.4.3 Parameter Format

Some parameters must be entered in special formats which are shown as follows:

- MAC address must be enter in the format of xx:xx:xx:xx:xx:xx.
- One or several values can be typed for a port-list or a vlan-list using comma to separate. Use a hyphen to designate a range of values, for instance, 1/0/1,1/0/3-5,1/0/7 indicates choosing port 1/0/1,1/0/3,1/0/4,1/0/5,1/0/7.

Chapter 2 User Interface

2.1 enable

Description

The **enable** command is used to access Privileged EXEC Mode from User EXEC Mode.

Syntax

enable

Command Mode

User EXEC Mode

Example

If you have set the password to access Privileged EXEC Mode from User EXEC Mode:

```
T1700G-28TQ>enable
```

```
Password:
```

```
T1700G-28TQ#
```

2.2 service password-encryption

Description

The **service password-encryption** command is used to encrypt the password when the password is defined or when the configuration is written, using the symmetric encryption algorithm. Encryption prevents the password from being readable in the configuration file. To disable the global encryption function, please use **no service password-encryption** command.

Syntax

service password-encryption

no service password-encryption

Command Mode

Global Configuration Mode

Example

Enable the global encryption function:

```
T1700G-28TQ(config)# service password-encryption
```

2.3 enable password

Description

The **enable password** command is used to set or change the password for users to access Privileged EXEC Mode from User EXEC Mode. To remove the password, please use **no enable password** command. This command uses the symmetric encryption.

Syntax

```
enable password { [ 0 ] password | 7 encrypted-password }  
no enable password
```

Parameter

0 — Specify the encryption type. 0 indicates that an unencrypted password will follow. By default, the encryption type is 0.

password — Super password, a string from 1 to 31 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters (! \$ % ' () * , - . / [] { }). By default, it is empty.

7 — Indicates a symmetric encrypted password with fixed length will follow.

encrypted-password — A symmetric encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password if you re-enter this mode.

Command Mode

Global Configuration Mode

User Guidelines

If the password you configured here is unencrypted and the global encryption function is enabled in [service password-encryption](#), the password in the configuration file will be displayed in the symmetric encrypted form.

Example

Set the super password as "admin" and unencrypted to access Privileged EXEC Mode from User EXEC Mode:

```
T1700G-28TQ(config)#enable password 0 admin
```

2.4 enable secret

Description

The **enable secret** command is used to set a secret password, which is using an MD5 encryption algorithm, for users to access Privileged EXEC Mode from User EXEC Mode. To return to the default configuration, please use **no enable secret** command. This command uses the MD5 encryption.

Syntax

```
enable secret { [ 0 ] password | 5 encrypted-password }  
no enable secret
```

Parameter

0 — Specify the encryption type. 0 indicates that an unencrypted password will follow. By default, the encryption type is 0.

password — Super password, a string from 1 to 31 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters (! \$ % ' () * , - . / [] { }). By default, it is empty. The password in the configuration file will be displayed in the MD5 encrypted form.

5 — Indicates an MD5 encrypted password with fixed length will follow.

encrypted-password — An MD5 encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password if you re-enter this mode.

Command Mode

Global Configuration Mode

User Guidelines

If both the **enable password** and **enable secret** are defined, you must enter the password set in **enable secret**.

Example

Set the secret password as "admin" and unencrypted to access Privileged EXEC Mode from User EXEC Mode. The password will be displayed in the encrypted form.

```
T1700G-28TQ(config)#enable secret 0 admin
```

2.5 configure

Description

The **configure** command is used to access Global Configuration Mode from Privileged EXEC Mode.

Syntax

configure

Command Mode

Privileged EXEC Mode

Example

Access Global Configuration Mode from Privileged EXEC Mode:

```
T1700G-28TQ# configure
T1700G-28TQ(config)#
```

2.6 exit

Description

The **exit** command is used to return to the previous Mode from the current Mode.

Syntax

exit

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Return to Global Configuration Mode from Interface Configuration Mode, and then return to Privileged EXEC Mode:

```
T1700G-28TQ(config-if)# exit
T1700G-28TQ(config)#exit
T1700G-28TQ#
```

2.7 end

Description

The **end** command is used to return to Privileged EXEC Mode.

Syntax

end

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Return to Privileged EXEC Mode from Interface Configuration Mode:

```
T1700G-28TQ(config-if)#end
T1700G-28TQ#
```

2.8 show history

Description

The **show history** command is used to show the latest 20 commands you entered in the current mode since the switch is powered.

Syntax

```
show history
```

Command Mode

Privileged EXEC Mode and any Configuration Mode

Example

Show the commands you have entered in the current mode:

```
T1700G-28TQ (config)# show history
1 show history
```

2.9 clear history

Description

The **clear history** command is used to clear the commands you have entered in the current mode, therefore these commands will not be shown next time you use the **show history** command.

Syntax

```
clear history
```

Command Mode

Privileged EXEC Mode and any Configuration Mode

Example

Clear the commands you have entered in the current mode:

T1700G-28TQ(config)# clear history

Chapter 3 Stack

The stack technology is to connect multiple stackable devices through their StackWise ports, forming a stack which works as a unified system and presents as a single entity to the network. This chapter describes how to manage the switch stacks.

3.1 switch priority

Description

The **switch priority** command is specify the stack member number and the new priority for the stack member. To restore the priority of the specified stack member to the default value as 5, please use **no switch priority** command.

Syntax

```
swtich unitid priority priority  
no swtich unitid priority
```

Parameter

unitid —— Specify the member number.

priority —— Specify the member's priority, ranging from 1 to 15.

Command Mode

Global Configuration Mode

Example

Specify the unit 1's priority as 10 in the stack:

```
T1700G-28TQ(config)# switch 1 priority 10
```

3.2 switch renumber

Description

The **switch renumber** command is modify the member number of a specified stack member.

Syntax

```
swtich unitid renumber { newid | auto-numbering }
```

Parameter

unitid — Specify the member to be renumbered.

newid — Specify the new stack member number for the stack member.

auto-numbering — The specified member will obtain its stack number through auto-numbering.

Command Mode

Global Configuration Mode

Example

Modify the unit 1's new member number as 2:

```
T1700G-28TQ(config)# switch 1 renumber 2
```

3.3 switch stack-port

Description

The **switch stack-port** command is used to enable the stack port. To switch the stack port to Ethernet port, please use **no switch stack-port** command. Port 1/0/25 and 1/0/26 are in Stack Port Group 1 and 1/0/27 and 1/0/28 are in Stack Group 2. Stack feature can only be enabled in one group at a time.

Syntax

```
swtich stack-port interface ten-gigabitEthernet port
```

```
no switch stack-port interface ten-gigabitEthernet port
```

Parameter

port — The ten-gigabit port number.

Command Mode

Global Configuration Mode

Example

Specify the ten-gigabit port 1/0/28 as a stack port:

```
T1700G-28TQ(config)# switch stack-port interface ten-gigabitEthernet  
1/0/28
```

3.4 switch provision

Description

The **switch provision** command is used to configure the provisioned stack member. The provision configuration feature enables you to configure a new switch in advance before it joins the stack, which means you can configure the stack unit number and its switch type which is not currently the stack member.

The information of the provisioned member is manually created, or created/updated by the switch member when it joins the stack. The provisioned configuration retains in the stack when the stack member leaves the stack.

Syntax

switch *unitid* **provision** *type*

no switch *unitid* **provision**

Parameter

unitid — The stack member number of the provisioned switch.

type — The device type of the provisioned switch.

Command Mode

Global Configuration Mode

Example

Create a provisioned switch whose stack member number is 2 and device type is T1700G-28TQRev1:

```
T1700G-28TQ(config)# switch 2 provision T1700G-28TQRev1
```

3.5 show switch

Description

The **show switch** command is used to display the current stack's information.

Syntax

show switch [*unitid* | **detail** | **neighbors** | **stack-ports**]

Parameter

unitid — Specify the member number.

detail — Display the detailed information of the stack, including stack member, stack port and neighboring information.

neighbors — Display the information of the stack neighbor.

stack-ports — Display the information of the stack ports.

Command Mode

Privileged EXEC Mode and any Configuration Mode

Example

Display the detailed information of the current stack:

```
T1700G-28TQ(config)# show switch detail
```

Chapter 4 IEEE 802.1Q VLAN Commands

VLAN (Virtual Local Area Network) technology is developed for the switch to divide the LAN into multiple logical LANs flexibly. Hosts in the same VLAN can communicate with each other, regardless of their physical locations. VLAN can enhance performance by conserving bandwidth, and improve security by limiting traffic to specific domains.

4.1 vlan

Description

The **vlan** command is used to create IEEE 802.1Q VLAN and enter VLAN Configuration Mode. To delete the IEEE 802.1Q VLAN, please use **no vlan** command.

Syntax

```
vlan vlan-list  
no vlan vlan-list
```

Parameter

vlan-list — Specify IEEE 802.1Q VLAN ID list, ranging from 2 to 4094, in the format of 2-3, 5. It is multi-optional.

Command Mode

Global Configuration Mode

Example

Create VLAN 2-10 and VLAN 100:

```
T1700G-28TQ(config)# vlan 2-10,100
```

Delete VLAN 2:

```
T1700G-28TQ(config)# no vlan 2
```

4.2 interface vlan

Description

The **interface vlan** command is used to create VLAN Interface and enter Interface VLAN Mode. To delete VLAN Interface, please use **no interface vlan** command.

Syntax

```
interface vlan vlan-id  
no interface vlan vlan-id
```

Parameter

vlan-id — Specify IEEE 802.1Q VLAN ID, ranging from 1 to 4094.

Command Mode

Global Configuration Mode

Example

Create VLAN Interface 2:

```
T1700G-28TQ(config)# interface vlan 2
```

4.3 name

Description

The **name** command is used to assign a description to a VLAN. To clear the description, please use **no name** command.

Syntax

name *descript*
no name

Parameter

descript —String to describe the VLAN, which contains 16 characters at most.

Command Mode

VLAN Configuration Mode(VLAN)

Example

Specify the name of VLAN 2 as “group1”:

```
T1700G-28TQ(config)# vlan 2  
T1700G-28TQ(config-vlan)# name group1
```

4.4 switchport general allowed vlan

Description

The **switchport general allowed vlan** command is used to add the desired General port to IEEE 802.1Q VLAN and specify the port's type. To delete the corresponding VLAN(s), please use **no switchport general allowed vlan** command.

Syntax

switchport general allowed vlan *vlan-list* { tagged | untagged }
no switchport general allowed vlan *vlan-list*

Parameter

vlan-list — Specify IEEE 802.1Q VLAN ID list, ranging from 2 to 4094, in the format of 2-3, 5. It is multi-optional.

tagged | untagged — Egress rule, untagged or tagged. Tagged: All packets forwarded by the port are tagged. The packets contain VLAN information. Untagged: Packets forwarded by the port are untagged.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Add port 4 to VLAN 2 and configure the type of port 1/0/4 as tagged:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/4
T1700G-28TQ(config-if)# switchport general allowed vlan 2 tagged
```

4.5 switchport pvid

Description

The **switchport pvid** command is used to configure the PVID for the switch ports.

Syntax

```
switchport pvid vlan-id
```

Parameter

vlan-id — VLAN ID, ranging from 1 to 4094.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Specify the PVID of port 1/0/2 as 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# switchport pvid 2
```

4.6 show vlan summary

Description

The **show vlan summary** command is used to display the summarized information of IEEE 802.1Q VLAN.

Syntax

```
show vlan summary
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the summarized information of IEEE 802.1Q VLAN:

```
T1700G-28TQ(config)# show vlan summary
```

4.7 show vlan brief

Description

The **show vlan brief** command is used to display the brief information of IEEE 802.1Q VLAN.

Syntax

```
show vlan brief
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the brief information of IEEE 802.1Q VLAN:

```
T1700G-28TQ(config)# show vlan brief
```

4.8 show vlan

Description

The **show vlan** command is used to display the information of IEEE 802.1Q VLAN.

Syntax

```
show vlan [ id vlan-id ]
```

Parameter

vlan-id — Specify IEEE 802.1Q VLAN ID, ranging from 1 to 4094. It is multi-optional. Using the **show vlan** command without parameter displays the detailed information of all VLANs.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of vlan 5:

```
T1700G-28TQ(config)# show vlan id 5
```

4.9 show interface switchport

Description

The **show interface switchport** command is used to display the IEEE 802.1Q VLAN configuration information of the specified port/LAG.

Syntax

```
show interface switchport [ gigabitEthernet port | ten-gigabitEthernet port | port-channel lagid ]
```

Parameter

port — The port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the VLAN configuration information of all ports and LAGs:

```
T1700G-28TQ(config)# show interface switchport
```

Chapter 5 MAC-based VLAN Commands

MAC VLAN (Virtual Local Area Network) is the way to classify the VLANs based on MAC Address. A MAC address is relative to a single VLAN ID. The untagged packets and the priority-tagged packets coming from the MAC address will be tagged with this VLAN ID.

5.1 mac-vlan mac-address

Description

The **mac-vlan mac-address** command is used to create a MAC-based VLAN entry. To delete a MAC-based VLAN entry, please use the **no mac-vlan mac-address** command.

Syntax

```
mac-vlan mac-address mac-addr vlan vlan-id [description descript]  
no mac-vlan mac-address mac-addr
```

Parameter

mac-addr — MAC address, in the format of XX:XX:XX:XX:XX:XX.

vlan-id — Specify IEEE 802.1Q VLAN ID, ranging from 1 to 4094.

descript — Give a description to the MAC address for identification, which contains 8 characters at most.

Command Mode

Global Configuration Mode

Example

Create VLAN 2 with the MAC address 00:11:11:01:01:12 and the name "TP":

```
T1700G-28TQ(config)#mac-vlan mac-address 00:11:11:01:01:12 vlan 2  
description TP
```

5.2 mac-vlan

Description

The **mac-vlan** command is used to enable a port for the MAC-based VLAN feature. Only the port is enabled can the configured MAC-based VLAN take

effect. To disable the MAC-based VLAN function, please use **no mac-vlan** command. All the ports are disabled by default.

Syntax

mac-vlan

no mac-vlan

Command Mode

Interface Configuration Mode (interface fastEthernet / interface range fastEthernet / interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Gigabit Ethernet port 1/0/3 for the MAC-based VLAN feature:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)#mac-vlan
```

5.3 show mac-vlan

Description

The **show mac-vlan** command is used to display the information of the MAC-based VLAN entry. MAC address and VLAN ID can be used to filter the displayed information.

Syntax

show mac-vlan { all | mac-address *mac-addr* | vlan *vlan-id* }

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Parameter

mac-addr —— MAC address, in the format of XX:XX:XX:XX:XX:XX.

vlan-id —— Specify IEEE 802.1Q VLAN ID, ranging from 1 to 4094.

Example

Display the information of all the MAC-based VLAN entry:

```
T1700G-28TQ(config)#show mac-vlan all
```

5.4 show mac-vlan interface

Description

The **show mac-vlan interface** command is used to display the port state of MAC-based VLAN.

Syntax

```
show mac-vlan interface
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the enable state of all the ports:

```
T1700G-28TQ(config)#show mac-vlan interface
```

Chapter 6 Protocol VLAN Commands

Protocol-based VLAN (Virtual Local Area Network) is the way to classify VLANs based on Protocols. A Protocol corresponds to a VLAN ID. The untagged packets and the priority-tagged packets matching the protocol template will be tagged with this VLAN ID.

6.1 protocol-vlan template

Description

The **protocol-vlan template** command is used to create Protocol-based VLAN template. To delete Protocol-based VLAN template, please use **no protocol-vlan template** command.

Syntax

```
protocol-vlan template name protocol-name frame { ether_2 ether-type type  
| snap ether-type type | llc dsap dsap_type ssap ssap_type }  
no protocol-vlan template template-idx
```

Parameter

protocol-name — Give a name for the Protocol-based VLAN Template , which contains 8 characters at most.

ether_2 ether-type type — Specify the Ethernet type.

snap ether-type type — Specify the Ethernet type.

llc dsap dsap_type ssap ssap_type — Specify the DSAP type and the SSAP type.

template-idx — The number of the Protocol-based VLAN Template. You can get the template corresponding to the number by the [show protocol-vlan template](#) command.

Command Mode

Global Configuration Mode

Example

Create a Protocol-based VLAN template named “TP” whose Ethernet protocol type is 0x2024:

```
T1700G-28TQ(config)#protocol-vlan template name TP frame ether_2
ether-type 2024
```

6.2 protocol-vlan vlan

Description

The **protocol-vlan vlan** command is used to create a Protocol-based VLAN. To delete a Protocol-based VLAN, please use **no protocol-vlan** command.

Syntax

```
protocol-vlan vlan vlan-id { template template-idx }
no protocol-vlan vlan group-idx
```

Parameter

vlan-vid —— Specify IEEE 802.1Q VLAN ID, ranging from 1-4094.

template-idx ——The number of the Protocol-based VLAN Template. You can get the template corresponding to the number by the [show protocol-vlan template](#) command.

group-idx ——The number of the Protocol-based VLAN entry. You can get the Protocol-based VLAN entry corresponding to the number by the [show protocol-vlan vlan](#) command.

Command Mode

Global Configuration Mode

Example

Create Protocol-based VLAN 2 and bind it with Protocol-based VLAN Template 3:

```
T1700G-28TQ(config)# protocol-vlan vlan 2 template 3
```

6.3 protocol-vlan

Description

The **protocol-vlan** command is used to add the port to a specified protocol group. To remove the port from this protocol group, please use **no protocol-vlan group** command.

Syntax

```
protocol-vlan group index
no protocol-vlan group index
```

Command Mode

Interface Configuration Mode (interface fastEthernet / interface range fastEthernet / interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Parameter

index — Specify the protocol group ID.

Example

Add Gigabit Ethernet port 1/0/20 to protocol group 1:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/20
T1700G-28TQ(config-if)#protocol-vlan group 1
```

6.4 show protocol-vlan template

Description

The **show protocol-vlan template** command is used to display the information of the Protocol-based VLAN templates.

Syntax

```
show protocol-vlan template
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of the Protocol-based VLAN templates:

```
T1700G-28TQ(config)# show protocol-vlan template
```

6.5 show protocol-vlan vlan

Description

The **show protocol-vlan vlan** command is used to display the information about Protocol-based VLAN entry.

Syntax

```
show protocol-vlan vlan
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display information of the Protocol-based VLAN entry:

```
T1700G-28TQ(config)# show protocol-vlan vlan
```

Chapter 7 Voice VLAN Commands

Voice VLANs are configured specially for voice data stream. By configuring Voice VLANs and adding the ports with voice devices attached to voice VLANs, you can perform QoS-related configuration for voice data, ensuring the transmission priority of voice data stream and voice quality.

7.1 voice vlan

Description

The **voice vlan** command is used to enable Voice VLAN function. To disable Voice VLAN function, please use **no voice vlan** command.

Syntax

voice vlan *vlan-id*

no voice vlan

Parameter

vlan-id — Specify IEEE 802.1Q VLAN ID, ranging from 2 to 4094.

Command Mode

Global Configuration Mode

Example

Enable the Voice VLAN function for VLAN 10:

```
T1700G-28TQ(config)# voice vlan 10
```

7.2 voice vlan aging

Description

The **voice vlan aging** command is used to set the aging time for a voice VLAN. To restore to the default aging time for the Voice VLAN, please use **no voice vlan aging** command.

Syntax

voice vlan aging *time*

no voice vlan aging

Parameter

time — Aging time (in minutes) to be set for the Voice VLAN. It ranges from 1 to 43200 minutes and the default value is 1440 minutes.

Command Mode

Global Configuration Mode

Example

Set the aging time for the Voice VLAN as 1 minute:

```
T1700G-28TQ(config)# voice vlan aging 1
```

7.3 voice vlan priority

Description

The **voice vlan priority** command is used to configure the priority for the Voice VLAN. To restore to the default priority, please use **no voice vlan priority** command.

Syntax

voice vlan priority *pri*

no voice vlan priority

Parameter

pri — Priority, ranging from 0 to 7, and the default value is 6.

Command Mode

Global Configuration Mode

Example

Configure the priority of the Voice VLAN as 5:

```
T1700G-28TQ(config)# voice vlan priority 5
```

7.4 voice vlan mac-address

Description

The **voice vlan mac-address** command is used to create Voice VLAN OUI. To delete the specified Voice VLAN OUI, please use **no voice vlan mac-address** command.

Syntax

voice vlan mac-address *mac-addr* **mask** *mask* [**description** *descript*]

no voice vlan mac-address *mac-addr*

Parameter

mac-addr — The OUI address of the voice device, in the format of XX:XX:XX:XX:XX:XX.

mask — The OUI address mask of the voice device, in the format of XX:XX:XX:XX:XX:XX.

descript — Give a description to the OUI for identification which contains 16 characters at most.

Command Mode

Global Configuration Mode

Example

Create a Voice VLAN OUI described as TP-Phone with the OUI address 00:11:11:11:11:11 and the mask address FF:FF:FF:00:00:00:

```
T1700G-28TQ(config)#voice vlan mac-address 00:11:11:11:11:11 mask  
FF:FF:FF:00:00:00 description TP-Phone
```

7.5 switchport voice vlan mode

Description

The **switchport voice vlan mode** command is used to configure the Voice VLAN mode for the Ethernet port.

Syntax

switchport voice vlan mode { manual | auto }

Parameter

manual | auto — Port mode.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the port 1/0/3 to operate in the auto voice VLAN mode:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# switchport voice vlan mode auto
```

7.6 switchport voice vlan security

Description

The **switchport voice vlan security** command is used to enable the Voice VLAN security feature. To disable the Voice VLAN security feature, please use **no switchport voice vlan security** command.

Syntax

```
switchport voice vlan security
no switchport voice vlan security
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable port 1/0/3 for the Voice VLAN security feature:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# switchport voice vlan security
```

7.7 show voice vlan

Description

The **show voice vlan** command is used to display the global configuration information of Voice VLAN.

Syntax

```
show voice vlan
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of Voice VLAN globally:

```
T1700G-28TQ(config)# show voice vlan
```

7.8 show voice vlan oui

Description

The **show voice vlan oui** command is used to display the configuration information of Voice VLAN OUI.

Syntax

```
show voice vlan oui
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of Voice VLAN OUI:

```
T1700G-28TQ(config)# show voice vlan oui
```

7.9 show voice vlan switchport

Description

The **show voice vlan switchport** command is used to display the Voice VLAN configuration information of a specified port/LAG.

Syntax

```
show voice vlan switchport [ gigabitEthernet port | ten-gigabitEthernet port  
| port-channel lagid ]
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Voice VLAN configuration information of all ports and LAGs:

```
T1700G-28TQ(config)# show voice vlan switchport
```

Display the Voice VLAN configuration information of port 1/0/2:

```
T1700G-28TQ(config)# show voice vlan switchport gigabitEthernet 1/0/2
```

Chapter 8 Etherchannel Commands

Etherchannel Commands are used to configure LAG and LACP function.

LAG (Link Aggregation Group) is to combine a number of ports together to make a single high-bandwidth data path, which can highly extend the bandwidth. The bandwidth of the LAG is the sum of bandwidth of its member port.

LACP (Link Aggregation Control Protocol) is defined in IEEE802.3ad and enables the dynamic link aggregation and disaggregation by exchanging LACP packets with its partner. The switch can dynamically group similarly configured ports into a single logical link, which will highly extend the bandwidth and flexibly balance the load.

8.1 channel-group

Description

The **channel-group** command is used to add a port to the EtherChannel Group and configure its mode. To delete the port from the EtherChannel Group, please use **no channel-group** command.

Syntax

```
channel-group num mode { on | active | passive }  
no channel-group
```

Parameter

num — The number of the EtherChannel Group, ranging from 1 to 6.
on — Enable the static LAG.
active — Enable the active LACP mode.
passive — Enable the passive LACP mode.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Add ports 2-4 to EtherChannel Group 1 and enable the static LAG:

```
T1700G-28TQ(config)# interface range gigabitEthernet 1/0/2-4  
T1700G-28TQ(config-if-range)# channel-group 1 mode on
```

8.2 port-channel load-balance

Description

The **port-channel load-balance** command is used to configure the Aggregate Arithmetic for LAG. To return to the default configurations, please use **no port-channel load-balance** command.

Syntax

```
port-channel load-balance { src-mac | dst-mac | src-dst-mac | src-ip | dst-ip |  
src-dst-ip }
```

```
no port-channel load-balance
```

Parameter

src-mac — The source MAC address. When this option is selected, the Aggregate Arithmetic will be based on the source MAC address of the packets.

dst-mac — The destination MAC address. When this option is selected, the Aggregate Arithmetic will be based on the destination MAC address of the packets.

src-dst-mac — The source and destination MAC address. When this option is selected, the Aggregate Arithmetic will be based on the source and destination MAC addresses of the packets. The Aggregate Arithmetic for LAG is “src-dst-mac” by default.

src-ip — The source IP address. When this option is selected, the Aggregate Arithmetic will be based on the source IP address of the packets.

dst-ip — The destination IP address. When this option is selected, the Aggregate Arithmetic will be based on the destination IP address of the packets.

src-dst-ip — The source and destination IP address. When this option is selected, the Aggregate Arithmetic will be based on the source and destination IP addresses of the packets.

Command Mode

Global Configuration Mode

Example

Configure the Aggregate Arithmetic for LAG as “src-dst-ip”:

```
T1700G-28TQ(config)# port-channel load-balance src-dst-ip
```

8.3 lacp system-priority

Description

The **lacp system-priority** command is used to configure the LACP system priority globally. To return to the default configurations, please use **no lacp system-priority** command.

Syntax

lacp system-priority *pri*

no lacp system-priority

Parameter

pri — The system priority, ranging from 0 to 65535. It is 32768 by default.

Command Mode

Global Configuration Mode

Example

Configure the LACP system priority as 1024 globally:

```
T1700G-28TQ(config)# lacp system-priority 1024
```

8.4 lacp port-priority

Description

The **lacp port-priority** command is used to configure the LACP port priority for specified ports. To return to the default configurations, please use **no lacp port-priority** command.

Syntax

lacp port-priority *pri*

no lacp port-priority

Parameter

pri — The port priority, ranging from 0 to 65535. It is 32768 by default.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the LACP port priority as 1024 for ports 1-3:

```
T1700G-28TQ(config)# interface range gigabitEthernet 1/0/1-3
T1700G-28TQ(config-if-range)# lacp port-priority 1024
```

Configure the LACP port priority as 2048 for port 4:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/4
T1700G-28TQ(config-if)# lacp port-priority 2048
```

8.5 show etherchannel

Description

The **show etherchannel** command is used to display the EtherChannel information.

Syntax

```
show etherchannel [ channel-group-num ] { detail | summary }
```

Parameter

channel-group-num — The EtherChannel Group number, ranging from 1 to 6. By default, it is empty, and will display the information of all EtherChannel Groups.

detail — The detailed information of EtherChannel.

summary — The EtherChannel information in summary.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the detailed information of EtherChannel Group 1:

```
T1700G-28TQ(config)# show etherchannel 1 detail
```

8.6 show etherchannel load-balance

Description

The **show etherchannel load-balance** command is used to display the Aggregate Arithmetic of LAG.

Syntax

```
show etherchannel load-balance
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Aggregate Arithmetic of LAG:

```
T1700G-28TQ(config)# show etherchannel load-balance
```

8.7 show lacp

Description

The **show lacp** command is used to display the LACP information for a specified EtherChannel Group.

Syntax

```
show lacp [ channel-group-num ] { internal | neighbor }
```

Parameter

channel-group-num — The EtherChannel Group number, ranging from 1 to 6. By default, it is empty, and will display the information of all LACP groups.

internal — The internal LACP information.

neighbor — The neighbor LACP information.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the internal LACP information of EtherChannel Group 1:

```
T1700G-28TQ(config)# show lacp 1 internal
```

8.8 show lacp sys-id

Description

The **show lacp sys-id** command is used to display the LACP system priority globally.

Syntax

show lacp sys-id

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the LACP system priority:

```
T1700G-28TQ(config)# show lacp sys-id
```

Chapter 9 User Management Commands

User Manage Commands are used to manage the user's logging information by Web, Telnet or SSH, so as to protect the settings of the switch from being randomly changed.

9.1 user name (password)

Description

The **user name** command is used to add a new user or modify the existed users' information. To delete the existed users, please use **no user name** command. This command uses the symmetric encryption.

Syntax

```
user name name [ privilege admin | guest ] password { [ 0 ] password | 7 encrypted-password }
```

```
no user name name
```

Parameter

name —— Type a name for users' login, which contains 16 characters at most, composed of digits, English letters and under dashes only.

admin | guest —— Access level. "Admin" means that you can edit, modify and view all the settings of different functions. "Guest" means that you can only view some of the settings on the Web without the right to edit or modify. It is "admin" by default.

0 —— Specify the encryption type. 0 indicates that an unencrypted password will follow. By default, the encryption type is 0.

password —— Users' login password, a string from 1 to 31 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters (! \$ % ' () * , - . / [{ | }).

7 —— Indicates a symmetric encrypted password with fixed length will follow.

encrypted-password —— A symmetric encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password if you re-enter this mode.

Command Mode

Global Configuration Mode

User Guidelines

If the password you configured here is unencrypted and the global encryption function is enabled in [service password-encryption](#), the password in the configuration file will be displayed in the symmetric encrypted form.

Example

Add and enable a new admin user named “tplink”, of which the password is “admin” and unencrypted:

```
T1700G-28TQ(config)#user name tplink privilege admin password 0 admin
```

9.2 user name (secret)

Description

The **user name** command is used to add a new user or modify the existed users' information. To delete the existed users, please use **no user name** command. This command uses the MD5 encryption.

Syntax

```
user name name [ privilege admin | guest ] secret { [ 0 ] password | 5  
encrypted-password }
```

```
no user name name
```

Parameter

name —— Type a name for users' login, which contains 16 characters at most, composed of digits, English letters and under dashes only.

admin | guest —— Access level. “Admin” means that you can edit, modify and view all the settings of different functions. “Guest” means that you can only view some of the settings on the Web without the right to edit or modify. It is “admin” by default.

0 —— Specify the encryption type. 0 indicates that an unencrypted password will follow. By default, the encryption type is 0.

password —— Users' login password, a string from 1 to 31 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters (!\$%()'*,.-/[]{}). The password will be saved to the configuration file using the MD5 encrypted algorithm.

5 — Indicates an MD5 encrypted password with fixed length will follow.

encrypted-password — An MD5 encrypted password with fixed length, which you can copy from another switch's configuration file.

Command Mode

Global Configuration Mode

User Guidelines

If both the **user name (password)** and **user name (secret)** are defined, only the latest configured password will take effect.

Example

Add and enable a new admin user named “tplink”, of which the password is “admin”. The password will be displayed in the encrypted form.

```
T1700G-28TQ(config)#user name tplink privilege admin secret 0 admin
```

9.3 user access-control ip-based

Description

The **user access-control ip-based** command is used to limit the IP-range of the users' access. Only the users within the IP-range you set here are allowed to access the switch. To cancel the user access limit, please use **no user access-control** command.

Syntax

```
user access-control ip-based { ip-addr ip-mask } [ snmp ] [ telnet ] [ ssh ] [ http ]  
[ https ] [ ping ] [ all ]
```

```
no user access-control
```

Parameter

ip-addr — The source IP address. Only the users within the IP-range you set here are allowed to access the switch.

ip-mask — The subnet mask of the IP address.

[snmp] [telnet] [ssh] [http] [https] [ping] [all] — Specify the access interface. These interfaces are enabled by default.

Command Mode

Global Configuration Mode

Example

Enable the access-control of the user whose IP address is 192.168.0.148:

```
T1700G-28TQ(config)# user access-control ip-based 192.168.0.148
255.255.255.255
```

9.4 user access-control mac-based

Description

The **user access-control mac-based** command is used to limit the MAC address of the users' access. Only the users with this MAC address you set here are allowed to access the switch. To cancel the user access limit, please use **no user access-control** command.

Syntax

```
user access-control mac-based { mac-addr } [ snmp ] [ telnet ] [ ssh ] [ http ]
[ https ] [ ping ] [ all ]
no user access-control
```

Parameter

mac-addr — The source MAC address. Only the user with this MAC address is allowed to access the switch.

[snmp] [telnet] [ssh] [http] [https] [ping] [all] — Specify the access interface. These interfaces are enabled by default.

Command Mode

Global Configuration Mode

Example

Configure that only the user whose MAC address is 00:00:13:0A:00:01 is allowed to access the switch:

```
T1700G-28TQ(config)# user access-control mac-based 00:00:13:0A:00:01
```

9.5 user access-control port-based

Description

The **user access-control port-based** command is used to limit the ports for accessing. Only the users connected to these ports you set here are allowed to

access the switch. To cancel the user access limit, please use **no user access-control** command.

Syntax

```
user access-control port-based interface { gigabitEthernet port | ten-gigabitEthernet port } [ snmp ] [ telnet ] [ ssh ] [ http ] [ https ] [ ping ] [ all ]  
no user access-control
```

Parameter

port — The Ethernet port number.

port-list — The list group of Ethernet ports, in the format of 1/0/1-4. You can appoint 5 ports at most.

[**snmp**] [**telnet**] [**ssh**] [**http**] [**https**] [**ping**] [**all**] — Specify the access interface. These interfaces are enabled by default.

Command Mode

Global Configuration Mode

Example

Configure that only the users connected to ports 1/0/2-6 are allowed to access the switch:

```
T1700G-28TQ(config)# user access-control port-based interface range  
gigabitEthernet 1/0/2-6
```

9.6 telnet

Description

The **telnet enable** command is used to enable the Telnet function. To disable the Telnet function, please use the **telnet disable** command. This function is enabled by default.

Syntax

```
telnet enable  
telnet disable
```

Command Mode

Global Configuration Mode

Example

Disable the Telnet function:

```
T1700G-28TQ(config)# telnet disable
```

9.7 show user account-list

Description

The **show user account-list** command is used to display the information of the current users.

Syntax

```
show user account-list
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of the current users:

```
T1700G-28TQ(config)# show user account-list
```

9.8 show user configuration

Description

The **show user configuration** command is used to display the security configuration information of the user authentication information and the access interface.

Syntax

```
show user configuration
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the security configuration information of the users:

```
T1700G-28TQ(config)# show user configuration
```

9.9 show telnet-status

Description

The **show telnet-status** command is used to display the configuration information of the Telnet function.

Syntax

```
show telnet-status
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display whether the Telnet function is enabled:

```
T1700G-28TQ(config)# show telnet-status
```

Chapter 10 HTTP and HTTPS Commands

With the help of HTTP (HyperText Transfer Protocol) or HTTPS (Hyper Text Transfer Protocol over Secure Socket Layer), you can manage the switch through a standard browser.

HTTP is the protocol to exchange or transfer hypertext.

SSL (Secure Sockets Layer), a security protocol, is to provide a secure connection for the application layer protocol (e.g. HTTP) based on TCP. Adopting asymmetrical encryption technology, SSL uses key pair to encrypt/decrypt information. A key pair refers to a public key (contained in the certificate) and its corresponding private key. By default, the switch has a certificate (self-signed certificate) and a corresponding private key. The Certificate/Key Download function enables the user to replace the default key pair.

10.1 ip http server

Description

The **ip http server** command is used to enable the HTTP server within the switch. To disable the HTTP function, please use **no ip http server** command. This function is enabled by default. The HTTP and HTTPS server function cannot be disabled at the same time.

Syntax

ip http server

no ip http server

Command Mode

Global Configuration Mode

Example

Disable the HTTP function:

```
T1700G-28TQ(config)# no ip http server
```

10.2 ip http max-users

Description

The **ip http max-users** command is used to configure the maximum number of users that are allowed to connect to the HTTP server. To cancel this limitation, please use **no ip http max-users** command.

Syntax

ip http max-users *admin-num* *guest-num*

no ip http max-users

Parameter

admin-num — The maximum number of the users logging on to the HTTP server as Admin, ranging from 1 to 16. The total number of Admin and Guest should be less than 16.

guest-num — The maximum number of the users logging on to the HTTP server as Guest, ranging from 0 to 15. The total number of Admin and Guest should be less than 16.

Command Mode

Global Configuration Mode

Example

Configure the maximum number of the Admin and Guest users logging on to the HTTP server as 5 and 3:

```
T1700G-28TQ(config)# ip http max-users 5 3
```

10.3 ip http session timeout

Description

The **ip http session timeout** command is used to configure the connection timeout of the HTTP server. To restore to the default timeout time, please use **no ip http session timeout** command.

Syntax

ip http session timeout *time*

no ip http session timeout

Parameter

time — The timeout time, ranging from 5 to 30 in minutes. By default, the value is 10.

Command Mode

Global Configuration Mode

Example

Configure the timeout time of the HTTP server connection as 15 minutes:

```
T1700G-28TQ(config)# ip http session timeout 15
```

10.4 ip http secure-server

Description

The **ip http secure-server** command is used to enable the HTTPS server within the switch. To disable the HTTPS function, please use **no ip http secure-server** command. This function is enabled by default. The HTTP and HTTPS server function cannot be disabled at the same time.

Syntax

```
ip http secure-server  
no ip http secure-server
```

Command Mode

Global Configuration Mode

Example

Disable the HTTPS function:

```
T1700G-28TQ(config)# no ip http secure-server
```

10.5 ip http secure-protocol

Description

The **ip http secure-protocol** command is used to configure the SSL protocol version. To restore to the default SSL version, please use **no ip http secure-protocol** command. By default, the switch supports SSLv3 and TLSv1.

Syntax

```
ip http secure-protocol { [ ssl3 ] [ tls1 ] }  
no ip http secure-protocol
```

Parameter

ssl3 — The SSL 3.0 protocol.

tls1 — The TLS 1.0 protocol

Command Mode

Global Configuration Mode

Example

Configure the protocol of SSL connection as SSL 3.0:

```
T1700G-28TQ(config)# ip http secure-protocol ssl3
```

10.6 ip http secure-ciphersuite

Description

The **ip http secure-ciphersuite** command is used to configure the cipherSuites over the SSL connection supported by the switch. To restore to the default ciphersuite types, please use **no ip http secure-ciphersuite** command.

Syntax

```
ip http secure-ciphersuite { [ 3des-ede-cbc-sha ] [ rc4-128-md5 ]  
[ rc4-128-sha ] [ des-cbc-sha ] }
```

```
no ip http secure-ciphersuite
```

Parameter

[3des-ede-cbc-sha] [rc4-128-md5] [rc4-128-sha] [des-cbc-sha] — Specify the encryption algorithm and the digest algorithm to use on an SSL connection. By default, the switch supports all these ciphersuites.

Command Mode

Global Configuration Mode

Example

Configure the ciphersuite to be used for encryption over the SSL connection as 3des-ede-cbc-sha:

```
T1700G-28TQ(config)# ip http secure-ciphersuite 3des-ede-cbc-sha
```

10.7 ip http secure-max-users

Description

The **ip http secure-max-users** command is used to configure the maximum number of users that are allowed to connect to the HTTPS server. To cancel this limitation, please use **no ip http secure-max-users** command.

Syntax

```
ip http secure-max-users admin-num guest-num
```

```
no ip http secure-max-users
```

Parameter

admin-num — The maximum number of the users logging on to the HTTPS server as Admin, ranging from 1 to 16. The total number of Admin and Guest should be no more than 16.

guest-num — The maximum number of the users logging on to the HTTPS server as Guest, ranging from 0 to 15. The total number of Admin and Guest should be no more than 16.

Command Mode

Global Configuration Mode

Example

Configure the maximum number of the Admin and Guest users logging on to the HTTPS server as 5 and 3:

```
T1700G-28TQ(config)# ip http secure-max-users 5 3
```

10.8 ip http secure-session timeout

Description

The **ip http secure-session timeout** command is used to configure the connection timeout of the HTTPS server. To restore to the default timeout time, please use **no ip http secure-session timeout** command.

Syntax

```
ip http secure-session timeout time
```

```
no ip http secure-session timeout
```

Parameter

time — The timeout time, ranging from 5 to 30 in minutes. By default, the value is 10.

Command Mode

Global Configuration Mode

Example

Configure the timeout time of the HTTPS server connection as 15 minutes:

```
T1700G-28TQ(config)# ip http secure-session timeout 15
```

10.9 ip http secure-server download certificate

Description

The **ip http secure-server download certificate** command is used to download a certificate to the switch from TFTP server.

Syntax

ip http secure-server download certificate *ssl-cert ip-address ip-addr*

Parameter

ssl-cert — The name of the SSL certificate which is selected to download to the switch. The length of the name ranges from 1 to 25 characters. The Certificate must be BASE64 encoded.

ip-addr — The IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

Command Mode

Global Configuration Mode

Example

Download an SSL Certificate named *ssl-cert* from TFTP server with the IP address of 192.168.0.146:

```
T1700G-28TQ(config)# ip http secure-server download certificate ssl-cert  
ip-address 192.168.0.146
```

Download an SSL Certificate named *ssl-cert* from TFTP server with the IP address of fe80::1234

```
T1700G-28TQ(config)# ip http secure-server download certificate ssl-cert  
ip-address fe80::1234
```

10.10 ip http secure-server download key

Description

The **ip http secure-server download key** command is used to download an SSL key to the switch from TFTP server.

Syntax

ip http secure-server download key *ssl-key ip-address ip-addr*

Parameter

ssl-key — The name of the SSL key which is selected to download to the switch. The length of the name ranges from 1 to 25 characters. The Key must be BASE64 encoded.

ip-addr — The IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

Command Mode

Global Configuration Mode

Example

Download an SSL key named *ssl-key* from TFTP server with the IP address of 192.168.0.146:

```
T1700G-28TQ(config)# ip http secure-server download key ssl-key
ip-address 192.168.0.146
```

Download an SSL key named *ssl-key* from TFTP server with the IP address of fe80::1234

```
T1700G-28TQ(config)# ip http secure-server download key ssl-key
ip-address fe80::1234
```

10.11 show ip http configuration

Description

The **show ip http configuration** command is used to display the configuration information of the HTTP server, including status, session timeout, access-control, max-user number and the idle-timeout, etc.

Syntax

```
show ip http configuration
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of the HTTP server:

```
T1700G-28TQ(config)# show ip http configuration
```

10.12 show ip http secure-server

Description

The **show ip http secure-server** command is used to display the global configuration of SSL.

Syntax

```
show ip http secure-server
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the global configuration of SSL:

```
T1700G-28TQ(config)# show ip http secure-server
```

Chapter 11 Binding Table Commands

You can bind the IP address, MAC address, VLAN and the connected Port number of the Host together, which can be the condition for the ARP Inspection to filter the packets.

11.1 ip source binding

Description

The **ip source binding** command is used to bind the IP address, MAC address, VLAN ID and the Port number together manually. You can manually bind the IP address, MAC address, VLAN ID and the Port number together in the condition that you have got the related information of the Hosts in the LAN. To delete the IP-MAC-VID-PORT entry from the binding table, please use **no ip source binding index** command.

Syntax

```
ip source binding hostname ip-addr mac-addr vlan vlan-id interface  
{ gigabitEthernet port | ten-gigabitEthernet port } { none | arp-detection }  
[ forced-source {arp-scanning | dhcp-snooping} ]
```

```
no ip source binding index hostname ip-addr mac-addr vlan vlan-id interface  
{ gigabitEthernet port | ten-gigabitEthernet port }
```

Parameter

hostname ——The Host Name, which contains 20 characters at most.

ip-addr —— The IP address of the Host.

mac-addr —— The MAC address of the Host.

vlan-id ——The VLAN ID needed to be bound, ranging from 1 to 4094.

port —— The number of port connected to the Host.

none | arp-detection ——The protect type for the entry. “none” indicates applying none; “arp-detection” indicates ARP detection.

forced-source —— The source of the binding entry can be specified as “arp-scanning” or “dhcp-snooping”.

idx —— The entry number needed to be deleted. You can use the [show ip source binding](#) command to get the idx. Pay attention that the entry number is the actual number in the binding table which is not display in an arranged order.

Command Mode

Global Configuration Mode

Example

Bind an ACL entry with the IP 192.168.0.1, MAC 00:00:00:00:00:01, VLAN ID 2 and the Port number 1/0/5 manually. And then enable the entry for the ARP detection:

```
T1700G-28TQ(config)#ip source binding host1 192.168.0.1  
00:00:00:00:00:01 vlan 2 interface gigabitEthernet 1/0/5 arp-detection
```

Delete the IP-MAC-VID-PORT entry with the IP 192.168.0.1, MAC 00:00:00:00:00:01, VLAN ID 2 and the Port number 1/0/5:

```
T1700G-28TQ(config)#no ip source binding host1 192.168.0.1  
00:00:00:00:00:01 vlan 2 interface gigabitEthernet 1/0/5
```

11.2 ip dhcp snooping

Description

The **ip dhcp snooping** command is used to enable DHCP Snooping function globally. To disable DHCP Snooping function globally, please use **no ip dhcp snooping** command. DHCP Snooping functions to monitor the process of the Host obtaining the IP address from DHCP server, and record the IP address, MAC address, VLAN and the connected Port number of the Host for automatic binding. The switch can also propagate the control information and the network parameters via the Option 82 field to provide more information for the Host.

Syntax

```
ip dhcp snooping  
no ip dhcp snooping
```

Command Mode

Global Configuration Mode

Example

Enable the DHCP Snooping function globally:

```
T1700G-28TQ(config)#ip dhcp snooping
```

11.3 ip dhcp snooping vlan

Description

The **ip dhcp snooping vlan** command is used to enable DHCP Snooping function on a specified VLAN. To disable DHCP Snooping function on this VLAN, please use **no ip dhcp snooping vlan** command.

Syntax

```
ip dhcp snooping vlan vlan-range  
no ip dhcp snooping vlan vlan-range
```

Parameter

vlan-range — Specify the VLANs to enable the DHCP snooping function, in the format of 1-3, 5.

Command Mode

Global Configuration Mode

Example

Enable the DHCP Snooping function on VLAN 1,4,6-7:

```
T1700G-28TQ(config)#ip dhcp snooping vlan 1,4,6-7
```

11.4 ip dhcp snooping information option

Description

The **ip dhcp snooping information option** command is used to enable the Option 82 function of DHCP Snooping. To disable the Option 82 function, please use **no ip dhcp snooping information option** command.

Syntax

```
ip dhcp snooping information option  
no ip dhcp snooping information option
```

Command Mode

Global Configuration Mode

Example

Enable the Option 82 function of DHCP Snooping:

```
T1700G-28TQ(config)#ip dhcp snooping information option
```

11.5 ip dhcp snooping information strategy

Description

The **ip dhcp snooping information strategy** command is used to select the operation for the Option 82 field of the DHCP request packets from the Host. To restore to the default option, please use **no ip dhcp snooping information strategy** command.

Syntax

ip dhcp snooping information strategy *strategy*

no ip dhcp snooping information strategy

Parameter

strategy — The operations for Option 82 field of the DHCP request packets from the Host, including three types:

keep: Indicates to keep the Option 82 field of the packets. It is the default option;

replace: Indicates to replace the Option 82 field of the packets with the switch defined one;

drop: Indicates to discard the packets including the Option 82 field

Command Mode

Global Configuration Mode

Example

Replace the Option 82 field of the packets with the switch defined one and then send out:

```
T1700G-28TQ(config)#ip dhcp snooping information strategy replace
```

11.6 ip dhcp snooping information remote-id

Description

The **ip dhcp snooping information remote-id** command is used to configure the customized sub-option Remote ID for the Option 82. To return to default Remote ID for the Option 82, please use **no ip dhcp snooping information remote-id** command.

Syntax

ip dhcp snooping information remote-id *string*

no ip dhcp snooping information remote-id

Parameter

string — Enter the sub-option Remote ID, which contains 63 characters at most.

Command Mode

Global Configuration Mode

Example

Configure the customized sub-option Remote ID for the Option 82 as tplink:

```
T1700G-28TQ(config)#ip dhcp snooping information remote-id tplink
```

11.7 ip dhcp snooping information circuit-id

Description

The **ip dhcp snooping information circuit-id** command is used to enable and configure the customized sub-option Circuit ID for the Option 82 on a specified port/LAG. To return to the default Circuit ID for the Option 82, please use **no ip dhcp snooping information circuit-id** command.

Syntax

ip dhcp snooping information circuit-id *string*

no ip dhcp snooping information circuit-id

Parameter

string — Enter the sub-option Circuit ID, which contains 32 characters at most.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable and configure the customized sub-option Circuit ID for the Option 82 as “tplink” on port 1/0/1:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/1
```

```
T1700G-28TQ(config-if)#ip dhcp snooping information circuit-id tplink
```

11.8 ip dhcp snooping trust

Description

The **ip dhcp snooping trust** command is used to configure a port to be a Trusted Port. Only the Trusted Port can receive the DHCP packets from DHCP servers. To turn the port back to a distrusted port, please use **no ip dhcp snooping trust** command.

Syntax

```
ip dhcp snooping trust  
no ip dhcp snooping trust
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the Gigabit Ethernet port 1/0/2 to be a Trusted Port:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/2  
T1700G-28TQ(config-if)#ip dhcp snooping trust
```

11.9 ip dhcp snooping mac-verify

Description

The **ip dhcp snooping mac-verify** command is used to enable the MAC Verify feature. To disable the MAC Verify feature, please use **no ip dhcp snooping mac-verify** command. There are two fields of the DHCP packet containing the MAC address of the Host. The MAC Verify feature is to compare the two fields and discard the packet if the two fields are different.

Syntax

```
ip dhcp snooping mac-verify  
no ip dhcp snooping mac-verify
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the MAC Verify feature for the Gigabit Ethernet port 10/2:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)#ip dhcp snooping mac-verify
```

11.10 ip dhcp snooping limit rate

Description

The **ip dhcp snooping limit rate** command is used to enable the Flow Control feature for the DHCP packets. The excessive DHCP packets will be discarded. To restore to the default configuration, please use **no ip dhcp snooping limit rate** command.

Syntax

```
ip dhcp snooping limit rate value
no ip dhcp snooping limit rate
```

Parameter

value — The value of Flow Control. The options are 5/10/15/20/25/30 (packet/second). The default value is 0, which stands for “disable”.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Set the Flow Control of GigabitEthernet port 2 as 20 pps:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)#ip dhcp snooping limit rate 20
```

11.11 ip dhcp snooping decline rate

Description

The **ip dhcp snooping decline rate** command is used to enable the Decline Protect feature and configure the rate limit on DHCP Decline packets. The excessive DHCP Decline packets will be discarded. To disable the Decline Protect feature, please use **no ip dhcp snooping decline rate** command.

Syntax

ip dhcp snooping decline rate *value*

no ip dhcp snooping decline rate

Parameter

value — Specify the rate limit of DHCP Decline packets, and the optional values are 0, 5, 10, 15, 20, 25 and 30 (units:packet/second). Its default value is 0, which stands for “disable”.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the rate limit of DHCP Decline packets as 20 packets per second on Gigabit Ethernet port 1/0/2:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)#ip dhcp snooping decline 20
```

11.12 show ip source binding

Description

The **show ip source binding** command is used to display the IP-MAC-VID-PORT binding table.

Syntax

show ip source binding

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the IP-MAC-VID-PORT binding table:

```
T1700G-28TQ(config)#show ip source binding
```

11.13 show ip dhcp snooping

Description

The **show ip dhcp snooping** command is used to display the running status of DHCP Snooping.

Syntax

```
show ip dhcp snooping
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the running status of DHCP Snooping:

```
T1700G-28TQ#show ip dhcp snooping
```

11.14 show ip dhcp snooping interface

Description

The **show ip dhcp snooping interface** command is used to display the DHCP Snooping configuration of a desire Ethernet port/LAG or of all Ethernet ports/LAGs.

Syntax

```
show ip dhcp snooping interface [ gigabitEthernet port |  
ten-gigabitEthernet port | port-channel lagid ]
```

Parameters

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the DHCP Snooping configuration of all Ethernet ports and LAGs:

```
T1700G-28TQ#show ip dhcp snooping interface
```

Display the DHCP Snooping configuration of Gigabit Ethernet port 1/0/5:

```
T1700G-28TQ#show ip dhcp snooping interface gigabitEthernet 1/0/5
```

Chapter 12 ARP Inspection Commands

ARP (Address Resolution Protocol) Detect function is to protect the switch from the ARP cheating, such as the Network Gateway Spoofing and Man-In-The-Middle Attack, etc.

12.1 ip arp inspection(global)

Description

The **ip arp inspection** command is used to enable the ARP Detection function globally. To disable the ARP Detection function, please use **no ip arp detection** command.

Syntax

```
ip arp inspection
no ip arp inspection
```

Command Mode

Global Configuration Mode

Example

Enable the ARP Detection function globally:

```
T1700G-28TQ(config)#ip arp inspection
```

12.2 ip arp inspection trust

Description

The **ip arp inspection trust** command is used to configure the port for which the ARP Detect function is unnecessary as the Trusted Port. To clear the Trusted Port list, please use **no ip arp detection trust** command. The specific ports, such as up-linked port, routing port and LAG port, should be set as Trusted Port. To ensure the normal communication of the switch, please configure the ARP Trusted Port before enabling the ARP Detect function.

Syntax

```
ip arp inspection trust
no ip arp inspection trust
```

Command Mode

Interface Configuration Mode

Example

Configure the Gigabit Ethernet ports 1/0/2-5 as the Trusted Port:

```
T1700G-28TQ(config)#interface range gigabitEthernet 1/0/2-5
T1700G-28TQ(config-if-range)#ip arp inspection trust
```

12.3 ip arp inspection(interface)

Description

The **ip arp inspection** command is used to enable the ARP Defend function. To disable the ARP detection function, please use **no ip arp inspection** command. ARP Attack flood produces lots of ARP Packets, which will occupy the bandwidth and slow the network speed extremely. With the ARP Defend enabled, the switch can terminate receiving the ARP packets for 300 seconds when the transmission speed of the legal ARP packet on the port exceeds the defined value so as to avoid ARP Attack flood.

Syntax

ip arp inspection

no ip arp inspection

Command Mode

Interface Configuration Mode

Example

Enable the arp defend function for the Gigabit Ethernet ports 1/0/2-6:

```
T1700G-28TQ(config)#interface range gigabitEthernet 1/0/2-6
T1700G-28TQ(config-if-range)#ip arp inspection
```

12.4 ip arp inspection limit-rate

Description

The **ip arp inspection limit-rate** command is used to configure the ARP speed of a specified port. To restore to the default speed, please use **no ip arp inspection limit-rate** command.

Syntax

ip arp inspection limit-rate *value*

no ip arp inspection limit-rate

Parameter

value —The *value* to specify the maximum amount of the received ARP packets per second, ranging from 10 to 100 in pps(packet/second). By default, the value is 15.

Command Mode

Interface Configuration Mode

Example

Configure the maximum amount of the received ARP packets per second as 50 pps for Gigabit Ethernet port 1/0/5:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)#ip arp inspection limit-rate 50
```

12.5 ip arp inspection recover

Description

The **ip arp inspection recover** command is used to restore a port to the ARP transmit status from the ARP filter status.

Syntax

ip arp inspection recover

Command Mode

Interface Configuration Mode

Example

Restore Gigabit Ethernet port 1/0/5 to the ARP transmit status:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)#ip arp inspection recover
```

12.6 show ip arp inspection

Description

The **show ip arp inspection** command is used to display the ARP detection global configuration including the enable/disable status and the Trusted Port list.

Syntax

```
show ip arp inspection
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the ARP detection configuration globally:

```
T1700G-28TQ(config)#show ip arp inspection
```

12.7 show ip arp inspection interface

Description

The **show ip arp inspection interface** command is used to display the interface configuration of ARP detection.

Syntax

```
show ip arp inspection interface [ gigabitEthernet port | ten-gigabitEthernet  
port ]
```

Parameter

port —The Ethernet port number.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of Gigabit Ethernet port 1/0/1:

```
T1700G-28TQ(config)#show ip arp inspection interface gigabitEthernet  
1/0/1
```

Display the configuration of all Ethernet ports:

```
T1700G-28TQ(config)#show ip arp inspection interface
```

12.8 show ip arp inspection statistics

Description

The **show ip arp inspection statistics** command is used to display the number of the illegal ARP packets received.

Syntax

```
show ip arp inspection statistics
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the number of the illegal ARP packets received:

```
T1700G-28TQ(config)#show ip arp inspection statistics
```

12.9 clear ip arp inspection statistics

Description

The **clear ip arp inspection statistics** command is used to clear the statistic of the illegal ARP packets received.

Syntax

```
clear ip arp inspection statistics
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Clear the statistic of the illegal ARP packets received:

```
T1700G-28TQ(config)#clear ip arp inspection statistics
```

Chapter 13 DoS Defend Commands

DoS (Denial of Service) Attack is to occupy the network bandwidth maliciously by the network attackers or the evil programs sending a lot of service requests to the Host. With the DoS Defend enabled, the switch can analyze the specific field of the received packets and provide the defend measures to ensure the normal working of the local network.

13.1 ip dos-prevent

Description

The **ip dos-prevent** command is used to enable the DoS defend function globally. To disable the DoS defend function, please use **no ip dos-prevent** command.

Syntax

ip dos-prevent
no ip dos-prevent

Command Mode

Global Configuration Mode

Example

Enable the DoS defend function globally:

```
T1700G-28TQ(config)#ip dos-prevent
```

13.2 ip dos-prevent type

Description

The **ip dos-prevent type** command is used to select the DoS Defend Type. To disable the corresponding Defend Type, please use **no ip dos-prevent type** command.

Syntax

ip dos-prevent type { land | scan-synfin | xma-scan | null-scan | port-less-1024 | blat | ping-flood | syn-flood | win-nuke }
no ip dos-prevent type { land | scan-synfin | xma-scan | null-scan | port-less-1024 | blat | ping-flood | syn-flood | win-nuke }

Parameter

land — Land attack.

scan-synfin — Scan SYNFIN attack.

xma-scan — Xma Scan attack.

null-scan — NULL Scan attack.

port-less-1024 — The SYN packets whose Source Port less than 1024.

blat — Blat attack.

ping-flood — Ping flooding attack. With the ping flood attack enabled, the switch will limit automatically the forwarding speed of ping packets to 512K when attacked by ping flood.

syn-flood — SYN/SYN-ACK flooding attack. With the syn-flood attack enabled, the switch will limit automatically the forwarding speed of ping packets to 512K when attacked by syn-flood.

win-nuke — winNuke attack.

Command Mode

Global Configuration Mode

Example

Enable the DoS Defend Type named Land attack:

```
T1700G-28TQ(config)#ip dos-prevent type land
```

13.3 show ip dos-prevent

Description

The **show ip dos-prevent** command is used to display the DoS information of the detected DoS attack, including enable/disable status, the DoS Defend Type, the count of the attack, etc.

Syntax

```
show ip dos-prevent
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the DoS information of the detected DoS attack globally:

```
T1700G-28TQ(config)#show ip dos-prevent
```

Chapter 14 System Log Commands

The log information will record the settings and operation of the switch respectively for you to monitor operation status and diagnose malfunction.

14.1 logging buffer

Description

The **logging buffer** command is used to store the system log messages to an internal buffer. To disable the log buffer function, please use the **no logging buffer** command. Local Log is the system log information saved in the switch. It has two output channels, that is, it can be saved to two different positions, log buffer and log flash memory. The log buffer indicates the RAM for saving system log and the information in the log buffer can be got by [show logging buffer](#) command. It will be lost when the switch is restarted.

Syntax

logging buffer
no logging buffer

Command Mode

Global Configuration Mode

Example

Enable the system log buffer:

```
T1700G-28TQ(config)#logging buffer
```

14.2 logging buffer level

Description

The **logging buffer level** command is used to configure the severity level and the status of the configuration input to the log buffer. To return to the default configuration, please use **no logging buffer level** command.

Syntax

logging buffer level /level/
no logging buffer level

Parameter

level — Severity level of the log information output to each channel. There are 8 severity levels marked with values 0-7. The smaller value has the higher priority. Only the log with the same or smaller severity level value will be output. By default, it is 6 indicating that the log information with level 0-6 will be saved in the log buffer.

Command Mode

Global Configuration Mode

Example

Set the severity level as 5:

```
T1700G-28TQ(config)#logging buffer level 5
```

14.3 logging file flash

Description

The **logging file flash** command is used to store the log messages in a file in the flash on the switch. To disable the log file flash function, please use **no logging file flash** command. This function is disabled by default. The log file flash indicates the flash sector for saving system log. The information in the log file of the flash will not be lost after the switch is restarted and can be got by the [show logging flash](#) command.

Syntax

logging file flash

no logging file flash

Command Mode

Global Configuration Mode

Example

Enable the log file flash function:

```
T1700G-28TQ(config)#logging file flash
```

14.4 logging file flash frequency

Description

The **logging file flash frequency** command is used to specify the frequency to synchronize the system log file in the log buffer to the flash. To resume the default synchronizing frequency, please use the **no logging file flash frequency** command.

Syntax

```
logging file flash frequency { periodic periodic | immediate }  
no logging file flash frequency
```

Parameter

periodic — The frequency to synchronize the system log file in the log buffer to the flash, ranging from 1 to 48 hours. By default, the synchronization process takes place every 24 hours.

immediate — The system log file in the buffer will be synchronized to the flash immediately. This option will reduce the life of the flash and is not recommended.

Command Mode

Global Configuration Mode

Example

Specify the log file synchronization frequency as 10 hours:

```
T1700G-28TQ(config)#logging file flash frequency periodic 10
```

14.5 logging file flash level

Description

The **logging file flash level** command is used to specify the system log message severity level. Messages with a severity level equal to or higher than this value will be stored to the flash. To restore to the default level, please use **no logging file flash level** command.

Syntax

```
logging file flash level level  
no logging file flash level
```

Parameter

level — Severity level of the log message. There are 8 severity levels marked with values 0-7. The smaller value has the higher priority. Only the log with the same or smaller severity level value will be saved to the flash. By default, it is 3 indicating that the log message marked with 0~3 will be saved in the log flash.

Command Mode

Global Configuration Mode

Example

Save the log messages with their severities equal or higher than 7 to the flash :

```
T1700G-28TQ(config)#logging file flash level 7
```

14.6 logging host index

Description

The **logging host index** command is used to configure the Log Host. To clear the configuration of the specified Log Host, please use **no logging host index** command. Log Host is to receive the system log from other devices. You can remotely monitor the settings and operation status of other devices through the log host.

Syntax

logging host index *idx* *host-ip* *level*

no logging host index *idx*

Parameter

idx — The index of the log host. The switch supports 4 log hosts at most.

host-ip — The IP for the log host.

level — The severity level of the log information sent to each log host. There are 8 severity levels marked with values 0-7. The smaller value has the higher priority. Only the log with the same or smaller severity level value will be sent to the corresponding log host. By default, it is 6 indicating that the log information marked with 0~6 will be sent to the log host.

Command Mode

Global Configuration Mode

Example

Enable log host 2 and set its IP address as 192.168.0.148, the level 5:

```
T1700G-28TQ(config)# logging host index 2 192.168.0.148 5
```

14.7 logging monitor

Description

The **logging monitor** command is used to display the system logs on the terminal devices. To disable logging to the terminal, please use **no logging monitor** command. This function is enabled by default.

Syntax

logging monitor

no logging monitor

Command Mode

Global Configuration Mode

Example

Disable logging to the terminal devices:

```
T1700G-28TQ(config)# no logging monitor
```

14.8 logging monitor level

Description

The **logging monitor level** command is used to limit messages logged to the terminal devices. System logs no higher than the set threshold level will be displayed on the terminal devices. To restore the threshold level to default value, please use **no logging monitor level** command.

Syntax

logging monitor level *level*

no logging monitor level

Parameter

level — Severity level of the log information output to the terminal devices. There are 8 severity levels marked with values 0-7. The smaller value has the higher priority. Only the log with the same or smaller severity level value will be

output to the terminal devices. By default, it is 5 indicating that all the log information between level 0-5 will be output to the terminal devices.

Command Mode

Global Configuration Mode

Example

Set the severity level as 7:

```
T1700G-28TQ(config)# logging monitor level 7
```

14.9 clear logging

Description

The **clear logging** command is used to clear the information in the log buffer and log file.

Syntax

```
clear logging [ buffer | flash ]
```

Parameter

buffer | flash —The output channels: buffer and flash. Clear the information of the two channels, by default.

Command Mode

Global Configuration Mode

Example

Clear the information in the log file:

```
T1700G-28TQ(config)# clear logging buffer
```

14.10 show logging local-config

Description

The **show logging local-config** command is used to display the configuration of the Local Log output to the terminal, the log buffer and the log file.

Syntax

```
show logging local-config
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the Local Log:

```
T1700G-28TQ(config)# show logging local-config
```

14.11 show logging loghost

Description

The **show logging loghost** command is used to display the configuration of the log host.

Syntax

```
show logging loghost [ index ]
```

Parameter

index —The index of the log host whose configuration will be displayed, ranging from 1 to 4. Display the configuration of all the log hosts by default.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the log host 2:

```
T1700G-28TQ(config)# show logging loghost 2
```

14.12 show logging buffer

Description

The **show logging buffer** command is used to display the log information in the log buffer according to the severity level.

Syntax

```
show logging buffer [ level /eve/ ]
```

Parameter

level — Severity level. There are 8 severity levels marked with values 0-7. The information of levels with priority not lower than the select level will display. Display all the log information in the log buffer by default.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the log information from level 0 to level 5 in the log buffer:

```
T1700G-28TQ(config)# show logging buffer level 5
```

14.13 show logging flash

Description

The **show logging flash** command is used to display the log information in the log file according to the severity level.

Syntax

```
show logging flash [ level level ]
```

Parameter

level — Severity level. There are 8 severity levels marked with values 0-7. The information of levels with priority not lower than the select level will display. Display all the log information in the log file by default.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the log information with the level marked 0~3 in the log file:

```
T1700G-28TQ(config)# show logging flash level 3
```

Chapter 15 SSH Commands

SSH (Security Shell) can provide the unsecured remote management with security and powerful authentication to ensure the security of the management information.

15.1 ip ssh server

Description

The **ip ssh server** command is used to enable SSH function. To disable the SSH function, please use **no ip ssh server** command.

Syntax

ip ssh server
no ip ssh server

Command Mode

Global Configuration Mode

Example

Enable the SSH function:

```
T1700G-28TQ(config)# ip ssh server
```

15.2 ip ssh version

Description

The **ip ssh version** command is used to enable the SSH protocol version. To disable the protocol version, please use **no ip ssh version** command.

Syntax

ip ssh version { v1 | v2 }
no ip ssh version { v1 | v2 }

Parameter

v1 | v2 — The SSH protocol version to be enabled. They represent SSH v1 and SSH v2 respectively.

Command Mode

Global Configuration Mode

Example

Enable SSH v2:

```
T1700G-28TQ(config)# ip ssh version v2
```

15.3 ip ssh algorithm

Description

The **ip ssh algorithm** command is used to configure the algorithm in SSH function. To disable the specified algorithm, please use **no ip ssh algorithm** command.

Syntax

```
ip ssh algorithm { AES128-CBC | AES192-CBC | AES256-CBC |  
Blowfish-CBC | Cast128-CBC | 3DES-CBC | HMAC-SHA1 | HMAC-MD5 }
```

```
no ip ssh algorithm
```

Parameter

AES128-CBC | AES192-CBC | AES256-CBC | Blowfish-CBC | Cast128-CBC |
3DES-CBC | HMAC-SHA1 | HMAC-MD5 — Specify the SSH algorithm.

Command Mode

Global Configuration Mode

Example

Specify the SSH algorithm as AES128-CBC:

```
T1700G-28TQ(config)# ip ssh algorithm AES128-CBC
```

15.4 ip ssh timeout

Description

The **ip ssh timeout** command is used to specify the idle-timeout time of SSH. To restore to the factory defaults, please use **no ip ssh timeout** command.

Syntax

```
ip ssh timeout value
```

```
no ip ssh timeout
```

Parameter

value — The Idle-timeout time. During this period, the system will automatically release the connection if there is no operation from the client. It ranges from 1 to 120 in seconds. By default, this value is 120 seconds.

Command Mode

Global Configuration Mode

Example

Specify the idle-timeout time of SSH as 30 seconds:

```
T1700G-28TQ(config)# ip ssh timeout 30
```

15.5 ip ssh max-client

Description

The **ip ssh max-client** command is used to specify the maximum number of the connections to the SSH server. To return to the default configuration, please use **no ip ssh max-client** command.

Syntax

```
ip ssh max-client num
```

```
no ip ssh max-client
```

Parameter

num — The maximum number of the connections to the SSH server. It ranges from 1 to 5. By default, this value is 5.

Command Mode

Global Configuration Mode

Example

Specify the maximum number of the connections to the SSH server as 3:

```
T1700G-28TQ(config)# ip ssh max-client 3
```

15.6 ip ssh download

Description

The **ip ssh download** command is used to download the SSH key file from TFTP server.

Syntax

```
ip ssh download { v1 | v2 } key-file ip-address ip-addr
```

Parameter

v1 | v2 — Select the type of SSH key to download, v1 represents SSH-1, v2 represents SSH-2.

key-file — The name of the key-file which is selected to download. The length of the name ranges from 1 to 25 characters. The key length of the downloaded file must be in the range of 512 to 3072 bits.

ip-addr — The IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

Command Mode

Global Configuration Mode

Example

Download an SSH-1 type key file named ssh-key from TFTP server with the IP address 192.168.0.148:

```
T1700G-28TQ(config)# ip ssh download v1 ssh-key ip-address
192.168.0.148
```

Download an SSH-1 type key file named ssh-key from TFTP server with the IP address fe80::1234:

```
T1700G-28TQ(config)# ip ssh download v1 ssh-key ip-address fe80::1234
```

15.7 remove public-key

Description

The **remove public-key** command is used to remove the SSH public key from the switch.

Syntax

```
remove public-key { v1 | v2 }
```

Parameter

v1 | v2 — Select the type of SSH public key, v1 represents SSH-1, v2 represents SSH-2.

Command Mode

Privileged EXEC Mode

Example

Remove the SSH-1 type public key from the switch:

```
T1700G-28TQ# remove public-key v1
```

15.8 show ip ssh

Description

The **show ip ssh** command is used to display the global configuration of SSH.

Syntax

```
show ip ssh
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the global configuration of SSH:

```
T1700G-28TQ(config)# show ip ssh
```

Chapter 16 IEEE 802.1X Commands

IEEE 802.1X function is to provide an access control for LAN ports via the authentication. Only the supplicant passing the authentication can access the LAN.

16.1 dot1x system-auth-control

Description

The **dot1x system-auth-control** command is used to enable the IEEE 802.1X function globally. To disable the IEEE 802.1X function, please use **no dot1x system-auth-control** command.

Syntax

```
dot1x system-auth-control
no dot1x system-auth-control
```

Command Mode

Global Configuration Mode

Example

Enable the IEEE 802.1X function:

```
T1700G-28TQ(config)#dot1x system-auth-control
```

16.2 dot1x handshake

Description

The **dot1x handshake** command is used to enable the handshake feature. The handshake feature is used to detect the connection status between the TP-LINK 802.1x supplicant and the switch. Please disable the handshake feature if you are using a non-TP-LINK 802.1x-compliant client software. This feature is enabled by default.

Syntax

```
dot1x handshake
no dot1x handshake
```

Command Mode

Global Configuration Mode

Example

Disable the 802.1X handshake function:

```
T1700G-28TQ(config)# no dot1x handshake
```

16.3 dot1x auth-method

Description

The **dot1x auth-method** command is used to configure the Authentication Method of IEEE 802.1X and the default 802.1x authentication method is “eap”. To restore to the default 802.1x authentication method, please use **no dot1x auth-method** command.

Syntax

```
dot1x auth-method { pap | eap }  
no dot1x auth-method
```

Parameter

pap | eap —Authentication Methods.

pap: EAP termination mode. IEEE 802.1X authentication system uses extensible authentication protocol (EAP) to exchange information between the switch and the client. The EAP packets are terminated at the switch and repackaged in the Password Authentication Protocol (PAP) packets, and then transferred to the RADIUS server.

eap: EAP relay mode. IEEE 802.1X authentication system uses extensible authentication protocol (EAP) to exchange information between the switch and the client. The EAP protocol packets with authentication data are encapsulated in the advanced protocol (such as RADIUS) packets and transmitted to the authentication server.

Command Mode

Global Configuration Mode

Example

Configure the Authentication Method of IEEE 802.1X as “pap”:

```
T1700G-28TQ(config)#dot1x auth-method pap
```

16.4 dot1x guest-vlan(global)

Description

The **dot1x guest-vlan** command is used to enable the Guest VLAN function globally. To disable the Guest VLAN function, please use **no dot1x guest-vlan** command.

Syntax

dot1x guest-vlan *vid*

no dot1x guest-vlan

Parameter

vid — The VLAN ID needed to enable the Guest VLAN function, ranging from 2 to 4094. The supplicants in the Guest VLAN can access the specified network sources.

Command Mode

Global Configuration Mode

Example

Enable the Guest VLAN function for VLAN 5:

```
T1700G-28TQ(config)#dot1x guest-vlan 5
```

16.5 dot1x quiet-period

Description

The **dot1x quiet-period** command is used to enable the quiet-period function. To disable the function, please use **no dot1x quiet-period** command.

Syntax

dot1x quiet-period [*time*]

no dot1x quiet-period

Parameter

time — The length of the quiet-period time. If one user's authentication fails, its subsequent IEEE 802.1x authentication requests will not be processed during the quiet-period time. It ranges from 1 to 999 seconds and the default value is 10 seconds.

Command Mode

Global Configuration Mode

Example

Enable the quiet-period function:

```
T1700G-28TQ(config)#dot1x quiet-period
```

Enable the quiet-period function and set the quiet-period as 5 seconds:

```
T1700G-28TQ(config)#dot1x quiet-period 5
```

16.6 dot1x timeout

Description

The **dot1x timeout** command is used to configure the server timeout and the supplicant timeout. To restore to the default, please use **no dot1x timeout** command.

Syntax

```
dot1x timeout { server-timeout time | supplicant-timeout time }
```

```
no dot1x timeout { server-timeout | supplicant-timeout }
```

Parameter

server-timeout *time* —The maximum time for the switch to wait for the response before resending a request to the server, ranging from 1 to 9 in second. By default, it is 3 seconds.

supplicant-timeout *time* —The maximum time for the switch to wait for the response from supplicant before resending a request to the supplicant, ranging from 1 to 9 in second. By default, it is 3 seconds.

Command Mode

Global Configuration Mode

Example

Configure the server's timeout value as 5 seconds:

```
T1700G-28TQ(config)#dot1x timeout server-timeout 5
```

16.7 dot1x max-reauth-req

Description

The **dot1x max-reauth-req** command is used to configure the maximum transfer times of the repeated authentication request when the server cannot be connected. To restore to the default value, please use **no dot1x max-reauth-req** command.

Syntax

```
dot1x max-reauth-req times  
no dot1x max-reauth-req
```

Parameter

times — The maximum transfer times of the repeated authentication request, ranging from 1 to 9 in times. By default, the value is 3.

Command Mode

Global Configuration Mode

Example

Configure the maximum transfer times of the repeated authentication request as 5:

```
T1700G-28TQ(config)#dot1x max-reauth-req 5
```

16.8 dot1x

Description

The **dot1x** command is used to enable the IEEE 802.1X function for a specified port. To disable the IEEE 802.1X function for a specified port, please use **no dot1x** command.

Syntax

```
dot1x  
no dot1x
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the IEEE 802.1X function for the Gigabit Ethernet port 1/0/1:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/1
T1700G-28TQ(config-if)#dot1x
```

16.9 dot1x guest-vlan(interface)

Description

The **dot1x guest-vlan** command is used to enable the guest VLAN function for a specified port. To disable the Guest VLAN function for a specified port, please use **no dot1x guest-vlan** command. Please ensure that the Control Type of the corresponding port is port-based before enabling the guest VLAN function for it.

Syntax

```
dot1x guest-vlan
no dot1x guest-vlan
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Guest VLAN function for Gigabit Ethernet port 1/0/2:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)#dot1x guest-vlan
```

16.10 dot1x port-control

Description

The **dot1x port-control** command is used to configure the Control Mode of IEEE 802.1X for the specified port. By default, the control mode is “auto”. To restore to the default configuration, please use **no dot1x port-control** command.

Syntax

```
dot1x port-control {auto | authorized-force | unauthorized-force}
```

no dot1x port-control

Parameter

auto | authorized-force | unauthorized-force — The Control Mode for the port.

auto: In this mode, the port will normally work only after passing the 802.1X Authentication.

authorized-force: In this mode, the port can work normally without passing the 802.1X Authentication.

unauthorized-force: In this mode, the port is forbidden working for its fixed unauthorized status.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the Control Mode for Gigabit Ethernet port 1/0/20 as “authorized-force”:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/20
T1700G-28TQ(config-if)#dot1x port-control authorized-force
```

16.11 dot1x port-method

Description

The **dot1x port-method** command is used to configure the control type of IEEE 802.1X for the specified port. By default, the control type is “mac-based”. To restore to the default configuration, please use **no dot1x port-method** command.

Syntax

```
dot1x port-method { mac-based | port-based }
```

```
no dot1x port-method
```

Parameter

mac-based | port-based — The control type for the port.

mac-based: Any client connected to the port should pass the 802.1X authentication for access.

port-based: All the clients connected to the port can access the network on the condition that any one of the clients has passed the 802.1X Authentication.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the Control Type for Gigabit Ethernet port 1/0/20 as “port-based”:

```
T1700G-28TQ(config)#interface gigabitEthernet 1/0/20
T1700G-28TQ(config-if)#dot1x port-method port-based
```

16.12 radius

Description

The **radius** command is used to configure the parameters of radius.

Syntax

```
radius { [auth-pri ip] [auth-sec ip] [auth-port port] [acct-pri ip] [acct-sec ip]
[acct-port port] [auth-key { [ 0 ] password | 7 encrypted-password } ] [acct-key
{ [ 0 ] password | 7 encrypted-password } ] }
```

```
no radius { auth-port | auth-key | auth-pri | auth-sec | acct-port | acct-key |
acct-pri | acct-sec }
```

Parameter

auth-pri ip — The IP address of the authentication server.

auth-sec ip — The IP address of the alternative authentication server.

auth-port port — The UDP port of authentication server(s) ranging from 1 to 65535. The default value is 1812.

acct-pri ip — The IP address of the accounting server.

acct-sec ip — The IP address of the alternative accounting server.

acct-port port — The UDP port of accounting server(s) ranging from 1 to 65535. The default value is 1813.

auth-key { [0] password | 7 encrypted-password } — 0 and 7 are the encryption type. 0 indicates that an unencrypted password will follow. 7 indicates that a symmetric encrypted password with a fixed length will follow. By default, the encryption type is 0. “password” is the shared password for the

switch and the authentication servers to exchange messages which contains 31 characters at most. The question marks and spaces are not allowed. “*encrypted-password*” is a symmetric encrypted password with a fixed length, which you can copy from another switch’s configuration file. The password or encrypted-password you configured here will be displayed in the encrypted form.

acct-key { [0] *password* | 7 *encrypted-password* } — 0 and 7 are the encryption type. 0 indicates that an unencrypted password will follow. 7 indicates that a symmetric encrypted password with a fixed length will follow. By default, the encryption type is 0. “*password*” is the shared password for the switch and the authentication servers to exchange messages which contains 31 characters at most. The question marks and spaces are not allowed. “*encrypted-password*” is a symmetric encrypted password with a fixed length, which you can copy from another switch’s configuration file. The password or encrypted-password you configured here will be displayed in the encrypted form.

Command Mode

Global Configuration Mode

Example

Configure the IP address of the accounting server as 10.20.1.100 and password as tlink:

```
T1700G-28TQ(config)#radius auth-pri 10.20.1.100 auth-key tlink
```

16.13 radius server-account

Description

The **radius server-account** command is used to enable the accounting feature. To disable the accounting feature, please use **no radius server-account** command.

Syntax

radius server-account

no radius server-account

Command Mode

Global Configuration Mode

Example

Enable the accounting feature:

```
T1700G-28TQ(config)#radius server-account
```

16.14 show dot1x global

Description

The **show dot1x global** command is used to display the global configuration of 802.1X.

Syntax

```
show dot1x global
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of 802.1X globally:

```
T1700G-28TQ(config)#show dot1x global
```

16.15 show dot1x interface

Description

The **show dot1x interface** command is used to display all ports or the specified port's configuration information of 802.1X.

Syntax

```
show dot1x interface [ gigabitEthernet port | ten-gigabitEthernet port ]
```

Parameter

port — The Ethernet port number. If not specified, the information of all the ports will be displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of 802.1X for Gigabit Ethernet port 1/0/20:

```
T1700G-28TQ(config)#show dot1x interface gigabitEthernet 1/0/20
```

Display the configuration information of 802.1X for all Ethernet ports:

```
T1700G-28TQ(config)#show dot1x interface
```

16.16 show radius accounting

Description

The **show radius accounting** command is used to display the configuration of the accounting server.

Syntax

```
show radius accounting
```

Command Mode

Privileged EXEC Mode and Any Configuration Modes

Example

Display the configuration of the accounting server:

```
T1700G-28TQ(config)#show radius accounting
```

16.17 show radius authentication

Description

The **show radius authentication** command is used to display the configuration of the RADIUS authentication server.

Syntax

```
show radius authentication
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the RADIUS authentication server:

```
T1700G-28TQ(config)#show radius authentication
```

Chapter 17 MAC Address Commands

MAC Address configuration can improve the network security by configuring the Port Security and maintaining the address information by managing the Address Table.

17.1 mac address-table static

Description

The **mac address-table static** command is used to add the static MAC address entry. To remove the corresponding entry, please use **no mac address-table static** command. The static address can be added or removed manually, independent of the aging time. In the stable networks, the static MAC address entries can facilitate the switch to reduce broadcast packets and enhance the efficiency of packets forwarding remarkably.

Syntax

```
mac address-table static mac-addr vid vid interface { gigabitEthernet port | ten-gigabitEthernet port }
```

```
no mac address-table static { mac-addr | vid vid | mac-addr vid vid | interface { gigabitEthernet port | ten-gigabitEthernet port } }
```

Parameter

mac-addr — The MAC address of the entry you desire to add.

vid — The VLAN ID number of your desired entry. It ranges from 1 to 4094.

port — The Ethernet port number of your desired entry.

Command Mode

Global Configuration Mode

Example

Add a static MAC address entry to bind the MAC address 00:02:58:4f:6c:23, VLAN1 and port 1 together:

```
T1700G-28TQ(config)# mac address-table static 00:02:58:4f:6c:23 vid 1  
interface gigabitEthernet 1/0/1
```

17.2 mac address-table aging-time

Description

The **mac address-table aging-time** command is used to configure aging time for the dynamic address. To return to the default configuration, please use **no mac address-table aging-time** command.

Syntax

mac address-table aging-time *aging-time*

no mac address-table aging-time

Parameter

aging-time — The aging time for the dynamic address. The value of it can be 0 or ranges from 10 to 630 seconds. When 0 is entered, the Auto Aging function is disabled. It is 300 by default.

Command Mode

Global Configuration Mode

Example

Configure the aging time as 500 seconds:

```
T1700G-28TQ(config)# mac address-table aging-time 500
```

17.3 mac address-table filtering

Description

The **mac address-table filtering** command is used to add the filtering address entry. To delete the corresponding entry, please use **no mac address-table filtering** command. The filtering address function is to forbid the undesired package to be forwarded. The filtering address can be added or removed manually, independent of the aging time.

Syntax

mac address-table filtering *mac-addr vid vid*

no mac address-table filtering {[*mac-addr*] [*vid vid*]}

Parameter

mac-addr — The MAC address to be filtered.

vid — The corresponding VLAN ID of the MAC address. It ranges from 1 to 4094.

Command Mode

Global Configuration Mode

Example

Add a filtering address entry of which VLAN ID is 1 and MAC address is 00:1e:4b:04:01:5d:

```
T1700G-28TQ(config)# mac address-table filtering 00:1e:4b:04:01:5d vid 1
```

17.4 mac address-table max-mac-count

Description

The **mac address-table max-mac-count** command is used to configure the Port Security. To return to the default configurations, please use **no mac address-table max-mac-count** command. Port Security is to protect the switch from the malicious MAC address attack by limiting the maximum number of the MAC addresses that can be learned on the port. The port with Port Security feature enabled will learn the MAC address dynamically. When the learned MAC address number reaches the maximum, the port will stop learning. Therefore, the other devices with the MAC address unlearned can not access to the network via this port.

Syntax

```
mac address-table max-mac-count {[ max-number num ] [ mode { dynamic | static | permanent } ] [ status { disable | enable } ]}
```

```
no mac address-table max-mac-count [ max-number | mode | status ]
```

Parameter

num — The maximum number of MAC addresses that can be learned on the port. It ranges from 0 to 64. By default this value is 64.

dynamic | *static* | *permanent* — Learn mode for MAC addresses. There are three modes, including Dynamic mode, Static mode and Permanent mode. When Dynamic mode is selected, the learned MAC address will be deleted automatically after the aging time. When Static mode is selected, the learned MAC address will be out of the influence of the aging time and can only be deleted manually. The learned entries will be cleared after the switch is rebooted. When permanent mode is selected, the learned MAC address will be out of the

influence of the aging time and can only be deleted manually too. However, the learned entries will be saved even the switch is rebooted.

status — Enable or disable the Port Security function for a specified port. By default, this function is disabled.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable Port Security function for port 1, select Static mode as the learn mode, and specify the maximum number of MAC addresses that can be learned on this port as 30:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/1
T1700G-28TQ(config-if)# mac address-table max-mac-count max-number
30 mode static status enable
```

17.5 show mac address-table

Description

The **show mac address-table** command is used to display the information of all address entries.

Syntax

```
show mac address-table [ dynamic | static | filtering ]
```

Parameter

dynamic | static | filtering — The type of your desired entry. By default all the entries are displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of all address entries:

```
T1700G-28TQ(config)# show mac address-table
```

17.6 show mac address-table aging-time

Description

The **show mac address-table aging-time** command is used to display the Aging Time of the MAC address.

Syntax

```
show mac address-table aging-time
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Aging Time of the MAC address:

```
T1700G-28TQ(config)# show mac address-table aging-time
```

17.7 show mac address-table max-mac-count

Description

The **show mac address-table max-mac-count** command is used to display the security configuration of all ports or the specified port.

Syntax

```
show mac address-table max-mac-count { all | interface { gigabitEthernet  
port | ten-gigabitEthernet port } }
```

Parameter

all — Displays the security information of all the Ethernet ports.

port — The Ethernet port number.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the security configuration of all ports:

```
T1700G-28TQ(config)# show mac address-table max-mac-count
```

Display the security configuration of port 1/0/1:

```
T1700G-28TQ(config)# show mac address-table max-mac-count interface  
gigabitEthernet 1/0/1
```

17.8 show mac address-table interface

Description

The **show mac address-table interface** command is used to display the address configuration of the specified port/LAG.

Syntax

```
show mac address-table interface { gigabitEthernet port |  
ten-gigabitEthernet port | port-channel lagid }
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the address configuration of port 1/0/1:

```
T1700G-28TQ(config)# show mac address-table interface gigabitEthernet  
1/0/1
```

17.9 show mac address-table count

Description

The **show mac address-table count** command is used to display the total amount of MAC address table.

Syntax

```
show mac address-table count [ vlan vlan-id ]
```

Parameter

vlan-id — Specify the VLAN which the MAC entries belong to.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the total MAC entry information in different VLANs:

```
T1700G-28TQ(config)# show mac address-table count
```

17.10 show mac address-table address

Description

The **show mac address-table address** command is used to display the information of the specified MAC address.

Syntax

```
show mac address-table address mac-addr [ interface { gigabitEthernet port | ten-gigabitEthernet port | port-channel lagid } | vid vlan-id ]
```

Parameter

mac-addr —— The specified MAC address.

port —— The Ethernet port number.

lagid —— The ID of the LAG.

vlan-id —— Specify the VLAN which the entry belongs to.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of the MAC address 00:00:00:00:23:00 in VLAN 1:

```
T1700G-28TQ(config)#show mac address-table address 00:00:00:00:23:00  
vid 1
```

17.11 show mac address-table vlan

Description

The **show mac address-table vlan** command is used to display the MAC address configuration of the specified vlan.

Syntax

```
show mac address-table vlan vid
```

Parameter

vid —— The specified VLAN id.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the MAC address configuration of vlan 1:

```
T1700G-28TQ(config)# show mac address-table vlan 1
```

Chapter 18 System Configuration Commands

System Commands can be used to configure the System information and System IP, reboot and reset the switch, upgrade the switch system and other operations.

18.1 system-time manual

Description

The **system-time manual** command is used to configure the system time manually.

Syntax

system-time manual *time*

Parameter

time — Set the date and time manually, MM/DD/YYYY-HH:MM:SS

Command Mode

Global Configuration Mode

Example

Configure the system mode as manual, and the time is 12/20/2010 17:30:35

```
T1700G-28TQ(config)# system-time manual 12/20/2010-17:30:35
```

18.2 system-time ntp

Description

The **system-time ntp** command is used to configure the time zone and the IP address for the NTP Server. The switch will get UTC automatically if it has connected to an NTP Server.

Syntax

system-time ntp { *timezone* } { *ntp-server* } { *backup-ntp-server* }
{ *fetching-rate* }

Parameter

timezone — Your local time-zone, and it ranges from UTC-12:00 to UTC+13:00.

The detailed information that each time-zone means are displayed as follow:

UTC-12:00 — TimeZone for International Date Line West.

UTC-11:00 — TimeZone for Coordinated Universal Time-11.

UTC-10:00 — TimeZone for Hawaii.

UTC-09:00 — TimeZone for Alaska.

UTC-08:00 — TimeZone for Pacific Time(US Canada).
 UTC-07:00 — TimeZone for Mountain Time(US Canada).
 UTC-06:00 — TimeZone for Central Time(US Canada).
 UTC-05:00 — TimeZone for Eastern Time(US Canada).
 UTC-04:30 — TimeZone for Caracas.
 UTC-04:00 — TimeZone for Atlantic Time(Canada).
 UTC-03:30 — TimeZone for Newfoundland.
 UTC-03:00 — TimeZone for Buenos Aires, Salvador, Brasilia.
 UTC-02:00 — TimeZone for Mid-Atlantic.
 UTC-01:00 — TimeZone for Azores, Cape Verde Is.
 UTC — TimeZone for Dublin, Edinburgh, Lisbon, London.
 UTC+01:00 — TimeZone for Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna.
 UTC+02:00 — TimeZone for Cairo, Athens, Bucharest, Amman, Beirut, Jerusalem.
 UTC+03:00 — TimeZone for Kuwait, Riyadh, Baghdad.
 UTC+03:30 — TimeZone for Tehran.
 UTC+04:00 — TimeZone for Moscow, St.Petersburg, Volgograd, Tbilisi, Port Louis.
 UTC+04:30 — TimeZone for Kabul.
 UTC+05:00 — TimeZone for Islamabad, Karachi, Tashkent.
 UTC+05:30 — TimeZone for Chennai, Kolkata, Mumbai, New Delhi.
 UTC+05:45 — TimeZone for Kathmandu.
 UTC+06:00 — TimeZone for Dhaka,Astana, Ekaterinburg.
 UTC+06:30 — TimeZone for Yangon (Rangoon).
 UTC+07:00 — TimeZone for Novosibirsk, Bangkok, Hanoi, Jakarta.
 UTC+08:00 — TimeZone for Beijing, Chongqing, Hong Kong, Urumqi, Singapore.
 UTC+09:00 — TimeZone for Seoul, Irkutsk, Osaka, Sapporo, Tokyo.
 UTC+09:30 — TimeZone for Darwin, Adelaide.
 UTC+10:00 — TimeZone for Canberra, Melbourne, Sydney, Brisbane.
 UTC+11:00 — TimeZone for Solomon Is., New Caledonia, Vladivostok.
 UTC+12:00 — TimeZone for Fiji, Magadan, Auckland, Wellington.
 UTC+13:00 — TimeZone for Nuku'alofa, Samoa.
ntp-server — The IP address for the Primary NTP Server.
backup-ntp-server — The IP address for the Secondary NTP Server.
fetching-rate — Specify the rate fetching time from NTP server.

Command Mode

Global Configuration Mode

Example

Configure the system time mode as NTP, the time zone is UTC-12:00, the primary NTP server is 133.100.9.2 and the secondary NTP server is 139.78.100.163, the fetching-rate is 11 hours:

```
T1700G-28TQ(config)# system-time ntp UTC-12:00 133.100.9.2 139.79.100.163 11
```

18.3 system-time dst predefined

Description

The **system-time dst predefined** command is used to select a daylight saving time configuration from the predefined mode. The configuration can be used recurrently. To disable DST function, please use **no system-time dst** command.

Syntax

```
system-time dst predefined {USA | Australia | Europe | New-Zealand}
```

```
no system-time dst
```

Parameter

USA | Australia | Europe | New-Zealand — The mode of daylight saving time. There are 4 options which are USA, Australia, Europe and New-Zealand respectively. The default value is Europe.

Following are the time ranges of each option:

USA: Second Sunday in March, 02:00 ~ First Sunday in November, 02:00.

Australia: First Sunday in October, 02:00 ~ First Sunday in April, 03:00.

Europe: Last Sunday in March, 01:00 ~ Last Sunday in October, 01:00.

New Zealand: Last Sunday in September, 02:00 ~ First Sunday in April, 03:00.

Command Mode

Global Configuration Mode

Example

Configure the daylight saving time as USA standard:

```
T1700G-28TQ(config)#system-time dst predefined USA
```

18.4 system-time dst date

Description

The **system-time dst date** command is used to configure the one-off daylight saving time. The start date is in the current year by default. The time range of the daylight saving time must shorter than one year, but you can configure it spanning years. To disable DST function, please use **no system-time dst** command.

Syntax

```
system-time dst date {smonth} {sday} {stime} {syear} {emonth} {eday} {etime}  
{eyear}[offset]  
no system-time dst
```

Parameter

smonth — The start month of the daylight saving time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec.

sday — The start day of the daylight saving time, ranging from 1 to 31. Here you should show special attention to February and the differences between a solar month and a lunar month.

stime — The start moment of the daylight saving time, HH:MM.

syear — The start year of the daylight saving time.

emonth — The end month of the daylight saving time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec.

eday — The end day of the daylight saving time, ranging from q to 31. Here you should show special attention to February and the differences between a solar month and a lunar month.

etime — The end moment of the daylight saving time, HH:MM.

eyear — The end year of the daylight saving time.

offset — The number of minutes to add during the daylight saving time. It is 60 minutes by default.

Command Mode

Global Configuration Mode

Example

Configure the daylight saving time from zero clock, Apr 1st to zero clock Oct 1st and the offset is 30 minutes in 2015:

```
T1700G-28TQ(config)# system-time dst date Apr 1 00:00 2015 Oct 1 00:00
2015 30
```

18.5 system-time dst recurring

Description

The **system-time dst recurring** command is used to configure the recurring daylight saving time. It can be configured spanning years. To disable DST function, please use **no system-time dst** command.

Syntax

```
system-time dst recurring {sweek} {sday} {smonth} {stime} {eweek} {eday}
{emonth} {etime} [offset]
```

```
no system-time dst
```

Parameter

sweek—The start week of the daylight saving time. There are 5 values showing as follows: first, second, third, fourth, last.

sday — The start day of the daylight saving time. There are 7 values showing as follows: Sun, Mon, Tue, Wed, Thu, Fri, Sat.

smonth — The start month of the daylight saving time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec.

stime — The start moment of the daylight saving time, HH:MM.

*ewee*k —The end week of the daylight saving time. There are 5 values showing as follows: first, second, third, fourth, last.

eday — The end day of the daylight saving time. There are 5 values showing as follows: Sun, Mon, Tue, Wed, Thu, Fri, Sat.

emonth — The end month of the daylight saving time. There are 12 values showing as following: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec.

etime — The end moment of the daylight saving time, HH:MM.

offset — The number of minutes to add during the daylight saving time. It is 60 minutes by default.

Command Mode

Global Configuration Mode

Example

Configure the daylight saving time from 2:00am, the first Sunday of May to 2:00am, the last Sunday of Oct and the offset is 45 minutes:

```
T1700G-28TQ(config)# system-time dst recurring first Sun May 02:00 last  
Sun Oct 02:00 45
```

18.6 hostname

Description

The **hostname** command is used to configure the system name. To clear the system name information, please use **no hostname** command.

Syntax

```
hostname [ hostname ]
```

```
no hostname
```

Parameter

hostname — System Name. The length of the name ranges from 1 to 32 characters. By default, it is the device name, for example “T1700G-28TQ”.

Command Mode

Global Configuration Mode

Example

Configure the system name as TPLINK:

```
T1700G-28TQ(config)# hostname TPLINK
```

18.7 location

Description

The **location** command is used to configure the system location. To clear the system location information, please use **no location** command.

Syntax

```
location [ location ]
```

```
no location
```

Parameter

location — Device Location. It consists of 32 characters at most. It is “SHENZHEN” by default.

Command Mode

Global Configuration Mode

Example

Configure the system location as SHENZHEN:

```
T1700G-28TQ(config)# location SHENSHEN
```

18.8 contact-info

Description

The **contact-info** command is used to configure the system contact information. To clear the system contact information, please use **no contact-info** command.

Syntax

```
contact-info [ contact_info ]
```

```
no contact-info
```

Parameter

contact_info — Contact Information. It consists of 32 characters at most. It is “www.tp-link.com” by default.

Command Mode

Global Configuration Mode

Example

Configure the system contact information as www.tp-link.com:

```
T1700G-28TQ(config)# contact-info www.tp-link.com
```

18.9 ip address

Description

This **ip address** command is used to configure the IP address and IP subnet mask for the specified interface manually. The interface type includes: routed port, port-channel interface, loopback interface and VLAN interface.

Syntax

```
ip address { ip-addr } { mask } [ secondary ]
```

```
no ip address [ ip-addr ] [ mask ]
```

Parameter

ip-addr — The IP address of the Layer 3 interface.

mask — The subnet mask of the Layer 3 interface.

secondary — Specify the interface's secondary IP address. If this parameter is omitted here, the configured IP address is the interface's primary address.

Command Mode

Interface Configuration Mode

Example

Create the VLAN interface 2 with the primary IP address as 192.168.1.1/24 and secondary IP address as 192.168.2.1/24:

```
T1700G-28TQ(config)# interface vlan 2
T1700G-28TQ(config-if)# ip address 192.168.1.1 255.255.255.0
T1700G-28TQ(config-if)# ip address 192.168.2.1 255.255.255.0 secondary
```

18.10 ip address-alloc

Description

The **IP address-alloc** command is used to enable the DHCP Client function or the BOOTP Protocol. When this function is enabled, the specified interface will obtain IP from DHCP Server or BOOTP server. To disable the IP obtaining function on the specified interface, please use the **no ip address** command. This command applies to the routed port, the LAG and the VLAN interface.

Syntax

```
ip address-alloc { dhcp | bootp }
```

```
no ip address
```

Parameter

dhcp — Specify the Layer 3 interface to obtain IP address from the DHCP Server.

bootp — Specify the Layer 3 interface to obtain IP address from the BOOTP Server.

Command Mode

Interface Configuration Mode

Example

Enable the DHCP Client function on the Layer 3 routed port 1/0/1:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/1
```

```
T1700G-28TQ(config-if)# no switchport
```

```
T1700G-28TQ(config-if)# ip address-alloc dhcp
```

Disable the IP address obtaining function on the VLAN interface 2:

```
T1700G-28TQ(config)# interface vlan 2
```

```
T1700G-28TQ(config-if)# no ip address
```

18.11 reset

Description

The **reset** command is used to reset the switch's software. After resetting, all configuration of the switch will restore to the factory defaults and your current settings will be lost.

Syntax

```
reset
```

Command Mode

Privileged EXEC Mode

Example

Reset the software of the switch:

```
T1700G-28TQ# reset
```

18.12 reboot

Description

The **reboot** command is used to reboot the Switch. To avoid damage, please don't turn off the device while rebooting.

Syntax

```
reboot [ unitid ]
```

Parameter

unitid — Specify the unit in the stack to reboot. If not specified, reboot all members in the stack.

Command Mode

Privileged EXEC Mode

Example

Reboot the switch stack:

```
T1700G-28TQ# reboot
```

18.13 copy running-config startup-config

Description

The **copy running-config startup-config** command is used to save the current settings.

Syntax

```
copy running-config startup-config
```

Command Mode

Privileged EXEC Mode

Example

Save current settings:

```
T1700G-28TQ# copy running-config startup-config
```

18.14 copy startup-config tftp

Description

The **copy startup-config tftp** command is used to backup the configuration file to TFTP server.

Syntax

```
copy startup-config tftp ip-address ip-addr filename name
```

Parameter

ip-addr — IP Address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

name — Specify the name for the configuration file which would be backup.

Command Mode

Privileged EXEC Mode

Example

Backup the configuration files to TFTP server with the IP 192.168.0.148 and name this file config.cfg:

```
T1700G-28TQ# copy startup-config tftp ip-address 192.168.0.148 filename
config
```

Backup the configuration files to TFTP server with the IP fe80::1234 and name this file config.cfg:

```
T1700G-28TQ# copy startup-config tftp ip-address fe80::1234 filename
config
```

18.15 copy tftp startup-config

Description

The **copy tftp startup-config** command is used to download the configuration file to the switch from TFTP server.

Syntax

```
copy tftp startup-config ip-address ip-addr filename name
```

Parameter

ip-addr — IP Address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

name — Specify the name for the configuration file which would be downloaded.

Command Mode

Privileged EXEC Mode

Example

Download the configuration file named as config.cfg to the switch from TFTP server with the IP 192.168.0.148:

```
T1700G-28TQ# copy tftp startup-config ip-address 192.168.0.148 filename
config
```

Download the configuration file named as config.cfg to the switch from TFTP server with the IP fe80::1234

```
T1700G-28TQ# copy tftp startup-config ip-address fe80::1234 filename
config
```

18.16 boot application

Description

The **boot application** command is used to configure the image file as startup image or backup image.

Syntax

```
boot application filename { image1 | image 2 } { startup | backup } [ unitid ]  
no boot application
```

Parameter

image1 | *image2* — Specify the image file to be configured. By default, the *image1.bin* is the startup image and the *image2.bin* is the backup image.

startup | *backup* — Specify the property of the image, either startup image or backup image.

unitid — Specify the unit in the stack whose image file would be configured. If not specified, image files of all the members in the stack will be configured.

Command Mode

Global Configuration Mode

Example

Configure the *image2.bin* as the startup image in all switches in the stack:

```
T1700G-28TQ(config)# boot application filename image2 startup
```

18.17 remove backup-image

Description

The **remove backup-image** command is used to delete the backup-image.

Syntax

```
remove backup-image [ unitid ]
```

Parameter

unitid — Specify the member's unit in the stack from which the backup image file would be deleted . If not specified, the backup image files of all the switches in the stack will be deleted.

Command Mode

Privileged EXEC Mode

Example

Delete the backup image files of all the members in the stack:

```
T1700G-28TQ# remove backup-image
```

18.18 firmware upgrade

Description

The **firmware upgrade** command is used to upgrade the switch's backup image file via the TFTP server. The uploaded firmware file will take place of the Backup Image, and user can chose whether to reboot the switch will the Backup Image.

Syntax

```
firmware upgrade ip-address ip-addr filename name
```

Parameter

ip-addr — IP Address of the TFTP server. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.1 or fe80::1234.

name — Specify the name for the firmware file.

Command Mode

Privileged EXEC Mode

Example

Upgrade the switch's backup image file with the file firmware.bin in the TFTP server with the IP address 192.168.0.148, and reboot the switch with this firmware:

```
T1700G-28TQ# firmware upgrade ip-address 192.168.0.148 filename
firmware.bin

It will only upgrade the backup image. Continue? (Y/N):y

Operation OK!

Reboot with the backup image? (Y/N): y
```

Upgrade the switch's backup image file with the file firmware.bin in the TFTP server with the IP address fe80::1234, but do not reboot the switch:

```
T1700G-28TQ# firmware upgrade ip-address fe80::1234 filename
firmware.bin

It will only upgrade the backup image. Continue? (Y/N):y

Operation OK!

Reboot with the backup image? (Y/N): n
```

18.19 ping

Description

The **ping** command is used to test the connectivity between the switch and one node of the network.

Syntax

```
ping [ ip | ipv6 ] { ip_addr } [ -n count ] [ -l count ] [ -i count ]
```

Parameter

ip — The type of the IP address for ping test should be IPv4.

ipv6 — The type of the IP address for ping test should be IPv6.

ip_addr — The IP address of the destination node for ping test. If the parameter ip/ipv6 is not selected, both IPv4 and IPv6 addresses are supported, for example 192.168.0.100 or fe80::1234.

-n count — The amount of times to send test data during Ping testing. It ranges from 1 to 10. By default, this value is 4.

-l count — The size of the sending data during ping testing. It ranges from 1 to 1024 bytes. By default, this value is 64.

-i count — The interval to send ICMP request packets. It ranges from 100 to 1000 milliseconds. By default, this value is 1000.

Command Mode

User EXEC Mode and Privileged EXEC Mode

Example

To test the connectivity between the switch and the network device with the IP 192.168.0.131, please specify the *count* (-l) as 512 bytes and *count* (-i) as 1000 milliseconds. If there is not any response after 8 times' Ping test, the connection between the switch and the network device is failed to establish:

```
T1700G-28TQ# ping 192.168.0.131 -n 8 -l 512
```

To test the connectivity between the switch and the network device with the IP fe80::1234, please specify the *count* (-l) as 512 bytes and *count* (-i) as 1000 milliseconds. If there is not any response after 8 times' Ping test, the connection between the switch and the network device is failed to establish:

```
T1700G-28TQ# ping fe80::1234 -n 8 -l 512
```

18.20 tracert

Description

The **tracert** command is used to test the connectivity of the gateways during its journey from the source to destination of the test data.

Syntax

```
tracert [ ip | ipv6 ] ip_addr [ maxHops ]
```

Parameter

ip — The type of the IP address for tracert test should be IPv4.

ipv6 — The type of the IP address for tracert test should be IPv6.

ip_addr — The IP address of the destination device. If the parameter ip/ipv6 is not selected, both IPv4 and IPv6 addresses are supported, for example 192.168.0.100 or fe80::1234.

maxHops — The maximum number of the route hops the test data can pass though. It ranges from 1 to 30. By default, this value is 4.

Command Mode

User EXEC Mode and Privileged EXEC Mode

Example

Test the connectivity between the switch and the network device with the IP 192.168.0.131. If the destination device has not been found after 20 *maxHops*, the connection between the switch and the destination device is failed to establish:

```
T1700G-28TQ# tracert 192.168.0.131 20
```

Test the connectivity between the switch and the network device with the IP fe80::1234. If the destination device has not been found after 20 *maxHops*, the connection between the switch and the destination device is failed to establish:

```
T1700G-28TQ# tracert fe80::1234 20
```

18.21 show system-info

Description

The **show system-info** command is used to display System Description, Device Name, Device Location, System Contact, Hardware Version, Firmware Version, System Time, Run Time and so on.

Syntax

```
show system-info
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the system information:

```
T1700G-28TQ# show system-info
```

18.22 show image-info

Description

The **show image-info** command is used to display the information of image files in the system.

Syntax

```
show image-info
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the system image files' information:

```
T1700G-28TQ# show image-info
```

18.23 show boot

Description

The **show boot** command is used to display the boot configuration of the system.

Syntax

show boot

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the system boot configuration information:

```
T1700G-28TQ# show boot
```

18.24 show running-config

Description

The **show running-config** command is used to display the current operating configuration of the system or of a specified port.

Syntax

show running-config

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the system current operating configuration:

```
T1700G-28TQ# show running-config
```

18.25 show startup-config

Description

The **show startup-config** command is used to display the current configuration saved in the switch. These configuration settings will not be lost the next time you reboot the switch.

Syntax

show startup-config

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the saved configuration:

```
T1700G-28TQ# show startup-config
```

18.26 show system-time

Description

The **show system-time** command is used to display the time information of the switch.

Syntax

```
show system-time
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the time information of the switch

```
T1700G-28TQ# show system-time
```

18.27 show system-time dst

Description

The **show system-time dst** command is used to display the DST (Daylight Saving Time) information of the switch.

Syntax

```
show system-time dst
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the DST information of the switch

```
T1700G-28TQ# show system-time dst
```

18.28 show system-time ntp

Description

The **show system-time ntp** command is used to display the NTP mode configuration information.

Syntax

```
show system-time ntp
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the NTP mode configuration information of the switch:

```
T1700G-28TQ# show system-time ntp
```

18.29 show cable-diagnostics interface gigabitEthernet

Description

The **show cable-diagnostics interface gigabitEthernet** command is used to display the cable diagnostics of the connected Ethernet Port., which facilitates you to check the connection status of the cable connected to the switch, locate and diagnose the trouble spot of the network.

Syntax

```
show cable-diagnostics interface { gigabitEthernet port |  
ten-gigabitEthernet port }
```

Parameter

port — The number of the port which is selected for Cable test.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Show the cable-diagnostics of port 1/0/3:

```
T1700G-28TQ# show cable-diagnostics interface gigabitEthernet 1/0/3
```

18.30 show cpu-utilization

Description

The **show cpu-utilization** command is used to display the system's CPU utilization in the last 5 seconds/1minute/5minutes.

Syntax

```
show cpu-utilization
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the CPU utilization information of the switch:

```
T1700G-28TQ# show cpu-utilization
```

18.31 show memory-utilization

Description

The **show memory-utilization** command is used to display the system's memory utilization in the last 5 seconds/1minute/5minutes.

Syntax

```
show memory-utilization
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the memory utilization information of the switch:

```
T1700G-28TQ# show memory-utilization
```

Chapter 19 IPv6 Address Configuration Commands

The IPv6 address configuration commands are provided in the Interface Configuration Mode, which includes the routed port, the LAG and the VLAN interface. Enter the configuration mode of these Layer 3 interfaces and configure their IPv6 parameters.

19.1 ipv6 enable

Description

This command is used to enable the IPv6 function on the specified Layer 3 interface. IPv6 function should be enabled before the IPv6 address configuration management. By default it is enabled on VLAN interface 1. IPv6 function can only be enabled on one Layer 3 interface at a time.

If the IPv6 function is disabled, the corresponding IPv6 netstack and IPv6-based modules will be invalid, for example SSHv6, SSLv6, TFTPv6 etc. To disable the IPv6 function, please use **no ipv6 enable** command.

Syntax

ipv6 enable
no ipv6 enable

Command Mode

Interface Configuration Mode

Example

Enable the IPv6 function on the VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 enable
```

19.2 ipv6 address autoconfig

Description

This command is used to enable the automatic configuration of the ipv6 link-local address. The switch has only one ipv6 link-local address, which can be configured automatically or manually. The general ipv6 link-local address has the prefix as fe80::/10. IPv6 routers cannot forward packets that have link-local source or destination addresses to other links. The autoconfigured ipv6 link-local address is in EUI-64 format. To verify the uniqueness of the link-local address, the manually configured ipv6 link-local address will be deleted when the autoconfigured ipv6 link-local address takes effect.

Syntax

```
ipv6 address autoconfig
```

Configuration Mode

Interface Configuration Mode

Example

Enable the automatic configuration of the ipv6 link-local address on VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address autoconfig
```

19.3 ipv6 address link-local

Description

The **ipv6 address link-local** command is used to configure the ipv6 link-local address manually on a specified interface. To delete the configured link-local address, please use **no ipv6 address link-local** command.

Syntax

```
ipv6 address ipv6-addr link-local
no ipv6 address ipv6-addr link-local
```

Parameter

ipv6-addr — The link-local address of the interface. It should be a standardized IPv6 address with the prefix fe80::/10, otherwise this command will be invalid.

Configuration Mode

Interface Configuration Mode

Example

Configure the link-local address as fe80::1234 on the VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address fe80::1234 link-local
```

19.4 ipv6 address dhcp

Description

The **ipv6 address dhcp** command is used to enable the DHCPv6 Client function. When this function is enabled, the Layer 3 interface will try to obtain IP from DHCPv6 server. To delete the allocated IP from DHCPv6 server and

disable the DHCPv6 Client function, please use **no ipv6 address dhcp** command.

Syntax

ipv6 address dhcp

no ipv6 address dhcp

Configuration Mode

Interface Configuration Mode

Example

Enable the DHCP Client function on VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address dhcp
```

19.5 ipv6 address ra

Description

This command is used to configure the interface's global IPv6 address according to the address prefix and other configuration parameters from its received RA(Router Advertisement) message. To disable this function, please use **no ipv6 address ra** command.

Syntax

ipv6 address ra

no ipv6 address ra

Configuration Mode

Interface Configuration Mode

Example

Enable the automatic ipv6 address configuration function to obtain IPv6 address through the RA message on VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address ra
```

19.6 ipv6 address eui-64

Description

This command is used to manually configure a global IPv6 address with an extended unique identifier (EUI) in the low-order 64 bits on the interface. Specify only the network prefix. The last 64 bits are automatically computed from the switch MAC address. To remove an EUI-64 IPv6 address from the interface, please use the **no ipv6 address eui-64** command.

Syntax

```
ipv6 address ipv6-addr eui-64
```

```
no ipv6 address ipv6-addr eui-64
```

Parameter

ipv6-addr — Global IPv6 address with 64 bits network prefix, for example 3ffe::/64.

Configuration Mode

Interface Configuration Mode

Example

Configure an EUI-64 global address on the interface with the network prefix 3ffe::/64:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address 3ffe::/64 eui-64
```

19.7 ipv6 address

Description

This command is used to manually configure a global IPv6 address on the interface. To remove a global IPv6 address from the interface, please use **no ipv6 address** command.

Syntax

```
ipv6 address ipv6-addr
```

```
no ipv6 address ipv6-addr
```

Parameter

ipv6-addr — Global IPv6 address with network prefix, for example 3ffe::1/64.

Configuration Mode

Interface Configuration Mode

Example

Configure the global address 3001::1/64 on VLAN interface 1:

```
T1700G-28TQ(config)# interface vlan 1
T1700G-28TQ(config-if)# ipv6 address 3001::1/64
```

19.8 show ipv6 interface

Description

This command is used to display the configured ipv6 information of the management interface, including ipv6 function status, link-local address and global address, ipv6 multicast groups etc.

Syntax

```
show ipv6 interface
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the ipv6 information of the management interface:

```
T1700G-28TQ(config)# show ipv6 interface
```

Chapter 20 Ethernet Configuration Commands

Ethernet Configuration Commands can be used to configure the Bandwidth Control, Negotiation Mode and Storm Control for Ethernet ports.

20.1 interface gigabitEthernet

Description

The **interface gigabitEthernet** command is used to enter the Interface gigabitEthernet Configuration Mode and configure the corresponding Gigabit Ethernet port.

Syntax

```
interface gigabitEthernet port
```

Parameter

port — The Ethernet port number.

Command Mode

Global Configuration Mode

Example

To enter the Interface gigabitEthernet Configuration Mode and configure port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
```

20.2 interface range gigabitEthernet

Description

The **interface range gigabitEthernet** command is used to enter the interface range gigabitEthernet Configuration Mode and configure multiple Gigabit Ethernet ports at the same time.

Syntax

```
interface range gigabitEthernet port-list
```

Parameter

port-list — The list of Ethernet ports.

Command Mode

Global Configuration Mode

User Guidelines

Command in the **Interface Range gigabitEthernet** Mode is executed independently on all ports in the range. It does not affect the execution on the other ports at all if the command results in an error on one port.

Example

To enter the Interface range gigabitEthernet Configuration Mode, and configure ports 1, 2, 3, 6, 7 and 9 at the same time by adding them to one port-list:

```
T1700G-28TQ(config)# interface range gigabitEthernet 1/0/1-3,1/0/6-7,1/0/9
```

20.3 interface ten-gigabitEthernet

Description

The **interface ten-gigabitEthernet** command is used to enter the interface ten-gigabitEthernet Configuration Mode and configure the corresponding Ten Gigabit Ethernet port.

Syntax

```
interface ten-gigabitEthernet port
```

Parameter

port — The Ten Gigabit Ethernet port number.

Command Mode

Global Configuration Mode

Example

To enter the Interface gigabitEthernet Configuration Mode and configure Ten-Gigabit Ethernet port 1/0/25:

```
T2700G-28TQ(config)#interface ten-gigabitEthernet 1/0/25
```

20.4 interface range ten-gigabitEthernet

Description

The **interface range ten-gigabitEthernet** command is used to enter the interface range ten-gigabitEthernet Configuration Mode and configure multiple Ten Gigabit Ethernet ports at the same time.

Syntax

```
interface range ten-gigabitEthernet port-list
```

Parameter

port-list — The list of Ten Gigabit Ethernet ports.

Command Mode

Global Configuration Mode

User Guidelines

Command in the **Interface Range ten-gigabitEthernet** Mode is executed independently on all ports in the range. It does not affect the execution on the other ports at all if the command results in an error on one port.

Example

To enter the Interface Range ten-gigabitEthernet Configuration Mode, and configure Ten Gigabit Ethernet ports 1/0/25 and 1/0/26 at the same time by adding them to one port-list:

```
T2700G-28TQ(config)# interface range ten-gigabitEthernet 1/0/25-26
```

20.5 description

Description

The **description** command is used to add a description to the Ethernet port. To clear the description of the corresponding port, please use **no description** command.

Syntax

```
description string
```

```
no description
```

Parameter

string — Content of a port description, ranging from 1 to 16 characters.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Add a description Port _5 to port 1/0/5:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)# description Port_5
```

20.6 shutdown

Description

The **shutdown** command is used to disable an Ethernet port. To enable this port again, please use **no shutdown** command.

Syntax

shutdown

no shutdown

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Disable port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# shutdown
```

20.7 flow-control

Description

The **flow-control** command is used to enable the flow-control function for a port. To disable the flow-control function for this corresponding port, please use **no flow-control** command. With the flow-control function enabled, the Ingress Rate and Egress Rate can be synchronized to avoid packet loss in the network.

Syntax

flow-control

no flow-control

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Enable the flow-control function for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# flow-control
```

20.8 duplex

Description

The **duplex** command is used to configure the Duplex Mode for an Ethernet port. To return to the default configuration, please use **no duplex** command.

Syntax

```
duplex { auto | full | half }
no duplex
```

Parameter

auto | full | half — The duplex mode of the Ethernet port. There are three options: auto-negotiation mode, full-duplex mode and half-duplex mode. By default the Gigabit Ethernet port is auto-negotiation mode.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Configure the Duplex Mode as full-duplex for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# duplex full
```

20.9 jumbo

Description

The **jumbo** command is used to allow the jumbo frame to pass through this port. To disable this feature, please use **no jumbo** command. This feature is disabled by default.

Syntax

jumbo

no jumbo

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Allow jumbo frame on port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# jumbo
```

20.10 speed

Description

The **speed** command is used to configure the Speed Mode for an Ethernet port. To return to the default configuration, please use **no speed** command.

Syntax

speed { 10 | 100 | 1000 | 10000 | auto }
no speed

Parameter

10 | 100 | 1000 | 10000 | auto — The speed mode of the Ethernet port. There are five options: 10Mbps, 100Mbps, 1000Mbps, 10000Mbps and Auto negotiation mode (default).

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Configure the Speed Mode as 100Mbps for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# speed 100
```

20.11 storm-control pps

Description

The **storm-control pps** command is used to configure the storm control mode as pps(packets per second) on an interface. To disable the pps mode, please use **no storm-control pps** command.

Syntax

```
storm-control pps  
no storm-control pps
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

User Guidelines

This command should be used along with the [storm-control](#) command to enable the storm control function and specify the detailed parameters in pps mode.

Example

Set the storm control mode as pps on port 1/0/5:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5  
T1700G-28TQ(config-if)# storm-control pps
```

20.12 storm-control

Description

The **storm-control** command is used to enable the broadcast, multicast, or unicast storm control function and to set threshold levels on an interface. To disable the storm control function, please use **no storm-control** command.

Syntax

```
storm-control { broadcast | multicast | unicast } { kbps | ratio | pps } { rate }  
no storm-control { broadcast | multicast | unicast }
```

Parameter

broadcast | multicast | unicast — Enable broadcast/multicast/unicast storm control on the interface.

kbps | ratio | pps — Specify the storm control type.

kbps: Specify the threshold in kbits per second.

ratio: Specify the threshold as a percentage of the bandwidth.

pps: Specify the threshold in packets per second.

rate — Specify the bandwidth for receiving packets on the port. The specified type of packet traffic exceeding the bandwidth will be discarded. For kbps, the rate ranges from 1 to 10000000 kbps. For ratio, the rate ranges from 1 to 100 percent. For pps, the rate ranges from 1 to 1488000 packets per second.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

User Guidelines

Before you configure the storm-control type as kbps or ratio, please ensure that the port is not in pps mode.

Example

Configure the broadcast storm control rate as 1000 kbps on port 1/0/5:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)# storm-control broadcast kbps 1000
```

20.13 bandwidth

Description

The **bandwidth** command is used to configure the bandwidth limit for an Ethernet port. To disable the bandwidth limit, please use **no bandwidth** command.

Syntax

```
bandwidth {[ ingress ingress-rate ] [ egress egress-rate ]}
```

```
no bandwidth { all | ingress | egress }
```

Parameter

ingress-rate — Specify the bandwidth for receiving packets. Range: 1-1000000Kbps for the gigaport, 1 to 10000000 kbps for the ten-gigabit port.

egress-rate — Specify the bandwidth for sending packets. Range: 1-1000000Kbps for the gigaport, 1 to 10000000 kbps for the ten-gigabit port.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Configure the ingress-rate as 5120Kbps and egress-rate as 1024Kbps for port 1/0/5:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)# bandwidth ingress 5120 egress 1024
```

20.14 clear counters

Description

The **clear counters** command is used to clear the statistics information of all the Ethernet ports and LAGs.

Syntax

clear counters

clear counters interface [**gigabitEthernet** *port*] [**ten-gigabitEthernet** *port*]
[**port-channel** *lagid*]

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Clear the statistic information of all ports and LAGs:

```
T1700G-28TQ(config)# clear counters
```

20.15 show interface status

Description

The **show interface status** command is used to display the connection status of the Ethernet port/LAG.

Syntax

show interface status [**gigabitEthernet** *port*] [**ten-gigabitEthernet** *port*]
[**port-channel** *lagid*]

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the connection status of all ports and LAGs:

```
T1700G-28TQ(config)# show interface status
```

Display the connection status of port 1/0/1:

```
T1700G-28TQ(config)# show interface status gigabitEthernet 1/0/1
```

20.16 show interface counters

Description

The **show interface counters** command is used to display the statistics information of all ports/LAGs.

Syntax

```
show interface counters [ gigabitEthernet port ] [ ten-gigabitEthernet port ]  
[ port-channel lagid ]
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the statistics information of all Ethernet ports and LAGs:

```
T1700G-28TQ(config)# show interface counters
```

Display the statistics information of port 1/0/2:

```
T1700G-28TQ(config)# show interface counters gigabitEthernet 1/0/2
```

20.17 show interface configuration

Description

The **show interface configuration** command is used to display the configurations of all ports and LAGs, including Port-status, Flow Control, Negotiation Mode and Port-description.

Syntax

```
show interface configuration [ gigabitEthernet port ] [ ten-gigabitEthernet port ] [ port-channel lagid ]
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configurations of all Ethernet ports and LAGs:

```
T1700G-28TQ(config)# show interface configuration
```

Display the configurations of port 1/0/2:

```
T1700G-28TQ(config)# show interface configuration gigabitEthernet 1/0/2
```

20.18 show storm-control

Description

The **show storm-control** command is used to display the storm-control information of Ethernet ports.

Syntax

```
show storm-control interface [ gigabitEthernet port-list ] [ ten-gigabitEthernet port ] [ port-channel lag-list ]
```

Parameter

port-list — The list of Ethernet ports.

lag-list — The list of LAGs.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the storm-control information of port 4, 5, 6, and 7:

```
T1700G-28TQ(config)# show storm-control interface gigabitEthernet 1/0/4-7
```

20.19 show bandwidth

Description

The **show bandwidth** command is used to display the bandwidth-limit information of Ethernet ports.

Syntax

```
show bandwidth interface [ gigabitEthernet port-list ] [ ten-gigabitEthernet port-list ] [ port-channel lag-list ]
```

Parameter

port-list —— The list of Ethernet ports.

lag-list —— The list of LAGs.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the bandwidth-limit information of port 1/0/4:

```
T1700G-28TQ(config)# show bandwidth interface gigabitEthernet 1/0/4
```

Chapter 21 QoS Commands

QoS (Quality of Service) function is used to optimize the network performance. It provides you with network service experience of a better quality.

21.1 qos

Description

The **qos** command is used to configure CoS (Class of Service) based on port. To return to the default configuration, please use **no qos** command.

Syntax

```
qos cos-id  
no qos
```

Parameter

cos-id — The priority of port. It ranges from 0 to 7, which represent CoS0-CoS7 respectively. By default, the priority is 0.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

User Guidelines

Port priority is one property of the port. When the port priority is specified, the data will be classified into the egress queue based on the CoS value of the ingress port and the mapping relation between the CoS and TC in IEEE 802.1P.

Example

Configure the priority of port 1/0/5 as 3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5  
T1700G-28TQ(config-if)# qos 3
```

21.2 qos dscp

Description

The **qos dscp** command is used to enable the mapping relation between DSCP Priority and CoS value. To disable the mapping relation, please use **no qos dscp** command.

Syntax

qos dscp

no qos dscp

Command Mode

Global Configuration Mode

User Guidelines

DSCP (DiffServ Code Point) is a new definition to IP ToS field given by IEEE. DSCP priorities are mapped to the corresponding 802.1p priorities. IP datagram will be classified into the egress queue based on the mapping relation between DSCP priority and CoS value.

Example

Enable the mapping relation between DSCP Priority and CoS value:

```
T1700G-28TQ(config)# qos dscp
```

21.3 qos queue cos-map

Description

The **qos queue cos-map** command is used to configure the mapping relation between IEEE 802.1P priority tag/IEEE 802.1Q tag, CoS value and the TC egress queue. To return to the default configuration, please use **no qos queue cos-map** command. When 802.1P Priority is enabled, the packets with 802.1Q tag are mapped to different priority levels based on 802.1P priority mode. The untagged packets are mapped based on port priority mode.

Syntax

qos queue cos-map { *tag/cos-id* } { *tc-id* }

no qos queue cos-map

Parameter

tag/cos-id — The 8 priority levels defined by IEEE 802.1P or the priority level the packets with tag are mapped to, which ranges from CoS 0 to CoS 7.

tc-id — The egress queue the packets with tag are mapped to. It ranges from 0 to 7, which represents TC0 to TC7 respectively.

Command Mode

Global Configuration Mode

User Guidelines

1. By default, the mapping relation between tag/cos and the egress queue is:
0/CoS 0-TC1, 1/CoS 1-TC0, 2/CoS 2-TC2, 3/CoS 3-TC3, 4/CoS 4-TC4, 5/CoS 5-TC5, 6/CoS 6-TC6, 7/CoS 7-TC7.
2. Among the priority levels TC0-TC7, the bigger value, the higher priority.

Example

Map CoS 5 to TC 2:

```
T1700G-28TQ(config)# qos queue cos-map 5 2
```

21.4 qos queue dscp-map

Description

The **qos queue dscp-map** command is used to configure the mapping relation between DSCP Priority and the CoS value. To return to the default configuration, please use **no qos queue dscp-map** command. DSCP (DiffServ Code Point) is a new definition to IP ToS field given by IEEE. This field is used to divide IP datagram into 64 priorities. When DSCP Priority is enabled, IP datagram are mapped to different priority levels based on DSCP priority mode; non-IP datagram with IEEE 802.1Q tag are mapped to different priority levels based on IEEE 802.1P priority mode if IEEE 802.1P Priority is enabled; the untagged non-IP datagram are mapped based on port priority mode.

Syntax

```
qos queue dscp-map { dscp-list } { cos-id }
```

```
no qos queue dscp-map
```

Parameter

dscp-list — List of DSCP value. One or several DSCP values can be typed using comma to separate. Use a hyphen to designate a range of values, for instance, 1,4-7,11 indicates choosing 1,4,5,6,7,11. The DSCP value ranges from 0 to 63.

cos-id — The priority level the packets with tag are mapped to, which ranges from CoS 0 to CoS 7.

Command Mode

Global Configuration Mode

User Guidelines

By default, the mapping relation between tag and the egress queue is: (0-7)-CoS 0, (8-15)-CoS 1, (16-23)-CoS 2, (24-31)-CoS 3, (32-39)-CoS 4, (40-47)-CoS 5, (48-55)-CoS 6, (56-63)-CoS 7.

Example

Map DSCP values 10-12 to CoS 2:

```
T1700G-28TQ(config)# qos queue dscp-map 10-12 2
```

21.5 qos queue mode

Description

The **qos queue mode** command is used to configure the Schedule Mode. To return to the default Equal-Mode, please use **no qos queue mode** command. When the network is congested, the program that many packets complete for resources must be solved, usually in the way of queue scheduling. The switch will control the forwarding sequence of the packets according to the priority queues and scheduling algorithms you set. On this switch, the priority levels are labeled as TC0, TC1, TC2 ... TC7.

Syntax

```
qos queue mode { sp | wrr | spwrr | equ }
```

```
no qos queue mode
```

Parameter

sp — Strict-Priority Mode. In this mode, the queue with higher priority will occupy the whole bandwidth. Packets in the queue with lower priority are sent only when the queue with higher priority is empty.

wrr — Weight Round Robin Mode. In this mode, packets in all the queues are sent in order based on the weight value for each queue. The weight values of TC0, TC1, TC2, TC3, TC4, TC5, TC6 and TC7 are customized in [qos queue weight](#) command and their default values are 1, 2, 4, 8, 16, 32, 64 and 127 respectively.

spwrr — Strict-Priority + Weight Round Robin Mode. In this mode, the switch provides two scheduling groups, SP group and WRR group. SP group is processed prior to WRR group. Queues in SP group are scheduled strictly based on Strict-Priority mode while the queues inside WRR group follow the WRR mode. In SP+WRR mode, TC7 and the queue with its weight value set as 0 are in the SP group; other queues, with none-zero weight value, belong to the WRR group and the weight value can be customized in [qos queue weight](#)

command. The weight values of TC0, TC1, TC2, TC3, TC4, TC5 and TC6 are 1, 2, 4, 8, 16, 32 and 64 respectively, while the value of TC7 is 0 and non-configurable.

equ — Equal-Mode. In this mode, all the queues occupy the bandwidth equally. The weight value ratio of all the queues is 1:1:1:1:1:1:1

Command Mode

Global Configuration Mode

Example

Specify the Schedule Mode as Weight Round Robin Mode:

```
T1700G-28TQ(config)# qos queue mode wrr
```

21.6 qos queue weight

Description

The **qos queue weight** command is used to configure weight value of each queue after the Schedule Mode is specified as WRR or SP+WRR. The switch will control the forwarding sequence of the packets according to the priority queues and scheduling algorithms you set. On this switch, the priority levels are labeled as TC0, TC1, TC2, TC3, TC4, TC5,TC6 and TC7.

Syntax

```
qos queue weight { tc-id } { weight-value }
```

Parameter

tc-id — The ID of the TC queue, ranging from 0 to 7.

weight-value — Configure the weight value of the specified TC queue.

When the schedule mode is specified as WRR, the weight value ranges from 1 to 127. The 8 queues will take up the bandwidth according to their ratio. The default values of TC0, TC1, TC2, TC3, TC4, TC5,TC6 and TC7 are 1, 2, 4, 8, 16, 32, 64 and 127 respectively.

When the schedule mode is specified as SP+WRR, the weight value ranges from 0 to 127. TC7 and the queue with its weight value set as 0 are in the SP group; other queues, with none-zero weight value, belong to the WRR group. In this SP+WRR scheduling mode, the queues in the SP group is scheduled preferentially (TC6>TC5>TC4>TC3>TC2>TC1>TC0 in strict priority). When there is no packets to be sent in the SP group, the queues in the WRR group will be scheduled according to the weight value of each queue. The default weight

values of TC0, TC1, TC2, TC3, TC4, TC5 and TC6 are 1, 2, 4, 8, 16, 32 and 64 respectively, while the value of TC7 is 0 and non-configurable.

Command Mode

Global Configuration Mode

Example

Specify the Schedule Mode as Weight Round Robin Mode, with the weight values of TC0, TC1, TC2 and TC3 as 4, 7, 15 and 24:

```
T1700G-28TQ(config)# qos queue mode wrr
T1700G-28TQ(config)# qos queue weight 0 4
T1700G-28TQ(config)# qos queue weight 1 7
T1700G-28TQ(config)# qos queue weight 2 15
T1700G-28TQ(config)# qos queue weight 3 24
```

21.7 show qos interface

Description

The **show qos interface** command is used to display the configuration of QoS based on port priority.

Syntax

```
show qos interface [ gigabitEthernet port-list ] [ ten-gigabitEthernet port-list ]
[ port-channel lag-list ]
```

Parameter

port-list —— The list of Ethernet ports.

lag-list —— The list of LAGs.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of QoS for all ports and LAGs:

```
T1700G-28TQ# show qos interface
```

Display the configuration of QoS for ports 1/0/1-4:

```
T1700G-28TQ# show qos interface gigabitEthernet 1/0/1-4
```

21.8 show qos cos-map

Description

The **show qos cos-map** command is used to display the configuration of IEEE 802.1P Priority and the mapping relation between cos-id and tc-id.

Syntax

```
show qos cos-map
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of IEEE 802.1P Priority and the mapping relation between cos-id and tc-id:

```
T1700G-28TQ# show qos cos-map
```

21.9 show qos dscp-map

Description

The **show qos dscp-map** command is used to display the configuration of DSCP Priority.

Syntax

```
show qos dscp-map
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of DSCP Priority:

```
T1700G-28TQ# show qos dscp-map
```

21.10 show qos queue mode

Description

The **show qos queue mode** command is used to display the schedule rule of the egress queues.

Syntax

```
show qos queue mode
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the schedule rule of the egress queues:

```
T1700G-28TQ# show qos queue mode
```

21.11 show qos status

Description

The **show qos status** command is used to display the status of IEEE 802.1P priority and DSCP priority.

Syntax

```
show qos status
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the status of IEEE 802.1P priority and DSCP priority:

```
T1700G-28TQ# show qos status
```

Chapter 22 Port Mirror Commands

Port Mirror refers to the process of forwarding copies of packets from one port to a monitoring port. Usually, the monitoring port is connected to data diagnose device, which is used to analyze the monitored packets for monitoring and troubleshooting the network.

22.1 monitor session destination interface

Description

The **monitor session destination interface** command is used to configure the monitoring port. Each monitor session has only one monitoring port. To change the monitoring port, please use the **monitor session destination interface** command by changing the port value. The **no monitor session** command is used to delete the corresponding monitoring port or monitor session.

Syntax

```
monitor session session_num destination interface { gigabitEthernet port | ten-gigabitEthernet port }
```

```
no monitor session session_num destination interface { gigabitEthernet port | ten-gigabitEthernet port }
```

```
no monitor session session_num
```

Parameter

session_num — The monitor session number, can only be specified as 1.

port — The monitoring port number.

Command Mode

Global Configuration Mode

Example

Create monitor session 1 and configure port 1/0/1 as the monitoring port:

```
T1700G-28TQ(config)# monitor session 1 destination interface  
gigabitEthernet 1/0/1
```

Delete the monitoring port 1/0/2 from monitor session 1:

```
T1700G-28TQ(config)# no monitor session 1 destination interface  
gigabitEthernet 1/0/2
```

Delete the monitor session 1:

```
T1700G-28TQ(config)# no monitor session 1
```

22.2 monitor session source interface

Description

The **monitor session source interface** command is used to configure the monitored port. To delete the corresponding monitored port, please use **no monitor session source interface** command.

Syntax

```
monitor session session_num source interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lag-list } mode
```

```
no monitor session session_num source interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lag-list } mode
```

Parameter

session_num —— The monitor session number, can only be specified as 1.

port-list —— List of monitored port. It is multi-optional.

lag-list —— List of monitored port channel. It is multi-optional.

mode —— The monitor mode. There are three options: rx, tx and both. Rx (ingress monitoring mode), means the incoming packets received by the monitored port will be copied to the monitoring port. Tx (egress monitoring mode), indicates the outgoing packets sent by the monitored port will be copied to the monitoring port. Both (ingress and egress monitoring), presents the incoming packets received and the outgoing packets sent by the monitored port will both be copied to the monitoring port.

Command Mode

Global Configuration Mode

User Guidelines

1. The monitoring port is corresponding to current interface configuration mode.
2. Monitored ports number is not limited, but it can't be the monitoring port at the same time.
3. Whether the monitoring port and monitored ports are in the same VLAN or not is not demanded strictly.
4. The monitoring port cannot be link-aggregation member.

Example

Create monitor session 1, then configure port 1/0/4, 1/0/5, 1/0/7 as monitored port and enable ingress monitoring:

```
T1700G-28TQ(config)# monitor session 1 source interface gigabitEthernet  
1/0/4-5,1/0/7 rx
```

Delete port 1/0/4 in monitor session 1 and its configuration:

```
T1700G-28TQ(config)# no monitor session 1 source interface  
gigabitEthernet 1/0/4 rx
```

22.3 show monitor session

Description

The **show monitor session** command is used to display the configuration of port monitoring.

Syntax

```
show monitor session [session_num]
```

Parameter

session_num — The monitor session number, can only be specified as 1. It is optional.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the monitoring configuration of monitor session 1:

```
T1700G-28TQ(config)# show monitor session 1
```

Chapter 23 Port Isolation Commands

Port Isolation provides a method of restricting traffic flow to improve the network security by forbidding the port to forward packets to the ports that are not on its forwarding port list.

23.1 port isolation

Description

The **port isolation** command is used to configure the forward port/LAG list of a port/LAG, so that this port/LAG can only communicate with the ports/LAGs on its list. To delete the corresponding configuration, please use **no port isolation** command.

Syntax

```
port isolation { [ gi-forward-list gi-forward-list ] [ po-forward-list po-forward-list ] }
```

```
no port isolation
```

Parameter

gi-forward-list — The list of Ethernet ports.

po-forward-list — The list of LAGs.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Set port 1, 2, 4 and LAG 2 to the forward list of port 1/0/5:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/5
T1700G-28TQ(config-if)# port isolation gi-forward-list 1/0/1-2,1/0/4
po-forward-list 2
```

Set all Ethernet ports and LAGs to forward list of port 1/0/2, namely restore to the default setting:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# no port isolation
```

23.2 show port isolation interface

Description

The **show port isolation interface** command is used to display the forward port list of a port/LAG.

Syntax

```
show port isolation interface [ gigabitEthernet port | ten-gigabitEthernet port | port-channel lagid ]
```

Parameter

port — The number of Ethernet port you want to show its forward port list, in the format of 1/0/2.

lagid — The ID of LAG you want to show its forward port list, ranging from 1 to 6.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the forward-list of port 1/0/2:

```
T1700G-28TQ# show port isolation interface gigabitEthernet 1/0/2
```

Display the forward-list of all Ethernet ports and LAGs:

```
T1700G-28TQ# show port isolation interface
```

Chapter 24 Loopback Detection Commands

With loopback detection feature enabled, the switch can detect loops using loopback detection packets. When a loop is detected, the switch will display an alert or further block the corresponding port according to the configuration.

24.1 loopback-detection(global)

Description

The **loopback-detection** command is used to enable the loopback detection function globally. To disable it, please use **no loopback detection** command.

Syntax

loopback-detection

no loopback-detection

Command Mode

Global Configuration Mode

Example

Enable the loopback detection function globally:

```
T1700G-28TQ(config)# loopback-detection
```

24.2 loopback-detection interval

Description

The **loopback-detection interval** command is used to define the interval of sending loopback detection packets from switch ports to network, aiming at detecting network loops periodically.

Syntax

loopback-detection interval *interval-time*

Parameter

interval-time — The interval of sending loopback detection packets. It ranges from 1 to 1000 seconds. By default, this value is 30.

Command Mode

Global Configuration Mode

Example

Specify the interval-time as 50 seconds:

```
T1700G-28TQ(config)# loopback-detection interval 50
```

24.3 loopback-detection recovery-time

Description

The **loopback-detection recovery-time** command is used to configure the time after which the blocked port would automatically recover to normal status.

Syntax

```
loopback-detection recovery-time recovery-time
```

Parameter

recovery-time — The time after which the blocked port would automatically recover to normal status, and the loopback detection would restart. It is integral times of detection interval, ranging from 1 to 100 and the default value is 3.

Command Mode

Global Configuration Mode

Example

Configure the recovery-time as 3 times of detection interval:

```
T1700G-28TQ(config)# loopback-detection recovery-time 3
```

24.4 loopback-detection(interface)

Description

The **loopback-detection** command is used to enable the loopback detection function of the specified port. To disable it, please use **no loopback-detection** command.

Syntax

```
loopback-detection
```

```
no loopback-detection
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the loopback detection function of ports 1-3:

```
T1700G-28TQ(config)# interface range gigabitEthernet 1/0/1-3
T1700G-28TQ(Config-if-range)# loopback-detection
```

24.5 loopback-detection config

Description

The **loopback-detection config** command is used to configure the process-mode and recovery-mode for the ports by which the switch copes with the detected loops.

Syntax

```
loopback-detection config [ process-mode { alert | port-based }]
[ recovery-mode { auto | manual }]
```

Parameter

process-mode — The mode how the switch processes the detected loops.

Alert: When a loop is detected, display an alert.

Port based: When a loop is detected, display an alert and block the port.

recovery-mode — The mode how the blocked port recovers to normal status.

Auto: Block status can be automatically removed after recovery time.

Manual: Block status can only be removed manually.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Configure the loopback detection process-mode as port-based and recovery-mode as manual for port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# loopback-detection config process-mode
port-based recovery-mode manual
```

24.6 loopback-detection recover

Description

The **loopback-detection recover** command is used to remove the block status of selected ports, recovering the blocked ports to normal status,

Syntax

```
loopback-detection recover
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Recover the blocked port 2 to normal status:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# loopback-detection recover
```

24.7 show loopback-detection global

Description

The **show loopback-detection global** command is used to display the global configuration of loopback detection function such as loopback detection global status, loopback detection interval and loopback detection recovery time.

Syntax

```
show loopback-detection global
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the global configuration of loopback detection function:

```
T1700G-28TQ# show loopback-detection global
```

24.8 show loopback-detection interface

Description

The **show loopback-detection interface** command is used to display the configuration of loopback detection function and the status of the specified Ethernet port.

Syntax

```
show loopback-detection interface [ gigabitEthernet port |  
ten-gigabitEthernet port ]
```

Parameter

port — The Ethernet port number.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of loopback detection function and the status of all ports:

```
T1700G-28TQ# show loopback-detection interface
```

Display the configuration of loopback detection function and the status of port 5:

```
T1700G-28TQ# show loopback-detection interface gigabitEthernet 1/0/5
```

Chapter 25 ACL Commands

25.1 access-list create

Description

The **access-list create** command is used to create standard-IP ACL and extend-IP ACL.

Syntax

access-list create *access-list-num*

Parameter

access-list-num — ACL ID, ranging from 500 to 2499. The ID range of Standard-IP ACL ranges is 500-1499 and the Extend-IP ACL is 1500-2499.

Command Mode

Global Configuration Mode

Example

Create a standard-IP ACL whose ID is 523:

```
T1700G-28TQ(config)# access-list create 523
```

25.2 mac access-list

Description

The **mac access-list** command is used to create MAC ACL. To set the detailed configurations for a specified MAC ACL, please use **mac access-list** command to access Mac Access-list Configuration Mode. To delete the MAC ACL, please use **no mac access-list**.

Syntax

mac access-list *access-list-num*

no mac access-list *access-list-num*

Parameter

access-list-num — ACL ID, ranging from 0 to 499.

Command Mode

Global Configuration Mode

Example

Create a MAC ACL whose ID is 23:

```
T1700G-28TQ(config)# mac access-list 23
```

25.3 access-list standard

Description

The **access-list standard** command is used to add Standard-IP ACL rule. To delete the corresponding rule, please use **no access-list standard** command. Standard-IP ACLs analyze and process data packets based on a series of match conditions, which can be the source IP addresses and destination IP addresses carried in the packets.

Syntax

```
access-list standard acl-id rule rule-id { deny | permit } [[ sip source-ip ] smask  
source-ip-mask] [[ dip destination-ip ] dmask destination-ip-mask ]  
no access-list standard acl-id rule rule-id
```

Parameter

acl-id — The desired Standard-IP ACL for configuration.

rule-id — The rule ID.

deny — The operation to discard packets.

permit — The operation to forward packets. It is the default value.

source-ip — The source IP address contained in the rule.

source-ip-mask — The source IP address mask. It is required if you typed the source IP address.

destination-ip — The destination IP address contained in the rule.

destination-ip-mask — The destination IP address mask. It is required if you typed the destination IP address.

Command Mode

Global Configuration Mode

Example

Create a Standard-IP ACL whose ID is 520, and add Rule 10 for it. In the rule, the source IP address is 192.168.0.100, the source IP address mask is 255.255.255.0, and the packets match this rule will be forwarded by the switch:

```
T1700G-28TQ(config)# access-list create 520
```

```
T1700G-28TQ(config)# access-list standard 520 rule 10 permit sip
192.168.0.100 smask 255.255.255.0
```

25.4 access-list extended

Description

The **access-list extended** command is used to add Extended-IP ACL rule. To delete the corresponding rule, please use **no access-list extended** command.

Syntax

```
access-list extended acl-id rule rule-id { deny | permit } [[ sip source-ip ]
smask source-ip-mask ] [[ dip destination-ip] dmask destination-ip-mask ]
[ s-port s-port ] [ d-port d-port ] [ protocol protocol ]
no access-list extended acl-id rule rule-id
```

Parameter

acl-id——The desired Extended-IP ACL for configuration.

rule-id —— The rule ID.

deny —— The operation to discard packets.

permit ——The operation to forward packets. It is the default value.

source-ip —— The source IP address contained in the rule.

source-ip-mask —— The source IP address mask. It is required if you typed the source IP address.

destination-ip —— The destination IP address contained in the rule.

destination-ip-mask —— The destination IP address mask. It is required if you typed the destination IP address.

s-port —— The source port number.

d-port —— The destination port number.

protocol —— Configure the value of the matching protocol.

Command Mode

Global Configuration Mode

Example

Create an Extended-IP ACL whose ID is 2220, and add Rule 10 for it. In the rule, the source IP address is 192.168.0.100, the source IP address mask is 255.255.255.0, and the packets match this rule will be forwarded by the switch:

```
T1700G-28TQ(config)# access-list create 2220
```

```
T1700G-28TQ(config)# access-list extended 2220 rule 10 permit sip
192.168.0.100 smask 255.255.255.0
```

25.5 rule

Description

The **rule** command is used to configure MAC ACL rule. To delete the corresponding rule, please use **no rule** command.

Syntax

```
rule rule-id { deny | permit } [[ smac source-mac ] smask source-mac-mask ]
[[ dmac destination-mac ] dmask destination-mac-mask ]
no rule rule-id
```

Parameter

rule-id — The rule ID.

deny — The operation to discard packets.

permit — The operation to forward packets. It is the default value.

source-mac — The source MAC address contained in the rule.

source-mac-mask — The source MAC address mask. It is required if you typed the source MAC address.

destination-mac — The destination MAC address contained in the rule.

destination-mac-mask — The destination MAC address mask. It is required if you typed the destination MAC address.

Command Mode

Mac Access-list Configuration Mode

Example

Create a MAC ACL whose ID is 20, and add Rule 10 for it. In the rule, the source MAC address is 00:01:3F:48:16:23, the source MAC address mask is 11:11:11:11:11:00, and the packets match this rule will be forwarded by the switch:

```
T1700G-28TQ(config)# mac access-list 20
T1700G-28TQ(config-mac-acl)# rule 10 permit smac 00:01:3F:48:16:23
smask 11:11:11:11:11:00
```

25.6 access-list policy name

Description

The **access-list policy name** command is used to add Policy. To delete the corresponding Policy, please use **no access-list policy name** command. A Policy is used to control the data packets those match the corresponding ACL rules by configuring ACLs and actions together for effect. The operations here include stream mirror, stream condition, QoS Remarking and redirect.

Syntax

access-list policy name *name*

no access-list policy name *name*

Parameter

name — The Policy Name, ranging from 1 to 16 characters.

Command Mode

Global Configuration Mode

Example

Add a Policy named policy1:

```
T1700G-28TQ(config)# access-list policy name policy1
```

25.7 access-list policy action

Description

The **access-list policy action** command is used to add ACLs and create actions for the policy. To set the detailed configuration of actions for a policy, please use **access-list policy action** command to access Action Configuration Mode. To delete the corresponding actions, please use **no access-list policy action** command.

Syntax

access-list policy action *policy-name acl-id*

no access-list policy action *policy-name acl-id*

Parameter

policy-name — The Policy Name, ranging from 1 to 16 characters.

acl-id — The ID of the ACL to which the above policy is applied.

Command Mode

Global Configuration Mode

Example

Add ACL whose ID is 120 to policy1 and create an action for them:

```
T1700G-28TQ(config)# access-list policy action policy1 120
```

25.8 access-list bind acl

Description

The **access-list bind acl** command is used to bind an ACL to the specified port. To cancel the bind relation, please use **no access-list bind acl** command.

Syntax

```
access-list bind acl acl-id
```

```
no access-list bind acl acl-id
```

Parameter

acl-id — The ID of the ACL desired to bind.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Bind ACL 100 to port 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
```

```
T1700G-28TQ(config-if)# access-list bind acl 100
```

25.9 access-list bind(interface)

Description

The **access-list bind** command is used to bind a policy to a specified port. To cancel the bind relation, please use **no access-list bind** command.

Syntax

```
access-list bind policy-name
```

```
no access-list bind policy-name
```

Parameter

policy-name — The name of the policy desired to bind.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Bind policy1 to port 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# access-list bind policy1
```

25.10 access-list bind(vlan)

Description

The **access-list bind** command is used to bind a policy to a VLAN. To cancel the bind relation, please use **no access-list bind** command.

Syntax

```
access-list bind policy-name
no access-list bind policy-name
```

Parameter

policy-name — The name of the policy desired to bind.

Command Mode

Interface VLAN Mode

Example

Bind policy1 to VLAN 2:

```
T1700G-28TQ(config)# interface vlan 2
T1700G-28TQ(config-if)# access-list bind policy1
```

25.11 show access-list

Description

The **show access-list** command is used to display configuration of ACL.

Syntax

```
show access-list acl-id
```

Parameter

acl-id — The ID of the ACL selected to display the configuration.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the MAC ACL whose ID is 20:

```
T1700G-28TQ(config)# show access-list 20
```

25.12 show access-list policy

Description

The **show access-list policy** command is used to display the information of a specified policy.

Syntax

```
show access-list policy name
```

Parameter

name — The Policy Name desired to show.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of a policy named policy1:

```
T1700G-28TQ(config)# show access-list policy policy1
```

25.13 show access-list bind

Description

The **show access-list bind** command is used to display the configuration of Policy bind.

Syntax

```
show access-list bind
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of Policy bind:

```
T1700G-28TQ(config)# show access-list bind
```

Chapter 26 MSTP Commands

MSTP (Multiple Spanning Tree Protocol), compatible with both STP and RSTP and subject to IEEE 802.1s, can disbranch a ring network. STP is to block redundant links and backup links as well as optimize paths.

26.1 debug spanning-tree

Description

The **debug spanning-tree** command is used to enable debugging of spanning-tree activities. To disable the debugging function, please use **no debug spanning-tree** command.

Syntax

debug spanning-tree { all | bpdu receive | bpdu transmit | cmpmsg | errors | flush | init | migration | proposals | roles | state | tc }

no debug spanning-tree { all | bpdu receive | bpdu transmit | cmpmsg | errors | flush | init | migration | proposals | roles | state | tc }

Parameters

all — Display all the spanning-tree debug messages.

bpdu receive — Display the debug messages of the received spanning-tree bridge protocol data unit (BPDU).

bpdu transmit — Display the debug messages of the sent spanning-tree BPDU.

cmpmsg — Display the message priority debug messages.

errors — Display the MSTP error debug messages.

flush — Display the address table flushing debug messages.

init — Display the data structure initialization debug messages.

migration — Display the version migration debug messages.

proposals — Display the MSTP handshake debug messages.

roles — Display the MSTP interface role switching debug messages.

state — Display the MSTP interface state change debug messages.

tc — Display the MSTP topology event debug messages.

Command Mode

Privileged EXEC Mode

Example

Display all the spanning-tree debug messages:

```
T1700G-28TQ# debug spanning-tree all
```

26.2 spanning-tree(global)

Description

The **spanning-tree** command is used to enable STP function globally. To disable the STP function, please use **no spanning-tree** command.

Syntax

spanning-tree

no spanning-tree

Command Mode

Global Configuration Mode

Example

Enable the STP function:

```
T1700G-28TQ(config)# spanning-tree
```

26.3 spanning-tree(interface)

Description

The **spanning-tree** command is used to enable STP function for a port. To disable the STP function, please use **no spanning-tree** command.

Syntax

spanning-tree

no spanning-tree

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Enable the STP function for port 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
```

```
T1700G-28TQ(config-if)# spanning-tree
```

26.4 spanning-tree common-config

Description

The **spanning-tree common-config** command is used to configure the parameters of the ports for comparison in the CIST and the common parameters of all instances. To return to the default configuration, please use **no spanning-tree common-config** command. CIST (Common and Internal Spanning Tree) is the spanning tree in a switched network, connecting all devices in the network.

Syntax

```
spanning-tree common-config [ port-priority pri ] [ ext-cost ext-cost ]  
[ int-cost int-cost ] [ portfast { enable | disable } ] [ point-to-point { auto | open |  
close } ]
```

```
no spanning-tree common-config
```

Parameter

pri — Port Priority, which must be multiple of 16 ranging from 0 to 240. By default, the port priority is 128. Port Priority is an important criterion on determining if the port connected to this port will be chosen as the root port. In the same condition, the port with the highest priority will be chosen as the root port. The lower value has the higher priority.

ext-cost — External Path Cost, which is used to choose the path and calculate the path costs of ports in different MST regions. It is an important criterion on determining the root port. The lower value has the higher priority. It ranges from 0 to 2000000. By default, it is 0 which is mean auto.

int-cost — Internal Path Cost, which is used to choose the path and calculate the path costs of ports in an MST region. It is an important criterion on determining the root port. The lower value has the higher priority. By default, it is automatic. It ranges from 0 to 2000000. By default, it is 0 which is mean auto.

portfast — Enable/ Disable Edge Port. By default, it is disabled. The edge port can transit its state from blocking to forwarding rapidly without waiting for forward delay.

point-to-point — The P2P link status, with auto, open and close options. By default, the option is auto. If the two ports in the P2P link are root port or designated port, they can transit their states to forwarding rapidly to reduce the unnecessary forward delay.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Enable the STP function of port 1, and configure the Port Priority as 64, ExtPath Cost as 100, IntPath Cost as 100, and then enable Edge Port:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/1
T1700G-28TQ(config-if)# spanning-tree common-config port-priority 64
ext-cost 100 int-cost 100 portfast enable point-to-point open
```

26.5 spanning-tree mode

Description

The **spanning-tree mode** command is used to configure the STP mode of the switch. To return to the default configurations, please use **no spanning-tree mode** command.

Syntax

```
spanning-tree mode { stp | rstp | mstp }
no spanning-tree mode
```

Parameter

stp —Spanning Tree Protocol, the default value.
rstp —Rapid Spanning Tree Protocol
mstp —Multiple Spanning Tree Protocol

Command Mode

Global Configuration Mode

Example

Configure the spanning-tree mode as mstp:

```
T1700G-28TQ(config)# spanning-tree mode mstp
```

26.6 spanning-tree mst configuration

Description

The **spanning-tree mst configuration** command is used to access MST Configuration Mode from Global Configuration Mode, as to configure the

VLAN-Instance mapping, region name and revision level. To return to the default configuration of the corresponding Instance, please use **no spanning-tree mst configuration** command.

Syntax

spanning-tree mst configuration
no spanning-tree mst configuration

Command Mode

Global Configuration Mode

Example

Enter into the MST configuration mode:

```
T1700G-28TQ(config)# spanning-tree mst configuration
T1700G-28TQ(Config-mst)#
```

26.7 instance

Description

The **instance** command is used to configure the VLAN-Instance mapping. To remove the VLAN-instance mapping or disable the corresponding instance, please use **no instance** command. When an instance is disabled, the related mapping VLANs will be removed.

Syntax

instance *instance-id* **vlan** *vlan-id*
no instance *instance-id* [**vlan** *vlan-id*]

Parameters

instance-id — Instance ID, ranging from 1 to 8.

vlan-id — The VLAN ID selected to mapping with the corresponding instance.

Command Mode

MST Configuration Mode

Example

Map the VLANs 1-100 to Instance 1:

```
T1700G-28TQ(config)# spanning-tree mst configuration
T1700G-28TQ(config-mst)# instance 1 vlan 1-100
```

Disable Instance 1, namely remove all the mapping VLANs 1-100:

```
T1700G-28TQ(config)# spanning-tree mst configuration
```

```
T1700G-28TQ(config-mst)# no instance 1
```

Remove VLANs 1-50 in mapping VLANs 1-100 for Instance 1:

```
T1700G-28TQ(config)# spanning-tree mst configuration
```

```
T1700G-28TQ(config-mst)# no instance 1 vlan 1-50
```

26.8 name

Description

The **name** command is used to configure the region name of MST instance.

Syntax

```
name name
```

Parameters

name — The region name, used to identify MST region. It ranges from 1 to 32 characters.

Command Mode

MST Configuration Mode

Example

Configure the region name of MST as “region1”:

```
T1700G-28TQ(config)# spanning-tree mst configuration
```

```
T1700G-28TQ(config-mst)# name region1
```

26.9 revision

Description

The **revision** command is used to configure the revision level of MST instance.

Syntax

```
revision revision
```

Parameters

revision — The revision level for MST region identification, ranging from 0 to 65535.

Command Mode

MST Configuration Mode

Example

Configure the revision level of MST as 100:

```
T1700G-28TQ(config)# spanning-tree mst configuration
```

```
T1700G-28TQ(config-mst)# revision 100
```

26.10 spanning-tree mst instance

Description

The **spanning-tree mst instance** command is used to configure the priority of MST instance. To return to the default value of MST instance priority, please use **no spanning-tree mst instance** command.

Syntax

```
spanning-tree mst instance instance-id priority pri
```

```
no spanning-tree mst instance instance-id priority
```

Parameter

instance-id — Instance ID, ranging from 1 to 8.

pri — MSTI Priority, which must be multiple of 4096 ranging from 0 to 61440. By default, it is 32768. MSTI priority is an important criterion on determining if the switch will be chosen as the root bridge in the specific instance.

Command Mode

Global Configuration Mode

Example

Enable the MST Instance 1 and configure its priority as 4096:

```
T1700G-28TQ(config)# spanning-tree mst instance 1 priority 4096
```

26.11 spanning-tree mst

Description

The **spanning-tree mst** command is used to configure MST Instance Port. To return to the default configuration of the corresponding Instance Port, please use **no spanning-tree mst** command. A port can play different roles in different spanning tree instance. You can use this command to configure the parameters of the ports in different instance IDs as well as view status of the ports in the specified instance.

Syntax

```
spanning-tree mst instance instance-id {[ port-priority pri ] | [ cost cost ]}
```

```
no spanning-tree mst instance instance-id
```

Parameter

instance-id — Instance ID, ranging from 1 to 8.

pri — Port Priority, which must be multiple of 16 ranging from 0 to 240. By default, it is 128. Port Priority is an important criterion on determining if the port will be chosen as the root port by the device connected to this port.

cost — Path Cost, ranging from 0 to 200000. The lower value has the higher priority. Its default value is 0 meaning “auto”.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Configure the priority of port 1 in MST Instance 1 as 64, and path cost as 2000:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/1
T1700G-28TQ(config-if)# spanning-tree mst instance 1 port-priority 64
cost 2000
```

26.12 spanning-tree priority

Description

The **spanning-tree priority** command is used to configure the bridge priority. To return to the default value of bridge priority, please use **no spanning-tree priority** command.

Syntax

spanning-tree priority *pri*

no spanning-tree priority

Parameter

pri — Bridge priority, ranging from 0 to 61440. It is 32768 by default.

Command Mode

Global Configuration Mode

Example

Configure the bridge priority as 4096:

```
T1700G-28TQ(config)# spanning-tree priority 4096
```

26.13 spanning-tree tc-defend

Description

The **spanning-tree tc-defend** command is used to configure the TC Protect of Spanning Tree globally. To return to the default configuration, please use **no spanning-tree tc-defend** command. A switch removes MAC address entries upon receiving TC-BPDUs. If a malicious user continuously sends TC-BPDUs to a switch, the switch will be busy with removing MAC address entries, which may decrease the performance and stability of the network.

Syntax

```
spanning-tree tc-defend threshold threshold period period  
no spanning-tree tc-defend
```

Parameter

threshold — TC Threshold, ranging from 1 to 100 packets. By default, it is 20. TC Threshold is the maximum number of the TC-BPDUs received by the switch in a TC Protect Cycle.

period — TC Protect Cycle, ranging from 1 to 10 in seconds. By default, it is 5.

Command Mode

Global Configuration Mode

Example

Configure TC Threshold as 30 packets and TC Protect Cycle as 10 seconds:

```
T1700G-28TQ(config)# spanning-tree tc-defend threshold 30 period 10
```

26.14 spanning-tree timer

Description

The **spanning-tree timer** command is used to configure forward-time, hello-time and max-age of Spanning Tree. To return to the default configurations, please use **no spanning-tree timer** command.

Syntax

```
spanning-tree timer {[ forward-time forward-time ] [ hello-time hello-time ]  
[ max-age max-age ]}  
no spanning-tree timer
```

Parameter

forward-time — Forward Delay, which is the time for the port to transit its state after the network topology is changed. Forward Delay ranges from 4 to 30 in seconds and it is 15 by default. Otherwise, $2 * (\text{Forward Delay} - 1) \geq \text{Max Age}$.

hello-time — Hello Time, which is the interval to send BPDU packets, and used to test the links. Hello Time ranges from 1 to 10 in seconds and it is 2 by default. Otherwise, $2 * (\text{Hello Time} + 1) \leq \text{Max Age}$.

max-age — The maximum time the switch can wait without receiving a BPDU before attempting to reconfigure, ranging from 6 to 40 in seconds. By default, it is 20.

Command Mode

Global Configuration Mode

Example

Configure *forward-time*, *hello-time* and *max-age* for Spanning Tree as 16 seconds, 3 seconds and 22 seconds respectively:

```
T1700G-28TQ(config)# spanning-tree timer forward-time 16 hello-time 3
max-age 22
```

26.15 spanning-tree hold-count

Description

The **spanning-tree hold-count** command is used to configure the maximum number of BPDU packets transmitted per Hello Time interval. To return to the default configurations, please use **no spanning-tree hold-count** command.

Syntax

spanning-tree hold-count *value*

no spanning-tree hold-count

Parameter

value — The maximum number of BPDU packets transmitted per Hello Time interval, ranging from 1 to 20 in pps. By default, it is 5.

Command Mode

Global Configuration Mode

Example

Configure the hold-count of STP as 8pps:

```
T1700G-28TQ(config)# spanning-tree hold-count 8
```

26.16 spanning-tree max-hops

Description

The **spanning-tree max-hops** command is used to configure the maximum number of hops that occur in a specific region before the BPDU is discarded. To return to the default configurations, please use **no spanning-tree max-hops** command.

Syntax

spanning-tree max-hops *value*

no spanning-tree max-hops

Parameter

value — The maximum number of hops that occur in a specific region before the BPDU is discarded, ranging from 1 to 40 in hop. By default, it is 20.

Command Mode

Global Configuration Mode

Example

Configure the max-hops of STP as 30:

```
T1700G-28TQ(config)# spanning-tree max-hops 30
```

26.17 spanning-tree bpdudfilter

Description

The **spanning-tree bpdudfilter** command is used to enable the BPDU filter function for a port. With the function enabled, the port can be prevented from receiving and sending any BPDU packets. To disable the BPDU filter function, please use **no spanning-tree bpdudfilter** command.

Syntax

spanning-tree bpdudfilter

no spanning-tree bpdudfilter

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Enable the BPDU filter function for port 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree bpdupfilter
```

26.18 spanning-tree bpduguard

Description

The **spanning-tree bpduguard** command is used to enable the BPDU protect function for a port. With the BPDU protect function enabled, the port will set itself automatically as ERROR-PORT when it receives BPDU packets, and the port will disable the forwarding function for a while. To disable the BPDU protect function, please use **no spanning-tree bpduguard** command.

Syntax

```
spanning-tree bpduguard
no spanning-tree bpduguard
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the BPDU protect function for port 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree bpduguard
```

26.19 spanning-tree guard loop

Description

The **spanning-tree guard loop** command is used to enable the Loop Protect function for a port. Loop Protect is to prevent the loops in the network brought by recalculating STP because of link failures and network congestions. To disable the Loop Protect function, please use **no spanning-tree guard loop** command.

Syntax

```
spanning-tree guard loop
no spanning-tree guard loop
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Loop Protect function for port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree guard loop
```

26.20 spanning-tree guard root

Description

The **spanning-tree guard root** command is used to enable the Root Protect function for a port. With the Root Protect function enabled, the root bridge will set itself automatically as ERROR-PORT when receiving BPDU packets with higher priority, in order to maintain the role of root ridge. To disable the Root Protect function, please use **no spanning-tree guard root** command.

Syntax

spanning-tree guard root

no spanning-tree guard root

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Root Protect function for port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree guard root
```

26.21 spanning-tree guard tc

Description

The **spanning-tree guard tc** command is used to enable the TC Protect of Spanning Tree function for a port. To disable the TC Protect of Spanning Tree function, please use **no spanning-tree guard tc** command. A switch removes

MAC address entries upon receiving TC-BPDUs. If a malicious user continuously sends TC-BPDUs to a switch, the switch will be busy with removing MAC address entries, which may decrease the performance and stability of the network. With the Protect of Spanning Tree function enabled, you can configure the number of TC-BPDUs in a required time, so as to avoid the process of removing MAC addresses frequently.

Syntax

spanning-tree guard tc

no spanning-tree guard tc

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the TC Protect of Spanning Tree for port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree guard tc
```

26.22 spanning-tree mcheck

Description

The **spanning-tree mcheck** command is used to enable mcheck.

Syntax

spanning-tree mcheck

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable mcheck for port 2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# spanning-tree mcheck
```

26.23 show spanning-tree active

Description

The **show spanning-tree active** command is used to display the active information of spanning-tree.

Syntax

```
show spanning-tree active
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the active information of spanning-tree:

```
T1700G-28TQ(config)# show spanning-tree active
```

26.24 show spanning-tree bridge

Description

The **show spanning-tree bridge** command is used to display the bridge parameters.

Syntax

```
show spanning-tree bridge [ forward-time | hello-time | hold-count | max-age |  
max-hops | mode | priority | state ]
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the bridge parameters:

```
T1700G-28TQ(config)# show spanning-tree bridge
```

26.25 show spanning-tree interface

Description

The **show spanning-tree interface** command is used to display the spanning-tree information of all ports or a specified port.

Syntax

```
show spanning-tree interface [ gigabitEthernet port | ten-gigabitEthernet
port | port-channel lagid ] [ edge | ext-cost | int-cost | mode | p2p | priority | role |
state | status ]
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the spanning-tree information of all ports:

```
T1700G-28TQ(config)# show spanning-tree interface
```

Display the spanning-tree information of port 1/0/2:

```
T1700G-28TQ(config)# show spanning-tree interface gigabitEthernet 1/0/2
```

Display the spanning-tree mode information of port 1/0/2:

```
T1700G-28TQ(config)# show spanning-tree interface gigabitEthernet 1/0/2
mode
```

26.26 show spanning-tree interface-security

Description

The **show spanning-tree interface-security** command is used to display the protect information of all ports or a specified port.

Syntax

```
show spanning-tree interface-security [ gigabitEthernet port |
ten-gigabitEthernet port | port-channel lagid ] [ bpdufilter | bpduguard | loop |
root | tc | tc-defend ]
```

Parameter

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the protect information of all ports:

```
T1700G-28TQ(config)# show spanning-tree interface-security
```

Display the protect information of port 1:

```
T1700G-28TQ(config)# show spanning-tree interface-security
```

```
gigabitEthernet 1/0/1
```

Display the interface security bpdufilter information:

```
T1700G-28TQ(config)# show spanning-tree interface-security bpdufilter
```

26.27 show spanning-tree mst

Description

The **show spanning-tree mst** command is used to display the related information of MST Instance.

Syntax

```
show spanning-tree mst { configuration [ digest ] | instance instance-id
[ interface [ gigabitEthernet port | ten-gigabitEthernet port | port-channel
lagid ] ] }
```

Parameter

instance-id — Instance ID desired to show, ranging from 1 to 8.

port — The Ethernet port number.

lagid — The ID of the LAG.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the region information and mapping information of VLAN and MST Instance:

```
T1700G-28TQ(config)#show spanning-tree mst configuration
```

Display the related information of MST Instance 1:

```
T1700G-28TQ(config)#show spanning-tree mst instance 1
```

Display all the ports information of MST Instance 1:

```
T1700G-28TQ(config)#show spanning-tree mst instance 1 interface
```

Chapter 27 IGMP Snooping Commands

IGMP Snooping (Internet Group Management Protocol Snooping) is a multicast control mechanism running on Layer 2 switch. It can effectively prevent multicast groups being broadcasted in the network.

27.1 ip igmp snooping(global)

Description

The **ip igmp snooping** command is used to configure IGMP Snooping globally. To disable the IGMP Snooping function, please use **no ip igmp snooping** command.

Syntax

ip igmp snooping
no ip igmp snooping

Command Mode

Global Configuration Mode

Example

Enable IGMP Snooping function:

```
T1700G-28TQ(config)# ip igmp snooping
```

27.2 ip igmp snooping(interface)

Description

The **ip igmp snooping** command is used to enable the IGMP Snooping function for the desired port. To disable the IGMP Snooping function, please use **no ip igmp snooping** command.

Syntax

ip igmp snooping
no ip igmp snooping

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable IGMP Snooping function of port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# ip igmp snooping
```

27.3 ip igmp snooping rtime

Description

The **ip igmp snooping rtime** command is used to specify router port aging time globally. To restore the default timer, please use **no ip igmp snooping rtime** command.

Syntax

```
ip igmp snooping rtime rtime
no ip igmp snooping rtime
```

Parameter

rtime — Specify the aging time in seconds, ranging from 60 to 600. The default aging time is 300 seconds.

Command Mode

Global Configuration Mode

Example

Specify IGMP Snooping router port aging time as 100 seconds globally:

```
T1700G-28TQ(config)# ip igmp snooping rtime 100
```

27.4 ip igmp snooping mtime

Description

The **ip igmp snooping mtime** command is used to specify member port aging time globally. The default aging time is 260 seconds. To restore the default timer, please use **no ip igmp snooping mtime** command.

Syntax

```
ip igmp snooping mtime mtime
no ip igmp snooping mtime
```

Parameter

mtime — Specify the aging time in seconds, ranging from 60 to 600. The default aging time is 260 seconds.

Command Mode

Global Configuration Mode

Example

Specify IGMP Snooping member port aging time as 100 seconds globally:

```
T1700G-28TQ(config)# ip igmp snooping mtime 100
```

27.5 ip igmp snooping report-suppression

Description

The **ip igmp snooping report-suppression** command is used enable the IGMP report suppression function. When it is enabled, the switch forwards only the first IGMP report message per multicast group to the Layer 3 device, and the subsequent IGMP reports from the same multicast group are discarded. To disable the IGMP report suppression function and forward all the IGMP reports to the Layer 3 device, please use **no ip igmp snooping report-suppression** command. This function is disabled by default.

Syntax

```
ip igmp snooping report-suppression
```

```
no ip igmp snooping report-suppression
```

Command Mode

Global Configuration Mode

Example

Enable the IGMP report suppression function:

```
T1700G-28TQ(config)# ip igmp snooping report-suppression
```

27.6 ip igmp snooping immediate-leave

Description

The **ip igmp snooping immediate-leave** command is used to configure the Fast Leave function for port. To disable the Fast Leave function, please use **no ip igmp snooping immediate-leave** command.

Syntax

```
ip igmp snooping immediate-leave
```

```
no ip igmp snooping immediate-leave
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Fast Leave function for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# ip igmp snooping immediate-leave
```

27.7 ip igmp snooping drop-unknown

Description

The **ip igmp snooping drop-unknown** command is used to process the unknown multicast as discard. To disable the operation of processing the unknown multicast as discard, please use **no ip igmp snooping drop-unknown** command.

Syntax

```
ip igmp snooping drop-unknown
no ip igmp snooping drop-unknown
```

Command Mode

Global Configuration Mode

Example

Specify the operation to process unknown multicast as discard:

```
T1700G-28TQ(config)# ip igmp snooping drop-unknown
```

27.8 ip igmp snooping last-listener query-inteval

Description

The **ip igmp snooping last-listener query-inteval** command is used to specify the interval to send Specific Query Message. The default value is 1 second. To restore the default interval, please use **no ip igmp snooping last-listener query-inteval** command.

Syntax

```
ip igmp snooping last-listener query-inteval interval
no ip igmp snooping last-listener query-inteval
```

Parameter

interval — Specify the interval to send Specific Query Message in seconds, ranging from 1 to 5.

Command Mode

Global Configuration Mode

Example

Specify the interval of Specific Query Message to 3 seconds:

```
T1700G-28TQ(config)# ip igmp snooping last-listener query-interval 3
```

27.9 ip igmp snooping last-listener query-count

Description

The **ip igmp snooping last-listener query-count** command is used to specify the numbers of Specific Query Message to be sent. The default value is 2. To restore the default number, please use **no ip igmp snooping last-listener query-count** command.

Syntax

```
ip igmp snooping last-listener query-count num  
no ip igmp snooping last-listener query-count
```

Parameter

num — Specify the numbers of Specific Query Message to be sent, ranging from 1 to 5.

Command Mode

Global Configuration Mode

Example

Specify the number of Specific Query Message to 3:

```
T1700G-28TQ(config)# ip igmp snooping last-listener query-count 3
```

27.10 ip igmp snooping vlan-config

Description

The **ip igmp snooping vlan-config** command is used to enable VLAN IGMP Snooping function or to modify IGMP Snooping parameters, and to create static multicast IP entry. To disable the VLAN IGMP Snooping function, please use **no ip igmp snooping vlan-config** command. To restore the default values, please use **no ip igmp snooping vlan-config** with specified parameters.

Syntax

```
ip igmp snooping vlan-config vlan-id-list [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
ip igmp snooping vlan-config vlan-id-list static ip interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid }
```

```
no ip igmp snooping vlan-config vlan-id-list [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
no ip igmp snooping vlan-config vlan-id-list static ip interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid }
```

Parameter

vlan-id-list — The ID list of the VLAN desired to modify configuration, ranging from 1 to 4094, in the format of 1-3, 5.

router-time — Router Port Time. Within this time, if the switch does not receive IGMP query message from the router port, it will consider this port is not a router port any more. Router Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global router-time will be used.

member-time — Member Port Time. Within this time, if the switch does not receive IGMP report message from the member port, it will consider this port is not a member port any more. Member Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global member-time will be used.

port-list — The list of Ethernet ports.

lagid — The ID of the LAGs.

ip — The static multicast IP address.

Command Mode

Global Configuration Mode

Example

Enable the IGMP Snooping function and modify Router Port Time as 300 seconds, Member Port Time as 200 seconds for VLAN 1-3, and set the router port as 1/0/1 for VLAN 1-2:

```
T1700G-28TQ(config)# ip igmp snooping vlan-config 1-3 rtime 300  
T1700G-28TQ(config)# ip igmp snooping vlan-config 1-3 mtime 200  
T1700G-28TQ(config)# ip igmp snooping vlan-config 1-2 rport interface  
gigabitEthernet 1/0/1
```

Add static multicast IP address 225.0.0.1, which corresponds to VLAN 2, and configure the forward ports as ports 1/0/1-3:

```
T1700G-28TQ(config)# ip igmp snooping vlan-config 2 static 225.0.0.1  
interface gigabitEthernet 1/0/1-3
```

27.11 ip igmp snooping multi-vlan-config

Description

The **ip igmp snooping multi-vlan-config** command is used to create Multicast VLAN. To delete the corresponding Multicast VLAN, please use **no ip igmp snooping multi-vlan-config** command. To restore the default values, please use **no ip igmp snooping multi-vlan-config** with specified parameters.

Syntax

```
ip igmp snooping multi-vlan-config [ vlan-id ] [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
no ip igmp snooping multi-vlan-config [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

Parameter

vlan-id — The ID of the multicast VLAN desired to create or modify, ranging from 2 to 4094. If not specified, the default multicast VLAN will be selected.

router-time — Router Port Time. Within this time, if the switch does not receive IGMP query message from the router port, it will consider this port is not a router port any more. Router Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global router-time will be used.

member-time — Member Port Time. Within this time, if the switch does not receive IGMP report message from the member port, it will consider this port is not a member port any more. Member Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global member-time will be used.

port-list — The list of Ethernet ports.

lagid — The ID of the LAGs.

Command Mode

Global Configuration Mode

Example

Enable Multicast VLAN 3, and configure Router Port Time as 100 seconds, Member Port Time 100 seconds, and Static Router Port port 1/0/3:

```
T1700G-28TQ(config)# ip igmp snooping multi-vlan-config 3 rtime 100
```

```
T1700G-28TQ(config)# ip igmp snooping multi-vlan-config 3 mtime 100
```

```
T1700G-28TQ(config)# ip igmp snooping multi-vlan-config 3 rport
interface gigabitEthernet 1/0/3
```

27.12 ip igmp snooping querier vlan

Description

The **ip igmp snooping querier vlan** command is used to enable the IGMP Snooping Querier function of the VLAN(s). To disable the IGMP Snooping Querier function of certain VLANs, please use **no ip igmp snooping querier vlan** command.

Syntax

```
ip igmp snooping querier vlan vlan-id
no ip igmp snooping querier vlan vlan-id
```

Parameter

vlan-id — VLAN ID, ranging from 1 to 4094.

Command Mode

Global Configuration Mode

Example

Enable the IGMP Snooping Querier function of VLAN 1:

```
T1700G-28TQ(config)#ip igmp snooping querier vlan 1
```

27.13 ip igmp snooping querier vlan (general query)

Description

The **ip igmp snooping querier vlan** command is used to configure the parameters for IGMP Snooping Querier to send a general query frame. To return to the default configuration, please use **no ip igmp snooping querier vlan** command.

Syntax

```
ip igmp snooping querier vlan vlan-id { query-interval interval |
max-response-time response-time | general-query source-ip ip-addr }
no ip igmp snooping querier vlan vlan-id { query-interval |
max-response-time | general-query source-ip }
```

Parameter

vlan-id — VLAN ID, ranging from 1 to 4094.

interval — The time interval to send a general query frame by IGMP Snooping Querier, ranging from 10 to 300 (Seconds). By default, it is 60 seconds.

response-time — The maximal time for the host to respond to a general query frame, ranging from 1 to 25 (Seconds). By default, it is 10 Seconds.

ip-addr — The source IP of the general query frame sent by IGMP Snooping Querier. It should not be a multicast IP or a broadcast IP. By default, it is 192.168.0.1.

Command Mode

Global Configuration Mode

Example

For VLAN 2, specify its query-interval as 200 seconds, and the response-time as 20 seconds:

```
T1700G-28TQ(config)#ip igmp snooping querier vlan 2 query-interval 200
T1700G-28TQ(config)#ip igmp snooping querier vlan 2 max-response-time
20
```

27.14 ip igmp snooping max-groups

Description

The **ip igmp snooping max-groups** command is used to configure the maximum number of groups that a port can join in. The **ip igmp snooping max-groups action** is used to configure the action that the port takes when it receives an IGMP report message and the maximum number of entries is in the forwarding table. To remove the maximum group limitation and return to the default of no limitation on the specified port, please use the **no ip igmp snooping max-groups** command. To return to the default action of dropping the report, please use the **no ip igmp snooping max-groups action** command. These commands only apply to the dynamic multicast groups.

Syntax

```
ip igmp snooping max-groups [ maxgroup ]
ip igmp snooping max-groups action { drop | replace }
no ip igmp snooping max-groups
no ip igmp snooping max-groups action
```

Parameter

maxgroup — Specify the maximum numbers of groups that the port can join. It ranges from 0 to 1000 and the default value is 1000.

drop — When the number of the dynamic multicast groups that a port joins has exceeded the max-group, the port will not join any new multicast group.

replace — When the number of the dynamic multicast groups that a port joins has exceeded the max-group, the newly joined multicast group will replace an existing multicast group with the lowest multicast group address.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Specify the maximum numbers of groups that ports 1/0/2-5 can join as 10, and configure the throttling action as replace:

```
T1700G-28TQ(config)#interface range gigabitEthernet 1/0/2-5
T1700G-28TQ(config-if-range)#ip igmp snooping max-groups 10
T1700G-28TQ(config-if-range)#ip igmp snooping max-groups action
replace
```

27.15 ip igmp profile

Description

The **ip igmp profile** command is used to create the configuration profile. To delete the corresponding profile, please use **no ip igmp profile** command.

Syntax

```
ip igmp profile id
no ip igmp profile id
```

Parameter

id — Specify the id of the configuration profile, ranging from 1 to 999.

Command Mode

Global Configuration Mode

Example

Create the profile 1:

```
T1700G-28TQ(config)# ip igmp profile 1
```

27.16 deny

Description

The **deny** command is used to configure the filtering mode of profile as deny.

Syntax

deny

Command Mode

Profile Configuration Mode

Example

Configure the filtering mode of profile 1 as deny:

```
T1700G-28TQ(config)# ip igmp profile 1
T1700G-28TQ(config-igmp-profile)#deny
```

27.17 permit

Description

The **permit** command is used to configure the filtering mode of profile as permit.

Syntax

permit

Command Mode

Profile Configuration Mode

Example

Configure the filtering mode of profile 1 as permit:

```
T1700G-28TQ(config)# ip igmp profile 1
T1700G-28TQ(config-igmp-profile)#permit
```

27.18 range

Description

The **range** command is used to configure the range of the profile's filtering multicast address. To delete the corresponding filtering multicast address, please use **no range** command. A profile contains 16 filtering IP-range entries at most.

Syntax

`range start-ip end-ip`

`no range start-ip end-ip`

Parameter

start-ip — The start filtering multicast IP address.

end-ip — The end filtering multicast IP address.

Command Mode

Profile Configuration Mode

Example

Configure one of the filter multicast address entry as range 225.1.1.1 to 226.3.2.1 in profile 1:

```
T1700G-28TQ(config)# ip igmp profile 1
T1700G-28TQ(config-igmp-profile)#range 225.1.1.1 226.3.2.1
```

27.19 ip igmp filter

Description

The **ip igmp filter** command is used to bind the specified profile to the interface. To delete the binding, please use **no ip igmp filter** command.

Syntax

`ip igmp filter profile-id`

`no ip igmp filter`

Parameter

profile-id — Specify the profile ID, ranging from 1 to 999.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Bind profile 1 to interface gigabitEthernet 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# ip igmp filter 1
```

27.20 clear ip igmp snooping statistics

Description

The **clear ip igmp snooping statistics** command is used to clear the statistics of the IGMP packets.

Syntax

```
clear ip igmp snooping statistics
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Clear the statistics of the IGMP packets:

```
T1700G-28TQ(config)# clear ip igmp snooping statistics
```

27.21 show ip igmp snooping

Description

The **show ip igmp snooping** command is used to display the global configuration of IGMP snooping.

Syntax

```
show ip igmp snooping
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the global configuration of IGMP:

```
T1700G-28TQ# show ip igmp snooping
```

27.22 show ip igmp snooping interface

Description

The **show ip igmp snooping interface** command is used to display the port configuration of IGMP snooping.

Syntax

```
show ip igmp snooping interface [ gigabitEthernet port-list |  
ten-gigabitEthernet port-list ] { basic-config | max-groups | packet-stat }  
show ip igmp snooping interface [ port-channel [ lag-list ] ] { basic-config |  
max-groups }
```

Parameter

port-list — The list of Ethernet ports.

basic-config | *max-groups* | *packet-stat* — The related configuration information selected to display.

lag-list — The list of port channels.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the IGMP basic configuration of all ports and LAGs:

```
T1700G-28TQ# show ip igmp snooping interface basic-config
```

Display the IGMP basic configuration of port 1/0/2:

```
T1700G-28TQ# show ip igmp snooping interface gigabitEthernet 1/0/2
basic-config
```

Display the IGMP packet statistics of ports 1/0/1-4:

```
T1700G-28TQ# show ip igmp snooping interface gigabitEthernet 1/0/1-4
packet-stat
```

27.23 show ip igmp snooping vlan

Description

The **show ip igmp snooping vlan** command is used to display the VLAN configuration of IGMP snooping.

Syntax

```
show ip igmp snooping vlan [ vlan-id ]
```

Parameter

vlan-id — The VLAN ID selected to display.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the IGMP snooping configuration information of VLAN 2:

```
T1700G-28TQ# show ip igmp snooping vlan 2
```

27.24 show ip igmp snooping multi-vlan

Description

The **show ip igmp snooping multi-vlan** command is used to display the Multicast VLAN configuration.

Syntax

```
show ip igmp snooping multi-vlan
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Multicast VLAN configuration:

```
T1700G-28TQ# show ip igmp snooping multi-vlan
```

27.25 show ip igmp snooping groups

Description

The **show ip igmp snooping groups** command is used to display the information of all IGMP snooping groups. It can be extended to some other commands to display the dynamic and static multicast information of a selected VLAN.

Syntax

```
show ip igmp snooping groups [ vlan { vlan-id } ] [ multicast_addr | count |  
dynamic | dynamic count | static | static count ]
```

Parameter

vlan-id — The VLAN ID selected to display the information of all multicast items.

multicast_addr — IP address of the multicast group.

count — The numbers of all multicast groups.

dynamic — Display dynamic multicast groups.

dynamic count — The numbers of all dynamic multicast groups.

static — Display static multicast groups.

static count — The numbers of all static multicast groups.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of all IGMP snooping groups:

```
T1700G-28TQ#show ip igmp snooping groups
```

Display all the multicast entries in VLAN 5:

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5
```

Display the count of multicast entries in VLAN 5:

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5 count
```

Display the dynamic multicast groups of VLAN 5

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5 dynamic
```

Display the static multicast groups of VLAN 5

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5 static
```

Display the count of dynamic multicast entries of VLAN 5

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5 dynamic count
```

Display the count of static multicast entries of VLAN 5

```
T1700G-28TQ(config)#show ip igmp snooping groups vlan 5 static count
```

27.26 show ip igmp snooping querier

Description

The **show ip igmp snooping querier** command is used to display the Querier configuration of VLAN.

Syntax

```
show ip igmp snooping querier [ vlan vlan-id ]
```

Parameter

vlan-id —The VLAN ID selected to display, ranging from 1 to 4094.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display all Querier information:

```
T1700G-28TQ(config)# show ip igmp snooping querier
```

27.27 show ip igmp profile

Description

The **show ip igmp profile** command is used to display the configuration information of all the profiles or a specific profile.

Syntax

```
show ip igmp profile [ id ]
```

Parameter

id — Specify the ID of the profile, ranging from 1 to 999.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of all profiles:

```
T1700G-28TQ(config)# show ip igmp profile
```

Chapter 28 MLD Snooping Commands

MLD Snooping (Multicast Listener Discovery Snooping) is a multicast control mechanism running on Layer 2 switch. It can effectively prevent multicast groups being broadcasted in the IPv6 network.

28.1 ipv6 mld snooping(global)

Description

The **ipv6 mld snooping** command is used to enable MLD Snooping function globally. If this function is disabled, all related MLD Snooping function would not work. To disable this function, please use **no ipv6 mld snooping** command.

Syntax

ipv6 mld snooping
no ipv6 mld snooping

Command Mode

Global Configuration Mode

Example

Enable MLD Snooping:

```
T1700G-28TQ(config)# ipv6 mld snooping
```

28.2 ipv6 mld snooping(interface)

Description

The **ipv6 mld snooping** command is used to enable MLD Snooping function on the desired port. To disable this function, please use **no ipv6 mld snooping** command.

Syntax

ipv6 mld snooping
no ipv6 mld snooping

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable MLD Snooping on port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
```

```
T1700G-28TQ(config-if)# ipv6 mld snooping
```

28.3 ipv6 mld snooping rtime

Description

The **ipv6 mld snooping rtime** command is used to specify router port aging time globally. To restore the default timer, please use **no ipv6 mld snooping rtime** command.

Syntax

```
ipv6 mld snooping rtime rtime  
no ipv6 mld snooping rtime
```

Parameter

rtime — Specify the aging time in seconds, ranging from 60 to 600. The default aging time is 300 seconds.

Command Mode

Global Configuration Mode

Example

Specify MLD Snooping router port aging time as 100 seconds globally:

```
T1700G-28TQ(config)# ipv6 mld snooping rtime 100
```

28.4 ipv6 mld snooping mtime

Description

The **ipv6 mld snooping mtime** command is used to specify member port aging time globally. The default aging time is 260 seconds. To restore the default timer, please use **no ipv6 mld snooping mtime** command.

Syntax

```
ipv6 mld snooping mtime mtime  
no ipv6 mld snooping mtime
```

Parameter

mtime — Specify the aging time in seconds, ranging from 60 to 600. The default aging time is 260 seconds.

Command Mode

Global Configuration Mode

Example

Specify MLD Snooping member port aging time as 100 seconds globally:

```
T1700G-28TQ(config)# ipv6 mld snooping mtime 100
```

28.5 ipv6 mld snooping report-suppression

Description

The **ipv6 mld snooping report-suppression** command is used enable the MLD report suppression function. When it is enabled, the switch forwards only the first MLD report message per mulicast group to the Layer 3 device, and the subsequent MLD reports from the same multicast group are discarded. To disable the MLD report suppression function and forward all the MLD reports to the Layer 3 device, please use **no ipv6 mld snooping report-suppression** command. This function is disabled by default.

Syntax

```
ipv6 mld snooping report-suppression  
no ipv6 mld snooping report-suppression
```

Command Mode

Global Configuration Mode

Example

Enable MLD Report message suppression function:

```
T1700G-28TQ(config)# ipv6 mld snooping report-suppression
```

28.6 ipv6 mld snooping immediate-leave

Description

The **ipv6 mld snooping immediate-leave** command is used to configure the Fast Leave function for port. To disable the Fast Leave function, please use **no ipv6 mld snooping immediate-leave** command.

Syntax

```
ipv6 mld snooping immediate-leave  
no ipv6 mld snooping immediate-leave
```

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable the Fast Leave function for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
```

```
T1700G-28TQ(config-if)# ipv6 mld snooping immediate-leave
```

28.7 ipv6 mld snooping drop-unknown

Description

The **ipv6 mld snooping drop-unknown** command is used to enable the unknown multicast packets filter function. To disable this function, please use **no ipv6 mld snooping drop-unknown** command. By default, it is disabled.

Syntax

```
ipv6 mld snooping drop-unknown  
no ipv6 mld snooping drop-unknown
```

Command Mode

Global Configuration Mode

Example

Enable unknown multicast filter function:

```
T1700G-28TQ(config)# ipv6 mld snooping drop-unknown
```

28.8 ipv6 mld snooping last-listener query-inteval

Description

The **ipv6 mld snooping last-listener query-inteval** command is used to specify the interval to send Specific Query Message. The default value is 1 second. To restore the default interval, please use **no ipv6 mld snooping last-listener query-inteval** command.

Syntax

```
ipv6 mld snooping last-listener query-inteval interval  
no ipv6 mld snooping last-listener query-inteval
```

Parameter

interval — Specify the interval to send Specific Query Message in seconds, ranging from 1 to 5.

Command Mode

Global Configuration Mode

Example

Specify the interval of Specific Query Message to 3 seconds:

```
T1700G-28TQ(config)# ipv6 mld snooping last-listener query-inteval 3
```

28.9 ipv6 mld snooping last-listener query-count

Description

The **ipv6 mld snooping last-listener query-count** command is used to specify the numbers of Specific Query Message to be sent. The default value is 2. To restore the default number, please use **no ipv6 mld snooping last-listener query-count** command.

Syntax

```
ipv6 mld snooping last-listener query-count num  
no ipv6 mld snooping last-listener query-count
```

Parameter

num — Specify the numbers of Specific Query Message to be sent, ranging from 1 to 5.

Command Mode

Global Configuration Mode

Example

Specify the number of Specific Query Message to 3:

```
T1700G-28TQ(config)# ipv6 mld snooping last-listener query-count 3
```

28.10 ipv6 mld snooping vlan-config

Description

The **ipv6 mld snooping vlan-config** command is used to enable VLAN MLD Snooping function or to modify MLD Snooping parameters, and to create static multicast IP entry. To disable the VLAN MLD Snooping function, please use **no ipv6 mld snooping vlan-config** command.

Syntax

```
ipv6 mld snooping vlan-config vlan-id-list [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
ipv6 mld snooping vlan-config vlan-id-list static ip interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid }
```

```
no ipv6 mld snooping vlan-config vlan-id-list [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
no ipv6 mld snooping vlan-config vlan-id-list static ip interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid }
```

Parameter

vlan-id-list — The ID list of the VLAN desired to modify configuration, ranging from 1 to 4094, in the format of 1-3, 5.

router-time — Router Port Time. Within this time, if the switch does not receive MLD query message from the router port, it will consider this port is not a router port any more. Router Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global router-time will be used.

member-time — Member Port Time. Within this time, if the switch does not receive MLD report message from the member port, it will consider this port is not a member port any more. Member Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global member-time will be used.

port-list — The list of Ethernet ports.

lagid — The ID of the LAGs.

ip — The static multicast IP address.

Command Mode

Global Configuration Mode

Example

Enable the MLD Snooping function and modify Router Port Time as 300 seconds, Member Port Time as 200 seconds for VLAN 1-3, and set the router port as 1/0/1 for VLAN 1-2:

```
T1700G-28TQ(config)# ipv6 mld snooping vlan-config 1-3 rtime 300
T1700G-28TQ(config)# ipv6 mld snooping vlan-config 1-3 mtime 200
T1700G-28TQ(config)# ipv6 mld snooping vlan-config 1-2 rport interface
gigabitEthernet 1/0/1
```

Add static multicast IP address ff01::1234:01, which corresponds to VLAN 2, and configure the forward ports as ports 1/0/1-3:

```
T1700G-28TQ(config)# ipv6 mld snooping vlan-config 2 static ff01::1234:01
interface gigabitEthernet 1/0/1-3
```

28.11 ipv6 mld snooping multi-vlan-config

Description

The **ipv6 mld snooping multi-vlan-config** command is used to create Multicast VLAN. To delete the corresponding Multicast VLAN, please use **no ipv6 mld snooping multi-vlan-config** command. To restore the default values,

please use **no ipv6 mld snooping multi-vlan-config** with specified parameters.

Syntax

```
ipv6 mld snooping multi-vlan-config [ vlan-id ] [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

```
no ipv6 mld snooping multi-vlan-config [ rtime router-time | mtime member-time | rport interface { gigabitEthernet port-list | ten-gigabitEthernet port-list | port-channel lagid } ]
```

Parameter

vlan-id — The ID of the multicast VLAN desired to create or modify, ranging from 2 to 4094. If not specified, the default multicast VLAN will be selected.

router-time — Router Port Time. Within this time, if the switch does not receive MLD query message from the router port, it will consider this port is not a router port any more. Router Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global router-time will be used.

member-time — Member Port Time. Within this time, if the switch does not receive MLD report message from the member port, it will consider this port is not a member port any more. Member Port Time ranges from 60 to 600 in seconds. By default, it is 0 and the global member-time will be used.

port-list — The list of Ethernet ports.

lagid — The ID of the LAGs.

Command Mode

Global Configuration Mode

Example

Enable Multicast VLAN 3, and configure Router Port Time as 100 seconds, Member Port Time 100 seconds, and Static Router Port port 1/0/3:

```
T1700G-28TQ(config)# ipv6 mld snooping multi-vlan-config 3 rtime 100  
T1700G-28TQ(config)# ipv6 mld snooping multi-vlan-config 3 mtime 100  
T1700G-28TQ(config)# ipv6 mld snooping multi-vlan-config 3 rport  
interface gigabitEthernet 1/0/3
```

28.12 ipv6 mld snooping querier vlan

Description

The **ipv6 mld snooping querier vlan** command is used to enable the MLD Querier function. To disable this function, please use **no ipv6 mld snooping querier vlan** command.

Syntax

```
ipv6 mld snooping querier vlan vlan-id  
no ipv6 mld snooping querier vlan vlan-id
```

Parameter

vlan-id — The VLAN that enables the MLD querier function, ranging from 1 to 4094.

Command Mode

Global Configuration Mode

Example

Enable MLD Querier function on VLAN 2:

```
T1700G-28TQ(config)# ipv6 mld snooping querier vlan 2
```

28.13 ipv6 mld snooping querier vlan (general query)

Description

The **ipv6 mld snooping querier vlan** command is used to configure the parameters for MLD Snooping Querier to send a general query frame. To return to the default configuration, please use **no ipv6 mld snooping querier vlan** command.

Syntax

```
ipv6 mld snooping querier vlan vlan-id { query-interval interval |  
max-response-time response-time | general-query source-ip ip-addr }  
no ipv6 mld snooping querier vlan vlan-id { query-interval |  
max-response-time | general-query source-ip }
```

Parameter

vlan-id — VLAN ID, ranging from 1 to 4094.

interval — The time interval to send a general query frame by MLD Snooping Querier, ranging from 10 to 300 (Seconds). By default, it is 60 seconds.

response-time — The maximal time for the host to respond to a general query frame, ranging from 1 to 25 (Seconds). By default, it is 10 Seconds.

ip-addr — The source IP of the general query frame sent by MLD Snooping Querier. It should not be a multicast IP or a broadcast IP. By default, it is fe80::02ff:ffff:fe00:0001.

Command Mode

Global Configuration Mode

Example

For VLAN 2, specify its query-interval as 200 seconds, and the response-time as 20 seconds:

```
T1700G-28TQ(config)#ipv6 mld snooping querier vlan 2 query-interval 200
T1700G-28TQ(config)#ipv6 mld snooping querier vlan 2
max-response-time 20
```

28.14 ipv6 mld snooping max-groups

Description

The **ipv6 mld snooping max-groups** command is used to configure the maximum number of groups that a port can join in. The **ipv6 mld snooping max-groups action** is used to configure the action that the port takes when it receives an MLD report message and the maximum number of entries is in the forwarding table. To remove the maximum group limitation and return to the default of no limitation on the specified port, please use the **no ipv6 mld snooping max-groups** command. To return to the default action of dropping the report, please use the **no ipv6 mld snooping max-groups action** command. These commands only apply to the dynamic multicast groups.

Syntax

```
ipv6 mld snooping max-groups [ maxgroup ]
ipv6 mld snooping max-groups action { drop | replace }
no ipv6 mld snooping max-groups
no ipv6 mld snooping max-groups action
```

Parameter

maxgroup — Specify the maximum numbers of groups that the port can join. It ranges from 0 to 1000 and the default value is 1000.

drop — When the number of the dynamic multicast groups that a port joins has exceeded the max-group, the port will not join any new multicast group.

replace — When the number of the dynamic multicast groups that a port joins has exceeded the max-group, the newly joined multicast group will replace an existing multicast group with the lowest multicast group address.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Specify the maximum numbers of groups that ports 1/0/2-5 can join as 10, and configure the throttling action as replace:

```
T1700G-28TQ(config)#interface range gigabitEthernet 1/0/2-5
T1700G-28TQ(config-if-range)#ipv6 mld snooping max-groups 10
T1700G-28TQ(config-if-range)#ipv6 mld snooping max-groups action
replace
```

28.15 ipv6 mld profile

Description

The **ipv6 mld profile** command is used to create the configuration profile. To delete the corresponding profile, please use **no ipv6 mld profile** command.

Syntax

```
ipv6 mld profile id
no ipv6 mld profile id
```

Parameter

id — Specify the id of the configuration profile, ranging from 1 to 999.

Command Mode

Global Configuration Mode

Example

Create the profile 1:

```
T1700G-28TQ(config)# ipv6 mld profile 1
```

28.16 deny

Description

The **deny** command is used to configure the filtering mode of profile as deny.

Syntax

deny

Command Mode

Profile Configuration Mode

Example

Configure the filtering mode of profile 1 as deny:

```
T1700G-28TQ(config)# ipv6 mld profile 1
T1700G-28TQ(config-mld-profile)#deny
```

28.17 permit

Description

The **permit** command is used to configure the filtering mode of profile as permit.

Syntax

permit

Command Mode

Profile Configuration Mode

Example

Configure the filtering mode of profile 1 as permit:

```
T1700G-28TQ(config)# ipv6 mld profile 1
T1700G-28TQ(config-mld-profile)#permit
```

28.18 range

Description

The **range** command is used to configure the range of the profile's filtering multicast address. To delete the corresponding filtering multicast address, please use **no range** command. A profile contains 16 filtering IP-range entries at most.

Syntax

range *start-ip end-ip*

no range *start-ip end-ip*

Parameter

start-ip — Start IPv6 multicast address of the filter entry..

end-ip — End IPv6 multicast address of the filter entry.

Command Mode

Profile Configuration Mode

Example

Configure one of the filter multicast address entry as range ff80::1234 to ff80::1235 in profile 1:

```
T1700G-28TQ(config)# ipv6 mld profile 1
T1700G-28TQ(config-mld-profile)#range ff80::1234 ff80::1235
```

28.19 ipv6 mld filter

Description

The **ipv6 mld filter** command is used to bind the specified profile to the interface. To delete the binding, please use **no ipv6 mld filter** command.

Syntax

ipv6 mld filter *profile-id*

no ipv6 mld filter

Parameter

profile-id — Specify the profile ID, ranging from 1 to 999.

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Bind profile 1 to interface gigabitEthernet 1/0/2:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/2
T1700G-28TQ(config-if)# ipv6 mld filter 1
```

28.20 clear ipv6 mld snooping statistics

Description

The **clear ipv6 mld snooping statistics** command is used to clear the statistics of the MLD packets.

Syntax

```
clear ipv6 mld snooping statistics
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Clear the statistics of the MLD packets:

```
T1700G-28TQ(config)# clear ipv6 mld snooping statistics
```

28.21 show ipv6 mld snooping

Description

The **show ipv6 mld snooping** command is used to display the global configuration of MLD Snooping.

Syntax

```
show ipv6 mld snooping
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the global configuration of MLD Snooping:

```
T1700G-28TQ(config)# show ipv6 mld snooping
```

28.22 show ipv6 mld snooping interface

Description

The **show ipv6 mld snooping interface** command is used to display the port configuration of MLD snooping.

Syntax

```
show ipv6 mld snooping interface [ gigabitEthernet port-list |  
ten-gigabitEthernet port-list ] { basic-config | max-groups | packet-stat }
```

```
show ipv6 mld snooping interface [ port-channel [ lagid ] ] { basic-config |  
max-groups }
```

Parameter

port-list — The list of Ethernet ports.

basic-config | *max-groups* | *packet-stat* — The related configuration information selected to display.

lag-list — The list of port channels.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the MLD basic configuration configuration of all ports and LAGs:

```
T1700G-28TQ# show ipv6 mld snooping interface basic-config
```

Display the MLD basic configuration of port 1/0/2:

```
T1700G-28TQ# show ipv6 mld snooping interface gigabitEthernet 1/0/2
basic-config
```

Display the MLD packet statistics of ports 1/0/1-4:

```
T1700G-28TQ# show ipv6 mld snooping interface gigabitEthernet 1/0/1-4
packet-stat
```

28.23 show ipv6 mld snooping vlan

Description

The **show ipv6 mld snooping vlan** command is used to display VLAN information of MLD Snooping.

Syntax

```
show ipv6 mld snooping vlan [ vlan-id ]
```

Parameter

vlan-id — The VLAN ID selected to display, ranging from 1 to 4094.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display all of the VLAN information:

```
T1700G-28TQ(config)# show ipv6 mld snooping vlan
```

28.24 show ipv6 mld snooping multi-vlan

Description

The **show ipv6 mld snooping multi-vlan** command is used to display the Multicast VLAN configuration.

Syntax

```
show ipv6 mld snooping multi-vlan
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Multicast VLAN configuration:

```
T1700G-28TQ# show ipv6 mld snooping multi-vlan
```

28.25 show ipv6 mld snooping groups

Description

The **show ipv6 mld snooping groups** command is used to display multicast groups.

Syntax

```
show ipv6 mld snooping groups [ vlan { vlan-id } ] [ ipv6_multicast_addr |  
count | dynamic | dynamic count | static | static count ]
```

Parameter

vlan-id —The VLAN ID selected to display the information of all multicast items.

ipv6_multicast_addr — IPv6 address of the multicast group.

count— The numbers of all multicast groups.

dynamic— Display dynamic multicast groups.

dynamic count— The numbers of all dynamic multicast groups.

static— Display static multicast groups.

static count— The numbers of all static multicast groups.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display all of the multicast groups:

```
T1700G-28TQ(config)# show ipv6 mld snooping groups
```

28.26 show ipv6 mld snooping querier

Description

The **show ipv6 mld snooping querier** command is used to display the Querier configuration of VLAN.

Syntax

```
show ipv6 mld snooping querier [ vlan vlan-id ]
```

Parameter

vlan-id —The VLAN ID selected to display, ranging from 1 to 4094.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display all Querier information:

```
T1700G-28TQ(config)# show ipv6 mld snooping querier
```

28.27 show ipv6 mld profile

Description

The **show ipv6 mld profile** command is used to display the configuration information of all the profiles or a specific profile.

Syntax

```
show ipv6 mld profile [ id ]
```

Parameter

id — Specify the ID of the profile, ranging from 1 to 999.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration information of all profiles:

```
T1700G-28TQ(config)# show ipv6 mld profile
```

Chapter 29 SNMP Commands

SNMP (Simple Network Management Protocol) functions are used to manage the network devices for a smooth communication, which can facilitate the network administrators to monitor the network nodes and implement the proper operation.

29.1 snmp-server

Description

The **snmp-server** command is used to enable the SNMP function. By default, it is disabled. To return to the default configuration, please use **no snmp-server** command.

Syntax

```
snmp-server  
no snmp-server
```

Command Mode

Global Configuration Mode

Example

Enable the SNMP function:

```
T1700G-28TQ(config)# snmp-server
```

29.2 snmp-server view

Description

The **snmp-server view** command is used to add View. To delete the corresponding View, please use **no snmp-server view** command. The OID (Object Identifier) of the SNMP packets is used to describe the managed objects of the switch, and the MIB (Management Information Base) is the set of the OIDs. The SNMP View is created for the SNMP management station to manage MIB objects.

Syntax

```
snmp-server view name mib-oid { include | exclude }  
no snmp-server view name mib-oid
```

Parameter

name — The entry name of View, ranging from 1 to 16 characters. Each View includes several entries with the same name.

mib-oid — MIB Object ID. It is the Object Identifier (OID) for the entry of View, ranging from 1 to 61 characters.

include | exclude — View Type, with *include* and *exclude* options. They represent the view entry can/cannot be managed by the SNMP management station individually.

Command Mode

Global Configuration Mode

Example

Add a View named *view1*, configuring the OID as 1.3.6.1.6.3.20, and this OID can be managed by the SNMP management station:

```
T1700G-28TQ(config)# snmp-server view view1 1.3.6.1.6.3.20 include
```

29.3 snmp-server group

Description

The **snmp-server group** command is used to manage and configure the SNMP group. To delete the corresponding SNMP group, please use **no snmp-server group** command. SNMP v3 provides the VACM (View-based Access Control Model) and USM (User-Based Security Model) mechanisms for authentication. The users in the SNMP Group can manage the device via the Read View, Write View and Notify View. And the authentication mode and the privacy mode guarantee the high security for the communication between the management station and the managed device.

Syntax

```
snmp-server group name [ smode { v1 | v2c | v3 } ] [ slev { noAuthNoPriv | authNoPriv | authPriv } ] [ read read-view ] [ write write-view ] [ notify notify-view ]
```

```
no snmp-server group name smode { v1 | v2c | v3 } slev { noAuthNoPriv | authNoPriv | authPriv }
```

Parameter

name — The SNMP Group name, ranging from 1 to 16 characters. The Group Name, Security Model and Security Level compose the identifier of the SNMP Group. These three items of the Users in one group should be the same.

smode — Security Model, with v1、v2c and v3 options. They represent SNMP v1, SNMP v2c and SNMP v3.

slev — The Security Level of SNMP v3 Group. There are three options, including noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption) and authPriv (authorization and encryption).

By default, the Security Level is noAuthNoPriv. There is no need to configure this in SNMP v1 Mode and SNMP v2c Mode.

read-view — Select the View to be the Read View. The management access is restricted to read-only, and changes cannot be made to the assigned SNMP View.

write-view — Select the View to be the Write View. The management access is writing only and changes can be made to the assigned SNMP View. The View defined both as the Read View and the Write View can be read and modified.

notify-view — Select the View to be the Notify View. The management station can receive notification messages of the assigned SNMP view generated by the switch's SNMP agent.

Command Mode

Global Configuration mode

Example

Add a group, and configure the name as group 1, the Security Model as SNMP v3, the security level as authNoPriv, the management access to the assigned View viewDefault as read-write, besides the notification messages sent by View viewDefault can be received by Management station:

```
T1700G-28TQ(config)# snmp-server group group1 smode v3 slev
authNoPriv read viewDefault write viewDefault notify viewDefault
```

Delete group 1:

```
T1700G-28TQ(config)# no snmp-server group group1 smode v3 slev
authNoPriv
```

29.4 snmp-server user

Description

The **snmp-server user** command is used to add User. To delete the corresponding User, please use **no snmp-server user** command. The User in an SNMP Group can manage the switch via the management station software. The User and its Group have the same security level and access right.

Syntax

```
snmp-server user name { local | remote } group-name [ smode { v1 | v2c | v3 } ]
[ slev { noAuthNoPriv | authNoPriv | authPriv } ] [ cmode { none | MD5 | SHA } ]
[ cpwd confirm-pwd ] [ emode { none | DES } ] [ epwd encrypt-pwd ]

no snmp-server user name
```

Parameter

name — User Name, ranging from 1 to 16 characters.

local | remote — User Type, with local and remote options. Local indicates that the user is connected to a local SNMP engine, while remote means that the user is connected to a remote SNMP engine.

group-name — The Group Name of the User. The User is classified to the corresponding Group according to its Group Name, Security Model and Security Level.

smode — The Security Model of the User, with v1, v2c and v3 options. By default, the option is v1. The Security Model of the User must be the same with that of the Group which the User belongs to.

slev — The Security Level of SNMP v3 Group. There are three options, including noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption) and authPriv (authorization and encryption). By default, the option is “noAuthNoPriv”. The Security Level of the User must be the same with that of the Group which the User belongs to.

cmode — The Authentication Mode of the SNMP v3 User, with none, MD5 and SHA options. None indicates no authentication method is used, MD5 indicates the port authentication is performed via HMAC-MD5 algorithm and SHA indicates the port authentication is performed via SHA (Secure Hash Algorithm). SHA authentication mode has a higher security than MD5 mode. By default, the Authentication Mode is “none”.

confirm-pwd — Authentication Password, ranging from 1 to 16 characters. The question marks and spaces are not allowed. This password in the configuration file will be displayed in the symmetric encrypted form.

emode — The Privacy Mode of the SNMP v3 User, with none and DES options. None indicates no privacy method is used, and DES indicates DES encryption method is used. By default, the Privacy Mode is “none”.

encrypt-pwd — Privacy Password, ranging from 1 to 16 characters. The question marks and spaces are not allowed. This password in the configuration file will be displayed in the symmetric encrypted form.

Command Mode

Global Configuration Mode

Example

Add Local User admin to Group group2, and configure the Security Model of the user as v3, the Security Level of the group as authPriv, the Authentication Mode of the user as MD5, the Authentication Password as 11111, the Privacy Mode as DES, and the Privacy Password as 22222:

```
T1700G-28TQ(config)# snmp-server user admin local group2 smode v3 slev
authPriv cmode MD5 cpwd 11111 emode DES epwd 22222
```

29.5 snmp-server community

Description

The **snmp-server community** command is used to add Community. To delete the corresponding Community, please use **no snmp-server community** command. SNMP v1 and SNMP v2c adopt community name authentication. The community name can limit access to the SNMP agent from SNMP network management station, functioning as a password.

Syntax

```
snmp-server community name { read-only | read-write } mib-view
no snmp-server community name
```

Parameter

name — Community Name, ranging from 1 to 16 characters.

read-only | read-write — The access rights of the community, with read-only and read-write options.

mib-view — The MIB View for the community to access.

Command Mode

Global Configuration Mode

Example

Add community public, and the community has read-write management right to View viewDefault:

```
T1700G-28TQ(config)# snmp-server community public read-write
viewDefault
```

29.6 snmp-server host

Description

The **snmp-server host** command is used to add Notification. To delete the corresponding Notification, please use **no snmp-server host** command.

Syntax

```
snmp-server host ip udp-port user-name [ smode { v1 | v2c | v3 } ] [ slev { noAuthNoPriv | authNoPriv | authPriv } ] [ type { trap | inform } ] [ retries retries ] [ timeout timeout ]
```

```
no snmp-server host ip user-name
```

Parameter

ip — The IP Address of the management Host. Both IPv4 and IPv6 addresses are supported, for example 192.168.0.100 or fe80::1234.

udp-port — UDP port, which is used to send notifications. The UDP port functions with the IP address for the notification sending. It ranges from 1 to 65535.

user-name — The User name of the management station.

smode — The Security Model of the management station, with v1, v2c and v3 options. By default, the option is v1.

slev — The Security Level of SNMP v3 Group. There are three options, including noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption) and authPriv (authorization and encryption). By default, the option is “noAuthNoPriv”.

type — The type of the notifications, with trap and inform options. Trap indicates traps are sent, while inform indicates informs are sent. The inform type has a higher security than the trap type and resend and timeout need to be configured if you select this option. You can only select the trap type in Security Model v1. By default, the type of the notifications is “trap”.

retries — The amount of times the switch retries an inform request, ranging from 1 to 255. The switch will resend the inform request if it doesn't get the response from the management station during the Timeout interval, and it will terminate resending the inform request if the resending times reach the specified Retry times.

timeout — The maximum time for the switch to wait for the response from the management station before resending a request, ranging from 1 to 3600 in seconds.

Command Mode

Global Configuration Mode

Example

Add a Notification entry, and configure the IP address of the management Host as 192.168.0.146, the UDP port as 162, the User name of the management

station as admin, the Security Model of the management station as v2c, the type of the notifications as inform, the maximum time for the switch to wait as 1000 seconds, and the retries time as 100:

```
T1700G-28TQ(config)# snmp-server host 192.168.0.146 162 admin smode v2c type inform retries 100 timeout 1000
```

Add a Notification entry, and configure the IP Address of the management Host as fe80::1234, the UDP port as 162, the User name of the management station as admin, the Security Model of the management station as v2c, the type of the notifications as inform, the maximum time for the switch to wait as 1000 seconds, and the retries time as 100:

```
T1700G-28TQ(config)# snmp-server host fe80::1234 162 admin smode v2c type inform retries 100 timeout 1000
```

29.7 snmp-server engineID

Description

The **snmp-server engineID** command is used to configure the local and remote engineID of the switch. To restore to the default setting, please use **no snmp-server engineID** command.

Syntax

```
snmp-server engineID { [ local local-engineID ] [ remote remote-engineID ] }
```

```
no snmp-server engineID
```

Parameter

local-engineID — Local Engine ID for local clients. The Engine ID is a unique alphanumeric string used to identify the SNMP engine on the switch. Its length ranges from 10 to 64 hexadecimal characters, which must be even number meanwhile.

remote-engineID — Remote Engine ID for the switch. The Engine ID is a unique alphanumeric string used to identify the SNMP engine on the remote device which receives informs from the switch. Its length ranges from 10 to 64 hexadecimal characters, which must be even number meanwhile. The **snmp-server engineID** will be disabled if the **local** and **remote** are both not configured.

Command Mode

Global Configuration Mode

Example

Specify the local engineID as 1234567890, and the remote engineID as abcdef123456:

```
T1700G-28TQ(config)# snmp-server engineID local 1234567890 remote
abcdef123456
```

29.8 snmp-server traps snmp

Description

The **snmp-server traps snmp** command is used to enable SNMP standard traps which include four types: linkup, linkdown, warmstart and coldstart. To disable the sending of SNMP standard traps, please use **no snmp-server traps snmp** command.

Syntax

```
snmp-server traps snmp [ linkup | linkdown | warmstart | coldstart |
auth-failure ]
```

```
no snmp-server traps snmp [ linkup | linkdown | warmstart | coldstart |
auth-failure ]
```

Parameter

linkup — Enable linkup trap. It is sent when port status changes from linkdown to linkup. By default, it is enabled.

linkdown — Enable linkdown trap. It is sent when port status changes from linkup to linkdown. By default, it is enabled.

warmstart — Enable warmstart trap. It is sent upon SNMP function reboot. By default, it is enabled.

coldstart — Enable coldstart trap. It is sent upon switch reboot. By default, it is enabled.

auth-failure — Enable the auth-failure trap. It is sent when a received SNMP request fails the authentication. By default, it is enabled.

Command Mode

Global Configuration Mode

Example

Enable SNMP standard linkup trap for the switch:

```
T1700G-28TQ(config)# snmp-server traps snmp linkup
```

29.9 snmp-server traps link-status

Description

The **snmp-server traps link-status** command is used to enable SNMP link status trap for the specified port. To disable the sending of SNMP link status trap, please use **no snmp-server traps link-status** command.

Syntax

snmp-server traps link-status

no snmp-server traps link-status

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet)

Example

Enable SNMP link status trap for port 1/0/3:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/3
T1700G-28TQ(config-if)# snmp-server traps link-status
```

29.10 snmp-server traps

Description

The **snmp-server traps** command is used to enable SNMP extended traps. To disable the sending of SNMP extended traps, please use **no snmp-server traps** command.

Syntax

snmp-server traps { bandwidth-control | cpu | flash | loopback-detection | storm-control | spanning-tree | memory }

no snmp-server traps { bandwidth-control | cpu | flash | loopback-detection | storm-control | spanning-tree | memory }

Parameter

bandwidth-control — Enable bandwidth-control trap. It is sent when the rate limit function is enabled and the bandwidth exceeds the predefined value.

cpu — Allow CPU-related trap. It is sent when CPU usage exceeds the predefined threshold. By default, the CPU usage threshold of the switch is 80%.

flash — Enable flash trap. It is sent when flash is modified during operations such as backup, reset, firmware upgrade, configuration import, etc.

loopback-detection — Enable loopback-detection trap. It is sent when the switch detects loopback or loopback is cleared.

storm-control — Enable storm-control trap. It is sent when the multicast or broadcast rate exceeds the predefined value.

spanning-tree — Enable spanning-tree trap. It is sent when the port forwarding status changes or the port receives TCN packet or packet with TC flag.

memory — Enable memory trap. It is sent when CPU usage exceeds 80%.

Command Mode

Global Configuration Mode

Example

Enable SNMP extended bandwidth-control trap for the switch:

```
T1700G-28TQ(config)# snmp-server traps bandwidth-control
```

29.11 snmp-server traps mac

Description

The **snmp-server traps mac** command is used to enable SNMP extended MAC address-related traps which include four types: new, full, learn-mode-change and max-learned. To disable the sending of SNMP extended MAC address related traps, please use **no snmp-server traps mac** command.

Syntax

```
snmp-server traps mac [ new | full | learn-mode-change | max-learned ]
```

```
no snmp-server traps mac [ new | full | learn-mode-change | max-learned ]
```

Parameter

new — Enable new MAC address trap. It is sent when the switch learns new MAC address including dynamic address, static address and filter address.

full — Enable MAC address table trap. It is sent when the MAC address table is full.

learn-mode-change — Enable MAC address learn-mode-change trap. It is sent when MAC address learning mode of the switch changes.

max-learned — Enable MAC address max-learned trap. It is sent when the amount of learned MAC address reaches the limit which is configured in port security module.

Command Mode

Global Configuration Mode

Example

Enable all SNMP extended MAC address-related traps for the switch:

```
T1700G-28TQ(config)# snmp-server traps mac
```

Enable new MAC address trap only for the switch:

```
T1700G-28TQ(config)# snmp-server traps mac new
```

29.12 snmp-server traps vlan

Description

The **snmp-server traps vlan** command is used to enable SNMP extended VLAN-related traps which include two types: create and delete. To disable this function, please use **no snmp-server traps vlan** command.

Syntax

```
snmp-server traps vlan [ create | delete ]
```

```
no snmp-server traps vlan [create | delete ]
```

Parameter

create — Enable VLAN-created trap. It is sent when new VLAN is created successfully.

delete — Enable VLAN-deleted traps. It is sent when VLAN is deleted successfully.

Command Mode

Global Configuration Mode

Example

Enable all SNMP extended VLAN-related traps for the switch:

```
T1700G-28TQ(config)# snmp-server traps vlan
```

Enable VLAN-created trap only for the switch:

```
T1700G-28TQ(config)# snmp-server traps vlan create
```

29.13 rmon history

Description

The **rmon history** command is used to configure the history sample entry. To return to the default configuration, please use **no rmon history** command. RMON (Remote Monitoring), basing on SNMP architecture, functions to monitor the network. History Group is one of the commonly used RMON Groups. After a history group is configured, the switch collects network statistics information periodically, based on which the management station can monitor network effectively.

Syntax

```
rmon history index interface { gigabitEthernet port | ten-gigabitEthernet port } [ interval seconds ] [ owner owner-name ] [ buckets number ]
```

```
no rmon history index
```

Parameter

index — The index number of the entry, ranging from 1 to 12, in the format of 1-3,5.

port — The Ethernet port number.

seconds — The interval to take samplings from the port, ranging from 10 to 3600 in seconds. By default, it is 1800.

owner-name — The owner of the history sample entry, ranging from 1 to 16 characters. By default, it is “monitor”.

number — The maximum number of buckets desired for the RMON history group of statistics, ranging from 1 to 130. The default is 50 buckets.

Command Mode

Global Configuration Mode

Example

Configure the sample port as Gi1/0/2 and the sample interval as 100 seconds for the entry 1-3:

```
T1700G-28TQ(config)# rmon history 1-3 interface gigabitEthernet 1/0/2  
interval 100 owner owner1
```

29.14 rmon event

Description

The **rmon event** command is used to configure the entries of SNMP-RMON Event. To return to the default configuration, please use **no rmon event** command. Event Group, as one of the commonly used RMON Groups, is used to define RMON events. Alarms occur when an event is detected.

Syntax

```
rmon event index [ user user-name ] [ description descript ] [ type { none | log  
| notify | log-notify } ] [ owner owner-name ]
```

```
no rmon event index
```

Parameter

index — The index number of the event entry, ranging from 1 to 12. You can only select one entry for each command.

user-name — The name of the User to which the event belongs, ranging from 1 to 16 characters. By default, it is “public”.

descript — The description of the event, ranging from 1 to 16 characters. By default, it is empty.

type — The event type, with none, log, notify and both options. None indicates no processing, log indicates logging the event, notify indicates sending trap messages to the management station, and both indicates logging the event and sending trap messages to the management station.

owner-name — The owner of the event entry, ranging from 1 to 16 characters. By default, it is “monitor”.

Command Mode

Global Configuration Mode

Example

Configure the user name of entry 1, 2, 3 and 4 as user1, the description of the event as description1, the type of event as log and the owner of the event as owner1:

```
T1700G-28TQ(config)# rmon event 1-4 user user1 description description1  
type log owner owner1
```

29.15 rmon alarm

Description

The **rmon alarm** command is used to configure SNMP-RMON Alarm Management. To return to the default configuration, please use **no rmon alarm** command. Alarm Group is one of the commonly used RMON Groups. RMON alarm management allows monitoring the specific alarm variables. When the value of a monitored variable exceeds the threshold, an alarm event is generated, which triggers the switch to act in the set way.

Syntax

```
rmon alarm index { stats-index sindex } [ alarm-variable { revbyte | revpkt |  
bpkt | mpkt | crc-lign | undersize | oversize | jabber | collision | 64 | 65-127 |  
128-511 | 512-1023 | 1024-10240 } ] [ s-type { absolute | delta} ]  
[ rising-threshold r-hold ] [ rising-event-index r-event] [ falling-threshold  
f-hold] [ falling-event-index f-event] [ a-type {rise | fall | all} ] [ owner  
owner-name ] [ interval interval]  
no rmon alarm index
```

Parameter

index — The index number of the Alarm Management entry, ranging from 1 to 12, in the format of 1-3,5.

sindex — Specify the statistics index.

alarm-variable — The alarm variable. By default, the option is revbyte.

s-type — Sample Type, which is the sampling method for the selected variable and comparing the value against the thresholds. There are two options, absolute and delta. Absolute indicates comparing the values directly with the thresholds at the end of the sampling interval. Delta indicates subtracting the last sampled value from the current value, and then comparing the difference in the values with the threshold. By default, the Sample Type is absolute.

r-hold — The rising counter value that triggers the Rising Threshold alarm, ranging from 1 to 2147483647. By default, it is 100.

r-event — Rise Event, which is the index of the corresponding event which will be triggered if the sampled value is larger than the Rising Threshold. It ranges from 1 to 12.

f-hold — The falling counter value that triggers the Falling Threshold alarm, ranging from 1 to 2147483647. By default, it is 100.

f-event — Fall Event, which is the index of the corresponding event which will be triggered if the sampled value is lower than the Falling Threshold. It ranges from 1 to 12.

a-type — Alarm Type, with rise, fall and all options. Rise indicates that the alarm event will be triggered when the sampled value exceeds the Rising Threshold, fall indicates that the alarm event will be triggered when the sampled value is under the Falling Threshold, and all indicates that the alarm event will be triggered either the sampled value exceeds the Rising Threshold or is under the Falling Threshold. By default, the Alarm Type is all.

owner-name — The owner of the entry, ranging from 1 to 16 characters. By default, it is monitor.

interval — The alarm interval time, ranging from 10 to 3600 in seconds. By default, it is 1800.

Command Mode

Global Configuration Mode

Example

Configure rmon alarm entries 1-3 binding with statistics entry 2, the owners as owner1 and the alarm intervals as 100 seconds:

```
T1700G-28TQ(config)#rmon alarm 1-3 stats-index 2 owner owner1 interval
100
```

29.16 rmon statistics

Description

The **rmon statistics** command is used to configure the entries of SNMP-RMON statistics. To delete the corresponding entry, please use **no rmon statistics** command. The maximum supported entries are 1000.

Syntax

```
rmon statistics index interface { gigabitEthernet port | ten-gigabitEthernet port } [ owner owner-name] [ status { underCreation | valid }]
```

```
no rmon statistics index
```

Parameter

index — The index number of the statistics entry, ranging from 1 to 65535, in the format of 1-3,5.

port — The statistics port number, in the format of 1/0/1.

owner-name — The creator of the event entry, ranging from 1 to 16 characters. By default, it is “monitor”.

status — The status of the statistics entry, either “underCreation” or “valid”. “underCreation” means this entry won’t take effect until it is modified to “valid”; “valid” means this entry takes effect immediately after it is created.

Command Mode

Global Configuration Mode

Example

Configure the statistics entries 1-3 with the statistics port as 1/0/1, owner as owner1 and status as valid:

```
T1700G-28TQ(config)#rmon statistics 1-3 interface gigabitEthernet 1/0/1
owner owner1 status valid
```

29.17 show snmp-server

Description

The **show snmp-server** command is used to display SNMP configuration globally.

Syntax

```
show snmp-server
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display SNMP configuration globally:

```
T1700G-28TQ# show snmp-server
```

29.18 show snmp-server view

Description

The **show snmp-server view** command is used to display the View table.

Syntax

```
show snmp-server view
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the View table:

```
T1700G-28TQ# show snmp-server view
```

29.19 show snmp-server group

Description

The **show snmp-server group** command is used to display the Group table.

Syntax

```
show snmp-server group
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Group table:

```
T1700G-28TQ# show snmp-server group
```

29.20 show snmp-server user

Description

The **show snmp-server user** command is used to display the User table.

Syntax

```
show snmp-server user
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the User table:

```
T1700G-28TQ# show snmp-server user
```

29.21 show snmp-server community

Description

The **show snmp-server community** command is used to display the Community table.

Syntax

```
show snmp-server community
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Community table:

```
T1700G-28TQ# show snmp-server community
```

29.22 show snmp-server host

Description

The **show snmp-server host** command is used to display the Host table.

Syntax

```
show snmp-server host
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Host table:

```
T1700G-28TQ# show snmp-server host
```

29.23 show snmp-server engineID

Description

The **show snmp-server engineID** command is used to display the engineID of the SNMP.

Syntax

```
show snmp-server engineID
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the engineID:

```
T1700G-28TQ# show snmp-server engineID
```

29.24 show rmon history

Description

The **show rmon history** command is used to display the configuration of the history sample entry.

Syntax

```
show rmon history [ index ]
```

Parameter

index — The index number of the entry selected to display the configuration, ranging from 1 to 12, in the format of 1-3, 5. You can select more than one entry for each command. By default, the configuration of all history sample entries is displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of all history sample entries:

```
T1700G-28TQ# show rmon history
```

29.25 show rmon event

Description

The **show rmon event** command is used to display the configuration of SNMP-RMON Event.

Syntax

```
show rmon event [ index ]
```

Parameter

index — The index number of the entry selected to display the configuration, ranging from 1 to 12, in the format of 1-3, 5. You can select more than one entry for each command. By default, the configuration of all SNMP-RMON enabled entries is displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the Event configuration of entry1-4:

```
T1700G-28TQ# show rmon event 1-4
```

29.26 show rmon alarm

Description

The **show rmon alarm** command is used to display the configuration of the Alarm Management entry.

Syntax

```
show rmon alarm [ index ]
```

Parameter

index — The index number of the entry selected to display the configuration, ranging from 1 to 12, in the format of 1-3, 5. You can select more than one entry for each command. By default, the configuration of all Alarm Management entries is displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the Alarm Management entry 1-2:

```
T1700G-28TQ# show rmon alarm 1-2
```

29.27 show rmon statistics

Description

The **show rmon statistics** command is used to display the configuration of the specified statistics entry.

Syntax

```
show rmon statistics [ index ]
```

Parameter

index — The index number of the statistics entry selected to display the configuration, ranging from 1 to 65535. By default, the configuration of all statistics entries is displayed.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the configuration of the statistics entry 1:

```
T1700G-28TQ#show rmon statistics 1
```

Chapter 30 ARP Commands

Address Resolution Protocol (ARP) is used to resolve an IP address into an Ethernet MAC address. The switch maintains an ARP mapping table to record the IP-to-MAC mapping relations, which is used for forwarding packets. An ARP mapping table contains two types of ARP entries: dynamic and static. An ARP dynamic entry is automatically created and maintained by ARP. A static ARP entry is manually configured and maintained.

30.1 arp

Description

This **arp** command is used to add a static ARP entry. To delete the specified ARP entry, please use the **no arp** command.

Syntax

arp *ip mac type*

no arp *ip type*

Parameter

ip — The IP address of the static ARP entry.

mac — The MAC address of the static ARP entry.

type — The ARP type. Configure it as “arpa”.

Command Mode

Global Configuration Mode

Example

Create a static ARP entry with the IP as 192.168.0.1 and the MAC as 00:11:22:33:44:55:

```
T1700G-28TQ(config)# arp 192.168.0.1 00:11:22:33:44:55 arpa
```

30.2 clear arp-cache

Description

This **clear arp-cache** command is used to clear all the dynamic ARP entries.

Syntax

clear arp-cache

Command Mode

Privileged EXEC Mode

Example

Clear all the dynamic ARP entries:

```
T1700G-28TQ(config)# clear arp-cache
```

30.3 arp timeout

Description

This **arp timeout** command is used to configure the ARP aging time of the interface.

Syntax

```
arp timeout timeout
```

```
no arp timeout
```

Parameter

timeout — Specify the aging time, ranging from 1 to 3000 seconds. The default value is 600 seconds.

Command Mode

Interface Configuration Mode

Example

Configure the ARP aging time as 60 seconds on interface 1/0/1:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/1
```

```
T1700G-28TQ(config-if)# arp timeout 60
```

30.4 show arp

Description

This **show arp** command is used to display the active ARP entries. If no parameter is specified, all the active ARPA entries will be displayed.

Syntax

```
show arp [ ip ] [ mac ]
```

```
show ip arp [ ip ] [ mac ]
```

Parameter

ip — Specify the IP address of your desired ARP entry.

mac — Specify the MAC address of your desired ARP entry.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the ARP entry with the IP as 192.168.0.2:

```
T1700G-28TQ(config)# show ip arp 192.168.0.2
```

30.5 show ip arp (interface)

Description

This **show arp** command is used to display the active ARP entries associated with a specified Layer 3 interface.

Syntax

```
show ip arp { gigabitEthernet port | ten-gigabitEthernet port | port-channel  
lagid | vlan id }
```

Parameter

port — Specify the number of the routed port.

lagid — Specify the ID of the LAG.

id — Specify the VLAN interface ID.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the ARP entry associated with VLAN interface 2 :

```
T1700G-28TQ(config)# show ip arp vlan 2
```

30.6 show ip arp summary

Description

This **show ip arp summary** command is used to display the number of the active ARP entries.

Syntax

show ip arp summary

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the number of the ARP entries:

```
T1700G-28TQ(config)# show ip arp summary
```

Chapter 31 Static Routes Commands

31.1 interface vlan

Description

This **interface vlan** command is used to create the VLAN interface. To delete the specified VLAN interface, please use the **no interface vlan** command.

Syntax

```
interface vlan { vid }  
no interface vlan { vid }
```

Parameter

vid — The ID of the VLAN.

Command Mode

Global Configuration Mode

Example

Create the VLAN interface 2:

```
T1700G-28TQ(config)# interface vlan 2
```

31.2 interface loopback

Description

This **interface loopback** command is used to create the loopback interface. To delete the specified loopback interface, please use the **no interface loopback** command.

Syntax

```
interface loopback { id }  
no interface loopback { id }
```

Parameter

id — The ID of the loopback interface, ranging from 1 to 64.

Command Mode

Global Configuration Mode

Example

Create the loopback interface 1:

```
T1700G-28TQ(config)# interface loopback 1
```

31.3 switchport

Description

This **switchport** command is used to switch the Layer 3 interface into the Layer 2 port. To switch the Layer 2 port into the Layer 3 routed port, please use the **no switchport** command.

Syntax

switchport

no switchport

Command Mode

Interface Configuration Mode (interface gigabitEthernet / interface range gigabitEthernet / interface ten-gigabitEthernet / interface range ten-gigabitEthernet / interface port-channel / interface range port-channel)

Example

Switch the gigabitEthernet port 1/0/9 into the routed port:

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/9  
T1700G-28TQ(config-if)# no switchport
```

31.4 shutdown

Description

This **shutdown** command is used to shut down the specified interface. The interface type include: routed port, port-channel interface, loopback interface and VLAN interface. To enable the specified interface, please use the **no shutdown** command.

Syntax

shutdown

no shutdown

Command Mode

Interface Configuration Mode

Example

Shut down the routed port 1/0/9 :

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/9
T1700G-28TQ(config-if)# no switchport
T1700G-28TQ(config-if)# shutdown
```

31.5 ip route

Description

This **ip route** command is configure the static route. To clear the corresponding entry, please use the **no ip route** command.

Syntax

```
ip route { dest-address } { mask } { next-hop-address } [ distance ]
```

```
no ip route { dest-address } { mask } { next-hop-address }
```

Parameter

dest-address —— The destination IP address.

mask —— The subnet mask.

next-hop-address —— The address of the next-hop.

distance —— The distance metric of this route, ranging from 1 to 255. The smaller the distance is, the higher the priority is.

Command Mode

Global Configuration Mode

Example

Create a static route with the destination IP address as 192.168.2.0, the subnet mask as 255.255.255.0 and the next-hop address as 192.168.0.2:

```
T1700G-28TQ(config)# ip route 192.168.2.0 255.255.255.0 192.168.0.2
```

31.6 description

Description

This **description** command is used to add a description to the Layer 3 interface, including routed port, port-channel interface, loopback interface and VLAN interface. To clear the description of the corresponding interface, please use the **no description** command.

Syntax

description *string*

no description

Parameter

string — Content of an interface description, ranging from 1 to 32 characters.

Command Mode

Interface Configuration Mode

Example

Add a description system-if to the routed port 1/0/9 :

```
T1700G-28TQ(config)# interface gigabitEthernet 1/0/9
T1700G-28TQ(config-if)# no switchport
T1700G-28TQ(config-if)# description system-if
```

31.7 show interface vlan

Description

The **show interface vlan** command is used to display the information of the specified interface VLAN.

Syntax

show interface vlan *vid*

Parameter

vid — The VLAN ID.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the information of VLAN 2:

```
T1700G-28TQ(config)#show interface vlan 2
```

31.8 show ip interface

Description

This **show ip interface** command is used to display the detailed information of the specified Layer 3 interface.

Syntax

```
show ip interface [ gigabitEthernet port | ten-gigabitEthernet port |  
port-channel lagid | loopback id | vlan vlan-id ]
```

Parameter

port — The port number.

lagid — The ID of the LAG. Member ports in this LAG should all be routed ports.

id — The loopback interface ID.

vlan-id — The VLAN interface ID.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the detailed information of the VLAN interface 2:

```
T1700G-28TQ(config)# show ip interface vlan 2
```

31.9 show ip interface brief

Description

This **show ip interface brief** command is used to display the summary information of the Layer 3 interfaces.

Syntax

```
show ip interface brief
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the summary information of the Layer 3 interfaces:

```
T1700G-28TQ(config)# show ip interface brief
```

31.10 show ip route

Description

This **show ip route** command is used to display the route entries of the specified type.

Syntax

```
show ip route [ static | connected ]
```

Parameter

static | connected — Specify the route type. If not specified, all types of route entries will be displayed.

static: The static routes.

connected: The connected routes.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the static routes:

```
T1700G-28TQ(config)# show ip route static
```

31.11 show ip route specify

Description

This **show ip route specify** command is used to display the valid routing information to the specified IP address or network segments.

Syntax

```
show ip route specify { ip } [ mask ] [ longer-prefixes ]
```

Parameter

ip — Specify the destination IP address.

mask — Specify the destination IP address together with the parameter *ip*.

longer-prefixes — Specify the destination subnets that match the network segment determined by the *ip* and *mask* parameters.

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the shortest route to 192.168.0.100:

```
T1700G-28TQ(config)# show ip route specify 192.168.0.100
```

Look up the route entry with the destination as 192.168.0.0/24:

```
T1700G-28TQ(config)# show ip route specify 192.168.0.0 255.255.255.0
```

Display the routes to all the subnets that belongs to 192.168.0.0/16:

```
T1700G-28TQ(config)# show ip route specify 192.168.0.0 255.255.0.0  
longer-prefixes
```

31.12 show ip route summary

Description

This **show ip route summary** command is used to display the summary information of the route entries classified by their sources.

Syntax

```
show ip route summary
```

Command Mode

Privileged EXEC Mode and Any Configuration Mode

Example

Display the summary information of route entries:

```
T1700G-28TQ(config)# show ip route summary
```