

1400 Series IP Video Storage Array



BOSCH

en Installation Manual

Table of Contents

1	System Safety	5
1.1	Warnings and Precautions	5
1.2	Preparing for Setup	5
1.3	Electrical Safety Precautions	5
1.4	General Safety Precautions	6
1.5	System Safety	6
2	System Overview	7
2.1	Chassis Features	7
2.2	Chassis Components	7
2.2.1	Chassis	7
2.2.2	Backplane	7
2.2.3	Fans	7
2.2.4	Mounting Rails	7
2.2.5	Power Supply	7
2.2.6	Air Shroud	8
2.3	System Interface	8
2.3.1	Control Panel Buttons	8
2.3.2	Control Panel LEDs	8
2.3.3	Drive Carrier LEDs	9
2.3.4	SAS/SATA Drives	9
2.3.5	Power Supply LEDs and Overheat Indicators	10
2.3.6	Overheating	10
3	Chassis Setup and Maintenance	11
3.1	General Maintenance	11
3.2	Removing the Chassis Cover and Front Bezel	11
3.2.1	The Front Bezel	11
3.3	Installing Hard Drives	13
3.4	DVD and Floppy Drive Installation	15
3.5	Installing the Motherboard	15
3.6	Installing the Air Shroud	16
3.7	System Fans	17
3.8	Power Supply	18
3.8.1	Power Supply Failure	18
3.9	Routing the I2C Cables	19
4	Rack Installation	20
4.1	Unpacking the System	20
4.2	Preparing for Setup	20
4.2.1	Choosing a Setup Location	20
4.2.2	Rack Precautions	20
4.2.3	General Server Precautions	20
4.2.4	Rack Mounting Considerations	21
4.3	Rack Mounting Instructions	21
4.3.1	Identifying the Sections of the Rack Rails	21

4.3.2	Inner Rail Extension	22
4.3.3	Installing the Chassis into a Telco rack	24
<hr/>		
A	Appendix	26
A.1	Motherboard layout	26
A.2	Chipset Overview	31
A.3	PC Health Monitoring	31
A.4	Power Configuration Settings	32
A.5	Power Supply	32
A.6	Super I/O	32
A.7	iSCSI Support	33
A.8	Overview of the Nuvoton BMC Controller	33
A.9	RAID Disaster Recovery	34
A.9.1	Multiple Disks failed (Theory)	35
A.9.2	Multiple Disks failed (Practice)	39
A.9.3	Foreign configuration disk appears in the Windows GUI after booting	43
A.9.4	MegaCLI Commandline Utility	44

1 System Safety

This chapter provides a quick setup checklist to get your chassis up and running. Following the steps in order given should enable you to have your chassis setup and operational within a minimal amount of time. This quick set-up assumes that you are an experienced technician, familiar with common concepts and terminology.

1.1 Warnings and Precautions

You should inspect the box the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage, file a damage claim with carrier who delivered your system.

Decide on a suitable location for the rack unit that will hold that chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.

You will also need it placed near at least one grounded power outlet.

1.2 Preparing for Setup

The 1400 Series chassis includes a set of rail assemblies, including mounting brackets and mounting screws you will need to install the systems into the rack. Please read this manual in its entirety before you begin the installation procedure.

1.3 Electrical Safety Precautions

Basic electrical safety precautions should be followed to protect yourself from harm and the 1400 Series from damage:

- Be aware of the locations of the power on/off switch on the chassis as well as the room's emergency power-off switch, disconnection switch or electrical outlet. If an electrical accident occurs, you can then quickly remove power from the system.
- Do not work alone when working with high-voltage components.
- Power should always be disconnected from the system when removing or installing main system components, such as the server board, memory modules and the DVD-ROM and floppy drives (not necessary for hot swappable drives). When disconnecting power, you should first power down the system with the operating system and then unplug the power cords from all the power supply modules in the system.
- When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power, if necessary.
- Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components or circuit boards they come into contact with.
- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cord must include a grounding plug and must be plugged into grounded electrical outlets.
- Server board Battery: CAUTION - There is a danger of explosion if the onboard battery is installed upside down, which will reverse its polarities. This battery must be replaced only with the same or an equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- DVD-ROM laser: CAUTION - this server may have come equipped with a DVD-ROM drive. To prevent direct exposure to the laser beam and hazardous radiation exposure, do not open the enclosure or use the unit in any unconventional way.

1.4 General Safety Precautions

- Keep the area around the chassis clean and free of clutter.
- Place the chassis top cover and any system components that have been removed away from the system or on a table so that they won't accidentally be stepped on.
- While working on the system, do not wear loose clothing such as neckties and unbuttoned shirt sleeves, which can come into contact with electrical circuits or be pulled into a cooling fan.
- Remove any jewelry or metal objects from your body, which are excellent metal conductors that can create short circuits and harm you if they come into contact with printed circuit boards or areas where power is present.
- After accessing the inside of the system, close the system back up and secure it to the rack unit with the retention screws after ensuring that all connections have been made.

1.5 System Safety

Electrostatic discharge (ESD) is generated by two objects with different electrical charges coming into contact with each other. An electrical discharge is created to neutralize this difference, which can damage electronic components and printed circuit boards. The following measures are generally sufficient to neutralize this difference before contact is made to protect your equipment from ESD:

- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- Use a grounded wrist strap designed to prevent static discharge.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags until ready for use.
- Touch a grounded metal object before removing any board from its antistatic bag.
- Do not let components or PCBs come into contact with your clothing, which may retain a charge even if you are wearing a wrist strap.
- Handle a board by its edges only; do not touch its components, peripheral chips, memory modules or contacts.
- When handling chips or modules, avoid touching their pins.
- Put the server board and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners and the server board.

2 System Overview

1400 Series 1U chassis features a unique and highly-optimized design. The chassis is equipped with a high efficiency power supply. High performance fans provide ample optimized cooling for FB-DIMM memory modules and four hot-swap drive bays offer maximum storage capacity in a 1U form factor.

For information on supported hardware, see the data sheet for the 1400 Series in the Bosch Online Product Catalog.

For more detailed technical information on your device refer to <http://www.supermicro.com/support/manuals/index.cfm>. Select There you can download a manual for an 815 model.

2.1 Chassis Features

The 1400 Series 1U high performance chassis includes the following features:

- CPU
The 1400 Series chassis supports a DP or UP Dual-core Xeon processor. Bosch systems come with a DP processor.
- Hard Drives
The 1400 Series chassis features four slots for SATA drives. These drives are hot swappable. Once setup correctly, these drives can be removed without powering down the server. In addition, these drives support SES2 (SAS/SATA).
- Other Features
Other onboard features are included to promote system health. These include various four cooling fans, a convenient power switch, reset button, and five LED indicators.

2.2 Chassis Components

This chapter describes the most common components included with your chassis. For more information, see the installation instructions detailed later in this manual.

2.2.1 Chassis

Chassis include one slim CD-ROM bay, one slim floppy disc drive bay, and/or four hard drive bays.

This chassis accepts a 1U backplane, four fans and one (sometimes two) power supplies.

2.2.2 Backplane

Each 1400 Series chassis comes with a 1U backplane. The backplane will accept SAS/SATA or SCSI.

2.2.3 Fans

The 1400 Series chassis accepts four system fans. System fans for 1400 Series chassis are powered from the server board. These fans are 1U high and are powered by 3-pin connectors.

2.2.4 Mounting Rails

The 1400 Series can be placed in a rack for secure storage and use. To setup your rack, follow the step-by-step instructions included in this manual.

2.2.5 Power Supply

Each 1400 Series chassis model includes a high-efficiency power supply rated between 450 Watts. In the unlikely event that your power supply fails, replacement is simple and can be done without tools.


The Bosch model chassis include a redundant, hot-swappable power supply.

2.2.6 Air Shroud

Air shrouds are shields, usually plastic, that funnel air directly to where it is needed. Always use the air shroud included with your chassis.

2.3 System Interface


There are several LEDs on the control panel and on the drive carriers that provide system and component status. This chapter explains the meanings of all LED indicators and the appropriate responses that need to be taken.

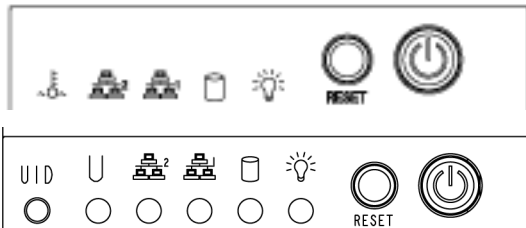

2.3.1 Control Panel Buttons

The 1400 Series chassis includes two or three push-buttons located on the front panel: a reset button, a power on/off button, and a UID button

- **Reset:** The reset button is used to reboot the system.

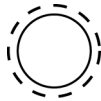

- **Power:** The main power switch is used to apply or remove power from the power supply to the server system. Turning off system power with this button removes the main power but keeps standby power supplied to the system. Therefore, you must unplug system before servicing.



2.3.2 Control Panel LEDs

The control panel located on the front of the 1400 Series chassis has up to five LEDs. These LEDs provide critical information related to different parts of the system. This section explains what each LED indicates when illuminated and any action that may be required.

- **Universal Information LED:** The Universal Information LED is used to indicate fan failure, power failure, overheat condition, or to identify the unit within a large rack installation. The feature requires a motherboard that supports the Universal Information LED.



When this LED blinks red quickly, it indicates a fan failure and when blinking red slowly a power failure. This LED will be blue when used for UID (Unit Identifier). When on continuously red, it indicates an overheat condition, which may be caused by cables obstructing the airflow in the system or the ambient room temperature being too warm. See the table below for descriptions of the LED states.

Universal Information LED States	
State	Indication
Fast Blinking Red (1x/sec)	Fan Fail
Solid Red	CPU Overheat

Universal Information LED States	
Slow Blinking Red (1x/4 sec)	Power Fail
Solid Blue	Local UID Button Depressed
Blinking Blue	IPMI-Activated UID

Note: Deactivating the UID LED must be performed in the same way it was activated. (If the UID LED was activated via IPMI, you can only turn the LED off via IPMI and not with the UID button.)

- **Overheat/Fan Fail:** When this LED flashes it indicates a fan failure. When continuously on (not flashing) it indicates an overheat condition, which may be caused by cables obstructing the airflow in the system or the ambient room temperature being too warm.



- **NIC2:** Indicates network activity on GLAN2 when flashing.



- **NIC1:** Indicates network activity on GLAN1 when flashing.



- **HDD:** Indicates IDE channel activity. SAS/SATA drive, SCSI drive, and/or DVD-ROM drive activity when flashing.



- **Power:** Indicates power is being supplied to the system's power supply units. This LED should normally be illuminated when the system is operating.



2.3.3 Drive Carrier LEDs

Your chassis uses SAS/SATA.

2.3.4 SAS/SATA Drives

Each SAS/SATA drive carrier has two LEDs.

- Green: Each Serial ATA drive carrier has a green LED. When illuminated, this green LED (on the front of the SATA drive carrier) indicates drive activity. A connection to the SATA backplane enables this LED to blink on and off when that particular drive is being accessed.
- Red: The red LED to indicate an SAS/SATA drive failure. If one of the SAS/SATA drives fail, you should be notified by your system management software.

2.3.5

Power Supply LEDs and Overheat Indicators

This chassis provides several options which may include hot-swappable, cold-swappable, and redundant power supplies. Some power supplies include an LED in the rear with the following definitions:

450W and 650W Power Supplies

450W and 650W Power Supply LEDs	
State	Indication
Solid Green	System is on.
Solid Amber	System is off and plugged in.
Blinking Amber	Internal temperature has reached 63C and will shut down if the temperature reaches 70C.

- Solid Green: When illuminated, the green LED indicates that the power supply is on.
- Solid Amber: When illuminated, the amber LED indicates the power supply is plugged in and turned off, or the system is off but in an abnormal state.
- Blinking Amber: When blinking, this system power supply temperature has reached to 63C. The system automatically power down when the power supply temperature reaches 70C and restarts when the power supply temperature goes below 60C.

All Other Power Supplies

- Solid Green: When illuminated, this green LED indicates that the power supply is on.

All Other Power Supply LEDs	
State	Indication
Solid Green	System is on.
Solid Amber	System is off and plugged in.

- Solid Amber: When illuminated, the amber LED indicates the power supply is plugged in and turned off, or the system is off but in an abnormal state.

2.3.6

Overheating

The section lists actions that should be taken in the unlikely event the server overheats.

Overheat Temperature Setting

Some backplanes allow the overheat temperature to be set at 45, 50, or 55 by changing a jumper setting. To access the manuals on the Web site, click support, and then click the manuals link.

Overheating Condition

If the Server Overheats, do the Following:

1. Use the LEDs to determine the nature of the overheating condition.
2. Confirm that the chassis covers are installed properly.
3. Check the routing of the cables and make sure all fans are present and operating normally.
4. Verify that the heatsinks are installed properly.


3 Chassis Setup and Maintenance

This chapter covers the steps required to install components and perform maintenance on the chassis. The only tool you will need to install components and perform maintenance is a Phillips screwdriver. Print this page to use as a reference while setting up your chassis.

3.1 General Maintenance

Review the warnings and precautions listed in the manual before setting up or servicing this chassis. These include information in the chapter on System Safety and the warning/precautions listed in the setup instructions.

3.2 Removing the Chassis Cover and Front Bezel

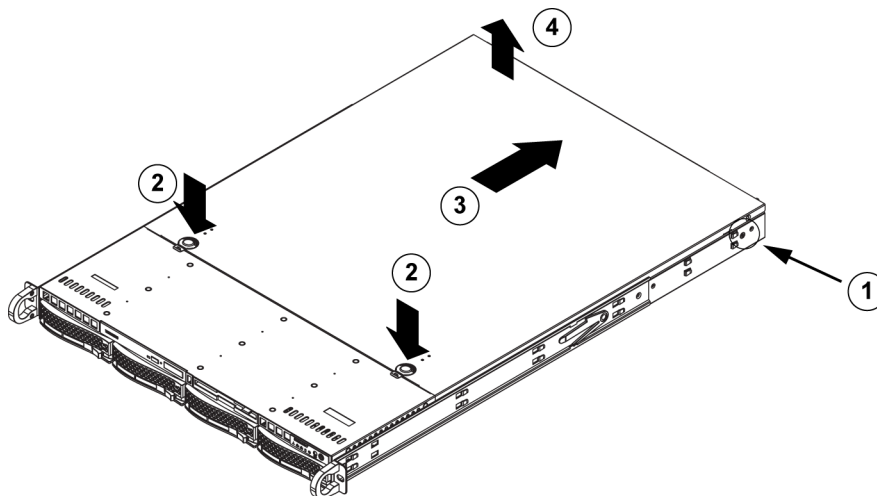

Removing the Chassis Cover


1. Remove the two screws on each side of the cover, which secure the cover to the chassis.
2. Press the release tabs to remove the cover from the locked position. Press both tabs at the same time.
3. Once the top cover is released from the locked position, slide the cover toward the rear of the chassis.
4. Lift the cover off the chassis.

CAUTION!

Except for short periods of time, do NOT operate the server without the cover in place. The chassis cover must be in place to allow proper airflow and prevent overheating.

3.2.1 The Front Bezel

If your system has an optional front bezel attached to the chassis, you must remove it to access the drive bays. A filter located within the bezel can be removed for cleaning or replacement. It is recommended that you keep a maintenance log and frequently replace the filter. The filter's condition will affect the airflow throughout the whole system.

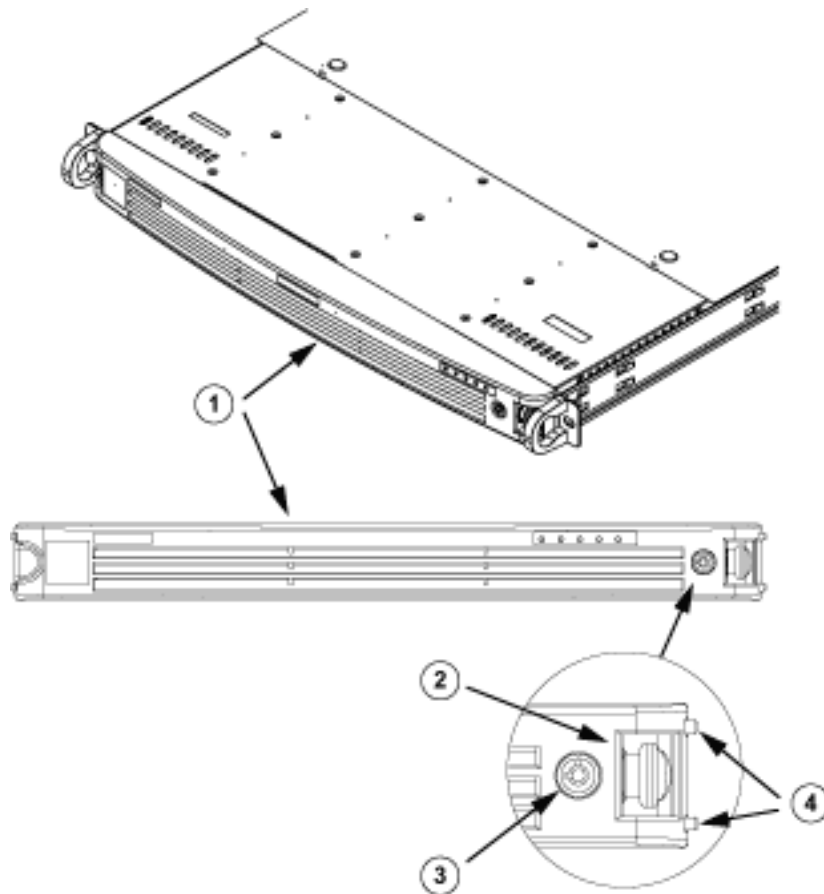


1	Front Bezel
2	Release Knob
3	Bezel Lock
4	Bezel Pins

Removing the Front Bezel


1. Unlock the bezel lock.
2. Press the release knob to retract the bezel pins
3. Carefully remove the bezel with both hands.

3.3 Installing Hard Drives

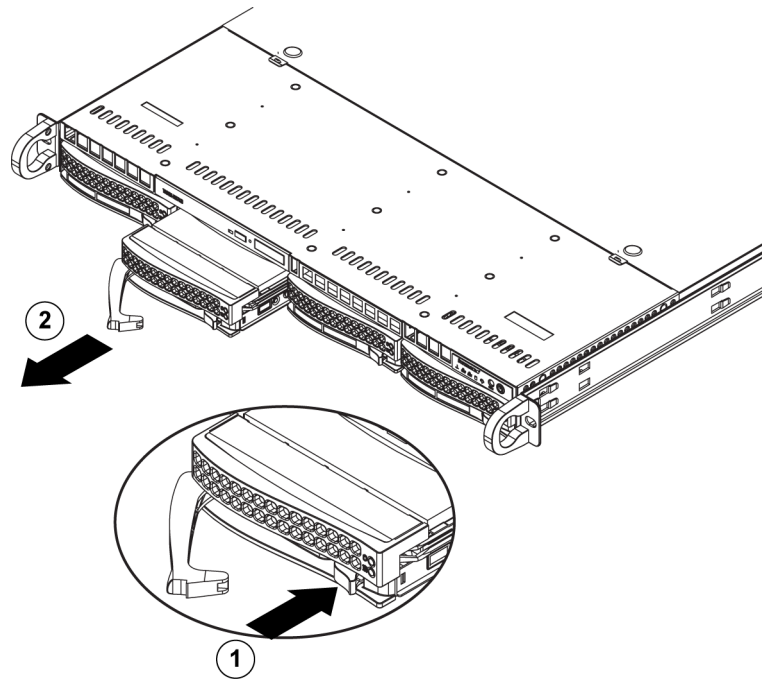

Removing Hard Drive Carriers from the Chassis

1. Press the release button on the drive carrier. This extends the drive carrier handle.
2. Use the handle to pull the drive carrier out of the chassis.

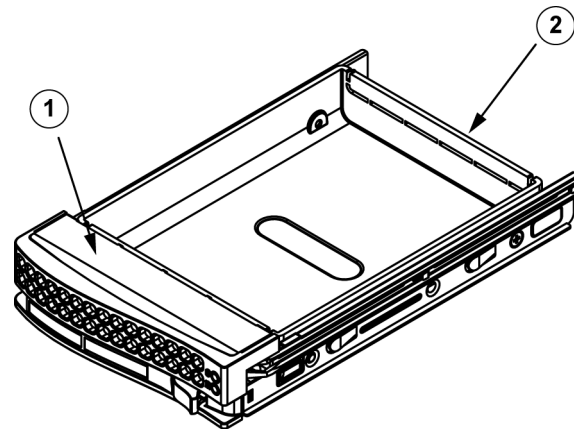

1	Drive carrier
2	Dummy drive


The drives are mounted in drive carriers to simplify their installation and removal from the chassis. These carriers also help promote proper airflow for the drive bays.

CAUTION!


Except for short periods of time (swapping hard drives), do not operate the chassis without the drive carriers.

Installing a Hard Drive to the Hard Drive Carrier

1. Remove the screws (2) securing the dummy drive to the carrier.

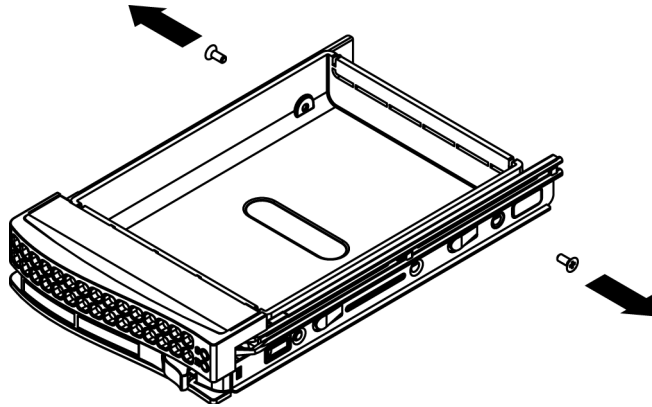


2. Remove the dummy drive from the carrier.
3. Install a new drive into the carrier with the printed circuit board side facing down so that the mounting holes align with those in the carrier.
4. Secure the hard drive by tightening all six (6) screws.

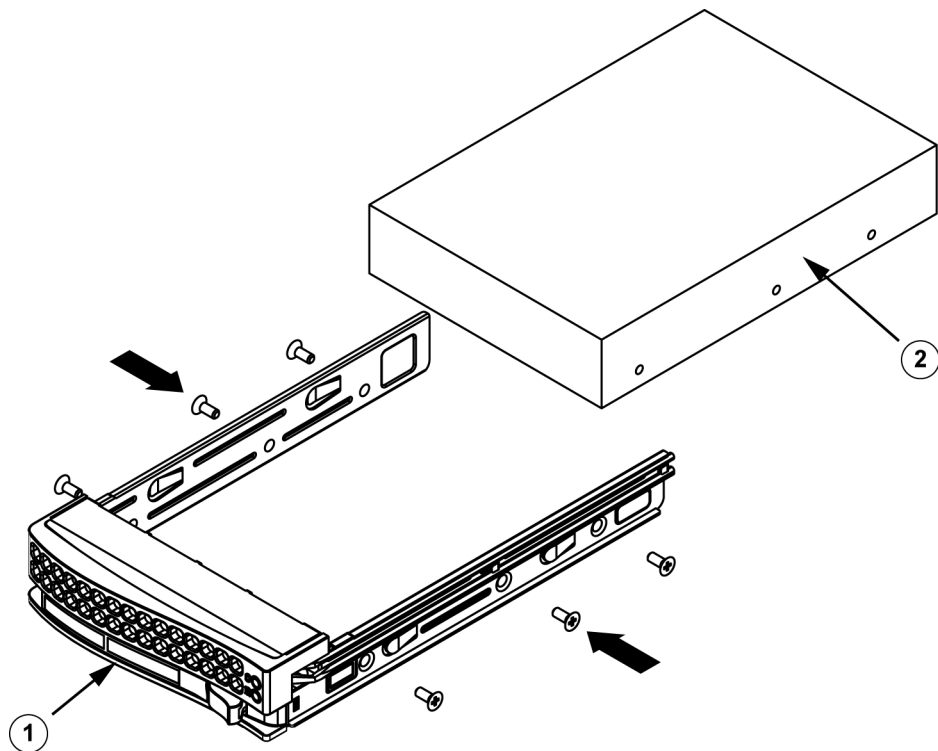

1	Drive carrier
2	SAS/SATA hard drive

5. Replace the drive tray into the chassis. Make sure the close the drive carrier handle.

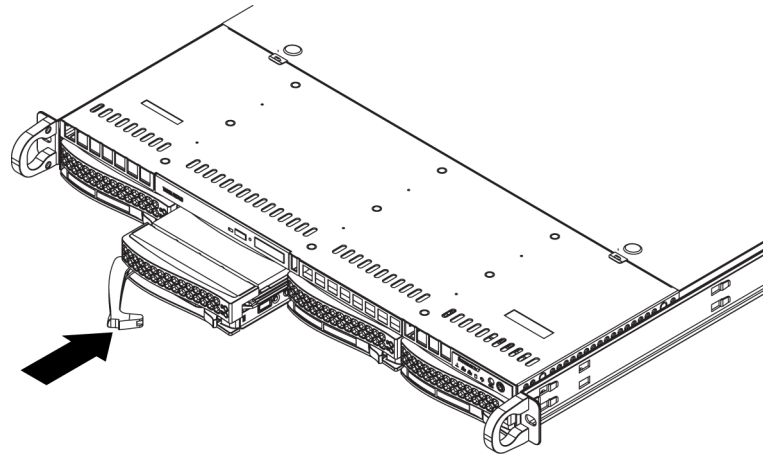

3.4 DVD and Floppy Drive Installation

The Bosch models come without a DVD-ROM. Due to the Bosch specific setup a DVD-ROM drive is not needed for operations and / or maintenance.

Installing or Replacing a DVD-ROM or Floppy Drive

1. Power down the system and if necessary, remove the server from the rack and the front bezel from the chassis.
2. Remove the chassis cover.
3. Unplug the drives power and data cables from the motherboard and/or backplane.
4. If you are adding a new drive: Remove the mini-bezel (grate) from the drive bay. The bezel can be removed by pulling out the hard drive beneath the DVD-ROM or floppy drive bay, then pulling the mini-bezel forward.


If you are replacing a drive: Locate the locking tab at the rear (left hand side when viewed from the front) of the DVD-ROM or floppy drive. Push the tab toward the drive and push the drive unit out the front of the chassis.

5. Insert the new drive unit in the slot until the tab locks in place.
6. Reconnect the data and power cables.
7. Replace the chassis cover (replace the server in the rack, if necessary) and power up the system.

3.5 Installing the Motherboard


Motherboard problems will be handled by trained support people only.

3.6 Installing the Air Shroud

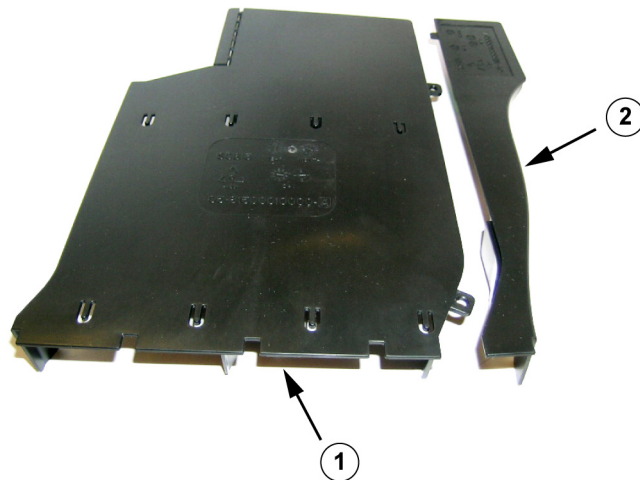

Air shrouds concentrate airflow to maximize fan efficiency. The 1400 Series chassis air shroud does not require screws to set up.

Air shroud with the Optional Flap Removed:

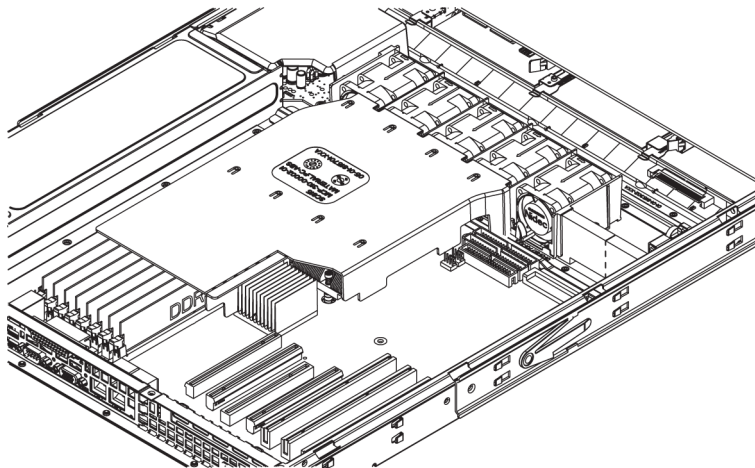

Installing the Air Shroud

1. Remove the chassis cover.
2. If your motherboard uses between 9 and 16 DIMMS, skip this step. If your motherboard uses 8 DIMMS, you must remove the optional flap. To do so:
 - a. With the fan side facing you, hold the air shroud with your left hand on the main shroud component and right hand on the optional flap.
 - b. Gently twist with your right hand by lifting the fan side and lowering the other end of the optional flap.
3. Place the air shroud in your chassis with the fan side touching the edge of the fans.
4. Replace the chassis cover.

Checking the Air Flow in the Chassis

1. Make sure there are no objects to obstruct airflow in and out of the chassis. In addition, if you are using a front bezel, make sure the bezel's filter is replaced periodically.
2. Do not operate the chassis without drive carriers in the drive bays. Use only recommended chassis parts.
3. Make sure no wires or foreign objects obstruct air flow through the chassis. Pull all excess cabling out of the airflow path or use shorter cables.
4. The control panel LEDs inform you of system status.

3.7 System Fans



Four heavy duty fans provide cooling for the chassis. These fans circulate air through the chassis as a means of lowering the chassis internal temperature.


In models with counter-rotating fans, each fan unit is actually made up of two fans joined back-to-back, which rotate in opposite directions. This counter-rotating action generates exceptional airflow and works to dampen vibration levels.

In chassis that provide an additional open fan housing, an additional system fan may be added for optimal cooling.

Adding a System Fan

1. Turn off the power to the system and unplug the system from the outlet.
2. Remove the dummy fan from the fan tray.
3. Place the new fan into the vacant space in the housing while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans.
4. Connect the fan wires to the fan headers on the server board.
5. Power up the system and check that the fan is working properly before replacing the chassis cover.

The 1400 Series chassis includes four pre-installed fans. One or two extra slots are available so that additional fans may be added.

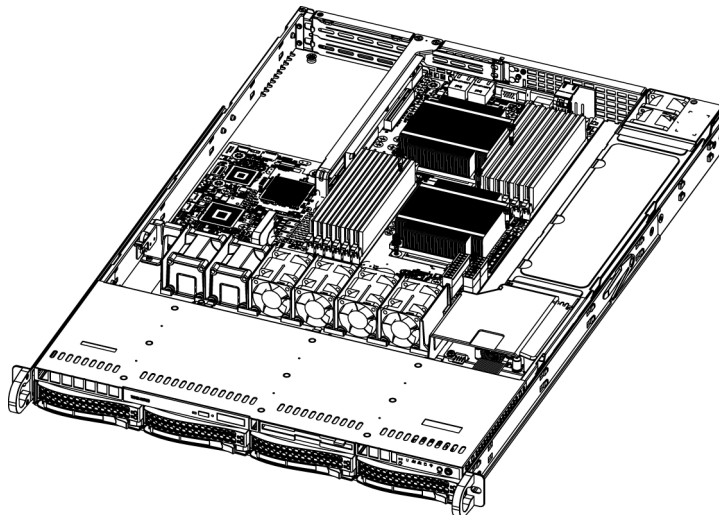

Replacing a System Fan

1. If necessary, open the chassis while the power is running to determine which fan has failed. Never run the server for an extended period of time with the chassis open.
2. Turn off the power to the system and unplug the AC power cord from the outlet.
3. Remove the failed fan's wiring from the server board.
4. Lift the failed fan from the chassis and pull it completely out from the server board.


5. Place the new fan into the vacant space in the housing while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans.
6. Reconnect the fan wires to the exact same chassis fan headers as the previous fan.
7. Reconnect the AC power cord, power up the system and check that the fan is working properly before replacing the chassis cover.

3.8 Power Supply

The 1400 Series Chassis has a 450 Watt power supply. This power supply is auto-switching capable. The 450 Watt power supplies automatically sense and operate at a 100V to 240V input voltage. An amber light will be illuminated on the power supply when the power is off. An illuminated green light indicates that the power supply is operating.

3.8.1 Power Supply Failure

If the power supply unit fails, the system will not shut down but you will need to replace the unit. The Bosch models which include a redundant power supply, will allow for the power supply to be replaced without powering down the system.

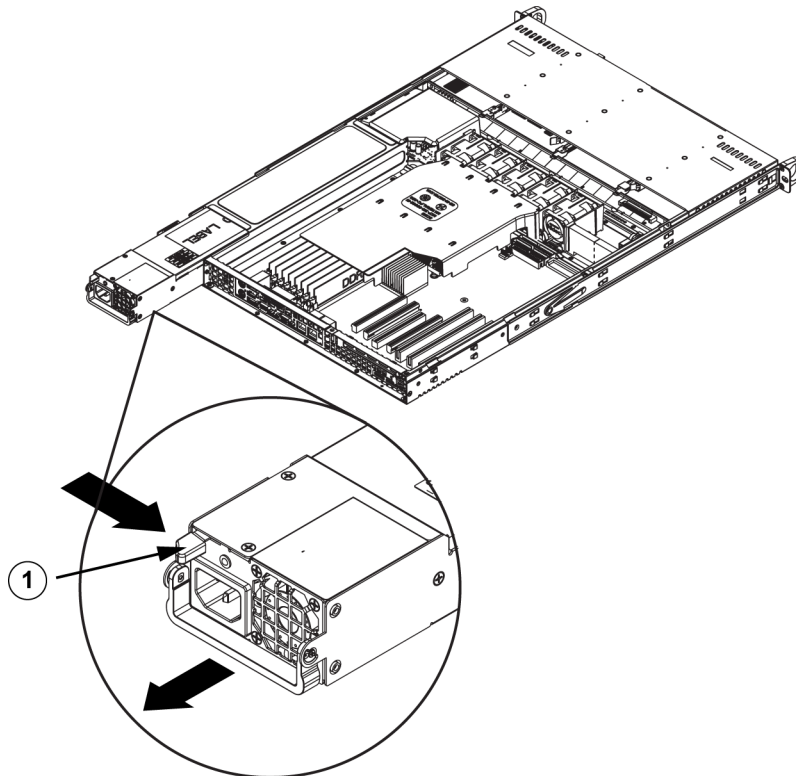

1	Release Tab
---	-------------

Replacing the Power Supply

1. Power down the server and unplug the power cord. If your chassis includes a redundant power supply (at least two power modules), you can leave the server running and remove only one power supply.
2. Push the release tab (on the back of the power supply) as illustrated.
3. Pull the power supply out using the handle provided.
4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until you hear a click.
6. Plug the AC power cord back into the module and power up the server.

3.9 Routing the I²C Cables

It is necessary to correctly route the I²C cables to avoid interference due to noise on the I²C lines. Using tie wraps, secure the I²C cables to the large black power switching cable to keep it close to the power supply and away from the motherboard.

Note:

The Bosch models come pre configured and pre installed.

4 Rack Installation

This chapter provides a quick setup checklist to get your chassis up and running. Following these steps in the order given should enable you to have the system operational within a minimum amount of time.

4.1 Unpacking the System

You should inspect the box the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage you should file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold your chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. You will also need it placed near a grounded power outlet. Be sure to read the Rack and Server Precautions in the next section.

4.2 Preparing for Setup

The box your chassis was shipped in should include two sets of rail assemblies, two rail mounting brackets and the mounting screws you will need to install the system into the rack. Please read this section in its entirety before you begin the installation procedure outlined in the sections that follow.

4.2.1 Choosing a Setup Location

- Leave enough clearance in front of the rack to enable you to open the front door completely (~25 inches).
- Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease in servicing.
- This product is for installation only in a Restricted Access Location (dedicated equipment rooms, service closets and the like).

4.2.2 Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.
- In single rack installation, stabilizers should be attached to the rack.
- In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a component from the rack.
- You should extend only one component at a time - extending two or more simultaneously may cause the rack to become unstable.

4.2.3 General Server Precautions

- Review the electrical and general safety precautions that came with the components you are adding to your chassis.
- Determine the placement of each component in the rack before you install the rails.
- Install the heaviest server components on the bottom of the rack first, and then work up.
- Use a regulating uninterruptable power supply (UPS) to protect the server from power surges, voltage spikes and to keep your system operating in case of a power failure.
- Allow the hot plug hard drives and power supply modules to cool before touching them.
- Always keep the rack's front door and all panels and components on the servers closed when not servicing to maintain proper cooling.

4.2.4 Rack Mounting Considerations

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (T_{mra}).

Reduced Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

Warnings and Precautions!


4.3 Rack Mounting Instructions

This section provides information on installing the 1400 Series chassis into a rack unit. There are a variety of rack units on the market, which may mean the assembly procedure will differ slightly. You should also refer to the installation instructions that came with the rack unit you are using.

NOTE: This rail will fit a rack between 26" and 33.5" deep.

4.3.1 Identifying the Sections of the Rack Rails

The chassis package includes two rack rail assemblies in the rack mounting kit. Each assembly consists of two sections: an inner rail that secures directly to the chassis, and an outer rail that secures directly to the rack itself.

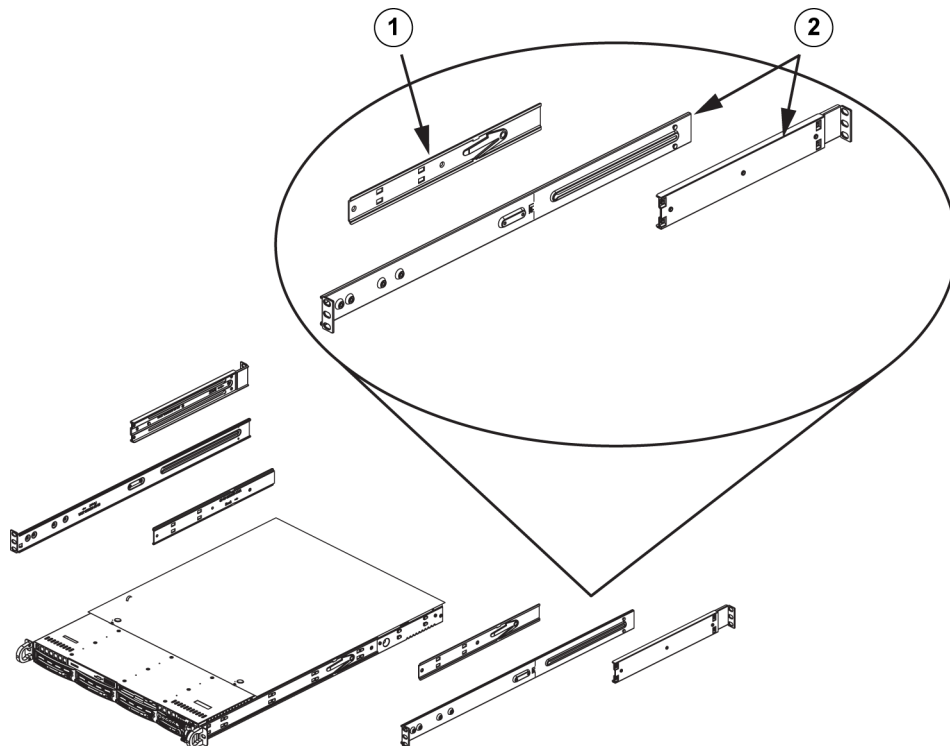


1	Rail Extension (Inner Rail is pre-installed on the chassis)
2	Outer Rails

4.3.2

Inner Rail Extension

The 1400 Series chassis includes a set of inner rails which are in two sections: inner rails and inner rail extensions. The inner rails are pre-attached and do not interfere with normal use of the chassis if you decide not to use a server rack. Attach the inner rail extension to stabilize the chassis within the rack.


Installing the Inner Rails

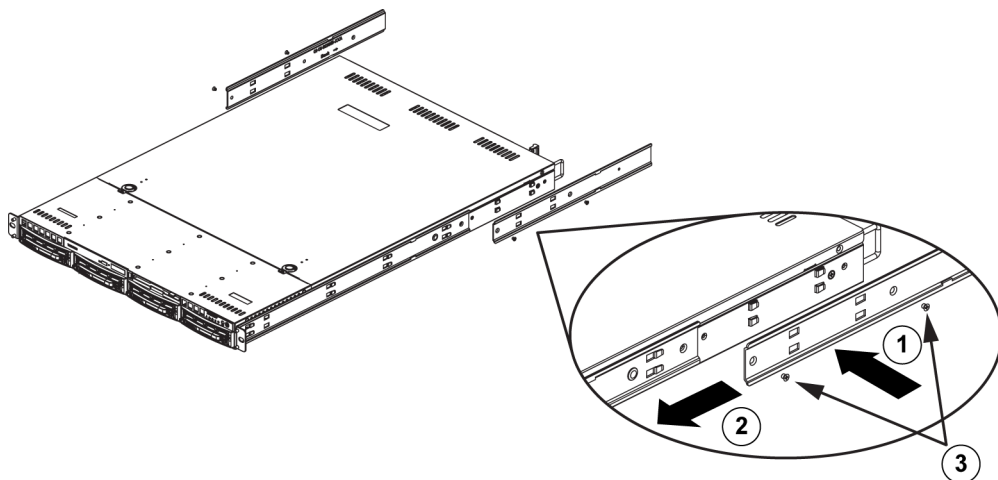

1. Place the inner rail extensions on the side of the chassis aligning the hooks of the chassis with the inner rail extension holes. Make sure the inner rail extension faces "outward" just like the pre-attached inner rail.
2. Slide the extension toward the front of the chassis.
3. Secure the chassis with 2 screws as illustrated.


4. Repeat steps 1-3 for the other inner rail extension.

Assembling the Outer Rails

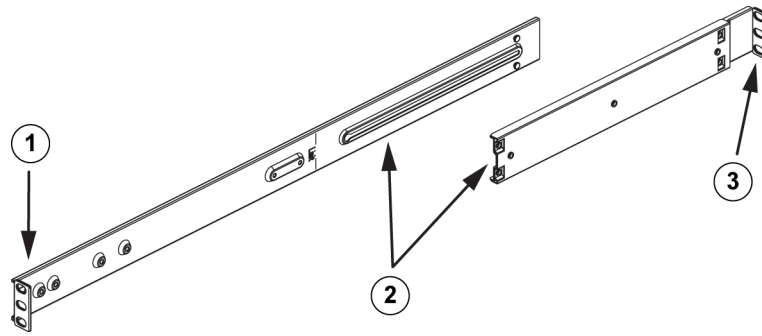


1	Secure to the front of the rack.
2	Attach the two sections of the outer rail together.
3	Secure to the rear of the rack.

Installing the Outer Rails to the Rack

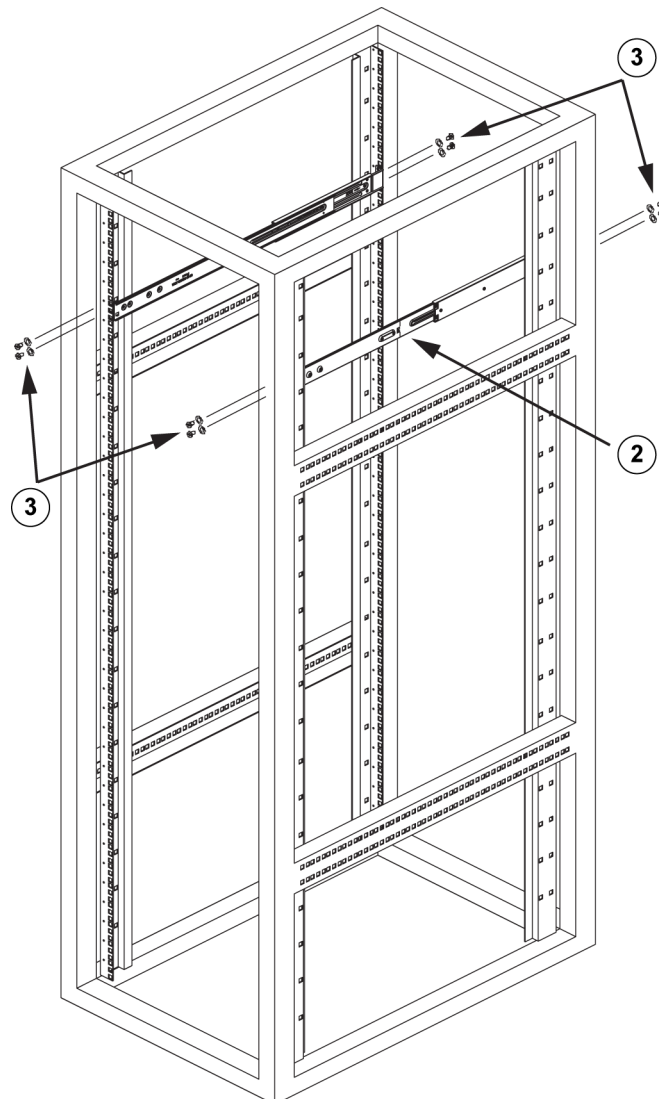

1. Attach the longer section of the outer rail to the outside of the shorter section of the outer rail. You must align the pins with the slides. Both ends of the outer rail must face the same direction in order to be secured to the rack (see also *Section Assembling the Outer Rails*).
2. Adjust both sections of the outer rail to the proper length so that the rail fits snugly within the rack.
3. Secure the longer section of the outer rail to the front of the rack with two M5 screws and the shorter section to the rear side of the rack with two M5 screws.
4. Repeat steps 1-4 for the remaining outer rail.

Installing the Chassis into a Rack

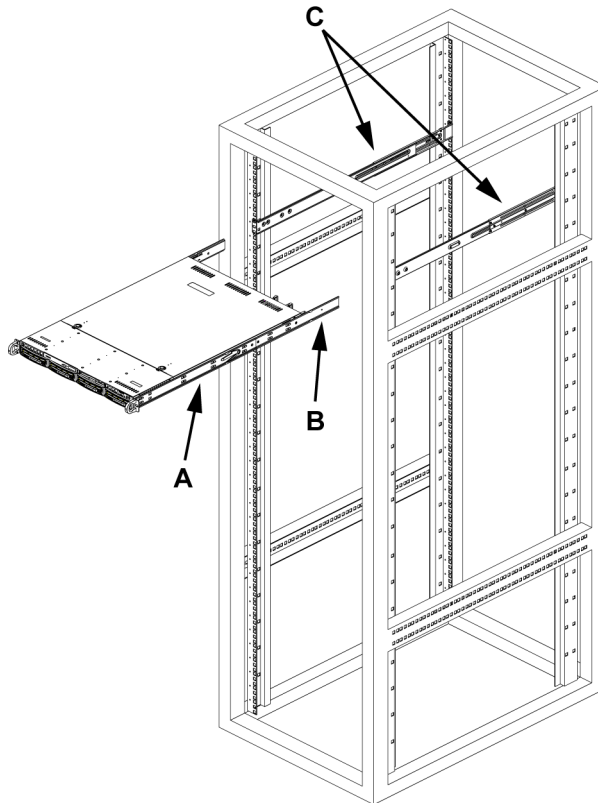


1. Confirm that chassis includes the inner rails (A) and rail extensions (B). Also, confirm that the outer rails (C) are installed on the rack.
2. Line chassis rails (A and B) with the front of the rack rails (C).
3. Slide the chassis rails into the rack rails, keeping the pressure even on both sides (you may have to depress the locking tabs when inserting). When the server has been pushed completely into the rack, you should hear the locking tabs "click" into the locked position.
4. (Optional) Insert and tighten the thumbscrews that hold the front of the server to the rack.

4.3.3

Installing the Chassis into a Telco rack

To install the chassis into a Telco type rack, use two L-shaped brackets on either side of the chassis (four total). First, determine how far the server will extend out the front of the rack. Larger chassis should be positioned to balance the weight between front and back. If a bezel is included on your server, remove it. Then attach the two front brackets to each side of the chassis, then the two rear brackets positioned with just enough space to accommodate the width of the telco rack. Finish by sliding the chassis into the rack and tightening the brackets to the rack.

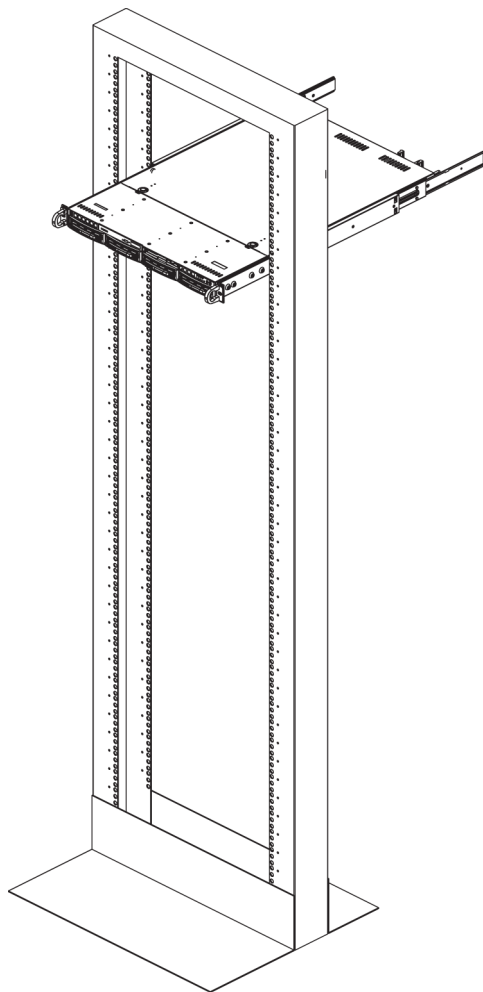

A Appendix

A.1 Motherboard layout


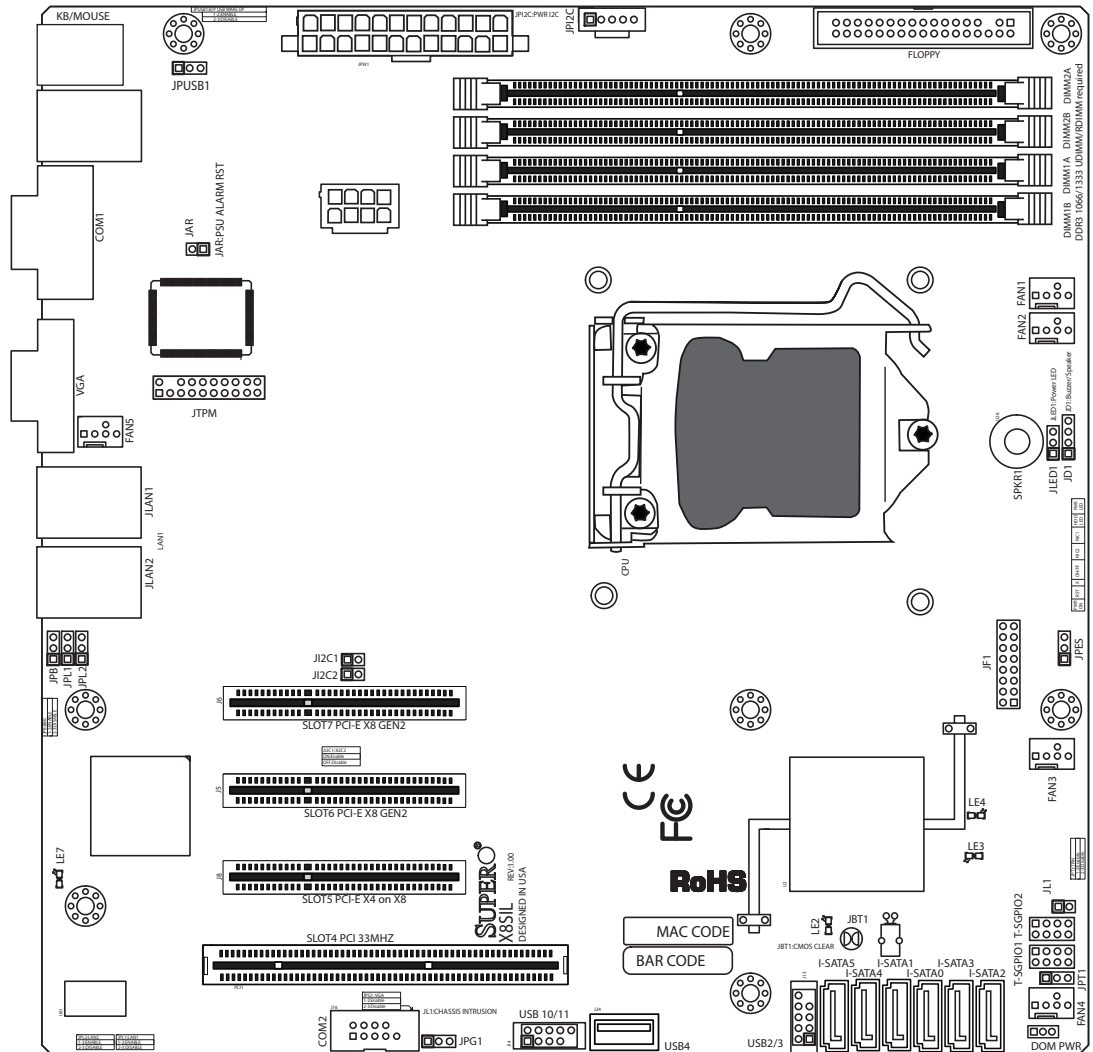


Figure 1.1 Motherboard Layout

Note: All graphics shown in this manual were based upon the latest PCB Revision available at the time of publishing of the manual. The motherboard you've received may or may not look exactly the same as the graphics shown in this manual.

Important Notes to the User

- Jumpers not indicated are for testing only.
- When LE2 (Onboard Power LED Indicator) is on, system power is on. Unplug the power cable before installing or removing any components.

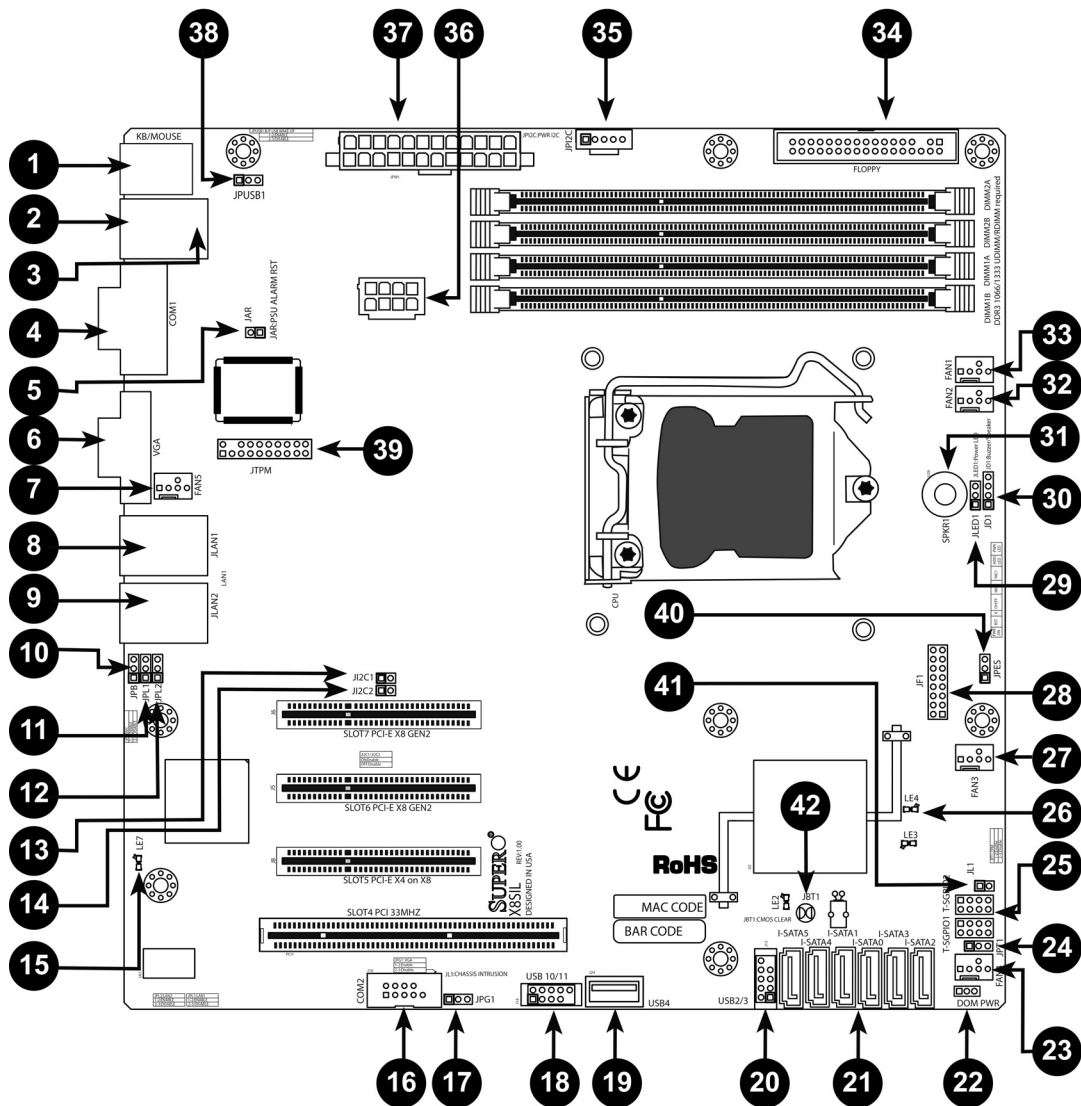

X8SIL/X8SIL-F/X8SIL-V Jumpers			
Number	Jumper	Description	Default
38	JUSB1	BP USB0/1 Wake-up	Pins 1-2 (Enabled)
42	JBT1	CMOS Clear	
40	JPE5	Energy Saving Feature	Pins 2-3 (Disabled)
13,14	JI2C1/JI2C2	SMB to PCI Slots	
17	JPG1	Onboard VGA Enable	Pins 1-2 (Enabled)
11,12	JPL1/JPL2	LAN1/LAN2 Enable	Pins 1-2 (Enabled)
24	JPT1	TPM Enable	Pins 1-2 (Enabled)
10	JPB	BMC Jumper	Pins 1-2 (Enabled)

X8SIL/X8SIL-F/X8SIL-V Headers/Connectors		
Number	Connector	Description
4,16	COM1/COM2	COM1/2 Serial connection headers
33,32,27,23,7	Fans 1~5	System/CPU fan headers

34	Floppy	Floppy Disk Drive connector
5	JAR	Alarm Reset
30	JD1	Speaker header (Pins 3/4: Internal, 1~4:External)
28	JF1	Front Panel Control header
41	JL1	Chassis Intrusion header
29	JLED	Power LED Indicator header
37	JPW1	24-pin ATX main power connector (required)
36	JPW2	+12V 8-pin CPU power connector (required)
1	KB/Mouse	Keyboard/mouse connectors
8,9	LAN1~LAN2,	Gigabit Ethernet (RJ45) ports (LAN1/LAN2)
21	I-SATA 0~5	Serial ATA ports (X8SIL has 4 Serial ATA Ports)
2	IPMI	IPMI LAN Port (X8SIL-F Only)
35	JPI2C	PWR supply (I2C) System Management Bus
31	SPKR1	Internal speaker/buzzer
25	T-SGPIO-0/1	Serial General Purpose IO headers (for SATA)
3,20	USB0/1, USB 2/3	Backplane USB 0/1, Front panel accessible USB 2/3
19	USB 4	Type A USB Connector
18	USB 10/11	Front Panel USB header (X8SIL-F Only)
22	DOM PWR	Disk-On-Module (DOM) Power Connector
39	JTPM	Trusted Platform Module (TPM) Header
6	VGA	Onboard Video Port

X8SIL/X8SIL-F/X8SIL-V LED Indicators				
Number	LED	Description	Color/State	Status
26	LE4	Onboard Standby PWR LED	Green: Solid on	PWR On
15	LE7	IPMI Heartbeat LED (X8SIL-F)	Yellow: Blinking	IPMI: Normal

Motherboard Features

CPU	Single Intel Xeon 3400 series processor in an LGA1156 socket.		
Memory	Four (4) 240-pin, DDR3 SDRAM DIMM sockets with support for up to 16GB of UDIMM or up to 32GB of RDIMM memory (ECC/DDR3 1333/1066/800 MHz memory only.)		
	Supports dual-channel memory bus		
	DIMM sizes		
	UDIMM	1 GB, 2 GB, and 4GB	
	RDIMM	1 GB, 2GB, 4GB, and 8GB	
Chipset	Intel 3420 Chipset (X8SIL-F/X8SIL-V)		
	Intel 3400 Chipset (X8SIL)		
Expansion Slots	Two (2) PCI Express 2.0 (x8) slot		
	One (1) PCI Express x4 (x8) slot		
	One (1) 32-bit PCI 33MHz slot		
Integrated Graphics	Matrox G200eW		

Network Connections	Two Intel 82574L Gigabit (10/100/1000 Mb/s) Ethernet Controllers for LAN 1 and LAN 2 ports.	
	Two (2) RJ-45 Rear IO Panel Connectors with Link and Activity LEDs	
	Single Realtek RTL8201N PHY to support IPMI 2.0 (X8SIL-F Only)	
I/O Devices	SATA Connections (X8SIL-F/X8SIL-V Only)	
	SATA Ports	Six (6)
	RAID (Windows)	RAID 0, 1, 5, 10
	RAID (Linux)	RAID 0, 1, 10
	SATA Connections (X8SIL Only)	
	SATA Ports	Four (4)
	Integrated IPMI 2.0 (X8SIL-F Only)	
	IPMI 2.0 supported by the WPCM450 Server BMC	
	Floppy Disk Drive	
	One (1) floppy drive interface (up to 1.44 MB)	
	USB Devices (X8SIL Only)	
	Two (2) USB ports on the rear IO panel	
	Two (2) USB header connectors for front access	
	One (1) Type A internal connector	
I/O Devices (Continued)	USB Devices (X8SIL-F/X8SIL-V Only)	
	Two (2) USB ports on the rear IO panel	
	Four (4) USB header connectors for front access	
	One (1) Type A internal connector	
	Keyboard/Mouse	
	PS/2 Keyboard/Mouse ports on the I/O backplane	
	Serial (COM) Ports	
	Two (2) Fast UART 16550 Connections: one 9-pin RS-232 port and one header	
	Super I/O	
	Winbond Super I/O 83627DHG-P	
BIOS	32 Mb SPI AMI BIOS SM Flash BIOS	
	DMI 2.3, PCI 2.3, ACPI 1.0/2.0/3.0, USB Keyboard and SMBIOS 2.5	
Power Configuration	ACPI/ACPM Power Management	
	Main switch override mechanism	
	Keyboard Wake-up from Soft-Off	
	Internal/External moder ring-on	
	Power-on mode for AC power recovery	
PC Health Monitoring	CPU Monitoring	
	Onboard voltage monitors for CPU core, +3.3V, +5V, +/-12V, +3.3V Stdby, +5V Stdby, VBAT, HT, Memory, Chipset	
	CPU 3-Phase switching voltage regulator	

	CPU/System overheat LED and control
	CPU Thermal Trip support
	Thermal Monitor 2 (TM2) support
	Fan Control
	Fan status monitoring with firmware 4-pin (Pulse Width Modulation) fan speed control
	Low noise fan speed control
System Management	PECI (Platform Environment Configuration Interface) 2.0 support
	System resource alert via Supero Doctor III
	SuperoDoctor III, Watch Dog, NMI
	Chassis Intrusion Header and Detection
CD Utilities	BIOS flash upgrade utility
	Drivers and software for Intel 3400/3420 chipset utilities
Other	ROHS 6/6 (Full Compliance, Lead Free)
Dimensions	Micro ATX form factor, 9.6" x 9.6"

CD Utilities	BIOS flash upgrade utility
	Drivers and software for Intel 3400/3420 chipset utilities
Other	ROHS 6/6 (Full Compliance, Lead Free)
Dimensions	Micro ATX form factor, 9.6" x 9.6"

BLOCK DIAGRAM RoHS 6/6

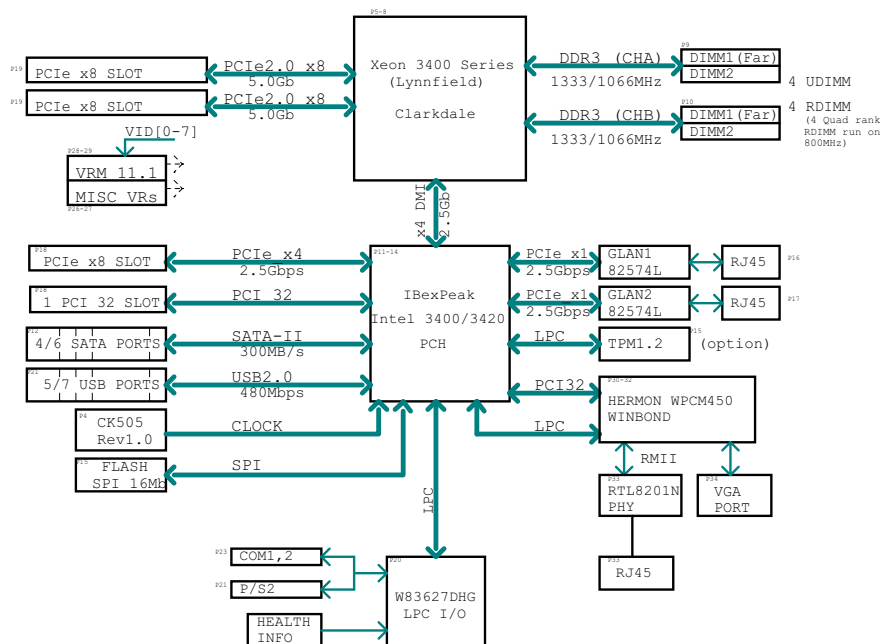


Figure 1.2 Block diagram

Note: This is a general block diagram and may not exactly represent the features on your motherboard. See the Motherboard Features pages for the actual specifications of each motherboard.

A.2 Chipset Overview

The X8SIL/X8SIL-F/X8SIL-V supports the Intel Xeon 3400 processor series. Built upon the functionality and the capability of the single-chip Intel 3400 chipset, the X8SIL/X8SIL-F/X8SIL-V motherboard provides the performance and feature set required for single-processor-based systems with configuration options optimized for entry-level server platforms. The high-speed Direct Media Interface (DMI) featured in the Intel 3400/3420 chipset enables the X8SIL/X8SIL-F/X8SIL-V motherboard to offer a high-speed Direct Media Interface (DMI) for chip-to-chip true isochronous communication with the processor. This feature allows the X8SIL/X8SIL-F/X8SIL-V to achieve up to 10 Gb/s of software-transparent data transfer on each direction, achieving better performance than comparable systems. The X8SIL/X8SIL-F/X8SIL-V also features a TCO timer (to enable the system to recover from a software/hardware lock), ECC Error Reporting, Function Disable and Intruder Detect.

Intel 3400/3420 Chipset Features

- Direct Media Interface (up to 10 Gb/s transfer, Full Duplex)
- Intel Matrix Storage Technology and Intel Rapid Storage Technology
- Dual NAND Interface
- Intel I/O Virtualization (VT-d) Support
- Intel Trusted Execution Technology Support
- PCI Express 2.0 Interface (up to 5.0 GT/s)
- SATA Controller (up to 3G/s)
- Advanced Host Controller Interface (AHCI)

A.3 PC Health Monitoring

This section describes the PC health monitoring features of the X8SIL/X8SIL-F/X8SIL-V. These features are supported by an onboard System Hardware Monitor chip.

Recovery from AC Power Loss

BIOS provides a setting for you to determine how the system will respond when AC power is lost and then restored to the system. You can choose for the system to remain powered off (in which case you must hit the power switch to turn it back on) or for it to automatically return to a power on state. See the Power Lost Control setting in the BIOS chapter of this manual to change this setting. The default setting is Last State.

Onboard Voltage Monitoring

The onboard voltage monitor will scan the following voltages continuously: CPU core, +3.3V, +5V, +/-12V, +3.3V Stdby, +5V Stdby, VBAT, HT, Memory, Chipset. Once a voltage becomes unstable, it will give a warning or send an error message to the screen. Users can adjust the voltage thresholds to define the sensitivity of the voltage monitor by using SD III.

Fan Status Monitor with Software

PC health monitoring can check the RPM status of the cooling fans via Supero Doctor III.

CPU Overheat LED and Control

This feature is available when the user enables the CPU overheat warning feature in the BIOS. This allows the user to define an overheat temperature. When this temperature reaches this

pre-defined overheat threshold, the CPU thermal trip feature will be activated and it will send a signal to the buzzer and, at the same time, the CPU speed will be decreased.

A.4 Power Configuration Settings

This section describes the features of your motherboard that deal with power and power settings.

Slow Blinking LED for Suspend-State Indicator

When the CPU goes into a suspend state, the chassis power LED will start blinking to indicate that the CPU is in the suspend mode. When the user presses any key, the CPU will wake-up and the LED indicator will automatically stop blinking and remain on.

BIOS Support for USB Keyboard

If the USB keyboard is the only keyboard in the system, it will function like a normal keyboard during system boot-up.

Main Switch Override Mechanism

When an ATX power supply is used, the power button can function as a system suspend button. When the user presses the power button, the system will enter a SoftOff state. The monitor will be suspended and the hard drive will spin down. Pressing the power button again to wake-up the whole system. During the SoftOff state, the ATX power supply provides power the system to keep the required circuitry "alive". In case the system malfunctions and you want to turn off the power, just press and hold the power button for 4 seconds. The power will turn off and no power will be provided to the motherboard.

A.5 Power Supply

As with all computer products, a stable power source is necessary for proper and reliable operation. It is even more important for processors that have high CPU clock rates of 1 GHz and faster.

The X8SIL/X8SIL-F/X8SIL-V accommodates ATX12V standard power supplies. Although most power supplies generally meet the specifications required by the CPU, some are inadequate. A 2-Amp of current supply on a 5V Standby rail is strongly recommended.

It is strongly recommended that you use a high quality power supply that meets ATX12V standard power supply Specification 1.1 or above. It is also required that the 12V 8-pin power connection (JPW2) be used for adequate power supply. In areas where noisy power transmission is present, you may choose to install a line filter to shield the computer from noise. It is recommended that you also install a power surge protector to help avoid problems caused by power surges.

The DLA Series does not have a function to determine pre-failure of a power supply. The power supply will have the LED to show it is "OK" or "failed" by showing the color green or amber for the respective status. When the power supply fails, it shows amber, when it is functioning correctly it shows green.

A.6 Super I/O

The disk drive adapter functions of the Super I/O chip include a floppy disk drive controller that is compatible with industry standard 82077/765, a data separator, write pre-compensation circuitry, decode logic, data rate selection, a clock generator, drive interface control logic and interrupt and DMA logic. The wide range of functions integrated onto the Super I/O greatly reduces the number of components required for interfacing with floppy disk

drives. The Super I/O supports two 360 K, 720 K, 1.2 M, 1.44 M or 2.88 M disk drives and data transfer rates of 250 Kb/s, 500 Kb/s or 1 Mb/s.

It also provides two high-speed, 16550-compatible serial communication ports (UARTs). Each UART includes a 16-byte send/receive FIFO, a programmable baud rate generator, complete modem control capability and a processor interrupt system. Both UARTs provide legacy speed with baud rate of up to 115.2 Kbps as well as an advanced speed with baud rates of 250 K, 500 K, or 1 Mb/s, which support higher speed modems.

The Super I/O provides functions that comply with ACPI (Advanced Configuration and Power Interface), which includes support of legacy and ACPI power management through a SMI or SCI function pin. It also features auto power management to reduce power consumption.

A.7 iSCSI Support

The X8SIL/X8SIL-F/X8SIL-V motherboard supports the iSCSI Internet Protocol. iSCSI is an IP networking standard used to link and manage data storage, and transfer data across the internet and private intranets through long distance. iSCSI can be used to transmit data over local area networks (LANs), wide area networks (WANs), or the Internet. It can enable location-independent data storage and retrieval.

iSCSI allow clients to issue SCSI commands to remote SCSI storage devices and allow data centers to consolidate remote storage devices into storage arrays, giving an illusion of locally attached disks to host servers. Unlike fiber-optic networks that require special cabling, iSCSI can run over long distance using existing networks.

For the X8SIL/X8SIL-F/X8SIL-V motherboard, iSCSI is supported on LAN 1. This can be enabled through the BIOS: Advanced => PCI/PnP Configuration => Onboard LAN1 Option ROM Select.

A.8 Overview of the Nuvoton BMC Controller

The Nuvoton WPCM150 is a combined Baseboard Management Controller and 2D/VGA-compatible Graphics Core with PCI interface, Virtual Media and Keyboard, and a Keyboard/Video/Mouse Redirection (KVMR) module.

The WPCM150 interfaces with the host system via a PCI interface to communicate with the Graphics core. It supports USB 2.0 and 1.1 for remote keyboard/mouse/virtual media emulation. It also provides an LPC interface to control Super I/O functions and connects to the network via an external Ethernet PHY module or shared NCSI connections.

The Nuvoton BMC communicates with onboard components via six SMBus interfaces, fan control, Platform Environment Control Interface (PECI) buses, and General Purpose I/O (T-SGPIO) ports.


It also includes the following features:

- One X-Bus parallel interface for expansion I/O connections
- Three ADC inputs, Analog and Digital Video outputs
- Two serial for boundary scan and debug


There are two different versions of the Nuvoton BMC chip that are used in this product series. The Nuvoton WPCM150 (Manufacturer P/N WPCM150GA0BX5) which includes all of the features above, is the chip installed in the X8SIL motherboard. Another version, the Nuvoton WPCM450 (Manufacturer P/N WPCM450RA0BX) also has all the features as described above plus IPMI 2.0 support. This particular chip is installed in the X8SIL-F and X8SIL-V models. However, IPMI is supported only on the X8SIL-F motherboard.

A.9 RAID Disaster Recovery

A failure of multiple disks (offline - status) happens in different ways that involve various, sometimes unusual methods to restore the RAID system. Normally, the cache of the RAID disks should be set to "write through" if no UPS is active, and the controller be buffered by a battery, when controller cache is set to "write back". Nevertheless, both caches have a great influence on the RAID performance.

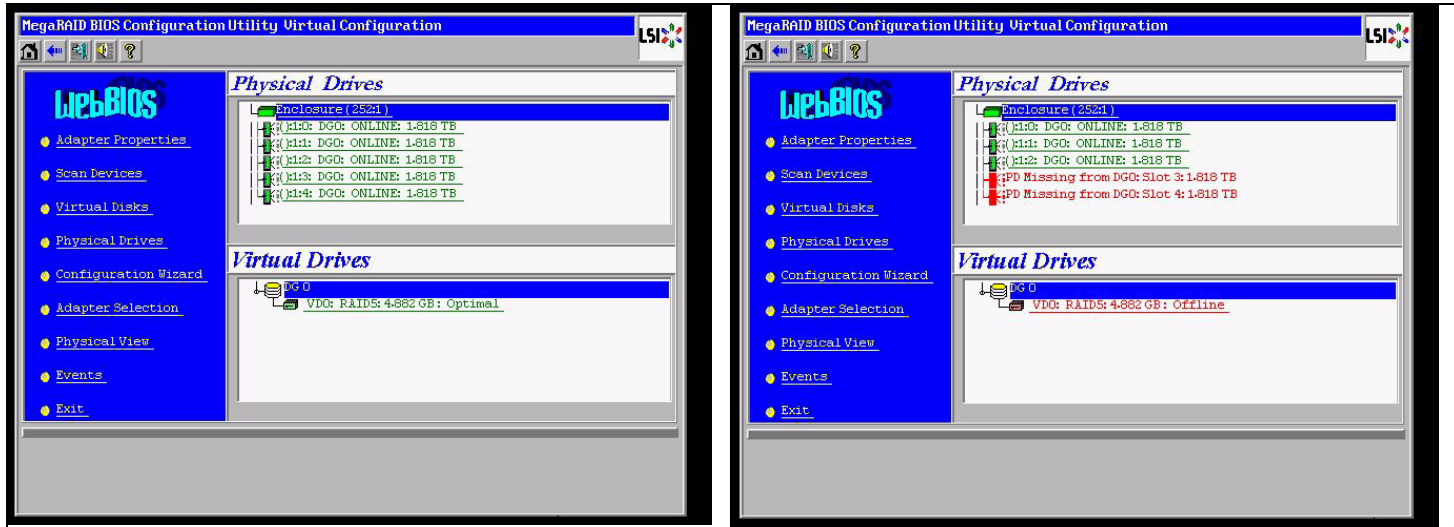

Basically, the RAID controller writes the raidconfiguration - information (COD = configuration-on-disk) in an only field on each disk managed by the controller. The data area of a disk is never used by this, no matter, how often you write and delete the RAID configuration. "New" or "Clear" Configuration deletes the COD, if available.

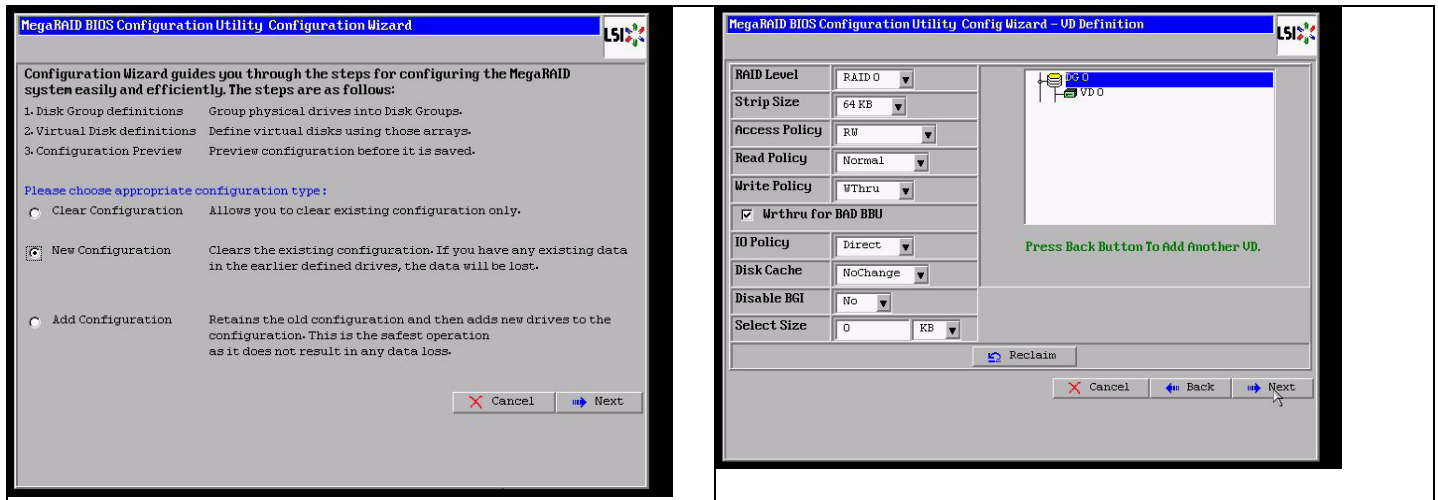

"Save Configuration" saves the new COD. "Initialize" deletes the Disk Data (OS).



The data area can only be deleted with a "fast" or "full" initialization; as long as an initialization is omitted, the OS file system is still there. But OS only boots, if the original RAID configuration is restored (if no multiple hardware damage exists).

If, for example, the RAID is deleted accidentally (eg. with "clear" or "new configuration" instead of add), and the configuration is set up exactly (in disk order and stripesize) the same as before, the data area on the remaining operating system boots again without any problem. This fact is useful when the RAID (COD) was lost for some reason, but the disks are OK.


A.9.1 Multiple Disks failed (Theory)

If multiple disks have failed (by power failure, backplane error, etc.), it is important to know the order, which disk failure degraded the RAID (first fail) and which disk ID prevented a further access to the RAID (second fail).

For instance:

RAID 5 (4 disks) got from rebuild to offline, no Hot Spare

- 2 disks online
- 2 disks missing
- 2 disks "foreign configuration" or "unconfigured good"

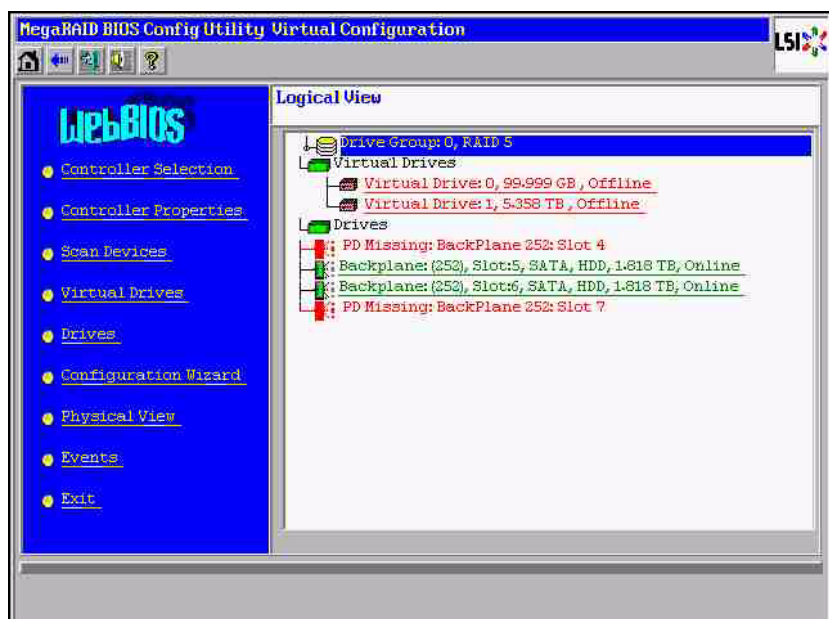

The rebuild only could start, when the other three disks were online before: the rebuild disk is "first fail", degraded RAID was rebuilding. "Foreign" disk is the "second fail" disk, one of the disks, from which the parity data was copied to the rebuilding disk before the crash.

If in "degraded" mode, the surviving disks was still used, a "parity – inconsistency" between the first failed (first fail) and the second failed disk occurs. But a RAID 5 is not usable when a second disk fails, so no inconsistency can exist.


If you try to restore the RAID, the first fail disk could be used for rebuild later (or a new disk). But the "second failed" disk must be used for hopefully get the offline RAID degraded again.

Two tools are useful to analyze what happened:


- the Event Viewer in the Controller Bios Utility
- the MegaCLI, a Command-Line Utility

How to use the Event Viewer in the Controller Bios Utility


Click on an event in the main screen; choose "physical" or "virtual drive" and an event class (informational, warning, critical or fatal); start at an appropriate sequence number (minus a few hundred), choose the number of events.

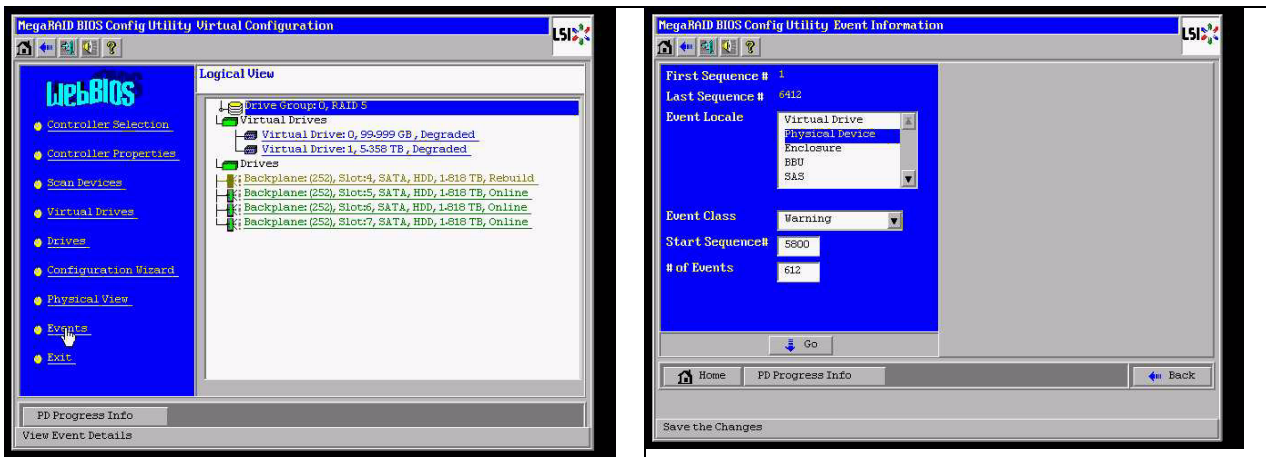


In this example, we choose a start sequence 5800 (from 6412) and all 612 events left. We find a timestamp, that PD (Physical Drive) 6 was removed. PD 4 stops rebuilding.

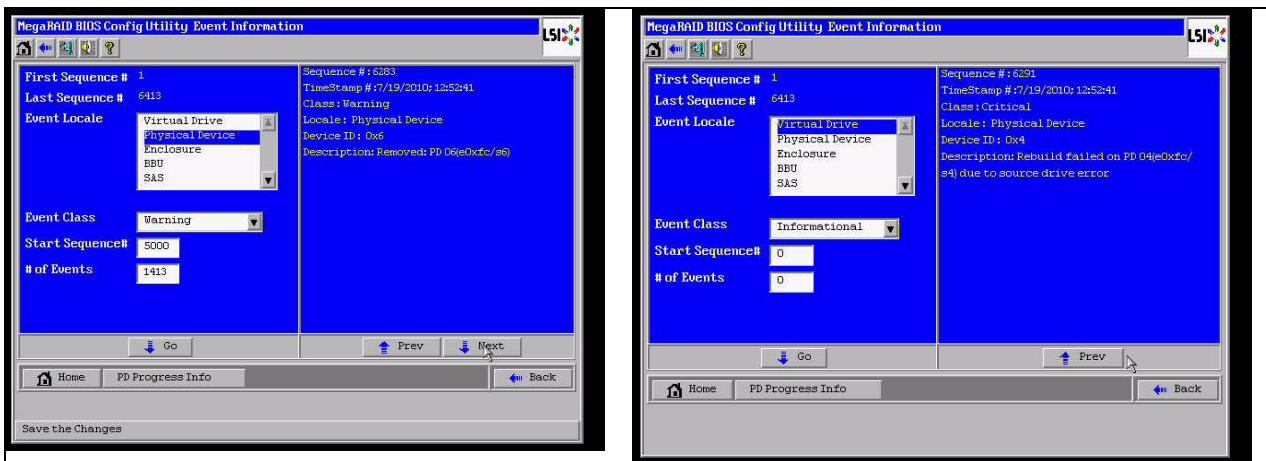

Finally, PD 4 is also removed.

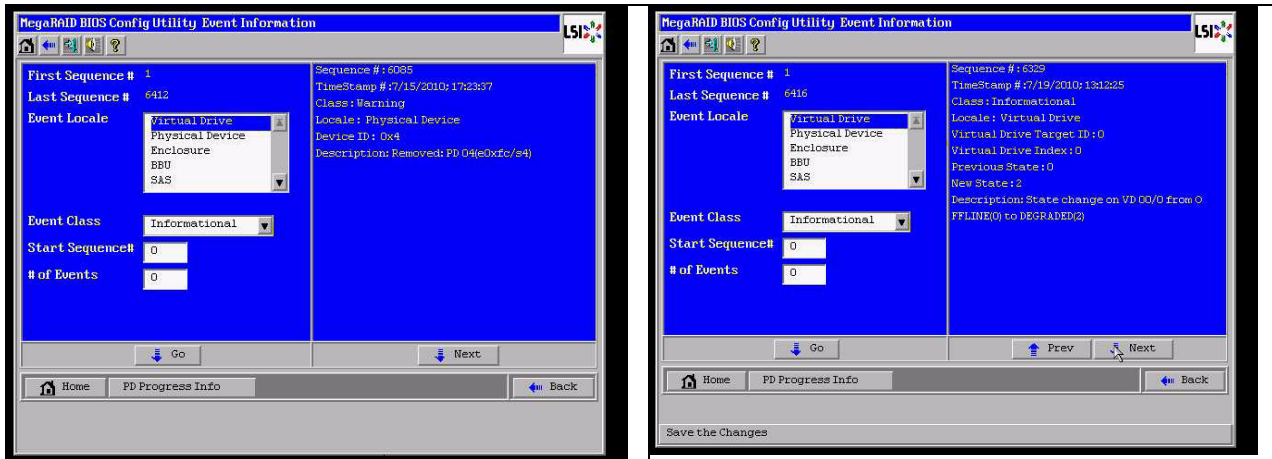


The VD event reports first a degraded state, then an offline state. The "first failed" disk was the rebuilding PD4. When PD6 failed, the rebuild stopped, when PD4 was gone, RAID gets offline.

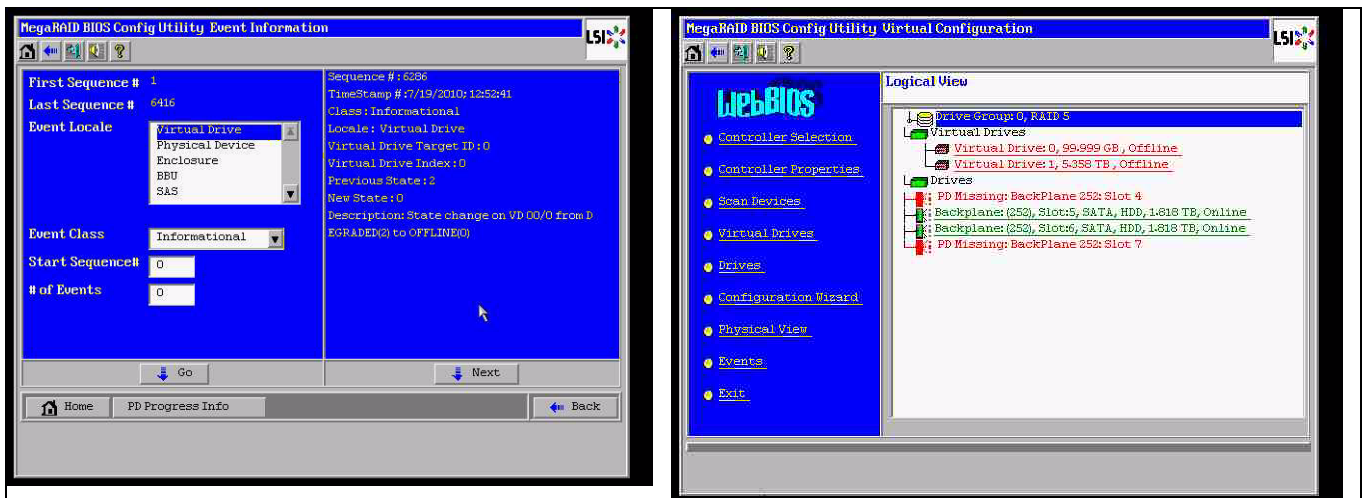

How to use the MegaCLI Command-Line Utility

Use a bootable DOS USB stick with XMS manager "himem.sys" and start the MegaCLI.exe. Please see the command reference in *Section A.9.4 MegaCLI Commandline Utility, page 44*.

The whole amount of log events can be seen with `MegaCLI -AdpAliLog -aAll > evt.txt`; but it takes a few minutes until the large file is written and it is too much information.

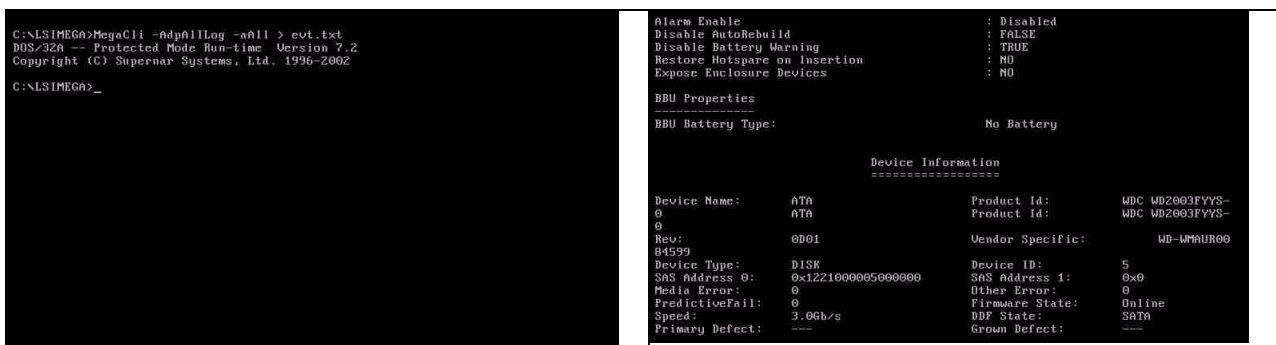

For example, it is much better, to use this commands (create with "-f ...txt" a file for analysis)

MegaCli -AdpEventLog -GetEvents -warning -f warning.txt -aALL

Adapter: 0 - Number of Events : 288

seqNum: 0x00001875

Time: Mon Jul 19 13:37:28 2010

Code: 0x00000124

Class: 1

Locale: 0x20

Event Description: Patrol Read can't be started, as PDs are either not ONLINE, or are in a VD with an active process, or are in an excluded VD

Event Data:

=====

None

seqNum: 0x0000188b

Time: Mon Jul 19 13:52:41 2010

Code: 0x00000070

Class: 1

Locale: 0x02

Event Description: Removed: PD 06(e0xfc/s6)

Event Data:

=====

Device ID: 6

Enclosure Index: 252

Slot Number: 6

MegaCli -AdpEventLog -GetEvents -critical -f critical.txt -aALL

Adapter: 0 - Number of Events : 288

seqNum: 0x00001893

Time: Mon Jul 19 13:52:41 2010

Code: 0x00000065

Class: 2

Locale: 0x02

Event Description: Rebuild failed on PD 04(e0xfc/s4) due to source drive error

Event Data:

=====

Device ID: 4

Enclosure Index: 252

Slot Number: 4

seqNum: 0x000018ba

Time: Mon Jul 19 14:12:25 2010

Code: 0x000000fb

Class: 2

```

Locale: 0x01
Event Description: VD 00/0 is now DEGRADED
Event Data:
=====
Target Id: 0

seqNum: 0x000018bc
Time: Mon Jul 19 14:12:25 2010

```

```

Code: 0x000000fb
Class: 2
Locale: 0x01
Event Description: VD 01/1 is now DEGRADED
Event Data:
=====
Target Id: 1

```

Useful commands

MegaCli -AdpEventLog -GetEvents -info -f info.txt -aALL


(but a large text file)

MegaCli -AdpEventLog -GetEvents -fatal -f fatal.txt -aALL


<pre> Adapter: 0 - Number of Events : 288 seqNum: 0x0000188f Time: Mon Jul 19 13:52:41 2010 Code: 0x000000fc Class: 3 Locale: 0x01 Event Description: VD 00/0 is now OFFLINE Event Data: ===== Target Id: 0 </pre>	<pre> Adapter: 0 - Number of Events : 288 seqNum: 0x00001891 Time: Mon Jul 19 13:52:41 2010 Code: 0x000000fc Class: 3 Locale: 0x01 Event Description: VD 01/1 is now OFFLINE Event Data: ===== Target Id: 1 </pre>
--	--

A.9.2 Multiple Disks failed (Practice)


Press "C" to enter Utility. Click "start" and "scan disks".

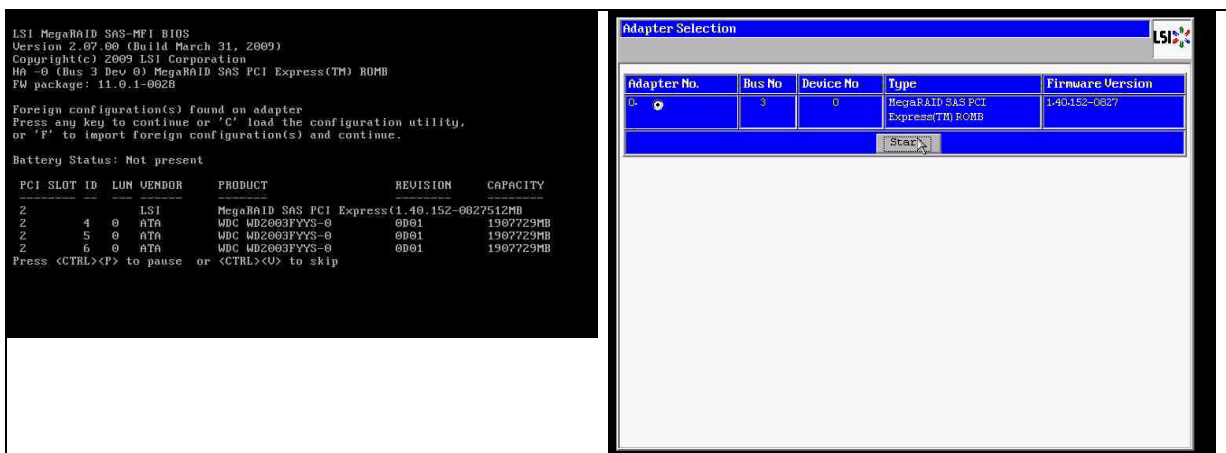


You get to the "foreign configuration import" screen.

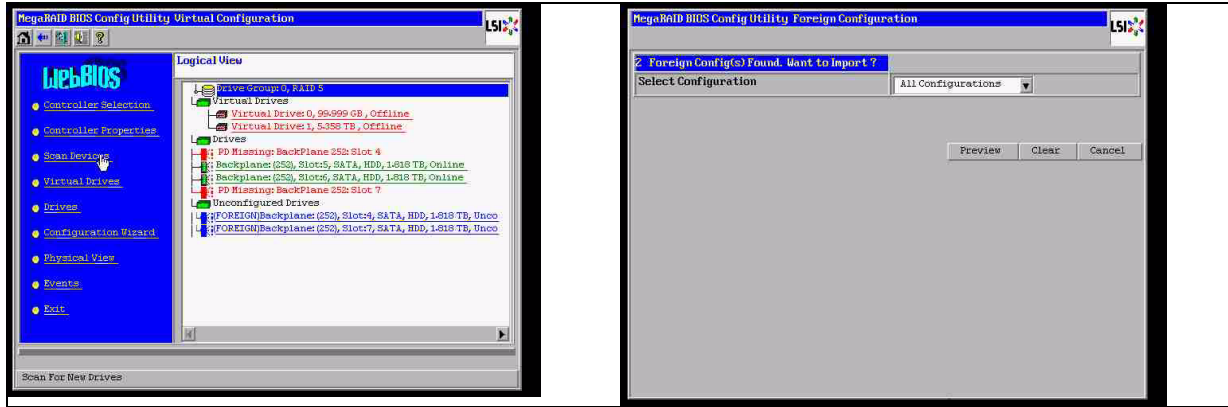


Select one of the two configurations and click **Preview**.

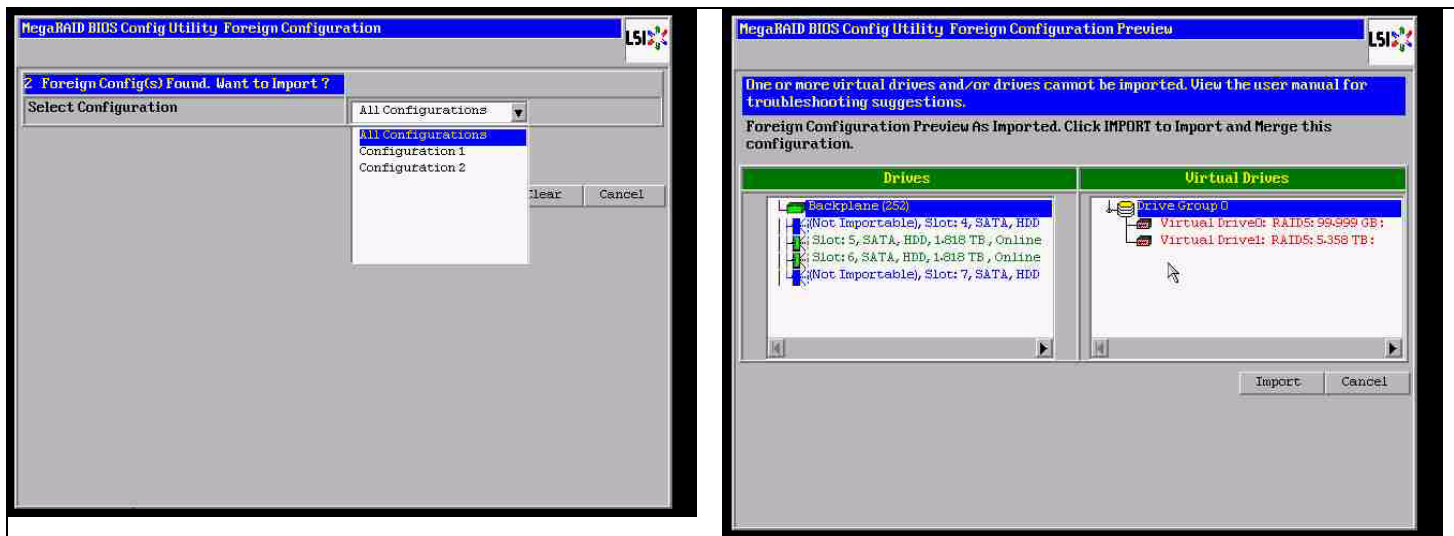


All disks are seen, but configuration is marked as not importable; click **Cancel** and view Configuration 2. It is the same; this means, a complex situation requires manual interaction.

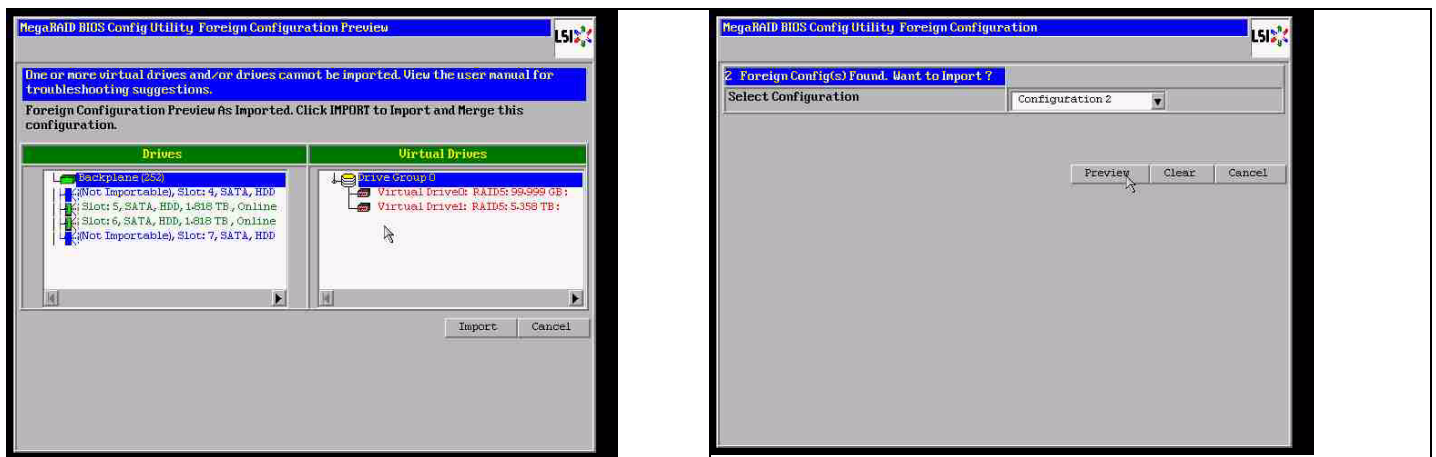


Click to clear all configurations, ignore the warning.

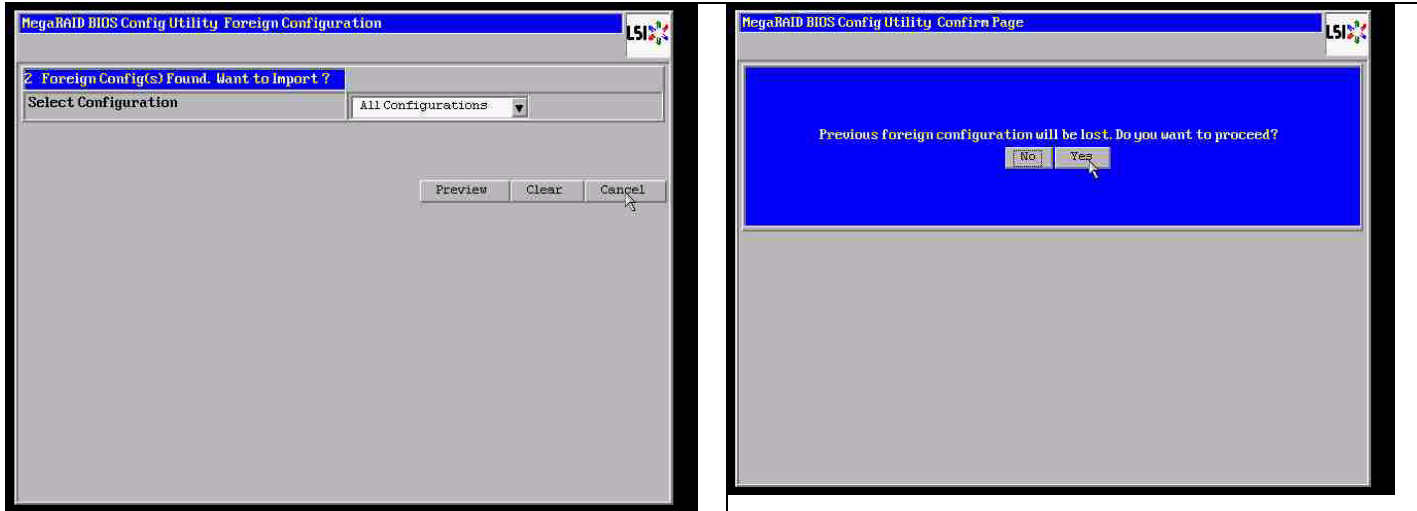


Before clear foreign configuration, 2 disks were missing, two were foreign. After clear, the foreign disks now are shown as unconfigured.

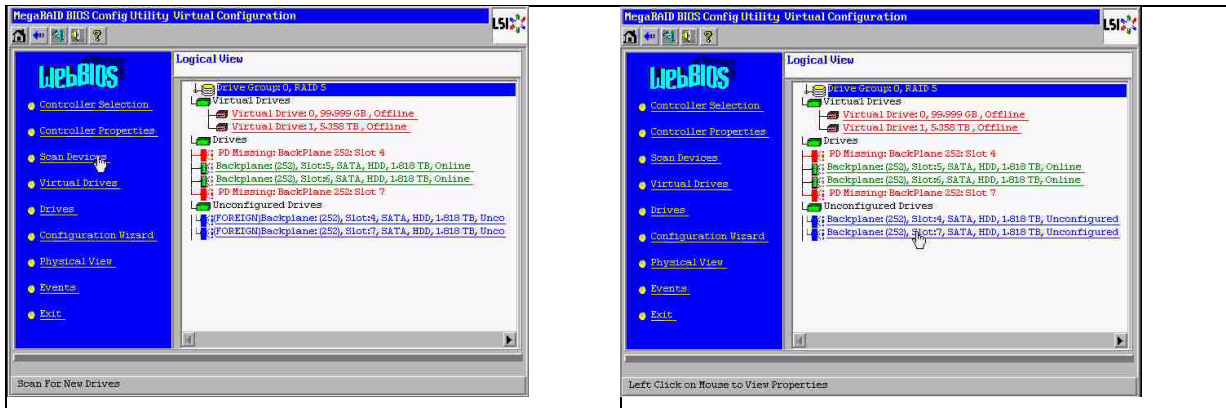


Use the event viewer or MegaCLI to identify the "first failed" disk.

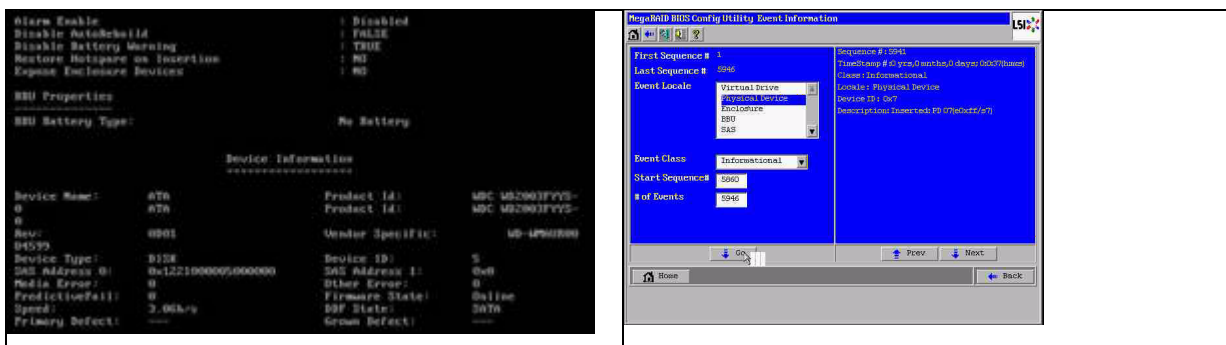


In this example, disk in Slot 4 was first fail, Slot 7 second fail. Click on "second fail" PD7 in the Logical View and you get in the Physical drive menu. Choose "replace missing PD" and the correct row for Slot 7 drive and click "go". Ignore the warning.

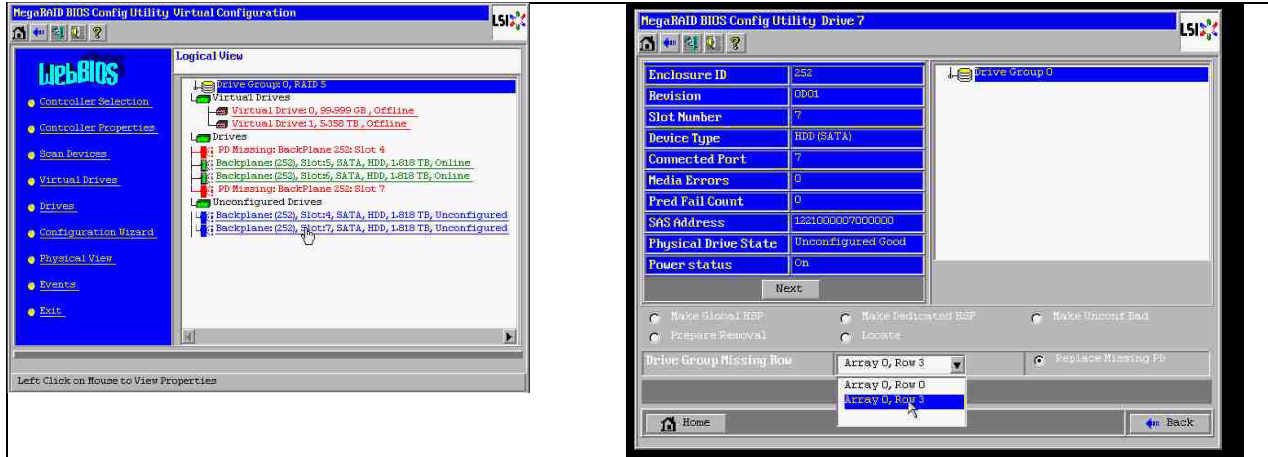



Now in Logical View we see this disk marked as offline; click on the disk to get in PD menu. Click on "Make online" and "go".

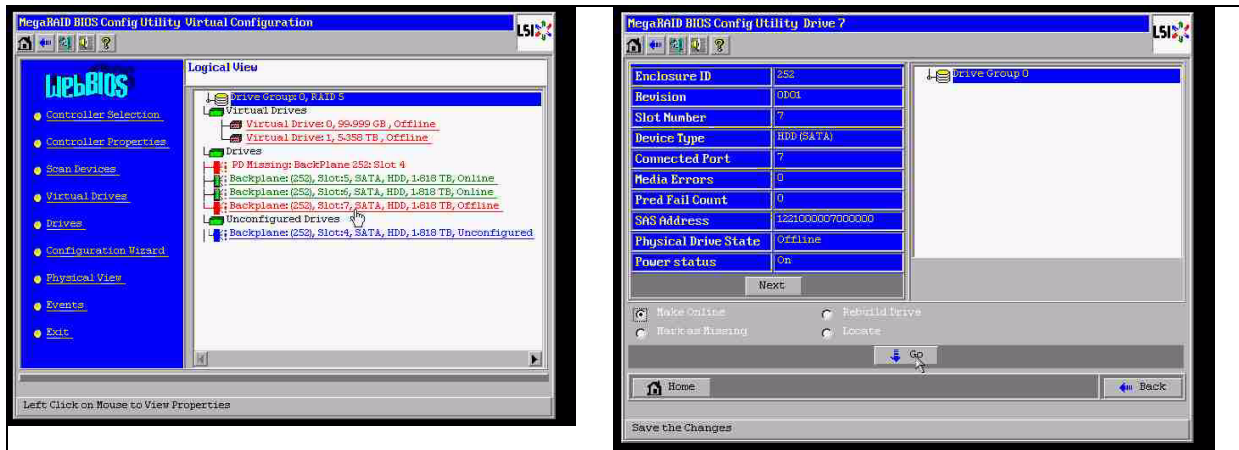



Now in logical view we see disk online and a degraded RAID. Click on disk 4 to get in the PD menu. Click on correct row, on "Global" or "dedicated Hot Spare" and on "go".

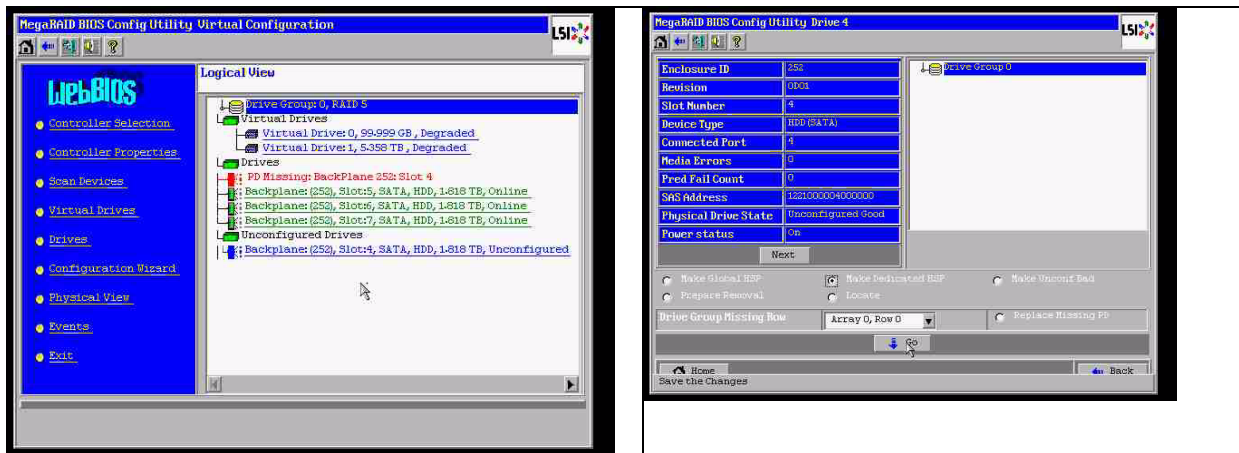



Click on home; in the Logical View, the rebuild is starting.

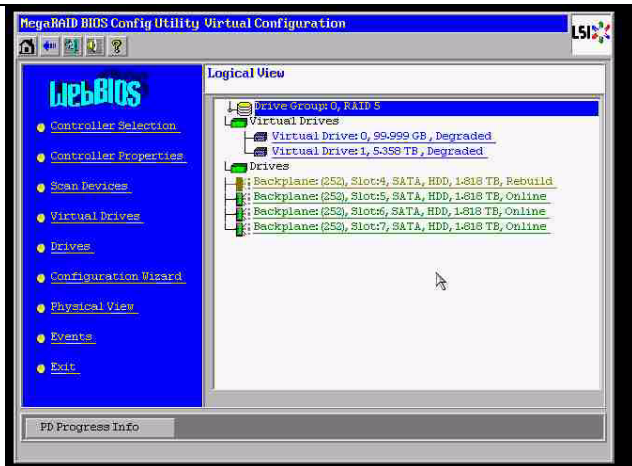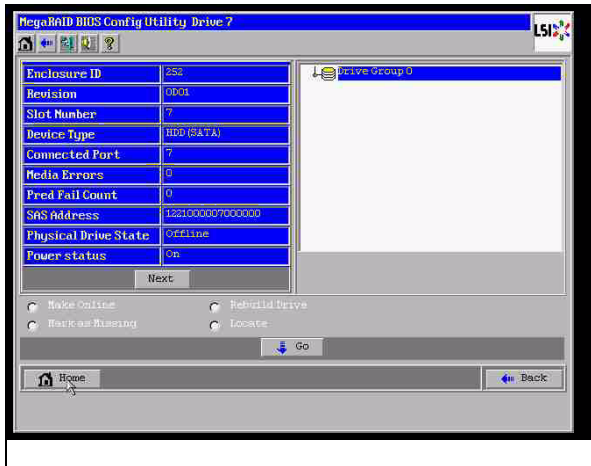


A.9.3 Foreign configuration disk appears in the Windows GUI after booting
 The RAID is degraded. Topology error is shown. Right-click Megaraid Controller in the MSM GUI. Click "scan foreign configuration". In the next window, click "clear foreign configuration".

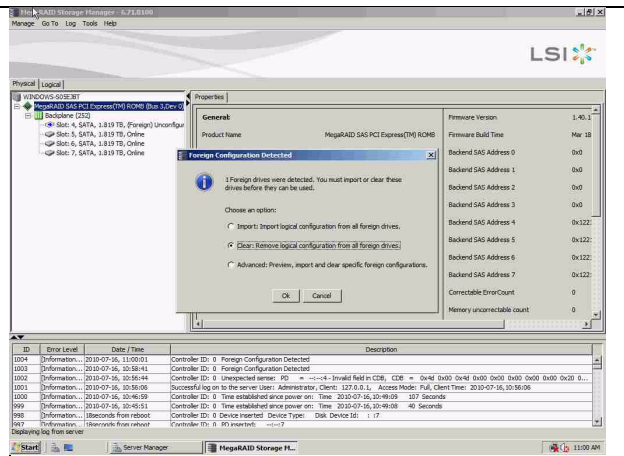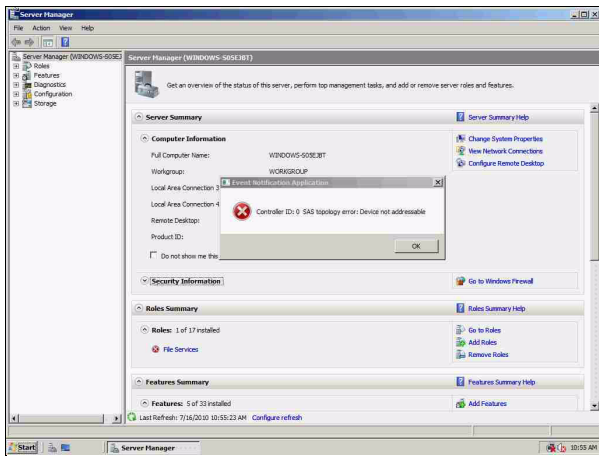

An unconfigured good drive is displayed. Right-click this drive and choose a hotspare type.

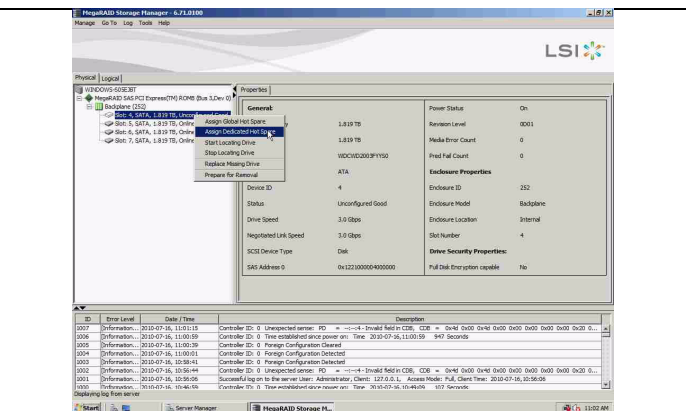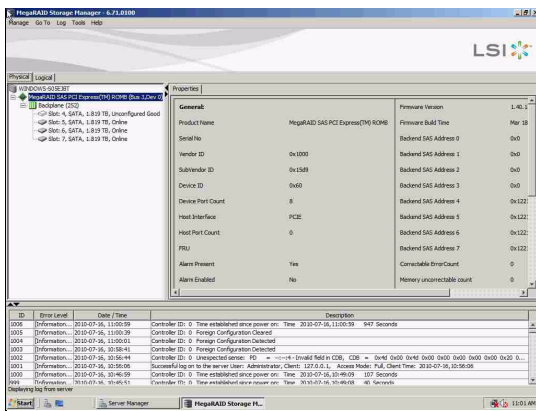

You see the rebuild is starting at once.

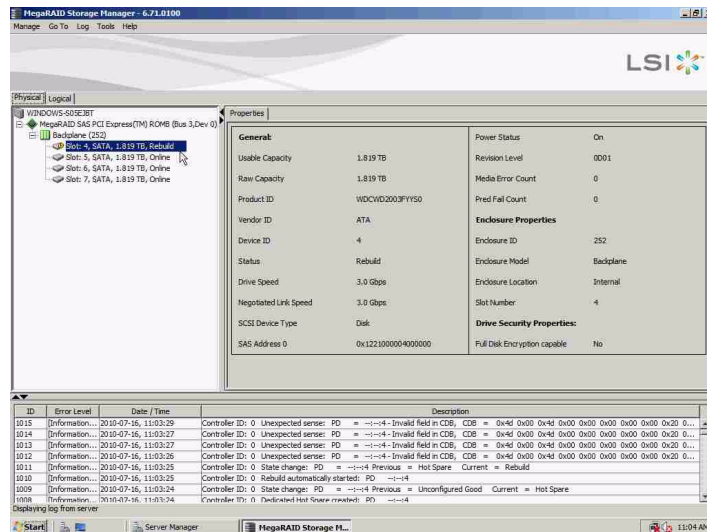

A.9.4

MegaCLI Commandline Utility

[-Silent] [-AppLogFile filename] [-NoLog] [-page [N]]

[-] is optional.

N - Number of lines per page.

MegaCli -v

MegaCli -help|-h|?

MegaCli -adpCount

MegaCli -AdpSetProp {CacheFlushInterval -val} | {RebuildRate -val}

| {PatrolReadRate -val} | {BgiRate -val} | {CCRate -val}

| {ReconRate -val} | {SpinupDriveCount -val} | {SpinupDelay -val}

| {CoercionMode -val} | {ClusterEnable -val} | {PredFailPollInterval -val}

| {BatWarnDsbl -val} | {EccBucketSize -val} | {EccBucketLeakRate -val}

| {AbortCCOnError -val} | AlarmEnbl | AlarmDsbl | AlarmSilence

| {SMARTCpyBkEnbl -val} | {SSDSMARTCpyBkEnbl -val} | NCQEnbl | NCQDsbl

| {MaintainPdFailHistoryEnbl -val} | {RstrHotSpareOnInsert -val}

| {EnblSpinDownUnConfigDrvs -val} | {EnblSSDPatrolRead -val}

| {DisableOCR -val} | {BootWithPinnedCache -val}

| AutoEnhancedImportEnbl | AutoEnhancedImportDsbl -aN|-a0,1,2|-aALL

| {ExposeEnclDevicesEnbl -val} -aN|-a0,1,2|-aALL

| {DsblSpinDownHsp -val} -aN|-a0,1,2|-aALL

| {SpinDownTime -val} -aN|-a0,1,2|-aALL

MegaCli -AdpSetProp -AutoDetectBackPlaneDsbl -val -aN|-a0,1,2|-aALL

val - 0=Enable Auto Detect of SGPIO and i2c SEP.

1=Disable Auto Detect of SGPIO.

2=Disable Auto Detect of i2c SEP.

3=Disable Auto Detect of SGPIO and i2c SEP.

MegaCli -AdpSetProp -CopyBackDsbl -val -aN|-a0,1,2|-aALL

val - 0=Enable Copyback.

1=Disable Copyback.

MegaCli -AdpSetProp -EnableJBOD -val -aN|-a0,1,2|-aALL

val - 0=Disable JBOD mode.

1=Enable JBOD mode.

MegaCli -AdpSetProp -DsblCacheBypass -val -aN|-a0,1,2|-aALL

val - 0=Enable Cache Bypass.

1=Disable Cache Bypass.

MegaCli -AdpSetProp -LoadBalanceMode -val -aN|-a0,1,2|-aALL
 val - 0=Auto Load balance mode.
 1=Disable Load balance mode.

MegaCli -AdpSetProp -UseFDEOnlyEncrypt -val -aN|-a0,1,2|-aALL
 val - 0=FDE and controller encryption (if HW supports) is allowed.
 1=Only support FDE encryption, disallow controller encryption.

MegaCli -AdpSetProp -PrCorrectUncfgdAreas -val -aN|-a0,1,2|-aALL
 val - 0= Correcting Media error during PR is disabled.
 1=Correcting Media error during PR is allowed.

MegaCli -AdpSetProp -DsblSpinDownHSP -val -aN|-a0,1,2|-aALL
 val - 0= Spinning down the Hot Spare is enabled.
 1=Spinning down the Hot Spare is disabled.

MegaCli -AdpGetProp CacheFlushInterval | RebuildRate | PatrolReadRate
 | BgiRate | CCRate | ReconRate | SpinupDriveCount | SpinupDelay
 | CoercionMode | ClusterEnable | PredFailPollInterval | BatWarnDsbl
 | EccBucketSize | EccBucketLeakRate | EccBucketCount | AbortCCOnError
 | AlarmDsply | SMARTCpyBkEnbl | SSDSMARTCpyBkEnbl | NCQDsply
 | MaintainPdFailHistoryEnbl | RstrHotSpareOnInsert
 | EnblSpinDownUnConfigDrvs | EnblSSDPatrolRead | DisableOCR
 | BootWithPinnedCache | AutoEnhancedImportDsply | AutoDetectBackPlaneDsbl
 | CopyBackDsbl | LoadBalanceMode | UseFDEOnlyEncrypt | WBSupport | EnableJBOD
 | DsblCacheBypass | ExposeEnclDevicesEnbl | DsblSpinDownHsp | SpinDownTime
 | PrCorrectUncfgdAreas -aN|-a0,1,2|-aALL
 | DsblSpinDownHSP -aN|-a0,1,2|-aALL

MegaCli -AdpAllInfo -aN|-a0,1,2|-aALL

MegaCli -AdpGetTime -aN|-a0,1,2|-aALL

MegaCli -AdpSetTime yyyyymmdd hh:mm:ss -aN

MegaCli -AdpSetVerify -f fileName -aN|-a0,1,2|-aALL

MegaCli -AdpBIOS -Enbl |-Dsbl | -SOE | -BE | -Dsply -aN|-a0,1,2|-aALL

MegaCli -AdpBootDrive {-Set {-Lx | -physdrv[E0:S0]}}-Get -aN|-a0,1,2|-aALL

MegaCli -AdpAutoRbld -Enbl|-Dsbl|-Dsply -aN|-a0,1,2|-aALL

MegaCli -AdpCacheFlush -aN|-a0,1,2|-aALL

MegaCli -AdpPR -Dsbl|EnblAuto|EnblMan|Start|Stop|Info| SSDPatrolReadEnbl |
 SSDPatrolReadDsbl
 |{-SetDelay Val}|{-SetStartTime yyyyymmdd hh}|{-maxConcurrentPD Val} -aN|-a0,1,2|-aALL

MegaCli -AdpCcSched -Dsbl|-Info|{-ModeConc | -ModeSeq [-ExcludeLD -LN|-L0,1,2]
 [-SetStartTime yyyyymmdd hh] [-SetDelay val] } -aN|-a0,1,2|-aALL

MegaCli -AdpCcSched -SetStartTime yyyyymmdd hh -aN|-a0,1,2|-aALL

MegaCli -AdpCcSched -SetDelay val -aN|-a0,1,2|-aALL

MegaCli -FwTermLog -BBUoff|BBUoffTemp|BBUon|Dsply|Clear -aN|-a0,1,2|-aALL

MegaCli -AdpAllLog -aN|-a0,1,2|-aALL

MegaCli -AdpDiag [val] -aN|-a0,1,2|-aALL
 val - Time in second.

MegaCli -AdpBatTest -aN|-a0,1,2|-aALL

MegaCli -PDList -aN|-a0,1,2|-aALL

MegaCli -PDGetNum -aN|-a0,1,2|-aALL

MegaCli -pdInfo -PhysDrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL

MegaCli -PDOnline -PhysDrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL

MegaCli -PDOOffline -PhysDrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL

```

MegaCli -PDMakeGood -PhysDrv[E0:S0,E1:S1,...] | [-Force] -aN|-a0,1,2|-aALL
MegaCli -PDMakeJBOD -PhysDrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PDHSP {-Set [-Dedicated [-ArrayN|-Array0,1,2...]] [-EnclAffinity] [-nonRevertible]}
|-Rmv -PhysDrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PDRbld -Start|-Stop|-ShowProg |-ProgDsply
-PhysDrv [E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PDClear -Start|-Stop|-ShowProg |-ProgDsply
-PhysDrv [E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PdLocate {-Start} | -stop } -physdrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PdMarkMissing -physdrv[E0:S0,E1:S1,...] -aN|-a0,1,2|-aALL
MegaCli -PdGetMissing -aN|-a0,1,2|-aALL
MegaCli -PdReplaceMissing -physdrv[E0:S0] -arrayA, -rowB -aN
MegaCli -PdPrpRmv [-UnDo] -physdrv[E0:S0] -aN|-a0,1,2|-aALL
MegaCli -EncInfo -aN|-a0,1,2|-aALL
MegaCli -EncStatus -aN|-a0,1,2|-aALL
MegaCli -PhyInfo -phyM -aN|-a0,1,2|-aALL
MegaCli -LDInfo -Lx|-L0,1,2|-Lall -aN|-a0,1,2|-aALL
MegaCli -LDSetProp {-Name LdNamestring} | -RW|RO|Blocked | WT|WB [-
Immediate]|RA|NORA|ADRA
| Cached|Direct | -EnDskCache|DisDskCache | CachedBadBBU|NoCachedBadBBU
-Lx|-L0,1,2|-Lall -aN|-a0,1,2|-aALL
MegaCli -LDGetProp -Cache | -Access | -Name | -DskCache -Lx|-L0,1,2|-LALL
-aN|-a0,1,2|-aALL
MegaCli -getLdExpansionInfo -Lx|-L0,1,2|-Lall -aN|-a0,1,2|-aALL
MegaCli -LdExpansion -pN -dontExpandArray -Lx|-L0,1,2|-Lall -aN|-a0,1,2|-aALL
MegaCli -LDInit {-Start [-full]]|-Abort|-ShowProg|-ProgDsply -Lx|-L0,1,2|-LALL -aN|-a0,1,2|-aALL
MegaCli -LDCC {-Start [-force]]|-Abort|-ShowProg|-ProgDsply -Lx|-L0,1,2|-LALL -aN|-a0,1,2|-
aALL
MegaCli -LDBI -Enbl|-Dsbl|-getSetting|-Abort|-ShowProg|-ProgDsply -Lx|-L0,1,2|-LALL -aN|-
a0,1,2|-aALL
MegaCli -LDRecon {-Start -rX [{-Add | -Rmv} -Physdrv[E0:S0,...]]|-ShowProg|-ProgDsply
-Lx -aN
MegaCli -LdPdInfo -aN|-a0,1,2|-aALL
MegaCli -LDGetNum -aN|-a0,1,2|-aALL
MegaCli -LDBBMClr -Lx|-L0,1,2,...|-Lall -aN|-a0,1,2|-aALL
MegaCli -CfgLdAdd -rX[E0:S0,E1:S1,...] [WT|WB] [NORA|RA|ADRA] [Direct|Cached]
[CachedBadBBU|NoCachedBadBBU] [-szXXX [-szYYY ...]]
[-strpszM] [-Hsp[E0:S0,...]] [-AfterLdX] [-Force]][FDE|CtrlBased] -aN
MegaCli -CfgSscdAdd -Physdrv[E0:S0,...] {-Name LdNamestring} -aN|-a0,1,2|-aALL
MegaCli -CfgEachDskRaid0 [WT|WB] [NORA|RA|ADRA] [Direct|Cached]
[CachedBadBBU|NoCachedBadBBU] [-strpszM]][FDE|CtrlBased] -aN|-a0,1,2|-aALL
MegaCli -CfgClr -aN|-a0,1,2|-aALL
MegaCli -CfgDsply -aN|-a0,1,2|-aALL
MegaCli -CfgLdDel -LX|-L0,2,5...|-LALL -aN|-a0,1,2|-aALL
MegaCli -CfgSscdDel -LX|-L0,2,5...|-LALL -aN|-a0,1,2|-aALL
MegaCli -CfgFreeSpaceinfo -aN|-a0,1,2|-aALL
MegaCli -CfgSpanAdd -r10 -Array0[E0:S0,E1:S1] -Array1[E0:S0,E1:S1] [-ArrayX[E0:S0,E1:S1]
...] -aN
MegaCli -CfgSpanAdd -r50 -Array0[E0:S0,E1:S1,E2:S2,...] -Array1[E0:S0,E1:S1,E2:S2,...]
[-ArrayX[E0:S0,E1:S1,E2:S2,...] ...] [WT|WB] [NORA|RA|ADRA] [Direct|Cached]

```

```

    [CachedBadBBU|NoCachedBadBBU][-strpszM][-szXXX[-szYYY ...]][-AfterLdX]
    [FDE|CtrlBased] -aN
MegaCli -CfgAllFreeDrv -rX [-SATAOnly] [-SpanCount XXX] [WT|WB] [NORA|RA|ADRA]
    [Direct|Cached] [CachedBadBBU|NoCachedBadBBU] [-strpszM]
    [-HspCount XX [-HspType -Dedicated|-EnclAffinity|-nonRevertible]] |
    [FDE|CtrlBased] -aN
MegaCli -CfgSave -f filename -aN
MegaCli -CfgRestore -f filename -aN
MegaCli -CfgForeign -Scan | [-SecurityKey ssssssssss] -aN|-a0,1,2|-aALL
MegaCli -CfgForeign -Dsply [x] | [-SecurityKey ssssssssss] -aN|-a0,1,2|-aALL
MegaCli -CfgForeign -Preview [x] | [-SecurityKey ssssssssss] -aN|-a0,1,2|-aALL
MegaCli -CfgForeign -Import [x] | [-SecurityKey ssssssssss] -aN|-a0,1,2|-aALL
MegaCli -CfgForeign -Clear [x][[-SecurityKey ssssssssss] -aN|-a0,1,2|-aALL
    x - index of foreign configurations. Optional. All by default.
MegaCli -AdpEventLog -GetEventLogInfo -aN|-a0,1,2|-aALL
MegaCli -AdpEventLog -GetEvents {-info -warning -critical -fatal} {-f <fileName>} -aN|-a0,1,2|-
aALL
MegaCli -AdpEventLog -GetSinceShutdown {-info -warning -critical -fatal} {-f <fileName>} -aN|-
a0,1,2|-aALL
MegaCli -AdpEventLog -GetSinceReboot {-info -warning -critical -fatal} {-f <fileName>} -aN|-
a0,1,2|-aALL
MegaCli -AdpEventLog -IncludeDeleted {-info -warning -critical -fatal} {-f <fileName>} -aN|-
a0,1,2|-aALL
MegaCli -AdpEventLog -GetLatest n {-info -warning -critical -fatal} {-f <fileName>} -aN|-a0,1,2|-
aALL
MegaCli -AdpEventLog -GetCCIncon -f <fileName> -LX|-L0,2,5...|-LALL -aN|-a0,1,2|-aALL
MegaCli -AdpEventLog -Clear -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -GetBbuStatus -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -GetBbuCapacityInfo -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -GetBbuDesignInfo -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -GetBbuProperties -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -BbuLearn -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -BbuMfgSleep -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -BbuMfgSeal -aN|-a0,1,2|-aALL
MegaCli -AdpBbuCmd -SetBbuProperties -f <fileName> -aN|-a0,1,2|-aALL
MegaCli -AdpFacDefSet -aN
MegaCli -AdpM0Flash -f filename
MegaCli -AdpGetConnectorMode -ConnectorN|-Connector0,1|-ConnectorAll -aN|-a0,1,2|-aALL
MegaCli -AdpSetConnectorMode -Internal|-External|-Auto -ConnectorN|-Connector0,1|-
ConnectorAll -aN|-a0,1,2|-aALL
MegaCli -PhyErrorCounters -aN|-a0,1,2|-aALL
MegaCli -DirectPdMapping -Enbl|-Dsbl|-Dsply -aN|-a0,1,2|-aALL
MegaCli -ShowEnclList -aN|-a0,1,2|-aALL
MegaCli -ShowVpd -Page N -Encl N -aN|-a0,1,2|-aALL
MegaCli -EnclLocate -Start|-Stop -Encl N -aN|-a0,1,2|-aALL
MegaCli -EnclFwDownload -Encl N -Esm A|B -f <filename> -aN|-a0,1,2|-aALL
MegaCli -PdFwDownload [-SataBridge] -PhysDrv[0:1,1:2,...] -f <filename> -aN|-a0,1,2|-aALL
MegaCli -SetFacDefault -Encl N -Esm A|B -f <filename> -aN|-a0,1,2|-aALL
MegaCli -PDCpyBk -Start -PhysDrv[E0:S0,E1:S1] -aN|-a0,1,2|-aALL

```

```

MegaCli -PDCpyBk -Stop|ShowProg|ProgDsply -PhysDrv[E0:S0] -aN|-a0,1,2|-aALL
MegaCli -PDInstantSecureErase -PhysDrv[E0:S0,E1:S1,...] | [-Force] -aN|-a0,1,2|-aALL
MegaCli -LDMakeSecure -Lx|-L0,1,2,...|-Lall -aN|-a0,1,2|-aALL
MegaCli -DestroySecurityKey | [-Force] -aN
MegaCli -CreateSecurityKey -SecurityKey ssssssssss | [-Passphrase ssssssssss] | [-KeyID
kkkkkkkkkk] -aN
MegaCli -ChangeSecurityKey -OldSecurityKey ssssssssss | -SecurityKey ssssssssss|
[-Passphrase ssssssssss] | [-KeyID kkkkkkkkkk] -aN
MegaCli -GetKeyID [-PhysDrv[E0:S0]] -aN
MegaCli -SetKeyID -KeyID kkkkkkkkkk -aN
MegaCli -VerifySecurityKey -SecurityKey ssssssssss -aN

```

ssssssssss - It must be between eight and thirty-two characters and contain at least one number, one lowercase letter, one uppercase letter and one non-alphanumeric character.

kkkkkkkkkk - Must be less than 256 characters.

```

MegaCli -GetPreservedCacheList -aN|-a0,1,2|-aALL
MegaCli -DiscardPreservedCache -Lx|-L0,1,2|-Lall -aN|-a0,1,2|-aALL
MegaCli -AdpInfoCompare {-checkFw <string> | -checkID -hex | -checkBatt -val | -checkDimm -val} -aN|-a0,1,2|-aALL
MegaCli -adpFwDump
MegaCli -AdpNameRtn -aN|-a0,1,2|-aALL

```

ssssssssss - It must be between eight and thirty-two characters and contain at least one number, one lowercase letter, one uppercase letter and one non-alphanumeric character.

kkkkkkkkkk - Must be less than 256 characters.

```

MegaCli -ShowSummary [-f filename] -aN

```

Note: The directly connected drives can be specified as [:S]

Wildcard '?' can be used to specify the enclosure ID for the drive in the only enclosure without direct connected device or the direct connected drives with no enclosure in the system.

Note:[-aALL] option assumes that the parameters specified are valid for all the Adapters.

The following options may be given at the end of any command above:

```

[-Silent] [-AppLogFile filename] [-NoLog] [-page [N]]

```

[-] is optional.

N - Number of lines per page.

Exit Code: 0x00

Bosch Sicherheitssysteme GmbH

Werner-von-Siemens-Ring 10

85630 Grasbrunn

Germany

www.boschsecurity.com

© Bosch Sicherheitssysteme GmbH, 2010