



AT-WNU300N

IEEE802.11b/g/n 2T2R Wireless
Fast USB Adapter

User Manual

Copyright © 2009 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Microsoft and Internet Explorer are registered trademarks of Microsoft Corporation. Netscape Navigator is a registered trademark of Netscape Communications Corporation. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

SAFETY NOTICE

- ✓ Do not change any component.
- ✓ Only qualified technicians are allowed to service the equipment.
- ✓ Observe safety precautions to avoid electric shock

LIMITATION OF LIABILITY AND DAMAGES

THE PRODUCT AND THE SOFTWARES WITHIN ARE PROVIDED "AS IS," BASIS. THE MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") DISCLAIM ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTIES ARISING FROM COURSE OF DEALING, COURSE OF PERFORMANCE, OR USAGE OF TRADE. IN NO EVENT WILL THE SELLERS BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE PRODUCT OR ITS SOFTWARE IS ASSUMED BY CUSTOMER. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.

ELECTRICAL SAFETY AND EMISSIONS STANDARDS

This product meets the following standards.

U.S. Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

CE Marking Warning

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

EN 60950-1: 2006

Safety of Information Technology Equipment

EN 50385: 2002

Product standard to demonstrate the compliance of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110MHz - 40 GHz) - General public

EN 300 328 V1.7.1 (2006-10)

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 V1.8.1 (2008-04)

Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 V1.3.2 (2008-04)

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems.

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CONTENTS

LIMITATION OF LIABILITY AND DAMAGES	1
Preface	9
Purpose of This Guide	9
How This Guide is Organized.....	9
Document Conventions	9
Contacting Allied Telesis	10
Online Support.....	10
Email and Telephone Support	10
Warranty.....	10
Where to Find Web-based Guides	10
Returning Products	10
Sales or Corporate Information.....	10
Firmware & Software Updates.....	10
Tell Us What You Think	10
Chapter 1: Overview	11
Features	11
Product View	11
LEDs.....	11
Chapter 2: Installation	12
Reviewing Safety Precautions	12
Unpacking the Wireless Adapter	12
Driver and Utility Installation	12
Verifying the Installation	14
Warranty Registration	15
Chapter 3: PC Settings	16
<Windows Vista>.....	16
<Windows XP>	17
Chapter 4: Configure Wireless Network	19
Run AT-WNU300N Wireless Utility	19
The First View of AT-WNU300N Wireless Utility	19
Start Wireless Network Connection.....	19
Chapter 5: Utility Introduction	31
Profile	31
Network	32
Advanced	32
Statistics	33
WMM	34
WPS	34
CCX.....	35
RF on/off.....	36
About.....	36
Chapter 6: Troubleshooting.....	37
I Cannot Build Wireless Connection	37
The Hardware Status Is Incorrect	37
In Device Manager, the Device Shows a Cross.....	37
Appendix A: Technical Specifications	38
Physical Specifications.....	38

Environmental Specifications.....	38
Safety and Electromagnetic Emissions Certifications.....	38
Appendix B: Radio Bands.....	39

FIGURES

Figure 1: Product View	11
Figure 2: Starting the Installation.....	13
Figure 3: Completing the Installation	13
Figure 4: Plugging in the Product.....	13
Figure 5: Installing Driver	14
Figure 6: Completing the Installation	14
Figure 7: Device Manager.....	14
Figure 8: Properties of Device	15
Figure 9: Wireless Utility.....	15
Figure 10: Control Panel	16
Figure 11: Network and Sharing Center	16
Figure 12: Wireless Connection Status.....	17
Figure 13: Internet Protocol version 4 (TCP/IPv4)	17
Figure 14: Internet Protocol Version 4 (TCP/IPv4) Properties	17
Figure 15: Wireless Network Connection Properties.....	18
Figure 16: Internet Protocol (TCP/IP)	18
Figure 17: Internet Protocol (TCP/IP) Properties	18
Figure 18: The First View of AT-WNU300N Wireless Utility	19
Figure 19: Select a Network.....	20
Figure 20: Configure Profile.....	20
Figure 21: Configure Auth./Encry.....	21
Figure 22: Active an Un-secured Network	21
Figure 23: Select a Network.....	21
Figure 24: Configure Profile.....	22
Figure 25: Configure Auth./Encry.Chin.....	22
Figure 26: Active a WEP Network.....	22
Figure 27: Select a Network.....	23
Figure 28: Configure Profile.....	23
Figure 29: Configure Auth./Encry.....	23
Figure 30: Active a WPA-PSK/WPA2-PSK Network	23
Figure 31: Config Utility.....	24
Figure 32: Configure Profile Name.....	24
Figure 33: Configure Auth./Encry.....	25
Figure 34: Active a Non-broadcasting Network.....	25
Figure 35: Select a Non-broadcasting SSID	25
Figure 36: Configure Profile Name.....	26
Figure 37: Configure Auth./Encry.....	26

Figure 38: Active a Non-broadcasting Network.....	26
Figure 39: WPS Button on Wireless Router	27
Figure 40: WPS Button.....	27
Figure 41: WPS Successfully.....	27
Figure 42: Push Button Connection.....	28
Figure 43: WPS Successfully.....	28
Figure 44: PIN Code.....	29
Figure 45: WPS Successfully.....	29
Figure 46: Enrollee Mode.....	29
Figure 47: Click on PIN	30
Figure 48: WPS Successfully.....	30
Figure 49: Connect to a Regular Network	30
Figure 50: Profile	31
Figure 51: Network.....	32
Figure 52: Advanced.....	33
Figure 53: Statistics.....	33
Figure 54: WMM	34
Figure 55: WPS.....	34
Figure 56: RF On/Off.....	35
Figure 57: RF On/Off.....	36
Figure 58: About.....	36

Preface

Purpose of This Guide

This guide is intended for customers and/or network administrators who are responsible for installing and maintaining the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter.

How This Guide is Organized

This guide contains instructions on how to install and configure AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter.

- Chapter 1** **Overview**, describes the features, LEDs and button on the equipment.
- Chapter 2** **Installation**, describes how to install and configure the equipment.
- Chapter 3** **PC Settings**, describes how to prepare your PC for connecting to wireless network.
- Chapter 4** **Configure Wireless Network**, guides you to set up a wireless network step by step.
- Chapter 5** **Utility Introduction**, describes detail function in AT-WNU300N Wireless Utility.
- Chapter 6** **Troubleshooting**, describes what you should do when the device does not operate correctly.

Document Conventions

This guide uses several conventions that you should become familiar with before you begin to install the product:



Note

A note provides additional information. Please go to the Allied Telesis website <http://www.alliedtelesis.com> for the translated safety statement in your language.



Warning

A warning indicates that performing or omitting a specific action may result in bodily injury.



Caution

A caution indicates that performing or omitting a specific action may result in equipment damage or loss of data.

Contacting Allied Telesis

This section provides Allied Telesis contact information for technical support as well as sales and corporate information.

Online Support

You can request technical support online by accessing the Allied Telesis Knowledge Base: <http://www.alliedtelesis.com/kb>. You can use the Knowledge Base to submit questions to our technical support staff and review answers to previously asked questions.

Email and Telephone Support

For Technical Support via email or telephone, refer to the Support & Services section of the Allied Telesis web site: <http://www.alliedtelesis.com/support>.

Warranty

For product registration and warranty conditions please visit Allied Telesis website: <http://www.alliedtelesis.com/support/warranty>

Where to Find Web-based Guides

The installation and user guides for all Allied Telesis products are available in portable document format (PDF) on our web site at www.alliedtelesis.com. You can view the documents online or download them onto a local workstation or server.

Returning Products

Products for return or repair must first be assigned a return materials authorization (RMA) number. A product sent to Allied Telesis without an RMA number will be returned to the sender at the sender's expense.

To obtain an RMA number, contact Allied Telesis Technical Support through our web site: <http://www.alliedtelesis.com/support>.

Sales or Corporate Information

You can contact Allied Telesis for sales or corporate information through our web site: <http://www.alliedtelesis.com>. To find the contact information for your country, select Contact Us -> Worldwide Contacts.

Firmware & Software Updates

New releases of firmware or software for our managed products are available from either of the following Internet sites:

- Allied Telesis web site: <http://www.alliedtelesis.com/support/software>
- Allied Telesis FTP server: <ftp://ftp.alliedtelesis.com>

If you prefer to download new firmware or software from the Allied Telesis FTP server from your workstation's command prompt, you will need FTP client software and you must log in to the server. Enter "anonymous" for the user name and your email address for the password.

Tell Us What You Think

If you have any comments or suggestions on how we might improve this or other Allied Telesis documents, please contact us at <http://www.alliedtelesis.com>.

Chapter I: Overview

The AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter is a wireless USB adapter for home and business use. It is compatible with IEEE 802.11b/g/n standards, providing wireless throughput up to 300Mbps. You administer the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter using the Wireless Utility.

Features

The features of the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter include:

- Provide theoretical 300Mbps wireless throughput.
- Compatible with USB 1.1 and 2.0.
- Support WPA, WPA2 wireless encryption.
- Support Wi-Fi Protected Setup (WPS), providing quick secured connection.

Product View

A USB 2.0 connector is under the USB cover. A WPS button presents on the side of AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter, while the LED on the equipment indicates the status of link and activity.

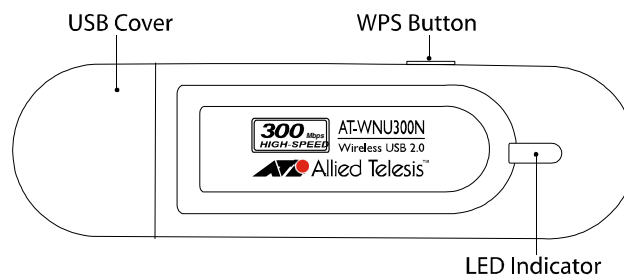


Figure 1: Product View

LEDs

The Link and Activity LED on the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter is described in Table 1.

Table 1: LED Indicator

LED	State	Description
Link / Activity	Off	The adapter is radio off.
	On	The adapter is connected
	Blinking	Data transmitting

Chapter 2: Installation

Reviewing Safety Precautions

Please review the following safety precautions before you begin to install the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter.



Warning

Do not work on equipment or cables during periods of lightning activity.



Warning

Power off your PC and unplug the power cord before installation.



Warning

Operating Temperature. This product is designed for a maximum ambient temperature of 40°C.

All Countries: Install product in accordance with local and National Electrical Codes.



Caution

Do not install in direct sunlight, or a damp or dusty place.

Unpacking the Wireless Adapter

To unpack the AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter, perform the following procedure:

1. Remove all components from the shipping package.



Note: Store the packing material in a safe location. You must use the original shipping material if you need to return the unit to Allied Telesis.

2. Place the adapter on a secure, level surface.
3. Ensure that the following hardware components are included in your shipping package. If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

Package Contents

- One AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter
- Driver and Utility CD-ROM
- Quick guide

Driver and Utility Installation

To install AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter driver and utility, perform the following procedure:



Note: AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter is compatible with Windows 2000, XP, and Vista. Check your operating system before installation.

1. Insert the CD-Rom which is contented in the shipping package.
2. Run the CD-Rom. Click "Install" to start the installation, as shown in Figure2.

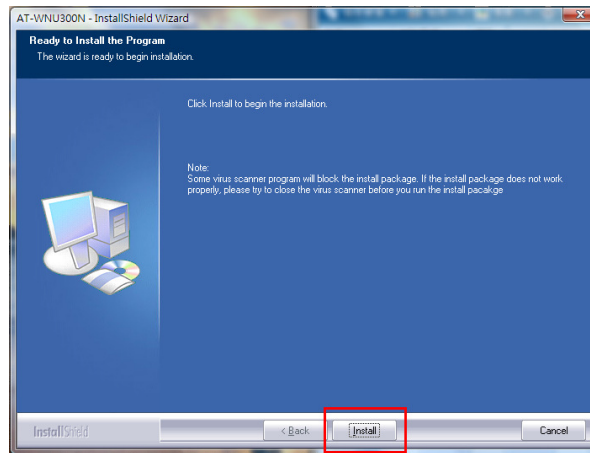


Figure 2: Starting the Installation

3. Click “Finish” when the installation is completed, as shown in Figure 3

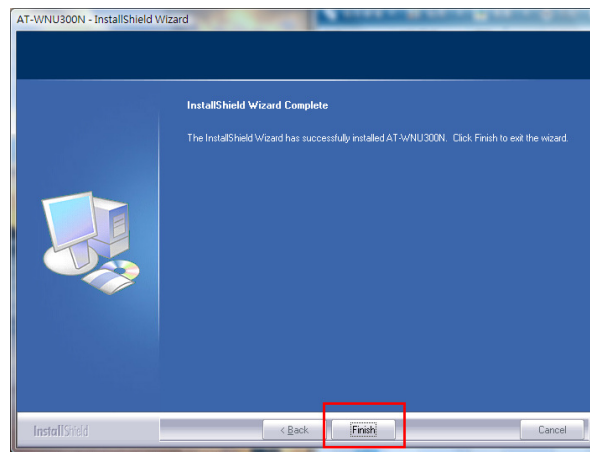


Figure 3: Completing the Installation

4. Remove the cover from the equipment, and plug AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter into USB port on the PC or laptop, as shown in Figure 4.

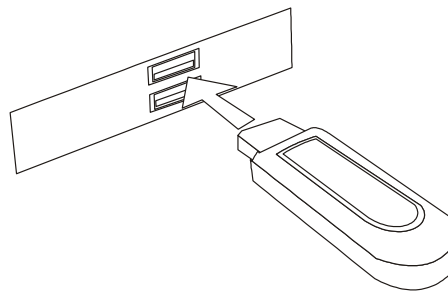


Figure 4: Plugging in the Product

5. Please wait for a while for installing driver, as shown in figure 5.



Figure 5: Installing Driver

Verifying the Installation

To verify AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter installation, perform the following procedure:

1. In Control Panel, double click on “Device Manager”, as shown in figure 6.



Figure 6: Completing the Installation

2. Check the item under “Network Adapters”. There should be an item named “802.11n USB Wireless LAN Card”, as shown in Figure 7.

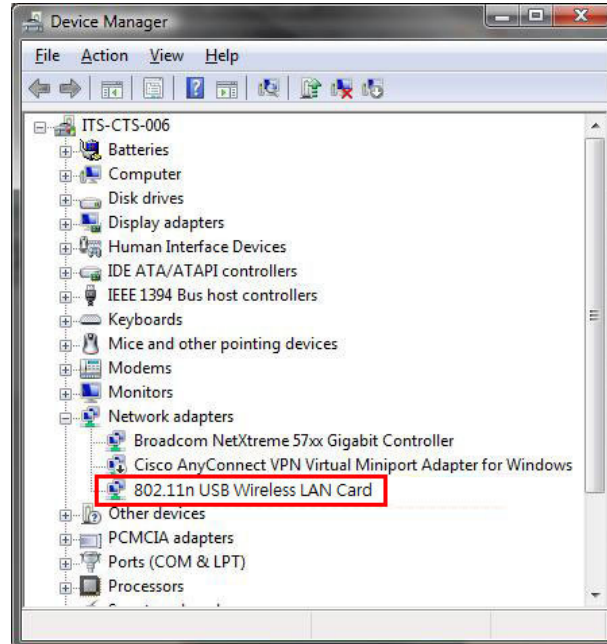


Figure 7: Device Manager

- Right click on “802.11n USB Wireless LAN Card” and select “Properties”. Check whether the Device status says “This device is working properly”, as shown in Figure 8.

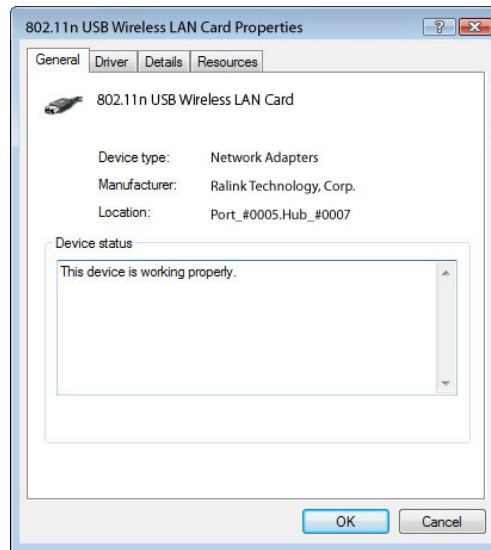



Figure 8: Properties of Device

Once finishing the installation, double click on the  icon in Notification Area to launch the Wireless Utility, as shown in Figure 9. By now, the wireless USB adapter is ready for wireless connection. Please refer to the following chapters for detail configurations.

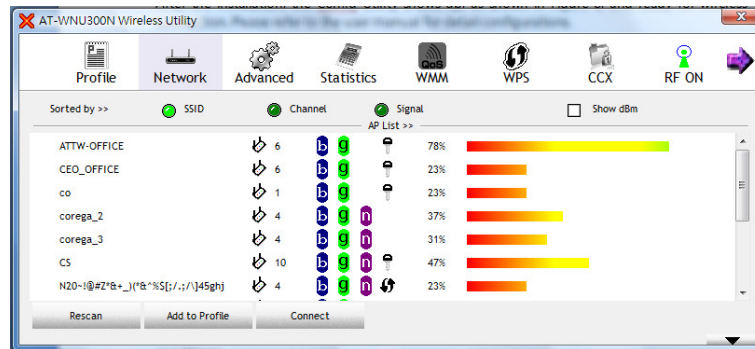


Figure 9: Wireless Utility

Warranty Registration

After installing your wireless adapter, please visit <http://www.alliedtelesis.com/support/warranty/> to register your product and check warranty conditions.

Chapter 3: PC Settings

Before you connect AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter to wireless router, you need to check your PC settings. Please perform the following procedure.

<Windows Vista>

1. Go to “Start”→ “Control Panel”.

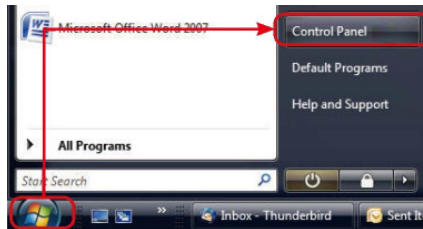


Figure 10: Control Panel

2. In “Control Panel”, double click on “Network and Sharing Center”. Click on “View Status” under wireless network.

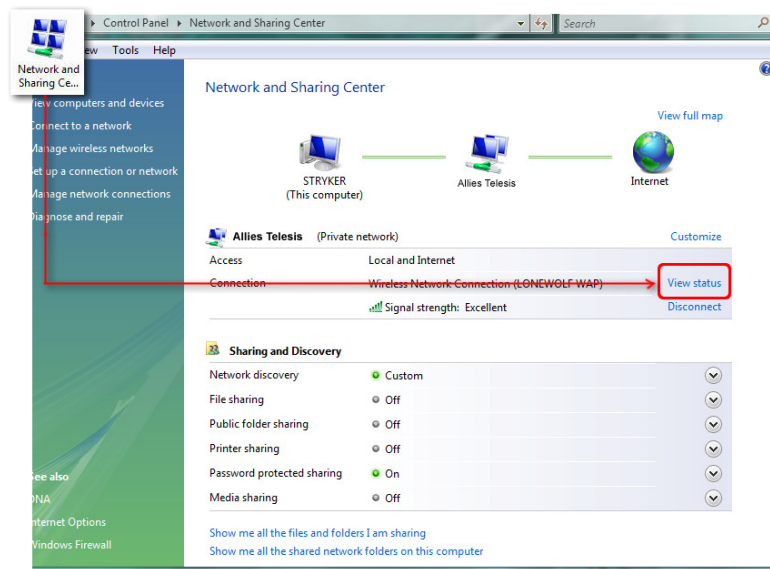


Figure 11: Network and Sharing Center

3. Click on “Properties”.

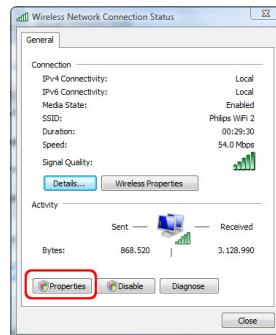


Figure 12: Wireless Connection Status

- In “Networking” tab, select “Internet Protocol version 4 (TCP/IPv4)” and then click on “Properties”.

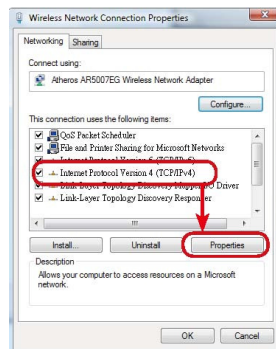


Figure 13: Internet Protocol version 4 (TCP/IPv4)

- In “General” tab, if the AP you use provides DHCP server, you are suggested to select both “Obtain an IP address automatically” and “Obtain DNS server address automatically”. Otherwise, please configure your IP address to obtain a specific IP address.

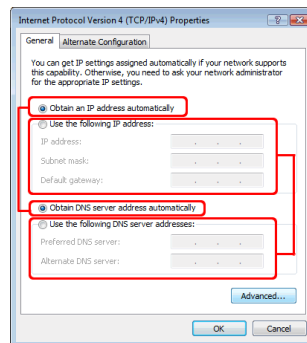


Figure 14: Internet Protocol Version 4 (TCP/IPv4) Properties

<Windows XP>

- In “Control Panel”, double click on “Network Connections” to open it.



- Right click on “Wireless Network Connection” and select “Properties”.



Figure 15: Wireless Network Connection Properties

3. In “General” tab, select “Internet Protocol (TCP/IP)” and then click on “Properties”.

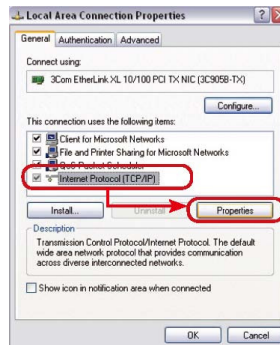


Figure 16: Internet Protocol (TCP/IP)

4. In “General” tab, if the AP you use provides DHCP server, you are suggested to select both “Obtain an IP address automatically” and “Obtain DNS server address automatically”. Otherwise, please configure your IP address to obtain a specific IP address.

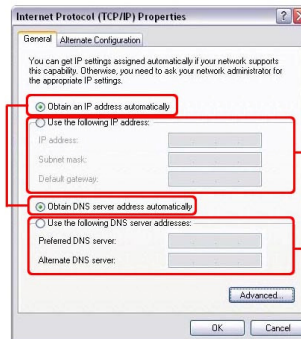


Figure 17: Internet Protocol (TCP/IP) Properties

Chapter 4: Configure Wireless Network

You can configure your wireless network by AT-WNU300N Wireless Utility in Windows XP, Vista, and 2000. Before the configuration, please confirm that the wireless adapter is within the range of wireless AP. Weak signal might result in connection failure.

Run AT-WNU300N Wireless Utility

After installing AT-WNU300N Wireless Utility on your computer, AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter will automatically search and connect to an open wireless network nearby. Please double click on icon at the tray to open AT-WNU300N Wireless Utility.



Note: If you do not see the icon at the tray, go to “Start” → “All Programs” → “AT-WNU300N” and click on “AT-WNU300N Wireless Utility” to open it.

The First View of AT-WNU300N Wireless Utility

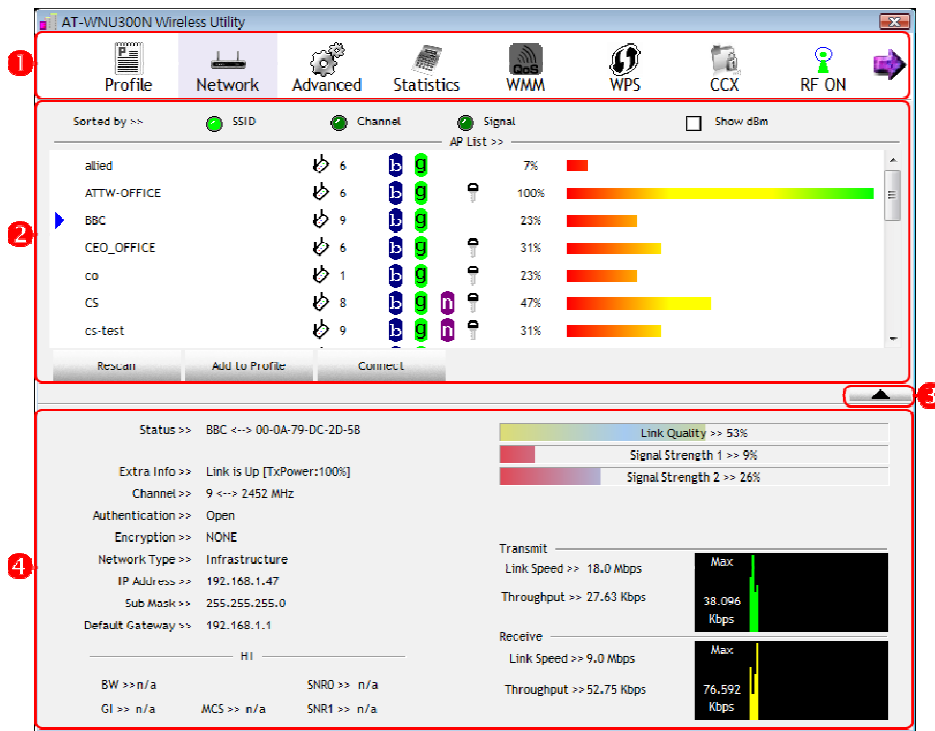


Figure 18: The First View of AT-WNU300N Wireless Utility

①	Main Menu	To configure the wireless adapter. Please refer to Chapter 5: Utility Introduction for the details
②	Configuration	It shows main part of configuration
③	See more/less	Switch to see more or less information
④	Connection Status	It shows current connection status

Start Wireless Network Connection

This session describes the procedure of connecting to a wireless AP. You need to configure AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter in accordance with the wireless AP’s encryption setting.

Connect to an Un-secured Network

Please perform the following procedure to connect to an un-secured network.

1. Go to “Network”, select the AP you want to connect to, and then click on “Add to Profile”.

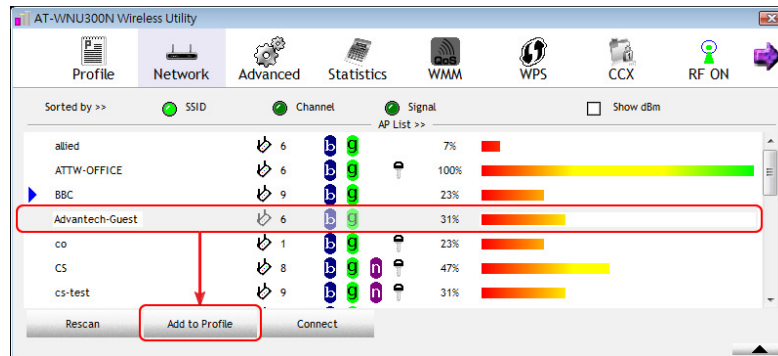


Figure 19: Select a Network



Note: icon in the AP List indicates a secured network.

2. In “System Config” tab, input a Profile Name to identify.

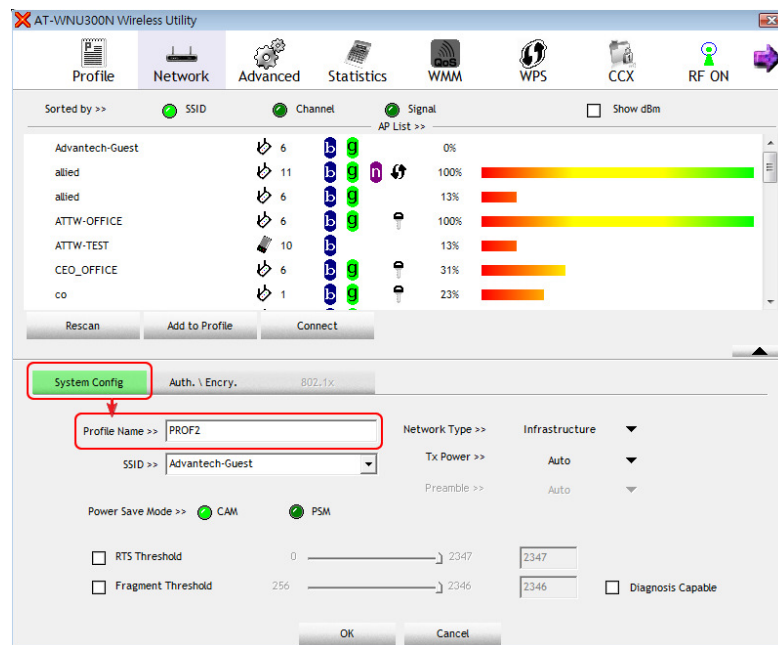


Figure 20: Configure Profile

3. In “Auth.\Encry.” Tab, confirm that the Authentication is “Open” and the Encryption is “None”.

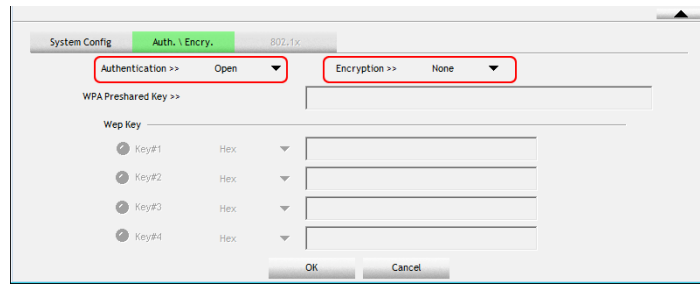


Figure 21: Configure Auth./Encry.

4. Click on “OK”.
5. In “Profile” tab, select the profile you want to connect to, and then click on “Activate”.

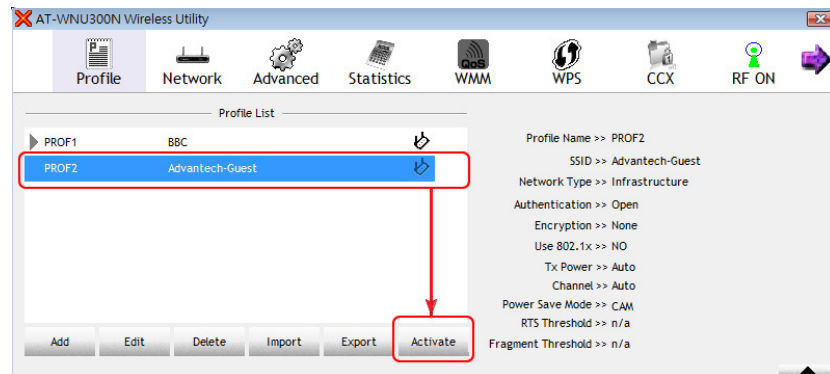


Figure 22: Active an Un-secured Network

Connect to a WEP Network

Please perform the following procedure to connect to a WEP network.

1. In “Network” tab, select the AP you want to connect to, and then click on “Add to Profile”.

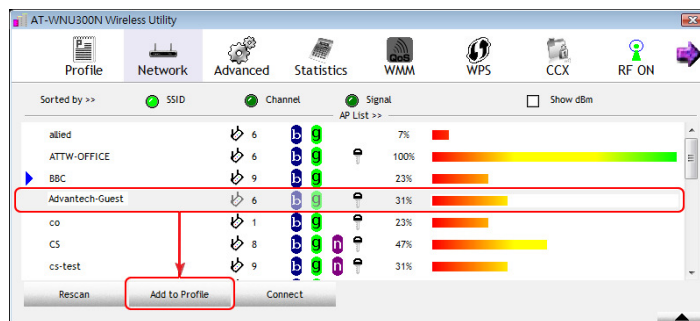


Figure 23: Select a Network

2. In “System Config” tab, give the profile a name to identify.

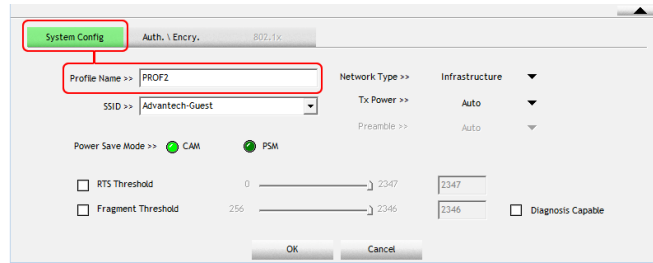


Figure 24: Configure Profile

3. In “Auth./Encry.” tab, confirm that the Authentication and Encryption setting is corresponding to the wireless AP. Input the Key and then click on “OK” to apply the settings.

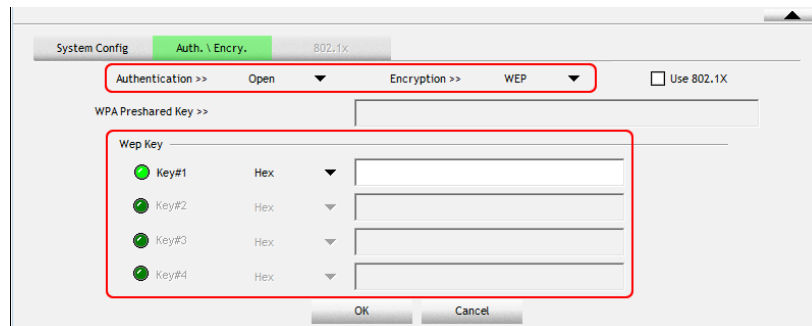


Figure 25: Configure Auth./Encry.Chin

4. In “Profile” tab, select the profile you want to connect to, and then click on “Activate”.

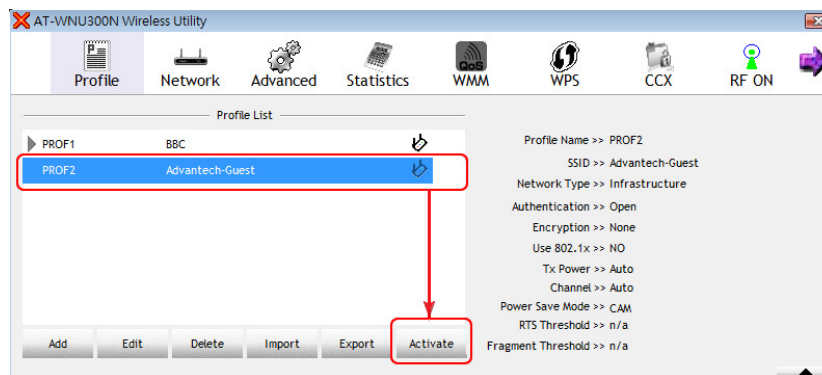


Figure 26: Active a WEP Network



Note: Hex code uses 0-9, a-f characters; ASCII code uses 0-9, a-z characters. All settings must be exactly the same with the wireless AP; otherwise it will result in a failure.

Connect to a WPA-PSK/WPA2-PSK Network

Please perform the following procedure to connect to a WPA-PSK/WPA2-PSK network.

1. In “Network” tab, select the AP you want to connect to, and then click on “Add to Profile”.

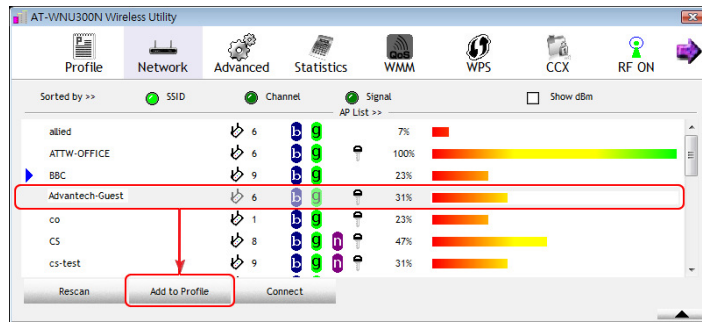


Figure 27: Select a Network

- In “System Config” tab, give the profile a name to identify.

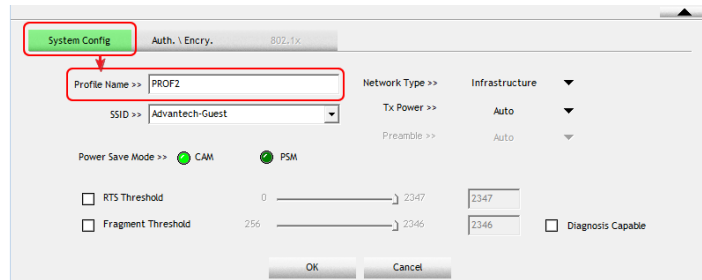


Figure 28: Configure Profile

- In “Auth.\Encry.” tab, confirm that the Authentication and Encryption setting is corresponding to the wireless AP. Input the Key and then click on “OK” to apply the settings.

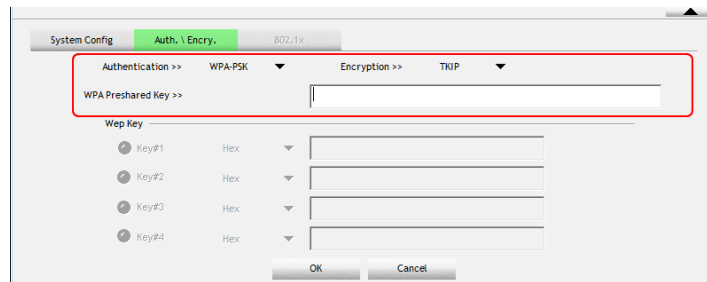


Figure 29: Configure Auth./Encry.

- In “Profile” tab, select the profile you want to connect to, and then click on “Activate”.

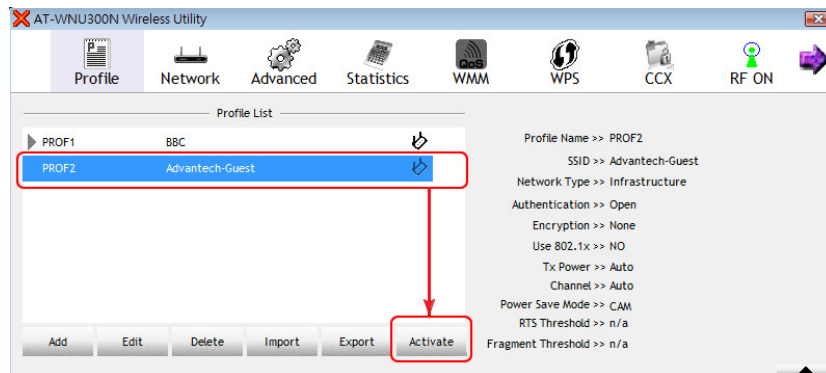


Figure 30: Active a WPA-PSK/WPA2-PSK Network



Note: All settings must be exactly the same with the wireless AP, otherwise it will result in a failure.

Connect to a Non-broadcasting Network

For security reasons, wireless AP might hide its SSID. To connect to a non-broadcasting network, you are prompted for a SSID and a key. You can start either with “Profile” or “Network”. Please perform the following procedure.

<Start from Profile>

1. In Profile tab, click on “Add”.

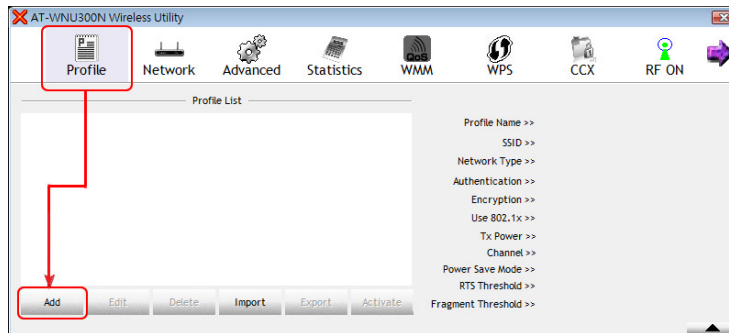


Figure 31: Config Utility

2. Give the profile a name to identify, and then input SSID. The SSID must be exactly the same with the wireless AP.

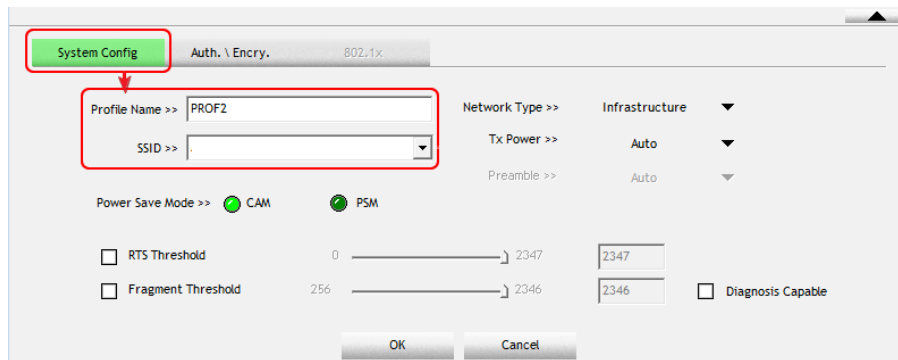


Figure 32: Configure Profile Name

3. In “Auth.\Encry.” tab, configure corresponding setting, including authentication, encryption and the Key. Click on “OK” to apply the settings.

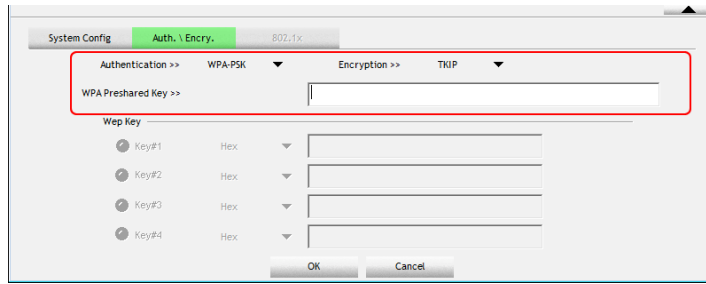


Figure 33: Configure Auth./Encry.

4. In “Profile” tab, select the profile you want to connect to, and then click on “Active”.

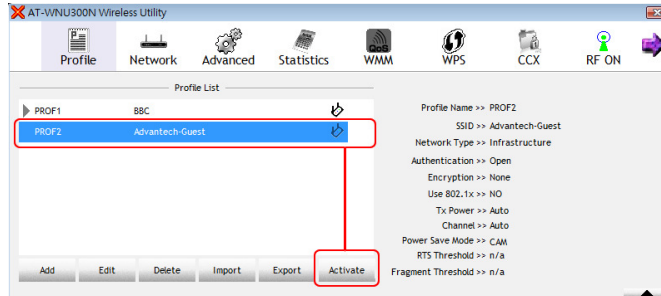



Figure 34: Active a Non-broadcasting Network

 **Note:** The SSID and encryption settings must be exactly the same with the wireless AP, otherwise it will result in a failure.

<Start from Network>

1. In “Network” tab, select the AP you want to connect to. Non-broadcasting SSID is blank in SSID column, as shown in figure 34. Click on “Add to Profile”.

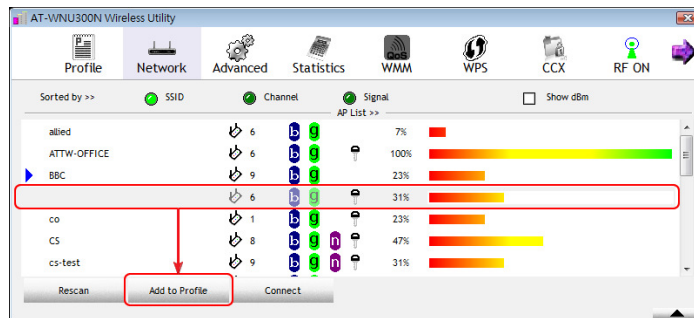


Figure 35: Select a Non-broadcasting SSID

2. In “System Config” tab, give the profile a name to identify, and then input SSID. The SSID must be exactly the same with the wireless AP.

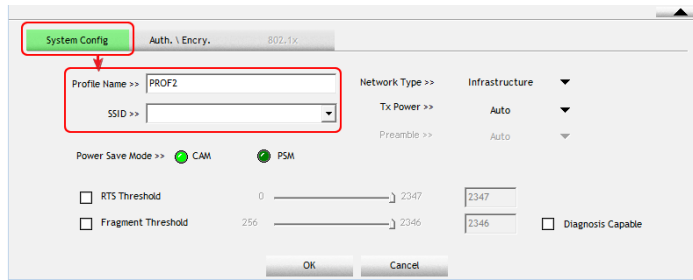


Figure 36: Configure Profile Name

3. In “Auth./Encry” tab, configure corresponding setting, including Authentication, Encryption and the Key. Click on “OK” to apply the settings.

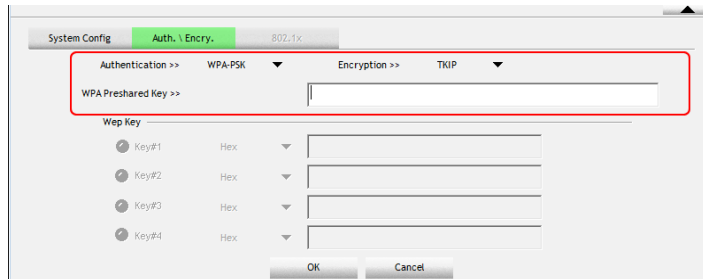


Figure 37: Configure Auth./Encry.

4. In “Profile” tab, select the profile you want to connect to, and then click on “Activate”.

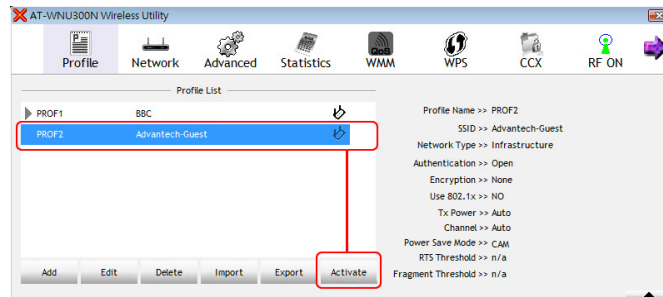


Figure 38: Active a Non-broadcasting Network



Note: The SSID and encryption settings must be exactly the same with the wireless AP, otherwise it will result in a failure.

Wireless Protected Setup (WPS)

Wireless Protected Setup (WPS) provides an easy way to connect to a wireless network. To apply WPS, the wireless AP should be compatible with WPS standard. There are several ways to implement WPS connection. Please perform one of the following procedures.

WPS Button

1. Push WPS button on the wireless AP to generate WPS signal. If the wireless AP does not provide hardware WPS button, you need to apply WPS in the utility. The interface and terminology might be dissimilar in different models. Please refer to their manuals for the configuration.

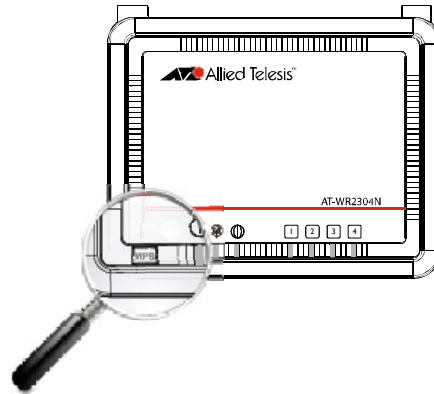


Figure 39: WPS Button on Wireless Router

2. Push WPS button on AT-WNU300N.

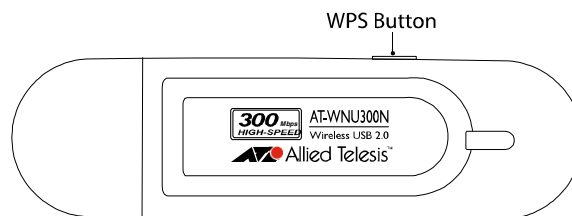


Figure 40: WPS Button

3. Wait seconds for the WPS connection. As the connection succeeds, the network will be shown in the WPS Profile list.

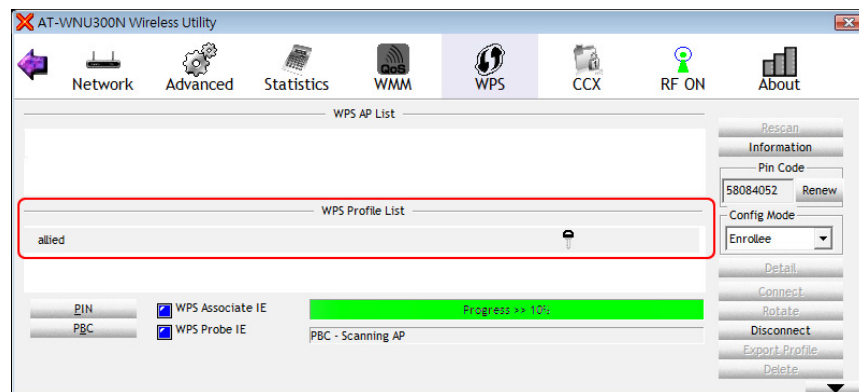


Figure 41: WPS Successfully



Note: After pushing WPS button on the wireless AP, you need to click on “PBC” button in 120 seconds. Otherwise you need to perform the procedure from step 1.

Push Button Connection (PBC)

If the wireless AP does not provide hardware WPS button, you need to apply WPS in the utility. The interface and terminology might be dissimilar in different models. Please refer to their manuals for the configuration.

1. In wireless AP utility, push PBC button to generate WPS signal.

- In AT-WNU300N Wireless Utility, go to “WPS”. Click on “Rescan” to get the WPS signal from the wireless AP.

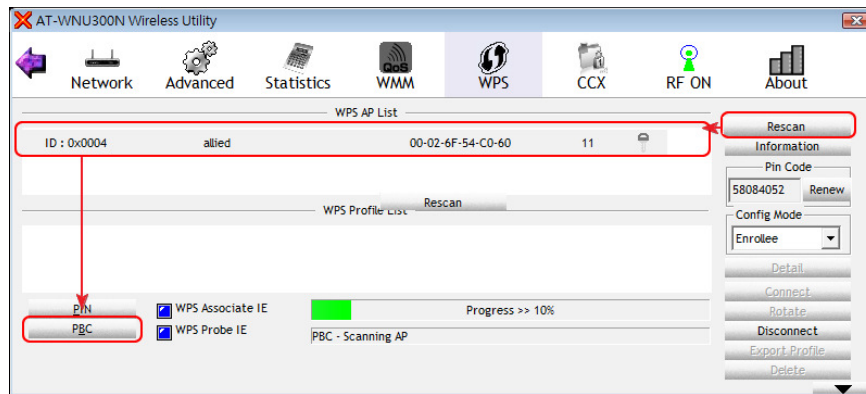


Figure 42: Push Button Connection

- Select the wireless AP from WPS AP List, and then click on “PBC” to implement the connection. As the connection succeeds, the network will be shown in the WPS Profile list.

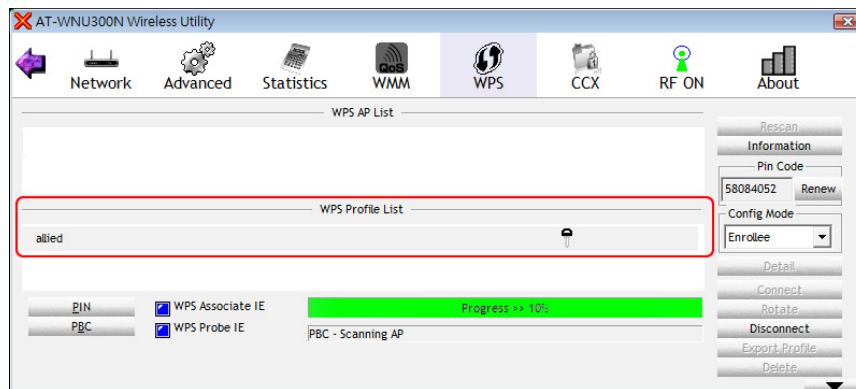


Figure 43: WPS Successfully



Note: After pushing PBC in wireless AP utility, you need to push “PBC” button on wireless adapter in 120 seconds. Otherwise you need to perform the procedure from step 1.

Enter Wireless AP PIN code

- In wireless AP utility, select generate PIN code and record the 8-character code. Then click on run WPS.



Note: The interface and terminology of wireless AP might be dissimilar in different models. Please refer to their manuals for the configuration.

- In AT-WNU300N Wireless Utility, go to “WPS”. Switch the Config Mode to “Registrar”. Then input the 8-character PIN code.

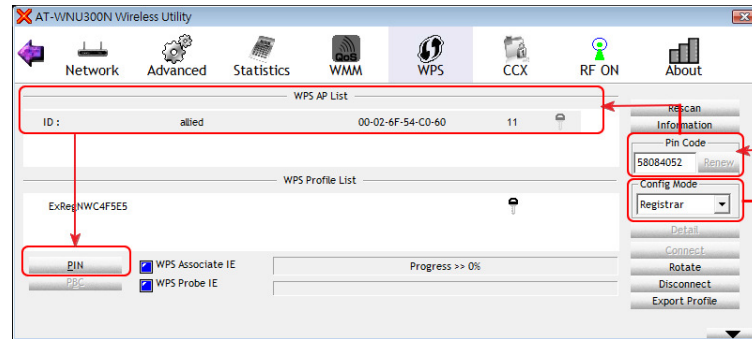


Figure 44: PIN Code

3. Select the wireless AP from WPS AP List, and click on “PIN” to connect to the wireless AP. As the connection succeeds, the network will be shown in the WPS Profile list.

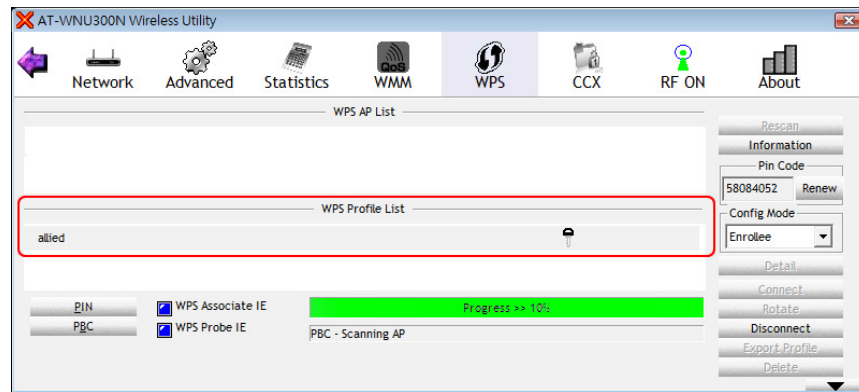


Figure 45: WPS Successfully



Note: After running WPS on wireless AP, you need to push “PIN” button on wireless adapter in 120 seconds. Otherwise you need to perform the procedure from step 1.

Enter Wireless Adapter PIN code

1. In AT-WNU300N Wireless Utility, go to “WPS”. Switch the Config Mode to “Enrollee”. Then record the 8-character PIN code. You can press “Renew” to get a new PIN code.

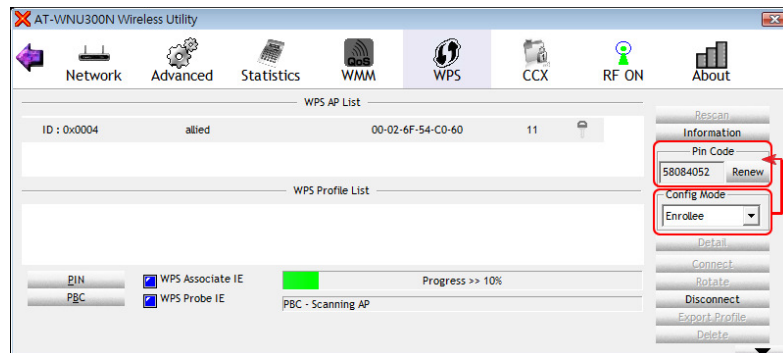


Figure 46: Enrollee Mode

2. In wireless AP utility, input the PIN code and then run WPS.
3. Go back to AT-WNU300N Wireless Utility. In WPS tab, click on “Rescan” to get the WPS signal from wireless AP.

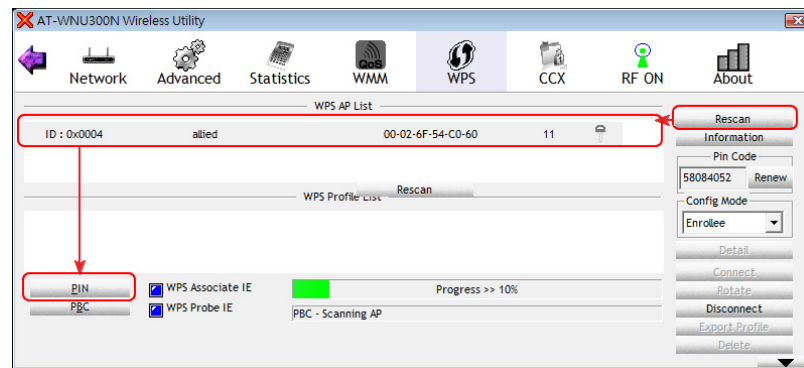


Figure 47: Click on PIN

4. Select the wireless AP from WPS AP List, and then click on “PIN” to implement the connection. As the connection succeeds, the network will be shown in the WPS Profile list.

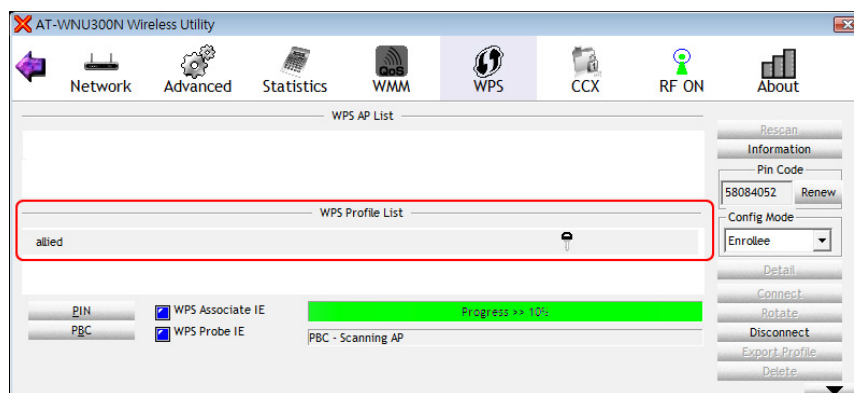


Figure 48: WPS Successfully



Note: After running WPS on wireless AP, you need to push “PIN” button on wireless adapter in 120 seconds. Otherwise you need to perform the procedure from step 1.

Connect to a Regular Network

You can connect to a saved profile to save time. Please perform the following procedure to connect to a regular network.

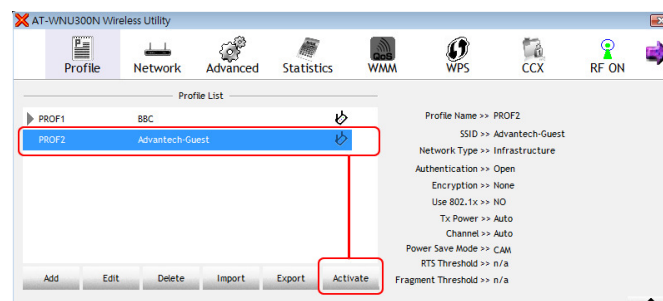


Figure 49: Connect to a Regular Network

1. In “Profile” tab, select a saved profile from profile list.
2. Click on “Active”.

Chapter 5: Utility Introduction

Profile

This page shows saved profile information and operation.

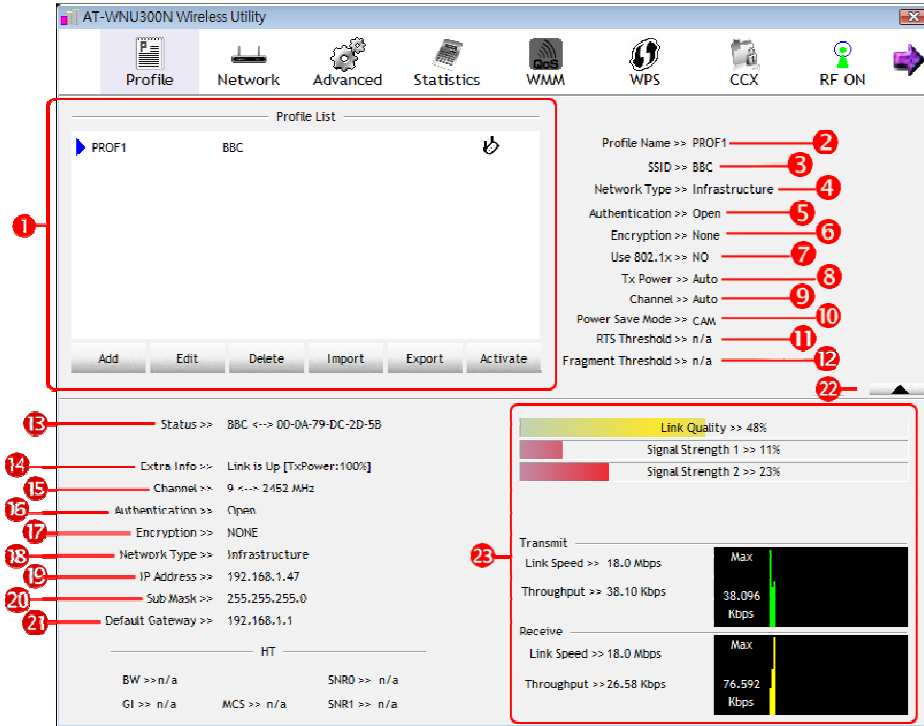


Figure 50: Profile

	NAME	DESCRIPTION
①	Profile List	<ul style="list-style-type: none"> ➢ Add: Add a new profile. Press “Add” and configure “System config” and “Auth.\Energy” tabs to finish the setting. ➢ Edit: Edit a profile. Select the profile you want to edit and press “Edit”. ➢ Delete: Delete a profile. Select the profile you want to delete and press “Delete”. ➢ Active: Active a selected profile.
②	Profile Name	Name of the AP in profile list
③	SSID	SSID of the AP in profile list
④	Network Type	Network type of the AP in profile list
⑤	Authentication	Authentication of the AP in profile list
⑥	Encryption	Encryption of the AP in profile list
⑦	Use 802.1x	Whether the AP supports 802.1x
⑧	Tx Power	Tx power of the AP in profile list
⑨	Channel	Channel of the AP in profile list
⑩	Power Save Mode	Power saving setting of the AP in profile list
⑪	RTS Threshold	RTS Threshold setting of the AP in profile list
⑫	Fragment Threshold	The fragment threshold of the AP in profile list
⑬	Status	The SSID and Mac address of the connecting AP
⑭	Extra Info	The connection status and the strength of the connecting AP
⑮	Channel	The channel of the connecting AP
⑯	Authentication	The authentication of the connecting AP

17	Encryption	The encryption setting of the connecting AP
18	Network Type	The network type of the connecting AP
19	IP Address	Obtained IP of this computer
20	Submask	Current submask
21	Default Gateway	Current default gateway
22	More/Less	Switch to show more or less information
23	Link Quality	Show link quality and signal strength information

Network

This page shows current available network.

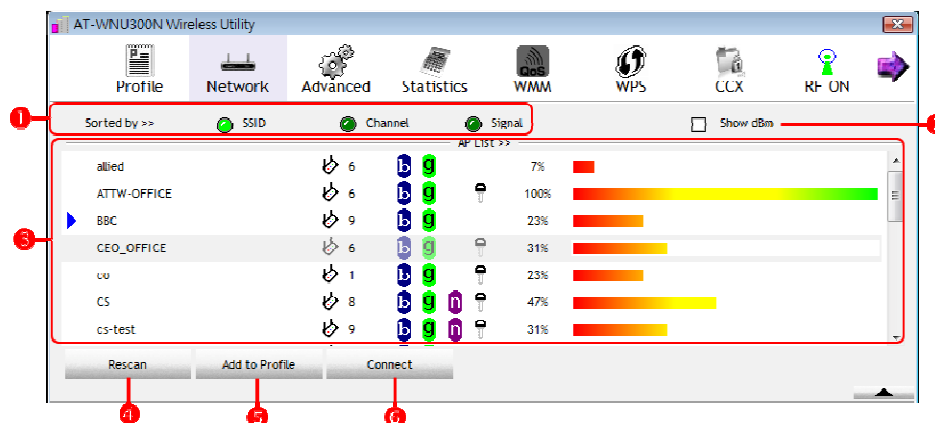


Figure 51: Network

	NAME	DESCRIPTION
1	Sort by >>	Click to sort by SSID/Channel/Signal
2	Show dBm	Show signal strength by dBm
3	AP List	<p>Show available AP. The meaning of icons is described as following:</p> <ul style="list-style-type: none"> : The network is successfully connected. : The device is an AP : The device is an ad-hoc : The device is compatible with 802.11b : The device is compatible with 802.11g : The device is compatible with 802.11n : The device is applying WPS : The network is secured
4	Rescan	Rescan available wireless network
5	Add to Profile	Add selected network to profile
6	Connect	Connect to selected network

Advanced

You can configure advanced settings in this page.

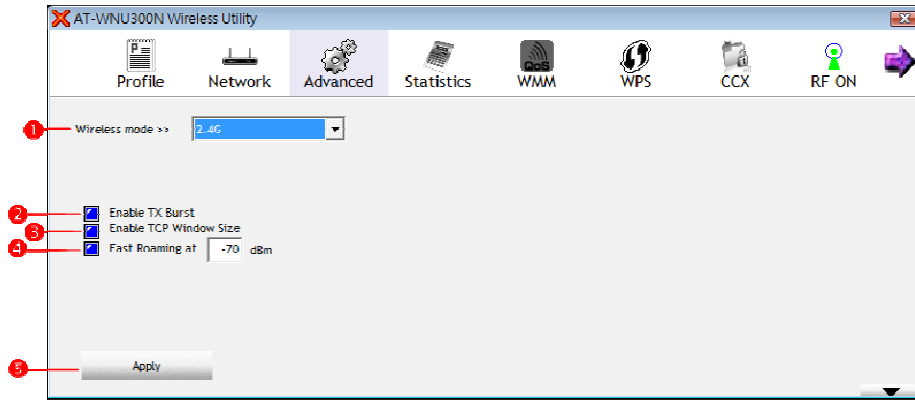


Figure 52: Advanced

	NAME	DESCRIPTION
❶	Wireless mode	It shows AT-WNU300N wireless mode
❷	Enable TX Burst	Check to enable TxBurst to transmission throughput. (It only works when wireless AP supports this feature)
❸	Enable TCP Windows Size	Enlarge TCP Layer windows size, it could promote data receiving rate
❹	Fast Roaming at	Swift to roaming mode at specific dBm
❺	Apply	Click to apply settings

Statistics

This page shows statistics information.

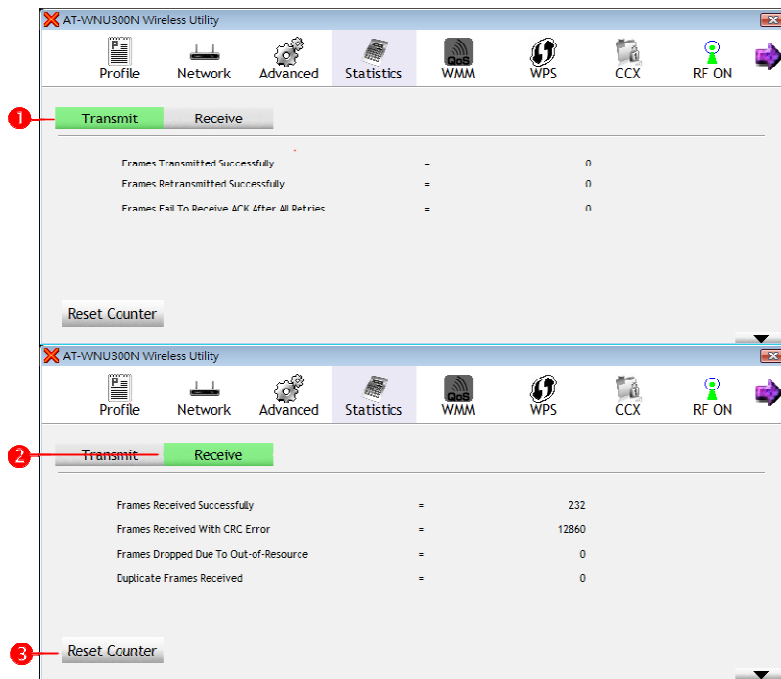


Figure 53: Statistics

	NAME	DESCRIPTION
❶	Transmit	Show transmit packet information
❷	Receive	Show receive packet information
❸	Reset Counter	Reset the counter to zero

WMM

WMM enhance audio/video transmission quality. You can configure relative settings here.

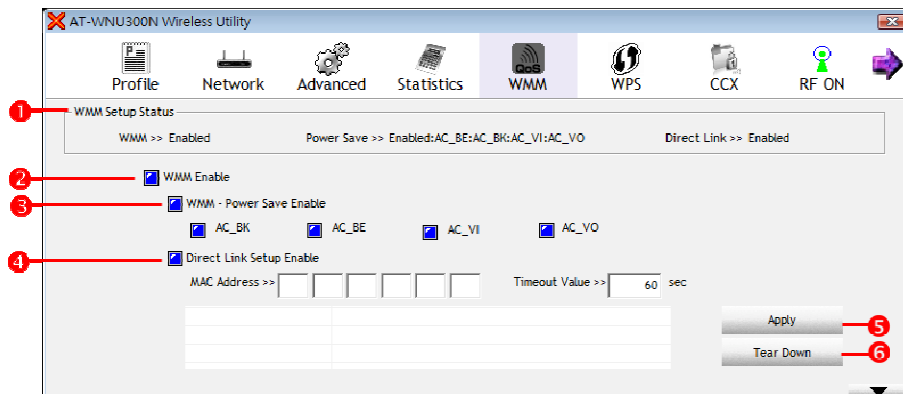


Figure 54: WMM

	NAME	DESCRIPTION
1	WMM Setup Status	Show current WMM status
2	WMM Enable	Check to enable WMM, which promotes audio and voice quality
3	WMM – Power Save Enable	Check the box to enable power saving. The options are describe as following: > AC_BK: Background > AC_BE: Best Effort > AC_VI: Video > AC_VO: Voice
4	Direct Link Setup Enable	Check this box to directly connect to another WMM wireless device. Please input the Mac address of the device. Input 1~65535 for idle timeout. Input 0 to keep connection
5	Apply	Click to apply settings
6	Tear Down	Click to disconnect

WPS

Wireless Protected Setup (WPS) provides an easy way to connect to a wireless network.

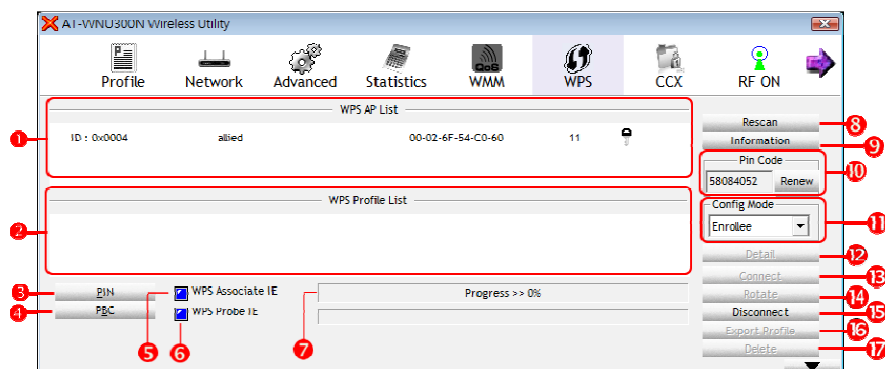


Figure 55: WPS

	NAME	DESCRIPTION
1	WPS AP List	Show available WPS AP
2	WPS Profile List	Show saved WPS profile
3	PIN	Click to start a PIN connection
4	PBC	Click to start a PBC connection

5	WPS Associate IE	Check this box to send WPS IE connection request signal during WPS process
6	WPS Probe IE	Check this box to send WPS IE connection probe signal during WPS process
7	Progress	Show connection status
8	Rescan	Rescan WPS signal
9	Information	Show information of selected WPS network
10	Pin Code	Generate a PIN to connect to a wireless AP; or insert PIN code form wireless AP
11	Config Mode	Switch to Enrollee or registrar mode
12	Detail	Show information of connected WPS network
13	Connect	Connect a WPS connection from the WPS profile list
14	Rotate	Shift to another WPS connection
15	Disconnect	Disconnect a WPS connection
16	Export Profile	Export the WPS connection to profile
17	Delete	Delete a WPS profile from the list

CCX

Cisco compatible eXtension (CCX) enhances wireless IP phone quality. Configure this tab only when connecting to Cisco device.

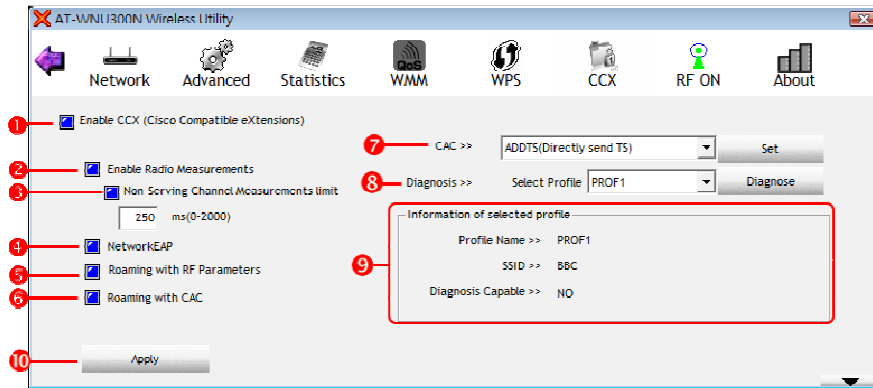


Figure 56: RF On/Off

	NAME	DESCRIPTION
1	Enable CCX (Cisco Compatible eXtensions)	Click to enable CCX(Windows XP only)
2	Enable Radio Measurements	Click to enable Radio Measurements
3	Non-Serving Channel Measurements limit	User can set channel measurement every. 0~2000 milliseconds. The default value 250 milliseconds.
4	Network EAP	Click to enable Network EAP
5	Roaming with RF Parameters	Click to roaming with RF Parameters
6	Roaming with CAC	Click to roaming with CAC
7	CAC >>	Select the type of call admission control (CAC) > ADDTS(Directly send TS): Add traffic stream > DELTS: Delete traffic stream > RESET: Reset Click "Set" to apply the setting
8	Diagnosis >>	Select a profile to diagnose, and then click on "Diagnose" to apply the setting
9	Information of selected profile	Show information of selected profile
10	Apply	Click to apply settings

RF on/off

A green icon means that wireless feature is enabled. Click on the icon to switch the radio off. A red icon means that wireless feature is disabled.

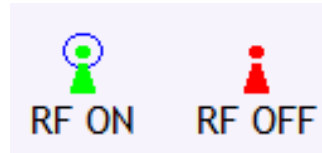


Figure 57: RF On/Off

About

This page shows information on driver and firmware version.

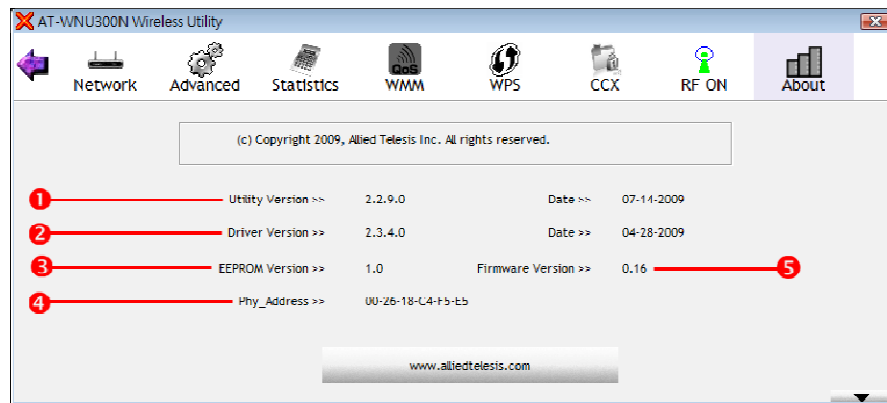


Figure 58: About

	NAME	DESCRIPTION
①	Utility Version	Utility version of AT-WNU300N
②	Driver Version	Driver version of AT-WNU300N
③	EEPROM Version	EEPROM version of AT-WNU300N
④	Phy_Address	Mac address of AT-WNU300N
⑤	Firmware Version	Firmware version of AT-WNU300N

Chapter 6: Troubleshooting

I Cannot Build Wireless Connection

Please check the following:

- Is the wireless adapter inserted to USB port correctly?
- Are the driver and the utility installed correctly?
- Is the wireless AP providing service which covers the wireless adapter?
- Is the encrypted key entered correctly?
- Is the wireless communication specification of the AP compliant with the adapter?

The Hardware Status Is Incorrect

If encountering the following incorrect situations,

- The Device Manager shows an unknown device with [!] or [?] icons in Network adapters.
- The Device Manager does not show the device in Network adapters.
- The Device Manager shows more than one "802.11n USB Wireless LAN Card" items in Network adapters.

Please perform the following steps:

1. Right click on the device item and select "Delete".
2. Press "OK" when the confirmation dialog box shows up.
3. Re-install the driver and the utility according to Chapter 2.

In Device Manager, the Device Shows a Cross.

A cross means the device is temporarily disabled. Please perform the following steps:

1. In Device Manager, right click on the device item.
2. Select "Enable" to start up the device.

Appendix A: Technical Specifications

Physical Specifications

Standard	IEEE802.11b, IEEE802.11g, 802.11n (2.0)
Physical Interface	USB 1.1/2.0
Operating Voltage	5V
Antenna	2dBi Dipole Antenna (2.4GHz)
RF Connector	SMA Female-Reverse
Dimensions(PCB):	77.5 mm x 21.5 mm x 10mm (L x W x H) (3.05 in. x 0.85 in. x 0.39 in.)

Environmental Specifications

Operating Temperature:	0 to 45°C
Storage Temperature:	-10 to 70°C
Operating Humidity:	15 to 95% (non-condensing)
Storage Humidity:	15 to 95% (non-condensing)
Operating Altitude Range:	3,000 m

Safety and Electromagnetic Emissions Certifications

EMI/RFI and Immunity:	FCC marked (Compliant with FCC Part 15 Class B; FCC Part 15B and 15C); CE Marked (compliant with EN 300 328; EN 301 489; EN 55022; EN61000; EN50385); C-Tick marked (Compliant with AS/NZS / CISPR 22 Class B)
Electrical Safety:	CE Marked (compliant with EN60950-1)

Appendix B: Radio Bands

Allied Telesis's AT-WNU300N IEEE802.11b/g/n 2T2R Wireless Fast USB Adapter is capable of operating in the 2.4GHz (IEEE 802.11b/g/n).

IEEE 802.11n standard provides a major improvement in the speed at which data can be transferred over a wireless network. The amount of data being passed over most networks is increasing with many more large files, including photos, video clips (and videos), etc. being transferred.

IEEE 802.11n standard uses Multiple Input Multiple Output (MIMO) exploiting multipath propagation; that increases the data rate by using a technique known as spatial division multiplexing. The data is split into a number of spatial streams and these are transmitted through separate antennas to corresponding antennas at the receiver. Increasing the spatial streams you get a greater utilization of the available bandwidth.