



Preface

Overview

This document, *Cisco Video Surveillance 6000 Series IP Camera Configuration Guide, Release 1.1.2*, provides information about installing and deploying the following Cisco Video Surveillance 6000 Series IP Cameras:

- CIVS-IPC-6000P
- CIVS-IPC-6020
- CIVS-IPC-6030
- CIVS-IPC-6400

Organization

This manual is organized as follows:

Chapter 1, “Overview”	Provides information about the IP camera features, instructions for accessing the user interface, and information about the user interface.
Chapter 2, “Performing the Initial Setup of the IP Camera”	Provides information and instructions about performing the initial setup of the IP Camera
Chapter 3, “Viewing Live Video”	Provides information and instructions about viewing live video.
Chapter 4, “Feature Setup”	Provides information and instructions for configuring IP camera features, such as streaming, camera capabilities, video overlay, I/O ports, and events.
Chapter 5, “Network Setup”	Provides information and instructions for configuring network setting, such as IP addressing, time, discovery, IP filtering, and Quality of Service (QoS).
Chapter 6, “Administration”	Provides information and instructions for performing administrative tasks, such as IP camera initialization, user management, maintenance, firmware upgrade, device processes management, and password complexity.
Chapter 7, “Log Configuration”	Provides information and instructions for configuring and viewing logs.

Obtaining Documentation, Obtaining Support, and Security Guidelines

For information about obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.