

Copper grounding bar for server racks

GNDBAR1U

- FR: Guide de l'utilisateur - fr.startech.com
- DE: Bedienungsanleitung - de.startech.com
- ES: Guía del usuario - es.startech.com
- NL: Gebruiksaanwijzing - nl.startech.com
- IT: Guida per l'uso - it.startech.com
- JP: 取扱説明書 - jp.startech.com

Packaging contents

- 1 x copper grounding bar (1U or 10U)
- 12 x M5 (20 mm) screws
- 2 x M5 cage nuts
- 1 x instruction manual

System requirements

- A server rack with 1U of free space (horizontal installation) or 10U of free space (vertical installation)

System requirements are subject to change. For the latest requirements, please visit www.startech.com/GNDBAR1U.

Product overview




Mounting hole

Grounding hole


Install the grounding bar

The grounding bar can be installed either horizontally or vertically, and can be installed on the inside or the outside of your server rack. Using the holes located along the length of the grounding bar, you can connect and ground up to ten devices.

1. Decide whether you want to install the grounding bar horizontally or vertically, and select the area on your server rack where you want to install the grounding bar.

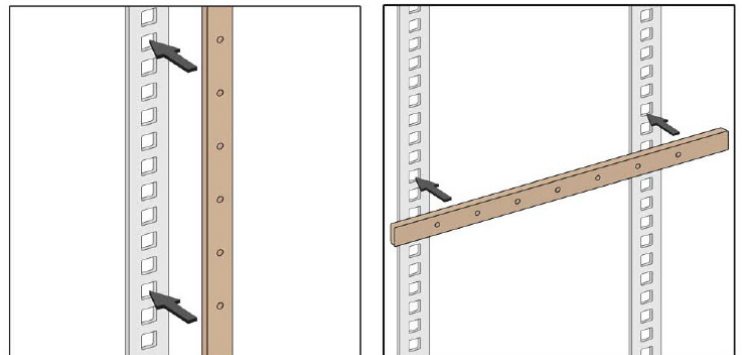

2. Insert the included M5 cage nuts in the holes in your server rack that line up with the mounting holes on the end of the grounding bar.
3. Line up the mounting holes on the end of the grounding bar with the holes in which you inserted the cage nuts.

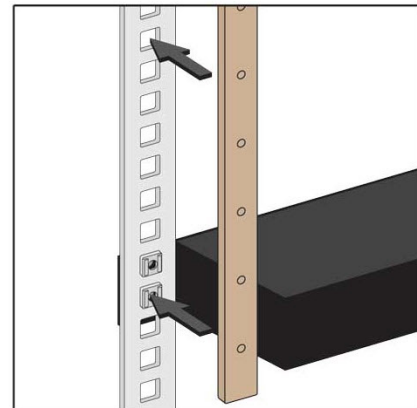

4. Holding the grounding bar in place, insert the included M5 (20 mm) screws into the mounting holes located on each end of the grounding bar.
5. Use a screwdriver to tighten the screws.
6. Attach the devices that you want to ground to the holes located along the length of the grounding bar.

Note: If you install the grounding bar vertically and inside of the server rack, the mounting screws used to hold equipment may need to be replaced with the provided M5 (20 mm) screws.

*actual product may vary from photos

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two-year warranty.

StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.