

PRIMERGY TX1310 M1

System configurator and order-information guide

September 2015

Contents

Instructions

Configuration diagram

Configurator

0 System software

- I Basic unit
- II Processor
- III Memory
- IV Graphics
- V Accessible drives
- VI RAID Controller
- VII Hard disk drives
- VIII Communikation/Network
- IX Miscellaneous
- X Country specific power cords

Change report



PRIMERGY Server

Instructions


This document contains basic product and configuration information that will enable you to configure your system via PC-/ System-Architect.

Only these tools will ensure a fast and proper configuration of your PRIMERGY server or your complete PRIMERGY Rack system.

You can configure your individual PRIMERGY server in order to adjust your specific requirements.

The System configurator is divided into several chapters that are identical to the current price list and PC-/ System-Architect

Please follow the lines. If there is a junction, you can choose which way or component you would like to take. Go through the configurator by following the lines from the top to the bottom.

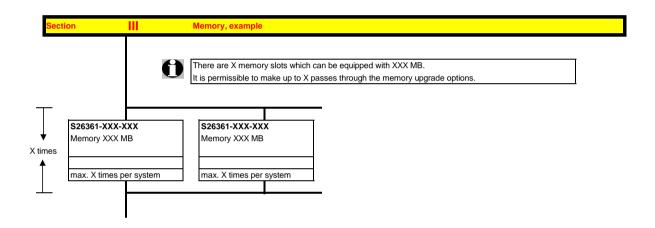

In one chapter you can only select as many components (here 4x) as the arrow indicates.



Please note that there are information symbols which indicate necessary information.



For further information see:


http://ts.fujitsu.com/products/standard_servers/index.html (internet)


https://partners.ts.fujitsu.com/com/order-supply/configurators/primergy_config/Pages/default.aspx

(extranet)

Prices and availability see price list and PC-/ System-Architect Subject to change and errors excepted


Configuration diagram PRIMERGY TX1310 M1

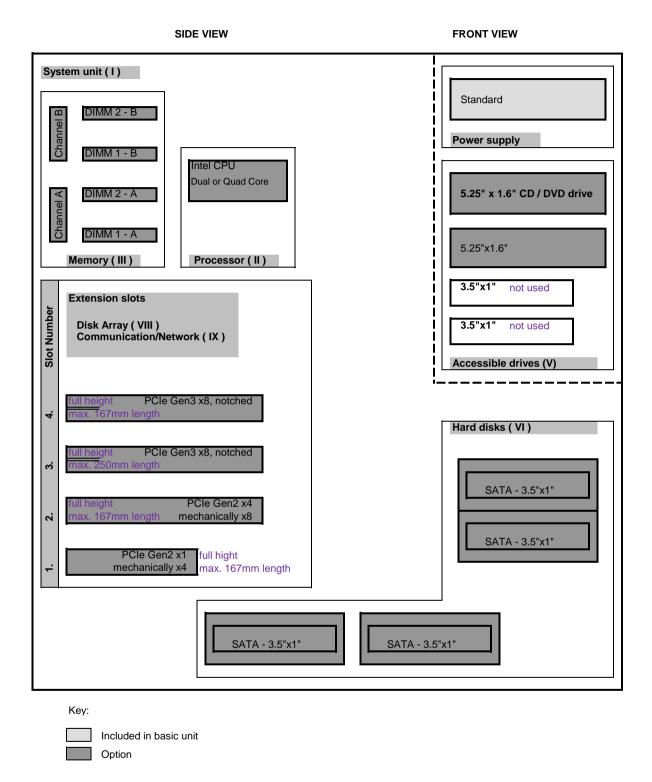


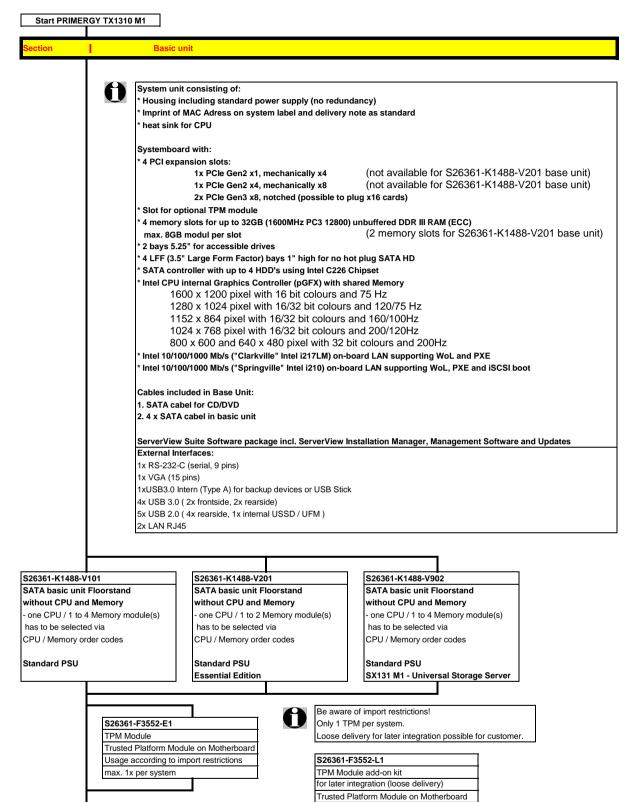



Usage according to import restrictions


max. 1x per system

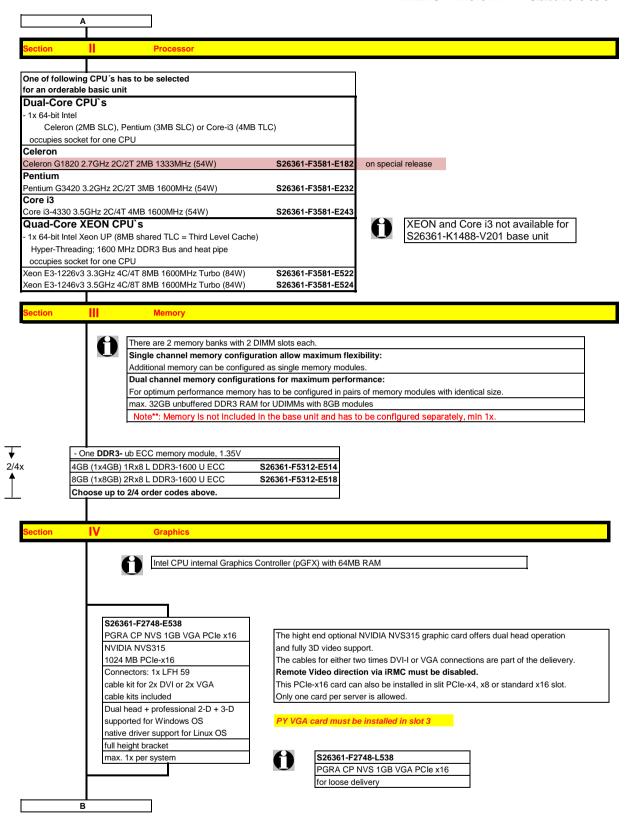

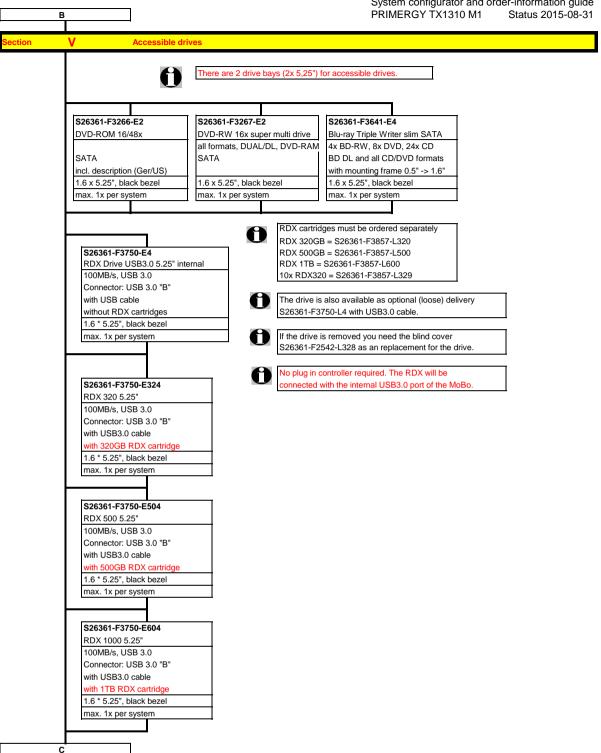

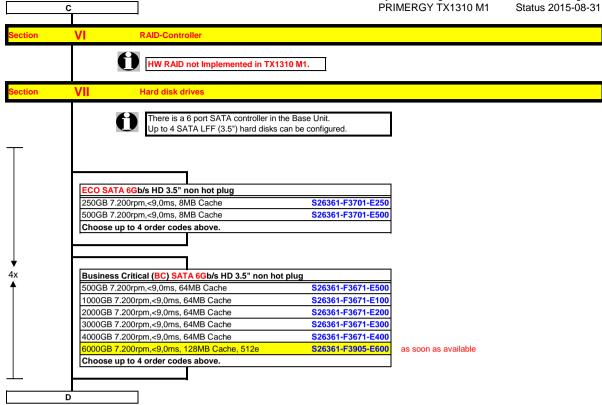

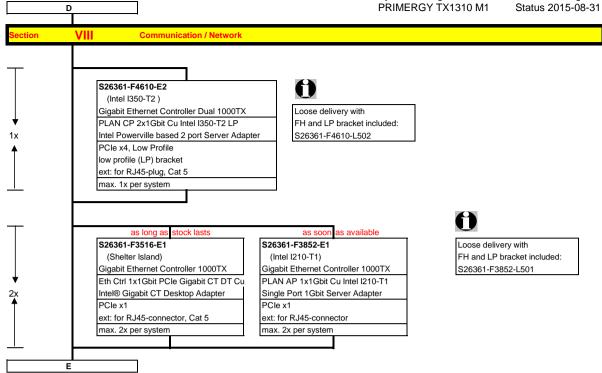

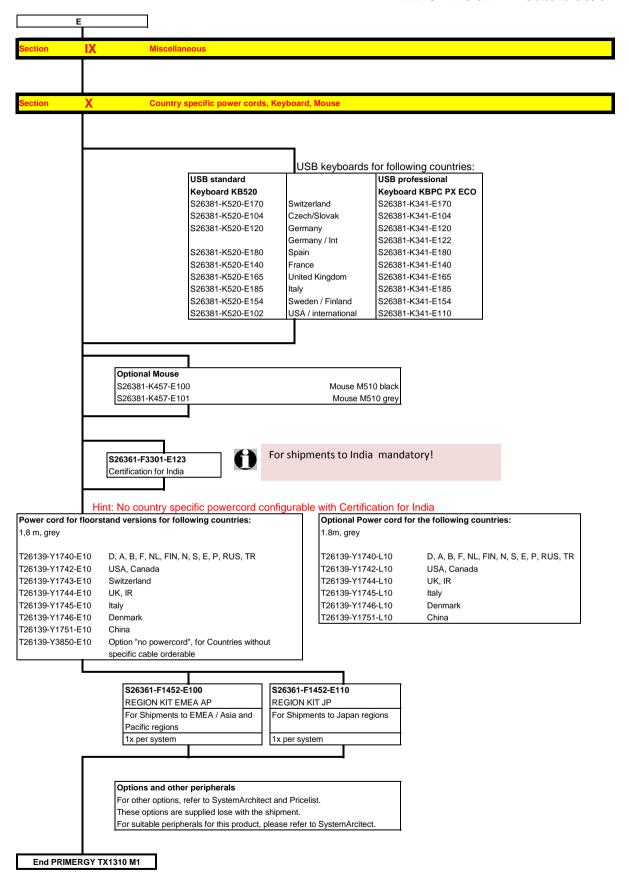

Change Report

Date	Order number	Changes
2015-07-20	S26361-F2748-E537	NVS300 EOL and deleted, successor NVS315 available
2015-06-11	T26139-Y1751-E10	country specific power codes updated and optional power cords added
2015-04-09	S26361-K1488-V902	Base Unit for SX131 M1 - Universal Storage Server added
2015-02-17	S26361-F3905-E600	6TB SATA 6G 7.2Krpm 512e HDD added
2014-12-15	S26361-F2748-E538	PGRA CP NVS 1GB VGA PCIe x16 added plus EOL dates for predessesor / first delivery
2014-10-09	S26361-F3852-E1	added new Single Port 1Gbit NIC
2014-07-24		SW-Pages and external USB devices removed from configurator
2014-06-30	S26361-F3301-E123	Added certification for India
2014-05-15		added Infoboxes for RDX
2014-03-31		First Release