



MX240 5G Universal Routing Platform Hardware Guide



Modified: 2019-07-01

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

MX240 5G Universal Routing Platform Hardware Guide
Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xxi
	Documentation and Release Notes	xxi
	Using the Examples in This Manual	xxi
	Merging a Full Example	xxii
	Merging a Snippet	xxii
	Documentation Conventions	xxiii
	Documentation Feedback	xxv
	Requesting Technical Support	xxv
	Self-Help Online Tools and Resources	xxvi
	Creating a Service Request with JTAC	xxvi
Chapter 1	Overview	27
	MX240 System Overview	27
	Benefits of the MX240 Router	27
	MX240 Hardware Overview	28
	MX240 Chassis	30
	MX240 Chassis Description	30
	MX240 Router Hardware and CLI Terminology Mapping	33
	MX240 Component Redundancy	34
	MX240 Craft Interface Overview	35
	MX240 Alarm Relay Contacts on the Craft Interface	35
	MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button	36
	MX240 Component LEDs on the Craft Interface	36
	Host Subsystem LEDs on the MX240 Craft Interface	37
	Power Supply LEDs on the MX240 Craft Interface	37
	DPC and MPC LEDs on the MX240 Craft Interface	37
	FPC LEDs on the MX240 Craft Interface	38
	SCB LEDs on the MX240 Craft Interface	38
	Fan LED on the MX240 Craft Interface	39
	MX240 Cooling System	39
	MX240 Cooling System Description	39
	MX240 Fan LED	40
	MX240 AC Power System	41
	MX240 Power System Description	41
	MX240 AC Power Supply Description	42
	AC Power Supply Configurations	43
	MX240 AC Power Supply LEDs	43
	AC Power Supply Electrical Specifications for the MX240 Router	44
	AC Power Circuit Breaker Requirements for the MX240 Router	45
	AC Power Cord Specifications for the MX240 Router	46
	Errata with the MX240 Router Documentation	48

MX240 DC Power System	48
MX240 DC Power Supply Description	48
DC Power Supply Configurations	49
MX240 DC Power Supply LEDs	50
DC Power Supply Electrical Specifications for the MX240 Router	51
DC Power Circuit Breaker Requirements for the MX240 Router	52
MX240 Chassis Grounding Specifications	53
MX240 Chassis Grounding Points Specifications	53
MX240 Router Grounding Cable Lug Specifications	54
MX240 Router Grounding Cable Specifications	54
DC Power Source Cabling for the MX240 Router	55
DC Power Cable Specifications for the MX240 Router	56
Outstanding Issues with the MX240 Router	57
MX240 Host Subsystem Components and Descriptions	57
MX240 Host Subsystem Description	58
MX240 Host Subsystem LEDs	58
MX240 Midplane Description	58
MX240 Routing Engine Description	59
RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Components	61
Routing Engine Interface Ports	62
RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Interface Ports	62
Routing Engine Boot Sequence	62
RE-S-1800 Routing Engine Description	63
RE-S-1800 Routing Engine Components	63
RE-S-1800 Routing Engine LEDs	64
RE-S-1800 Routing Engine Boot Sequence	64
RE-S-X6-64G Routing Engine Description	65
RE-S-X6-64G Routing Engine Components	65
RE-S-X6-64G Routing Engine Boot Sequence	66
RE-S-X6-128G Routing Engine Description	67
RE-S-X6-128G Routing Engine Components	67
RE-S-X6-128G Routing Engine LEDs	68
RE-S-X6-128G Routing Engine Boot Sequence	69
MX240 Routing Engine LEDs	69
RE-S-1800 Routing Engine LEDs	70
RE-S-X6-64G Routing Engine LEDs	70
Routing Engine Specifications	71
Supported Routing Engines by Router	78
M7i Routing Engines	78
M10i Routing Engines	79
M40e Routing Engines	79
M120 Routing Engines	80
M320 Routing Engines	80
MX5, MX10, MX40, and MX80 Routing Engine	81
MX104 Routing Engines	81
MX240 Routing Engines	81
MX480 Routing Engines	82
MX960 Routing Engines	83

MX2008 Routing Engines	84
MX2010 Routing Engines	85
MX2020 Supported Routing Engines	85
MX10003 Routing Engines	86
MX10008 Routing Engines	86
PTX1000 Routing Engines	87
PTX3000 Routing Engines	87
PTX5000 Routing Engines	87
PTX10008 and PTX10016 Routing Engines	88
T320 Routing Engines	89
T640 Routing Engines	89
T1600 Routing Engines	90
T4000 Routing Engines	91
TX Matrix Routing Engines	91
TX Matrix Plus Routing Engines	92
TX Matrix Plus (with 3D SIBs) Routing Engines	92
MX240 Line Card Components and Descriptions	93
Interface Modules—DPCs	93
MX240 Dense Port Concentrator (DPC) Description	93
MX240 DPC Port and Interface Numbering	95
MX240 Dense Port Concentrator (DPC) LEDs	98
DPCs Supported on MX240, MX480, and MX960 Routers	98
Interface Modules—FPCs and PICs	101
MX240 Flexible PIC Concentrator (FPC) Description	101
MX240 Flexible PIC Concentrator (FPC) LEDs	103
FPCs Supported by MX240, MX480, and MX960 Routers	104
MX240 PIC Description	104
MX240 PIC Port and Interface Numbering	105
MX240 PIC LEDs	106
PICs Supported by MX240, MX480, and MX960 Routers	107
Interface Modules—MPCs and MICs	108
MIC/MPC Compatibility	108
MX240 Modular Interface Card (MIC) Description	116
MICs Supported by MX Series Routers	116
MX240 Modular Interface Card (MIC) LEDs	124
MX240 MIC Port and Interface Numbering	124
MX240 Modular Port Concentrator (MPC) Description	127
MX240 Modular Port Concentrator (MPC) LEDs	129
MPCs Supported by MX Series Routers	130
MX240 Application Services Modular Line Card Description	133
MX240 AS MSC LEDs	136
MX240 Application Services Modular Processing Card Description	136
MX240 AS MXC LEDs	137
MX-Series Switch Control Board (SCB) Overview	138
CLI Identification	139

Chapter 2	Site Planning, Preparation, and Specifications	141
	MX240 Site Preparation Checklist	141
	MX240 Site Guidelines and Requirements	142
	MX240 Router Physical Specifications	142
	MX240 Router Environmental Specifications	144
	MX240 Router Rack Requirements	144
	MX240 Router Clearance Requirements for Airflow and Hardware Maintenance	146
	MX240 Router Cabinet Size and Clearance Requirements	147
	MX240 Router Cabinet Airflow Requirements	147
	MX240 Power Planning	148
	Power Requirements for an MX240 Router	148
	Calculating Power Requirements for MX240 Routers	156
	MX240 Network Cable and Transceiver Planning	159
	Determining Transceiver Support and Specifications for M Series and T Series Routers	159
	Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion	160
	Signal Loss in Multimode and Single-Mode Fiber-Optic Cable	160
	Attenuation and Dispersion in Fiber-Optic Cable	160
	Calculating Power Budget and Power Margin for Fiber-Optic Cables	161
	Calculating Power Budget for Fiber-Optic Cable	161
	Calculating Power Margin for Fiber-Optic Cable	161
	Routing Engine Interface Cable and Wire Specifications for MX Series Routers	163
	MX240 Management and Console Port Specifications and Pinouts	163
	RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port	163
	RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports	164
Chapter 3	Initial Installation and Configuration	165
	Installing an MX240 Router Overview	165
	Unpacking the MX240 Router	166
	Tools and Parts Required to Unpack the MX240 Router	166
	Unpacking the MX240 Router	166
	Verifying the MX240 Router Parts Received	168
	Installing the MX240 Router	170
	Installing the MX240 Router Mounting Hardware for a Rack or Cabinet	170
	Moving the Mounting Brackets for Center-Mounting the MX240 Router	172
	Tools Required to Install the MX240 Router with a Mechanical Lift	173
	Removing Components from the MX240 Router Before Installing it with a Lift	173
	Removing the Power Supplies Before Installing the MX240 Router with a Lift	173
	Removing the Fan Tray Before Installing the MX240 Router with a Lift	174
	Removing the SCBs Before Installing the MX240 Router with a Lift	175
	Removing the DPCs Before Installing the MX240 Router with a Lift	176

Removing the FPC Before Installing the MX240 Router with a Lift	177
Installing the MX240 Router By Using a Mechanical Lift	178
Reinstalling Components in the MX240 Router After Installing it with a Lift	179
Reinstalling the Power Supplies After Installing the MX240 Router with a Lift	180
Reinstalling the Fan Tray After Installing the MX240 Router with a Lift	180
Reinstalling the SCBs After Installing the MX240 Router with a Lift . . .	181
Reinstalling the DPCs After Installing the MX240 Router with a Lift . . .	182
Reinstalling the FPCs After Installing the MX240 Router with a Lift . . .	183
Tools Required to Install the MX240 Router without a Mechanical Lift	184
Removing Components from the MX240 Router Before Installing it without a Lift	184
Removing the Power Supplies Before Installing the MX240 Router without a Lift	184
Removing the Fan Tray Before Installing the MX240 Router without a Lift	185
Removing the SCBs Before Installing the MX240 Router without a Lift	186
Removing the DPCs Before Installing the MX240 Router without a Lift	187
Removing the FPC Before Installing the MX240 Router without a Lift	188
Installing the MX240 Chassis in the Rack Manually	189
Reinstalling Components in the MX240 Router After Installing it without a Lift	191
Reinstalling the Power Supplies After Installing the MX240 Router without a Lift	191
Reinstalling the Fan Tray After Installing the MX240 Router without a Lift	192
Reinstalling the SCBs After Installing the MX240 Router without a Lift	193
Reinstalling the DPCs After Installing the MX240 Router without a Lift	193
Reinstalling the FPCs After Installing the MX240 Router without a Lift	194
Connecting the MX240 Router to Power	195
Tools and Parts Required for MX240 Router Grounding and Power Connections	195
Grounding the MX240 Router	196
Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies	197
Powering On an AC-Powered MX240 Router	198
Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies	199
Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies	202
Connecting an MX240 AC Power Supply Cord	204

	Connecting an MX240 DC Power Supply Cable	204
	Powering Off the MX240 Router	206
	Connecting the MX240 Router to the Network	206
	Tools and Parts Required for MX240 Router Connections	207
	Connecting the MX240 Router to a Network for Out-of-Band Management	207
	Connecting the MX240 Router to a Management Console or Auxiliary Device	207
	Connecting the MX240 Router to an External Alarm-Reporting Device . . .	208
	Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router	209
	Initially Configuring the MX240 Router	211
Chapter 4	Maintaining, Installing and Replacing Components	217
	Maintaining MX240 Components	217
	Routine Maintenance Procedures for the MX240 Router	217
	Tools and Parts Required to Maintain the MX240 Router	218
	MX240 Field-Replaceable Units (FRUs)	218
	Tools and Parts Required to Replace MX240 Hardware Components	219
	Maintaining the MX240 Cooling System Component	221
	Maintaining the MX240 Air Filter	221
	Replacing the MX240 Air Filter	221
	Removing the MX240 Air Filter	221
	Installing the MX240 Air Filter	222
	Maintaining the MX240 Fan Tray	223
	Replacing the MX240 Fan Tray	225
	Removing the MX240 Fan Tray	225
	Installing the MX240 Normal-Capacity Fan Tray	226
	Maintaining MX240 Host Subsystem Components	227
	Maintaining the MX240 Host Subsystem	227
	Replacing an MX240 Routing Engine	230
	Removing an MX240 Routing Engine	230
	Installing an MX240 Routing Engine	232
	Replacing an SSD Drive on an RE-S-1800	233
	Replacing an SSD Drive on an RE-S-X6-64G	235
	Replacing Connections to MX240 Routing Engine Interface Ports	240
	Replacing the Management Ethernet Cable on an MX240 Router	241
	Replacing the Console or Auxiliary Cable on an MX240 Router	241
	Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem	242
	Removing the Routing Engine	243
	Installing the Routing Engine RE-S-X6-64G	245
	Verifying and Configuring the Upgraded Routing Engine as the Master	248
	Verifying and Configuring the Upgraded Routing Engine as the Backup	248
	Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem	248
	Removing the Routing Engine	249
	Installing the Routing Engine RE-S-X6-64G	250

Replacing the MX240 Craft Interface	251
Disconnecting the Alarm Relay Wires from the MX240 Craft Interface	251
Removing the MX240 Craft Interface	251
Installing the MX240 Craft Interface	252
Connecting the Alarm Relay Wires to the MX240 Craft Interface	253
Maintaining MX240 Interface Modules	254
Maintaining MX240 DPCs	254
Holding an MX240 DPC	256
Storing an MX240 DPC	258
Replacing an MX240 DPC	259
Removing an MX240 DPC	259
Installing an MX240 DPC	261
Maintaining MX240 FPCs	264
Holding an MX240 FPC	266
Storing an MX240 FPC	269
Replacing an MX240 FPC	269
Removing an MX240 FPC	270
Installing an MX240 FPC	272
Replacing an MX240 MIC	274
Removing an MX240 MIC	275
Installing an MX240 MIC	277
Maintaining MX240 MICs	279
Installing an MX240 Dual-Wide MIC	280
Maintaining MX240 MPCs	282
Replacing an MX240 MPC	284
Removing an MX240 MPC	284
Installing an MX240 MPC	286
Maintaining MX240 PICs	288
Replacing an MX240 PIC	289
Removing an MX240 PIC	289
Installing an MX240 PIC	291
Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs	293
Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC	294
Removing a Cable on an MX240 DPC, MPC, MIC, or PIC	294
Installing a Cable on an MX240 DPC, MPC, MIC, or PIC	296
Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC	298
Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC	298
Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC	299
Replacing an MX240 AS MLC	300
Removing an MX240 AS MLC	301
Installing an MX240 AS MLC	303
Replacing an MX240 AS MSC	304
Removing an MX240 AS MSC	304
Installing an MX240 AS MSC	306

Replacing an MX240 AS MXC	307
Removing an MX240 AS MXC	308
Installing an MX240 AS MXC	309
Maintaining MX240 Power System Components	310
Maintaining the MX240 Power Supplies	311
Replacing an MX240 AC Normal-Capacity Power Supply	311
Removing an MX240 AC Normal-Capacity Power Supply	312
Installing an MX240 AC Normal-Capacity Power Supply	313
Replacing an MX240 AC Power Supply Cord	314
Disconnecting an MX240 AC Power Supply Cord	314
Connecting an MX240 AC Power Supply Cord	315
Replacing an MX240 DC Normal-Capacity Power Supply	315
Removing an MX240 DC Power Supply	315
Installing an MX240 DC Normal Capacity Power Supply	317
Replacing an MX240 DC Power Supply Cable	320
Disconnecting an MX240 DC Power Supply Cable	320
Connecting an MX240 DC Power Supply Cable	321
Maintaining MX240 SFP and XFP Transceivers	323
Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC	323
Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC	323
Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC	325
Maintaining MX240 Switch Control Boards	326
Replacing an MX240 SCB-MX	326
Removing an MX240 SCB-MX	327
Installing an MX240 Switch Control Board	328
Upgrading an MX240 to Use the SCBE-MX	330
Prepare for the SCB-MX Upgrade	330
Upgrade the MX240 SCB-MX in the Backup Routing Engine	331
Upgrade the MX240 SCB-MX in the Master Routing Engine	333
Complete the SCB-MX Upgrade	335
Upgrading an MX240 to Use the SCBE2-MX	338
Prepare the MX240 Router for the SCBE2-MX Upgrade	339
Power Off the MX240 Router	339
Remove the MX240 Routing Engine	340
Install the MX240 Routing Engine into the SCBE2-MX	340
Power On the MX240 Router	341
Complete the SCBE2-MX Upgrade	342
Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX	343
Upgrade the Routing Engine	343
Install the Routing Engine into the SCBE3-MX	344
Install the SCBE3-MX into the Router Chassis	344
Complete the SCBE3-MX Upgrade	344

Chapter 5	Troubleshooting Hardware	347
	Troubleshooting the MX240 Components	347
	Troubleshooting Resources for MX240 Routers	347
	Command-Line Interface	347
	Chassis and Interface Alarm Messages	348
	Alarm Relay Contacts	348
	Craft Interface LEDs	348
	Component LEDs	349
	Juniper Networks Technical Assistance Center	349
	Troubleshooting the MX240 Cooling System	350
	Troubleshooting the MX240 DPCs	350
	Troubleshooting the MX240 FPCs	352
	Troubleshooting the MX240 MICs	354
	Troubleshooting the MX240 MPCs	354
	Troubleshooting the MX240 PICs	356
	Troubleshooting the MX240 Power System	356
Chapter 6	Contacting Customer Support and Returning the Chassis or Components	361
	Contacting Customer Support	361
	Locating Component Serial Numbers	362
	Displaying MX240 Router Components and Serial Numbers	362
	MX240 Chassis Serial Number Label	363
	MX240 SCB Serial Number Label	363
	MX240 DPC Serial Number Label	364
	MX240 FPC Serial Number Label	365
	MX240 MIC Serial Number Label	366
	MX240 MPC Serial Number Label	368
	MX240 PIC Serial Number Label	369
	MX240 Power Supply Serial Number Label	369
	MX240 Routing Engine Serial Number Label	371
	Packing and Returning Components	372
	Returning a Hardware Component to Juniper Networks, Inc.	372
	Guidelines for Packing Hardware Components for Shipment	373
	Packing the MX240 Router for Shipment	373
Chapter 7	Safety and Compliance Information	375
	General Safety Guidelines and Warnings	376
	Definitions of Safety Warning Levels	377
	Qualified Personnel Warning	378
	Fire Safety Requirements	379
	Fire Suppression	379
	Fire Suppression Equipment	379
	Warning Statement for Norway and Sweden	380
	Preventing Electrostatic Discharge Damage to an MX240 Router	380
	Installation Instructions Warning	381
	MX240 Chassis Lifting Guidelines	382
	Ramp Warning	383
	Rack-Mounting and Cabinet-Mounting Warnings	383

Grounded Equipment Warning	387
Laser and LED Safety Guidelines and Warnings	387
General Laser Safety Guidelines	388
Class 1 Laser Product Warning	388
Class 1 LED Product Warning	388
Laser Beam Warning	389
Radiation from Open Port Apertures Warning	389
Maintenance and Operational Safety Guidelines and Warnings	390
Battery Handling Warning	391
Jewelry Removal Warning	392
Lightning Activity Warning	393
Operating Temperature Warning	393
Product Disposal Warning	395
General Electrical Safety Guidelines and Warnings	395
Prevention of Electrostatic Discharge Damage	396
AC Power Electrical Safety Guidelines	398
AC Power Disconnection Warning	398
MX240 DC Power Electrical Safety Guidelines	399
DC Power Copper Conductors Warning	400
DC Power Disconnection Warning	401
DC Power Grounding Requirements and Warning	402
DC Power Wiring Sequence Warning	403
DC Power Wiring Terminations Warning	404
Midplane Energy Hazard Warning	405
Multiple Power Supplies Disconnection Warning	406
Action to Take After an Electrical Accident	406
Site Electrical Wiring Guidelines for MX Series Routers	407
Distance Limitations for Signaling	407
Radio Frequency Interference	407
Electromagnetic Compatibility	407
Agency Approvals and Compliance Statements	407
Agency Approvals for MX Series Routers	408
Compliance Statements for EMC Requirements	409
Canada	409
European Community	409
Israel	409
Japan	409
United States	410
Compliance Statements for Environmental Requirements	410
Compliance Statements for NEBS	410
Compliance Statements for Acoustic Noise for the MX240 Router	410

List of Figures

Chapter 1	Overview	27
	Figure 1: Front View of a Fully Configured MX240 Router	31
	Figure 2: Rear View of a Fully Configured AC-Powered MX240 Router (110 V)	31
	Figure 3: Rear View of a Fully Configured AC-Powered MX240 Router (220 V)	32
	Figure 4: Rear View of a Fully Configured DC-Powered MX240 Router	32
	Figure 5: Front View of a MPC Installed Horizontally in the MX240 Router	32
	Figure 6: Front Panel of the Craft Interface	35
	Figure 7: Alarm Relay Contacts	36
	Figure 8: Airflow Through the Chassis	39
	Figure 9: Fan Tray	40
	Figure 10: Air Filter	40
	Figure 11: AC Power Supply	42
	Figure 12: High-Capacity AC Power Supply	42
	Figure 13: AC Plug Types	47
	Figure 14: DC Power Supply	49
	Figure 15: High-Capacity DC Power Supply	49
	Figure 16: Connecting AC Power to the Router	53
	Figure 17: Connecting DC Power to the Router	54
	Figure 18: Grounding Cable Lug	54
	Figure 19: Typical DC Source Cabling to the Router	55
	Figure 20: DC Power Cable Lug	56
	Figure 21: Midplane	59
	Figure 22: RE-S-2000 Routing Engine	60
	Figure 23: RE-S-1800	60
	Figure 24: RE-S-X6-64G Routing Engine Front View	60
	Figure 25: RE-S-X6-64G-LT Routing Engine Front View	61
	Figure 26: RE-S-1800 Front View	63
	Figure 27: RE-S-X6-64G Routing Engine Front View	65
	Figure 28: RE-S-X6-128G Routing Engine Front View	67
	Figure 29: RE-S-X6-128G Routing Engine LEDs	68
	Figure 30: RE-S-X6-64G Routing Engine LEDs	70
	Figure 31: Typical DPCs Supported on the MX240 Router	94
	Figure 32: DPC Installed Horizontally in the MX240 Router	94
	Figure 33: MX240 DPC Interface Port Mapping	96
	Figure 34: Typical FPCs Supported on the MX240 Router	102
	Figure 35: FPC Installed in the MX240 Router Chassis	103
	Figure 36: MX240 PIC Interface Port Mapping	106
	Figure 37: MX240 MIC Interface Port Mapping	126
	Figure 38: Typical MPC Supported on the MX240 Router	128

	Figure 39: MPC Installed Horizontally in the MX240 Router	128
	Figure 40: Application Services Modular Line Card (AS MLC)	134
	Figure 41: Application Services Modular Processing Card (AS MXC)	137
Chapter 2	Site Planning, Preparation, and Specifications	141
	Figure 42: Typical Open-Frame Rack	146
	Figure 43: Chassis Dimensions and Clearance Requirements	147
	Figure 44: Airflow Through the Chassis	148
Chapter 3	Initial Installation and Configuration	165
	Figure 45: Contents of the Shipping Crate	168
	Figure 46: Installing the Front-Mounting Hardware for a Four-Post Rack or Cabinet	171
	Figure 47: Installing the Mounting Hardware for an Open-Frame Rack	172
	Figure 48: Removing a Power Supply Before Installing the Router	174
	Figure 49: Removing the Fan Tray	175
	Figure 50: Removing an SCB	176
	Figure 51: Removing a DPC	177
	Figure 52: Removing an FPC	178
	Figure 53: Installing the Router in the Rack	179
	Figure 54: Reinstalling a Power Supply	180
	Figure 55: Reinstalling a Fan Tray	181
	Figure 56: Reinstalling an SCB	182
	Figure 57: Reinstalling a DPC	183
	Figure 58: Reinstalling an FPC	184
	Figure 59: Removing a Power Supply Before Installing the Router	185
	Figure 60: Removing the Fan Tray	186
	Figure 61: Removing an SCB	187
	Figure 62: Removing a DPC	188
	Figure 63: Removing an FPC	189
	Figure 64: Installing the Router in the Rack	190
	Figure 65: Reinstalling a Power Supply	192
	Figure 66: Reinstalling a Fan Tray	192
	Figure 67: Reinstalling an SCB	193
	Figure 68: Reinstalling a DPC	194
	Figure 69: Reinstalling an FPC	195
	Figure 70: Connecting AC Power to the Routers	198
	Figure 71: Connecting DC Power to the Router	202
	Figure 72: Connecting Power Cables to the DC Power Supply	205
	Figure 73: Ethernet Port	207
	Figure 74: Routing Engine Ethernet Cable Connector	207
	Figure 75: Auxiliary and Console Ports	208
	Figure 76: Routing Engine Console and Auxiliary Cable Connector	208
	Figure 77: Alarm Relay Contacts	209
	Figure 78: Attaching a Cable to a DPC	210
	Figure 79: Attaching a Cable to a MIC	211
Chapter 4	Maintaining, Installing and Replacing Components	217
	Figure 80: Removing the Air Filter	222
	Figure 81: Installing the Air Filter	223

Figure 82: Removing the Fan Tray	226
Figure 83: Installing the Fan Tray	227
Figure 84: Removing a Routing Engine	231
Figure 85: Installing an MX480 Routing Engine	233
Figure 86: RE-S-1800 Storage Drive Slots	234
Figure 87: RE-S-X6-64G Storage Drive Slots	235
Figure 88: Removing an SSD in the Routing Engine RE-S-X6-64G	237
Figure 89: Installing an SSD in the Routing Engine RE-S-X6-64G	239
Figure 90: Cable Connector	241
Figure 91: Ethernet Port	241
Figure 92: Auxiliary and Console Ports	242
Figure 93: Removing a Routing Engine from an MX240 Router	244
Figure 94: Removing a Routing Engine from an MX480 Router	244
Figure 95: Removing a Routing Engine from an MX960 Router	245
Figure 96: Installing a Routing Engine in an MX240 Router	246
Figure 97: Installing a Routing Engine in an MX480 Router	247
Figure 98: Installing a Routing Engine in an MX960 Router	247
Figure 99: Alarm Relay Contacts	251
Figure 100: Removing the Craft Interface	252
Figure 101: Installing the Craft Interface	253
Figure 102: Alarm Relay Contacts	253
Figure 103: Do Not Grasp the Connector Edge	257
Figure 104: Do Not Rest the DPC on an Edge	258
Figure 105: Removing a DPC	261
Figure 106: Installing a DPC	263
Figure 107: Attaching a Cable to a DPC	264
Figure 108: Do Not Grasp the Connector Edge	266
Figure 109: Do Not Carry an FPC with Only One Hand	267
Figure 110: Do Not Rest the FPC on an Edge	267
Figure 111: Holding an FPC Vertically	268
Figure 112: Do Not Stack FPCs	269
Figure 113: Removing an FPC	272
Figure 114: Installing an FPC	274
Figure 115: Removing a MIC	276
Figure 116: Removing a Dual-Wide MIC	276
Figure 117: Installing the Septum	277
Figure 118: Installing a MIC	279
Figure 119: Removing the Septum	280
Figure 120: Installing a Dual-Wide MIC	282
Figure 121: Removing an MPC	286
Figure 122: Installing an MPC	288
Figure 123: Removing a PIC	291
Figure 124: Installing a PIC	293
Figure 125: Removing SFPs or XFPs	299
Figure 126: Removing an AS MLC	302
Figure 127: Installing an AS MLC	304
Figure 128: Removing an AS MSC	305
Figure 129: Installing an AS MSC	307
Figure 130: Removing an AS MXC	309

	Figure 131: Installing an AS MXC	310
	Figure 132: Removing an AC Power Supply	313
	Figure 133: Installing an AC Power Supply	314
	Figure 134: Removing a DC Power Supply from the Router	317
	Figure 135: Installing a DC Power Supply in the Router	319
	Figure 136: Connecting DC Power to the Router	320
	Figure 137: Connecting Power Cables to the DC Power Supply	322
	Figure 138: Removing SFPs or XFPs	324
	Figure 139: Removing the Switch Control Board from an MX240 Router	328
	Figure 140: Installing a Switch Control Board in the MX480	328
Chapter 5	Troubleshooting Hardware	347
	Figure 141: MX240 DC High-Capacity Power Supply Input Mode Switch	359
Chapter 6	Contacting Customer Support and Returning the Chassis or Components	361
	Figure 142: Serial Number ID Label	363
	Figure 143: MX240 Chassis Serial Number Label	363
	Figure 144: SCB Serial Number Label	364
	Figure 145: DPC Serial Number Label	365
	Figure 146: FPC Serial Number Label	366
	Figure 147: 2-Port MIC Serial Number Label	367
	Figure 148: 4-Port MIC Serial Number Label	367
	Figure 149: 20-Port MIC Serial Number Label	367
	Figure 150: 40-Port MIC Serial Number Label	367
	Figure 151: MPC Serial Number Label	368
	Figure 152: PIC Serial Number Label	369
	Figure 153: AC Power Supply Serial Number Label	370
	Figure 154: DC Power Supply Serial Number Label	370
	Figure 155: Routing Engine Serial Number Label	371
	Figure 156: RE-S-X6-64G Routing Engine Serial Number Label	371
Chapter 7	Safety and Compliance Information	375
	Figure 157: Placing a Component into an Electrostatic Bag	381
	Figure 158: Placing a Component into an Antistatic Bag	397

List of Tables

	About the Documentation	xxi
	Table 1: Notice Icons	xxiii
	Table 2: Text and Syntax Conventions	xxiv
Chapter 1	Overview	27
	Table 3: MX240 Router Capacity	28
	Table 4: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)	29
	Table 5: MX240 Router Hardware Components and CLI Terminology	33
	Table 6: Alarm LEDs and Alarm Cutoff/Lamp Test Button	36
	Table 7: Host Subsystem LEDs on the Craft Interface	37
	Table 8: Power Supply LEDs on the Craft Interface	37
	Table 9: DPC and MPC LEDs on the Craft Interface	38
	Table 10: FPC LEDs on the Craft Interface	38
	Table 11: SCB LEDs on the Craft Interface	38
	Table 12: Fan LEDs on the Craft Interface	39
	Table 13: AC Power Supply LEDs	44
	Table 14: AC Power Supply Electrical Specifications	44
	Table 15: AC Power System Specifications	45
	Table 16: AC Power Cord Specifications	46
	Table 17: Power Supply Redundancy and Power Distribution	50
	Table 18: DC Power Supply LEDs	50
	Table 19: DC Power Supply Electrical Specifications	51
	Table 20: DC Power System Specifications	52
	Table 21: Routing Engine LEDs	64
	Table 22: RE-S-X6-128G Routing Engine LEDs	68
	Table 23: Routing Engine LEDs	69
	Table 24: Routing Engine LEDs	70
	Table 25: RE-S-X6-64G Routing Engine LEDs	71
	Table 26: Routing Engine Specifications	72
	Table 27: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines	75
	Table 28: End-of-Life Routing Engine Specifications	76
	Table 29: M7i Routing Engines	79
	Table 30: M10i Routing Engines	79
	Table 31: M40e Routing Engines	79
	Table 32: M120 Routing Engines	80
	Table 33: M320 Routing Engines	80
	Table 34: MX5, MX10, MX40, and MX80 Routing Engine	81
	Table 35: MX104 Routing Engines	81
	Table 36: MX240 Supported Routing Engines	82

Table 37: MX480 Supported Routing Engines	83
Table 38: MX960 Supported Routing Engines	84
Table 39: MX2008 Supported Routing Engines	85
Table 40: MX2010 Supported Routing Engines	85
Table 41: MX2020 Supported Routing Engines	86
Table 42: MX10003 Supported Routing Engines	86
Table 43: MX10008 Routing Engines	87
Table 44: PTX1000 Routing Engines	87
Table 45: PTX3000 Routing Engines	87
Table 46: PTX5000 Routing Engines	88
Table 47: PTX10008 and PTX10016 Routing Engines	88
Table 48: T320 Routing Engines	89
Table 49: T640 Routing Engines	89
Table 50: T1600 Routing Engines	90
Table 51: T4000 Routing Engines	91
Table 52: TX Matrix Routing Engines	92
Table 53: TX Matrix Plus Routing Engines	92
Table 54: Routing Engines on TX Matrix Plus with 3D SIBs	93
Table 55: DPCs Supported in MX240, MX480, and MX960 Routers	99
Table 56: FPCs Supported by MX Series Routers	104
Table 57: PICs Supported by MX240, MX480, and MX960 Routers	107
Table 58: MIC/MPC1 Compatibility	108
Table 59: MIC/MPC2 Compatibility	110
Table 60: MIC/MPC3 Compatibility	112
Table 61: MIC/MPC6 Compatibility	114
Table 62: MIC/MPC8 Compatibility	115
Table 63: MIC/MPC9 Compatibility	115
Table 64: MIC/MPC10003 Compatibility	115
Table 65: MICs Supported by MX240, MX480, MX960 and MX2008 Routers	116
Table 66: MICs Supported by MX2010 and MX2020 Routers	119
Table 67: MICs Supported by MX5, MX10, and MX40 Routers	121
Table 68: MICs Supported by MX80 and MX104 Routers	122
Table 69: MICs Supported by MX10003 Router	124
Table 70: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers	130
Table 71: AS MSC LEDs	136
Table 72: AS MXC LEDs	137
Table 73: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)	138
Table 74: Supported Routing Engines for MX Series 5G Universal Routing Platforms Switch Control Boards	139
Chapter 2 Site Planning, Preparation, and Specifications	141
Table 75: Site Preparation Checklist	141
Table 76: Physical Specifications	142
Table 77: Routers Environmental Specifications	144
Table 78: Rack Requirements and Specifications for an MX240 Router	145
Table 79: MX240 Common Component Power Requirements	148
Table 80: FRU Power Requirements	149

	Table 81: Sample Power Requirements for an MX240 Router	157
	Table 82: Calculating Power Budget	158
	Table 83: Calculating Input Power Examples	158
	Table 84: Calculating Thermal Output	159
	Table 85: Estimated Values for Factors Causing Link Loss	162
	Table 86: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces	163
	Table 87: RJ-45 Connector Pinout for the Routing Engine ETHERNET Port	164
	Table 88: RJ-45 Connector Pinout for the AUX and CONSOLE Ports	164
Chapter 3	Initial Installation and Configuration	165
	Table 89: Parts List for a Fully Configured Routers	168
	Table 90: Accessory Box Parts List	169
	Table 91: Four-Post Rack or Cabinet Mounting Hole Locations	170
Chapter 4	Maintaining, Installing and Replacing Components	217
	Table 92: Field-Replaceable Units	218
	Table 93: Tools and Parts Required to Replace Hardware Components	219

About the Documentation

- Documentation and Release Notes on page xxi
- Using the Examples in This Manual on page xxi
- Documentation Conventions on page xxiii
- Documentation Feedback on page xxv
- Requesting Technical Support on page xxv

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xsl; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

Table 1 on page xxiii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxiv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast <i>(string1 string2 string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	}

GUI Conventions


Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

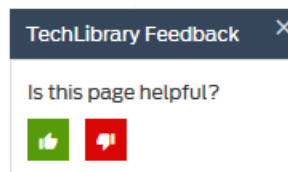

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

CHAPTER 1

Overview

- [MX240 System Overview on page 27](#)
- [MX240 Chassis on page 30](#)
- [MX240 Cooling System on page 39](#)
- [MX240 AC Power System on page 41](#)
- [MX240 DC Power System on page 48](#)
- [MX240 Host Subsystem Components and Descriptions on page 57](#)
- [MX240 Line Card Components and Descriptions on page 93](#)
- [MX-Series Switch Control Board \(SCB\) Overview on page 138](#)

MX240 System Overview

The MX240 router is an Ethernet-optimized edge router that provides both switching and carrier-class Ethernet routing. The MX240 enables a wide range of business and residential applications and services, including high-speed transport and VPN services, next-generation broadband multiplay services, high-speed Internet and data center internetworking.

- [Benefits of the MX240 Router on page 27](#)
- [MX240 Hardware Overview on page 28](#)

Benefits of the MX240 Router

- **System Capacity**—MX240 provides 3 Tbps of system capacity for space-constrained cloud, enterprise, data center, service provider, cable, and mobile service core deployments.
- **Always-on infrastructure base**—MX Series routers ensure network and service availability with a broad set of multilayered physical, logical, and protocol-level resiliency aspects. Junos OS Virtual Chassis technology on MX Series routers supports chassis-level redundancy and enables you to manage two routers as a single element. Multichassis link aggregation group (MC-LAG) implementation supports stateful chassis, card, and port redundancy.
- **Application-Aware Networking**—On MX Series routers you can use deep packet inspection to detect applications, and by using the user-defined policies, you can

determine traffic treatment for each application. This feature enables highly customized and differentiated services at scale.

- **Programmable Chipset**—The chipset implemented in the MX Series routers has a programmable forwarding data structure that allows fast microcode changes in the hardware itself, and a programmable lookup engine that allows inline service processing. the chip's programmable QoS engine supports coarse and fine-grained queuing to address the requirements of core, edge, and aggregation use cases.
- **Junos Continuity and Unified In-Service Software Upgrade (Unified ISSU)**—With the Junos continuity plug-in package, you can perform a smooth upgrade when new hardware is installed in your MX Series router.

Unified in-service software upgrade (unified ISSU) enables software upgrades and changes without disrupting network traffic.

- **Junos Telemetry Interface**—Using the Junos telemetry interface data, you can stream component-level data to monitor, analyze, and enhance the performance of the network. Analytics derived from this streaming telemetry can identify current and trending congestion, resource utilization, traffic volume, and buffer occupancy.
- **Integrated Hardware-Based Timing**—You do not need to use external clocks because MX Series routers support highly scalable and reliable hardware-based timing, including Synchronous Ethernet for frequency, and the Precision Time Protocol (PTP) for frequency and phase synchronization. Synchronous Ethernet and PTP can be combined in a hybrid mode to achieve a high level of frequency (10 ppb) and phase (<1.5 uS) accuracy.

MX240 Hardware Overview

The MX240 router is five rack units (U) tall. Several routers can be stacked in a single floor-to-ceiling rack, for increased port density per unit of floor space.

Fully populated, the MX240 provides a maximum aggregate switch fabric capacity of up to 1.92 Tbps and line-rate throughput for up to 48 10-Gigabit Ethernet ports, or four 100-Gigabit Ethernet and eight 10-Gigabit Ethernet ports, or twelve 40-Gigabit Ethernet ports.

Table 3 on page 28 lists the MX240 router capacity.

Table 3: MX240 Router Capacity

Description	Capacity
System capacity	1.92 Tbps half duplex
Switch fabric capacity per slot	480 Gbps
MPCs and DPCs per chassis	2 or 3

NOTE: Apart from one dedicated slot for the SCB, another multifunctional slot is available for either one DPC, MPC, or SCB.

Table 3: MX240 Router Capacity (continued)

Description	Capacity
Chassis per rack	9

The router provides two dedicated line card slots for Dense Port Concentrators (DPCs), Modular Port Concentrators (MPCs), or Flexible PIC Concentrators (FPCs). DPCs and MPCs each install into a single line-card slot. The FPC installs into both slots. The router also provides one dedicated slot for a Switch Control Board (SCB), and one multifunction slot for either one DPC, MPC, or SCB. Optionally, an FPC can be installed in both the multifunction slot and lowest dedicated line card slot.

An FPC supports up to two PICs. An MPC supports up to two Modular Interface Cards (MICs).

Each DPC includes two or four Packet Forwarding Engines. Each Packet Forwarding Engine enables a throughput of 10 Gbps.

Several types of line cards, are available. For a list of the supported line cards, see the [MX Series Interface Module Reference](#).

Four SCBs are available for the MX240 routers—SCB-MX, the SCBE-MX, SCBE2-MX, and SCBE3-MX.

[Table 4 on page 29](#) compares the fabric bandwidth capacities of SCBs per MX-series router.

Table 4: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric MBandwidth	MX960 Fabric Bandwidth
Enhanced MX Switch Control Board (model SCBE3-MX)	Up to 1.5 Tbps (non-redundant fabric configuration with MPC10E line cards); 1 Tbps (redundant fabric configuration with MPC10E line cards)	Up to 6 Tbps	Up to 18 Tbps	Up to 33 Tbps
Enhanced MX Switch Control Board (SCBE2-MX)	Up to 480 Gbps (non-redundant fabric configuration); 340 Gbps (redundant fabric configuration)	Up to 1.92 Tbps	Up to 5.76 Tbps	Up to 10.56 Tbps
Enhanced MX Switch Control Board (SCBE-MX)	Up to 240 Gbps (non-redundant fabric configuration); 160 Gbps (redundant fabric configuration)	Up to 930 Gbps	Up to 2.79 Tbps	Up to 5.25 Tbps
Switch Control Board (SCB-MX)	Up to 240 Gbps (non-redundant fabric configuration); 120 Gbps (redundant fabric configuration)	Up to 465 Gbps	Up to 1.39 Tbps	Up to 2.6 Tbps

The connections between line cards and SCBs are organized in three groups:

- Switch fabric—Connects the line cards and provides for packet transport between the line cards.
- Control plane—Gigabit Ethernet links between the combined SCBs/Routing Engines and each DPC, MPC, or FPC. All board-to-board information is passed over Ethernet except for low-level status and commands.
- Management signals—Provide low-level status diagnostic support.

Related Documentation

- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
- [SCB-MX Description](#)

MX240 Chassis

- [MX240 Chassis Description on page 30](#)
- [MX240 Router Hardware and CLI Terminology Mapping on page 33](#)
- [MX240 Component Redundancy on page 34](#)
- [MX240 Craft Interface Overview on page 35](#)
- [MX240 Alarm Relay Contacts on the Craft Interface on page 35](#)
- [MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button on page 36](#)
- [MX240 Component LEDs on the Craft Interface on page 36](#)

MX240 Chassis Description

The router chassis is a rigid sheet metal structure that houses all the other router components (see [Figure 1 on page 31](#), [Figure 2 on page 31](#), [Figure 3 on page 32](#), [Figure 4 on page 32](#), and [Figure 5 on page 32](#)). The chassis measures 8.71 in. (22.1 cm) high, 17.45 in. (44.3 cm) wide, and 24.5 in. (62.2 cm) deep (from the front-mounting brackets to the rear of the chassis). The chassis installs in standard 800-mm deep (or larger) enclosed cabinets, 19-in. equipment racks, or telco open-frame racks.

Figure 1: Front View of a Fully Configured MX240 Router

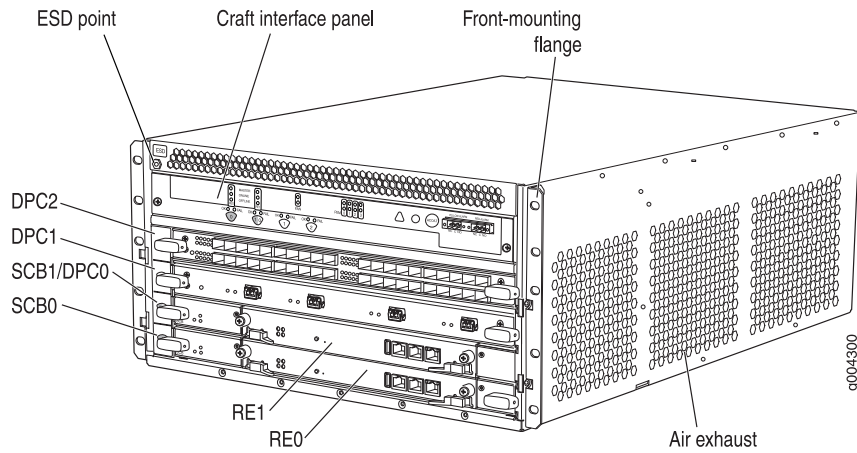


Figure 2: Rear View of a Fully Configured AC-Powered MX240 Router (110 V)

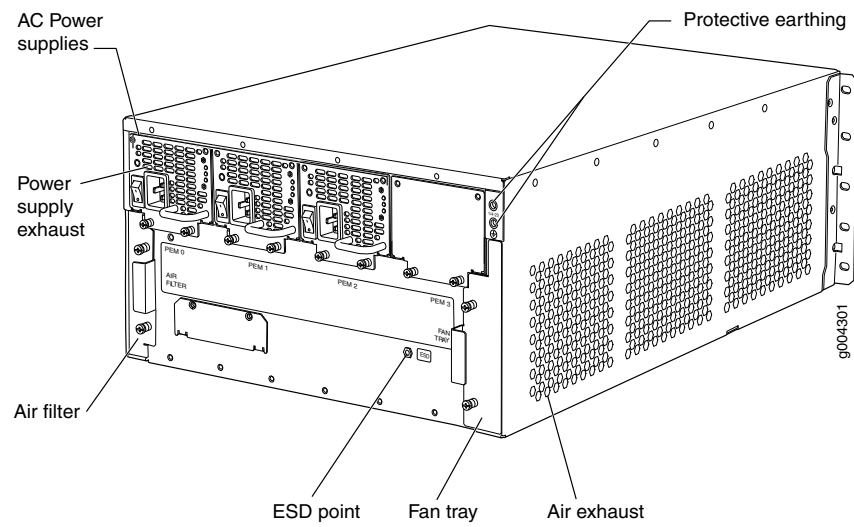


Figure 3: Rear View of a Fully Configured AC-Powered MX240 Router (220 V)

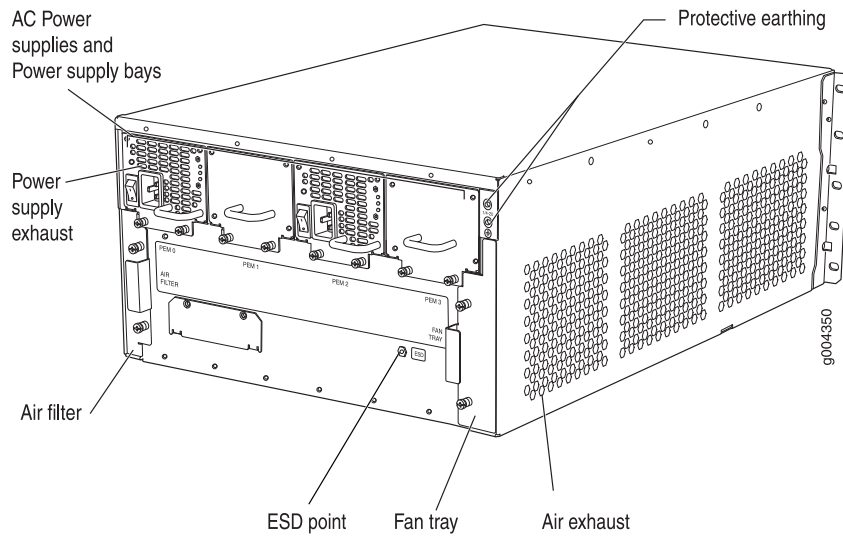


Figure 4: Rear View of a Fully Configured DC-Powered MX240 Router


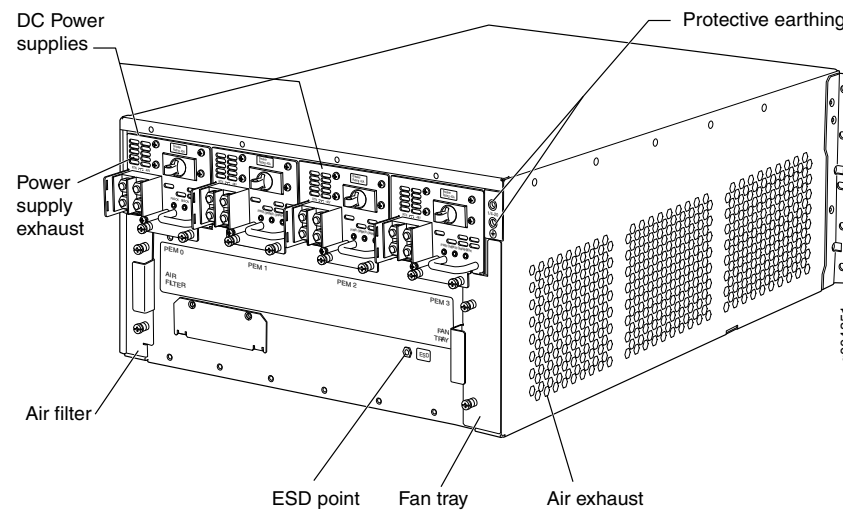


Figure 5: Front View of a MPC Installed Horizontally in the MX240 Router

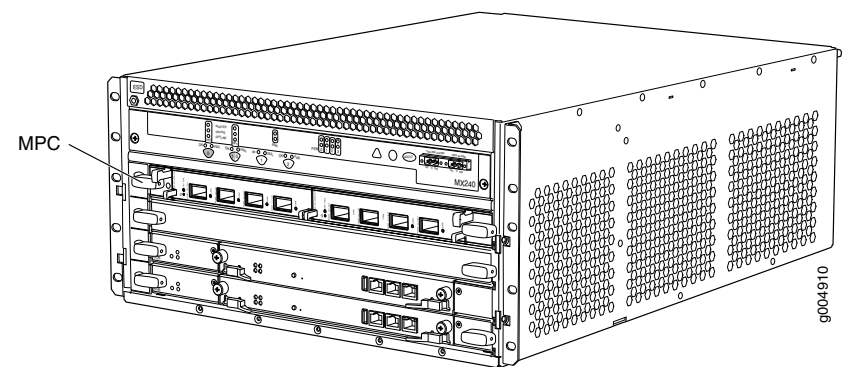

See Also • [MX240 Router Physical Specifications on page 142](#)

MX240 Router Hardware and CLI Terminology Mapping

The MX240 router supports the components in [Table 5 on page 33](#).

Table 5: MX240 Router Hardware Components and CLI Terminology

Component	Hardware Model Number	CLI Name	Description
Chassis	CHAS-BP-MX240	MX240	“MX240 Router Physical Specifications” on page 142 “MX240 Chassis Description” on page 30
Cooling System			
Fan tray	FFANTRAY-MX240	MX240 Fan Tray	“MX240 Cooling System Description” on page 39
	FFANTRAY-MX240-HC	Enhanced Fan Tray	
Filter kit	FLTR-KIT-MX240	N/A	
Host Subsystem			“MX240 Host Subsystem Description” on page 58
Routing Engine	See “Supported Routing Engines by Router” on page 78.		“MX240 Routing Engine Description” on page 59
SCB	MX240-SCB-S	MX SCB	<i>SCB-MX Description</i>
Interface Modules			
DPC	See “DPCs Supported on MX240, MX480, and MX960 Routers” on page 98 in the <i>MX Series Interface Module Reference</i> .		“MX240 Dense Port Concentrator (DPC) Description” on page 93
FPC	MX-FPC2	MX FPC Type 2	“MX240 Flexible PIC Concentrator (FPC) Description” on page 101
	MX-FPC3	MX FPC Type 3	
MIC	See “MICs Supported by MX Series Routers” on page 116 in the <i>MX Series Interface Module Reference</i> .		“MX240 Modular Interface Card (MIC) Description” on page 116
MPC	See “MPCs Supported by MX Series Routers” on page 130 in the <i>MX Series Interface Module Reference</i> .		“MX240 Modular Port Concentrator (MPC) Description” on page 127
Transceiver	See <i>MX Series Interface Module Reference</i>	Xcvr	“Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC” on page 299
Power System			“MX240 Power System Description” on page 41

Table 5: MX240 Router Hardware Components and CLI Terminology (continued)

Component	Hardware Model Number	CLI Name	Description
AC power supply	PWR-MX480-AC	AC Power Entry Module	“MX240 AC Power Supply Description” on page 42
	PWR-MX480-1200-AC	PS 1.2-1.7kW 100-240V AC in	
	PWR-MX480-2520-AC	PS 1.4-2.52kW; 90-264V AC in	
DC power supply	PWR-MX480-DC	DC Power Entry Module	“MX240 DC Power Supply Description” on page 48
	PWR-MX480-1600-DC	DC Power Entry Module	
	PWR-MX480-2400-DC	DC 2.4kW Power Entry Module	
Power supply blank panel	PWR-BLANK-MX960	N/A	“MX240 Power System Description” on page 41

- See Also**
- [MX240 System Overview on page 27](#)
 - [MX240 DPC Port and Interface Numbering on page 95](#)
 - [MX240 MIC Port and Interface Numbering on page 124](#)
 - [MX240 PIC Port and Interface Numbering on page 105](#)
 - [MX Series Router Interface Names](#)

MX240 Component Redundancy

The MX240 chassis provides redundancy and resiliency. The hardware system is fully redundant, including power supplies, Routing Engines, and SCBs.

A fully configured router is designed so that no single point of failure can cause the entire system to fail. Only a fully configured router provides complete redundancy. All other configurations provide partial redundancy. The following major hardware components are redundant:

- **Host subsystem**—The host subsystem consists of a Routing Engine functioning together with an SCB. The router can have one or two host subsystems. If two host subsystems are installed, one functions as the master and the other functions as the backup. If the master host subsystem (or either of its components) fails, the backup can take over as the master. To operate, each host subsystem requires a Routing Engine installed directly into in an SCB.
- In the high-line (220 V) AC power configuration, the MX240 router contains one or two AC power supplies, located horizontally at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). The high-line configuration requires one power supply, with the second power supply providing redundancy. Each AC power supply provides power to


all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.

- In the low-line (110 V) AC power configuration, the MX240 router contains either two AC power supplies (nonredundant), located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right); or four AC power supplies (redundant), located in slots **PEM0** through **PEM3** (left to right). The low-line configuration requires two power supplies, and the third and fourth power supplies provide redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present in a non-redundant system or when four power supplies are present in a redundant system, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.
- Cooling system—The cooling system has redundant components, which are controlled by the host subsystem. If one of the fans fails, the host subsystem increases the speed of the remaining fans to provide sufficient cooling for the router indefinitely.

MX240 Craft Interface Overview

The craft interface allows you to view status and troubleshooting information at a glance and to perform many system control functions. It is hot-insertable and hot-removable. The craft interface is located on the front of the router above the card cage and contains LEDs for the router components, the alarm relay contacts, and alarm cutoff button. See [Figure 6 on page 35](#).

Figure 6: Front Panel of the Craft Interface

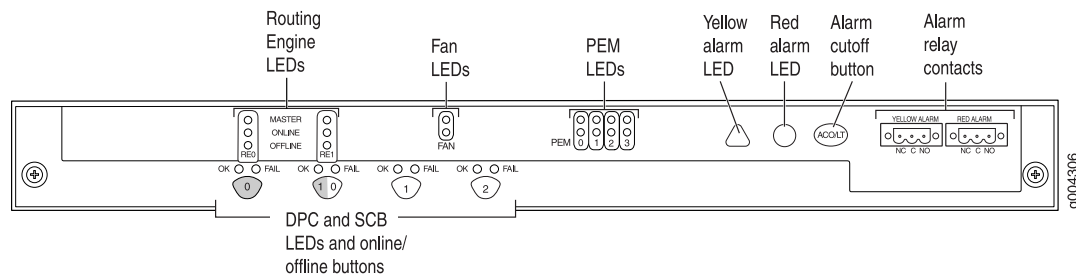


NOTE: At least one SCB must be installed in the router for the craft interface to obtain power.

MX240 Alarm Relay Contacts on the Craft Interface

The craft interface has two alarm relay contacts for connecting the router to external alarm devices (see [Figure 7 on page 36](#)). Whenever a system condition triggers either the

red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

Figure 7: Alarm Relay Contacts

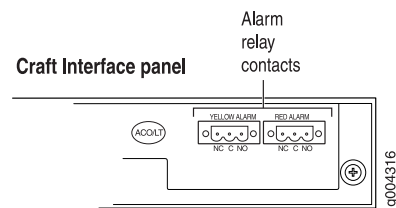

MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button




Two large alarm LEDs are located at the upper right of the craft interface. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously.

A condition that causes an LED to light also activates the corresponding alarm relay contact on the craft interface.

To deactivate red and yellow alarms, press the button labeled **ACO/LT** (for “alarm cutoff/lamp test”), which is located to the right of the alarm LEDs. Deactivating an alarm turns off both LEDs and deactivates the device attached to the corresponding alarm relay contact on the craft interface.

Table 6 on page 36 describes the alarm LEDs and alarm cutoff button in more detail.

Table 6: Alarm LEDs and Alarm Cutoff/Lamp Test Button

Shape	Color	State	Description
	Red	On steadily	Critical alarm LED—Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm LED—Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.
	—	—	Alarm cutoff/lamp test button—Deactivates red and yellow alarms. Causes all LEDs on the craft interface to light (for testing) when pressed and held.

MX240 Component LEDs on the Craft Interface

- [Host Subsystem LEDs on the MX240 Craft Interface on page 37](#)
- [Power Supply LEDs on the MX240 Craft Interface on page 37](#)
- [DPC and MPC LEDs on the MX240 Craft Interface on page 37](#)
- [FPC LEDs on the MX240 Craft Interface on page 38](#)

- [SCB LEDs on the MX240 Craft Interface on page 38](#)
- [Fan LED on the MX240 Craft Interface on page 39](#)

Host Subsystem LEDs on the MX240 Craft Interface

Each host subsystem has three LEDs, located in the middle of the craft interface, that indicate its status. The LEDs labeled **RE0** show the status of the Routing Engine in slot **0** and the SCB in slot **0**. The LEDs labeled **RE1** show the status of the Routing Engine and SCB in slot **1/0**. [Table 7 on page 37](#) describes the functions of the host subsystem LEDs.

Table 7: Host Subsystem LEDs on the Craft Interface

Label	Color	State	Description
MASTER	Green	On steadily	Host is functioning as the master.
ONLINE	Green	On steadily	Host is online and is functioning normally.
OFFLINE	Red	On steadily	Host is installed but the Routing Engine is offline.
	–	Off	Host is not installed.

Power Supply LEDs on the MX240 Craft Interface

Each power supply has two LEDs on the craft interface that indicate its status. The LEDs, labeled **0** through **3**, are located on the upper left of the craft interface next to the **PEM** label. [Table 8 on page 37](#) describes the functions of the power supply LEDs on the craft interface.

Table 8: Power Supply LEDs on the Craft Interface

Label	Color	State	Description
PEM	Green	On steadily	Power supply is functioning normally.
	Red	On steadily	Power supply has failed or power input has failed.

DPC and MPC LEDs on the MX240 Craft Interface

Each DPC or MPC has LEDs on the craft interface that indicate its status. The LEDs, labeled **1/0**, **1**, and **2**, (**1/0** shows status of either SCB1, DPC0, MPC0, or FPC0 depending on which component is installed in the slot), are located along the bottom of the craft interface. See [Table 9 on page 38](#).

Table 9: DPC and MPC LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	Card is functioning normally.
		Blinking	Card is transitioning online or offline.
		–	The slot is not online.
FAIL	Red	On steadily	Card has failed.

FPC LEDs on the MX240 Craft Interface

An FPC takes up two DPC slots when installed in an MX Series router. An FPC LED located along the bottom of the craft interface indicates status. The LED corresponds to the lowest DPC slot number in which the FPC is installed. See [Table 10 on page 38](#).

Table 10: FPC LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	FPC is functioning normally.
		Blinking	FPC is transitioning online or offline.
		–	The slot is not online.
FAIL	Red	On steadily	FPC has failed.

SCB LEDs on the MX240 Craft Interface

Each SCB has two LEDs on the craft interface that indicates its status. The SCB LEDs, labeled **0** and **1/0** (1/0 shows the status of either SCB1 DPC0, or FPC0 depending on which component is installed in the multifunction slot), are located along the bottom of the craft interface. [Table 11 on page 38](#) describes the functions of the SCB LEDs.

Table 11: SCB LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	SCB: Fabric and control board functioning normally.
		Blinking	SCB is transitioning online or offline.
		–	The slot is not online.
FAIL	Red	On steadily	SCB has failed.

Fan LED on the MX240 Craft Interface

The fan LEDs are located on the top left of the craft interface. [Table 12 on page 39](#) describes the functions of the fan LEDs.

Table 12: Fan LEDs on the Craft Interface

Label	Color	State	Description
FAN	Green	On steadily	Fan is functioning normally.
	Red	On steadily	Fan has failed.

MX240 Cooling System

- [MX240 Cooling System Description on page 39](#)
- [MX240 Fan LED on page 40](#)

MX240 Cooling System Description


The cooling system consists of the following components:

- Fan tray
- Air filter

The cooling system components work together to keep all router components within the acceptable temperature range (see [Figure 8 on page 39](#), [Figure 9 on page 40](#), and [Figure 10 on page 40](#)). The router has one fan tray and one air filter that install vertically in the rear of the router. The fan tray contains three fans. The MX Series high-capacity fan trays satisfy cooling requirements for high-density DPCs and MPCs, and must be upgraded for proper cooling.

The air intake to cool the chassis is located on the side of the chassis next to the air filter. Air is pulled through the chassis toward the fan tray, where it is exhausted out the side of the system. The air intake to cool the power supplies is located in the front of the router above the craft interface. The exhaust for the power supplies is located on the rear bulkhead power supplies.

Figure 8: Airflow Through the Chassis

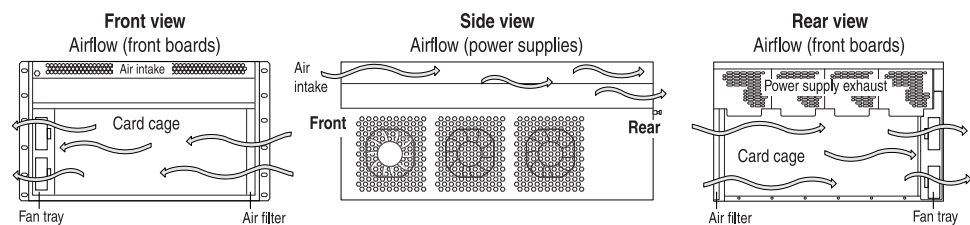

9004307

The host subsystem monitors the temperature of the router components. When the router is operating normally, the fans function at lower than full speed. If a fan fails or the ambient temperature rises above a threshold, the speed of the remaining fans is automatically adjusted to keep the temperature within the acceptable range. If the ambient maximum temperature specification is exceeded and the system cannot be adequately cooled, the Routing Engine shuts down the system by disabling output power from each power supply.

Figure 9: Fan Tray


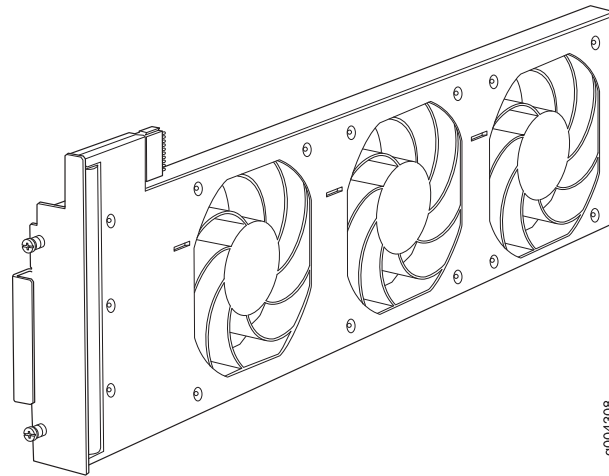


Figure 10: Air Filter

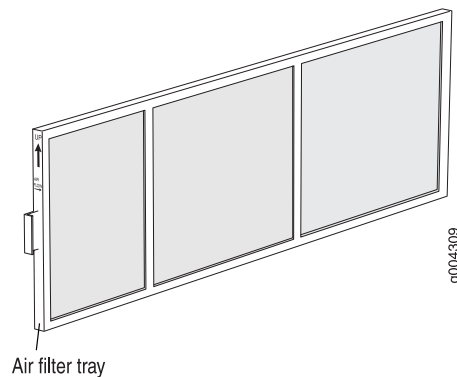

See Also • [Troubleshooting the MX240 Cooling System on page 350](#)

MX240 Fan LED

Each fan has an LED that displays its status. The fan LEDs are located on the top left of the craft interface. For more information, see “[MX240 Component LEDs on the Craft Interface](#)” on page 36.

See Also • [Troubleshooting the MX240 Cooling System on page 350](#)

MX240 AC Power System

- [MX240 Power System Description on page 41](#)
- [MX240 AC Power Supply Description on page 42](#)
- [MX240 AC Power Supply LEDs on page 43](#)
- [AC Power Supply Electrical Specifications for the MX240 Router on page 44](#)
- [AC Power Circuit Breaker Requirements for the MX240 Router on page 45](#)
- [AC Power Cord Specifications for the MX240 Router on page 46](#)
- [Errata with the MX240 Router Documentation on page 48](#)

MX240 Power System Description

The MX240 router uses either AC or DC power supplies. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.



CAUTION: The router cannot be powered from AC and DC power supplies simultaneously.

The MX240 router is configurable with two, three, or four AC power supplies or one or two DC power supplies. The power supplies connect to the midplane, which distributes the different output voltages produced by the power supplies to the router components, depending on their voltage requirements. Each power supply is cooled by its own internal cooling system.

Redundant power supplies are hot-removable and hot-insertable. When you remove a power supply from a router that uses a nonredundant power supply configuration, the router might shut down depending on your configuration.



NOTE: Routers configured with DC power supplies are shipped with a blank panel installed over the power distribution modules. Routers configured with AC power supplies have no blank panel.


- See Also**
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies on page 197](#)
 - [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

- [Troubleshooting the MX240 Power System on page 356](#)

MX240 AC Power Supply Description

Each AC power supply weighs approximately 5.0 lb (2.3 kg) and consists of one AC appliance inlet, one AC input switch, a fan, and LEDs to monitor the status of the power supply. [Figure 11 on page 42](#) shows the power supply. For existing power supplies, each inlet requires a dedicated AC power feed and a dedicated 15 A (250 VAC) circuit breaker.


Figure 11: AC Power Supply

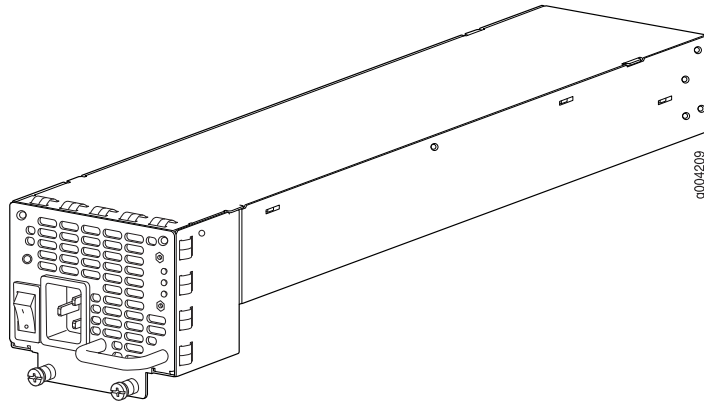

For high-capacity power supplies, each inlet requires a dedicated AC power feed and a dedicated 16.0 A @ 100 VAC or 11.0 A @ 200 VAC circuit breaker, or as required by local code.

The maximum inrush current for a high-capacity AC power supply is 49A at 264VAC. [Figure 12 on page 42](#) shows the high-capacity power supply.

Figure 12: High-Capacity AC Power Supply

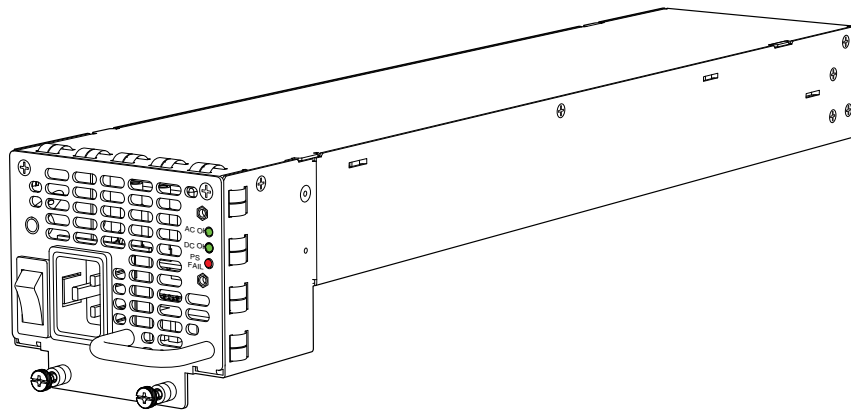

WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the

grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

AC Power Supply Configurations

The MX240 high-capacity and normal-capacity power supplies each support either of the following AC power configurations:

- In the low-line (110 V) AC power configuration, the MX240 router contains either two AC power supplies (nonredundant), located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right); or four AC power supplies (redundant), located in slots **PEM0** through **PEM3** (left to right). The low-line configuration requires two power supplies, and the third and fourth power supplies provide redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.
- In the high-line (220 V) AC power configuration, the MX240 router contains one or two AC power supplies, located horizontally at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). The high-line configuration requires one power supply, with the second power supply providing redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.

- See Also**
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies on page 197](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

MX240 AC Power Supply LEDs

Each AC power supply faceplate contains three LEDs that indicate the status of the power supply (see [Table 13 on page 44](#)). The power supply status is also reflected in two LEDs on the craft interface (see “[MX240 Component LEDs on the Craft Interface](#)” on [page 36](#)). In addition, a power supply failure triggers the red alarm LED on the craft interface.

Table 13: AC Power Supply LEDs

Label	Color	State	Description
AC OK	Yellow	Off	AC power input voltage is below 78 VAC.
	Green	On	AC power input voltage is within 78–264 VAC.
DC OK	Green	Off	DC power outputs generated by the power supply are not within the normal operating ranges.
		On	DC power outputs generated by the power supply are within the normal operating ranges.
PS FAIL	Red	Off	Power supply is functioning normally.
		On	Power supply is not functioning normally and its output voltage is out of regulation limits. Check AC OK and DC OK LEDs for more information.

- See Also**
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies on page 197](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

AC Power Supply Electrical Specifications for the MX240 Router

Table 14 on page 44 lists the AC power supply electrical specifications; Table 15 on page 45 lists the AC power system specifications.

Table 14: AC Power Supply Electrical Specifications

Item	Specification
Normal-Capacity Power Supplies	
Maximum output power	1027 W (low line) 1590 W (high line)
AC input voltage	Operating range: 100–240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	11.0 A @ 200 VAC or 14.5 A @ 110 VAC maximum
Efficiency	85% (low line and high line)
<i>NOTE:</i> This value is at full load and nominal voltage.	
High-Capacity Power Supplies	

Table 14: AC Power Supply Electrical Specifications (continued)

Item	Specification
Maximum output power	1167 W (low line) 2050 W (high line)
AC input voltage	Operating range: 100–240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	16 A @ 110 VAC maximum 15.1 A @ 200 VAC maximum
Efficiency	84% (low line) NOTE: This value is at full load and nominal voltage. 89% (high line)

Table 15: AC Power System Specifications

Item	Normal-Capacity–Low Line	Normal-Capacity–High Line	High-Capacity–Low Line	High-Capacity–High Line
Redundancy	2+2	1+1	2+2	1+1
Output power (maximum) per power supply	1027 W	1590 W	1167 W	2050 W
Output power (maximum) per system	2054 W	1590 W	2334 W	2050 W

- See Also**
- [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [Replacing an MX240 AC Power Supply Cord on page 314](#)
 - [MX240 AC Power Electrical Safety Guidelines and Warnings](#)
 - [AC Power Circuit Breaker Requirements for the MX240 Router on page 45](#)

AC Power Circuit Breaker Requirements for the MX240 Router

We recommend that you use a dedicated customer site circuit breaker rated for 15 A (250 VAC) minimum for each AC power feed, or as required by local code. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure.

- See Also**
- [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [MX240 AC Power Electrical Safety Guidelines and Warnings](#)

AC Power Cord Specifications for the MX240 Router

Each AC power supply has a single AC appliance inlet located on the power supply that requires a dedicated AC power feed. Most sites distribute power through a main conduit that leads to frame-mounted power distribution panels, one of which can be located at the top of the rack that houses the router. An AC power cord connects each power supply to the power distribution panel.


You can order detachable AC power cords, each approximately 8 ft (2.5 m) long that supply AC power to the router. The C19 appliance coupler at the female end of the cord inserts into the AC appliance inlet coupler, type C20 (right angle) as described by International Electrotechnical Commission (IEC) standard 60320. The plug at the male end of the power cord fits into the power source receptacle that is standard for your geographical location.

[Table 16 on page 46](#) provides specifications and [Figure 13 on page 47](#) depicts the plug on the AC power cord provided for each country or region.

Table 16: AC Power Cord Specifications

Country	Model Number	Electrical Specification	Plug Type
Australia	CBL-M-PWR-RA-AU	240 VAC, 50 Hz AC	SAA/3/15
China	CBL-M-PWR-RA-CH	220 VAC, 50 Hz AC	CH2-16P
Europe (except Denmark, Italy, Switzerland, and United Kingdom)	CBL-M-PWR-RA-EU	220 or 230 VAC, 50 Hz AC	CEE 7/7
Italy	CBL-M-PWR-RA-IT	230 VAC, 50 Hz AC	CEI 23-16/VII
Japan	CBL-PWR-RA-JP15	125 VAC, 50 or 60 Hz AC	JIS 8303
	CBL-M-PWR-RA-JP	220 VAC, 50 or 60 Hz AC	NEMA L6-20P
North America	CBL-PWR-RA-US15	125 VAC, 60 Hz AC	NEMA 5-15P
	CBL-PWR-RA-TWLK-US15	125 VAC, 60 Hz AC	NEMA L5-15P
	CBL-M-PWR-RA-US	250 VAC, 60 Hz AC	NEMA 6-20
	CBL-M-PWR-RA-TWLK-US	250 VAC, 60 Hz AC	NEMA L6-20P
United Kingdom	CBL-M-PWR-RA-UK	240 VAC, 50 Hz AC	BS89/13

Figure 13: AC Plug Types

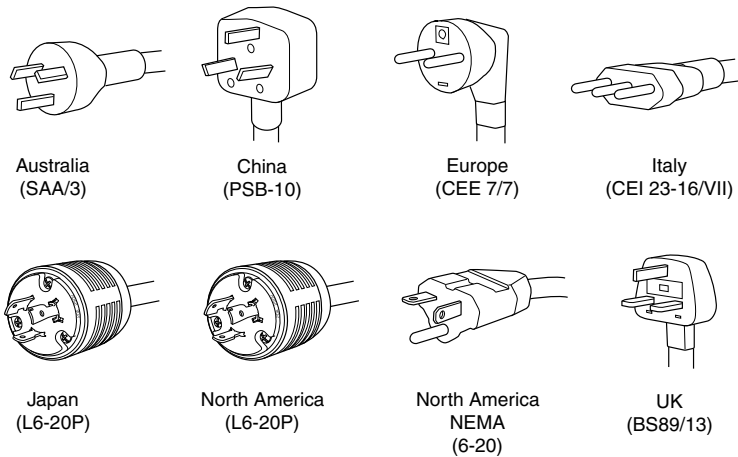

WARNING: The AC power cord for the router is intended for use with the router only and not for any other use.



WARNING:

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

Translation from Japanese: The attached power cable is only for this product. Do not use the cable for another product.



NOTE: In North America, AC power cords must not exceed 4.5 m (approximately 14.75 ft) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). You can order AC power cords that are in compliance.



WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.



CAUTION: Power cords and cables must not block access to device components or drape where people could trip on them.

- See Also**
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies on page 197](#)
 - [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [Replacing an MX240 AC Power Supply Cord on page 314](#)
 - [MX240 AC Power Electrical Safety Guidelines and Warnings](#)

Errata with the MX240 Router Documentation

This topic lists the outstanding issues with the documentation:

- In the low-line (110 V) AC power configuration (nonredundant), two AC power supplies should be located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right).

- See Also**
- [Outstanding Issues with the MX240 Router on page 57](#)

MX240 DC Power System

- [MX240 DC Power Supply Description on page 48](#)
- [MX240 DC Power Supply LEDs on page 50](#)
- [DC Power Supply Electrical Specifications for the MX240 Router on page 51](#)
- [DC Power Circuit Breaker Requirements for the MX240 Router on page 52](#)
- [MX240 Chassis Grounding Specifications on page 53](#)
- [DC Power Source Cabling for the MX240 Router on page 55](#)
- [DC Power Cable Specifications for the MX240 Router on page 56](#)
- [Outstanding Issues with the MX240 Router on page 57](#)

MX240 DC Power Supply Description

Each DC power supply weighs approximately 3.8 lb (1.7 kg) and consists of one DC input (–48 VDC and return), one 40 A (–48 VDC) circuit breaker, a fan, and LEDs to monitor the status of the power supply. Each DC power supply requires a dedicated customer site circuit breaker. For normal capacity power supplies, we recommend a dedicated circuit breaker rated for 40 A (–48 VDC) minimum, or as required by local code.

For high capacity power supplies, we recommend that you provision 60 A or 70 A per feed, depending on the selected DIP switch setting.

[Figure 14 on page 49](#) shows the normal capacity DC power supply.

Figure 15 on page 49 shows the high-capacity DC power supply.

Figure 14: DC Power Supply


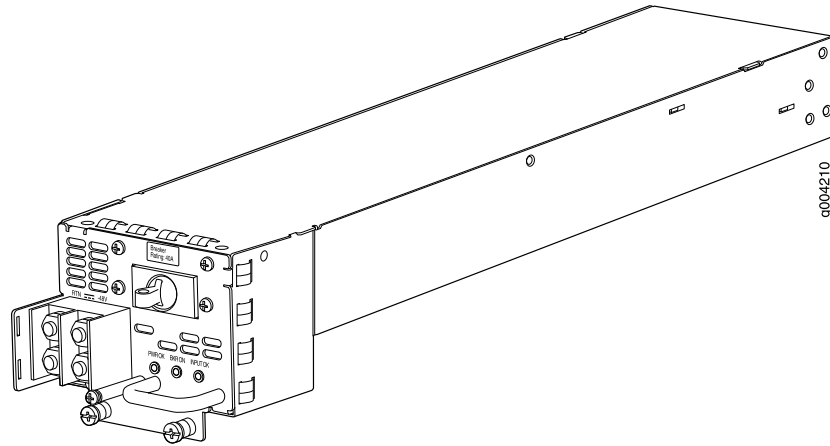


Figure 15: High-Capacity DC Power Supply

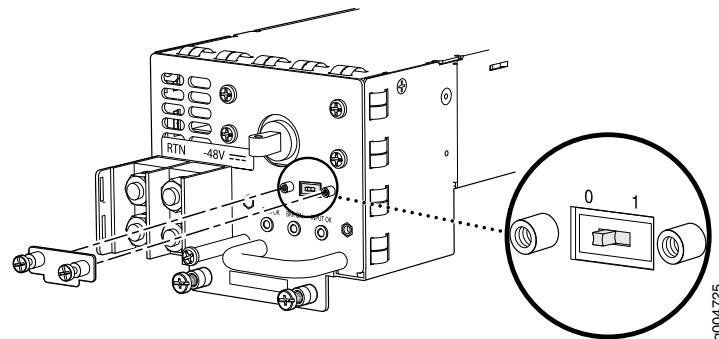

DC Power Supply Configurations

In the DC power configuration, the router contains either one or two DC power supplies located at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). You can upgrade your DC power system from one to two power supplies. A single DC power supply provides power to all components. A second DC power supply provides redundancy. If a DC power supply in a redundant configuration fails, the redundant power supply takes over without interruption.

High-capacity DC power supplies have a DIP switch that selects the power output.



NOTE: Move the input switch to 0 for 60 A input and position 1 for 70 A input.



NOTE: Do not set the input mode switch if the power supply is installed in the chassis. If the power supply is already installed, you must remove it before setting the input mode switch.

Table 17 on page 50 shows the components that are powered by each DC power supply slot. The specifications apply to normal capacity and high-capacity power supplies.

Table 17: Power Supply Redundancy and Power Distribution

DC Power Supply Slot	Power Supply Provides Power to the Following Components
PEM0	Fan tray, DPC slots 0 and 1, and SCB slots 0 and 1
PEM2	Fan tray, DPC slots 0 and 1, and SCB slots 0 and 1

- See Also**
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

MX240 DC Power Supply LEDs

Each DC power supply faceplate contains three LEDs that indicate the status of the power supply (see [Table 18 on page 50](#)). The power supply status is also reflected in two LEDs on the craft interface (see “[MX240 Component LEDs on the Craft Interface](#)” on [page 36](#)). In addition, a power supply failure triggers the red alarm LED on the craft interface.



NOTE: An SCB must be present for the PWR OK LED to go on.

Table 18: DC Power Supply LEDs

Label	Color	State	Description
PWR OK	Green	Off	Power supply is not functioning normally. Check the INPUT OK LED for more information.
		On	Power supply is functioning normally.
	Yellow	On	The main output voltage is out of range (lower limit: 37.5 V to 39.5 V; upper limit: 72.5 V to 76 V).
BRKR ON	Green	Off	DC power supply circuit breaker is turned off.
		On	DC power input is present and the DC power supply circuit breaker is turned on.
INPUT OK	Green	Off	DC input to the PEM is not present.
		On	DC input is present and is connected in correct polarity.
	Yellow	On	DC input is present, but not in valid operating range or connected in reverse polarity.

- See Also**
- [MX240 Component LEDs on the Craft Interface on page 36](#)
 - [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

DC Power Supply Electrical Specifications for the MX240 Router

Table 19 on page 51 lists the DC power supply electrical specifications.
Table 20 on page 52 lists the DC power system specifications.

Table 19: DC Power Supply Electrical Specifications

Item	Specification
Normal-Capacity Power Supplies	
Maximum output power	1600 W
DC input current rating	33.3 A @ -48 V nominal operating voltage
Maximum Input Current	40 A
DC input voltage	Operating range: -40.5 VDC to -72 VDC Nominal: -48 VDC
Efficiency	~98%
<i>NOTE:</i> This value is at full load and nominal voltage.	
Internal Circuit Breaker	40 A
High-Capacity Power Supplies	
Maximum Input Current	60 A (DIP=0) 70 A (DIP=1)
Maximum output power	2240 W 2440 W
DC input current rating	50 A @ -48 VDC normal operating voltage 54.2 A @ -48 VDC normal operating voltage
DC input voltage	Operating Range: -40.5 VDC to -72 VDC Nominal: -48 VDC
Efficiency	~98%
<i>NOTE:</i> This value is at full load and nominal voltage.	

Table 20: DC Power System Specifications

Item	Normal-Capacity	High-Capacity	
Redundancy	1+1	1+1	
Output power (maximum) per supply	1600 W	60 A (DIP=0)	70 A (DIP=1)
		2240 W	2440 W
Output power (maximum) per system	1600 W	2240 W	2440 W

- See Also**
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [Installing an MX240 DC Normal Capacity Power Supply on page 317](#)
 - [Disconnecting an MX240 DC Power Supply Cable on page 320](#)
 - [Calculating Power Requirements for MX240 Routers on page 156](#)

DC Power Circuit Breaker Requirements for the MX240 Router

Each DC power supply has a single DC input (–48 VDC and return) that requires a dedicated circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 40 A (–48 VDC) minimum, or as required by local code. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure.

For high-capacity power supplies, we recommend that you use a dedicated customer site circuit breaker rated for 60 A or 70A, or as required by local code, depending on the input switch setting.

If you plan to operate a DC-powered router at less than the maximum configuration and do not provision a 40 A (–48 VDC) circuit breaker, we recommend that you provision a dedicated customer site circuit breaker for each DC power supply rated for at least 125% of the continuous current that the system draws at –48 VDC.

- See Also**
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [Installing an MX240 DC Normal Capacity Power Supply on page 317](#)
 - [DC Power Disconnection Warning for M Series, MX Series, and T Series Routers](#)
 - [DC Power Source Cabling for the MX240 Router on page 55](#)
 - [DC Power Cable Specifications for the MX240 Router on page 56](#)

MX240 Chassis Grounding Specifications

- MX240 Chassis Grounding Points Specifications on page 53
- MX240 Router Grounding Cable Lug Specifications on page 54
- MX240 Router Grounding Cable Specifications on page 54

MX240 Chassis Grounding Points Specifications

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, the router must be adequately grounded before power is connected. To ground AC-powered and DC-powered routers, you must connect a grounding cable to earth ground and then attach it to the chassis grounding points using the two screws provided.

Two threaded inserts (PEM nuts) are provided on the upper rear of the chassis for connecting the router to earth ground. The grounding points fit UNC 1/4–20 screws (American). The grounding points are spaced at 0.625-in. (15.86-mm) centers.

See [Figure 16 on page 53](#) for connecting AC power to the router and [Figure 17 on page 54](#) for connecting DC power to the router.



NOTE: Additional grounding is provided to an AC-powered router when you plug its power supplies into grounded AC power receptacles.

Figure 16: Connecting AC Power to the Router


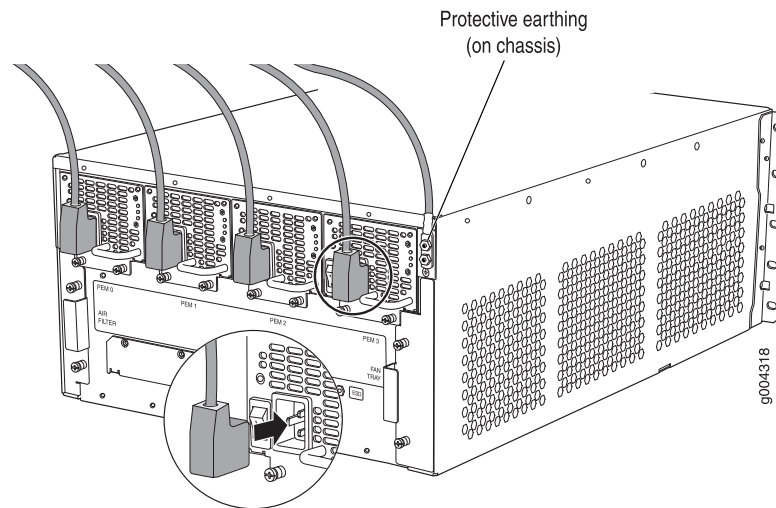



Figure 17: Connecting DC Power to the Router

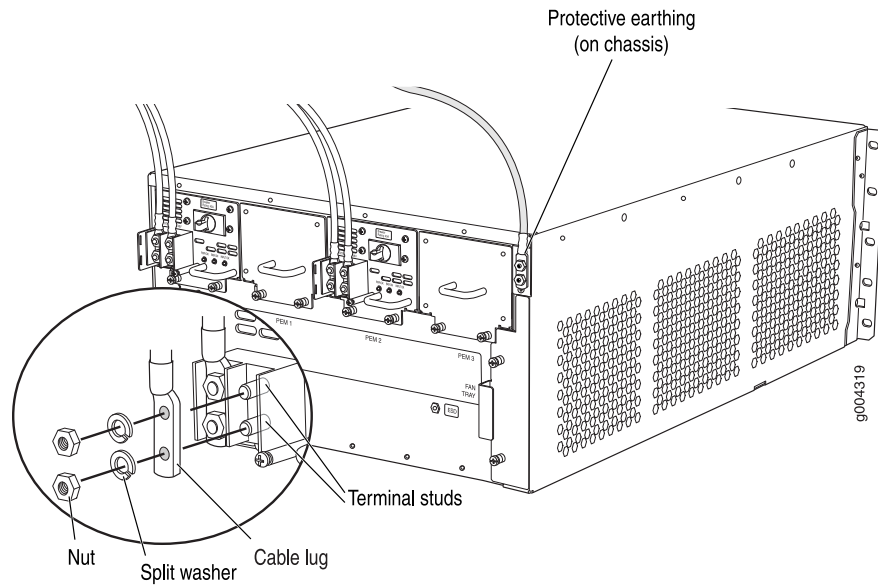

MX240 Router Grounding Cable Lug Specifications

The accessory box shipped with the router includes one cable lug that attaches to the grounding cable (see Figure 18 on page 54) and two UNC 1/4–20 screws used to secure the grounding cable to the grounding points.

Figure 18: Grounding Cable Lug

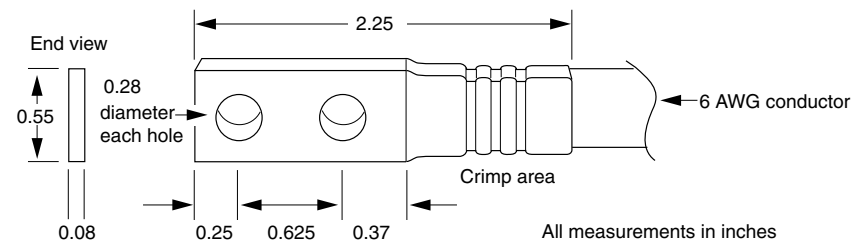

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



NOTE: The same cable lug is used for the DC power cables.

MX240 Router Grounding Cable Specifications


You must provide one grounding cable that meets the following specifications: 6-AWG (13.3 mm²), minimum 60°C wire, or as required by the local code.

- See Also**
- [Tools and Parts Required for MX240 Router Grounding and Power Connections on page 195](#)
 - [Grounding the MX240 Router on page 196](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

DC Power Source Cabling for the MX240 Router

Figure 19 on page 55 shows a typical DC source cabling arrangement.

Figure 19: Typical DC Source Cabling to the Router

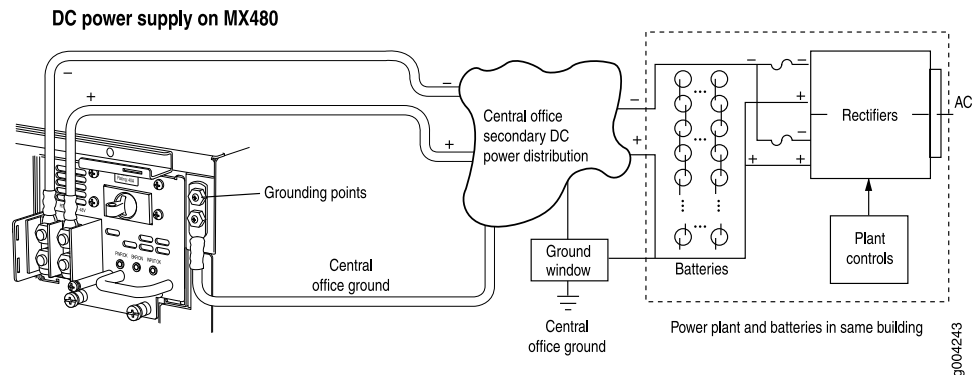

The DC power supply in **PEMO** must be powered by a dedicated power feed derived from feed **A**, and the DC power supply in **PEM2** must be powered by a dedicated power feed derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



WARNING: For field-wiring connections, use copper conductors only.



CAUTION: Power cords and cables must not block access to device components or drape where people could trip on them.


- See Also**
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [Replacing an MX240 DC Power Supply Cable on page 320](#)

- [General Electrical Safety Guidelines and Electrical Codes for MX240 Routers](#)
- [Site Electrical Wiring Guidelines for MX Series Routers on page 407](#)

DC Power Cable Specifications for the MX240 Router

DC Power Cable Lug Specifications—The accessory box shipped with the router includes the cable lugs that attach to the terminal studs of each power supply (see [Figure 20 on page 56](#)).

Figure 20: DC Power Cable Lug

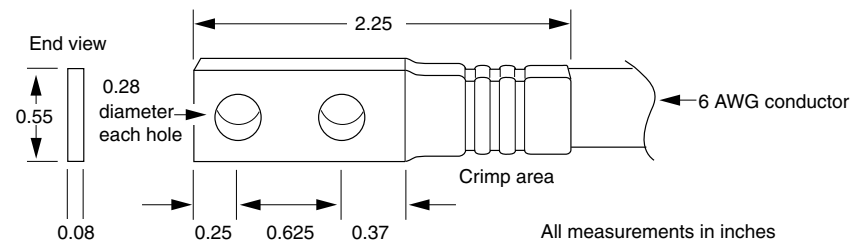

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



NOTE: The same cable lug is used for the grounding cable.

DC Power Cable Specifications—You must supply four DC power cables that meet the following specifications: 6-AWG (13.3 mm²), minimum 60° C wire, or as required by the local code.

- See Also**
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
 - [Installing an MX240 DC Normal Capacity Power Supply on page 317](#)
 - [Connecting an MX240 DC Power Supply Cable on page 204](#)
 - [Calculating Power Requirements for MX240 Routers on page 156](#)
 - [DC Power Source Cabling for the MX240 Router on page 55](#)
 - [Site Electrical Wiring Guidelines for MX Series Routers on page 407](#)

Outstanding Issues with the MX240 Router

This topic lists outstanding hardware issues with the MX240 router. For information about software issues, see the Junos OS Release Notes.

- On the MX240 DC high capacity power supplies, the input mode switch tells the system what capacity feed is connected (60A or 70A). This is used for power inventory management. When the input mode switch is set to '0' (zero): expect 60A feeds, with a voltage range of -39V to -72VDC. When the input mode switch is set to '1' (one), expect either a 70A feed or a 60A feed with minimum voltage of 42V and up. The default setting of the input mode is 1 (e.g. 60A with voltages above 42VDC, or 70A).

Known bug: In Junos OS Releases 10.0R3, 10.1R2, and 10.2R1, the MX240 DC high capacity power supply input mode switch status is not properly reflected in the power inventory management, generating alarms incorrectly. This does not have any effect on the operation of the supply. [PR532230]

Important notes:

- All supplies should have the same feed setting.
- Correct usage of the feed setting is required for all supplies in order to get the desired power inventory management.

The XFP cages and optics on the MX240 router are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place. [PR/98055]

- Do not mix AC and DC power supplies on an MX240 router. Mixing of AC supplies and DC supplies may damage your chassis. [PR/233340]

See Also • [Errata with the MX240 Router Documentation on page 48](#)

MX240 Host Subsystem Components and Descriptions

- [MX240 Host Subsystem Description on page 58](#)
- [MX240 Host Subsystem LEDs on page 58](#)
- [MX240 Midplane Description on page 58](#)
- [MX240 Routing Engine Description on page 59](#)
- [RE-S-1800 Routing Engine Description on page 63](#)
- [RE-S-X6-64G Routing Engine Description on page 65](#)
- [RE-S-X6-128G Routing Engine Description on page 67](#)
- [MX240 Routing Engine LEDs on page 69](#)
- [RE-S-1800 Routing Engine LEDs on page 70](#)
- [RE-S-X6-64G Routing Engine LEDs on page 70](#)
- [Routing Engine Specifications on page 71](#)
- [Supported Routing Engines by Router on page 78](#)

MX240 Host Subsystem Description

The host subsystem provides the routing and system management functions of the router. You can install one or two host subsystems on the router. Each host subsystem functions as a unit; the Routing Engine must be installed directly into the Switch Control Board.



NOTE: We recommend that you install two host subsystems for redundant protection. If you install only one host subsystem, we recommend that you install it in slot 0.

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located in the middle of the craft interface.

- See Also**
- [MX240 Component LEDs on the Craft Interface on page 36](#)
 - [Maintaining the MX240 Host Subsystem on page 227](#)
 - [Taking an MX240 Host Subsystem Offline](#)

MX240 Host Subsystem LEDs

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located in the middle of the craft interface. For more information, see “[MX240 Component LEDs on the Craft Interface](#)” on page 36.


MX240 Midplane Description

The midplane is located toward the rear of the chassis and forms the rear of the card cage (see [Figure 21 on page 59](#)). The line cards and SCBs install into the midplane from the front of the chassis, and the power supplies install into the midplane from the rear of the chassis. The cooling system components also connect to the midplane.

The midplane performs the following major functions:

- **Data path**—Data packets are transferred across the midplane between the line cards through the fabric ASICs on the SCBs.
- **Power distribution**—The router power supplies connect to the midplane, which distributes power to all the router components.
- **Signal path**—The midplane provides the signal path to the line cards, SCBs, Routing Engines, and other system components for monitoring and control of the system.

Figure 21: Midplane

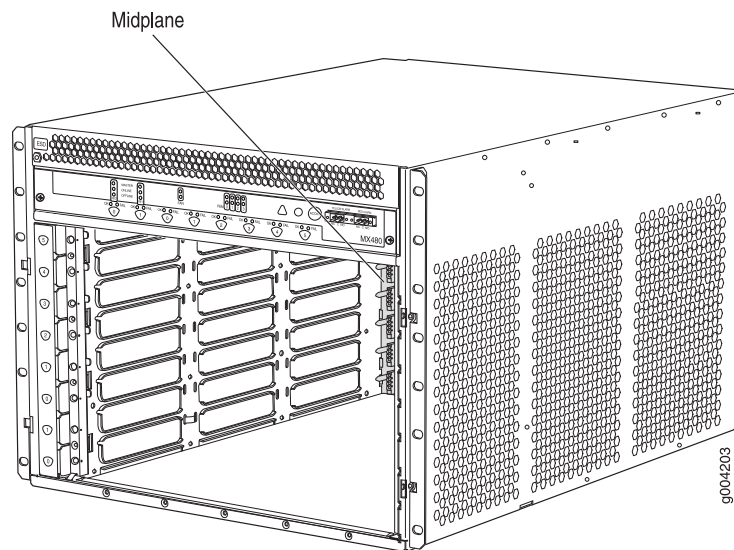

- See Also**
- [MX240 System Overview on page 27](#)
 - [MX240 Chassis Description on page 30](#)
 - [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 SCB-MX Description](#)
 - [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
 - [MX240 Power System Description on page 41](#)

MX240 Routing Engine Description

The Routing Engine is an Intel-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engines install into the front of the chassis in horizontal slots in the SCBs labeled 0 and 1/0. Each Routing Engine must be installed directly into an SCB. A USB port on the Routing Engine accepts a USB memory card that allows you to load Junos OS.

If two Routing Engines are installed, one functions as the master and the other acts as the backup. If the master Routing Engine fails or is removed and the backup is configured appropriately, the backup takes over as the master. The Backup Routing Engine is hot-insertable and hot-removable.

The MX240 router supports the RE-S-1300-2048, EE-S-2000-4096, RE-S-1800, RE-S-X6-64G, and RE-S-X6-64G-LT Routing Engines. See [Figure 22 on page 60](#), [Figure 23 on page 60](#), and [Figure 24 on page 60](#).



NOTE: If two Routing Engines are installed, they must both be the same hardware model.

The RE-S-X6-64G-LT Routing Engine is equipped with limited encryption support only.

Figure 22: RE-S-2000 Routing Engine

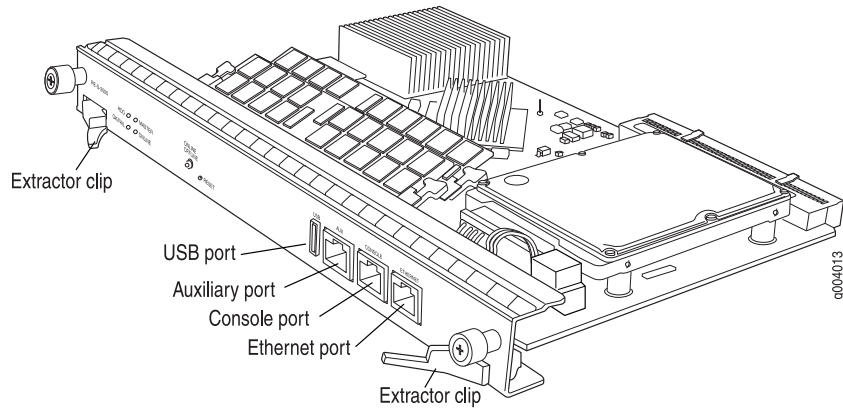


Figure 23: RE-S-1800



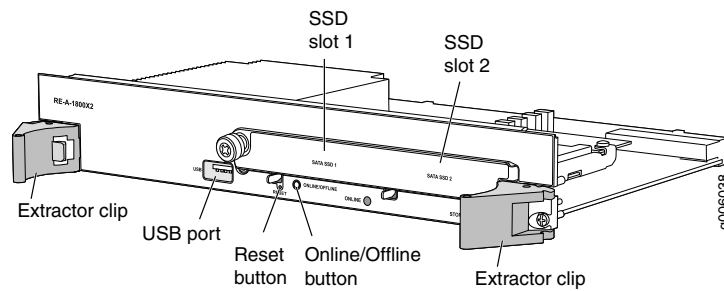


Figure 24: RE-S-X6-64G Routing Engine Front View

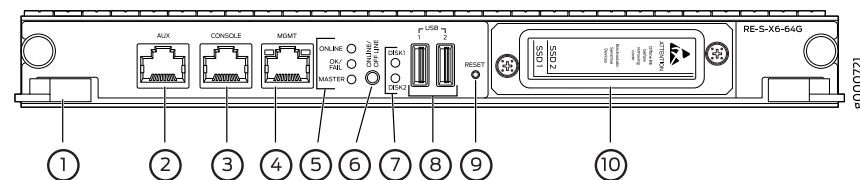

1—Auxiliary port (AUX)	6—LEDs—ONLINE, OK/FAIL, and MASTER
2—Console port (Con)	7—RESET Button
3—Management port (MGMT)	8—SSD LEDs—DISK1 and DISK2
4—ONLINE/OFFLINE Button	9—SSD card slot cover
5—Ports—USB1 and USB2	

Figure 25: RE-S-X6-64G-LT Routing Engine Front View

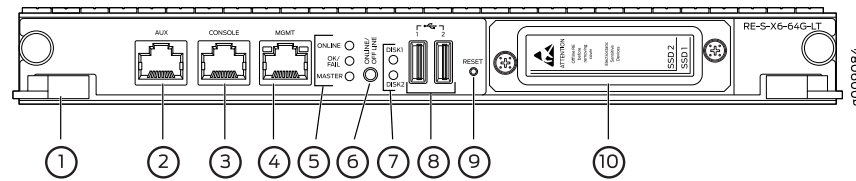

1—Extractor clips	6— ONLINE/OFFLINE Button
2—Auxiliary port (AUX)	7—SSD LEDs— DISK1 and DISK2
3—Console port (Con)	8—Ports— USB1 and USB2
4—Management port (MGMT)	9— RESET Button
5—LEDs— ONLINE , OK/FAIL , and MASTER	10—SSD card slot cover

RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Components

In MX240 routers with dual Routing Engines, both the Routing Engines must be RE-S-X6-64G Routing Engines.

Each RE-S-X6-64G Routing Engine (shown in [Figure 24 on page 60](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between Routing Engine and Switch Control Board.
- Two 50 GB slim Solid State Drives—SSD1 (primary) and SSD2 (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- **RESET** Button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** Button—Makes the Routing Engine online or offline when pressed.
- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—“[MX240 Routing Engine LEDs](#)” on [page 69](#) describes the functions of these LEDs.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

Routing Engine Interface Ports

Three ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The ports with the indicated labels function as follows:

- **AUX**—Connects the Routing Engine to a laptop, modem, or other auxiliary device through a serial cable with an RJ-45 connector.
- **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
- **ETHERNET or MGMT**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection) for out-of-band management. The port uses an autosensing RJ-45 connector to support 10/100/1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: The LED on the left indicates speed—green for 1000-Mbps, yellow for 100-Mbps and when the LED is dark, it indicates 10-Mbps speed. The LED on the right indicates activity—flashing green when packets are passing through the port.

RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Interface Ports

Three ports, located on the left side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The ports with the indicated labels function as follows:

- **AUX**—Connects the Routing Engine to a laptop, modem, or other auxiliary device through a serial cable with an RJ-45 connector.
- **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
- **MGMT**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection) for out-of-band management. The port uses an autosensing RJ-45 connector to support 10/100/1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: The LED on the left indicates speed—green for 1000-Mbps, yellow for 100-Mbps and when the LED is dark, it indicates 10-Mbps speed. The LED on the right indicates activity—flashing green when packets are passing through the port.

Routing Engine Boot Sequence

The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the hard disk, then the LAN. The disk from which the

router boots is called the *primary boot device*, and the other disk is the *alternate boot device*.



NOTE: If the router boots from an alternate boot device, a yellow alarm lights the LED on the router's craft interface.


Booting in a RE-S-X6-64G and in a RE-S-X6-64G-LT Routing Engine follows this sequence—the USB device, SSD1, SSD2, and LAN. SSD1 is the primary boot device. Boot sequence is tried twice for SSD1 and SSD2.

- See Also**
- [Removing an MX240 Routing Engine on page 230](#)
 - [Installing an MX240 Routing Engine on page 232](#)
 - [MX240 Routing Engine Serial Number Label on page 371](#)

RE-S-1800 Routing Engine Description

Figure 26 on page 63 shows RE-S-1800 routing engine.

Figure 26: RE-S-1800 Front View

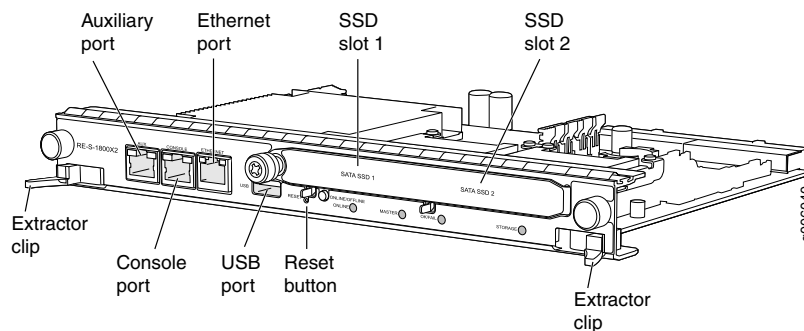

- [RE-S-1800 Routing Engine Components on page 63](#)
- [RE-S-1800 Routing Engine LEDs on page 64](#)
- [RE-S-1800 Routing Engine Boot Sequence on page 64](#)

RE-S-1800 Routing Engine Components

Each Routing Engine consists of the following components:

- CPU—Runs Junos OS to maintain the router's routing tables and routing protocols..
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- USB port—Provides a removable media interface through which you can install Junos OS manually. Junos OS supports USB version 1.0.

- CompactFlash card—Provides primary storage for software images, configuration files, and microcode. The CompactFlash card is fixed and is inaccessible from outside the router.
- Solid-state Drive (SSD)—Provides secondary storage for log files, memory dumps, and rebooting the system if the CompactFlash card fails.
- Interface ports—The **AUX**, **CONSOLE**, and **ETHERNET** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- EEPROM—Stores the serial number of the Routing Engine.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Takes the Routing Engine online or offline when pressed.
- Extractor clips—Used for inserting and extracting the Routing Engine.
- Captive screws—Secure the Routing Engine in place.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show chassis routing-engine` command.

RE-S-1800 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **STORAGE**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 21 on page 64](#) describes the functions of the Routing Engine LEDs.

Table 21: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Master.
STORAGE	Green	Blinking	Indicates activity on the SSD or Compact Flash.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
OK/FAIL	Red	On steadily	Routing Engine has failed.

RE-S-1800 Routing Engine Boot Sequence

The router is shipped with Junos OS preinstalled on the Routing Engine. There are three copies of software:

- One copy on the CompactFlash card in the Routing Engine.

- One copy on the hard disk in the Routing Engine.
- One copy on a USB flash drive that can be inserted into the slot on the Routing Engine faceplate.


The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the Solid State Disk (SSD), then the LAN. Normally, the router boots from the copy of the software on the CompactFlash card.

- See Also**
- [RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports](#)
 - [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port](#)
 - [Replacing an MX960 Routing Engine](#)
 - [Supported Routing Engines by Router on page 78](#)

RE-S-X6-64G Routing Engine Description

Figure 27 on page 65 shows the Routing Engine.

Figure 27: RE-S-X6-64G Routing Engine Front View

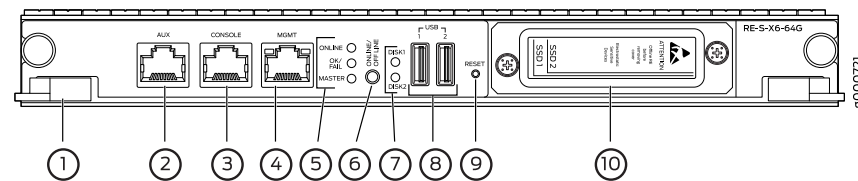

1—Extractor clips	6—ONLINE/OFFLINE button
2—Auxiliary port (AUX)	7—SSD LEDs—DISK1 and DISK2
3—Console port (CONSOLE)	8—Ports—USB1 and USB2
4—Management port (MGMT)	9—RESET button
5—LEDs—ONLINE, OK/FAIL, and MASTER	10—SSD card slot cover

- [RE-S-X6-64G Routing Engine Components on page 65](#)
- [RE-S-X6-64G Routing Engine Boot Sequence on page 66](#)

RE-S-X6-64G Routing Engine Components

In routers with dual Routing Engines, both Routing Engines must be RE-S-X6-64G Routing Engines.

Each RE-S-X6-64G Routing Engine (shown in [Figure 27 on page 65](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.

- One 10-Gigabit Ethernet interface between the Routing Engine and Switch Control Board.
- Two 50-GB slim solid-state drives—**SSD1** (primary) and **SSD2** (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



NOTE: The **ONLINE/OFFLINE** button must be pressed for a minimum of 4 seconds for the power off or power on to occur.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—“[RE-S-X6-64G Routing Engine LEDs](#)” on [page 70](#) describes the functions of these LEDs.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

[RE-S-X6-64G Routing Engine Boot Sequence](#)


Booting in a RE-S-X6-64G Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The boot sequence is tried twice for SSD1 and SSD2.

- See Also**
- [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 242](#)
 - [Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem on page 248](#)

RE-S-X6-128G Routing Engine Description

Figure 28 on page 67 shows the Routing Engine.

Figure 28: RE-S-X6-128G Routing Engine Front View

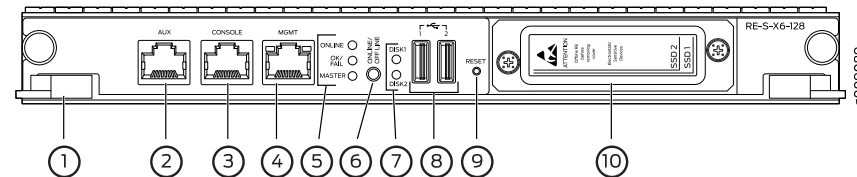

1—Extractor clips	6— ONLINE/OFFLINE button
2—Auxiliary port (AUX)	7—SSD LEDs— DISK1 and DISK2
3—Console port (CONSOLE)	8—Ports— USB1 and USB2
4—Management port (MGMT)	9— RESET button
5—LEDs— ONLINE , OK/FAIL , and MASTER	10—SSD card slot cover

- [RE-S-X6-128G Routing Engine Components on page 67](#)
- [RE-S-X6-128G Routing Engine LEDs on page 68](#)
- [RE-S-X6-128G Routing Engine Boot Sequence on page 69](#)

RE-S-X6-128G Routing Engine Components

In routers with dual Routing Engines, both Routing Engines must be RE-S-X6-128G Routing Engines.

Each RE-S-X6-128G Routing Engine (shown in [Figure 28 on page 67](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between the Routing Engine and Switch Control Board.
- Two 50-GB slim solid-state drives—**SSD1** (primary) and **SSD2** (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting

to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.

- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



NOTE: The **ONLINE/OFFLINE** button must be pressed for a minimum of 4 seconds for the power off or power on to occur.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—Table 22 on page 68 describes the functions of these LEDs.




NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

RE-S-X6-128G Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. The LEDs—labeled **MASTER**, **DISK1**, **DISK2**, **ONLINE**, and **OK/FAIL**—are located on the faceplate of the Routing Engine. Table 22 on page 68 describes the functions of the Routing Engine LEDs.

Figure 29: RE-S-X6-128G Routing Engine LEDs

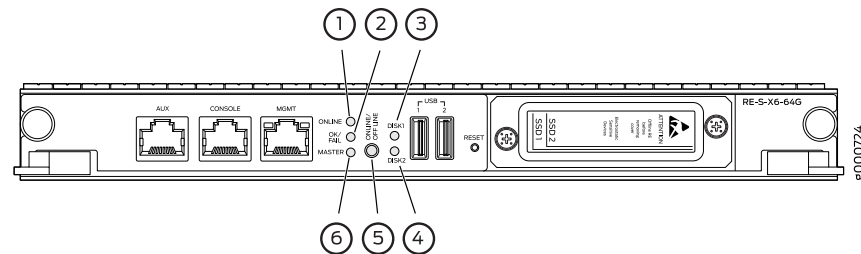

1—ONLINE LED	4—DISK2 LED
2—OK/FAIL LED	5—ONLINE/OFFLINE button
3—DISK1 LED	6—MASTER LED

Table 22: RE-S-X6-128G Routing Engine LEDs

Label	Color	State	Description
ONLINE	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
-	-	Off	Routing Engine is not online or not functioning normally.

Table 22: RE-S-X6-128G Routing Engine LEDs (continued)

Label	Color	State	Description
DISK1	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
DISK2	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
OK/FAIL	Green	On steadily	Routing Engine is powering up.
	Yellow	On steadily	Routing Engine is not powering up, which indicates failure.
MASTER	Blue	On steadily	This Routing Engine is the Master Routing Engine.

RE-S-X6-128G Routing Engine Boot Sequence

Booting in a RE-S-X6-128G Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The boot sequence is tried twice for SSD1 and SSD2.

- See Also**
- [Supported Routing Engines by Router on page 78](#)
 - [Routing Engine Specifications on page 71](#)

MX240 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL**, are located directly on the faceplate of the Routing Engine. [Table 23 on page 69](#) describes the functions of the Routing Engine LEDs.

Table 23: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the master.
HDD	Green	Blinking	Indicates activity on the hard disk drive.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
FAIL	Red	On steadily	Routing Engine has failed.

- See Also**
- [Replacing an MX240 Routing Engine on page 230](#)

RE-S-1800 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **STORAGE**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 24 on page 70](#) describes the functions of the Routing Engine LEDs.

Table 24: Routing Engine LEDs


Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Master.
STORAGE	Green	Blinking	Indicates activity on the SSD or Compact Flash.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
OK/FAIL	Red	On steadily	Routing Engine has failed.

- See Also**
- [MX240 Routing Engine Description on page 59](#)
 - [MX480 Routing Engine Description](#)
 - [MX960 Routing Engine Description](#)

RE-S-X6-64G Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. The LEDs—labeled **MASTER**, **DISK1**, **DISK2**, **ONLINE**, and **OK/FAIL**—are located on the faceplate of the Routing Engine. [Table 25 on page 71](#) describes the functions of the Routing Engine LEDs.

Figure 30: RE-S-X6-64G Routing Engine LEDs

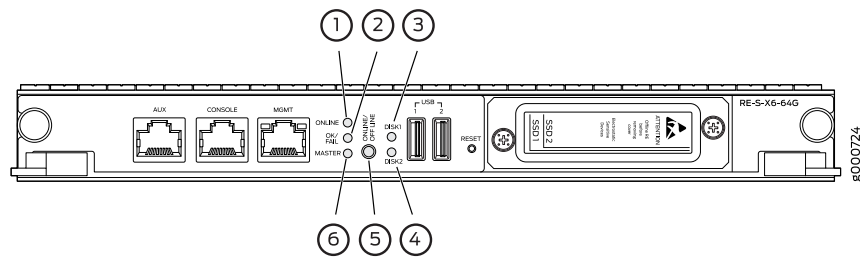

1—ONLINE LED	4—DISK2 LED
2—OK/FAIL LED	5—ONLINE/OFFLINE button
3—DISK1 LED	6—MASTER LED

Table 25: RE-S-X6-64G Routing Engine LEDs

Label	Color	State	Description
ONLINE	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
	-	Off	Routing Engine is not online or not functioning normally.
DISK1	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
DISK2	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
OK/FAIL	Green	On steadily	Routing Engine is powering up.
	Yellow	On steadily	Routing Engine is not powering up, which indicates failure.
MASTER	Blue	On steadily	This Routing Engine is the Master Routing Engine.

- See Also**
- [MX240 Routing Engine Description on page 59](#)
 - [MX960 Routing Engine Description](#)

Routing Engine Specifications

Table 26 on page 72 lists the current specifications for Routing Engines supported on M Series, MX Series, and T Series routers. Table 27 on page 75 lists the hardware specifications of the Routing Engines with VMHost support. Table 28 on page 76 lists the specifications for end-of-life Routing Engines.



NOTE: For a list of the routing engines that are supported on the M Series, MX Series, T Series, and PTX routers, see “Supported Routing Engines by Router” on page 78.



NOTE: For information about PTX Series Routing Engine specifications, see *Routing Engines Supported on PTX Series Routers*.

Table 26: Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-400-768	400-MHz Celeron	768 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	9.0	–
RE-A-1000-2048	1.0-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-A-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-S-1300-2048	1.3-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE
RE-S-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE

Table 26: Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-C1800	1.8-GHz	8 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	T1600 router in a routing matrix: 9.6R2 Standalone T640 or T1600 router:11.2	CB-T for a standalone router. CB-LCC for a router in a routing matrix.
	1.8 Ghz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2 64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	CB-T for a standalone router. CB-LCC for a router in a routing matrix.
RE-C2600	2.6-GHz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	TX Matrix Plus router: 9.6R2	–
RE-A-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	–
RE-S-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE, SCBE2, SCBE3

Table 26: Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-S-1800x4	1800-MHz	8GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE, SCBE2, SCBE3
RE-S-MX104	1.8-GHz	4 GB	Gigabit Ethernet	–	8 GB NAND Flash	13.2	–
RE-B-1800x1-4G	1.73-GHz	4 GB	Gigabit Ethernet	64 GB SSD	4 GB CompactFlash card	12.1R2, 11.4R4, and 12.2R1	–
RE-MX2000-1800x4	1.8- GHz	16 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	12.3R2	SCB, SCBE
RE-S-1800X4-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	SCB, SCBE, SCBE2, SCBE3
REMX2K-1800-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	–
RE-S-X6-64G, RE-S-X6-64G-LT	2 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F4, 16.1	SCBE2, SCBE3
REMX2K-X8-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	15.1F5-S1, 16.1R2, and 16.2R1	–
REMX2K-X8-64G-LT	2.3 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	17.2R1	–
REMX2008-X8-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	–	15.1F7	–
RE-S-1600x8	1.6 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	–	17.3R1	–
REMX2008-X8-64G-LT	2.1 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	17.2R1	-

Table 26: Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
REMX2008-X8-128G	2.3 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.2R1	-
RE-S-X6-128G	2.1 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.1R1	SCBE2, SCBE3
REMX2K-X8-128G	2.1 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.1R1	-
JNP10003-RE1	1.6-GHz	64 GB	Gigabit Ethernet	Two 100 GB SSDs	-	17.3R1	-
JNP10003-RE1-LT	1.6-GHz	64 GB	Gigabit Ethernet	Two 100 GB SSDs	-	18.1R1	-
JNP10K-RE0	2.5 Ghz	32 GB	Gigabit Ethernet	Two 50 GB SSDs	-	17.2R1	-
JNP10K-RE1	2.3 Ghz	64 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.2R1	-
JNP10K-RE1-LT	2.3 Ghz	64 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.3R1	-
JNP10K-RE1-128	2.3 Ghz	128 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.3R1	-



NOTE: Use shielded CAT5e cable for connecting the AUX, CONSOLE, and MGMT ports in RE-S-X6-64G, REMX2K-X8-64G, and REMX2008-X8-64G Routing Engines.

Table 27 on page 75 lists the hardware specifications of the Routing Engines with VMHost support.

Table 27: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines

Model Number	Supported on Device	Specifications
RE-S-X6-64G	MX240, MX480, and MX960	<ul style="list-style-type: none"> 6-core Haswell CPU Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 64-GB solid-state drives (SSDs)

Table 27: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines (continued)

Model Number	Supported on Device	Specifications
REMX2K-X8-64G	MX2020 and MX2010	<ul style="list-style-type: none"> 8-core Haswell CPU Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 64-GB SSDs
RE-PTX-X8-64G	PTX5000	<ul style="list-style-type: none"> 8-core Haswell CPU Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 64-GB SSDs New Control Board CB2-PTX
RCBPTX	PTX3000	<ul style="list-style-type: none"> Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 64-GB SSDs Multi-core Haswell CPU <p>RCB combines the functionality of a Routing Engine, Control Board, and Centralized Clock Generator (CCG)</p>
RE-S-1600x8	MX10003	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 64-GB DDR4 RAM 100-GB SATA SSD
RE-S-1600x8	MX204	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 32-GB DDR4 RAM 100-GB SATA SSD
RE-QFX10002-60C	QFX10002-60C	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 32-GB DDR4 RAM Two 50-GB SATA SSD
RE-PTX10002-60C	PTX10002-60C	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 32-GB DDR4 RAM Two 50-GB SATA SSD
RE-ACX-5448	ACX5448	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 32-GB two DIMM DRAM Two 100-GB SATA SSD
RE-X10	MX10008	<ul style="list-style-type: none"> High-performance 1.6-GHz Intel 8 Core X86 CPU 64-GB DDR4 RAM 100-GB SATA SSD

Table 28: End-of-Life Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-333-256	333-MHz Pentium II	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063

Table 28: End-of-Life Routing Engine Specifications (continued)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063
RE-600-512	600-MHz Pentium III	512 MB	Fast Ethernet	30 GB hard disk	256 MB CompactFlash card	5.4	PSN-2004-07-019
RE-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	5.3	PSN-2008-02-018
RE-850-1536	850-MHz Pentium III	1536 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	7.2	PSN-2011-04-226
RE-M40	200-MHz Pentium	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.2	FA-HW-0101-001
RE-M40-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	10 GB hard disk	80 MB CompactFlash card	4.2	PSN-2003-01-063
RE-M40-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	30 GB hard disk	128 MB CompactFlash card	5.4	PSN-2004-11-020
RE-1600-2048	1.6-GHz Pentium M	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	6.2	PSN-2008-02-019



NOTE: The memory in [Table 26 on page 72](#) indicates the amount of total memory. To determine the amount of available memory, issue the `show chassis routing-engine` CLI command.

On routers that accept two Routing Engines, you cannot mix Routing Engine types except for a brief period (one minute or so) during an upgrade or downgrade to two Routing Engines of the same type.

See Also • [Supported Routing Engines by Router on page 78](#)

Supported Routing Engines by Router

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

- [M7i Routing Engines on page 78](#)
- [M10i Routing Engines on page 79](#)
- [M40e Routing Engines on page 79](#)
- [M120 Routing Engines on page 80](#)
- [M320 Routing Engines on page 80](#)
- [MX5, MX10, MX40, and MX80 Routing Engine on page 81](#)
- [MX104 Routing Engines on page 81](#)
- [MX240 Routing Engines on page 81](#)
- [MX480 Routing Engines on page 82](#)
- [MX960 Routing Engines on page 83](#)
- [MX2008 Routing Engines on page 84](#)
- [MX2010 Routing Engines on page 85](#)
- [MX2020 Supported Routing Engines on page 85](#)
- [MX10003 Routing Engines on page 86](#)
- [MX10008 Routing Engines on page 86](#)
- [PTX1000 Routing Engines on page 87](#)
- [PTX3000 Routing Engines on page 87](#)
- [PTX5000 Routing Engines on page 87](#)
- [PTX10008 and PTX10016 Routing Engines on page 88](#)
- [T320 Routing Engines on page 89](#)
- [T640 Routing Engines on page 89](#)
- [T1600 Routing Engines on page 90](#)
- [T4000 Routing Engines on page 91](#)
- [TX Matrix Routing Engines on page 91](#)
- [TX Matrix Plus Routing Engines on page 92](#)
- [TX Matrix Plus \(with 3D SIBs\) Routing Engines on page 92](#)

M7i Routing Engines

Table 29 on page 79 lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

Table 29: M7i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M10i Routing Engines

Table 30 on page 79 lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

Table 30: M10i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1 fxp2
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1 fxp2
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M40e Routing Engines

Table 31 on page 79 lists the Routing Engines supported by the M40e router.

Table 31: M40e Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

M120 Routing Engines

Table 32 on page 80 lists the Routing Engines supported by the M120 router.

Table 32: M120 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

M320 Routing Engines

Table 33 on page 80 lists the Routing Engines supported by the M320 router.

Table 33: M320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0

Table 33: M320 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X4-8G	RE-A-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 12.2 	10.4	fxp0	em0 em1

MX5, MX10, MX40, and MX80 Routing Engine

Table 34 on page 81 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

Table 34: MX5, MX10, MX40, and MX80 Routing Engine

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	Routing Engine RE-MX80	12.3	-	fxp0	em0 em1

NOTE: em1 is used to communicate with the MS-MIC when it is inserted.

MX104 Routing Engines

Table 35 on page 81 lists the Routing Engines supported by MX104 routers.

Table 35: MX104 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	Routing Engine	13.2	-	fxp0	fxp1 fxp2

MX240 Routing Engines

Table 36 on page 82 lists the Routing Engines supported by MX240 routers.

Table 36: MX240 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	9.0	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	9.0	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	–	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	–	18.1R1	fxp0	ixlv0, igb0 em0

MX480 Routing Engines

Table 37 on page 83 lists the Routing Engines supported by MX480 routers.

Table 37: MX480 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.4	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.4	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	–	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	–	18.1R1	fxp0	ixlv0, igb0 em0

MX960 Routing Engines

Table 38 on page 84 lists the Routing Engines supported by MX960 routers.

Table 38: MX960 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.2	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.2	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G (For MX960-VC)	RE-S-2X00x6	–	17.2R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	–	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	–	18.1R1	fxp0	ixlv0, igb0 em0

MX2008 Routing Engines

Table 39 on page 85 lists the Routing Engines supported by MX2008 routers.

Table 39: MX2008 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1
REMX2008-X8-64G-LT	REMX2008-X8-64G-LT	17.2R1	fxp0	ixlv0 ixlv1
REMX2008-X8-128G	RE-MX2008-X8-128G	18.2R1	fxp0	ixlv0 ixlv1

MX2010 Routing Engines

Table 40 on page 85 lists the Routing Engines supported by MX2010 routers.

Table 40: MX2010 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> • 15.1F5-S1 • 16.1R2 • 16.2R1 	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1

MX2020 Supported Routing Engines

Table 41 on page 86 lists the Routing Engines supported by MX2020 routers.

Table 41: MX2020 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> • 15.1F5-S1 • 16.1R2 • 16.2R1 	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1 em0

MX10003 Routing Engines

Table 42 on page 86 lists the Routing Engines supported by MX10003 routers.

Table 42: MX10003 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-1600x8	17.3R1	fxp0	em3 em4
JNP10003-RE1-LT	RE-S-1600x8	18.1R1	fxp0	em3 em4

MX10008 Routing Engines

Table 43 on page 87 lists the Routing Engines supported on the MX10008 router.

Table 43: MX10008 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1	RE X10	18.2R1	em0	bme0 bme1

PTX1000 Routing Engines

Table 44 on page 87 lists the Routing Engine supported on the PTX1000.



NOTE: The PTX1000 supports 64-bit Junos OS only.

Table 44: PTX1000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> 16.1X65-D30 17.2R1 	em0	bme0 em1

PTX3000 Routing Engines

Table 45 on page 87 lists the Routing Engines supported on the PTX3000.



NOTE: The PTX3000 supports 64-bit Junos OS only.

Table 45: PTX3000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4 17.1R1 This Routing Engine does not support Junos OS Release 16.2.	em0	ixlv0 ixlv1

PTX5000 Routing Engines

Table 46 on page 88 lists the Routing Engines supported on the PTX5000.



NOTE:

- PTX5000 supports 64-bit Junos OS only.
- The PTX5000 router supports two midplanes. The midplane identified as **Midplane-8S** in the CLI output is supported in Junos OS releases, 12.1X48, 12.3, and 13.2. The enhanced midplane, identified as **Midplane-8SeP** is supported from Junos OS release 14.1 onwards.

The RE-DUO-2600 routing engine with Junos OS 13.2 or earlier is not supported on the PTX5000BASE2 midplane.

Table 46: PTX5000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48	em0	ixgbe0
		12.3		ixgbe1
		13.2		
NOTE: The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.				
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4	em0	ixlv0
		16.1R1		ixlv1
				em1
RE-PTX-X8-128G	RE-PTX-2X00x8-128G	18.1R1	em0	ixlv0
				ixlv1
				em1

PTX10008 and PTX10016 Routing Engines

Table 47 on page 88 lists the Routing Engines supported on the PTX10008 and PTX10016 routers.

Table 47: PTX10008 and PTX10016 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE0	RE-PTX-2X00x4	17.2R1	em0, em1	bme0
				bme1

Table 47: PTX10008 and PTX10016 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1 (on PTX10008)	RE X10	18.2R1	em0	bme0 bme1

T320 Routing Engines

Table 48 on page 89 lists the Routing Engines supported by the T320 router.

Table 48: T320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

The T320 router supports the CB-T control board.

T640 Routing Engines

Table 49 on page 89 lists the Routing Engines supported by the T640 router.

Table 49: T640 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

Table 49: T640 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.2	64-bit Junos OS on a standalone T640 router: 11.3	em0	bcm0 em1
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.4R2	64-bit Junos OS on a standalone T640 router: 11.4R2	em0	bcm0 em1
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		

The T640 standalone router supports CB-T control board and CB-LCC in a T640 routing matrix.

T1600 Routing Engines

Table 50 on page 90 lists the Routing Engines supported by the T1600 router.



NOTE: (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 50: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	8.5	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	8.5	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0

Table 50: T1600 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	32-bit Junos OS on a T1600 router in a routing matrix: 9.6 NOTE: Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix. 32-bit Junos OS on a standalone T1600 router: 11.1	64-bit Junos OS on a T1600 router in a routing matrix: 9.6 64-bit Junos OS on a standalone T1600 router: 11.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0 em1

T4000 Routing Engines

Table 51 on page 91 lists the Routing Engines supported by the T4000 router.



NOTE: The T4000 router supports 64-bit Junos OS only.

Table 51: T4000 Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1 T4000 router in a routing matrix: 13.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2 T4000 router in a routing matrix: 13.1	em0	bcm0 em1

The T4000 router supports the CB-LCC control board.

TX Matrix Routing Engines

Table 52 on page 92 lists the Routing Engines supported by the TX Matrix router.

Table 52: TX Matrix Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

The TXP router supports two control boards, CB-TX and CB-LCC. The CB-LCC is required for both RE-DUO-C1800-8G and RE-DUO-C1800-16G Routing Engines.

TX Matrix Plus Routing Engines

Table 53 on page 92 lists the Routing Engines supported by the TX Matrix Plus router.

Table 53: TX Matrix Plus Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

The TX Matrix Plus router supports the CB-TXP control board.

TX Matrix Plus (with 3D SIBs) Routing Engines

Table 54 on page 93 lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

Table 54: Routing Engines on TX Matrix Plus with 3D SIBs

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

- See Also**
- [Understanding Internal Ethernet Interfaces](#)
 - [Understanding Management Ethernet Interfaces](#)

MX240 Line Card Components and Descriptions

- [Interface Modules—DPCs on page 93](#)
- [Interface Modules—FPCs and PICs on page 101](#)
- [Interface Modules—MPCs and MICs on page 108](#)

Interface Modules—DPCs

- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
- [MX240 DPC Port and Interface Numbering on page 95](#)
- [MX240 Dense Port Concentrator \(DPC\) LEDs on page 98](#)
- [DPCs Supported on MX240, MX480, and MX960 Routers on page 98](#)

MX240 Dense Port Concentrator (DPC) Description

A Dense Port Concentrator (DPC) is optimized for Ethernet density and supports up to 40 Gigabit Ethernet or four 10-Gigabit Ethernet ports (see [Figure 31 on page 94](#)). Other combinations of Gigabit Ethernet and 10-Gigabit ports are available in various DPC models. For more information about these models, see the [MX Series Interface Module Reference](#).

The DPC assembly combines packet forwarding and Ethernet interfaces on a single board, with either two or four 10-Gbps Packet Forwarding Engines. Each Packet Forwarding Engine consists of one I-chip for Layer 3 processing and one Layer 2 network processor. The DPCs interface with the power supplies and Switch Control Boards (SCBs).

The router has two dedicated line card slots for DPCs, MPCs, or FPCs. DPCs install horizontally in the front of the router (see [Figure 31 on page 94](#)). One multifunction slot numbered 1/0 supports either one DPC or one SCB. The DPC slots are numbered 1/0, 1, and 2, bottom to top. A DPC can be installed in any slot on the router that supports DPCs.

You can install any combination of DPC types in the router.

DPCs are hot-removable and hot-insertable. When you install a DPC in an operating router, the Routing Engine downloads the DPC software, the DPC runs its diagnostics,

and the Packet Forwarding Engines housed on the DPC are enabled. Forwarding on other DPCs continues uninterrupted during this process.

If a slot is not occupied by a DPC or an SCB, a blank panel must be installed to shield the empty slot and to allow cooling air to circulate properly through the router.

Figure 31 on page 94 shows typical DPCs supported on the MX240 router. For more information about DPCs, see the *MX Series Interface Module Reference*.

Figure 31: Typical DPCs Supported on the MX240 Router


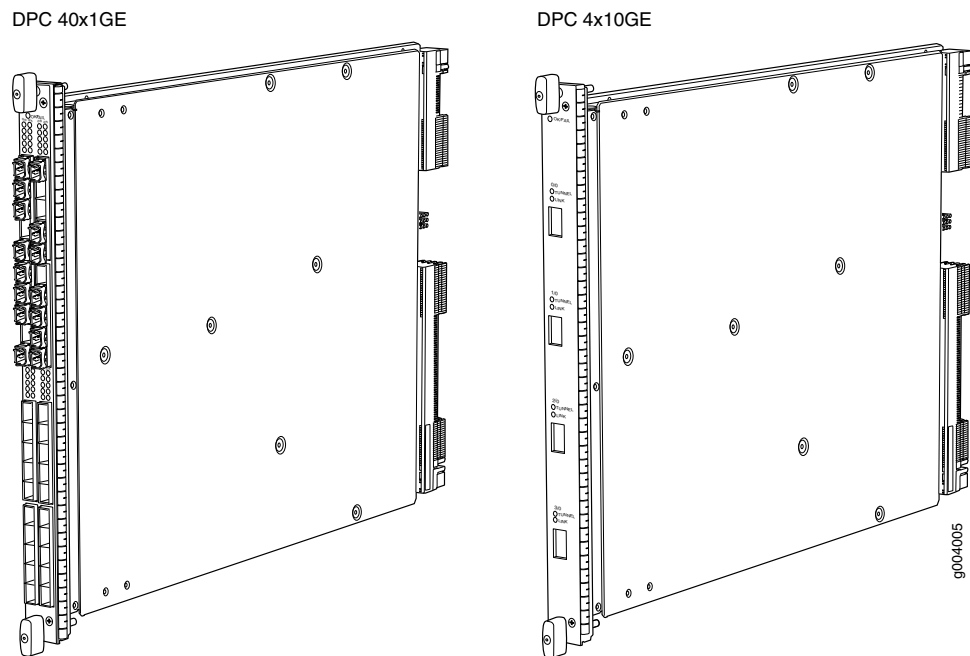


Figure 32: DPC Installed Horizontally in the MX240 Router

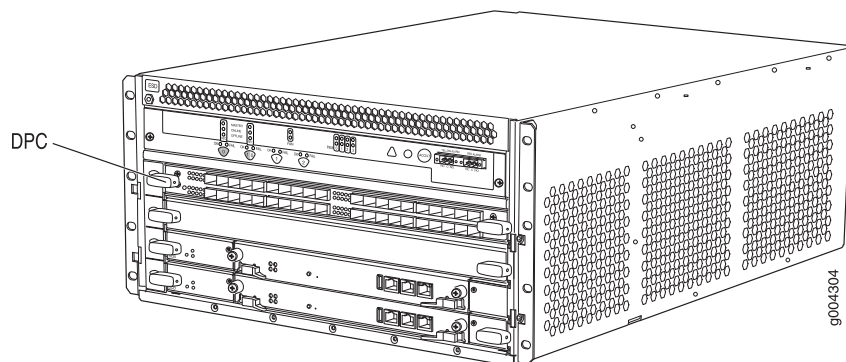

DPC Components

Each DPC consists of the following components:

- DPC cover, which functions as a ground plane and a stiffener.
- Fabric interfaces.

- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the DPCs.
- Two interfaces from the SCBs that enable the DPCs to be powered on and controlled.
- Physical DPC connectors.
- Two or four Packet Forwarding Engines.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.2-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button—Takes the DPC online or offline when pressed.
- LEDs on the DPC faceplate. For more information about LEDs on the DPC faceplate, see the [MX Series Interface Module Reference](#).

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**.

- See Also**
- [MX240 Component LEDs on the Craft Interface on page 36](#)
 - [MX240 Field-Replaceable Units \(FRUs\) on page 218](#)
 - [Replacing an MX240 DPC on page 259](#)

MX240 DPC Port and Interface Numbering

Each port on a DPC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the DPC number (represented as an **FPC** in the CLI). The DPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the DPC. Slashes (/) separate the DPC number from the logical PIC number and port number.

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see [Interface Naming Overview](#).

- *fpc*—Slot in which the DPC is installed. On the MX240 router, the DPCs are represented in the CLI as **FPC 0** through **FPC 2**.
- *pic*—Logical PIC on the DPC. The number of logical PICs varies depending on the type of DPC. For example, a:

- 20-port Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
- 40-port Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.
- 2-port 10-Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
- 4-port 10-Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.


For more information on specific DPCs, see “DPCs Supported on MX240, MX480, and MX960 Routers” on page 98 in the *MX Series Interface Module Reference*.

- *port*—Port number.

The MX240 router supports up to three DPCs that install horizontally and are numbered from bottom to top.

Figure 33 on page 96 shows a 40-port Gigabit Ethernet DPC with SFP installed in slot 2 on the MX240 router.

Figure 33: MX240 DPC Interface Port Mapping

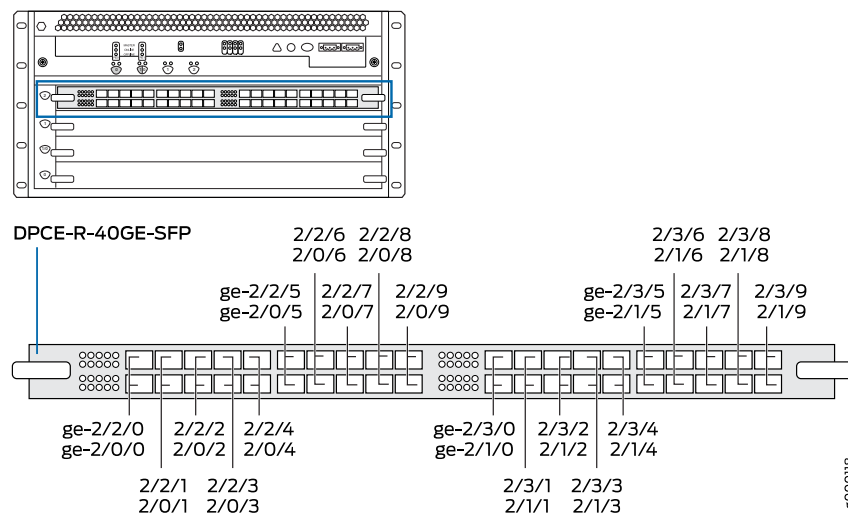

The DPC contains four logical PICs, numbered **PIC 0** through **PIC 3** in the CLI. Each logical PIC contains 10 ports numbered **0** through **9**.

The **show chassis hardware** command output displays a 40-port Gigabit Ethernet DPC with SFP (**DPCE-R-40GE-SFP**) installed in DPC slot **2**. The DPC is shown as **FPC 2** and the DPC's four logical PICs — **10x 1GE(LAN)** — are shown as **PIC 0** through **PIC 3**.

```
user@host> show chassis hardware
```

```
...
FPC 2          REV 07   750-018122   KB8222          DPCE 40x 1GE R
CPU           REV 06   710-013713   KA9010          DPC PMB
PIC 0         BUILTIN BUILTIN      10x 1GE(LAN)
  Xcvr 0      REV 01   740-011782   PCH2NU4        SFP-SX
  Xcvr 1      REV 01   740-011782   PCH2P4R        SFP-SX
  Xcvr 2      REV 01   740-011782   PCH2NYL        SFP-SX
  Xcvr 3      REV 01   740-011782   PCH2UW6        SFP-SX
```



```

Xcvr 4      REV 01  740-011782  PCH2P4N      SFP-SX
Xcvr 5      REV 01  740-011782  PCH2UME      SFP-SX
Xcvr 6      REV 01  740-011613  PCE1H5P      SFP-SX
Xcvr 7      REV 01  740-011782  PCH2UFG      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEYU2  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEYTQ  SFP-SX
PIC 1
Xcvr 0      REV 01  740-011782  PCH2UYF      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P4L      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2UCL      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P4X      SFP-SX
Xcvr 4      REV 01  740-011782  PCH2P1E      SFP-SX
Xcvr 5      REV 01  740-011782  PCH2UD2      SFP-SX
Xcvr 6      REV 01  740-011782  PCH2PLC      SFP-SX
Xcvr 7      REV 01  740-011782  PCH2UDJ      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEX7S  SFP-SX
PIC 2
Xcvr 0      REV 01  740-011782  PCH2NV7      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P6Q      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2NUG      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P10      SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEXTB  SFP-SX
PIC 3
Xcvr 0      REV 01  740-011782  PCH2PL4      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P1K      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2PLM      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2UFF      SFP-SX
Xcvr 8      REV 02  740-011613  AM1003SFV5S  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEXTB  SFP-SX
...

```

The **show interfaces terse** command output displays the Gigabit Ethernet interfaces that correspond to the 40 ports located on the DPC.

```
user@host> show interfaces terse ge-2*
```

```

Interface      Admin Link Proto  Local      Remote
ge-2/0/0       up    up
ge-2/0/1       up    down
ge-2/0/2       up    up
ge-2/0/3       up    up
ge-2/0/4       up    up
ge-2/0/5       up    up
ge-2/0/6       up    up
ge-2/0/7       up    up
ge-2/0/8       up    up
ge-2/0/9       up    up
ge-2/1/0       up    down
ge-2/1/1       up    down
ge-2/1/2       up    down
ge-2/1/3       up    down
ge-2/1/4       up    up
ge-2/1/5       up    up
ge-2/1/6       up    up
ge-2/1/7       up    up
ge-2/1/8       up    up
ge-2/1/9       up    down
ge-2/2/0       up    down

```

ge-2/2/1	up	down
ge-2/2/2	up	down
ge-2/2/3	up	down
ge-2/2/4	up	down
ge-2/2/5	up	down
ge-2/2/6	up	down
ge-2/2/7	up	down
ge-2/2/8	up	down
ge-2/2/9	up	down
ge-2/3/0	up	down
ge-2/3/1	up	down
ge-2/3/2	up	down
ge-2/3/3	up	down
ge-2/3/4	up	down
ge-2/3/5	up	down
ge-2/3/6	up	down
ge-2/3/7	up	down
ge-2/3/8	up	down
ge-2/3/9	up	down

- See Also**
- [MX240 Router Hardware and CLI Terminology Mapping on page 33](#)

MX240 Dense Port Concentrator (DPC) LEDs

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**. For more information about the DPC LEDs on the craft interface, see “MX240 Component LEDs on the Craft Interface” on page 36.

Each DPC also has LEDs located on the faceplate. For more information about LEDs on the DPC faceplate, see the “LEDs” section for each DPC in the *MX Series Interface Module Reference*.

- See Also**
- [MX240 Field-Replaceable Units \(FRUs\) on page 218](#)
 - [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Replacing an MX240 DPC on page 259](#)

DPCs Supported on MX240, MX480, and MX960 Routers



NOTE: These DPCs have all been announced as End of Life (EOL). The End of Support (EOS) milestone dates for each model are published at https://www.juniper.net/support/eol/mseries_hw.html.

Table 55 on page 99 lists the DPCs supported by the MX240, MX480, and MX960 routers.

Table 55: DPCs Supported in MX240, MX480, and MX960 Routers

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC	First Junos OS Release
Gigabit Ethernet				
<i>Gigabit Ethernet DPC with SFP</i>	DPC-R-40GE-SFP EOL (see PSN-2009-06-400)	40	40 Gbps	8.2
<i>Gigabit Ethernet Enhanced DPC with SFP</i>	DPCE-R-40GE-SFP EOL (see PSN-TSB16810)	40	40 Gbps	8.4
<i>Gigabit Ethernet Enhanced Ethernet Services DPC with SFP</i>	DPCE-X-40GE-SFP EOL (see PSN-TSB16810)	40	40 Gbps	8.4
<i>Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP</i>	DPCE-X-Q-40GE-SFP EOL (see PSN-2013-02-851)	40	40 Gbps	8.5
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-20GE-SFP EOL (see PSN-2013-02-851)	20	20 Gbps	9.1
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-40GE-SFP EOL (see PSN-2011-07-314)	40	40 Gbps	8.5
<i>10-Gigabit Ethernet DPC with XFP</i>	DPC-R-4XGE-XFP EOL (see PSN-2009-06-400)	4	40 Gbps	8.2
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-2XGE-XFP EOL (see PSN-2011-02-314)	2	20 Gbps	9.1
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-4XGE-XFP EOL (see PSN-TSB16810)	4	40 Gbps	8.4

Table 55: DPCs Supported in MX240, MX480, and MX960 Routers (continued)

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC	First Junos OS Release
<i>10-Gigabit Ethernet Enhanced Ethernet Services DPC with XFP</i>	DPCE-X-4XGE-XFP EOL (see PSN-TSB16810)	4	40 Gbps	8.4
<i>10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP</i>	DPCE-X-Q-4XGE-XFP EOL (see PSN-2013-02-851)	4	40 Gbps	8.5
<i>10-Gigabit Ethernet Enhanced Queuing IP Services DPC with XFP</i>	DPCE-R-Q-4XGE-XFP EOL (see PSN-2011-02-314)	4	40 Gbps	8.5
Mult-Rate Ethernet				
<i>Multi-Rate Ethernet Enhanced DPC with SFP and XFP</i>	DPCE-R-20GE-2XGE EOL (see PSN-TSB16810)	22	40 Gbps	9.2
<i>Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP</i>	DPCE-X-20GE-2XGE EOL (see PSN-2011-02-314)	22	40 Gbps	9.2
<i>Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP</i>	DPCE-R-Q-20GE-2XGE EOL (see PSN-TSB16810)	22	40 Gbps	9.3
Tri-Rate Ethernet				
<i>Tri-Rate Enhanced DPC</i>	DPCE-R-40GE-TX EOL (see PSN-2013-02-851)	40	40 Gbps	9.1
<i>Tri-Rate Enhanced Ethernet Services DPC</i>	DPCE-X-40GE-TX EOL (see PSN-2011-07-315)	40	40 Gbps	9.1
Services				
<i>Multiservices DPC</i>	MS-DPC EOL (see PSN-TSB16812)	2 (Not supported)	–	9.3

- See Also**
- *Protocols and Applications Supported by DPCs and Enhanced DPCs (DPC and DPCE-R)*
 - *Protocols and Applications Supported by Enhanced Ethernet Services DPCs (DPCE-X)*
 - *Protocols and Applications Supported by Enhanced Queuing IP Services DPCs (DPCE-R-Q)*
 - *Protocols and Applications Supported by Enhanced Queuing Ethernet Services DPCs (DPCE-X-Q)*
 - *Protocols and Applications Supported by the Multiservices DPC (MS-DPC)*

Interface Modules—FPCs and PICs


- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
- [MX240 Flexible PIC Concentrator \(FPC\) LEDs on page 103](#)
- [FPCs Supported by MX240, MX480, and MX960 Routers on page 104](#)
- [MX240 PIC Description on page 104](#)
- [MX240 PIC Port and Interface Numbering on page 105](#)
- [MX240 PIC LEDs on page 106](#)
- [PICs Supported by MX240, MX480, and MX960 Routers on page 107](#)

MX240 Flexible PIC Concentrator (FPC) Description

A Flexible PIC Concentrator (FPC) occupies two DPC slots on an MX Series router. The DPC slots are numbered **1/0**, **1**, and **2**, bottom to top. One FPC can be installed horizontally in either slots **1/0** and **1**, or slots **1** and **2** on the front of the router (see [Figure 35 on page 103](#)). The interface corresponds to the lowest numbered DPC slot for which the FPC is installed.

[Figure 34 on page 102](#) shows typical FPCs supported on the MX240 router.

Figure 34: Typical FPCs Supported on the MX240 Router

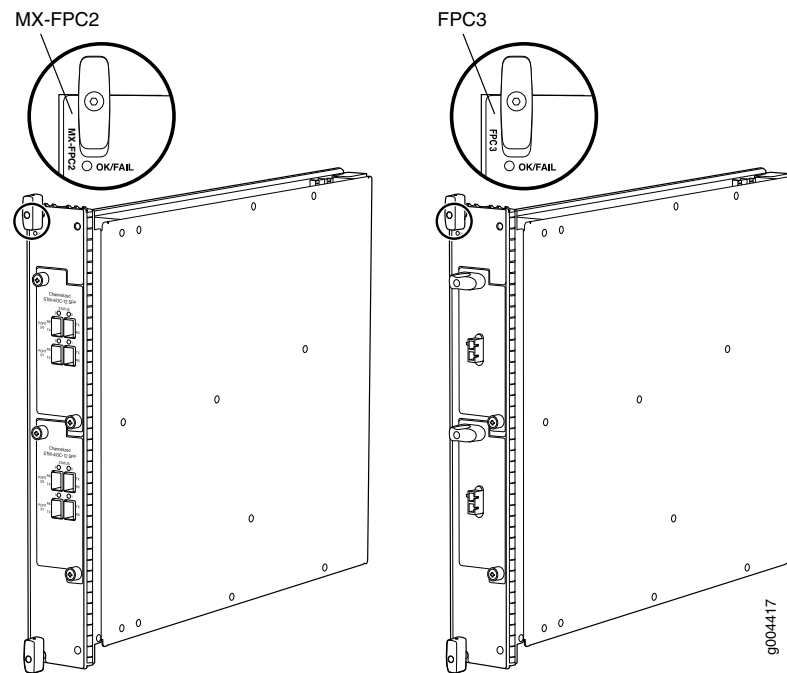


If a slot is not occupied by a DPC, an FPC, or an SCB, a blank panel must be installed to shield the empty slot and to allow cooling air to circulate properly through the router.

Each FPC supports up to two PICs. On an FPC2, one Packet Forwarding Engine receives incoming packets from the PICs installed on the FPC and forwards them through the switch planes to the appropriate destination port. On an FPC3, two Packet Forwarding Engines receive incoming packets from the PICs installed on the FPC and forwards them through the switch planes to the appropriate destination port. The FPCs interface with the power supplies and SCBs.

FPCs are hot-removable and hot-insertable, as described in [“MX240 Component Redundancy”](#) on page 34. When you install an FPC into a functioning router, the Routing Engine downloads the FPC software, the FPC runs its diagnostics, and the PICs, housed on the FPC, are enabled. Forwarding continues uninterrupted during this process. When you remove or install an FPC, packet forwarding between other DPCs or FPCs is not affected.

Figure 35: FPC Installed in the MX240 Router Chassis

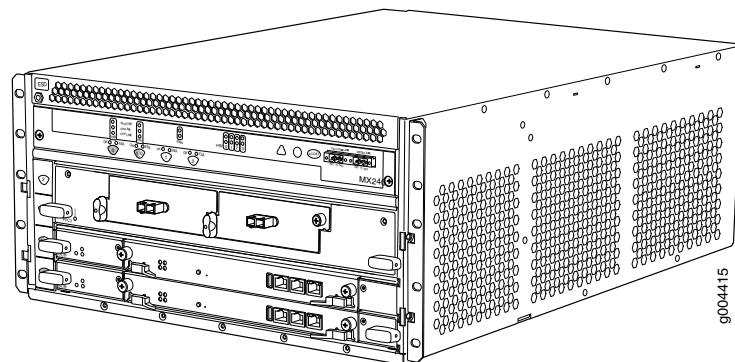

FPC Components

Each FPC consists of the following components:

- FPC card carrier, which includes two PIC slots.
- Up to two Packet Forwarding Engines, each consisting of one I-chip for Layer 3 processing and one Layer 2 network processor.
- Midplane connectors and power circuitry.
- Processor subsystem (PMB), which includes a 1.2-GHz CPU, system controller, 1 GB of SDRAM, and two Gigabit Ethernet interfaces.
- Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**. For more information about the FPC LEDs located on the craft interface, see “[MX240 Component LEDs on the Craft Interface](#)” on page 36.
- FPC online/offline button, located on the craft interface above the FPC

- See Also**
- [MX240 FPC Terminology](#)
 - [Replacing an MX240 FPC on page 269](#)
 - [Maintaining MX240 FPCs on page 264](#)
 - [Troubleshooting the MX240 FPCs on page 352](#)

MX240 Flexible PIC Concentrator (FPC) LEDs

Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**. For more information about the FPC LEDs located on the craft interface, see “[MX240 Component LEDs on the Craft Interface](#)” on page 36.

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
 - [MX240 FPC Terminology](#)
 - [Replacing an MX240 FPC on page 269](#)
 - [Maintaining MX240 FPCs on page 264](#)

- [Troubleshooting the MX240 FPCs on page 352](#)

FPCs Supported by MX240, MX480, and MX960 Routers

An FPC occupies two slots when installed in an MX240, MX480, or MX960 router. The maximum number of supported FPCs varies per router:

- MX960 router—6 FPCs
- MX480 router—3 FPCs
- MX240 router—1 FPC

[Table 56 on page 104](#) lists FPCs supported by MX240 routers.

Table 56: FPCs Supported by MX Series Routers

FPC Type	FPC Name	FPC Model Number	Maximum Number of PICs Supported	Maximum Throughput per FPC (Full-duplex)	First Junos OS Release
3	FPC3	MX-FPC3	2	20 Gbps	9.4
2	FPC2	MX-FPC2	2	10 Gbps	9.5

- See Also**
- [MX Series FPC and PIC Overview](#)
 - [PICs Supported by MX240, MX480, and MX960 Routers on page 107](#)
 - [High Availability Features](#)

MX240 PIC Description

PICs provide the physical connection to various network media types, receiving incoming packets from the network and transmitting outgoing packets to the network. During this process, each PIC performs framing and line-speed signaling for its media type. Before transmitting outgoing data packets, the PICs encapsulate the packets received from the FPCs. Each PIC is equipped with an ASIC that performs control functions specific to the media type of that PIC.

PICs are hot-removable and hot-insertable. You can install up to two PICs in the slots in each FPC. PICs used in an FPC2 have captive screws at their upper and lower corners. PICs used in a Type 3 FPC have an upper ejector handle and a lower captive screw.

- See Also**
- [PICs Supported by MX240, MX480, and MX960 Routers on page 107](#)
 - [MX240 PIC LEDs on page 106](#)
 - [Replacing an MX240 PIC on page 289](#)

MX240 PIC Port and Interface Numbering

Each port on a PIC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the FPC number (represented as an **FPC** in the CLI). The FPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the PIC number. The last number in the interface matches the port number on the PIC. Slashes (/) separate the FPC slot number from the PIC number and port number:

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see *Interface Naming Overview*.

- *fpc*—Lowest slot number in which the FPC is installed. On the MX240 router, the FPC occupies two line card slots and is represented in the CLI as **FPC 0** or **FPC 1**.
- *pic*—PIC number, 0 or 1 depending on the FPC slot.


For more information on specific PICs, see “PICs Supported by MX240, MX480, and MX960 Routers” on page 107 in the *MX Series Interface Module Reference*.

- *port*—Port number.

The FPC installs horizontally in either slots 1/0 and 1, or slots 1 and 2 and accepts up to two PICs.

[Figure 36 on page 106](#) shows a Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP installed in PIC slot 0 of an FPC installed in slot 1 and slot 2.

Figure 36: MX240 PIC Interface Port Mapping

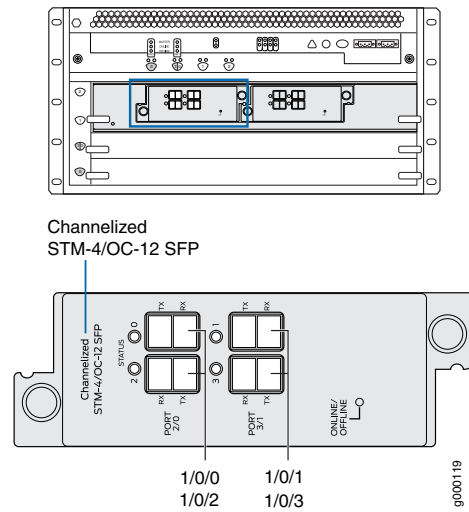

The `show chassis hardware` command output displays a Channelized OC12/STM4 Enhanced IQ (IQE) PIC (4x CHOC12 IQE SONET) installed in MX FPC Type 2.

```
user@host> show chassis hardware
```

```
...
FPC 1          REV 01   710-024386   JW9571          MX FPC Type 2
CPU           REV 03   710-022351   KE2986          DPC PMB
PIC 0         REV 00   750-022630   DS1284          4x CHOC12 IQE SONET
  Xcvr 0      REV 01   740-011782   PB821SG         SFP-SX
  Xcvr 1      REV 01   740-011782   PB829Q6         SFP-SX
  Xcvr 2      REV 01   740-011613   P9F15NQ         SFP-SX
  Xcvr 3      REV 01   740-011782   P7N036X         SFP-SX...
```

The `show interfaces terse` command output displays the channelized SONET OC12 interfaces (`coc12`), that correspond to the four ports located on the PIC.

```
user@host> show interfaces terse coc12*
```

Interface	Admin	Link	Proto	Local	Remote
coc12-1/0/0	up	up			
coc12-1/0/1	up	up			
coc12-1/0/2	up	up			
coc12-1/0/3	up	up			

See Also • [MX240 Router Hardware and CLI Terminology Mapping on page 33](#)

MX240 PIC LEDs

Each PIC has LEDs located on the faceplate. For more information about LEDs on the PIC faceplate, see the “LEDs” section for each PIC in the [MX Series Interface Module Reference](#).

- See Also**
- [PICs Supported by MX240, MX480, and MX960 Routers on page 107](#)
 - [MX240 PIC Description on page 104](#)
 - [Replacing an MX240 PIC on page 289](#)
 - [Maintaining MX240 PICs on page 288](#)

PICs Supported by MX240, MX480, and MX960 Routers

Table 57 on page 107 lists the PICs supported by MX240, MX480, and MX960 routers.

Table 57: PICs Supported by MX240, MX480, and MX960 Routers

PIC Name	PIC Model Number	Ports	Type	First Junos OS Release
Channelized IQ PICs				
<i>Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP</i>	PB-4CHOC12-STM4-IQE-SFP	4	2	9.5
<i>Channelized OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PB-1CHOC48-STM16-IQE	1	2	9.5
SONET/SDH PICs				
<i>SONET/SDH OC3/STM1 (Multi-Rate) PIC with SFP</i>	PB-4OC3-1OC12-SON2-SFP	4	2	9.5
<i>SONET/SDH OC12/STM4 (Multi-Rate) PIC with SFP</i>	PB-4OC3-4OC12-SON-SFP	4	2	9.5
<i>SONET/SDH OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PC-4OC48-STM16-IQE-SFP	4	3	10.4R2
<i>SONET/SDH OC48/STM16 (Multi-Rate) PIC with SFP</i>	PB-1OC48-SON-B-SFP	1	2	9.5
<i>SONET/SDH OC48/STM16 PIC with SFP</i>	PC-4OC48-SON-SFP	4	3	9.4
<i>SONET/SDH OC192c/STM64 PIC</i>	PC-1OC192-SON-VSR	1	3	9.4
<i>SONET/SDH OC192c/STM64 PIC with XFP</i>	PC-1OC192-SON-XFP	1	3	9.4

- See Also**
- [MX Series FPC and PIC Overview](#)
 - [FPCs Supported by MX240, MX480, and MX960 Routers on page 104](#)
 - [High Availability Features](#)

Interface Modules—MPCs and MICs

- [MIC/MPC Compatibility on page 108](#)
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
- [MICs Supported by MX Series Routers on page 116](#)
- [MX240 Modular Interface Card \(MIC\) LEDs on page 124](#)
- [MX240 MIC Port and Interface Numbering on page 124](#)
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
- [MX240 Modular Port Concentrator \(MPC\) LEDs on page 129](#)
- [MPCs Supported by MX Series Routers on page 130](#)
- [MX240 Application Services Modular Line Card Description on page 133](#)
- [MX240 AS MSC LEDs on page 136](#)
- [MX240 Application Services Modular Processing Card Description on page 136](#)
- [MX240 AS MXC LEDs on page 137](#)

MIC/MPC Compatibility

The following tables provide a compatibility matrix for the MICs currently supported by MPC1, MPC2, MPC3, MPC6, MPC8, and MPC9 on MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 routers. Each table lists the first Junos OS release in which the MPC supports the MIC. For example, Junos OS Release 10.2 is the first release in which the MX-MPC1-3D supports the Gigabit Ethernet MIC with SFP. An en dash indicates that the MIC is not supported.

Table 58: MIC/MPC1 Compatibility

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-80C3-20C12-ATM <i>(ATM MIC with SFP)</i>	—	—	12.1	12.1R4
MIC-3D-20GE-SFP <i>(Gigabit Ethernet MIC with SFP)</i>	10.2	11.2R4	10.2	11.2R4
MIC-3D-20GE-SFP-E <i>(Gigabit Ethernet MIC with SFP (E))</i>	13.2R2	13.2R2	13.2R2	13.2R2
MIC-3D-2XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	10.2	11.2R4	10.2	11.2R4

Table 58: MIC/MPC1 Compatibility (continued)

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	—	—	—	—
MIC-3D-40GE-TX <i>(Tri-Rate MIC)</i>	10.2	11.2R4	10.2	11.2R4
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	11.2	11.2R4	11.2	11.2R4
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	12.2	12.2
MIC-3D-1OC192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	12.2	12.2	12.2	12.2
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G <i>(Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	—	—	11.4	11.4
MIC-3D-16CHE1-T1-CE <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	13.2	13.2	12.3	12.3
	NOTE: Support for Non-Channelized MIC only.	NOTE: Support for Non-Channelized MIC only.		

Table 58: MIC/MPC1 Compatibility (continued)

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B (DS3/E3 MIC) NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.	11.4	11.4	11.4	11.4
MIC-MACSEC-20GE Gigabit Ethernet MIC with 256b-AES MACSEC	18.3R1	18.3R1	18.3R1	18.3R1
MS-MIC-16G (Multiservices MIC)	13.2	13.2	13.2	13.2

Table 59: MIC/MPC2 Compatibility

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-8OC3-2OC12-ATM (ATM MIC with SFP)	—	—	14.1R4, 14.2R3 with Junos Continuity 15.1	12.1	12.1R4	12.1	12.1R4	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP (Gigabit Ethernet MIC with SFP)	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP-E (Gigabit Ethernet MIC with SFP (E))	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	13.2R2	13.2R2	13.2R2	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-2XGE-XFP (10-Gigabit Ethernet MIC with XFP)	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 59: MIC/MPC2 Compatibility (continued)

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-40GE-TX <i>(Tri-Rate MIC)</i>	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	11.4	11.4	14.1R4, 14.2R3 with Junos Continuity 15.1	11.4	11.4	11.4	11.4	-	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	—	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-1OC192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G <i>(Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	—	—	15.1 with flexible queuing option	11.4	11.4	11.4	11.4	—	15.1 14.1R4, 14.2R3 with Junos Continuity
MIC-3D-16CHE1-T1-CE <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	13.2		15.1 with flexible queuing option	12.3	12.3	12.3	12.3	—	14.1R4, 14.2R3 with Junos Continuity 15.1
								NOTE: Support for Non-Channelized MIC only.	

Table 59: MIC/MPC2 Compatibility (continued)

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B (DS3/E3 MIC) NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.	11.4	11.4	14.1R4, 14.2R3 with Junos Continuity 15.1	11.4	11.4	11.4	11.4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MS-MIC-16G (Multiservices MIC) NOTE: Only one MS-MIC-16G can be installed into any MPC.	13.2	13.2	14.1R4, 14.2R3 with Junos Continuity 15.1	13.2	13.2	13.2	13.2	13.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-MACSEC-20GE Gigabit Ethernet MIC with 256b-AES MACSEC	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1

Table 60: MIC/MPC3 Compatibility

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MIC-3D-8OC3-2OC12-ATM (ATM MIC with SFP)	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP (Gigabit Ethernet MIC with SFP)	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP-E (Gigabit Ethernet MIC with SFP (E))	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-1X100GE-CFP (100-Gigabit Ethernet MIC with CFP)	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-2XGE-XFP (10-Gigabit Ethernet MICs with XFP)	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 60: MIC/MPC3 Compatibility (continued)

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-10XGE-SFP+ <i>(10-Gigabit Ethernet MIC with SFP+ (10 Ports))</i>	12.3	14.1R4, 14.2 R3 and Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-2X40GE-QSFP+ <i>(40-Gigabit Ethernet MIC with QSFP+)</i>	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-1X100GE-CXP <i>(100-Gigabit Ethernet MIC with CXP)</i>	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-100G-DWDM <i>(100-Gigabit DWDM OTN MIC with CFP2-ACO)</i>	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1
MIC-3D-4OC3OC12-1OC48 MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-1OC192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-16CHE1-T1-CE <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	—	15.1 with flexible queuing option	15.1

Table 60: MIC/MPC3 Compatibility (continued)

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MS-MIC-16G <i>(Multiservices MIC)</i>	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
<p>NOTE: On MPC3E, the installation of the Multiservices MIC (MS-MIC-16G) with MIC3-3D-2X40GE-QSFP, MIC3-3D-10XGE-SFP, or MIC3-3D-1X100GE-CFP does not meet the NEBS criteria.</p> <p>NOTE: Only one MS-MIC-16G can be installed into any MPC.</p>			
MIC-3D-40GE-TX <i>Tri-Rate MIC</i>	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G <i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	—	15.1 with flexible queuing option	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B <i>DS3/E3 MIC</i>	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
<p>NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.</p>			
MIC-MACSEC-20GE <i>Gigabit Ethernet MIC with 256b-AES MACSEC</i>	18.3R1	18.3R1	18.3R1

Table 61: MIC/MPC6 Compatibility

MIC Name	MPC6E
MIC6-10G <i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	13.3R2
MIC6-10G-OTN <i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	13.3R3

Table 61: MIC/MPC6 Compatibility (continued)

MIC Name	MPC6E
MIC6-100G-CXP <i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	13.3R2
MIC6-100G-CFP2 <i>100-Gigabit Ethernet MIC with CFP2</i>	13.3R3

Table 62: MIC/MPC8 Compatibility

MIC Name	MPC8E
MIC-MRATE <i>MIC MRATE</i>	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1
MIC-MACSEC-MRATE <i>Multi-Rate Ethernet MIC</i>	17.4

Table 63: MIC/MPC9 Compatibility

MIC Name	MPC9E
MIC-MRATE <i>MIC MRATE</i>	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1
MIC-MACSEC-MRATE <i>Multi-Rate Ethernet MIC</i>	17.4

Table 64: MIC/MPC10003 Compatibility

MIC Name	MPC10003
JNP-MIC1 <i>Multi-Rate Ethernet MIC</i>	17.3
JNP-MIC1-MACSEC <i>Multi-Rate Ethernet MIC</i>	17.3R2

- See Also**
- [MICs Supported by MX Series Routers on page 116](#)
 - [Junos Continuity Software User Guide \(Junos OS Release 14.1R4 and Later Releases\)](#)

MX240 Modular Interface Card (MIC) Description

Modular Interface Cards (MICs) install into Modular Port Concentrators (MPCs) and provide the physical connections to various network media types. MICs allow different physical interfaces to be supported on a single line card. You can install MICs of different media types on the same router as long as the router supports those MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received.

MICs are hot-removable and hot-insertable. You can install up to two MICs in the slots in each MPC.

- See Also**
- [MICs Supported by MX Series Routers on page 116](#)
 - [MX240 Modular Interface Card \(MIC\) LEDs on page 124](#)
 - [Replacing an MX240 MIC on page 274](#)
 - [Maintaining MX240 MICs on page 279](#)

MICs Supported by MX Series Routers

The following tables list the first supported Junos OS release for the MX Series.

- [Table 65 on page 116](#) lists the first supported Junos OS release for MICs on MX240, MX480, MX960, and MX2008 routers.
- [Table 66 on page 119](#) lists the first supported Junos OS release for MICs on MX2010 and MX2020 routers.
- [Table 67 on page 121](#) list the first supported Junos OS release for MICs on MX5, MX10, and MX40 routers.
- [Table 68 on page 122](#) lists the first supported Junos OS release for MICs on MX80 and MX104 routers.
- [Table 69 on page 124](#) lists the first supported Junos OS release for MICs on MX10003 router.

Table 65: MICs Supported by MX240, MX480, MX960 and MX2008 Routers

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	15.1F7
DS3/E3				

Table 65: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (continued)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	15.1F7
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	12.3	15.1F7
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.1	15.1F7
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	15.1F7
<i>Gigabit Ethernet MIC with 256b-AES MACSEC</i>	MIC-MACSEC-20GE	20	18.3	-
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	15.1F7
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	10.1	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFPP	10	12.3	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	-	15.1F7
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	-	15.1F7
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFP	2	12.2	15.1F7
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.1	15.1F7
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.2	15.1F7
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	-	15.1F7

Table 65: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (continued)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	-	15.1F7
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F7
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2	15.1F7
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	15.1F7
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	15.1F7
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	-	15.1F7
<i>Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)</i>	MIC-MACSEC-MRATE	12		17.4
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	15.1F7
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	15.1F7
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	15.1F7

Table 66: MICs Supported by MX2010 and MX2020 Routers

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.3	12.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	12.3	12.3
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	–	–
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	12.3	12.3
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	13.3
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	12.3	12.3
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFPP	10	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	13.3R2	13.3R2
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	13.3R3	13.3R3
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFPP	2	12.3	12.3
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	13.3R2	13.3R2

Table 66: MICs Supported by MX2010 and MX2020 Routers (continued)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	13.3R3	13.3R3
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	12.3	12.3
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	12.3	12.3
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.3	12.3
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later
<i>Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)</i>	MIC-MACSEC-MRATE	12	17.4	17.4
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	12.3	12.3
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.2
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.3	12.3

Table 67: MICs Supported by MX5, MX10, and MX40 Routers

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
ATM					
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	12.1	12.1
DS3/E3					
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	11.4	11.4
Circuit Emulation					
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	–	–	–
Gigabit Ethernet					
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	11.2R4	11.2R4	11.2R4
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	–	–	–
10-Gigabit Ethernet					
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	11.2R4	11.2R4	11.2R4
Multi-Rate					
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2R4	11.2R4	11.2R4
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2R4	11.2R4	11.2R4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	11.4	11.4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	11.4	11.4
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	12.2	12.2

Table 67: MICs Supported by MX5, MX10, and MX40 Routers (continued)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1COC12-CE-H	-	-	-	-
Tri-Rate					
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	-	11.2R4	11.2R4
Services					
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2 Rear slot only.	13.2 Rear slot only.	13.2 Rear slot only.
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	12.2	12.2

Table 68: MICs Supported by MX80 and MX104 Routers

MIC Name	MIC Model Number	Ports	MX80	MX104
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	13.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	13.3
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	-	13.2R2
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.2	13.2R2
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	-	13.2R2
<i>Gigabit Ethernet MIC with 256b-AES MACSEC</i>	MIC-MACSEC-20GE	20	18.3	18.3

Table 68: MICs Supported by MX80 and MX104 Routers (continued)

MIC Name	MIC Model Number	Ports	MX80	MX104
10-Gigabit Ethernet MICs with XFP	MIC-3D-2XGE-XFP	2	10.2	13.2R2
Multi-Rate				
SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-4OC3OC12-1OC48	4	11.2	13.3
SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-8OC3OC12-4OC48	8	11.2	13.3
Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-4CHOC3-2CHOC12	4	11.4	13.3
Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	MIC-3D-8CHOC3-4CHOC12	8	11.4	13.3
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP	MIC-3D-4COC3-1COC12-CE	4	12.2	13.2R2
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)	MIC-4COC3-1COC12-CE-H	-	-	13.2R2
Tri-Rate				
Tri-Rate MIC	MIC-3D-40GE-TX	40	10.2	13.2R2
Services				
Multiservices MIC	MS-MIC-16G	0	13.2	13.3R2
			Rear slot only. Supported on the modular MX80 and fixed MX80-48T	NOE Sale From Junos OS 13.3R3, 14.1R2, and 14.2R1, MX104 supports only two Multiservices MICs.
SONET/SDH				
SONET/SDH OC192/STM64 MIC with XFP	MIC-3D-1OC192-XFP	1	12.2	13.3

Table 69: MICs Supported by MX10003 Router

MIC Name	MIC Model Number	Ports	MX10003
Multi-Rate			
Multi-Rate Ethernet MIC (12-Port Multi-Rate MIC with QSFP+)	JNP-MIC1	12	17.3
Multi-Rate Ethernet MIC (12-Port Multi-Rate MACsec MIC with QSFP+)	JNP-MIC1-MACSEC	12	17.3R2

- See Also**
- [MX Series MIC Overview](#)
 - [MIC/MPC Compatibility on page 108](#)

MX240 Modular Interface Card (MIC) LEDs

Each MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the [MX Series Interface Module Reference](#).

- See Also**
- [MICs Supported by MX Series Routers on page 116](#)
 - [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Maintaining MX240 MICs on page 279](#)
 - [Troubleshooting the MX240 MICs on page 354](#)
 - [Replacing an MX240 MIC on page 274](#)

MX240 MIC Port and Interface Numbering

Each port on a MIC corresponds to a unique interface name in the CLI.



NOTE: Fixed configuration MPCs, that is, MPCs with built-in MICs follow the port numbering of DPCs.

In the syntax of an interface name, a hyphen (-) separates the media type from the MPC number (represented as an FPC in the CLI). The MPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the MIC. Slashes (/) separate the MPC number from the logical PIC number and port number:

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface

- *so*—SONET/SDH interface
- *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see *Interface Naming Overview*.

- *fpc*—Slot in which the MPC is installed. On the MX240 router, the MPCs are represented in the CLI as **FPC 0** through **FPC 2**.
- *pic*—Logical PIC on the MIC, numbered 0 or 1 when installed in slot 0, and 2 or 3 when installed in slot 1. The number of logical PICs varies depending on the type of MIC. For example, a:
 - 20-port Gigabit Ethernet MIC has two logical PICs, numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.
 - 4-port 10-Gigabit Ethernet MIC has two logical PICs numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.
 - 100-Gigabit Ethernet MIC with CFP has one logical PIC numbered 0 when installed in slot 0, or 2 when installed in slot 1.

For more information on specific MICs, see “MICs Supported by MX Series Routers” on page 116 in the *MX Series Interface Module Reference*.

- *port*—Port number.



NOTE: The MIC number is not included in the interface name.


The MX240 router supports up to three MPCs that install horizontally and are numbered from bottom to top. Each MPC accepts up to two MICs.

[Figure 37 on page 126](#) shows an example of a 20-port Gigabit Ethernet MIC with SFP installed in slot 0 of an MPC in slot 2.




NOTE: The 20-port Gigabit Ethernet MIC with SFP-E has a different port numbering. See *Gigabit Ethernet MIC with SFP (E)*

Figure 37: MX240 MIC Interface Port Mapping

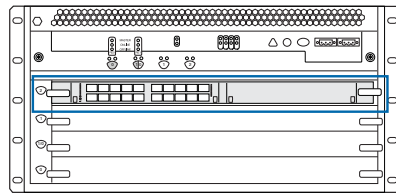

MIC-3D-20GE-SFP

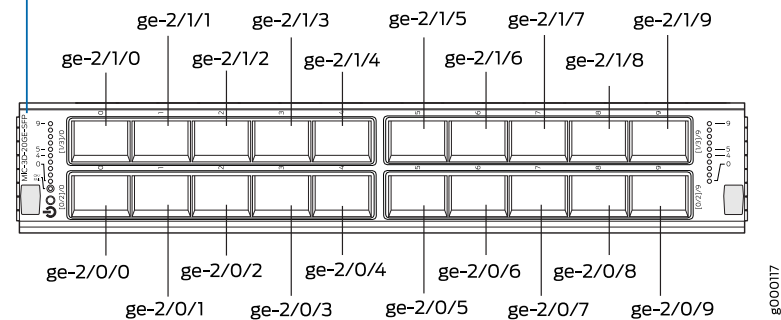

The MIC contains two logical PICs, numbered **PIC 0** through **PIC 1** in the CLI. Each logical PIC contains 10 ports numbered **0** through **9**.

The **show chassis hardware** command output displays a 20-port Gigabit Ethernet MIC with SFP — **3D 20x 1GE(LAN) SFP** — installed in slot **0** of an MPC in slot **2**. The MPC (**MPC Type 2 3D EQ**) is shown as **FPC 2** in the CLI. The MIC's two logical PICs — **10x 1GE(LAN) SFP** — are shown as **PIC 0** and **PIC 1**.

```
user@host> show chassis hardware
```

```
...
FPC 2          REV 28   750-031090   YH8181          MPC Type 2 3D EQ
CPU           REV 06   711-030884   YH9437          MPC PMB 2G
MIC 0         REV 22   750-028392   YD0439          3D 20x 1GE(LAN) SFP
  PIC 0        BUILTIN BUILTIN       10x 1GE(LAN) SFP
    Xcvr 0     REV 01   740-011613   PCE14D5        SFP-SX
    Xcvr 1     REV 01   740-011782   P9C280T        SFP-SX
    Xcvr 2     REV 01   740-011782   P9C2512        SFP-SX
    Xcvr 3     REV 02   740-011613   AM0951SFF3Z    SFP-SX
    Xcvr 4     REV 02   740-011613   AM0951SFF33    SFP-SX
    Xcvr 5     REV 02   740-011613   AM0951SFF3Y    SFP-SX
    Xcvr 6     REV 02   740-011613   AM0951SFF4B    SFP-SX
    Xcvr 7     REV 01   740-011613   E08H01273      SFP-SX
    Xcvr 8     REV 02   740-011613   AM0951SFFWK    SFP-SX
  PIC 1        BUILTIN BUILTIN       10x 1GE(LAN) SFP
    Xcvr 0     REV 01   740-011613   E08H00516      SFP-SX
    Xcvr 1     REV 01   740-011613   E08G03648      SFP-SX
    Xcvr 2     REV 01   740-011613   E08H00514      SFP-SX
...
```

The `show interfaces terse` command output displays the Gigabit Ethernet interfaces that correspond to the 20 ports located on the MIC.

```
user@host> show interfaces terse ge-2*
```

Interface	Admin	Link	Proto	Local	Remote
ge-2/0/0	up	down			
ge-2/0/1	up	down			
ge-2/0/2	up	down			
ge-2/0/3	up	up			
ge-2/0/4	up	up			
ge-2/0/5	up	up			
ge-2/0/6	up	up			
ge-2/0/7	up	up			
ge-2/0/8	up	up			
ge-2/0/9	up	down			
ge-2/1/0	up	up			
ge-2/1/1	up	up			
ge-2/1/2	up	up			
ge-2/1/3	up	down			
ge-2/1/4	up	down			
ge-2/1/5	up	down			
ge-2/1/6	up	down			
ge-2/1/7	up	down			
ge-2/1/8	up	down			
ge-2/1/9	up	down			

See Also • [MX240 Router Hardware and CLI Terminology Mapping on page 33](#)

MX240 Modular Port Concentrator (MPC) Description

Modular Port Concentrators (MPCs) provide packet forwarding services. The MPCs are inserted into a slot in a router. Modular Interface Cards (MICs) provide the physical interfaces and install into the MPCs. You can install up to two MICs of different media types on the same router as long as the router supports those MICs.

A specialized fixed configuration MPC provides higher port density over MICs and combines packet forwarding and Ethernet interfaces onto a single line card. The fixed configuration MPC is inserted into a slot in a router and contains no slots for MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received. Each MPC is equipped with up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type. The MPCs interface with the power supplies and Switch Control Boards (SCBs). You must install redundant SCBs to support full line-rate.

The MX240 router supports up to three MPCs. You must install a high-capacity fan tray to use an MPC. For power requirements, see ["Calculating Power Requirements for MX240 Routers" on page 156](#).

The router has two dedicated line card slots for DPCs, MPCs, or FPCs. MPCs install horizontally in the front of the router (see [Figure 38 on page 128](#)). One multifunction slot

numbered 1/0 supports either one line card or one SCB. The line card slots are numbered 1/0, 1, and 2, bottom to top. An MPC can be installed in any slot on the router that supports MPCs. You can install any combination of line card types in the router.

When a slot is not occupied by an MPC or other line card, you must insert a blank DPC panel to fill the empty slot and ensure proper cooling of the system.

MPCs are hot-removable and hot-insertable. When you install an MPC in an operating router, the Routing Engine downloads the MPC software, the MPC runs its diagnostics, and the Packet Forwarding Engines housed on the MPC are enabled. Forwarding on other MPCs continues uninterrupted during this process.

Figure 38 on page 128 shows a typical MPC supported on the MX240 router.

Figure 39 on page 128 shows an MPC installed horizontally in the MX240 Router. For more information about MPCs, see the *MX Series Interface Module Reference*.

Figure 38: Typical MPC Supported on the MX240 Router


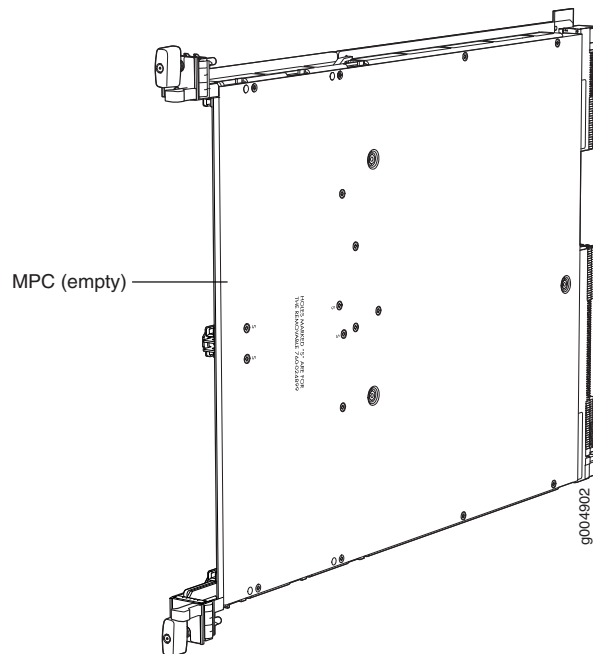


Figure 39: MPC Installed Horizontally in the MX240 Router

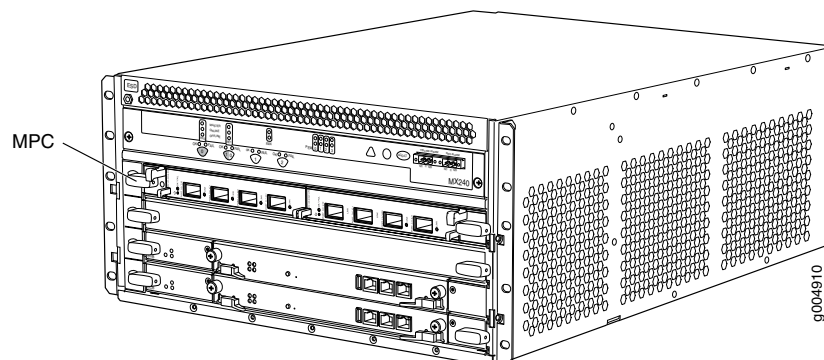

MPC Components

Each MPC consists of the following components:

- MPC card carrier, which includes two MIC slots (excludes the fixed configuration MPC).
- Fabric interfaces.
- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the MPCs.
- Two interfaces from the SCBs that enable the MPCs to be powered on and controlled.
- Physical MPC connectors.
- Up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.5-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button which takes the MPC online or offline when pressed.
- **OK/Fail** LED on the MPC faceplate. For more information about LEDs on the MPC faceplate, see the [MX Series Interface Module Reference](#).

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**.

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) LEDs on page 129](#)
 - [MX240 Field-Replaceable Units \(FRUs\) on page 218](#)
 - [Replacing an MX240 MPC on page 284](#)

MX240 Modular Port Concentrator (MPC) LEDs

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**. For more information about the line card LEDs on the craft interface, see “[MX240 Component LEDs on the Craft Interface](#)” on page 36.

Each MPC also has LEDs located on the faceplate. For more information about LEDs on the MPC faceplate, see the “LEDs” section for each MPC in the [MX Series Interface Module Reference](#).

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [Maintaining MX240 MPCs on page 282](#)
 - [Troubleshooting the MX240 MPCs on page 354](#)
 - [Replacing an MX240 MPC on page 284](#)

MPCs Supported by MX Series Routers

Table 70 on page 130 lists the MPCs and their first supported Junos OS release on MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 routers.

Table 70: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10008 Routers
Fixed Configuration MPCs							
<i>16x10GE MPC</i>	MPC-3D-16XGE-SFP	10.0R2	15.1F7	12.3	12.3	–	–
<i>Multiservices MPC</i>	MS-MPC	13.2R4	15.1F7	15.1	15.1	–	–
<i>32x10GE MPC4E</i>	MPC4E-3D-32XGE-SFPP	12.3R2	15.1F7	12.3R2	12.3R2	–	–
<i>2x100GE + 8x10GE MPC4E</i>	MPC4E-3D-2CGE-8XGE	12.3R2	15.1F7	12.3R2	12.3R2	–	–
<i>6x40GE + 24x10GE MPC5E</i>	MPC5E-40G10G	13.3R2	15.1F7	13.3R2	13.3R2	–	–
<i>6x40GE + 24x10GE MPC5EQ</i>	MPC5EQ-40G10G	13.3R2	15.1F7	13.3R2	13.3R2	–	–
<i>2x100GE + 4x10GE MPC5E</i>	MPC5E-100G10G	13.3R3	15.1F7	13.3R3	13.3R3	–	–
<i>2x100GE + 4x10GE MPC5EQ</i>	MPC5EQ-100G10G	13.3R3	15.1F7	13.3R3	13.3R3	–	–
<i>MPC7E (Multi-Rate)</i>	MPC7E-MRATE	<ul style="list-style-type: none"> • 15.1F4 with Junos Continuity • 16.1R1 and later 	15.1F7	<ul style="list-style-type: none"> • 15.1F4 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F4 with Junos Continuity • 16.1R1 and later 	–	–

Table 70: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers (continued)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10008 Routers
<i>MPC7E 10G</i>	MPC7E-10G	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	15.1F7	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	–	–
MPCs							
<i>MPC1</i>	MX-MPC1-3D	10.2	15.1F7	12.3	12.3	–	–
<i>MPC1E</i>	MX-MPC1E-3D	11.2R4	15.1F7	12.3	12.3	–	–
<i>MPC1 Q</i>	MX-MPC1-3D-Q	10.2	15.1F7	12.3	12.3	–	–
<i>MPC1E Q</i>	MX-MPC1E-3D-Q	11.2R4	15.1F7	12.3	12.3	–	–
<i>MPC2</i>	MX-MPC2-3D	10.1	15.1F7	12.3	12.3	–	–
<i>MPC2E</i>	MX-MPC2E-3D	11.2R4	15.1F7	12.3	12.3	–	–
<i>MPC2 Q</i>	MX-MPC2-3D-Q	10.1	15.1F7	12.3	12.3	–	–
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	11.2R4	15.1F7	12.3	12.3	–	–
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	10.1	15.1F7	12.3	12.3	–	–
<i>MPC2E EQ</i>	MX-MPC2E-3D-EQ	11.2R4	15.1F7	12.3	12.3	–	–
<i>MPC2E P</i>	MX-MPC2E-3D-P	12.2	15.1F7	12.3	12.3	–	–
<i>MPC2E NG</i>	MX-MPC2E-3D-NG	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–	–

Table 70: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers (continued)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10008 Routers
<i>MPC2E NG Q</i>	MX-MPC2E-3D-NG-Q	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–	–
<i>MPC3E</i>	MX-MPC3E-3D	12.1	15.1F7	12.3	12.3	–	–
<i>MPC3E NG</i>	MX-MPC3E-3D-NG	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–	–
<i>MPC3E NG Q</i>	MX-MPC3E-3D-NG-Q	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–	–
<i>MPC6E</i>	MX2K-MPC6E	–	15.1F7	13.3R2	13.3R2	–	–
<i>MPC8E</i>	MX2K-MPC8E	–	15.1F7	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	–	–
<i>MPC9E</i>	MX2K-MPC9E	–	15.1F7	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	–	–
<i>MX10003 MPC (Multi-Rate)</i>	MX10003-LC2103	–	–	–	–	17.3	–

Table 70: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers (continued)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10008 Routers
<i>Line card (MX10K-LC2101)</i>	JNP10K-LC2101	–	–	–	–	–	18.2R1
<i>MPC10E-10C-MRATE</i>	MPC10E-10C-MRATE	19.2R1	–	–	–	–	–
<i>MPC10E-15C-MRATE</i>	MPC10E-15C-MRATE	19.1R1	–	–	–	–	–


- See Also**
- [MX Series MPC Overview](#)
 - [MIC/MPC Compatibility on page 108](#)
 - [MX Series MIC Overview](#)
 - [MICs Supported by MX Series Routers on page 116](#)
 - [Junos Continuity Software Overview](#)
 - [Pathfinder: Hardware Supported by Junos Continuity Software](#)

MX240 Application Services Modular Line Card Description

The Application Services Modular Line Card (AS MLC) is an X86-based card for MX960, MX480, and MX240 routers to deliver integrated application service solutions. See [Figure 40 on page 134](#). The first application that network operators can take advantage of is the Junos Content Encore system, a high-throughput, solid state storage platform for media rich content delivery. Additionally, the AS MLC can serve as the platform for Juniper Networks JunosV App Engine, powering a host of network applications directly embedded into your MX Series 5G Universal Routing Platforms.

AS MLC is modular and decouples CPU and storage in individual field-upgradeable units. The AS MLCs are designed to enable application throughput up to 50 Gbps and a storage capacity of 400 gigabytes (GB) of NAND Flash.

Figure 40: Application Services Modular Line Card (AS MLC)

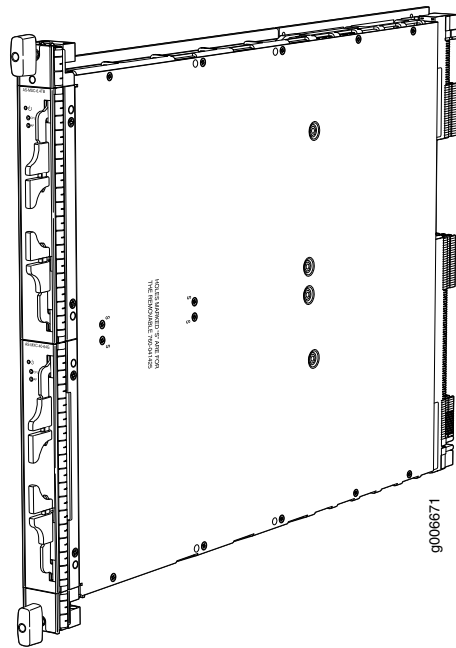

MX240 AS MLC Function

The AS MLC provides modular processing and modular storage. Installed on the AS MLC, the Junos Content Encore system operates as a caching application, in either HTTP reverse proxy mode or HTTP transparent proxy mode, to manage client requests for content and the distribution of the content to clients from origin servers. In the future, AS MLC will run other Juniper Networks router services and applications as well as serve as a virtualized platform for third-party applications. AS MLC provides Ethernet switching and high-speed fabric interface to MX routers. Graceful Routing Engine switchover is also supported on the AS MLC.

Integrated with application forwarding on MX Series routers, the AS MLC provides increased service flexibility with reduced power and space requirements for the network infrastructure.

AS MLC Components

Each AS MLC consists of the following components:

- AS MLC Modular Carrier Card (AS MCC), which fits horizontally in front of the MX240 router, includes two slots for the Application Services Modular Storage Card (AS MSC) and Application Services Modular Processing Card (AS MXC)
- AS MXC with 64 GB RAM for processing
- AS MSC with 400 GB NAND Flash capacity for modular storage



NOTE: The AS MCC, AS MXC, and AS MSC are hot-removable and hot-insertable

- Switch fabric interfaces to the chassis
- XM ASIC chip, which owns and manages the packet data memory built from external DDR3 memory chips, the fabric queuing system, a portion of the WAN queuing system, and the host queuing system
- LU ASIC chip, which performs all functions relating to header processing including input processing, route lookup, classification, filtering, policing, accounting, encapsulation, and statistics
- Midplane connectors and power circuitry
- Processor Mezzanine Board (PMB), which contains the host processor and supporting peripherals.
- LED on the AS MCC, which displays the status of the AS MLC

MX240 SCB, Power Supply, and Cooling System Requirements for AS MLC

Each MX240 router requires specific SCB, power supply, and cooling system models to run the AS MLC:

- SCB—Enhanced MX Switch Control Board (SCBE-MX). See *MX240 SCBE-MX Description* for details
- Power supply:
 - 2520W AC power supply—Model PWR-MX480-2520-AC
 - 2400W DC power supply—Model PWR-MX480-2400-DC
- Power requirement for AS MLC:
 - AS MCC—191W
 - AS MXC—259W
 - AS MSC—50W
- Cooling system—Required fans and fan tray models:
 - Fans:
 - For AC power supply: PWR-FAN-MX240-ACH-HC-U and PWR-MX240-ACL-HC-U
 - For DC power supply: PWR-FAN-MX2400-DC-HC-U
 - Fan tray—FFANTRAY-MX240-HC

- See Also**
- [Replacing an MX240 AS MLC on page 300](#)
 - [Replacing an MX240 AS MSC on page 304](#)
 - [Replacing an MX240 AS MXC on page 307](#)

MX240 AS MSC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MSC and are located on the AS MSC. [Table 71 on page 136](#) describes the functions of the AS MSC LEDs.

Table 71: AS MSC LEDs

Label	Color	State	Description
CPU	Green	On steadily	AS MSC operates normally.
	Red	On steadily	AS MSC has an error or has failed.
	–	Off	AS MSC is offline.
AP	Green	On steadily	AS MSC storage operation is normal.
	Red	On steadily	AS MSC storage operation has an error.
	–	Off	AS MSC storage operation is not activated.

- See Also**
- [MX240 Application Services Modular Storage Card Description](#)
 - [Replacing an MX240 AS MSC on page 304](#)


MX240 Application Services Modular Processing Card Description

The Application Services Modular Processing Card (AS MXC) is a pluggable X86-based card that can be inserted into the lower slot of the Application Services Modular Line Card (AS MLC). The AS MXC serves as the processing card for the Junos Content Encore system and contains the two X86, Intel 8-core processors with interface ability greater than 80 Gbps. The AS MXC (see [Figure 41 on page 137](#)) is equivalent to a PIC or MIC (Modular Interface Card).

AS MXCs are hot-removable and hot-insertable. One MXC can be installed in the lower slot of each AS MLC. Each MXC has these components:

- Two 8-core Intel processors—Contains eight execution cores with Ring Interconnect architecture. Each core supports two threads, up to 16 threads per socket.
- 64 GB DRAM—On DIMM sockets.
- LEDs—Two LEDs on the faceplate display the CPU and application status.

Figure 41: Application Services Modular Processing Card (AS MXC)

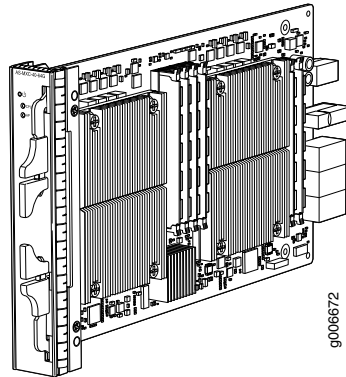

- See Also**
- [MX240 AS MXC LEDs on page 137](#)
 - [Replacing an MX240 AS MXC on page 307](#)

MX240 AS MXC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MXC and are located on the AS MXC. [Table 72 on page 137](#) describes the functions of the AS MXC LEDs.

Table 72: AS MXC LEDs

Label	Color	State	Description
CPU	Green	On steadily	AS MXC operates normally.
	Red	On steadily	AS MXC has an error or has failed.
	–	Off	AS MXC is offline.
AP	Green	On steadily	AS MXC applications operation is normal.
	Red	On steadily	AS MXC applications operation has an error.
	–	Off	AS MXC applications are not activated.

- See Also**
- [MX240 Application Services Modular Processing Card Description on page 136](#)
 - [Replacing an MX240 AS MXC on page 307](#)

MX-Series Switch Control Board (SCB) Overview

At the heart of the MX Series 5G Universal Routing Platform is the Switch and Control Board (SCB). The SCB has three primary functions: switch data between the line cards, control the chassis, and house the Routing Engine. The SCB is a single-slot card and has a carrier for the Routing Engine on the front.

Switch Control Boards control power to MPCs, monitor and control system functions such as fan speed and the system front panel, and manage clocking, resets, and boots.

Depending on the MX chassis and the level of redundancy, the number of SCBs can vary. The MX240 and MX480 require two SCBs for 1+1 redundancy, whereas the MX960 requires three SCBs for 2+1 redundancy.

There are four generations of SCBs for the MX Series 5G Universal Routing Platform: SCB-MX, SCBE-MX, SCBE2-MX, and SCBE3-MX.

- SCB-MX is the first-generation switch control board. The SCB-MX is designed to work with first-generation DPC line cards.
- The SCBE-MX is the second generation switch control board and is designed specifically for use with MPC3E line cards to provide full line-rate performance and redundancy without a loss of bandwidth.
- The SCBE2-MX provides improved fabric performance for high-capacity line cards using the third generation fabric XF2 chip (MPC4E, MPC5E, MPC2/3 NG, and MPC7E).
- The SCBE3-MX Enhanced Switch Control Board provides improved fabric performance and bandwidth capabilities for high-capacity line cards using the ZF-based switch fabric.

[Table 4 on page 29](#) compares the SCB capacities of the MX Series 5G Universal Routing Platforms.

[Table 74 on page 139](#) lists the supported routing engines per SCB.

Table 73: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric Bandwidth	MX960 Fabric Bandwidth
Enhanced MX Switch Control Board (SCBE3-MX)	Up to 1.5 Tbps (non-redundant fabric configuration with MPC10E line cards); 1 Tbps (redundant fabric configuration with MPC10E line cards)	Up to 6 Tbps	Up to 18 Tbps	Up to 33 Tbps
Enhanced MX Switch Control Board (SCBE2-MX)	Up to 480 Gbps (non-redundant fabric configuration); 340 Gbps (redundant fabric configuration)	Up to 1.92 Tbps	Up to 5.76 Tbps	Up to 10.56 Tbps
Enhanced MX Switch Control Board (SCBE-MX)	Up to 240 Gbps (non-redundant fabric configuration); 160 Gbps (redundant fabric configuration)	Up to 930 Gbps	Up to 2.79 Tbps	Up to 5.25 Tbps

Table 73: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex) (continued)

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric Bandwidth	MX960 Fabric Bandwidth
Switch Control Board (SCB-MX)	Up to 240 Gbps (non-redundant fabric configuration); 120 Gbps (redundant fabric configuration)	Up to 465 Gbps	Up to 1.39 Tbps	Up to 2.6 Tbps

Table 74: Supported Routing Engines for MX Series 5G Universal Routing Platforms Switch Control Boards

Switch Control Board	Supported Routing Engines
SCBE3-MX	RE-S-1800x2 RE-S-1800x4 RE-S-X6-64G RE-S-X6-128G RE-S-X6-64G-LT
SCBE2-MX	RE-S-1300 (EOLed) RE-S-2000 (EOLed) RE-S-1800* RE-S-X6*
SCBE-MX	RE-S-1300 (EOLed) RE-S-2000 (EOLed) RE-S-1800*
SCB-MX	RE-S-1300 (EOLed) RE-S-2000 (EOLed) RE-S-1800

* All variants

CLI Identification

The SCBs are identified in the CLI as:

SCB Model	CLI Identification
SCB-MX	MX SCB
SCBE-MX	Enhanced MX SCB
SCBE2-MX	SCBE2-MX-S

SCB Model	CLI Identification
SCBE3-MX	SCBE3-MX-S

```
user@host> show chassis hardware | match SCB
```

```
Item  Version  Part Number  Serial Number  Description
CB0   REV 07  710-021523  ABBC8281     MX SCB
CB1   REV 07  710-021523  ABBC8323     MX SCB
CB2   REV 07  710-021523  ABBD1410     MX SCB
```

```
user@host> show chassis hardware models | match SCBE
```

```
Item  Version  Part Number  Serial Number  Description
CB0   REV 02  750-031391  YE8505     Enhanced MX SCB
CB1   REV 07  710-031391  YL6769     Enhanced MX SCB
CB2   REV 07  710-031391  YE8492     Enhanced MX SCB
```

```
user@host> show chassis hardware models | match SCBE2
```

```
Item  Version  Part Number  Serial Number  Description
CB0   REV 01  750-062572  CAGN2123     SCBE2-MX-S
CB1   REV 07  750-062572  CAGN2456     SCBE2-MX-S
CB2   REV 07  750-062572  CAGN2789     SCBE2-MX-S
```

```
user@host> show chassis hardware models | match SCBE3
```

```
Item          Version  Part number  Serial number  FRU model number
CB 0          REV 23   750-070866  CALH6007      SCBE3-MX-S
CB 1          REV 23   750-070866  CALH6017      SCBE3-MX-S
CB 2          REV 23   750-070866  CALH6015      SCBE3-MX-S
```

CHAPTER 2

Site Planning, Preparation, and Specifications

- [MX240 Site Preparation Checklist on page 141](#)
- [MX240 Site Guidelines and Requirements on page 142](#)
- [MX240 Power Planning on page 148](#)
- [MX240 Network Cable and Transceiver Planning on page 159](#)
- [MX240 Management and Console Port Specifications and Pinouts on page 163](#)

MX240 Site Preparation Checklist

The checklist in [Table 75 on page 141](#) summarizes the tasks you must perform when preparing a site for router installation.

Table 75: Site Preparation Checklist

Item or Task	For More Information	Performed By	Date
Verify that environmental factors such as temperature and humidity do not exceed router tolerances.	"MX240 Router Environmental Specifications" on page 144		
Select the type of rack or cabinet.	"MX240 Router Rack Requirements" on page 144, "MX240 Router Cabinet Size and Clearance Requirements" on page 147		
Plan rack or cabinet location, including required space clearances.	"MX240 Router Rack Requirements" on page 144, "MX240 Router Clearance Requirements for Airflow and Hardware Maintenance" on page 146, "MX240 Router Cabinet Size and Clearance Requirements" on page 147		
If a rack is used, secure rack to floor and building structure.	"MX240 Router Rack Requirements" on page 144		
Acquire cables and connectors.			

Table 75: Site Preparation Checklist (continued)

Item or Task	For More Information	Performed By	Date
Locate sites for connection of system grounding.	"MX240 Chassis Grounding Specifications" on page 53		
Measure distance between external power sources and router installation site.			
Calculate the optical power budget and optical power margin.	"Calculating Power Budget and Power Margin for Fiber-Optic Cables" on page 161		

- Related Documentation**
- [MX240 Router Rack Requirements on page 144](#)
 - [MX240 Router Clearance Requirements for Airflow and Hardware Maintenance on page 146](#)

MX240 Site Guidelines and Requirements

- [MX240 Router Physical Specifications on page 142](#)
- [MX240 Router Environmental Specifications on page 144](#)
- [MX240 Router Rack Requirements on page 144](#)
- [MX240 Router Clearance Requirements for Airflow and Hardware Maintenance on page 146](#)
- [MX240 Router Cabinet Size and Clearance Requirements on page 147](#)
- [MX240 Router Cabinet Airflow Requirements on page 147](#)

MX240 Router Physical Specifications

Table 76 on page 142 summarizes the physical specifications for the router chassis.

Table 76: Physical Specifications

Description	Weight	Width	Depth	Height
Chassis dimensions	Chassis with midplane, fan tray, air filter: 52 lb (23.6 kg) Maximum configuration: 128 lb (58.1 kg)	17.45 in. (44.3 cm)	24.5 in. (62.2 cm) (from front-mounting bracket to chassis rear) Total depth: 27.75 in. (70.5 cm)	8.71 in. (22.1 cm)
Routing Engine (RE-S-1800)	2.4 lb (1.1 kg)	11 in. (27.9 cm)	7.75 in. (19.7 cm)	1.25 in. (3.2 cm)
Routing Engine (RE-S-X6-64G)	2.69 lb (1.18 kg)	10.7 in. (27.18 cm)	7.47 in. (18.97 cm)	1.19 in. (3.02 cm)

Table 76: Physical Specifications (continued)

Description	Weight	Width	Depth	Height
SCB	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
SCBE	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
SCBE2	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
DPC	Maximum up to 14.5 lb (6.6 kg) Blank panel in DPC slot: 9 lb (4.1 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
FPC	FPC2: 13 lb (5.9 kg) FPC3: 14 lb (6.5 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	2.5 in. (6.4 cm)
PIC	2 lb (0.9 kg)	7.75 in. (28.3 cm)	11.125 in. (19.7 cm)	4.125 in. (10.5 cm)
MPC (fixed configuration)	18.35 lb (8.3 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
MPC (without MICs)	14 lb (6.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
MIC	Maximum up to 1.2 lb (0.54 kg)	6.25 in. (15.9 cm)	6.8 in. (17.3 cm)	1.25 in. (3.2 cm)
Craft interface	1.1 lb (0.5 kg)	21.25 in. (54 cm)	8.5 in. (21.6 cm)	6.25 in. (15.9 cm)
Fan tray	4.2 lb (1.9 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.5 in. (3.8 cm)
Air filter	1 lb (0.5 kg)	0.31 in. (0.8 cm)	22.23 in. (56.5 cm)	5 in. (12.7 cm)
DC power supply	3.8 lb (1.7 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
High-capacity DC power supply	6.2 lb (2.81 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
AC power supply	5 lb (2.3 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
High-capacity AC power supply	6.6 lb (2.99 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)

- See Also**
- [MX240 System Overview on page 27](#)
 - [MX240 Chassis Description on page 30](#)
 - [MX240 Chassis Lifting Guidelines on page 382](#)

MX240 Router Environmental Specifications

Table 77 on page 144 specifies the environmental specifications required for normal router operation. In addition, the site should be as dust-free as possible.

Table 77: Routers Environmental Specifications

Description	Value
Altitude	No performance degradation to 10,000 ft (3048 m)
Relative humidity	Normal operation ensured in relative humidity range of 5% to 90%, noncondensing
Temperature	Normal operation ensured in temperature range of 32°F (0°C) to 104°F (40°C) Nonoperating storage temperature in shipping container: –40°F (–40°C) to 158°F (70°C)
Seismic	Designed to meet Telcordia Technologies Zone 4 earthquake requirements
Maximum thermal output	AC power: 7161 BTU/hour (2100 W) DC power: 5074 BTU/hour (1488 W)



NOTE: Install the router only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.

- See Also**
- [Routine Maintenance Procedures for the MX240 Router on page 217](#)
 - *General Safety Guidelines for Juniper Networks Devices*
 - *General Safety Warnings for Juniper Networks Devices*
 - [Compliance Statements for Environmental Requirements on page 410](#)

MX240 Router Rack Requirements


The router can be installed in many types of racks, including four-post (telco) racks and open-frame racks.

The router can be installed in many types of racks, including four-post (telco) racks and open-frame racks. An example of an open-frame rack appears in [Figure 42 on page 146](#). [Table 78 on page 145](#) summarizes rack requirements and specifications for an MX240 Router.

Table 78: Rack Requirements and Specifications for an MX240 Router

Rack Requirement	Guidelines
Rack type and mounting bracket hole spacing	<p>Use a four-post rack or a two-post rack. You can mount the router on any four-post or two-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75-in./4.44-cm) increments and that meets the size and strength requirements specified in this table.</p> <p>A U is the standard rack unit defined <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronic Components Industry Association (ECIA).</p>
Rack size and strength	<ul style="list-style-type: none"> • Ensure that the rack is a 19-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association. • Ensure that the rack is one of the following standard lengths: <ul style="list-style-type: none"> • 23.62 in. (600 mm) • 30.0 in. (762 mm) • 31.5 in. (800 mm) • The rack rails must be spaced widely enough to accommodate the router chassis's external dimensions: 8.71 in. (221 mm) high, 24.5 in. (622 mm) deep, and 17.45 in. (443 mm) wide. The spacing of rails and adjacent racks must also allow for the clearances around the router and rack that are specified in "MX240 Router Clearance Requirements for Airflow and Hardware Maintenance" on page 146. • The chassis height of 8.71 in. (22.1 cm) is approximately 5 U. A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association. You can stack several MX240 Router units in a rack that has sufficient usable vertical space. • The rack must be strong enough to support the weight of the fully configured router, up to 128 lb (58.1 kg). If you stack multiple fully configured routers in one rack, it must be capable of supporting the combined weight of the routers. • Ensure that the spacing of rails and adjacent racks allows for the proper clearance around the switch and rack as specified in "MX240 Router Clearance Requirements for Airflow and Hardware Maintenance" on page 146.
Rack connection to the building structure	<ul style="list-style-type: none"> • Secure the rack to the building structure. • If earthquakes are a possibility in your geographical area, secure the rack to the floor. • Secure the rack to the ceiling brackets as well as wall or floor brackets for maximum stability.

Figure 42: Typical Open-Frame Rack

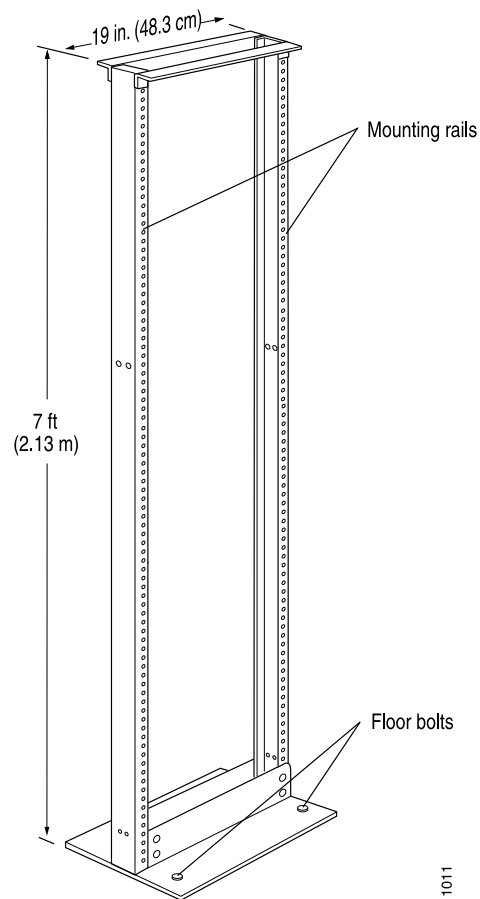

- See Also**
- [Installing the MX240 Router Mounting Hardware for a Rack or Cabinet on page 170](#)
 - [Installation Safety Warnings for Juniper Networks Devices](#)

MX240 Router Clearance Requirements for Airflow and Hardware Maintenance


When planning the installation site, allow sufficient clearance around the rack (see [Figure 43 on page 147](#)):

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. Allow at least 8 in. (20.3 cm) of clearance between side-cooled routers. Allow 5.5 in. (14 cm) between the side of the chassis and any non-heat-producing surface such as a wall.
- For service personnel to remove and install hardware components, there must be adequate space at the front and back of the router. At least 24 in. (61 cm) is required both in front of and behind the router. NEBS GR-63 recommends that you allow at least 30 in. (72.6 cm) in front of the rack and 24 in. (61.0 cm) behind the rack.

Airflow must always be from front to back with respect to the rack. If the device has side to rear airflow, then provisions must be made to ensure that fresh air from the

front of the rack is supplied to the inlets, and exhaust exits the rear of the rack. The device must not interfere with the cooling of other systems in the rack. Fillers must be used as appropriate in the rack to ensure there is no recirculation of heated exhaust air back to the front of the rack. Care must also be taken around cables to ensure that no leakage of air in situations where recirculation may result.

Figure 43: Chassis Dimensions and Clearance Requirements

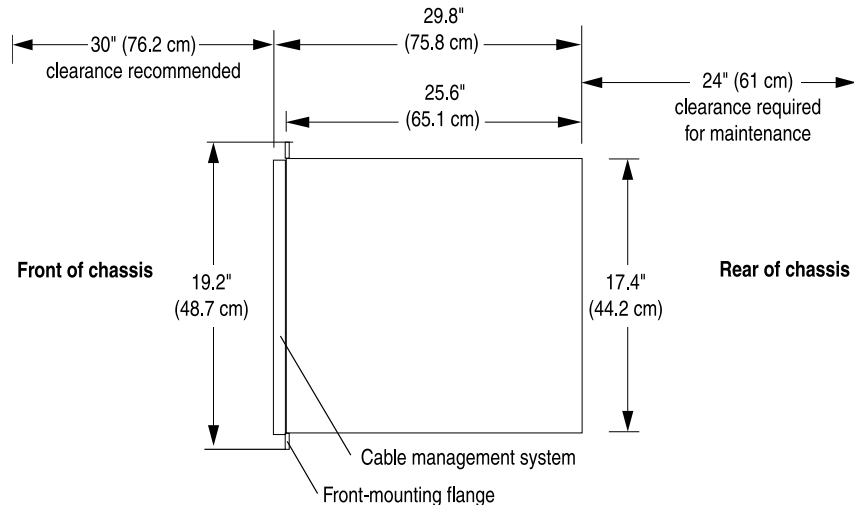

MX240 Router Cabinet Size and Clearance Requirements

The minimum-sized cabinet that can accommodate the router is 482-mm wide and 800-mm deep. A cabinet larger than the minimum requirement provides better airflow and reduces the chance of overheating. To accommodate a single router, the cabinet must be at least 13 U high. If you provide adequate cooling air and airflow clearance, you can stack several routers in a cabinet that has sufficient usable vertical space. Each router requires 5 U.

The minimum total clearance inside the cabinet is 30.7 in. (780 mm) between the inside of the front door and the inside of the rear door.


MX240 Router Cabinet Airflow Requirements

Before you install the router in a cabinet, you must ensure that ventilation through the cabinet is sufficient to prevent overheating. Consider the following requirements to when planning for chassis cooling:

- Ensure that the cool air supply you provide through the cabinet can adequately dissipate the thermal output of the router.
- Ensure that the cabinet allows the chassis hot exhaust air to exit from the cabinet without recirculating into the router. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. For an illustration of chassis airflow, see [Figure 44 on page 148](#).

- Install the router as close as possible to the front of the cabinet so that the cable management brackets just clear the inside of the front door. This maximizes the clearance in the rear of the cabinet for critical airflow.
- Route and dress all cables to minimize the blockage of airflow to and from the chassis.

Figure 44: Airflow Through the Chassis

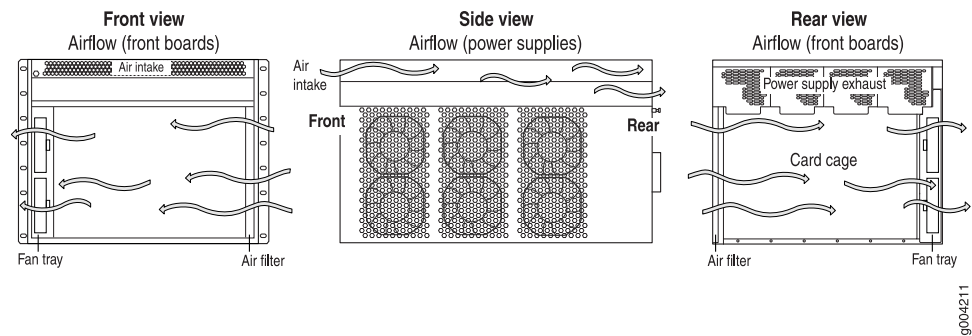

MX240 Power Planning

- [Power Requirements for an MX240 Router on page 148](#)
- [Calculating Power Requirements for MX240 Routers on page 156](#)

Power Requirements for an MX240 Router

The following tables list the MX240 component power requirements. [Table 79 on page 148](#) lists the MX240 base system power requirement. [Table 80 on page 149](#) lists the FRU power requirements for Switch Control Boards (SCBs), Routing Engines, Modular Port Concentrators (MPCs), Modular Interface Cards (MICs), and Dense Port Concentrators (DPCs).

Table 79: MX240 Common Component Power Requirements

Component	Maximum Power Requirement (Watts)
Base system	40 W
Normal-capacity cooling system	70 W
High-capacity cooling system	85 W



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 80: FRU Power Requirements

Component	Part Number	Maximum Power Requirement
Switch Control Boards (SCB)		
<i>SCB-MX</i>	SCB-MX (applies to MX240, MX480, and MX960)	150 W
<i>SCBE-MX</i>	SCBE-MX (applies to MX240, MX480, and MX960)	160 W at 55° C 130 W at 40° C 120 W at 25° C
<i>SCBE2-MX</i>	SCBE2-MX (applies to MX240, MX480, and MX960)	185 W at 55° C 160 W at 40° C 155 W at 25° C
<i>SCBE3-MX</i>	SCBE3-MX (applies to MX240, MX480, and MX960)	275 W at 55° C 260 W at 40° C 245 W at 25° C
Routing Engines		
Routing Engines	RE-S-1300-2048 RE-S-1800X2-8G RE-S-1800X4-8G RE-S-1800X2-16G RE-S-1800X4-16G RE-S-1800X4-32G RE-S-2000-4096 RE-S-X6-64G	90 W
Fixed Configuration Modular Port Concentrators (MPC)		
<i>16x10GE MPC</i>	MPC-3D-16XGE-SFPP MPC-3D-16XGE-SFPP-R-B	440 W at 55° C ambient 423 W at 25° C ambient
<i>Multiservices MPC</i>	MS-MPC-128G	590 W

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
32x10GE MPC4E	MPC4E-3D-32XGE-SFPP	610 W With optics: 607 W at 55° C, with SFPP ZR optics 584 W at 40° C, with SFPP ZR optics 565 W at 25° C, with SFPP ZR optics
2x100GE + 8x10GE MPC4E	MPC4E-3D-2CGE-8XGE	610 W With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics 584 W at 40° C, with SFPP ZR and CFP LR4 optics 565 W at 25° C, with SFPP ZR and CFP LR4 optics
6x40GE + 24x10GE MPC5E	MPC5E-40G10G	With optics: 607 W at 55° C
6x40GE + 24x10GE MPC5EQ	MPC5EQ-40G10G	541 W at 40° C 511 W at 25° C
2x100GE + 4x10GE MPC5E	MPC5E-100G10G	With optics: 607 W at 55° C
2x100GE + 4x10GE MPC5EQ	MPC5EQ-100G10G	541 W at 40° C 511 W at 25° C
MPC7E (Multi-Rate)	MPC7E-MRATE	With optics: 545 W at 55° C 465 W at 40° C 440 W at 25° C
Modular Port Concentrators (MPC)		

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>MPC1</i>	MX-MPC1-3D	165 W
<i>MPC1E</i>	MX-MPC1E-3D	With MICs and optics: 239 W at 55° C 227 W at 40° C 219 W at 25° C
<i>MPC1 Q</i>	MX-MPC1-3D-Q	175 W
<i>MPC1E Q</i>	MX-MPC1E-3D-Q	With MICs and optics: 249 W at 55° C 237 W at 40° C 228 W at 25° C
<i>MPC2</i>	MX-MPC2-3D	274 W
<i>MPC2E</i>	MX-MPC2E-3D	With MICs and optics: 348 W at 55° C 329 W at 40° C 315 W at 25° C
<i>MPC2 Q</i>	MX-MPC2-3D-Q	294 W
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	With MICs and optics: 368 W at 55° C
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	347 W at 40° C
<i>MPC2E EQ</i>	MX-MPC2E-3D-EQ	333 W at 25° C
<i>MPC2E P</i>	MX-MPC2E-3D-P	294 W With MICs and optics: 368 W at 55° C 347 W at 40° C 333 W at 25° C
<i>MPC2E NG</i>	MPC2E-3D-NG	474 W With MICs and optics: 474 W at 55° C 417 W at 40° C 400 W at 25° C

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>MPC2E NG Q</i>	MPC2E-3D-NG-Q	529 W With MICs and optics: 529 W at 55° C 460 W at 40° C 438 W at 25° C
<i>MPC3E</i>	MX-MPC3E-3D	440W With MICs and optics: 500 W at 55° C, two 40 W MICs 485 W at 40° C, two CFP MICs with LR4 optics 473 W at 25° C, two CFP MICs with LR4 optics
<i>MPC3E NG</i>	MPC3E-3D-NG	534 W With MICs and optics: 534 W at 55° C 485 W at 40° C 461 W at 25° C
<i>MPC3E NG Q</i>	MPC3E-3D-NG-Q	583 W With MICs and optics: 583 W at 55° C 532 W at 40° C 503 W at 25° C
Modular Interface Cards (MIC)		
<i>ATM MIC with SFP</i>	MPC4E-3D-2CGE-8XGE	610 W With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics 584 W at 40° C, with SFPP ZR and CFP LR4 optics 565 W at 25° C, with SFPP ZR and CFP LR4 optics

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20-GE-SFP	37 W
10-Gigabit Ethernet MIC with XFP	2-Port: MIC-3D-2XGE-XFP	2-Port: 29 W
	4-Port: MIC-3D-4XGE-XFP	4-Port: 37 W
<i>10-Port Gigabit Ethernet MIC with SFPP</i>	MIC3-3D-10XGE-SFPP	24.2 W at 55° C with SR and LR optics
		29.8 W at 55° C with ER optics
		29.8 W at 40° C with ZR optics
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFPP	18 W
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	40 W
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	104 W
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	20 W
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	57 W
<i>100-Gigabit DWDM OTN MIC with CFP2</i>	MIC3-100G-DWDM	With optics: 91 W at 55° C
		83 W at 25° C
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	With optics: 91 W at 55° C
		83 W at 25° C
<i>Multiservices MIC</i>	MS-MIC-16G	60 W

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	4-Port: MIC-3D-4OC3OC12-1OC48	4-Port: 24 W at 55° C 22.75 W at 40° C 21.5 W at 25° C
	8-Port: MIC-3D-8OC3OC12-4OC48	8-Port: 29 W at 55° C 27.75 W at 40° C 26.5 W at 25° C
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	41 W at 55° C 38.5 W at 40° C 36 W at 25° C
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	4-Port: MIC-3D-4CHOC3-2CHOC12	4-Port: 41 W at 55° C 40 W at 40° C 39 W at 25° C
	8-Port: MIC-3D-8CHOC3-4CHOC12	8-Port: 52 W at 55° C 50.5 W at 40° C 49 W at 25° C
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	41 W
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3	36 W at 55° C
	MIC-3D-8CHDS3-E3-B	35 W at 40° C 34 W at 25° C
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	29.08 W at 55° C 27.84 W at 40° C 26.55 W at 25° C

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	36.48 W at 55° C
		35.04 W at 40° C
		33.96 W at 25° C
Dense Port Concentrators (DPC)		
<i>Gigabit Ethernet DPC with SFP</i>	DPC-R-40GE-SFP	335 W
<i>Gigabit Ethernet Enhanced DPC with SFP</i>	DPCE-R-40GE-SFP	335 W
	DPCE-X-40GE-SFP	
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i> <i>Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP</i>	DPCE-R-Q-40GE-SFP	365 W
	DPCE-X-Q-40GE-SFP	
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-20GE-SFP	200 W
<i>10-Gigabit Ethernet DPC with XFP</i>	DPC-R-4XGE-XFP	310 W
<i>10-Gigabit Ethernet Enhanced DPC with XFP</i>	DPCE-R-2XGE-XFP	175 W
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-4XGE-XFP	310 W
	DPCE-X-4XGE-XFP	
<i>10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP</i>	DPCE-R-Q-4XGE-XFP	330 W
	DPCE-X-Q-4XGE-XFP	
<i>Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP</i>	DPCE-R-20GE-2XGE	333 W
	DPCE-X-20GE-2XGE	
<i>Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP</i>	DPCE-R-Q-20GE-2XGE	335 W

Table 80: FRU Power Requirements (continued)

Component	Part Number	Maximum Power Requirement
<i>Tri-Rate Enhanced DPCor</i>	DPCE-R-40GE-TX	320 W
<i>Tri-Rate Enhanced Ethernet Services DPC</i>	DPCE-X-40GE-TX	
<i>Multiservices DPC</i>	MS-DPC	265 W
Flexible PIC Concentrators (FPC)		
FPC Type 2	MX-FPC2	190 W (with PICs and optics)
FPC Type 3	MX-FPC3	265 W (with PICs and optics)

- See Also**
- [Calculating Power Requirements for MX240 Routers on page 156](#)
 - [AC Power Supply Electrical Specifications for the MX240 Router on page 44](#)
 - [DC Power Supply Electrical Specifications for the MX240 Router on page 51](#)

Calculating Power Requirements for MX240 Routers

The information in this topic helps you determine which power supplies are suitable for various configurations, as well as which power supplies are not suitable because output power is exceeded. You determine suitability by subtracting the total power draw from the maximum output of the power supplies. Afterward, the required input power is calculated. Finally, you calculate the thermal output. A sample configuration is provided in [Table 81 on page 157](#).

We recommend that you provision power according to the maximum input current listed in the power supply electrical specifications (see [“AC Power Supply Electrical Specifications for the MX240 Router” on page 44](#) and [“DC Power Supply Electrical Specifications for the MX240 Router” on page 51](#)).

Use the following procedures to calculate the power requirement:

1. Calculate the power requirement.
2. Evaluate the power budget.
3. Calculate input power.
4. Calculate thermal output (BTUs) for cooling requirements.

The following sample configuration shows an MX240 router with:

- Two 16-port 10-Gigabit Ethernet MPCs with SFP+
- Two SCBs with two (redundant) RE-1800x2 routing engines
- High-capacity cooling system



NOTE: The high-capacity cooling system satisfies cooling requirements of MPCs, and must be used for proper cooling.

1. Calculate the power requirements (usage) using the values in “Power Requirements for an MX240 Router” on page 148 as shown in Table 81 on page 157.

Table 81: Sample Power Requirements for an MX240 Router

Chassis Component	Part Number	Power Requirement
Base system	MX240BASE-AC-HIGH	40 W
High-capacity cooling system	FANTRAY-MX240-HC	85 W
MPC - Slot 2 -	MPC-3D-16XGE-SFPP-R-B	440 W
MPC - Slot 1	MPC-3D-16XGE-SFPP-R-B	440 W
SCB 1/Slot 0	SCBE2-MX with	185 W
	RE-S-1800X2-8G	90 W
SCB 0	SCBE2-MX with	185 W
	RE-S-1800X2-8G	90 W
Total output power		1555 W
Output power excluding cooling system		1470 W

2. Evaluate the power budget. In this step, we check the total output power against the maximum output power of available power supply options.



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 82 on page 158 lists the power supplies, their maximum output power, and unused power (or a power deficit). See “DC Power Supply Electrical Specifications for the MX240 Router” on page 51 and “AC Power Supply Electrical Specifications for the MX240 Router” on page 44 for more information about the MX240 power supply electrical specifications.

Table 82: Calculating Power Budget

Power Supply	Maximum System Output Power	Unused Power ¹
MX240 AC Normal-capacity (low-line)	2054 W	654 W
MX240 AC Normal-capacity (high-line)	1590 W	190 W
MX240 AC High-capacity (low-line)	2334 W	934 W
MX240 AC High-capacity (high-line)	2050 W	650 W
MX240 DC Normal-capacity	1600 W	200 W
MX240 DC High-capacity (DIP=0)	2400 W	1000 W
MX240 DC High-capacity (DIP=1)	2600 W	1200 W

¹ For this configuration, output power excluding the cooling system is 1400 W.

- Calculate input power. In this step, the input power requirements for the example configuration are calculated. To do this, divide the total output requirement by the efficiency of the power supply as shown in Table 83 on page 158.

Table 83: Calculating Input Power Examples

Power Supply	Power Supply Efficiency ¹	Input Power Requirement ²
MX240 AC Normal-capacity (high-line)	85 %	1747 W
MX240 AC High-capacity (high-line)	89 %	1669 W
MX240 DC Normal-capacity	~98 %	1515 W
MX240 DC High-capacity	~98 %	1515 W

¹ These values are at full load and nominal voltage.

² For this configuration, total power is 1485 W.

- Calculate thermal output (BTUs). To calculate this, multiply the input power requirement (in watts) by 3.41. See Table 84 on page 159.

Table 84: Calculating Thermal Output

Power Supply	Thermal Output (BTUs per hour)
MX240 AC Normal-capacity (high-line)	$1747 * 3.41 = 5957$ BTU/hr
MX240 AC High-capacity (high-line)	$1669 * 3.41 = 5576$ BTU/hr
MX240 DC Normal-capacity	$1515 * 3.41 = 5166$ BTU/hr
MX240 DC High-capacity	$1515 * 3.41 = 5166$ BTU/hr

- See Also**
- Power Requirements for an MX240 Router on page 148
 - AC Power Supply Electrical Specifications for the MX240 Router on page 44
 - DC Power Supply Electrical Specifications for the MX240 Router on page 51

MX240 Network Cable and Transceiver Planning

- Determining Transceiver Support and Specifications for M Series and T Series Routers on page 159
- Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 160
- Calculating Power Budget and Power Margin for Fiber-Optic Cables on page 161
- Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 163

Determining Transceiver Support and Specifications for M Series and T Series Routers

You can find information about the pluggable transceivers supported on your Juniper Networks device by using the Hardware Compatibility Tool. In addition to transceiver and connector type, the optical and cable characteristics—where applicable—are documented for each transceiver. The Hardware Compatibility Tool allows you to search by product, displaying all the transceivers supported on that device, or category, displaying all the transceivers by interface speed or type. The Hardware Compatibility Tool is located at <https://apps.juniper.net/hct/>.

Some transceivers support additional monitoring using the operational mode CLI command **show interfaces diagnostics optics**. Use the Hardware Compatibility Tool to determine if your transceiver supports monitoring. See the Junos OS documentation for your device for a description of the monitoring fields.



CAUTION: If you face a problem running a Juniper Networks device that uses a third-party optic or cable, the Juniper Networks Technical Assistance Center (JTAC) can help you diagnose the source of the problem. Your JTAC engineer might recommend that you check the third-party optic or cable and potentially replace it with an equivalent Juniper Networks optic or cable that is qualified for the device.

Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

This topic describes signal loss, attenuation, and dispersion in fiber-optic cable.

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cable on page 160](#)
- [Attenuation and Dispersion in Fiber-Optic Cable on page 160](#)

Signal Loss in Multimode and Single-Mode Fiber-Optic Cable

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent sources. They spray varying wavelengths of light into the multimode fiber, which reflects the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding, higher-order mode loss results. Together these factors limit the transmission distance of multimode fiber compared with single-mode fiber.

Single-mode fiber is so small in diameter that rays of light can reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared with multimode fiber, single-mode fiber has higher bandwidth and can carry signals for longer distances.

Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

Attenuation and Dispersion in Fiber-Optic Cable

Correct functioning of an optical data link depends on modulated light reaching the receiver with enough power to be demodulated correctly. *Attenuation* is the reduction in power of the light signal as it is transmitted. Attenuation is caused by passive media components, such as cables, cable splices, and connectors. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode and single-mode transmission. An efficient optical data link must have enough light available to overcome attenuation.

Dispersion is the spreading of the signal over time. The following two types of dispersion can affect an optical data link:

- Chromatic dispersion—Spreading of the signal over time resulting from the different speeds of light rays.
- Modal dispersion—Spreading of the signal over time resulting from the different propagation modes in the fiber.

For multimode transmission, modal dispersion, rather than chromatic dispersion or attenuation, usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion rather than modal dispersion limits maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be less than the limits specified for the type of link in Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

Calculating Power Budget and Power Margin for Fiber-Optic Cables

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

1. [Calculating Power Budget for Fiber-Optic Cable on page 161](#)
2. [Calculating Power Margin for Fiber-Optic Cable on page 161](#)

Calculating Power Budget for Fiber-Optic Cable

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget, which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of power budget (P_B), you assume minimum transmitter power (P_T) and minimum receiver sensitivity (P_R):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

Calculating Power Margin for Fiber-Optic Cable

After calculating a link's power budget, you can calculate the power margin (P_M), which represents the amount of power available after subtracting attenuation or link loss (LL) from the power budget (P_B). A worst-case estimate of P_M assumes maximum LL:

$$P_M = P_B - LL$$

P_M greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 85 on page 162](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

Table 85: Estimated Values for Factors Causing Link Loss

Link-Loss Factor	Estimated Link-Loss Value
Higher-order mode losses	Single mode—None Multimode—0.5 dB
Modal and chromatic dispersion	Single mode—None Multimode—None, if product of bandwidth and distance is less than 500 MHz-km
Connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	Single mode—0.5 dB/km Multimode—1 dB/km

The following sample calculation for a 2-km-long multimode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 85 on page 162](#) to calculate link loss (LL) as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km (1 dB/km)} - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 85 on page 162](#) to calculate link loss (LL) as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km (0.5 dB/km)} - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both examples, the calculated power margin is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

Routing Engine Interface Cable and Wire Specifications for MX Series Routers

Table 86 on page 163 lists the specifications for the cables that connect to management ports and the wires that connect to the alarm relay contacts.



NOTE: In routers where the Routing Engine (RE) and Control Board (CB) are integrated into a single board, a CB-RE is known as Routing and Control Board (RCB). The RCB is a single FRU that provides RE and CB functionality.

Table 86: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces

Port	Cable Specification	Cable/Wire Supplied	Maximum Length	Router Receptacle
Routing Engine console or auxiliary interface	RS-232 (EIA-232) serial cable	1.83-m length with RJ-45/DB-9 connectors	1.83 m	RJ-45 female
Routing Engine Ethernet interface	Category 5 cable or equivalent suitable for 100Base-T operation	One 4.57-m length with RJ-45/RJ-45 connectors	100 m	RJ-45 autosensing
Alarm relay contacts	Wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm ²)	No	None	—

MX240 Management and Console Port Specifications and Pinouts

- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port on page 163](#)
- [RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports on page 164](#)

RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port

The port on the Routing Engine labeled **ETHERNET** is an autosensing 10/100-Mbps Ethernet RJ-45 receptacle that accepts an Ethernet cable for connecting the Routing

Engine to a management LAN (or other device that supports out-of-band management). [Table 87 on page 164](#) describes the RJ-45 connector pinout.

Table 87: RJ-45 Connector Pinout for the Routing Engine ETHERNET Port

Pin	Signal
1	TX+
2	TX-
3	RX+
4	Termination network
5	Termination network
6	RX-
7	Termination network
8	Termination network

RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports

The ports on the Routing Engine labeled **AUX** and **CONSOLE** are asynchronous serial interfaces that accept an RJ-45 connector. The ports connect the Routing Engine to an auxiliary or console management device. [Table 88 on page 164](#) describes the RJ-45 connector pinout.

Table 88: RJ-45 Connector Pinout for the AUX and CONSOLE Ports

Pin	Signal	Description
1	RTS	Request to Send
2	DTR	Data Terminal Ready
3	TXD	Transmit Data
4	Ground	Signal Ground
5	Ground	Signal Ground
6	RXD	Receive Data
7	DSR/DCD	Data Set Ready
8	CTS	Clear to Send

CHAPTER 3

Initial Installation and Configuration

- [Installing an MX240 Router Overview on page 165](#)
- [Unpacking the MX240 Router on page 166](#)
- [Installing the MX240 Router on page 170](#)
- [Connecting the MX240 Router to Power on page 195](#)
- [Connecting the MX240 Router to the Network on page 206](#)
- [Initially Configuring the MX240 Router on page 211](#)

Installing an MX240 Router Overview

To install the MX240 router:

1. Prepare your installation site as described in “MX240 Site Preparation Checklist” on [page 141](#).
2. Review the safety guidelines and warnings.
 - *General Safety Guidelines for Juniper Networks Devices*
 - *General Safety Warnings for Juniper Networks Devices*
3. Unpack the router and verify the parts.
 - a. [Unpacking the MX240 Router on page 166](#)
 - b. [Verifying the MX240 Router Parts Received on page 168](#)
4. Install the mounting hardware.
 - [Installing the MX240 Router Mounting Hardware for a Rack or Cabinet on page 170](#)
 - [Moving the Mounting Brackets for Center-Mounting the MX240 Router on page 172](#)
5. Lift the router on to the rack. Because of the weight of the router, we recommend that you use a mechanical lift.
 - [Installing the MX240 Router By Using a Mechanical Lift on page 178](#)
 - [Installing the MX240 Chassis in the Rack Manually on page 189](#)

6. Connect cables to the network and external devices as described in *Connecting the MX240 Router to Management and Alarm Devices*.
7. Connect the grounding cable as described in “Grounding the MX240 Router” on page 196.
8. Connect the AC power cord or DC power cables:
 - [Powering On an AC-Powered MX240 Router on page 198](#)
 - [Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies on page 202](#)
9. Power on the router:
10. Perform the initial system configuration as described in “Initially Configuring the MX240 Router” on page 211.

- Related Documentation**
- [Definition of Safety Warning Levels](#)
 - [MX240 Router Physical Specifications on page 142](#)

Unpacking the MX240 Router

- [Tools and Parts Required to Unpack the MX240 Router on page 166](#)
- [Unpacking the MX240 Router on page 166](#)
- [Verifying the MX240 Router Parts Received on page 168](#)

Tools and Parts Required to Unpack the MX240 Router

To unpack the router and prepare for installation, you need the following tools:

- Phillips (+) screwdriver, number 2
- 1/2-in. or 13-mm open-end or socket wrench to remove bracket bolts from the shipping pallet
- Blank panels to cover any slots not occupied by a component

Unpacking the MX240 Router

The router is shipped in a wooden crate. A wooden pallet forms the base of the crate. The router chassis is bolted to this pallet. Quick Start installation instructions and a cardboard accessory box are also included in the shipping crate.

The shipping container measures 21 in. (53.3 cm) high, 23.5 in. (60.0 cm) wide, and 32.5 in. (82.5 cm) deep. The total weight of the container containing the router and accessories can range from 93 lb (42.2 kg) to 169 lb (76.7 kg).




NOTE: The router is maximally protected inside the shipping crate. Do not unpack it until you are ready to begin installation.

To unpack the router (see [Figure 45](#) on page 168):

1. Move the shipping crate to a staging area as close to the installation site as possible, where you have enough room to remove the components from the chassis. While the chassis is bolted to the pallet, you can use a forklift or pallet jack to move it.
2. Position the shipping crate with the arrows pointing up.
3. Open all the latches on the shipping crate.
4. Remove the front door of the shipping crate cover and set it aside.
5. Slide the remainder of the shipping crate cover off the pallet.
6. Remove the foam covering the top of the router.
7. Remove the accessory box and the Quick Start installation instructions.
8. Verify the parts received against the lists.
9. Remove the vapor corrosion inhibitor (VCI) packs attached to the pallet, being careful not to break the VCI packs open.
10. To remove the brackets holding the chassis on the pallet, use a 1/2-in. socket wrench and a number 2 Phillips screwdriver to remove the bolts and screws from the brackets.
11. Store the brackets and bolts inside the accessory box.
12. Save the shipping crate cover, pallet, and packing materials in case you need to move or ship the router at a later time.

Figure 45: Contents of the Shipping Crate

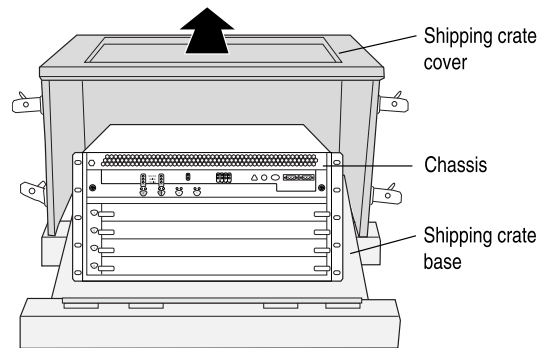

Verifying the MX240 Router Parts Received

A packing list is included in each shipment. Check the parts in the shipment against the items on the packing list. The packing list specifies the part numbers and descriptions of each part in your order.

If any part is missing, contact a customer service representative.

A fully configured router contains the router chassis with installed components, listed in [Table 89 on page 168](#), and an accessory box, which contains the parts listed in [Table 90 on page 169](#). The parts shipped with your router can vary depending on the configuration you ordered.

Table 89: Parts List for a Fully Configured Routers

Component	Quantity
Chassis, including midplane, craft interface, and rack-mounting brackets	1
DPCs	Up to 3
MPCs	Up to 3
FPC	Up to 1
Routing Engines	1 or 2
SCBs	1 or 2
DC power supplies	1 or 2
AC power supplies (220 V)	1 or 2
AC power supplies (110 V)	2 or 4
Fan tray	1

Table 89: Parts List for a Fully Configured Routers (continued)

Component	Quantity
Air filter	1
Air filter tray	1
Quick start installation instructions	1
Mounting shelf	1
Blank panels for slots without components installed	One blank panel for each slot not occupied by a component

Table 90: Accessory Box Parts List

Part	Quantity
Screws to mount chassis and small shelf	22
DC power terminal Lugs, 6-AWG	5
RJ-45-to-DB-9 serial cable to connect the router through the serial port	1
Terminal block plug, 3-pole, 5.08 mm spacing, 12A, to connect the router alarms	2
Label, accessories contents, MX240	1
USB flash drive with Junos OS	1
Read me first document	1
Affidavit for T1 connection	1
Juniper Networks Product Warranty	1
End User License Agreement	1
Document sleeve	1
3 in. x 5 in. pink bag	2
9 in. x 12 in. pink bag, ESD	2
Accessory box, 19 in. x 12 in. x 3 in.	1
Ethernet cable, RJ-45/RJ-45, 4-pair stranded UTP, Category 5E, 15'	1

Table 90: Accessory Box Parts List (continued)

Part	Quantity
ESD wrist strap with cable	1

Installing the MX240 Router

- [Installing the MX240 Router Mounting Hardware for a Rack or Cabinet on page 170](#)
- [Moving the Mounting Brackets for Center-Mounting the MX240 Router on page 172](#)
- [Tools Required to Install the MX240 Router with a Mechanical Lift on page 173](#)
- [Removing Components from the MX240 Router Before Installing it with a Lift on page 173](#)
- [Installing the MX240 Router By Using a Mechanical Lift on page 178](#)
- [Reinstalling Components in the MX240 Router After Installing it with a Lift on page 179](#)
- [Tools Required to Install the MX240 Router without a Mechanical Lift on page 184](#)
- [Removing Components from the MX240 Router Before Installing it without a Lift on page 184](#)
- [Installing the MX240 Chassis in the Rack Manually on page 189](#)
- [Reinstalling Components in the MX240 Router After Installing it without a Lift on page 191](#)

Installing the MX240 Router Mounting Hardware for a Rack or Cabinet

The router can be installed in a four-post rack or cabinet or an open-frame rack. Install the mounting hardware on the rack before installing the router.

Install the mounting shelf, which is included in the shipping container, before installing the router. We recommend that you install the mounting shelf because the weight of a fully loaded chassis can be up to 128 lb (58.1 kg).

[Table 91 on page 170](#) specifies the holes in which you insert cage nuts and screws to install the mounting hardware required (an X indicates a mounting hole location). The hole distances are relative to one of the standard U divisions on the rack. The bottom of all mounting shelves is at 0.04 in. (0.02 U) above a “U” division.

Table 91: Four-Post Rack or Cabinet Mounting Hole Locations

Hole	Distance Above U Division		Mounting Shelf
4	2.00 in. (5.1 cm)	1.14 U	X
3	1.51 in. (3.8 cm)	0.86 U	X
2	0.88 in. (2.2 cm)	0.50 U	X
1	0.25 in. (0.6 cm)	0.14 U	X

To install the mounting shelf on the front rails of a four-post rack or cabinet, or the rails of an open-frame rack:

1. If needed, install cage nuts in the holes specified in [Table 91 on page 170](#).
2. On the back of each rack rail, partially insert a mounting screw into the lowest hole specified in [Table 91 on page 170](#).
3. Install the small shelf on the back of the rack rails. Rest the bottom slot of each flange on a mounting screw.
4. Partially insert the remaining screws into the open holes in each flange of the small shelf (see [Figure 46 on page 171](#) or [Figure 47 on page 172](#)).
5. Tighten all the screws completely.

Figure 46: Installing the Front-Mounting Hardware for a Four-Post Rack or Cabinet


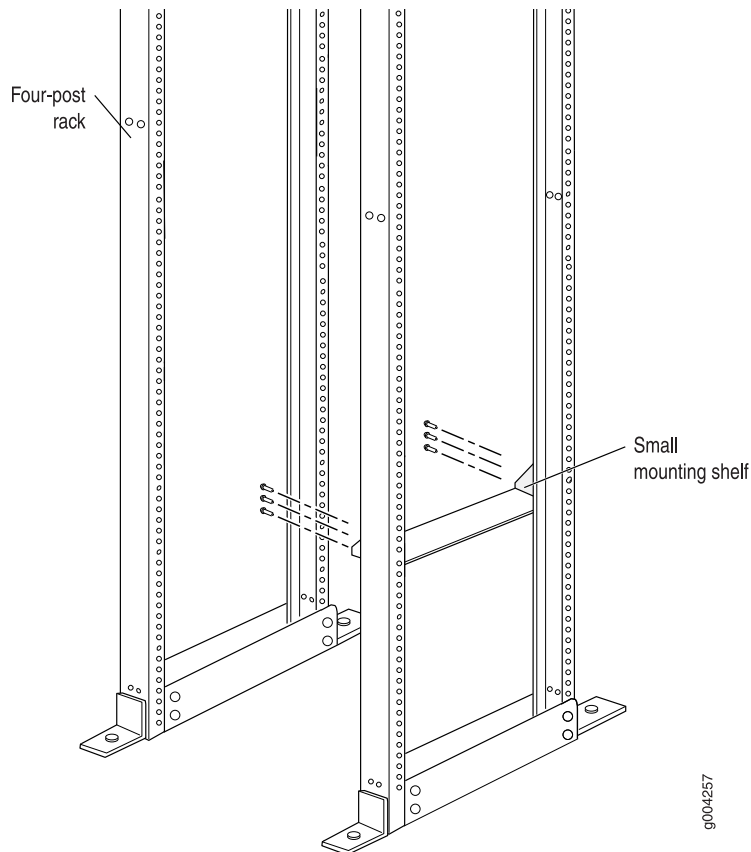


Figure 47: Installing the Mounting Hardware for an Open-Frame Rack

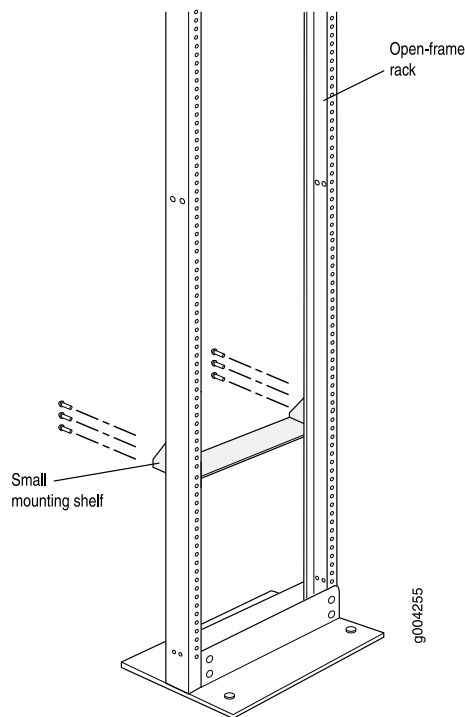

Moving the Mounting Brackets for Center-Mounting the MX240 Router

Two removable mounting brackets are attached to the mounting holes closest to the front of the chassis. You can move the pair of brackets to another position on the side of the chassis for center-mounting the router.

To move the mounting brackets from the front of the chassis toward the center of the chassis:

1. Remove the three screws at the top and center of the bracket.
2. Pull the top of the bracket slightly away from the chassis. The bottom of the bracket contains a tab that inserts into a slot in the chassis.
3. Pull the bracket away from the chassis so that the tab is removed from the chassis slot.
4. Insert the bracket tab into the slot in the bottom center of the chassis.
5. Align the bracket with the two mounting holes located toward the top center of the chassis.

There is no mounting hole in the center of the chassis that corresponds to the hole in the center of the bracket.

6. Insert the two screws at the top of the bracket and tighten each partially.

Two screws are needed for mounting the bracket on the center of the chassis. You do not need the third screw.

7. Tighten the two screws completely.
8. Repeat the procedure for the other bracket.

Tools Required to Install the MX240 Router with a Mechanical Lift

To install the router, you need the following tools:

- Mechanical lift
- Phillips (+) screwdriver, number 2
- 7/16-in. (11 mm) nut driver
- ESD grounding wrist strap

Removing Components from the MX240 Router Before Installing it with a Lift

To make the router light enough to install, you first remove most components from the chassis. The procedures in this section for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

1. [Removing the Power Supplies Before Installing the MX240 Router with a Lift on page 173](#)
2. [Removing the Fan Tray Before Installing the MX240 Router with a Lift on page 174](#)
3. [Removing the SCBs Before Installing the MX240 Router with a Lift on page 175](#)
4. [Removing the DPCs Before Installing the MX240 Router with a Lift on page 176](#)
5. [Removing the FPC Before Installing the MX240 Router with a Lift on page 177](#)

Removing the Power Supplies Before Installing the MX240 Router with a Lift


Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies (see [Figure 48 on page 174](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the DC circuit breaker on the power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Pull the power supply straight out of the chassis.

Figure 48: Removing a Power Supply Before Installing the Router

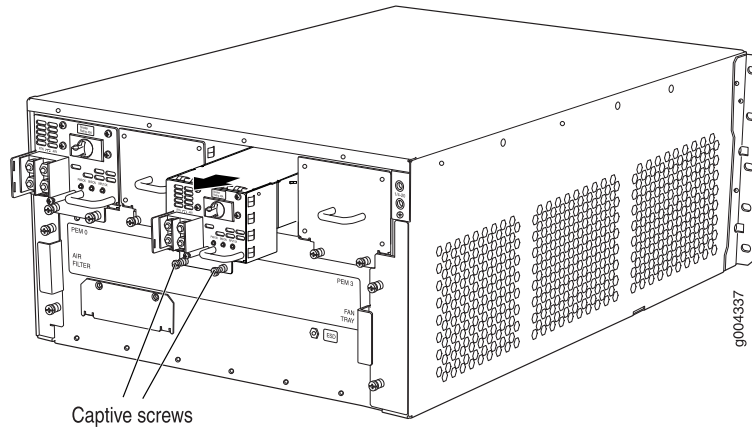


Removing the Fan Tray Before Installing the MX240 Router with a Lift

To remove the fan tray (see [Figure 49 on page 175](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle and pull it out approximately 1 to 3 inches.
4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it and pull the fan tray completely out of the chassis.

Figure 49: Removing the Fan Tray

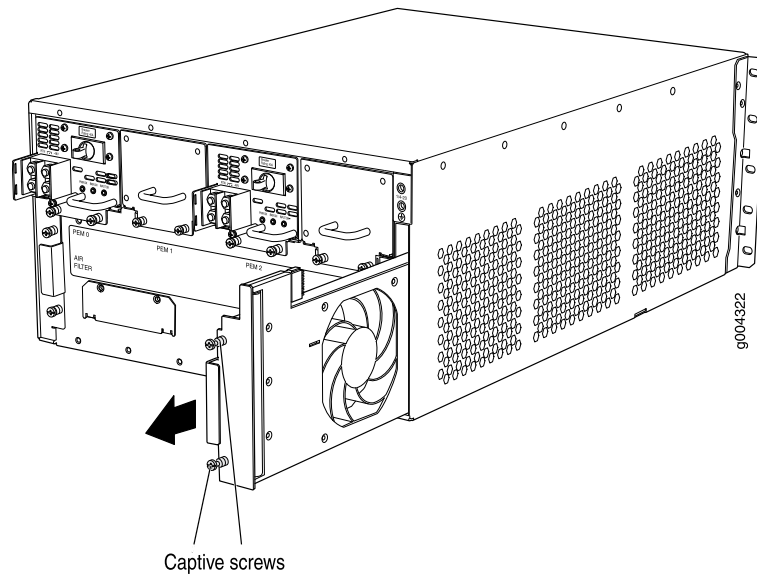

Removing the SCBs Before Installing the MX240 Router with a Lift

To remove the SCBs (see Figure 50 on page 176):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it and slide it completely out of the chassis. Place it on the antistatic mat.



CAUTION: Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for the second SCB.

Figure 50: Removing an SCB

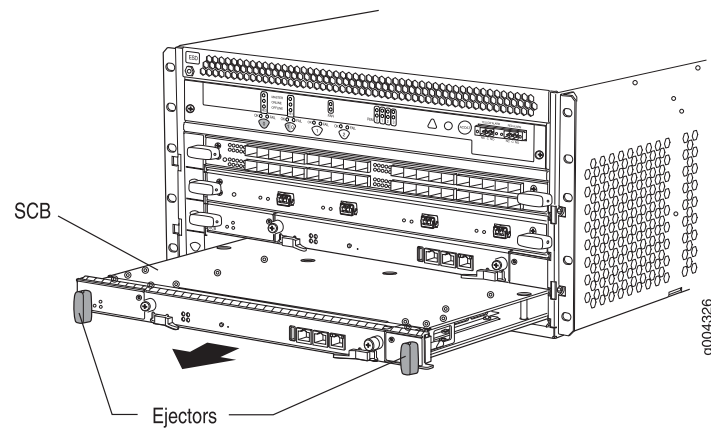

Removing the DPCs Before Installing the MX240 Router with a Lift

To remove a DPC (see [Figure 51 on page 177](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.




CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

Figure 51: Removing a DPC

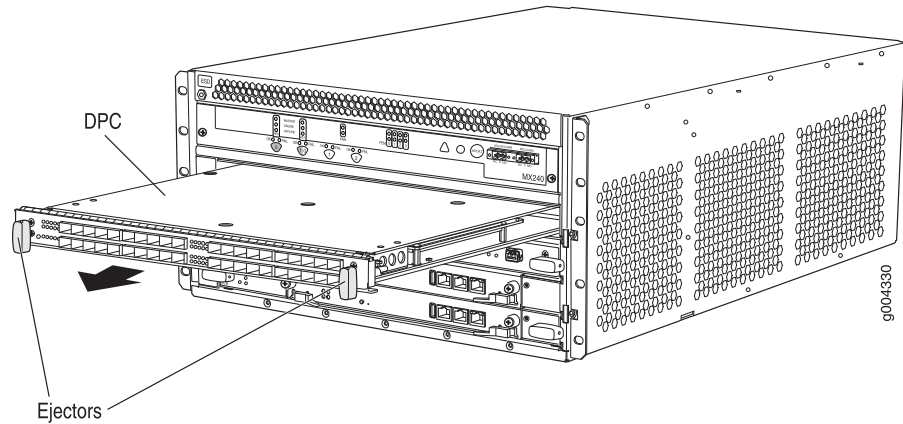

Removing the FPC Before Installing the MX240 Router with a Lift

To remove an FPC (see [Figure 52 on page 178](#)):


1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
3. Grasp the handles and slide the FPC straight out of the card cage halfway.
4. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 52: Removing an FPC

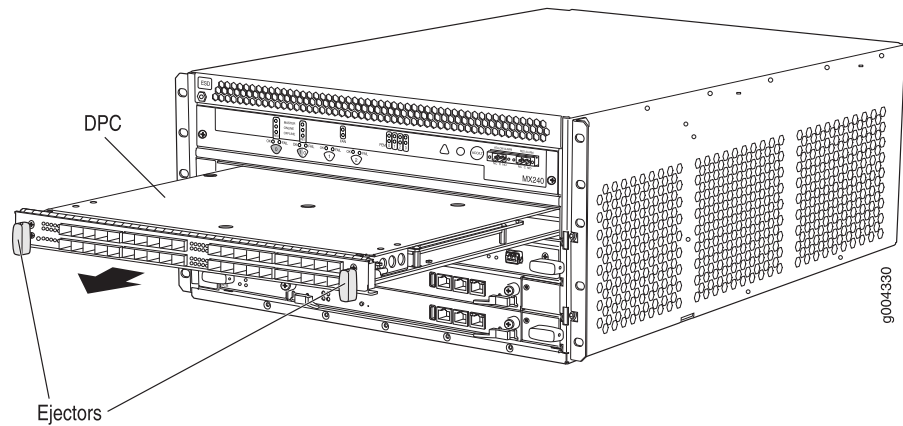

Installing the MX240 Router By Using a Mechanical Lift

Because of the router's size and weight—up to 128 lb (58.1 kg) depending on the configuration—we strongly recommend that you install the router using a mechanical lift. To make the router light enough to install with a lift, you must first remove most components from the chassis.




CAUTION: Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.

To install the router using a lift (see [Figure 53 on page 179](#)):

1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Load the router onto the lift, making sure it rests securely on the lift platform.
3. Using the lift, position the router in front of the rack or cabinet, centering it in front of the mounting shelf.
4. Lift the chassis approximately 0.75 in. above the surface of the mounting shelf and position it as close as possible to the shelf.
5. Carefully slide the router onto the mounting shelf so that the bottom of the chassis and the mounting shelf overlap by approximately two inches.
6. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.

7. Move the lift away from the rack.
8. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
9. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

Figure 53: Installing the Router in the Rack

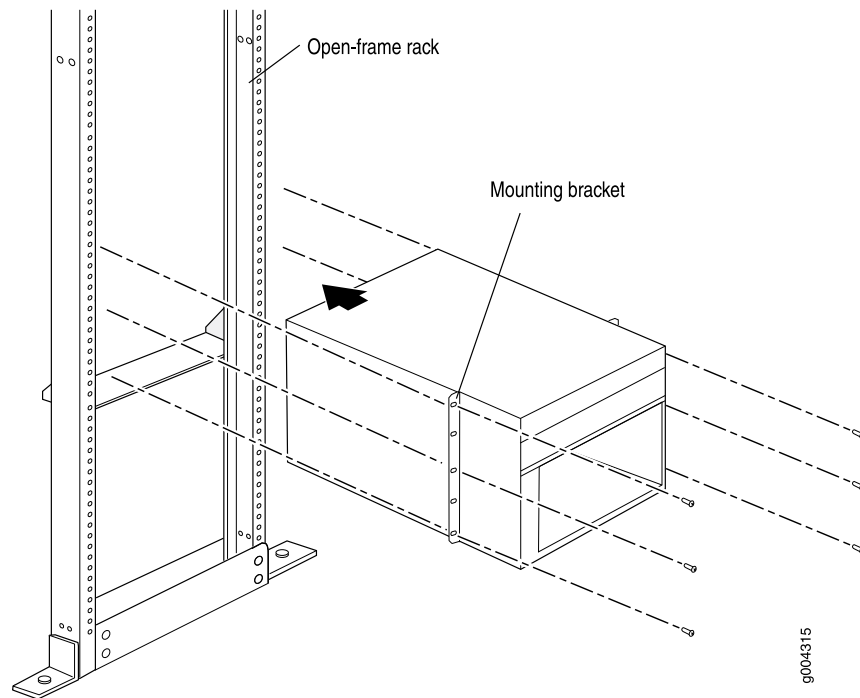

NOTE: This illustration depicts the router being installed in an open-frame rack. For an illustration of the mounting hardware required for a four-post open rack or open cabinet, see [“Installing the MX240 Router Mounting Hardware for a Rack or Cabinet”](#) on page 170.

Reinstalling Components in the MX240 Router After Installing it with a Lift

After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

1. [Reinstalling the Power Supplies After Installing the MX240 Router with a Lift](#) on page 180
2. [Reinstalling the Fan Tray After Installing the MX240 Router with a Lift](#) on page 180
3. [Reinstalling the SCBs After Installing the MX240 Router with a Lift](#) on page 181

4. [Reinstalling the DPCs After Installing the MX240 Router with a Lift on page 182](#)
5. [Reinstalling the FPCs After Installing the MX240 Router with a Lift on page 183](#)

Reinstalling the Power Supplies After Installing the MX240 Router with a Lift


Reinstall the rightmost power supply first and then work your way to the left. To reinstall the AC or DC power supplies (see [Figure 54 on page 180](#), which shows the installation of the DC power supplies):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the circuit breaker on the power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

Figure 54: Reinstalling a Power Supply

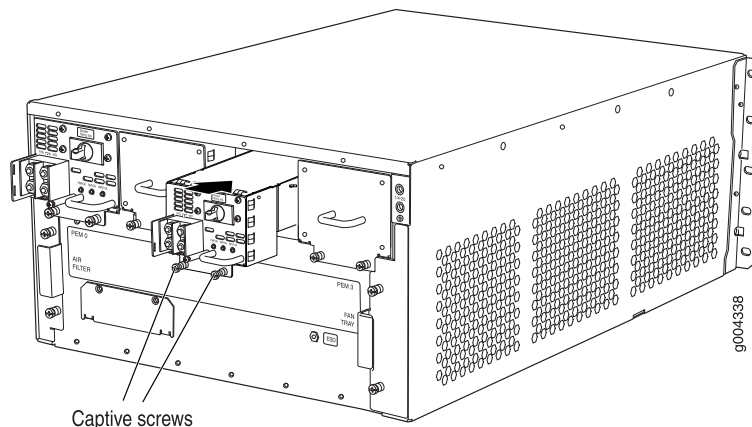


Reinstalling the Fan Tray After Installing the MX240 Router with a Lift

To reinstall the fan tray (see [Figure 55 on page 181](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.

3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 55: Reinstalling a Fan Tray

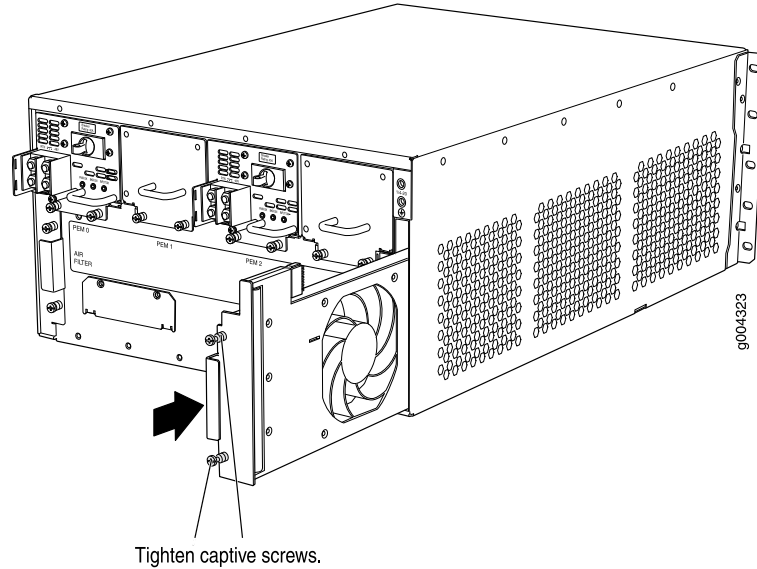


Reinstalling the SCBs After Installing the MX240 Router with a Lift

To reinstall an SCB (see [Figure 56 on page 182](#)):



CAUTION: Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

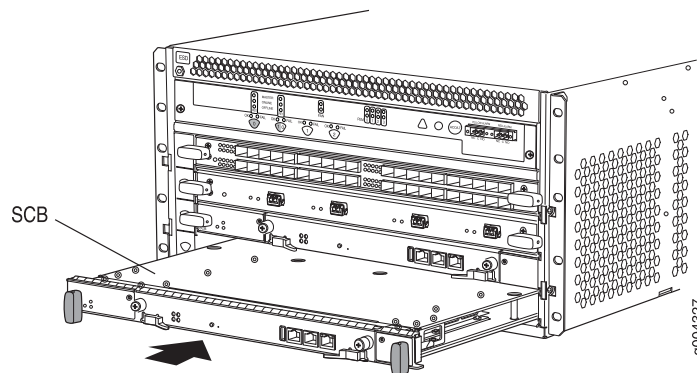
Figure 56: Reinstalling an SCB

Reinstalling the DPCs After Installing the MX240 Router with a Lift

To reinstall a DPC (see [Figure 57 on page 183](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the DPC is fully seated.

Figure 57: Reinstalling a DPC

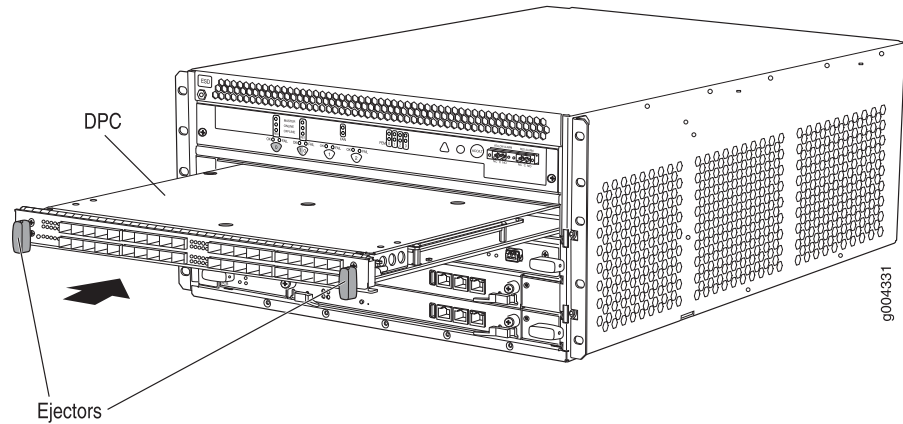


Reinstalling the FPCs After Installing the MX240 Router with a Lift

To reinstall a DPC (see [Figure 58 on page 184](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.
7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.

Figure 58: Reinstalling an FPC

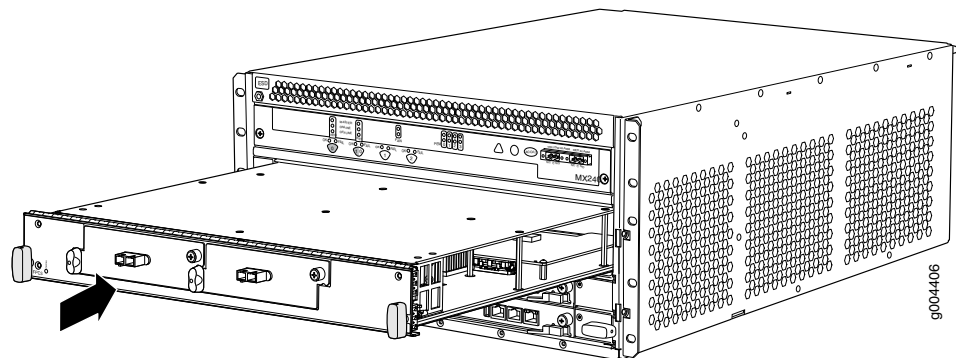

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Tools Required to Install the MX240 Router without a Mechanical Lift

To install the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 7/16-in. nut driver
- ESD grounding wrist strap

Removing Components from the MX240 Router Before Installing it without a Lift

To make the router light enough to install manually, you first remove most components from the chassis. The procedures in this section for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

1. [Removing the Power Supplies Before Installing the MX240 Router without a Lift on page 184](#)
2. [Removing the Fan Tray Before Installing the MX240 Router without a Lift on page 185](#)
3. [Removing the SCBs Before Installing the MX240 Router without a Lift on page 186](#)
4. [Removing the DPCs Before Installing the MX240 Router without a Lift on page 187](#)
5. [Removing the FPC Before Installing the MX240 Router without a Lift on page 188](#)

Removing the Power Supplies Before Installing the MX240 Router without a Lift

Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies (see [Figure 59 on page 185](#)):


1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.

- For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the DC circuit breaker on the power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

- Pull the power supply straight out of the chassis.

Figure 59: Removing a Power Supply Before Installing the Router

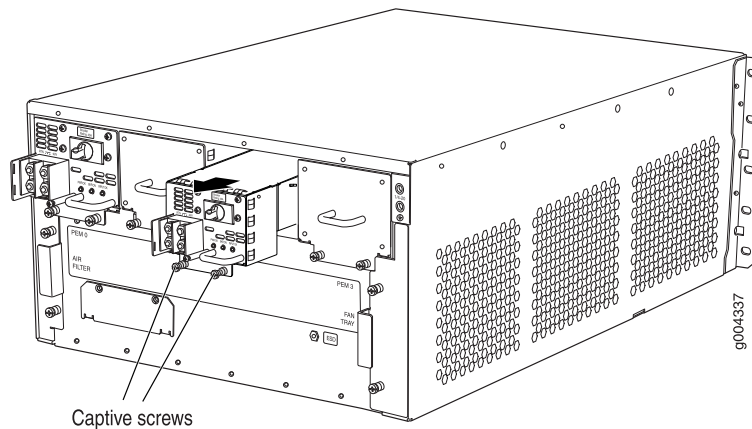


Removing the Fan Tray Before Installing the MX240 Router without a Lift

To remove the fan tray (see [Figure 60 on page 186](#)):

- Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
- Loosen the captive screws on the fan tray faceplate.
- Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.
- Press the latch located on the inside of the fan tray to release it from the chassis.
- Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 60: Removing the Fan Tray

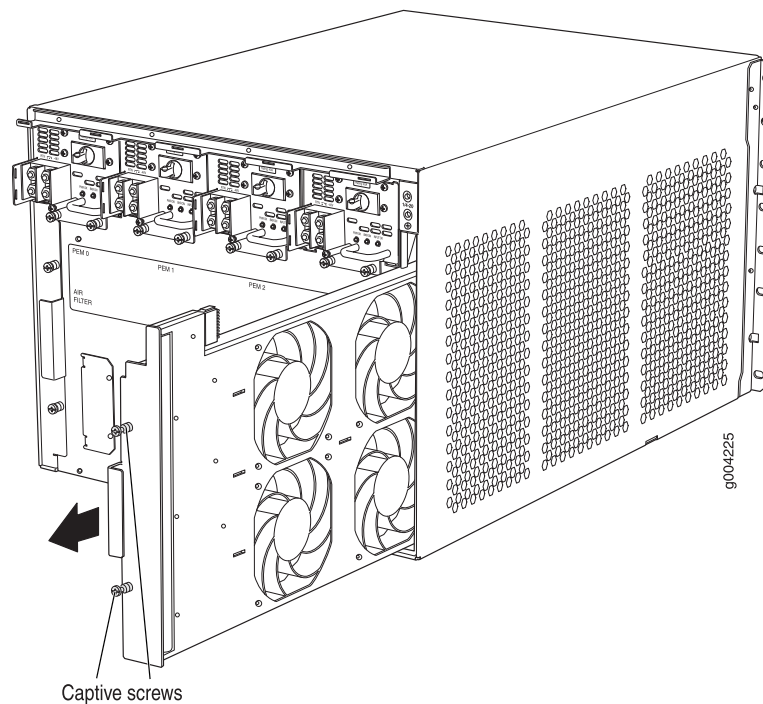

Removing the SCBs Before Installing the MX240 Router without a Lift

To remove the SCBs (see Figure 61 on page 187):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles, and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it, and slide it completely out of the chassis. Place it on the antistatic mat.



CAUTION: Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for each SCB.

Figure 61: Removing an SCB

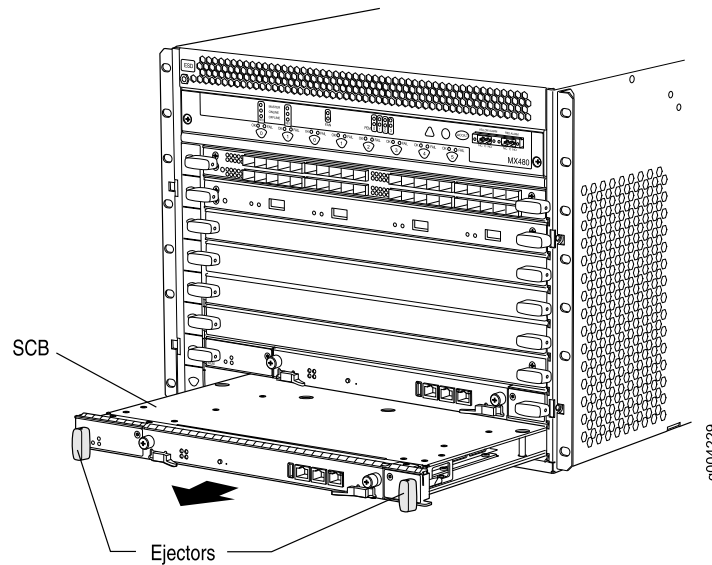

Removing the DPCs Before Installing the MX240 Router without a Lift

To remove a DPC (see [Figure 62 on page 188](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles, and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.




CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

Figure 62: Removing a DPC

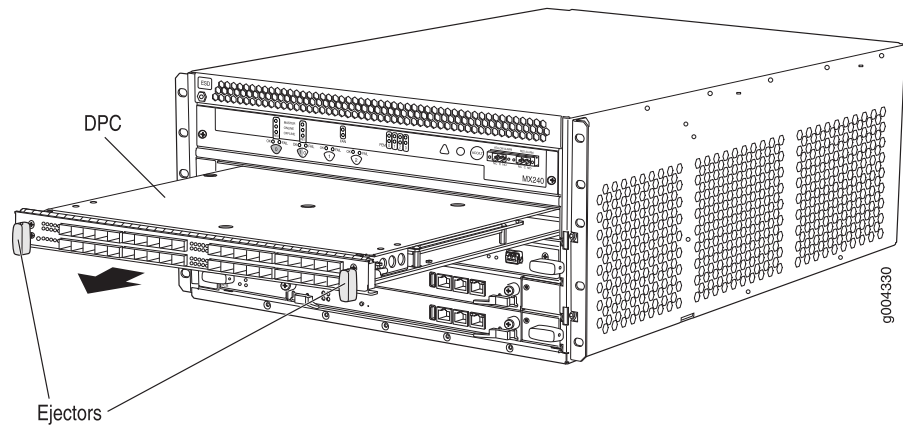

Removing the FPC Before Installing the MX240 Router without a Lift

To remove an FPC (see [Figure 63 on page 189](#)):


1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
3. Grasp the handles and slide the FPC straight out of the card cage halfway.
4. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 63: Removing an FPC

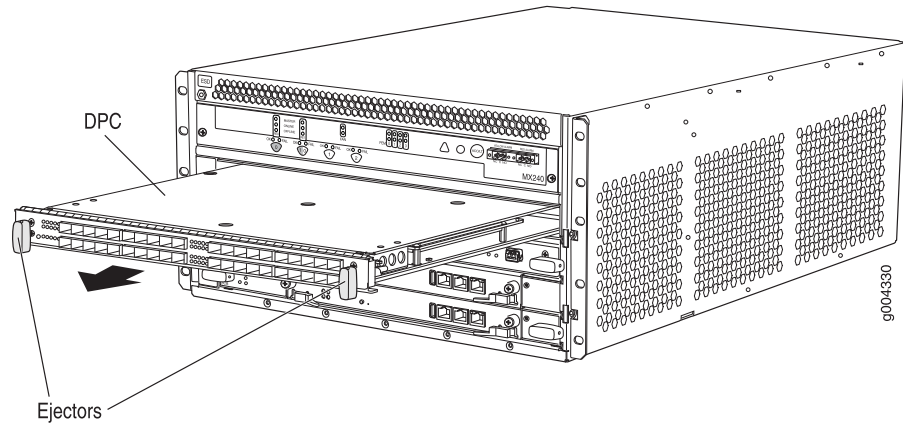

Installing the MX240 Chassis in the Rack Manually

To install the router in the rack (see [Figure 64 on page 190](#)):



CAUTION: If you are installing more than one router in a rack, install the lowest one first. Installing a router in an upper position in a rack or cabinet requires a lift.



CAUTION: Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.



CAUTION: Lifting the chassis and mounting it in a rack requires two people. The empty chassis weighs approximately 52.0 lb (23.6 kg).


1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Position the router in front of the rack or cabinet, centering it in front of the mounting shelf. Use a pallet jack if one is available.
3. With one person on each side, hold onto the bottom of the chassis and carefully lift it onto the mounting shelf.



WARNING: To prevent injury, keep your back straight and lift with your legs, not your back. Avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

- Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.
- Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
- Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

Figure 64: Installing the Router in the Rack

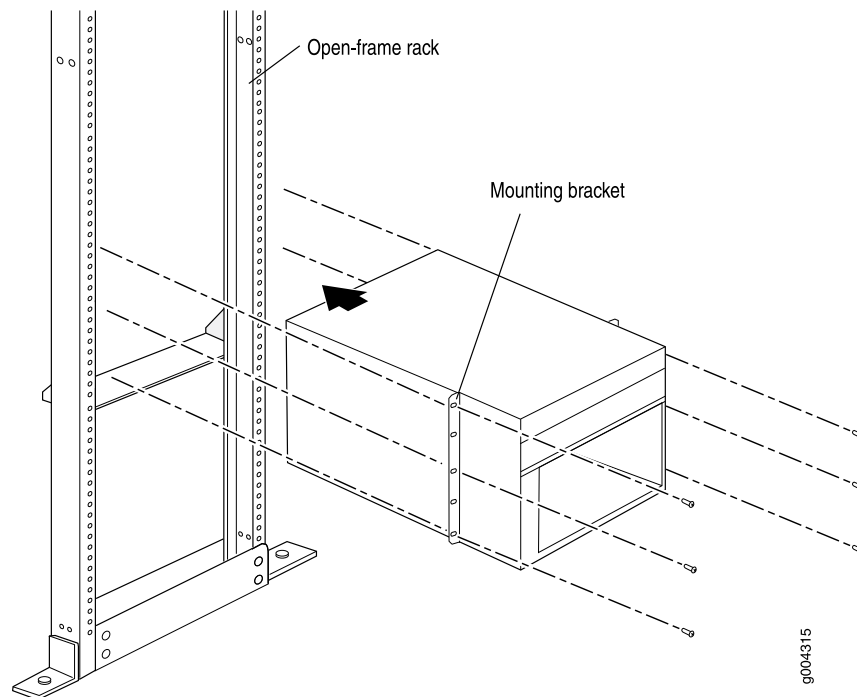

NOTE: This illustration depicts the router being installed in an open-frame rack. For an illustration of the mounting hardware required for a four-post rack or cabinet, see [“Installing the MX240 Router Mounting Hardware for a Rack or Cabinet”](#) on page 170.

Reinstalling Components in the MX240 Router After Installing it without a Lift

After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

1. [Reinstalling the Power Supplies After Installing the MX240 Router without a Lift on page 191](#)
2. [Reinstalling the Fan Tray After Installing the MX240 Router without a Lift on page 192](#)
3. [Reinstalling the SCBs After Installing the MX240 Router without a Lift on page 193](#)
4. [Reinstalling the DPCs After Installing the MX240 Router without a Lift on page 193](#)
5. [Reinstalling the FPCs After Installing the MX240 Router without a Lift on page 194](#)

Reinstalling the Power Supplies After Installing the MX240 Router without a Lift


Reinstall the rightmost power supply first and then work your way to the left. To reinstall the AC or DC power supplies (see [Figure 65 on page 192](#), which shows the installation of the DC power supplies):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the circuit breaker on the power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

Figure 65: Reinstalling a Power Supply

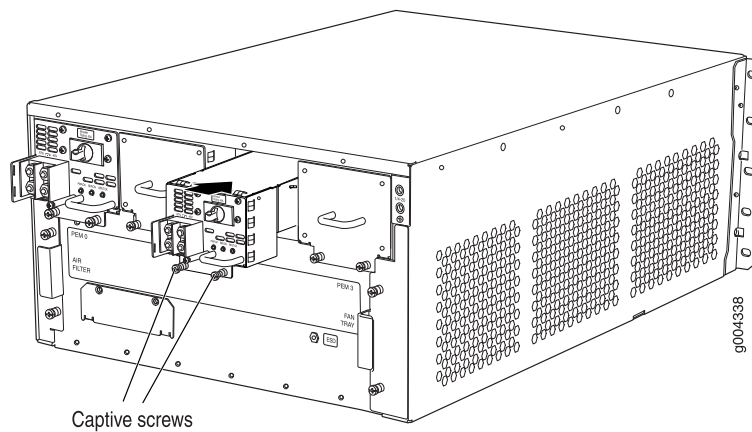


Reinstalling the Fan Tray After Installing the MX240 Router without a Lift

To reinstall the fan tray (see [Figure 66 on page 192](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 66: Reinstalling a Fan Tray

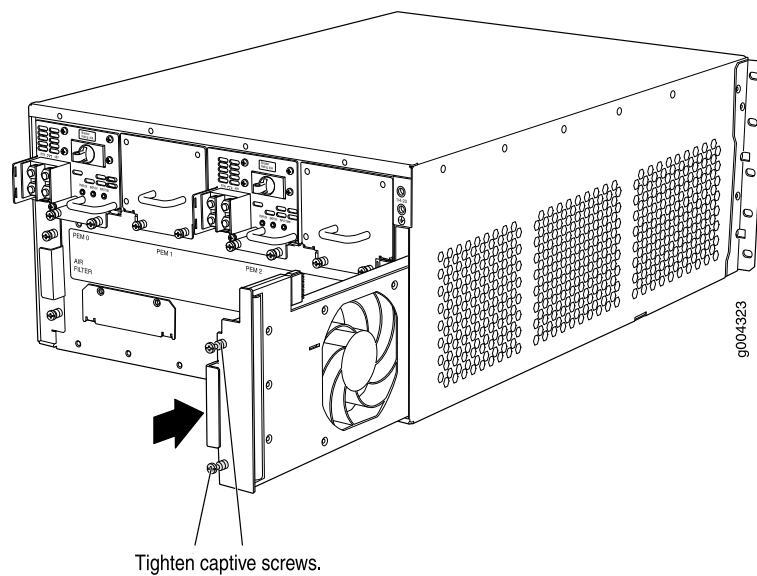

Reinstalling the SCBs After Installing the MX240 Router without a Lift


To reinstall an SCB (see [Figure 67](#) on page 193):



CAUTION: Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

Figure 67: Reinstalling an SCB

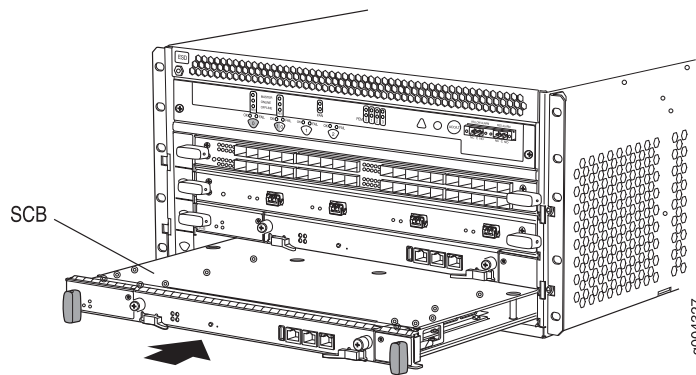


Reinstalling the DPCs After Installing the MX240 Router without a Lift

To reinstall a DPC (see [Figure 68](#) on page 194):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.

4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the DPC is fully seated.

Figure 68: Reinstalling a DPC

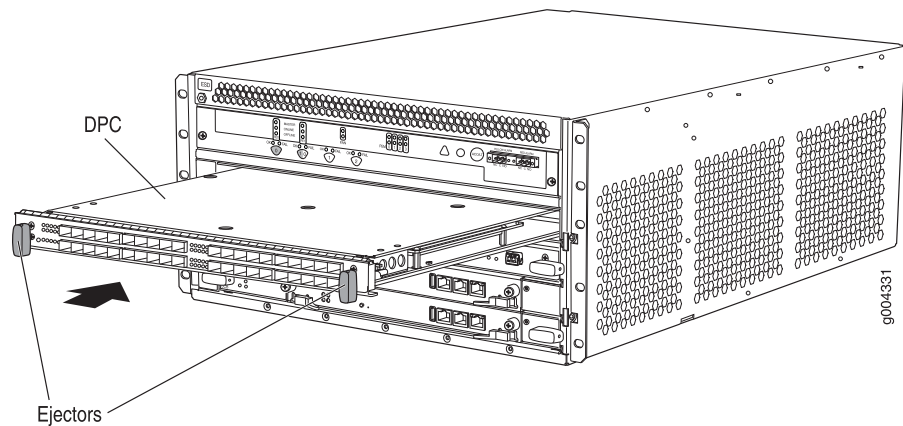


Reinstalling the FPCs After Installing the MX240 Router without a Lift

To reinstall a DPC (see [Figure 69 on page 195](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.

7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.

Figure 69: Reinstalling an FPC

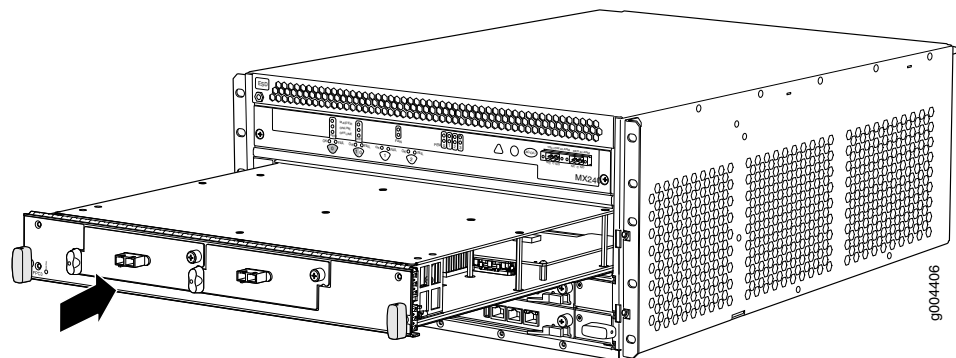

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Connecting the MX240 Router to Power

- [Tools and Parts Required for MX240 Router Grounding and Power Connections on page 195](#)
- [Grounding the MX240 Router on page 196](#)
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies on page 197](#)
- [Powering On an AC-Powered MX240 Router on page 198](#)
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies on page 199](#)
- [Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies on page 202](#)
- [Connecting an MX240 AC Power Supply Cord on page 204](#)
- [Connecting an MX240 DC Power Supply Cable on page 204](#)
- [Powering Off the MX240 Router on page 206](#)

Tools and Parts Required for MX240 Router Grounding and Power Connections

To ground and provide power to the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (–) screwdriver

- 7/16-in. (11 mm) hexagonal-head external drive socket wrench, or nut driver, with a torque range between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm), for tightening nuts to terminal studs on each power supply on a DC-powered router.
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs. Use an appropriately-sized driver or socket wrench, with a maximum torque capacity of 50 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 Chassis Grounding Specifications on page 53](#)

Grounding the MX240 Router

You ground the router by connecting a grounding cable to earth ground and then attaching it to the chassis grounding points using UNC 1/4-20 two screws. You must provide the grounding cables (the cable lugs are supplied with the router).

1. Verify that a licensed electrician has attached the cable lug provided with the router to the grounding cable.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
4. Connect the grounding cable to a proper earth ground.
5. Detach the ESD grounding strap from the site ESD grounding point.
6. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Place the grounding cable lug over the grounding points on the upper rear of the chassis. The bolts are sized for UNC 1/4-20 bolts.

8. Secure the grounding cable lug to the grounding points, first with the washers, then with the screws.
9. Dress the grounding cable and verify that it does not touch or block access to router components, and that it does not drape where people could trip on it.

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies



CAUTION: Do not mix AC and DC power supply modules within the same router. Damage to the router might occur.

You connect AC power to the router by attaching power cords from the AC power sources to the AC appliance inlets located on the power supplies. The power cords are provided.

To connect the AC power cords to the router for each power supply (see [Figure 70 on page 198](#)):


1. Locate the power cords shipped with the router, which should have a plug appropriate for your geographical location. For more information, see [“Connecting an MX240 AC Power Supply Cord” on page 204](#).
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Connect the power cord to the power supply.
5. Insert the power cord plug into an external AC power source receptacle.



NOTE: Each power supply must be connected to a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 15 A (250 VAC) minimum, or as required by local code.

6. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
7. Repeat [Step 1](#) through [Step 6](#) for the remaining power supplies.

Figure 70: Connecting AC Power to the Routers

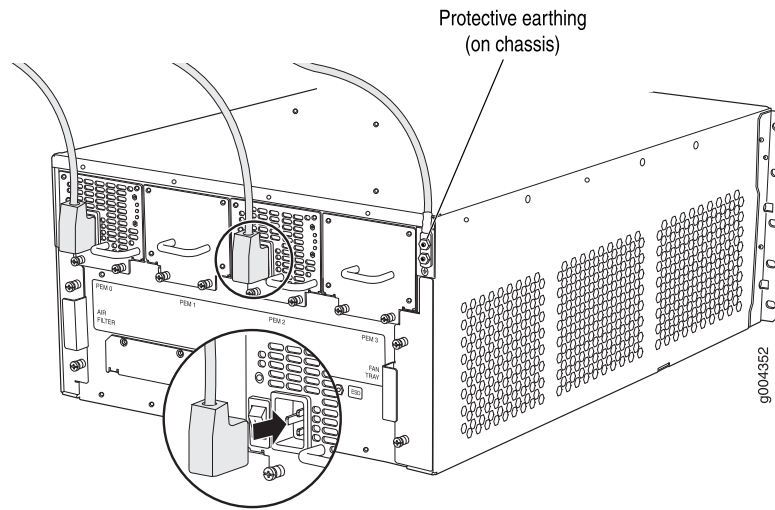

- See Also**
- [Disconnecting an MX240 AC Power Supply Cord on page 314](#)
 - [AC Power Cord Specifications for the MX240 Router on page 46](#)

Powering On an AC-Powered MX240 Router

To power on an AC-powered router:

1. Verify that the power supplies are fully inserted in the chassis.
2. Verify that each AC power cord is securely inserted into its appliance inlet.
3. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
4. Turn on the power to the external management device.
5. Switch on the dedicated customer site circuit breakers for the power supplies. Follow the instructions for your site.
6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Switch the AC input switch on each power supply to the on (I) position and observe the status LEDs on each power supply faceplate. If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures .



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on. After powering on a power supply, wait at least 60 seconds before turning it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI `request system halt` command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

8. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

- See Also**
- [Replacing an MX240 AC Power Supply Cord on page 314](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies



CAUTION: Do not mix AC and DC power supply modules within the same router. Damage to the router might occur.



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

You connect DC power to the router by attaching power cables from the external DC power sources to the terminal studs on the power supply faceplates. You must provide the power cables (the cable lugs are supplied with the router). For power cable specifications, see [“DC Power Cable Specifications for the MX240 Router” on page 56](#).

To connect the DC source power cables to the router for each power supply:

1. Switch off the dedicated customer site circuit breakers. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Switch the DC circuit breaker on the power supply faceplate to the off (0) position.
4. Remove the clear plastic cover protecting the terminal studs on the faceplate.
5. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the **-48V** and **RTNDC** cables to chassis ground:
 - The cable with very large resistance (indicating an open circuit) to chassis ground is **-48V**.
 - The cable with very low resistance (indicating a closed circuit) to chassis ground is **RTN**.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (-) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.

6. Remove the nuts and washers from the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
7. Secure each power cable lug to the terminal studs, first with the flat washer, then with the nut (see [Figure 71 on page 202](#)). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
 - a. Secure each positive (+) DC source power cable lug to the **RTN**(return) terminal.
 - b. Secure each negative (-) DC source power cable lug to the **48V** (input) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin

freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.




CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



NOTE: The DC power supply in slot PEM0 must be powered by a dedicated power feed derived from feed A, and the DC power supply in slot PEM2 must be powered by a dedicated power feed derived from feed B. This configuration provides the commonly deployed A/B feed redundancy for the system.

8. Replace the clear plastic cover over the terminal studs on the faceplate.
9. Verify that the power cables are connected correctly, that they are not touching or blocking access to router components, and that they do not drape where people could trip on them.
10. If you are installing two power supplies, repeat Steps 3 through 9 for the other power supply.

Figure 71: Connecting DC Power to the Router

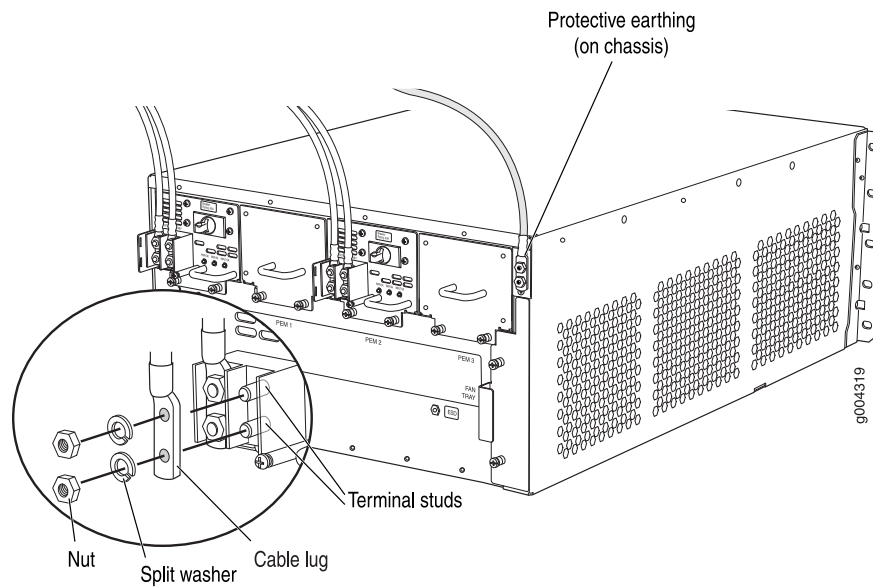

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [DC Power Cable Specifications for the MX240 Router on page 56](#)

Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies

To power on a DC-powered MX240 Router with normal capacity power supplies:

1. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
2. Turn on the power to the external management device.
3. Verify that the power supplies are fully inserted in the chassis.
4. Verify that the source power cables are connected to the appropriate terminal: the positive (+) source cable to the return terminal (labeled **RTN**) and the negative (-) source cable to the input terminal (labeled **-48V**).
5. Switch on the dedicated customer site circuit breakers to provide power to the DC power cables.
6. Check that the **INPUT OK** LED is lit steadily green to verify that power is present.
7. If power is not present:
 - Verify that the fuse is installed correctly, and turn on the breaker at the battery distribution fuse board or fuse bay.

- Check the voltage with a meter at the terminals of the power supply for correct voltage level and polarity.
8. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
 9. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

10. Observe the status LEDs on each power supply faceplate. If a DC power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.
11. If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures .



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on. After powering on a power supply, wait at least 60 seconds before turning it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI request `system halt` command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

12. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

- See Also**
- [Installing an MX240 DC High-Capacity Power Supply](#)
 - [Replacing an MX240 DC Power Supply Cable on page 320](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [DC Power Cable Specifications for the MX240 Router on page 56](#)

Connecting an MX240 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see [“AC Power Cord Specifications for the MX240 Router”](#) on page 46).
2. Connect the power cord to the power supply.
3. Insert the power cord plug into an external AC power source receptacle.
4. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Switch the AC input switch on the each power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Connecting an MX240 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.
4. Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see [Figure 72](#) on page 205). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut

is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 72: Connecting Power Cables to the DC Power Supply

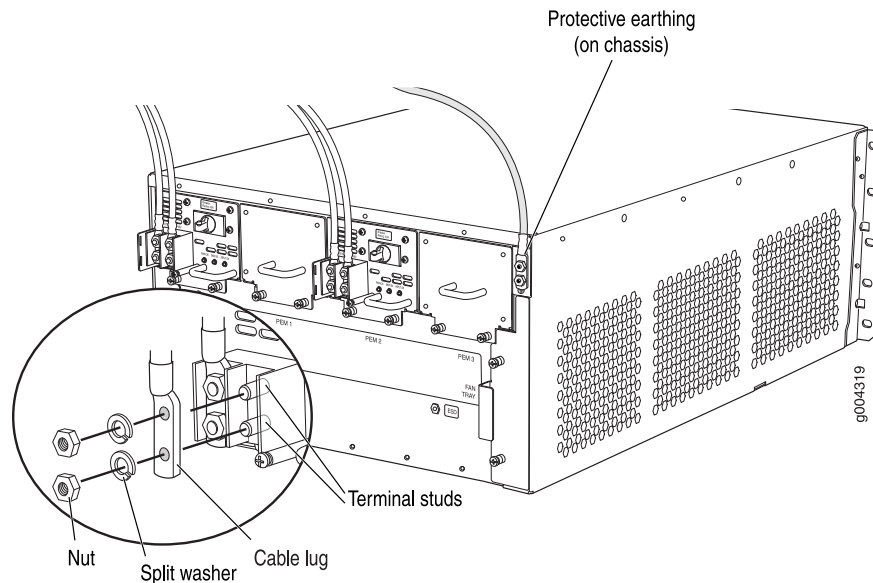

5. Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.
6. Replace the clear plastic cover over the terminal studs on the faceplate.
7. Attach the power cable to the DC power source.
8. Turn on the dedicated customer site circuit breaker to the power supply.
9. Verify that the **INPUT OK** LED on the power supply is lit steadily.
10. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

Powering Off the MX240 Router



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To power off the router:

1. On the external management device connected to the Routing Engine, issue the **request system halt both-routing-engines** operational mode command. The command shuts down the Routing Engines cleanly, so their state information is preserved. (If the router contains only one Routing Engine, issue the **request system halt** command.)

```
user@host> request system halt both-routing-engines
```
2. Wait until a message appears on the console confirming that the operating system has halted. For more information about the command, see the [CLI Explorer](#).
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off (O) position.

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Connecting the MX240 Router to the Network

- [Tools and Parts Required for MX240 Router Connections on page 207](#)
- [Connecting the MX240 Router to a Network for Out-of-Band Management on page 207](#)
- [Connecting the MX240 Router to a Management Console or Auxiliary Device on page 207](#)
- [Connecting the MX240 Router to an External Alarm-Reporting Device on page 208](#)
- [Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router on page 209](#)

Tools and Parts Required for MX240 Router Connections

To connect the router to management devices and line cards, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (–) screwdriver
- 2.5-mm Phillips (+) screwdriver
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap

Connecting the MX240 Router to a Network for Out-of-Band Management

To connect the Routing Engine to a network for out-of-band management, connect an Ethernet cable with RJ-45 connectors to the **ETHERNET** port on the Routing Engine. One Ethernet cable is provided with the router. To connect to the **ETHERNET** port on the Routing Engine:

1. Turn off the power to the management device.
2. Plug one end of the Ethernet cable (Figure 74 on page 207 shows the connector) into the **ETHERNET** port on the Routing Engine. Figure 73 on page 207 shows the port.
3. Plug the other end of the cable into the network device.

Figure 73: Ethernet Port


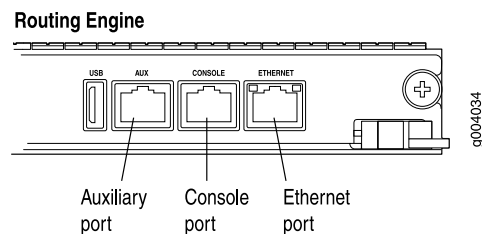


Figure 74: Routing Engine Ethernet Cable Connector

 

Connecting the MX240 Router to a Management Console or Auxiliary Device

To use a system console to configure and manage the Routing Engine, connect it to the appropriate **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One serial cable with an RJ-45 connector and a DB-9

connector is provided with the router. To connect a device to the **CONSOLE** port and another device to the **AUX** port, you must supply an additional cable.

To connect a management console or auxiliary device:

1. Turn off the power to the console or auxiliary device.
2. Plug the RJ-45 end of the serial cable (Figure 76 on page 208 shows the connector) into the **AUX** port or **CONSOLE** port on the Routing Engine. Figure 75 on page 208 shows the ports.
3. Plug the female DB-9 end into the device's serial port.



NOTE:

For console devices, configure the serial port to the following values:

- Baud rate—9600
- Parity—N
- Data bits—8
- Stop bits—1
- Flow control—none

Figure 75: Auxiliary and Console Ports


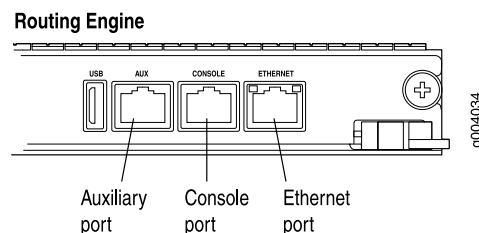


Figure 76: Routing Engine Console and Auxiliary Cable Connector

 

- See Also**
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 163](#)

Connecting the MX240 Router to an External Alarm-Reporting Device

To connect the router to external alarm-reporting devices, attach wires to the **RED** and **YELLOW** relay contacts on the craft interface. (See Figure 77 on page 209.) A system

condition that triggers the red or yellow alarm LED on the craft interface also activates the corresponding alarm relay contact.


The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact (see [Figure 77 on page 209](#)):

1. Prepare the required length of wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. While the terminal block is not plugged into the relay contact, use a 2.5-mm flat-blade screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.
3. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
4. Attach the other end of the wires to the external device.

To attach a reporting device for the other kind of alarm, repeat the procedure.

Figure 77: Alarm Relay Contacts

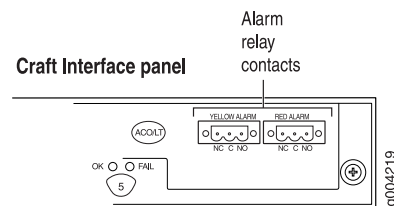

See Also • [Connecting the Alarm Relay Wires to the MX240 Craft Interface on page 253](#)

Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router

To connect the DPCs, MPCs, MICs, or PICs to the network (see [Figure 78 on page 210](#) and [Figure 79 on page 211](#)):

1. Have ready a length of the type of cable used by the component. For cable specifications, see the *MX Series Interface Module Reference*.
2. Remove the rubber safety plug from the cable connector port.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.



NOTE: The XFP cages and optics on the components are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place.

4. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.




CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.




CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.

Figure 78: Attaching a Cable to a DPC

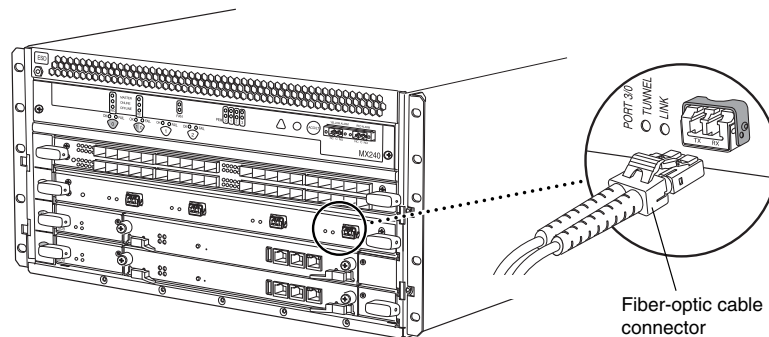

9004317

Figure 79: Attaching a Cable to a MIC

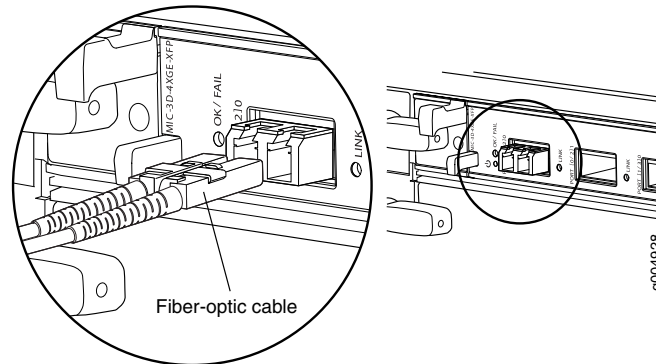

- See Also**
- [Installing an MX240 DPC on page 261](#)
 - [Installing an MX240 PIC on page 291](#)
 - [Installing an MX240 MPC on page 286](#)
 - [Installing an MX240 MIC on page 277](#)

Initially Configuring the MX240 Router

The MX240 router is shipped with Junos OS preinstalled and ready to be configured when the MX240 router is powered on. There are three copies of the software: one on a CompactFlash card in the Routing Engine, one on a rotating hard disk in the Routing Engine, and one on a USB flash drive that can be inserted into the slot in the Routing Engine faceplate.

When the router boots, it first attempts to start the image on the USB flash drive. If a USB flash drive is not inserted into the Routing Engine or the attempt otherwise fails, the router next tries the CompactFlash card (if installed), and finally the hard disk.

You configure the router by issuing Junos OS command-line interface (CLI) commands, either on a console device attached to the **CONSOLE** port on the Routing Engine, or over a telnet connection to a network connected to the **ETHERNET** port on the Routing Engine.

Gather the following information before configuring the router:

- Name the router will use on the network
- Domain name the router will use
- IP address and prefix length information for the Ethernet interface
- IP address of a default router
- IP address of a DNS server
- Password for the root user

This procedure connects the router to the network but does not enable it to forward traffic. For complete information about enabling the router to forward traffic, including examples, see the Junos OS configuration guides.

To configure the software:

1. Verify that the router is powered on.
2. Log in as the “root” user. There is no password.
3. Start the CLI.

```
root# cli
root@>
```

4. Enter configuration mode.

```
cli> configure
[edit]
root@#
```

5. Configure the name of the router. If the name includes spaces, enclose the name in quotation marks (“ ”).

```
[edit]
root@# set system host-name host-name
```

6. Create a management console user account.

```
[edit]
root@# set system login user user-name authentication plain-text-password
New password: password
Retype new password: password
```

7. Set the user account class to super-user.

```
[edit]
root@# set system login user user-name class super-user
```

8. Configure the router's domain name.

```
[edit]
root@# set system domain-name domain-name
```

9. Configure the IP address and prefix length for the router's Ethernet interface.

```
[edit]
```

```
root@# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

10. Configure the IP address of a backup router, which is used only while the routing protocol is not running.

```
[edit]  
root@# set system backup-router address
```

11. Configure the IP address of a DNS server.

```
[edit]  
root@# set system name-server address
```

12. Set the root authentication password by entering either a clear-text password, an encrypted password, or an SSH public key string (DSA or RSA).

```
[edit]  
root@# set system root-authentication plain-text-password  
New password: password  
Retype new password: password
```

or

```
[edit]  
root@# set system root-authentication encrypted-password encrypted-password
```

or

```
[edit]  
root@# set system root-authentication ssh-dsa public-key
```

or

```
[edit]  
root@# set system root-authentication ssh-rsa public-key
```

13. (Optional) Configure the static routes to remote subnets with access to the management port. Access to the management port is limited to the local subnet. To access the management port from a remote subnet, you need to add a static route to that subnet within the routing table. For more information about static routes, see the *Junos OS Administration Library*.

```
[edit]  
root@# set routing-options static route remote-subnet next-hop destination-IP retain  
no-readvertise
```

14. Configure the telnet service at the [edit system services] hierarchy level.

```
[edit]
root@# set system services telnet
```

15. (Optional) Display the configuration to verify that it is correct.

```
[edit]
root@# show
system {
  host-name host-name;
  domain-name domain-name;
  backup-router address;
  root-authentication {
    authentication-method (password | public-key);
  }
  name-server {
    address;
  }
}
interfaces {
  fxp0 {
    unit 0 {
      family inet {
        address address/prefix-length;
      }
    }
  }
}
}
```

16. Commit the configuration to activate it on the router.

```
[edit]
root@# commit
```

17. (Optional) Configure additional properties by adding the necessary configuration statements. Then commit the changes to activate them on the router.

```
[edit]
root@host# commit
```

18. When you have finished configuring the router, exit configuration mode.

```
[edit]
root@host# exit
root@host>
```



NOTE: To reinstall Junos OS, you boot the router from the removable media. Do not insert the removable media during normal operations. The router does not operate normally when it is booted from the removable media.

When the router boots from the storage media (removable media, CompactFlash card, or hard disk) it expands its search in the `/config` directory of the routing platform for the following files in the following order: `juniper.conf` (the main configuration file), `rescue.conf` (the rescue configuration file), and `juniper.conf.1` (the first rollback configuration file). When the search finds the first configuration file that can be loaded properly, the file loads and the search ends. If none of the file can be loaded properly, the routing platform does not function properly. If the router boots from an alternate boot device, Junos OS displays a message indicating this when you log in to the router.

CHAPTER 4

Maintaining, Installing and Replacing Components

- [Maintaining MX240 Components on page 217](#)
- [Maintaining the MX240 Cooling System Component on page 221](#)
- [Maintaining MX240 Host Subsystem Components on page 227](#)
- [Maintaining MX240 Interface Modules on page 254](#)
- [Maintaining MX240 Power System Components on page 310](#)
- [Maintaining MX240 SFP and XFP Transceivers on page 323](#)
- [Maintaining MX240 Switch Control Boards on page 326](#)

Maintaining MX240 Components

- [Routine Maintenance Procedures for the MX240 Router on page 217](#)
- [Tools and Parts Required to Maintain the MX240 Router on page 218](#)
- [MX240 Field-Replaceable Units \(FRUs\) on page 218](#)
- [Tools and Parts Required to Replace MX240 Hardware Components on page 219](#)

Routine Maintenance Procedures for the MX240 Router

Purpose For optimum router performance, perform preventive maintenance procedures.

- Action**
- Inspect the installation site for moisture, loose wires or cables, and excessive dust. Make sure that airflow is unobstructed around the router and into the air intake vents.
 - Check the status-reporting devices on the craft interface—System alarms and LEDs.
 - Inspect the air filter at the left rear of the router, replacing it every 6 months for optimum cooling system performance. Do not run the router for more than a few minutes without the air filter in place.

- See Also**
- [Maintaining the MX240 Air Filter on page 221](#)
 - [Maintaining the MX240 Fan Tray on page 223](#)
 - [Maintaining the MX240 Host Subsystem on page 227](#)

Tools and Parts Required to Maintain the MX240 Router

To maintain hardware components, you need the following tools and parts:

- ESD grounding wrist strap
- Flat-blade (–) screwdriver
- Phillips (+) screwdriver, number 1
- Phillips (+) screwdriver, number 2

- See Also**
- [Routine Maintenance Procedures for the MX240 Router on page 217](#)
 - [Maintaining the MX240 Host Subsystem on page 227](#)

MX240 Field-Replaceable Units (FRUs)

Field-replaceable units (FRUs) are router components that can be replaced at the customer site. Replacing most FRUs requires minimal router downtime. The router uses the following types of FRUs:

- Hot-removable and hot-insertable FRUs—You can remove and replace these components without powering off the router or disrupting the routing functions.
- Hot-pluggable FRUs—You can remove and replace these components without powering off the router, but the routing functions of the system are interrupted when the component is removed.

[Table 92 on page 218](#) lists the FRUs for the MX960 router. Before you replace an SCB or a Routing Engine, you must take the host subsystem offline.

Table 92: Field-Replaceable Units

Hot-Removable and Hot-Insertable FRUs	Hot-Pluggable FRUs
<ul style="list-style-type: none"> • Air filter • Craft interface • Backup Switch Control Board (SCB) (if redundant) • Master Switch Control Board (SCB) (if nonstop active routing is configured) • Backup Routing Engine (if redundant) • Master Routing Engine (if nonstop active routing is configured) • Dense Port Concentrators (DPCs) • Flexible PIC Concentrators (FPCs) • Modular Port Concentrators (MPCs) • Modular Interface Cards (MICs) • PICs • AC and DC power supplies (if redundant) • Fan tray 	<ul style="list-style-type: none"> • Master Switch Control Board (SCB) (if nonstop active routing is not configured) • Master Routing Engine (if nonstop active routing is not configured) • Switch Control Board (SCB) (nonredundant) • Routing Engine (nonredundant) • Solid-state drives (SSDs) of Routing Engines

- See Also**
- [MX240 Host Subsystem Description on page 58](#)
 - [Taking an MX240 Host Subsystem Offline](#)

Tools and Parts Required to Replace MX240 Hardware Components

To replace hardware components, you need the tools and parts listed in [Table 93 on page 219](#).

To remove components from the router or the router from a rack, you need the following tools and parts:

- 2.5-mm flat-blade (–) screwdriver, for detaching alarm relay terminal block
- 7/16-in. (11 mm) nut driver
- Blank panels to cover empty slots
- Electrostatic bag or antistatic mat, for each component
- Electrostatic discharge (ESD) grounding wrist strap
- Flat-blade (–) screwdriver
- Mechanical lift, if available
- Phillips (+) screwdrivers, numbers 1 and 2
- Rubber safety cap for fiber-optic interfaces or cable
- Wire cutters

Table 93: Tools and Parts Required to Replace Hardware Components

Tool or Part	Components
2.5-mm flat-blade (–) screwdriver	<ul style="list-style-type: none"> • Alarm relay terminal block
7/16-in. nut driver or socket wrench	<ul style="list-style-type: none"> • Cables and connectors • DC power supply
Blank panels (if component is not reinstalled)	<ul style="list-style-type: none"> • DPC • FPC • MIC • MPC • PIC • Power supply • Routing Engine • SCB

Table 93: Tools and Parts Required to Replace Hardware Components (continued)

Tool or Part	Components
Electrostatic bag or antistatic mat	<ul style="list-style-type: none"> • Craft Interface • SCB • DPC • FPC • PIC • MPC • MIC <ul style="list-style-type: none"> • Routing Engine
Electrostatic discharge (ESD) grounding wrist strap	All
Flat-blade (–) screwdriver	Cables and connectors DPC
Phillips (+) screwdrivers, numbers 1 and 2	Air filter Routing Engine Craft interface SCB Cables and connectors Fan tray
Rubber safety cap	DPC PIC MPC MIC
Wire cutters	Cables and connectors DC power supply

- See Also**
- [Maintaining the MX240 Cooling System Component on page 221](#)
 - [Maintaining MX240 Host Subsystem Components on page 227](#)
 - [Maintaining MX240 Switch Control Boards on page 326](#)
 - [Maintaining MX240 Interface Modules on page 254](#)
 - [Maintaining MX240 Power System Components on page 310](#)

Maintaining the MX240 Cooling System Component

- [Maintaining the MX240 Air Filter on page 221](#)
- [Replacing the MX240 Air Filter on page 221](#)
- [Maintaining the MX240 Fan Tray on page 223](#)
- [Replacing the MX240 Fan Tray on page 225](#)

Maintaining the MX240 Air Filter

Purpose For optimum cooling, verify the condition of the air filters.

- Action**
- Regularly inspect the air filter. A dirty air filter restricts airflow in the unit, producing a negative effect on the ventilation of the chassis. The filter degrades over time. You must replace the filter every 6 months.



CAUTION: Always keep the air filter in place while the device is operating. Because the fans are very powerful, they could pull small bits of wire or other materials into the through the unfiltered air intake. This could damage the components.

- The shelf life of polyurethane filter varies from two years to five years depending on the storage conditions. Store in a cool, dry, and dark environment. Wrap the media in plastic and store in an environment with relative humidity between 40%- 80% and temperature between 40° F (4° C) to 90° F (32° C). Note that if the material flakes, or becomes brittle when rubbed or deformed, it is no longer usable.

- See Also**
- [MX240 Cooling System Description on page 39](#)
 - [Troubleshooting the MX240 Cooling System on page 350](#)

Replacing the MX240 Air Filter

1. [Removing the MX240 Air Filter on page 221](#)
2. [Installing the MX240 Air Filter on page 222](#)

Removing the MX240 Air Filter



CAUTION: Do not run the router for more than a few minutes without the air filter in place.




CAUTION: Always keep the air filter in place while the router is operating, except during replacement. Because the fans are very powerful, they could pull small bits of wire or other materials into the router through the unfiltered air intake. This could damage the router components.

To remove the air filter (see [Figure 80](#) on page 222):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on the air filter cover.
3. Remove the air filter cover.
4. Slide the air filter out of the chassis.

Figure 80: Removing the Air Filter

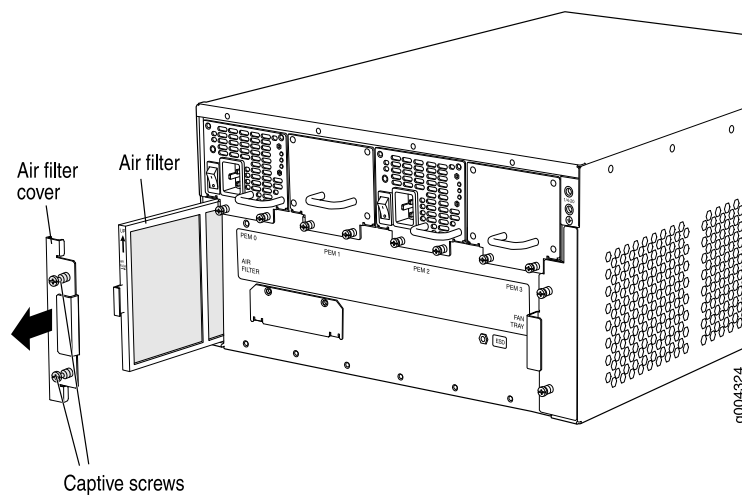

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)


Installing the MX240 Air Filter

To install the air filter (see [Figure 81](#) on page 223):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the up arrow and ensure that the air filter is right side up.
3. Slide the air filter straight into the chassis until it stops.

4. Align the captive screws of the air filter cover with the mounting holes on the chassis.
5. Tighten the captive screws on the air filter cover.

Figure 81: Installing the Air Filter

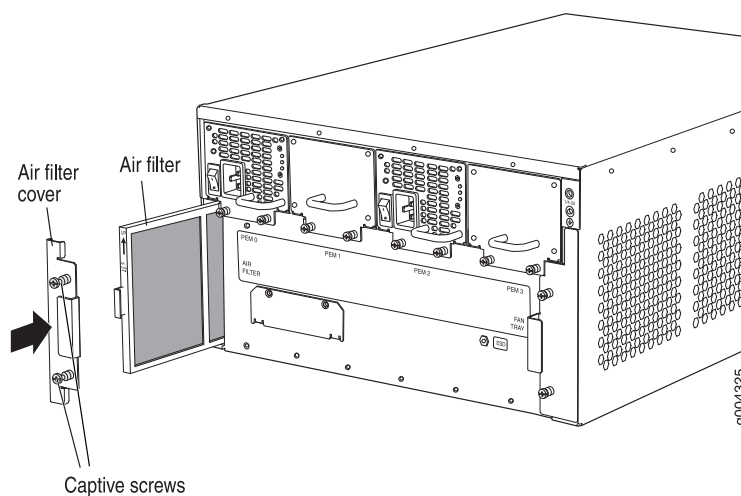

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also** • [MX240 Cooling System Description on page 39](#)
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Maintaining the MX240 Fan Tray

Purpose For optimum cooling, verify the condition of the fans.

- Action**
- Monitor the status of the fans. A fan tray contains multiple fans that work in unison to cool the router components. If one fan fails, the host subsystem adjusts the speed of the remaining fans to maintain proper cooling. A red alarm is triggered when a fan fails, and a yellow alarm and red alarm is triggered when a fan tray is removed.
 - To display the status of the cooling system, issue the **show chassis environment** command. The output is similar to the following:

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	Absent	
	PEM 2	Absent	
	PEM 3	OK	40 degrees C / 104 degrees F
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	42 degrees C / 107 degrees F

CB 0 Intake	OK	26 degrees C / 78 degrees F
CB 0 Exhaust A	OK	27 degrees C / 80 degrees F
CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
CB 0 ACBC	OK	26 degrees C / 78 degrees F
CB 0 SF A	OK	37 degrees C / 98 degrees F
CB 0 SF B	OK	35 degrees C / 95 degrees F
CB 1 Intake	OK	27 degrees C / 80 degrees F
CB 1 Exhaust A	OK	30 degrees C / 86 degrees F
CB 1 Exhaust B	OK	28 degrees C / 82 degrees F
CB 1 ACBC	OK	27 degrees C / 80 degrees F
CB 1 SF A	OK	36 degrees C / 96 degrees F
CB 1 SF B	OK	36 degrees C / 96 degrees F
CB 2 Intake	Absent	
CB 2 Exhaust A	Absent	
CB 2 Exhaust B	Absent	
CB 2 ACBC	Absent	
CB 2 SF A	Absent	
CB 2 SF B	Absent	
FPC 2 Intake	OK	22 degrees C / 71 degrees F
FPC 2 Exhaust A	OK	27 degrees C / 80 degrees F
FPC 2 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 Chip	OK	35 degrees C / 95 degrees F
FPC 2 I3 1 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 Chip	OK	30 degrees C / 86 degrees F
FPC 2 IA 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 IA 0 Chip	OK	36 degrees C / 96 degrees F
FPC 2 IA 1 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 4 Intake	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 4 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 Chip	OK	34 degrees C / 93 degrees F
FPC 4 I3 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 4 I3 2 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 2 Chip	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 TSensor	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 Chip	OK	29 degrees C / 84 degrees F
FPC 4 IA 0 TSensor	OK	35 degrees C / 95 degrees F
FPC 4 IA 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 IA 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 Intake	OK	20 degrees C / 68 degrees F
FPC 7 Exhaust A	OK	21 degrees C / 69 degrees F
FPC 7 Exhaust B	OK	21 degrees C / 69 degrees F
FPC 7 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 7 I3 0 Chip	OK	36 degrees C / 96 degrees F
FPC 7 I3 1 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 I3 2 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 Chip	OK	31 degrees C / 87 degrees F
FPC 7 IA 0 TSensor	OK	34 degrees C / 93 degrees F

	FPC 7 IA 0 Chip	OK	37 degrees C / 98 degrees F
	FPC 7 IA 1 TSensor	OK	31 degrees C / 87 degrees F
	FPC 7 IA 1 Chip	OK	35 degrees C / 95 degrees F
Fans	Top Fan Tray Temp	OK	27 degrees C / 80 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
	Top Tray Fan 2	OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F
	Bottom Tray Fan 1	OK	Spinning at high speed
	Bottom Tray Fan 2	OK	Spinning at high speed
	Bottom Tray Fan 3	OK	Spinning at high speed
	Bottom Tray Fan 4	OK	Spinning at high speed
	Bottom Tray Fan 5	OK	Spinning at high speed
	Bottom Tray Fan 6	OK	Spinning at high speed

- See Also**
- [MX240 Cooling System Description on page 39](#)
 - [Troubleshooting the MX240 Cooling System on page 350](#)

Replacing the MX240 Fan Tray

1. [Removing the MX240 Fan Tray on page 225](#)
2. [Installing the MX240 Normal-Capacity Fan Tray on page 226](#)

Removing the MX240 Fan Tray



NOTE: To prevent overheating, install the replacement fan tray immediately after removing the existing fan tray.

To remove the fan tray (see [Figure 82 on page 226](#)):


1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.



WARNING: To avoid injury, keep tools and your fingers away from the fans as you slide the fan module out of the chassis. The fans might still be spinning.

4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 82: Removing the Fan Tray

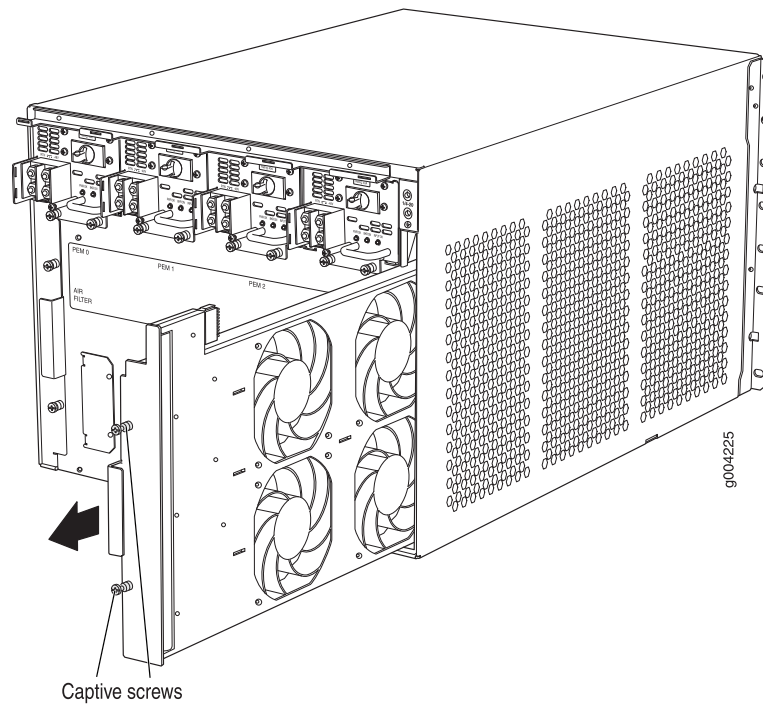


- See Also**
- [Installing the MX240 Normal-Capacity Fan Tray on page 226](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing the MX240 Normal-Capacity Fan Tray

To install the fan tray (see [Figure 83 on page 227](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray handle, and insert it straight into the chassis. Note the correct orientation by the **this side up** label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 83: Installing the Fan Tray

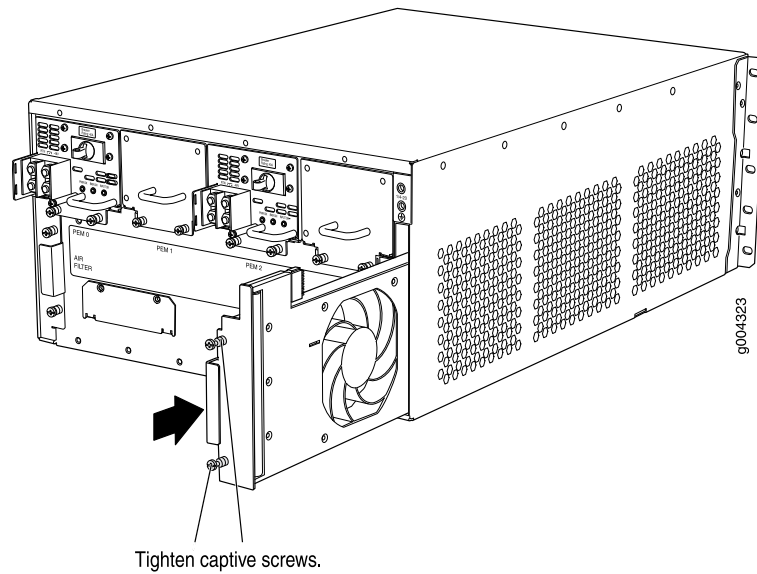

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

See Also • [MX240 Cooling System Description on page 39](#)
 • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Maintaining MX240 Host Subsystem Components

- [Maintaining the MX240 Host Subsystem on page 227](#)
- [Replacing an MX240 Routing Engine on page 230](#)
- [Replacing an SSD Drive on an RE-S-1800 on page 233](#)
- [Replacing an SSD Drive on an RE-S-X6-64G on page 235](#)
- [Replacing Connections to MX240 Routing Engine Interface Ports on page 240](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 242](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem on page 248](#)
- [Replacing the MX240 Craft Interface on page 251](#)

Maintaining the MX240 Host Subsystem

Purpose For optimum router performance, verify the condition of the host subsystem. The host subsystem comprises an SCB and a Routing Engine installed into a slot in the SCB.

Action On a regular basis:

- Check the LEDs on the craft interface to view information about the status of the Routing Engines.
- Check the LEDs on the SCB faceplate.
- Check the LEDs on the Routing Engine faceplate.
- To check the status of the Routing Engines, issue the **show chassis routing-engine** command. The output is similar to the following:

```
user@host> show chassis routing-engine
```

```
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             45 degrees C / 113 degrees F
  CPU temperature         43 degrees C / 109 degrees F
  DRAM                   2048 MB
  Memory utilization      15 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                8 percent
    Interrupt             0 percent
    Idle                  92 percent
  Model                  RE-S-1300
  Serial ID              1000694968
  Start time             2007-07-10 12:27:39 PDT
  Uptime                 1 hour, 40 minutes, 37 seconds
  Load averages:         1 minute   5 minute   15 minute
                        0.11       0.06       0.01

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             46 degrees C / 114 degrees F
  CPU temperature         42 degrees C / 107 degrees F
  DRAM                   2048 MB
  Memory utilization      13 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  100 percent
  Model                  RE-S-1300
  Serial ID              1000694976
  Start time             2007-06-19 14:17:00 PDT
  Uptime                 20 days, 23 hours, 51 minutes, 4 seconds
```

- To check the status of the SCBs, issue the **show chassis environment cb** command. The output is similar to the following:

```
user@host> show chassis environment cb
```

```

CB 0 status:
State                               Online Master
Temperature                           40 degrees C / 104 degrees F
Power 1
  1.2 V                               1208 mV
  1.5 V                               1521 mV
  1.8 V                               1807 mV
  2.5 V                               2507 mV
  3.3 V                               3319 mV
  5.0 V                               5033 mV
  12.0 V                              12142 mV
  1.25 V                              1243 mV
  3.3 V SM3                           3312 mV
  5 V RE                               5059 mV
  12 V RE                              11968 mV
Power 2
  11.3 V bias PEM                     11253 mV
  4.6 V bias MidPlane                 4814 mV
  11.3 V bias FPD                    11234 mV
  11.3 V bias POE 0                  11176 mV
  11.3 V bias POE 1                  11292 mV
Bus Revision                          42
FPGA Revision                          1
CB 1 status:
State                               Online Standby
Temperature                           40 degrees C / 104 degrees F
Power 1
  1.2 V                               1202 mV
  1.5 V                               1514 mV
  1.8 V                               1807 mV
  2.5 V                               2500 mV
  3.3 V                               3293 mV
  5.0 V                               5053 mV
  12.0 V                              12200 mV
  1.25 V                              1260 mV
  3.3 V SM3                           3319 mV
  5 V RE                               5059 mV
  12 V RE                              12007 mV
Power 2
  11.3 V bias PEM                     11311 mV
  4.6 V bias MidPlane                 4827 mV
  11.3 V bias FPD                    11330 mV
  11.3 V bias POE 0                  11292 mV
  11.3 V bias POE 1                  11311 mV
Bus Revision                          42
FPGA Revision                          1

```

To check the status of a specific SCB, issue the **show chassis environment cb** command and include the slot number of the SCB. The output is similar to the following:

```

user@host> show chassis environment cb 0
CB 0 status:
State                               Online
Temperature Intake                   66 degrees C / 150 degrees F
Temperature Exhaust A                 67 degrees C / 152 degrees F
Temperature Exhaust B                 73 degrees C / 163 degrees F
Power

```

1.2 V	1153 mV
1.5 V	1417 mV
1.8 V	1704 mV
2.5 V	2375 mV
3.3 V	3138 mV
5.0 V	4763 mV
1.2 V Rocket IO	1160 mV
1.5 V Rocket IO	1408 mV
1.8 V RLDRAM	1717 mV
I2C Slave Revision	15

For more information about using the CLI, see the Junos OS documentation.

- See Also**
- [MX240 Host Subsystem Description on page 58](#)
 - [SCB-MX Description](#)
 - [MX240 Routing Engine Description on page 59](#)
 - [MX240 Craft Interface Overview on page 35](#)

Replacing an MX240 Routing Engine

1. [Removing an MX240 Routing Engine on page 230](#)
2. [Installing an MX240 Routing Engine on page 232](#)

Removing an MX240 Routing Engine

Before you remove a Routing Engine, remove the cables that connect to it.



CAUTION: Before you replace a Routing Engine, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.



CAUTION: If the Routing Engine to be replaced is currently functioning as the master Routing engine, switch it to be the backup before removing it.

To remove a Routing Engine from an SCB (see [Figure 84 on page 231](#)):


1. Take the Routing Engine offline gracefully.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Verify that the Routing Engine LEDs are off.

5. Loosen the captive screws on the left and right of the Routing Engine.
6. Flip the ejector handles outward to unseat the Routing Engine.
7. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
8. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
9. Place the Routing Engine on the antistatic mat.



NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Figure 84: Removing a Routing Engine

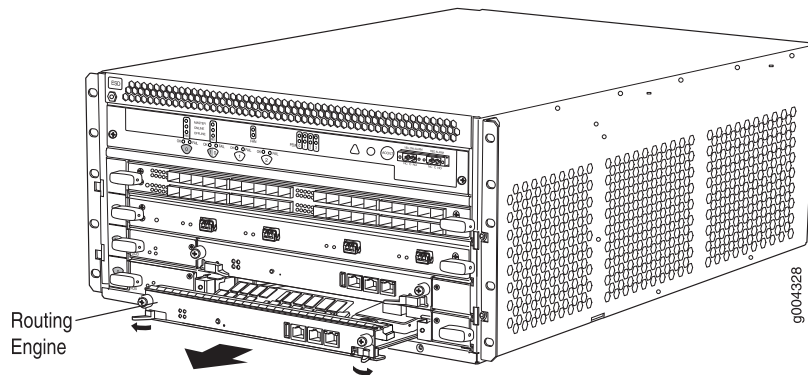

- See Also**
- [MX240 Routing Engine Description on page 59](#)
 - [Effect of Taking the MX240 Host Subsystem Offline](#)
 - [Replacing Connections to MX240 Routing Engine Interface Ports on page 240](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an MX240 Routing Engine

To install a Routing Engine into an SCB (Figure 85 on page 233):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.
4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCB.
5. Slide the Routing Engine into the SCB until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.



CAUTION: Align the Routing Engine correctly to avoid damaging it.

6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the left and right of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

The Routing Engine might require several minutes to boot.

After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **REO**, and **REI** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

To check the status of the Routing Engine, use the CLI command:


```
user@host> show chassis routing-engine
Routing Engine status:      Slot 0:      Current state      Master ...
```

For more information about using the CLI, see the Junos OS documentation.



NOTE: If enhanced IP network services is configured on the chassis, all routing engines must be rebooted after synchronizing the routing engines. For more information on synchronizing the routing engines, see *Synchronizing Routing Engines*.

Figure 85: Installing an MX480 Routing Engine

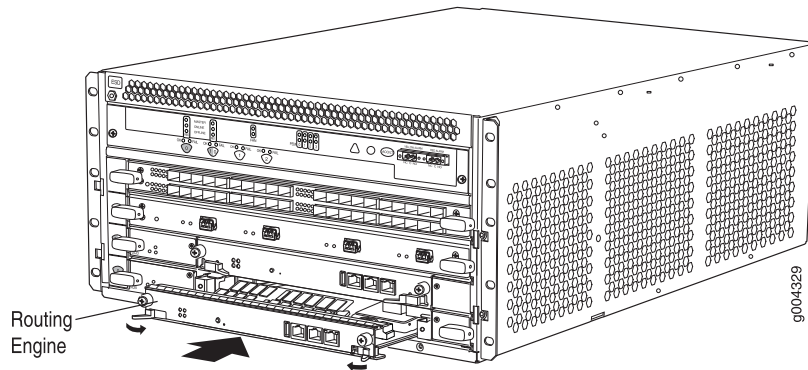


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Replacing Connections to MX240 Routing Engine Interface Ports on page 240](#)
 - [MX240 Routing Engine Description on page 59](#)

- See Also**
- [SCB-MX Description](#)
 - [Effect of Taking the MX240 Host Subsystem Offline](#)
 - [Taking an MX240 Host Subsystem Offline](#)
 - [Replacing Connections to MX240 Routing Engine Interface Ports on page 240](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Synchronizing Routing Engines](#)

Replacing an SSD Drive on an RE-S-1800

Each RE-S-1800 Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-1800 ships with one SSD installed in the slot labeled **SATA SSD1**. The spare SSD is Juniper part number SSD-32G-RE-S. [Figure 86 on page 234](#) shows the arrangement of storage drive slots on a RE-S-1800 Routing Engine.

Figure 86: RE-S-1800 Storage Drive Slots

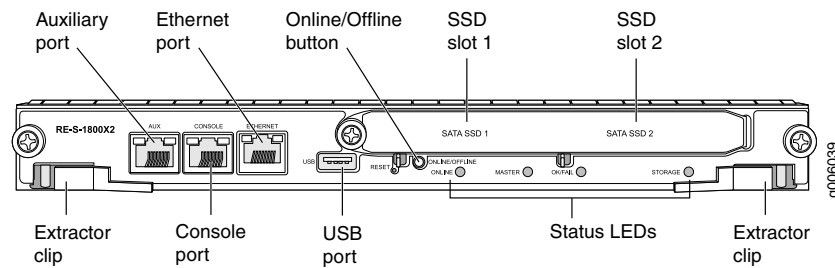

The following drive has been verified to work in the RE-S-1800 Routing Engine:

- SSD-32G-RE-S

To replace a storage drive:

1. Disable and deactivate the storage drive.
2. Remove the storage drive.
 - a. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.
For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
 - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
 - c. Slide the lock on the ejector to the unlocked position.
 - d. Carefully slide the drive out of the slot.
3. Reinstall a storage drive.
 - a. Carefully align the sides of the drive with the guides in the slot.
 - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
 - c. Close the access door and tighten the thumbscrew to secure the door.

See Also • [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)


Replacing an SSD Drive on an RE-S-X6-64G

Each RE-S-X6-64G Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-X6-64G ships with two SSDs installed in the slot labeled **DISK1** and **DISK2**. [Figure 87 on page 235](#) shows the arrangement of storage drive slots on a RE-S-X6-64G Routing Engine.

Replacing an SSD drive in a RE-S-X6-64G Routing Engine consists of the following two stages:

1. Replacing the SSD Drive in the Routing Engine.
2. Copying vmhost and Junos OS to the replaced SSD.

Figure 87: RE-S-X6-64G Storage Drive Slots

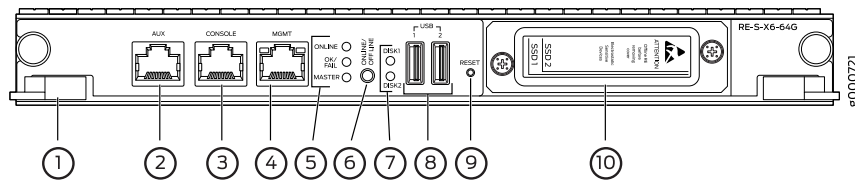

The following drive has been verified to work in the RE-S-X6-64G Routing Engine:

- 64GB slim SATA SSD

Replacing the SSDs:

1. To replace an SSD in the slot labeled **Disk2**:

- a. Make sure that there is no **VMHost %d Boot from alternate disk** alarm in the output:

```
user@host>show chassis alarm
```

- To replace an SSD in the slot labeled **Disk1**:

- a. Make sure that the router is booted up and running from an image from disk1.

Back up the currently running vmhost and Junos OS on disk1 to ensure that both disk1 and disk2 have the same version of vmhost and Junos OS:

```
user@host> request vmhost snapshot [partition]
```



NOTE: Partitioning the target media is optional.

- b. Reboot the router from disk2:

```
user@host> request vmhost reboot disk2
```


- c. Check for the presence of the **VMHost %d Boot from alternate disk** alarm in the output:

```
user@host>show chassis alarm
```

2. Offline the Routing Engine by pressing the **ONLINE/OFFLINE** button.

3. Remove the SSD.
 - a. Attach an ESD grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.
For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
 - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
 - c. Slide the lock on the ejector to the unlocked position.
 - d. Carefully slide the drive out of the slot.

Figure 88: Removing an SSD in the Routing Engine RE-S-X6-64G

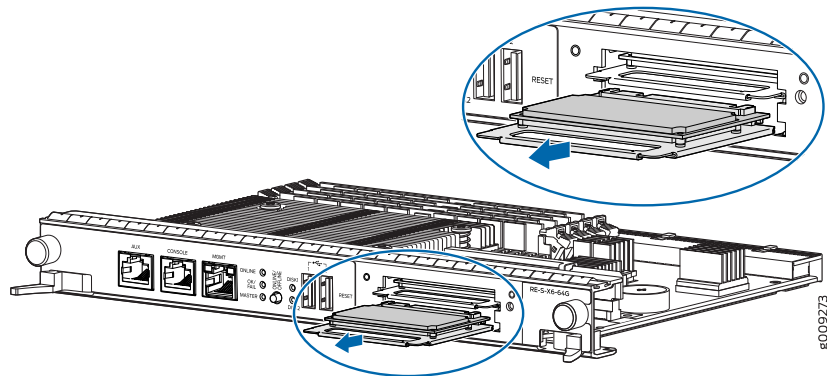

4. Reinstall an SSD:
 - a. Carefully align the sides of the drive with the guides in the slot.
 - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
 - c. Close the access door and tighten the thumbscrew to secure the door.

1. Copy Junos OS to the newly replaced SSD:

If both the SSDs are replaced together:

- a. Install using an USB disk:

1. Insert the USB disk in the **USB** slot on the Routing Engine.
2. After the Routing Engine boots from the USB, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N?]** on the console.
3. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.



NOTE: To prepare a bootable USB disk, see *Creating an Emergency Boot Device for Routing Engines with VM Host Support*.

- b. Install vmhost using the PXEBoot method:

1. Set up the PXEBoot server. See *Copying VM Host Installation Package to the PXE Boot Server*.
2. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button
3. During the boot, when you see the message **Press Esc for boot options** press **Esc** key to enter into the BIOS menu boot options.
After the **Esc** key is pressed, **Esc is pressed. Go to boot options.** is displayed on the screen.
4. Using **Up** or **Down** arrow keys, navigate to **Boot Manager** and press the **Enter** key.
5. Using **Up** or **Down** arrow keys, navigate through the EFI boot devices listed and select **EFI Network 0 for IPv4** to boot from the PXEboot server and press the **Enter** key.
6. **Booting `net boot console** is displayed and PXEBoot continues.



NOTE: The booting process may take several minutes.

7. After the Routing Engine boots, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N?]** on the console.
8. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

If only disk2 is replaced:

- a. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.
- b. The router boots from disk1. To be able to boot from disk2:


```
user@host> request vmhost snapshot partition
```

If only disk1 is replaced:

- Bring the Routing Engine online by pressing the ONLINE/OFFLINE button.
- The router boots from disk2 . To be able to boot from disk1:

```
user@host> request vmhost snapshot partition
```

Figure 89: Installing an SSD in the Routing Engine RE-S-X6-64G

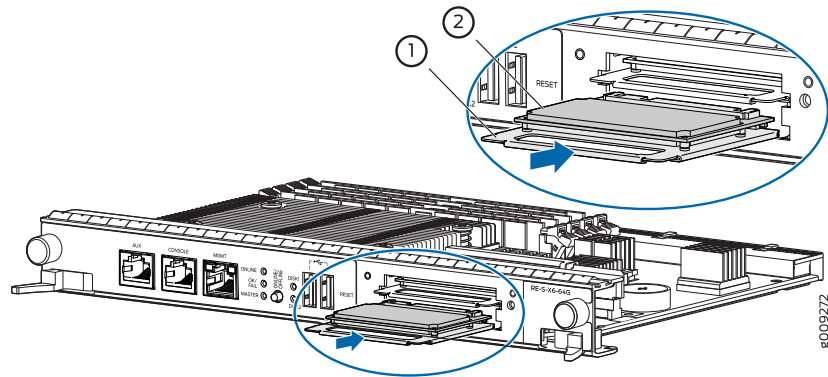

Copying vmhost and Junos OS from an USB disk when both the SSDs are replaced together:



NOTE: To prepare a bootable USB disk, see [Creating an Emergency Boot Device for RE-MX-X6, RE-MX-X8 and RE-PTX-X8 Routing Engines](#).

- Insert the USB disk in the **USB** slot on the Routing Engine.
- After the Routing Engine boots from the USB, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N]?** on the console.
- After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

Copying vmhost and Junos OS to the SSDs from the PXEBoot server:

- Set up the PXEBoot server. See [Copying VM Host Installation Package to the PXE Boot Server](#).
- Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.

3. During the boot, when you see the message **Press Esc for boot options** press **Esc** key to enter into the BIOS menu boot options.

After the **Esc** key is pressed, **Esc is pressed. Go to boot options.** is displayed on the screen.
4. Using **Up** or **Down** arrow keys, navigate to **Boot Manager** and press the **Enter** key.
5. Using **Up** or **Down** arrow keys, navigate through the EFI boot devices listed and select **EFI Network 0 for IPv4** to boot from the PXEboot server and press the **Enter** key.
6. **Booting `net boot console** is displayed and PXEBoot continues.



NOTE: The booting process may take several minutes.

7. After the Routing Engine boots, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N]?** on the console.
8. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

Copying vmhost and Junos OS when only one disk is replaced:

- a. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.
- b. The router boots from disk1 if disk2 is replaced. To be able to boot from disk2:

```
user@host> request vmhost snapshot partition
```

The router boots from disk2 if disk1 is replaced. To be able to boot from disk1:

```
user@host> request vmhost snapshot recovery partition
```

- See Also**
- [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)
 - [Upgrading the SSD Firmware on Routing Engines with VM Host Support](#)

Replacing Connections to MX240 Routing Engine Interface Ports

- [Replacing the Management Ethernet Cable on an MX240 Router on page 241](#)
- [Replacing the Console or Auxiliary Cable on an MX240 Router on page 241](#)

Replacing the Management Ethernet Cable on an MX240 Router

One Ethernet cable with RJ-45 connectors is provided with the router. To replace the cable connected to the **ETHERNET** port:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port. [Figure 90 on page 241](#) shows the connector.
3. Disconnect the cable from the network device.
4. Plug one end of the replacement cable into the **ETHERNET** port. [Figure 91 on page 241](#) shows the port.
5. Plug the other end of the cable into the network device.

Figure 90: Cable Connector


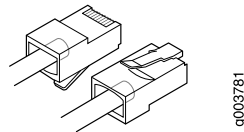


Figure 91: Ethernet Port

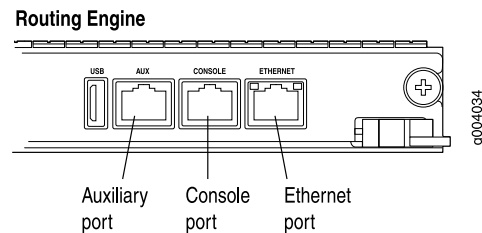

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 163](#)


Replacing the Console or Auxiliary Cable on an MX240 Router

To use a system console to configure and manage the Routing Engine, connect it to the **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One RJ-45/DB-9 cable is provided with the router. If you want to connect a device to both ports, you must supply another cable.

To replace a cable connected to a management console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port.
3. Disconnect the cable from the console or auxiliary device.
4. Plug the RJ-45 end of the replacement serial cable into the **CONSOLE** or **AUX** port. [Figure 92 on page 242](#) shows the external device ports on the Routing Engine.
5. Plug the female DB-9 end into the console or auxiliary device's serial port.

Figure 92: Auxiliary and Console Ports

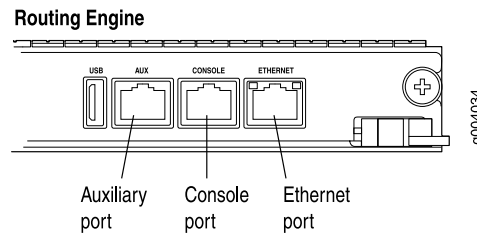

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 163](#)

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 163](#)

Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem

A redundant host subsystem consists of a master Routing Engine (RE0) and a backup Routing Engine (RE1). To upgrade the host subsystem to use the RE-S-X6-64G Routing Engine, you must first uninstall the backup Routing Engine and install the RE-S-X6-64G Routing Engine, which then becomes the backup Routing Engine. You then switch over this backup Routing Engine to make it the master Routing Engine. Replace the other Routing Engine and configure it as the backup Routing Engine.

Ensure that the Switch Control Board in the chassis is SCBE2 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see [“Upgrading an MX240 to Use the SCBE2-MX” on page 338](#), [Upgrading an MX480 to Use the SCBE2-MX](#) or [Upgrading an MX960 to Use the SCBE2-MX](#), depending on the chassis on which the Routing Engine is being upgraded.



NOTE: Save the router configuration before proceeding with the Routing Engine upgrade.



NOTE: Nonstop active routing (NSR) and graceful Routing Engine switchover (GRES) are not supported during the upgrade and they must be temporarily disabled. Disable NSR by removing the `nonstop-routing` statement from the `[edit routing-options]` hierarchy level and by removing the `graceful-switchover` statement from the `[edit chassis redundancy]` hierarchy level .

1. [Removing the Routing Engine on page 243](#)
2. [Installing the Routing Engine RE-S-X6-64G on page 245](#)
3. [Verifying and Configuring the Upgraded Routing Engine as the Master on page 248](#)
4. [Verifying and Configuring the Upgraded Routing Engine as the Backup on page 248](#)

Removing the Routing Engine

To remove the backup Routing Engine from the chassis (see [Figure 93 on page 244](#), [Figure 94 on page 244](#), and [Figure 95 on page 245](#)):

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the **request system power-off** command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Figure 93: Removing a Routing Engine from an MX240 Router

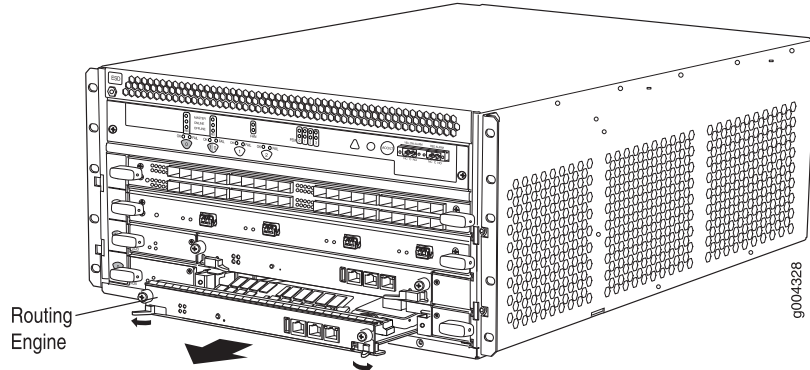


Figure 94: Removing a Routing Engine from an MX480 Router


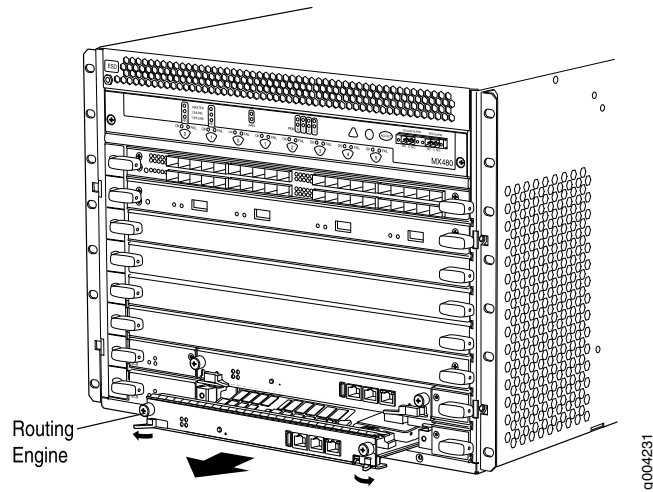


Figure 95: Removing a Routing Engine from an MX960 Router

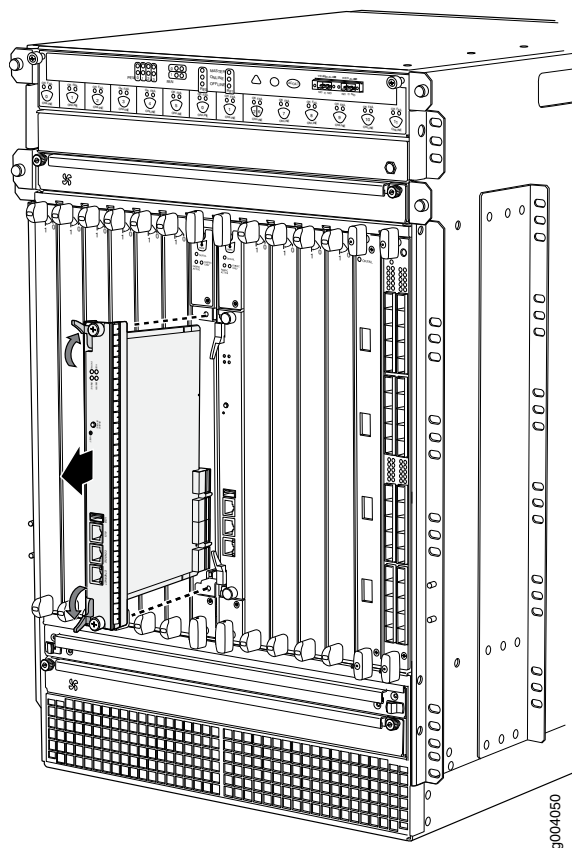

Installing the Routing Engine RE-S-X6-64G

To install the Routing Engine RE-S-X6-64G:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the Switch Control Board SCBE2.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.

5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Replace the former master Routing Engine, RE0, with the Routing Engine RE-S-X6-64G.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED on the Routing Engine lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

Figure 96: Installing a Routing Engine in an MX240 Router

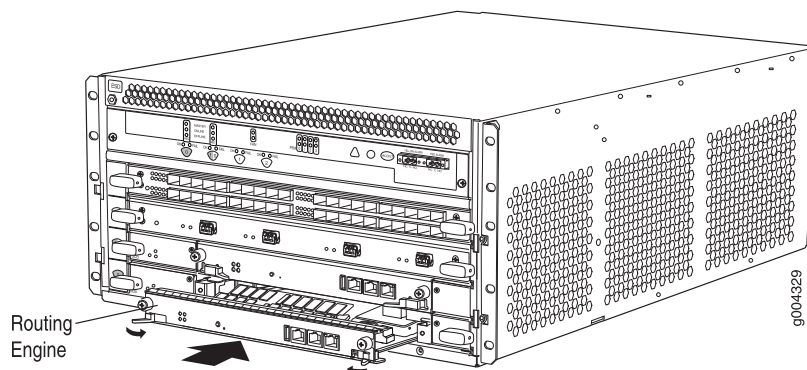


Figure 97: Installing a Routing Engine in an MX480 Router


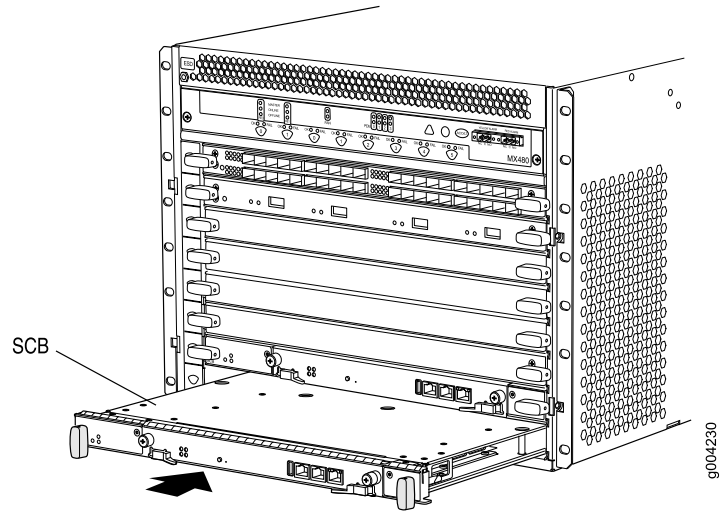


Figure 98: Installing a Routing Engine in an MX960 Router

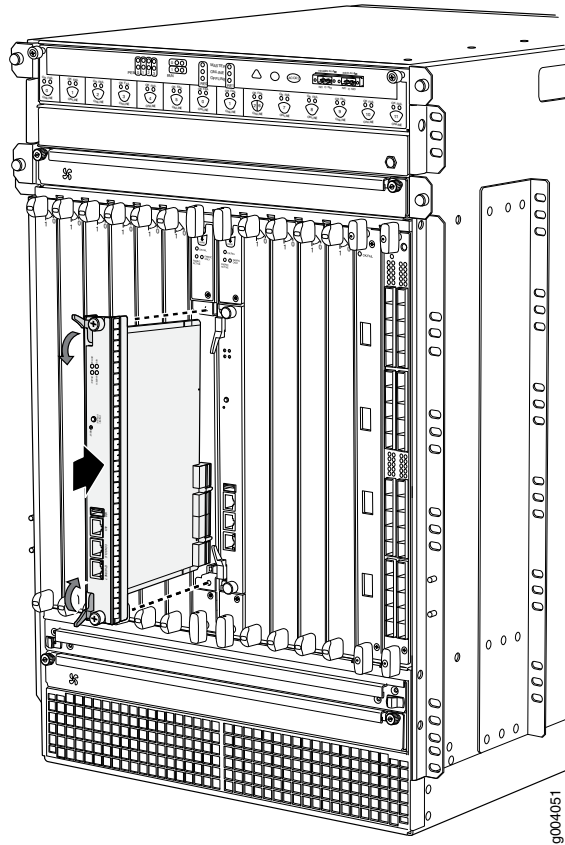

Verifying and Configuring the Upgraded Routing Engine as the Master

After replacing the backup Routing Engine with the RE-S-X6-64G Routing Engine, perform the following steps:

1. Verify that the SCBE2 and RE-S-X6-64G Routing Engine are online by issuing the **show chassis hardware** command.
2. After you install the RE-S-X6-64G Routing Engine into the SCBE2, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.
3. Configure the backup Routing Engine by using the **commit synchronize** command to copy the configuration to the backup Routing Engine.
4. Use the **request chassis routing-engine master switch** command to make the Routing Engine RE-S-X6-64G (RE1) the master Routing Engine. All FPCs reboot after this step.

Verifying and Configuring the Upgraded Routing Engine as the Backup

1. Use the **request chassis routing-engine master switch** command to make newly installed RE-S-X6-64G (RE0) the backup Routing Engine.
2. Use the **commit synchronize** command to copy the active configuration from the master Routing Engine to the backup Routing Engine.

See Also • [RE-S-X6-64G Routing Engine Description on page 65](#)

Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem

In a nonredundant host subsystem, only one Routing Engine and one Switch Control Board are present in the chassis. When you are upgrading the Routing Engine, taking the host subsystem offline shuts down the router. To upgrade the host subsystem with the RE-S-X6-64G Routing Engine, you must uninstall the existing Routing Engine and install the RE-S-X6-64G Routing Engine. Ensure that the Switch Control Board in the chassis is SCBE2 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see [“Upgrading an MX240 to Use the SCBE2-MX” on page 338](#), [Upgrading an MX480 to Use the SCBE2-MX](#) or [Upgrading an MX960 to Use the SCBE2-MX](#), depending on the chassis on which the Routing Engine is being upgraded. .



NOTE: Save the router configuration before proceeding with the Routing Engine upgrade.

1. [Removing the Routing Engine on page 249](#)
2. [Installing the Routing Engine RE-S-X6-64G on page 250](#)

Removing the Routing Engine

To remove the Routing Engine from the chassis:

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the **request system power-off** command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Installing the Routing Engine RE-S-X6-64G

To install the new Routing Engine (RE-S-X6-64G):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Verify that the SCBE2 and RE-S-X6-64G Routing Engine are online by issuing the **show chassis hardware** command.
8. After you install the RE-S-X6-64G Routing Engine into the SCBE2, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED lights steadily instead, remove the Routing Engine and reinstall it. If the red **FAIL** LED on the Routing Engine still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

- See Also**
- [RE-S-X6-64G Routing Engine Description on page 65](#)
 - [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 242](#)

Replacing the MX240 Craft Interface


1. [Disconnecting the Alarm Relay Wires from the MX240 Craft Interface on page 251](#)
2. [Removing the MX240 Craft Interface on page 251](#)
3. [Installing the MX240 Craft Interface on page 252](#)
4. [Connecting the Alarm Relay Wires to the MX240 Craft Interface on page 253](#)

Disconnecting the Alarm Relay Wires from the MX240 Craft Interface

To disconnect the alarm relay wires from the router and an alarm-reporting device (see [Figure 99 on page 251](#)):

1. Disconnect the existing wire at the external device.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Using a 2.5-mm flat-blade screwdriver, loosen the small screws on the face of the terminal block and remove the block from the relay contact.
4. Using the 2.5-mm flat-blade screwdriver, loosen the small screws on the side of the terminal block. Remove existing wires from the slots in the front of the block.

Figure 99: Alarm Relay Contacts

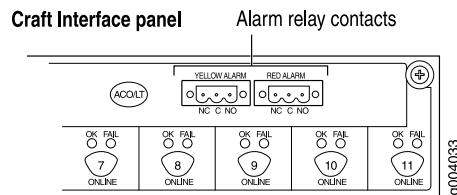

- See Also**
- [MX240 Craft Interface Overview on page 35](#)
 - [Connecting the Alarm Relay Wires to the MX240 Craft Interface on page 253](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)


Removing the MX240 Craft Interface

To remove the craft interface (see [Figure 100 on page 252](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Detach any external devices connected to the craft interface.
3. Loosen the captive screws at the left and right corners of the craft interface faceplate.

4. Grasp the craft interface faceplate and carefully tilt it toward you until it is horizontal.
5. Disconnect the ribbon cable from the back of the faceplate by gently pressing on both sides of the latch with your thumb and forefinger. Remove the craft interface from the chassis.

Figure 100: Removing the Craft Interface

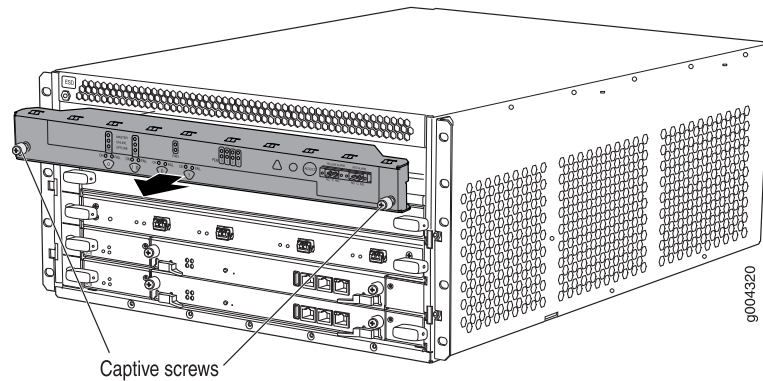


- See Also**
- [MX240 Craft Interface Overview on page 35](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing the MX240 Craft Interface

To install the craft interface (see [Figure 101 on page 253](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the craft interface with one hand, and hold the bottom edge of the craft interface with the other hand to support its weight.
3. Orient the ribbon cable so that it plugs into the connector socket. The connector is keyed and can be inserted only one way.
4. Align the bottom of the craft interface with the sheet metal above the card cage and press it into place.
5. Tighten the screws on the left and right corners of the craft interface faceplate.
6. Reattach any external devices connected to the craft interface.

Figure 101: Installing the Craft Interface

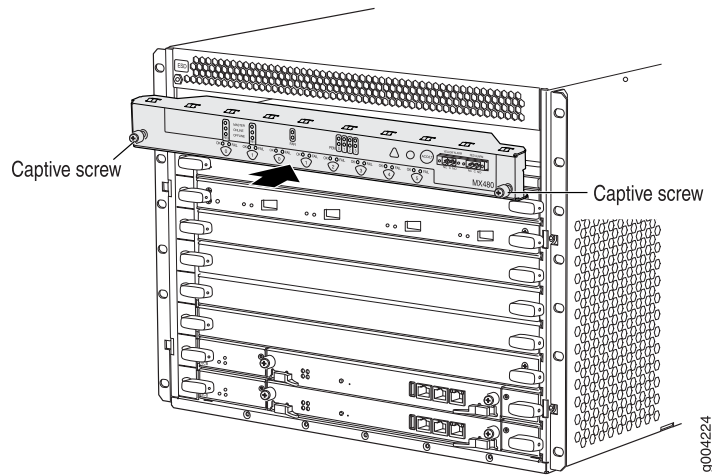


- See Also**
- [MX240 Craft Interface Overview on page 35](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Connecting the Alarm Relay Wires to the MX240 Craft Interface

To connect the alarm relay wires between a router and an alarm-reporting device (see [Figure 102 on page 253](#)):

1. Prepare the required length of replacement wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. Insert the replacement wires into the slots in the front of the block. Use a 2.5-mm flat-blade screwdriver to tighten the screws and secure the wire.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
5. Attach the other end of the wires to the external device.

Figure 102: Alarm Relay Contacts

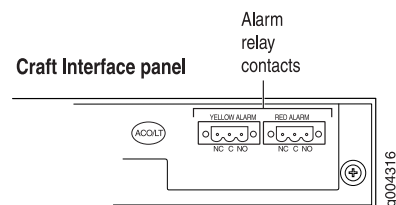

- See Also**
- [MX240 Craft Interface Overview on page 35](#)
 - [Disconnecting the Alarm Relay Wires from the MX240 Craft Interface on page 251](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also**
- [MX240 Craft Interface Overview on page 35](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Maintaining MX240 Interface Modules

- [Maintaining MX240 DPCs on page 254](#)
- [Holding an MX240 DPC on page 256](#)
- [Storing an MX240 DPC on page 258](#)
- [Replacing an MX240 DPC on page 259](#)
- [Maintaining MX240 FPCs on page 264](#)
- [Holding an MX240 FPC on page 266](#)
- [Storing an MX240 FPC on page 269](#)
- [Replacing an MX240 FPC on page 269](#)
- [Replacing an MX240 MIC on page 274](#)
- [Maintaining MX240 MICs on page 279](#)
- [Installing an MX240 Dual-Wide MIC on page 280](#)
- [Maintaining MX240 MPCs on page 282](#)
- [Replacing an MX240 MPC on page 284](#)
- [Maintaining MX240 PICs on page 288](#)
- [Replacing an MX240 PIC on page 289](#)
- [Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs on page 293](#)
- [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
- [Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 298](#)
- [Replacing an MX240 AS MLC on page 300](#)
- [Replacing an MX240 AS MSC on page 304](#)
- [Replacing an MX240 AS MXC on page 307](#)

Maintaining MX240 DPCs

- Purpose** For optimum router performance, verify the condition of the Dense Port Concentrators (DPCs). The router can have up to three DPCs mounted horizontally in the DPC card cage at the front of the chassis.

Action On a regular basis:

- Check the LEDs on the craft interface directly above each DPC slot. The green LED labeled **OK** lights steadily when a DPC is functioning normally.
- Check the **OK/FAIL** LED on the DPC. If the DPC detects a failure, the DPC sends an alarm message to the Routing Engine.
- Issue the CLI **show chassis fpc** command to check the status of installed DPCs. As shown in the sample output, the value **State** in the column labeled **State** indicates that the DPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Interrupt	Memory DRAM (MB)	Heap	Utilization (%)	Buffer
0	Online	41	9	0	1024	15		57
1	Online	43	5	0	1024	16		57
2	Online	43	11	0	1024	16		57

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
  State                Online
  Temperature          33 degrees C / 91 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM      4096 MB
  Start time:          2007-12-06 11:33:00 PST
  Uptime:              4 hours, 34 minutes, 49 seconds

Slot 1 information:
  State                Online
  Temperature          33 degrees C / 91 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM      4096 MB
  Start time:          2007-12-06 11:33:01 PST
  Uptime:              4 hours, 34 minutes, 48 seconds

Slot 2 information:
  State                Online
  Temperature          33 degrees C / 91 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM      4096 MB
  Start time:          2007-12-06 11:33:05 PST
  Uptime:              4 hours, 34 minutes, 44 seconds
```

- Issue the CLI **show chassis fpc pic-status** command. The DPC slots are numbered 1/0, 1, and 2, bottom to top:

```
user@host> show chassis fpc pic-status
```

```
Slot 0  Online      DPCE 4x 10GE R
PIC 0   Online      1x 10GE(LAN/WAN)
PIC 1   Online      1x 10GE(LAN/WAN)
```

```

PIC 2 Online      1x 10GE(LAN/WAN)
PIC 3 Online      1x 10GE(LAN/WAN)
Slot 1 Online     DPCE 40x 1GE R
PIC 0 Online      10x 1GE(LAN)
PIC 1 Online      10x 1GE(LAN)
PIC 2 Online      10x 1GE(LAN)
PIC 3 Online      10x 1GE(LAN)
Slot 2 Online     DPCE 40x 1GE R
PIC 0 Online      10x 1GE(LAN)
PIC 1 Online      10x 1GE(LAN)
PIC 2 Online      10x 1GE(LAN)
PIC 3 Online      10x 1GE(LAN)

```

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 Dense Port Concentrator \(DPC\) LEDs on page 98](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)

Holding an MX240 DPC

When carrying a DPC, you can hold it either vertically or horizontally.



NOTE: A DPC weighs 14.5 lb (6.6 kg). Be prepared to accept the full weight of the DPC as you lift it.

To hold a DPC vertically:

1. Orient the DPC so that the faceplate faces you. To verify orientation, confirm that the text on the DPC is right-side up and the electromagnetic interference (EMI) strip is on the right-hand side.
2. Place one hand around the DPC faceplate about a quarter of the way down from the top edge. To avoid deforming the EMI shielding strip, do not press hard on it.
3. Place your other hand at the bottom edge of the DPC.

If the DPC is horizontal before you grasp it, place your left hand around the faceplate and your right hand along the bottom edge.

To hold a DPC horizontally:


1. Orient the DPC so that the faceplate faces you.
2. Grasp the top edge with your left hand and the bottom edge with your right hand.

You can rest the faceplate of the DPC against your body as you carry it.

As you carry the DPC, do not bump it against anything. DPC components are fragile.

Never hold or grasp the DPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet. See [Figure 103 on page 257](#).

Figure 103: Do Not Grasp the Connector Edge

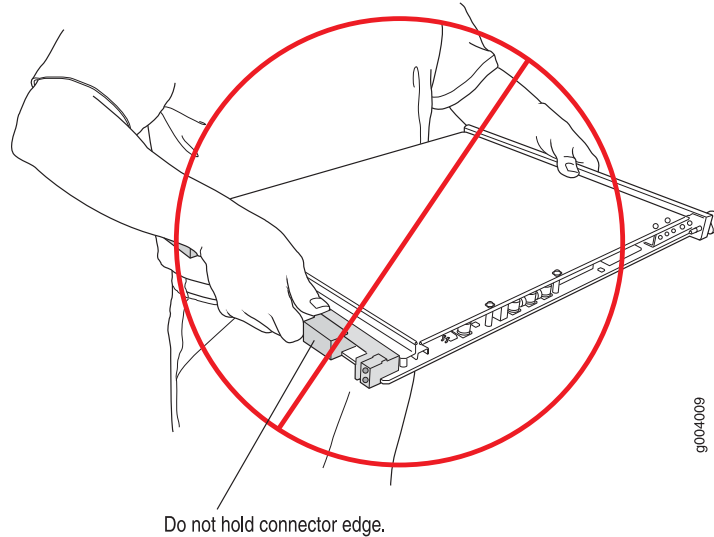


Never carry the DPC by the faceplate with only one hand.

Do not rest any edge of a DPC directly against a hard surface (see [Figure 104 on page 258](#)).

Do not stack DPCs.

Figure 104: Do Not Rest the DPC on an Edge

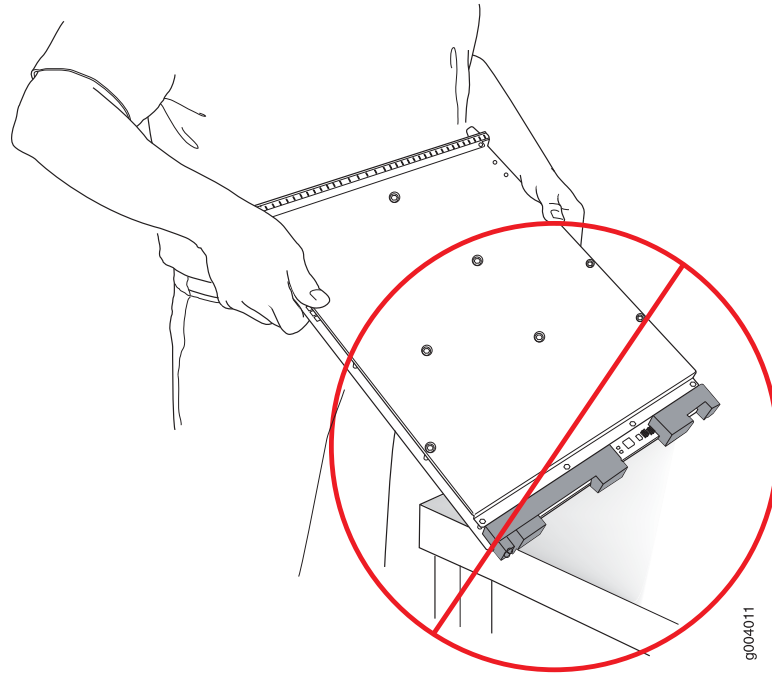

Do not rest connectors on any surface.

If you must rest the DPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.

- See Also**
- [MX240 DPC Terminology](#)
 - [Storing an MX240 DPC on page 258](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)
 - [Replacing an MX240 DPC on page 259](#)

Storing an MX240 DPC

You must store a DPC as follows:

- In the router
- In the container in which a spare DPC is shipped
- Horizontally and sheet metal side down

When you store a DPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the DPC is heavy, and because antistatic bags are fragile, inserting the DPC into the bag is easier with two people. To do this, one person holds the DPC in the horizontal position with the faceplate facing the body, and the other person slides the opening of the bag over the DPC connector edge.

If you must insert the DPC into a bag by yourself, first lay the DPC horizontally on a flat, stable surface, sheet metal side down. Orient the DPC with the faceplate facing you. Carefully insert the DPC connector edge into the opening of the bag, and pull the bag toward you to cover the DPC.

Never stack a DPC under or on top of any other component.

- See Also**
- [MX240 DPC Terminology](#)
 - [Holding an MX240 DPC on page 256](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)

Replacing an MX240 DPC

1. [Removing an MX240 DPC on page 259](#)
2. [Installing an MX240 DPC on page 261](#)

Removing an MX240 DPC

A DPC weighs up to 13.1 lb (5.9 kg). Be prepared to accept its full weight.

To remove a DPC (see [Figure 105 on page 261](#)):

1. Have ready a replacement DPC or DPC blank panel and an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC you are removing that uses an optical interface.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each port on the DPC so that you can later reconnect the cables to the correct ports.
4. Use one of the following methods to take the DPC offline:
 - Press and hold the corresponding DPC online button on the craft interface. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off.
 - Issue the following CLI command:


```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).
5. Disconnect the cables from the DPC.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. Immediately cover each optical transceiver and the end of each fiber-optic cable with a rubber safety cap.
7. Arrange the disconnected cables to prevent the cables from developing stress points.
8. Simultaneously turn both of the ejector handles counterclockwise to unseat the DPC.
9. Grasp the handles and slide the DPC straight out of the card cage halfway.
10. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack DPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

11. If you are not reinstalling a DPC into the emptied DPC slot within a short time, install a blank DPC panel over the slot to maintain proper airflow in the DPC card cage.



CAUTION: After removing a DPC from the chassis, wait at least 30 seconds before reinserting it, removing a DPC from a different slot, or inserting a DPC into a different slot.

Figure 105: Removing a DPC

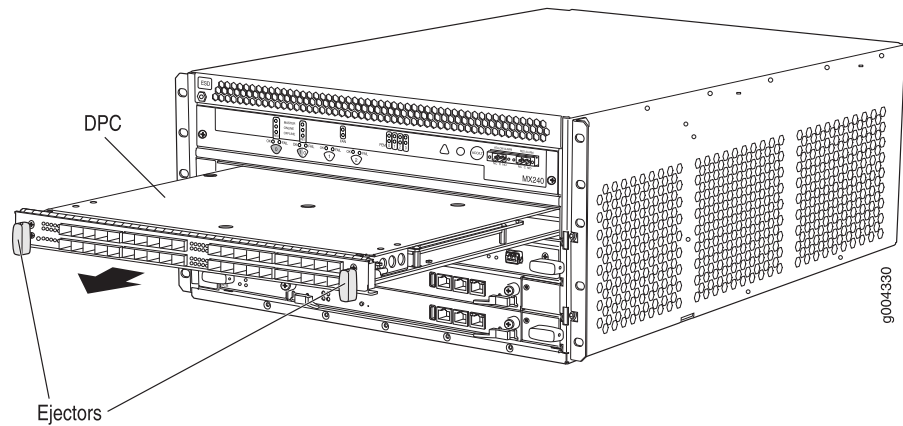

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 Dense Port Concentrator \(DPC\) LEDs on page 98](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)

Installing an MX240 DPC

A DPC weighs up to 14.5 lb (6.6 kg). Be prepared to accept its full weight.

To install a DPC (see [Figure 106 on page 263](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered with a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you vertically.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.

9. Remove the rubber safety cap from each fiber-optic transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

10. Insert the cables into the cable connector ports on each DPC (see [Figure 107 on page 264](#)).

11. Arrange the cable in the standard or extended cable manager to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

12. Use one of the following methods to bring the DPC online:

- Press and hold the corresponding DPC online button on the craft interface until the green OK LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED turns green, wait at least 30 seconds before removing the DPC again, removing a DPC from a different slot, or inserting a DPC in a different slot.


You can also verify that the DPC is functioning correctly by issuing the `show chassis fpc` and `show chassis fpc pic-status` commands.

Figure 106: Installing a DPC

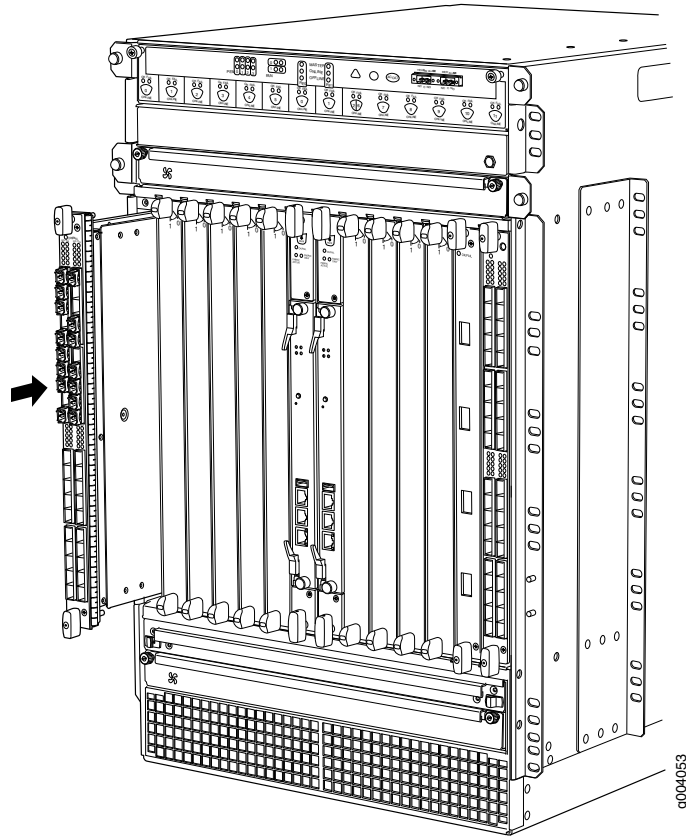

9004053

Figure 107: Attaching a Cable to a DPC

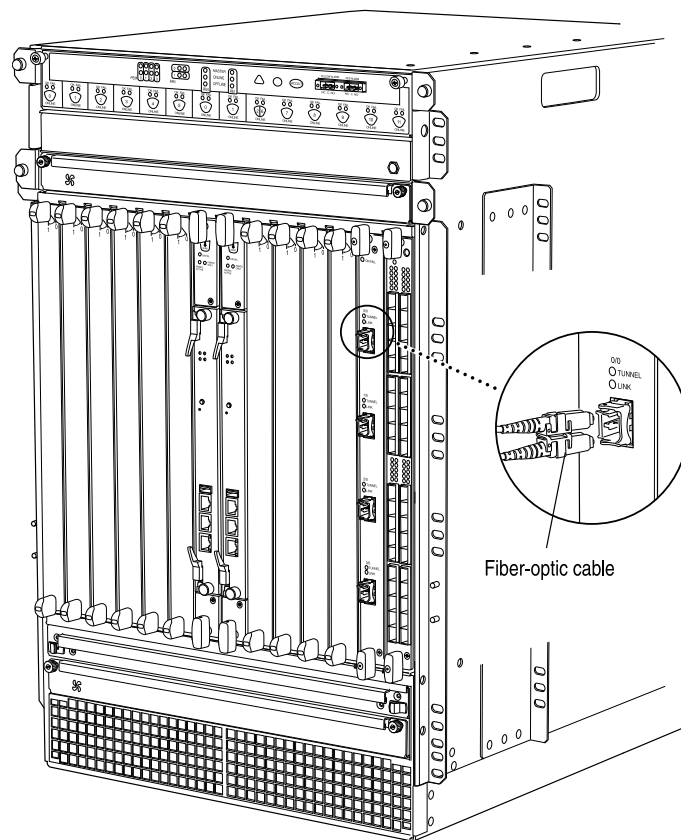

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 Dense Port Concentrator \(DPC\) LEDs on page 98](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)

Maintaining MX240 FPCs

Purpose The MX240 router can have one Flexible PIC Concentrator (FPC) installed horizontally in the front of the chassis. For optimum router performance, verify the condition of the FPC.

Action On a regular basis:

- Check the LEDs on the craft interface directly above the FPC. The green LED labeled **OK** lights steadily when an FPC is functioning normally.
- Check the **OK/FAIL** LED on the FPC. If the FPC detects a failure, the FPC sends an alarm message to the Routing Engine.

- Issue the CLI **show chassis fpc** command to check the status of the installed FPC. As shown in the sample output, the value **State** in the column labeled **State** indicates that the FPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	33	8	0	1024	18	30
1	Online	37	3	0	1024	12	21
2	Empty						

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
State                Online
Temperature          33 degrees C / 91 degrees F
Total CPU DRAM       1024 MB
Total RLDRAM         256 MB
Total DDR DRAM       4096 MB
Start time:          2008-11-25 11:16:41 PST
Uptime:              25 minutes, 28 seconds

Slot 1 information:
State                Online
Temperature          37 degrees C / 98 degrees F
Total CPU DRAM       1024 MB
Total RLDRAM         128 MB
Total DDR DRAM       2048 MB
Start time:          2008-11-25 11:16:43 PST
Uptime:              25 minutes, 26 seconds
```

- Issue the CLI **show chassis fpc pic-status** command. The following example shows an FPC installed in DPC slots 1 and 2:

```
user@host> show chassis fpc pic-status
```

```
Slot 0  Online      DPC 40x 1GE R
PIC 0   Online      10x 1GE(LAN)
PIC 1   Online      10x 1GE(LAN)
PIC 2   Online      10x 1GE(LAN)
PIC 3   Online      10x 1GE(LAN)
Slot 1  Online      MX FPC Type 3
PIC 0   Online      1x OC-192 SONET
PIC 1   Online      1x OC-192 SONET
```



NOTE: An FPC takes up two DPC slots when installed on an MX Series router. The slot number corresponds to the lowest numbered DPC slot.

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) LEDs on page 103](#)
 - [Holding an MX240 FPC on page 266](#)
 - [Storing an MX240 FPC on page 269](#)
 - [Troubleshooting the MX240 FPCs on page 352](#)

Holding an MX240 FPC



CAUTION: Many components on the FPC are fragile. Failure to handle FPCs as specified in this document can cause irreparable damage.




NOTE: An FPC configured with PICs installed can weigh as much as 18 lb (8.2 kg). Be prepared to accept the full weight of the FPC as you lift it.

To prevent damage when handling or carrying FPCs:

- As you carry the FPC, do not bump it against anything. FPC components are fragile.
- Do not grasp the FPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet (see [Figure 108 on page 266](#)).

Figure 108: Do Not Grasp the Connector Edge

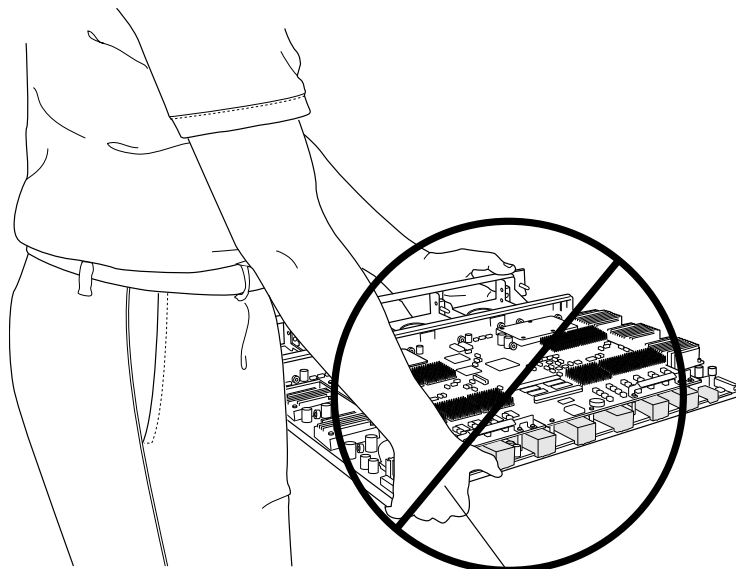


Hand position can damage fragile prongs on power connector in corner

9003142


- Do not carry the FPC by the faceplate with only one hand (see [Figure 109 on page 267](#)).

Figure 109: Do Not Carry an FPC with Only One Hand

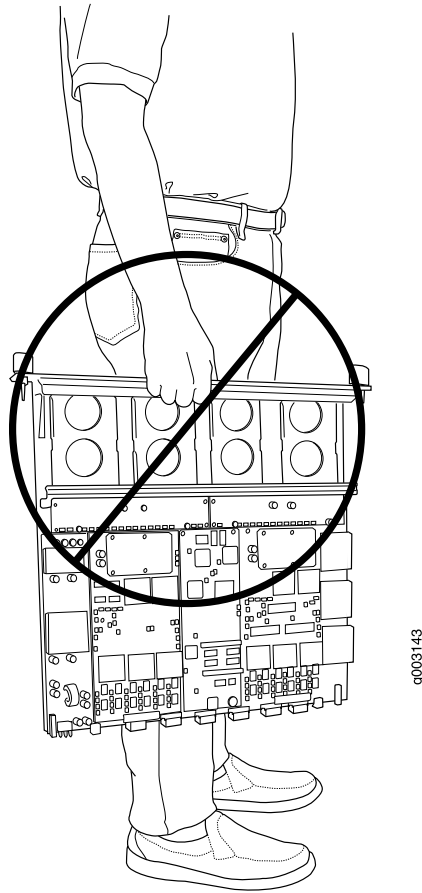

- Do not rest any edge of an FPC directly against a hard surface (see [Figure 110 on page 267](#)). If you must rest the FPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.


Figure 110: Do Not Rest the FPC on an Edge

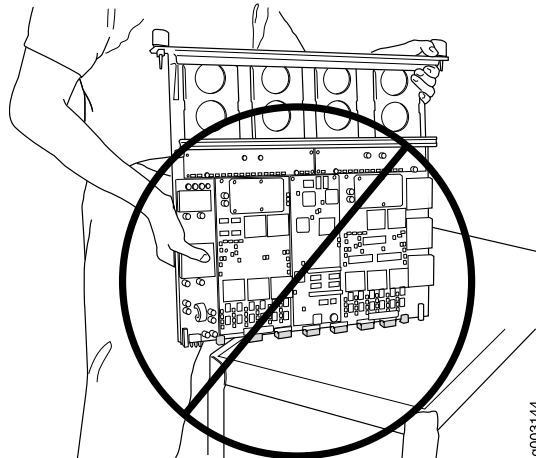

You hold an FPC horizontally when installing it into the chassis or an equipment rack. To hold an FPC vertically (see [Figure 111 on page 268](#)):

1. Orient the FPC so that the faceplate faces you.
2. Place one hand around the FPC faceplate about a quarter of the way down from the top edge. To avoid deforming the electromagnetic interference (EMI) shielding strip, do not press hard on it.
3. Place your other hand at the bottom edge of the FPC. If the FPC has heat sinks about midway between the faceplate and connector edge, place your other hand against the heat sinks.

Figure 111: Holding an FPC Vertically

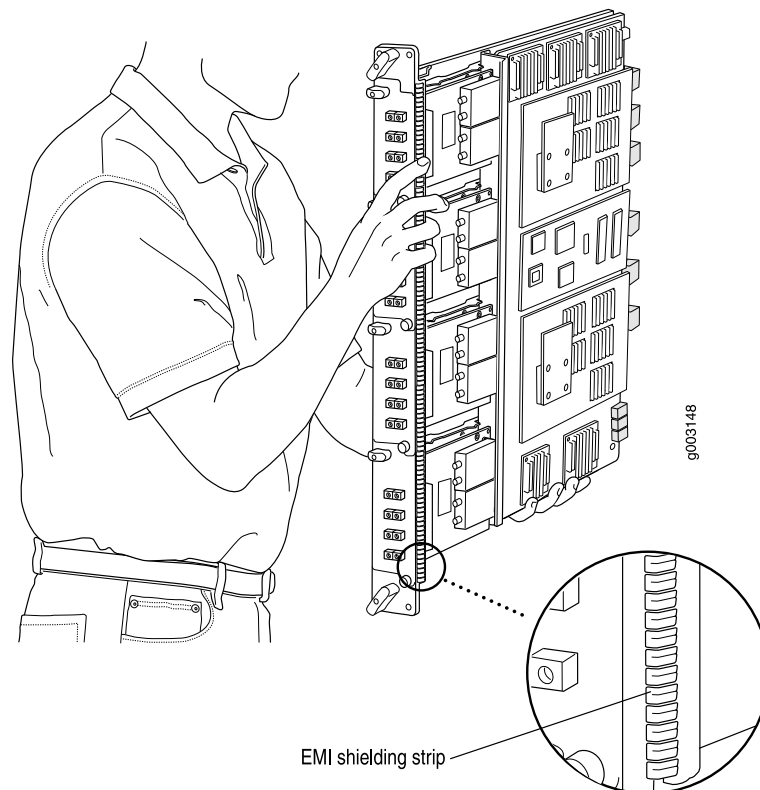

- See Also**
- [MX240 FPC Terminology](#)
 - [Storing an MX240 FPC on page 269](#)

Storing an MX240 FPC

When not installed in the routers, FPCs must be either stored in the container in which a spare FPC is shipped or stored horizontally with the component-side up on a flat, stable surface. When you store an FPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the FPC is heavy and because antistatic bags are fragile, inserting the FPC into the bag is easier with two people. The storage guidelines are as follows:


- When two people are storing an FPC, one person holds the FPC in the horizontal position with the faceplate facing their body, the other person slides the opening of the bag over the FPC connector edge.
- When one person is storing an FPC, you must insert the FPC into a bag by yourself. First lay the FPC horizontally on a flat, stable surface, component-side up. Orient the FPC with the faceplate facing you. Carefully insert the FPC connector edge into the opening of the bag, and pull the bag toward you to cover the FPC.



CAUTION: To prevent damage when storing FPCs:

- Never lay an FPC component-side down.
- Never stack an FPC under or on top of any other component (see [Figure 112 on page 269](#)).

Figure 112: Do Not Stack FPCs

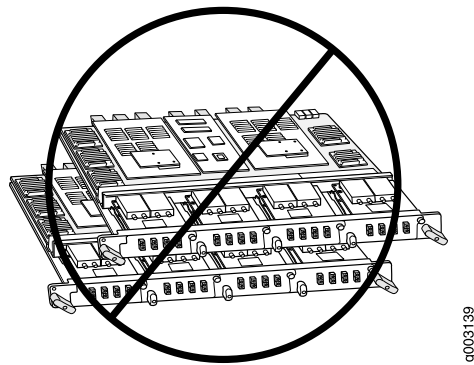

9003139

- See Also**
- [MX240 FPC Terminology](#)
 - [Holding an MX240 FPC on page 266](#)

Replacing an MX240 FPC

1. [Removing an MX240 FPC on page 270](#)
2. [Installing an MX240 FPC on page 272](#)

Removing an MX240 FPC

When you remove an FPC, the router continues to function, although the PIC interfaces installed on the FPC being removed no longer function.

An FPC takes up two DPC slots on the MX240 router. One FPC can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To remove an FPC (see [Figure 113 on page 272](#)):

1. Have ready a replacement FPC or FPC blank panel and an antistatic mat for the FPC. Also have ready rubber safety caps for each PIC using an optical interface on the FPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each PIC on the FPC so that you can later reconnect the cables to the correct PICs.
4. Use one of the following methods to take the FPC offline:
 - Press and hold the FPC online/offline button. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).



NOTE: The slot number corresponds to the lowest numbered slot for which the FPC is installed.

5. Disconnect the cables from the PICs installed in the FPC.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. If a PIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.
7. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
8. Grasp the handles and slide the FPC straight out of the card cage halfway.
9. Place one hand around the front of the FPC (the PIC housing) and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack FPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

10. If necessary, remove each installed PIC from the FPC.
11. After you remove each PIC, immediately place it on an antistatic mat or in an electrostatic bag.
12. If you are not reinstalling an FPC into the emptied DPC slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an FPC from the chassis, wait at least 30 seconds before reinserting it or inserting an FPC into a different slot.

Figure 113: Removing an FPC

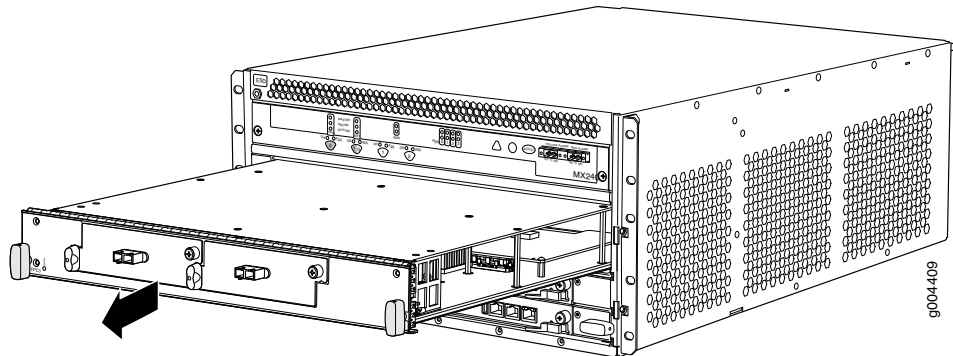

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 FPC Serial Number Label on page 365](#)

Installing an MX240 FPC

An FPC takes up two DPC slots on the MX240 router. One FPC can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To install an FPC (see [Figure 114 on page 274](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat.
3. Take each PIC to be installed in the replacement FPC out of its electrostatic bag and identify the slot on the FPC where it will be connected.
4. Verify that each fiber-optic PIC has a rubber safety cap covering the PIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each PIC into the appropriate slot on the FPC.
6. Locate the slots in the card cage in which you plan to install the FPC.
7. Orient the FPC so that the faceplate faces you.
8. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.



CAUTION: When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the FPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.
11. If any of the PICs on the FPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each PIC on the FPC. Secure the cables so that they are not supporting their own weight. Placing fasteners on a loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the FPC online:
 - Press and hold the FPC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the FPC again, removing an FPC from a different slot, or inserting an FPC in a different slot.

You can also verify correct FPC and PIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in “Maintaining MX240 FPCs” on page 264 and “Maintaining MX240 PICs” on page 288.

Figure 114: Installing an FPC

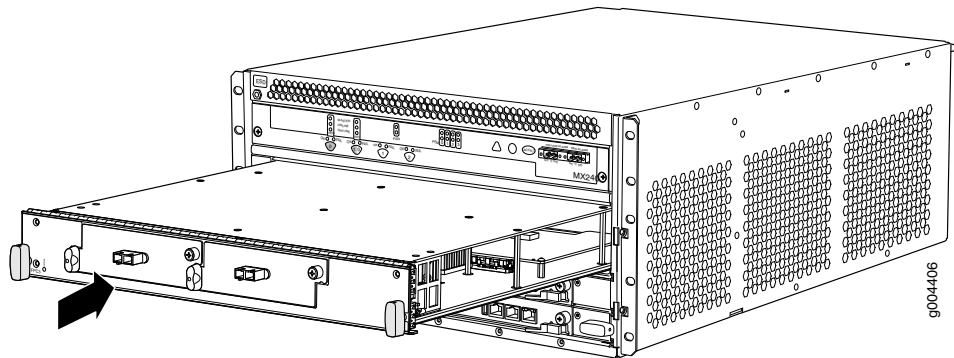

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 DPC Serial Number Label on page 364](#)

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) Description on page 101](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 DPC Serial Number Label on page 364](#)

Replacing an MX240 MIC

1. [Removing an MX240 MIC on page 275](#)
2. [Installing an MX240 MIC on page 277](#)

Removing an MX240 MIC

MICs are hot-insertable and hot-removable. When you remove a MIC, the router continues to function, although the MIC interfaces being removed no longer function.

The MICs are located in the MPCs installed in the front of the router. A MIC weighs less than 2 lb (0.9 kg).

To remove a MIC (see [Figure 115 on page 276](#) and [Figure 116 on page 276](#)):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the MIC. If the MIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the MIC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC **OK/FAIL** LED goes off (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the MIC so that you can later reconnect each cable to the correct MIC.
5. Disconnect the cables from the MIC. If the MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. On the MPC, pull the ejector lever that is adjacent to the MIC you are removing away from the MPC faceplate. Pulling the ejector lever disconnects the MIC from the MPC.



NOTE: To remove a dual-wide MIC that takes up both MIC slots, you must pull both ejector levers away from the MPC faceplate.

8. Grasp the handles on the MIC faceplate, and slide the MIC out of the MPC card carrier. Place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a MIC into the emptied MIC slot within a short time, install a blank MIC panel over the slot to maintain proper airflow in the MPC card cage.

Figure 115: Removing a MIC


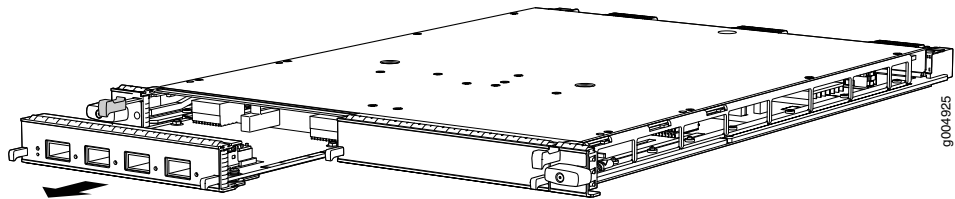


Figure 116: Removing a Dual-Wide MIC

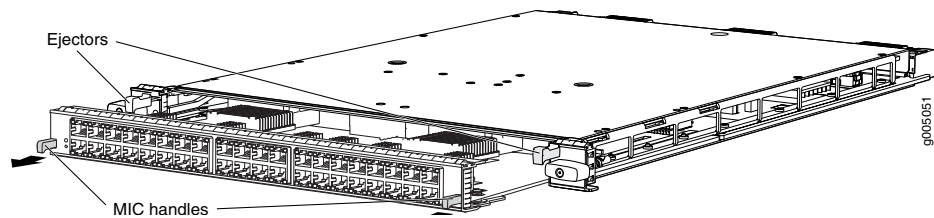


- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Troubleshooting the MX240 MICs on page 354](#)
 - [MX240 MIC Serial Number Label on page 366](#)

Installing an MX240 MIC

To install a MIC (see [Figure 118 on page 279](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If you have used a dual-wide MIC and are now replacing it with two “single” MICs, install the septum (see [Figure 117 on page 277](#)):
 - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in [“Removing an MX240 MPC” on page 284](#)).
 - b. Position the septum in the center of the MPC so that it lines up with holes labeled **S** on the top of the MPC.
 - c. Insert a screw into each of the two holes labeled **S**, and then tighten completely.
 - d. On the bottom of the MPC, insert a screw into each of the four holes labeled **S**, and then tighten completely.
 - e. Install the MPC as described in [“Installing an MX240 MPC” on page 286](#).

Figure 117: Installing the Septum

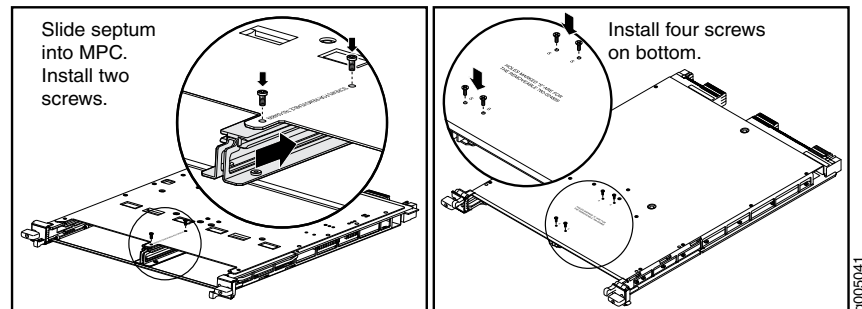

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. On the MPC, pull the ejector lever that is adjacent to the MIC you are installing away from the MPC faceplate.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MPC until it is firmly seated in the MPC.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector lever is engaged by pushing it toward the MPC faceplate.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:
 - Press the MIC offline/online button until the MIC OK/FAIL LED lights green.
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the **show chassis fpc pic-status** command described in “Maintaining MX240 MICs” on page 279.

Figure 118: Installing a MIC

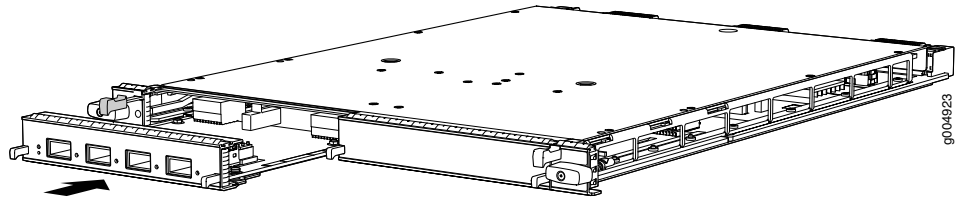

- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Troubleshooting the MX240 MICs on page 354](#)
 - [MX240 MIC Serial Number Label on page 366](#)

- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Troubleshooting the MX240 MICs on page 354](#)
 - [MX240 MIC Serial Number Label on page 366](#)

Maintaining MX240 MICs

Purpose For optimum router performance, verify the condition of the MICs.

Action On a regular basis:

- Check the LEDs on MIC faceplates. The meaning of the LED states differs for various MICs. For more information, see the [MX Series Interface Module Reference](#). If the MPC that houses the MIC detects a MIC failure, the MPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI **show chassis fpc pic-status** command. The MIC slots in an MPC are numbered **PIC 0/1** and **PIC 2/3**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 1  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+
Slot 2  Online      MS-DPC
  PIC 0  Online      MS-DPC PIC
  PIC 1  Online      MS-DPC PIC
```

For further description of the output from the command, see the [CLI Explorer](#).


- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [MX240 Modular Interface Card \(MIC\) LEDs on page 124](#)
 - [Troubleshooting the MX240 MICs on page 354](#)

Installing an MX240 Dual-Wide MIC

To install a dual-wide MIC (see [Figure 120 on page 282](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the septum, if necessary (see [Figure 119 on page 280](#)):
 - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in [“Removing an MX240 MPC” on page 284](#)).
 - b. Remove the four screws labeled **S** on the bottom of the MPC.
 - c. Remove the two screws labeled **S** on the top of the MPC.
 - d. Slide the septum towards you and out of the MPC.
 - e. Store the septum and screws for later use.
 - f. Install the MPC as described in [“Installing an MX240 MPC” on page 286](#).

Figure 119: Removing the Septum

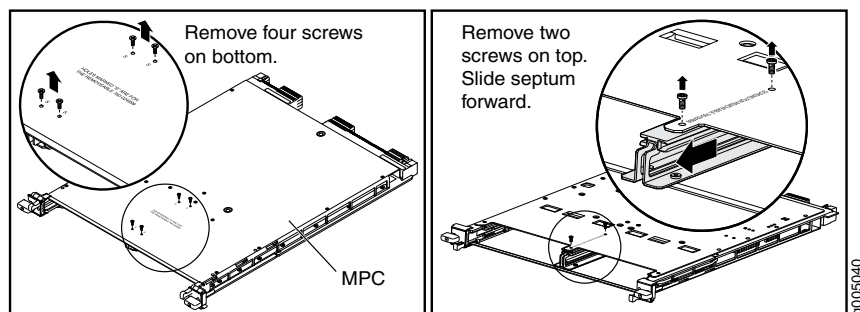

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. Pull the ejector lever above both MIC slots away from the router.

5. Align the rear of the MIC with the guides located at the corners of the MIC slot.

6. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector levers are engaged by pushing them toward the router.

8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.

10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:

- Press the MIC offline/online button until the MIC **OK/FAIL** LED lights green.
- Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the **show chassis fpc pic-status** command described in “Maintaining MX240 MICs” on page 279.

Figure 120: Installing a Dual-Wide MIC

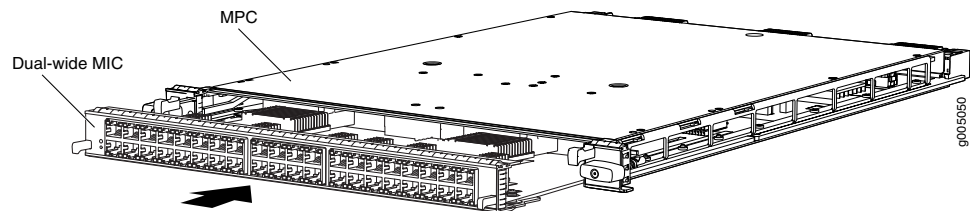

- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Troubleshooting the MX240 MICs on page 354](#)
 - [MX240 MIC Serial Number Label on page 366](#)

Maintaining MX240 MPCs

Purpose For optimum router performance, verify the condition of the Modular Port Concentrators (MPCs). The router can have up to three MPCs mounted horizontally in the card cage at the front of the chassis.

Action On a regular basis:

- Check the LEDs on the craft interface directly above each MPC slot. The green LED labeled **OK** lights steadily when an MPC is functioning normally.
- Check the **OK/FAIL** LED on the MPC. If the MPC detects a failure, the MPC sends an alarm message to the Routing Engine.
- Issue the CLI **show chassis fpc** command to check the status of installed MPCs. As shown in the sample output, the value **State** in the column labeled **State** indicates that the MPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory Utilization (%)		
			Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	36	3	0	2048	14	13
1	Online	40	5	0	2048	26	13
2	Online	41	6	0	1024	7	43

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```

Slot 0 information:
State                Online
Temperature          36 degrees C / 96 degrees F
Total CPU DRAM       2048 MB
Total RLDRAM         806 MB
Total DDR DRAM       2632 MB
Start time:          2009-12-22 12:27:04 PST
Uptime:              6 days, 3 hours, 8 minutes, 41 seconds

Max Power Consumption 450 Watts
Slot 1 information:
State                Online
Temperature          40 degrees C / 104 degrees F
Total CPU DRAM       2048 MB
Total RLDRAM         1324 MB
Total DDR DRAM       5120 MB
Start time:          2009-12-22 12:27:02 PST
Uptime:              6 days, 3 hours, 8 minutes, 43 seconds

Max Power Consumption 440 Watts
Slot 2 information:
State                Online
Temperature          41 degrees C / 105 degrees F
Total CPU DRAM       1024 MB
Total RLDRAM         128 MB
Total DDR DRAM       2048 MB
Start time:          2009-12-22 12:26:48 PST
Uptime:              6 days, 3 hours, 8 minutes, 57 seconds

Max Power Consumption 265 Watts

```

- Issue the CLI **show chassis fpc pic-status** command. The MPC slots are numbered 1/0, 1, and 2, bottom to top:

```

user@host> show chassis fpc pic-status

Slot 0  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 1  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+
Slot 2  Online      MS-DPC
  PIC 0  Online      MS-DPC PIC
  PIC 1  Online      MS-DPC PIC

```

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 Modular Port Concentrator \(MPC\) LEDs on page 129](#)
 - [Troubleshooting the MX240 MPCs on page 354](#)

Replacing an MX240 MPC

1. [Removing an MX240 MPC on page 284](#)
2. [Installing an MX240 MPC on page 286](#)

Removing an MX240 MPC

When you remove an MPC, the router continues to function, although the MIC interfaces installed on the MPC being removed no longer function.

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To remove an MPC (see [Figure 121 on page 286](#)):

1. Have ready a replacement MPC or DPC blank panel and an antistatic mat for the MPC. Also have ready rubber safety caps for each MIC using an optical interface on the MPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each MIC on the MPC so that you can later reconnect the cables to the correct MICs.
4. Use one of the following methods to take the MPC offline:
 - Press and hold the corresponding online button on the craft interface. The green **OK/FAIL** LED next to the button begins to blink. Hold the button down until the LED goes off.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

5. Disconnect the cables from the MICs installed in the MPC.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. If a MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.
7. Simultaneously turn both the ejector handles counterclockwise to unseat the MPC.
8. Grasp the handles and slide the MPC straight out of the card cage halfway.
9. Place one hand around the front of the MPC (the MIC housing) and the other hand under it to support it. Slide the MPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the MPC is concentrated in the back end. Be prepared to accept the full weight—up to 18.35 lb (8.3 kg)—as you slide the MPC out of the chassis.

When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack MPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

10. If necessary, remove each installed MIC from the MPC.
11. After you remove each MIC, immediately place it on an antistatic mat or in an electrostatic bag.
12. If you are not reinstalling an MPC into the emptied line card slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an MPC from the chassis, wait at least 30 seconds before reinserting it or inserting an MPC into a different slot.

Figure 121: Removing an MPC

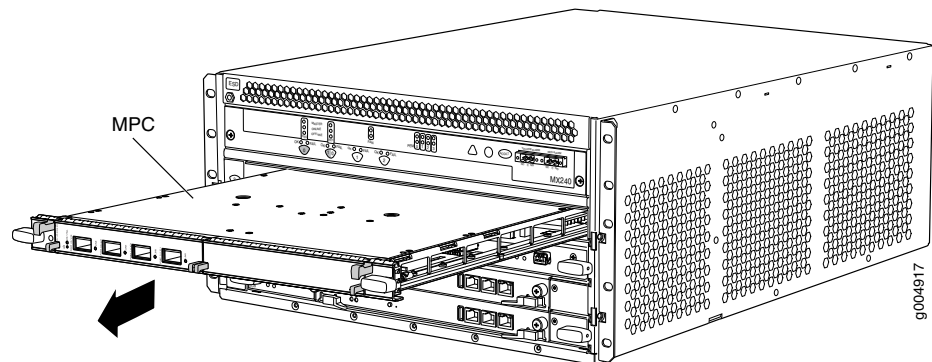

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 MPC Serial Number Label on page 368](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an MX240 MPC

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To install an MPC (see [Figure 122 on page 288](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the MPC on an antistatic mat.
3. Take each MIC to be installed in the replacement MPC out of its electrostatic bag and identify the slot on the MPC where it will be connected.
4. Verify that each fiber-optic MIC has a rubber safety cap covering the MIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each MIC into the appropriate slot on the MPC.
6. Locate the slot in the card cage in which you plan to install the MPC.
7. Orient the MPC so that the faceplate faces you.
8. Lift the MPC into place and carefully align the sides of the MPC with the guides inside the card cage.



CAUTION: When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the MPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles and rotate them clockwise simultaneously until the MPC is fully seated.
11. If any of the MICs on the MPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each MIC on the MPC. Secure the cables so that they are not supporting their own weight. Placing fasteners on a loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the MPC online:
 - Press and hold the corresponding MPC online button on the craft interface until the green **OK/FAIL** LED next to the button lights steadily, in about 5 seconds.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK/FAIL LED lights steadily, wait at least 30 seconds before removing the MPC again, removing an MPC from a different slot, or inserting an MPC in a different slot.

You can also verify correct MPC and MIC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status` commands described in “Maintaining MX240 MPCs” on page 282 and “Maintaining MX240 MICs” on page 279.

Figure 122: Installing an MPC

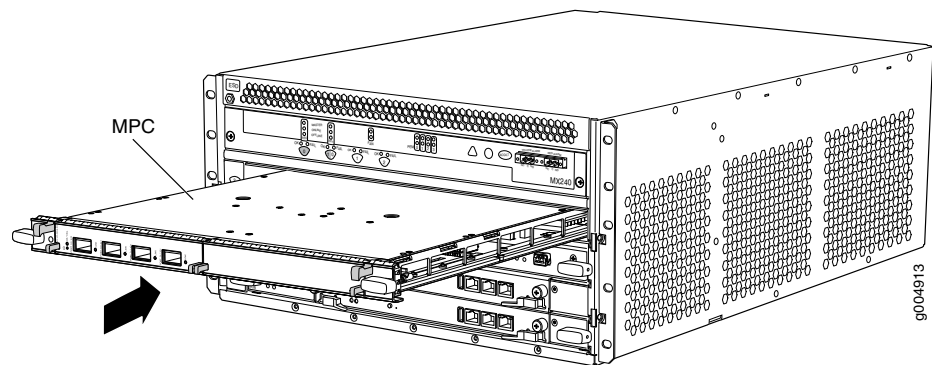

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 MPC Serial Number Label on page 368](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 MPC Serial Number Label on page 368](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Maintaining MX240 PICs

Purpose For optimum router performance, verify the condition of the PICs and PIC cables.

Action On a regular basis:

- Check the LEDs on PIC faceplates. The meaning of the LED states differs for various PICs. For more information, see the [MX Series Interface Module Reference](#). If the FPC that houses the PIC detects a PIC failure, the FPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI `show chassis fpc pic-status` command. The PIC slots in an FPC are numbered from 0 through 1, left to right:


```
user@host> show chassis fpc pic-status
```

```
Slot 0  Online      DPC 40x 1GE R
PIC 0  Online      10x 1GE(LAN)
PIC 1  Online      10x 1GE(LAN)
PIC 2  Online      10x 1GE(LAN)
PIC 3  Online      10x 1GE(LAN)
Slot 1  Online      MX FPC Type 3
PIC 0  Online      1x 0C-192 SONET
PIC 1  Online      1x 0C-192 SONET
```

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Troubleshooting the MX240 PICs on page 356](#)
 - [MX240 PIC Serial Number Label on page 369](#)

Replacing an MX240 PIC

1. [Removing an MX240 PIC on page 289](#)
2. [Installing an MX240 PIC on page 291](#)

Removing an MX240 PIC

PICs are hot-insertable and hot-removable. When you remove a PIC, the router continues to function, although the PIC interfaces being removed no longer function.

The PICs are located in the FPCs installed in the front of the router. A PIC weighs less than 2 lb (0.9 kg).

To remove a PIC (see [Figure 123 on page 291](#)):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the PIC. If the PIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the PIC offline:
 - Press its online/offline button. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the PIC so that you can later reconnect each cable to the correct PIC.
5. Disconnect the cables from the PIC. If the PIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.


6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. For an FPC3 PIC, loosen the captive screw at the bottom of the PIC faceplate, then twist the ejector handle at the top of the faceplate counterclockwise to unseat the PIC.
8. Slide the PIC out of the FPC card carrier and place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a PIC into the emptied PIC slot within a short time, install a blank PIC panel over the slot to maintain proper airflow in the FPC card cage.

Figure 123: Removing a PIC

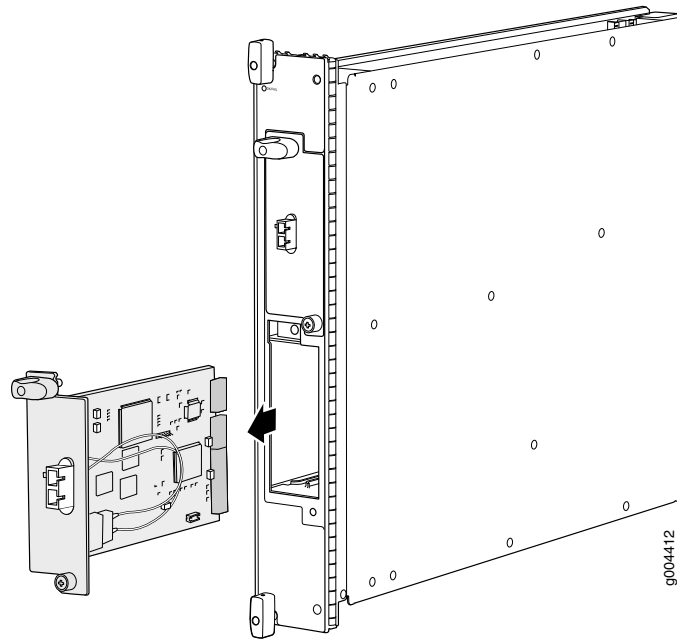

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Troubleshooting the MX240 PICs on page 356](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 PIC Serial Number Label on page 369](#)

Installing an MX240 PIC

To install a PIC (see [Figure 124 on page 293](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If the PIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
3. Align the notches in the connector at the rear of the PIC with the notches in the PIC slot in the FPC and then slide the PIC in until it lodges firmly in the FPC.



CAUTION: Slide the PIC straight into the slot to avoid damaging the components on the bottom of the PIC.

4. For an FPC3 PIC, turn the ejector handle at the top of the PIC faceplate clockwise, then tighten the captive screw at the bottom of the faceplate to secure the PIC in the FPC.
5. If the PIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Insert the appropriate cables into the cable connectors on the PIC.
7. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


8. Use one of the following methods to bring the PIC online:
 - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the PIC is online. You can also verify correct PIC functioning by issuing the **show chassis fpc pic-status** command described in [“Maintaining MX240 PICs” on page 288](#).

Figure 124: Installing a PIC

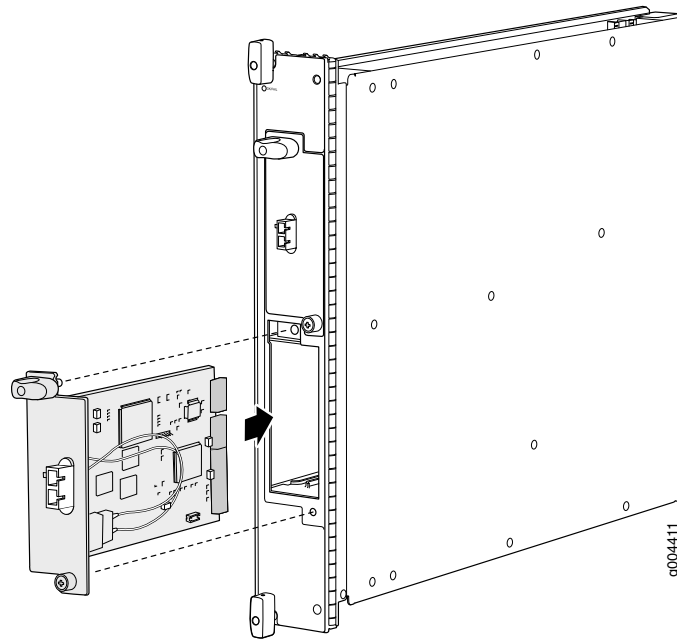

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Troubleshooting the MX240 PICs on page 356](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 PIC Serial Number Label on page 369](#)

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Troubleshooting the MX240 PICs on page 356](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 PIC Serial Number Label on page 369](#)

Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs

Purpose For optimum router performance, verify the condition of the cables that connect to the DPCs, MPCs, MICs, or PICs.

Action On a regular basis:

- Keep the cable connections clean and free of dust and other particles, which can cause drops in the received power level. Always inspect cables and clean them if necessary before connecting an interface.
- Label both ends of the cables to identify them.

The following guidelines apply specifically to fiber-optic cables:

- When you unplug a fiber-optic cable, always place a rubber safety plug over the transceiver on the faceplate and on the end of the cable.
- Anchor fiber-optic cables to avoid stress on the connectors. Be sure to secure fiber-optic cables so that they do not support their own weight as they hang to the floor. Never let fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cable beyond its bend radius. An arc smaller than a few inches can damage the cable and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cable into and out of optical instruments can cause damage to the instruments that is expensive to repair. Instead, attach a short fiber extension to the optical equipment. Any wear and tear due to frequent plugging and unplugging is then absorbed by the short fiber extension, which is easy and inexpensive to replace.
- Keep fiber-optic cable connections clean. Small microdeposits of oil and dust in the canal of the transceiver or cable connector could cause loss of light, reducing signal power and possibly causing intermittent problems with the optical connection.

To clean the transceivers, use an appropriate fiber-cleaning device, such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions for the cleaning kit you use.

After you clean an optical transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit, such as the Optex Cletop-S Fiber Cleaner. Follow the directions for the cleaning kit you use.

- See Also**
- [Maintaining MX240 DPCs on page 254](#)
 - [Maintaining MX240 PICs on page 288](#)
 - [Maintaining MX240 MPCs on page 282](#)
 - [Maintaining MX240 MICs on page 279](#)

Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC

1. [Removing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
2. [Installing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 296](#)

Removing a Cable on an MX240 DPC, MPC, MIC, or PIC

Removing and installing cables on a DPC, MPC, MIC, or PIC does not affect router function, except that the component does not receive or transmit data while its cable is disconnected.

To remove a cable:

1. If the component connects to fiber-optic cable, have ready a rubber safety cap for each cable and transceiver.

2. If removing all cables connected to the component, use one of the following methods to take the component offline:

- To take a DPC or an MPC offline:

- Press and hold the corresponding online button on the craft interface. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a PIC offline:

- Press the online/offline button on the PIC. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).
- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a MIC offline:

- Press the online/offline button on the MIC. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC LED goes off (about 5 seconds).
- Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot pic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

3. Unplug the cable from the cable connector port. If the component uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing a Cable on an MX240 DPC, MPC, MIC, or PIC

To install a cable on a DPC, MPC, MIC, or PIC:

1. Have ready a length of the type of cable used by the component. For cable specifications, see the [MX Series Interface Module Reference](#).

2. If the cable connector port is covered by a rubber safety plug, remove the plug.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.



CAUTION: Avoid bending a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.



CAUTION: Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.

4. Insert the other end of the cable into the destination port.

5. Repeat the previous steps for any additional cables.

6. If the component is offline (its failure indicator LED is lit), use one of the following methods to bring the PIC online:

- To bring a DPC or an MPC online:
 - Press and hold the corresponding online button on the craft interface until the green **OK** LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:


```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a PIC online:
 - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
 - Issue the following CLI command:

```
user@host>request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a MIC online:
 - Press the MIC offline/online button until the PIC LED lights green.
 - Issue the following CLI command:

```
user@host>request chassis mic fpc-slot mfc-slot pic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning indicator LED confirms that the component is online. You can also verify correct DPC or MPC functioning by issuing the **show chassis fpc** command or correct MIC or PIC functioning by issuing the **show chassis fpc pic-status**.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Maintaining MX240 DPCs on page 254](#)
 - [Maintaining MX240 MPCs on page 282](#)
 - [Maintaining MX240 MICs on page 279](#)
 - [Maintaining MX240 PICs on page 288](#)

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Maintaining MX240 PICs on page 288](#)
 - [Troubleshooting the MX240 PICs on page 356](#)
 - [MX240 PIC Serial Number Label on page 369](#)
 - [MX240 PIC Description on page 104](#)
 - [Replacing an MX240 FPC on page 269](#)

Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Small form-factor pluggable transceivers (SFPs) and XFPs are optical transceivers that are installed in a DPC, MPC, MIC, or PIC. SFPs and XFPs are hot-insertable and hot-removable.

1. [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 298](#)
2. [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC on page 299](#)

Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Removing an SFP or XFP does not interrupt DPC, MPC, MIC, or PIC functioning, but the removed SFP or XFP no longer receives or transmits data.

To remove an SFP or XFP transceiver (see [Figure 125 on page 299](#)):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.
5. Pull the ejector handle out from the transceiver to unlock the transceiver.




CAUTION: Make sure that you open the ejector handle completely until you hear it click. This prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

6. Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the DPC, MPC, MIC, or PIC.
7. Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the DPC, MPC, MIC, or PIC.

Figure 125: Removing SFPs or XFPs

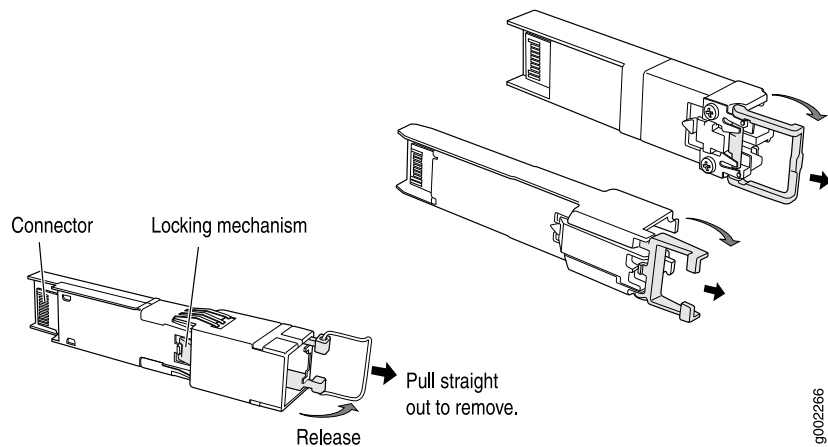

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on an antistatic mat or in an electrostatic bag.



CAUTION: After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 PIC Description on page 104](#)
 - [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
 - [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC on page 299](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.

3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 PIC Description on page 104](#)
 - [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
 - [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 298](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Replacing an MX240 AS MLC

1. [Removing an MX240 AS MLC on page 301](#)
2. [Installing an MX240 AS MLC on page 303](#)

Removing an MX240 AS MLC

When you remove an Application Services Modular Line Card (AS MLC), the router continues to function, although the modular cards (AS MXC and AS MSC) installed on the AS MLC being removed no longer function.

Up to five AS MLCs can be installed horizontally in the front of the MX240 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To remove an AS MLC (see [Figure 126 on page 302](#)):

1. Have ready a replacement AS MLC or an AS MLC blank panel and an antistatic mat for the AS MLC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the AS MLC offline:
 - Press and hold the AS MLC online/offline button. The green OK LED next to the button begins to blink. Hold the button down until the LED goes out. The online/offline button for each AS MLC is located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).



NOTE: The slot number corresponds to the lowest numbered slot for which the AS MLC is installed.

4. Simultaneously turn both the ejector handles counterclockwise to unseat the AS MLC.
5. Grasp the handles, and slide the AS MLC straight out of the card cage halfway.
6. Place one hand around the front of the AS MLC (the modular card housing) and the other hand under it to support it. Slide the AS MLC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the AS MLC is concentrated in the back end. Be prepared to accept the full weight—up to 15.27 lb (6.93 kg)—as you slide the AS MLC out of the chassis.

When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack AS MLCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

7. If necessary, remove each installed AS MSC and AS MXC from the AS MLC.
8. After you remove each modular card, immediately place it on an antistatic mat or in an electrostatic bag.
9. If you are not reinstalling an AS MLC into the emptied slots within a short time, install a blank AS MLC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an AS MLC from the chassis, wait at least 30 seconds before reinserting it or inserting an AS MLC into a different slot.

Figure 126: Removing an AS MLC

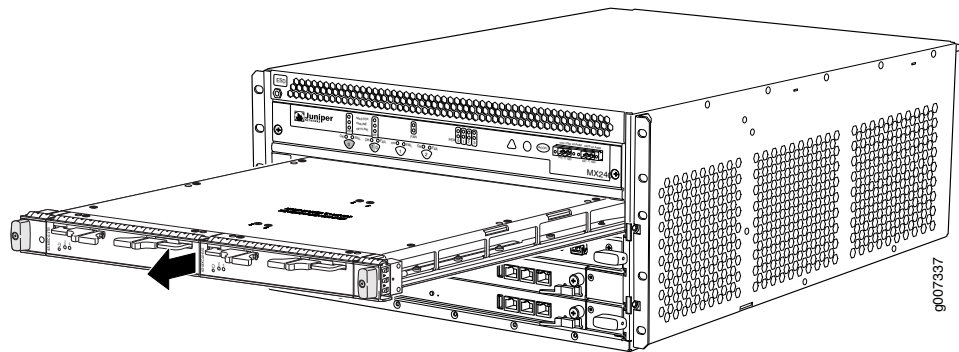

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an MX240 AS MLC

You can install up to five Application Services Modular Line Cards (AS MLCs) horizontally in the front of the MX240 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To install an AS MLC (see [Figure 127 on page 304](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the AS MLC on an antistatic mat.
3. Take the AS MSC and AS MXC (the modular cards) to be installed in the AS MLC out of its electrostatic bag. The AS MSC must be inserted in the left slot and the AS MXC in the right slot.
4. Install the AS MSC and AS MXC into the appropriate slot on the AS MLC.
5. Locate the slots in the card cage in which you plan to install the AS MLC.
6. Orient the AS MLC so that the faceplate faces you.
7. Lift the AS MLC into place, and carefully align the sides of the AS MLC with the guides inside the card cage.



CAUTION: When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

8. Slide the AS MLC all the way into the card cage until you feel resistance.
9. Grasp both ejector handles, and rotate them clockwise simultaneously until the AS MLC is fully seated.
10. Use one of the following methods to bring the AS MLC online:
 - Press and hold the AS MLC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each AS MLC are located above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the AS MLC again, removing an AS MLC from a different slot, or inserting an AS MLC in a different slot.

You can also verify correct AS MLC and AS MSC or AS MXC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status`.

Figure 127: Installing an AS MLC

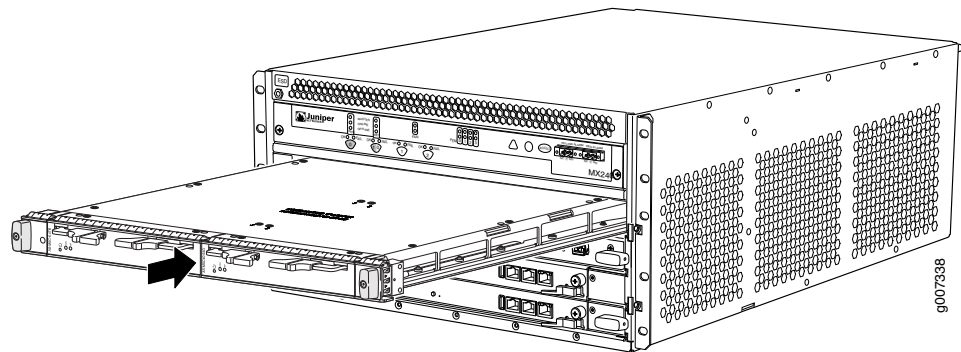

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

See Also • [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Replacing an MX240 AS MSC

1. [Removing an MX240 AS MSC on page 304](#)
2. [Installing an MX240 AS MSC on page 306](#)

Removing an MX240 AS MSC

AS MSCs are hot-insertable and hot-removable. When you remove an AS MSC, the router continues to function.

The AS MSCs are located in the AS MLCs installed in the front of the router. An AS MSC weighs 1.4 lb (0.6 kg).

To remove an AS MSC (see [Figure 128 on page 305](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MSC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.

3. Use one of the following methods to take the AS MSC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MSC LED goes out (about 5 seconds).
 - Issue the following CLI command:


```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).
4. Slide the AS MSC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
5. If you are not reinstalling an AS MSC into the emptied AS MSC slot within a short time, install a blank AS MSC panel over the slot to maintain proper airflow in the AS MLC card cage.

Figure 128: Removing an AS MSC

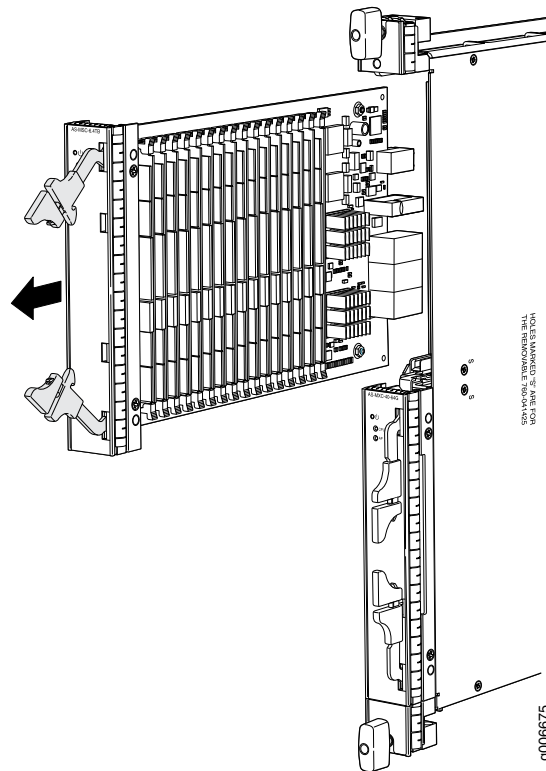

- See Also**
- [MX240 Application Services Modular Storage Card Description](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an MX240 AS MSC

To install an AS MSC (see [Figure 129 on page 307](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MSC with the notches in the AS MSC slot (slot 0—the top slot in the AS MLC), and then slide the AS MSC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MSC straight into the slot to avoid damaging the components on the bottom of the AS MSC.


3. Use one of the following methods to bring the AS MSC online:
 - Press the AS MSC offline/online button until the LED light turns green.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MSC is online. You can also verify correct AS MSC functioning by issuing the **show chassis fpc pic-status**.

Figure 129: Installing an AS MSC

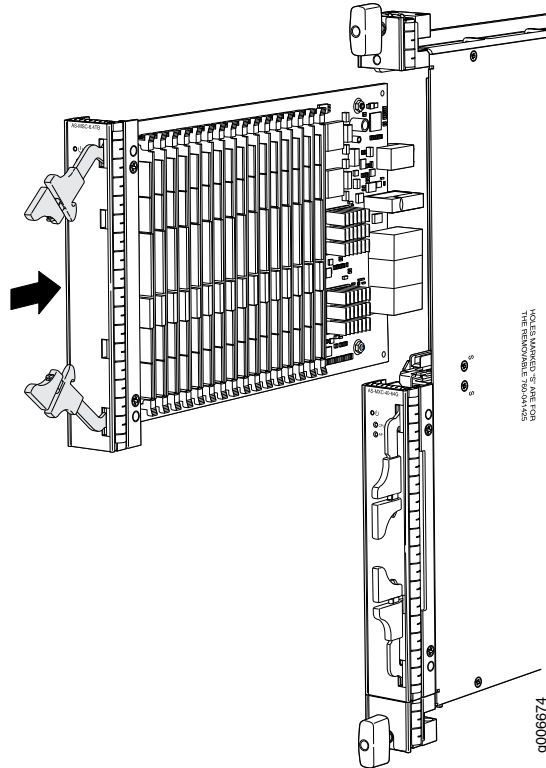

- See Also**
- [MX240 Application Services Modular Storage Card Description](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 Application Services Modular Storage Card Description](#)

Replacing an MX240 AS MXC

1. [Removing an MX240 AS MXC on page 308](#)
2. [Installing an MX240 AS MXC on page 309](#)

Removing an MX240 AS MXC

AS MXCs are hot-insertable and hot-removable. When you remove an AS MXC, the router continues to function.

The AS MXCs are located in the AS MLCs installed in the front of the router. An AS MXC weighs 1.4 lb (0.6 kg).

To remove an AS MXC (see [Figure 130 on page 309](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MXC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the AS MXC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MXC LED goes out (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

5. Slide the AS MXC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
6. If you are not reinstalling an AS MXC into the emptied AS MXC slot within a short time, install a blank AS MXC panel over the slot to maintain proper airflow in the AS MLC card cage.

Figure 130: Removing an AS MXC

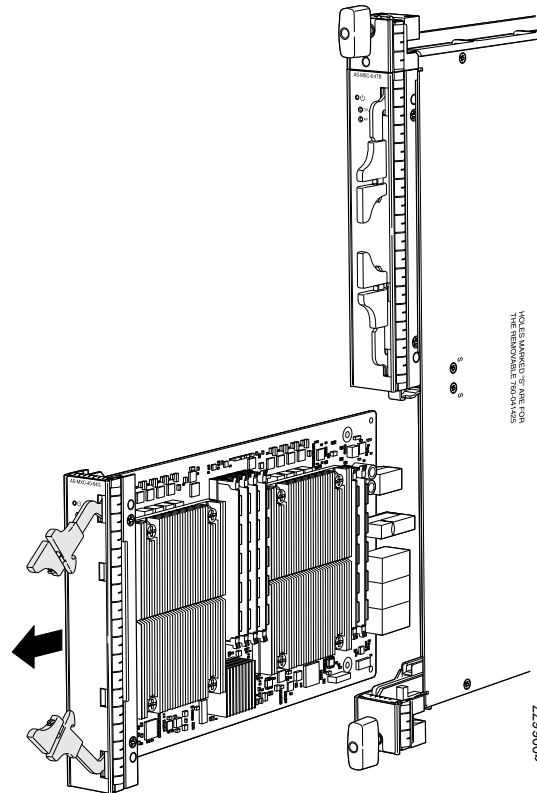

- See Also**
- [MX240 Application Services Modular Processing Card Description on page 136](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an MX240 AS MXC

To install an AS MXC (see [Figure 131 on page 310](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MXC with the notches in the AS MXC slot (slot 1—the bottom slot in the AS MLC), and then slide the AS MXC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MXC straight into the slot to avoid damaging the components on the bottom of the AS MXC.

3. Use one of the following methods to bring the AS MXC online:
 - Press the AS MXC offline/online button until the LED light turns green.


- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MXC is online. You can also verify correct AS MXC functioning by issuing the `show chassis fpc pic-status` command.

Figure 131: Installing an AS MXC

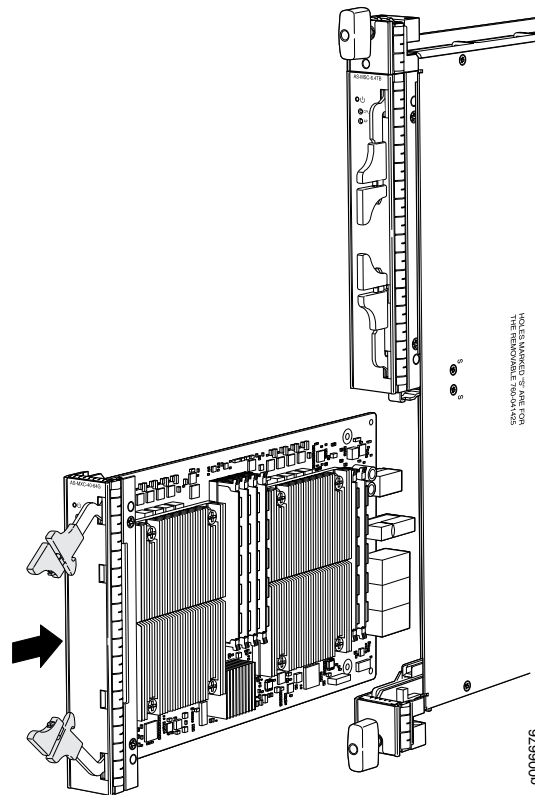

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 Application Services Modular Processing Card Description on page 136](#)

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [MX240 Application Services Modular Processing Card Description on page 136](#)

Maintaining MX240 Power System Components

- [Maintaining the MX240 Power Supplies on page 311](#)
- [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)

- [Replacing an MX240 AC Power Supply Cord on page 314](#)
- [Replacing an MX240 DC Normal-Capacity Power Supply on page 315](#)
- [Replacing an MX240 DC Power Supply Cable on page 320](#)

Maintaining the MX240 Power Supplies

Purpose For optimum router performance, verify the condition of the power supplies.

Action On a regular basis:

```

• PEM 0 status:
  State           Online
  Temperature     OK
  DC output       OK
PEM 2 status:
  State           Online
  Temperature     OK
  DC output       OK

```

- Make sure that the power and grounding cables are arranged so that they do not obstruct access to other router components.
- Routinely check the status LEDs on the power supply faceplates and the craft interface to determine if the power supplies are functioning normally.
- Check the red and yellow alarm LEDs on the craft interface. Power supply failure or removal triggers an alarm that causes one or both of the LEDs to light. You can display the associated error messages by issuing the following command:

```
user@host> show chassis alarms
```

- Periodically inspect the site to ensure that the grounding and power cables connected to the router are securely in place and that there is no moisture accumulating near the router.

- See Also**
- [MX240 Component LEDs on the Craft Interface on page 36](#)
 - [MX240 AC Power Supply Description on page 42](#)
 - [MX240 DC Power Supply Description on page 48](#)
 - [MX240 Site Preparation Checklist on page 141](#)
 - [Troubleshooting the MX240 Components on page 347](#)

Replacing an MX240 AC Normal-Capacity Power Supply

1. [Removing an MX240 AC Normal-Capacity Power Supply on page 312](#)
2. [Installing an MX240 AC Normal-Capacity Power Supply on page 313](#)

Removing an MX240 AC Normal-Capacity Power Supply

Before you remove a power supply, be aware of the following:



.....
NOTE: The minimum number of power supplies must be present in the router at all times.
.....



.....
CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.
.....




.....
NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.
.....

To remove an AC power supply (see [Figure 132 on page 313](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Remove the power cord from the power supply.
5. Unscrew the captive screws on the bottom edge of the power supply.
6. Pull the power supply straight out of the chassis.

Figure 132: Removing an AC Power Supply

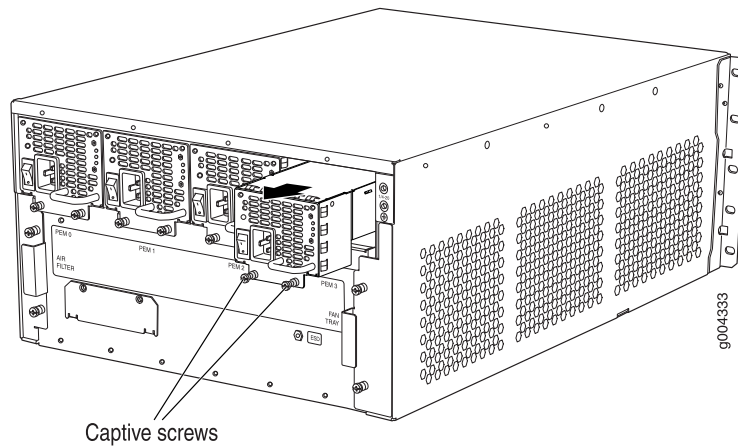


- See Also**
- [MX240 AC Power Supply Description on page 42](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [AC Power Supply Electrical Specifications for the MX240 Router on page 44](#)

Installing an MX240 AC Normal-Capacity Power Supply

To install an AC power supply (see [Figure 133 on page 314](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten both captive screws at the bottom of the power supply.
5. Attach the power cord to the power supply.
6. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker. Follow the instructions for your site.
7. Move the AC input switch next to the appliance inlet on the power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Figure 133: Installing an AC Power Supply

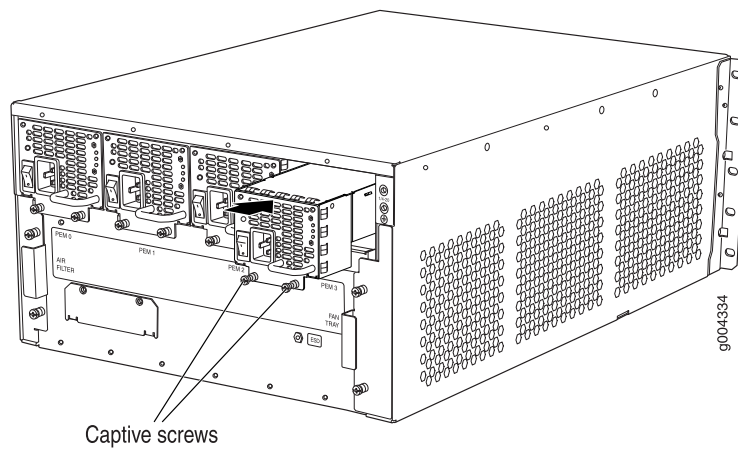

- See Also**
- [MX240 AC Power Supply Description on page 42](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [AC Power Supply Electrical Specifications for the MX240 Router on page 44](#)

Replacing an MX240 AC Power Supply Cord

1. [Disconnecting an MX240 AC Power Supply Cord on page 314](#)
2. [Connecting an MX240 AC Power Supply Cord on page 315](#)

Disconnecting an MX240 AC Power Supply Cord

To disconnect the AC power cord:

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Remove the power cord from the power supply.

Connecting an MX240 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see [“AC Power Cord Specifications for the MX240 Router”](#) on page 46).
2. Connect the power cord to the power supply.
3. Insert the power cord plug into an external AC power source receptacle.
4. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Switch the AC input switch on the each power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router](#) on page 380
 - [AC Power Cord Specifications for the MX240 Router](#) on page 46
 - [MX240 AC Power Electrical Safety Guidelines and Warnings](#)

Replacing an MX240 DC Normal-Capacity Power Supply

1. [Removing an MX240 DC Power Supply](#) on page 315
2. [Installing an MX240 DC Normal Capacity Power Supply](#) on page 317

Removing an MX240 DC Power Supply

Before you remove a power supply, be aware of the following:



NOTE: The minimum number of power supplies must be present in the router at all times.



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.



.....
CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.
.....
.....




.....
NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.
.....

To remove a DC power supply (see [Figure 134 on page 317](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the DC circuit breaker on the DC power supply faceplate to the off (O) position.
5. Remove the clear plastic cover protecting the terminal studs on the faceplate.
6. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
7. Remove the cable lugs from the terminal studs.
8. Loosen the captive screws on the bottom edge of the power supply faceplate.
9. Carefully move the power cables out of the way.
10. Pull the power supply straight out of the chassis.

Figure 134: Removing a DC Power Supply from the Router

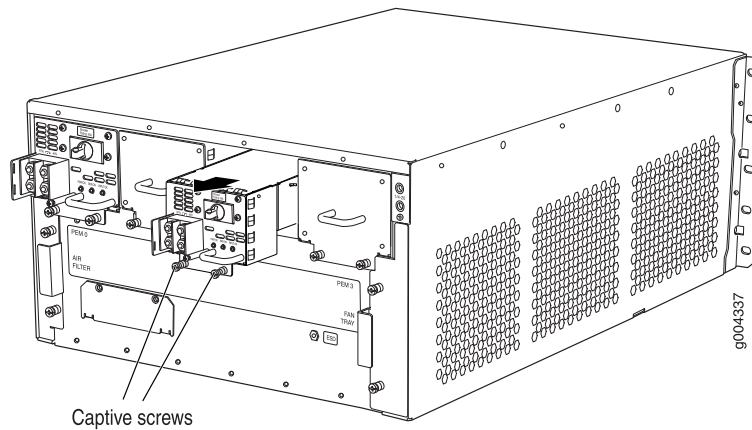

Installing an MX240 DC Normal Capacity Power Supply



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To install a DC power supply (see [Figure 135 on page 319](#)):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Switch the DC circuit breaker on the DC power supply faceplate to the off (O) position.
4. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
5. Tighten the captive screws on the lower edge of the power supply faceplate.
6. Remove the clear plastic cover protecting the terminal studs on the faceplate.
7. Remove the nuts and washers from the terminal studs.
8. Secure each power cable lug to the terminal studs, first with the flat washer, then with the nut (see [Figure 136 on page 320](#)). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in.

(2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)

- a. Secure the positive (+) DC source power cable lug to the **RTN** (return) terminal.
- b. Secure the negative (–) DC source power cable lug to the **–48V** (input) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



NOTE: The DC power supply in PEM0 must be powered by dedicated power feeds derived from feed A, and the DC power supply in PEM2 must be powered by dedicated power feeds derived from feed B. This configuration provides the commonly deployed A/B feed redundancy for the system.



NOTE: For information about connecting to DC power sources, see [“DC Power Supply Electrical Specifications for the MX240 Router” on page 51](#).

9. Replace the clear plastic cover over the terminal studs on the faceplate.
10. Verify that the power cabling is correct, that the cables are not touching or blocking access to router components, and that they do not drape where people could trip on them.

11. Verify that the **INPUT OK** LED on the power supply is lit green.
12. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.



NOTE: If more than one power supply is being installed, turn on all power supplies at the same time.



NOTE: An SCB must be present for the **PWR OK** LED to go on.

Figure 135: Installing a DC Power Supply in the Router


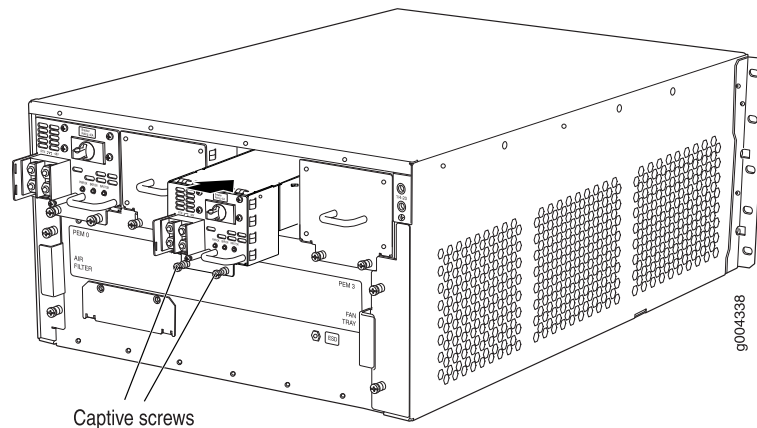


Figure 136: Connecting DC Power to the Router

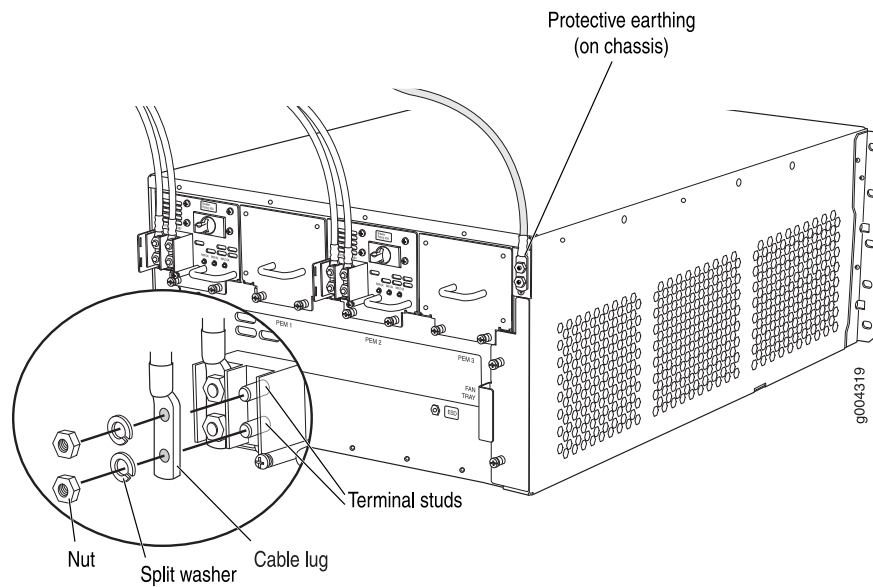

- See Also**
- [MX240 DC Power Supply Description on page 48](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [DC Power Supply Electrical Specifications for the MX240 Router on page 51](#)
 - [DC Power Wiring Sequence Warning on page 403](#)

Replacing an MX240 DC Power Supply Cable

1. [Disconnecting an MX240 DC Power Supply Cable on page 320](#)
2. [Connecting an MX240 DC Power Supply Cable on page 321](#)

Disconnecting an MX240 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To disconnect a power cable for a DC power supply:

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.

3. Verify that the **INPUT OK** LED on the power supply is not lit.
4. Remove the power cable from the external DC power source.
5. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
6. Switch the DC circuit breaker on the DC power supply faceplate to the off (O) position.
7. Remove the clear plastic cover protecting the terminal studs on the faceplate.
8. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
9. Remove the cable lug from the terminal studs.
10. Carefully move the power cable out of the way.

Connecting an MX240 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.
4. Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see [Figure 72 on page 205](#)). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin

freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 137: Connecting Power Cables to the DC Power Supply

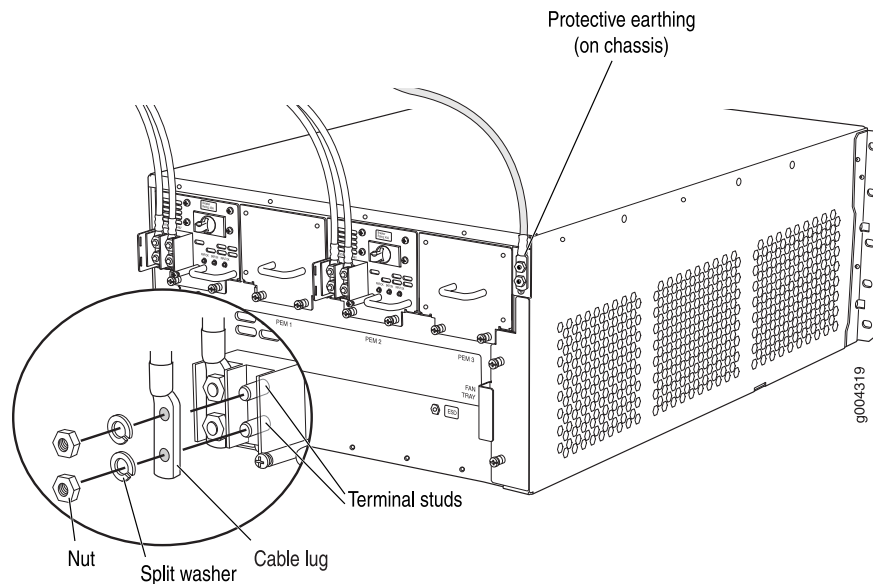

5. Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.
6. Replace the clear plastic cover over the terminal studs on the faceplate.
7. Attach the power cable to the DC power source.
8. Turn on the dedicated customer site circuit breaker to the power supply.
9. Verify that the **INPUT OK** LED on the power supply is lit steadily.
10. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [DC Power Cable Specifications for the MX240 Router on page 56](#)
 - [DC Power Disconnection Warning for M Series, MX Series, and T Series Routers](#)
 - [DC Power Wiring Sequence Warning for M Series, MX Series, and T Series Routers](#)
 - [MX240 DC Power Electrical Safety Guidelines on page 399](#)

Maintaining MX240 SFP and XFP Transceivers

- [Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 323](#)

Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Small form-factor pluggable transceivers (SFPs) and XFPs are optical transceivers that are installed in a DPC, MPC, MIC, or PIC. SFPs and XFPs are hot-insertable and hot-removable.

1. [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 323](#)
2. [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC on page 325](#)

Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Removing an SFP or XFP does not interrupt DPC, MPC, MIC, or PIC functioning, but the removed SFP or XFP no longer receives or transmits data.

To remove an SFP or XFP transceiver (see [Figure 125 on page 299](#)):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.
5. Pull the ejector handle out from the transceiver to unlock the transceiver.




CAUTION: Make sure that you open the ejector handle completely until you hear it click. This prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

6. Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the DPC, MPC, MIC, or PIC.
7. Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the DPC, MPC, MIC, or PIC.

Figure 138: Removing SFPs or XFPs

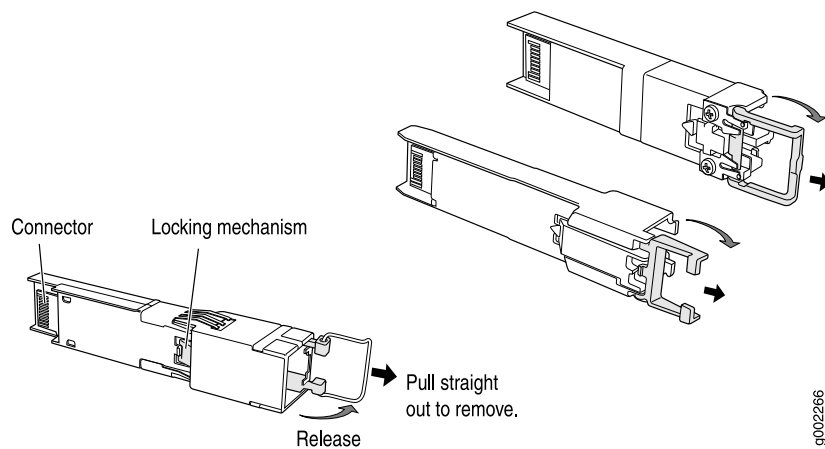

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on an antistatic mat or in an electrostatic bag.



CAUTION: After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [MX240 PIC Description on page 104](#)
 - [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
 - [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
 - [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC on page 299](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)

- [MX240 PIC Description on page 104](#)
- [MX240 Modular Port Concentrator \(MPC\) Description on page 127](#)
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
- [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC on page 294](#)
- [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC on page 298](#)
- [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)

Maintaining MX240 Switch Control Boards

- [Replacing an MX240 SCB-MX on page 326](#)
- [Upgrading an MX240 to Use the SCBE-MX on page 330](#)
- [Upgrading an MX240 to Use the SCBE2-MX on page 338](#)
- [Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX on page 343](#)

Replacing an MX240 SCB-MX



CAUTION: Before you replace the Switch Control Board, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.

Before replacing an SCB-MX, read the guidelines in *Operating and Positioning the MX240 SCB Ejectors*.

1. [Removing an MX240 SCB-MX on page 327](#)
2. [Installing an MX240 Switch Control Board on page 328](#)

Removing an MX240 SCB-MX




CAUTION: Before removing the Switch Control Board, ensure that you know how to operate the ejector handles properly to avoid damage to the equipment.



NOTE: You can remove the Switch Control Board and Routing Engine as a unit, or remove the Routing Engine separately.

1. Take the host subsystem offline.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Rotate the ejector handles simultaneously counterclockwise to unseat the Switch Control Board.
5. Grasp the ejector handles, and slide the Switch Control Board about halfway out of the chassis.
6. Place one hand underneath the Switch Control Board to support it, and slide it completely out of the chassis.
7. Place the Switch Control Board on the antistatic mat.
8. If you are not replacing the Switch Control Board now, install a blank panel over the empty slot.

Figure 139: Removing the Switch Control Board from an MX240 Router

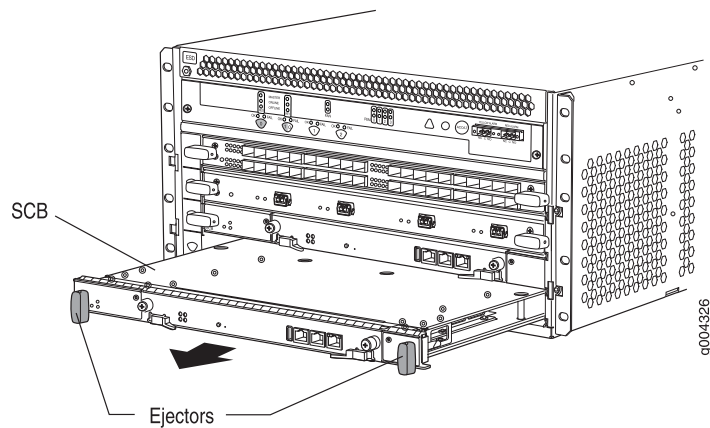


Installing an MX240 Switch Control Board

To install a Switch Control Board (see [Figure 140 on page 328](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the Switch Control Board with the guides inside the chassis.
3. Slide the Switch Control Board into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the Switch Control Board is fully seated.
5. Place the ejector handles in the proper position, horizontally and toward the center of the board.

Figure 140: Installing a Switch Control Board in the MX480

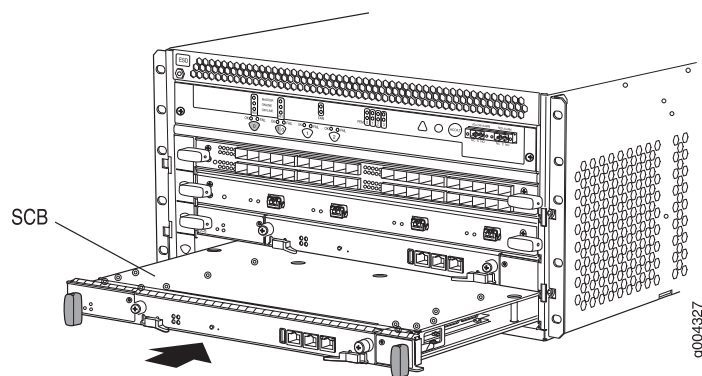

6. Check the LEDs on the Switch Control Board faceplate to verify that it is functioning normally.

- The green **OK/FAIL** LED should light steadily a few minutes after the Switch Control Board is installed.
 - If the **OK/FAIL** LED is red, remove and install the Switch Control Board again. If the **OK/FAIL** LED still lights steadily, the Switch Control Board is not functioning properly. Contact your customer support representative.
7. Check the status of the Switch Control Board using the **show chassis environment cb** command:

```

user@host> show chassis environment cb
CB 0 status:
State                               Online Master
Temperature                           25 degrees C / 77 degrees F
Power 1
  1.2 V                               1198 mV
  1.5 V                               1508 mV
  1.8 V                               1830 mV
  2.5 V                               5059 mV
  3.3 V                               6593 mV
  5.0 V                               5111 mV
  12.0 V                              12181 mV
  1.25 V                              1250 mV
  3.3 V SM3                           6587 mV
  5 V RE                               5078 mV
  12 V RE                              12026 mV
Power 2
  11.3 V bias PEM                     11253 mV
  4.6 V bias MidPlane                 4827 mV
  11.3 V bias FPD                    11408 mV
  11.3 V bias POE 0                  11446 mV
  11.3 V bias POE 1                  11408 mV
Bus Revision                          6
FPGA Revision                         0
CB 1 status:
State                               Online Standby
Temperature                           26 degrees C / 78 degrees F
Power 1
  1.2 V                               1211 mV
  1.5 V                               1517 mV
  1.8 V                               1817 mV
  2.5 V                               2507 mV
  3.3 V                               3312 mV
  5.0 V                               5136 mV
  12.0 V                              12142 mV
  1.25 V                              1260 mV
  3.3 V SM3                           3306 mV
  5 V RE                               5085 mV
  12 V RE                              11968 mV
Power 2
  11.3 V bias PEM                     11369 mV
  4.6 V bias MidPlane                 4814 mV
  11.3 V bias FPD                    11427 mV
  11.3 V bias POE 0                  11350 mV
  11.3 V bias POE 1                  11330 mV
Bus Revision                          39
FPGA Revision                         1

```

Upgrading an MX240 to Use the SCBE-MX

1. Prepare for the SCB-MX Upgrade on page 330
2. Upgrade the MX240 SCB-MX in the Backup Routing Engine on page 331
3. Upgrade the MX240 SCB-MX in the Master Routing Engine on page 333
4. Complete the SCB-MX Upgrade on page 335

Prepare for the SCB-MX Upgrade



NOTE: Do not make other changes to the CLI during the entire upgrade process. To insure you don't inadvertently change the CLI, open a telnet session to the master RE CLI operational mode and issue the `configure exclusive` command. This command locks the configuration procedure.



TIP: To prevent traffic loss during the upgrade process, we recommend that you operate the line cards at 50% line rate. This 50% limit must be maintained per PFE on each line card.

To prepare the MX240 router for the Enhanced MX Switch Control Board (SCBE-MX) upgrade:

1. Verify that the system runs Junos OS Release 11.4 or later by issuing the `show version` command on the master router:

```
user@host> show version
Model: mx240
Junos Base OS Software Suite [11.4-20110530];
```



NOTE: The SCBE-MX is supported only in Junos OS Release 11.4 or later.

The latest software ensures a healthy system—that is—Routing Engines, control boards, and FPCs, before the upgrade.

2. Verify that SCB-MX boards are installed:

```
user@host> show chassis hardware
Item  Version  Part Number  Serial Number  Description
CB0   REV 07  710-021523  ABBC8281      MX SCB
CB1   REV 07  710-021523  ABBC8323      MX SCB
```

SCB-MX details are displayed as above, along with other hardware components. The MX240 router has only two SCB-MXs, and each SCB-MX has four fabric planes.

3. Establish console connections to both Routing Engines. You can use a telnet session to connect to the router console by issuing the `<router name>-con` command. For example, if the router name is `juniper`, you can connect to RE0 and RE1 consoles by issuing the `telnet juniper-con` and `telnet juniper1-con` commands.
4. Ensure that graceful switchover (GRES), commit synchronize (required for nonstop routing), and nonstop routing (NSR) are enabled or configured by running the `set chassis redundancy graceful-switchover`, `set system commit synchronize`, and `set routing-options nonstop-routing` commands.



NOTE: These commands are mandatory for this upgrade and may be removed, if desired, after the upgrade.

5. Set the upgrade flag on, and start the SCB-MX upgrade by issuing the `set chassis state cb-upgrade on` command:

```
user@host# set chassis state cb-upgrade on
user@host# configure
user@host# commit
```

6. Determine the order to replace the existing SCB-MXs with upgraded ones. SCB 0 is associated with RE0 and SCB1 is associated with RE1.



NOTE: Do not add or remove any router hardware during the upgrade procedure.

Upgrade the MX240 SCB-MX in the Backup Routing Engine



TIP: The MX240 has two slots for an SCB-MX: SCB 0 and SCB 1. These correspond to RE0 and RE1, respectively, where SCB 1 is the first SCB-MX.

To upgrade the SCB-MX in the backup Routing Engine (SCB 1):

1. Power down the backup Routing Engine from the master Routing Engine by issuing the `request system power-off other-routing-engine` command.
2. Verify that the Routing Engine is powered down by issuing the `show chassis routing-engine 1` command. The slot of the Routing Engine may be 0 or 1, and is shown as 1 in this example:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

3. Take the fabric plane offline by issuing the **request chassis fabric plane 4 offline** command. SCB1 has four fabric planes numbered, 4, 5, 6, and 7.
4. Verify that the fabric plane is offline:

```
user@host> show chassis fabric summary

Plane  State  Uptime
  4  Offline
  5  Online  1 hour, 15 minutes, 35 seconds
```

Verify that the 'State' of Plane 4 is Offline.

5. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 5/6/7 offline** command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 2.
6. Take the SCB-MX in slot 1 offline by issuing the **request chassis cb offline slot 1** command.
7. Verify that the control SCB-MX is offline:

```
user@host> show chassis environment cb 1

CB 1 status:
State  Offline
Power 1  Disabled
Power 2  Disabled
```

8. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
9. Remove and replace SCB 1 on the router with the SCBE-MX. Use the replacement procedure described in [“Replacing an MX240 SCB-MX” on page 326](#).
10. Verify that the installation is successful and the SCBE-MX is online:

```
user@host> show chassis environment cb 1

CB 1 status
State  Online
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed, along with the state.

11. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
```

```
Plane State Uptime
4 Online 2 minutes, 25 seconds
5 Online 2 minutes, 15 seconds
6 Online 2 minutes, 3 seconds
7 Online 1 minute, 49 seconds
```

- Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
```

```
Routing Engine Status:
Slot 1:
Current State Backup
```

- Verify the alarms:

```
user@host> show chassis alarms
```

```
Alarm Time Class Description
2011-06-01 13:26:56 EDT Major CB fabrics are of mixed types
```

Because only one SCB-MX has been upgraded, the alarm indicates that the SCB-MXs are of mixed type. This alarm is cleared after all the control boards are upgraded.

Upgrade the MX240 SCB-MX in the Master Routing Engine

- Issue the **request chassis routing-engine master switch** command so that the backup RE becomes the master RE. This ensures a Graceful RE Switchover (GRES) to gracefully switch between the master and backup Routing Engines.
- Log in to the new master Routing Engine after the switchover.
- Switch the configuration mode to ensure that you are still in configure exclusive mode by issuing the **exit** command and then the **configure exclusive** command, from the old master Routing Engine.
- Log in to the current master Routing Engine again and issue the **configure exclusive** command.
- Issue the **request system power-off other-routing-engine** command to power down the backup Routing Engine from the master Routing Engine.
- Issue the **show chassis routing-engine 0** command to verify that the Routing Engine is powered down.

```
user@host> show chassis routing-engine 0
```

```
Routing Engine Status:
Slot 0:
Current State Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

7. Issue the **request chassis fabric plane 0 offline** command to take the first fabric plane of the backup Routing Engine offline. SCB 0 has four fabric planes numbered, 0, 1, 2, and 3.
8. Issue the **show chassis fabric summary** command to verify that the fabric plane is offline.

```
user@host> show chassis fabric summary
Plane State Uptime
0 Offline
1 Online 3 minutes, 45 seconds
```

Verify that the State of plane 0 is Offline.

9. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 1/2/3 offline** command—that is, by changing the fabric plane number each time.
10. Issue the **configure exclusive** command to verify that the fabric planes are offline.
11. Issue the **request chassis cb offline slot 0** command to take the SCB-MX in slot 0 offline.
12. Issue the **show chassis environment cb 0** command to verify that the SCB is offline.

```
user@host> show chassis environment cb 0
CB 0 status:
State Offline
Power 1 Disabled
Power 2 Disabled
```

13. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
14. Remove and replace the offline SCB-MX on the Routing Engine with the SCBE-MX. Use the replacement procedure described in [“Replacing an MX240 SCB-MX” on page 326](#).
15. Issue the **show chassis environment cb 0** command to verify that the installation is successful and SCB 0 is online:

```
user@host> show chassis environment cb 0
CB 0 status
State Online
Temperature 30 degrees C / 86 degrees F
```

Other details such as power are also displayed along with the state.

- Issue the **show chassis fabric summary** command to verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
```

```
Plane State Uptime
0 Online 2 minutes, 5 seconds
1 Online 1 minute, 55 seconds
2 Online 1 minute, 43 seconds
3 Online 1 minute, 33 seconds
```

- Issue the **show chassis routing-engine 0** command to verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 0
```

```
Routing Engine Status:
Slot 0:
Current State Backup
```

- Issue the **show chassis alarms** command to verify the alarms:

```
user@host> show chassis alarms
```

```
Alarm Time Class Description
2011-06-01 13:26:56 EDT Major CB fabric links require upgrade/training
2011-06-01 12:10:41 EDT Major Require a fan tray upgrade
```

The major alarm has changed from **CB fabrics are of mixed types** to **CB fabric links require upgrade/training**, as a SCB-MX requires training to change the link speed from 3G to 6G for the SCBE-MX. This alarm is displayed until the 3G to 6G link transition is completed.

Complete the SCB-MX Upgrade

- Check to see if there are any MPCs running at 3G instead of 6G:

```
user@host> request chassis fabric upgrade-bandwidth info
```

```
Slot State
0 Upgrade not supported
1 Needs upgrade
2 Empty
3 Empty
4 Empty
5 Empty
```

In this example, the results indicate that slot 0 does not support the upgrade and slot 1 needs to be upgraded.

- Issue the **request chassis fabric upgrade-bandwidth fpc all** command to upgrade the bandwidth of all MPCs. If you want to control the MPC line card upgrade, go to Step 3.



CAUTION: Use this command only if you are not concerned with the slot upgrade order or if only one old MPC is present in the chassis. Running this command may result in a loss of traffic across the MPC. Using this method may increase the traffic loss, because it does not consider any redundancy or graceful switchover strategies that you may have configured on the system.

3. Issue the **request chassis fabric upgrade-bandwidth fpc slot 1** command to upgrade the MPC in slot 1.

4. Verify that the MPC is upgraded:

```
user@host> request chassis fabric upgrade-bandwidth info
Slot State
0 Upgrade not supported
1 Upgraded
2 Empty
```

5. Verify the state of the fabric planes for all MPCs:

```
user@host> show chassis fabric summary
Plane State Uptime
0 Spare 21 seconds
1 Spare 12 seconds
2 Online 12 minutes
3 Online 12 minutes
4 Online 30 minutes
5 Online 30 minutes
```

6. Verify the state of the MPCs:

```
user@host> show chassis fabric fpcs
FPC 1
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #2
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
```



```

Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #3
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled

```

Fabric plane details of all MPCs are also displayed.

- Verify if the **show chassis fabric summary** command output shows fabric planes in the 'check' state. This indicates that the fabric plane has an error. You can try to recover the fabric plane to normal operation by issuing the **request chassis fabric plane <#> offline** command, followed by the **request chassis fabric plane <#> online** command, where <#> equals the fabric plane in error.



NOTE: After you issue the **request chassis fabric plane <#> offline** and **request chassis fabric plane <#> online** commands, issue the **show chassis fabric summary** command to verify that the fabric plane errors are rectified and to verify the current state of the fabric planes.

- Verify if any major alarms are displayed:

```

user@host> show chassis alarms

Alarm Time   Class Description
2011-06-01 13:37:43 EDT Minor Require a fan tray upgrade
2011-06-01 13:37:26 EDT Minor Backup RE Active

```

In this example, the major alarms are no longer displayed, and the upgrade is successfully completed.

- Disable the upgrade configuration by issuing the **set chassis state cb-upgrade off** command and then the **commit** command.
- You can delete that command by issuing the **delete chassis state cb-upgrade** command and then the **commit** command.
- Verify the SCBE-MXs before you finish by issuing the **show chassis hardware** command:

```

user@host> show chassis hardware

Item  Version  Part Number  Serial Number  Description
CB0   REV 02   750-031391  YE8505        Enhanced MX SCB
CB1   REV 07   710-031391  YL6769        Enhanced MX SCB

```

See Also • [SCBE-MX Description](#)

Upgrading an MX240 to Use the SCBE2-MX

Consider the following scenarios when upgrading an MX240 SCB-MX or SCBE-MX to use the SCBE2-MX:

Scenario 1: SCBE2-MX; Routing Engine with Junos OS Release 13.3R1 or later installed.

- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.
- Ensure that Enhanced IP or Enhanced Ethernet Network Services mode is configured before you power on the router.

Scenario 2: SCB-MX or SCBE-MX; existing Routing Engine with a Junos OS Release 13.3R1 or earlier installed.

- Upgrade the Routing Engine (**RE0** and **RE1**) software to Junos OS Release 13.3 or later.
- Configure Enhanced IP or Enhanced Ethernet Network Services mode.
- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.

Scenario 3: Failed SCB-MX or SCBE-MX; Routing Engine with a Junos OS Release 13.3R1 or earlier installed.

- Upgrade the software on the Routing Engine hosting the failed SCB-MX or SCBE-MX with Junos OS Release 13.3R1 or later.
- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.
- Upgrade the software on the Routing Engine hosting the SCBE2-MX with Junos OS Release 13.3R1 or later.
- Configure Enhanced IP or Enhanced Ethernet Network Services mode.

To upgrade the MX240 to use the SCBE2-MX, perform the following steps:



NOTE: The SCBE2-MX does not support smooth upgrade.

1. [Prepare the MX240 Router for the SCBE2-MX Upgrade on page 339](#)
2. [Power Off the MX240 Router on page 339](#)
3. [Remove the MX240 Routing Engine on page 340](#)
4. [Install the MX240 Routing Engine into the SCBE2-MX on page 340](#)
5. [Power On the MX240 Router on page 341](#)
6. [Complete the SCBE2-MX Upgrade on page 342](#)

Prepare the MX240 Router for the SCBE2-MX Upgrade

1. Verify that the system runs Junos OS Release 13.3 or later by issuing the **show version** command on the master router.

```
user@host> show version
Model: mx240
Junos Base OS Software Suite [13.3-yyyymmdd];
...
```



NOTE: The SCBE2-MX is supported only on:

- Junos OS Release 13.3R1 or later
- Network Services Mode: Enhanced-IP

The latest software ensures a healthy system—that is, a system that comprises Routing Engines, control boards, and FPCs—before the upgrade.

For information about how to verify and upgrade the Junos OS, see the *Junos OS Installation and Upgrade Guide*.

Power Off the MX240 Router



NOTE: After turning off the power supply, wait at least 60 seconds before turning it back on.

1. On the external management device connected to the Routing Engine, issue the **request system halt both-routing-engines** operational mode command. This command shuts down the Routing Engines cleanly, so that their state information is preserved. (If the router contains only one Routing Engine, issue the **request system halt** command.)

```
user@host> request system halt both-routing-engines
```

2. Wait until a message appears on the console confirming that the operating system has halted.
3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off (O) position.

Remove the MX240 Routing Engine

1. Remove the cables connected to the Routing Engine.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
4. Loosen the captive screws on the top and bottom of the Routing Engine.
5. Flip the ejector handles outward to unseat the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
8. Place the Routing Engine on the antistatic mat.

Install the MX240 Routing Engine into the SCBE2-MX

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.
4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2-MX.
5. Slide the Routing Engine into the SCBE2-MX until you feel resistance and then press the faceplate of the Routing Engine until it engages the connectors.
6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the top and bottom of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

Power On the MX240 Router

1. Verify that the power supplies are fully inserted in the chassis.
2. Verify that each AC power cord is securely inserted into its appliance inlet.
3. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
4. Turn on the power to the external management device.
5. Switch on the dedicated customer-site circuit breakers. Follow the ESD and safety instructions for your site.
6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power-supply faceplate to the off (—) position.
8. Check that the AC or the DC power supply is correctly installed and functioning normally. Verify that the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.



NOTE: After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the **show chassis** command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.

9. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.



NOTE: If the system is completely powered off when you power on the power supply, the Routing Engine boots as the power supply completes its startup sequence. Normally, the router boots from the Junos OS on the CompactFlash card.

After turning on a power supply, wait at least 60 seconds before turning it off.

Complete the SCBE2-MX Upgrade

1. Verify that the installation is successful and the SCBE2-MX is online:

```
user@host> show chassis environment cb 0
CB 0 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

```
user@host> show chassis environment cb 1
CB 1 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

Other details, such as, temperature, power, etc are also displayed along with the state.

2. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane  State  Uptime
0      Online 2 days, 19 hours, 10 minutes, 9 seconds
1      Online 2 days, 19 hours, 10 minutes, 9 seconds
...
```

3. Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State Backup
...
```

4. Verify the SCBE2-MXs are installed:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
CB 0          REV 08   750-048307   CABC9829      Enhanced MX SCB 2
CB 1          REV 08   750-048307   CABC9828      Enhanced MX SCB 2
...
```

Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX



NOTE: Due to certain limitations in functionality, the MPC7E is not supported in slot 1 when the SCBE3-MX is plugged into an MX960 PREMIUM3/BASE3 system. If you have an MPC7E in slot 1, move it to a different slot before installing the SCBE3-MX.

1. [Upgrade the Routing Engine on page 343](#)
2. [Install the Routing Engine into the SCBE3-MX on page 344](#)
3. [Install the SCBE3-MX into the Router Chassis on page 344](#)
4. [Complete the SCBE3-MX Upgrade on page 344](#)

Upgrade the Routing Engine

If you are upgrading to the SCBE3-MX from an SCBE2-MX or older SCB, the Routing Engine must be upgraded to the first supported Junos release for the SCBE3-MX (18.4R1) before you install it in the SCBE3-MX. Also, we recommend that you update the recovery snapshot with the 18.4R1 or later image before you begin the upgrade. If the Routing Engine fails to boot from the primary image, it will attempt to boot from the recovery image. Since the older recovery image does not support the SCBE3-MX, the Routing Engine will crash if it attempts to boot from the old recovery image.



CAUTION: If you plug the Routing Engine into the SCBE3-MX without first upgrading Junos to 18.4R1 or later, Junos might crash and go to a db prompt. Should this occur, you'll need to recover the router by copying the Junos software image for the 18.4R1 or later release and then booting from the USB drive to install 18.4R1 Junos on the SCBE3-MX. The USB install will wipe out the router configuration and all user files on the Routing Engine.

To upgrade the Routing Engine while it's plugged into an SCBE2-MX or older SCB:

1. Download the software related to your MX Series Routing Engine.
2. If you have not already done so, connect to the console port on the switch from your management device, and log in to the Junos OS CLI.
3. (Optional) Back up the current software configuration to a second storage option. See the [Junos OS Installation and Upgrade Guide](#) for instructions on performing this task.
4. Install the new software.
5. Reboot the Routing Engine and wait for it to boot with the new Routing Engine image.
6. Install the SCBE3-MX into the Router Chassis. See:

[Installing an MX240 Switch Control Board on page 328](#)

Installing an MX480 Switch Control Board

Installing an MX960 Switch Control Board

Install the Routing Engine into the SCBE3-MX

Refer to the Routing Engine installation procedure for your MX model:

[“Installing an MX240 Routing Engine” on page 232](#)

Installing an MX480 Routing Engine

Installing an MX960 Routing Engine

Install the SCBE3-MX into the Router Chassis

Refer to the Switch Control Board installation procedure for your MX model:

[“Installing an MX240 Switch Control Board” on page 328](#)

Installing an MX480 Switch Control Board

Installing an MX960 Switch Control Board

Complete the SCBE3-MX Upgrade

1. Verify that the installation is successful and the SCBE3-MX is online:

```
user@host> show chassis environment cb 0
CB 0 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

```
user@host> show chassis environment cb 1
CB 1 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

Other details, such as, temperature, power, etc are also displayed along with the state.

2. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane  State    Uptime
0      Online  2 days, 19 hours, 10 minutes, 9 seconds
1      Online  2 days, 19 hours, 10 minutes, 9 seconds
...
```

3. Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
```



```
Routing Engine Status:
Slot 1:
Current State  Backup
...
```

4. Verify the SCBE3-MXs are installed:

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
CB 0	REV 29	750-070866	CAKP0543	Enhanced MX SCB 3
CB 1	REV 29	750-070866	CAKP0541	Enhanced MX SCB 3
...				

See Also • [SCBE3-MX Description](#)

CHAPTER 5

Troubleshooting Hardware

- [Troubleshooting the MX240 Components on page 347](#)

Troubleshooting the MX240 Components

- [Troubleshooting Resources for MX240 Routers on page 347](#)
- [Troubleshooting the MX240 Cooling System on page 350](#)
- [Troubleshooting the MX240 DPCs on page 350](#)
- [Troubleshooting the MX240 FPCs on page 352](#)
- [Troubleshooting the MX240 MICs on page 354](#)
- [Troubleshooting the MX240 MPCs on page 354](#)
- [Troubleshooting the MX240 PICs on page 356](#)
- [Troubleshooting the MX240 Power System on page 356](#)

Troubleshooting Resources for MX240 Routers

- [Command-Line Interface on page 347](#)
- [Chassis and Interface Alarm Messages on page 348](#)
- [Alarm Relay Contacts on page 348](#)
- [Craft Interface LEDs on page 348](#)
- [Component LEDs on page 349](#)
- [Juniper Networks Technical Assistance Center on page 349](#)

Command-Line Interface

The Junos OS command-line interface (CLI) is the primary tool for controlling and troubleshooting router hardware, Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the **ping** and **traceroute** utilities.

You enter CLI commands on one or more external management devices connected to ports on the Routing Engine.

For information about using the CLI to troubleshoot Junos OS, see the appropriate Junos OS configuration guide.

Chassis and Interface Alarm Messages

When the Routing Engine detects an alarm condition, it lights the red or yellow alarm LED on the craft interface as appropriate. To view a more detailed description of the alarm cause, issue the **show chassis alarms** command:

```
user@host> show chassis alarms
```

There are two classes of alarm messages:

- Chassis alarms—Indicate a problem with a chassis component such as the cooling system or power supplies.
- Interface alarms—Indicate a problem with a specific network interface.

Alarm Relay Contacts

The craft interface has two alarm relay contacts for connecting the router to external alarm devices. Whenever a system condition triggers either the red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

Craft Interface LEDs

The craft interface is the panel on the front of the router located above the DPC cards that contains LEDs and buttons that allow you to troubleshoot the router.

LEDs on the craft interface include the following:

- Alarm LEDs—One large red circular LED and one large yellow triangular LED, located on the upper right of the craft interface, indicate two levels of alarm conditions. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously. A condition that causes an alarm LED to light also activates the corresponding alarm relay contact on the craft interface.
- Host subsystem LEDs—Three LEDs, **MASTER**, **ONLINE**, and **OFFLINE**, indicate the status of the host subsystem. A green **MASTER** LED indicates that the host is functioning as the master. The **ONLINE** LED indicates that the host is online. The **OFFLINE** LED indicates that the host is installed but the routing engine is offline. The host subsystem LEDs are located on the left of the craft interface and are labeled **RE0** and **RE1**.
- Power supply LEDs—Two LEDs (**PEM**) indicate the status of each power supply. Green indicates that the power supply is functioning normally. Red indicates that the power supply is not functioning normally. The power supply LEDs are located in the center craft interface, and are labeled **0** through **3**.
- DPC LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each DPC. Green indicates OK and red indicates a failure. The DPC LEDs are located along the bottom of the craft interface.

- FPC LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of an FPC. Green indicates OK and red indicates a failure. The FPC LEDs are located along the bottom of the craft interface.
- SCB LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each SCB. Green indicates OK and red indicates a failure. The SCB LEDs are located on the left of the craft interface along the bottom.
- Fan LEDs—Two LEDs indicate the status of the fans. Green indicates the fans are functioning normally and red indicates a fan has failed. The fan LEDs are located on the upper left of the craft interface.

Component LEDs

The following LEDs are located on various router components and display the status of those components:

- DPC LED—One LED labeled **OK/FAIL** on each DPC faceplate indicates the DPC's status. For more information, see the [MX Series Interface Module Reference](#).
- FPC LED—One LED labeled **OK/FAIL** on each FPC faceplate indicates the FPC's status.
- PIC LED—One LED labeled **OK/FAIL** on each PIC faceplate indicates the PIC's status. For more information, see the [MX Series Interface Module Reference](#).
- SCB LEDs—Three LEDs, labeled **FABRIC ACTIVE**, **FABRIC ONLY**, and **OK/FAIL**, on each SCB faceplate indicate the status of the SCB. If no LEDs are lit, the master RE might still be booting or the SCB is not receiving power.
- Routing Engine LEDs—Four LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL** on each Routing Engine faceplate indicate the status of the Routing Engine and hard disk drive.
- Power supply LEDs—Two LEDs on each power supply faceplate indicate the status of that power supply.

Juniper Networks Technical Assistance Center

If you need assistance during troubleshooting, you can contact the Juniper Networks Technical Assistance Center (JTAC) by using the Web or by telephone. For more information see “[Contacting Customer Support](#)” on page 361.

- See Also**
- [MX240 SCB-MX Description](#)
 - [MX240 Routing Engine Description on page 59](#)
 - [MX240 Craft Interface Overview on page 35](#)
 - [MX240 Component LEDs on the Craft Interface on page 36](#)
 - [MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button on page 36](#)
 - [MX240 Alarm Relay Contacts on the Craft Interface on page 35](#)
 - [MX240 AC Power Supply Description on page 42](#)
 - [MX240 DC Power Supply Description on page 48](#)

Troubleshooting the MX240 Cooling System

Problem **Description:** The fans in the fan tray are not functioning normally.

Solution Follow these guidelines to troubleshoot the fans:

- Check the fan LEDs and alarm LEDs on the craft interface.
- If the red alarm LED on the craft interface lights, use the CLI to get information about the source of an alarm condition: `user@host> show chassis alarms`.

If the CLI output lists only one fan failure, and the other fans are functioning normally, the fan is most likely faulty and you must replace the fan tray.
- Place your hand near the exhaust vents at the side of the chassis to determine whether the fans are pushing air out of the chassis.
- If a fan tray is removed, a yellow alarm and a red alarm occur.
- The following conditions automatically cause the fans to run at full speed and also trigger the indicated alarm:
 - A fan fails (red alarm).
 - The router temperature exceeds the “temperature warm” threshold (yellow alarm).
 - The temperature of the router exceeds the maximum (“temperature hot”) threshold (red alarm and automatic shutdown of the power supplies).

- See Also**
- [MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button on page 36](#)
 - [MX240 Cooling System Description on page 39](#)
 - [Maintaining the MX240 Fan Tray on page 223](#)

Troubleshooting the MX240 DPCs

Problem **Description:** The DPCs are not functioning normally.

Solution • Monitor the green LED labeled **OK** above the DPC on the craft interface as soon as a DPC is seated in an operating router.

The Routing Engine downloads the DPC software to it under two conditions: the DPC is present when the Routing Engine boots Junos OS, and the DPC is installed and requested online through the CLI or push button on the front panel. The DPC then runs diagnostics, during which the **OK** LED blinks. When the DPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the DPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.

- Check the **OK/FAIL** LED on the DPC and **OK** and **FAIL** DPC LEDs on the craft interface. When the DPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed DPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the DPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp	CPU Utilization (%)		Memory	Utilization (%)		Buffer
			(C)	Total		Interrupt	DRAM (MB)	
0	Online	41	9	0	1024	15	57	
1	Online	43	5	0	1024	16	57	
2	Online	43	11	0	1024	16	57	
3	Empty							
4	Empty							
5	Online	42	6	0	1024	16	57	



NOTE: The **show chassis fpc** command displays the status of the DPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```
Slot 2 information:
  State                Online
  Temperature          22 degrees C / 71 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           256 MB
  Total SDRAM          0 MB
  Start time           2006-11-03 07:35:40 PST
  Uptime                2 hours, 27 minutes, 1 second

Slot 4 information:
  State                Online
  Temperature          22 degrees C / 71 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           256 MB
  Total SDRAM          0 MB
  Start time           2006-11-03 07:35:48 PST
  Uptime                2 hours, 26 minutes, 53 seconds

Slot 7 information:
  State                Online
  Temperature          24 degrees C / 75 degrees F
  Total CPU DRAM       1024 MB
  Total SRAM           256 MB
  Total SDRAM          0 MB
  Start time           2006-11-03 07:35:53 PST
  Uptime                2 hours, 26 minutes, 48 seconds
```

For further description of the output from the commands, see the *Junos OS Administration Library*.

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Maintaining MX240 DPCs on page 254](#)

Troubleshooting the MX240 FPCs

Problem **Description:** The FPCs are not functioning normally.

- Solution**
- Monitor the green LED labeled **OK** above the FPC on the craft interface as soon as an FPC is seated in an operating router.

The Routing Engine downloads the FPC software to it under two conditions: the FPC is present when the Routing Engine boots Junos OS, and the FPC is installed and requested online through the CLI or push button on the front panel. The FPC then runs diagnostics, during which the **OK** LED blinks. When the FPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the FPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the FPC and **OK** and **FAIL** FPC LEDs on the craft interface. When the FPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed FPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the FPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	24	3	0	1024	13	21
1	Empty						
2	Online	41	9	0	1024	15	57
3	Online	43	5	0	1024	16	57
4	Online	43	11	0	1024	16	57
5	Online	41	9	0	1024	15	57
6	Online	43	5	0	1024	16	57
7	Empty						
8	Empty						
9	Empty						
10	Online	24	3	0	1024	13	21
11	Empty						



NOTE: The **show chassis fpc** command displays the status of the FPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```



```

Slot 0 information:
  State                Online
  Temperature          24 degrees C / 75 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         128 MB
  Total DDR DRAM       2048 MB
  Start time:         2008-12-11 16:53:24 PST
  Uptime:              15 hours, 2 minutes, 47 seconds
Slot 2 information:
  State                Online
  Temperature          29 degrees C / 84 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:         2008-12-11 16:53:18 PST
  Uptime:              15 hours, 2 minutes, 53 seconds
Slot 3 information:
  State                Online
  Temperature          29 degrees C / 84 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:         2008-12-11 16:53:18 PST
  Uptime:              15 hours, 2 minutes, 53 seconds
Slot 4 information:
  State                Online
  Temperature          29 degrees C / 84 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:         2008-12-11 16:53:18 PST
  Uptime:              15 hours, 2 minutes, 53 seconds
Slot 5 information:
  State                Online
  Temperature          29 degrees C / 84 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:         2008-12-11 16:53:22 PST
  Uptime:              15 hours, 2 minutes, 49 seconds
Slot 6 information:
  State                Online
  Temperature          29 degrees C / 84 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:         2008-12-11 16:53:18 PST
  Uptime:              15 hours, 2 minutes, 53 seconds
Slot 10 information:
  State                Online
  Temperature          24 degrees C / 75 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         128 MB
  Total DDR DRAM       2048 MB
  Start time:         2008-12-11 16:53:24 PST
  Uptime:              15 hours, 2 minutes, 47 seconds

```

For further description of the output from the commands, see the *Junos OS Administration Library*.

- See Also**
- [MX240 Flexible PIC Concentrator \(FPC\) LEDs on page 103](#)
 - [Maintaining MX240 FPCs on page 264](#)
 - [Holding an MX240 FPC on page 266](#)
 - [Storing an MX240 FPC on page 269](#)

Troubleshooting the MX240 MICs

Problem **Description:** The MICs are not functioning normally.

- Solution**
- Check the status of each port on a MIC by looking at the LED located on the MIC faceplate. For information about the meaning of LED states on different MICs, see the [MX Series Interface Module Reference](#).
 - Check the status of a MIC by issuing the `show chassis fpc pic-status` CLI command. The MIC slots in the MPC are labeled **PIC 0/1** and **PIC 2/3**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 1  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+
Slot 2  Online      MS-DPC
  PIC 0  Online      MS-DPC PIC
  PIC 1  Online      MS-DPC PIC
```

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 Modular Interface Card \(MIC\) Description on page 116](#)
 - [Maintaining MX240 MICs on page 279](#)

Troubleshooting the MX240 MPCs

Problem **Description:** The MPCs are not functioning normally.

- Solution**
- Monitor the green LED labeled **OK** above the MPC on the craft interface as soon as an MPC is seated in an operating router.

The Routing Engine downloads the MPC software to it under two conditions: The MPC is present when the Routing Engine boots Junos OS, and the MPC is installed and requested online through the CLI or push button on the front panel. The MPC then runs diagnostics, during which the **OK** LED blinks. When the MPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the MPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the MPC and **OK** and **FAIL** line card LEDs on the craft interface. When the MPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed MPCs. As shown in the sample output, the value **State** in the column labeled **State** indicates that the MPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Utilization (%) Buffer
0	Online	36	3	0	2048	14	13
1	Online	40	5	0	2048	26	13
2	Empty						



NOTE: The **show chassis fpc** command displays the status of the MPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
  State                Online
  Temperature          36 degrees C / 96 degrees F
  Total CPU DRAM       2048 MB
  Total RLD RAM        806 MB
  Total DDR DRAM       2632 MB
  Start time:          2009-12-22 12:27:04 PST
  Uptime:              6 days, 3 hours, 8 minutes, 41 seconds

  Max Power Consumption 450 Watts

Slot 1 information:
  State                Online
  Temperature          40 degrees C / 104 degrees F
  Total CPU DRAM       2048 MB
  Total RLD RAM        1324 MB
  Total DDR DRAM       5120 MB
  Start time:          2009-12-22 12:27:02 PST
  Uptime:              6 days, 3 hours, 8 minutes, 43 seconds
```

Max Power Consumption	440 Watts
-----------------------	-----------

For further description of the output from the commands, see the *Junos OS System Configuration Guide*.

- See Also**
- [MX240 Modular Port Concentrator \(MPC\) LEDs on page 129](#)
 - [Maintaining MX240 MPCs on page 282](#)

Troubleshooting the MX240 PICs

Problem **Description:** The PICs are not functioning normally.

- Solution**
- Check the status of each port on a PIC by looking at the LED located on the PIC faceplate. For information about the meaning of LED states on different PICs, see the [MX Series Interface Module Reference](#).
 - Check the status of a PIC by issuing the **show chassis fpc pic-status** CLI command. The PIC slots in the FPC are numbered from **0** through **1**, left to right:

```
user@host> show chassis fpc pic-status
```

```
Slot 0  Online      DPC 40x 1GE R
PIC 0   Online      10x 1GE(LAN)
PIC 1   Online      10x 1GE(LAN)
PIC 2   Online      10x 1GE(LAN)
PIC 3   Online      10x 1GE(LAN)
Slot 1  Online      MX FPC Type 3
PIC 0   Online      1x 0C-192 SONET
PIC 1   Online      1x 0C-192 SONET
```

For further description of the output from the command, see the [CLI Explorer](#).

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Maintaining MX240 PICs on page 288](#)
 - [MX240 PIC Serial Number Label on page 369](#)

Troubleshooting the MX240 Power System

Problem **Description:** The power system is not functioning normally.

- Solution**
- Check the LEDs on each power supply faceplate.
 - If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LED's light steadily, and the **PS FAIL** LED is not lit.

- If a DC power supply is correctly installed and functioning normally, the **PWR_OK**, **INPUT OK**, and **BRKR ON** LED's light steadily.
- Issue the CLI **show chassis environment pem** command to check the status of installed power supply modules. As shown in the sample output, the value **Online** in the rows labeled **State** indicates that each power supply is functioning normally:

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature     OK
  DC output       OK
PEM 2 status:
  State           Online
  Temperature     OK
  DC output       OK
```

If a power supply is not functioning normally, perform the following steps to diagnose and correct the problem:

- If a red alarm condition occurs, issue the **show chassis alarms** command to determine the source of the problem.
- Check that the AC input switch (—) or DC circuit breaker (I) is in the on position and that the power supply is receiving power.
- Verify that the source circuit breaker has the proper current rating. Each power supply must be connected to a separate source circuit breaker.
- Verify that the AC power cord or DC power cables from the power source to the router are not damaged. If the insulation is cracked or broken, immediately replace the cord or cable.
- Connect the power supply to a different power source with a new power cord or power cables. If the power supply status LEDs indicate that the power supply is not operating normally, the power supply is the source of the problem. Replace the power supply with a spare.
- If all power supplies have failed, the system temperature might have exceeded the threshold, causing the system to shut down.



NOTE: If the system temperature exceeds the threshold, the Junos OS shuts down all power supplies so that no status is displayed.

The Junos OS also can shut down one of the power supplies for other reasons. In this case, the remaining power supplies provide power to the router, and you can still view the system status through the CLI or display.

To restart a high-capacity AC power supply after a shut down due to an over-temperature situation:

1. Move the power switch on the power supply to the off (o) position.
2. Turn off power to where the AC line goes into the power distribution module (PDM) area.
3. Wait for the power supply LEDs to fade out and for the fans inside the power supply to shutdown. This can take up to 10 seconds.



CAUTION: Do not attempt to power-on the power supply if the LED is still lit and the fan is still running. If you do, the router will not reboot.

4. Turn on power to where the AC line goes into the power distribution module (PDM) area.
5. Move the power switch on the power supply to the on (I) position.
6. Verify that the LEDs on the power supply faceplate are properly lit.
7. Issue the CLI **show chassis environment pem** command and verify the State is **ONLINE** and the Temperature is **OK**.

To restart a high-capacity DC power supply after a shut down due to an over-temperature situation:

1. Switch off the circuit breaker(s) on the DC distribution panel to remove power to the chassis and power supplies.
2. Switch on the circuit breaker(s) on the distribution panel to power up the chassis and power supplies.




NOTE: The power switch on the power supplies is not part of the outer or inner DC circuits and therefore does not need to be switched off when restarting the chassis.



NOTE: If output power is not load-balancing correctly in the same zone on an MX router with a high-capacity AC or DC power supply module, connect two feeds and change the DIP switch to 1 to boost the voltage on the power supply module.

Each High Capacity AC or DC power supply accepts two AC or DC feeds in two unique AC or DC receptacles. It is possible to operate with one feed, but there is a reduction in the power supply output. The DIP switch must be set according to the number of AC or DC feeds that are present for the power supply. Refer to [Figure 141 on page 359](#)

Figure 141: MX240 DC High-Capacity Power Supply Input Mode Switch

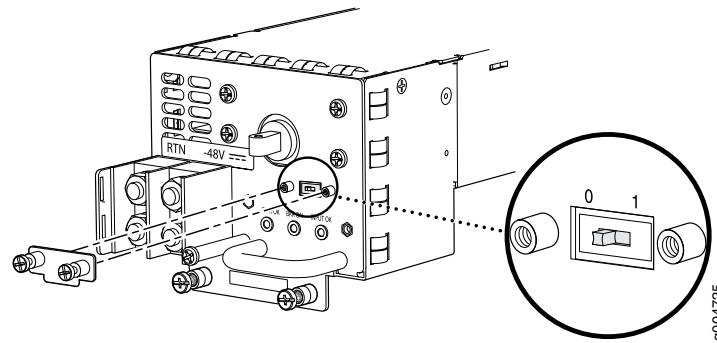

- Position – 0 indicates that only one AC or DC feed is provided.
- Position – 1 indicates that two AC or DC feeds are provided.

To check the DIP switch position:

1. Issue the **show chassis power** command and check to see how many feeds are connected. The following example shows there are two AC input feeds connected for PEM 0 and one AC input feed connected for PEM 1. This indicates that the DIP switch for PEM 0 is in position 1 and the DIP switch for PEM 1 is in position 0. These are the proper settings.

run show chassis power

```

PEM 0:
State: Online
AC input: OK (2 feed expected, 2 feed connected)
Capacity: 4100 W (maximum 4100 W)
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)

PEM 1:
State: Online
AC input: OK (1 feed expected, 1 feed connected)
Capacity: 1700 W (maximum 4100 W)
DC output: 969 W (zone 1, 17 A at 57 V, 57% of capacity)

```

2. Issue the **show chassis alarms** command to see if there are any active alarms on the DIP switch:

> show chassis alarms

```
4 alarms currently active
Alarm time Class Description 2013-01-11 14:48:26 UTC Minor PEM 0 Dipswitch 0
Feed Connection 2
```

3. If the **show chassis alarms** output shows an alarm on **Dipswitch**, issue the **show chassis power** command to check the DIP switch position.

run show chassis power

```
PEM 0:
State: Online
AC input: OK (1 feed expected, 2 feed connected)
Capacity: 4100 W (maximum 4100 W)
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)
```

In this example, the DIP switch is in the wrong position since there is one AC feed expected but two AC feeds are connected. Change the DIP switch to position 1. This should clear the alarm.



NOTE: Changing the DIP switch position does not impact traffic. However, it is always recommended to do so in a maintenance window.

- See Also**
- [MX240 AC Power Supply Description on page 42](#)
 - [MX240 DC Power Supply Description on page 48](#)
 - [Troubleshooting the MX240 Components on page 347](#)
 - [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [Replacing an MX240 DC Normal-Capacity Power Supply on page 315](#)

CHAPTER 6

Contacting Customer Support and Returning the Chassis or Components

- Contacting Customer Support on page 361
- Locating Component Serial Numbers on page 362
- Packing and Returning Components on page 372

Contacting Customer Support

You can contact Juniper Networks Technical Assistance Center (JTAC) 24 hours a day, 7 days a week in one of the following ways:

- On the Web, using the Service Request Manager link at:

<https://support.juniper.net/support/>

- By telephone:
 - From the US and Canada: 1-888-314-JTAC
 - From all other locations: 1-408-745-9500



NOTE: If contacting JTAC by telephone, enter your 12-digit service request number followed by the pound (#) key if this is an existing case, or press the star (*) key to be routed to the next available support engineer.

When requesting support from JTAC by telephone, be prepared to provide the following information:

- Your existing service request number, if you have one
- Details of the failure or problem
- Type of activity being performed on the device when the problem occurred
- Configuration data displayed by one or more **show** commands
- Your name, organization name, telephone number, fax number, and shipping address

The support representative validates your request and issues an RMA number for return of the component.

Locating Component Serial Numbers

- [Displaying MX240 Router Components and Serial Numbers on page 362](#)
- [MX240 Chassis Serial Number Label on page 363](#)
- [MX240 SCB Serial Number Label on page 363](#)
- [MX240 DPC Serial Number Label on page 364](#)
- [MX240 FPC Serial Number Label on page 365](#)
- [MX240 MIC Serial Number Label on page 366](#)
- [MX240 MPC Serial Number Label on page 368](#)
- [MX240 PIC Serial Number Label on page 369](#)
- [MX240 Power Supply Serial Number Label on page 369](#)
- [MX240 Routing Engine Serial Number Label on page 371](#)

Displaying MX240 Router Components and Serial Numbers

Before contacting Juniper Networks, Inc. to request a Return Materials Authorization (RMA), you must find the serial number on the router or component. To display all of the router components and their serial numbers, enter the following command-line interface (CLI) command:

```
user@host> show chassis hardware
```

```
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                               JN10C75C9AFC  MX240
Midplane      REV 01   710-021041   TR1500        MX240 Backplane
FPM Board     REV 01   710-017254   KD4019        Front Panel Display
PEM 0         Rev 02   740-017330   000326        PS 1.2-1.7kW; 100-240V
AC in
PEM 1         Rev 02   740-017330   000333        PS 1.2-1.7kW; 100-240V
AC in
Routing Engine 0 REV 06   740-013063   1000701796   RE-S-2000
Routing Engine 1
CB 0          REV 07   710-013385   KD1348        MX SCB
CB 1          REV 07   710-013385   JZ0029        MX SCB
FPC 1         REV 01   750-018124   JY9650        DPCE 4x 10GE R
CPU           REV 06   710-013713   JZ6625        DPC PMB
PIC 0         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
  Xcvr 0      REV 01   740-014279   KBC03VY      XFP-10G-LR
PIC 1         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
  Xcvr 0      REV 01   740-014279   KB602C5      XFP-10G-LR
PIC 2         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
  Xcvr 0      REV 01   740-014279   KB602C3      XFP-10G-LR
PIC 3         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
FPC 2         REV 01   750-018124   JY9642        DPCE 4x 10GE R
CPU           REV 06   710-013713   JY9337        DPC PMB
PIC 0         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
  Xcvr 0      REV 01   740-014279   KB602BQ      XFP-10G-LR
PIC 1         BUILTIN BUILTIN      1x 10GE(LAN/WAN)
  Xcvr 0      REV 01   740-014279   KB602BG      XFP-10G-LR
```

PIC 2		BUILTIN	BUILTIN	1x 10GE (LAN/WAN)
Xcvr 0	REV 01	740-014279	KBC03W1	XFP-10G-LR
PIC 3		BUILTIN	BUILTIN	1x 10GE (LAN/WAN)
Fan Tray 0	REV 01	710-021113	JS4641	MX240 Fan Tray

Most components also have a small rectangular serial number ID label (see [Figure 142 on page 363](#)) attached to the component body.


Figure 142: Serial Number ID Label



MX240 Chassis Serial Number Label

The chassis serial number is located on the side of the chassis (see [Figure 143 on page 363](#)).


Figure 143: MX240 Chassis Serial Number Label

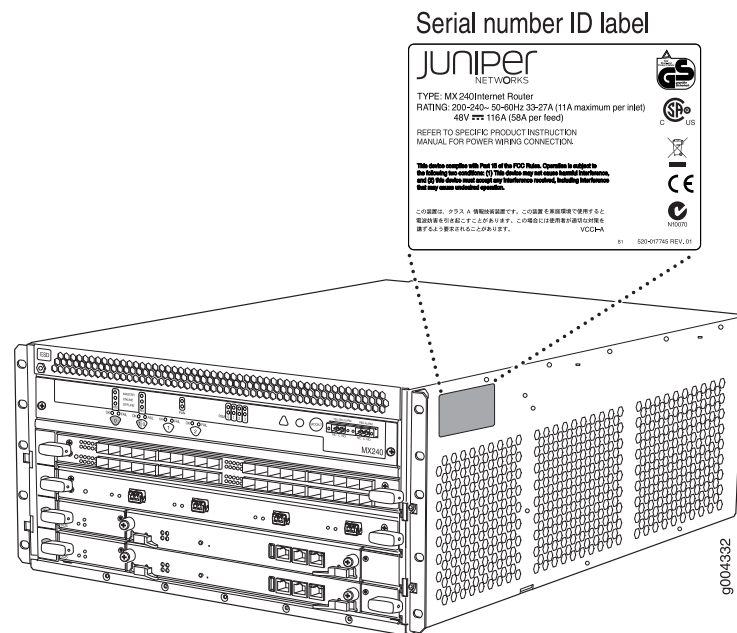

- See Also**
- [MX240 Chassis Description on page 30](#)
 - [MX240 Chassis Lifting Guidelines on page 382](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 SCB Serial Number Label

The serial number is located on the right side of the top of the SCB (see [Figure 144 on page 364](#)).

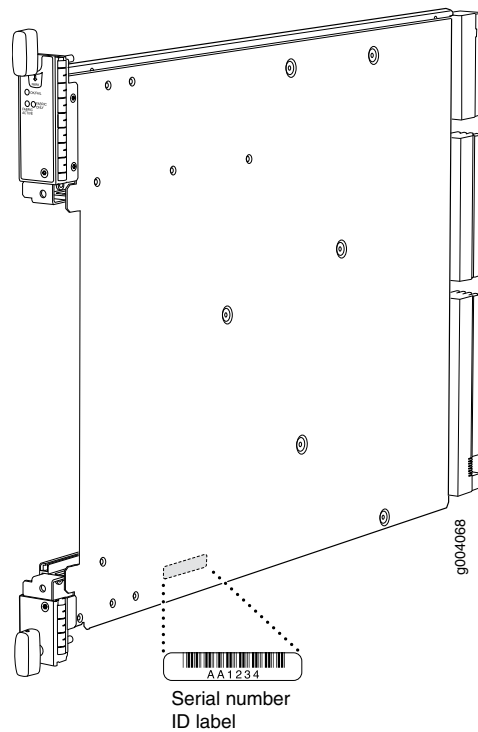
Figure 144: SCB Serial Number Label

- See Also**
- [MX240 SCB-MX Description](#)
 - [MX240 SCB LEDs](#)
 - [Removing an MX240 SCB on page 327](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 DPC Serial Number Label

The serial number label is located on the center of the right side of the DPC (see [Figure 145 on page 365](#)).


Figure 145: DPC Serial Number Label

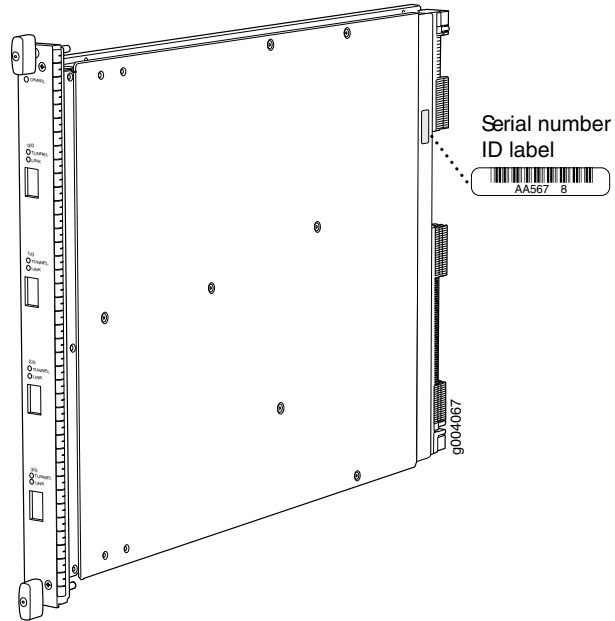

- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Troubleshooting the MX240 DPCs on page 350](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 FPC Serial Number Label

The serial number label is located on the right side of the FPC (see [Figure 146 on page 366](#)).

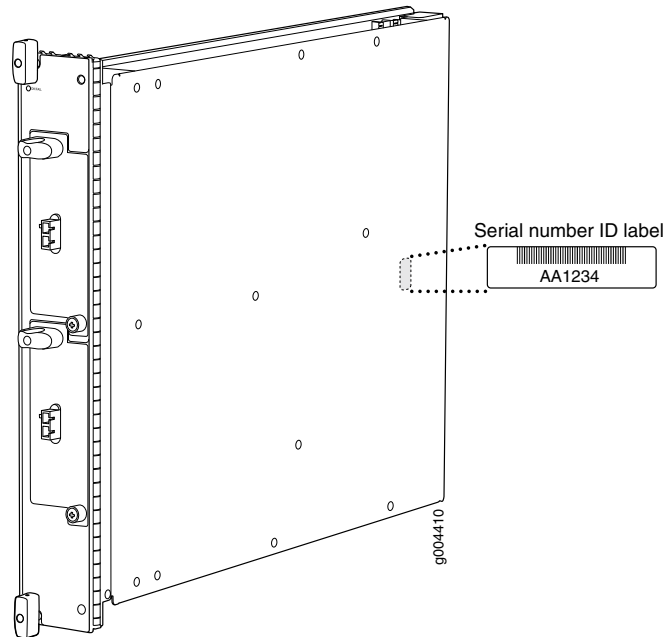Figure 146: FPC Serial Number Label

- See Also**
- [Replacing an MX240 FPC on page 269](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)
 - [Tools and Parts Required to Replace MX240 Hardware Components on page 219](#)

MX240 MIC Serial Number Label

The serial number label location varies per MIC (see [Figure 148 on page 367](#) and [Figure 149 on page 367](#)). The exact location may be slightly different on different MICs,

depending on the placement of components on the MIC board (see [Figure 147 on page 367](#), [Figure 148 on page 367](#), [Figure 149 on page 367](#), and [Figure 150 on page 367](#)).

Figure 147: 2-Port MIC Serial Number Label

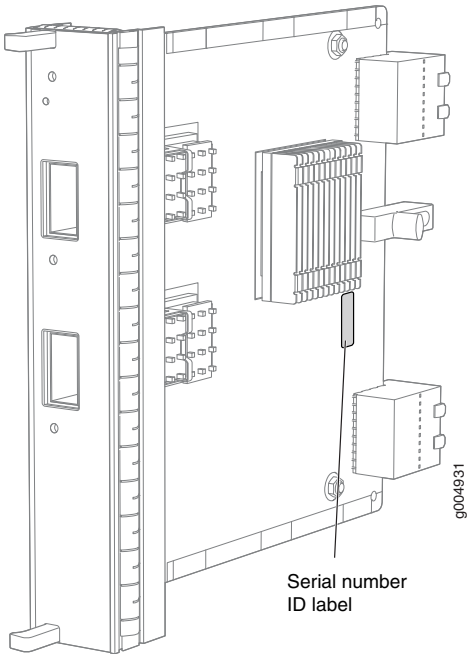


Figure 148: 4-Port MIC Serial Number Label

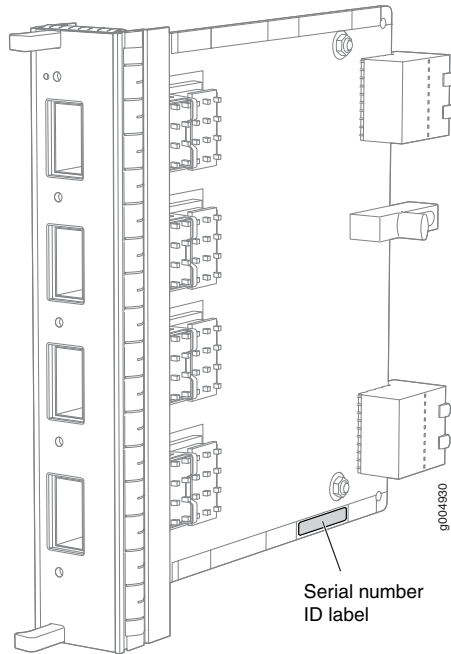


Figure 149: 20-Port MIC Serial Number Label


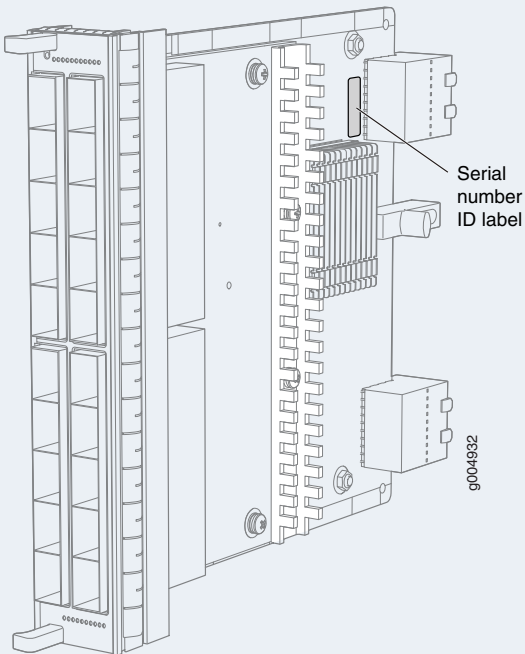


Figure 150: 40-Port MIC Serial Number Label

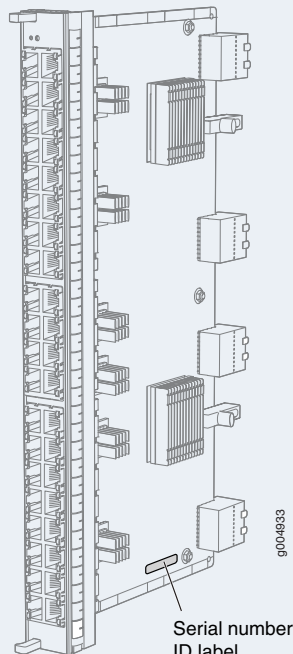


See Also • [Troubleshooting the MX240 MICs on page 354](#)

- [Displaying MX240 Router Components and Serial Numbers on page 362](#)
- [Contacting Customer Support on page 361](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 MPC Serial Number Label

The serial number label is near the connectors located on the left side of the MPC when it is oriented vertically (see [Figure 151 on page 368](#)).

Figure 151: MPC Serial Number Label

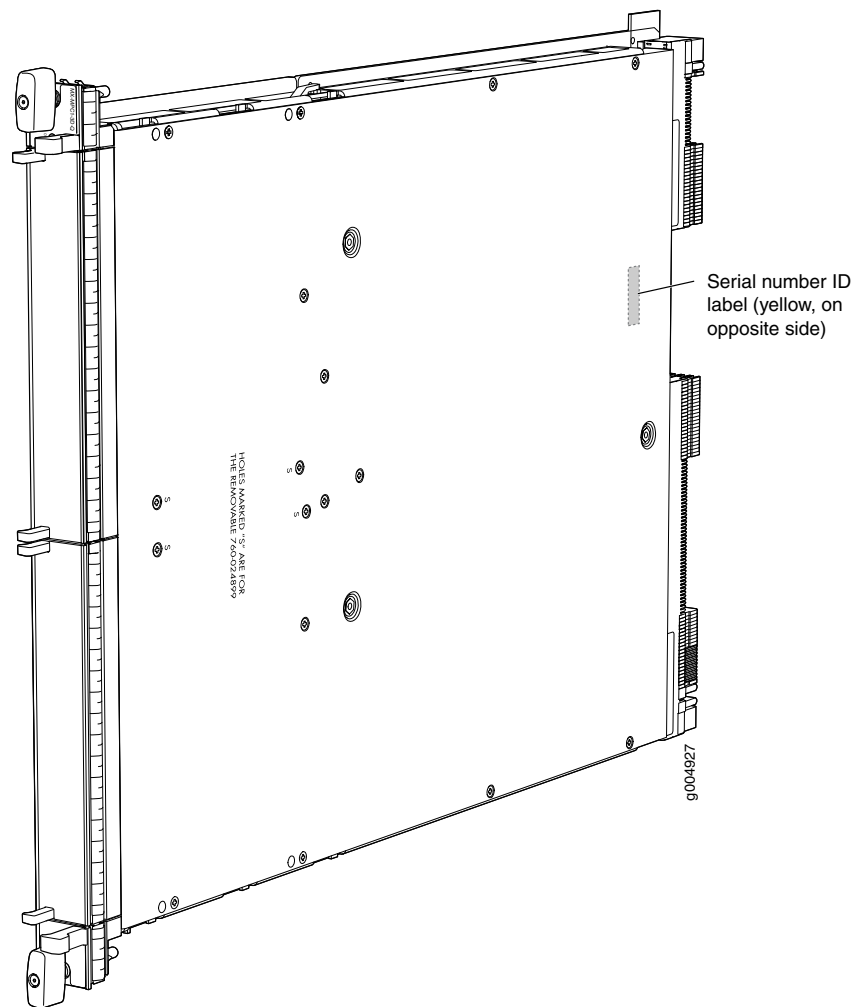


- See Also**
- [MX240 Dense Port Concentrator \(DPC\) Description on page 93](#)
 - [Troubleshooting the MX240 MPCs on page 354](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)

- [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 PIC Serial Number Label

The serial number label is located on the right side of the PIC (see [Figure 152 on page 369](#)), when the PIC is vertically oriented (as it would be installed in the router). The exact location may be slightly different on different PICs, depending on the placement of components on the PIC board.

Figure 152: PIC Serial Number Label

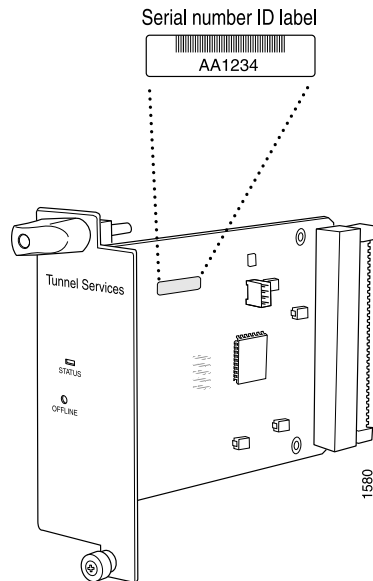

- See Also**
- [MX240 PIC Description on page 104](#)
 - [Replacing an MX240 PIC on page 289](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 Power Supply Serial Number Label

The serial number label is located on the top of the AC power supply (see [Figure 153 on page 370](#)).

The serial number label is located on the top of the DC power supply faceplate (see [Figure 154 on page 370](#)).

Figure 153: AC Power Supply Serial Number Label


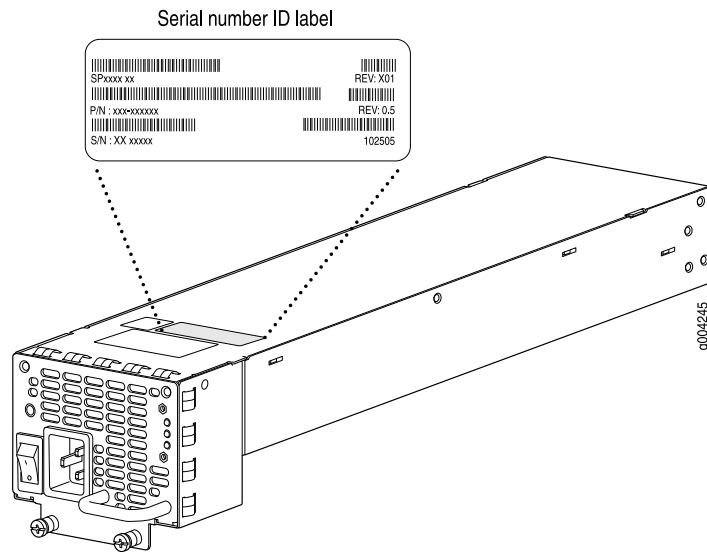


Figure 154: DC Power Supply Serial Number Label

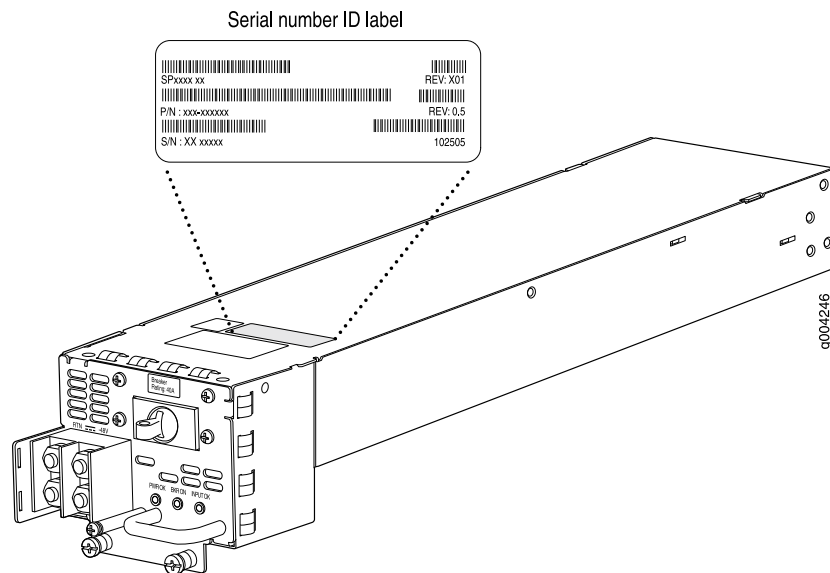

- See Also**
- [MX240 Power System Description on page 41](#)
 - [Replacing an MX240 AC Normal-Capacity Power Supply on page 311](#)
 - [Replacing an MX240 DC Normal-Capacity Power Supply on page 315](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

MX240 Routing Engine Serial Number Label

The serial number label is located on the left side of the top of the Routing Engine (see [Figure 155 on page 371](#) and [Figure 156 on page 371](#)).

Figure 155: Routing Engine Serial Number Label


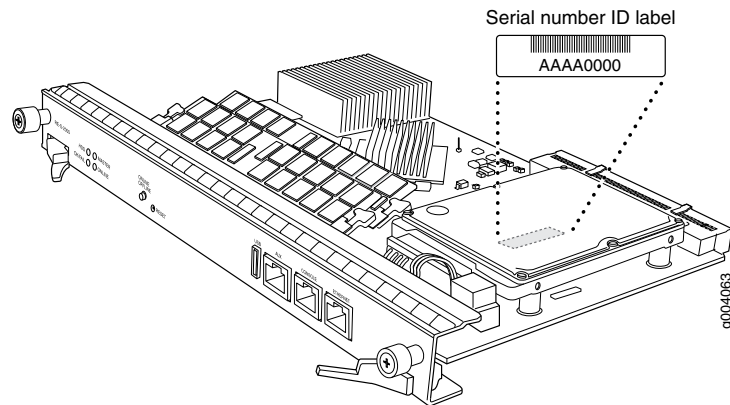


Figure 156: RE-S-X6-64G Routing Engine Serial Number Label

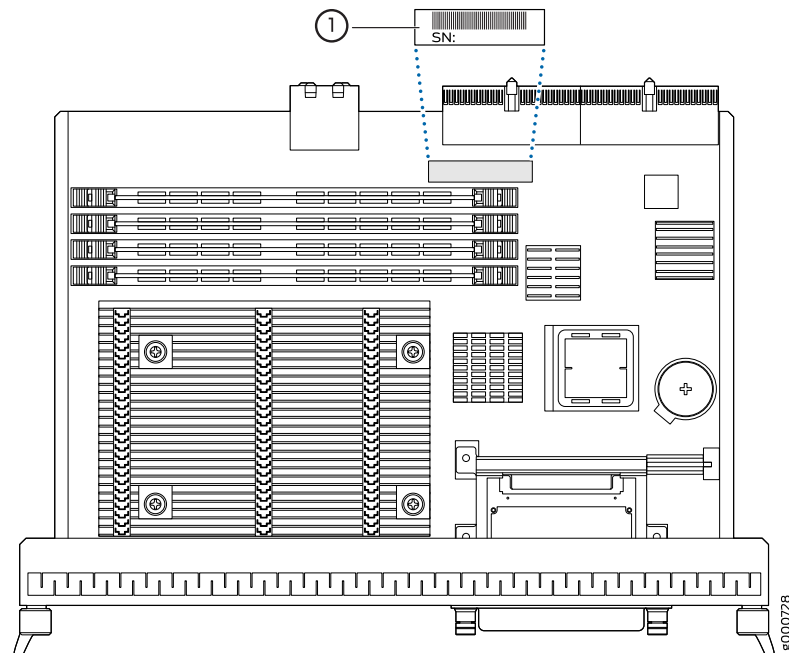

- See Also**
- [MX240 Routing Engine Description on page 59](#)
 - [Replacing an MX240 Routing Engine on page 230](#)
 - [Displaying MX240 Router Components and Serial Numbers on page 362](#)
 - [Contacting Customer Support on page 361](#)

- [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)

Packing and Returning Components

- [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)
- [Guidelines for Packing Hardware Components for Shipment on page 373](#)
- [Packing the MX240 Router for Shipment on page 373](#)

Returning a Hardware Component to Juniper Networks, Inc.

If a hardware component fails, please contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



NOTE: Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support webpage at <https://support.juniper.net/support/>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Service Request Manager link at <https://support.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
 - Part number and serial number of component
 - Your name, organization name, telephone number, and fax number
 - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the component for shipment.

Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure that they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



CAUTION: Do not stack any of the hardware components.

Packing the MX240 Router for Shipment

To pack the router for shipment:

1. Retrieve the shipping crate and packing materials in which the router was originally shipped. If you do not have these materials, contact your Juniper Networks representative about approved packaging materials.
2. On the console or other management device connected to the master Routing Engine, enter CLI operational mode and issue the following command to shut down the router software. (If two Routing Engines are installed, also issue the command on the backup Routing Engine.)

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.

For more information about the command, see *request system halt*.

3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Shut down power to the router by pressing the AC input switch or DC circuit breaker for all power supplies to the off (O) position.
5. Disconnect power from the router.
6. Remove the cables that connect to all external devices.
7. Remove all field replaceable units (FRUs) from the router.

8. Remove the router from the rack:
 - If you are using a mechanical lift, place the lift platform under the router, unscrew and remove the mounting screws from the rack, and move the router to the shipping crate.
 - If you are not using a mechanical lift and the router weight is fully supported by a shelf or another router, unscrew and remove the mounting screws from the rack. Three people can then lift the router and move it to the shipping crate.
 - If you are not using a mechanical lift and the router weight is not fully supported by a shelf or another router, three people should grasp the router while a fourth person unscrews and removes the mounting screws from the rack. The three lifters can then move the router to the shipping container.
9. Place the router in the shipping crate or onto the pallet. If on a pallet, bolt the router to the pallet.
10. Cover the router with an ESD bag and place the packing foam on top of and around the router.
11. Replace the accessory box on top of the packing foam.
12. Securely tape the box closed or place the crate cover over the router.
13. Write the RMA number on the exterior of the box to ensure proper tracking.

- See Also**
- [Powering Off the MX240 Router on page 206](#)
 - [Replacing Connections to MX240 Routing Engine Interface Ports on page 240](#)
 - [Disconnecting an MX240 AC Power Supply Cord on page 314](#)
 - [Disconnecting an MX240 DC Power Supply Cable on page 320](#)
 - [Preventing Electrostatic Discharge Damage to an MX240 Router on page 380](#)
 - [Contacting Customer Support on page 361](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 372](#)
 - [Tools and Parts Required to Replace MX240 Hardware Components on page 219](#)
 - [Guidelines for Packing Hardware Components for Shipment on page 373](#)

CHAPTER 7

Safety and Compliance Information

- General Safety Guidelines and Warnings on page 376
- Definitions of Safety Warning Levels on page 377
- Qualified Personnel Warning on page 378
- Fire Safety Requirements on page 379
- Warning Statement for Norway and Sweden on page 380
- Preventing Electrostatic Discharge Damage to an MX240 Router on page 380
- Installation Instructions Warning on page 381
- MX240 Chassis Lifting Guidelines on page 382
- Ramp Warning on page 383
- Rack-Mounting and Cabinet-Mounting Warnings on page 383
- Grounded Equipment Warning on page 387
- Laser and LED Safety Guidelines and Warnings on page 387
- Radiation from Open Port Apertures Warning on page 389
- Maintenance and Operational Safety Guidelines and Warnings on page 390
- General Electrical Safety Guidelines and Warnings on page 395
- Prevention of Electrostatic Discharge Damage on page 396
- AC Power Electrical Safety Guidelines on page 398
- AC Power Disconnection Warning on page 398
- MX240 DC Power Electrical Safety Guidelines on page 399
- DC Power Copper Conductors Warning on page 400
- DC Power Disconnection Warning on page 401
- DC Power Grounding Requirements and Warning on page 402
- DC Power Wiring Sequence Warning on page 403
- DC Power Wiring Terminations Warning on page 404
- Midplane Energy Hazard Warning on page 405
- Multiple Power Supplies Disconnection Warning on page 406
- Action to Take After an Electrical Accident on page 406

- [Site Electrical Wiring Guidelines for MX Series Routers on page 407](#)
- [Agency Approvals and Compliance Statements on page 407](#)

General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.
- Ensure that the separate protective earthing terminal provided on this device is permanently connected to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.
- Some parts of the chassis, including AC and DC power supply surfaces, power supply unit handles, SFB card handles, and fan tray handles might become hot. The following label provides the warning of the hot surfaces on the chassis:



- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

Definitions of Safety Warning Levels

The documentation uses the following levels of safety warnings (there are two *Warning* formats):



NOTE: You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.



CAUTION: You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.



WARNING: This symbol alerts you to the risk of personal injury from a laser.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

Qualified Personnel Warning



WARNING: Only trained and qualified personnel should install or replace the device.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

Fire Safety Requirements

In the event of a fire emergency, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

Warning Statement for Norway and Sweden



WARNING: The equipment must be connected to an earthed mains socket-outlet.

Advarsel Apparatet skal kobles til en jordet stikkontakt.

Varning! Apparaten skall anslutas till jordat nätuttag.

Preventing Electrostatic Discharge Damage to an MX240 Router

Many router hardware components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:


- Always use an ESD wrist strap or ankle strap, and make sure that it is in direct contact with your skin.



CAUTION: For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 through 10 Mohms.

- When handling any component that is removed from the chassis, make sure the equipment end of your ESD strap is attached to one of the ESD points on the chassis.
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see [Figure 157 on page 381](#)). If you are returning a component, place it in an electrostatic bag before packing it.

Figure 157: Placing a Component into an Electrostatic Bag

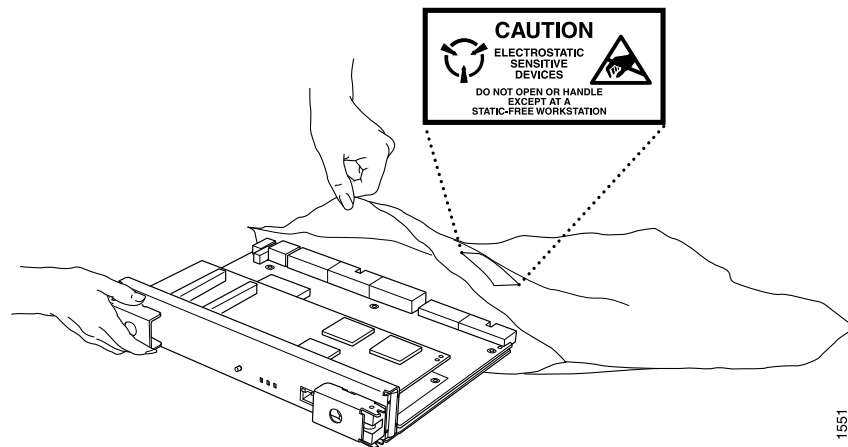

Related Documentation

- *General Safety Guidelines for Juniper Networks Devices*
- *General Safety Warnings for Juniper Networks Devices*
- *Fire Safety Requirements for Juniper Networks Devices*

Installation Instructions Warning



WARNING: Read the installation instructions before you connect the device to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

Attention Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

MX240 Chassis Lifting Guidelines

The weight of a fully configured chassis is about 128 lb (58.1 kg). Observe the following guidelines for lifting and moving the router:

- Before moving the router, read the guidelines in “[MX240 Site Preparation Checklist](#)” on [page 141](#) to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Do not attempt to lift a fully configured router by yourself. Using a mechanical lift to maneuver the router into a rack is recommended. If a lift cannot be used, a minimum of three people must lift the router, and you must remove components from the chassis before lifting.
- Before lifting or moving the router, disconnect all external cables.

To lift routing devices and components, use the following lifting guidelines:

- Up to 39.7 lbs (18 kg) 1 person lift.
- 39.7 lbs (18 kg) to 70.5 lbs (32 kg) 2 or more person lift.
- 70.5 lbs (32 kg) to 121.2 lbs (55 kg) 3 or more person lift.
- Above 121.2 lbs (55 kg) material handling systems (such as levers, slings, lifts and so on) must be used. When this is not practical, specially-trained persons or systems must be used (riggers or movers).
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

Related Documentation

- *General Safety Guidelines for Juniper Networks Devices*
- *General Safety Warnings for Juniper Networks Devices*
- [MX240 Site Preparation Checklist on page 141](#)
- [Removing Components from the MX240 Router Before Installing it without a Lift on page 184](#)
- [Installing the MX240 Chassis in the Rack Manually on page 189](#)
- *Installation Safety Warnings for Juniper Networks Devices*

Ramp Warning



WARNING: When installing the device, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

Rack-Mounting and Cabinet-Mounting Warnings

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



WARNING: To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The device must be installed in a rack that is secured to the building structure.
- The device should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting the device on a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel

blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar

de que o sistema possui um suporte estável. As seguintes diretrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, oerriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
 - Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
 - Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
 - Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.
-

Grounded Equipment Warning



WARNING: The device is intended to be grounded. During normal use, ensure that you have connected earth ground to the chassis.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.

Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

Laser and LED Safety Guidelines and Warnings

Juniper Networks devices are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per EN 60825-1 requirements.

Observe the following guidelines and warnings:

- [General Laser Safety Guidelines on page 388](#)
- [Class 1 Laser Product Warning on page 388](#)
- [Class 1 LED Product Warning on page 388](#)
- [Laser Beam Warning on page 389](#)

General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Class 1 Laser Product Warning



WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.

Avvertenza Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.

Class 1 LED Product Warning



WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.

Avvertenza Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.

Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

Advarsel Stirr eller se ikke direkte p stralen med optiske instrumenter.

Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

¡**Atención!** No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

Radiation from Open Port Apertures Warning



WARNING: Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

Maintenance and Operational Safety Guidelines and Warnings

While performing the maintenance activities for devices, observe the following guidelines and warnings:

- [Battery Handling Warning on page 391](#)
- [Jewelry Removal Warning on page 392](#)
- [Lightning Activity Warning on page 393](#)
- [Operating Temperature Warning on page 393](#)
- [Product Disposal Warning on page 395](#)

Battery Handling Warning



WARNING: Replacing a battery incorrectly might result in an explosion. Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Waarschuwing Er is ontploffingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

Advarsel Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los

objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledning. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.

Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature. To

prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

Waarschuwing Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

Varoitus Ettei Juniper Networks switch-sarjan reititin ylikuumentuusi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

Attention Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

Warnung Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

Avvertenza Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

Advarsel Unngå overoppheting av eventuelle rutere i Juniper Networks switch Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

Aviso Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

¡Atención! Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aberturas para ventilación.

Varning! Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen

inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this device must be handled according to all national laws and regulations.

Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

General Electrical Safety Guidelines and Warnings



WARNING: Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metallically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metallically to OSP wiring.



CAUTION: Before removing or installing components of a device, connect an electrostatic discharge (ESD) grounding strap to an ESD point and wrap and fasten the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the device.

- Install the device in compliance with the following local, national, and international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that grounding surfaces are cleaned and brought to a bright finish before grounding connections are made.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install equipment that appears to be damaged.

Prevention of Electrostatic Discharge Damage

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD wrist strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 158 on page 397](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.




WARNING: For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD wrist strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 158 on page 397](#)). If you are returning a component, place it in an antistatic bag before packing it.

Figure 158: Placing a Component into an Antistatic Bag

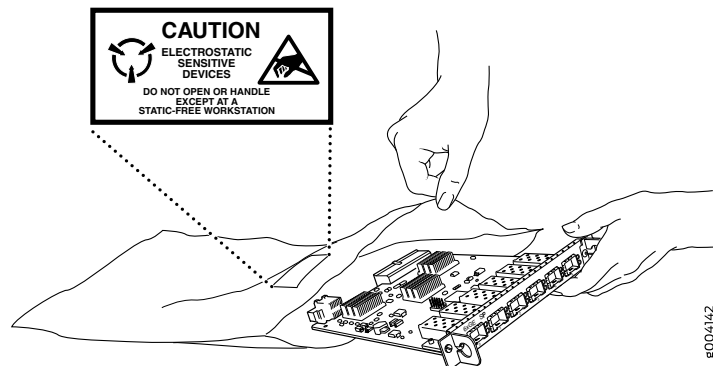

CAUTION: ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

AC Power Electrical Safety Guidelines



CAUTION: For devices with AC power supplies, an external surge protective device (SPD) must be used at the AC power source.

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:

“**CAUTION:** THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”

“**ATTENTION:** CET APPAREIL COMPORTE PLUS D'UN CORDON D'ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D'ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”

- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker (2-pole circuit breaker or 4-pole circuit breaker based on your device) rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

Power Cable Warning (Japanese)

WARNING: The attached power cable is only for this product. Do not use the cable for another product.

注意

付属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

907253

AC Power Disconnection Warning



WARNING: Before working on the device or near power supplies, unplug all the power cords from an AC-powered device.

Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

Varoitus Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut på vekselstrømsenheter.

Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

MX240 DC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to a DC-powered router:

- A DC-powered router is equipped with a DC terminal block that is rated for the power requirements of a maximally configured router. To supply sufficient power, terminate the DC input wiring on a facility DC source capable of supplying at least 33.3 A @ –48 VDC per input for each power supply. We recommend that the 48 VDC facility DC source should be equipped with a circuit breaker rated at 40 A (–48 VDC) minimum, or as required by local code.

Incorporate an easily accessible disconnect device into the facility wiring. In the United States and Canada, the 48 VDC facility should be equipped with a circuit breaker rated a minimum of 125% of the power provisioned for the input in accordance with the National Electrical Code in the US and the Canadian Electrical Code in Canada.

- Run two wires from the circuit breaker box to a source of 48 VDC. Use appropriate gauge wire to handle up to 40 A.

- Be sure to connect the ground wire or conduit to a solid office (earth) ground. A closed loop ring is recommended for terminating the ground conductor at the ground stud.
- A DC-powered router that is equipped with a DC terminal block is intended only for installation in a restricted access location. In the United States, a restricted access area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



NOTE: Primary overcurrent protection is provided by the building circuit breaker. This breaker should protect against excess currents, short circuits, and earth faults in accordance with NEC ANSI/NFPA70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.
- For personal safety, connect the green and yellow wire to safety (earth) ground at both the router and the supply side of the DC wiring.
- The marked input voltage of -48 VDC for a DC-powered router is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the router is a positive ground system, you must connect the positive lead to the terminal labeled **RTN**, the negative lead to the terminal labeled **-48 V**, and the earth ground to the chassis grounding points.

Related Documentation

- *DC Power Electrical Safety Warnings for Juniper Networks Devices*

DC Power Copper Conductors Warning



WARNING: Use copper conductors only.

Waarschuwing Gebruik alleen koperen geleiders.

Varoitus Käytä vain kuparijohtimia.

Attention Utilisez uniquement des conducteurs en cuivre.

Warnung Verwenden Sie ausschließlich Kupferleiter.

Avvertenza Usate unicamente dei conduttori di rame.

Advarsel Bruk bare kobberledninger.

Aviso Utilize apenas fios condutores de cobre.

¡Atención! Emplee sólo conductores de cobre.

Varning! Använd endast ledare av koppar.

DC Power Disconnection Warning



WARNING: Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

Waarschuwing Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhandel van de stroomverbreker met plakband in de UIT positie vast.

Varoitus Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

Attention Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifiez que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

Warnung Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

Avvertenza Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

Advarsel Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

Aviso Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

¡Atención! Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

Varning! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.

DC Power Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



WARNING: When you install the device, the ground connection must always be made first and disconnected last.

Waarschuwing Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

Varoitus Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

Attention Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

Warnung Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

Avvertenza In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

Advarsel Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

Aviso Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

¡Atención! Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

Varning! Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

DC Power Wiring Sequence Warning



WARNING: Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then -48 V to -48 V . When disconnecting power, the proper wiring sequence is -48 V to -48 V , +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

Waarschuwing De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en -48 V naar -48 V . De juiste bedradingsvolgorde losgemaakt is en -48 naar -48 V , +RTN naar +RTN, aarde naar aarde.

Varoitus Oikea yhdistettävä kytkentäjäjestys on maajohto maajohtoon, +RTN varten +RTN, -48 V varten -48 V . Oikea irrotettava kytkentäjäjestys on -48 V varten -48 V , +RTN varten +RTN, maajohto maajohtoon.

Attention Câblez l'alimentation CC En utilisant les crochets appropriés à l'extrémité de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis -48 V à -48 V . En débranchant la puissance, l'ordre approprié de câblage est -48 V à -48 V , +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

Warnung Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlusssequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann -48V zu -48V . Die richtige Sequenz zum Abtrennen der Stromversorgung ist -48V zu -48V , +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

Avvertenza Mostra la morsettiera dell'alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

Advarsel Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, –48 V til – 48 V. Riktig frakoples tilkoplingssekvens er –48 V til – 48 V, +RTN til +RTN, jord til jord.

Aviso Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se muele para moler, +RTN a +RTN, entonces –48 V a –48 V. Al desconectar potencia, la secuencia apropiada del cableado es –48 V a –48 V, +RTN a +RTN, entonces molió para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

Atenção! Wire a fonte de alimentação de DC Usando os talões apropriados na extremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então –48 V a –48 V. Ao desconectar a potência, a seqüência apropriada da fiação é –48 V a –48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

Varning! Korrekt kopplingssekvens ar jord till jord, +RTN till +RTN, –48 V till –48 V. Korrekt kopplas kopplingssekvens ar –48 V till –48 V, +RTN till +RTN, jord till jord.

DC Power Wiring Terminations Warning



WARNING: When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

Waarschuwing Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Varoitus Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitääntä, esimerkiksi suljettua silmukkaa tai kourumaista liitääntä, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitääntöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

Attention Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la

taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

Warnung Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

Avvertenza Quando occorre usare trecce, usare connettori omologati, come quelli a occhio o a forcella con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

Advarsel Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og ledaren.

Aviso Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

¡Atención! Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Varning! När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av slutet eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

Midplane Energy Hazard Warning



WARNING: High levels of electrical energy are distributed across the midplane. Be careful not to contact the midplane connectors, or any component connected to the midplane, with any metallic object while servicing components.

Multiple Power Supplies Disconnection Warning



WARNING: The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

Waarschuwing Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

Varoitus Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

Attention Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

Warnung Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

Avvertenza Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

Advarsel Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

Aviso Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

¡Atención! Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

Varning! Denna enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

Action to Take After an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.

3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

Site Electrical Wiring Guidelines for MX Series Routers

- [Distance Limitations for Signaling on page 407](#)
- [Radio Frequency Interference on page 407](#)
- [Electromagnetic Compatibility on page 407](#)

Distance Limitations for Signaling

Improperly installed wires can emit radio interference. In addition, the potential for damage from lightning strikes increases if wires exceed recommended distances or if wires pass between buildings. The electromagnetic pulse (EMP) caused by lightning can damage unshielded conductors and destroy electronic devices. If your site has previously experienced such problems, you might want to consult experts in electrical surge suppression and shielding.

Radio Frequency Interference

You can reduce or eliminate the emission of radio frequency interference (RFI) from your site wiring by using twisted-pair cable with a good distribution of grounding conductors. If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

Electromagnetic Compatibility

If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, you might want to seek expert advice. Strong sources of electromagnetic interference (EMI) can destroy the signal drivers and receivers in the router and conduct power surges over the lines into the equipment, resulting in an electrical hazard. It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.



WARNING: The intrabuilding port(s) of the equipment or subassembly is suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding port(s) of the equipment or subassembly **MUST NOT** be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE, Issue 4) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metallically to OSP wiring.

Agency Approvals and Compliance Statements

- [Agency Approvals for MX Series Routers on page 408](#)
- [Compliance Statements for EMC Requirements on page 409](#)

- [Compliance Statements for Environmental Requirements on page 410](#)
- [Compliance Statements for NEBS on page 410](#)
- [Compliance Statements for Acoustic Noise for the MX240 Router on page 410](#)

Agency Approvals for MX Series Routers

The routers comply with the following standards:

- Safety
 - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
 - CSA 60950-1 Safety of Information Technology Equipment
 - UL 60950-1 Safety of Information Technology Equipment
 - EN 60950-1 Safety of Information Technology Equipment
 - IEC 60950-1 Safety of Information Technology Equipment (with country deviations)
- EMC/EMI/ETSI
 - AS/NZS CISPR22 (Australia/New Zealand)
 - EN55022 Class A European Radiated Emissions
 - FCC Part 15 Class A USA Radiated Emissions
 - VCCI Class A Japanese Radiated Emissions
 - ETSI EN-300386 V1.3.3 Telecommunication Network Equipment. Electromagnetic Compatibility Requirements
- Immunity
 - EN 55024 +A1+A2 Information Technology Equipment Immunity Characteristics
 - EN-61000-3-2 Power Line Harmonics
 - EN-61000-3-3 +A1 +A2 +A3 Power Line Voltage Fluctuations and Flicker
 - EN-61000-4-2 +A1 +A2 Electrostatic Discharge
 - EN-61000-4-3 +A1+A2 Radiated Immunity
 - EN-61000-4-4 Electrical Fast Transients
 - EN-61000-4-5 Surge
 - EN-61000-4-6 Immunity to Conducted Disturbances
 - EN-61000-4-11 Voltage Dips and Sags

The router is designed to comply with the following standards:

- NEBS
 - GR-1089-Core: EMC and Electrical Safety for Network Telecommunications Equipment

- SR-3580 NEBS Criteria Levels (Level 3 Compliance)
- GR-63-Core: NEBS, Physical Protection

- See Also**
- *MX240 Compliance Statements for NEBS*
 - *Compliance Statements for EMC Requirements for the MX240 Router*
 - *Compliance Statements for Environmental Requirements on page 410*
 - *Compliance Statements for Acoustic Noise for the MX240 Router on page 410*

Compliance Statements for EMC Requirements

- Canada on page 409
- European Community on page 409
- Israel on page 409
- Japan on page 409
- United States on page 410


Canada

CAN ICES-3 (A)/NMB-3(A)

European Community


This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.

Israel

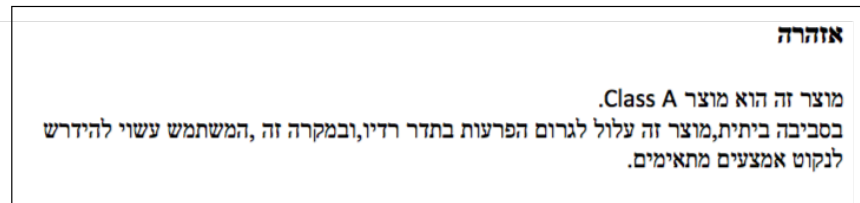

Translation from Hebrew—Warning: This product is Class A. In residential environments, the product might cause radio interference, and in such a situation, the user might be required to take adequate measures.

Japan

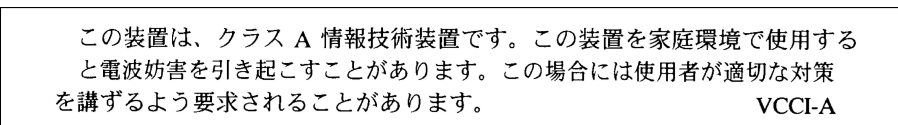

The preceding translates as follows:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this product is used near a radio or television receiver in a domestic environment, it might cause radio interference. Install and use the equipment according to the instruction manual. VCCI-A.

United States

The hardware equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Compliance Statements for Environmental Requirements

Batteries in this product are not based on mercury, lead, or cadmium substances. The batteries used in this product are in compliance with EU Directives 91/157/EEC, 93/86/EEC, and 98/101/EEC. The product documentation includes instructional information about the proper method of reclamation and recycling.

Compliance Statements for NEBS

- The equipment is suitable for installation as part of the Common Bonding Network (CBN).
- The equipment is suitable for installation in locations where the National Electrical Code (NEC) applies.
- The battery return connection is to be treated as an isolated DC return (that is, DC-I), as defined in GR-1089-CORE.
- You must provision a readily accessible device outside of the equipment to disconnect power. The device must also be rated based on local electrical code practice.

Compliance Statements for Acoustic Noise for the MX240 Router

The router complies with NEBS Level 3 requirements:

- GR-63-CORE: NEBS, Physical Protection
- GR-1089-CORE: EMC and Electrical Safety for Network Telecommunications Equipment

- See Also**
- [Agency Approvals for MX Series Routers on page 408](#)
 - [MX240 Compliance Statements for NEBS](#)
 - [Compliance Statements for EMC Requirements for the MX240 Router](#)
 - [Compliance Statements for Environmental Requirements on page 410](#)