

## **TRUCK-MOUNTED CRANES**

### HA SERIES, THE PERFECT SOLUTION FOR APPLICATIONS WITH LIGHT VEHICLES

HA 22

HYVA

ú

TELESCOPIC CRANE - COMPACT, LIGHT AND EASY TO USE HA 22

hyva.com





#### **ACCESSORIES**

- Radio remote control
- Oil tank
- Supplementary element activation
- Winch
- Manual extensions
- Electro-hydraulic powerpack
- Extra cross beams
- Tubular base for crane stabilizers (single or double)
- Manually opening stabilizers
- Manually opening and turning outriggers
- "Green" Oil\*




Electro-hydraulic powerpack






#### **STABILITY CONTROL SYSTEMS (CE)**

#### **HM System**

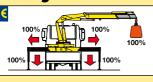

The HM System integrated in the load limiting device checks the stabilizers' positions. Only when all beams are fully open and all stabilizers are on the ground the crane can operate and lift loads.

#### HML System 🚺

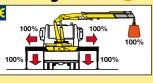

The HML System integrated in the load limiting device checks the stabilizers' positions. Only when all beams are fully open and all stabilizers are on the ground the crane can operate and lift loads.

### HL System 🚺

ground. Mode B - stabilizers on the

around only.

 $(\mathbf{A})$ The HL system checks the stabilizers' positions and the truck's inclination According to the beams' posi-11 tions, the system allows two operating modes: Mode A - all beams fully open and all stabilizers feet on the

Trad

HA 22 🚯



In mode A: the load limiting device stops the crane when

the crane reaches 100% of the nominal capacity.


In mode B: a dedicated sensor

Compact dimensions and reduced weight

Proportional speed control of any single movement

Stabilizer control by radio

# **TECHNICAL INFORMATION HA 22**

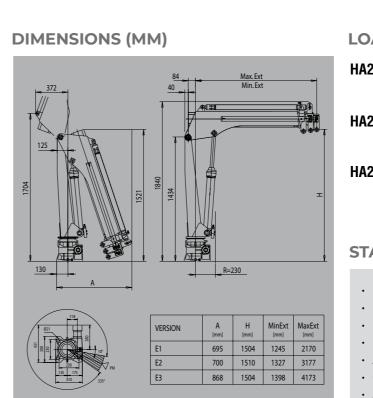

- Thanks to their extremely compact dimensions all cranes in the HA series are projected to be mounted on small equipment such as: car trailer, tracked vehicle, pickup, small trucks and stationary mounting;
- Control panel with customised position in order to always have the more ergonomic position;
- Hexagonal extensions with sliding pads allow to always have rigid and aligned boom.


#### **TECHNICAL SPECIFICATIONS**

		HA 22 E1	HA 22 E2	HA 22 E3
Lifting moment	tm	2,00	1,96	1,74
Max. vertical reach	m	3,56	4,51	5,45
Slewing angle	0	335	335	335
Slewing time	s/180°	10	10	10
Max. working heel	0	3	3	3
Working pressure	bar	160	160	150
Oil tank capacity	I	17,5	17,5	17,5
Max. oil flow	l/m	8	8	8
Standard crane weight (without stabilizers)	kg	216	243	265





LOAD DIAGRAMS

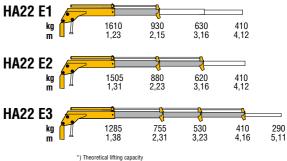

#### **STANDARD FEATURES**

- Designed in accordance with EN12999
- Design class: HC1-HD4
- Hexagonal section extensions
- Flanged valve
- Assembly kit
- Control panel with customizable position
- ABS protective cover on controls
- Worm and gear rotation
- Fittings SAE-JIC
- Sliding pads on telescopic extensions
- Self-lubricating bushings
- Independent telescopic cylinders
- Light indicator for correct stabilizer stowing (CE)
- Mechanical rotation limitation (CE)
- Swivel stabilizer foot



Tipping Solutions | Container Handling | Waste Handling | Cranes

110 countries +3,500 employees 20,000 customers +30 subsidiaries 12 production facilities

Hyva is a leading provider of innovative and highly efficient transport solutions for commercial vehicles used in transport, construction, mining, materials handling and environmental service industries.

Founded in 1979 in the Netherlands, the company has a global presence with more than 30 wholly owned subsidiaries, extraordinary service coverage and 12 manufacturing facilities in Brazil, China, Europe and India.



Deat, beschpuors are solely at the discretions bename with applicable and perturned with applicable and perturned and or private sole accessories described herein are only examples. Some applications are solely at the discretion of HVVA and are always in compliance with applicable and perturned safety standards. To obtain updated data, descriptions, and illustrations, contact the manufacturer or your reseller. Cranes manufactured and/or marketed by HVVA. HVVA is not responsible for the special applications depicted. Crane applications and accessories described herein are only examples. Some applications and equipment shown may not be approved for use in CE countries or other areas. It is the installer's responsibility to ensure that the crane is applied correctly, and that its application, installation, and accessories described herein areas. It is the installer's responsibility to ensure that the crane is applied correctly, and that its application, installation, and accessories described herein areas applications and accessories described herein areas.