

Please note that Cypress is an Infineon Technologies Company.

The document following this cover page is marked as "Cypress" document as this is the company that originally developed the product. Please note that Infineon will continue to offer the product to new and existing customers as part of the Infineon product portfolio.

Continuity of document content

The fact that Infineon offers the following product as part of the Infineon product portfolio does not lead to any changes to this document. Future revisions will occur when appropriate, and any changes will be set out on the document history page.

Continuity of ordering part numbers

Infineon continues to support existing part numbers. Please continue to use the ordering part numbers listed in the datasheet for ordering.



HX2VL[™] Development Kit Guide

Doc. # 001-73960 Rev. *C

Cypress Semiconductor 198 Champion Court San Jose, CA 95134-1709 www.cypress.com



Copyrights

© Cypress Semiconductor Corporation, 2012-2018. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PUR-POSE. No computing device can be absolutely secure. Therefore, despite security measures implemented in Cypress hardware or software products, Cypress does not assume any liability arising out of any security breach, such as unauthorized access to or use of a Cypress product. In addition, the products described in these materials may contain design defects or errors known as errata which may cause the product to deviate from published specifications. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

Contents

1.



| Getting | Started | 4 |
|---------|--|----|
| 1.1 | Kit Contents | .4 |
| | 1.1.1 CY4607 | 4 |
| | 1.1.2 CY4607M | 4 |
| | 1.1.3 CY4608 | 4 |
| | 1.1.4 CY4608M | 4 |
| 1.2 | HX2VL (CY7C65642/32/34) | 5 |
| 1.3 | Host Controller Hardware and Software | 5 |
| 1.4 | Set Up the HX2VL CY4608/CY4608M Hardware | 5 |
| 1.5 | Set Up the HX2VL CY4607/CY4607M Hardware | |
| 1.6 | Additional Resources | .7 |

Revision History

1. Getting Started



The CY4607, CY4607M, CY4608, and CY4608M HX2VL[™] Development Kits (DVK) display the functionality of Cypress's latest USB 2.0 high-speed hubs. This document describes how to use the CY4607, CY4607M, CY4608, and CY4608M Cypress HX2VL development kits and discusses the configuration options that HX2VL provides. CY4607/CY4608 are CY7C65632-based 4-port single transaction translator (TT) hub DVKs; the CY4607M/CY4608M are CY7C65642-based 4-port multi TT hub DVKs.

1.1 Kit Contents

1.1.1 CY4607

The CY4607 HX2VL Development Kit includes:

- CY7C65632 48-TQFP package based USB 2.0 4-port hub board
- 5 VDC, 2.5 A wall power supply
- USB cable (A-B)
- Quick start guide

1.1.2 CY4607M

The CY4607M HX2VL Development Kit includes:

- CY7C65642 48-TQFP package based USB 2.0 4-port multi-TT hub board
- 5 VDC, 2.5 A wall power supply
- USB cable (A-B)
- Quick start guide

1.1.3 CY4608

The CY4608 HX2VL Development Kit includes:

- CY7C65632 28-QFN package based USB 2.0 4-port hub board
- 5 VDC, 2.5 A wall power supply
- USB cable (A-B)
- Quick start guide

1.1.4 CY4608M

The CY4608M HX2VL Development Kit includes:

- CY7C65642 28-QFN package based USB 2.0 4-port multi-TT hub board
- 5 VDC, 2.5 A wall power supply
- USB cable (A-B)
- Quick start guide



1.2 HX2VL (CY7C65642/32/34)

HX2VL is Cypress's next generation family of high-performance, ultra low-power USB2.0 hub controllers. Cypress HX2VL has integrated external components such as a 5 V to 3.3 V regulator and pull-up/pull-down resistors. It provides the option of configuring through SPI/I2C EEPROM or GPIO settings reducing the overall bill of materials.

HX2VL portfolio has two and four port, single and multiple TT options, and is capable of supporting both self-powered and bus-powered hub designs. It is also available in space saving 48-pin (7×7 mm) TQFP and 28-pin (5×5 mm) QFN packages.

1.3 Host Controller Hardware and Software

Latest PCs are pre-configured with high-speed USB support. All major operating systems come with in-built hub (driver) support. Therefore, you can start working with the HX2VL right away.


Some host controllers obtained from third-party vendors, may have drivers with the add-in card. Contact your supplier for more information.

1.4 Set Up the HX2VL CY4608/CY4608M Hardware

Due to the hot-plug nature of USB, hardware setup is easy.

 Figure 1-1 shows the CY4608M, based on the 28-QFN of CY7C65642; CY4608 is based on 28-QFN of CY7C65632. Determine if the hub design is a bus-powered or self-powered hub. A bus-powered hub does not require any change.

Figure 1-1. CY4608M

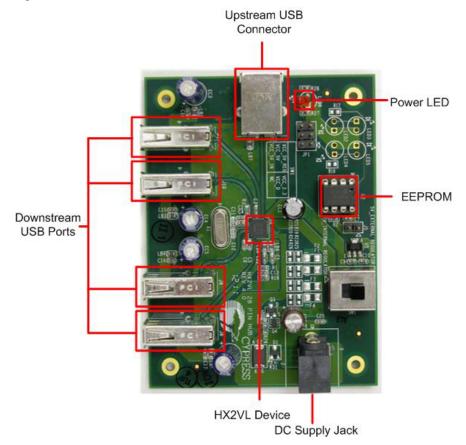



- For a self-powered hub, plug the wall mounted power supply (provided) into an AC power receptacle providing power in the range, 100 V–240 V, 50 or 60 Hz. Connect the power supply's plug (5 V) to the hub's 'DC SUPPLY' jack.
- 3. Determine if the hub design will operate with internal regulator or external regulator and set the switch SW1 accordingly.
- 4. To enable I²C EEPROM, set J5 (place jumper).
- 5. The Blaster utility is used for in-system programming of I²C EEPROM (using USB requests). It is available as part of the DVK after installation, at the following location:

```
CY4608: C:\Cypress\USB\CY4608-HX2VL\1.0\Software
```

CY4608M: C:\Cypress\USB\CY4608M-HX2VL\1.0\Software

Note The path may vary based on installation.

- 6. To connect to the PC, plug a USB A-B cable (provided) into the hub's 'UP STREAM' connector. Plug the other end of the cable into one of the PC's host controller ports. If the hub is plugged into a Full-Speed port on the host controller, the hub will operate at full speed.
- 7. The hub is a 4-port hub. It is now ready for any Low-Speed, Full-Speed, or High-Speed devices to be plugged into any and all of the ports.

1.5 Set Up the HX2VL CY4607/CY4607M Hardware

Due to the hot-plug nature of USB, hardware setup is easy.

 Figure 1-2 shows the CY4607M, based on the 48-TQFP of CY7C65642; CY4607 is based on 48-TQFP of CY7C65632. Determine if the hub design is a bus-powered or self-powered hub. A bus-powered hub does not require any change.

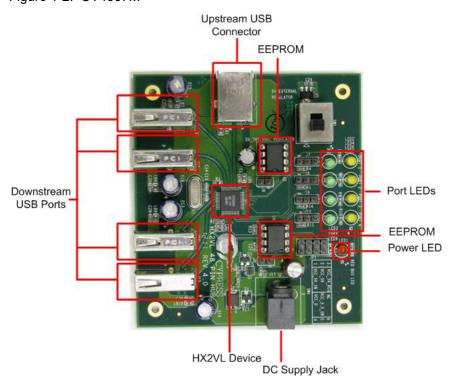


Figure 1-2. CY4607M



- For self-powered hub, plug the wall mounted power supply (provided) into an AC power receptacle providing power in the range, 100 V-240 V, 50 or 60 Hz. Connect the power supply's plug (5 V) to the hub's 'DC SUP-PLY' jack.
- 3. Determine if the hub design will operate with internal regulator or external regulator and set the switch SW1 accordingly.
- 4. Determine if the hub will operate with I²C EEPROM or SPI EEPROM and set J5 or J6 (place jumper to enable the corresponding EEPROM) accordingly.
- 5. When SPI EEPROM is used, J7 and J8 should be in position 2-3.
- 6. The Blaster utility is used for in-system programming of I²C EEPROM (using USB requests). It is available as part of the DVK after installation, at the following location:

CY4607: C:\Cypress\USB\CY4607-HX2VL\1.0\Software CY4607M: C:\Cypress\USB\CY4607M-HX2VL\1.0\Software Note The path may vary based on installation.

- 7. Determine the removable ports in the design and set J7, J8, J9, and J10 (place jumper in position 1-2 to configure the port as a fixed port, position 2-3 to use the green LED).
- 8. The hub is a 4-port hub. Each port in the hub has two associated LEDs. The green LED indicates that the port is enabled. The amber LED indicates that the port has an exception condition.
- 9. To connect to the PC, plug a USB A-B cable (provided) into the hub's 'UP STREAM' connector. Plug the other end of the cable into one of the PC's host controller ports. If the hub is plugged into a Full-Speed port on the host controller, the hub will operate at full speed.
- 10. The hub is now ready for any Low-Speed, Full-Speed, or High-Speed devices to be plugged into any and all of the ports.

1.6 Additional Resources

- HX2VL CY7C65632 Datasheet
- HX2VL CY7C65642 Datasheet
- AN69025: Schematic Review Checklist for HX2VL
- AN72332: HX2VL PCB Design Recommendation
- http://www.cypress.com/go/CY4607
- http://www.cypress.com/go/CY4608
- http://www.cypress.com/go/CY4607M
- http://www.cypress.com/go/CY4608M

Revision History



Document Revision History

| Document Title: HX2VL™ Development Kit Guide | | | | | | |
|--|---------|------------|---------------------|---|--|--|
| Document Number: 001-73960 | | | | | | |
| Revision | ECN# | Issue Date | Origin of Change | Description of Change | | |
| ** | 3435222 | 02/27/2012 | AASI / PDAV | New user guide for CY4607/CY4608. | | |
| *A | 3592024 | 04/18/2012 | AASI | Added CY4607M and CY4608M related information in all instances across the document. | | |
| *В | 4681240 | 03/09/2015 | HBM | No technical updates. | | |
| | | | | Completing Sunset Review. | | |
| *C | 6106850 | 03/22/2018 | HBM | Updated to new template. | | |
| | | | | Completing Sunset Review. | | |