



## User Manual for Pull-Up TableTop Screen

---




**Optoma Asia Corporation**  
5F., No 108, Minchiuan Rd., Xindian City, Taipei 231  
Tel: 886-2-2218-2380  
Fax: 886-2-2218-2313  
www.optoma.com.tw

**Optoma USA**  
3178 Laurelview Court  
Fremont, CA 94538  
Tel: 510-897-8600  
Fax: 510-897-8601  
www.optomausa.com

**Optoma Canada**  
2420 Meadowpine Blvd Suite 105  
Mississauga, ON L5N 6S2  
Tel: 905-285-0685  
Fax: 905-285-0748  
www.optoma.ca

**Optoma Europe Ltd.**  
42 Caxton Way  
The Watford Business Park  
Watford Hertfordshire WD18 8QZ UK  
Tel: +44 (0) 1923 691 800  
Fax: +44 (0) 1923 691 888  
www.optoma.co.uk

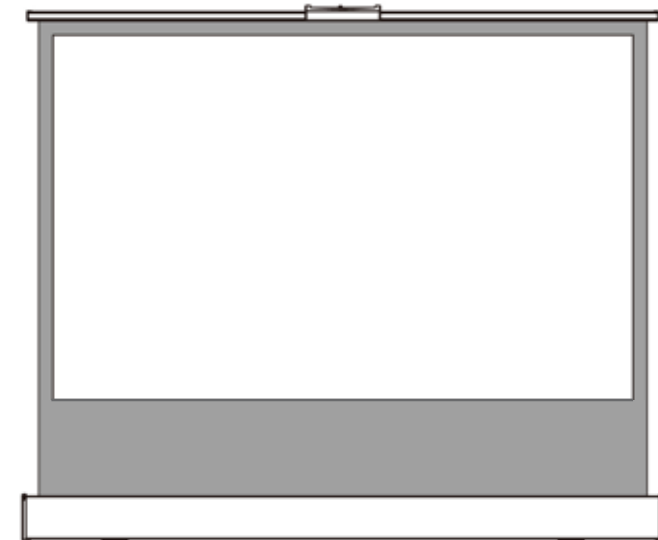

**Model: DP-9046MWL**


---

Thank you for purchasing a projection screen.  
Before use, please read instructions carefully. After installation, keep instructions for future reference.

## Specifications

Format	Model	Specification (In)	Viewing area		Screen dimension		Screen Black Border		Net weight (kg)
			W (mm)	H (mm)	L (mm)	A (mm)	B2 (mm)	B3 (mm)	
16:9	DP-9046MWL	46	1016	572	1124	900	220	25	2.8

Note: Sizes and specifications are subject to change at any time. Refer to actual product for exact measurements. The tolerance for L is  $\pm 5$ mm.

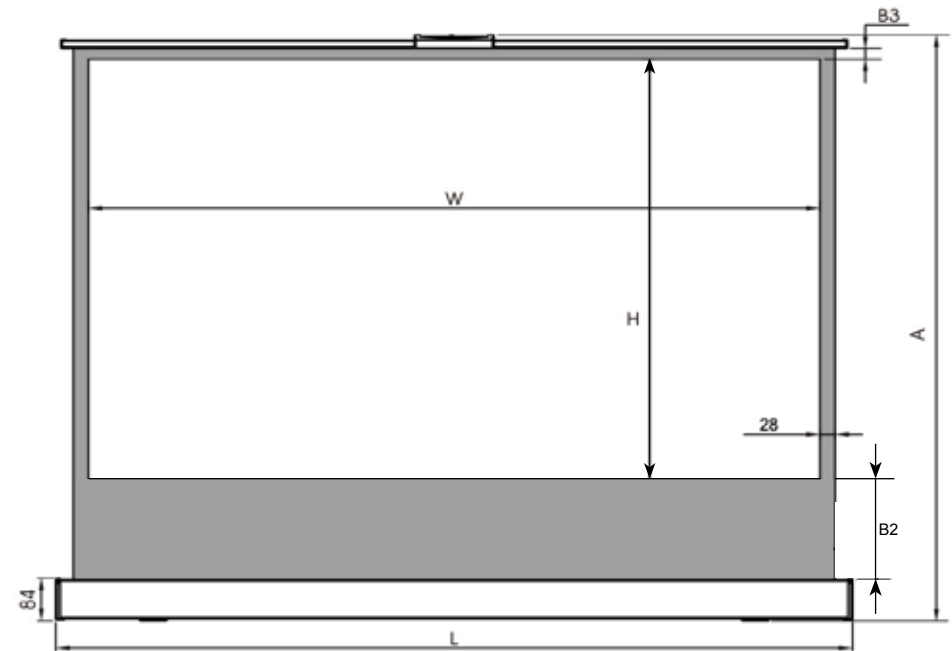

## Note


The surface of the screen is designed for optimal performance when properly maintained. Any damage to the surface will affect image quality.

### Caution

- Please do not shake the screen.



Do not

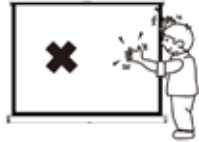

- Please do not use any chemicals or cleaning agents to clean the screen. The chemical agents and corrosive elements may cause unevenness on the projection coating.




Do not



- Please do not mark the screen surface.



Do not

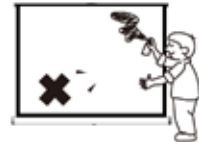

- Please do not pull or retract the screen with too much force.



Do not



### Maintenance

- If the screen needs to be cleaned, please use a dry-cloth or soft duster and clean gently. If more cleaning is needed, use a soft-cloth with water.
- For dust build-up, a soft-duster or brush can be gently used.



### Location

- Please keep the screen away from direct sunlight, dust and moisture. Avoid using in strong winds.



The surface of the screen is treated and dried before packaging. If there is any lingering odour, please air out as it will go away.



### Caution

- Please contact your local dealer for repairing and replacing. Please contact us if you have any questions. Avoid taking apart the fixture yourself.





Please do not take apart



## Description

### Illustration

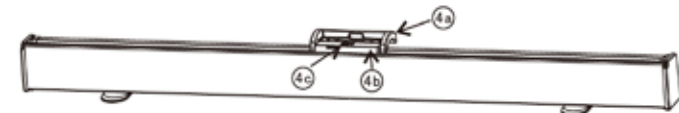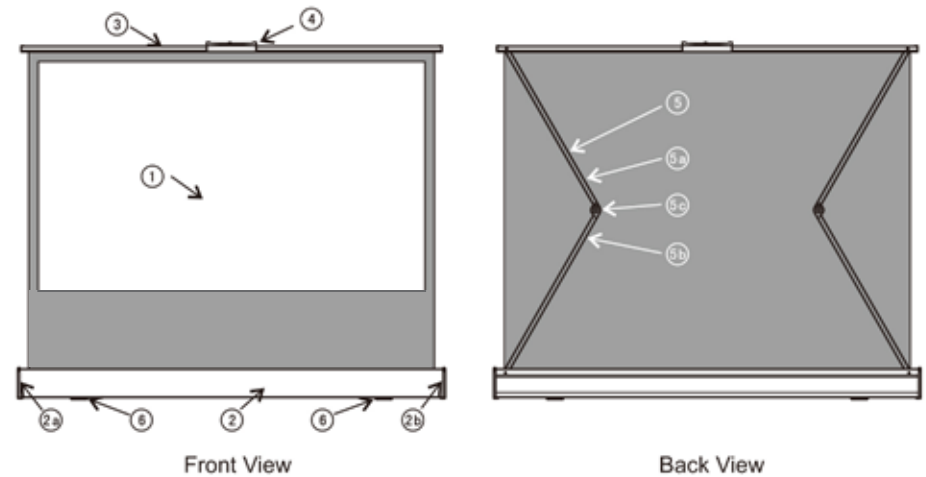

### Part name

①	Screen Fabric	④a	Locking Mechanism	
②	Casing	⑤	Support Arm	
	②a	Left End Cap	②b	Up Support Arm
	②b	Right End Cap	⑤a	Down Support Arm
③	Top Cover/Rod	⑤b	Joint	
④	Handle Assembly	⑥	Leg Support	
	④a	Handle		
	④b	Handle Base		

## Operation

When using and retracting the screen, please watch your finger to avoid injury.



1. Position the screen facing to projector at a suitable distance.



Facing to projector

2. Turn the leg support out by 90 degrees




**Warning: Please be sure to extent the leg support out when using this screen. Otherwise, the screen will drop down and cause damage.**

3. Push the button of locking mechanism to unlock the screen, and pull the screen up.

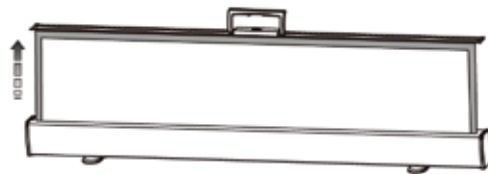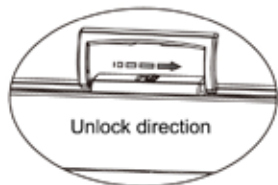


## Operation


4. Lift up the handle or push down the handle to set the screen at the desired height

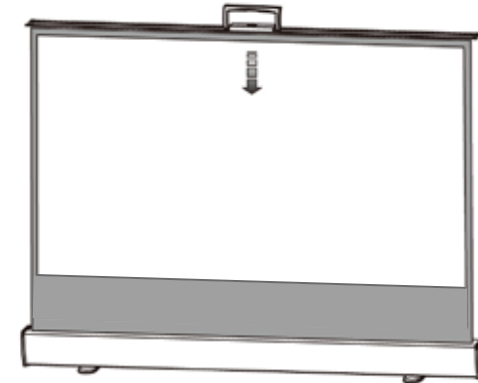

5. When finish using, push down the handle base to retract the screen till the locking mechanism joint together.

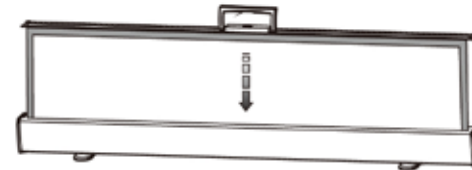

6. Please make sure the screen is well locked by the locking mechanism before lifting.

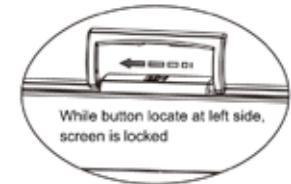

7. Please turn the leg support into the casing before lifting.



## Trouble Shooting

In case screen slide down due to the poor support of support arms, please tighten the screens at the support arm joint.