


900210-10: PIM Shield Threaded Rod Kit, 3/8" x 2" Lg (Sold in packages of 10)

**STEP 1**

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

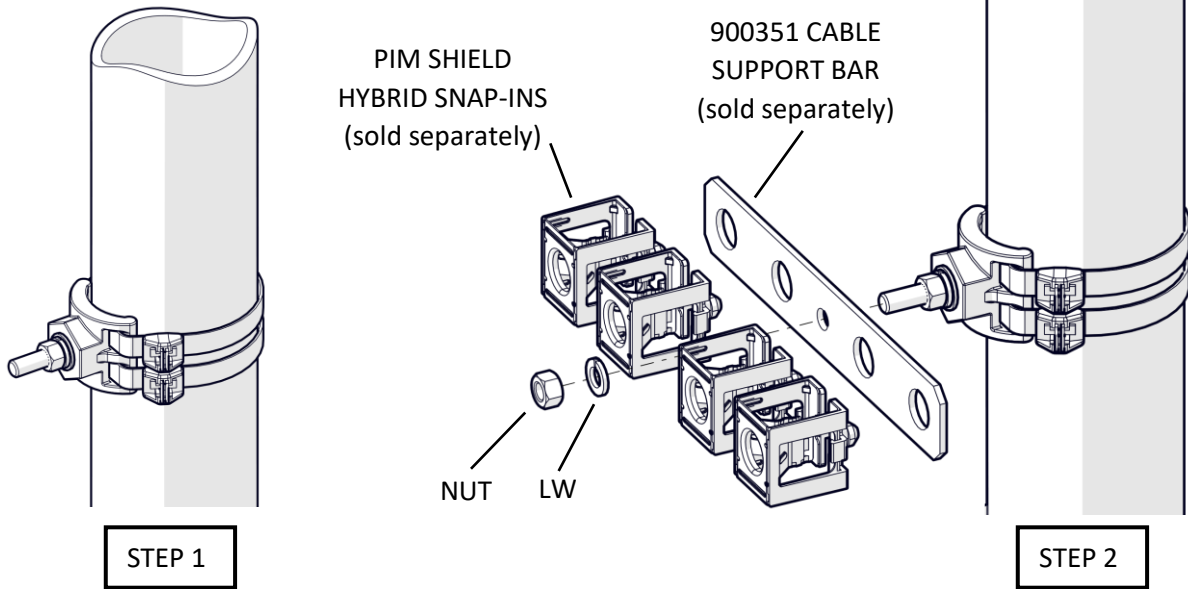

**STEP 2**


Install Cable Support Bar with hardware as shown (Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washers supplied with kit), then attach hybrid snap-in support(s) (sold-separately).

900210-10: PIM Shield Threaded Rod Kit, 3/8" x 2" Lg (Sold in packages of 10)

**STEP 1**

Attach Threaded Rod to 900209-10: PIM Shield Cable Support Base (sold separately).

(Refer to instructions included with 900209-10 for this step)

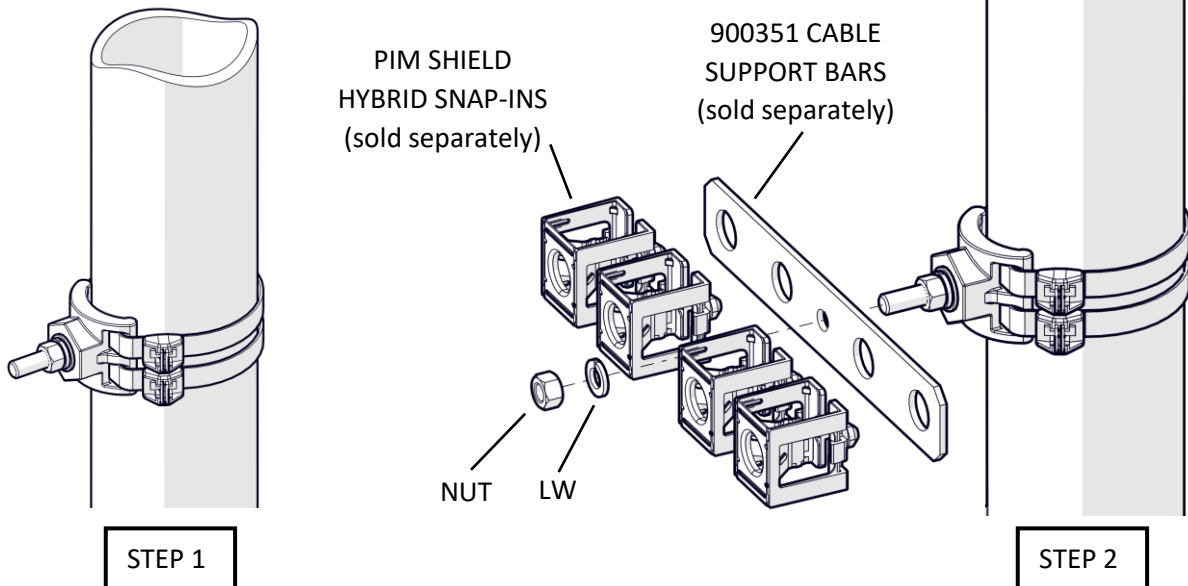

**STEP 2**

Install Cable Support Bar with hardware as shown (Torque hardware to 10 Ft-lb, ConcealFab Tool PN: 900053) (Note: Spare washers supplied with kit), then attach hybrid snap-in support(s) (sold-separately).