




Assembly Instructions

1. Thoroughly clean any machining oils from threads on steel shaft and aluminum ball
2. Apply a permanent thread locking compound to threads (recommend Loctite ® Thread Locker 271 Red™)
3. Use smooth pliers to hold aluminum ball and 2.5mm hex driver to tighten assembly

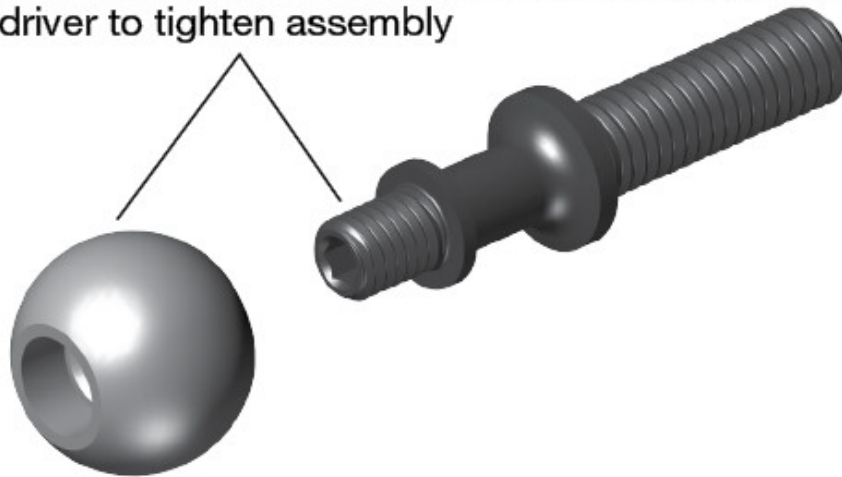

Product page:

https://www.associatedelectrics.com/factoryteam/parts/details/81068-ASC81068-ft_aluminum_pillow_balls/