





- 1. Position the box between the seats and ensure the armrests do not interfere with the lid
- 2. Fasten the box to the cab floor using the provided #10 self-drilling screws
- 3. If the cab's floor slopes down to the front, also install the front mounting bracket
- 4. (Optional) Bolt the box to the headboard using the provided 1/4-20 screws and nuts

NOTE: The Front Mounting Bracket is not required for cab floors that are level. It can be used in vehicles with cab floors that have a drop ranging between 0.50" and 1.50"

8	N/A	1	Keys (taped inside of cab organizer)
7	N/A	1	Green 12" File Folder
6	642015		#10 x 1" Hex Plated Self Drill Screw
5	642054	4	1/4-20 Nyloc Flanged Nut - Zinc
4	642062		1/4"-20 x 5/8" Pan Head Bolt - Zinc
3	041020		Cargo-Cube Cab Organizer - Front Mounting Bracket
2	049010	1	Cab Organizer- Innner Tray
1	049001	1	Cargo-Cube Cab Organizer Box 21 Asm.
#	PART NO.	QTY.	DESCRIPTION

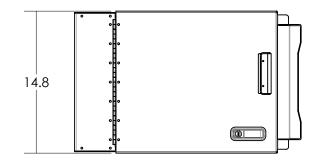

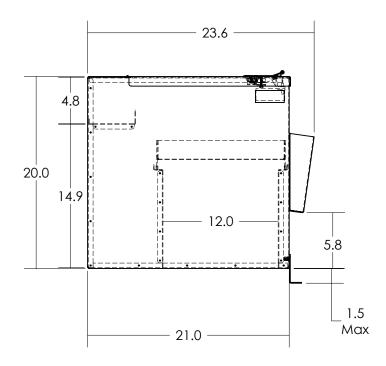

Description Cargo-Cube Cab Organizer Box 21 Rev. Weight Material 040001 23.61 Lbs. .08 Smooth Alum. PROPRIETARY AND CONFIDENTIAL SIZE Date THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF JAM TRUCK BODIES. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF JAM TRUCK BODIES IS PROHIBITED. 6/24/2018 Drawn By. J. Chauvin 7541 Chapman Ave Unit B Garden Grove, Ca 92841 SCALE: 1:10

5

3

2