


2005-09 GM NP273

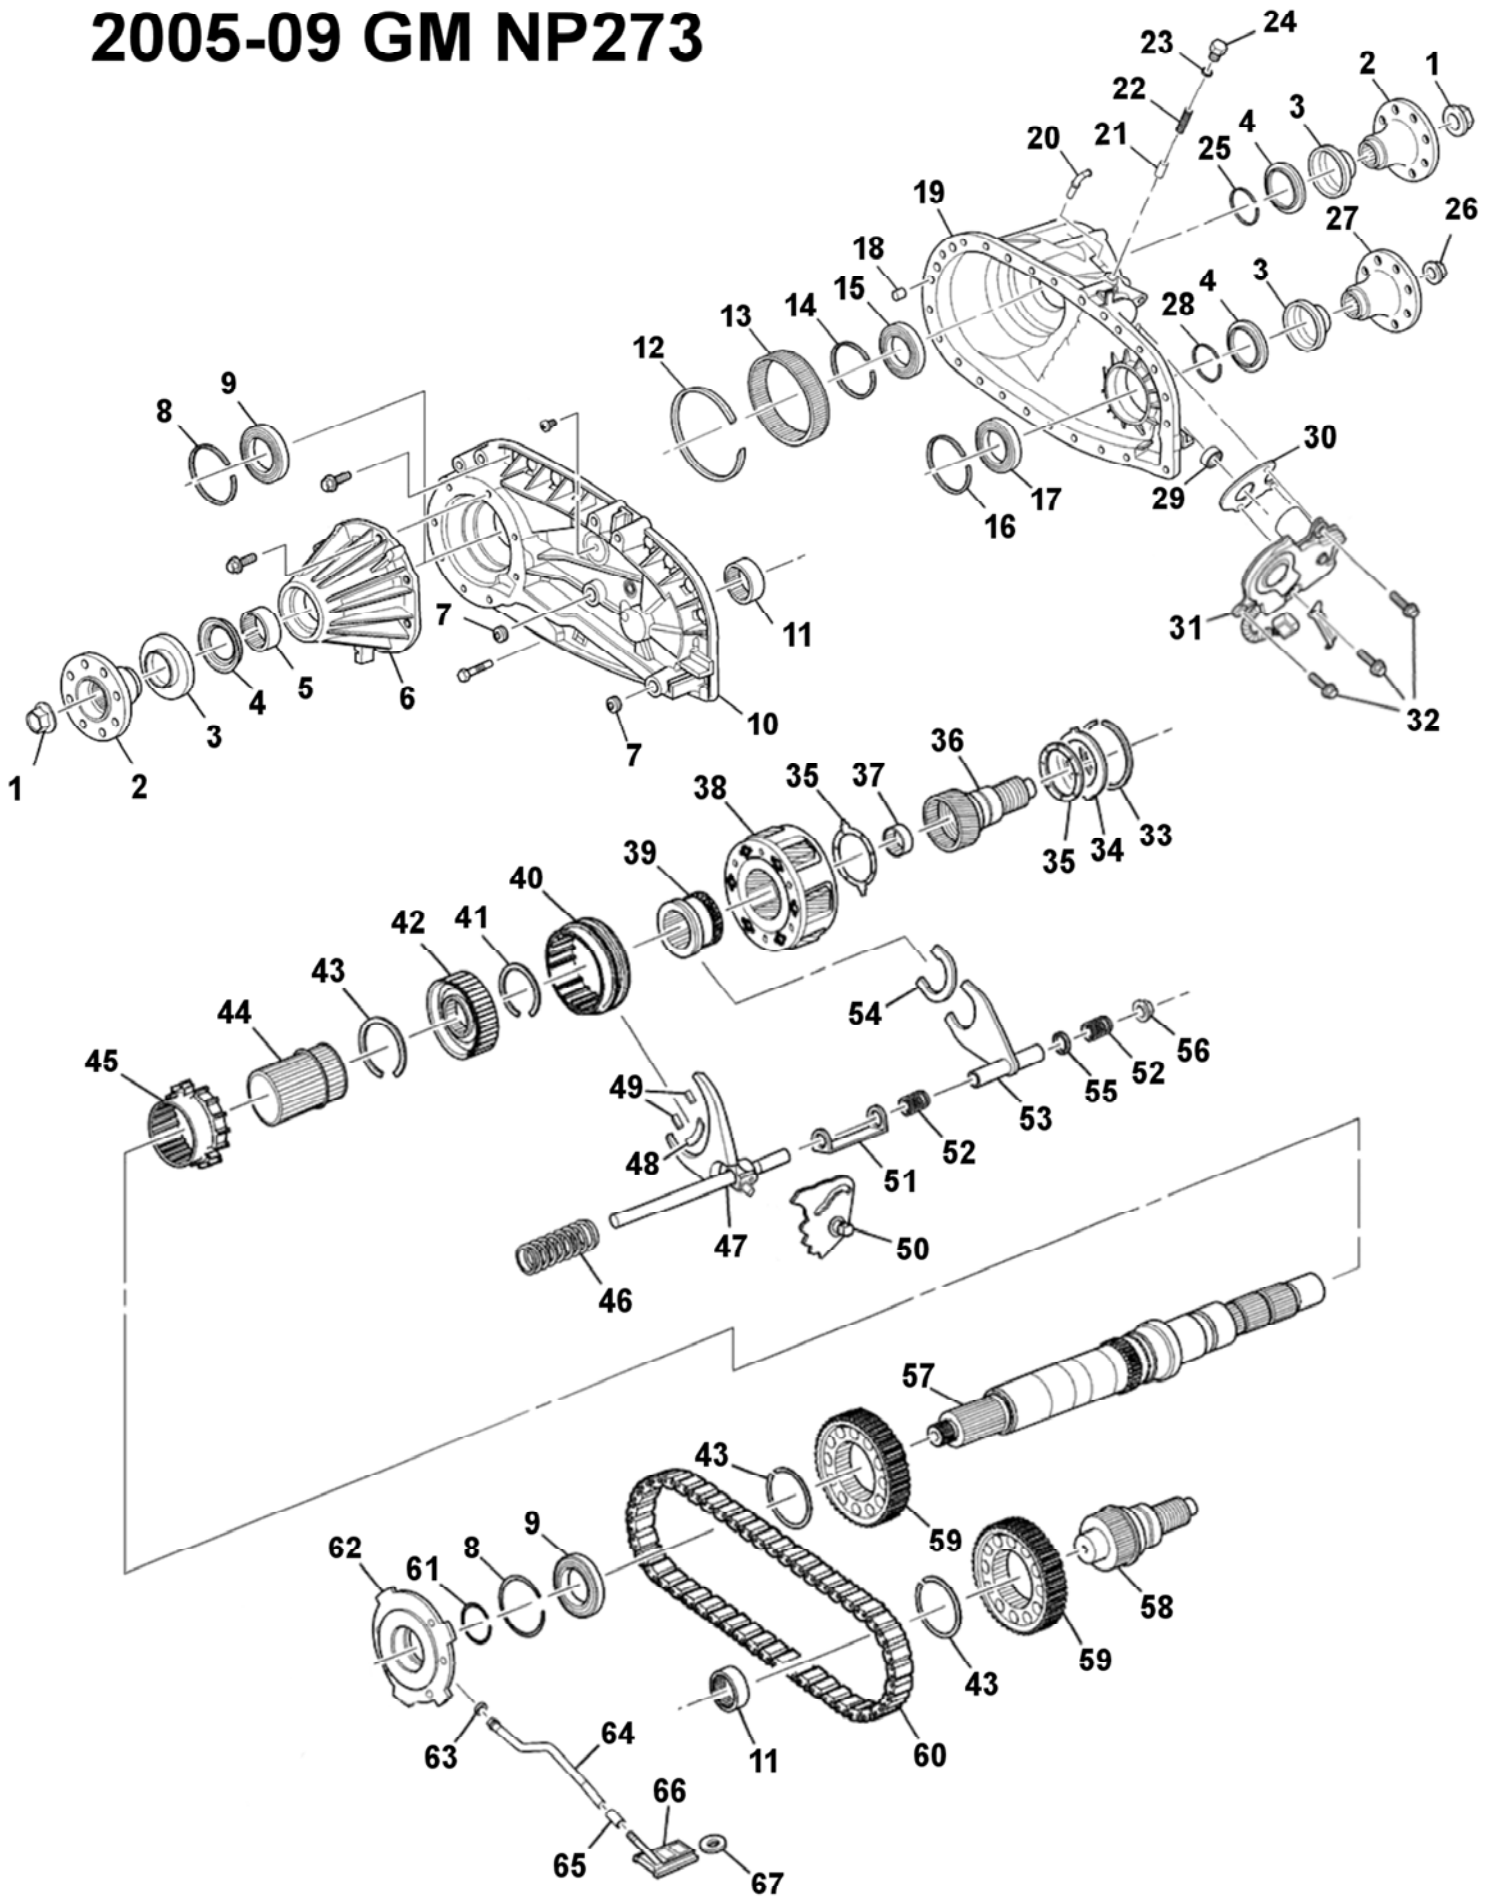

2005-09 GM - NP273

Item #	Description	Application	Notes	NV part #	GM Part#	ZBAG Part#
1.	Input/Rear output yoke nut				89059187	Call
2.	Input/Rear output yoke			51891	19177368	Call
3.	Yoke dust shield			51676	19177369	Call
4.	Input/output seals			52746	89059645	CR24288
5.	Rear output yoke needle bearing					B3416
6.	Tail housing			51332	89059633	Call
7.	Drain/fill plug			51412	89059626	Call
8.	Rear mainshaft bearing to case snap ring			26551	89059194	Call
9.	Rear mainshaft bearing			45781	89059212	6212
10.	Rear case half			45083	89059208	Call
11.	Front output rear bearing					SCE2416
12.	Annulus gear to case snap ring			13863	14037953	Call
13.	Annulus gear					Call
14.	Input bearing to case snap ring			24291	89059183	Call
15.	Input bearing			45782	89059213	6211
16.	Front output bearing to case snap ring			24324	89059185	Call
17.	Front output front bearing			45780	12384993	6011
18.	Case half dowel pin			25583	88935651	Call
19.	Front case half			45072	89059206	Call
20.	Vent tube			51411	89059625	Call
21.	Detent plunger			16754	15633556	Call
22.	Detent spring			17174	15636639	Call
23.	Detent plug O-ring			15715	12386154	Call
24.	Detent plug			22511	12547642	Call
25.	Input bearing to shaft snap ring			97977	89059216	Call
26.	Front output yoke nut				14037991	Call
27.	Front output yoke			51415	19177370	Call
28.	Front output bearing to shaft snap ring			15207	14037974	Call
29.	Shift shaft needle bearing/seal			22440	12547464	GM12547464
30.	Shift motor gasket			41288	12384973	Call
31.	Shift motor			48056	88962312	UMM2263
32.	Shift motor bolts				25624810	Call
33.	Planetary snap ring			16243	15547397	Call
34.	Planetary lock plate			17483	15664905	GM15664905
35.	Planetary thrust washer			27135	12470959	NP5012367AA
36.	Input shaft			45055	89059205	Call
37.	Input pocket bearing			42244	89059200	DB74707
38.	Planetary gear assembly			17869	12547997	NP4797030
39.	High/low range hub			38304	89059209	38304
40.	Mode sleeve			17823	12546931	17823
41.	Mode hub snap ring			44716	88962316	Call
42.	Mode hub			45661	89059629	Call
43.	Drive/driven sprocket snap ring			13877	89059176	Call
44.	Drive sprocket hub					Call
45.	Drive sprocket hub clutch gear			45952	19207758	Call
46.	Mode fork return spring			25556	89059191	Call
47.	Mode fork			24262	89059177	24262
48.	Mode fork center pad			15221	12337980	NP4219073
49.	Mode fork side pads			37284	12384966	NP4167969
50.	Shift cam			45557	89059210	Call
51.	Range fork bracket					Call
52.	Range fork spring			17267	15662307	Call
53.	Range fork			41224	89059199	Call
54.	Range fork pads					37284
55.	Washer			16456	15662306	Call
56.	Range fork bushing			16457	15662236	Call
57.	Mainshaft			45078	89059207	45078
58.	Front output shaft			46018	89059631	Call
59.	Drive/driven sprocket			40910	12478083	21966
60.	Drive chain			24273	89059179	HV064
61.	Rear mainshaft snap ring			24281	89059180	Call
62.	Oil pump			44650	89059202	Call
63.	Oil tube O-ring			35214	12478088	Call
64.	Oil pickup tube			45560	89059211	Call
65.	Oil filter coupler			44791	89059204	Call
66.	Oil filter			27924	89059197	Call
67.	Magnet				12471607	Call
Not Listed	Bearing kit					BK485C
	Gasket and seal kit					TSK273C
	Small parts kit					SP271-50

*** Call for availability on items that do not have a ZBAG part number listed ***