


# SmartRack® Assembly Instructions


**Models:  
SRCOLOKIT42U, SRCOLOKIT48U**

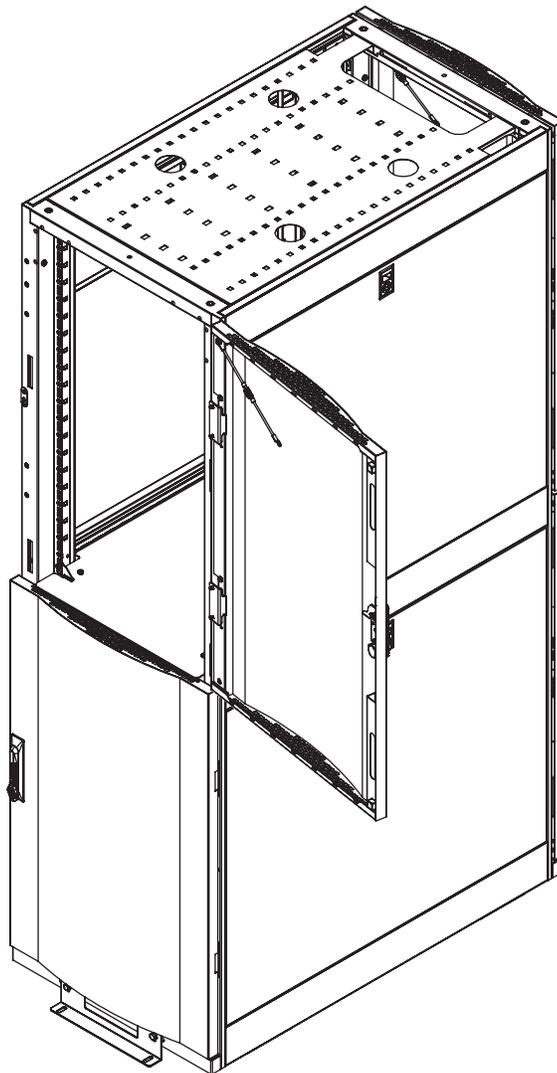

1111 West 35th Street, Chicago, IL 60609 USA • [www.triplite.com/support](http://www.triplite.com/support)

Copyright © 2015 Tripp Lite. All trademarks are the sole property of their respective owners.


# Parts List

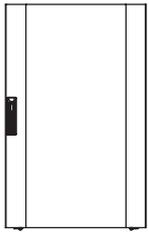

**A**

Colo Door


**x4**



**B**

Hinge Brackets

**x4**

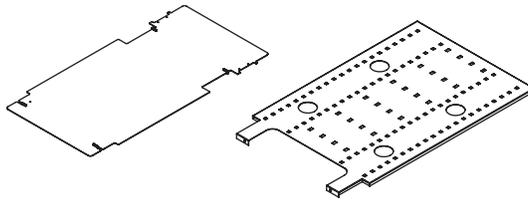

**C**

Divider Plate

**x1**

**D**

Roof


**x1**



**E**

Cable Channel


**x2**

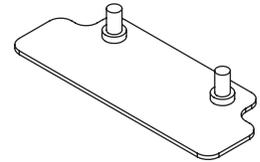

**F**

Blocking Plate


**x1**

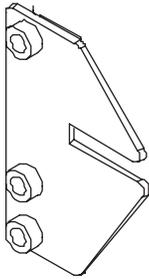

**G**

Divider Plate Bracket


**x4**



**H**

M6 Screw


**x17**



**I**

M6 Flat Head Screw


**x8**

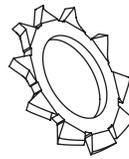

**J**

Lock Washer


**x17**

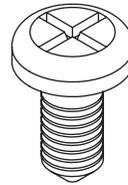

**K**

8-32 Screw


**x8**

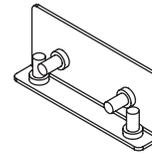

**L**

Cable Channel Plate

**x2**

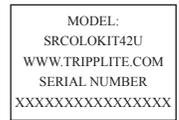

**M**

Label

**x1**

Required tools (User Supplied):


Phillips Head Screwdriver

**WARNING:** The rack enclosure is extremely heavy. Do not attempt to unpack, move, assemble or install the enclosure without assistance. Until it has been properly assembled and stabilized, the enclosure is prone to tipping and could cause property damage and/or personal injury. Use extreme caution when assembling the enclosure. Do not attempt to install equipment without first stabilizing the enclosure.

# step

# 1



Remove front and rear doors.

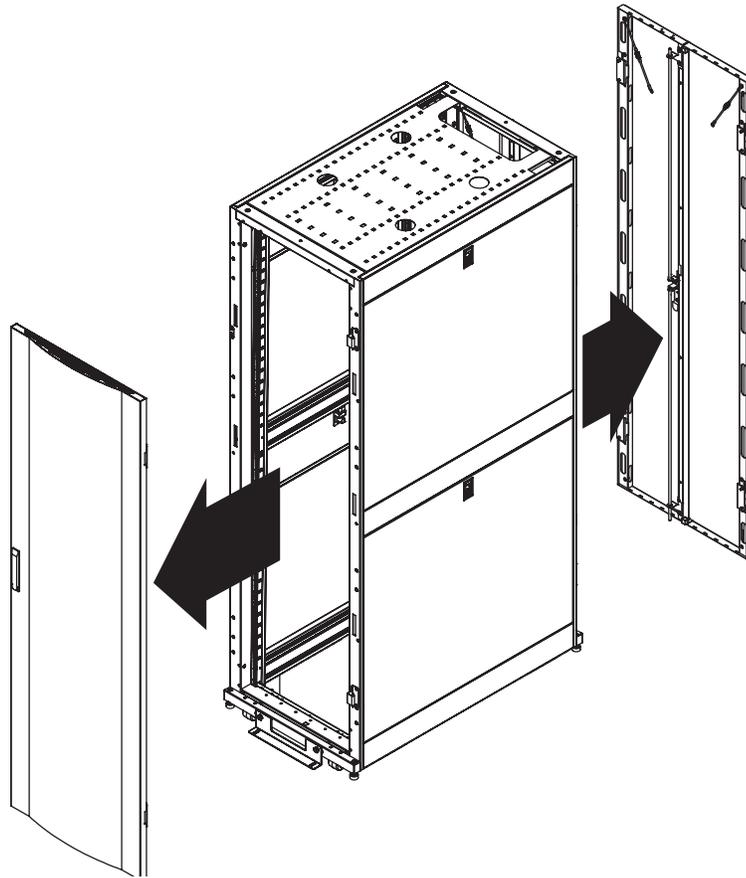

# step

# 2

For front doors, attach additional hinge brackets to door frame on the same side as the existing hinge brackets.

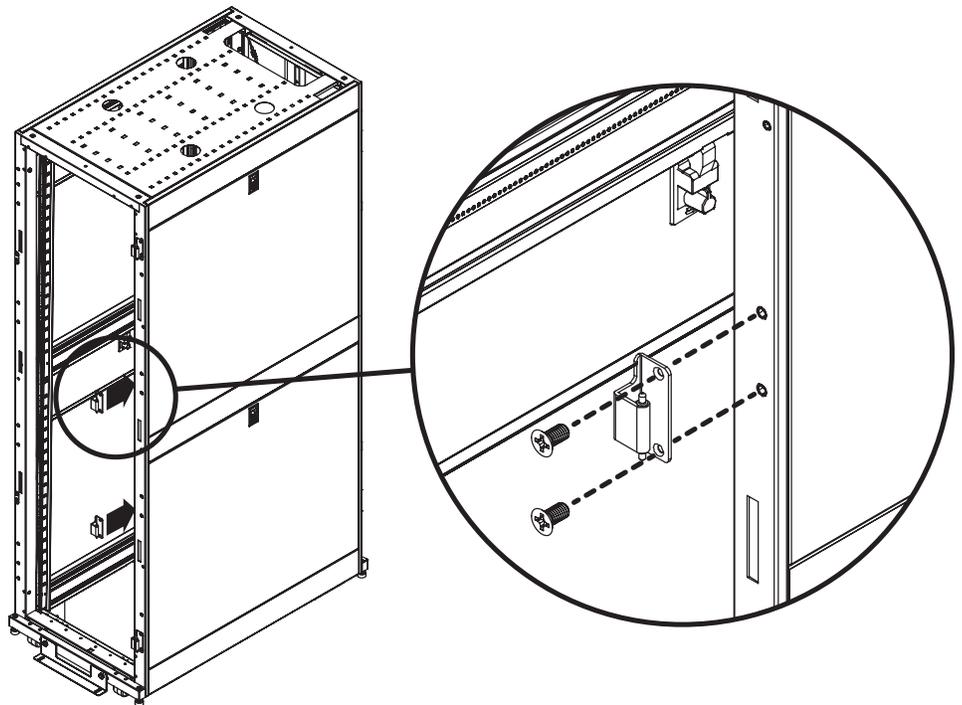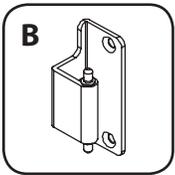


**For rear doors, move two hinge brackets so that all brackets are on the same side of the door frame.**


# step

# 3

Attach colo doors to hinges on frame.

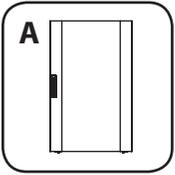

4

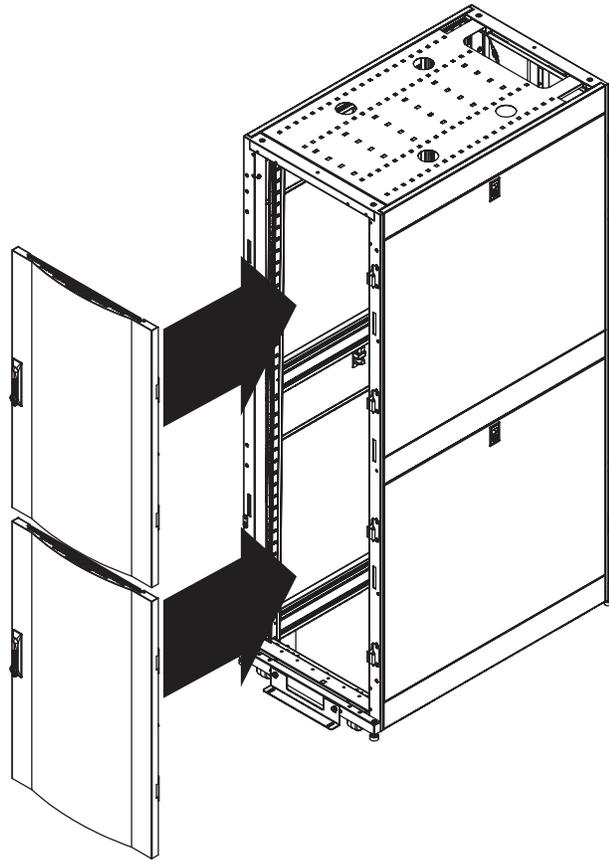


Repeat step 3 for rear doors.


# step

# 4


Assemble divider plate brackets onto divider plate. There are left and right brackets. Make sure the flat surface of the brackets face away from each other when assembled to divider plate.

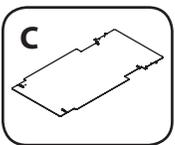

1

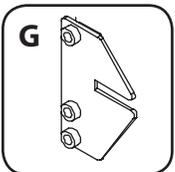


4

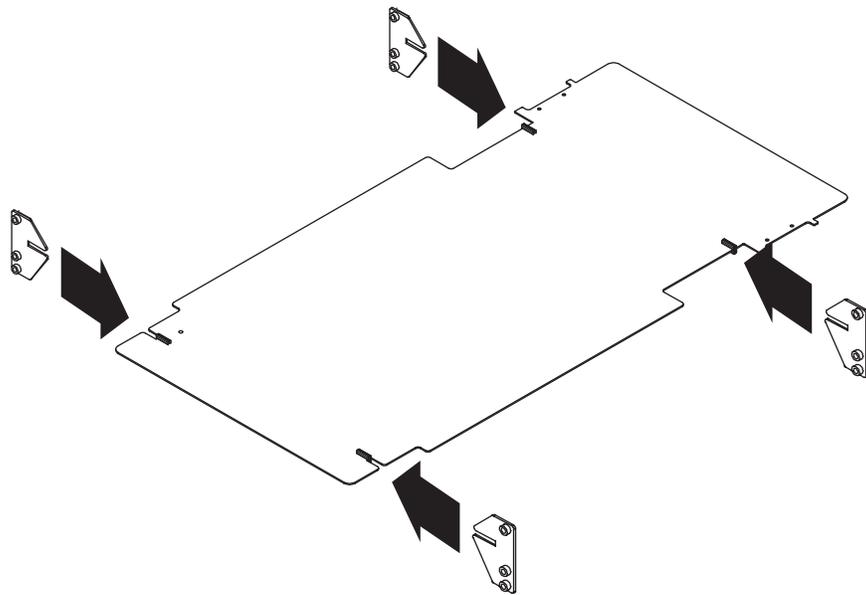


# step

# 5

Using an assistant, install divider. Divider should be installed with lower doors installed and completely closed so divider can rest on the lower doors while installing M6 washers and screws. Lock the doors to prevent them from opening and damaging the divider. Brackets on divider should be on the inside of the rack vertical rails.

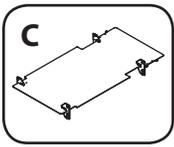

1

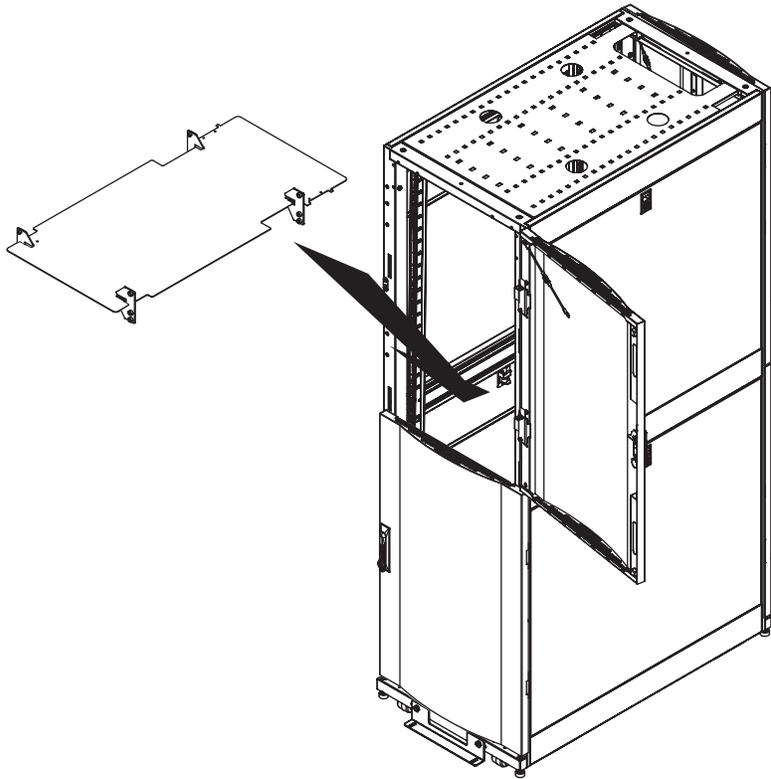


# step

# 6


Install upper M6 washers and screws in the topmost hole of "U" number 22 for a 42U rack and "U" number 25 for a 48U rack. DO NOT open lower doors until four of these washers and screws are installed onto the four vertical rails



4

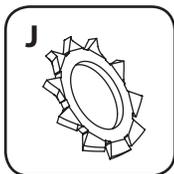

4

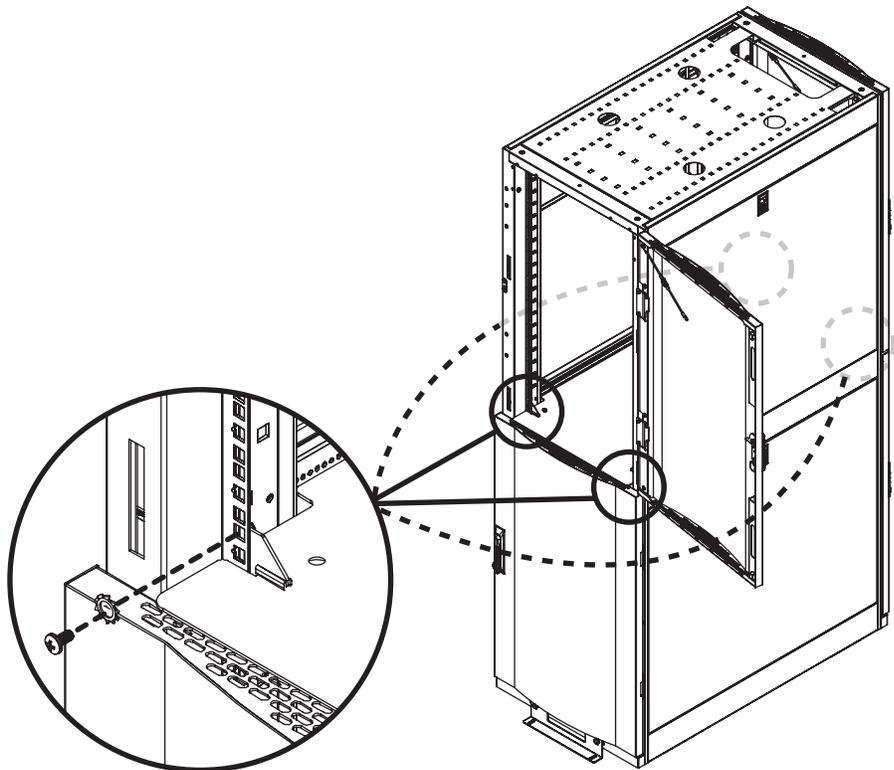


# step

# 7


Once upper M6 hardware is installed, the bottom doors can safely be opened to install the lower M6 hardware.



8

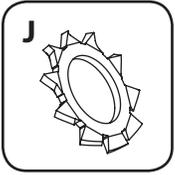


8

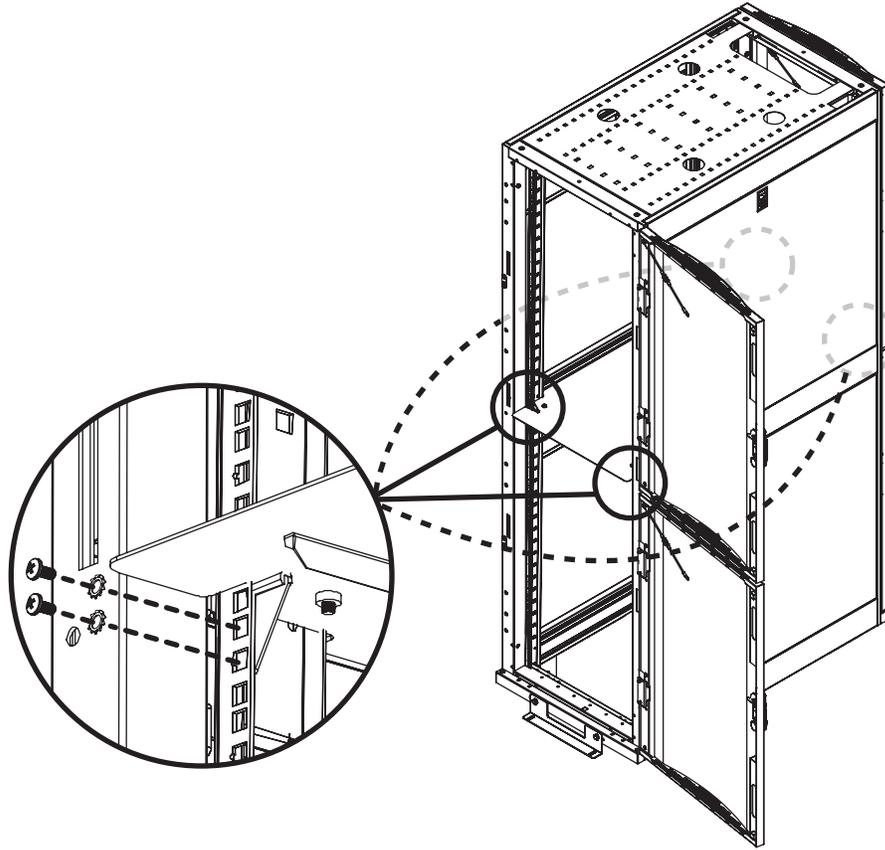


# step


# 8

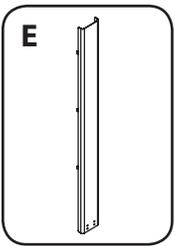


2

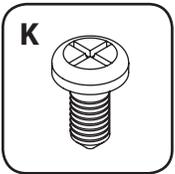

4

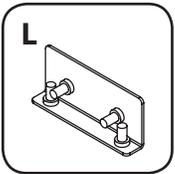


2

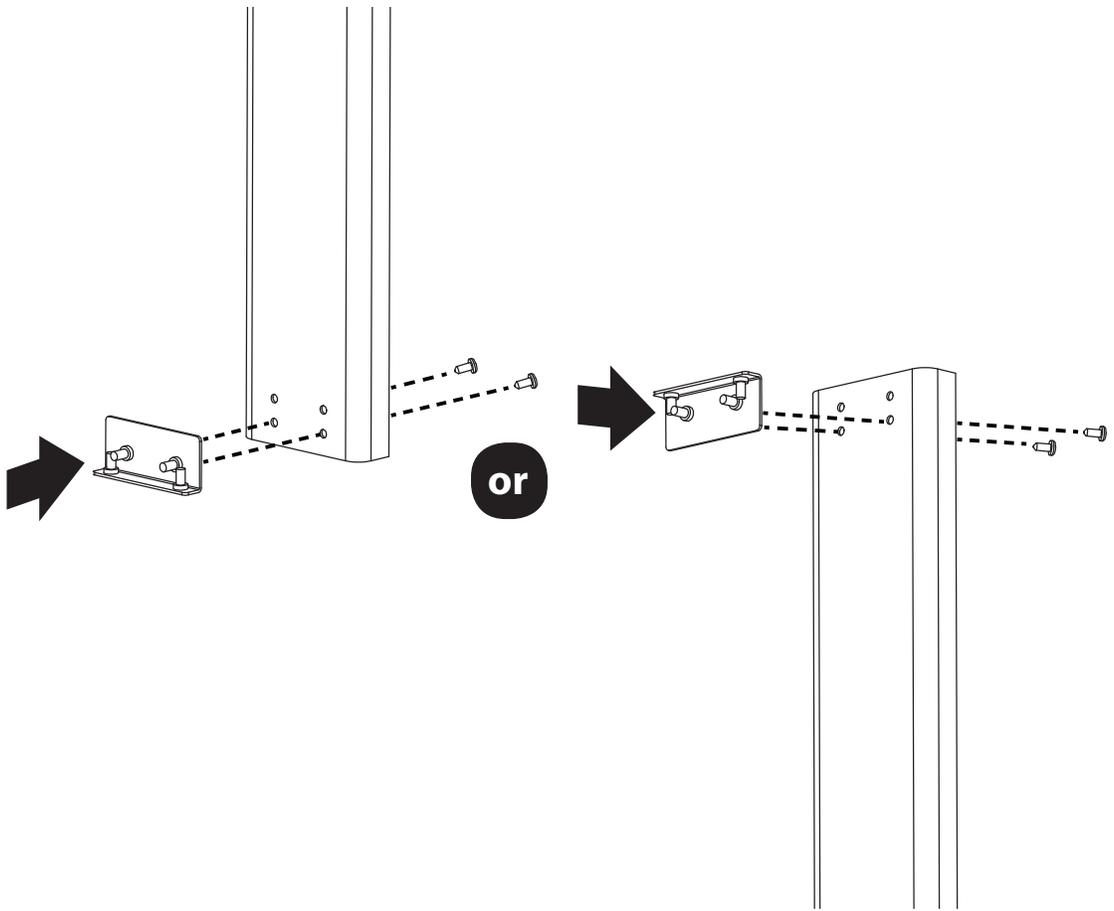





step

9

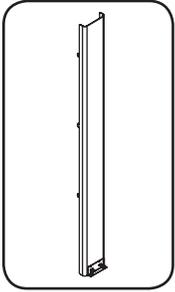

2

Install cable channels onto the cable managers using the tabs.

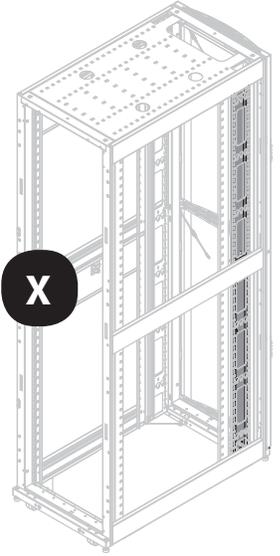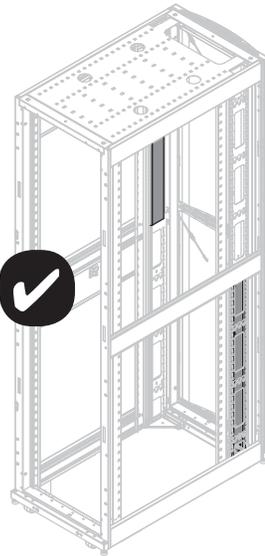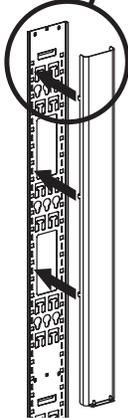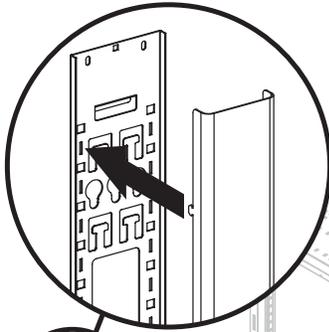


step




10



4

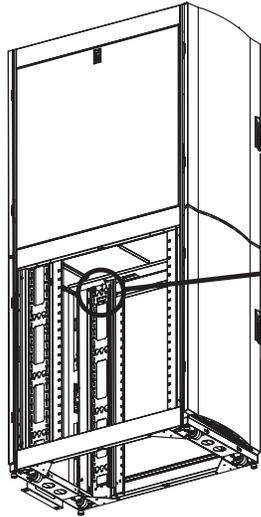


or

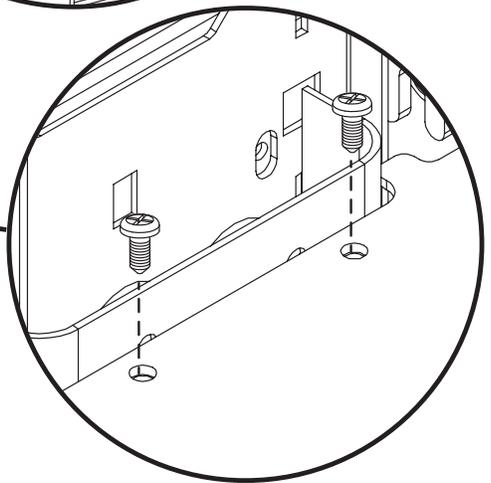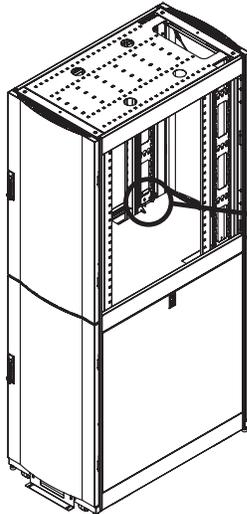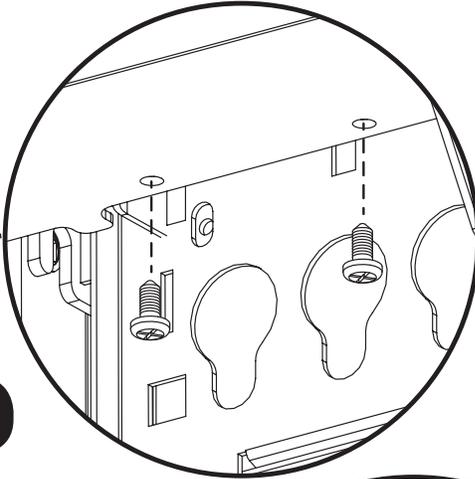


# step

# 11


If you only put in one cable channel, install the blocking plate on the side opposite the cable channel. Secure the plate to the divider.

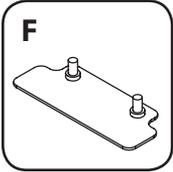

1

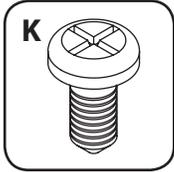


2

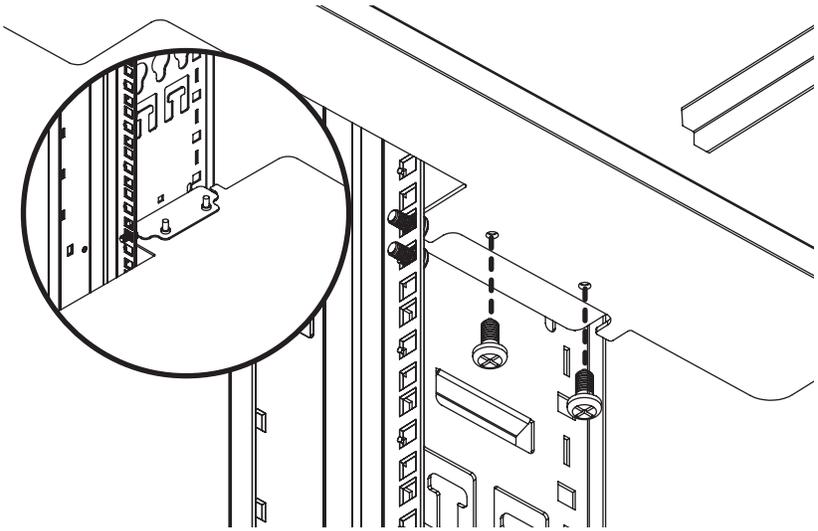


# step

# 12

Install roof. No fasteners are needed.

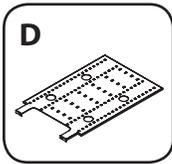


1

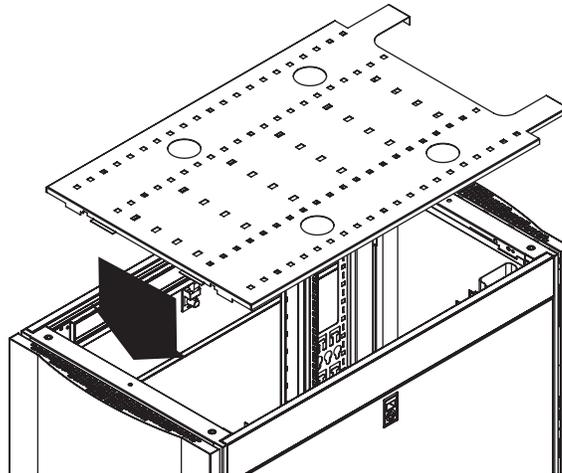


# step

# 13

Place provided label over existing model number label.

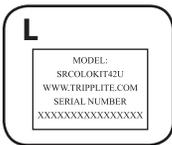

1

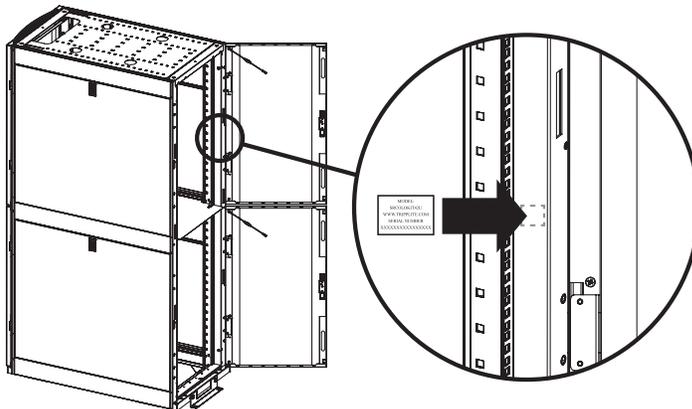

1111 West 35th Street, Chicago, IL 60609 USA • [www.triplite.com/support](http://www.triplite.com/support)

Tripp Lite follows a policy of continuous improvement. Product specifications are subject to change without notice.