

Intel® NUC Rugged Chassis Element CMCR1ABA, CMCR1ABB and CMCR1ABC Product Specification

Revision 1.4

Regulatory Model: CMCR1AB

March 2022

Intel® NUC Rugged Chassis Element CMCR1ABA, CMCR1ABB or CMCR1ABC may contain design defects or errors known as errata that may cause the product to deviate from published specifications. Current characterized errata, if any, are documented in this product specification.

Revision History

| Revision | Revision History | Date |
|----------|---|---------------|
| 1.0 | First release | October 2019 |
| 1.01 | Title Correction, Ethernet model number correction, Updated Figures 6 and 7 | December 2019 |
| 1.2 | Added CMCR1ABC | June 2020 |
| 1.3 | Added M.2 connector section and vPro® section. | July 2020 |
| 1.4 | Added Reliability Section | March 2022 |

Disclaimer

This product specification applies to only the standard Intel® NUC Rugged Chassis Element with product codes CMCR1ABA, CMCR1ABB and CMCR1ABC.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL* PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. UNLESS OTHERWISE AGREED IN WRITING BY INTEL, THE INTEL PRODUCTS ARE NOT DESIGNED NOR INTENDED FOR ANY APPLICATION IN WHICH THE FAILURE OF THE INTEL PRODUCT COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

All Intel® NUC Rugged Chassis Elements are evaluated as Information Technology Equipment (I.T.E.) for use in personal computers (PC) for installation in homes, offices, schools, computer rooms, and similar locations. The suitability of this product for other PC or embedded non-PC applications or other environments, such as medical, industrial, alarm systems, test equipment, etc. may not be supported without further evaluation by Intel.

Intel Corporation may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Intel processor numbers are not a measure of performance. Processor numbers differentiate features within each processor family, not across different processor families: Go to:

<u>Learn About Intel* Processor Numbers</u>

Intel® NUC Rugged Chassis Elements may contain design defects or errors known as errata, which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications before placing your product order.

Intel, the Intel logo and Intel Core are trademarks of Intel Corporation in the U.S. and/or other countries.

* Other names and brands may be claimed as the property of others.

Copyright $\ensuremath{@}$ 2022 Intel Corporation. All rights reserved.

Preface

This Product Specification specifies the layout, components, connectors, power and environmental features for the Intel® NUC Rugged Chassis Element



NOTE

In this document, the use of "Intel® NUC Rugged Chassis Element" will refer to the CMCR1ABA, CMCR1ABB and CMCR1ABC versions of the Intel® NUC Rugged Chassis Element.

Intended Audience

The document is intended to provide technical information about Intel® NUC Rugged Chassis Element and its components to the vendors, system integrators, and other engineers and technicians who need this level of information. It is specifically not intended for general audiences.

What This Document Contains

| Chapter | Description |
|---------|--|
| 1 | A description of the Intel® NUC Rugged Chassis Element features |
| 2 | A technical description of the Intel® NUC Rugged Chassis Element |

Typographical Conventions

This section contains information about the conventions used in this specification. Not all of these symbols and abbreviations appear in all specifications of this type.

Notes, Cautions, and Warnings



NOTE

Notes call attention to important information.



A CAUTION

Cautions are included to help you avoid damaging hardware or losing data.

Other Common Notation

| # | Used after a signal name to identify an active-low signal (such as USBP0#) |
|-------|--|
| GB | Gigabyte (1,073,741,824 bytes) |
| GB/s | Gigabytes per second |
| Gb/s | Gigabits per second |
| КВ | Kilobyte (1024 bytes) |
| Kb | Kilobit (1024 bits) |
| kb/s | 1000 bits per second |
| МВ | Megabyte (1,048,576 bytes) |
| MB/s | Megabytes per second |
| Mb | Megabit (1,048,576 bits) |
| Mb/s | Megabits per second |
| TDP | Thermal Design Power |
| Xxh | An address or data value ending with a lowercase h indicates a hexadecimal value. |
| x.x V | Volts. Voltages are DC unless otherwise specified. |
| * | This symbol is used to indicate third-party brands and names that are the property of their respective owners. |
| | |

Intel® NUC Rugged Chassis Element Identification Information

NUC Rugged Chassis Element Identification Information

| Original SA Revision | Product Code | Chassis Type | AC Cord | Notes |
|----------------------|--------------|--------------|---------|-------|
| K53776-202 | BKCMCR1ABA | Expandable | None | 1 |
| K53776-202 | BKCMCR1ABA1 | Expandable | US | 1 |
| K53776-202 | BKCMCR1ABA2 | Expandable | EU | 1 |
| K53778-202 | BKCMCR1ABB | Dual LAN | None | 1 |
| K53778-202 | BKCMCR1ABB1 | Dual LAN | US | 1 |
| K53778-202 | BKCMCR1ABB2 | Dual LAN | EU | 1 |
| K53784-302 | BKCMCR1ABC | Six HDMI | None | 1 |
| K53784-302 | BKCMCR1ABC1 | Six HDMI | US | 1 |
| K53784-302 | BKCMCR1ABC2 | Six HDMI | EU | 1 |

Notes:

^{1.} The SA number is found on the bottom of the chassis

Specification Changes or Clarifications

The table below indicates the Specification Changes or Specification Clarifications that apply to the Intel® NUC Rugged Chassis Element CMCR1ABA, CMCR1ABB and CMCR1ABC.

Specification Changes or Clarifications

| Date | Type of Change | Description of Changes or Clarifications | |
|------|----------------|--|--|
| | | • | |
| | | | |

Errata

Current characterized errata, if any, will be documented in Section 3 of this Product Specification.

Contents

| Re | evision History | | ii |
|-----|--|-------------------------------|-----|
| | Disclaimer | | ii |
| Pr | reface | | iii |
| | Intended Audience | | iii |
| | What This Document Contains | | iii |
| | Typographical Conventions | | iii |
| | Intel® NUC Rugged Chassis Eleme | nt Identification Information | V |
| | Specification Changes or Clarification | tions | V |
| | Errata | | V |
| Co | ontents | | vii |
| 1 | Product Description | | 9 |
| | 1.1 Overview | | 9 |
| | 1.2 Version Summary | | 9 |
| | 1.3 Feature Summary | | 10 |
| 2 | Technical Reference | | 11 |
| | 2.1 Block Diagrams | | 11 |
| | | | |
| | | Port Configuration | |
| | | | |
| | | | |
| | 0 , | | |
| | | | |
| | • | | |
| | | nper | |
| | | | |
| | | | |
| | • | | |
| 3 | Characterized Errata | | 24 |
| | | | |
| Fi | igures | | |
| Fig | igure 1. CMCR1ABA Block Diagram | | 11 |
| | | | |
| | | | |
| | | 1CR1ABC Front Panel | 14 |
| Fig | igure 5 CMCR1ABA Back Panel | | 14 |

| Figure 6. CMCR1ABB Back Panel | 15 |
|--|----|
| Figure 7. CMCR1ABC Back Panel | 15 |
| Figure 8. CMCR1ABC HDMI Port Configuration | 16 |
| Figure 9. Serial Port Header Location | 18 |
| Figure 10. Wireless Enable/Disable Jumper Location | 20 |
| Figure 11. CMCR1ABA, CMB1ABB and CMCR1ABC Dimensions | 21 |
| Figure 12. VESA Bracket Dimensions | 22 |
| | |
| Tables | |
| Table 1. Chassis Version Summary | 9 |
| Table 2. Feature Summary | 10 |
| Table 3. CMCR1ABA/CMCR1ABB/CMCR1ABC Front Panel Connectors | |
| Table 4. CMCR1ABABack Panel Connectors | |
| Table 5. CMCR1ABB Back Panel Connectors | |
| Table 6. CMCR1ABC Back Panel Connectors | 15 |
| Table 7. HDMI Port Configuration and Supported Resolutions | 16 |
| Table 8. Serial Port Header Pinout | 18 |
| Table 9. Wireless Enable/Disable Jumper Settings | |
| Table 10. Environmental Specifications | 23 |
| | |

1 Product Description

1.1 Overview

The Intel® NUC Rugged Chassis Element is a rugged chassis solution for the Intel® NUC Rugged Board Element and consists of a NUC Rugged Board Element that is designed for the Intel® NUC Compute Element to plug into along with input/output connectors and headers. The Chassis provides a passive enclosure for the NUC Compute Element and the NUC Rugged Board Element.

The Intel® NUC Rugged Chassis Element require a compatible Intel® NUC Compute Element in order to operate.

For information on compatible devices for use with the Intel® NUC Rugged Chassis Element see http://www.intel.com/NUCElements.

1.2 Version Summary

There are three different chassis versions of this model of Intel® NUC Rugged Chassis Element available which are summarized in Table 1. Unless otherwise noted in this document, not all features are available on all versions of the Intel® NUC Rugged Chassis Element.

Table 1. Chassis Version Summary

| Version | HDMI Ports | M.2 Connectors | LAN | USB 2 Ports | USB 3 Ports | USB 2.0 Headers | USB 3.0 Headers | Serial Port Headers |
|----------|---------------|-------------------|-----|----------------|----------------|--------------------|--------------------|---------------------------|
| CMCR1ABA | 2 | 2 | 1 | 1 | 3 | 2 | 1 | 2 |
| CMCR1ABB | 2 | 2 | 2 | 3 | 3 | 0 | 1 | 2 |
| CMCR1ABC | 6 | 2 | 1 | 1 | 3 | 2 | 1 | 2 |



NOTE

Intel® NUC Rugged Chassis Elements listed in Table 1 have been certified for use as a component in Information Technology Equipment in certain countries. The system integrator is responsible for testing and acquiring any additional country-specific regulatory approvals, including all system-wide certifications.

To find information about...

Intel® NUC Compute Element

 $Intel^{\scriptsize @}\ NUC\ Rugged\ Chassis\ Element\ Support$

Intel® NUC Element Warranty Information

Available configurations for Intel $^{\rm e}$ NUC Rugged

Chassis Element

Intel Processors

Intel Graphics

Intel Wireless

Intel Technologies

Visit this World Wide Web site:

https://www.intel.com/NUCElements

https://www.intel.com/NUCElementsSupport

http://www.intel.com/NUCWarranty

https://ark.intel.com

https://www.intel.com/processors

https://www.intel.com/graphics

https://www.intel.com/wireless

https://www.intel.com/technology

1.3 Feature Summary

Table 2 summarizes the major features of the Intel® NUC Rugged Chassis Elements.

Table 2. Feature Summary

| Chassis Size | 254 millimeters by 152.4 millimeters by 36 millimeters | | |
|--|---|--|--|
| Graphics Outputs | Integrated graphics support with Intel® HD Graphics Technology | | |
| | Two HDMI 2.0a | | |
| | Four HDMI 1.4 on CMCR1ABC | | |
| | Built in CEC for all HDMI ports | | |
| | High-Bandwidth Digital Content Protection support for content protection | | |
| | o HDCP 1.4 and 2.2 supported via HDMI | | |
| | Resolutions and refresh rates supported | | |
| | o Up to 4K @ 60Hz | | |
| | o Up to 1080p @ 120Hz | | |
| Audio | Intel® High Definition (Intel® HD) Audio via HDMI | | |
| Storage | One M.2 22x80 Key M slot for PCle x4 NVMe or SATA SSDs | | |
| | One M.2 22x80 Key M slot for PCIe x4 NVMe or PCIe add in devices | | |
| Wireless LAN | Intel® NUC Compute Element supplies the solution, antennas provided | | |
| Wired LAN | Intel® Ethernet Connection I219-LM (Support for Intel® vPro™ Technology when using a | | |
| | vPro™ enabled NUC Compute Element) | | |
| | Intel® Ethernet Controller I211-AT (CMB1ABB only) | | |
| USB 2.0 Ports | CMCR1ABA: 1 Front Panel | | |
| | CMCR1ABB: 3 (1 Front Panel, 2 Back Panel) | | |
| | CMCR1ABC: 1 Front Panel | | |
| USB 3.x ¹ Ports | 3 (1 Front Panel, 2 Back Panel) | | |
| Serial Port Header | 2 Internal Headers (can be used on CMCR1ABA expandable back panel) | | |
| Operating Systems | Windows* 10 Home | | |
| Support (64-bit only) | Windows 10 Pro | | |
| | Windows 10 Enterprise | | |
| | Windows 10 Education | | |
| | Windows 10 IoT Enterprise Company to a contract the contract to the c | | |
| | Some Linux* operating systems may be compatible. Check with the specific Linux distribution to make sure that support is available for this platform. | | |
| distribution to make sure that support is available for this platform. Connector Supported • Lotes APCI0468-P001A01 Edge Mount Connector | | | |
| | | | |
| Thermal Solution | Passive | | |
| Sustained Operation Sustained Operation is defined as 24x7 operation for 5 years with 50% system u | | | |
| (24x7 usage) | average, with an expected service rate of 1% per year during this period. | | |
| Dust Protection | IP50 as defined in IEC 60529 (Ed. 2.1), clause 4.1. | | |

¹ USB 3.x port speed is determined by the Intel® NUC Compute Element.

2 Technical Reference

2.1 Block Diagrams

Figure 1 is a block diagram of the major functional areas of the NUC Rugged Chassis Element CMCR1ABA.

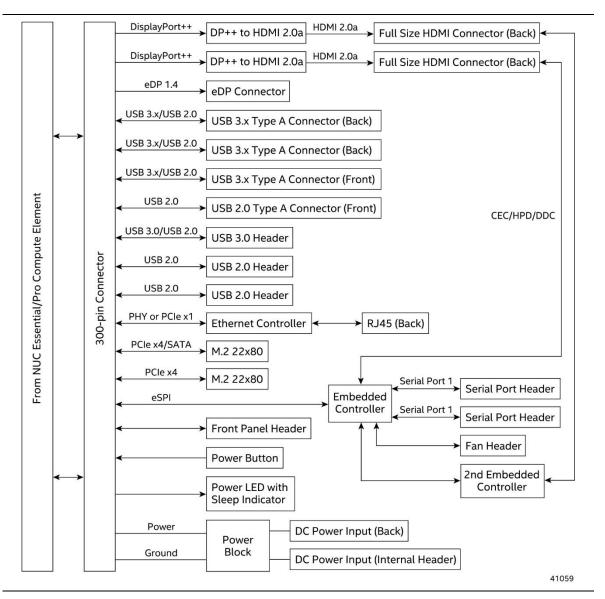


Figure 1. CMCR1ABA Block Diagram

Figure 2 is a block diagram of the major functional areas of the NUC Rugged Chassis Element CMCR1ABB.

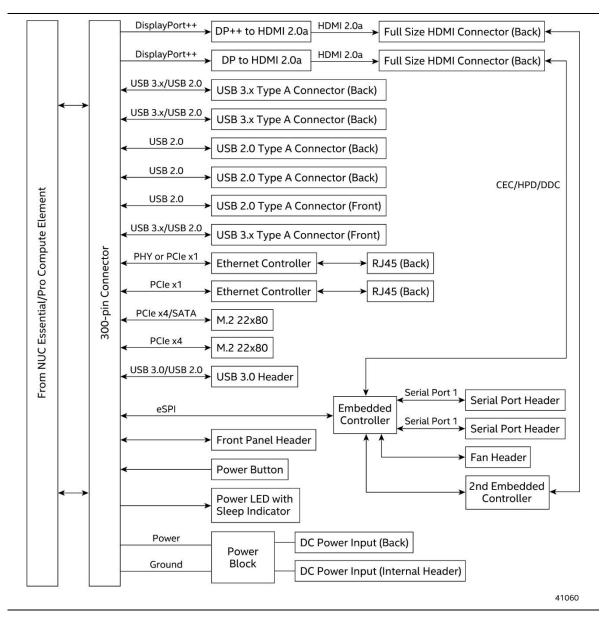


Figure 2. CMCR1ABB Block Diagram

Figure 3 is a block diagram of the major functional areas of the NUC Rugged Chassis Element CMCR1ABC.

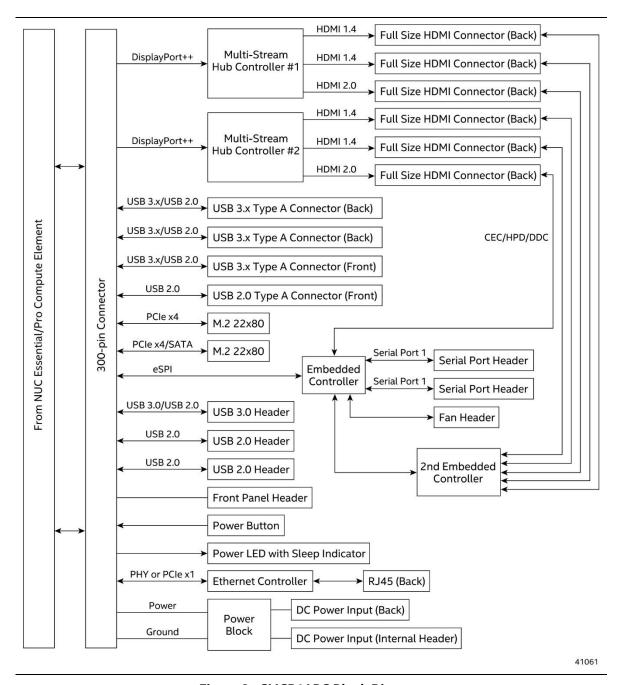


Figure 3. CMCR1ABC Block Diagram

2.2 Features

The NUC Rugged Chassis Elements have front panel and the back panel input/output connectors. See the below figures for the locations of the connectors.

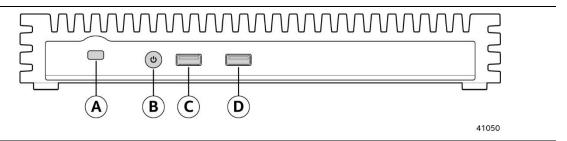


Figure 4. CMCR1ABA/CMCR1ABB/CMCR1ABC Front Panel

Table 3. CMCR1ABA/CMCR1ABB/CMCR1ABC Front Panel Connectors

| Item | Description | Item | Description |
|------|--------------------------|------|---------------------------|
| Α | Anti-Theft Key Lock Hole | С | USB 3.x ¹ Port |
| В | Power Button | D | USB 2.0 Port |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

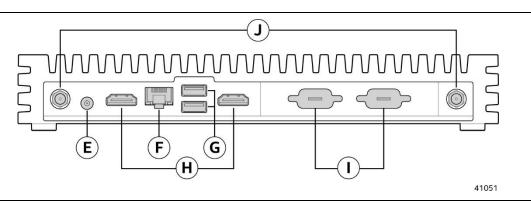


Figure 5. CMCR1ABA Back Panel

Table 4. CMCR1ABABack Panel Connectors

| Item | Description | Item | Description |
|------|----------------------------|------|------------------------------------|
| Е | Power Input Jack | Н | HDMI Ports |
| F | Ethernet Connector (RJ-45) | 1 | Expandable Back Panel ² |
| G | USB 3.x ¹ Ports | J | Antenna Connectors |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

² The expandable back panel area has cut outs for two DB9 serial port connectors. The expansion area back plate can be replaced with a custom designed expansion back panel plate for use with other connector types. Custom designed expansion back panel plates are not offered by Intel. To use the other headers that are available for this purpose, refer to the Intel® NUC Rugged Board Element Product Specification.

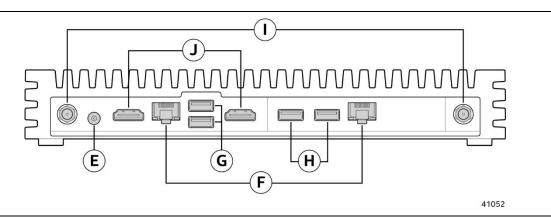


Figure 6. CMCR1ABB Back Panel

Table 5. CMCR1ABB Back Panel Connectors

| Item | Description | Item | Description |
|------|-----------------------------|------|--------------------|
| E | Power Input Jack | Н | USB 2.0 Ports |
| F | Ethernet Connectors (RJ-45) | 1 | Antenna Connectors |
| G | USB 3.x ¹ Ports | J | HDMI Ports |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

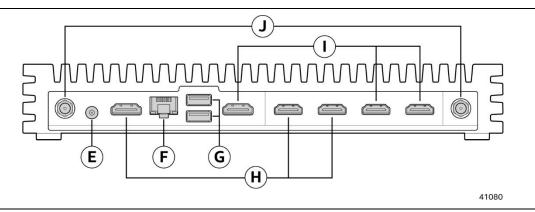


Figure 7. CMCR1ABC Back Panel

Table 6. CMCR1ABC Back Panel Connectors

| Item | Description | Item | Description |
|------|----------------------------|------|---------------------------|
| E | Power Input Jack | Н | HDMI Ports A ² |
| F | Ethernet Connector (RJ-45) | 1 | HDMI Ports B ³ |
| G | USB 3.x ¹ Ports | J | Antenna Connectors |

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

 $^{^{2}}$ Group A HDMI ports are configured from left to right as A, A3 and A2.

² Group B HDMI ports are configured from left to right as B, B2 and B3.

2.2.1 CMCR1ABC HDMI Port Configuration




Figure 8. CMCR1ABC HDMI Port Configuration

Table 7. HDMI Port Configuration and Supported Resolutions

| Configuration | HDMI A | HDMI B | HDMI A3 | HDMI A2 | HDMI B2 | HDMI B3 |
|---------------|----------|----------|----------|----------|----------|----------|
| 1 | 4K@60 | | | | | |
| 2 | 1080@120 | | 1080@120 | | | |
| 3 | 1080@120 | | | 1080@120 | | |
| 4 | | | 1080@120 | 1080@120 | | |
| 5 | 1080@60 | | 1080@60 | 1080@60 | | |
| 6 | | 4K@60 | | | | |
| 7 | | 1080@120 | | | 1080@120 | |
| 8 | | 1080@120 | | | | 1080@120 |
| 9 | | | | | 1080@120 | 1080@120 |
| 10 | | 1080@60 | | | 1080@60 | 1080@60 |
| 11 | 4K@60 | 4K@60 | | | | |
| 12 | 1080@120 | 4K@60 | 1080@120 | | | |
| 13 | 1080@120 | 4K@60 | | 1080@120 | | |
| 14 | | 4K@60 | 1080@120 | 1080@120 | | |
| 15 | 1080@60 | 4K@60 | 1080@60 | 1080@60 | | |
| 16 | 4K@60 | 1080@120 | | | 1080@120 | |
| 17 | 4K@60 | 1080@120 | | | | 1080@120 |
| 18 | 4K@60 | | | | 1080@120 | 1080@120 |
| 19 | 4K@60 | 1080@60 | | | 1080@60 | 1080@60 |
| 20 | 1080@120 | 1080@120 | 1080@120 | | 1080@120 | |
| 21 | 1080@120 | 1080@120 | | 1080@120 | | 1080@120 |
| 22 | | | 1080@120 | 1080@120 | 1080@120 | 1080@120 |
| 23 | 1080@60 | 1080@60 | 1080@60 | 1080@60 | 1080@60 | 1080@60 |

2.3 **Power**

The Intel® NUC Rugged Chassis Element uses a supplied AC to DC power adapter with a six-foot attached cable with a barrel connector.

- 90-264 Volts AC input, 47-63 Hz
- 19 Volts 4.74 Amps DC output
- 3-pin AC power cord (options include no AC power cord, US AC power cord or EU AC power cord)
- Delayed AC start is supported

! CAUTION

It is strongly recommended to make sure that the NUC Rugged Chassis Element is powered off and AC power is removed before removing the NUC Pro Compute Element from the board connector. Removing the NUC Pro Compute Element from the board connector while powered on may cause damage to the NUC Pro Compute Element, operating system corruption, create a no boot condition or result in data loss. If the Blue LED on the board is illuminated, do not remove the NUC Compute Element from the board connector.

2.4 M.2 Connectors

The NUC Rugged Chassis Element has 2 M.2 connectors.

- The M.2 connector parallel to the 300-pin connector has support for both PCIe NVMe and SATA storage solutions.
- The M.2 connector perpendicular to the 300-pin connector has support for PCIe NVMe storage solutions only.

Intel® vPro® Technology 2.5

Intel® vPro™ Technology is a collection of platform capabilities that support enhanced manageability, security, virtualization and power efficiency.

| For information about | Refer to | | |
|-------------------------|--|--|--|
| Intel® vPro® Technology | http://support.intel.com/support/vpro/ | | |



Intel® vPro® Technology is only supported on the Intel® NUC Rugged Board Element if an Intel® NUC Compute Element with Intel® vPro® Technology support is connected.

2.6 Serial Port Headers

The NUC Rugged Chassis Element has two white, 1x9, 1.25mm pitch Serial Port headers. See Figure 9 for the location of the two headers. Cutouts are available (Figure 5) on the CMCR1ABA expandable back panel for the addition of two DB9 serial port connectors.

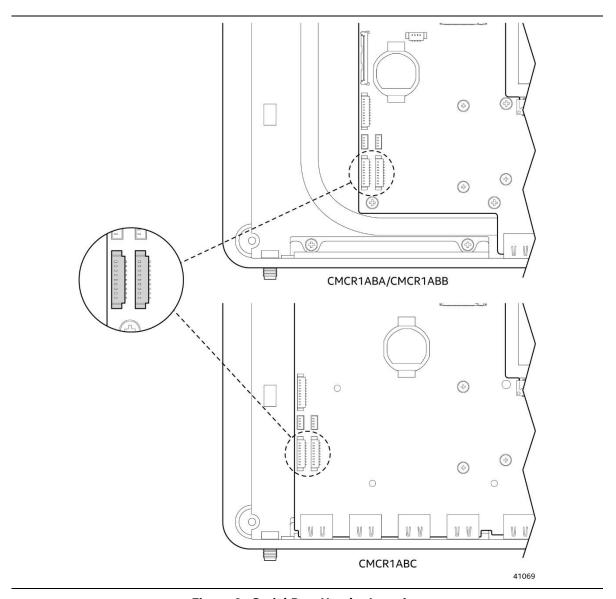


Figure 9. Serial Port Header Location

Table 8. Serial Port Header Pinout

| Pin | Signal Name | Description | Pin | Signal Name | Description |
|-----|-------------|---------------------|-----|-------------|-----------------|
| 1 | DCD | Data Carrier Detect | 6 | DSR | Data Set Ready |
| 2 | RXD# | Receive Data | 7 | RTS | Request to Send |
| 3 | TXD# | Transmit Data | 8 | CTS | Clear to Send |
| 4 | DTR | Data Terminal Ready | 9 | RI | Ring Indicator |
| 5 | GND | Ground | | | |

2.7 Display Emulation

The Intel® NUC Rugged Chassis Element supports emulation of displays using the HDMI ports so that the system may be remotely accessed in a headless configuration or be capable of tolerating display connectivity interruptions without the operating system redetecting and rearranging the overall display layout. The display emulation feature may be enabled in Intel® NUC Compute Element BIOS Setup (Advanced \rightarrow Video \rightarrow "Display Emulation" drop down menu) with the following options:

- "No display emulation" (default selection): the system operates normally.
- "Virtual display emulation": provides a 1280x1024 virtual display when no displays are
 connected to the system and provides an additional 1280x1024 virtual display if one
 display is attached to the system. If two display are attached to the system these displays
 will be enabled and no virtual displays will be provided.
- "Persistent display emulation": emulates that both displays are always connected to the system no matter their actual connection status. The EDID information from each display will remain programmed through S3, S4, and S5 power states until the feature is disabled or a power cycle event (G3 global state) occurs.
 - When "Persistent display emulation" is enabled another drop-down menu
 ("Inconsistent Display Device") will become visible that allows the user to select
 the behavior of the system when the display device EDID is inconsistent with the
 EDID stored by the system.
 - "Block boot" (default selection): the BIOS will display a warning message with options and will wait indefinitely for a user selection.
 - "Countdown": the BIOS will display a warning message with options and will wait 10 seconds before booting.



NOTE

"Persistent display emulation" is not compatible with HDCP 2.2 displays.

When using "Persistent display emulation" it would be expected behavior for the system not to properly drive displays different than those connected when the feature was enabled, as the EDID parameters of the initially connected displays are still being driven by the system. A power cycle (AC power loss) is required to retrain the system with a different display configuration.

2.8 Wireless Enable/Disable Jumper



riangle CAUTION

Do not change the jumper with the power on. Always turn off the power and unplug the power cord from the carrier board before changing a jumper setting. Otherwise, the board could be damaged.

The jumper position determines whether the wireless module on the NUC Pro Compute Element is enabled or disabled. See Figure 10 for the location of the jumper. Table 9 describes the jumper settings.

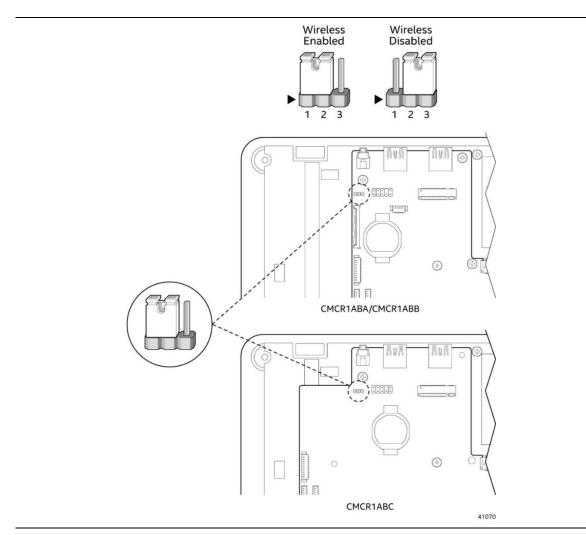


Figure 10. Wireless Enable/Disable Jumper Location

Table 9. Wireless Enable/Disable Jumper Settings

| Function/Mode | Jumper Setting | Configuration |
|---------------|----------------|--|
| Enable | 1-2 | Wireless and Bluetooth will be enabled on the NUC Pro Compute Element |
| Disable | 2-3 | Wireless and Bluetooth will be disabled on the NUC Pro Compute Element |

2.9 Mechanical

The following figures illustrate the mechanical form factor of the Intel® NUC Rugged Chassis Element along with the VESA bracket. Dimensions are given in millimeters (mm).

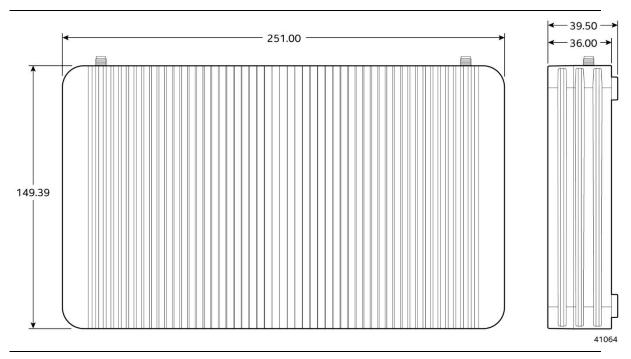


Figure 11. CMCR1ABA, CMB1ABB and CMCR1ABC Dimensions

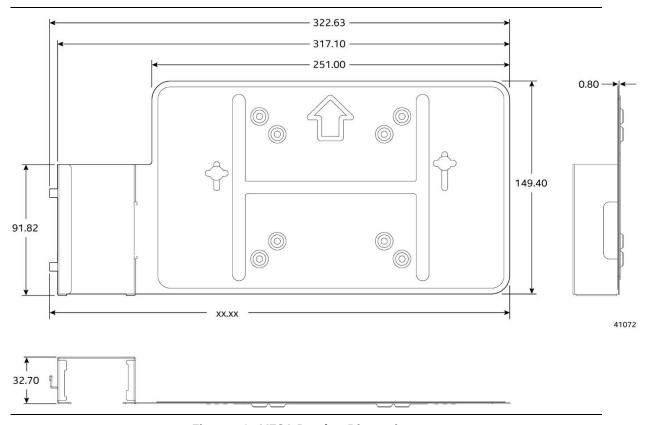


Figure 12. VESA Bracket Dimensions

2.10 Thermal

The Intel® NUC Rugged Chassis Element comes with a complete thermal solution for the Intel® NUC Pro Compute Element. The thermal solution includes a cold plate with thermal interface material, heat pipes and uses the chassis as the heat sink.

2.11 Reliability

The Intel® NUC Rugged Chassis Element has a demonstrated Mean Time Between Failure (MTBF) of 50,000 hours when running under load for 90 days at 40° C ambient temperature with an Intel® NUC 8 Compute Element or an Intel® NUC 11 Compute Element installed.

2.12 Environmental

Table 10 lists the environmental specifications for the Intel® NUC Rugged Chassis Elements.

Table 10. Environmental Specifications

| Parameter | Specification | | |
|----------------------------------|---|--------------------|--|
| Temperature | | | |
| Non-Operating | -40 °C to +60 °C | | |
| Operating (Board) | 0 °C to +40 °C | | |
| Operating (Chassis) | 0 °C to +40 °C | | |
| Shock (Board) | | | |
| Unpackaged | 25 g trapezoidal waveform | | |
| | Velocity change of 250 inches/s ² | | |
| Packaged | Free fall package drop machine set to the height determined by the weight of the package. | | |
| | Product Weight (pounds) | Free Fall (inches) | |
| | <20 | 36 | |
| | 21-40 | 30 | |
| | 41-80 | 24 | |
| | 81-100 | 18 | |
| Vibration (Chassis) | | | |
| Unpackaged | 5 Hz to 20 Hz: 0.001 g²/Hz sloping up to 20 Hz @ 0.01 g²/Hz | | |
| | 20 Hz to 500 Hz: 0.01 g²/Hz (flat) | | |
| Input acceleration is 2.20 g RMS | | | |
| Packaged | 5 Hz to 40 Hz: 0.015 g²/Hz (flat) | | |
| | 40 Hz to 500 Hz: 0.015 g²/Hz sloping down to 0.00015 g²/Hz | | |
| | Input acceleration is 1.09 g RMS | | |

Note: Before attempting to operate this Intel® NUC Rugged Chassis Element, the overall temperature of the system must be above the minimum operating temperature specified. It is recommended that the NUC Rugged Chassis Element temperature be at least room temperature before attempting to power on the system. The operating and non-operating environment must avoid condensing humidity.

3 Characterized Errata

This section of the document communicates product Errata for the Intel® NUC Pro Board Element CMCR1ABA, CMCR1ABB and CMCR1ABC.

Errata are design defects or deviations from current published specifications for a given product. Published errata may or may not be corrected. Hardware and software designed to be used with any given processor stepping must assume that all errata documented for that process stepping are present on all devices.

There are no known characterized errata.