

# SERVICE MANUAL

P670HS(-G) / P671HS(-G)

*notebook*





**Notebook Computer**

**P670HS(-G) / P671HS(-G)**

**Service Manual**

### Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0  
December 2016

### Trademarks

**Intel and Intel Core** are trademarks of Intel Corporation.

**Windows<sup>®</sup>** is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.



## About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *P670HS(-G) / P671HS(-G)* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

### **IMPORTANT SAFETY INSTRUCTIONS**

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
  - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 11.8A (**230** Watts) minimum AC/DC Adapter.

### **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


## Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

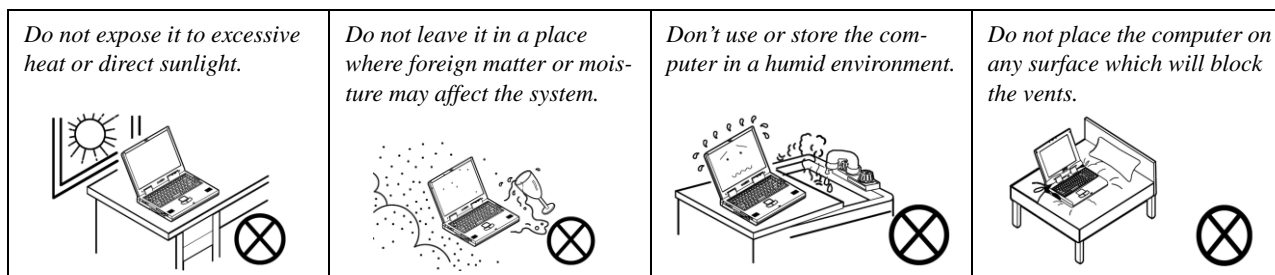

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

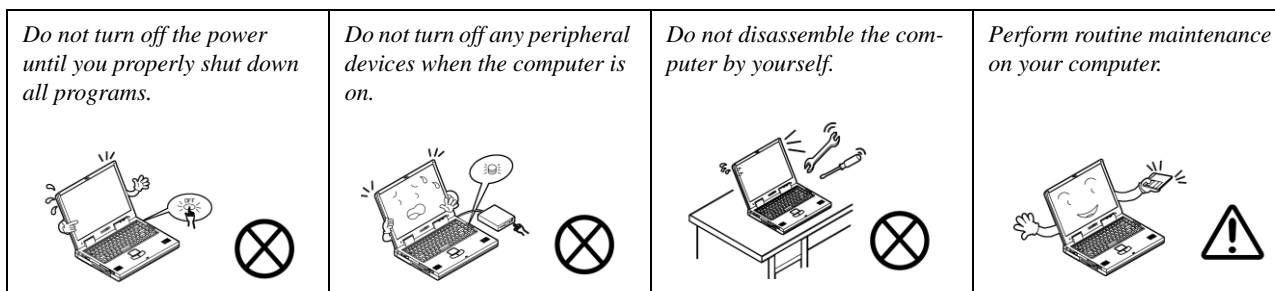


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

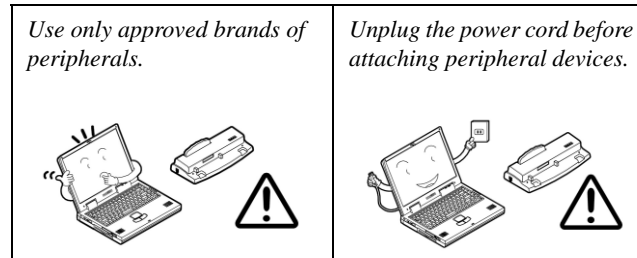

## Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

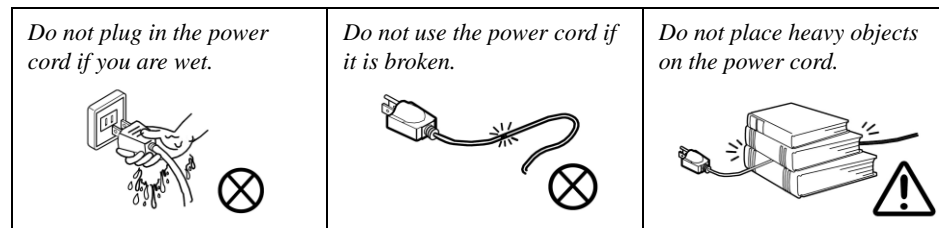

### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

## Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

## Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




### Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

### Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

### Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

## Related Documents


You may also need to consult the following manual for additional information:

### User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

## System Startup


1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 135 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

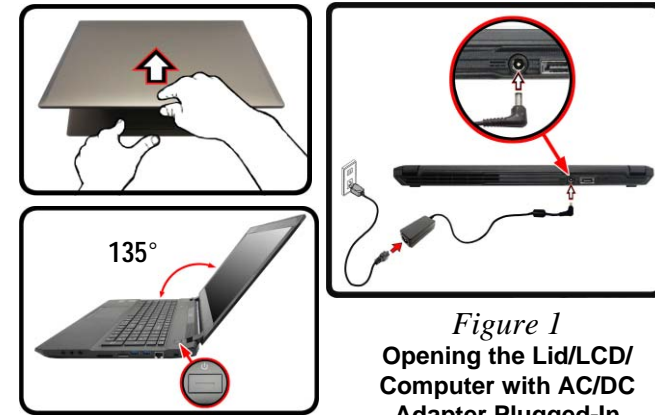

*Figure 1*  
**Opening the Lid/LCD/  
Computer with AC/DC  
Adapter Plugged-In**


### Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

Click the icon  in the **Start Screen** and choose **Shut down** from the menu.



Or

Right-click the **Start button**  at the bottom of the **Start Screen** or the **Desktop** and choose **Shut down or sign out** > **Shut down** from the context menu.

## Contents

<b>Introduction .....</b>	<b>1-1</b>	MB .....	A-5
Overview .....	1-1	HDD .....	A-6
Specifications .....	1-2	LCD .....	A-7
External Locator - Top View with LCD Panel Open .....	1-4	<b>Schematic Diagrams.....</b>	<b>B-1</b>
External Locator - Front & Right Side Views .....	1-5	System Block Diagram .....	B-2
External Locator - Left Side & Rear View .....	1-6	Processor 1/7 .....	B-3
External Locator - Bottom View .....	1-7	Processor 2/7 .....	B-4
Mainboard Overview - Top (Key Parts) .....	1-8	Processor 3/7 .....	B-5
Mainboard Overview - Bottom (Key Parts) .....	1-9	Processor 4/7 .....	B-6
Mainboard Overview - Top (Connectors) .....	1-10	Processor 5/7 .....	B-7
Mainboard Overview - Bottom (Connectors) .....	1-11	Processor 6/7 .....	B-8
<b>Disassembly .....</b>	<b>2-1</b>	Processor 7/7 .....	B-9
Overview .....	2-1	DDR CHA SO-DIMM_0 .....	B-10
Maintenance Tools .....	2-2	DDR CHA SO-DIMM_1 .....	B-11
Connections .....	2-2	DDR CHB SO-DIMM_0 .....	B-12
Maintenance Precautions .....	2-3	DDR CHB SO-DIMM_1 .....	B-13
Disassembly Steps .....	2-4	Panel, Inverter .....	B-14
Removing the Keyboard .....	2-5	Mini DP Port E .....	B-15
Removing the Battery .....	2-6	Mini DP Port F + PS8330B .....	B-16
Removing the Hard Disk Drive .....	2-8	HDMI .....	B-17
Removing the System Memory (RAM) .....	2-10	VGA PCI Express .....	B-18
Removing the the M.2 SSD Module .....	2-13	VGA Frame Buffer Partition .....	B-19
Removing the Wireless LAN Module .....	2-15	Frame Buffer Partition A .....	B-20
Wireless LAN, Combo Module Cables .....	2-16	Frame Buffer Partition B .....	B-21
Removing the M.2 SATA Module .....	2-17	Frame Buffer Partition A_B .....	B-22
<b>Part Lists .....</b>	<b>A-1</b>	GPU Frame Buffer Partition .....	B-23
Part List Illustration Location .....	A-2	Frame Buffer Partition C .....	B-24
Top .....	A-3	Frame Buffer Partition D .....	B-25
Bottom .....	A-4	Frame Buffer Partition C_D .....	B-26
		GPU Decoupling 1 .....	B-27

## Preface

---

GPU Decoupling 2 .....	B-28	Fan, LID, KB LED .....	B-60
Straps & XTAL .....	B-29	Connector .....	B-61
IFP I/O Interface .....	B-30	DDR 1.2V / 0.6VS .....	B-62
Misc - GPIO, I2C and ROM .....	B-31	VDD3, VDD5 .....	B-63
NVIDIA Power Sequence .....	B-32	5V, 5VS, 3.3V, 3.3VS, 3.3VA .....	B-64
GPIO Level Shift .....	B-33	Power 1.0V, VCCIO .....	B-65
GPU NVVDD, FBVDDQ .....	B-34	AC_In, Charger .....	B-66
GPU GND .....	B-35	1.0DX_VCCSTG/VCCSFR_OC/2.5V .....	B-67
PCH 1/9 .....	B-36	1V8_RUN/AON, NV3V3 .....	B-68
PCH 2/9 .....	B-37	NVVDD Phase 1 & 2 .....	B-69
PCH 3/9 .....	B-38	NVVDD Phase 3~4 .....	B-70
PCH 4/9 .....	B-39	NVVDDS .....	B-71
PCH 5/9 .....	B-40	PEX_VDD .....	B-72
PCH 6/9 .....	B-41	FBVDDQ .....	B-73
PCH 7/9 .....	B-42	VCC_Core & VCCSA .....	B-74
PCH 8/9 .....	B-43	VCore Output Stage .....	B-75
PCH 9/9 .....	B-44	VCCGT .....	B-76
KBC IT8587 .....	B-45	VCCGT Output Stage .....	B-77
RGB KB Only .....	B-46	Audio Board P65_ESS_A 1/3 .....	B-78
USB Charger .....	B-47	Audio Board P65_ESS_A 2/3 .....	B-79
M.2 WiGig/WLAN + BT .....	B-48	Audio Board P65_ESS_A 3/3 .....	B-80
M.2 PCIE4X SSD .....	B-49	Audio Board P67_3DAMP_E .....	B-81
M.2 3G/LTE .....	B-50	P650RS Power Board .....	B-82
Realtek ALC898 .....	B-51	P650RS HDD Board .....	B-83
TPA2008D2 .....	B-52	P650RS LED Board .....	B-84
Subwoofer .....	B-53	P650RS FP Board .....	B-85
AR_TBT .....	B-54	P650RS Click Board .....	B-86
AR_Power .....	B-55	P650RS USB Board 1/3 .....	B-87
TPS65982 .....	B-56	P650RS USB Board 2/3 .....	B-88
TPS65982-1 .....	B-57	P650RS USB Board 3/3 .....	B-89
AR_Conn Type A/C .....	B-58	P670RS LED Board .....	B-90
TPM, CCD, TP .....	B-59	P670RS USB Board 1/2 .....	B-91



P670RS USB Board 2/2 ..... B-92

**Updating the FLASH ROM BIOS..... C-1**

Download the BIOS ..... C-1

Unzip the downloaded files to a bootable CD/DVD/ or

USB Flash drive ..... C-1

Set the computer to boot from the external drive ..... C-1

Use the flash tools to update the BIOS ..... C-2

Restart the computer (booting from the HDD) ..... C-2




# Chapter 1: Introduction

## Overview

This manual covers the information you need to service or upgrade the **P670HS(-G) / P671HS(-G)** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 10*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **P670HS(-G) / P671HS(-G)** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

## Introduction

# Specifications

### Latest Specification Information

The specifications listed in this section are correct at the time of going to press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for details.

### G-SYNC Support

G-SYNC is only supported if you have a G-SYNC capable display and a GTX series video adapter (contact your distributor or supplier for details).

### CPU Speed & Computer in DC Mode

Note that when the computer is in DC mode (powered by the battery only) the CPU may not run at full speed. This is a design feature implemented in order to protect the battery.

### SO-DIMM Memory Types

All SO-DIMM memory modules installed in the system should be identical (the same size and brand) in order to prevent unexpected system behavior.

Do not mix SO-DIMM memory module sizes and brands otherwise unexpected system problems may occur.

### Processor Options

#### i7-7820HK (2.90GHz)

8MB Smart Cache, 14nm, DDR4-2400MHz, TDP 45W

#### i7-7700HQ (2.80GHz)

6MB Smart Cache, 14nm, DDR4-2400MHz, TDP 45W

*Supports Intel® CPU over-clocking technology on i7-7820HK*

### Core Logic

Intel® HM175 Express Chipset

### LCD Options

17.3" (43.94cm), 16:9, FHD (1920x1080)

### BIOS

AMI BIOS (64Mb SPI Flash-ROM)

### Memory

Four 260 Pin SO-DIMM Sockets Supporting **DDR4 2400MHz** Memory

Memory Expandable from **8GB (minimum)** up to **64GB (maximum)**

Compatible with 4GB, 8GB or 16GB Modules

*Supports XMP 2666MHz (XMP support depends on processor)*

### Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel PTT for Systems Without TPM Hardware

(**Factory Option**) TPM 2.0

(**Factory Option**) Fingerprint Reader Module

### Video Adapter Options

**Microsoft Hybrid Graphics Mode or Discrete Graphics Mode**

Supports up to 4 Active Displays

Supports NVIDIA Surround View via HDMI x 1 and MiniDP x2

### Intel Integrated GPU

#### Intel® HD Graphics 630

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®12 Compatible

### NVIDIA® Discrete GPU

#### NVIDIA® GeForce GTX 1070

8GB GDDR5 Video RAM

Microsoft DirectX®12 Compatible

Supports GPU Overclocking

### Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

### Keyboard

(**Factory Option**) **Full Color Illuminated** Full-size Winkey Keyboard (with numeric keypad)

Or

(**Factory Option**) Full-size **Illuminated White LED** Winkey Keyboard (with numeric keypad)

**Storage**

(**Factory Option**) Two **SATA** M.2 2280 SSDs supporting RAID level 0/1

Or

(**Factory Option**) One **PCIe Gen3 x4** M.2 2280 SSD

Two Changeable 2.5" (6cm) **SATA** (Serial) Hard Disk Drives (HDDs)/SSDs (**1st: 7.0mm (h) & 2nd: 7.0mm/9.5mm (h)**) supporting RAID Level 0/1

**Audio**

High Definition Audio Compliant Interface

S/PDIF Digital Output

Two Speakers

Sound Blaster Audio

ESS™ SABRE HIFI DAC for High Resolution Headphone Audio

Built-In Array Microphone

Sub-Woofer

**Note:** External 5.1CH Audio Output Supported by Line-Out, Microphone-In and Headphone & S/PDIF Out Combo Jacks

**Interface**

Two USB 3.1 Gen 2 Type C Ports

Three USB 3.0 (USB 3.1 Gen 1) Ports (Including one AC/DC Powered USB port)

Two Mini DisplayPorts (1.3)

One HDMI-Out Port

One 2-In-1 Audio Jack (Headphone & S/PDIF Optical Output Combo Jack)

One Microphone-In Jack

One Line-Out Jack

One RJ-45 LAN Jack

One DC-In Jack

**Communication**

Built-In Gigabit Ethernet LAN

2.0M FHD PC Camera Module

**WLAN/ Bluetooth M.2 Modules:**

(**Factory Option**) Intel® Wireless-AC 8265 Wireless LAN (**802.11ac**) + Bluetooth **4.1**

(**Factory Option**) Intel® Wireless-AC 3168 Wireless LAN (**802.11ac**) + Bluetooth **4.0**

(**Factory Option**) Qualcomm® Atheros Killer™ Wireless-AC 1535 Wireless LAN (**802.11ac**) + Bluetooth **4.1**

**Card Reader**

Embedded Multi-In-1 Push-Push Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC/ SDXC

**M.2 Slots**

Slot 1 for **Combo WLAN and Bluetooth** Module

Slot 2 for **SATA** or **PCIe Gen3 x4 SSD**

Slot 3 for **SATA SSD**

**M.2 SSD Limitation**

When slot 3 has an M.2 SATA SSD installed, then slot 2 will not be available for M.2 PCIe SSDs.

**Features**

Supports NVIDIA G-SYNC Technology in dGPU Mode (G-SYNC is only supported if you have a G-SYNC capable display and a GTX series video adapter)

Virtual Reality Ready

**Environmental Spec****Temperature**

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

**Relative Humidity**

Operating: 20% - 80%

Non-Operating: 10% - 90%

**Power**

Embedded 4-Cell Polymer Battery Pack, 60WH

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19.5V, 11.8A (**230W**)

**Dimensions & Weight**

417mm (w) \* 287mm (d) \* 29.98mm (h)


3.2kg (Barebone with 60WH Battery)

## Introduction

Figure 1  
Top View

1. PC Camera
2. \*PC Camera LED  
*\*When the PC camera is in use, the LED will be illuminated in red.*
3. Built-In Microphone
4. LCD
5. Power Button
6. Speakers
7. Keyboard
8. Touchpad & Buttons
9. Fingerprint Reader (Optional)

## External Locator - Top View with LCD Panel Open

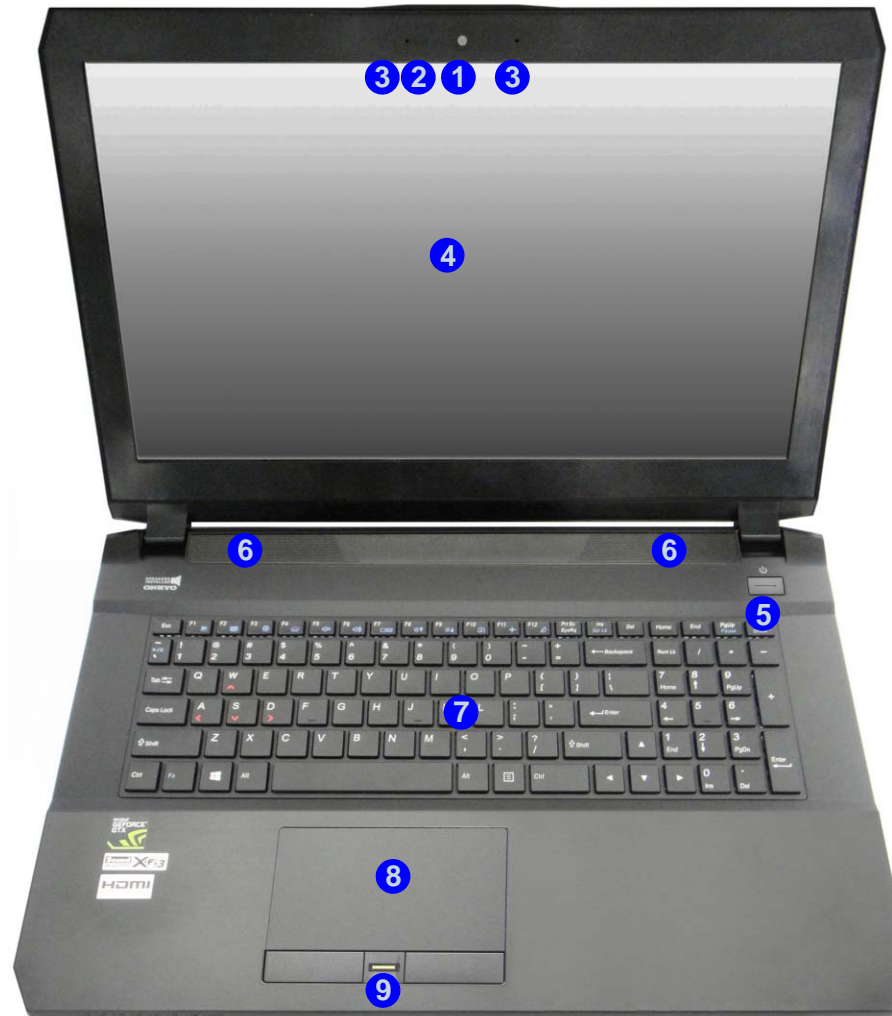

## External Locator - Front & Right Side Views

FRONT VIEW



RIGHT SIDE VIEW



*Figure 2*  
**Front View**

1. LED Indicator

*Figure 3*  
**Right Side View**

1. Headphone & S/PDIF Combo Jack
2. Microphone-In Jack
3. Line-Out Jack
4. Multi-in-1 Card Reader
5. USB 3.0 Port
6. RJ-45 LAN Jack
7. Security Lock Slot

## Introduction

### External Locator - Left Side & Rear View

*Figure 4*  
**Left Side View**

1. Vent
2. Mini Display Port
3. USB 3.1 Gen 2 Type C Ports
4. USB 3.0 Port
5. Powered USB 3.0 Port

LEFT SIDE VIEW



*Figure 5*  
**Rear View**


1. Vent
2. DC-In Jack
3. HDMI-Out Port
4. Mini Display Port

REAR VIEW





## External Locator - Bottom View

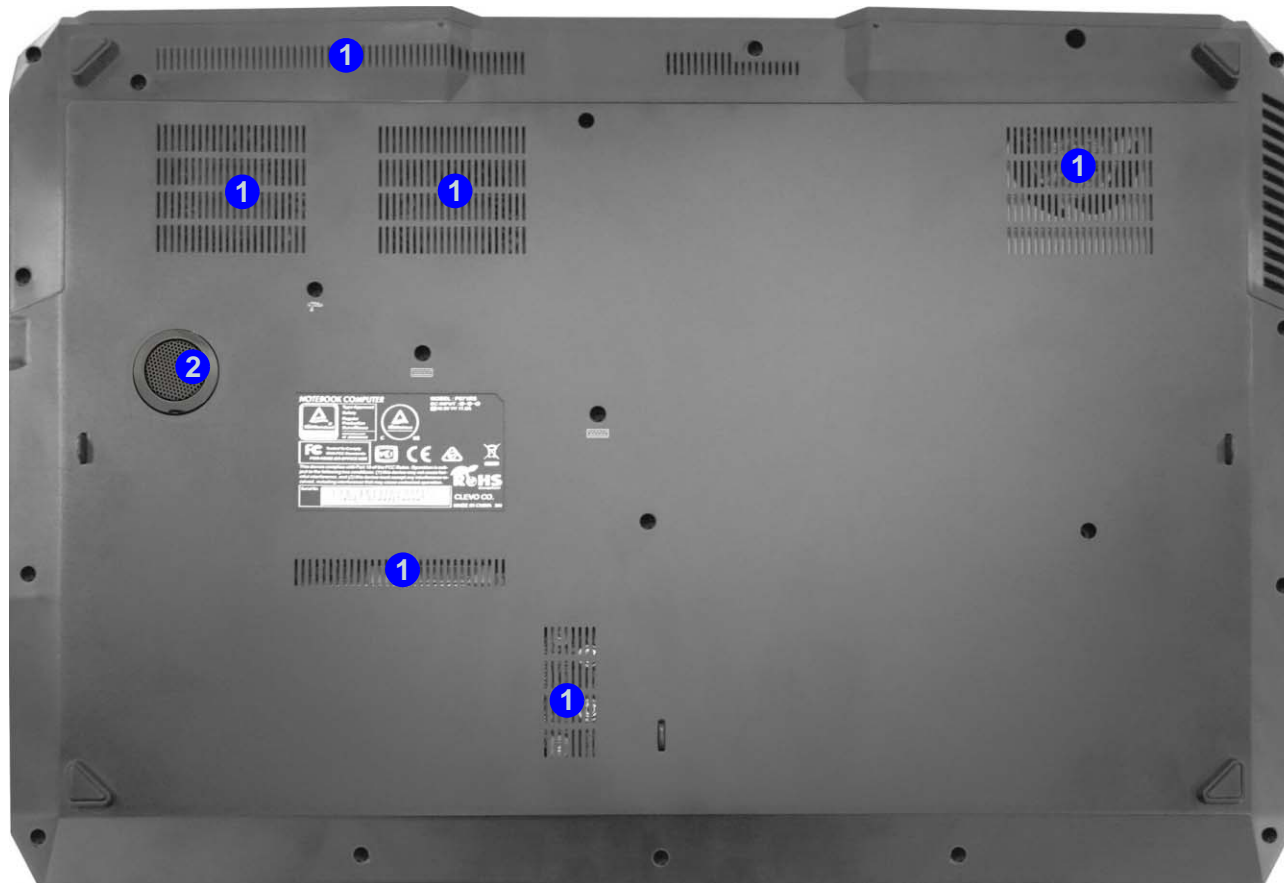

*Figure 6*  
**Bottom View**

1. Vent
2. Sub Woofer



### Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

## Introduction


*Figure 7*  
**Mainboard Top  
Key Parts**

1. Memory Slots  
DDR4 SO-DIMM
2. CMOS Battery

## Mainboard Overview - Top (Key Parts)

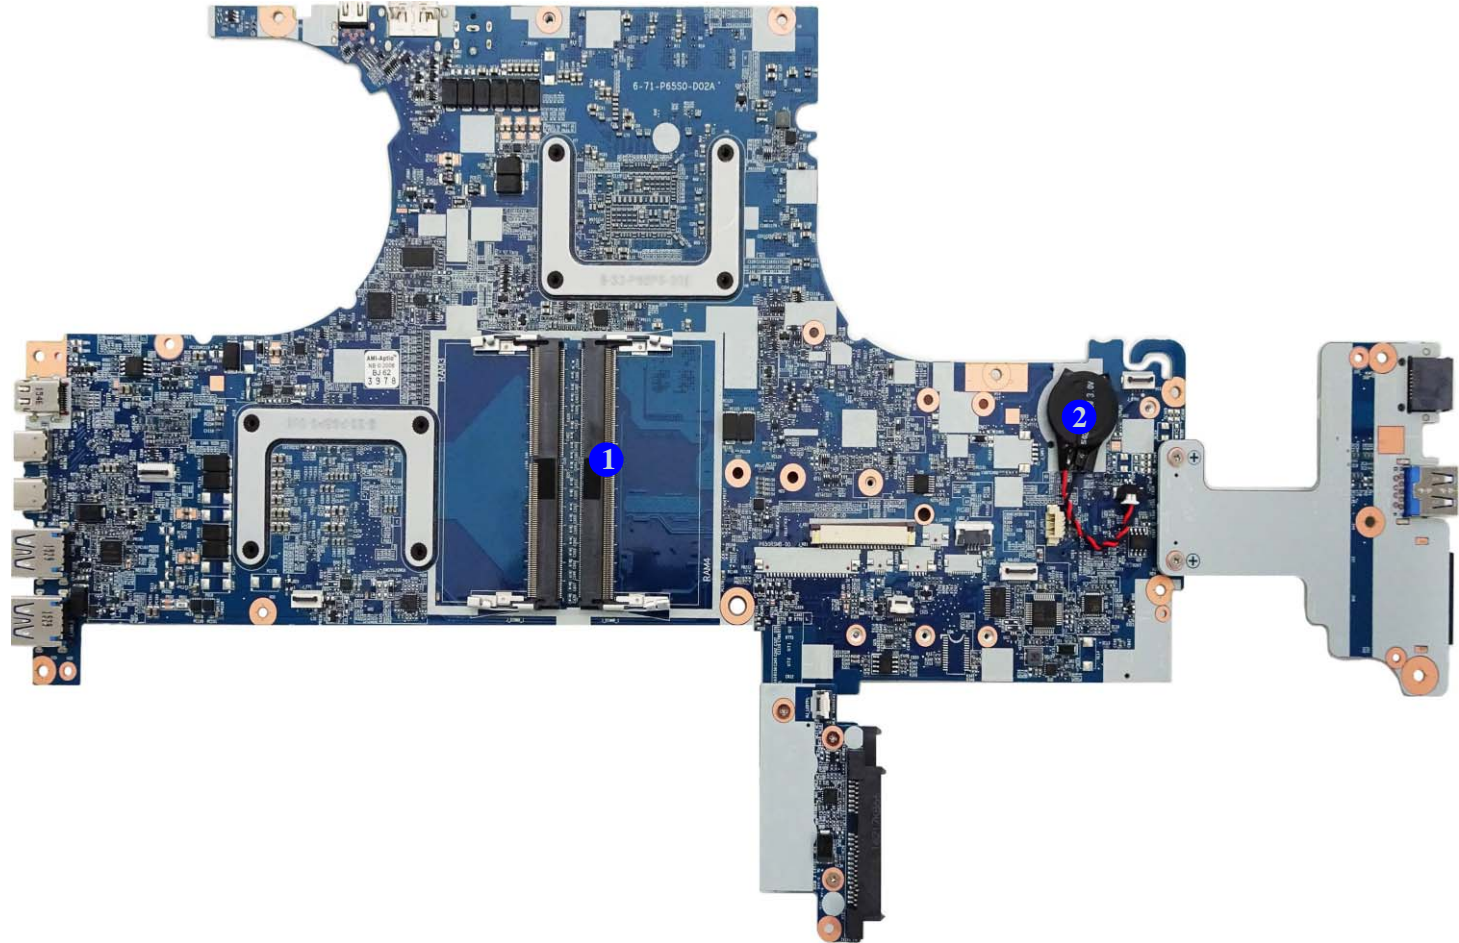

## Mainboard Overview - Bottom (Key Parts)

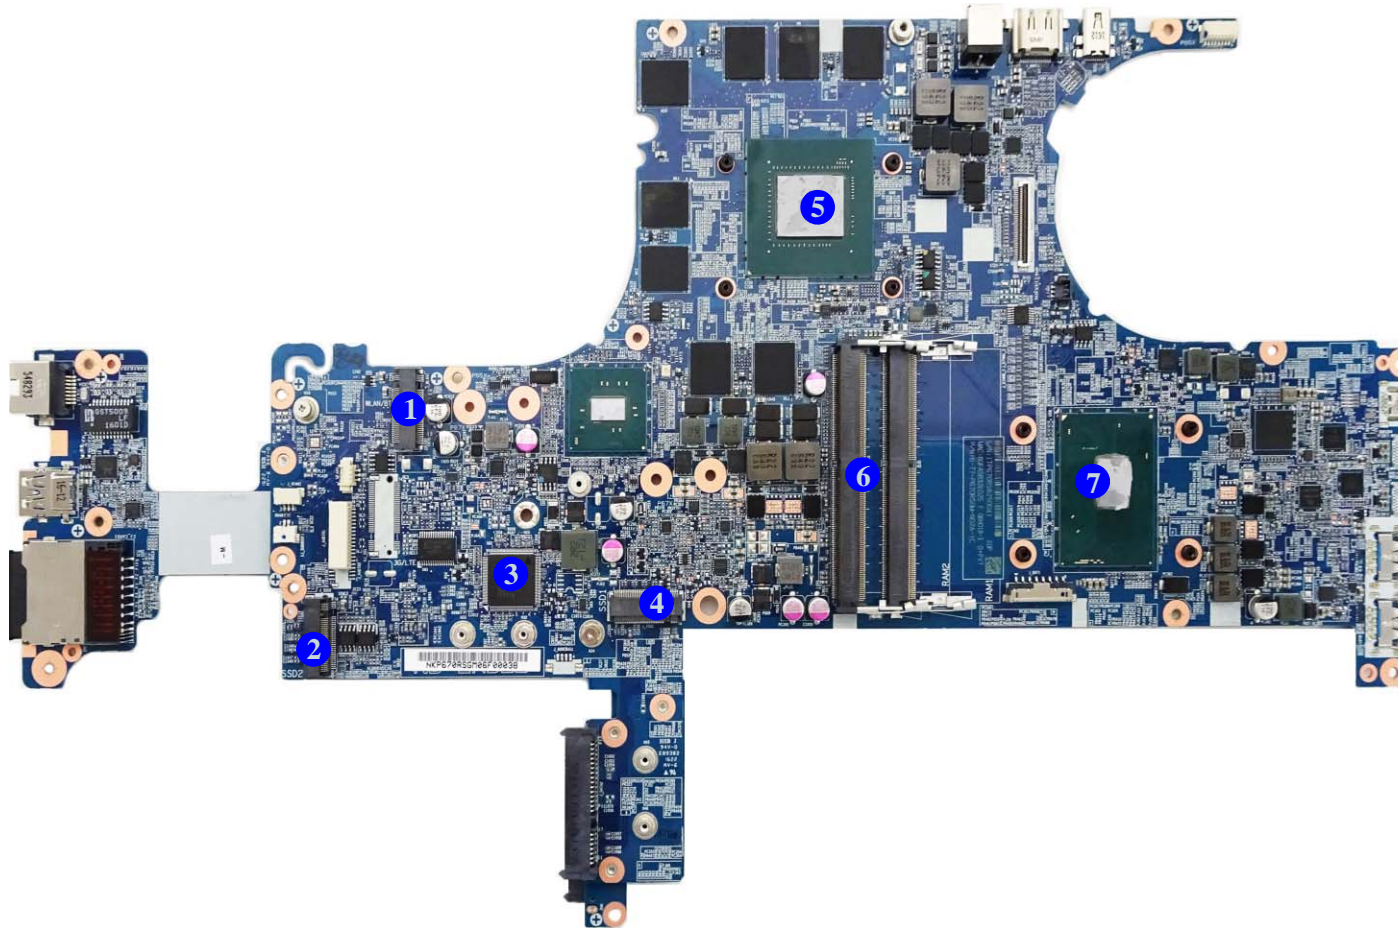

*Figure 8*  
**Mainboard Bottom  
Key Parts**

1. Mini-Card Connector (WLAN Module)
2. Mini-Card Connector (M.2 SATA Module)
3. KBC-ITE IT8587
4. Mini-Card Connector (M.2 PCIE/SATA SSD Module)
5. GPU-GTX1070
6. Memory Slots (DDR4 SO-DIMM)
7. CPU




## Introduction


*Figure 9*  
**Mainboard Top  
Connectors**

1. Mini Display Port
2. USB Port 3.1  
Connector
3. USB Port 3.0  
Connector
4. Powered USB  
Port 3.0  
Connector
5. Keyboard Cable  
Connector
6. TP Connector
7. Speaker  
Connector
8. HDD Connector

## Mainboard Overview - Top (Connectors)

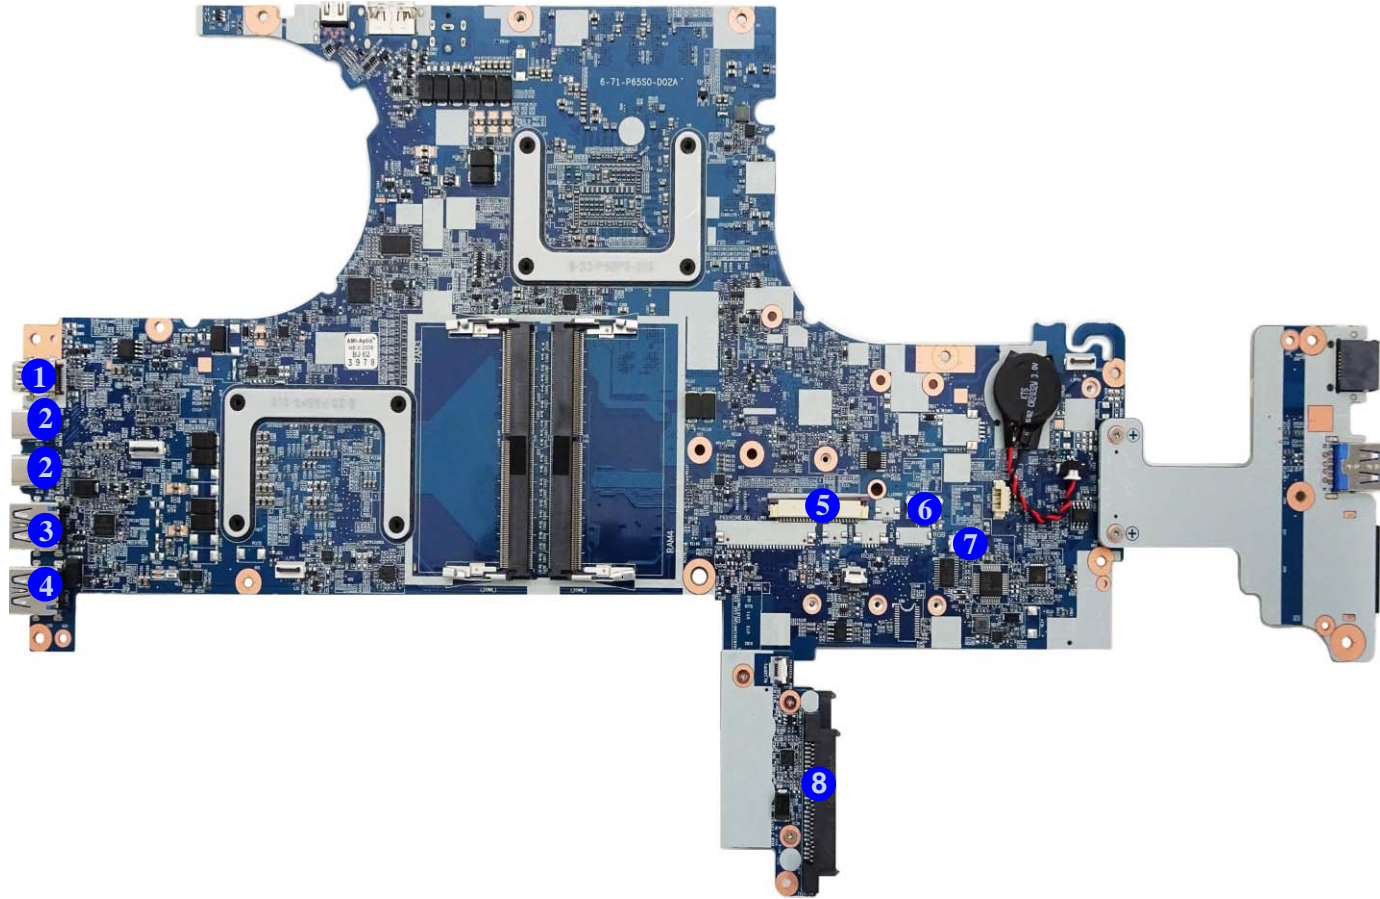

## Mainboard Overview - Bottom (Connectors)

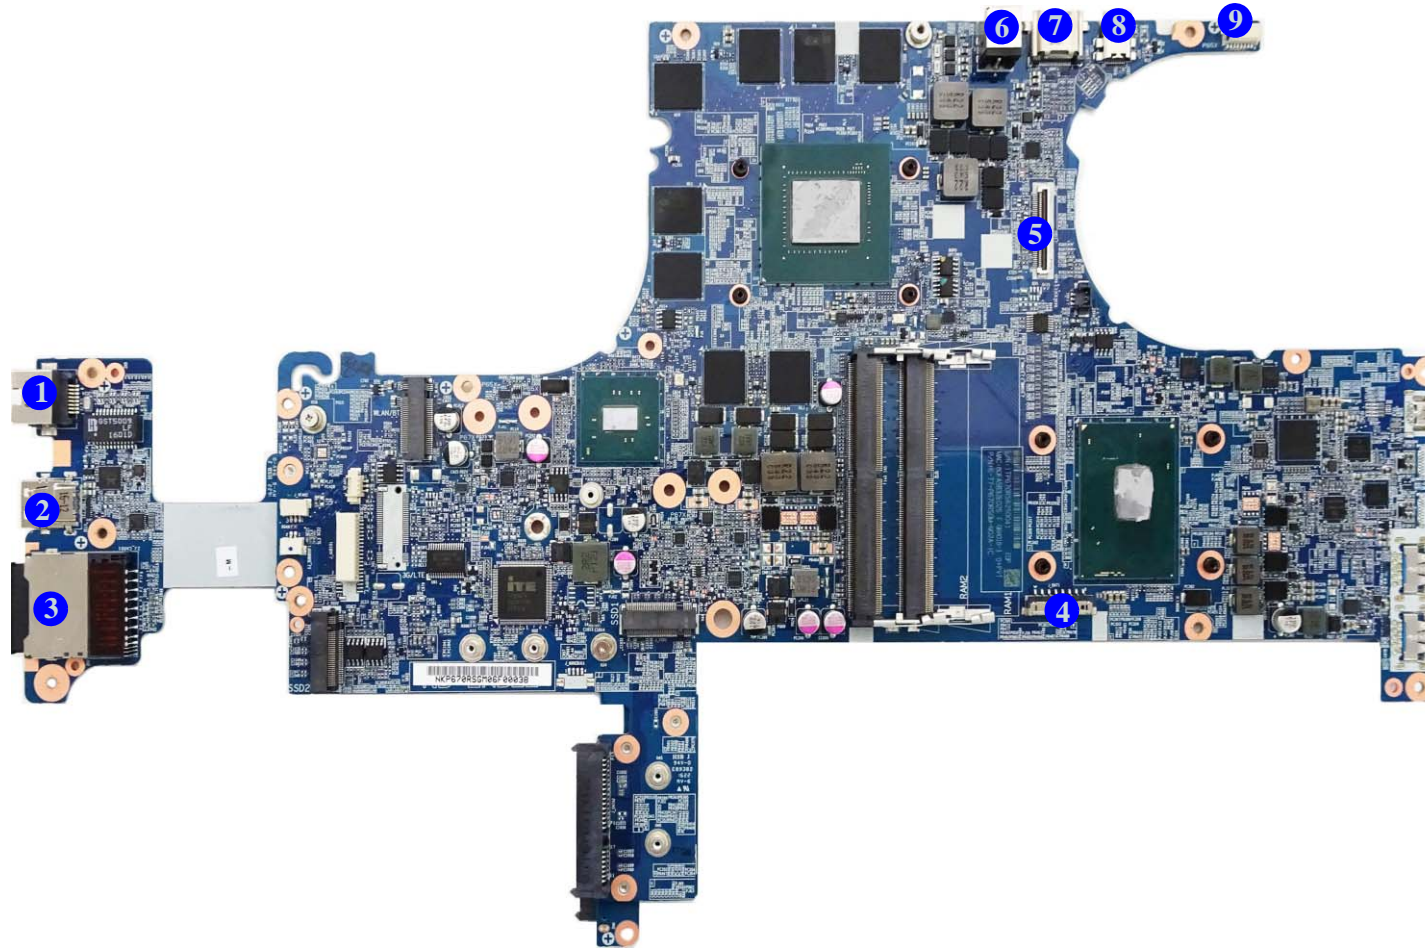

*Figure 10*  
**Mainboard Bottom  
Connectors**

1. RJ-45 LAN Jack
2. USB Port 3.0 Connector
3. Multi-in-1 Card Reader
4. Battery Connector
5. LCD Cable Connector
6. DC-In Jack
7. HDMI-Out Port
8. Mini Display Port
9. CCD Connector










# Chapter 2: Disassembly

## Overview

This chapter provides step-by-step instructions for disassembling the *P670HS(-G) / P671HS(-G)* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.



## Disassembly

---

**NOTE:** All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

### Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

### Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

## Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
  - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
  - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

## Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

### Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

#### To remove the Keyboard:

1. Remove the keyboard *page 2 - 5*

#### To remove the Battery:

1. Remove the battery *page 2 - 6*

#### To remove the HDD:

1. Remove the battery *page 2 - 6*
2. Remove the HDD *page 2 - 8*

#### To remove the System Memory:

1. Remove the battery *page 2 - 6*
2. Remove the system memory *page 2 - 10*

#### To remove the M.2 SSD Module:

1. Remove the battery *page 2 - 6*
2. Remove the M.2 SSD *page 2 - 13*

#### To remove the Wireless LAN Module:




1. Remove the battery *page 2 - 6*
2. Remove the WLAN *page 2 - 15*

#### To remove the M.2 SATA Module:

1. Remove the battery *page 2 - 6*
2. Remove the M.2 SATA *page 2 - 17*

## Removing the Keyboard

1. Turn **off** the computer, turn it over.
2. Remove screws **1** - **2** from the bottom of the computer.
3. Open it up with the LCD on a flat surface before pressing at point **3** to release the keyboard module (use the special eject stick **4** to do this) while releasing the keyboard in the direction of the arrow **5** as shown (**Figure 1a**).
4. Carefully lift the keyboard **6** up, being careful not to bend the keyboard ribbon cable **7**. Disconnect the keyboard ribbon cable **7** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **8** away from the base (**Figure 1b**).
5. Carefully lift the keyboard **6** off the computer (**Figure 1c**).

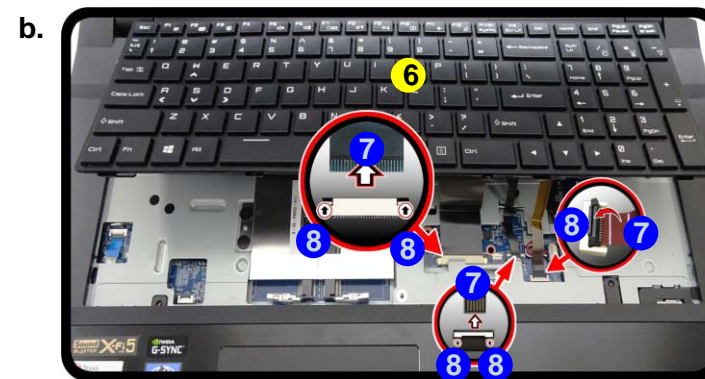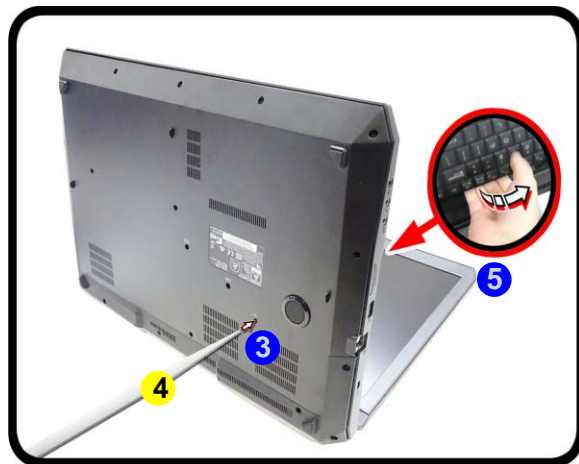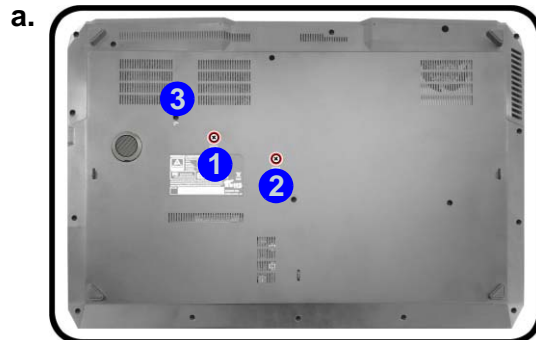

*Figure 1*  
**Keyboard Removal**

- a. Remove screws from the bottom of the computer and then eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.
- b. Lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
- c. Remove the keyboard.



### Re-inserting the Keyboard

When re-inserting the keyboard firstly, align the keyboard tabs at the bottom of the keyboard with the slots in the case.



4. Eject Stick
6. Keyboard

- 2 Screws


## Disassembly

*Figure 2*  
**Battery Removal**

- Remove the SD card cover and screws.
- Remove the screws at the rear of the computer.
- Remove the bottom case to locate the battery.

## Removing the Battery

- Turn the computer off, and turn it over.
- Remove the SD card cover **1** and screws **2** - **20** (*Figure 2a*).
- Carefully lift the bottom case **21** up in the direction of the arrow **22** and remove it (*Figure 2b*).
- The battery will be visible at point **23** on the computer (*Figure 2c*).

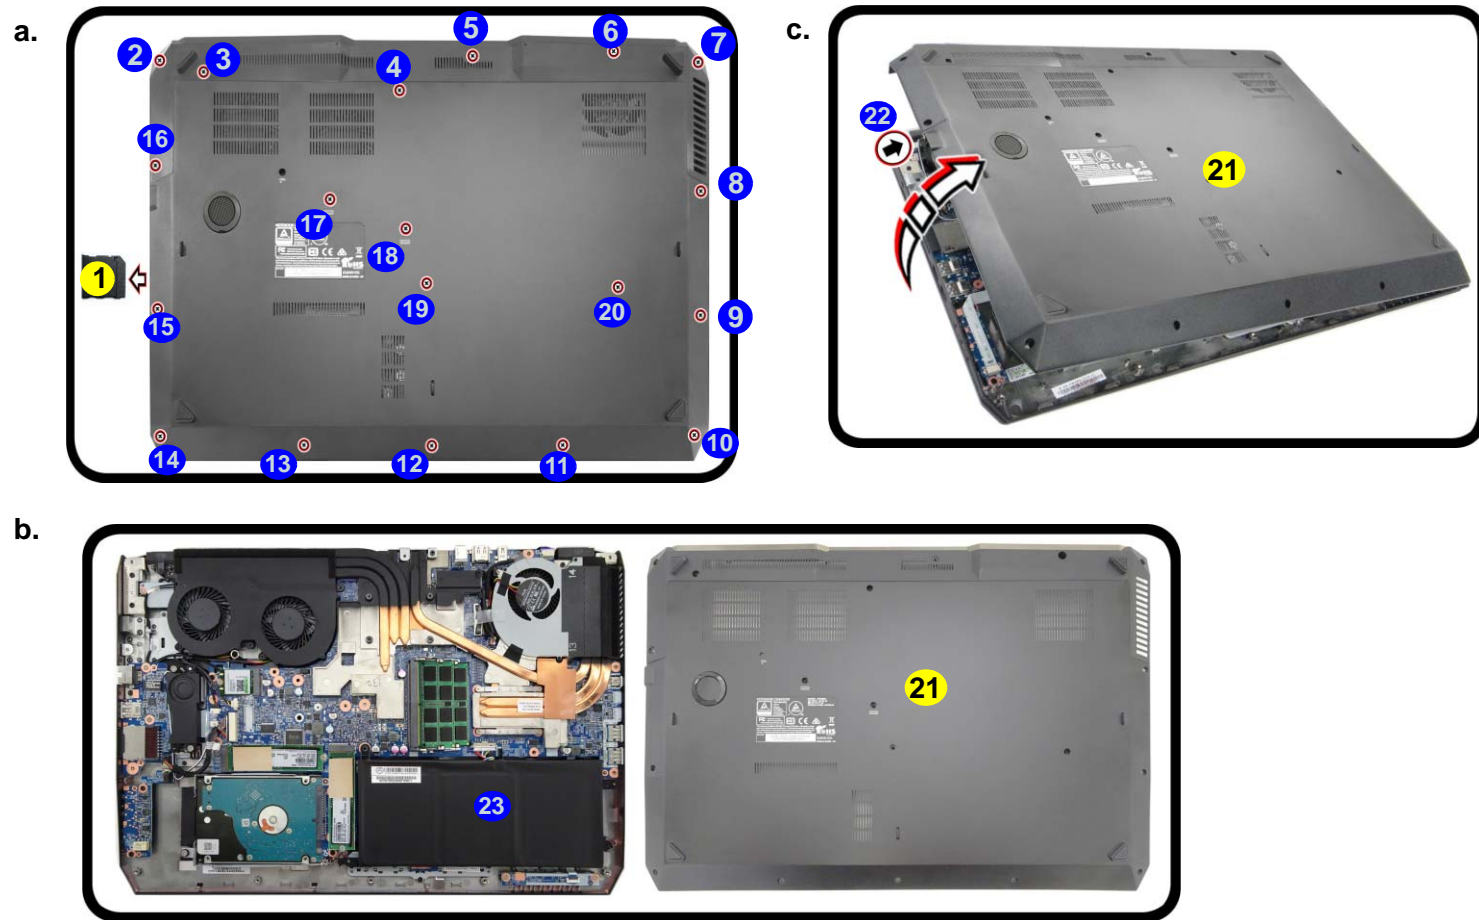


1. SD Card Cover  
21. Bottom Case

- 19 Screws



- Carefully disconnect the cable **24**, then remove screws **25** - **28** (*Figure 3d*).
- Lift the battery **28** off the computer (*Figure 3e*).
- Reinsert the bottom case starting from point **29** as shown (*Figure 3f*) to avoid damaging the rear eSATA/USB 3.0 port. Tighten the screws to secure the bottom case in place.

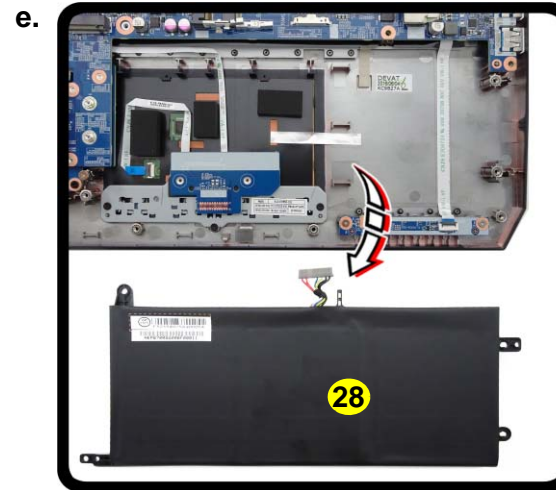

*Figure 3*  
**Battery Removal**  
(cont'd.)

- Disconnect the cable and remove the screws.
- Lift the battery off the computer.
- Reinsert the bottom case and tighten the screws.



28. Battery

- 4 Screws

*Figure 4*  
**HDD Assembly  
Removal**


- Locate the HDD.
- Remove the screws.

## Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm or 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

### Hard Disk Disassembly Process

- Turn **off** the computer, and remove the battery ([page 2 - 6](#)).
- The HDD will be visible at point **1** on the mainboard ([Figure 4a](#)).
- Remove screws **2** - **4** from the HDD assembly ([Figure 4b](#)).

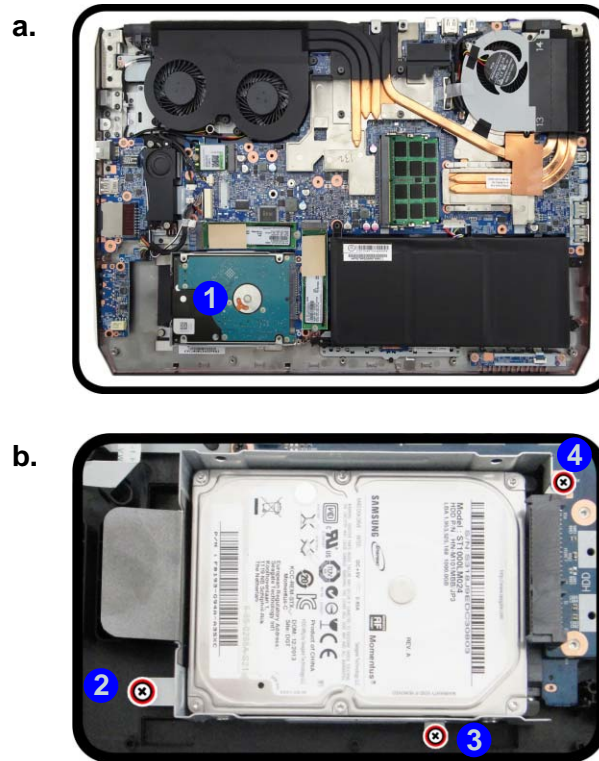

### HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

6. Hard Disk



- 3 Screws




4. Carefully pull the hard disk assembly in the direction of arrow 5 (Figure 5c).
5. Lift the hard disk assembly 6 out of the bay 7 (Figure 5d).
6. Remove screws 8 - 11 and bracket 12 from the hard disk 13 (Figure 5e).
7. Reverse the process to install a new hard disk (do not forget to replace the screws).

Figure 5  
HDD Assembly  
Removal (cont'd.)

- c. Pull the HDD in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and bracket from the HDD.

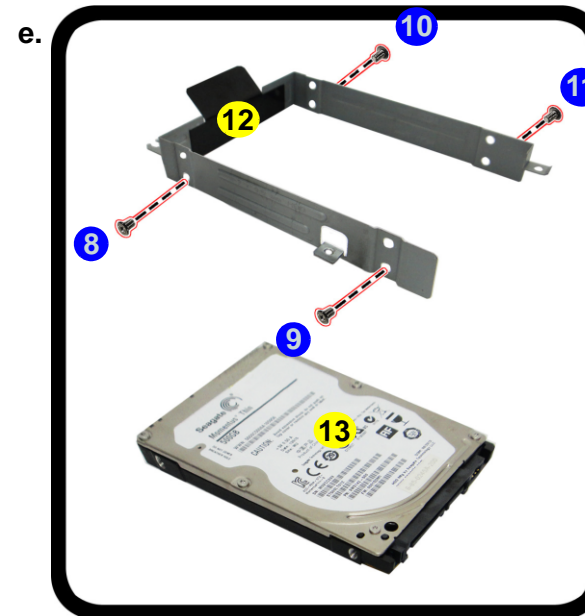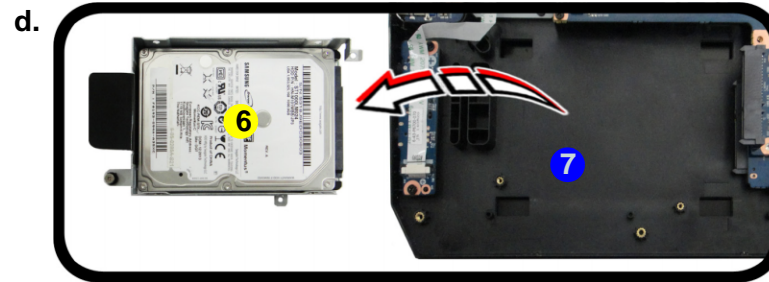




**Installing 9.5mm or 7mm HDD**

Note that the hard disks pictured on the following pages are all 7mm(h) hard disk drive.

In some cases 9.5mm(h) hard disk drives will be installed. It can be installed on either upper or lower slot.

There are two hard disk drive options:  
**Two** changeable 2.5" (6cm) **7.0mm** (h) **SATA** (Serial) Hard Disk Drives/Solid State Drives (SSD) supporting RAID level 0/1  
 Or  
**One** changeable 2.5" (6cm) **9.5mm** (h) **SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)

For more information, contact your distributor/supplier, and bear in mind your warranty terms.



6. HDD Assembly  
 12. HDD Bracket  
 13. HDD

- 4 Screws

## Disassembly

*Figure 6*  
**RAM-1 Module Removal**


- The RAM modules will be visible at point ①.
- Remove the screws and lift the shielding plate out.

## Removing the System Memory (RAM)

The computer has two memory sockets for 260 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR4 2133/2400 MHz. The main memory can be expanded up to 64GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

### Memory-1 Upgrade Process

- Turn **off** the computer, turn it over, remove the keyboard ([page 2 - 5](#)).
- The RAM modules will be visible at point ① after removing the shielding plate ([Figure 6a](#)).
- Remove screws ② - ⑤ and lift the shielding plate ⑥ off the computer ([Figure 6b](#)).

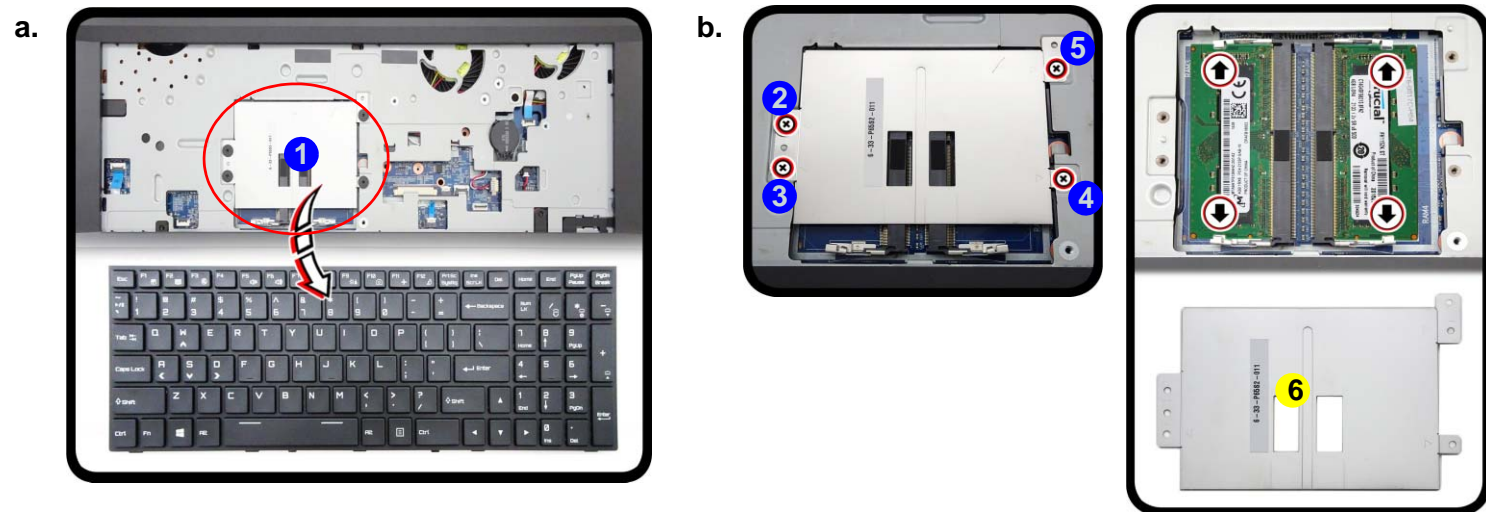

#### Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.





#### 6. RAM Shielding Plate

- 4 Screws

- Gently pull the two release latches (7 & 8) on the sides of the memory socket in the direction indicated by the arrows (Figure 8c). The RAM module 9 will pop-up (Figure 8d), and you can then remove it.
- Pull the latches to release the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.

Figure 7  
RAM-1 Module  
Removal (cont'd)

- Pull the release latches.
- Remove the module.

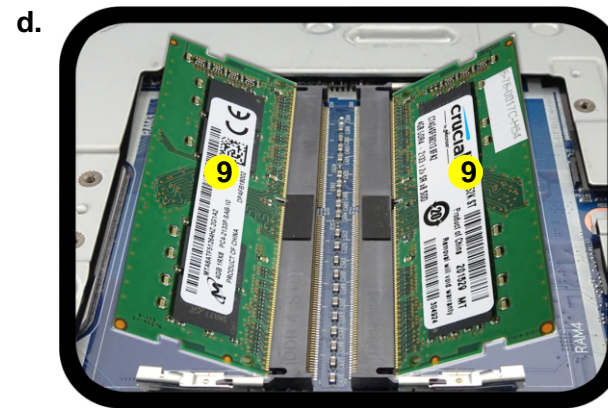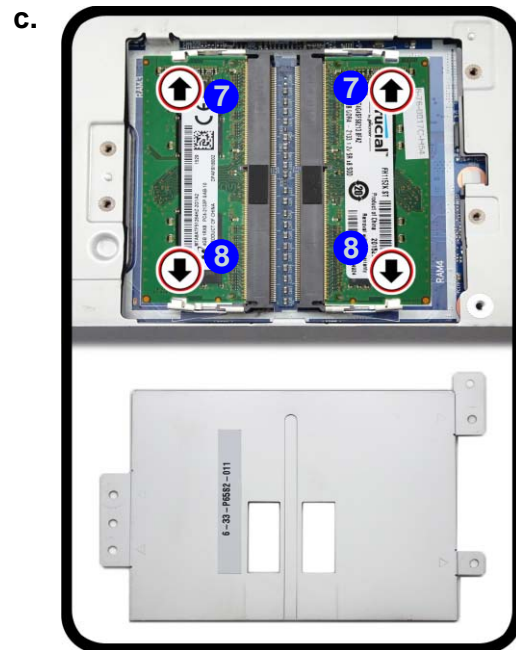

### Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



9. RAM Module

## Disassembly

*Figure 8*  
**RAM-2 Module Removal**

- The RAM modules will be visible at point **1** on the mainboard.
- Pull the release latches.
- Remove the module.



### Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



### 4. RAM Module

## Memory-2 Upgrade Process

- Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
- The RAM-2 modules will be visible at point **1** on the mainboard ([Figure 8a](#)).
- Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 8b](#)). The RAM module **4** will pop-up ([Figure 8c](#)), and you can then remove it.
- Pull the latches to release the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
- Replace the bottom cover and the screws (see [page 2 - 6](#)).
- Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

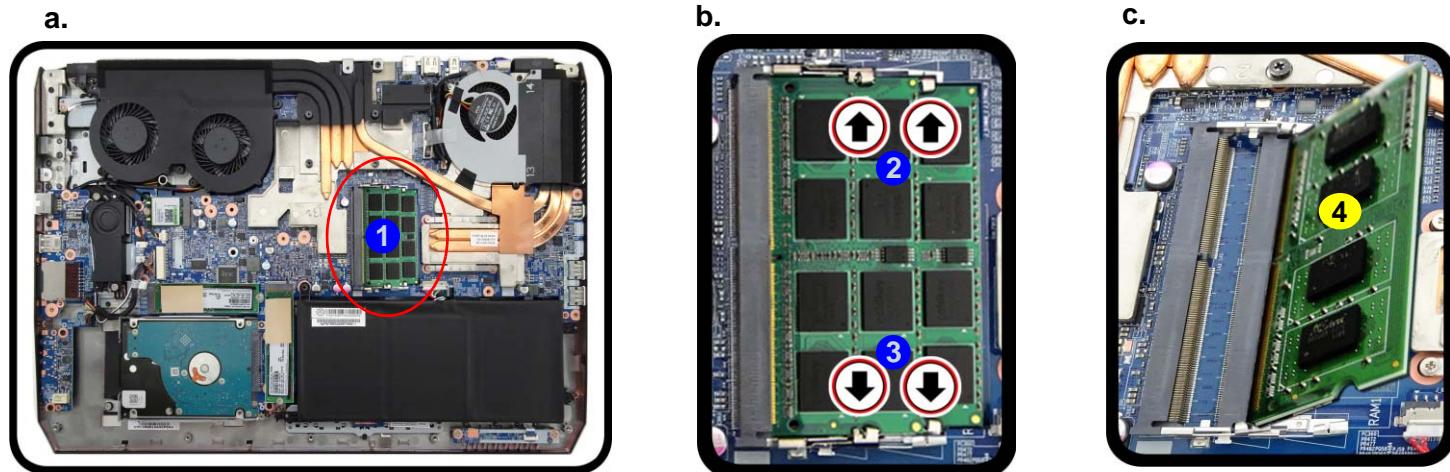




# Removing the the M.2 SSD Module


## M.2 SSD-1 Removal Procedure

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
2. The SSD module will be visible at point **1** on the mainboard ([Figure 9a](#)).
3. Remove the screw **2** ([Figure 9b](#))
4. The SSD module **3** ([Figure 9c](#)) will pop-up, and you can remove it from the computer.


*Figure 9*  
**M.2 SSD-1 Module Removal**

- a. Locate the SSD.
- b. Remove the screw.
- c. The SSD module will pop up.

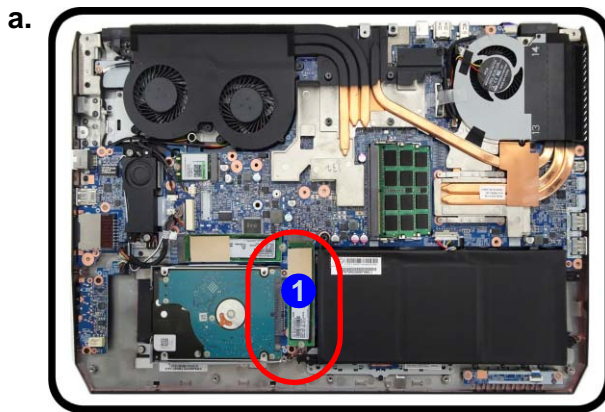

  
**PCI-E / SATA SSD Module**

PCI-E or SATA SSD module can only be installed in this connector.

  
**3.M.2 SSD Module**

- 1 Screw



## Disassembly

### Figure 10 M.2 SSD-2 Module Removal

- Locate the module.
- Disconnect the cables and remove the screw.
- The module will pop-up.
- Lift the module up off the socket.

### M.2 SSD-2 Removal Procedure

- Turn off the computer, remove the battery ([page 2 - 6](#)).
- Locate the module, it is visible at point **1** ([Figure 10a](#)).
- Remove the screw **2** from the module ([Figure 10b](#)).
- The module **3** will pop-up ([Figure 10c](#)).
- Lift the module **3** up and off the computer ([Figure 10d](#)).
- Reverse the process to install a new module.

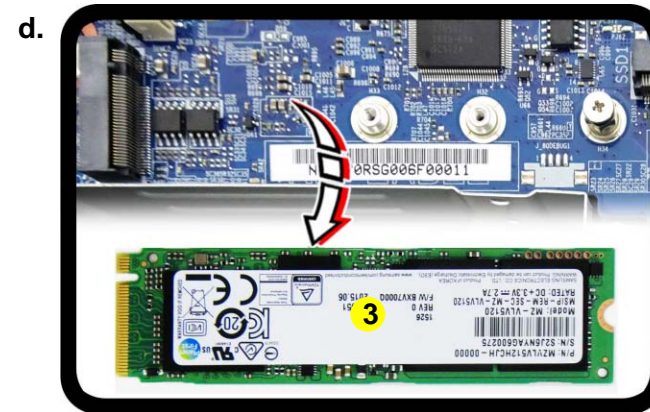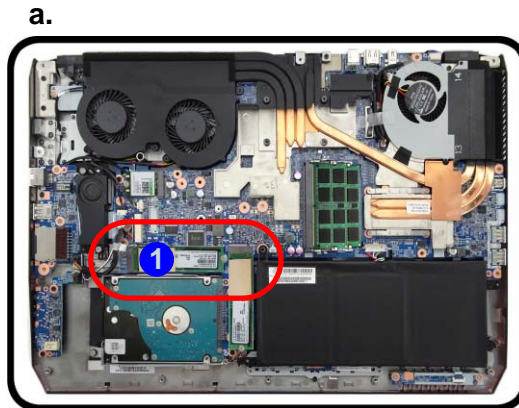

#### SATA SSD Module


Only SATA SSD module can be installed in this connector.

#### M.2 SSD Module

- 1 Screw

## Removing the Wireless LAN Module


1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
2. The Wireless LAN module will be visible at point **1** on the mainboard ([Figure 11a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** ([Figure 11b](#)).
4. The Wireless LAN module **5** ([Figure 11c](#)) will pop-up, and you can remove it from the computer.

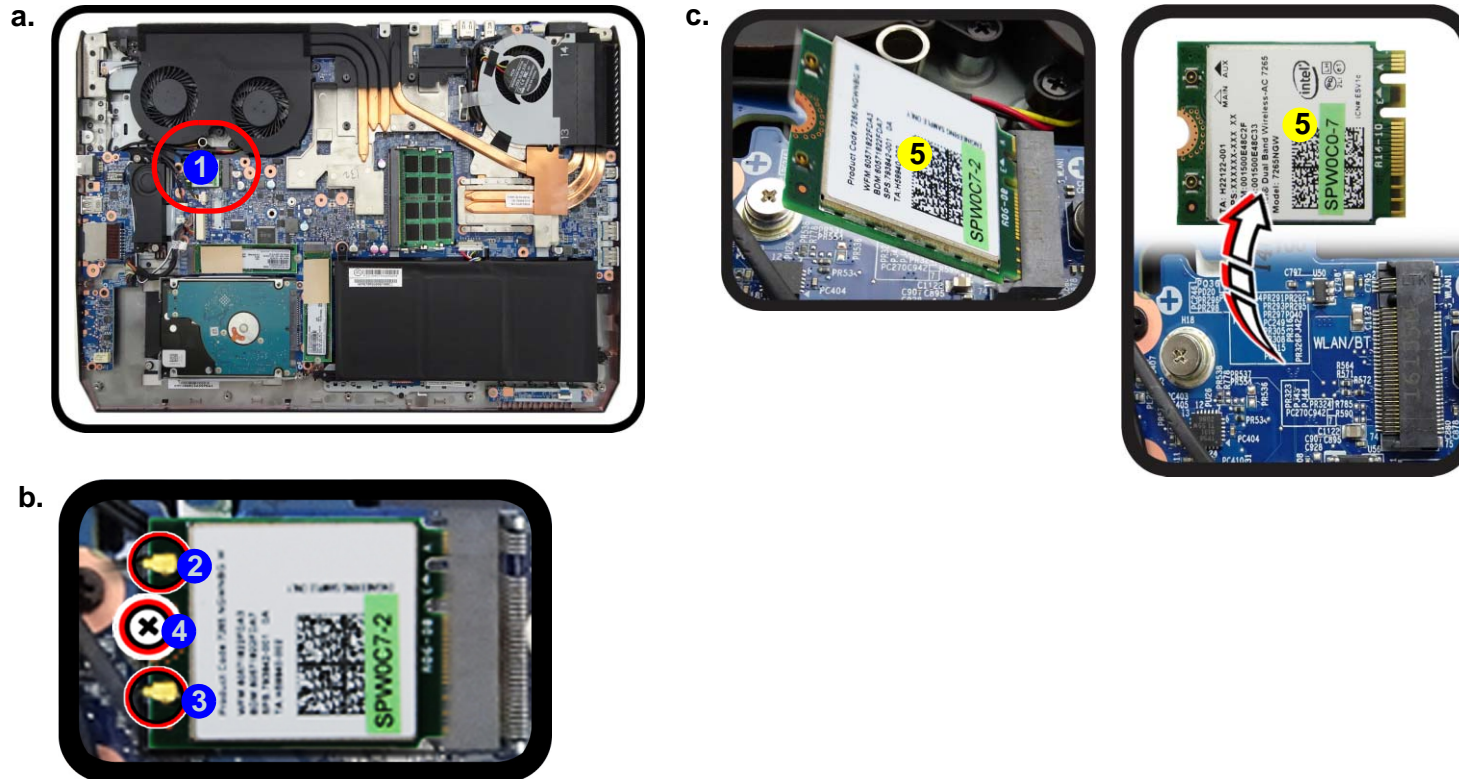

*Figure 11*  
**Wireless LAN  
Module Removal**

- Locate the WLAN.
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket ([Figure 11b](#)).



5. Wireless LAN Module

- 1 Screw

## Wireless LAN, Combo Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).







# Removing the M.2 SATA Module


## M.2 SATA-1 Removal Procedure


1. Turn **off** the computer, remove the battery ([page 2 - 6](#)).
2. Locate the module, it is visible at point **1** ([Figure 12a](#)).
3. Carefully remove the screw **2** from the module ([Figure 12b](#)).
4. The module **3** will pop-up ([Figure 12c](#)).
5. Lift the module **3** up and off the computer ([Figure 12d](#)).
6. Reverse the process to install a new module.

*Figure 12*  
**M.2 SATA-1 Module Removal**

- a. Locate the module.
- b. Remove the screw.
- c. The module will pop-up.
- d. Lift the module up off the socket.

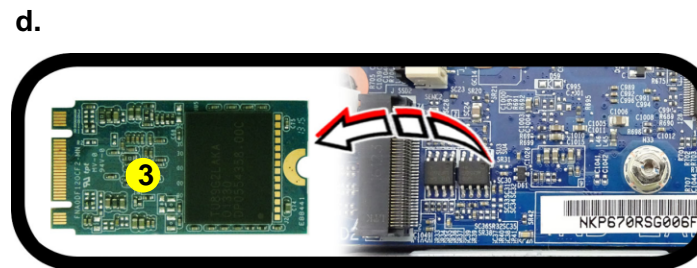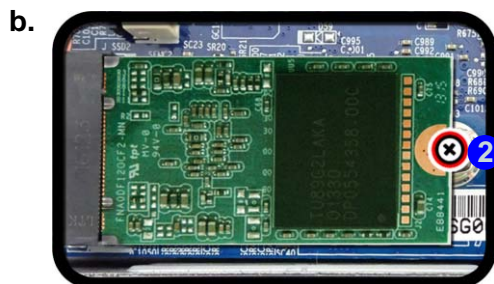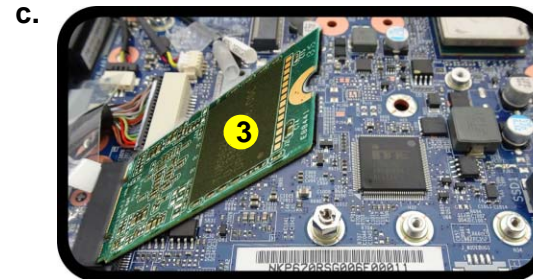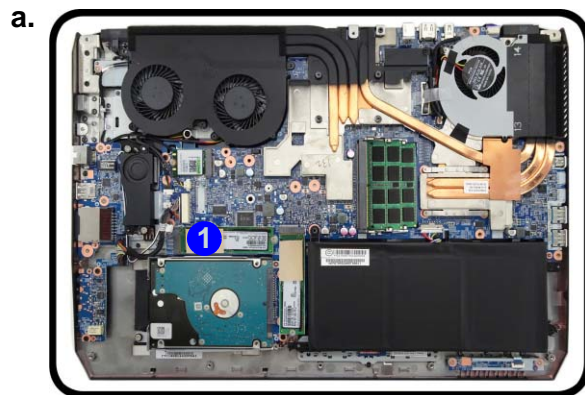

  
**SATA SSD Module**  
Only SATA SSD module can be installed in this connector.

  
**3. M2 SATA Module**  
• 1 Screw

## Disassembly



Figure 13

### M.2 SATA-2 Module Removal

- Locate the module.
- Disconnect the cables and remove the screw.
- The module will pop-up.
- Lift the module up off the socket.

### M.2 SATA-2 Removal Procedure

- Turn off the computer, remove the battery ([page 2 - 6](#)).
- Locate the module, it is visible at point **1** ([Figure 13a](#)).
- Remove the screw **2** from the module ([Figure 13b](#)).
- The module **3** will pop-up ([Figure 13c](#)).
- Lift the module **3** up and off the computer ([Figure 13d](#)).
- Reverse the process to install a new module.

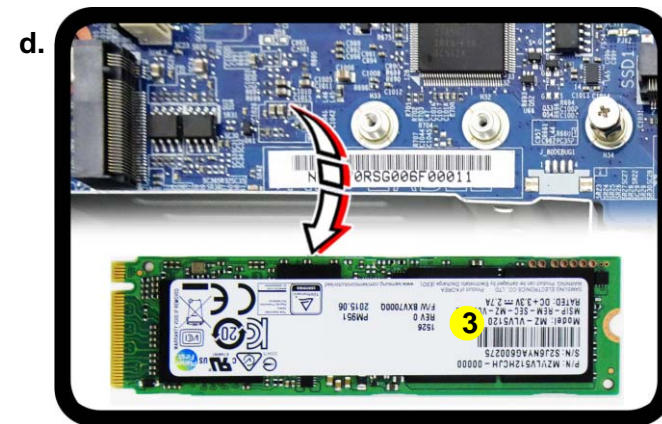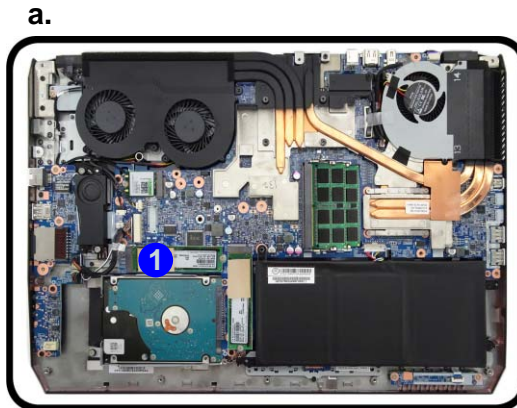

#### SATA SSD Module

Only SATA SSD module can be installed in this connector.

#### 3. M2 SATA Module

- 1 Screw

---

# Appendix A:Part Lists

This appendix breaks down the *P670HS(-G) / P671HS(-G)* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

**Note:** This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

**Note:** Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

**Note:** Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

---


## Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

*Table A - 1*  
**Part List Illustration  
Location**

Part	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
MB	<i>page A - 5</i>
HDD	<i>page A - 6</i>
LCD	<i>page A - 7</i>

# Top

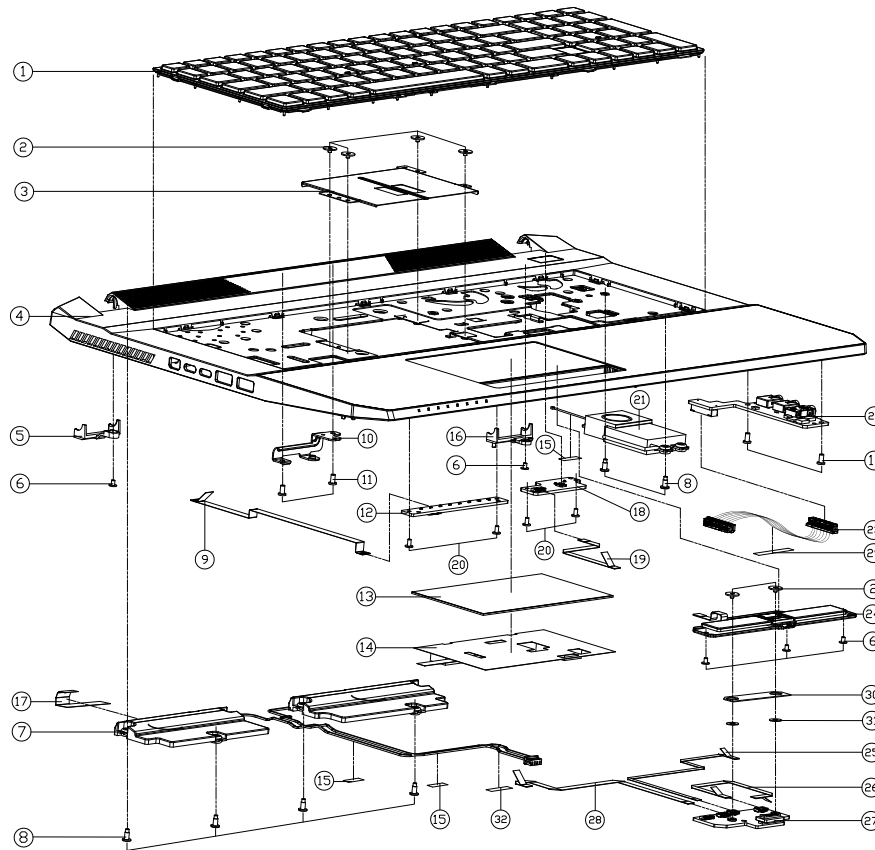


ITEM	PART NAME	PART NO	REMARK
1	WHITE BL. 0.10 USA W/ SERRATED FINISH, BLACK ISOLATION WITH VIBO KEY + 1.00 FRAME	6-80-P6500-013-1	
1	WHITE BL. 0.10 USA W/ SERRATED FINISH, BLACK ISOLATION WITH VIBO KEY + 1.00 FRAME	6-80-P6550-012-1	
2	SCREW M2x2L KI BK/Z ICT NY(08,T-0.6)	6-35-B6120-2RE	
3	DDR BRACKET(SUS304) P650RS	6-33-P65S2-012	
4	TOP CASE MODULE (INKYDOKKAPDK) P670RS	6-39-P67S2-012-N	
5	HINGE COVER L (SABIC C7230P-BK1C340) P670SG	6-42-P6702-0L1	
6	SCREW M2x3L KI BZ ICT NY (DD=04.5,DT=0.4)	6-35-B6120-3RD	
7	SPEAKABLE FRONT TALL 30x8 T3.2 2x 41 LEDGREEN L-26X3MM P-22.0MM P650E	6-23-SP650-0S1	
8	SCREW M2x6.2L NI ICT NY FDR SPEAKER	6-35-Z1120-6R2	
9	FFC CABLE LED TO MB (P-4S) 153MM 60V 12PIN P670RS	6-43-P6700-041-1	
10	TOP BKT L2 (SSECC , T=0.8MM) P670RS	6-33-P67S2-010	
11	SCREW M2.5x5L KI BK/Z ICT NY	6-35-B6125-SRA	
12	LED BOARD V2.0A P670RS	6-77-P67S4-D02A	
13	TOUCH PAD SYNAPTICS TM-63163-002 P650RS (0.08x6.5MM)	6-49-P65S3-010	
14	TP MYLAR BOTTOM ( PET MYLAR+3M467) P670RS	6-40-P67S2-040	
15	TAPE MYLAR TRANSPARENT (20x10x0.05) P180HM	6-40-P1803-020	
16	HINGE COVER R (SABIC C7230P-BK1C340) P670SG	6-42-P6702-0R1	
17	CONDUCTIVE CLOTH FDR SPEAKER P670RS-GM	6-47-P67S2-020-M	
18	POWER BOARD V2.0 P650RS	6-77-P65SC-D02	
19	FFC CABLE POWER TO MB (P-D) 92.5MM 60V 4PIN P670RS	6-43-P67S0-030-1	
20	SCREW M2x4L KI NI ICT NY (DD=04.5,DT=0.4)	6-35-B1120-4RE	
21	SPEAKABLE SUBWOOFER 26x40 25W 41 145MM NO GASKET P620RA P650E	6-23-SP15E-0W3	
22	ESS AUDIO BOARD V2.0B P650RS	6-77-P65S8-D02B	
23	WIRE CABLE FOR ESS AUDIO 85MM 50V 40 PIN P670RS	6-43-P67S0-060-1	
24	FUNCTION KEY FOR CLICK BUTTON MODULE W/O FINGER P650RE6	6-23-KP65R-022	FDR W/O FINGER
24	FUNCTION KEY FOR CLICK BUTTON MODULE W/FINGER P650RE6	6-23-KP65R-012	FDR W/FINGER
25	FFC CABLE TRANSFER TO MB (P-4S) 195.5MM 60V 6PIN P670RE6	6-43-P67R0-011	
26	FFC CABLE TP TO CLICK (P-4S) 105.0MM 60V 8PIN P650RE6	6-43-P65R0-021	
27	CLICK TRANSFER BOARD W/FP W24/FINGER SENSER BOARD V2.0M P650RS	6-77-P65SA-N02	FDR W/FINGER
27	CLICK TRANSFER BOARD (W/DFP) V2.0 P650RS	6-77-P65S2-D02-1	FDR W/O FINGER
28	FFC CABLE FINGER TO MB (P-D) 106.4MM 60V P670RS	6-43-P67S0-051-1	ONLY FDR FINGER
29	TAPE MYLAR (A),MYLAR M550J	6-40-M55J2-010	
30	CLICK W/O FP MYLAR PET (48x14x0.5T) P650SE	6-40-P6502-080	ONLY FDR W/O FINGER
31	TP NUT MYLAR PC P770ZM	6-40-P770S-010	ONLY FDR FINGER
32	TAPE MYLAR TRANSPARENT (30x5x0.05) W25HPQ	6-40-W25P3-010	

Figure A - 1  
Top

# Bottom

Figure A - 2  
Bottom

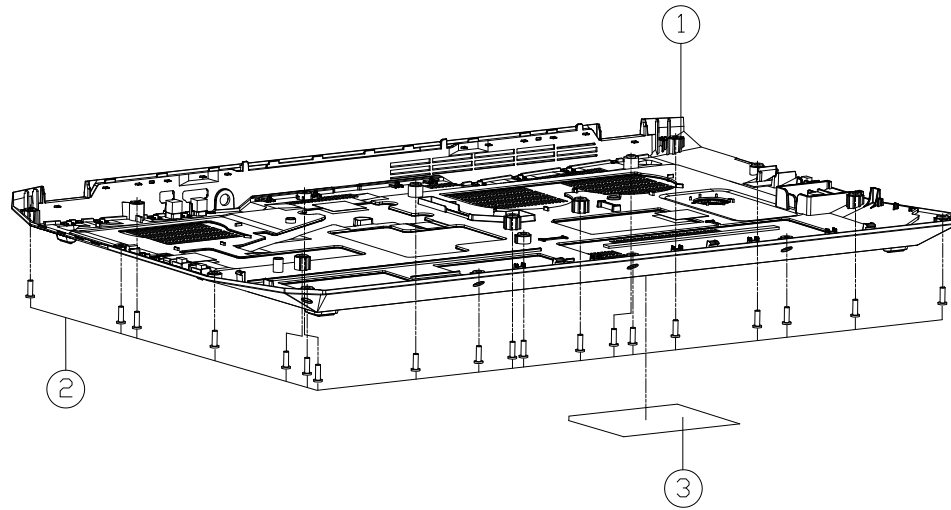


ITEM	PART NAME	PART NO	REMARK
1	(PRE-PROCESS) BOTTOM CASE MODULE P670RS	6-78-P670RS03-010	
1	(PRE-PROCESS) BOTTOM CASE MODULE P671RS	6-78-P671RS03-010	
1	(PRE-PROCESS) BOTTOM CASE MODULE + ID COVER RING P670RS-OM	6-78-P670RSG3-010-M	
1	(PRE-PROCESS) BOTTOM CASE MODULE P670RP6	6-78-P670RP63-010	
1	(PRE-PROCESS) BOTTOM CASE MODULE P671RP6	6-78-P671RP63-010	
1	(PRE-PROCESS) BOTTOM CASE MODULE + ID COVER RING P670RS-OM	6-78-P670HSG3-010-M	
2	.SCREW M2.5*BL KI BK/Z NY ICT	6-35-B6125-BR0	
3	PRODUCT LABEL FOR P670RS (FOLLOW NEW CE SAFETY)	6-45-P670RS03-011	
3	PRODUCT LABEL FOR P670RS (FOLLOW NEW CE SAFETY)	6-45-P671RS03-011	
3	PRODUCT LABEL FOR P670RS-G (FOLLOW NEW CE SAFETY)	6-45-P670RSG3-011	
3	PRODUCT LABEL FOR P670RS-G (FOLLOW NEW CE SAFETY)	6-45-P671RSG3-011	
3	PRODUCT LABEL FOR P670RS (ERAZER X7849 FOR P670RS-OM (MEDI))	6-45-P670RSGM-011	
3	PRODUCT LABEL FOR P670RP6 (FOLLOW NEW CE SAFETY)	6-45-P670RP63-011	
3	PRODUCT LABEL FOR P670RP6 (FOLLOW NEW CE SAFETY)	6-45-P671RP63-011	
3	PRODUCT LABEL (ERAZER X7847) FOR P670RP6-OM (MEDI)	6-45-P670RP6M-011	
3	PRODUCT LABEL FOR P670HS	6-45-P670HS03-010	
3	PRODUCT LABEL FOR P671HS	6-45-P671HS03-010	
3	PRODUCT LABEL FOR P670HS-G	6-45-P670HSG3-010	
3	PRODUCT LABEL FOR P671HS-G	6-45-P671HSG3-010	
3	PRODUCT LABEL FOR P670HP6	6-45-P670HP63-010	
3	PRODUCT LABEL FOR P671HP6	6-45-P671HP63-010	
3	PRODUCT LABEL FOR P670HP6-G	6-45-P670HP6G-010	
3	PRODUCT LABEL FOR P671HP6-G	6-45-P671HP6G-010	
3	PRODUCT LABEL (ERAZER X7850) FOR P670HS-OM	6-45-P670HSGM-010	
3	PRODUCT LABEL (ERAZER X7850) FOR P670RP6-OM	6-45-P670HP6G-M10	






# HDD

Figure A - 4  
HDD

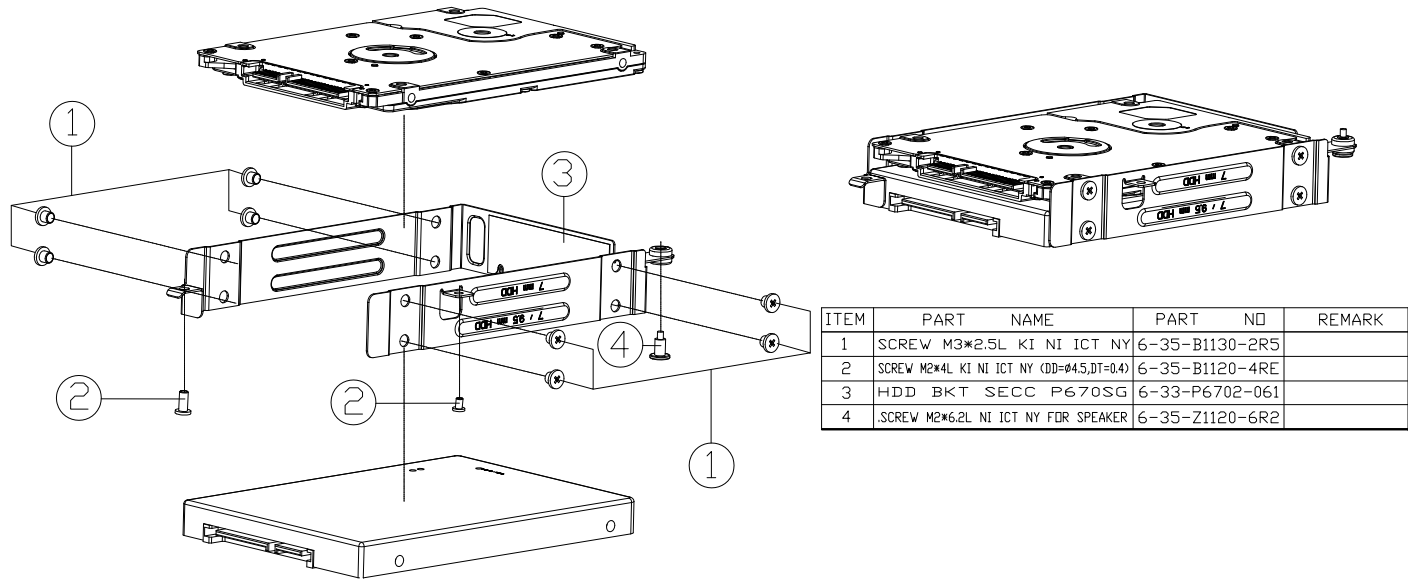



# LCD

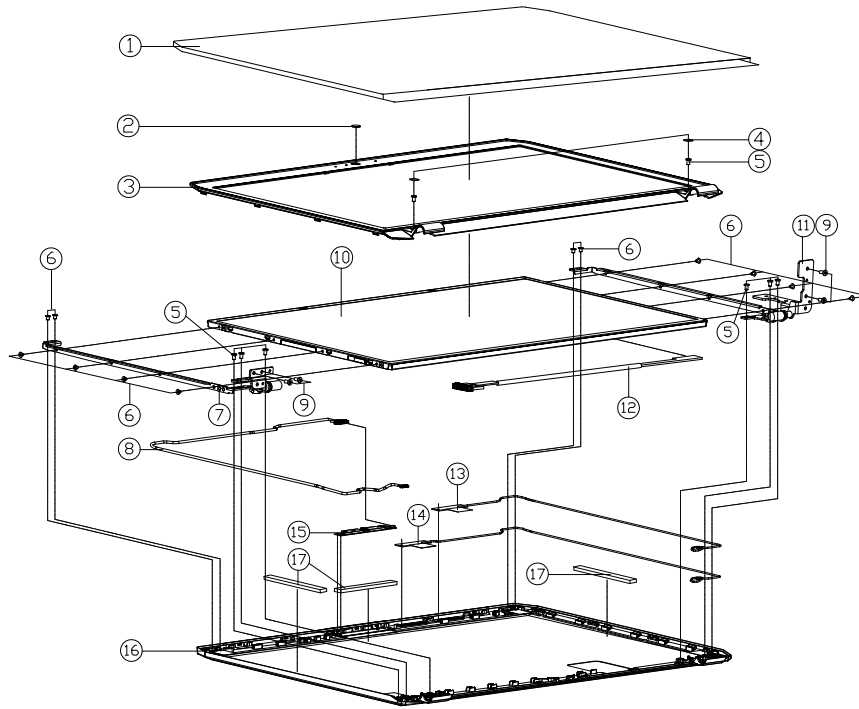

ITEM	PART NAME	PART NO	REMARK
1	BOPP MYLAR 272*437*KT=0.05 FOR P670RS	6-40-P67S1-010	
2	LCD CCD LENS PMMA P177SM (ELAYNE)	6-42-P177T-010-1	
3	LCD FRONT COVER MODULE(CHANGE) P670SG	6-39-P6701-013	
4	RUBBER FRONT COVER SCREW SILICONE V970SUW	6-47-W9701-041	
5	SCREW M2.5*4L KI BK/D ICT NY	6-35-B4125-4RA	
6	SCREW M2*3L KI NI ICT NY (DD=#4.5,DT=0.4)	6-35-B1120-3RE	
7	HINGE L (SECC+SK7) P670SG	6-33-P6701-0L0	
7	HINGE A-TYPE L (SGCC+SK7) P670SG	6-33-P6701-1L0	
7	HINGE B-TYPE L (SGCC+SK7) P670SG	6-33-P6701-2L0	
8	WIRE CABLE FOR CCD 580MM 30V 8PIN (CMD) P670SE	6-43-P670T-010-1	
9	SCREW M2.5*5L KI BK/Z ICT NY	6-35-B6125-5RA	
10	LCD 17.3" FHD (CEP) CHIMEI N173HG6-E1(L)ED 6.0 MM	6-50-NB260-D03	
10	LCD 17.3" FHD AU B173HW02 V1(L)ED 6.0 MM	6-50-NB260-G04	
10	LCD 17.3" FHD CHIMEI N173HG6-L11 (L)ED 6.0 MM	6-50-NB260-D01	
10	LCD 17.3" FHD / PS / EP 16 1927M4-9PM * 8PPIPS 5V 650C * 4LED 62MM	6-50-NB262-L00	
10	LCD 17.3" FHD (CEP) AU B173H1N0L1 (L)ED 6.0 MM	6-50-NB260-G06	
11	HINGE R (SECC+SK7) P670SG	6-33-P6701-0R0	
11	HINGE A-TYPE R (SGCC+SK7) P670SG	6-33-P6701-1R0	
11	HINGE B-TYPE R (SGCC+SK7) P670SG	6-33-P6701-2R0	
12	WIRE CABLE FOR LED 465MM 30V 3P (CM/TAL) CONAHL09980D P670SG	6-43-P6701-022-1C	
12	WIRE CABLE FOR LEDV 465MM 30V 4P (CM/TAL) CONAHL09980D P670SG	6-43-P6701-012-1C	
12	WIRE CABLE FOR LEDV 465MM 30V 4P (AL/AL) CONAHL09980-2ED P670SG	6-43-P6701-012-N	
13	ANTENNA WLAN WGT WGT PCB 2.6G/5G PEEM L-460MM BLACK CABLE PASSIVE	6-23-7P650-021	
14	ANTENNA WLAN WGT WGT PCB 2.6G/5G PEEM L-650MM P650SE	6-23-7P650-011	
15	WC CAMERA MODUL FOR DISPLAYRESOLV 20 MP (D20) WIDE VIEW WHITE-LED WEB-PC	6-88-W65DC-5100	OPTION
15	WC CAMERA MODUL FOR DISPLAYRESOLV 20 MP (D20) WIDE VIEW WHITE-LED WEB-PC	6-88-P650C-4900	OPTION
15	WC CAMERA MODUL FOR DISPLAYRESOLV 20 MP (D20) WIDE VIEW WHITE-LED WEB-PC	6-88-P775C-4900	OPTION
16	LCD BACK COVER MODULE P670SG	6-39-P6701-022	
16	LCD BACK COVER MODULE (FOR ALL LCD) P670SG	6-39-P6701-120	
17	SPONGE (CR2020+G4000) 65*46*3T FOR LCD B-TYPE P670SG	6-47-0019A-659	ONLY FOR IPS/EDP

Figure A - 5  
LCD



# Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *P670HS(-G) / P671HS(-G)* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page	Diagram - Page
System Block Diagram - Page B - 2	Frame Buffer Partition C_D - Page B - 26	M.2 3G/LTE - Page B - 50	VCC_Core & VCCSA - Page B - 74
Processor 1/7 - Page B - 3	GPU Decoupling 1 - Page B - 27	Realtek ALC898 - Page B - 51	VCore Output Stage - Page B - 75
Processor 2/7 - Page B - 4	GPU Decoupling 2 - Page B - 28	TPA2008D2 - Page B - 52	VCCGT - Page B - 76
Processor 3/7 - Page B - 5	Straps & XTAL - Page B - 29	Subwoofer - Page B - 53	VCCGT Output Stage - Page B - 77
Processor 4/7 - Page B - 6	IFP I/O Interface - Page B - 30	AR_TBT - Page B - 54	Audio Board P65_ESS_A 1/3 - Page B - 78
Processor 5/7 - Page B - 7	Misc - GPIO, I2C and ROM - Page B - 31	AR_Power - Page B - 55	Audio Board P65_ESS_A 2/3 - Page B - 79
Processor 6/7 - Page B - 8	NVIDIA Power Sequence - Page B - 32	TPS65982 - Page B - 56	Audio Board P65_ESS_A 3/3 - Page B - 80
Processor 7/7 - Page B - 9	GPIO Level Shift - Page B - 33	TPS65982-1 - Page B - 57	Audio Board P67_3DAMP_E - Page B - 81
DDR CHA SO-DIMM_0 - Page B - 10	GPU NVVDD, FBVDDQ - Page B - 34	AR_Conn Type A/C - Page B - 58	P650RS Power Board - Page B - 82
DDR CHA SO-DIMM_1 - Page B - 11	GPU GND - Page B - 35	TPM, CCD, TP - Page B - 59	P650RS HDD Board - Page B - 83
DDR CHB SO-DIMM_0 - Page B - 12	PCH 1/9 - Page B - 36	Fan, LID, KB LED - Page B - 60	P650RS LED Board - Page B - 84
DDR CHB SO-DIMM_1 - Page B - 13	PCH 2/9 - Page B - 37	Connector - Page B - 61	P650RS FP Board - Page B - 85
Panel, Inverter - Page B - 14	PCH 3/9 - Page B - 38	DDR 1.2V/0.6VS - Page B - 62	P650RS Click Board - Page B - 86
Mini DP Port E - Page B - 15	PCH 4/9 - Page B - 39	VDD3, VDD5 - Page B - 63	P650RS USB Board 1/3 - Page B - 87
Mini DP Port F + PS8330B - Page B - 16	PCH 5/9 - Page B - 40	5V, 5VS, 3.3V, 3.3VS, 3.3VA - Page B - 64	P650RS USB Board 2/3 - Page B - 88
HDMI - Page B - 17	PCH 6/9 - Page B - 41	Power 1.0V, VCCIO - Page B - 65	P650RS USB Board 3/3 - Page B - 89
VGA PCI Express - Page B - 18	PCH 7/9 - Page B - 42	AC_In, Charger - Page B - 66	P670RS LED Board - Page B - 90
VGA Frame Buffer Partition - Page B - 19	PCH 8/9 - Page B - 43	1.0DX_VCCSTG/VCCSFR_OC/2.5V - Page B - 67	P670RS USB Board 1/2 - Page B - 91
Frame Buffer Partition A - Page B - 20	PCH 9/9 - Page B - 44	IV8_RUN/AON, NV3V3 - Page B - 68	P670RS USB Board 2/2 - Page B - 92
Frame Buffer Partition B - Page B - 21	KBC IT8587 - Page B - 45	NVVDD Phase 1 & 2 - Page B - 69	
Frame Buffer Partition A_B - Page B - 22	RGB KB Only - Page B - 46	NVVDD Phase 3~4 - Page B - 70	
GPU Frame Buffer Partition - Page B - 23	USB Charger - Page B - 47	NVVDDS - Page B - 71	
Frame Buffer Partition C - Page B - 24	M.2 WiGig/WLAN + BT - Page B - 48	PEX_VDD - Page B - 72	
Frame Buffer Partition D - Page B - 25	M.2 PCIE4X SSD - Page B - 49	FBVDDQ - Page B - 73	


Table B - 1  
**SCHEMATIC  
DIAGRAMS**



### Version Note

The schematic diagrams in this chapter are based upon version 6-7P-P65SB-008. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).


# System Block Diagram

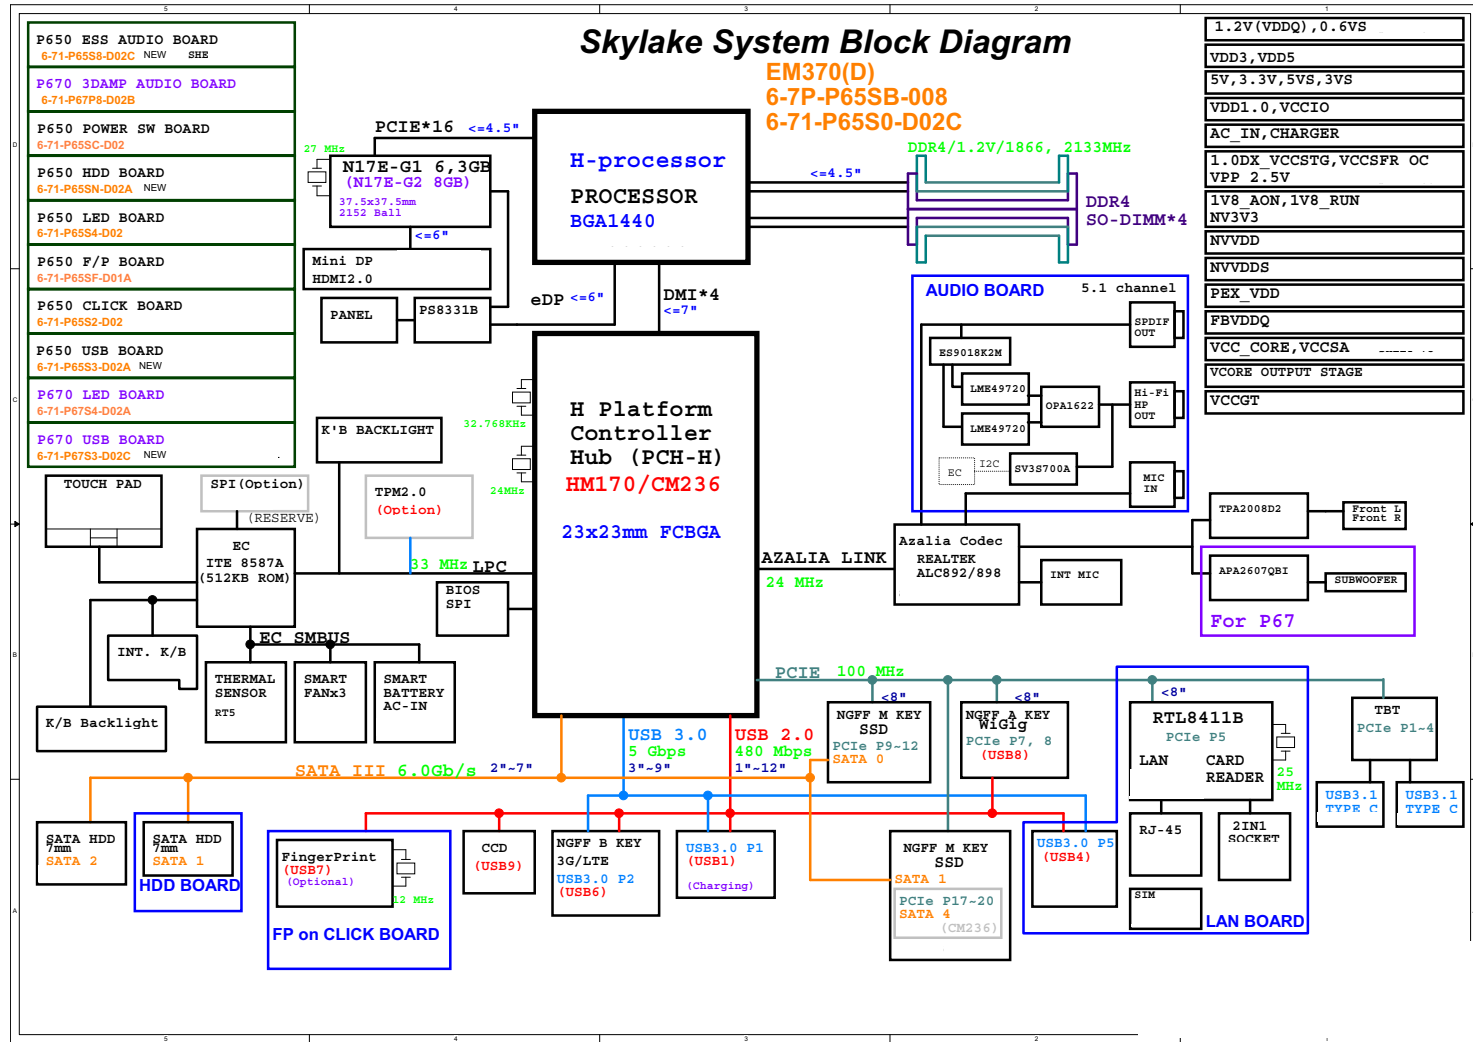

Sheet 1 of 91  
System Block  
Diagram

B.Schematic Diagrams


# Processor 1/7

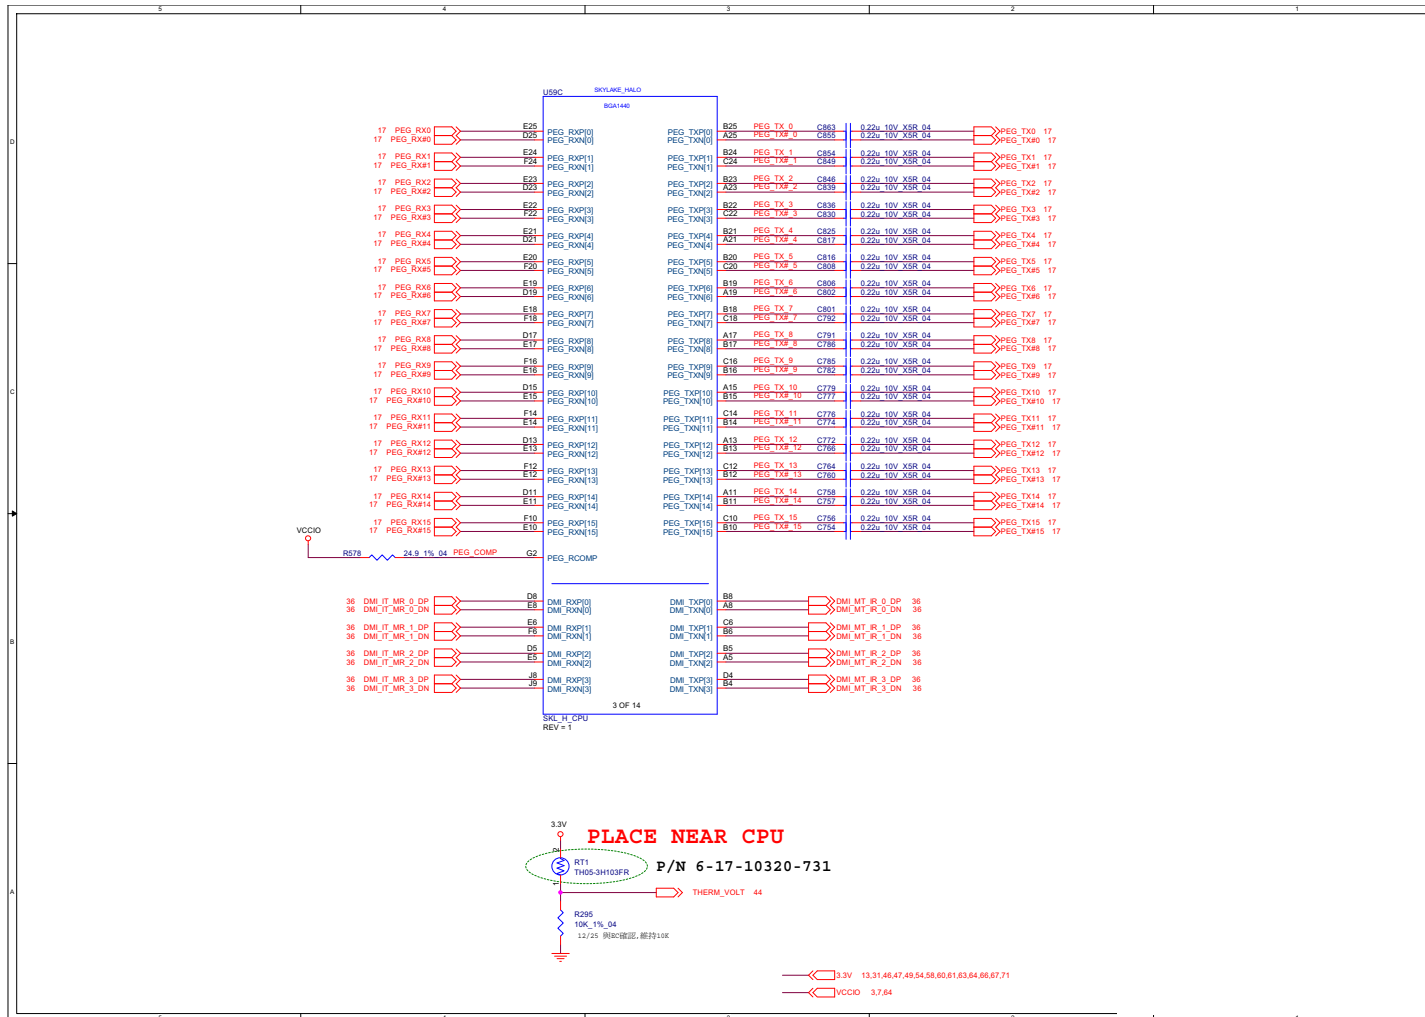


B.Schematic Diagrams

Sheet 2 of 91  
Processor 1/7

Processor 2/7

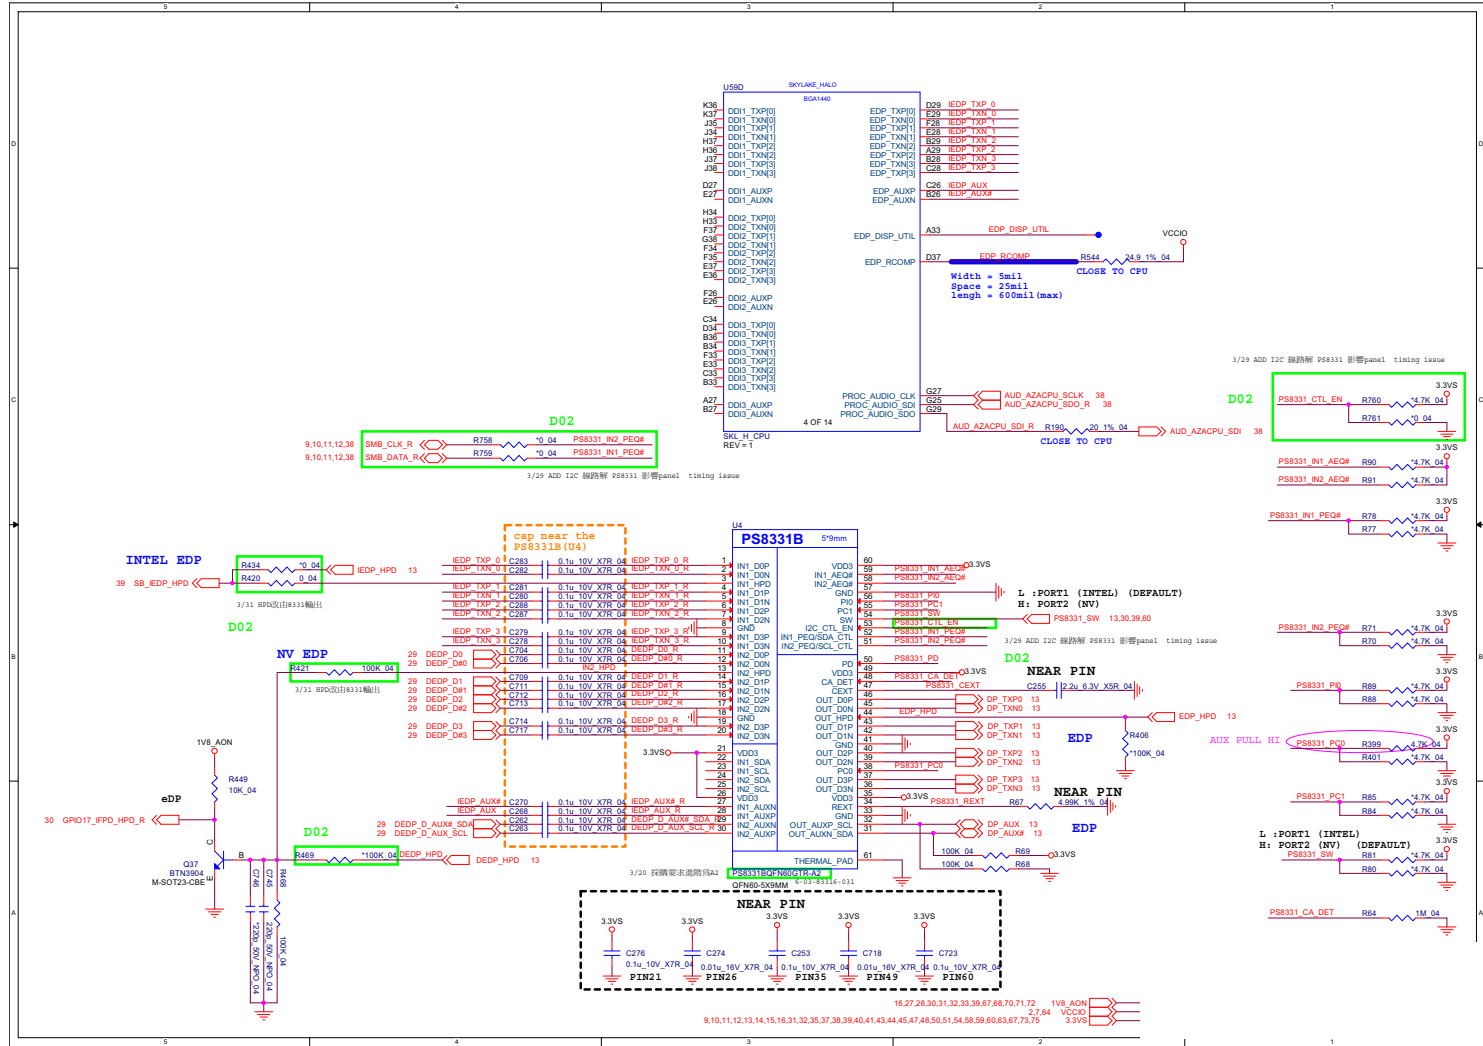

# Processor 3/7

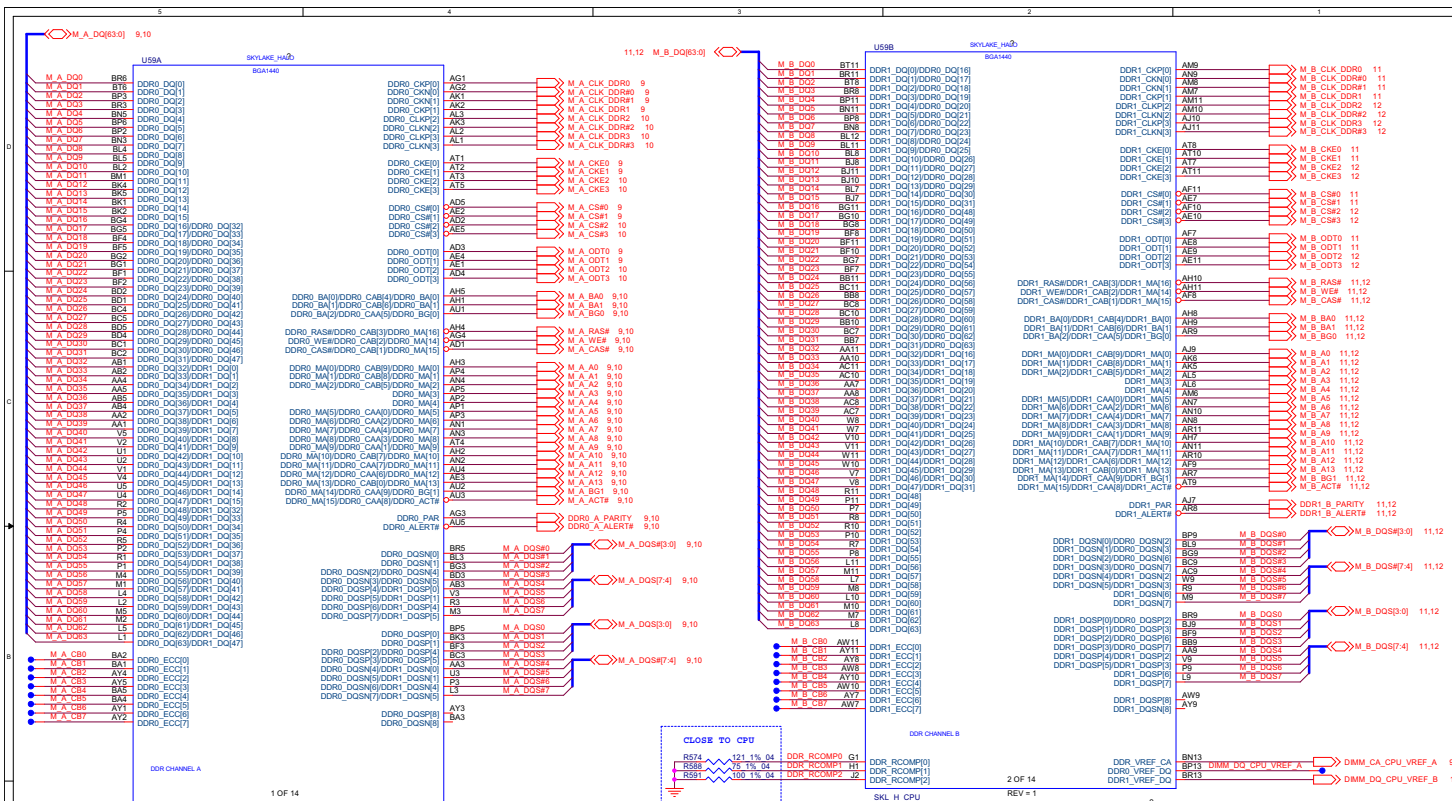


B.Schematic Diagrams

Sheet 4 of 91  
Processor 3/7


# Processor 4/7

Sheet 5 of 91  
Processor 4/7

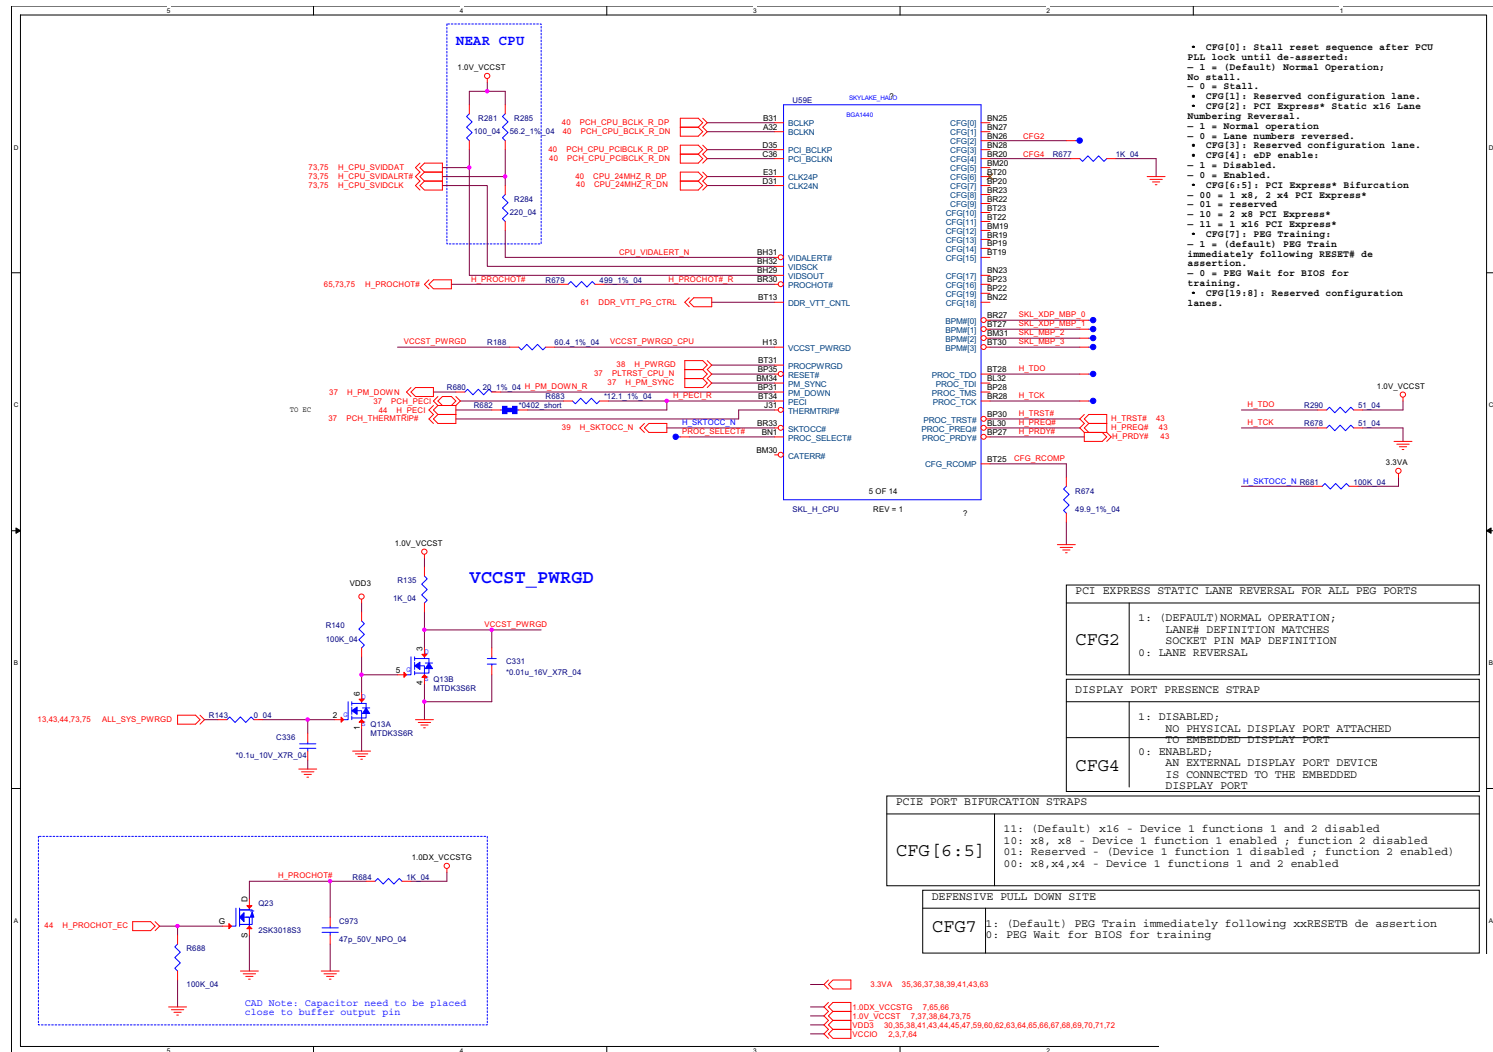



# Processor 5/7

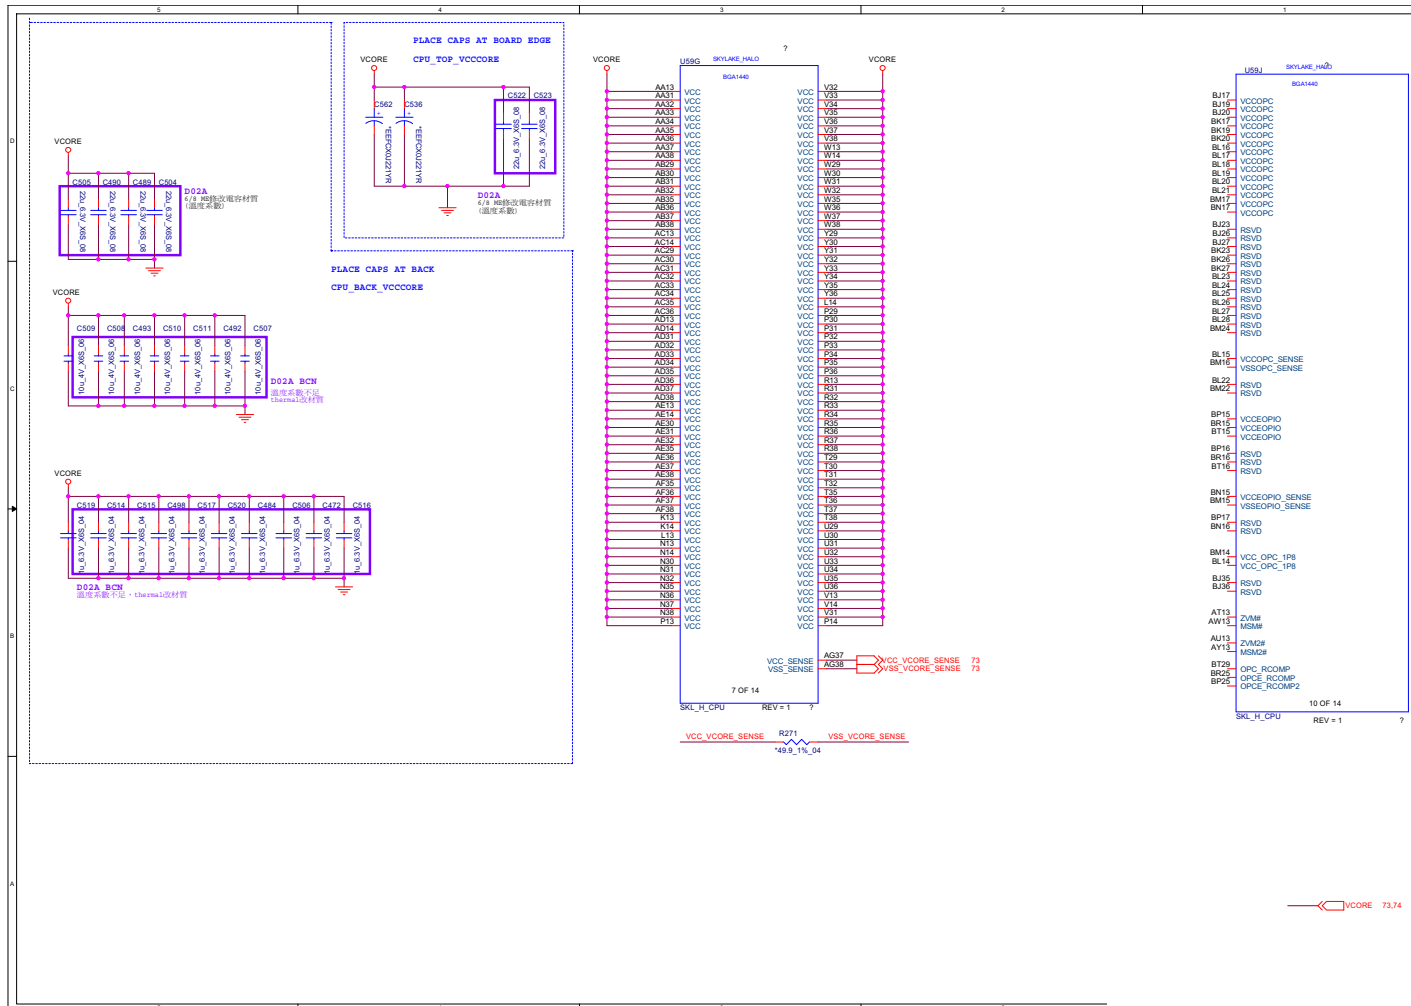


Sheet 6 of 91  
Processor 5/7

B.Schematic Diagrams

Processor 6/7


Sheet 7 of 91  
Processor 6/7

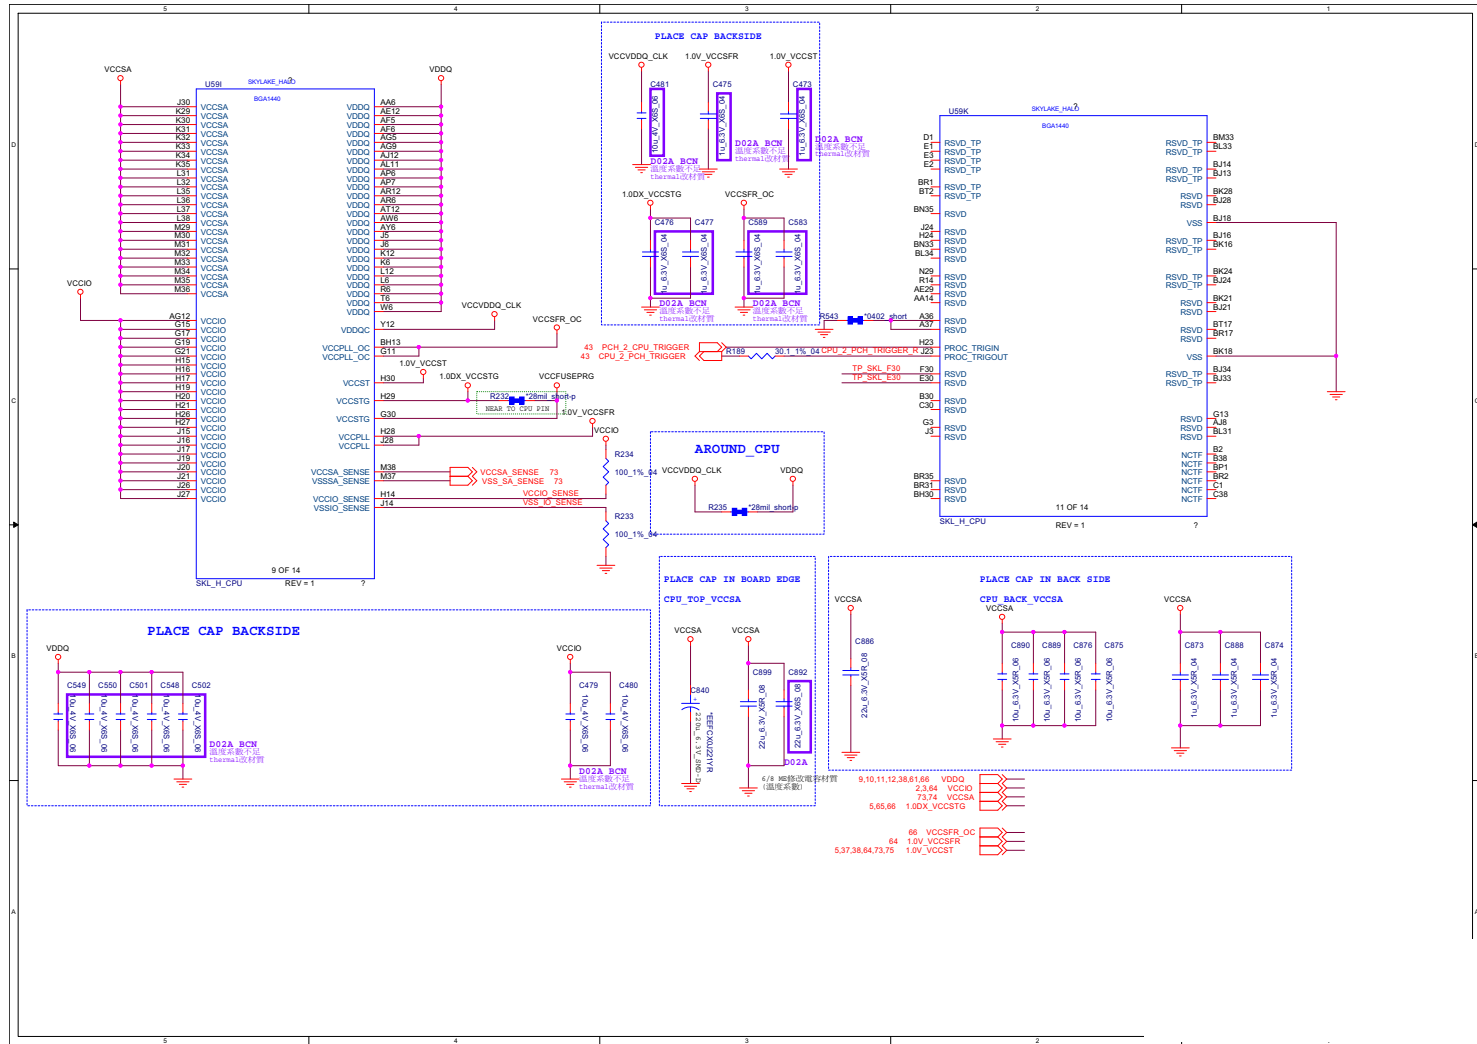





# DDR CHA SO-DIMM\_1

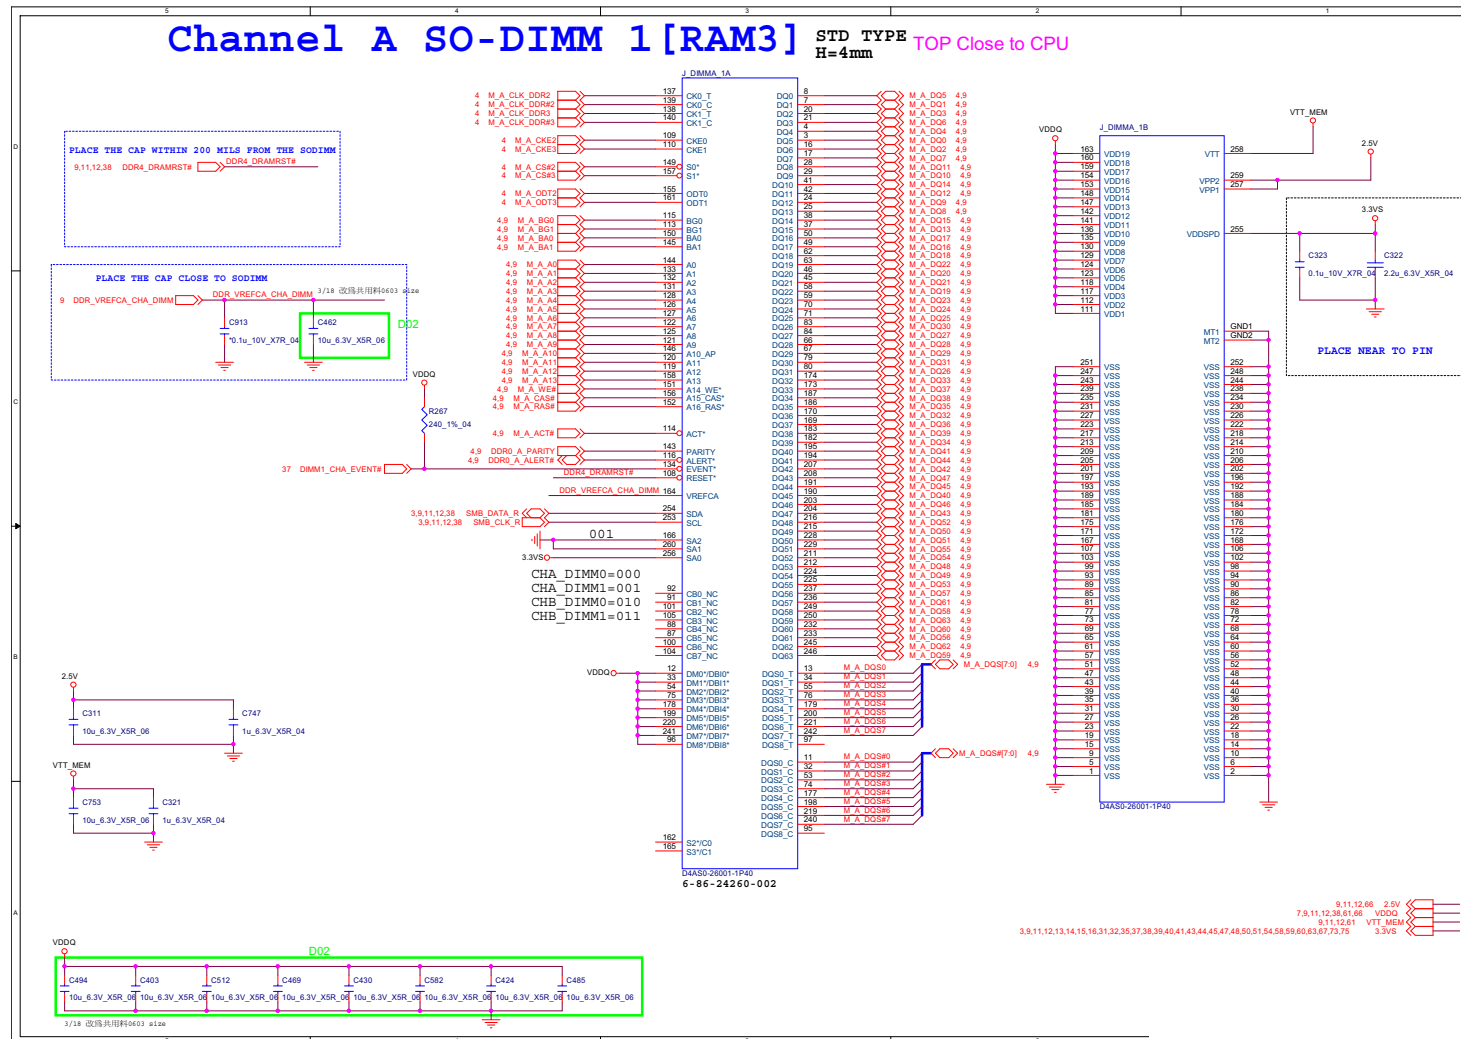


Sheet 10 of 91  
DDR CHA SO-DIMM\_1


B.Schematic Diagrams

# DDR CHB SO-DIMM\_0

Sheet 11 of 91  
DDR CHB SO-DIMM\_0

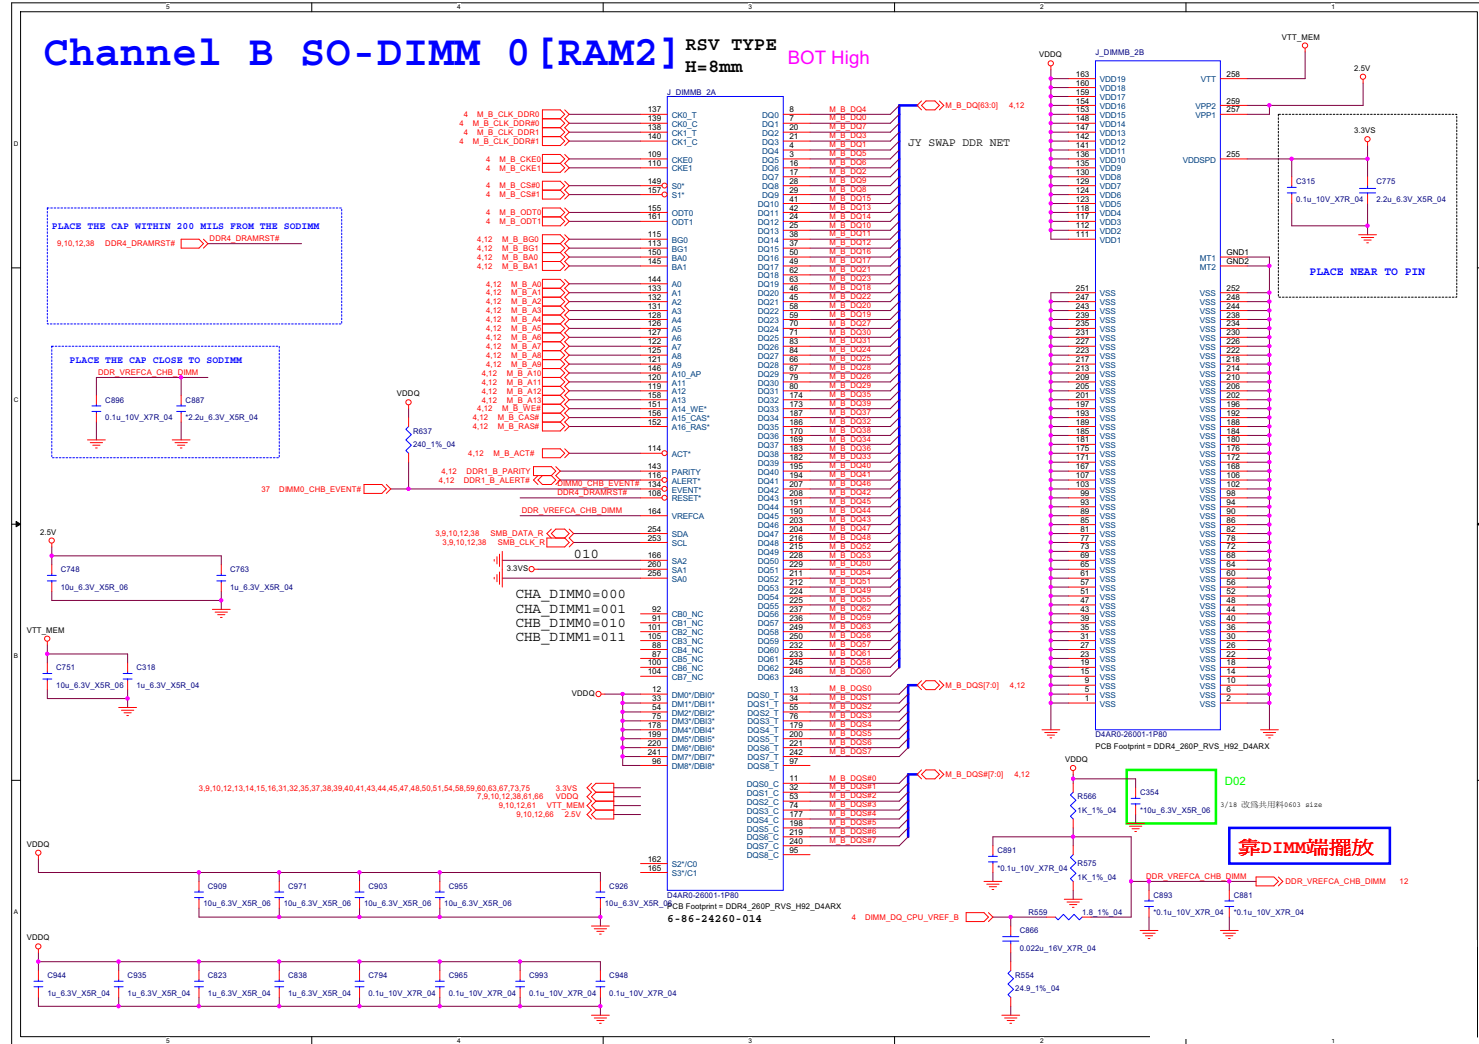

# DDR CHB SO-DIMM\_1

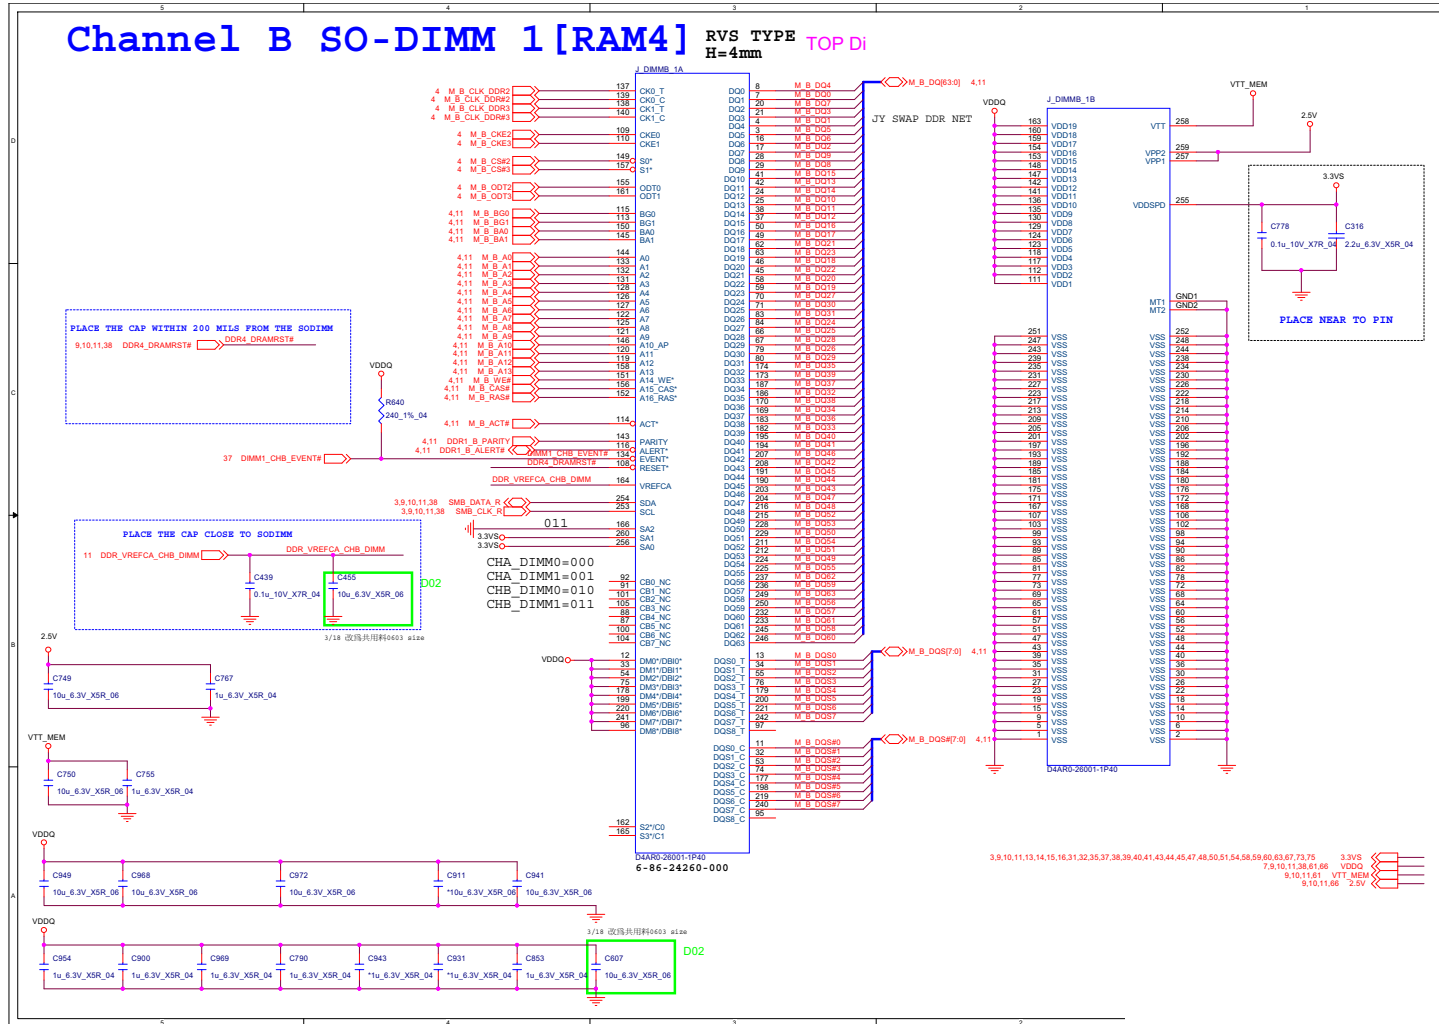


Sheet 12 of 91  
 DDR CHB SO-DIMM\_1

B.Schematic Diagrams

# Schematic Diagrams

## Panel, Inverter


Sheet 13 of 91  
Panel, Inverter

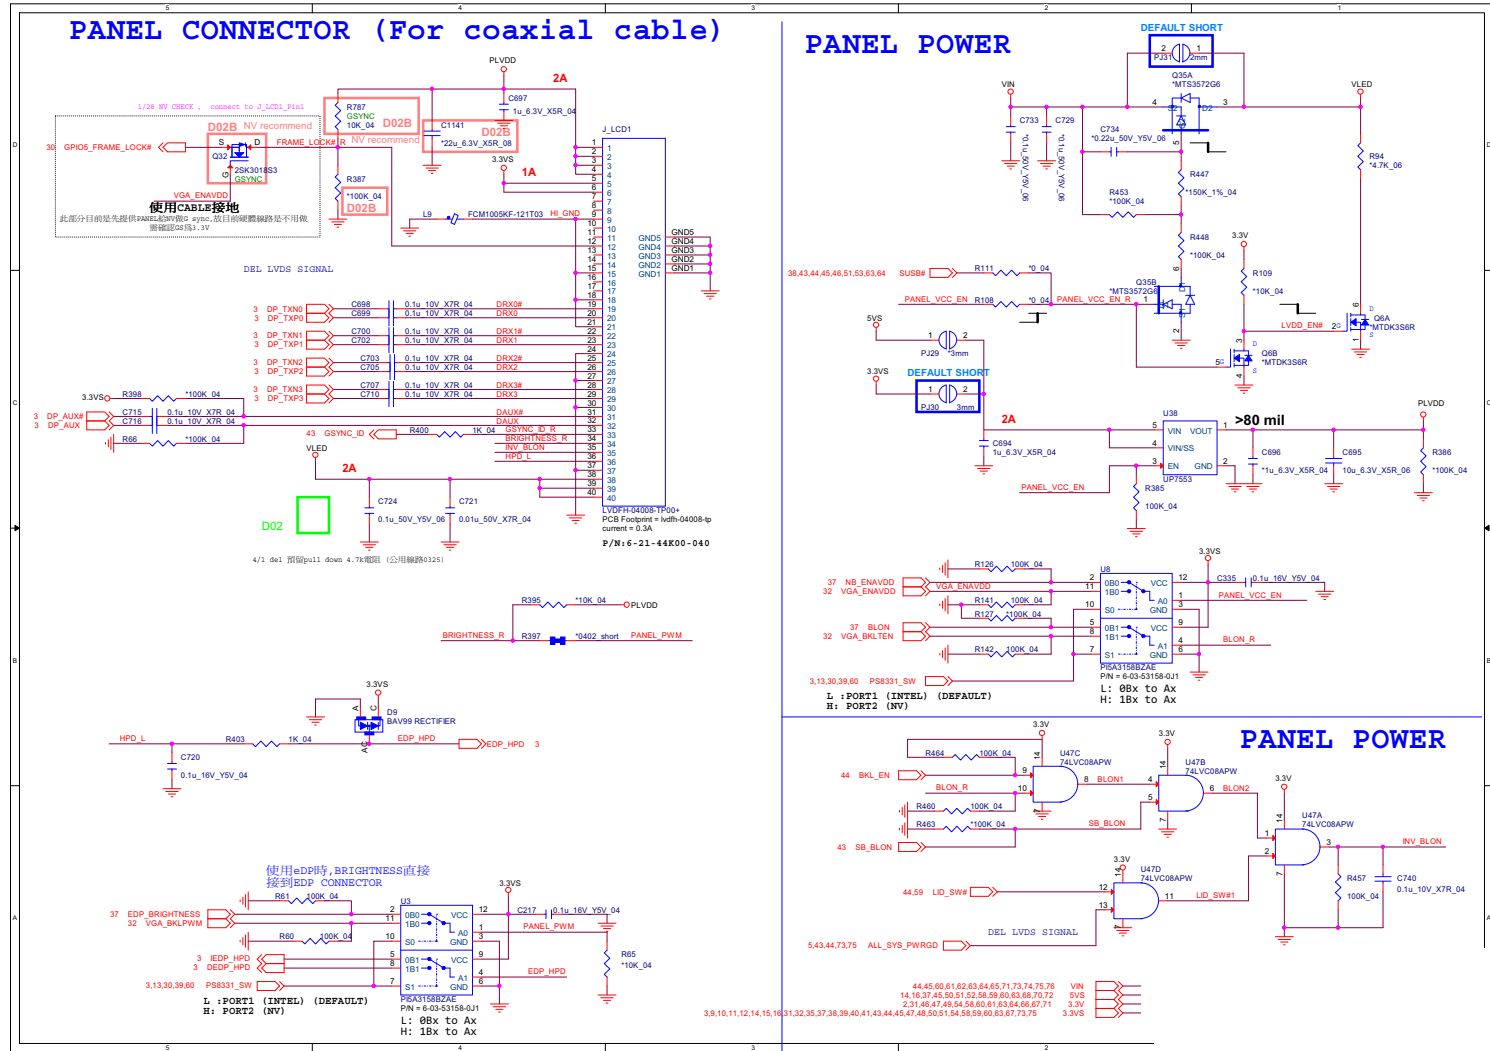




# Mini DP Port E

Sheet 14 of 91  
Mini DP Port E

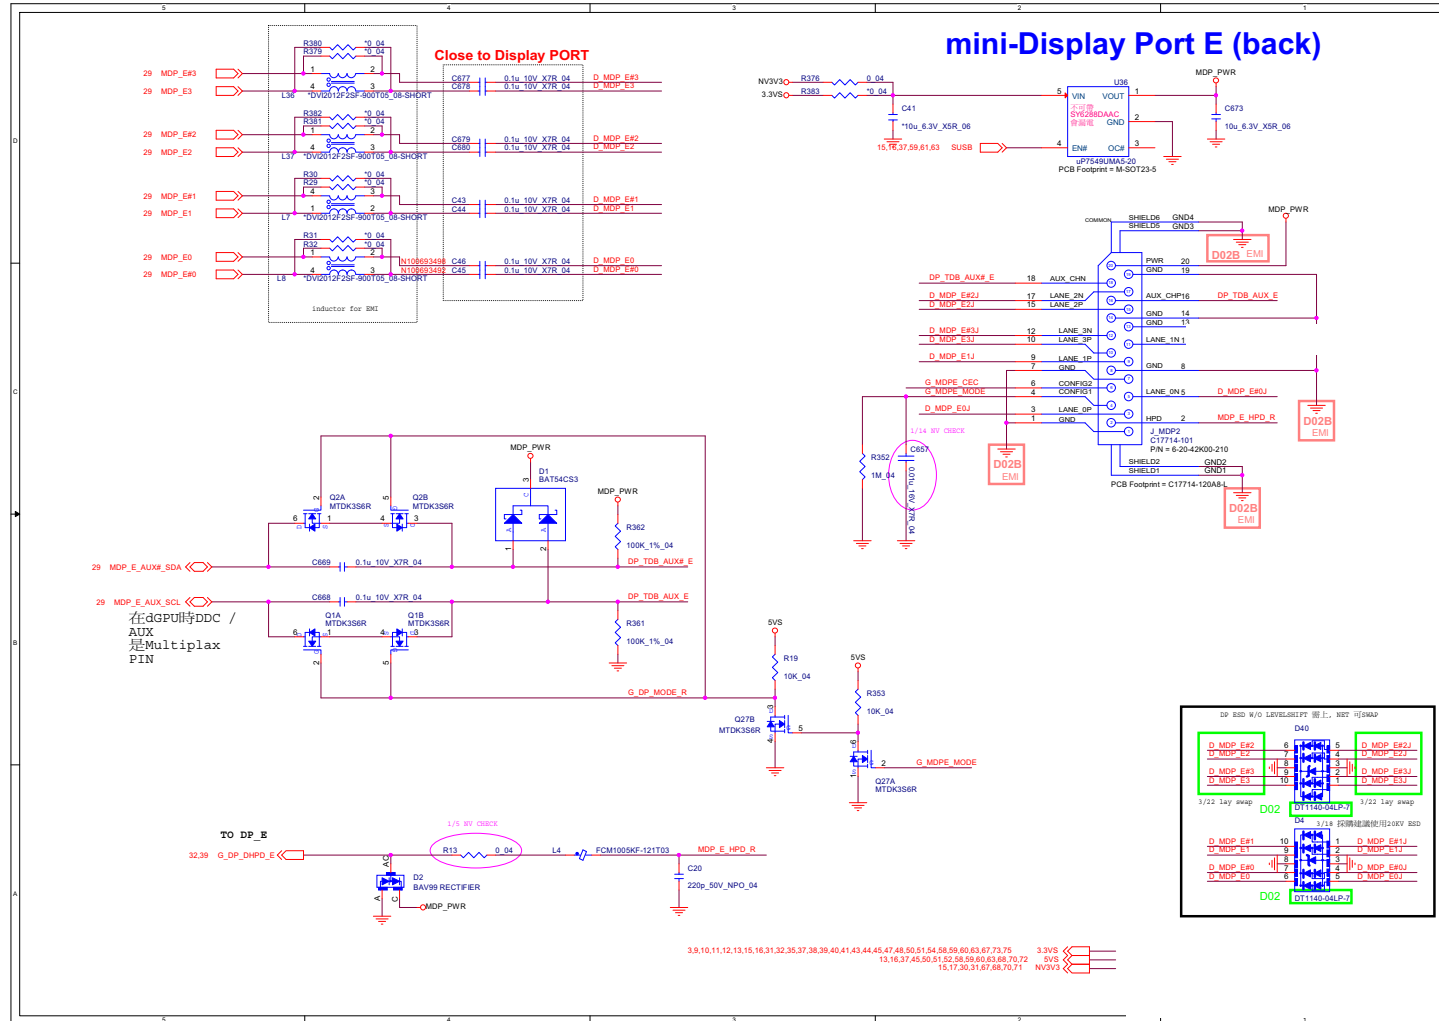


# Mini DP Port F + PS8330B

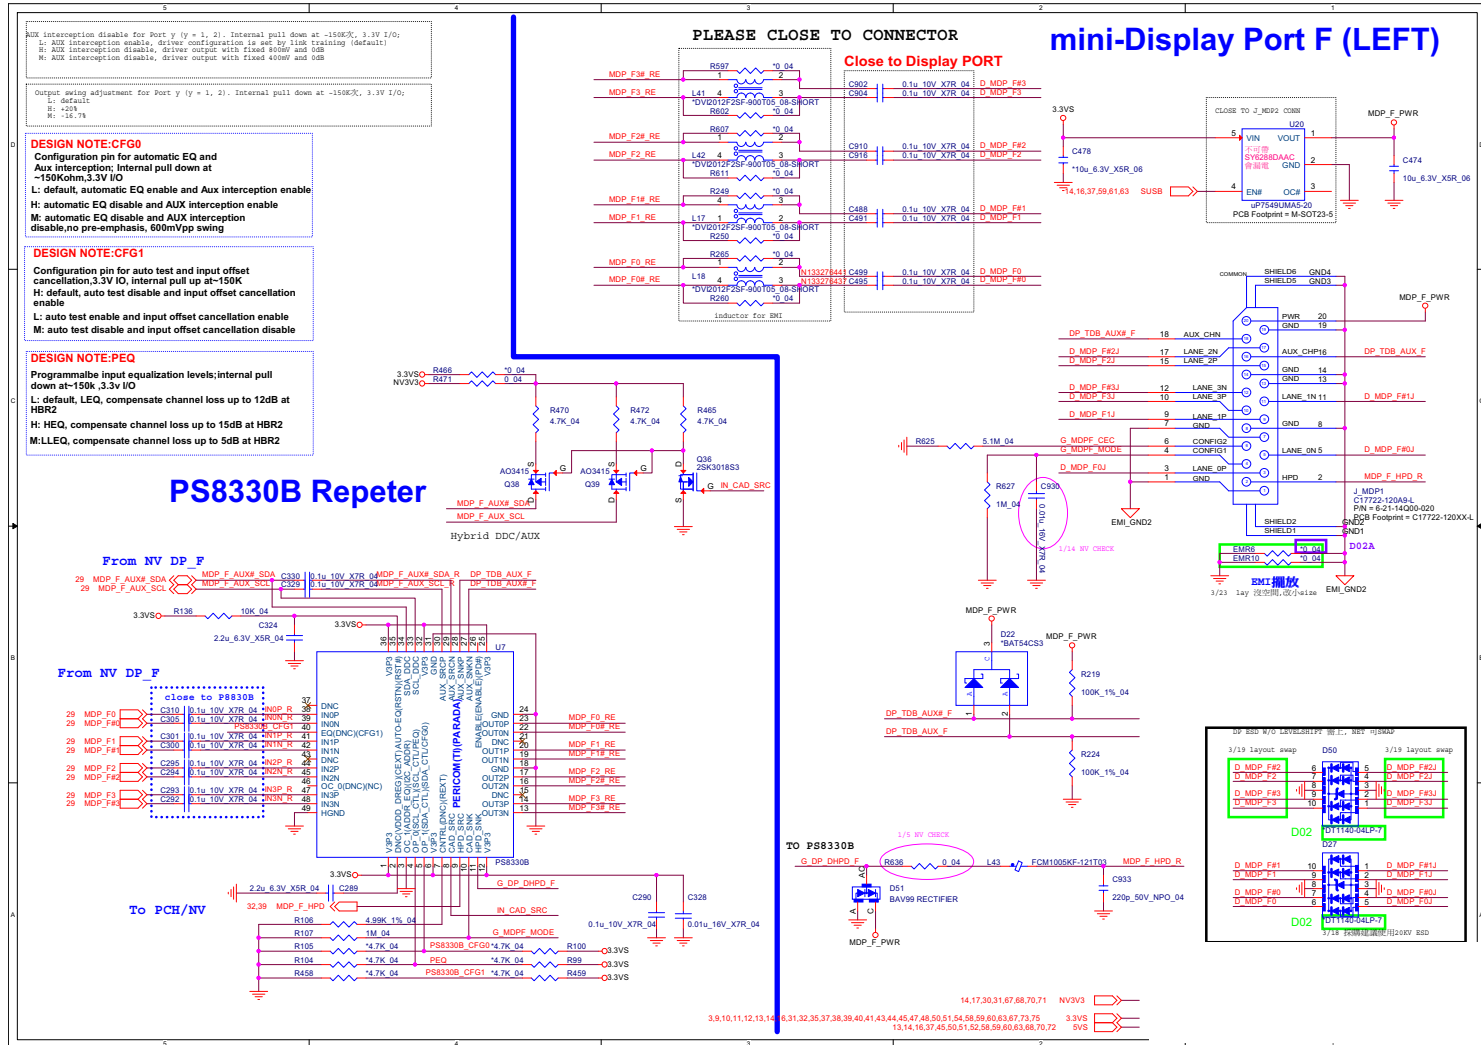


Sheet 15 of 91  
 Mini DP Port F + PS8330B



# VGA PCI Express

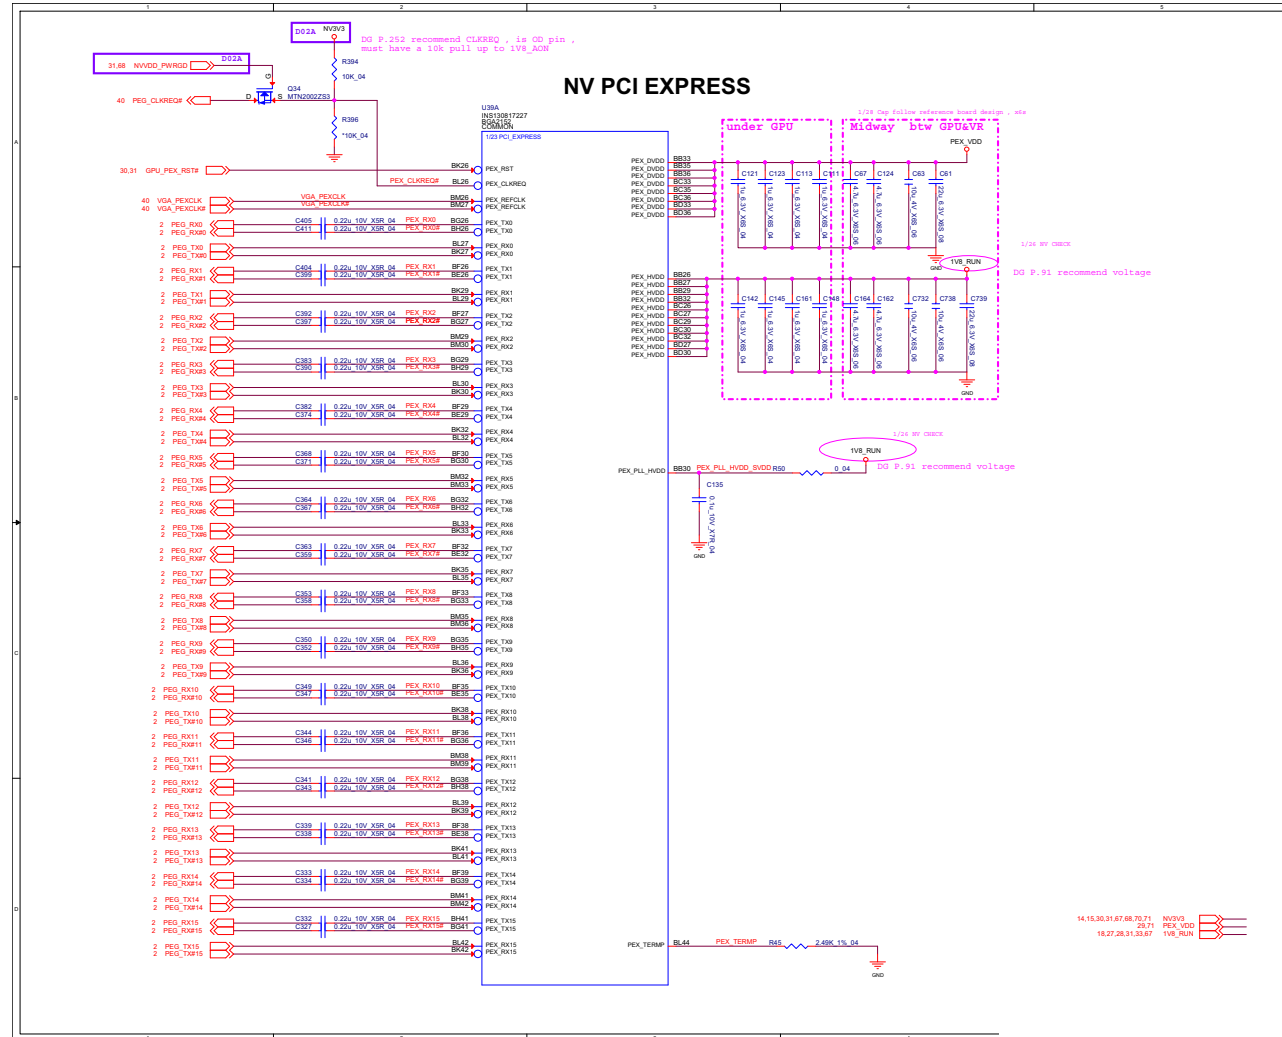

# VGA Frame Buffer Partition

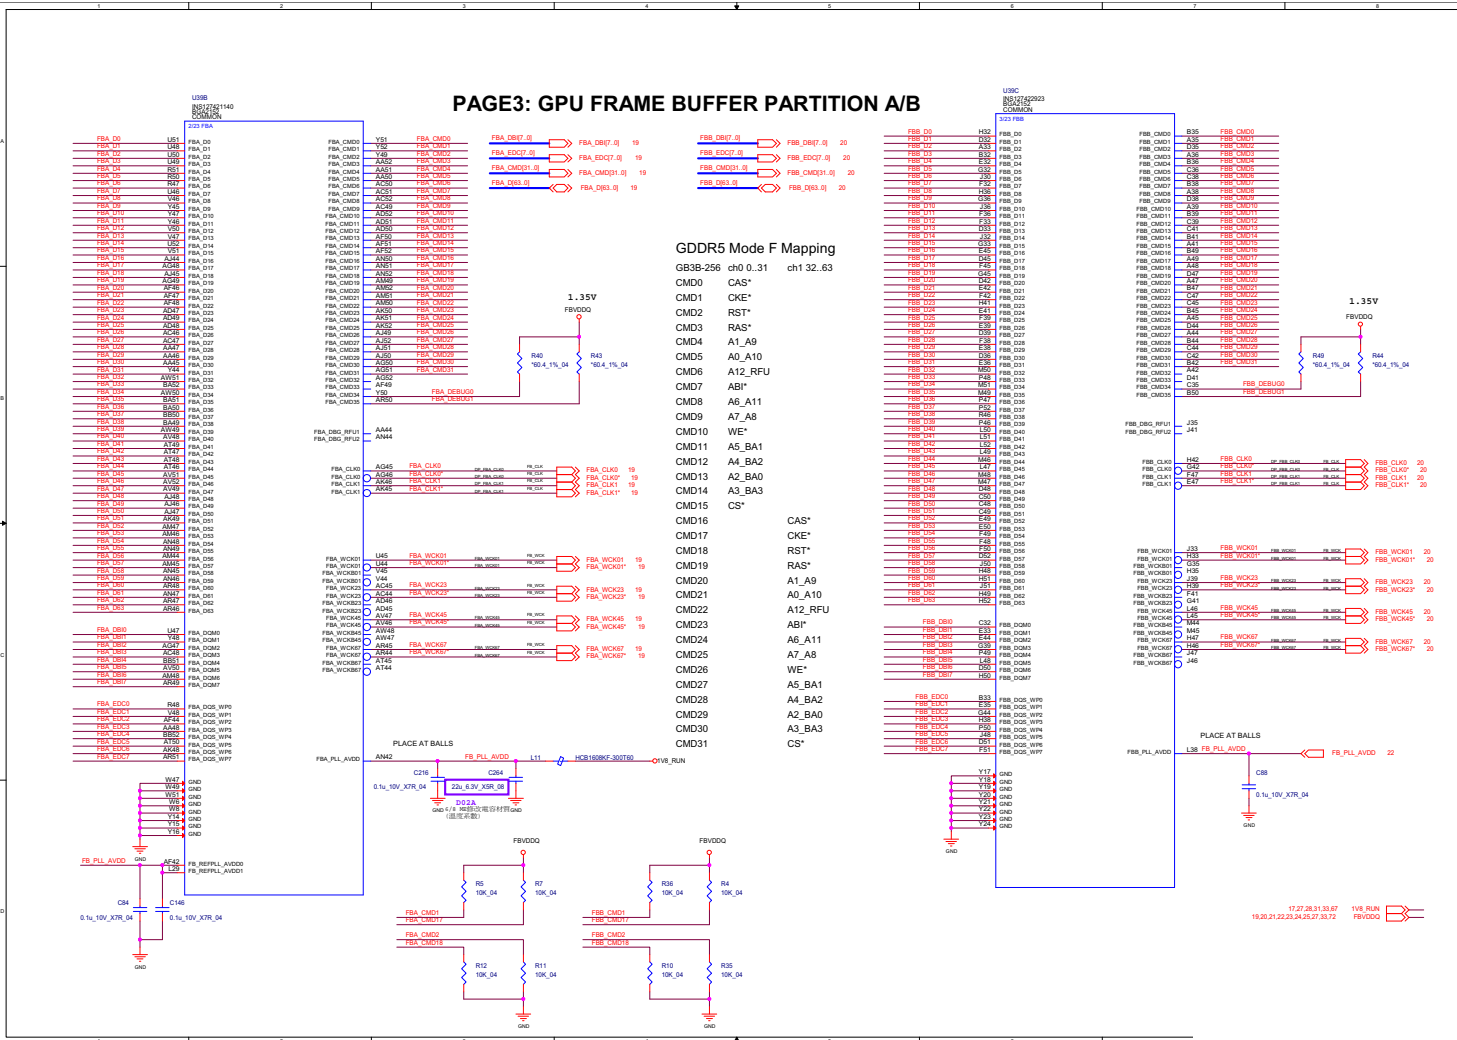


Sheet 18 of 91  
VGA Frame Buffer  
Partition


B.Schematic Diagrams

# Frame Buffer Partition A

Sheet 19 of 91  
Frame Buffer  
Partition A

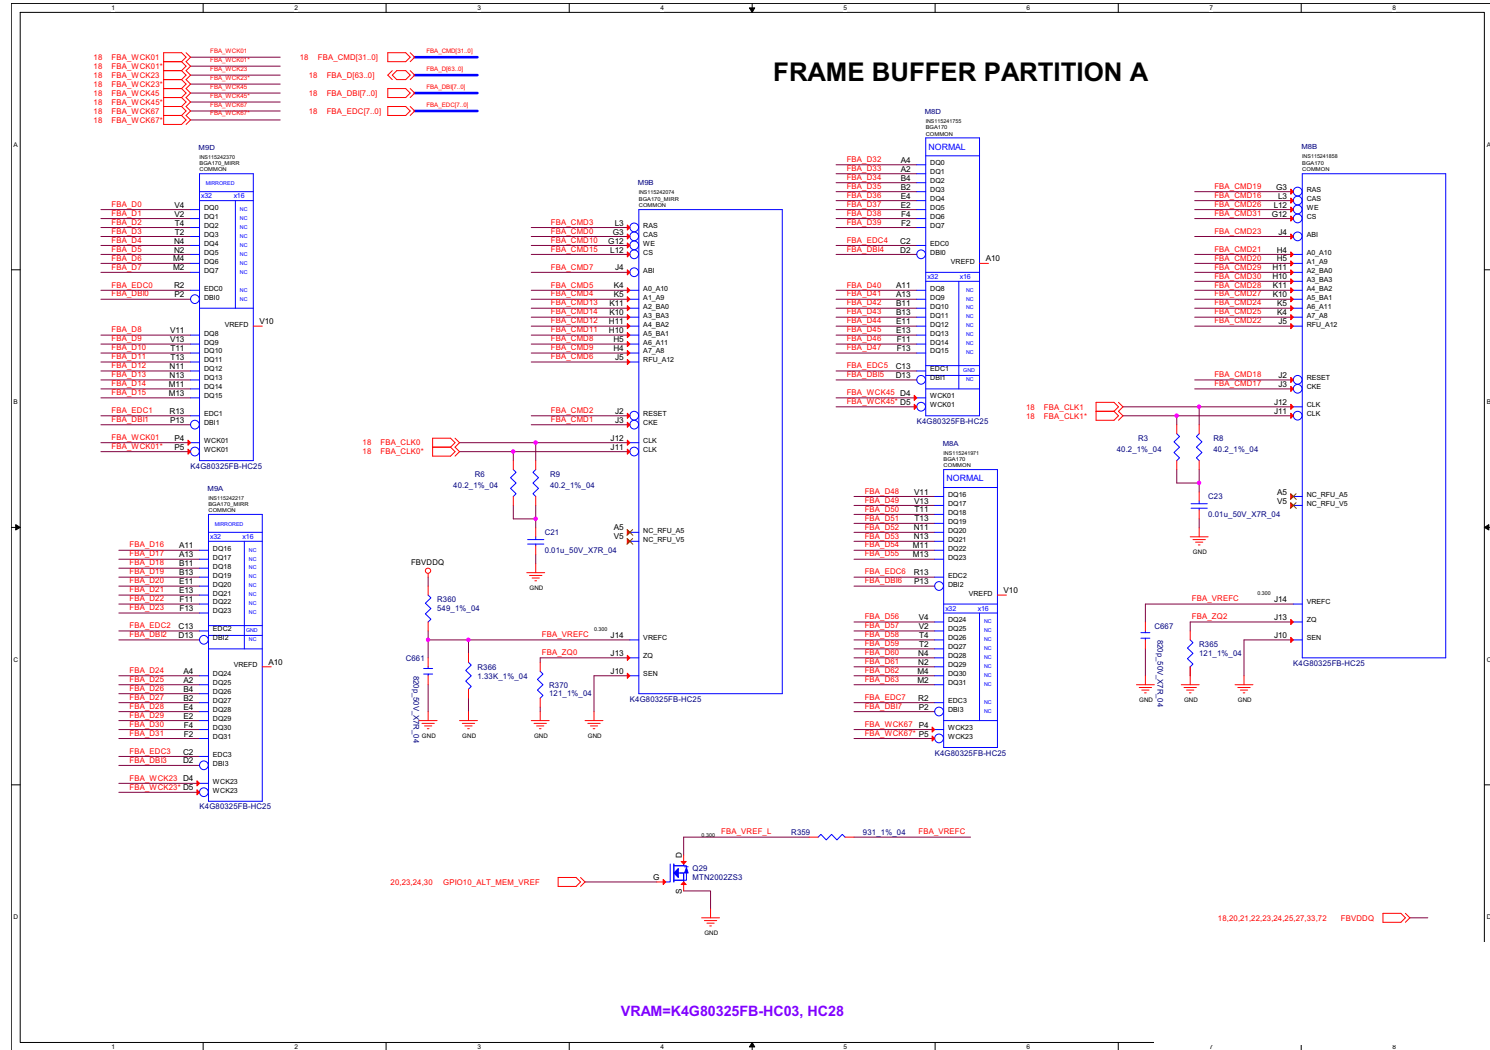

# Frame Buffer Partition B

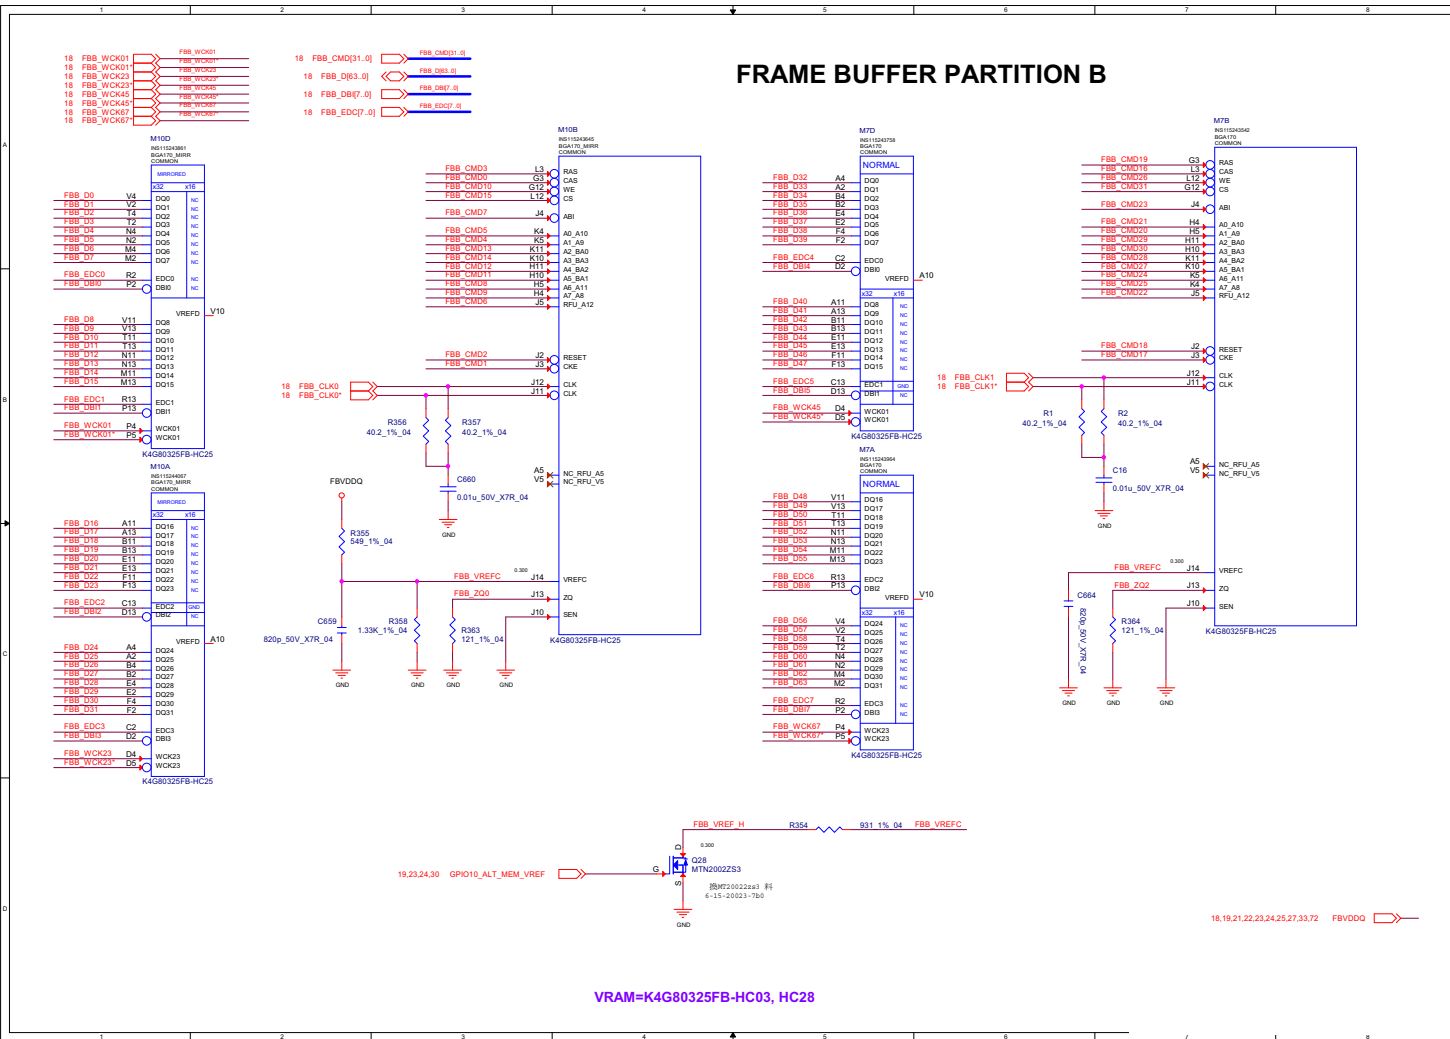


Sheet 20 of 91  
Frame Buffer  
Partition B

B.Schematic Diagrams



# Frame Buffer Partition A\_B


Sheet 21 of 91  
Frame Buffer  
Partition A\_B

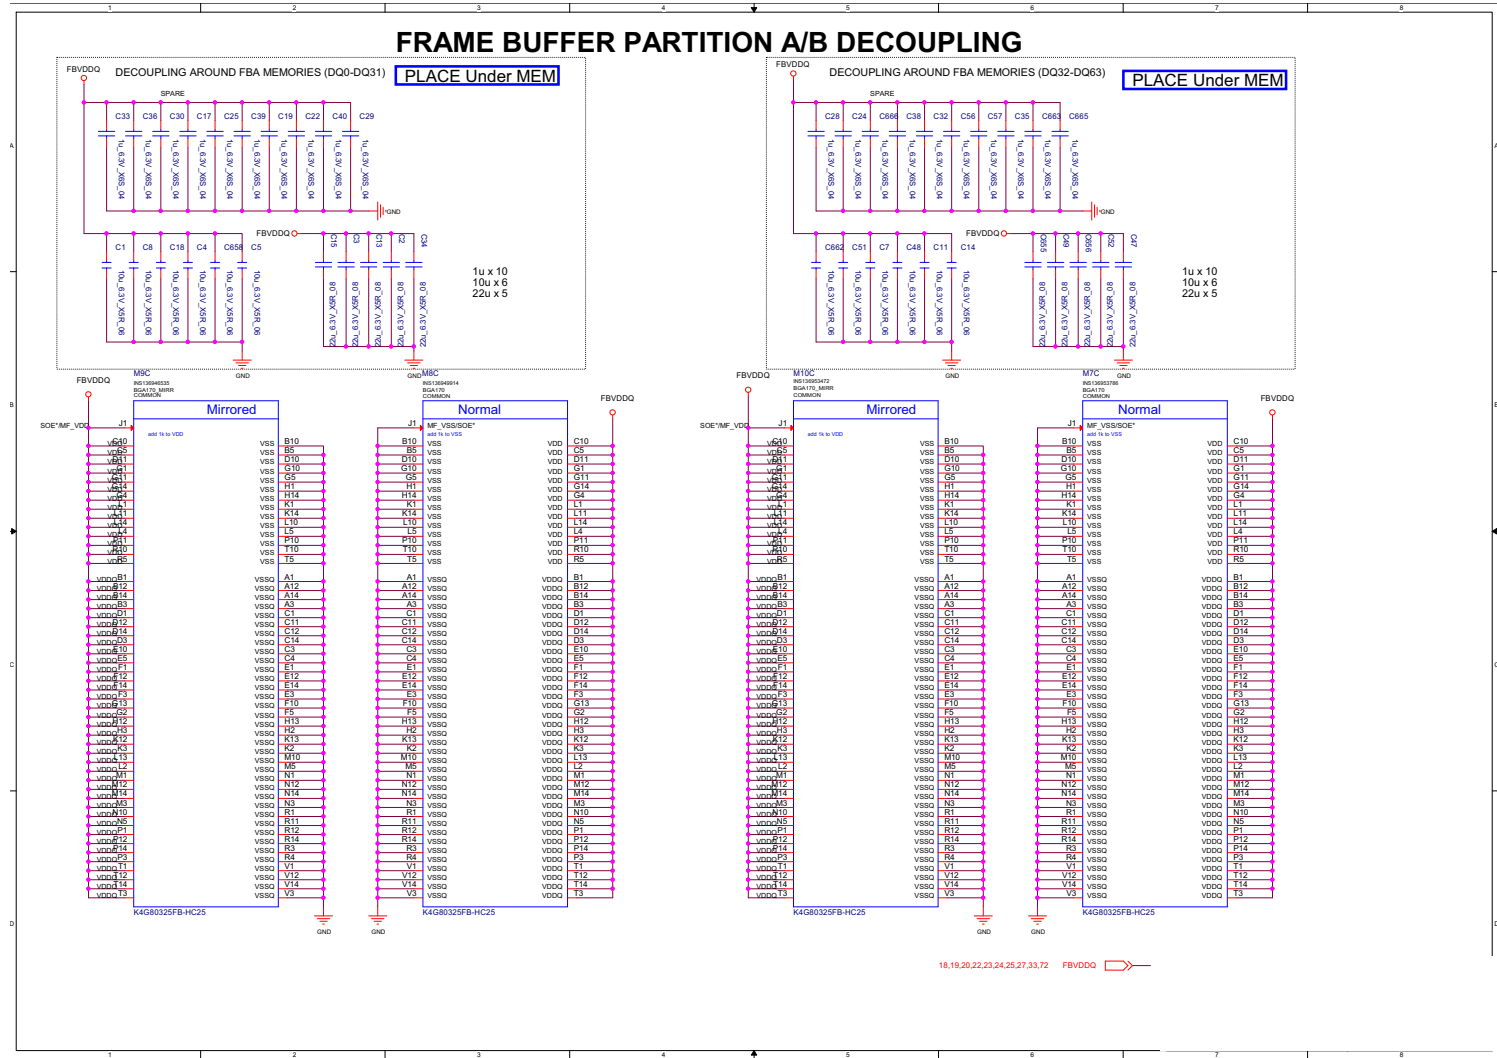

# GPU Frame Buffer Partition


B.Schematic Diagrams

Sheet 22 of 91  
GPU Frame Buffer Partition

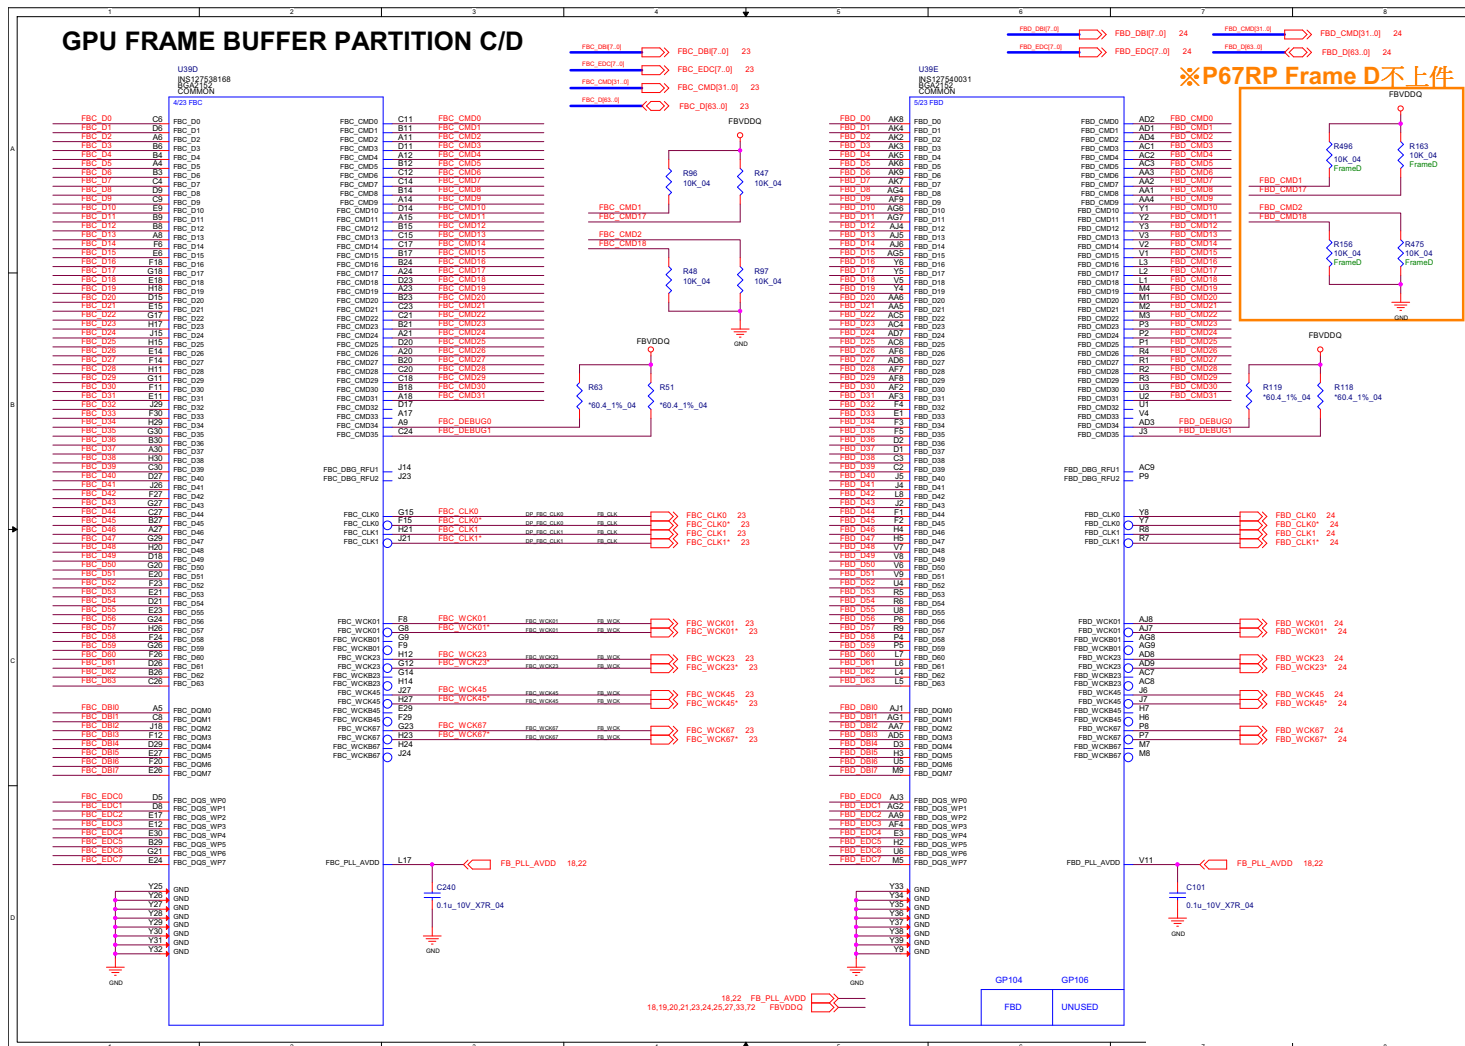


# Frame Buffer Partition C

Sheet 23 of 91  
Frame Buffer  
Partition C

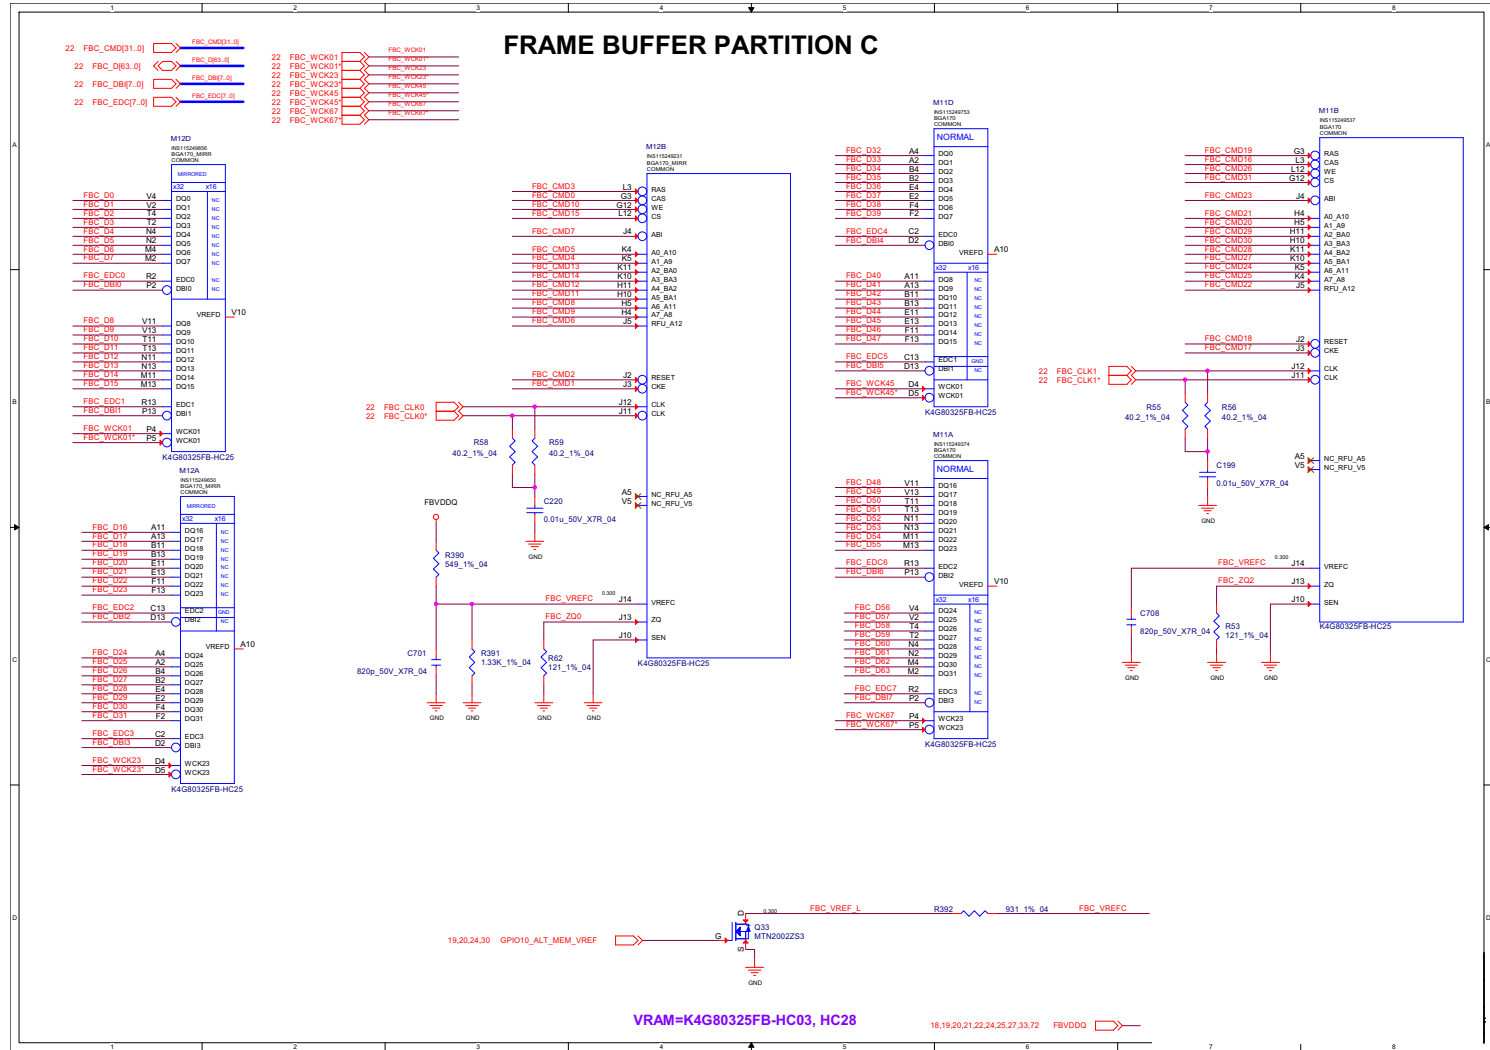

# Frame Buffer Partition D

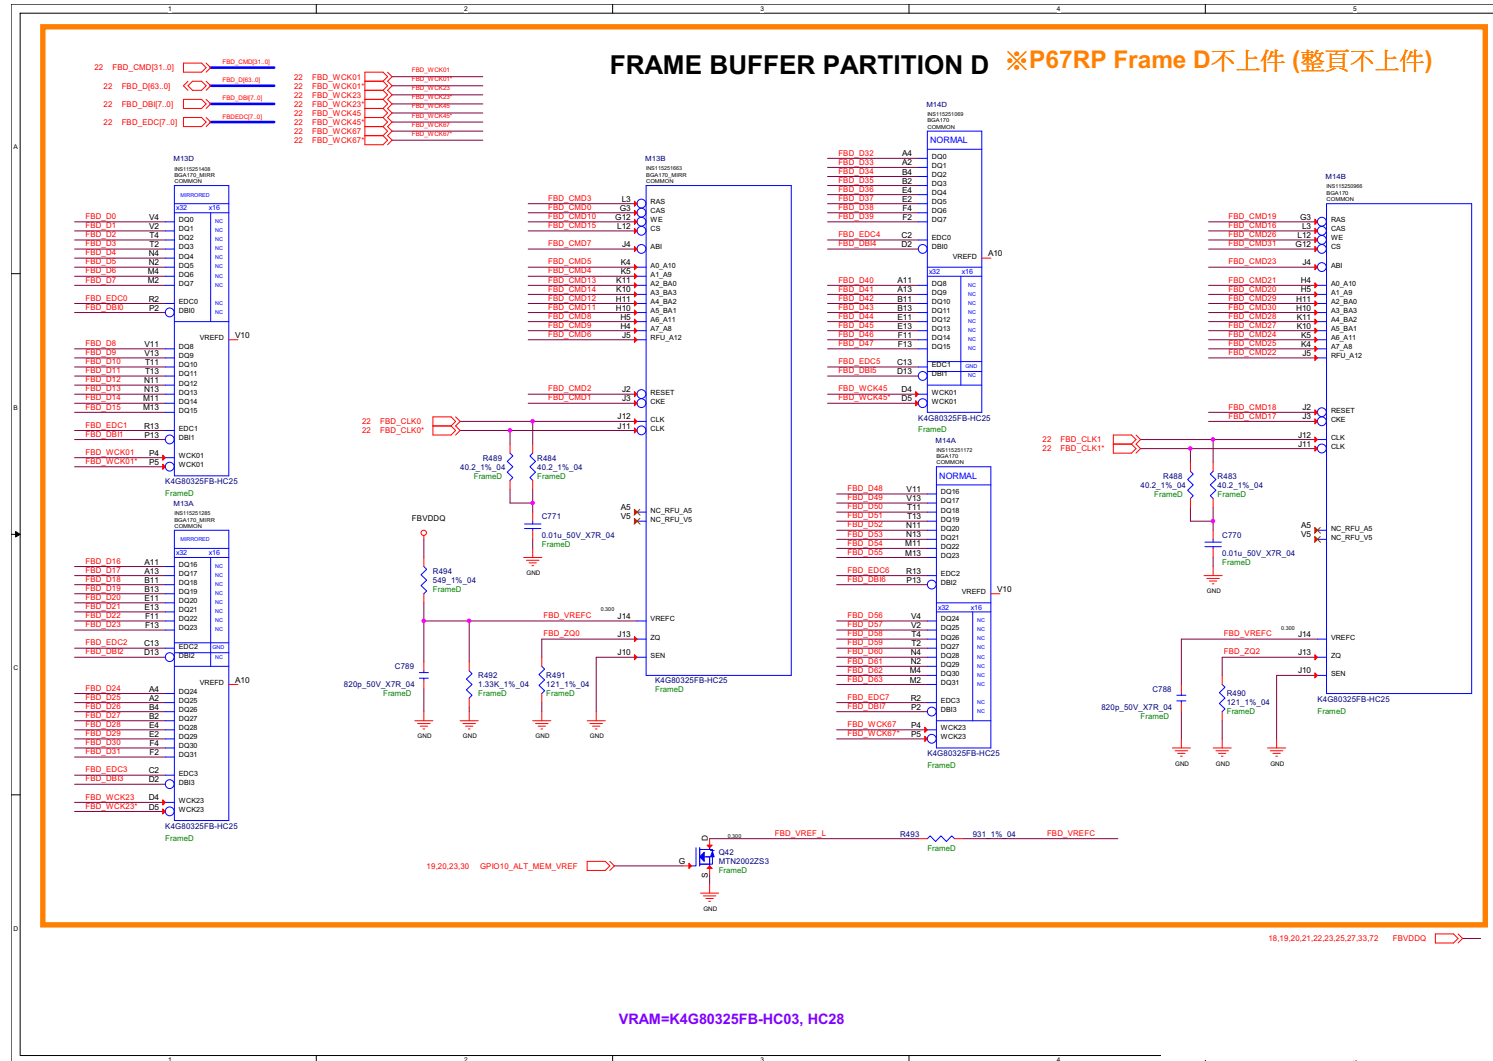


B.Schematic Diagrams


Sheet 24 of 91  
Frame Buffer  
Partition D

# Frame Buffer Partition C\_D

Sheet 25 of 91  
Frame Buffer  
Partition C\_D

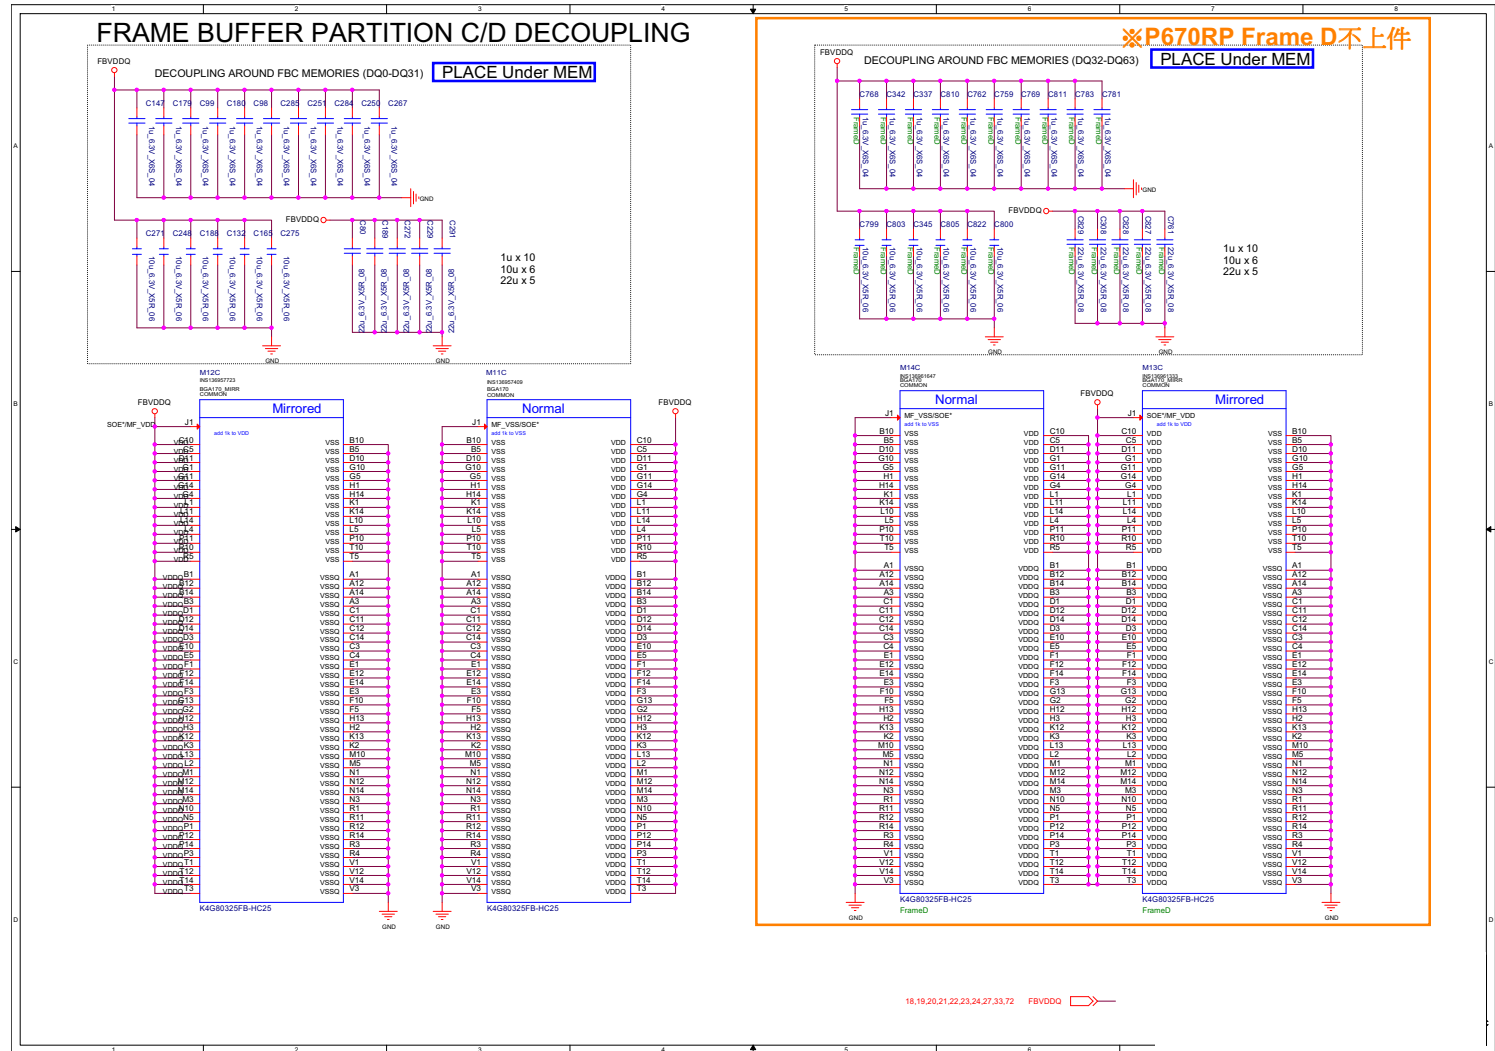


# GPU Decoupling 1

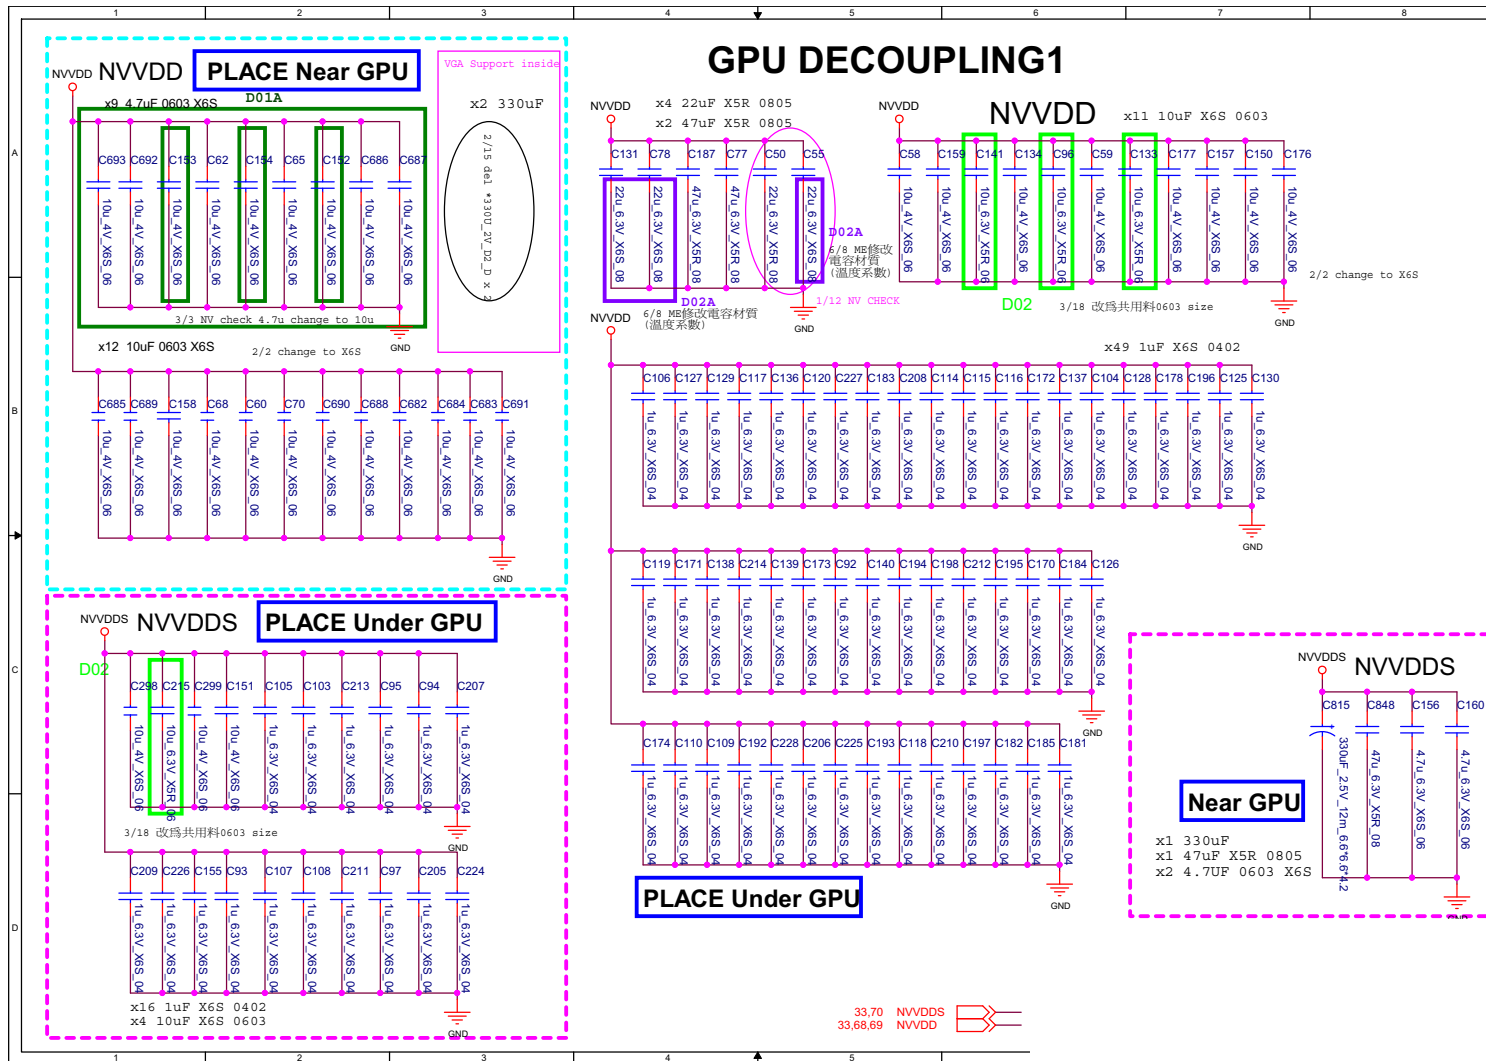

Sheet 26 of 91  
GPU Decoupling 1


# GPU Decoupling 2

Sheet 27 of 91  
GPU Decoupling 2

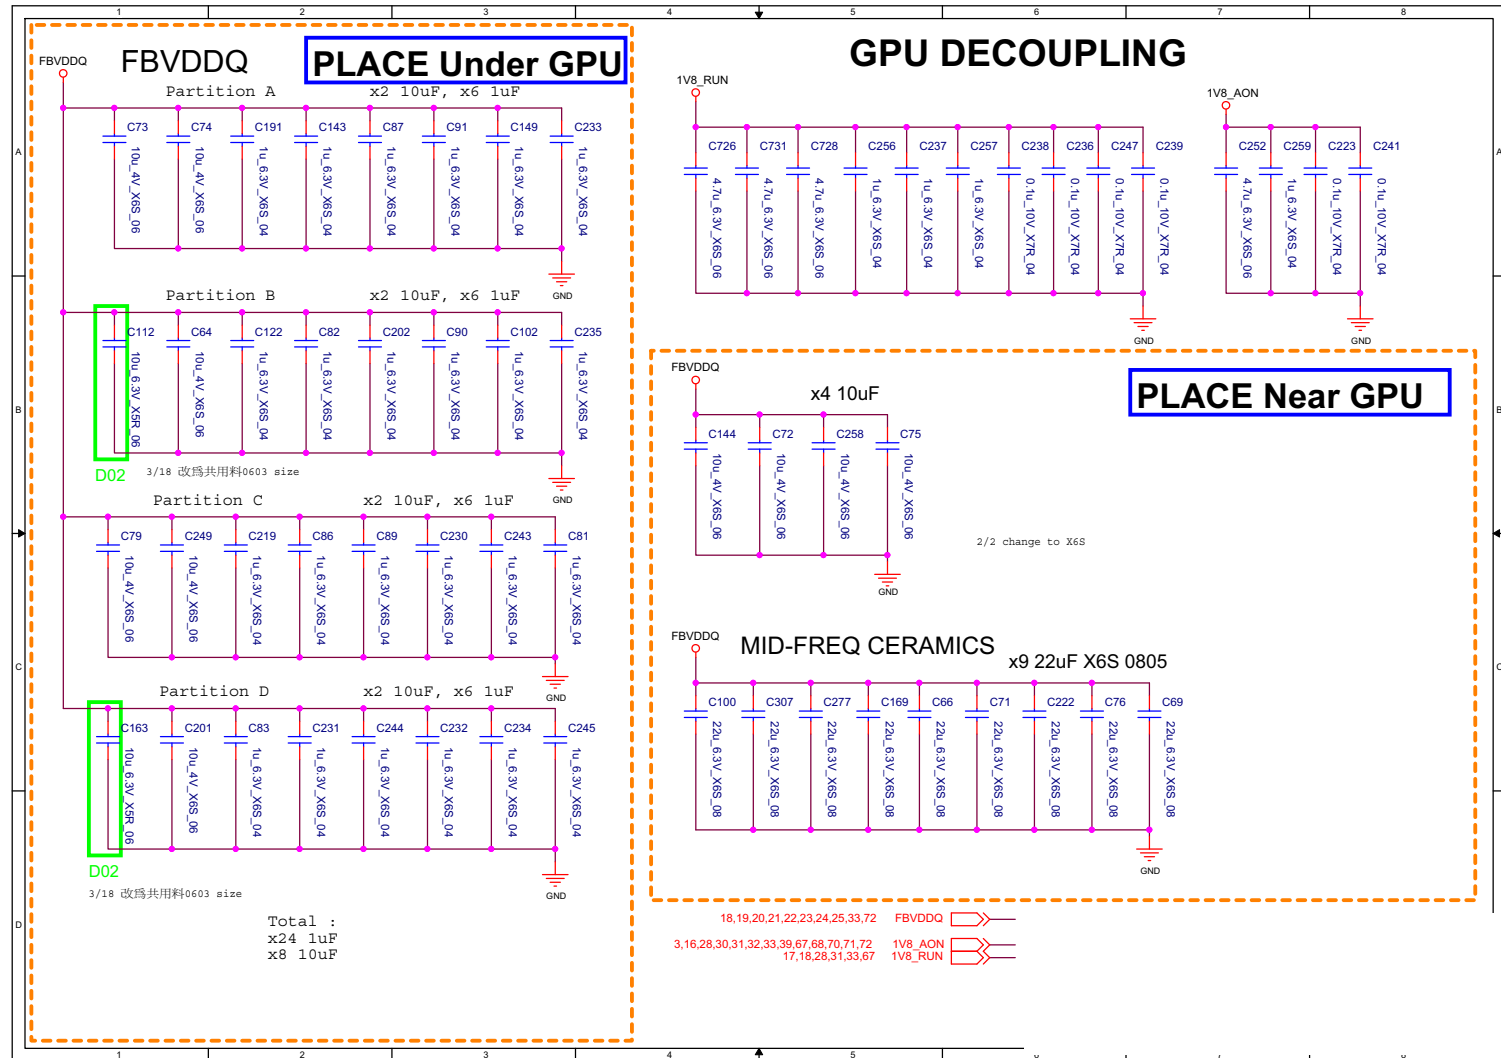




# Straps & XTAL

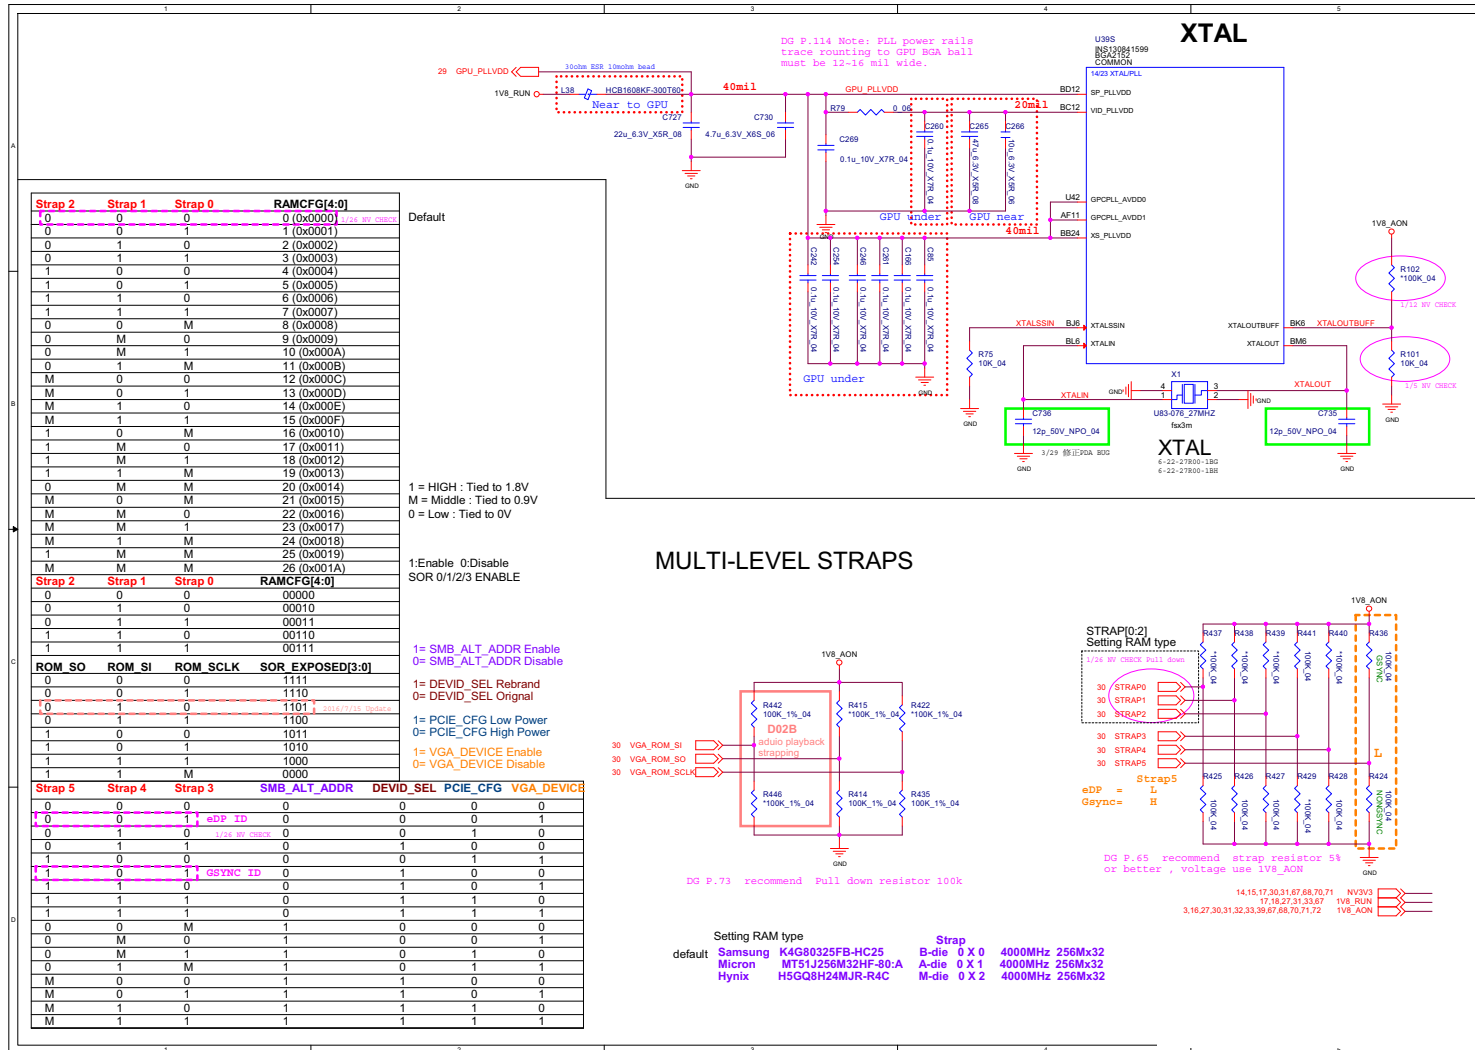

Sheet 28 of 91  
Straps and XTAL



# Misc - GPIO, I2C and ROM

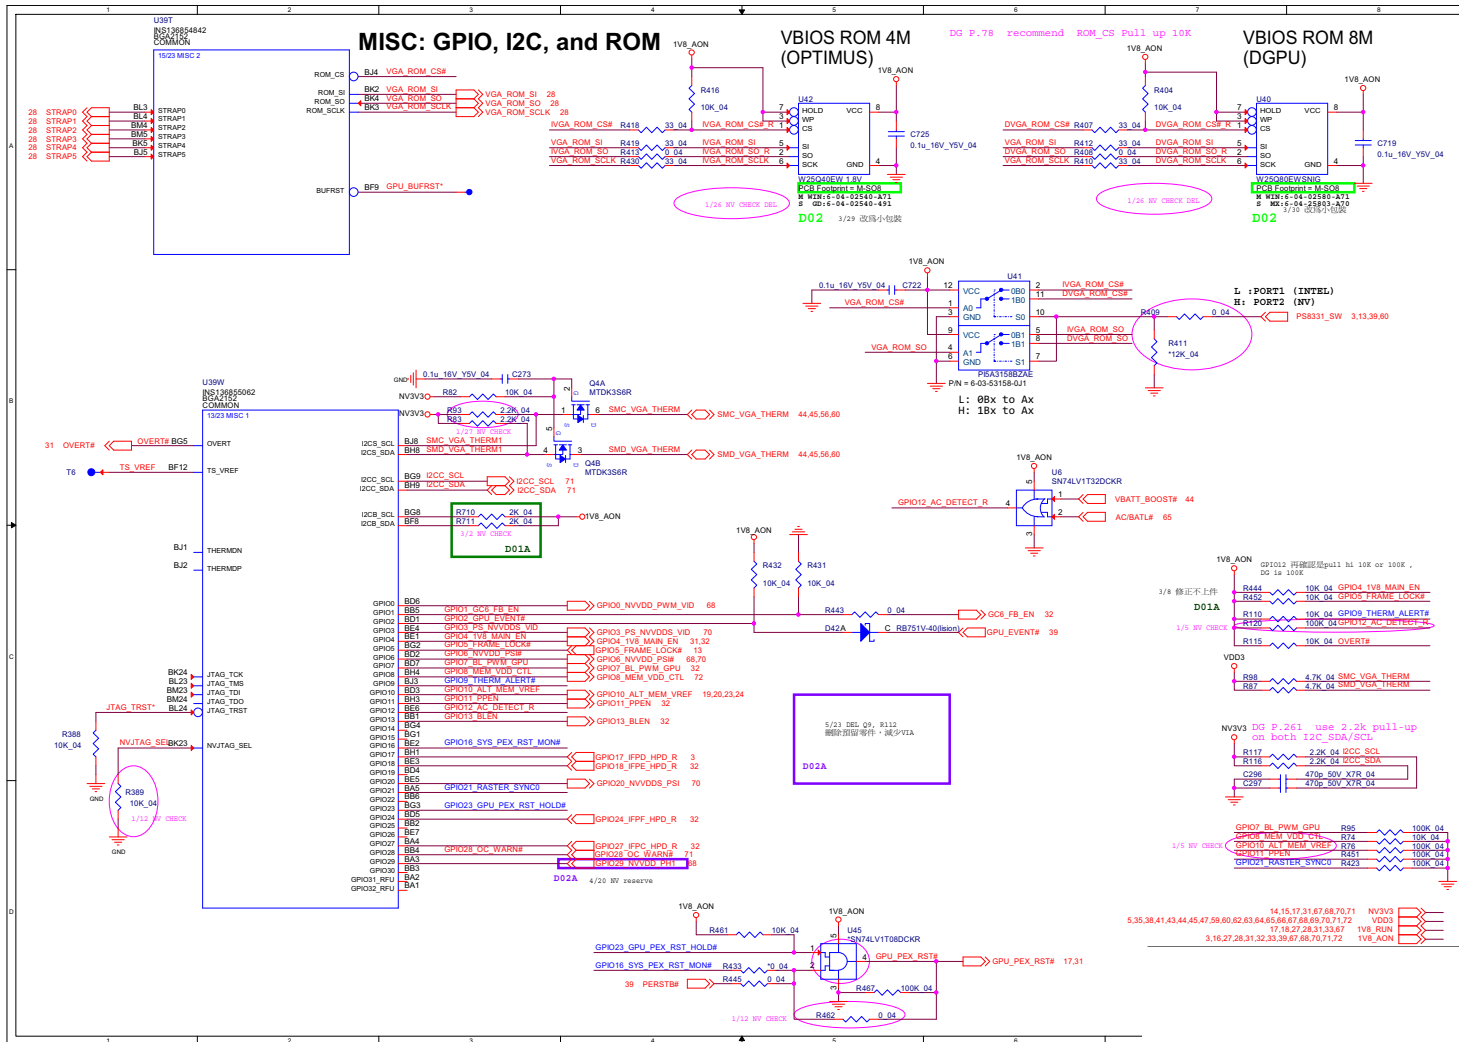


Sheet 30 of 91  
Misc - GPIO, I2C and ROM


B.Schematic Diagrams

# NVIDIA Power Sequence

Sheet 31 of 91  
NVIDIA Power  
Sequence

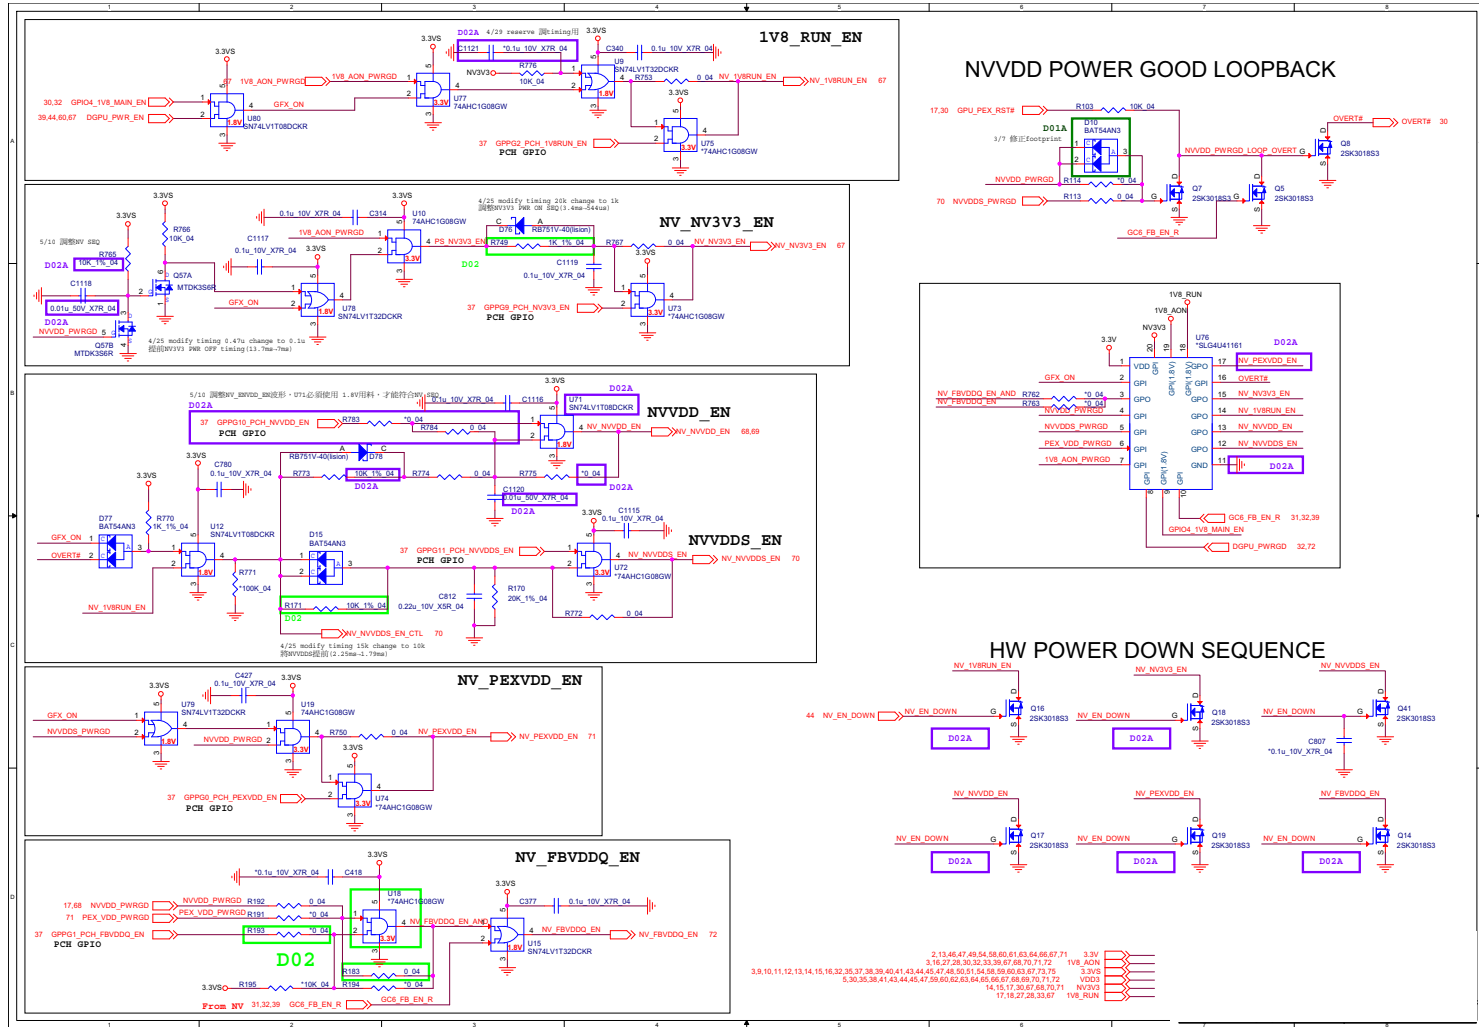

# GPIO Level Shift

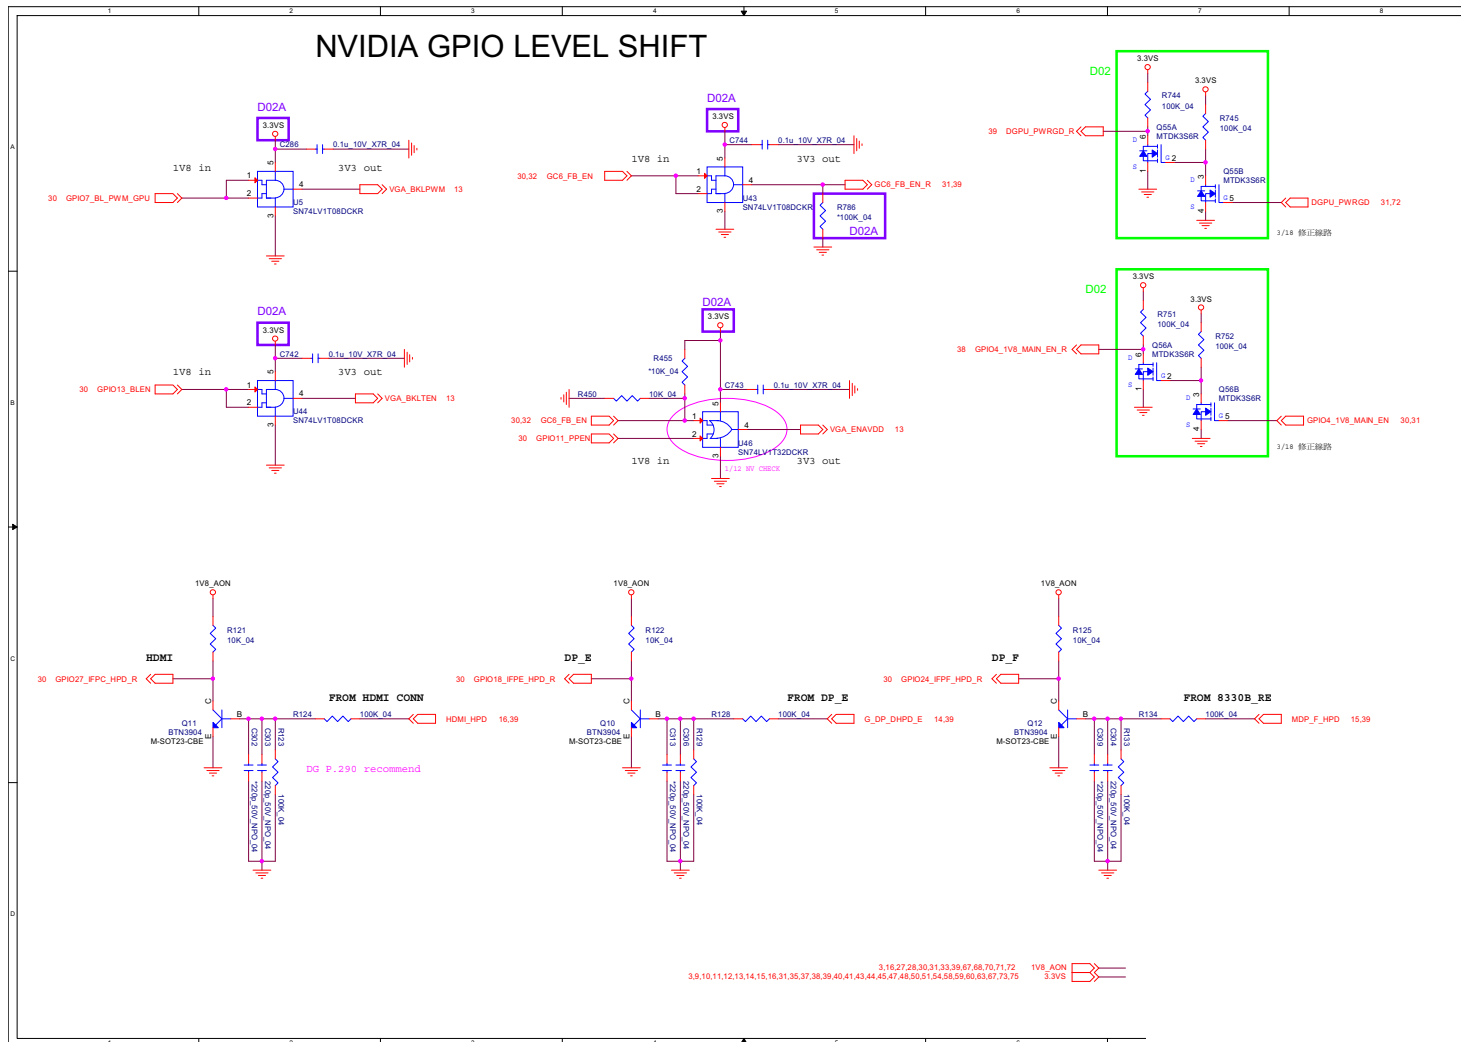


Sheet 32 of 91  
GPIO Level Shift

B.Schematic Diagrams



# GPU GND

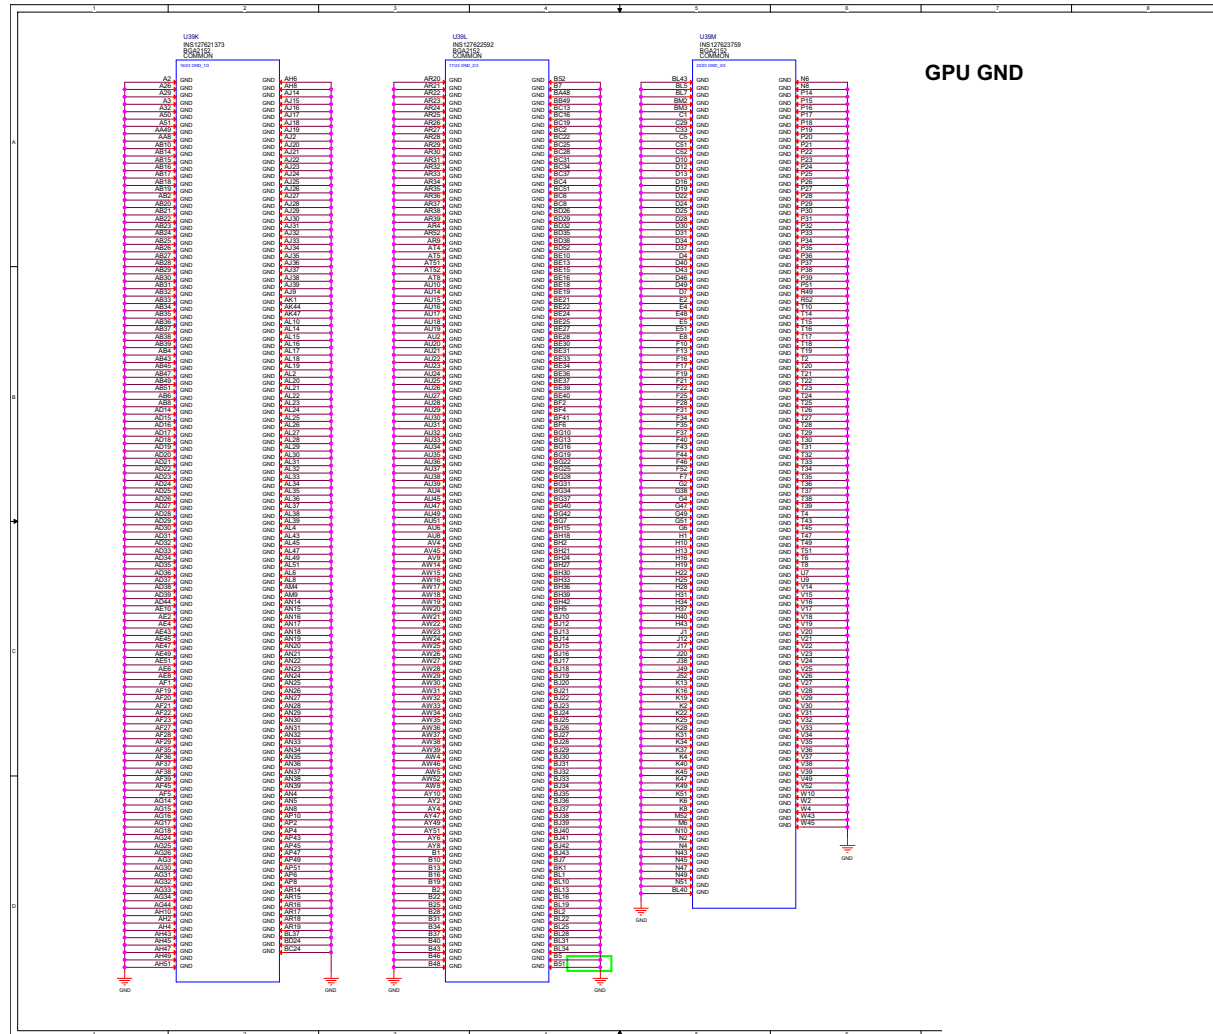

GPU GND


Sheet 34 of 91  
GPU GND

B.Schematic Diagrams




# PCH 1/9

Sheet 35 of 91  
PCH 1/9

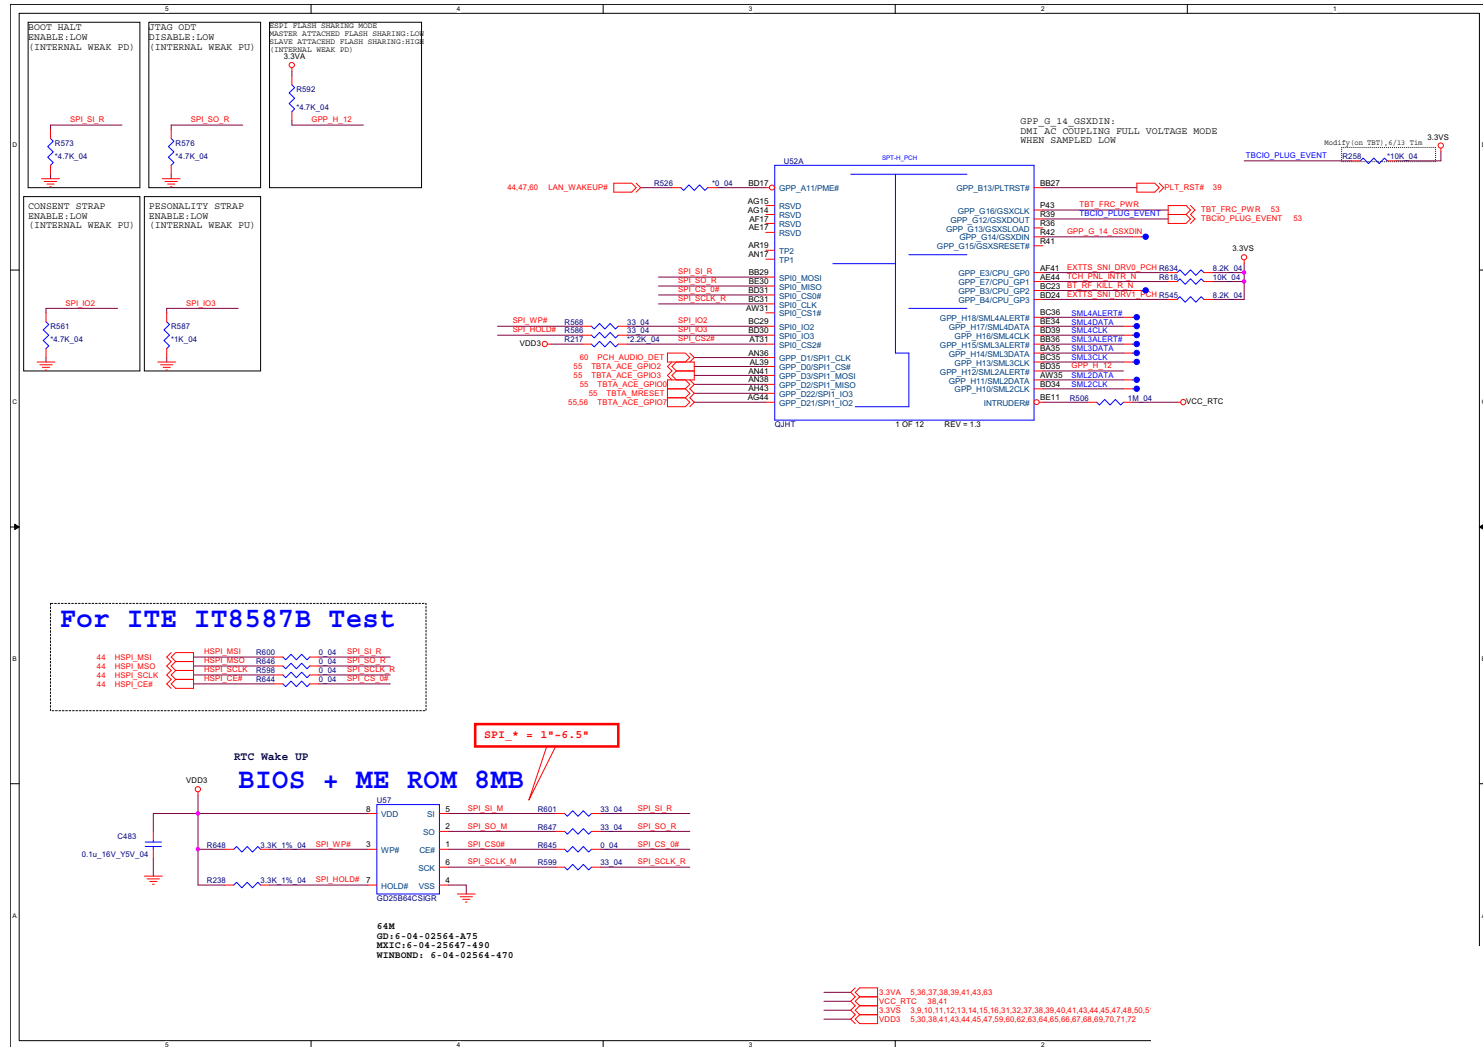

PCH 2/9

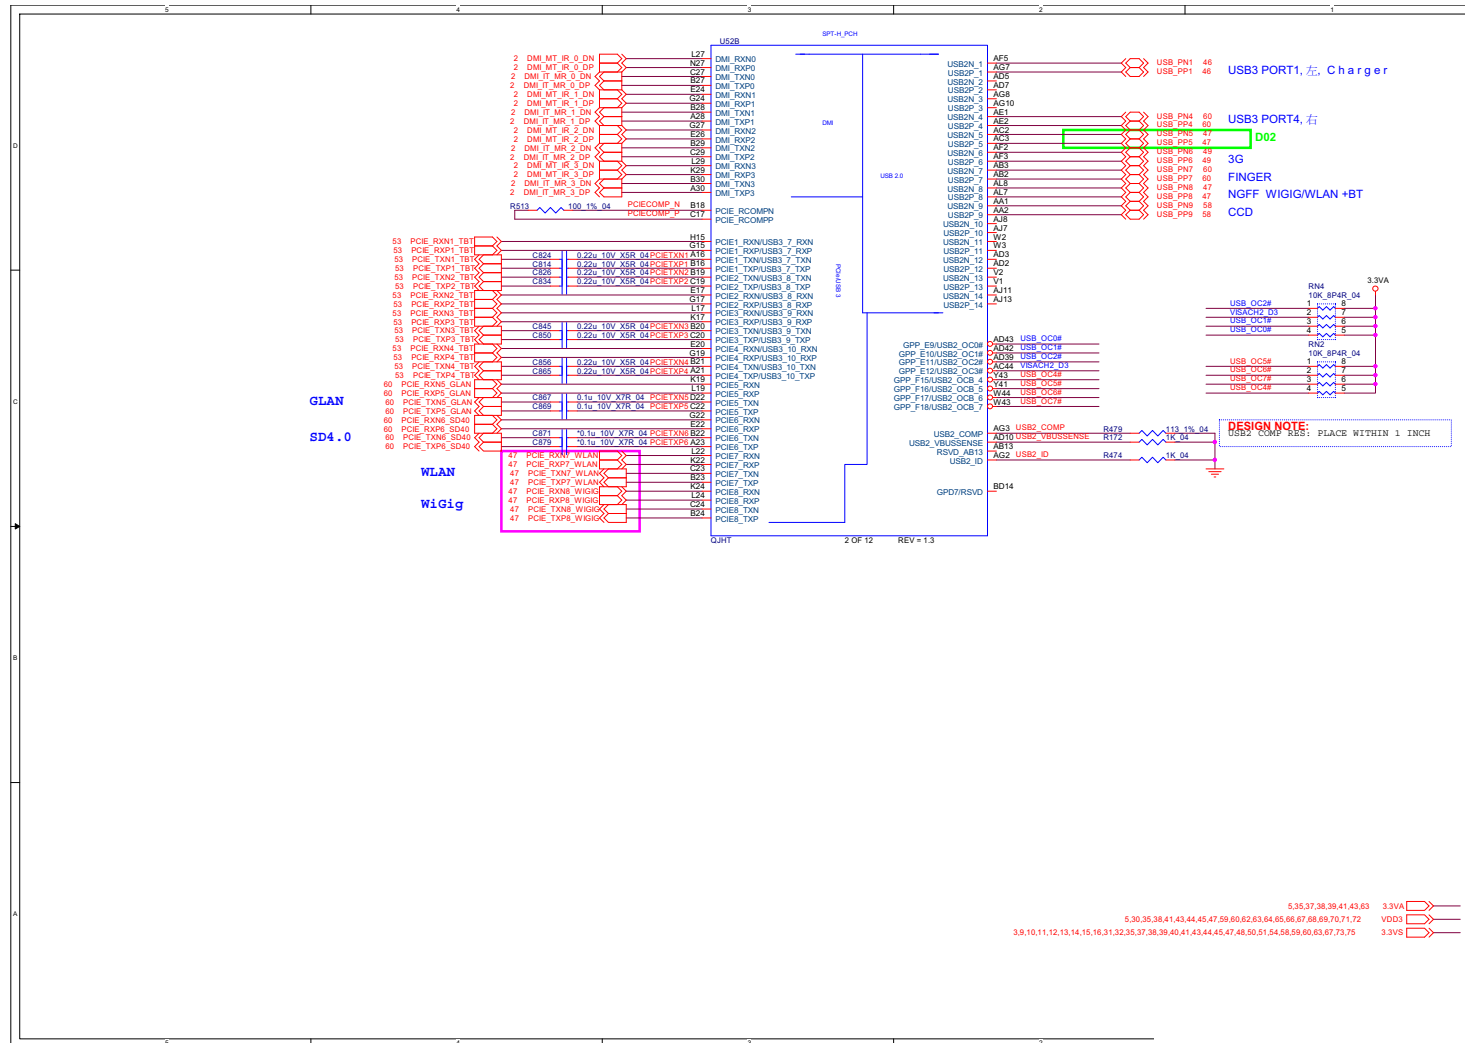


Sheet 36 of 91  
PCH 2/9

B.Schematic Diagrams


# PCH 3/9

B.Schematic Diagrams

Sheet 37 of 91  
PCH 3/9

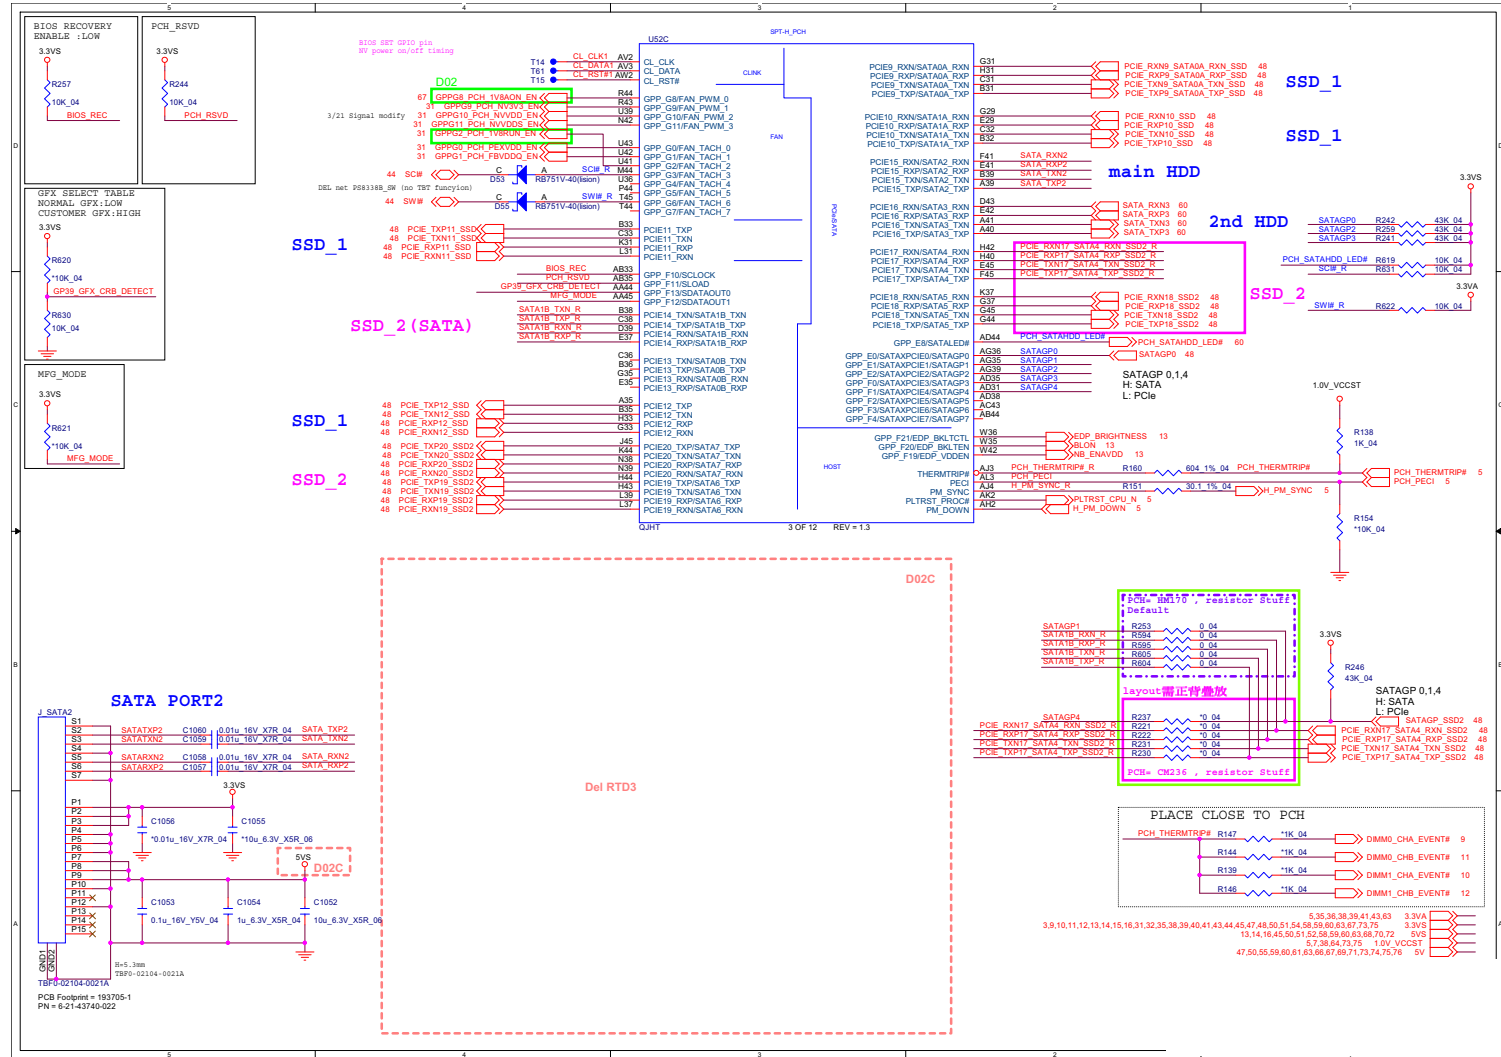

PCH 4/9

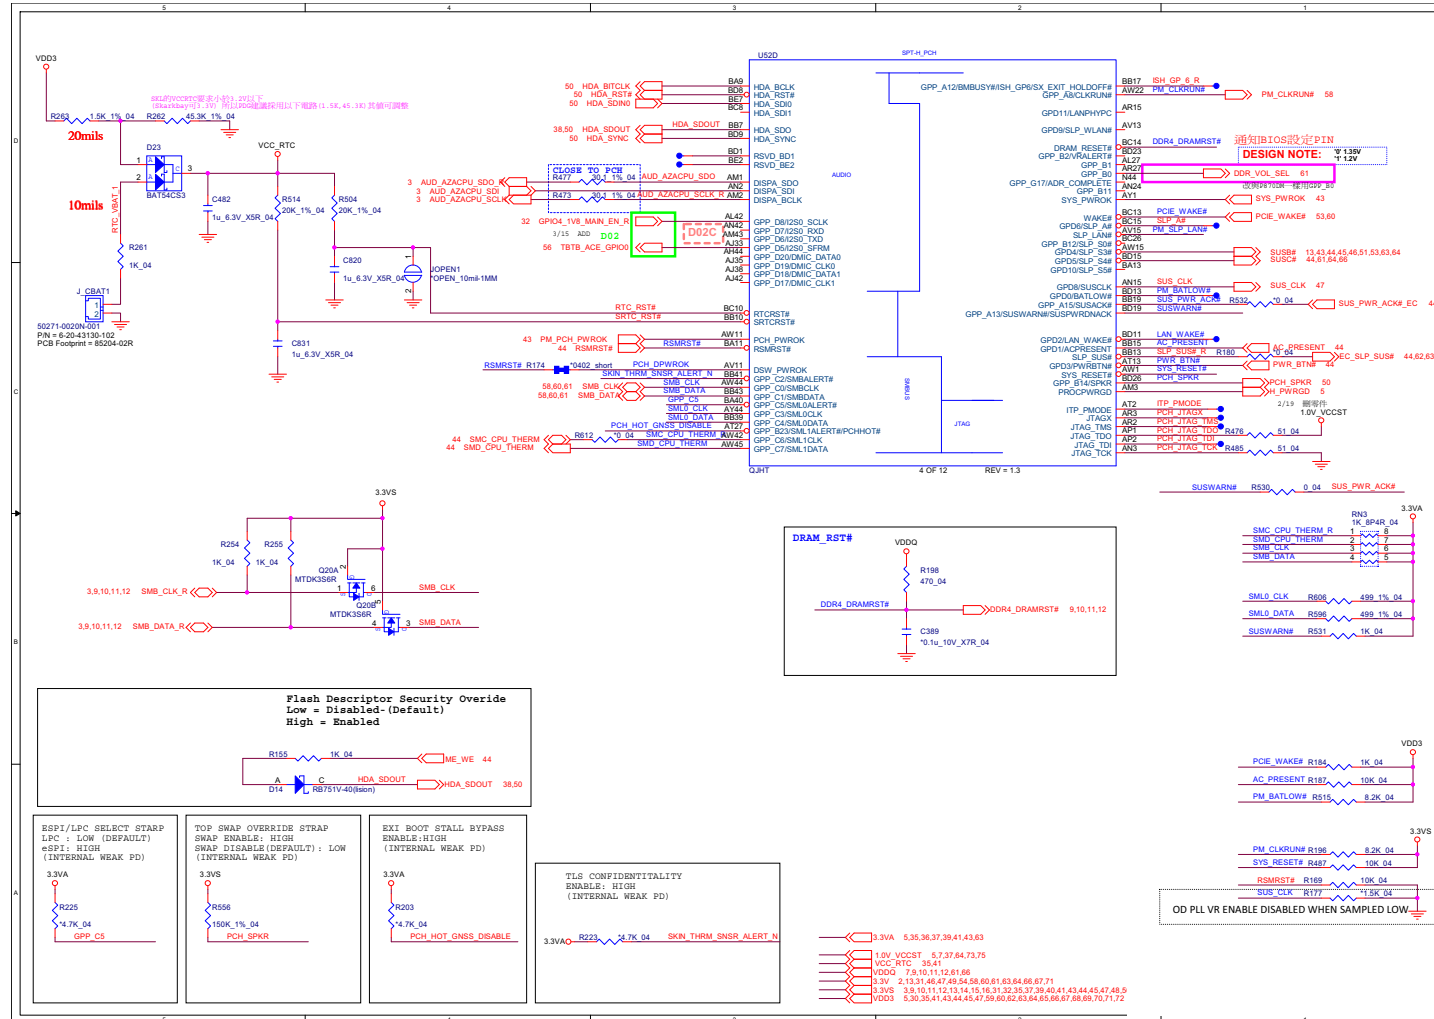


Sheet 38 of 91  
PCH 4/9


B.Schematic Diagrams

# PCH 5/9

Sheet 39 of 91  
PCH 5/9

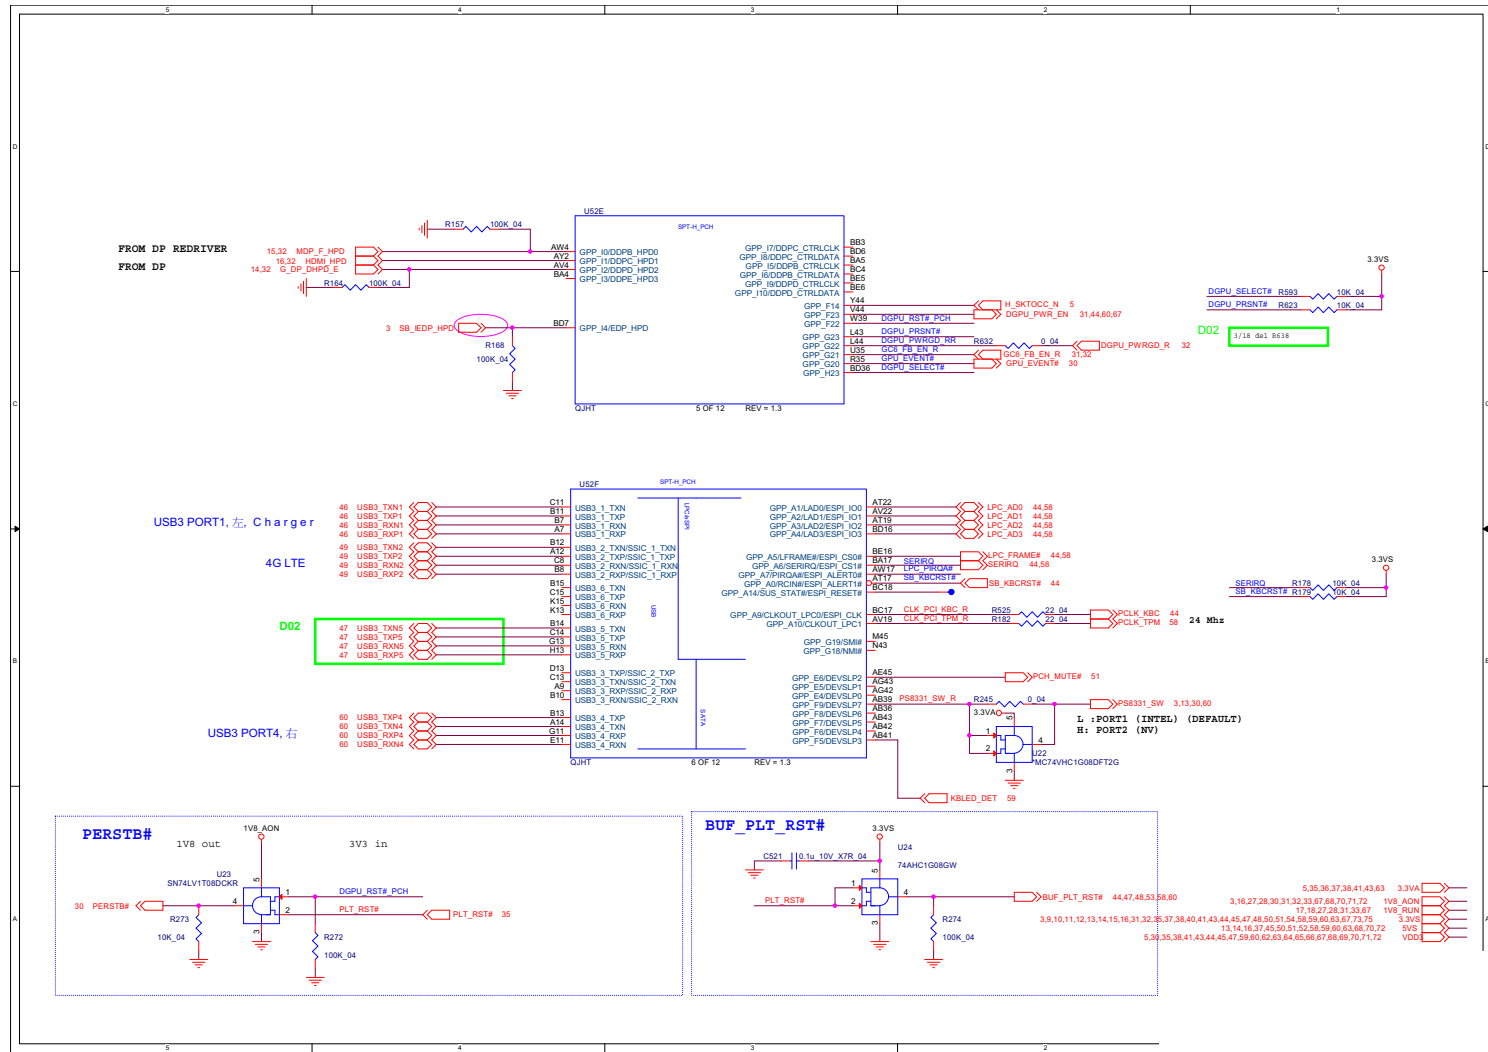


# PCH 6/9

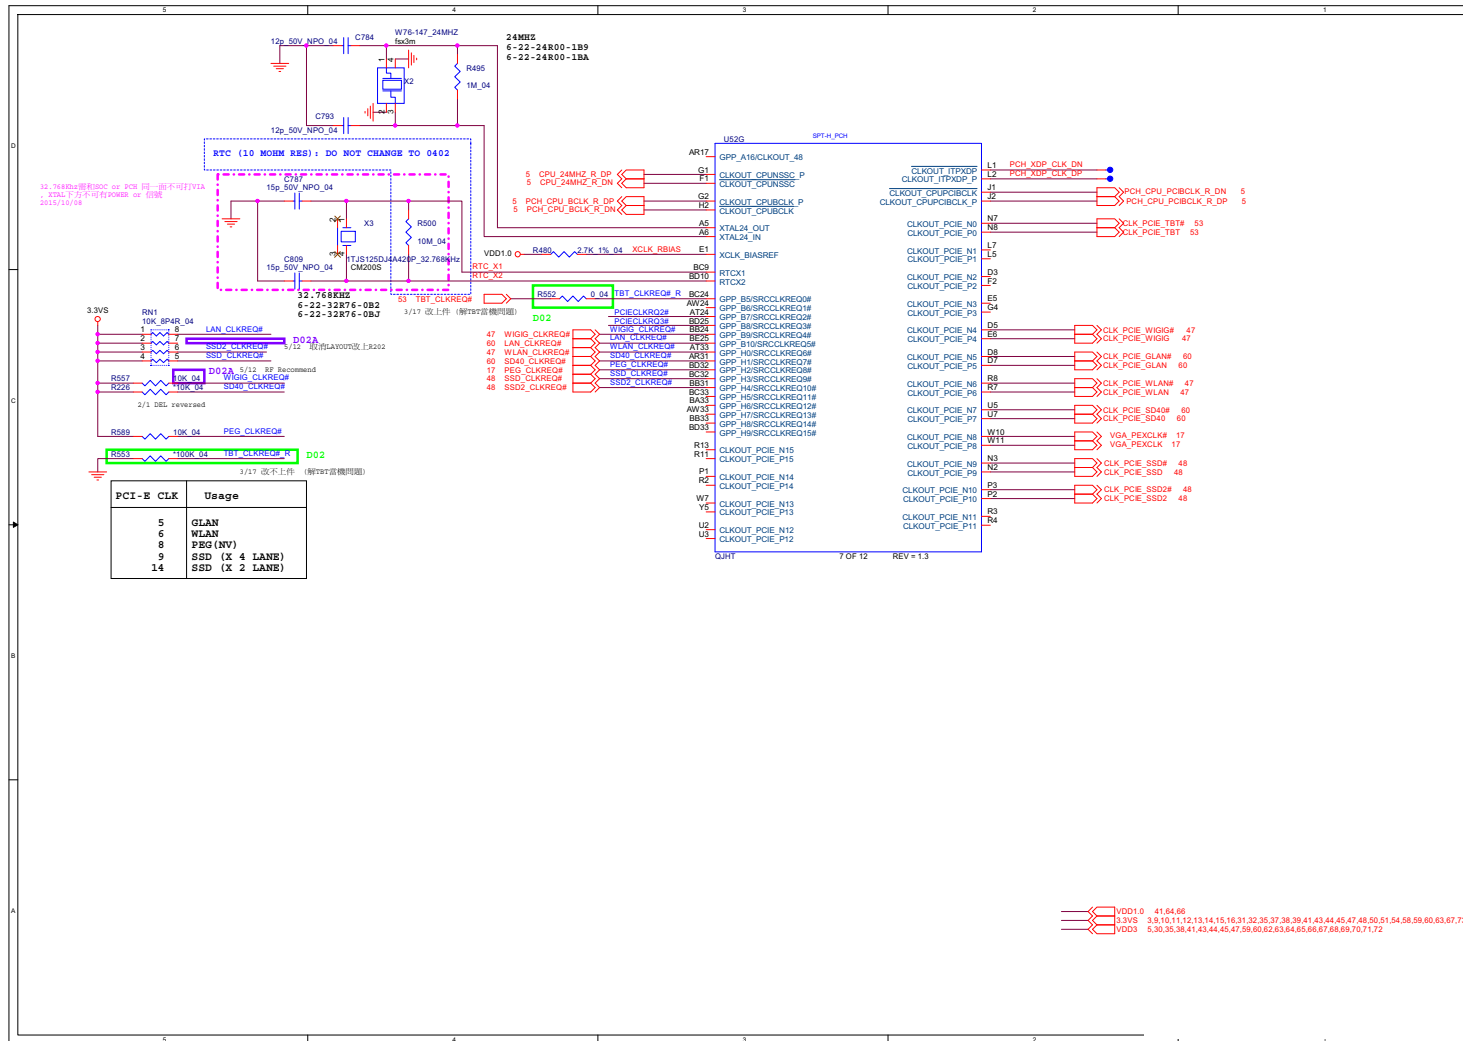

Sheet 40 of 91  
 PCH 6/9


# PCH 7/9

Sheet 41 of 91  
PCH 7/9

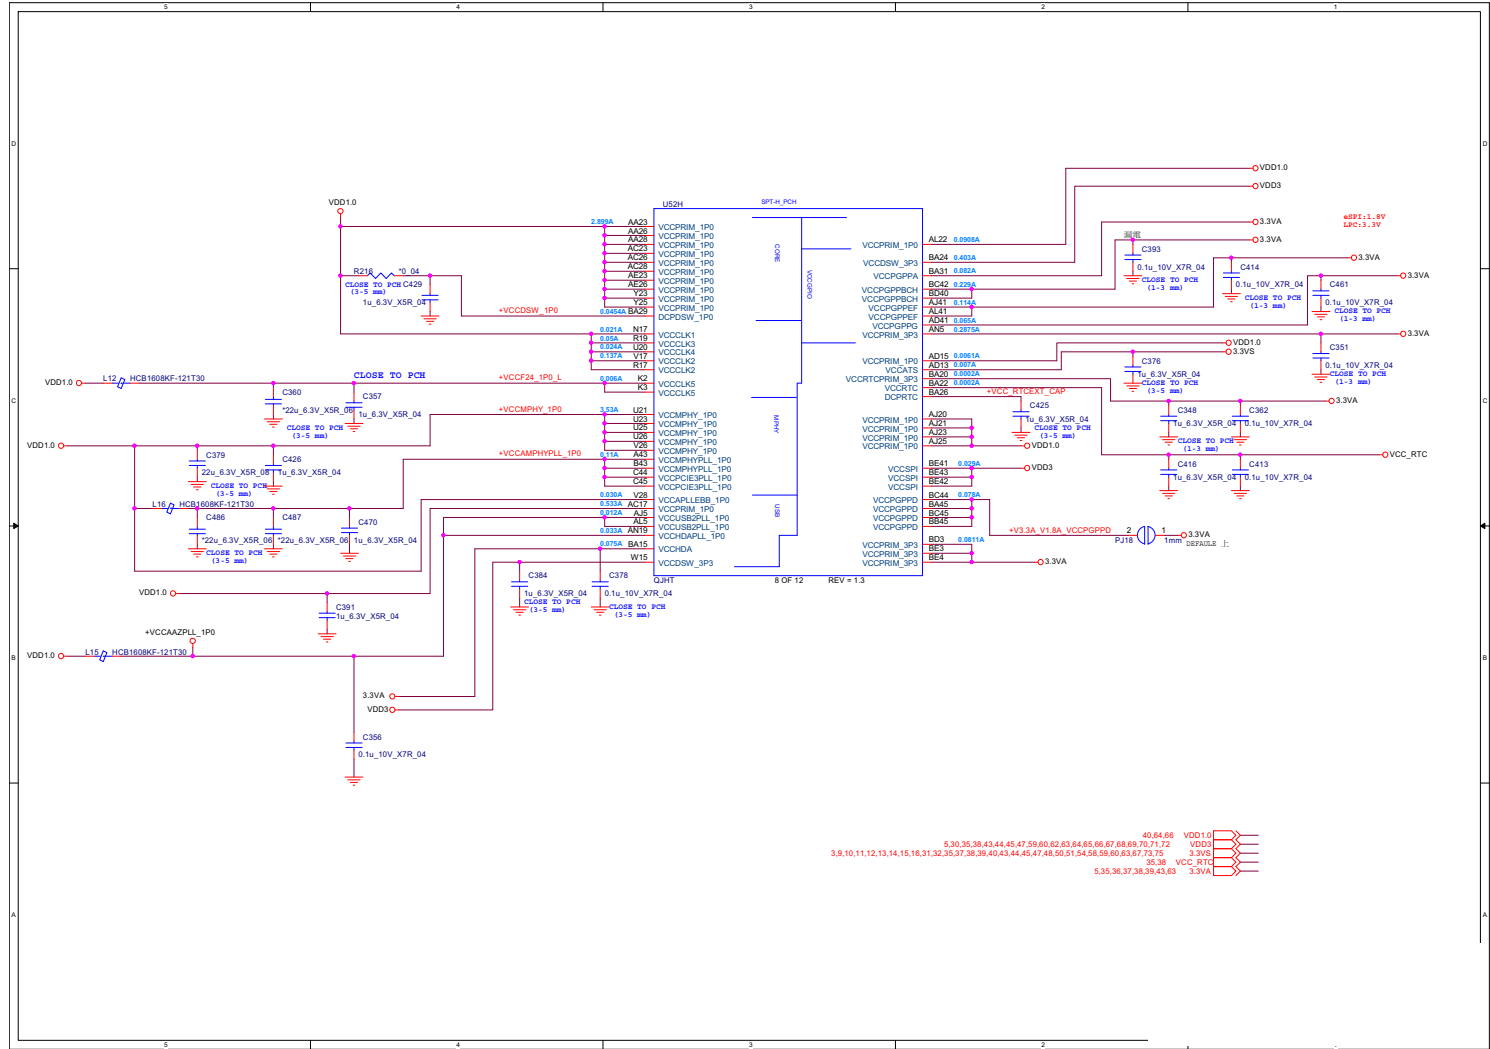



PCH 8/9

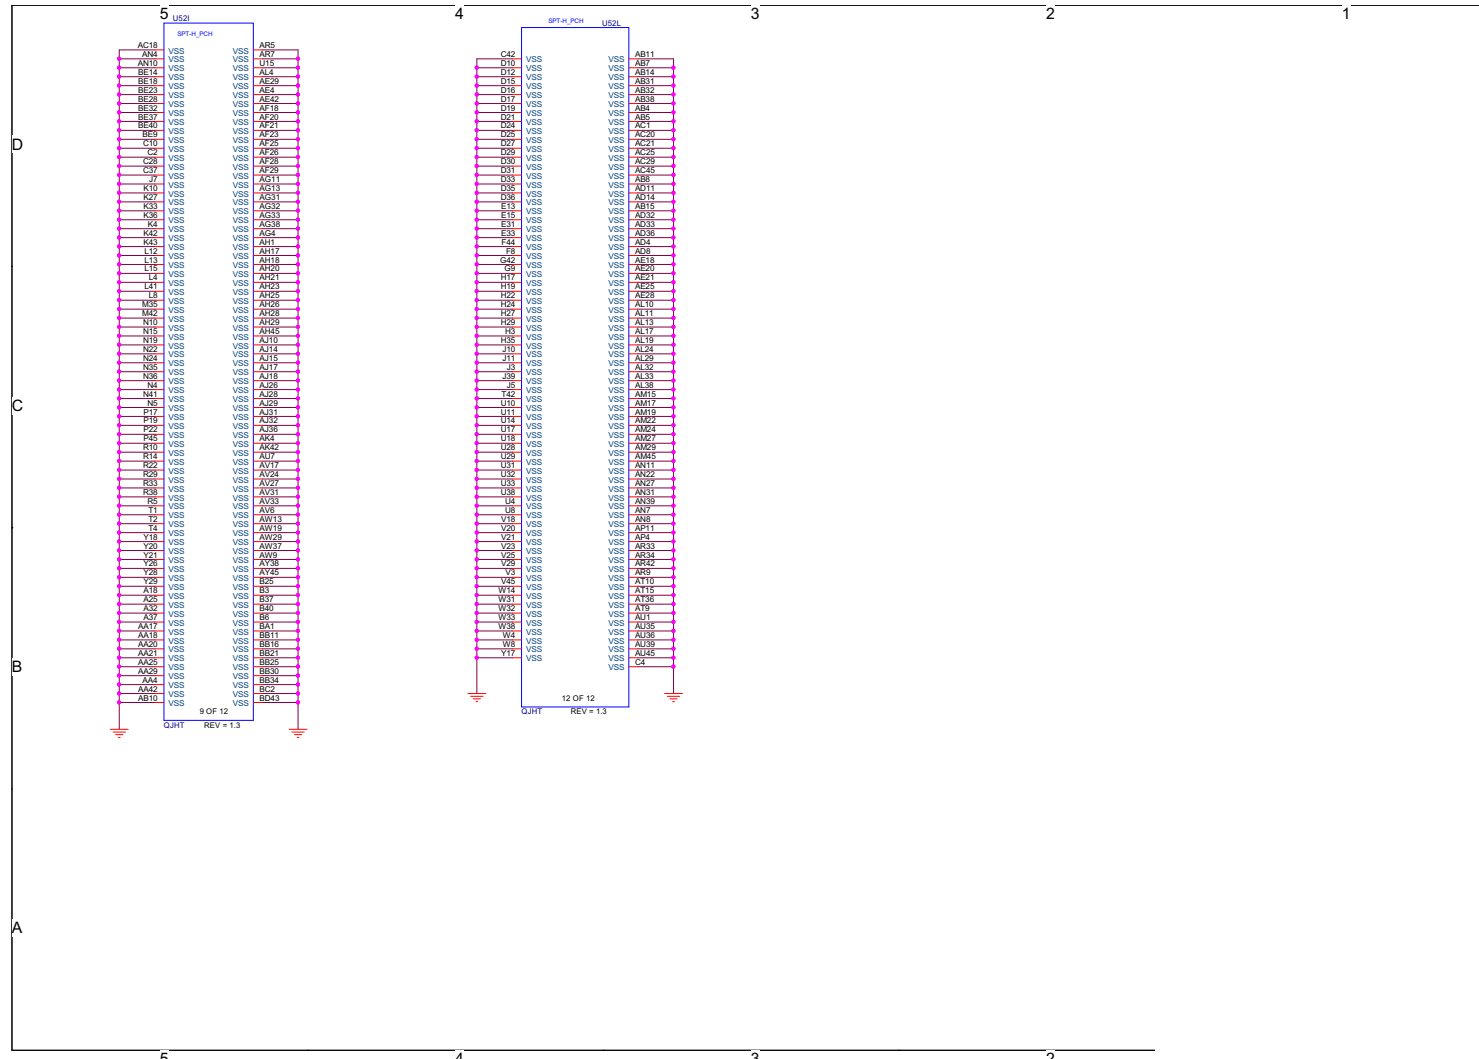


Sheet 42 of 91  
PCH 8/9


B.Schematic Diagrams

# PCH 9/9

Sheet 43 of 91  
PCH 9/9

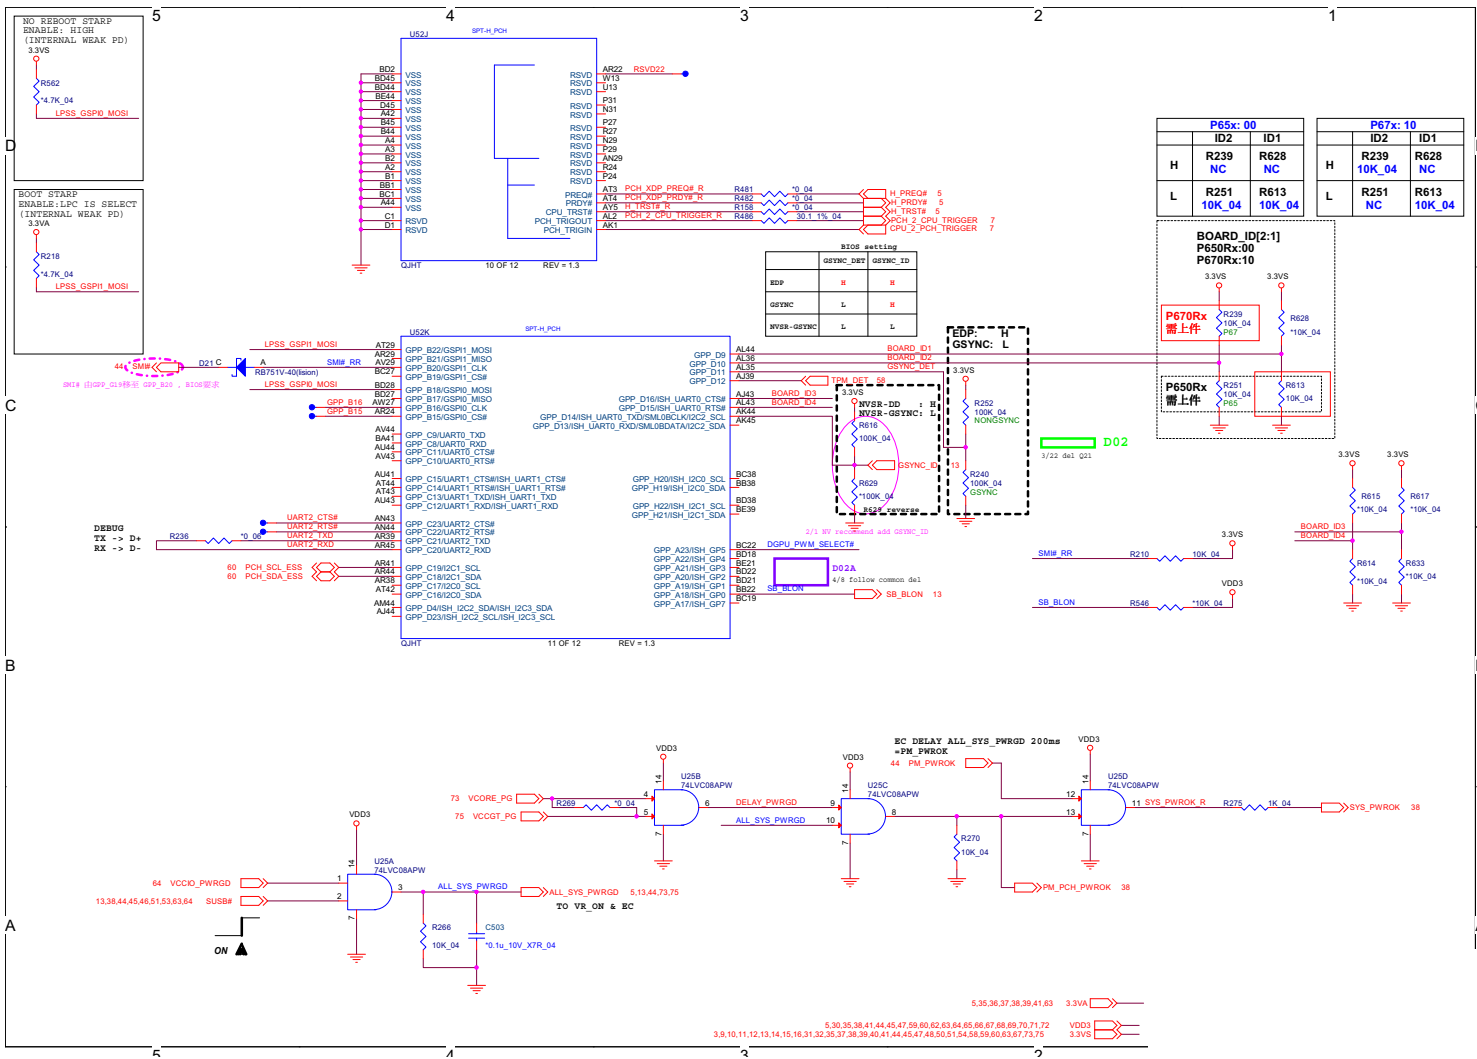

# KBC IT8587

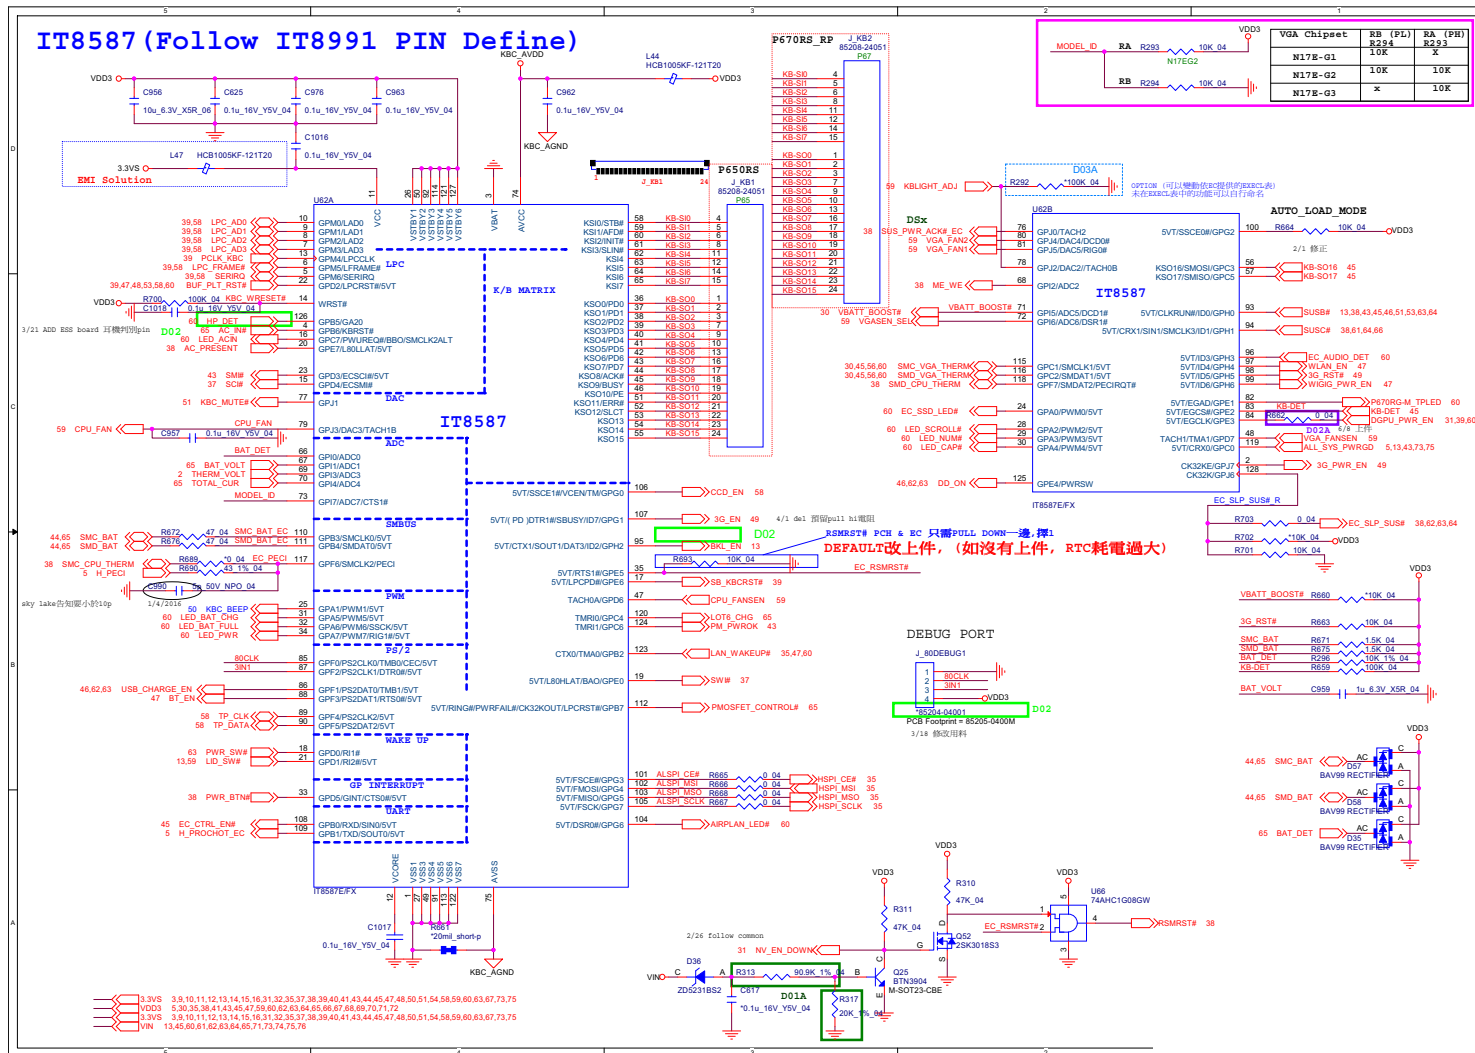


Sheet 44 of 91  
KBC IT8587


B.Schematic Diagrams

# RGB KB Only

Sheet 45 of 91  
RGB KB only

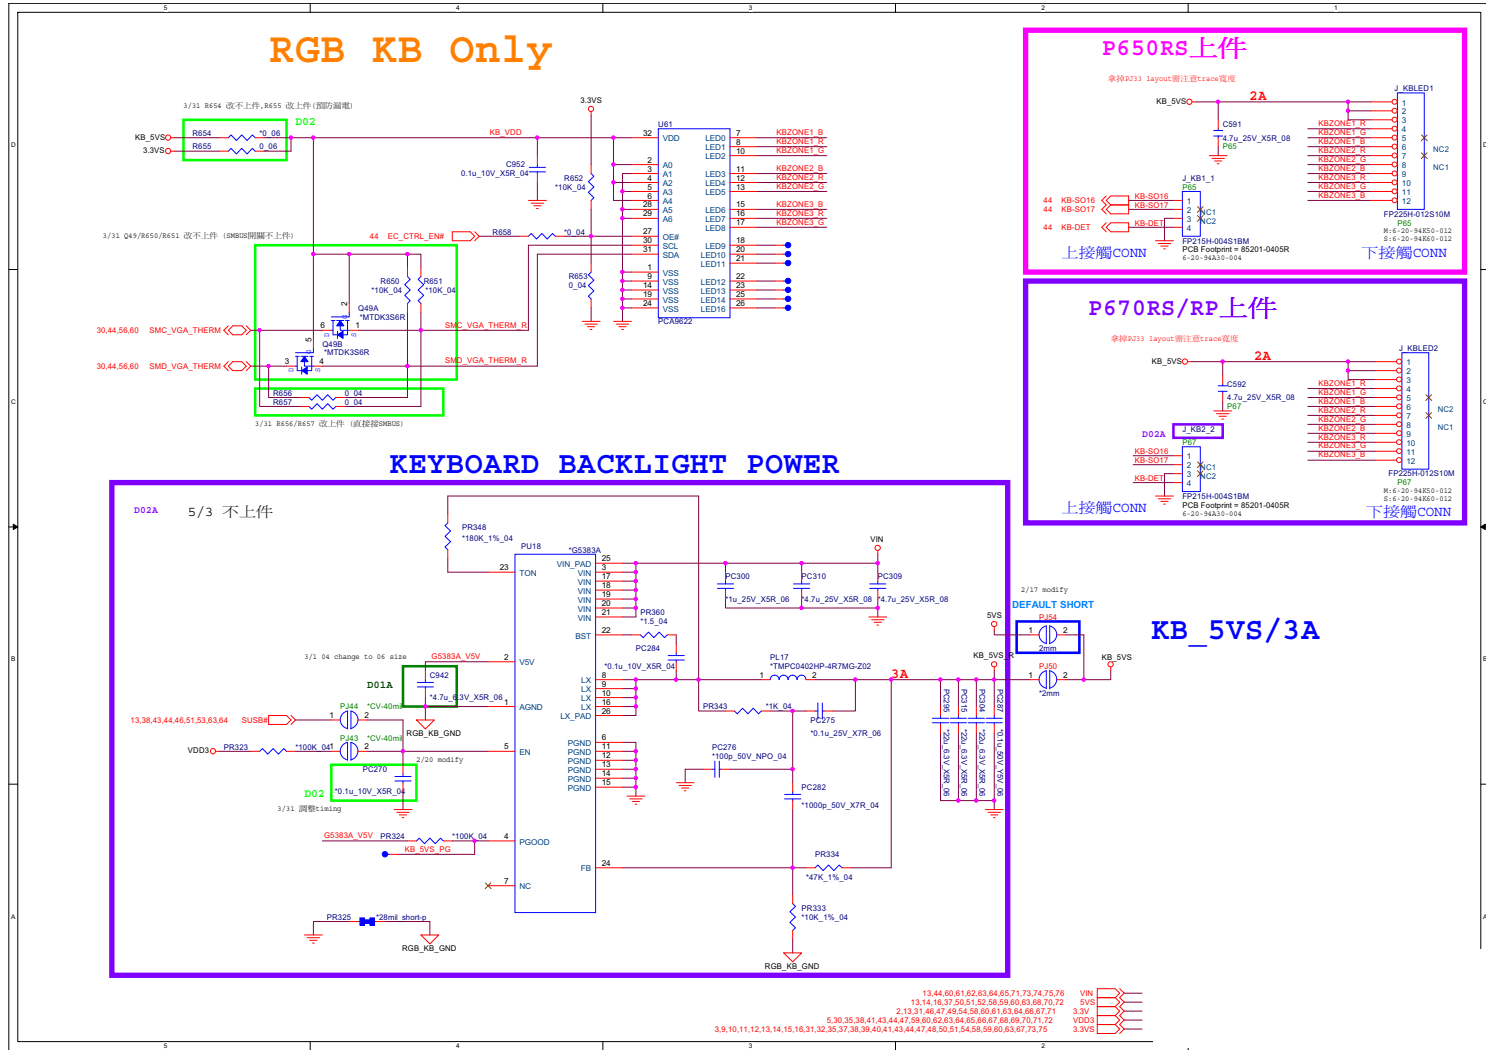


# USB Charger

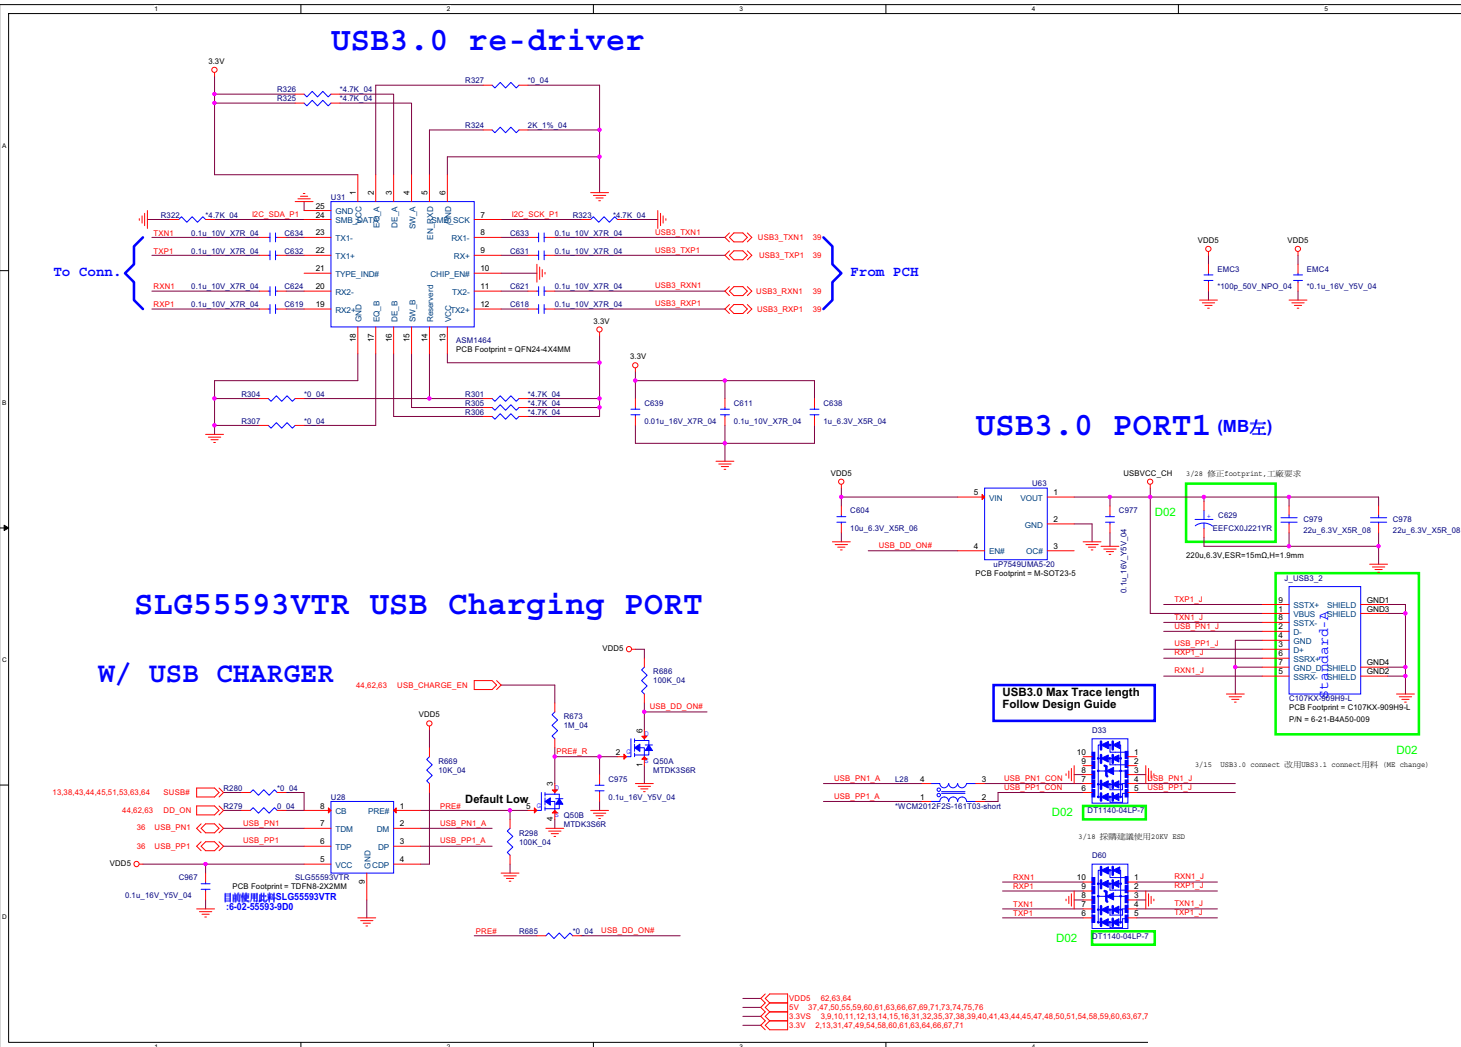

Sheet 46 of 91  
USB Charger


M.2 WiGig/WLAN + BT

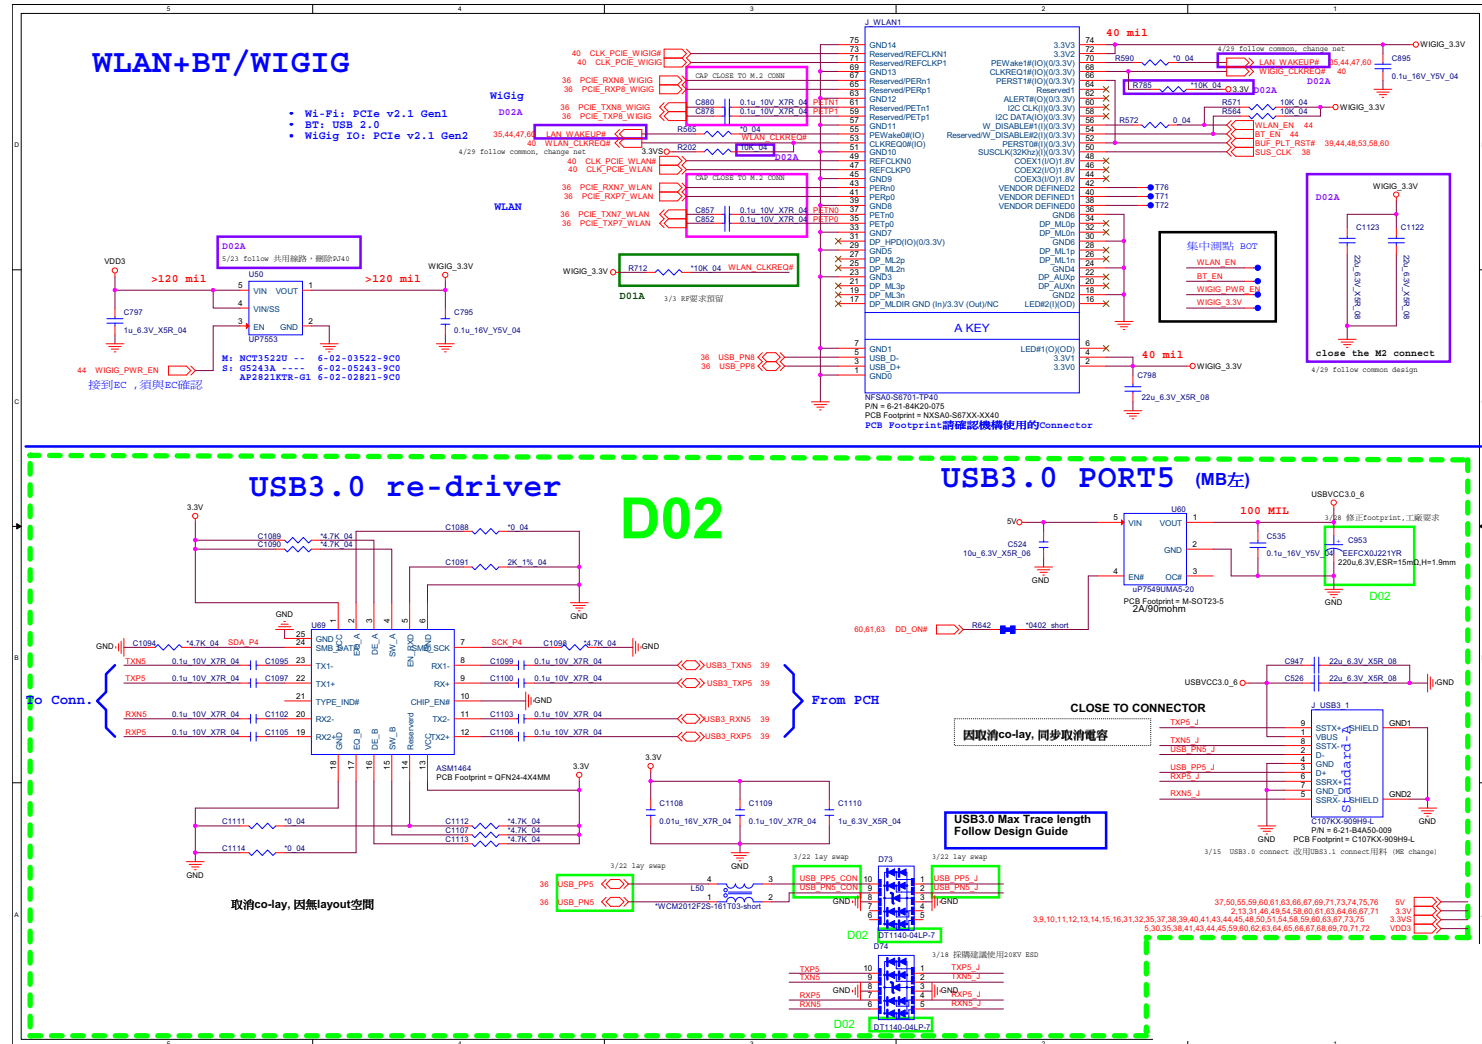

B.Schematic Diagrams

Sheet 47 of 91  
M.2 WiGig/WLAN + BT

# M.2 PCIe4X SSD

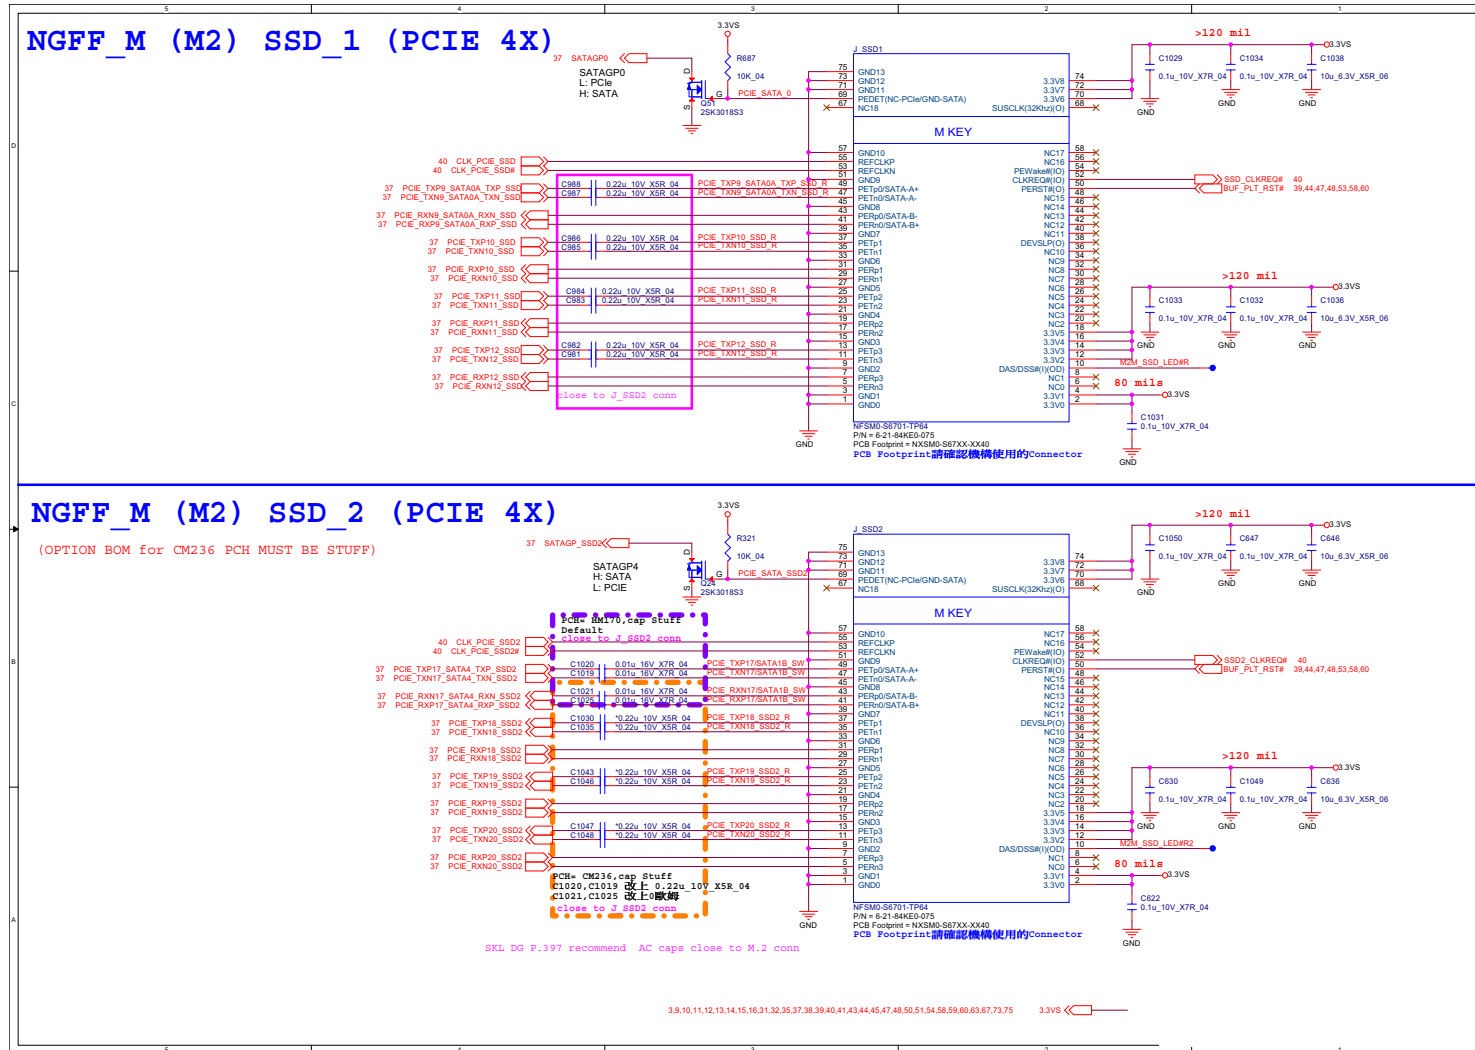

Sheet 48 of 91  
M.2 PCIe4X SSD


B.Schematic Diagrams

# M.2 3G/LTE

Only P670RS 3G不上件


3G /LTE CARD USB3.0

Sheet 49 of 91  
M.2 3G/LTE

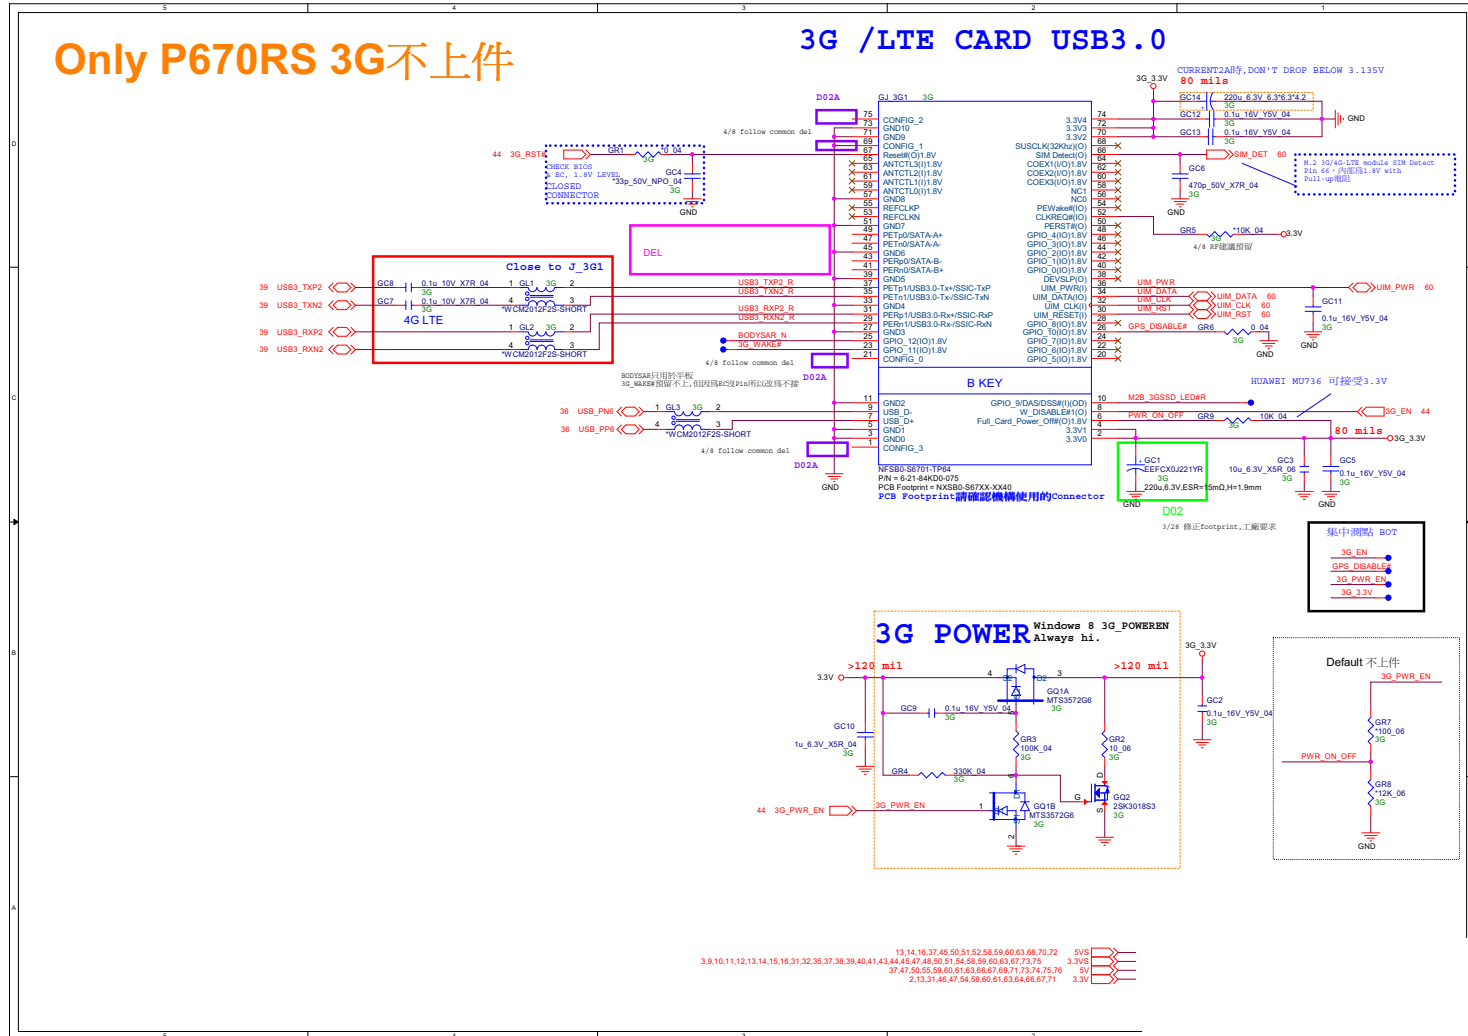



# Realtek ALC898

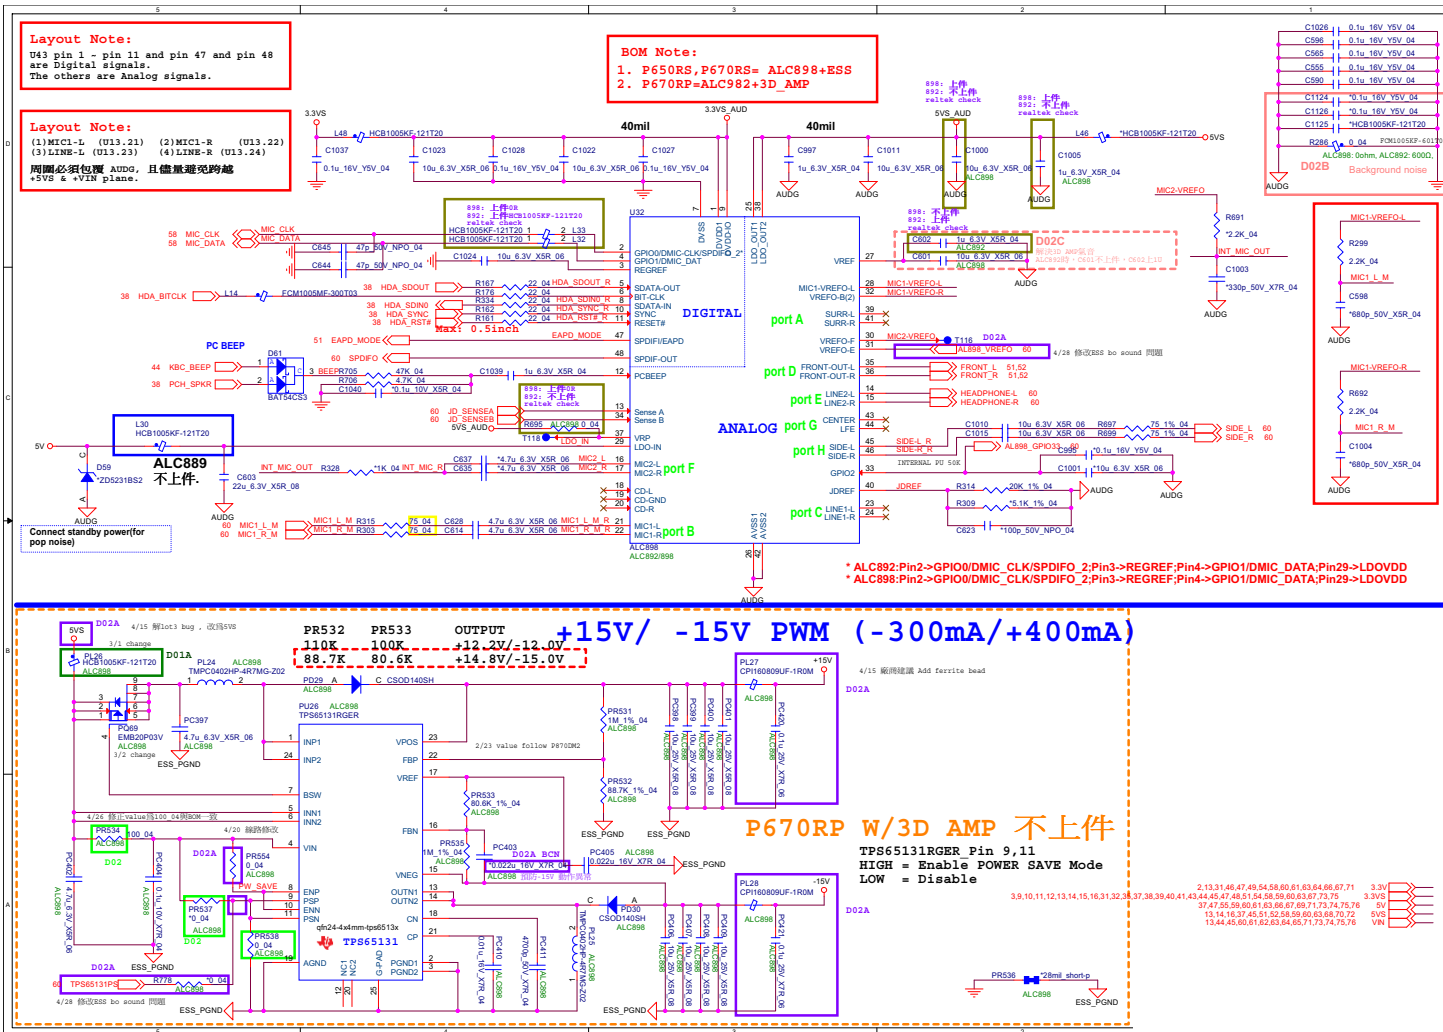

Sheet 50 of 91  
 Realtek ALC898


B.Schematic Diagrams

Schematic Diagrams


TPA2008D2

B.Schematic Diagrams

Sheet 51 of 91  
TPA2008D2

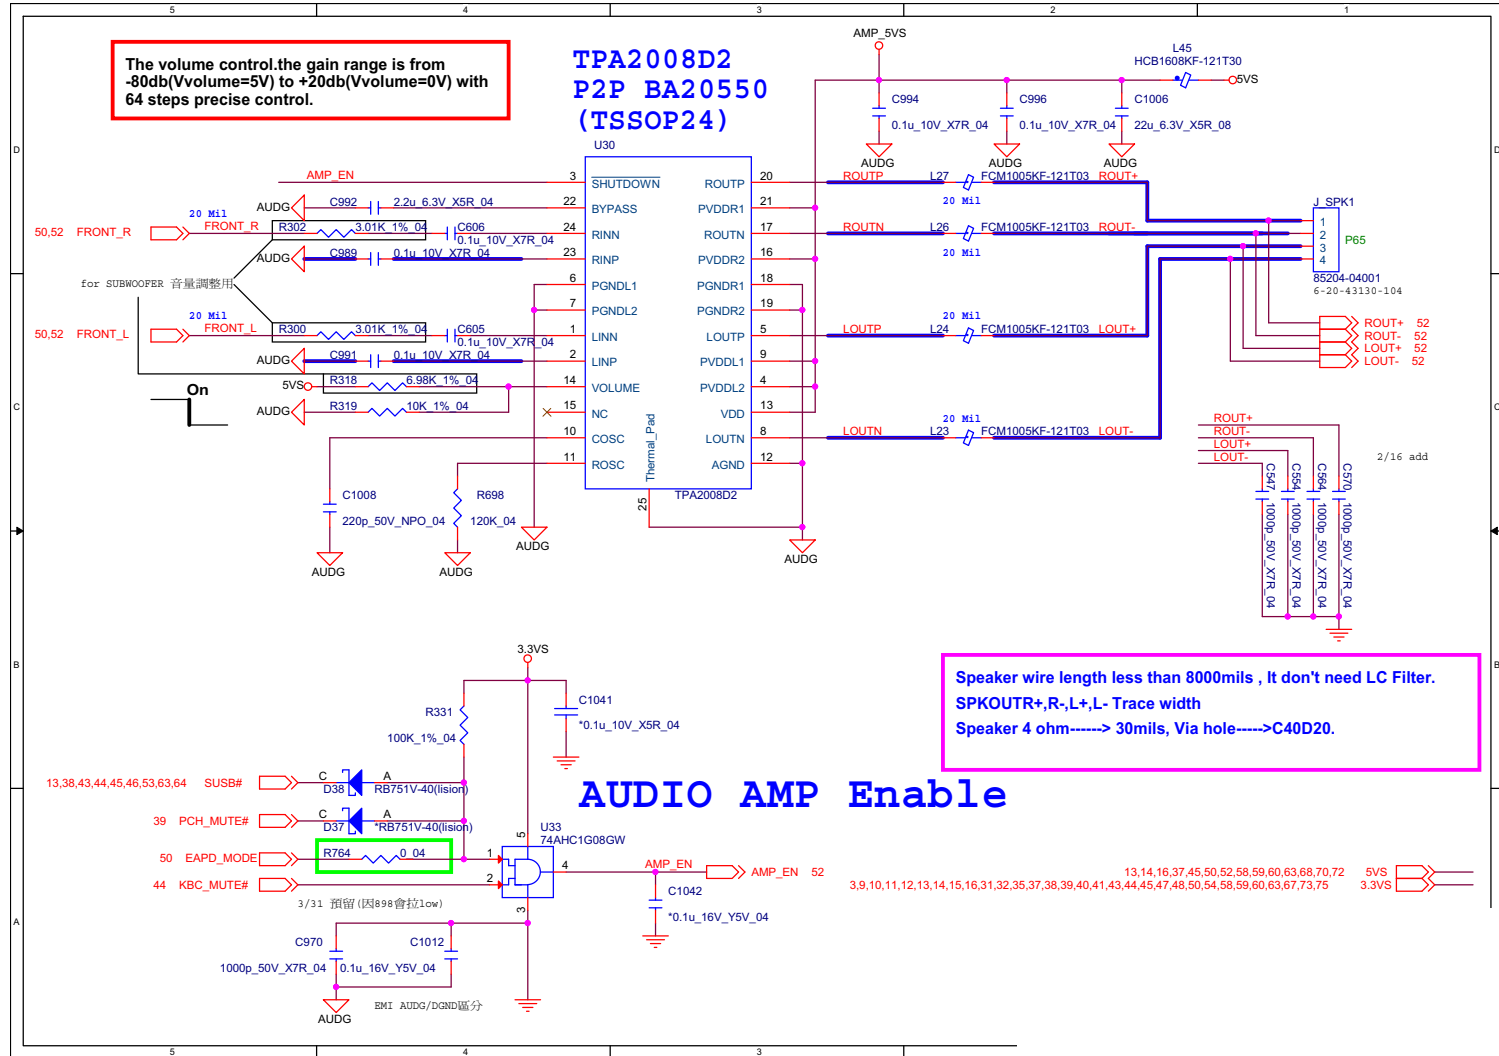


# Subwoofer

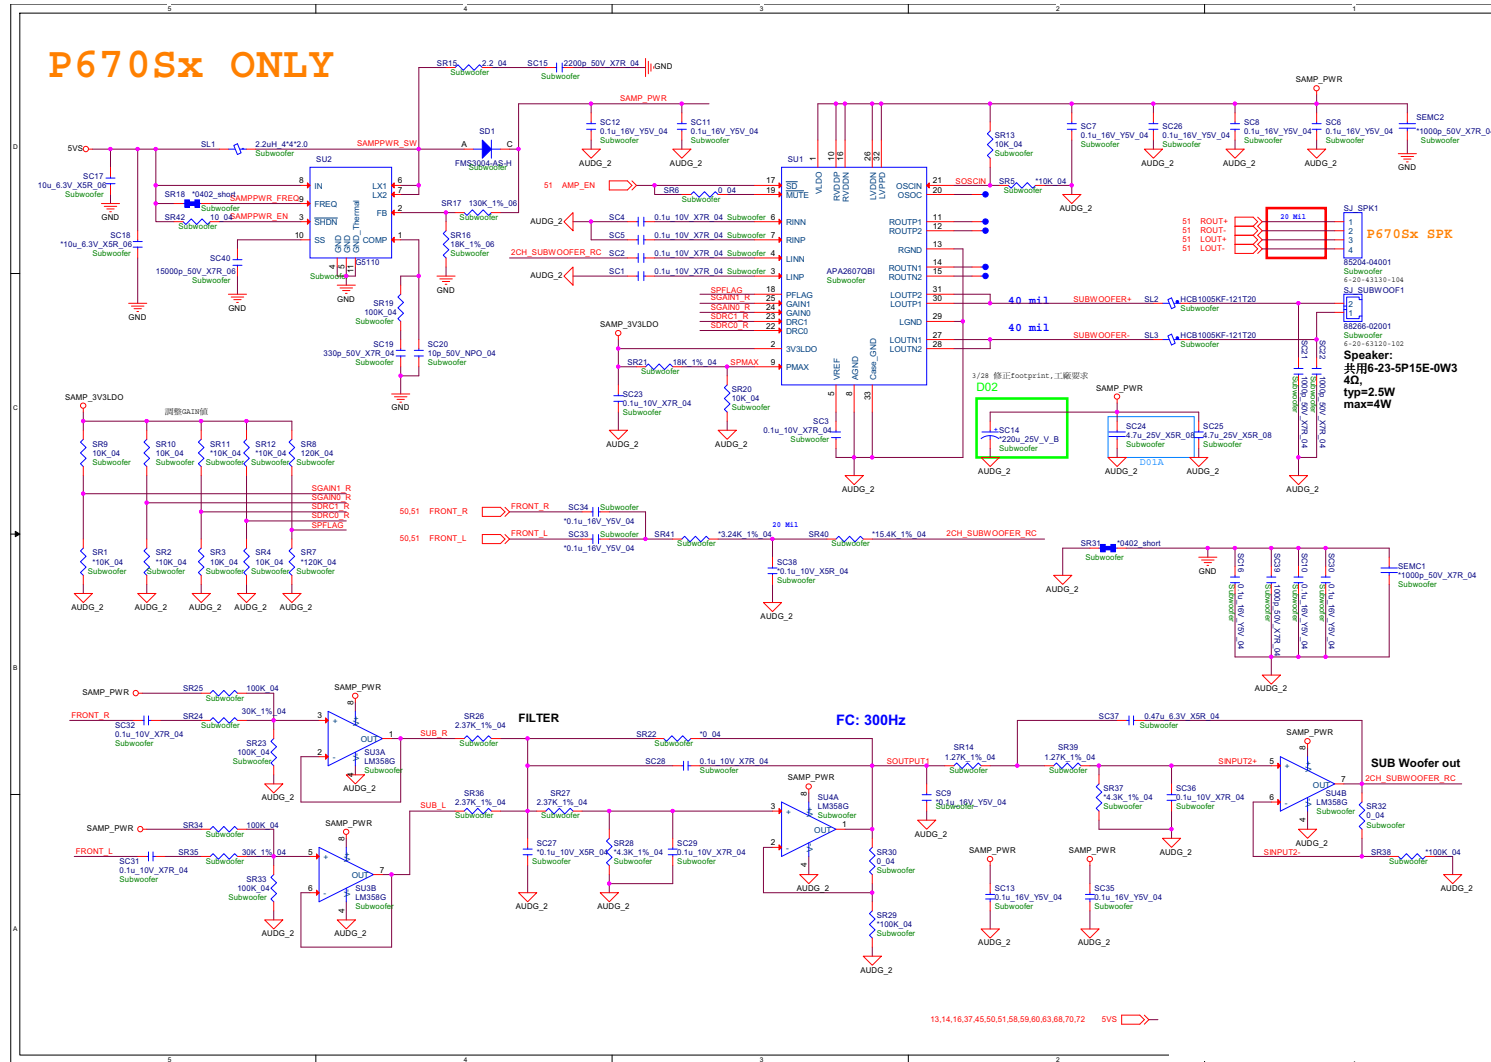

Sheet 52 of 91  
Subwoofer

B.Schematic Diagrams


# AR\_TBT

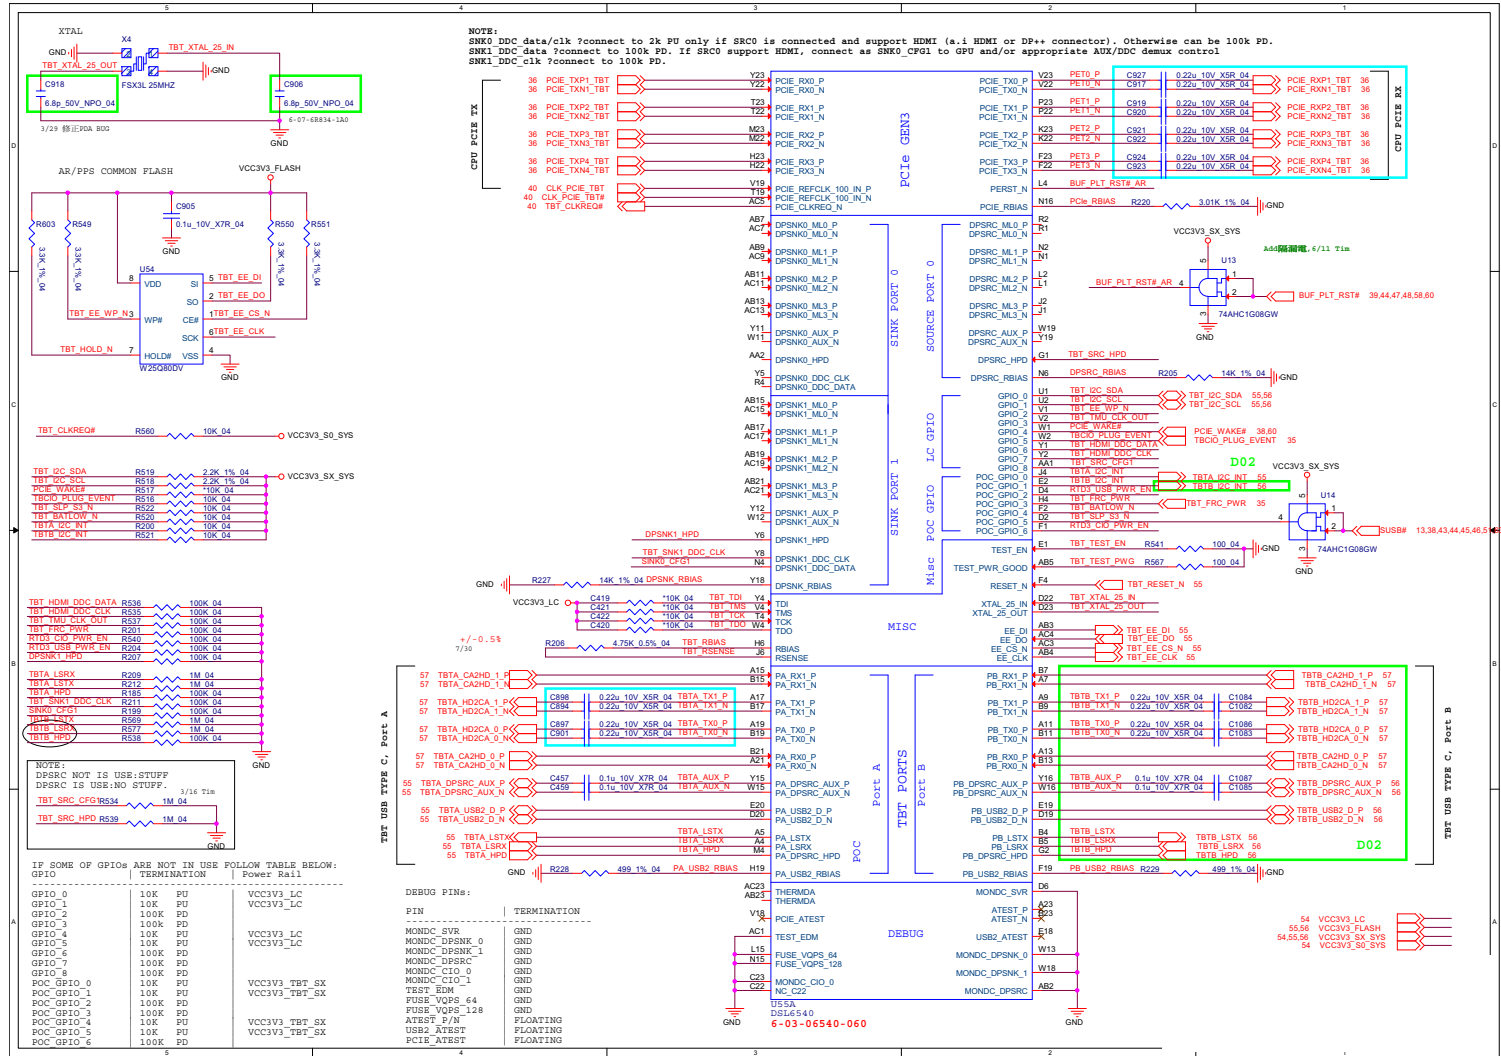

Sheet 53 of 91  
AR\_TBT

B.Schematic Diagrams

# AR\_Power

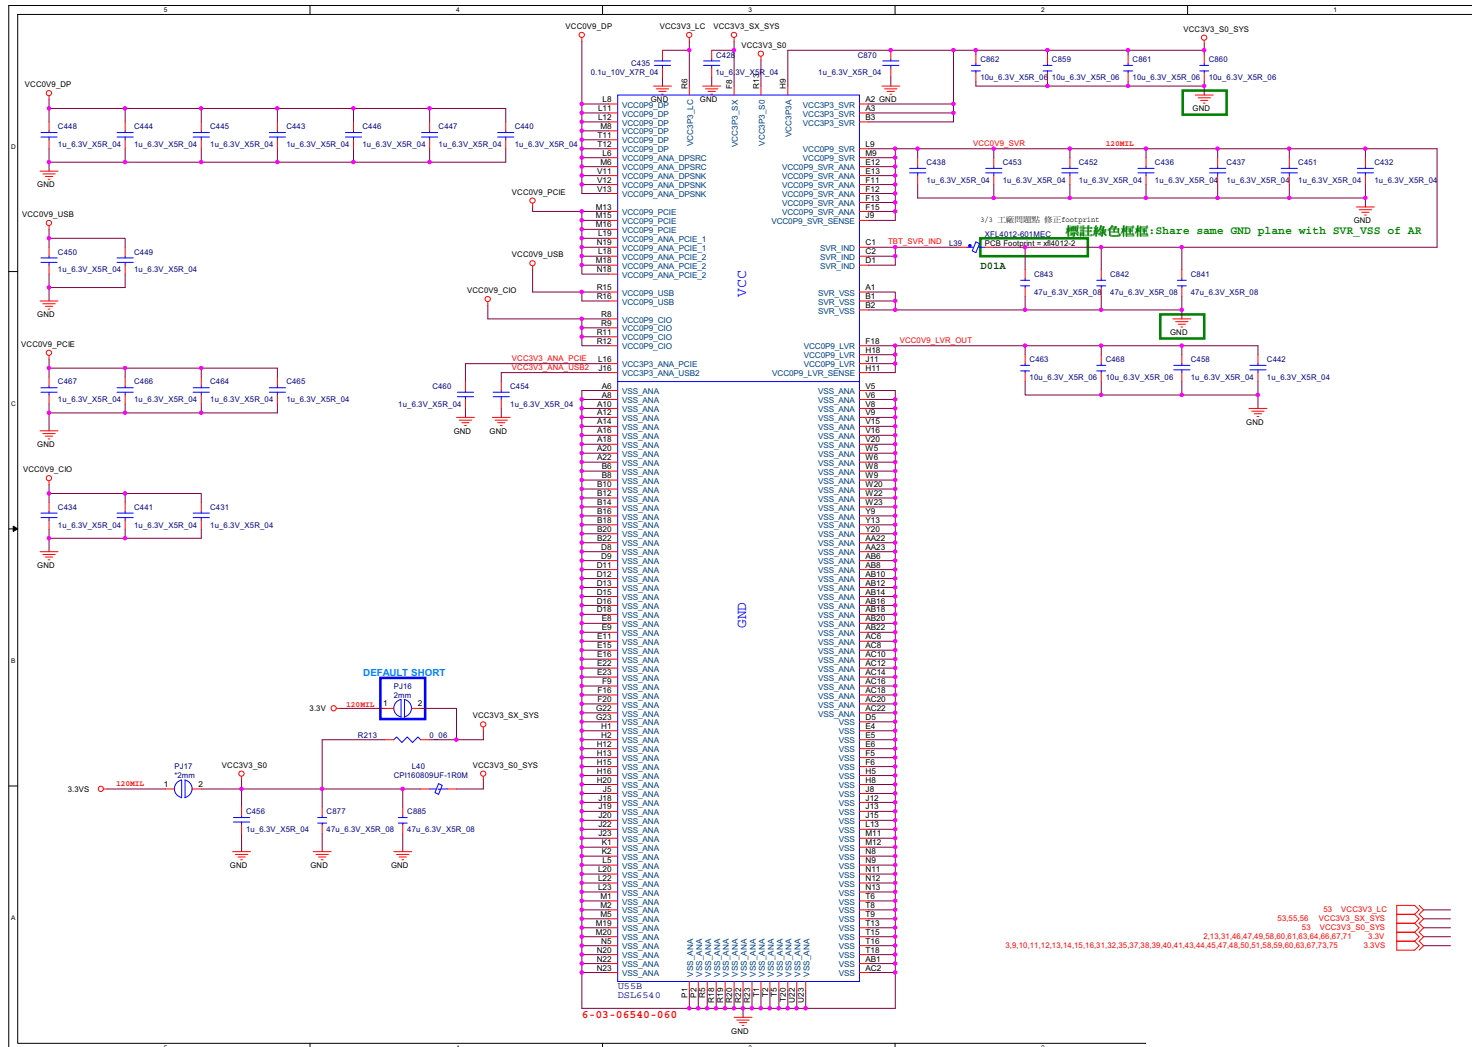


Sheet 54 of 91  
AR\_Power


B.Schematic Diagrams

# TPS65982

Sheet 55 of 91  
TPS65982

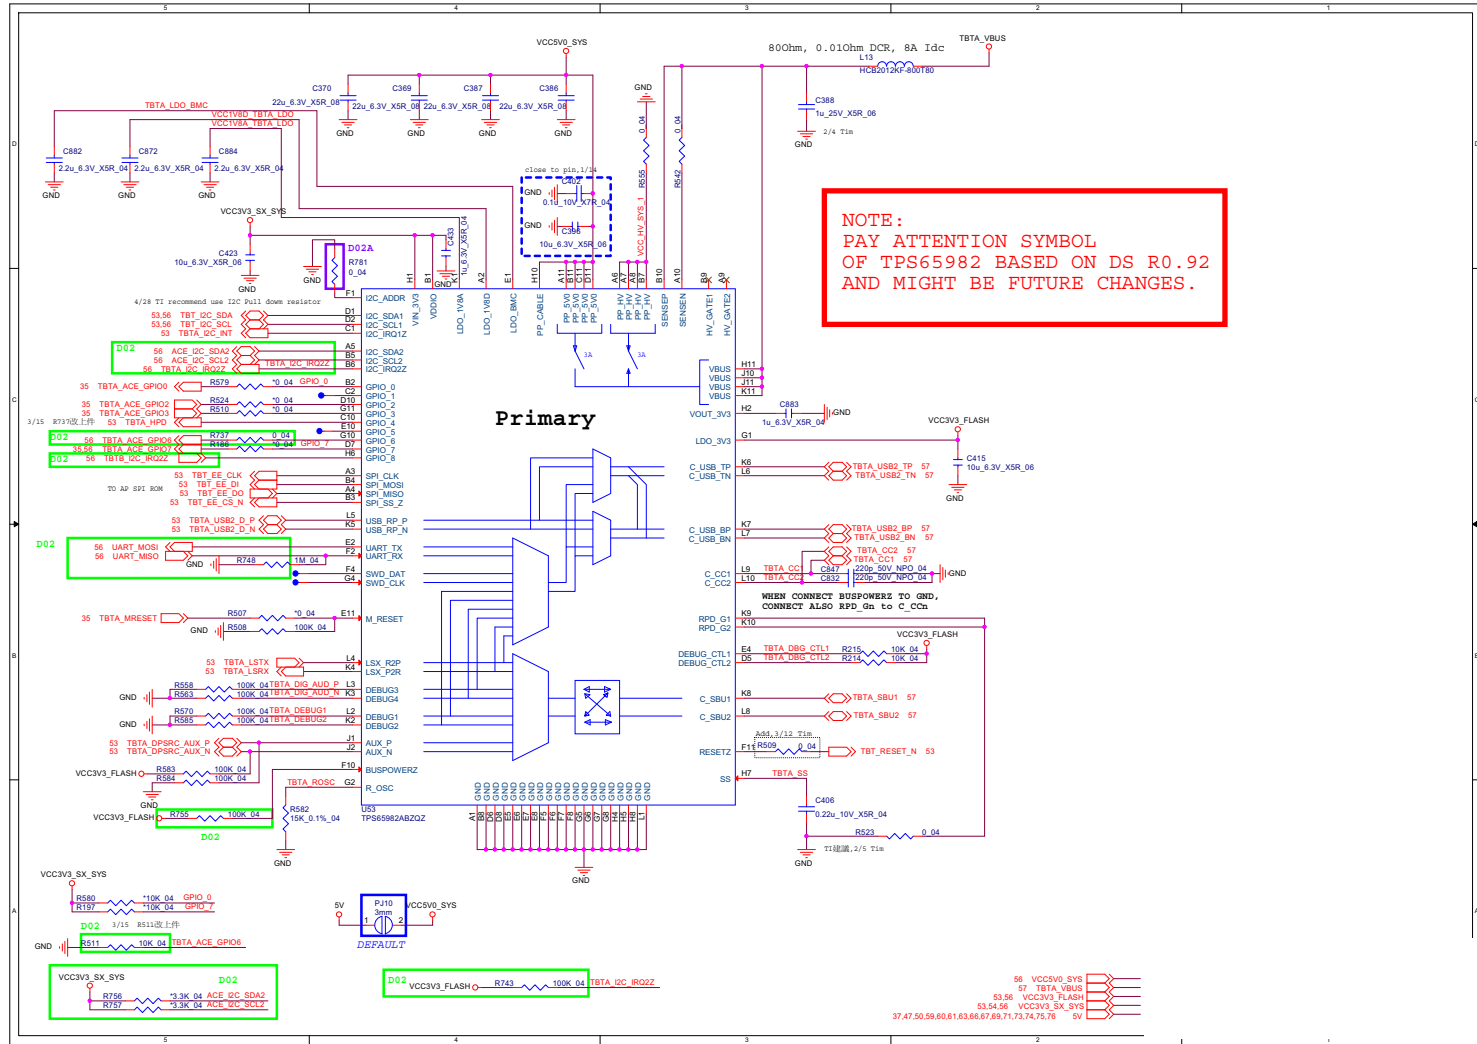

# TPS65982-1

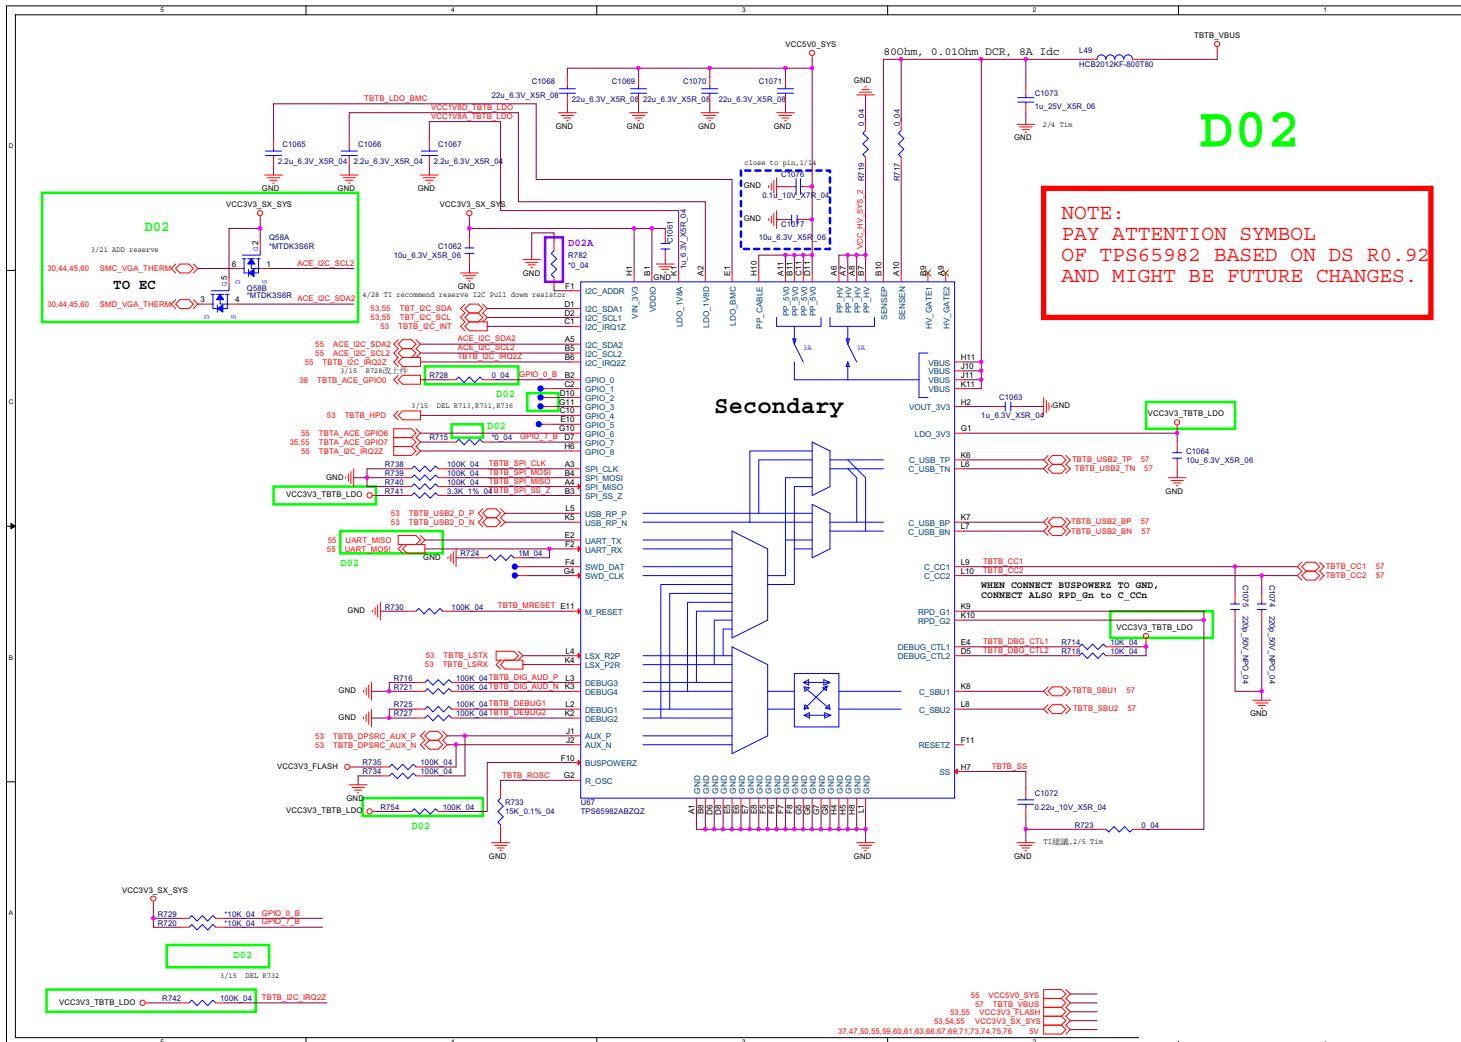


Sheet 56 of 91  
TPS65982-1

B.Schematic Diagrams

Schematic Diagrams


AR\_Conn Type A/C

Sheet 57 of 91  
AR\_Conn Type A/C

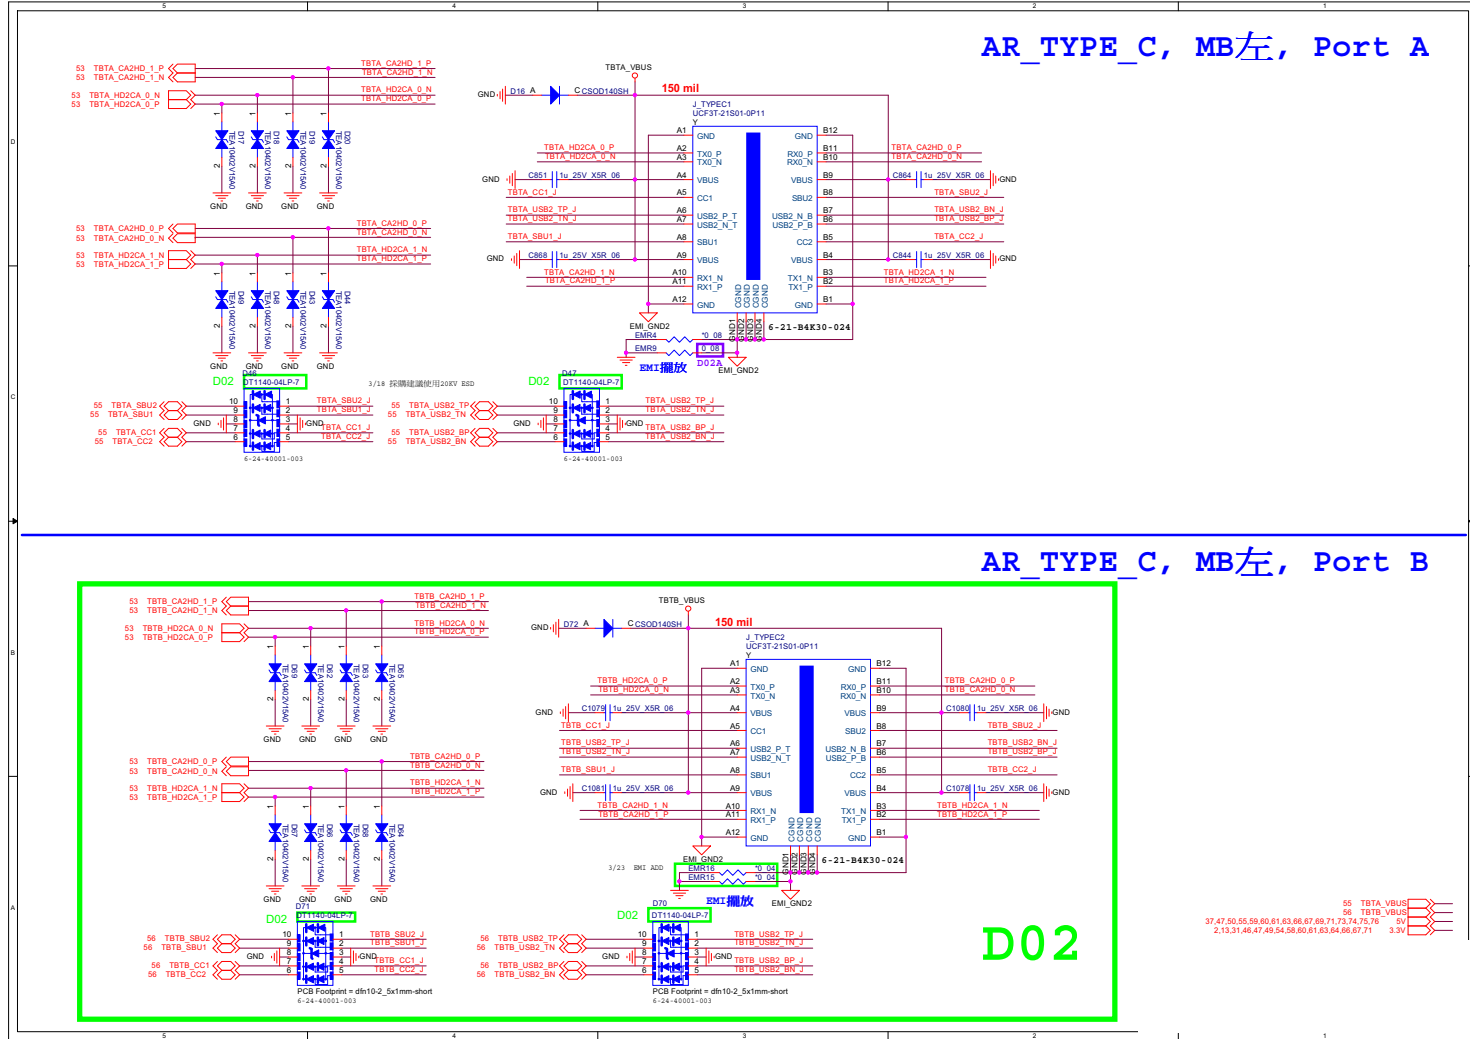



# TPM, CCD, TP

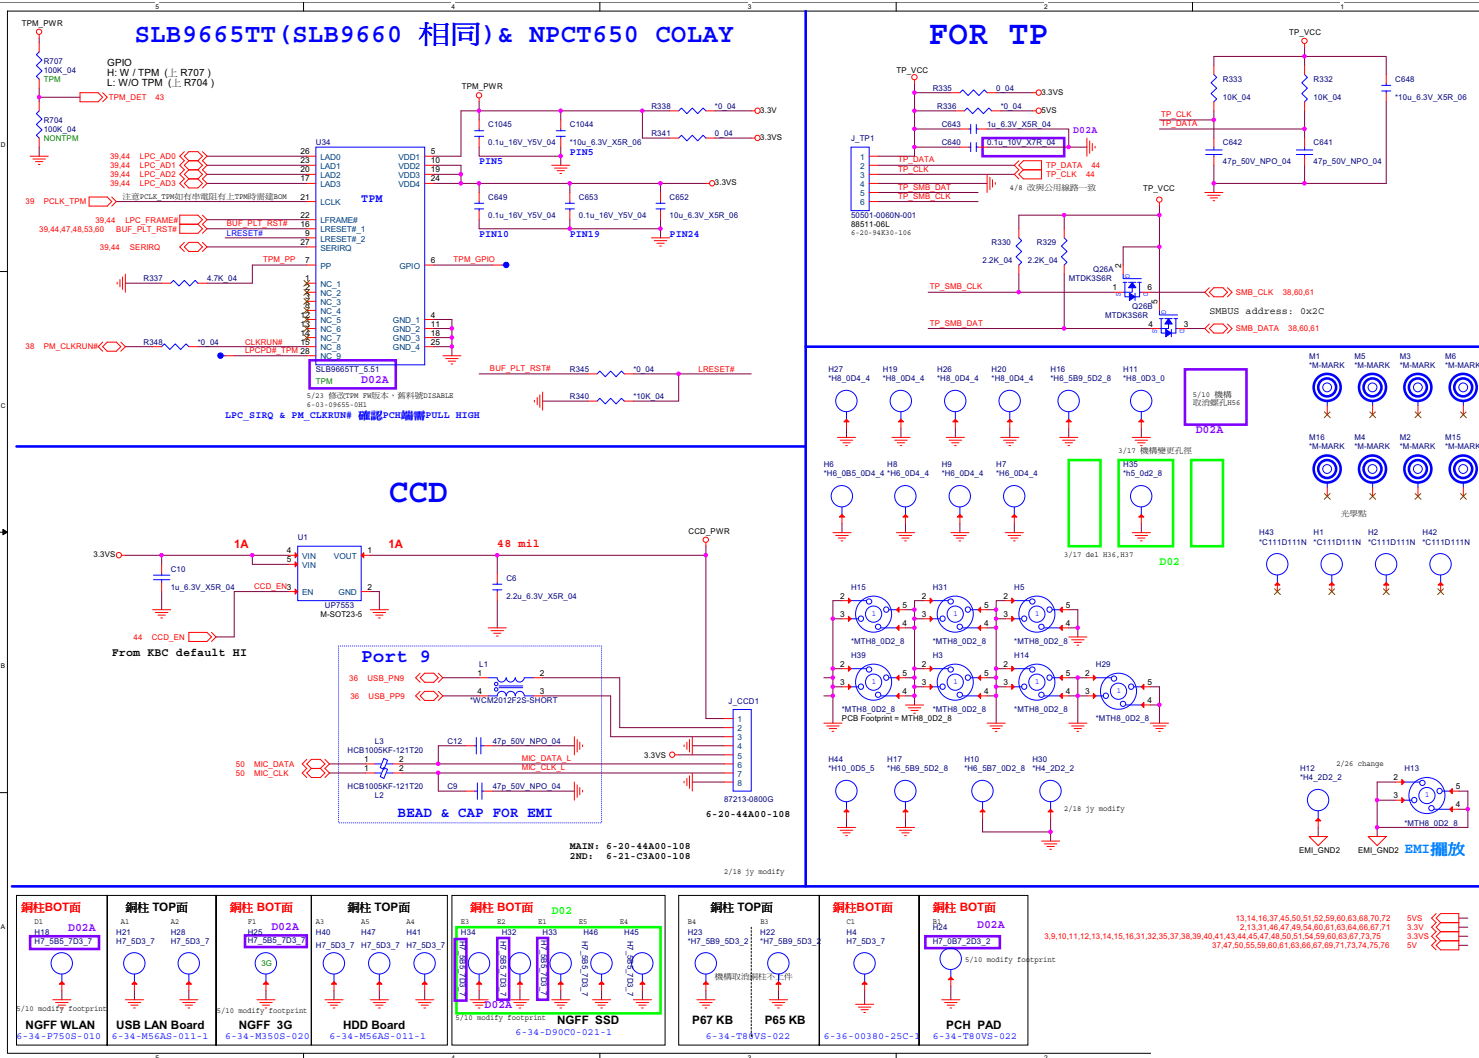


Sheet 58 of 91  
TPM, CCD, TP

B.Schematic Diagrams

# Fan, LID, KB LED


Sheet 59 of 91  
Fan, LID, KB LED

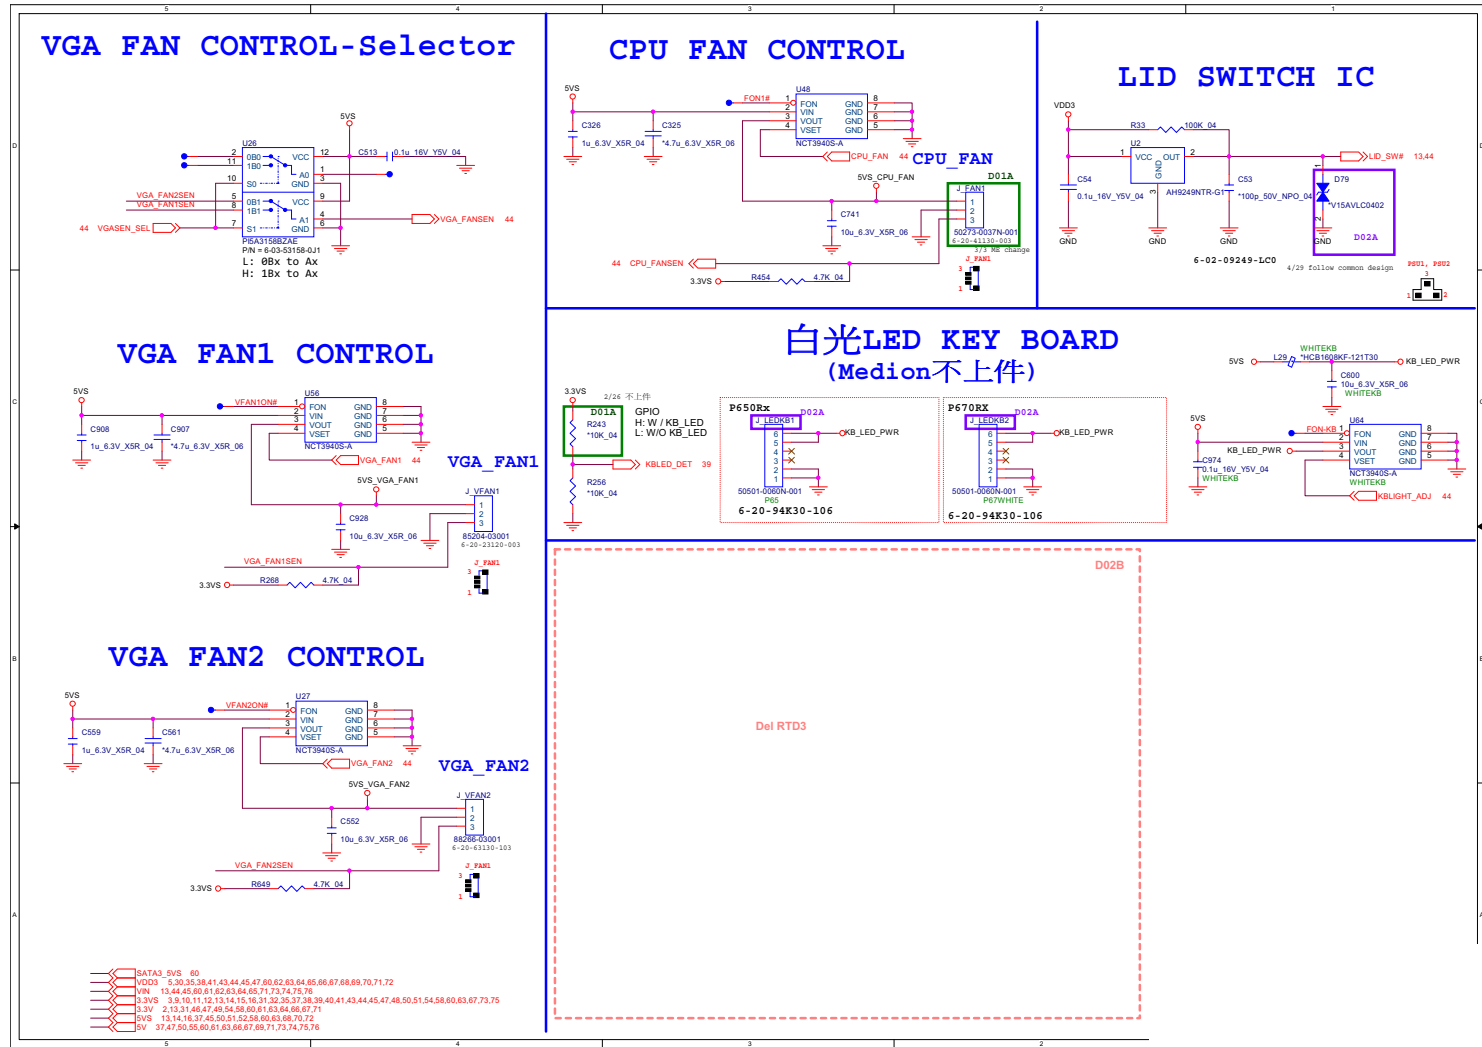


# Connector

B.Schematic Diagrams

Sheet 60 of 91  
Connector

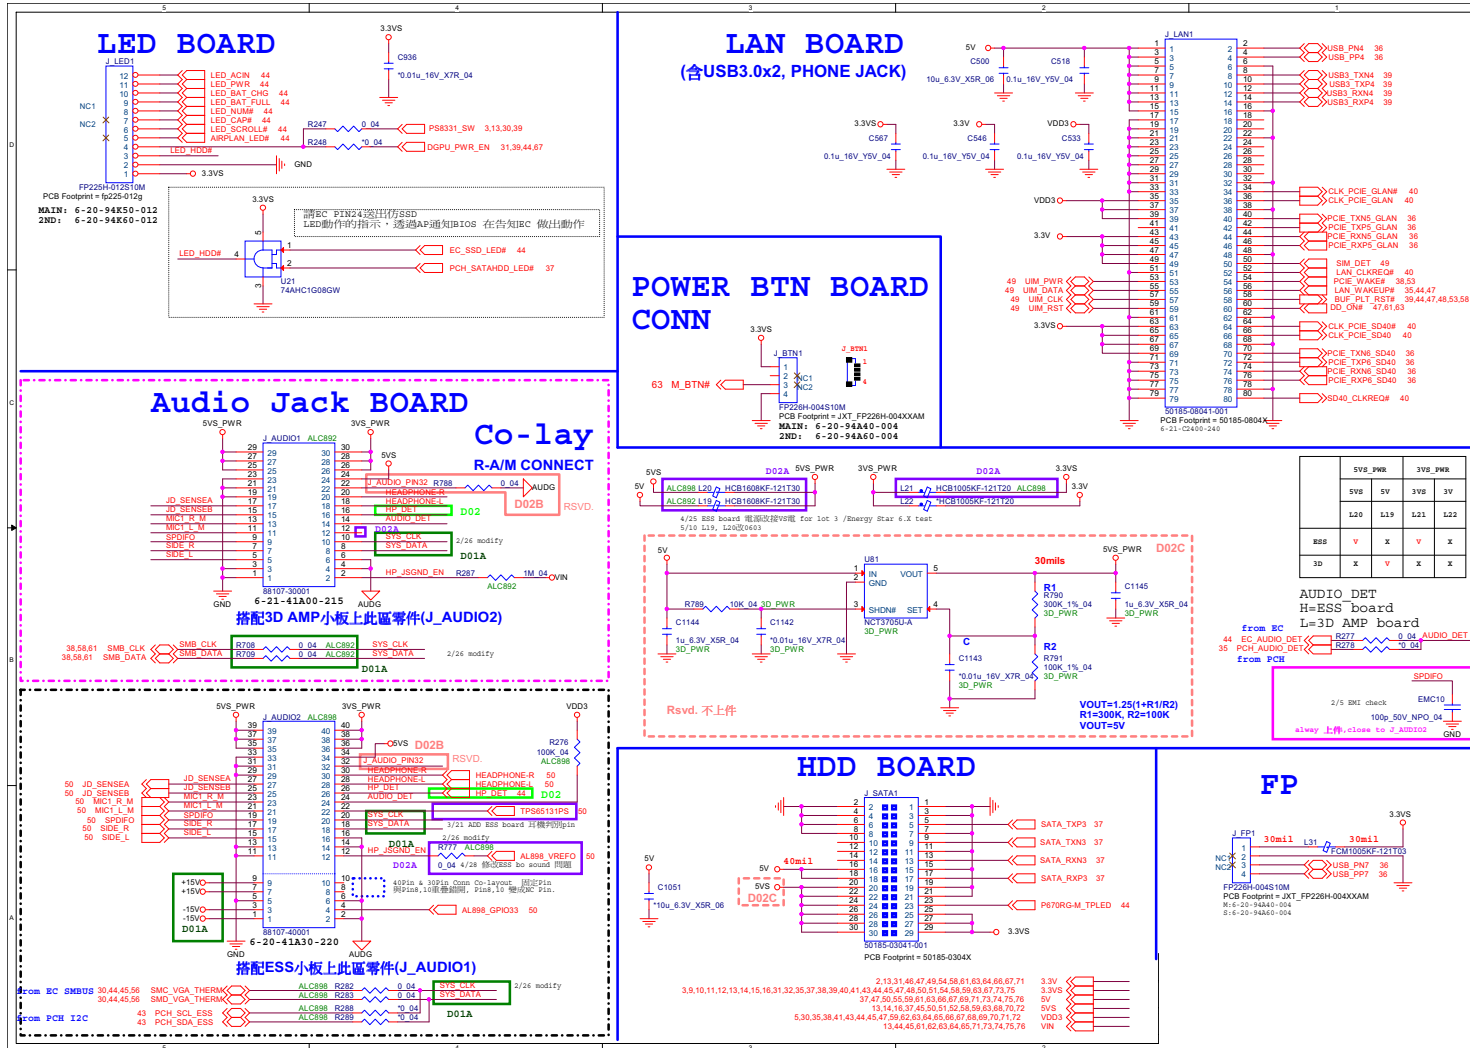


# DDR 1.2V / 0.6VS

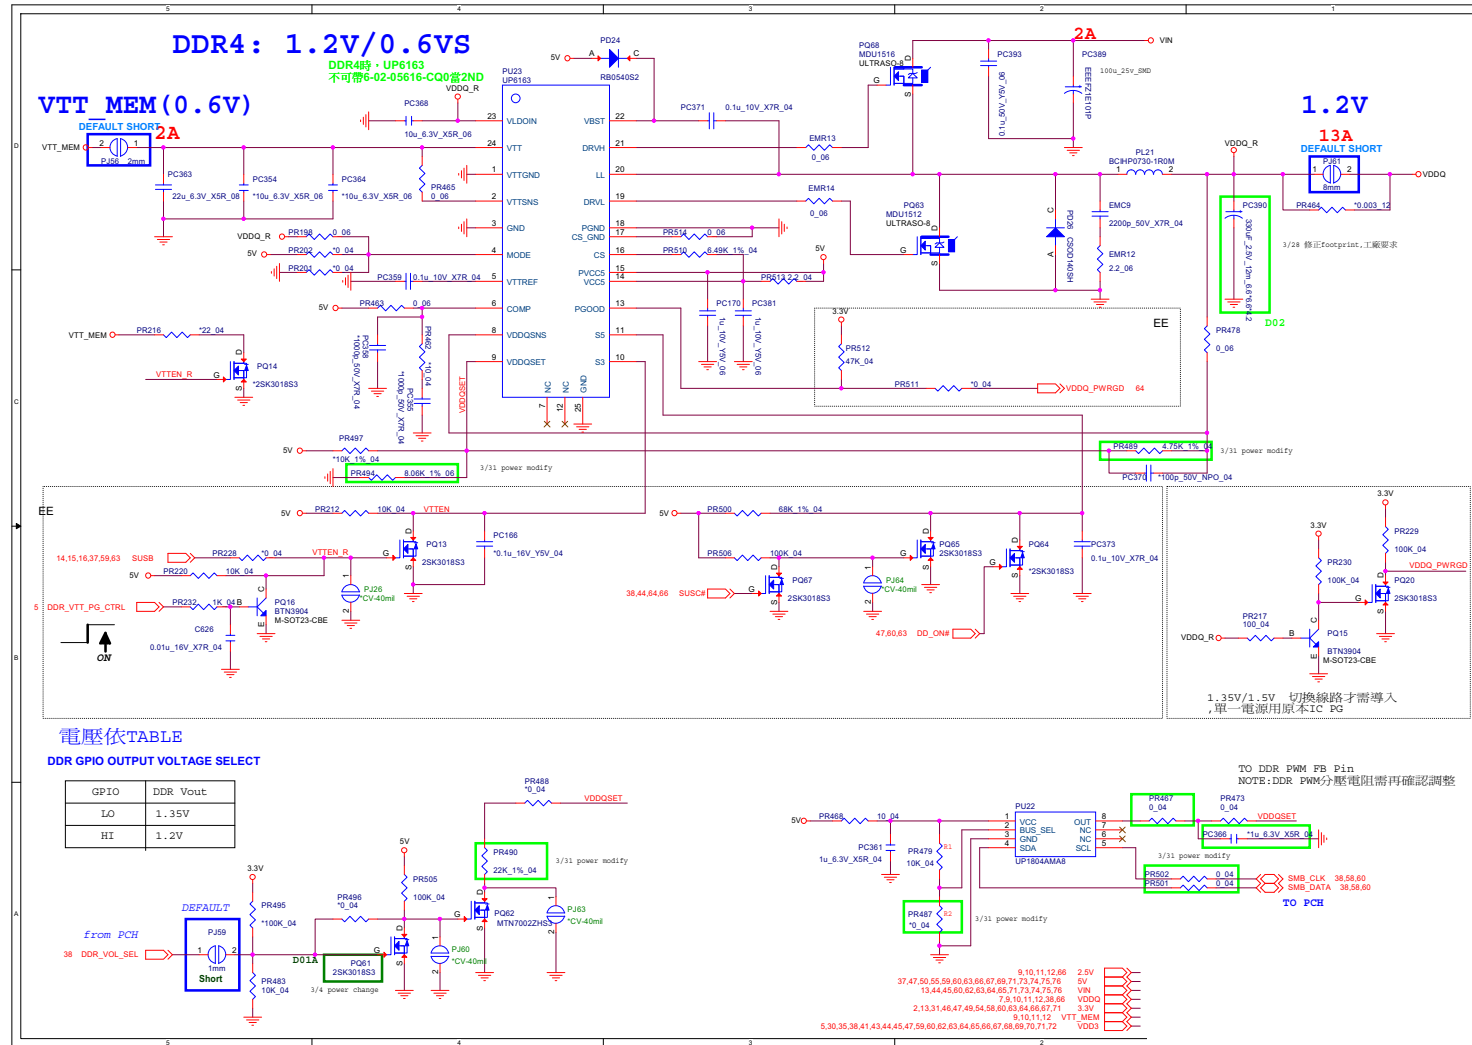

Sheet 61 of 91  
 DDR 1.2V / 0.6VS

B.Schematic Diagrams

# VDD3, VDD5

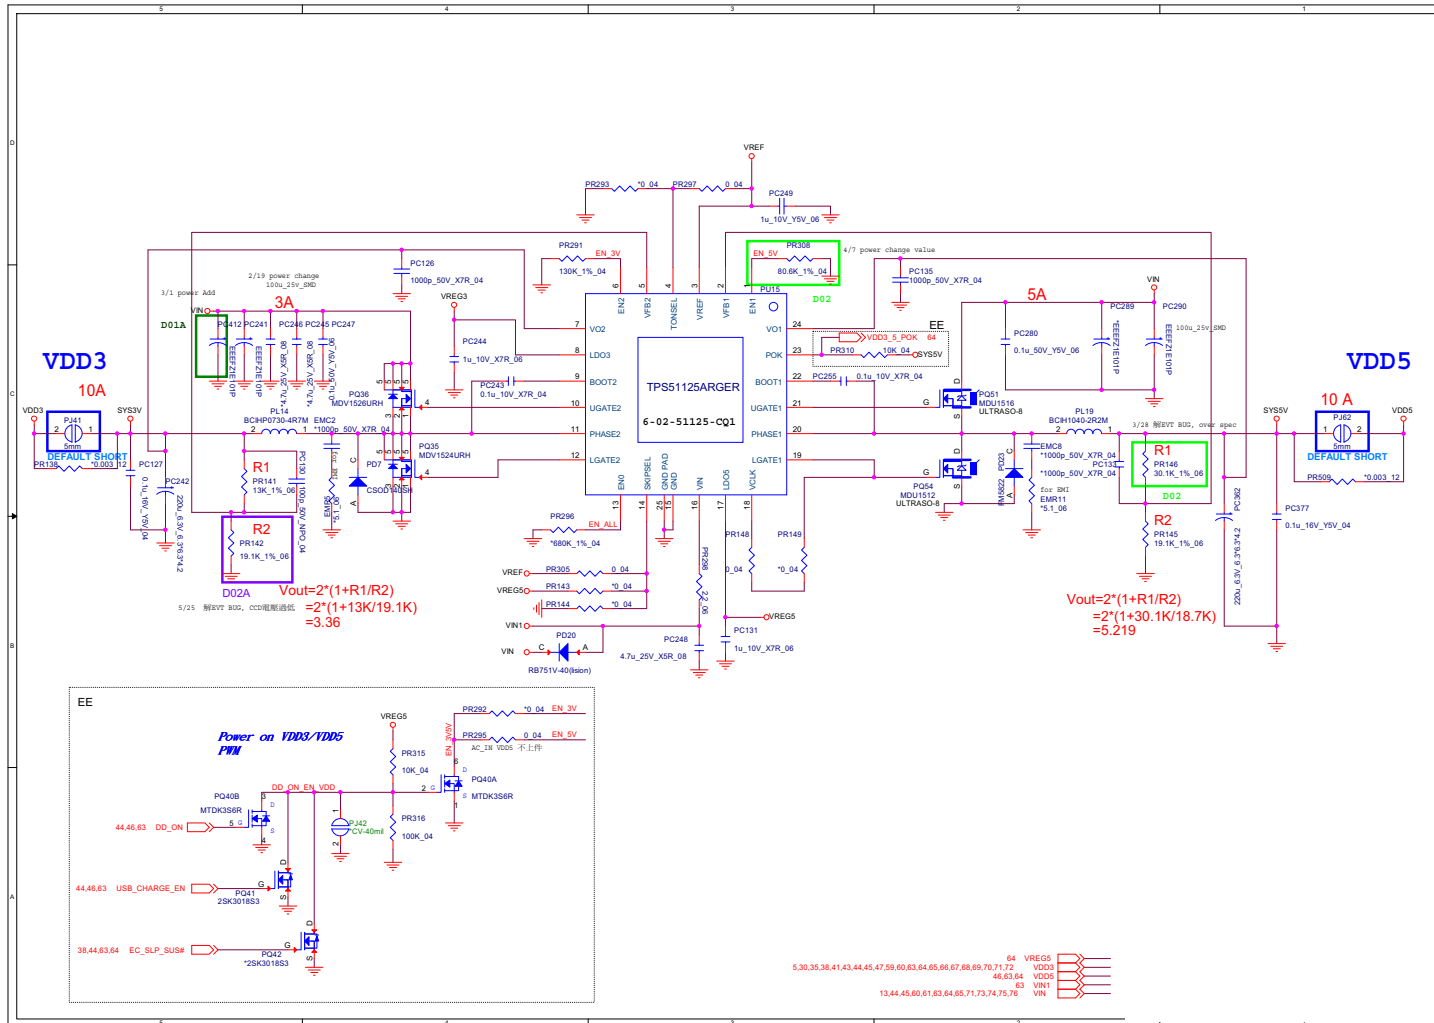


Sheet 62 of 91  
VDD3, VDD5

# Schematic Diagrams


## 5V, 5VS, 3.3V, 3.3VS, 3.3VA

B.Schematic Diagrams

Sheet 63 of 91  
5V, 5VS, 3.3V,  
3.3VS, 3.3VA

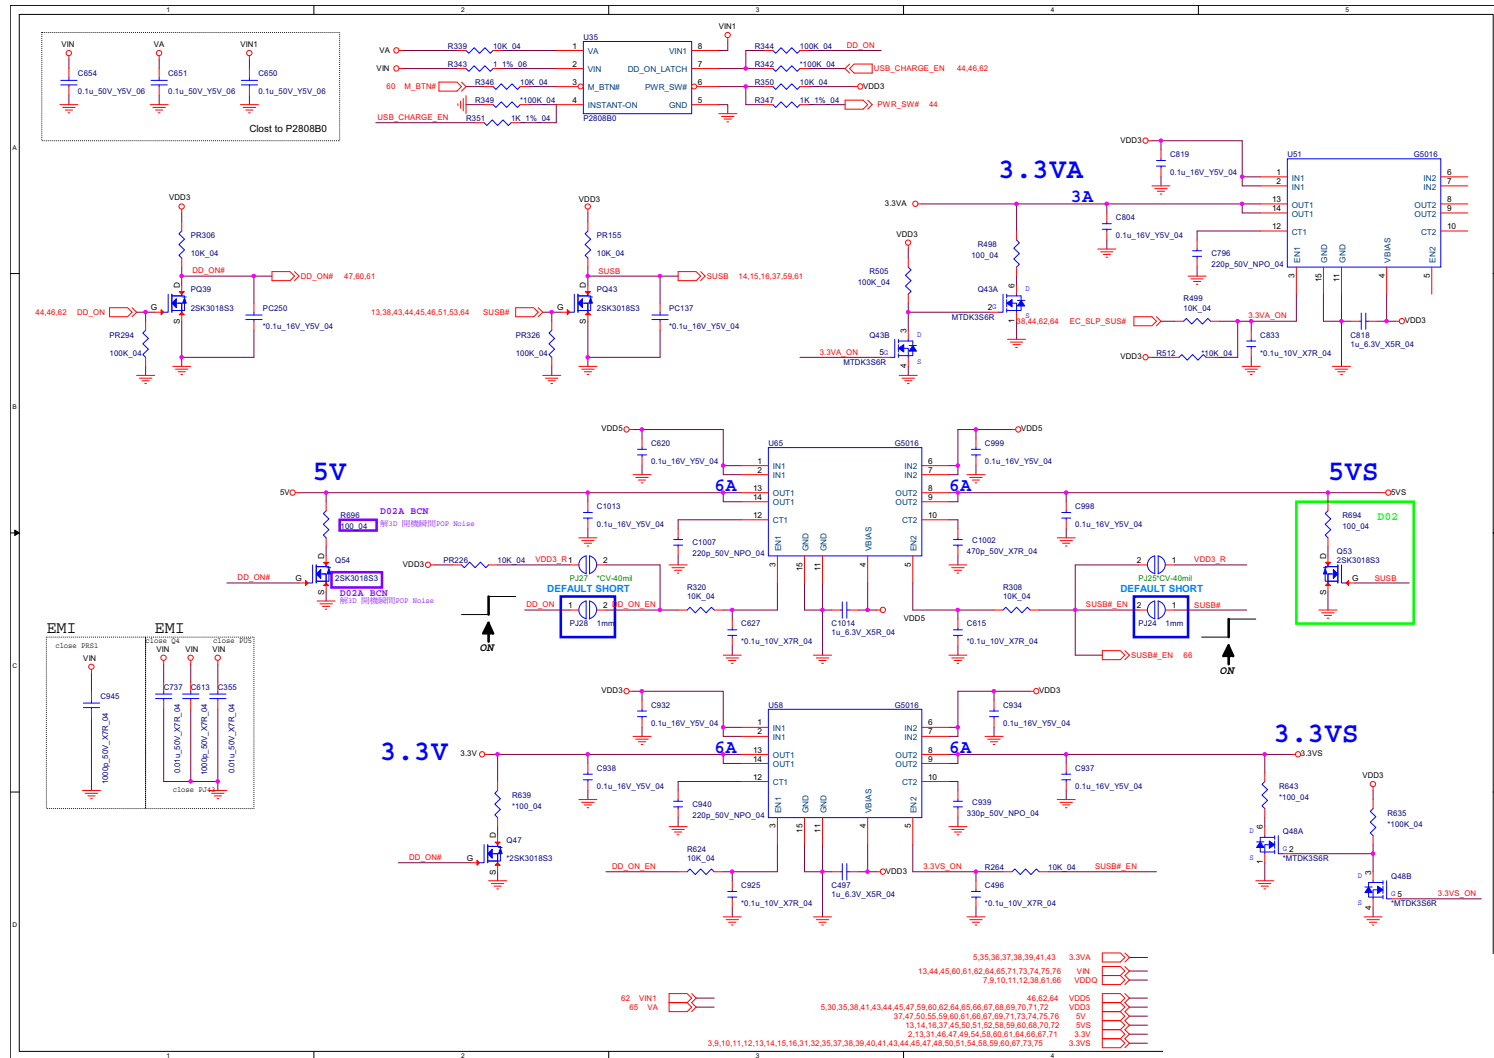


Power 1.0V, VCCIO

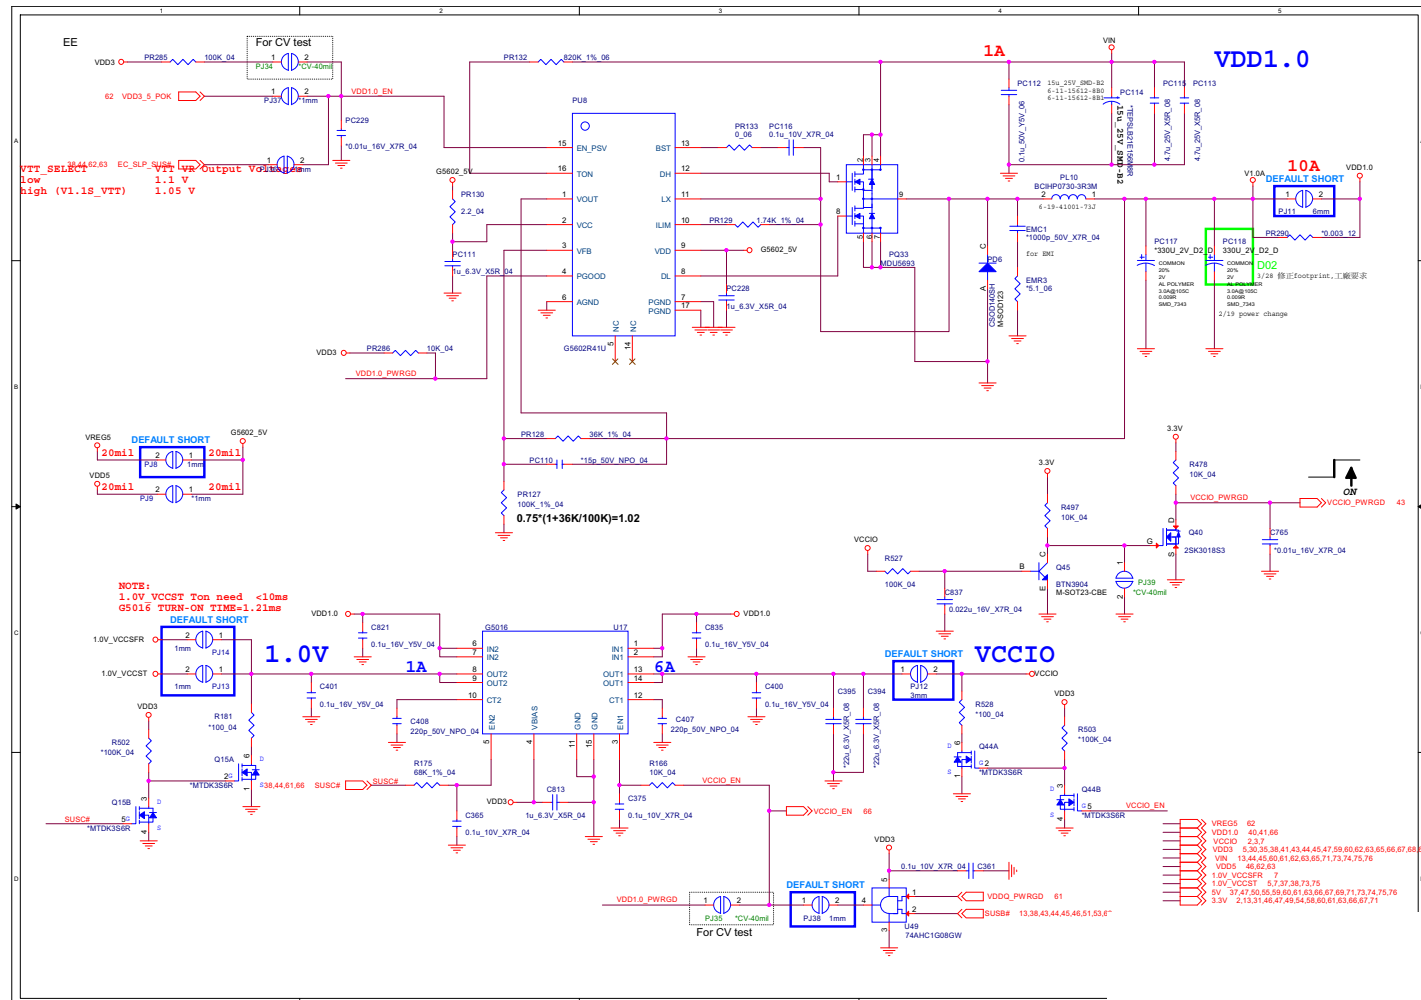

Sheet 64 of 91  
Power 1.0V, VCCIO



# AC\_In, Charger

Sheet 65 of 91  
AC\_In, Charger

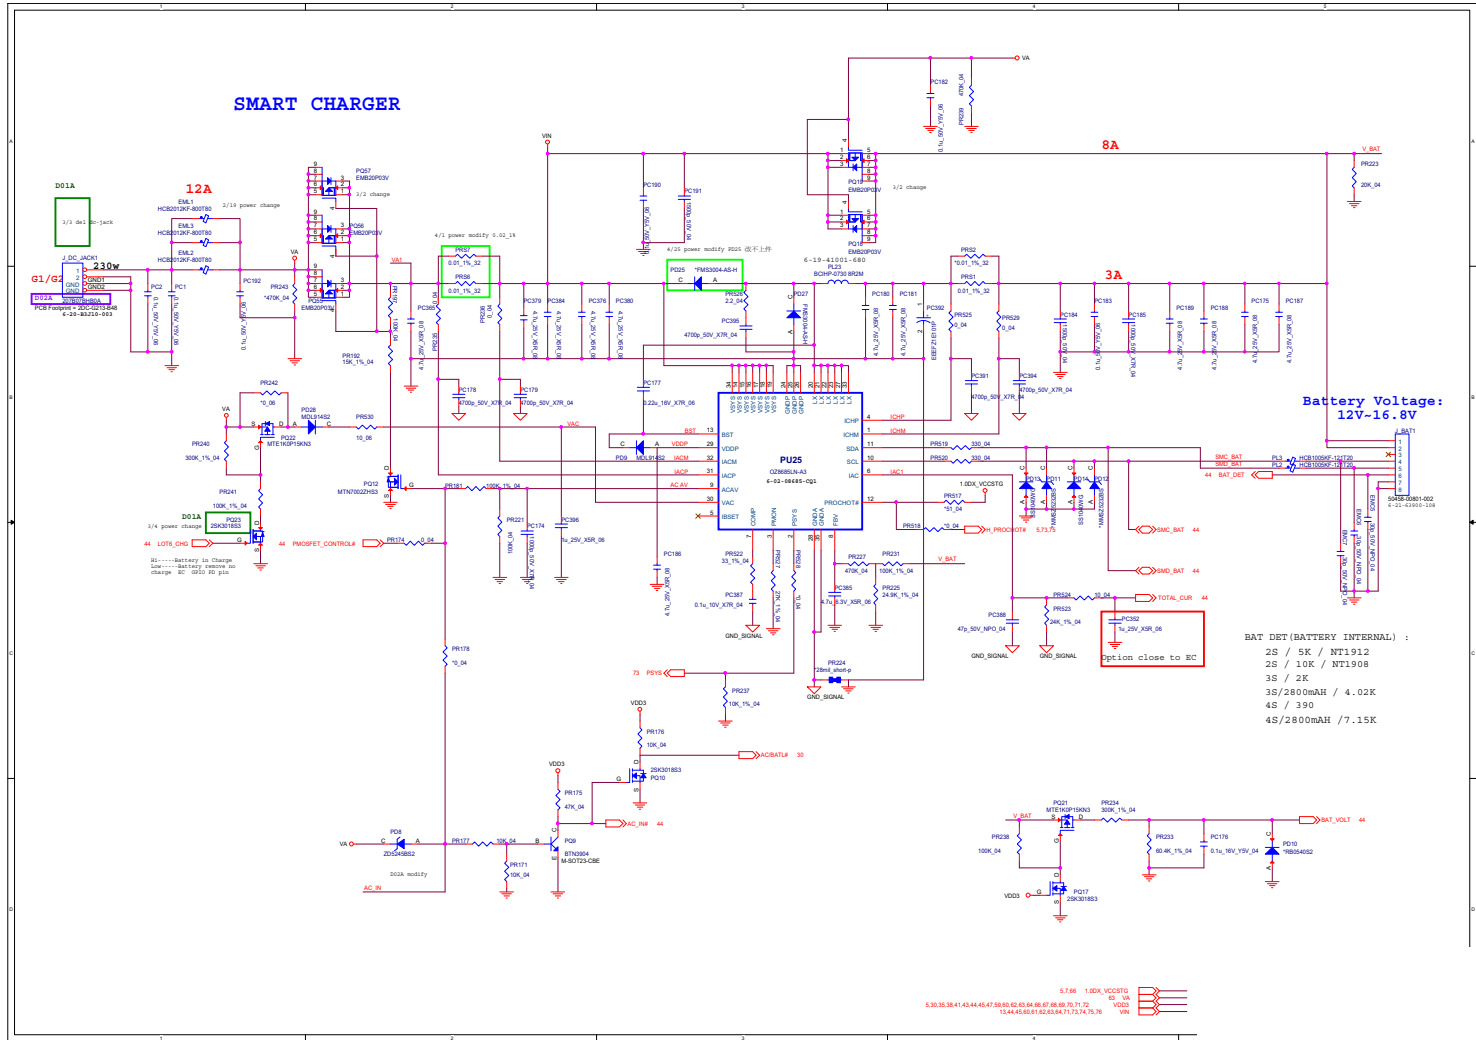



# 1.0DX\_VCCSTG/VCCSFR\_OC/2.5V

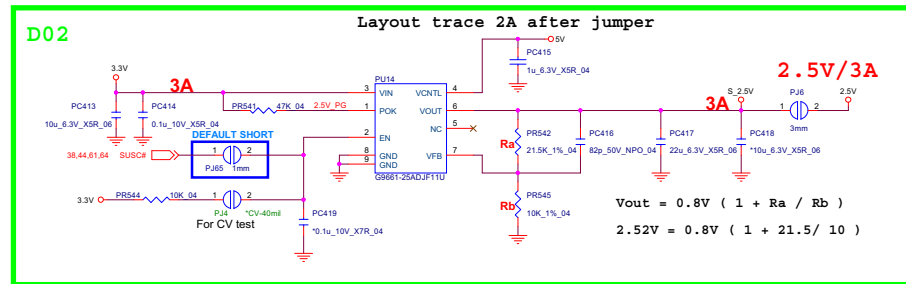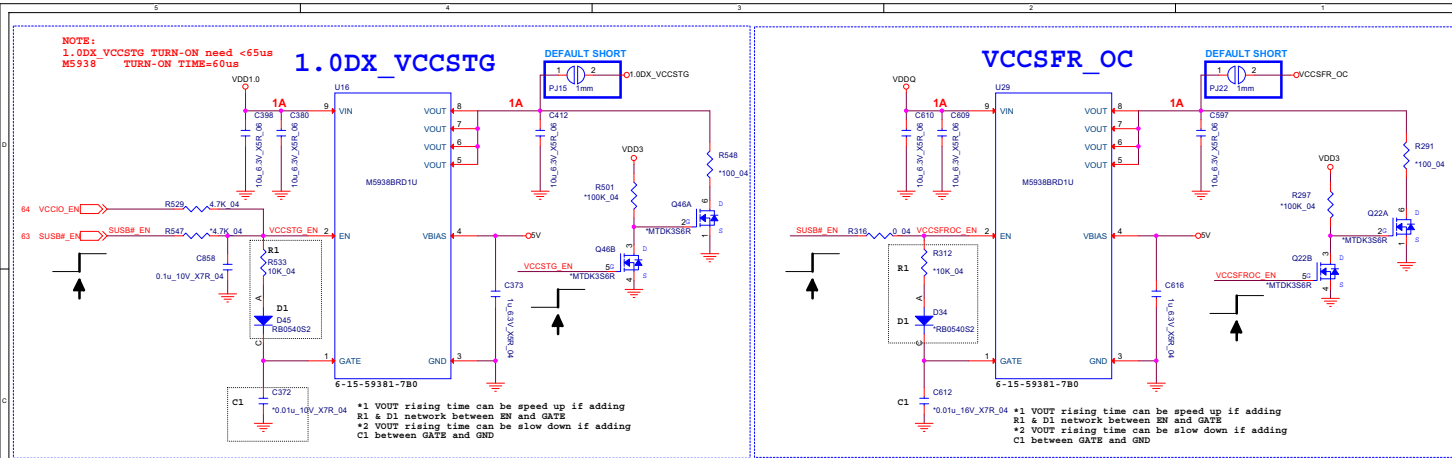

2,13,31,46,47,49,54,58,80,81,83,84,87,71	3.3V
13,44,45,80,81,82,83,84,85,71,73,74,75,78	VIN
9,10,11,12	2.5V
7,9,10,11,12,38,61	VDD0
7	VCCSFR_OC
37,47,50,55,59,80,81,83,87,89,71,73,74,75,76	5V
5,7,65	1.0DX_VCCSTG
40,41,64	VDD1A
5,30,35,38,41,43,44,45,47,59,80,82,83,84,85,67,68,69,70,71,72	VDD1

B.Schematic Diagrams


Sheet 66 of 91  
1.0DX\_VCCSTG/  
VCCSFR\_OC/2.5V

# Schematic Diagrams


## 1V8\_RUN/AON, NV3V3

B.Schematic Diagrams

Sheet 67 of 91\_Run  
1V8\_RUN/AON,  
NV3V3

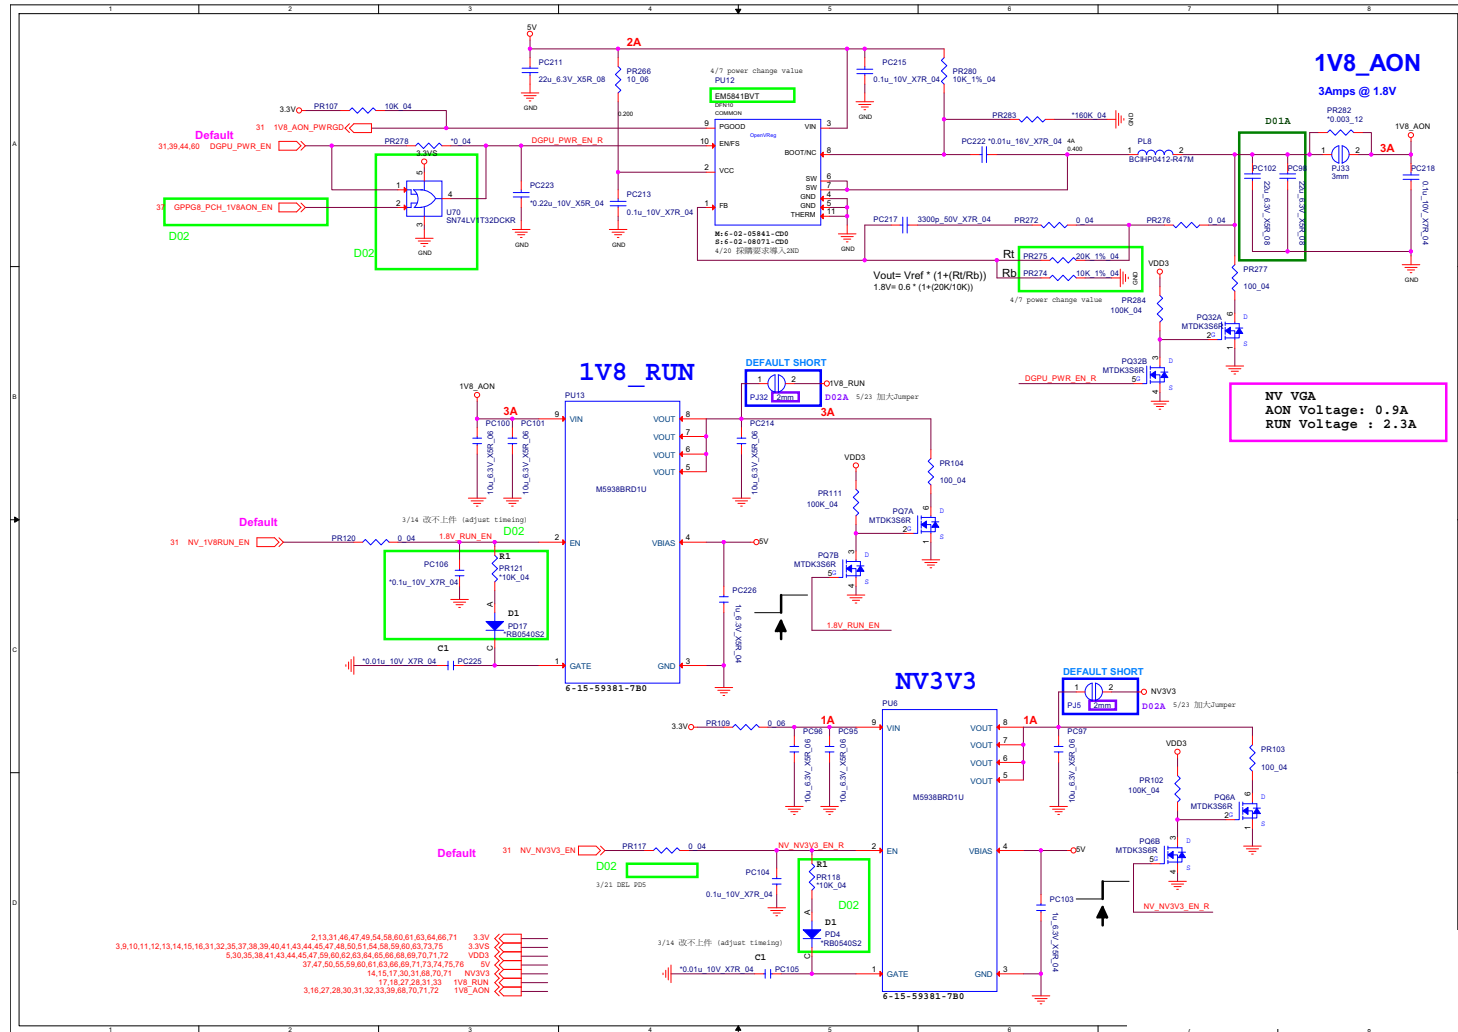

# NVVDD Phase 1 & 2

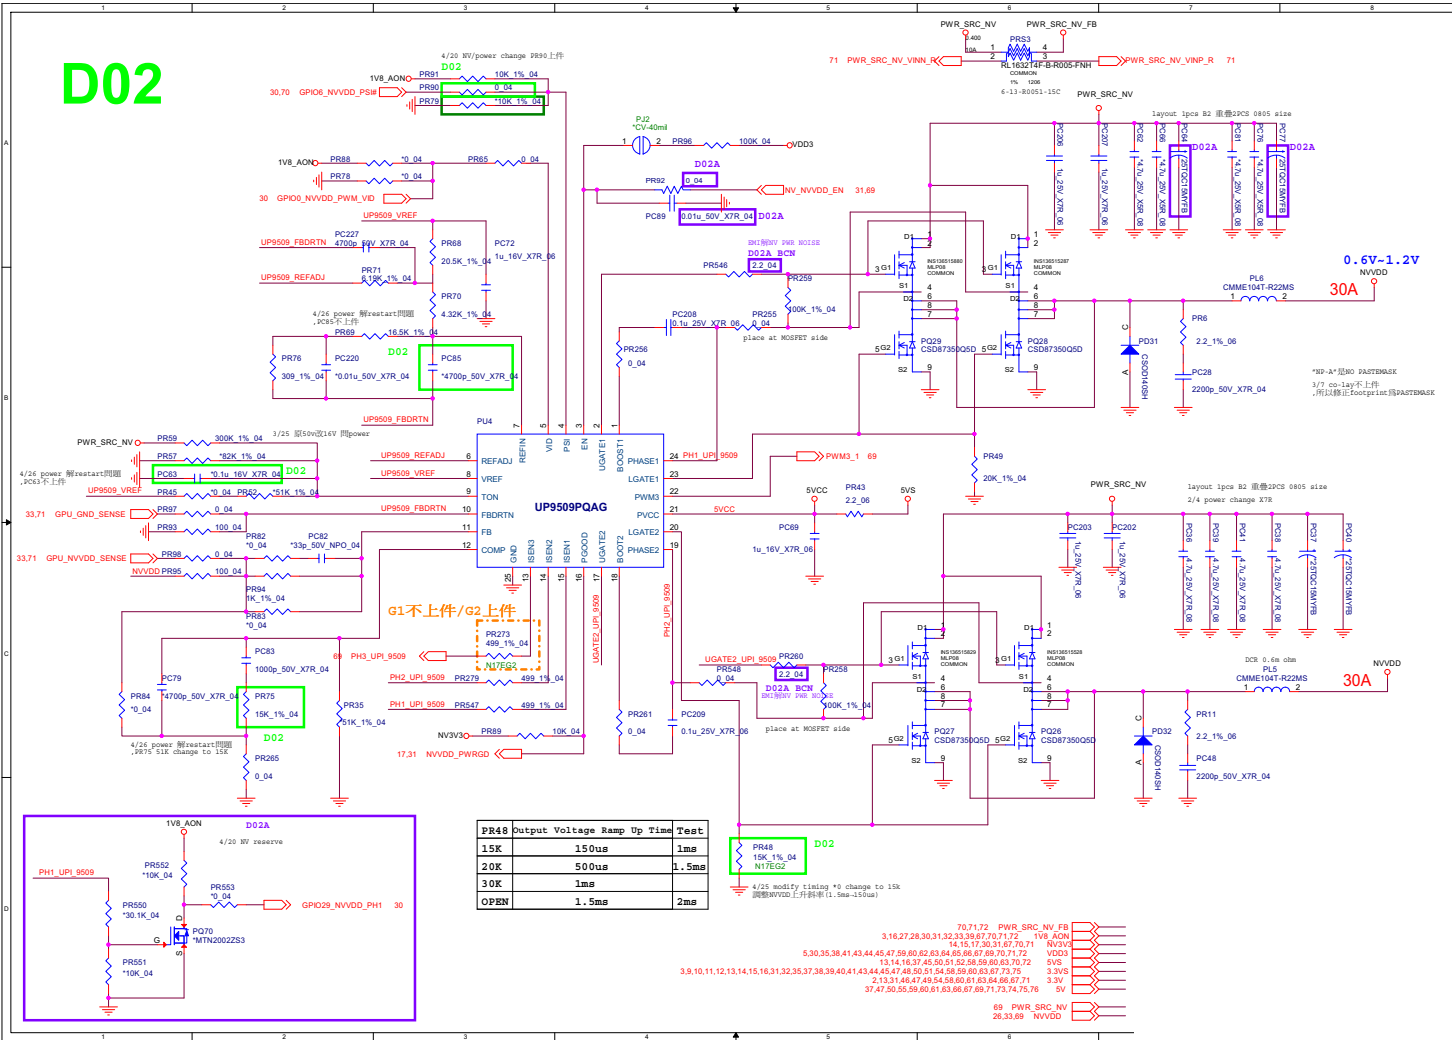


Sheet 68 of 91  
NVVDD Phase 1 & 2


# Schematic Diagrams

## NVDD Phase 3~4

Sheet 69 of 91  
NVDD Phase 3~4

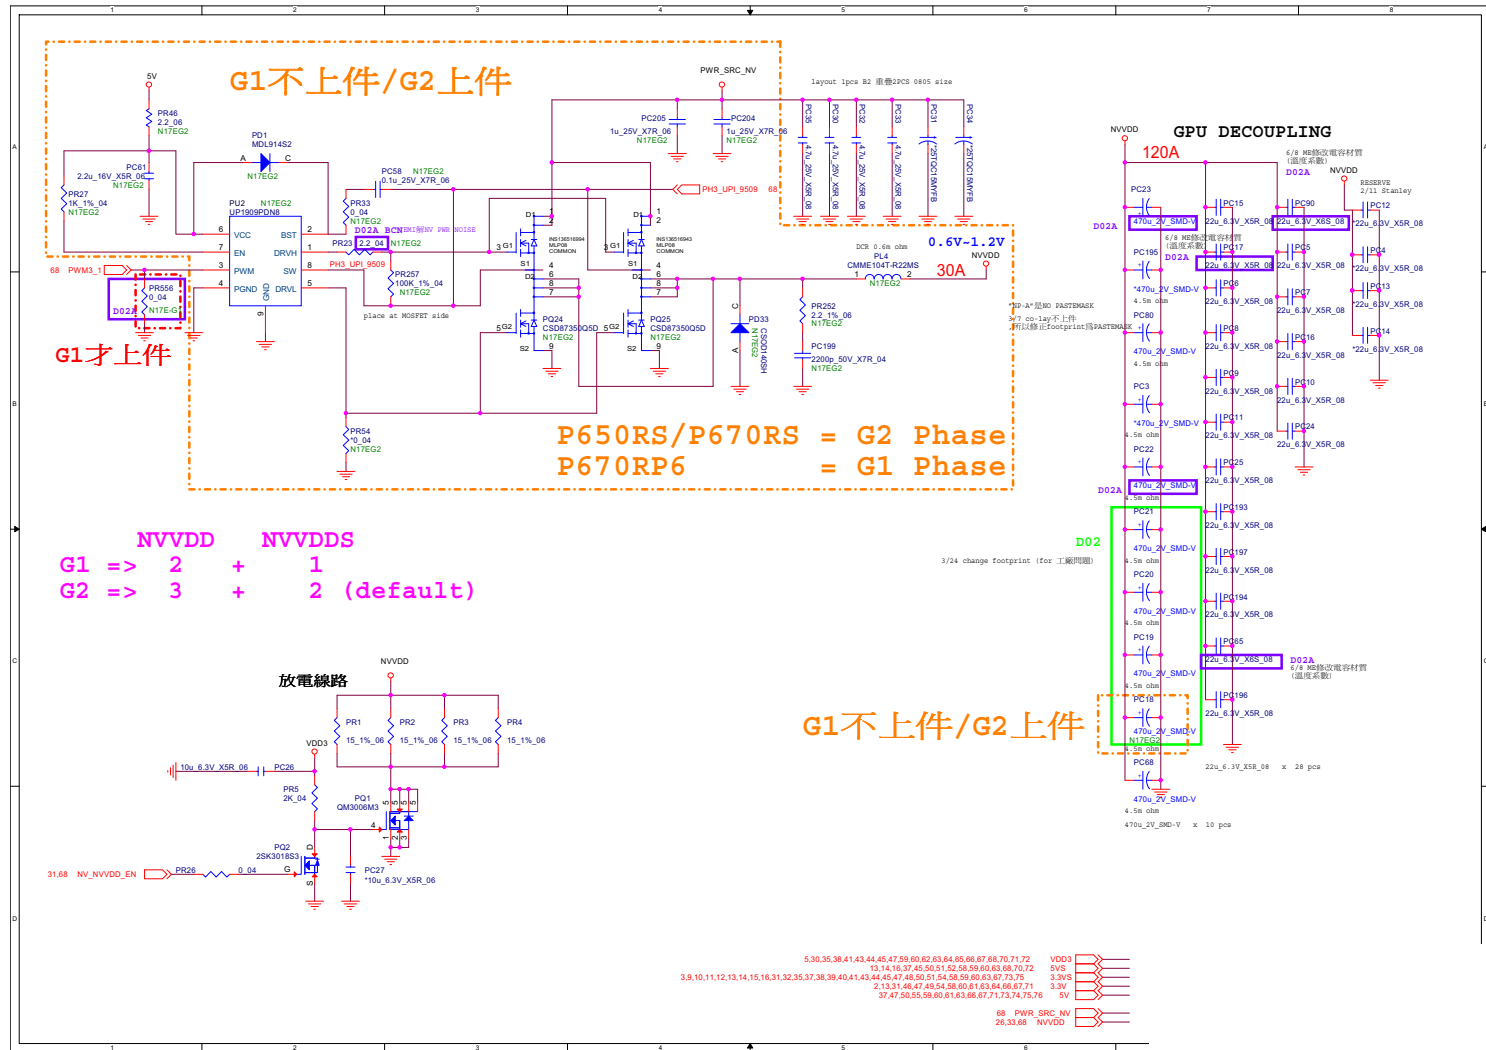


# NVVDSS

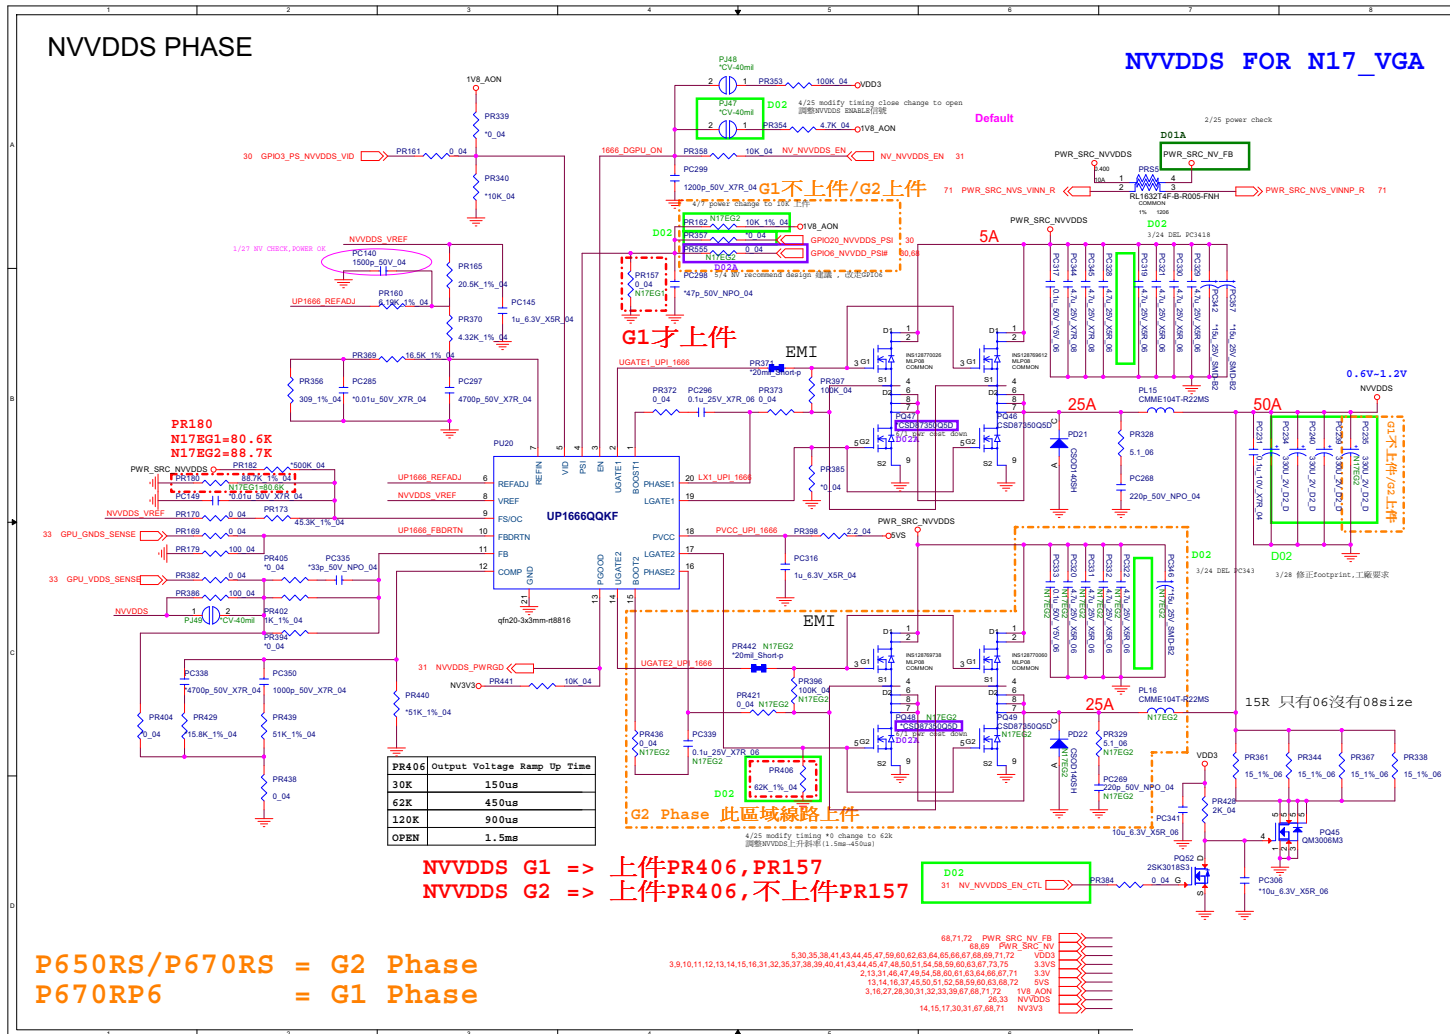

Sheet 70 of 91  
NVVDSS


B.Schematic Diagrams

## PEX\_VDD

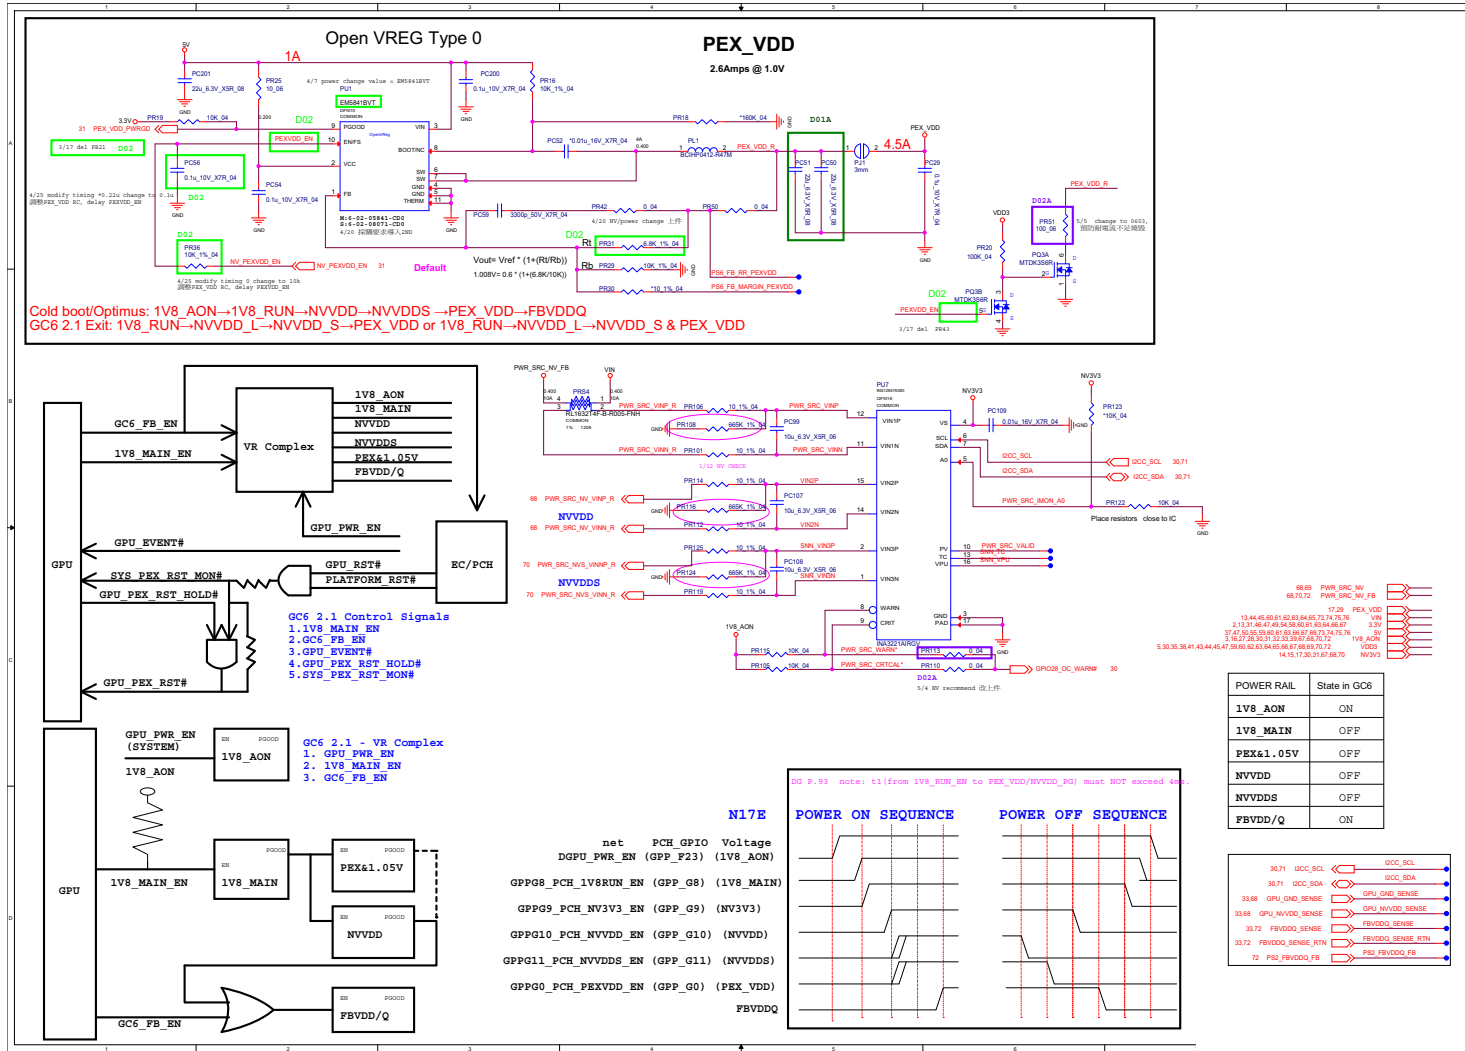

Sheet 71 of 91  
 PEX\_VDD


# FBVDDQ

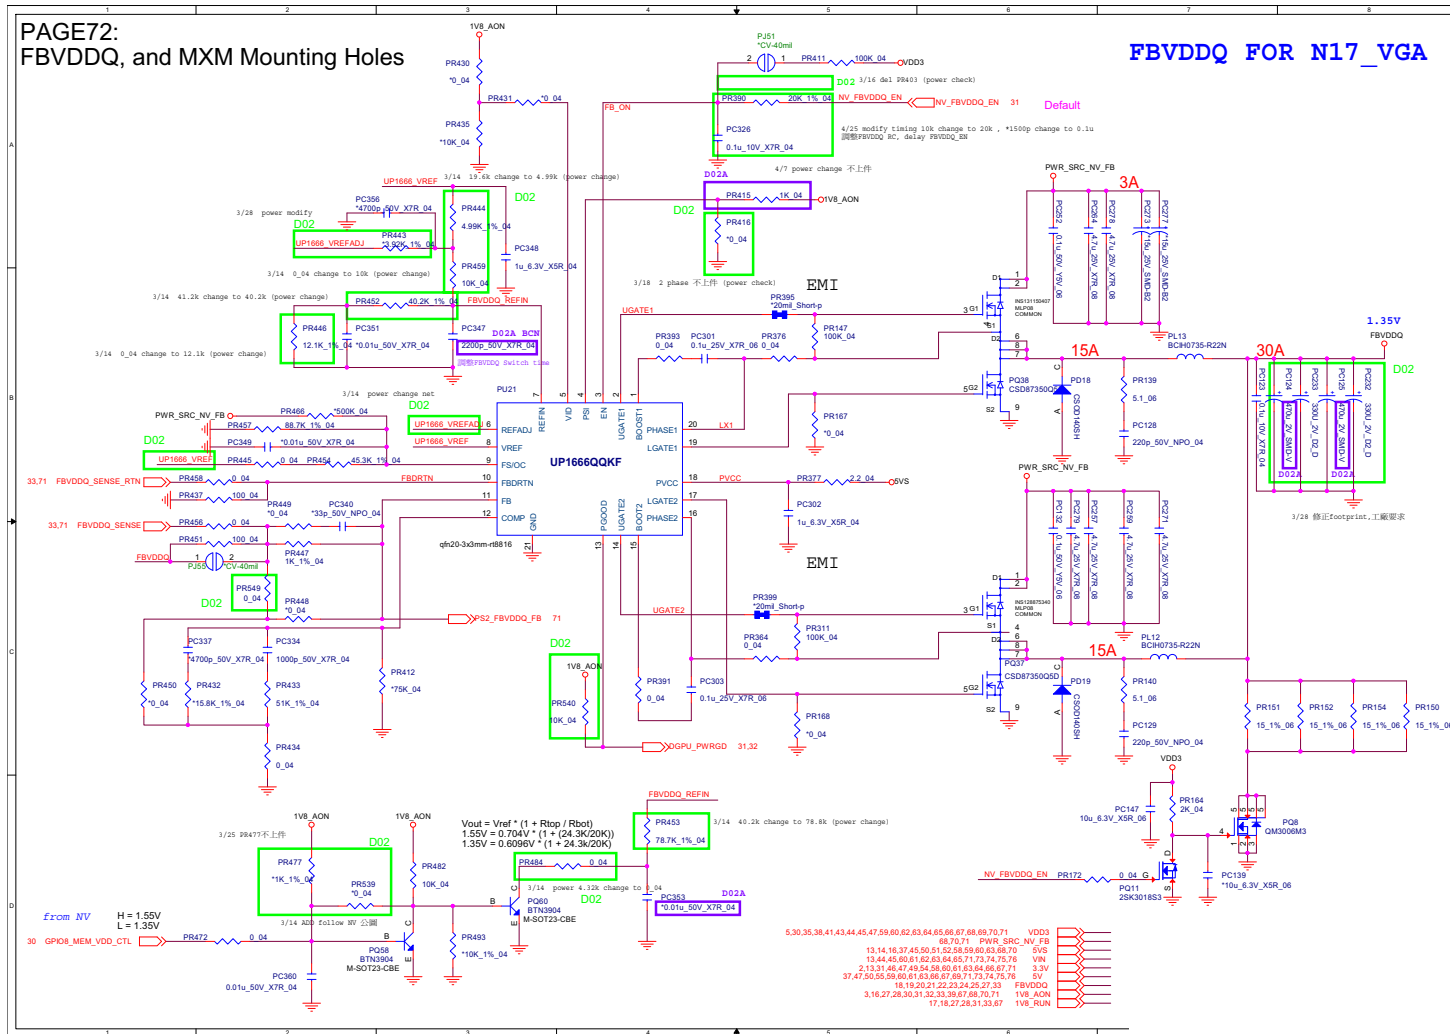

Sheet 72 of 91  
FBVDDQ

B.Schematic Diagrams


# VCC\_Core & VCCSA

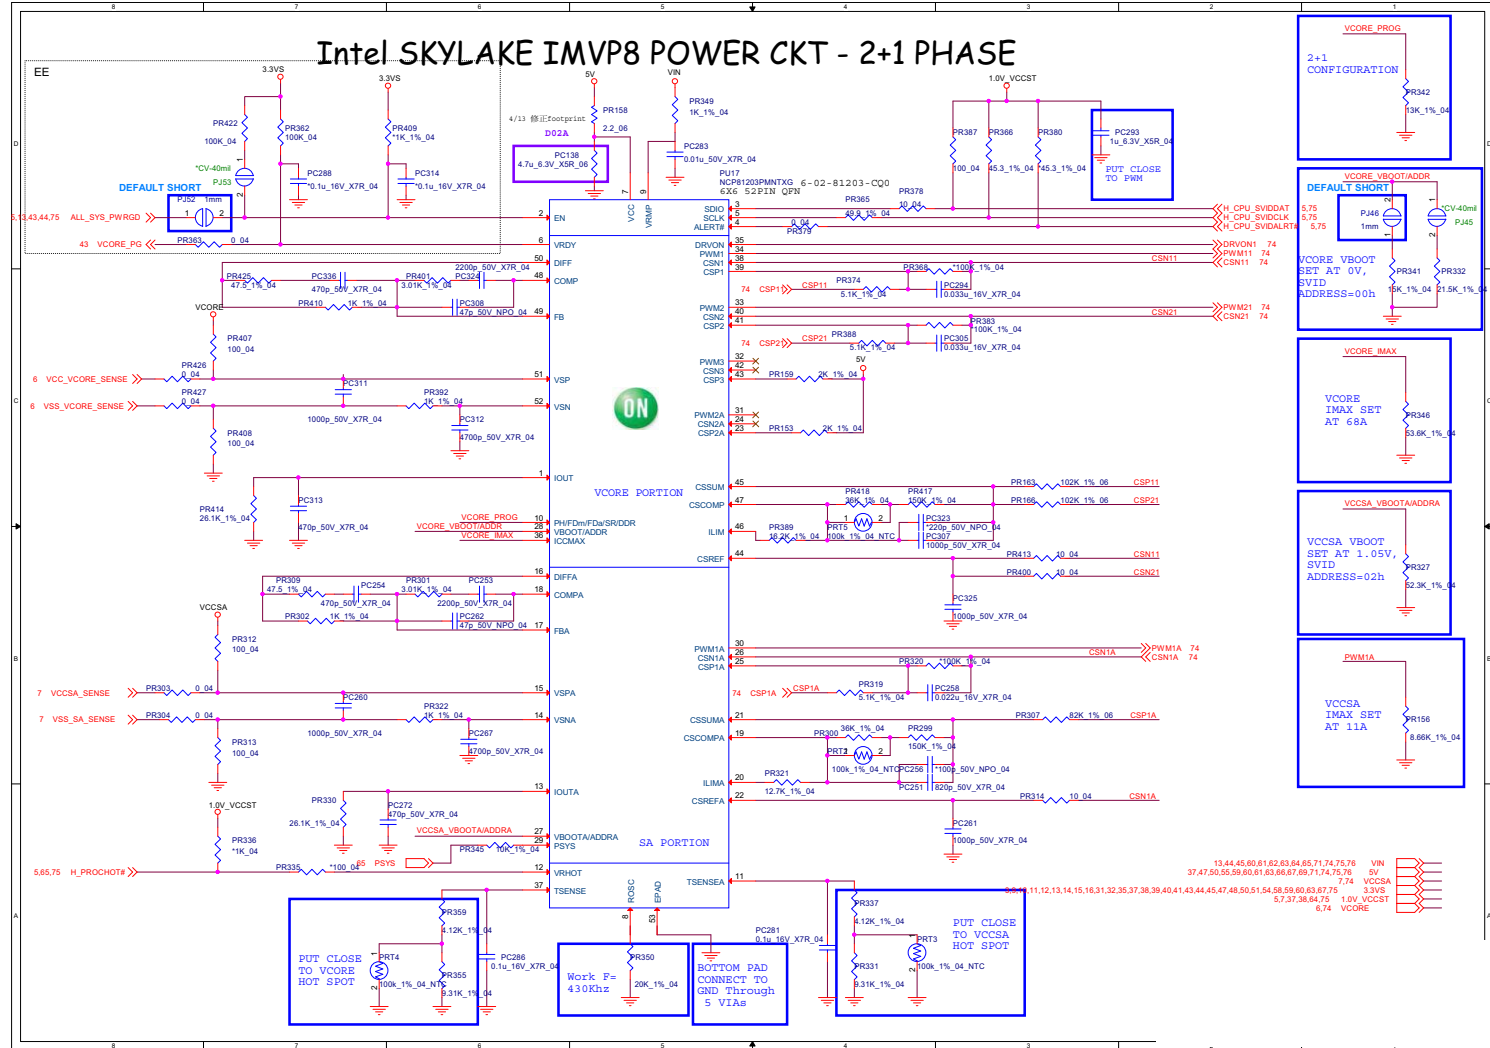

Sheet 73 of 91  
VCC\_Core &  
VCCSA




# VCore Output Stage

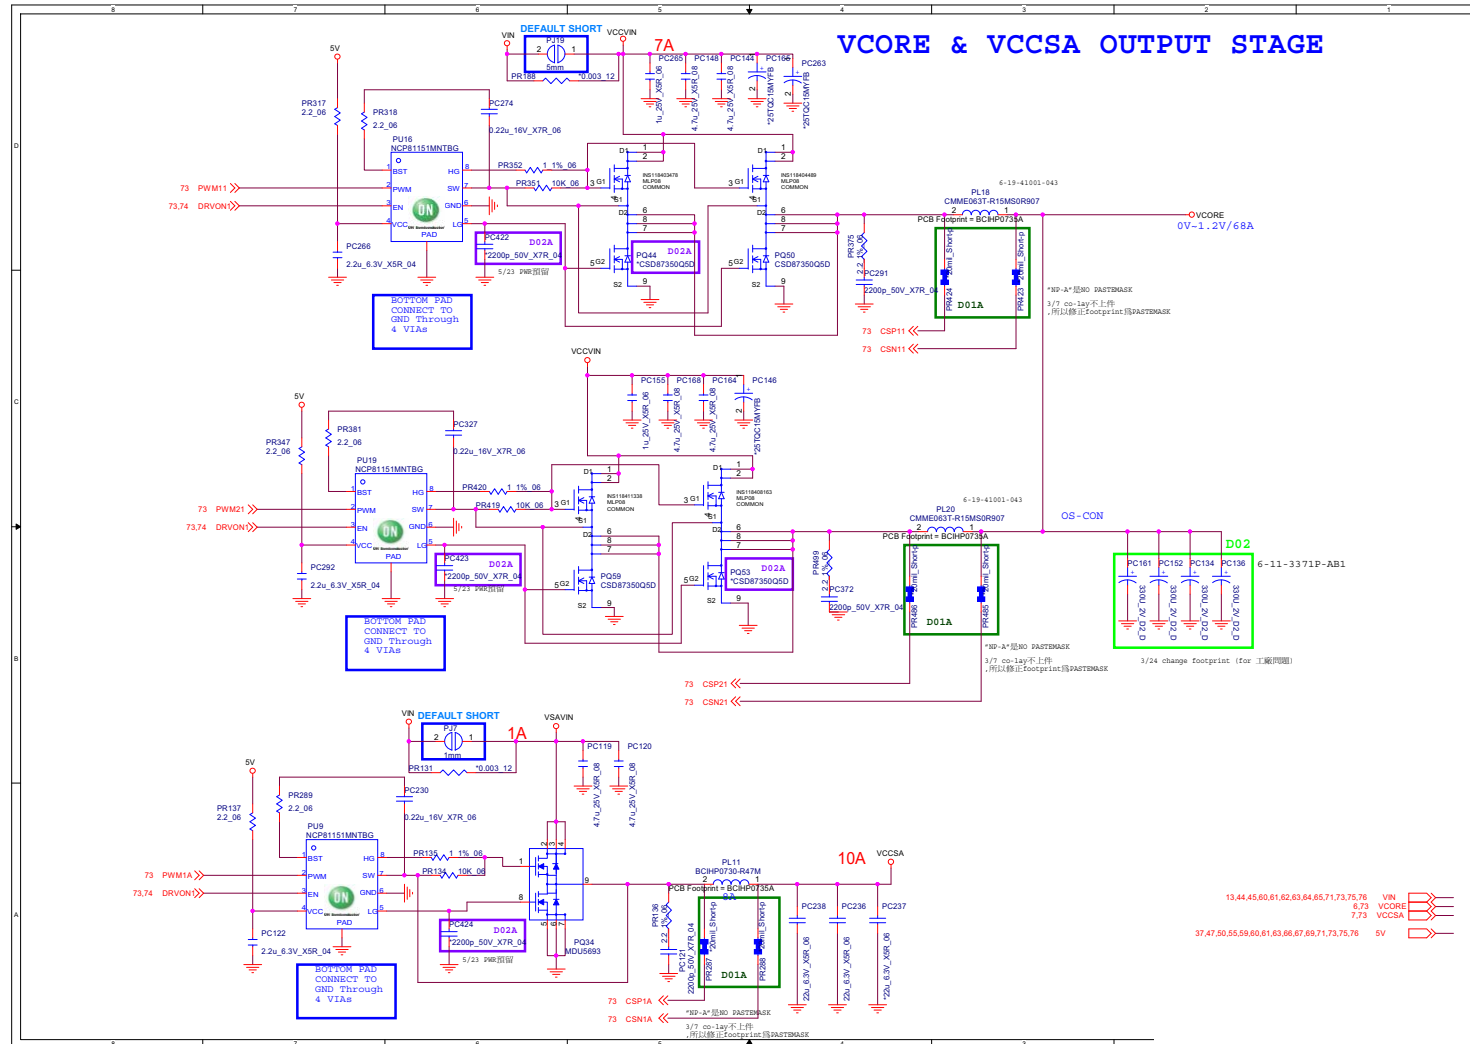

Sheet 74 of 91  
VCore Output Stage

B.Schematic Diagrams


# VCCGT

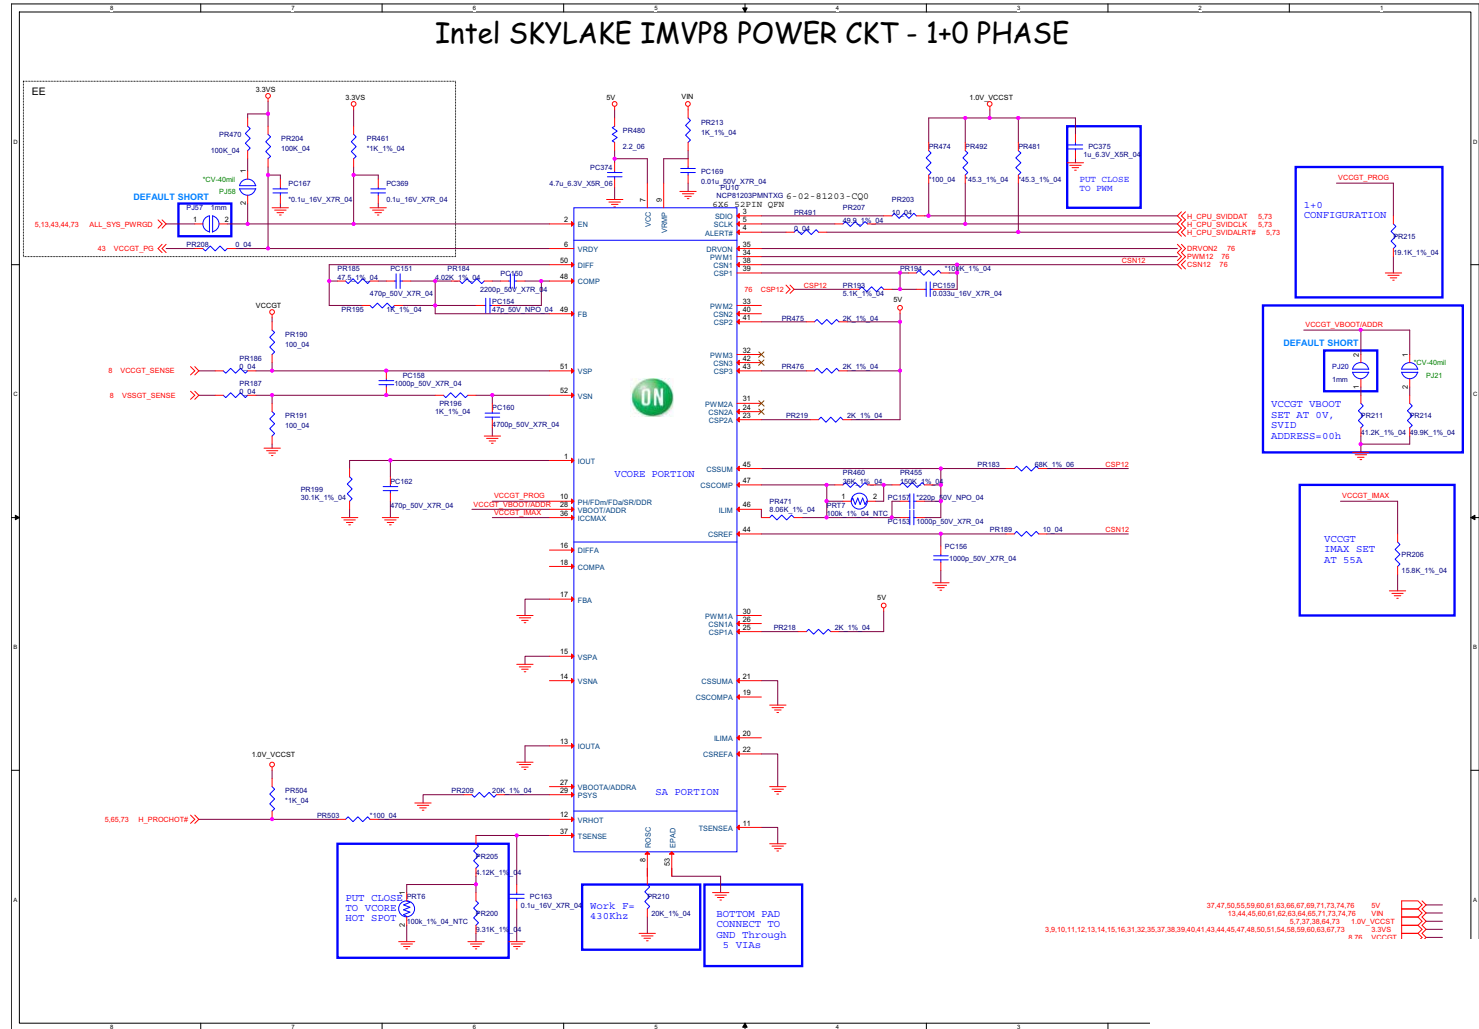

Sheet 75 of 91  
VCCGT

B.Schematic Diagrams


# VCCGT Output Stage

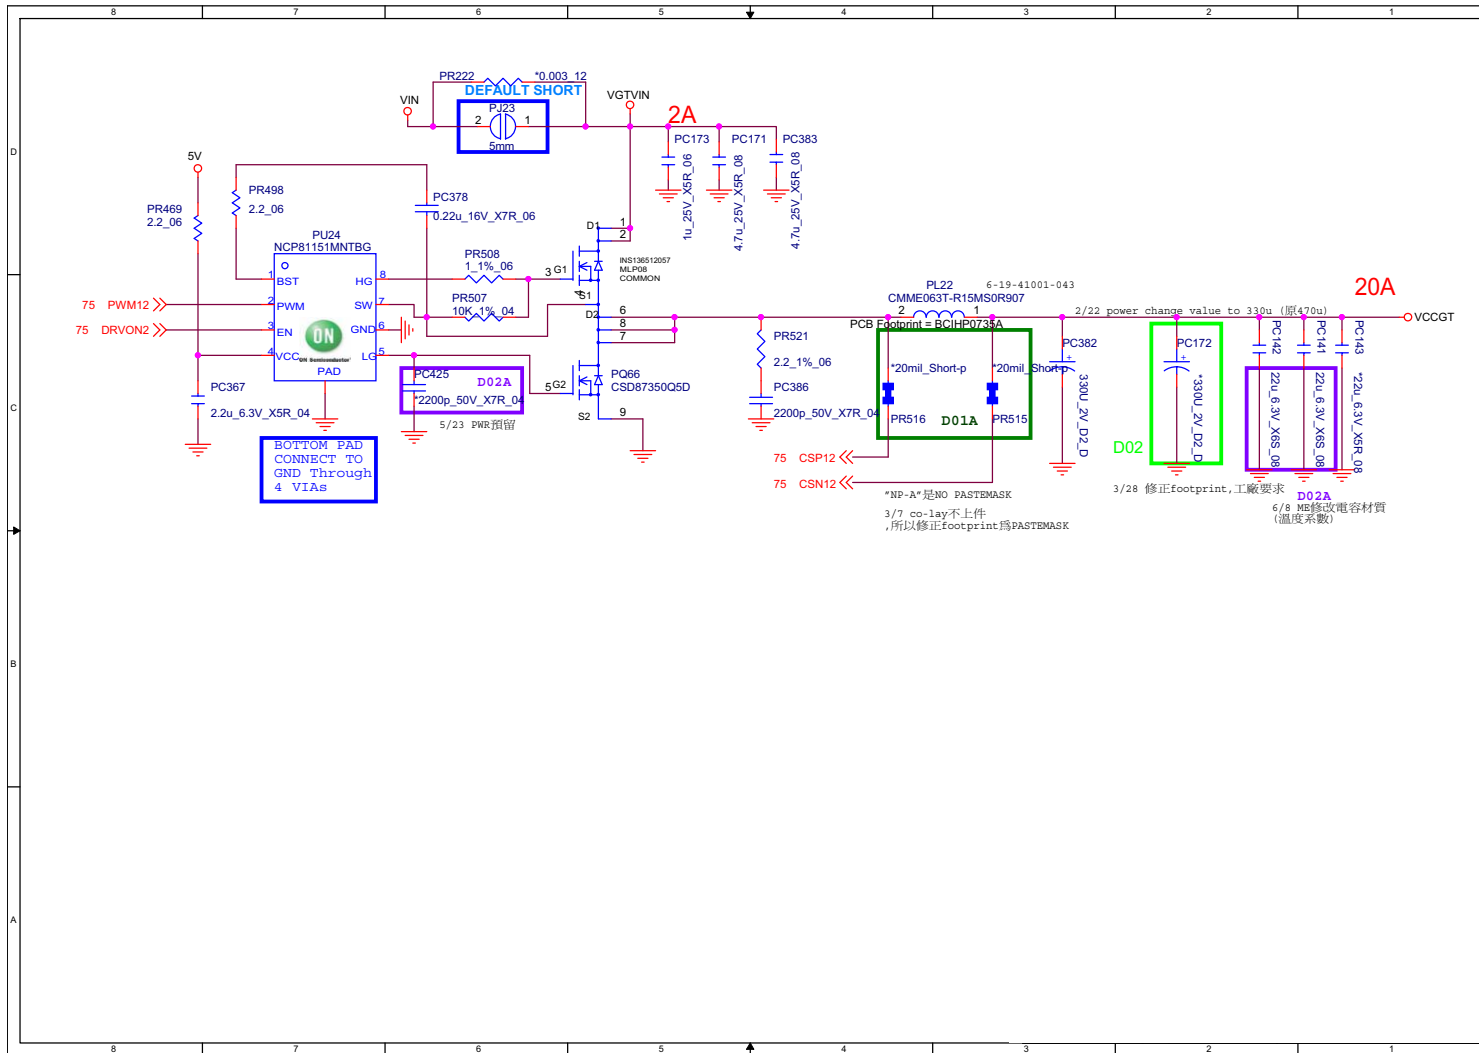

Sheet 76 of 91  
 VCCGT Output Stage


B.Schematic Diagrams

# Audio Board P65\_ESS\_A 1/3

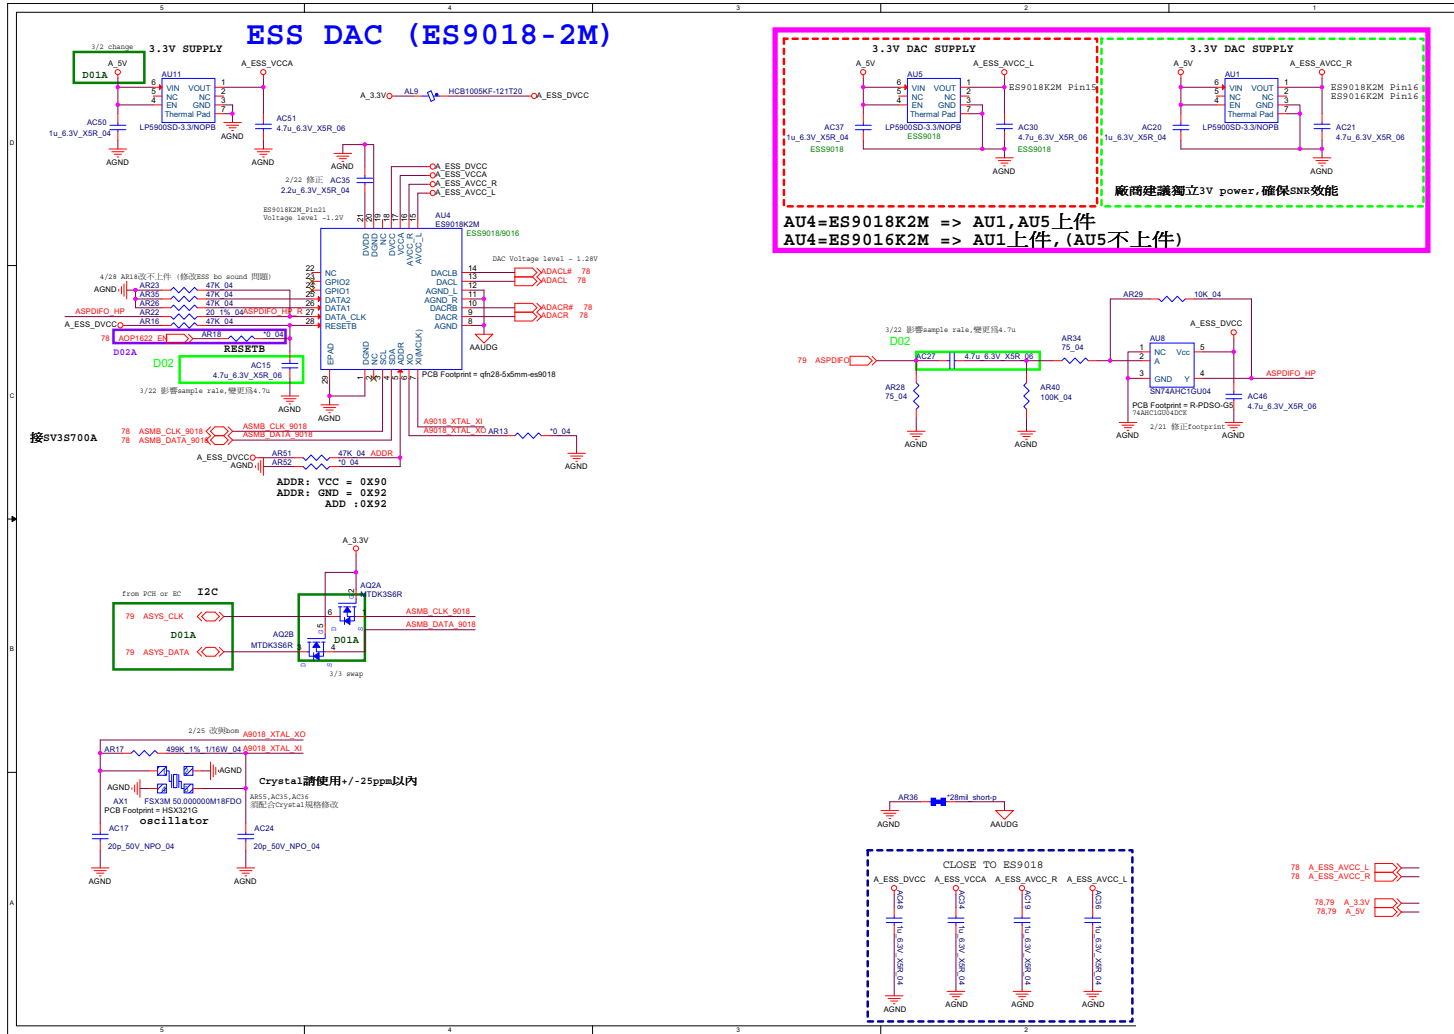

Sheet 77 of 91  
Audio Board  
P65\_ESS\_A 1/3

# Audio Board P65\_ESS\_A 2/3

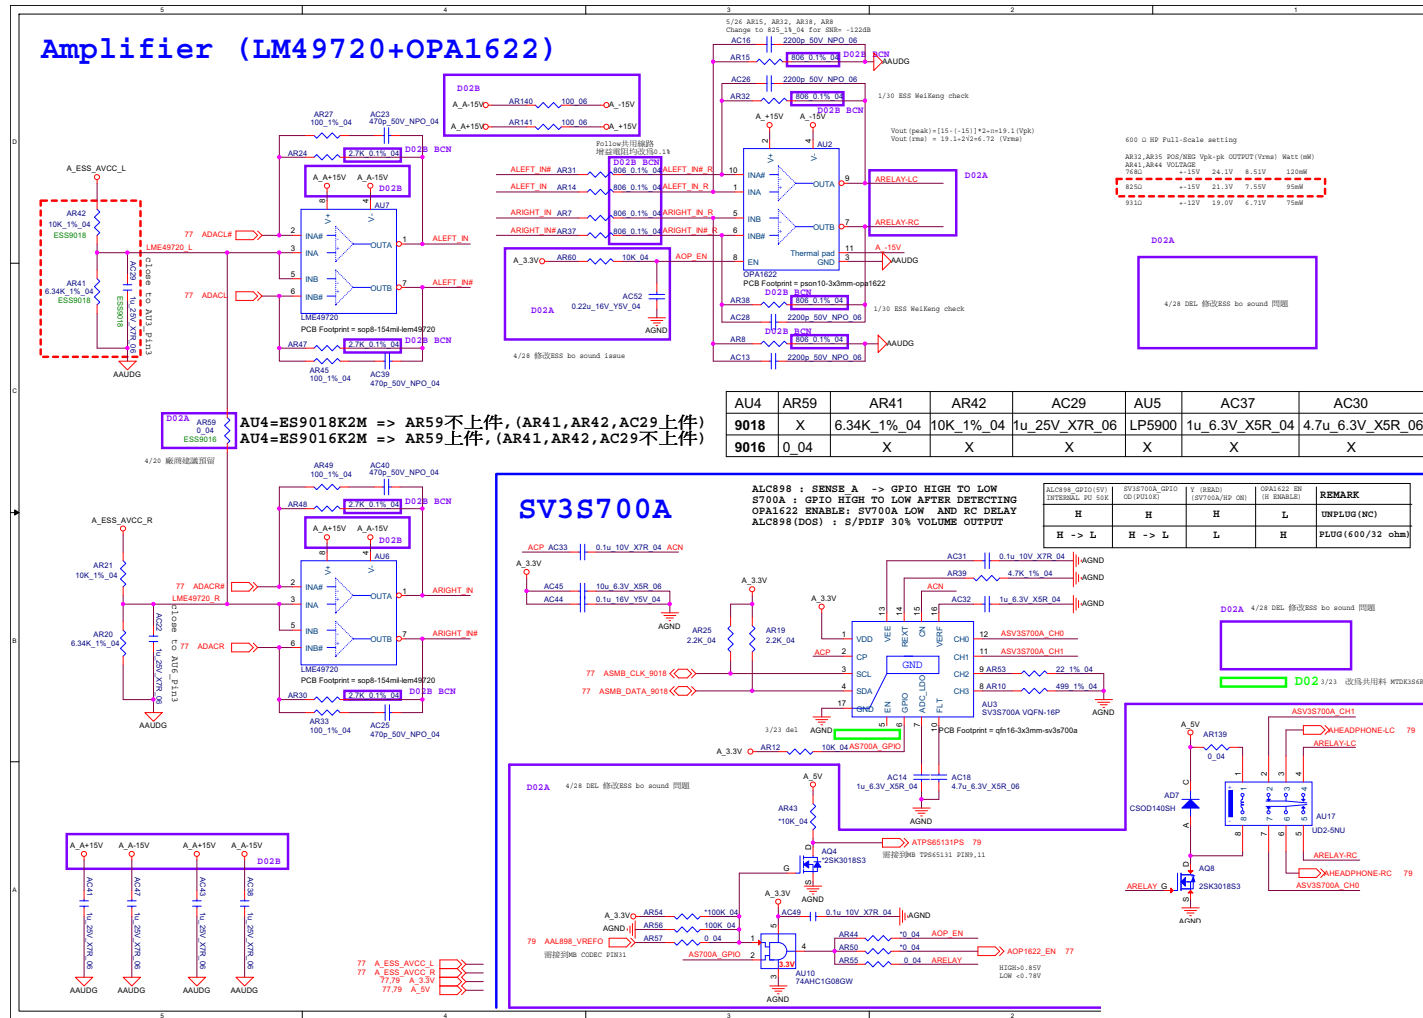


Sheet 78 of 91  
Audio Board  
P65\_ESS\_A 2/3


B.Schematic Diagrams

# Audio Board P65\_ESS\_A 3/3

Sheet 79 of 91  
Audio Board  
P65\_ESS\_A 3/3

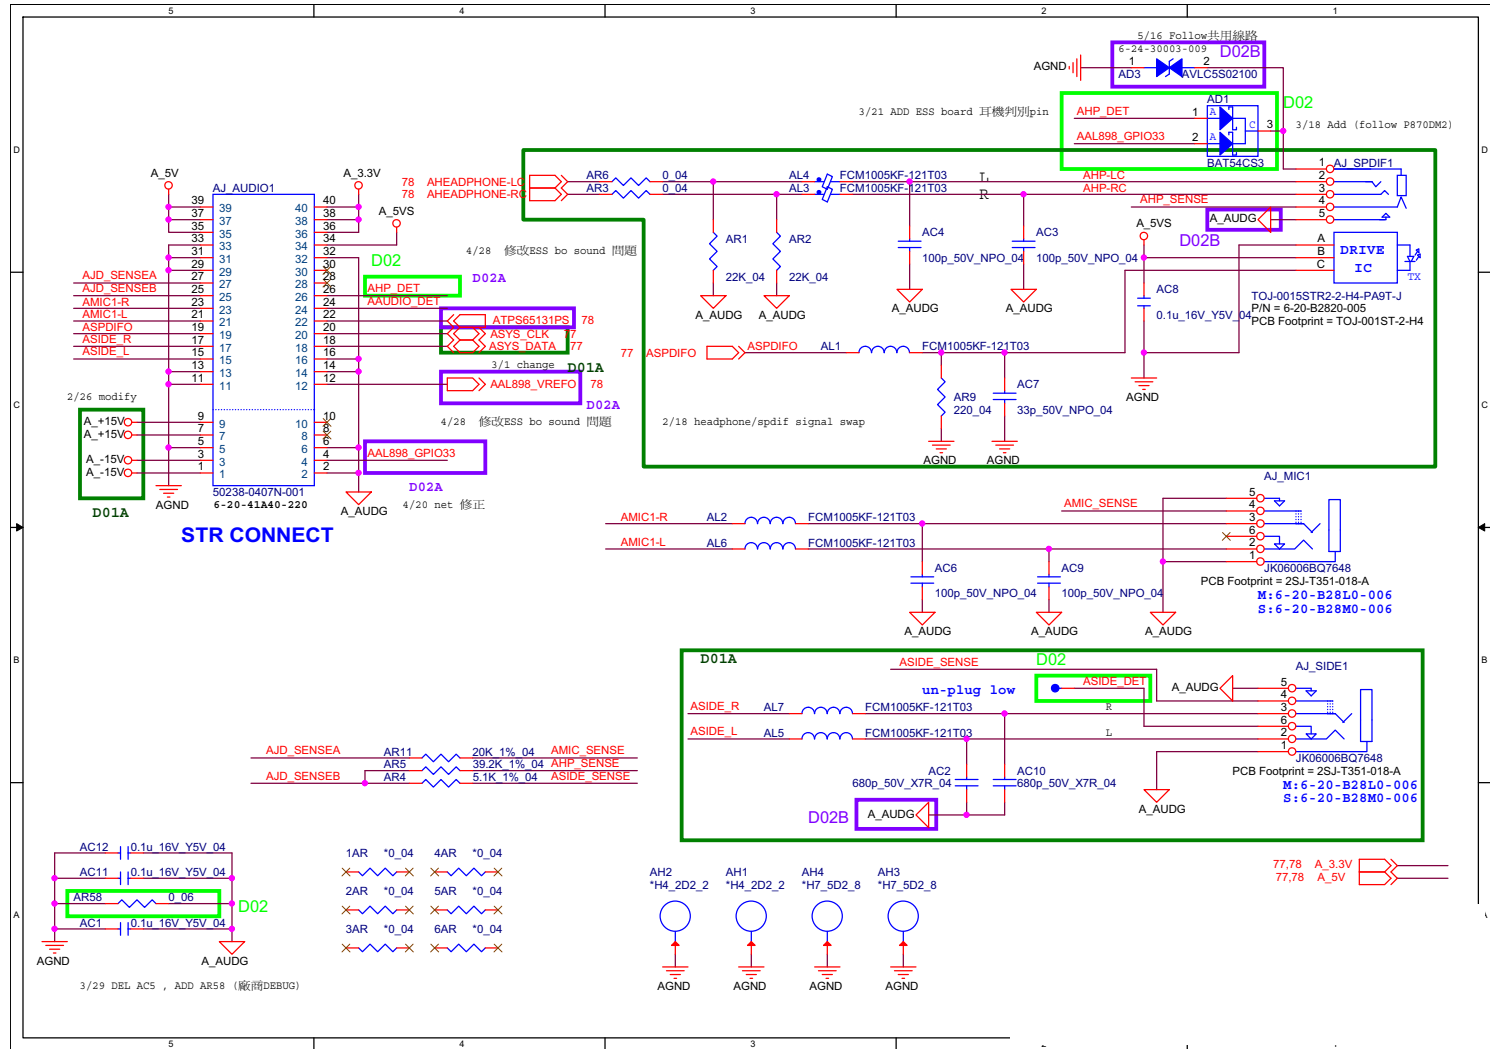

# Audio Board P67\_3DAMP\_E

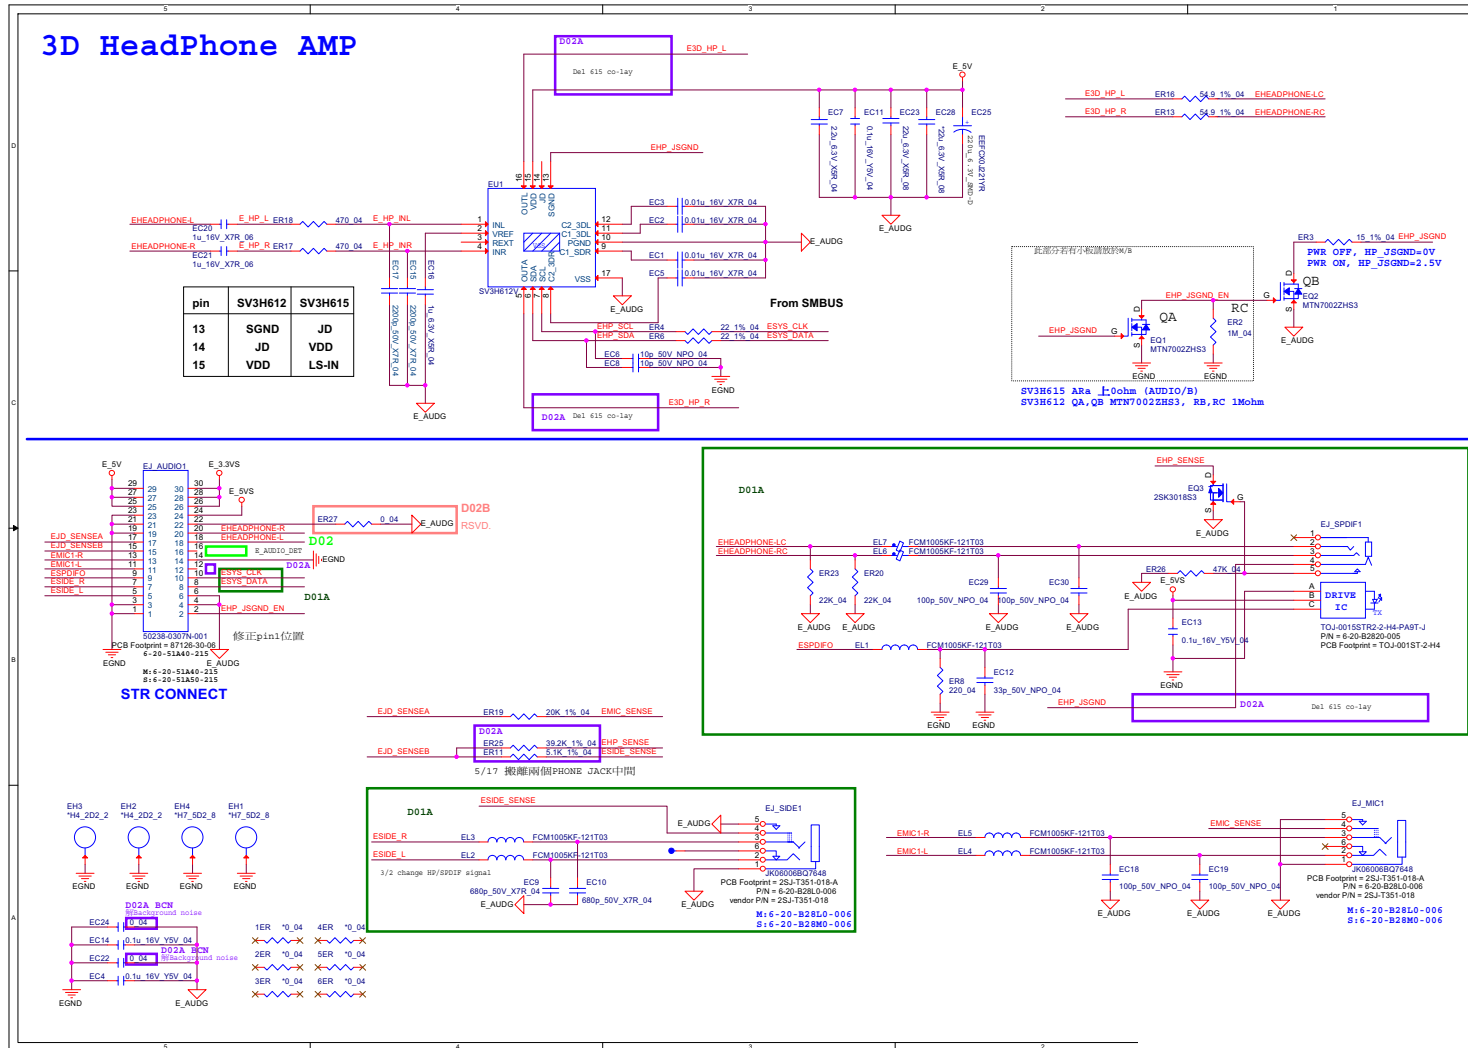


Sheet 80 of 91  
Audio Board  
P67\_3DAMP\_E

B.Schematic Diagrams


# P650RS Power Board

Sheet 81 of 91  
P650RS Power Board

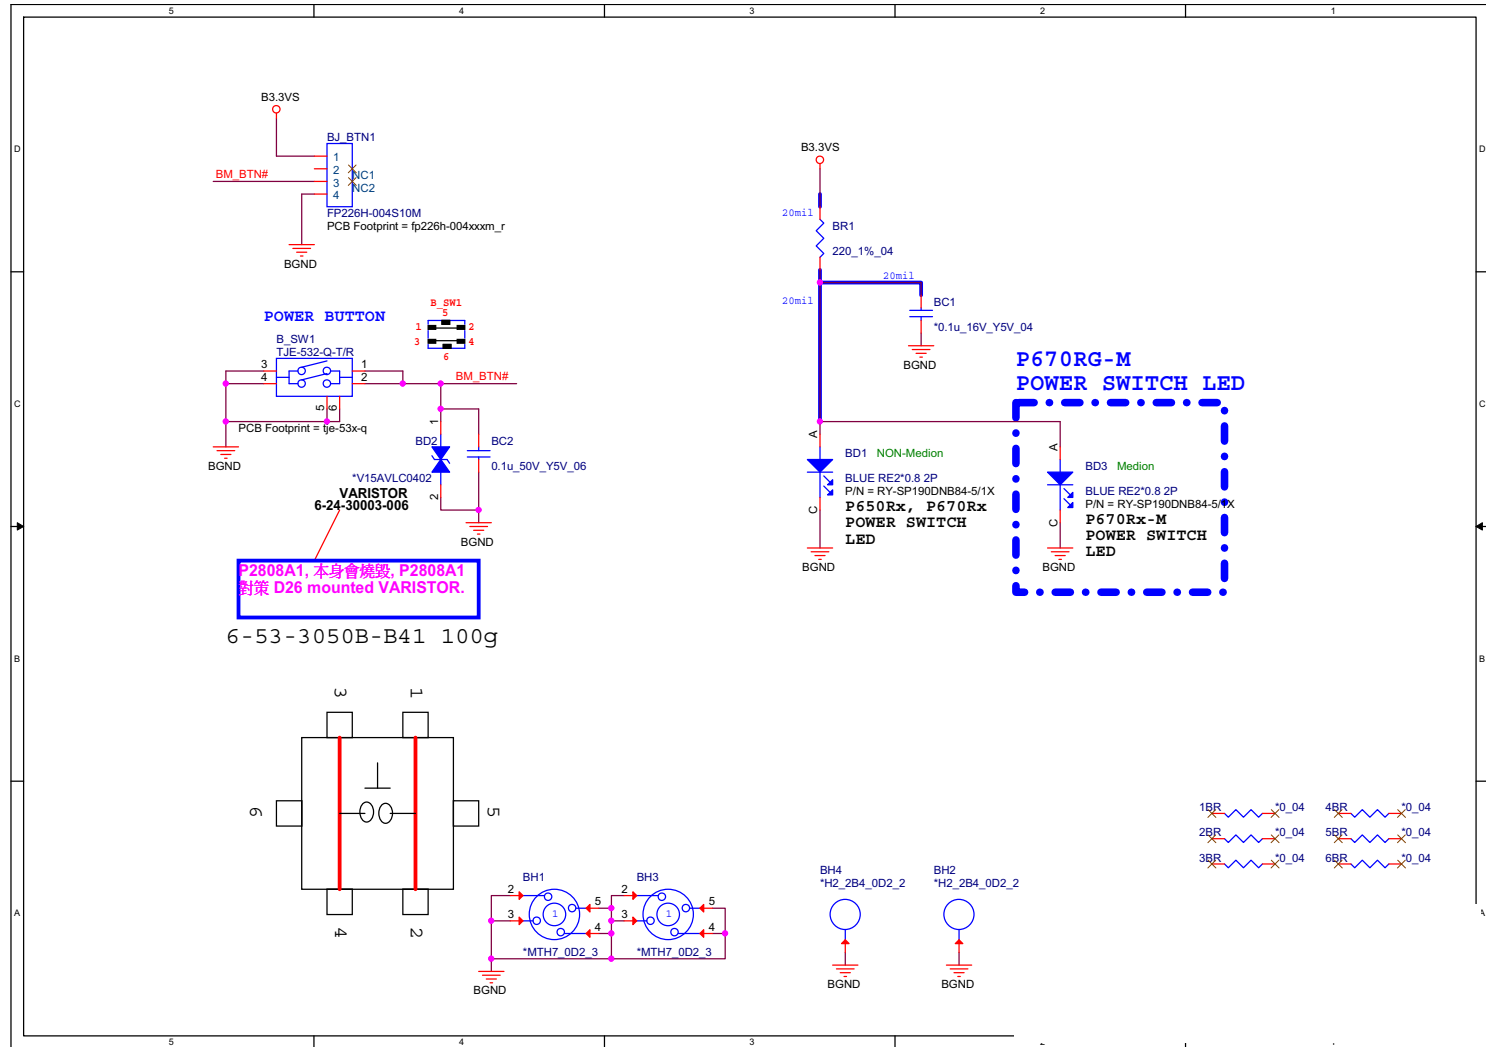




# P650RS HDD Board

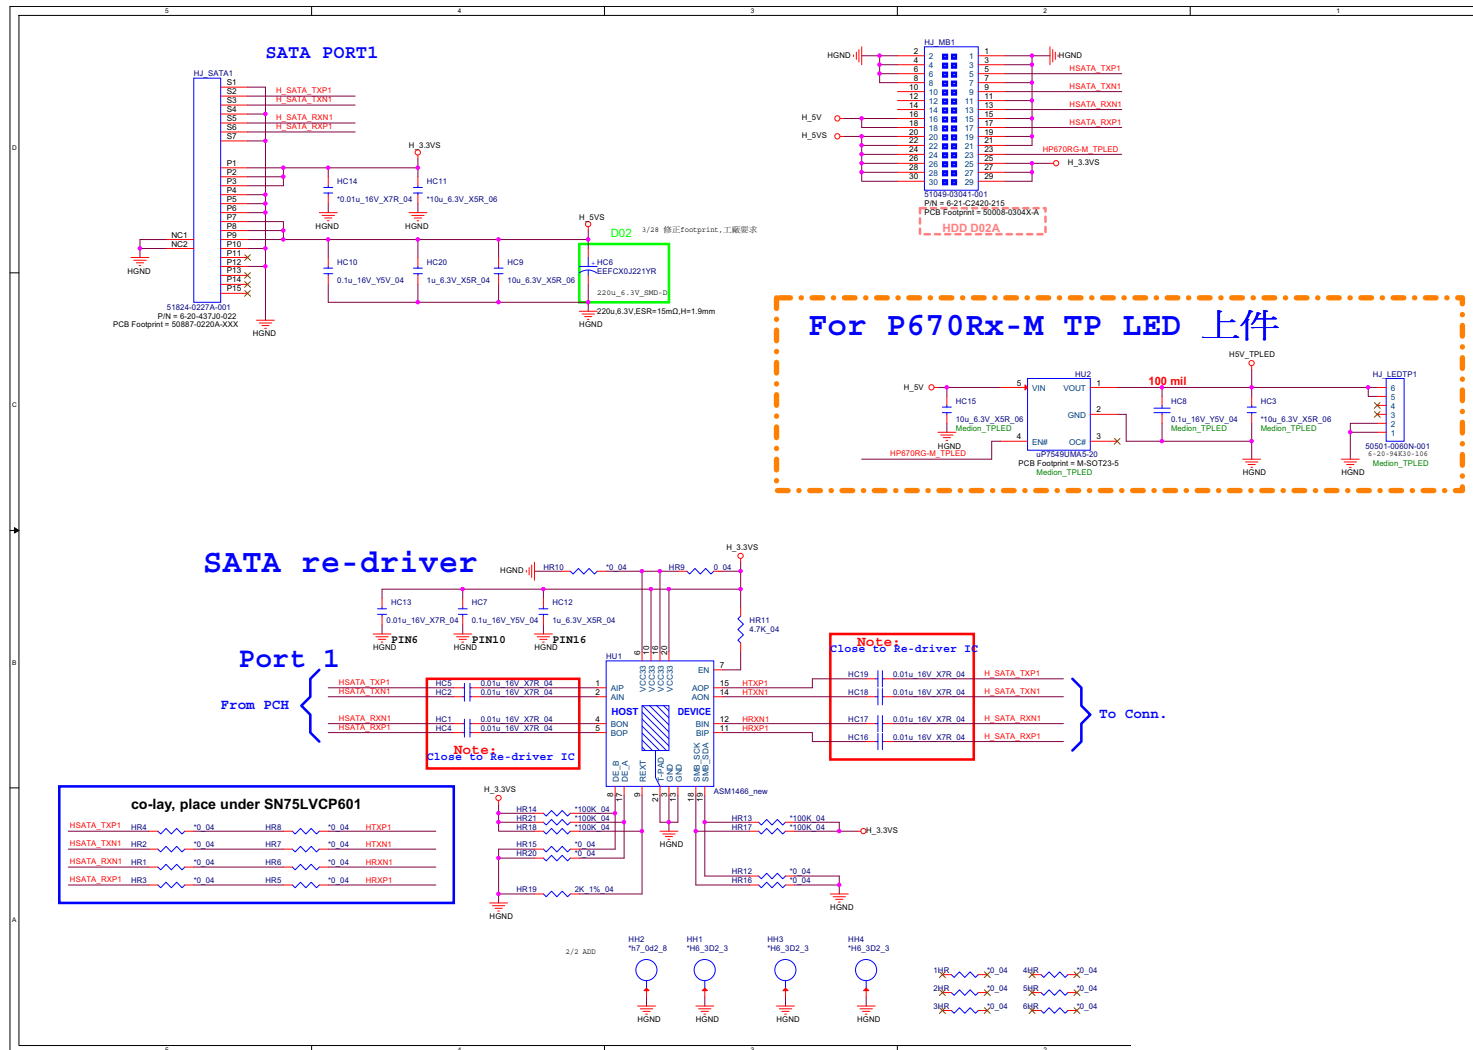


Sheet 82 of 91  
P650RS HDD Board

# P650RS LED Board

Sheet 83 of 91  
P650RS LED Board

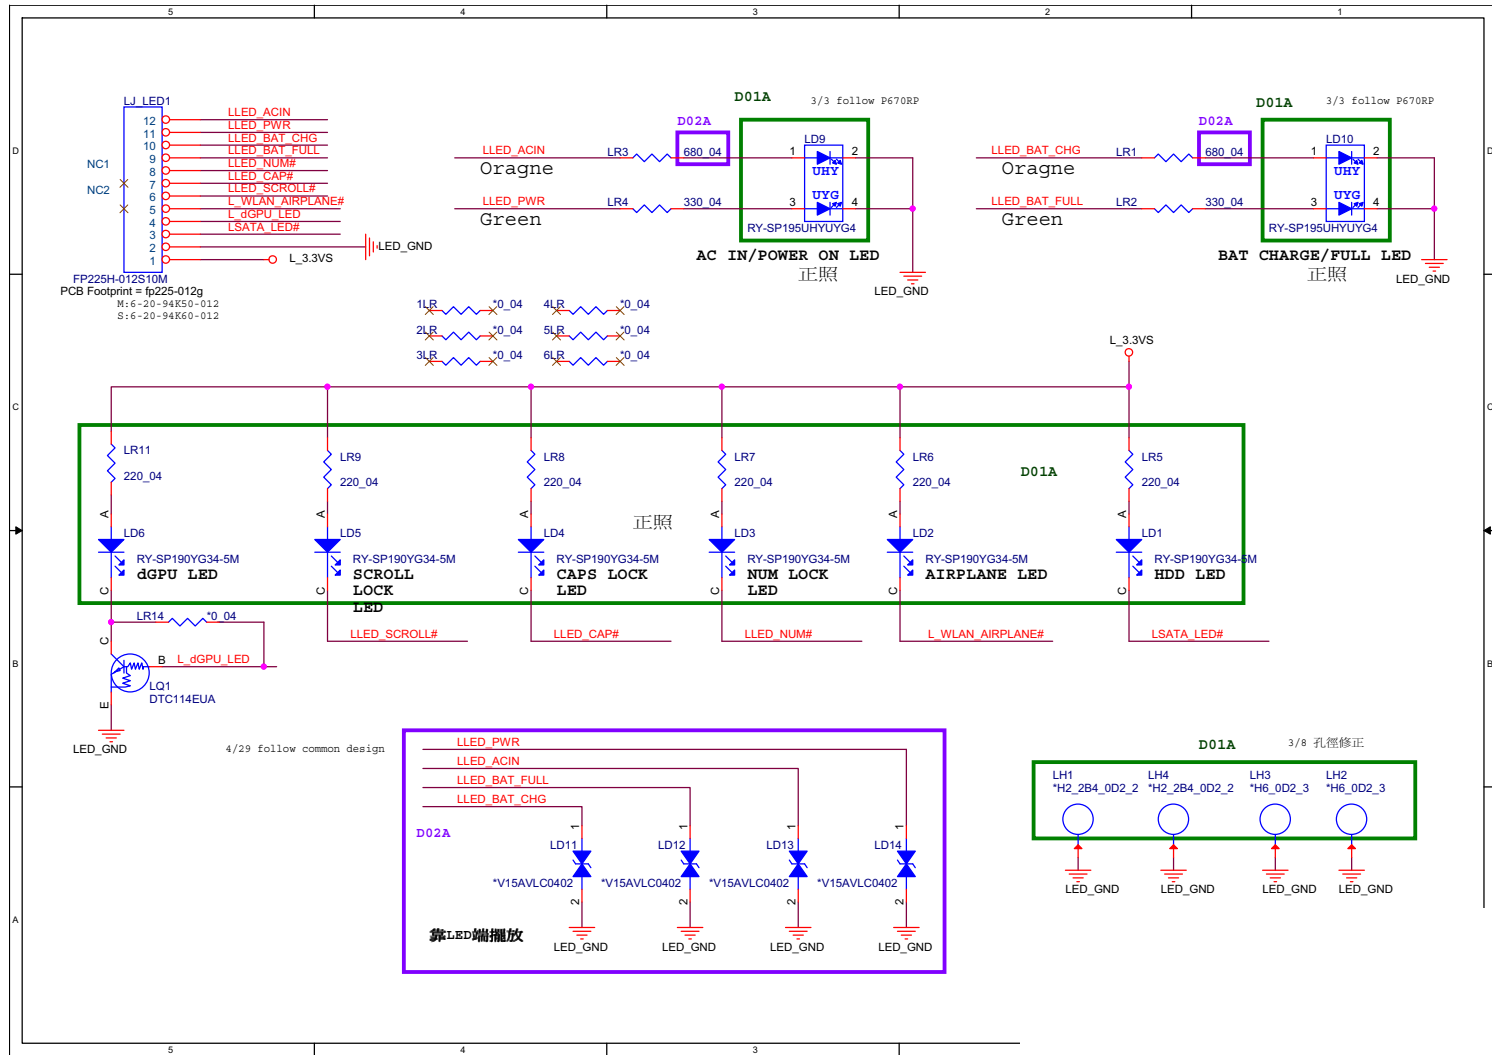


# P650RS FP Board

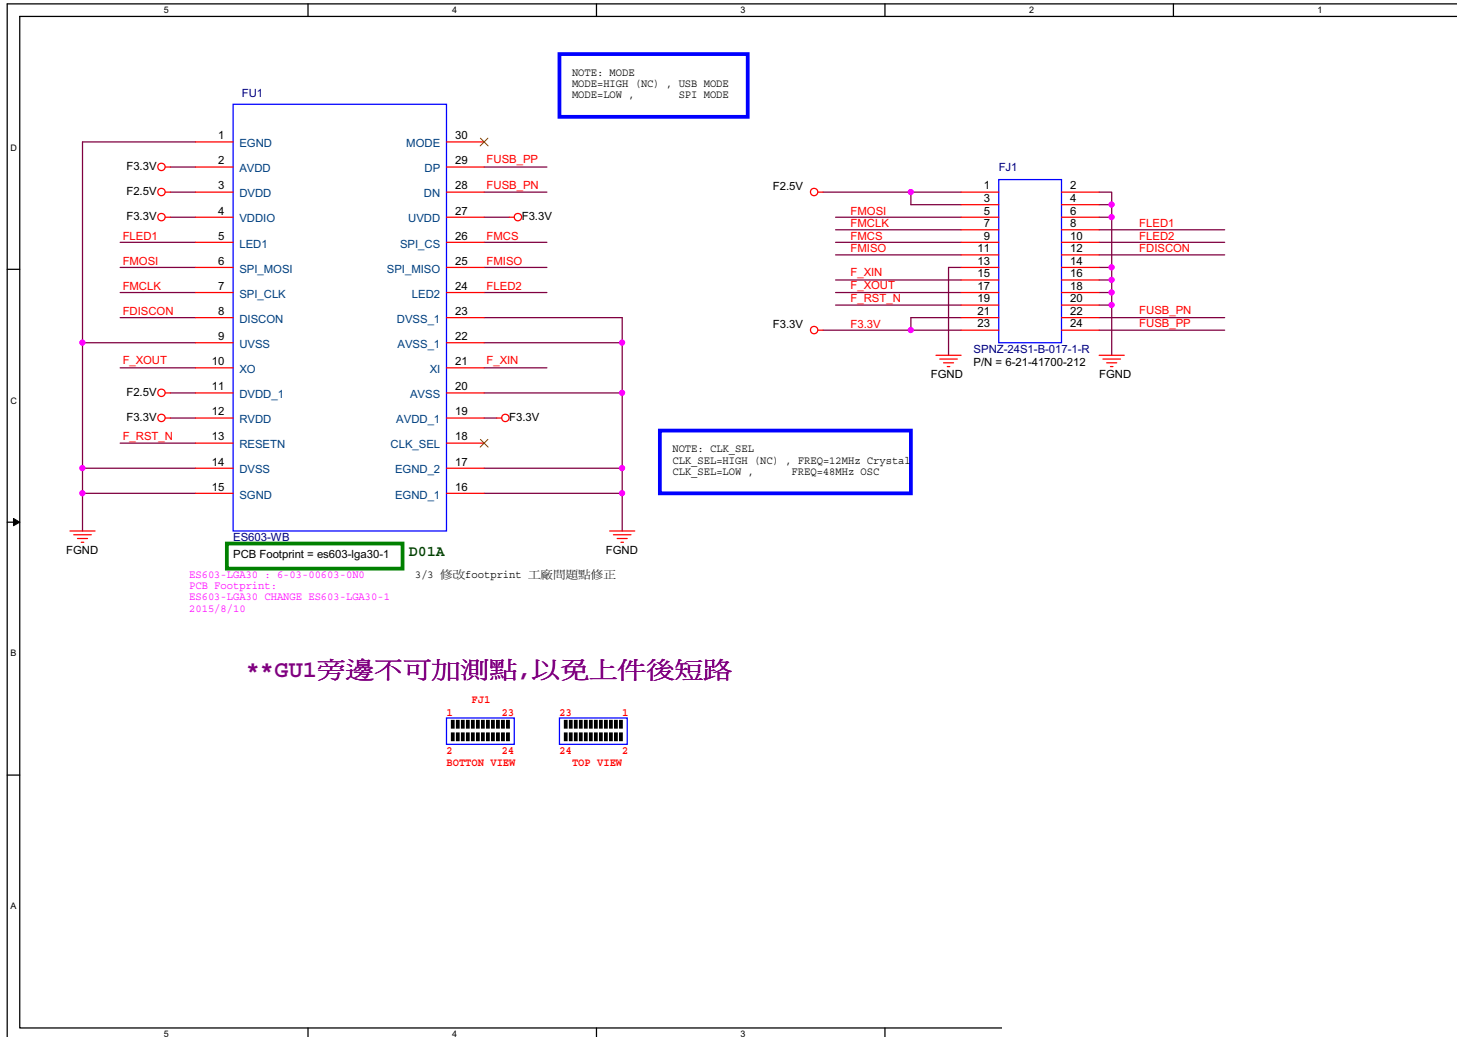


Sheet 84 of 91  
P650RS FP Board

# P650RS Click Board


Sheet 85 of 91  
P650RS Click  
Board

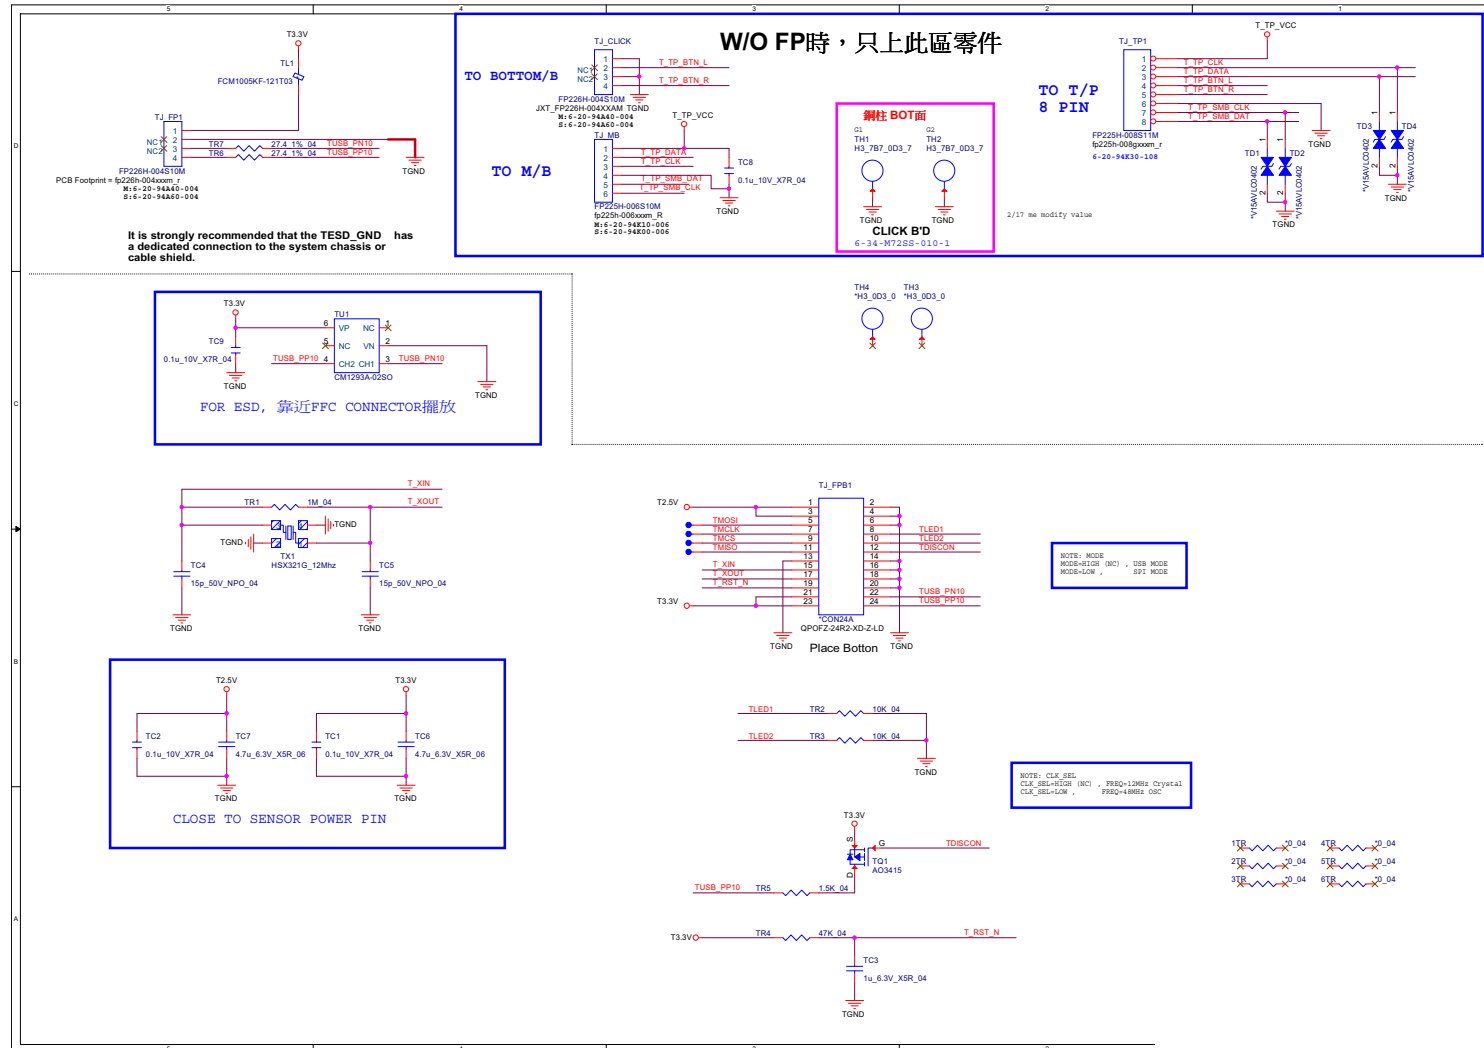


P650RS USB Board 1/3

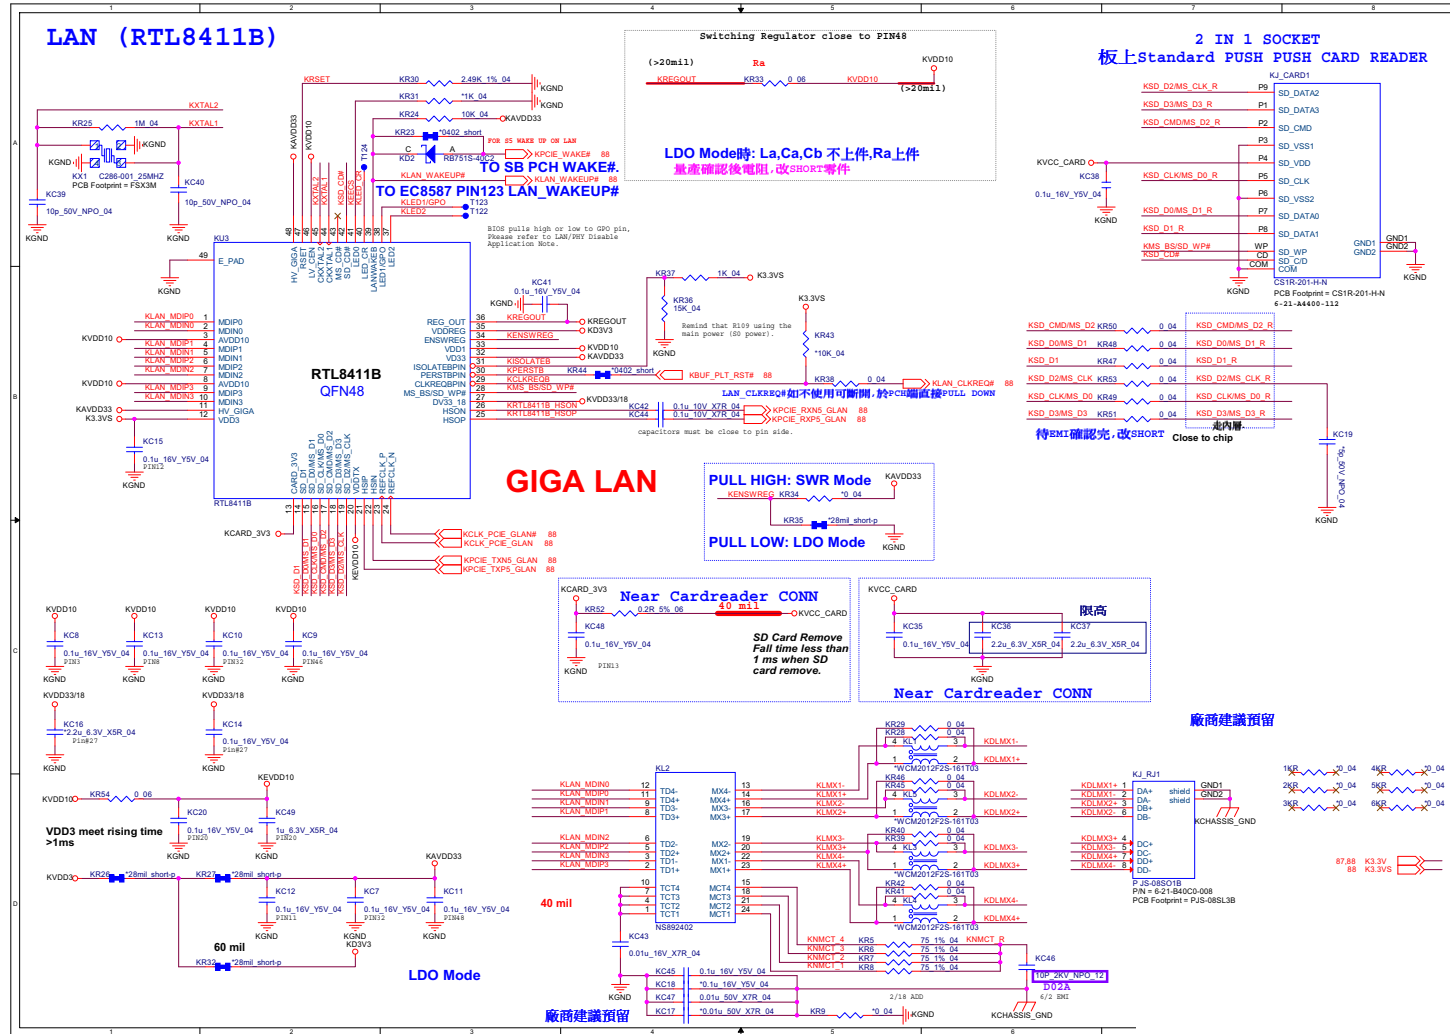

P650RS USB Board 2/3

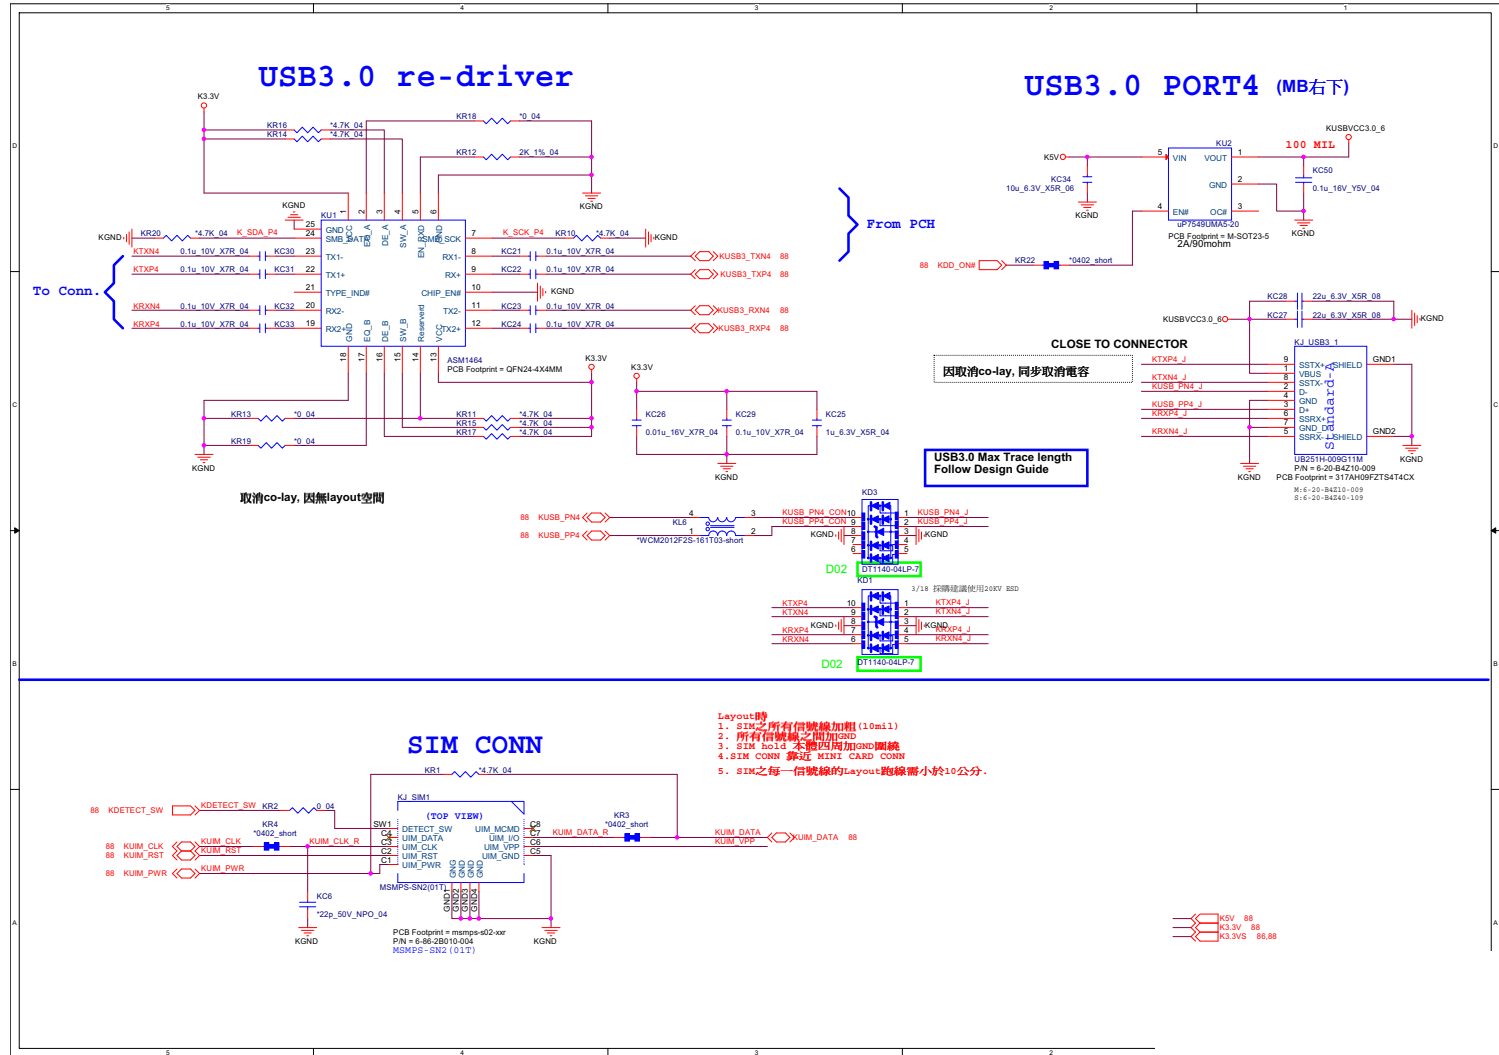

# P650RS USB Board 3/3

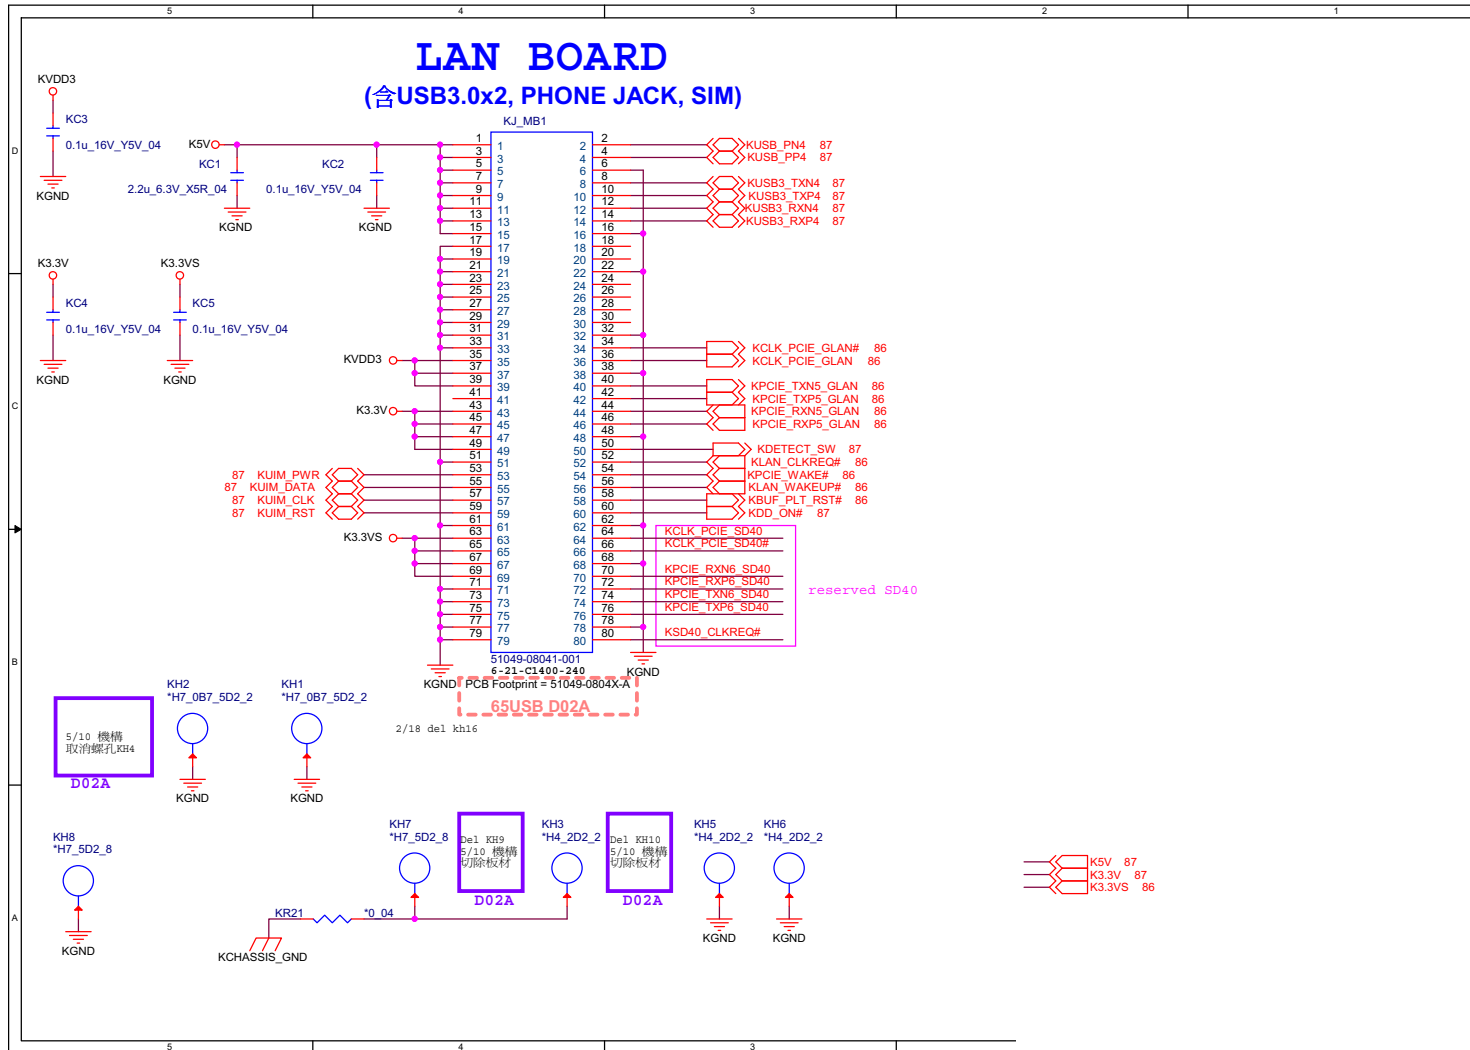


Sheet 88 of 91  
P650RS USB Board  
3/3

Schematic Diagrams

P670RS LED Board


Sheet 89 of 91  
P670RS LED Board

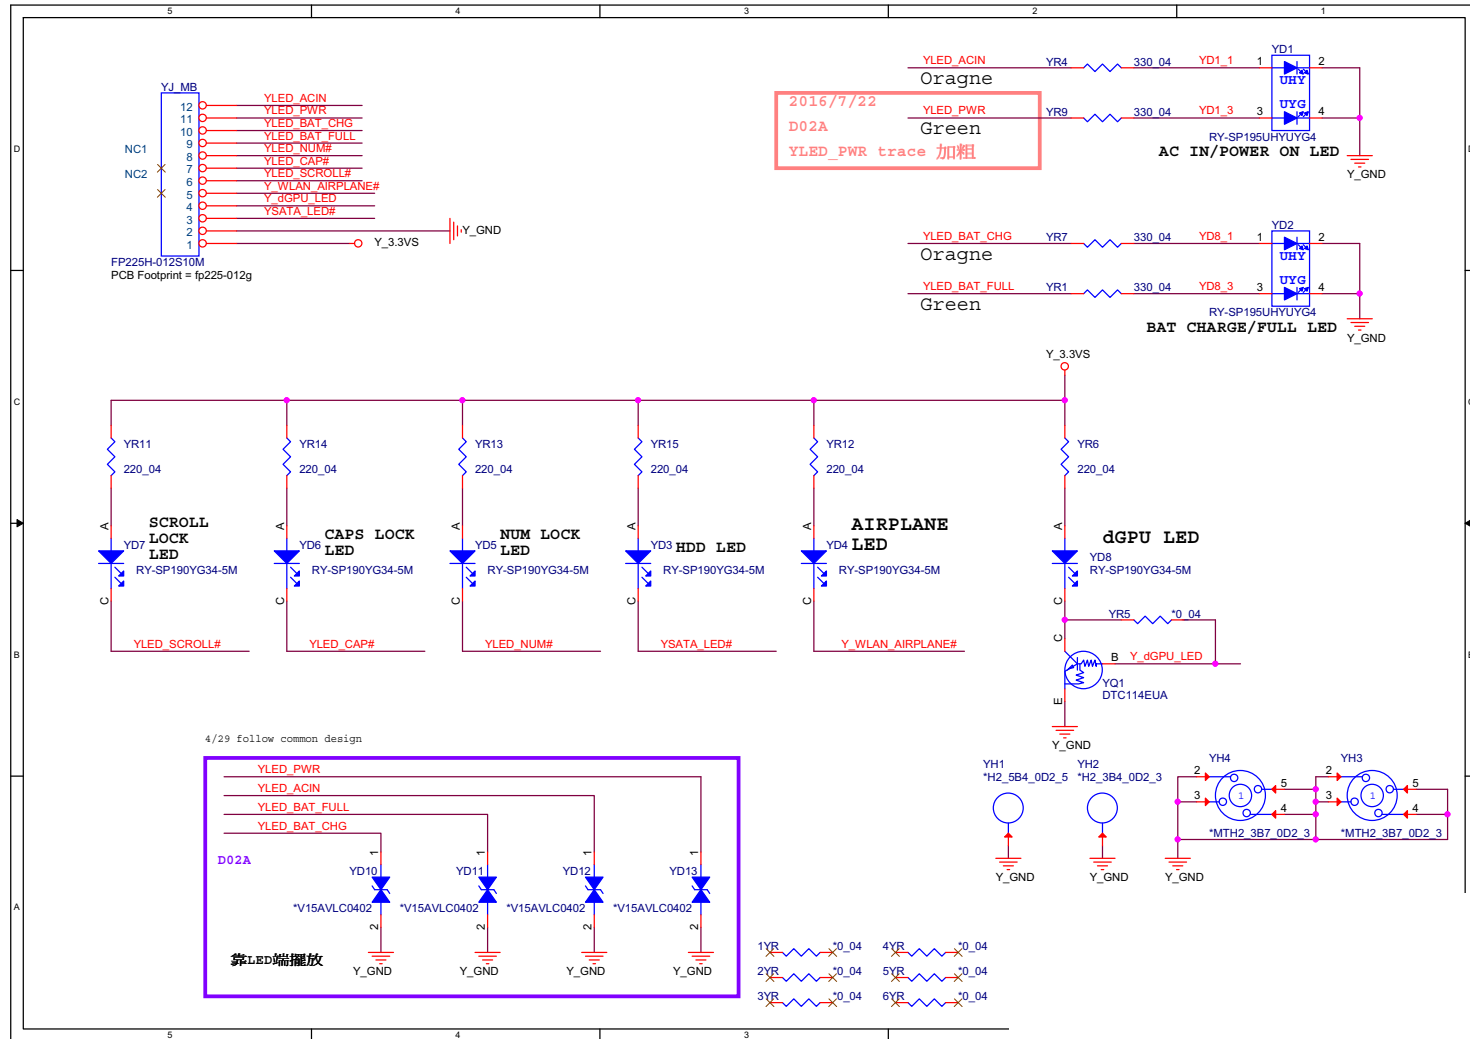





# P670RS USB Board 2/2

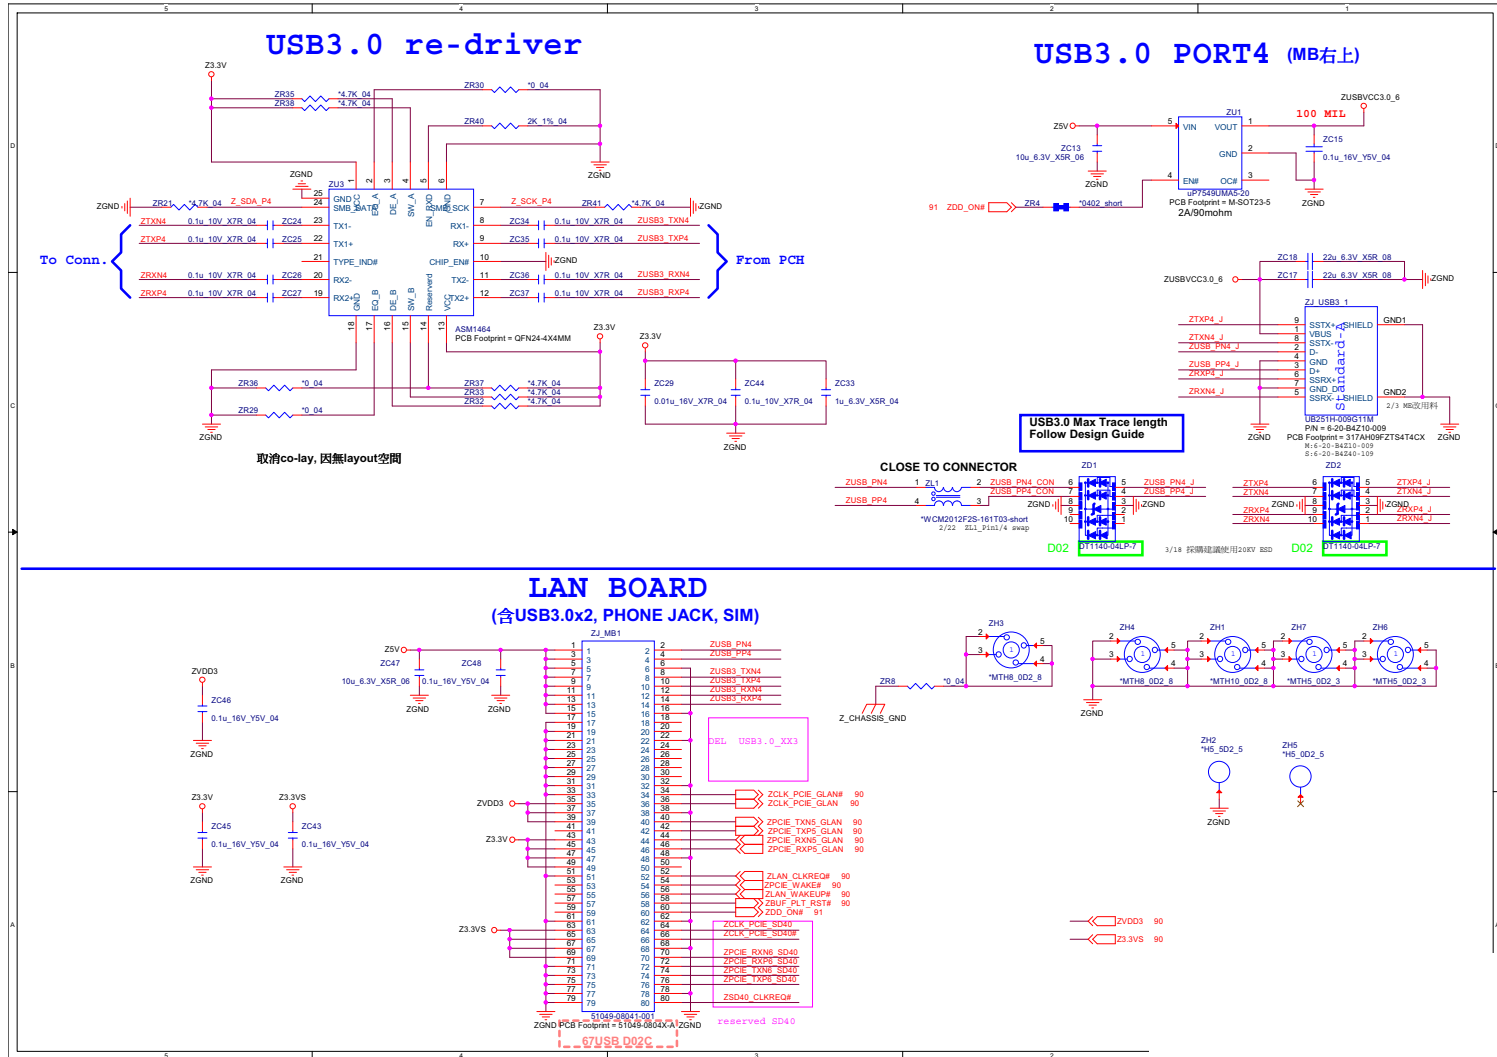

B.Schematic Diagrams

# Appendix C: Updating the FLASH ROM BIOS

## To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

## Download the BIOS

1. Go to [www.clevo.com.tw](http://www.clevo.com.tw) and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

## Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

## Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



### BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.0X.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.0X.05, you **MAY NOT** then go back and flash the BIOS to ver 1.0X.04).

## BIOS Update

---

### Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

**fsX:\> Flash.nsh**

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

### Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

### Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.