



Fig. 1. HAWK 8000

GENERAL

The HAWK 8000 is a compact, embedded IoT (Internet of Things) controller and server platform for connecting multiple and diverse devices and sub-systems. With Internet connectivity and Webserving capability, the HAWK 8000 controller provides integrated control, supervision, data logging, alarming, scheduling and network management. It streams data and rich graphical displays to a standard Web browser via an Ethernet or wireless LAN, or remotely over the Internet. The licensing model for the HAWK 8000 controller is simplified and features standard drivers along with optional I/O and field bus Expansion Modules for ultimate flexibility and expandability. The HAWK 8000 controller operates with CentralLine NX for optimum performance. In larger facilities, multi-building applications and large-scale control system integrations, CentralLine NX Supervisors can be used with HAWK 8000 controllers to aggregate information, including real-time data, history and alarms, to create a single, unified application.

FEATURES

- TI AM3352: 1000MHz ARM[®] Cortex™-A8.
- 1GB DDR3 SDRAM
- Removable micro-SD card with 4GB flash total storage/2GB user storage.
- Wi-Fi (Client or WAP)
 - IEEE802.11a/b/g/n
 - IEEE802.11n HT20 at 2.4GHz
 - IEEE802.11n HT20/HT40 at 5GHz
 - Configurable radio (Off, WAP, or Client)
 - WPAPSK- / WPA2PSK-supported
 - Wi-Fi Antenna
- USB type A connector
 - Back-up and restore support
- Two isolated RS-485 interfaces with selectable bias and termination
- Two 10/100 MB Ethernet ports
- Secure boot
- Voltage: 24 VAC/DC (50/60 Hz)
- Max. power consumption
 - without Expansion Modules: 18 VA;
 - fully loaded with Expansion Modules: 20 VA
- Rec. power supply: 24 VAC (24 VA) / 24 VDC (1 A)
- Runs CentralLine NX 4.1 and later
- Real-time clock
- Battery-free
- The unit is compatible with (DIN43880) enclosures and suitable for mounting to a panel or to an EN50022 Standard 35-mm rail

EXPANSION AND P.B. I/O MODULES

Expansion Modules

The HAWK 8000 supports a maximum total of four Expansion Modules in certain combinations. If you use two HON-NXEM-2X485 Expansion Modules (which must always be positioned to the immediate right of the controller), you are limited to one additional HON-NXEM-LON or HON-NXEM-232 for a total of three.

Table 1. No. of Expansion Modules supported

Max. no.	Expansion Modules
4	HON-NXEM-LON
4	HON-NXEM-232
2	HON-NXEM-2X485



MAX. 3 EXPANSION MODULES

MAX. 4 EXPANSION MODULES

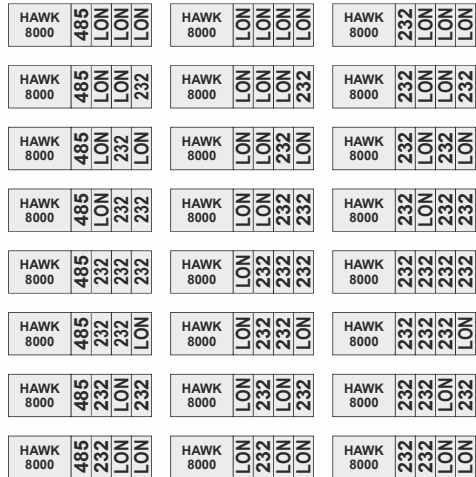


Fig. 2. Possible combinations of Expansion Modules

Separate maximum limits may be defined in the controller's license, such as total number of points (capacity licensing).

Table 2. Maximum wired field bus integrations

HW interface	max. no.	description, option module
RS485	6	Two via the two onboard RS485 interfaces of the HAWK 8000, four via two HON-NXEM-2X485 Exp. Modules (each with 2 ports)
LONWORKS FTT-10	4	Four HON-NXEM-LON Exp. Modules (each with 1 port)
RS232	4	Four HON-NXEM-232 Exp. Modules (each with 1 port)

Panel Bus I/O Modules

In principle, up to six (6) Panel Buses can be operated concurrently:

- Up to two (2) Panel Buses via the onboard RS485 interfaces of the HAWK 8000, plus up to four (4) Panel Buses via the RS485 interfaces of two HON-NXEM-2X485 Expansion Modules (with each Expansion Module capable of handling two Panel Buses).

Per RS485 interface, it is possible to operate:

- A maximum of 64 Panel Bus I/O modules;
- 16 Panel Bus I/O modules of a given type (UI, AO, BI, BO, RO, Floating Output, Mixed)

IMPORTANT

You must check the CPU load of the HAWK 8000 and ensure that 80% CPU load is not exceeded.

Depending on your application (e.g., total application size, Panel Bus I/O updates and poll-rate, amount of alarming and trending, size/complexity/access load of the web interface, etc.), the maximum number of supported RS485 interfaces (i.e. Panel Bus interfaces) and Panel Bus modules may be lower than six (6) Panel Buses with 64 modules each!

For more information, see HAWK 8000 Software Release Bulletin and to Panel Bus I/O Modules – Product Data (EN0Z-0979GE51).

ORDER NUMBERS

Table 3. Hardware-only controllers, for new and replacement

order no.	description
CLNXSERIES8	HAWK8 NO WIFI W/O LICENSE
CLNXSERIES8W02	HAWK8 WITH WIFI ZONE 2 W/O LICENSE

Every HAWK 8000 requires one of the following basic software licenses.

Table 4. HAWK 8000 basic software licenses

order no.	description
CLNXHAWK8-8005	HAWK8 BASE LIC 250 POINTS
CLNXHAWK8-8010	HAWK8 BASE LIC 500 POINTS
CLNXHAWK8-8025	HAWK8 BASE LIC 1250 POINTS
CLNXHAWK8-8100	HAWK8 BASE LIC 5000 POINTS
CLNXHAWK8-8100P	HAWK8 BASE LIC 100 POINTS
CLNXHAWK8-8200	HAWK8 BASE LIC 10000 POINTS
CLNXHAWK8-DEMO	HAWK8 DEMO LICENSE

Table 5. Expansion Modules

order no.	description
HON-NXEM-LON	LON EXPANSION MODULE SINGLE PORT
HON-NXEM-2X485	RS485 EXPANSION MODULE DUAL PORT
HON-NXEM-232	RS232 EXPANSION MODULE SINGLE PORT

Table 6. Spare parts

order no.	description
CLNXHAWK8-CLIP	HAWK8 CENTRALINE CLIP
CLNXHAWK8-SD	HAWK8 SD CARD
HON-NX8-KIT	WIFI-ANTENNA + RS485 + POWER TERMINALS

Table 7. Point upgrade licenses

order no.	description
CLNX-DEVICE-UP-10	HAWK8 PLUS 500 POINTS UPGRADE
CLNX-DEVICE-UP-25	HAWK8 PLUS 1250 POINTS UPGRADE
CLNX-DEVICE-UP-50	HAWK8 PLUS 2500 POINTS UPGRADE

Table 8. Software upgrade licenses

order no.	description
CLNX-SMA-8005-1YR	HAWK8 1YR SW UPDATE 250-499 PTS
CLNX-SMA-8005-3YR	HAWK8 3YR SW UPDATE 250-499 PTS
CLNX-SMA-8005-5YR	HAWK8 5YR SW UPDATE 250-499 PTS
CLNX-SMA-8010-1YR	HAWK8 1YR SW UPDATE 500-1249 PTS
CLNX-SMA-8010-3YR	HAWK8 3YR SW UPDATE 500-1249 PTS
CLNX-SMA-8010-5YR	HAWK8 5YR SW UPDATE 500-1249 PTS
CLNX-SMA-8025-1YR	HAWK8 1YR SW UPDATE 1250-4999 PTS
CLNX-SMA-8025-3YR	HAWK8 3YR SW UPDATE 1250-4999 PTS
CLNX-SMA-8025-5YR	HAWK8 5YR SW UPDATE 1250-4999 PTS
CLNX-SMA-8100-1YR	HAWK8 1YR SW UPDATE 5000-9999 PTS
CLNX-SMA-8100-3YR	HAWK8 3YR SW UPDATE 5000-9999 PTS
CLNX-SMA-8100-5YR	HAWK8 5YR SW UPDATE 5000-9999 PTS
CLNX-SMA-8200-1YR	HAWK8 1YR SW UPDATE 10000+ PTS
CLNX-SMA-8200-3YR	HAWK8 3YR SW UPDATE 10000+ PTS
CLNX-SMA-8200-5YR	HAWK8 5YR SW UPDATE 10000+ PTS

Table 9. Miscellaneous licenses

order no.	description
CLNX-JACE-8000-AX	HAWK8 ENABLER FOR NIAGARA AX
CLNX-DR-MFID	NX FIDELIO DRIVER
CLNX-DR-SMS-ALM	NX SMS DRIVER

DRIVERS

Included Drivers

- Niagara NX drivers
 - BACnet IP
 - BACnet MS/TP
 - FOX ("inter-station" communication, i.e. to a supervisor or other HAWK controllers)
 - KNX-IP
 - LON
 - M-Bus
 - Modbus, all types
 - oBIX
 - Open ADR
 - SNMP
- Centraline-specific drivers
 - Panel Bus
 - C-Bus
 - LON IO
 - Print-Out
 - IO Creation
 - Bacnet Util
 - Extensions
 - EnOcean

Optional Drivers

- Niagara NX drivers
 - SMS (see also Table 9 above)
 - Fidelio (see also Table 9 above)
- Centraline-specific drivers (under preparation)
 - Application Library
 - Energy Vision

DIMENSIONS AND MOUNTING

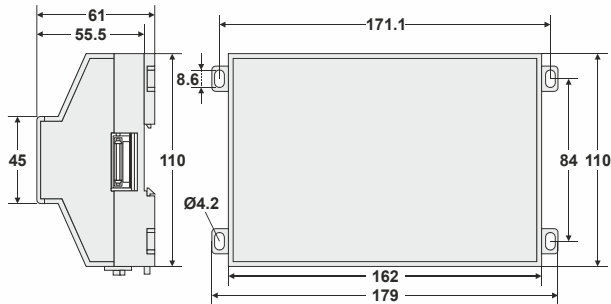


Fig. 3. HAWK 8000, dimensions (in mm)

NOTE: Allow at least 38 mm clearance around all sides and a minimum 76 mm at the bottom for the WiFi antenna.

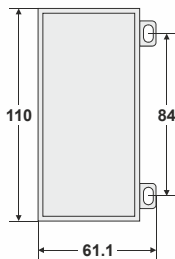


Fig. 4. Expansion Module, dimensions (in mm)

NOTE: Up to four Expansion Modules may be used (see also Table 1).

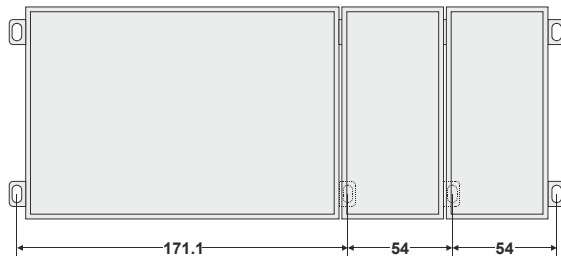


Fig. 5. Distances between centers of tabs (in mm)

SPECIFICATIONS

Environmental Specifications

Operating temperature:	-20 ... +60 °C
Storage temperature:	-40 ... +85 °C
Humidity:	5 ... 95%, non-condensing
Shipping and vibration:	ASTM D4169, Assurance Level II
Dimensions:	See Fig. 3 to Fig. 5.

APPROVALS, CERTIFICATIONS, ETC.

- UL 916, Energy Management Equipment – Edition 4
- CE: 2014/53/EU RED, 2011/65/EU RoHS
- FCC Part 15, Subpart B, Class B; Part 15, Subpart C
- C-UL listed to Canadian Standards Assoc. (CSA) C22.2 No. 205-M1983 "Signal Equipment"
- Ethernet: IEEE 802.3
- Purpose of the device is: multifunctional non-safety control intended for HVAC in home (residential, commercial, and light-industrial) environments

NOTE: Keep AC mains supply/load cables separate from signal wiring!

RELATED TECHNICAL LITERATURE

Table 10. Related Technical Literature

Title	Product Literature no.
HAWK 8000 – Installation & Comm. Instructions	EN1Z-1016GE51
HAWK 8000 – Product Data	EN0Z-1016GE51
HAWK 8000 – Mounting Instructions	MU1Z-1016GE51
HAWK 8000 – Installation & Startup Guide	EN1Z-1027GE51
HAWK 8000 – Backup & Restore Guide	EN2Z-1027GE51
HAWK 8000 – PICS	EN0Z-1028GE51
HAWK 8000 – Wi-Fi Guide	EN2Z-1029GE51
HON-NXEM-xxx Expansion Modules – M.I.	MU1Z-1031GE51

OVERVIEW OF FEATURES

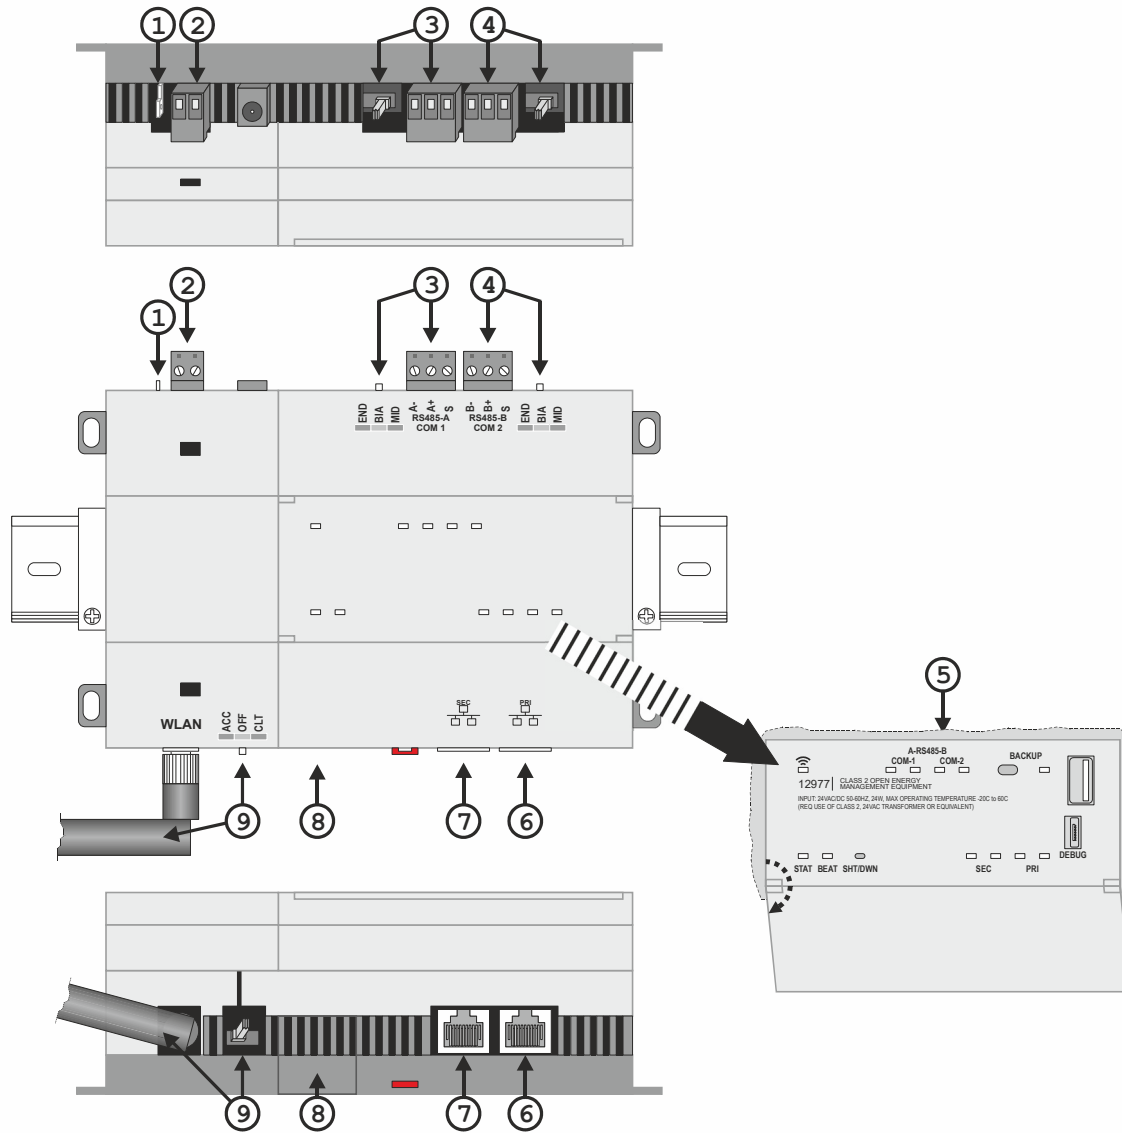


Fig. 6. HAWK 8000, overview of features

1	Earth ground	6	PRI (primary) LAN1, 10/100-Mbit Ethernet connection
2	Terminal block for 24 VAC/DC power supply	7	SEC (secondary) LAN2, 10/100-Mbit Ethernet connection
3	RS485-A port and bias / termination switch	8	Access shutter for microSD card (slide to open / close)
4	RS485-B port and bias / termination switch	9	Wi-Fi settings switch and Wi-Fi antenna
5	LEDs and (when door open) USB 2.0 and Micro-A USB		

Manufactured for and on behalf of the Environmental & Energy Solutions Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

Centraline
 Honeywell GmbH
 Böblinger Strasse 17
 71101 Schönaich, Germany
 Phone +49 (0) 7031 637 845
 Fax +49 (0) 7031 637 740
info@centraline.com
www.centraline.com

Subject to change without notice
 EN0Z-1016GE51 R1119

CENTRALINE
 by Honeywell