




Catalog consumabile laser pentru masini de taiat cu laser cu C02 si fiber

Distribuitor : SM TECH SRL / www.simblech.com / www.sm-tech.ro Tel: 0374-991480 / info @ sm-tech.ro

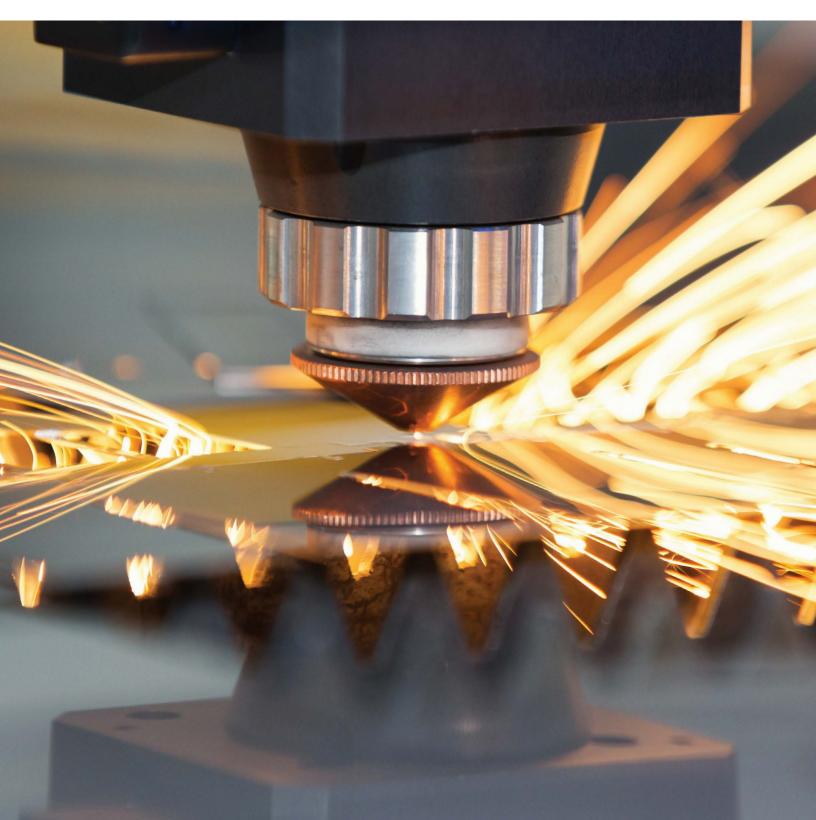

Centricut delivers

- OEM quality nozzles, ceramics and optics
- Technical and application support from our OEM-trained technicians
- 100% satisfaction guarantee

Contents

| Page | Replacement parts suitable for these product lines |
|--|--|
| 80–88, 90–93, 96 | Adige |
| 4 | Amada |
| 17 | Amada – optics |
| 20 | Bystronic |
| 29 | Bystronic – optics |
| 30 | Cincinnati |
| 31 | Cincinnati – optics |
| 80-83, 86-88, 96 | Durma |
| 80-83, 86-88 | Ermaksan |
| 80–88, 90, 92, 96 | Finn Power |
| 80-88, 96 | GHT |
| 32 | HK Laser & Systems |
| 35 | HK Laser & Systems – optics |
| 80, 82, 86–88, 96 | Hans |
| 94 | Koike |
| 36 | Laser Lab |
| 36 | Laser Lab – optics |
| 37 | LVD |
| 40 | LVD – optics |
| 41–65, 80, 82, 86–88, 91, 93, 96 | Mazak |
| 66 | Mazak – optics |
| 67 | Mitsubishi |
| 76 | Mitsubishi – optics |
| 77 | NTC – Beyeler |
| 79 | NTC – Beyeler – optics |
| 80 | Precitec |
| 97 | Precitec - optics |
| 98 | Prima Industrie |
| 106 | Prima Industrie – optics |
| 107–110, 80–83, 86–88, 90, 96 | Salvagnini |
| 111 | Salvagnini – optics |
| 80, 82, 86–88, 96 | SHT |
| 112 | Tanaka |
| 113 | Tanaka – optics |
| 114 | Trumpf |
| 130 | Trumpf – optics |

CO₂ and fiber laser nozzles

Nozzle options

All Centricut nozzles are engineered and manufactured to the highest standards. Select the OEM quality nozzle best suited for your application needs

Copper

Most commonly used nozzle offering good durability and nozzle life. Primary nozzle type for fiber lasers.

Chrome plated

Shiny, mirror-like finish provides increased spatter resistance, improved durability and longer life than copper nozzles. Not recommended for use on fiber lasers.


Look for CP in the part number to identify a chrome plated nozzle

Hard chrome plated

Premium nozzles offering the highest level of durability and longest nozzle life. These nozzles are not as shiny as chrome plated and have a dull appearance. Not recommended for use on fiber lasers.

Look for HCP in the part number to identify a hard chrome nozzle.

| CP (chrome plated) | Nozzles plated with chrome for increased durability. These nozzles are easier to clean, resist damage due to 'tip-ups' and have better spatter resistance over non-plated nozzles. For use in all laser cutting applications. |
|---|---|
| Conical | Conical internal geometry for high pressure, non-ferrous cutting applications using nitrogen, air or argon. |
| Cylindrical | Cylindrical internal geometry for low pressure, mild steel cutting applications using oxygen. |
| Double | Insert pressed into a standard cylindrical nozzle for improved edge quality, laminar gas flow and spatter resistance. Primarily used in mild steel applications. |
| HCP (hard chrome plated) | Enhanced durability chrome plated nozzles. These nozzles are easier to clean, resist damage due to 'tip-ups' and have better spatter resistance over non-plated nozzles. For use in all laser cutting applications. |
| HP (high pressure) HD (high density) | Conical style nozzle for high pressure, non-ferrous cutting applications using nitrogen, air or argon. |
| Inner | Also referred to as a 'nozzle insert'. Works in conjunction with an outer nozzle to create a double nozzle. Primarily used in mild steel applications. |
| Low pressure | Cylindrical style nozzle for low pressure, mild steel cutting applications using oxygen. |
| Outer | Works in conjunction with an inner nozzle to create a double nozzle. Primarily used in mild steel applications. |
| Shower | Nozzles with a center orifice surrounded by smaller jets. The smaller jets focus the assist gas into the kerf, creating improved edge quality and the ability to cut thicker material. Primarily used in mild steel applications. |

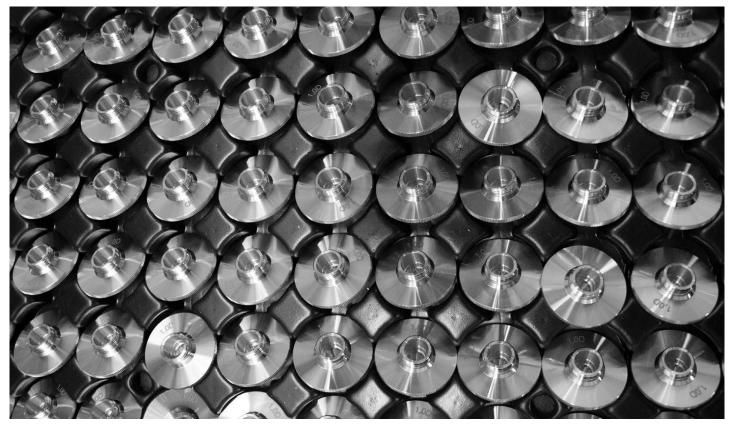

CO₂ and fiber laser optics

Optics key

| Lens | |
|------------|----------------------|
| MEN | Meniscus |
| PLX | Plano-convex |
| MTD | Mounted |
| Not MTD | Not mounted |
| PO | Plano |
| MP5 or ULA | Ultra low absorption |
| AR | Anti-reflection |
| ZNSE | Sinc-selinide |
| FS | Fused silica |
| DIA | Diameter |
| FL | Focal length |
| ET | Edge thickness |
| WD | Working distance |

How to handle optics

Follow these easy steps, when cleaning or changing your optic, to help maximize the life and performance of your lens

- Avoid touching coated surfaces of the lens and hold the optic by its sides
- Wear powder-free finger cots or latex gloves when handling
- Do not use any tools or sharp objects when handling the optic or when removing it from its packaging
- Ensure the work surface is clean and free of oils, grease and dirt
- Do not place the optic on hard surfaces as they scratch easily
- Once the optic has been unpacked, carefully place it on the lens tissue in which it was originally wrapped

Optics disposal

It is important to dispose of used laser optics at a licensed industrial waste facility which is in compliance with all local, state, and federal regulations. If you don't have access to a licensed industrial waste facility, and purchased your laser optics through Centricut, you may return them to Centricut for proper disposal. This service is only available to Centricut customers.

All optics returned to Centricut must:


- Include return authorization and invoice numbers
- Be sealed in a plastic bag to minimize any hazards
- Remove excess ZnSe powder prior to sealing

*Acceptance of goods will be refused if not packaged correctly or if the return authorization number isn't included





Amada®

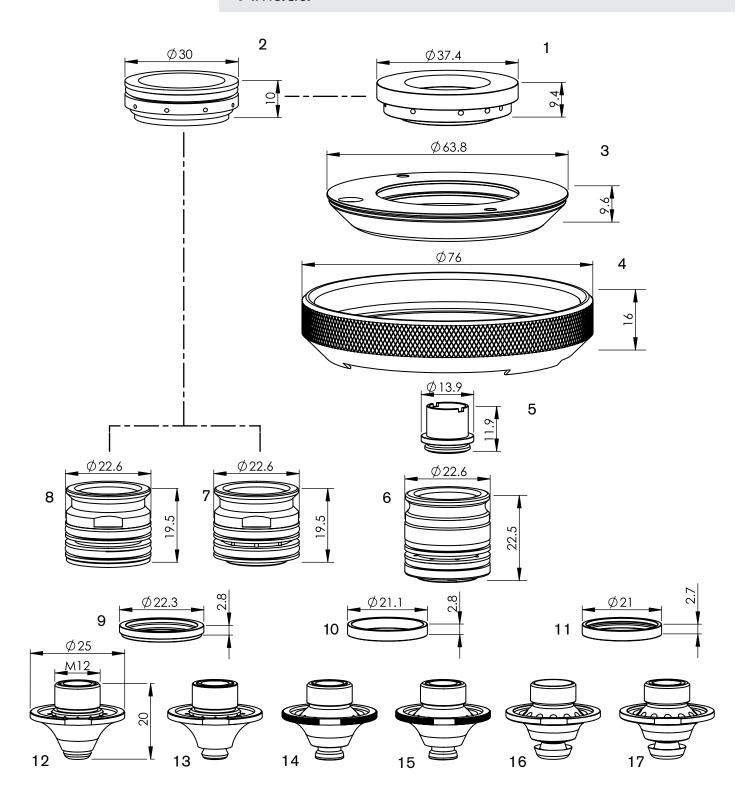



Replacement parts suitable for: $Amada^{\mathbb{R}}$


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|------------------------|-------------|------------------------------|--|-----|
| | part number | part number | number | Description | qty |
| 1 | AM367-2349 | AL372 | 7973497, 71712349 | AM-Holder, PTFE* | 1 |
| 2 | AM367-2026 | AL340 | 71502026 | AM-Holder, PTFE* | 1 |
| 3 | AM367-2342 NEW | AL456XH | 71712342 | AM-Cover kit | 1 |
| 4 | AM367-2341 NEW | AL455XH | 71712341 | AM-Nut kit | 1 |
| 5 | AM367-6438 | AL392 | 71716438, 71798350 | AM-Inner for adapter | 1 |
| | AM367-0397 (not shown) | AL397 | | AM-O-ring kit for adapter | 1 |
| 6 | AM367-0360 | AL360 | 71712350, 7973459 | AM-Nozzle adapter w/holes | 1 |
| U | AM367-0364 | AL360/AM | 71712350, 7973459 | AM-Nozzle adapter w/holes and inner | 1 |
| 7 | AM367-2036 | AL248 | 71502036 | AM-Nozzle adapter w/8 holes | 1 |
| 8 | AM367-3036 | AL348 | 71502036 | AM-Nozzle adapter w/12 holes | 1 |
| 9 | AM367-0853 | AL233 | | AM-O-ring , PTFE* | 1 |
| 10 | AM367-5853 | AL234 | 71515853 | AM-Ring, PTFE* | 1 |
| 11 | AM367-2340 | AL361 | 71712340 | AM-Ring w/groove, PTFE* | 1 |
| 10 | AM386-2025CP | L1155X | 71461026 | AM-Nozzle double WACS w/holes, 2.5 mm CP | 1 |
| 12 | AM386-2041CP | L1159X | 71502040 | AM-Nozzle double WACS w/holes, 4.0 mm CP | 1 |
| | AM367-1014CP | L1041X | 71461026 | AM-Nozzle double WACS w/holes, 1.4 mm CP | 1 |
| | AM367-1017CP | L1043X | 71461026 | AM-Nozzle double WACS w/holes, 1.7 mm CP | 1 |
| 40 | AM367-1020CP | L1044X | 71461026 | AM-Nozzle double WACS w/holes, 2.0 mm CP | 1 |
| 13 | AM367-2039 | L1045X | 71502039 | AM-Nozzle double WACS w/holes, 2.5 mm CP | 1 |
| | AM367-2040 | L1049X | 71502040 | AM-Nozzle double WACS w/holes, 4.0 mm CP | 1 |
| | AM367-2050CP | L1050X | | AM-Nozzle double WACS w/holes, 5.0 mm CP | 1 |
| 14 | AM367-2336 | L1568X | 71712336, 71461158 | AM-Nozzle WACS, S1.2 mm CP | 1 |
| | AM367-1352CP | L1352X | 1576260 | AM-Nozzle double WACS, D1.4 mm CP | 1 |
| | AM367-1160CP | L1352X/TG | | AM-Nozzle double WACS w/Collar, D1.4 mm CP | 1 |
| | AM367-1353CP | L1353X | | AM-Nozzle double WACS, D1.7 mm CP | 1 |
| | AM367-1162CP | L1353X/TG | | AM-Nozzle double WACS w/Collar, D1.7 mm CP | 1 |
| | AM367-1354CP | L1354X | | AM-Nozzle double WACS, D2.0 mm CP | 1 |
| | AM367-1164CP | L1354X/TG | | AM-Nozzle double WACS w/Collar, D2.0 mm CP | 1 |
| 15 | AM367-1355CP | L1355X | 71712335 | AM-Nozzle double WACS, D2.5 mm CP | 1 |
| | AM367-1156CP | L1355X/TG | 71712335 | AM-Nozzle double WACS w/Collar, D2.5 mm CP | 1 |
| | AM367-1158CP | L1359X | 71712336, 71461158, 1576402D | AM-Nozzle double WACS, D4.0 mm CP | 1 |
| | AM367-1157CP | L1359X/TG | | AM-Nozzle double WACS w/Collar, D4.0 mm CP | 1 |
| | AM367-1159CP | L1360X | 71502057 | AM-Nozzle double WACS, D5.0 mm CP | 1 |
| | AM367-1165CP | L1360X/TG | 11002001 | AM-Nozzle double WACG, Bold min of AM-Nozzle double WACG w/Collar, D5.0 mm CP | 1 |
| | AM367-0019 | L1653XH | | AM-Nozzle fiber, S0.8 mm Fe HCP | 1 |
| | AM367-0019C | L1653XH/TG | | AM-Nozzle w/collar fiber, S0.8 mm Fe HCP | 1 |
| | AM367-0030 | L1654XH | 71570030 | AM-Nozzle Wiednar inder, Solo inim reindr | 1 |
| | | L1654XH/TG | 71570030 | , | 1 |
| | AM367-0030C | | | AM-Nozzle w/collar fiber, S1.0 mm Fe HCP | 1 |
| 10 | AM367-0023 | L1655XH | 71570023 | AM-Nozzle fiber, S1.2 mm Fe HCP | |
| 16 | AM367-0023C | L1655XH/TG | 71570023 | AM-Nozzle w/collar fiber, S1.2 mm Fe HCP | |
| | AM367-0024 | L1656XH | | AM-Nozzle fiber, S1.4 mm Fe HCP | |
| | AM367-0024C | L1656XH/TG | | AM-Nozzle w/collar fiber, S1.4 mm Fe HCP | 1 |
| | AM367-0027 | L1657XH | | AM-Nozzle fiber, S1.7 mm Fe HCP | 1 |
| | AM367-0026 | L1658XH | | AM-Nozzle fiber, S2.0 mm Fe HCP | 1 |
| | AM367-0026C | L1658XH/TG | | AM-Nozzle w/collar fiber, S2.0 mm Fe HCP | 1 |
| 17 | AM367-1900CP | L1900XH | | AM-Nozzle double fiber, D1.2 mm Fe HCP | 1 |
| | AM367-1901CP | L1901XH | | AM-Nozzle double fiber, D1.5 mm Fe HCP | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Amada®

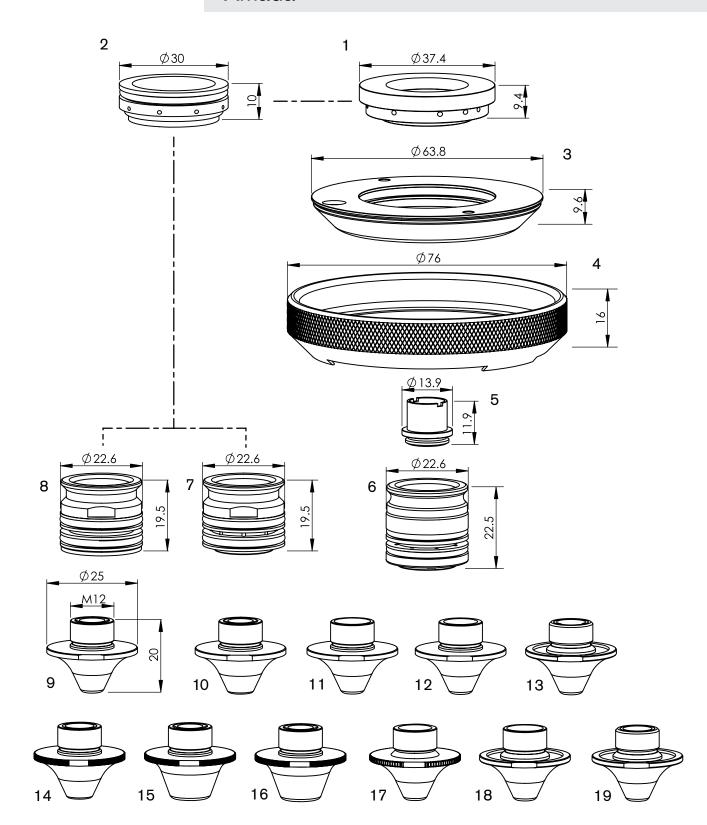



Replacement parts suitable for: $Amada^{\mathbb{R}}$


Consumables


| | Centricut | Esse A | Reference | | Pkg |
|-----|------------------------|-------------|------------------------------|---|-----|
| | part number | part number | number | Description | qty |
| 1 | AM367-2349 | AL372 | 7973497, 71712349 | AM-Holder, PTFE* | 1 |
| 2 | AM367-2026 | AL340 | 71502026 | AM-Holder, PTFE* | 1 |
| 3 | AM367-2342 NEW | AL456XH | 71712342 | AM-Cover kit | 1 |
| 4 | AM367-2341 NEW | AL455XH | 71712341 | AM-Nut kit | 1 |
| 5 | AM367-6438 | AL392 | 71716438, 71798350 | AM-Inner for adapter | 1 |
| | AM367-0397 (not shown) | AL397 | | AM-O-ring kit for adapter | 1 |
| 6 | AM367-0360 | AL360 | 71712350, 7973459 | AM-Nozzle adapter w/holes | 1 |
| | AM367-0364 | AL360/AM | 71712350, 7973459 | AM-Nozzle adapter w/holes and inner | 1 |
| 7 | AM367-2036 | AL248 | 71502036 | AM-Nozzle adapter w/8 holes | 1 |
| 8 | AM367-3036 | AL348 | 71502036 | AM-Nozzle adapter w/12 holes | 1 |
| | AM367-8550 | L1401X | 71518550, 71461029, 71502038 | AM-Nozzle double eco cut, D1.4 mm CP | 1 |
| 9 | AM367-6789 | L1403X | 71516789, 71501059 | AM-Nozzle double eco cut, D2.5 mm CP | 1 |
| 9 | AM367-6795 | L1404X | | AM-Nozzle double eco cut, D3.0 mm CP | 1 |
| | AM367-6790 | L1405X | 71516790, 71501060 | AM-Nozzle double eco cut, D4.0 mm CP | 1 |
| 10 | AM367-6791CP | L1406X | 71501093 | AM-Nozzle double, D4.0 mm AL CP | 1 |
| 11 | AM367-1407CP | L1407X | 71502037, 71566686 | AM-Nozzle eco cut, S1.2 mm CP | 1 |
| | AM367-1410CP | L1410X | | AM-Nozzle eco cut, S1.4 mm CP | 1 |
| 4.0 | AM367-1411CP | L1411X | 71501056, 71712720 | AM-Nozzle eco cut, S1.5 mm CP | 1 |
| 12 | AM367-1412CP | L1412X | 71501057, 71555124 | AM-Nozzle eco cut, S2.0 mm CP | 1 |
| | AM367-1413CP | L1413X | 71516788, 71501058 | AM-Nozzle eco cut, S3.0 mm CP | 1 |
| | AM367-1161CP | L1644XH | | AM-Nozzle double, D1.5 mm CP | 1 |
| 13 | AM367-1163CP | L1645XH | 71570022 | AM-Nozzle double, D2.0 mm CP | 1 |
| | AM367-1727CP | L1415XH | | AM-Nozzle double clean cut, D2.5 mm HCP | 1 |
| 14 | AM367-1728 | L1416XH | 71341728, 71555121 | AM-Nozzle double clean cut, D4.0 mm HCP | 1 |
| | AM367-1717CP | L1417XH | | AM-Nozzle double clean cut, D5.0 mm HCP | 1 |
| | AM367-1718CP | L1418XH | | AM-Nozzle double clean cut, D6.0 mm HCP | 1 |
| 15 | AM367-1729CP | L1419XH | 71341729, 71712721 | AM-Nozzle double clean cut, D7.0 mm HCP | 1 |
| | AM367-1092CP | L1425X | 71501092 | AM-Nozzle double clean cut, 7.0 mm AL CP | 1 |
| 16 | AM367-1770CP | L1420X | 71712692 | AM-Nozzle double silky cut, 7.0 mm CP | 1 |
| | AM367-1421CP | L1421XH | | AM-Nozzle clean cut, S1.5 mm HCP | 1 |
| | AM367-1422CP | L1422XH | 71502043 | AM-Nozzle clean cut, S2.0 mm HCP | 1 |
| 17 | AM367-1423CP | L1423XH | 71502044 | AM-Nozzle clean cut, S3.0 mm HCP | 1 |
| | AM367-1424CP | L1424XH | 11002011 | AM-Nozzle clean cut, S2.5 mm HCP | 1 |
| | AM367-1560 | L1560X | | AM-Nozzle, SO.8 mm Fe CP | 1 |
| | AM367-1561 | L1561X | 71570021, S1.0FE | AM-Nozzle, S1.0 mm Fe CP | 1 |
| 18 | AM367-1562 | L1562X | 71570020, S1.2FE | AM-Nozzle, S1.2 mm Fe CP | 1 |
| | AM367-1563 | L1563X | 11010020, 01.21 L | AM-Nozzle, S1.4 mm Fe CP | 1 |
| | AM367-0020 | L1645X | 71570022 | AM-Nozzle, S1.4 mm Fe CF AM-Nozzle double, D2.0 mm Fe CP | 1 |
| 19 | AM367-0025 | L1645X | 11010022 | AM-Nozzle double, D2.5 mm Fe CP | 1 |
| 19 | | | | | |
| | AM367-0040 NEW | L1649X | | AM-Nozzle double, D4.0 mm Fe CP | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Amada®

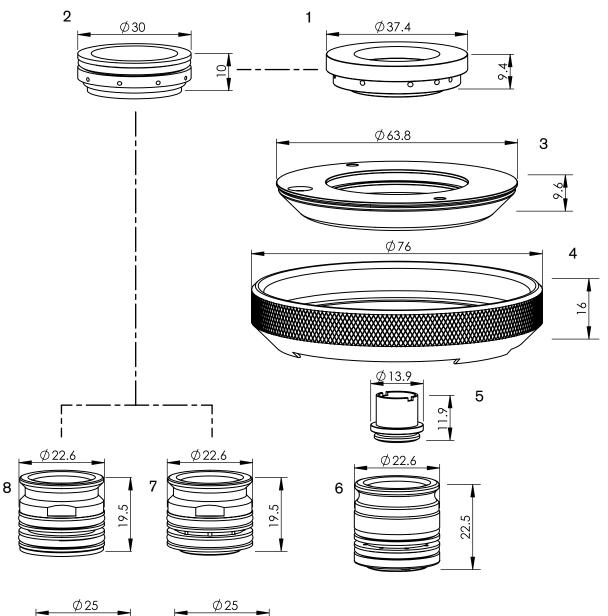





Replacement parts suitable for: Amada[®]


Consumables


| | Centricut | Esse A | Reference | | Pkg |
|----|------------------------|-------------|--|---|-----|
| | part number | part number | number | Description | qty |
| 1 | AM367-2349 | AL372 | 7973497, 71712349 | AM-Holder, PTFE* | 1 |
| 2 | AM367-2026 | AL340 | 71502026 | AM-Holder, PTFE* | 1 |
| 3 | AM367-2342 NEW | AL456XH | 71712342 | AM-Cover kit | 1 |
| 4 | AM367-2341 NEW | AL455XH | 71712341 | AM-Nut kit | 1 |
| 5 | AM367-6438 | AL392 | 71716438, 71798350 | AM-Inner for adapter | 1 |
| | AM367-0397 (not shown) | AL397 | | AM-O-ring kit for adapter | 1 |
| 6 | AM367-0360 | AL360 | 71712350, 7973459 | AM-Nozzle adapter w/holes | 1 |
| | AM367-0364 | AL360/AM | 71712350, 7973459 | AM-Nozzle adapter w/holes and inner | 1 |
| 7 | AM367-2036 | AL248 | 71502036 | AM-Nozzle adapter w/8 holes | 1 |
| 8 | AM367-3036 | AL348 | 71502036 | AM-Nozzle adapter w/12 holes | 1 |
| | AM343-2340CPS | L565X | | AM-Nozzle double short, 4.0 mm CP | 1 |
| 9 | AM343-2350CPS | L567X | | AM-Nozzle double short, 5.0 mm CP | 1 |
| | AM343-2360CPS | L568X | | AM-Nozzle double short, 6.0 mm CP | 1 |
| | AM343-2361-1.2 | L585X | 1572361 | AM-Nozzle double, 1.2 mm CP | 1 |
| | AM343-9813 | L586X | 71369813, 71502038, 71341779, 71518550 | AM-Nozzle double, 1.4 mm CP | 1 |
| | AM343-2361-1.7 | L574X | 1572361, 71518548, 1572380 | AM-Nozzle double, 1.7 mm CP | 1 |
| | AM343-2361-2.0 | L587X | 1572361 | AM-Nozzle double, 2.0 mm CP | 1 |
| 10 | AM343-2361-2.5 | L584X | 71501059, 71515394, 71516789, 1576398 | AM-Nozzle double, 2.5 mm CP | 1 |
| | AM343-2361-3 | L588X | 1572361 | AM-Nozzle double, 3.0 mm CP | 1 |
| | AM343-9817 | L589X | 71501060, 71515395, 1576399 | AM-Nozzle double, 4.0 mm CP | 1 |
| | AM367-1037 | L1037X | | AM-Nozzle double, 4.0 mm /inner 2.0 mm CP | 1 |
| | AM343-2350CP | L583X | 1572361 | AM-Nozzle double, 5.0 mm CP | 1 |
| | AM343-0569 | L569X | | AM-Nozzle double, 6.0 mm CP | 1 |
| | AM343-2362-0.8 | L590X | 1572362, 71563584 | AM-Nozzle, 0.8 mm CP | 1 |
| | AM343-2362-1.0 | L591X | 1572367A, 71563585 | AM-Nozzle, 1.0 mm CP | 1 |
| | AM343-2362-1.2 | L592X | 71369812, 71461028, 71341778 | AM-Nozzle, 1.2 mm CP | 1 |
| | AM343-2362-1.4 | L593X | 1572362 | AM-Nozzle, 1.4 mm CP | 1 |
| | AM343-2362-1.5 | L597X | 1572362, 1572368B | AM-Nozzle, 1.5 mm CP | 1 |
| 11 | AM343-9812CPX | L30592X | | AM-Nozzle, 1.2 mm CP (10 pk) | 10 |
| | AM343-2317CP | L575X | 1572362 | AM-Nozzle, 1.7 mm CP | 1 |
| | AM343-2362-2.0 | L594X | 71515392, 71369815 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM343-0025CP | L572X | | AM-Nozzle, 2.5 mm CP | 1 |
| | AM343-2362-3.0 | L595X | 71515393, 1576112 | AM-Nozzle, 3.0 mm CP | 1 |
| | AM343-2362-4.0 | L596X | 1572362 | AM-Nozzle, 4.0 mm CP | 1 |
| | AM343-0004CP | L1027X | | AM-Nozzle straight taper, 0.8 mm CP | 1 |
| | AM343-0005CP | L1028X | | AM-Nozzle straight taper, 1.0 mm CP | 1 |
| | AM343-0006CP | L1029X | | AM-Nozzle straight taper, 1.2 mm CP | 1 |
| | AM343-0007CP | L1030X | | AM-Nozzle straight taper, 1.4 mm CP | 1 |
| 12 | AM343-0001CP | L599X | | AM-Nozzle straight taper, 1.5 mm CP | 1 |
| | AM343-0002CP | L598X | | AM-Nozzle straight taper, 2.0 mm CP | 1 |
| | AM343-0002CPX | L30598X | | AM-Nozzle, 2.0 mm (10 pk) | 10 |
| | AM343-0009CP | L1033X | | AM-Nozzle straight taper, 2.3 mm CP | 1 |
| | AM343-0003CP | L571X | | AM-Nozzle straight taper, 3.0 mm CP | 1 |
| 13 | AM367-2037 | L1026X | 71502037 | AM-Nozzle w/concave, 1.2 mm CP | 1 |
| | AM367-2038 | L1031X | 71502038 | AM-Nozzle double w/concave, 1.4 mm CP | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Amada®

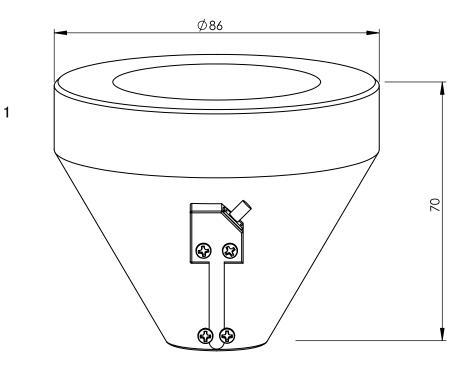

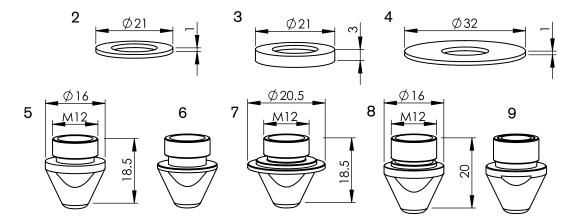



Replacement parts suitable for: $Amada^{\texttt{R}}$


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|--------------------------------------|--|------------|
| 1 | AM343-0091 | | 71360091 | AM-Sensor cone, HS95 mini | чу 1 |
| - | AM325-325-1 | AL1005 | 71341614 | AM-Head protection disc, 21 mm plastic | 1 |
| 2 | AM325-1614 | AL1003 | 71341614, 71369818 | AM-Head protection disc, 21 mm plastic | 1 |
| 3 | AM325-325-2 | AL122 | 71341614 | AM-Head protection disc, 21 mm vespen | 1 |
| - | AM325-9819 | AL42 | 71639819 | AM-Head protection disc, 22 mm | 1 |
| - | AM325-545U-1.0 | L134X | 1664545U | AM-Nozzle, 1.0 mm CP | 1 |
| | AM325-0010CPX | L30134X | 1664545U | AM-Nozzle, 1.0 mm CP (10 pk) | 10 |
| | AM325-545U-1.25 | L135X | 1664545U | AM-Nozzle, 1.25 mm CP | 1 |
| | AM325-0125CPX | L30135X | 1664545U | AM-Nozzle, 1.25 mm CP (10 pk) | 10 |
| | AM325-545U-1.5 | L86X | 1664545U, 71341619, M90115 | AM-Nozzle, 1.5 mm CP | 1 |
| | AM325-0015CPX | L3086X | 1664545U | AM-Nozzle, 1.5 mm CP (10 pk) | 10 |
| | AM325-545U-1.75 | L136X | 1664545U | AM-Nozzle, 1.75 mm CP | 1 |
| 5 | AM325-0175CPX | L30136X | 1664545U | AM-Nozzle, 1.75 mm CP (10 pk) | 10 |
| | AM325-545U-2.0 | L137X | 1664545U, 71341610, M90114 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM325-0020CPX | L30137X | 1664545U, 71341610 | AM-Nozzle, 2.0 mm CP (10 pk) | 10 |
| | AM325-545U-2.5 | L203X | 1664545U | AM-Nozzle, 2.5 mm CP | 1 |
| | AM325-0025CPX | L30203X | 1664545U | AM-Nozzle, 2.5 mm CP (10 pk) | 10 |
| | AM325-4544UX | L30138X | 1664545U, 71360142 | AM-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| | AM325-0400CPX | L30339X | | AM-Nozzle, 4.0 mm CP (10 pk)* | 10 |
| | AM325-0050CPX | L30763X | | AM-Nozzle, 5.0 mm CP (10 pk)* | 10 |
| | AM325-0002CPX | L30193X | | AM-Nozzle, 1.25 mm CP (10 pk)* | 10 |
| | AM325-0003CPX | L30194X | | AM-Nozzle, 1.5 mm CP (10 pk)* | 10 |
| 6 | AM325-0005CPX | L30196X | | AM-Nozzle, 2.0 mm CP (10 pk)* | 10 |
| | AM325-0006CPX | L30197X | | AM-Nozzle, 2.5 mm CP (10 pk)* | 10 |
| | AM325-0007CPX | L30198X | | AM-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| | AM325-1500CP | L1067X | | AM-Nozzle large flange, 1.5 mm CP | 1 |
| 7 | AM325-2000CP | L1066X | | AM-Nozzle large flange, 2.0 mm CP | 1 |
| | AM325-3000CP | L1068X | | AM-Nozzle large flange, 3.0 mm CP | 1 |
| 0 | AM325-1770 | L1285X | 71341770, 1667110 | AM-Nozzle, 2.0 mm CP | 1 |
| 8 | AM325-1730 | L1287X | | AM-Nozzle, 3.0 mm CP | 1 |
| | AM326-9864-1.0 | L390X | 1669864, 7134162 | AM-Nozzle double, 1.0 mm CP | 1 |
| | AM326-9864-1.2 | L392X | 1669864, 7134162 | AM-Nozzle double, 1.2 mm CP | 1 |
| | AM326-9864-1.4 | L393X | 1669864, 7134162 | AM-Nozzle double, 1.4 mm CP | 1 |
| | AM326-9864-1.5 | L391X | 1669864, 7134162 | AM-Nozzle double, 1.5 mm CP | 1 |
| 9 | AM326-9864-2.0 | L315X | 1669864, 7134162 | AM-Nozzle double, 2.0 mm CP | 1 |
| | AM326-9864-2.5 | L316X | 1669864, 7134162, 41341680, 71341772 | AM-Nozzle double, 2.5 mm CP | 1 |
| | AM326-9864-3.0 | L317X | 1669864, 7134163 | AM-Nozzle double, 3.0 mm CP | 1 |
| | AM326-4135CP | L768X | 1669864, 7134162 | AM-Nozzle double, 3.5 mm CP | 1 |
| | AM326-9864-4.0 | L318X | 1669795, 71341681 | AM-Nozzle double, 4.0 mm CP | 1 |

* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Amada®

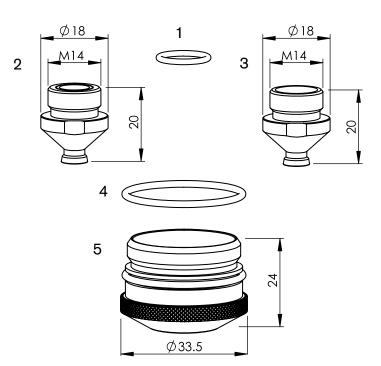


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|------------------------------|-------------------------------------|------------|
| 1 | AM326-S-14 | AL93 | S-14 | AM-O-ring for nozzle (10 pcs) | 10 |
| | AM326-1210CP | L387X | 6551218, 71341682 | AM-Nozzle double, 1.0 mm CP | 1 |
| | AM326-1214CP | L389X | 6551218, 71341682 | AM-Nozzle double, 1.4 mm CP | 1 |
| | AM326-1218-2.0 | L320X | 6551218, 71341682 | AM-Nozzle double, 2.0 mm CP | 1 |
| 2 | AM326-1218-2.5 | L321X | 6551218, 71341682, 71341680 | AM-Nozzle double, 2.5 mm CP | 1 |
| | AM326-1218-3.0 | L322X | 6551218, 71341682 | AM-Nozzle double, 3.0 mm CP | 1 |
| | AM326-1218-3.8 | L323X | 6551218, 71341682 | AM-Nozzle double, 3.8 mm CP | 1 |
| | AM326-4140CP | L330X | 6551218, 71341682 | AM-Nozzle double, 4.0 mm CP | 1 |
| 3 | AM326-6025CP | L325X | 71366090 | AM-Nozzle, 2.5 mm CP | 1 |
| 3 | AM326-6030CP | L326X | 71366090 | AM-Nozzle, 3.0 mm CP | 1 |
| 4 | AM326-6453 | AL94 | 71366453 | AM-O-ring for outer nozzle (10 pcs) | 10 |
| 5 | AM326-6452 | AL115X | 71366452, 71341684, 6551148A | AM-Nozzle outer, CP | 1 |



Replacement parts suitable for: $Amada^{\mathbb{R}}$

1 \langle Ø40 Ø25.9 Ø25.9 Ø25.9 З 4 5 2 13/16-16 13/16-16 13/16-16 13/16-16 32.5 32.5 32.3 Ø40 6

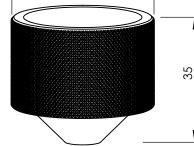



32.3


Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|--------------------------------|------------|
| 1 | AM308-S-20 | AL90 | S-20 | AM-O-ring (10 pk) | 10 |
| 2 | AM425-1999 | L898X | 71101999 | AM-Nozzle clean cut, 2.0 mm CP | 1 |
| | AM324-6815CP | L92X | 6506892 | AM-Nozzle, 1.5 mm CP | 1 |
| 3 | AM324-0092CP | L93X | 6506892 | AM-Nozzle, 1.8 mm CP | 1 |
| | AM324-6892-2.0 | L39X | 74712001, 6506892 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM308-1913CP | L63X | 71101901 | AM-Nozzle, 1.3 mm CP | 1 |
| | AM308-1902 | L91X | 71101902 | AM-Nozzle, 1.5 mm CP | 1 |
| 4 | AM308-1918CP | L75X | 71101901 | AM-Nozzle, 1.8 mm CP | 1 |
| | AM308-1901-2.0 | L29X | 71101901, 845735 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM308-1925CP | L809X | | AM-Nozzle, 2.5 mm CP | 1 |
| | AM308-2013CP | L297X | | AM-Nozzle, 1.3 mm CP | 1 |
| 5 | AM308-2015CP | L298X | 62094001, 71102001 | AM-Nozzle, 1.5 mm CP | 1 |
| | AM308-2030CP | L301X | 62094002, 71102005 | AM-Nozzle, 3.0 mm CP | 1 |
| 6 | AM308-1905 | L30X | 71101905, 841143B | AM-Nozzle outer, CP | 1 |




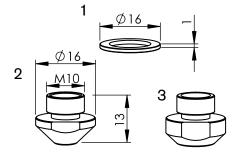



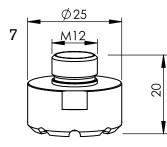

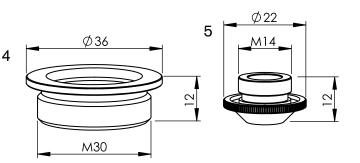

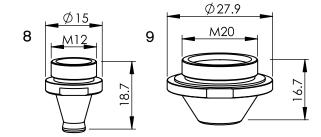

Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|----------------|-------------|------------------------|--------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | AM325-4006-R | AL107 | 62094006 | AM-Head protection disc, 16 mm | 1 |
| | AM325-4006-1.3 | L172X | 62094006 | AM-Nozzle, 1.25 mm CP | 1 |
| | AM325-4125CPX | L30172X | 62094006 | AM-Nozzle, 1.25 mm CP (10 pk) | 10 |
| 2 | AM325-4006-1.5 | L173X | 62094006, 1507610 | AM-Nozzle, 1.5 mm CP | 1 |
| | AM325-4015CPX | L30173X | 62094006, 1507610 | AM-Nozzle, 1.5 mm CP (10 pk) | 10 |
| | AM325-4175CPX | L30174X | 62094006 | AM-Nozzle, 1.75 mm CP (10 pk)* | 10 |
| 2 | AM325-4006-2.0 | L27X | 62094006, 1507611 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM325-4020CPX | L3027X | 62094006, 1507611 | AM-Nozzle, 2.0 mm CP (10 pk) | 10 |
| | AM325-4025CPX | L30175X | 62094006 | AM-Nozzle, 2.5 mm CP (10 pk)* | 10 |
| | AM325-4006-3.0 | L28X | 62094008, 71102007 | AM-Nozzle, 3.0 mm CP | 1 |
| | AM325-4030CPX | L3028X | 62094008, 71102007 | AM-Nozzle, 3.0 mm CP (10 pk) | 10 |
| | AM325-1090CPX | L30750X | 62094005 | AM-Nozzle, 1.0 mm CP (10 pk)* | 10 |
| | AM325-4005-1.5 | L752X | 62094005, 71341515 | AM-Nozzle, 1.5 mm CP | 1 |
| 3 | AM325-4005-2.0 | L754X | 62094005, 71102006 | AM-Nozzle, 2.0 mm CP | 1 |
| | AM325-1520CPX | L30754X | 62094005, 71102006 | AM-Nozzle, 2.0 mm CP (10 pk) | 10 |
| | AM325-1530CPX | L30756X | 62094005, 71341515-3.0 | AM-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| 4 | AM325-0387 | AL387 | | AM-Spacer, 36x12 ceramic | 1 |
| 5 | AM308-8815CP | L95X | | AM-Nozzle, 1.5 mm CP | 1 |
| J | AM308-8820CP | L38X | 74718816, 8249301 | AM-Nozzle, 2.0 mm CP | 1 |
| 6 | AM367-3028 | AL403 | | AM-Collar, PTFE** | 1 |
| 7 | AM367-1333 | L1333 | | AM-Nozzle, 2.0 mm | 1 |
| | AM369-0002 | L927X | | AM-Nozzle HP-X, 1.0 mm CP | 1 |
| | AM369-0004 | L929X | | AM-Nozzle HP-X, 1.5 mm CP | 1 |
| 8 | AM369-0005 | L930X | | AM-Nozzle HP-X, 2.0 mm CP | 1 |
| | AM369-0006 | L931X | | AM-Nozzle HP-X, 2.5 mm CP | 1 |
| | AM369-0007 | L932X | 71362733 | AM-Nozzle HP-X, 3.0 mm CP | 1 |
| 9 | AM369-0008 | AL220X | | AM-Nozzle outer, HP-X CP | 1 |

* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)
** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.




Amada®








Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---|------------------------------------|------------|
| 1 | MB334-0001 | AL267 | P0594-860-00001 | MB-Nozzle holder | 1 |
| _ | MB316-269S | AL238 | 71800027, BQ933D221H04, P0593-860-00001 | MB-Shield cap, short | 1 |
| Z | MB316-269SCP | AL238X | | MB-Shield cap, short CP | 1 |
| 3 | MB316-0440 | AL266 | BQ933D044H01, 71800101, W18Q93304401 | MB-Nozzle outer, high speed pierce | 1 |





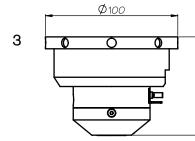

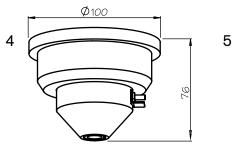



Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------|------------|
| | New Sensor Cones | | | | |
| 1 | AM343-0091 | | 71360091 | AM-Sensor cone, HS95 mini | 1 |
| 2 | AM343-1621 | | 71341621 | AM-Sensor cone, HS95 | 1 |
| 3 | AM343-9107 | | | AM-Sensor cone, ECO | 1 |
| 4 | AM343-1690 | | 71341690 | AM-Sensor cone, HS98 | 1 |
| 5 | AM343-L3015C NEW | | P0380-140-0002 | AM-Sensor cone, LC3015 | 1 |


*Repair is available in N. America for many sensor cones

Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.

75.2



Replacement parts suitable for: **Amada**[®]

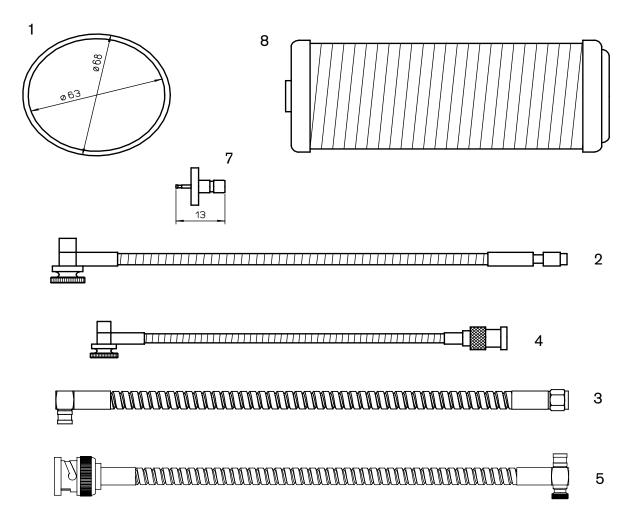

Consumables

| Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|--------------------------|-----------------------|---------------------|---|------------|
| 1 AM313-0004 | AL56 | | AM-Gasket, sensor head, PTFE* | 1 |
| 2 AM313-1901 | AL200 | 71341630 | AM-Sensor cable, 305 mm (12") | 1 |
| 3 AM313-1901A | | 71341630 | AM-Sensor cable HS-5, 305 mm (12") premium, armored | 1 |
| 4 AM308-8965 | AL260 | 71398965 | AM-Sensor cable, 305 mm (12") | 1 |
| 5 AM308-8965A | | | AM-Sensor cable, 305 mm (12") premium, armored | 1 |
| 6 AM313-9851A | | 71369851 | AM-Sensor cable, 230 mm (8") premium | 1 |
| 7 AM308-0001 | AL263 | | AM-Sensor cable connector | 1 |
| 8 AM313-2023 | | 71232023 | AM-Vacuum pump filter | 1 |
| AM313-1526 (no | t shown) | 71341526 | AM-Sensor cable ZS6, 530 mm | 1 |
| AM313-8292 (no | t shown) | 71398292 | AM-Sensor cable dual shield, 7 meters | 1 |


*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.


Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.


6



Replacement parts suitable for: $Amada^{\texttt{R}}$

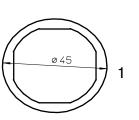



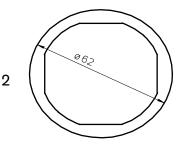


Optics

| | | | Reference number | Description | Pkg qty |
|---|----------------------------------|--------|---------------------|-------------------------------------|------------|
| | Centricut lens housings and asse | mblies | | | |
| 1 | AM313-0005 | AL52 | 71360261, 74721907 | AM-Gasket, 1.5" lens housing, PTFE* | 1 |
| 2 | AM313-9513 | AL149 | 71361393 | AM-Gasket 2.0" lens housing, PTFE* | 1 |
| 3 | AM313-1071 | AL249 | 71501071 | AM-Gasket | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Amada®

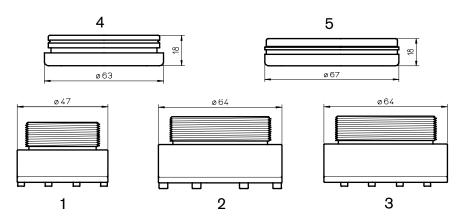

Optics

|) | | | | | |
|---------------------------|--|--|--|---|---|
| Centricut | Reference | | | Focal | Edge |
| part number | number | Туре | Diameter | length | thickness |
| Mounted lenses | | | | | |
| AM313-0306 | 81140306 | PLX | 1.5" | 5.00" | .300" |
| AM313-0400 | 81140400 | PLX | 1.5" | 7.50" | .300" |
| AM313-9830 | 71369830 | PLX | 1.5" | 5.00" | .300" |
| AM313-9831 | 71369831 | PLX | 1.5" | 7.50" | .300" |
| AM313-0307 | 81140307 | PLX | 2.0" | 5.00" | .380" |
| AM313-0186 | 81140186 | PLX | 2.0" | 7.50" | .380" |
| AM313-8662 | 578662 | PLX | 1.5" | 5.00" | .300" |
| AM313-1215 | 71501070 | PLX | 1.5" | 7.50" | .300" |
| AM313-3110 | | PLX | 1.5" | 7.50" | .300" |
| AM313-50F1 | 71710059 | PLX | 2.0" | 5.00" | .380" |
| AM313-75F1 | 71710030 | PLX | 2.0" | 7.50" | .380" |
| AM313-10F1 | | PLX | 2.0" | 10.00" | .380" |
| AM313-0221 (not shown) | 81140221 | PLX | 1.5" | 3.75" | .300" |
| | | PLX | 2.0" | 7.50" | .380" |
| , , , | | | | 1 | |
| • | | PLX | 15" | 5 00" | .300" |
| | | | | | .300" |
| AM313-9830MP5 | | | | | .300" |
| AM313-9831MP5 | 71369831 | PLX | 1.5" | 7.50" | .300" |
| AM313-0307MP5 | 81140307 | PLX | 2.0" | 5.00" | .380" |
| AM313-0186MP5 | 81140186 | PLX | 2.0" | 7.50" | .380" |
| AM313-1216MP5 | 901216A | PLX | 1.5" | 5.00" | .300" |
| AM313-1215MP5 | 901215A | PLX | 1.5" | 7.50" | .300" |
| Non-mounted lenses | | | | | |
| AM313-0305 | 81140305 | PLX | 1.1" | 5.00" | .160" |
| AM313-6602 | 726602 | PLX | 1.1" | 7.50" | .160" |
| AM313-0306NM | 81140306 | PLX | 1.5" | 5.00" | .300" |
| AM313-1072 | 71501072 | PLX | 1.5" | 5.00" | .300" |
| AM313-0400NM | 81140400 | PLX | 1.5" | 7.50" | .300" |
| AM313-1019NM | 306068 | PLX | 1.5" | 7.50" | .300" |
| AM313-7070 | 71501070 | PLX | 1.5" | 7.50" | .300" |
| AM313-0307NM | 81140307 | PLX | 2.0" | 5.00" | .380" |
| AM313-0186NM | 81140186 | PLX | 2.0" | 7.50" | .380" |
| AM313-0186NM | 81140186 | PLX | 2.0" | 7.50" | .380" |
| Low absorption - non-mour | ited lenses | | | | |
| AM313-0306NMP5 | | PLX | 1.5" | 5.00" | .300" |
| AM313-0400NMP5 | 81140400 | PLX | 1.5" | 7.50" | .300" |
| AM313-1072NMP5 | | | - | | .300" |
| | | | | | .300" |
| AM313-0307NMP5 | 81140307 | PLX | 2.0" | 5.00" | .380" |
| | | | | | |
| | part number Mounted lenses AM313-0306 AM313-0400 AM313-9830 AM313-9830 AM313-9831 AM313-0307 AM313-0186 AM313-1215 AM313-50F1 AM313-0221 (not shown) AM313-0221 (not shown) AM313-0221 (not shown) AM313-0306MP5 AM313-0306MP5 AM313-0306MP5 AM313-0307MP5 AM313-0307MP5 AM313-1215MP5 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-0305 AM313-019NM AM313-019NM AM313-019NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM AM313-0186NM <td>Centricut part number Reference number Mounted lenses AM313-0306 81140306 AM313-0400 81140400 AM313-9830 71369830 AM313-9831 71369831 AM313-9831 71369831 AM313-9831 71369831 AM313-0307 81140307 AM313-0307 81140307 AM313-0186 81140186 AM313-0186 81140186 AM313-0186 81140186 AM313-1215 71501070 AM313-3110 </td> <td>Centricut part number Reference number Type Mounted lenses XM313-0306 81140306 PLX AM313-0306 81140400 PLX XM313-0400 81140400 PLX AM313-0400 81140400 PLX XM313-0400 81140400 PLX AM313-0400 81140207 PLX XM313-0400 RLX AM313-0400 81140307 PLX XM313-0400 RLX AM313-0507 81140307 PLX XM313-0662 S78662 PLX AM313-105 71501070 PLX XM313-3100 PLX XM313-3107 PLX AM313-50F1 71710030 PLX XM313-7571 PLX XM313-7571 PLX XM313-7021 (not shown) B017931 PLX AM313-0221 (not shown) B017931 PLX XM313-90221 (not shown) B017931 PLX AM313-9025 (not shown) B1140206 PLX XM313-90306MP5 R140306 PLX AM313-9830MP5 71369831 PLX XM313-90306MP5 B1140186</td> <td>Centricut part number Reference number Type Diameter Mounted lenses </td> <td>Centricut part number Reference number Type Diameter Focal length Moundel lenses 500" AM313-0400 81140400 PLX 1.5" 5.00" AM313-9800 71598930 PLX 1.5" 7.50" AM313-9800 71598930 PLX 1.5" 7.50" AM313-9800 81140307 PLX 1.5" 7.50" AM313-9802 576682 PLX 1.5" 5.00" AM313-916 81140166 PLX 1.5" 7.50" AM313-917 71501070 PLX 1.5" 7.50" AM313-7515 71501070 PLX 2.0" 7.50" AM313-7515 71710059 PLX 2.0" 7.50" AM313-7515 71710050 PLX 2.0" 7.50" AM313-9004P5 81140221 PLX 2.0" 7.50" AM313-9004P5 81140306 PLX 1.5" 7.50" AM313-9004P5 81140306<!--</td--></td> | Centricut part number Reference number Mounted lenses AM313-0306 81140306 AM313-0400 81140400 AM313-9830 71369830 AM313-9831 71369831 AM313-9831 71369831 AM313-9831 71369831 AM313-0307 81140307 AM313-0307 81140307 AM313-0186 81140186 AM313-0186 81140186 AM313-0186 81140186 AM313-1215 71501070 AM313-3110 | Centricut part number Reference number Type Mounted lenses XM313-0306 81140306 PLX AM313-0306 81140400 PLX XM313-0400 81140400 PLX AM313-0400 81140400 PLX XM313-0400 81140400 PLX AM313-0400 81140207 PLX XM313-0400 RLX AM313-0400 81140307 PLX XM313-0400 RLX AM313-0507 81140307 PLX XM313-0662 S78662 PLX AM313-105 71501070 PLX XM313-3100 PLX XM313-3107 PLX AM313-50F1 71710030 PLX XM313-7571 PLX XM313-7571 PLX XM313-7021 (not shown) B017931 PLX AM313-0221 (not shown) B017931 PLX XM313-90221 (not shown) B017931 PLX AM313-9025 (not shown) B1140206 PLX XM313-90306MP5 R140306 PLX AM313-9830MP5 71369831 PLX XM313-90306MP5 B1140186 | Centricut part number Reference number Type Diameter Mounted lenses | Centricut part number Reference number Type Diameter Focal length Moundel lenses 500" AM313-0400 81140400 PLX 1.5" 5.00" AM313-9800 71598930 PLX 1.5" 7.50" AM313-9800 71598930 PLX 1.5" 7.50" AM313-9800 81140307 PLX 1.5" 7.50" AM313-9802 576682 PLX 1.5" 5.00" AM313-916 81140166 PLX 1.5" 7.50" AM313-917 71501070 PLX 1.5" 7.50" AM313-7515 71501070 PLX 2.0" 7.50" AM313-7515 71710059 PLX 2.0" 7.50" AM313-7515 71710050 PLX 2.0" 7.50" AM313-9004P5 81140221 PLX 2.0" 7.50" AM313-9004P5 81140306 PLX 1.5" 7.50" AM313-9004P5 81140306 </td |



Replacement parts suitable for: $Amada^{\texttt{R}}$

Optics


| Centricut part number | | Reference number | Туре | Material | Diameter | Focal length | Edge thickness | | | |
|--------------------------|--------------------|---------------------|------|----------|--------------------|-----------------|-------------------|--|--|--|
| Fiber laser lens | Fiber laser lens | | | | | | | | | |
| AM313-0238 | | 7710238 | PLX | FS | 50.8 mm | 190 mm | 11.4 mm | | | |
| Fiber laser wind | Fiber laser window | | | | | | | | | |
| AM313-0026 | NEW | 71570026 | PLX | FS | 33.23 mm Octaganol | | 2.3 mm | | | |


Optics care


| Centricut | Reference | | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |
| MZ335-115 | ALI115/M | MZ-Wire, Indium .8 mm x 125 mm 1.5" Lens | 1 |
| MZ335-120 | ALI120/M | MZ-Wire, Indium .8 mm x 160 mm 2.0" Lens | 1 |




Bystronic[®]







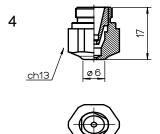

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|---------------|-----------------------------------|-----|
| | part number | part number | number | Description | qty |
| | BY310-4277X | L30674 | 3-04277, HK08 | BY-Nozzle HD, 0.8 mm (10 pk)* | 10 |
| | BY310-1910X | L3072 | 3-01910, HK10 | BY-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| | BY310-1911X | L30121 | 3-01911, HK12 | BY-Nozzle HD, 1.25 mm (10 pk)* | 10 |
| | BY310-1912X | L3073 | 3-01912, HK15 | BY-Nozzle HD, 1.5 mm (10 pk)* | 10 |
| 1 | BY310-1913X | L30122 | 3-01913, HK17 | BY-Nozzle HD, 1.75 mm (10 pk)* | 10 |
| | BY310-1910CPX | L3072X | 3-01910, HK10 | BY-Nozzle HD, 1.0 mm CP (10 pk)* | 10 |
| | BY310-1911CPX | L30121X | 3-01911, HK12 | BY-Nozzle HD, 1.25 mm CP (10 pk)* | 10 |
| | BY310-1912CPX | L3073X | 3-01912, HK15 | BY-Nozzle HD, 1.5 mm CP (10 pk)* | 10 |
| | BY310-1913CPX | L30122X | 3-01913, HK17 | BY-Nozzle HD, 1.75 mm CP (10 pk)* | 10 |
| | BY310-1914X | L30123 | 3-01914, HK20 | BY-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| | BY310-1915X | L30140 | 3-03854, HK25 | BY-Nozzle HD, 2.5 mm (10 pk)* | 10 |
| | BY310-6112X | L30265 | 3-06112, HK30 | BY-Nozzle HD, 3.0 mm (10 pk)* | 10 |
| | BY310-0035X | L30700 | HK35 | BY-Nozzle HD, 3.5 mm (10 pk)* | 10 |
| 2 | BY310-0040X | L30701 | HK40 | BY-Nozzle HD, 4.0 mm (10 pk)* | 10 |
| | BY310-1914CPX | L30123X | 3-01914, HK20 | BY-Nozzle HD, 2.0 mm CP (10 pk)* | 10 |
| | BY310-1915CPX | L30140X | 3-03854, HK25 | BY-Nozzle HD, 2.5 mm CP (10 pk)* | 10 |
| | BY310-6112CPX | L30265X | 3-06112, HK30 | BY-Nozzle HD, 3.0 mm CP (10 pk)* | 10 |
| | BY310-0040CPX | L30701X | HK40 | BY-Nozzle HD, 4.0 mm CP (10 pk)* | 10 |



Replacement parts suitable for: Bystronic®


Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|--|------------|
| | BY310-4273X | L3083 | 3-04273, K08 | BY-Nozzle, 0.8 mm (10 pk)* | 10 |
| | BY310-1905X | L30116 | 3-01905, K10 | BY-Nozzle, 1.0 mm (10 pk)* | 10 |
| | BY310-1906X | L30117 | 3-01906, K12 | BY-Nozzle, 1.25 mm (10 pk)* | 10 |
| | BY310-1907X | L30118 | 3-01907, K15 | BY-Nozzle, 1.5 mm (10 pk)* | 10 |
| | BY310-1908X | L30119 | 3-01908, K17 | BY-Nozzle, 1.75 mm (10 pk)* | 10 |
| | BY310-1909X | L30120 | 3-01909, K20 | BY-Nozzle, 2.0 mm (10 pk)* | 10 |
| | BY310-4274X | L30675 | 3-04274, K25 | BY-Nozzle, 2.5 mm (10 pk)* | 10 |
| | BY310-4275X | L30678 | 3-04275, K30 | BY-Nozzle, 3.0 mm (10 pk)* | 10 |
| 3 | BY310-4273CPX | L3083X | 3-04273, K08 | BY-Nozzle, 0.8 mm CP (10 pk)* | 10 |
| | BY310-1905CPX | L30116X | 3-01905, K10 | BY-Nozzle, 1.0 mm CP (10 pk)* | 10 |
| | BY310-1906CPX | L30117X | 3-01906, K12 | BY-Nozzle, 1.25 mm CP (10 pk)* | 10 |
| | BY310-1907CPX | L30118X | 3-01907, K15 | BY-Nozzle, 1.5 mm CP (10 pk)* | 10 |
| | BY310-1908CPX | L30119X | 3-01908, K17 | BY-Nozzle, 1.75 mm CP (10 pk)* | 10 |
| | BY310-1909CPX | L30120X | 3-01909, K20 | BY-Nozzle, 2.0 mm CP (10 pk)* | 10 |
| | BY310-4274CPX | L30675X | 3-04274, K25 | BY-Nozzle, 2.5 mm CP (10 pk)* | 10 |
| | BY310-2475CPX | L30678X | 3-04275, K30 | BY-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| | BY310-6058X | L301363 | 3-16058, NK10-15 | BY-Nozzle double, 1.0 mm (10 pk)* | 10 |
| | BY310-6059X | L301364 | 3-16059, NK12-15 | BY-Nozzle double, 1.25 mm (10 pk)* | 10 |
| | BY310-6060X | L301365 | 3-16060, NK15-15 | BY-Nozzle double, 1.5 mm (10 pk)* | 10 |
| | BY310-4317X | L301366 | 3-14317, NK17-15 | BY-Nozzle double, 1.75 mm (10 pk)* | 10 |
| | BY310-0005X | L30604 | 3-14318, NK20-15 | BY-Nozzle double, 2.0 mm (10 pk)* | 10 |
| | BY310-0006X | L30605 | 3-14319, NK25-15 | BY-Nozzle double, 2.5 mm (10 pk)* | 10 |
| | BY310-6256X | L30612 | 3-16256, NK25-20 | BY-Nozzle double, 2.5 mm/Inner 2.0 mm (10 pk)* | 10 |
| | BY310-6061X | L30613 | 3-16061, NK30-17 | BY-Nozzle double, 3.0 mm/Inner 1.75 mm (10 pk)* | 10 |
| | BY310-0007X | L30606 | 3-16257, NK30-20 | BY-Nozzle double, 3.0 mm (10 pk)* | 10 |
| , | BY310-3530X | L30607 | NK35-30 | BY-Nozzle double, 3.5 mm/Inner 3.0 mm (10 pk)* | 10 |
| 4 | BY310-6058CPX | L301363X | 3-16058, NK10-15 | BY-Nozzle double, 1.0 mm CP (10 pk)* | 10 |
| | BY310-6059CPX | L301364X | 3-16059, NK12-15 | BY-Nozzle double, 1.25 mm CP (10 pk)* | 10 |
| | BY310-6060CPX | L301365X | 3-16060, NK15-15 | BY-Nozzle double, 1.5 mm CP (10 pk)* | 10 |
| | BY310-4317CPX | L301366X | 3-14317, NK17-15 | BY-Nozzle double, 1.75 mm CP (10 pk)* | 10 |
| | BY310-0005CPX | L30604X | 3-14318, NK20-15 | BY-Nozzle double, 2.0 mm CP (10 pk)* | 10 |
| | BY310-0006CPX | L30605X | 3-14319, NK25-15 | BY-Nozzle double, 2.5 mm CP (10 pk)* | 10 |
| | BY310-6256CPX | L30612X | 3-16256, NK25-20 | BY-Nozzle double, 2.5 mm/Inner 2.0 mm CP (10 pk)* | 10 |
| | BY310-6061CPX | L30613X | 3-16061, NK30-17 | BY-Nozzle double, 3.0 mm/Inner 1.75 mm CP (10 pk)* | 10 |
| | BY310-0007CPX | L30606X | 3-16257, NK30-20 | BY-Nozzle double, 3.0 mm CP (10 pk)* | 10 |
| | BY310-3530CPX | L30607X | NK35-30 | BY-Nozzle double, 3.5 mm/Inner 3.0 mm CP (10 pk)* | 10 |
| 5 | BY327-3210 | AL418 | 7023207, 7023208 | BY-Water connector set | 1 |
| 6 | BY328-3207 | AL416 | 7023207 | BY-Water connector, male | 1 |
| 7 | BY328-3208 | AL417 | 7023208 | BY-Water connector, female | 1 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567). For nozzle bodies and associated parts see pages 24-27.



Bystronic[®]

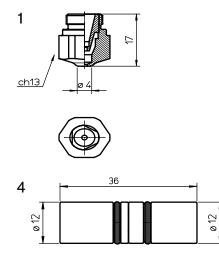

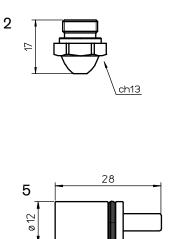

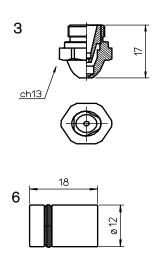


Consumables

| | Centricut | Esse A | Reference | | Pkg | | | | |
|---|---------------|---|------------------|---------------------------------------|-----|--|--|--|--|
| | part number | part number | number | Description | qty | | | | |
| | BY310-0001X | L30600 | 3-16058, NK10-15 | BY-Nozzle double, 1.0 mm (10 pk)* | 10 | | | | |
| | BY310-0002X | L30601 | 3-16059, NK12-15 | BY-Nozzle double, 1.25 mm (10 pk)* | 10 | | | | |
| | BY310-0003X | L30602 | 3-16060, NK15-15 | BY-Nozzle double, 1.5 mm (10 pk)* | 10 | | | | |
| | BY310-0004X | L30603 | 3-14317, NK17-15 | BY-Nozzle double, 1.75 mm (10 pk)* | 10 | | | | |
| | BY310-0001CPX | L30600X | 3-16058, NK10-15 | BY-Nozzle double, 1.0 mm CP (10 pk)* | 10 | | | | |
| | BY310-0002CPX | L30601X | 3-16059, NK12-15 | BY-Nozzle double, 1.25 mm CP (10 pk)* | 10 | | | | |
| | BY310-0003CPX | L30602X | 3-16060, NK15-15 | BY-Nozzle double, 1.5 mm CP (10 pk)* | 10 | | | | |
| | BY310-0004CPX | L30603X | 3-14317, NK17-15 | BY-Nozzle double, 1.75 mm CP (10 pk)* | 10 | | | | |
| | BY319-1894X | L3098 | 3-01894, 10 | BY-Nozzle, 1.0 mm (10 pk)* | 10 | | | | |
| | BY319-1895X | L3099 | 3-01895, 12 | BY-Nozzle, 1.25 mm (10 pk)* | 10 | | | | |
| | BY319-1896X | L30100 | 3-01896, 15 | BY-Nozzle, 1.5 mm (10 pk)* | 10 | | | | |
| | BY319-1897 | L30101 | 3-01897, 17 | BY-Nozzle, 1.75 mm (10 pk)* | 10 | | | | |
| | BY319-1898X | L30102 | 3-01898, 20 | BY-Nozzle, 2.0 mm (10 pk)* | 10 | | | | |
| | BY319-4272X | L30676 | 3-04272, 25 | BY-Nozzle, 2.5 mm (10 pk)* | 10 | | | | |
| | BY319-4275X | L30673 | 3-04275, H08 | BY-Nozzle HD, 0.8 mm (10 pk)* | 10 | | | | |
| | BY319-1899X | L3088 | 3-01899, H10 | BY-Nozzle HD, 1.0 mm (10 pk)* | 10 | | | | |
| | BY319-1900X | L30103 | 3-01900, H12 | BY-Nozzle HD, 1.25 mm (10 pk)* | 10 | | | | |
| | BY319-1901X | L30104 | 3-01901, H15 | BY-Nozzle HD, 1.5 mm (10 pk)* | 10 | | | | |
| 2 | BY319-1902X | L30105 | 3-01902, H17 | BY-Nozzle HD, 1.75 mm (10 pk)* | 10 | | | | |
| | BY319-1903X | L30106 | 3-01903, H20 | BY-Nozzle HD, 2.0 mm (10 pk)* | 10 | | | | |
| | BY319-4276X | L30677 | 3-04276, H25 | BY-Nozzle HD, 2.5 mm (10 pk)* | 10 | | | | |
| | BY319-0030X | L30679 | H30 | BY-Nozzle HD, 3.0 mm (10 pk)* | 10 | | | | |
| | BY319-1899CPX | L3088X | 3-01899, H10 | BY-Nozzle HD, 1.0 mm CP (10 pk)* | 10 | | | | |
| | BY319-0900CPX | L30103X | 3-01900, H12 | BY-Nozzle HD, 1.25 mm CP (10 pk)* | 10 | | | | |
| | BY319-1901CPX | L30104X | 3-01901, H15 | BY-Nozzle HD, 1.5 mm CP (10 pk)* | 10 | | | | |
| | BY319-1902CPX | L30105X | 3-01902, H17 | BY-Nozzle HD, 1.75 mm CP (10 pk)* | 10 | | | | |
| | BY319-4276CPX | L30677X | 3-04276, H25 | BY-Nozzle HD, 2.5 mm CP (10 pk)* | 10 | | | | |
| | BY319-0030CPX | L30679X | H30 | BY-Nozzle HD, 3.0 mm CP (10 pk)* | 10 | | | | |
| | BY319-1215X | L301251 | N12-15 | BY-Nozzle double, 1.25 mm (10 pk)* | 10 | | | | |
| | BY319-1515X | L301252 | N15-15 | BY-Nozzle double, 1.5 mm (10 pk)* | 10 | | | | |
| | BY319-1715X | L301253 | N17-15 | BY-Nozzle double, 1.75 mm (10 pk)* | 10 | | | | |
| 3 | BY319-2015X | L301254 | N20-15 | BY-Nozzle double, 2.0 mm (10 pk)* | 10 | | | | |
| 3 | BY319-2515X | L301255 | N25-15 | BY-Nozzle double, 2.5 mm (10 pk)* | 10 | | | | |
| | BY319-2520X | L301256 | N25-20 | BY-Nozzle double, 2.5 mm (10 pk)* | 10 | | | | |
| | BY319-3017X | L301257 | N30-17 | BY-Nozzle double, 3.0 mm (10 pk)* | 10 | | | | |
| | BY319-3020X | L301258 | N30-20 | BY-Nozzle double, 3.0 mm (10 pk)* | 10 | | | | |
| 4 | BY327-3210 | AL418 | 7023207, 7023208 | BY-Water connector set | 1 | | | | |
| 5 | BY328-3207 | AL416 | 7023207 | BY-Water connector, male | 1 | | | | |
| 6 | BY328-3208 | AL417 | 7023208 | BY-Water connector, female | 1 | | | | |
| | | ally remove the "V' of the and of the r | | | 1 | | | | |

*Available in single packs. To order single packs, remove the "X' at the end of the part number (e.g. AM123-4567X would be AM123-4567). For nozzle bodies and associated parts see pages 24-27.



Bystronic[®]

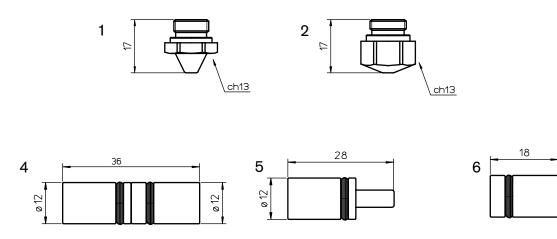

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|-------------|-------------|------------------|--------------------------------|-----|
| | part number | part number | number | Description | qty |
| | BY318-1894X | L3014 | 3-01894, 10 | BY-Nozzle, 1.0 mm (10 pk)* | 10 |
| | BY318-1895X | L3041 | 3-01895, 12 | BY-Nozzle, 1.25 mm (10 pk)* | 10 |
| | BY318-1896X | L3017 | 3-01896, 15 | BY-Nozzle, 1.5 mm (10 pk)* | 10 |
| | BY318-1897X | L3042 | 3-01897, 17 | BY-Nozzle, 1.75 mm (10 pk)* | 10 |
| 1 | BY318-1898X | L3033 | 3-01898, 20 | BY-Nozzle, 2.0 mm (10 pk)* | 10 |
| | BY318-1899X | L3043 | 3-01899, H10 | BY-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| | BY318-1900X | L3016 | 3-01900, H12 | BY-Nozzle HD, 1.25 mm (10 pk)* | 10 |
| | BY318-1901X | L3044 | 3-01901, H15 | BY-Nozzle HD, 1.5 mm (10 pk)* | 10 |
| | BY318-1902X | L3045 | 3-01902, H17 | BY-Nozzle HD, 1.75 mm (10 pk)* | 10 |
| | BY318-1903X | L3046 | 3-01903, H20 | BY-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| | BY320-4273X | L3071 | 3-04273, K08 | BY-Nozzle, 0.8 mm (10 pk)* | 10 |
| | BY320-1905X | L30107 | 3-01905, K10 | BY-Nozzle, 1.0 mm (10 pk)* | 10 |
| | BY320-1906X | L30108 | 3-01906, K12 | BY-Nozzle, 1.25 mm (10 pk)* | 10 |
| | BY320-1907X | L30109 | 3-01907, K15 | BY-Nozzle, 1.5 mm (10 pk)* | 10 |
| | BY320-1909X | L30111 | 3-01909, K20 | BY-Nozzle, 2.0 mm (10 pk)* | 10 |
| 2 | BY320-1910X | L3089 | 3-01910, HK10 | BY-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| | BY320-1911X | L30112 | 3-01911, HK12 | BY-Nozzle HD, 1.25 mm (10 pk)* | 10 |
| | BY320-1912X | L30113 | 3-01912, HK15 | BY-Nozzle HD, 1.5 mm (10 pk)* | 10 |
| | BY320-1913X | L30114 | 3-01913, HK17 | BY-Nozzle HD, 1.75 mm (10 pk)* | 10 |
| | BY320-1914X | L30115 | 3-01914, HK20 | BY-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| 3 | BY327-3210 | AL418 | 7023207, 7023208 | BY-Water connector set | 1 |
| 4 | BY328-3207 | AL416 | 7023207 | BY-Water connector, male | 1 |
| 5 | BY328-3208 | AL417 | 7023208 | BY-Water connector, female | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567). For nozzle bodies and associated parts see pages 24-27.

Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.


ø 12




Bystronic[®]




1







17.7

7









9

Ø15

17.7



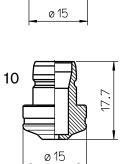


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pk qt |
|----|--------------------------|-----------------------|-------------------------|--|----------|
| 1 | BY328-4061 | AL450 | 10034061 | BY-Nozzle holder | 1 |
| 2 | BY328-6030 | AL451 | 10046030 | BY-Nozzle adapter | 1 |
| 3 | BY328-1133 | AL452 | 10051133 | BY-Nozzle adapter MSB | 1 |
| 4 | BY328-4099 | AL449 | 10064099 | BY-Nozzle body | 1 |
| 5 | BY328-9016 | AL441 | 10046025, 08-12-04-9016 | BY-Isolator ring, ceramic | 1 |
| 6 | BY310-0398 | AL398 | | BY-CL nut | 1 |
| _ | BY310-8529X | L301660 | 10048529, HK08 | BY-Nozzle, 0.8 mm (10 pk)* | 10 |
| | BY310-5266X | L301661 | 10035266, HK10 | BY-Nozzle, 1.0 mm (10 pk)* | 1 |
| | BY310-5267X | L301662 | 10035267, HK12 | BY-Nozzle, 1.2 mm (10 pk)* | 1 |
| | BY310-5268X | L301663 | 10035268, HK15 | BY-Nozzle, 1.5 mm (10 pk)* | 1 |
| | BY310-5269X | L301664 | 10035269, HK17 | BY-Nozzle, 1.7 mm (10 pk)* | 1 |
| | BY310-5270X | L301665 | 10035270, HK20 | BY-Nozzle, 2.0 mm (10 pk)* | 1 |
| | BY310-5271X | L301666 | 10035271, HK25 | BY-Nozzle, 2.5 mm (10 pk)* | 1 |
| | BY310-5272X | L301667 | 10035272, HK30 | BY-Nozzle, 3.0 mm (10 pk)* | 1 |
| | BY310-9744X | L301668 | 10049744, HK35 | BY-Nozzle, 3.5 mm (10 pk)* | 1 |
| | BY310-9747X | L301670 | 10049747, NK10-15 | BY-Nozzle double, 1.0 mm (10 pk)* | 1 |
| | BY310-5275X | L301671 | 10035275, NK12-15 | BY-Nozzle double, 1.2 mm (10 pk)* | 1 |
| | BY310-5278X | L301672 | 10035278, NK15-15 | BY-Nozzle double, 1.5 mm (10 pk)* | 1 |
| | BY310-5290X | L301673 | 10035290, NK17-15 | BY-Nozzle double, 1.7 mm (10 pk)* | 1 |
| | BY310-5292X | L301674 | 10035292, NK20-15 | BY-Nozzle double, 2.0 mm (10 pk)* | 1 |
| | BY310-5294X | L301675 | 10035294, NK25-15 | BY-Nozzle double, 2.5 mm (10 pk)* | 1 |
| | BY310-5296X | L301676 | 10035296, NK25-20 | BY-Nozzle double, 2.5 mm/Inner 2.0 mm (10 pk)* | 1 |
| | BY310-5298X | L301677 | 10035298, NK30-17 | BY-Nozzle double, 3.0 mm/Inner 1.7 mm (10 pk)* | 1 |
| | BY310-5301X | L301678 | 10035301, NK30-20 | BY-Nozzle double, 3.0 mm (10 pk)* | 1 |
| | BY310-5302X | L301679 | 10035303, NK35-30 | BY-Nozzle double, 3.5 mm (10 pk)* | 1 |
| | BY310-8946X NEW | L301680 | 10068496, NK35-17 | BY-Nozzle double, 3.5 mm (10 pk)* | 1 |
| | BY310-8948X NEW | L301681 | 10068496, NK40-17 | BY-Nozzle double, 4.0 mm (10 pk)* | 1 |
| | BY310-6332CP NEW | L1683XH | 10066332,35H | BY-Nozzle, 3.5 mm CP | |
| | BY310-8494CP NEW | L1684XH | 10068494,50H | BY-Nozzle, 5.0 mm CP | 1 |
| ງົ | BY310-1682 | L1682 | 10039202 | BY-Nozzle centering, 2.0 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Bystronic[®]

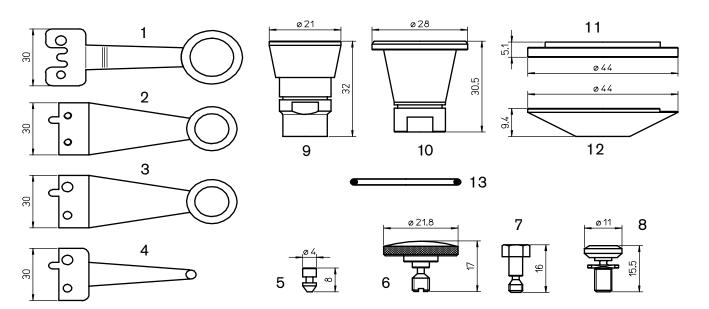

Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----|--------------------------|-----------------------|---------------------|---------------------------------------|------------|
| 1 | BY328-5530 | AL26 | 3-05530 | BY-Scanner | 45 1 |
| 2 | BY328-2015 | AL5 | 2-01262 | BY-Scanner | 1 |
| 3 | BY328-0015 | AL252 | 2-02015 | BY-Scanner | 1 |
| 4 | BY328-2016 | AL251 | 2-02016 | BY-Ball scanner | 1 |
| 5 | BY328-3137 | AL24 | 4-03137 | BY-Pin (5 pcs) | 5 |
| 6 | BY328-3136 | AL25 | 4-03136 | BY-Knurled screw | 1 |
| 7 | BY328-0324 | AL1 | 4-00324 | BY-Knurled screw | 1 |
| 8 | BY328-9001 | AL208 | 3-09001 | BY-Cross jet screw | 1 |
| 9 | BY328-2291 | AL188 | 3-02291 | BY-Nozzle body | 1 |
| 10 | BY328-5497 | AL102 | 3-05497 | BY-Nozzle body, copper | 1 |
| 11 | BY328-3663-T | AL206 | 3-03663-T | BY-Disc, PTFE* (only) | 1 |
| 12 | BY328-3663-C | AL205 | 3-03663-C | BY-Shield | 1 |
| | BY328-1300 | AL225 | 3141300 | BY-O-ring | 1 |
| 13 | BY328-1122 | AL226 | 3141122 | BY-O-ring | 1 |
| 13 | BY328-0236 | | 3140236 | BY-O-ring | 1 |
| | BY328-0820 | AL99 | 3140820 | BY-Lens o-ring | 1 |
| | BY328-0004 (not shown) | AL246 | | BY-Screw kit for BY328-3663-C (3 pcs) | 3 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.

Nozzle bodies and associated parts on this page can be used with nozzles on pages 20-23.



Bystronic[®]

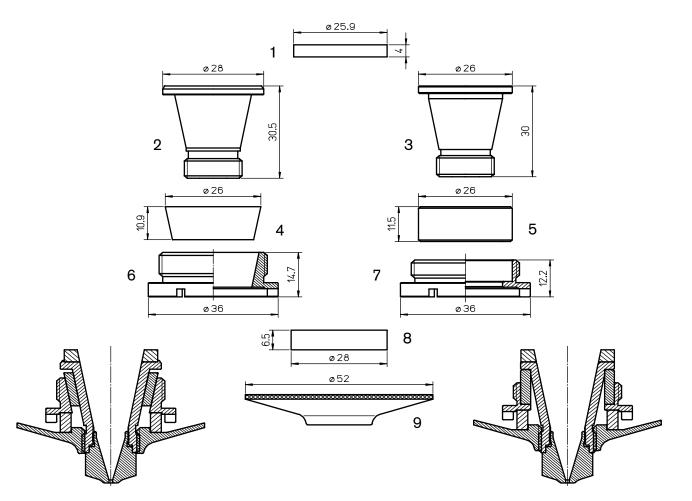


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|----------------------------|------------|
| 1 | BY328-0642 | AL125 | 4-01642 | BY-Insulating disc ceramic | 1 |
| | BY328-1642 | AL231 | 4-01642 | BY-Insulating disc ceramic | 1 |
| 2 | BY328-8701 | AL172 | 2-08701 | BY-Nozzle body | 1 |
| 3 | BY359-2930 | AL423 | 10032930 | BY-Nozzle body | 1 |
| | BY328-0959 | AL124 | 4-01959 | BY-Cone ceramic | 1 |
| 4 | BY328-1959 | AL230 | 4-01959 | BY-Cone ceramic | 1 |
| 5 | BY359-2838 | AL425 | 10032838 | BY-Insulating ring ceramic | 1 |
| 6 | BY328-1071 | AL174 | 3-11071 | BY-Fastening nut | 1 |
| 7 | BY359-2839 | AL424 | 10032839 | BY-Fastening nut | 1 |
| 8 | BY328-9010 | AL126 | 4-09010 | BY-Ring ceramic | 1 |
| 9 | BY328-8700 | AL173 | 2-08700 | BY-shield | 1 |
| 9 | BY328-0005 | AL173X | 2-08700 | BY-signboard | 1 |

Nozzle bodies and associated parts on this page can be used with nozzles on pages 20-23.



Replacement parts suitable for: Bystronic®

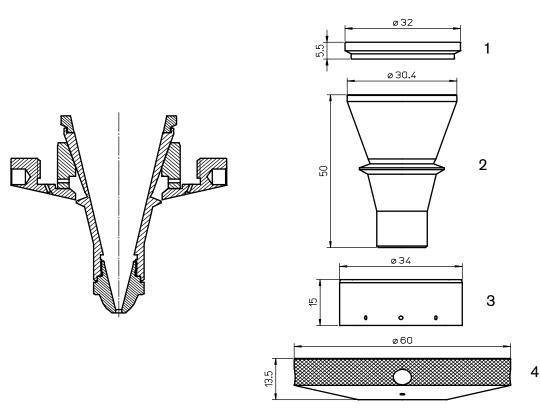


Consumables


| | Centricut part number | | Reference number | Description | Pkg qty |
|---|--------------------------|-------|---------------------|-----------------------------------|------------|
| 1 | BY359-3113 | AL215 | 3-13113 | BY-Insulating ring, small | 1 |
| 2 | BY359-0837 | AL214 | 2-10837 | BY-Nozzle body | 1 |
| 3 | BY359-3422 | AL216 | 3-13422 | BY-Insulating ring w/holes, large | 1 |
| 4 | BY359-3110 | AL258 | 3-13110 | BY-Shield, copper | 1 |

Nozzle bodies and associated parts on this page can be used with nozzles on pages 20-23.



Bystronic[®]

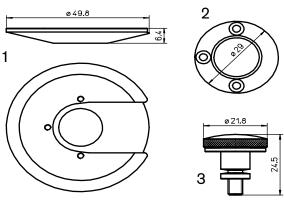



Consumables

4

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|--|------------|
| 1 | BY359-6035 | AL222 | 3-06035 | BY-Shield, copper only | 1 |
| | BY359-0001 | AL245 | | BY-Screw kit (3 pcs) | 3 |
| 2 | BY328-328-1 | AL120 | 3-06035-T | BY-Disc, PTFE* | 1 |
| 3 | BY328-4976 | AL209 | 4-04976 | BY-Knurled screw | 1 |
| 4 | BY328-6511 | AL300 | 2-06511 | BY-Brush w/screws | 1 |
| 5 | BY328-3884 | | 333884 | BY-Screws, plastic (2 pcs) | 2 |
| | Filters – not shown | | | | |
| | BY328-0020 | 7004621 | D020 | BY-Air filter (Deltec) | 1 |
| | BY328-4753 | 7001341 | 71064753 | BY-Vacuum pump filter | 1 |
| | BY328-0145 | 8820145 | 8820145 | BY-Water filter | 1 |
| | BY328-0154 | 8820154 | 8820154 | BY-Water filter 140M/C | 1 |
| | BY328-9417 | 7509417 | A37100MF0 | BY-Filter, 37x106 | 1 |
| | BY328-9412 | 7509412 | | BY-Air filter (active coal) | 1 |
| | BY328-9412L | 7509412 - LONG | 7509412 - long | BY-Air filter (active coal) long, 190 mm | 1 |
| | BY328-2456 | 502456 | 502456 | BY-Vacuum pump filter 4000W | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Replacement parts suitable for: Bystronic®

Optics

| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| BY314-0185 | 4-00185 | MEN | 1.5" | 3.75" | .236" |
| BY314-0736 | 4-10736 | MEN | 1.5" | 3.75" | .354" |
| BY314-0186 | 4-00186 | MEN | 1.5" | 5.00" | .236" |
| BY314-5094 | 4-05094 | MEN | 1.5" | 5.00" | .354" |
| BY314-1644 | 120216, 621644 | MEN | 1.5" | 5.00" | .354" |
| BY314-7475 | | MEN | 1.5" | 5.00" | .354" |
| BY314-0187 | 4-00187 | MEN | 1.5" | 7.50" | .236" |
| BY314-5095 | 4-05095 | MEN | 1.5" | 7.50" | .354" |
| BY314-8637 | 698637 | MEN | 1.5" | 7.50" | .354" |
| Ultra low absorption le | nses | | | | |
| BY314-0186MP5 | 4-00186 | MEN | 1.5" | 5.00" | .236" |
| BY314-5094MP5 | 4-05094 | MEN | 1.5" | 5.00" | .354" |
| BY314-0187MP5 | 4-00187 | MEN | 1.5" | 7.50" | .236" |
| BY314-5095MP5 | 4-05095 | MEN | 1.5" | 7.50" | .354" |
| BY314-8294MP5 | 996707 | MEN | 1.5" | 9.00" | .354" |
| BY314-7014MP5 | 460386 | MEN | 1.5" | 10.00" | .354" |


| Centricut part number | Reference number | Туре | Diameter | Edge thickness |
|--------------------------|-------------------------------|------|----------|-------------------|
| Windows | | | | |
| BY314-5746 | 10-02-01-5511,10045746,968752 | FS | 36.00 mm | 5.00 mm |


Optics care


| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



Replacement parts suitable for: **Cincinnati**®

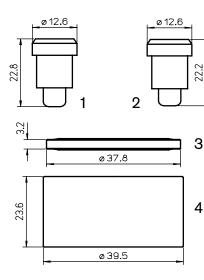

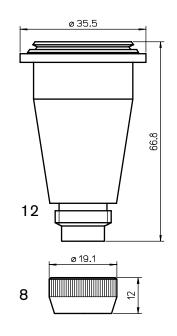

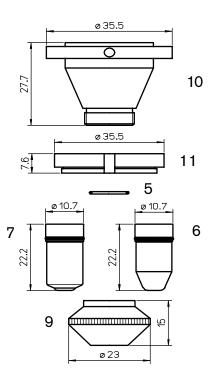

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|---------------|-------------|----------------|--|-----|
| | part number | part number | number | Description | qty |
| 1 | CN305-8090 | L220 | 908090 | CN-Nozzle elongated, 1.5 mm (0.060") | 1 |
| | CN305-7469 | L221 | 907469 | CN-Nozzle, 1.0 mm | 1 |
| 2 | CN305-7470 | L222 | 907470 | CN-Nozzle, 1.5 mm | 1 |
| | CN305-0006 | L223 | 920006 | CN-Nozzle, 2.0 mm | 1 |
| 3 | CN305-0000 | AL92 | | CN-Gasket w/spring, PTFE** | 1 |
| | CN305-7677 | AL71/S | 907677 | CN-Nozzle holder, contact | 1 |
| 4 | CN305-7472 | AL71 | 907472 | CN-Nozzle holder, contact w/gasket | 1 |
| 5 | CN306-9680 | AL95 | 909680 | CN-Nozzle o-ring (10 pk) | 10 |
| | CN306-0011 | L1528 | | CN-Nozzle w/o-ring, 0.8 mm | 1 |
| | CN306-9660-1X | L30712 | 924635 | CN-Nozzle w/o-ring, 1.0 mm (10 pk)* | 10 |
| | CN306-0012 | L961 | | CN-Nozzle w/o-ring, 1.2 mm | 1 |
| | CN306-0013 | L962 | | CN-Nozzle w/o-ring, 1.3 mm | 1 |
| | CN306-0014 | L963 | | CN-Nozzle w/o-ring, 1.4 mm | 1 |
| | CN306-9660X | L30224 | 909660 | CN-Nozzle w/o-ring, 1.5 mm (10 pk)* | 10 |
| 6 | CN306-0315 | L225 | 910315 | CN-Nozzle w/o-ring, 2.0 mm | 1 |
| | CN306-3789 | L713 | 924638, 913191 | CN-Nozzle w/o-ring, 2.5 mm | 1 |
| | CN306-4634 | L714 | 924634 | CN-Nozzle w/o-ring, 3.0 mm | 1 |
| | CN306-4635 | L1017 | 924635 | CN-Nozzle w/o-ring, 3.15 mm | 1 |
| | CN306-3013X | L30433 | 923013 | CN-Nozzle shower w/o-ring, 1.0 mm (10 pk)* | 10 |
| | CN306-3014X | L30434 | 923014 | CN-Nozzle shower w/o-ring, 1.5 mm (10 pk)* | 10 |
| | CN306-0020 | L435 | 910315-S | CN-Nozzle shower w/o-ring, 2.0 mm | 1 |
| 7 | CN306-4636 | L869 | 924636, 913188 | CN-Nozzle w/o-ring, 1.5 mm | 1 |
| ' | CN306-4637 | L870 | 924637, 913190 | CN-Nozzle w/o-ring, 2.0 mm | 1 |
| 8 | CN306-9659 | AL48 | 909659 | CN-Tip lock nut, non contact | 1 |
| 9 | CN306-3021 | AL135 | 923021 | CN-Tip retainer nut, tapered | 1 |
| 10 | CN306-0150 | AL137 | 923258 | CN-Tip retainer | 1 |
| 11 | CN306-0001 | AL139 | 923259 | CN-Insulating ring | 1 |
| 12 | CN306-9658 | AL183 | 909658 | CN-Tip retainer, non contact | 1 |

* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567) ** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Replacement parts suitable for: Cincinnati®

Consumables

| Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|--------------------------|-----------------------|---------------------|--|------------|
| CN306-9664 (not shown) | | 909664, 56161 | CN-O-ring | 1 |
| CN306-0654A (not shown) | | 909654, 922686 | CN-Sensor cable, 114 mm (4.5") armored | 1 |
| CN306-0951A (not shown) | | 842951 | CN-Sensor cable, 140 mm (5.5") armored (brown) | 1 |
| CN306-9654 (not shown) | | 909654, 922686 | CN-Sensor cable, 114 mm (4.5") (white) | 1 |
| CN306-2951 (not shown) | | 842951 | CN-Sensor cable, 140 mm (5.5") (brown) | 1 |

Optics

| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| CN307-7557 | 907557 | PLX | 1.5" | 5.0" | .160" |
| CN307-8085 | 908085 | PLX | 1.5" | 5.0"WD | .280" |
| CN307-9484 | 909484 | PLX | 1.5" | 7.5"WD | .280" |
| CN307-2377 | 922377 | PLX | 2.0" | 5.0" | .380" |
| CN307-0676 | 922377 | PLX | 2.0" | 5.0"WD | .380" |
| CN307-2376 | 922376 | PLX | 2.0" | 7.5" | .380" |
| CN307-1603 | 922376 | PLX | 2.0" | 7.5"WD | .380" |
| CN307-4498 | 926274 | PLX | 2.0" | 10.0"WD | .380" |
| Low absorption lenses | | | | | |
| CN307-8085MP5 | 61001LA,908085 | PLX | 1.5" | 5.0"WD | .280" |
| CN307-9484MP5 | 61002LA,909484 | PLX | 1.5" | 7.50"WD | .315" |
| CN307-2377MP5 | 922377 | PLX | 2.0" | 5.0" | .380" |
| CN307-0211MP5 | 504211 | PLX | 2.0" | 5.0"WD | .380" |
| CN307-2376MP5 | 922376 | PLX | 2.0" | 7.5" | .380" |


| Centricut part number | Reference number | Туре | Diameter | Edge thickness | | | | |
|--------------------------|---------------------|------|----------|-------------------|--|--|--|--|
| Windows | Windows | | | | | | | |
| CN307-3987 | 913987 | FS | 38.10 mm | 1.60 mm | | | | |
| CN307-0203 | 914910 | FS | 38.10 mm | 6.00 mm | | | | |

Optics care

| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



HK Laser & Systems®




Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|----------------------------------|---------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | HW405-0811 | AL408 | MX-0875, HPH-S01007-7 | HW-Nozzle holder, ceramic | 1 |
| | PT345-0008 | L935 | | PT-Nozzle HD, 0.8 mm | 1 |
| | PT345-1548 | L234 | 281548, P0591-571-00010, MX-0860 | PT-Nozzle HD, 1.0 mm | 1 |
| | PT345-1549 | L235 | 281549, P0591-572-00012, MX-0861 | PT-Nozzle HD, 1.2 mm | 1 |
| | PT345-1463 | L236 | 281463, P0591-573-00015, MX-0862 | PT-Nozzle HD, 1.5 mm | 1 |
| | PT345-0001 | L237 | P0591-574-00018, MX-0863 | PT-Nozzle HD, 1.8 mm | 1 |
| | PT345-1550 | L238 | 281550, P0591-575-00020, MX-0864 | PT-Nozzle HD, 2.0 mm | 1 |
| | PT345-0003 | L239 | P0591-574-00023 | PT-Nozzle HD, 2.3 mm | 1 |
| | PT345-1551 | L240 | 281551, P0591-576-00025, MX-0865 | PT-Nozzle HD, 2.5 mm | 1 |
| | PT345-1552 | L936 | | PT-Nozzle HD, 2.75 mm | 1 |
| | PT345-0002 | L241 | | PT-Nozzle HD, 3.0 mm | 1 |
| | PT345-0005 | L826 | | PT-Nozzle HD, 3.2 mm | 1 |
| | PT345-0006 | L827 | | PT-Nozzle HD, 3.5 mm | 1 |
| 2 | PT345-0004 | L828 | | PT-Nozzle HD, 4.0 mm | 1 |
| 2 | PT345-0007 | L829 | | PT-Nozzle HD, 4.5 mm | 1 |
| | PT345-1547CP | L935X | | PT-Nozzle HD, 0.8 mm CP | 1 |
| | PT345-1548CP | L234X | 281548, P0591-571-00010 | PT-Nozzle HD, 1.0 mm CP | 1 |
| | PT345-1549CP | L235X | 281549, P0591-572-00012 | PT-Nozzle HD, 1.2 mm CP | 1 |
| | PT345-1463CP | L236X | 281463, P0591-573-00015 | PT-Nozzle HD, 1.5 mm CP | 1 |
| | PT345-0001CP | L237X | P0591-574-00018 | PT-Nozzle HD, 1.8 mm CP | 1 |
| | PT345-1550CP | L238X | 281550, P0591-575-00020 | PT-Nozzle HD, 2.0 mm CP | 1 |
| | PT345-0003CP | L239X | 281591 | PT-Nozzle HD, 2.3 mm CP | 1 |
| | PT345-1551CP | L240X | 281551, P0591-576-00025 | PT-Nozzle HD, 2.5 mm CP | 1 |
| | PT345-0002CP | L241X | | PT-Nozzle HD, 3.0 mm CP | 1 |
| | PT345-0006CP | L827X | | PT-Nozzle HD, 3.5 mm CP | 1 |
| | PT345-0004CP | L828X | | PT-Nozzle HD, 4.0 mm CP (10 pk) | 1 |
| | PT345-0007CP | L829X | | PT-Nozzle HD, 4.5 mm CP | 1 |



HK Laser & Systems®

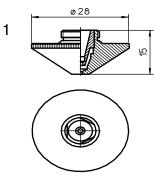



Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg |
|---|--------------------------|-----------------------|---------------------|--|----------|
| | PT358-0669 | | | PT-Nozzle double, 0.8 mm/inner 1.5 mm | qty 1 |
| | PT358-0010 | L660 | | PT-Nozzle double, 1.0 mm/inner 1.5 mm | 1 |
| | PT358-0125 | L661 | P0591-002-00012 | PT-Nozzle double, 1.2 mm/inner 1.5 mm | 1 |
| | PT358-0015 | L662 | P0591-002-00015 | PT-Nozzle double, 1.5 mm/inner 1.5 mm | 1 |
| | PT358-0018 | L663 | P0591-002-00018 | PT-Nozzle double, 1.8 mm/inner 1.5 mm | 1 |
| | PT358-0020 | L664 | P0591-002-00020 | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT358-0023 | L665 | P0591-002-00023 | PT-Nozzle double, 2.3 mm/inner 1.5 mm | 1 |
| | PT358-0007 | L666 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm | 1 |
| | PT358-0030 | L667 | | PT-Nozzle double, 3.0 mm/inner 1.5 mm | 1 |
| 1 | PT358-0035 | L668 | | PT-Nozzle double, 3.5 mm/inner 1.5 mm | 1 |
| 1 | PT358-0008CP | L669X | | PT-Nozzle double, 0.8 mm/inner 1.5 mm CP | 1 |
| | PT358-0010CP | L660X | | PT-Nozzle double, 1.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0125CP | L661X | | PT-Nozzle double, 1.2 mm/inner 1.5 mm CP | 1 |
| | PT358-0015CP | L662X | | PT-Nozzle double, 1.5 mm/inner 1.5 mm CP | 1 |
| | PT358-0018CP | L663X | | PT-Nozzle double, 1.8 mm/inner 1.5 mm CP | 1 |
| | PT358-0020CP | L664X | | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT358-0023CP | L665X | | PT-Nozzle double, 2.3 mm/inner 1.5 mm CP | 1 |
| | PT358-0025CP | L666X | | PT-Nozzle double, 2.5 mm/inner 1.5 mm CP | 1 |
| | PT358-0030CP | L667X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0035CP | L668X | | PT-Nozzle double, 3.5 mm/inner 1.5 mm CP | 1 |




Replacement parts suitable for: HK Laser & Systems®







Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|----------------------|------------|
| 1 | HW405-1010 | L1070 | NP10 | HW-Nozzle, 1.0 mm | 1 |
| | HW405-1012 | L1071 | NP12 | HW-Nozzle, 1.2 mm | 1 |
| | HW405-1015 | L1072 | NP15 | HW-Nozzle, 1.5 mm | 1 |
| | HW405-1017 | L1073 | NP17 | HW-Nozzle, 1.7 mm | 1 |
| | HW405-1020 | L1074 | NP20 | HW-Nozzle, 2.0 mm | 1 |
| | HW405-1025 | L1075 | NP25 | HW-Nozzle, 2.5 mm | 1 |
| | HW405-1030 | L1076 | NP30 | HW-Nozzle, 3.0 mm | 1 |
| | HW405-3010 | L1490 | NP10 | HW-Nozzle NP, 1.0 mm | 1 |
| | HW405-3012 | L1491 | NP12 | HW-Nozzle NP, 1.2 mm | 1 |
| 2 | HW405-3015 | L1492 | NP15 | HW-Nozzle NP, 1.5 mm | 1 |
| | HW405-3020 | L1493 | NP20 | HW-Nozzle NP, 2.0 mm | 1 |
| | HW405-3025 | L1494 | NP25 | HW-Nozzle NP, 2.5 mm | 1 |







Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|-----|--------------------------|-----------------------|---------------------|----------------------------|------------|
| 1 | HW405-1201 | AL420 | HCH-S01201 | HW-Nozzle holder, ceramic | 1 |
| | HW405-2008 | L1482 | NP08, MX-0988 | HW-Nozzle N, 0.8 mm | 1 |
| | HW405-2010 | L1483 | NP10, MX-0989 | HW-Nozzle N, 1.0 mm | 1 |
| | HW405-2012 | L1484 | NP12, MX-0990 | HW-Nozzle N, 1.2 mm | 1 |
| 2 | HW405-2015 | L1485 | NP15, MX-0991 | HW-Nozzle N, 1.5 mm | 1 |
| | HW405-2018 | L1487 | NP18, MX-0993 | HW-Nozzle N, 1.8 mm | 1 |
| | HW405-2020 | L1486 | NP20, MX-0992 | HW-Nozzle N, 2.0 mm | 1 |
| | HW405-2025 | L1488 | NP25, MX-0994 | HW-Nozzle N, 2.5 mm | 1 |
| | HW405-2030 | L1489 | NP30, MX-0995 | HW-Nozzle N, 3.0 mm | 1 |
| | HW405-4010 | L1521 | TP10 | HW-Nozzle double N, 1.0 mm | 1 |
| | HW405-4015 | L1522 | TP15, HCH-TP1515 | HW-Nozzle double N, 1.5 mm | 1 |
| , n | HW405-4020 | L1523 | TP20, HCH-TP1520 | HW-Nozzle double N, 2.0 mm | 1 |
| 3 | HW405-4025 | L1524 | TP25, HCH-TP1525 | HW-Nozzle double N, 2.5 mm | 1 |
| | HW405-4030 | L1526 | TP30, HCH-TP2030 | HW-Nozzle double N, 3.0 mm | 1 |
| | HW405-4040 | L1525 | TP40 | HW-Nozzle double N, 4.0 mm | 1 |



HK Laser & Systems®

Optics

| Centricut part number | Reference number | Туре | | Focal length | Edge thickness |
|--------------------------|---------------------|------|------|-----------------|-------------------|
| Lenses | | | | | |
| HW405-5270 | 355270 | MEN | 2.0" | 5.0" | .378" |
| HW405-7143 | 527143 | MEN | 2.0" | 7.5" | .378" |
| HW405-4913 | 114913 | MEN | 2.0" | 10" | .378" |


| Centricut part number | Reference number | Туре | Diameter | Edge thickness | | |
|--------------------------|--------------------------------|------|----------|-------------------|--|--|
| Windows | | | | | | |
| PT317-1551 | P0595-61551, P0595-58601-61551 | FS | 37.00 mm | 7.00 mm | | |


Optics care

| Centricut | Reference | | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



Laser Lab®





Consumables

| | | Esse A part number | Reference number | Description | Pkg qty |
|---|----------------|-----------------------|---------------------|-------------------|------------|
| | LL340-210T | L510 | 03-210T | LL-Nozzle, 1.0 mm | 1 |
| 1 | LL340-220T | L514 | 03-220T | LL-Nozzle, 2.0 mm | 1 |
| | LL340-230T | L516 | 03-230T | LL-Nozzle, 3.0 mm | 1 |
| 0 | LL341-2293-0.5 | L518 | 01-2293 | LL-Nozzle, 0.5 mm | 1 |
| 2 | LL341-2293-1.2 | L520 | 00-2293 | LL-Nozzle, 1.2 mm | 1 |

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|-----------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| LL342-1819 | 166634, 61819 | MEN | 1.1" | 5.0" | .236" |
| LL342-1014 | 61014, 406294, 658108 | MEN | 1.5" | 5.0" | .290" |
| LL342-1171 | 61171 | MEN | 1.5" | 7.5" | .300" |

Optics care

| Centricut | Reference | | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



 $LVD^{\mathbb{R}}$

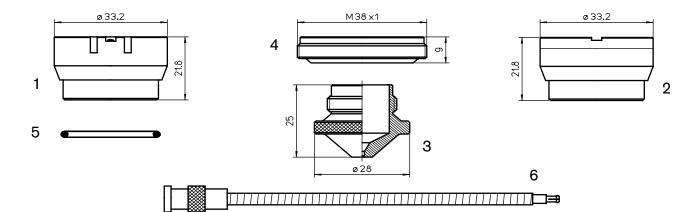


Consumables


| | Centricut | Esse A | Reference | | Pkg |
|-----|---------------|-------------|-----------------------------------|--|-----|
| | part number | part number | number | Description | qty |
| 1 | PT311-1146 | AL130/S | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ | 1 |
| | PT311-11460EM | AL130 | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ OEM | 1 |
| 2 | PT311-0298 | AL298 | P0497-68871 | PT-Nozzle holder KTM 1.5" DXN, Ceramic | 1 |
| | LV332-1993V | L20757 | D5241993 | LV-Nozzle cylindrical, 0.8 mm (5 pk)* | 5 |
| | LV332-5470V | L20141 | D7945470 | LV-Nozzle cylindrical, 1.0 mm (5 pk)* | 5 |
| | LV332-0001V | L20758 | D5241982 | LV-Nozzle cylindrical, 1.2 mm (5 pk)* | 5 |
| | LV332-5434V | L20142 | D7945434 | LV-Nozzle cylindrical, 1.5 mm (5 pk)* | 5 |
| | LV332-5452V | L20143 | D7945452 | LV-Nozzle cylindrical, 2.0 mm (5 pk)* | 5 |
| | LV332-5517V | L20144 | D7945517 | LV-Nozzle cylindrical, 2.5 mm (5 pk)* | 5 |
| , . | LV332-5518V | L20145 | | LV-Nozzle cylindrical, 3.0 mm (5 pk)* | 5 |
| 3 | LV332-1993CPV | L20757X | D5241993 | LV-Nozzle cylindrical, 0.8 mm CP (5 pk)* | 5 |
| | LV332-5470CPV | L20141X | D7945470 | LV-Nozzle cylindrical, 1.0 mm CP (5 pk)* | 5 |
| | LV332-0001CPV | L20758X | D5241982 | LV-Nozzle cylindrical, 1.2 mm CP (5 pk)* | 5 |
| | LV332-5434CPV | L20142X | D7945434 | LV-Nozzle cylindrical, 1.5 mm CP (5 pk)* | 5 |
| | LV332-5452CPV | L20143X | D7945452 | LV-Nozzle cylindrical, 2.0 mm CP (5 pk)* | 5 |
| | LV332-5517CPV | L20144X | D7945517 | LV-Nozzle cylindrical, 2.5 mm CP (5 pk)* | 5 |
| | LV332-5518CPV | L20145X | | LV-Nozzle cylindrical, 3.0 mm CP (5 pk)* | 5 |
| | PT347-4297 | AL198 | P0492-702-00001, 29100021 | PT-Insulating ring outer body | 1 |
| 4 | PT311-0001 | AL201 | P0492-702-00002 | PT-Insulating ring | 1 |
| 5 | AM326-6453 | AL94 | 71366453 | AM-O-ring for outer nozzle | 1 |
| | PT347-0101 | AL204 | P0360-100-00500, 46713300100 | PT-Sensor head connecting cable OEM | 1 |
| 6 | PT347-0450 | AL202 | P0497-002-00450 | PT-Sensor cable, 450 mm (17.7") | 1 |

*Available in single packs. To order single packs, remove the 'V' at the end of the part number (e.g. LV123-4567V would be LV123-4567).










Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|-----------------------|---|-----|
| | part number | part number | number | Description | qty |
| | LV332-1863V | L20151 | D5241863 | LV-Nozzle conical HD, 1.0 mm (5 pk)* | 5 |
| | LV332-1982V | L20759 | | LV-Nozzle conical HD, 1.2 mm (5 pk)* | 5 |
| | LV332-1862V | L20152 | D5241862 | LV-Nozzle conical HD, 1.5 mm (5 pk)* | 5 |
| | LV332-2512V | L20748 | D5242512 | LV-Nozzle conical HD, 1.7 mm (5 pk)* | 5 |
| | LV332-1855V | L20146 | D5241855 | LV-Nozzle conical HD, 2.0 mm (5 pk)* | 5 |
| | LV332-2513V | L20749 | D5242513, Z000000539D | LV-Nozzle conical HD, 2.3 mm (5 pk)* | 5 |
| | LV332-1856V | L20147 | D5241856, Z000000563B | LV-Nozzle conical HD, 2.5 mm (5 pk)* | 5 |
| | LV332-1857V | L20148 | D5241857, Z000000540B | LV-Nozzle conical HD, 3.0 mm (5 pk)* | 5 |
| | LV332-1877V | L20149 | D5241877, Z000000564B | LV-Nozzle conical HD, 3.5 mm (5 pk)* | 5 |
| | LV332-1878V | L20283 | D5241878, Z000000565B | LV-Nozzle conical HD, 4.0 mm (5 pk)* | 5 |
| | LV332-2531V | L201303 | D5242531, Z000000566B | LV-Nozzle conical HD, 4.5 mm (5 pk)* | 5 |
| 1 | LV332-2535V | L201304 | D5242535, Z000000567B | LV-Nozzle conical HD, 5.0 mm (5 pk)* | 5 |
| | LV332-2536V | L201305 | D5242536, Z000000568B | LV-Nozzle conical HD, 6.0 mm (5 pk)* | 5 |
| | LV332-1863CPV | L20151X | D5241863 | LV-Nozzle conical HD, 1.0 mm CP (5 pk)* | 5 |
| | LV332-1982CPV | L20759X | | LV-Nozzle conical HD, 1.2 mm CP (5 pk)* | 5 |
| | LV332-1862CPV | L20152X | D5241862 | LV-Nozzle conical HD, 1.5 mm CP (5 pk)* | 5 |
| | LV332-2512CPV | L20748X | D5242512 | LV-Nozzle conical HD, 1.7 mm CP (5 pk)* | 5 |
| | LV332-1855CPV | L20146X | D5241855 | LV-Nozzle conical HD, 2.0 mm CP (5 pk)* | 5 |
| | LV332-2513CPV | L20749X | D5242513 | LV-Nozzle conical HD, 2.3 mm CP (5 pk)* | 5 |
| | LV332-1856CPV | L20147X | D5241856 | LV-Nozzle conical HD, 2.5 mm CP (5 pk)* | 5 |
| | LV332-1857CPV | L20148X | D5241857 | LV-Nozzle conical HD, 3.0 mm CP (5 pk)* | 5 |
| | LV332-1877CPV | L20149X | D5241877 | LV-Nozzle conical HD, 3.5 mm CP (5 pk)* | 5 |
| | LV332-1878CPV | L20283X | D5241878 | LV-Nozzle conical HD, 4.0 mm CP (5 pk)* | 5 |
| _ | LV332-2453 | L152-S | D5242453A | LV-Nozzle HD, 1.5 mm | 1 |
| 2 | LV332-2416 | L147-S | D5242416A | LV-Nozzle HD, 2.5 mm | 1 |

*Available in single packs. To order single packs, remove the 'V' at the end of the part number (e.g. LV123-4567V would be LV123-4567).



LVD®

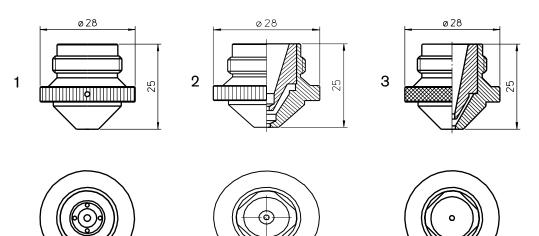

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|-----|--------------------------|-----------------------|---------------------|---|------------|
| | LV332-0013 | L1290 | G8040180 | LV-Nozzle double w/spring, 2.5 mm/inner 1.3 mm | 45 1 |
| | LV332-0180 | L1291 | G8040135 | LV-Nozzle double w/spring, 2.5 mm/inner 1.5 mm | 1 |
| | LV332-3013 | L1293 | G8040182 | LV-Nozzle double w/spring, 3.0 mm/inner 1.3 mm | 1 |
| | LV332-3015 | L1294 | | LV-Nozzle double w/spring, 3.0 mm/inner 1.5 mm | 1 |
| | LV332-0132 | L1292 | G8040132 | LV-Nozzle double w/spring, 3.0 mm/inner 2.0 mm | 1 |
| 1 | LV332-0013CP | L1290X | G8040180 | LV-Nozzle double w/spring, 2.5 mm/inner 1.3 mm CP | 1 |
| | LV332-0180CP | L1291X | G8040135 | LV-Nozzle double w/spring, 2.5 mm/inner 1.5 mm CP | 1 |
| | LV332-3013CP | L1293X | G8040182 | LV-Nozzle double w/spring, 3.0 mm/inner 1.3 mm CP | 1 |
| | LV332-3015CP | L1294X | | LV-Nozzle double w/spring, 3.0 mm/inner 1.5 mm CP | 1 |
| | LV332-0132CP | L1292X | G8040132 | LV-Nozzle double w/spring, 3.0 mm/inner 2.0 mm CP | 1 |
| | LV417-0002 | L782 | | LV-Nozzle double, 1.2 mm | 1 |
| | LV417-0003 | L784 | 29100304 | LV-Nozzle double, 1.5 mm | 1 |
| | LV417-0004 | L785 | 29100307 | LV-Nozzle double, 2.0 mm | 1 |
| | LV410-0180 | L786 | 29100305 | LV-Nozzle double, 2.5 mm | 1 |
| | LV417-0006 | L787 | 29100306 | LV-Nozzle double, 3.0 mm | 1 |
| | LV417-0007 | L788 | | LV-Nozzle double, 3.5 mm | 1 |
| 2 | LV417-0008 | L789 | | LV-Nozzle double, 4.0 mm | 1 |
| | LV417-0002CP | L782X | | LV-Nozzle double, 1.2 mm CP | 1 |
| | LV417-0003CP | L784X | | LV-Nozzle double, 1.5 mm CP | 1 |
| | LV417-0004CP | L785X | | LV-Nozzle double, 2.0 mm CP | 1 |
| | LV417-0005CP | L786X | | LV-Nozzle double, 2.5 mm CP | 1 |
| | LV417-0006CP | L787X | | LV-Nozzle double, 3.0 mm CP | 1 |
| | LV417-0007CP | L788X | | LV-Nozzle double, 3.5 mm CP | 1 |
| | LV332-1297 | L885 | Z000001297 | LV-Nozzle double, 4.0 mm/inner 2.0 mm | 1 |
| , , | LV332-1344 | L886 | Z000001344 | LV-Nozzle double, 5.0 mm/inner 2.0 mm | 1 |
| 3 | LV332-0130 | L791 | Z00000223A | LV-Nozzle double, 3.0 mm/inner 1.7 mm | 1 |
| | LV332-0131 | L790 | G8040131 | LV-Nozzle double, 3.0 mm/inner 2.0 mm | 1 |



Replacement parts suitable for: $LVD^{\mathbb{R}}$

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness | |
|-----------------------------|---------------------|------|----------|-----------------|-------------------|--|
| Lenses | | | | | | |
| LV333-0023 | 29100023 | MEN | 1.5" | 5.0" | .290" | |
| LV333-0176 | 480176 | MEN | 1.75" | 5.0" | .354" | |
| LV333-6326 | 206326 | MEN | 2.0" | 5.0" | .354" | |
| LV333-1004 | 458138 | MEN | 2.0" | 5.0" | .380" | |
| LV333-1005 | 291005-5 | MEN | 2.0" | 7.5" | .380" | |
| LV333-1551 | 981551 | MEN | 2.0" | 10.0" | .378" | |
| Ultra low absorption lenses | | | | | | |
| LV333-0023MP5 | 29100023 | MEN | 1.5" | 5.0" | .290" | |
| LV333-1005MP5 | 291005-5 | MEN | 1.5" | 7.5" | .380" | |


Optics care


| Centricut | Reference | Description | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |





Replacement parts suitable for: $Mazak^{\texttt{R}}$











ø25

20


3

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|-------------|-----------------------------|-----|
| | part number | part number | number | Description | qty |
| | MZ368-4430CP | L941X | | MZ-Nozzle, 1.0 mm CP | 1 |
| | MZ368-4470CP | L942X | 46143304470 | MZ-Nozzle, 1.2 mm CP | 1 |
| | MZ368-4450CP | L943X | 46143304450 | MZ-Nozzle, 1.5 mm CP | 1 |
| | MZ368-4455CP | L950X | | MZ-Nozzle, 1.8 mm CP | 1 |
| 1 | MZ368-4460CP | L944X | 46143304460 | MZ-Nozzle, 2.0 mm CP | 1 |
| | MZ368-4480CP | L945X | 46143304480 | MZ-Nozzle, 2.5 mm CP | 1 |
| | MZ368-4490CP | L946X | 46143304490 | MZ-Nozzle, 3.0 mm CP | 1 |
| | MZ368-4500CP | L947X | 46143304500 | MZ-Nozzle, 3.5 mm CP | 1 |
| | MZ368-4510CP | L948X | 46143304510 | MZ-Nozzle, 4.0 mm CP | 1 |
| | MZ373-0001 | L952X | | MZ-Nozzle double, 1.2 mm CP | 1 |
| | MZ368-0005CP | L953X | 46143306450 | MZ-Nozzle double, 1.5 mm CP | 1 |
| | MZ373-0003 | L954X | 46143306460 | MZ-Nozzle double, 2.0 mm CP | 1 |
| 2 | MZ373-0004 | L955X | 46143306480 | MZ-Nozzle double, 2.5 mm CP | 1 |
| | MZ373-0005 | L956X | 46143306490 | MZ-Nozzle double, 3.0 mm CP | 1 |
| | MZ373-0006 | L957X | 46143306500 | MZ-Nozzle double, 3.5 mm CP | 1 |
| | MZ373-0007 | L958X | 46143306510 | MZ-Nozzle double, 4.0 mm CP | 1 |
| | MZ427-0002 | L1265 | | MZ-Nozzle, 1.2 mm | 1 |
| 3 | MZ427-0003 | L1266 | | MZ-Nozzle, 1.5 mm | 1 |
| 3 | MZ427-0004 | L1267 | | MZ-Nozzle, 2.0 mm | 1 |
| | MZ427-0005 | L1268 | | MZ-Nozzle, 3.0 mm | 1 |
| 4 | MZ368-0740 | AL363 | 36143310740 | MZ-Nozzle holder | 1 |
| 5 | MZ368-0001 | AL242 | 36143304420 | MZ-Nozzle holder Hyper Gear | 1 |



Mazak®

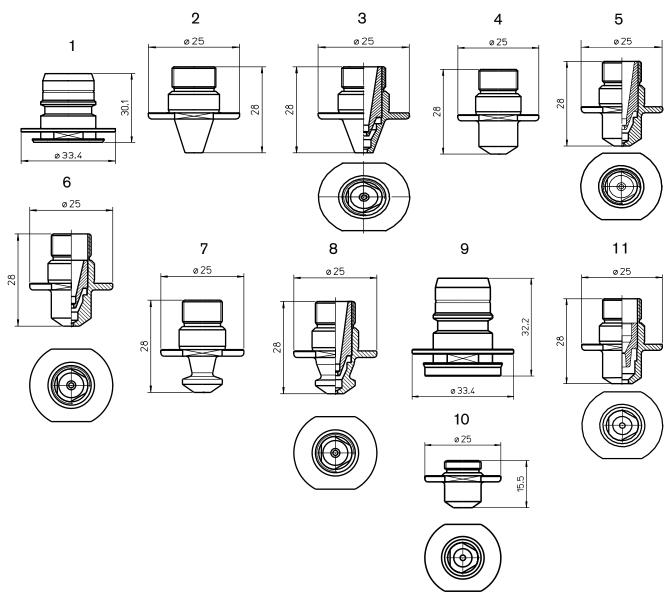

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------------------------|---------------------------|------------|
| 1 | MZ368-0522 | AL362 | 36143310522 | MZ-Nozzle holder | 1 |
| | MZ373-0308CP | L1379X | | MZ-Nozzle slim, 0.8 mm CP | 1 |
| | MZ373-0310CP | L1380X | | MZ-Nozzle slim, 1.0 mm CP | 1 |
| | MZ373-0341CP | L1381X | 46143310341, 46143310342, 46143310343 | MZ-Nozzle slim, 1.2 mm CP | 1 |
| | MZ373-0351CP | L1382X | 46143310351, 46143310352, 46143310353 | MZ-Nozzle slim, 1.5 mm CP | 1 |
| | MZ373-0318CP | L1389X | | MZ-Nozzle slim, 1.8 mm CP | 1 |
| 2 | MZ373-0361CP | L1383X | 46143310361, 46143310362, 46143310363 | MZ-Nozzle slim, 2.0 mm CP | 1 |
| | MZ373-0365CP | L1388X | | MZ-Nozzle slim, 2.2 mm CP | 1 |
| | MZ373-0371CP | L1384X | 46143310371, 46143310372, 46143310373 | MZ-Nozzle slim, 2.5 mm CP | 1 |
| | MZ373-0381CP | L1385X | 46143310381, 46143310382, 46143310383 | MZ-Nozzle slim, 3.0 mm CP | 1 |
| | MZ373-0391CP | L1386X | 46143310391, 46143310392, 46143310393 | MZ-Nozzle slim, 3.5 mm CP | 1 |
| | MZ373-0401CP | L1387X | 46143310401, 46143310402, 46143310403 | MZ-Nozzle slim, 4.0 mm CP | 1 |




Replacement parts suitable for: $Mazak^{\mathbb{R}}$

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|--------------|-------------|--------------------------|---|-----|
| | part number | part number | number | Description | qty |
| | MZ373-0300CP | L1390X | 36143311508 | MZ-Nozzle double slim, 0.8 mm CP | 1 |
| | MZ373-0311CP | L1391X | | MZ-Nozzle double slim, 1.0 mm CP | 1 |
| | MZ373-0312CP | L1399X | | MZ-Nozzle double slim, 1.2 mm CP | 1 |
| | MZ373-0315CP | L1392X | 36143311500 | MZ-Nozzle double slim, 1.5 mm CP | 1 |
| | MZ373-0319CP | L1400X | | MZ-Nozzle double slim, 1.8 mm CP | 1 |
| • | MZ373-0320CP | L1393X | 36143311510, 36143311512 | MZ-Nozzle double slim, 2.0 mm CP | 1 |
| 3 | MZ373-0322CP | L1398X | 36143311522 | MZ-Nozzle double slim, 2.2 mm CP | 1 |
| | MZ373-0325CP | L1394X | 36143311520, 36143311522 | MZ-Nozzle double slim, 2.5 mm CP | 1 |
| | MZ373-0330CP | L1395X | 36143311530, 36143311532 | MZ-Nozzle double slim, 3.0 mm CP | 1 |
| | MZ373-0335CP | L1396X | 36143311535, 36143312380 | MZ-Nozzle double slim, 3.5 mm CP | 1 |
| | MZ373-0340CP | L1397X | 36143312390 | MZ-Nozzle double slim, 4.0 mm CP | 1 |
| | MZ373-0350CP | L1512X | | MZ-Nozzle double slim, 5.0 mm CP | 1 |
| | MZ373-1580 | L1580X | | MZ-Nozzle pencil, 0.8 mm CP | 1 |
| | MZ373-1581 | L1581X | Q6143312210 | MZ-Nozzle pencil, 1.0 mm CP | 1 |
| | MZ373-1582 | L1582X | 36143312220 | MZ-Nozzle pencil, 1.2 mm CP | 1 |
| | MZ373-1583 | L1583X | 36143312230 | MZ-Nozzle pencil, 1.5 mm CP | 1 |
| | MZ373-1584 | L1584X | 06143300060 | MZ-Nozzle pencil, 1.8 mm CP | 1 |
| | MZ373-1585 | L1585X | 36143312240 | MZ-Nozzle pencil, 2.0 mm CP | 1 |
| | MZ373-1586 | L1586X | | MZ-Nozzle pencil, 2.2 mm CP | 1 |
| 4 | MZ373-1587 | L1587X | 36143312250 | MZ-Nozzle pencil, 2.5 mm CP | 1 |
| | MZ373-1588 | L1588X | 36143312260 | MZ-Nozzle pencil, 3.0 mm CP | 1 |
| | MZ373-1589 | L1589X | 36143312270 | MZ-Nozzle pencil, 3.5 mm CP | 1 |
| | MZ373-1590 | L1590X | 36143312280 | MZ-Nozzle pencil, 4.0 mm CP | 1 |
| | MZ373-1591 | L1591X | 6143355590 | MZ-Nozzle pencil, 4.5 mm CP | 1 |
| | MZ373-1592 | L1592X | 6283301030 | MZ-Nozzle pencil, 5.0 mm CP | 1 |
| | MZ373-1593 | L1593X | 6283301830 | MZ-Nozzle pencil, 5.5 mm CP | 1 |
| | MZ373-1600 | L1600X | 020301030 | MZ-Nozzle pencil, 0.8 mm CP | 1 |
| | MZ373-1601 | L1601X | | MZ-Nozzle double pencil, 0.0 mm CP | 1 |
| | MZ373-1602 | L1602X | Q6143300080 | MZ-Nozzle double pencil, 1.2 mm CP | 1 |
| | MZ373-1603 | L1603X | 36143312300 | MZ-Nozzle double pencil, 1.2 mm CP | 1 |
| | MZ373-1604 | L1604X | 36143312300 | | 1 |
| | | | | MZ-Nozzle double pencil, 1.8 mm CP | 1 |
| F | MZ373-1605 | L1605X | 36143312311 | MZ-Nozzle double pencil, 2.0 mm CP | 1 |
| 5 | MZ373-1606 | L1606X | 00140010000 | MZ-Nozzle double pencil, 2.2 mm CP | 1 |
| | MZ373-1607 | L1607X | 36143312320 | MZ-Nozzle double pencil, 2.5 mm CP | |
| | MZ373-1608 | L1608X | 36143312330 | MZ-Nozzle double pencil, 3.0 mm CP | 1 |
| | MZ373-1609 | L1609X | 36143312340 | MZ-Nozzle double pencil, 3.5 mm CP | |
| | MZ373-1610 | L1610X | 36143312350 | MZ-Nozzle double pencil, 4.0 mm CP | 1 |
| | MZ373-1611 | L1611X | Q6143312360 | MZ-Nozzle double pencil, 4.5 mm CP | 1 |
| | MZ373-1612 | L1612X | Q6143312370 | MZ-Nozzle double pencil, 5.0 mm CP | 1 |
| | MZ373-1614 | L1614X | | MZ-Nozzle double pencil, 4.0 mm/inner 1.2 mm CP | 1 |
| | MZ373-1615 | L1615X | 6143355360 | MZ-Nozzle double pencil, 4.0 mm/inner 1.4 mm CP | 1 |
| ~ | MZ373-1616 | L1616X | 6143355370 | MZ-Nozzle double pencil, 4.0 mm/inner 1.8 mm CP | 1 |
| 6 | MZ373-1617 | L1617X | 6283301050 | MZ-Nozzle double pencil, 4.5 mm/inner 1.2 mm CP | 1 |
| | MZ373-1618 | L1618X | 6283301200 | MZ-Nozzle double pencil, 5.0 mm/inner 1.2 mm CP | 1 |
| | MZ373-1619 | L1619X | 6283301210 | MZ-Nozzle double pencil, 5.5 mm/inner 1.2 mm CP | 1 |
| | MZ373-1686 | L1686X | 6283301840 | MZ-Nozzle double pencil, 5.5 mm/inner 2.0 mm CP | 1 |
| | MZ373-1790 | L1816X | 6283301790 | MZ-Nozzle pencil, 1.0 mm HP CP | 1 |
| 7 | MZ373-1800 | L1817X | 6283301800 | MZ-Nozzle pencil, 1.2 mm HP CP | 1 |
| | MZ373-1810 | L1818X | 6283301810 | MZ-Nozzle pencil, 1.5 mm HP CP | 1 |
| 8 | MZ373-1820 | L1829X | 6283301820 | MZ-Nozzle double pencil, 1.5 mm HP CP | 1 |
| | MZ373-1571 | L1571X | Q3143300010 | MZ-Nozzle double pencil SUS, 3.0 mm CP | 1 |
| | MZ373-1572 | L1572X | Q6143300020 | MZ-Nozzle double pencil SUS, 3.5 mm CP | 1 |
| 9 | MZ373-1573 | L1573X | Q6143300030 | MZ-Nozzle double pencil SUS, 4.0 mm CP | 1 |
| | MZ373-1574 | L1574X | Q6143300040 | MZ-Nozzle double pencil SUS, 4.5 mm CP | 1 |
| | MZ373-1575 | L1575X | Q6143300050 | MZ-Nozzle double pencil SUS, 5.0 mm CP | 1 |
| 10 | MZ373-0465 | AL465 | | MZ-Nozzle holder | 1 |
| | MZ373-0030 | L1890 | Q6283300030 | MZ-Nozzle double smooth, 6.0 mm | 1 |
| 11 | MZ373-0020 | L1891 | Q6283300020 | MZ-Nozzle double smooth, 7.5 mm | 1 |
| | MZ373-0010 | L1892 | Q6283300010 | MZ-Nozzle double smooth, 9.5 mm | 1 |



Mazak®

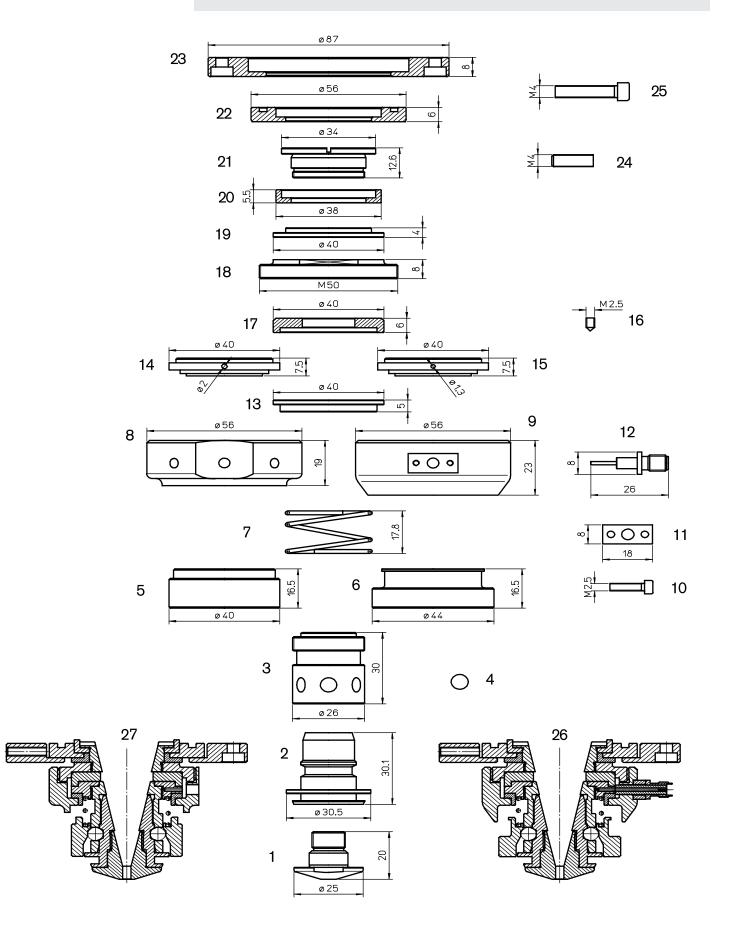



Replacement parts suitable for: Mazak®


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|--------------------------------------|-------------|--------------------------|---------------------------------------|-----|
| - | part number | part number | number | Description | qty |
| 1 | Please refer to the Mazak® nozzle se | 1 | 00140004400 | | - |
| 2 | MZ368-0001 | AL242 | 36143304420 | MZ-Nozzle holder Hyper Gear | 1 |
| 3 | MZ413-4400 | AL291 | 36143304400, 36143304401 | MZ-Coupler | 1 |
| 4 | MZ413-0230 | AL311 | 46143300230 | MZ-Ball kit replacement (6 pcs) | 1 |
| 5 | MZ413-4430 | AL292 | 46143304430, 46143304432 | MZ-Spring retainer | 1 |
| 6 | MZ413-8000 | AL314 | 46143308000 | MZ-Spring retainer, steel | 1 |
| 7 | MZ413-0220 | AL289 | 46143300220 | MZ-Spring | 1 |
| 8 | MZ413-3242 | AL293 | 36143303242 | MZ-Body | 1 |
| 9 | MZ413-7980 | AL313 | 36143307980 | MZ-Body, aluminum | 1 |
| 10 | MZ413-0030 | AL317 | 46603300030, A05GS002560 | MZ-Screw | 1 |
| 11 | MZ413-8170 | AL318 | 46143308170 | MZ-Spacer | 1 |
| 12 | MZ413-8190 | AL315 | 46143308190 | MZ-Connector | 1 |
| 13 | MZ408-0240 | AL284 | 46143300240 | MZ-Ring, ceramic | 1 |
| 13 | MZ413-0240 | AL384 | 46143300240 | MZ-Insulating, PTFE* | 1 |
| 14 | MZ413-4250 | AL287 | 46143304250 | MZ-Retainer nut | 1 |
| 15 | MZ413-7420 | AL295 | 46143307420, 46143307421 | MZ-Retainer nut | 1 |
| 16 | MZ413-1180 | AL322 | 46683301180 | MZ-Screw | 1 |
| 17 | MZ408-4440 | AL290 | 46143304440 | MZ-Ring, ceramic | 1 |
| 17 | MZ413-4440 | AL390 | 46143304440 | MZ-Insulating, PTFE* | 1 |
| 18 | MZ413-0290 | AL294 | 46143300290 | MZ-Retainer nut | 1 |
| 10 | MZ408-0260 | AL285 | 46143300260 | MZ-Ring, ceramic | 1 |
| 19 | MZ413-0260 | AL385 | 46143300260 | MZ-Insulating, PTFE* | 1 |
| 00 | MZ408-0270 | AL286 | 46143300270 | MZ-Ring, ceramic | 1 |
| 20 | MZ413-0270 | AL386 | 46143300270 | MZ-Insulating, PTFE* | 1 |
| 21 | MZ413-0280 | AL288 | 46143300280 | MZ-Retainer nut | 1 |
| 22 | MZ413-0320 | AL316 | 46143300320 | MZ-Ring, brass | 1 |
| | MZ413-0332 | AL320 | 36143300332 | MZ-Ring, aluminum | 1 |
| 23 | MZ413-0630 NEW | AL492 | 6283300630 | MZ-Ring, aluminum | 1 |
| | MZ413-0620 NEW | AL491 | 6283300620 | MZ-Ring, brass | 1 |
| 24 | MZ413-0010 | AL321 | | MZ-Screw (4 pcs) | 1 |
| 25 | MZ413-0200 | AL319 | A06CB040200, A06CB040160 | MZ-Set screw (4 pcs) | 1 |
| 26 | MZ413-0001 | TMA50/C | | MZ-Complete head (ceramic insulating) | 1 |
| 27 | MZ413-0002 | TMA40/C | | MZ-Complete head (ceramic insulating) | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.





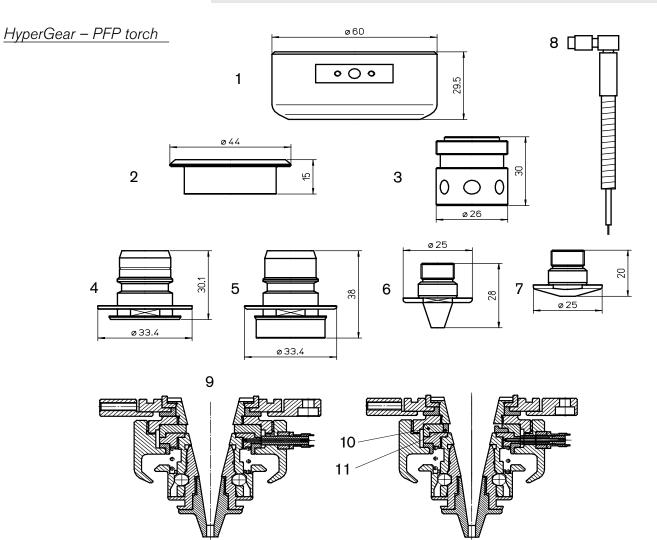

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|-------|---------------------------------------|-----------------------|---------------------|-----------------------------|------------|
| 1 | MZ368-0550 | AL365 | 36143310550 | MZ-Body, aluminum | 1 |
| 2 | MZ368-0541 | AL366 | 36143310541 | MZ-Retainer spring, steel | 1 |
| 3 | MZ368-0530 | AL367 | 36143310530 | MZ-Coupler | 1 |
| 4 | MZ368-0522 | AL362 | 36143310522 | MZ-Nozzle holder | 1 |
| 5 | MZ368-0740 | AL363 | 36143310740 | MZ-Nozzle holder | 1 |
| 6 | Please refer to the Mazak® slim nozz | e section | | | |
| 7 | Please refer to the Mazak® nozzle see | ction | | | |
| 8 | MZ335-8290 | AL368 | 46143308290 | MZ-Sensor cable, 75 mm (3") | 1 |
| 9 | MZ368-0060 | TMA60/C | | MZ-Head w/ceramic spacer | 1 |
| 10-11 | MZ368-2180 | AL463 | 46143312180 | MZ-Ring, 23x4 ceramic | 1 |
| 10-11 | MZ368-2170 | AL464 | 46143312170 | MZ-Ring 40x6, PPS | 1 |





Replacement parts suitable for: $Mazak^{\texttt{R}}$


2


3

4

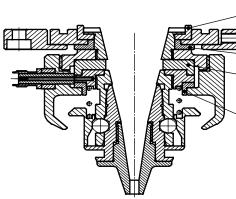

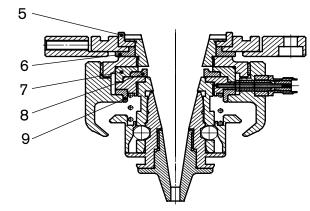

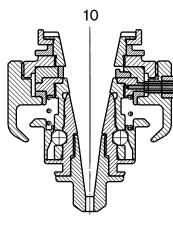

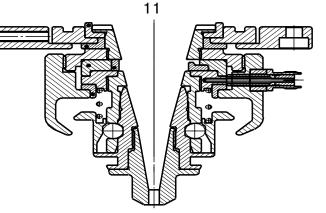


Consumables


| | Centricut | | Reference | | Pkg |
|----|-------------|-------------|-------------|--------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | MZ408-0270 | AL286 | 46143300270 | MZ-Ring, ceramic | 1 |
| | MZ413-0270 | AL386 | 46143300270 | MZ-Insulating, PTFE* | 1 |
| 2 | MZ408-0260 | AL285 | 46143300260 | MZ-Ring, ceramic | 1 |
| 2 | MZ413-0260 | AL385 | 46143300260 | MZ-Insulating, PTFE* | 1 |
| 3 | MZ408-4440 | AL290 | 46143304440 | MZ-Ring, ceramic | 1 |
| J | MZ413-4440 | AL390 | 46143304440 | MZ-Insulating, PTFE* | 1 |
| 4 | MZ408-0240 | AL284 | 46143300240 | MZ-Ring, ceramic | 1 |
| 4 | MZ413-0240 | AL384 | 46143300240 | MZ-Insulating, PTFE* | 1 |
| 5 | MZ368-2100 | AL486 | 46143312100 | MZ-Insulating ring, 38x5.5 PPS | 1 |
| 6 | MZ368-2130 | AL485 | 46143312130 | MZ-Insulating ring, 40x4 PPS | 1 |
| 7 | MZ368-2080 | AL490 | 46143312080 | MZ-Spacer 40x6, PPS | 1 |
| 8 | MZ368-2090 | AL487 | 46143312090 | MZ-Ring, 30x3 ceramic | 1 |
| 9 | MZ368-2120 | AL484 | 46143312120 | MZ-Insulating ring, 40x5 PPS | 1 |
| 10 | MZ368-0085 | TMA85 | | MZ-Head w/PPS spacer | 1 |
| 11 | MZ368-0080 | TMA80 | | MZ-Head w/PPS spacer | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.










Consumables


| | Centricut | Esse A | Reference | | Pkg | | | |
|---|----------------|-------------|-----------------|-------------------------------|-----|--|--|--|
| | part number | part number | number | Description | qty | | | |
| | MZ322-0008X | L3078 | 46603350508 | MZ-Nozzle, 0.8 mm (10 pk)* | 10 | | | |
| | MZ322-0511-1.0 | L69 | 46603350511 | MZ-Nozzle, 1.0 mm | 1 | | | |
| | MZ322-0511X | L3069 | 46603350511 | MZ-Nozzle, 1.0 mm (10 pk) | 10 | | | |
| | MZ322-0512-1.2 | L77 | 46603350512 | MZ-Nozzle, 1.2 mm | 1 | | | |
| | MZ322-0512X | L3077 | 46603350512 | MZ-Nozzle, 1.2 mm (10 pk) | 10 | | | |
| | MZ322-0520-1.5 | L127 | 4660335052B | MZ-Nozzle, 1.5 mm | 1 | | | |
| | PT322-0520X | L30127 | 4660335052B | PT-Nozzle, 1.5 mm (10 pk) | 10 | | | |
| | MZ322-1517X | L3079 | 46603350517 | MZ-Nozzle, 1.7 mm (10 pk)* | 10 | | | |
| | MZ322-0517X | L30281 | 46603350517-1,8 | MZ-Nozzle, 1.8 mm (10 pk) | 10 | | | |
| 1 | MZ322-0522-2.0 | L80 | 4660335052C | MZ-Nozzle, 2.0 mm | 1 | | | |
| | MZ322-0522X | L3080 | 4660335052C | MZ-Nozzle, 2.0 mm (10 pk) | 10 | | | |
| | MZ322-0022X | L30282 | 46603350522-2,2 | MZ-Nozzle, 2.2 mm (10 pk)* | 10 | | | |
| | MZ322-0525-2.5 | L124 | 46603350525 | MZ-Nozzle, 2.5 mm | 1 | | | |
| | MZ322-0025X | L30124 | 46603350525 | MZ-Nozzle, 2.5 mm (10 pk) | 10 | | | |
| | MZ322-0530-3.0 | L150 | 46603350530 | MZ-Nozzle, 3.0 mm | 1 | | | |
| | MZ322-0030X | L30150 | 46603350530 | MZ-Nozzle, 3.0 mm (10 pk) | 10 | | | |
| | MZ322-0530-3.5 | L708 | 46603350530-3.5 | MZ-Nozzle, 3.5 mm | 1 | | | |
| | MZ322-1035X | L30708 | 46603350530-3,5 | MZ-Nozzle, 3.5 mm (10 pk) | 10 | | | |
| | MZ322-0530-4.0 | L709 | 46603350530-4,0 | MZ-Nozzle, 4.0 mm | 1 | | | |
| | MZ322-1040X | L30709 | 46603350530-4,0 | MZ-Nozzle, 4.0 mm (10 pk) | 10 | | | |
| | MZ322-0511CPX | L3069X | 46603350511 | MZ-Nozzle, 1.0 mm CP (10 pk)* | 10 | | | |
| | MZ322-0512CPX | L3077X | 46603350512 | MZ-Nozzle, 1.2 mm CP (10 pk)* | 10 | | | |
| | PT322-0520CPX | L30127X | 4660335052B | PT-Nozzle, 1.5 mm CP (10 pk)* | 10 | | | |
| | MZ322-1517CPX | L3079X | 46603350517 | MZ-Nozzle, 1.7 mm CP (10 pk)* | 10 | | | |
| 2 | MZ322-0522CPX | L3080X | 4660335052C | MZ-Nozzle, 2.0 mm CP (10 pk)* | 10 | | | |
| | MZ322-0025CPX | L30124X | 46603350525 | MZ-Nozzle, 2.5 mm CP (10 pk)* | 10 | | | |
| | MZ322-0030CPX | L30150X | 46603350530 | MZ-Nozzle, 3.0 mm CP (10 pk)* | 10 | | | |
| | MZ322-1035CPX | L30708X | 46603350530-3,5 | MZ-Nozzle, 3.5 mm CP (10 pk)* | 10 | | | |
| | MZ322-1040CPX | L30709X | 46603350530-4,0 | MZ-Nozzle, 4.0 mm CP (10 pk)* | 10 | | | |
| | 1 | | 1 | | | | | |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: Mazak[®]





Consumables


| Centricut | Esse A | Reference | | Pkg |
|-----------------|-------------|--------------------------|--------------------------------------|-----|
| part number | part number | number | Description | qty |
| MZ346-0001X | L30615 | | MZ-Nozzle double, 1.0 mm (10 pk)** | 10 |
| MZ346-0002X | L30616 | | MZ-Nozzle double, 1.2 mm (10 pk)* | 10 |
| MZ346-0003X | L30617 | 46683302400 | MZ-Nozzle double, 1.5 mm (10 pk)* | 10 |
| MZ346-0004X | L30618 | | MZ-Nozzle double, 1.7 mm (10 pk)* | 10 |
| MZ346-0005X | L30619 | | MZ-Nozzle double, 1.8 mm (10 pk)* | 10 |
| MZ346-0006X | L30620 | 46683302390 | MZ-Nozzle double, 2.0 mm (10 pk)* | 10 |
| MZ346-0007X | L30621 | | MZ-Nozzle double, 2.2 mm (10 pk)* | 10 |
| MZ346-0008X | L30622 | 46683302400 | MZ-Nozzle double, 2.5 mm (10 pk)* | 10 |
| MZ346-0009X | L30623 | 46683302410 | MZ-Nozzle double, 3.0 mm (10 pk)* | 10 |
| MZ346-0002CPX | L30616X | | MZ-Nozzle double, 1.2 mm CP (10 pk)* | 10 |
| MZ346-0003CPX | L30617X | | MZ-Nozzle double, 1.5 mm CP (10 pk)* | 10 |
| MZ346-0004CPX | L30618X | | MZ-Nozzle double, 1.7 mm CP (10 pk)* | 10 |
| MZ346-0006CPX | L30620X | | MZ-Nozzle double, 2.0 mm CP (10 pk)* | 10 |
| MZ346-0007CPX | L30621X | | MZ-Nozzle double, 2.2 mm CP (10 pk)* | 10 |
| MZ346-0008CPX | L30622X | | MZ-Nozzle double, 2.5 mm CP (10 pk)* | 10 |
| MZ346-0009CPX | L30623X | | MZ-Nozzle double, 3.0 mm CP (10 pk)* | 10 |
| MZ321-0521-0.8 | L266 | 46603350521 | MZ-Nozzle, 0.8 mm | 1 |
| MZ321-0008X | L30266 | 46603350521 | MZ-Nozzle, 0.8 mm (10 pk) | 10 |
| MZ321-0521-1.0 | L250 | 46603350521 | MZ-Nozzle, 1.0 mm | 1 |
| MZ321-0010X | L30250 | 46603350521 | MZ-Nozzle, 1.0 mm (10 pk) | 10 |
| MZ321-0521-1.2 | L251 | 46603350521 | MZ-Nozzle, 1.2 mm | 1 |
| MZ321-0012X | L30251 | 46603350521 | MZ-Nozzle, 1.2 mm (10 pk) | 10 |
| MZ321-0520-1.5 | L252 | 46603350520 | MZ-Nozzle, 1.5 mm | 1 |
| MZ321-0520X | L30252 | 46603350520 | MZ-Nozzle, 1.5 mm (10 pk) | 10 |
| M321-0521-1.7 | L253 | | MZ-Nozzle, 1.7 mm | 1 |
| MZ321-0017X | L30253 | 46603350521 | MZ-Nozzle, 1.7 mm (10 pk) | 10 |
| MZ321-0522-2.0 | L254 | 46603350522, 46683301721 | MZ-Nozzle, 2.0 mm | 1 |
| MZ321-0054X | L30254 | 46603350522 | MZ-Nozzle, 2.0 mm (10 pk) | 10 |
| MZ321-0522-2.5 | L770 | 46603350522 | MZ-Nozzle, 2.5 mm | 1 |
| MZ321-1025X | L30770 | 46603350522 | MZ-Nozzle, 2.5 mm (10 pk) | 10 |
| MZ321-0522-3.0 | L771 | 46683301281 | MZ-Nozzle, 3.0 mm | 1 |
| MZ321-1030X | L30771 | 46683301281 | MZ-Nozzle, 3.0 mm (10 pk) | 10 |
| MZ321-0012CPX | L30251X | 46603350521 | MZ-Nozzle, 1.2 mm CP (10 pk) | 10 |
| MZ321-520-1.5CP | L252X | 46603350520 | MZ-Nozzle, 1.5 mm CP | 1 |
| MZ321-0520CPX | L30252X | 46603350520 | MZ-Nozzle, 1.5 mm CP (10 pk) | 10 |
| MZ321-522-2.0CP | L254X | 46603350522 | MZ-Nozzle, 2.0 mm CP | 1 |
| MZ321-0054CPX | L30254X | 46603350522 | MZ-Nozzle, 2.0 mm CP (10 pk) | 10 |
| MZ321-522-2.5CP | L770X | 46603350522 | MZ-Nozzle, 2.5 mm CP | 1 |
| MZ321-1025CPX | L30770X | 46603350522 | MZ-Nozzle, 2.5 mm CP (10 pk) | 10 |
| MZ321-522-3.0CP | L771X | 46683301281 | MZ-Nozzle, 3.0 mm CP | 1 |
| MZ321-1030CPX | L30771X | 46683301281 | MZ-Nozzle, 3.0 mm CP (10 pk) | 10 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)

Centricut[®]

Replacement parts suitable for:








Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|-----------------|---|-----|
| | part number | part number | number | Description | qty |
| | MZ385-0508X | L30725 | 46603350508 | MZ-Nozzle hexagonal, 0.8 mm (10 pk)* | 10 |
| | MZ385-0511X | L30726 | 46603350511 | MZ-Nozzle hexagonal, 1.0 mm (10 pk)* | 10 |
| | MZ385-5052X | L30727 | 4660335052A | MZ-Nozzle hexagonal, 1.2 mm (10 pk)* | 10 |
| | MZ385-5052BX | L30728 | 4660335052B | MZ-Nozzle hexagonal, 1.5 mm (10 pk)* | 10 |
| | MZ385-0517X | L30729 | 46603350517 | MZ-Nozzle hexagonal, 1.7 mm (10 pk)* | 10 |
| 1 | MZ385-517X | L30730 | 46603350517-1,8 | MZ-Nozzle hexagonal, 1.8 mm (10 pk)* | 10 |
| | MZ385-5052CX | L30731 | 4660335052C | MZ-Nozzle hexagonal, 2.0 mm (10 pk)* | 10 |
| | MZ385-0522X | L30732 | 46603350522-2,2 | MZ-Nozzle hexagonal, 2.2 mm (10 pk)* | 10 |
| | MZ385-0003X | L30733 | 4660335052D | MZ-Nozzle hexagonal, 2.5 mm (10 pk)* | 10 |
| | MZ385-1003X | L30734 | 46603350530 | MZ-Nozzle hexagonal, 3.0 mm (10 pk)* | 10 |
| | MZ385-0530X | L30736 | 46603350530-4,0 | MZ-Nozzle hexagonal, 4.0 mm (10 pk)* | 10 |
| | MZ385-0511CPX | L30726X | 46603350511 | MZ-Nozzle hexagonal, 1.0 mm CP (10 pk)* | 10 |
| | MZ385-5052CPX | L30727X | 4660335052A | MZ-Nozzle hexagonal, 1.2 mm CP (10 pk)* | 10 |
| | MZ385-052CPX | L30728X | 4660335052B | MZ-Nozzle hexagonal, 1.5 mm CP (10 pk)* | 10 |
| | MZ385-0052CPX | L30731X | 4660335052C | MZ-Nozzle hexagonal, 2.0 mm CP (10 pk)* | 10 |
| 2 | MZ385-0522CPX | L30732X | 46603350522-2,2 | MZ-Nozzle hexagonal, 2.2 mm CP (10 pk)* | 10 |
| | MZ385-0003CPX | L30733X | 4660335052D | MZ-Nozzle hexagonal, 2.5 mm CP (10 pk)* | 10 |
| | MZ385-1003CPX | L30734X | 46603350530 | MZ-Nozzle hexagonal, 3.0 mm CP (10 pk)* | 10 |
| | MZ385-0030CPX | L30735X | 46603350530-3,5 | MZ-Nozzle hexagonal, 3.5 mm CP (10 pk)* | 10 |
| | MZ385-0530CPX | L30736X | 46603350530-4,0 | MZ-Nozzle hexagonal, 4.0 mm CP (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)






Consumables

| | Centricut part number | | Reference number | Description | Pkg qty |
|---|--------------------------|----------|---------------------|--|------------|
| | MZ419-0001X | L301223 | | MZ-Nozzle double hexagonal, 1.2 mm (10 pk)* | 10 |
| | MZ419-0002X | L301224 | | MZ-Nozzle double hexagonal, 1.5 mm (10 pk)* | 10 |
| | MZ419-0003X | L301225 | | MZ-Nozzle double hexagonal, 1.8 mm (10 pk)* | 10 |
| | MZ419-0004X | L301226 | | MZ-Nozzle double hexagonal, 2.0 mm (10 pk)* | 10 |
| | MZ419-0005X | L301227 | | MZ-Nozzle double hexagonal, 2.2 mm (10 pk)* | 10 |
| 1 | MZ419-0006X | L301228 | | MZ-Nozzle double hexagonal, 2.5 mm (10 pk)* | 10 |
| | MZ419-0001CPX | L301223X | | MZ-Nozzle double hexagonal, 1.2 mm CP (10 pk)* | 10 |
| | MZ419-0002CPX | L301224X | | MZ-Nozzle double hexagonal, 1.5 mm CP (10 pk)* | 10 |
| | MZ419-0004CPX | L301226X | | MZ-Nozzle double hexagonal, 2.0 mm CP (10 pk)* | 10 |
| | MZ419-0006CPX | L301228X | | MZ-Nozzle double hexagonal, 2.5 mm CP (10 pk)* | 10 |
| | MZ419-0007CPX | L301229X | | MZ-Nozzle double hexagonal, 3.0 mm CP (10 pk)* | 10 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: $Mazak^{\mathbb{R}}$



ø 14





Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------|------------|
| | MZ322-0523 (not shown) | L492 | 46603350523 | MZ-Nozzle shower, 1.0 mm | 1 |
| 1 | MZ322-0523-1.5 | L493 | | MZ-Nozzle shower, 1.5 mm | 1 |
| | MZ322-0523-2.0 | L497 | | MZ-Nozzle shower, 2.0 mm | 1 |
| 0 | MZ322-0001 | L284 | | MZ-Nozzle long, 2.0 mm | 1 |
| Z | MZ322-0001CP | L284X | | MZ-Nozzle long, 2.0 mm CP | 1 |



Replacement parts suitable for: $Mazak^{\mathbb{R}}$



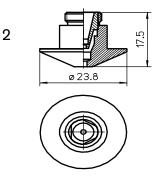


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|-------------|-----------------------------|-----|
| | part number | part number | number | Description | qty |
| | MZ335-0004 | L428 | | MZ-Nozzle, 1.0 mm | 1 |
| | MZ335-0011 | L423 | | MZ-Nozzle, 1.2 mm | 1 |
| | MZ335-1950 | L429 | 46683301950 | MZ-Nozzle, 1.5 mm | 1 |
| | MZ335-1821 | L430 | 46683301821 | MZ-Nozzle, 2.0 mm | 1 |
| | MZ335-1960 | L431 | 46683301960 | MZ-Nozzle, 2.5 mm | 1 |
| | MZ335-1970 | L432 | 46683301970 | MZ-Nozzle, 3.0 mm | 1 |
| | MZ335-0006 | L472 | | MZ-Nozzle, 3.5 mm | 1 |
| | MZ335-0013 | L473 | | MZ-Nozzle, 4.0 mm | 1 |
| 1 | MZ335-0014 | L474 | | MZ-Nozzle, 4.5 mm | 1 |
| ' | MZ335-0004CP | L428X | | MZ-Nozzle, 1.0 mm CP | 1 |
| | MZ335-0007CP | L423X | | MZ-Nozzle, 1.2 mm CP | 1 |
| | MZ335-1950CP | L429X | 46683301950 | MZ-Nozzle, 1.5 mm CP | 1 |
| | MZ335-1821CP | L430X | 46683301821 | MZ-Nozzle, 2.0 mm CP | 1 |
| | MZ335-1960CP | L431X | 46683301960 | MZ-Nozzle, 2.5 mm CP | 1 |
| | MZ335-1970CP | L432X | 46683301970 | MZ-Nozzle, 3.0 mm CP | 1 |
| | MZ335-0006CP | L472X | | MZ-Nozzle, 3.5 mm CP | 1 |
| | MZ335-0013CP | L473X | | MZ-Nozzle, 4.0 mm CP | 1 |
| | MZ335-0014CP | L474X | | MZ-Nozzle, 4.5 mm CP | 1 |
| | MZ360-0001 | L850 | | MZ-Nozzle double, 1.0 mm | 1 |
| | MZ360-0002 | L851 | | MZ-Nozzle double, 1.2 mm | 1 |
| | MZ360-0003 | L852 | 46683302420 | MZ-Nozzle double, 1.5 mm | 1 |
| | MZ360-0004 | L858 | | MZ-Nozzle double, 1.8 mm | 1 |
| | MZ360-0005 | L853 | 46683302430 | MZ-Nozzle double, 2.0 mm | 1 |
| | MZ360-0007 | L854 | 46683302440 | MZ-Nozzle double, 2.5 mm | 1 |
| 2 | MZ360-0008 | L855 | 46683302450 | MZ-Nozzle double, 3.0 mm | 1 |
| 2 | MZ360-0001CP | L850X | | MZ-Nozzle double, 1.0 mm CP | 1 |
| | MZ360-0002CP | L851X | | MZ-Nozzle double, 1.2 mm CP | 1 |
| | MZ360-0003CP | L852X | 46683302420 | MZ-Nozzle double, 1.5 mm CP | 1 |
| | MZ360-0005CP | L853X | 46683302430 | MZ-Nozzle double, 2.0 mm CP | 1 |
| | MZ360-0007CP | L854X | 46683302440 | MZ-Nozzle double, 2.5 mm CP | 1 |
| | MZ360-0008CP | L855X | 46683302450 | MZ-Nozzle double, 3.0 mm CP | 1 |
| | MZ360-0009CP | L856X | | MZ-Nozzle double, 3.5 mm CP | 1 |



Mazak®

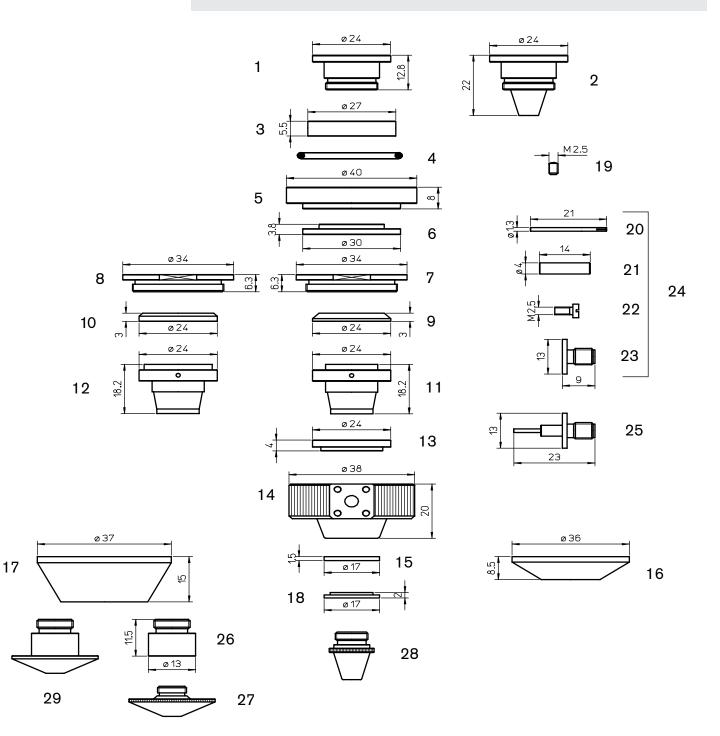

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----------|--------------------------|-----------------------|--------------------------|---------------------------|------------|
| 1 | MZ335-1110 | AL74 | 46683301110, 46773300500 | MZ-Bracket, copper | 1 |
| 2 | MZ335-0100 | AL112 | | MZ-Central body, copper | 1 |
| | MZ335-1080 | AL80 | 46683301080, 46683302081 | MZ-Spacer 27x5.5, PTFE* | 1 |
| 3 | MZ335-1080P | AL80/P | 46683301080, 46683302081 | MZ-Ring, plastic | 1 |
|) | MZ335-1080C | AL280 | 46683301080, 46683302081 | MZ-Ring, ceramic | 1 |
| | MZ335-1080M | ALM280 | 46683301080, 46683302081 | MZ-Spacer 27x5.5, ceramic | 1 |



Replacement parts suitable for: $Mazak^{\mathbb{R}}$


Consumables

| | Centricut | Esse A | Reference | | Pkg | | | |
|--------|---|-------------|--------------------------|--|-----|--|--|--|
| | part number | part number | number | Description | qty | | | |
| 4 | MZ309-3200 | AL97 | J2600S03200 | MZ-O-ring external base | 1 | | | |
| 5 | MZ335-1070 | AL84 | 46683301070 | MZ-Base, brass | 1 | | | |
| | MZ335-1090 | AL79 | 46683301090, 46683302091 | MZ-Spacer 30x4, PTFE* | 1 | | | |
| G | MZ335-0090C | AL79/P | 46683301090, 46683302091 | MZ-Spacer 30x4, special | 1 | | | |
| 6 | MZ335-1090C | AL279 | 46683301090, 46683302091 | MZ-Ring, ceramic | 1 | | | |
| | MZ335-1090M | ALM279 | 46683301090, 46683302091 | MZ-Spacer 30x4, ceramic | 1 | | | |
| 7 | MZ335-1100 | AL83 | 46683301100 | MZ-Bracket, copper | 1 | | | |
| 8 | MZ335-1101 | AL376 | 46773300510 | MZ-Nut, copper | 1 | | | |
| | MZ335-1120 | AL77 | 46683301120 | MZ-Spacer 24x3, PTFE* | 1 | | | |
| • | MZ335-1120LL | AL77/P | 46683301120 | MZ-Ring long life | 1 | | | |
| 9 | MZ335-1120C | AL277 | 46683301120 | MZ-Ring, ceramic | 1 | | | |
| | MZ335-1120M | ALM277 | 46683301120, 46773300710 | MZ-Spacer, 24x3, ceramic | 1 | | | |
| 10 | MZ335-0710 | AL377 | 46773300710 | MZ-Ring, ceramic | 1 | | | |
| 10 | MZ335-0710M | ALM377 | 46773300710 | MZ-Spacer 24x3, ceramic | 1 | | | |
| 11 | MZ335-0850 | AL75 | 46683300850 | MZ-Nozzle body, copper | 1 | | | |
| 12 | MZ335-0720 | AL253 | 46773300720, 46773300721 | MZ-Nozzle body, copper | 1 | | | |
| | MZ335-1130 | AL78 | 46683301130, 46683302111 | MZ-Spacer 24x4, PTFE* | 1 | | | |
| 10 | MZ335-1130LL | AL78/P | 46683301130 | MZ-Ring long life | 1 | | | |
| 13 | MZ335-1130C | AL278 | 46683301130 | MZ-Spacer, ceramic | 1 | | | |
| | MZ335-1130M | ALM278 | 46683301130 | MZ-Spacer 24x4, ceramic | 1 | | | |
| 14 | MZ335-1140 | AL73 | 46683301140, 36773300530 | MZ-Housing, aluminum | 1 | | | |
| 15 | MZ335-1150 | AL81 | 46683301150 | MZ-Spacer 17x1.5, PTFE* | 1 | | | |
| | MZ335-1930 | AL111 | 46683301930 | MZ-Nozzle body cover | 1 | | | |
| 16 | MZ335-1930LL | AL111/P | 46683301930P | MZ-Nozzle body cover, long life | 1 | | | |
| | MZ335-0009 | AL275 | 46683301930C | MZ-Protective cover, ceramic | 1 | | | |
| 17 | MZ335-1841 | AL118 | 46683301841 | MZ-Nozzle cover | 1 | | | |
| 18 | MZ335-1160 | AL82 | 46683301160 | MZ-Ring, 17x2, copper | 1 | | | |
| 19 | MZ335-1180 | AL119 | 46683301180 | MZ-Bolt | 1 | | | |
| 20 | MZ335-1170 | AL76 | 46683301170 | MZ-Contact | 1 | | | |
| 21 | MZ335-0030 | AL88 | | MZ-Connecting pipe, PTFE * | 1 | | | |
| 22 | MZ335-0000 | AL127 | 46683300000 | MZ-Screws for connector kit MZ335-0001 (4 pcs) | 4 | | | |
| 23 | MZ335-1113 | AL113 | 46683301170 | MZ-Connector | 1 | | | |
| 24 | MZ335-0001 | AL154 | 46683301170 | MZ-Connector kit | 1 | | | |
| 25 | MZ335-0001A | AL213 | 46683301171 | MZ-Connector kit, assembled | 1 | | | |
| 26 | MZ335-1830 | AL128 | 46683301830 | MZ-Nozzle adapter | 1 | | | |
| 27 | Please refer to the Trumpf® nozzle s | ection | | | | | | |
| 28 | Please refer to the Mazak® nozzle se | ction | | | | | | |
| 29 | Please refer to the Mazak® nozzle se | ction | | | | | | |
| - I. T | Unters Eliuse Ethylone is a fluoreasethan hand nalymae and is commanly obtraviated DTEE. The Taffant hrand of DTEE is many featured anly by DyDant and is not cald by Uwaytherm | | | | | | | |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.





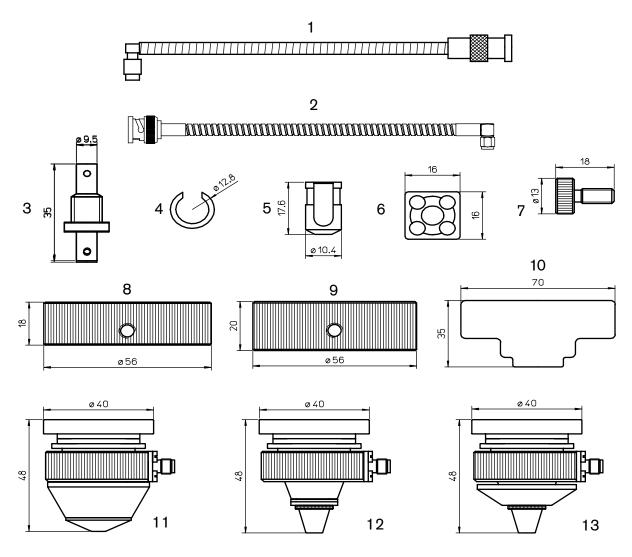

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----|--------------------------|-----------------------|--------------------------|---|------------|
| | MZ335-1980 | AL103 | 46683301980, 46683301982 | MZ-Sensor head connecting cable, short 280 mm (11") | 1 |
| 1 | MZ335-1330 | AL103/S | 46683301330 | MZ-Sensor head connecting cable, long 310 mm (12") | 1 |
| _ | MZ335-1330A | | 09BSA-A-12I | MZ-Sensor cable, 305 mm (12") armored | 1 |
| 2 | MZ335-1980A | | 09BSA-A-11I | MZ-Sensor cable, 280 mm (11") armored | 1 |
| 3 | MZ335-0005 | AL104 | | MZ-Connecting cable adapter | 1 |
| 4 | MZ335-1870 | AL155 | 46683301870, 46683301920 | MZ-Cover clips | 1 |
| 5 | MZ335-1860 | AL156 | 46683301860, 46683301910 | MZ-Cable connector cover | 1 |
| 5 | MZ335-1860LL | AL156/P | 46683301860 | MZ-Connector cover, long life | 1 |
| 6 | MZ335-1850 | AL157 | 46683301850, 46683301851 | MZ-Connector cover | 1 |
| 6 | MZ335-1850P | AL157/P | 46683301850 | MZ-Cover, plastic | 1 |
| 7 | MZ335-0320 | AL152 | 46683300032 | MZ-Bolt M5 x 0.5 | 1 |
| 8 | MZ335-0930 | AL153 | 46683300930 | MZ-Ring | 1 |
| 8 | MZ335-0003 | AL166 | | MZ-Ring kit | 1 |
| 9 | MZ335-0931 | AL192 | | MZ-Ring H ₂ O | 1 |
| 10 | MZ335-1230 | AL165 | 46683301230 | MZ-Plate | 1 |



Replacement parts suitable for: $Mazak^{\mathbb{R}}$

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----|--------------------------|-----------------------|---------------------|----------------------------|------------|
| 11 | MZ335-0002 | TMA10 | | MZ-Head w/PTFE* spacer | 1 |
| 11 | MZ335-0012 | TMA10/P | | MZ-Head w/long life spacer | 1 |
| | MZ335-1014 | TMA20 | | MZ-Head w/PTFE* spacer | 1 |
| 12 | MZ335-0015 | TMA20/P | | MZ-Head w/long life spacer | 1 |
| | MZ335-0016 | TMA20/C | | MZ-Head w/ceramic spacer | 1 |
| | MZ335-0017 | TMA30 | | MZ-Head w/PTFE spacer | 1 |
| 13 | MZ335-0018 | TMA30/P | | MZ-Head w/long life spacer | 1 |
| | MZ335-0019 | TMA30/C | | MZ-Head w/ceramic spacer | 1 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



0

0

Ô

ø 38

0

0

25





0


0


0

6

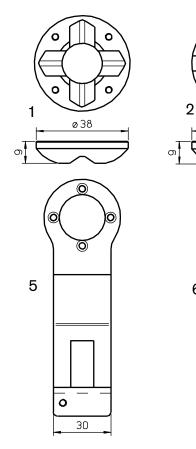

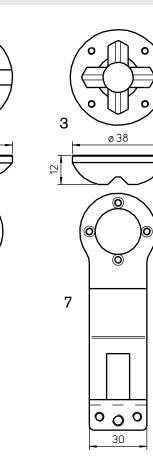






Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------------|------------------------------------|------------|
| | MZ309-5080 | AL10 | 46602350080 | MZ-Stylus foot H9, brass | 1 |
| | MZ309-5080CP | AL145 | | MZ-Stylus foot H9, brass CP | 1 |
| | MZ309-1043 | AL15 | 46572301043 | MZ-Stylus foot H9, steel | 1 |
| | MZ309-1045 | AL16 | 46572301045 | MZ-Stylus foot H9, PTFE* | 1 |
| | MZ309-0001 | AL132 | | MZ-Stylus foot H9, brass | 1 |
| 2 | MZ309-0001CP | AL146 | | MZ-Stylus foot H9, brass CP | 1 |
| | MZ309-0004 | AL133 | | MZ-Stylus foot H9, steel | 1 |
| | MZ309-1041 | AL17 | 46572301041, 46602350070 | MZ-Stylus foot H12, brass | 1 |
| 3 | MZ309-1042 | AL59 | 46572301042, 46572301041S | MZ-Stylus foot H12, steel | 1 |
| | MZ309-1041T | AL18 | 46572301041T | MZ-Stylus foot H12, PTFE* | 1 |
| 4 | MZ309-0520 | AL117 | 46512300520 | MZ-Stylus foot H4, brass | 1 |
| 5 | MZ309-0005 | AL64 | | MZ-Stylus arm w/screw M4 | 1 |
| J | MZ309-0580 | AL66 | 36602300580 | MZ-Stylus arm w/screw M6 | 1 |
| 6 | MZ309-0560 | AL60 | 36602300560, 36682300050 | MZ-Stylus arm | 1 |
| 7 | MZ309-0281 | AL167 | 36682300281 | MZ-Stylus arm w/screw M6 and M5 | 1 |
| 8 | MZ309-0020 | AL168 | 36602350020 | MZ-Stylus arm large offset | 1 |
| | MZ309-001 (not shown) | | 68057488 | MZ-Screws for stylus feet (10 pcs) | 10 |

*PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Replacement parts suitable for: $Mazak^{\mathbb{R}}$

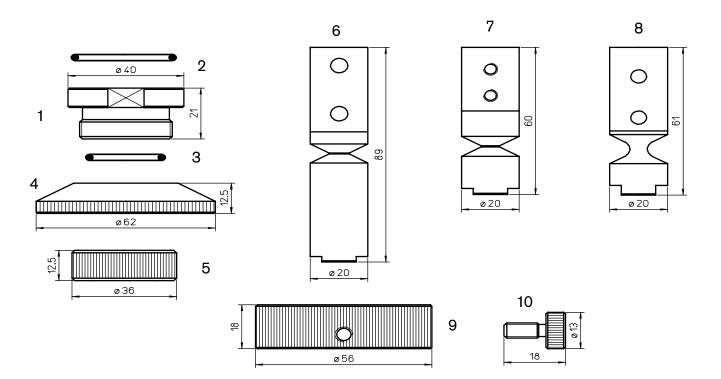


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----|--------------------------|-----------------------|--------------------------|-------------------------|------------|
| 1 | MZ309-0080 | AL63 | 46523300080 | MZ-Base | 1 |
| 2 | MZ309-3200 | AL97 | J2600S03200 | MZ-O-ring external base | 1 |
| 3 | MZ309-2200 | AL98 | J2600S02200 | MZ-O-ring internal base | 1 |
| 4 | MZ309-0030 | AL57 | 46683300030 | MZ-Retainer | 1 |
| 5 | MZ309-1720 | AL13 | 46583301720 | MZ-Retainer nut | 1 |
| 6 | MZ309-0550 | AL12 | 36602300230 | MZ-Breakaway bar L89-M8 | 1 |
| 7 | MZ309-0280 | AL14 | 36682300280, 36673300280 | MZ-Breakaway bar L60-M8 | 1 |
| 8 | MZ309-0101 | AL121 | 36572300101, 36572301012 | MZ-Breakaway bar L61-M6 | 1 |
| 9 | MZ335-0930 | AL153 | 46683300930 | MZ-Ring | 1 |
| 9 | MZ335-0003 | AL166 | | MZ-Ring kit | 1 |
| 10 | MZ335-0320 | AL152 | 46683300032 | MZ-Bolt M5 x 0.5 | 1 |



Replacement parts suitable for: $Mazak^{\texttt{R}}$

Mazak [®] 3D - Precitec [®] 5"C/MG - 5"H/MG

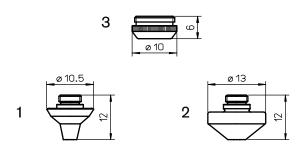


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|----------------|-------------|---------------------------------|-------------------------------|-----|
| | part number | part number | number | Description | qty |
| | PT347-0005X | L30554 | 46713300290-10 | PT-Nozzle 3D, 1.0 mm (10 pk)* | 10 |
| | PT347-0290-1.2 | L555 | 46713300290-12 | PT-Nozzle 3D, 1.2 mm | 1 |
| | PT347-0090X | L30555 | 46713300290-12 | PT-Nozzle 3D, 1.2 mm (10 pk) | 10 |
| | PT347-0290X | L30556 | 46713300290-15, P0352-381-00015 | PT-Nozzle 3D, 1.5 mm (10 pk)* | 10 |
| 1 | PT347-0118X | L30557 | P0352-377-00018 | PT-Nozzle 3D, 1.8 mm (10 pk) | 10 |
| | PT347-0280X | L30558 | 46713300310, P0352-382-00020 | PT-Nozzle 3D, 2.0 mm (10 pk)* | 10 |
| | PT347-0001X | L30560 | 46713300280-25 | PT-Nozzle 3D, 2.5 mm (10 pk)* | 10 |
| | PT347-0002X | L30563 | 46713300280-30, 46713300430 | PT-Nozzle 3D, 3.0 mm (10 pk)* | 10 |
| | PT347-0035X | L30564 | 46713300280-35 | PT-Nozzle 3D, 3.5 mm (10 pk)* | 10 |
| | PT347-0004X | L30576 | | PT-Nozzle 2D, 1.0 mm (10 pk) | 10 |
| | PT347-0310-1.2 | L577 | 46713300310 | PT-Nozzle 2D, 1.2 mm | 1 |
| | PT347-0012X | L30577 | 46713300310 | PT-Nozzle 2D, 1.2 mm (10 pk) | 10 |
| 2 | PT347-0310X | L30578 | P0352-386-00015 | PT-Nozzle 2D, 1.5 mm (10 pk)* | 10 |
| | PT347-0300X | L30580 | 46713300300, P0352-387-00020 | PT-Nozzle 2D, 2.0 mm (10 pk)* | 10 |
| | PT347-0003X | L30581 | 46713300300-25 | PT-Nozzle 2D, 2.5 mm (10 pk)* | 10 |
| | PT347-0006X | L30582 | 46713300300-30 | PT-Nozzle 2D, 3.0 mm (10 pk)* | 10 |
| 3 | PT347-0320 | AL160 | 46713300321, P0352-311-00001 | PT-Union Nut, Vespel | 1 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: $Mazak^{\texttt{R}}$

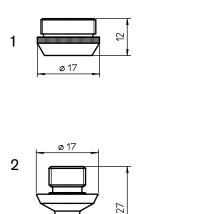



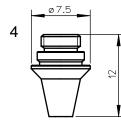


Consumables

| | Centricut | Esse A | Reference | Description | Pkg |
|---|-------------|-------------|---------------------------|-------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | MZ332-1280 | AL337 | 46713331280 | MZ-Nut, Vespel | 1 |
| | MZ332-1305 | L1300 | | MZ-Nozzle 3D, 1.0 mm | 1 |
| | MZ332-1320 | L1295 | 46713331320 | MZ-Nozzle 3D, 1.2 mm | 1 |
| | MZ332-1310 | L1296 | 46713331310 | MZ-Nozzle 3D, 1.5 mm | 1 |
| 2 | MZ332-1301 | L1301 | | MZ-Nozzle 3D, 1.8 mm | 1 |
| | MZ332-1300 | L1297 | 46713331300 | MZ-Nozzle 3D, 2.0 mm | 1 |
| | MZ332-1330 | L1298 | 46713331330 | MZ-Nozzle 3D, 2.5 mm | 1 |
| | MZ332-1290 | L1299 | 46713331290 | MZ-Nozzle 3D, 3.0 mm | 1 |
| | PT347-1034X | L30481 | 281034, P0352-324-00012 | PT-Nozzle ZK, 1.2 mm (10 pk) | 10 |
| | PT347-1013X | L30482 | 281013, P0352-325-00015 | PT-Nozzle ZK, 1.5 mm (10 pk)* | 10 |
| 3 | PT347-0899X | L30483 | 280899, P0352-326-00018 | PT-Nozzle ZK, 1.8 mm (10 pk)* | 10 |
| | PT347-0044X | L30484 | 350044.3, P0352-327-00020 | PT-Nozzle ZK, 2.0 mm (10 pk)* | 10 |
| | PT347-1025X | L30485 | 350044.3, P0352-328-00025 | PT-Nozzle ZK, 2.5 mm (10 pk)* | 10 |
| | PT347-1006X | L30486 | 281006, P0352-333-00010 | PT-Nozzie KK, 1.0 mm (10 pk) | 10 |
| | PT347-1030X | L30487 | 281030, P0352-334-00012 | PT-Nozzle KK, 1.2 mm (10 pk)* | 10 |
| 4 | PT347-1031X | L30488 | 281031, P0352-335-00015 | PT-Nozzle KK, 1.5 mm (10 pk)* | 10 |
| | PT347-0898X | L30489 | 280898, P0352-336-00018 | PT-Nozzle KK, 1.8 mm (10 pk)* | 10 |
| | PT347-1020X | L30490 | P0352-336-00020 | PT-Nozzle KK, 2.0 mm (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Mazak®

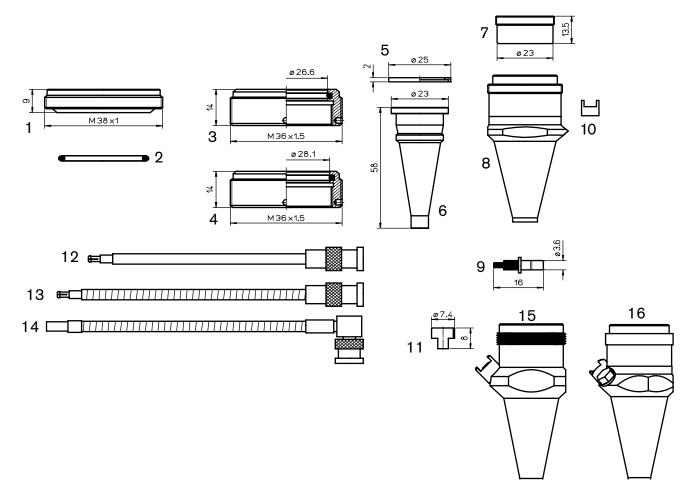


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|----|--------------------------|-----------------------|------------------------------|---|------------|
| 1 | PT347-4297 | AL198 | P0492-702-00001, 29100021 | PT-Insulating ring outer body | 1 |
| 2 | AM326-6453 | AL94 | 71366453 | AM-O-ring for outer nozzle | 1 |
| 3 | PT347-0008 | AL218 | 46713330200 | PT-Isolating ring outer body (Precitec) | 1 |
| 4 | PT347-0920 | AL221 | 46713330920 | PT-Isolating ring outer body (Mazak) | 1 |
| 5 | PT347-350 | AL350 | 46713330960 | PT-Isolating ring, inner cone | 1 |
| 6 | PT347-349 | AL349 | 46713330930 | PT-Sensor cone inner | 1 |
| 7 | PT347-0940 | AL353 | 46713330940 | PT-Retaining ring | 1 |
| 8 | PT347-1240 | AL351 | 46713331240 | PT-Torch outer body | 1 |
| 9 | PT347-1111 | AL354 | 46713331111 | PT- Connector w/spring | 1 |
| 10 | PT347-9006 | | HNP-006 | PT-Connector cup, HNP | 1 |
| 11 | PT347-0009 | AL256 | 46713300390 | PT-Connector protector | 1 |
| 12 | PT347-0101 | AL204 | P0360-100-00500, 46713300100 | PT-Sensor head connecting cable OEM | 1 |
| 13 | PT347-1386 | AL257 | 281386, P0360-155-00500 | PT-Electrode cable | 1 |
| 14 | PT347-0181 | AL358 | 46743300181 | PT-Sensor cable | 1 |
| 15 | PT347-3323 | | 567123323A1 | PT-Sensor cone HNP | 1 |
| 16 | PT347-0011 | | P0354-110-00002 | PT-Sensor cone HNZ (Mitsubishi) | 1 |



Replacement parts suitable for: $Mazak^{\texttt{R}}$

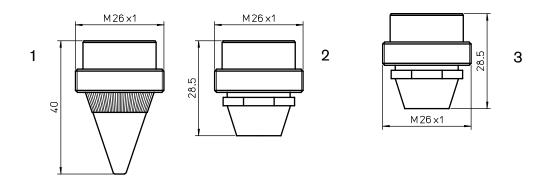

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------|------------|
| | MZ323-0060-1.0 | L61 | 46523300060 | MZ-Nozzle, 1.0 mm | 1 |
| 1 | MZ323-0061-1.5 | L84 | 46523300061 | MZ-Nozzle, 1.5 mm | 1 |
| ' | MZ323-0063-2.0 | L51 | 46523300063 | MZ-Nozzle, 2.0 mm | 1 |
| | MZ323-0063-2.5 | L333 | 46523300063 | MZ-Nozzle, 2.5 mm | 1 |
| 2 | MZ321-0510 | AL11 | 46603350510 | MZ-Nozzle adapter body | 1 |
| 3 | MZ321-0001 | AL44 | | MZ-Nozzle adapter w/inner | 1 |




Mazak®



1

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---|------------|
| 1 | MZ335-1330A | | 46683301330 | MZ-Sensor cable, 305 mm (12") armored | 1 |
| | MZ335-1980A | | 46683301980 | MZ-Sensor cable, 280 mm (11") armored | 1 |
| | MZ335-0111A (not shown) | | 46743300111 | MZ-Sensor cable, 280 mm (11") armored | 1 |
| | MZ335-0181A (not shown) | | 46743300181 | MZ-Sensor cable, 317.5 mm (12.5") armored | 1 |
| | MZ335-5320 (not shown) | | 6143355320 | MZ-Sensor cable, 70 mm (2.8") armored | 1 |
| | MZ335-630A (not shown) | | | MZ-Sensor cable, 630 mm (25") armored | 1 |
| | MZ335-HNPS (not shown) | | HNPS | MZ-Sensor cone, HNP short version | 1 |





Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|------------------------------|------------|
| - | MZ427-0006 | AL301 | | MZ-Brush w/screws, 180x30x20 | 1 |
| | BY328-3884 | | 333884 | BY-Screws, plastic (2 pcs) | 2 |
| | AM313-2023 (not shown) | | 71232023 | AM-Vacuum pump filter | 1 |



Replacement parts suitable for: $Mazak^{\mathbb{R}}$

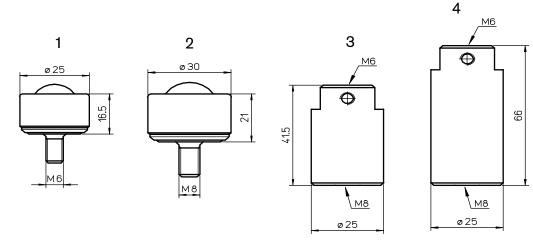

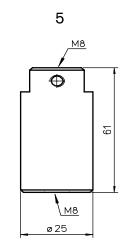

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|----------------------------------|------------|
| | MZ309-Z580 | AL61 | Z21KV000580 | MZ-Roller ball M6, 25 mm | 1 |
| 1 | MZ309-Z580X | AL3061 | Z21KV000580 | MZ-Roller ball M6, 25 mm (10 pk) | 10 |
| | MZ309-Z580B | AL325 | Z21KV000580 | MZ-Roller ball M6, 25 mm | 1 |
| 2 | MZ309-1160 | AL210 | Z21ZZ001160 | MZ-Roller ball M8, 30 mm | 1 |
| 3 | MZ309-0321 | AL62 | 46575100321 | MZ-Block, L41.5 stainless steel | 1 |
| 4 | MZ309-0050 | AL134 | 46705100050 | MZ-Block, L66 stainless steel | 1 |
| 5 | MZ309-0324 | AL324 | | MZ-Block, stainless steel | 1 |



Replacement parts suitable for: $Mazak^{\texttt{R}}$

Optics

| Centricut | Reference | | | | | Focal | | Edge | |
|-----------------------------|--------------|------|---------------|----------|--|--------|------|-----------|--|
| part number | number | Туре | | Diameter | | length | | thickness | |
| Lenses | Lenses | | | | | | | | |
| MZ315-0130 | Z50MB000130 | PLX | | 1.5" | | 5.0" | | .118" | |
| MZ315-0160 | Z50MB000160 | PLX | | 1.5" | | 5.0" | | .236" | |
| MZ315-0400 | Z50MB000400 | PLX | | 1.5" | | 5.0" | | .300" | |
| MZ315-2155 | 702155 | PLX | | 1.5" | | 9.5" | | .1575" | |
| MZ315-5980 | 145980 | PLX | | 2.0" | | 5.0" | | .300" | |
| MZ315-5160 | Z50ZZ005160 | PLX | | 2.0" | | 5.0" | | .310" | |
| MZ315-0516A | Z50ZZ005160A | PLX | | 2.0" | | 5.0" | | .380" | |
| MZ315-0520A | Z50ZZ00520A | PLX | | 2.0" | | 7.5" | | .380" | |
| MZ315-0480 | Z50ZZ010480 | PLX | | 2.0" | | 12" | | .236" | |
| MZ315-8148 | 938148 | PLX | | 2.5" | | 7.5" | | .380" | |
| Ultra low absorption lenses | | | | | | | | | |
| MZ315-0160MP5 | Z50MB000160 | PLX | | 1.5" | | 5.0" | | .236" | |
| MZ315-0400MP5 | Z50MB000400 | PLX | | 1.5" | | 5.0" | | .300" | |
| MZ315-0520AMP5 | Z50ZZ00520A | PLX | | 2.0" | | 7.5" | | .380" | |
| | | | | | | | | | |
| Centricut | Reference | | | | | | Edge | | |
| part number | number Typ | | Type Diameter | | | thick | ness | | |
| Windows | | | | | | | | | |

FS

FS

Optics care

MZ315-5350

PT317-0589 New

PT317-0501 New

Z50SA015350, W495

9263K501 Window O-ring for PT317-0589

| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |
| MZ427-0230 | | MZ-Wire, Indium 0.030" x 6' | 1 |

Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.


42.00 mm


22.35 mm


9.00 mm

4.00 mm



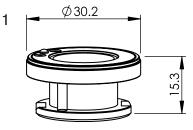

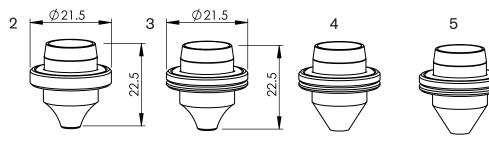


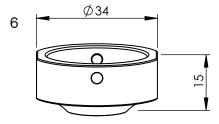


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|------------------------|---|------------|
| 1 | MB327-0311 | AL460 | BQ980D311G02, LX54300 | MB-Nozzle holder, EX insulation | 1 |
| 2 | MB327-1620 | L1620 | BQ983D150-H01, LX53100 | MB-Nozzle w/o-ring, 1.0 mm | 1 |
| 2 | MB327-1633 | L1633 | BQ983D314-H01 | MB-Nozzle w/o-ring, 1.4 mm | 1 |
| 3 | MB327-1621 | L1621 | BQ983D151-H01, LX53200 | MB-Nozzle w/o-ring, 1.2 mm | 1 |
| 4 | MB327-1622 | L1622 | BQ983D152-H01 | MB-Nozzle w/o-ring, 1.7 mm | 1 |
| | MB327-1623 | L1623 | BQ983D153-H01 | MB-Nozzle w/o-ring, 1.5 mm | 1 |
| | MB327-1624 | L1624 | BQ983D153-H02 | MB-Nozzle w/o-ring, 2.0 mm | 1 |
| 5 | MB327-1625 | L1625 | BQ983D153-H03, LX53500 | MB-Nozzle w/o-ring, 2.5 mm | 1 |
| | MB327-1626 | L1626 | BQ983D153-H04 | MB-Nozzle w/o-ring, 3.0 mm | 1 |
| | MB327-1627 | L1627 | BQ983D153-H05 | MB-Nozzle w/o-ring, 3.5 mm | 1 |
| 6 | MB327-0328 | AL467 | BQ980D328G01, LT10700 | MB-Nozzle EX outer for single MB-nozzle | 1 |



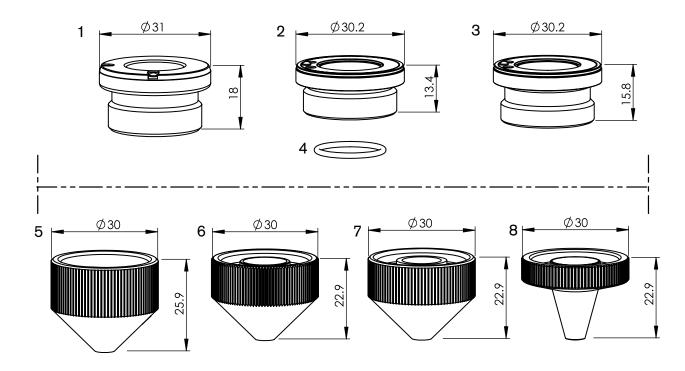

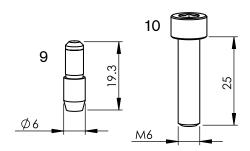

Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|------------------------------------|-------------------------------------|------------|
| 1 | MB334-0830 | AL373 | | MB-Nozzle holder IT461 | 1 |
| 2 | MB334-0001 | AL267 | P0594-860-00001, PHX-INS, 71800010 | MB-Nozzle holder | 1 |
| 3 | PT347-0895 Recommended | AL401 | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel | 1 |
| 3 | PT347-08950EM | | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel OEM | 1 |
| 4 | MB334-W290 | AL388 | W290, 71800107 | MB-0-ring | 1 |
| | MB334-1249 | L398 | W1249 | MB-Nozzle, 1.0 mm | 1 |
| | MB334-1256 | L397 | W1256 | MB-Nozzle, 1.2 mm | 1 |
| | MB334-1250 | L399 | W1250 | MB-Nozzle, 1.5 mm | 1 |
| 5 | MB334-1251 | L702 | W1251 | MB-Nozzle, 2.0 mm | 1 |
| 5 | MB334-1252 | L703 | W1252 | MB-Nozzle, 2.5 mm | 1 |
| | MB334-1253 | L704 | W1253 | MB-Nozzle, 3.0 mm | 1 |
| | MB334-1254 | L705 | W1254 | MB-Nozzle, 3.5 mm | 1 |
| | MB334-1255 | L706 | W1255 | MB-Nozzle, 4.0 mm | 1 |



Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|--------------|-------------|---|--------------------------------|-----|
| | part number | part number | number | Description | qty |
| | MB334-1626 | L910 | W1626 | MB-Nozzle, 1.0 mm | 1 |
| | MB334-1627 | L911 | W1627 | MB-Nozzle, 1.2 mm | 1 |
| | MB334-1625 | L908 | W1625 | MB-Nozzle, 1.4 mm | 1 |
| | MB334-1628 | L912 | W1628 | MB-Nozzle, 1.5 mm | 1 |
| | MB334-1661 | L918 | W1661 | MB-Nozzle, 1.7 mm | 1 |
| | MB334-1629 | L913 | W1629 | MB-Nozzle, 2.0 mm | 1 |
| | MB334-1630 | L914 | W1630 | MB-Nozzle, 2.5 mm | 1 |
| | MB334-1664 | L915 | W1664 | MB-Nozzle, 3.0 mm | 1 |
| | MB334-1665 | L916 | W1665 | MB-Nozzle, 3.5 mm | 1 |
| | MB334-1666 | L917 | W1666 | MB-Nozzle, 4.0 mm | 1 |
| 6 | MB334-1662 | L909 | W1662 | MB-Nozzle, 4.5 mm | 1 |
| | MB334-1663 | L919 | W1663 | MB-Nozzle, 5.0 mm | 1 |
| | MB334-1626CP | L910X | W1626 | MB-Nozzle, 1.0 mm CP | 1 |
| | MB334-1627CP | L911X | W1627 | MB-Nozzle, 1.2 mm CP | 1 |
| | MB334-1628CP | L912X | W1628 | MB-Nozzle, 1.5 mm CP | 1 |
| | MB334-1661CP | L918X | W1661 | MB-Nozzle, 1.7 mm CP | 1 |
| | MB334-1629CP | L913X | W1629 | MB-Nozzle, 2.0 mm CP | 1 |
| | MB334-1630CP | L914X | W1630 | MB-Nozzle, 2.5 mm CP | 1 |
| | MB334-1664CP | L915X | W1664 | MB-Nozzle, 3.0 mm CP | 1 |
| | MB334-1665CP | L916X | W1665 | MB-Nozzle, 3.5 mm CP | 1 |
| | MB334-1666CP | L917X | W1666 | MB-Nozzle, 4.0 mm CP | 1 |
| | MB334-1626B | L1078 | W1626B | MB-Nozzle low pressure, 1.0 mm | 1 |
| | MB334-1627B | L1079 | W1627B | MB-Nozzle low pressure, 1.2 mm | 1 |
| | MB334-1628B | L1080 | W1628B | MB-Nozzle low pressure, 1.5 mm | 1 |
| 7 | MB334-1629B | L1081 | W1629B | MB-Nozzle low pressure, 2.0 mm | 1 |
| | MB334-1630B | L1082 | W1630B | MB-Nozzle low pressure, 2.5 mm | 1 |
| | MB334-1665B | L1084 | W1665B | MB-Nozzle low pressure, 3.5 mm | 1 |
| | MB334-1666B | L1085 | W1666B | MB-Nozzle low pressure, 4.0 mm | 1 |
| | | L1715 | NCW1626C | MB-Nozzle narrow cone, 1.0 mm | 1 |
| 8 | MB334-1632 | L1716 | NCW1627C | MB-Nozzle narrow cone, 1.2 mm | 1 |
| - | | L1718 | NCW1629C | MB-Nozzle narrow cone, 2.0 mm | 1 |
| 9 | | AL345 | 71800009, P921K000P25, JPZA5-6, LC47400 | AM-Safety pin | 1 |
| 10 | | AL346 | 71800008, L2490A005, LC50700, P903K001P72 | AM-Safety screw | 1 |



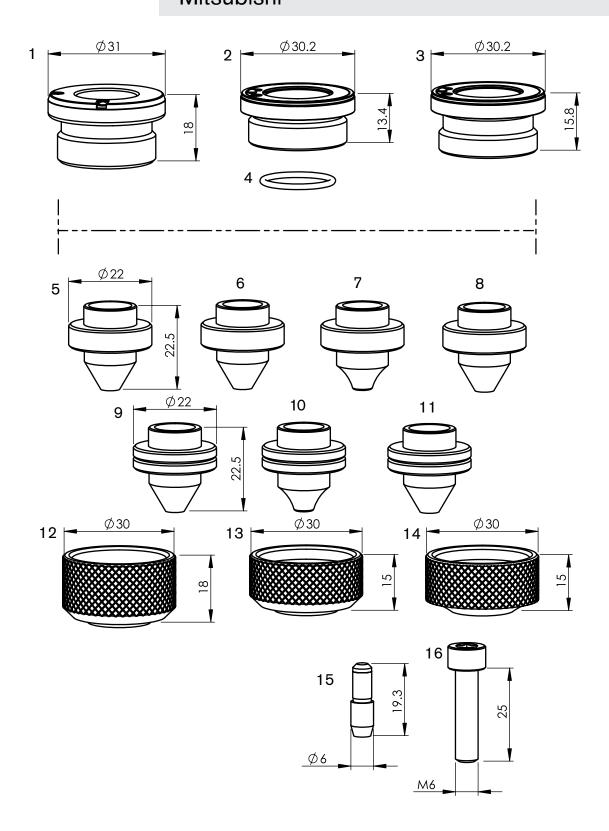




Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|------------------------|-------------|---|--------------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | MB334-0830 | AL373 | | MB-Nozzle holder IT461 | 1 |
| 2 | MB334-0001 | AL267 | P0594-860-00001, PHX-INS, 71800010 | MB-Nozzle holder | 1 |
| 3 | PT347-0895 Recommended | AL401 | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel | 1 |
| 3 | PT347-08950EM | | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel OEM | 1 |
| 4 | MB334-W290 | AL388 | W290, 71800107 | MB-0-Rring | 1 |
| | AM326-0017 | L1131 | | AM-Nozzle, 1.7 mm | 1 |
| | AM326-0018 | L1134 | 71800018, BQ943D157H01 | AM-Nozzle, 1.5 mm | 1 |
| | AM326-0019 | L1135 | 71800019, BQ943D157H02 | AM-Nozzle, 2.0 mm | 1 |
| 5 | AM326-0020 | L1136 | 71800020, BQ943D157H03 | AM-Nozzle, 2.5 mm | 1 |
| 5 | AM326-0021 | L1137 | 71800021, BQ943D157H04 | AM-Nozzle, 3.0 mm | 1 |
| | AM326-0022 | L1138 | 71800022, BQ943D596H01 | AM-Nozzle, 3.5 mm | 1 |
| | AM326-0023 | L1139 | | AM-Nozzle, 4.0 mm | 1 |
| | AM326-0024CP | L1140X | 71800109, BQ943D714H01, W18Q94371401 | AM-Nozzle for focus point, 4.0 mm CP | 1 |
| | AM387-0016 | L1125 | 71800016, BQ943D897H01, W18Q94389701 | AM-Nozzle HV, 1.0 mm | 1 |
| 6 | AM387-1901 | L1128 | W18Q93309101 | AM-Nozzle HV, 2.5 mm | 1 |
| | AM387-1902 | L1129 | W18Q93309102 | AM-Nozzle HV, 3.0 mm | 1 |
| 7 | AM387-0001 | L1126 | 71800016A0, BQ933D283H01 | AM-Nozzle w/radius no groove, 1.0 mm | 1 |
| | MB327-327-1 | L354 | W777 | MB-Nozzle, 1.0 mm | 1 |
| | MB327-777 | L363 | W777 | MB-Nozzle, 1.2 mm | 1 |
| | MB327-266 | L355 | W266 | MB-Nozzle, 1.5 mm | 1 |
| 8 | MB327-267 | L356 | W267 | MB-Nozzle, 2.0 mm | 1 |
| | MB327-776 | L357 | W776 | MB-Nozzle, 2.5 mm | 1 |
| | MB327-268 | L358 | W268 | MB-Nozzle, 3.0 mm | 1 |
| | MB327-268-3.5 | L359 | W268-3.5 | MB-Nozzle, 3.5 mm | 1 |
| | MB327-0010 | L965 | | MB-Nozzle, 1.0 mm | 1 |
| | MB327-0012 | L966 | | MB-Nozzle, 1.2 mm | 1 |
| 9 | MB327-0015 | L967 | | MB-Nozzle, 1.5 mm | 1 |
| 9 | MB327-0017 | L964 | | MB-Nozzle, 1.7 mm | 1 |
| | MB327-0020 | L968 | | MB-Nozzle, 2.0 mm | 1 |
| | MB327-0025 | L969 | | MB-Nozzle, 2.5 mm | 1 |
| 10 | AM387-0017 | L1130 | 71800017, BQ943D269H01, W18Q93326901 | AM-Nozzle HV w/radius, 1.2 mm | 1 |
| 11 | AM387-2701 | L1132 | W18Q93302701 | AM-Nozzle HV, 1.7 mm | 1 |
| 12 | MB327-263 | AL116 | W263 | MB-Nozzle nut | 1 |
| 13 | MB327-263S | AL240 | P0593-865-00001 | MB-Nozzle nut short | 1 |
| 14 | AM367-0269 | AL269 | 71800026, BQ933D94H01 | AM-Nozzle nut short | 1 |
| 15 | AM416-0009 | AL345 | 71800009, P921K000P25, JPZA5-6, LC47400 | AM-Safety pin | 1 |
| 16 | AM416-A005 | AL346 | 71800008, L2490A005, LC50700, P903K001P72 | AM-Safety screw | 1 |



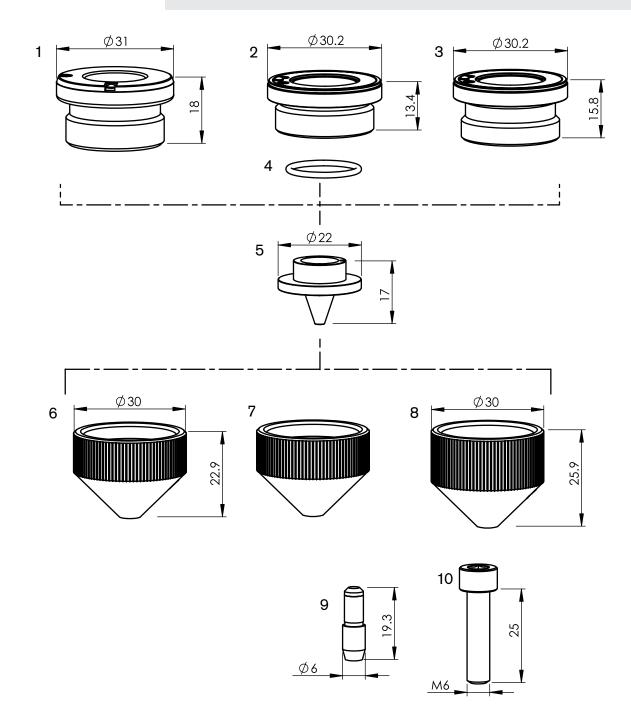






Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----|------------------------|-------------|---|-------------------------------------|-----|
| | part number | part number | number | Description | qty |
| | MB334-0830 | AL373 | | MB-Nozzle holder IT461 | 1 |
| 2 | MB334-0001 | AL267 | P0594-860-00001, PHX-INS, 71800010 | MB-Nozzle holder | 1 |
| 3 | PT347-0895 Recommended | AL401 | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel | 1 |
| | PT347-08950EM | | P0593-895-00001 | PT-Nozzle holder IT HP2" ZP/Mel OEM | 1 |
| 4 | MB334-W290 | AL388 | W290, 71800107 | MB-O-ring | 1 |
| | MB316-390 | L288 | W390 | MB-Nozzle inner 4 holes, 1.3 mm | 1 |
| | MB316-2706 | L835 | W270-6 | MB-Nozzle inner 6 holes, 1.3 mm | 1 |
| | MB316-270 | L280 | W270 | MB-Nozzle inner 8 holes, 1.3 mm | 1 |
| | MB316-387 | L289 | W387 | MB-Nozzle inner 12 holes, 1.3 mm | 1 |
| | MB316-388 | L290 | W388 | MB-Nozzle inner 16 holes, 1.3 mm | 1 |
| | MB316-389 | L836 | W389 | MB-Nozzle inner 20 holes, 1.3 mm | 1 |
| | MB316-515 | L291 | W515 | MB-Nozzle inner 24 holes, 1.5 mm | 1 |
| 5 | AM387-0026 | L1124 | | MB-Nozzle inner 24 holes, 2.0 mm | 1 |
| 5 | MB316-1121 | L1121 | | MB-Nozzle inner 3 holes, 1.5 mm | 1 |
| | MB316-1127 | L1127 | | MB-Nozzle inner 4 holes, 1.5 mm | 1 |
| | MB316-1117 | L1117 | | MB-Nozzle inner 5 holes, 1.5 mm | 1 |
| | AM387-0023 | L1119 | 71800023, BQ943D156H01 | MB-Nozzle inner 8 holes, 1.5 mm | 1 |
| | MB316-1122 | L1122 | | MB-Nozzle inner 3 holes, 2.0 mm | 1 |
| | MB316-1116 | L1116 | | MB-Nozzle inner 4 holes, 2.0 mm | 1 |
| | MB316-1118 | L1118 | | MB-Nozzle inner 6 holes, 2.0 mm | 1 |
| | AM387-0025 | L1120 | | MB-Nozzle inner 8 holes, 2.0 mm | 1 |
| | MB316-0508 | AL508 | | MB-Nozzle outer, 1.2 mm | 1 |
| | MB316-0510 | AL510 | | MB-Nozzle outer, 1.5 mm | 1 |
| | MB316-0509 | AL509 | | MB-Nozzle outer, 1.7 mm | 1 |
| | MB316-0511 | AL511 | | MB-Nozzle outer, 2.0 mm | 1 |
| 6 | MB316-0515 | AL515 | | MB-Nozzle outer, 2.3 mm | 1 |
| | MB316-0512 | AL512 | | MB-Nozzle outer, 2.5 mm | 1 |
| | MB316-0513 | AL513 | | MB-Nozzle outer, 3.0 mm | 1 |
| | MB316-0514 | AL514 | | MB-Nozzle outer, 3.5 mm | 1 |
| _ | MB316-268 | AL239 | | MB-Shield cap, short w/o step | 1 |
| 7 | MB316-268CP | AL239X | | MB-Shield cap, short w/o step CP | 1 |
| _ | MB316-269 | AL65 | W269 | MB-Shield cap | 1 |
| 8 | MB316-269CP | AL65X | | MB-Shield cap, CP | 1 |
| 9 | AM416-0009 | AL345 | 71800009, P921K000P25, JPZA5-6, LC47400 | AM-Safety pin | 1 |
| 10 | AM416-A005 | AL346 | 71800008, L2490A005, LC50700, P903K001P72 | AM-Safety screw | 1 |



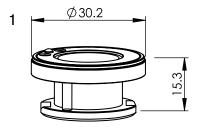




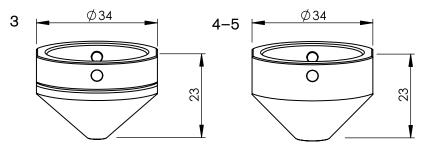

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|--------------|--------------------------|-----------------------|-----------------------|---|------------|
| 1 | MB327-0311 | AL460 | BQ980D311G02, LX54300 | MB-Nozzle holder, EX insulation | 1 |
| | MB327-1749 | L1749 | | MB-Nozzle EX inner 3 holes w/o-ring, 1.5 mm | 1 |
| | MB327-1751 | L1751 | | MB-Nozzle EX inner 4 holes w/o-ring, 1.5 mm | 1 |
| | MB327-1753 | L1753 | | MB-Nozzle EX inner 6 holes w/o-ring, 1.5 mm | 1 |
| 2 | MB327-1755 | L1755 | BQ983D206H03 | MB-Nozzle EX inner 8 holes w/o-ring, 1.5 mm | 1 |
| ² | MB327-1757 | L1757 | BQ983D206H04 | MB-Nozzle EX inner 24 holes w/o-ring, 1.5 mm | 1 |
| | MB327-1750 | L1750 | | MB-Nozzle EX inner 3 holes w/o-ring, 2.0 mm | 1 |
| | MB327-1752 | L1752 | | MB-Nozzle EX inner 4 holes w/o-ring, 2.0 mm | 1 |
| | MB327-1754 | L1754 | | MB-Nozzle EX inner 6 holes w/o-ring, 2.0 mm | 1 |
| | MB327-0472 | AL472 | | MB-Nozzle EX uuter for thick material, 1.5 mm | 1 |
| | MB327-0473 | AL473 | | MB-Nozzle EX uuter for thick material, 2.0 mm | 1 |
| 3 | MB327-0474 | AL474 | | MB-Nozzle EX uuter for thick material, 2.5 mm | 1 |
| ³ | MB327-0475 | AL475 | | MB-Nozzle EX uuter for thick material, 3.0 mm | 1 |
| | MB327-0476 | AL476 | | MB-Nozzle EX uuter for thick material, 3.5 mm | 1 |
| | MB327-0434 | AL468 | BQ980D434G01 | MB-Nozzle EX uuter for thick material, 4.0 mm | 1 |
| 4 | MB327-4423 | AL469 | BQ980D442G03 | MB-Nozzle EX outer, 4.0 mm | 1 |
| 5 | MB327-4421 | AL470 | BQ980D442G01 | MB-Nozzle EX outer, 7.0 mm | 1 |



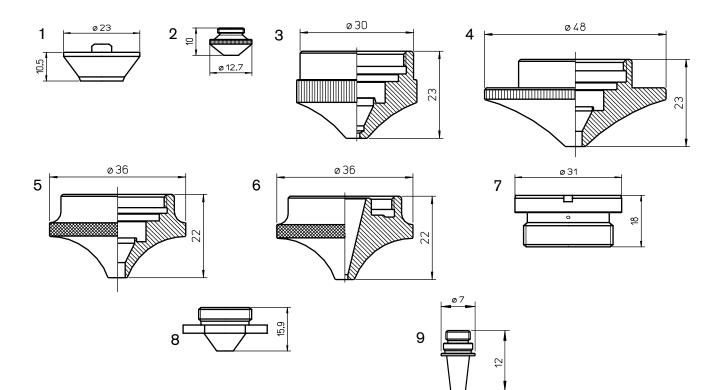

Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|---|---------------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | PT344-1079 | AL138 | 281079, P0492-430-00003, W149 | PT-Nozzle holder KT M1.5" S F2.5" OEM | |
| | PT344-0013X | L30400 | 280013, P0492-441-00008, W222 | PT-Nozzle FP, 0.8 mm (10 pk)* | 1 |
| | PT344-0014X | L30401 | | PT-Nozzle FP, 1.0 mm (10 pk)* | 10 |
| | PT344-0015X | L30402 | 280015, P0492-443-00012 | PT-Nozzle FP, 1.2 mm (10 pk)* | 10 |
| | PT344-0016X | L30403X | | PT-Nozzle FP, 1.5 mm (10 pk)* | 10 |
| | PT344-0018X | L30543 | P0492-447-00018 | PT-Nozzle FP, 1.8 mm (10 pk)* | 10 |
| 2 | PT344-0937X | L30544 | | PT-Nozzle FP, 2.0 mm (10 pk)* | 10 |
| | PT344-1791X | L30545 | | PT-Nozzle FP, 2.5 mm (10 pk)* | 10 |
| | PT344-0027X | L30547 | | PT-Nozzle FP, 3.0 mm (10 pk)* | 10 |
| | PT344-0010CPX | L30401X | 280014, P0492-442-00010, W223 | PT-Nozzle FP, 1.0 mm CP (10 pk)* | 10 |
| | PT344-0015CPX | L30403X | 280016, P0492-444-00015, W224 | PT-Nozzle FP, 1.5 mm CP (10 pk)* | 10 |
| | PT344-0022CPX | L30544X | 280937, P0492-445-00020, W225 | PT-Nozzle FP, 2.0 mm CP (10 pk)* | 10 |
| | AM416-0002 | AL302 | | AM-Nozzle outer, 1.7 mm | 1 |
| | AM416-0003 | AL303 | | AM-Nozzle outer, 2.0 mm | 1 |
| 3 | AM416-0004 | AL304 | | AM-Nozzle outer, 2.5 mm | 1 |
| | AM416-0005 | AL305 | | AM-Nozzle outer, 3.0 mm | 1 |
| | AM416-0006 | AL306 | | AM-Nozzle outer, 4.0 mm | 1 |
| 4 | MB316-0440 | AL266 | BQ933D044H01, 71800101, W18Q93304401 | MB-Nozzle outer, high speed pierce | 1 |
| 5 | AM416-2197 | AL270 | 71802197, BQ933D044H01 | AM-Nozzle outer | 1 |
| 6 | AM416-5400 | L1262 | 7180015400, BQ023D020H01 | AM-Nozzle high speed pierce, 1.7 mm | 1 |
| 7 | MB334-0830 | AL373 | P0461-230-00001, W830 | MB-Nozzle holder IT461 | 1 |
| | MB330-001 | L549 | W001 | MB-Nozzle, 1.5 mm | 1 |
| 8 | MB330-002 | L550 | W002 | MB-Nozzle, 2.0 mm | 1 |
| 0 | MB330-004 | L551 | W004 | MB-Nozzle, 2.5 mm | 1 |
| | MB330-003 | L552 | W003 | MB-Nozzle, 3.0 mm | 1 |
| 9 | MB336-0018 | L1710 | BKO-NB8358H03, BQ949D117, P0352-377-00018 | MB-Nozzle DE M1.5" 1.8H, 1.8 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)

Centricut[•]

Replacement parts suitable for: Mitsubishi®

1



Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------------|------------|
| | Sensor cones | | | | |
| 1 | PT347-0011 | | P0354-110-00002 | PT-Sensor cone HNZ (Mitsubishi) | 1 |
| 2 | MB334-W429A | | P0461-270-00001 | MB-Sensor cone W429A | 1 |

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness | | | |
|-----------------------------|-----------------------------|------|----------|-----------------|-------------------|--|--|--|
| Lenses | | | | | | | | |
| MB312-018 | W018 | PLX | 1.5" | 7.5" | .310" | | | |
| MB312-500 | W500 | PLX | 1.5" | 5.0" | .310" | | | |
| MB312-505 | W505 | PLX | 2.0" | 5.0" | .310" | | | |
| MB312-510 | W510 | PLX | 2.0" | 7.5" | .310" | | | |
| MB312-8858 | 6418858 | PLX | 2.0" | 7.5" | .45" | | | |
| Ultra low absorption lenses | Ultra low absorption lenses | | | | | | | |
| MB312-018MP5 | W018 | PLX | 1.5" | 7.5" | .300" | | | |
| MB312-505MP5 | W505 | PLX | 2.0" | 5.0" | .310" | | | |
| MB312-510MP5 | W510 | PLX | 2.0" | 7.5" | .310" | | | |


Optics care

| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 45 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



NTC®-Beyeler®






Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|-------------------|------------|
| | NT401-0001 | L454 | | NT-Nozzle, 1.0 mm | 1 |
| | NT401-0002 | L455 | | NT-Nozzle, 1.2 mm | 1 |
| 1 | NT401-0003 | L456 | | NT-Nozzle, 1.5 mm | 1 |
| | NT401-0004 | L457 | | NT-Nozzle, 2.0 mm | 1 |
| | NT401-0006 | L459 | | NT-Nozzle, 3.0 mm | 1 |
| | NT382-3738 | L1090 | 4R019681 | NT-Nozzle, 1.0 mm | 1 |
| | NT382-3737 | L1091 | 4R023668 | NT-Nozzle, 1.2 mm | 1 |
| 2 | NT382-3904 | L1092 | 4R020576 | NT-Nozzle, 1.5 mm | 1 |
| 2 | NT382-3739 | L1093 | 4R019680 | NT-Nozzle, 2.0 mm | 1 |
| | NT382-3905 | L1094 | 4R019770 | NT-Nozzle, 3.0 mm | 1 |
| | NT382-0040 | L1095 | | NT-Nozzle, 4.0 mm | 1 |



NTC[®]-Beyeler[®]

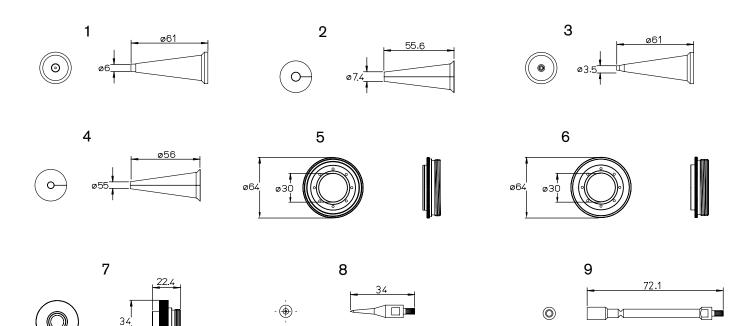

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|--------------|--|-----|
| | part number | part number | number | Description | qty |
| 1 | NT426-0515 | | 4R018705-001 | NT-Nozzle, 1.5 mm (standard), ceramic | 1 |
| | NT426-0520 | | 4R018705-002 | NT-Nozzle, 2.0 mm (standard), ceramic | 1 |
| 2 | NT426-3962 | | 4R003962-001 | NT-Nozzle cap, standard | 1 |
| 3 | NT426-6515 | | 4R008865-002 | NT-Nozzle, 1.5 mm (small), ceramic | 1 |
| 3 | NT426-6520 | | 4R008865-001 | NT-Nozzle, 2.0 mm (small), ceramic | 1 |
| 4 | NT426-8866 | | 4R008866-001 | NT- Nozzle cap, small | 1 |
| | NT426-8415 | | 4R018452-001 | NT-Flange (new style) 0.15" | 1 |
| 5 | NT426-8430 | | 4R18452-002 | NT-Flange (new style) 0.30" | 1 |
| | NT426-8450 | | 4R032035-001 | NT-Flange (new style) 0.50" | 1 |
| | NT426-9711 | | | NT-Flange (old style) 0.10" | 1 |
| 6 | NT426-4446 | | 4R004446-001 | NT-Flange (old style) 0.15" | 1 |
| | NT426-6511 | | 4R006511-001 | NT-Flange (old style) 0.30" | 1 |
| | NT426-0487 (not shown) | | | NT-Flange (2D) 0.50" | 1 |
| | NT426-2632 (not shown) | | 3R002632-G03 | NT-Nozzle holder (old style), ceramic | 1 |
| | NT426-6928 (not shown) | | 3R016928-G01 | NT-Nozzle holder (new style), ceramic | 1 |
| 7 | NT426-7758 | | 4R037758-001 | NT-Nozzle base | 1 |
| | NT426-0001 (not shown) | | | NT-O-Rings for nozzle holder | 1 |
| | NT426-3765 (not shown) | | 4R003765-001 | NT-Nozzle nut | 1 |
| 8 | NT426-3540 | | 4R003540-001 | NT-Stylus | 1 |
| 9 | NT426-2720 | | 4R012720-001 | NT-Stylus adapter | 1 |
| | NT426-1682 (not shown) | | 4R029911-001 | NT-Sensor cable, 216 mm (8.5") | 1 |
| | NT426-8677 (not shown) | | 4R028677-001 | NT-Sensor cable, 508 mm (20") armored | 1 |
| | NT426-4991 (not shown) | | 3-0104991 | NT-Sensor cable, 0-OBNC/MCX, 482 mm (19") | 1 |
| | NT426-7492 (not shown) | | 3-0117492 | NT-Sensor cable, 90BNC/90BNC, 482 mm (19") | 1 |



Replacement parts suitable for: NTC®-Beyeler®

Optics

| Centricut part number | Reference number | Туре | Diameter | | Edge thickness |
|--------------------------|---------------------|------|----------|------|-------------------|
| Lenses | | | | | |
| NT375-6491 | 706491 | PLX | 1.5" | 5.0" | .160" |
| NT375-8662 | 578662 | PLX | 1.5" | 5.0" | .300" |
| NT375-4494 | 634494 | PLX | 2.0" | 7.5" | .300" |
| NT375-7955 | 5487955 | PLX | 2.0" | 7.5" | .300" |


Optics care

| Centricut part number | Reference number | Description | Pkg |
|--------------------------|---------------------|--|-----|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | qty |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT, Hans, Mazak, SHT and Salvagnini systems

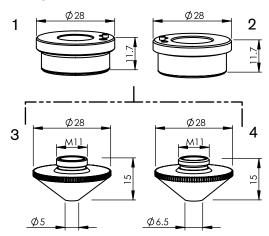

Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-------------------------------------|---|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001. 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| ' | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| - | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT345-0008X | L30935 | | PT-Nozzle HD, 0.8 mm (10 pk)* | 10 |
| | PT345-1548X | L30234 | 281548, P0591-571-00010 | PT-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| | PT345-1549X | L30235 | 281549, P0591-572-00012 | PT-Nozzle HD, 1.2 mm (10 pk)* | 10 |
| | PT345-1555X | L30824 | | PT-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| | PT345-1463X | L30236 | 281463-P0591-573-00015 | PT-Nozzle HD, 1.5 mm (10 pk)* | 10 |
| | PT345-0001X | L30237 | P0591-574-00018 | PT-Nozzle HD, 1.8 mm (10 pk)* | 10 |
| | PT345-1550X | L30238 | 281550, P0591-575-00020 | PT-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| | PT345-0003X | L30239 | | PT-Nozzle HD, 2.3 mm (10 pk)* | 10 |
| | PT345-1551X | L30240 | 281551, P0591-576-00025 | PT-Nozzle HD, 2.5 mm (10 pk)* | 10 |
| | PT345-1552X | L30936 | , | PT-Nozzle HD, 2.75 mm (10 pk)* | 10 |
| | PT345-0002X | L30241 | | PT-Nozzle HD, 3.0 mm (10 pk)* | 10 |
| | PT345-0005X | L30826 | | PT-Nozzle HD, 3.2 mm (10 pk)* | 10 |
| | PT345-0006X | L30827 | | PT-Nozzle HD, 3.5 mm (10 pk)* | 10 |
| 3 | PT345-0004X | L30828 | | PT-Nozzle HD, 4.0 mm (10 pk)* | 10 |
| | PT345-0007X | L30829 | | PT-Nozzle HD, 4.5 mm (10 pk)* | 10 |
| | PT345-1547CPX | L30935X | | PT-Nozzle HD, 0.8 mm CP (10 pk)* | 10 |
| | PT345-1548CPX | L30234X | 281548, P0591-571-00010 | PT-Nozzle HD, 1.0 mm CP (10 pk)* | 10 |
| | PT345-1549CPX | L30235X | 281549, P0591-572-00012 | PT-Nozzle HD, 1.2 mm CP (10 pk)* | 10 |
| | PT345-1555CPX | L30824X | | PT-Nozzle HD, 1.4 mm CP (10 pk)* | 10 |
| | PT345-1463CPX | L30236X | 281463-P0591-573-00015 | PT-Nozzle HD, 1.5 mm CP (10 pk)* | 10 |
| | PT345-0001CPX | L30237X | P0591-574-00018 | PT-Nozzle HD, 1.8 mm CP (10 pk)* | 10 |
| | PT345-1550CPX | L30238X | 281550-P0591-575-00020 | PT-Nozzle HD, 2.0 mm CP (10 pk)* | 10 |
| | PT345-0003CPX | L30239X | | PT-Nozzle HD, 2.3 mm CP (10 pk)* | 10 |
| | PT345-1551CPX | L30240X | 281551, P0591-576-00025 | PT-Nozzle HD, 2.5 mm CP (10 pk)* | 10 |
| | PT345-0002CPX | L30241X | | PT-Nozzle HD, 3.0 mm CP (10 pk)* | 10 |
| | PT345-0004CPX | L30828X | | PT-Nozzle HD, 4.0 mm CP (10 pk)* | 10 |
| | PT345-0007CPX | L30829X | | PT-Nozzle HD, 4.5 mm CP (10 pk)* | 10 |
| | PT345-1936X | L301936 | | PT-Nozzle large head HD, 4.0 mm (10 pk)* | 10 |
| | PT345-1937X | L301937 | | PT-Nozzle large head HD, 4.5 mm (10 pk)* | 10 |
| 4 | PT345-0830X | L30830 | | PT-Nozzle large head HD, 5.0 mm (10 pk)* | 10 |
| | PT345-1936CPX | L301936X | | PT-Nozzle large head HD, 4.0 mm CP (10 pk)* | 10 |
| | PT345-1937CPX | L301937X | | PT-Nozzle large head HD, 4.5 mm CP (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT and Salvagnini systems

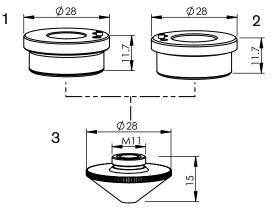

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-------------------------------------|---|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT358-0691X | L30691 | | PT-Nozzle double, 0.9 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0010X | L30660 | | PT-Nozzle double, 1.0 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0112X | L30661-12 | | PT-Nozzle double, 1.2 mm/inner 1.2 mm (10 pk)* | 10 |
| | PT358-0125X | L30661 | P0591-002-00012 | PT-Nozzle double, 1.2 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0124X | L30672 | | PT-Nozzle double, 1.4 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0015X | L30662 | P0591-002-00015 | PT-Nozzle double, 1.5 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0018X | L30663 | P0591-002-00018 | PT-Nozzle double, 1.8 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0020X | L30664 | P0591-002-00020 | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 10 |
| | PT358-0420X | L30664-20 | | PT-Nozzle double, 2.0 mm Inner 2.0 mm (10 pk)* | 10 |
| | PT358-0620X | L30666-20 | | PT-Nozzle double, 2.5 mm/inner 2.0 mm (10 pk)* | 10 |
| | PT358-0720X | L30667-20 | | PT-Nozzle double, 3.0 mm/inner 2.0 mm (10 pk)* | 10 |
| | PT358-0023X | L30665 | | PT-Nozzle double, 2.3 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0007X | L30666 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0030X | L30667 | | PT-Nozzle double, 3.0 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0035X | L30668 | | PT-Nozzle double, 3.5 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0010CPX | L30660X | | PT-Nozzle double, 1.0 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0125CPX | L30661X | | PT-Nozzle double, 1.2 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0124CPX | L30672X | | PT-Nozzle double, 1.4 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0015CPX | L30662X | | PT-Nozzle double, 1.5 mm/inner 1.5 mm CP (10 pk)* | 10 |
| 3 | PT358-0018CPX | L30663X | | PT-Nozzle double, 1.8 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0020CPX | L30664X | | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 10 |
| | PT358-0023CPX | L30665X | | PT-Nozzle double, 2.3 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0025CPX | L30666X | | PT-Nozzle double, 2.5 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0030CPX | L30667X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0035CPX | L30668X | | PT-Nozzle double, 3.5 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0040X | L30840 | | PT-Nozzle double, 4.0 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0040CPX | L30840X | | PT-Nozzle double, 4.0 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0045X | L30841 | | PT-Nozzle double, 4.5 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-0045CPX | L30841X | | PT-Nozzle double, 4.5 mm/inner 1.5 mm CP (10 pk)* | 10 |
| | PT358-0050X | L30861 | | PT-Nozzle double, 5.0 mm/inner 1.5 mm (10 pk)* | 10 |
| | PT358-1925 | L1925 | | PT-Nozzle double Penta, 1.0 mm | 1 |
| | PT358-1926 | L1926 | | PT-Nozzle double Penta, 1.2 mm | 1 |
| | PT358-1927 | L1927 | | PT-Nozzle double Penta, 1.5 mm | 1 |
| | PT358-1928 | L1928 | | PT-Nozzle double Penta, 2.0 mm | 1 |
| | PT358-1929 | L1929 | | PT-Nozzle double Penta, 2.5 mm | 1 |
| | PT358-1930 | L1930 | | PT-Nozzle double Penta, 3.0 mm | 1 |
| | PT358-1931 | L1931 | | PT-Nozzle double Penta, 3.5 mm | 1 |
| | PT358-1932 | L1932 | | PT-Nozzle double Penta, 4.0 mm | 1 |
| | PT358-1933 | L1933 | | PT-Nozzle double Penta, 4.5 mm | 1 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)

Centricut[®]

Replacement parts suitable for:

Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT, Hans, Mazak, SHT and Salvagnini systems

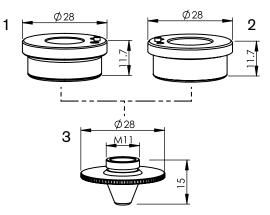

Consumables


| | Centricut part number | Esse A part number | Reference | Description | Pkg qty | | |
|---|--------------------------|-----------------------|-------------------------------------|-------------------------------|------------|--|--|
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 4.y 1 | | |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 | | |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 | | |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 | | |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 | | |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 | | |
| | PT350-1590X | L30247 | 281590, P0591-569-00008 | PT-Nozzle, 0.8 mm (10 pk)* | 10 | | |
| | PT350-1331X | L30162 | 281331, P0591-561-00010 | PT-Nozzle, 1.0 mm (10 pk)* | 10 | | |
| | PT350-1351X | L30130 | 281351, P0591-562-00012 | PT-Nozzle, 1.2 mm (10 pk)* | 10 | | |
| | PT350-1352X | L30131 | 281352, P0591-563-00015 | PT-Nozzle, 1.5 mm (10 pk)* | 10 | | |
| | PT350-1353X | L30153 | 281353, P0591-564-00018 | PT-Nozzle, 1.8 mm (10 pk)* | 10 | | |
| | PT350-1354X | L30132 | 281354, P0591-565-00020 | PT-Nozzle, 2.0 mm (10 pk)* | 10 | | |
| | PT350-0023X | L30154 | | PT-Nozzle, 2.3 mm (10 pk)* | 10 | | |
| | PT350-1591X | L30155 | 281591, P0591-566-00025 | PT-Nozzle, 2.5 mm (10 pk)* | 10 | | |
| | PT350-0030X | L30156 | | PT-Nozzle, 3.0 mm (10 pk)* | 10 | | |
| 3 | PT350-1590CPX | L30247X | 281590, P0591-569-00008 | PT-Nozzle, 0.8 mm CP (10 pk)* | 10 | | |
| | PT350-1331CPX | L30162X | 281331, P0591-561-00010 | PT-Nozzle, 1.0 mm CP (10 pk)* | 10 | | |
| | PT350-1351CPX | L30130X | 281351, P0591-562-00012 | PT-Nozzle, 1.2 mm CP (10 pk)* | 10 | | |
| | PT350-1352CPX | L30131X | 281352, P0591-563-00015 | PT-Nozzle, 1.5 mm CP (10 pk)* | 10 | | |
| | PT350-0001CPX | L30248X | | PT-Nozzle, 1.7 mm CP (10 pk)* | 10 | | |
| | PT350-1353CPX | L30153X | 281353, P0591-564-00018 | PT-Nozzle, 1.8 mm CP (10 pk)* | 10 | | |
| | PT350-1354CPX | L30132X | 281354, P0591-565-00020 | PT-Nozzle, 2.0 mm CP (10 pk)* | 10 | | |
| | PT350-0002CPX | L30154X | | PT-Nozzle, 2.3 mm CP (10 pk)* | 10 | | |
| | PT350-1591CPX | L30155X | 281591, P0591-566-00025 | PT-Nozzle, 2.5 mm CP (10 pk)* | 10 | | |
| | PT350-0003CPX | L30156X | | PT-Nozzle, 3.0 mm CP (10 pk)* | 10 | | |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT and Salvagnini systems

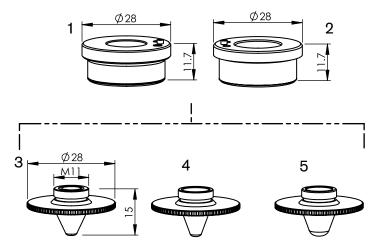


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-------------------------------------|---|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT358-0001 | L1348 | 6930250001 | PT-Nozzle double 3D, 0.8 mm/inner 1.5 mm | 1 |
| | PT358-0002 | L1349 | 6930250002 | PT-Nozzle double 3D, 1.0 mm/inner 1.5 mm | 1 |
| | PT358-0003 | L1350 | 6930250003 | PT-Nozzle double 3D, 1.2 mm/inner 1.5 mm | 1 |
| | PT358-0004 | L1351 | 6930250004 | PT-Nozzle double 3D, 1.5 mm/inner 1.5 mm | 1 |
| 3 | PT358-0005 | L1470 | | PT-Nozzle double 3D, 1.8 mm/inner 1.5 mm | 1 |
| | PT358-0002CP | L1349X | | PT-Nozzle double 3D, 1.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0003CP | L1350X | | PT-Nozzle double 3D, 1.2 mm/inner 1.5 mm CP | 1 |
| | PT358-0004CP | L1351X | | PT-Nozzle double 3D, 1.5 mm/inner 1.5 mm CP | 1 |
| | PT358-0005CP | L1470X | | PT-Nozzle double 3D, 1.8 mm/inner 1.5 mm CP | 1 |
| | PT406-0799 | L799 | | PT-Nozzle HD, 0.8 mm | 1 |
| | PT406-0001 | L738 | | PT-Nozzle HD, 1.0 mm | 1 |
| 4 | PT406-0002 | L739 | | PT-Nozzle HD, 1.2 mm | 1 |
| | PT406-0003 | L740 | | PT-Nozzle HD, 1.5 mm | 1 |
| | PT406-0008 | L792 | | PT-Nozzle, 0.8 mm | 1 |
| | PT406-0010 | L793 | | PT-Nozzle, 1.0 mm | 1 |
| 5 | PT406-0125 | L794 | | PT-Nozzle, 1.2 mm | 1 |
| 9 | PT406-0015 | L742 | P0591-1049-00015 | PT-Nozzle, 1.5 mm | 1 |
| | PT406-0018 | L743 | P0591-1050-00018 | PT-Nozzle, 1.8 mm | 1 |
| | PT406-0020 | L744 | | PT-Nozzle, 2.0 mm | 1 |



Precitec[®]

For Adige, Finn Power and GHT systems

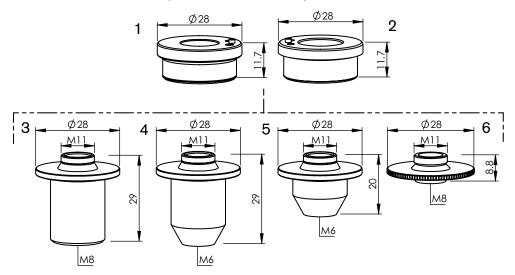


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------------------|-----------------------------|------------|
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 3 | PT406-0333 | AL333 | | PT-Nozzle adapter, L=29 M8 | 1 |
| 4 | PT406-0334 | AL334 | | PT-Nozzle adapter, L=30 M6 | 1 |
| 5 | PT406-0335 | AL335 | | PT-Nozzle adapter, L=20 M6 | 1 |
| 6 | PT406-0043 | AL43 | | PT-Nozzle adapter | 1 |



Precitec[®]

For Adige, Finn Power and GHT systems

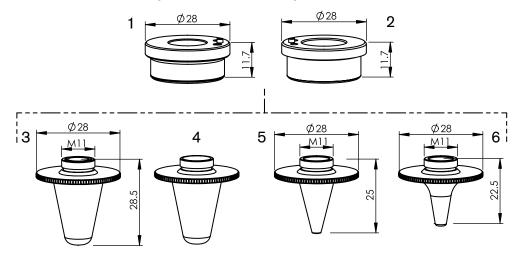


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-------------------------------------|----------------------------------|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT420-0010 | L680 | | PT-Nozzle double long, 1.0 mm | 1 |
| | PT420-0125 | L681 | | PT-Nozzle double long, 1.2 mm | 1 |
| | PT420-0015 | L682 | | PT-Nozzle double long, 1.5 mm | 1 |
| | PT420-0018 | L683 | | PT-Nozzle double long, 1.8 mm | 1 |
| 3 | PT420-0020 | L684 | | PT-Nozzle double long, 2.0 mm | 1 |
| | PT420-0023 | L685 | | PT-Nozzle double long, 2.3 mm | 1 |
| | PT420-0025 | L686 | | PT-Nozzle double long, 2.5 mm | 1 |
| | PT420-0030 | L687 | | PT-Nozzle double long, 3.0 mm | 1 |
| | PT420-0035 | L688 | | PT-Nozzle double long, 3.5 mm | 1 |
| | PT390-0010 | L308 | P0573-563-00010 | PT-Nozzle long, 1.0 mm | 1 |
| | PT390-0012 | L307 | P0573-563-00012 | PT-Nozzle long, 1.2 mm | 1 |
| | PT390-0015 | L382 | P0573-563-00015 | PT-Nozzle long, 1.5 mm | 1 |
| 4 | PT390-0018 | L383 | | PT-Nozzle long, 1.8 mm | 1 |
| | PT390-0020 | L437 | P0573-564-00020 | PT-Nozzle long, 2.0 mm | 1 |
| | PT390-0025 | L439 | P0573-566-00025 | PT-Nozzle long, 2.5 mm | 1 |
| | PT390-0030 | L440 | | PT-Nozzle long, 3.0 mm | 1 |
| | PT390-0001 | L1341 | | PT-Nozzle long, 1.0 mm | 1 |
| 5 | PT390-0002 | L1343 | | PT-Nozzle long, 1.5 mm | 1 |
| J | PT390-0003 | L1344 | | PT-Nozzle long, 1.8 mm | 1 |
| | PT390-0004 | L1345 | | PT-Nozzle long, 2.0 mm | 1 |
| | PT390-0040 | L1374 | P0578-0411-00010 | PT-Nozzle radius long, 1.0 mm | 1 |
| | PT390-0005 | L1375 | P0578-0412-00012 | PT-Nozzle radius long, 1.2 mm | 1 |
| | PT390-0006 | L1376 | P0578-0413-00015, 6930300039 | PT-Nozzle radius long, 1.5 mm | 1 |
| | PT390-0009 | L1373 | P0578-0414-00018 | PT-Nozzle radius long, 1.8 mm | 1 |
| 6 | PT390-0007 | L1377 | P0578-0415-00020, 6930300040 | PT-Nozzle radius long, 2.0 mm | 1 |
| | PT390-0008 | L1378 | P0578-0417-00025 | PT-Nozzle radius long, 2.5 mm | 1 |
| | PT390-0005CP | L1375X | | PT-Nozzle radius long, 1.2 mm CP | 1 |
| | PT390-0006CP | L1376X | | PT-Nozzle radius long, 1.5 mm CP | 1 |
| | PT390-0007CP | L1377X | | PT-Nozzle radius long, 2.0 mm CP | 1 |



Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT, Hans, Mazak, SHT and Salvagnini systems

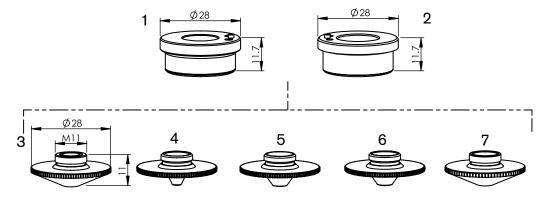

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|----------|------------------------|-------------|-------------------------------------|--|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT377-0001 | L1179 | | PT-Nozzle double, 1.0 mm/inner 1.5 mm | 1 |
| | PT377-0002 | L1180 | | PT-Nozzle double, 1.5 mm/inner 1.5 mm | 1 |
| | PT377-0003 | L1181 | | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT377-0004 | L1182 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm | 1 |
| | PT377-0005 | L1183 | | PT-Nozzle double, 3.0 mm/inner 1.5 mm | 1 |
| | PT377-0001CP | L1179X | | PT-Nozzle double, 1.0 mm/inner 1.5 mm CP | 1 |
| 3 | PT377-1160CP | L1160X | | PT-Nozzle double, 1.2 mm/inner 1.5 mm CP | 1 |
|) | PT377-1161CP | L1161X | | PT-Nozzle double, 1.4 mm/inner 1.5 mm CP | 1 |
| | PT377-0002CP | L1180X | | PT-Nozzle double, 1.5 mm/inner 1.5 mm CP | 1 |
| | PT377-1162CP | L1162X | | PT-Nozzle double, 1.8 mm/inner 1.5 mm CP | 1 |
| | PT377-0003CP | L1181X | | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT377-0004CP | L1182X | | PT-Nozzle double, 2.5 mm/inner 1.5 mm CP | 1 |
| | PT377-0005CP | L1183X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP | 1 |
| | PT377-1184CP | L1184X | | PT-Nozzle double, 3.5 mm/inner 1.5 mm CP | 1 |
| | PT348-0001 | L1218 | | PT-Nozzle HD, 1.5 mm | 1 |
| | PT348-0002 | L1219 | | PT-Nozzle HD, 2.0 mm | 1 |
| 4 | PT348-0003 | L1220 | | PT-Nozzle HD, 2.5 mm | 1 |
| | PT348-0002CP | L1219X | | PT-Nozzle HD, 2.0 mm CP | 1 |
| | PT348-0003CP | L1220X | | PT-Nozzle HD, 2.5 mm CP | 1 |
| | PT348-0010 | L1060 | | PT-Nozzle HD, 1.0 mm | 1 |
| | PT348-0012 | L1061 | | PT-Nozzle HD, 1.2 mm | 1 |
| | PT348-0015 | L1062 | | PT-Nozzle HD, 1.5 mm | 1 |
| | PT348-0020 | L1063 | | PT-Nozzle HD, 2.0 mm | 1 |
| 5 | PT348-0025 | L1064 | | PT-Nozzle HD, 2.5 mm | 1 |
| | PT348-0030 | L1065 | | PT-Nozzle HD, 3.0 mm | 1 |
| | PT348-1086 | L1086 | | PT-Nozzle HD, 3.5 mm | 1 |
| | PT348-1087 | L1087 | | PT-Nozzle HD, 4.0 mm | 1 |
| | PT348-1088 | L1088 | | PT-Nozzle HD, 4.5 mm | 1 |
| | PT348-1089 | L1089 | | PT-Nozzle HD, 5.0 mm | 1 |



Replacement parts suitable for: **Precitec**[®]

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------|-------------------|------------|
| | PT348-1340 | L410 | 281340, P0571-281-00010 | PT-Nozzle, 1.0 mm | 1 |
| | PT348-1341 | L411 | 281341, P0571-282-00012 | PT-Nozzle, 1.2 mm | 1 |
| 6 | PT348-1342 | L412 | 281342, P0571-283-00015 | PT-Nozzle, 1.5 mm | 1 |
| 6 | PT348-0018 | L413 | 281342, P0571-284-00018 | PT-Nozzle, 1.8 mm | 1 |
| | PT348-1343 | L414 | 281343, P0571-285-00020 | PT-Nozzle, 2.0 mm | 1 |
| | PT348-1344 | L415 | 281344, P0571-286-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT377-0010 | L465 | 281599, P0571-291-00010 | PT-Nozzle, 1.0 mm | 1 |
| | PT377-0012 | L466 | P0571-292-00012 | PT-Nozzle, 1.2 mm | 1 |
| | PT377-0015 | L467 | 281570, P0571-293-00015 | PT-Nozzle, 1.5 mm | 1 |
| 7 | PT377-0018 | L468 | | PT-Nozzle, 1.8 mm | 1 |
| | PT377-0020 | L469 | 281571, P0571-295-00020 | PT-Nozzle, 2.0 mm | 1 |
| | PT377-0025 | L470 | 281572, P0571-297-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT377-0030 | L463 | | PT-Nozzle, 3.0 mm | 1 |




1

Replacement parts suitable for:

Precitec[®]

For Adige, Durma, Ermaksan, Finn Power, GHT, Hans, Mazak, SHT and Salvagnini systems

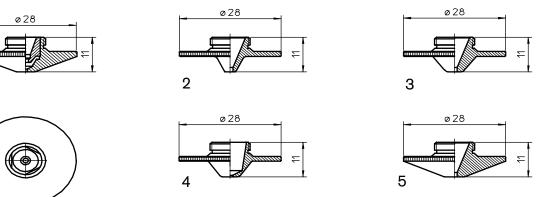


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------------|-------------|-------------------------|--|-----|
| | part number | part number | number | Description | qty |
| | PT377-0001 | L1179 | | PT-Nozzle double, 1.0 mm/inner 1.5 mm | 1 |
| | PT377-0002 | L1180 | | PT-Nozzle double, 1.5 mm/inner 1.5 mm | 1 |
| | PT377-0002 | L1181 | | PT-Nozzle double, 1.5 mm/inner 1.5 mm | 1 |
| | PT377-0003 | L1182 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm | 1 |
| | PT377-0004 | L1183 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm | 1 |
| | PT377-0001CP | L1179X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP | 1 |
| | | L1160X | | | 1 |
| 1 | PT377-1160CP PT377-1161CP | L1161X | | PT-Nozzle double, 1.2 mm/inner 1.5 mm CP | 1 |
| | | L1180X | | PT-Nozzle double, 1.4 mm/inner 1.5 mm CP | 1 |
| | PT377-0002CP | | | PT-Nozzle double, 1.5 mm/inner 1.5 mm CP | |
| | PT377-1162CP | L1162X | | PT-Nozzle double, 1.8 mm/inner 1.5 mm CP | 1 |
| | PT377-0003CP | L1181X | | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT377-0004CP | L1182X | | PT-Nozzle double, 2.5 mm/inner 1.5 mm CP | 1 |
| | PT377-0005CP | L1183X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP | 1 |
| | PT377-1184CP | L1184X | | PT-Nozzle double, 3.5 mm/inner 1.5 mm CP | 1 |
| | PT348-0001 | L1218 | | PT-Nozzle HD, 1.5 mm | 1 |
| | PT348-0002 | L1219 | | PT-Nozzle HD, 2.0 mm | 1 |
| 2 | PT348-0003 | L1220 | | PT-Nozzle HD, 2.5 mm | 1 |
| | PT348-0002CP | L1219X | | PT-Nozzle HD, 2.0 mm CP | 1 |
| | PT348-0003CP | L1220X | | PT-Nozzle HD, 2.5 mm CP | 1 |
| | PT348-0010 | L1060 | | PT-Nozzle HD, 1.0 mm | 1 |
| | PT348-0012 | L1061 | | PT-Nozzle HD, 1.2 mm | 1 |
| | PT348-0015 | L1062 | | PT-Nozzle HD, 1.5 mm | 1 |
| | PT348-0020 | L1063 | | PT-Nozzle HD, 2.0 mm | 1 |
| 3 | PT348-0025 | L1064 | | PT-Nozzle HD, 2.5 mm | 1 |
| | PT348-0030 | L1065 | | PT-Nozzle HD, 3.0 mm | 1 |
| | PT348-1086 | L1086 | | PT-Nozzle HD, 3.5 mm | 1 |
| | PT348-1087 | L1087 | | PT-Nozzle HD, 4.0 mm | 2 |
| | PT348-1088 | L1088 | | PT-Nozzle HD, 4.5 mm | 3 |
| | PT348-1089 | L1089 | | PT-Nozzle HD, 5.0 mm | 4 |
| | PT348-1340 | L410 | 281340, P0571-281-00010 | PT-Nozzle, 1.0 mm | 1 |
| | PT348-1341 | L411 | 281341, P0571-282-00012 | PT-Nozzle, 1.2 mm | 1 |
| 4 | PT348-1342 | L412 | 281342, P0571-283-00015 | PT-Nozzle, 1.5 mm | 1 |
| 4 | PT348-0018 | L413 | 281342, P0571-284-00018 | PT-Nozzle, 1.8 mm | 1 |
| | PT348-1343 | L414 | 281343, P0571-285-00020 | PT-Nozzle, 2.0 mm | 1 |
| | PT348-1344 | L415 | 281344, P0571-286-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT377-0010 | L465 | 281599, P0571-291-00010 | PT-Nozzle, 1.0 mm | 1 |
| | PT377-0012 | L466 | P0571-292-00012 | PT-Nozzle, 1.2 mm | 1 |
| | PT377-0015 | L467 | 281570, P0571-293-00015 | PT-Nozzle, 1.5 mm | 1 |
| 5 | PT377-0018 | L468 | | PT-Nozzle, 1.8 mm | 1 |
| | PT377-0020 | L469 | 281571, P0571-295-00020 | PT-Nozzle, 2.0 mm | 1 |
| | PT377-0025 | L470 | 281572, P0571-297-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT377-0030 | | | | 1 |
| | | L470 | 201312, 10311-231-00023 | PT-Nozzle, 2.3 mm PT-Nozzle, 3.0 mm | |



Precitec[®]

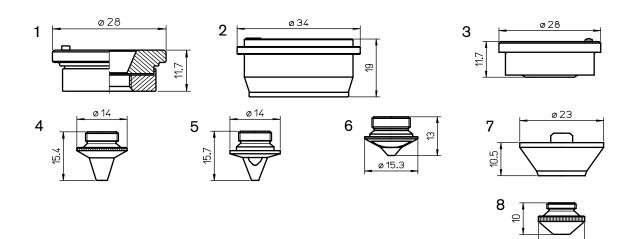

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------------------|---------------------------------------|------------|
| 1 | PT348-1330C | AL331 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder, ceramic | 1 |
| 2 | PT348-1001 | AL228 | | PT-Nozzle holder | 1 |
| 3 | PT348-1518 | AL141 | 281518, P0571-265-00001 | PT-Nozzle holder IT B2" Z, aluminum | 1 |
| | PT344-1813X | L30405 | 281813, P0589-424-00008 | PT-Nozzle, 0.8 mm (10 pk)* | 10 |
| | PT344-1789X | L30406 | 281789, P0589-426-00010 | PT-Nozzle, 1.0 mm (10 pk)* | 10 |
| | PT344-1561X | L30404 | 281561, 778550 | PT-Nozzle, 1.2 mm (10 pk)* | 10 |
| 4 | PT344-1499X | L30407 | 281814, 149957 | PT-Nozzle, 1.5 mm (10 pk)* | 10 |
| | PT344-0020X | L30408 | P0589-428-00020 | PT-Nozzle, 2.0 mm (10 pk)* | 10 |
| | PT344-1791 | | 281791, P0492-446-00025, W226 | PT-Nozzle FP, 2.5 mm | 1 |
| | YK52 Sensor system | | | | |
| | PT391-0010X | L30800 | 281498, P0587-722-00010 | PT-Nozzle, 1.0 mm (10 pk)* | 10 |
| | PT391-0012X | L30801 | P0587-723-00012 | PT-Nozzle, 1.2 mm (10 pk)* | 10 |
| _ | PT391-0015X | L30802 | 281497, P0587-721-00015 | PT-Nozzle, 1.5 mm (10 pk)* | 10 |
| 5 | PT391-0018X | L30803 | 281516, P0587-737-00018 | PT-Nozzle, 1.8 mm (10 pk)* | 10 |
| | PT391-0020X | L30804 | 281567, P0587-771-00020 | PT-Nozzle, 2.0 mm (10 pk)* | 10 |
| | PT391-0025X | L30805 | P0587-772-00025 | PT-Nozzle, 2.5 mm (10 pk)* | 10 |
| 6 | PT401-1008 | L1012 | P0587-842-00008 | PT-Nozzle, 0.8 mm | 1 |
| 6 | PT401-0010 | L1013 | P0587-841-00010 | PT-Nozzle, 1.0 mm | 1 |
| 7 | PT344-1079 | AL138 | 281079, P0492-430-00003, W149 | PT-Nozzle Holder KT M1.5" S F2.5" OEM | 1 |
| | PT344-0013X | L30400 | 280013, P0492-441-00008, W222 | PT-Nozzle FP, 0.8 mm (10 pk)* | 10 |
| | PT344-0014X | L30401 | | PT-Nozzle FP, 1.0 mm (10 pk)* | 10 |
| | PT344-0015X | L30402 | 280015, P0492-443-00012 | PT-Nozzle FP, 1.2 mm (10 pk)* | 10 |
| | PT344-0016X | L30403X | | PT-Nozzle FP, 1.5 mm (10 pk)* | 10 |
| | PT344-0018X | L30543 | P0492-447-00018 | PT-Nozzle FP, 1.8 mm (10 pk)* | 10 |
| 8 | PT344-0937X | L30544 | | PT-Nozzle FP, 3.0 mm (10 pk)* | 10 |
| | PT344-1791X | L30545 | | PT-Nozzle FP, 2.5 mm (10 pk)* | 10 |
| | PT344-0027X | L30547 | | PT-Nozzle FP, 3.0 mm (10 pk)* | 10 |
| | PT344-0010CPX | L30401X | 280014, P0492-442-00010, W223 | PT-Nozzle FP, 1.0 mm CP (10 pk)* | 10 |
| | PT344-0015CPX | L30403X | 280016, P0492-444-00015, W224 | PT-Nozzle FP, 1.5 mm CP (10 pk)* | 10 |
| | PT344-0022CPX | L30544X | 280937, P0492-445-00020, W225 | PT-Nozzle FP, 2.0 mm CP (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)


Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.

ø 12.7



Precitec[®]

For Adige, Finn Power and Salvagnini systems

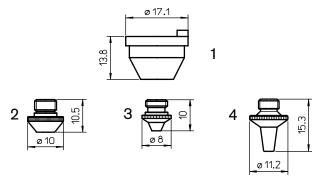

Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------|---|------------|
| 1 | TR302-2405 | AL53 | 280408, 092405 | TR-Nozzle holder KT M1.5" KN OEM | 1 |
| | PT344-0551X | L30292 | 280551, P0494-853-00010 | PT-Nozzle, 1.0 mm (10 pk)* | 10 |
| | PT344-0552X | L30293 | 280552, P0494-854-00012 | PT-Nozzle, 1.2 mm (10 pk)* | 10 |
| | PT344-0553X | L30294 | 280553, P0494-855-00015 | PT-Nozzle, 1.5 mm (10 pk)* | 10 |
| | PT344-0554X | L30295 | 280553, P0494-856-00017 | PT-Nozzle, 1.7 mm (10 pk)* | 10 |
| 2 | PT344-0555X | L30296 | 280555, P0494-855-00020 | PT-Nozzle, 2.0 mm (10 pk)* | 10 |
| | PT344-9023X | L30372 | | PT-Nozzle, 2.3 mm (10 pk)* | 10 |
| | PT344-9025X | L30371 | | PT-Nozzle, 2.5 mm (10 pk)* | 10 |
| | PT344-0030X | L30304 | | PT-Nozzle, 3.0 mm (10 pk)* | 10 |
| | PT344-0400X | L30303 | | PT-Nozzle, 4.0 mm (10 pk)* | 10 |
| | DE M 1.5" | | | | |
| | PT379-0010X | L301055 | 280943, P0494-787-00010 | PT-Nozzle KN TAK, 1.0 mm (10 pk)* | 10 |
| | PT379-0012X | L301056 | 280942, P0494-788-00012 | PT-Nozzle KN TAK, 1.2 mm (10 pk)* | 10 |
| 3 | PT379-0015X | L301057 | 280941, P0494-789-00015 | PT-Nozzle KN TAK, 1.5 mm (10 pk)* | 10 |
| | PT379-0018X | L301058 | | PT-Nozzle KN TAK, 1.8 mm (10 pk)* | 10 |
| | PT379-0020X | L301059 | | PT-Nozzle KN TAK, 2.0 mm (10 pk)* | 10 |
| | DE Y 30/22 | | | | |
| | PT344-1980X | L301980 | P0787-482-00012 | PT-Nozzle DE Y30/22 F100, 1.2 mm (10 pk)* | 10 |
| 1 | PT344-1981X | L301981 | P0787-483-00015 | PT-Nozzle DE Y30/22 F10, 1.5 mm (10 pk)* | 10 |
| 4 | PT344-1983X NEW | L301983 | P0787-1001-00020 | PT-Nozzle DE, 2.0 mm (10 pack)* | 10 |
| | PT344-1984X NEW | L301984 | | PT-Nozzle DE, 2.5 mm (10 pack)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Precitec[®]

For Adige and Mazak systems

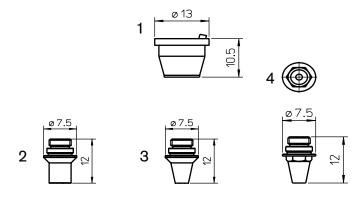

Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|---------------------------|---|-----|
| | part number | part number | number | Description | qty |
| 1 | PT347-0110 | | P0491-130-00001 | PT-Nozzle holder KT M1.5" K S OEM, ceramic | 1 |
| | PT347-1034X | L30481 | 281034, P0352-324-00012 | PT-Nozzle ZK, 1.2 mm (10 pk)* | 10 |
| | PT347-1013X | L30482 | 281013, P0352-325-00015 | PT-Nozzle ZK, 1.5 mm (10 pk)* | 10 |
| | PT347-0899X | L30483 | 280899, P0352-326-00018 | PT-Nozzle ZK, 1.8 mm (10 pk)* | 10 |
| 2 | PT347-0044-3 | L484 | 350044.3, P0352-327-00020 | PT-Nozzle ZK, 2.0 mm | 1 |
| | PT347-0044X | L30484 | 350044.3, P0352-327-00020 | PT-Nozzle ZK, 2.0 mm (10 pk)* | 10 |
| | PT347-1025X | L30485 | 350044.3, P0352-328-00025 | PT-Nozzle ZK, 2.5 mm (10 pk)* | 10 |
| | PT347-1006X | L30486 | 281006, P0352-333-00010 | PT-Nozzle KK, 1.0 mm (10 pk)* | 10 |
| | PT347-1030X | L30487 | 281030, P0352-334-00012 | PT-Nozzle KK, 1.2 mm (10 pk)* | 10 |
| | PT347-1031X | L30488 | 281031, P0352-335-00015 | PT-Nozzle KK, 1.5 mm (10 pk)* | 10 |
| | PT347-0898X | L30489 | 280898, P0352-336-00018 | PT-Nozzle KK, 1.8 mm (10 pk)* | 10 |
| | PT347-1020X | L30490 | P0352-336-00020 | PT-Nozzle KK, 2.0 mm (10 pk)* | 10 |
| 3 | PT347-1761 | L1761 | P0491-1001-00015 | PT-Nozzle hexagonal DE M1.5 KS, 1.2 mm | 1 |
| 3 | PT347-1762 | L1762 | P0491-1001-00015 | PT-Nozzle hexagonal DE M1.5 KS, 1.5 mm | 1 |
| | PT347-1764 | L1764 | P0491-1002-00020 | PT-Nozzle hexagonal DE M1.5 KS, 2.0 mm | 1 |
| | PT347-1760X | L301760 | P0491-1001-00015 | PT-Nozzle hexagonal DE M1.5 KS, 1.0 mm (10 pk)* | 1 |
| | PT347-1761X | L301761 | P0491-1002-00020 | PT-Nozzle hexagonal DE M1.5 KS, 1.2 mm (10 pk)* | 1 |
| | PT347-1762X | L301762 | L301762 | PT-Nozzle hexagonal DE M1.5 KS, 1.5 mm (10 pk)* | 1 |
| | PT347-1764X | L301764 | L301764 | PT-Nozzle hexagonal DE M1.5 KS, 2.0 mm (10 pk)* | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)





For Adige and Finn-Power systems

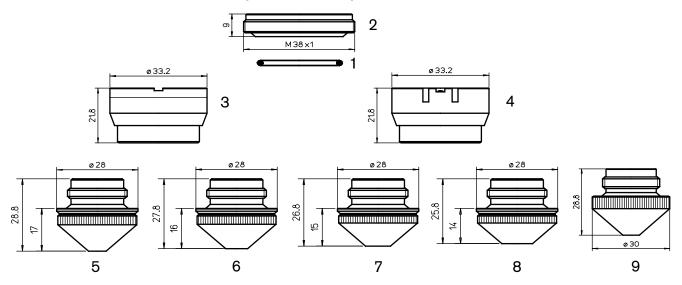

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-----------------------------------|--|------------|
| 1 | AM326-6453 | AL94 | 71366453 | AM-O-ring for outer nozzle | 1 |
| | PT311-0001 | AL201 | P0492-702-00002 | PT-Insulating ring | 1 |
| 2 | PT347-4297 | AL198 | P0492-702-00001, 29100021 | PT-Insulating ring outer body | 1 |
| 3 | PT311-0298 | AL298 | P0497-68871 | PT-Nozzle holder KTM 1.5" DXN, ceramic | 1 |
| | PT311-1146 Recommended | AL130/S | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ | 1 |
| 4 | PT311-11460EM | AL130 | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ OEM | 1 |
| 5 | PT376-0010 | L365 | 280029, P0492-628-00010 | PT-Nozzle, 1.0 mm | 1 |
| 5 | PT376-0012 | L366 | 280030, P0492-629-00012 | PT-Nozzle, 1.2 mm | 1 |
| 6 | PT376-0015 | L367 | 280028, P0492-627-00015 | PT-Nozzle, 1.5 mm | 1 |
| 7 | PT376-0017 | L368 | 281384, P0492-630-00017 | PT-Nozzle, 1.7 mm | 1 |
| 1 | PT376-0020 | L369 | 280027, P0492-626-00020 | PT-Nozzle, 2.0 mm | 1 |
| 8 | PT376-0025 | L370 | 280026, P0492-625-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT311-0012 | L164 | 281254, P0380-252-00012 | PT-Nozzle, 1.2 mm | 1 |
| | PT311-0015 | L165 | 281255, P0380-253-00015 | PT-Nozzle, 1.5 mm | 1 |
| 9 | PT311-0020 | L166 | 281270, P0380-254-00020 | PT-Nozzle, 2.0 mm | 1 |
| 9 | PT311-0025 | L167 | 281271, P0380-255-00025 | PT-Nozzle, 2.5 mm | 1 |
| | PT311-0027 | L462 | 281271-2.7 | PT-Nozzle, 2.7 mm | 1 |
| | PT311-0030 | L201 | 281271-3.0 | PT-Nozzle, 3.0 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



З


1

7

Replacement parts suitable for:

Precitec®

For Adige and Mazak systems

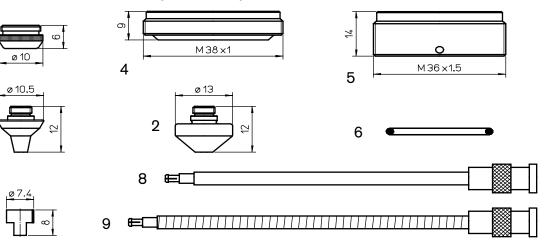

Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|----------------|-------------|---------------------------------|---|-----|
| | part number | part number | number | Description | qty |
| | PT347-0005 | L554 | 46713300290-10 | PT-Nozzle 3D, 1.0 mm | 1 |
| | PT347-0290-1.2 | L555 | 46713300290-12 | PT-Nozzle 3D, 1.2 mm | 1 |
| | PT347-0090X | L30555 | 46713300290-12 | PT-Nozzle 3D, 1.2 mm (10 pk)* | 10 |
| | PT347-0290X | L30556 | 46713300290-15, P0352-381-00015 | PT-Nozzle 3D, 1.5 mm (10 pk)* | 10 |
| 1 | PT347-0118X | L30557 | P0352-377-00018 | PT-Nozzle 3D, 1.8 mm (10 pk)* | 10 |
| | PT347-0280X | L30558 | 46713300310, P0352-382-00020 | PT-Nozzle 3D, 2.0 mm (10 pk)* | 10 |
| | PT347-0001X | L30560 | 46713300280-25 | PT-Nozzle 3D, 2.5 mm (10 pk)* | 10 |
| | PT347-0002X | L30563 | 46713300280-30, 46713300430 | PT-Nozzle 3D, 3.0 mm (10 pk)* | 10 |
| | PT347-0035X | L30564 | 46713300280-35 | PT-Nozzle 3D, 3.5 mm (10 pk)* | 10 |
| | PT347-0004X | L30576 | | PT-Nozzle 2D, 1.0 mm (10 pk)* | 10 |
| | PT347-0310-1.2 | L577 | 46713300310 | PT-Nozzle 2D, 1.2 mm | 1 |
| | PT347-0012X | L30577 | 46713300310 | PT-Nozzle 2D, 1.2 mm (10 pk)* | 10 |
| 2 | PT347-0310X | L30578 | P0352-386-00015 | PT-Nozzle 2D, 1.5 mm (10 pk)* | 10 |
| | PT347-0300X | L30580 | 46713300300, P0352-387-00020 | PT-Nozzle 2D, 2.0 mm (10 pk)* | 10 |
| | PT347-0003X | L30581 | 46713300300-25 | PT-Nozzle 2D, 2.5 mm (10 pk)* | 10 |
| | PT347-0006X | L30582 | 46713300300-30 | PT-Nozzle 2D, 3.0 mm (10 pk)* | 10 |
| 3 | PT347-0320 | AL160 | 46713300321, P0352-311-00001 | PT-Union nut, Vespel | 1 |
| 4 | PT347-4297 | AL198 | P0492-702-00001, 29100021 | PT-Insulating ring outer body | 1 |
| 5 | PT347-0008 | AL218 | 46713330200 | PT-Isolating ring outer body (Precitec) | 1 |
| 6 | AM326-6453 | AL94 | 71366453 | AM-O-ring for outer nozzle | 1 |
| 7 | PT347-0009 | AL256 | 46713300390 | PT-Connector protector | 1 |
| 8 | PT347-0101 | AL204 | P0360-100-00500, 46713300100 | PT-Sensor head connecting cable OEM | 1 |
| 9 | PT347-1386 | AL257 | 281386, P0360-155-00500 | PT-Electrode cable | 1 |


*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)





Precitec[®]


For Koike systems

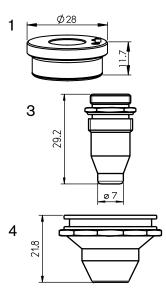

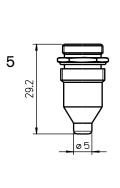

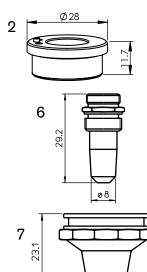

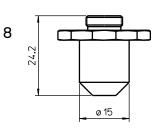



Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------------------|-----------------------------|------------|
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 3 | PT348-4175 | L1547 | 20054175 | PT-Nozzle, 1.9 mm | 1 |
| 4 | PT348-4176 | AL415 | 20054176 | PT-Nozzle outer, 8.0 mm | 1 |
| 5 | PT348-5175 | L1595 | | PT-Nozzle, 1.7 mm | 1 |
| 6 | PT348-0414 | AL414 | | PT-Nozzle outer, 7.0 mm | 1 |
| 7 | PT348-1545 | L1545 | | PT-Nozzle, 1.9 mm | 1 |
| ' | PT348-1594 NEW | L1594 | | PT-Nozzle, 1.2 mm | 1 |
| 8 | PT348-1598 | L1598 | | PT-Nozzle, 3.0 mm | 1 |
| 9 | PT348-0413 | AL413 | CZ20B-2 | PT-Spacer | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: **Precitec**[®]

Consumables

| Centricut | Esse A | Reference | | Pkg |
|--------------------------------|----------------|-----------------|--|-----|
| part number | part number | number | Description | qty |
| PRECITEC® original spare parts | s (not shown) | | | |
| PT347-0110 | | P0491-130-00001 | PT-Nozzle holder KT M1.5" K S OEM, ceramic | 1 |
| PT347-0007 | AL211 | P0354-110-00001 | PT-Sensor cone HNZ (Mazak) | 1 |
| PT347-0010 | | P0591-105-00001 | PT-Connector head OEM | 1 |
| PT347-0012 | | P0497-130-00001 | PT-Nut, M1.5" DXN OEM | 1 |
| PT347-0013 | | P0787-467-00001 | PT-Protection cap | 1 |
| PT347-0200 | | P0497-002-00200 | PT-Cable OEM, 200 mm | 1 |
| PT347-0014 | KE 300 gw Z mm | P0360-150-00300 | PT-Sensor cable OEM | 1 |
| PT347-0016 | | P0591-770-00001 | PT-Electrode tacitile OEM | 1 |
| PT347-0017 | ZM HP1.5" DR | P0591-329-00001 | PT-Seal OEM, 1.5" | 1 |
| PT347-0018 | ZM HP1.5" DF | P0BM00001124KF | PT-Seal OEM, 1.5" | 1 |
| PT347-0021 | | P0594-510-00001 | PT-Sensor insert SE HP 2.0" OEM | 1 |
| PT347-0022 | 281617 | P0591-580-00001 | PT-Socket ZM HP 1.5" IB OEM | 1 |
| PT347-0023 | 281395 | P0591-920-00001 | PT- Seal set ZM HP1.5" DS OEM | 1 |
| PT347-0024 | | P0497-110-00001 | PT-Sensor insert SE M1.5" DXN | 1 |
| PT347-1439 | | P0591-360-00001 | PT-Lens ring set OEM | 1 |
| PT347-1383 | 281395 | P0591-490-00001 | PT-Nut tray HP OEM (4 pcs) | 1 |
| PT344-0001 | | P0788-580-00001 | Lens mount - OL YR30 F100 w/lens | 1 |
| PT347-0130 | | P0492-001-00130 | PT-Electrode cable OEM, KE 130 GW | 1 |
| PT347-0220 | | P0464-810-00220 | PT-Electrode cable OEM, KE 220 GGMM | 1 |
| PT347-350 | AL350 | 46713330960 | PT-Isolating ring, inner cone | 1 |
| PT347-349 | AL349 | 46713330930 | PT-Sensor cone inner | 1 |




D

Replacement parts suitable for:



For Adige, Durma, Ermakson, Finn Power, GHT, Hans, Mazak, SHT and Salvagnini systems

4

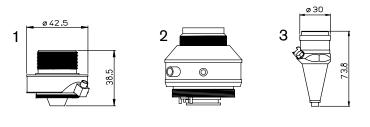

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|----------------------------|-----------------------|---|--|------------|
| | New sensor cones | | | | 15 |
| 1 | PT347-8001 | | 280010 | PT-Sensor cone 2.5Z/J | 1 |
| 2 | PT347-1145 NEW | | P0380-140-0002, P0380-130-00001, 281145 | PT-Sensor cone, DZ | 1 |
| | PT347-0011 NEW | | P0354-110-00001 | PT-Sensor Cone HNZ (Mitsubishi) | 1 |
| 3 | PT347-3323 NEW (not shown) | | HNP | PT-Sensor Cone HNP | 1 |
| 3 | PT347-0522 (not shown) | | P0599-520-00002 | PT-Sensor Cone LRC | 1 |
| | PT347-0019 (not shown) | | | PT-Sensor Insert SE 1.5" DZ | 1 |
| | Sensor cables | | | | |
| л | PT347-0101A | | P0360-100-00500 | PT-Sensor cable, 500 mm (20") armored | 1 |
| 4 | PT347-0250 (not shown) | | P0492-001-00250 | PT-Sensor cable, 250 mm (10") armored | 1 |
| 5 | PT347-0101 | AL204 | P0360-100-00500, 46713300100 | PT-Sensor head connecting cable OEM | 1 |
| 6 | PT347-1386 | AL257 | 281386, P0360-155-00500 | PT-Sensor cable, armored | 1 |
| | PT347-1250 (not shown) | | D5001-040-00250 | PT-Sensor cable, 250 mm (10") armored | 1 |
| | PT347-KS13 (not shown) | | PRECITEC AD#130 | PT-Sensor cable, 390 mm (15.5") armored | 1 |
| | PT347-06000EM (not shown) | | P0360-210-00600 | PT-Sensor cable, 600 ZWW 0EM | 1 |
| | PT347-0450 (not shown) | AL202 | P0497-002-00450 | PT-Sensor cable, 450 mm (17.7") | 1 |
| | PT347-0015A (not shown) | | 00B-15 | PT-Sensor cable, 380 mm (15") | 1 |
| | PT347-0181 (not shown) | AL358 | 46743300181 | PT-Sensor cable, 305mm (12") armored | 1 |
| | PT347-0522 (not shown) | | | PT-Sensor cone, LRC | 1 |
| | PT347-0014 (not shown) | | P36015000300 | PT-Sensor cable, KE 300 gw Z MM OEM | 1 |
| | PT344-3051 (not shown) | | | PT-Electrode guard, long | 1 |
| | PT347-0040 (not shown) | | 00BB-A-17i,BEC004-000.4 | PT-Sensor cable, 431 mm (17") armored | 1 |
| | PT347-0300A (not shown) | | P0492-014-00300 | PT-Sensor cable KE, 300 mm (12") armored | 1 |
| | PT348-0390 (not shown) | AL257/S | | PT-Sensor cable, 390 mm (15.5") | 1 |



Replacement parts suitable for: **Precitec**[®]

Consumables

| Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|--------------------------|-----------------------|---------------------|--------------------------------------|------------|
| PT311-0787 (not shown) | | | PT-Insulating ring | 1 |
| PT347-0920 (not shown) | AL221 | 46713330920 | PT-Isolating ring outer body (Mazak) | 1 |
| PT347-0520 (not shown) | | | PT-Insulating plate | 1 |
| PT347-0940 (not shown) | AL353 | 46713330940 | PT-Retaining ring | 1 |
| PT347-1240 (not shown) | AL351 | 46713331240 | PT-Torch outer body | 1 |
| PT347-0930 (not shown) | | | PT-Spatter protection plate | 2 |
| PT347-9006 (not shown) | AL356 | HNP-006 | PT-Connector cup, HNP | 1 |

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| PT317-0002 | 406294 | MEN | 1.5" | 5.0" | .290" |
| PT317-0001 | 452726 | MEN | 1.5" | 7.5" | .125" |
| PT317-6326 | 206326 | MEN | 2.0" | 5.0" | .378" |
| PT317-8936 | 468936/F | PLX | 1.5" | 2.5" | .085" |
| PT317-8275 | 628275 | PLX | 2.0" | 10.0" | .310" |
| PT317-0537 | 960537 | PLX | 2.0" | 10.0" | .380" |
| PT317-9527 | 779527 | PLX | 2.0" | 10.0" | .500" |
| PT317-8950 | 148950 | PLX | 1.5" | 2.5" | .085" |


| Centricut part number | Reference number | Material | Diameter | Edge thickness |
|--------------------------|--------------------------------|--------------------------------------|----------|-------------------|
| Windows | | | | |
| PT317-0589 | | FS (replacement o-ring = PT317-0501) | 22.35 mm | 4.0 mm |
| PT317-1789 | | FS | 50.00 mm | 3.18 mm |
| PT317-9360 | P58936000001 | FS (with o-ring) | 22.35 mm | 4.0 mm |
| PT317-1424 | WK OGC | FS | 21.50 mm | 2.0 mm |
| PT317-1425 | SCR-01 | FS | 38.00 mm | 5.2 mm |
| PT317-1551 | P0595-61551, P0595-58601-61551 | FS | 37.00 mm | 7.0 mm |
| PT317-5919 | 77005919 | FS | 48.00 mm | 7.0 mm |
| PT317-0010 NEW | P0253-1034-00001 | FS | 30.00 mm | 1.50 mm |
| PT347-0000 | P0251-1070-00001 | FS | 50.00mm | 2.0 mm |


Optics care

| Centricut | Reference | | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |










Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|------------------------|------------------------------|-----|
| | part number | part number | number | Description | qty |
| | PR351-1E109 | L532 | | PR-Nozzle, 0.8 mm | 1 |
| | PR351-1E110 | L312 | | PR-Nozzle, 1.0 mm | 1 |
| | PR351-1E108 | L362 | | PR-Nozzle, 1.2 mm | 1 |
| | PR351-1E111 | L207 | LW6.1E.111 | PR-Nozzle, 1.5 mm | 1 |
| | PR351-1E112 | L208 | LW6.1E.112 | PR-Nozzle, 2.0 mm | 1 |
| | PR351-1E113 | L209 | LW6.1E.113 | PR-Nozzle, 2.5 mm | 1 |
| 1 | PR351-1E114 | L210 | LW6.1E.114 | PR-Nozzle, 3.0 mm | 1 |
| | PR351-1E110CP | L312X | | PR-Nozzle, 1.0 mm CP | 1 |
| | PR351-1E115CP | L362X | | PR-Nozzle, 1.2 mm CP | 1 |
| | PR351-1E111CP | L207X | LW6.1E.111 | PR-Nozzle, 1.5 mm CP | 1 |
| | PR351-1E112CP | L208X | LW6.1E.112 | PR-Nozzle, 2.0 mm CP | 1 |
| | PR351-1E113CP | L209X | LW6.1E.113 | PR-Nozzle, 2.5 mm CP | 1 |
| | PR351-1E114CP | L210X | LW6.1E.114 | PR-Nozzle, 3.0 mm CP | 1 |
| | PR366-1G600 | L608 | LW6.1G.500, LW6.1G.600 | PR-Nozzle, 1.5 mm | 1 |
| | PR366-1G601 | L609 | LW6.1G.501, LW6.1G.601 | PR-Nozzle, 2.0 mm | 1 |
| | PR366-1G602 | L610 | LW6.1G.502, LW6.1G.602 | PR-Nozzle, 2.5 mm | 1 |
| 2 | PR366-1G603 | L611 | LW6.1G.503, LW6.1G.603 | PR-Nozzle, 3.0 mm | 1 |
| | PR366-1G601CP | L609X | LW6.1G.501, LW6.1G.601 | PR-Nozzle, 2.0 mm CP | 1 |
| | PR366-1G602CP | L610X | LW6.1G.502, LW6.1G.602 | PR-Nozzle, 2.5 mm CP | 1 |
| | PR366-1G603CP | L611X | LW6.1G.503, LW6.1G.603 | PR-Nozzle, 3.0 mm CP | 1 |
| | PR362-0008CP | L905X | 1059.70000.010 | PR-Nozzle double, 0.8 mm CP | 1 |
| | PR362-0003CP | L900X | 1059.70000.003 | PR-Nozzle double, 1.0 mm CP | 1 |
| | PR362-0002CP | L907X | 1059.70000.008 | PR-Nozzle double, 1.25 mm CP | 1 |
| 3 | PR362-0005CP | L901X | 1059.70000.004 | PR-Nozzle double, 1.5 mm CP | 1 |
| | PR362-0001CP | L906X | 1059.70000.009 | PR-Nozzle double, 1.75 mm CP | 1 |
| | PR362-0004CP | L902X | 1059.70000.005 | PR-Nozzle double, 2.0 mm CP | 1 |
| | PR362-0006CP | L903X | 1059.70000.006 | PR-Nozzle double, 2.5 mm CP | 1 |
| | PR362-0007CP | L904X | 1059.70000.007 | PR-Nozzle double, 3.0 mm CP | 1 |



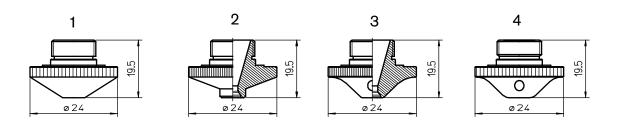


Consumables


| | Centricut part number | | Reference number | Description | Pkg qty |
|---|--------------------------|--------|---------------------|------------------------------|------------|
| | PR422-0001 | L862 | | PR-Nozzle, 1.0 mm | 1 |
| | PR422-0002 | L863 | | PR-Nozzle, 1.5 mm | 1 |
| 1 | PR422-0003 | L864 | | PR-Nozzle, 2.0 mm | 1 |
| | PR422-0004 | L865 | | PR-Nozzle, 2.5 mm | 1 |
| | PR422-0005 | L866 | | PR-Nozzle, 3.0 mm | 1 |
| 2 | PR422-0650CP | L1165X | LW6.1G.650 | PR-Nozzle, 3.0 CP | 1 |
| 3 | PR422-0608CP | L1208X | LW6. 1G. 608 | PR-Nozzle DL type, 3.0 mm CP | 1 |
| | PR394-604 | L1167X | LW6. 1G. 604 | PR-Nozzle, 1.5 mm CP | 1 |
| | PR394-603 | L1166X | | PR-Nozzle, 1.75 CP | 1 |
| 4 | PR394-605 | L1168X | LW6. 1G. 605 | PR-Nozzle, 2.0 mm CP | 1 |
| | PR394-606 | L1169X | LW6. 1G. 606 | PR-Nozzle, 2.5 mm CP | 1 |
| | PR394-607 | L1170X | LW6. 1G. 607 | PR-Nozzle, 3.0 mm CP | 1 |


Consumables


| Centricut part number | Esse A part number | Alternate reference | Description | Pkg qty |
|--------------------------|-----------------------|------------------------|------------------------------|------------|
| PR361-3150 (not shown) | | 99MM-150MM | PR-Sensor cable, 150 mm (6") | 1 |





























Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|------------|---|-----|
| | part number | part number | number | Description | qty |
| | PR422-0661 | L1429X | LW6.1G.661 | PR-Nozzle pentagonal, 1.0 mm CP | 1 |
| | PR422-0662 | L1430X | LW6.1G.662 | PR-Nozzle pentagonal, 1.25 mm CP | 1 |
| | PR422-0663 | L1431X | LW6.1G.663 | PR-Nozzle pentagonal, 1.5 mm CP | 1 |
| 1 | PR422-0664 | L1432X | LW6.1G.664 | PR-Nozzle pentagonal, 1.75 mm CP | 1 |
| | PR422-0665 | L1433X | LW6.1G.665 | PR-Nozzle pentagonal, 2.0 mm CP | 1 |
| | PR422-0667 | L1435X | LW6.1G.667 | PR-Nozzle pentagonal, 2.5 mm CP | 1 |
| | PR422-0669 | L1437X | LW6.1G.669 | PR-Nozzle pentagonal, 3.0 mm CP | 1 |
| | PR422-0670 | L1438X | LW6.1G.670 | PR-Nozzle pentagonal, 3.5 mm CP | 1 |
| | PR422-0103CP | L1807X | LW6.1G.103 | PR-Nozzle pentagonal, 1.5 mm CP | 1 |
| 0 | PR422-0105CP | L1808X | LW6.1G.105 | PR-Nozzle pentagonal, 2.0 mm CP | 1 |
| 2 | PR422-0107CP | L1809X | LW6.1G.107 | PR-Nozzle pentagonal, 2.5 mm CP | 1 |
| | PR422-0109CP | L1810X | LW6.1G.109 | PR-Nozzle pentagonal, 3.0 mm CP | 1 |
| | PR422-1462 | L1462 | LW6.1G.200 | PR-Nozzle double pentagonal, 3.0 mm | 1 |
| | PR422-1463 | L1463 | LW6.1G.201 | PR-Nozzle double pentagonal, 3.5 mm | 1 |
| | PR422-1464 | L1464 | LW6.1G.202 | PR-Nozzle double pentagonal, 4.0 mm | 1 |
| | PR422-1472 | L1472 | LW6.1G.203 | PR-Nozzle double pentagonal, 5.0 mm | 1 |
| | PR422-1473 | L1473 | LW6.1G.204 | PR-Nozzle double pentagonal, 7.0 mm | 1 |
| | PR422-1783CP | L1783X | LW6.1G.302 | PR-Nozzle double pentagonal, 1.25 mm CP | 1 |
| 3 | PR422-1784CP | L1784X | LW6.1G.303 | PR-Nozzle double pentagonal, 1.5 mm CP | 1 |
| 3 | PR422-1785CP | L1785X | LW6.1G.304 | PR-Nozzle double pentagonal, 1.75 mm CP | 1 |
| | PR422-1786CP | L1786X | LW6.1G.305 | PR-Nozzle double pentagonal, 2.0 mm CP | 1 |
| | PR422-1787CP | L1787X | LW6.1G.307 | PR-Nozzle double pentagonal, 2.5 mm CP | 1 |
| | PR422-1788CP | L1788X | LW6.1E.204 | PR-Nozzle double pentagonal, 2.5 mm/inner 2.0 mm CP | 1 |
| | PR422-1789CP | L1789X | LW6.1G.309 | PR-Nozzle double pentagonal, 3.0 mm CP | 1 |
| | PR422-1790CP | L1790X | LW6.1E.206 | PR-Nozzle double pentagonal, 3.0 mm/inner 2.0 mm CP | 1 |
| | PR422-1791CP | L1791X | LW6.1E.207 | PR-Nozzle double pentagonal, 3.5 mm/inner 3.0 mm CP | 1 |





Consumables


| | Centricut | Esse A | Reference | | Pkg |
|----|--------------|-------------|-------------|---|-----|
| | part number | part number | number | Description | qty |
| | PR422-0680 | L1440X | LW6.1G.680 | PR-Nozzle double pentagonal, 0.8 mm CP | 1 |
| | PR422-0681 | L1441X | LW6.1G.681 | PR-Nozzle double pentagonal, 1.0 mm CP | 1 |
| | PR422-0682 | L1442X | LW6.1G.682 | PR-Nozzle double pentagonal, 1.25 mm CP | 1 |
| | PR422-0683 | L1443X | LW6.1G.683 | PR-Nozzle double pentagonal, 1.5 mm CP | 1 |
| | PR422-0684 | L1444X | LW6.1G.684 | PR-Nozzle double pentagonal, 1.75 mm CP | 1 |
| | PR422-0685 | L1445X | LW6.1G.685 | PR-Nozzle double pentagonal, 2.0 mm CP | 1 |
| 4 | PR422-0686 | L1446X | LW6.1G.686 | PR-Nozzle double pentagonal, 2.25 mm CP | 1 |
| | PR422-0687 | L1447X | LW6.1G.687 | PR-Nozzle double pentagonal, 2.5 mm CP | 1 |
| | PR422-0688 | L1448X | LW6.1G.688 | PR-Nozzle double pentagonal, 2.75 mm CP | 1 |
| | PR422-0689 | L1449X | LW6.1G.689 | PR-Nozzle double pentagonal, 3.0 mm CP | 1 |
| | PR422-0801 | L1466 | LW6.1G.801 | PR-Nozzle double brilliant, 3.5 mm | 1 |
| | PR422-0803 | L1468 | LW6.1G.803 | PR-Nozzle double brilliant, 5.0 mm | 1 |
| | PR422-0804 | L1469 | LW6.1G.804 | PR-Nozzle double brilliant, 7.0 mm | 1 |
| | PR422-0627 | L1453X | LW6.1G.627 | PR-Nozzle triple pentagonal, 1.25 mm CP | 1 |
| | PR422-0620 | L1454X | LW6.1G.620 | PR-Nozzle triple pentagonal, 1.5 mm CP | 1 |
| | PR422-0621 | L1455X | LW6.1G.621 | PR-Nozzle triple pentagonal, 1.75 mm CP | 1 |
| 5 | PR422-0622 | L1456X | LW6.1G.622 | PR-Nozzle triple pentagonal, 2.0 mm CP | 1 |
| | PR422-0623 | L1457X | LW6.1G.623 | PR-Nozzle triple pentagonal, 2.25 mm CP | 1 |
| | PR422-0624 | L1458X | LW6.1G.624 | PR-Nozzle triple pentagonal, 2.5 mm CP | 1 |
| | PR422-0626 | L1460X | LW6.1G.626 | PR-Nozzle triple pentagonal, 3.0 mm CP | 1 |
| | PR422-0700 | L1478X | LW6.1G.700 | PR-Nozzle pentagonal cyl, 2.0 mm CP | 1 |
| 6 | PR422-0701 | L1479X | LW6.1G.701 | PR-Nozzle pentagonal cyl, 2.5 mm CP | 1 |
| | PR422-0702 | L1480X | LW6.1G.702 | PR-Nozzle pentagonal cyl, 3.0 mm CP | 1 |
| 7 | PR422-0522CP | L1837X | LW6.1G.522a | PR-Nozzle pentagonal DL, 3 mm inner/Ø 4.5 mm CP | 1 |
| 8 | PR422-0524CP | L1838X | LW6.1G.524 | PR-Nozzle pentagonal, 3.0 mm DL CP | 1 |
| | PR422-0643 | L1540X | LW6.1G.643 | PR-Nozzle double pentagonal, 1.5 mm CP | 1 |
| 9 | PR422-0645 | L1541X | LW6.1G.645 | PR-Nozzle double pentagonal, 2.0 mm CP | 1 |
| | PR422-0647 | L1542X | LW6.1G.647 | PR-Nozzle double pentagonal, 2.5 mm CP | 1 |
| | PR422-0633 | L1533X | LW6.1G.633 | PR-Nozzle pentagonal, 1.5 mm CP | 1 |
| 10 | PR422-0635 | L1534X | LW6.1G.635 | PR-Nozzle pentagonal, 2.0 mm CP | 1 |
| | PR422-0637 | L1535X | LW6.1G.637 | PR-Nozzle pentagonal, 2.5 mm CP | 1 |











Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|-----------------------------|------------|
| | PR398-498 | L922 | 750.42.559 | PR-Nozzle, 0.3 mm | 1 |
| | PR398-0001 | L891 | | PR-Nozzle, 1.0 mm | 1 |
| 1 | PR398-550 | L892 | 750.42.550 | PR-Nozzle, 1.5 mm | 1 |
| ' | PR398-551 | L893 | 750.42.551 | PR-Nozzle, 2.0 mm | 1 |
| | PR398-552 | L894 | 750.42.552 | PR-Nozzle, 2.5 mm | 1 |
| | PR398-0004 | L895 | 750.42.553 | PR-Nozzle, 3.0 mm | 1 |
| | PR421-111CP | L1239X | 520.17.111 | PR-Nozzle double, 1.5 mm CP | 1 |
| 2 | PR421-114CP | L1240X | 520.17.114 | PR-Nozzle double, 2.0 mm CP | 1 |
| 2 | PR421-560CP | L1241X | 750.43.560 | PR-Nozzle double, 2.5 mm CP | 1 |
| | PR421-561CP | L1242X | 750.43.561 | PR-Nozzle double, 3.0 mm CP | 1 |
| | PR409-4515 | L1211X | 787.04.515 | PR-Nozzle, 1.25 mm CP | 1 |
| 3 | PR409-4516 | L1217X | 787.04.516 | PR-Nozzle, 1.75 CP | 1 |
| | PR409-4513 | L1213X | 787.04.513 | PR-Nozzle, 2.0 mm CP | 1 |
| 4 | PR421-720 | AL259 | 1058.36520.720 | PR-Lens gasket | 1 |








Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---|------------|
| | PR331-4102X | L3070 | 490.76.102 | PR-Nozzle cylindrical, 0.3 mm brass (10 pk)* | 41y 10 |
| | PR331-0001X | L30418 | | PR-Nozzle cylindrical, 1.0 mm copper (10 pk)* | 10 |
| | PR331-0002X | L30416 | | PR-Nozzle cylindrical, 1.2 mm copper (10 pk)* | 10 |
| | PR331-3321BX | L3054 | 485.73.321 | PR-Nozzle cylindrical, 1.5 mm brass (10 pk)* | 10 |
| | PR331-3321CX | L30419 | | PR-Nozzle cylindrical, 1.5 mm copper (10 pk)* | 10 |
| | PR331-0003X | L30417 | | PR-Nozzle cylindrical, 1.7 mm copper (10 pk)* | 10 |
| | PR331-3322BX | L3055 | 485.73.322 | PR-Nozzle cylindrical, 2.0 mm brass (10 pk)* | 10 |
| | PR331-322CX | L30420 | | PR-Nozzle cylindrical, 2.0 mm copper (10 pk)* | 10 |
| | PR331-3323BX | L30204 | 485.73.323 | PR-Nozzle cylindrical, 2.5 mm brass (10 pk)* | 10 |
| 1 | PR331-3323CX | L30421 | | PR-Nozzle cylindrical, 2.5 mm copper (10 pk)* | 10 |
| | PR331-3324BX | L30205 | 485.73.324 | PR-Nozzle cylindrical, 3.0 mm brass (10 pk)* | 10 |
| | PR331-3324X | L30422 | | PR-Nozzle cylindrical, 3.0 mm copper (10 pk)* | 10 |
| | PR331-0001CPX | L30418X | | PR-Nozzle, 1.0 mm CP (10 pk)* | 10 |
| | PR331-0002CPX | L30416X | | PR-Nozzle, 1.2 mm CP (10 pk)* | 10 |
| | PR331-0321CCPX | L30419X | 485.73.421 | PR-Nozzle, 1.5 mm CP (10 pk)* | 10 |
| | PR331-0003CPX | L30417X | | PR-Nozzle, 1.7 mm CP (10 pk)* | 10 |
| | PR331-322CCPX | L30420X | 485.73.422 | PR-Nozzle, 2.0 mm CP (10 pk)* | 10 |
| | PR331-3323CCPX | L30421X | 485.73.423 | PR-Nozzle, 2.5 mm CP (10 pk)* | 10 |
| | PR331-3324CPX | L30422X | 485.73.424 | PR-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| 2 | PR331-0302X | L301246 | 490.1N.302 | PR-Nozzle short, 2.5 mm brass (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)







2


Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------------------|------------|
| 1 | PR393-0006X | L30634 | | PR-Nozzle, 2.0 mm (10 pk)* | 10 |
| | PR393-0007X | L30635 | | PR-Nozzle, 2.5 mm (10 pk)* | 10 |
| | PR393-3455CPX | L301231X | 485.73.455 | PR-Nozzle con-cyl, 0.3 mm CP (10 pk)* | 10 |
| | PR393-3451CPX | L301235X | 485.73.451 | PR-Nozzle con-cyl, 1.5 mm CP (10 pk)* | 10 |
| 2 | PR393-3452X | L301236 | | PR-Nozzle con-cyl, 2.0 mm (10 pk)* | 10 |
| | PR393-3452CPX | L301236X | 485.73.452 | PR-Nozzle con-cyl, 2.0 mm CP (10 pk)* | 10 |
| | PR393-3453CPX | L301237X | 485.73.453 | PR-Nozzle con-cyl, 2.5 mm CP (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: Prima Industrie[®]





Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|-------------|---|-----|
| | part number | part number | number | Description | qty |
| | PR357-0001X | L3062 | 490.76.103 | PR-Nozzle conical, 0.3 mm brass (10 pk)* | 10 |
| | PR357-0003X | L30451 | | PR-Nozzle conical, 1.2 mm copper (10 pk) | 10 |
| | PR357-331BX | L30206 | 485.73.331 | PR-Nozzle conical, 1.5 mm brass (10 pk) | 10 |
| | PR357-331CX | L30424 | | PR-Nozzle conical, 1.5 mm copper (10 pk)* | 10 |
| | PR357-0004X | L30426 | | PR-Nozzle conical, 1.7 mm copper (10 pk)* | 10 |
| | PR357-333BX | L3057 | 485.73.333 | PR-Nozzle conical, 2.0 mm brass (10 pk)* | 10 |
| | PR357-333CX | L30425 | | PR-Nozzle conical, 2.0 mm copper (10 pk)* | 10 |
| 1 | PR357-0005X | L30449 | 485.73.334 | PR-Nozzle conical, 2.5 mm brass (10 pk) | 10 |
| 1 | PR357-0006X | L30427 | | PR-Nozzle conical, 2.5 mm copper (10 pk) | 10 |
| | PR357-0007X | L30630 | | PR-Nozzle conical, 3.0 mm copper (10 pk) | 10 |
| | PR357-0002CPX | L30450X | 485.73.114A | PR-Nozzle, 1.0 mm CP (10 pk) | 10 |
| | PR357-0003CPX | L30451X | | PR-Nozzle, 1.2 mm CP (10 pk) | 10 |
| | PR357-331CCPX | L30424X | 485.73.431 | PR-Nozzle, 1.5 mm CP (10 pk)* | 10 |
| | PR357-322CCPX | L30425X | 485.73.433 | PR-Nozzle, 2.0 mm CP (10 pk) | 10 |
| | PR357-0006CPX | L30427X | | PR-Nozzle, 2.5 mm CP (10 pk) | 10 |
| | PR357-0007CPX | L30630X | 485.73.43X | PR-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| | PR395-0001 | AL136 | 480.73.107 | PR-Insulating Ring 5" Plastic | 1 |
| 2 | PR395-0002 | AL163 | | PR-Insulating Ring 7.5" Plastic | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: Prima Industrie[®]

Optics

| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| PR361-0004 | 120216 | MEN | 1.5" | 5.0" | .354" |
| PR361-0005 | 570721 | MEN | 1.5" | 7.5" | .354" |
| PR361-9002 | 834-319-002 | PLX | 1.5" | 5.0" | .236" |
| PR361-0773 | 970773 | PLX | 1.5" | 5.0" | .275" |
| PR361-8988NM | | PLX | 1.5" | 5.0" | .275" |
| PR361-9011 | 834-319-011 | PLX | 1.5" | 5.0" | .300" |
| PR361-0003 | 834-319-003 | PLX | 1.5" | 7.5" | .236" |
| PR361-9012 | 834-319-012 | PLX | 1.5" | 7.5" | .300" |
| PR361-0001 | 741363 | PLX | 2.0" | 5.0" | .380" |
| PR361-0002 | 232771 | PLX | 2.0" | 7.5" | .380" |

| Centricut part number | Reference number | Туре | Material | Diameter | Focal length | Edge thickness | |
|--------------------------|---------------------|------|----------|----------|-----------------|-------------------|--|
| One micron optics | One micron optics | | | | | | |
| PR361-2284 | 632284-17 | PLX | FS | 38.10 mm | 190 mm | 7.10 mm | |
| PR361-4001 | ESTFL02066-1 | MEN | FS | 25 mm | 8.6 mm | 3.30 mm | |
| PR361-4002 | ESTFL02066-2 | BCX | FS | 25 mm | 267 mm | 2.60 mm | |
| PR361-8988 | LH968988pvl | PLX | FS | 38.1 mm | 127 mm | 1.92 mm | |

| Centricut part number | Reference number | Туре | Diameter | Edge thickness | | | |
|--------------------------|---------------------|------|----------|-------------------|--|--|--|
| One micron windows | | | | | | | |
| PR361-0474 | 970474 | FS | 37.0 mm | 4.00 mm | | | |

Optics care


| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |




2

Replacement parts suitable for: Salvagnini®

5"DL PRECITEC[®] SENSOR SYSTEM

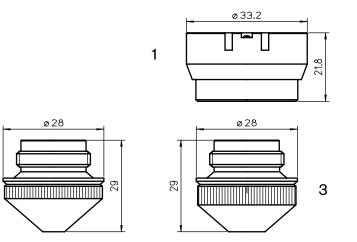

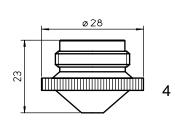



Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-----------------------------------|----------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | PT311-1146 Recommended | AL130/S | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ | 1 |
| ' | PT311-11460EM | AL130 | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ OEM | 1 |
| | SA365-00A4 | L374 | 141300A4 | SA-Nozzle, 0.75 mm | 1 |
| | SA365-01A4 | L375 | 146331A4 | SA-Nozzle, 1.0 mm | 1 |
| | SA365-30A4 | L376 | 146330A4 | SA-Nozzle, 1.25 mm | 1 |
| | SA365-97A4 | L377 | 146329A4,142321A4 | SA-Nozzle, 1.5 mm | 1 |
| | SA365-98A4 | L378 | 146328A4 | SA-Nozzle, 1.75 mm | 1 |
| | SA365-99A4 | L379 | 146327A4, 142322A4 | SA-Nozzle, 2.0 mm | 1 |
| | SA365-25A4 | L381 | 146326A4, 142323 | SA-Nozzle, 2.25 mm | 1 |
| | SA365-26A4 | L380 | 146325A4, 142324A4 | SA-Nozzle, 2.5 mm | 1 |
| | SA365-24A4 | L888 | 146324A4 | SA-Nozzle, 2.75 mm | 1 |
| 2 | SA365-23A4 | L889 | 146323A4 | SA-Nozzle, 3.0 mm | 1 |
| | SA365-00A4CP | L374X | 141300A4 | SA-Nozzle, 0.75 mm CP | 1 |
| | SA365-01A4CP | L375X | 146331A4 | SA-Nozzle, 1.0 mm CP | 1 |
| | SA365-30A4CP | L376X | 146330A4 | SA-Nozzle, 1.25 mm CP | 1 |
| | SA365-97A4CP | L377X | 146329A4 | SA-Nozzle, 1.5 mm CP | 1 |
| | SA365-98A4CP | L378X | 146328A4 | SA-Nozzle, 1.75 CP | 1 |
| | SA365-99A4CP | L379X | 146327A4 | SA-Nozzle, 2.0 mm CP | 1 |
| | SA365-26A4CP | L381X | 146326A4 | SA-Nozzle, 2.25 mm CP | 1 |
| | SA365-25A4CP | L380X | 146325A4 | SA-Nozzle, 2.5 mm CP | 1 |
| | SA365-23A4CP | L889X | 146323A4 | SA-Nozzle, 3.0 mm CP | 1 |
| 3 | SA365-0001 | L570 | 140501A4 | SA-Nozzle, 1.2 mm | 1 |
| 4 | SA365-57A4 | L1005 | 144057A4 | SA-Nozzle short, 2.75 mm | 1 |



Replacement parts suitable for: Salvagnini®

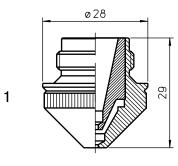




Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|------------------------------|------------|
| 1 | SA423-0002 | L989X | | SA-Nozzle double, 1.25 mm CP | 1 |
| I | SA423-0003 | L990X | | SA-Nozzle double, 1.5 mm CP | 1 |



Replacement parts suitable for: Salvagnini®

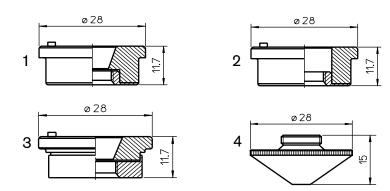


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|------------------------|-------------|-------------------------------------|---------------------------------|-----|
| | part number | part number | number | Description | qty |
| | PT348-1051 | AL355 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| 1 | PT348-1052 Recommended | AL495 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2" Con | 1 |
| | PT348-1053 | AL380 | P0571-1051-00001, 6930281333 | PT-Nozzle holder KT B2 Con | 1 |
| | PT348-1330 Recommended | AL131 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 2 | PT348-0260 | AL421 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| | PT348-13300EM | AL23 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder KT B2 | 1 |
| 3 | PT348-1330C | AL331 | 281330, P0571-260-00001, 6930281330 | PT-Nozzle holder, ceramic | 1 |
| | PT345-0008 | L935 | | PT-Nozzle HD, 0.8 mm | 1 |
| | PT345-1548 | L234 | 281548, P0591-571-00010, MX-0860 | PT-Nozzle HD, 1.0 mm | 1 |
| | PT345-1549 | L235 | 281549, P0591-572-00012, MX-0861 | PT-Nozzle HD, 1.2 mm | 1 |
| | PT345-1463 | L236 | 281463, P0591-573-00015, MX-0862 | PT-Nozzle HD, 1.5 mm | 1 |
| | PT345-0001 | L237 | P0591-574-00018, MX-0863 | PT-Nozzle HD, 1.8 mm | 1 |
| | PT345-1550 | L238 | 281550, P0591-575-00020, MX-0864 | PT-Nozzle HD, 2.0 mm | 1 |
| | PT345-0003 | L239 | P0591-574-00023 | PT-Nozzle HD, 2.3 mm | 1 |
| | PT345-1551 | L240 | 281551, P0591-576-00025, MX-0865 | PT-Nozzle HD, 2.5 mm | 1 |
| | PT345-1552 | L936 | | PT-Nozzle HD, 2.75 mm | 1 |
| | PT345-0002 | L241 | | PT-Nozzle HD, 3.0 mm | 1 |
| | PT345-0005 | L826 | | PT-Nozzle HD, 3.2 mm | 1 |
| | PT345-0006 | L827 | | PT-Nozzle HD, 3.5 mm | 1 |
| | PT345-0004 | L828 | | PT-Nozzle HD, 4.0 mm | 1 |
| 4 | PT345-0007 | L829 | | PT-Nozzle HD, 4.5 mm | 1 |
| | PT345-1548CP | L234X | 281548, P0591-571-00010 | PT-Nozzle HD, 1.0 mm CP | 1 |
| | PT345-1549CP | L235X | 281549, P0591-572-00012 | PT-Nozzle HD, 1.2 mm CP | 1 |
| | PT345-1463CP | L236X | 281463, P0591-573-00015 | PT-Nozzle HD, 1.5 mm CP | 1 |
| | PT345-0001CP | L237X | P0591-574-00018 | PT-Nozzle HD, 1.8 mm CP | 1 |
| | PT345-1550CP | L238X | 281550, P0591-575-00020 | PT-Nozzle HD, 2.0 mm CP | 1 |
| | PT345-0003CP | L239X | 281591 | PT-Nozzle HD, 2.3 mm CP | 1 |
| | PT345-1551CP | L240X | 281551, P0591-576-00025 | PT-Nozzle HD, 2.5 mm CP | 1 |
| | PT345-1552CP | L936X | | PT-Nozzle HD, 2.75 mm CP | 1 |
| | PT345-0002CP | L241X | | PT-Nozzle HD, 3.0 mm CP | 1 |
| | PT345-0005CP | L826X | | PT-Nozzle HD, 3.2 mm CP | 1 |
| | PT345-0006CP | L827X | | PT-Nozzle HD, 3.5 mm CP | 1 |
| | PT345-0004CP | L828X | | PT-Nozzle HD, 4.0 mm CP (10 pk) | 1 |
| | PT345-0007CP | L829X | | PT-Nozzle HD, 4.5 mm CP | 1 |

Centricut[®]

Replacement parts suitable for: Salvagnini®

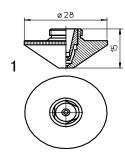

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|--------------|-------------|-----------------|--|-----|
| | part number | part number | number | Description | qty |
| | PT358-0669 | L669 | | PT-Nozzle double, 0.8 mm/inner 1.5 mm | 1 |
| | PT358-0010 | L660 | | PT-Nozzle double, 1.0 mm/inner 1.5 mm | 1 |
| | PT358-0125 | L661 | P0591-002-00012 | PT-Nozzle double, 1.2 mm/inner 1.5 mm | 1 |
| | PT358-0015 | L662 | P0591-002-00015 | PT-Nozzle double, 1.5 mm/inner 1.5 mm | 1 |
| | PT358-0018 | L663 | P0591-002-00018 | PT-Nozzle double, 1.8 mm/inner 1.5 mm | 1 |
| | PT358-0020 | L664 | P0591-002-00020 | PT-Nozzle double, 2.0 mm/inner 1.5 mm | 1 |
| | PT358-0023 | L665 | P0591-002-00023 | PT-Nozzle double, 2.3 mm/inner 1.5 mm | 1 |
| | PT358-0007 | L666 | | PT-Nozzle double, 2.5 mm/inner 1.5 mm | 1 |
| | PT358-0030 | L667 | | PT-Nozzle double, 3.0 mm/inner 1.5 | 1 |
| 1 | PT358-0035 | L668 | | PT-Nozzle double, 3.5 mm/inner 1.5 mm | 1 |
| | PT358-0010CP | L660X | | PT-Nozzle double, 1.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0125CP | L661X | | PT-Nozzle double, 1.2 mm/inner 1.5 mm CP | 1 |
| | PT358-0015CP | L662X | | PT-Nozzle double, 1.5 mm/inner 1.5 mm CP | 1 |
| | PT358-0018CP | L663X | | PT-Nozzle double, 1.8 mm/inner 1.5 mm CP | 1 |
| | PT358-0020CP | L664X | | PT-Nozzle double, 2.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0023CP | L665X | | PT-Nozzle double, 2.3 mm/inner 1.5 mm CP | 1 |
| | PT358-0025CP | L666X | | PT-Nozzle double, 2.5 mm/inner 1.5 mm CP | 1 |
| | PT358-0030CP | L667X | | PT-Nozzle double, 3.0 mm/inner 1.5 mm CP | 1 |
| | PT358-0035CP | L668X | | PT-Nozzle double, 3.5 mm/inner 1.5 mm CP | 1 |



Replacement parts suitable for: Salvagnini®

Optics


| Centricut part number | Reference number | Туре | Material | Diameter | Focal length | Edge thickness |
|--------------------------|--------------------------|---------|----------|----------|-----------------|-------------------|
| Lenses | | | | | | |
| SA384-0022 | 316-301-0022 | PLX | FS | 25.4 mm | 200 mm | 6.35 mm |
| SA384-0026 | 316-301-0026, ESTFL02119 | PLX | FS | 38.1 mm | 210 mm | 6.36 mm |
| | | | | | | |
| Centricut | Reference | | | | Edge | |
| part number | number | Materia | I | Diameter | thick | ness |
| Windows | | | | | | |
| SA384-0007 | 316-304-0007 | FS | | 32.0 mm | 6.35 n | nm |

Optics care

| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



Tanaka®

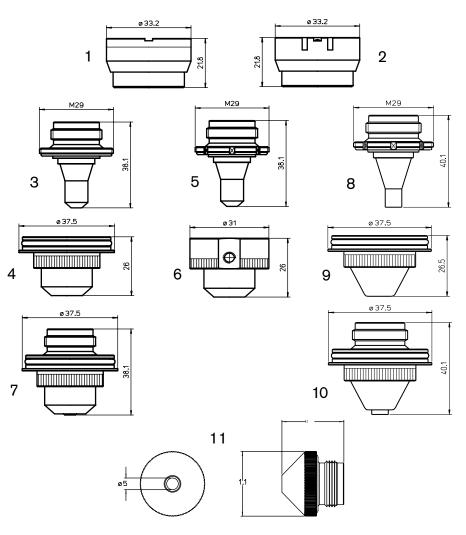

Consumables

| | Centricut | Esse A | Reference | | Pkg |
|-----|---------------|-------------|-----------------------------------|--|-----|
| | part number | part number | number | Description | qty |
| 1 | PT311-0298 | AL298 | P0497-68871 | PT-Nozzle holder KTM 1.5" DXN, ceramic | 1 |
| 2 | PT311-11460EM | AL130 | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ OEM | 1 |
| 2 | PT311-1146 | AL130/S | 281146, P0380-211-00001, 29100033 | PT-Nozzle holder ITM 1.5" DZ | 1 |
| | TK381-C20E-1 | L1200 | C20E-1 | TK-Nozzle inner, 2.0 mm | 1 |
| 3 | TK381-C20E-25 | L1202 | | TK-Nozzle inner, 2.5 mm | 1 |
| | TK381-C17E-1 | L1201 | C17E-1 | TK-Nozzle inner, 1.7 mm | 1 |
| 4 | TK381-C20E-0 | AL283 | C20E-0 | TK-Nozzle outer | 1 |
| | TK364-C15D-1 | L1516 | C15D-1 | TK-Nozzle inner, 1.5 mm | 1 |
| 5 | TK364-C20D-1 | L1517 | C20D-1 | TK-Nozzle inner, 2.0 mm | 1 |
| | TK364-C22D-1 | L1518 | C22D-1 | TK-Nozzle inner, 2.2 mm | 1 |
| 6 | TK364-C22D-0 | AL381 | C22D-0 | TK-Nozzle outer | 1 |
| 7 | TK381-C20E-2 | L1205 | C20E | TK-Nozzle assembly (TK381-C20E-0/AL283 and TK381-C20E-1/L1200) | 1 |
| · · | TK381-C17E-2 | L1204 | C17E | TK-Nozzle assembly (TK381-C20E-0/AL283 and TK381-C17E-1/L1201) | 1 |
| 8 | TK381-CZ20B-1 | L1195 | A546363 | TK-Nozzle bevel inner, 2.0 mm | 1 |
| 9 | TK381-CZ20B-0 | AL382 | | TK-Nozzle bevel outer | 1 |
| 10 | TK381-CZ20B-2 | L1207 | CZ20B-2 | TK-Nozzle assembly (TK381-CZ20B-0/AL382 and TK381-CZ20B-1/L1195) | 1 |
| 11 | TK354-D40 | | 58020240 | TK-Nozzle, 4.0 mm | 1 |
| | TK354-D50 | | 58020250 | TK-Nozzle, 5.0 mm | 1 |



Replacement parts suitable for: Tanaka®

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------|-----------------|-------------------|
| Lenses | | | | | |
| TK374-2235 | 312235 | PLX | 1.5" | 12.5" | .300" |
| TK374-3478 | 541344, 263478 | PLX | 2.0" | 8.75" | .310" |
| TK374-7338 | 197338 | PLX | 2.0" | 11.25" | .310" |
| TK374-3827 | 243827 | PLX | 2.5" | 8.75" | .310" |
| TK374-6670 | 236670 | PLX | 2.5" | 10.0" | .390" |
| TK374-1592 | 178937 | PLX | 2.5" | 11.25" | .310" |
| TK374-8593 | 828593 | PLX | 2.5" | 12.5" | .390" |


Optics care

| Centricut part number | Reference number | Description | Pkg qty |
|--------------------------|---------------------|--|------------|
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |



Trumpf®

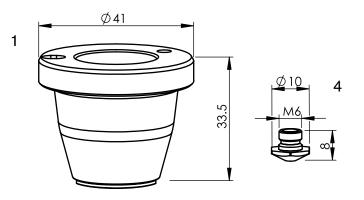

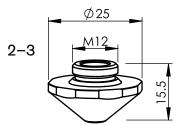


Consumables


| | Centricut | Esse A | Reference | | Pkg |
|---|----------------|-------------|------------------|------------------------------------|-----|
| | part number | part number | number | Description | qty |
| 1 | TR407-5673 | AL410 | 1349171, 1755673 | TR-Nozzle holder, ceramic | 1 |
| | TR407-4858X | L501270 | 1324858 | TR-Nozzle EAA, 0.8 mm (10 pk)* | 10 |
| | TR407-4860X | L501272 | 1324860 | TR-Nozzle EAA, 1.0 mm (10 pk)* | 10 |
| | TR407-4861X | L501273 | 1324861 | TR-Nozzle EAA, 1.2 mm (10 pk)* | 10 |
| | TR407-4863X | L501275 | 1324863 | TR-Nozzle EAA, 1.4 mm (10 pk)* | 10 |
| | TR407-4864X | L501276 | 1324864 | TR-Nozzle EAA, 1.7 mm (10 pk)* | 10 |
| 2 | TR407-4858CPHX | L501270XH | 1324858 | TR-Nozzle EAA, 0.8 mm HCP (10 pk)* | 10 |
| | TR407-4860CPHX | L501272XH | 1324860 | TR-Nozzle EAA, 1.0 mm HCP (10 pk)* | 10 |
| | TR407-4861CPHX | L501273XH | 1324861 | TR-Nozzle EAA, 1.2 mm HCP (10 pk)* | 10 |
| | TR407-4863CPHX | L501275XH | 1324863 | TR-Nozzle EAA, 1.4 mm HCP (10 pk)* | 10 |
| | TR407-4864CPHX | L501276XH | 1324864 | TR-Nozzle EAA, 1.7 mm HCP (10 pk)* | 10 |
| | TR407-4865X | L501277 | 1324865 | TR-Nozzle EAA, 2.0 mm (10 pk)* | 10 |
| | TR407-4866X | L501278 | 1324866 | TR-Nozzle EAA, 2.3 mm (10 pk)* | 10 |
| | TR407-4867X | L501279 | 1324867 | TR-Nozzle EAA, 2.7 mm (10 pk)* | 10 |
| 3 | TR407-4865CPHX | L501277XH | 1324865 | TR-Nozzle EAA, 2.0 mm HCP (10 pk)* | 10 |
| | TR407-4866CPHX | L501278XH | 1324866 | TR-Nozzle EAA, 2.3 mm HCP (10 pk)* | 10 |
| | TR407-4867CPHX | L501279XH | 1324867 | TR-Nozzle EAA, 2.7 mm HCP (10 pk)* | 10 |
| 4 | TR407-9610 | L1700 | 1589610 | TR-Nozzle Blow off EBM, 2.0 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: $Trumpf^{\texttt{R}}$

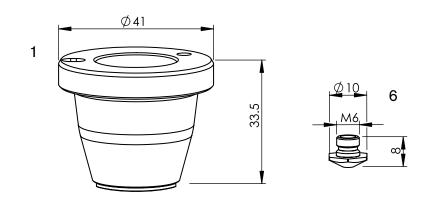

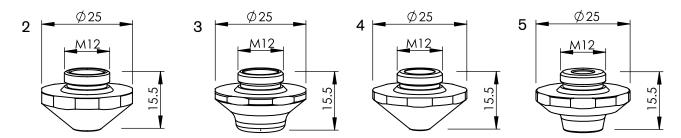


Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|-----------------------------------|------------|
| 1 | TR407-5673 | AL410 | 1349171, 1755673 | TR-Nozzle holder, ceramic | 1 |
| 2 | TR407-7264 | L1260 | | TR-Nozzle focusing ZAA-01 | 1 |
| | TR407-9091 | L1885 | 1809091 | TR-Nozzle double EAQ, 6.0 mm | 1 |
| 3 | TR407-9421 | L1886 | 1809421 | TR-Nozzle double EAQ, 7.5 mm | 1 |
| | TR407-6199 | L1887 | 1886199 | TR-Nozzle double EAQ, 9.5 mm | 1 |
| 4 | TR426-6012X | L501281 | | TR-Nozzle shower, 1.2 mm (10 pk)* | 10 |
| 5 | TR407-3046 NEW | L1986 | | TR-Nozzle double EAC, 1.8 mm | 1 |
| 6 | TR407-9610 | L1700 | 1589610 | TR-Nozzle blow off EBM, 2.0 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: $Trumpf^{\circledast}$

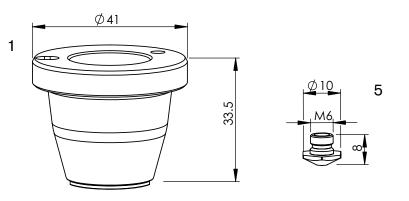

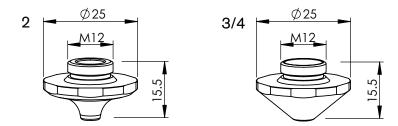


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|-----------------------------------|------------|
| 1 | TR407-5673 | AL410 | 1349171, 1755673 | TR-Nozzle holder, ceramic | 45 1 |
| | TR426-3325X | L501501 | 1373325 | TR-Nozzle EAB, 1.0 mm (10 pk)* | 10 |
| | TR426-3326X | L501502 | 1373326 | TR-Nozzle EAB, 1.2 mm (10 pk)* | 10 |
| 2 | TR426-3327X | L501503 | 1373327 | TR-Nozzle EAB, 1.4 mm (10 pk)* | 10 |
| | TR426-3328X | L501504 | 1373328 | TR-Nozzle EAB, 1.7 mm (10 pk)* | 10 |
| | TR426-3324X | L501500 | 1373324 | TR-Nozzle EAB, 0.8 mm (10 pk)* | 10 |
| 3 | TR426-3329X | L501505 | 1373329 | TR-Nozzle EAB, 2.0 mm (10 pk)* | 10 |
| 3 | TR426-3330X | L501506 | 1373330 | TR-Nozzle EAB, 2.3 mm (10 pk)* | 10 |
| | TR426-3331X | L501507 | 1373331 | TR-Nozzle EAB, 2.7 mm (10 pk)* | 10 |
| | TR426-1308X | L501308 | | TR-Nozzle double, 0.8 mm (10 pk)* | 10 |
| | TR426-1309X | L501309 | | TR-Nozzle double, 1.0 mm (10 pk)* | 10 |
| | TR426-1310X | L501310 | | TR-Nozzle double, 1.2 mm (10 pk)* | 10 |
| | TR426-1311X | L501311 | | TR-Nozzle double, 1.4 mm (10 pk)* | 10 |
| 4 | TR426-1312X | L501312 | | TR-Nozzle double, 1.7 mm (10 pk)* | 10 |
| | TR426-1313X | L501313 | | TR-Nozzle double, 2.0 mm (10 pk)* | 10 |
| | TR426-1314X | L501314 | | TR-Nozzle double, 2.3 mm (10 pk)* | 10 |
| | TR426-1315X | L501315 | | TR-Nozzle double, 2.7 mm (10 pk)* | 10 |
| 5 | TR407-9610 | L1700 | 1589610 | TR-Nozzle blow off EBM, 2.0 mm | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$

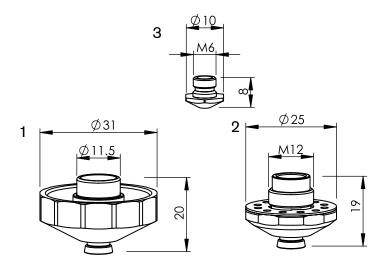


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|--------------------------------|------------|
| | TR407-4018 | L1800 | 1774018 | TR-Nozzle EFL, 1.4 mm | 1 |
| 1 | TR407-8745 | L1801 | 1838745 | TR-Nozzle EFL, 1.7 mm | 1 |
| ' | TR407-4020 | L1802 | 1774020 | TR-Nozzle EFL, 2.0 mm | 1 |
| | TR407-4092 | L1803 | 1774092 | TR-Nozzle EFL, 2.3 mm | 1 |
| | TR407-9940 NEW | L1990 | | TR-Nozzle EGL, 1.4 mm | 1 |
| 2 | TR407-9951 NEW | L1991 | | TR-Nozzle EGL, 1.7 mm | 1 |
| 2 | TR407-9952 NEW | L1992 | | TR-Nozzle EGL, 2.0 mm | 1 |
| | TR407-9953 NEW | L1993 | | TR-Nozzle EGL, 2.3 mm | 1 |
| 3 | TR407-9610 | L1700 | 1589610 | TR-Nozzle blow off EBM, 2.0 mm | 1 |



Replacement parts suitable for: $Trumpf^{\textcircled{R}}$

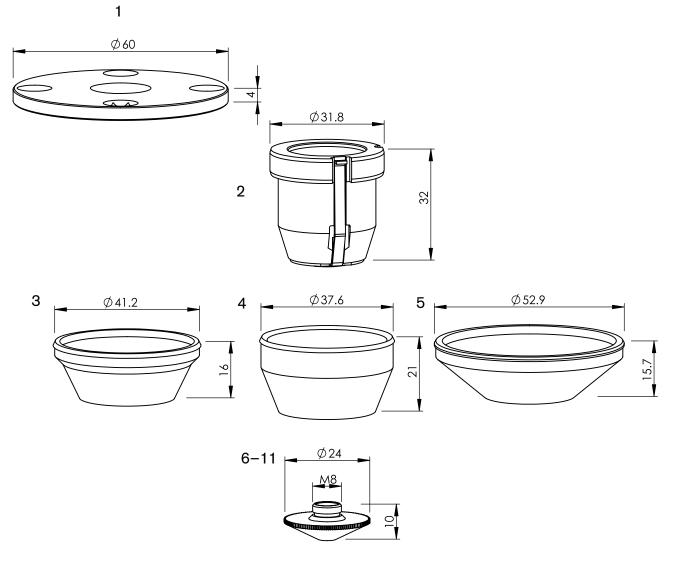

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------|------------|
| 1 | TR301-4485 | AL70 | 234485 | TR-Breakaway plate | 1 |
| 2 | TR301-0432 | AL108 | 254493, 260432 | TR-Nozzle holder, ceramic | 1 |
| 3 | TR301-4496 | AL36 | 254496 | TR-Cover, PTFE** | 1 |
| | TR301-6153 | AL47 | 256153, 955826 | TR-Cover, PTFE** (white) | 1 |
| 4 | TR301-6153T | AL347 | 256153, 955826 | TR-Cover, PTFE** (black) | 1 |
| 5 | TR301-5286 | AL41 | 225286 | TR-Cover, PTFE** | 1 |



Replacement parts suitable for: Trumpf®


Consumables


| | Centricut | Esse A | Reference | Description | Pkg |
|----|----------------------------|----------------------|--------------------------|--|-----------|
| | part number TR301-4561X | part number L3018 | number 124561, 237499 | Description TR-Nozzle, 0.8 mm (10 pk)* | qty 10 |
| | TR301-4562X | L3019 | 124562, 237498 | TR-Nozzle, 1.0 mm (10 pk)* | 10 |
| | TR301-6809X | L30361 | 966809 | TR-Nozzle, 1.2 mm (10 pk)* | 10 |
| | TR301-0014X | L30795 | 300003 | TR-Nozzle, 1.2 mm (10 pk)* | 10 |
| | TR301-7500X | L3026 | 237500 | TR-Nozzle, 1.4 mm (10 pk)* | 10 |
| | TR301-0017X | L30796 | 231300 | TR-Nozzle, 1.7 mm (10 pk)* | 10 |
| | TR301-7503X | L3024 | 237503, 1253211 | TR-Nozzle, 2.0 mm (10 pk)* | 10 |
| | TR301-4564X | L30797 | 124564 | TR-Nozzle, 2.3 mm (10 pk)* | 10 |
| | TR301-7504X | L3025 | 237504 | TR-Nozzle, 3.0 mm (10 pk)* | 10 |
| 6 | TR301-0561CPX | L3018X | 352280 | TR-Nozzle, 0.8 mm CP (10 pk)* | 10 |
| | TR301-0562CPX | L3019X | 352281 | TR-Nozzle, 1.0 mm CP (10 pk)* | 10 |
| | TR301-0809CPX | L30361X | 352282 | TR-Nozzle, 1.2 mm CP (10 pk)* | 10 |
| | TR301-0014CPX | L30795X | 552202 | TR-Nozzle, 1.4 mm CP (10 pk)* | 10 |
| | TR301-7500CPX | L3026X | 352288 | TR-Nozzle, 1.5 mm CP (10 pk)* | 10 |
| | TR301-0017CPX | L30796X | 552200 | TR-Nozzle, 1.7 mm CP (10 pk)* | 10 |
| | TR301-7503CPX | L3024X | | TR-Nozzle, 2.0 mm CP (10 pk)* | 10 |
| | TR301-4564CPX | L30797X | 124564 | TR-Nozzle, 2.3 mm CP (10 pk)* | 10 |
| | TR301-7504CPX | L3025X | 124304 | TR-Nozzle, 3.0 mm CP (10 pk)* | 10 |
| | TR301-7497X | L3020 | 237497 | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| 7 | TR301-1497CPX | L3020 | 352283 | TR-Nozzle HD, 1.4 mm CP (10 pk)* | 10 |
| | TR301-7497-S | L258 | 237497/S | TR-Nozzle HD, 1.4 mm CF (10 pk) | 1 |
| | TR301-0497X | L30258 | 237497/S | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| | TR301-7501X | L3021 | 237501 | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| | TR301-3211X | L30168 | 237502, 1253211 | TR-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| | TR301-6933X | L3076 | 126933 | TR-Nozzle HD, 2.3 mm (10 pk)* | 10 |
| | TR301-0003X | L30185 | 120300 | TR-Nozzle HD, 2.5 mm (10 pk)* | 10 |
| | TR301-2742X | L30360 | 942742 | TR-Nozzle HD, 2.7 mm (10 pk)* | 10 |
| 8 | TR301-0004X | L30396 | 342142 | TR-Nozzle HD, 3.0 mm (10 pk)* | 10 |
| U | TR301-0497CPX | L30258X | | TR-Nozzle HD, 3.5 mill (10 pk)* | 10 |
| | TR301-0501CPX | L3021X | 352284 | TR-Nozzle HD, 1.7 mm CP (10 pk)* | 10 |
| | TR301-1002CPX | L30168X | 237502, 352287 | TR-Nozzle HD, 2.0 mm CP (10 pk)* | 10 |
| | TR301-0933CPX | L3076X | 352285 | TR-Nozzle HD, 2.3 mm CP (10 pk)* | 10 |
| | TR301-0003CPX | L30185X | 552205 | TR-Nozzle HD, 2.5 mm CP (10 pk)* | 10 |
| | TR301-0742CPX | L30360X | 352286 | TR-Nozzle HD, 2.7 mm CP (10 pk)* | 10 |
| | TR301-1004CPX | L30396X | 332200 | TR-Nozzle HD, 3.0 mm CP (10 pk)* | 10 |
| | TR301-4561CPX | L3018XH | 352280 | TR-Nozzle, 0.8 mm HCP (10 pk)* | 10 |
| 9 | TR301-4562CPX | L3019XH | 352281 | TR-Nozzle, 1.0 mm HCP (10 pk)* | 10 |
| J | TR301-6809CPX | L30361XH | 352282 | TR-Nozzle, 1.2 mm HCP (10 pk)* | 10 |
| 10 | TR301-7497CPX | L3020XH | 352283 | TR-Nozzle HD, 1.4 mm HCP (10 pk)* | 10 |
| 10 | TR301-0014HCPX | L30258XH | 002200 | TR-Nozzle HD, 1.4 mm HCP (10 pk)* | 10 |
| | TR301-7501CPX | L3021XH | 352284 | TR-Nozzle HD, 1.4 mm HCP (10 pk)* | 10 |
| | TR301-0002CPX | L30168XH | 237502, 1253212 | TR-Nozzle HD, 1.7 min HCP (10 pk) TR-Nozzle HD, 2.0 mm HCP (10 pk)* | 10 |
| 11 | TR301-6933CPX | L3076XH | 352285 | TR-Nozzle HD, 2.3 mm HCP (10 pk) | 10 |
| | TR301-0025HCPX | L30185XH | 002200 | TR-Nozzle HD, 2.5 mm HCP (10 pk)* | 10 |
| | TR301-2742CPX | L30360XH | 352286 | TR-Nozzle HD, 2.7 mm HCP (10 pk)* | 10 |
| | TR301-0004CPX | L30396XH | JJZZUU | TR-Nozzle HD, 3.0 mm HCP (10 pk)* | 10 |


* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)
** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.




Trumpf®



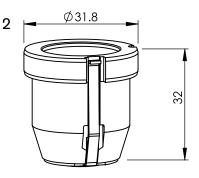

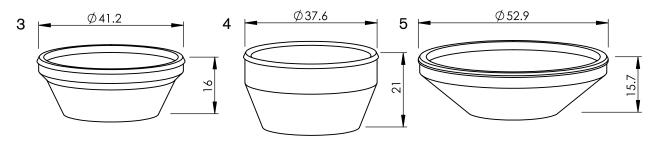

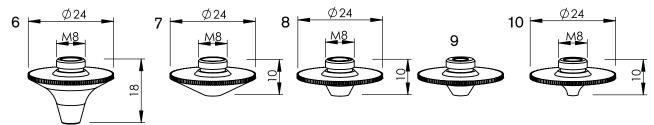

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|---------------------------|------------|
| 1 | TR301-4485 | AL70 | 234485 | TR-Breakaway plate | 1 |
| 2 | TR301-0432 | AL108 | 254493, 260432 | TR-Nozzle holder, ceramic | 1 |
| 3 | TR301-4496 | AL36 | 254496 | TR-Cover, PTFE** | 1 |
| | TR301-6153 | AL47 | 256153, 955826 | TR-Cover, PTFE** (white) | 1 |
| 4 | TR301-6153T | AL347 | 256153, 955826 | TR-Cover, PTFE** (black) | 1 |
| 5 | TR301-5286 | AL41 | 225286 | TR-Cover, PTFE** | 1 |



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$

Consumables


| | Centricut | Esse A | Reference | Decedation | Pkg |
|-----|---------------|-------------|------------------|--------------------------------------|-----|
| | part number | part number | number | Description | qty |
| | TR301-7773 | L1550 | 1277773 | TR-Nozzle, 0.8 mm | 1 |
| | TR301-7771 | L1551 | 1277771 | TR-Nozzle, 1.0 mm | 1 |
| | TR301-7774 | L1552 | 1277774 | TR-Nozzle, 1.2 mm | 1 |
| | TR301-7776 | L1553 | 1277776 | TR-Nozzle, 1.4 mm | 1 |
| | TR301-7779 | L1554 | 1277779 | TR-Nozzle, 1.7 mm | 1 |
| ĥ | TR301-7780 | L1555 | 1277780 | TR-Nozzle, 2.0 mm | 1 |
| | TR301-7781 | L1556 | 1277781 | TR-Nozzle, 2.3 mm | 1 |
| | TR301-7782 | L1557 | 1277782 | TR-Nozzle, 2.7 mm | 1 |
| | TR301-7773CP | L1550X | 1277773 - chrome | TR-Nozzle, 0.8 mm CP | 1 |
| | TR301-7771CP | L1551X | 1277771 - chrome | TR-Nozzle, 1.0 mm CP | 1 |
| | TR301-7774CP | L1552X | 1277774 - chrome | TR-Nozzle, 1.2 mm CP | 1 |
| 1 | TR301-7776CP | L1553X | 1277776 - chrome | TR-Nozzle, 1.4 mm CP | 1 |
| 7 1 | TR301-7872X | L30495 | 237872 | TR-Nozzle shower, 0.8 mm (10 pk)* | 10 |
| 1 | TR355-0005X | L30640 | | TR-Nozzle double, 0.8 mm (10 pk)* | 10 |
| 1 | TR355-0001X | L30641 | | TR-Nozzle double, 1.0 mm (10 pk)* | 10 |
| 1 | TR355-0006X | L30648 | | TR-Nozzle double, 1.2 mm (10 pk)* | 10 |
| 1 | TR355-0002X | L30642 | | TR-Nozzle double, 1.4 mm (10 pk)* | 10 |
| 8 | TR355-0003X | L30643 | | TR-Nozzle double, 1.7 mm (10 pk)* | 10 |
| 0 | TR355-0007X | L30644 | | TR-Nozzle double, 2.0 mm (10 pk)* | 10 |
| 1 | TR355-0004X | L30645 | | TR-Nozzle double, 2.3 mm (10 pk)* | 10 |
| 1 | TR355-0008X | L30646 | | TR-Nozzle double, 2.7 mm (10 pk)* | 10 |
| 1 | TR355-0009X | L30647 | | TR-Nozzle double, 3.0 mm (10 pk)* | 10 |
| 1 | TR355-0007CPX | L30644X | | TR-Nozzle double, 2.0 mm CP (10 pk)* | 10 |
| 1 | TR412-0010X | L30181 | | TR-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| . 1 | TR412-0014X | L30182 | | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| 9 | TR412-0017X | L30227 | | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| 1 | TR301-0001X | L30313 | | TR-Nozzle HD, 2.3 mm (10 pk)* | 10 |
| 1 | TR412-0023X | L30720 | | TR-Nozzle HD, 2.3 mm (10 pk)* | 10 |
| 1 | TR412-0027X | L30722 | | TR-Nozzle HD, 2.7 mm (10 pk)* | 10 |
| 10 | TR412-1014CPX | L301034X | | TR-Nozzle HD, 1.4 mm CP (10 pk)* | 10 |
| 10 | TR412-1017CPX | L301035X | | TR-Nozzle HD, 1.7 mm CP (10 pk)* | 10 |
| | TR412-1023CPX | L30720X | | TR-Nozzle HD, 2.3 mm CP (10 pk)* | 10 |
| | TR415-0010 | L199 | | TR-Nozzle extended, 1.0 mm | 1 |

* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)

** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Trumpf®

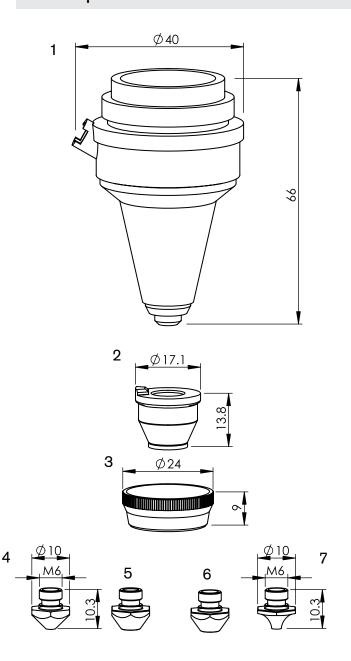

Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------|-----------------------------------|------------|
| 1 | PT344-KN | | 280549 | PT-Sensor cone, KN | 1 |
| 2 | TR302-2405 | AL53 | 280408, 092405 | TR-Nozzle holder KT M1.5" KN OEM | 1 |
| 3 | TR352-0001 | AL177 | 280550, P0494-940-00001 | TR-Nut OEM | 1 |
| | TR302-6939X | L40211 | 226939 | TR-Nozzle, 1.0 mm (10 pk)* | 10 |
| | TR302-0002X | L40212 | | TR-Nozzle, 1.4 mm (10 pk)* | 10 |
| 4 | TR302-6933CPX | L40211X | 226939 | TR-Nozzle, 1.0 mm CP (10 pk)* | 10 |
| | TR302-6940X | L40215 | 226940 | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| | TR302-7144X | L40216 | 227144 | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| 5 | TR302-7364X | L40395 | 237364 | TR-Nozzle shower, 1.0 mm (10 pk)* | 10 |



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$


Consumables

| | Centricut | Esse A | Reference | | Pkg |
|---|---------------|-------------|-----------------|--------------------------------------|-----|
| | part number | part number | number | Description | qty |
| | TR302-4230X | L401150 | 135420, 1354230 | TR-Nozzle EBD, 0.8 mm (10 pk)* | 10 |
| | TR302-2334X | L40255 | 212334 | TR-Nozzle EDB, 1.0 mm (10 pk)* | 10 |
| | TR302-0008CPX | L401150X | 135420, 1354230 | TR-Nozzle EBD, 0.8 mm CP (10 pk)* | 10 |
| | TR302-2334CPX | L40255X | 212334 | TR-Nozzle EDB, 1.0 mm CP (10 pk)* | 10 |
| | TR302-0009X | L401151 | | TR-Nozzle EBD HD, 0.8 mm (10 pk)* | 10 |
| | TR302-0004X | L40270 | | TR-Nozzle EBD HD, 1.0 mm (10 pk)* | 10 |
| | TR302-6199X | L40256 | 216199 | TR-Nozzle EBD HD, 1.4 mm (10 pk)* | 10 |
| | TR302-5213X | L40257 | 225213 | TR-Nozzle EBD HD, 1.7 mm (10 pk)* | 10 |
| | TR302-7009X | L401147 | 1487009 | TR-Nozzle EBD HD, 2.0 mm (10 pk)* | 10 |
| 6 | TR302-6156X | L40277 | 126156 | TR-Nozzle EBD HD, 2.3 mm (10 pk)* | 10 |
| | TR302-6125X | L401149 | | TR-Nozzle EBD HD, 2.5 mm (10 pk)* | 10 |
| | TR302-0027X | L401152 | | TR-Nozzle EBD HD, 2.7 mm (10 pk)* | 10 |
| | TR302-0009CPX | L401151X | | TR-Nozzle EBD HD, 0.8 mm CP (10 pk)* | 10 |
| | TR302-0004CPX | L40270X | | TR-Nozzle EBD HD, 1.0 mm CP (10 pk)* | 10 |
| | TR302-6198X | L401154 | 1479581 | TR-Nozzle EBD HD, 1.2 mm (10 pk)* | 10 |
| | TR302-6199CPX | L40256X | 216199 | TR-Nozzle EBD HD, 1.4 mm CP (10 pk)* | 10 |
| | TR302-5213CPX | L40257X | 225213 | TR-Nozzle EBD HD, 1.7 mm CP (10 pk)* | 10 |
| | TR302-6156CPX | L40277X | 126156 | TR-Nozzle EBD HD, 2.3 mm CP (10 pk)* | 10 |
| | TR302-0027CPX | L401152X | | TR-Nozzle EBD HD, 2.7 mm CP (10 pk)* | 10 |
| | TR302-5320X | L40625 | | TR-Nozzle, 1.0 mm (10 pk)* | 10 |
| 7 | TR302-0007X | L40627 | | TR-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| 1 | TR302-5318X | L40628 | | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| | TR302-0017X | L40629 | | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Trumpf®

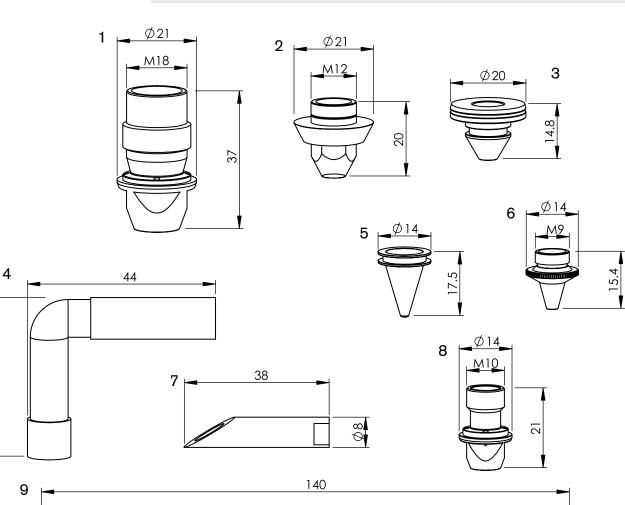

Consumables

37

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|--------------------------------|------------|
| 1 | TR352-0783 | L1186 | 220783 | TR-Nozzle welding M18 | 1 |
| 2 | TR352-2530CP | L1010X | 932530 | TR-Nozzle, 4.5 mm CP | 1 |
| | TR303-2952 | L5 | 202952 | TR-Nozzle, 0.8 mm | 1 |
| 3 | TR303-0969 | L34 | 218969 | TR-Nozzle, 1.0 mm | 1 |
| 3 | TR303-9402 | L35 | 209402 | TR-Nozzle HD, 1.4 mm | 1 |
| | TR303-7953 | L36 | 217953 | TR-Nozzle HD, 1.7 mm | 1 |
| 4 | TR301-8557 | | 88557 | TR-Nozzle, 90 degrees | |
| | TR414-0008 | L507 | 12-11-16-00 | TR-Nozzle YAG w/o-ring, 0.8 mm | 1 |
| 5 | TR414-0010 | L506 | | TR-Nozzle YAG w/o-ring, 1.0 mm | 1 |
| | TR414-0012 | L505 | 12-11-09-17/00 | TR-Nozzle YAG w/o-ring, 1.2 mm | 1 |

Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.

27



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$


Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|-------------------------|-------------------------------|------------|
| | PT344-1813X | L30405 | 281813, P0589-424-00008 | PT-Nozzle, 0.8 mm (10 pk)* | 10 |
| | PT344-1789X | L30406 | 281789, P0589-426-00010 | PT-Nozzle, 1.0 mm (10 pk)* | 10 |
| | PT344-1561X | L30404 | 281561, 778550 | PT-Nozzle, 1.2 mm (10 pk)* | 10 |
| 6 | PT344-1499X | L30407 | 281814, 149957 | PT-Nozzle, 1.5 mm (10 pk)* | 10 |
| | PT344-0020X | L30408 | P0589-428-00020 | PT-Nozzle, 2.0 mm (10 pk)* | 10 |
| | PT344-0020CPX | L30408X | P0589-428-00020 | PT-Nozzle, 2.0 mm CP (10 pk)* | 10 |
| 7 | TR301-6184 | | 256184 | TR-Blow tube | 1 |
| 8 | TR352-4947 | L1185 | 924947 | TR-Nozzle welding M10 | 1 |
| 9 | TR301-3202 | AL272 | 0353202, 900594 | TR-Brush | 1 |

*Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)



Trumpf®

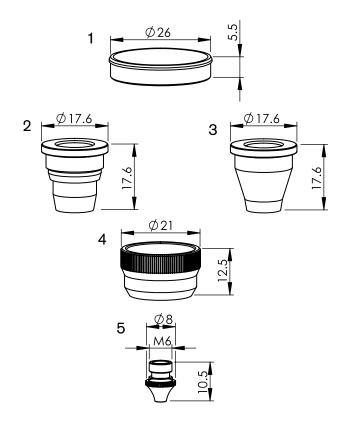


Consumables


| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|----------------------|--------------------------------------|------------|
| 1 | TR302-0354 | AL389 | 960354 | TR-Insulating, PTFE** | 1 |
| 2 | TR302-6678C | AL412 | 936678, 913966/00-WO | TR-Nozzle holder 3D, ceramic | 1 |
| | TR302-6678 Recommended | AL212 | | TR-Nozzle holder, ceramic | 1 |
| 3 | TR302-66780EM | | | TR-Nozzle holder, ceramic OEM | 1 |
| 4 | TR352-3965 | AL254 | 913965 | TR-Retainer nut | 1 |
| | TR302-8206X | L40745 | 958206 | TR-Nozzle, 0.25 mm (10 pk)* | 10 |
| | TR352-3799X | L40500 | 913799 | TR-Nozzle EBG HD, 0.8 mm (10 pk)* | 10 |
| | TR352-3800X | L40501 | 913800 | TR-Nozzle EBG HD, 1.0 mm (10 pk)* | 10 |
| | TR352-7034X | L40498 | 1487034 | TR-Nozzle EBG HD, 1.2 mm (10 pk)* | 10 |
| | TR352-3801X | L40502 | 913801 | TR-Nozzle EBG HD, 1.4 mm (10 pk)* | 10 |
| | TR352-7988X | L40503 | 937988 | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| | TR352-7991X | L40499 | | TR-Nozzle HD, 1.75 mm (10 pk)* | 10 |
| | TR352-7990X | L40508 | 1487036 | TR-Nozzle HD, 2.0 mm (10 pk)* | 10 |
| | TR352-7989X | L40504 | 937989 | TR-Nozzle EBF HD, 2.3 mm (10 pk)* | 10 |
| | TR352-3800CPX | L40501X | 913800 | TR-Nozzle EBG HD, 1.0 mm CP (10 pk)* | 10 |
| | TR352-7034CPX | L40498X | 1487034 | TR-Nozzle EBG HD, 1.2 mm CP (10 pk)* | 10 |
| | TR352-3801CPX | L40502X | 913801 | TR-Nozzle EBG HD, 1.4 mm CP (10 pk)* | 10 |
| | TR352-7988CPX | L40503X | 937988 | TR-Nozzle HD, 1.7 mm CP (10 pk)* | 10 |
| | TR352-7990CPX | L40508X | | TR-Nozzle HD, 2.0 mm CP (10 pk)* | 10 |
| | TR352-7989CPX | L40504X | 937989 | TR-Nozzle EBF HD, 2.3 mm CP (10 pk)* | 10 |


 Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)
** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Replacement parts suitable for: Trumpf®

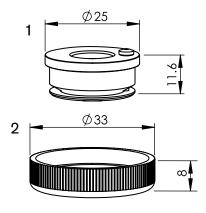

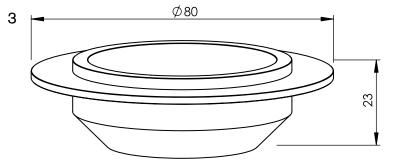




Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|---------------------|-----------------------------------|------------|
| | TR301-8809 Recommended | AL38 | 258809 | TR-Nozzle holder, ceramic | 1 |
| ' | TR301-88090EM | AL400 | 258809 | TR-Nozzle holder, ceramic OEM | 1 |
| 2 | TR301-6066 | AL250 | 216066 | TR-Cap nut | 1 |
| 3 | TR301-6065 | AL19 | 216065 | TR-Cover, PTFE** | 1 |
| 4 | TR301-5780X | L3002 | 215780 | TR-Nozzle, 0.8 mm (10 pack)* | 10 |
| 5 | TR301-8894X | L3001 | 88894 | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| 5 | TR301-7867X | L3012 | 217867 | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| | TR412-0010X | L30181 | | TR-Nozzle HD, 1.0 mm (10 pk)* | 10 |
| 6 | TR412-0014X | L30182 | | TR-Nozzle HD, 1.4 mm (10 pk)* | 10 |
| | TR412-0017X | L30227 | | TR-Nozzle HD, 1.7 mm (10 pk)* | 10 |
| 7 | TR301-7976X | L50496 | 217976 | TR-Nozzle shower, 0.8 mm | 10 |
| | TR301-1010X | L30798 | | TR-Nozzle, 1.0 mm (10 pk)* | 10 |
| 8 | TR301-8893X | L3013 | 88893 | TR-Nozzle, 1.5 mm (10 pk)* | 10 |
| 0 | TR301-1781X | L3068 | 221781 | TR-Nozzle, 2.0 mm (10 pk)* | 10 |
| | TR301-4565X | L30230 | 235592 | TR-Nozzle, 3.0 mm (10 pk)* | 10 |
| 9 | TR301-7872X | L30495 | 237872 | TR-Nozzle shower, 0.8 mm (10 pk)* | 10 |

* Available in single packs. To order single packs, remove the 'X' at the end of the part number (e.g. AM123-4567X would be AM123-4567)
** PolyTetraFluoroEthylene is a fluorocarbon-based polymer and is commonly abbreviated PTFE. The Teflon® brand of PTFE is manufactured only by DuPont and is not sold by Hypertherm. Hypertherm purchases other brands of PTFE from various high quality manufacturers.



Trumpf®



Consumables

| | Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|---|--------------------------|-----------------------|--------------------------|--|------------|
| 1 | TR301-1086 | | 0351086, P0492-001-00000 | TR-Sensor cable | 1 |
| 2 | TR301-9983 | | 359983 | TR-Sensor cable, 190 mm (7.5") armored | 1 |
| 3 | TR301-7833 | | 227833 | TR-Sensor cable, 432 mm (17") | 1 |
| 4 | TR301-0930 | | 280930 | TR-Sensor cable, 152 mm (6") armored | 1 |



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$

Consumables

| Centricut part number | Esse A part number | Reference number | Description | Pkg qty |
|--------------------------|-----------------------|---------------------|-----------------|------------|
| Filters – not shown | | | | |
| TR301-2380 | 92380 | FT1 | TR-Filter, DX | 1 |
| TR301-2381 | 92381 | FT2 | TR-Filter, BX | 1 |
| TR301-2379 | 92379 | FT3 | TR-Filter, Cl | 1 |
| TR301-3676 | 123676 - U0310 VF | FT4 | TR-Filter | 1 |
| TR301-3675 | 123675 - U0310 SMA | FT5 | TR-Filter | 1 |
| TR301-3674 | 123674 - U0310 CA | FT6 | TR-Filter | 1 |
| TR301-6152 | 146152 | CP10 | TR-Water filter | 1 |
| TR301-5942 | 115942 | | TR-Air filter | 1 |



Replacement parts suitable for: $Trumpf^{\mathbb{R}}$

Optics


| Centricut part number | Reference number | Туре | Diameter | Focal length | Edge thickness |
|--------------------------|---------------------|------|----------------|-----------------|-------------------|
| Lenses | | | | | |
| TR300-6104 | 346104 | MEN | 1.5" | 3.75" | .290" |
| TR300-8114 | 88114 | MEN | 1.5" | 5.0" | .290" |
| TR300-0002 | 706491 | MEN | 1.5" | 5.0" | .157" |
| TR300-7517 | 97517 | MEN | 1.5" | 7.5" | .290" |
| TR300-8123 | 581123 | MEN | 1.575" (40 mm) | 6.102" (155 mm) | .295" (7.5 mm) |
| TR300-1972 | 141972 | MEN | 1.5" | 9.0" | .290" |
| TR300-0163 | 350163 | MEN | 1.5" | 10.0" | .290" |
| TR300-6477 | 726477 | MEN | 1.5" | 10.0" | .354" |
| Low absorption lenses | | | | | |
| TR300-8114MP5 | 88114 | MEN | 1.5" | 5.0" | .290" |
| TR300-7517MP5 | 97517 | MEN | 1.5" | 7.5" | .290" |

| Centricut part number | Reference number | Туре | Material | Diameter | | Edge thickness |
|--------------------------|---------------------|------|----------|----------|--------|-------------------|
| Fiber laser lenses | | | | | | |
| TR300-3107 | 1603107 | PLX | FS | 40 mm | 150 mm | 5.30 mm |
| TR300-9799 NEW | 1869799 | PLX | FS | 30 mm | 146 mm | 8.0 mm |

| Centricut part number | Reference number | Material | Diameter | Edge thickness | | |
|--------------------------|---------------------|----------|----------|-------------------|--|--|
| Fiber laser windows | | | | | | |
| TR300-4767 | 1614767 | FS | 34 mm | 5 mm | | |
| TR300-6719 | 766719 | FS | 30 mm | 5 mm | | |

Optics care

| Centricut | Reference | | Pkg |
|-------------|---------------|--|-----|
| part number | number | Description | qty |
| TR300-6452 | | Lens cleaning Tiffen paper (50 pcs) | 1 |
| TR300-1115 | | Lens cleaning pre-cut cotton (100 pcs) | 1 |
| TR300-1010 | AL1010 | Dropper, lens cleaning fluid | 1 |
| TR300-1112 | | Optical cleaning fluid | 1 |
| TR300-0699 | 70675699 REVA | Lens cleaning swabs (25 pcs) | 1 |
| TR300-7991 | 27991 | Polyester wipes 4" x 4" (100 pcs) | 1 |
| TR301-0282 | | Injector | 1 |
| TR300-LSA | | Lens stress analyzer | 1 |
| TR300-255 | AL255 | Magnifying loop | 1 |
| TR300-271 | AL271 | Base, mirror maintenance | 1 |
| TR300-7388 | 787388 | Mirror polish .1UM 250ML | 1 |

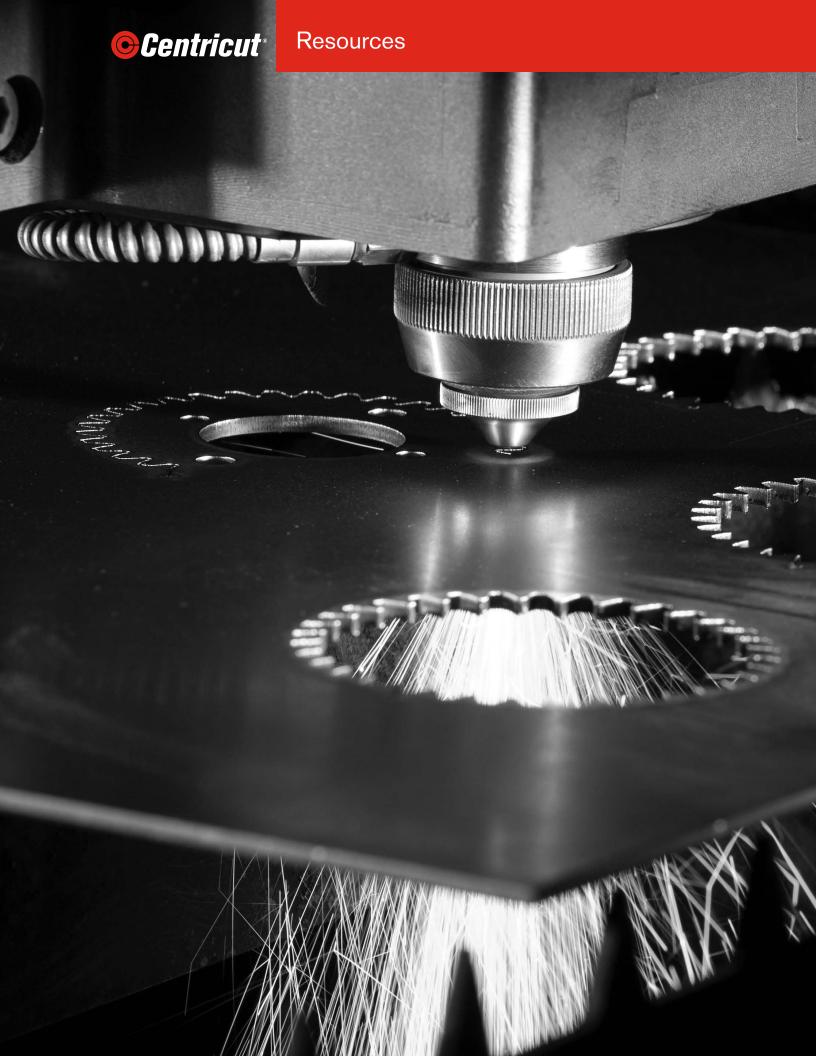

Sensor cones



Centricut sensor cones provide substantial cost savings without sacrificing performance or quality

- Available for Amada, Mazak, Mitsubishi and Precitec
- Delivers the same OEM performance at a lower cost
- Unmatched performance and reliability
- Engineered and manufactured to Hypertherm's precise quality standards
- Backed by our one-year warranty and 100% satisfaction guarantee

| Centricut | | Reference | |
|--------------|------------|---|-----------------------------------|
| part number | OEM | number | Description |
| AM343-0091 | Amada | 71360091 | AM-Sensor cone, HS95 mini |
| AM343-1621 | Amada | 71341621 | AM-Sensor cone, HS95 |
| AM343-9107 | Amada | ECO cone | AM-Sensor cone, ECO |
| AM343-1690 | Amada | 71341690 | AM-Sensor cone, HS98 |
| AM343-L3015C | Amada | 71374509 | AM-Sensor cone, LC3015 |
| PT347-3323 | Mazak | HNP | PT-Sensor cone, HNP |
| MZ335-HNPS | Mazak | HNPS | MZ-Sensor cone, HNP short version |
| PT347-0007 | Mazak | 56743300500 | PT-Sensor cone, HNZ (Mazak) |
| PT347-0011 | Mitsubishi | P0354-110-00002 | PT-Sensor cone, HNZ (Mitsubishi) |
| MB334-W429A | Mitsubishi | P0461-270-00001 | MB-Sensor cone, W429A |
| PT347-0238 | Precitec | BQ930D238G01 | PT-Sensor cone, HNZ SMA |
| PT347-8001 | Precitec | P0361-203-00001 | PT-Sensor cone, 2.5/J |
| PT347-0522 | Precitec | P0599-520-00002 | PT-Sensor cone, LRC |
| PT347-1145 | Precitec | P0380-140-0002, P0380-130-00001, 281145 | PT-Sensor cone, DZ |


*Sensor cone repair service is available for most sensor cones in North America and select international regions. For more information contact Ctlaser@Hypertherm.com.

Armored sensor cables

Centricut armored sensor cables outlast standard OEM cables

- Available for all major brands
- Robust design with extreme temperature rating (900–1200°)
- Longer life reduces downtime and production loss
- Spatter resistant stainless steel armoring
- Reinforced collars and high-quality connector



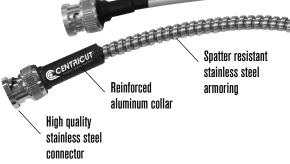

Armored sensor cables

| ATTITOTED SELISOT CADLES | | | |
|--------------------------|-----------------|------------------------------|---|
| Centricut | | Reference | |
| part number | OEM | number | Description |
| AM308-8965 | Amada | 71398965 | AM-Sensor cable, 305 mm (12") |
| AM308-8965A | Amada | 71398965 | AM-Sensor cable, 305 mm (12") premium, armored |
| AM313-1901 | Amada | | AM-Sensor cable, 305 mm (12") |
| AM313-1901A | Amada | 71341630 | AM-Sensor cable HS-5, 305 mm (12") premium, armored |
| AM313-8292 | Amada | 71398292 | AM-Sensor cable dual shield, 7 meters |
| AM313-9851A | Amada | 71369851 | AM-Sensor cable, 230 mm (8") premium |
| CN306-0654A | Cincinnati | 909654, 922686 | CN-Sensor cable, 114 mm (4.5") armored |
| CN306-0951A | Cincinnati | 842951 | CN-Sensor cable, 140 mm (5.5") armored |
| CN306-2951 | Cincinnati | 842951, PLTTW0015 | CN-Sensor cable, 140 mm (5.5") |
| CN306-9654 | Cincinnati | 909654, 922686, PLTTW0002 | CN-Sensor cable, 114 mm (4.5") armored |
| MZ335-0111A | Mazak | 4674330111 | MZ-Sensor cable, 280 mm (11") armored |
| MZ335-0181A | Mazak | 46743300181 | MZ-Sensor cable, 317.5 mm (12.5") armored |
| MZ335-1330A | Mazak | 46683301330 | MZ-Sensor cable, 305 mm (12") armored |
| MZ335-1980A | Mazak | 46683301980 | MZ-Sensor cable, 280 mm (11") armored |
| MZ335-5320 | Mazak | 6143355320 | MZ-Sensor cable, 70 mm (2.8") armored |
| MZ335-630A | Mazak | 00BSBA630MNC | MZ-Sensor cable, 630 mm (25") armored |
| MZ335-8290 | Mazak | 46143308290 | MZ-Sensor cable, 75 mm (3") |
| NT426-1682 | NTC | 4R029911-001, J482D | NT-Sensor cable, 216 mm (8.5") |
| NT426-4991 | NTC | 3-0104991 | NT-Sensor cable 0-OBNC/MCX, 482 mm (19") |
| NT426-7492 | NTC | 3-0117492 | NT-Sensor cable 90BNC/90BNC, 482 mm (19") |
| NT426-8677 | NTC | 4R028677-001 | NT-Sensor cable, 508 mm (20") armored |
| PR361-3150 | Prima | 820.63.150 | PR-Sensor cable, 150 mm (6") |
| PT347-0014 | Precitec | P36015000300, KE 300 gw Z MM | PT-Sensor cable OEM |
| PT347-0015A | Precitec | 00B-15 | PT-Sensor cable, 380 mm (15") |
| PT347-0040 | Precitec | 00BB-A-17i, BEC004-000.4 | PT-Sensor cable, 431 mm (17") armored |
| PT347-0101A | Precitec | P0360-100-00500 | PT-Sensor cable, 500 mm (20") armored |
| PT347-0181 | Precitec | 46743300181 | PT-Sensor cable |
| PT347-0250 | Precitec | 342475 | PT-Sensor cable, 250 mm (10") armored |
| PT347-0300A | Precitec | P0492-014-00300 | PT-Sensor cable KE, 300 mm (12") armored |
| PT347-0450 | Precitec | P0497-002-00450 | PT-Sensor cable, 450 mm (17.7") |
| PT347-KS13 | Precitec/Gunkyo | 00BMTKA-A-HS500mm | PT-Sensor cable, 390 mm (15.5") armored |
| PT347-06000EM | Precitec | P0360-210-00600 | PT-Sensor cable, 600 ZWW OEM |
| PT347-1250 | Precitec | D5001-040-00250 | PT-Sensor cable, 250 mm (10") armored |
| PT348-0390 | Precitec | | PT-Sensor cable, 390 mm (15.5") |
| TR301-0930 | Trumpf | 280930 | TR-Sensor cable, 152 mm (6") armored |
| TR301-1086 | Trumpf | 351086, \$0492-001-00000 | TR-Sensor cable |
| TR301-7833 | Trumpf | 227833 | TR-Sensor cable, 432 mm (17") |
| TR301-9983 | Trumpf | 359983, 342474 | TR-Sensor cable, 190 mm (7.5") armored |

Lens cleaning tips



Centricut supplies suitable for all OEM CO₂ and fiber laser lenses

- Lens maintenance base is designed to secure a wide range of optics sizes for the cleaning process
- Centricut optical cleaning fluid is a safe, economical alternative to traditional high-purity and reagent-grade solvents
- Cleaning materials suited for all lens cleaning needs; lens paper, polyester swabs and polyester wipes

Lens paper

Recommended for the routine maintenance cleaning of flat lenses.

Polyester swabs

Recommended for cleaning curved lenses and where a more aggressive cleaning is required (interchangeable with polyester wipes).

Polyester wipes

Recommended for cleaning CO₂ and fiber lenses and windows (interchangeable with polyester swabs and lens paper).

| Product description | Part number | Quantity per order |
|--------------------------------|-------------|-----------------------|
| Optical cleaning fluid (3 oz.) | TR300-1112 | 1 |
| Lens cleaning swab | TR300-0699 | 25 |
| Lens cleaning paper, Tiffen | TR300-6452 | 50 |
| Polyester wipes 4" x 4" | TR300-7991 | 100 |
| Base, lens maintenance | TR300-271 | 1 |

Lens paper

Recommended for the routine maintenance cleaning of flat lenses.

You will need:

- Lens maintenance base (lens holder)
- Optical cleaning fluid



- Lint-free lens paper
- Latex or rubber gloves



To get started

Using rubber gloves, place the lens in the lens holder and remove all loose contaminants with an air bulb. When contaminants are no longer visible, begin the cleaning process.


Step 1

Place lens paper over the optic, covering it completely.



Step 2

Apply a couple drops of lens cleaning fluid to the lens paper (far side of the lens).

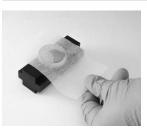

Step 3

Slowly pull the lens paper across the lens so the cleaning fluid comes in contact with the entire lens surface. Finish pulling the paper across so all of the fluid has dried from the lens.

Step 4

Inspect the surface of the lens for dust and cleaning residue using a flashlight. Examine the lens from different angles. Repeat the process on the other side of the lens.

Final step:

Place the cleaned lens in the machine quickly to avoid contamination from airborne particles. If spots, pits, or scratches are still noticeable, the lens may need

to be replaced.

Polyester swabs

Recommended for cleaning curved lenses and where more aggressive cleaning is required. Interchangeable with polyester wipes.

You will need:

- Lens maintenance base (lens holder)
- Optical cleaning fluid
- Air bulb
- Polyester swabs
- Latex or rubber gloves

-

To get started

Using rubber gloves, place the lens in the lens holder and remove all loose contaminants with an air bulb. When contaminants are no longer visible, begin the cleaning process.

Step 1

Place a few drops of the optical cleaning fluid onto the swab.

Polyester wipes

Recommended for cleaning CO_2 and fiber lenses and windows. Interchangeable with polyester swabs and lens paper.

You will need:

- Lens maintenance base (lens holder)
- Optical cleaning fluid
- Air bulbPolyester wipes
- Latex or rubber gloves



To get started

Using rubber gloves, place the lens in the lens holder and remove all loose contaminants with an air bulb. When contaminants are no longer visible, begin the cleaning process.



Step 1

Place a few drops of the optical cleaning fluid onto the polyester wipe



Step 2

Move the larger dirt particles and then finer contaminants to the edge of the lens using the swab. Do not rest the swab on the lens or on the work table. Do not reuse swabs.



Step 3

Inspect the surface of the lens for dust and cleaning residue using a flashlight. Examine the lens from different angles. Repeat the process on the other side of the lens.

Final step:

Place the cleaned lens in the machine quickly to avoid contamination from airborne particles. If spots, pits, or scratches are still noticeable, the lens may need to be replaced.



Step 2

Place the wipe with the wet side down on the lens and slide it across the lens, applying light pressure to the top of the wipe. Avoid contamination to the wipe and do not reuse wipes.



Step 3

Inspect the surface of the lens for dust and cleaning residue using a flashlight. Examine the lens from different angles. Repeat the process on the other side of the lens.

Final step:

Place the cleaned lens in the machine quickly to avoid contamination from airborne particles. If spots, pits, or scratches are still noticeable, the lens may need to be replaced.

Steps to help optimize cut quality.

Striation marks, angularity and dross tell the story.

Optimizing CO₂ and fiber lasers to achieve maximum cut quality is a very important step in the overall cutting process. The critical points that produce good cuts are the width of the kerf (the material that is lost during the cut), oxidation and roughness of the cut surface, the geometry of the cut parts and the allowable tolerances. Some factors to be considered are the cut speed or 'feed rate', beam focus, gas pressure, standoff and nozzle size/ type.

Factory cut chart settings

The following samples show 12 mm, 6 mm and 3.2 mm (1/2", 1/4" and10 ga.) mild steel, cut with O_2 on a 2 kW fiber laser with one variable changed to show how cut quality is affected. The adjustments will be similar for all CO_2 and fiber laser, cutting mild steel with O_2 .

Is the kerf too narrow?

When the kerf is too narrow the cut will have a very smooth edge on the top, a lack of oxidation on the bottom and/or heavy dross.

Probable causes:

- Focus is too low
- Feed rate is too fast
- Gas pressure is too low
- Nozzle size is too small
- Standoff is too low

Is the kerf too wide?

When the kerf is too wide the cut will have a rougher edge, more self burning in the corners of the part, more angularity on the cut edge and occasionally, dross.

Probable causes:

- Focus is too high
- Feed rate is too slow
- Gas pressure is too high
- Nozzle size is too big
- Standoff is too high
- Incorrect nozzle type

Follow these steps to optimize cut quality:

- 1. Use the closest known settings for the material being cut.
- 2. Use a test part that has both interior and exterior features.
- 3. Verify that the lens and/or window is clean and in good condition.
- 4. Verify that the nozzle is centered properly and is in good condition.
- 5. Adjust the focus up and down until the cut quality starts to get bad and then set to the middle of that range.
- 6. Adjust the gas pressure up and down until the cut starts to get bad and then set to the middle of that range.
- 7. Adjust the federate up by 5% increments. When the cut starts to get bad, set the feed rate 10% slower.

Strike a balance between heat levels and gas flow

Cutting mild steel with a laser is a balance of how much material is heated by the laser beam and how much assist gas flows through the cut.

- Heating up too small of an area, or not having enough assist gas flow through the cut will result with the kerf (width of the cut) being too narrow.
- Heating up too large of an area or having too much assist gas flow through the cut will result in the kerf being too wide.

3.2 mm (10 ga.) mild steel cut resulting in too narrow kerf

3.2 mm (10 ga.) mild steel cut resulting in too wide kerf

Factory cut chart settings





Factory cut chart settings

Focus is too low

The kerf is too narrow and doesn't allow enough O₂ into the cut to remove all the molten material.

Feed rate is too fast


The cut striations are trailing the direction of cutting and there is not enough time to remove all the molten material.


Gas pressure is too low


There is not enough O₂ to remove all the molten material.


Stand off is too low


The focus spot is in the wrong location, causing the rough edge.


















Focus is too high

The laser is melting more material than can be removed from the cut.

Feed rate is too slow

The cut surface is too rough and productivity is decreased.

Gas pressure is too high

Too much O₂ results in overheating of the cut and causes intermittent gouges.

Stand off is too high

The laser is melting more material than can be removed from the cut.

Nozzle size is too big

Too much O₂ results in overheating of the cut and causes intermittent gouges.

Cut direction

Cut direction

*Above samples have been cut with O2 on 2 kW fiber laser. Results will be similar for CO_2 laser cutting mild steel with O_2 .

6 mm (1/4") mild steel cut resulting in too narrow kerf

Factory cut chart settings

6 mm (1/4") mild steel cut resulting in too wide kerf

1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 | 1777 |

Factory cut chart settings

Focus is too low

The kerf is too narrow and doesn't allow enough O_2 into the cut to remove all the molten material.

Feed rate is too fast

The cut striations are trailing the direction of cutting and there is not enough time to remove all the molten material.

Gas pressure is too low


There is not enough O_2 to remove all the molten material.

Stand off is too low

The focus spot is in the wrong location, causing the rough edge.

Nozzle size is too small

There is not enough O₂ to cut uniformly















Focus is too high

The wider focus spot is letting too much O_2 into the cut and burning the material.

Feed rate is too slow

The cut surface is too rough and productivity is decreased.

Gas pressure is too high

Too much O_2 is entering the cut, causing a rougher edge and inconsistent cutting.

Stand off is too high

Too much O_2 is entering the cut, causing a rougher edge and inconsistent cutting.

Nozzle size is too big

Too much O_2 results in overheating of the cut and causes intermittent gouges.

Nozzle type is incorrect

The shape of the gas flow is incorrect, causing a rougher edge.


Cut direction

Cut direction

*Above samples have been cut with O_2 on 2 kW fiber laser. Results will be similar for CO_2 laser cutting mild steel with O_2 .

12 mm (1/2") mild steel cut resulting in too narrow kerf


Factory cut chart settings



Focus is too low

The kerf is too narrow and doesn't allow enough O_2 into the cut to remove all the molten material.





Factory cut chart settings

Stand off is too low

The kerf is too narrow to allow enough O_2 into the cut. The oxidation is not covering the entire surface and cutting will be inconsistent.

Nozzle size is too small

There is not enough O_2 to cut uniformly

Feed rate is too fast

The machine is moving too fast to allow enough O_2 into the cut for consistent cutting.



The pressure is too low to allow enough O_2 into the cut. The oxidation is not covering the entire surface and cutting will be inconsistent.






Cut direction

Cut direction

*Above samples have been cut with O_2 on 2 kW fiber laser. Results will be similar for CO_2 laser cutting mild steel with O_2 .

12 mm (1/2") mild steel cut resulting in too wide kerf


Factory cut chart settings



Focus is too high

Too much O_2 is entering the cut causing intermittent over burning.





Stand off is too high

Factory cut chart settings

Too much O₂ is entering the cut resulting in intermittent over burning.

Feed rate is too slow

The machine is moving too slow resulting in the over burning of the bottom half of the cut. The slower feed rate also reduces productivity.

Gas pressure is too high

Too much O_2 is entering the cut resulting in intermittent over burning.





Incorrect nozzle type

The gas flow shape is not correct resulting in inconsistent cutting.

Cut direction

Cut direction

*Above samples have been cut with O_2 on 2 kW fiber laser. Results will be similar for CO_2 laser cutting mild steel with O_2 .

Centricut is not affiliated with the named manufacturers. Reference to machines, parts, descriptions, and model numbers are for convenience in verifying compatibility only. All parts are made by or for Centricut and are not made by the referenced manufacturers (unless expressly indicated). Centricut is a registered trademark of Hypertherm, Inc. All other trademarks are the properties of their respective owners.

140 www.hypertherm.com/centricut/laser

Technical support and customer service

Our technical service team can answer questions about any laser cutting system. Whether it's a question about a part, a system or for guidance on how to optimize laser cutting performance, our experts can help.

- OEM trained technicians with over 40 years experience
- Free application support for all laser OEMs

MACH-20L

• We stand behind our products with industry-leading technical expertise

Contact a laser expert at ctlaser@hypertherm.com

HELPING YOU SHAPE THE WORLD.



Distribuitor: S.C. SM TECH S.R.L. www.sm-tech.ro Consumabile laser : SiMBLECH www.simblech.com office @ sm-tech.ro Tel: 0374-991480 Fax: 0374-091010

