



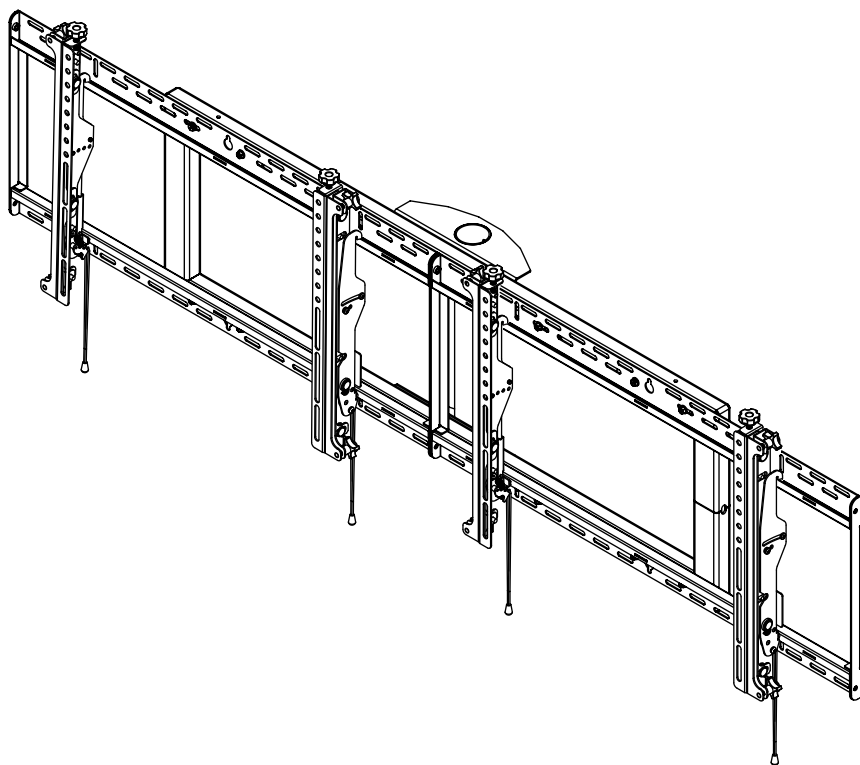


DS-MBZ942L-2X1



DS-MBZ947L-2X1



⚠ WARNING

ENG - Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.


ENG Symbols



ENG WARNING



ENG Skip to step.

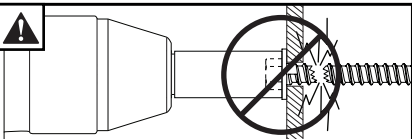

ENG Do not overtighten screws.




ENG Screws must get at least three full turns and fit snug.




ENG To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.


1



2









3



4




ENG Tools Needed for Assembly.

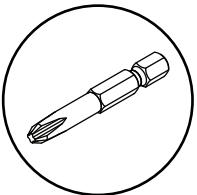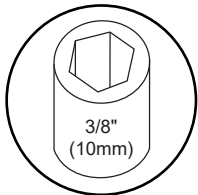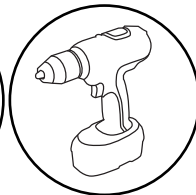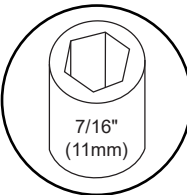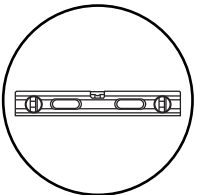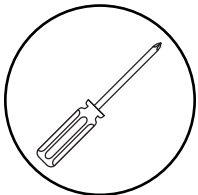


ENG This page intentionally left blank.

ENG Parts (Before beginning, make sure you have all parts shown below).


Parts List		DS-MBZ942L-2X1	DS-MBZ947L-2X1
Description	Qty	Part #	Part #
A wall plate	2	146-1369	146-1372
B left adaptor bracket	2	10004241-RBLK	10004241-RBLK
C right adaptor bracket	2	10004240-RBLK	10004240-RBLK
D retaining collar	1	1800-375	1800-375
E large washer	1	540-9432	540-9432
F M5 x 16mm phillips screw	4	520-1189	520-1189
G 1/4-20 x 1/2" phillips screw	4	510-9108	510-9108
H M6 x 12mm phillips screw	8	520-1128	520-1128
I M6 x 25mm phillips screw	8	520-1208	520-1208
J M8 x 12mm phillips screw	8	520-9571	520-9571
K M8 x 25mm phillips screw	8	520-1031	520-1031
L 5/16" flat washer	16	540-9406	540-9406
M 1/4" spacer	16	600-1215	600-1215
N 4mm allen wrench	2	560-9646	560-9646
O cable tie	6	560-9711	560-9711
P main frame	1	10002873-RBLK	10002873-RBLK
Q main post	1	146-1434	146-1434
R carriage bolt	4	520-1175	520-1175
S small washer	4	540-9440	540-9440
T nylock nut	4	530-9413	530-9413
U hex head screw	12	520-1321	520-1321
V #10 x 1/2" phillips screw	2	520-1320	520-1320
W M5 x 10mm socket pin screw	1	520-1164	520-1164
X #14 x 2-1/2" wood screw (not used)	8	-	5S1-015-C03

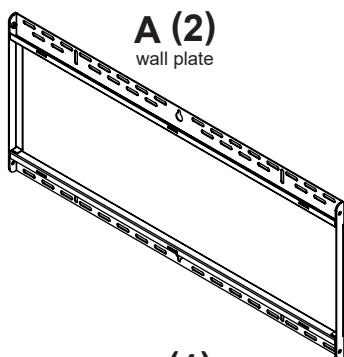


A (2)
wall plate

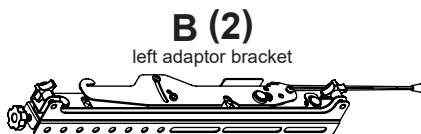


B (2)
left adaptor bracket

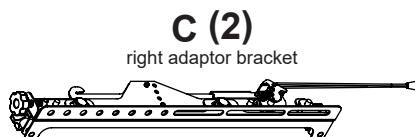


C (2)
right adaptor bracket

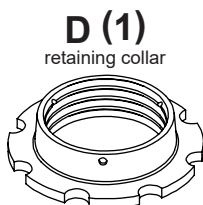


D (1)
retaining collar

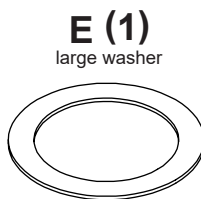


E (1)
large washer

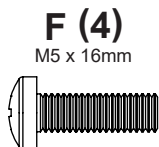


F (4)
M5 x 16mm

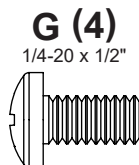












G (4)
1/4-20 x 1/2"

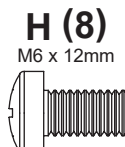




H (8)
M6 x 12mm

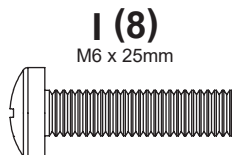

I (8)
M6 x 25mm

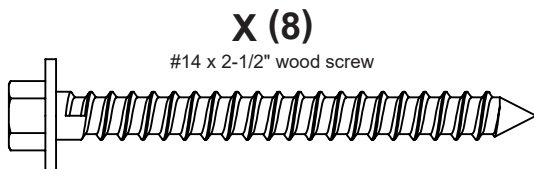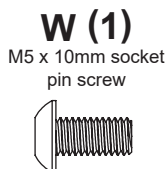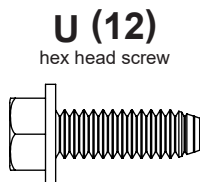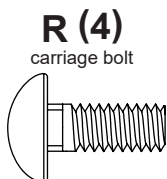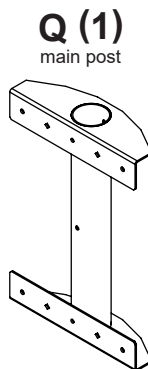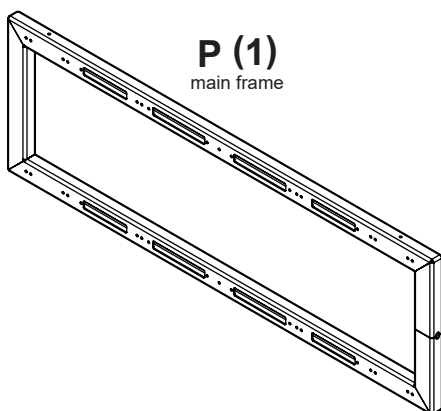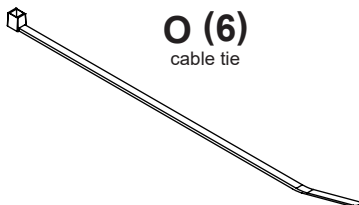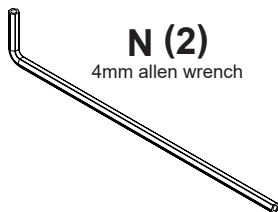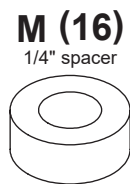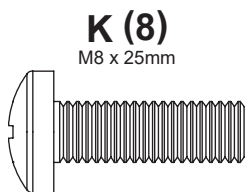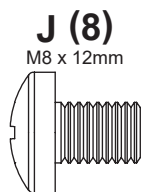



1

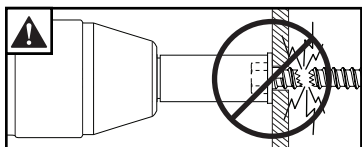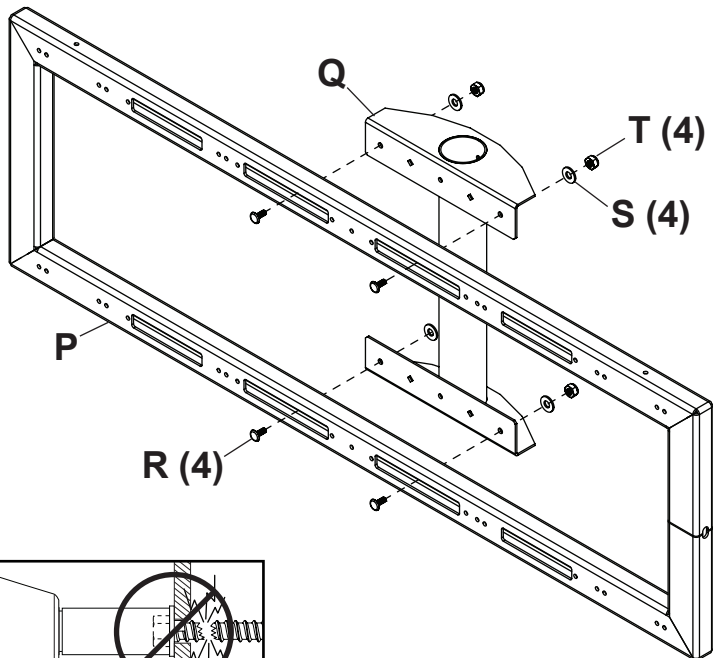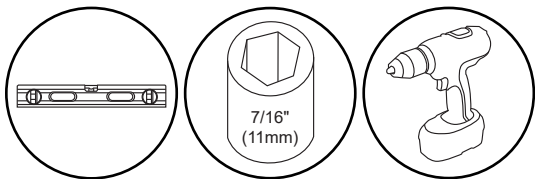

2

ENG Pole (EXT series)

ENG Pole (MOD-P series)

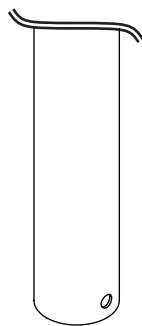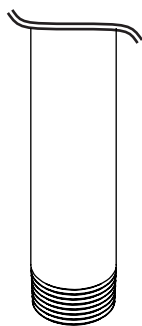


2a-1


2b-1

2a-1

ENG Extension pole (sold separately).

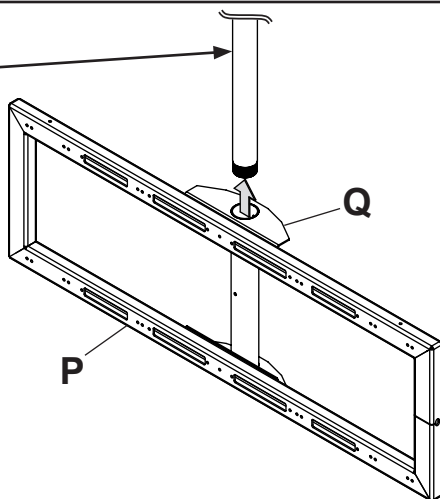


2a-2

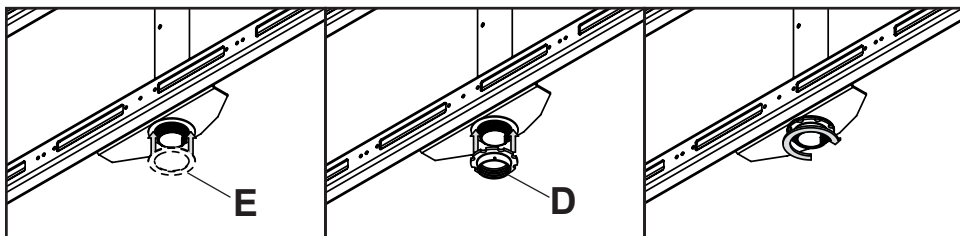

2a-3


ENG Align slot of extension column with one of holes in retaining collar.

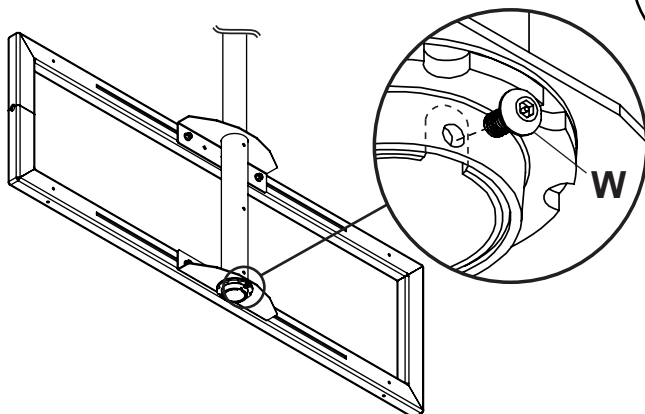

2b-1


ENG Refer to accompanying instructions for additional information.

ENG Modular extension pole (sold separately).

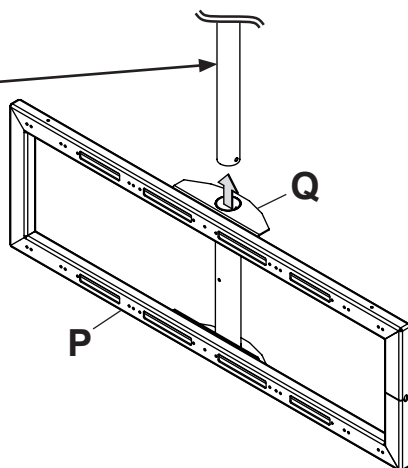



2b-3

ENG MOD-ASC (sold separately).

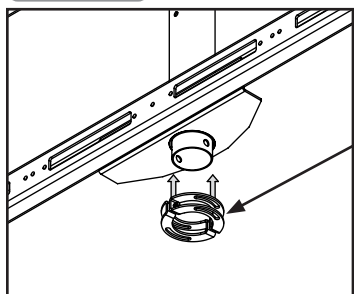



2b-4

ENG Tighten.


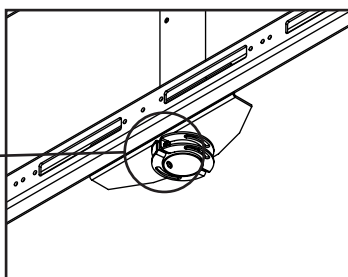
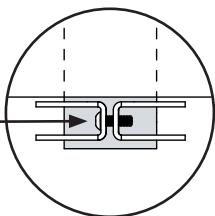


2b-5




ENG Refer to accompanying instructions for additional information.

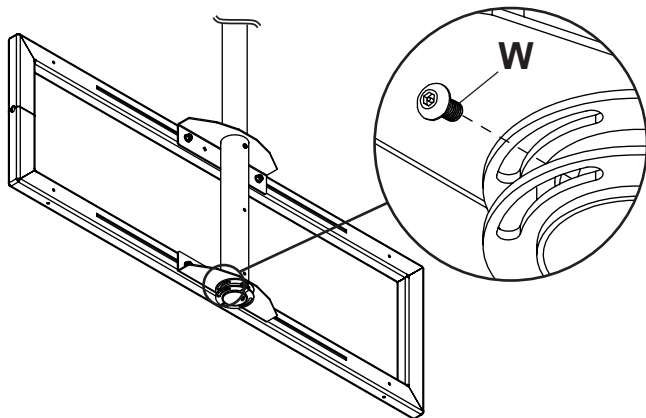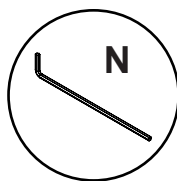




3

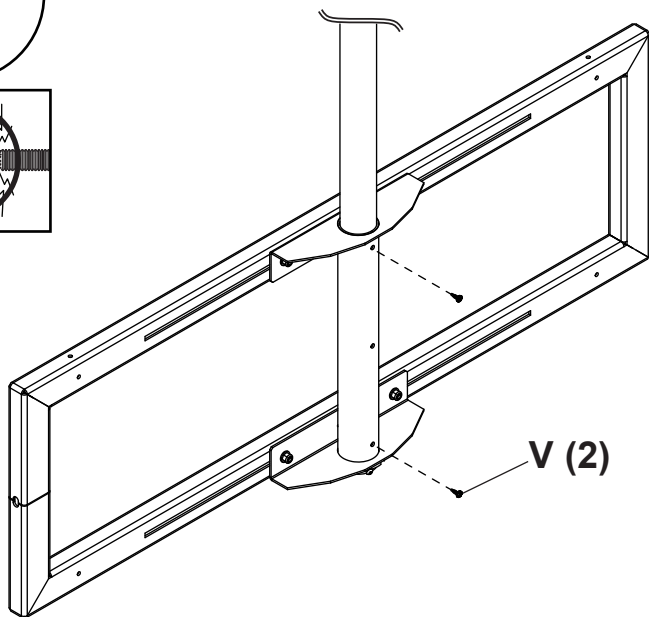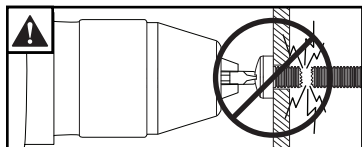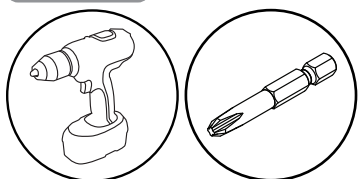

4-1

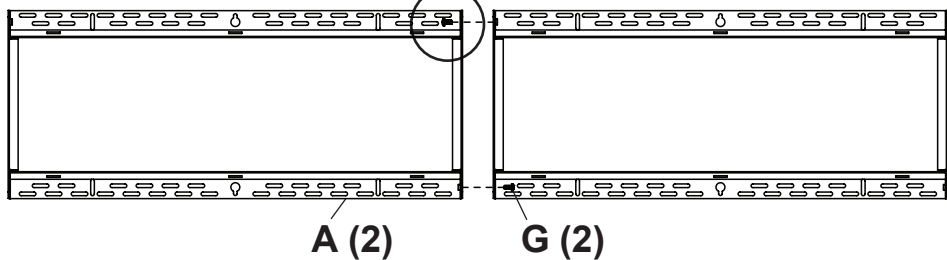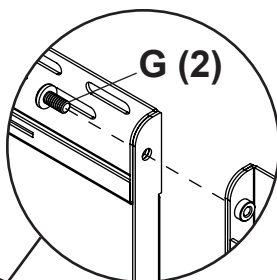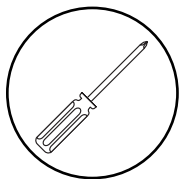


4-2

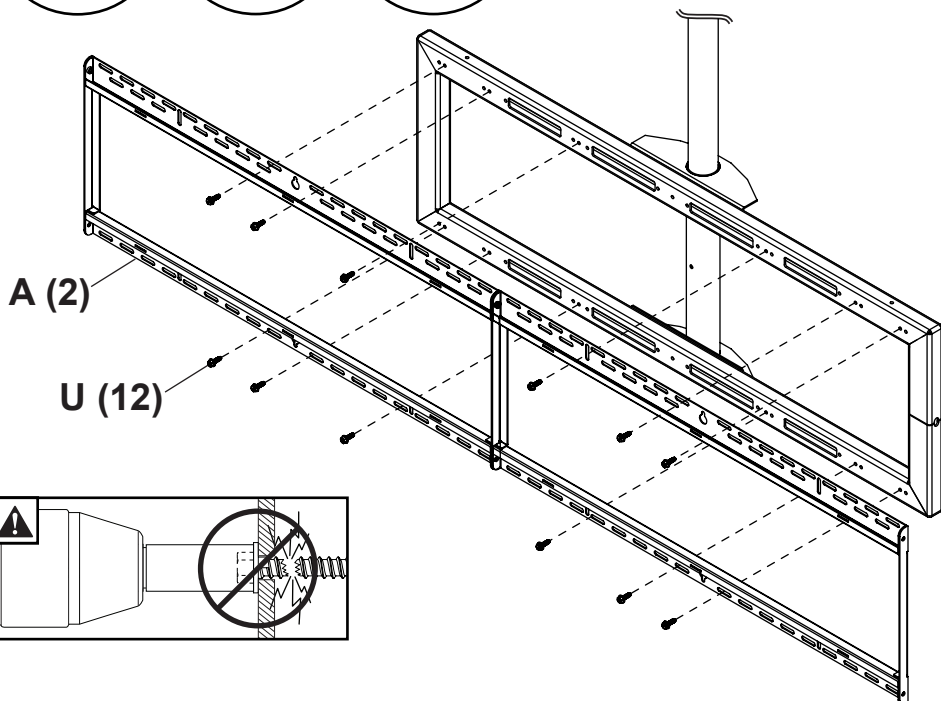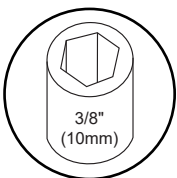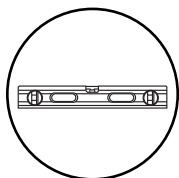


5-1

ENG Optional.

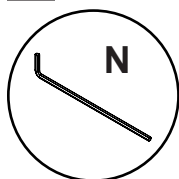


x2

ENG Remove.

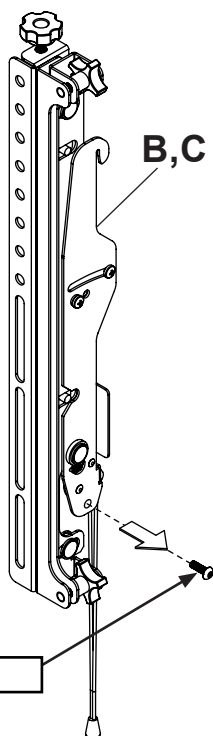


5-2

ENG Optional.

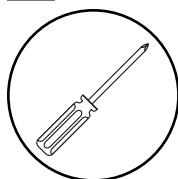

x2


ENG Replace.

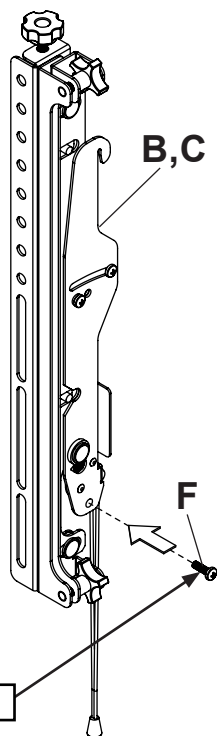

6

ENG Center adaptor brackets vertically on back of screen.



x2

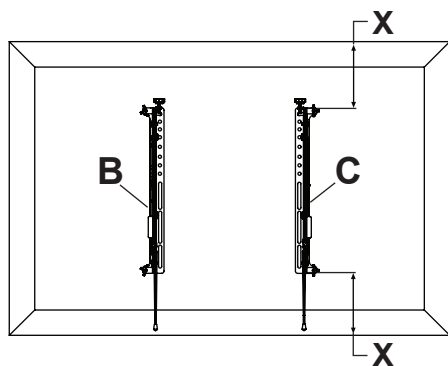


7



x2

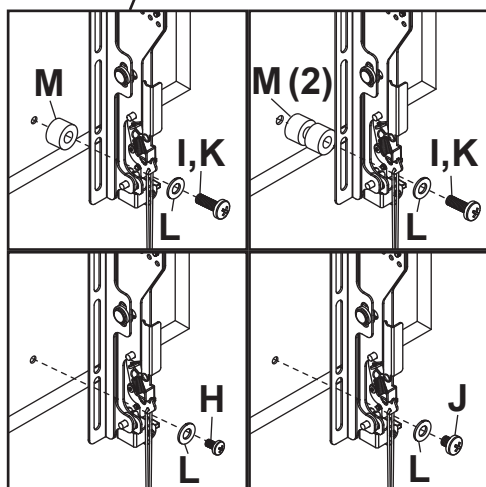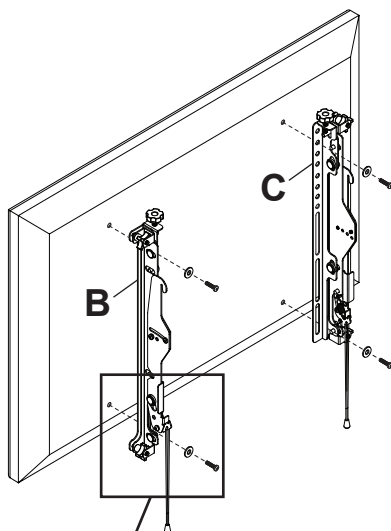


8-1

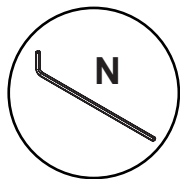


x2


ENG Loosen.

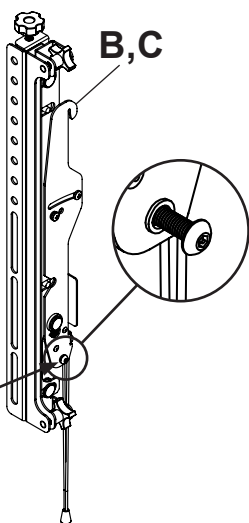

8-2

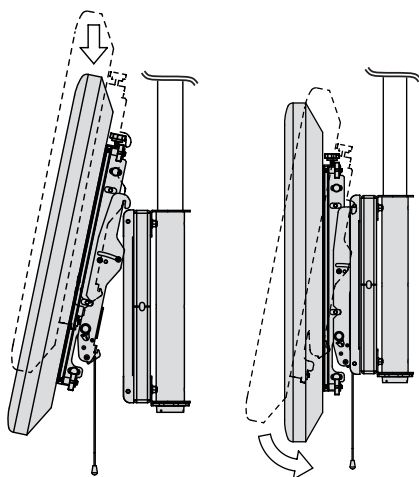


8-3

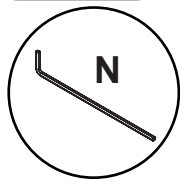


x2

ENG Tighten.

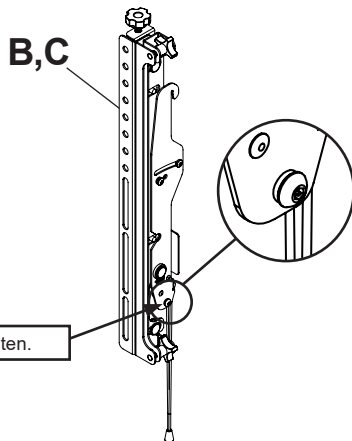


9

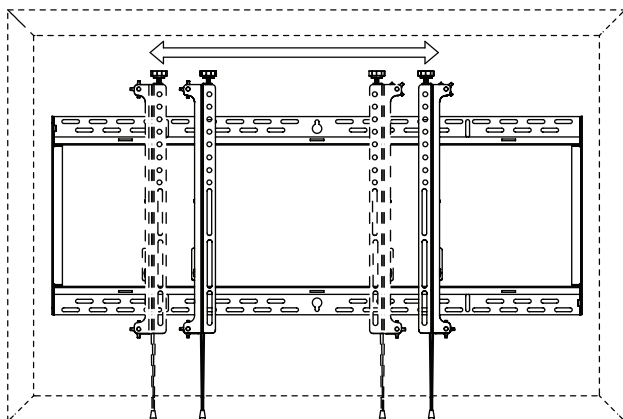

10

+15°

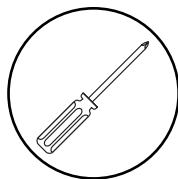

ENG Loosen, adjust, tighten.

Preset tilt positions of 0°, 5°, 10° or 15°. ENG

ENG Tighten.

11

ENG Adjust.



± 3/8"
(± 9.5mm)

± 1/4"
(± 6mm)


ENG Adjust.


12-1

ENG Optional.

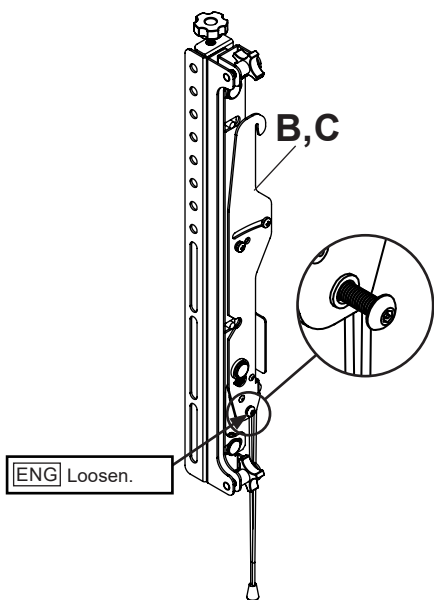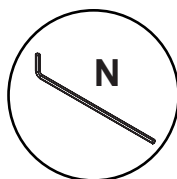


12-2

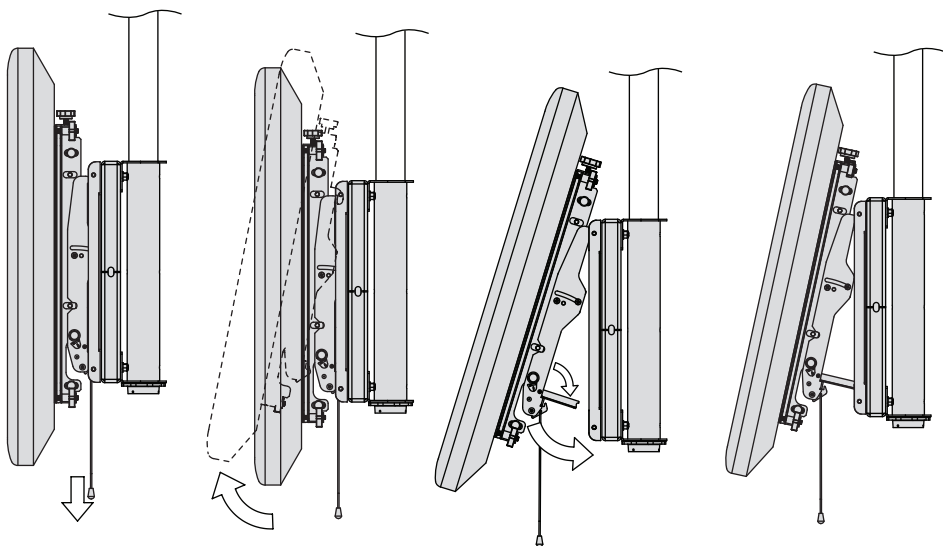


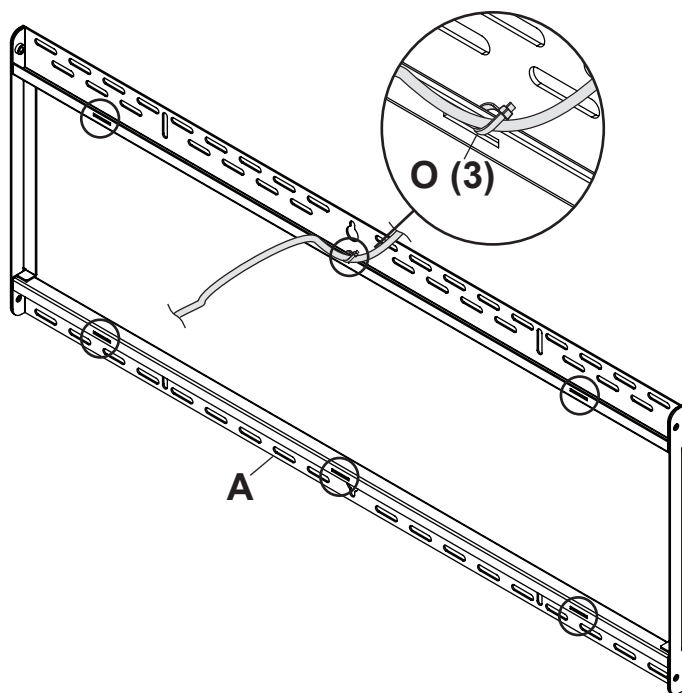

14-1

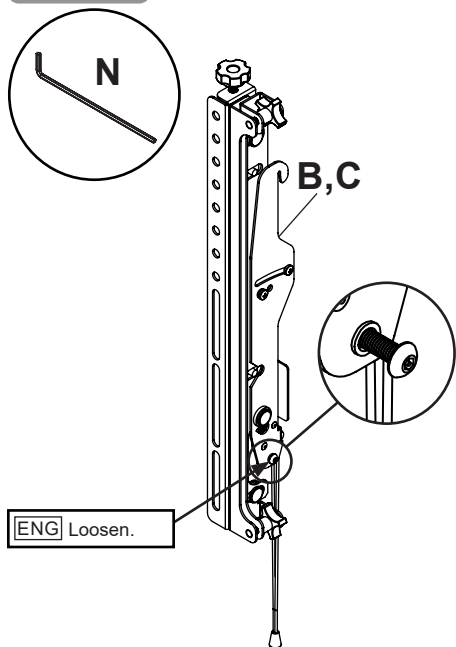

14-2

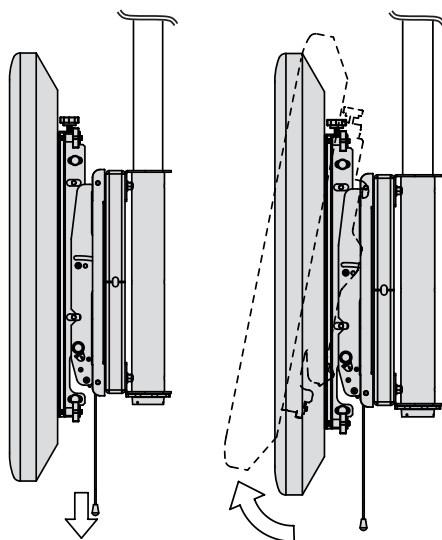

ENG This page intentionally left blank.

ENG This page intentionally left blank.

ENG	Warranty	ESP	Garantía	FRN	Garantie	DEU	Garantie	NEL	Garantie
ITL	Garanzia	ČES	Záruka	SLK	Záruka	POR	Garantia	TÜR	Garanti

www.peerless-av.com/warranty

peerless-AV®

Peerless-AV

2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2022, Peerless Industries, Inc.

Peerless-AV Europe

Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2022, Peerless Industries, Inc.

Peerless-AV América Latina

Av. de las Industrias 413
Parque Industrial Escobedo
General Escobedo N.L., México 66062
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2022, Peerless Industries, Inc.