



# Medical Solutions



*Improving lives through innovative solutions from ON Semiconductor.*



## Bringing Silicon to Life

An aging population and the pressure of rising healthcare costs are driving a shift towards home healthcare. This shift, along with an increased interest in health and wellness and the adoption of intelligent and connected portable devices, are driving medical device innovation and the consumerization of medicine.

Semiconductor technology plays a significant role in that innovation. With a diverse portfolio of products and services, talented engineering staff with system expertise, a deep understanding of the quality, reliability and longevity requirements of the medical market, and global manufacturing and logistics capability, ON Semiconductor enables developers of medical technology to solve their unique design challenges with high performance silicon solutions.

### Expertise and Experience

- 30+ years of custom silicon experience, including high-reliability implantable applications
- Heritage of serving the hearing aid industry since early 1970s
- Extensive system knowledge in focus applications
- Fully certified and robust custom development process
- Rich portfolio of ultra-low-power analog, digital, and memory IP
- System architects for product concept and architecture review
- Highly skilled and experienced silicon, packaging, and test engineers
- Dedicated program managers for development tracking and reporting

### Quality, Reliability, and Commitment

- Process and product longevity to support extended product life-cycles
- Traceability and data retention processes that meet the special needs of medical applications
- Lot Acceptance Testing (LAT) performed on each individual lot
- World-class owned and operated fabs
- Reliability and failure analysis lab
- Quality certifications including ISO/TS 16949, ISO 9001, AS 9100, ISO 14001, MIL-PRF-38535, QML, C-TPAT and STACK
- ISO 13485 for advanced packaging facility
- FDA compliance
- REACH compliance
- IEC 62304 compliance

### Products and Capabilities

- Industry's lowest power Bluetooth Low Energy technology System-on-Chip (SoC)
- System-in-Package (SiP)
- Precision mixed-signal microcontrollers
- Preconfigured and open-programmable audio DSP systems
- Mixed-signal ASIC development services with flexible engagement models
- CMOS image sensors for medical imaging
- Large portfolio of power management and discrete components
- FPGA and ASIC conversions
- Custom and semi-custom ultra-low-power SRAM and EEPROM
- Foundry and value-added front- and back-end services
- Advanced packaging and product miniaturization techniques
- Customization of many portfolio products
- High voltage and low power processes

## Medical ASIC Design and Manufacturing Services


ON Semiconductor has over three decades of experience designing and manufacturing complex ASICs for medical applications, offering both mixed-signal and digital solutions.

With an increasing number of medical devices becoming portable, more intelligent, and connected, medical device manufacturers are looking for highly integrated semiconductor solutions that enable higher performance, smaller size, lower power consumption, and higher reliability.

With proven design methodologies, dedicated system architects, an extensive IP portfolio, wide selection of fab process technologies, and advanced packaging solutions, ON Semiconductor helps customers transform their concept and initial specifications into volume production of a finished device.

### Intellectual Property

ON Semiconductor offers an extensive library of IP blocks for use in ASIC designs, including signal conversion, signal processing, ADCs, memory, communication interfaces, power management, and low-noise circuits. System architects work with customers to identify the most appropriate technology and IP selection.

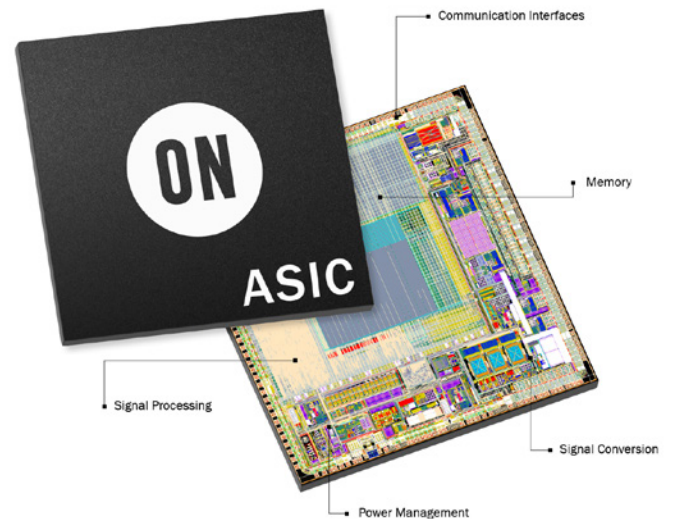

### System Architects


System architects help to refine design specifications to ensure feasibility and maximize functionality, while optimizing performance, power consumption, and size.

Some of the ASIC devices that ON Semiconductor system architects and engineering staff have recently developed include:


- Sensor interface for blood gas monitoring
- Vital sign patch monitor
- Data acquisition system devices for CT scanners, X-Ray, Ultrasound, and PET machines
- Precision analog front-end for ECG

### Flexible Engagement

Whether the requirement is full or partial definition and design, design services after an RTL or netlist handoff, foundry services, custom advanced packaging of existing designs, or full turnkey service, ON Semiconductor tailors services to the unique requirements of medical customers. FPGA to ASIC conversions are also available.

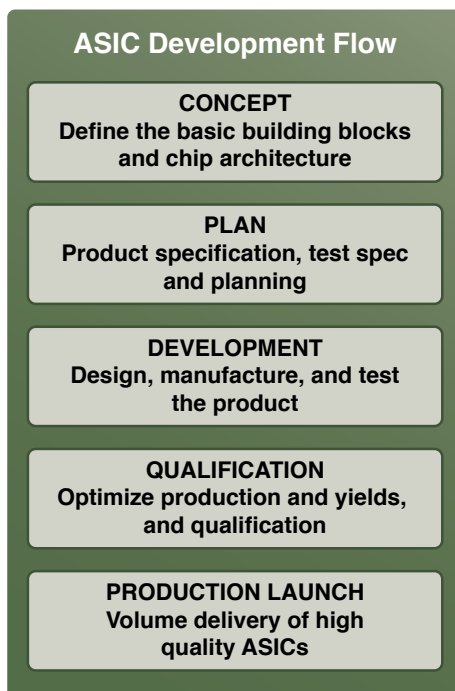

## Miniaturization Through Medical-Grade Modules

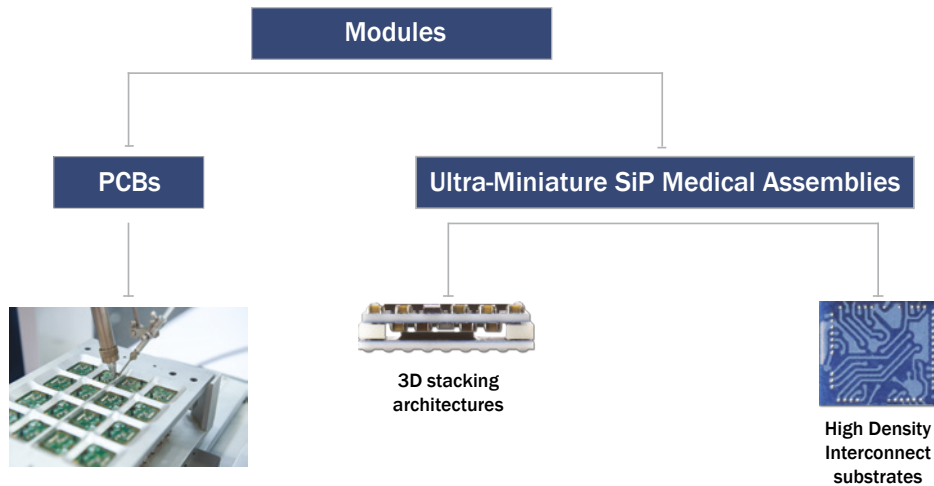

ON Semiconductor is a pioneer in the development of miniaturized packaging solutions for the medical microelectronics industry.

The company offers turnkey solutions for medical applications where size, performance, and system integration are critical. ON Semiconductor has proven leadership in miniature System-in-Package (SiP) solutions, addressing the highly space-constrained requirements of hearing aid manufacturers for over four decades. As other medical devices shrink in size, they too can benefit from the same miniaturization techniques and technologies.

Whether the need is for a custom component such as a complete tested printed circuit board or a fully integrated SiP, ON Semiconductor offers custom package development and manufacturing services, from design and test through volume manufacturing.

The ON Semiconductor facility located in Burlington, Canada, offers manufacturing compliance with US Food & Drug Administration (FDA) regulations.


### Printed Circuit Board Modules

ON Semiconductor offers printed circuit board module design, manufacturing, assembly, and test services to standards of quality and traceability demanded by medical device manufacturers. Features like 2D barcodes screened onto every board for individual tracing is just one example of how our standard process is tailored to medical needs.

### Advanced 3D Packaging

Custom 3D packaging connects different silicon die and discrete components together in the same package to dramatically save space and improve electrical performance by decreasing signal distances.

- Stacking with or without wirebonds
- Modular, scalable architectures with high degree of manufacturing testability
- Mature, robust technologies and structures
- RoHS-compliant and ISO-certified
- For applications with high reliability requirements

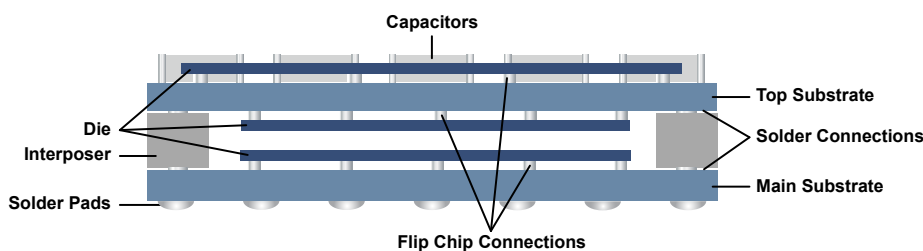

**E7160 SL Wireless Enabled DSP for Hearing Aids**

## Foundry Services

ON Semiconductor offers foundry services specifically tailored to the medical market. With analog, high voltage, and low power options, these world-class processes are ideally suited for applications such as cardiac rhythm management, neurostimulation, patient monitoring, and hearing aid devices.

The company provides process design kits (PDKs) and design guides for our technology. Customers are ensured direct technical communication with the foundry through a development customer service representative (DCSR). The DCSR coordinates the project through the engineering and prototype stages and responds to customer inquiries.

### Value-Added Services

Other front-end and back-end services are available, such as wafer probe, custom short flow wafer processing, backgrind, backmetal, custom packaging, test, logistics, and supply chain management.

### Features

- Optimized in-house process technologies tailored to medical applications
- Process longevity to support long product life cycle requirements
- World-class, high-reliability manufacturing sites certified to multiple international standards
- Access to extensive IP including configurable SRAM and EEPROM
- Multi-project wafer (MPW) prototyping support
- Extensive failure analysis capability
- Low cost shuttle service for development
- Flexible manufacturing: process modifications and lot splits

### Mixed-Signal Process Technologies

ON Semiconductor offers ultra-low-power and low-leakage CMOS processes, as well as high voltage CMOS and BCD, tailor-made for the stringent demands of medical applications.

Process Name	Min Drawn Poly (μm)	No. Metal Layers	Wafer Size (in)	Max Operating Voltage	Max Operating Voltage (V <sub>gs</sub> )	NVM	Linear Cap	Other Devices
GF55	55	5-8	12	3.3	1.2/1.8/2.5/3.3	Y	MOM	Resistors
ONC110	110	4-7	8	3.3	1.2/2.5/3.3	Y	MIM	Resistors
I4T70	180	4-6	8	70	1.8/3.3	Y	MIM	Resistors
I4T45	180	4-6	8	45	1.8/3.3	Y	MIM	Resistors
ONC18TG	180	4-6	8	30	1.8/5/18	Y	MIM	Resistors
ONC18 5V30V	180	4-6	8	30	1.8/5	Y	MIM	Resistors
ONC18G/MS	180	4-6	8	15	1.8/3.3	Y	MIM	Resistors
ONC25	250	2-5	8	5	2.5/3.3/5	Y	MIM	Resistors
ONBCD25	250	2-5	8	40	5/12	Y	MIM	Resistors

## RSL10 Bluetooth® Low Energy Technology Radio SoCs


With so many options for wireless available, what sets the RSL10 radio SoC family apart? Simple. It offers the industry's lowest power Bluetooth Low Energy technology. Supporting 2 Mbps data rates provided by Bluetooth 5 (twice the speed as with previous Bluetooth generations), RSL10 enables advanced wireless functionality without compromising battery life. RSL10 can be easily integrated into any device.

### SoC Features

- Industry's lowest power consumption (62 nW in Deep Sleep, 7 mW in Receive Mode)
- Supports Bluetooth Low Energy and 2.4 GHz proprietary protocols
- Flexible Voltage Supply Range (1.1 - 3.3 V)
- IP protection feature
- Available packages WLCSP-51, QFN-48

### SIP Features

- All-in-one solution
  - RSL10 radio SoC
  - Integrated antenna, filtering, power management, passives
- Fully certified to worldwide regulatory standards
  - Bluetooth SIG, FCC (USA), CE (Europe), IC (Canada), KCC (Korea), MIC (Japan)

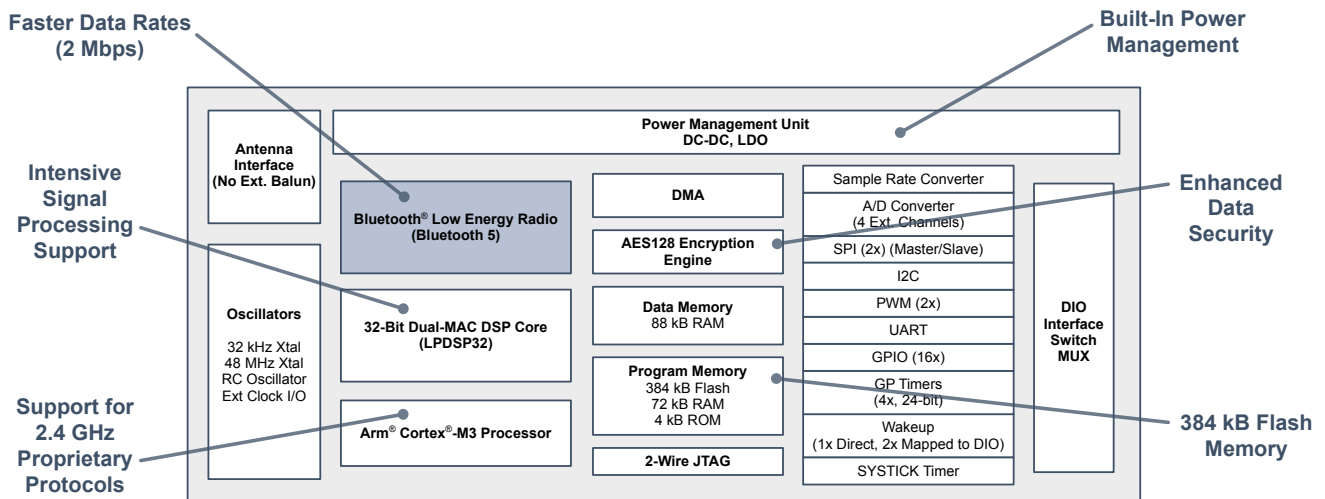

## Development Tools


### Software Development Kit (SDK)

- IDE support for Eclipse, Keil, and IAR
- Bluetooth Low Energy protocols, sample code and libraries, technical documentation



### RSL10 Development Board


- Compliance with Arduino form factor
- Integrated PCB antenna
- On-board J-link adapter for easy debugging

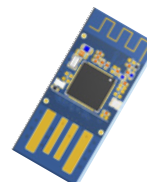

### RSL10 USB Dongle

- Provided with Bluetooth Low Energy Explorer software to help verify or diagnose wireless connections during development

## Ultra-Low-Power Microcontrollers for Precision-Sensing Medical Devices

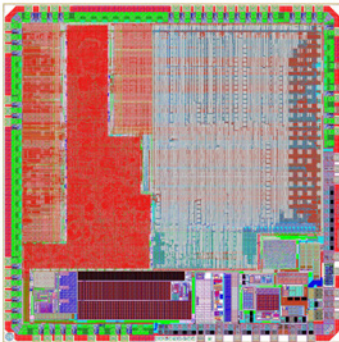

Built around a powerful Arm® Cortex®-M3 core, the 32-bit ULPMC10 microcontroller provides portable medical devices with reliable, ultra-low-power data processing without compromising battery life. ULPMC10 is highly configurable, enabling a wide range of medical applications from those requiring low duty-cycles to miniature devices requiring a minimal footprint.

### Applications

- Blood glucose meters
- Wireless electrocardiographs
- Pulse oximeters
- Telehealth/remote patient monitors
- Personal emergency response systems
- Fitness and wellness monitoring devices e.g., activity, calorie, and sleep
- Life-critical devices (\* pending 3Q19)



Example Interface	Applications
Potentiostat Interface	<ul style="list-style-type: none"> <li>• Blood Glucose Meters</li> <li>• Continuous Glucose Monitoring</li> <li>• Blood Gas Sensors</li> </ul>
ISFET Interface	<ul style="list-style-type: none"> <li>• pH Sensors</li> <li>• Blood Gas Sensors</li> <li>• Serum Sensors</li> </ul>
Conductimetric Interface	<ul style="list-style-type: none"> <li>• Drug Distribution</li> <li>• Continuous Glucose Monitoring</li> </ul>
On-Chip Temperature Sensor	<ul style="list-style-type: none"> <li>• All</li> </ul>
ECG Input Buffer	<ul style="list-style-type: none"> <li>• ECG</li> </ul>
Instrumentation Amplifier	<ul style="list-style-type: none"> <li>• ECG</li> </ul>

### Custom Analog Front-Ends



With 30 years of specialized experience in small signal bio-sensing technology and a rich IP portfolio, ON Semiconductor can design and manufacture complex Analog Front Ends (AFE) to specific application needs. For added miniaturization, AFEs can be integrated with the ULPMC10 into a single module. Driver options for therapy devices (e.g., insulin delivery, electrical stimulation, etc.) are also available.

## Ezairo® Open-Programmable DSPs for Hearing Aids

The highly customizable Ezairo series of open-programmable DSP systems enables manufacturers to build hearing aids with high precision sound. With processing power to run several advanced software algorithms simultaneously, Ezairo DSP systems' unique and patented architecture optimally balances processing power, power consumption, and design flexibility.

### Features and Benefits


- High-precision sound with 24-bit precision computing
  - ♦ Enables development of more complex and efficient hearing aid algorithms
- Quad-core computing
  - ♦ Balances processing power and optimizes power consumption and design flexibility
- Ultra-high audio fidelity
  - ♦ Enables enhanced performance, especially for mild to moderate hearing loss profiles that demand more natural sound
- Ultra-low-power consumption
  - ♦ Extends life of small batteries
- Wireless capability
  - ♦ Seamless control of low-power radios for wireless-enabled hearing aids

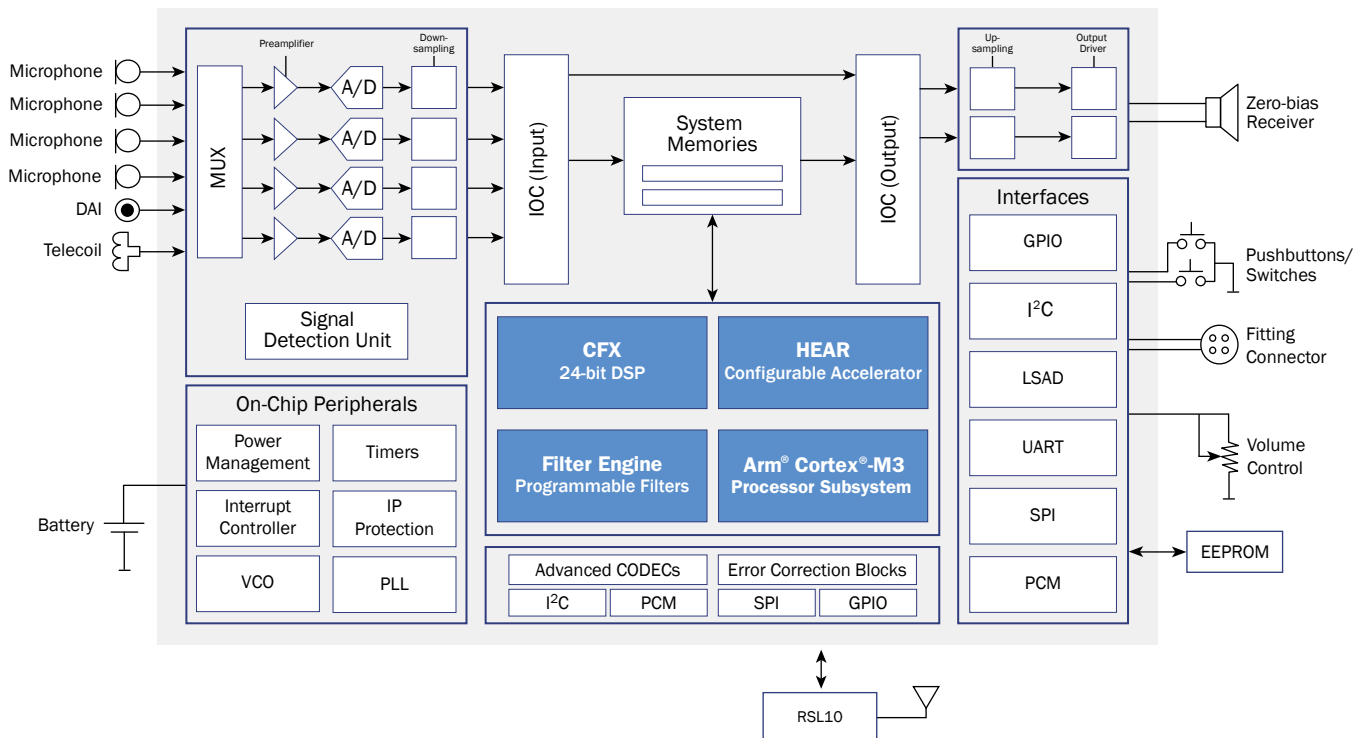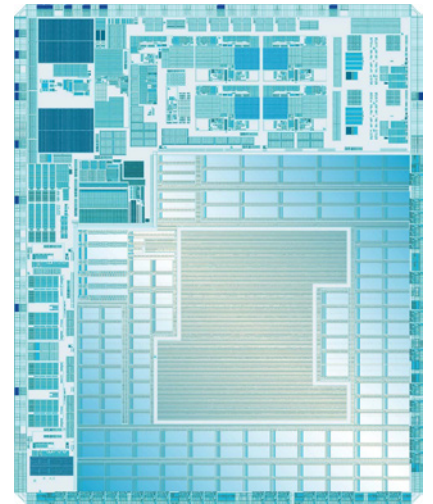



## Ezairo-based Hybrid Modules for Hearing Aids

The Ezairo systems are available in several hybrid package configurations designed for specific types of hearing aids – from sophisticated, wireless-enabled Behind-the-Ear (BTE) devices to discrete, Receiver-in-Canal (RIC) applications. Offering enhanced system miniaturization, the Ezairo-based hybrid modules combine functionality including audio processing, wireless, and peripherals into a single package.


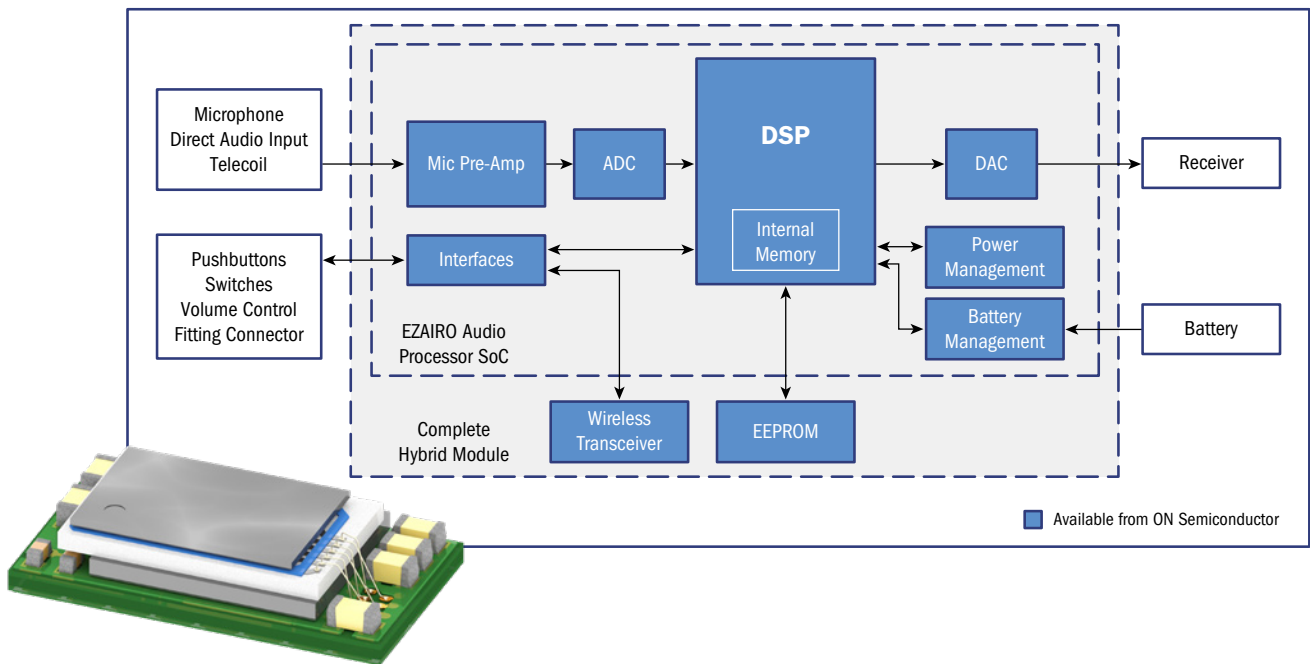


	Ezairo 5920	Ezairo 7110	Ezairo 7111	Ezairo 7160 SL
Pre Suite Compatible			Yes	Yes
Wireless-Enabled				Bluetooth Low Energy Technology (Bluetooth 5)
Typical Power Consumption	~850 mA @ 5.12 MHz	~700 mA @ 10.24 MHz	~700 mA @ 10.24 MHz	~700 mA @ 10.24 MHz
Clock Speed	Max 5.12 MHz	Max 15.36 MHz	Max 15.36 MHz	Max 15.36 MHz
Max MIPS	45	375	375	375
EEPROM	512 kbit	2048 kbit	2048 kbit	2048 kbit
Program Memory	12 kwords	40 kwords	40 kwords	40 kwords
Data Memory	20 kwords	44 kwords	44 kwords	44 kwords

## Development Tools for Ezairo DSP Systems


ON Semiconductor's development tools provide the flexibility for any manufacturer to easily design high-performance hearing aids based on the Ezairo platform. Whether you need an implementation-ready solution or an open-platform on which to develop your own innovative algorithms, ON Semiconductor's development tools can help you bring a hearing aid based on the industry-leading Ezairo platform to market as quickly as possible.

### Pick a Platform

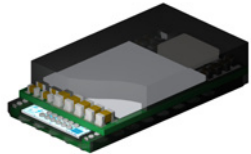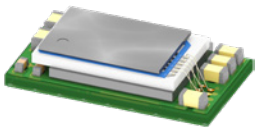

Ultra-miniature hybrid

### Add your Algorithms

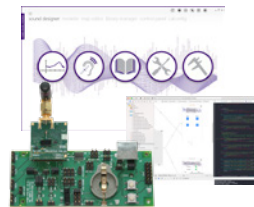

#### Ezairo Preconfigured Suite

Complete framework including firmware, configuration software, cross-platform SDK



#### Open-Programmable Evaluation & Development Kit (EDK)

Fully-integrated environment for manufacturers using their own or 3rd party algorithms

### High-Performance Hearing Aid




Development Hardware	Part Number
Ezairo 7160 SL Hybrid Development Board	E7160SL-001GEVB
Ezairo 7111 Hybrid Development Board	E7111-001GEVB
Ezairo 7110 Hybrid Development Board	0W693001GEVB
Ezairo 5920 Hybrid Development Board	0W604001GEVB
Ezairo 7100 Open-Programmable Development Kit	0W683001EVK

## Ezairo Preconfigured Suite

The Ezairo Preconfigured Suite (Pre Suite) is a complete toolkit which enables the development of high-performance hearing aids based on the Ezairo 7100 DSP. The Ezairo Pre Suite contains algorithms and firmware bundles, software for fine-tuning algorithms and features, and a cross-platform Software Development Kit (SDK) which can be used to easily develop fitting software and wireless applications.

### Building Hearing Aids Made Easy

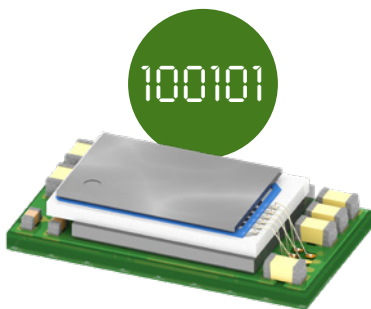

#### Firmware Bundles

- Designed and optimized for specific Ezairo-based hybrids
- Complete framework including advanced audio algorithms and features
- Built-in wireless support for audio streaming and Control over Bluetooth Low Energy (CoBLE) (optional)



#### Ezairo Sound Designer Software Application

- Complete end-to-end interface to customize, fine-tune, and calibrate Ezairo-based hearing aids
- Includes plug-ins to model transducers, construct product libraries, tune parameters, calibrate hearing aids



#### Ezairo Sound Designer Software SDK

- Easily develop fitting software and mobile applications
- Enables wireless device fitting using Bluetooth Low Energy technology
- Cross-platform (Windows®, Android™, IOS®)

#### Advanced Algorithms

- Multi-Channel Wide Dynamic Range Compression
- Adaptive Feedback Cancellation
- Static and Adaptive Directional Sound Processing
- Automatic Gain Control and Limiting
- Adaptive Noise Reduction
- Environmental Classification
- Tinnitus Management
- Tone and Voice Alert Indicators
- Stereo Audio Streaming
- Binaural Synchronization
- Remote Control and Fitting over BLE

## Open-Programmable Development Tools for Ezairo DSP Systems

The Ezairo 7100 Open-Programmable Evaluation and Development Kit (EDK) provides a complete environment for manufacturers wishing to develop high-performance hearing aids based on their own innovative audio algorithms.



**The Ezairo 7100 Open-Programmable EDK includes:**

**Ezairo 7100 Hardware Reference Board:** Hardware for the development, demonstration, testing and debugging of hearing aid algorithms. Includes motherboard and daughterboard.

**Promira™ Serial Platform:** Facilitates high-speed I2C communication between the Ezairo board and PC

**Integrated Development Environment:** Fully-integrated software environment that enables coding, compiling, debugging and validation of hearing aid algorithms

**Communication Tool Kit (CTK):** An easy-to-use universal software component library that facilitates communication with the DSP system for development, fitting system, manufacturing, and testing environments

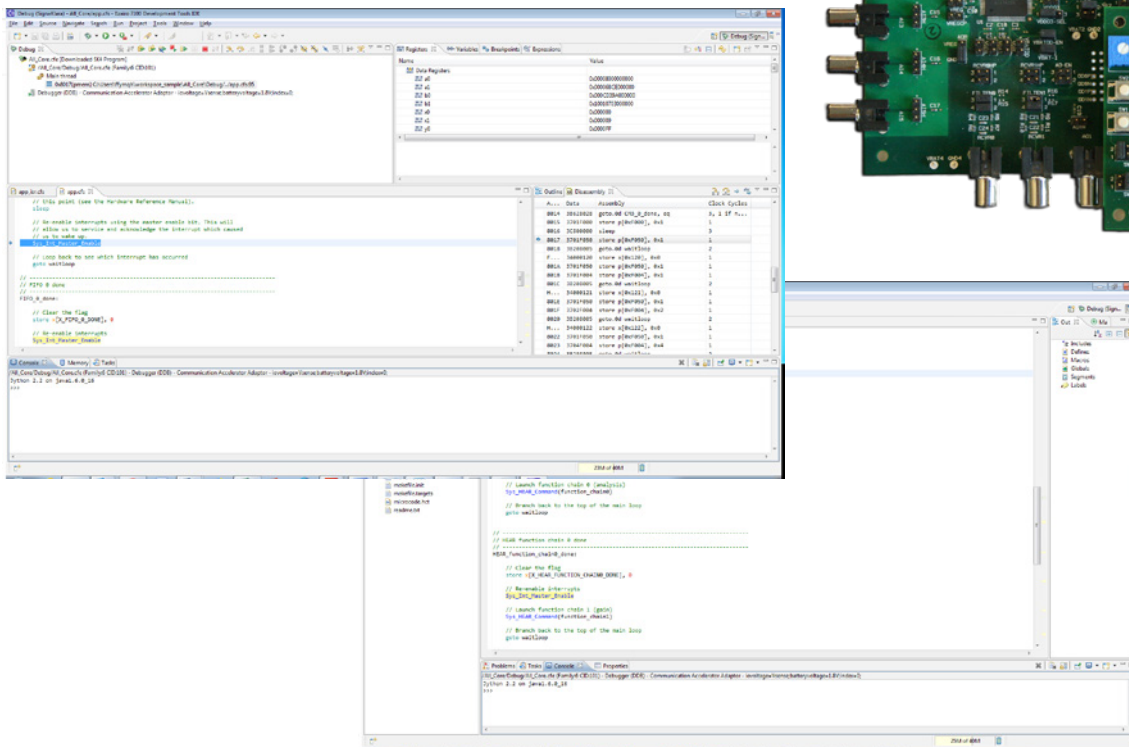
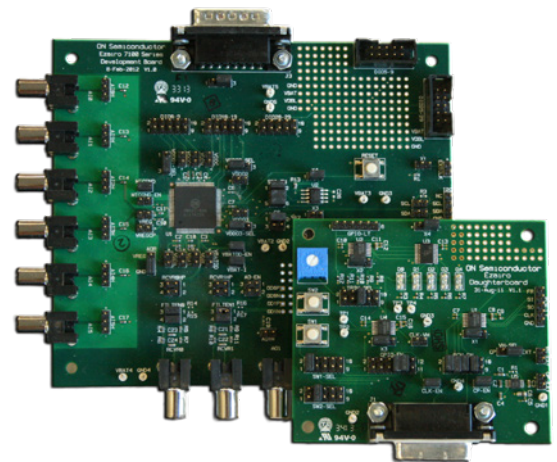


## Transient Surge Suppressors

Multi-channel transient surge suppressors (TSS) from ON Semiconductor guard life-critical implantable devices against potentially devastating electrical fluxes resulting from defibrillation or other emergency treatment.

Offering reliable defense against electrical surge currents as high as 12 A, these devices protect the patient and prevent unnecessary repairs or replacement of equipment.

- Available as standard devices, or customized for unique electrical characteristics
- Extremely fast turn-on
- Maximum surge currents of greater than 12 A
- Forward breakdown voltage requirements can be tuned to application needs
- Off-state leakage currents of 100 nA
- Customizable physical footprint
- Specific to the number of terminals/leads needed
- Physical layout can be linear terminals or matrix terminals
- Device can be wire bonded or bumped for reflow
- Devices are tested, bumped (if needed) and shipped in wafer form
- Lot Acceptance Testing (LAT) performed on wafer lots

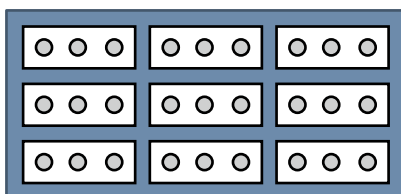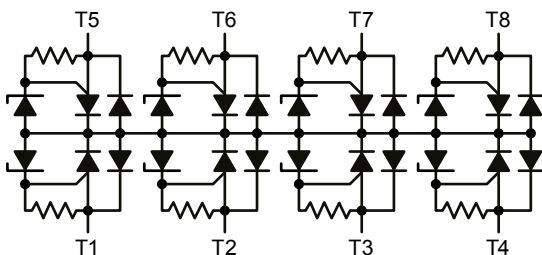

Example of a 9-Lead Wirebond Device with a 3 by 3 Matrix Layout

## Medical Discretes

ON Semiconductor offers a broad catalogue of standard discrete components for use in medical applications, including diodes, MOSFETs, IGBTs, and power regulators. These devices are suitable for use in life critical medical applications, including FDA Class III and implanted, life-critical devices.

For medical applications, customized support for value-added services is available to address the specific needs of medical customers:

- Lot Acceptance Testing (LAT)
- Visual inspection
- Bare die flows
- Custom multi-chip packaging
- Labeling and Certificate of Compliance
- Record retention
- Lot traceability
- Process longevity to support extended product life cycles
- Security/continuity of supply commitments
- Extensive portfolio of AEC qualified discretes

Device Examples
LDO Regulator
MOSFET, 1000 V
RF NPN Wideband Transistor
Schottky Barrier Diode, 40 V, SOT-23
Schottky Barrier Diode, Dual, Common Cathode, 30 V
Schottky Diode, 30 V, 200 mA, SOD-723
Schottky Diode, 30 V, 200 mA, SOD-923
Schottky Diode, 30 V, SOD-323
Schottky Diode, 30 V, SOD-523
Schottky Diode, Dual, Common Cathode, 30 V, SOT-323
Schottky Diode, Dual, Series, 30 V, SOT-323
Schottly Barrier Diode, Dual, 40 V, SOT-23
Switching Diode, 75 V
Switching Diode, Dual, Common Cathode
TVS, 24 V, SC-74
Zener Diode Voltage Regulator, 22 V
Zener Diode, 16 V
Zener Diode, 6.8 V, 200 mW, SOD-323
Zener Diode, 6.8 V, 200 mW, SOD-523
Zener Voltage Regulator, 11 V, 1.5 W, SMA

Other discrete devices may be qualified to life-critical standards upon request.

## Ultra-Low-Power SRAM Memory

SRAM memory from ON Semiconductor consumes the least power consumption, and is specifically designed and qualified for implantable medical applications. In patients with pacemakers, these SRAMs remember the last day's ECG signals, which facilitates much more accurate clinical diagnoses when needed and provides the best possible patient outcomes.



### Parallel SRAM for Implantable Medical Devices

#### Features and Benefits

- Optimized for ultra-low-power operation
  - ♦ Low voltage operation down to 1 V
  - ♦ Typical leakage of ~100 nA for 8 Mb SRAM
- 1 Mb through 8 Mb densities
- Mature technology; in production for over 10 years
- Quality driven design and manufacturing
  - ♦ RIGID ID Traceability requirements are in place for all medical products
  - ♦ Design For Test/Quality (DFQ) incorporated into products
  - ♦ Soft Error protection expertise

#### Applications

- Pacemakers
- Implantable cardioverter defibrillators (ICDs)
- Neurostimulators

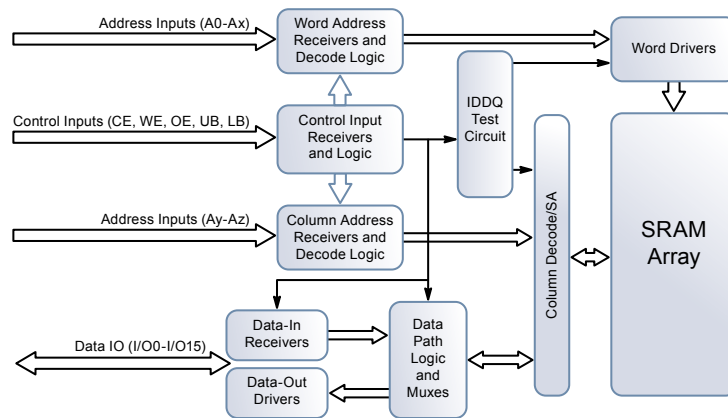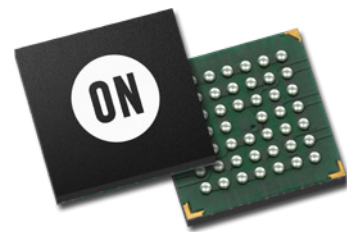

Typical Parallel Medical Memory Implementation

### Serial SRAM for Medical Applications

#### Features and Benefits

- Easy-to-use 4-pin SPI interface
  - ♦ Programmable DUAL and QUAD I/O functionality
- High voltage operation
  - ♦ 5 V added capability (in addition to existing 1.8 V and 3 V power supplies)
- 20 MHz serial operation, fast write cycles (no wear-out)
- Ultra-low-power (1  $\mu$ A typical standby current)

#### Applications

- Patient monitors
- Pulse oximeters
- Electrocardiographs
- Cardiac monitoring devices
- Blood glucose meters



## Low-Power Serial EEPROMs



ON Semiconductor offers a range of low-power serial EEPROM products ideally suited for storing system configuration and user data in medical devices.

### Features and Benefits

- Full range of densities from 1 kb to 2 Mb
- Flexible interface protocols including SPI and I2C
- Supply voltage range from 1.7 V to 5.5 V
- Optimized versions available for hearing aids where low absolute power consumption and low write current operation is essential
- Available in industry-standard and space-optimized packages (also available in die form)

### Applications

- Hearing aids
- Blood glucose meters
- Patient monitors
- Test strips
- Medical patches

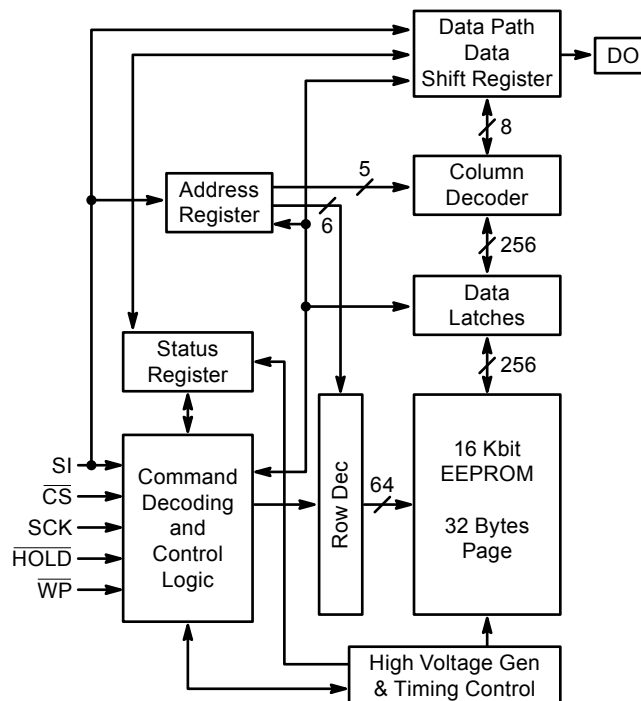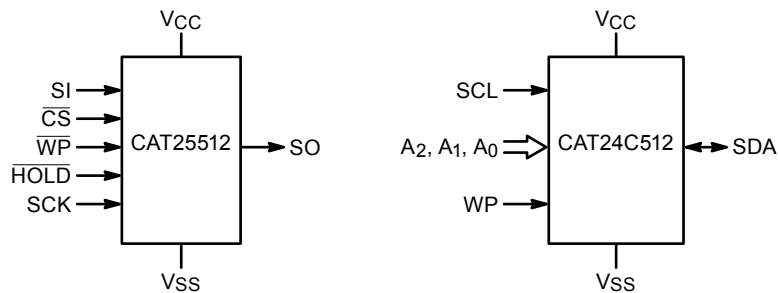

## Mainstream CMOS Image Sensors

Device	Resolution (MP)	Pixel Count (H x V)	Pixel Size (µm)	Optical Format	CFA <sup>1</sup>	Shutter Type <sup>2</sup>	Frame Rate <sup>3</sup>	Output Interface	Package Size (mm)	Package <sup>4</sup>
MT9V024	WVGA	752 x 480	6.0 FSI	1/3"	C, M	GS	60 fps	Parallel, LVDS	9 x 9	IBGA-52
MT9V034	WVGA	752 x 480	6.0 FSI	1/3"	C, M	GS	60 fps	Parallel, LVDS	11.43 x 11.43	CLCC-48
ARX3A0*	0.3	560 x 560	2.2 BSI	1/10.3"	M, NIR	ERS	360 fps	MIPI	3.35 x 3.45	ODCSP-35
ARX550	0.5	848 x 638	3.75 FSI	1/5"	C	ERS	66 fps	Parallel, HiSPi	9 x 9	IBGA-63
AR0140	1.0	1280 x 800	3.0 FSI	1/4"	C	ERS, GRR	720p60	Parallel, HiSPi	9 x 9	IBGA-63
AR0141	1.0	1280 x 800	3.0 FSI	1/4"	C, M, RGB-IR	ERS, GRR	720p60	Parallel, HiSPi	9 x 9	IBGA-63
AR0144	1.0	1280 x 800	3.0 FSI	1/4"	C, M	GS	60 fps	Parallel, MIPI	5.6 x 5.6	ODCSP-69
AR0130	1.2	1280 x 960	3.75 FSI	1/3"	C, M	ERS	1.2 MP / 45 fps, 720p60	Parallel	11.43 x 11.43, 10 x 10	PLCC-48, ILCC-48
AR0132	1.2	1280 x 960	3.75 FSI	1/3"	C, M	ERS	1.2 MP / 45 fps, 720p60	Parallel, HiSPi	9 x 9	IBGA-63
AR0135	1.2	1280 x 960	3.75 FSI	1/3"	C, M	GS	1.2 MP / 54 fps, 720p60	Parallel, HiSPi	9 x 9	IBGA-63
AR0136*	1.2	1280 x 960	3.75 BSI	1/3"	C	ERS	1.2 MP / 54 fps, 720p60	Parallel, HiSPi	9 x 9	IBGA-63
AR0138	1.2	1280 x 960	4.2 BSI	1/2.6"	C	ERS	69 fps	Parallel, MIPI	9 x 10	IBGA-109
AR0143	1.3	1344 x 968	3.0 BSI	1/4"	C	ERS	50 fps	Parallel, HiSPi, MIPI	9 x 9	IBGA-80
MT9M001	1.3	1280 x 1024	5.2 FSI	1/2"	M	ERS	30 fps	Parallel	14.22 x 14.22	CLCC-48
AR0220	1.7	1820 x 940	4.2 BSI	1/1.8"	C	ERS	60 fps	MIPI	9 x 12	IBGA-87
AR0261	2.1	1936 x 1096	1.4 BSI	1/6"	C	ERS	1080p60	MIPI	–	Die
AR0230	2.1	1928 x 1088	3.0 FSI	1/2.7"	C	ERS, GRR	1080p60	Parallel, HiSPi	10 x 10	IBGA-80
AR0237	2.1	1928 x 1088	3.0 FSI	1/2.7"	C, RGB-IR	ERS, GRR	1080p60	Parallel, HiSPi	10 x 10, 11.43 x 11.43	IBGA-80, PLCC-48
AR0221	2.1	1928 x 1088	4.2 BSI	1/1.7"	C	ERS	60 fps	HiSPi, MIPI	9 x 12	IBGA-87
AR0231	2.3	1928 x 1208	3.0 BSI	1/2.7"	C	ERS	60 fps	Parallel, HiSPi, MIPI	10 x 11	IBGA-121
AR0239	2.3	1936 x 1188	3.0 BSI	1/2.7"	C	ERS, GRR	1080p90	Parallel, HiSPi, MIPI	9 x 9	IBGA-80
AR0234	2.3	1920 x 1200	3.0 FSI	1/2.6"	C, M	GS	120 fps	Parallel, MIPI	5.595 x 9.995	IBGA-76
AR0233	2.6	2048 x 1280	3.0 BSI	1/2.5"	C	ERS	45 fps, 1080p60	Parallel, MIPI	10 x 10	IBGA-80
AR0323*	3.1	2880 x 1080	3.0 BSI	1/2"	C	ERS	60 fps	Parallel, MIPI	11 x 13	IBGA-107
AR0330	3.5	2304 x 1536	2.2 FSI	1/3"	C	ERS, GRR	1080p60	Parallel, HiSPi, MIPI	6.28 x 6.65, 11.43 x 11.43	ODCSP-61, PLCC-48
AR0430	4.0	2316 x 1746	2.0 BSI	1/3.1"	C	ERS	120 fps	MIPI	10.16 x 10.16	PLCC-48
AR0431	4.0	2316 x 1746	2.0 BSI	1/3.1"	C, NIR	ERS	120 fps	MIPI	10.16 x 10.16	PLCC-48
AR0543	5.0	2592 x 1944	1.4 FSI	1/4"	C	ERS	5 MP / 15 fps, 1080p30	Parallel, MIPI	5.07 x 5.26	ODCSP-54
AR0521	5.0	2592 x 1944	2.2 BSI	1/2.5"	C, M	ERS, GRR	60 fps	HiSPi, MIPI	12 x 12	PLCC-52, PLCC-48
AR0522	5.0	2592 x 1944	2.2 BSI	1/2.5"	C, M, NIR	ERS, GRR	60 fps	HiSPi, MIPI	12 x 12	PLCC-52
AR0842CP	8.0	3264 x 2448	1.1 BSI	1/4"	Clarity+	ERS	30 fps	MIPI	–	Die
AR0833	8.0	3264 x 2448	1.4 BSI	1/3.2"	C	ERS, GRR	30 fps	MIPI	10 x 10	CLCC-48
AR0835HS	8.0	3264 x 2448	1.4 BSI	1/3.2"	C	ERS, GRR	8 MP / 46 fps, 1080p60	HiSPi, MIPI	10 x 10	CLCC-48
AR0820	8.3	3848 x 2168	2.1 BSI	1/2"	C	ERS	56 fps	MIPI	8 x 11	IBGA-95
MT9J003	10	3856 x 2764	1.67 FSI	1/2.3"	C, M	ERS, GRR	10 MP / 15 fps, 1080p60	Parallel, HiSPi	10 x 10	ILCC-48
AR1011HS	10	3984 x 2712	3.4 FSI	1"	C	ERS	60 fps	HiSPi	23 x 27.4	CLCC-124
AR335 Mono	13	4208 x 3120	1.1 BSI	1/3.2"	M	ERS	13 MP / 30 fps, 1080p60	MIPI	–	Die
AR1335	13	4208 x 3120	1.1 BSI	1/3.2"	C	ERS	13 MP / 30 fps, 1080p60	MIPI	5.69 x 6.29	ODCSP-63
AR1335HS	13	4208 x 3120	1.1 BSI	1/3.2"	C	ERS	13 MP / 30 fps, 1080p90	MIPI	10 x 10	CLCC-48
AR1337	13	4208 x 3120	1.1 BSI Super PD	1/3.2"	C	ERS	13 MP / 30 fps, 1080p60	MIPI	–	Die
MT9F002	14	4608 x 3288	1.4 FSI	1/2.3"	C	ERS, GRR	14 MP / 13 fps, 1080p60	Parallel, HiSPi	10 x 10	ILCC-48
AR1630	16	4632 x 3492	1.0 BSI	1/3.1"	C	ERS	16 MP / 30 fps, 1080p120	MIPI	–	Die
AR1820HS	18	4912 x 3684	1.25 BSI	1/2.3"	C	ERS, GRR	18 MP / 24 fps, 1080p120	HiSPi, MIPI	10 x 10	IBGA-60

1. C = Color, M = Mono. 2. ERS = Electronic Rolling Shutter, GRR = Global Reset Release, GS = Global Shutter. 3. Higher frame rates can be achieved in subsampling modes. 4. Some devices are also offered without a package in bare die or wafer form. \* Pending 4Q19.



## CMOS Image Sensor SOC's

Device	Resolution (MP)	Pixel Count (H x V)	Pixel Size (µm)	Optical Format	CFA <sup>1</sup>	Shutter Type <sup>2</sup>	Frame Rate <sup>3</sup>	Output Interface	Package Size (mm)	Package <sup>4</sup>
MT9V115	VGA	648 x 488	1.75 FSI	1/13"	C	ERS	30 fps	Parallel, MIPI	2.7 x 2.7	ODCSP-25
MT9V124	VGA	648 x 488	1.75 FSI	1/13"	C	ERS	30 fps	LVDS	2.7 x 2.7	ODCSP-25
ASX350	VGA	728 x 560	3.75 FSI	1/5"	C	ERS	60 fps	Parallel, NTSC/PAL	7 x 7	IBGA-63
ASX340	VGA	728 x 560	5.6 FSI	1/4"	C	ERS	60 fps	Parallel, NTSC/PAL	7.5 x 7.5	IBGA-63
MT9V111	VGA	640 x 480	5.6 FSI	1/4"	C	ERS	30 fps	Parallel	7 x 7	IBGA-52
MT9V128	VGA	680 x 512	5.6 FSI	1/3"	C	ERS	60 fps	Parallel, NTSC/PAL	9 x 9	IBGA-63
AS0140	1.0	1280 x 800	3.0 FSI	1/4"	C	ERS	1 MP / 45 fps, 720p60	Parallel, NTSC/PAL	8.5 x 8.5	IBGA-130
AS0142	1.0	1280 x 800	3.0 FSI	1/4"	C	ERS	1 MP / 45 fps, 720p60	Parallel	8.5 x 8.5	IBGA-143
AS0147*	1.3	1344 x 968	3.0 BSI	1/4"	C	ERS	1.3 MP / 45 fps, 720p60	Parallel	9 x 9	IBGA-143
MT9M114	1.3	1296 x 976	1.9 FSI	1/6"	C	ERS	30 fps	Parallel, MIPI	3.85 x 4.65	ODCSP-55
AS0260	2.1	1920 x 1080	1.4 FSI	1/6"	C	ERS	1080p30	Parallel, MIPI	4.16 x 6.01	ODCSP-54


1. C = Color, M = Mono. 2. ERS = Electronic Rolling Shutter, GRR = Global Reset Release, GS = Global Shutter. 3. Higher frame rates can be achieved in subsampling modes. 4. Some devices are also offered without a package in bare die or wafer form. \* Pending 4Q19.

## Co-Processors for Mainstream CMOS Image Sensors

Device	Resolution (MP)	Video	Output Format	Package
AP0100	1	1.2 MP/45 fps; 720p/60 fps	NTSC/PAL; YUV	VFBGA-100
AP0101	1	1.2 MP/45 fps; 720p/60 fps	SMPTE 296M; YUV	VFBGA-81
AP0102	2	1.2 MP/45 fps; 720p/60 fps; 1080p/30 fps	RGB; YUV	VFBGA-100
AP0200	2	1.2 MP/45 fps; 720p/60 fps; 1080p/30 fps	H.264; MJPEG	VFBGA-100
AP0201	2	1.2 MP/45 fps; 720p/60 fps; 1080p/30 fps	H.264; MJPEG	VFBGA-100
AP0202	2	1.2 MP/45 fps; 720p/60 fps; 1080p/30 fps	RGB565; RGB888; YUV	VFBGA-100
AP1302	13	13 MP/30 fps; 1080p/120 fps	JPEG; RAW; RGB565; RGB888; YUV	VFBGA-120

### Available SOC and Co-Processor Functionality\*

- Spatial Transform Engine (STE) with dual transform support/software add-on
- Optimized for use with HDR (High Dynamic Range) sensors/HDR with ALTM
- Full auto-functions support (AWB and AE) and ALTM (Adaptive Local Tone Mapping) to enhance HDR images
- Pre-rendered graphical overlays
- Multi-camera synchronization support
- LED flicker detection and avoidance
- Dewarp, up to 165 degrees
- Overlays
- GPIOs, up to 5
- Next generation color pipe with improved noise filtering & reduced chromatic aliasing
  - Demosaic
  - Gamma correction
  - Auto white balance
  - Defect correction
  - Noise reduction
  - Auto exposure

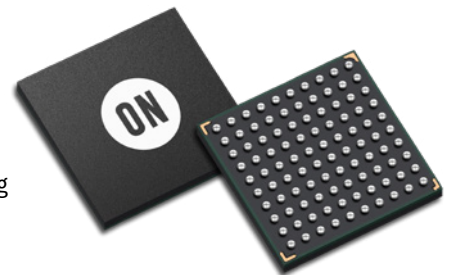


\* See product information for device-specific functionality.

## X-Class CMOS Image Sensor Platform

The X-Class image sensor platform enables a new dimension in camera design by supporting multiple CMOS pixel architectures within the same image sensor frame. This enables a single camera design to not only support multiple product resolutions but also different pixel functionality through a common high bandwidth, low power interface, allowing camera manufacturers to leverage existing parts inventory and accelerate time to market for new camera designs.

The initial devices in this platform are based on the advanced 3.2  $\mu\text{m}$  XGS Global Shutter CMOS pixel that features superior imaging performance, high image uniformity, and low noise. Available speed grades match imaging performance to application, with a compact package that enables 29 x 29 mm<sup>2</sup> camera designs.

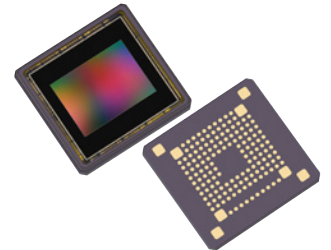

Device	Resolution (MPix)	Pixel Count (H x V)	Pixel ( $\mu\text{m}$ )	Diagonal (mm)	Lens	CFA <sup>1</sup>	Shutter Type	FPS Max	Output Interface	Evaluation Kit
XGS 8000	8.8	4096 x 2160	3.2	14.8	1 / 1.1"	C/M	GS	130	HiSPi	✓
XGS 12000	12.6	4096 x 3072	3.2	16.4	1"	C/M	GS	90	HiSPi	✓


1. CFA Options - Bayer Color (C), Monochrome (M).

## PYTHON Global Shutter CMOS Image Sensors

With resolutions from VGA to 26 megapixels, the PYTHON family of image sensors addresses the needs of medical imaging applications, ranging from microscopy to cameras used for surgical theater monitoring and automation. Combining flexibility in configuration and resolution with high speed and high sensitivity, these devices capture fast moving scenes without distortion by combining low read noise and high sensitivity with frame rates up to 815 fps.

### Features

- CDS pipelined and triggered global shutter technology with low noise performance
- True HW scalable family concept
- High configurability and fast adaptability
- Quadratic speed increase with ROI windowing
- Multiple regions of interest
- High dynamic range
- Color, Monochrome, and Enhanced NIR configurations
- Standard and protective tape configurations
- Low power, cost efficient configurations
- LVDS output interface

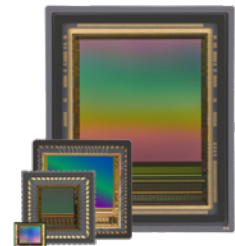

Device	Resolution (MPix)	Pixel Count (H x V)	Pixel ( $\mu\text{m}$ )	Diagonal (mm)	Lens	CFA <sup>1</sup>	FPS Max	Evaluation Kit
PYTHON 300	0.3	640 x 480	4.8	3.8	1/4"	C/M/NIR	815	✓
PYTHON 480	0.5	800 x 600	4.8	4.8	1/3.6"	C/M	120	✓
PYTHON 500	0.5	800 x 600	4.8	4.8	1/3.6"	C/M/NIR	545	✓
PYTHON 1300	1.3	1280 x 1024	4.8	7.9	1/2"	C/M/NIR	210	✓
PYTHON 2000	2.3	1920 x 1200	4.8	10.9	2/3"	C/M/NIR	225	✓
PYTHON 5000	5.3	2592 x 2048	4.8	15.9	1"	C/M/NIR	100	✓
PYTHON 12K	12.5	4096 x 3072	4.5	23.0	4/3	C/M/NIR	160	✓
PYTHON 16K	16.8	4096 x 4096	4.5	26.1	APS-H	C/M/NIR	120	✓
PYTHON 25K	26.2	5120 x 5120	4.5	32.6	APS-H	C/M/NIR	80	✓


1. CFA Options - Bayer Color (C), Monochrome (M), Enhanced NIR (NIR).

## Versatile CMOS Image Sensors

KAC image sensors provide both global shutter and low noise rolling shutter modes, combined with programmable bit depth (8 to 14 bit) with a flexible readout architecture that supports interspersed video streams. These features enable the use of multiple regions of interest that can simultaneously monitor both wide areas and local regions, making these devices ideal for medical imaging applications such as analytical microscopy.

### Features

- ERS global shutter, low noise rolling shutter
- Programmable bit depth
- Interspersed video streams
- Multiple regions of interest
- High frame rates
- High NIR sensitivity
- LVDS output interface

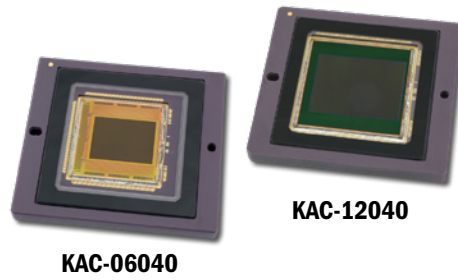

Device	Resolution (MPix)	Pixel Count (H x V)	Pixel (μm)	Diagonal (mm)	Lens	CFA <sup>1</sup>	FPS Max	Evaluation Kit
KAC-06040	6	2832 x 2128	4.7	16.7	1"	C/M	160	✓
KAC-12040	12	4000 x 3000	4.7	23.5	4/3"	C/M	70	✓


1. CFA Options - Bayer Color (C), Monochrome (M).

## Full Frame CCD Image Sensors

From the intricacies of microscopy to the far reaches of astrophotography, Full Frame CCD image sensors deliver high performance results. With high quantum efficiency across the entire visible spectrum, these sensors are ideal for demanding imaging applications that require high sensitivity and high dynamic range, such as medical and dental X-ray.

### Features


- High resolution
- Support for large sensor formats
- Simple, two-phase clocking
- Very low dark current for long exposures
- Vertical and horizontal binning
- Analog output interface

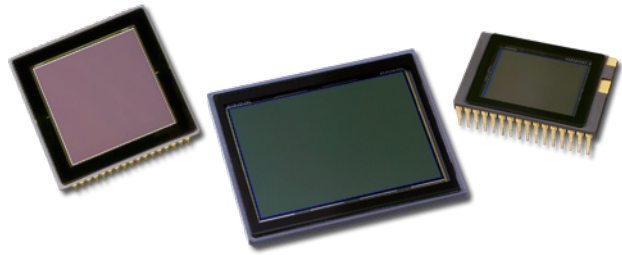

Full Frame CCD Image Sensors

Device	Resolution (MPix)	Pixel Count	Pixel (µm)	Diagonal (mm)	Lens	CFA <sup>1</sup>	FPS Max	Evaluation Kit
KAF-0261	VGA	512 x 512	20.0	14.5	1"	M	15.0	✓
KAF-0402	WVGA	768 x 512	9.0	8.3	1/2"	M	20.0	✓
KAF-1001	1.0	1024 x 1024	24.0	34.8	APS-H	M	3.0	✓
KAF-1603	1.6	1536 x 1024	9.0	16.6	1"	M	2.2	✓
KAF-3200	3.3	2184 x 1510	6.8	18.0	4/3"	M	2.5	✓
KAF-4320	4.3	2084 x 2084	24.0	70.7	645	M	2.0	✓
KAF-6303	6.3	3088 x 2056	9.0	33.4	APS-H	M	0.6	✓
KAF-8300	8.3	3326 x 2504	5.4	22.5	4/3"	M	2.9	✓
KAF-09001	9.1	3024 x 3024	12.0	51.3	645 1.3x	M	5.0	
KAF-09000	9.3	3056 x 3056	12.0	51.9	645 1.3x	M	0.4	
KAF-16200	16.2	4500 x 3600	6.0	34.6	APS-H	C/M	1.5	
KAF-16801	16.8	4096 x 4096	9.0	52.1	645 1.3x	M	0.4	✓
KAF-16803	16.8	4096 x 4096	9.0	52.1	645 1.3x	M	0.2	
KAF-40000	40.0	7304 x 5478	6.0	54.8	645 1.3x	C	1.3	
KAF-50100	50.1	8176 x 6132	6.0	61.3	645 1.1x	M	1.0	

1. CFA Options - Bayer Color (C), Monochrome (M).

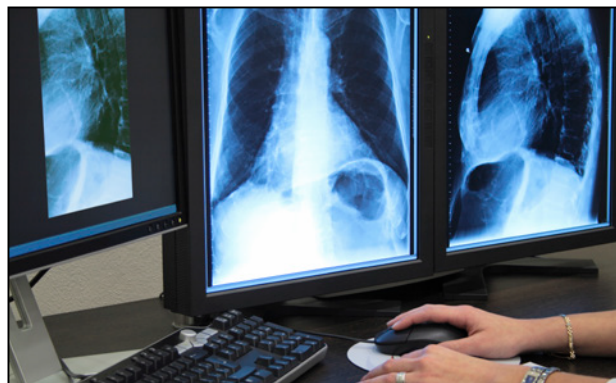

## Interline Transfer CCD Image Sensors

With an integrated electronic global shutter, Interline Transfer CCD image sensors provide real time imaging in applications where a mechanical shutter or strobe illumination is either not required or desired. With progressive scan readouts, they are particularly well suited for microscopy, fluoroscopy, and other medical imaging applications that demand the highest imaging performance. Most 5.5 mm and 7.4 mm devices share common pin-out and electrical connections, allowing a single camera design to support a full family of products.

### Features

- Progressive scan with electronic global shutter and anti-blooming support
- High resolution
- High sensitivity
- Low image lag and smear
- Analog output interface



5.5  $\mu\text{m}$  Interline Transfer CCD Image Sensors

Device	Resolution (MPix)	Pixel Count	Pixel ( $\mu\text{m}$ )	Diagonal (mm)	Lens	CFA <sup>1</sup>	FPS Max	Enhanced NIR	Evaluation Kit
KAI-0330	VGA	648 x 484	9	7.3	1/2"	C/M	120		✓
KAI-0340	VGA	640 x 480	7.4	5.9	1/3"	C/M	210		✓
KAI-0373	WVGA	768 x 484	11.6 x 13.6	11.1	2/3"	M	30		
KAI-01150 <sup>2</sup>	0.9	1280 x 720	5.5	8.1	1/2"	C/M/S	138		✓
KAI-01050 <sup>2</sup>	1	1024 x 1024	5.5	8	1/2"	C/M	120		✓
KAI-1003	1	1024 x 1024	12.8	18.5	4/3"	M	30		✓
KAI-1010	1	1008 x 1018	9	12.9	1"	M	30		
KAI-1020	1	1000 x 1000	7.4	10.5	2/3"	C/M	50		✓
KAI-02050 <sup>2</sup>	1.9	1600 x 1200	5.5	11.1	2/3"	C/M	68		✓
KAI-2020	1.9	1600 x 1200	7.4	14.8	1"	C/M	30		✓
KAI-02150 <sup>2</sup>	2.1	1920 x 1080	5.5	12.1	2/3"	C/M/S	64		✓
KAI-02170 <sup>2</sup>	2.1	1920 x 1080	7.4	16.3	1"	C/M/S	60		✓
KAI-04050 <sup>2</sup>	4.1	2336 x 1752	5.5	16.1	1"	C/M/S	32		✓
KAI-04070 <sup>2</sup>	4.2	2048 x 2048	7.4	21.4	4/3"	C/M/S	28		✓
KAI-08051 <sup>2</sup>	8.1	3296 x 2472	5.5	22.7	4/3"	C/M/S	16		✓
KAI-08052 <sup>2</sup>	8.1	3296 x 2472	5.5	22.7	4/3"	C/M/S	16	✓	✓
KAI-08670	8.6	3600 x 2400	7.4	32	APS-H	C/M/S	12		✓
KAI-11002	10.7	4008 x 2672	9	43.4	35 mm	C/M	5		✓
KAI-16070 <sup>2</sup>	15.7	4864 x 3232	7.4	43.2	35 mm	C/M/S	8		✓
KAI-16000	15.8	4872 x 3248	7.4	43.3	35 mm	C/M	3		
KAI-16050 <sup>2</sup>	16	4896 x 3264	5.5	32.4	APS-H	C/M/S	8		✓
KAI-29050 <sup>2</sup>	28.8	6576 x 4384	5.5	43.5	35 mm	C/M/S	4		✓
KAI-29052 <sup>2</sup>	28.8	6576 x 4384	5.5	43.5	35 mm	C/M/S	4	✓	✓
KAI-43140	43.1	8040 x 5360	4.5	43.5	35 mm	C/M/S	4		✓
KAI-47051	46.8	8856 x 5280	5.5	56.7	645 1.1x	C/M/S	7		


1. CFA Options - Bayer Color (C), Monochrome (M), and Sparse CFA (S). 2. Pin and Electrically Compatible.

## Interline Transfer EMCCD Image Sensors


Combining the high sensitivity of an electron-multiplied output register with the pixel uniformity and resolution scalability available from Interline Transfer CCDs, KAE devices enable the capture of scenes with widely varying lighting conditions – from sunlight to starlight – in a single image and from a single camera. Multiple configurations are available in the family, including options for different resolutions and pixel sizes, light sensitivity, integrated cooling, and sealed or taped cover glass. This flexibility and performance make Interline Transfer EMCCD image sensors ideal for light starved medical imaging applications, such as fluorescence imaging (microscopy, angiography, and cardiology), ophthalmology, dermatology, and DNA sequencing.

### Features

- Up to 92 dB linear dynamic range with sub-electron noise
- Intra-scene switchable gain
- Global shutter image capture
- Excellent image uniformity and MTF
- Analog output interface

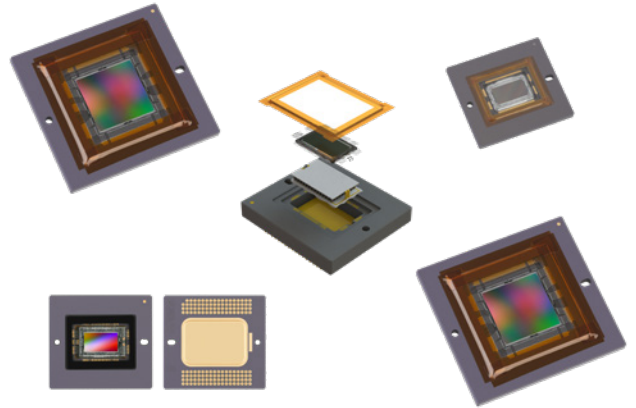

Device	Resolution (MPix)	Pixel Count	Pixel (µm)	Diagonal (mm)	Lens	CFA	FPS Max	Enhanced NIR	Evaluation Kit
KAE-02150	2.1	1920 x 1080	5.5	12.1	2/3"	C/M	30		✓
KAE-02152	2.1	1920 x 1080	5.5	12.1	2/3"	C/M	30	✓	✓
KAE-04471	4.4	2096 x 2096	7.4	21.9	4/3"	C/M	15		✓
KAE-08151	8.2	2856 x 2856	5.5	22.2	4/3"	C/M	8		✓
KAE-08152	8.2	2856 x 2856	5.5	22.2	4/3"	C/M	8	✓	✓




## Image Sensor Evaluation Support

ON Semiconductor provides supporting hardware and software to qualified engineering teams to accelerate product development. These kits contain everything necessary to build a working prototype with test functionality.




## Silicon Photomultipliers (SiPM) for high performance, time-of-flight positron emission tomography

Time-of-Flight Positron Emission Tomography (ToF-PET) systems seek to optimize the coincidence resolving time (CRT) between a pair of radiation detection elements in order to provide the best image quality. ON Semiconductor has a range of high performance Silicon Photomultipliers (SiPM) that can be used as the photosensor element in PET detectors to provide excellent CRT performance.

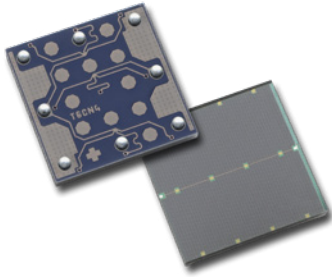


### J-Series SiPM Features

- 50% PDE @ 420 nm
- High fill factor package, giving a packing fraction of >90%
- Optimized for fast timing applications and featuring unique fast output
- Low dark count rate of <100 kHz/mm<sup>2</sup>
- Available as single sensors (3 mm, 4 mm, or 6 mm) or as pre-fabricated arrays

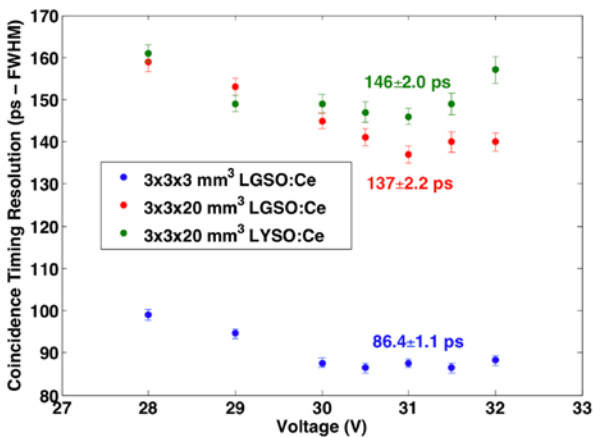


CRT values as a function of bias voltage for different crystals, obtained with the fast outputs from two MicroFJ-30035-TSV sensors in coincidence, results courtesy of J. Cates and C. Levin of Stanford University.

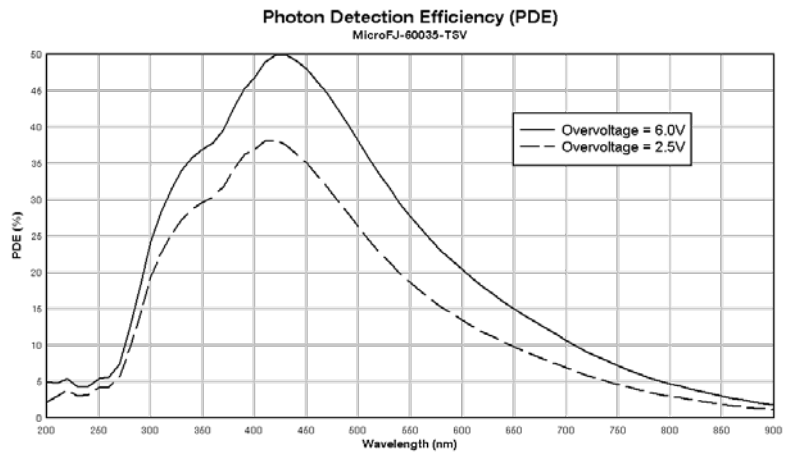

PDE (photon detection efficiency) of J-Series SiPM sensors, showing 50% at 420 nm, which is the peak emission of the commonly used LYSO scintillator.

Device	Sensor Size (mm)	Cell Size (µm)	Package
MicroFJ-30035-TSV	3	35	TSV Chip Scale
MicroFJ-40035-TSV	4	35	TSV Chip Scale
MicroFJ-60035-TSV	6	35	TSV Chip Scale

These sensors are also available in a selection of arrays.

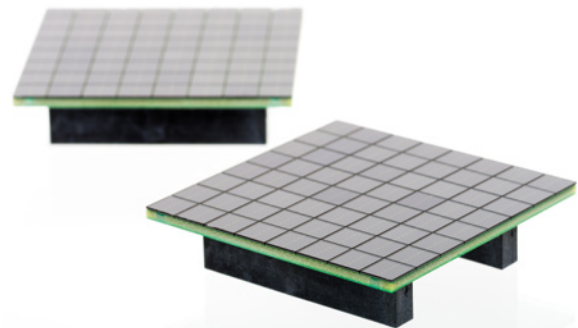

ArrayJ-60035-64P-PCB array of SiPM

# Offices

## AUSTRIA

Vienna  
Phone: +43 186 642 300  
Fax: +43 186 642 350  
wien@avnet.eu

## BELGIUM

Merelbeke  
Phone: +32 9 210 24 70  
Fax: +32 9 210 24 87  
gent@avnet.eu

## BULGARIA

Sofia  
sofia@avnet.eu

## CZECH REPUBLIC (SLOVAKIA)

Prague  
Phone: +420 234 091 031  
Fax: +420 234 091 030  
praha@avnet.eu

## DENMARK

Herlev  
Phone: +45 432 280 10  
Fax: +45 432 280 11  
herlev@avnet.eu

## ESTONIA

(LATVIA, LITHUANIA)  
Pärnu  
Phone: +372 56 637737  
paernu@avnet.eu

## FINLAND

Espoo  
Phone: +358 207 499 200  
Fax: +358 207 499 280  
helsinki@avnet.eu

## FRANCE (TUNISIA)

Cesson Sévigné  
Phone: +33 299 838 485  
Fax: +33 299 838 083  
rennes@avnet.eu

## Illkirch

Phone: +33 390 402 020  
Fax: +33 164 479 099  
strasbourg@avnet.eu

## Massy Cedex

Phone: +33 164 472 929  
Fax: +33 164 470 084  
paris@avnet.eu

## Toulouse

Phone: +33 05 62 47 47  
toulouse@avnet.eu

## Vénissieux Cedex

Phone: +33 478 771 360  
Fax: +33 478 771 399  
lyon@avnet.eu

## GERMANY

Berlin  
Phone: +49 30 214 882 0  
Fax: +49 30 214 882 33  
berlin@avnet.eu

## Freiburg

Phone: +49 761 881 941 0  
Fax: +49 761 881 944 0  
freiburg@avnet.eu

## Hamburg

Phone: +49 40 608 235 922  
Fax: +49 40 608 235 920  
hamburg@avnet.eu

## Holzwickede

Phone: +49 2301 919 0  
Fax: +49 2301 919 222  
holzwickede@avnet.eu

## Lehrte

Phone: +49 5132 5099 0  
hannover@avnet.eu

## Leinfelden-Echterdingen

Phone: +49 711 782 600 1  
Fax: +49 711 782 602 00  
stuttgart@avnet.eu

## Leipzig

Phone: +49 34204 7056 00  
Fax: +49 34204 7056 11  
leipzig@avnet.eu

## Nürnberg

Phone: +49 911 24425 80  
Fax: +49 911 24425 85  
nuernberg@avnet.eu

## Poing

Phone: +49 8121 777 02  
Fax: +49 8121 777 531  
muenchen@avnet.eu

## Wiesbaden

Phone: +49 612 258 710  
Fax: +49 612 258 713 33  
wiesbaden@avnet.eu

## HUNGARY

Budapest  
Phone: +36 1 43 67215  
Fax: +36 1 43 67213  
budapest@avnet.eu

## ITALY

Cusano Milanino  
Phone: +39 02 660 921  
Fax: +39 02 660 923 33  
milano@avnet.eu

## Firenze

Phone: +39 055 428 2301  
Fax: +39 055 431 035  
firenze@avnet.eu

## Modena

Phone: +39 059 348 933  
Fax: +39 059 344 993  
modena@avnet.eu

## Padova

Phone: +39 049 807 368 9  
Fax: +39 049 773 464  
padova@avnet.eu

## Rivoli

Phone: +39 011 204 437  
Fax: +39 011 242 869 9  
torino@avnet.eu

## Roma Tecnocittà

Phone: +39 06 412 319 10  
Fax: +39 06 413 116 1  
roma@avnet.eu

## NETHERLANDS

Breda  
Phone: +31 765 722 700  
Fax: +31 765 722 707  
breda@avnet.eu

## NORWAY

Asker  
Phone: +47 667 736 00  
Fax: +47 667 736 77  
asker@avnet.eu

## POLAND

Gdansk  
Phone: +48 58 307 81 51  
Fax: +48 58 307 81 50  
gdansk@avnet.eu

## Katowice

Phone: +48 32 259 50 10  
Fax: +48 32 259 50 11  
katowice@avnet.eu

## Warszawa

Phone: +48 222 565 760  
Fax: +48 222 565 766  
warszawa@avnet.eu

## PORTUGAL

Vila Nova de Gaia  
Phone: +35 1 223 779 502  
Fax: +35 1 223 779 503  
porto@avnet.eu

## ROMANIA (BULGARIA)

Bucharest  
Phone: +40 21 528 16 32  
Fax: +40 21 529 68 30  
bucuresti@avnet.eu

## RUSSIA (BELARUS, UKRAINE)

Moscow  
Phone: +7 495 737 36 70  
Fax: +7 495 737 36 71  
moscow@avnet.eu

## Saint Petersburg

Phone: +7 812 245 1571  
stpetersburg@avnet.eu

## SLOVAKIA

Bratislava  
Phone: +421 232 242 211  
Fax: +421 232 242 210  
bratislava@avnet.eu

## SLOVENIA

(BOSNIA AND HERZEGOVINA,  
CROATIA, MACEDONIA, MONTENEGRO,  
SERBIA)

Ljubljana  
Phone: +386 156 097 50  
Fax: +386 156 098 78  
ljublana@avnet.eu

## SPAIN

Barcelona  
Phone: +34 933 278 530  
Fax: +34 934 250 544  
barcelona@avnet.eu

## Galdàcano. Vizcaya

Phone: +34 944 572 777  
Fax: +34 944 568 855  
bilbao@avnet.eu

## Las Matas

Phone: +34 913 727 100  
Fax: +34 916 369 788  
madrid@avnet.eu

## SWEDEN

Sundbyberg  
Phone: +46 8 587 461 00  
Fax: +46 8 587 461 01  
stockholm@avnet.eu

## SWITZERLAND

Rothrist  
Phone: +41 62 919 555 5  
Fax: +41 62 919 550 0  
rothrist@avnet.eu

## TURKEY (GREECE, EGYPT)

Kadikoy Istanbul  
Phone: +90 216 528 834 0  
Fax: +90 216 528 834 4  
istanbul@avnet.eu

## UNITED KINGDOM (IRELAND)

Berkshire  
Phone: +44 1628 512 900  
Fax: +44 1628 512 999  
maidenhead@avnet.eu

## Bolton

Phone: +44 1204 547 170  
Fax: +44 1204 547 171  
bolton@avnet.eu

## Bucks. Aylesbury

Phone: +44 1296 678 920  
Fax: +44 1296 678 939  
aylesbury@avnet.eu

## Stevenage, Herts, Meadway

Phone: +44 1438 788 310  
Fax: +44 1438 788 250  
stevenage@avnet.eu

## ISRAEL

Tel-Mond  
Phone: +972 (0)9 7780280  
Fax: +972 (0)3 760 1115  
avnet.israel@avnet.com

## SOUTH AFRICA

Cape Town  
Phone: +27 (0)21 689 4141  
Fax: +27 (0)21 686 4709  
sales@avnet.co.za

## Durban

Phone: +27 (0)31 266 8104  
Fax: +27 (0)31 266 1891  
sales@avnet.co.za

## Johannesburg

Phone: +27 (0)11 319 8600  
Fax: +27 (0)11 319 8650  
sales@avnet.co.za



**Mixed Sources**  
Product group from well-managed  
forests and other controlled sources  
www.fsc.org Cert no. IC-COC-10005  
© 1996 Forest Stewardship Council