


Functional Devices, Inc.310 South Union Street

www.FunctionalDevices.com

Russiaville, IN 46979

Office 765.883.5538 Sales 800.888.5538 Fax 765.883.7505 Email sales@FunctionalDevices.com

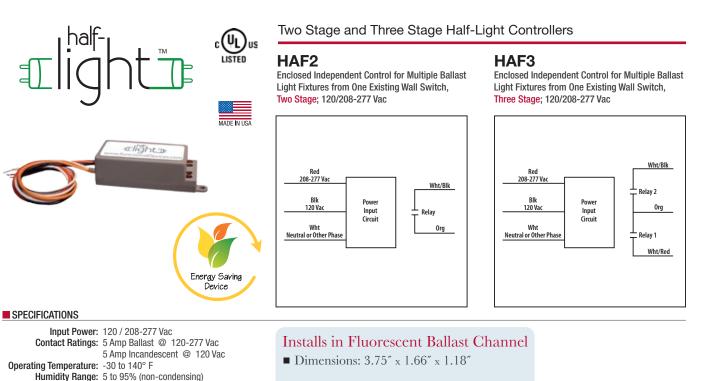

Download Half-Light™ Potential Energy Savings Report

 \oslash

P

0

www.FunctionalDevices.com

Notes

 \oslash

P

0

HAF2 Two Stage


Dimensions: 3.75" x 1.66" x 1.18"

Wire Length: 6.00" Approvals: UL Listed, C-UL

Weight: 0.20 lbs. (HAF2); 0.24 lbs. (HAF3)

Switch ON activates Ballast 1 Only (50% light) Switch OFF, then ON activates Both Ballasts (Full light)

Further switching cycles through these stages. Switch OFF for more than 5 seconds to restart the sequence.

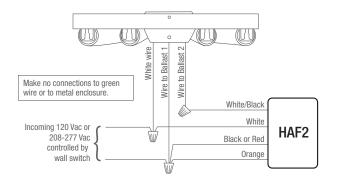

HAF3 Three Stage

Switch ON

activates Ballast 1 Only (33% light*) Switch OFF, then ON activates Ballast 2 Only (67% light*) Switch OFF, then ON

activates Both Ballasts (Full light*)

Further switching cycles through these stages. Switch OFF for more than 5 seconds to restart the sequence.

* For 6 Bulb Fixture, when Ballast 1 controls 2 bulbs and Ballast 2 controls 4 bulbs.

