


TemPower

INSTRUCTION MANUAL FOR AIR CIRCUIT BREAKERS (With Draw-out Cradle and Type AGR-11B,21B,22B,31B Overcurrent Protective Device)

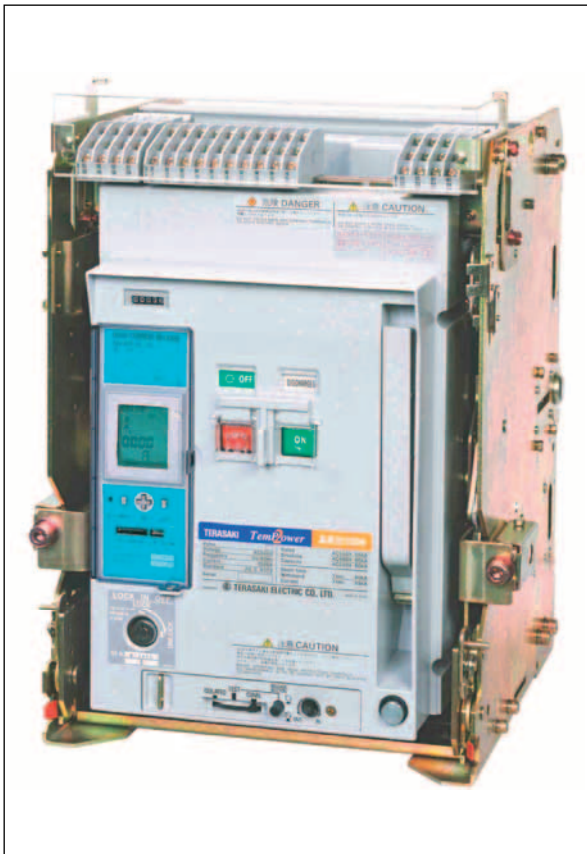

Types: AR208S
AR212S
AR216S
AR220S
AR325S
AR332S
AR440S
AR440SB
AR212H
AR216H
AR220H
AR316H
AR320H
AR325H
AR332H
AR420H
AR440H

Notice

- Be sure to read this manual before installing, operating, servicing, or inspecting the ACB.
- Please retain this manual for future reference.
- Electrical work must be done by competent persons.
- ACB maintenance, inspection, parts replacement, OCR field tests and setting changes must be performed by competent persons.

TERASAKI ELECTRIC CO., LTD.

TABLE OF CONTENTS

| | | | |
|--|----|--|----|
| 1. SAFETY NOTICES | 4 | 5-3-2-2. Available screens | 55 |
| 1. SAFETY NOTICES | 5 | 5-3-2-3. Monitor screen | 57 |
| 2. RECEIVING AND HANDLING | 7 | 5-3-2-3-1. Monitor screen (AGR-21B,22B) | 57 |
| 2-1. Transportation Precautions | 7 | 5-3-2-3-2. Monitor 1 screen (AGR-31B) | 58 |
| 2-1-1. Transporting the ACB | 7 | 5-3-2-3-3. Monitor 2 screen (AGR-31B) | 59 |
| 2-1-2. Transporting the breaker body | 8 | 5-3-2-4. Setup screen | 61 |
| 2-1-3. Transporting the draw-out cradle | 8 | 5-3-2-4-1. Setup screen(AGR-21B,22B) | 61 |
| 2-2. Storage Precautions | 8 | 5-3-2-4-2. Setup screen(AGR-31B) | 63 |
| 2-3. Installation Precautions | 9 | 5-3-2-5. Reset screen | 66 |
| 3. GENERAL | 18 | 5-3-2-5-1. Reset screen (AGR-21B,22B) | 66 |
| 3-1. Types and Descriptions | 18 | 5-3-2-5-2. Reset screen(AGR-31B) | 67 |
| 3-2. Parts and Functions | 21 | 5-3-2-6. Setting 1 screen | 68 |
| 3-3. Circuits and Ratings | 24 | 5-3-2-7. Setting 2 screen | 70 |
| 4. OPERATION | 31 | 5-3-2-8. Maintenance screen | 73 |
| 4-1. Charging and Opening operation | 31 | 5-4. OCR Function Check | 74 |
| 4-1-1. Charging operation | 31 | 5-5. Operation Indication and Indication Resetting | |
| 4-1-2. Closing operation | 32 | Procedure | 76 |
| 4-1-3. Opening operation | 32 | 5-5-1. Operation Indication (AGR-11B type) | 76 |
| 4-1-4. Motion of trip indication and spring charge | | 5-5-2. Operation Indication and Indication Resetting | |
| indication switches | 32 | Procedure (AGR-21B,22B,31B type) | 77 |
| 4-1-5. Motion of operation mechanisms | 33 | 6. MAINTENANCE, INSPECTION AND | |
| 4-2. Draw-out and Insertion Operation | 35 | PARTS REPLACEMENT | 79 |
| 4-2-1. General | 35 | 6-1. Maintenance and inspection items and criteria | 80 |
| 4-2-2. Draw-out operation | 36 | 6-1-1. Initial inspection | 80 |
| 4-2-3. Putting the breaker body back into | | 6-1-2. Patrol inspection | 80 |
| the draw-out cradle | 37 | 6-1-3. Normal inspection procedure | 81 |
| 4-2-4. Contact status of auxiliary and position switches | 39 | 6-1-4. Detailed inspection procedure | 82 |
| 4-3. ON-OFF Button Cover Locking Procedure | 39 | 6-2. Inspection Procedures | 84 |
| 4-4. Lock in OFF Procedure | 40 | 7. TROUBLESHOOTING FLOWCHARTS | 85 |
| 4-5. Position Lock Lever Locking Procedure | 40 | 8.DOOR INTERLOCK | 88 |
| 4-6. Breaker Fixing Bolt Securing Procedure | 41 | 9. MECHANICAL INTERLOCK DEVICE. | |
| 4-7. OCR Cover Locking Procedure | 41 | (HORIZONTAL TYPE) | 90 |
| 5. OVERCURRENT RELEASE (OCR) | 42 | | |
| 5-1. Specifications | 42 | | |
| 5-2. Characteristics | 44 | | |
| 5-2-1. L characteristic for general feeder | 44 | | |
| 5-2-2. R characteristic for general feeder | 47 | | |
| 5-2-3. S characteristic for generator protection | 51 | | |
| 5-3. OCR Setting Procedure | 53 | | |
| 5-3-1. OCR Setting Procedure (AGR-11B type) | 53 | | |
| 5-3-2. OCR Setting Procedure | | | |
| (AGR-21B,22B,31B type) | 54 | | |
| 5-3-2-1. General | 54 | | |


1. SAFETY NOTICES


Thank you for purchasing the TERASAKI AR-series Air Circuit Breaker (*TemPower2*).

This chapter contains important safety information.

Be sure to carefully read these safety notices, instruction in this manual, and other documents accompanying the Air Circuit Breaker (hereinafter referred to as the ACB) to familiarize yourself with safe and correct procedures or practices before installing, operating, or servicing the ACB.

In this manual, safety notices are divided into “DANGER” and “CAUTION” according to the hazard level:

 **DANGER** : A danger notice with this symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** : A caution notice with this symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and/or property damage.

Note that failure to observe a caution notice could result in serious injury/damage in some situations. Because safety notices contain important information, be sure to read and observe them.

■ Transportation Precaution

DANGER

- Never stand under the ACB that has been lifted or suspended by a lifter or lifting attachments. The weight of the ACB may cause serious injury.

■ Installation Precautions

CAUTION

- Electrical work must be done by competent persons.
- Do not place the ACB in such an area that is subject to high temperatures, high humidity, dusty air, corrosive gases, strong vibration and shock, or other unusual conditions. Mounting the ACB in such an area could cause a fire or malfunction.
- Be careful to prevent foreign objects (such as debris, concrete powder, dust, chippings, and iron powder) and oil or rainwater from entering the ACB. These materials inside the ACB could cause a fire or malfunction.
- Prior to commencing any work on the ACB, open an upstream circuit breaker or the like to isolate all sources of power/voltage. Otherwise, electric shock may result.
- Fix the draw-out cradle of the ACB firmly on a flat, level surface using mounting screws. Otherwise, the draw-out operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury.
- Take care not to deform or bend protrusions in the bottom face of the draw-out cradle when fixing the draw-out cradle with mounting screws. Deformation of the protrusions may cause a malfunction.
- Connect conductors (including screws) to the main circuit terminals in the specified area. Otherwise, a short-circuit may result.
- When terminating conductors to the ACB, tighten terminal screws to the torque specified in this manual. Otherwise, a fire could result.
- For 4-pole ACBs, be sure to connect a 3-phase, 4-wire neutral conductor to the N-phase pole (on the right end). Otherwise, an overcurrent may hinder the ACB from tripping, resulting in a fire.

■ Operation Precautions

DANGER

- Never touch live terminal parts. Doing so will result in electric shock.
- Do not leave the ACB body in the draw-out position. If the ACB body is accidentally dropped, its weight may cause serious injury.

CAUTION

- Do not force down the charging handle after completion of manual charging operation. Doing so may cause a malfunction.
- The permissible operating voltage of the spring charging motor is 85 to 110% of the rated ac voltage or 75 to 110% of the rated dc voltage. Be sure to supply a voltage within the above ranges to the motor. Otherwise, a malfunction, burnout, or fire may result.

■ Operation Precautions (continued)

CAUTION

- Repeated open/close operation by the motor charging mechanism without pause should not exceed 15 times. If repeated continuous open/close operation is inevitable, a pause of at least 20 minutes should be provided after the repetitions of 15 times. Otherwise, a spring charging motor may be burnt out.
- Do not bring your hand or face close to arc gas vent of the arc chamber while the ACB is closed. Otherwise, a burn may result from high-temperature arc gas blowing out of the arc gas vent when the ACB trips open.
- If the ACB trips open automatically, remove the cause of tripping operation before re-closing the ACB. Otherwise, a fire could result.
- If the ACB has the breaker fixing bolts, be sure to loose the fixing bolts before draw-out operation. Otherwise, damage to the ACB may result.
- Make sure the draw-out cradle is secured with mounting screws before inserting or drawing out the breaker body. Otherwise, the insertion or draw-out operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury.
- When retracting the draw-out rail into the draw-out cradle, be sure to push the rail end. Do not hold the hook pin, body stopper, or body stopper shaft. Doing so may cause your fingers to be pinched, resulting in injury.
- Do not forcedly turn the draw-out handle clockwise when the breaker body is in the "CONN." position. Doing so may cause a malfunction.
- If the ACB has the breaker fixing bolts, make sure the bolts on both sides are securely tightened before using the ACB. Loosened fixing bolts may cause a malfunction of the ACB, in particular when it is installed in such an area that is subject to strong vibrations.

■ OCR (Overcurrent Release) Handling Precautions

CAUTION

- OCR field tests and setting changes must be performed by competent persons.
- After setting changes are made, the settings be checked with e.g., a type ANU-1 OCR checker (optional).
- After completion of OCR tests, be sure to return the settings to the original values. Failure to do so may cause a fire or burnout.
- Before changing OCR settings, open the ACB and then lock the OFF button to prevent the ACB from being closed inadvertently.
- Use a small flatblade screwdriver with a torque of not more than 0.1 N·m or a force of not more than 0.1 N when adjusting the setting switches (rotary step switches or slide switches). An excessive torque or force may cause a malfunction.
- Do not push the SET button diagonally. Doing so may cause a poor in return and malfunction.

■ Maintenance and Inspection Precautions

CAUTION

- ACB maintenance, inspection and parts replacement must be performed by competent persons.
- Do not touch ACB current carrying parts and ACB structural parts close to a current carrying part immediately after the ACB trips open. Remaining heat may cause a burn.
- Prior to commencing any work on the ACB, open an upstream circuit breaker or the like to isolate all sources of power/voltage from the main and control circuits. Otherwise, electric shock may result.
- Take care to avoid adhesion of dust to main and control circuit contacts. Dust on the contacts may result in a fire.
- Prior to commencing maintenance, inspection, or parts replacement, make sure that the closing springs are released and the ACB is open. Otherwise, unintentional open/close operation may lead to fingers or tools to be pinched by the open/close mechanism, resulting in injury.
- Retighten the terminal screws periodically to the specified torque. Otherwise, a fire could result.
- Do not perform dielectric withstand tests under other conditions than specified. Doing so may cause a malfunction.
- When replacing an auxiliary, do not damage the control wire for the auxiliary or pinch the wire between the auxiliary and the breaker body. Doing so may cause a malfunction.

2. RECEIVING AND HANDLING

Upon receipt of your ACB, check the following. If you have any question or problem, contact us at the indicated on the back cover of this manual.

- Check that the ACB received is as ordered and that the accessories are as specified.
- Check that the ACB is not damaged during shipment.

2-1. Transportation Precautions

⚠ DANGER

- Never stand under the ACB that has been lifted or suspended by a lifter or lifting attachments. If the ACB body is accidentally dropped, its weight may cause serious injury.

2-1-1. Transporting the ACB

- Before transporting the ACB, make sure the breaker body is in the CONN. position. If the ACB has breaker fixing bolts, make sure the breaker body is secured to the draw-out cradle with the fixing bolts.
- When lifting the ACB, hold it using lifting attachments or wire ropes through the lifting holes. Take care that the position switches, control circuit terminals, auxiliary switches, arc gas barrier and control terminal block cover which are shown in Fig. 1 are not damaged by the lifting rope. Lift the ACB carefully and gently. For transportation, place the ACB on a pallet and carry slowly and carefully.
- Avoid shock and vibration to the ACB during transportation.
- Do not lay the ACB during transportation.
- When transporting the ACB over great distances, crate it for protection against shock and vibration and secure the crate package with wood or ropes.
- When transporting the ACB while it is installed in a switchboard, you should fix the breaker body in the draw-out cradle with the breaker fixing bolts (optional).
- Lower the ACB onto a flat, level surface.


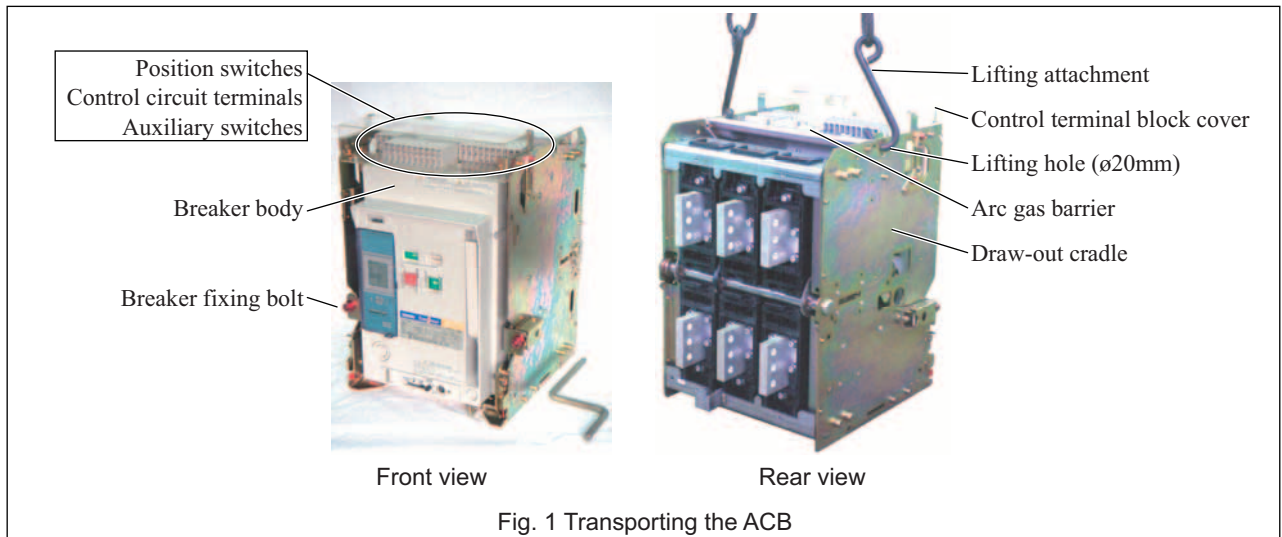


Fig. 1 Transporting the ACB


2-1-2. Transporting the breaker body

- Use an optional lifter or lifting plate to transfer the breaker body.
- When transporting the breaker body on a lifter, move the lifter with the lifter fork held at the lowest possible position.
- Take care not to exert forces on the front cover and the control circuit contacts shown in Fig. 2 . Otherwise, a deformation or damage may result.

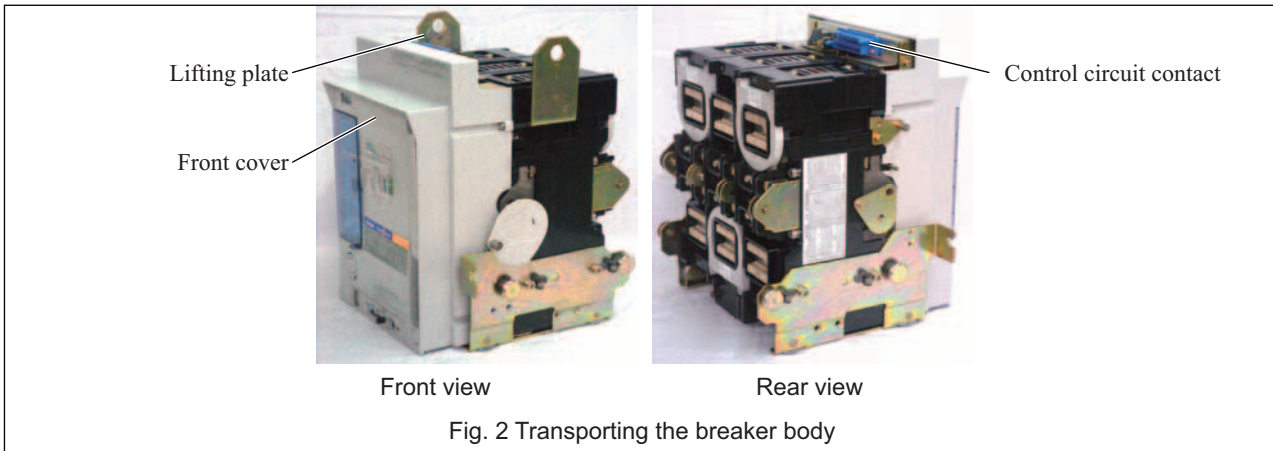

2-1-3. Transporting the draw-out cradle

- When transporting the draw-out cradle, hold it using lifting attachments or wire ropes through the lifting holes or carry it by the portions (4 points) marked with the arrows shown in Fig 3. When carrying the draw-out cradle, take care not to exert forces on the arc gas barrier, the draw-out arm, the position switches, the auxiliary switches, the control circuit terminals, the control terminal block cover, and the control circuit contacts.

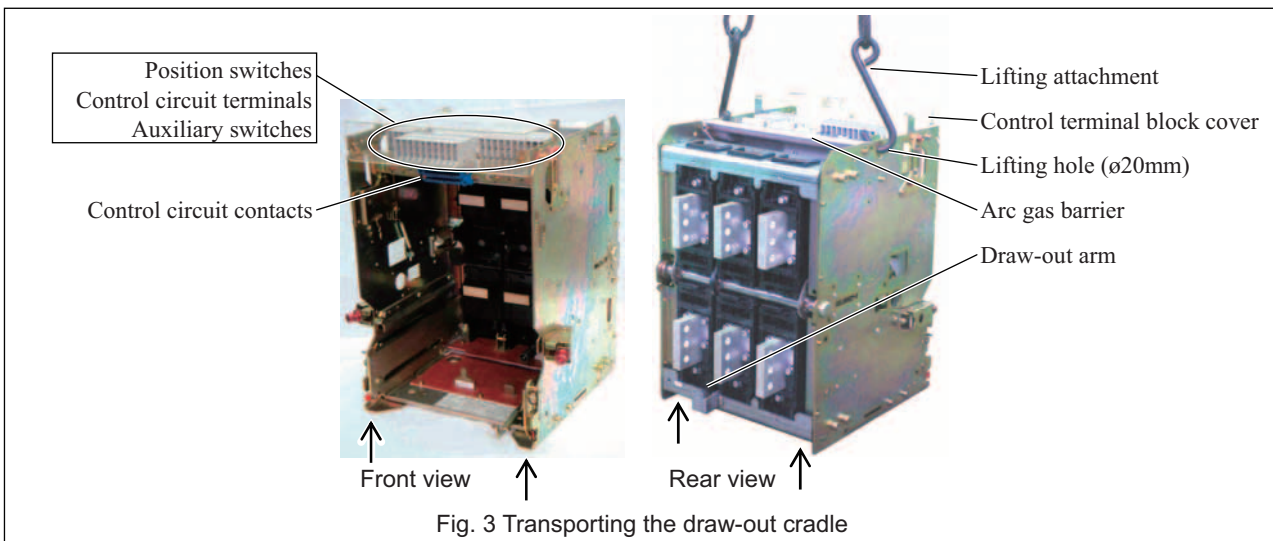

2-2. Storage Precautions


It is recommended that the ACB be used as soon as you have received it. If it is necessary to store the ACB, note the following:

- Store the ACB in a dry indoor location to prevent condensation due to sudden changes in ambient temperature. Condensation has a harmful effect on the ACB insulation.
- Store the ACB in a clean place free of corrosive gases and dust. In particular, exposure to a mixture of moisture and cement dust may cause corrosion damage to metal parts of the ACB.
- Place the ACB on a flat, level surface in its normal position (Do not lay the ACB).
- Do not place the ACB directly on the floor. Do not stack the ACBs during storage.

2-3. Installation Precautions


CAUTION

- Electrical work must be done by competent persons.
- Do not place the ACB in such an area that is subject to high temperatures, high humidity, dusty air, corrosive gases, strong vibration and shock, or other unusual conditions. Mounting the ACB in such an area could cause a fire or malfunction.
- Be careful to prevent foreign objects (such as debris, concrete powder, dust, chippings, and iron powder) and oil or rainwater from entering the ACB. These materials inside the ACB could cause a fire or malfunction.
- Prior to commencing any work on the ACB, open an upstream circuit breaker or the like to isolate all sources of power/voltage. Otherwise, electric shock may result.
- Fix the draw-out cradle of the ACB firmly on a flat, level surface using mounting screws. Otherwise, the draw-out operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury. Take care not to deform or bend protrusions in the bottom face of the draw-out cradle when fixing the draw-out cradle with mounting screws. Deformation of the protrusions may cause a malfunction (see Fig. 4).
- Connect conductors (including screws) to the main circuit terminals in the specified area. Otherwise, a short-circuit may result.
- When terminating conductors to the ACB, tighten terminal screws to the torque specified in this manual. Otherwise, a fire could result.
- For 4-pole ACBs, be sure to connect a 3-phase, 4-wire neutral conductor to the N-phase pole (on the right end). Otherwise, an overcurrent may hinder the ACB from tripping, resulting in a fire.

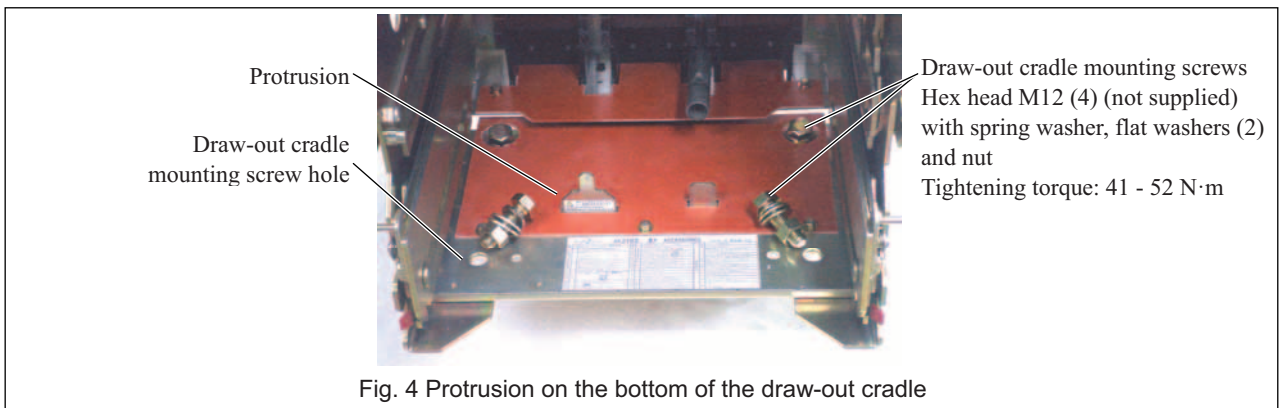

- For AR440SB, the mounting screw protection covers are installed on two of four mounting screw holes. When fixing the draw-out cradle, insert the draw-out cradle mounting screws into these two holes while lifting open the covers.

Do not lift open the cover too high. Failure to do so may result in damage to the cover.

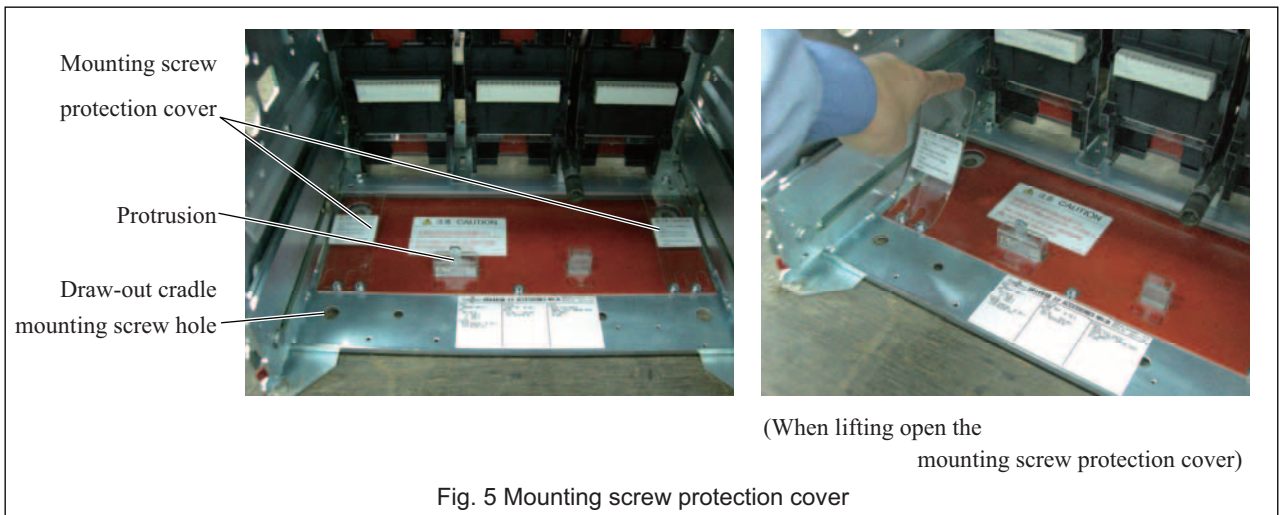

Do not install the ACB in such an area that is exposed to direct sunlight.

- Make sure that the mounting base has a sufficient capacity of bearing the weight of the ACB (see Table 3 and Table 4). The mounting base must be protected against vibration. Take appropriate measures to provide a perfect protection to the mounting base against resonance. Otherwise, open/close operation of the ACB may cause a malfunction of other devices in the switchboard or vibrations of the switchboard may cause a malfunction of the ACB.

- Use the following screws with appropriate length for the main circuit terminals.

Main circuit terminal screws: Hex head M10, with flat washers (2), spring washer (1) and nut (1) per screw

Tightening torque: 22.5 - 37.2 N·m

Table 1 Number of main circuit terminal screws required

| ACB type | | AR208S, AR212S, AR216S | AR220S, AR212H, AR216H, AR220H | AR325S, AR332S AR316H, AR320H, AR325H, AR332H | AR440SB | AR440S, AR420H, AR440H |
|---|-----------------------------|------------------------|-----------------------------------|--|---------|------------------------------|
| Number of main circuit terminal screws (3/4-pole) | Vertical terminals | 12/16 | 18/24 | 24/32 | 24/32 | 48/64 |
| | Horizontal/front terminals* | 12/16 | | 18/24 | - | - |

* Front terminals are not applicable for high-performance ARxxxH types.

- Use the following screw for the ground terminal. The screw must have a length that allows it to be inserted 4 - 9 mm into the ground terminal M8 tapped hole.

Ground terminal screw: M8 (1) with spring washer and flat washer

Tightening torque: 11.8 - 14.7 N·m

● Connect conductors to the main circuit terminals in the conductor connection area as shown in Figs. 6 - 9.



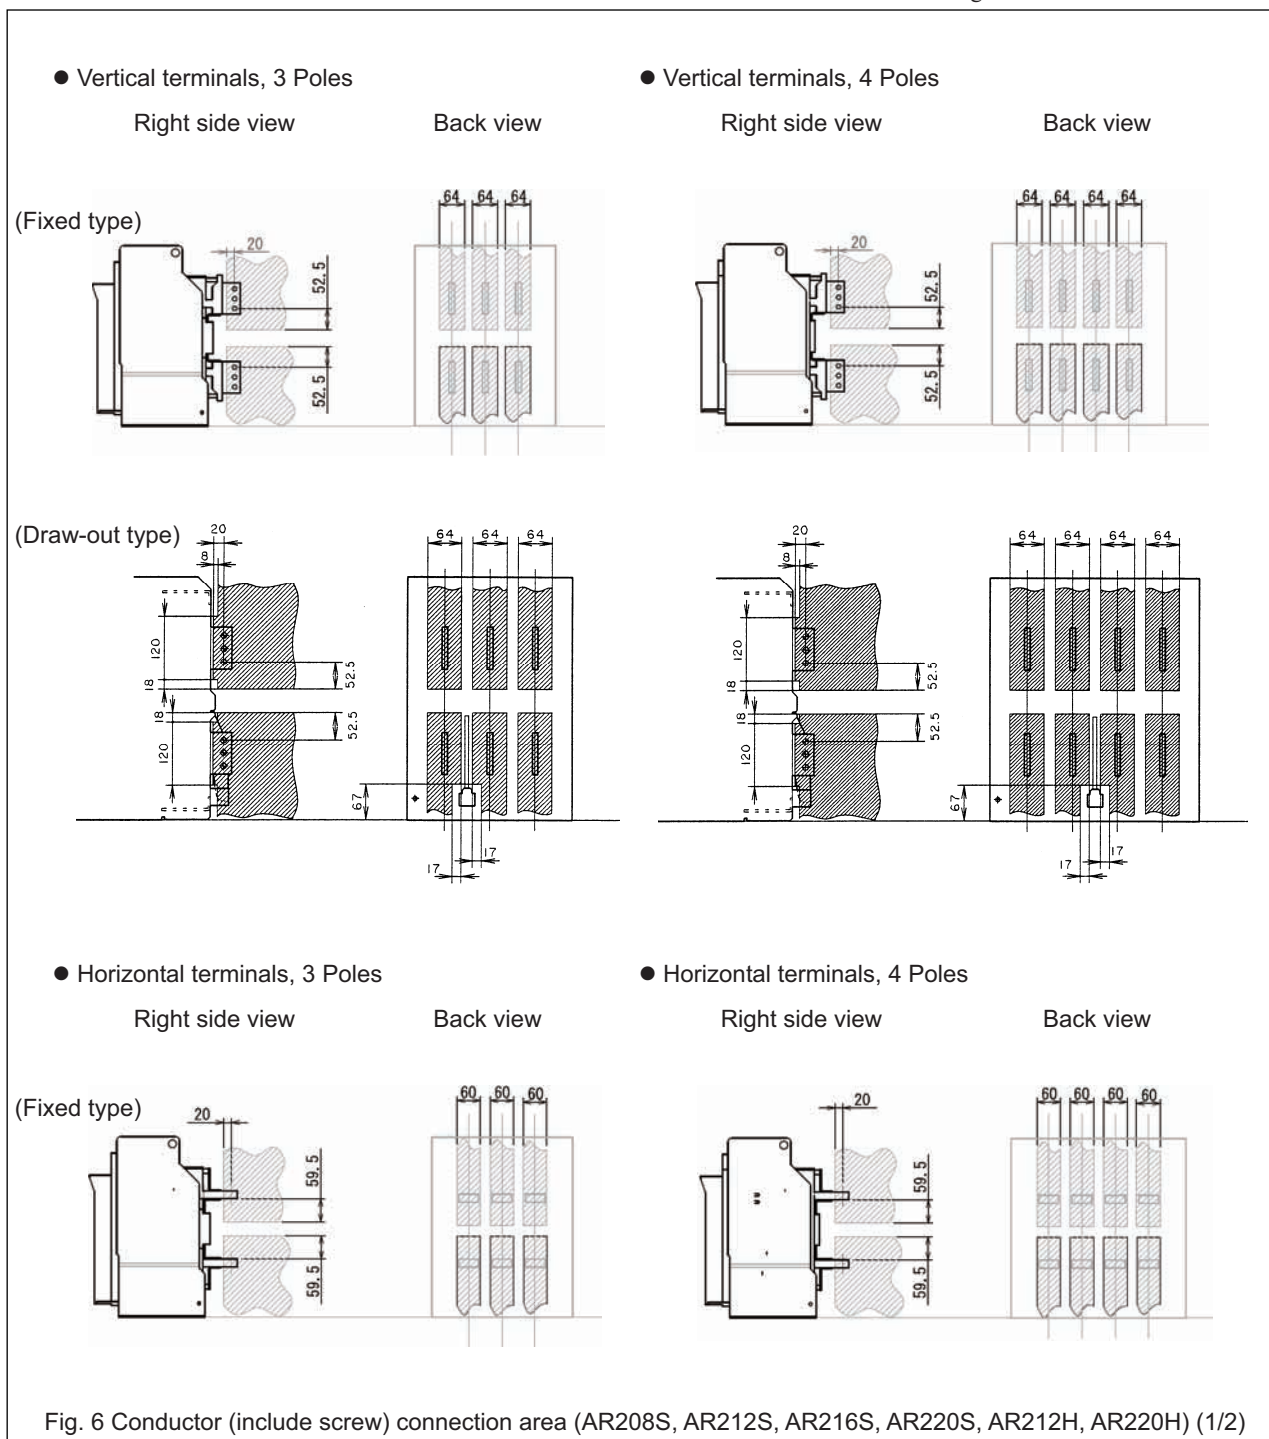


Fig. 6 Conductor (include screw) connection area (AR208S, AR212S, AR216S, AR220S, AR212H, AR220H) (1/2)

*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

(Draw-out type)

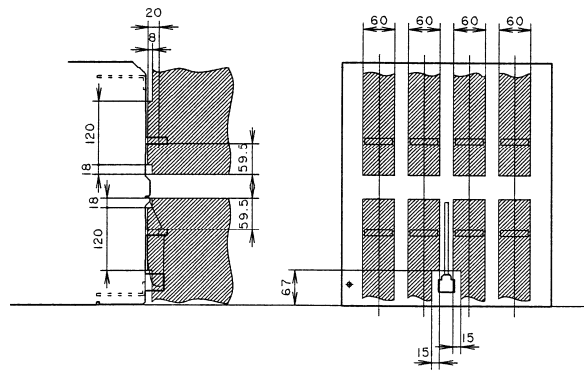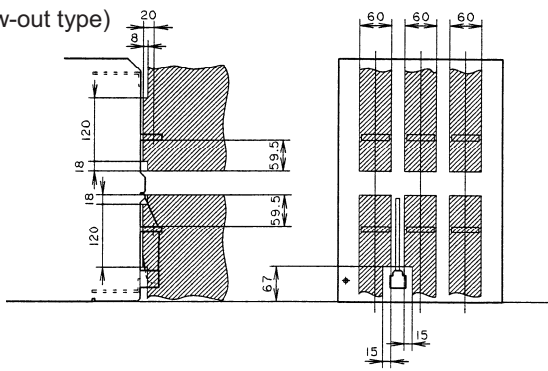

● Front terminals, 3 Poles

Right side view



Back view

● Front terminals, 4 Poles

Right side view

Back view

(Fixed type)

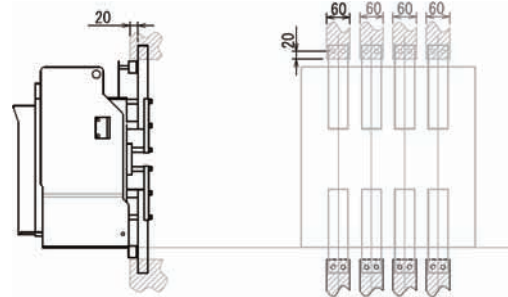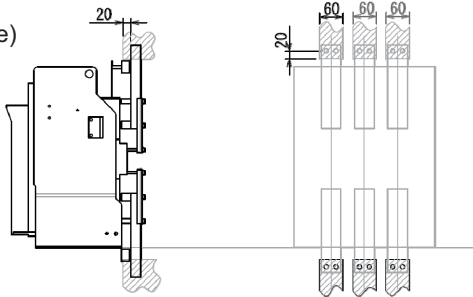

(Draw-out type)

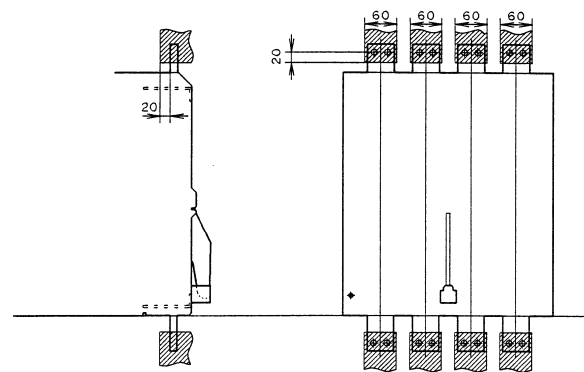
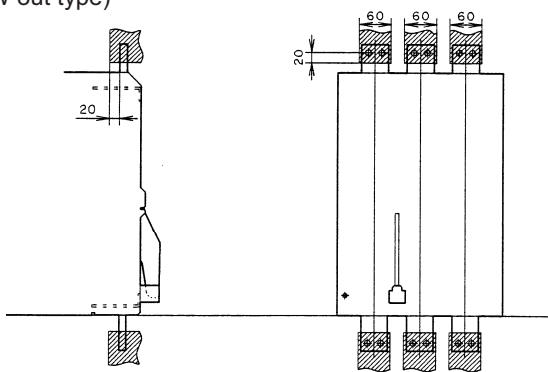


Fig. 6 Conductor (include screw) connection area (AR208S, AR212S, AR216S, AR220S, AR212H, AR220H) (2/2)


*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

● Vertical terminals, 3 Poles

Right side view

Back view


(Fixed type)

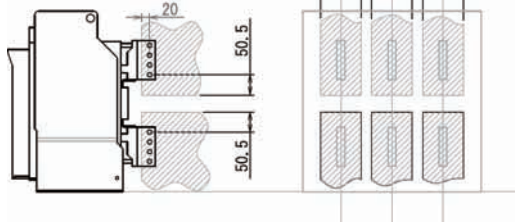



● Vertical terminals, 4 Poles

Right side view

Back view

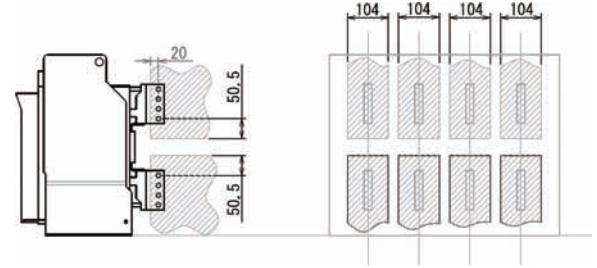

(Draw-out type)

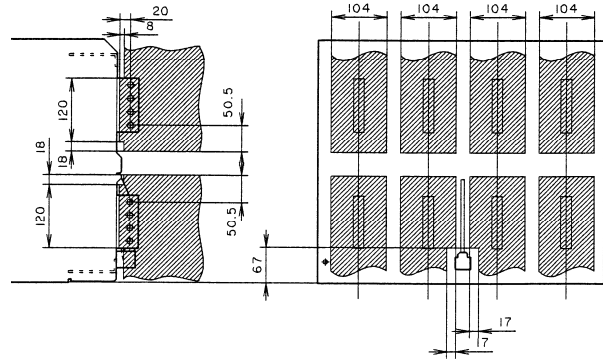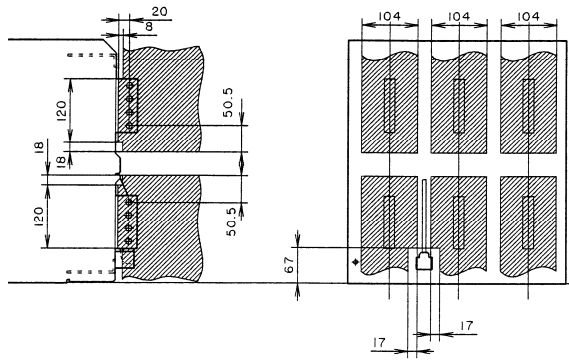


● Horizontal terminals, 3 Poles

Right side view

Back view

(Fixed type)

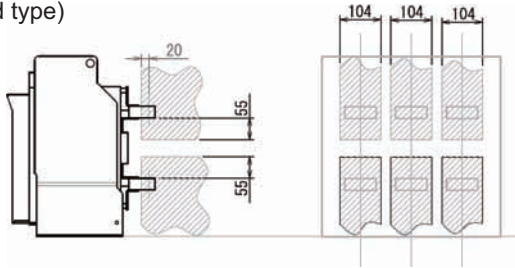

● Horizontal terminals, 4 Poles

Right side view

Back view



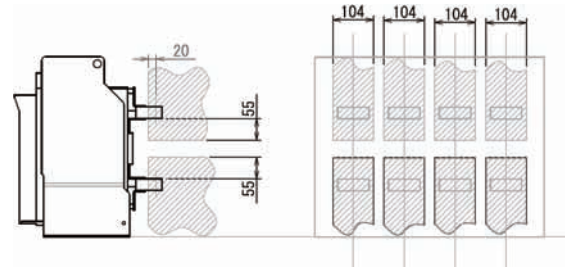


Fig. 7 Conductor (include screw) connection area (AR325S, AR332S, AR316H, AR320H, AR325H, AR332H) (1/2)

*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

(Draw-out type)

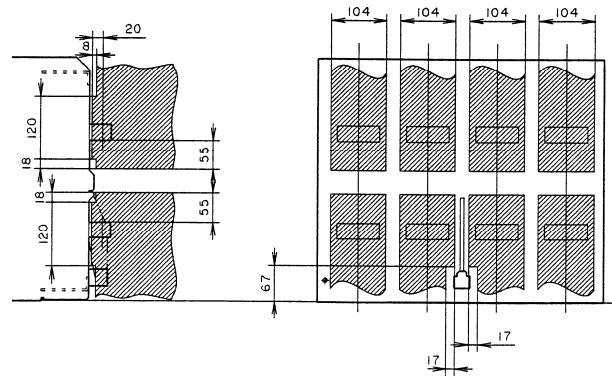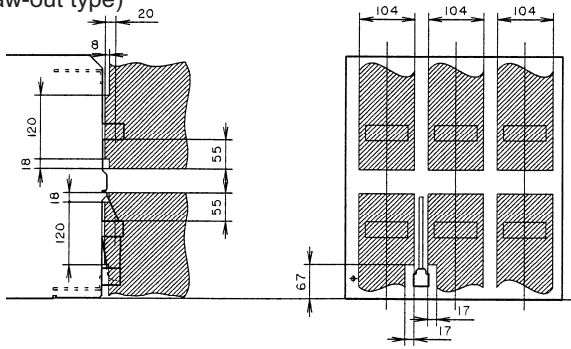

● Front terminals, 3 Poles

Right side view



Back view

● Front terminals, 4 Poles

Right side view

Back view

(Fixed type)

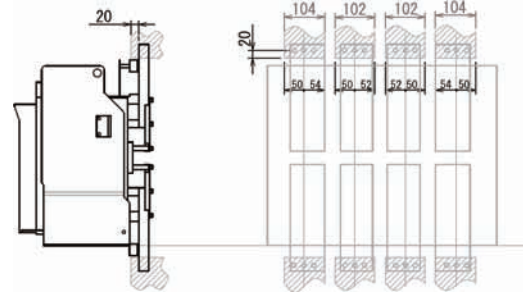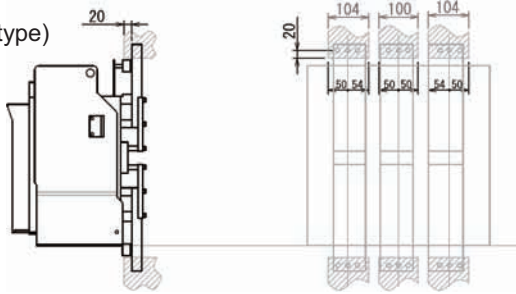

(Draw-out type)



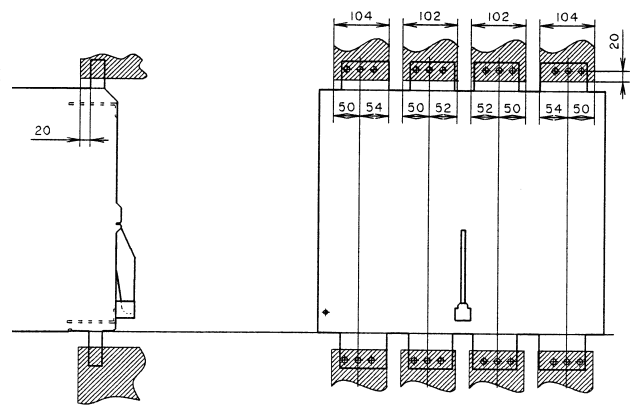


Fig. 7 Conductor (include screw) connection area (AR325S, AR332S, AR316H, AR320H, AR325H, AR332H) (2/2)

*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

● Vertical terminals, 3 Poles

(Draw-out type)

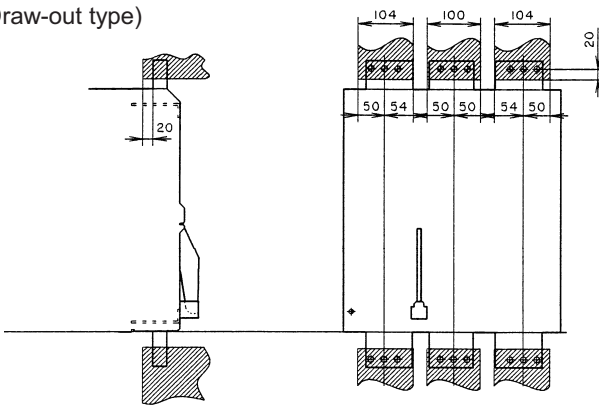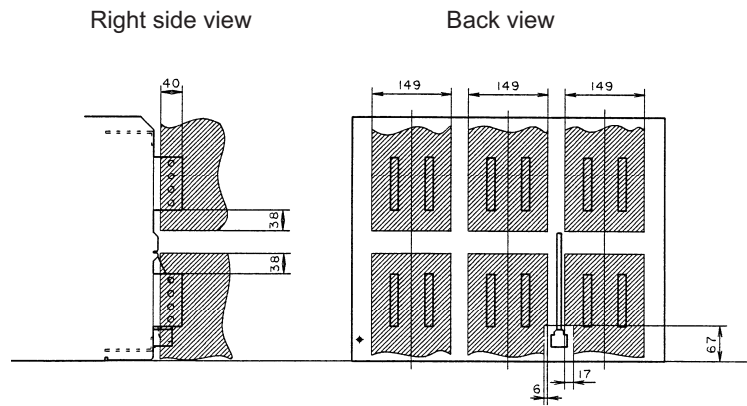

● Vertical terminals, 4 Poles

(Draw-out type)


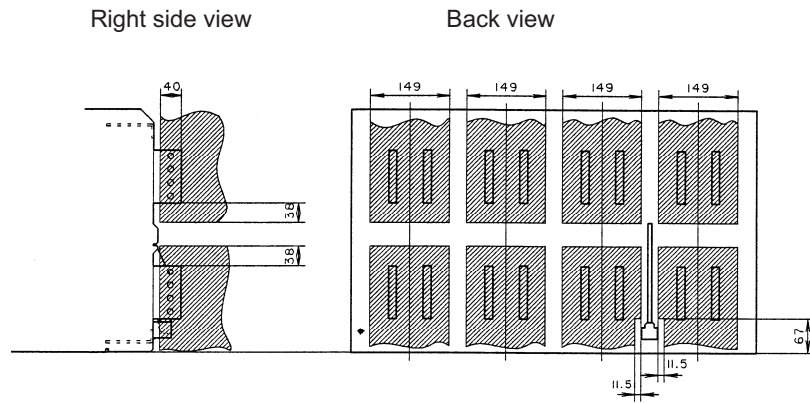



Fig. 8 Conductor (include screw) connection area (AR440S)

*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

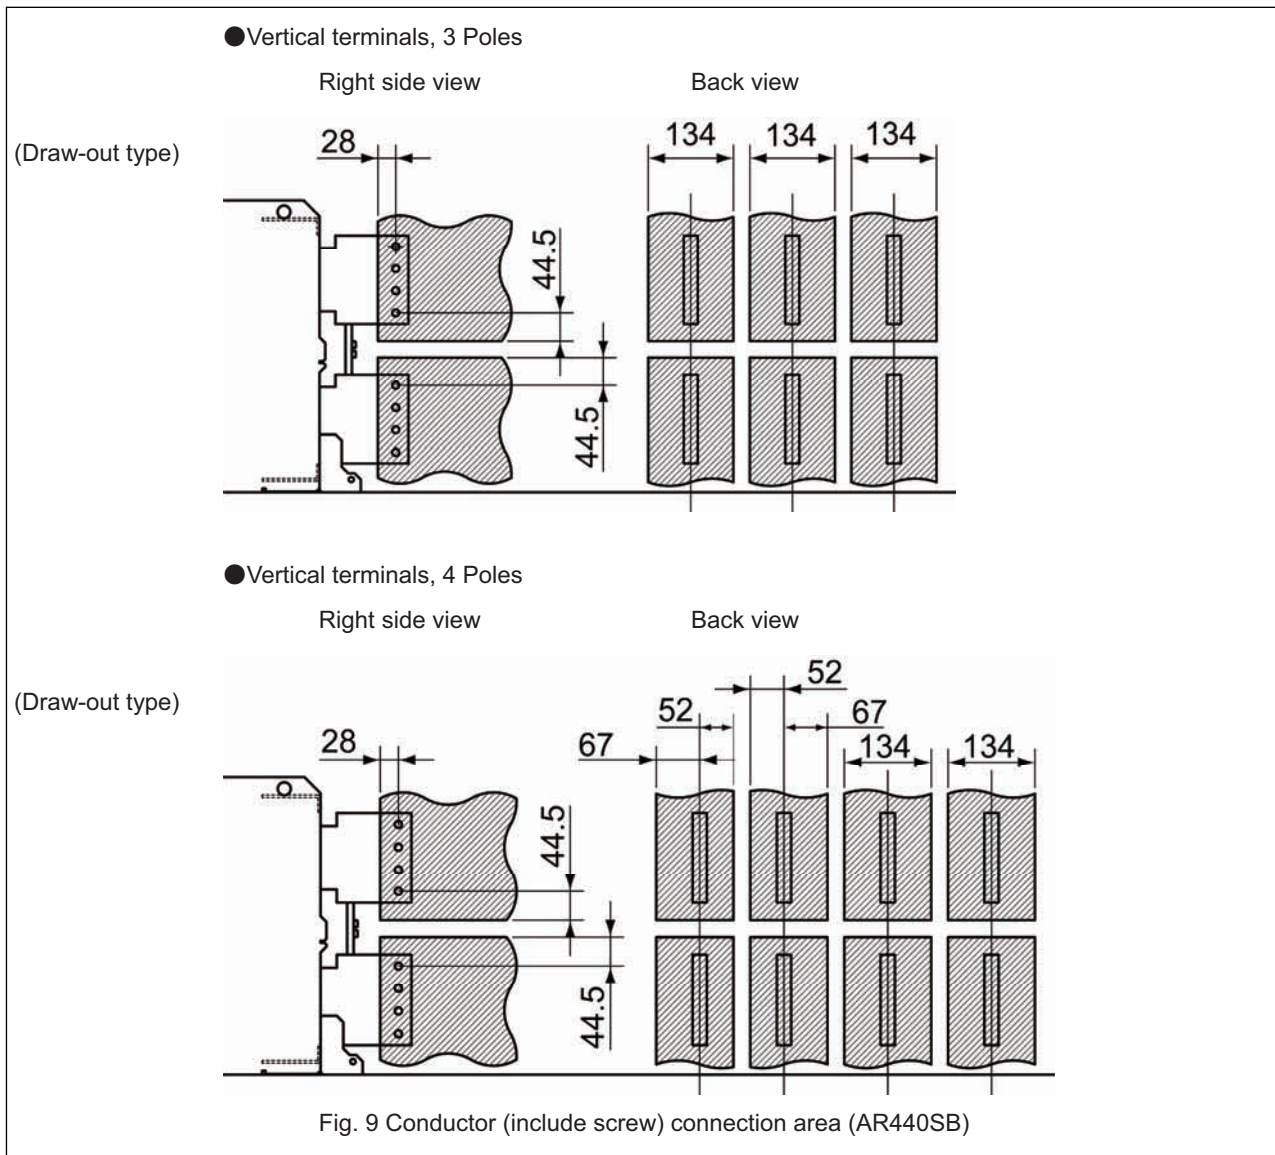


*Insulation distance of conductor connection area and earth metal is more than 12.5mm.

- Use a support to hold conductors securely at distance L as shown in Fig. 10 and Table 2. Such a support will help preventing the conductors and main circuit terminals from being deformed or damaged due to a large electromagnetic force caused by any fault current. Use a high-quality insulating material for a support and secure enough insulation distance.

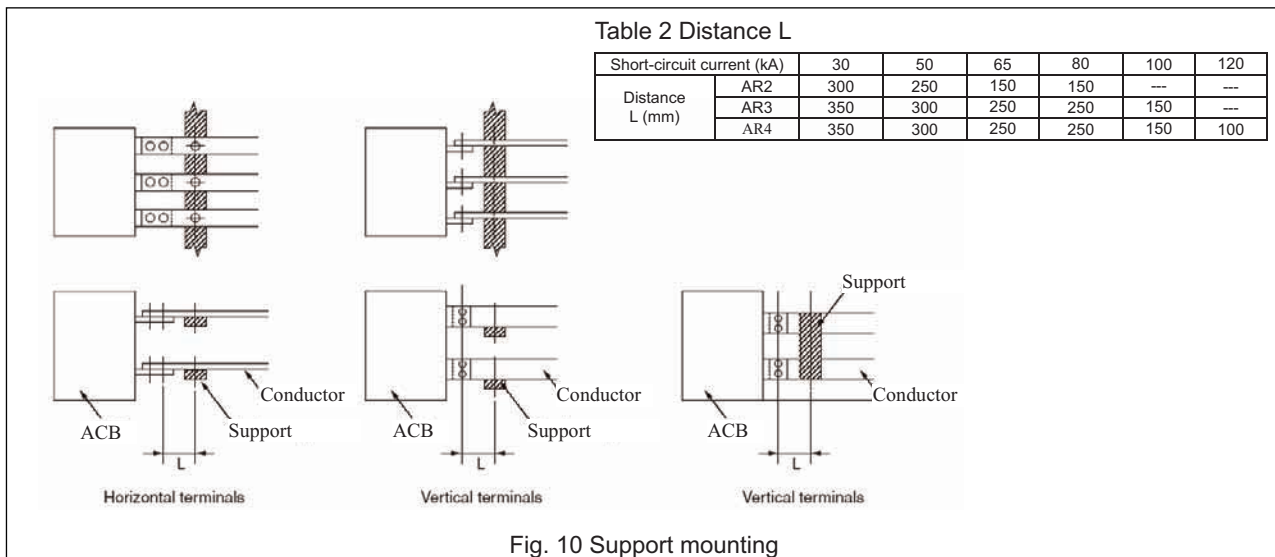


- The following procedure makes it easy to make connections with plug-in tab terminals (#187) of position switches, control circuit terminals, and auxiliary switches.


- (1) Draw out the breaker body to the removed position, and remove it using an optional lifter or lifting plate. Refer to sections 4-2-2 and 2-1-2.
- (2) If the ACB is equipped with the control terminal block cover, loosen both the cover fixing screws and remove the cover.
- (3) Remove the terminal block fixing screws shown in Fig. 11.

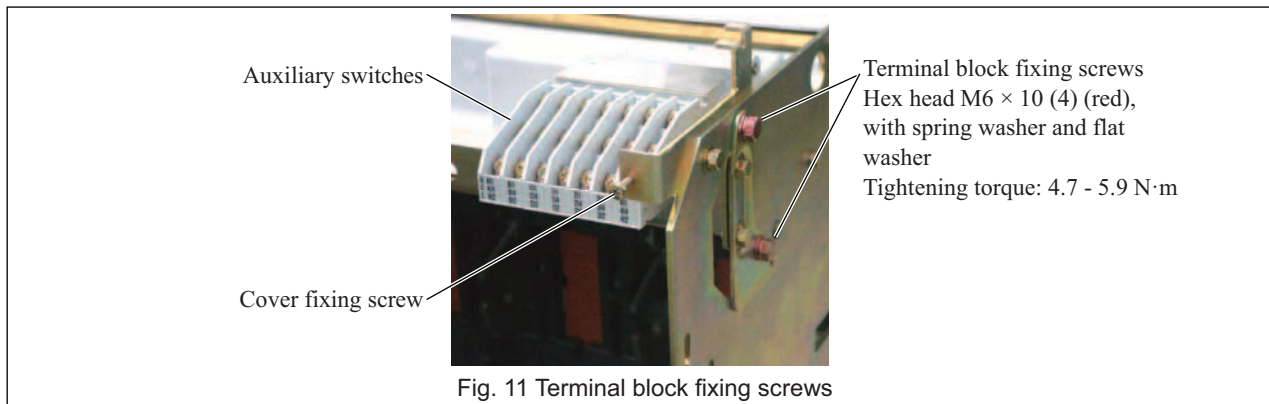

- (4) Tilt the terminal block down as shown in Fig. 12. After connecting wires, tilt the terminal block up again and fix it with the terminal block fixing screws.

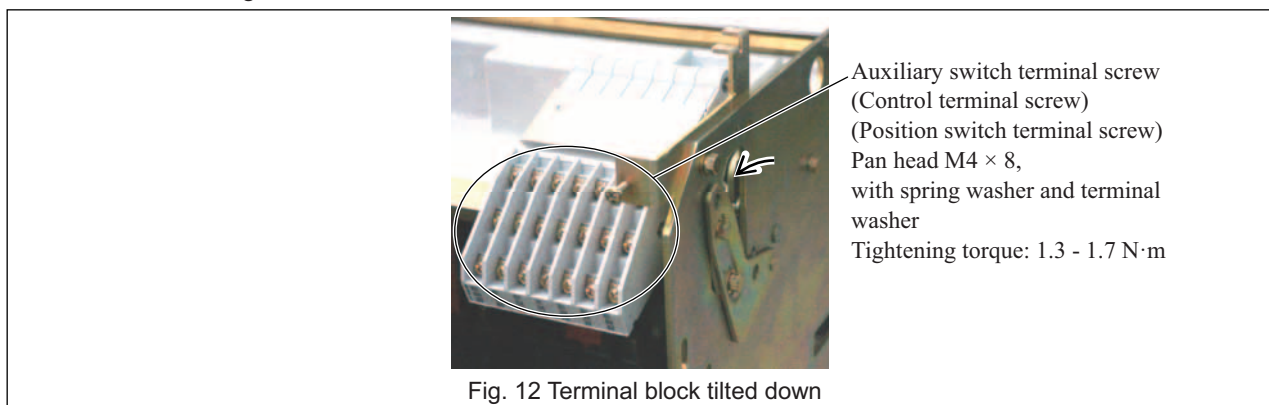

- Connect the control wire to a com. terminal as shown in Fig. 13.

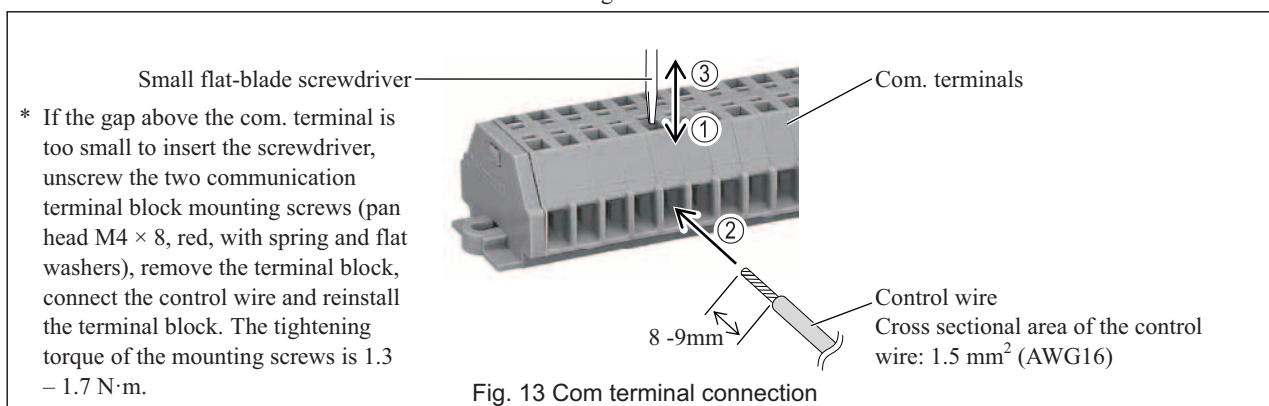

- If any work is done near the ACB that have been installed, protect the openings of the ACB with appropriate covers to prevent spatters, metal chips, wire cuttings or other foreign objects from entering the ACB.

3. GENERAL

3-1. Types and Descriptions

TemPower2 is available in types shown in Tables 3 and 4.

Table 3 Standard types

| Frame size (A) | | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 | | | | | | | | | |
|--|--------------------------------|--|---|------------|--------|--------|---------|---------|---------|-------|------|-----|-----|-----|-----|--------------------|-----|-----|
| Type | | AR208S | AR212S | AR216S | AR220S | AR325S | AR332S | AR440SB | AR440S | | | | | | | | | |
| Max. rated current [I_n] (A) *1, *2 | IEC, EN, AS | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 | | | | | | | | | |
| | JIS Marine use | | | | | | | | | | | | | | | | | |
| N-phase rated current (A) | | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 | | | | | | | | | |
| Number of poles *3, *4 | | 3 4 | 3 4 | 3 4 | 3 4 | 3 4 | 3 4 | 3 4 | 3 4 | | | | | | | | | |
| Dielectric withstand voltage [U_i] (50/60Hz) *5 | | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | | | | | | | | | |
| Operating voltage [U_o] (50/60Hz) *6 | | 690 | 690 | 690 | 690 | 690 | 690 | 690 | 690 | | | | | | | | | |
| Rated breaking/making current [kA sym rms/kA peak] | | 50/105 | | 65/143 | | | 85/187 | | 75/165 | | | | | | | | | |
| IEC, EN, AS [$I_{cs} = I_{cu}$] JIS C 8201-2-1 Ann.1 Ann.2 | AC 690V *8 | 65/143 *10 | | 85/187 *10 | | | 100/220 | | 100/220 | | | | | | | | | |
| | AC 440V | 50/115 | | 65/153 | | | *13 | | 75/179 | | | | | | | | | |
| NK *7 | AC 690V | 65/153 *10 | | 85/201 *10 | | | *13 | | 100/245 | | | | | | | | | |
| | AC 450V | 40/40 | | 40/40 | | | 40/40 | | 40/40 | | | | | | | | | |
| For DC | DC 600V *9 | 40/40 | | 40/40 | | | 40/40 | | 40/40 | | | | | | | | | |
| | DC 250V | 40/40 | | 40/40 | | | 40/40 | | 40/40 | | | | | | | | | |
| Rated short-time current [I_{cw}] [kA rms] (1 s) | | 65 | | 85 | | | 100 | | 100 | | | | | | | | | |
| Rated latching current (kA) | | 65 | | 85 | | | 100 | | 100 | | | | | | | | | |
| Endurance in number of ON-OFF cycles *11 | Mechanical | With maintenance | 30000 | 30000 | 30000 | 25000 | 20000 | 20000 | 15000 | 15000 | | | | | | | | |
| | | Without maintenance | 15000 | 15000 | 15000 | 12000 | 10000 | 10000 | 8000 | 8000 | | | | | | | | |
| | Electrical | Without maintenance | AC 460V | 12000 | 12000 | 12000 | 10000 | 7000 | 7000 | 3000 | 3000 | | | | | | | |
| | | AC 690V | 10000 | 10000 | 10000 | 7000 | 5000 | 5000 | 2500 | 2500 | | | | | | | | |
| Installation | | Draw-out or fixed type | | | | | | | | | | | | | | | | |
| Mass (kg) for draw-out type | | 73 | 86 | 73 | 86 | 76 | 90 | 79 | 94 | 105 | 125 | 105 | 125 | 126 | 158 | 139 | 176 | |
| External dimensions (mm) | | | | | | | | | | | | | | | | | | |
| Fixed type *12 | | a | 360 | 445 | 360 | 445 | 360 | 445 | 360 | 445 | 466 | 586 | 466 | 586 | - | - | - | - |
| | | b | 460 | | | | | | | | | | | | | | | |
| | | c | 290 | | | | | | | | | | | | | | | |
| | | d | 75 | | | | | | | | | | | | | | | |
| Draw-out type | | a | 354 | 439 | 354 | 439 | 354 | 439 | 354 | 439 | 460 | 580 | 460 | 580 | 460 | 580 | 631 | 801 |
| | | b | 460 | | | | | | | | | | | | 460 | | 460 | |
| | | c | 345 | | | | | | | | | | | | 345 | | 375 | |
| | | d | 40 | | | | | | | | | | | | 140 | | 53 | |
| Connection method | | Line side | Vertical, horizontal or front terminals | | | | | | | | | | | | | Vertical terminals | | |
| | | Load side | Vertical, horizontal or front terminals | | | | | | | | | | | | | Vertical terminals | | |
| Control circuit terminal type | | screw terminals | | | | | | | | | | | | | | | | |
| Spring charging method | | Manual or motor charging | | | | | | | | | | | | | | | | |
| Overcurrent release (OCR) | | No OCR, or L-characteristic for general feeder protection (In case of AGR-11B) | | | | | | | | | | | | | | | | |
| | | No OCR, L-characteristic for general feeder protection, R-characteristic for general feeder protection or S-characteristic for generator protection (In case of AGR-21B,22B,31B) | | | | | | | | | | | | | | | | |
| Operation indication | | Group indication (In case of AGR-11B) | | | | | | | | | | | | | | | | |
| | | Individual indication (In case of AGR-21B,22B,31B) | | | | | | | | | | | | | | | | |
| Tripping device | Tripping coil (TC) | Standard equipment for OCR-equipped ACB | | | | | | | | | | | | | | | | |
| | Shunt trip device (SHT) | Optional | | | | | | | | | | | | | | | | |
| | undervoltage trip device (UVT) | Optional | | | | | | | | | | | | | | | | |
| Auxiliary switches | Number of switches | 4C (standard), 7C or 10C; available for general feeder or microload | | | | | | | | | | | | | | | | |
| | Terminal type | screw terminals | | | | | | | | | | | | | | | | |
| Operation power *14 | Rated voltage | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V | | | | | | | | | | | | | | | | |

*1: Ambient temperature: 40°C (45°C for marine used)

*2: With horizontal terminals for AR208S - 216S and vertical terminals for AR220S - 440S

*3: For 2-pole applications, use two poles at both ends.

*4: 4-pole ACBs are not applicable to power distribution IT systems unless N-phase protection is provided.

*5: Varies depending on applicable standards. AC1000V applies to ACBs conforming to IEC60947-2 and JIS C8201-2.

*6: Varies depending on applicable standards. AC690V applies to ACBs conforming to IEC60947-2 and JIS C8201-2.

*7: Applicable to 3-pole ACBs with INST or MCR.

*8: For applicability to power distribution IT systems, consult us

*9: Applicable under 3-pole serial connection scheme.

*10: For AC500V

*11: Expected service life based on endurance test. The service life of ACB depends on the working and environmental conditions. Refer to chapter 6 "Maintenance, Inspection and Parts Replacement".

*12: For both vertical and horizontal terminals

*13: In applying or going to apply.

*14: For more information, please refer to page 23 and 25.

Table 4 High-performance types

| | | | | | | | | | | | | | | | | | | |
|---|--------------------------------|--|---------|--------|--------|---------|--------|--------------------|--------|---------|-------|---------|-----|---|-----|--------------------|-----|-----|
| Frame size (A) | | 1250 | 1600 | 2000 | 1600 | 2000 | 2000 | 2000 | 2500 | 3200 | 4000 | | | | | | | |
| Type | | AR212H | AR216H | AR220H | AR316H | AR320H | AR420H | AR325H | AR332H | AR440H | | | | | | | | |
| Max. rated current [I _n] (A) *1, *2 | IEC, EN, AS | 1250 | 1600 | 2000 | 1600 | 2000 | 2000 | 2500 | 3200 | 4000 | | | | | | | | |
| | JIS | | | | | | | | | | | | | | | | | |
| | Marine use | | | | | | | | | | | | | | | | | |
| N-phase rated current | | 1250 | 1600 | 2000 | 1600 | 2000 | 2000 | 2500 | 3200 | 4000 | | | | | | | | |
| Number of poles *3, *4 | | 3 | 4 | 3 | 4 | 3 | 4 | 3 | 4 | 3 | 4 | | | | | | | |
| Dielectric withstand voltage [U _i] (50/60Hz) *5 | | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | | | | | | | | |
| Operating voltage [U _n] (50/60Hz) *6 | | 690 | 690 | 690 | 690 | 690 | 690 | 690 | 690 | 690 | | | | | | | | |
| Rated breaking/making current [kA sym rms/kA peak] *7 | | | | | | | | | | | | | | | | | | |
| IEC, EN, AS [I _{cs} = I _{cu}] | AC 690V *9 | 55/121 | | | | 85/187 | | 75/165 | | 85/187 | | 75/165 | | | | | | |
| | AC 440V | 80/176 | | | | 100/220 | | 120/264 | | 100/220 | | 120/264 | | | | | | |
| JIS C 8201-2-1 Ann.1 Ann.2 | AC 690V | 55/128 | | | | 85/201 | | *13 | | 85/201 | | *13 | | | | | | |
| | AC 450V | 80/186 | | | | 100/233 | | *13 | | 100/233 | | *13 | | | | | | |
| For DC | DC 600V *10 | 40/40 | | | | | | | | | | | | | | | | |
| | DC 250V | | | | | | | | | | | | | | | | | |
| Rated short-time current [I _{CSW}] (kA rms) (1 s) | | 80 | | | | 100 | | 100 | | 100 | | | | | | | | |
| Rated latching current (kA) | | 65 | | | | 85 | | 100 | | 85 | | | | | | | | |
| Endurance in number of ON-OFF cycles *11 | Mechanical | With maintenance | 30000 | 30000 | 25000 | 30000 | 25000 | 15000 | 20000 | 20000 | 15000 | | | | | | | |
| | | Without maintenance | 15000 | 15000 | 12000 | 15000 | 12000 | 8000 | 10000 | 10000 | 8000 | | | | | | | |
| | Electrical | Without maintenance | AC 460V | 12000 | 12000 | 10000 | 12000 | 10000 | 3000 | 7000 | 7000 | 3000 | | | | | | |
| | | AC 690V | 10000 | 10000 | 7000 | 10000 | 7000 | 2500 | 5000 | 5000 | 2500 | | | | | | | |
| Installation | | Draw-out or fixed type | | | | | | | | | | | | | | | | |
| Mass (kg) for draw-out type | | 79 | 94 | 79 | 94 | 79 | 94 | 105 | 125 | 105 | 125 | 139 | 105 | 125 | 105 | 125 | 139 | |
| External dimensions (mm) | | | | | | | | | | | | | | | | | | |
| Fixed type *12 | | a | 360 | 445 | 360 | 445 | 360 | 445 | 466 | 586 | 466 | 586 | - | 466 | 586 | 466 | 586 | - |
| | | b | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | |
| | | c | 290 | | 290 | | 290 | | 290 | | 290 | | 290 | | 290 | | 290 | |
| | | d | 75 | | 75 | | 75 | | 75 | | 75 | | 75 | | 75 | | 75 | |
| Draw-out type | | a | 354 | 439 | 354 | 439 | 354 | 439 | 460 | 580 | 460 | 580 | 631 | 460 | 580 | 460 | 580 | 631 |
| | | b | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | | 460 | |
| | | c | 345 | | 345 | | 345 | | 345 | | 345 | | 345 | | 345 | | 345 | |
| | | d | 40 | | 40 | | 40 | | 40 | | 40 | | 40 | | 40 | | 40 | |
| Connection method | Line side | Vertical terminals (Horizontal terminals can be specified as an option) | | | | | | Vertical terminals | | | | | | Vertical terminals (Horizontal terminals can be specified as an option) | | Vertical terminals | | |
| | Load side | Vertical terminals (Horizontal terminals can be specified as an option) | | | | | | Vertical terminals | | | | | | Vertical terminals (Horizontal terminals can be specified as an option) | | Vertical terminals | | |
| Control circuit terminal type | | screw terminals | | | | | | | | | | | | | | | | |
| Spring charging method | | Manual or motor charging | | | | | | | | | | | | | | | | |
| Overcurrent release (OCR) | | No OCR, or L-characteristic for general feeder protection (In case of AGR-11B) No OCR, L-characteristic for general feeder protection, R-characteristic for general feeder protection or S-characteristic for generator protection (In case of AGR-21B,22B,31B) | | | | | | | | | | | | | | | | |
| Operation indication | | Group indication (In case of AGR-11B) | | | | | | | | | | | | | | | | |
| | | Individual indication (In case of AGR-21B,22B,31B) | | | | | | | | | | | | | | | | |
| Tripping device | Tripping coil (TC) | Standard equipment for OCR-equipped ACB | | | | | | | | | | | | | | | | |
| | Shunt trip device (SHT) | Optional | | | | | | | | | | | | | | | | |
| | Undervoltage trip device (UVT) | Optional | | | | | | | | | | | | | | | | |
| Auxiliary switches | Number of switches | 4C (standard), 7C or 10C; available for general feeder or microload | | | | | | | | | | | | | | | | |
| | Terminal type | screw terminals | | | | | | | | | | | | | | | | |
| Operation power *14 | Rated voltage | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V | | | | | | | | | | | | | | | | |

*1: Ambient temperature: 40°C (45°C for marine used)

*2: For vertical terminals

*3: For 2-pole applications, use two poles at both ends.

*4: 4-pole ACBs are not applicable to power distribution IT systems unless N-phase protection is provided.

*5: Varies depending on applicable standards. AC1000V applies to ACBs conforming to IEC60947-2 and JIS C8201-2.

*6: Varies depending on applicable standards. AC690V applies to ACBs conforming to IEC60947-2 and JIS C8201-2.

*7: Setting the instantaneous trip function to NON reduces the rated breaking current to the rated latching current.

*8: Applicable to 3-pole ACBs with INST or MCR.

*9: For applicability to power distribution IT systems, consult us

*10: Applicable under 3-pole serial connection scheme.

*11: Expected service life based on endurance test. The service life of ACB depends on the working and environmental conditions. Refer to chapter 6 "Maintenance, Inspection and Parts Replacement".

*12: For vertical terminals

*13: In applying or going to apply.

*14: For more information, please refer to page 23 and 25.

Use the ACBs in the environmental conditions specified in Table 5.

Table 5 Operating environment

| | | |
|---|------------------------------|--|
| Standard environment (Standard equipped ACBs) | Altitude | 2000 m max. |
| | Ambient temperature | -5°C to +40°C The average temperature for 24 hours must not exceed 35°C |
| | Humidity | 45 to 85% rel. max. |
| | Vibration and shock | Free from abnormal vibration and shock. |
| | Atmosphere | No excessive water vapor, oil vapor, dust, or corrosive gases. No sudden change in temperature and no condensation. Ammonia (NH ₃): 0.5 ppm max, Hydrogen sulfide (H ₂ S)/sulfur dioxide (SO ₂)/hydrogen chloride (HCl): 0.1 ppm max., Chlorine (Cl ₂): 0.05 ppm max. |
| Special environment (Optional) | Tropical environment package | Different from standard ACBs in that Ambient temperature: 60°C max. and Humidity: 95% rel. max. (no condensation) |
| | Cold environment package | Different from standard ACBs in that Ambient temperature: -25°C min. for use and -40°C min. for storage (no condensation) |
| | Corrosion-resistant package | Different from standard ACBs in that NH ₃ : 50 ppm max, H ₂ S: 10 ppm max., SO ₂ /HCl: 5 ppm max., and Cl ₂ : 1 ppm max. |

Table 6 shows the dielectric withstand voltage and the insulation resistance of the ACBs.

| | |
|--|--|
| ⚠ CAUTION | |
| ● Do not perform dielectric withstand/insulation resistance tests under other conditions than specified. Doing so may cause a malfunction. | |

Table 6 Dielectric withstand voltage and insulation resistance

| Circuit | | Dielectric withstand voltage (50/60Hz) | | | Impulse withstand voltage U_{imp} | Insulation resistance (DC500V Megger used) | |
|-------------------|---|--|-----------------------------------|----------|-------------------------------------|--|-------|
| Main circuit | | Between poles, and terminal group and ground | AC3500V | 1 minute | 12kV | 300MΩ | |
| Control circuit | Auxiliary switches | For general feeder | Between terminal group and ground | AC2500V | 1 minute | 6kV | 100MΩ |
| | | For microload | Between terminal group and ground | AC2000V | 1 minute | 4kV | 100MΩ |
| | Position switches | Between terminal group and ground | AC2000V | 1 minute | 4kV | 100MΩ | |
| | Overcurrent release | Between terminal group and ground | AC2000V | 1 minute | 4kV | 100MΩ | |
| | Undervoltage trip device, Reverse power trip device | Between terminal group and ground | AC2500V | 1 minute | 6kV | 100MΩ | |
| Other accessories | | Between terminal group and ground | AC2000V | 1 minute | 4kV | 100MΩ | |

The above data applies to new ACBs. Device terminals within ACBs are not covered. Use a DC500V Megger to measure the insulation resistance.

Table 7 shows the internal resistance and power consumption of the ACBs.

Table 7 Internal resistance and power consumption

| Type | AR208S | AR212S | AR216S | AR220S | AR325S | AR332S | AR440SB | AR440S |
|--|--------|--------|--------|--------|--------|--------|---------|--------|
| Frame size (A) | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 |
| DC internal resistance (mΩ) (for 1-pole ACB) | 0.033 | 0.033 | 0.028 | 0.024 | 0.014 | 0.014 | 0.017 | 0.014 |
| AC power consumption (W) (for 3-pole ACB) | 200 | 350 | 350 | 490 | 600 | 780 | 1650 | 1060 |

| Type | AR212H | AR216H | AR220H | AR316H | AR320H | AR325H | AR332H | AR420H | AR440H |
|--|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| Frame size (A) | 1250 | 1600 | 2000 | 1600 | 2000 | 2500 | 3200 | 2000 | 4000 |
| DC internal resistance (mΩ) (for 1-pole ACB) | 0.024 | 0.024 | 0.024 | 0.014 | 0.014 | 0.014 | 0.014 | 0.014 | 0.014 |
| AC power consumption (W) (for 3-pole ACB) | 260 | 350 | 490 | 310 | 430 | 600 | 780 | *1 | 1060 |

*1: Contact us.

Table 8 shows applicable current of the ACBs. The applicable current varies depending on the ambient temperatures.

Table 8 Dependence of applicable current on ambient temperature

| Type | | AR208S | AR212S | AR216S | AR220S | AR325S | AR332S | AR440SB | AR440S |
|---|-----------------------------------|-------------|-------------|--------------|--------------|---------------|---------------|---------------|--------------|
| Standard | Conductor size | 2 × 50 × 5t | 2 × 80 × 5t | 2 × 100 × 5t | 3 × 100 × 5t | 2 × 100 × 10t | 3 × 100 × 10t | 4 × 150 × 10t | 4 × 150 × 6t |
| | Ambient temperature (°C) | | | | | | | | |
| IEC60947-2 EN60947-2 AS3947-2 JIS C8201-2-1 Ann.1 Ann.2 | 40 (standard ambient temperature) | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 |
| | 45 | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | 4000 |
| | 50 | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 3940 | 4000 |
| | 55 | 800 | 1200 | 1540 | 1820 | 2500 | 2990 | 3820 | 3940 |
| | 60 | 800 | 1150 | 1460 | 1740 | 2400 | 2850 | 3690 | 3760 |
| NEMA,SG-3 ANSI C37.13 | 40 (standard ambient temperature) | 800 | 1250 | 1540 | 2000 | 2500 | 3200 | 3310 | 3700 |
| | 45 | 800 | 1190 | 1470 | 1960 | 2500 | 3010 | 3200 | 3580 |
| | 50 | 800 | 1130 | 1390 | 1860 | 2440 | 2860 | 3100 | 3470 |
| | 55 | 790 | 1070 | 1310 | 1750 | 2300 | 2690 | 2980 | 3350 |
| | 60 | 740 | 1000 | 1230 | 1640 | 2150 | 2520 | 2870 | 3140 |
| JEC-160 | 40 (standard ambient temperature) | 800 | 1100 | 1460 | 1740 | 2370 | 2610 | 2870 | 3230 |
| | 45 | 800 | 1060 | 1400 | 1680 | 2280 | 2510 | 2750 | 3100 |
| | 50 | 800 | 1010 | 1340 | 1600 | 2180 | 2400 | 2620 | 2970 |
| | 55 | 770 | 960 | 1280 | 1530 | 2080 | 2290 | 2490 | 2830 |
| | 60 | 730 | 920 | 1220 | 1450 | 1970 | 2170 | 2360 | 2690 |

| Type | | AR212H | AR216H | AR220H | AR316H | AR320H | AR325H | AR332H | AR420H | AR440H |
|---|-----------------------------------|-------------|--------------|--------------|--------------|--------------|---------------|---------------|--------------|--------------|
| Standard | Conductor size | 2 × 80 × 5t | 2 × 100 × 5t | 3 × 100 × 5t | 2 × 100 × 5t | 3 × 100 × 5t | 2 × 100 × 10t | 3 × 100 × 10t | 2 × 150 × 6t | 4 × 150 × 6t |
| | Ambient temperature (°C) | | | | | | | | | |
| IEC60947-2 EN60947-2 AS3947-2 JIS C8201-2-1 Ann.1 Ann.2 | 40 (standard ambient temperature) | 1250 | 1600 | 2000 | 1600 | 2000 | 2500 | 3200 | 2000 | 4000 |
| | 45 | 1250 | 1600 | 2000 | 1600 | 2000 | 2500 | 3200 | 2000 | 4000 |
| | 50 | 1250 | 1600 | 2000 | 1600 | 2000 | 2500 | 3200 | 2000 | 4000 |
| | 55 | 1250 | 1600 | 1820 | 1600 | 2000 | 2500 | 2990 | 2000 | 3940 |
| | 60 | 1250 | 1550 | 1740 | 1600 | 2000 | 2400 | 2850 | 2000 | 3760 |
| NEMA,SG-3 ANSI C37.13 | 40 (standard ambient temperature) | 1250 | 1600 | 2000 | 1600 | 2000 | 2500 | 3200 | *1 | 3700 |
| | 45 | 1250 | 1600 | 1960 | 1600 | 2000 | 2500 | 3010 | *1 | 3580 |
| | 50 | 1250 | 1600 | 1860 | 1600 | 2000 | 2440 | 2860 | *1 | 3470 |
| | 55 | 1250 | 1510 | 1750 | 1600 | 1950 | 2300 | 2690 | *1 | 3350 |
| | 60 | 1240 | 1420 | 1640 | 1550 | 1830 | 2150 | 2520 | *1 | 3140 |
| JEC-160 | 40 (standard ambient temperature) | 1250 | 1500 | 1740 | 1600 | 2000 | 2370 | 2610 | *1 | 3230 |
| | 45 | 1250 | 1440 | 1680 | 1600 | 2000 | 2280 | 2510 | *1 | 3100 |
| | 50 | 1250 | 1380 | 1600 | 1600 | 2000 | 2180 | 2400 | *1 | 2970 |
| | 55 | 1250 | 1310 | 1530 | 1600 | 1920 | 2080 | 2290 | *1 | 2830 |
| | 60 | 1230 | 1250 | 1450 | 1600 | 1820 | 1970 | 2170 | *1 | 2690 |

*1: Contact us.

Notes: For AR208S, AR212S and AR216S, it is assumed that main circuit terminals are of horizontal type at both the line and load sides. For other types, it is assumed that main circuit terminals are of vertical type at both the line and load sides. The above values may vary depending on the switchboard configuration.

3-2. Parts and Functions

Fig. 14 provides a general views of the ACB.

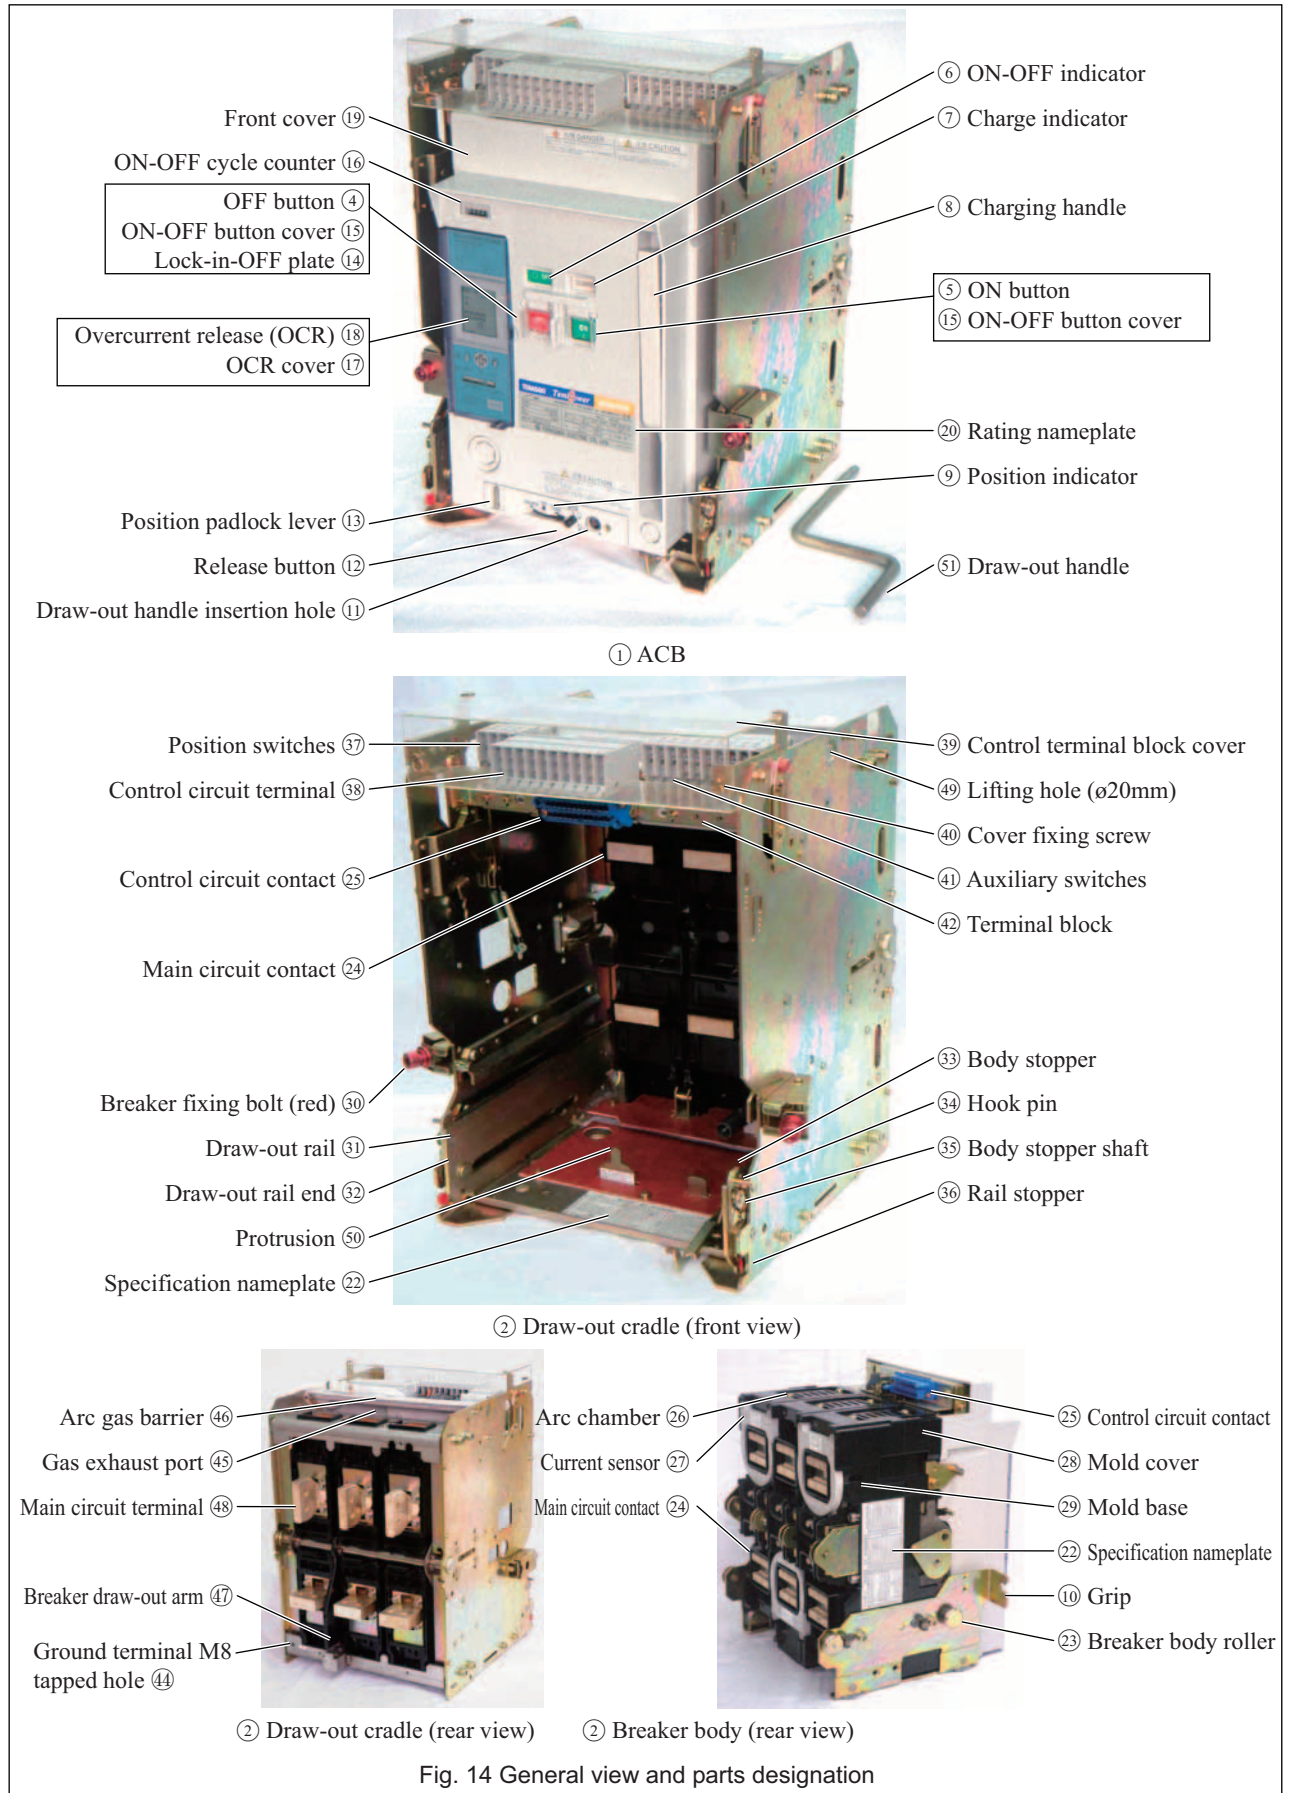


Fig. 14 General view and parts designation

| | | |
|---|--------------------------------------|--|
| ① | ACB | Consists of breaker body ③ and draw-out cradle ②. |
| ② | Draw-out cradle | Comes with main circuit terminals ④⑧, control circuit terminals ③⑧, auxiliary switches ④①, and position switches ⑤⑦. |
| ③ | Breaker body | Contains the ON-OFF mechanism, the closing coil, the tripping device, and overcurrent release ⑱. |
| ④ | OFF button | Push to open the ACB. |
| ⑤ | ON button | Push to close the ACB. |
| ⑥ | ON-OFF indicator | Shows “OFF” when the ACB is open and “ON” when it is closed. |
| ⑦ | Charge indicator | Shows “CHARGED” when the closing springs are charged and “DISCHARGED” when it is released. |
| ⑧ | Charging handle | Pump to charge the closing springs. |
| ⑨ | Position indicator | Indicates the present breaker body position: CONN., TEST, or ISOLATED. |
| ⑩ | Grip | Hold to draw out the breaker body. |
| ⑪ | Draw-out handle insertion hole | Insert the draw-out handle into this hole to move the breaker body. |
| ⑫ | Release button | Push to move the breaker body from the TEST position. |
| ⑬ | Position padlock lever (optional) | Accommodates up to three padlocks to lock the breaker body in the CONN., TEST or ISOLATED position. (Padlocks are not supplied. Use padlocks with a 6 mm-diameter shackle.) |
| ⑭ | Lock-in-OFF plate (optional) | Padlocking this plate allows the ACB to be locked in the open (OFF) state. (Padlocks are not supplied. Use padlocks with a 6 mm-diameter shackle.) |
| ⑮ | ON-OFF button cover | Provides protection against inadvertent button operation and can be padlocked. (Padlocks are not supplied. Use padlocks with a 6 mm-diameter shackle.) Up to three padlocks can be installed. |
| ⑯ | ON-OFF cycle counter (optional) | Reads the number of ON-OFF cycles. It counts a series of operations from close to open as one cycle. |
| ⑰ | OCR cover | Padlocking this plate prevents settings of overcurrent release ⑱ to be inadvertently changed. (Padlocks are not supplied. Use padlocks with a 6 mm-diameter shackle.) |
| ⑱ | Overcurrent release (OCR) | This protective device is supplied power via the power CT installed in the ACB main circuit. When the current sensor detects an overcurrent in the main circuit, the OCR instructs the magnet hold trigger (MHT) to trip open the ACB. |
| ⑲ | Front cover | A plastic cover of the breaker body front panel. |
| ⑳ | Rating nameplate | Indicates the type, applicable standards and rated breaking capacity of the ACB. |
| ㉒ | Specification nameplate | Indicates the number of poles, operation method, accessories, and serial number of the ACB. |
| ㉓ | Breaker body roller | Allows breaker body ③ to be moved on draw-out rail ⑳. |
| ㉔ | Main circuit contact | Closes when the breaker body is in the CONN. position. |
| ㉕ | Control circuit contact | Closes when the breaker body is in the CONN. or TEST position. |
| ㉖ | Arc chamber | Extinguishes the arc that occurs in the breaking operation. Two arc chambers are fitted per pole. See 6-2-2. "Arc chambers". |
| ㉗ | Current sensor | Converts the current in the main circuit into a voltage signal in proportion to the magnitude of the current and sends the signal to overcurrent release ⑱. |
| ㉘ | Mold cover | A plastic cover of the breaker body side face. |
| ㉙ | Mold base | A plastic cover of the breaker body rear face. |
| ㉚ | Breaker fixing bolt (red) (optional) | Allows the breaker body to be locked in the CONN. position even if the ACB is subject to strong vibrations. Standard equipped on ACBs that conform to ship classification society rules. |
| ㉛ | Draw-out rail | Use to draw out the breaker body from the draw-out cradle. |
| ㉜ | Draw-out rail end | Refer to chapter 1 “Operation Precautions”. |
| ㉝ | Body stopper | Refer to chapter 1 “Operation Precautions”. |
| ㉞ | Hook pin | Prevents the breaker body from falling when the body is drawn out from the draw-out cradle. |
| ㉟ | Body stopper shaft | Refer to chapter 1 “Operation Precautions”. |
| ㊱ | Rail stopper (red) | Allows the draw-out rail to be locked in the drawn-out or retracted state. |
| ㊲ | Position switches (optional) | Indicate the present breaker body position: CONN., TEST, ISOLATED or INSERTED. The position switches are available in 2C or 4C configuration. Connections to the position switches are made through M4 screws. |

| | | |
|----|---------------------------|--|
| ③⑧ | Control circuit terminals | Allow connections of external control wire to the control circuits. Wire connections are made through M4 screw terminals. Fig. 15 shows the control circuit terminals. |
|----|---------------------------|--|

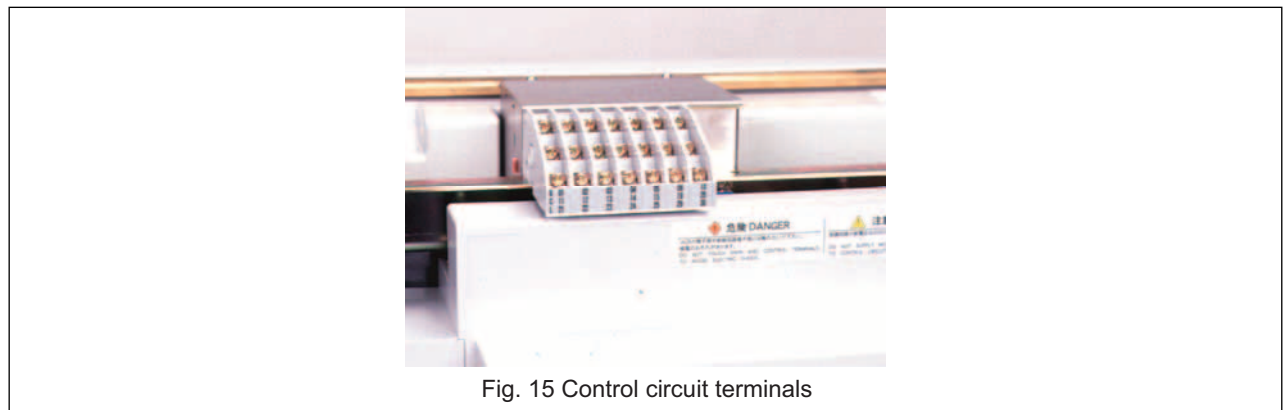


Fig. 15 Control circuit terminals

| | | |
|----|---|---|
| ③⑨ | Control terminal block cover (optional) | Protects the position switches, the control circuit terminals and the auxiliary switches from damage. |
| ④⑩ | Cover fixing screw | Secures the control terminal block cover. |
| ④① | Auxiliary switches | Indicate the state of the ACB (ON or OFF). The auxiliary switches are available in 4C configuration (standard), or 7C or 10C configuration (optional). Connections to the switches are made through M4 screw terminals. |
| ④② | Terminal block | Contains position switches ③⑥, control circuit terminals ③⑦, and auxiliary switches ③⑧. |
| ④④ | Ground terminal M8 tapped hole | Allows connection of a ground terminal. |
| ④⑤ | Gas exhaust port | Allows the arc gas to be discharged from arc chamber ②⑤ in a horizontal direction when the ACB trips open. |
| ④⑥ | Arc gas barrier | Prevents the arc gas from being discharged upwards from arc chamber ②⑤ when the ACB trips open. |
| ④⑦ | Breaker draw-out arm | Is retracted in the draw-out cradle when the breaker body is in the CONN. position. |
| ④⑧ | Main circuit terminals | Allow connections of external conductors. These terminals are available in three configurations as shown in Fig. 16. |

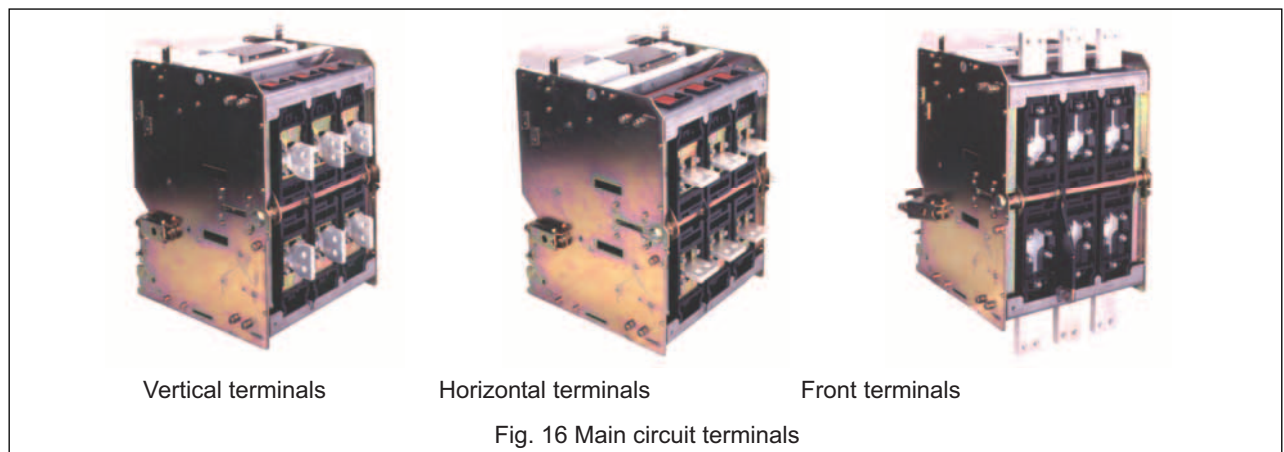


Fig. 16 Main circuit terminals

| | | |
|----|-----------------------------|--|
| ④⑨ | Lifting hole (ø20mm) | Allows lifting attachments or wire ropes to be used for lifting the ACB. |
| ⑤⑩ | Protrusion | Refer to section 2-3. "Installation Precautions". |
| ⑤① | Draw-out handle (removable) | Use to draw out /insert the breaker body from/into the draw-out cradle. |

3-3. Circuits and Ratings

Fig. 17 shows an ACB(AGR-11B) circuit diagram and Table 9 and Fig. 18 show the function of each terminal and the meaning of each sign in the diagram.

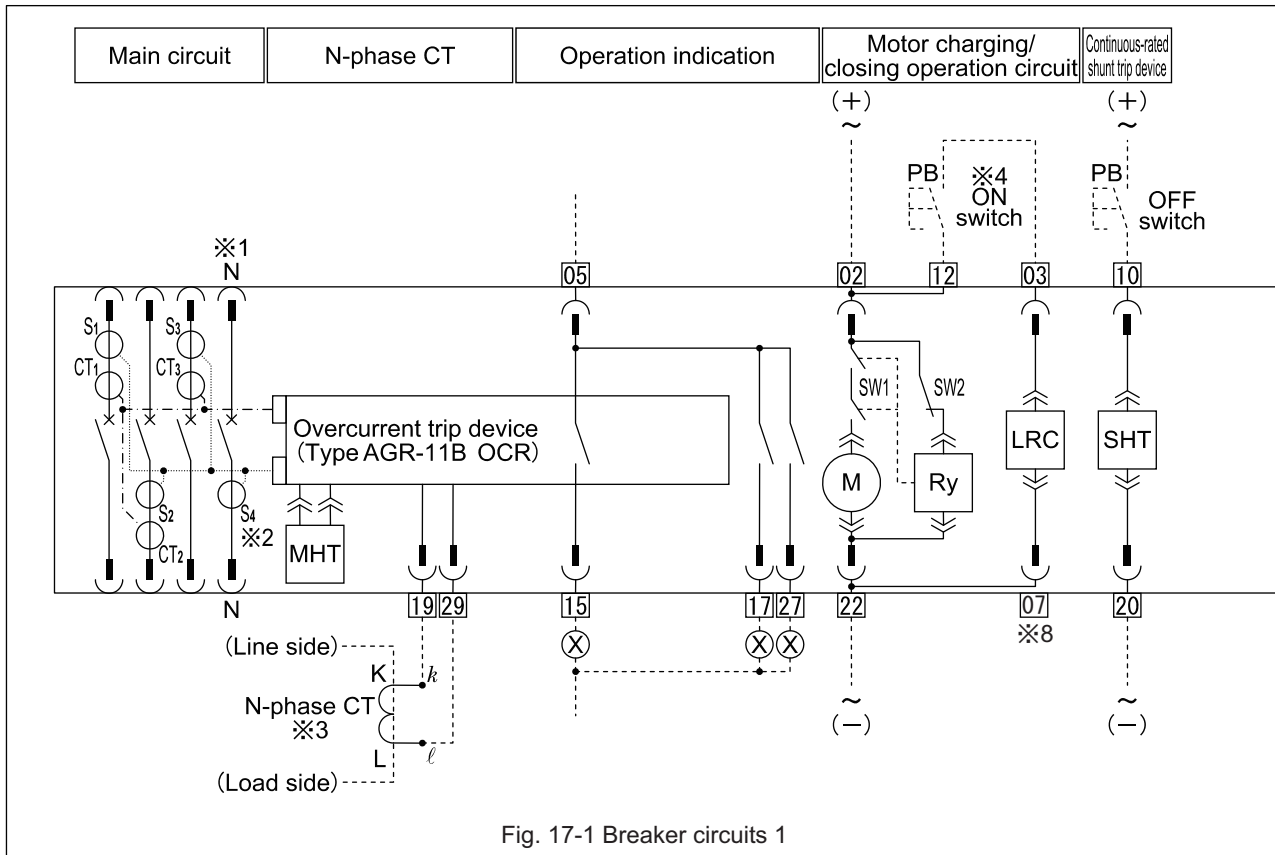


Fig. 17-1 Breaker circuits 1

Table 9-1 Terminal functions and circuit symbols 1 (Applicable to both 50 and 60Hz for AC. ⊕ and ⊖ mean the polarity for DC)

| Terminal No. | Function | | | | | | | | | | | | | | | | | |
|--|--|--|--------------|-------------|-------------|-------------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 02 ⊕, 22 ⊖ | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V (To be stated when ordering) | Operation power input terminals | | | | | | | | | | | | | | | | |
| 03, 12 | ON switch | Operation switch terminals | | | | | | | | | | | | | | | | |
| 05, 15 | Group indication | Operation indication contact output terminals | | | | | | | | | | | | | | | | |
| 05, 17 | Trip indication | | | | | | | | | | | | | | | | | |
| 05, 27 | Spring charged indication | | | | | | | | | | | | | | | | | |
| 10, 20 | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V (To be stated when ordering) | Shunt trip device power input terminals | | | | | | | | | | | | | | | | |
| 08, 09, 18, 28 | AC100V, AC200V or AC400V unit (To be stated when ordering) Connect the unit to the applicable terminal Nos. | Undervoltage trip device power input terminals | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th>Terminal No.</th> <th>AC100V unit</th> <th>AC200V unit</th> <th>AC400V unit</th> </tr> </thead> <tbody> <tr> <td>08, 09</td> <td>AC100V</td> <td>AC200V</td> <td>AC380V</td> </tr> <tr> <td>18, 09</td> <td>AC110V</td> <td>AC220V</td> <td>AC415V</td> </tr> <tr> <td>28, 09</td> <td>AC120V</td> <td>AC240V</td> <td>AC440V</td> </tr> </tbody> </table> | | Terminal No. | AC100V unit | AC200V unit | AC400V unit | 08, 09 | AC100V | AC200V | AC380V | 18, 09 | AC110V | AC220V | AC415V | 28, 09 | AC120V | AC240V | AC440V |
| | Terminal No. | | AC100V unit | AC200V unit | AC400V unit | | | | | | | | | | | | | |
| | 08, 09 | | AC100V | AC200V | AC380V | | | | | | | | | | | | | |
| 18, 09 | AC110V | AC220V | AC415V | | | | | | | | | | | | | | | |
| 28, 09 | AC120V | AC240V | AC440V | | | | | | | | | | | | | | | |
| 24, 30 | OFF switch | Undervoltage trip | | | | | | | | | | | | | | | | |
| 19, 29 | Polarity: 19 - k, 29 - l | N-phase CT connection terminals *3 | | | | | | | | | | | | | | | | |
| 01, 04, 06, 07, 11, 13, 14 16, 21, 23, 25, 26 | — | (Reserved) | | | | | | | | | | | | | | | | |

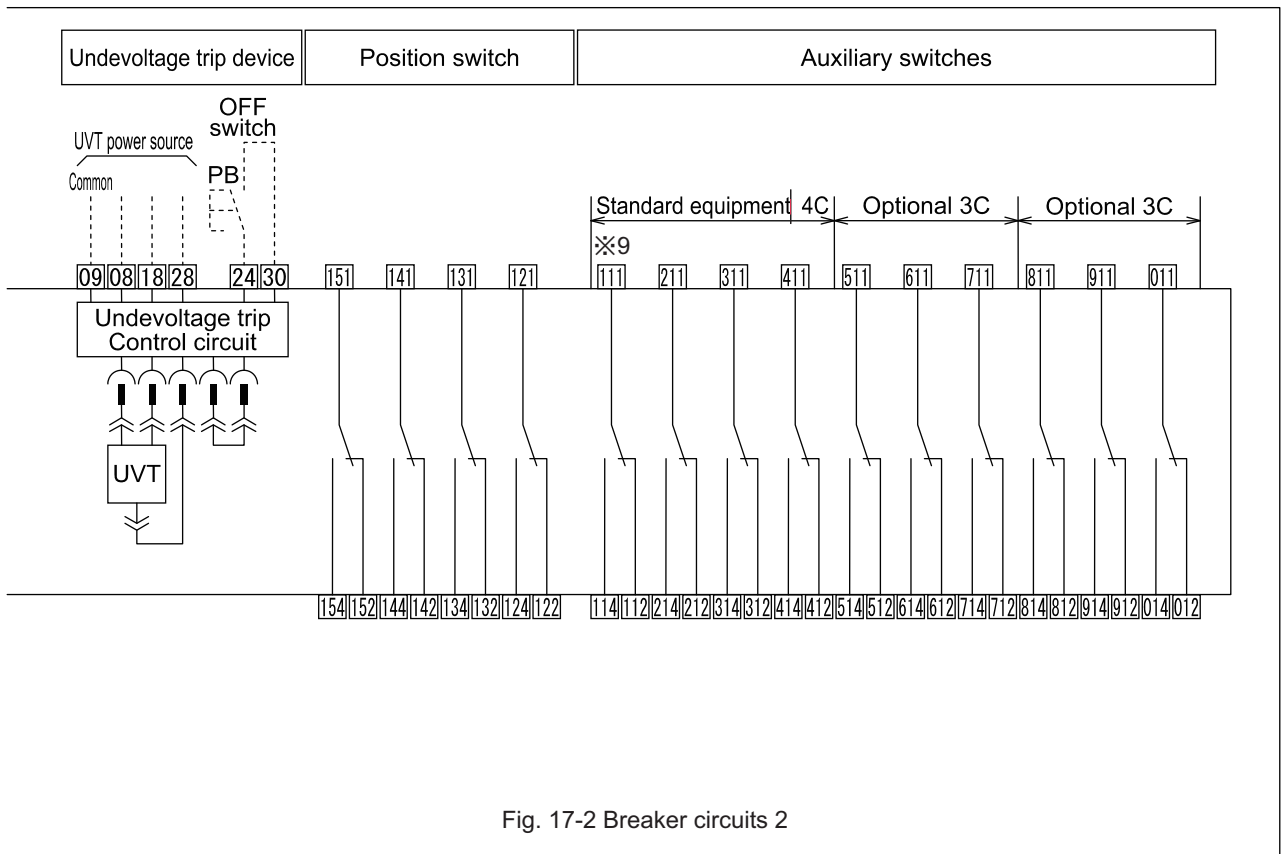


Fig. 17-2 Breaker circuits 2

Table 9-2 Terminal functions and circuit symbols 2

| Symbol | Meaning | Symbol | Meaning |
|-----------------------------------|-----------------------------|--------|------------------------------|
| S ₁ - S ₄ | Current sensors *5 | LRC | Latch release coil |
| CT ₁ - CT ₃ | Power supply CT *6 | SHT | Shunt trip device |
| MHT | Magnet hold trigger | UVT | Undervoltage trip device |
| M | Spring charging motor | | Main/control circuit contact |
| Ry | Control relay | | Hand connector |
| SW1 | Control relay a contact | ----- | User wiring |
| SW2 | Spring charged "OFF" switch | -⊗- | Relay or LED |

*1: For 4-pole ACBs.

*2: For 4-pole ACBs equipped with N-phase protection and/or ground fault trip functions.

*3: Used for 3-pole ACBs with ground fault trip functions to be installed in a 3-phase, 4-wire circuit.

*4: Do not connect the ON switch with auxiliary switch b-contact in series. Doing so may cause pumping.

*5: Conversion ratio: CT rated primary current I_{CT} (A)/150 mV

*6: Provide power to the overcurrent trip device.

*7: When you close in LRC after cut the signal of SHT, please open the interval more than 200ms.

*8: For motor split circuit, terminals, , , and are used for charging and closing operation respectively.

*9: Do not use these terminals for other circuits when both instantaneously rated shunt trip and UVT are fitted. These terminals are used by Terasaki as the anti-burnout SW for the instantaneously rated shunt trip.

*10: Permissible voltage range of latch release coil and shunt trip device are the operation of the standard ambient temperature, which is defined as a standard (please see table 5.).

If it is used in environments other than unregulated environment, or it is used at all times energized purposes need not be in interlocking etc., it is recommended to install a self-switching switch to block excitation in conjunction with the operation of the circuit breaker.

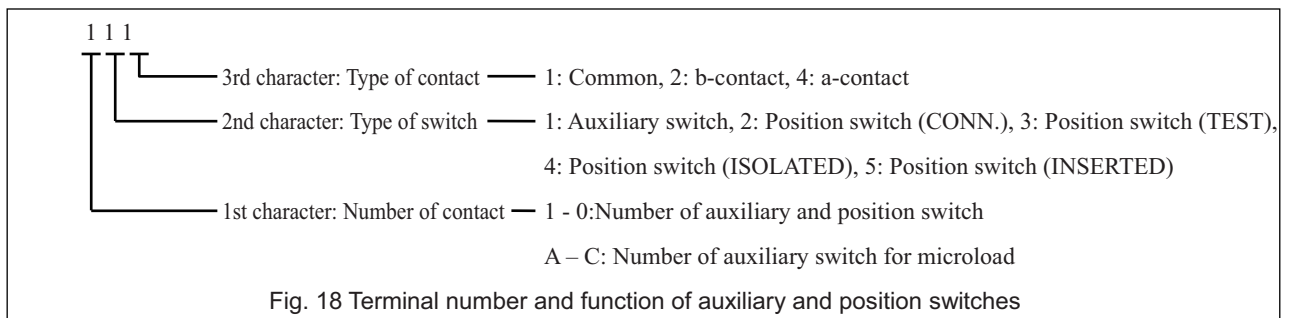


Fig. 18 Terminal number and function of auxiliary and position switches

Fig. 19 shows an ACB(AGR-21B,22B,31B) circuit diagram and Table 10 and Fig. 18 show the function of each terminal and the meaning of each sign in the diagram.

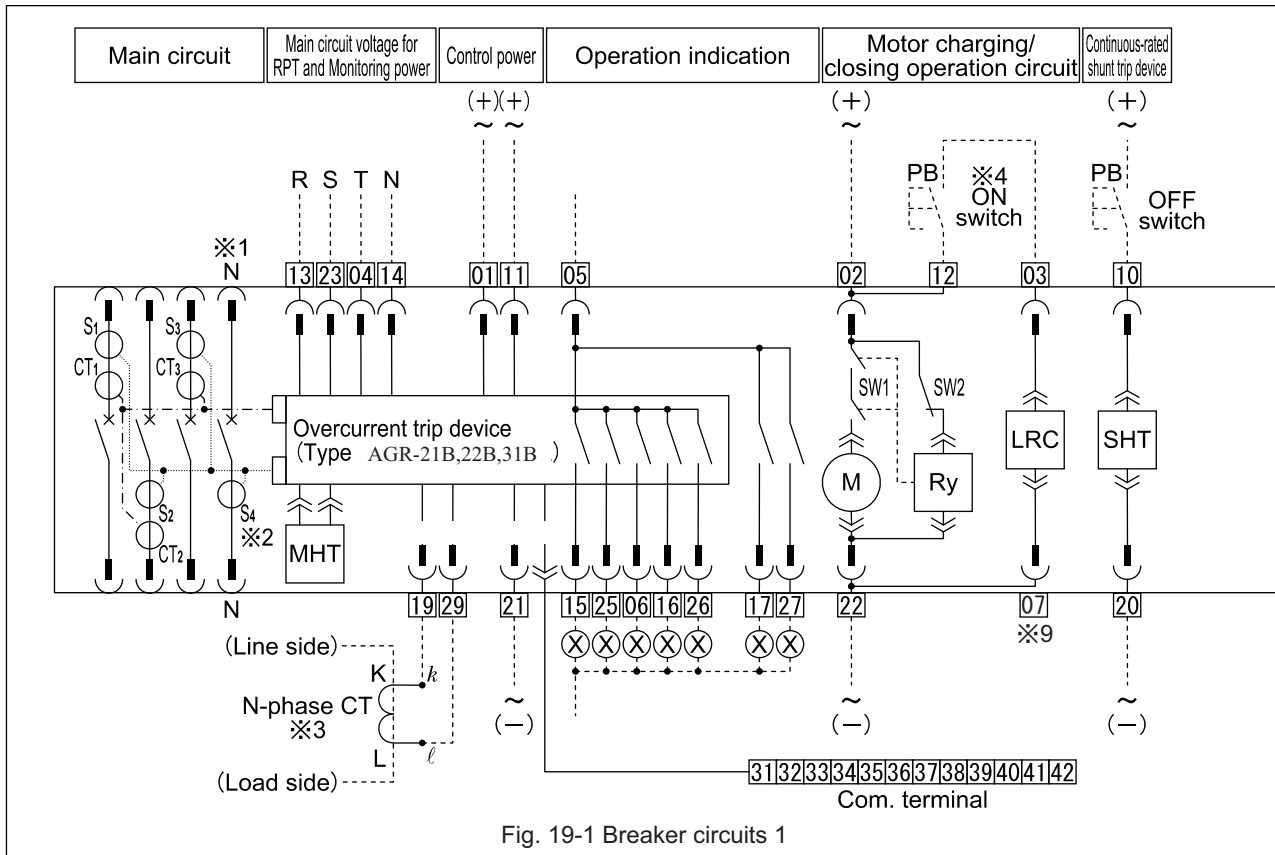


Fig. 19-1 Breaker circuits 1

Table 10-1 Terminal functions and circuit symbols 1 (Applicable to both 50 and 60Hz for AC. ⊕ and ⊖ mean the polarity for DC)

| Function | Terminal No. | Remarks | | | | |
|---|----------------|--|-----------------|--|--|--|
| | | Terminal No. | Circuit voltage | | | |
| Control power supply | 01, 11, 21 | Connect the unit to the applicable terminal Nos. | 01 - 11 | When compatible with both AC100 - 120V and AC200 - 240V power *5 | When compatible with both DC100 - 125V and DC200 - 250V power *5 | When compatible with both DC24V and DC48V power *5 |
| | | | 11 ⊕ 21 ⊖ | AC100 - 120V | NA | NA |
| | | | 01 ⊕ 21 ⊖ | NA | DC100 - 125V | DC24V |
| | | | 01 ⊕ 21 ⊖ | AC200 - 240V | DC200 - 250V | DC48V |
| Operation power | 02 ⊕ - 22 ⊖ | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V *5 | | | | |
| ON switch | 03 - 12 | | | | | |
| Undervoltage trip device power | 08, 09, 18, 28 | Connect the unit to the applicable terminal Nos. | 08 - 09 | Circuit voltage | | |
| | | | 09 - 18 | AC100V compatible *5 | AC200V compatible *5 | AC400V compatible *5 |
| | | | 09 - 18 | AC100V | AC200V | AC380V |
| | | | 09 - 28 | AC110V | AC220V | AC415V |
| OFF switch | 24 - 30 | Available for ACBs equipped with undervoltage trip device | | | | |
| Continuous-rated shunt trip device power and OFF switch | 10 - 20 | AC100V, AC110V, AC120V, AC200V, AC220V, AC240V, DC24V, DC48V, DC100V, DC110V, DC125V, DC200V or DC220V *5 | | | | |
| Operation indication | 05 - 15 | Long time delay trip (LT) | | | | |
| | 05 - 25 | Short time delay (ST) and instantaneous trip (INST/MCR) | | | | |
| | 05 - 06 | Pretrip alarm (PTA) | | | | |
| | 05 - 16 | Ground fault trip (GF) or reverse power trip (RPT) *5 | | | | |
| | 05 - 26 | System alarm | | | | |
| | 05 - 17 | Line side ground fault (REF), negative-phase sequence protection (NS), contact overheat monitoring (OH) or tripping operation *5 | | | | |
| | 05 - 27 | Pretrip alarm 2 (PTA2), undervoltage alarm (UV) or spring charge operation *5 | | | | |
| Main circuit input voltage | 13, 23, 04, 14 | R-phase - 13, S-phase - 23, T-phase - 04, N-phase - 14 | | | | |
| Separate N-phase CT | 19 - 29 | Polarity: 19 (31) - k, 29 (32) - l *3 | | | | |
| Line side ground fault protection (REF) CT | 35 - 36 | Polarity: 35 - k, 36 - l | | | | |
| Zone interlock control power | 33 ⊕ - 34 ⊖ | DC24V | | | | |
| Zone interlock signal I/O | 37, 38, 39, 40 | See Fig. 21. | | | | |
| Communication signal I/O | 41 ⊖ - 42 ⊕ | | | | | |
| Communication signal Common | 32 | | | | | |
| (Reserved) | 07 | - | | | | |

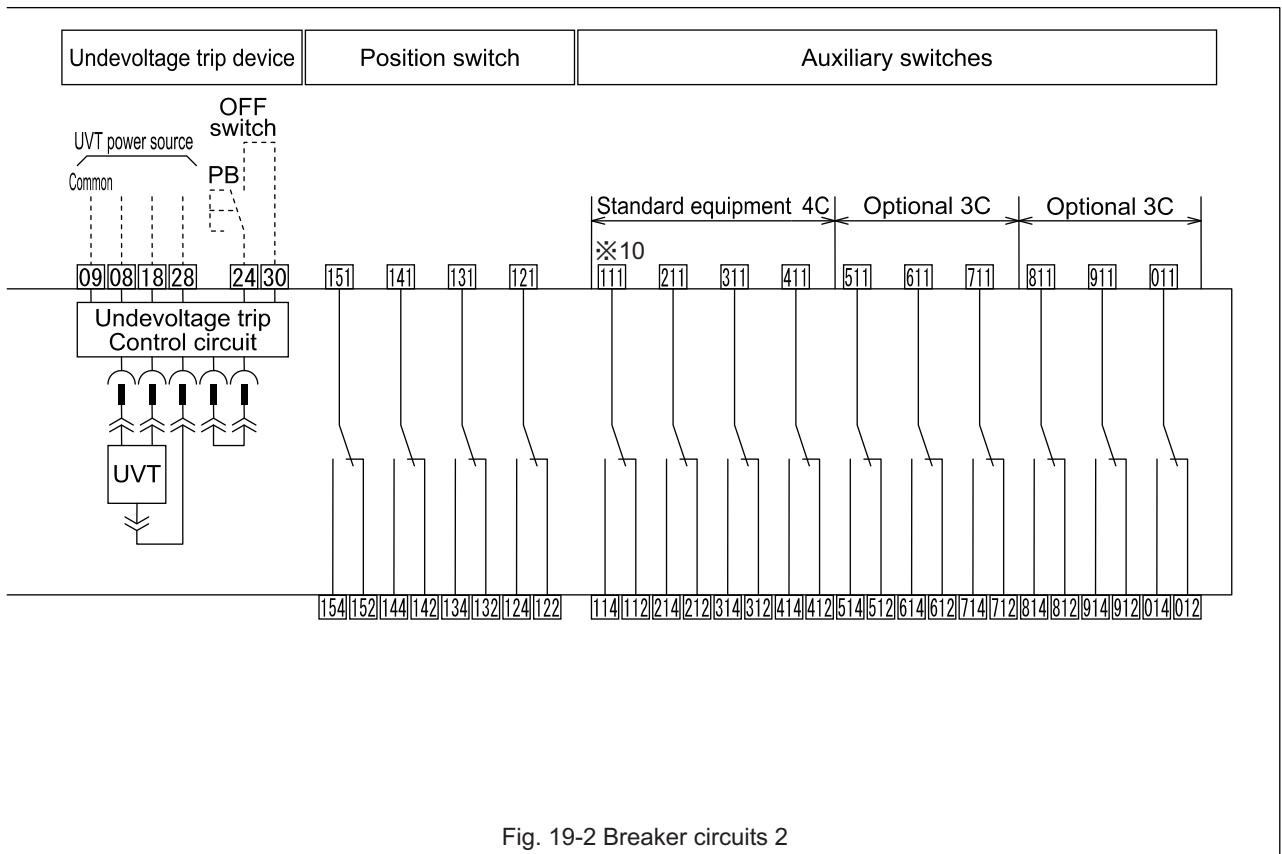


Fig. 19-2 Breaker circuits 2

Table 10-2 Terminal functions and circuit symbols 2

| Symbol | Meaning | Symbol | Meaning |
|-----------------------------------|-----------------------------|--------|------------------------------|
| S ₁ - S ₄ | Current sensors *6 | LRC | Latch release coil |
| CT ₁ - CT ₃ | Power supply CT *7 | SHT | Shunt trip device |
| MHT | Magnet hold trigger | UVT | Undervoltage trip device |
| M | Spring charging motor | | Main/control circuit contact |
| Ry | Control relay | | Hand connector |
| SW1 | Control relay a contact | ----- | User wiring |
| SW2 | Spring charged "OFF" switch | | Relay or LED |

*1 For 4-pole ACBs.

*2 For 4-pole ACBs equipped with N-phase protection and/or ground fault trip functions.

*3 Used for 3-pole ACBs with ground fault trip functions to be installed in a 3-phase, 4-wire circuit.

*4 Do not connect the ON switch with auxiliary switch b-contact in series. Doing so may cause pumping.

*5 To be stated when ordering

*6 Conversion ratio: CT rated primary current I_{CT} (A)/150 mV

*7 Provide power to the overcurrent trip device when control power is lost.

*8: When you close in LRC after cut the signal of SHT, please open the interval more than 200ms.

*9: For motor split circuit, terminals, , and , are used for charging and closing operation respectively.

*10: Do not use these terminals for other circuits when both instantaneously rated shunt trip and UVT are fitted. These terminals are used by Terasaki as the anti-burnout SW for the instantaneously rated shunt trip.

*11: Permissible voltage range of latch release coil and shunt trip device are the operation of the standard ambient temperature, which is defined as a standard (please see table 5.).

If it is used in environments other than unregulated environment, or it is used at all times energized purposes need not be in interlocking etc., it is recommended to install a self-switching switch to block excitation in conjunction with the operation of the circuit breaker.

Fig. 20 provides the terminal arrangement of the ACB.

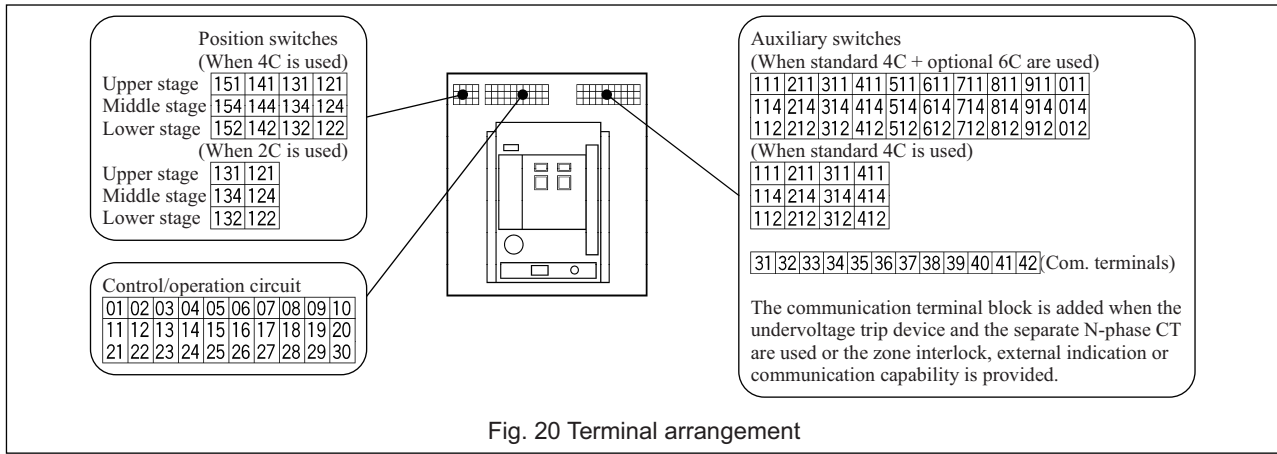


Fig. 21 shows how to connect the line side ground fault protection (REF) CT when the overcurrent release (OCR) is provided with the REF capability. See Fig. 19 for other circuits than that of the line side ground fault protection CT.


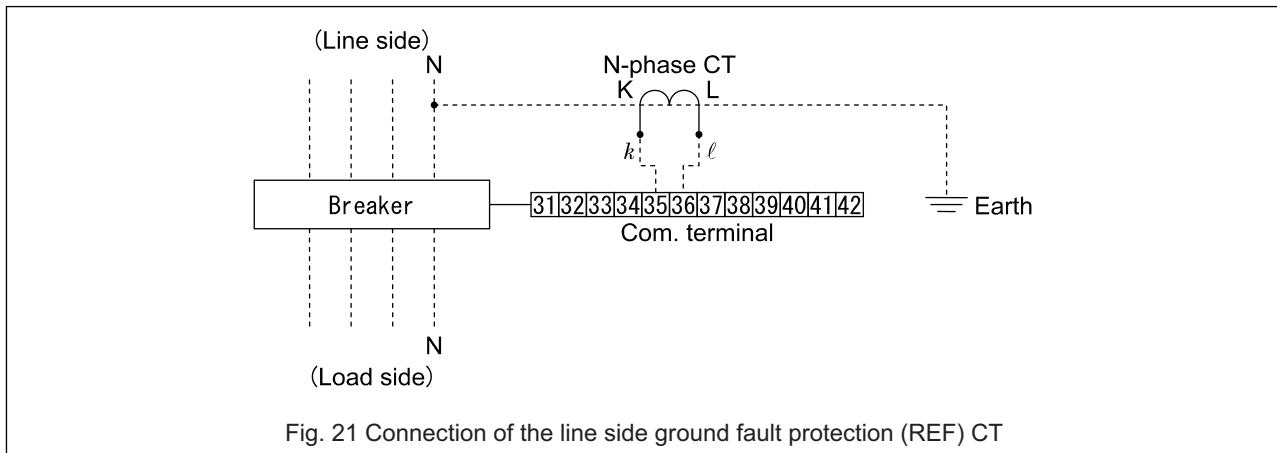


Fig. 22 shows how to connect ACBs when the overcurrent release (OCR) is provided with the zone interlock (Z) capability. See Fig. 19 for other circuits than that of the zone interlock.

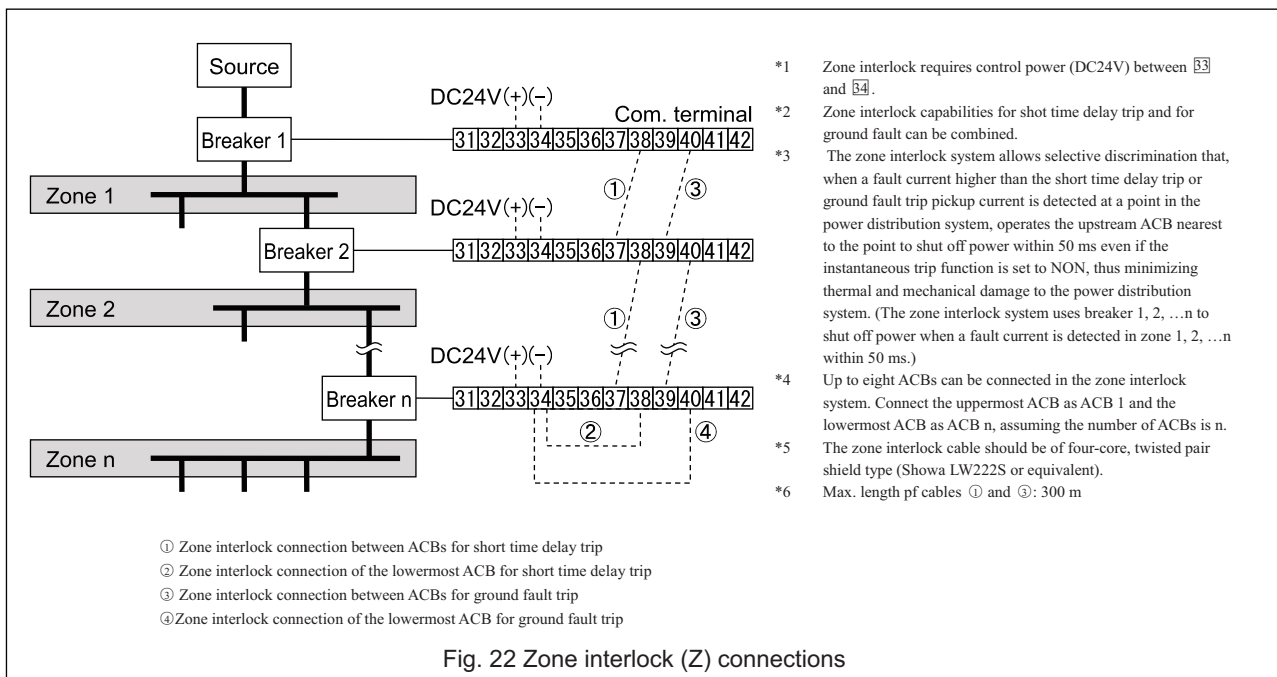

Tables 11 - 16 show the ratings of the operation power supply, the shunt trip device (SHT), the undervoltage trip device (UVT), auxiliary switches, position switches, operation indication contacts, and the N-phase CT.

Table 11 Ratings of operation power supply

| Rated voltage (V) | Permissible charging/closing voltage range | Ratings of operation power supply | | | |
|-------------------|--|-----------------------------------|--------------------------------|-------------------------|---|
| | | Peak motor starting current (A) | Steady-state motor current (A) | Peak making current (A) | Latch release coil (LRC) resistance (ohm) * |
| AC100 | 85 - 110 | 7 | 1.1 | 0.29 | 300-380 |
| AC110 | 94 - 121 | 7 | 1.1 | 0.25 | 350-440 |
| AC120 | 102 - 132 | 7 | 1.1 | 0.22 | 440-540 |
| AC200 | 170 - 220 | 4 | 0.7 | 0.15 | 1130-1390 |
| AC220 | 187 - 242 | 4 | 0.7 | 0.13 | 1410-1740 |
| AC240 | 204 - 264 | 4 | 0.7 | 0.11 | 1710-2090 |
| DC24 | 18 - 26 | 14 | 4 | 1.04 | 20-26 |
| DC48 | 36 - 53 | 10 | 1.6 | 0.51 | 85-105 |
| DC100 | 75 - 110 | 6 | 0.8 | 0.25 | 350-440 |
| DC110 | 82 - 121 | 6 | 0.8 | 0.22 | 440-540 |
| DC125 | 93 - 138 | 6 | 0.8 | 0.21 | 540-680 |
| DC200 | 150 - 220 | 4 | 0.5 | 0.13 | 1410-1740 |
| DC220 | 165 - 242 | 4 | 0.5 | 0.12 | 1710-2090 |

* Ambient temperature: 20°C

Table 12 Ratings of shunt trip device (SHT)

| Rated voltage (V) | Permissible voltage range (V) | Peak exciting current (max.) (A) | Coil resistance (ohm) * | Max. contact parting time (ms) |
|-------------------|-------------------------------|----------------------------------|-------------------------|--------------------------------|
| AC100 | 70-110 | 0.29 | 300-380 | 50 |
| AC110 | 77-121 | 0.25 | 350-440 | |
| AC120 | 84-132 | 0.22 | 440-540 | |
| AC200 | 140-220 | 0.15 | 1130-1390 | |
| AC220 | 154-242 | 0.13 | 1410-1740 | |
| AC240 | 168-264 | 0.11 | 1710-2090 | |
| DC24 | 16.8-26.4 | 1.04 | 20-26 | |
| DC48 | 33.6-52.8 | 0.51 | 85-105 | |
| DC100 | 70-110 | 0.25 | 350-440 | |
| DC110 | 77-121 | 0.22 | 440-540 | |
| DC125 | 87.5-137.5 | 0.21 | 540-680 | |
| DC200 | 140-220 | 0.13 | 1410-1740 | |
| DC220 | 154-242 | 0.12 | 1710-2090 | |

* Ambient temperature: 20°C

Table 13 Ratings of undervoltage trip device (UVT)

| Rated voltage (V) | Opening voltage range (V) | Attraction voltage (V) | Coil exciting current (A) | Power consumption (VA) | | Coil resistance (ohm) * |
|-------------------|---------------------------|------------------------|---------------------------|------------------------|------------|---|
| | | | | Normal | Attraction | |
| AC100 | 35 - 70 | 85 | 0.1 | 8 | 10 | Holding coil: 410 – 510 Attraction coil: 5.6-6.8 |
| AC110 | 38.5 - 77 | 93.5 | | | | |
| AC120 | 42 - 84 | 102 | | | | |
| AC200 | 70 - 140 | 170 | | | | |
| AC220 | 77 - 154 | 187 | | | | |
| AC240 | 84 - 168 | 204 | | | | |
| AC380 | 133 - 266 | 323 | | | | |
| AC415 | 145 - 290 | 352 | | | | |
| AC440 | 154 - 308 | 374 | | | | |
| DC24 | 8.4-16.8 | 20.4 | | | | |
| DC48 | 16.8-33.6 | 40.8 | | | | |
| DC100 | 35-70 | 85 | | | | |

* Ambient temperature: 20°C

Table 14 Ratings of auxiliary and position switches

| Voltage (V) | Auxiliary switches *1 *2 | | | | Position switches | |
|-------------|--------------------------|--------------------------|--------------------|--------------------------|--------------------|--------------------------|
| | For general feeder | | For microload *3 | | Resistive load (A) | Inductive load (A) *5 |
| | Resistive load (A) | Inductive load (A) *4 | Resistive load (A) | Inductive load (A) *5 | | |
| AC100 - 250 | 5 | 5 | 0.1 | 0.1 | 11 | 6 |
| AC251 - 500 | 5 | 5 | - | - | - | - |
| DC8 | - | - | - | - | 10 | 6 |
| DC30 | 1 | 1 | 0.1 | 0.1 | 6 | 5 |
| DC125 | - | - | - | - | 0.6 | 0.6 |
| DC250 | - | - | - | - | 0.3 | 0.3 |
| DC125 - 250 | 1 | 1 | - | - | - | - |

*1 Using b-contact results in contact chatter of 20 ms or less when the ACB opens or closes.

*2 Do not apply different voltages to contacts of a switch.

*3 Min. applicable load: DC5V/1 mA

*4 AC cosφ ≥ 0.3, DC L/R ≤ 0.01

*5 AC cosφ ≥ 0.6, DC L/R ≤ 0.007

Table 15-1 Ratings of operation indication contacts (In case of AGR-11B)

| Voltage (V) | Rated contact current (A) | | | |
|-------------|---------------------------|--------------------------|------------------------------------|--------------------------|
| | Group indication | | Spring charging/tripping operation | |
| | Resistive load (A) | Inductive load (A) *1 *3 | Resistive load (A) | Inductive load (A) *2 *3 |
| AC250 | 3 | 3 | 3 | 3 |
| DC30 | 3 | 3 | 3 | 2 |
| DC125 | 0.5 | 0.25 | 0.5 | 0.5 |
| DC250 | 0.3 | 0.15 | 0.1 | 0.1 |

*1: AC cosφ ≥ 0.3, DC L/R ≤ 0.007

*2: AC cosφ ≥ 0.6, DC L/R ≤ 0.007

*3: Min. applicable load: DC5V/1 mA

Table 15-2 Ratings of operation indication contacts (In case of AGR-21B, 22B, 31B)

| Voltage (V) | Rated contact current (A) | | | |
|-------------|--|-----------------------|------------------------------------|-----------------------|
| | Individual indication Long-time delay trip, short-time delay trip, instantaneous trip, pretrip alarm, ground fault trip, system alarm | | Spring charging/tripping operation | |
| | Resistive load (A) | Inductive load (A) *1 | Resistive load (A) | Inductive load (A) *1 |
| AC250 | 0.5 | 0.2 | 3 | 3 |
| DC30 | 2 | 0.7 | 3 | 2 |
| DC125 | 0.5 | 0.2 | 0.5 | 0.5 |
| DC250 | 0.27 | 0.04 | 0.1 | 0.1 |

*1 AC cosφ ≥ 0.6, DC L/R ≤ 0.007

Table 16 Ratings of N-phase CT

| Type of ACB | Type of N-phase CT | Ratings (A) | | |
|---|--------------------|-------------|---------|---------|
| AR208S, AR212S, AR216S | CW80-40LS | 200/5A | 400/5A | 800/5A |
| AR212H, AR216H, AR316H | | 1250/5A | 1600/5A | |
| AR220S, AR325S, AR332S, AR440S | EC160-40LS | 1600/5A | 2000/5A | 2500/5A |
| AR220H, AR320H, AR325H, AR332H AR440SB, AR420H, AR440H | | 3200/5A | 4000/5A | |

4. OPERATION

4-1. Charging and Opening operation

⚠ DANGER

- Never touch live terminal parts. Otherwise, electric shock may result.

⚠ CAUTION

- Do not force down the charging handle after completion of manual charging operation. Doing so may cause a malfunction.
- The permissible operating voltage of the spring charging motor is 85 to 110% of the rated ac voltage or 75 to 110% of the rated dc voltage. Be sure to supply a voltage within the above ranges to the motor. Otherwise, burnout may result.
- Repeated open/close operation by the motor charging mechanism without pause should not exceed 15 times. If repeated continuous open/close operation is inevitable, a pause of at least 20 minutes should be provided after the repetitions of 15 times. Otherwise, a spring charging motor may be burnt out.
- Do not bring your hand or face close to arc gas vent of the arc chamber while the ACB is energized. Otherwise, a burn may result from high-temperature arc gas blowing out of the arc gas vent when the ACB trips open.
- If the ACB trips open automatically, remove the cause of tripping operation before re-closing the ACB. Otherwise, a fire could result.
- If the ACB has the breaker fixing bolts, make sure the bolts on both sides are securely tightened before using the ACB. Loosened fixing bolts may cause a malfunction of the ACB, in particular when it is installed in such an area that is subject to strong vibrations.


The ACBs are available in two types in terms of the closing spring charging method and the remote operation capability: a manual charging type and a motor charging type. The manual charging type requires the charging and ON-OFF (close/open) operation to be done manually while the motor charging type allows the operation to be done either manually or by using a motor.

4-1-1. Charging operation

The ACB can be closed only when the closing springs have been charged. Be sure to charge the closing springs before closing the ACB. The charging operation is permitted, regardless of whether the ACB is ON (closed) or OFF (open). The procedure for charging the closing springs is as follows:

● Manual charging

Pump the charging handle (Fig. 23 ②) until the charge indicator (Fig. 23 ①) shows "CHARGED". Pumping the handle with the full stroke 10 - 13 times will fully charge the closing springs.

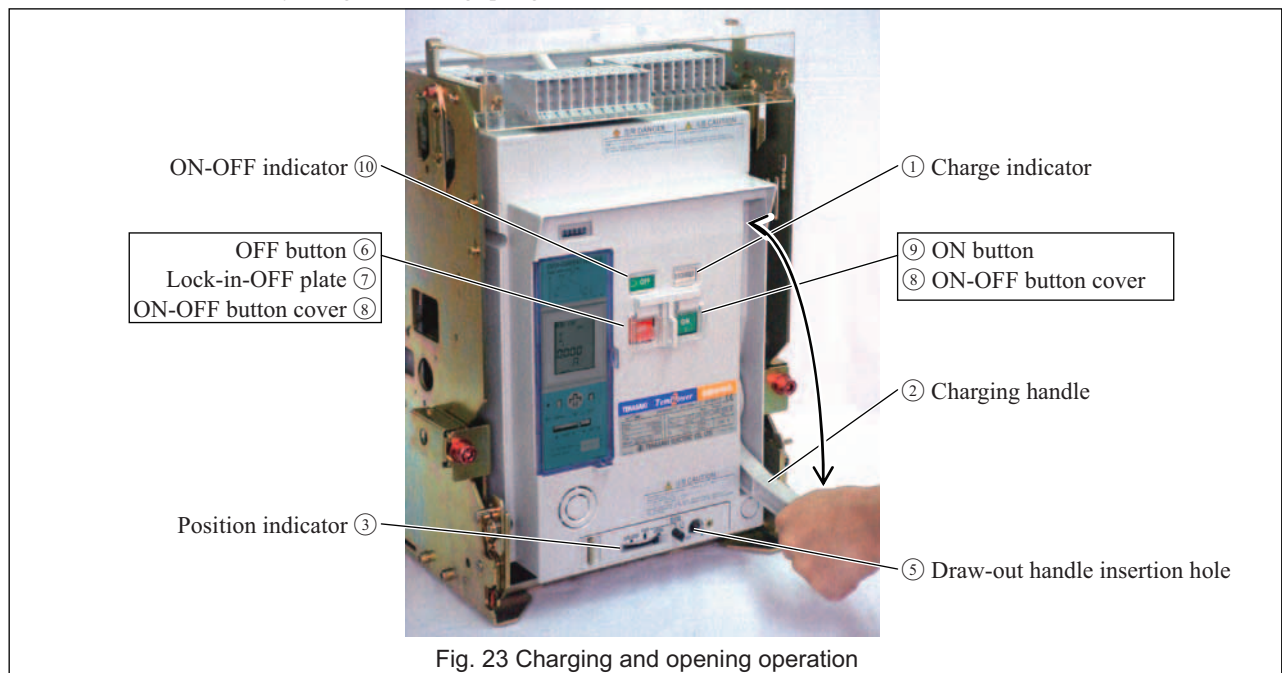

● **Motor charging**

When the charge indicator (Fig. 23 ①) changes to “DISCHARGED” while the specified operation voltage is applied to the control circuit terminals ⑫ and ⑬, the charging motor is activated to start charging the closing springs. Upon completion of the charging operation, the charge indicator shows “CHARGED” and the charging motor is automatically deactivated. The time required for the motor charging operation depends on the operation voltage or the ACB types, but does not exceed 10 seconds.

4-1-2. Closing operation

The ACB closing operation is not permitted unless all of the following conditions are met.

- 1) The charge indicator (Fig. 23 ①) shows "CHARGED".
- 2) In the manual opening operation, the position indicator (Fig. 23 ③) shows "CONN.", "TEST" or "ISOLATED" (a halfway position not permitted). In the electrical opening operation, the operating voltage is given to the control circuit terminals ⑫ and ⑬, and the position indicator (Fig. 26③) points to "CONN" or "TEST" (not in the intermediate position).
- 3) The draw-out handle is not inserted in the draw-out handle insertion hole(Fig. 23 ⑤) .
- 4) The OFF button (Fig. 23 ⑥) is not locked with the lock-in-OFF plate (Fig. 23 ⑦).
- 5) The specified voltage is supplied to the undervoltage trip device .

The control power of the overcurrent release (OCR) must be supplied before closing operation in order that the internal program can be started. If the OCR trips open directly after the control power is supplied to the OCR, operation indication may be incorrect.

● **Manual closing**

Open the ON-OFF button cover (Fig. 23 ⑧) and press the ON button (Fig. 23 ⑨). The ACB will be closed with a sound. The ON-OFF indicator (Fig. 23 ⑩) shows "ON" and the charge indicator (Fig. 23 ①) shows "DISCHARGED".

● **Electrical closing**

Press the ON switch shown in Fig. 17,19. The latch release coil (LRC) (Fig. 17,19) will be excited and the ACB is closed with a sound. The ON-OFF indicator (Fig. 23 ⑩) shows "ON", the charge indicator (Fig. 23 ①) shows "DISCHARGED", and the charging motor starts charging the closing springs.

4-1-3. Opening operation

● **Manual opening**

Open the ON-OFF button cover (Fig. 23 ⑧) and press the OFF button (Fig. 23 ⑪). The ACB will trip open with a sound. The ON-OFF indicator (Fig. 23 ⑩) shows "OFF".

● **Electrical opening**

Press the OFF switch shown in Fig. 17,19. The shunt trip device (SHT) or the fixed type undervoltage trip device (Fig. 17,19) will be excited so that the ACB trips open with a sound. The ON-OFF indicator (Fig. 23 ⑩) shows "OFF".

4-1-4. Motion of trip indication and spring charge indication switches

The trip indication and spring charge indication switches provide the breaker status as shown in Table 16.



Table 17 Motion of trip indication and spring charge indication switches

| Type of OCR | Operation | Terminal No. See Fig. 17 | Contact output | | | | |
|-------------|---------------|-----------------------------|------------------|-----------|------------|-----------|-----------|
| | | | State | | | | |
| | | | Closing spring | | ACB closed | ACB open | |
| Charged | Discharged | Not ready to close * | Ready to close * | | | | |
| All | Trip | ⑮, ⑰ | No change | No change | OFF | ON | OFF |
| | Spring charge | ⑮, ⑲ | ON | OFF | No change | No change | No change |

* "Ready to close" means that all of the following conditions are met:
 1. The closing springs are charged.
 2. Opening operation is complete (At least 40 ms has elapsed after trip signal was produced).
 3. The OFF button is released.
 4. The specified voltage is applied to the undervoltage trip device (if equipped).

4-1-5. Motion of operation mechanisms

Figs. 24 - 27 illustrate the motion of the charging and ON-OFF mechanisms.

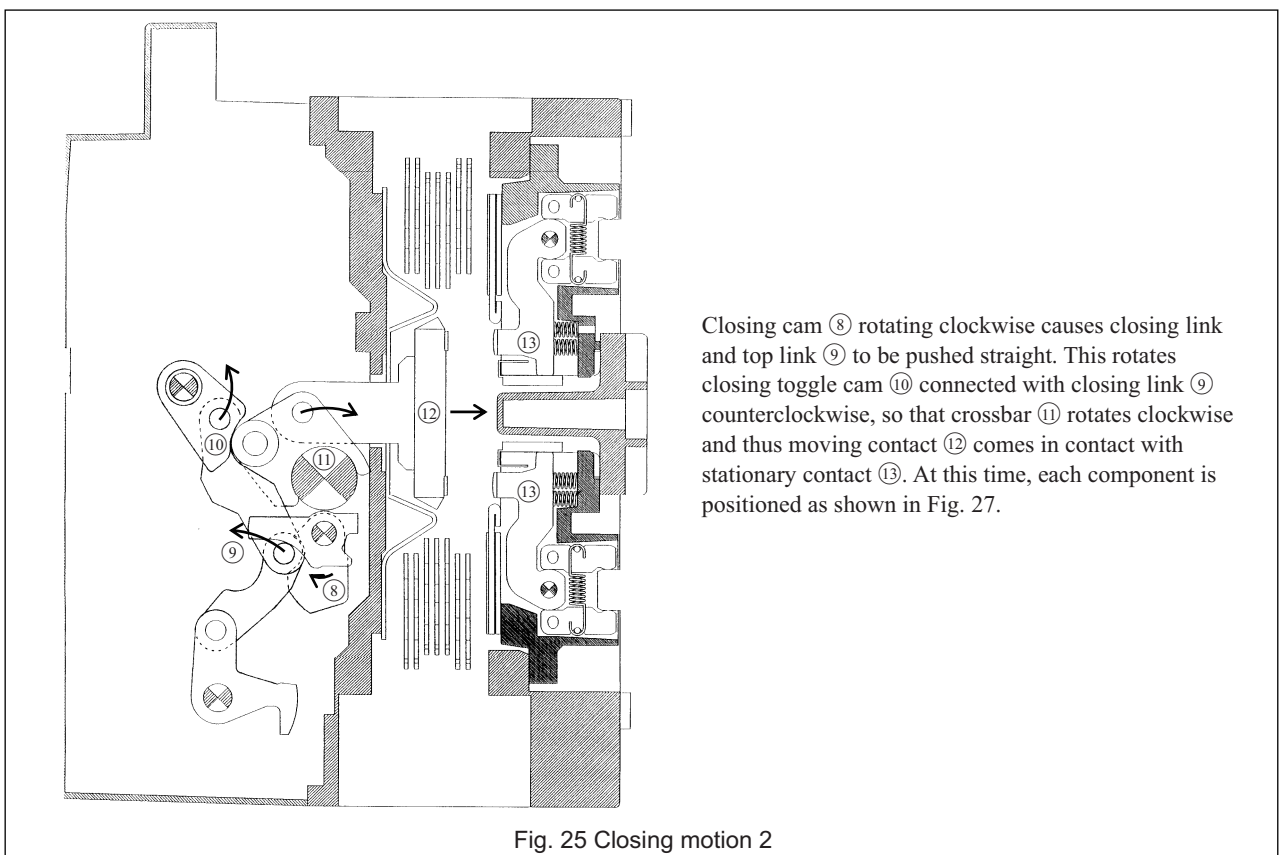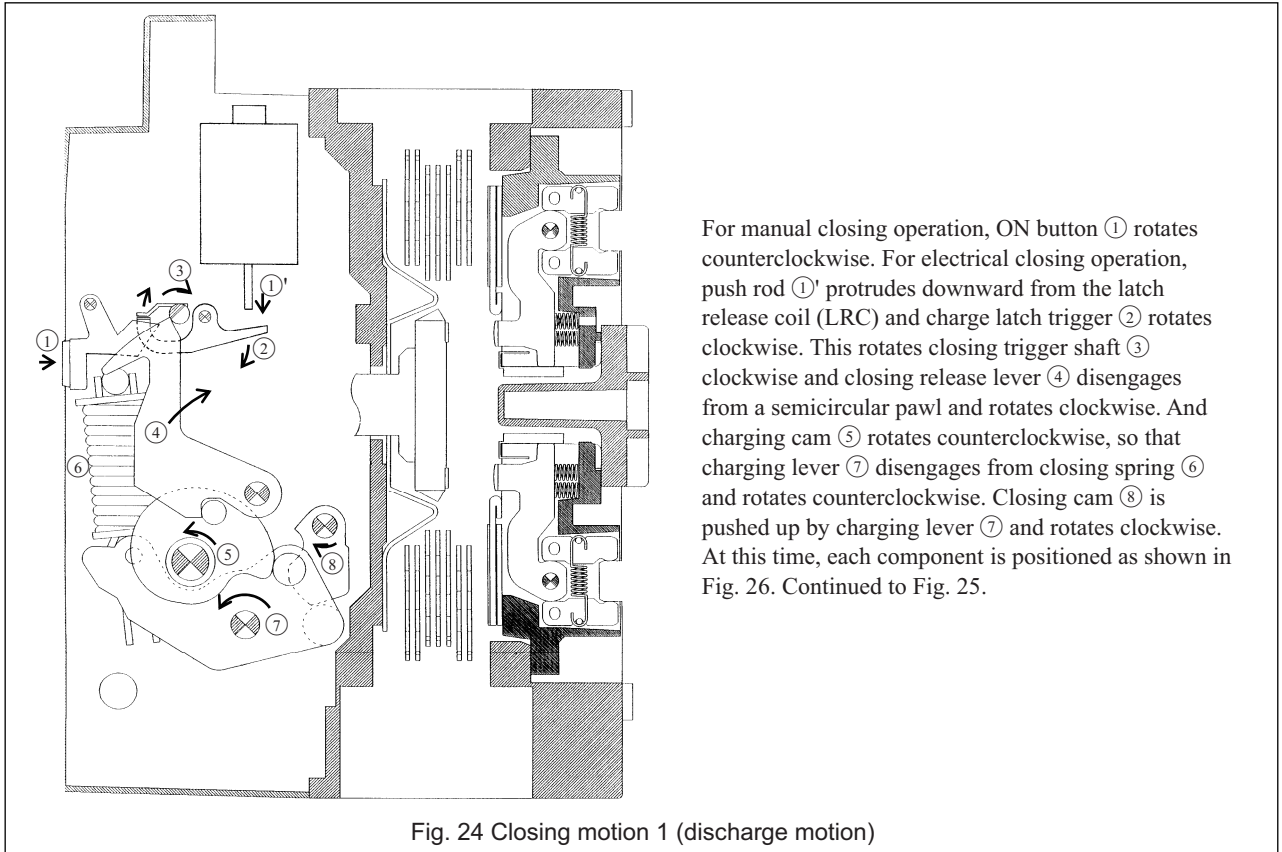

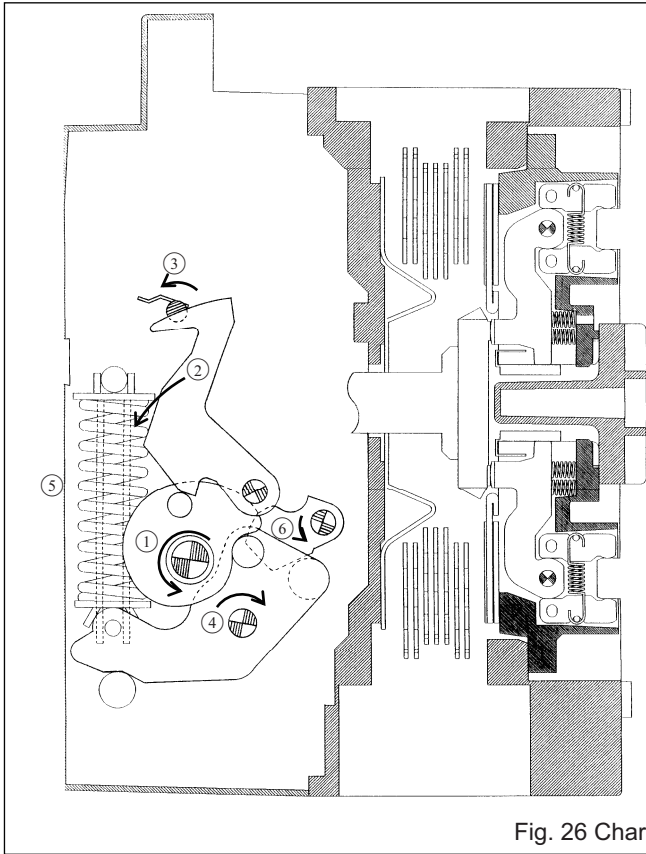


Fig. 26 Charging motion

The charging handle or the charging motor provides a counterclockwise rotation to charging cam ①. This rotates closing release lever ② and closing tripper lever ③ counterclockwise and a semicircular pawl engages with closing release lever ②. And charging lever ④ rotates clockwise so that closing spring ⑤ is compressed and closing cam 5 rotates counterclockwise. At this time, each component is positioned as shown in Fig. 24.

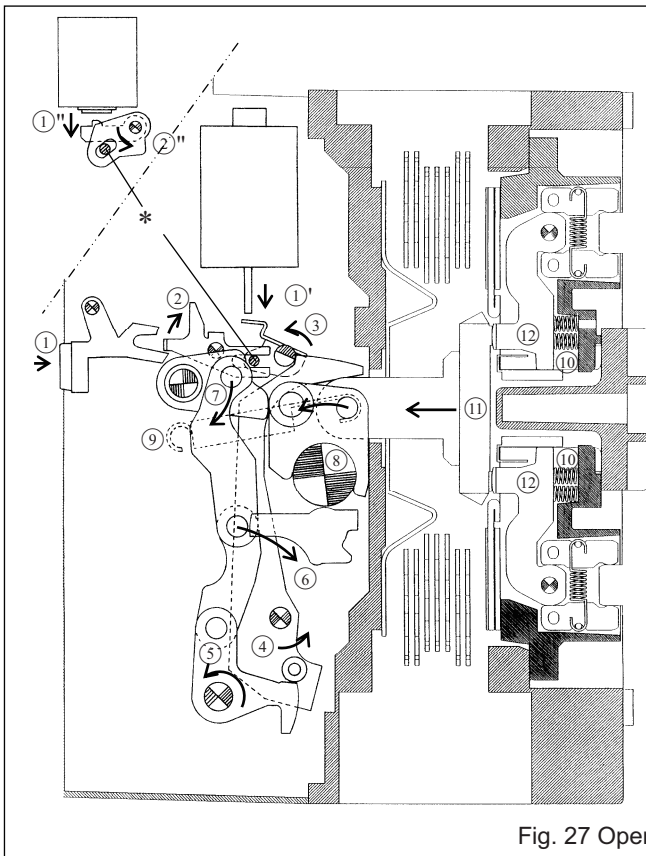


Fig. 27 Opening motion


For manual opening operation, OFF button ① rotates counterclockwise and trip linkage ② rotates clockwise. For electrical opening operation, push rod ① protrudes downward from the shunt trip device (SHT) or the undervoltage trip device (UVT). For tripping operation by the overcurrent release (OCR), moving core ① protrudes downward from the magnet hold trigger (MHT) and trip linkage ② rotates counterclockwise. (Parts marked with an asterisk (*) are trip pins. To avoid superposition in the figure, magnet hold trigger related parts are drawn in positions that are different from actual positions. This rotates trip trigger shaft ③ counterclockwise and trip lever B ④ disengages from a semicircular pawl and rotates counterclockwise. And trip lever A ⑤ rotates counterclockwise, trip link ⑥ moves to a lower right direction and closing toggle cam ⑦ rotates clockwise. The force of closing spring ⑨ and contact spring ⑩ rotates crossbar ⑧ counterclockwise, so that moving contact ⑪ is parted from stationary contact ⑫. At this time, each component is positioned as shown in Fig. 25.

4-2. Draw-out and Insertion Operation (For draw-out type)

4-2-1. General

The draw-out type ACB consists of the breaker body and the draw-out cradle. The main and control circuit terminals are installed on the draw-out cradle, which permits you to draw out and inspect or service the breaker body without the need for removing wiring from the terminals.

The draw-out mechanism allows you to move the breaker body to any of the four positions as shown in Fig. 28. The switchboard panel door can be shut with the breaker body drawn out to the CONN., TEST or ISOLATED position.

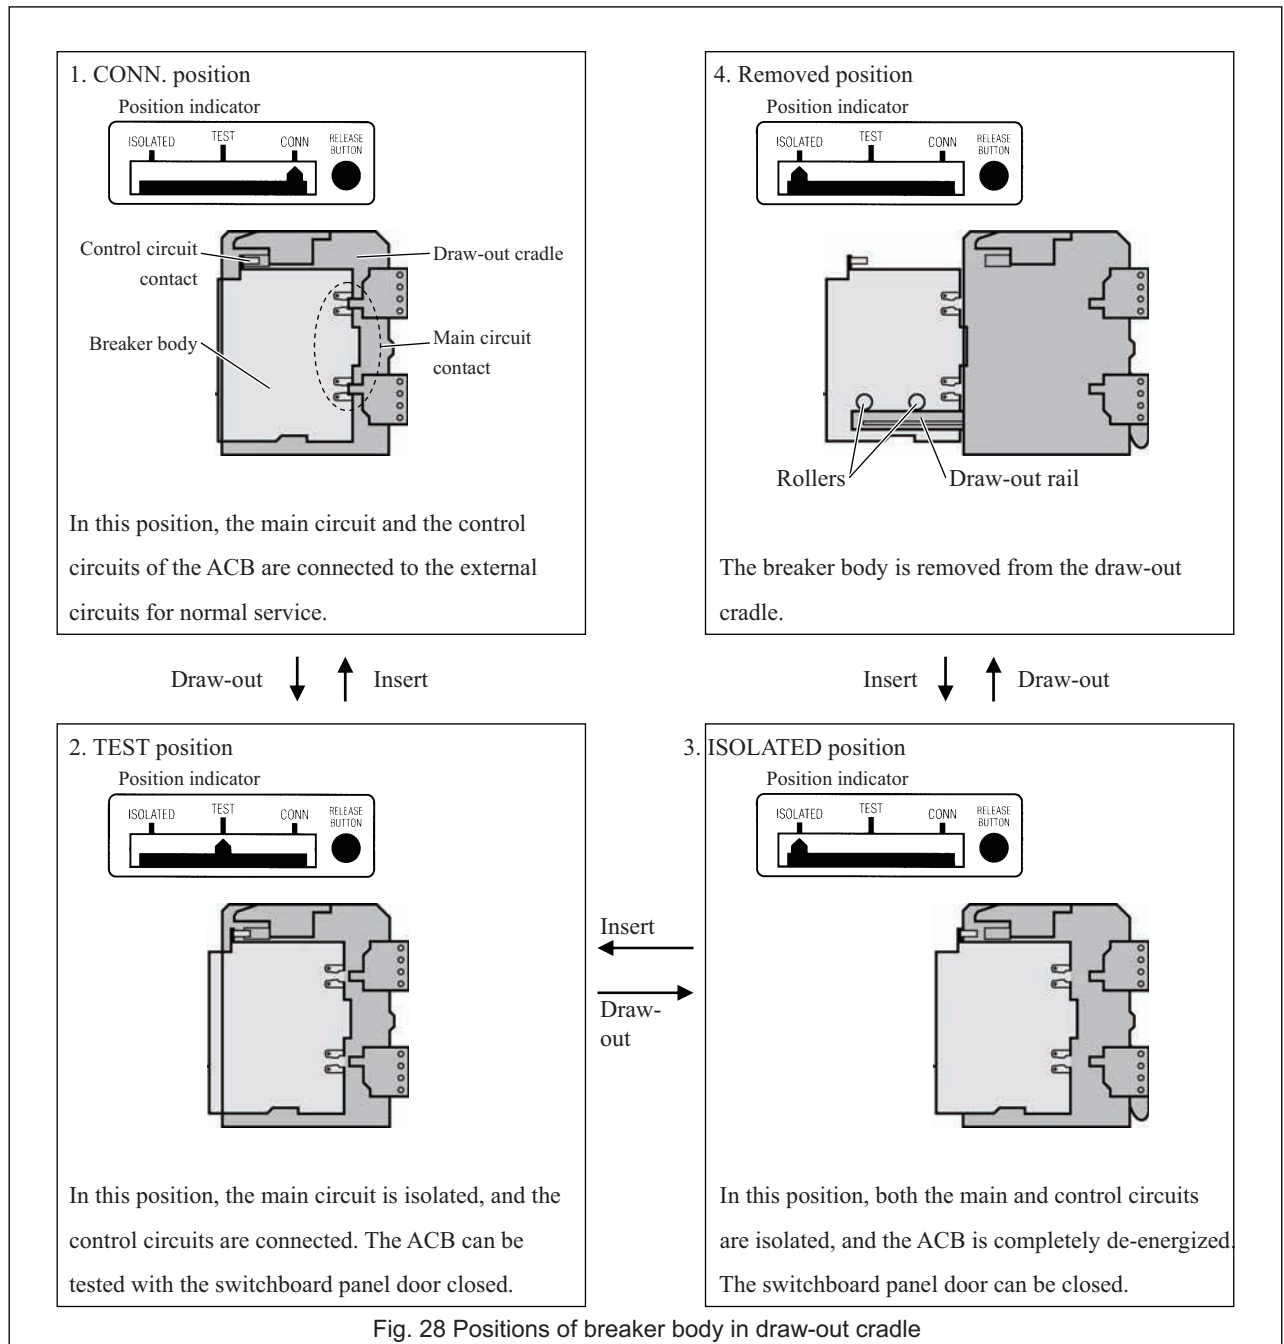

● Operation Durability

The AR series ACBs are designed to ensure the operation durability of 100 draw-out and insertion cycles in conformance to IEC 60947-1 and JIS C8201-2 (one cycle means that the breaker body is drawn out from the CONN. position to the Removed position and inserted back to the CONN. position). Draw-out and insertion operation of more than 100 cycles could abrade the main circuit contacts, resulting in an overheat of the contacts during energization.

4-2-2. Draw-out operation

⚠ DANGER

- Never touch live terminal parts. Otherwise, electric shock may result.
- Do not leave the ACB body in the removed position. The weight of the ACB may cause serious injury.

⚠ CAUTION

- If the ACB has the breaker fixing bolts, be sure to loosen the bolts on both sides before draw-out operation. Otherwise, damage to the ACB may result.
- Make sure the draw-out cradle is secured with mounting screws before drawing out the breaker body. Otherwise, the draw-out operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury.
- When retracting the draw-out rail into the draw-out cradle, be sure to push the rail end. Do not hold the hook pin, body stopper, or body stopper shaft. Doing so may cause your fingers to be pinched, resulting in injury.

Use the separate draw-out handle to draw-out the breaker body.

4-2-2-1. Moving the breaker body from the CONN. position to the TEST position

- 1) Open the ACB. (If the ACB remains closed, the draw-out handle (Fig. 29 ①) cannot be inserted).
 - 2) Loosen the breaker fixing bolts (Fig. 29 ②), if used, to unlock the breaker body (Fig. 29 ③).
 - 3) Unlock the position lock lever (Fig. 29 ⑭) if locked. See section 4-5.
 - 4) Insert the draw-out handle into the draw-out handle insertion hole (Fig. 29 ④). And slowly turn counterclockwise until the handle cannot be turned. The position indicator (Fig. 29 ⑤) shows “TEST”.
- When the main circuit is disconnected at the disconnect contacts, the breaker body will be slightly pushed forward by the spring action of the main circuit disconnect contacts. At this moment, a bang sound will be heard. This sound does not mean a malfunction.
 - The ACB cannot be closed as long as the draw-out handle is in the draw-out handle insertion hole. To close the ACB e.g., for ON-OFF testing, remove the draw-out handle.

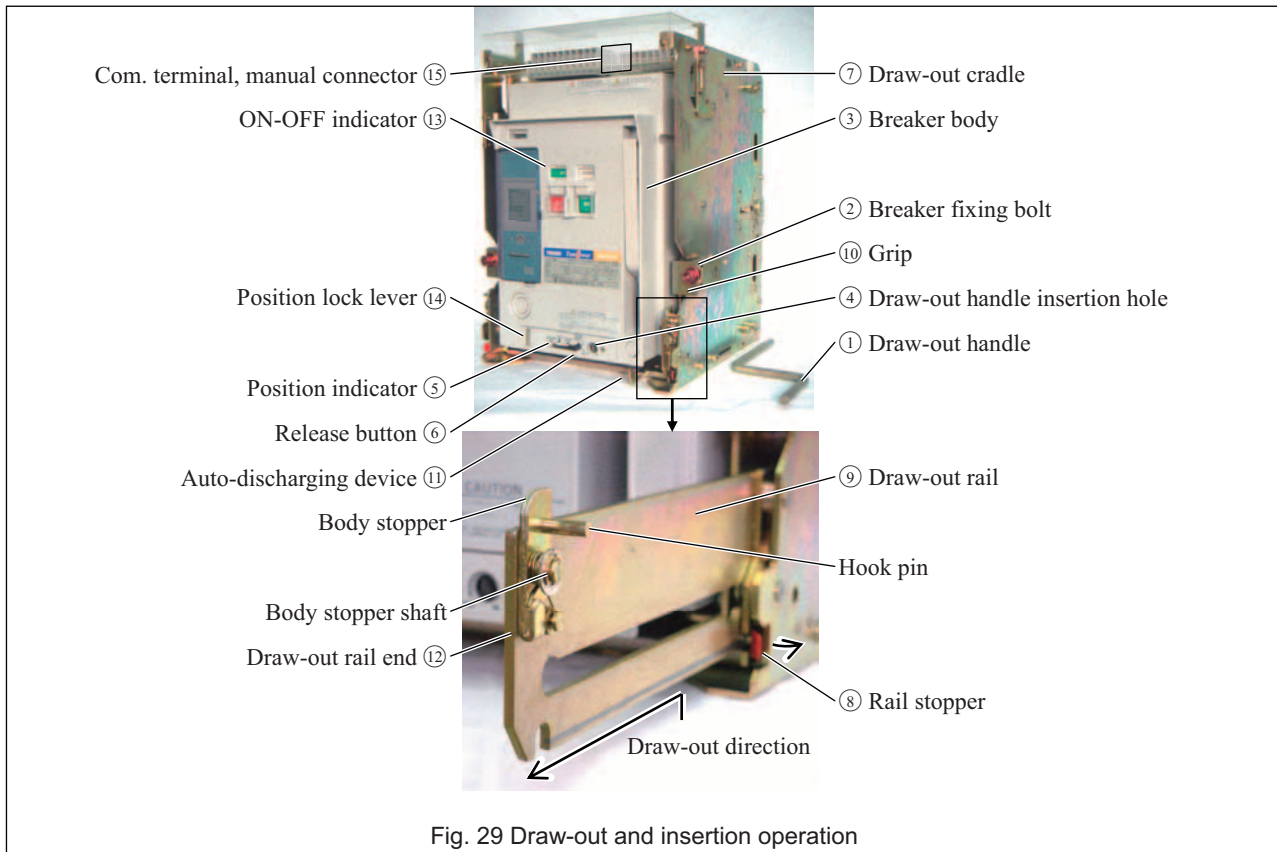


Fig. 29 Draw-out and insertion operation


4-2-2-2. Moving the breaker body from the TEST position to the ISOLATED position


- 1) Open the ACB. (If the ACB remains closed, the draw-out handle (Fig. 29 ①) cannot be inserted).
- 2) Press the release button (Fig. 29 ⑥). The release button will be locked depressed.
- 3) Unlock the position lock lever (Fig. 29 ⑭) if locked. See section 4-5.
- 4) Insert the draw-out handle into the draw-out handle insertion hole (Fig. 29 ④). And slowly turn counterclockwise until a freewheeling sound is heard. The position indicator (Fig. 29 ⑤) shows “ISOLATED”. Turning the draw-out handle will unlock the release button.
- 5) Remove the draw-out handle.

4-2-2-3. Moving the breaker body from the ISOLATED position to the removed position

- 1) Make sure the draw-out cradle (Fig. 29 ⑦) is secured with mounting screws.
- 2) Unlock the position lock lever (Fig. 29 ⑭) if locked. See section 4-5.
- 3) Push the rail stoppers (Fig. 29 ⑧) outward on both sides of the draw-out cradle to unlock the draw-out rail (Fig. 29 ⑨), and then uphold and pull out the rail until it stops. The draw-out rail will be locked again by the stoppers. (The breaker body cannot be drawn out unless the rail is locked).
- 4) Holding both the grips (Fig. 29 ⑩), draw out the breaker body until it stops.
 - If the ACB is equipped with the communication terminal block, pull out the hand connector (Fig. 29 ⑮) from the communication terminal block while drawing out the breaker body. Make sure the hand connector and control wire of the ACB are not snagged when drawing out the breaker body again.
 - If the ACB is equipped with an optional auto-discharging device (Fig. 29 ⑪), the closing springs of the ACB will be automatically discharged with a mechanical sound. This sound does not mean a malfunction.
 - Do not leave the ACB body on the draw-out rail pulled out.
- 5) Use an optional lifter or lifting plate to transfer the breaker body (Fig. 29 ③) to a safe place. Refer to section 2-1-2.

4-2-3. Putting the breaker body back into the draw-out cradle

| |
|---|
|  DANGER |
| <ul style="list-style-type: none">● Never touch live terminal parts. Otherwise, electric shock may result.● Do not leave the ACB body in the removed position. The weight of the ACB may cause serious injury. |

| |
|---|
|  CAUTION |
| <ul style="list-style-type: none">● Make sure the draw-out cradle is secured with mounting screws before inserting the breaker body into the draw-out cradle. Otherwise, the insertion operation may cause the breaker body or the draw-out cradle to fall, resulting in damage to the ACB or personal injury.● When retracting the draw-out rail into the draw-out cradle, be sure to push the rail end. Do not hold the hook pin, body stopper, or body stopper shaft. Doing so may cause your fingers to be pinched, resulting in injury.● Do not forcibly turn the draw-out handle clockwise when the breaker body is in the CONN. Position. Doing so may cause a malfunction.● If the ACB has the breaker fixing bolts, make sure the bolts on both sides are securely tightened before using the ACB. Loosened fixing bolts may cause a malfunction of the ACB, in particular when it is installed in such an area that is subject to strong vibrations. |

Use the separate draw-out handle to insert the breaker body.

4-2-3-1. Putting the breaker body back to the ISOLATED position

- 1) Make sure the draw-out cradle (Fig. 29 ⑦) is secured with mounting screws.
- 2) Push the rail stoppers (Fig. 29 ⑧) outward on both sides of the draw-out cradle to unlock the draw-out rail (Fig. 29 ⑨), and then uphold and pull out the rail until it stops. The draw-out rail will be locked again by the stoppers. (The breaker body (Fig. 29 ③) cannot be inserted unless the rail is locked).
- 3) Use an optional lifter or lifting plate to place the breaker body rollers (Fig. 30) on the draw-out rail (Fig. 30).

- Do not leave the ACB body on the draw-out rail pulled out.
- 4) Make sure the breaker fixing bolts (Fig. 29 ②), if fitted, are loosened and not arrest the breaker body.
 - 5) Make sure the hand connector (Fig. 29 ⑮) of the communication terminal block, if fitted, is so positioned that it does not get caught between the breaker body and the draw-out cradle.
 - 6) If the ACB has the breaker fixing bolts (Fig. 29 ②), make sure the bolts are loosened and, holding both the grips (Fig. 29 ⑩), firmly push the breaker body into the draw-out cradle.
 - If the ACB body is pushed out of position, it may not be inserted smoothly.
 - If the ACB is equipped with the communication terminal block, plug the hand connector (Fig. 29 ⑮) into the communication terminal block while pushing the breaker body into the draw-out cradle. Make sure the hand connector and control wire of the ACB are not snagged when pushing the breaker body into the draw-out cradle.
 - 7) Push the rail stoppers (Fig. 29 ⑧) outward on both sides of the draw-out cradle (Fig. 29 ⑫) to unlock the draw-out rail, and then push the rail ends to insert the rail until it stops. The draw-out rail will be locked again by the stoppers.

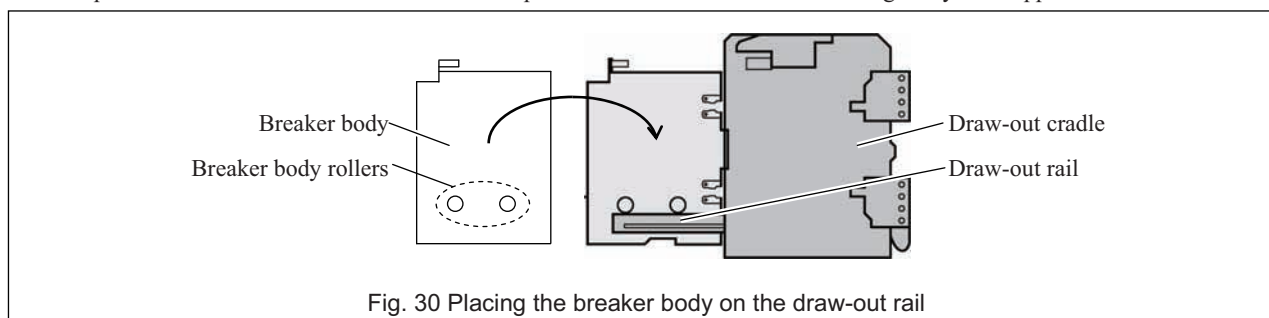


Fig. 30 Placing the breaker body on the draw-out rail

4-2-3-2. Moving the breaker body from the ISOLATED position to the TEST position

- 1) Make sure the ON-OFF indicator (Fig. 29 ⑬) shows “OFF”. (If the ACB remains closed, the draw-out handle (Fig. 29 ①) cannot be inserted).
- 2) Unlock the position lock lever (Fig. 29 ⑭) if locked. See section 4-5.
- 3) Insert the draw-out handle into the draw-out handle insertion hole (Fig. 29 ④). And slowly turn clockwise until the handle cannot be turned. The position indicator (Fig. 29 ⑤) shows “TEST”. When you turn the draw-out handle clockwise, you can insert the body smoothly by using a hand for holding ACB body until it moves.
 - The ACB cannot be closed as long as the draw-out handle is in the draw-out handle insertion hole. To close the ACB e.g., for ON-OFF testing, remove the draw-out handle.

4-2-3-3. Moving the breaker body from the TEST position to the CONN. position

- 1) Open the ACB. (If the ACB remains closed, the draw-out handle (Fig. 29 ①) cannot be inserted).
- 2) Unlock the position lock lever (Fig. 29 ⑭) if locked. See section 4-5.
- 3) Press the release button (Fig. 29 ⑥). The release button will be locked depressed.
 - If it's heavy when you push the release button or insert the main body of breaker, turn the draw-out handle a little in left and right and shake it.
- 4) Insert the draw-out handle into the draw-out handle insertion hole (Fig. 29 ④). And turn clockwise until the handle cannot be turned with its max. operating torque (14.7 N-m). The position indicator (Fig. 29 ⑤) shows “CONN.” Turning the draw-out handle will unlock the release button.
 - When the main contact starts engaging, the force required to turn the handle will increase as shown in Fig. 31. This symptom does not mean a malfunction. Continue to turn the handle. Rotating the handle more 13 or 14 turns moves the breaker body to the CONN. position, where the handle cannot be turned with its max. operating torque.
- 5) Remove the draw-out handle.
- 6) Tighten the breaker fixing bolts (Fig. 29 ②), if used, to lock the breaker body.

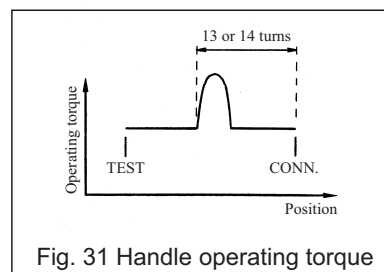


Fig. 31 Handle operating torque

4-2-4. Contact status of auxiliary and position switches

Tables 18 and 19 show the contact status of auxiliary switches and position switches respectively.

Table 18-1 Contact status of auxiliary switches

| Breaker body position \ ACB state | ON | OFF | Status of a-contact | Status of b-contact |
|-----------------------------------|-------|-------|---------------------|---------------------|
| | CONN. | ————— | ————— | ON |
| ————— | | ————— | OFF | ON |
| TEST | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |
| ISOLATED | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |
| Removed | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |

Table 18-2 Contact status of auxiliary switches (When pursuant to ship classification society rules)

| Breaker body position \ ACB state | ON | OFF | Status of a-contact | Status of b-contact |
|-----------------------------------|-------|-------|---------------------|---------------------|
| | CONN. | ————— | ————— | ON |
| ————— | | ————— | OFF | ON |
| TEST | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |
| ISOLATED | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |
| Removed | ————— | ————— | ON | OFF |
| | ————— | ————— | OFF | ON |

Table 19 Contact statuses of position switches

| Switch \ Position indication | ISOLATED | TEST | CONN. | Status of a-contact | Status of b-contact |
|--------------------------------|---------------------------|-------|-------|---------------------|---------------------|
| | CONN. position indication | ————— | ————— | ————— | ON |
| ————— | | ————— | ————— | OFF | ON |
| TEST position indication | ————— | ————— | ————— | ON | OFF |
| | ————— | ————— | ————— | OFF | ON |
| ISOLATED position indication | ————— | ————— | ————— | ON | OFF |
| | ————— | ————— | ————— | OFF | ON |
| Inserted position indication * | ————— | ————— | ————— | ON | OFF |
| | ————— | ————— | ————— | OFF | ON |

* "Inserted" means that the breaker body is in the CONN., TEST, or ISOLATED position.

4-3. ON-OFF Button Cover Locking Procedure

Lock the button cover using a padlock with $\varnothing 6$ shackle (up to 3 padlocks can be used) as shown in Fig. 32. The ON-OFF button cover is locked and the ON and OFF buttons cannot be operated.


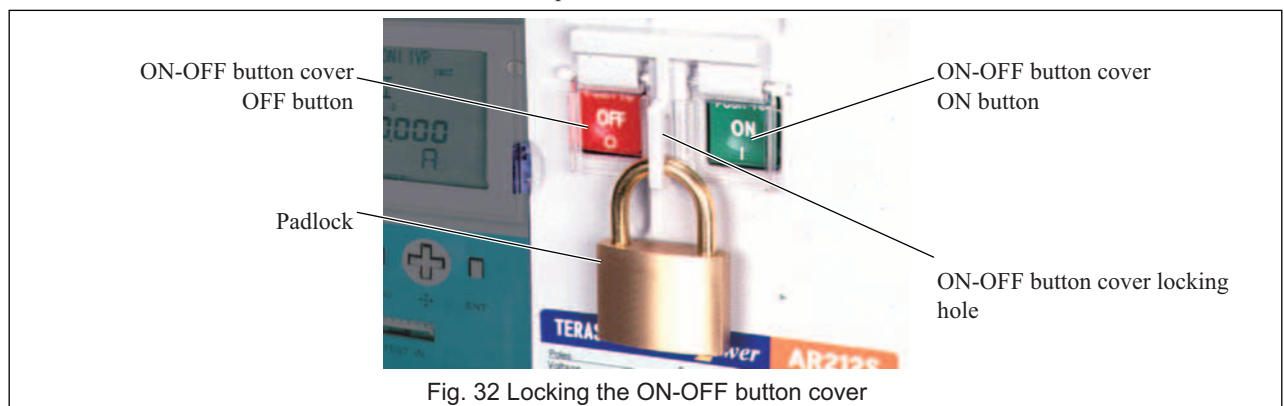


Fig. 32 Locking the ON-OFF button cover


4-4. Lock in OFF Procedure

- 1) Open the OFF button cover shown in Fig. 33.
- 2) Raise the OFF-lock tab and close the button cover.
- 3) Lock the button cover using a padlock with $\phi 6$ shackle (up to 3 padlocks can be used) as shown in Fig. 33. The OFF button is locked depressed, which disables the ON button.

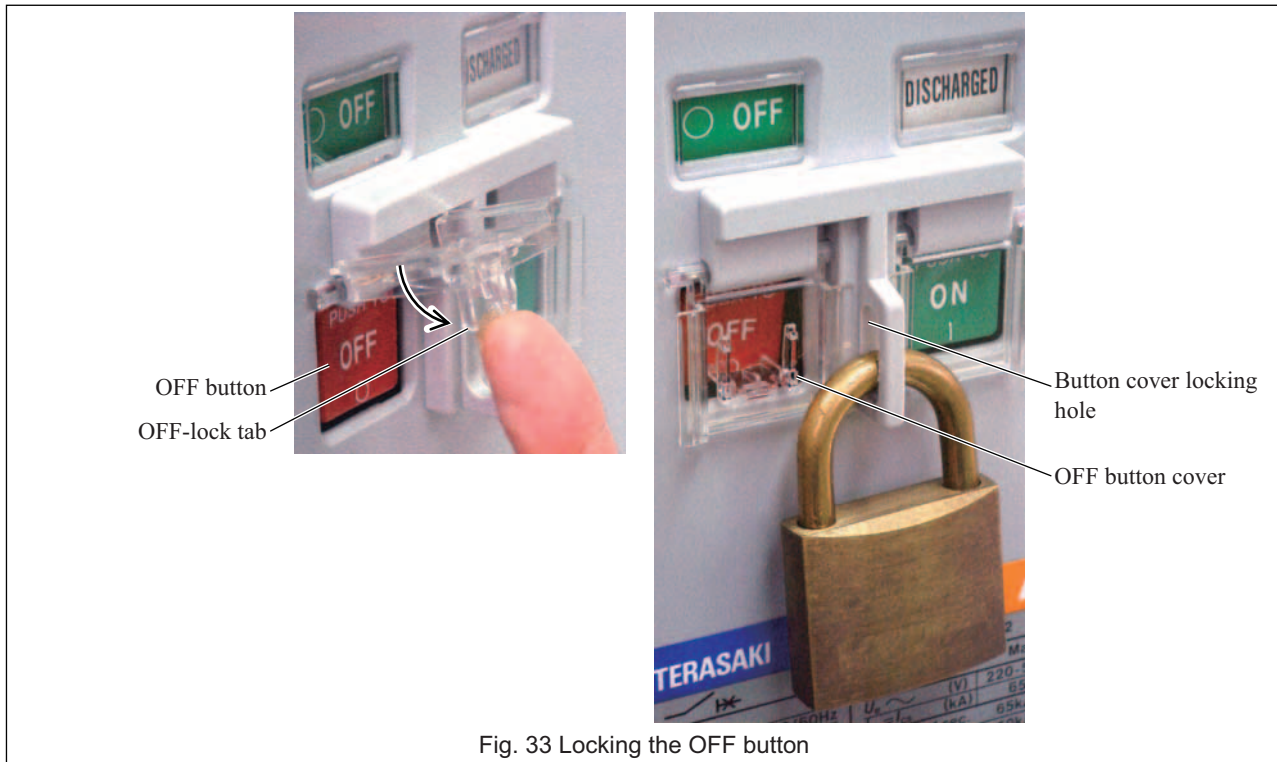


4-5. Position Lock Lever Locking Procedure

- 1) Move the breaker body to the desired position (CONN, TEST or ISOLATED).
- 2) Pull out the position lock lever shown in Fig. 34.
- 3) Lock the position padlock lever using a padlock with $\phi 6$ shackle (up to 3 padlocks can be used) as shown in Fig. 34. This prevents the draw-out handle from being inserted into the draw-out handle insertion hole, i.e., the breaker position cannot be changed.

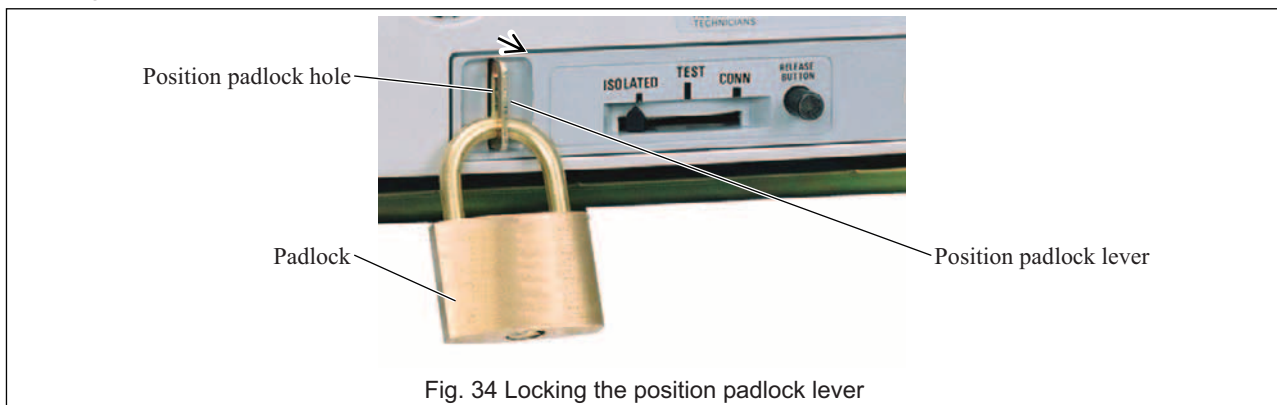


4-6. Breaker Fixing Bolt Securing Procedure

- 1) Move the breaker body to the CONN. position.
- 2) Loosen the breaker fixing bolt shown in Fig. 35, move the spring and flat washers close to the bolt head and push the bolt into the U-notch of the grip.
- 3) Tighten the breaker fixing bolt using the draw-out handle. This procedure is required for both the sides of the ACB.

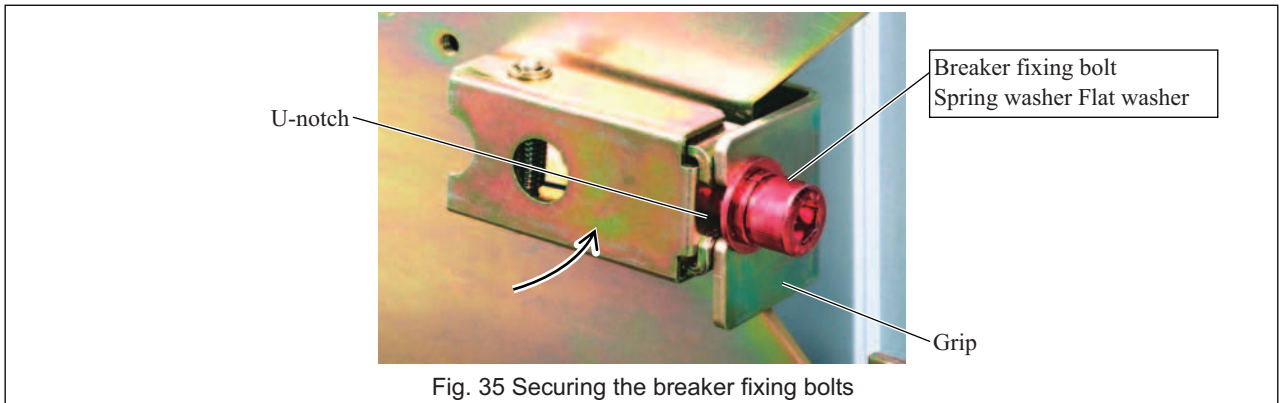

4-7. OCR Cover Locking Procedure

Lock the OCR cover using a padlock with $\phi 6$ shackle as shown in Fig. 36. The OCR cover cannot be opened, which prevents OCR settings from being changed.

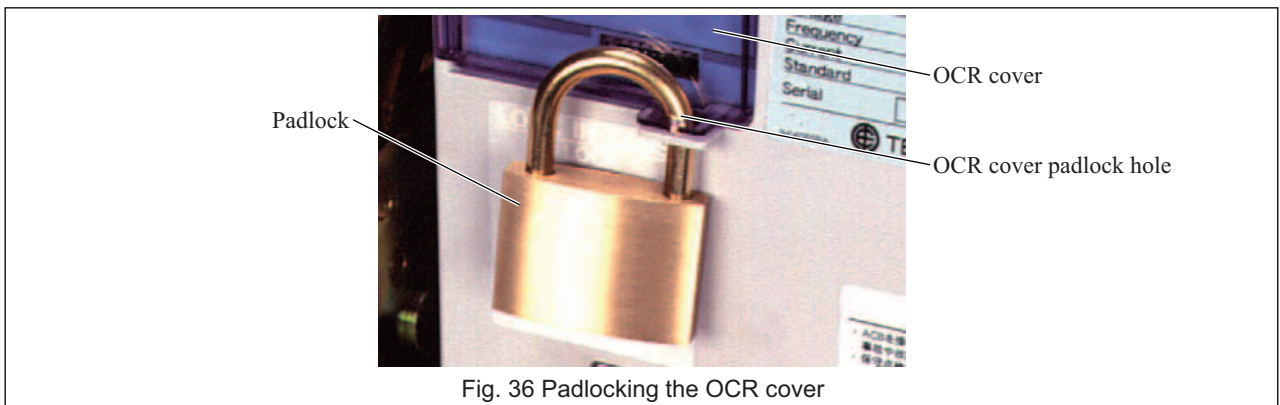

5. OVERCURRENT RELEASE (OCR)

Options available for the type AR ACBs include a highly reliable, multi-functional overcurrent release (OCR) with a built-in 16-bit microprocessor.

This OCR is supplied with power through a CT and main circuit current signals from current sensors. When the OCR detects a fault, it sends a trip signal to the magnet hold trigger (MHT) or provides a trip indication or an alarm depending on the type of the fault. The OCR uses the root mean square sensing for the long time delay (LT), pre-trip alarm (PTA, PTA2), and N-phase protection (NP) functions. (When six times the CT rated primary current is exceeded.) If a harmonic current flows through the ACB continuously, the root mean square sensing allows the ACB to operate normally.

The OCR is available in the type that follows:

- AGR-11BL,21BL,31BL L characteristic for general feeder (for works and transformer protection)
- AGR-21BR,31BR R characteristic for general feeder (3 characteristics conforming to IEC60255)
- AGR-21BS,22BS,31BS S characteristic for generator protection

5-1. Specifications

Specifications of the OCR are shown in Table 20,21.

Table 20 Specifications of type AGR-11B OCR (●: Standard, ○: Optional, –: Not applicable)

| Application | | For general feeder | | Reference section |
|---------------------------|---|--------------------|--------------|-------------------|
| Characteristic | | L | | |
| Type designation | | AGR-11BL-AL | AGR-11BL-GL | |
| Protective function | Long time delay trip (LT) | ● | ● | 5-2-1. |
| | Short time delay trip (ST) | ● | ● | |
| | Instantaneous trip (INST) | ● | ● | |
| | Ground fault trip (GF) | – | ● | |
| Protection characteristic | N-phase protection | ○ | ○ | 5-5-1. |
| | I^2t ON/OFF (ST) | ● | ● | |
| | I^2t ON/OFF (GF) | – | ● | |
| Trip indication | Group indication LED and contact output | ● | ● | 5-5-1. |
| Test function | | – | – | – |
| Control power supply | | Not required | Not required | 3-3. |

Table 21 Specifications of type AGR-21B, 22B, 31B OCR (●: Standard, ○: Optional, -: Not applicable)

| Application | | For general feeder | | | | | | | | For generator protection | | | | Reference section | |
|---|---|--------------------|----|-------------|----|-------------|----|-------------|----|--------------------------|---------|-------------|------|-------------------|----------------|
| | | L | | | | R | | | | S | | | | | |
| Characteristic | | AGR-21BL-XX | | AGR-31BL-XX | | AGR-21BR-XX | | AGR-31BR-XX | | AGR-XXXX-XX | | AGR-31BS-XX | | | |
| Type designation | | PS | PG | PS | PG | PS | PG | PS | PG | 21BS-PS | 22BS-PR | PS | PR | | |
| Suffix (XX or XXXX) of type designation | | | | | | | | | | | | | | | |
| Protective function | Long time delay trip (LT), short time delay trip (ST) and Instantaneous trip (INST/MCR) ① | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-2., 5-3-2-6. | |
| | Ground fault trip (GF) ②③ | - | ● | - | ● | - | ● | - | ● | - | - | - | - | 5-2., 5-3-2-7. | |
| | Reverse power trip (RPT) ②④⑤ | - | - | - | - | - | - | - | - | - | ● | - | ● | 5-2., 5-3-2-6. | |
| | N-phase protection (NP) ①⑥ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | - | - | - | - | 5-2., 5-3-2-7. | |
| | Negative-phase sequence protection (NS) ②⑦ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | - | - | - | - | 5-2., 5-3-2-7. | |
| | Line side ground fault protection (REF) ②③⑧⑨ | - | ○ | - | ○ | - | ○ | - | ○ | - | - | - | - | - | 5-2., 5-3-2-7. |
| | Contact overheat monitoring (OH) ②⑨⑩ | - | - | ○ | ○ | - | - | ○ | ○ | - | ○ | ○ | ○ | ○ | 3-3. |
| Zone interlock (Z) ⑨⑪ | - | - | ○ | ○ | - | - | ○ | ○ | - | ○ | ○ | ○ | ○ | 3-3. | |
| Alarm function | Pretrip alarm (PTA) ⑨⑫⑬ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-2., 5-3-2-7. | |
| | Pretrip alarm 2 (PTA2) ⑨⑫⑬ | - | - | - | - | - | - | - | - | - | ○ | ○ | ○ | 5-2., 5-3-2-7. | |
| | Undervoltage alarm (UV) ⑤⑨⑫⑭ | - | - | ○ | ○ | - | - | ○ | ○ | - | ○ | ○ | ○ | 5-2., 5-3-2-7. | |
| Protection characteristic | COLD/HOT (LT) ⑬ | ● | ● | ● | ● | - | - | - | - | - | - | - | - | 5-2., 5-3-2-6. | |
| | I ² t ON/OFF (ST) ⑬ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-2., 5-3-2-7. | |
| | INST/MCR (Instantaneous trip) ⑬ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-2., 5-3-2-7. | |
| | I ^{0.02} t/I ² t/I ³ t/I ⁴ t (LT) ⑬ | - | - | - | - | ● | ● | ● | ● | - | - | - | - | 5-2., 5-3-2-7. | |
| | I ² t ON/OFF (FG) ⑬ | - | ● | - | ● | - | ● | - | ● | - | - | - | - | 5-2., 5-3-2-7. | |
| | Polarity NOR/REV (RPT) ⑬ | - | - | ● | ● | - | - | ● | ● | - | ● | ● | ● | 5-3-2-4. | |
| Operation indication | Indication on LCD and contact output (individual indication) ⑨ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-5-2. | |
| Measurement /event indication | Present current (switchable between respective phase current phase max. and current) ⑨ | ● | ● | - | - | ● | ● | - | - | ● | ● | - | - | 5-3-2-3. | |
| | Present current /voltage/electrical energy/frequency (switchable between respective phase current phase max. and current) ⑨ | - | - | ● | ● | - | - | ● | ● | - | - | ● | ● | 5-3-2-3. | |
| | Max. current (max. phase current) ⑨ | ● | ● | - | - | ● | ● | - | - | ● | ● | - | - | 5-3-2-8. | |
| | Max. current /demanded power (max. phase current) ⑨ | - | - | ● | ● | - | - | ● | ● | - | - | ● | ● | 5-3-2-8. | |
| | Trip event log (last trip event) ⑨⑳ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-3-2-8. | |
| Alarm event log (last alarm event) ⑨㉑ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-3-2-8. | |
| Communication Functions | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | 3-3. | |
| External indicator | - | - | ○ | ○ | - | - | ○ | ○ | - | ○ | ○ | ○ | ○ | - | |
| Test function ⑨㉒ | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | 5-4. | |
| Control power supply ㉓ | Required | | | | | | | | | | | | 3-3. | | |

- ① Two modes are available; one where the ACB is tripped open and operation indication is provided and the other where the ACB is not tripped and no operation indication is provided. Fail-safe against failure in setup (see 5-2).
- ② Three modes are available; the first where the ACB is tripped open and operation indication is provided, the second where the ACB is not tripped and only operation indication is provided, and the third where the ACB is not tripped open and no operation indication is provided.
- ③ Residual current sensing. When a 3-pole ACB applies to a 3-phase, 4-wire circuit, be sure to use the separate N-phase protection CT (see 3-3).
- ④ Allows 3-phase generators operated in parallel to be protected against reverse power.
- ⑤ If the main circuit voltage exceeds AC250V, a step-down PT (potential transformer) is needed.
- ⑥ Provides protection to the neutral conductor in a 3-phase, 4-wire circuit against overcurrent. This function applies to a 4-pole ACB.
- ⑦ Provides protection to ACBs against negative-phase current caused by phase loss or reverse phase, preventing damage to loads.
- ⑧ The line side ground fault protection capability allows the ACB to trip open when transformer windings or cables on the line side suffers a ground fault in TN-C or TN-S power distribution systems where the line side neutral is grounded.
- ⑨ Control power supply is required. Disabled when control power is lost.
- ⑩ Protects the breaker main contact against overheat, preventing troubles caused by thermal damage of the contact. Helpful for preventive maintenance.
- ⑪ Zone selective interlock implemented between ACBs in a hierarchical system allows the upstream ACB nearest a fault point to trip open in a minimum time, irrespective of short time delay trip or ground fault trip pickup timing, thereby minimizing thermal or mechanical damage to loads. This stands for selective discrimination with zero timing.
- ⑫ Two modes are available; one where operation indication is provided and the other where no operation indication is provided.
- ⑬ The pretrip alarm capability provides an alarm on the LCD and delivers contact output when it is detected that the current value exceeds the current setting for longer than the time setting, thereby preventing the ACB from tripping due to a gradual increase in load current. Pretrip alarm 2 allows two different timings to be set and helps regulate loads depending on their importance.
- ⑭ Provides an alarm on the LCD and delivers contact output when the voltage of the main circuit becomes low.
- ⑮ In HOT mode, the OCR is actuated in shorter time than in COLD mode when an overload occurs after a certain degree of load is maintained for a certain time of period. This mode helps protect heat sensitive loads.
- ⑯ I²t ON avoids intersection of characteristic curves of the ACB and e.g., a downstream fuse. This will improve selective discrimination flexibility.
- ⑰ INST is enabled, the OCR trips open the ACB when the trip pickup current is reached or exceeded, irrespective of the ACB status. When MCR is enabled, the OCR trips open the ACB when the ACB making current setting is reached or exceeded, and after tripping operation, it locks the ACB in the open state. MCR provides the INST function if the control power is lost.
- ⑱ Helpful for protection in coordination with fuses or the like. (IEC 60255-3)
- ⑲ Allows selection of the power supply terminal position between upstream and downstream of the breaker.
- ⑳ Logs the latest trip event and alarm event and allows displaying the cause, fault current value and operating time of the events.
- ㉑ Allows simplified field testing where simulation signals from/to the OCR are used to check for normal long time delay, short time delay, instantaneous and ground fault trip functions.
- ㉒ If the control power is lost, the long time delay trip, short time delay trip, instantaneous trip, ground fault trip, reverse power trip, N-phase protection and negative-phase sequence protection functions are alive.

5-2. Characteristics

5-2-1. L characteristic for general feeder

A general view, characteristic settings, and characteristic curves of the type AGR-11BL OCR (with L characteristic) are shown in Fig. 37, Table 22, and Fig. 40 respectively.

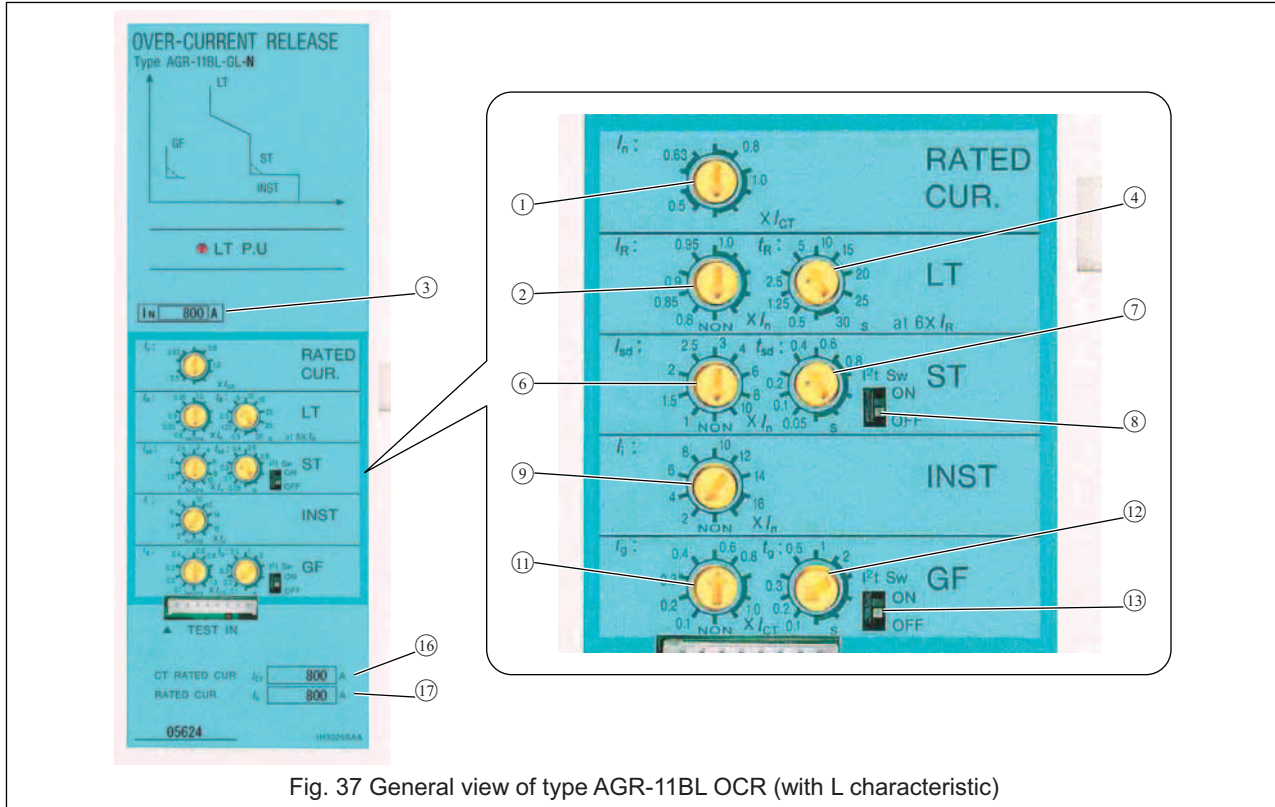


Fig. 37 General view of type AGR-11BL OCR (with L characteristic)

Table 22 Settings of type AGR-11BL OCR (with L characteristic)

| No. | Setting item | Symbol | Setting range | | | | | | | | | |
|-----|---|--------------|---|------------------------|-----|------|------|------|------|------|------|------|
| | | | CT rated primary current $[I_{CT}] \times (0.5-0.63-0.8-1.0)$ (A) | | | | | | | | | |
| ① | Rated current*1 | I_n | Applied $[I_{CT}]$ (A) | | | | | | | | | |
| | | | 200 | 400 | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 | |
| | | | Rated current $[I_{CT}] \times 0.5$ | 100 | 200 | 400 | 630 | 800 | 1000 | 1250 | 1600 | 2000 |
| | | | $[I_n]$ (A) | $[I_{CT}] \times 0.63$ | 125 | 250 | 500 | 800 | 1000 | 1250 | 1600 | 2000 |
| | | | $[I_{CT}] \times 0.8$ | 160 | 320 | 630 | 1000 | 1250 | 1600 | 2000 | 2500 | 3200 |
| | | | $[I_{CT}] \times 1.0$ | 200 | 400 | 800 | 1250 | 1600 | 2000 | 2500 | 3200 | 4000 |
| ② | Long time delay trip pickup current (continuous) | I_R | $[I_n] \times (0.8-0.85-0.9-0.95-1.0-NON)$ (A) • Non tripping at not more than $[I_R] \times 1.05$, Tripping at more than $[I_R] \times 1.05$ and not more than $[I_n] \times 1.2$ | | | | | | | | | |
| ③ | N-phase protection trip pickup current (continuous) | I_N | $[I_n] \times (0.4-0.5-0.63-0.8-1.0)$: Fixed to a single point • Non tripping at not more than $[I_N] \times 1.05$, Tripping at more than $[I_N] \times 1.05$ and not more than $[I_n] \times 1.2$ | | | | | | | | | |
| ④ | Long time delay/N-phase protection trip timing | t_R | Long time delay: (0.5-1.25-2.5-5-10-15-20-25-30) (s) at 600% of $[I_n]$, Tolerance: $\pm 15\%$, +0.15s -0s N-phase protection: (0.5-1.25-2.5-5-10-15-20-25-30) (s) at 600% of $[I_n]$, Tolerance: $\pm 15\%$, +0.15s -0s | | | | | | | | | |
| ⑥ | Short time delay trip pickup current | I_{sd} | $[I_n] \times (1-1.5-2-2.5-3-4-6-8-10-NON)$ (A), Tolerance: $\pm 15\%$ | | | | | | | | | |
| ⑦ | Short time delay trip timing | t_{sd} | Relaying time (ms.) | | | | | | | | | |
| | | | 50 | 100 | 200 | 400 | 600 | 800 | | | | |
| | | | Resettable time (ms.) | 25 | 75 | 175 | 375 | 575 | 775 | | | |
| | Max. total clearing time (ms.) | 120 | 170 | 270 | 470 | 670 | 870 | | | | | |
| ⑧ | Short time delay trip $I^2 t$ mode | $I^2 t_{sd}$ | ON/OFF | | | | | | | | | |
| ⑨ | Instantaneous trip pickup current | I_i | $[I_n] \times (2-4-6-8-10-12-14-16-NON)$ (A), Tolerance: $\pm 20\%$ | | | | | | | | | |
| ⑪ | Ground fault trip pickup current *2 | I_g | $[I_{CT}] \times (0.1-0.2-0.3-0.4-0.6-0.8-1.0-NON)$ (A), Tolerance: $\pm 20\%$ | | | | | | | | | |
| ⑫ | Ground fault trip timing | t_g | Relaying time (ms.) | | | | | | | | | |
| | | | 100 | 200 | 300 | 500 | 1000 | 2000 | | | | |
| | | | Resettable time (ms.) | 75 | 175 | 275 | 475 | 975 | 1975 | | | |
| | Max. total clearing time (ms.) | 170 | 270 | 370 | 570 | 1070 | 2070 | | | | | |
| ⑬ | Ground fault trip $I^2 t$ mode | $I^2 t_g$ | ON/OFF | | | | | | | | | |
| ⑯ | CT rated primary current display-only field | | | | | | | | | | | |
| ⑰ | Factory-set rated current display-only field | | | | | | | | | | | |


• Underlined values are default settings.

• NON setting disables protective functions. If the short time delay trip function and the instantaneous trip function are set to NON, however, the fail-safe operates so that:
• The instantaneous trip function is activated at $[I_n] \times 16$ or more if the short time delay trip function and the instantaneous trip function are set to NON.


• A pickup current means the threshold by which the OCR determines whether or not an overcurrent occurs. When the current flowing through the OCR exceeds the pickup current setting provided that $[I_n] \times 1.05 < \text{pickup current setting} \leq [I_R] \times 1.2$, the OCR starts counting the time for tripping. Once the current flowing through the OCR reduces to less than the pickup current setting, time count is reset.

*1: A change in rated current setting results in changes in long time delay, short time delay, and instantaneous current settings accordingly.


*2: The ground fault trip pickup current setting should not exceed 1200A.

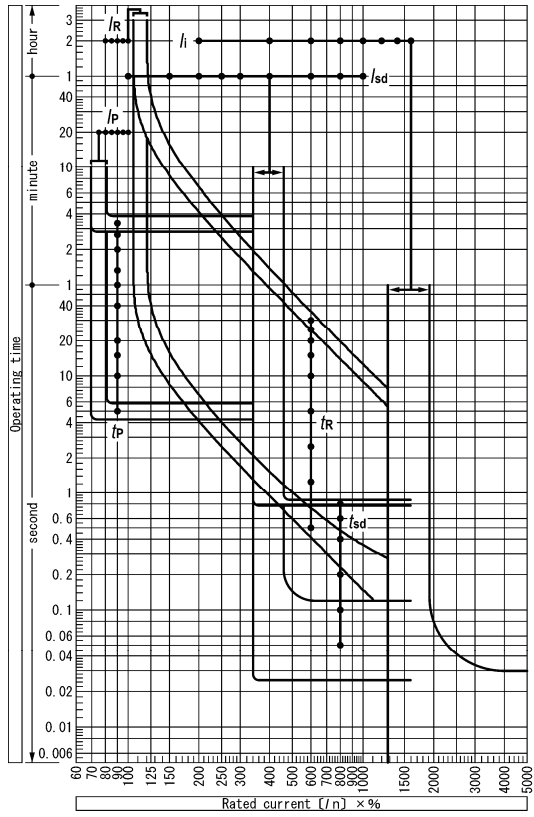


Long time delay trip, Short time delay trip, Instantaneous trip and Pre-trip alarm

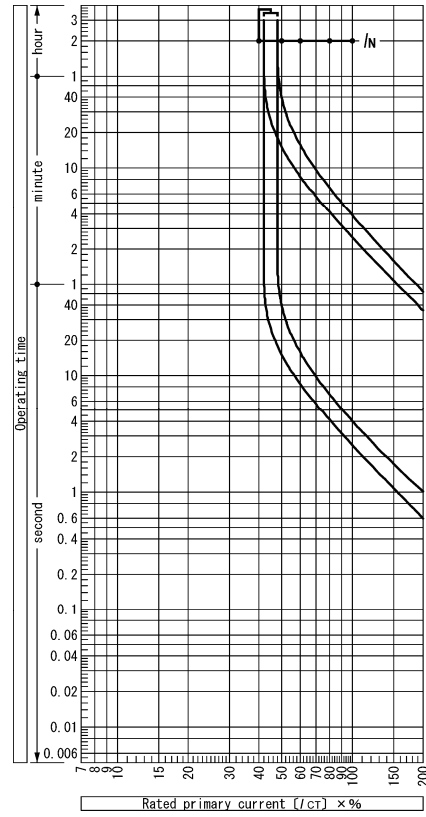

N-phase protection trip

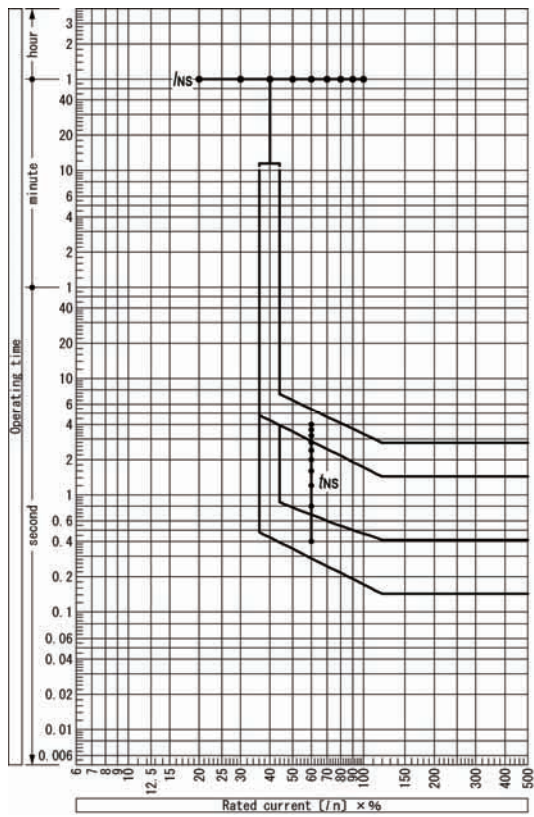

Negative-phase sequence protection

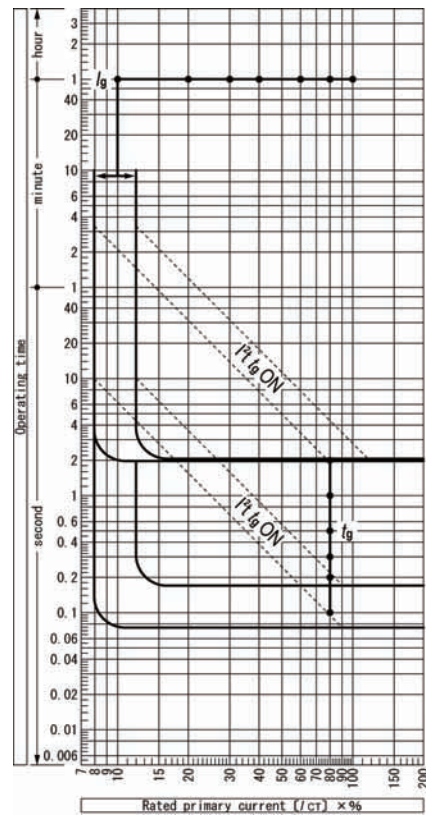

Ground fault trip

Fig. 40 Characteristic curves of type AGR-11BL,21BL,31BL OCR (with L characteristic)

5-2-2. R characteristic for general feeder

Characteristic settings and characteristic curves of the type AGR-21BR,31BR OCR (with R characteristic) are shown in Table 24 and Figs. 41 - 47 respectively.

Table. 24 Characteristic settings of type AGR-21BR,31BR OCR (with R characteristic)

| Setting item | Symbol | Setting range ^① | |
|--|--|---|-------------------------|
| Rated current ^② | I_n | CT rated primary current [I_{CT}] × (0.5-0.63-0.8-1.0) (A) | |
| | | Applied [I_{CT}] (A) | |
| | | Rated current [I_n] (A) | |
| | | Rated current [I_n] (A) | |
| Long time delay trip (LT) ^{③⑤} | Current setting (continuous energization) | I_R [I_n] × (0.8-0.85-0.9-0.95-1.0-NON) (A), Tolerance: ±5% ^④ | |
| | Time setting | t_R (1-2-3-4-5-6-3-6-8-10) (s) at 300% of [I_R], Tolerance: ±20%, +0.15 s -0 s | |
| | Protection type | - SIT: $I^{0.02}t$, VIT: I^1t , EIT: I^2t , 3IT: I^3t , 4IT: I^4t | |
| Short time delay trip (ST) ^⑤ | Current setting | I_{sd} [I_n] × (1-1.5-2-2.5-3-4-6-8-10-NON) (A), Tolerance: ±15% ^④ | |
| | | Relaying time (ms.) | 50 100 200 400 600 800 |
| | Time setting ^⑥ | Resettable time (ms.) | 25 75 175 375 575 775 |
| | | Max. total clearing time (ms.) | 120 170 270 470 670 870 |
| | I^t protection type | $I^t t_{sd}$ OFF/ON ^⑦ | |
| Instantaneous trip (INST/MCR) | Current setting | I_i [I_n] × (2-4-6-8-10-12-14-16-NON) (A), Tolerance: ±20% ^④ | |
| | INST/MCR | - INST/MCR | |
| Ground fault trip (GF) | Current setting ^⑧ | I_g [I_{CT}] × (0.1-0.2-0.3-0.4-0.6-0.8-1.0-NON) (A), Tolerance: ±20% ^④ | |
| | Time setting | t_g Relaying time (ms.) | |
| | | Resettable time (ms.) | |
| | | Max. total clearing time (ms.) | |
| | I^t protection type | $I^t t_g$ OFF/ON ^⑦ | |
| | Mode | - TRIP/AL/OFF ^⑨ | |
| N-phase protection (NP) ^{③⑤} | Current setting (continuous energization) | I_N [I_{CT}] × (0.4-0.5-0.63-0.8-1.0-NON) (A), Tolerance: ±5% | |
| | Time setting | t_N Depends on the long time delay trip pickup timing. Activated at 300% of [I_N]. | |
| Negative-phase sequence protection (NS) ^⑩ | Current setting | I_{NS} [I_n] × (0.2-0.3-0.4-0.5-0.6-0.7-0.8-0.9-1.0) (A), Tolerance: ±10% | |
| | Time setting | t_{NS} (0.4-0.8-1.2-1.6-2.2-4-2.8-3.2-3.6-4) (s) at 150% of [I_{NS}], Tolerance: ±20%, +0.15 s -0 s | |
| | Mode | - TRIP/AL/OFF ^⑨ | |
| Line side ground fault protection (REF) | Current setting | I_{REF} [I_{CT}] × (0.1-0.2-0.3-0.4-0.6-0.8-1.0-NON) (A), Tolerance: ±20% ^④ | |
| | Line side ground fault protection bias current | I_{REF2} [I_{CT}] × (0.1-0.2-0.3-0.5-0.7-0.9-1.1-1.3-1.5) (A), Tolerance: ±20% | |
| | Time setting | - Instantaneous | |
| | Mode | - TRIP/AL/OFF ^⑨ | |
| Contact overheat monitoring (OH) | Temperature setting | - 155°C | |
| | Time setting | - Instantaneous | |
| | Mode | - TRIP/AL/OFF ^⑨ | |
| Zone interlock (Z) ^⑪ | Current setting | - Interlock with short time delay trip pickup current | |
| | Time setting | - 50 ms. or less | |
| Pretrip alarm (PTA) | Current setting | I_{p1} [I_n] × (0.75-0.8-0.85-0.9-0.95-1.0) (A), Tolerance: ±7.5% | |
| | Time setting | t_{p1} (5-10-15-20-40-60-80-120-160-200) (s) at not less than [I_{p1}], Tolerance: ±15%, +0.1s -0 s | |
| | Mode | - AL/OFF ^⑫ | |
| Undervoltage alarm ^{⑬⑭} | Voltage setting | V_n [V_n] × (0.4-0.6-0.8) (V), Tolerance: ±5% | |
| | Time setting | (0.1-0.5-1-2-5-10-15-20-30-36) (s) at voltage setting or less, Tolerance: ±15%, +0.1s -0s | |
| | Recovery voltage setting ^⑮ | V_n [V_n] × (0.8-0.85-0.9-0.95) (V), Tolerance: ±5% | |
| | Mode | - AL/OFF ^⑫ | |

① Underlined values are default settings.

② A change in rated current setting results in changes in long time delay trip, short time delay trip, instantaneous strip, pretrip alarm and negative-phase sequence protection trip pickup current settings accordingly.

③ The operating time (t) at a long time delay (or N-phase protection) trip pickup current setting is given by

$$t = 0.0222 \times t_R / \left\{ \left(\frac{i}{I_R} \right)^{0.02} - 1 \right\} \pm 20\% + 0.15 - 0 \text{ [s] (} I^{0.02}t \text{ protection type)}$$

$$t = 2 \times t_R / \left\{ \left(\frac{i}{I_R} \right) - 1 \right\} \pm 20\% + 0.15 - 0 \text{ [s] (} I^1t \text{ protection type)}$$

$$t = 8 \times t_R / \left\{ \left(\frac{i}{I_R} \right)^2 - 1 \right\} \pm 20\% + 0.15 - 0 \text{ [s] (} I^2t \text{ protection type)}$$

$$t = 26 \times t_R / \left\{ \left(\frac{i}{I_R} \right)^3 - 1 \right\} \pm 20\% + 0.15 - 0 \text{ [s] (} I^3t \text{ protection type)}$$

$$t = 80 \times t_R / \left\{ \left(\frac{i}{I_R} \right)^4 - 1 \right\} \pm 20\% + 0.15 - 0 \text{ [s] (} I^4t \text{ protection type)}$$

(I_R : Long time delay or N-phase protection trip pickup current setting, i : Overcurrent value, t_R : Time setting)

④ NON setting disables protective functions. If the short time delay trip function and the instantaneous trip (or MCR) function are both attempted to be set to NON, however, the fail-safe operates so that:

- When the short time delay trip function has been set to NON, the instantaneous trip function cannot be set to NON or MCR.
- When the instantaneous trip function has been set to NON or MCR, the short time delay trip function cannot be set to NON.

⑤ The short time delay trip function has precedence over the long time delay trip function. The OCR operates at the short time delay trip timing even in those current ranges in which the long time delay trip time setting is shorter than the short time delay time setting.

⑥ If DC24V zone interlock power is not provided between ^⑩ and ^⑪, the zone interlock is inoperative and the short time delay trip function works with a total clearing time of 50 ms or less when a fault current is detected.

⑦ Fig. 41 shows the operating characteristic at I^2 ON and I^2 OFF. When I^2 is ON, the OCR operates at fixed trip pickup current of 1000% of [I_n] (100% of [I_{CT}] for ground fault trip)

⑧ The ground fault trip pickup current setting should not exceed 1200A.

⑨ "TRIP" means the breaker is tripped open and operation indication is provided, "AL" means the breaker is not tripped open and only operation indication is provided, and "OFF" means the breaker is not tripped open and no operation indication is provided.

⑩ The operating time (t) at a negative-phase sequence protection trip pickup current setting is given by

$$t = 1.5 \times t_{NS} \times I_{NS}/i \pm 20\% + 0.15 - 0 \text{ [s]}$$

(I_{NS} : Negative-phase sequence protection trip pickup current setting, i : Overcurrent value, t_{NS} : Time setting)

(i is fixed to $3 \times I_{NS}$ when $i > 3 \times I_{NS}$)

⑪ Activated only when the fault point is within the zone covered by the breaker.

⑫ "AL" means operation indication is provided and "OFF" means no operation indication is provided.

⑬ Provides an alarm and delivers contact output when the voltage of the main circuit decreases to the voltage setting or lower for longer than the time setting. The alarm ceases when the main circuit voltage returns to the recovery voltage or higher.

⑭ When this capability is used in conjunction with the undervoltage trip device (UVT), an alarm may be provided after tripping operation of the breaker depending on the voltage setting.

⑮ The undervoltage alarm capability does not work if the main circuit voltage is originally under the recovery voltage.



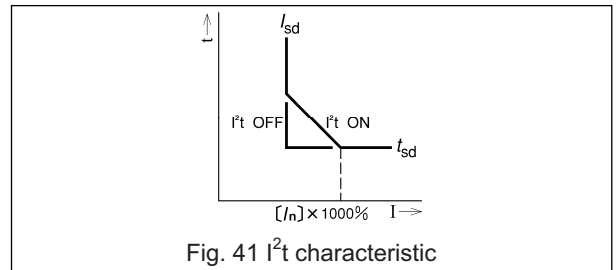


Fig. 41 I^2 characteristic

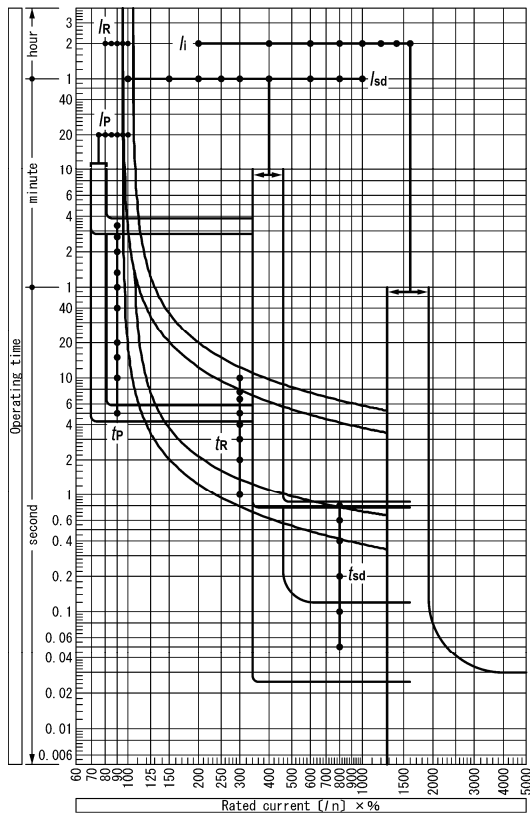


Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

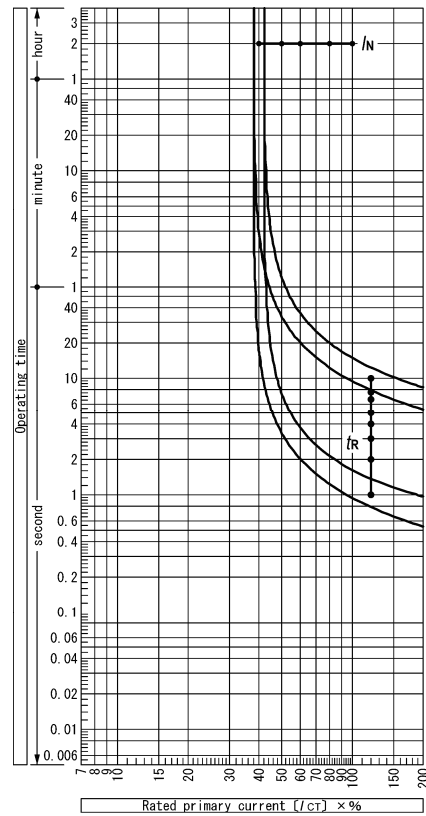


N-phase protection

Fig. 42 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of $I^{0.02}t$ protection type)

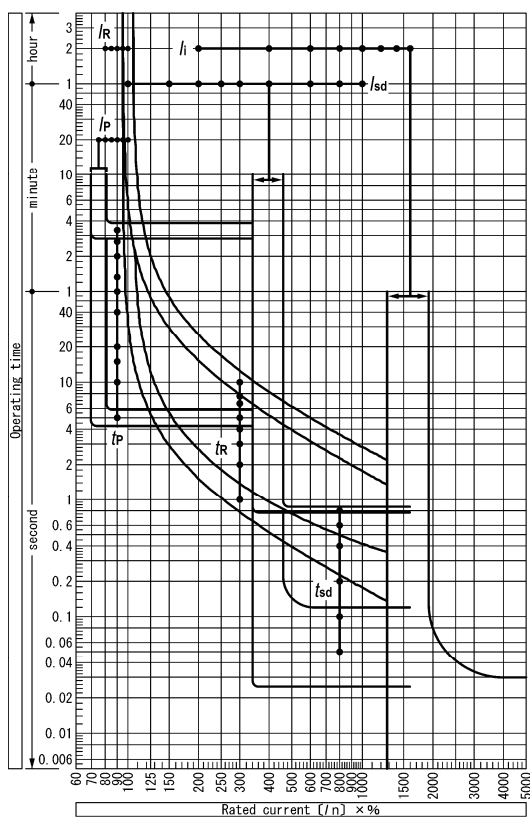


Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

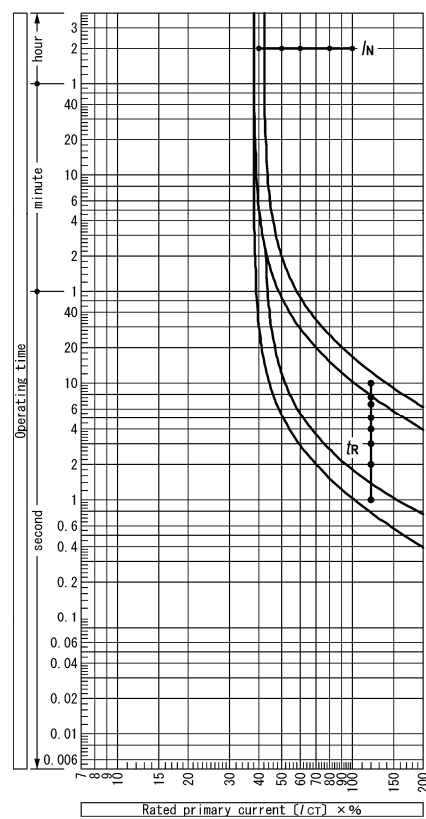


N-phase protection

Fig. 43 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of $I t$ protection type)

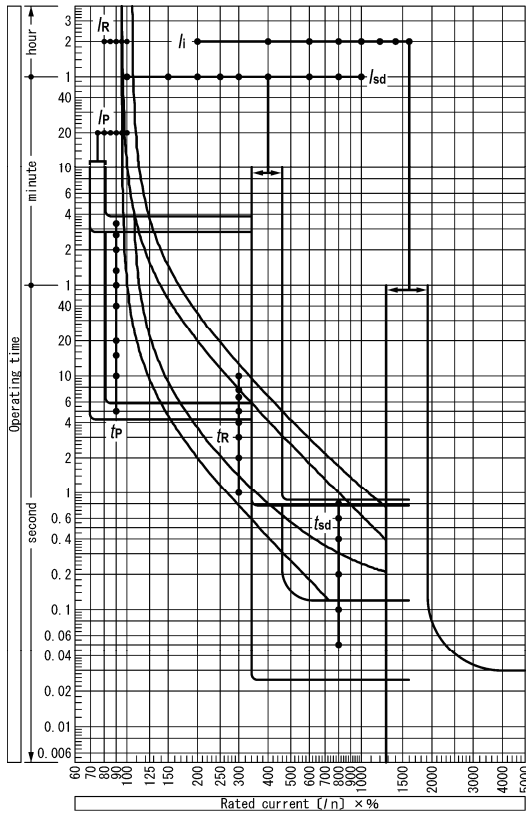


Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

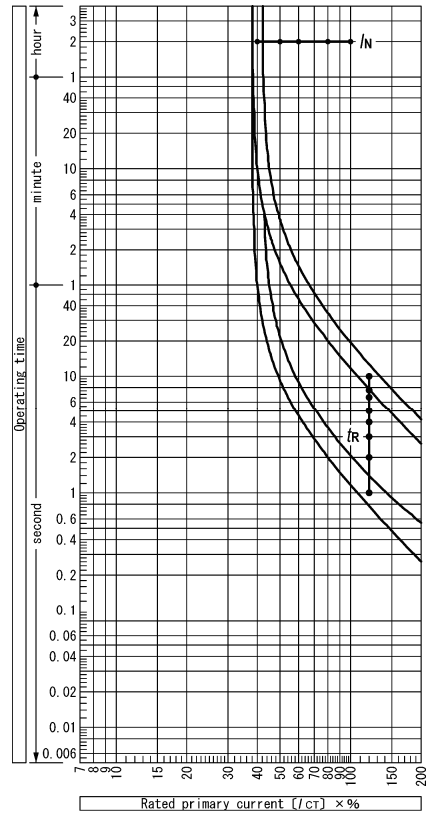


N-phase protection

Fig. 44 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of I^2t protection type)

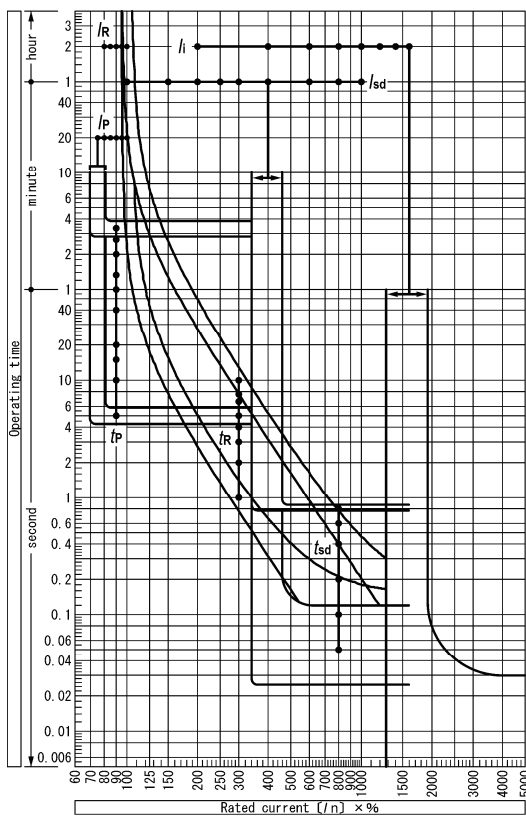


Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

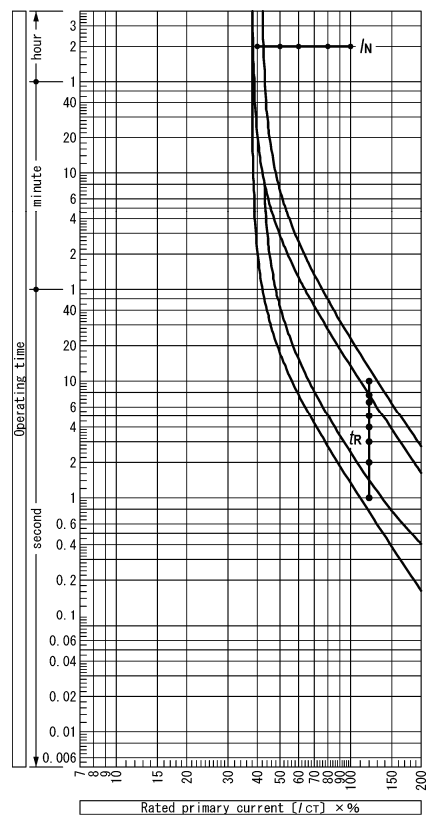


N-phase protection

Fig. 45 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of I^3t protection type)

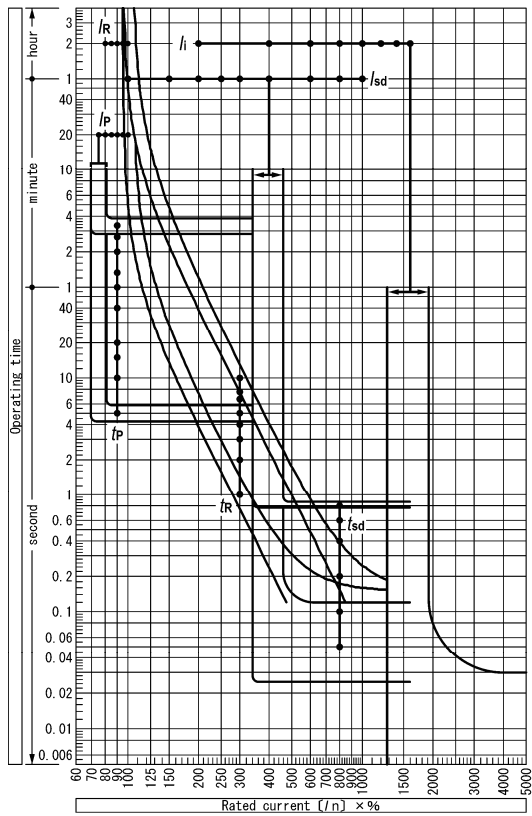


Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

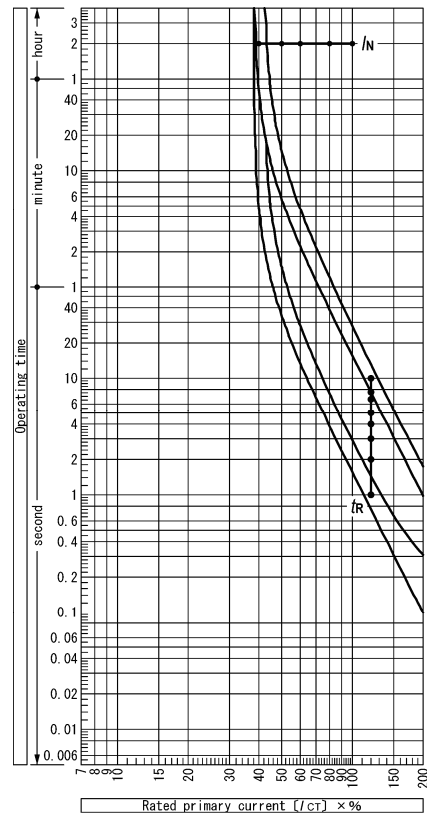


N-phase protection

Fig. 46 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of I⁴t protection type)

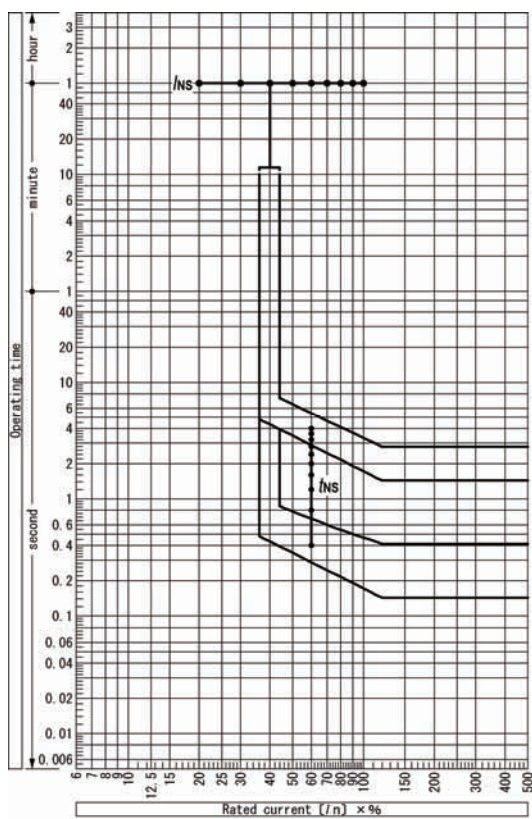

Negative-phase sequence protection

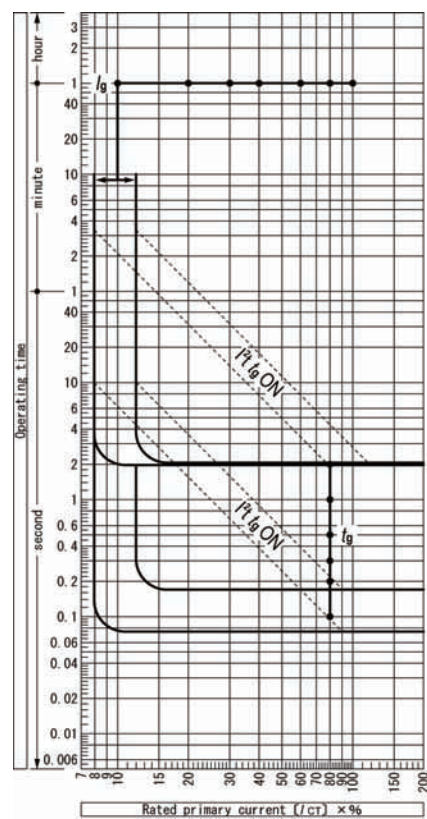

Ground fault trip

Fig. 47 Characteristic curves of type AGR-21BR,31BR OCR (with R characteristic of common protection type)

5-2-3. S characteristic for generator protection

Characteristic settings and characteristic curves of the type AGR-21BS/22BS/31BS OCR (with S characteristic) are shown in Table 25 and Figs. 48 and 49 respectively.

Table. 25 Characteristic settings of type AGR-21BS,22BS,31BS OCR (with S characteristic)

| Setting item | | Symbol | Setting range ① | | | | | | |
|----------------------------------|---|-----------------------|---|-----|-----|-----|-----|-----|-----|
| Rated current ② | | I_n | CT rated primary current [I_{CT}] × (0.5 to 1.0) (A): Fixed to a single point | | | | | | |
| Long time delay trip (LT) ③ | Current setting (continuous energization) | I_R | $[I_n] \times (0.8-1.0-1.05-1.1-1.15-NON)$ (A), Tolerance: ±5% ④ | | | | | | |
| | Time setting | t_R | (15-20-25-30-40-50-60) (s) at 120% of $[I_R]$, Tolerance: ±15%, +0.15 s -0 s | | | | | | |
| Short time delay trip (ST) ⑤ | Current setting | I_{sd} | $[I_n] \times (2-2.5-2.7-3-3.5-4-4.5-5-NON)$ (A), Tolerance: ±10% ④ | | | | | | |
| | Time setting ⑥ | t_{sd} | Relaying time (ms.) | 100 | 200 | 300 | 400 | 600 | 800 |
| | | Resettable time (ms.) | 75 | 175 | 275 | 375 | 575 | 775 | |
| | | | Max. total clearing time (ms.) | 170 | 270 | 370 | 470 | 670 | 870 |
| | I^t protection type | $I^t t_{sd}$ | OFF/ON ⑦ | | | | | | |
| Instantaneous trip (INST/MCR) | Current setting | I | $[I_n] \times (2-4-6-8-10-12-14-16-NON)$ (A), Tolerance: ±20% ④ | | | | | | |
| | INST/MCR | | INST/MCR | | | | | | |
| Reverse power trip (RPT) ⑧ | Power setting | P_R | $[P_n] \times (0.04-0.05-0.06-0.07-0.08-0.09-0.1-NON)$ (kW), Tolerance: +0% -20% ④ | | | | | | |
| | Time setting | - | (2.5-5-7.5-10-12.5-15-17.5-20) (s) at 100% of $[P_R]$, Tolerance: ±20% +0.15s -0 s | | | | | | |
| | Polarity | - | NOR/REV ⑨ | | | | | | |
| | Mode | - | TRIP/AL/OFF ⑩ | | | | | | |
| Contact overheat monitoring (OH) | Temperature setting | - | 155°C | | | | | | |
| | Time setting | - | Instantaneous | | | | | | |
| | Mode | - | TRIP/AL/OFF ⑩ | | | | | | |
| Zone interlock (Z) ⑪ | Current setting | - | Short time delay trip and/or ground fault trip pickup current | | | | | | |
| | Time setting | - | 50 ms. or less | | | | | | |
| Pretrip alarm (PTA) | Current setting | I_{p1} | $[I_n] \times (0.75-0.8-0.85-0.9-0.95-1.0-1.05)$ (A), Tolerance: ±5% | | | | | | |
| | Time setting | t_{p1} | (10-15-20-25-30) (s) at 120% of $[I_{p1}]$, Tolerance: ±15%, +0.1s -0 s | | | | | | |
| | Mode | - | AL/OFF ⑫ | | | | | | |
| Pretrip alarm (PTA2) | Current setting | I_{p2} | $[I_n] \times (0.75-0.8-0.85-0.9-0.95-1.0-1.05)$ (A), Tolerance: ±5% | | | | | | |
| | Time setting | t_{p2} | (1.5 × t_{p1}) (s) at 120% of $[I_{p2}]$, Tolerance: ±15%, +0.1s -0 s | | | | | | |
| | Mode | - | AL/OFF ⑫ | | | | | | |
| Undervoltage alarm ⑬ ⑭ | Voltage setting | - | $[V_n] \times (0.4-0.6-0.8)$ (V), Tolerance: ±5% | | | | | | |
| | Time setting | - | (0.1-0.5-1-2-5-10-15-20-30-36) (s) at voltage setting or less, Tolerance: ±15%, +0.1s -0s | | | | | | |
| | Recovery voltage setting ⑮ | - | $[V_n] \times (0.8-0.85-0.9-0.95)$ (V), Tolerance: ±5% | | | | | | |
| | Mode | - | AL/OFF ⑫ | | | | | | |

- ① Underlined values are default settings.
- ② Cannot be changed by the user.
- ③ The operating time (t) at a long time delay trip (or pretrip alarm) pickup current setting is given by

$$t = 1.44 \times t_R \times (I_R/i)^2 \pm 15\% + 0.15 - 0 [s]$$

(I_R : Long time delay trip or pretrip alarm pickup current setting, i : Overcurrent value, t_R : Time setting)

- ④ NON setting disables protective functions. If the short time delay trip function and the instantaneous trip (or MCR) function are both attempted to be set to NON, however, the fail-safe operates so that:
 - When the short time delay trip function has been set to NON, the instantaneous trip function cannot be set to NON or MCR.
 - When the instantaneous trip function has been set to NON or MCR, the short time delay trip function cannot be set to NON.
- ⑤ The short time delay trip function has precedence over the long time delay trip function. The OCR operates at the short time delay trip timing even in those current ranges in which the long time delay trip time setting is shorter than the short time delay time setting.
- ⑥ If DC24V zone interlock power is not provided between ⑬ and ⑭, the zone interlock is inoperative and the short time delay trip function works with a total clearing time of 50 ms or less when a fault current is detected.
- ⑦ Fig. 48 shows the operating characteristic at I^t ON and I^t OFF. When I^t is ON, the OCR operates at fixed trip pickup current of 500% of $[I_n]$.
- ⑧ The operating time (t) at a reverse power trip pickup current setting is given by

$$t = 0.429 \times t_{RP} / \{ (P/0.7P_R) - 1 \} \pm 20\% [s]$$

(P_R : Reverse power trip pickup current setting, P : Reverse power value, t_{RP} : Time setting)

- ⑨ Select NOR when the power supply of the load is upstream of the breaker and REV when it is downstream of the breaker. (See 5-3-2-4).
- ⑩ "TRIP" means the breaker is tripped open and operation indication is provided, "AL" means the breaker is not tripped and only operation indication is provided, and "OFF" means the breaker is not tripped open and no operation indication is provided.
- ⑪ Activated only when the fault point is within the zone covered by the breaker.
- ⑫ "AL" means operation indication is provided and "OFF" means no operation indication is provided.
- ⑬ Provides an alarm and delivers contact output when the voltage of the main circuit decreases to the voltage setting or lower for longer than the time setting. The alarm ceases when the main circuit voltage returns to the recovery voltage or higher.
- ⑭ When this capability is used in conjunction with the undervoltage trip device (UVT), an alarm may be provided after tripping operation of the breaker depending on the voltage setting.
- ⑮ The undervoltage alarm capability does not work if the main circuit voltage is originally under the recovery voltage.



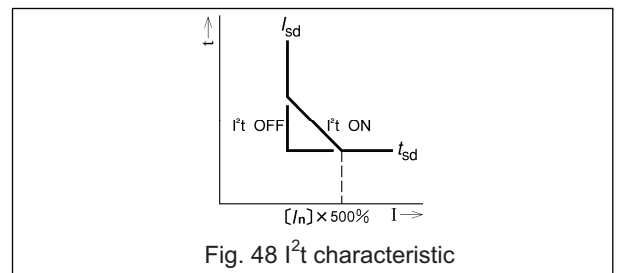


Fig. 48 I^2t characteristic

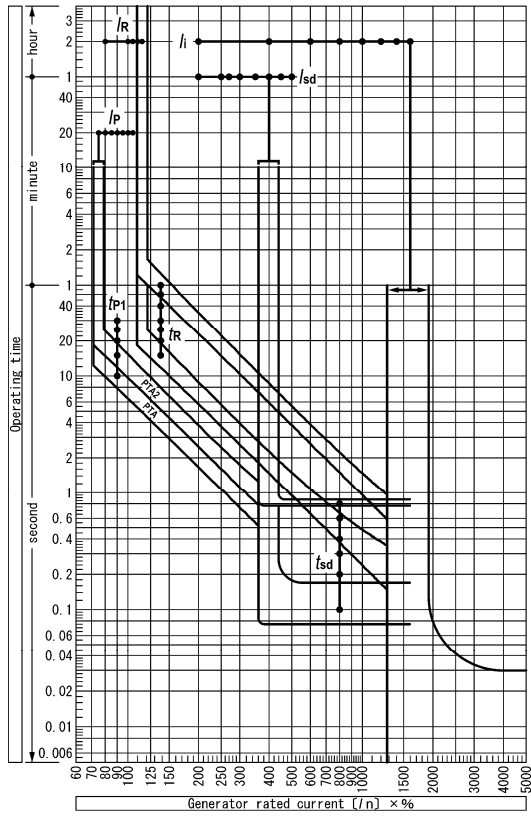

Long time delay trip, short time delay trip, instantaneous trip and pretrip alarm

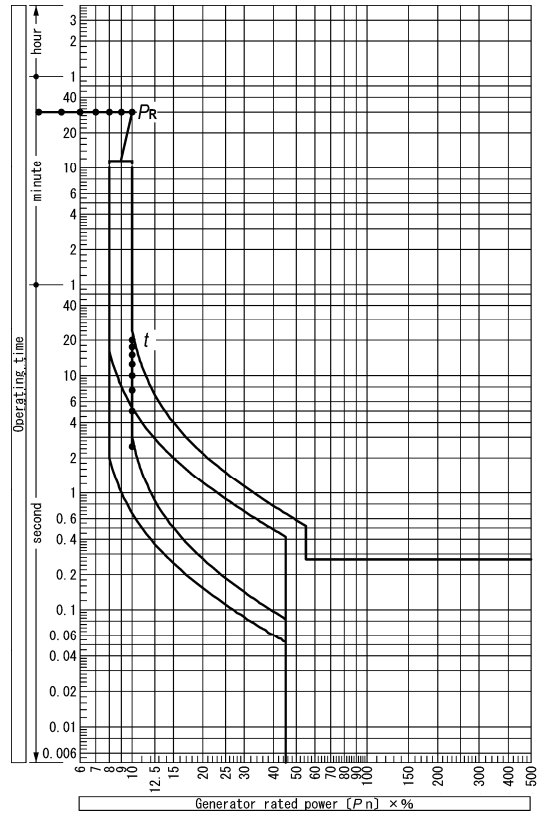

Reverse power trip

Fig. 49 Characteristic settings of type AGR-21BS/22BS/31BS OCR (with S characteristic)

5-3. OCR Setting Procedure


5-3-1. OCR Setting Procedure (AGR-11B type)

⚠ CAUTION


- OCR field tests and setting changes must be performed by competent persons.
- After setting changes are made, the settings be checked with e.g., a type ANU-1 OCR checker (optional).
- After completion of OCR tests, be sure to return the settings to the original values. Failure to do so may cause a fire or burnout.
- Before changing OCR settings, open the ACB and then lock the OFF button to prevent the ACB from being closed inadvertently.
- Use a small flatblade screwdriver with a torque of not more than 0.1 N·m or a force of not more than 0.1 N when adjusting the setting switches (rotary step switches or slide switches). An excessive torque or force may cause a malfunction.

The following describes how to set the OCR.

- 1) Open the ACB.
- 2) Push the right end of the OCR cover to the left at the hollow on the front cover to unlatch and open the OCR cover. See Fig. 50. If the OCR cover is padlocked, first remove the padlock.

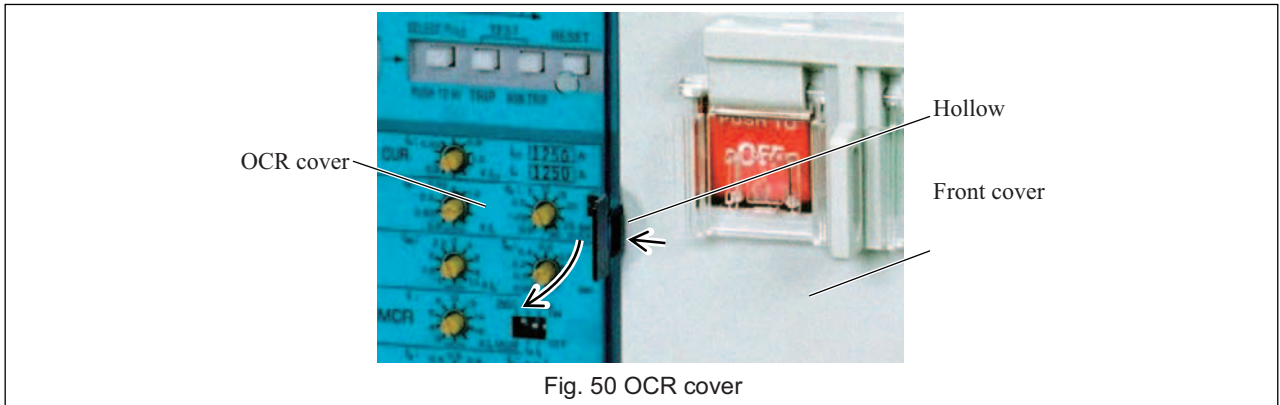

- 3) Use rotary step switches and slide switches to set the OCR. See Fig. 51.
 - Rotary step switches must be adjusted with a small flatblade screwdriver. Turn switch knobs stepwise and do not stop the knobs halfway between calibration markings. A bold line on a switch dial means the same settings.
 - Slide switches must also be adjusted with a small flatblade screwdriver. Do not stop switch knobs halfway.

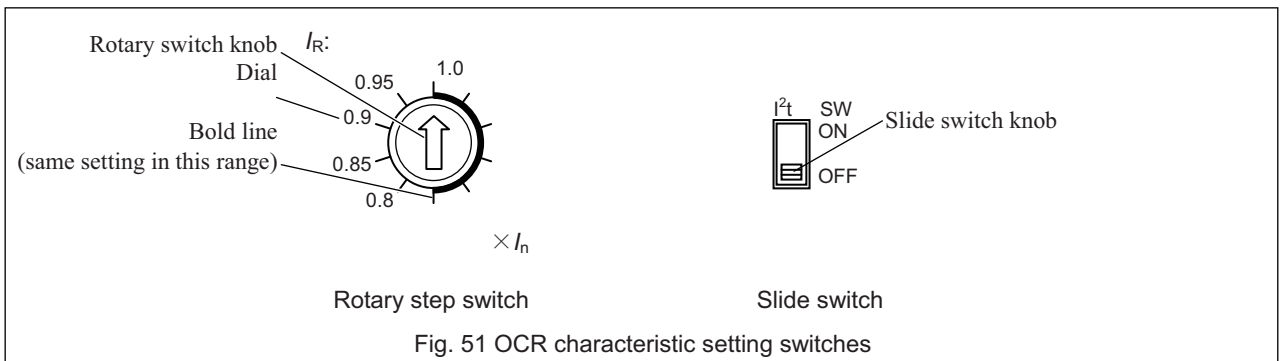

- 4) Close the OCR cover.
- 5) After setting changes are made, it is recommended that the settings be checked with e.g., a type ANU-1 OCR checker (optional).

5-3-2. OCR Setting Procedure (AGR-21B,22B,31B type)

⚠ CAUTION

- OCR field tests and setting changes must be performed by competent persons.
- After setting changes are made, the settings be checked with e.g., a type ANU-1 OCR checker (optional).
- After completion of OCR tests, be sure to return the settings to the original values. Failure to do so may cause a fire or burnout.
- Before changing OCR settings, open the ACB and then lock the OFF button to prevent the ACB from being closed inadvertently.
- Do not push the SET button diagonally. Doing so may cause a poor in return and malfunction.

The following describes how to display measurements and make settings of the OCR.

5-3-2-1. General

- 1) Push the right end of the OCR cover to the left at the hollow on the front cover to unlatch and open the OCR cover. See Fig. 52.

If the OCR cover is padlocked, first remove the padlock.

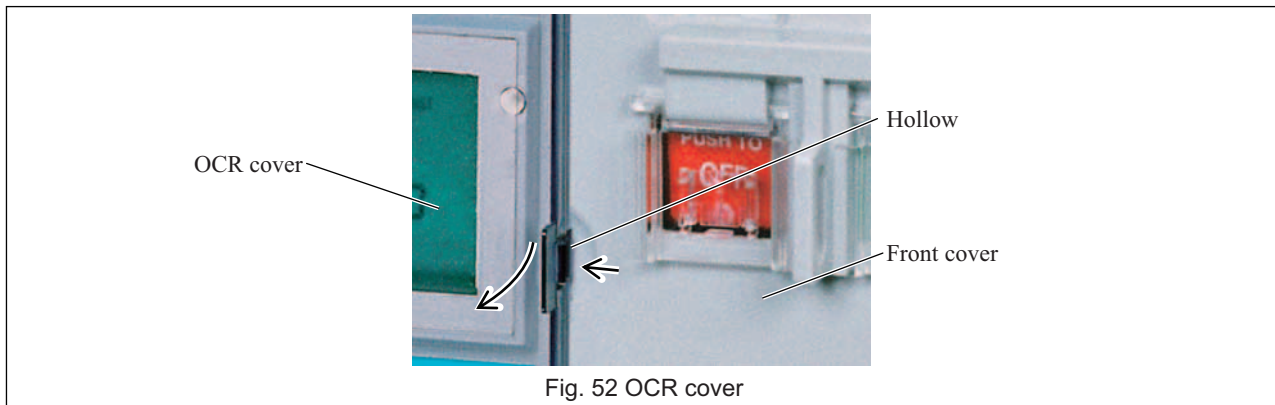


Fig. 52 OCR cover

- 2) Make sure that control power is supplied. Control power supply is required to display measurements.
- 3) The MENU, SET, cross and ENT buttons are used to navigate the LCD screen. Fig. 53 provides the general view of the OCR.

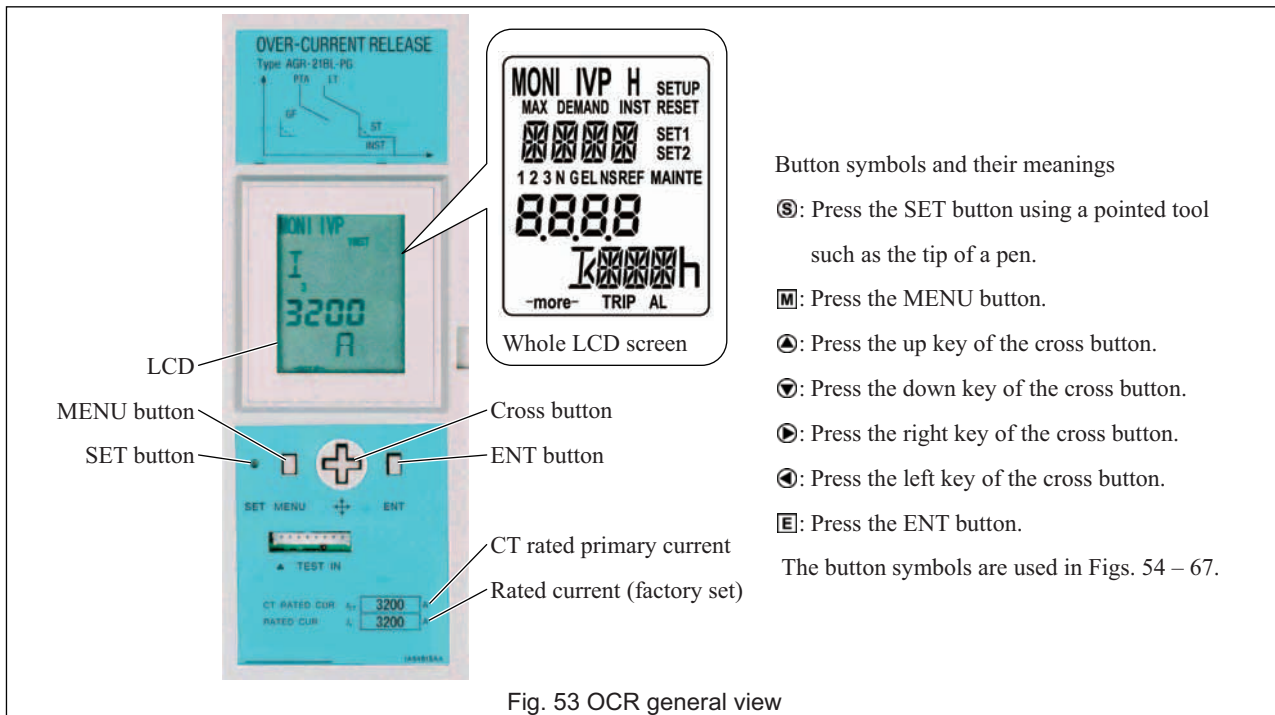


Fig. 53 OCR general view

- 4) Before changing OCR settings, open the ACB and then lock the OFF button to prevent the ACB from being closed inadvertently. Unlock the OFF button after changing OCR settings.
- 5) Close the OCR cover after viewing measurements or changing settings.
- 6) After setting changes are made, it is recommended that the settings be checked with e.g., a type ANU-1 OCR checker (optional).

5-3-2-2. Available screens

The type AGR-21B/22B OCR has six screens available as shown in Fig. 54 below. Press the MENU button to go to the next screen.

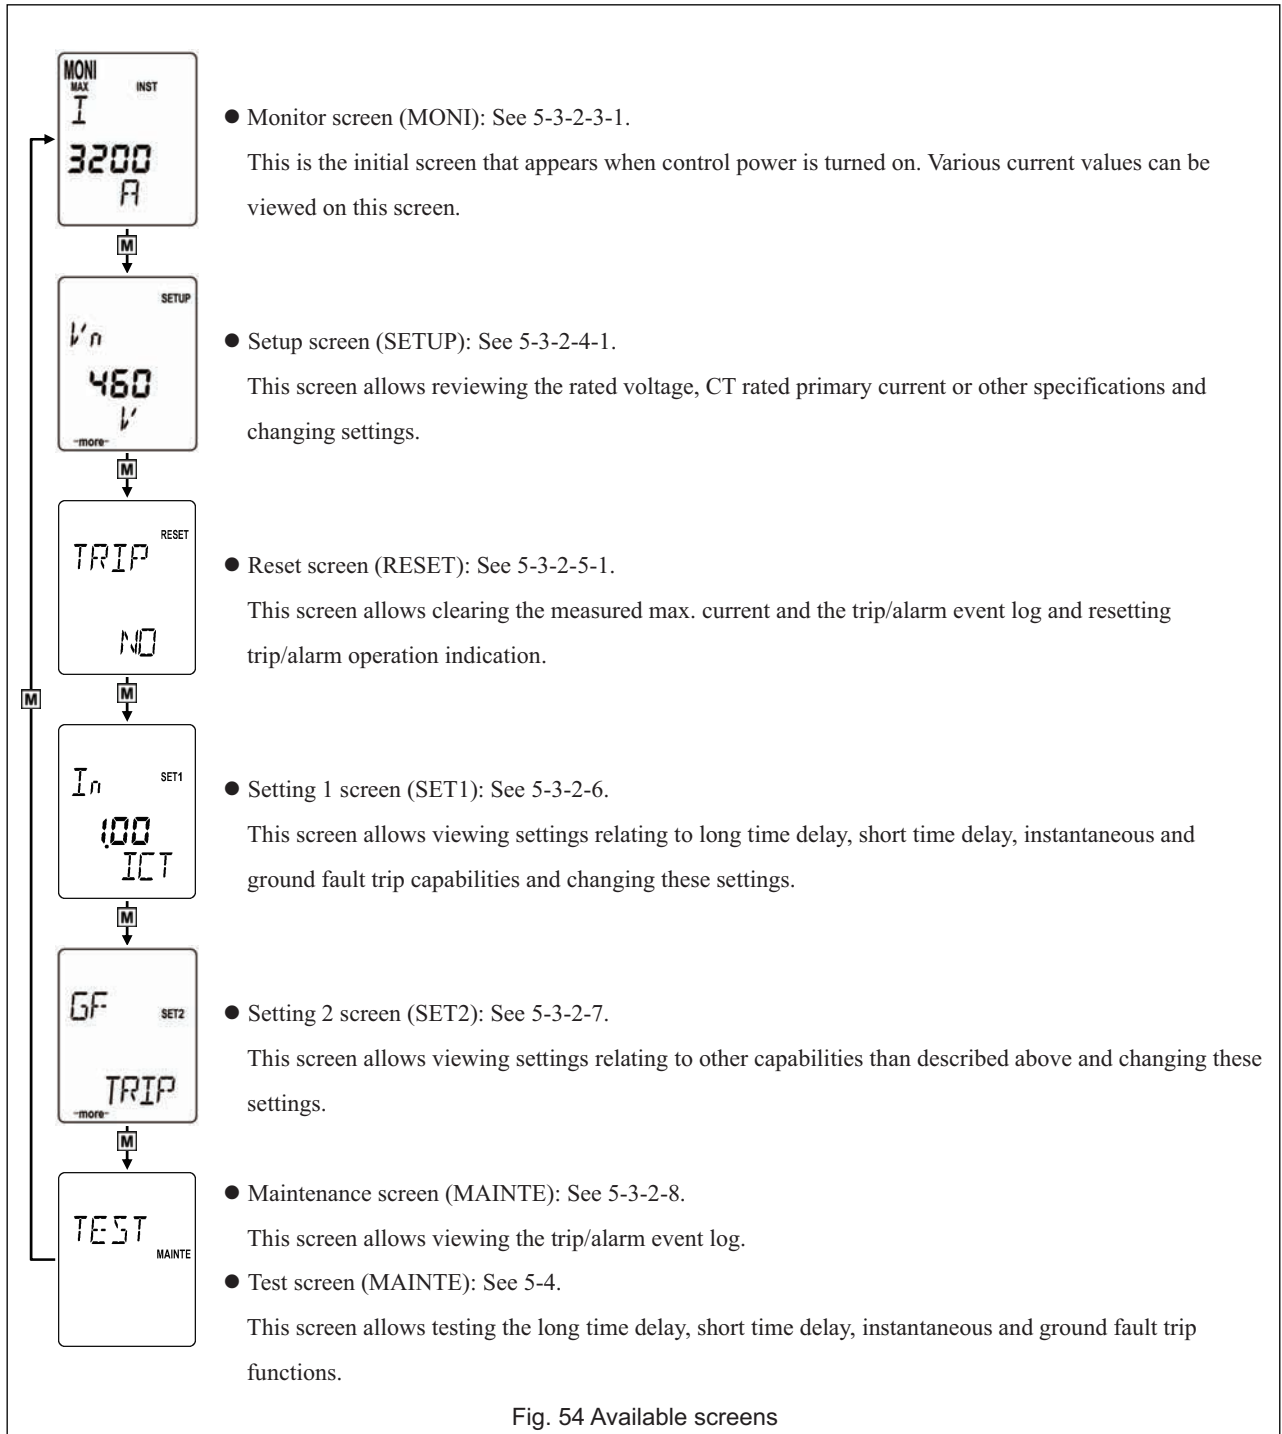


Fig. 54 Available screens

The type AGR-31B OCR has seven screens available as shown in Fig. 55 below. Press the MENU button to go to the next screen.

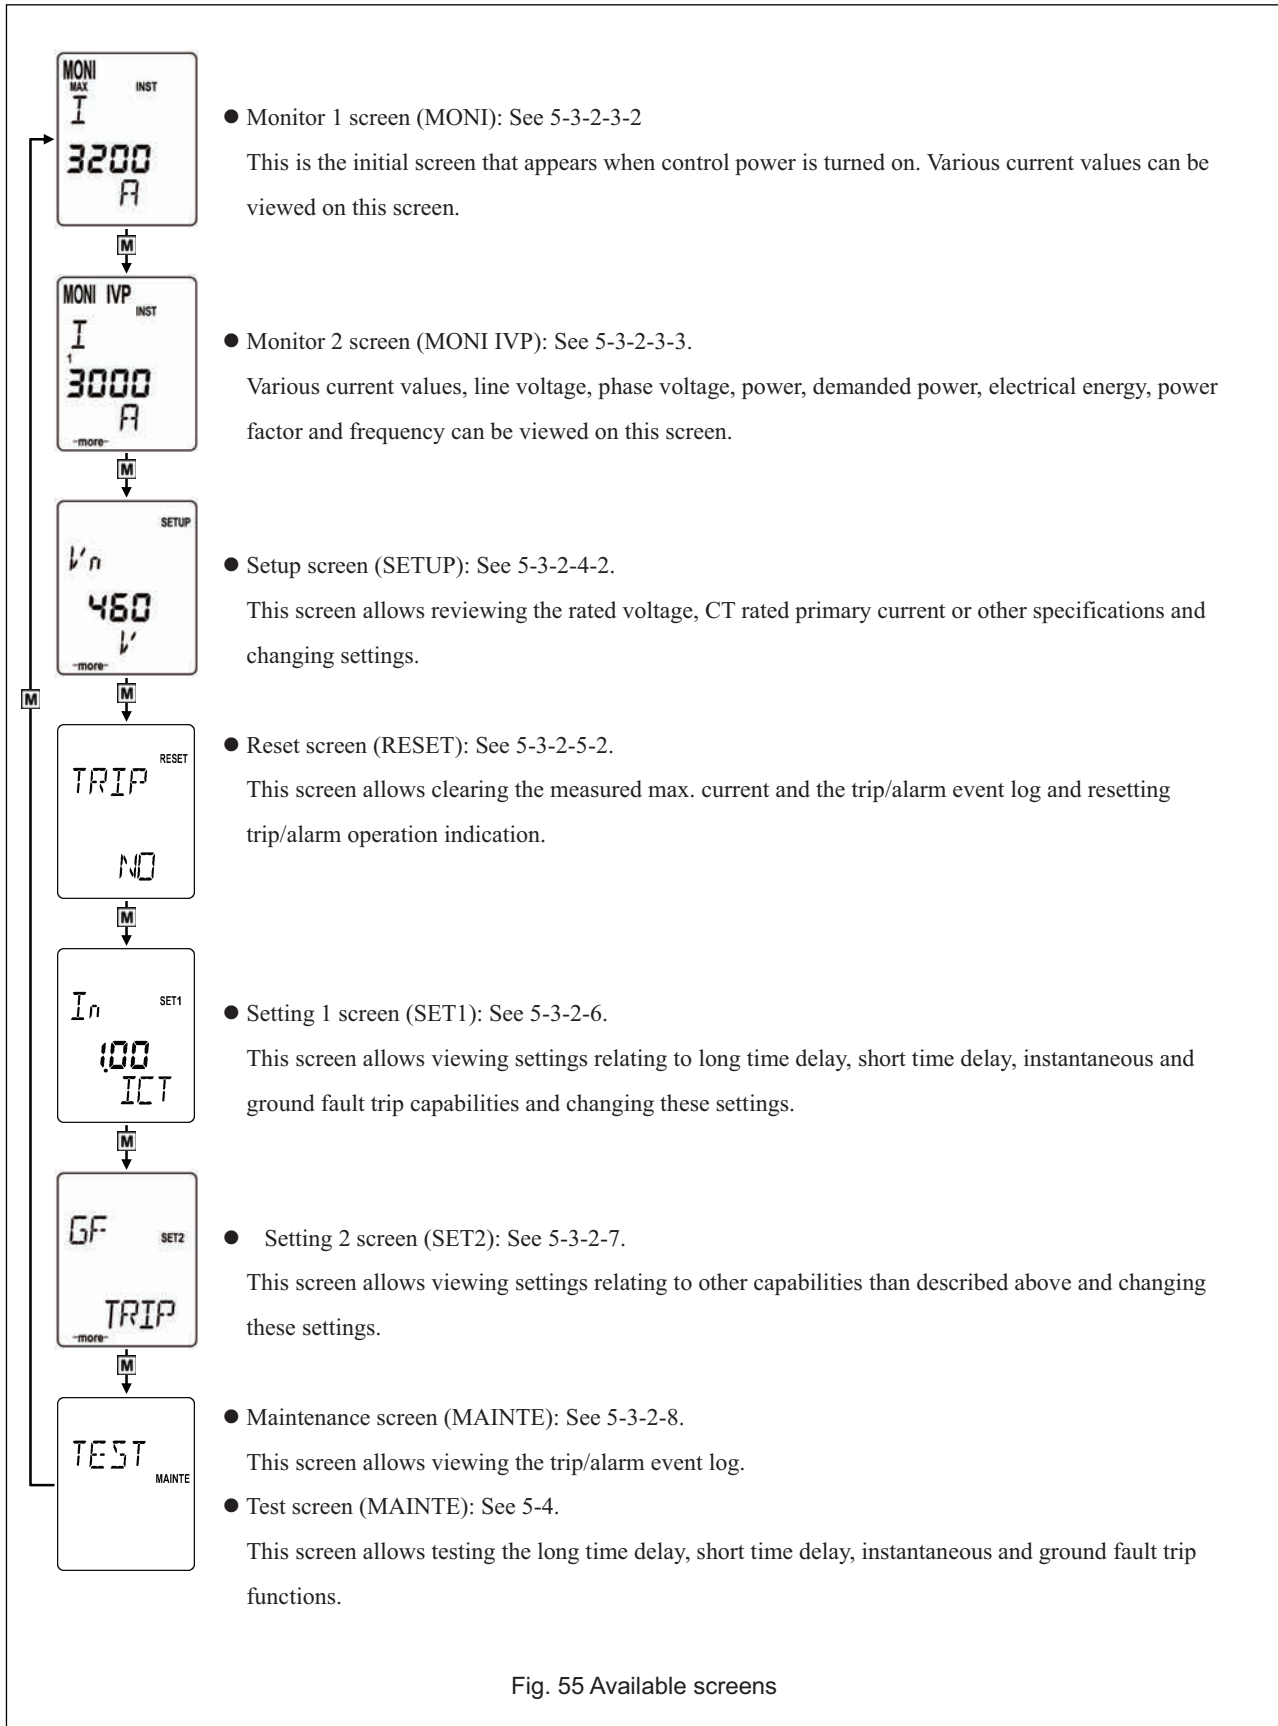


Fig. 55 Available screens

5-3-2-3. Monitor screen

5-3-2-3-1. Monitor screen (AGR-21B,22B)

Fig. 56 shows how to navigate the monitor screen and Table 26 lists the items that can be viewed on this screen.

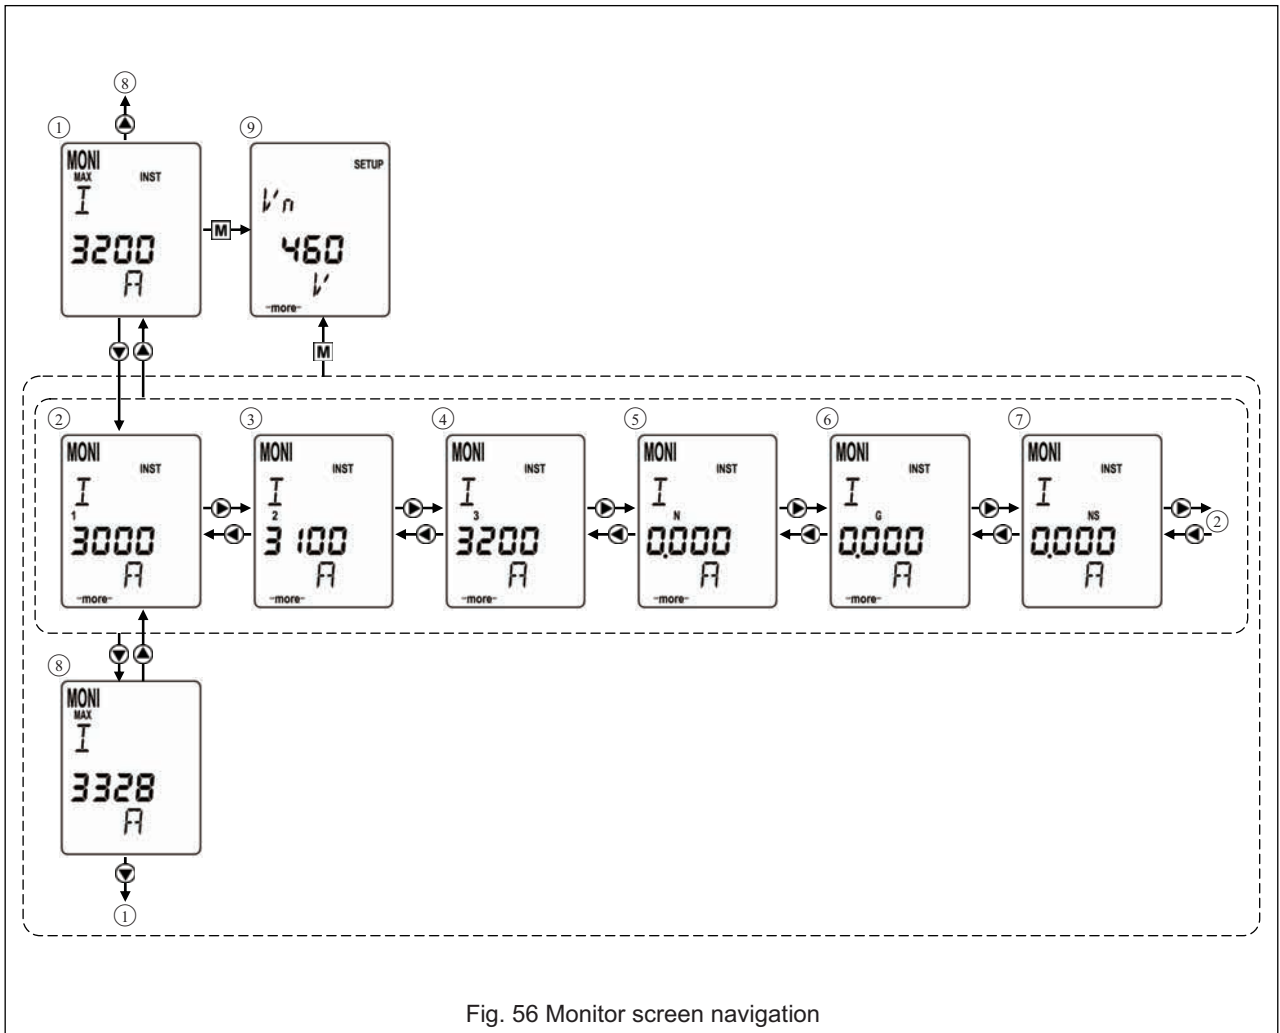


Fig. 56 Monitor screen navigation

Table 26 Monitor subscreens

| No. | Subscreen item *1 | Description | Tolerance |
|-----|--|--|--|
| ① | Max. phase current (present value) | Initial display | |
| ② | First phase (R/A-phase) current (present value) | - | For type AGR-21B OCR: ±2.5% of CT rated primary current [I_{CT}] Reading will be "0" when < 5% of CT rated primary current [I_{CT}]. |
| ③ | Second phase (S/B-phase) current (present value) | - | |
| ④ | Third phase (T/C-phase) current (present value) | - | |
| ⑤ | Neutral (N-phase) current (present value) | Displayed when THE ACB is of 4-pole type | |
| ⑥ | Ground fault current (present value) | Displayed only when THE ACB is equipped with the ground fault trip function | For type AGR-22B OCR: ±1.5% of CT rated primary current [I_{CT}] Reading will be "0" when < 1.5% of CT rated primary current [I_{CT}]. |
| ⑦ | Negative-phase current (present value) | Displayed only when THE ACB is equipped with the negative-phase sequence protective function | |
| ⑧ | Max. phase current | - | |
| ⑨ | (Setup screen) | See 5-3-2-4-1. | - |

*1 If no value is found for an item, the corresponding subscreen is skipped.

5-3-2-3-2. Monitor 1 screen (AGR-31B)

Fig. 57 shows how to navigate the monitor 1 screen and Table 27 lists the items that can be viewed on this screen.

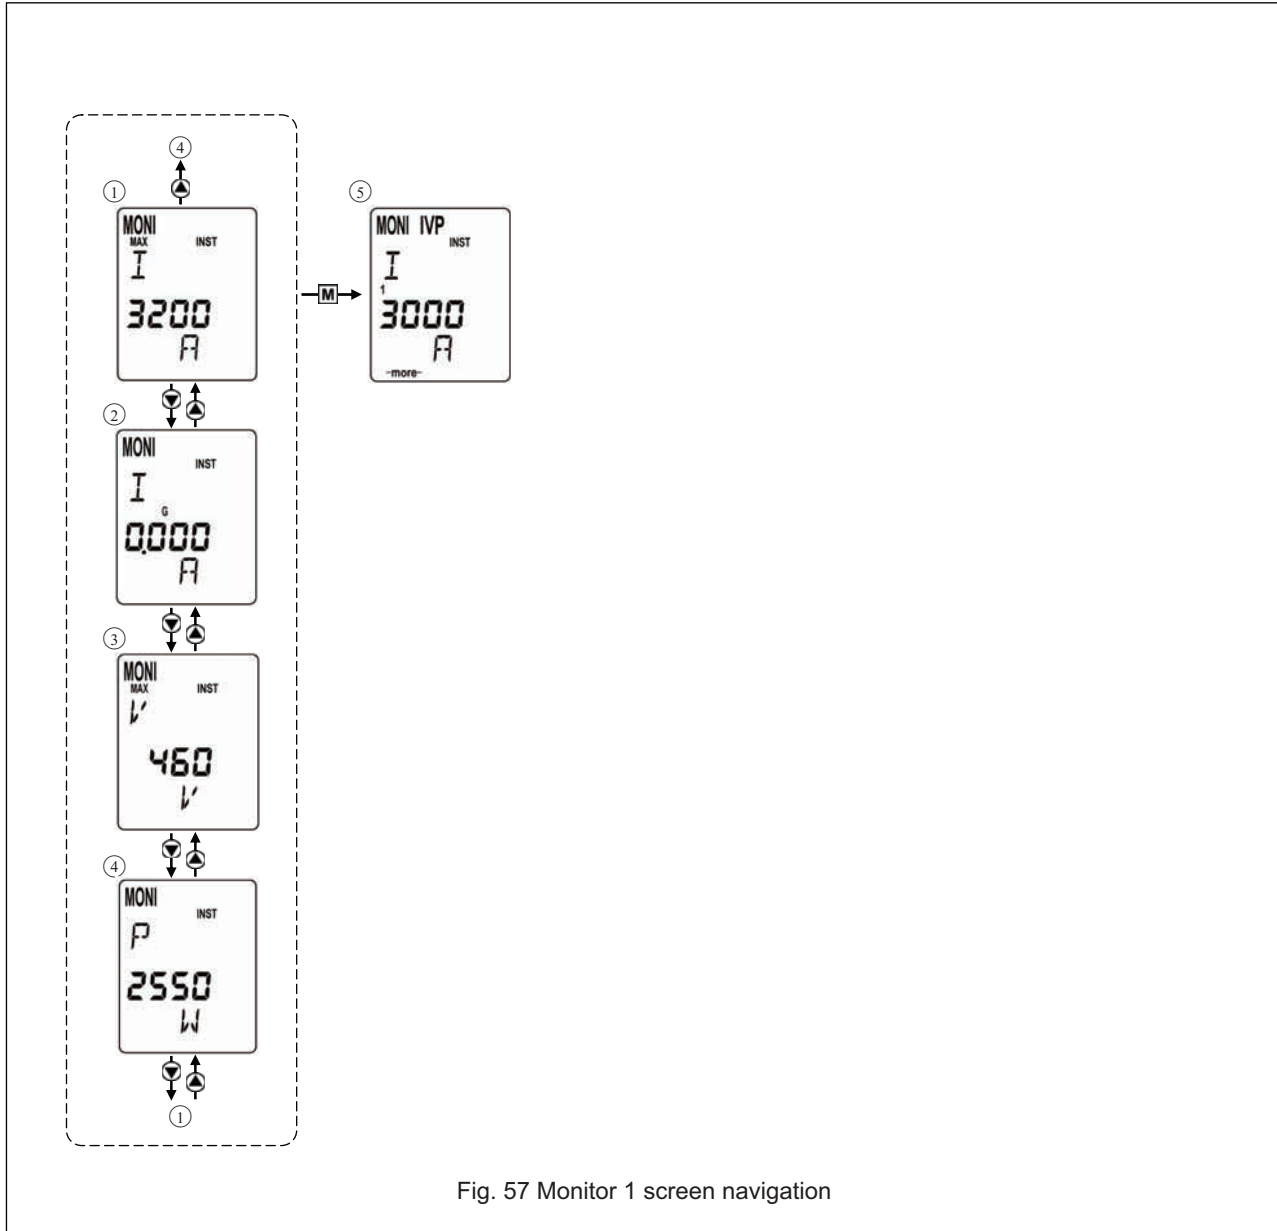


Fig. 57 Monitor 1 screen navigation

Table 27 Monitor 1 subscreens

| No. | Subscreen item *1 | Description | Tolerance |
|-----|--------------------------------------|---|---|
| ① | Max. phase current (present value) | Initial display | ±1.5% of CT rated primary current [I_{CT}] Reading will be "0" when < 1.5% of CT rated primary current [I_{CT}]. |
| ② | Ground fault current (present value) | Displayed only when THE ACB is equipped with the ground fault trip function | |
| ③ | Max. phase current | — | |
| ④ | Power (present value) | — | |
| ⑤ | (Monitor 2 screen) | See 5-3-2-3-3. | |

*1: If no value is found for an item, the corresponding subscreen is skipped.

5-3-2-3-3. Monitor 2 screen (AGR-31B)

Fig. 58 shows how to navigate the monitor 2 screen and Table 28 lists the items that can be viewed on this screen.

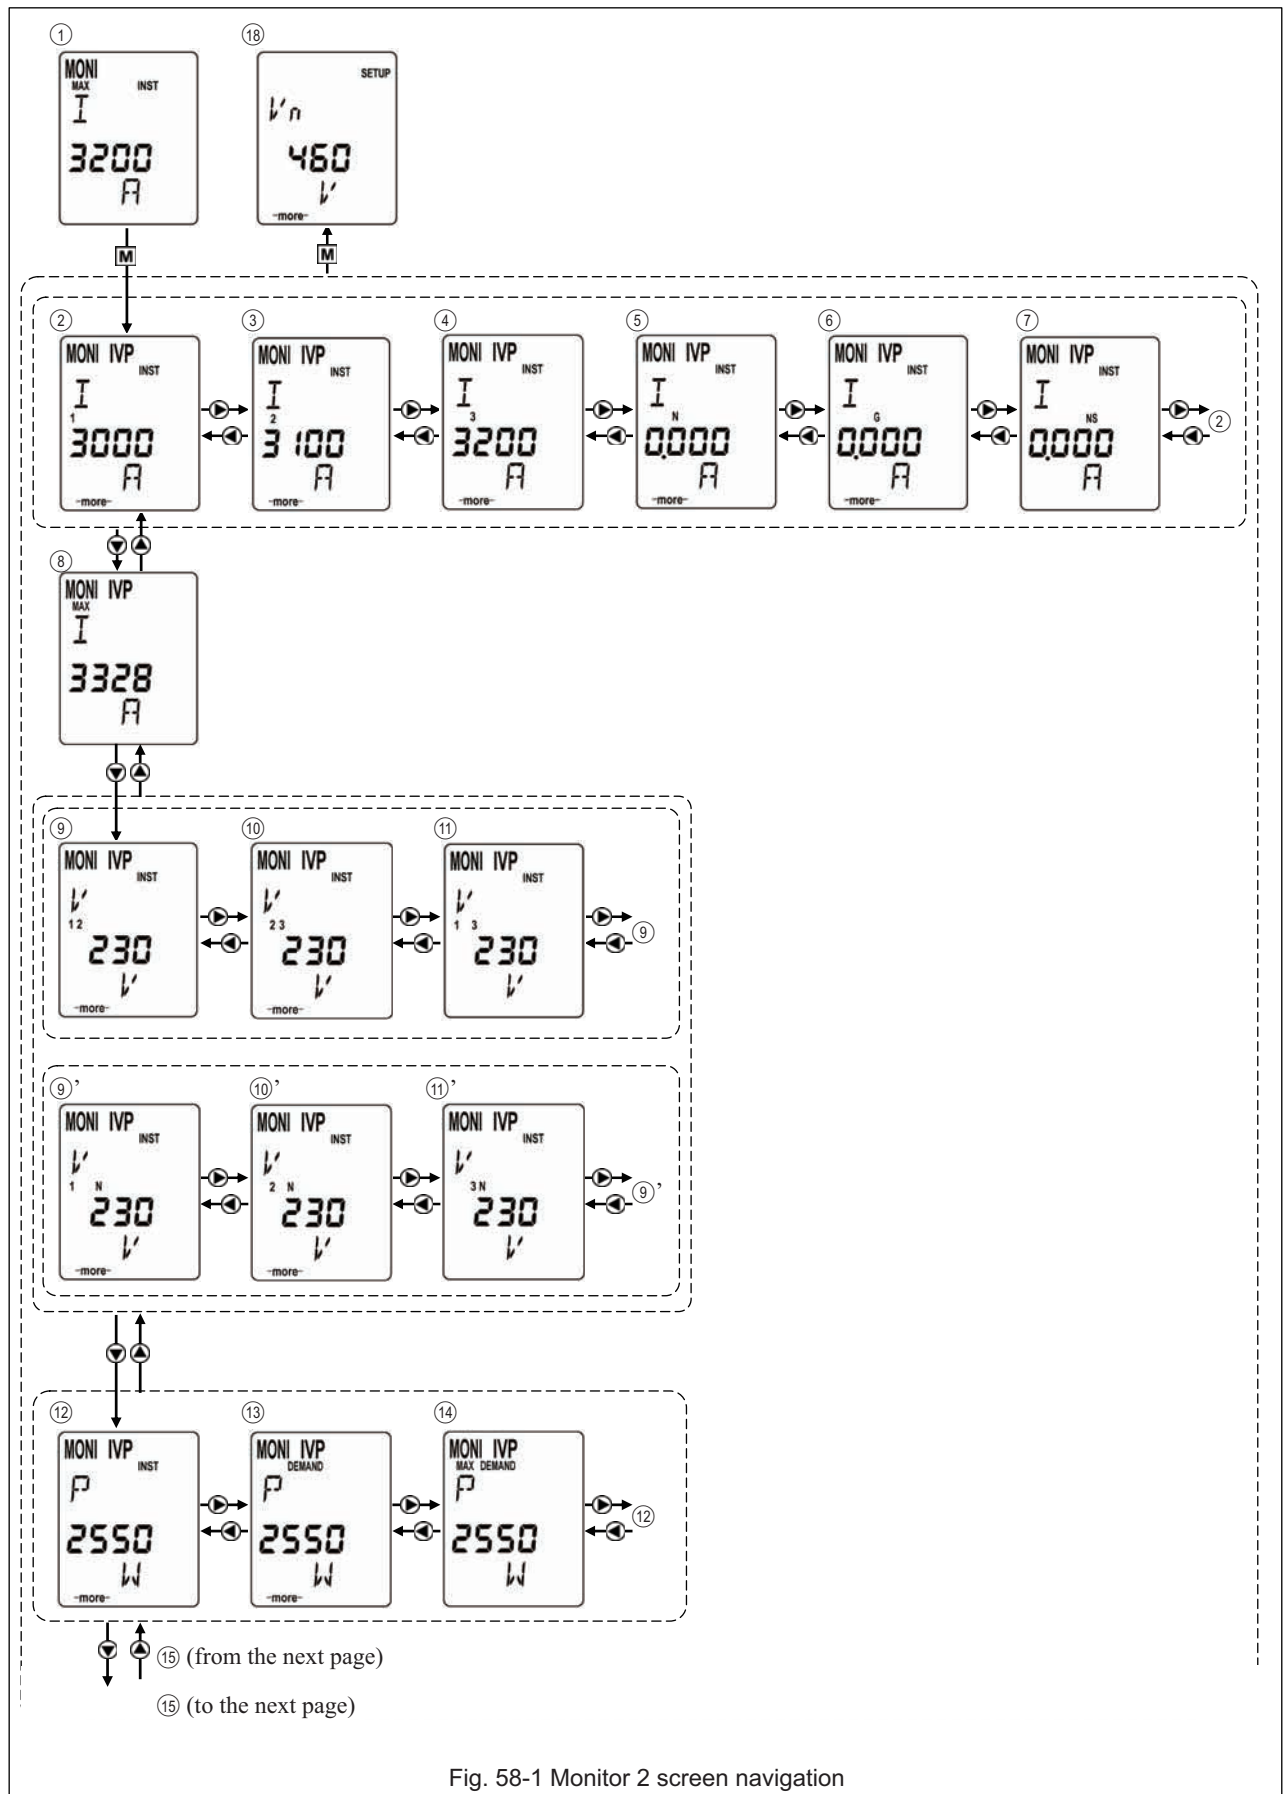


Fig. 58-1 Monitor 2 screen navigation

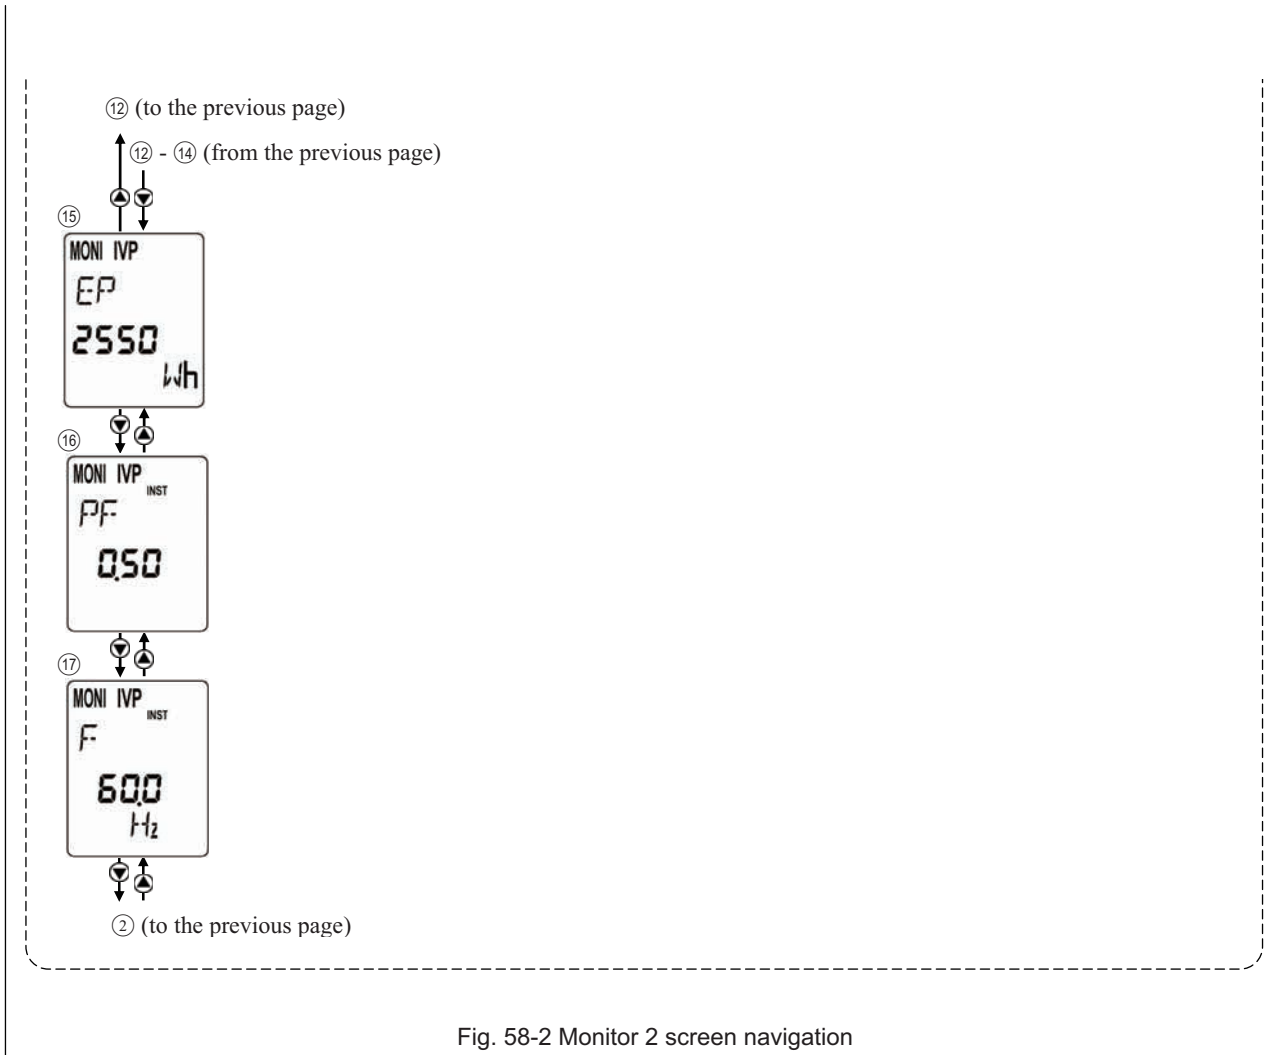


Fig. 58-2 Monitor 2 screen navigation

Table 28 Monitor 2 subscreens

| No. | Subscreen item *1 | Description | Tolerance |
|-----|---|--|-----------|
| ① | (Monitor 1 screen) | See 5-3-2-3-2. | |
| ② | First phase (R/A-phase) current (present value) | – | |
| ③ | Second phase (S/B-phase) current (present value) | – | |
| ④ | Third phase (T/C-phase) current (present value) | – | |
| ⑤ | Neutral (N-phase) current (present value) | Displayed when the ACB is of 4-pole type | |
| ⑥ | Ground fault current (present value) | Displayed only when the ACB is equipped with the ground fault trip function | |
| ⑦ | Negative-phase current (present value) | Displayed only when the ACB is equipped with the negative-phase sequence protective function | |
| ⑧ | Max. phase current | – | |
| ⑨ | Line voltage between first and second phases (R and S-phases, A and B-phases) | | |
| ⑩ | Line voltage between second and third phases (S and T-phases, B and C-phases) | Displayed when the ACB is of single phase 3-wire or 3-phase 3/4-wire type capable of line voltage indication | |
| ⑪ | Line voltage between third and first phases (T and R-phases, C and A-phases) | | |
| ⑨' | Phase voltage between first (R/A) and neutral (N) phases | | |
| ⑩' | Phase voltage between second (S/B) and neutral (N) phases | Displayed when ACB is of 3-phase 4-wire type capable of phase voltage indication | |
| ⑪' | Phase voltage between third (T/C) and neutral (N) phases | | |
| ⑫ | Power | – | |
| ⑬ | Demanded power | – | |
| ⑭ | Max. demanded power | – | |
| ⑮ | Electrical energy | – | |
| ⑯ | Power factor | – | |
| ⑰ | Frequency | – | |
| ⑱ | (Setup screen) | See 5-3-2-4-2. | |

±1.5% of CT rated primary current [I_{CT}]
 Reading will be "0" when < 1.5% of CT rated primary current [I_{CT}].

*1: If no value is found for an item, the corresponding subscreen is skipped.

5-3-2-4. Setup screen

5-3-2-4-1. Setup screen(AGR-21B,22B)

Fig. 59 shows how to navigate the setup screen and Table 29 lists the items that can be viewed on this screen.

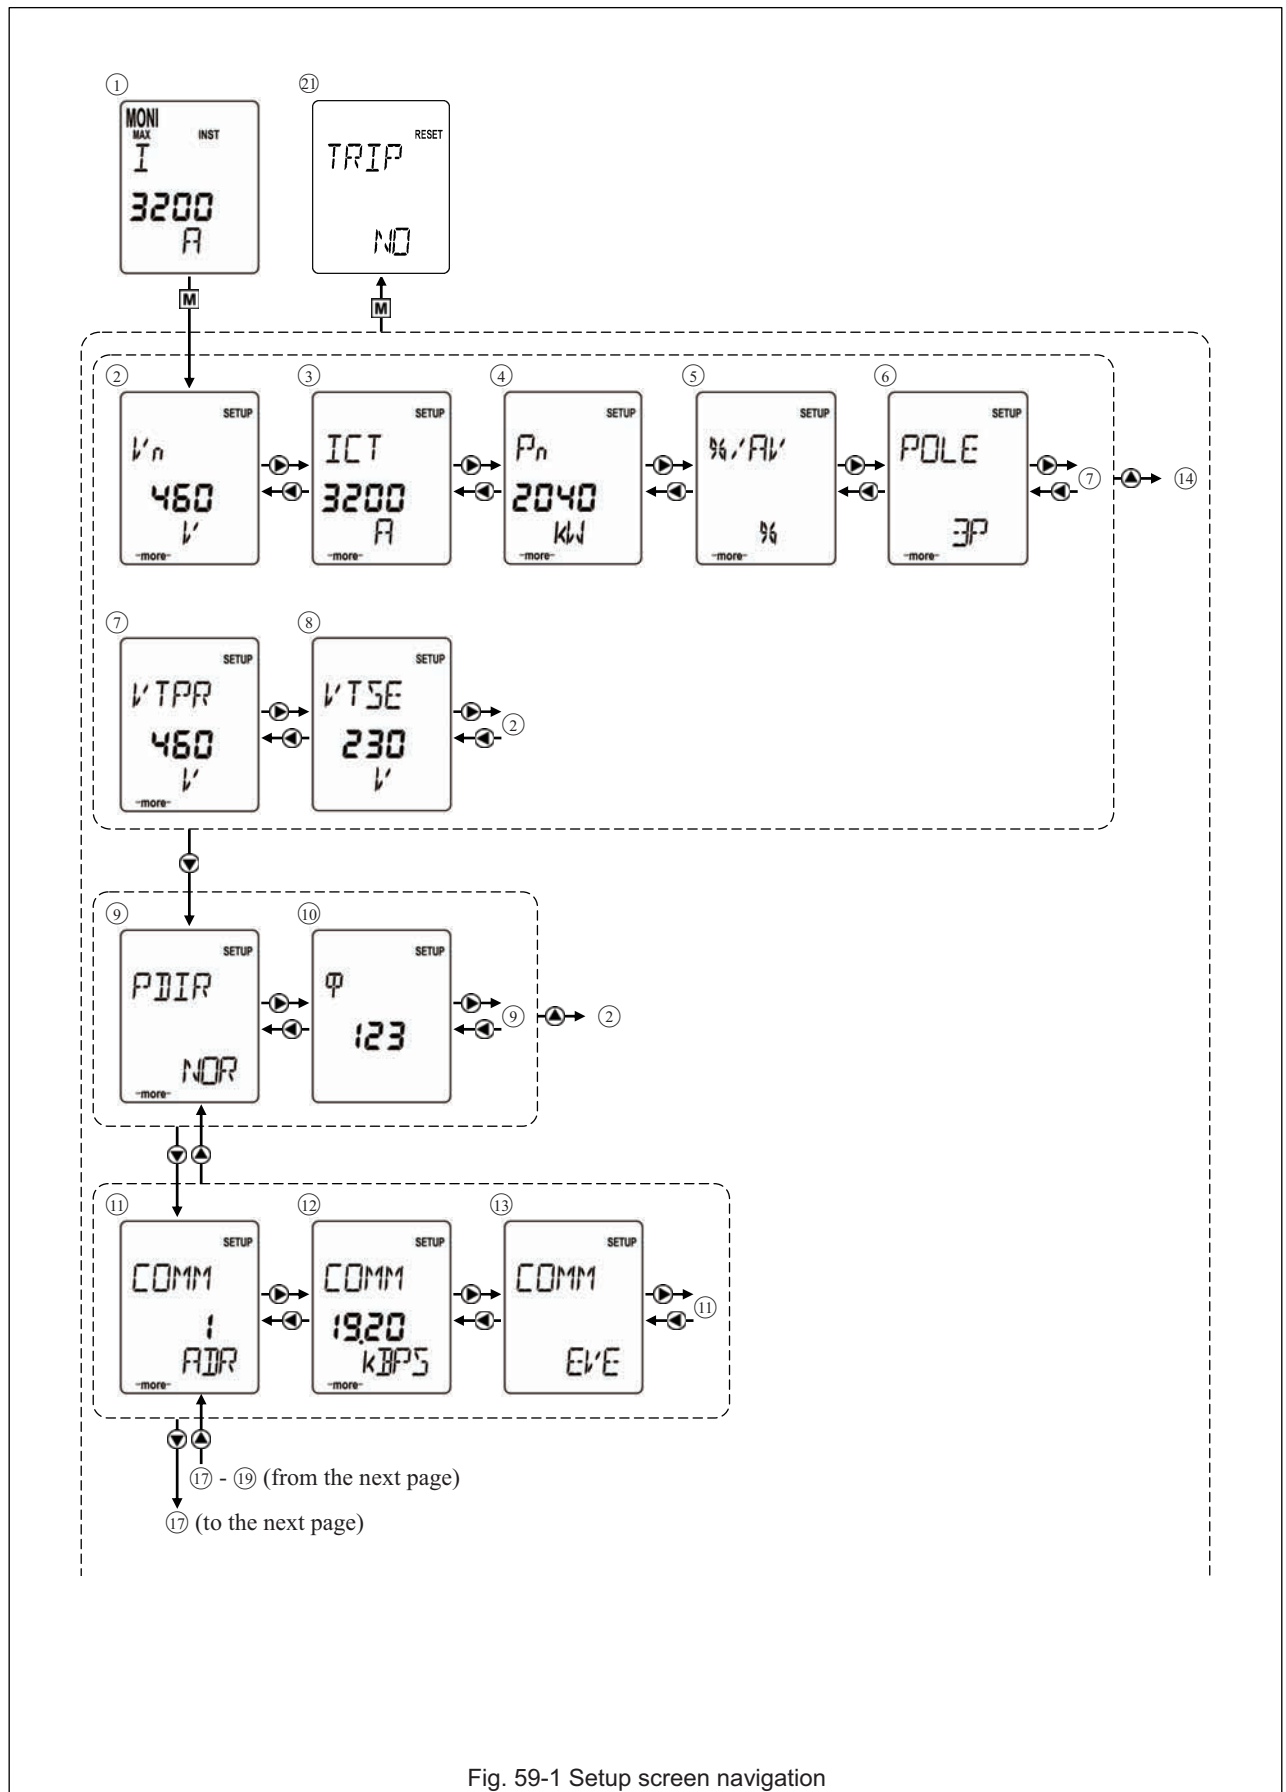


Fig. 59-1 Setup screen navigation

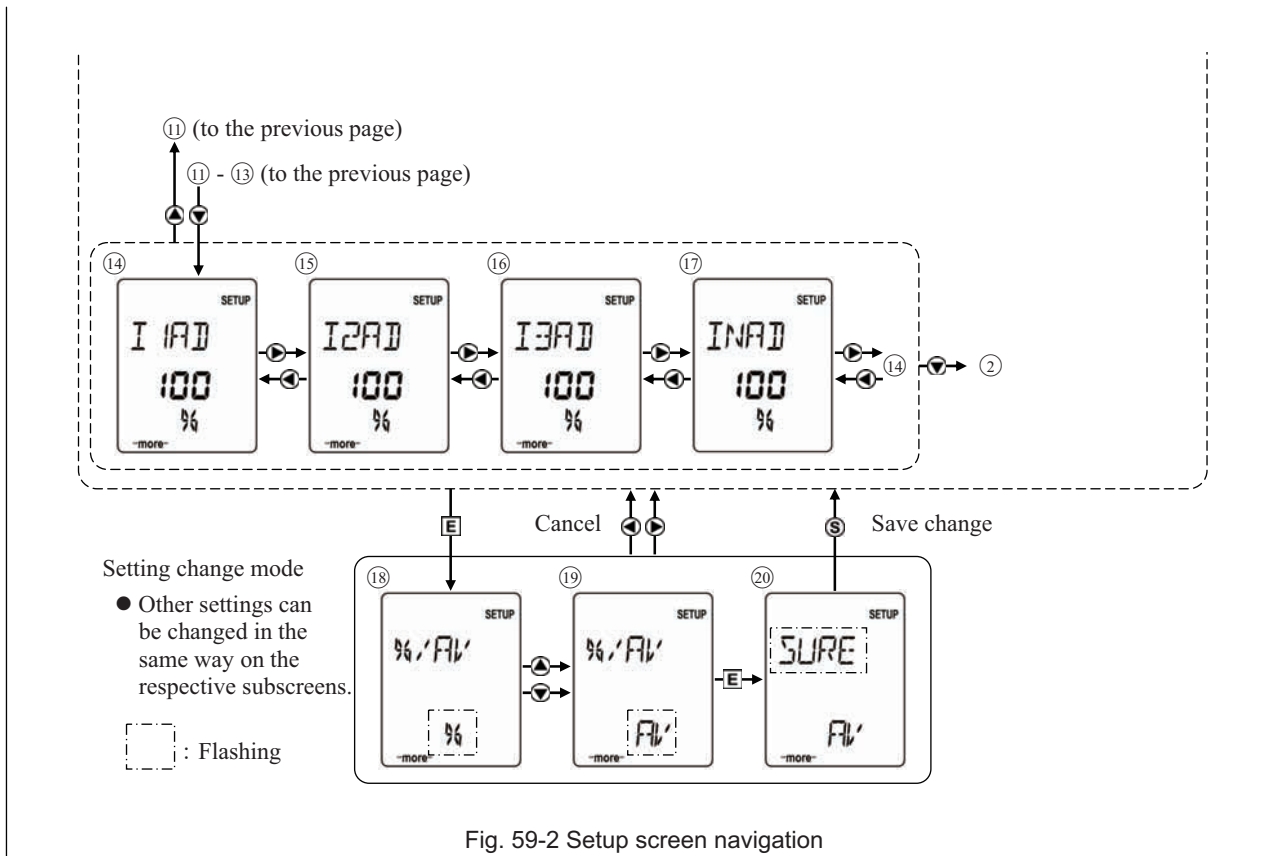


Table 29 Setup subscreens

| No. | Subscreen item *1 | Setting change | Setting range/Remarks *2 |
|-----|--|----------------|--|
| ① | (Monitor screen) | – | See 5-3-2-3-1. |
| ② | Main circuit rated voltage | Disabled | Fixed *3 |
| ③ | CT rated primary current | Disabled | Fixed *3 |
| ④ | Main circuit rated power | Disabled | Fixed *3 *8 |
| ⑤ | Trip/alarm pickup settings | Enabled | % - AV (%: Percentage of setting reference, AV: Actual current (A.kA)/voltage (V)/power (W / kW) value) |
| ⑥ | Number of poles | Disabled | Fixed *3 |
| ⑦ | PT (potential transformer) primary current | Disabled | Fixed (displayed only when THE ACB is equipped with the reverse power trip function and the main circuit voltage exceeds 250V) *3 |
| ⑧ | PT (potential transformer) secondary current | Disabled | Fixed (displayed only when THE ACB is equipped with the reverse power trip function and the main circuit voltage exceeds 250V) *3 |
| ⑨ | Polarity | Enabled | NOR-REV (NOR: Normal connection, REV: Reverse connection) Select NOR when the power supply of the load is upstream of the breaker and REV when it is downstream of the breaker. *8 |
| ⑩ | Phase sequence | Enabled | <u>123</u> -321 (123 means RST (ABC) and 321 does TSR (CBA) from left to right, as seen from the front of the ACB) |
| ⑪ | Transmission address | Enabled | <u>01</u> -02...-31 (31 addresses) *4 *5 |
| ⑫ | Transmission rate | Enabled | 4800/9600/ <u>19200</u> baud |
| ⑬ | Parity | Enabled | <u>EVE</u> -ODD-NON |
| ⑭ | Current adjustment, 1st phase | Enabled | 97-98-99-100-101-102-103(%) *6 *7 |
| ⑮ | Current adjustment, 2nd phase | Enabled | 97-98-99-100-101-102-103(%) *6 *7 |
| ⑯ | Current adjustment, 3rd phase | Enabled | 97-98-99-100-101-102-103(%) *6 *7 |
| ⑰ | Current adjustment, Nth phase | Enabled | 97-98-99-100-101-102-103 (%) (Equipped on 4-pole ACBs) *6 *7 |
| ⑱ | Setting change mode "Start" | – | Press ENTER to enter this subscreen from a setup subscreen. The value that can be changed will flash. To exit this subscreen, press the right or left key of the cross button. |
| ⑲ | Setting change mode "Setting change" | – | Press the up or down key of the cross button to change the setting. To exit this subscreen with no change in setting, press the right or left key of the cross button. |
| ⑳ | Setting change mode "Save change" < | – | Press ENTER to enter this subscreen from subscreen ⑲. "SURE" will be flashing. To save the change, press SET. The subscreen will exit to the Reset screen. To exit this subscreen while no change is saved, press the right or left key of the cross button. |
| ㉑ | (Reset screen) | – | See 5-3-2-5-1. |

*1 If no value is found for an item, the corresponding subscreen is skipped.

*2 Underlined values are default settings.

*3 Factory set according to your request.

*4 The setting procedure is somewhat different from ⑱ – ㉑. Press ENT while subscreen ⑱ is displayed. The ten's digit of the communication address will flash. Use the up or down key of the cross button to change the digit. After changing the ten's digit, press ENT again. The unit's digit of the communication address will flash. Use the up or down key of the cross button to change the digit. After changing the unit's digit, press ENT. "SURE" will start flashing. See the description of subscreen ⑲.

*5 If a communication address other than 01 to 31 is entered and SET is pressed, the address setting will not change; the ten's digit of the communication address will flash, then the OCR returns to setting change mode.

*6 Factory set before delivery.

*7 These subscreens are for making corrections to avoid variation in measurement. Settings on the subscreens have no influence upon trip/alarm pickup current values.

*8 Only for the AGR-22BS-PR, this item is indicated.

5-3-2-4-2. Setup screen(AGR-31B)

Fig. 60 shows how to navigate the setup screen and Table 30 lists the items that can be viewed on this screen.

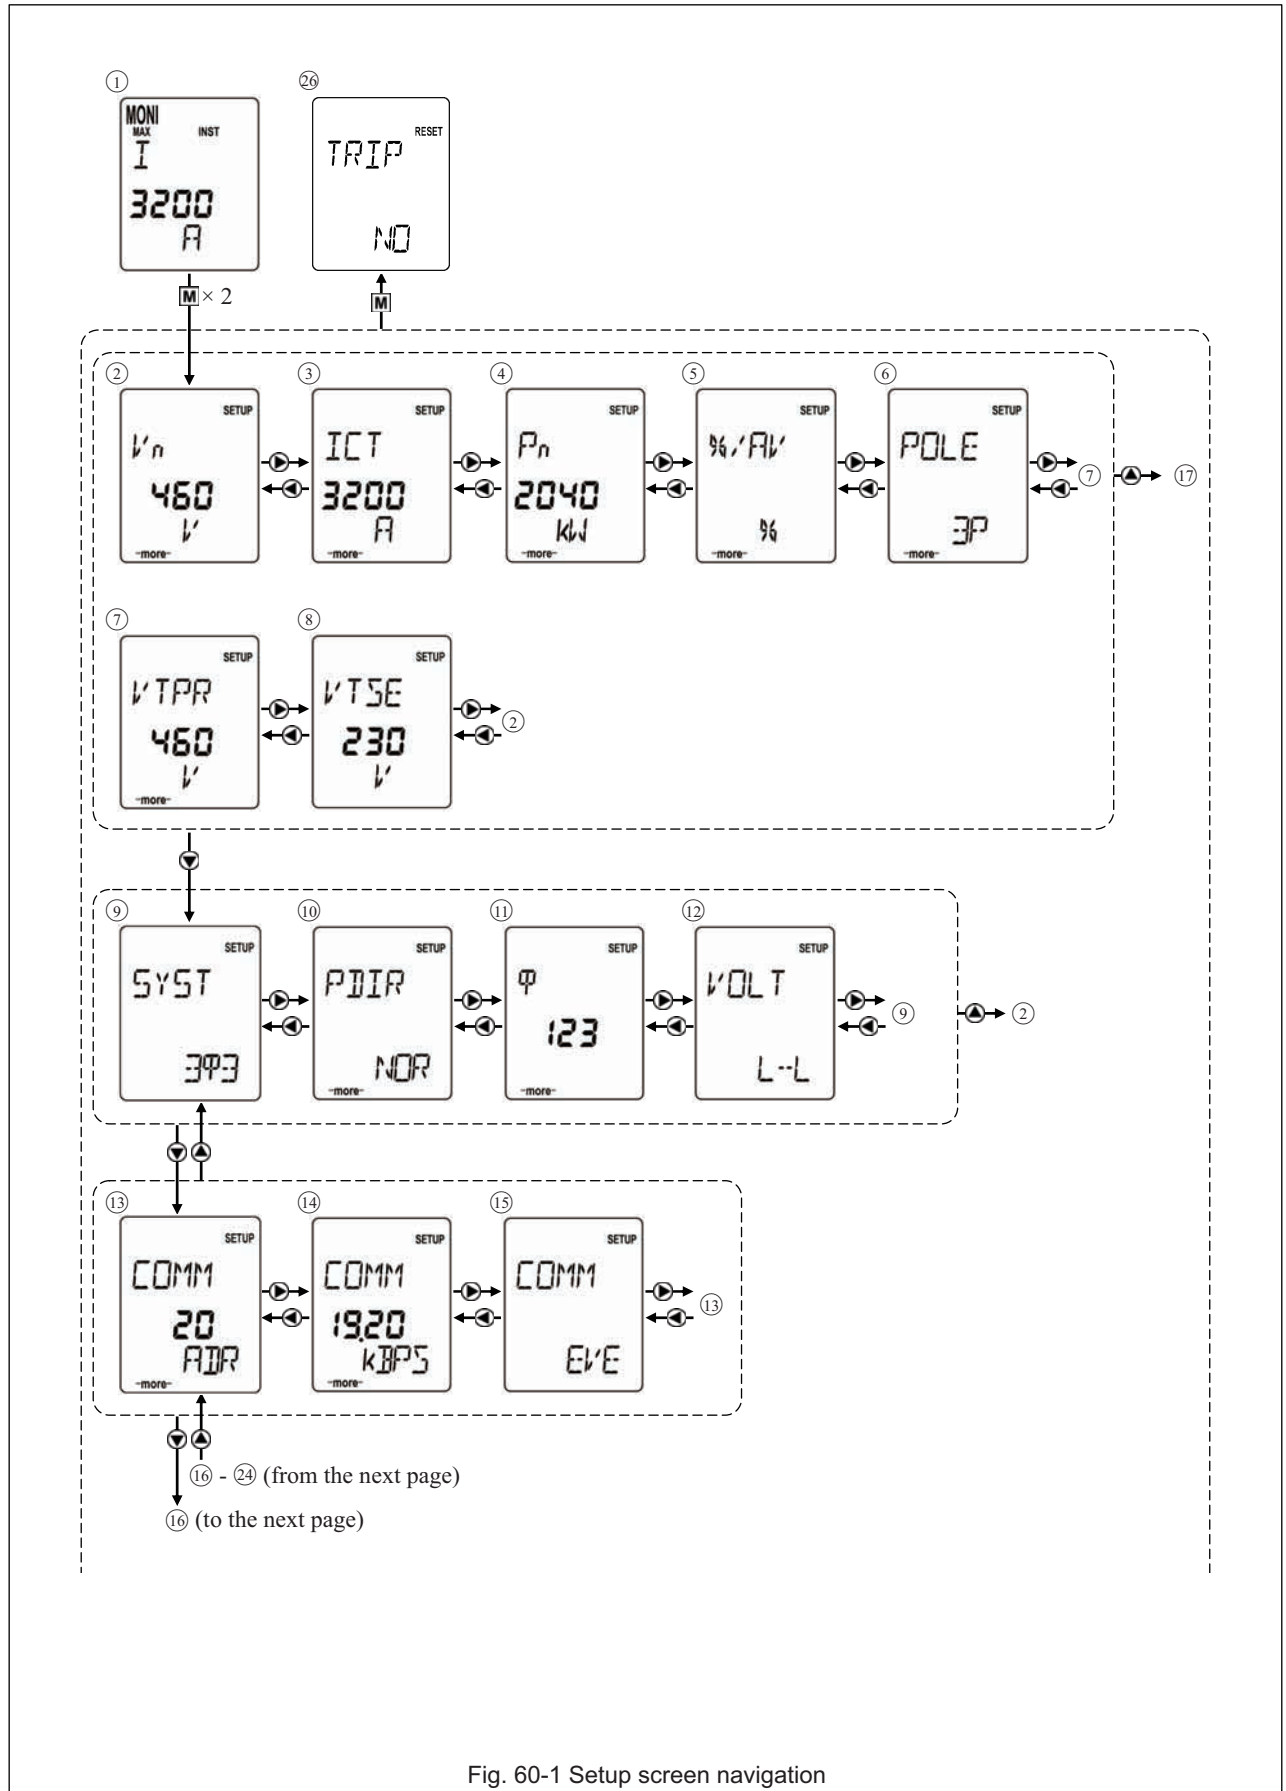


Fig. 60-1 Setup screen navigation

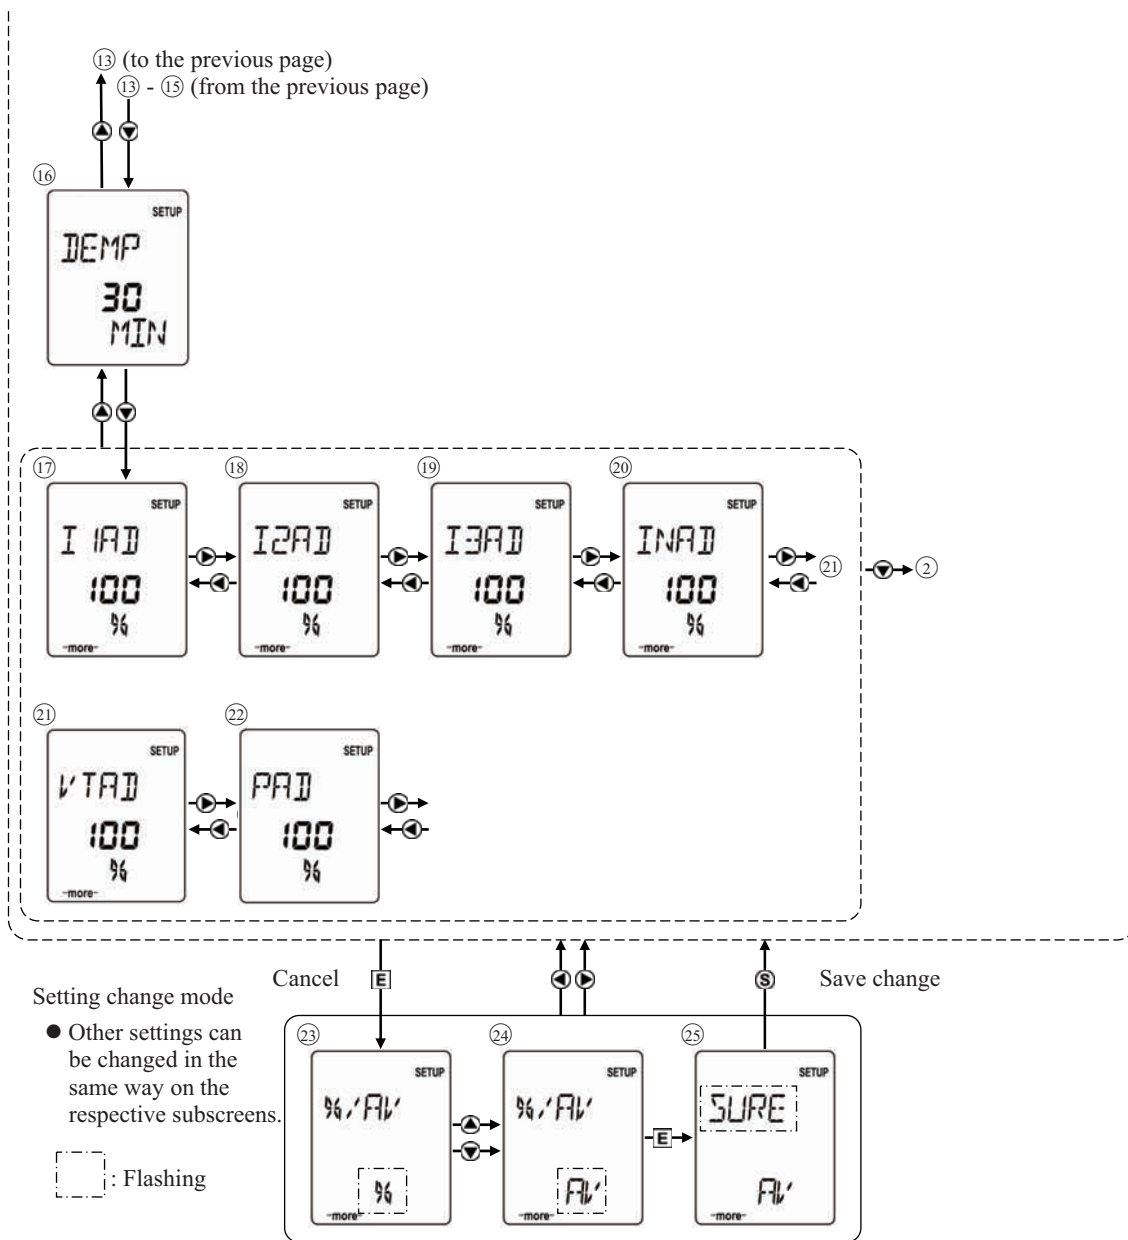


Fig. 60-2 Setup screen navigation

Table 30 Setup subscreens

| No. | Subscreen item *1 | Setting change | Setting range/Remarks *2 |
|-----|--|----------------|--|
| ① | (Monitor 1 screen) | – | See 5-3-2-3-2. |
| ② | Main circuit rated voltage | Disabled | Fixed *3 |
| ③ | CT rated primary current | Disabled | Fixed *3 |
| ④ | Main circuit rated power | Disabled | Determined (calculated with main circuit rated voltage and rated current [In]) Fixed *3 (for OCR type AGR-31BS-PR) |
| ⑤ | Trip/alarm pickup settings | Enabled | % - AV (%: Percentage of setting reference, AV: Actual current (A/kA)/voltage (V)/power (W / kW) value) |
| ⑥ | Number of poles | Disabled | Fixed *3 |
| ⑦ | PT (potential transformer) primary current | Disabled | Fixed (displayed only when THE ACB is equipped with the reverse power trip function and the main circuit voltage exceeds 250V) *3 |
| ⑧ | PT (potential transformer) secondary current | Disabled | Fixed (displayed only when THE ACB is equipped with the reverse power trip function and the main circuit voltage exceeds 250V) *3 |
| ⑨ | Phase wiring scheme | Enabled | <u>1φ3-3φ3-3φ4</u> |
| ⑩ | Polarity | Enabled | NOR-REV (NOR: Normal connection, REV: Reverse connection) Select NOR when the power supply of the load is upstream of the breaker and REV when it is downstream of the breaker. (for OCR type AGR-31B) |
| ⑪ | Phase sequence | Enabled | <u>123-321</u> (123 means RST (ABC) and 321 does TSR (CBA) from left to right, as seen from the front of the ACB) |
| ⑫ | Voltage indication | Enabled | <u>L-N-L-L</u> |
| ⑬ | Transmission address | Enabled | <u>01-02-...-31</u> (31 addresses) *4 *5 |
| ⑭ | Transmission rate | Enabled | <u>4800/9600/19200</u> baud |
| ⑮ | Parity | Enabled | <u>EVE-ODD-NON</u> |
| ⑯ | Demand interval | Enabled | <u>5-30-60</u> (MIN) |
| ⑰ | Current adjustment, 1st phase | Enabled | <u>97-98-99-100-101-102-103</u> (%) *6 *7 |
| ⑱ | Current adjustment, 2nd phase | Enabled | <u>97-98-99-100-101-102-103</u> (%) *6 *7 |
| ⑲ | Current adjustment, 3rd phase | Enabled | <u>97-98-99-100-101-102-103</u> (%) *6 *7 |
| ⑳ | Current adjustment, Nth phase | Enabled | <u>97-98-99-100-101-102-103</u> (%) (Equipped on 4-pole ACBs) *6 *7 |
| ㉑ | Voltage ratio adjustment | Enabled | <u>97-98-99-100-101-102-103</u> (%) *6 *7 |
| ㉒ | Power adjustment | Enabled | <u>97-98-99-100-101-102-103</u> (%) *6 *7 |
| ㉓ | Setting change mode "Start" | – | Press ENTER to enter this subscreen from a setup subscreen. The value that can be changed will flash. To exit this subscreen, press the right or left key of the cross button. |
| ㉔ | Setting change mode "Setting change" | – | Press the up or down key of the cross button to change the setting. To exit this subscreen with no change in setting, press the right or left key of the cross button. |
| ㉕ | Setting change mode "Save change" | – | Press ENTER to enter this subscreen from subscreen ㉓. "SURE" will be flashing. To save the change, press SET. The subscreen will exit to the Reset screen. To exit this subscreen while no change is saved, press the right or left key of the cross button. |
| ㉖ | (Reset screen) | – | See 5-3-2-5-2. |

*1: If no value is found for an item, the corresponding subscreen is skipped.

*2: Underlined values are default settings.

*3: Factory set according to your request.

*4: The setting procedure is somewhat different from ㉓ – ㉕. Press ENT while subscreen ⑬ is displayed. The ten's digit of the communication address will flash. Use the up or down key of the cross button to change the digit. After changing the ten's digit, press ENT again. The unit's digit of the communication address will flash. Use the up or down key of the cross button to change the digit. After changing the unit's digit, press ENT. "SURE" will start flashing. See the description of subscreen ㉓. If SET is pressed when the ten's digit is flashing, "SURE" will start flashing, indicating that the current subscreen has exited to subscreen ㉓.

*5: If a communication address other than 01 to 31 is entered and SET is pressed, the address setting will not change; the ten's digit of the communication address will flash, then the OCR returns to setting change mode.

*6: Factory set before delivery.

*7: These subscreens are for making corrections to avoid variation in measurement. Settings on the subscreens have no influence upon trip/alarm pickup current values.

5-3-2-5. Reset screen

5-3-2-5-1. Reset screen (AGR-21B,22B)

Fig. 61 shows how to navigate the reset screen and Table 31 lists the items that can be cleared on this screen. When an item is cleared while its contact output is on, the contact output turns off.

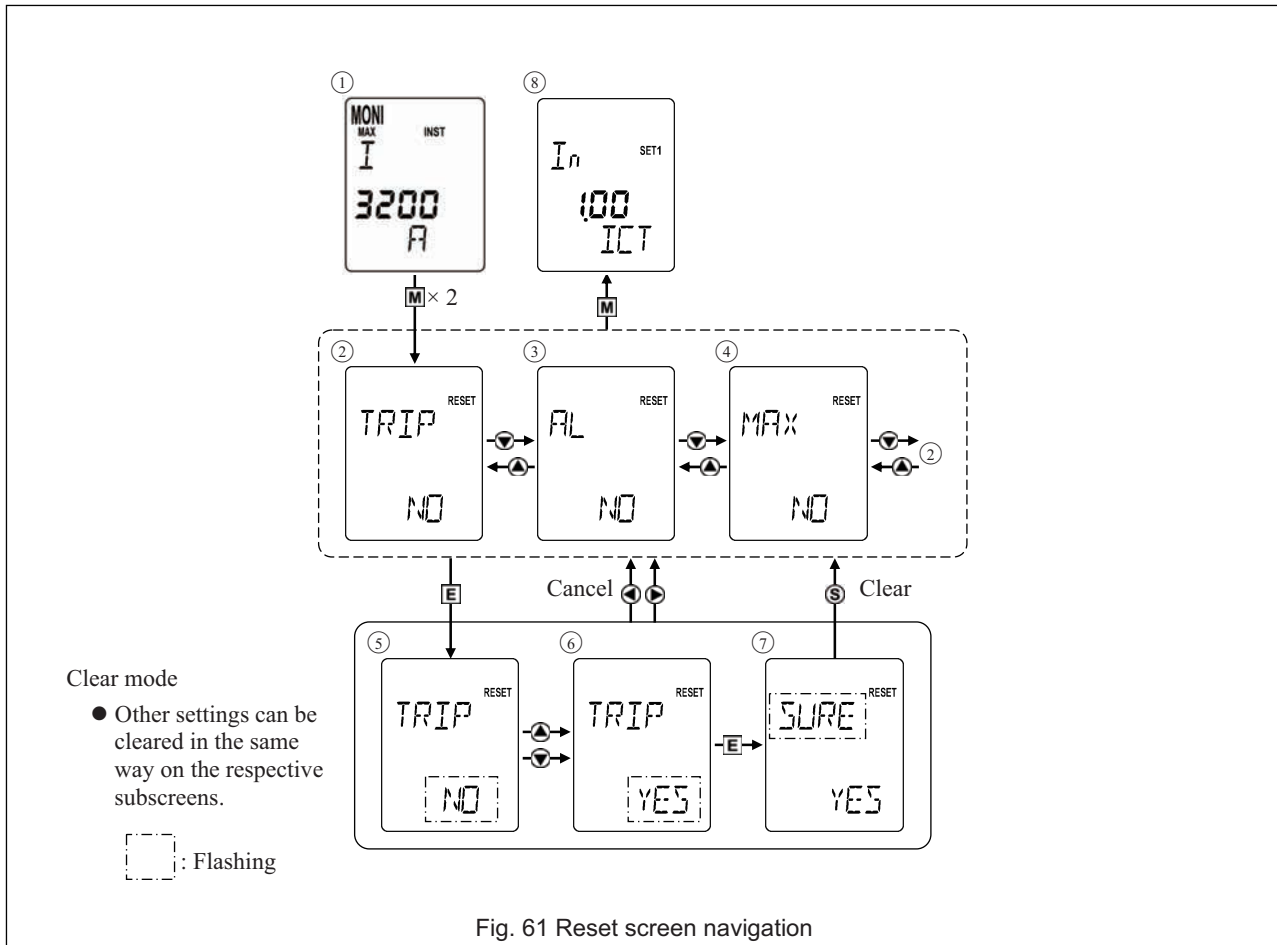


Table 31 Reset subscreens

| No. | Subscreen item | Description |
|-----|--------------------|--|
| ① | (Monitor screen) | See 5-3-2-3-1. |
| ② | Trip event log | Allows clearing the trip event log (trip cause, fault current value and operating time). |
| ③ | Alarm event log | Allows clearing the alarm event log (alarm cause, fault current value and operating time). |
| ④ | Max. phase current | Allows clearing the max. phase current (see Fig. 56 ⑧). |
| ⑤ | Clear mode "Start" | Press ENTER to enter this subscreen from a reset subscreen. "NO" will flash. To exit this subscreen, press the right or left key of the cross button. |
| ⑥ | Clear mode "YES" | Press the up or down key of the cross button. "YES" will appear. To exit this subscreen without clearing the item, press the right or left key of the cross button. |
| ⑦ | Clear mode "Clear" | This subscreen appears when ENTER is pressed while "YES" is appearing. "SURE" will flash. To clear the item, press SET. The subscreen will exit to the Setting 1 screen. When an items is cleared while its contact output is on, the contact output turns off. To exit this subscreen without clearing the item, press the right or left key of the cross button. |
| ⑧ | (Setting 1 screen) | See 5-3-2-6. |

5-3-2-5-2. Reset screen(AGR-31B)

Fig. 62 shows how to navigate the reset screen and Table 32 lists the items that can be cleared on this screen. When an item is cleared while its contact output is on, the contact output turns off.

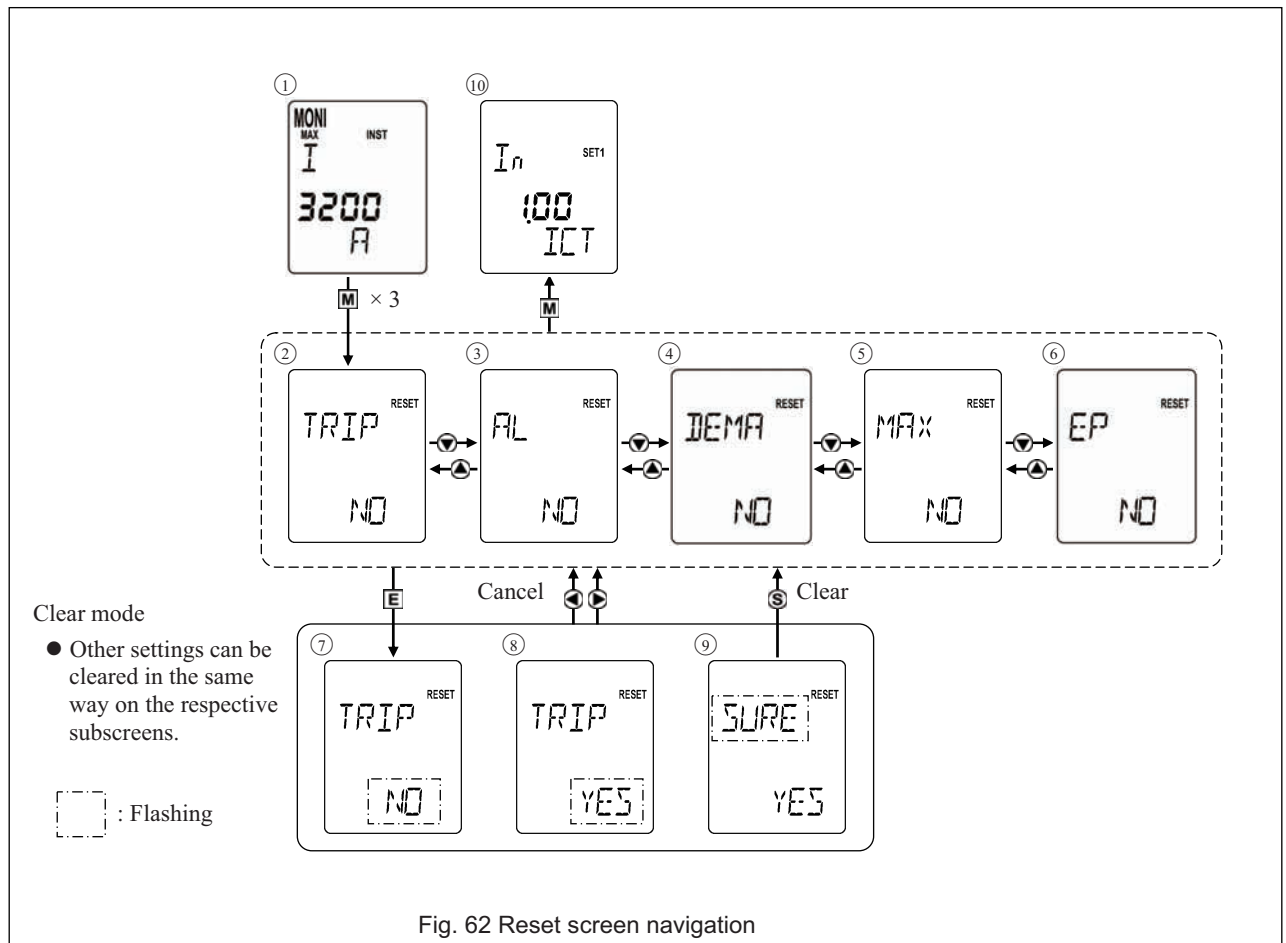


Table 32 Reset subscreens

| No. | Subscreen item | Description |
|-----|---------------------|---|
| ① | (Monitor screen) | See 5-3-2-3-2. |
| ② | Trip event log | Allows clearing the trip event log (trip cause, fault current value and operating time). |
| ③ | Alarm event log | Allows clearing the alarm event log (alarm cause, fault current value and operating time). |
| ④ | Max. demanded power | Allows clearing the max. demanded power (see Fig. 51 ⑦) |
| ⑤ | Max. phase current | Allows clearing the max. phase current (see Fig. 51 ⑧). |
| ⑥ | Integrated demand | Allows clearing the integrated demand. |
| ⑦ | Clear mode "Start" | Press ENTER to enter this subscreen from a reset subscreen. "NO" will flash. To exit this subscreen, press the right or left key of the cross button. |
| ⑧ | Clear mode "YES" | Press the up or down key of the cross button. "YES" will appear. To exit this subscreen without clearing the item, press the right or left key of the cross button. |
| ⑨ | Clear mode "Clear" | This subscreen appears when ENTER is pressed while "YES" is appearing. "SURE" will flash. To clear the item, press SET. The subscreen will exit to the Setting 1 screen. To exit this subscreen without clearing the item, press the right or left key of the cross button. |
| ⑩ | (Setting 1 screen) | See 5-3-2-6. |

5-3-2-6. Setting 1 screen

Fig. 63 shows how to navigate the Setting 1 screen and Table 33 lists the items that can be viewed or changed on this screen.

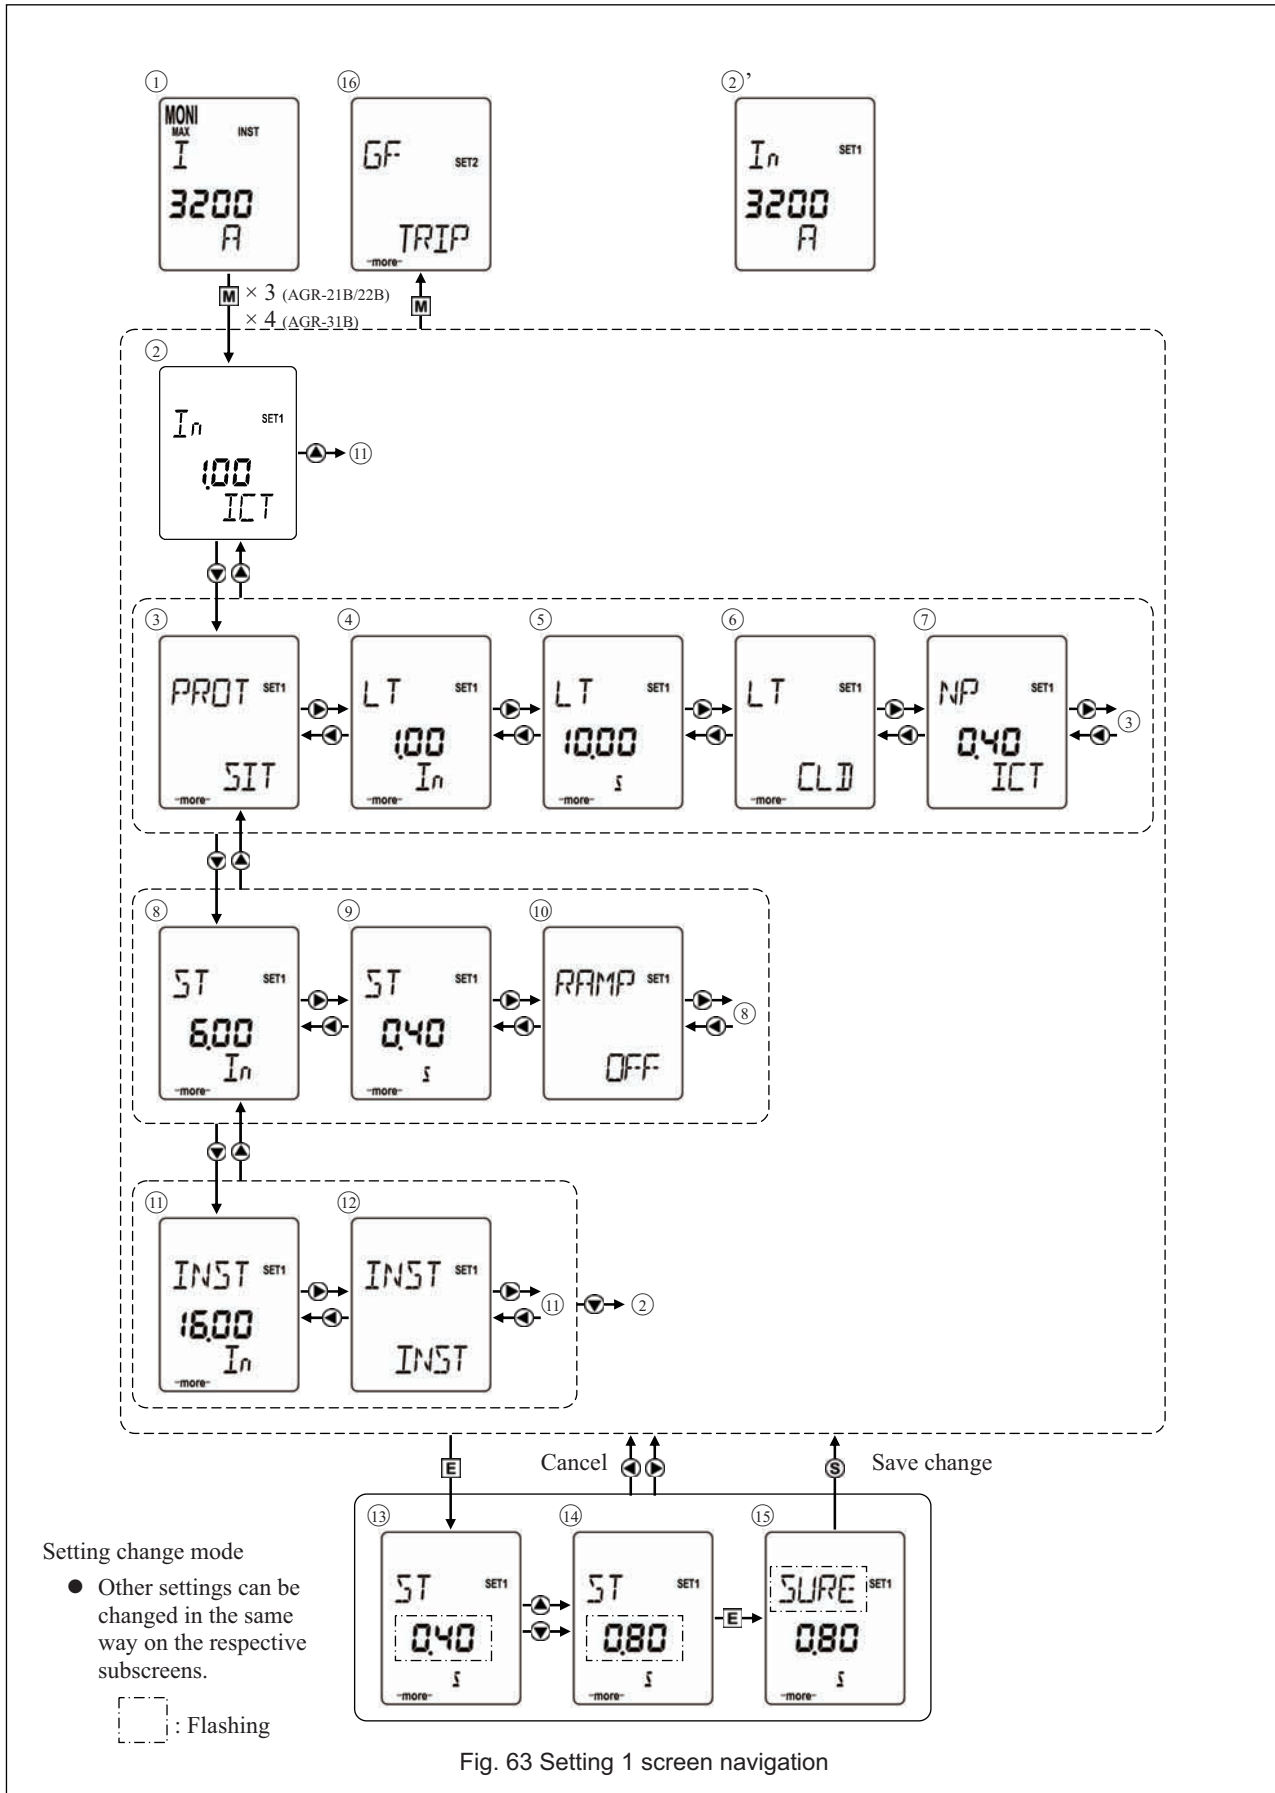


Table 33 Setting 1 subscreens

| No. | Subscreen item *1 | Setting range/Remarks *2 *3 |
|-----|--|--|
| ① | (Monitor screen) | See 5-3-2-3. |
| ② | Rated current (L/R characteristic) | $[I_{CT}] \times (0.5-0.63-0.8-1.0)$ (A) |
| ②' | Rated current (S characteristic) | $[I_{CT}] \times (0.5 \text{ to } 1.0)$ (A): Fixed to a single point in increments of 1A |
| ③ | Long time delay trip characteristic (R characteristic) | SIT-VIT-EIT-3IT-4IT (SIT: $I^{0.02} t$, VIT: $I t$, EIT: $I^2 t$, 3IT: $I^3 t$, 4IT: $I^4 t$) *4 |
| ④ | Long time delay trip pickup current | L/R characteristic: $[I_n] \times (0.8-0.85-0.9-0.95-1.0\text{-NON})$ (A) S characteristic: $[I_n] \times (0.8-1.05-1.1-1.15\text{-NON})$ (A) |
| ⑤ | Long time delay trip pickup time | L characteristic: 0.5-1.25-2.5-5-10-15-20-25-30 (s) R characteristic: 1-2-3-4- <u>5</u> -6-3-6.8-10 (s) S characteristic: 15-20-25-30-40-50-60 (s) |
| ⑥ | Long time delay trip mode HOT/COLD | <u>C</u> OLD/HOT |
| ⑦ | N-phase protection trip pickup current | $[I_{CT}] \times (0.4-0.5-0.63-0.8-1.0)$ (A) |
| ⑧ | Short time delay trip pickup current | L/R characteristic: $[I_n] \times (1-1.5-2-2.5-3-4-5-8-10\text{-NON})$ (A) S characteristic: $[I_n] \times (2-2.5-2.7-3-3.5-4-4.5-5\text{-NON})$ (A) |
| ⑨ | Short time delay trip pickup time | L/R characteristic: 0.05-0.1-0.2-0.4-0.6-0.8 (s) S characteristic: 0.1-0.2-0.3-0.4-0.6-0.8 (s) |
| ⑩ | Short time delay trip $I^2 t$ protection type | <u>OFF</u> /ON |
| ⑪ | Instantaneous trip pickup current | $[I_n] \times (2-4-6-8-10-12-14-16\text{-NON})$ (A) |
| ⑫ | Instantaneous trip INST/MCR | <u>I</u> NST/MCR |
| ⑬ | Setting change mode "Start" | Press ENTER to enter this subscreen from a setting 1 subscreen. The value that can be changed will flash. To exit this subscreen, press the right or left key of the cross button. |
| ⑭ | Setting change mode "Setting change" | Press the up or down key of the cross button to change the setting. To exit this subscreen with no change in setting, press the right or left key of the cross button. |
| ⑮ | Setting change mode "Save change" | Press ENTER to enter this subscreen while subscreen ⑭ is displayed. "SURE" will flash. To save the change, press SET. The subscreen will exit to the Setting 2 screen. To exit this subscreen while no change is saved, press the right or left key of the cross button. |
| ⑯ | (Setting 2 screen) | See 5-3-2-7. |

*1 If no value is found for an item, the corresponding subscreen is skipped.

*2 Underlined values are default settings.

*3 This table shows percent representations of settings. For AV representations (see 5-3-2-4), current values are indicated in A (Amperage).

*4 Factory set according to your request.

5-3-2-7. Setting 2 screen

Fig. 64 shows how to navigate the Setting 2 screen and Table 34 lists the items that can be viewed or changed on this screen.

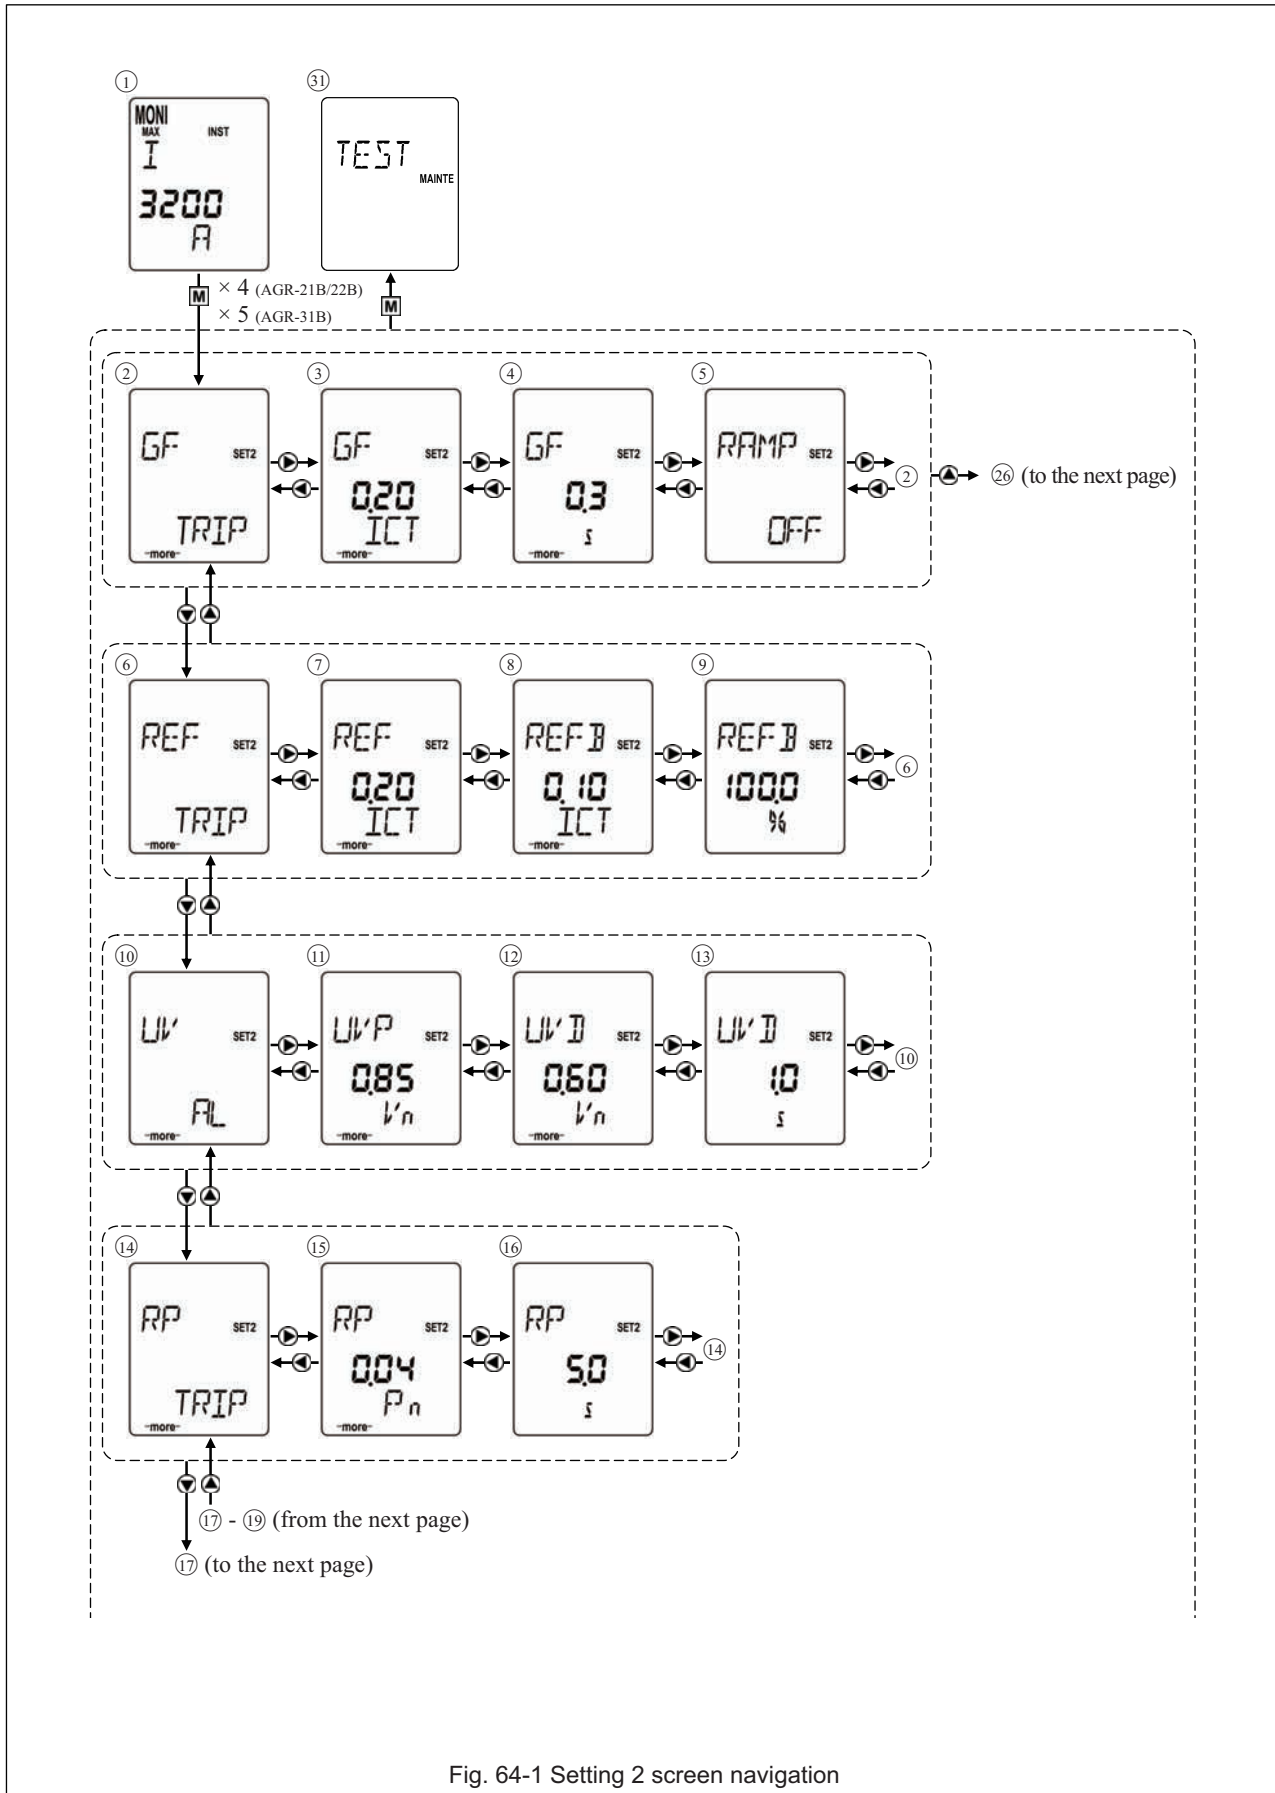


Fig. 64-1 Setting 2 screen navigation

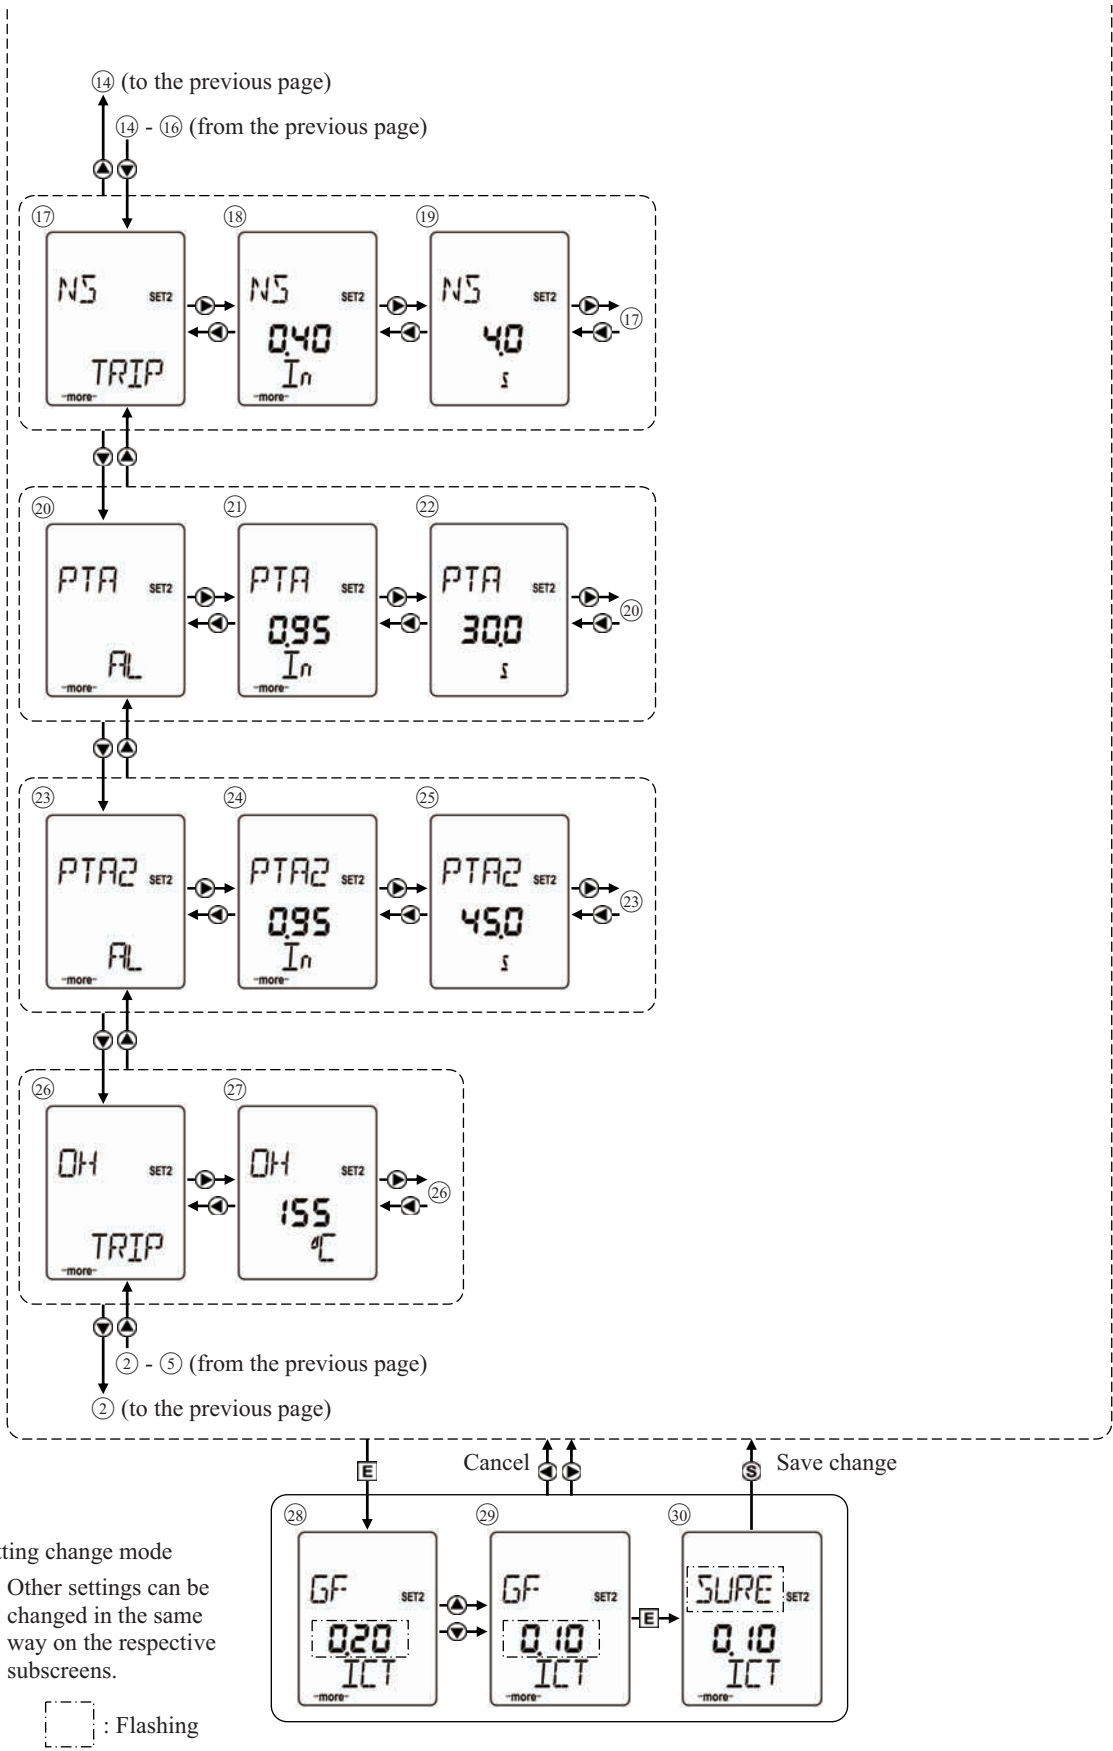


Fig. 64-2 Setting 2 screen navigation

Table 34 Setting 2 subscreens

| No. | Subscreen item *1 | Setting range/Remarks *2 *3 |
|-----|--|--|
| ① | (Monitor screen) | See 5-3-2-3. |
| ② | Ground fault trip mode | TRIP/AL/OFF |
| ③ | Ground fault trip pickup current | $[I_{ct}] \times (0.1-0.2-0.3-0.4-0.6-0.8-1.0\text{-NON})$ (A) |
| ④ | Ground fault trip pickup time | 0.1-0.2-0.3-0.5-1-2 (s) |
| ⑤ | Ground fault trip I ² t protection type | OFF/ON |
| ⑥ | Line side ground fault protection mode | TRIP/AL/OFF |
| ⑦ | Line side ground fault protection trip pickup current | $[I_{ct}] \times (0.1-0.2-0.3-0.4-0.6-0.8-1.0\text{-NON})$ (A) |
| ⑧ | Line side ground fault protection bias current | $[I_{ct}] \times (0.1-0.3-0.5-0.7-0.9-1.1-1.3-1.5)$ (A) *4 |
| ⑨ | Line side ground fault protection bias limit | 100% (fixed) *4 |
| ⑩ | undervoltage alarm mode | AL/OFF |
| ⑪ | Undervoltage alarm recovery voltage | $[V_n] \times (0.8-0.85-0.9-0.95)$ (V) |
| ⑫ | Undervoltage alarm pickup voltage | $[V_n] \times (0.4-0.6-0.8)$ (V) |
| ⑬ | Undervoltage alarm pickup time | 0.1-0.5-1-2-5-10-15-20-30-36 (s) |
| ⑭ | Reverse power trip mode | TRIP/AL/OFF |
| ⑮ | Reverse power trip pickup power | $[P_n] \times (0.04-0.05-0.06-0.07-0.08-0.09-0.1\text{-NON})$ (kW) |
| ⑯ | Reverse power trip pickup time | 2.5-5-7.5-10-12.5-15-17.5-20 (s) |
| ⑰ | Negative-phase sequence protection mode | TRIP/AL/OFF |
| ⑱ | Negative-phase sequence protection trip pickup current | $[I_n] \times (0.2-0.3-0.4-0.5-0.6-0.7-0.8-0.9-1.0)$ (A) |
| ⑲ | Negative-phase sequence protection trip pickup time | 0.4-0.8-1.2-1.6-2-2.4-2.8-3.2-3.6-4 (s) |
| ⑳ | Pretrip alarm mode | AL/OFF |
| ㉑ | Pretrip alarm pickup current | L/R characteristic: $[I_n] \times (0.75-0.8-0.85-0.9-0.95-1.0)$ (A) S characteristic: $[I_n] \times (0.75-0.8-0.85-0.9-0.95-1.0-1.05)$ (A) |
| ㉒ | Pretrip alarm pickup time | L/R characteristic: 5-10-15-20-40-60-80-120-160-200 (s) S characteristic: 10-15-20-25-30 (s) |
| ㉓ | Pretrip alarm 2 mode | AL/OFF |
| ㉔ | Pretrip alarm 2 pickup current | $[I_n] \times (0.75-0.8-0.85-0.9-0.95-1.0-1.05)$ (A) |
| ㉕ | Pretrip alarm 2 pickup time | $1.5 \times t_{p1}$ (s) (determined by auto calculation) |
| ㉖ | Contact overheat monitor mode | TRIP/AL/OFF |
| ㉗ | Contact overheat alarm pickup temperature | 155°C (fixed) |
| ㉘ | Setting change mode "Start" | Press ENTER to enter this subscreen from a setting 2 subscreen. The value that can be changed will flash. To exit this subscreen, press the right or left key of the cross button. |
| ㉙ | Setting change mode "Setting change" | Press the up or down key of the cross button to change the setting. To exit this subscreen with no change in setting, press the right or left key of the cross button. |
| ㉚ | Setting change mode "Save change" | Press ENTER to enter this subscreen from subscreen ㉘. "SURE" will flash. To save the change, press SET. The subscreen will exit to the Setting 2 screen. To exit this subscreen while no change is saved, press the right or left key of the cross button. |
| ㉛ | (Maintenance screen) | See 5-3-2-8 and 5-4. |

*1 If no value is found for an item, the corresponding subscreen is skipped.

*2 Underlined values are default settings.

*3 This table shows percent representations of settings. For AV representations (see 5-3-2-4), current values are indicated in A (Amperage), V (voltage), or kW (kilowatt).

*4 The line side ground fault protection bias current and bias limit are coefficients for strain. Because the line side ground fault protection function performs an arithmetic operation using the difference between CTs with different characteristics, errors in measured line side ground fault current become significant when a large current flows through the ACB. "Strain" is to increase the line side ground fault trip pickup current with increasing current flowing through the ACB, thus preventing malfunctions caused by such an error. The following shows the relationship between the current flowing through the ACB and the line side ground fault protection trip pickup current under "strained" conditions:

When $(i + i_{REFCT}) / 2 \leq I_{REF2}$;

$$I_{REFNOW} = I_{REF}$$

When $(i + i_{REFCT}) / 2 > I_{REF2}$;

$$I_{REFNOW} = I_{REF} [1 + a \{ (i + i_{REFCT}) / 2 - I_{REF2} - 1 \}]$$

(I_{REF} : Line side ground fault protection trip pickup current, I_{REF2} : Line side ground fault protection bias current, a : Line side ground fault protection bias limit, i : Max. phase current (present value), i_{REFCT} : Line side ground fault current, I_{REFNOW} : Line side ground fault protection pickup current calculated using strain coefficients)

Ex.: When $(i + i_{REF}) / 2 = 5 \times I_{REF2}$ and other settings remain default;

$$I_{REFNOW} = I_{REF} [1 + 1 \times \{ 5 \times I_{REF2} / I_{REF2} - 1 \}] = I_{REF} [1 + 1 \times \{ 5 - 1 \}] = 5 \times I_{REF}$$

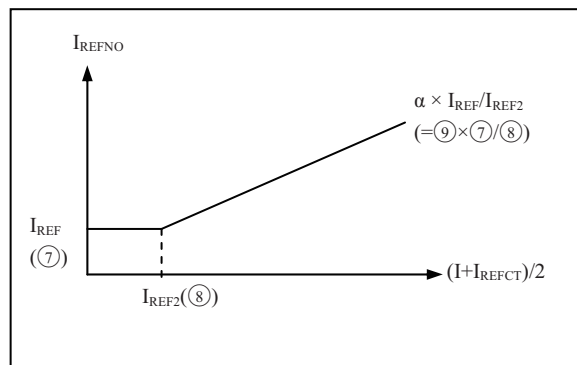


Fig. 65 Relationship between the current flowing through the ACB and the line side ground fault protection trip pickup current under "strained" conditions

5-3-2-8. Maintenance screen

Fig. 66 shows how to navigate the maintenance screen and Table 35 lists the items that can be viewed on this screen.

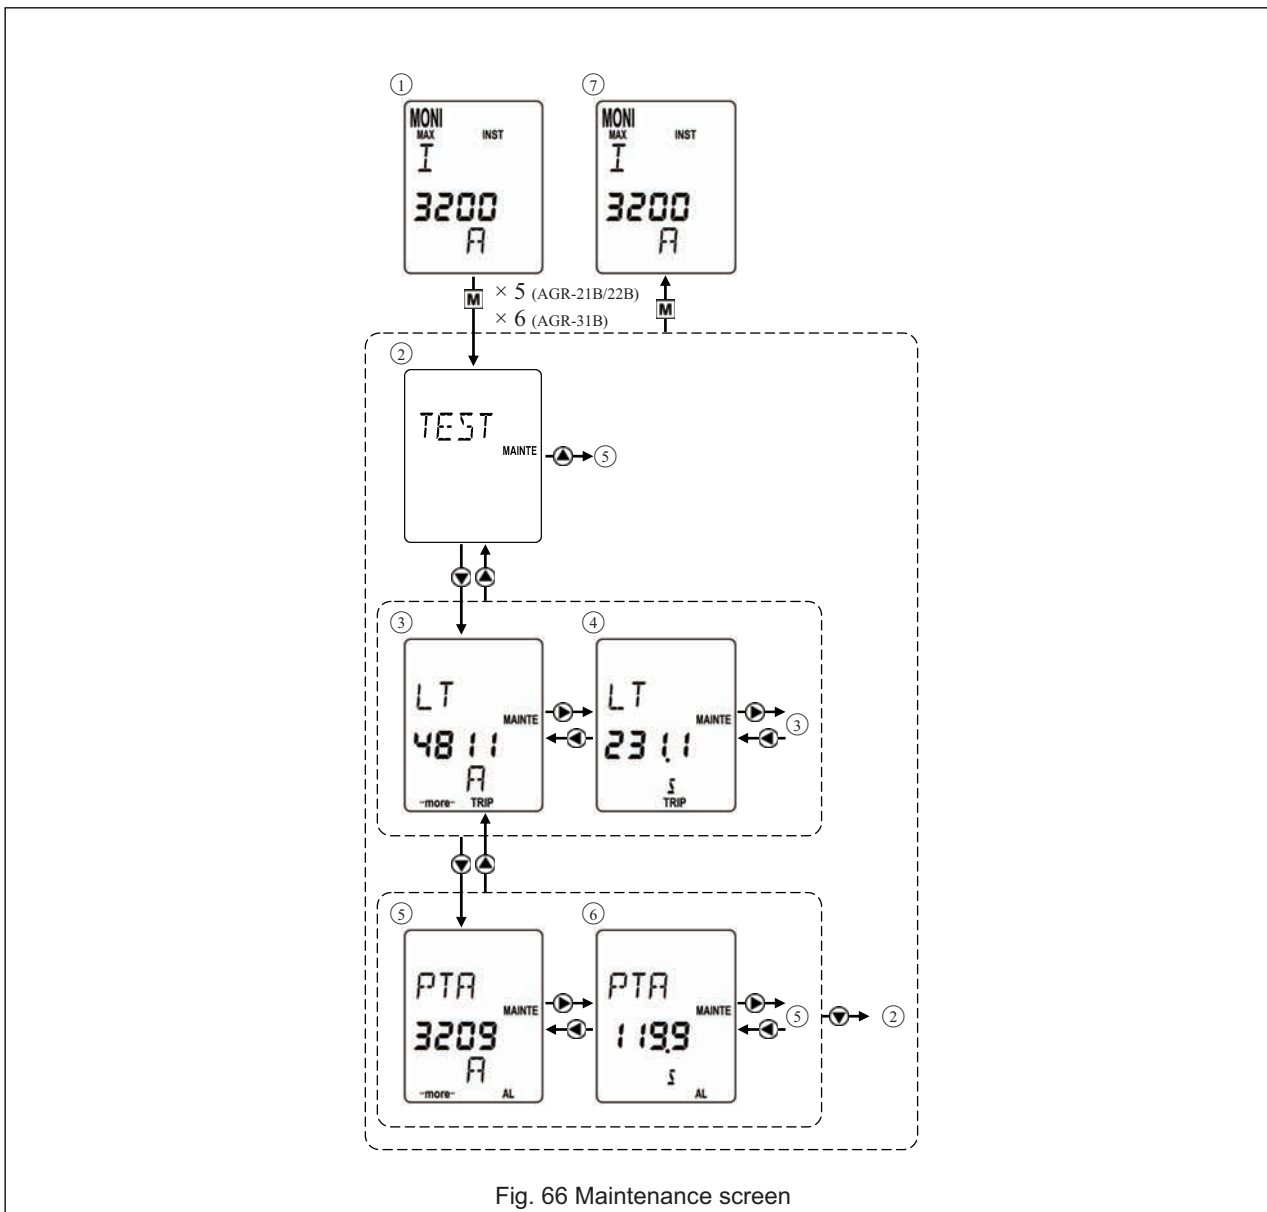


Table 35 Maintenance subscreens

| No. | Subscreen item *1 | Description |
|-----|---------------------------------------|-------------------------------------|
| ① | (Monitor screen) | See 5-3-2-3. |
| ② | (Maintenance screen) | - |
| ③ | Trip event log (fault current value) | Trip cause and fault current value |
| ④ | Trip event log (operating time) | Trip cause and operating time |
| ⑤ | Alarm event log (fault current value) | Alarm cause and fault current value |
| ⑥ | Alarm event log (operating time) | Alarm cause and operating time |
| ⑦ | (Monitor screen) | See 5-3-2-3. |

*1 If no value is found for an item, the corresponding subscreen is skipped.

5-4. OCR Function Check

CAUTION

- OCR function check and setting changes must be performed by competent persons.
- After completion of OCR tests, be sure to return the settings to the original values. Failure to do so may cause a fire or burnout.

Use the following procedure to perform OCR function check.

- 1) Open the ACB and draw out the breaker body to the TEST position.
- 2) Change settings according to the test as shown in Table 36.

Table 36 OCR setting changes

| Test *1 | Output signal value | Setting to be changed |
|-----------------------|--------------------------------------|--|
| Long time delay trip | L characteristic: $[I_R] \times 6$ | Non |
| | R characteristic: $[I_R] \times 3$ | Non |
| | S characteristic: $[I_R] \times 1.2$ | Non |
| Short time delay trip | $[I_{sd}] \times 1.2$ | $[I] > [I_{sd}] \times 1.5$, Short time delay trip I ² t protection: OFF |
| Instantaneous trip | | Mode: INST |
| MCR | $[I] \times 1.2$ | Mode: MCR |
| Ground fault trip | $[I_g] \times 1.5$ | Ground fault trip I ² t protection: OFF |

*1 Setting an item to NON and OFF disables the test for the item.

- 3) To check the ACB along with the OCR, close the ACB before applying a test signal. When checking the MCR function, close the ACB within 0.3 s. after applying a test signal.
- 4) Follow the procedure described in Fig. 67 and Table 37 to check the OCR for normal operation. (In NTR mode, the ACB does not operate, a trip/alarm event is not saved in the log and operation indication contact output is not provided).

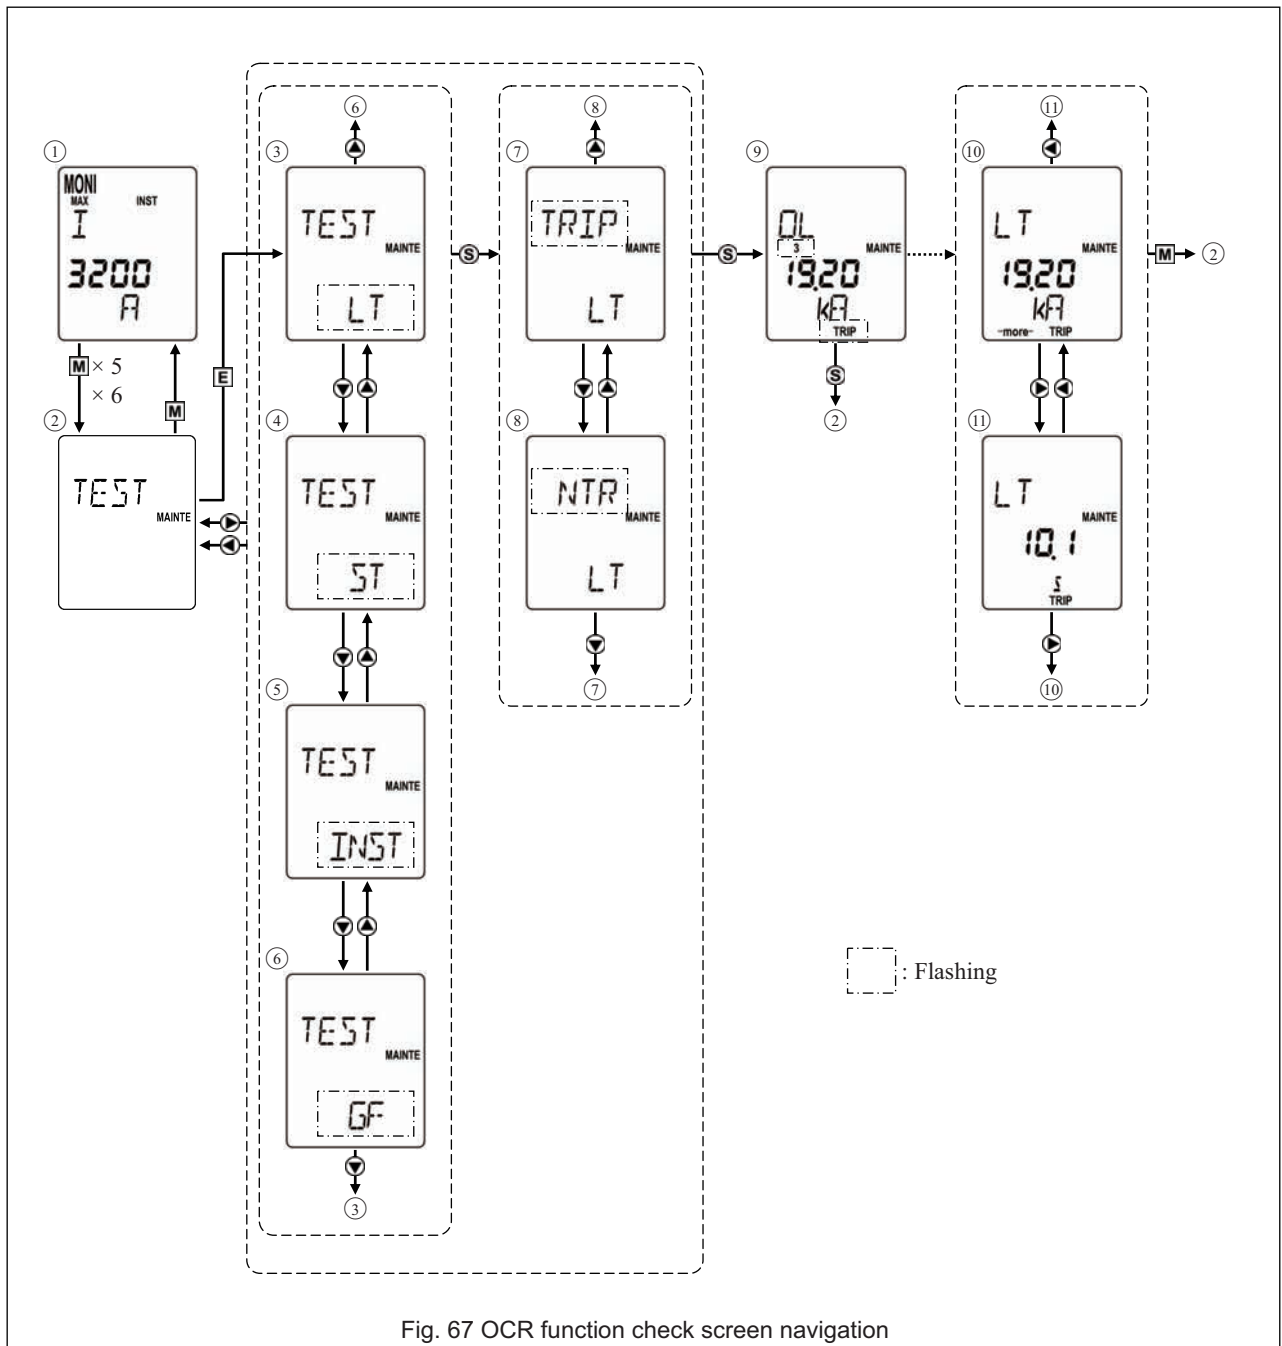


Fig. 67 OCR function check screen navigation

Table 37 OCR function check subscreens

| No. | Subscreen item *1 | Description |
|-----|--------------------------------------|---|
| ① | (Monitor screen) | See 5-3-2-3. |
| ② | (Function check start subscreen) | - |
| ③ | Long time delay trip | "LT" flashes. *2 *3 |
| ④ | Short time delay trip | "ST" flashes. |
| ⑤ | Instantaneous trip | "INST" flashes. |
| ⑥ | Ground fault trip | "GF" flashes. |
| ⑦ | OCR + ACB operation | "TRIP" flashes. |
| ⑧ | OCR operation only | "NTR" flashes. |
| ⑨ | Indication during testing *4 | Pressing SET while subscreen ⑦ or ⑧ opens causes a test signal to be applied. |
| ⑩ | Trip event log (fault current value) | The trip cause and fault current value are indicated. |
| ⑪ | Trip event log (operating time) | The trip cause and operating time are indicated. |

*1 If no log is found, the corresponding subscreen is skipped.

*2 When the long time delay trip function is selected, the short time delay trip and instantaneous trip functions are locked inoperative and cannot be used. The pretrip alarm function can be used.

*3 Even when the HOT mode is selected, the test is carried out in COLD mode (Accumulated current value before testing is reset to zero before the test starts).

*4 Only when the long time delay trip function is checked. The number of the signal source and "TRIP" are flashing. For other function checks, subscreen ⑦ or ⑧ will continue.

5-5. Operation Indication and Indication Resetting Procedure

5-5-1. Operation Indication (AGR-11B type)

The OCR has LEDs on the front panel to provide operation indications as shown in Fig. 68 and Table 38. It also outputs operation signals to contacts.

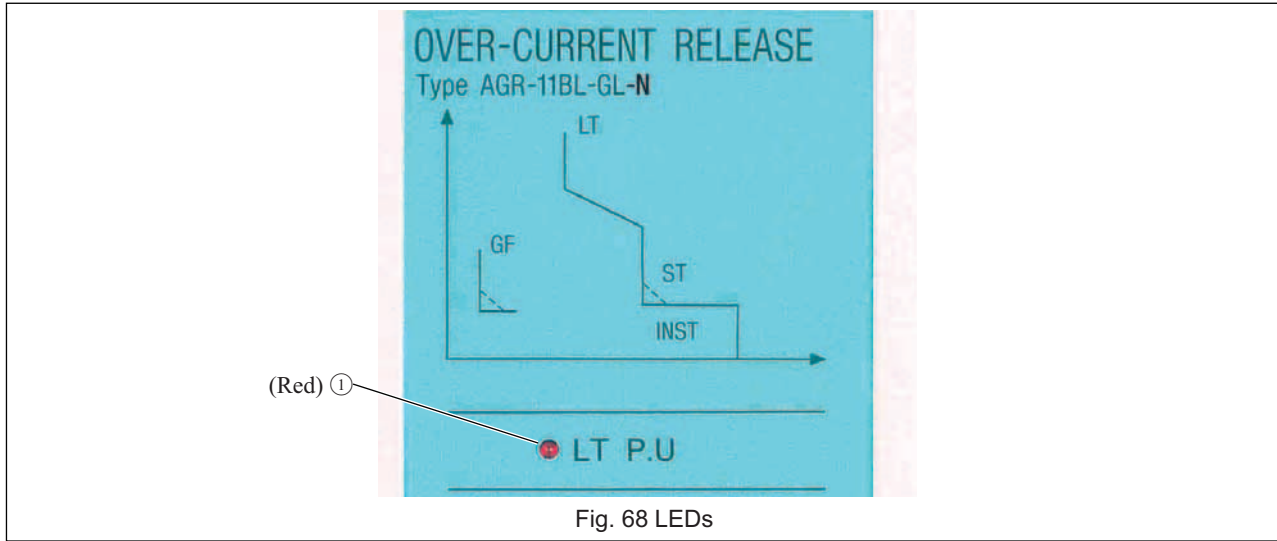


Fig. 68 LEDs

Table 38 Operation indication

| Type of OCR | Control power supply | Operation | Position | LED | | | Terminal No. See Fig. 17 | Contact output | |
|----------------------------|----------------------|---|----------|--------|--------------|------------|-----------------------------|----------------|--|
| | | | | Normal | State pickup | Trip/Alarm | | Normal | Trip/Alarm |
| AGR-11BL-AL AGR-11BL-GL | Not required | Long time delay trip (LT) N-phase protection (NP) Short time delay trip (ST) Ground fault trip (GF) Instantaneous trip (INST) | ① | OFF | Flash | OFF | 09, 19 | OFF | Turn OFF automatically after ON for 40 ms or more *1 |
| | | | | | OFF | | | | |

*1: A self-hold circuit is required.

5-5-2. Operation Indication and Indication Resetting Procedure (AGR-21B,22B,31B type)

The OCR indicates a trip/alarm event on the LCD and provides contact output as shown in Table 39. Pressing the right or left key of the cross button changes the display from "trip/alarm cause" / "fault current/voltage/power" to "operating time" (if applicable).













Pressing the MENU button returns the display to the previous screen. (Events saved in the event log can always be displayed on the maintenance screen. See 5.3.2.8). To reset contact output while retaining the event log, turn off the control power (Fig. 19 01, 11, 21) at least 1 s. To delete the event log and reset contact output on the LCD, follow the procedure shown in 5.3.2.5 "Reset screen".

Table 39-1 Operation indication 1

| Operation | LCD State | | | | Terminal No. See Fig. 19 | Contact output State | | | Control power supply |
|--|-------------------|----------------|--|--|--------------------------|----------------------|----------------|--|----------------------|
| | Normal operation | When picked up | When activated (Use the right or left key of the cross button for screen navigation) | | | Normal operation | When activated | After control power is off for at least 1 s. | |
| | | | | | | | | | |
| Long time delay trip (LT) N-phase protection (NP) | | | | | 05-15 | ON ② | | | |
| | | | | | | | | | |
| Short time delay trip (ST) | - | | | | 05-25 | ON ② | | | |
| Instantaneous trip (INST/MCR) | Normal indication | - | | | Normal indication ① | OFF | OFF | Required | |
| Ground fault trip (GF) | - | | | | 05-16 | ON | | | |
| Reverse power trip (RPT) | | | | | 05-16 | ON ② | | | |
| Negative-phase sequence protection (NS) | | | | | 05-17 | ON | | | |

- The ACB can be opened, closed or tripped, irrespective of whether or not the operation indication is reset.
- The operation indication is updated when a protective function is activated.
- means flashing.
- ① The event log is not cleared.
- ② For S characteristic, the delay is as short as 500 ms or more.
- ③ "---- (kA)" is indicated when the short time delay or instantaneous trip function is activated and $[I_{cr}] \times 17$ is exceeded.

Table 39-2 Operation indication 2

| Operation | LCD State | | | | Terminal No. See Fig. 19 | Contact output State | | | Control power supply |
|---|-------------------|--|---|---|--------------------------|--|------------------|----------------|----------------------|
| | Normal operation | When picked up | When activated | | | After control power is off for at least 1 s. | Normal operation | When activated | |
| Line side ground fault protection (REF) | - | |  | | Normal indication ① | 05-17 | ON | | Required |
| Contact overheat monitoring (OH) | - | |  | | Normal indication ① | 05-17 | ON | | |
| Pretrip alarm (PTA) | Normal indication |  |  |  | Normal indication ①② | 05-06 | ON ② | OFF | |
| Pretrip alarm 2 (PTA2) | Normal indication |  |  |  | Normal indication ①② | 05-27 | ON ② | | |
| Undervoltage alarm (UV) | - | |  |  | Normal indication ①② | 05-27 | ON ② | | |
| System alarm | - | |  |  | Normal indication ① | 05-26 | ON ③ | OFF ④ | |

- The ACB can be opened, closed or tripped, irrespective of whether or not the operation indication is reset.
- The operation indication is updated when a protective function is activated.
- [] means flashing
- ① The event log is not cleared.
- ② The alarm is self-recovered when the fault current decreases to less than the setting.
- ③ "SYS1" means disconnection of the magnet hold trigger (MHT) and "SYS2" does a tripping failure (incorrect operating time, mechanical malfunction etc).
- ④ The OCR has a self-monitoring feature that monitors the OCR internal circuit, the magnet hold tripper (MHT) circuit, and the ACB state. An alarm caused by transient noise can be cleared or deleted. If such an alarm cannot be cleared, check the ACB. See chapter 7.

6. MAINTENANCE, INSPECTION AND PARTS REPLACEMENT

This chapter describes the maintenance and inspection procedure for the AR series ACBs.

The service life of the ACB depends on the working and environmental conditions. The ACB is exposed to mechanical and electrical stresses and thus suffers gradual degradation during use, which will increase the possibility of malfunctions. Preventive maintenance and periodical inspection are very important to avoid any functional degradation, prevent malfunctions, extend the service life, and ensure safe operation.

The appropriate frequency of maintenance and inspection of the ACB varies depending on the installation conditions, the number of tripping operations, the magnitude of breaking current, and other factors that are to be considered empirically. As a guideline, Table 40, 41 shows the recommended inspection frequency. See section 6-1 for detailed maintenance and inspection procedures.

Table 40 Categories of maintenance and inspection

| Category | Description | Breaker status | Performed by: |
|-----------------------|---|--------------------|----------------------|
| Initial inspection | To be performed on the installed ACB before it is energized. | Not energized ever | Customer |
| Patrol inspection | To be performed on the energized breaker to check for malfunction. Be careful not to get an electrical shock during inspection. | Energized | Customer |
| Regular inspection | Normal inspection To be performed for the purpose of checking and maintaining the breaker performance. This usually consists of appearance check without disassembly. | De-energized | Customer and TERSAKI |
| | Detailed inspection To be performed for the purpose of checking and restoring the breaker performance. This involves parts inspection/servicing or replacement as appropriate. | De-energized | TERSAKI |
| Overhaul | To be performed by Terasaki in its premises for the purpose of extending the service life of the breaker. This includes parts replacement as appropriate. | De-energized | TERSAKI's factory |
| Occasional inspection | To be performed when the breaker <ul style="list-style-type: none"> · interrupted a current close to the rated interrupting current, · interrupted the load current the specified number of times, · was operated the specified number of times, · was found to be abnormal during patrol inspection, · was operated under abnormal or unsuitable conditions, or · was submerged in flood water. | De-energized | Customer |

Table 41 Maintenance and inspection intervals

| Use environment | Working and environmental conditions | Inspection level | Frequency in interval or number of open/close cycles | | | |
|-----------------|---|------------------|---|--|-------------------|-------------------|
| | | | Interval | Number of open/close cycles | | |
| | | | | Open/close condition | 2000AF or smaller | 2500A or larger |
| Standard | <ul style="list-style-type: none"> · Not so dusty · Not so much corrosive gasses · Ambient temperature:45°C or lower · Humidity: 85% RH or lower · Attitude: 2000 m or lower · In engine room (with air conditioning) | Patrol | 1 month | — | | |
| | | Normal | Every 2 years Every half year after 5 years since installation | Nearly no current level | Every 1000 cycles | Every 500 cycles |
| | | | | Rated current level | Every 250 cycles | Every 50 cycles |
| | | Thorough | Every 5 years Every year after 10 years since installation | Nearly no current level | Every 2000 cycles | Every 1000 cycles |
| | | | | Rated current level | Every 500 cycles | Every 100 cycles |
| | | Overhaul | 8 years | When the number of open/close cycles reaches one half of the value indicated in Tables 3 and 4 | | |
| Occasional | As appropriate | — | | | | |
| Harsh | <ul style="list-style-type: none"> · Highly dusty · Much corrosive gases · Ambient temperature:45°C or more · Humidity:85% RH or more · Attitude:2000 m or more · Always exposed to vibrations · In engine room (without air conditioning) | Patrol | 1 month | — | | |
| | | Normal | Every year Every half year after 2 years since installation | Nearly no current level | Every 1000 cycles | Every 500 cycles |
| | | | | Rated current level | Every 250 cycles | Every 50 cycles |
| | | Thorough | Every 2 years Every year after 10 years since installation | Nearly no current level | Every 2000 cycles | Every 1000 cycles |
| | | | | Rated current level | Every 500 cycles | Every 100 cycles |
| | | Overhaul | 8 years | When the number of open/close cycles reaches one half of the value indicated in Tables 3 and 4 | | |
| Occasional | As appropriate | — | | | | |

● About the service life

The expected service life of AR series ACBs is shown in the "Endurance in number of ON-OFF cycles" rows in Tables 3 and 4. "With maintenance" in the tables means that appropriate inspection, maintenance, repair, and parts replacement are performed according to the instructions in this chapter. But, when an ACB performs three times of tripping operation nearly at the rated breaking current (three standard operating duty cycles), it is at the end of its safe service life even if thorough inspection is done every time it trips open. Such an ACB will be apt to suffer malfunctions and should be replaced without delay to avoid frequent inspection and parts replacement.

6-1. Maintenance and inspection items and criteria

6-1-1. Initial inspection

Table 42 Initial inspection (To be implemented by the customer)

| Inspection item | Criteria |
|--|---|
| 1. Are the electrical wires and conductors installed securely to the main circuit? | The wires and conductors shall be tightened to the specified torque (22.5 to 37.2 N-m for M10 bolts). |
| 2. Is the main circuit free of dirt, dust, chips or the like around it? | The main circuit shall be clean around it. |
| 3. Are the front cover and base free of cracks or damage? | No cracks or damage shall be found. |
| 4. Is the breaker free of condensation and rust? | No condensation or rust shall be found. |

Locations and acceptance criteria of insulation resistance test

(1) Locations of insulation resistance test

| | Insulation resistance | |
|--|-----------------------|-----|
| | ON | OFF |
| Between main circuit and GND | ○ | ○ |
| Between live parts with different poles | ○ | — |
| Between line and load sides | — | ○ |
| Between main circuit live part and control/operation circuit live part | ○ | ○ |
| Between control/operation circuit live part area and GND | ○ | ○ |

(2) Acceptance criteria of insulation resistance test

The breakers installed in the distribution board shall have an insulation resistance of 5 MΩ or higher. (A single ACB alone shall have an insulation resistance of 100 MΩ or higher.)

6-1-2. Patrol inspection

Table 43 Patrol inspection (To be implemented by the customer)

| Inspection item | Description | Criteria |
|------------------|---|-----------------------------------|
| ON/OFF indicator | Indication (ON, OFF, charged, discharged) On-OFF cycle count | The indicator shall work well. |
| Abnormal noise | Does abnormal noise sound? | No abnormal noise shall be heard. |
| Abnormal smell | Does abnormal smell occur? | No abnormal smell shall be felt.. |
| OCR indicator | Does the OCR indicator work well? | The indicator shall work well. |

Note: If an anomaly is found, de-energize the breaker and locate the cause.

6-1-3. Normal inspection procedure

Table 44 Normal inspection procedure

| Check point (*1) | No. | Check item | Description |
|--|-----|---------------------------------------|---|
| General (*2) | 1 | Discoloration of conductors | Check connection conductors, main circuit terminals, and current carrying parts for heat discoloration. If such a symptom is found, contact us. |
| | 2 | Parts missing | Check that screws, bolts, nuts, washers, springs, retainers and the like are not missing. If any parts are missing, contact us. |
| | 3 | Damage to parts | Check for deformation, cracks, chips, rust, or other damage of parts. If damage is found, contact us. |
| | 4 | Dust accumulation | Check that no dust is accumulated in ACB. If dust has accumulated, wipe it off with a dry, clean cloth. |
| Main/control circuit terminals See 2-3 | 5 | Connections | Check main circuit terminal screws, ground terminal screw, auxiliary switch terminal screws, control circuit terminal screws, and position switch terminal screws for looseness. If loose, tighten to specified torque. |
| Main/control circuit See 4-2(*3) | 6 | Surface condition | Draw out the breaker body from draw-out cradle and check that contacts have no dust accumulation and discoloration. If dust has accumulated and discolored, wipe it off with a dry, clean cloth. If surface is discolored badly, contact us. ●Blackening of contacts is caused by oxidation or sulfuration and has no harmful effect except in extreme cases. If heat discoloration, arc marks, roughness, or peeling of plating layer is found, contact us. |
| Main circuit | 7 | Insulation resistance | Close ACB and, using DC500V Megger, check that insulation resistance between main circuit terminals, between main circuit terminal group and ground exceeds 100M ohm. If resistance does not exceed 100M ohm, contact us. |
| Control circuit See 3-2 | 8 | Wiring | Check that control wiring is properly connected, and not disconnected nor damaged. If incorrect connection is found, connect correctly. If disconnection or damage is found, contact us. |
| Operating mechanism | 9 | Internal mechanism | Check for missing parts, deformation, cracks, chips, foreign matter or dust accumulation, breakage of springs, and rust. If foreign matter or dust has accumulated, wipe the foreign matter or dust off with a dry, clean cloth. If any parts are missing or damaged or springs are broken, contact us. |
| Auxiliary switches See 3-2 | 10 | Operation | Check that auxiliary switches operate properly. If not so, contact us. |
| | 11 | Looseness of screws | Check screws of auxiliary switches for looseness. If loose, retighten. |
| Operation related mechanism See 4-1, 4-2 | 12 | Draw-out/insertion mechanism (*3) | Draw in and out the body to confirm that the position indicator provides correct indication, the indication of the release button is correct, and no abnormal sound is heard. If abnormality is found, contact us. |
| | 13 | UVT | Place the circuit breaker body in the ISOLATED position for draw-out type, and make sure that no current is flowing through the main circuit and control circuit for fixed type. Charge closing springs manually, and attempt closing the ACB to make sure the ACB cannot be closed. If the ACB can be closed, contact us. |
| | 14 | Operation mechanism, LRC, SHT and UVT | Place the circuit breaker body in the TEST position for draw-out type, and check that no current is flowing in the main circuit for fixed type. Supply voltage to operation mechanism, SHT and UVT, and perform closing spring charging operation and manual and electrical open/close operation several times each to check that the charge indicator, ON-OFF indicator, and ON-OFF cycle counter provide correction indication and no abnormal sound is heard. If abnormality is found, contact us. |
| OCR and MHT | 15 | System alarm | Place the circuit breaker body in the TEST position for draw-out type, and check that no current is flowing in the main circuit for fixed type. Supply voltage to the control circuit to confirm that no system alarm appears on the OCR. If a system alarm appears, reset it. If the alarm cannot be reset, contact us. (*4) |

*1 See the section in this instruction manual (KRB-5377).

*2 Always check the "General" items during the inspection procedure.

*3 For draw-out type.

*4 Please note that this does not apply to some models.

6-1-4. Detailed inspection procedure

Table 45 Detailed inspection procedure (1/2)

| Check point (*1) | No. | Check item | Description |
|--|-----|---------------------------|--|
| Undervoltage trip device (UVT) See 3-2, 3-3 | 1 | Coil resistance | Disconnect the red connector to measure coil resistance at the connector on the coil side. If it is out of tolerance, replace it. |
| | 2 | Operation | Remove UVT and press in plunger, and make sure releasing plunger causes plunger to be smoothly restored. If not so, replace UVT. |
| | 3 | Connector | Check that the red connector is connected correctly. If incorrect, connect correctly. |
| | 4 | Looseness of screws | Check UVT mounting screws for looseness. If loose, retighten. |
| | 5 | Electrical operation | Reassemble the side cover and front cover. Place the circuit breaker body in the TEST position for draw-out type, and make sure that no current is flowing through the main circuit for fixed type. When the closing springs are charged and attraction voltage is applied to the UVT, and the ACB opening voltage when the UVT power voltage is decreased from the closed state is within the defined breaking voltage range. |
| Main/control circuit contacts (*2)See 4-2 | 6 | Surface condition | Draw out the breaker body from draw-out cradle and check that contacts have no dust accumulation and discoloration. If dust has accumulated and discolored, wipe it off with a dry, clean cloth. If surface is discolored badly, contact us. For main circuit contacts, apply contact grease to contact surface after cleaning. ●Excessive grease may foster dust accumulation. Grease should be applied lightly. |
| Arc chamber (*2) | 7 | Dust accumulation /Damage | Remove arc chamber and check it for foreign object or dust accumulation, deformation, cracks, chips and other damage. If foreign matter or dust is accumulated, use vacuum cleaner to remove foreign matter of dust and wipe off with dry, clean cloth. If metal spatters are adhered, use sandpaper to remove them. If arc chamber has molten material stuck and unable to be removed, or if it suffers damage, replace the arc chamber. |
| Contacts (*2) | 8 | Surface condition | Remove arc chamber and check contact circumference, contacts, and contact tips for dust accumulation, discoloration, roughness, deformation, cracks, chips and other damage. If dust has accumulated or discolored, wipe it off with a dry, clean cloth. If contact tips are badly discolored or roughened, polish it with nylon scrubber. ●If damage is found, replace the contact tips. ●Blackening of contact tips is caused by oxidation or sulfuration and will be removed during closing operation. It has no harmful effect except in extreme causes. |
| | 9 | Parting distance | Remove the arc chamber and measure the distance between moving and stationary contact tips using a compass and a vernier caliper. If it is out of the specified range, replace both moving and stationary contacts. |
| Current sensors See 3-2 | 10 | Looseness of screws | Check current sensor mounting screws for looseness. If loose, retighten. |
| Latch release coil (LRC) See 3-2, 3-3 | 11 | Coil resistance | Disconnect the green connector that is closer to coil than the other and, measure coil resistance between terminals. If it is out of the specified range, replace LRC. |
| | 12 | Connector | Check that the green connector is connected correctly. If incorrect, connect correctly. |
| | 13 | Looseness of screws | Check LRC mounting screws for looseness. If loose, retighten. |
| | 14 | Mechanical motion | With closing springs charged, check that pushing moving core results in ACB being closed, and releasing moving core slowly results in the core being restored smoothly. If not so, replace LRC. |
| | 15 | Electrical operation | Reassemble the side cover and front cover. Place the circuit breaker body in the TEST position for draw-out type, and make sure that no current is flowing through the main circuit for fixed type. Supply ACB with operation power, and carry out closing operation to confirm that the ACB works correctly. |
| Shunt trip device (SHT) See 3-2, 3-3 | 16 | Coil resistance | Disconnect black connector that is closer to coil than the other and, measure coil resistance between terminals. If it is out of the specified range, replace SHT. |
| | 17 | Connector | Check that the black connector is connected correctly. If incorrect, connect correctly. |
| | 18 | Looseness of screws | Check SHT mounting screws for looseness. If loose, retighten. |
| | 19 | Mechanical motion | With ACB closed, check that pushing the moving core results in the ACB being opened, and releasing moving core slowly results in the core being restored smoothly. If not so, replace SHT. After inspection, discharge closing springs. |
| | 20 | Electrical operation | Reassemble the side cover and front cover. Place the circuit breaker body in the TEST position for draw-out type, and make sure that no current is flowing through the main circuit for fixed type. Charge closing springs, supply SHT with power, and attempt to perform electrical opening operation to make sure ACB open. (*3) |

*1 See the section in this instruction manual (KRB-5377).

*2 For draw-out type.

*3 Please contact in advance.

Table 45 Detailed inspection procedure (2/2)

| Check point (*1) | No. | Check item | Description |
|---------------------------|-----|----------------------|--|
| Magnet hold trigger (MHT) | 21 | Coil resistance | Disconnect the red connector to measure coil resistance at the connector on the coil side. If it is out of tolerance, replace it. |
| | 22 | Operation | Remove MHT and pull out moving core, and make sure pushing moving core slowly allows core to be smoothly retracted and attracted. If not so, replace MHT. |
| | 23 | Connector | Check that the red connector is connected correctly. If incorrect , connect correctly. |
| | 24 | Looseness of screws | Check MHT mounting screws for looseness. If loose, retighten. |
| OCR and MHT See 3-2 | 25 | Operation | Reassemble the side cover and front cover. Carry out the functional tests using the ANU-1 OCR checker to verify that the ACB works correctly. |
| Charging motor See 4-1 | 26 | Connector | Check that the green connector is connected correctly. If incorrect , connect correctly. |
| | 27 | Electrical operation | Reassemble the side cover and front cover. Place the circuit breaker body in the TEST position for draw-out type, and make sure that no current is flowing through the main circuit for fixed type. Supply ACB with operation power, and attempt to perform motor charging with max. and min. voltages within permissible charging voltage range to make sure ACB operates normally. |
| | 28 | Looseness of screws | Check motor unit mounting screws for looseness. If loose, retighten. |
| Mechanism | 29 | Mechanical motion | Check lubrication and screws for looseness. |

*1 See the section in this instruction manual (KRB-5377).

6-2. Inspection Procedures

CAUTION

- ACB maintenance, inspection and parts replacement must be performed by competent persons.
- Do not touch ACB current carrying parts and ACB structural parts close to a current carrying part immediately after the ACB trips open. Remaining heat may cause a burn.
- Prior to commencing any work on the ACB, open an upstream circuit breaker or the like to isolate all sources of power/voltage from the main and control circuits. Otherwise, electric shock may result.
- Take care to avoid adhesion of dust to main and control circuit contacts. Dust on the contacts may result in a fire.
- Prior to commencing maintenance, inspection, or parts replacement, make sure that the closing springs are released and the ACB is open. Otherwise, unintentional open/close operation may lead to fingers or tools to be pinched by the open/close mechanism, resulting in injury.
- Retighten the terminal screws periodically to the specified torque. Otherwise, a fire could result.
- Do not perform dielectric withstand/insulation resistance tests under other conditions than specified. Doing so may cause a malfunction.
- Be sure to reinstall the arc chamber if removed. Failure to do so or incorrect installation of the arc chamber may result in a fire or burn.
- When charging the closing springs or performing open/close operation of the ACB with the arc chamber, front cover and/or side covers removed during maintenance or inspection work, do not touch parts other than those required for the above operation (charging handle, ON/OFF buttons, moving core and the like). Doing so may cause fingers or tools to be pinched, resulting in injury.
- When replacing an auxiliary, do not damage the control wire for the auxiliary or pinch the wire between the auxiliary and the breaker body. Doing so may cause a malfunction.

● Information you are requested to state

If you want us to take action against an abnormality, contact us while providing us the information shown in Table 46 below. Our contact is shown at the end of this manual.



Table 46 Information you are requested to state


| Item | Description | Reference |
|---|---|---|
| Type | AR _____ poles with draw-out cradle | Rating nameplate |
| Serial No. | _____ | |
| Main circuit rated current | <input type="checkbox"/> AC <input type="checkbox"/> DC _____ V | Product Specifications |
| Rated voltage | _____ A | I_n |
| Spring charging method | <input type="checkbox"/> Manual charging <input type="checkbox"/> Motor charging Rated operation voltage: <input type="checkbox"/> AC <input type="checkbox"/> DC _____ V | CLOSING section on specification nameplate |
| Overcurrent release | <input type="checkbox"/> Non <input type="checkbox"/> Equipped Type: AGR-_____ - _____ Rated control voltage: <input type="checkbox"/> AC <input type="checkbox"/> DC _____ V | OCR section on specification nameplate |
| Electrical tripping device | <input type="checkbox"/> Shunt trip device (SHT) Rated voltage: <input type="checkbox"/> AC <input type="checkbox"/> DC _____ V <input type="checkbox"/> Undervoltage trip device (UVT) Rated voltage: <input type="checkbox"/> AC <input type="checkbox"/> DC _____ V | TRIPPING section on specification nameplate |
| Special specification | SR: _____ SS: _____ SO: _____ | OTHERS section on specification nameplate |
| Working conditions (Voltage, current, environment) | | - |
| Symptom of abnormality (in detail): When, How, Where, etc.) | | - |
| Inspection done/actions taken (if any) | | 6-1. |
| Status quo and schedule | Permissible power cut date and time: _____ Place where you want us to take action: _____ | - |

- The contents of the nameplate should be provided in detail.
- Related documents such as product specifications and inspection reports should be provided.
- If you have a desired inspection and maintenance schedule, let us know the schedule at your earliest convenience. Our service representative could not meet your last minute requirement.

7. TROUBLESHOOTING FLOWCHARTS



Figs. 99 - 103 are troubleshooting flowcharts where typical troubles and remedial actions are shown.

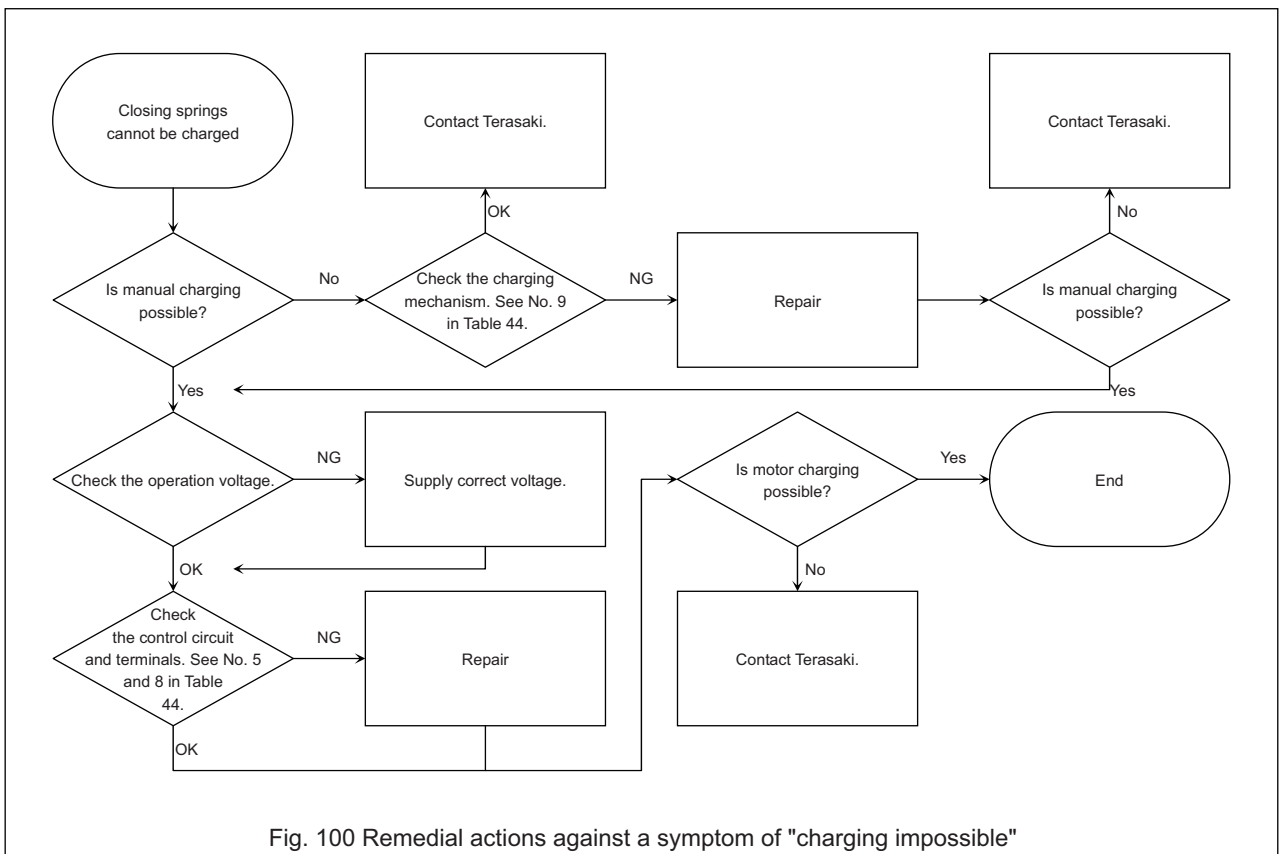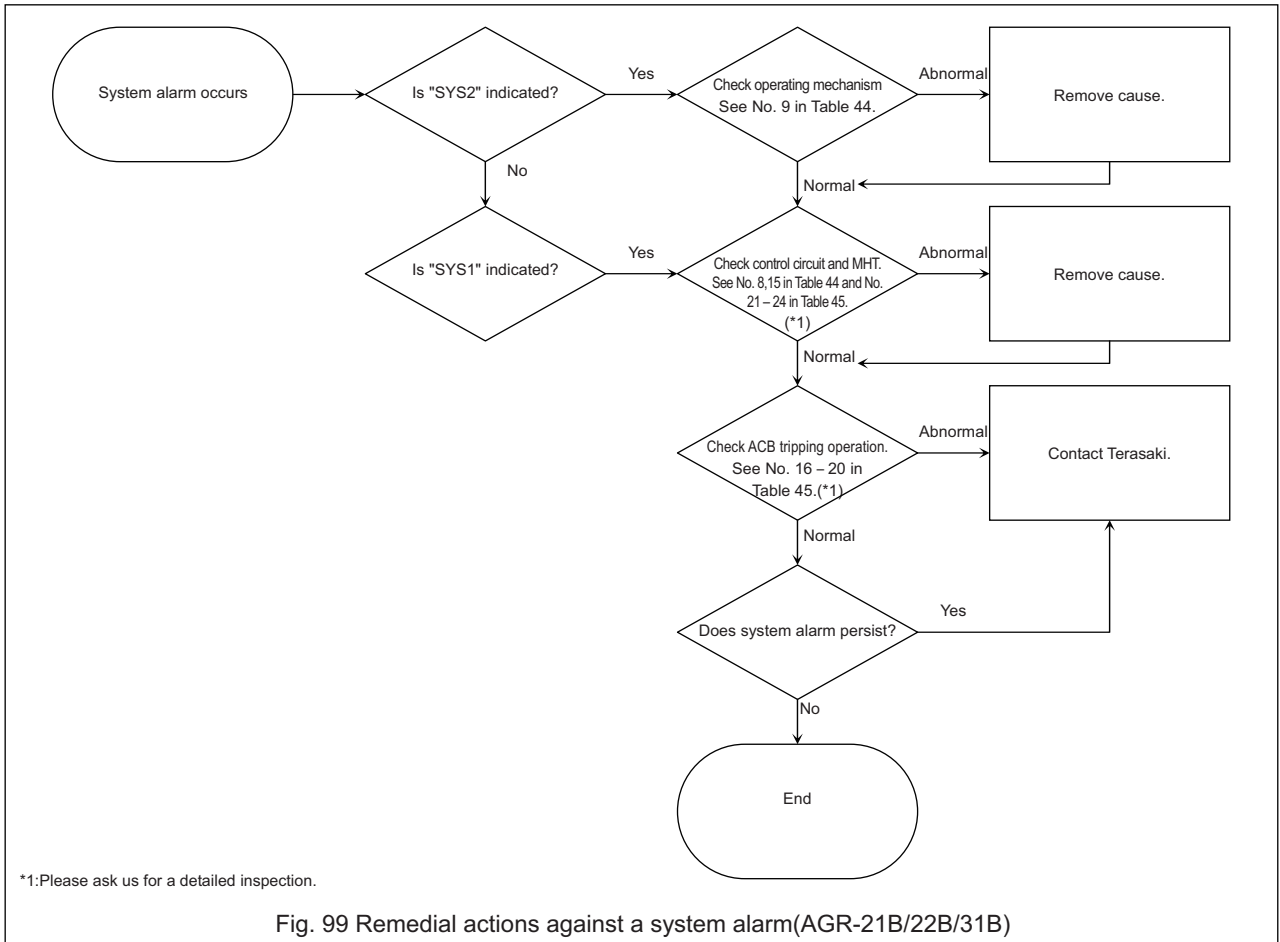

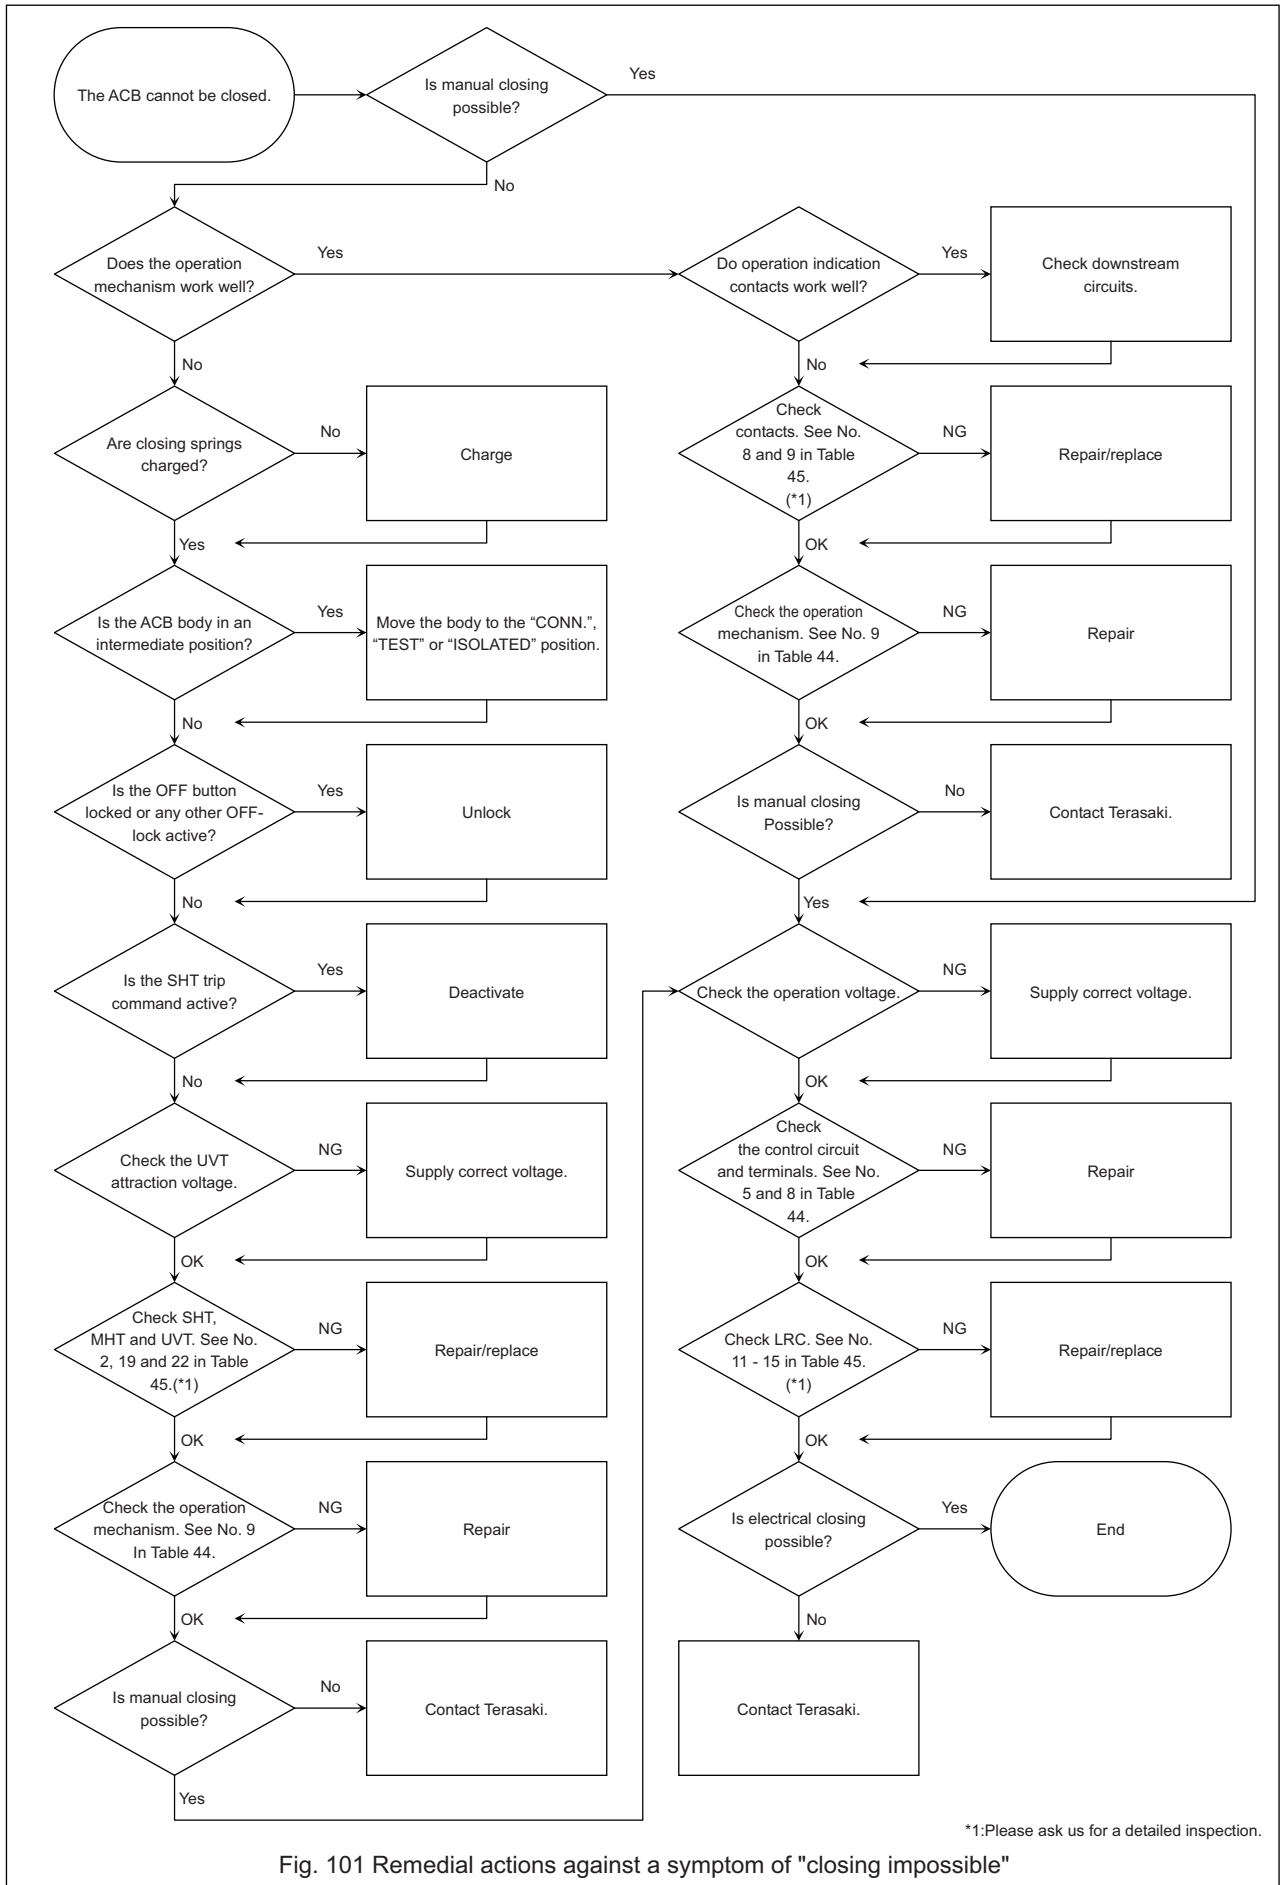

*1:Please ask us for a detailed inspection.

Fig. 101 Remedial actions against a symptom of "closing impossible"

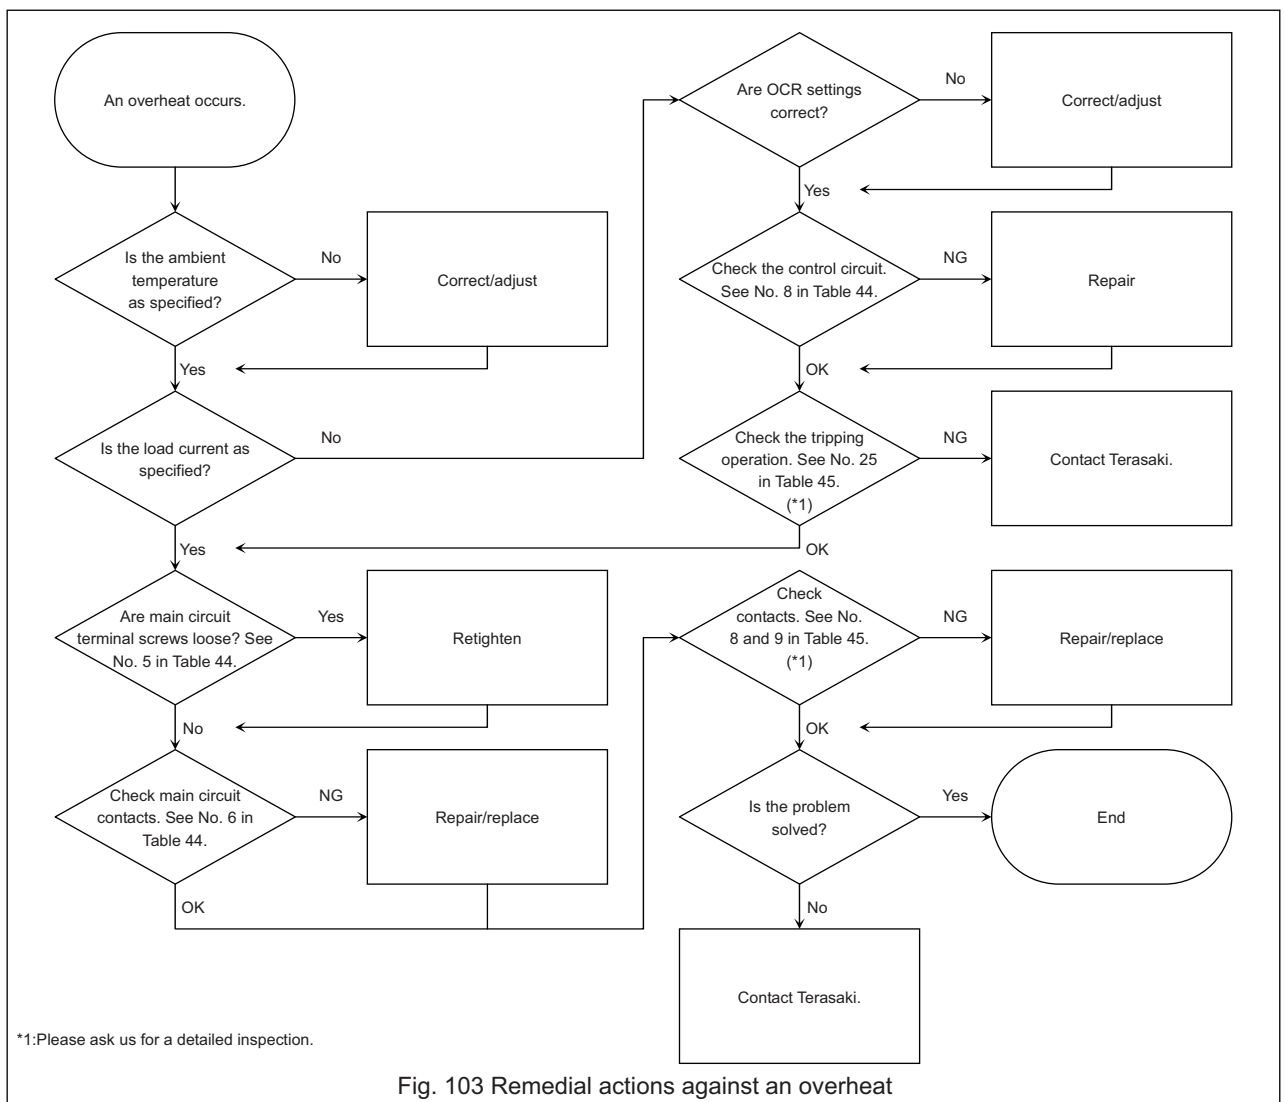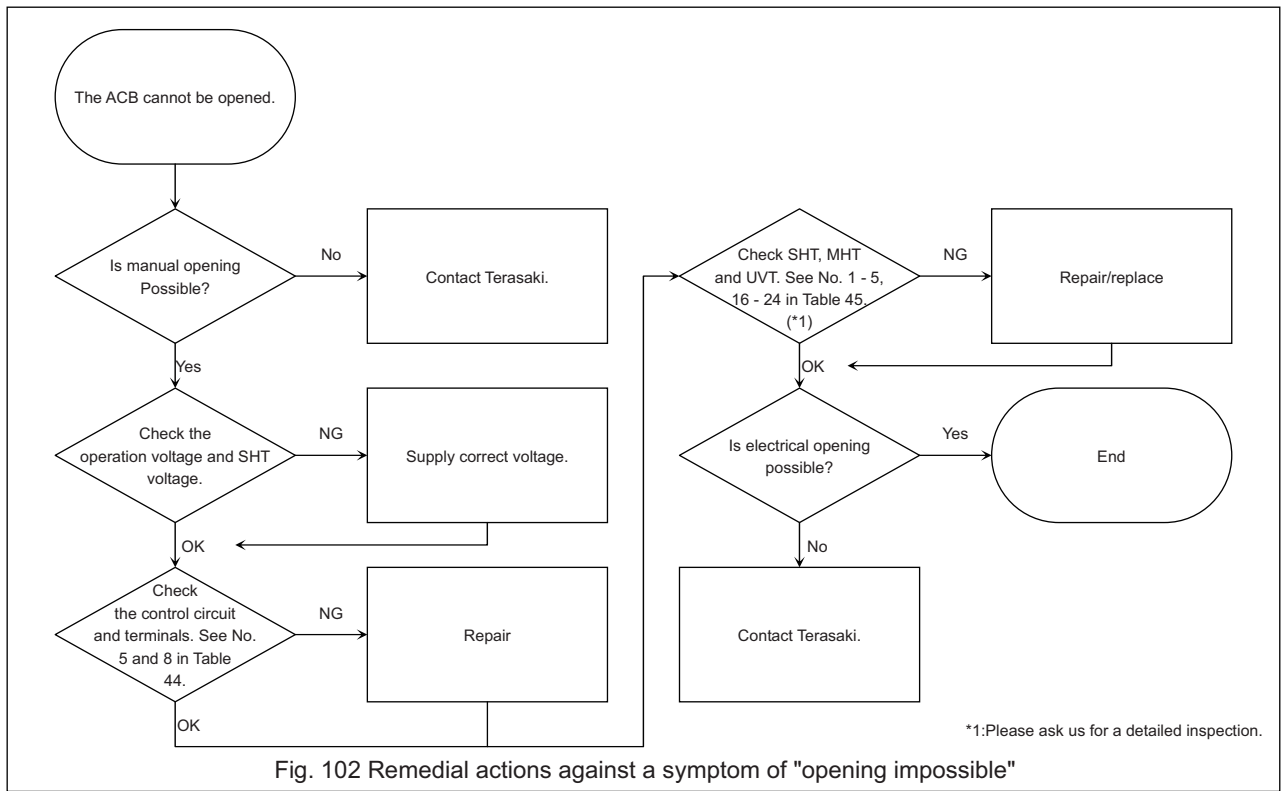

8.DOOR INTERLOCK

Function of the Door Interlock

General:

The door interlock prevents the switchboard panel from being opened when the ACB is closed, or in the CONNECT or TEST POSITION. The panel door is only operable when the ACB is OPEN and ISOLATED, thus preventing remote operation of the ACB.

Normal Function:

- When the ACB is CLOSED and in the connected position the draw-out handle cannot be inserted.
- When the ACB is OPEN it can be drawn-out to the test or isolated position. This is indicated on the ACB's position indicator.
- To open the panel door the ACB is required to be OPEN and in the isolated position.

Areas of Caution:

- Ensure the panel door is fully closed and locked before attempting to draw-out or rack in the ACB, from any of the three positions (CONNECTED, TEST & ISOLATED) to another.
- When moving the ACB body, care should be taken not to damage the door interlock pin, situated at the bottom left and protruding from the ACB.


Interlock Release:

- The door interlock can be defeated by releasing the spring-actuated catch on the interlock panel unit. This is accessible through a hole located between the interlock panel unit fasteners.


Door Interlock Adjustment


How to adjust the panel unit:

Once the ACB is installed into the switchboard and the panel door unit is fitted, check the position of the handle shutter when the door is closed and the ACB is in the isolated position.

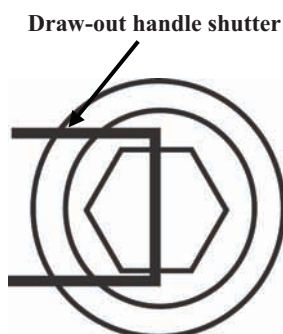


The handle shutter is a good position at the centre of the hole and no adjustment is required

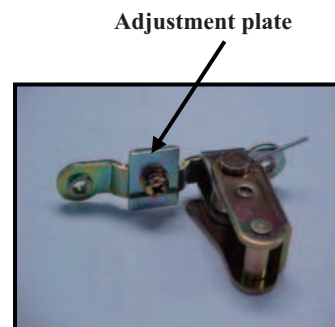

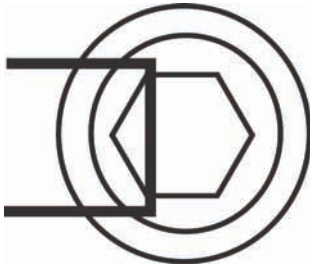


When the handle shutter is at the left of the hole, remove the adjustment plate. This will push against the handle shutter less moving it towards the centre of the hole.

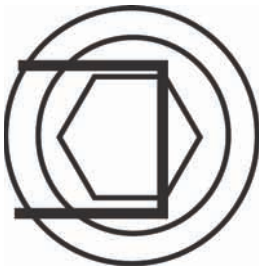

When the handle shutter is at the right of the hole, turn the adjustment plate upside down with the double side to the top. This will push against the handle shutter more moving it towards the centre of the hole.




Door Interlock Outline Dimensions & Arrangement Drawings

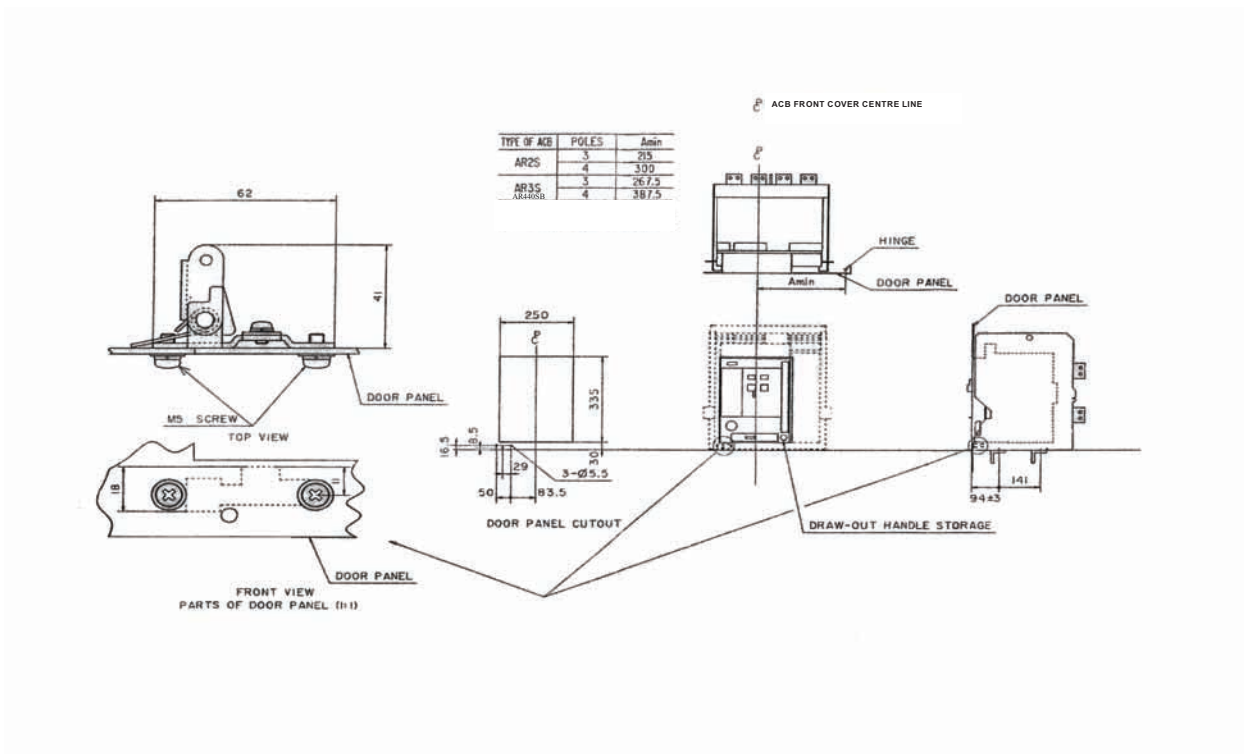

9. MECHANICAL INTERLOCK DEVICE. (HORIZONTAL TYPE) TYPES: AKR-1MH.

| Group | Applicable Breaker Types |
|-------|--|
| AR2 | AR208S, AR212S, AR216S, AR220S AR212H, AR216H, AR220H |
| AR3 | AR325S, AR332S, AR316H, AR320H, AR325H, AR332H, AR440SB |
| AR4 | AR440S |

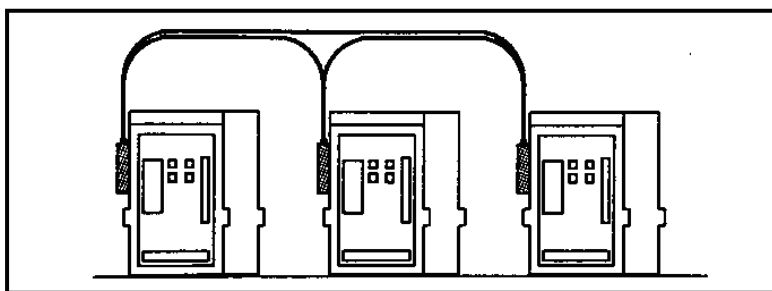

The mechanical interlock system allows up to three ACBs to be selectively turned on or off to the configured requirement.

Please read these instructions carefully to ensure correct operator use. The Manufacturer assumes no responsibility for the damage resulting from non-application or incorrect application of the instructions provided herein. The contents of this manual may be subject to change without prior notice.

CAUTION

■ **SAFETY:**

Be sure and read all instructions and associated documents accompanying the product thoroughly to familiarise yourself with the product handling, safety information, and all other safety precautions.





■ **Installation Precautions:**

- Installation work of the interlock must only be carried out by qualified and authorised personnel.
- Do not use the interlock in areas that are subject to high temperatures, high humidity, dusty air, corrosive gasses, strong vibration and shock. Using the interlock in these conditions may cause a malfunction.
- Care should be taken to prevent foreign objects (such as debris, concrete powder, dust, chippings), oil and rainwater from entering the interlock. Using the interlock in these conditions may cause a malfunction.
- If the ACBs are draw-out types, do not insert the bodies into the chassis until the installation of the interlock system has been complete. If the ACBs are fixed insure the ACBs are locked off during installation Failure to do so may result in damage to the interlock or personal injury.
- Do not bend the interlock cables at the radius of less than 200mm. Doing this may result in damage to the interlock cables causing the interlock to fail.
- Insert the interlock wire until it stops at the groove end of the lever. Insufficient insertion of the wire could result in damage to the interlock.
- Be sure to adjust the distance between the support and the lever. Failure to do this can result in damage to the interlock.
- If the ACBs are draw-out types, ensure the ACBs are off while racking them into the chassis. Failure to do this can result in damage to the interlock.

■ **Operation & Maintenance**


- Do not touch the interlock during operation. Doing so may result in personal injury.
- Maintenance and/or inspection of the interlock system must only be carried out by qualified and authorized personnel.
- Before commencing maintenance work, remove the ACB bodies from the chassis or lock off the ACBs. Failure to do so may result in damage to the interlock or personal injury.
- If the ACBs are draw-out types, ensure the ACBs are off while racking them into the chassis. Failure to do this can result in damage to the interlock.

Types & Operations
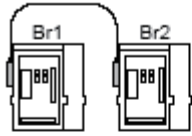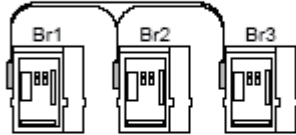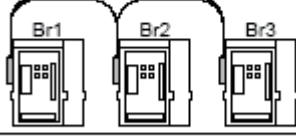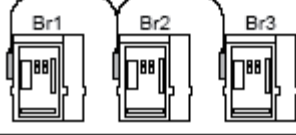
| | Type | Operation | | | Remark |
|---------|---|-----------|-----|-----|--|
| | | Br1 | Br2 | Br3 | |
| TYPE C. |  | ON | OFF | / | One of two breakers can be turned on. |
| | | OFF | ON | / | |
| | | OFF | OFF | / | |
| TYPE B. |  | ON | ON | OFF | One or two of three breakers can be turned on. |
| | | ON | OFF | ON | |
| | | OFF | ON | ON | |
| | | ON | OFF | OFF | |
| | | OFF | ON | OFF | |
| | | OFF | OFF | ON | |
| | | OFF | OFF | OFF | |
| TYPE D. |  | ON | OFF | OFF | One of three breakers can be turned on. |
| | | OFF | ON | OFF | |
| | | OFF | OFF | ON | |
| | | OFF | OFF | OFF | |
| TYPE A. |  | ON | OFF | ON | Br2 is interlocked with both Br1 and Br3. |
| | | ON | OFF | OFF | |
| | | OFF | ON | OFF | |
| | | OFF | OFF | ON | |
| | | OFF | OFF | OFF | |

- The interlock is enabled in the connected position. When the ACB is in the TEST, ISOLATED or DRAW-OUT Position the interlock is disabled.
- If all the ACBs in the interlock system are open and receive a close (on) signal, none will turn on. However, if this occurs there will be momentary continuity between the main circuit and the auxiliary switch A-contact in all the ACBs.
- The body of the other ACB(s), as long as they are off (open) can be drawn out or inserted, irrespective of the state of the other ACB(s). **NOTE:** Do not draw out or insert an ACB body during cable installation, adjustment or operation check.

Specifications

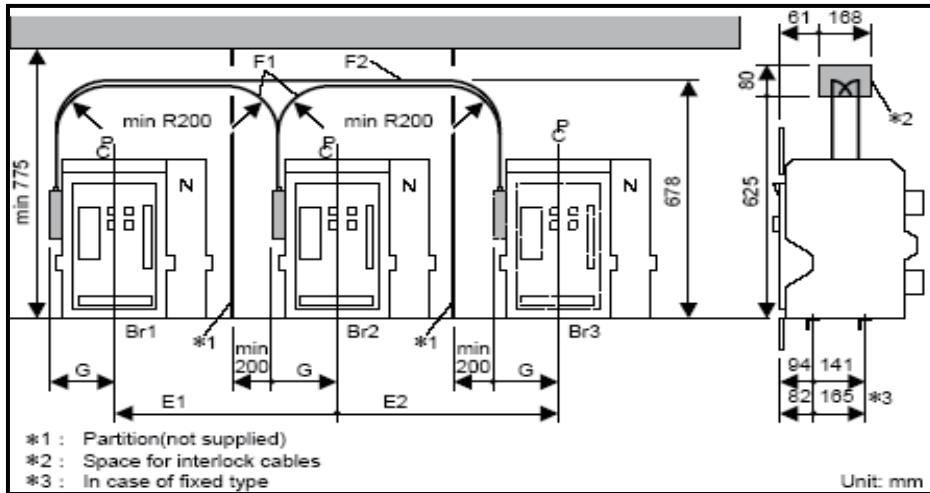

$\overset{C}{\curvearrowright}$ ACB front cover centre line.


There should be a minimum of 200mm-gap left between the interlock mechanism and the cabinet wall, this is to enable cable installation, adjustment or operation check.

■ Mounting the ACBs

- Before mounting the ACBs check the type of interlock, number and length of the cables to ensure they are as ordered.
- Install the ACBs (for fixed type) or chassis (for draw-out type) in the switchboard (see specifications section aforementioned for dimensions).
- When installing the ACBs, be sure to locate each ACB as you have specified (i.e. middle, left or right) when ordering. A different arrangement does not permit correct installation of the interlock cables.
- If the ACBs are draw-out types, do not insert the bodies into the chassis until the installation of the interlock system has been complete. If the ACBs are fixed insure the ACBs are locked off during installation.


■ Cable Connections

The following illustration shows the connections between the ACBs.

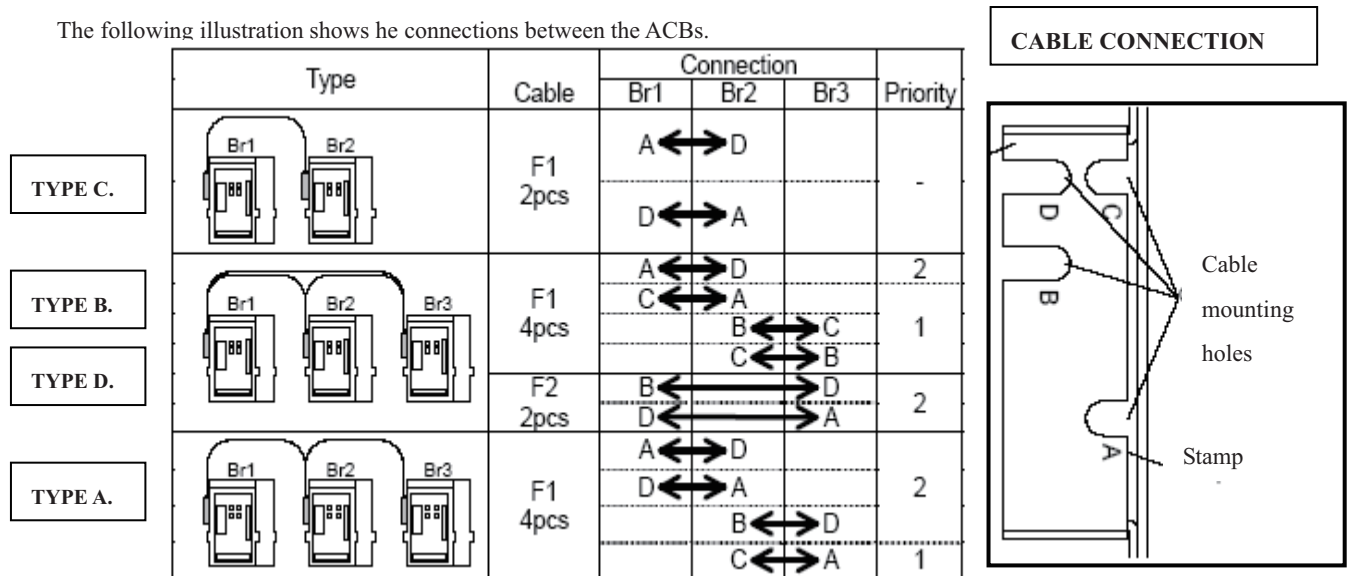


■ Mounting the Cables


- When installing the interlock cables, first perform the priority 1 connections and then priority 2 in cable connections chart above. Then follow the steps 1 to 10.

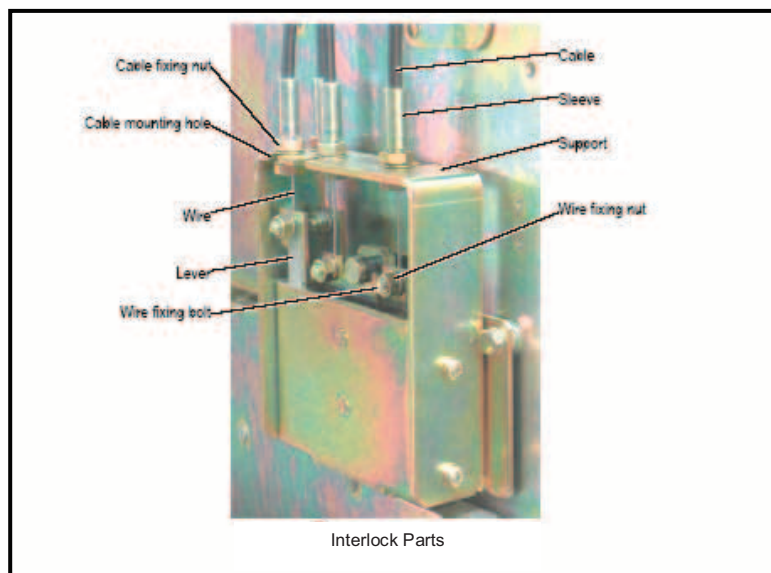

- 1 Loosen the cable fixing nut and the wire fixing nut.

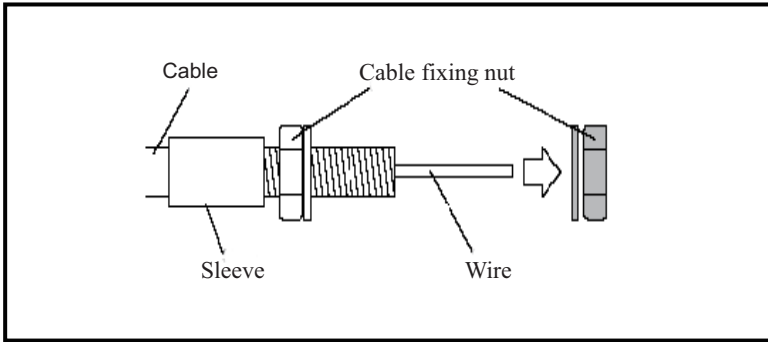


- 3 Temporarily tighten the cable fixing nut.

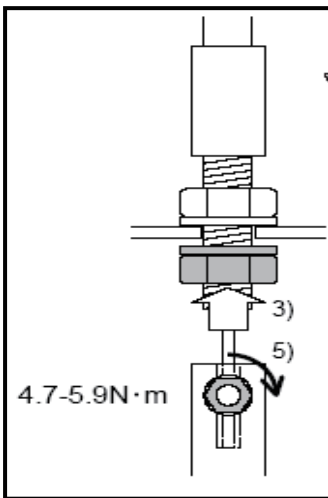


- 5 Holding the wire, tighten the Wire fixing nut to a torque of 4.7 to 5.9 N.m.


- 6 Repeat steps 1 to 5 for the wire on the other end of the cable.

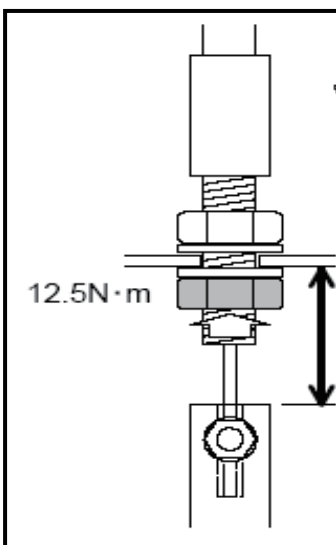

- 2 Attach the cable in the cable mounting Hole and insert the wire into the wire Insertion hole of the wire fixing bolt.

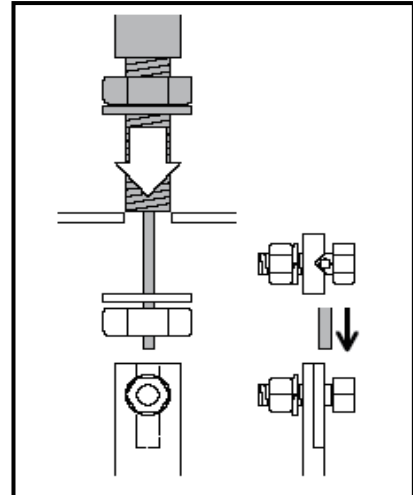

- 4 Push in and hold the wire until It stops against the groove end of the level.

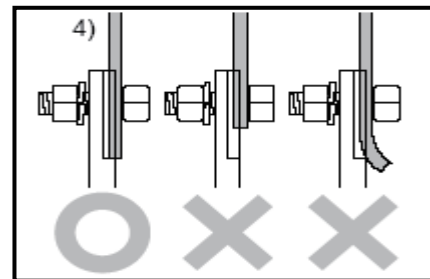

| Unit: mm | |
|---------------------|----------------|
| Cable mounting hole | Distance |
| A,B | 38.5 ± 0.5 |
| C,D | 22 ± 0.5 |

- 7 Make sure the distance between the support and the lever is as specified and then tighten the cable fixing nut to a torque of 12.5N.m. If the distance is out of the specified range, proceed to step 8 to adjust the distance.

- 8 If the distance is too small, turn the cable-fixing nut counter clockwise to lower the sleeve and the lever, increasing the distance until it falls within the specified range. If the distance is too large, turn the cable-fixing nut clockwise to raise the sleeve and the lever

- 9 If the ACBs are of a draw-out type, insert the ACB bodies into the chassis to the connected position. Do not turn the ACB(s) on until it is in the connected position. If the ACB is a fixed typed, unlock the ACB.

- 10 After making sure the main circuit is not energised, check the operation of the ACB(s). Do not touch the interlock during operation.

■ Inspection & Maintenance

- If the ACBs are draw-out types, remove the ACB bodies from their chassis. If the ACBs are fixed ensure the ACBs are locked off.
- Check the wire fixing nut and cable fixing nut for tightness. If loose, retighten to the specified torque.
- Make sure the distance between the support and the lever is as specified. If the distance is out of the specified range, readjust it.
- If the ACBs are of a draw-out type, insert the ACB bodies into the chassis to the connected position. Do not turn the ACB(s) on until it is in the connected position. If the ACB is a fixed type, unlock the ACB.
- After making sure the main circuit is not energised, check the operation of the ACB(s). Do not touch the interlock during operation.

TERASAKI ELECTRIC CO., LTD.

Head Office: 6-13-47 Kamihigashi, Hirano-ku, Osaka 547-0002, Japan
Circuit Breaker Division: 6-13-47 Kamihigashi, Hirano-ku,
Osaka 547-0002, Japan

TEL +81-6-6791-2763
FAX +81-6-6791-2732
int-sales@terasaki.co.jp
<https://www.terasaki.co.jp/>

TERASAKI ELECTRIC (M) SDN, BHD.

Lot 3, Jalan 16/13D, 40000 Shah Alam, Selangor Darul
Ehsan, Malaysia

TEL +60-3-5549-3820
FAX +60-3-5549-3960
terasaki@terasaki.com.my

TERASAKI ELECTRIC TRADING & SERVICES (M) SDN. BHD.

No. 20 & 22, Jalan Rajawali 2, Bandar Puchong Jaya,
Jalan Puchong, 47100 Selangor Darul Ehsan, Malaysia

TEL +60-3-8070-2486, +60-3-8075-1542
FAX +60-3-8070-2481
sales@terasaki.com.my

TERASAKI DO BRASIL LTDA.

Rua Olof Palme, No. 765,
Barra da Tijuca - Rio de Janeiro, Brazil

TEL +55-21-3301-9898
FAX +55-21-3301-9861
terasaki@terasaki.com.br
<http://www.terasaki.com.br>

TERASAKI ELECTRIC (CHINA) LTD.

72 Pacific Industrial Park, Xin Tang Zengcheng,
Guangzhou 511340, China

TEL +86-20-8270-8556
FAX +86-20-8270-8586
terasaki@public.guangzhou.gd.cn

TERASAKI ELECTRIC GROUP SHANGHAI REPRESENTATIVE OFFICE

Room No. 1405-6, Tomson Commercial Building
710 Dong Fang Road, Pudong, Shanghai, 200122, China

TEL +86-21-58201611
FAX +86-21-58201621
terasaki@vip.163.com

TERASAKI ELECTRIC (EUROPE) LTD.

80 Beardmore Way, Clydebank Industrial Estate
Clydebank, Glasgow, G81 4HT, Scotland (UK)

TEL +44-141-941-1940
FAX +44-141-952-9246
marketing@terasaki.co.uk
<http://www.terasaki.com/>

TERASAKI ELECTRIC (EUROPE) LTD. FILIALE ITALIA

Via Ambrosoli, 4A-20090 Rodano, Milano, Italy

TEL +39-02-92278300
FAX +39-02-92278320
terasaki@terasaki.it
<https://www.terasaki.it/>

TERASAKI ELECTRIC (EUROPE) LTD. SUCURSAL EN ESPAÑA

Pol. Ind. Coll de la Manyà, C/Cal Ros dels Ocells 5-7,
08403 Granollers, Barcelona, Spain

TEL +34-93-879-60-50
FAX +34-93-870-39-05
terasaki@terasaki.es
<http://www.terasaki.es/>

TERASAKI ELECTRIC (EUROPE) LTD. FILIAL SVERIGE

Box 2082 SE-128 22 Skarpnäck Sweden

TEL +46-8-556-282-30
FAX +46-8-556-282-39
info@terasaki.se
<https://www.terasaki.se/>

TERASAKI CIRCUIT BREAKERS (S) PTE. LTD.

17 Tuas Street Singapore 638454

TEL +65-6744-9752
FAX +65-6748-7592
tecs@tecs.com.sg

Published in May 2019.
Ratings and specifications in this manual may be subject to change without notice.
Latest data can download by matrix code.

