

Advantage II

Hybrid Series by Ebtron

Installation, Operation and Maintenance Technical Manual

HTx104

“Plug & Play” Transmitters

Includes Analog output models: HTA104-P, HTA104-F, HTA104-B, HTA104-T, HTA104-U & HTA104-E
Includes RS-485 output models: HTN104-P, HTN104-F, HTN104-B, HTN104-T, HTA104-U & HTN104-E

Document Name: TM_HTx104_R5C



TM_HTx104_R5C

HYBRID SERIES
TECHNICAL MANUAL



Part Number: 930-0150

LIST OF EFFECTIVE AND CHANGED PAGES

Insert latest changed pages (in bold text); remove and dispose of superseded pages.
 Total number of pages in this manual is **36**.

Page No	Revision *	Description of Change	Date
1, 2	R5C	Updated title page and List of Effective Pages revision to R5C	08/27/2013
7	R5C	Corrected dimensions for case height	08/27/2013
3-5, 9, 10, 17, 19, 20-22, 27, 28, 33, 35	R5B	Updated to include HU1 (-U) Universal Probes	02/22/2012
5, 11, 19, 22, 24	R5A	Firmware update: Added HTN network alarm features/applicability and descriptions	08/15/2012
19, 22, 24, 26	R5A	Firmware update: Added altitude compensation features/details	08/15/2012
15	R5A	Added parity submenu items	08/15/2012
21, 25	R5A	Firmware update: Added AR1 submenu visibility when OUT1 U/M=CFM is selected	08/15/2012
23	R5A	Firmware update: Replaced Kv factor with AR1 submenu	08/15/2012
All other pages	R5A	Re-issued document as R5A	08/15/2012
15	R4J	Added MODBUS Parity submenu	12/22/2011
16	R4J	Modified MODBUS default communications note	12/22/2011
22, 24, 26	R4J	Modified INT TIM and ALRM DEL max range to 900 seconds	12/22/2011
16	R4H	Added note in Table 6 for MODBUS communications (8/1/None)	09/23/2011
11	R4G	Added note for Output Full Scale FS1 value and Setup Menu	06/22/2011
30	R4G	Modified "quantity of samples" text for product consistency	06/22/2011
30	R4F	Typo error on Field Cal Wiz - 200 samples changed to 1200	03/30/2011
35	R4F	Revised wiring diagram to indicate alarm option connections	03/30/2011
5	R4E	Added in resolution for 0-5/0-10VDC analog outputs	12/02/2010
31, 32	R4D	Added MANUAL ADJUSTMENT OF FACTORY OFFSET/ GAIN CALIBRATION	08/03/2010
33-36	R4D	Repaginated for addition of pages 31 and 32	08/03/2010
9	R4C	Added HE1 EX and OA probe connection details	06/21/2010
5	R4B	Modified Specifications to clarify HT1 Sensor Configuration	06/01/2010
5, 6, 11, 19, 21 through 26	R4A	Updated to include Advantage II firmware features	02/08/2010
15	R4A	Corrected COMM Menu entry method	02/08/2010
16	R4A	Added Modbus baud rate notes	02/08/2010
33	R4A	Added Appendices A and B HTA104, HTN104 Wiring Diagrams	02/08/2010
30	R3F	Added notes for clarification in Field Calibration Wizard menu	11/08/2009
12	R3E	Correction to Analog Conversion Table for Unidir'l Airflow (LPS)	04/15/2009
21, 23, 25	R3D	Update menu item order for firmware 1.08 revision	03/31/2009
3-5, 7-9, 11, 14-30	R3C	Republished as revision R3C	02/18/2009
6	R3C	Added status LED and legend	02/18/2009
10	R3C	Added status LED and legend	02/18/2009
12	R3C	Added K factor reference data to Table 3	02/18/2009
13	R3C	Added status LEDs and legends	02/18/2009
31, 32	R3C	Revised troubleshooting tables for status LED nomenclature	02/18/2009
21 through 25	R3B	Revised all 0-5V menu options from [OUT1 (or 2)=0-5V ↓] to [OUT1 (or 2)=0-5V ↑↓]	11/21/2008
28	R3B	Revised AREA STATUS/AREA MATCH menu option	11/21/2008
1 through 32	R3A	Revised extensively to include hardware/firmware changes resulting from 0-5V menu options and expanded RS-485 network connection information.	11/17/2008

Copyright © 2010, EBTRON®, Inc.

All brand names, trademarks and registered trademarks are the property of their respective owners. Information contained within this document is subject to change without notice. Visit EBTRON.com to view and/or download the most recent versions of this and other documents.

All rights reserved.

Table of Contents

OVERVIEW 5

SPECIFICATIONS 5

ADVANCED TECHNOLOGY 5

HTx104 TRANSMITTER FEATURES 6

ORDERING GUIDE FOR HTx104 TRANSMITTER 6

HTx104 TRANSMITTER INSTALLATION 7

 Mechanical Dimensions 7

 Power Transformer Selection 8

 Connecting Power to the Transmitter 8

 Connecting Sensor Probes to the Transmitter 9

 HTA104 Analog Transmitter Set Up 10

 HTA104 Analog Output Wiring 11

 HTA104 and HTN104 Alarm Features 11

 HTA104 and HTN104 Alarm Output and Hysteresis 11

 HTA104 - Analog Output Signal Selection, 0-5VDC / 0-10VDC / 4-20mA 11

 Converting the Analog Output Signal from FPM to CFM (MPS to LPS for SI units scaling) 11

 HTA104 Analog Output Scaling 11

 Sending a Test Output Signal to the Host Control System 12

 HTN104 RS-485 Transmitter Set Up 13

 Network Cable Specifications 13

 HTN104 RS-485 Output Network Connections 13

 Connecting to an Isolated RS-485 Network: 14

 Connecting to a Non-Isolated RS-485 Network: 14

 HTN104 Setting Network Options 14

 HTN104 Setting the Network Protocol 14

 HTN104 Setting the Transmitter Address 14

 HTN104 Setting the Transmitter Termination 14

HTx104 TRANSMITTER START UP 17

 Transmitter Initialization 17

 Changing the System of Units 18

 HTx104 LCD Display Notifications 18

 Last LCD Character Shown in Lower Case (Probe Malfunction) 18

 All LCD Characters Shown in Lower Case(Field Cal Wizard Engaged) 18

 LCD Blinks ** LOW ALARM **, ** HIGH ALARM ** or ** TRBL ALARM ** 18

 LCD Display when using HE1 ERV Probes 19

 HTx104 Factory Default Settings 19

 Factory Defaults for HP1 (-P), HF1 (-F), HB1 (-B), HT1 (-T), HU1 (-U) and HE1 (-E) Sensor Probes 19

TRANSMITTER CALIBRATION 20

CHANGING FACTORY DEFAULT SETTINGS 20

 Setup Menu Options 20

 Changing the LCD Display from Velocity FPM to Volumetric Flow CFM (MPS to LPS for SI units) 20

 Locking the Configuration Settings 20

VIEWING SENSOR DATA 27

 Local Sensor Data Display 27

 Sensor Data over RS-485 BACnet® Network 27

FIELD ADJUSTMENTS 29

 Adjusting the Low Limit Cutoff 29

 Adjusting the Digital Output Filter 29

 Field Calibration Wizard - Adjustment of Factory Calibration 29

 Overview of the Field Calibration Wizard 29

 Engaging and Using the Field Calibration Wizard 30

MANUAL ADJUSTMENT OF FACTORY OFFSET/GAIN CALIBRATION 31

 Procedure for 1 Point Field Adjustment 31

 Procedure for 2 Point Field Adjustment 31

MAINTENANCE 32

STANDARD LIMITED PARTS WARRANTY 32

 General Troubleshooting (All HTx104 Systems) 33

 HTA104 - Analog Transmitter Troubleshooting 34

 HTN104 - RS485 Transmitter Troubleshooting 34

APPENDIX A - HTA104 WIRING DIAGRAMS 35

APPENDIX B - HTN104 WIRING DIAGRAM 35

List of Figures

Figure 1. HTx104 Transmitter5
 Figure 2. HTx104 Transmitter Features6
 Figure 3. HTx104 Transmitter Ordering Guide6
 Figure 4. HTx104 Transmitter Mechanical Detail Drawing7
 Figure 5. HTx104 Power Connections8
 Figure 6. Type A, Type B and Type C Transmitters9
 Figure 7. Connector Detail9
 Figure 8. HTA104 Analog Circuit Board Detail10
 Figure 9. HTN104 RS-485 Transmitter Circuit Board Detail13
 Figure 10. COMM (Communications) Setup Menu15
 Figure 11. Transmitter Initialization Menu17
 Figure 12. System of Units Menu18
 Figure 13. Factory Default Lock Menu Settings20
 Figure 14. Setup Menu Options: -P, -F, -T and -U Sensor Systems (“IP SYS”)21
 Figure 15. Setup Menu Options: -B Sensor Systems (“IP SYS”)23
 Figure 16. Setup Menu Options: -E Sensor Systems (“IP SYS”)25
 Figure 17. Navigating through the Diagnostics Menu (all System of Units)28
 Figure 18. HTx104 Transmitter Connector Diagram28
 Figure 19. Field Calibration Wizard Menu (all System of Units)30
 Appendix A - HTA104 WIRING DIAGRAMS FOR -P, -F, -T, -U AND -B PROBE MODELS35
 Appendix A - HTA104 WIRING DIAGRAMS FOR -E ERV MODELS35

List of Tables

Table 1. HTx104 Connectivity Options6
 Table 2. HTx104 Power Transformer Selection Guide8
 Table 3. HTA104 Analog Output Conversions12
 Table 4. HTN104 RS-485 BACnet Object List16
 Table 5. HTN104 RS-485 Modbus Register Map16
 Table 6. HTN104 RS-485 JCI N2®-Bus Point Map16
 Table 7. Standard “IP” and “SI” Menu System of Units Abbreviations18
 Table 8. Factory Default Menu Settings19
 Table 9. General Troubleshooting (All HTx104 Systems)33
 Table 10. HTA104 Analog Transmitter Troubleshooting34
 Table 11. HTN104 RS-485 Transmitter Troubleshooting34

OVERVIEW

EBTRON's HTx104 transmitter (Figure 1) can process up to four individual sensing points and is compatible with a number of EBTRON sensor systems. The transmitter requires 24 VAC and provides the host controls with output signals for airflow and temperature, as well as an alarm output (not available on HTx104-E systems). Each transmitter is fully independent of the sensor probes and does not require field matching to sensor probes. The HTx104 transmitter (Figure 2) includes a 16 character LCD display for airflow, temperature, local alarm status and system configuration and diagnostics and is available in analog (HTA104) and RS-485 network (HTN104) versions.

Field configuration is accomplished through a simple four-button interface on the main circuit board. Individual sensor airflow and temperature measurements can be displayed from the diagnostic mode and are beneficial as an HVAC system diagnostic tool. A programmable alarm feature can be set for low limit or high limit with hysteresis, or can be set as a dead band alarm with upper and lower setpoint alarms as a percentage of flow. For the HTA-104, the alarm output can be configured as active low (0VDC) or active high (5VDC/10VDC). The alarm feature can also be set to allow internal fault detection circuitry that monitors transmitter and sensor status to provide a trouble alarm output in the event of a fault. For the HTN-104 the Alarm condition is indicated by the AI object Alarm Status Flag. The airflow output signal can be filtered, and a process low limit can be set to force the output to zero when airflow falls below a user defined value. These features are important for outside air intake applications typically affected by transient wind gusts at low airflow rates. A Field Calibration Wizard feature can be engaged for one or two point field calibration in applications where field calibration or adjustment is required.

SPECIFICATIONS

Maximum Number of Sensing Points

- 4 (4 Airflow + 4 Temperature, independently processed)

Sensor System Configurations (max.)

- Type A (probes x sensors/probe):
1x4 (HP1 probes)
1x2 (HT1 probes)
- Type B (probes x sensors/probe):
2x2 (HP1, HT1, HU1, HE1 probes),
2x2 (HB1 "bleed" sensors)
- Type C (probes x sensors/probe):
4x1 (HF1 fan inlets)
4x1 (HT1 4 inch probes only)

Digital Signal Processing

- Microprocessor: Yes
- Multiplexing: 8 individual channels
- A/D Converter: 12-Bit

"Plug and Play" Sensor Systems

- Probes do not require matching to transmitter

Power Requirements

- Voltage: 24 VAC (22.8 to 26.4 VAC), isolation not required
- "Brownout" protection: "Watchdog" reset circuit
- Power: 6 to 11 VA (dependent on number of sensors)
- Protection: Over voltage, over current and surge protection

Enclosure

- Aluminum

User Interface

- Pushbutton and LCD display

Display

- 16 character alpha-numeric auto-range

Output to Host Controls

- Output/Protocols Supported:
Model HTA104:
Isolated 0-5/0-10VDC or 4-20mA (resolution 0-10VDC: 0.010% FS; 0-5VDC: 0.020% of FS)
Model HTN104: RS-485, BACnet[®], Modbus, or JCI[®] N2-Bus[®]

Airflow Output Adjustments:

- Field Calibration Wizard
- Offset/gain
- Airflow Output Signal Filter with adjustable flow buffer and integration buffers 0 (off) to 99%
- Airflow Low Limit Cutoff: Forces output to zero below defined value
- Alarm Output features for transmitter/sensor fault and low limit, high limit, or dead band flow alarms

System Diagnostics

- Sensor/transmitter diagnostic mode with notification

Environmental Limits

- Operating Temperature: -20° to 120° F (-28.8° to 48.8° C)
- Moisture: 0 to 99% RH, noncondensing (protect from water)

Compatible Sensor Systems

- HP1 probes, HF1 fan inlets, HB1 "bleed", HT1 small duct, HU1 Universal probes and HE1 ERV sensors

Listings

- UL[®] 873 Airflow & Temperature Indicating Devices

Warranty

- 36 months from shipment



Figure 1. HTx104 Transmitter

ADVANCED TECHNOLOGY

- Microprocessor-based electronics with industrial grade integrated circuits.
- "Plug and Play" sensor probe design.
- Accepts up to 4 individual airflow and temperature sensor pairs.
- LCD display.
- Pushbutton user interface for simple field configuration, diagnostics and Field Calibration Wizard.
- Independent airflow and temperature outputs.
- Programmable alarm output with adjustable hysteresis.
- Model HTA104: Analog Output
- Model HTN104: RS-485 output - BACNet[®] - MS/TP Master, Modbus[®]-RTU or JCI N2-Bus[®].

Network Connectivity Solutions






TM HTx104_R5B

HYBRID SERIES
TECHNICAL MANUAL

HTx104 TRANSMITTER FEATURES

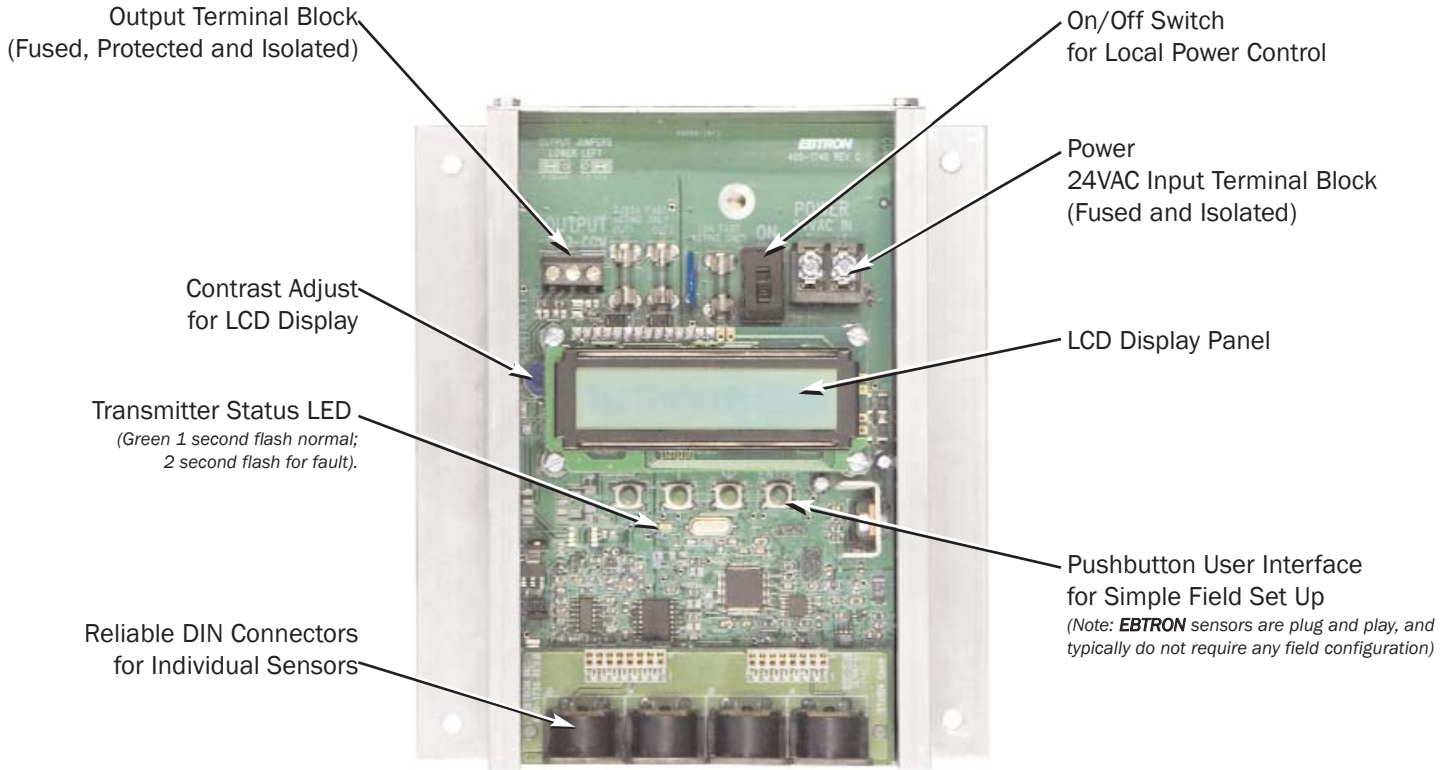


Figure 2. HTx104 Transmitter Features

ORDERING GUIDE FOR HTx104 TRANSMITTER

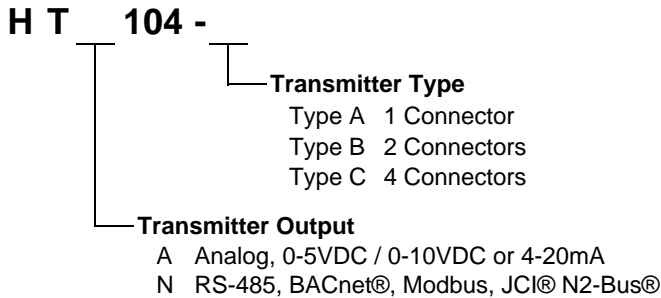


Figure 3. HTx104 Transmitter Ordering Guide

Table 1. HTx104 Connectivity Options

Output to Host Controls	Output/Protocols Supported	Airflow	Temperature	Status
Analog x=A	Linear 0-5VDC ¹ / 0-10VDC or 4-20mA	Yes	Yes	Yes
RS-485 x=N	BACnet®-MS/TP, BACnet®	Yes	Yes	Yes
	Modbus-RTU			
	JCI® N2-Bus®			

¹ 0-5 VDC analog output option introduced in firmware versions from 1.07 and later.

TM HTx104_RSA

HTx104 TRANSMITTER INSTALLATION

The HTx104 transmitter is designed for use in an environment between -20° F to 120° F (-28.8° C to 48.8° C) where it will not be exposed to rain or snow.

Mount the transmitter upright in a field accessible location. The enclosure (Figure 4) is designed to accept 3/4 in. (19.0 mm) conduit fittings for signal and power wiring at the top left and right sides of the circuit board. Locate the transmitter so that the connecting cables from all of the sensor probes will reach the receptacles on the bottom of the transmitter enclosure.



In locations exposed to direct rain and/or snow, the transmitter must be enclosed in a NEMA4 enclosure.



Leave at least 7" (177.8 mm) above, and 3" (76.2 mm) to each side and bottom, of unobstructed space around the transmitter to allow for heat dissipation and cover removal.



Locate the transmitter in a location that can be reached by all connecting cables from the sensor probes.



Do not drill into the transmitter enclosure since metal shavings could damage the electronics.

Mechanical Dimensions

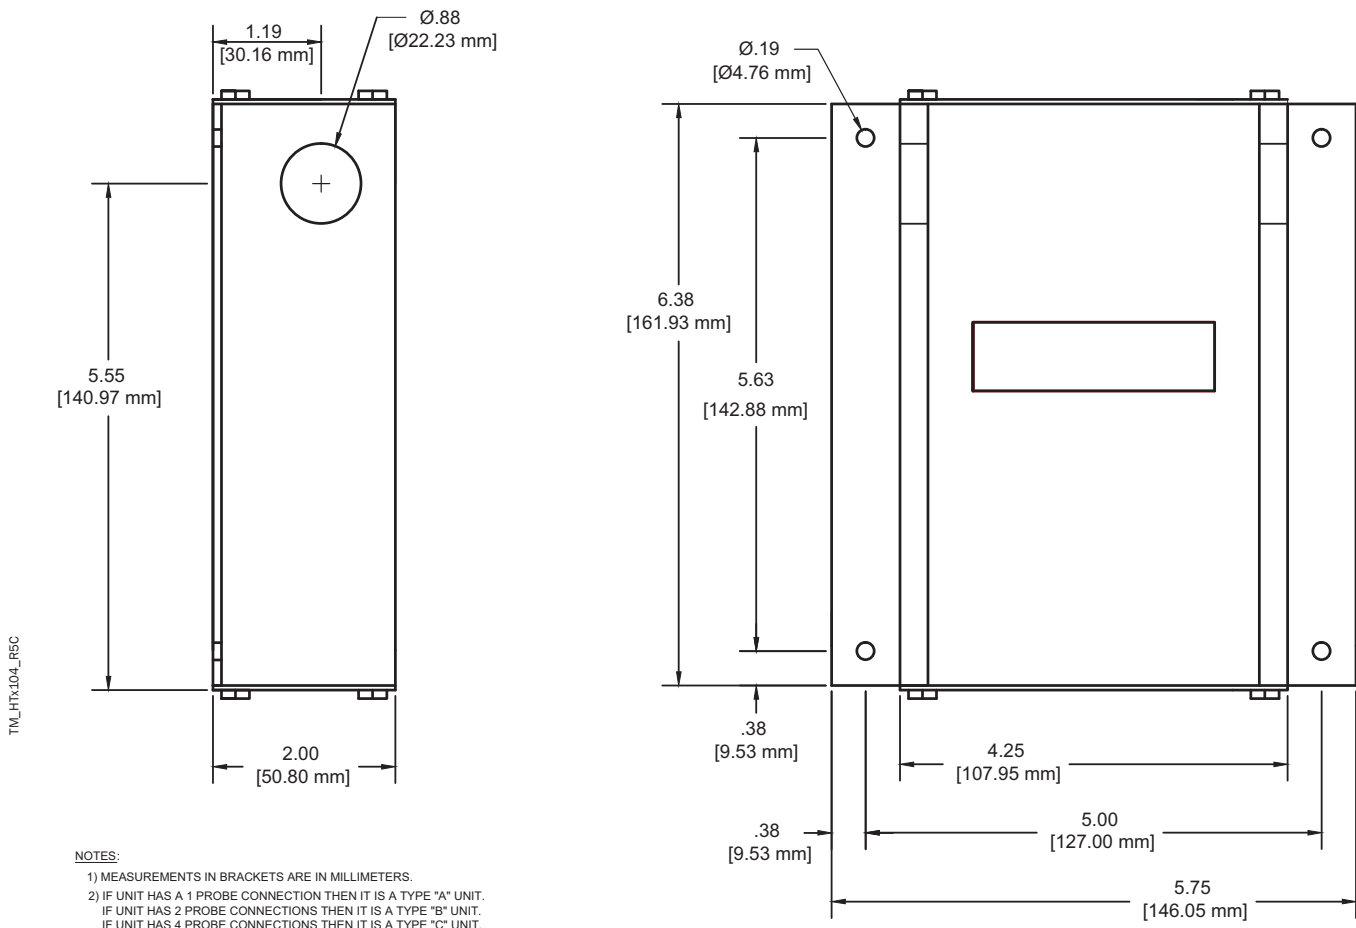


Figure 4. HTx104 Transmitter Mechanical Detail Drawing

Power Transformer Selection

Select a 24 VAC transformer based on the maximum power requirements of the transmitter label (11 VA) or from the values of Table 2. The operating supply voltage (transmitter power “ON” with all sensor probes connected) should not be less than 22.8 VAC or greater than 26.4 VAC.

Table 2. HTx104 Power Transformer Selection Guide

Total Sensors	1	2	3	4
Minimum VA Req.	6	8	9	11

Connecting Power to the Transmitter

Slide the cover plate up and off of the transmitter enclosure, and ensure that the power switch is in the “OFF” position before connecting your 24 VAC power source.

Connect 24 VAC power to the large, two position power input terminal labeled “POWER” on the upper right hand side of the main circuit board (shown in Figure 5). Since the output signals are isolated from the power supply, it is not necessary to provide an isolated (secondary not grounded) power source.

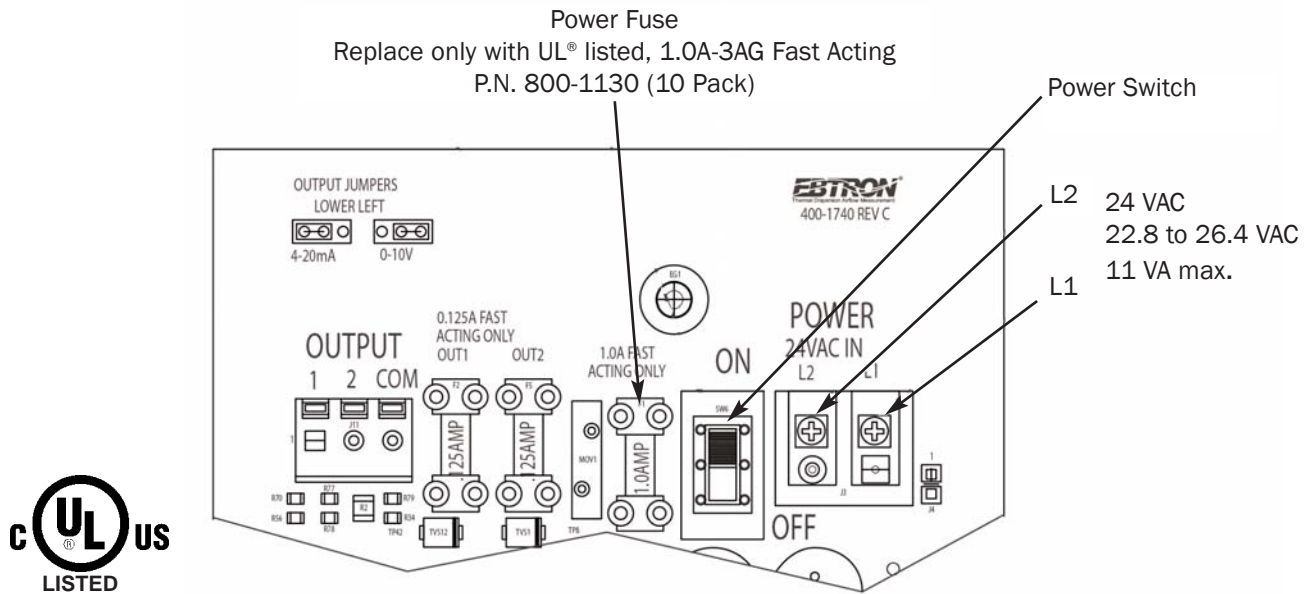


Figure 5. HTx104 Power Connections



Multiple HTx104 transmitters wired to a single transformer must be wired “in-phase” (L1 to L1, L2 to L2).



Sensor probes must be connected to the transmitter before turning the power switch to the “on” position to properly “flash” sensor calibration data to the transmitter.

TM_HTx104_RSA

Connecting Sensor Probes to the Transmitter

After mounting the sensor probes and transmitter, connect the sensor probe cable plugs to the circular receptacles located at the bottom of the HTx104 transmitter enclosure. Probes are "Plug and Play" and do not have to be connected to a specific receptacle on the transmitter, **unless HE1 probes are used**. For HE1 probes with Type B transmitters, connect the probe in the **EX (Exhaust) flow to the left connector**; and the probe in the **OA (Outside) flow to the right connector**. Transmitters accept HP1, HF1, HB1, HT1, HU1 or HE1 sensors. Mixing sensor types on transmitter is not permitted. Match probes to transmitter by type (A, B or C) as indicated on transmitter and probe tags, and as shown in Figure 6.



Provide a "drip loop" at the transmitter if there will be the potential for water runoff or condensation along the sensor probe cable(s).



Sensor probe cable plugs are "keyed" as shown in Figure 7. Line up plug with receptacle and push straight on to receptacle. **DO NOT TWIST**. Squeeze cable plug "ribs" towards receptacle when removing. Forcing the cable plug in or out of the receptacle will damage the connectors and void warranty.

TYPE A TRANSMITTER



Accepts 1 probe up to 4 sensors.

TYPE B TRANSMITTER



Accepts 2 probes up to 2 sensors each.

TYPE C TRANSMITTER



Accepts 4 probes, 1 sensor each.

Figure 6. Type A, Type B and Type C Transmitters

CONNECTING CABLE PROBES TO TRANSMITTER


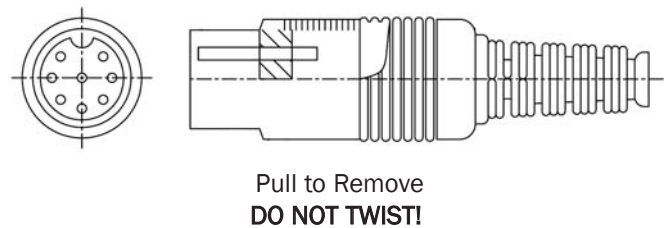


Figure 7. Connector Detail

TM HTx104_R5B

HTA104 Analog Transmitter Set Up

The HTA104 provides independent 12-bit (4096 discrete states) linear analog outputs at OUTPUT 1 and OUTPUT 2. Each output includes overvoltage and overcurrent protection. OUTPUT 1 is always for airflow measurement. For the HTx104-E ERV transmitter, OUTPUT 1 is for the EX airflow measurement, while OUTPUT2 is for the OA airflow measurement. On all other transmitter models, OUTPUT 2 can be programmed as a temperature output or as an alarm output with selectable range and hysteresis. Each analog output can be set to provide either VDC (0-5VDC / 0-10VDC) or mA (4-20 mA). When OUTPUT 2 is programmed as an alarm it can be set to provide either a minimum output (0 VDC when set for VDC operation or 4 mA when set for mA operation) or a maximum output (5VDC when set for VDC operation or 20 mA when set for mA operation) when airflow is outside of a user preset acceptable operating range. An Alarm hysteresis setting is used to establish an acceptable operating range above or below a set point value. Outputs are galvanically and optically isolated from the main power supply to permit simple integration with virtually all building automation systems.

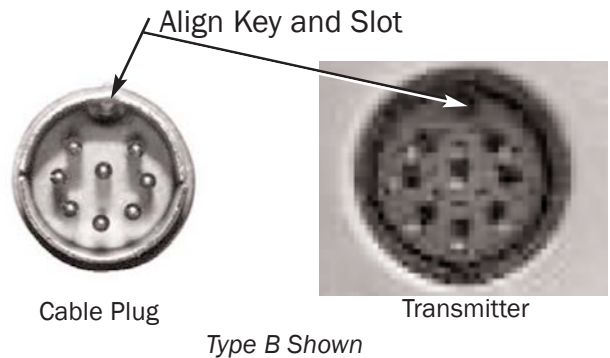

The transmitter is shipped from the factory with the analog output set for 4-20 mA. If the 0-5 VDC or 0-10VDC output is desired, move the corresponding output jumper (OUT1 for airflow, and/or OUT2 for temperature/alarm) to the 0-10VDC position (see Figure 8), and set the "SET OUT1" and/or "SET OUT2" option in the SETUP MENU as shown in Figures 14 through 16.



If OUT1 or OUT2 jumpers for 4-20 mA or 0-5/0-10 VDC are changed, the SETUP menus for OUT1 and OUT2 **MUST also be changed** to agree with the selected mode. Refer to SETUP menus, Figures 14 through 16.



When configured for 4-20 mA output, the HTA104 is a "4-wire" device. The host controls should not provide any excitation voltage to the output of the HTA104.

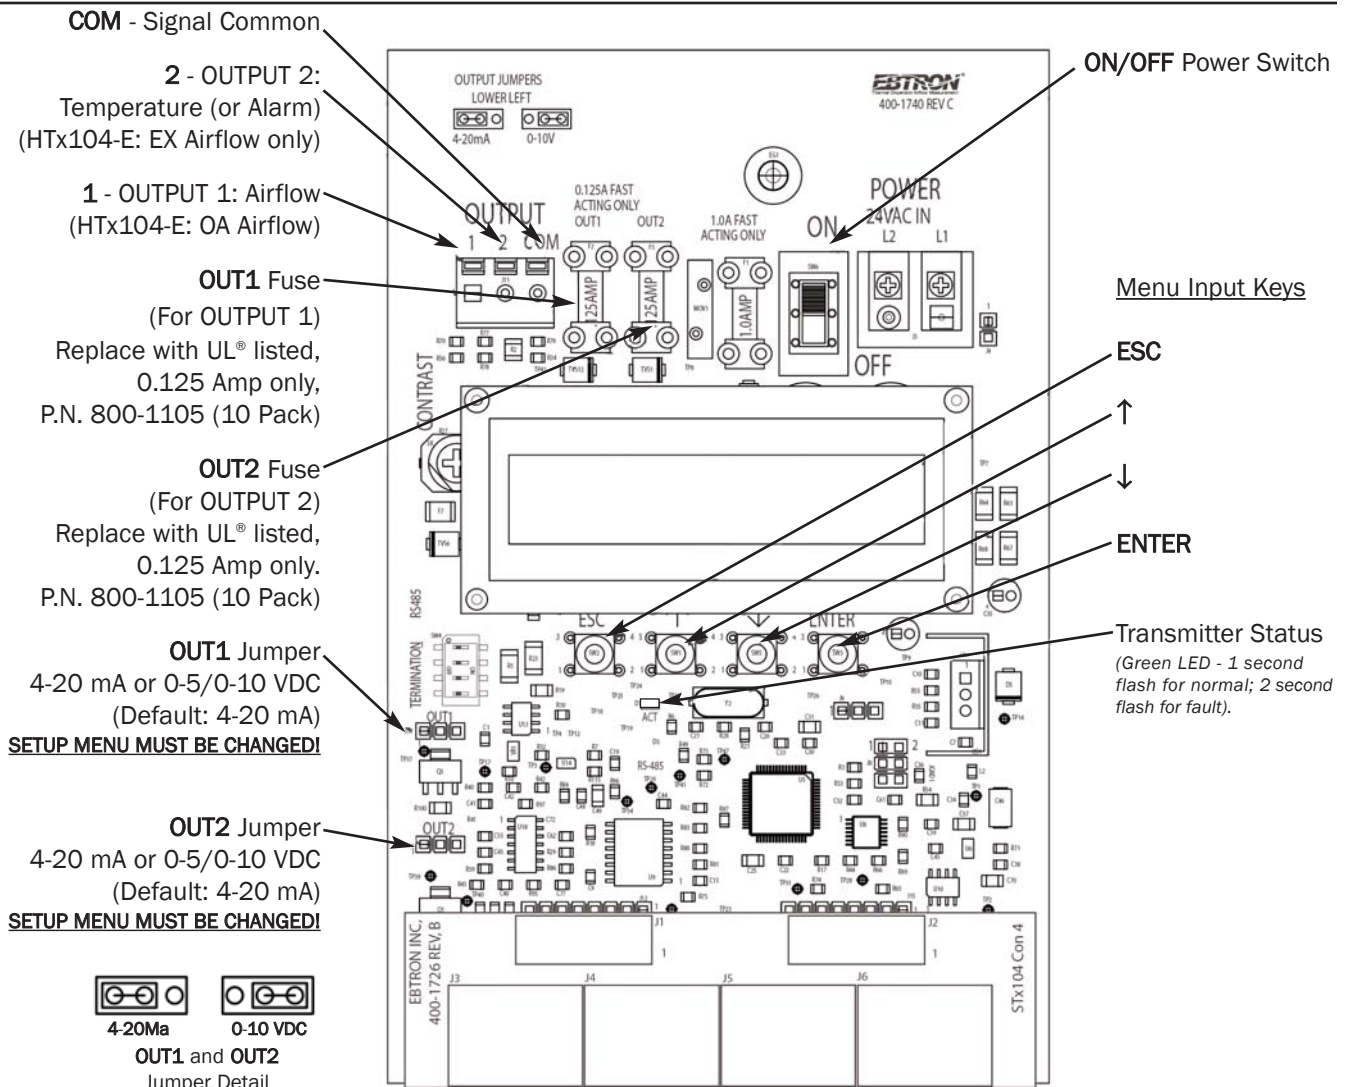


Figure 8. HTA104 Analog Circuit Board Detail

HTA104 Analog Output Wiring

To prevent undesirable interference from other sources, **EBTRON** recommends the use of good quality shielded twisted pair (STP) cabling for analog network communications. Appendix A of this document details HTA104 Analog Wiring. To wire the output signal, slide the cover plate up and off of the enclosure. Ensure that the power switch is in the “OFF” position. Connect signal wires for each analog output at the three position output terminal block labeled “OUTPUT” as indicated in Figure 8 and as shown in the wiring diagram of Appendix A. OUTPUT 1 is at terminal 1; OUTPUT 2 is at terminal 2; and the common connection is at the COM terminal.

HTA104 and HTN104 Alarm Features

HTA104 transmitters (except the HTA104-E) are equipped with a programmable alarm feature at OUTPUT 2 that can be set up to produce an alarm for airflow low limit, high limit or out of range flows or pressure. The alarm output (at OUTPUT 2) can be programmed as an active high or active low signal at the analog output. Or, the alarm can be set to monitor the transmitter and sensor probe status and produce an alarm in the event of a fault condition. Alarm output can be programmed as active high or active low at analog OUTPUT 2. For the HTN-104 the Alarm condition is indicated by the AI object Alarm Status Flag. Set up of the Alarm feature is shown in the HTx104 Set Up Menus of Figures 14 and 15. The Alarm condition is indicated locally as the LCD alternates display of the Alarm type and the present measured value.

HTA104 and HTN104 Alarm Output and Hysteresis

For the HTA-104 (except the HTA104-E), alarm output is enabled by setting “*OUT2 TYP=” to “ALRM” in the setup menu. For the HTN-104, the BACnet AI Object Alarm Status Flag is set in according to the *ALR TYPE= and the related submenu setting values. Refer to the setup menus of Figure 14 and Figure 15 for detail on the alarm menu functions and settings.

The HTA-104 alarm output (*ALRM OUT=) menu can be set as “MAX” for active high (default) or “MIN” for active low when airflow is outside of a defined operating range above or below a defined setpoint. The “MAX” menu option sets the alarm output for 5 VDC/10 VDC or 20 mA output (depending on “OUT2” jumper selection for VDC/ma, and the user setting for 5 VDC/10VDC scale selection). The “MIN” menu option sets the alarm output for 0 VDC or 4 mA output (depending on “OUT2” jumper selection for VDC/ma selection).

An Alarm hysteresis setting is used on both HTA104 and HTN104 to establish the operating range above and below a defined setpoint value. This enables a submenu for setting the desired alarm set point flow value (*ASP=OFPM/MPS). An additional submenu for alarm hysteresis (*ALRM HYS=) prevents alarms within a specified ‘dead band’ (default is 15%) as a percentage of the alarm set point value entered in the prior step.

The alarm feature on HTA104 and HTN104 can be set to monitor sensor probes and transmitter by setting the “*ALR TYP=TRBL” in the setup menu. The alarm is triggered when a fault is detected within the sensor probes or transmitter.

HTA104 - Analog Output Signal Selection, 0-5VDC / 0-10VDC / 4-20mA

The analog output signal type at OUT1 and OUT2 can be set independently for current (mA) or voltage (VDC) output via switches SW1/SW2 (Figure 5) **and** by selecting 4-20mA, 0-5VDC or 0-10VDC ranges in Setup menu options *OUT1= / *OUT2= settings. When changing Setup menu options *OUT1= or *OUT2=, the LCD display provides a user prompt (“SET SW1/SW2 ON BOARD”) to remind user to set SW1 and/or SW2 switches to the proper position. The factory default settings for SW1/SW2 and Setup menu options *OUT1= and *OUT2= are all set for 4-20mA.

Converting the Analog Output Signal from FPM to CFM (MPS to LPS for SI units scaling)

The HTA104 transmitter is shipped from the factory with analog output “OUTPUT 1” set to indicate velocity in FPM. To convert this velocity output to volumetric flow (CFM or LPS), simply multiply the indicated output velocity (FPM or MPS) by the free area at the probe installation location (free area x 1000 for SI units when area is calculated in sq meters). For -P sensors, the total free area is programmed into the probe at the factory and printed on the probe hang tag. For -F, -B and -E sensor probes, area should be determined following installation in accordance with the installation guidelines. Refer to Table 3 for a complete listing of conversions for each of the analog outputs of the HTA104.

NOTE:

The full scale analog output (OUTPUT1) value is determined by the **FS1** setting within the **SETUP MENU**.

HTA104 Analog Output Scaling

EBTRON's Hybrid Series sensors are individually calibrated in wind tunnels traceable to the National Institute of Standards and Technology (-T probes calibrated to volumetric flow standards) between 0 and factory default full scale. All sensors are independent and produce “percent of reading” accuracy. Decreasing the full scale does not alter or improve the accuracy of the device. Factory default output scaling for analog output HTA104 transmitters can be changed by entering the setup menu (as shown in Figures 14 through 16).

EBTRON, Inc. 1663 Hwy. 701 S., Loris SC 29569 • Toll Free: 800.2EBTRON (232.8766) • Fax: 843.756.1838 • Internet: EBTRON.com

Table 3. HTA104 Analog Output Conversions

When OUTPUT 1 is Configured as Linear Airflow (FPM, MPS):

TO CONVERT TO	ANALOG OUTPUT SCALING AND TYPE		
	0-10 VDC	0-5 VDC ¹	4-20 mA
Unidirectional Airflow (FPM, MPS)	Output Voltage/10 x FS1	Output Voltage/5 x FS1	(Output Current-4)/16 x FS1
Unidirectional Airflow (CFM)	Area (SQF) x Output/10 x FS1	Area (SQF) x Output/5 x FS1	Area (SQF) x (Output - 4)/16 x FS1
Unidirectional Airflow (LPS)	Area (SQM) x Output/10 x FS1 x 1000	Area (SQM) x Output/5 x FS1 x 1000	Area (SQM) x (Output - 4)/16 x FS1 x 1000
Bidirectional Airflow (FPM,MPS) (-B only)	(Output Voltage - 5)/5 x FS1	(Output Voltage - 2.5)/2.5 x FS1	(Output Current - 12)/8 x FS1
Bidirectional Airflow (CFM) (-B only)	$K_v \times (\text{Output Voltage} - 5)/5 \times \text{FS1}$ <i>K is determined by field measurement or from K tables in Bleed Sensor Technical Manual, TM_HB1/SB1.</i>	$K_v \times (\text{Output Voltage} - 2.5)/2.5 \times \text{FS1}$ <i>K is determined by field measurement or from K tables in Bleed Sensor Technical Manual, TM_HB1/SB1.</i>	$K_v \times (\text{Output Current} - 12)/8 \times \text{FS1}$ <i>K is determined by field measurement or from K tables in Bleed Sensor Technical Manual, TM_HB1/SB1.</i>
Bidirectional Airflow (LPS) (-B only)			

When OUTPUT 1 is Configured as Volumetric Airflow (CFM, LPS):

TO CONVERT TO	ANALOG OUTPUT SCALING AND TYPE		
	0-10 VDC	0-5 VDC ¹	4-20 mA
Unidirectional Airflow (CFM, LPS)	Output Voltage/10 x FS1	Output Voltage/5 x FS1	(Output Current - 4)/16 x FS1
Bidirectional Airflow (CFM, LPS) (-B only)	(Output Voltage - 5)/5 x FS1	(Output Voltage - 2.5)/2.5 x FS1	(Output Current - 12)/8 x FS1

When OUTPUT 1 is Configured as Pressure (iWC, PA):

TO CONVERT TO	ANALOG OUTPUT SCALING AND TYPE		
	0-10 VDC	0-5 VDC ¹	4-20 mA
Unidirectional Pressure (iWC, PA)	Output Voltage/10 x FS1	Output Voltage/5 x FS1	(Output Current - 4)/16 x FS1
Bidirectional Pressure (iWC, PA)	(Output Voltage - 5)/5 x FS1	(Output Voltage - 2.5)/2.5 x FS1	(Output Current - 12)/8 x FS1

When OUTPUT 2 is Configured as Temperature (°F, °C):

TO CONVERT TO	ANALOG OUTPUT SCALING AND TYPE		
	0-10 VDC	0-5 VDC ¹	4-20 mA
Temp (°F, °C)	Output Voltage/10 x (FS2 - MS2) + MS2	Output Voltage/5 x (FS2 - MS2) + MS2	(Output Current - 4)/16 x (FS2 - MS2) + MS2

NOTES:

¹ 0-5 VDC analog output option introduced in firmware version 1.07 and later.

FS1 is OUTPUT1 full scale analog output value from SETUP MENU.

FS2 is OUTPUT2 full scale analog output value from SETUP MENU.

MS2 is OUTPUT2 minimum scale analog output value from SETUP MENU.

Sending a Test Output Signal to the Host Control System

A test output signal between 0 and 100% of the selected full scale output (0-5 VDC¹/0-10VDC or 4 to 20 mA) can be provided by the HTA104 transmitter to verify proper conversion of the output signals from the HTA104 transmitter at the host control system. To set a fixed output signal for airflow and temperature, simultaneously press and release the “ENTER” and “ESC” buttons within 10 seconds of power up. Use the “DOWN” arrow button until “*TESTOUT=0%” is displayed. Press the “ENTER” button and use the “UP” and “DOWN” arrow buttons to select an output between 0 and 100% of the full scale. Press the “ENTER” button to set the output percentage. Press the “ESC” button when verification is complete to return to the normal operating mode.

HTN104 RS-485 Transmitter Set Up

The HTN104 (Figure 9) features field selectable firmware menu options for address and protocol selection, and a termination DIP switch for line termination selection to integrate with various network topologies. An advanced differential bus/line transceiver designed to meet RS-485 standards for multipoint data transmission provides protection for over-current and over-voltage bus contention/wiring faults, as well as automatic thermal shutdown protection.

Network Cable Specifications

The RS-485 network cable shall be shielded twisted pair with a characteristic impedance of 100 to 130 ohms. Distributed capacitance between conductors shall be less than 100 pF per meter. Distributed capacitance between conductors and shield shall be less than 200 pF per meter. The maximum recommended length of a network segment is 1200 meters with AWG 18 cable.

HTN104 RS-485 Output Network Connections

The HTN104 RS-485 network circuitry is isolated from the 24VAC power and “floats” with respect to ground by default. This allows for the HTN104 to be interfaced with both isolated and non-isolated networks. To wire the output signal, slide the cover plate up and off of the enclosure. Ensure that the power switch is in the “OFF” position. Determine whether the RS485 network requires an isolated or non-isolated interface to the HTN104, and connect cables as outlined in the appropriate paragraph that follows. Refer to wiring diagram of Appendix B. Pay particular attention to the network common connection and termination DIP switch requirements for each type of connection. Connections are made at the three position terminal block labeled “OUTPUT” on the upper left side of the main circuit board as shown in Figure 9 and the wiring diagram of Appendix B.

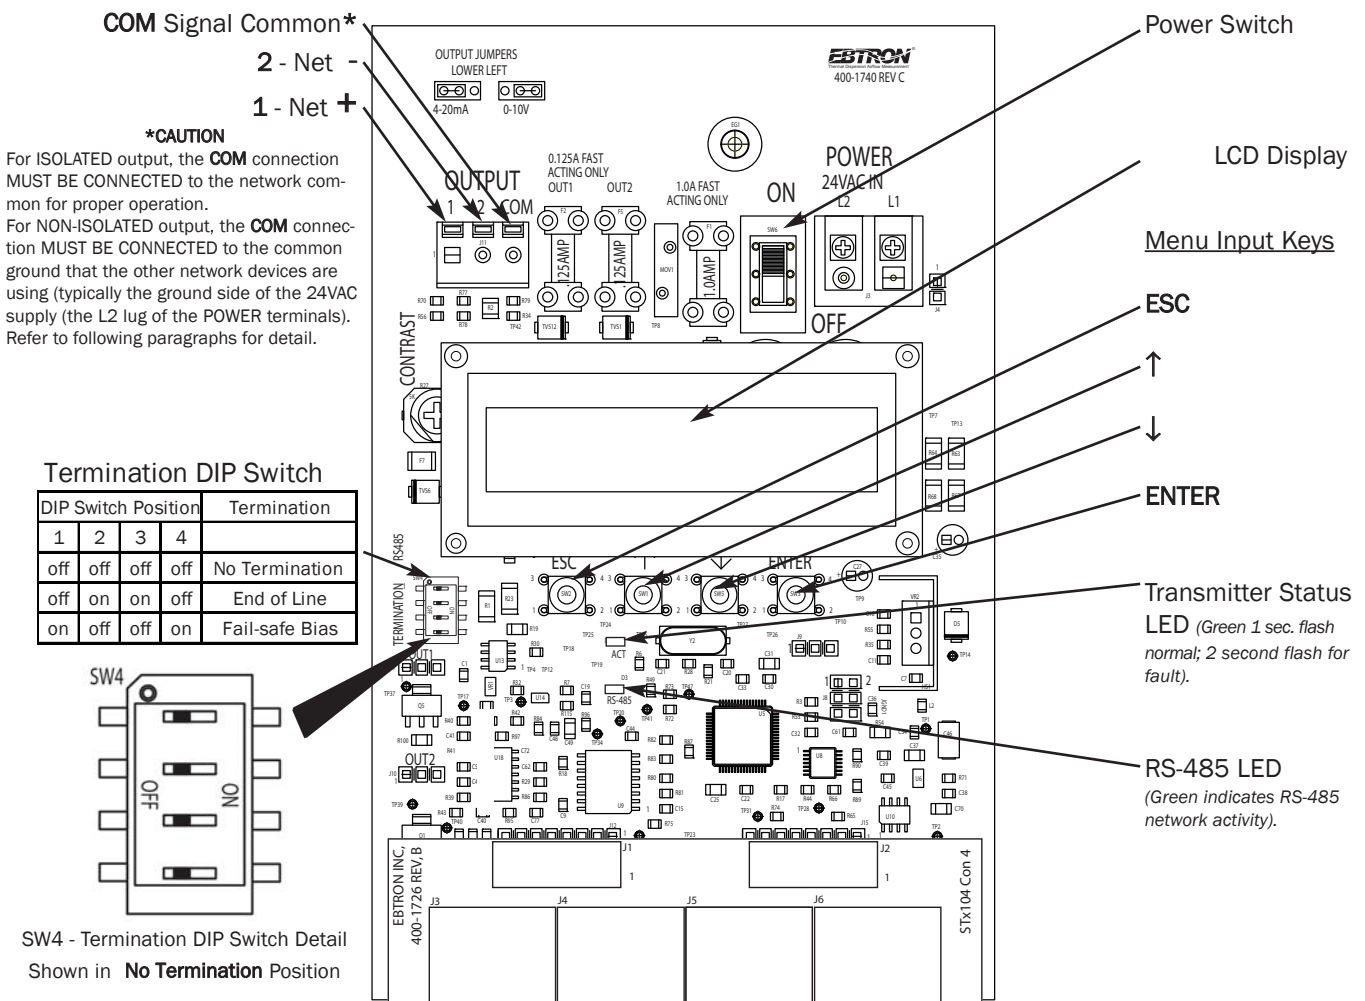


Figure 9. HTN104 RS-485 Transmitter Circuit Board Detail

Connecting to an Isolated RS-485 Network:

Connect the NET+, NET- and COM terminals to the network with shielded twisted pair cable meeting the specifications defined in the previous paragraph (typically using two pairs, with one wire not used; one pair for +/- and both wires in other pair for GND when using 2-pair cable). The connection to the network must be made in a "daisy chain" configuration. "T" connections and stubs are NOT permitted. The shield should be terminated at one end on the network only. If the HTN104 is not the first or last device, set the on-board termination DIP switches for NO TERMINATION. If the HTN104 is the first or last device, set the on-board termination DIP switches to either END OF LINE or FAIL SAFE BIAS termination.



***CAUTION**

For ISOLATED output, the **COM** connection MUST BE CONNECTED to the network common for proper operation.

Connecting to a Non-Isolated RS-485 Network:

Connect the NET+ and NET- terminals to the network with a shielded twisted pair cable meeting the specifications defined in the previous paragraph. The connection to the network must be made in a "daisy chain" configuration. No "T" connections or stubs are permitted. The shield should be terminated at one end on the network only. If the HTN104 is not the first or last device, set the on-board termination DIP switches for NO TERMINATION. If the HTN104 is the first or last device, set the on-board termination DIP switches to either END OF LINE or FAIL SAFE BIAS termination. Because the HTN104 output is isolated, the COM terminal must be connected to the "common ground" that the other devices on the network are using as their ground reference. This is typically the ground side of the 24VAC supply (L2 on the HTN104 POWER terminals).



***CAUTION**

For NON-ISOLATED output, the **COM** connection MUST BE CONNECTED to the common ground that is used by the other network devices (typically the ground side of the 24VAC supply; the L2 terminal at the POWER connector block as shown in Figure 9).

HTN104 Setting Network Options

The transmitter must be configured for proper protocol address and termination prior to power up. The transmitter is shipped from the factory with the protocol set to the BACnet® MS/TP Master, **address 1** and **no termination**. (Termination DIP switch is located on the circuit card - see Figure 9.) Figure 10 details the COMM Setup Menu options.

HTN104 Setting the Network Protocol

Transmitter protocol can be changed in the field using the COMM setup menu (Figure 10). Tables 4 through 6 list the specific features of each protocol.

HTN104 Setting the Transmitter Address

Each transmitter must be assigned a **unique** address between 1 and 255 (127 BACnet®) prior to power up by setting the address in the COMM setup menu (Figure 10).

HTN104 Setting the Transmitter Termination

A termination resistor (typically 120 ohms) should be installed at each end of the bus between the NET+ and NET- (A and B) communication lines. The **EBTRON** transmitter provides the ability to select standard (120 ohm) or "fail-safe" termination whenever the device is installed at either end of the bus. When an **EBTRON** device is not installed at the end of the bus, the termination for that device should be disabled. The "fail-safe" termination will guarantee that the bus is in a known state during idle-line conditions (when no device is driving the bus). **EBTRON** recommends "fail-safe" termination at one end of the bus. Transmitter termination is selected by setting the DIP switch labeled "TERMINATION" (Figure 9) on the circuit card. Termination options are "No Termination", "End of Line" or "Fail-safe Bias" (recommended at one end of the bus).

Navigating through the COMM Setup Menu (all System of Units)

Press and release ↑/↓ during normal operation to select

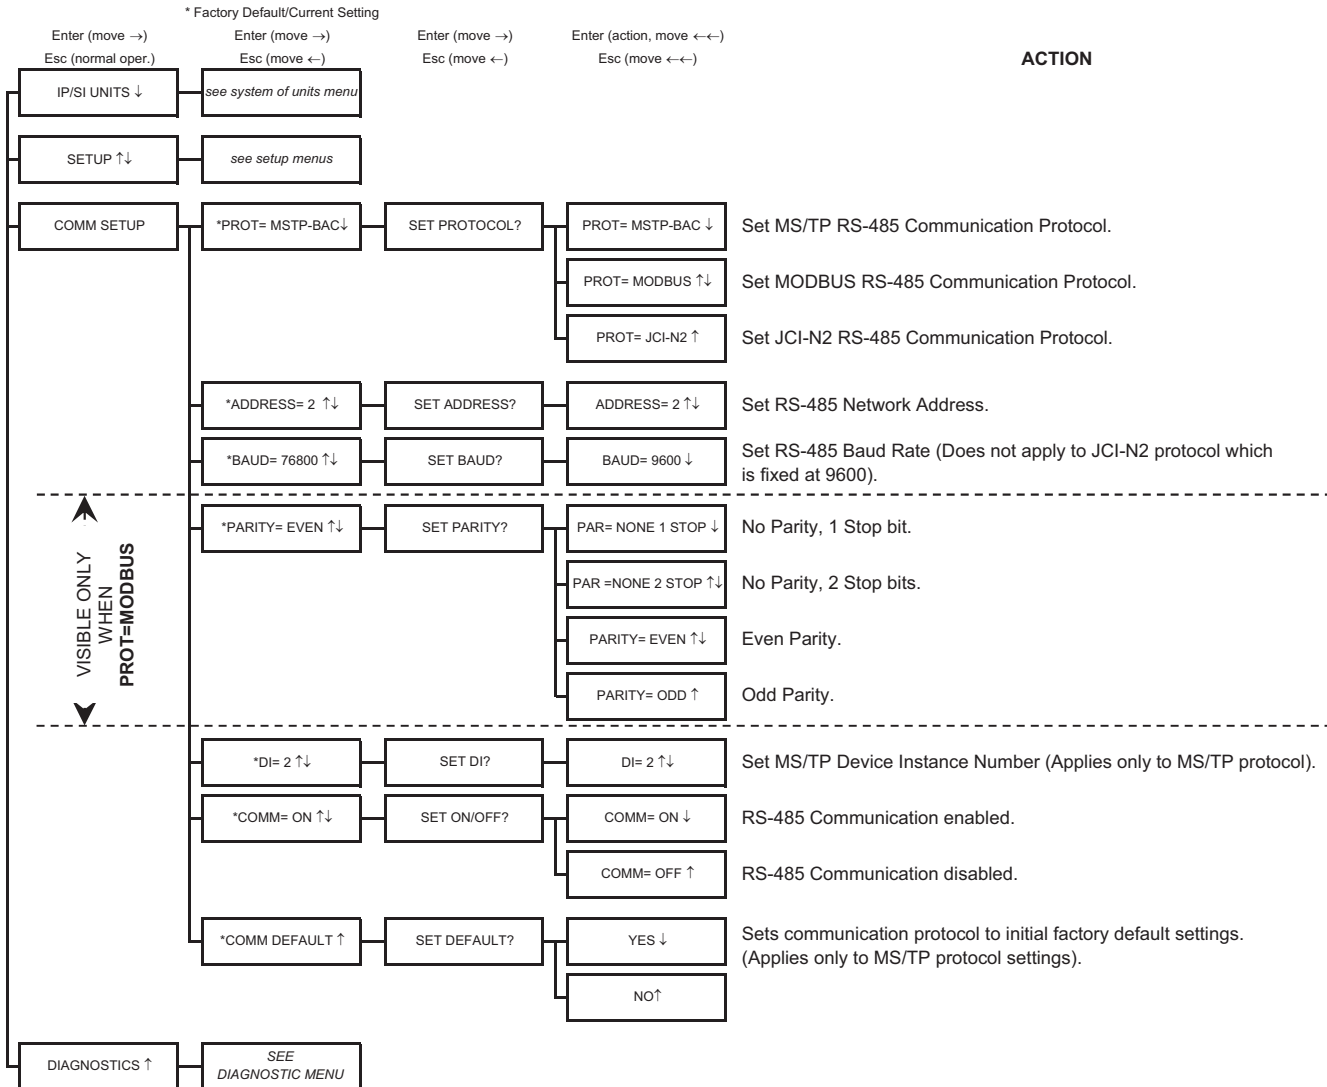


Figure 10. COMM (Communications) Setup Menu

TM_HTx104_R5A

Table 4. HTN104 RS-485 BACnet Object List



OBJECTS (For all probes EXCEPT HE1)

Baud Rates: 9.6, 19.2, 38.4, 76.8 Kbps

Type, Instance	Description	Default Units
Device, 1	Device Object	
Analog Input, 1	Airflow	FPM
Analog Input, 2	Differential Pressure	in.w.c.
Analog Input, 3	Temperature	deg F
Analog Value, 1	Area	sq.ft.
Analog Value, 2	Baud Rate	None
Analog Value, 3	Airflow Traverse	FPM
Analog Value, 4	Temp Traverse	°F

OBJECTS (For HE1 Probes ONLY)

Baud Rates: 9.6, 19.2, 38.4, 76.8 Kbps

Type, Instance	Description	Default Units
Device, 1	Device Object	
Analog Input, 1	Airflow 1	FPM
Analog Input, 2	Airflow 2	FPM
Analog Input, 3	Temperature 1	deg F
Analog Input, 4	Temperature 2	deg F
Analog Value, 1	Area 1	sq.ft.
Analog Value, 2	Baud Rate	None
Analog Value, 3	Area 2	sq.ft.

User Executed Services Supported: **Subscribe COV, Read Property, Write Property, Device Communication Control, Who-Is**

Table 5. HTN104 RS-485 Modbus Register Map

Baud Rates: 9.6, 19.2, 38.4, 76.8 Kbps

Modbus
Modbus RTU

For MODBUS, default communication is 8 Data Bits, 1 Stop Bit and No Parity and can be changed changed in the COMM SETUP menu.

Function	IEEE Floating Point		Binary	Length	Units	Point Description	Range/Value
	low/high word	high/low word					
02			10001	1		Status	0:OK, 1:Trbl.
04	30001	30009		2	FPM	Flow 1	0 to 15,000
04	30003	30011		2	in. w.c. or FPM	Pressure or Flow 2	-2.5 to +2.5 or 0 to 15,000
04	30005	30013		2	°F	Temp 1	-20 to +160
04	30007	30015		2	°F	Temp 2	-20 to +160
04			30017	1		Sensor Type	1 = Probe 2 = Bleed 3 = ERV 255 = Fan
04			30018	1		Connector C1 Sensors	0 to 4
04			30019	1		Connector C2 Sensors	0 to 4
04			30020	1		Connector C3 Sensors	0 to 4
04			30021	1		Connector C4 Sensors	0 to 4
04	30022	30038		2	FPM	Insert 1 Flow	0 to 15,000
04	30028	30044		2	FPM	Insert 4 Flow	0 to 15,000
04	30030	30046		2	°F	Insert 1 Temp	-20 to +160
04	30036	30052		2	°F	Insert 4 Temp	-20 to +160
06			40201	1		Modbus Baud Rate	0=9,600 1=19,200

Table 6. HTN104 RS-485 JCI N2®-Bus Point Map



JCI® N2-Bus®

POINT MAP (For all probes EXCEPT HE1)

Baud Rate: 9600 bps

NPT ¹	NPA ²	Units	Point Description	Range/Value
AI	1	FPM	Flow 1	0 to 15,000
AI	2	in.w.c.	Differential Pressure	-2.5 to +2.5
AI	3	°F	Temperature 1	-20 to +160
BI	1		Status	0:OK, 1:Trbl.

POINT MAP (For HE1 Probes ONLY)

Baud Rate: 9600 bps

NPT ¹	NPA ²	Units	Point Description	Range/Value
AI	1	FPM	Flow 1	0 to 15,000
AI	2	FPM	Flow 2	0 to 15,000
AI	3	°F	Temperature 1	-20 to +160
AI	4	°F	Temperature 2	-20 to +160
BI	1		Status	0:OK, 1:Trbl.

¹Network Point Type

²Network Point Address

¹Network Point Type

²Network Point Address

HTx104 TRANSMITTER START UP

To ensure a successful start-up, verify that the airflow measuring station probes and transmitter are installed in accordance to **EBTRON** guidelines.



Check the physical installation, power connections and model specific signal wiring prior to turning the power switch to the “on” position.

Move the power switch to the “ON” position. The transmitter executes a complete self-check each time the power is turned on that takes 10 seconds to complete. Check that the readings at the host control system return an output that matches the output of the HTx104.

The HTA104 is designed to operate on “POWER-UP”. Default output signals are set to 4-20 mA. No field configuration is necessary unless the output signal required is 0-5 VDC¹ or 0-10 VDC. The HTN104 must be properly wired and configured based on the system network protocol. Review the previous section titled HTN104 RS-485 Transmitter Set Up or contact **EBTRON** Customer Service, toll free, at 800-232-8766.

Transmitter Initialization

The HTx104 Transmitter automatically initializes at power-up and conducts full system diagnostics. Under normal conditions, there should be no reason to enter the *Initialization Mode*. To enter the *Initialization Mode*, simultaneously press and release the “ENTER” and “ESC” buttons during the first 10 seconds after the transmitter power-up delay (indicated by “-----”) is completed. Navigate through the menu as shown in Figure 11.

Press and release Enter and Escape during first 10 seconds of operation to select

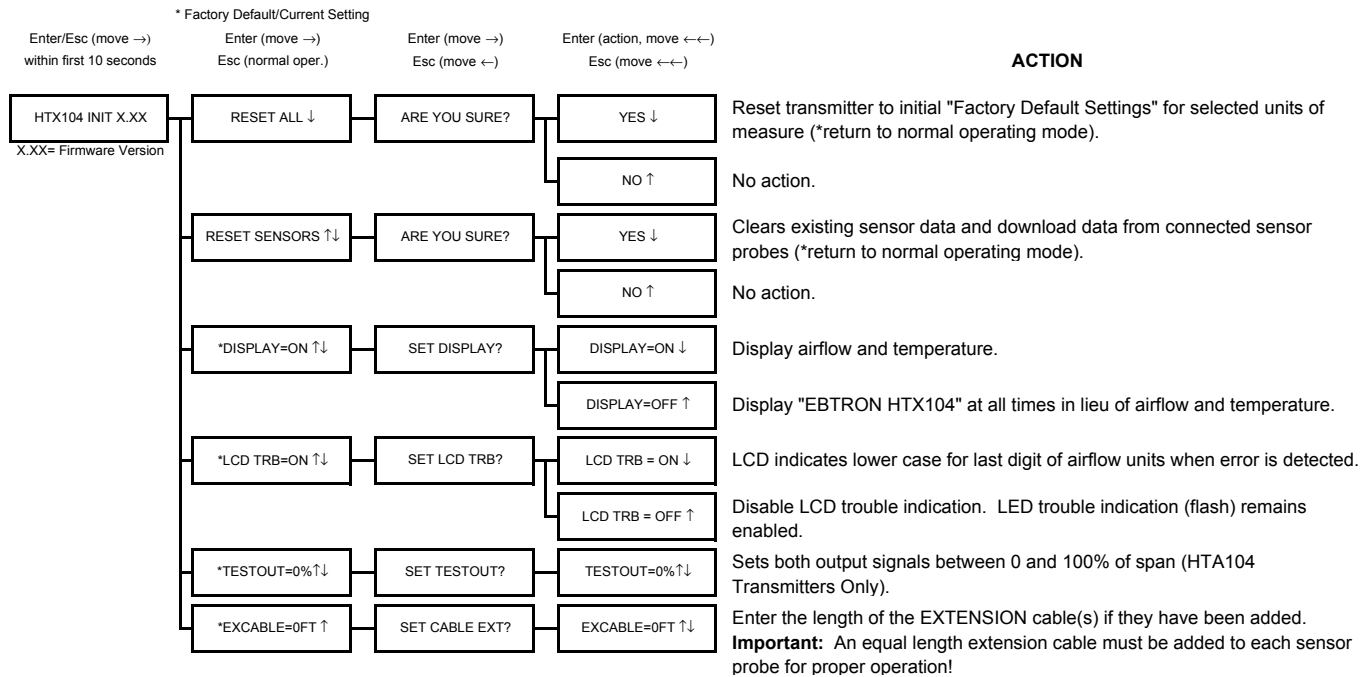


Figure 11. Transmitter Initialization Menu

Changing the System of Units

Figure 12 details the System of Units menu. The HTx104 transmitter is shipped with the system of units set to US inch-pound units (IP). The LCD will display units of measure as shown in the IP column of Table 7. To change to standard international (SI) units, simultaneously press and release the “UP” and “DOWN” arrow pushbuttons during normal operation to engage the System of Units menu. “IP/SI UNITS” will be indicated on the LCD display. Press “ENTER” three times (to move to the right as shown in Figure 12), and then use the “UP” and “DOWN” arrow buttons to select the system of units desired. Press the “ENTER” button to save the changes, and then press “ESC” twice (to move to the left as shown in Figure 12) and return to normal operation. Note that the Setup Menus of Figures 14 through 16 are shown in IP System Of Units. When SI System of Units is selected, the units of measure abbreviations used in the menus change as shown in the SI column of Table 7.

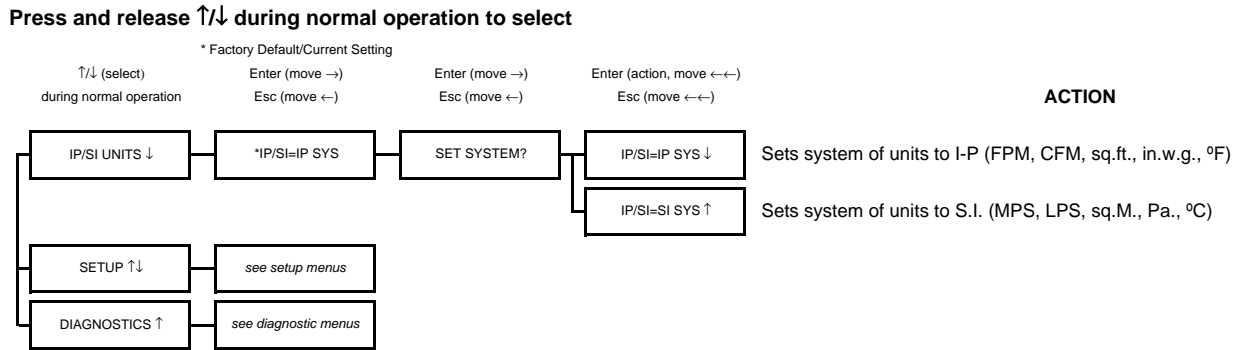


Figure 12. System of Units Menu

Table 7. Standard “IP” and “SI” Menu System of Units Abbreviations

“IP” System of Units LCD Display	Description	“SI” System of Units LCD Display	Description
FPM	Feet per minute	MPS	Meters per second
CFM	Cubic feet per minute	LPS	Liters per second
SQF	Square feet	SQM	Square meters
iWc	Inches H ₂ O (Water column)	Pa	Pascals
F	Fahrenheit	C	Celsius

HTx104 LCD Display Notifications

Following a brief initialization at power up, the LCD display automatically displays airflow and temperature as all upper case (caps) characters. The LCD also provides additional information on system status and alarm conditions as follows:

Last LCD Character Shown in Lower Case (Probe Malfunction)

If the last character of the flow rate units on the LCD display is shown in lower case (for example **Fpm** or **Cfm**), this indicates an improper or malfunctioning probe is connected to the transmitter. (See Tables 9 through 11 for additional troubleshooting detail).

All LCD Characters Shown in Lower Case(Field Cal Wizard Engaged)

If all characters of the flow rate units on the LCD display are in lower case (for example **fp**m or **cf**m), this indicates that the transmitter is operating in the Field Calibration Wizard mode (see the FIELD ADJUSTMENTS - Field Calibration Wizard section of this manual).

LCD Blinks ** LOW ALARM **, ** HIGH ALARM ** or ** TRBL ALARM **

The LCD will alternately flash to indicate an active alarm condition for the type of alarm that has been set. The LCD will display airflow/temperature readings in between these alarm notifications. Alarm notifications will cease when the alarm is cleared. For additional alarm information, refer to the previous **HTA104 Alarm Output Features** section of this document.

LCD Display when using HE1 ERV Probes

Following a brief initialization at power up, the LCD display automatically displays airflow and temperature when duct/plenum probes (HP1, HT1 or HU1), fan inlet probes (HF1) or bleed sensors (HB1) have been connected. When equipped with ERV probes (HE1), the HTx104 automatically cycles through and displays airflow and temperature of each ERV probe. A HOLD feature in the ERV firmware permits the user to hold the display at a particular probe at any time simply by depressing any of the Menu Item Keys (ESC, ↑, ↓, or ENTER - see Figure 5). The display will also indicate the letter “H” on the far right side of the display when it is in this hold state. To resume normal cycling through the probe readings, simply depress any key once again. Refer to the menus and descriptions which appear in the separate HTx104 Transmitter Technical Manual for complete Setup menu description and programming features.

HTx104 Factory Default Settings

The HTx104 transmitter is “plug and play”, ready for operation out of the box and does not require additional setup unless a network option is selected that requires configuration. Table 8 shows the factory default settings for all compatible sensor probes. To change the Factory Default Settings, refer to the **CHANGING FACTORY DEFAULT SETTINGS** section of the document.

Factory Defaults for HP1 (-P), HF1 (-F), HB1 (-B), HT1 (-T), HU1 (-U) and HE1 (-E) Sensor Probes

Table 8. Factory Default Menu Settings

Display	Sensor Type	Description	IP Units Display	SI Units Display
*LCD1 U/M=	ALL	Airflow units of measure	FPM	MPS
*AR1=	-P, -F, -T, -U and -E	Free area where station is located	0.00 SQF	0.000 SQM
*K _v =	-B	Output 1 K _v factor for Airflow	0.00	0.000
*K _p =	-B	Output 1 K _p factor for Pressure	1.000	1.000
*DIRECTION=	-B	Output 1 Polarity	BI (bidirectional)	BI (bidirectional)
*OUT1=	ALL	HTA104 output 1 signal (airflow) [or pressure on -B]	4-20mA	4-20mA
*OUT 1 U/M=	-B	Output 1 units of measure	FPM	MPS
*FS1=	-P and -T Probes	HTA104 output 1 signal full scale	5,000 FPM	25 MPS
	-F Fan Inlets		10,000 FPM	50 MPS
	-B Bleed Sensors		3,000 FPM	15 MPS
	-U Universal Probe		1,500 FPM	10 MPS
	-E ERV Sensors		5,000 FPM	25 MPS
*LL1=	-P, -F, -T, -U and -E	HTA104 low limit cutoff	0 FPM	0 MPS
	-B (airflow)		0 FPM	0 MPS
	-B (pressure)		0 Wc	0 Pa
*OFF-GAIN1=	ALL	Output 1 Offset-Gain On/Off	Off	Off
*GAIN1=	ALL	Output 1 Gain factor	1.000	1.000
*OFFSET1=	ALL	Output 1 Offset factor	0.000 FPM	0.000 MPS
*O-G1MODE=	ALL	Output 1 Offset-Gain Mode	1 (direct entry)	1 (direct entry)
*FILTER1=	ALL	Output 1 Digital Noise Filter	0 (off)	0 (off)
*OUT2METH=	-P, -F, T and -U	Temperature Averaging	Arithmetic Avg.	Arithmetic Avg.
*OUT2=	ALL	HTA104 output 2 signal (temperature)	4-20mA	4-20mA
*MS2=	ALL	HTA104 output 2 signal minimum scale	-20° F	-30° C
*FS2=	ALL	HTA104 output 2 signal full scale	160° F	70° C
*FLOW BUF=	ALL	Number of flow calculations to be averaged	30	30
*ALT=	ALL	Altitude for flow correction	0 ft	0 m
*AR2=	-E	Free area where station is located	0.00 SQF	0.000 SQM
*FS2=	-E	HTA104 output 2 signal full scale	5,000 FPM	25 MPS
*LL2=	-E	HTA104 low limit cutoff	0 FPM	0 MPS
*OFF-GAIN2=	-E	Output 2 Offset-Gain On/Off	Off	Off
*O-G2MODE=	-E	Output 2 Offset-Gain Mode	1 (direct entry)	1 (direct entry)
*GAIN2=	-E	Output 2 Gain factor	1.000	1.000
*OFFSET2=	-E	Output 2 Offset factor	0.000 FPM	0.000 MPS
*FILTER2=	-E	Output 2 Digital Noise Filter	0 (off)	0 (off)
*OUT2 TYP =	ALL	Output 2 Type: Temperature/Alarm	TEMP	TEMP
*ALRM TYP =	ALL	HTA104 Alarm Type: OFF: Alarm feature is disabled. DEADB: Deadband Alarm is active outside of the range established by the Alarm set point (*ASP) and (*ALRM HYS) hysteresis settings. HI: High limit Alarm is active above the value set by Alarm set point (*ASP). LO: Low limit Alarm is active below the value set by Alarm set point (*ASP). TRBL: Alarm is active when fault is detected in transmitter or sensor probes.	OFF	OFF
*ASP =	ALL	Alarm Set Point: Flow rate set point to activate Alarm; (see *ALRM HYS for alarm range)	0 FPM	0 MPS
*ALRM HYS =	ALL	Alarm Hysteresis: Range in % of set point value (*ASP) where alarm is triggered.	15%	15%
*ALRM DEL =	ALL	HTA104 Alarm Delay: Time in seconds that monitored fault condition must exist before alarm is activated.	5s	5s
ALRM OUT =	ALL	Alarm output type: Active MAX or MIN MAX= (5VDC/10VDC or 20mA) or MIN= (0VDC or 4mA*) *Determined by OUT1/OUT2 jumpers and SETUP Menu settings.	MAX	MAX

TM_HTX104_R5B

TRANSMITTER CALIBRATION

The HTx104 uses high quality industrial grade components and is designed for years of trouble-free operation. Periodic recalibration of the transmitter is neither required nor recommended. Transmitter field calibration verifiers are available for purchase from **EBTRON** for installations requiring periodic validation of instrumentation. Contact **EBTRON** for additional information.

CHANGING FACTORY DEFAULT SETTINGS

Setup Menu Options

The HTx104 Transmitter is setup and tested at the factory, and is fully operational when sensor probes are connected and power is applied by turning the power switch to the “ON” position. The transmitter automatically determines the type of sensors connected and defaults to predetermined factory settings. Factory settings can easily be changed in the field through the Main Menu, selected by simultaneously pressing and releasing the “UP” and “DOWN” buttons while the transmitter is in its normal operating mode (see Figures 14 through 16 for a detailed flow chart of the setup menus for each system of units selected and for each type of probe). The *Setup Menu* for the corresponding sensor probe connected (-P, -F, -B, -E, -T or -U) will automatically be displayed in the *Setup Menu*. Navigate through the menu using the *Setup Menu* flow chart (Figures 14 through 16) to make changes to the transmitter configuration. The settings take effect immediately. The following are common field changes to the factory default settings.

Changing the LCD Display from Velocity FPM to Volumetric Flow CFM (MPS to LPS for SI units)

The HTx104 transmitter is shipped from the factory to display velocity in FPM (or MPS) and therefore, transmitter to sensor probe matching is not required. To change the HTx104 to display volumetric flow, (CFM or LPS) enter the *Setup Menu* and change the menu item “*LCD1U/M=FPM” to “*LCD1U/M=CFM” (“*LCD U/M = MPS” to “*LCD U/M = LPS” for SI units). Since this will now be a volumetric value, the free area of the airflow measurement probe location in square feet (square meters for SI units) **must** also be entered. For -P units, the free area is printed on the hang-tag of each sensor probe. For -F, -B and -E units, the free area must be determined following probe installation in accordance with the installation guidelines. Changing the display units will not affect the analog output signal from the transmitter. To convert the analog output readings from the transmitter, refer to the following paragraph.

Locking the Configuration Settings

Using the *Lock Menu*, transmitter configuration settings can be secured by entering a user defined lock code from 1 to 9999. Once locked, user defined settings can only be altered after the defined lock code is entered in the *Initialization, IP/SI Units or Setup Menus*. To enter the *Lock Menu*, press the “ESCAPE” and “UP” arrow simultaneously at any time. To enable, the *Lock Menu* requires a code to be entered, and then verified. Figure 13 details the Lock menu.



When LOCK is enabled, user defined settings can only be changed after entering the user defined LOCK CODE. STORE THE LOCK CODE IN A SAFE LOCATION! To ensure security, lock codes can only be disabled by returning the transmitter to **EBTRON**.

Press and release Escape/↑ during normal operation to select

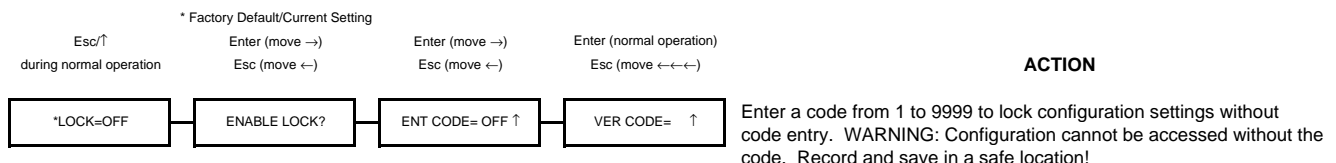


Figure 13. Factory Default Lock Menu Settings

Setup Menu Options: -P, -F, -T and -U Sensor Systems (IP/SI Units Set for "IP SYS") Part 1 of 2

(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select


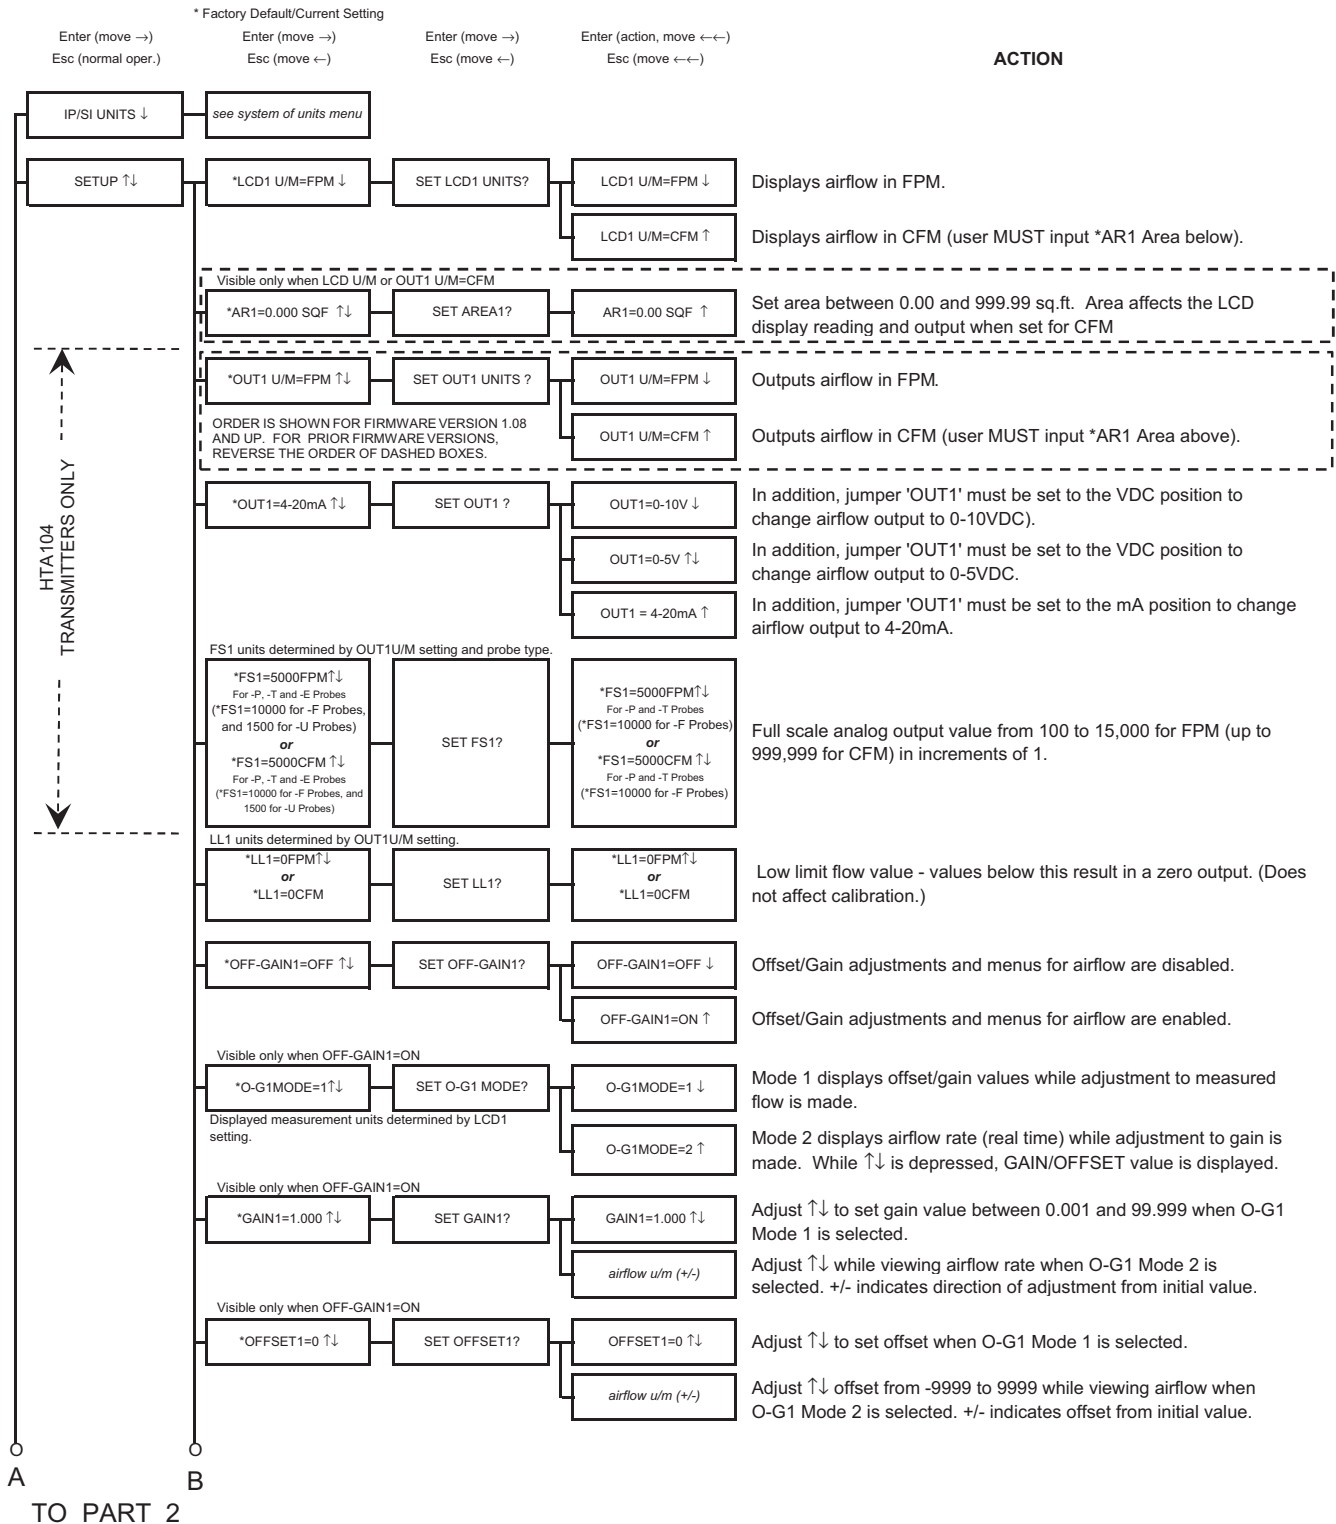


Figure 14. Setup Menu Options: -P, -F, -T and -U Sensor Systems ("IP SYS")

Setup Menu Options: -P, -F, -T and -U Sensor Systems (IP/SI Units Set for "IP SYS") Part 2 of 2

(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select

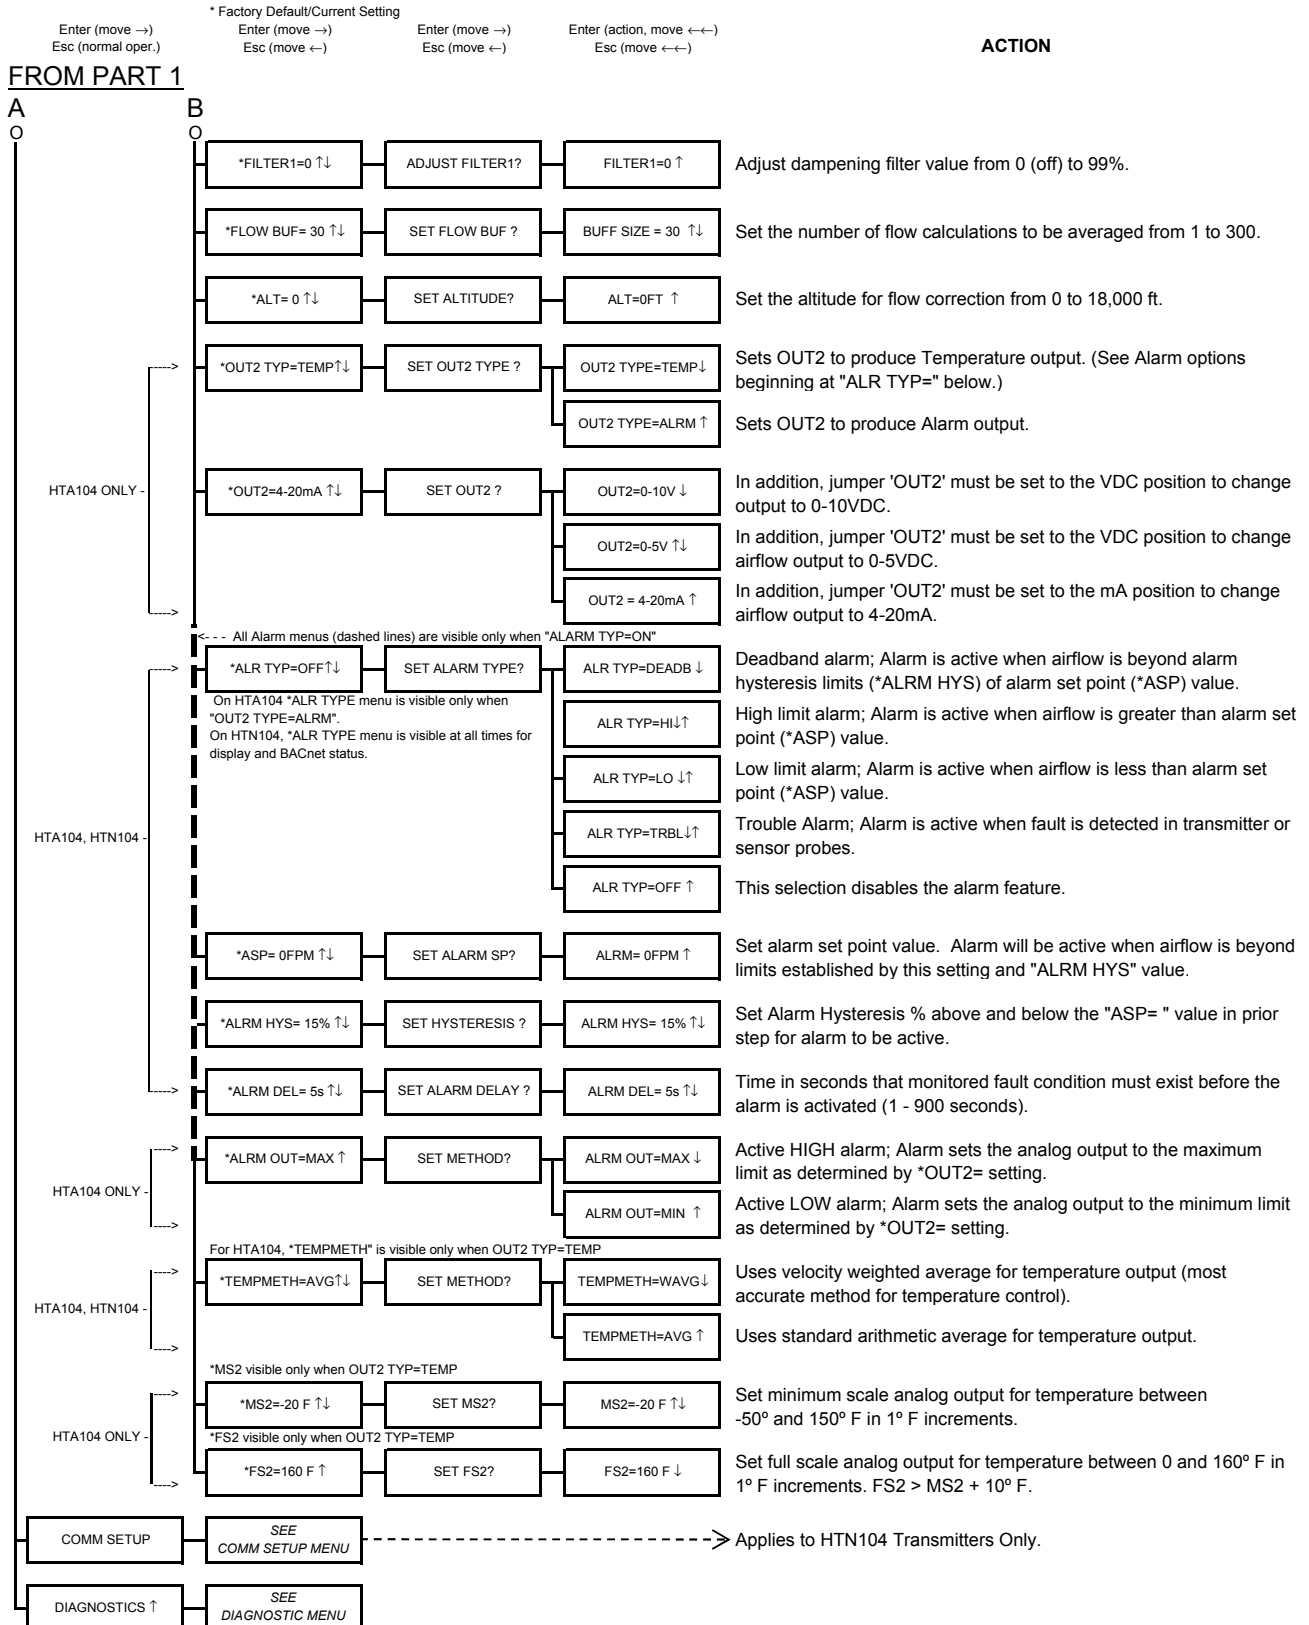

TMV-HTx104_RS8

Setup Menu Options: -B Systems (IP/SI Units Set for "IP SYS") Part 1 of 2
(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select

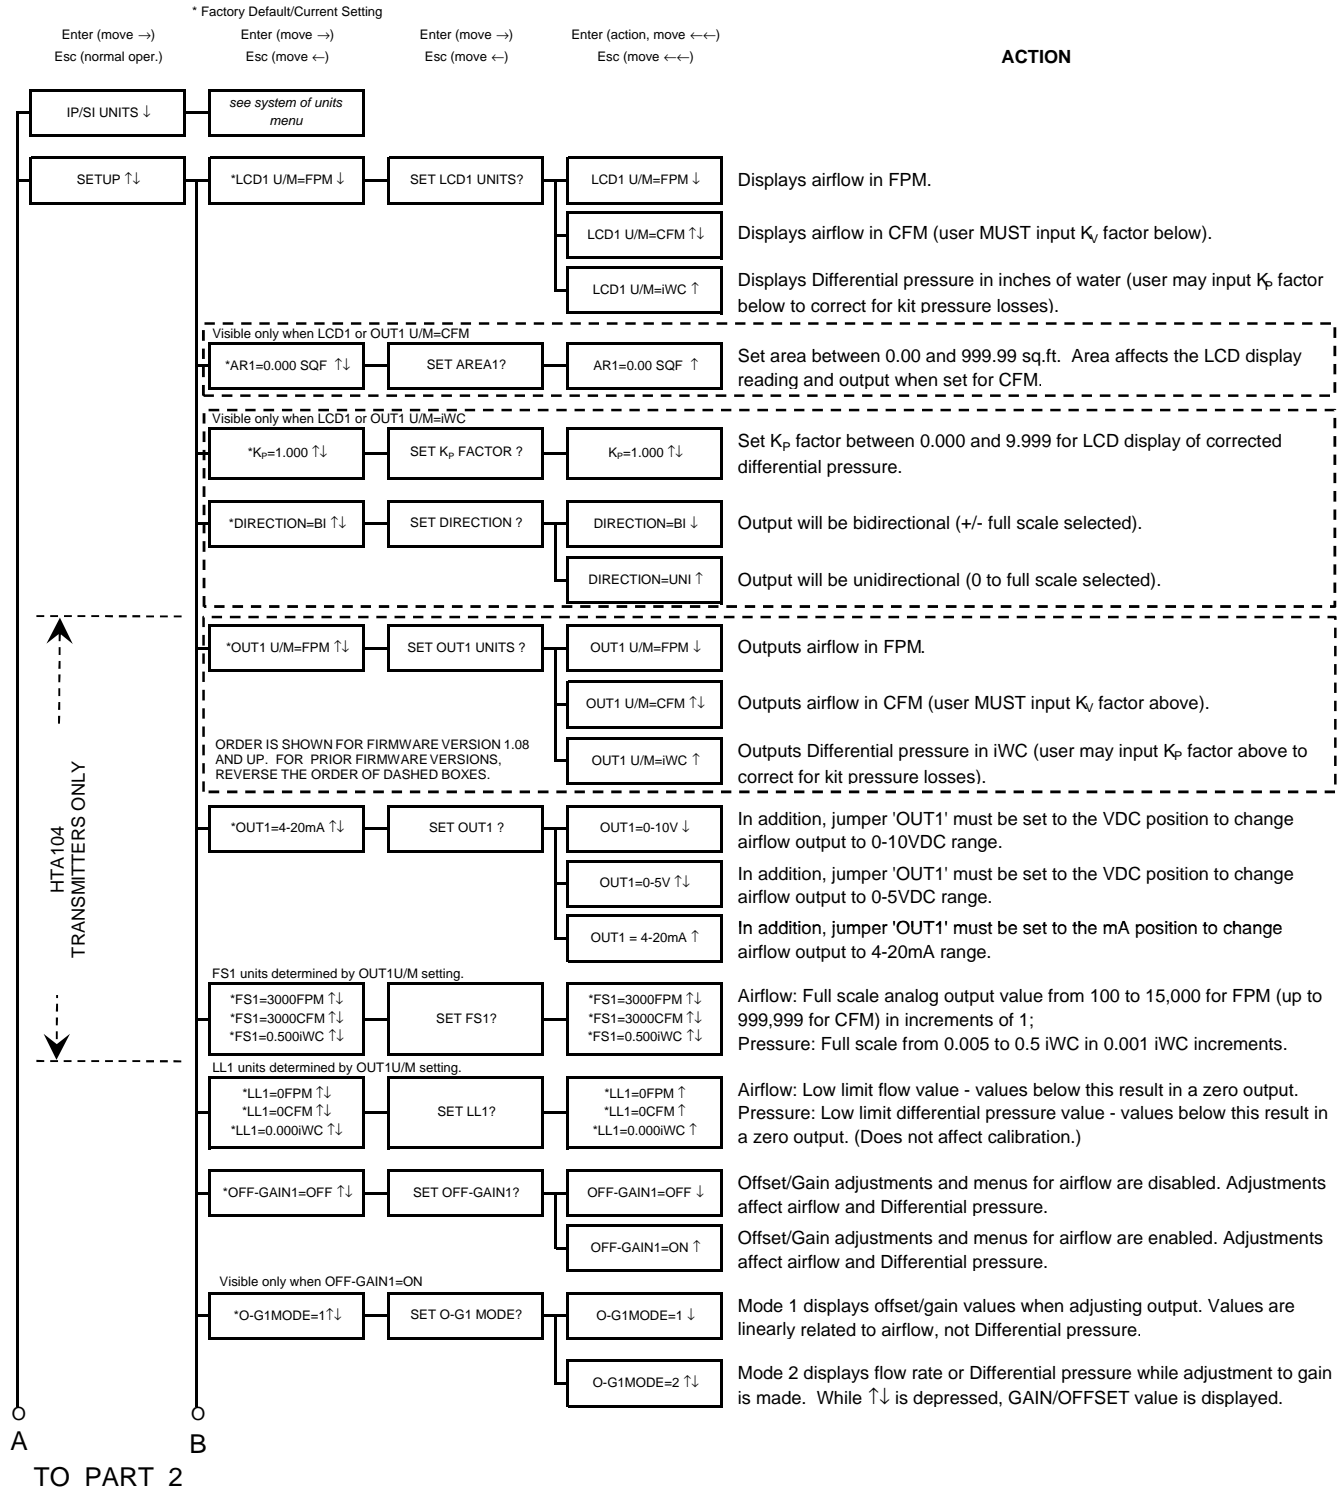


Figure 15. Setup Menu Options: -B Sensor Systems ("IP SYS")


Setup Menu Options: -B Systems (IP/SI Units Set for "IP SYS") Part 2 of 2

(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select

Enter (move →)	* Factory Default/Current Setting	Enter (move →)	Enter (action, move ←←)	ACTION
Esc (normal oper.)	Enter (move ←)	Esc (move ←)	Esc (move ←←)	

FROM PART 1

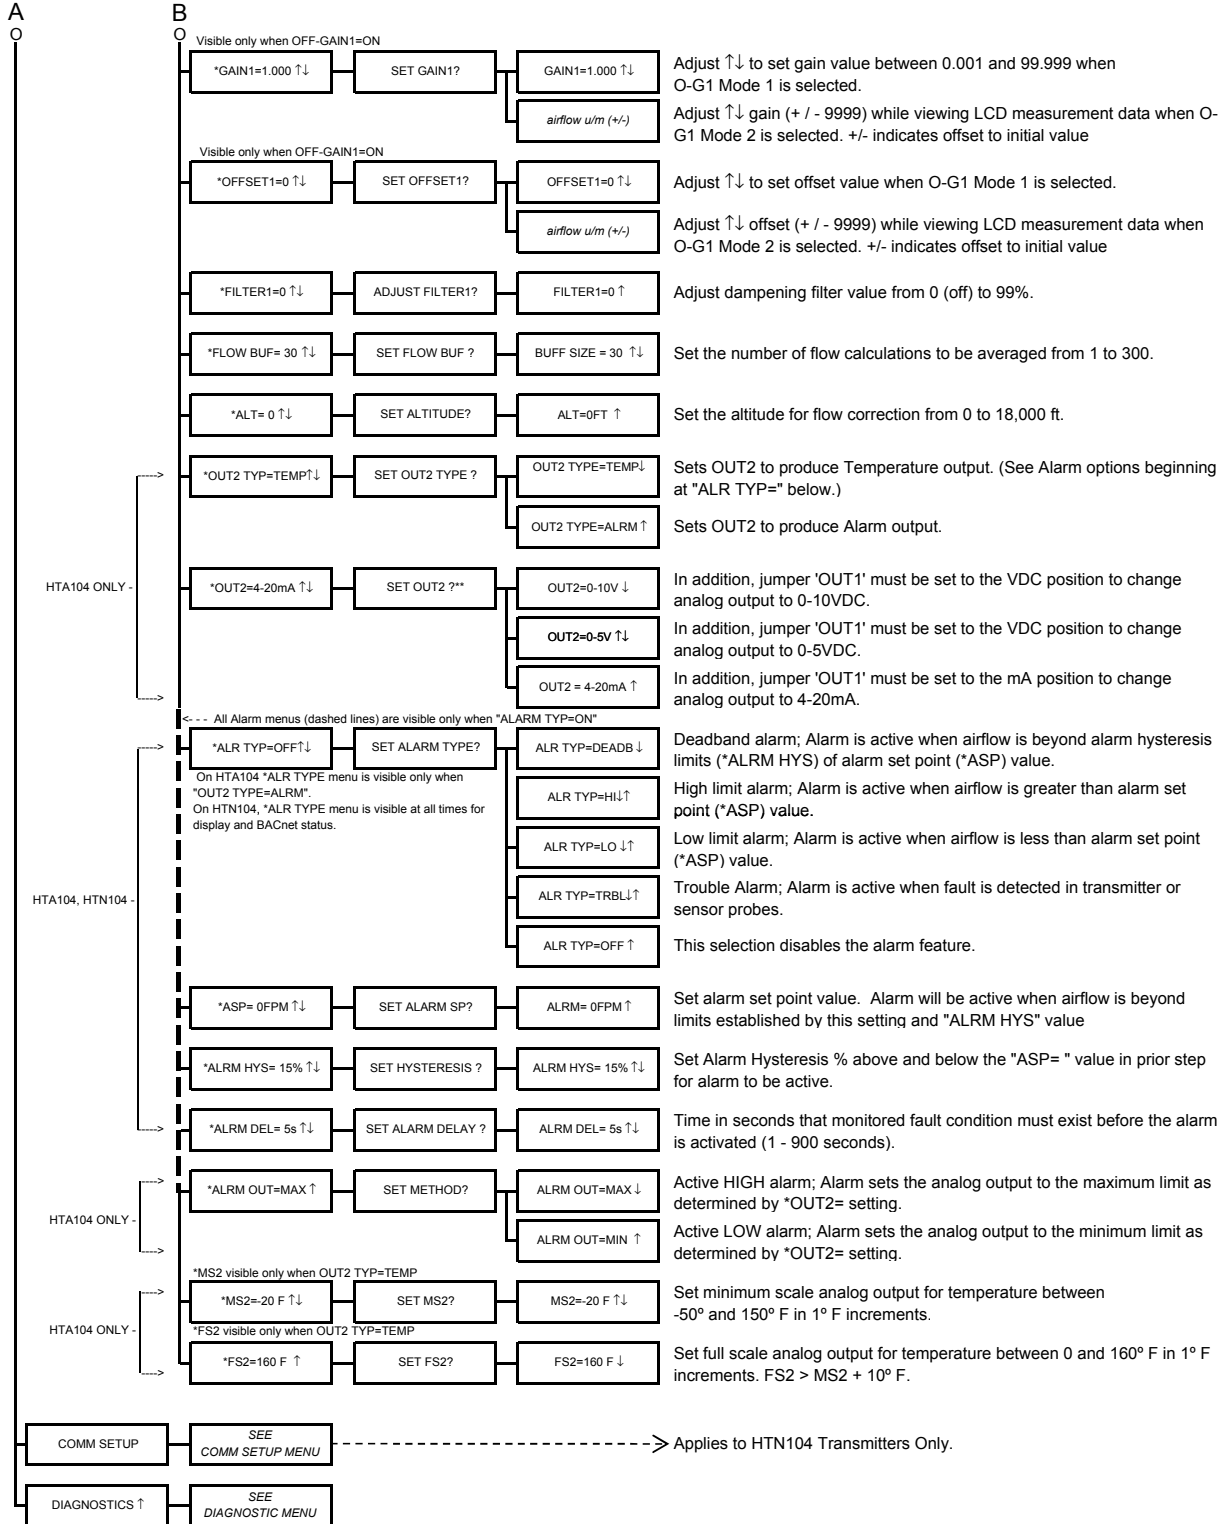

TM HTx104_R5A

Setup Menu Options: -E Systems (IP/SI Units Set for "IP SYS") Part 1 of 2

(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select

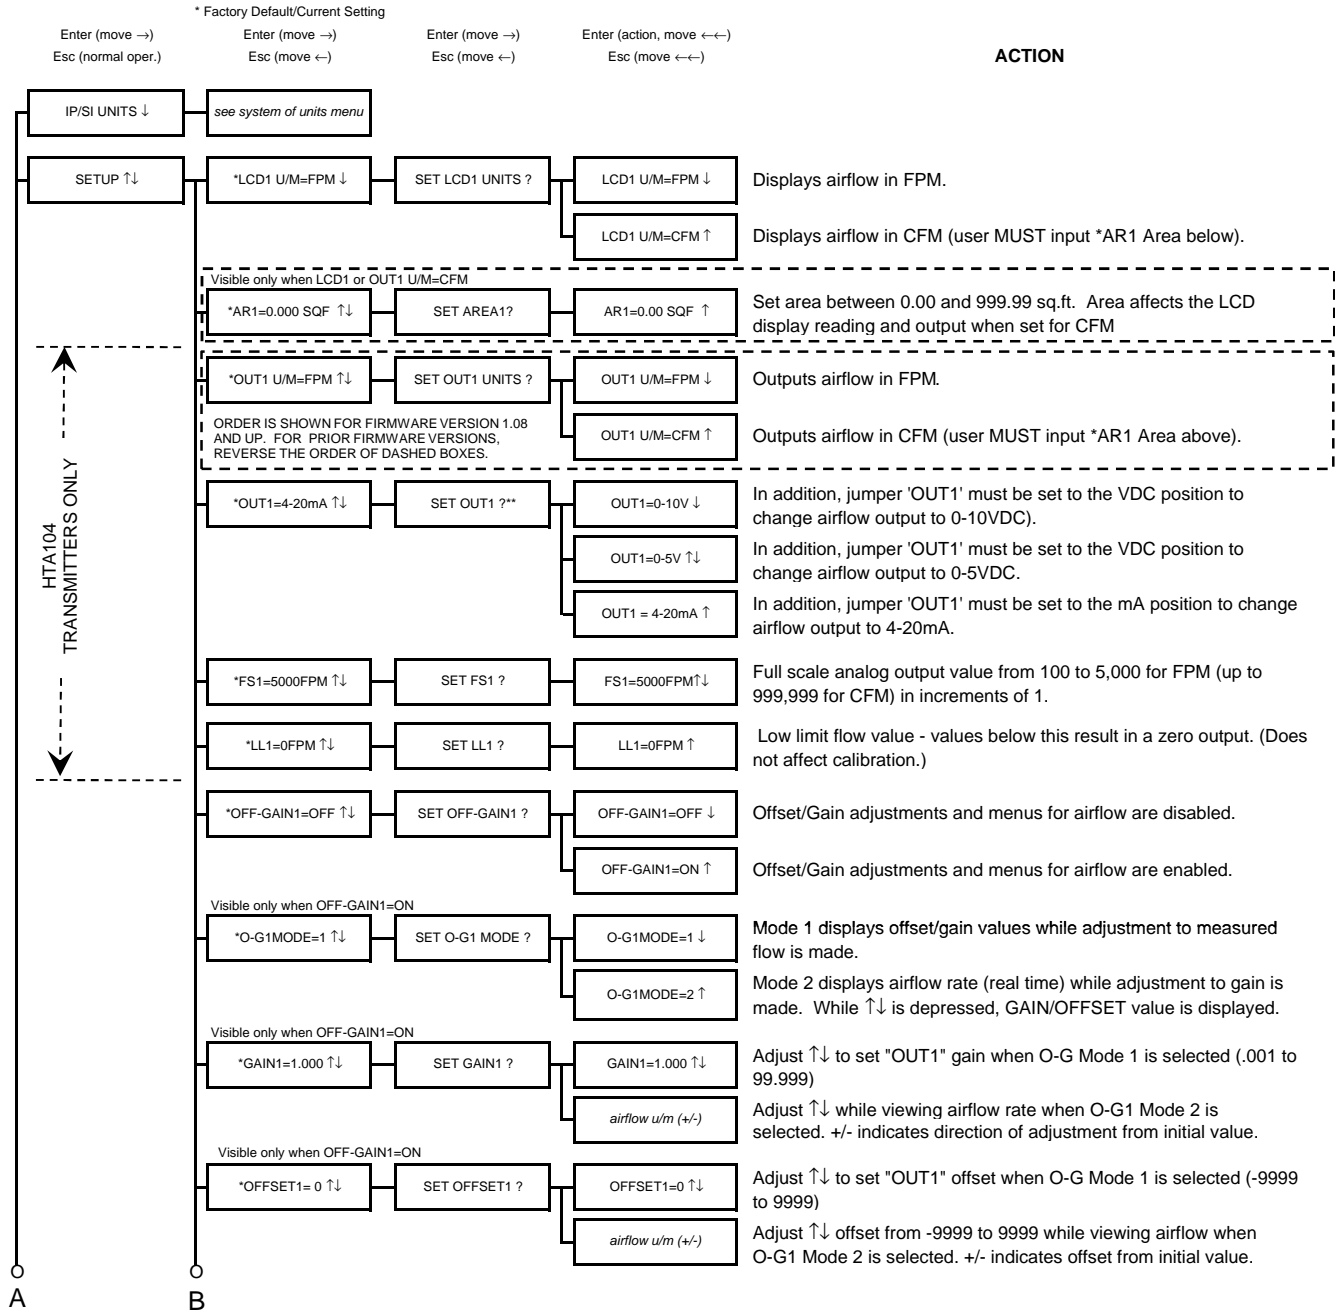


Figure 16. Setup Menu Options: -E Sensor Systems ("IP SYS")

Setup Menu Options: -E Systems (IP/SI Units Set for "IP SYS") Part 2 of 2


(Refer to Table 7 for "SI" Standard International Units of Measure)

Press and release ↑/↓ during normal operation to select

* Factory Default/Current Setting
 Enter (move →) Enter (move →) Enter (move →) Enter (action, move ←←)
 Esc (normal oper.) Esc (move ←) Esc (move ←) Esc (move ←←)

ACTION

FROM PART 1

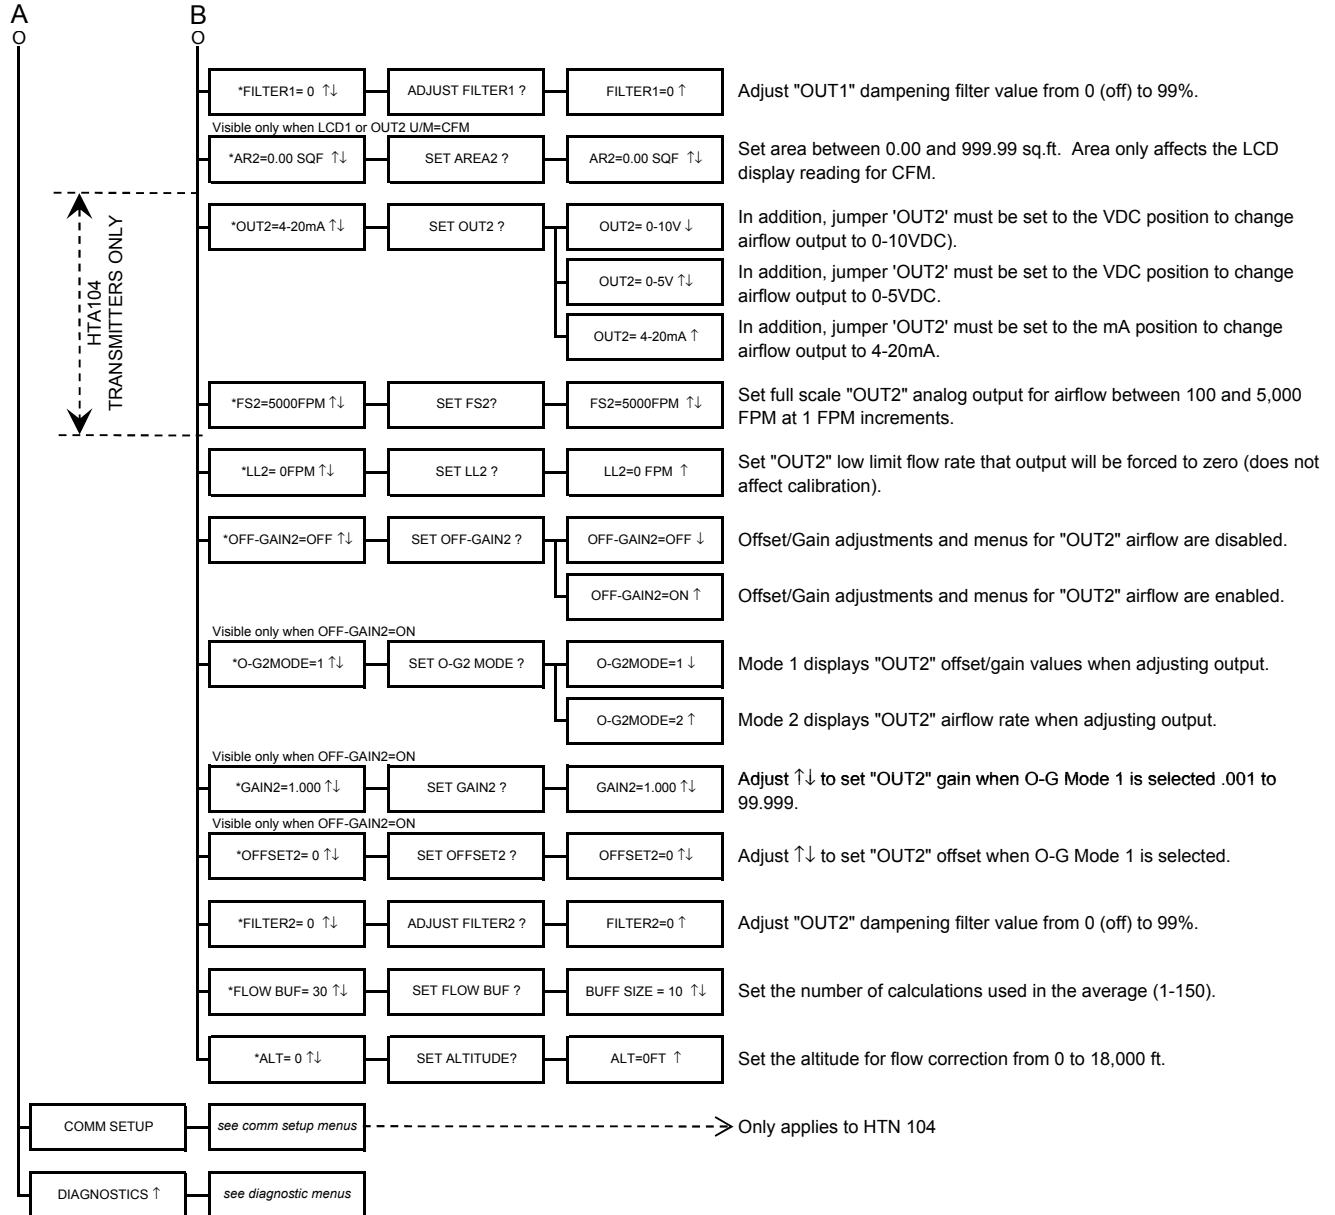

VIEWING SENSOR DATA

Local Sensor Data Display

Airflow and temperature of individual sensors can be displayed locally on the LCD from the diagnostic mode as detailed in Figure 17. They can also be read across an RS-485 BACnet[®] network. Sensors are automatically addressed after the power is energized to the transmitter. The probe that is connected to the left most **used** receptacle on the transmitter is probe number 1. The lowest sensor number on the probe is at the end opposite the connecting cable. Up to 4 sensors (addresses 1 to 4) can be individually viewed.

Example: Two 1 sensor probes are connected to receptacles C2 and C3 (refer to the connector diagram Figure 18). Sensor 1 is on C2 and sensor 2 to is on C3.

Sensor Data over RS-485 BACnet[®] Network

Two BACNET[®] analog variables can be read that contain a string describing the individual airflow and temperature data at the time of the request. The airflow variable is named **Airflow Traverse** and the temperature variable is named **Temperature Traverse**.



When using the HTx104-E with HE1 ERV sensors connected, airflow and temperature traverse data is not available.

The string is described as follows:

<sensor type>,<C1>,<C2>,<C3>,<C4>, data₁, data₂, data₃,...data_n

where

sensor type = PROBE, FAN, BLEED, SMALL PROBE, ERV, or UNIVERSAL

C1 = number of sensors on connector C1 (0 to 4 on Probe, 0 to 1 on FAN, and BLEED)

C2 = number of sensors on connector C2 (0 to 4 on PROBE, 0 to 1 on FAN and BLEED)

C3 = number of sensors on connector C3 (0 to 4 on PROBE, 0 to 1 on FAN and BLEED)

C4 = number of sensors on connector C4 (0 to 4 on PROBE, 0 to 1 on FAN and BLEED)

data = Airflow FPM (MPS) or Temperature °F (°C) as sequential data starting at connector C1

Navigating through the Diagnostics Menu (all System of Units)

Press and release ↑/↓ during normal operation to select


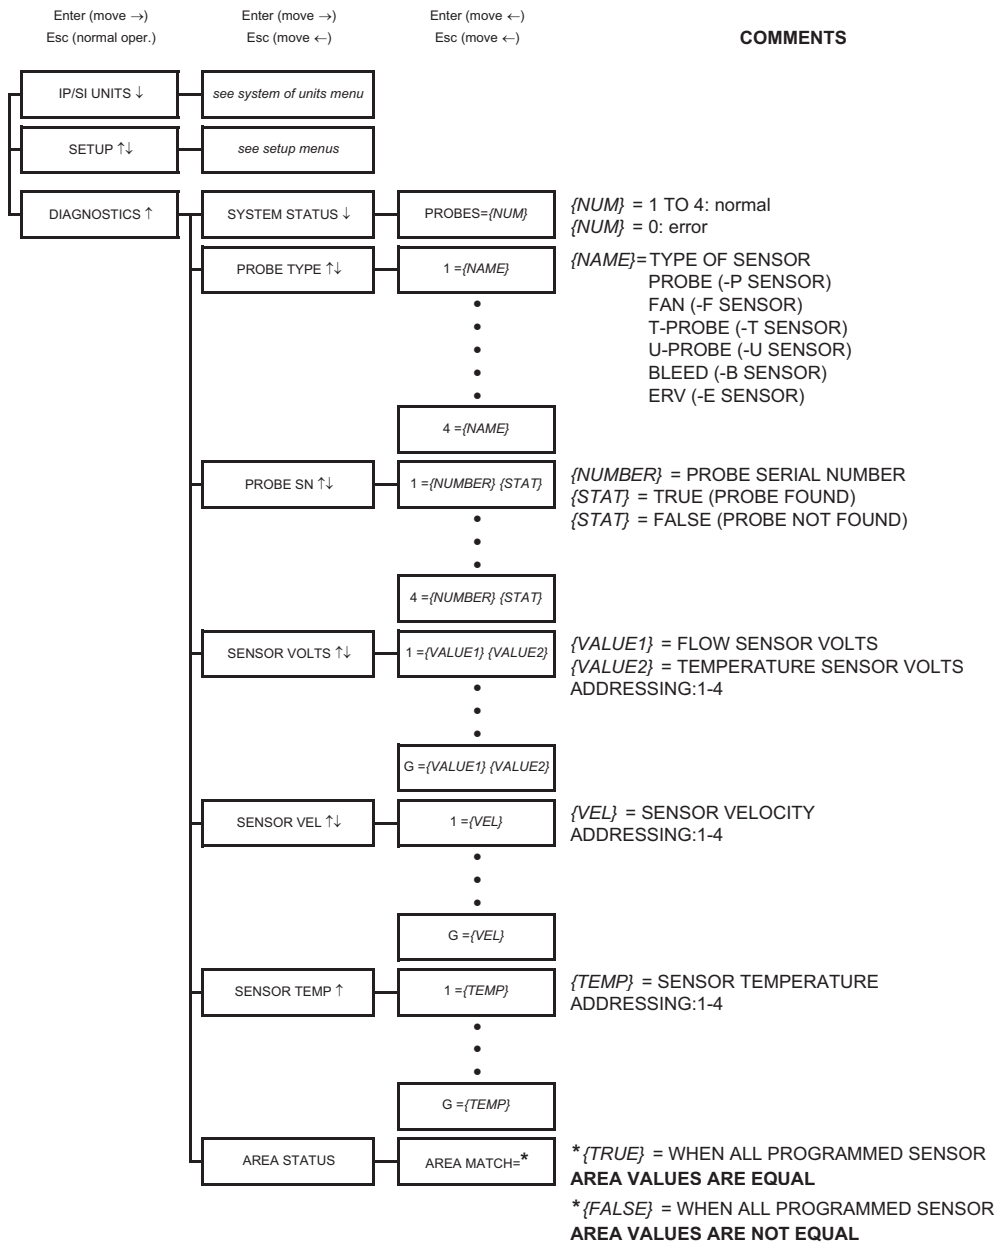


Figure 17. Navigating through the Diagnostics Menu (all System of Units)

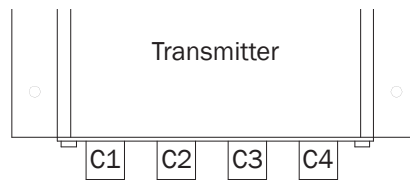

Connector Diagram

Figure 18. HTx104 Transmitter Connector Diagram

FIELD ADJUSTMENTS

The factory calibration should not require adjustment when sensor probes are installed in accordance with **EBTRON** installation guidelines. Some installations however, may not meet placement guidelines, or commissioning requirements may dictate field adjustment. Field adjustment may improve the “installed accuracy” of HTx104 systems when determining volumetric flow rates.

Adjusting the Low Limit Cutoff

The low limit cutoff forces the output signal for the airflow rate to zero whenever the airflow rate calculated falls below the specified Low Limit value. This feature is useful on outside air intakes that often indicate false airflow rates, induced by transient wind gusts or when the intake damper is closed and there is no net flow across the damper. Readings of 100 FPM or more are not uncommon on many outside air intake applications when the intake damper is closed and are a result of air movement in the intake plenum (not a malfunction in the airflow measuring device). Setting the low limit to a value significantly below the control setpoint and higher than the threshold flow for false wind readings simplifies control and interpretation of the airflow rate signal on many applications.

To set the low limit cutoff, enter the Setup menu and set “*LL1={desired value in FPM (MPS in SI units)}” as shown in Figures 14 through 16.

Adjusting the Digital Output Filter

The digital output filter is useful for dampening signal fluctuations resulting from transient wind gusts on outdoor air intakes or excessive turbulence generated from duct disturbances. The digital output filter range can be set between 0 (OFF) and 99%. Increasing the filter percentage limits the allowable change of the output signal. To change the amount of filtering, enter the Setup menu and set “*FILTER1={desired value}” as shown in Figures 14 through 16.



Fluctuations in the airflow output signal are normal. **EBTRON's** laboratory research indicates that dampening true fluctuations will result in poor control and a larger dead-band of operation. Therefore, the use of the dampening filters in control devices is not recommended.

Field Calibration Wizard - Adjustment of Factory Calibration

Overview of the Field Calibration Wizard

The simple to use Field Calibration Wizard provides a one or two point menu driven field adjustment to factory calibration of the OUTPUT 1 airflow rate signal. (Only OUTPUT 1 can be adjustable in this manner). The Field Calibration Wizard is most useful on larger duct sizes where the sensor density is lower, and the installed accuracy uncertainty is greater. The Field Calibration Wizard allows engineers, contractors and owners to use **EBTRON** stable and linear flow meters at a more affordable cost, when field adjustment is necessary or acceptable. This feature is especially valuable on outside air intake applications in close-coupled installations where the lower sensor density of the HTx104 sensor probes may be inadequate to achieve the "out of the box" accuracy that can be realized using **EBTRON's** higher density Gold Series C sensor probes.

Make sure that the reference measurement device and the technique used to determine the airflow rate in the field are suitable for such measurement. Select a location that is acceptable for the reference measurement device, recognizing that this may not be the location where the **EBTRON** airflow station is installed. The inherent accuracy of the field reference measurement will not be better than $\pm 5\%$ of reading and can often exceed $\pm 10\%$. Do not adjust the output of the HTx104 if the difference between the transmitter and the field reference measurement is less than 10%.

In certain applications, manual adjustment of factory gain and offset calibration values can be performed as outlined in the MANUAL ADJUSTMENT OF FACTORY OFFSET/GAIN CALIBRATION section of this manual.

Engaging and Using the Field Calibration Wizard

To engage the Field Calibration Wizard, simultaneously depress the “DOWN” and the “ENTER” buttons at any time during normal operation. Figure 19 provides details of the FIELD CAL WIZARD menu and how to use it in applications for one or two point adjustment of factory calibration. Note that the flow rate units of measure will be displayed in lower case letters on the LCD display, indicating that the transmitter is operating with the Field Calibration Wizard engaged. To disengage the Field Calibration Wizard, simultaneously depress the “DOWN” and the “ENTER” buttons at any time during normal operation and set Field Calibration Wizard OFF as shown in Figure 19.



The Field Calibration Wizard is not available on the HTx104-E ERV transmitter equipped with HE1 ERV probes.

Navigating through the Field Calibration Wizard Menu

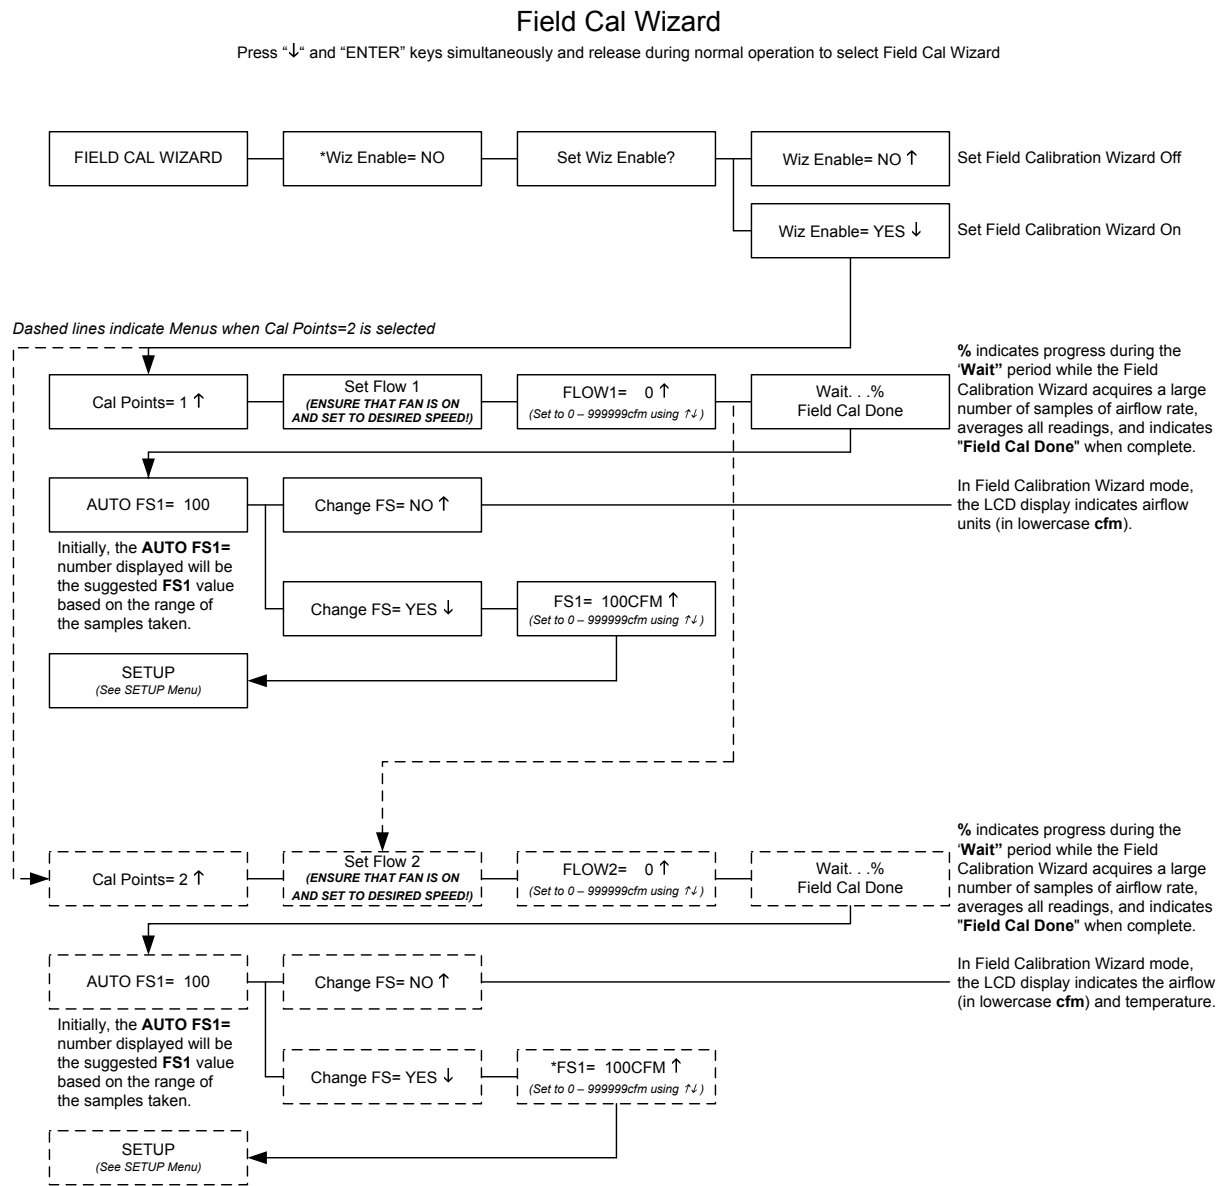


Figure 19. Field Calibration Wizard Menu (all System of Units)

MANUAL ADJUSTMENT OF FACTORY OFFSET/GAIN CALIBRATION

In applications where the FIELD CALIBRATION WIZARD can not achieve the desired results, perform manual adjustment of the factory calibration at one or two points. The HTx104 firmware can be adjusted for Output 1 signal “gain” and “offset”. To adjust the output signal “gain”, the “Off-Gain” override must be set to “*OFF-GAIN1=ON” from the Setup Menu. The adjustments affect both the LCD display and the output signal. When “*OFF-GAIN1=OFF” is set, adjusting the output signal “offset” and/or “gain” does not affect the output of the transmitter.

Procedure for 1 Point Field Adjustment

Select an airflow rate that represents a valid operating condition for the system. Set fan speed, dampers and VAV boxes to a fixed speed or position when measurements are taken. Complete the following worksheet to determine the gain setting to be set on the transmitter.

Direct Entry of Gain factor Method(most accurate):

1. Enter the setup menu and set “*OFF-GAIN1=OFF”. This is the factory default setting and disables any adjustments, returning the unit to its original factory calibration.
2. _____ Record the transmitter output by taking the visual reading from the transmitter LCD. Readings can be taken by the host controls if the output signal conversion has been confirmed. Time averaging the data will improve field recalibration.
3. _____ Record the reference instrument reading. Make sure that the units of measure (FPM, CFM, MPS or LPS) are identical for both the transmitter and the reference instrument reading. If the unit of measure is velocity (FPM or MPS), make sure that the reference airflow measurement was corrected for the area where the measurement was taken.
4. _____ Calculate the gain factor (m): **m=line 3/line 2.**
5. Enter the setup menu and set “*OFF-GAIN1=ON”.
6. Set “*OG1MODE=1” to enable direct entry of gain and offset values.
7. Set “*GAIN1={value calculated in line 4}”.
8. Confirm that “*OFFSET1=0.00”.
9. Press the “ESC” button until you return to the normal operating mode. Field adjustment is complete.

Visual Entry of Gain factor Method:

1. Enter the setup menu and set “*OFF-GAIN1=ON”.
2. Set “*OG1MODE=2” to enable “live” entry of gain and offset values.
3. Make sure that the units of measure (FPM, CFM, MPS or LPS) are identical for both the transmitter and the reference instrument reading. If the unit of measure is velocity (FPM or MPS), make sure that the reference airflow measurement was corrected for the area where the measurement was taken. Use the “UP” and “DOWN” arrows until the LCD display matches the reference reading. Press “ENTER” to save the new gain value.
4. Press the “ESC” button until you return to the normal operating mode. Field adjustment is complete.

Procedure for 2 Point Field Adjustment

Select the minimum and maximum airflow rate that the airflow station will encounter as a valid operating condition for the system. Set fan speed, dampers and VAV boxes to a fixed speed or position when measurements are taken. Complete the following worksheet to determine the gain and offset settings to be set on the transmitter.

1. Enter the setup menu and set “*OFF-GAIN1=OFF”. This is the factory default setting and disables any adjustments, returning the unit to its original factory calibration. MEASUREMENTS MUST BE RECORDED IN FPM (MPS for S.I. units).
2. Set the minimum airflow rate.
3. _____ Record the transmitter airflow rate by taking the visual reading from the transmitter LCD. Readings can be taken by the host controls if the output signal conversion has been confirmed. Time averaging the data will improve field recalibration.
4. _____ Record the reference instrument airflow rate. Make sure that the unit of measure has been converted to FPM (MPS for S.I. units). Make sure that the reference airflow measurement was corrected for the area where the measurement was taken.

5. Set the maximum airflow rate.
 6. _____ Record the transmitter airflow rate.
 7. _____ Record the reference instrument airflow rate.
 8. _____ Calculate the gain factor (m): $m=(\text{line 7} - \text{line 4})/(\text{line 6} - \text{line 3})$.
 9. _____ Calculate the offset factor (b): $b=(\text{line 4} - (\text{line 8} \times \text{line 3}))$.
- If more than 2 points are available, perform linear regression on the data to determine gain and offset.**
10. Enter the setup menu and set “*OFF-GAIN1=ON”.
 11. Set “*OG1MODE=1” to enable direct entry of gain and offset values.
 12. Set “*GAIN1={value calculated in line 8}”.
 13. Set “*OFFSET1={value calculated in line 9}”.
 14. Press the “ESC” button until you return to the normal operating mode. Field adjustment is complete.

MAINTENANCE

When the transmitter and probes are installed in accordance with **EBTRON** guidelines, instrument difficulties are rare. Issues can be easily resolved by viewing Diagnostic data from the Diagnostic Menu (Figure 17) and by proceeding through the following troubleshooting guides (Tables 9 through 11). All devices come with a 3-Year Warranty on Parts and Factory Labor, as well as lifetime, toll-free customer support. Customer support is available Monday through Friday from 8:00 AM to 4:30 PM ET, at 800-2**EBTRON** (232-8766). **EBTRON** Diagnostic Customer Service forms are available on-line at www.ebtron.com. These forms are designed to assist us in quickly responding to and accurately diagnosing your specific issue and will greatly expedite its resolution. A sketch of the installation location, along with a control sequence of operations is very useful and is recommended to help us diagnose any issue you may encounter. Fax the completed information to 843.756.1838 before you call, and have it available when speaking with our Customer Service representative. Address all correspondence to the **EBTRON** Customer Service Department. Additional information is also available from your local **EBTRON** representative.

STANDARD LIMITED PARTS WARRANTY

If any **EBTRON** product fails within 36 months from shipment, **EBTRON** will repair/replace the device free of charge as described in the company’s warranty contained in **EBTRON**’s **TERMS AND CONDITIONS OF SALE**. Defective equipment shall be shipped back to **EBTRON**, freight pre-paid, for analysis.

General Troubleshooting (All HTx104 Systems)

Table 9. General Troubleshooting (All HTx104 Systems)

Problem	Possible Cause	Remedy
No LCD display indication and the green 'ACT' transmitter status LED on the main circuit board is not illuminated.	Power switch not in the "ON" position.	Move the power switch to the "ON" position.
	Improper supply voltage to the power input terminal block.	Ensure that 24VAC power is connected to L1 and L2 of the POWER terminal block and that the voltage with the power switch in the "ON" position is between 22.8 and 26.4 VAC.
	Blown fuse.	Check power wiring. Ensure that multiple devices wired on a single transformer are wired "in-phase". Replace fuse only with a 1.0 amp, fast-acting fuse after the problem has been identified and corrected.
No LCD display indication and the green 'ACT' transmitter status LED on the main circuit board is flashing.	LCD contrast too low.	Turn "Contrast" potentiometer on the main circuit board "clockwise".
The LCD display is scrambled or there is no LCD display indication after touching the switches, LCD display or circuit board.	Static electricity.	Touch an earth-grounded object, such as a duct, to discharge static electricity then reset the power. Avoid direct contact with the LCD display or circuit board.
The LCD display indicates "No Probes".	The power switch on the transmitter was moved to the "ON" position before the sensor probes were connected.	Reset 24VAC power by moving the power switch from the "ON" to "OFF" position and then back to the "ON" position.
The LCD display indicates "DiffSensor Type".	Sensor probes have been mismatched.	Transmitters must have the same sensor type connected (HP1, HF1, HB1, HT1, HU1 or HE1 sensor probes).
The LCD display indicates "Too Many Sensors".	A probe with 2 or more sensors has been connected to a 'Type C' transmitter with 4 receptacles.	Probes with 2 or more sensors are shipped with and require a 'Type B' transmitter with 2 receptacles.
The last digit of the flow rate unit is displayed as a lower case letter.	The sensor detection system has detected one or more malfunctioning or missing sensors.	Check sensor probe cable connections. If sensor probe connections look OK and match the number of sensor probes indicated on each probe's hang tag, please call EBTRON's customer service department or visit us at www.ebtron.com for further assistance.
	A probe with 2 or more sensors has been connected to a 'Type C' transmitter with 4 receptacles.	Probes with 2 or more sensors are shipped with and require a 'Type B' transmitter with 2 receptacles.
The green 'ACT' transmitter status LED on the main circuit board is "ON" but not flashing.	The microprocessor is not running.	Reset 24VAC power by moving the power switch from the "ON" to "OFF" position and then back to the "ON" position.
The green 'ACT' transmitter status LED on the main circuit board is flashing at 1-second intervals.	No problem, normal operation.	No remedy required.
The green 'ACT' transmitter status LED on the main circuit board is flashing at 2-second intervals.	The sensor detection system has detected one or more malfunctioning or missing sensors.	Check sensor probe cable connections. If sensor probe connections look OK and match the number of sensor probes indicated on each probe's hang tag, please call EBTRON's customer service department or visit us at www.ebtron.com .
	A probe with 2 or more sensors has been connected to a 'Type C' transmitter with 4 receptacles.	Probes with 2 or more sensors are shipped with and require a 'Type B' transmitter with 2 receptacles.
The transmitter indicates airflow when the HVAC system is not operating.	Sensors are sensitive and can measure very low air velocities. If a reading is indicated, there is airflow present where the airflow measuring station is located.	Do not attempt to adjust zero ("offset"); doing so will result in an error in airflow measurement. The Low Limit airflow cutoff value can be set to force the output signal to zero.

HTA104 - Analog Transmitter Troubleshooting

Table 10. HTA104 Analog Transmitter Troubleshooting

Problem	Possible Cause	Remedy
No output signal can be measured at the OUTPUT terminal block of the HTA104 transmitter.	Blown output fuse (output 1 and output 2 are fused and protected independently on HTA104 transmitters).	Make sure that power has not been connected to the output terminal block. Correct the problem and replace with 0.125 amp, fast acting fuse only. Make sure that the host control system is not configured for a 2-wire device (no excitation voltage should be present on the signals from the host controls). Correct the problem and replace with 0.125 amp, fast acting fuse only.
	The Low Limit airflow cutoff value is above the actual airflow reading.	Decrease the Low Limit airflow cutoff value in the Setup Menu until it is below the actual airflow reading.
The output signal on the HTA104 transmitter fluctuates while the airflow and/or temperature readings on the LCD are steady.	Electrical interference from other devices is creating noise in the signal wires to the host control system.	The output signal wiring must be shielded. Individually ground one or more of the following points: the signal wire shield at host controls; signal wire shield at the transmitter, or L2 of the power terminal block of the HTA104.
The LCD display does not match the readings indicated by the host control system.	The scaling in the host control system is incorrect.	Compare the current configuration of the transmitter with that of the host control system. Compare the minimum and full scale settings for each output by navigating through the Setup Menu.

HTN104 - RS485 Transmitter Troubleshooting


Table 11. HTN104 RS-485 Transmitter Troubleshooting

Problem	Possible Cause	Remedy
The host control system is unable to communicate with the HTN104 transmitter.	The network signal wiring is not properly connected to the HTN104 transmitter or the host controls.	Verify that the network signal wires from the host controls are connected to the proper terminals of the OUTPUT block. On the HTN104 transmitter OUTPUT terminal block, NET+ is for A, NET- is for B and COM for common.
	The network protocol is not properly set in the HTN104.	Set network protocol based on the network requirements and reset transmitter power. Refer to COMM setup menu, Figure 10 of this technical manual.
	The network address is not properly set in the HTN104.	Set network address based on network requirements and reset transmitter power. Refer to COMM setup menu, Figure 10 of this technical manual. Note that each address must be unique for the network.
	The termination is not properly set in the HTN104.	Set transmitter termination based on network requirements and reset the transmitter power. Refer to the section describing network termination and Figure 9 of this technical manual for settings.
The LCD display does not match the readings indicated by the host control system.	The Area or K factor of the HTA104 transmitter does not match that of the host controls.	Compare the value of the Area or K factor of the HTN104 transmitter with that of the host control system and make adjustments in SETUP menu to ensure a match. Refer to the appropriate SETUP menu for the probe type in use within this technical manual for Area and K factor settings.
The returned value for airflow is zero when airflow is indicated on the LCD display of HTN104 transmitter.	The Low Limit airflow cutoff value is above the actual airflow reading.	Decrease the Low Limit airflow cutoff value in the Setup Menu until it is below the actual airflow reading.
The status point from the HTN104 transmitter has a Trouble value.	The sensor detection system has detected one or more malfunctioning or missing sensors.	Check sensor probe cable connections. If sensor probe connections look OK and match the number of sensor probes indicated on each probe's hang tag, please call EBTRON 's customer service department or visit us at www.ebtron.com .
	A probe with 2 or more sensors has been connected to a 'Type C' transmitter with 4 receptacles.	Probes with 2 or more sensors are shipped with and require a 'Type B' transmitter with 2 receptacles.
There is no value for the differential pressure point.	Differential pressure is only available from transmitters that have EBTRON 's Bi-directional Bleed Airflow Sensors connected.	If differential pressure measurement is required, contact your local EBTRON Representative about EBTRON 's Bi-directional Bleed Airflow Sensor.

TML-HTX104_RSA


APPENDIX A - HTA104 WIRING DIAGRAMS

FOR -P, -F, -T, -U AND -B PROBE MODELS

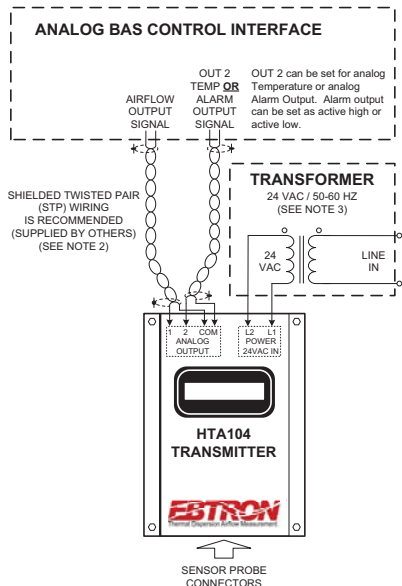


- NOTES:
1. OUTPUT 2 CAN BE SET AS TEMPERATURE OR AS AN ALARM. ALARM CAN BE SET AS ACTIVE HIGH OR ACTIVE LOW.
 2. CONNECT OUTPUT SIGNAL CABLE DRAINS TO EARTH GROUND AT ONE END OF EACH CABLE ONLY.
 3. ON MULTIPLE TRANSMITTER INSTALLATIONS WITH A COMMON 24VAC SOURCE, WIRE 24 VAC POWER IN-PHASE TO THE SAME TERMINALS ON ALL TRANSMITTERS (e.g.: L1 to L1, L2 to L2).

FOR -E ERV MODELS

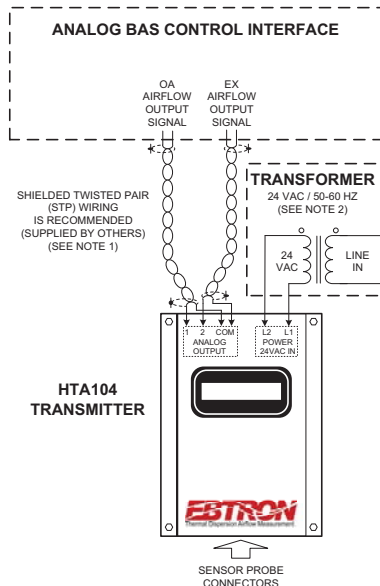

- NOTES:
1. CONNECT OUTPUT SIGNAL CABLE DRAINS TO EARTH GROUND AT ONE END OF EACH CABLE ONLY.
 2. ON MULTIPLE TRANSMITTER INSTALLATIONS WITH A COMMON 24VAC SOURCE, ENSURE THAT 24 VAC POWER TO ALL TRANSMITTERS IS WIRED IN-PHASE TO THE SAME TERMINALS (e.g.: L1 to L1, L2 to L2).

APPENDIX B - HTN104 WIRING DIAGRAM

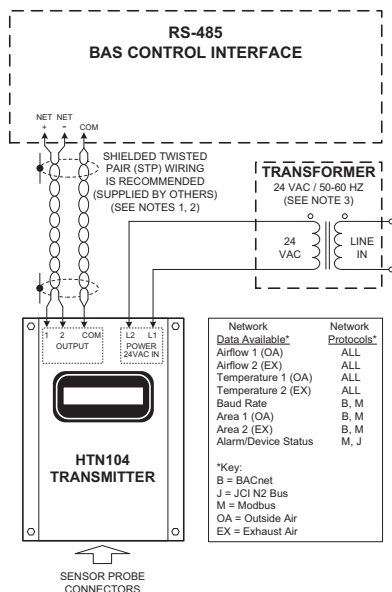

- NOTES:
1. CONNECT OUTPUT SIGNAL CABLE DRAINS TO EARTH GROUND AT ONE END OF EACH CABLE ONLY.
 2. COM CONNECTION MAY BE WIRED USING A SINGLE CONDUCTOR.
 3. ON MULTIPLE TRANSMITTER INSTALLATIONS WITH A COMMON 24VAC SOURCE, ENSURE THAT 24 VAC POWER TO ALL TRANSMITTERS IS WIRED IN-PHASE TO THE SAME TERMINALS (e.g.: L1 to L1, L2 to L2).

Network Data Available*	Network Protocols*
Airflow 1 (OA)	ALL
Airflow 2 (EX)	ALL
Temperature 1 (OA)	ALL
Temperature 2 (EX)	ALL
Baud Rate	B, M
Area 1 (OA)	B, M
Area 2 (EX)	B, M
Alarm/Device Status	M, J

*Key:
B = BACnet
J = JCI N2 Bus
M = Modbus
OA = Outside Air
EX = Exhaust Air

TM_HTX104_R5B

