




ORIGINAL INSTRUCTIONS

**Instruction Manual**  
High Vacuum Angle Valve  
**Series XLAV-2-Q**

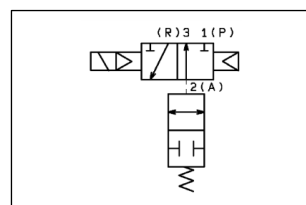

The intended use of this product is isolation between vacuum pump and chamber.

**1 Safety Instructions**

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger."

They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) <sup>(1)</sup>, and other safety regulations.

- <sup>(1)</sup> ISO 4414: Pneumatic fluid power - General rules relating to systems.
- ISO 4413: Hydraulic fluid power - General rules relating to systems.
- IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
- ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

- Refer to product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
- Keep this manual in a safe place for future reference.

<b>Caution</b>	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
<b>Warning</b>	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
<b>Danger</b>	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

**Warning**

- Always ensure compliance with relevant safety laws and standards.
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

**2 Specifications**

**2.1 General Specifications**

Valve type	Normally closed
Fluid	Inert gas under vacuum
Fluid and ambient temperature range [°C]	5 to 50
Operating pressure [Pa]	Atmospheric to 1 x 10 <sup>-6</sup>
Pilot pressure range	0.4 to 0.7 MPa
Leakage [Pa m <sup>3</sup> /s]	Internal 1.3 x 10 <sup>-10</sup> at ordinary temperatures – excluding gas permeation
	External 1.3 x 10 <sup>-11</sup> at ordinary temperatures – excluding gas permeation
Pilot pressure range [MPa]	0.4 to 0.7
Body material	Aluminum alloy
Seal material	FKM
Other material in contact with fluid	Stainless steel

Table 1

**2.2 Pilot Valve Coil Specifications**

Electrical entry	Grommet, L plug connector, M plug connector, M8 connector
Rated voltage	24 VDC, 12VDC
Allowable voltage fluctuation [%]	±10 of rated voltage
Allowable leakage voltage [%]	3 or less of rated voltage
Power consumption [W]	0.35 (with light: 0.4)

**2 Specifications – continued**

**2.2 Pilot Valve Coil Specifications - continued**

Surge voltage suppressor	Diode (Non-polar type: Varistor)
Indicator light	LED

Table 2

**2.3 Connection / Flow specifications**

Model	Flange Type	Flange Size	Port Size	Conductance L/s Note 1)	Weight kg
XLAV-16-2	KF	16	M5	5	0.33
XLAV-25-2	KF	25		14	0.52
XLAV-40-2	KF	40		45	1.2
XLAV-50-2	KF	50		80	1.8
XLAV-63-2	KF/K	63	M5 Rc1/8	180	3.2
XLAV-80-2	KF/K	80		200	5.2

Table 3

Note 1) Conductance is the value for the elbow with the same dimensions.

**2.4 Auto Switch specifications (Option)**

**2.4.1 Solid state switch**

Model	D-M9N	D-M9P	D-M9B
Wiring	3 wire		2 wire
Output	NPN	PNP	-
Application	IC circuit / Relay / PLC		24 VDC Relay / PLC
Power voltage [V]	5 / 12 / 24 VDC (4.5 to 28) DC		
Current [mA]	10 or less		
Load voltage [V]	28 DC or less	-	24 DC (10 to 28 DC)
Load current [mA]	40 or less		2.5 to 40
Internal voltage drop [V]	0.8 or less (at 10 mA load) 2 or less (at 40 mA load)		4 or less
Current leakage [mA]	0.001 or less (at 24 VDC)		0.8 or less
Operating time [ms]	1 or less		
Indicator light	Red LED ON (operating position)		
Insulation resistance [MΩ]	50 or more at 500 VDC mega		
Withstand voltage [V]	1000 for 1 minute (AC) (between lead wire and case)		
Enclosure	IEC60529 standard IP67, JISC0920		

Table 4

**2.4.2 Reed switch**

Model	D-A93	D-A90	
Wiring	2 wire		
Application	Relay / PLC	Relay / PLC / IC circuit	
Load voltage [V]	24 DC	24 <sup>AC</sup> <sub>DC</sub> or less	48 <sup>AC</sup> <sub>DC</sub> or less
Load current [mA]	5 to 40	50	40
Internal voltage drop [V]	2.4 or less (up to 20 mA) 3 or less (up to 50 mA)	-	
Internal resistance	-	1 Ω or less (including 3m lead wire)	
Contact protection circuit	None		
Operating time [ms]	1.2		
Indicator light	Red LED ON (operating position)		
Insulation resistance	50 MΩ or more at 500 VDC mega		
Withstand voltage [V]	1500 for 1 minute (AC) (between terminals and housing)		
Enclosure	IEC60529 standard IP67, JISC0920		

Table 5

**Warning**

Special products (-X) might have specifications different from those shown in this section. Contact SMC for specific drawings.

**3 Installation**

**3.1 Installation**

**Warning**

- Do not install the product unless the safety instructions have been read and understood.
- Use clean air. Do not use air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as it can cause damage or malfunction.
- Install an air filter if necessary close to the valve on the upstream side.

**3 Installation - continued**

- Use within stated ambient temperature range. Check the compatibility of product's materials with any fluid contained in the ambient atmosphere. Ensure that any harmful fluid used does come into contact with the external surface of the product.
- Take measures to prevent static electricity since some fluids can cause static electricity.
- Not suitable for use as an emergency shutoff valve. These valves are not designed for safety applications such as an emergency shutoff valve. If the valves are used for the mentioned applications, additional safety measured should be adopted.
- Be aware that the valve surface may get hot if operated continuously. The solenoid coil will generate heat when continuously energized, so avoid installing it in an enclosed space.
- Do not touch the coil while it is being energized or immediately after energization.

**3.2 Vacuum Piping**

**Warning**

- Before piping make sure to clean up chips, cutting oil, dust etc. Clean the surface of the flange seal and the O-ring with ethanol, etc.
- Be sure that the flange O-ring is compressed by 15% or more.
- In high humidity environments, keep in packaged condition until just before piping.
- Seal part on flange is protected, but for safety reasons, do not handle.
- Perform piping so that excessive force is not applied to the flange sections. In case there is vibration of heavy objects or attachments, secure them so that torque is not applied directly to the flanges.

**3.3 Leakage voltage**

**Caution**

Particularly when using a resistor in parallel with a switching element and when using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., which may prevent the valve from turning off. Suppressor residual voltage leakage should be as follows:

DC coil: 3% or less of the rated voltage

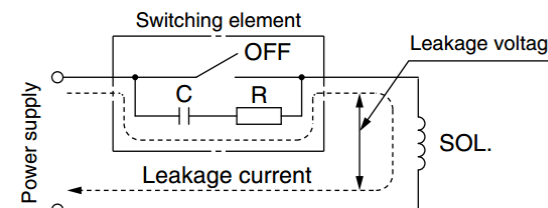


Figure 1

**3.4 Valve Mounting**

**Warning**

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If air leakage increases or equipment does not operate properly, stop operation.
- After mounting is completed, confirm that it has been done correctly by performing a suitable function test.
- Do not warm the coil assembly with a heat insulator, etc. Use tape, heaters, etc., for freeze prevention on the piping and body only. Warming the coil can cause it to burn out.
- Avoid sources of vibration, or adjust the arm from the body to the minimum length so that resonance will not occur.
- Warnings or specifications printed or labelled on the product should not be erased, removed, or covered up.

**3.5 Environment**

**Warning**

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.

**3 Installation - continued**

- Employ suitable protective measures in locations where there is contact with water droplets, oil or welding splatter, etc.

**3.6 Lubrication**

**Caution**

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.
- If a lubricant is used in the system, refer to catalogue for details.

**3.7 Piping (Fitting)**

**Caution**

- Before connecting piping make sure to clean up chips, cutting oil, dust etc.
- When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1 thread exposed on the end of the pipe/fitting.
- Tighten fittings to the specified tightening torque. A reference value for the tightening torque is below.

M5: 1 to 1.5 N.m  
Rc1/8: 3 to 5 N.m

- When mounting the fitting to the pilot port, mount it so that the solenoid valve and plate are secured at the same time.

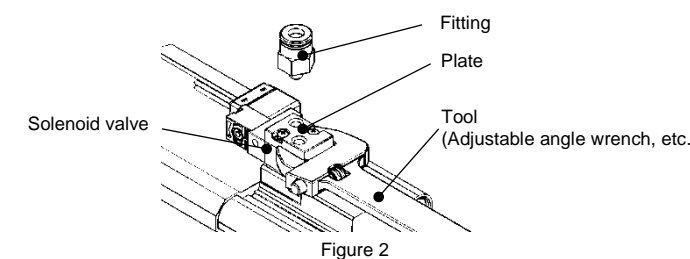


Figure 2

**3.8 Wiring (Solenoid valve)**

**3.8.1 How to use plug connector**

**Caution**

**Attaching and detaching connectors**

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

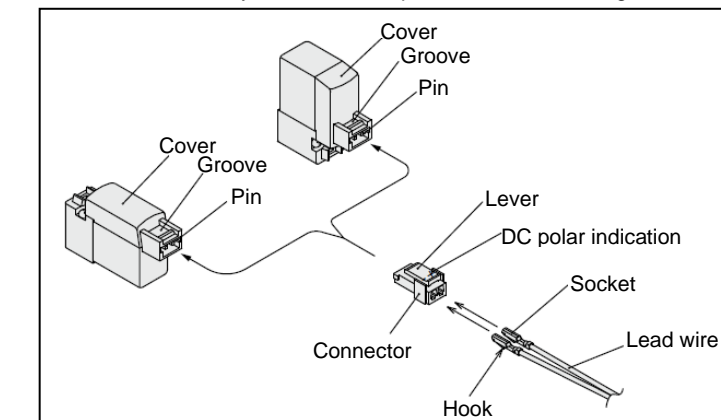


Figure 3

**Crimping connection of lead wire and socket**

Strip 3.2 to 3.7 mm at the end of lead wires, insert the end of the core wires evenly into the sockets, and then crimp it by a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area. (Please contact SMC for the dedicated crimping tools.)

**3 Installation - continued**

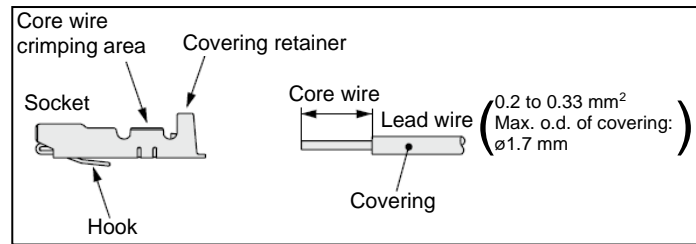


Figure 4

**Attaching and detaching lead wires with sockets**

**Attaching**

Insert the sockets into the square holes of the connection (+, - indication), and continue to push the sockets all the way in until the lock by hooking into the seats in the connector.

(When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

**Detaching**

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

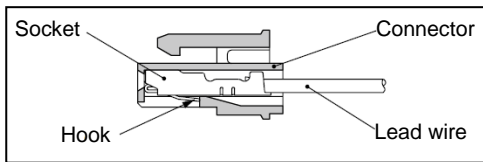


Figure 4

**3.8.2 Connectors**

**Grommet, L/M Plug Connector**

**3 Installation - continued**

- Connect the standard type in accordance with the +, - polarity indication (the non-polar type can be used with the connections made either way)
- When wiring is done at the factory, positive (+) is red and negative (-) is black.

**M8 Connector**

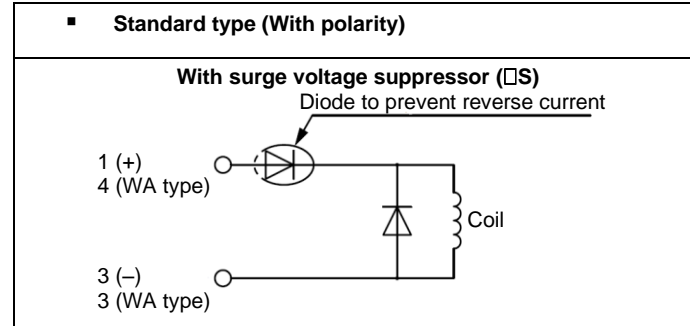


Figure 7

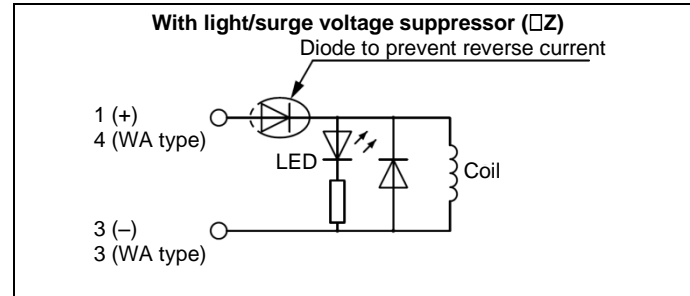


Figure 8

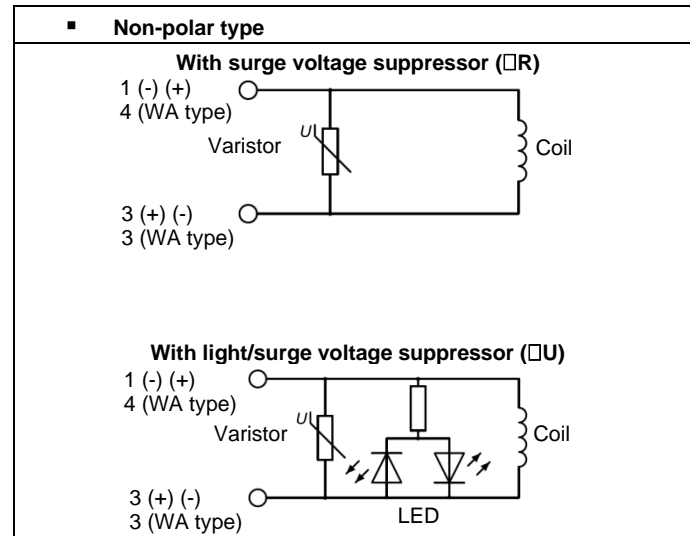


Figure 9

**Solenoid valve side pin wiring diagram**

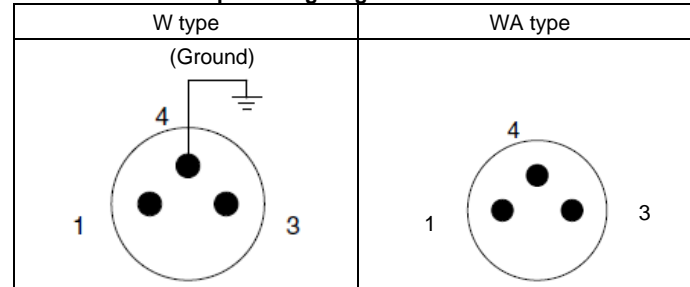


Figure 10

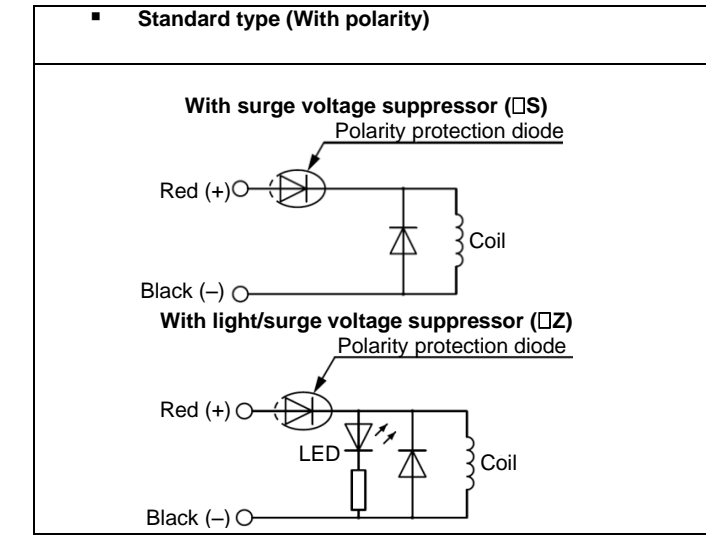


Figure 5

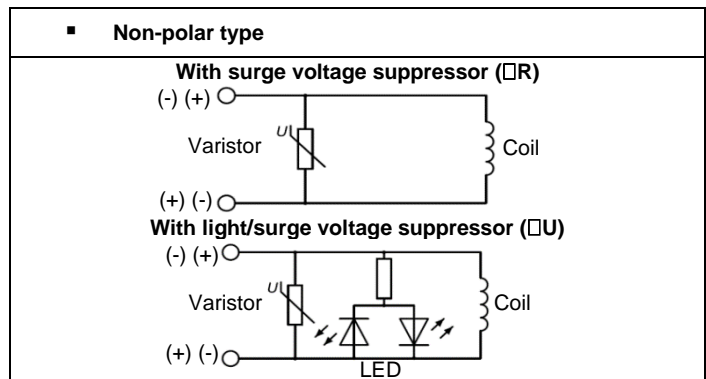


Figure 6

**3 Installation - continued**

- For the standard type, connect + to 1 and - to 3 for Type W according to polarity, while + to 4 and - to 3 for Type WA.
- For DC voltages other than 12 V and 24 V, incorrect wiring will cause damage to the surge suppressor circuit.
- The WA-type valve cannot be grounded.

**3.9 Wiring (Auto switch) - option**

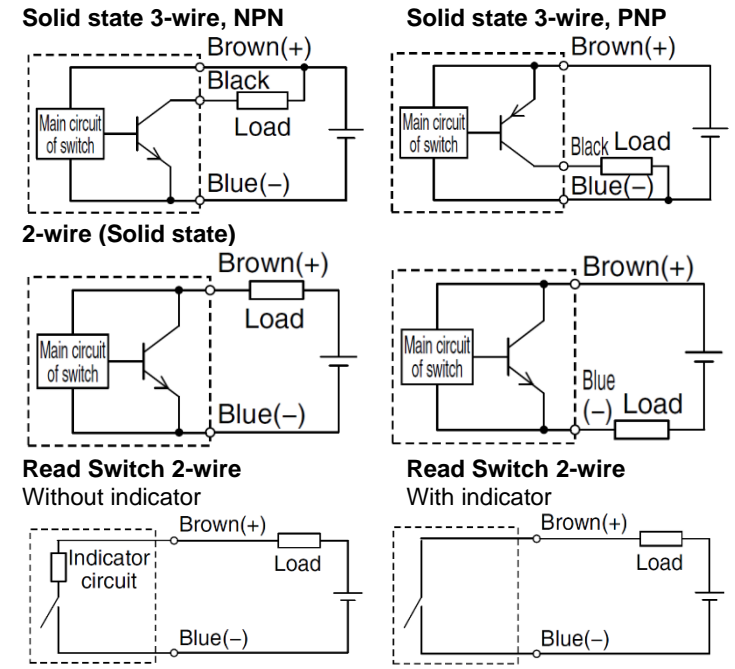


Figure 12

- Avoid repeatedly bending or stretching lead wires. Broken lead wires can result from wiring layouts which repeatedly applying bending stress or tensile force to the lead wires.

- Be sure to connect the load before power is applied. If the power is turned ON when an auto switch is not connected to a load, the switch will be instantly damaged due to excess current.
- Confirm proper insulation of wiring. Be certain that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.) Damage may occur due to excess current flowing into the switch.
- Do not route the wires with power lines or high voltage lines. Route wires separately from power lines or high voltage lines, avoiding parallel wiring or wiring in the same conduit. Control circuits containing auto switches may malfunction due to noise from these other lines.
- Do not allow short circuit of loads. If the power is turned ON with a load in a short circuit condition, the switch will be instantly damaged because of excess current flow into the switch.
- Avoid incorrect wiring. A 24 VDC switch with indicator light has polarity. The No.1 pin is (+), and the No.4 pin is (-)
- If connections are reversed, a switch will operate, however, the light emitting diode will not light up. Note that exceeding the specified current greater will damage the light emitting diode. It will no longer operate.

**3.10 Manual override (Solenoid valve)**

**Warning**

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

**Non-locking push type (Standard)**  
Press in the direction of the arrow.

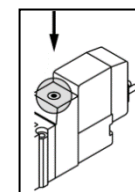


Figure 13

**4 How to Order**

Refer to drawings or catalogue for 'How to Order'.

**5 Outline Dimensions (mm)**

Refer to drawings or catalogue for outline dimensions.

**6 Maintenance**

**6.1 General Maintenance**

**Caution**

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly, compressed air can be dangerous.
- Maintenance of pneumatic systems should be performed only by qualified personnel.
- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the air is released to atmosphere.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.

**7 Limitations of Use**

**7.1 Limited warranty and disclaimer/compliance requirements**

Refer to Handling Precautions for SMC Products.

**Warning**

Do not exceed any of the specifications laid out in section 2 of this document or the specific product catalogue.

**Warning**

If a safe output from a safety relay or PLC is used to operate this valve, ensure that any output test pulse duration is shorter than 1 ms to avoid the valve solenoid responding.

**8 Product Disposal**

This product shall not be disposed of as municipal waste. Check your local regulations and guidelines to dispose this product correctly, in order to reduce the impact on human health and the environment.

**9 Contacts**

Refer to [www.smcworld.com](http://www.smcworld.com) or [www.smc.eu](http://www.smc.eu) for your local distributor/importer.

**SMC Corporation**

URL : <https://www.smcworld.com> (Global) <https://www.smc.eu> (Europe)  
SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan  
Specifications are subject to change without prior notice from the manufacturer.  
© 2021 SMC Corporation All Rights Reserved.  
Template DKP50047-F-085M