


# Vector inverter for lifts with synchronous/asynchronous motors

## ADL500

### Hardware and start up User Manual

Language: English

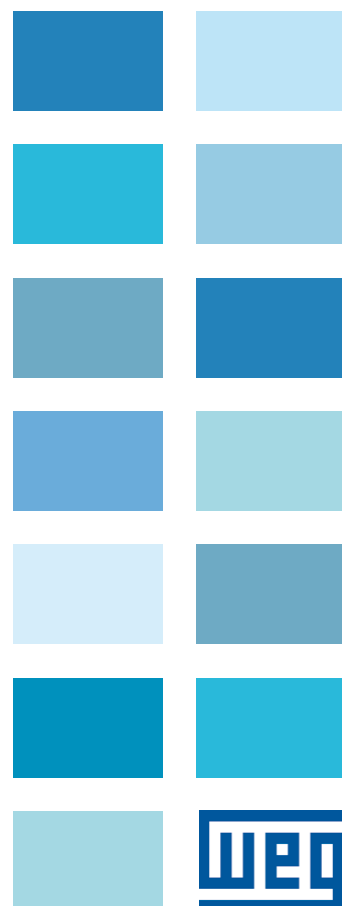

---

# Information about this manual

---

---

The ADL500 HW+QS (Hardware and Quick start guide) is a handy-sized manual for mechanical installation, electrical connection and fast start-up.

The manual of functions and parameter descriptions (ADL500 SW) can be found on the WEG website, DOWNLOAD CENTER section Center ([https://www.weg.net/catalog/weg/IT/en/p/MKT\\_WDC\\_GLOBAL\\_PRODUCT\\_INVERTER\\_FOR\\_ELEVATOR\\_ADL500](https://www.weg.net/catalog/weg/IT/en/p/MKT_WDC_GLOBAL_PRODUCT_INVERTER_FOR_ELEVATOR_ADL500))

## Firmware version

This manual is updated according to:

- firmware version V 3.x.2
- Lift application, EFC V 3.x.2

The identification number of the firmware version can be read in the datamatrix (see section 2.3 of this manual) or on parameter PAR 174 **Firmware Version** (DRIVE INFO menu).

## General information

### Note !

.....  
In industry, the terms "Inverter", "Regulator" and "Drive" are sometimes interchanged. In this document, the term "Drive" will be used.  
.....

Before using the product, read the safety instruction section carefully. Keep the manual in a safe place and available to engineering and installation personnel during the product functioning period.

WEG Automation Europe S.r.l. has the right to modify products, data and dimensions without notice. The data can only be used for the product description and they can not be understood as legally stated properties.

Thank you for choosing this WEG product.

We will be glad to receive any possible information which could help us improving this manual. The e-mail address is the following: [techdoc@weg.net](mailto:techdoc@weg.net).

All rights reserved.

---

# Summary

---

<b>Information about this manual .....</b>	<b>2</b>
<b>1 - Safety Precautions .....</b>	<b>5</b>
1.1 Symbols used in the manual .....	5
1.2 Safety precaution.....	5
1.3 General warnings .....	5
1.4 Instruction for compliance with UL Mark (UL requirements), U.S. and Canadian electrical codes.....	6
1.5 Disclaimer.....	6
<b>2 - Introduction to the product.....</b>	<b>7</b>
2.1 Dedicated features .....	8
2.2 Identification of components.....	9
2.3 Product identification .....	10
<b>3 - Transport and storage.....</b>	<b>11</b>
3.1 General.....	11
3.2 Permissible Environmental Conditions .....	11
<b>4 - Specification .....</b>	<b>12</b>
4.1 Environmental Conditions.....	12
4.2 Standards .....	12
4.3 Control modes .....	12
4.4 Precision.....	12
4.4.1 Speed control .....	12
4.4.2 Speed control limits .....	12
4.4.3 Torque control.....	13
4.4.4 Current rating .....	13
4.5 Input electrical data .....	13
4.6 Output electrical data.....	14
4.6.1 Derating values in overload condition .....	14
4.6.2 Derating values for switching frequency.....	14
4.6.3 K <sub>T</sub> : Ambient temperature reduction factor.....	15
4.7 Voltage level of the inverter for safe operations .....	15
4.8 No-load consumption (Energy rating) .....	15
4.9 Cooling .....	15
4.10 Weights and dimensions .....	16
<b>5 - Options .....</b>	<b>17</b>
5.1 External fuses .....	17
5.1.1 Network side fuses (F1) .....	17
5.2 Input chokes .....	17
5.2.1 DC input chokes .....	17
5.2.2 AC input chokes .....	17
5.3 AC output chokes .....	18
5.4 External braking resistors .....	19
5.5 EMC Filter.....	19
5.6 Ultracapacitor energy storage module.....	20
5.7 Emergency floor return battery (ADL5...-EMS).....	21
<b>6 - Mechanical Installation .....</b>	<b>22</b>
6.1 Maximum inclination and assembly clearances .....	22
6.2 Fastening positions.....	23
<b>7 - Wiring Procedure.....</b>	<b>24</b>
7.1 Location and identification of terminals and LEDs.....	25
7.2 Power section .....	26
7.2.1 Power terminals and connection .....	26
7.2.2 Cable cross-sections .....	26
7.2.3 Connection of shielding (recommended).....	26
7.2.4 EMC guide line.....	27
7.2.5 Block diagram of power section .....	27
7.2.6 Internal EMC filter (standard).....	28
7.2.7 Connection of AC and DC chokes (optional).....	28
7.3 Regulation section.....	28
7.3.1 Cable cross-sections .....	28
7.3.2 I/O and Relays connection .....	28
7.3.3 Feedback Connection .....	29
7.3.3.1 Phasing .....	35
7.3.4 +24V supply connection.....	36
7.3.5 Safety STO connection (SFTY-STO).....	36
7.3.6 Led .....	36

7.4 ETH-PC Ethernet Interface (RJ45 connector).....	37
7.4.1 Ethernet Configuration .....	37
7.4.2 Point-to-point network topology.....	37
7.5 CAN interface.....	38
7.6 Optional Keypad interface (RJ45 connector).....	39
7.7 USB port for data storage.....	39
7.8 Wi-Fi module port.....	39
7.9 Connection diagrams.....	40
7.9.1 Regulation potentials, digital I/O.....	40
7.9.2 Typical connection diagram.....	41
7.9.3 Safety connections.....	43
7.10 Emergency and plan replenishment in the event of a blackout.....	45
7.10.1 Emergency manoeuvres with cab movement for imbalance.....	45
7.10.2 Emergency manoeuvres battery saving.....	46
7.10.3 Emergency manoeuvres re-energizing the engine.....	46
7.10.4 Manoeuvres of return to the floor for imbalance in case of blackout.....	46
7.10.5 Manoeuvres of return to the floor battery saving in case of blackout.....	46
7.10.6 Return to the floor in case of blackout with EMS module (Models ADL5.0-...-EMS).....	47
7.10.7 Automatic manoeuvring to return to the floor in case of a blackout with UPS.....	48
7.11 Braking.....	49
7.11.1 Braking unit (internal).....	49
<b>8. Use of the optional keypad (KB-ADL500).....</b>	<b>51</b>
8.1 Description.....	51
8.1.1 Membrane keypad.....	51
8.1.2 Meaning of LEDs.....	51
8.2 Navigating with the optional keypad.....	52
8.2.1 Scanning of the first and second level menu.....	52
8.2.2 Display of a parameter.....	52
8.2.3 Scanning of the parameters.....	53
8.2.4 List of the last parameters modified.....	53
8.2.5 "FIND" function.....	53
8.2.6 Parameter modification.....	53
8.2.7 How to save parameters.....	55
8.2.8 Configuration of the display.....	56
8.2.8.1 Language selection.....	56
8.2.8.2 Access level selection.....	57
8.2.9 Startup display.....	57
8.2.10 Back-lighting of the display.....	57
8.2.11 Alarms.....	57
8.2.11.1 Alarm reset.....	58
8.2.12 Messages.....	58
8.2.13 Saving and recovery of new parameter settings.....	58
8.2.13.1 Saving and recovery of new parameter settings on optional keypad KB-ADL500.....	58
8.2.13.2 Saving and recovery of new parameter settings on USB.....	60
8.2.14 Asynchronous/Synchronous selection.....	60
<b>9 - Commissioning via keypad.....</b>	<b>62</b>
9.1 DRIVE SETUP.....	63
9.2 STARTUP WIZARD for Asynchronous motor.....	64
9.3 STARTUP WIZARD for brushless motors.....	71
9.4 OPTIMIZATION WIZARD.....	78
9.5 TROUBLESHOOTING.....	79
<b>10 - Troubleshooting.....</b>	<b>80</b>
10.1 Alarms.....	80
10.1.1 EFC application alarms.....	84
10.2 Speed fbk loss alarm according to the type of feedback.....	85
10.2.1 Reset Speed fbk loss alarm.....	87
10.2.2 Encoder error alarm.....	87
10.3 Messages.....	88
<b>Appendix.....</b>	<b>91</b>
A.1 - Optional cards.....	91
A.1.1 - Installation.....	91
A.1.2 - Optional card EXP-IO1-ADL500.....	92
A.1.3 - Optional card EXP-DCP-ADL500.....	93
A.2 - Input/Output features.....	94
A.2.1 Selection of Voltage/Current at analog input AI1.....	96
A.3 - Windows PC Network Configuration.....	96
A.4 - Brake monitoring system.....	97
A.4.1 Introduction.....	97
A.4.2 Configuration of the brake fault alarm.....	97
A.4.3 Maintenance of the brake fault alarm function.....	98
A.4.4 Troubleshooting.....	99

# 1 - Safety Precautions

## 1.1 Symbols used in the manual



Indicates a procedure, condition, or statement that, if not strictly observed, could result in personal injury or death.



Indicates a procedure, condition, or statement that, if not strictly observed, could result in damage to or destruction of equipment.



Indicates that the presence of electrostatic discharge could damage the appliance. When handling the boards, always wear a grounded bracelet.



Indicates a procedure, condition, or statement that should be strictly followed in order to optimize these applications.



Indicates an essential or important procedure, condition, or statement.

### Qualified personnel

For the purpose of this Instruction Manual, a "Qualified person" is someone who is skilled to the installation, mounting, start-up and operation of the equipment and the hazards involved. This operator must have the following qualifications:

- trained in rendering first aid.
- trained in the proper care and use of protective equipment in accordance with established safety procedures.
- trained and authorized to energize, de-energize, clear, ground and tag circuits and equipment in accordance with established safety procedures.

### Use for intended purpose only

The power drive system (electrical drive + application plant) may be used only for the application stated in the manual and only together with devices and components recommended and authorized by WEG.

## 1.2 Safety precaution

The following instructions are provided for your safety and as a means of preventing damage to the product or components in the machines connected. This section lists instructions, which apply generally when handling electrical drives. Specific instructions that apply to particular actions are listed at the beginning of each chapters.

Read the information carefully, since it is provided for your personal safety and will also help prolong the service life of your electrical drive and the plant you connect to it.

## 1.3 General warnings

**This equipment contains dangerous voltages and controls potentially dangerous rotating mechanical parts. Non-compliance with Warnings or failure to follow the instructions contained in this manual can result in loss of life, severe personal injury or serious damage to property.**

**Drives cause mechanical movements. The user is responsible for ensuring that these mechanical movements do not result in insecurity. The manufacturer's safety locks and operating limits shall not be bypassed or modified.**

**Only suitable qualified personnel should work on this equipment, and only after becoming familiar with all safety notices, installation, operation and maintenance procedures contained in this manual. The successful and safe operation of this equipment is dependent upon its proper handling, installation, operation and maintenance.**

**In the case of faults, the drive, even if disabled, may cause accidental movements if it has not been disconnected from the mains supply.**

### Electrical Shock

**The DC link capacitors remain charged at a hazardous voltage even after cutting off the power supply.**

**Never open the device or covers while the AC Input power supply is switched on. Minimum time to wait before working on the terminals or inside the device is listed in section "4.7 Voltage level of the inverter for safe operations" on page 16.**

**Electrical Shock and Burn Hazard:**

When using instruments such as oscilloscopes to work on live equipment, the oscilloscope's chassis should be grounded and a differential probe input should be used. Care should be used in the selection of probes and leads and in the adjustment of the oscilloscope so that accurate readings may be made. See instrument manufacturer's instruction book for proper operation and adjustments to the instrument.

**Fire and Explosion Hazard:**

Fires or explosions might result from mounting Drives in hazardous areas such as locations where flammable or combustible vapors or dusts are present. Drives should be installed away from hazardous areas, even if used with motors suitable for use in these locations.

**1.4 Instruction for compliance with UL Mark (UL requirements), U.S. and Canadian electrical codes**

**Short circuit ratings**

ADL500 inverters must be connected to a mains capable of supplying a symmetrical short-circuit power of less than or equal to "xxxx A rms.

The values of the "xxxx" A rms short-circuit current, in accordance with UL requirements ( ASME17.5/CSA B44.1 ), for each motor power rating (Pn mot in the manual) are shown in the table below.

Short current rating	
Pn mot (kW)	SCCR ( A )
1,1...37,3	5000
39...149	10000

**Note!**

Drive must be protected by semiconductor Fuse type as specified in the instruction manual.

**Branch circuit protection**

In order to protect drive against over-current use fuses specified in **par. 5.1**.

**Environmental condition**

The drive has to be considered "Open type equipment". Max surrounding air temperature equal to 40°C. Pollution degree 2. Additional details on operating temperatures can be found in section 4.1.

**Wiring of the input and output power terminals**

Use UL cables rated at 75°C and round crimping terminals (if necessary). If you choose to crimp the terminals, use a tool recommended by the terminal manufacturer.

Field wiring terminals shall be used with the tightening torque specified in "7.2.2 Cable cross-sections" on page 26 .

**Over-voltage control**

For Canadian installations only (CSA requirements), the use of a COOPER BUSSMANN model SPP40SP3480PNG DIN rail snubber (or equivalent) is recommended on the power supply line, upstream of the drive.

**Minimum time required for safe DC-link voltage**

Before removing drive cover in order to access internal parts, after mains disconnection wait for time as follow:

Drive size	Safe time ( sec )
1 - 2	300

**Over-speed; over-load/current limit; motor overload**

Drive incorporate over-speed, over-current/current limit, motor overload protection. Instruction manual specify degree of protection and detailed installation instruction.

**1.5 Disclaimer**

Any remote connection functions shall be used only under adequate security conditions, in compliance with current regulatory provisions and only by properly trained personnel. The evaluation of such conditions is up to the user.

## 2 - Introduction to the product

The ADL500 is the result of WEG's experience in the civil lift engineering sector, gained from its commitment to working in close partnership with leading operators in the sector to develop technical solutions and application programs. The ADL500 integrates the most complete and advanced lift inverter technology, for maximum synergy with the full range of installation requirements but, above all, to offer a cost-effective and immediate solution for lift control systems. This drive is designed to power loads such as **asynchronous or synchronous** permanent magnet (brushless) motors, for applications in the lift sector.




This compact drive is suitable for installation in cabinets for roomless applications.

ADL500 is available in three configurations designed to be perfect for each category of lift:

**ADL550** for "High-end" buildings, advanced safety features (STO, SBT), DCP3 and DCP4 Green and Regeneration features, with an optional internal board;



**ADL530** for "Medium-end" buildings, motor control with and without gearboxes, simple start-up wizard and quick troubleshooting features;

**ADL510** for "Low-end" buildings or modernisations, easy to install, designed for motors with gearboxes, and optimised for open loop control;

			
	<b>ADL510</b>	<b>ADL530</b>	<b>ADL550</b>
<b>Control mode</b>	V/f open loop and closed loop Field oriented control closed loop (FOC)		
<b>Motor Type</b>	Asynchronous	Asynchronous, Synchronous	Asynchronous, Synchronous
<b>Max Output Frequency</b>	300Hz	300Hz	300Hz
<b>Switching Frequency</b>	10kHz (default)	10kHz (default)	10kHz (default)
<b>Overload</b>	183% x 10 s	183% x 10 s	183% x 10 s / 200% x 2 s
<b>Braking Unit</b>	Integrated	Integrated	Integrated
<b>EMI filter</b>	Integrated (ADL510-...-F models)	Integrated (ADL530-...-F models)	Integrated (ADL550-...-F models)
<b>Choke</b>	-	Integrated above 22kW	Integrated above 22kW
<b>Marks</b>	CE, UL	CE, UL	CE, UL
<b>Power Range</b>	4 ... 15kW	4 ... 15kW	4 ... 15kW
<b>Input Voltage Range</b>	3 ph 380 - 400VAC, 50/60Hz	3 ph 230-380-400-460-480VAC, 50/60Hz	3 ph 230-380-400-460-480VAC, 50/60Hz
<b>I/O</b>	8 digital inputs + 1 enable + 4 relay outputs + 1 analog input (used as speed reference)	8 digital inputs + 1 enable + 2 analog inputs (1 analog input for PTC motor thermal) + 4 relay outputs	8 digital inputs + 1 enable + 2 analog inputs (1 analog input for PTC motor thermal) + 2 Fast (Freeze) inputs + 4 relay outputs
<b>Optional expansion cards:</b>			
• I/O (EXP-IO1-ADL500) card (*)	-	-	Yes (4 digit. input + 2 digit. output)
• DCP3-DCP4 Protocols card (EXP-DCP-ADL500) (*)	-	-	Yes
<b>Encoder</b>	TTL and HTL (digital or sinusoidal) + Repetition (Incremental)	TTL and HTL (digital or sinusoidal), ENDAT, SINCOS, BISS, SSI + Repetition (Inc. and Abs.)	TTL, HTL, ENDAT, SINCOS, BISS, SSI + Repetition (Inc. and Abs.)
<b>USB 2.0 port</b>	-	Yes	Yes
<b>Ethernet port (100 Mbit/s)</b>	Yes	Yes	Yes
<b>Wi-Fi port</b>	-	Yes	Yes
<b>Wi-Fi external module</b>	-	Yes (optional)	Yes (optional)
<b>CANopen Lift 417</b>	-	Yes	Yes
<b>Safety STO (SIL3 – PLe)</b>	-	-	Yes
<b>Safe Brake Test (SBT)</b>	-	-	Yes
<b>+ 24 Vcc External</b>	-	-	Yes
<b>Combination with the electronic brake EBC</b>	-	-	Yes
<b>KB-ADL500 programming keypad</b>	Yes (optional)	Yes (optional)	Yes (optional)
<b>Removable terminals (Regulation section)</b>	Yes	Yes	Yes
<b>Diagnostic Leds</b>	BRK, CNT, EN, LIM, AL	BRK, CNT, EN, LIM, AL, CAN	BRK, CNT, EN, LIM, AL, CAN, S-BY, UP, DWN, PWR

(\*) Only one of the two boards can be installed.


## 2.1 Dedicated features

			
	ADL510	ADL530	ADL550
<b>Wi-Fi communication</b> Plug-in for optional Wi-Fi Drive Link module for wireless communication via WEG_Liftouch APP.	-	Yes	Yes
<b>WEG_LifTouch (App)</b> Fully responsive App, compatible with all major browsers on smartphones, tablets and PCs, and with any operating system.	-	Yes (optional)	Yes (optional)
<b>WEG_DriveLabs (Configurator)</b> Enhancement of WEG PC configurator features in the same "family feeling" programming. Includes an integrated real-time oscilloscope and 4 different levels of access.	Yes	Yes	Yes
<b>USB PORT</b> USB port for import/export of inverter files, motor pre-configuration files and selection of language.	-	Yes	Yes
<b>ETHERNET PORT</b> RJ-45 port for configuration via PC using the Modbus TCP/IP protocol. Can also be used to connect the inverter to a router for remote control.	Yes	Yes	Yes
<b>GREEN SOLUTIONS AND FEATURES</b> Regenerative configuration with external AFE200 modules and calculation of the energy saved. Stand-by feature that deactivates the power section when the system is stopped.	-	-	Yes
<b>Emergency batteries</b> Emergency battery management External batteries recharged during braking phase (with system external to the ADL500 drive).	Yes -	Yes -	Yes Yes
<b>Smooth Emergency</b> To be implemented by adding external systems.	-	Yes	Yes
<b>Optimised SLS control</b> Sensorless control optimised for asynchronous motors.	Yes	Yes	Yes
<b>Speed control</b> EFC (Elevator Floor Control) function: separate function for independent management of short floors, landing zone, re-starting with lift not at floor and automatic deceleration point calculation.	Yes	Yes	Yes
<b>Position control</b> EPC (Elevator Positioning Control) function: separate function for independent management of direct arrival at the floor with internal position regulator and saving of floor distances (system autotuning). In preparation.	-	Yes	Yes
<b>Lift sequence</b> Typical sequence of input/output signals used in civil lift engineering applications such as I/O management, braking, output contactor and door control.	Yes	Yes	Yes
<b>Anti rollback</b> The anti rollback function allows a synchronous motor start without counter-rotation.	-	Yes	Yes
<b>Parameters in linear unit</b> Possibility of selecting different engineering units (also with values for the US) for the main movement parameters, rpm (fpm) or m/s for speed, m/s <sup>2</sup> , m/s <sup>3</sup> (ft/s <sup>2</sup> , ft/s <sup>3</sup> ) for cabin acceleration.	Yes	Yes	Yes
<b>Lift mechanical parameters</b> Mechanical system parameters such as pulley diameter and speed ratio for converting system units and weights, system for calculating inertia and speed regulation for the desired response.	Yes	Yes	Yes
<b>Ramp generation</b> Independent configuration of acceleration and deceleration ramp parameters and of the 4 jerk values for maximum travelling comfort in the lift cabin. Two independent S-shaped ramps, selectable via digital input with 4 independent jerk settings. Dedicated deceleration ramp corresponding to the stop command.	Yes	Yes	Yes
<b>Multiple speeds</b> 8 internally settable speed reference values. Possibility of overwriting at start-up with additional values to ensure smooth starting.	Yes	Yes	Yes
<b>Pre-torque (load compensation)</b> Initialisation of the speed regulator by the weight sensor to prevent jerks or bumpy starting.	-	Yes	Yes
<b>Increased overload</b> Overload capacity in line with typical lift application load cycles.	Yes	Yes	Yes
<b>Fan control logic</b> The fan control logic activates the internal fans according to the temperature.	Yes	Yes	Yes
<b>Emergency single-phase power supply to return to the floor</b> In emergency conditions a 230 V single-phase supply voltage can be used to return the cabin to the floor by UPS power supply or batteries with EMS (integrated on ADL5...-...-EMS models).	Yes	Yes	Yes
<b>User-friendly menus</b> The menus feature lift-specific DISPLAY and motor STARTUP terminology	Yes	Yes	Yes
<b>Combination with the electronic brake EBC</b> In combination with the contactorless configuration, the use of the electronic brake also eliminates the brake contactors and manages and monitors the current passing in the brake coils,	-	-	Yes
<b>Saving parameters</b> Drive parameters can be saved on USB memory or WEBAPP. Drive parameters can be saved on Keypad.	- Yes	Yes Yes	Yes Yes



## 2.2 Identification of components

The inverter converts the constant frequency and voltage of an existing three-phase network into DC voltage, from which it obtains a new three-phase network with variable voltage and frequency. With this variable three-phase network the speed of three-phase asynchronous and synchronous motors can be controlled continuously.

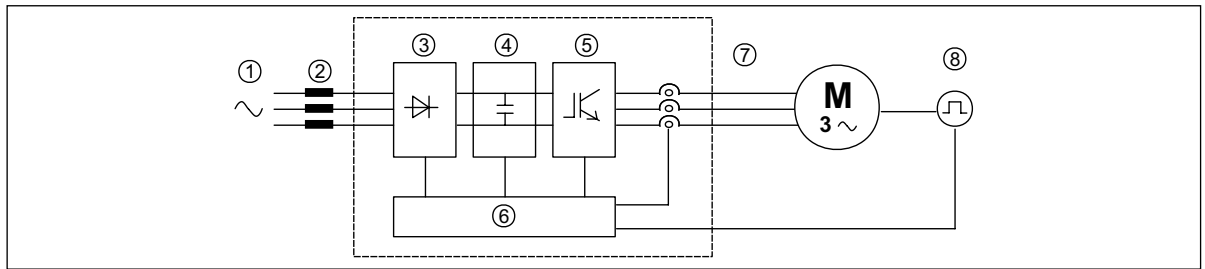

- 1. Mains supply voltage**
- 2. Mains choke (see chapter "5.2 Input chokes" on page 17).**
- 3. Three-phase rectifier bridge**  
Converts AC voltage into DC voltage via a three-phase full wave bridge.
- 4. Intermediate circuit**  
With pre-load resistor and levelling capacitors DC voltage ( $U_{DC} = \sqrt{2} \times \text{mains voltage (ULN)}$ )
- 5. IGBT inverter bridge**  
Converts DC voltage into three-phase AC voltage with variable amplitude and frequency
- 6. Configurable control section**  
Cards for controlling and regulating the closed and open-loop power section. Commands, references and reactions are connected to these.
- 7. Output voltage**  
Three-phase AC voltage.
- 8. Speed feedback encoder (see section "7.3.3 Feedback Connection" on page 29).**

## 2.3 Product identification

The basic technical data of the inverter are included in the product code, data plate and on DataMatrix code. In addition, the firmware version, the application version and other information such as the power board version and serial number and the control board serial number can be read in the dedicated parameters of the DRIVE INFO menu.

The inverter must be selected according to the rated current of the motor.

The rated output current of the drive must be higher than or equal to the rated current of the motor used.




The speed of the asynchronous motor depends on the number of pole pairs and frequency (plate and catalog data).

If using a motor at speeds above the rated speed, contact the motor manufacturer for any related mechanical problems (bearings, unbalance, etc.). The same applies in case of continuous operation at frequencies of less than approx. 20 Hz (inadequate cooling, unless the motor is provided with forced ventilation).

### Name of model (code)

**ADL550 1 040 - X B L - F -4 -EMS**

<b>Emergency Supply module:</b> EMS = integrated	
<b>Rated voltage:</b> 4 = 230-400-480Vac, three-phase	
<b>EMI Filter:</b> F = integrated	
<b>Lift application:</b> L = included	
<b>Braking unit:</b> X = not included B = included	
<b>Keypad:</b> X = without integrated keypad	
<b>Inverter power in kW:</b>	
040 = 4kW	220 = 22kW
055 = 5.5kW	300 = 30kW
075 = 7.5kW	370 = 37kW
110 = 11kW	450 = 45kW
150 = 15kW	550 = 55kW
185 = 18.5kW	750 = 75kW
<b>Mechanical dimensions of the drive:</b>	
1 = size 1	3 = size 3
2 = size 2	4 = size 4
	5 = size 5
<b>Inverter series:</b> ADL550 ADL530 ADL510	

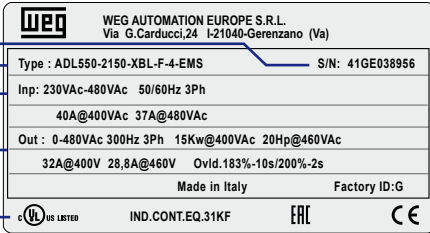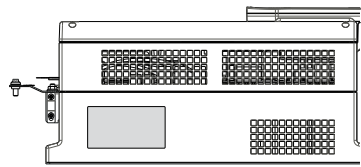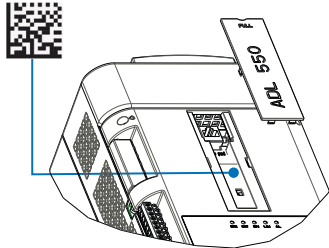Data plate	Position on the drive
<p>Serial number</p> <p>Drive model</p> <p>Input (mains supply, frequency, AC Input Current at constant torque)</p> <p>Output (Output voltage, frequency, power, current, overload)</p> <p>Approvals</p> 	
<p><b>DataMatrix code</b></p> <p>Two-dimensional matrix barcode, contains the following information:</p> <ul style="list-style-type: none"> <li>code</li> <li>type</li> <li>serial number</li> <li>versions of HMI firmware and DSP application firmware</li> <li>EFC application</li> <li>hardware revision</li> </ul> <p>The code can be read by smartphones using dedicated applications or with specific industrial readers.</p> <p><i><u>L.e.:</u></i></p> <p>S9DL5565. ADL550-2150-XBL-F-4-EMS. 41GE038956 - Fw. 222 210 Appl. EFC 2.2.0 REV. HW A1</p>	

# 3 - Transport and storage



**Attenzione!**

Correct transport, storage, erection and mounting, as well as careful operation and maintenance are essential for proper and safe operation of the equipment.

Protect the inverter against physical shocks and vibration during transport and storage. Also be sure to protect it against water (rainfall) and excessive temperatures.

If the Drives have been stored for longer than two years, the operation of the DC link capacitors may be impaired and must be "reformed". Before commissioning devices that have been stored for long periods, connect them to a power supply for two hours with no load connected in order to regenerate the capacitors, (the input voltage has to be applied without enabling the drive).

## 3.1 General

A high degree of care is taken in packing the ADL Drives and preparing them for delivery. They should only be transported with suitable transport equipment (see weight data). Observe the instructions printed on the packaging. This also applies when the device is unpacked and installed in the control cabinet.

Upon delivery, check the following:

- the packaging for any external damage;
- whether the delivery note matches your order.

Open the packaging with suitable tools. Check whether:

- any parts were damaged during transport;
- the device type corresponds to your order.

In the event of any damage or of an incomplete or incorrect delivery please notify the responsible sales offices immediately. The devices should only be stored in dry rooms within the specified temperature ranges.

**Note!**

A certain degree of moisture condensation is permissible if this arises from changes in temperature. This does not, however, apply when the devices are in operation. Always ensure that there is no moisture condensation in devices that are connected to the power supply!

## 3.2 Permissible Environmental Conditions

### Temperature:

storage	_____	-25...+55°C (-13...+131°F), class 1K4 per EN50178
		-20...+55°C (-4...+131°F), for devices with keypad
transport	_____	-25...+70°C (-13...+158°F), class 2K3 per EN50178
		-20...+60°C (-4...+140°F), for devices with keypad

### Air humidity:

storage	_____	5% to 95 %, 1 g/m <sup>3</sup> to 29 g/m <sup>3</sup> (Class 1K3 as per EN50178)
transport	_____	95 % (3), 60 g/m <sup>3</sup> (4)

A light condensation of moisture may occur for a short time occasionally if the device is not in operation (class 2K3 as per EN50178)

### Air pressure:

storage	_____	[kPa] 86 a 106 (class 1K4 as per EN50178)
transport	_____	[kPa] 70 a 106 (class 2K3 as per EN50178)


- (3) Greatest relative air humidity occurs with the temperature @ 40°C (104°F) or if the temperature of the device is brought suddenly from -25...+30°C (-13...+86°F).
- (4) Greatest absolute air humidity if the device is brought suddenly from 70...15°C (158...59°F).

# 4 - Specification

## 4.1 Environmental Conditions

<b>Installation location</b> _____	Pollution degree 2 or lower (free from direct sunlight, vibration, dust, corrosive or inflammable gases, fog, vapour oil and dripped water, avoid saline environment)
<b>Installation altitude</b> _____	Max 2000m (6562 feet) above sea level. With 1.2% reduction in output current for every 100 m starting from 1000 m.
<b>Mechanical conditions for installation</b> _____	Vibrational stress: EN 61800-2 Class 3M1
<b>Operating temperature</b> _____	<b>ADL550:</b> -10... +50°C (32°... 122°F) without derating <b>ADL530, ADL510:</b> -10... +40°C (+32... 104°F) without derating <b>ADL530, ADL510:</b> +40 ... +50°C (+104 ... 122°F) with 1% derating every °C starting from 40°C and up to 50°C. .
<b>Air humidity (operating)</b> _____	from 5 % to 85 % and from 1 g/m <sup>3</sup> to 25 g/m <sup>3</sup> with no humidity (or condensation)
<b>Air pressure (operating)</b> _____	from 70 to 106 kPa
<b>Storage</b> _____	CEI EN 61800-2 Class 1K4, CEI EN 61800-2 Class 1K3
<b>Maximum period of inactivity</b> _____	12 months

## 4.2 Standards

<b>Climatic conditions</b> _____	EN 60721-3-3
<b>Electrical safety</b> _____	EN 61800-5-1, ASME17.5/CSA B44.1
<b>EMC compatibility</b> _____	EN 12015* (with integrated filter), EN 12016, IEC/EN 61800-3 * <i>Must be guaranteed by the installer in the final equipment.</i>
<b>Protection degree</b> _____	IP20
<b>Approvals</b> _____	
<b>EC Directive</b> _____	LVD 2014/35/EU, EMC 2014/30/EU, Lift 2014/33/EU, RoHS 2011/65/EU, EN 50581:2012, Reach (1907/2006)
<b>Other elevator standards</b> _____	EN 81-20, EN 81-50, ASME 17.1/CSA B44.1

## 4.3 Control modes

<b>Motor control modes</b> _____	Open loop scalar V-f control for IM motors (OL-VF) Closed loop field-oriented control for IM motors (FOC-IM) Closed-loop field-oriented control for permanent magnet synchronous motors (FOC-PMSM)
----------------------------------	--

## 4.4 Precision

### 4.4.1 Speed control

<b>Speed control precision</b> _____	Flux vector CL control (FOC) with feedback: 0.01 % motor rated speed Open loop scalar V-f control (OL-VF) : ± 60 % rated slip of motor
--------------------------------------	---

### 4.4.2 Speed control limits

<b>Speed range (*)</b> _____	± 32000 rpm
<b>Speed format (*)</b> _____	32 bit
<b>Frequency range</b> _____	± 2000 Hz
<b>Max frequency</b> _____	Flux vector CL control with feedback and brushless: 300Hz, FVOL: 150 Hz, VF: 600 Hz
<b>Min frequency</b> _____	0 Hz

(\*) referred to Full scale speed, PAR:680.

#### 4.4.3 Torque control

Torque resolution (\*) \_\_\_\_\_ > 0.1 %  
 Torque control precision (\*) \_\_\_\_\_ Flux vector CL with feedback: ± 3%, Flux vector OL with feedback: ± 6%,  
 Direct torque control \_\_\_\_\_ yes  
 Current limitation \_\_\_\_\_ Limits ±, Mot/gen limits, Variable limits

(\*) referred to rated torque

#### 4.4.4 Current rating

Overload \_\_\_\_\_ **ADL550:** 183% \*10 sec e 200% \* 2 sec (output frequency from 0 Hz); CDF (Cyclic duration factor - Cycle S4 IEC 60034-1): 40%.  
**ADL530 and ADL510:** 183% \*10 sec (output frequency from 0 Hz); CDF (Cyclic duration factor - Cycle S4 IEC 60034-1): 40%.

Switching frequency \_\_\_\_\_ 10 kHz and 5 KHz

*The switching frequency is managed by the control algorithm in relation to the drive temperature, frequency and current.*

### 4.5 Input electrical data

Input voltage U<sub>LN</sub> \_\_\_\_\_ **ADL550:** three-phase 230 - 380 - 400 - 460 - 480 Vac -15%+10%  
**ADL530:** three-phase 230 - 380 - 400 - 460 - 480 Vac -15%+10%  
**ADL510:** three-phase 380 - 400 Vac -15%+10%  
 Maximum input voltage unbalance \_\_\_\_\_ 3 %  
 Connection to TT and TN Networks \_\_\_\_\_ yes, standard version  
 Connection to IT Networks or Regenerative \_\_\_\_\_ only on request (\*), please contact the WEG Customer Service.  
 Choke \_\_\_\_\_ Sizes 1...2: Optional (DC or AC)

**Note!**

See chapter "5.2 Input chokes" on page 17 for THD values in accordance with EN 12015 and for selection of external inductances.

SIZE	Input frequency (Hz)	Overvoltage threshold (Vcc)	Undervoltage threshold (Vcc)	EFFECTIVE INPUT CURRENT I <sub>N</sub> (@ I <sub>N</sub> OUT)			DC-Link Capacity (μF)
				@ 230 Vac (A)	@ 400 Vac (A)	@ 480 Vac (A)	
<b>ADL5...-...-4 , 3ph</b>							
1040	50/60 Hz, ± 2%	820 Vcc	@ 480 Vca = 470 Vcc @ 460 Vca = 450 Vcc @ 400 Vca = 391 Vcc @ 380 Vca = 371 Vcc @ 230 Vca = 225 Vcc	12	11	10	470
1055				17	16	15	680
1075				23	22	20	680
2110				31	29	26	1020
2150				42	40	37	1500

(\*) ADL500 can only operate on IT networks devoid of any faults (between active parts and PE) or in the presence of temporary faults.

Therefore an insulation monitor **MUST** be used to detect and enable prompt removal of any fault condition.

#### Insulation monitor

Since the ADL500 drive is normally used in a ground-insulated system (IT), in accordance with IEC 61557-8, use of insulation resistance monitoring is required.

The monitoring system must be able to detect insulation loss, both on the AC and DC power supply sides and on the motor side.

A ground fault must be promptly detected and removed as quickly as possible to avoid damage to either the inverter or the entire system as a unit (in the event of insulation loss, the drive must be immediately disabled and disconnected from power sources).

The insulation monitor must be selected on a case-by-case basis according to the power supply, connection system and type of drive.

Recommended insulation monitors e.g.: see the BENDER © ISOMETER® line.

**The insulation monitor must be plugged into the main power supply (if ADL500 is AC powered) or the DC side (if ADL300 is DC-powered).**

**The insulation monitor alarm threshold should be set to the highest possible resistance value.**



Attention

## 4.6 Output electrical data

Maximum output voltage  $U_2$  \_\_\_\_\_  $0.98 \times U_{LN}$  ( $U_{LN}$  = AC input voltage)  
 Maximum output frequency  $f_2$  \_\_\_\_\_ 300 Hz

The derating factors shown in the table below are applied to the rated DC output by the user. They are not automatically implemented by the drive:  $I_{drive} = I_n \times K_{ALT} \times K_T \times K_v$ .


SIZE	In Rated output current (fsw = default)			PN mot (Recommended motor power, fsw = default)			Reduction factor				IGBT braking unit
	@ $U_{LN}$ = 230V <sub>AC</sub>	@ $U_{LN}$ = 400V <sub>AC</sub>	@ $U_{LN}$ = 460V <sub>AC</sub>	@ $U_{LN}$ = 230V <sub>AC</sub>	@ $U_{LN}$ = 400V <sub>AC</sub>	@ $U_{LN}$ = 460V <sub>AC</sub>	$K_v$	$K_T$ ADL550	$K_T$ ADL510 ADL530	$K_{ALT}$	
	(A)	(A)	(A)	(kW)	(kW)	(Hp)	(1)	(2)	(3)	(4)	
<b>ADL500-...-4, 3ph</b>											
1040	9	9	8,1	2	4	5	0,95	1	0,90	1,2	Standard internal (with external resistor); braking torque 150% MAX
1055	13,5	13,5	12,2	3	5,5	7,5	0,95	1	0,90	1,2	
1075	18,5	18,5	16,7	4	7,5	10	0,95	1	0,90	1,2	
2110	24,5	24,5	22	5,5	11	15	0,95	1	0,90	1,2	
2150	32	32	28,8	7,5	15	20	0,95	1	0,90	1,2	

- (1)  $K_v$  : Derating factor for mains voltage at 460Vac and power supply from AFE200.
- (2)  $K_T$  (ADL550): no derating.
- (3)  $K_T$  (ADL510/ADL530): Derating factor for ambient temperature of 50°C (1% every °C above 40°C).
- (4)  $K_{ALT}$  : Derating factor for installation at altitudes above 1000 meters a.s.l. Value to be applied = 1.2% each 100 m increase above 1000 m.  
 E.g.: Altitude 2000 m,  $K_{alt} = 1.2\% \times 10 = 12\%$  derating;  $I_n$  derated =  $(100 - 12)\% = 88\% I_n$

### 4.6.1 Derating values in overload condition

In overload conditions the output current DO NOT depends on the output frequency, as shown in the figure below.


Figure 4.6.1: Ratio between overload/output frequency (ADL500-...-4)

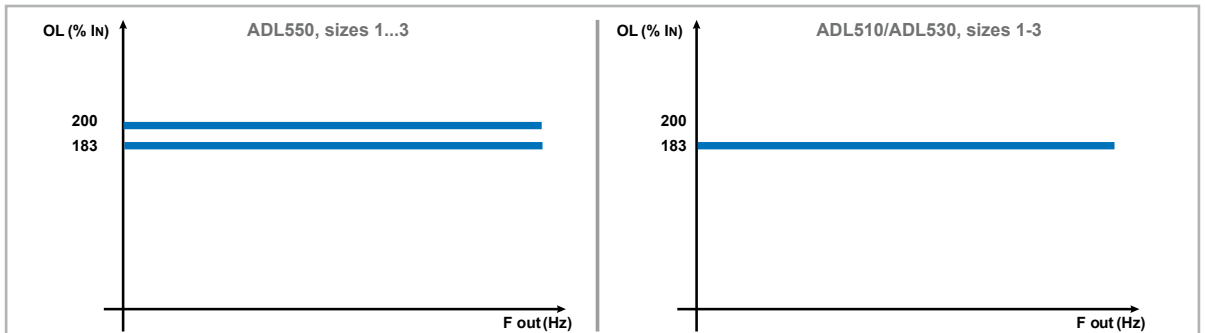

### 4.6.2 Derating values for switching frequency


The switching frequency is modified according to the inside temperature of the drive, as shown in the figure below.

Figure 4.6.2: Ratio between switching frequency/heat sink temperature

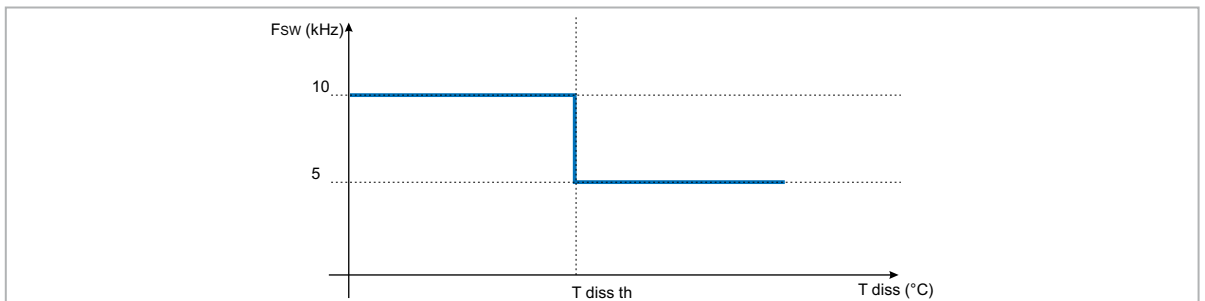

### 4.6.3 KT: Ambient temperature reduction factor

Figure 4.6.3: Tamb reduction coefficient

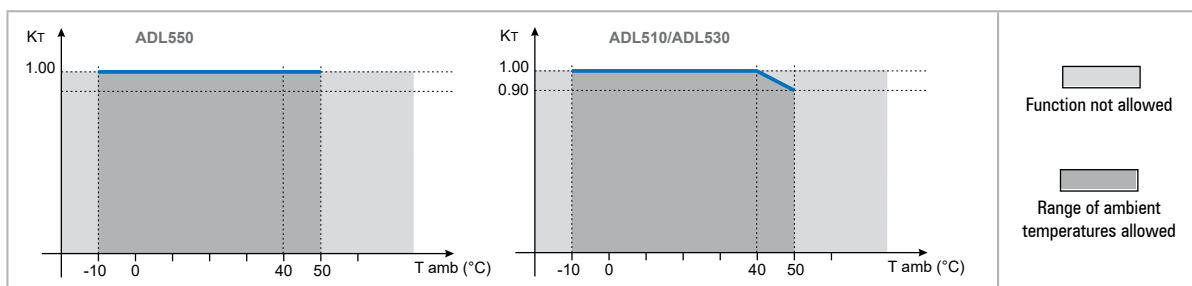

### 4.7 Voltage level of the inverter for safe operations

The **minimum time** between the moment in which an ADL500 inverter is disabled from the mains and that in which an operator can operate on internal parts of the inverter, without the danger of electric shock, **is 5 minutes**.



.....  
 This value takes into account the time to turn off an inverter supplied at 460 Vac + 10%, without any options (time indicated for disabled inverter condition).  
 .....

### 4.8 No-load consumption (Energy rating)

Size	No. of pre-loads allowed	Power-on time [secs]	Idle* consumption "Fan Off" [W]	Fan consumption [W]	Idle* consumption "Fan On" [W]
<b>ADL5...-...-4, 3ph</b>					
1040	1 each 20 sec.	5 abt.	20	8	28
1055	1 each 20 sec.	5 abt.	20	10	30
1075	1 each 20 sec.	5 abt.	20	10	30
2110	1 each 20 sec.	5 abt.	20	10	30
2150	1 each 20 sec.	5 abt.	20	16	36

\* Idle = drive powered by three-phase power supply and ready to start.


### 4.9 Cooling

Size	Pv (Heat dissipation)	Fan capacity		Minimum cabinet opening for cooling (cm <sup>2</sup> )
	@U <sub>LN</sub> =230...460V <sub>AC</sub> (*)	Heat sink (m <sup>3</sup> /h)	Internal (m <sup>3</sup> /h)	
<b>ADL5...-...-4, 3ph</b>				
1040	150	2 x 35	-	72
1055	250	2 x 58	-	144
1075	350	2 x 58	-	144
2110	400	2 x 58	-	144
2150	600	2 x 58	-	328

(\*) : valori riferiti alla frequenza di switching in condizioni di default.


## 4.10 Weights and dimensions

Figure 4.9.1: Size 1 dimensions

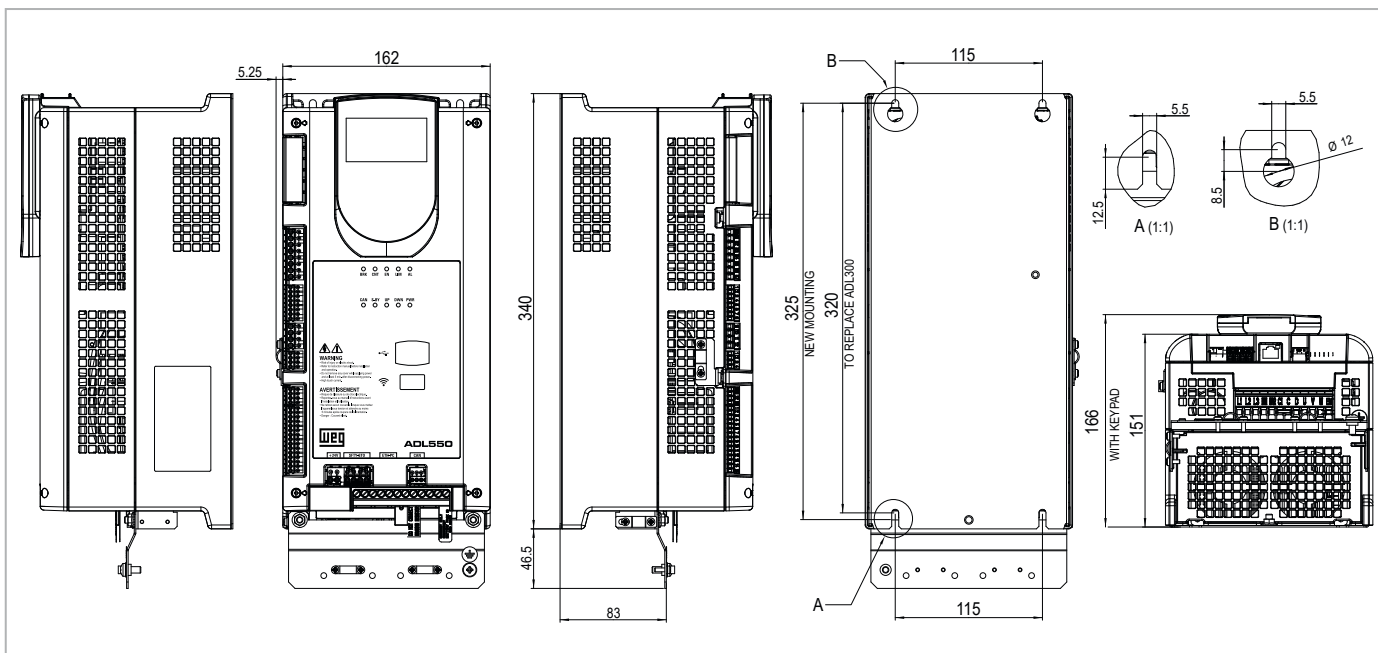

Sizes	Dimensions: Width x Height x Depth		Weight	
	(mm)	(inches)	(kg)	(lbs)
ADL510-1... ADL530-1... ADL550-1...	162 x 340 x 151	6,38 x 13,38 x 5,9	5,5	12,1

Figure 4.9.2: Size 2 dimensions

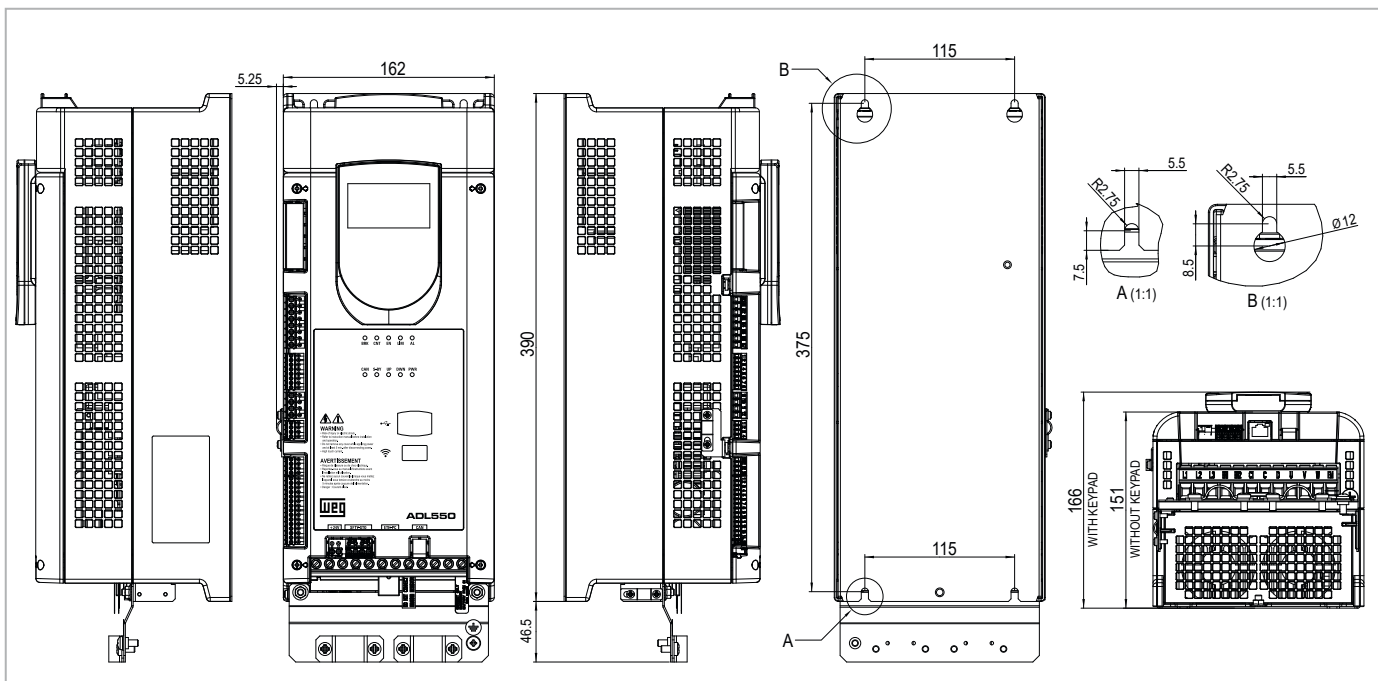

Sizes	Dimensions: Width x Height x Depth		Weight	
	(mm)	(inches)	(kg)	(lbs)
ADL510-2... ADL530-2... ADL550-2...	162 x 390 x 151	6,38 x 15,35 x 5,94	7,0	15,4



# 5 - Options

## 5.1 External fuses

### 5.1.1 Network side fuses (F1)

The inverter must be fused upstream on the network side.  
Use fast-acting fuses only.

Size	F1 - External network side fuses				
	DC link capacitor hours of service life [h]	EUROPE		AMERICA	
		Type	Code	Type	Code
<b>ADL5...-...-4, 3ph</b>					
1040	> 15000	GRD2/20	F4D15	A70P20	S7G48
1055	> 15000	GRD2/25	F4D16	A70P25	S7G51
1075	> 15000	GRD3/35	F4D20	A70P40	S7G52
2110	> 15000	Z22GR40	F4M16	A70P40	S7G52
2150	> 15000	Z22GR63	F4M17	A70P60-4	S7I34

Technical data for fuses, including dimensions, weights, power leakage, fuse carriers etc. are reported in the corresponding manufacturers' data sheets:  
GRD... (Size E27), Z22... = Jean Müller, Eltville; A70...= Ferraz.

## 5.2 Induttanze di ingresso

In accordance with EN 12015, to obtain THD values < 35%, provide DC input inductance (see paragraph 5.2.1).

The AC input chokes are strongly recommended in order to:

- limit the RMS input current of the ADL500 inverter.
- increase the life of intermediate circuit capacitors and reliability of input diodes.
- reduce mains harmonic content.
- reduce problems due to power supply via a low impedance line ( $\leq 1\%$ ).

### 5.2.1 DC input chokes

Size	Effective input current In (with external DC chokes)			External DC chokes					
	@230V/50Hz	@400V/50Hz	@480V/50Hz	Rated current	Overload current	Model	Code	Dimensions: Width x Height x Depth	Weight
	(A)	(A)	(A)	(Arms)	(*) (Arms)			mm [inches]	kg [lbs]
<b>ADL5...-...-4, 3ph</b>									
1040	8	8	7,5	10	20	LDC-004	S7AI10	99 x 96 x 93 [3,90 x 3,78 x 3,66]	2,4 [5,3]
1055	12	12	11	16	31	LDC-005	S7AI11	125 x 112 x 98 [4,92 x 4,41 x 3,86]	4,1 [9,0]
1075	16	16	14	21	41	LDC-007	S7AI12	125 x 127 x 122 [4,92 x 5,00 x 4,80]	4,9 [10,8]
2110	21	21	18	28	54	LDC-011	S7AI13	125 x 127 x 142 [4,92 x 5,00 x 5,59]	6,6 [14,6]
2150	28	28	25,5	36	70	LDC-015	S7AI14	125 x 127 x 152 [4,92 x 5,00 x 5,98]	8 [17,6]

### 5.2.2 AC input chokes

Size	Effective input current In (@400V/50Hz, with AC input chokes) (A)	Model	Code	Dimensions: Width x Height x Depth mm [inches]	Weight kg [lbs]
<b>ADL5...-...-4, 3ph</b>					
1040	9	LR3y-2040	S7AAG	120 x 125 x 65 [4,7 x 4,9 x 2,6]	2 [4,4]
1055	13,5	LR3y-2055	S7AB5	120 x 125 x 75 [4,7 x 4,9 x 2,6]	2,2 [4,4]
1075	18	LR3y-2075	S7AB6	150 x 155 x 79 [5,9 x 6,1 x 3,1]	4,9 [10,8]
2110	24	LR3y-3110	S7AB7	150 x 155 x 79 [5,9 x 6,1 x 3,1]	5 [11]
2150	32	LR3y-3150	S7AB8	150 x 169 x 85 [5,9 x 6,7 x 3,3]	5,5 [12,1]

(\*) 10s every 60s.  
Max room operating temperature = 50°C [122°F].

## 5.3 AC output chokes

The ADL500 inverter can be used with standard motors or motors designed specifically for use with inverters. The latter usually have a higher isolation rating to better withstand PWM voltage. Examples of reference regulations are provided below: motors designed for use with inverters do not require any specific filtering of output from the inverter. For standard motors, especially with long cable runs (typically over 100 m) an output choke may be necessary to maintain the voltage waveform with the specified limits.

The range of recommended chokes are listed in the following table. The rated current of the chokes should be approx. 20% higher than that of the inverter in order to take into account additional losses due to modulation of the output waveform.

Size	Model	Code	Dimensions:	Weight
			Width x Height x Depth mm [inches]	
<b>ADL5...-4, 3ph</b>				
1040	LU3-005	S7FG3	180 x 170 x 110 [7,1 x 6,7 x 4,3]	5,8 [12,8]
1055	LU3-005	S7FG3	180 x 170 x 110 [7,1 x 6,7 x 4,3]	5,8 [12,8]
1075	LU3-011	S7FG4	180 x 180 x 130 [7,1 x 7,1 x 5,1]	8 [17,6]
2110	LU3-011	S7FG4	180 x 180 x 130 [7,1 x 7,1 x 5,1]	8 [17,6]
2150	LU3-015	S7FH2	180 x 160 x 170 [7,1 x 6,3 x 6,7]	7,5 [16,5]

**Note !**

With the inverter operated at the rated current and a frequency of 50 Hz, the output chokes cause a voltage drop of approx. 2% of the output voltage.

## 5.4 External braking resistors

Recommended combinations for use with internal braking unit.

Table 5.4.1: Recommended combination

Size	List and technical data of standard external resistors										
	Resistor type	Code	Q.ty	P <sub>BR</sub> Braking Power		P <sub>NBR</sub> (W)	R <sub>BR</sub> (Ω)	Housing	Dimensions: Width x Height x Depth (mm)	Weight (kg)	
				Duty cycle 10% (*) (kW)	Duty cycle 25% (*) (kW)						
<b>Low &amp; Mid Demand Systems - ADL5...-4, 3ph</b>											
1040	BRK RES EC 1K5 68R T	S8SZ7	1	6.90	3.84	1500	68	IP20	431 x 135 x 80	2.2	
1055	BRK RES EC 1K5 68R T	S8SZ7	1	6.90	3.84	1500	68	IP20	431 x 135 x 80	2.2	
1075	BRK RES EC 1K5 49R T	S8SZ8	1	6.90	3.84	1500	49	IP20	431 x 135 x 80	2.2	
2110	BRK RES EC 2K 28R T	S8SZ9	1	9.20	5.12	2000	28	IP20	431 x 135 x 80	2.2	
2150	BRK RES EC 2K 28R T	S8SZ9	1	9.20	5.12	2000	28	IP20	431 x 135 x 80	2.2	
<b>High Demand Systems - ADL5...-4, 3ph</b>											
1040	BRK RES EC 3K 68R T	S8SZ10	1	13.80	7.68	3000	68	IP20	431 x 135 x 180	5.0	
1055	BRK RES EC 3K 68R T	S8SZ10	1	13.80	7.68	3000	68	IP20	431 x 135 x 180	5.0	
1075	BRK RES EC 4K 49R T	S8SZ11	1	18.40	10.24	4000	49	IP20	431 x 135 x 180	5.0	
2110	BRK RES EC 5K 28R T	S8SZ12	1	23.00	12.80	5000	28	IP20	431 x 135 x 266	7.5	
2150	BRK RES EC 8K 28R T	S8SZ13	1	36.80	20.48	8000	28	IP20	431 x 135 x 352	10.0	

**P<sub>NBR</sub>** Braking resistor rated power

**R<sub>BR</sub>** Braking resistor ohmic value

(\*) Max cycle period = 120s



**Warning!**

Braking resistors may be subject to unexpected overloads due to faults. Resistors **MUST** be protected using thermal cutouts. These devices must not interrupt the circuit in which the resistor is inserted but their auxiliary contact must cut off the power supply to the power section of the drive. If the resistor requires a protection contact, this must be used together with that of the thermal cutout.



**Caution**

### Braking resistors positioning requirements

The enclosure must be mounted on a flat surface, ideally horizontally with the solid plate at base.

CORRECT POSITIONING	UNCORRECT POSITIONING
<p style="text-align: center;">Solid plate at top preventing air flow</p> <p style="text-align: center;">The cable compartment must be at the bottom when the enclosure is mounted vertically</p>	<p style="text-align: center;">Enclosures stacked, preventing air flow</p>

## 5.5 EMC Filter

The ADL...-F models are standard equipped with an internal EMC filter to ensure compliance with the EN 12015 standard.


Shielded motor power cables with a maximum length of 10 m must be used and the shielding must be grounded at both ends.

## 5.6 Ultracapacitor energy storage module

The ADL500 inverter can be connected to energy recovery systems with ultra-capacitor modules. These modules store the energy lost by the lift during the motor braking stage and return it on the next travel, thus saving energy (the closer together the trips, the greater the savings) without harmonic distortion and no additional stand-by consumption.

The system recommended by WEG is a high-efficiency bidirectional DC/DC converter that integrates the ultra-capacitor energy storage module and connects it to the ADL500 inverter with a simple, two-wire connection.

Caratteristiche	Valori
Range di tensione del collegamento DC al convertitore di frequenza	500 ... 800V
Corrente massima attraverso il collegamento DC all'inverter	12,4A
Potenza massima	6,3kW
Efficienza unidirezionale	≤98%
Temperatura di funzionamento	5 ... 40°C
Peso	13 kg
Grado di protezione IP	IP2X
Distanza minima di montaggio superiore ed inferiore	> 250 mm
<b>Direttive</b>	Low Voltage Directive (2014/35/UE): EN 50178:1998  Electromagnetic Compatibility Directive (2014/30/UE): EN 12015:2014, EN 12016:2014

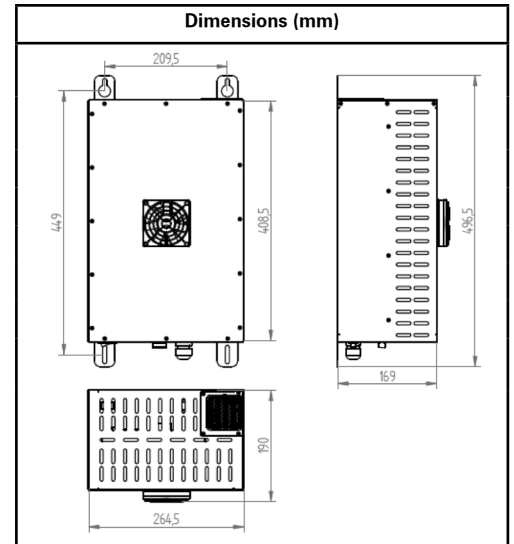

Additional technical specifications are available from the catalogue of the manufacturer: Epic Power Converters S.L. ©.

Recommended combination:

Sizes ADL5...-4, 3ph	Energy Recovery System module		Maximum cable cross-section (flexible conductor)	
	Model	Q.ty	(mm <sup>2</sup> )	AWG
1040	ERS 2G	1	4	10
1055	ERS 2G	1	4	10
1075	ERS 2G	1	4	10
2110	ERS 2G	1	16	6
2150	ERS 2G	1	16	6

The ERS 2G ® module is connected in parallel with the DC-Link, downstream of the drive's precharge resistor, directly to the DC-Link capacitors via terminals BR1 (+) and D (-).

The ERS 2G ® module DOES NOT REPLACE the braking resistor; this part remains mandatory.


Operation requires an enable signal, otherwise the module remains in stand-by and does not store or return energy to the drive.



**Warning!**

Install as indicated in the module manufacturer's installation manual, paying particular attention to the procedure and safety recommendations.

Figure 5.6.1: Connection for energy storage module ERS 2G

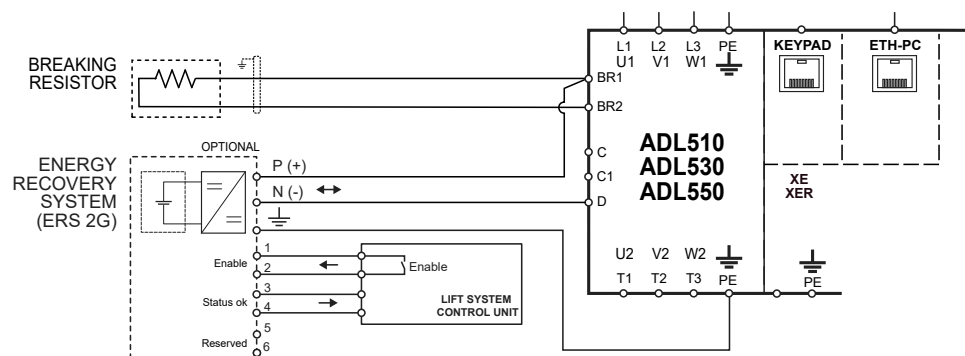

## 5.7 Emergency floor return battery (ADL5...-EMS)

Only for ADL510/530/550-...-EMS models (with integrated Emergency Mode Supply module).

In the event of a failure of the main power supply, the optional external battery pack powers the EMS circuit of ADL5...-EMS drives so the cabin can return to the floor.

Under such emergency conditions, the lift can move for a short travel (i.e. to reach the next floor).

The connection diagram is described in "Figure 7.9.5: Emergency connection diagram with EMS module" on page 47.

### Specifications

Battery voltage \_\_\_\_\_ 48V<sub>dc</sub> ...96V<sub>dc</sub> (120V<sub>dc</sub> considering an upper limit tolerance of 25%)  
 Rated battery current \_\_\_\_\_ equal to rated inverter current  
 Battery protection \_\_\_\_\_ the EMS circuit has an internal diode that protects the battery from the high DC LINK voltage.

### Battery connection

Battery terminals	ADL5...-EMS terminals	Cable section
+	EM	See section "7.2.1 Power terminals and connection" on page 26
-	D	

### Operating description

When the main input power supply fails, if the battery is connected and provides a voltage greater than 48V<sub>dc</sub>, the DC/DC converter is switched on (including the regulation board and all auxiliary circuitry for the gate drive, thermal sense, current feedback, etc.) and the microprocessor receives the "BATTERY\_ON" (battery connected) signal.

This signal does not provide any information about the battery charge.

If emergency input is not activated (dedicated digital input, PAR 11242), the precharge relay remains open because the DC\_LINK is below the minimum voltage threshold; no alarm is signalled until PWM is enabled.

Before enabling the emergency input, the main contactor K1M must open (to prevent unexpected reset of the main power supply which could damage the drive). A delay must be arranged to consider contactor K1M opening time before any further action can be taken (e.g. by providing an interlock between the main contactor and the emergency contactor KE so that the latter can only be enabled if K1M has opened).

Under normal and emergency operations, the KE contactor can remain closed and only be opened to switch off the system, thus saving the batteries after the emergency operation is completed.

To enable motor movement, the digital input must be activated to emergency mode (previously set through parameter 11242).

After selecting the emergency state, the undervoltage condition is eliminated and the precharge relay is closed. The unit is ready to operate and the lift can move to the evacuation floor.

After the lift has completed its travel (PWM OFF) and the external brake has been disabled (PAR 11242), emergency input must be disabled. Disabling the emergency input opens the precharge relay in about 200 ms and only afterwards the K1M contactor can be closed. Therefore, a minimum delay of 200 ms is mandatory from disabling the emergency digital input to connection of the main power supply to the contactor K1M.

When power is restored, the precharge relay is closed, the DC/DC converter is switched on and the drive is ready.

Under such conditions, the drive and lift system can operate normally.

The main power supply may be reinstated during the emergency trip: this will not damage the drive as the main contactor K1M must be kept open until the emergency trip has been terminated.

### Note !

The battery can always be connected to the drive (KE always closed).

Arrange for external battery charge monitoring and for an external charger; under this condition, the battery will supply a small amount of power to the drive.

An alternative is to close the KE only when emergency mode is selected.

In any case, battery monitoring and charger must be supplied externally.

### Emergency operation and connection diagram

See section "7.9.4 Blackout emergency manoeuvres" on page 49 and "Figure 7.9.5: Emergency connection diagram with EMS module" on page 47.

## 6 - Mechanical installation



**Caution**

The Drive must be mounted on a wall that is constructed of heat resistant material. While the Drive is operating, the temperature of the Drive's cooling fins can rise to a temperature of 158° F (70°C).

Because the ambient temperature greatly affects Drive life and reliability, do not install the Drive in any location that exceeds the allowable temperature.


Be sure to remove the desiccant dryer packet(s) when unpacking the Drive. (If not removed these packets may become lodged in the fan or air passages and cause the Drive to overheat).

Protect the device from impermissible environmental conditions (temperature, humidity, shock etc.).


### 6.1 Maximum inclination and assembly clearances

The inverters must be mounted in such a way that air can flow freely around them, see paragraph 4.8 Cooling.

Maximum angle of inclination	_____	30° (referred to vertical position)
Minimum top and bottom distance	_____	150 mm
Minimum free space to the front	_____	25 mm
Minimum distance between drives	_____	25 mm
Minimum distance to the side with the cabinet	_____	25 mm

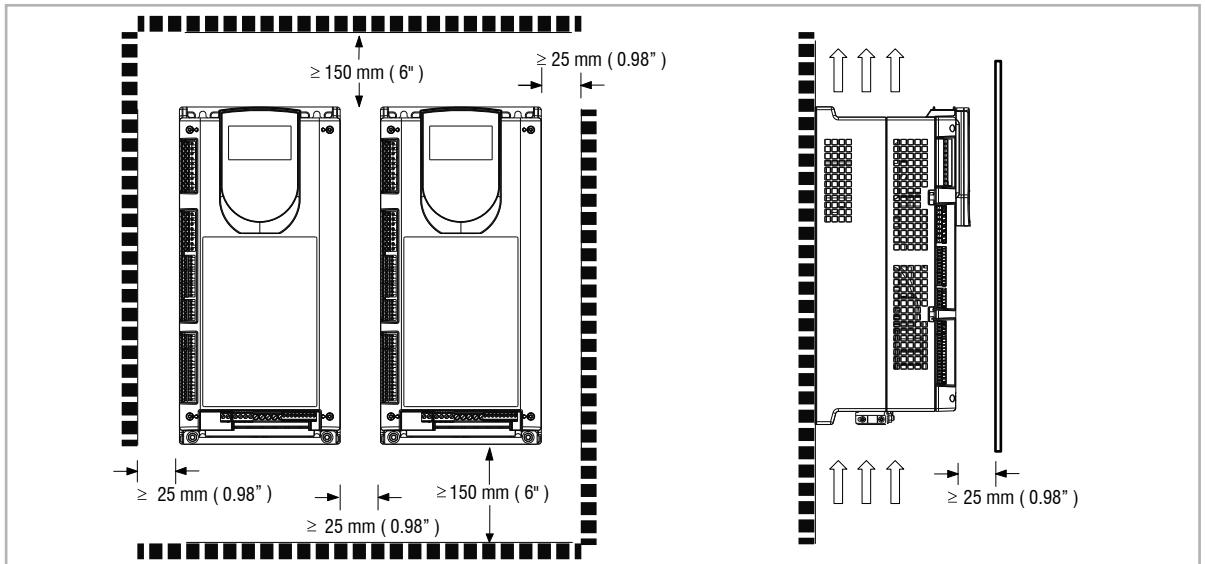

## 6.2 Fastening positions

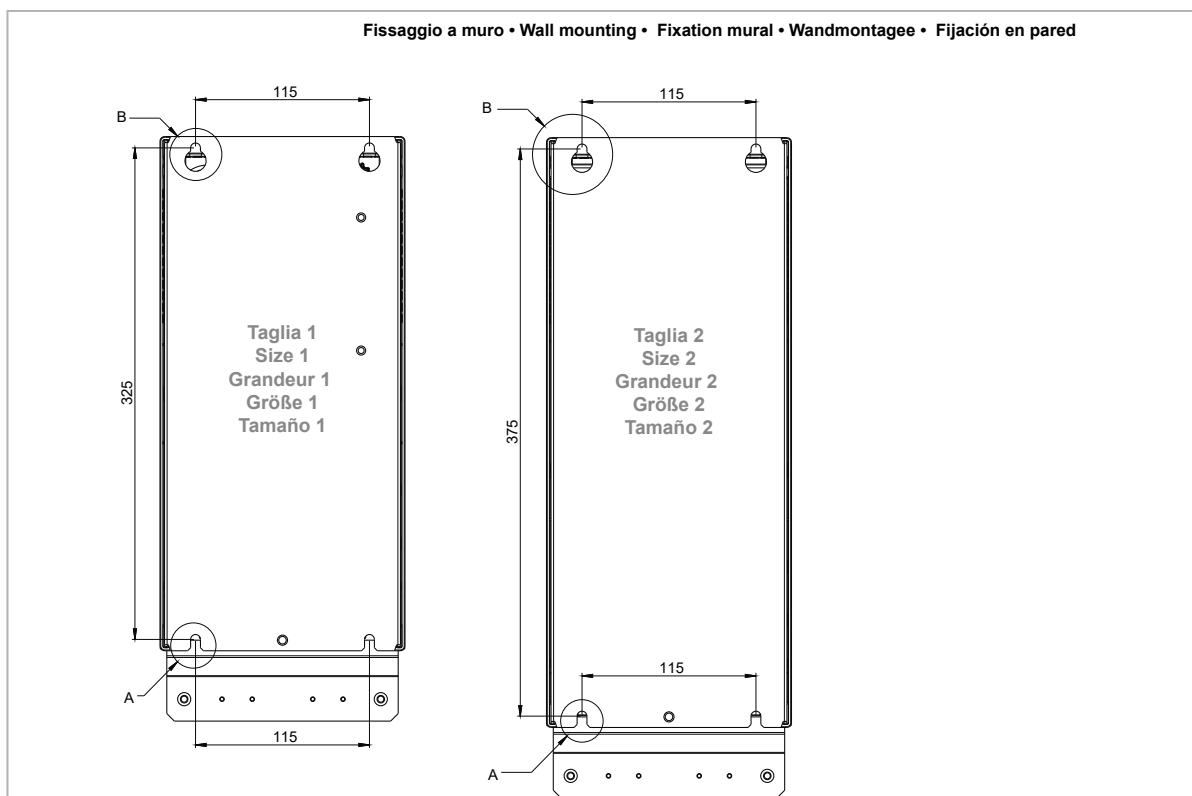

	Recommended screws for fastening
<b>Size 1 (ADL5...-1...)</b>	4 x M5 x 12 mm screws + Grover (spring-lock) washer + flat washer
<b>Size 2 (ADL5...-2...)</b>	4 x M5 x 12 mm screws + Grover (spring-lock) washer + flat washer

**Note!**

Other dimensions see chapter "4.10 Weights and dimensions" on page 16.

# 7 - Wiring Procedure



**Warning!**

Adjustable frequency ADL500 drives are electrical apparatus for use in for civil lifting installations.

Parts of the Drives are energized during operation. The electrical installation and the opening of the device should therefore only be carried out by qualified personnel.

Improper installation of motors or Drives may therefore cause the failure of the device as well as serious injury to persons or material damage.

Drive is not equipped with motor overspeed protection logic other than that controlled by software. Follow the instructions given in this manual and observe the local and national safety regulations applicable.

Replace all covers before applying power to the Drive. Failure to do so may result in death or serious injury.



**Warning!**

The drive must always be grounded. If the drive is not connected correctly to ground, extremely hazardous conditions may be generated that may result in death or serious injury.

Never open the device or covers while the AC Input power supply is switched on. Minimum time to wait before working on the terminals or inside the device is listed in section "4.7 Voltage level of the inverter for safe operations" on page 15.

Do not touch or damage any components when handling the device. The changing of the isolation gaps or the removing of the isolation and covers is not permissible.



**Caution**

Do not connect power supply voltage that exceeds the standard specification voltage fluctuation permissible. If excessive voltage is applied to the Drive, damage to the internal components will result.

## Operation with Residual Current Device (Differential switch)

When a residual current device (RCD) is used for protection against electric shock, only a type B RCD is allowed on the supply side of this product. All upstream RCDs, up to the power transformer, must be type B. This device must have a high leakage current ( $\geq 300$  mA).

RCD: Residual Current Device

RCCB: Residual Current Circuit Breaker

ELCB: Earth Leakage Circuit Breaker

## **Note !**

The residual current operated circuit-breakers used must provide protection against direct-current components in the fault current and must be suitable for briefly suppressing power pulse current peaks. It is recommended to protect the frequency inverter by fuse separately.

The regulations of the individual country (e.g. VDE regulations in Germany) and the regional power suppliers must be observed!

Functioning of the Drive without a ground connection is not permitted. To avoid disturbances, the armature of the motor must be grounded using a separate ground connector from those of other appliances.

The grounding connector shall be sized in accordance with regulations and national electrical codes (NEC) of reference. For applications according to North American standards, the connection shall be made by a UL listed or CSA certified closed-loop terminal connector sized for the wire gauge involved. The connector is to be fixed using the crimp tool specified by the connector manufacturer.

Do not perform a megger test between the Drive terminals or on the control circuit terminals.

No voltage should be connected to the output of the drive (terminals U2, V2 W2). The parallel connection of several drives via the outputs and the direct connection of the inputs and outputs (bypass) are not permissible.


The electrical commissioning should only be carried out by qualified personnel, who are also responsible for the provision of a suitable ground connection and a protected power supply feeder in accordance with the local and national regulations. The motor must be protected against overloads.

The storage of the Drive for more than two years could damage the operating capacity of the DC link capacitors, which must therefore be "restored".

Before the commissioning of devices left in storage for such a long period, we recommend a power supply of at least two hours without load in order to regenerate the capacitors (the input voltage must be applied without enabling the Drive).



## 7.1 Location and identification of terminals and LEDs

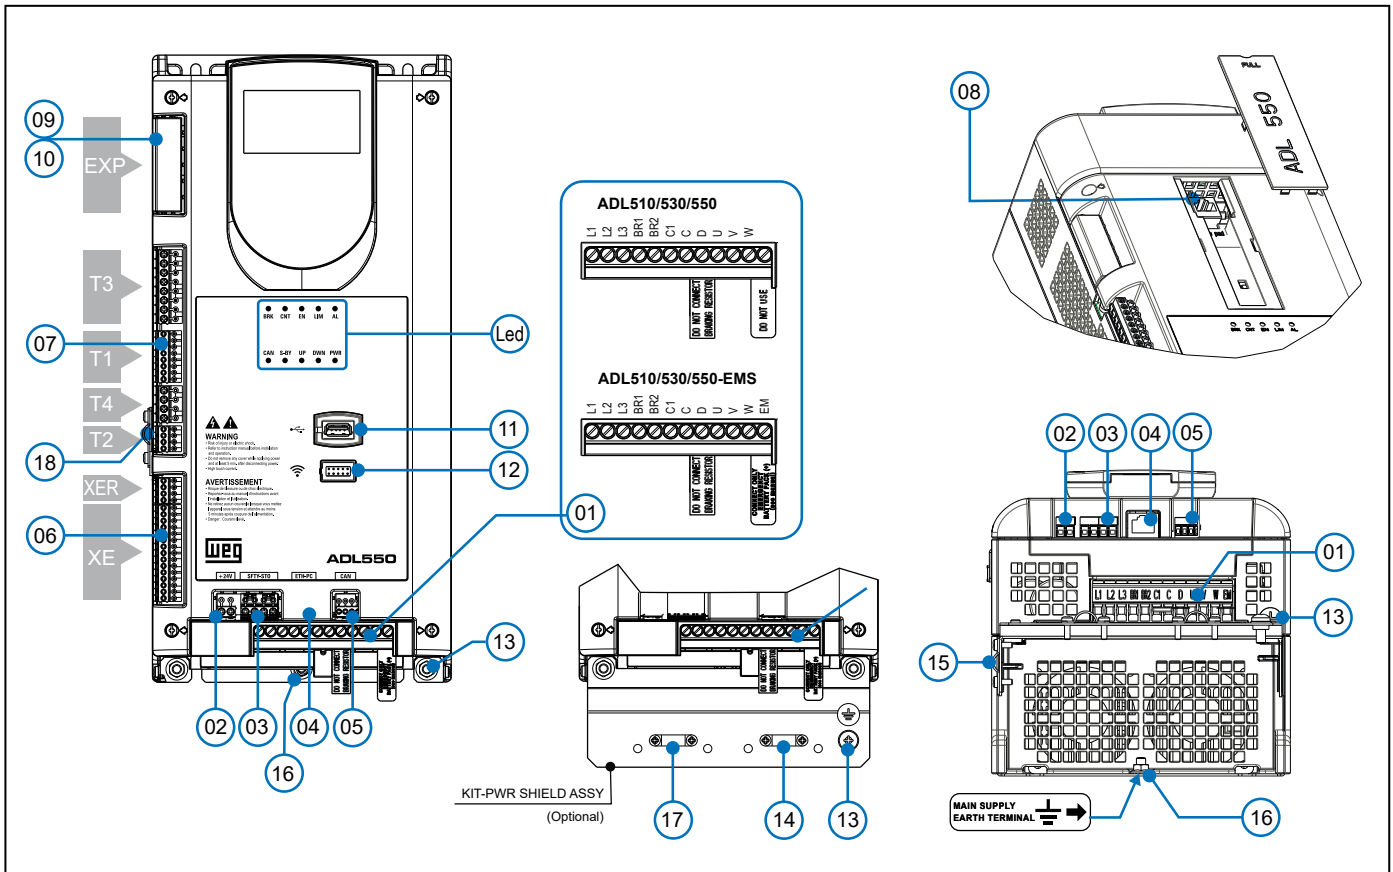

Ref.	Description	Manual section	ADL510	ADL530	ADL550
(01)	Power terminals	"7.2 Power section" on page 26	Yes	Yes	Yes
(02)	<b>+24V</b> Input + 24 Vdc external	"7.3.4 +24V supply connection" on page 36	-	-	Yes
(03)	<b>SFTY-STO</b> STO Safety terminals	"7.3.5 Safety STO connection (SFTY-STO)" on page 36	-	-	Yes
(04)	<b>ETH-PC</b> RJ45 terminal, Ethernet port (100 Mbit/s)	"7.4 ETH-PC Ethernet Interface (RJ45 connector)" on page 37	Yes	Yes	Yes
(05)	<b>CAN</b> CANopen 417 Lift terminals	"7.5 CAN interface" on page 38	-	Yes	Yes
(06)	<b>XE/XER</b> Encoder terminals	"7.3.3 Feedback Connection" on page 29	Yes	Yes	Yes
(07)	<b>T1</b> Digital input terminal	"7.3.2 I/O and Relays connection" on page 28	Yes	Yes	Yes
	<b>T2</b> Analogue input terminal				
	<b>T3</b> Relay output terminal				
	<b>T4</b> Digital and +24V input enable / reference terminal				
(08)	RJ45 terminal, KB-ADL500 optional keypad	"7.6 Optional Keypad interface (RJ45 connector)" on page 39	Yes	Yes	Yes
(09)	Optional EXP-IO1-ADL500 card terminals	"A.1.2 - Optional card EXP-IO1-ADL500" on page 92	-	-	Yes
	Optional EXP-DCP-ADL500 card terminals	"A.1.3 - Optional card EXP-DCP-ADL500" on page 93	-	-	Yes
(11)	USB 2.0 port	"7.7 USB port for data storage" on page 39	-	Yes	Yes
(12)	Wi-Fi Port	"7.8 Wi-Fi module port" on page 39	-	Yes	Yes
(13)	Motor Earth terminals	"7.2 Power section" on page 26	Yes	Yes	Yes
(14)	Omega motor cable shield connection	"7.2.3 Connection of shielding (recommended)" on page 26	Yes	Yes	Yes
(15)	Omega feedback cable shield connection	"7.3.3 Feedback Connection" on page 29	Yes	Yes	Yes
(16)	Mains supply earth terminals	"7.2 Power section" on page 26	Yes	Yes	Yes
(17)	Securing of Omega power cable		Yes	Yes	Yes
(18)	Omega connection for shielding of terminal T2	"7.3.2 I/O and Relays connection" on page 28	Yes	Yes	Yes
Led	Operation and diagnostics LEDs	"7.3.6 Led" on page 36	Yes	Yes	Yes

## 7.2 Power section

**Note!**

For the position of the terminals see section "7.1 Location and identification of terminals and LEDs" on page 25.

### 7.2.1 Power terminals and connection

Terminal	Description	IN/ OUT	ADL510/530/550	ADL510/530/550- EMS
L1	Three-phase main supply, phase L1	OUT	Yes	Yes
L2	Three-phase main supply, phase L2	OUT	Yes	Yes
L3	Three-phase main supply, phase L3	OUT	Yes	Yes
BR1	Brake resistor	IN	Yes	Yes
BR2	Brake resistor	OUT	Yes	Yes
C1	DC choke (tie to C if not used)	OUT	Yes	Yes
C	DC choke	IN	Yes	Yes
D	DC Link (-)	OUT	Yes	Yes
U	Motor connection, phase U	OUT	Yes	Yes
V	Motor connection, phase V	OUT	Yes	Yes
W	Motor connection, phase W	OUT	Yes	Yes
EM	Battery main supply (+)	IN	- (1)	Yes (2)

(1) Do not use.

(2) Connect only emergency battery pack (+)

### 7.2.2 Cable cross-sections


Sizes	Terminals: L1 - L2 - L3 - BR1 - BR2 - C1 - C - D - U - V - W - EM				
	Maximum cable cross-section (flexible conductor)		Recommended stripping (mm)	Recommended terminal (mm)	Tightening torque (min) (Nm)
	(mm <sup>2</sup> )	AWG			
1040	4	10	8	None / pin	0,5 ... 0,6
1055	4	10	8	None / pin	0,5 ... 0,6
1075	4	10	8	None / pin	0,5 ... 0,6
2110	16	6	10	None / pin	1,2 ... 1,5
2150	16	6	10	None / pin	1,2 ... 1,5

Sizes	Terminals: $\perp$ on structural work (see ref. (16) on previous page)				
	Cable cross-section		Lock screw diameter (mm)	Recommended terminal (mm)	Tightening torque (min) (Nm)
	(mm <sup>2</sup> )	AWG			
1040 ... 2150	Same as the maximum cross-section used for the power terminal strip		M5	Eyelet - Fork	6

**Note!**

The minimum cross-section for both ground connections must comply with EN61800-5-1 prescriptions. Always ground both points on structural steel.

### 7.2.3 Connection of shielding (recommended)

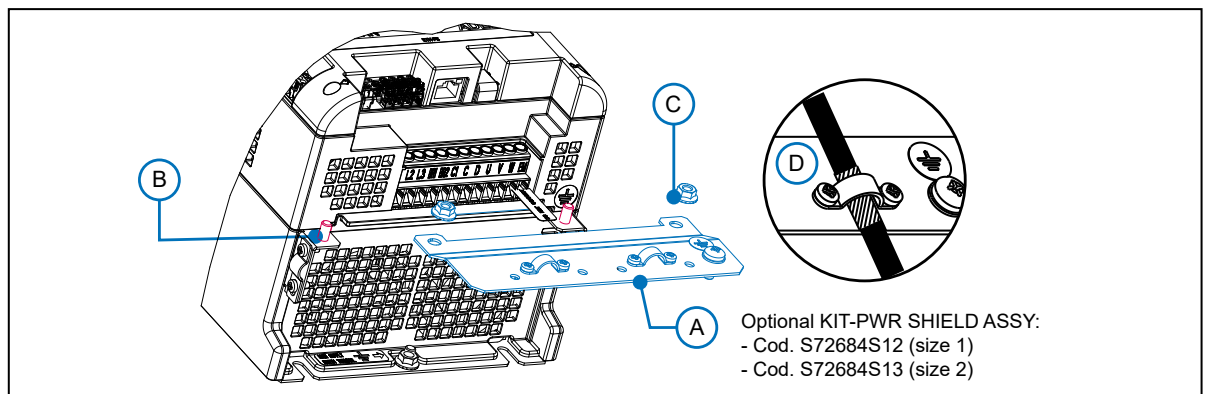

For compliance with EN 12016: put the optional metal support KIT-PWR SHIELD ASSY (A) on bolts (B) and tighten the two nuts fully (C).

Fasten the power cable shield to the omega sections (D).

### 7.2.4 EMC guide line



In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.



The converters are protected in order to be used in industrial environments where, for immunity purposes, large amounts of electromagnetic interference can occur. Proper installation practices will ensure safe and trouble-free operation. If you encounter problems, follow the guidelines which follow.

- Check for all equipment in the cabinet are well grounded using short, thick grounding cable connected to a common star point or busbar. Better solution is to use a conductive mounting plane and use that as EMC ground reference plane.
- Flat conductors, for EMC grounding, are better than other type because they have lower impedance at higher frequencies.
- Make sure that any control equipment (such as a PLC) connected to the inverter is connected to the same EMC ground or star point as the inverter via a short thick link.
- Connect the return ground from the motors controlled by the drives directly to the ground connection ( $\perp$ ) on the associated inverter.
- Separate the control cables from the power cables as much as possible, using separate trunking, if necessary at 90° to each other.
- Whenever possible, use screened leads for the connections to the control circuitry
- Ensure that the contactors in the cubicle are suppressed, either with R-C suppressors for AC contactors or 'flywheel' diodes for DC contactors fitted to the coils. Varistor suppressors are also effective. This is important when the contactors are controlled from the inverter relay.
- Use screened or armored cables for the motor connections and ground the screen at both ends using the cable clamps.
- Use power shield kit to connect shield of motor cable to drive.

#### Note!

For further information regarding electro-magnetic compatibility standards, according to Directive 2014/30/EU, conformity checks carried out on WEG appliances, connection of filters and mains inductors, shielding of cables, ground connections, etc., consult the "Electro-magnetic compatibility guide" (1S5E84) you can download from [www.weg.net](http://www.weg.net).

### 7.2.5 Block diagram of power section


This type is equipped with an EMI input filter (models ADL5.0-...-F-...), an AC/DC converter, a system for pre-loading DC capacitors, a DC/AC converter, a power supply unit and an integrated braking unit.

A specific external resistor must be connected to perform the braking function between terminals BR1 and BR2.

An optional external BUy braking unit can be used and connected to terminals C and D. Refer to the BUy handbook for further information.

To manage emergency situations (drive power failure) the unit also envisages ordering the option with an emergency module inside the drive (ADL5.0-...-EMS models) and powering the emergency unit between terminals EM and D with a battery.

#### Sizes 1040 ... 2150

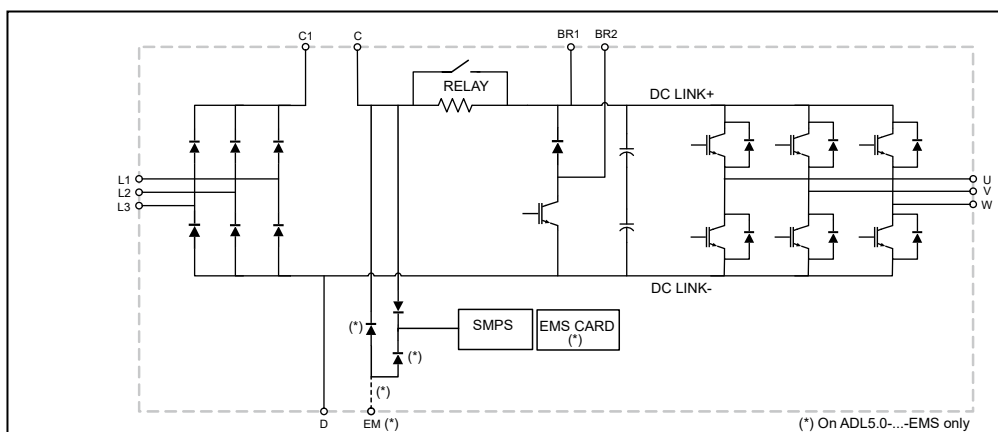

### 7.2.6 Internal EMC filter (standard)

The ADL550/530/510-...-F-... series of inverters are equipped with an internal EMI filter able to guarantee the performance levels required by EN 12015, first environment, with max 10 m of shielded motor cable. Compliance with these requirements means the drive can be incorporated into lift systems built to EN 12015.

### 7.2.7 Connection of AC and DC chokes (optional)

(For three-phase ADL500 only). The drive can use both a three-phase choke on the AC power line and, for 1040 ... 2150 sizes only, a DC choke between terminals C1 and C.

Refer to chapter "5.2 Input chokes" on page 18 for the recommended connections.

If no DC choke is used on 1040 ... 2150 sizes, terminals C1 and C must be bridged.



Attention

.....  
If no DC choke is used, terminals C1 and C must be bridged (sizes 1-2).  
.....

## 7.3 Regulation section

**Note!**

.....  
All terminal strips are extractable. For electrical properties of analog, digital and relay inputs/outputs see section A.2 of the Appendix.  
.....

### 7.3.1 Cable cross-sections

Terminals	Maximum cable cross-section		Recommended stripping (mm)	Tightening torque (min) (Nm)
	(mm <sup>2</sup> )	(AWG)		
T3, T4, SFTY-STO	0.2 ... 2.5 (1 cable) 0.2 ... 0.75 (2 cables)	26 ... 12 26 ... 19	5	0.4
T1, T2, XER, XE	0.2 ... 1.5 (1 cable) 0.2 ... 0.5 (2 cables)	26 ... 16 26 ... 19	5	0.25

### 7.3.2 I/O and Relays connection

**Note!**

.....  
For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.  
.....

#### T3 terminal – Relays Output

Pin	Signal	Description	Command Associated parameter	ADL510	ADL530	ADL550
50	RO_40	Relay 4 output (contact N.O., 24Vdc)	1416, Dig output 4 src	Yes	Yes	Yes
51	RO_4C	Common Relay 4	DoopOpen	Yes	Yes	Yes
52	RO_30	Relay 3 output (contact N.O., 24Vdc)	1414, Dig output 3 src	Yes	Yes	Yes
53	RO_3C	Common Relay 3	Run Contactor	Yes	Yes	Yes
54	RO_20	Relay 2 output (contact N.O., 24Vdc)	1412, Dig output 2 src	Yes	Yes	Yes
55	RO_2C	Common Relay 2	Brake Contactor	Yes	Yes	Yes
56	RO_10	Relay 1 output (contact N.O., 24Vdc)	1410, Dig output 1 src	Yes	Yes	Yes
57	RO_1C	Common Relay 1	Drive OK	Yes	Yes	Yes

#### T1 terminal – Digital inputs

Pin	Signal	Description	Command Associated parameter	ADL510	ADL530	ADL550
1	DI_8	Digital input 8	Contact feedback	Yes	Yes	Yes
2	DI_7	Digital input 7	Feedback brake	Yes	Yes	Yes
3	DI_6	Digital input 6	Multispeed 2	Yes	Yes	Yes
4	DI_5	Digital input 5	Multispeed 1	Yes	Yes	Yes
5	DI_4	Digital input 4	Multispeed 0	Yes	Yes	Yes
6	DI_3	Digital input 3	Emergency	Yes	Yes	Yes
7	DI_2	Digital input 2	Start reverse	Yes	Yes	Yes
8	DI_1	Digital input 1	Start forward	Yes	Yes	Yes

#### T4 terminal – Enable / reference digital inputs and +24V

Pin	Signal	Description	Command Associated parameter	ADL510	ADL530	ADL550
9	EN_HW	Enable digital inputs		Yes	Yes	Yes
10	DI_CM	Common reference digital inputs		Yes	Yes	Yes
11	0V24_OUT	Ground reference output voltage		Yes	Yes	Yes


Pin	Signal	Description	Command Associated parameter	ADL510	ADL530	ADL550
12	+24V <sub>-</sub> OUT	+24 Vdc output voltage power supply		Yes	Yes	Yes

### T2 terminal – Analog inputs

Pin	Signal	Description	Command Associated parameter	ADL510	ADL530	ADL550
1	AI_2N	Common reference analog input 2		-	Yes	Yes
2	AI_2P	Analog input 2		-	Yes	Yes
3	AI_1P	Analog input 1		Yes	Yes	Yes
4	AI_1N	Common reference analog input 1		Yes	Yes	Yes

#### T2 terminal shield connection (recommended)

(1) Secure the braided shielded cable to the omega at terminal T2 (in the case of reduced lateral space it is possible to use the GND PLATE KIT (2), code S72684G13).

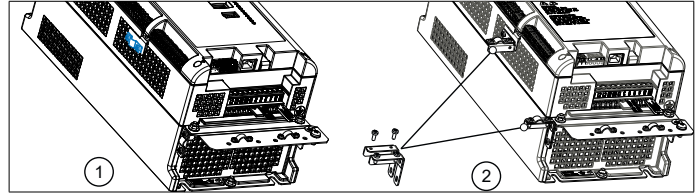

### 7.3.3 Feedback Connection

#### Note!

For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.

#### XER terminal

Pin	Signal	Description	Direction	ADL510	ADL530	ADL550
20	BR-	Channel B (-) repeat	OUT	Yes	Yes	Yes
21	BR+	Channel B (+) repeat	OUT	Yes	Yes	Yes
22	AR-	Channel A (-) repeat	OUT	Yes	Yes	Yes
23	AR+	Channel A (+) repeat	OUT	Yes	Yes	Yes


#### XE terminal

Pin	Signal		Description	Digital Incremental	Sinusoidal Incremental	Sinusoidal Incremental + Sin/Cos	Sinusoidal Incremental + Absolute	Direction	ADL510	ADL530	ADL550
	#1	#2									
1	FH2		Fast (Freeze) 2 input	x	x	x	x	IN	-	-	Yes
2	FH1		Fast (Freeze) 1 input	x	x	x	x	IN	-	-	Yes
3	COM_FH		Common Fast inputs	x	x	x	x	IN	-	-	Yes
4	COS-	DT-	Channel Cos - / Data -			x	x	IN / BID	-	Yes	Yes
5	COS+	DT+	Channel Cos + / Data +			x	x	IN / BID	-	Yes	Yes
6	SIN-	CK-	Channel Sen - / Clock -			x	x	IN / OUT	-	Yes	Yes
7	SIN+	CK+	Channel Sen + / Clock +			x	x	IN / OUT	-	Yes	Yes
8	Z-		Channel Z -	x	x	x	x	IN	Yes	Yes	Yes
9	Z+		Channel Z +	x	x	x	x	IN	Yes	Yes	Yes
10	B-		Channel B -	x	x	x	x	IN	Yes	Yes	Yes
11	B+		Channel B +	x	x	x	x	IN	Yes	Yes	Yes
12	A-		Channel A -	x	x	x	x	IN	Yes	Yes	Yes
13	A+		Channel A +	x	x	x	x	IN	Yes	Yes	Yes
14	OVE		Encoder reference	x	x	x	x	OUT	Yes	Yes	Yes
15	+VE		Encoder supply	x	x	x	x	OUT	Yes	Yes	Yes

Figure 7.3.2: Connection of shielding (recommended)

#### XE terminal shield connection (recommended)

(1) Secure the braided shielded cable to the omega at terminal XE (in the case of reduced lateral space it is possible to use the GND PLATE KIT (2), code S72684G13).

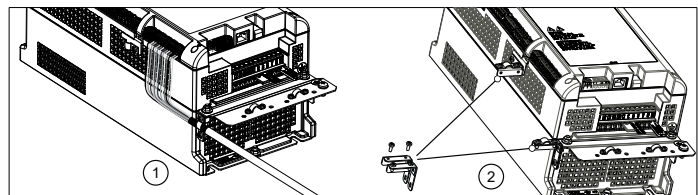

Encoders provide motor speed and position feedback.

The regulation algorithms in the ADL500 drive are capable of controlling asynchronous and permanent magnet synchronous (brushless) motors. With asynchronous motors the regulation algorithm may or may not use the speed measurement obtained from the encoder reading. With brushless motors the regulation algorithm needs an encoder that also allows the absolute motor position to be verified.



.....  
 The ADL500 supports several encoder types.

The type of encoder that is connected must be selected via software: PAR 2132 **Encoder mode** (menu ENCODER).  
 .....

Possible configurations are summarised in the next table:

	ADL510	ADL530	ADL550	Asynchronous		Brushless
				ASY SSC (1)	ASY FOC (1)	SYN FOC (1)
Incremental digital	Yes	Yes	Yes	-	Recommended	Possible
Incremental sinusoidal	Yes	Yes	Yes	-	Recommended	Possible
Incremental sinusoidal + absolute SinCos	-	Yes (2)	Yes	-	Possible	Recommended
Incremental sinusoidal + Absolute Endat	-	Yes (2)	Yes	-	Possible	Recommended
Absolute Endat	-	Yes	Yes	-	Possible	Recommended
Absolute Biss	-	Yes	Yes	-	Possible	Recommended

(1) PAR 540 **Control type**. (2) ADL530: "freeze" not available. - = encoder not used

Encoders must be fitted to the motor shaft using anti-backlash couplings. The best control is achieved with configurations that have incremental sinusoidal channels.  
 For electrical connections always use good quality cables with shielded twisted pairs, according to the procedures and specifications described in the following paragraphs.

The configuration parameters for each encoder can be found in the ENCODER.  
 In the event of an encoder malfunction the drive generates the **Speed fbk back loss** alarm and the cause of the malfunction is shown in parameter 2172 **SpdFbkLoss code**.  
 If the encoder is not used by the regulation algorithm the drive still manages the encoder position reading but does not generate an alarm in case of malfunctioning.


**(1) Connection SinCos encoder (ADL510, ADL530) - Connection SinCos encoder + 2 Freeze (ADL550)**

**Technical specification**

Channels \_\_\_\_\_ A+ A-, B+ B-, Z+ Z-, Sin+ Sin-, Cos+ Cos-, differential  
 Management of loss of encoder signals.  
 Max frequency \_\_\_\_\_ 200 kHz (check the number of encoder impulses according to the maximum speed)  
 Electrical interface \_\_\_\_\_ Channels A/B/Sin/Cos  $0.6\text{ V} \leq V_{pp} \leq 1.2\text{ V}$  (typ. 1.0 V) – Channel Z\*  $0.2\text{ V} \leq V_{pp} \leq 0.8\text{ V}$   
 Load capacity \_\_\_\_\_ Channels A/B/Z\* 8 mA @ 1.0 Vpp (Zin 120Ω)  
 Channels Sin/Cos 1 mA @ 1.0 Vpp (Zin 1kΩ)  
 Programmable internal power supply \_\_\_\_\_ min +5.2 V, max +20V (default + 5.2 V) – I<sub>max</sub> 150 mA.  
 The internal power supply of the encoder can be selected from the keypad (ENCODER menu, parameter **Encoder supply** (PAR 2102) to balance the loss of voltage due to the length of the encoder cable and load current.  
 PAR 2102 **Encoder supply**, range: min=5.2V, max=20V, step of 0.1V; default=5.2V.  
 Cable length \_\_\_\_\_ max 50m

\* Channel Z = I (Index mark)

Figure 7.3.3: Connection SinCos encoder + 2 Freeze

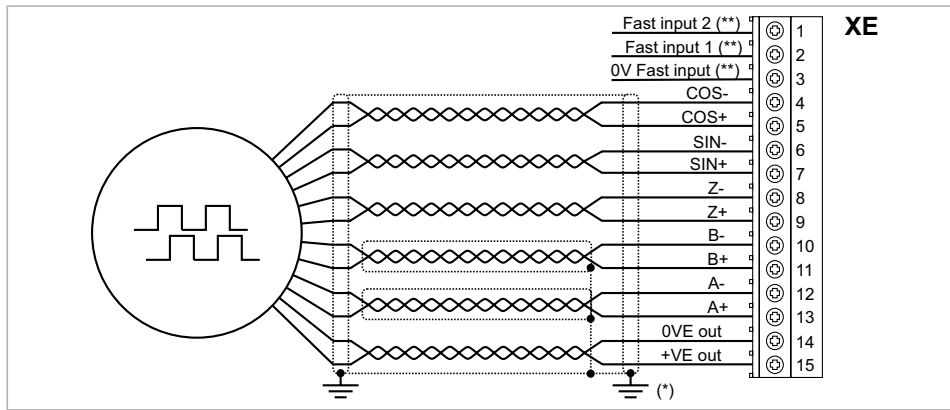

(\*) Connection of shielding, see figure 7.3.2

(\*\*) on ADL550 only


**(2) Connection sinusoidal encoder 3 Channels (ADL510, ADL530) - Connection sinusoidal encoder 3 Channels + 2 Freeze (ADL550)**

**Technical specification**

Channels	A+ A-, B+ B-, Z+ Z-, differential Management of loss of encoder signals.
Max frequency	200 kHz (check the number of encoder impulses according to the maximum speed)
Number of impulses	min 128, max 16384 (default 1024)
Electrical interface	Channels A/B $0.6\text{ V} \leq V_{pp} \leq 1.2\text{ V}$ (typ. 1.0 V) – Channel Z* $0.2\text{ V} \leq V_{pp} \leq 0.8\text{ V}$
Load capacity	Channels A/B/Z* 8 mA @ 1.0 Vpp (Zin 120Ω)
Programmable internal power supply	min +5.2 V, max +20V (default + 5.2 V) – I <sub>max</sub> 150 mA. The internal power supply of the encoder can be selected from the keypad (ENCODER menu, parameter <b>Encoder supply</b> (PAR 2102) to balance the loss of voltage due to the length of the encoder cable and load current. PAR 2102 <b>Encoder supply</b> , range: min=5.2V, max= 20V step of 0.1V; default=5.2V.
Cable length	max 50m

\* Channel Z = I (Index mark)

Figure 7.3.4: Connection sinusoidal encoder 3 Channels + 2 Freeze

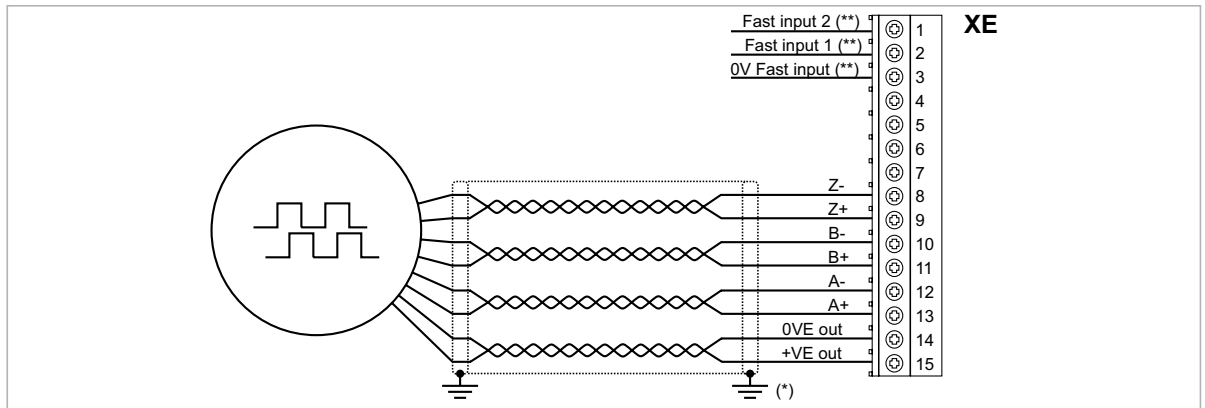

(\*) Connection of shielding, see figure 7.3.2

(\*\*) on ADL550 only


**(3) Connection EnDat Encoder (ADL510, ADL530) - Connection EnDat Encoder + 2 Freeze (ADL550)**

**Technical specification**

Channels	A+ A-, B+ B-, differential Management of loss of encoder signals.
Max frequency	200 kHz (check the number of encoder impulses according to the maximum speed)
Number of impulses	min 128, max 16384 (automatic recognition at initialisation)
Electrical interface	$0.6\text{ V} \leq V_{pp} \leq 1.2\text{ V}$ (typ. 1.0 V)
Load capacity	8 mA @ 1.0 Vpp (Zin 120Ω)
Programmable internal power supply	min +5.2 V, max +20V (default + 5.2 V) – I <sub>max</sub> 150 mA. The internal power supply of the encoder can be selected from the keypad (ENCODER menu, parameter <b>Encoder supply</b> (PAR 2102) to balance the loss of voltage due to the length of the encoder cable and load current. PAR 2102 <b>Encoder supply</b> , range: min=5.2V, max= 20V step of 0.1V; default=5.2V.

Cable length _____	max 50m
Absolute channels _____	CK+ CK-, DT+ DT- differential, RS-485 Management of loss of encoder signals.
Interface _____	EnDat: 2.1/2.2 single/multi-turn (command set managed only compatible with 2.1) SSI: Standard Sick/Stegman single/multi-turn
Max frequency _____	EnDat: 1 MHz with delay compensation (not programmable) SSI: 400 KHz (not programmable)
Number of bits _____	EnDat: max 32 bit/turn* max 32bit/turn (automatic recognition at initialisation) SSI:13-25 bits (default 25)

Figure 7.3.5: Connection EnDat Encoder + 2 Freeze

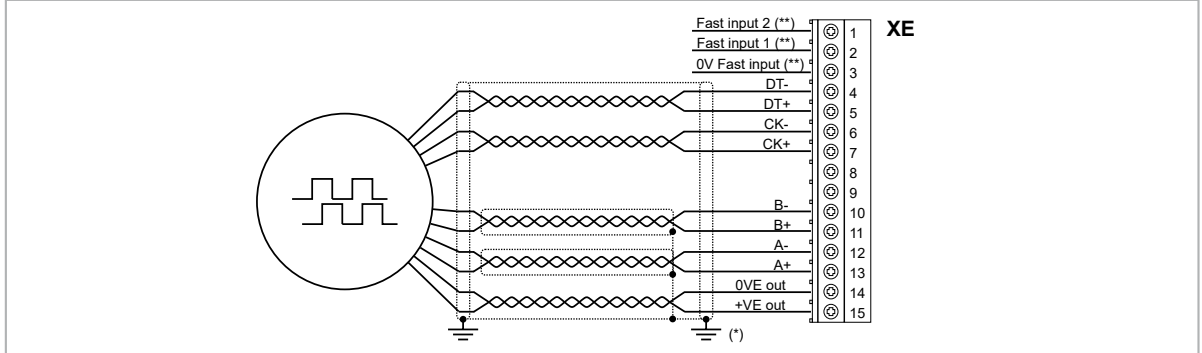

(\*) Connection of shielding, see figure 7.3.2


(\*\*) on ADL550 only

#### (4) Connection Encoder Biss (ADL530, ADL550) - Connection Encoder Biss + 2 Freeze (ADL550)

##### Technical specification

Channels _____	A+ A-, B+ B-, differential Management of loss of encoder signals.
Max frequency _____	200 kHz (check the number of encoder impulses according to the maximum speed)
Number of impulses _____	min 128, max 16384 (automatic recognition at initialisation)
Electrical interface _____	$0.6\text{ V} \leq V_{pp} \leq 1.2\text{ V}$ (typ. 1.0 V)
Load capacity _____	8 mA @ 1.0 Vpp (Zin 120Ω)
Programmable internal power supply _____	min +5.2 V, max +20V (default + 5.2 V) – I <sub>max</sub> 150 mA. The internal power supply of the encoder can be selected from the keypad (ENCODER menu, parameter <b>Encoder supply</b> (PAR 2102) to balance the loss of voltage due to the length of the encoder cable and load current.
Cable length _____	max 100mt
Absolute channels _____	CK+ CK-, DT+ DT- differential, RS-485 Management of loss of encoder signals.
Interface _____	BiSS Rev. C6 single / multi-turn point-to-point network
Max frequency _____	10 MHz up to 100 m cable length
Number of bits _____	64 max

Figure 7.3.6: Connection Encoder Biss + 2 Freeze

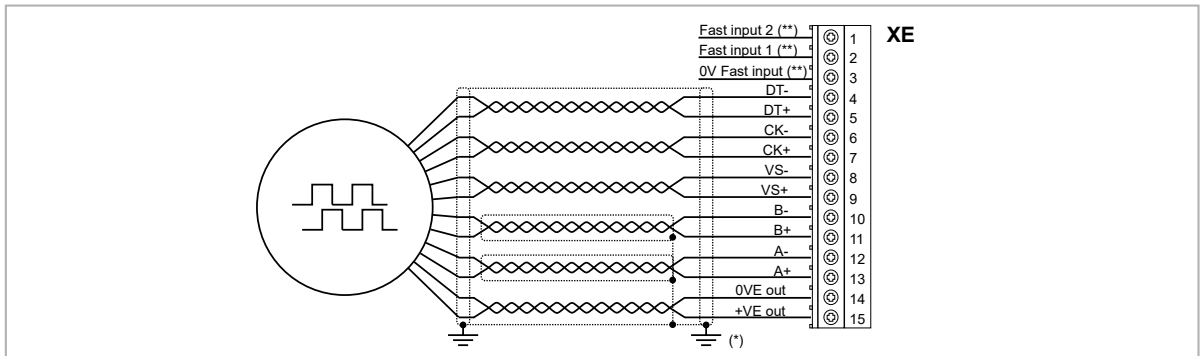

(\*) Connection of shielding, see figure 7.3.2

(\*\*) on ADL550 only




**(5) Collegamento Encoder EnDat Full Digital (ADL510, ADL530) - Collegamento Encoder EnDat Full Digital + 2 Freeze (ADL550)**

**(5) Connection Encoder EnDat Full Digital (ADL510, ADL530) - Connection Encoder EnDat Full Digital + 2 Freeze (ADL550)**

**Technical specification**

Programmable internal power supply _____	min +5.2 V, max +20V (default + 5.2 V) – I <sub>max</sub> 150 mA.
Cable length _____	max 50m
Absolute channels _____	CK+ CK-, DT+ DT- differential, RS-485 Management of loss of encoder signals.
Interface _____	EnDat: 2.1/2.2 single/multi-turn (command set managed only compatible with 2.1)
Max frequency _____	EnDat: 1.5 MHz with delay compensation (not programmable)
Number of bits _____	EnDat: max 32 bit/turn* max 32bit/turn (automatic recognition at initialisation)

Figure 7.3.7: Connection EnDat Full Digital Encoder + 2 Freeze

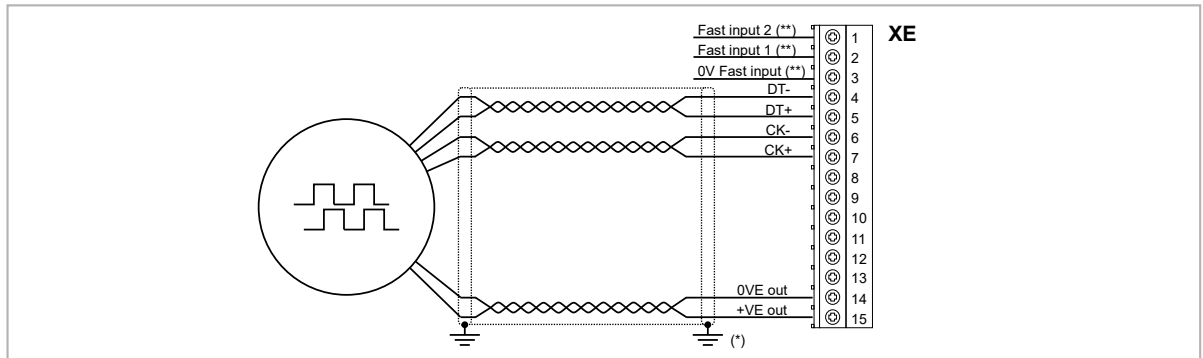

(\*) Connection of shielding, see figure 7.3.2


(\*\*) on ADL550 only

**(6) Connection digital Encoder 3 channels (ADL510, ADL530) - Connection digital Encoder 3 channels + 2 Freeze (ADL550) (TTL Line Driver / push pull)**

**Technical specification**

Channels _____	A+ A-, B+ B-, Z+ Z-, differential line drivers. Management of loss of encoder signals (via software).
Max frequency _____	100 kHz (check the number of encoder impulses according to the maximum speed)
Number of impulses _____	min 128, max 16384 (default 1024)
Electrical interface _____	TTL (ref. GND) U <sub>low</sub> ≤ 0.5 V U <sub>high</sub> ≤ 2.5 V
Load capacity _____	13 mA @ 5.5 V (Z <sub>in</sub> 300Ω)
Programmable internal power supply _____	min +5.2 V, max +20V (default + 5.2 V) – I <sub>max</sub> 150 mA. The internal power supply of the encoder can be selected from the keypad (ENCODER menu, parameter <b>Encoder supply</b> (PAR 2102) to balance the loss of voltage due to the length of the encoder cable and load current. PAR 2102 <b>Encoder supply</b> , range: min=5.2V, max= 20V, step of 0.1V; default=5.2V.
Cable length _____	max 50m

Figure 7.3.8: Connection digital encoder 3 Channels + 2 Freeze (TTL Line Driver / push pull)

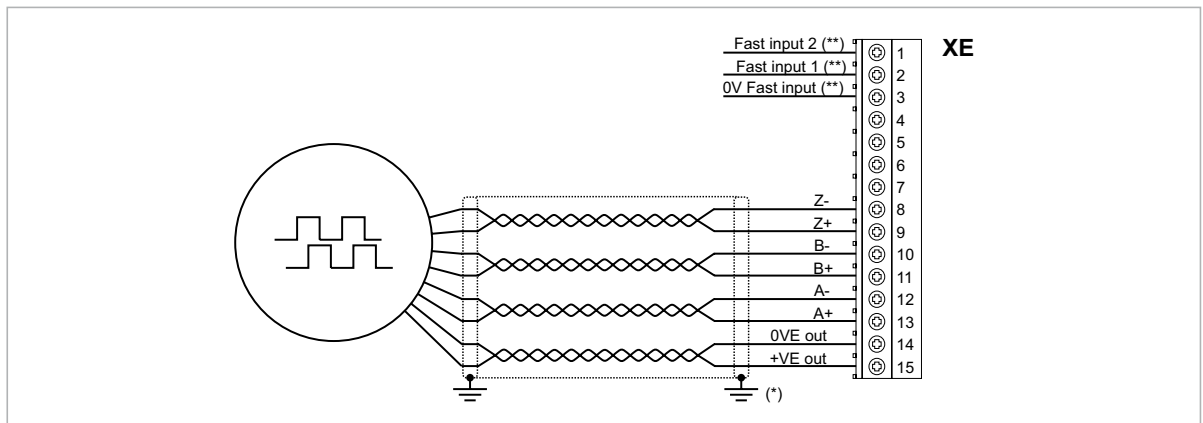


(\*) Connection of shielding, see figure 7.3.2

(\*\*) on ADL550 only

## (7) Connection Single Ended Digital Encoder (ADL510-530-550)

The following resistive divider must be added on single-ended configurations.

Figure 7.3.9: resistive divider for single-ended configurations

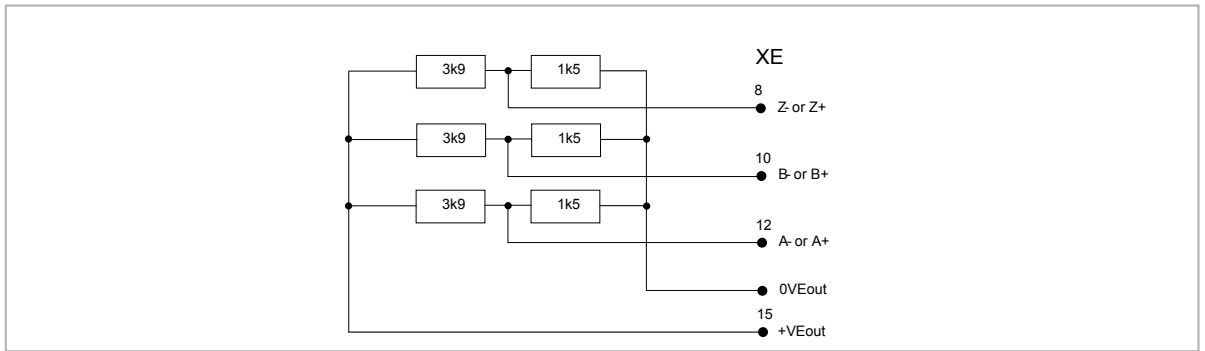


## (8) HTL 3 Channel Digital Encoder Connection (ADL510, ADL530) - 3 Channel Digital Encoder Connection + 2 Freeze (ADL550) (HTL single ended push pull)

### technical specifications

Channels _____	A+, B+, Z+, single ended push pull. Managed lack of encoder signals (via software).
Max frequency _____	100 kHz (check the number of encoder pulses as a function of the maximum speed).
Number of impulses _____	min 128, max 16384 (default 1024)
Electrical interface _____	Push pull (ref. GND) Ulow ≤ 2 V - Uhigh ≥ (0,7 * (+VE)) V
Programmable internal power supply _____	min +5,2V, max +20V (default + 5,2V) – Imax 150mA.
Cable length _____	50mt max

Via keypad (ENCODER menu, parameter Alimentaz encoder (PAR 2102) you can select the value of the encoder internal supply voltage to compensate for the voltage reduction due to the length of the encoder cable and the load current. PAR 2102 Alimentaz encoder, range: min=5,2V, max= 20V, minimum step 0,1V; default=5,2V.

Figure 7.3.10: 3 Channel Digital Encoder Connection + 2 Freeze (HTL single ended push pull)

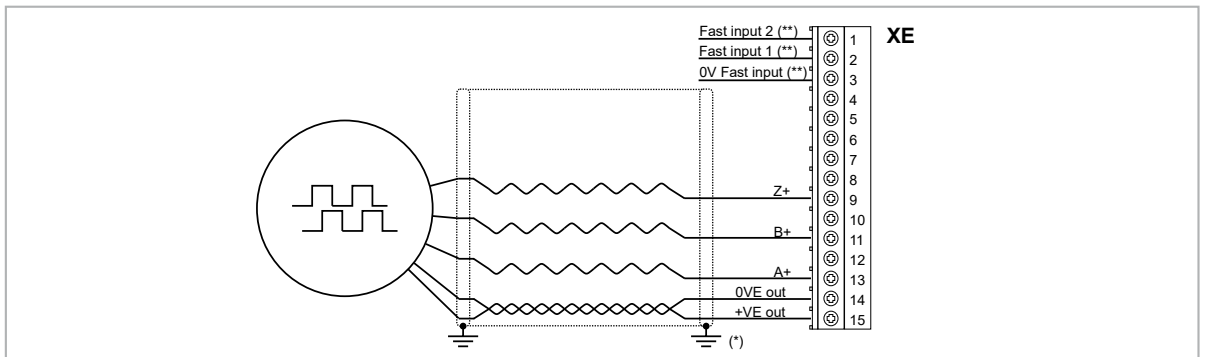


(\*) Shielding connection, see Figure 7.3.2

(\*\*) For ADL550 only

For connecting pins 8, 10 and 12 see figure 7.z.w

Figure 7.3.11: circuit with resistance and zener diode (from 3V3) for single ended HTL configurations

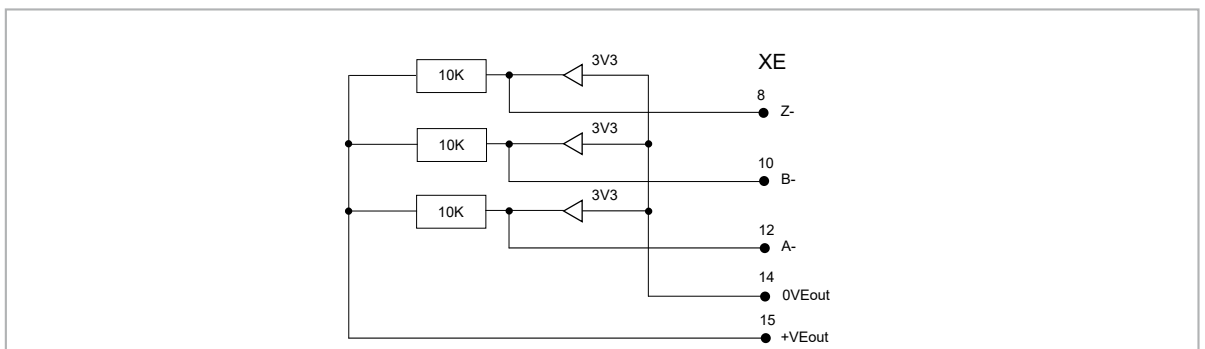

The choice of the 3.3V zener diode is the one that gives better results in terms of signal level discrimination. Zener diodes up to 5.1V can still be used.

Differential HTL encoders are not managed.

If you want to use a differential HTL encoder, you have to connect only the positive signals (A+, B+ and Z+) and connect to the negative inputs (A-, B-, Z-) the resistance circuit plus zener diode.


### Repeat Encoder (TTL line-driver) (ADL510-530-550)

ADL500 have an incremental encoder output with TTL Line Driver levels to be used to repeat the servomotor feedback device.

This function is performed via HW and an encoder output can be repeated with a programmable divider.

The encoder output signals are available on the XER connector.

Figure 7.3.10: Repeat Encoder

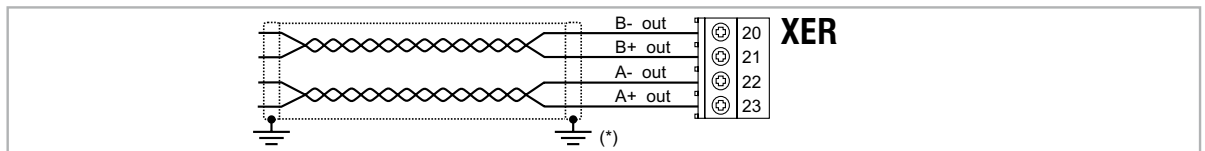

(\*) Connection of shielding, see figure 7.3.2

### Technical specification: technical specifications

Channels	A+ A-, B+ B-, differential line drivers, optoisolated.
Max frequency	200 kHz
Number of impulses	1/1-1/2-1/4-1/8 repeat (default 1/1)
Electrical interface	TTL (ref. GND) Ulow ≤ 0.5V Uhigh ≤ 2.5V
Load capacity	TTL 20mA for each channel
Cable length	max 50m

#### 7.3.3.1 Phasing

In order for the ADL500 Brushless regulation algorithm to function correctly, it is necessary to know the position of the rotor with respect to the stator power phases. Therefore the 0° position provided by the absolute encoder must be known with respect to the position of a motor pole and the encoder count direction must match the motor power phases.

This is called phasing. Phasing can be performed manually, directly by means of the mechanical encoder assembly position on the motor shaft and on the phases, or using the automatic procedures available in the drive.

Phasing must always be repeated whenever:

- the encoder assembly position is changed
- the phase sequence of the motor power supply connection is changed
- the encoder incremental signal connection is changed
- the encoder absolute signal connection is changed
- the value of the PAR 2008 **Pole pairs** parameter is changed
- the value of the PAR 2100 **Encoder pulses** parameter is changed
- the drive is replaced (alternatively, download parameters taken from previous drive)

There are two different procedures that can be launched by writing two different parameters:

- PAR 2190 **Autophase rotation** -> rotation phasing:  
this procedure must be performed with the motor free to turn and with no load applied.
- PAR 2192 **Autophase still** -> static phasing:  
this procedure must be performed with the motor still and brake applied.

#### Rotation phasing

This procedure is based on the possibility of moving the motor, by a maximum angle of two pole pairs, to find correct encoder phasing, cross-check the available encoder and motor data and, if the encoder count direction does not match the phase sequence of the motor power supply, correct it by automatically modifying PAR 2130 **Encoder direction**.

#### Note!

In the case described above, a positive speed reference could generate a rotation in reverse with respect to that defined as positive for the encoder (usually clockwise), while still ensuring good motor control.

If you prefer to keep the encoder as positive direction for the references, you need to exchange two phases of motor power and repeat the phasing procedure by rotation.

If the procedure ends without error, the code 0 is shown on the keypad, otherwise if some inconsistencies that cannot be corrected by the drive will display one of the codes listed in Self-learning (phasing), see chapter "10.3 Messages" on page 88.

The anomalies found concern

- electrical signals not detected with "**Perd Retroaz [22]**" alarm
- error setting PAR 2008 **Polar pairs**
- error setting PAR 2100 **Encoder pulses**

Using this method, in which the motor cannot move, the encoder and motor data cannot be cross-checked to verify the matching of parameters or count direction.

This condition must therefore be checked before launching the procedure.

### 7.3.4 +24V supply connection

**Note!**

For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.

Terminal	Description	IN/OUT
1	0 V <sub>dc</sub> external power supply reference	IN
2	+24 V <sub>dc</sub> External power supply of the regulation board	IN

### 7.3.5 Safety STO connection (SFTY-STO)

**Note!**

For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.

Terminal	Description	IN/OUT
EN+	Enable Safety (+)	IN
EN-	Enable Safety (-)	IN
OK1	Safety OK, Output 1	OUT
OK2	Safety OK, Output 2	OUT

The EN+ , EN-, OK1 and OK2 terminals must be connected as shown in the typical connection diagrams in chapter "7.9 Connection diagrams" on page 40.

Safety management is integrated in the firmware.

The Safety must be enabled to enable the drive.

The drive is disabled if the Safety enable command is removed while it is enabled.

To re-enable the drive, re-enable the Safety then remove and re-send both the Enable and Start commands.


### 7.3.6 Led

**Note!**

For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.

Led	Colour	Meaning	ADL510	ADL530	ADL550
BRK	Yellow	Braking	Yes	Yes	Yes
CNT	Yellow	Contacting closing command status	Yes	Yes	Yes
EN	Green	Enable	Yes	Yes	Yes
LIM	Red	Current limit	Yes	Yes	Yes
AL	Red	Generic alarm	Yes	Yes	Yes
CAN	Green	CAN 1	-	Yes	Yes
S-BY	Yellow	Stand-by	-	-	Yes
UP	Green	Direction up	-	-	Yes
DOWN	Green	Direction down	-	-	Yes
PWR	Green	Power Supply ON	-	-	Yes

## 7.4 ETH-PC Ethernet Interface (RJ45 connector)

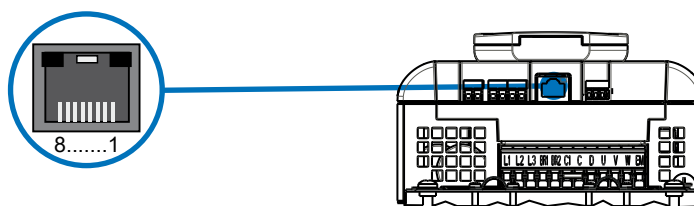

The ADL Drive is standard equipped with an RJ45 port for connection via ModbusTCP protocol, used for Drive-PC communication (with WEG\_DriveLabs configuration software), and HTTPS protocol used for Drive-PC / network communication (with WEG\_DriveLabs web application).

Minimum requirements for Ethernet cable: shielded category 5E, maximum length 10 m.

Speed: 100 Mbit/s.

Pin	Signal	Description	IN/OUT	ADL510	ADL530	ADL550
1	EN0TX+	Data transmission (+)	OUT	Yes	Yes	Yes
2	EN0TX-	Data transmission (-)	OUT	Yes	Yes	Yes
3	EN0RX+	Data reception (+)	IN	Yes	Yes	Yes
4	N.C.	n.c.	-	Yes	Yes	Yes
5	N.C.	n.c.	-	Yes	Yes	Yes
6	EN0RX-	Data reception (-)	IN	Yes	Yes	Yes
7	N.C.	n.c.	-	Yes	Yes	Yes
8	N.C.	n.c.	-	Yes	Yes	Yes

### 7.4.1 Ethernet Configuration

Some familiarity and knowledge of IP networking topics is required to establish communication between the **ADL500** and a **PC**.

Based on the Ethernet configuration, during start-up, the drive acquires an IP address which is retained until reboot. Any change to the Ethernet configuration is applied when the drive is restarted.

The IP address is acquired based on the following configuration parameters:

Menu	Parameter	Description	
NETWORK CONFIG	9608	<b>IP Assignment</b>	IP address assignment method: static or DHCP based
NETWORK CONFIG	9556	<b>IP Address set</b>	Valid only if static assignment is selected. Statically configured IP address
NETWORK CONFIG	9558	<b>IP Netmask set</b>	Valid only if static assignment is selected. Statically configured IP netmask
NETWORK CONFIG	9560	<b>IP Gateway set</b>	Valid only if static assignment is selected. Statically configured IP gateway

The following are read-only parameters:

Menu	Parameter	Description	
DRIVE INFO	9562	<b>IP address</b>	Current IP Address. IP address acquired by ADL500
DRIVE INFO	9600	<b>MAC Address</b>	MAC Address

### 7.4.2 Point-to-point network topology

The PC is connected directly to the ADL500 drive.

If the ADL500 is configured in “**DHCP**” (IP parameterization, PAR 9608 set to “DHCP”), since no DHCP server is available in this topology, the ADL500 will acquire the local address 169.254.10.10.

Typically, PCs also implement a local connection protocol. Therefore, if the PC is configured to DHCP, it will acquire a local link address (169.254.x.y), and be able to communicate with the ADL500.

Address acquisition may take up to 2 minutes. If the PC does not implement the local link protocol or does not acquire a valid address, it can be configured with a static IP address compatible with the local link addresses:

- PC configured for static IP assignment;
- The PC IP address set to 169.254.x.y, with any value except 169.254.10.10, already assigned to ADL500;
- Set the PC IP netmask to 255.255.0.0.

The Windows PC network configuration guide is in the section below.

The ADL500 default IP assignment method is DHCP, so in this topology on first boot, the address 169.254.10.10 will be acquired and the drive will be reachable from the PC at this address.

If the ADL500 is configured as "static" (PAR 9608 **Ip Assignment** set to "Static"), the ADL500 will be reachable at the address configured in the **IP Address set** parameter (PAR 9556) in the network specified by the netmask in the **IP Netmask set** parameter (PAR 9558). The PC must be configured with a compatible address:

- PC configured for static IP assignment;
- The PC **IP netmask** set to the same value as the **IP Netmask set**, parameter, PAR 9558;
- The PC **IP address** set to the same network as the ADL500, with a different address.

For additional details on network configuration, see Appendix "A.3 Windows PC Network Configuration" on page 96.

## 7.5 CAN interface

**Note!**

For terminal location see section "7.1 Location and identification of terminals and LEDs" on page 25.

CANopen is a communication profile for CAL-based industrial systems (refer to the CANopen CAL-Base COMMUNICATION PROFILE for Industrial Systems; CiA Draft Standard 301 Version 4.2 Date 13 February 2002 by CAN in Automation e. V.).

The ADL500 integrates the interface for connection to CAN networks and also implements the DS417 profile according to CANopen 2.0.0 specifications (DS417 in preparation).

The CAN protocol (ISO 11898) used is CAN2.0A with 11-bit identifier. The integrated CANopen interface has been developed as a Minimum Capability Device. Data are exchanged cyclically; the master reads the data made available by the slaves and writes the reference data to the slaves.

The interface is provided with functional isolation (> 1 kV).

Connection is via the CAN connector and no power supply is required.

Terminal	Name	Function	Cable cross-section
L	CAN_L	CAN_L bus line (low dominant)	0.2 ... 2.5 mm <sup>2</sup> AWG 26 ... 12
SH	CAN_SHLD	CAN shielding	
H	CAN_H	CAN_H bus line (high dominant)	

LED	Meaning
<b>CAN (green)</b>	
Off	Stop
Flashing	Pre-operational
On	Operational

A shielded twin-pair (of the type described in the CANopen specifications) must be used for connection to the bus, and must be laid separately from the power cables, at a distance of at least 20 cm. Cable shielding must be grounded at the two ends. If the cable shielding is grounded at different points of the system, use equipotential connection cables to reduce the current flow between the drive and the CANbus master.

**Note!**

**As regards terminations:** the first and last termination on the CAN network must have a 120 ohm resistor between pins L and H.

If the ADL500 drive is in one of these positions, the termination resistor can also be inserted using the jumper P5 on the regulation board can be turned (ON) (the top cover must be removed, see section "A.1.1 - Installation" on page 94) or set parameter 4008 **Can Terminator** = 1 (CAN1) on 6.1 CONTROL COMM menu.


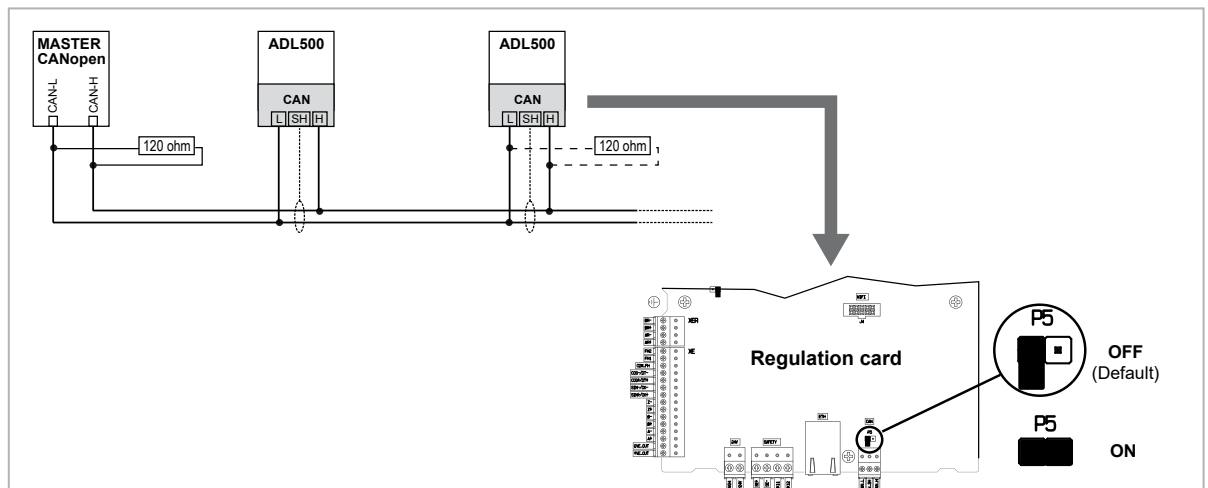


Figure 7.5.1: CANbus connection

## 7.6 Optional Keypad interface (RJ45 connector)



The female RJ45 port on the front of the inverter is used to mechanically attach and connect the optional KB-ADL500 keypad. The optional KB-ADL500 keypad is automatically recognised and managed by the drive.

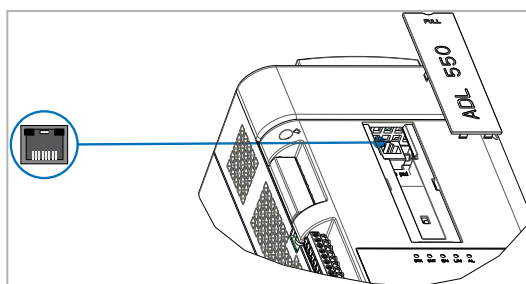

**Caution**

.....  
The connection have no galvanic isolation!  
.....


### KIT REMOTE KB-ADL500

The keypad can be used remotely from distances of up to 5 or 10 m: using the appropriate KIT REMOTE KB-ADL500 5m/10mt, codes S5P11TK1 and S5P11TK2 respectively.



**Attention**

.....  
The kits consist of an Ethernet cable with male RJ45 connectors and a female-to-female adapter.  
Properly attach the F/F adapter to the optional keypad as shown in the figure:

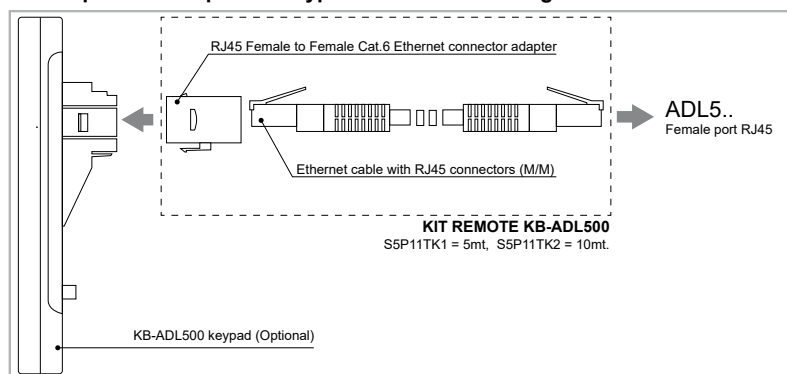

## 7.7 USB port for data storage

For ADL550 and ADL530 only.

### Note!

.....  
For port location see section "7.1 Location and identification of terminals and LEDs" on page 25.  
Connection to a PC is not possible with this USB port.  
.....

USB 2.0 port for saving data to a common USB memory (🔌).

Type A connector.  
Max current available 150 mA.  
The USB memory device must be formatted in FAT 32.

For additional information see chapter "8.2.13.2 Saving and recovery of new parameter settings on USB" on page 60.

## 7.8 Wi-Fi module port

### Note!

.....  
For port location see section "7.1 Location and identification of terminals and LEDs" on page 25.  
.....


The ADL530 and ADL550 series drives are equipped with a dedicated 10-pin connector (📶) for the optional external **Wi-Fi Drive Link** module.

The module enables local wireless communication between the ADL530 and ADL550 series drives and other wireless devices such as smartphones, tablets and PCs and the WEG\_Liftouch App.

## 7.9 Connection diagrams

### 7.9.1 Regulation potentials, digital I/O

Figure 7.9.1: Regulation potentials

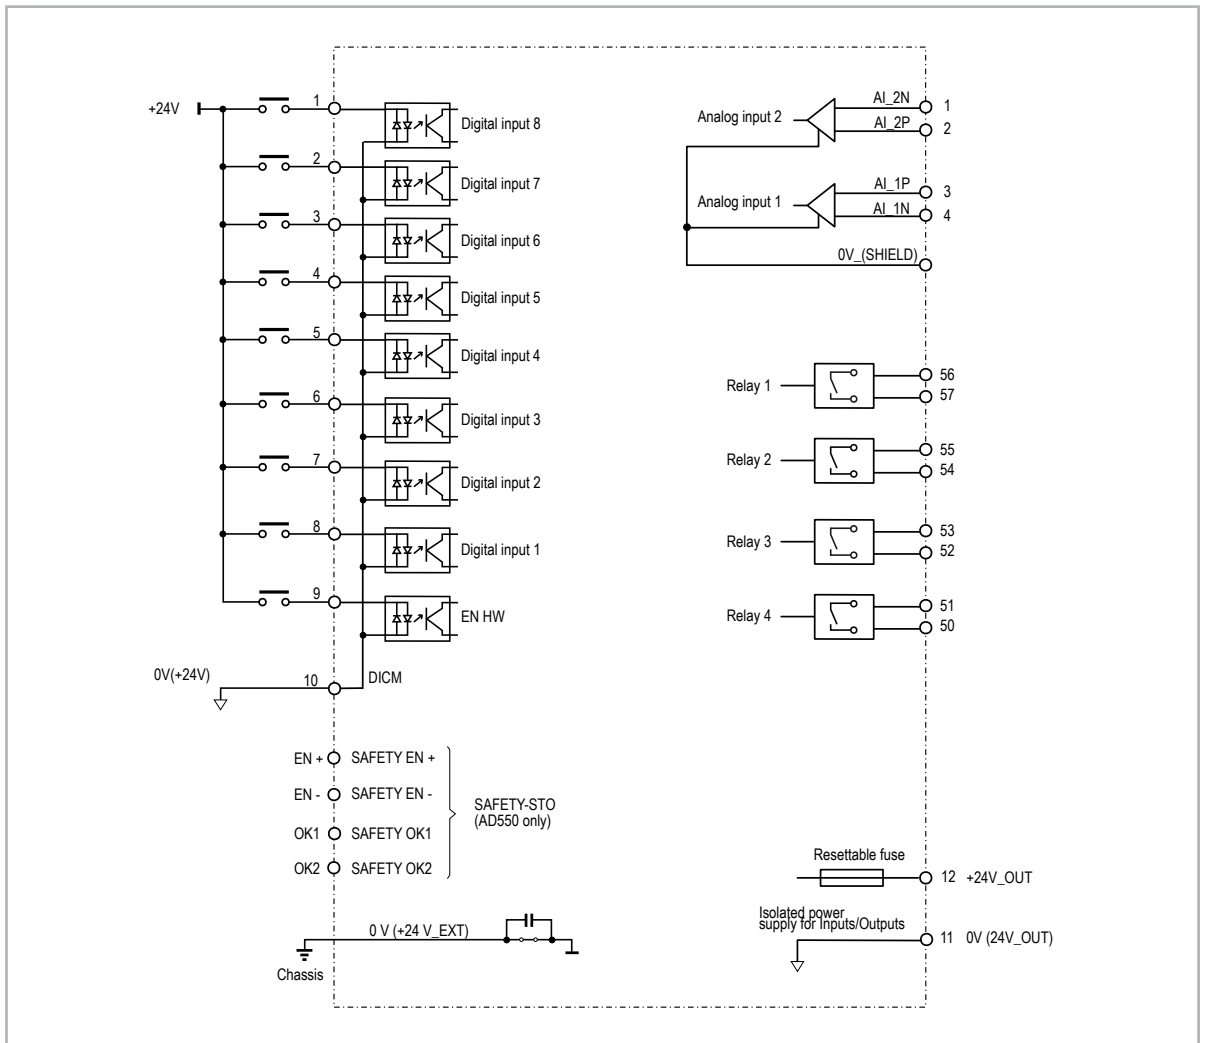



## 7.9.2 Typical connection diagram

**Note!**

Recommended combination F1 fuses: see chapter "5.1 External fuses" on page 18.

Figure 7.9.2: Typical connection diagram (Sizes ADL550-1040 ...2150)

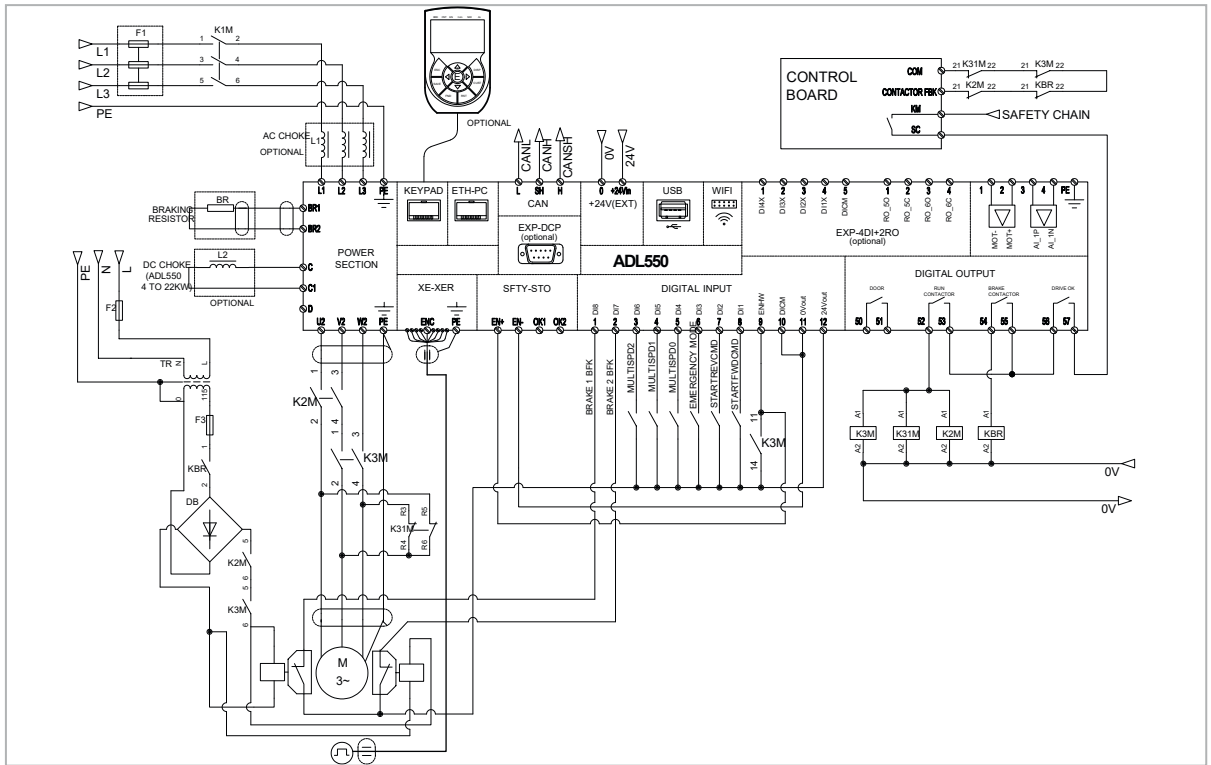


Figure 7.9.3: Typical connection diagram (Sizes ADL530-1040 ...2150)


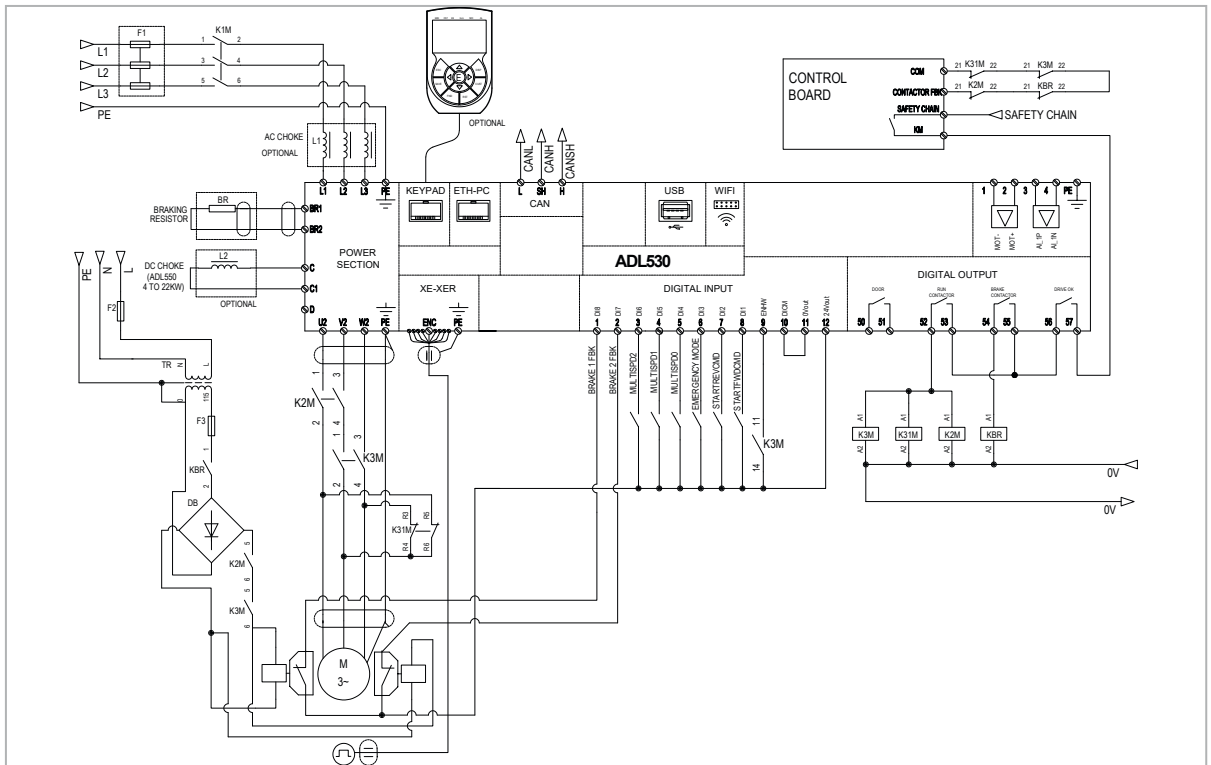


Figure 7.9.4: Typical connection diagram (Sizes ADL510-1040 ...2150)



### 7.9.3 Safety connections

Diagram of a lift system conforming to **EN 81-20 5.9.2.5.4 d**, without contactors and with safety function integrated STO (EN 61800-5-2- SIL3).

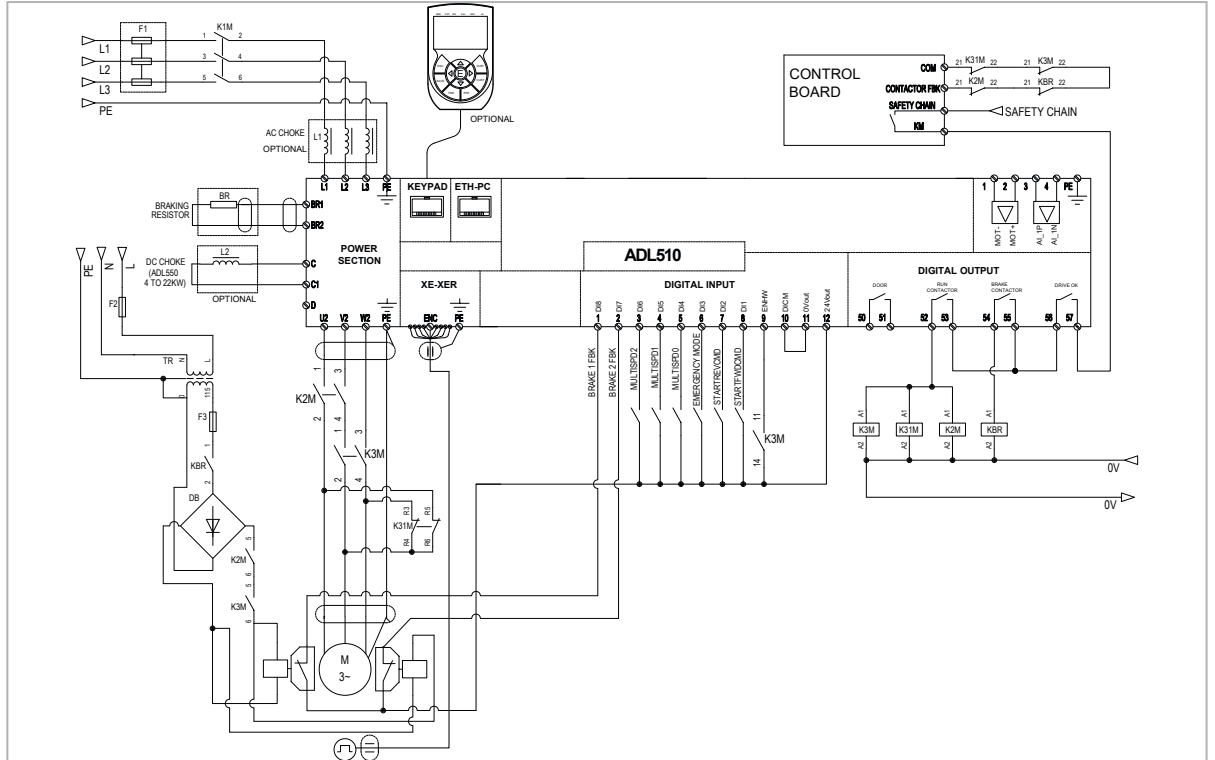

To use this type of connection reference should be made to the safety and installation instructions in the **ADL550 / ADL550-ICS "Safe Torque Off"**, cod. 1S95STOENW, downloadable from the WEG website ([https://www.weg.net/...](https://www.weg.net/)).

Figure 7.9.5: Connections safety for control with a single contactor

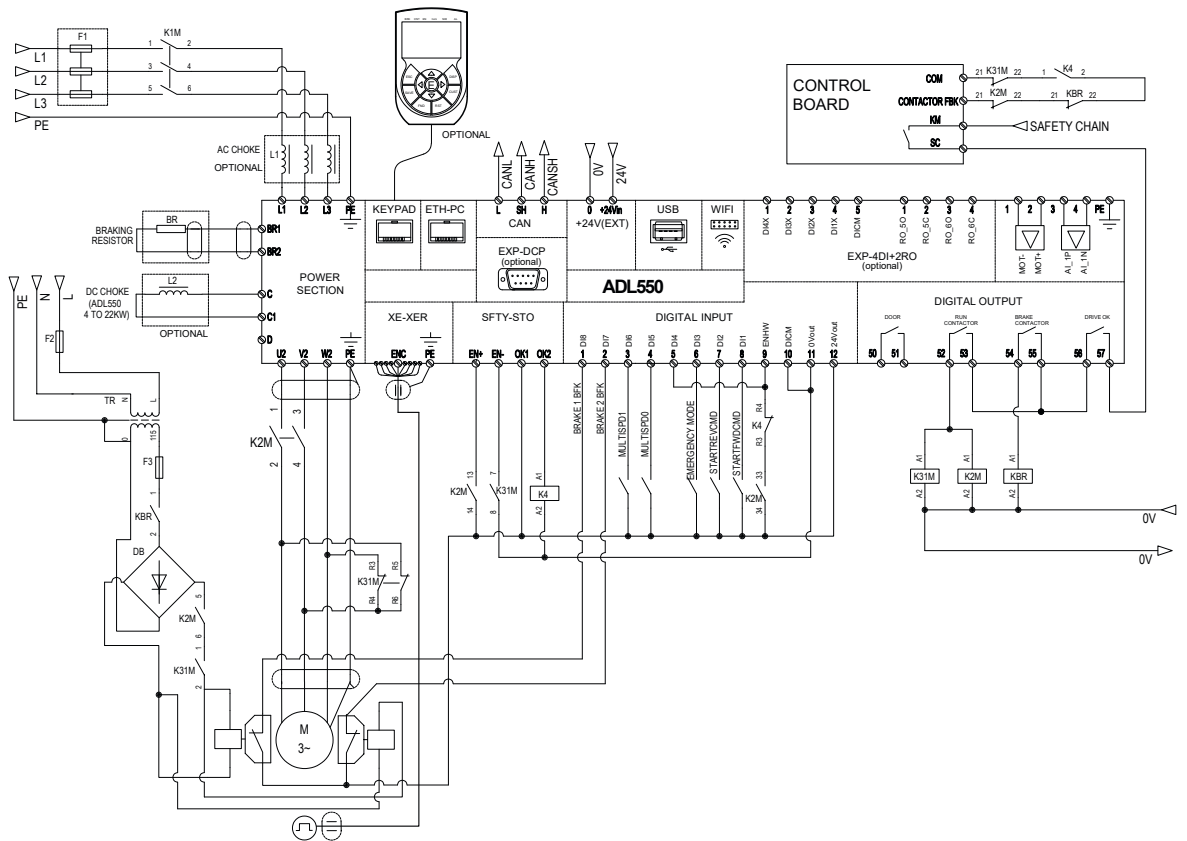


Diagram of a lift system compliant with EN 81-20 5.9.2.5.3 d, without contactors and integrated safety function STO (EN 61800-5-2- SIL3).

Figure 7.9.5-A: Contactorless connection (Asynchronous motor)


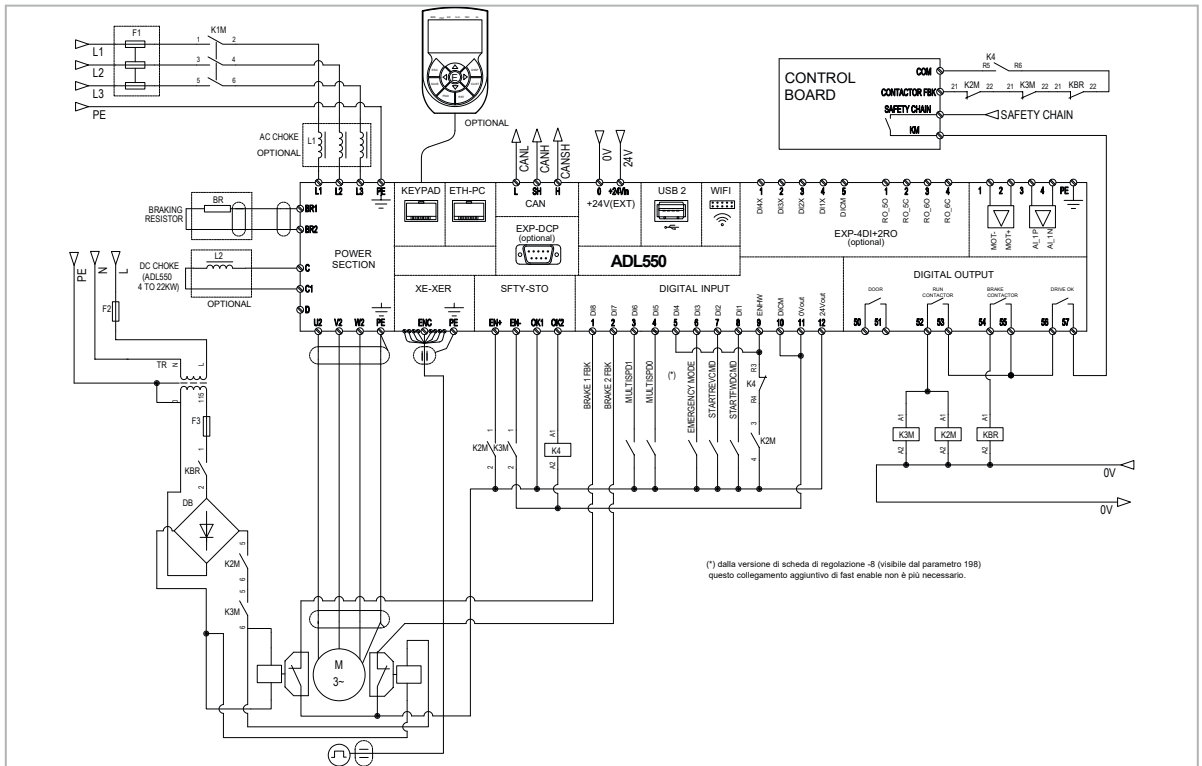


Figure 7.9.5-B: Contactorless connection (synchronous motor)

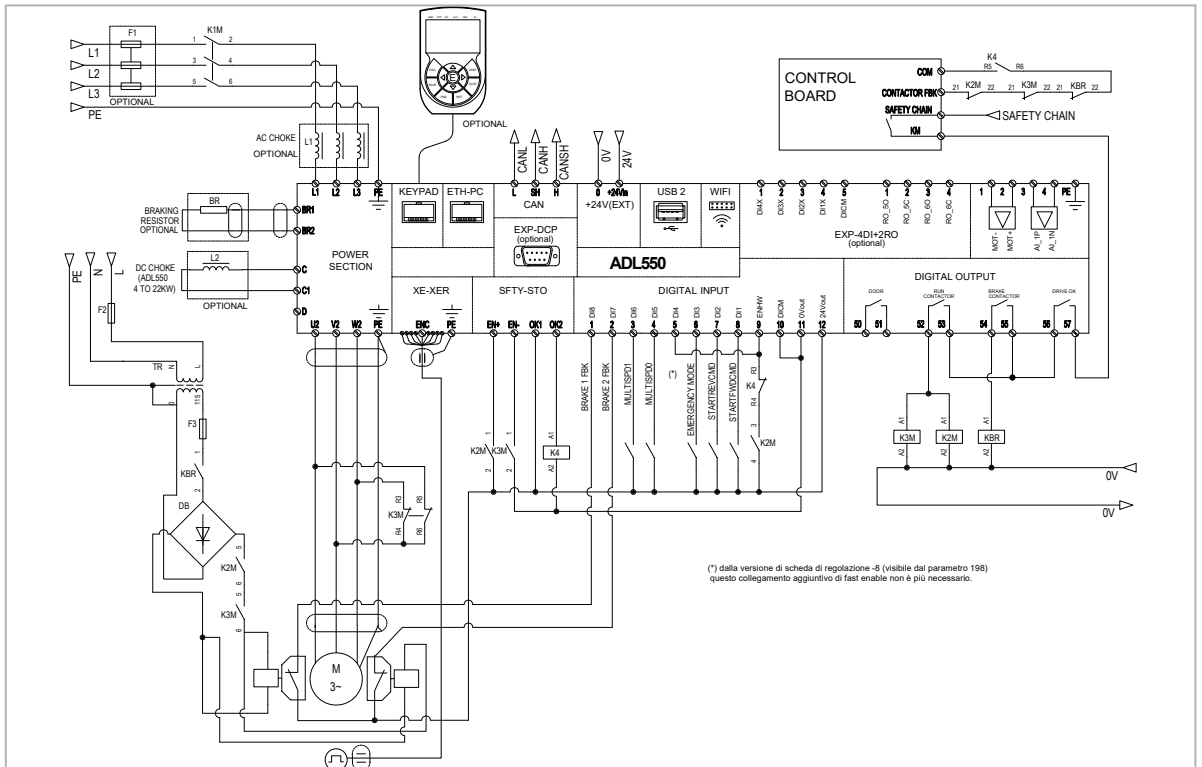

## 7.10 Emergency and return to the floor manoeuvres in case of blackout

The drive allows to manage different types of emergency maneuver (after bypass of safety as instructed by the manufacturer of the control board) or automatic maneuvers to the plane in case of blackout.

The following manoeuvres are possible:

- emergency manoeuvres with car movement by unbalancing (only possible for engine-driven systems synchronous or asynchronous closed-loop ASY FOC);
- emergency battery saving manoeuvres (only possible for systems powered by synchronous or asynchronous closed loop ASY FOC);
- emergency manoeuvres by re-energizing the engine.

The possible maneuvers of return to the floor in case of blackout are the following:

- automatic return to the floor by unbalancing (only possible for systems driven by synchronous or synchronous motors asynchronous closed loop ASY FOC);
- return operation to the floor in battery saving mode (only possible for systems driven by synchronous or asynchronous ring motors closed ASY FOC);
- return to floor via UPS or battery pack + EMS module.


Emergency manoeuvres, to be carried out with the man present who bypasses the safety devices, can be carried out due to unbalance without energizing the motor or energizing the motor via the mains or backup power supply type UPS or battery pack + EMS module. The discriminant of the type of maneuver is activation of the emergency input and the activation of the unbalance maneuver input activated through the parameter 11820 Brake opening sel. If the emergency input due to unbalance is not activated but only the emergency input is activated then, depending on the value set in parameter 11262 autoselect direction, commanding a run through the up or down commands, the motor will turn with the modes indicated in the parameter itself with the speed indicated in parameter 11260 Emergency mode speed. Usually this type of maneuver is done with the maintenance technician which, having bypassed the safety devices using special circuits, commands a maneuver via the button panel inspection present in the control panel. Activation of the emergency brake activation input has the priority over the emergency maneuver that energizes the engine.

### 7.10.1 Emergency manoeuvres with cabin movement for imbalance

The "present man" emergency manoeuvre for ASY FOC gearless or ASY FOC non self-braking gearless motors has the following operation.

The purpose of the function is to allow the movement of the car when there is no main power and/or when the safety chain has remained open in order to bring it to the nearest floor by simple gravity.

- The maneuver is possible only when the drive is in emergency condition, commanded by the control board through the digital input "Emergency Mode".
- There must be a digital input, "Digital input Y" in the figure below, which will be connected to a button "Start emergency maneuver" of the panel board that will enable the movement of the car. The input is configurable with the Sel brake opening parameter, PAR 11820.
- When the button is pressed the inverter via the output relay "Brake Contactor" will open the brake contactor. The PAR 11094 parameter set in Brake + Run mode allows you to activate also the run contactors that are located along the supply line of the brake coil.
- The operator will press the button to move the cab.
- Using the parameter 11822 Max vel em "Max speed manual emergency" you can set the maximum speed that the car (or motor) can have during this maneuver. The speed can be expressed in m/s (if related to the car) or in rpm (if related to the motor).
- If the car reaches the maximum speed allowed the drive locks the brake for a time T configurable by parameter 11824 Lock time, disabling the use of the button (even if pressed does not release the brake).
- As soon as you enter the emergency manual maneuver, the display automatically displays the current car speed (or motor if set rpm) and the Fwd or Rev direction through the positive or negative sign indicator.

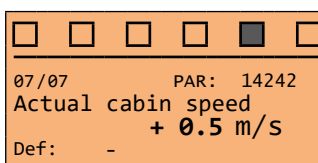

Since the direction of rotation of the motor in relation to the direction taken by the car depends on the mechanical arrangement of the engine in relation to the ropes and the cab, it is necessary to check during installation what the positive and negative direction indicate and to report it on the specific instructions of the emergency manoeuvre (For example, if with the + sign of the moving engine the car goes down you must specify that the + sign is equivalent to the car going down).

- This maneuver must be disabled in case of inspection.

The car will move (Brake Contactor = Open) only in the following conditions:


- Emergency Mode: ON (Contactor Closed)
- **Brake release src**: ON (Contactor Closed)
- Emergency Manual V: < Em max speed
- Contactor Lock Time = 0



Attention

.....  
**This emergency manoeuvre, performed as outlined in chapter 5.12.1.6 of EN 81-20, requires that the other contactors, those in series with the contactor actuated by the drive brake contactor output, be activated either by the value Brake + Run in parameter 11094 or they must be bypassed following the safety specifications given in that chapter and in chapter 5.11.2 (Electrical safety devices); if not, the brake power supply circuit will not close and the brake cannot be opened electronically.**  
 .....

Figure 7.9.8: Diagram of main emergency maneuver

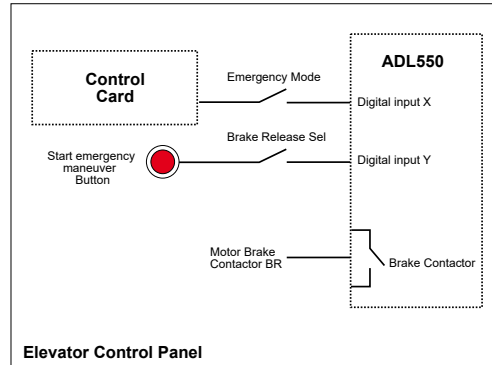

### 7.10.2 Emergency manoeuvres for battery saving

For the description of this maneuver refer to paragraph 7.10.5 taking into account that with respect to the automatic maneuver you need the presence of the maintainer that bypasses the safety chain and that controls the maneuver to dead man.

### 7.10.3 Emergency manoeuvres by energizing the engine

For the description of this manoeuvre, refer to paragraphs 7.10.6 or 7.10.7, taking into account that the automatic manoeuvre requires the presence of the maintainer that bypasses the safety chain and controls the maneuver in the dead man.

### 7.10.4 Maneuver of return to the floor for imbalance in case of blackout

The ASY FOC manoeuvre for unbalance in the event of a power outage for gearless or non self-braking closed loop ASY FOC motors has the same operation as the emergency manoeuvre for man-side imbalance present with the difference that, if the safety chain remains closed, the movement control by imbalance via the "Digital Input Y" input can be automatically given by the elevator control board.

In this case, as an alternative to the digital input input y the command can be activated by simultaneous activation of the inputs frw and rev after setting the parameter 11820 Sel brake opening to the value FWD+REV.

The offset mode takes precedence over the battery save mode in the sense that if I activate a digital input as brake release button, if this input is active in addition to the emergency input set with the battery-save functionsaving, the unlocking feature takes precedence and the latter function is performed (with or without activation of the contactors output depending on the parameter 11094 Brake release type).

### 7.10.5 Maneuver of return to the floor battery saving in case of blackout

The principle of operation of the function of return to the floor in case of a power outage with battery saving works as follows: with emergency input activated the drive tries to move the motor (gearless or non self-braking closed-loop ASY FOC gears) using only the imbalance as for a manoeuvre for unbalance that opens only the brake (and eventually also the run contactors by setting the parameter PAR 11094 Brake release type in "Brake + Run" mode), if within a preset time from par 11092 Em min spd time the car moves beyond the minimum speed set with the parameter 11090 Em min speed then the car continues the ride until it reaches the floor or until it reaches the maximum speed setted in emergency set parameter 11822 Max vel em; the attainment of this speed involves the immediate stop of the drive with reopening of the contactors and the consequent waiting of the time 11824 Block time before it is automatically recalled by the drive the brake reopening (The emergency control must always remain active. If by the time 11092 the car does not reach this speed the manoeuvre for imbalance is interrupted and then continue with the engine powered).



Warning!

.....  
**The parameter 11824 Lock time, which defines the waiting time when the brake is pressed between the release of the brake for reached maximum speed in emergency and the subsequent closing of the brake, must be less than 11092 min vel time otherwise the maneuver turns into energized maneuver. The speed of the cabin com motor powered is determined by the parameter 11014 Em max speed Sav bat.**  
 .....

In the case of selection "Battery saving" the direction that takes the motor is indicated by the input of ascent or descent. In the case of selection "Batterysave+Rec" the direction taken by the motor is independent of the enabled input up or down and follows the recommended direction previously stored in the drive. Summing up, in this maneuver first the emergency input must be activated, then the control board must command a movement of ascent or descent also enabling the enable as a normal maneuver (except that multispeed inputs that are not considered and the motor speed is adjusted by parameter 11260), then the car will move for imbalance or in the way with energized motor.



Once the cabin has reached the floor is the control board that controls the engine stop by removing the up or down input and then the enable input.

### 7.10.6 Return to the floor in case of blackout with EMS module (Models ADL5.0-...-EMS)

In case of lack of three-phase power supply, the system manages the movement of the engine in emergency condition through an external battery connected to the EMS module integrated in the ADL510/530/550-...-EMS models.

The contactor of the KE battery can always be closed to reduce the stop time of the cab. Its main use is to preserve the battery after the emergency maneuver is completed.

Figure 7.9.6: Diagram emergency connection with module EMS

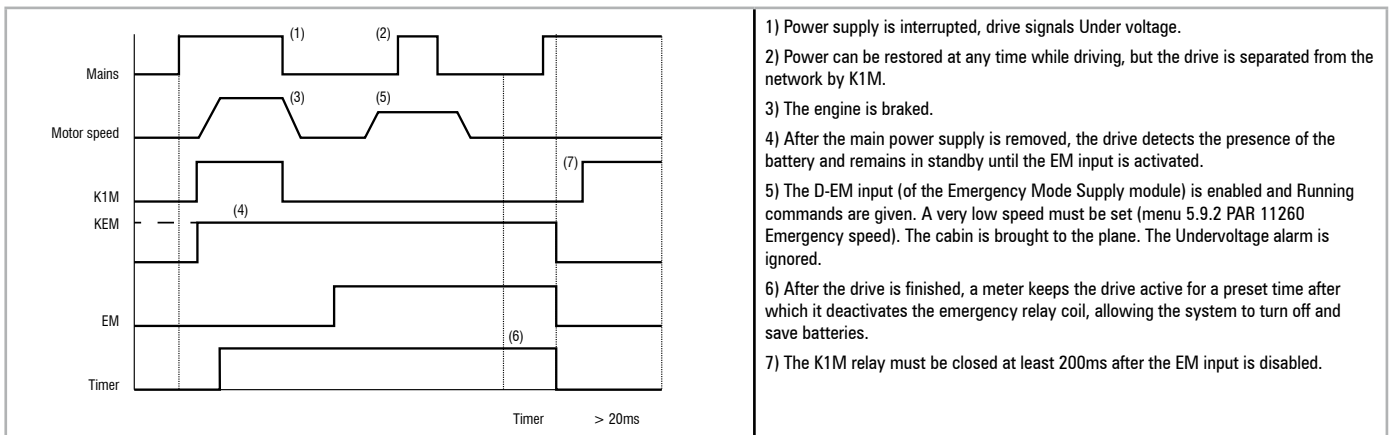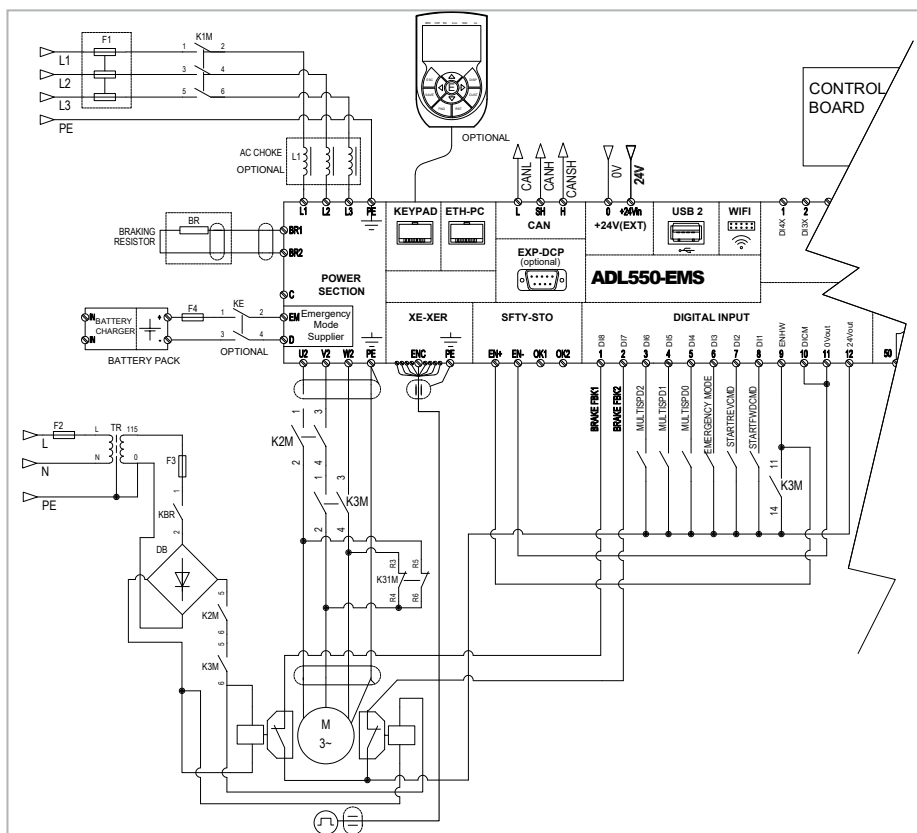

- 1) Power supply is interrupted, drive signals Under voltage.
- 2) Power can be restored at any time while driving, but the drive is separated from the network by K1M.
- 3) The engine is braked.
- 4) After the main power supply is removed, the drive detects the presence of the battery and remains in standby until the EM input is activated.
- 5) The D-EM input (of the Emergency Mode Supply module) is enabled and Running commands are given. A very low speed must be set (menu 5.9.2 PAR 11260 Emergency speed). The cabin is brought to the plane. The Undervoltage alarm is ignored.
- 6) After the drive is finished, a meter keeps the drive active for a preset time after which it deactivates the emergency relay coil, allowing the system to turn off and save batteries.
- 7) The K1M relay must be closed at least 200ms after the EM input is disabled.



### 7.10.7 Automatic return to floor maneuver in case of blackout with UPS

In the event of a three-phase power failure, the system manages the movement of the motor in emergency conditions via the 230 Vac single-phase power supply from the UPS device.

The UPS must be correctly sized to guarantee, during the emergency phase, a nominal voltage of 230Vac (with the usual mains tolerances).

With this connection the EM terminal, eventually present on the power terminal block, will not be used.

Figure 7.9.7: Emergency connection diagram from UPS device

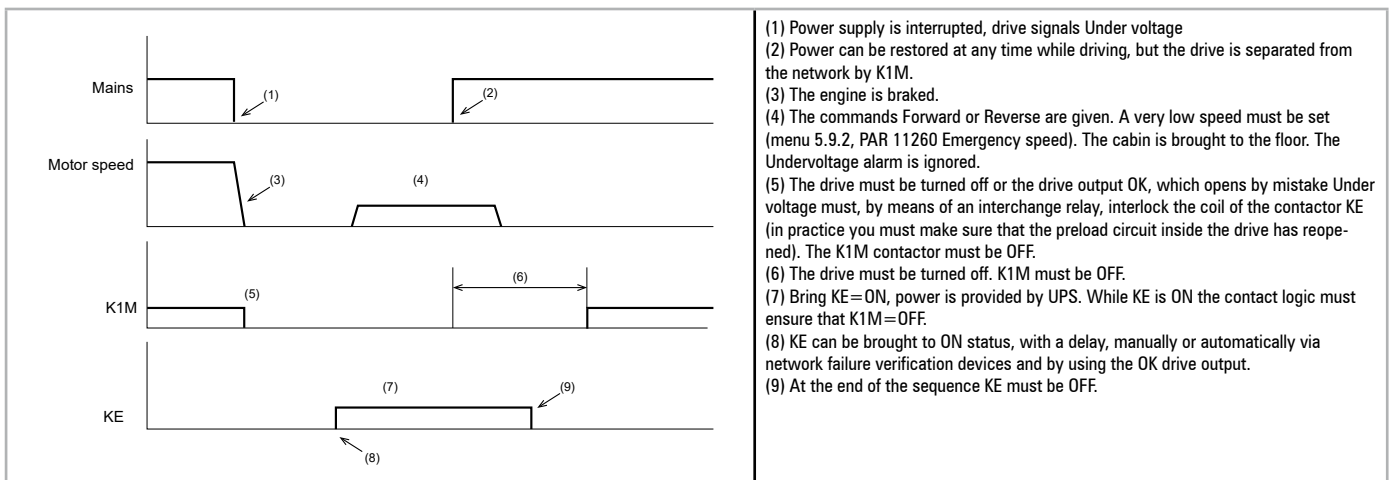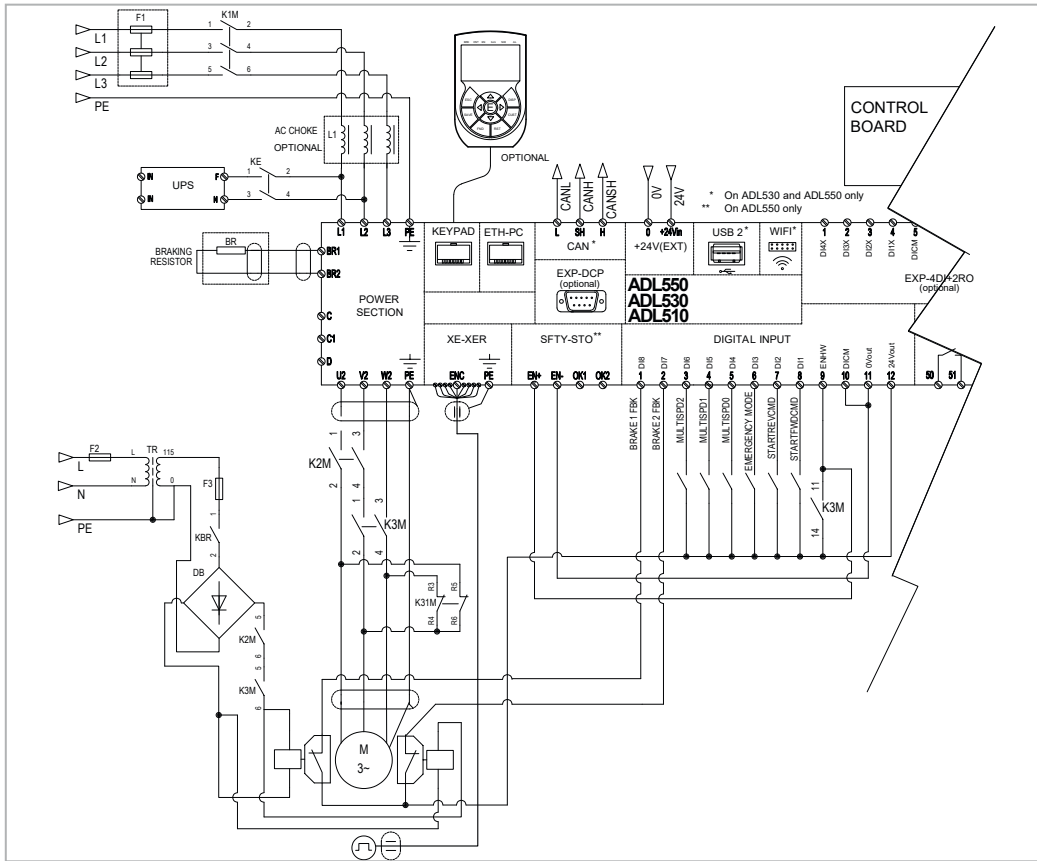



## 7.11 Braking

There are several braking options:

- by internal braking unit combined with an external braking resistance  $R_{br}$ ;
- by injection of direct current into the motor by the inverter (DC braking).

The two possibilities present these fundamental differences:

- With a braking unit it is possible to obtain an intermediate braking (for example from 1000 to 800 rev/min) while the DC braking is only usable to stop the engine up to zero speed.
- The energy found in the drive is transformed into heat in both cases: with the use of a braking unit is dissipated on an external resistance, while for DC braking occurs in the form of transformation into heat in the engine windings (additional heating of the engine).

### 7.11.1 Braking unit (internal)

Frequency-regulated asynchronous motors during hyper-synchronous or regenerative functioning behave as generators, recovering energy that flows through the inverter bridge, in the intermediate circuit as continuous current.

This leads to an increase in the intermediate circuit voltage.

Braking units (BU) are therefore used in order to prevent the DC voltage rising to an impermissible value. When used, these activate a braking resistor that is connected in parallel to the capacitors of the intermediate circuit. The feedback energy is converted to heat via the braking resistor ( $R_{BR}$ ), thus providing very short deceleration times and restricted four-quadrant operation.

**In the standard configuration, ADL drives ( $\leq 55\text{kW}$ ) comprise an internal braking unit.**

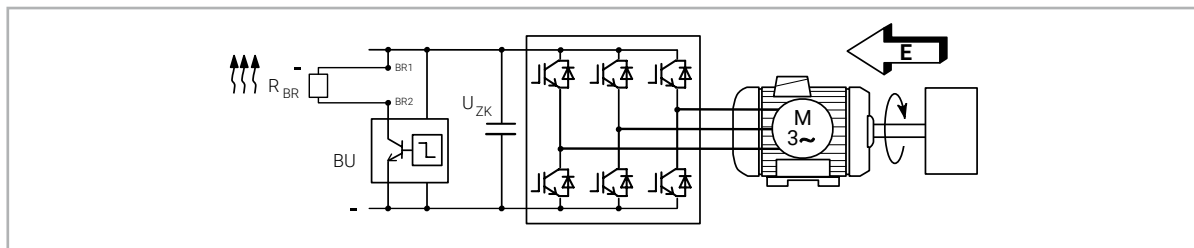


Figure 7.10.1: Operation with braking unit (circuit diagram)

#### Note!

When the internal braking unit is present the protection must consist of fast-acting fuses! Follow the relative assembly instructions.

A twisted or shielded cable must be used for the connection of the braking resistor (terminals BR and C or BR1 and BR2). If the resistor includes a thermal protection device (Klixon), this must be connected to the "External fault" input of the drive.

Table 7.10.1: Technical data of the internal braking unit

Size	$I_{RMS}$ (A)	$I_{PK}$ (A)	$R_{BR}$ ( $\Omega$ )
<b>ADL5...-4, 3ph</b>			
1040	8,3	11,8	68
1055	8,3	11,8	68
1075	11,5	16,3	49
2110	20,2	28,5	28
2150	20,2	28,5	28

**$I_{RMS}$**  Braking unit rated current, duty cycle = 50%

**$I_{PK}$**  Peak current that can be delivered for max 60 seconds

**$R_{BR}$**  Minimum braking resistance value

Table 7.10.2: Braking unit intervention threshold

Size	V <sub>BR</sub> @ 480 V		V <sub>BR</sub> @460 V		V <sub>BR</sub> @ 400 V		V <sub>BR</sub> @ 230V	
	ON	OFF	ON	OFF	ON	OFF	ON	OFF
<b>ADL5...-...-4, 3ph</b>								
1040 ... 2150	800 Vdc	790 Vdc	768 Vdc	758 Vdc	670 Vdc	660 Vdc	394 Vdc	384 Vdc

**Note!**

For the combination of recommended braking resistors refer to chapter "5.4 External braking resistors" on page 19.


## 8. Use of the optional keypad (KB-ADL500)

This section describes the optional KB-ADL500 programming keypad (cod. S5P11T) and how to use it (display and programming parameters).

**Note !**

For the connection refer to section "7.6 Optional Keypad interface (RJ45 connector)" on page 39.

### 8.1 Description

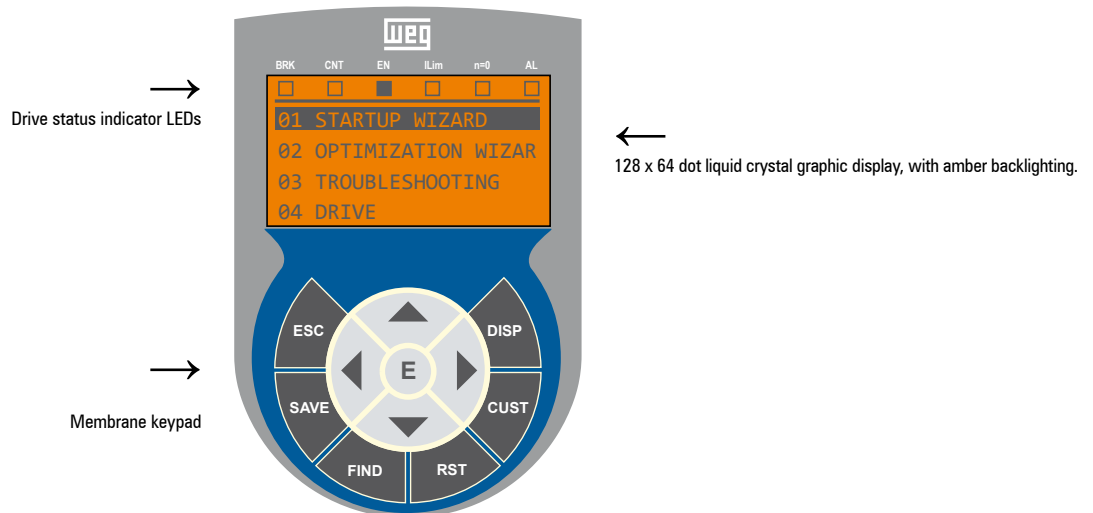

#### 8.1.1 Membrane keypad

This section describes the keys on the membrane keypad and their functions

Symbol	Reference	Description
ESC	Escape	Returns to the higher level menu or submenu. Exits a parameter, a list of parameters, the list of the last 10 parameters and the FIND function. Can be used to exit a message that requires use of this.
SAVE	Save	Saves the parameters directly in the non-volatile memory without having to use PAR 550 <b>Save parameters</b>
FIND	Find	Enables the function for accessing a parameter using its number. To exit these functions, press the ◀ key.
RST	Reset	Resets alarms, only if the causes have been eliminated.
CUST	Custom	Displays the last 10 parameters that have been modified. To exit these functions, press the ◀ key.
DISP	Display	Displays a list of drive functioning parameters.
E	Enter	Enters the submenu or selected parameter, or selects an operation. It is used when modifying parameters to confirm the new value that has been set.
▲	Up	Moves the selection up in a menu or list of parameters. During modification of a parameter, increases the value of the digit under the cursor.
▼	Down	Moves the selection down in a menu or list of parameters. During modification of a parameter, decreases the value of the digit under the cursor.
◀	Left	Returns to the higher level menu. During modification of a parameter, moves the cursor to the left.
▶	Right	Accesses the submenu or parameter selected. During modification of a parameter, moves the cursor to the right.


#### 8.1.2 Meaning of LEDs

LEDs	Meaning of LEDs
BRK	The LED is lit when the drive has activated the brake release command
CNT	The LED is lit when the drive has activated the close contactors command
EN	The LED is lit during IGBT modulation (drive operating)
ILIM	When this LED is lit the drive has reached a current limit condition. During normal functioning, this LED is off.
N=0	The LED is lit when motor speed is 0.
AL	The LED is lit when the drive signals that an alarm has been triggered

## 8.2 Navigating with the optional keypad


### 8.2.1 Scanning of the first and second level menu

First level

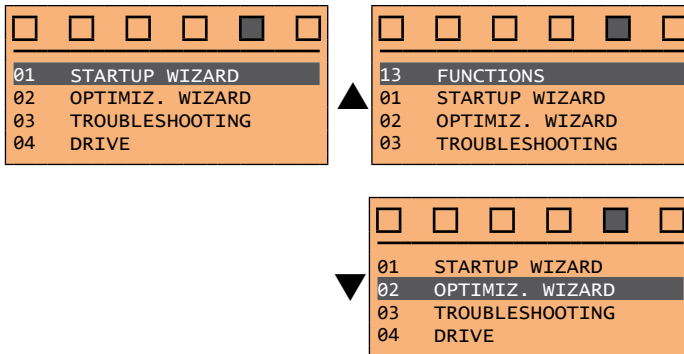


First level

Second level

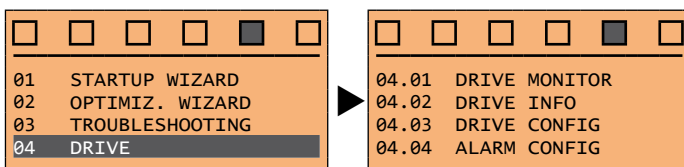

### 8.2.2 Display of a parameter

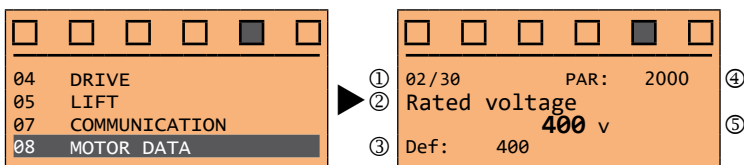

(1) Reference to the menu where the parameter is to be found, in this case menu MOTOR DATA (02/30)

(2) Description of the parameter (**Rated voltage**)

(3) Depends on the type of parameter:

- Numeric parameter: displays the numeric value of the parameter, in the format required, and unit of measurement.
- Binary selection: the parameter may assume only 2 states, indicated as **On - Off** or 0 - 1.
- LINK type parameter: displays the description of the parameter set from the selection list.
- ENUM type parameter: displays the description of the selection
- Command: displays the method of execution of the command


(4) Parameter number

(5) In this position, the following may be displayed:

- Numeric parameter: displays the default, minimum and maximum values of the parameter. These values are displayed in sequence pressing the ► key.
- LINK type parameter: displays the number (PAR) of the parameter set.
- ENUM type parameter: displays the numeric value corresponding to the current selection.
- Command: in the case of an error in the command, indicates that **ESC** must be pressed to terminate the command.
- Messages and error conditions:

Param read only	attempt to modify a read-only parameter
Drive enabled	attempt to modify a non-modifiable parameter with the drive enabled
Input value too high	the value entered too high
Input value too low	the value entered too low
Out of range	attempt to insert a value outside the min. and max. limits

### 8.2.3 Scanning of the parameters

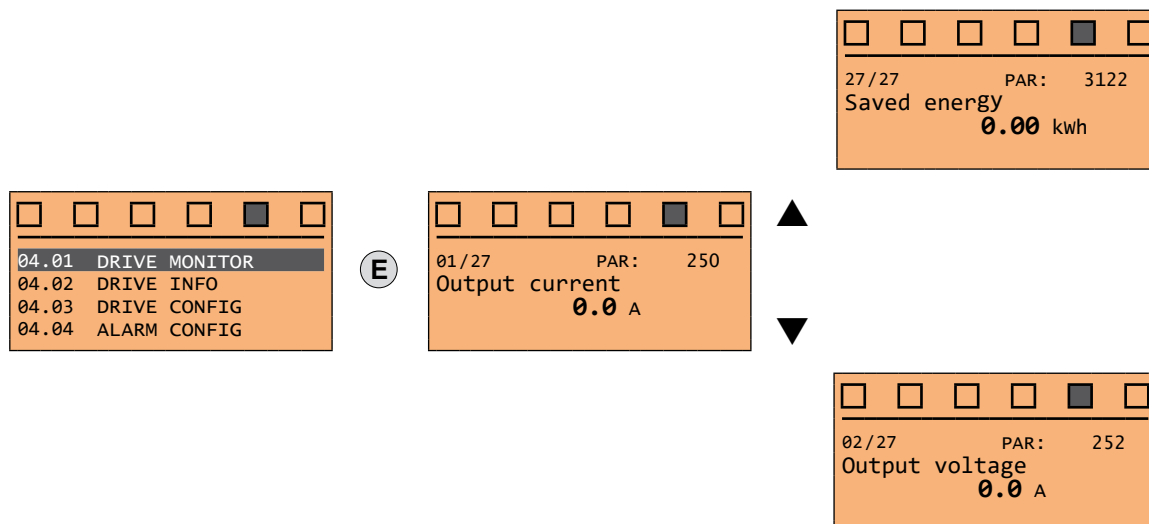

### 8.2.4 List of the last parameters modified

Pressing the **CUST** key, a list containing the last 10 parameters modified is accessed. One parameter is displayed at a time and the list can be scrolled using the **▲** and **▼** keys. To exit this list, press the **▶** key.

### 8.2.5 "FIND" function

Pressing the **FIND** key activates the function that makes it possible to access any parameter simply by entering the parameter software number (PAR). When the parameter reached by the "**FIND**" command is displayed, it is possible to navigate all the parameters forming part of the same group using the **▲** and **▼** keys. Pressing the **◀** key returns to the "**FIND**" function. To exit, press the **ESC** key.

### 8.2.6 Parameter modification

To enter parameter modification mode, press the **E** key when the parameter to be modified is displayed. To save the value of the parameter, following modification, press the **E** key again.

**Note !**


To save permanently, see paragraph 8.2.7.

To exit modification mode without saving the value, press the **ESC** key. The operations to be carried out to modify the value depend on the type of the parameter, as described below.

**Note !**

For further information about the type of parameters displayed, see paragraph 8.2.2.


- Numeric parameters**

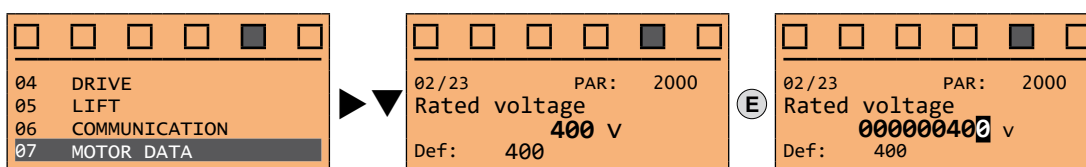

When **E** is pressed to access modification mode, the cursor is activated on the digit corresponding to the unit. Using the **◀** and **▶** keys, the cursor can be moved to all the digits, including trailing zeros that are normally not displayed. With the **▲** and **▼** keys, the digit under the cursor is increased or decreased. Press **E** to confirm the modification or **ESC** to cancel.

- **Binary parameters (BIT type)**


The parameter may assume only two states which are indicated as **On-Off** or 0-1.

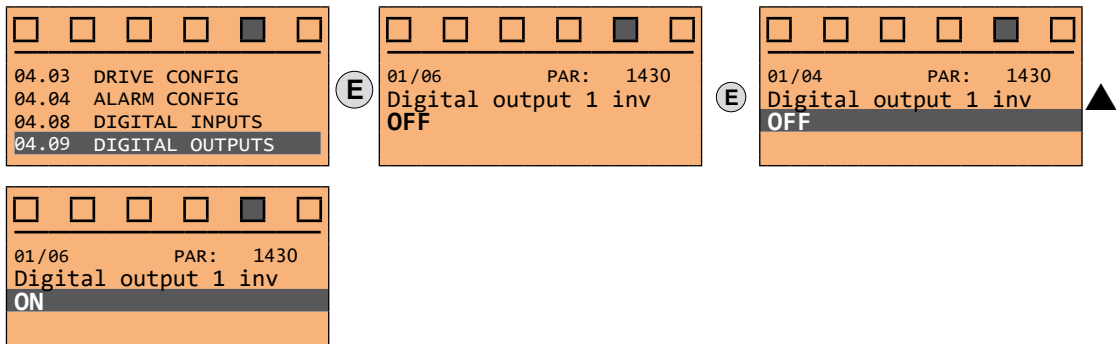

Press **E** to activate modification mode. The entire line is displayed in reverse. Use the **▲** and **▼** keys to move from one state to another. Press **E** to confirm the modification or **ESC** to cancel.

- **LINK parameters**


The parameter may assume the number of another parameter as value.

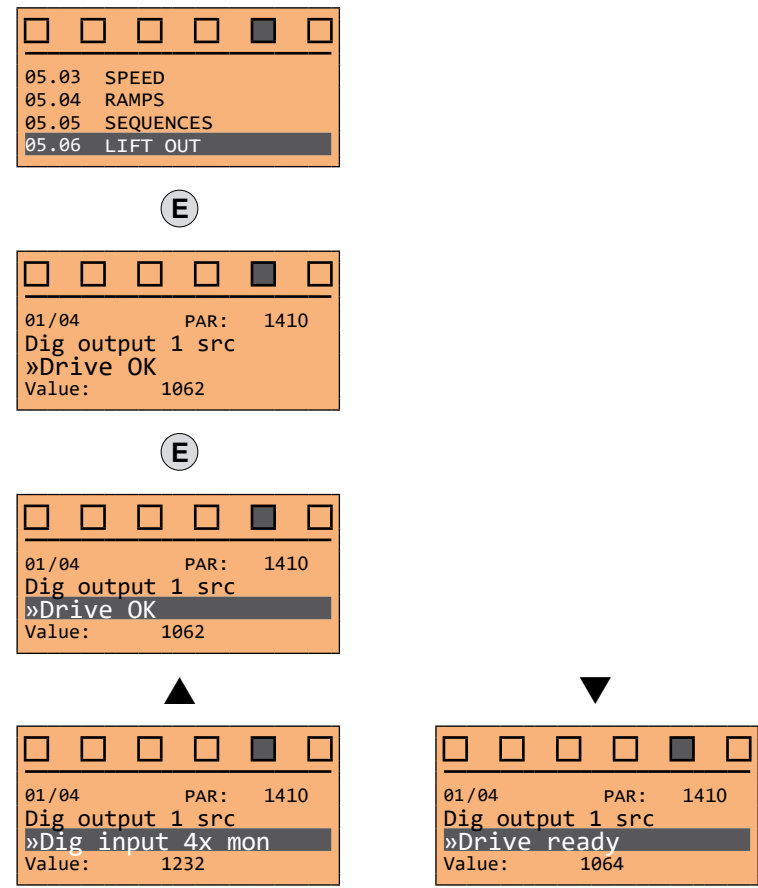

Press **E** to activate modification mode. The entire line is displayed in reverse. The elements of the list of parameters associated with this parameter can be scrolled using the **▲** and **▼** keys. Press **E** to confirm the modification or **ESC** to cancel.

- **ENUM parameters**

The parameter may assume only the values contained in a selection list.

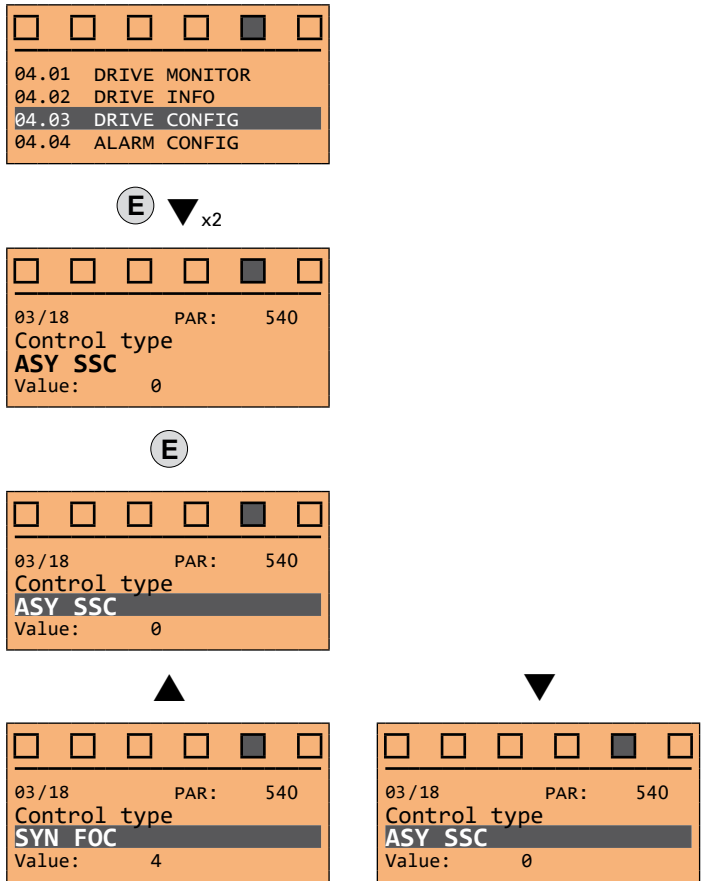

Press **E** to activate modification mode. The entire line is displayed in reverse. The elements of the selection list can be scrolled using the **▲** and **▼** keys. Press **E** to confirm the modification or **ESC** to cancel.

- **Execution of commands**


A parameter can be used to carry out a number of operations on the drive. For an example, see next paragraph: in this case the request "**Press E to execute**" is displayed.

To execute the command, press **E**. During execution of the command, the "**In progress**" caption is displayed to indicate that the operation is in course. At the end of execution, if the result is positive, the "**Done**" caption is displayed for few seconds. If execution has failed, an error message is displayed.

### 8.2.7 How to save parameters

There are two ways of saving parameters in the non-volatile memory of the drive:

- 1) By pressing the **SAVE** key on the keypad.
- 2) Menu CONFIG DRIVE, parameter **Save parameters**, PAR : 550. This is used to save changes to parameter settings so that they are maintained even after power-off.

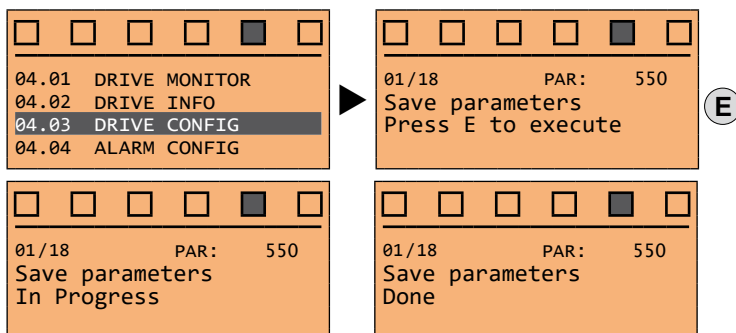

To exit, press the **◀** key.


## 8.2.8 Configuration of the display

### 8.2.8.1 Language selection

Menu CONFIG DRIVE, parameter 04.19 **Language select**, PAR: 578, default=English.

This is used to set one of the languages available: English, Italian, French, German, Spanish and Turkish.

English and Italian are pre-installed on the drive. To select Italian:

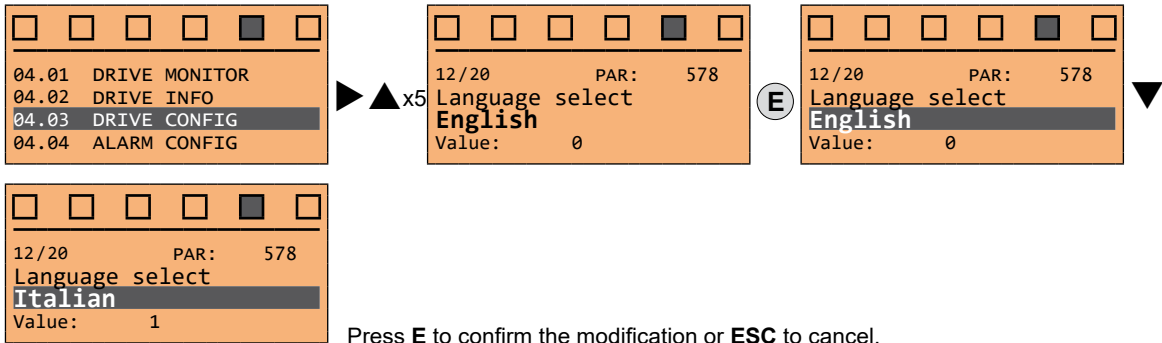

To set a different language:


#### ADL530 and ADL550 (from keypad)

- Download the available languages file from the WEG site (<https://www.weg.net/...>, DRIVE SET-UP folder).

#### Note!

The language file must be aligned with the version of both the drive firmware and application. Check correspondence!

- Unzip and save the files on a USB flash drive, in a folder called "ADL500LN". It is necessary that in the ADL500LN folder the language files (.lan) are separated without further subfolders.
- Insert the flash drive into the drive's USB port.
- Select the **Language Select** parameter and set the new language as shown in the example below (note that the drive will reboot once the language loading procedure has been completed):
- Save the new configuration (press SAVE).

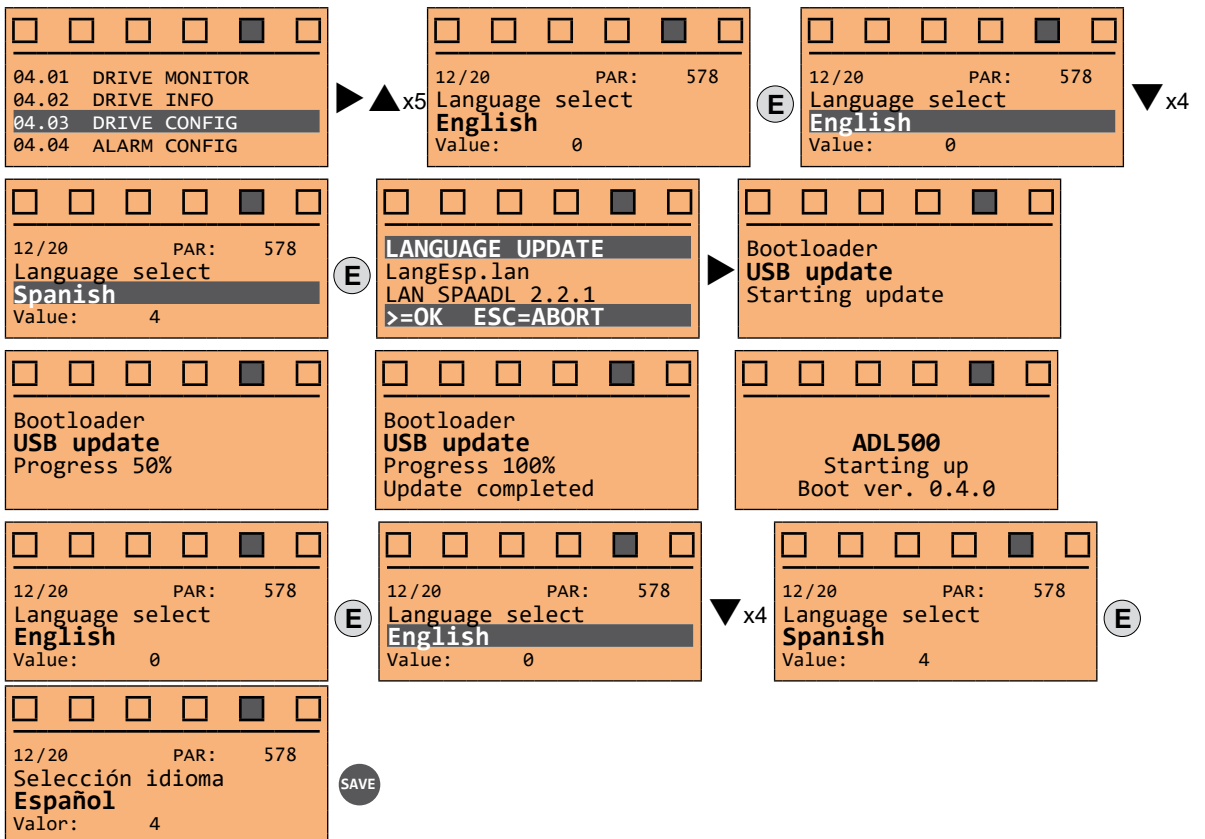

#### Note!

The new language will be loaded into the drive memory and replace the Italian. English cannot be replaced by another language.

#### ADL510, ADL530 and ADL550 (from WEG\_DriveLabs configurator)

- Install the WEG\_DriveLabs configurator on the PC (available on the web site at the path <https://www.weg.net/>...)
- Connect the Ethernet cable to the PC Ethernet port and the ADL5x0 drive ETH-PC port;
- Run WEG\_DriveLabs and open the WIZARD / Setup Wizard menu;




- Click "Next" to select the **Language select** menu;
- Select the required language in the field "Value" of parameter 578 **Language select**;
- Press "Next" until selecting "Summary" and then click "Download";
- When the update is completed, "Setup done" is displayed;
- Reboot the drive and, from keypad, select the new language via the **Language Select** parameter 578

### 8.2.8.2 Access level selection

Menu CONFIG DRIVE, parameter 04.03 **Access mode**, PAR: 554.

Enables two methods of access to be configured:

<b>Readonly</b>	a read-only level, where a limited number of parameters are displayed.
<b>Easy</b>	this level allows the parameters to be displayed and modified for basic commissioning, in V/f control and without tuning.
<b>Intermediate</b>	(default) this level allows the parameters to be displayed and changed for complete commissioning and basic optimisation.
<b>Expert</b>	this level is for displaying and changing parameters for advanced optimisation.
<b>Service</b>	Reserved for WEG Service.

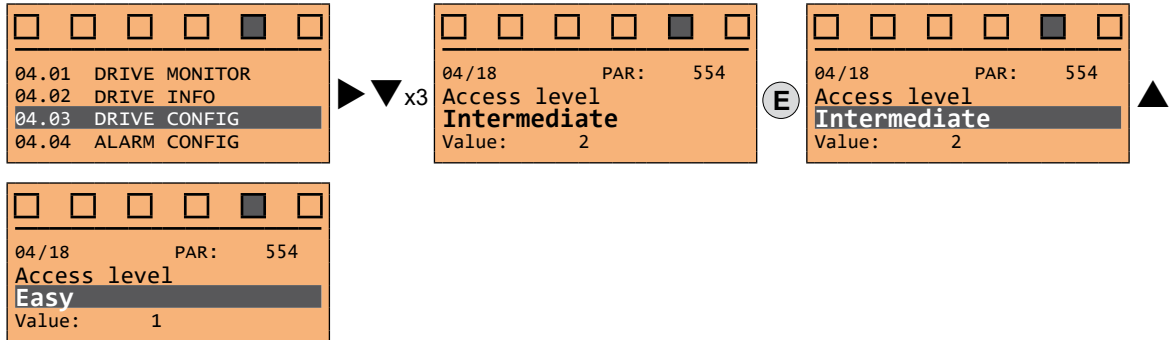

### 8.2.9 Startup display

Menu CONFIG DRIVE, parameter **Startup display**, PAR: 574.

This is used to set the parameter that will be displayed automatically at drive power-on.

Entering the value -1 (default), the function is disabled and the main menu is displayed at power-on.

### 8.2.10 Back-lighting of the display


Menu CONFIG DRIVE, parameter **Display backlight**, PAR: 576. Sets lighting of the display:

On the light of the display always stays on.

Off (default) the light switches off approx. 3 minutes after the last key is pressed.

### 8.2.11 Alarms

The alarms page is displayed automatically when an alarm occurs.

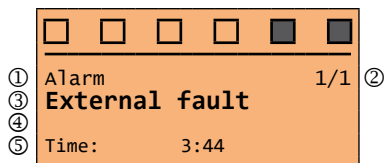

(1) **Alarm:** identifies the alarm page.

**RTN:** indicates that the alarm has been reset; if the alarm is still active, nothing is displayed.

(2) **x/y:** **x** indicates the position of this alarm in the list of alarms and **y** the number of alarms (the alarm with lowest **x** is the most recent)

(3) Description of the alarm

(4) Sub-code of the alarm, provides other information in addition to the description

(5) Moment the alarm occurred in machine time.

The list of alarms is scrolled using the ▲ and ▼ keys.

#### Note !

For further information, see chapter "10.1 Alarms" on page 80.

### 8.2.11.1 Alarm reset

- **If the alarm page is displayed:**  
Pressing the **RST** key, the alarms are reset and all alarms that have been reset are eliminated from the list. If, after this operation, the list of alarms is empty, the alarm page is closed. If the list is not empty, press the **ESC** key to exit the alarms page.
- **If the alarm page is not displayed:**  
Press the **RST** key to reset the alarms. If active alarms are still present following reset, the alarm page is opened.


### 8.2.12 Messages

Operator messages are displayed with this page.

There are two types of messages:

- timed (closed automatically after a certain number of seconds),
- permanent (continue to be displayed until the operator presses the **ESC** key).

Several concurrent messages are enqueued and presented to the operator in sequence, starting from the most recent.

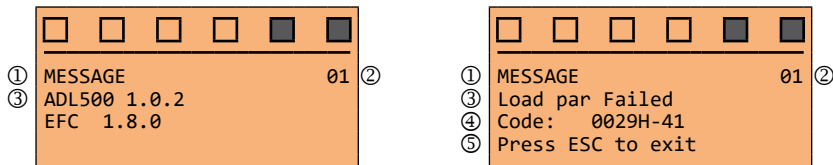

- (1) **Message**: identifies a message.
- (2) **xx** indicates how many messages are enqueued. The queue may contain a maximum of 10 messages and the message with the highest number is the most recent.
- (3) Description of the message
- (4) Sub-code of the message. Provides extra information in addition to the description.
- (5) "**Press ESC to exit**" is displayed if the message requires acknowledgment.

When a message is closed, the next message is displayed until the queue is empty.

#### Note!

For further information, see **chapter "10.3 Messages" on page 88**.


### 8.2.13 Saving and recovery of new parameter settings

#### 8.2.13.1 Saving and recovery of new parameter settings on optional keypad KB-ADL500

(ADL550 and ADL530 only).

#### Note!


This function is available for KB-ADL500 keypads only from firmware version NL003 (to see the keypad fw version, disconnect it from the ethernet cable or remove it from its housing and then reconnect it by holding down the E key).

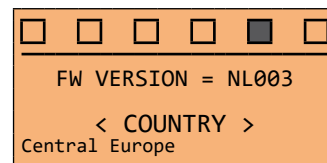


Drive parameters can be saved on the keypad in 5 different memory areas. This function is useful for obtaining various sets of parameters, for safety backup or transferring parameters from one drive to another.


#### Saving of parameters on the keypad

Menu 4.3 DRIVE CONFIG, parameter **Save par to keypad**, PAR : 594. This is used to transfer the parameters from the drive to the selected keypad memory.

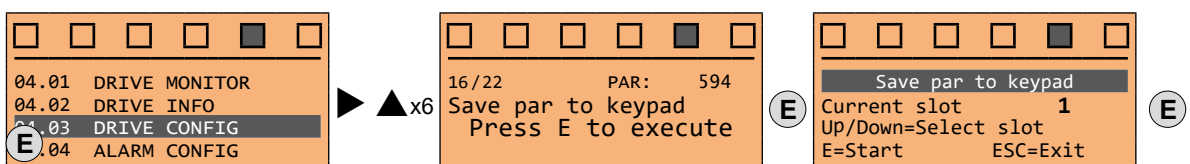

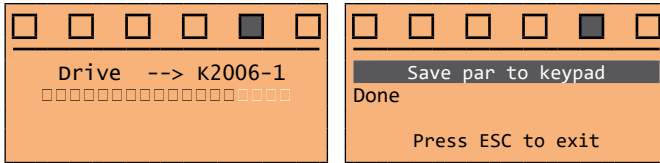


To start the operation, press the **E** key.  
 During transfer, a bar is displayed which indicates progress of the operation.  
 Instead of the letter **X**, the number of the currently selected keypad memory is displayed.  
 At the end of transfer, if this has been completed successfully, the **"Done"** caption is displayed for a few seconds with subsequent return to the initial page.  
 If an error occurs during transfer, the following message is displayed:

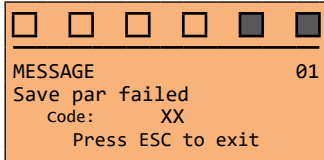


The code **XX** indicates the type of error, see paragraph 10.3. To exit the error message, press the **ESC** key.

### Load parameters from keypad

Menu 4.3 DRIVE CONFIG, parameter **Load par from keypad.**, PAR : 592. This is used to transfer the parameters from the selected memory of the keypad to the drive.

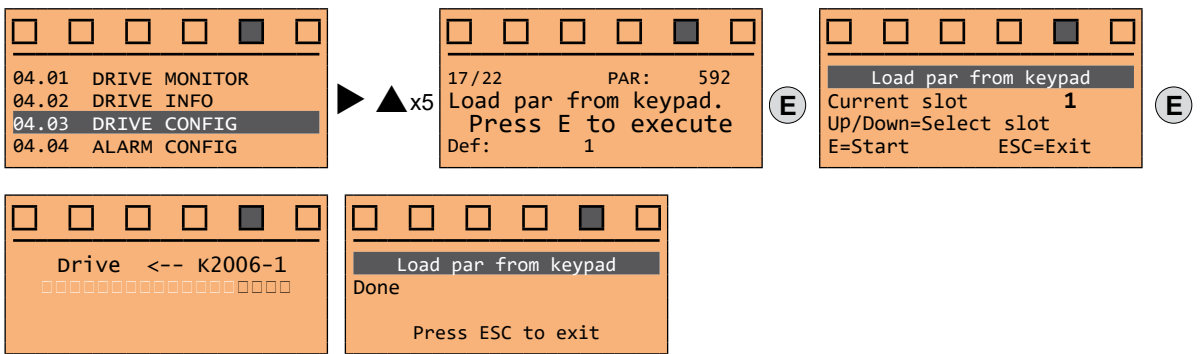

To start the operation, press the **E** key. During transfer, a bar is displayed which indicates progress of the operation.  
 Instead of the letter **X**, the number of the currently selected keypad memory is displayed.  
 At the end of transfer, if this has been completed successfully, the **"Done"** caption is displayed for a few seconds with subsequent return to the initial page.  
 If an error occurs during transfer, the following message is displayed:

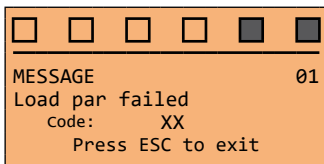

The code **XX** indicates the type of error, see paragraph 10.3. To exit the error message, press the **ESC** key.

### Transfer of parameters between drives

Transfer the parameters of the source drive to the keypad memory as indicated above in paragraph "Saving of parameters on the keypad" , then connect the keypad to the drive where the new setting is to be saved and follow the procedure described in paragraph "Load parameters from keypad".




.....  
**To prevent possible damage to equipment, it is advisable to disconnect and connect the keypad with the drive off.**  
 .....

### 8.2.13.2 Saving and recovery of new parameter settings on USB


(ADL550 and ADL530 only).

Drive parameters can be saved on a USB memory: this function is useful for obtaining various sets of parameters, for safety backup or transferring parameters from one drive to another.

To save drive parameters on the memory USB: Menu CONFIG DRIVE, parameter **Save to USB**, PAR 596:

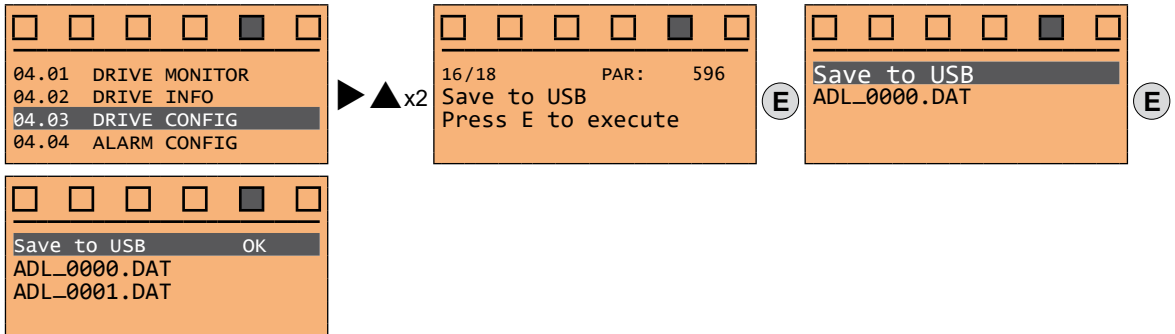


To transfer (recover) parameters from the memory USB to the drive: Menu CONFIG DRIVE, parameter **Load from USB**, PAR 598 :

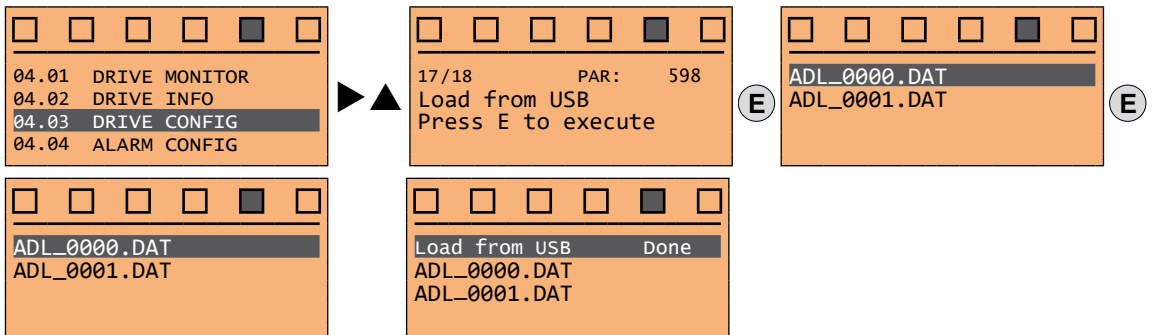

### 8.2.14 Asynchronous/Synchronous selection

- To switch from Asynchronous to Synchronous:

Menu CONFIG DRIVE, PAR 540 **Control type**

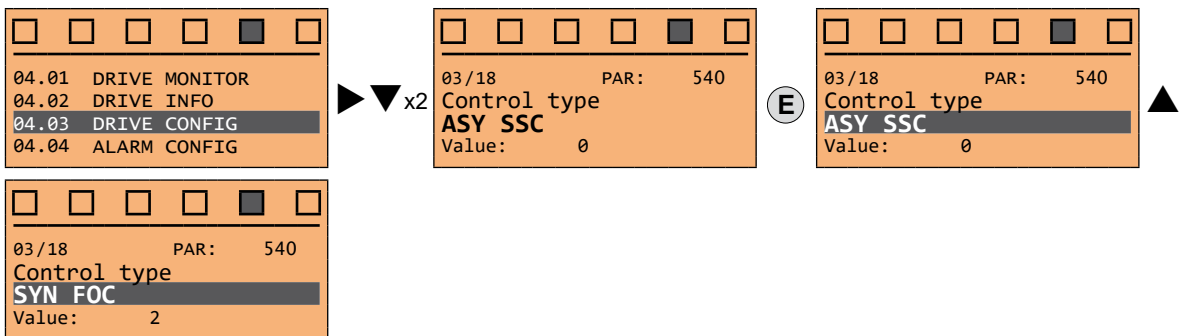


Press E to reset the drive and restart in the new operating mode.

**Note!**

Important: the default parameters including the LIFT application are reloaded.  
This can only be done with the drive disabled.

- **To switch from Synchronous to Asynchronous:**

Menu CONFIG DRIVE, PAR 540 **Control type**

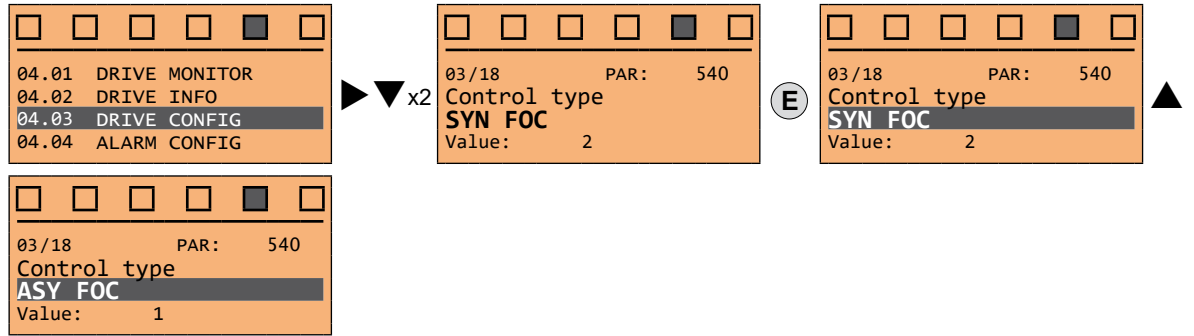

The example shows the selection (1) **ASY FOC**, other modes are available: (0) **ASY SSC**, (2) **SYN FOC**.

Press **E** to reset the drive and restart in the new operating mode.

**Note !**

Important: the default parameters including the LIFT application are reloaded.  
This can only be done with the drive disabled.

# 9 - Commissioning via keypad



## Warning!

Adjustable frequency drives are electrical apparatus for use in industrial or civil installations. Parts of the Drives are energized during operation. The electrical installation and the opening of the device should therefore only be carried out by qualified personnel. Improper installation of motors or Drives may therefore cause the failure of the device as well as serious injury to persons or material damage. Drive is not equipped with motor overspeed protection logic other than that controlled by software. Follow the instructions given in this manual and observe the local and national safety regulations applicable.

Always connect the Drive to the protective ground  $\perp$  (PE) via the marked connection. ADL500 Drives and AC Input filters have ground leakage currents greater than 3.5 mA. EN 61800-5-1 specifies that with leakage currents greater than 3.5 mA the protective conductor ground connection ( $\perp$ ) must be fixed type and doubled for redundancy if its section is lower than 10mm<sup>2</sup> CU or 16mm<sup>2</sup> AL.

Only permanently-wired input power connections are allowed. This equipment must be grounded (IEC 536 Class 1, NEC and other applicable standards).

If a Residual Current-operated protective Device (RCD) is to be used, it must be an RCD type B. Machines with a three phase power supply, fitted with EMC filters, must not be connected to a supply via an ELCB (Earth Leakage Circuit-Breaker - see DIN VDE 0160).

The following terminals can carry dangerous voltages even if the inverter is inoperative:

- the power supply terminals L1, L2, L3, C1, C, D.
- the motor terminals U, V, W.

Do not touch or damage any components when handling the device. The changing of the isolation gaps or the removing of the isolation and covers is not permissible.

Carefully configure the motor parameters to ensure the proper operation of the overload protection. ADL500 operates at high voltages.

Provide additional precautions external to the Drive (such as limit switches, mechanical switches, etc.) or provide functions to ensure or apply safe operation, at the time of any failure in the recording equipment such that it can cause material damage or even serious personal injury (for example, potentially dangerous failures).

Some parameter settings may cause the inverter to restart automatically after a power failure.

Do not use this appliance as an "emergency stop mechanism" (which is defined in accordance with EN 60204-1).

Do not open the device or lids while it is powered by mains. The minimum waiting time before acting on the terminals or inside the device is indicated in chapter "4.7 Inverter voltage level for safety operations" on page 15.

### Fire and Explosion Hazard:

The installation of Drives in areas classified as hazardous, where flammable substances or combustible vapours or dust are present, can cause fires or explosions. Drives must be installed outside these hazardous areas even if they are used with engines suitable for use in these conditions.



## Caution

Protect the appliance from unauthorized environmental stress (temperature, humidity, blows, etc.) .

At the drive output (U, V, W terminals):

- no tension may be applied.
- it is not allowed to insert several Drives in parallel
- direct connection of inputs and outputs is not permitted (bypass)
- capacitive loads cannot be connected (e.g. power factor correction capacitors).

Electrical commissioning must be carried out by qualified personnel. This is responsible for the fact that there is an adequate ground connection and protection of power cables according to local and national requirements. The motor must be protected against overload.

Do not connect supply voltages that exceed the permissible voltage range. If excessive voltages are applied to the Drive, its internal components will be damaged.

It is not allowed to operate the Drive without the grounding connection. To avoid disturbance, the engine casing shall be grounded through a ground connector separated from the ground connectors of other equipment.

Dielectric rigidity tests must not be performed on parts of the Drive. Appropriate measuring instruments (minimum internal resistance 10 kW/V) shall be used for measuring the voltage of the signals.

## 9.1 DRIVE SETUP


DRIVE SETUP, which is a procedure that is presented to the user **only when the drive is first turned on**, allows all the files required for the user's needs and the type of system to be imported.  
If setup has been completed but the user wishes to see it again, it is necessary to execute the **Load default** procedure (PAR 580).

All the setup parameters are also available in the different drive menus.


The setup steps are as follows:

- **Load language** See step 1
- **Load application (ADL550 and ADL530)** See step 2
- **Load parameters from USB (ADL550 and ADL530)** See step 3
- **Set encoder parameters** See step 4
- **Select Motor from USB (ADL550 and ADL530)** See step 5

When the drive is first switched on:

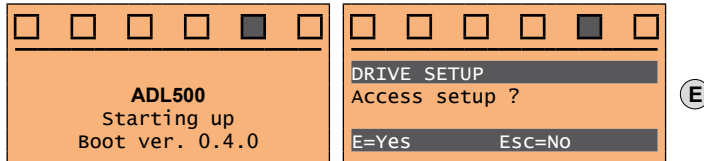


### Step 1 – Load language

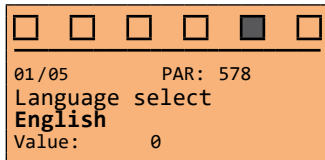

Set the language to be used to program the drive (default English).  
Press **▼** to go to the next step or press **E** to change the selection.  
Options available: (0) English, (1) Italian, (2) French, (3) German, (4) Spanish, (8) Turkish.  
To set a language other than English or Italian, see section "8.2.8.1 Language selection" on page 58.


### Step 2 – Load application

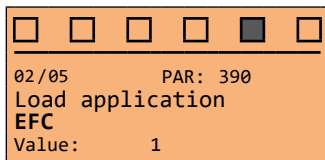

Set the application to be used by the drive (default **EFC**).  
Press **▼** to go to the next step or press **E** to change the selection.  
Options available: (1) EFC, (2) EPC, (3) DCP, (4) CAN417.

### Step 3 – Load parameters from USB

For ADL550 and ADL530 only.

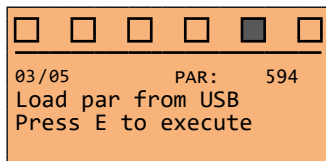


Transfer the parameters from the memory connected to the drive's USB port.  
Press **▼** to go to the next step or press **E** to load the parameters from USB.

**Note!**

Before loading new parameters from USB it is recommended to perform a load default operation followed by a save parameter.

#### Step 4 – Set encoder parameters

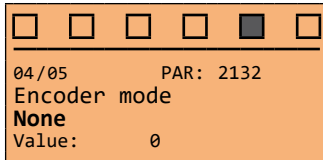


Select the type of encoder (default **None**).

Press ▼ to go to the next step or press E to change the selection.

Options available: (1) Digital, (2) Sinus, (3) Sinus SINCOS, (4) Sinus ENDAT, (5) Sinus BiSS, (6) ENDAT, (7) BiSS.


#### Step 5 – Select Motor from USB

For ADL550 and ADL530 only.

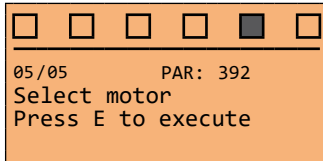

This parameter allows motor data to be loaded into the drive from a library (file extension .mot) saved on USB memory device (contact the technical service centre).. This is displayed only if the USB memory device contains the motor libraries in a folder named "ADL500MT".

Press ▼ to exit or press E to display the files with .mot extension saved on a USB memory.

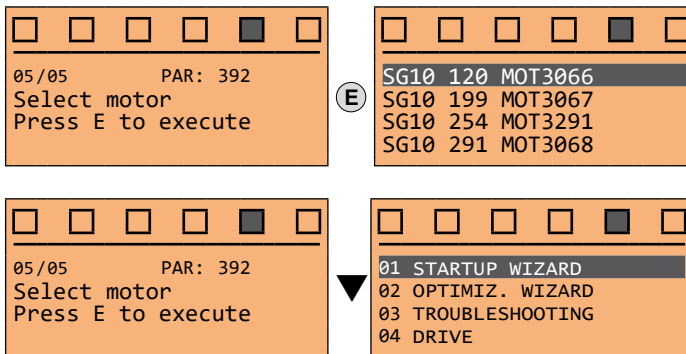


## 9.2 STARTUP WIZARD for Asynchronous motor

The STARTUP WIZARD is a guided procedure used for quick start-up of the drive that helps to set the main parameters.

It consists of a series of questions, relating to the various sequences for entering and calculating the parameters necessary for correct drive and lift application operation. The order of these sequences is as follows:

- **Setting communication** See step 1
- **Setting encoder parameters (Control type = ASY SSC or ASY FOC)** See step 2
- **Setting motor parameters** See step 3
- **Setting mechanical system data** See step 4
- **Setting the maximum speed reference and maximum system speed** See step 5
- **Autotune with motor at stand-still** See step 6
- **Saving parameters** See step 7

The format of the function selection page is as follows:

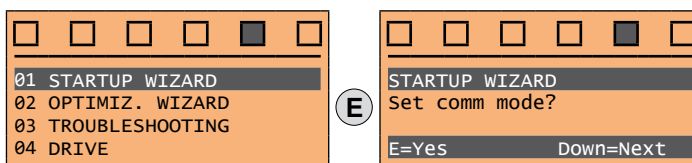

Pressing the **E** key, the function to be programmed is accessed.




Press the ▼ (Down) key to move to the next function skipping the current function.  
 Press the ▲ (Up) key to return to the previous function.

To terminate the sequence of functions and return to the menu, press the **ESC** key.

At the end of the sequence, once the parameters have been saved, if commissioning is successful, the main menu will return.

### Step 1 – Setting communication

Set the type of communication to be used.

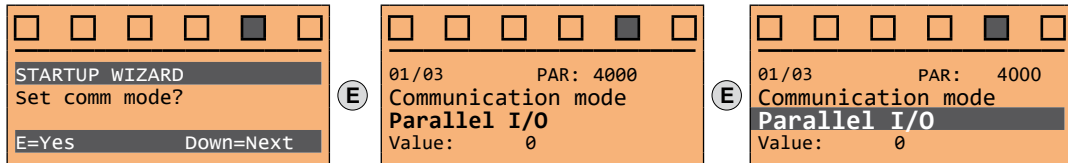

Available selections: (0) Parallel I/O, (1) CANopen


At the end of the procedure proceed to next step.

### Step 2 – Setting encoder parameters



The incorrect configuration of the encoder tension can permanently damage the device; therefore, it is advisable to check the values on the encoder's specification plate.


Set the following parameters for the encoder installed on the motor:

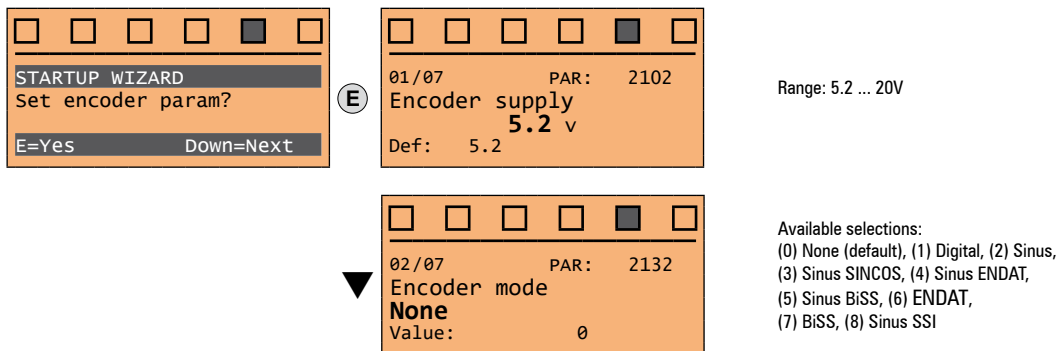

### Step 3 – Setting motor parameters

**Note !**

Def: The factory (default) setting depends on the size of the drive that is connected. These values refer to the ADL5.-1055

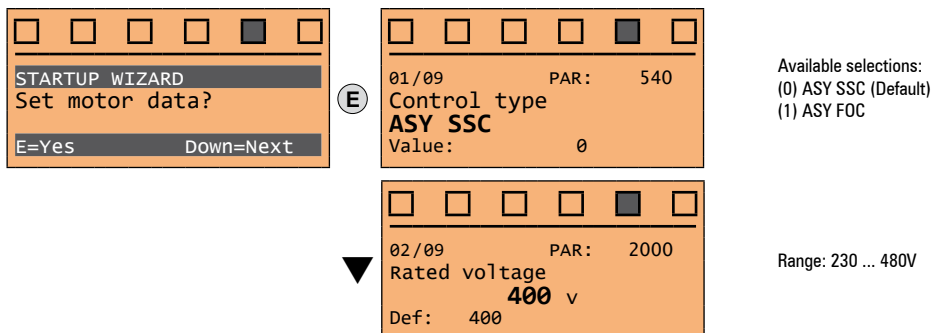

▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>03/09</span> <span>PAR: 2002</span> </div> <p>Rated current <b>11.8</b> A Def: 11.8</p>	Range: 1 ... 1500A
▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>04/09</span> <span>PAR: 2004</span> </div> <p>Rated speed <b>1450</b> rpm Def: 1450</p>	Range: 10 ... 32000rpm
▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>05/09</span> <span>PAR: 2006</span> </div> <p>Rated frequency <b>50.00</b> Hz Def: 50</p>	Range: 10 ... 1000Hz
▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>06/09</span> <span>PAR: 2008</span> </div> <p>Pole pairs <b>2</b> Def: 2</p>	Range: 1 ... 60
▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>07/09</span> <span>PAR: 2010</span> </div> <p>Rated power <b>5.50</b> kW Def: 5.5</p>	Range: 0.1 ... 1500kW
▼	<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black;"> <span>08/09</span> <span>PAR: 2012</span> </div> <p>Rated power factor <b>0.83</b> Def: 0.83</p>	Range: 0.6 ... 0.95

Set the plate data of the motor connected, according to the procedures described on the previous pages.

- Rated voltage [V]:** the rated voltage of the motor indicated on the data plate.
- Rated current [A]:** motor rated current; approximately, the value should not be less than 0.3 times the rated current of the drive, output current class 1 @ 400 V on the data plate of the drive.
- Rated speed [rpm]:** rated speed of the motor; this value must reflect the speed of the fully loaded motor at rated frequency. If slip is indicated on the motor data plate, set the Rated speed parameter as follows: Rated speed = Synchronous speed - Slip (e.g. for a 4-pole motor Rated speed = 1500 - 70 = 1430).
- Rated frequency [Hz]:** rated frequency of the motor, as shown on the data plate (asynchronous motors only).
- Pole pairs:** Number of motor pole pairs. The number of motor pole pairs is calculated using the plate data and the following formula:  

$$P = 60 [s] \times f [Hz] / nN [rpm]$$
 Where: P = motor pole pairs, f = motor rated frequency (e.g. 50); nN = motor rated speed (e.g. 1450)
- Rated power [kW]:** Motor rated power; for a motor data plate with an HP power value, set the rated power kW = 0.736 x the motor power HP value.
- Rated power factor:** Leave the default rated power factor if the data are not available on the data plate.

**Note!**

When data entry is complete the **Take parameters** command is executed automatically (menu MOTOR DATA, PAR: 2020). The motor data entered during the STARTUP WIZARD procedure are saved in a RAM memory to enable the drive to perform the necessary calculations. These data are lost if the device is switched off. To save the motor data follow the procedure described in step 9.

At the end of the procedure proceed to next step.

## Step 4 – Setting mechanical system data

STARTUP WIZARD  
Set mechanical data?  
E=Yes      Down=Next

01/09      PAR: 11002  
Travel unit sel  
Hz  
Value: 0

Available selections:  
0 Hz (output frequency)  
1 m/s (cabin speed, depends on the mechanical constant )  
2 Rpm (motor shaft speed )  
3 USCS (US unit of measure: fpm, ft/s<sup>2</sup>, ft/s<sup>3</sup>)

02/09      PAR: 11006  
Cabin speed  
1.00 m/s  
Def: 1.0

Range: 0 ... 10

03/09      PAR: 11010  
Gearbox ratio  
45.000  
Def: 45.000

Range: 1 ... 200

04/09      PAR: 11164  
Rope ratio  
1  
Def: 1

Range: 1 ... 40

05/09      PAR: 11012  
Pulley diameter  
0.600 m  
Def: 0.600

Range: 0 ... 5

06/09      PAR: 11150  
Car weight  
400 kg  
Def: 400

Range: 0 ... 10000

07/09      PAR: 11052  
Counter weight  
1000 kg  
Def: 1000

Range: 0 ... 10000

08/09      PAR: 11154  
Load weight  
450 kg  
Def: 450

Range: 0 ... 100,000

09/09      PAR: 11156  
Rope weight  
20 kg  
Def: 20

Range: 0 ... 10000

At the end of the procedure proceed to next step.

**Step 5 – Setting the maximum speed reference and maximum system speed**

- **Select the unit of measurement for the speed references**

<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	E	01/08      PAR: 11020 Multi speed 0 5.00 Hz Def: 5.00	Range: -10000 ... 10000
--	---	--	-------------------------

- **Set the multispeed values**

▼	02/08      PAR: 11022 Multi speed 1 47.73 Hz Def: 47.73 Hz	Range: -10000 ... 10000
▼	03/08      PAR: 11024 Multi speed 2 20.00 Hz Def: 20.00 Hz	Range: -10000 ... 10000
▼	04/08      PAR: 11026 Multi speed 3 0.00 Hz Def: 0.00 Hz	Range: -10000 ... 10000
▼	05/08      PAR: 11028 Multi speed 4 0.00 Hz Def: 0.00 Hz	Range: -10000 ... 10000
▼	06/08      PAR: 11030 Multi speed 5 0.00 Hz Def: 0.00 Hz	Range: -10000 ... 10000
▼	07/08      PAR: 11032 Multi speed 6 0.00 Hz Def: 0.00 Hz	Range: -10000 ... 10000
▼	08/08      PAR: 11034 Multi speed 7 0.00 Hz Def: 0.00 Hz	Range: -10000 ... 10000

**Note!**

By default, the multispeed 0, 1 and 2 have the values 5.00Hz, 47.73Hz and 20hz respectively referred to a cabin speed of 1m/s.  
 The first three multispeeds take the values of 10%, 100% and 45% of the cabin speed each time the mechanical data is changed.  
 In addition, each time mechanical data is changed, the drive performs a multispeed congruity check that works as follows:  
 a) where a multispeed is greater than the nominal speed, it shall be limited to that speed,  
 b) if the mechanical values are changed further and the previously limited speeds are now lower than the nominal speed, these multispeeds are not changed (bearing in mind that the first 3 multispeeds always take the values in %).  
 By manually entering values of multispeed these are limited to the cabin speed, while following a change in the mechanical parameters that change the cabin speed, will be returned to the default values percentages.



**Multi speed configuration table:**

Through the combination of “MtlSpd S0” (Digital input 4), “MtlSpd S1” (Digital input 5) and “MtlSpd S2” (Digital input 6) commands, is possible to select Multi speed desired, according to next table:

MtlSpd S2	MtlSpd S1	MtlSpd S0	ACTIVE SPEED
0	0	0	Multispeed 0, PAR 11020
0	0	1	Multispeed 1, PAR 11022
0	1	0	Multispeed 2, PAR 11024
0	1	1	Multispeed 3, PAR 11026
1	0	0	Multispeed 4, PAR 11028
1	0	1	Multispeed 5, PAR 11030
1	1	0	Multispeed 6, PAR 11032
1	1	1	Multispeed 7, PAR 11034

At the end of the procedure proceed to next step.

**Step 6 - Activation of the EBC electronic braking module**

If you want to have the drive version ADL550 an electronic control brake EBC, putting the EBC activation parameter in ON the menu is expanded and you are asked to enter the parameters of the brake plate: The nominal power and the nominal voltage of the brake during the maintenance phase. If the label had only the power and the nominal voltage at full power then the power value in maintenance to be inserted in the drive is given by the formula  $V_{mant} = \sqrt{2 \cdot P_{nom}}$

**Note!**

Communication with the EBC is only activated after the drive is restarted. Then when the EBC is activated and configured you have to save, restart the drive and then return to the end of this step 6 to continue with the self-learning of the next step.

At the end of the procedure proceed to next step.

**Passo 7 – Autotune with motor at stand-still**

The drive carries out the motor autotune procedure (real measurement of motor parameters). The procedure is fast and recommended in most cases.

**Note!**

If this operation generates an error message, check the connections of the power and control circuits (see step 1 - Connections), check the motor data settings (see step 3 - Setting motor parameters) and then repeat the guided Autotune procedure.

- (1) Press the **E** key to proceed to the autotune procedure.
- (2) Press the **E** key to start the autotune procedure.

- (3) Enable the drive by connecting terminal 9 (Enable) to terminal 12 (+24 V). To abort this operation, press the **ESC** key.
- (4) Once the drive is enabled the autotune procedure starts. This may take a few minutes, depending on the type of motor being used.
- (5) At the end of the procedure the following screen is displayed. After opening the Enable contact, go to next step.


**Note !**

At the end of the autotune procedure there is a request to open the Enable contact (terminals 9 - 12); this results in the automatic execution of the **Take tune parameters** command (menu MOTOR DATA, PAR: 2078).

The calculated parameters are saved in a RAM memory to enable the drive to perform the necessary calculations. These data are lost if the device is switched off. To save the motor data follow the procedure described in step 7.

**Step 7 – Save parameters**

To save the new parameter settings, so that they are maintained also after power-off, proceed as follows:

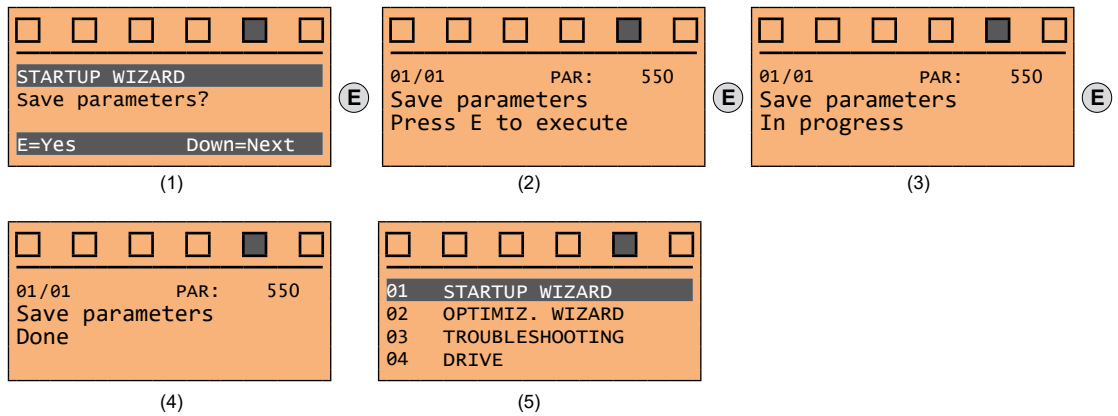

- (1) Press the **E** key to start the save parameters procedure.
- (2) Press **E to confirm**
- (3) End of procedure
- (4) When the parameters have been saved correctly the drive displays this screen to show that the startup wizard is complete.


## 9.3 STARTUP WIZARD for brushless motors

The STARTUP WIZARD is a guided procedure used for quick start-up of the drive that helps to set the main parameters.

It consists of a series of questions, relating to the various sequences for entering and calculating the parameters necessary for correct drive and lift application operation. The order of these sequences is as follows:

- |   |                   |
|---|-------------------|
| • <b>Setting communication</b>  | <b>See step 1</b> |
| • <b>Setting encoder parameters (Control type = SYN FOC)</b>          | <b>See step 2</b> |
| • <b>Setting motor parameters</b>                                     | <b>See step 3</b> |
| • <b>Setting mechanical system data</b>                               | <b>See step 4</b> |
| • <b>Setting the maximum speed reference and maximum system speed</b> | <b>See step 5</b> |
| • <b>Autotune with motor at stand-still and encoder phasing</b>       | <b>See step 6</b> |
| • <b>Saving parameters</b>  | <b>See step 7</b> |

The format of the function selection page is as follows:

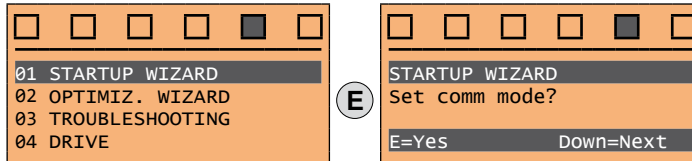

Pressing the **E** key, the function to be programmed is accessed.

Press the **▼** (Down) key to move to the next function skipping the current function.


Press the **▲** (Up) key to return to the previous function.

To terminate the sequence of functions and return to the menu, press the **ESC** key.

At the end of the sequence, once the parameters have been saved, if commissioning is successful, the main menu will return.

### Step 1 – Setting communication

Set the type of communication to be used.

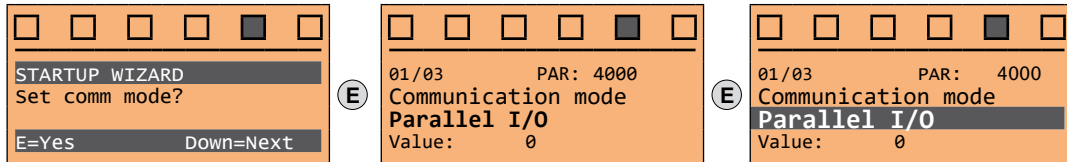

Available selections: (0) Parallel I/O, (1) CANopen

At the end of the procedure proceed to next step.


### Step 2 – Setting encoder parameters




**Caution**

.....  
**The incorrect configuration of the encoder tension can permanently damage the device; therefore, it is advisable to check the values on the encoder's specification plate.**  
 .....

Set the following parameters for the encoder installed on the motor:

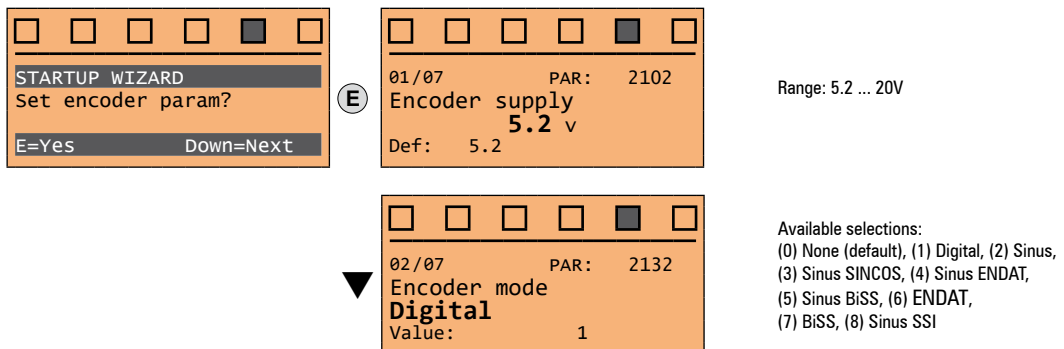

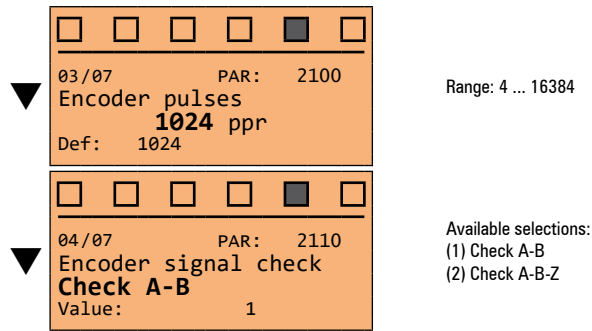


At the end of the procedure proceed to next step.

### Step 3 – Setting motor parameters

**Note !**

Def: The factory (default) setting depends on the size of the drive that is connected. These values refer to the size ADL5.-1055

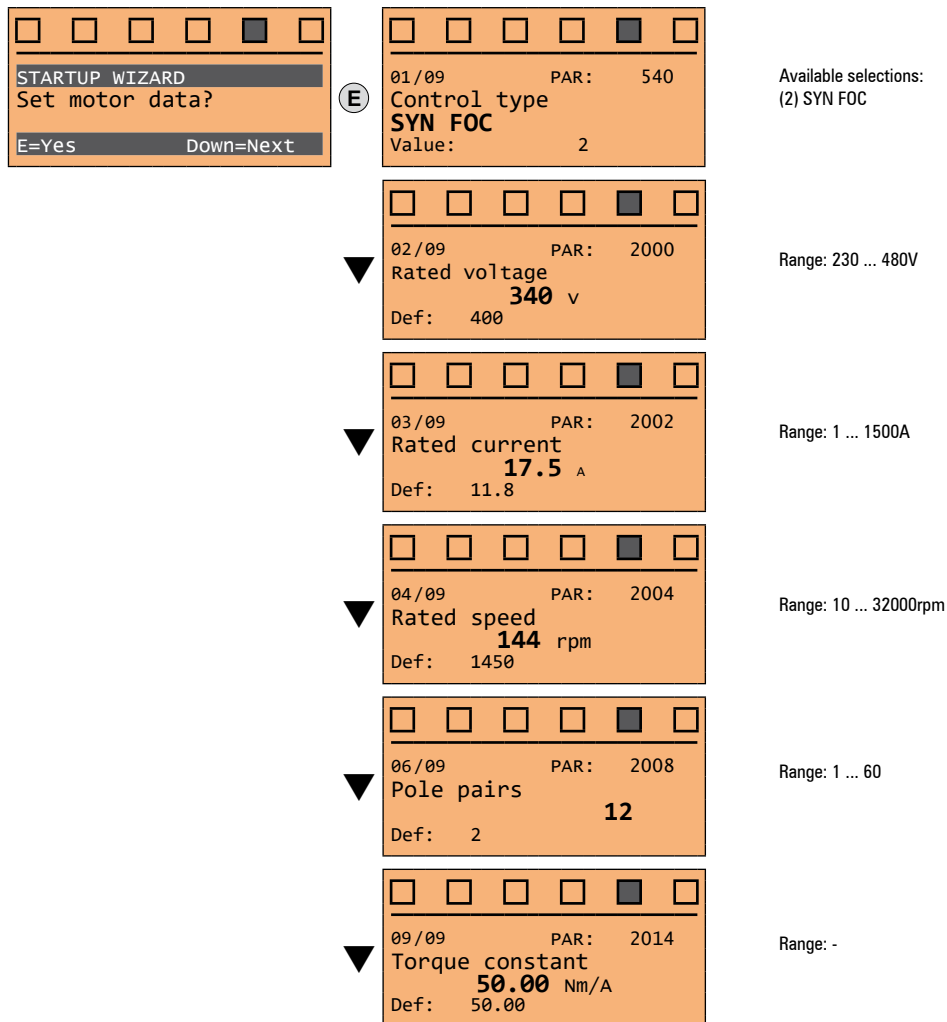

Set the plate data of the motor connected, following the instructions given on the previous pages.

- Rated voltage [V]:** the rated voltage of the motor indicated on the data plate.
- Rated current [A]:** motor rated current; approximately, the value should not be less than 0.3 times the rated current of the drive, output current class 1 @ 400 V on the data plate of the drive.
- Rated speed [rpm]:** motor rated speed; see data plate.
- Pole pairs:** Number of motor pole pairs; see data plate.
- Torque constant [Nm/a] :** (KT) Ratio between the torque generated by the motor and the current required to supply it.












**Note!**

When data entry is complete the **Take parameters** command is executed automatically (menu MOTOR DATA, PAR: 2020). The motor data entered during the STARTUP WIZARD procedure are saved in a RAM memory to enable the drive to perform the necessary calculations. These data are lost if the device is switched off. To save the motor data follow the procedure described in step 8.

At the end of the procedure proceed to next step.

**Step 4 – Setting mechanical system data**

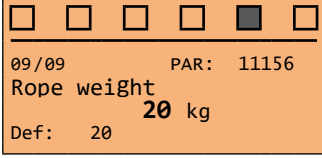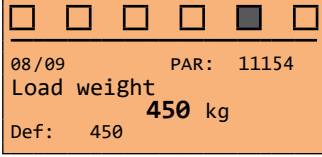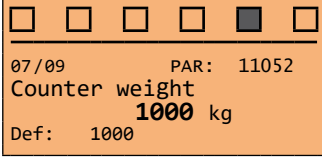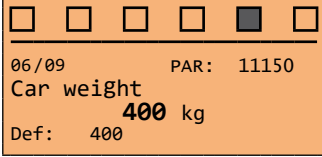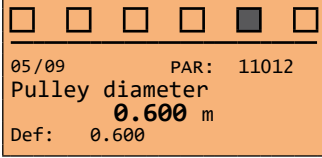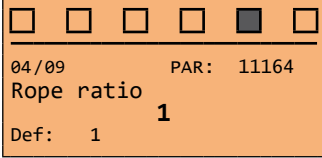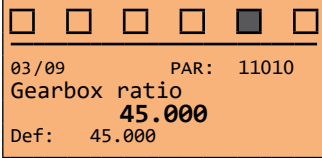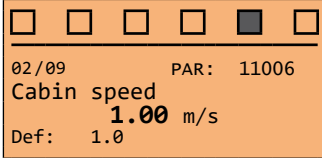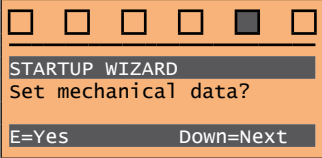

Parameter ID	Parameter Name	Value	Default (Def)	Range
02/09	Cabin speed	1.00 m/s	1.0	0 ... 10
03/09	Gearbox ratio	45.000	45.000	1 ... 200
04/09	Rope ratio	1	1	1 ... 40
05/09	Pulley diameter	0.600 m	0.600	0 ... 5
06/09	Car weight	400 kg	400	0 ... 10000
07/09	Counter weight	1000 kg	1000	0 ... 10000
08/09	Load weight	450 kg	450	0 ... 100,000
09/09	Rope weight	20 kg	20	0 ... 10000

At the end of the procedure proceed to next step.

## Step 5 – Setting the maximum speed reference and maximum system speed

- Select the unit of measurement for the speed references

STARTUP WIZARD  
Set speeds?  
E=Yes Down=Next

E

01/08 PAR: 11020  
Multi speed 0  
0.10 m/s  
Def: 0.10  
Range: -10000 ... 10000

Range: -10000 ... 10000

- Set the multispeed values

▼

02/08 PAR: 11022  
Multi speed 1  
1.00 m/s  
Def: 1.00  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

03/08 PAR: 11024  
Multi speed 2  
0.40 m/s  
Def: 0.40  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

04/08 PAR: 11026  
Multi speed 3  
0.00 m/s  
Def: 0.00  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

05/08 PAR: 11028  
Multi speed 4  
0.00 Hz  
Def: 0.00 Hz  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

06/08 PAR: 11030  
Multi speed 5  
0.00 m/s  
Def: 0.00  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

07/08 PAR: 11032  
Multi speed 6  
0.00 m/s  
Def: 0.00  
Range: -10000 ... 10000

Range: -10000 ... 10000

▼

08/08 PAR: 11034  
Multi speed 7  
0.00 m/s  
Def: 0.00  
Range: -10000 ... 10000

Range: -10000 ... 10000

### Note!

By default, the multispeed 0, 1 and 2 have the values 0.1m/s, 1m/s and 0.45m/s respectively, referring to a cabin speed of 1m/s.

The first three multispeeds take the values of 10%, 100% and 45% of the cabin speed each time the mechanical data is changed.

In addition, each time mechanical data is changed, the drive performs a multispeed congruity check that works as follows:

- where a multispeed is greater than the nominal speed, it shall be limited to that speed,
- if the mechanical values are changed further and the previously limited speeds are now lower than the nominal speed, these multispeeds are not changed (bearing in mind that the first 3 multispeeds always take the values in %).

By manually entering values of multispeed these are limited to the cabin speed, while following a change in the mechanical parameters that change the cabin speed, will be returned to the default values percentages.



**Multi speed configuration table:**



Through the combination of “MtlSpd S0” (Digital input 4), “MtlSpd S1” (Digital input 5) and “MtlSpd S2” (Digital input 6) commands, is possible to select Multi speed desired, according to next table:

MtlSpd S2	MtlSpd S1	MtlSpd S0	ACTIVE SPEED
0	0	0	Multispeed 0, PAR 11020
0	0	1	Multispeed 1, PAR 11022
0	1	0	Multispeed 2, PAR 11024
0	1	1	Multispeed 3, PAR 11026
1	0	0	Multispeed 4, PAR 11028
1	0	1	Multispeed 5, PAR 11030
1	1	0	Multispeed 6, PAR 11032
1	1	1	Multispeed 7, PAR 11034

At the end of the procedure proceed to next step.


**Step 6 - EBC used for asynchronous motor**

Se presente, selezionare l'attivazione della comunicazione con l'EBC (Electronic Brake Control).

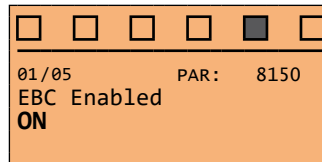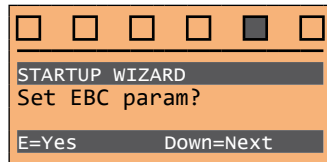


Available selections:  
ON EBC enabled  
OFF EBC disabled


If the previous parameter is set to ON then the following submenus are also displayed.

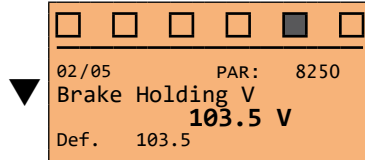


Range 1 ... 207

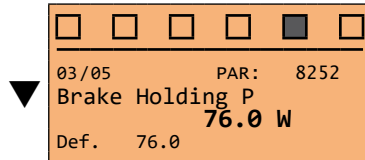

Range 1 ... 350

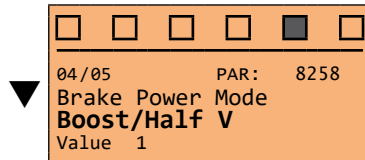

Selezioni disponibili:  
Full voltage  
Boost/Half V  
Boost/Hold V

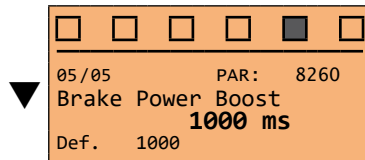

Range 0 ... 5000


**Passo 7 – Autotune with motor at stand-still and encoder phasing**

The drive carries out the motor autotune procedure (real measurement of motor parameters) and the automatic phasing of the absolute encoder (**the brake must be blocked**).

Autotuning may take a few minutes.

**Note!**

If this operation generates an error message, check the connections of the power and control circuits (see **step 1** - Connections), check the motor data settings (see **step 3** - Setting motor parameters) and then repeat the guided Autotune procedure.

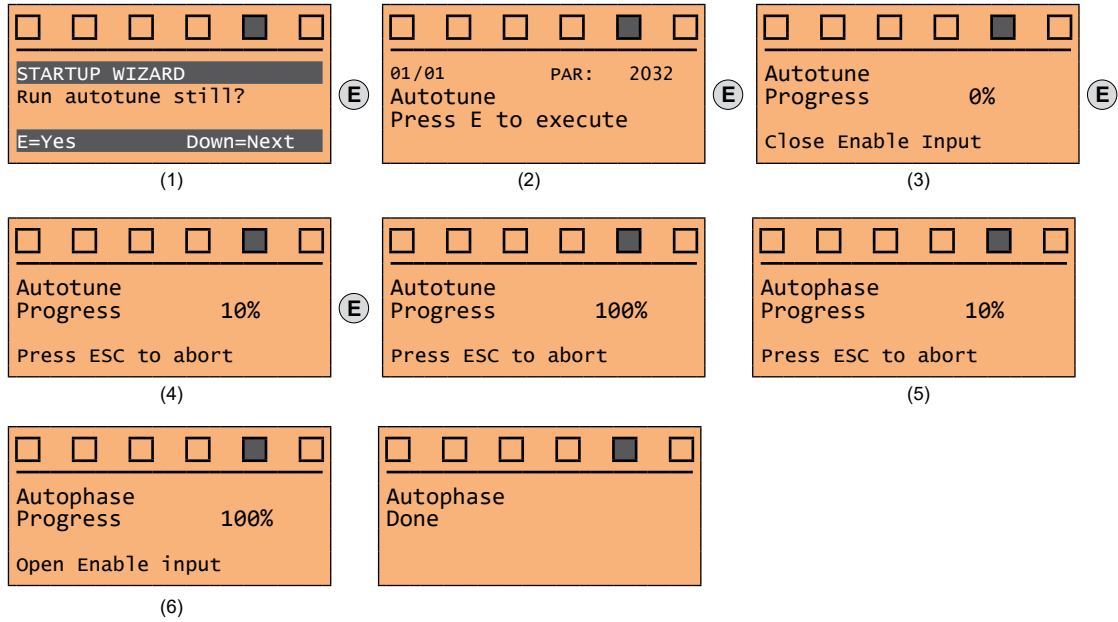

- (1) Press the **E** key to proceed to the autotune procedure.
- (2) Press the **E** key to start the autotune procedure.
- (3) Enable the drive by connecting terminal 9 (Enable) to terminal 12 (+24 V). To abort this operation, press the **ESC** key.
- (4) Once the drive is enabled the autotune procedure starts.  
This may take a few minutes, depending on the type of motor being used.
- (5) The drive now proceed automatically to the absolute encoder phasing. This may take a few minutes, depending on the type of motor being used.
- (6) At the end of the procedure the following screen is displayed.  
After opening the Enable contact, proceed to next step.

**Note!**

At the end of the autotune procedure there is a request to open the Enable contact (terminals 9 - 12); this results in the automatic execution of the **Take tune parameters** command (menu MOTOR DATA, PAR: 2078).


The calculated parameters are saved in a RAM memory to enable the drive to perform the necessary calculations. These data are lost if the device is switched off. To save the motor data follow the procedure described in step 7.


**Note!**

If, after completing the autotune procedure and finishing the start-up wizard mode, an incorrect functioning of the motor is detected (for example, the motor vibrates or tends to stall), it is necessary to repeat the autotune and, if necessary, switch from the static phasing **Mode 1** to **Mode 2** mode by changing setting of parameter 2748 **Still phasing mode**.


**Step 7 – Save parameters**

To save the new parameter settings, so that they are maintained also after power-off, proceed as follows:

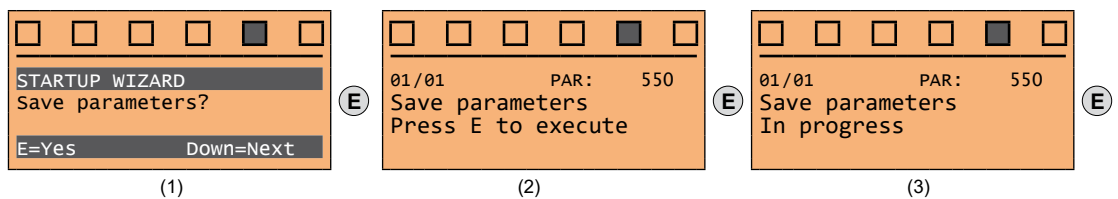

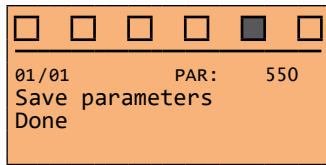

(4)

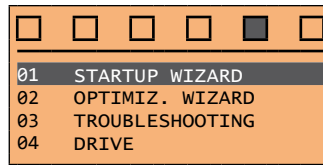

(5)

- (1) Press the **E** key to start the save parameters procedure.
- (2) Press "E" to confirm
- (3) End of procedure
- (4) When the parameters have been saved correctly the drive displays this screen to show that the startup wizard is complete.

## 9.4 OPTIMIZATION WIZARD

The OPTIMIZ. WIZARD is a guided procedure used for immediately optimize the control response in order to maximise cabin comfort.

In addition to the automatic procedure (Learning Trip function), three or five levels of optimization are available for each of the Rollback, Comfort low speed, Comfort high speed parameters.

To avoid possible vibrations, the optimization level should not be increased if not necessary.



Attention


Before enabling the function:

- run the **Startup wizard**,
- check cabin movement in inspection mode to rule out any macroscopic data entry errors.

The function can be performed from the keypad and via the WEG\_DriveLabs configurator (Wizard menu / Optimization Wizard).


To facilitate operations, the configurator/keypad suggests what actions are to be performed (e.g. up one floor, down one floor, etc.), intercepting any incorrect actions and communicating them (e.g. call to floor short, calls always in the same direction, etc.) so as to recommend the corrective action.

Once the sequences envisaged by the function have been completed, the basic speed regulator gains are automatically recalculated. Therefore the user can run a test travel to evaluate the improvement in performance obtained and, if still not satisfied, the Learning Trip procedure can be repeated or the deficient aspects improved using the appropriate sections of the optimisation wizard (Rollback, Comfort low speed, Comfort high speed).

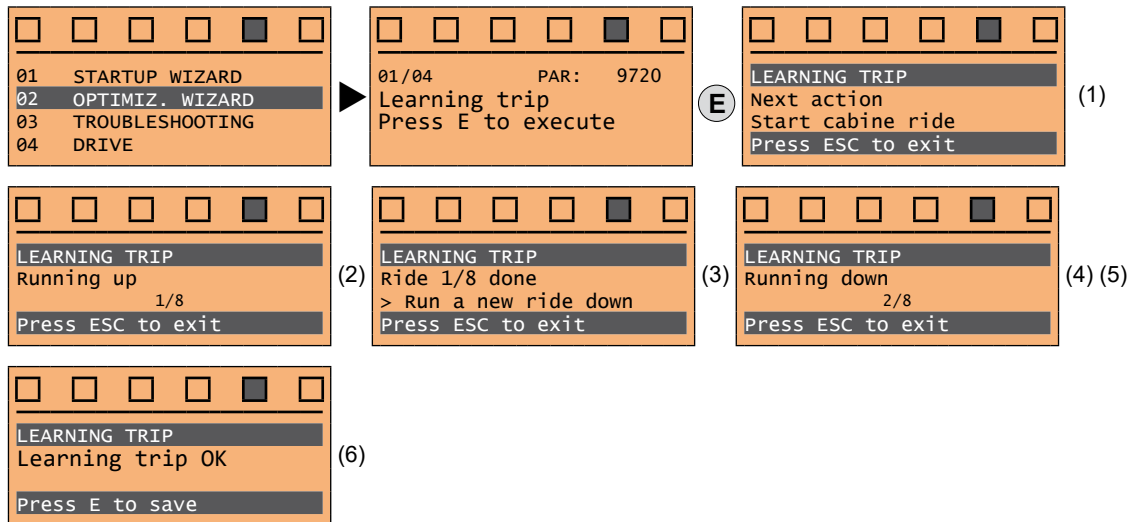


- (1) You are prompted to perform the first run (up or down).
- (2) Perform the up run.
- (3) You are prompted to perform a down run.
- (4) Perform the down run.
- (5) Repeat the operations (1) (2) (3) (4) several times.
- (6) Procedure successfully completed.


Other possible messages:

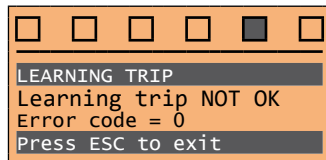

Procedure not successfully completed.

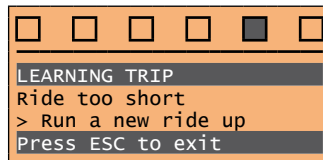

Short run error.

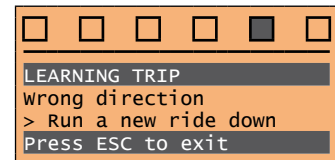

Wrong direction error.

## 9.5 TROUBLESHOOTING

For each typical problem of a Lift System, the parameter of the drive on which to act to solve the problem, are displayed by selecting the relative action.

<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>01 STARTUP WIZARD 02 OPTIMIZ. WIZARD 03 TROUBLESHOOTING 04 DRIVE</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Start E=Yes      Down=Next</p> </div>	<p>Problem: The cabin doesn't start smoothly. Solution: Increase the brake opening delay.</p>
▶	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Rollback at the start E=Yes      Down=Next</p> </div>	<p>Problem: There is an undesired movement of the cabin in the opposite direction to the one commanded at departure. Solution: Change the proportional and/or integral speed gain at the start.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Rollback at the arrival E=Yes      Down=Next</p> </div>	<p>Problem: ? Solution: ?</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Too fast acc. E=Yes      Down=Next</p> </div>	<p>Problem: The deceleration with which the cabin approaches the floor is too abrupt. Solution: Decrease the value of the initial deceleration jerk and / or deceleration value.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Slow speed vibr. E=Yes      Down=Next</p> </div>	<p>Only if PAR 540 = ASY FOC or SYN FOC. Problem: There are vibrations during the movement of the cabin at slow speed. Solution: Modify the proportional and integral speed gain.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING High speed vibr. E=Yes      Down=Next</p> </div>	<p>Only if PAR 540 = ASY FOC or SYN FOC. Problem: There are vibrations during the movement of the cabin at high speed. Solution: Modify the proportional and integral speed gain.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Too fast dec. E=Yes      Down=Next</p> </div>	<p>Problem: The deceleration with which the cabin approaches the floor is too abrupt. Solution: Decrease the value of the initial deceleration jerk and / or deceleration value.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Floor leveling Up=Back      Down=Exit</p> </div>	<p>Problem: During the arrival at the floor there is an abrupt stop. Solution: Decrease the brake closing delay.</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Brake closing Up=Back      Down=Exit</p> </div>	<p>Problem: There is a noise when the brake is closed after the arrival at the floor Solution: Increase the current down delay</p>
▼	<div style="border: 1px solid black; padding: 5px;"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <p>TROUBLESHOOTING Vibration analyzer Up=Back      Down=Exit</p> </div>	<p>Problem: Vibration analyzer measures system vibration expressed in two most significant resonant frequencies. Solution: Values greater than 0 may indicate system vibrations. Typical causes could be intrinsic resonances of the system itself, insufficient guides lubrication, ovalized guide wheels, etc. If you need any advice on vibration damping you can contact after-sale service.</p>

# 10 - Troubleshooting

## 10.1 Alarms

When an Alarm is tripped, the Alarm LED lights up and Alarm appears on the display.

**Note !**

To reset alarms, see paragraph "8.2.11.1 Alarm reset" on page 58.

In the following table, the Code is visible only from WEG\_DriveLabs configurator.

Index	Error message shown on the display	Sub-code	Description
0	No alarm		<b>Condition:</b> No alarm present
1	Overvoltage		<b>Condition:</b> DC link overvoltage alarm due to energy recovered from the motor. The voltage arriving at the drive power section is too high compared to the maximum threshold relating to the PAR 560 Mains voltage parameter setting. <b>Solution:</b> - Extend the deceleration ramp. - Use a braking resistor to dissipate the energy recuperation, to be connected to the specific terminals. See section "7.2.1 Power terminals and connection" on page 28.
2	Undervoltage		<b>Condition:</b> DC link undervoltage alarm. The voltage arriving at the drive power section is too low compared to the minimum threshold relating to the 560 Mains voltage parameter setting due to: - the mains voltage being too low or overextended voltage drops. - poor cable connections (e.g. loose contactor terminals, inductance, filter, etc. ). <b>Solution:</b> Check the connections and mains voltage
3	Ground fault		<b>Condition:</b> Ground short circuit alarm <b>Solution:</b> - Check drive and motor wiring. - Check that the motor is not grounded.
4	Overcurrent		<b>Condition:</b> Instantaneous overcurrent protection intervention alarm. This may be due to the incorrect setting of current regulator parameters or a short circuit between phases or ground fault on the drive output. <b>Solution:</b> - Check the current regulator parameters - Check wiring towards the motor
5	Desaturation		<b>Condition:</b> Instantaneous overcurrent in the IGBT bridge alarm. <b>Solution:</b> - Switch the drive off and then switch it on again. - Check the condition of the braking resistor isolation. Make sure there are no earth leakages. - If the alarm persists, contact the technical service centre.
6	MultiUndervolt		<b>Condition:</b> The number of attempted automatic restarts after the Undervoltage alarm has exceeded the set PAR 4650 UVRep attempts value in the PAR 4652 UVRep delay time. <b>Solution:</b> Too many Undervoltage alarms. Adopt the proposed solutions for the Undervoltage alarm.
7	MultiOvercurr		<b>Condition:</b> 2 attempted automatic restarts after the Overcurrent alarm within 30 seconds. If more than 30 seconds pass after the Overcurrent alarm was generated, the attempt counter is reset. <b>Solution:</b> Too many Overcurrent alarms. Adopt the proposed solutions for the Overcurrent alarm.
8	MultiDesat		<b>Condition:</b> 2 attempted at automatic restarts after the Desaturation alarm within 30 seconds. If more than 30 seconds pass after the Desaturation alarm was generated, the attempt counter is reset. <b>Solution:</b> Too many Desaturation alarms. Adopt the proposed solutions for the Desaturation alarm.
9	Heatsink OT		<b>Condition:</b> Heatsink temperature too high alarm <b>Solution:</b> - Verify the correct operation of the cooling fan. - Check that the heatsinks are not clogged - Check that the openings for the cabinet cooling air are not blocked.
10	HeatsinkS OTUT		<b>Condition:</b> IGBT module temperature too high or too low alarm <b>Solution:</b> - Verify the correct operation of the cooling fan. - Check that the heatsinks are not clogged - Check that the openings for the cabinet cooling air are not blocked.
11	PTC failure		<b>Condition:</b> PTC sensor break alarm. Possible causes: - analog input reading a PTC resistance too low or a short circuit. <b>Solution:</b> Check the connection and integrity of the PTC sensor.
12	Motor OT		<b>Condition:</b> Motor overtemperature alarm. Possible causes: - PTC circuit malfunction causing the analog input to see an open circuit with the motor not overheated - Load cycle too heavy - The motor is installed in a place where the ambient temperature is too high - If the motor is provided with a blower: the fan is not working - If the motor is not provided with a blower: the load is too high at slow speeds. Cooling the fan on the motor shaft is not sufficient for this load cycle. - The motor is used at less than the rated frequency, causing additional magnetic losses.



Index	Error message shown on the display	Sub-code	Description				
			<b>Solution:</b> - Change the processing cycle. - Use a cooling fan to cool the motor.				
13	Drive overload		<b>Condition:</b> Drive overload alarm. - The inverter output current has exceeded the allowed overload value. - The overload cycle has exceeded the allowed values. <b>Solution:</b> - Check that the load is not excessive. - Check that accelerations are not excessive. - Check that the overload cycle is within allowed limits.				
14	Motor overload		<b>Condition:</b> Motor overload alarm. The current absorbed during operation is greater than that specified on the motor data plate. <b>Solution:</b> - Reduce the motor load. - Increase the size of the motor.				
15	Bres overload		<b>Condition:</b> Braking resistor overload alarm. The current absorbed by the resistor is greater than the rated current. <b>Solution:</b> - Check the size of the braking resistor. - Check the condition of the braking resistor.				
16	Phase loss		<b>Condition:</b> Power phase loss alarm. <b>Solution:</b> Check the mains voltage and whether any protections upstream of the drive have been tripped.				
17	Opt Bus fault		<b>Condition:</b> Error in the configuration stage or communication error. <table border="1"> <tr> <td>XXX0H-X</td> <td>If the first digit to the left of "H" in the alarm sub-code is equal to 0, the error relates to a communication problem.</td> </tr> <tr> <td>XXXXH-X</td> <td>If the first digit to the left of "H" in the alarm sub-code is other than 0, the error relates to a configuration problem.</td> </tr> </table> <b>Solution:</b> For configuration errors, check the configuration of the Bus communication, Bus type, Baudrate, address, parameter setting For communication errors verify wiring, resistance of terminations, interference immunity, timeout settings. For more details reference should be made to the datasheet of the bus being used.	XXX0H-X	If the first digit to the left of "H" in the alarm sub-code is equal to 0, the error relates to a communication problem.	XXXXH-X	If the first digit to the left of "H" in the alarm sub-code is other than 0, the error relates to a configuration problem.
XXX0H-X	If the first digit to the left of "H" in the alarm sub-code is equal to 0, the error relates to a communication problem.						
XXXXH-X	If the first digit to the left of "H" in the alarm sub-code is other than 0, the error relates to a configuration problem.						
18	Opt 1 IO fault		<b>Condition:</b> Error in the communication between Regulation and I/O expansion card. <b>Solution:</b> Check that it has been inserted correctly, see section "A.1 - Optional cards" on page 94.				
19	Precharge fault		<b>Condition:</b> Failed precharge relay: the precharge relay contacts are stuck open. <b>Solution:</b> Reset the alarm and try to resume normal operation. If the alarm persists, contact technical support.				
20	Opt enc fault		<b>Condition:</b> <b>Solution:</b>				
21	External fault		<b>Condition:</b> External alarm present. A digital input has been programmed as an external alarm, but the +24V voltage is not available on the terminal. <b>Solution:</b> Check that the terminal screws are tight				
22	Speed fbk loss		<b>Condition:</b> Speed feedback loss alarm. The encoder is not connected, not connected properly or not powered: verify encoder operation by selecting the <b>PAR 260 Motor speed</b> parameter in the MONITOR menu. <b>Solution:</b> See parameter 2172 <b>SpdFbkLoss code</b> for information about the cause of the alarm and chapter 10.2 <b>Speed fbk loss [22]</b> alarm				
23	Overspeed		<b>Condition:</b> Motor overspeed alarm. The motor speed exceeds the limits set in the <b>PAR 4540</b> parameter. <b>Solution:</b> - Limit the speed reference. - Check that the motor is not driven in overspeed during rotation.				
24	Speed ref loss		<b>Condition:</b> <b>Speed reference loss alarm</b> ; occurs if the difference between the speed regulator reference and the actual motor speed is more than the value reported by PAR 4550. This condition occurs because the drive is in the current limit condition. It is only available in the Flux Vect OL and Flux Vect CL mode. <b>Solution:</b> Check that: - the load is not excessive. - motor data - encoder parameters - gains - tripping time of the error (PAR 4554) - limit of difference between reference and speed (PAR 4550)				
25	Emg stop alarm		<b>Condition:</b> <b>Solution:</b>				
26	Power down		<b>Condition:</b> The drive was enabled with no supply voltage at the power section. <b>Solution:</b> Check drive power supply.				
27	Phaseloss out		<b>Condition:</b> Before each start, a test is performed by injecting a small DC current into the motor output phases: if one or more phases are not connected, an alarm is tripped, preventing any movement and opening the brake. <b>Solution:</b> Check Drive/motor connection.				
28	OV safety		<b>Condition:</b> Safety status alarm caused by Overvoltage situations. <b>Solution:</b> the firmware attempts to reset the card automatically. If the condition is removed (the alarm cleared message is displayed) the alarm can be reset and the drive restarted by deactivating and reactivating Enable and Start.				
29	Safety failure		<b>Condition:</b> The state of the "safety function" is communicated to the regulation card via 2 digital inputs: SAFETY_ON (pin P1.8) and SAFETY_EN (pin P1.9) <b>Solution:</b> Switch the drive off and then back on. If the error persists, contact the technical service centre.				
30	Mot phase loss		<b>Condition:</b> One or more motor output power phases missing while motor is turning.				

Index	Error message shown on the display	Sub-code	Description										
			<b>Solution:</b> Check Drive/motor connection.										
31	Ropes change		<p><b>This may occur in two conditions:</b></p> <ul style="list-style-type: none"> <li>the drive continues to run but the rope usage threshold set in parameter 3404 <b>Ropes change thr</b> has been reached;</li> <li>the drive finishes the current travel and then locks because parameter 3414 Direction counter has reached 0 (corresponding to parameter 3412 <b>Ropes usage</b> = 100%).</li> </ul> <p><b>Solution:</b> replace the ropes. By switching the drive off and back on you can run a single travel to bring the car to a better position for the procedure. After you have changed the ropes, reset the direction change counter to eliminate the lock condition.</p>										
32	Enable missing		<p><b>Condition:</b> (for ADL550 only) occurs if, after <b>Safety Enable</b> signal, <b>Enable</b> is not activated within 4 seconds.</p> <p><b>Solution:</b></p> <ul style="list-style-type: none"> <li>Check <b>Enable</b> signal.</li> <li>Check SAFETY connector, contacts 1 and 2.</li> <li>Check electrical level and current capability of <b>Safety Enable</b> signal.</li> </ul>										
33 ... 48	Plc1 fault ... Plc16 fault		<p><b>Condition:</b> Enabled application developed in the IEC 61131-3 environment has found the conditions for generating this specific alarm to be true. The meaning of the alarm depends on the type of application. For more information, refer to the documentation concerning the specific application.</p> <table border="1"> <tr> <td>XXXXH-X</td> <td>The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> Refer to the documentation concerning the enabled application. With regards to the standard application EFC refer to Functional Parameter Manual section 5.10 LIFT ALARMS. For the applications DCP3/DCP4, EPC and CiA 417 refer to the application manual section ALARMS.</p>	XXXXH-X	The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.								
XXXXH-X	The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.												
49	Watchdog		<p><b>Condition:</b> this condition can occur during operation when the watchdog micro protection is enabled; the alarm is included in the list of alarms and alarm log. After this alarm:</p> <ul style="list-style-type: none"> <li>the drive automatically runs a reset</li> <li>motor control is not available.</li> </ul> <table border="1"> <tr> <td>XXXXH-X</td> <td>The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> If the alarm is the consequence of a change in the drive configuration (parameter setting, option installation, PLC application download) remove it. Turn the drive off and then on again.</p>	XXXXH-X	The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.								
XXXXH-X	The XXXXH-X code indicates the reason for the error: make a note of this to discuss it with the service centre.												
50	Trap error		<p><b>Condition:</b> this condition can occur during operation when the trap micro protection is enabled; the alarm is included in the list of alarms and alarm log. After this alarm:</p> <ul style="list-style-type: none"> <li>the drive automatically runs a reset</li> <li>motor control is not available.</li> </ul> <table border="1"> <tr> <td>XXXXH-X</td> <td>The XXXXH-X (SubHandler-Class) code indicates the reason for the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> If the alarm was a consequence of a variation to the drive configuration (parameter setting, installation of an option, downloading of a PLC application), remove it. Switch the drive off and then switch it on again.</p>	XXXXH-X	The XXXXH-X (SubHandler-Class) code indicates the reason for the error: make a note of this to discuss it with the service centre.								
XXXXH-X	The XXXXH-X (SubHandler-Class) code indicates the reason for the error: make a note of this to discuss it with the service centre.												
51	System error		<p><b>Condition:</b> this condition can occur during operation when the operating system protection is enabled; the alarm is included in the list of alarms and alarm log. After this alarm:</p> <ul style="list-style-type: none"> <li>the drive automatically runs a reset</li> <li>motor control is not available.</li> </ul> <table border="1"> <tr> <td>XXXXH-X</td> <td>The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> If the alarm was a consequence of a variation to the drive configuration (parameter setting, installation of an option, downloading of a PLC application), remove it. Switch the drive off and then switch it on again.</p>	XXXXH-X	The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.								
XXXXH-X	The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.												
52	User error		<p><b>Condition:</b> this condition can occur during operation when the software protection is enabled; the alarm is included in the list of alarms and alarm log. After this alarm:</p> <ul style="list-style-type: none"> <li>the drive automatically runs a reset</li> <li>motor control is not available.</li> </ul> <table border="1"> <tr> <td>XXXXH-X</td> <td>The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> If the alarm was a consequence of a variation to the drive configuration (parameter setting, installation of an option, downloading of a PLC application), remove it. Switch the drive off and then switch it on again.</p>	XXXXH-X	The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.								
XXXXH-X	The XXXXH-X (Error-Pid) code indicates the reason for the error: make a note of this to discuss it with the service centre.												
53	Param error		<p><b>Condition:</b> if an error occurs during the enabling of the parameter database saved in the Flash memory; the alarm is included in the list of alarms and alarm log.</p> <table border="1"> <tr> <td>XXXH-X</td> <td>Code XXXH-X indicates the number of the parameter (Hex-Dec) that has caused the error: make a note of this to discuss it with the service centre.</td> </tr> </table> <p><b>Solution:</b> Set the parameter causing the error to the correct value and run <b>Save parameter</b>. Switch the drive off and then switch it back on again.</p>	XXXH-X	Code XXXH-X indicates the number of the parameter (Hex-Dec) that has caused the error: make a note of this to discuss it with the service centre.								
XXXH-X	Code XXXH-X indicates the number of the parameter (Hex-Dec) that has caused the error: make a note of this to discuss it with the service centre.												
54	Load default		<p><b>Condition:</b> this can occur during loading of the parameter database saved in the Flash memory it is normal if it appears in the following conditions: the first time the drive is switched on, when a new version of the firmware is downloaded, when the regulation is installed on a new size, when a new region is entered. If this message appears when the drive is already in use it means there has been a problem in the parameter database saved in the Flash memory. If this message is displayed the drive restores the default database, i.e. the one downloaded during production.</p> <table border="1"> <tr> <td>0001H-1</td> <td>The database saved is not valid</td> </tr> <tr> <td>0002H-2</td> <td>The database saved is not compatible</td> </tr> <tr> <td>0003H-3</td> <td>The saved database refers to a different size and not to the current size</td> </tr> <tr> <td>0004H-4</td> <td>The saved database refers to a different region and not to the current region</td> </tr> </table> <p><b>Solution:</b> Set the parameters to the desired value and execute <b>Save parameters</b></p>	0001H-1	The database saved is not valid	0002H-2	The database saved is not compatible	0003H-3	The saved database refers to a different size and not to the current size	0004H-4	The saved database refers to a different region and not to the current region		
0001H-1	The database saved is not valid												
0002H-2	The database saved is not compatible												
0003H-3	The saved database refers to a different size and not to the current size												
0004H-4	The saved database refers to a different region and not to the current region												
55	Plc cfg error		<p><b>Condition:</b> this can occur during loading of the MDPLC application The Mdplic application present on the drive is not run.</p> <table border="1"> <tr> <td>0004H-4</td> <td>The application that has been downloaded has a different Crc on the DataBlock and Function table.</td> </tr> <tr> <td>0065H-101</td> <td>The application that has been downloaded has an invalid identification code (Info).</td> </tr> <tr> <td>0066H-102</td> <td>The application that has been downloaded uses an incorrect task number (Info).</td> </tr> <tr> <td>0067H-103</td> <td>The application that has been downloaded has an incorrect software configuration.</td> </tr> <tr> <td>0068H-104</td> <td>The application that has been downloaded has a different Crc on the DataBlock and Function table.</td> </tr> </table>	0004H-4	The application that has been downloaded has a different Crc on the DataBlock and Function table.	0065H-101	The application that has been downloaded has an invalid identification code (Info).	0066H-102	The application that has been downloaded uses an incorrect task number (Info).	0067H-103	The application that has been downloaded has an incorrect software configuration.	0068H-104	The application that has been downloaded has a different Crc on the DataBlock and Function table.
0004H-4	The application that has been downloaded has a different Crc on the DataBlock and Function table.												
0065H-101	The application that has been downloaded has an invalid identification code (Info).												
0066H-102	The application that has been downloaded uses an incorrect task number (Info).												
0067H-103	The application that has been downloaded has an incorrect software configuration.												
0068H-104	The application that has been downloaded has a different Crc on the DataBlock and Function table.												

Index	Error message shown on the display	Sub-code	Description
		<b>0069H-105</b>	A Trap error or System error has occurred. The drive has automatically executed a Power-up operation. Application not executed. See the Alarm List for more information about an error that has occurred.
		<b>006AH-106</b>	The application that has been downloaded has an invalid identification code (Task).
		<b>006BH-107</b>	The application that has been downloaded uses an incorrect task number (Task).
		<b>006CH-108</b>	The application that has been downloaded has an incorrect Crc (Tables + Code)
		<b>Solution:</b> Remove the MDPLC application or download a correct MDPLC application.	
<b>56</b>	<b>Load par def plc</b>	<b>Condition:</b> this can occur during loading of the parameter database saved in the Flash memory of the MDPLC application it is normal if it appears the first time the drive is switched on, after downloading a new application. If this message appears when the drive is already in use it means there has been a problem in the parameter database saved in the Flash memory. If this message appears the drive automatically runs the Load default command.	
		<b>0001H-1</b>	The database saved is not valid
		<b>Solution:</b> Set the parameters to the desired value and run Save parameter.	
<b>57</b>	<b>Key failed</b>	<b>Condition:</b> this can occur at drive power-on if the wrong enabling key is entered for a given firmware function	
		<b>0001H-1</b>	Incorrect PLC key. PLC application not available.
		<b>Solution:</b> Contact WEG to request the key to enable the desired firmware function.	
<b>58</b>	<b>Encoder error</b>	<b>Condition:</b> this condition may occur when the drive is powered during encoder setup each time parameter 552 <b>Regulation mode</b> is set.	
		<b>100H-256</b>	<b>Cause:</b> An error occurred during setup; the information received from the encoder is not reliable. If the encoder is used for feedback the <b>Speed fbk loss</b> alarm is also generated. <b>Solution:</b> Take the recommended action for the <b>Speed fbk loss</b> alarm.
		<b>200H-512</b>	<b>Cause:</b> The firmware on the optional encoder card is incompatible with that on the regulation card. The information received from the encoder is not reliable <b>Solution:</b> Contact WEG in order to update the firmware on the optional encoder card.
<b>59</b>	<b>Recovery mode</b>	<b>Condition:</b>	
		<b>Solution:</b>	
<b>60</b>	<b>EBC Fault</b>	<b>Condition:</b> Communication with the EBC has been interrupted for one of the reasons specified in the sub-codes below.	
		<b>Solution:</b>	

CODE	LABEL	DESCRIPTION
0x0000	ALM_no_alarms	No communication alarm
0x0001	ALM_ng_err_timeout	Time expired in NodeGuarding (line canopen interrupted)
0x0002	ALM_ng_err_generic	Unexpected error in managing NG
0x0003	ALM_ng_err_toggle	Toggle bits in the misaligned NG (serious problems on the canopen communication line)
0x0004	ALM_fail_reset_node	NMT command to reset communication to EBC failed
0x0005	ALM_etc_missing	Request of "device-type" to EBC failed too many times. EBC NOT PRESENT on canopen line
0x0006	ALM_badline_etc	Request for "device-type" to failed EBC. Trying recovery
0x0007	ALM_etc_preop_missing	EBC node timeout at the start of NG and PLC
0x0008	ALM_etc_product_error	SDO readings for failed EBC product information or inconsistent PRODUCT_TYPE and PRODUCT_CONFIG of EBC
0x0009	ALM_etc_config_error	Parameters from ADL to EBC were not transferred correctly
0x000a	ALM_etc_initpdo1	PDO initialization failed
0x000b	ALM_etc_initpdo2	PDO like SDO initialization failed
0x000c	ALM_etc_startnode	Start remote node failed
0x000d	ALM_etc_pdoNo_operative	EBC did not go into operation
0x000e	ALM_etc_pdos_missing	I have not received PDOs from the EBC
0x000f	ALM_etc_sys_fault	EBC node restart. Deletion of old PDO failed
0x0010	ALM_fail_stop_node	The stop mode command was sent to the EBC, but the transmission failed
0x0011	ALM_etc_local_ON	EBC local switch located in local
0x0012	ALM_etc_crypt_error	Sequence of CRYPT failed
0x0013	ALM_etc_relocked_error	EBC had passed the CRYPT phase but during the reset or during the EBC ready requires the CRYPT sequence again
0x0014	ALM_etc_pdoReset_error	Final EBC reset command failed

### 10.1.1 EFC application alarms

Index	Error message shown on the display	Description
33	Cont feedback	<b>Condition:</b> The contactor feedback signal does not match its command.
		<b>Solution:</b> Check contactor feedback wiring, check logic status of feedback input to drive, increase hold off time (PAR 11202).
34	Brake Feedback	<b>Condition:</b> The brake feedback signal does not match its command.
		<b>Solution:</b> Check brake feedback wiring, check logic status of feedback input to drive, increase hold off time (PAR 11206).
35	Door Feedback	<b>Condition:</b> The door feedback signal does not match its command.
		<b>Solution:</b> Check door feedback wiring, check logic status of feedback input to drive, increase hold off time (PAR 11212).
36	Brake Failure	<b>Condition:</b> Exceeding the Threshold A3 (PAR 11270).
		<b>Solution:</b> Reset alarm using the reset parameter (PAR 11268), check that brake is intact, increase threshold (PAR 11270).
37	Safe Brake Test	<b>Condition:</b> Brake force test failed.
		<b>Solution:</b> Check that brake is intact, increase the maximum deviation threshold (PAR 11840).
38	Speed limit	<b>Condition:</b> Speed limitation warning to ensure stopping, enabling the DISTANCE function.
		<b>Solution:</b> Check multi-speed selected for current distance.
39	Up/low limit	<b>Condition:</b> Speed threshold exceeded in limit switches zone (sensors installed at the top and bottom of the lift/elevator shaft).
		<b>Solution:</b> Check speed set in limit switches zone, change speed limit (PAR 11216).
40	Lift ext fault	<b>Condition:</b> External alarm signal triggered (PAR 11258).
		<b>Solution:</b> Check causes enabling external alarm signal, increase hold off time (PAR 11266).
41	No battery	<b>Condition:</b> Battery monitoring alarm triggered.
		<b>Solution:</b> Check whether battery is properly connected to drive.

## 10.2 Speed fbk loss alarm according to the type of feedback

### Note!

For the correct interpretation of the cause of the alarm trigger, it is necessary to transform the hex code indicated in parameter 15.13 **SpdFbkLoss code**, PAR 2172, in the corresponding binary and verify in the encoder table that the active bits and related description are used.

Example with encoder EnDat:

PAR 2172 = A0H (hex value)

In the table "Speed fbk loss [22] alarm with absolute encoder EnDat" A0 is not indicated in the value column.

A0 should be contemplated as a bitword with meaning A0 -> 10100000 -> bit 5 and bit 7. The following causes simultaneously intervene:

- Bit 5 = 20H Cause: the SSI signal interferences cause an error in the CKS or parity.
- Bit 7 = 80H Cause: The encoder has detected an incorrect operation and communicates it to the converter through the Error bit. Bits 16..31 present the type of incorrect encoder operation detected.

The value is displayed in hexadecimal format on the optional and standard keypad.

### • Speed fbk loss [22] alarm with digital incremental encoder

Bit	Value	Name	Description
0	0x01	CHA	<b>Cause:</b> no impulses or disturbance on incremental channel A.
			<b>Solution:</b> Check the connection of the encoder-drive channel A, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2104 <b>Encoder input config</b> .
1	0x02	CHB	<b>Cause:</b> no impulses or disturbance on incremental channel B.
			<b>Solution:</b> Check the connection of the encoder-drive channel B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2104 <b>Encoder input config</b> .
2	0x04	CHZ	<b>Cause:</b> no impulses or disturbance on incremental channel Z.
			<b>Solution:</b> Check the connection of the encoder-drive channel Z, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2104 <b>Encoder input config</b> , check parameter 2110 <b>Encoder signal check</b>

### • Speed fbk loss [22] alarm with sinusoidal incremental encoder

Bit	Value	Name	Description
3	0x08	MOD_INCR	<b>Cause:</b> voltage level not correct or disturbance on signals of incremental channels A-B.
			<b>Solution:</b> Check the connection of the encoder-drive channels A-B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2108 <b>Encoder signal Vpp</b> .

### • Speed fbk loss [22] alarm with SinCos encoder

Bit	Value	Name	Description
3	0x08	MOD_INCR	<b>Cause:</b> voltage level not correct or disturbance on signals of incremental channels A-B.
			<b>Solution:</b> Check the connection of the the encoder-drive channels A-B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2108 <b>Encoder signal Vpp</b> .
4	0x10	MOD_ABS	<b>Cause:</b> voltage level not correct or disturbance on signals of absolute SinCos channels.
			<b>Solution:</b> Check the connection of the the encoder-drive channels A-B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2108 <b>Encoder signal Vpp</b> .

### • Speed fbk loss [22] alarm with SSI absolute encoder

Bit	Value	Name	Description
3	0x08	MOD_INCR	<b>Cause:</b> voltage level not correct or disturbance on signals of incremental channels A-B.
			<b>Solution:</b> Check the connection of the the encoder-drive channels A-B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2108 <b>Encoder signal Vpp</b> .
5	0x20	CRC_CKS_P	<b>Cause:</b> SSI signals not present or disturbed.
			<b>Solution:</b> Check the connection of the clock and encoder-drive data, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameters 7106 <b>BiSS N bit ST</b> and 7108 <b>BiSS N bit MT</b> .
8	0x100	Setup error	<b>Cause:</b> An error occurred during setup.
			<b>Solution:</b> Check the connection of the clock and encoder-drive data, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameters 7106 <b>BiSS N bit ST</b> and 7108 <b>BiSS N bit MT</b> .

- **Speed fbk loss [22] alarm with EnDat absolute encoder**

Bit	Value	Name	Description
3	0x08	MOD_INCR	<b>Cause:</b> voltage level not correct or disturbance on signals of incremental channels A-B.
			<b>Solution:</b> Check the connection of the the encoder-drive channels A-B, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> , check parameter 2108 <b>Encoder signal Vpp</b> .
5	0x20	CRC_CKS_P	<b>Cause:</b> SSI signals not present or disturbed cause an error on CRC
			<b>Solution:</b> Check the connection of the clock and encoder-drive data, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> .
8	0x100	Setup error	<b>Cause:</b> An error occurred during setup.
			<b>Solution:</b> Check the connection of the clock and encoder-drive data, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> .

The following conditions occur while resetting the encoder following **Speed fbk loss [22]** activation

Bit	Value	Name	Description																																				
6	0x40	ACK_TMO	<b>Cause:</b> SSI signals not present or disturbed cause an error on CRC																																				
			<b>Solution:</b> Check the connection of the clock and encoder-drive data, check the connection of the screen, check the encoder supply voltage, check parameter 2102 <b>Encoder supply</b> .																																				
7	0x80	DT1_ERR	<b>Cause:</b> Encoder has detected malfunction and signals this to the drive via bit DT1. Bits 16..31 contain the type of malfunction detected by the encoder.																																				
			<b>Solution:</b> See the encoder manufacturer's technical guide.																																				
16.31			<table border="1"> <thead> <tr> <th>Bit</th> <th></th> <th>=0</th> <th>=1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Light source</td> <td>OK</td> <td>Failure (1)</td> </tr> <tr> <td>1</td> <td>Signal amplitude</td> <td>OK</td> <td>Erroneous (1)</td> </tr> <tr> <td>2</td> <td>Position value</td> <td>OK</td> <td>Erroneous (1)</td> </tr> <tr> <td>3</td> <td>Over voltage</td> <td>NO</td> <td>Yes (1)</td> </tr> <tr> <td>4</td> <td>Under voltage</td> <td>NO</td> <td>Under voltage supply (1)</td> </tr> <tr> <td>5</td> <td>Over current</td> <td>NO</td> <td>Yes (1)</td> </tr> <tr> <td>6</td> <td>Battery</td> <td>OK</td> <td>Change the battery (2)</td> </tr> <tr> <td>7..15</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	Bit		=0	=1	0	Light source	OK	Failure (1)	1	Signal amplitude	OK	Erroneous (1)	2	Position value	OK	Erroneous (1)	3	Over voltage	NO	Yes (1)	4	Under voltage	NO	Under voltage supply (1)	5	Over current	NO	Yes (1)	6	Battery	OK	Change the battery (2)	7..15			
			Bit		=0	=1																																	
			0	Light source	OK	Failure (1)																																	
			1	Signal amplitude	OK	Erroneous (1)																																	
			2	Position value	OK	Erroneous (1)																																	
			3	Over voltage	NO	Yes (1)																																	
			4	Under voltage	NO	Under voltage supply (1)																																	
			5	Over current	NO	Yes (1)																																	
			6	Battery	OK	Change the battery (2)																																	
			7..15																																				
(1) Can also be set after the power supply is switched off or on.																																							
(2) Only for battery-buffered encoders																																							

The following conditions occur while resetting the encoder following **Speed fbk loss [22]** activation.

Bit	Value	Name	Description																																																			
7	0x80	DT1_ERR	<b>Cause:</b> Encoder has detected malfunction and signals this to the drive via Error bit. Bits 16..31 contain the type of malfunction detected by the encoder.																																																			
			<b>Solution:</b> See the encoder manufacturer's technical guide.																																																			
16.31			<table border="1"> <thead> <tr> <th>Type</th> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Transmission</td> <td>09h</td> <td>Transmitted parity bit is incorrect</td> </tr> <tr> <td></td> <td>0AH</td> <td>Checksum of transmitted data is wrong</td> </tr> <tr> <td></td> <td>0BH</td> <td>Incorrect command code</td> </tr> <tr> <td></td> <td>0CH</td> <td>Wrong number of transmitted data</td> </tr> <tr> <td></td> <td>0DH</td> <td>Illegal transmitted command argument</td> </tr> <tr> <td></td> <td>0FH</td> <td>Wrong access authorization specified</td> </tr> <tr> <td></td> <td>0EH</td> <td>Selected field has READ ONLY status</td> </tr> <tr> <td></td> <td>10H</td> <td>Data field (re) definition not executable due to field size</td> </tr> <tr> <td></td> <td>11H</td> <td>Specified address is not available in selected field</td> </tr> <tr> <td></td> <td>12H</td> <td>Selected field does not yet exist</td> </tr> <tr> <td></td> <td>00H</td> <td>No encoder error, no error message</td> </tr> <tr> <td></td> <td>03H</td> <td>Data field operations disabled</td> </tr> <tr> <td></td> <td>04H</td> <td>Analog monitoring inoperative</td> </tr> <tr> <td></td> <td>08H</td> <td>Counting register overflow</td> </tr> <tr> <td></td> <td>01H</td> <td>Encoder analog signals are unreliable</td> </tr> <tr> <td></td> <td>02H</td> <td>Wrong synchronization or offset</td> </tr> </tbody> </table>	Type	Code	Description	Transmission	09h	Transmitted parity bit is incorrect		0AH	Checksum of transmitted data is wrong		0BH	Incorrect command code		0CH	Wrong number of transmitted data		0DH	Illegal transmitted command argument		0FH	Wrong access authorization specified		0EH	Selected field has READ ONLY status		10H	Data field (re) definition not executable due to field size		11H	Specified address is not available in selected field		12H	Selected field does not yet exist		00H	No encoder error, no error message		03H	Data field operations disabled		04H	Analog monitoring inoperative		08H	Counting register overflow		01H	Encoder analog signals are unreliable		02H	Wrong synchronization or offset
			Type	Code	Description																																																	
			Transmission	09h	Transmitted parity bit is incorrect																																																	
				0AH	Checksum of transmitted data is wrong																																																	
				0BH	Incorrect command code																																																	
				0CH	Wrong number of transmitted data																																																	
				0DH	Illegal transmitted command argument																																																	
				0FH	Wrong access authorization specified																																																	
				0EH	Selected field has READ ONLY status																																																	
				10H	Data field (re) definition not executable due to field size																																																	
				11H	Specified address is not available in selected field																																																	
				12H	Selected field does not yet exist																																																	
				00H	No encoder error, no error message																																																	
				03H	Data field operations disabled																																																	
				04H	Analog monitoring inoperative																																																	
				08H	Counting register overflow																																																	
	01H	Encoder analog signals are unreliable																																																				
	02H	Wrong synchronization or offset																																																				

Bit	Value	Name	Description
			05H-07H Encoder-internal hardware fault, no operation possible
			1CH-1DH Error in sampling, no operation possible
			1EH Permissible operation temperature is exceeded
			(1) Can also be set after the power supply is switched off or on. (2) Only for battery-buffered encoders

### 10.2.1 Reset Speed fbk loss alarm

The reasons for activating the **Speed fbk loss** alarm and the information acquired by the encoder are shown in parameter 2172 **SpdFbkLoss code**.

If no card has been installed the **Speed fbk loss** [22] alarm is generated and no cause is displayed in parameter 2172 **SpdFbkLoss code**. Several causes may be present at the same time.

If no card is recognised, the system runs a routine that always returns **Speed fbk loss** [22] active without specifying a cause.

### 10.2.2 Encoder error alarm

Setup is performed each time the drive is turned on, regardless of the regulation mode that has been selected. If an error is detected during setup the **Encoder error** alarm is generated with the following codes:

Bit	Value	Name	Description
8	0x100	Setup error	<b>Cause:</b> An error occurred during setup. When this has been signalled the information obtained from the encoder is not reliable.
			<b>Solution:</b> Take the action recommended for <b>Speed fbk loss</b> [22] alarm according to the type of encoder.
9	0x200	Compatibility error	<b>Cause:</b> Firmware on option card incompatible with firmware on regulation card. When this has been signalled the information obtained from the encoder is not reliable.
			<b>Solution:</b> Contact WEG in order to update the firmware on the optional card.

## 10.3 Messages

**Note !**

For more information see chapter "8.2.12 Messages" on page 58.

In-dex	Error message shown on the display	Sub-code	Description		
1	Load default param	<p><b>Condition:</b> may occur during loading of the parameter database saved in flash normally appears in the following conditions: at initial power-on when a new firmware version is downloaded, when the regulation is installed on a new size, when the region is changed.                      If this message is displayed when the drive is already operating, this means that a problem has occurred in the parameter database saved in Flash.                      If this message is displayed, the drive automatically performs the <b>Load default</b> command.</p>			
		0001H-1	The database saved is not valid		
		0002H-2	The database saved is not compatible		
		0003H-3	The database saved refers to a different size from the current size		
		0004H-4	The database saved refers to a different region from the current region		
		<b>Solution:</b> Set the parameters to the value required and perform <b>Save parameter</b>			
2...4	Not used				
5	Autotune (motor)	<p><b>Condition:</b> this may occur during the self-tuning procedure</p>			
		0	No error		
		1	N.A.		
		2	N.A.		
		3	The motor plate data parameters have changed but the <b>Take parameters</b> command, PAR 2020, has not been executed <b>Solution:</b> Execute the <b>Take parameters</b> command.		
		4	The motor is not connected <b>Solution:</b> Connect the motor		
		5	While running self-tuning the ESC key was pressed or the enable contact was opened or an alarm occurred. The self-tuning command was sent with the drive in the alarm condition <b>Solution:</b> Eliminate the reason for the alarm, remove the reason for the opening of the enable contact, reset alarms.		
		6	A self-tuning measurement is beyond the drive limits. <b>Solution:</b> Check the motor plate data or drive and motor sizes have been combined incorrectly.		
		7	The self-tuning command was sent without being enabled. <b>Solution:</b> Close the enable contact before sending the self-tuning command		
		8 ... 21	A self-tuning measurement has reached a drive limit. <b>Solution:</b> Check the motor plate data or the drive and motor sizes have been combined incorrectly.		
		22	The Enable was not given or removed in time during the phasing procedure. <b>Solution:</b> Repeat the phasing procedure and check the connection of the enable signals.		
		29	Incorrect incremental encoder impulse count probably caused by the incorrect value of the encoder impulse parameter. <b>Solution:</b> Check the electric signals of the incremental encoder. Check the value of the encoder impulse parameter.		
		30	Incorrect absolute encoder impulse count <b>Solution:</b> Check the electric signals of the absolute encoder. Check the configuration of the absolute encoder.		
		31	Incremental encoder impulse count sign inverted with respect to the absolute encoder impulse count. <b>Solution:</b> Invert the A+ and A- signal of the incremental encoder.		
		32	Incremental encoder impulse count sign inverted with respect to the absolute encoder impulse count. <b>Solution:</b> Invert the A+ and A- signal of the absolute encoder.		
		33	Incorrect phase sequence. (Message not signalled) <b>Solution:</b> The automatic procedure has modified the setting of the Encoder direction parameter. No other action is required		
		34	During automatic phasing a communication channel is activated between the drive and encoder. An error has occurred on this communication channel. <b>Solution:</b> Repeat the procedure.		
				<p><b>Solution:</b> If the message appears with a value other than 0, follow the instructions supplied for each particular case and repeat self-tuning. This should be performed using the wizard function available from the keypad (STARTUP WIZARD) and the Tool software on the PC.</p> <p>Pay attention to all motor plate data parameters, especially:</p> <ul style="list-style-type: none"> <li>- <b>Rated speed, Motor rated speed</b> in rpm.                             <ul style="list-style-type: none"> <li>• (ADL500 for Asynchronous motor) Take care not to set the <b>Rated speed</b> parameter to the synchronous speed. The value of the <b>Rated speed</b> parameter must be less than: <math>[(\text{Rated frequency} * 60) / \text{Pole pairs}]</math>.</li> <li>• (ADL500 for Synchronous motor) Take care to set the <b>Rated speed</b> parameter to the synchronous speed.</li> </ul> </li> <li>- <b>Rated frequency, Motor rated frequency</b> in Hz</li> <li>- <b>Pole pairs, Motor pole pairs</b></li> </ul> <p>If the problem persists even after following the instructions supplied, confirm the values of the motor plate data parameters, execute the <b>Take parameters</b> command but not self-tuning.</p>	
		5	Autotune (phasing) (Only Synchronous)	0	No error
				1	N.A.
				2	N.A.
3	The motor plate data parameters have changed but the <b>Take parameters</b> command, PAR 2020, has not been executed <b>Solution:</b> Execute the <b>Take parameters</b> command.				
4	The motor is not connected <b>Solution:</b> Connect the motor				



In- dex	Error message shown on the display	Sub-code	Description		
		5	While running self-tuning the ESC key was pressed or the enable contact was opened or an alarm occurred. The self-tuning command was sent with the drive in the alarm condition <b>Solution:</b> Eliminate the reason for the alarm, remove the reason for the opening of the enable contact, reset alarms.		
		6	A self-tuning measurement is beyond the drive limits. <b>Solution:</b> Check the motor plate data or drive and motor sizes have been combined incorrectly.		
		7	The self-tuning command was sent without being enabled. <b>Solution:</b> Close the enable contact before sending the self-tuning command		
		8 ... 21	A self-tuning measurement has reached a drive limit. <b>Solution:</b> Check the motor plate data or the drive and motor sizes have been combined incorrectly.		
		22	The Enable was not given or removed in time during the phasing procedure. <b>Solution:</b> Repeat the phasing procedure and check the connection of the enable signals.		
		29	Incorrect incremental encoder impulse count probably caused by the incorrect value of the encoder impulse parameter. <b>Solution:</b> Check the electric signals of the incremental encoder. Check the value of the encoder impulse parameter.		
		30	Incorrect absolute encoder impulse count <b>Solution:</b> Check the electric signals of the absolute encoder. Check the configuration of the absolute encoder.		
		31	Incremental encoder impulse count sign inverted with respect to the absolute encoder impulse count. <b>Solution:</b> Invert the A+ and A- signal of the incremental encoder.		
		32	Incremental encoder impulse count sign inverted with respect to the absolute encoder impulse count. <b>Solution:</b> Invert the A+ and A- signal of the absolute encoder.		
		33	Incorrect phase sequence. (Message not signalled) <b>Solution:</b> The automatic procedure has modified the setting of the Encoder direction parameter. No other action is required		
		34	During automatic phasing a communication channel is activated between the drive and encoder. An error has occurred on this communication channel. <b>Solution:</b> Repeat the procedure.		
		<b>Solution:</b> If the message has a value other than 0 follow the instructions provided for each case and repeat automatic phasing.			
		6	<b>Power config</b>	<b>Condition:</b> may occur during recognition of power cards. If this message is displayed, it is not possible to drive the motor.	
				0020H-32	The power card is configured for a drive that is incompatible with the regulation card
		0021H-33	The configuration of the power card is not compatible with the regulation card		
		0017H-23	The configuration required is not available on the power card		
<b>Solution:</b> Download the correct configuration on the power card					
7	<b>Save par failed</b>	<b>Condition:</b> during transfer of the parameters from the drive to the memory of the keypad			
		0H-0	Communication error		
		0023H-35	Communication error		
		0023H-36	Communication error		
		0025H-37	The data saved on the keypad are not valid		
<b>Solution:</b>					
8 9	<b>Load par failed Load par incomplete</b>	<b>Condition:</b> during transfer of the parameters from the memory of the keypad to the drive			
		0H-0	Communication error		
		0023H-35	Communication error		
		0023H-36	Communication error		
		0025H-37	The data saved on the keypad are not valid. No parameter is transferred from the keypad to the drive		
		0026H-38	Incompatible drive series. No parameter is transferred from the keypad to the drive		
		0027H-39	Different software version. All the parameters present in the memory of the keypad have been transferred to the drive. The set of parameters transferred refers to a drive with a different firmware version; therefore, certain parameters may not be updated.		
		0028H-40	Incompatible drive size. All the parameters present in the memory of the keypad (excluding those that depend on the size of the drive), have been transferred to the drive. The parameters that depend on size maintain their original value.		
		0029H-41	Error during saving of parameters on the drive. All the parameters present in the memory of the keypad have been transferred to the drive. The transfer of one or more parameters has caused an "out of range" error, or one or more parameters does not exist. At the end of transfer, one or more parameters may not have been updated.		
		002AH-42	Different PLC application release and version. All parameters in the keypad memory have been transferred to the drive. The transferred set of parameters relates to a drive with a PLC application in which the version and release of the application are different. As a result some of the PLC application parameters may not be updated.		
		002BH-43	PLC application not compatible. All the parameters in the keypad memory except those relating to the PLC application have been transferred to the drive. The transferred set of parameters relates to a drive with a different PLC application. As a result none of the PLC application parameters are updated.		
<b>Solution:</b> Recover a set of parameters from a compatible drive (model and size)					
10	<b>Not used</b>				
11	<b>Load def plc</b>	<b>Condition:</b> may occur during loading of the parameter database saved in the Flash of the Mdplc application Normally appears at initial power-on after downloading a new application. If this message is displayed when the drive is already operating, this means that a problem has occurred in the parameter database saved in Flash. If this message appears the drive restores the default database, i.e. the one that was downloaded.			
		0001H-1	The database saved is not valid		
<b>Solution:</b> Set the parameters to the value required and perform <b>Save parameter</b>					
12	<b>Plc cfg error</b>	<b>Condition:</b> may occur during loading of the Mdplc application The Mdplc application present on the drive is not run.			
		0004H-4	The application downloaded has a different Crc on DataBlock and Function table		

In- dex	Error message shown on the display	Sub-code	Description
		0065H-101	The application downloaded has an invalid identifier (Info)
		0066H-102	The application downloaded has an incorrect task number (Info)
		0067H-103	The application downloaded has an incorrect software configuration
		0068H-104	The application downloaded has a different Crc on DataBlock and Function table
		0069H-105	A Trap error or System error has occurred. The drive automatically performs a Power-up operation. The application is not run. See in Alarm List for further information regarding the error occurred
		006AH-106	The application downloaded has an incorrect identifier (Task)
		006BH-107	The application downloaded has an incorrect task number (Task)
		006CH-108	The application downloaded has an incorrect Crc (Tables + Code)
		<b>Solution:</b> Remove the Mdplc application or download a correct Mdplc application	
13 14 15 16	Plc 1 Plc 2 Plc 3 Plc 4		Reserved messages and dedicated to the PLC application. See the application manual.
17	Opt bus fault	<b>Condition:</b> this may occur when the drive is turned on, during fieldbus card setup. Error during configuration or communication error.	
		XXX0H-X	If the first digit to the left of "H" in the alarm sub-code is 0, the error regards a communication problem.
		XXX0H-X	If the first digit to the left of "H" in the alarm sub-code is other than 0, the error regards a configuration problem.
		<b>Solution:</b> For configuration errors, check the configuration of the bus communication, type of bus, baudrate, address, parameter setting For communication errors, check wiring, termination resistors, disturbance immunity, timeout settings. For further details, please refer to the user guide for the specific bus.	
18	Wrong key	<b>Condition:</b> this may occur when powering the drive, if the incorrect enable key is inserted for a given firmware function.	
		xxxxH-x	
		<b>Solution:</b> Ask WEG to supply the correct key to enable the desired firmware function.	
19	Key expiring	<b>Condition:</b> this may occur at drive power-on if the incorrect enabling key was inserted for a given firmware function. At this stage the firmware function can still be used freely, but this time limit is about to expire	
		xxxH-x	Number of hours for which the function can still be used freely.
		<b>Solution:</b> Ask WEG for the correct key to enable the desired firmware function.	
20	Not used		
21	Parameter error	<b>Condition:</b> if an error occurs during activation of the parameter database saved in flash; the alarm is inserted in the alarm list and alarm log.	
		XXX0H-X	Code XXXXH-X indicates the number of the parameter (Hex-Dec) that has caused the error: make a note of this to discuss it with the service centre.
		<b>Solution:</b> Set the parameter that has caused the error to the correct value and execute <b>Save parameters</b> , switch the drive off and then back on.	
22	Encoder error	<b>Condition:</b> this condition may occur when the drive is powered during encoder setup each time parameter 552 <b>Regulation mode</b> is set.	
		100H-256	<b>Cause:</b> An error occurred during setup; the information received from the encoder is not reliable. If the encoder is used for feedback the <b>Speed fbk loss</b> alarm is also generated. <b>Solution:</b> Take the recommended action for the <b>Speed fbk loss</b> alarm.
		200H-512	<b>Cause:</b> The firmware on the optional encoder card is incompatible with that on the regulation card. The information received from the encoder is not reliable <b>Solution:</b> Contact WEG in order to update the firmware on the optional encoder card.
23	Not used		
24	Fw update failed	<b>Condition:</b> When updating the firmware, check whether the file is in the wrong format or corrupt.	
		<b>Solution:</b> try again with a correct file.	
25	USB Error	<b>Condition:</b> A parameter (*) requiring insertion of a USB flash drive has been run, but the drive has not been inserted. (*): PAR 392 <b>Select motor</b> , PAR 596 <b>Save to USB</b> , PAR 598 <b>Load from USB</b> , PAR 1560 <b>WebApp Update</b> , PAR 3434 <b>Save rope to USB</b> , PAR 3436 <b>Load rope from USB</b> .	
		<b>Solution:</b> Insert a USB flash drive containing any files required by the parameter for its execution.	

## A.1 - Optional cards


### A.1.1 - Installation

Only one option card can be installed, either an **EXP-IO1-ADL500** or an **EXP-DCP-ADL500**.



**Caution**


Use only the screws supplied with the option card.

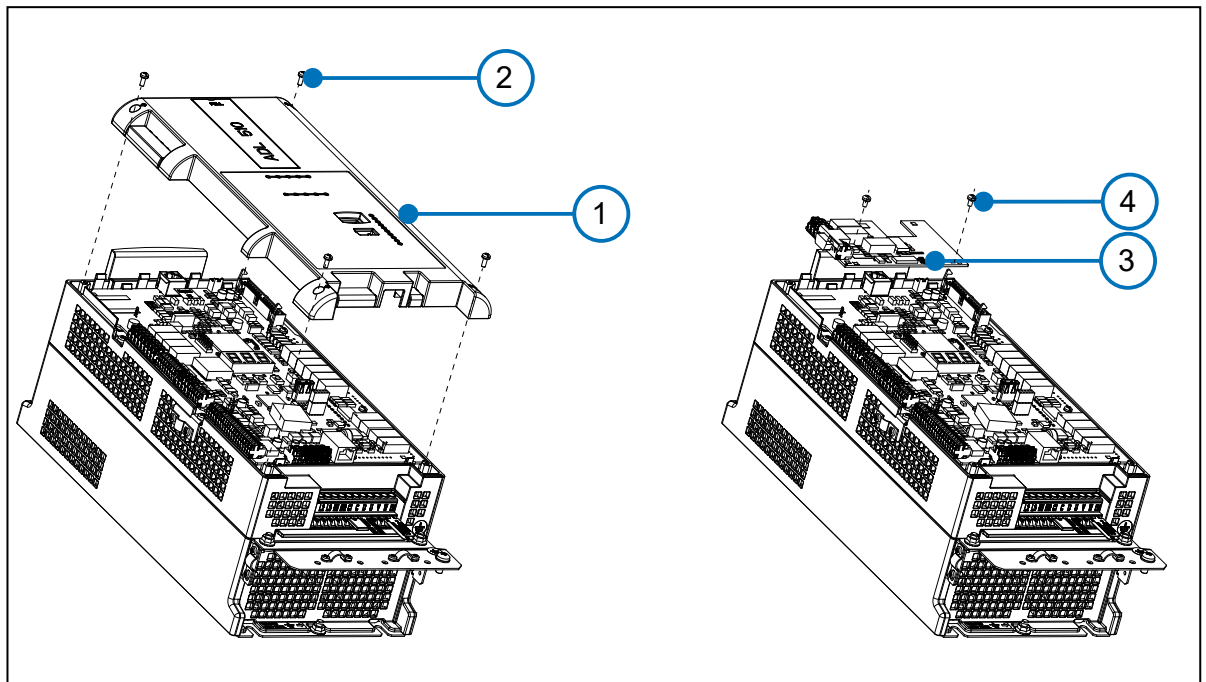

1. Use a Phillips screwdriver (Ph2) to loosen the 4 M3 screws (2) and then remove the top cover (1);
2. Secure the optional board (3) by inserting the option board's J1 female connector onto the control board's P13 male connector;
3. Tighten down the 2 M3 (4) screws supplied with the option board (3);
4. Replace the upper cover (1) and tighten down the 4 M3 screws (2).

## A.1.2 - Optional card EXP-IO1-ADL500

Optional expansion card (code S5DL408, for ADL550 only), adds 4 digital inputs (DI) and 2 relays outputs (RO) to the basic configuration.

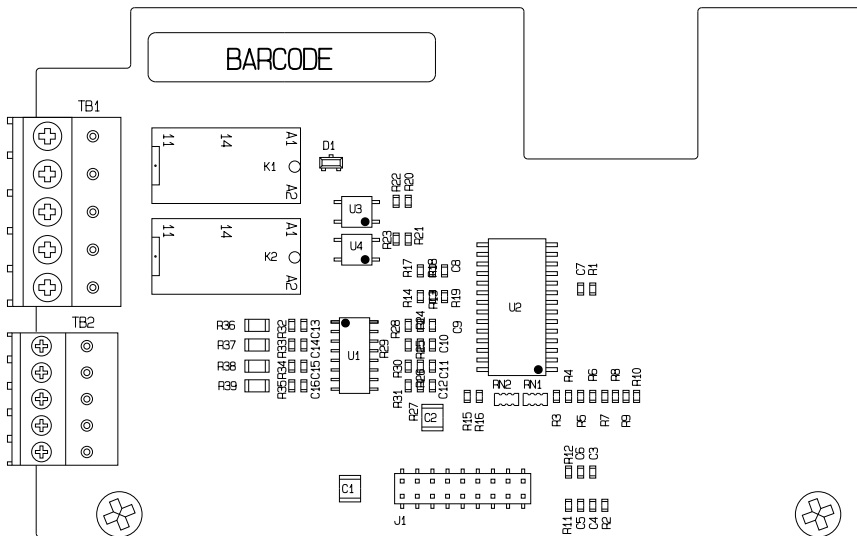

### TB1 terminal – Digital Relays Output


Pin	Signal	Description	Command Associated parameter
1	RO_6O	Output Relay 6 (N.O. contact, 250V <sub>AC</sub> /30V <sub>DC</sub> , 2A)	1422, Dig output 2X src
2	RO_6C	Common Relay 6	
3	RO_5O	Output Relay 5 (N.O. contact, 250V <sub>AC</sub> /30V <sub>DC</sub> , 2A)	1420, Dig output 1X src
4	RO_5C	Common Relay 5	
5	-	Not connected	

### TB2 terminal – Digital inputs

Pin	Signal	Description	Command Associated parameter
1	DI_4X	Digital input 4X	-
2	DI_3X	Digital input 3X	-
3	DI_2X	Digital input 2X	-
4	DI_1X	Digital input 1X	-
5	DI_CM	Digital input common reference	-

### A.1.3 - Optional card EXP-DCP-ADL500


Optional expansion card (cod. S5DL434, for ADL500 only) for remote control through the DCP3 protocol for use in EFC (Elevator Floor Control) mode or through the DCP4 protocol for use in EPC (Elevator Positioning Control) mode (in preparation).

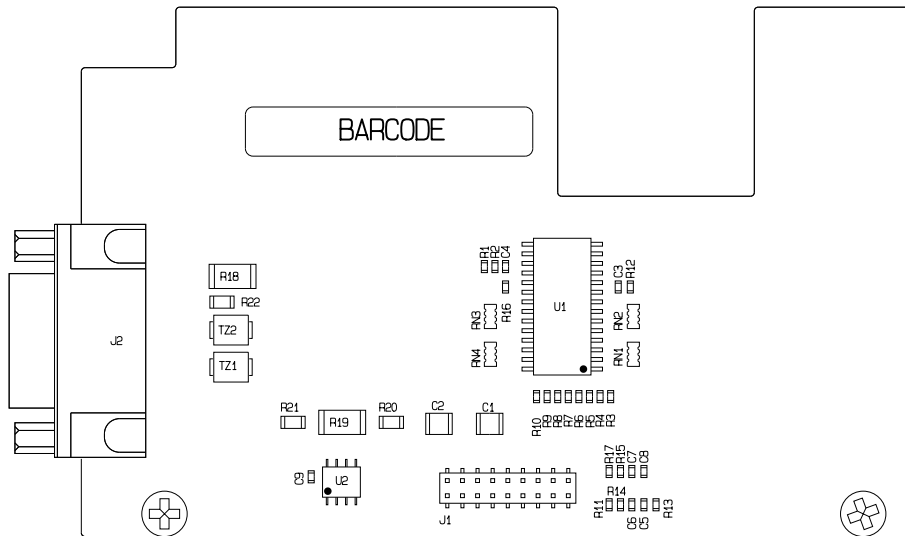

#### J2 DSUB 9-pin female cup connector

Pin	Signal
1	n.c.
2	n.c.
3	n.c.
4	n.c.
5	n.c.
6	DATA - (B)
7	n.c.
8	DATA + (A)
9	REF (GROUND)

For the connection reference should be made to the DCP specifications (see next screen).

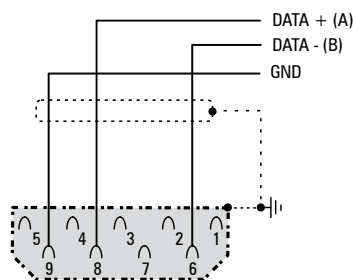

.....  
**The connection have no galvanic isolation!**  
 .....

## A.2 - Input/Output features

External supply	
Voltage	+24Vdc
Tolerance	± 10%
Maximum current	300 mA

- Digital inputs (DI) and enable hardware inputs (EN-HW)

Description	Features
Type	24 V PNP / NPN
Operating voltage	0 V to + 24 V (+ 30 V max)
Load	5 mA @ +24 V - R <sub>L</sub> = 4.7 kΩ
Thresholds	V <sub>ic</sub> < 5 V - V <sub>IH</sub> > 15 V
Isolation	Yes – Functional (> 1 kV)


- Relay outputs (RO)

Description	Features
Type	NO Relay (single contact)
Operating voltage	250 Vac / 30 Vdc / 2 A
Load	50 mA @ +10 V
Isolation	Yes – 4 kV

- Analog input AI1

Description	Features
Type	Voltage differential
Input voltage	± 10V <sub>dc</sub> (± 12,5V <sub>dc</sub> full scale)
Input R	10 kΩ
Resolution	12 Bits (11 + sign)
Precision	1% of full scale
Isolation	NO
Description	Features
Type	Current differential
Input current	0 (4) mA to 20 mA
Input R	500 Ω
Resolution	12 Bits (11 + sign)
Precision	1% of full scale
Isolation	NO
<p>(*) Select input V/I (V=OFF, I=ON)</p>	

- **Analog input AI2 (External PTC or KTY sensor)**

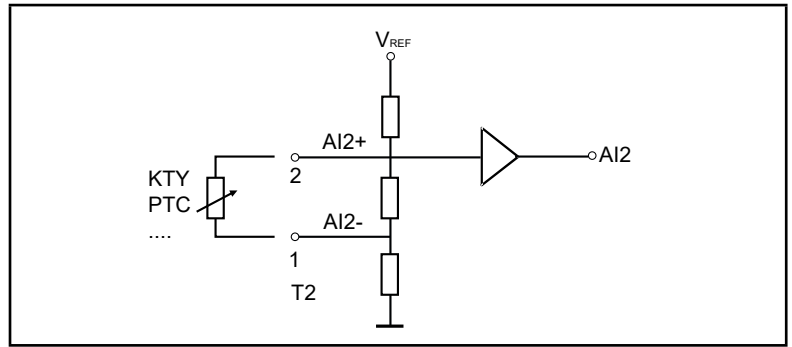

If, as a motor thermal, a PTC is used, the limits that trigger the alarms are as follows:

- for resistors above 5kohm +- 5% the alarm of overtemperature is triggered;
- for resistances below 100ohm +-5% the PTC fault alarm is triggered.

In case the motor had a thermal pad type ON-OFF then this analog input can be used by connecting in series to the thermal pad a 1kohm resistance.

- **Fast Input Inputs (Freeze)**

Description	Features
Type	24Vdc PNP Input
Input voltage	0 to + 24 Vdc (+ 30 Vdc max)
Load	8mA @ 24Vdc, RL = 2.7kΩ
Thresholds	$V_{IL} < 2V$ , $V_{IH} > 19V$
Isolation	Yes, functional (> 1kV)

- **STO Input signal (Safe Torque Off)**

Description	Features
Type	24Vdc
Operating voltage	0 to + 24Vdc (+ 36Vdc max)
Load	20mA @ +24Vdc - RL = 1.32 kΩ
Thresholds	$V_{IC} < 5V_{dc}$ - $V_{IH} > 18V_{dc}$
Isolation	Yes, functional (> 1kV)

- **STO Output signal (Safe Torque Off)**


Description	Features
Type	24Vdc or 110 VAc
Operating voltage	0 to+ 24Vdc (+ 36Vdc max) or 0 to + 110VAc (+ 125VAc max)
Load	200mA @ +24Vdc (250 MAX) or 200 mArms @ 110VAc (250 max)
Thresholds	$V_{IC} < 5V_{dc}$ - $V_{IH} > 18V_{dc}$
Max blocking voltage	400V

### A.2.1 Selection of Voltage/Current at analog input AI1

Analogue input 1 is factory set for differential voltage signals (-10V..+10V).

To change the input type (0.20mA, 0.10V or 4.20 mA) it is necessary to change the (PAR 1602 **Analog inp 1 type**, menu ANALOG INPUTS) parameter setting and the position of P2 Jumper as shown in the figure.

To access the Regulation card, remove the top cover, see section "A.1 - Optional cards" on page 91.

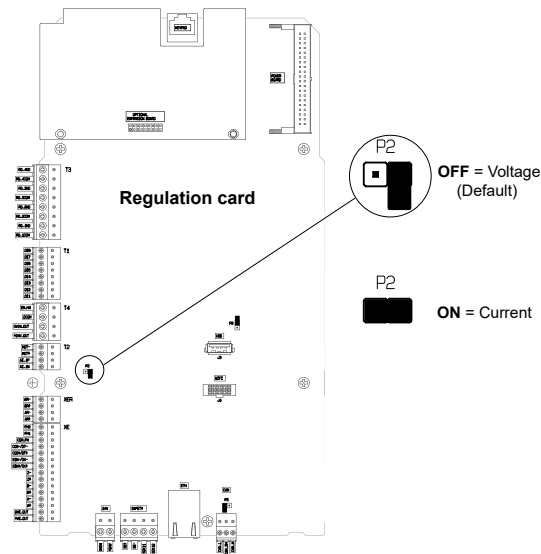

### A.3 Windows PC Network Configuration

PC's Ethernet configuration must be set consistently with ADL500 Ethernet configuration, so that the PC and ADL500 can communicate.

Usually PC's are set in DHCP mode, so they request the network for an IP address. In case no DHCP server is available in the network, in most cases PC's autonomously acquire an IP address belonging to "link local" family: 169.254.x.y. If the PC's Ethernet configuration has to be modified, for example in case of ADL500 static IP configuration, here are the operations to do:

For Windows XP under Control Panel -> Network Connections

For Windows 7 under Control Panel -> Network and Sharing Center -> Change adapter settings

For Windows 10 under Control Panel -> Network & Internet -> Change your network settings -> Change adapter options

Then right click on the network adapter to be configured, select "Properties", double click on "Internet Protocol TCP/IP" (for Windows XP) or "Internet Protocol Version 4 (TCP/IPv4)" (for Windows 7 or Windows 10).

By default, under "General" Tab, the radio button "Obtain an IP address automatically" should be selected. With this selection, the PC requests the IP address from the DHCP network.

If under "Alternate Configuration" the "Automatic private IP address" is selected, PC will acquire a link local address (169.254.x.y), if no DHCP server is available in the network.

Changing the selection of the radio button to "Use the following IP address" the PC will be configured with a static network configuration. Value of fields:

- IP address
- Subnet Mask
- Default Gateway

must be set to be compatible with ADL500 network configuration and thus enable communication.



## A.4 - Brake monitoring system

### A.4.1 Introduction

The brake monitoring function in the ADL500 series of products enables implementation of the automatic brake monitoring function as required by EN 81-20:2020 section 5.6.7.3.

Two functional elements are required to implement the brake monitoring function:

1. Management of the **Brake fault** alarm;
2. Resetting of the **Brake fault** alarm.

The basic wiring diagram for implementing this function is shown in Figure 5.1.

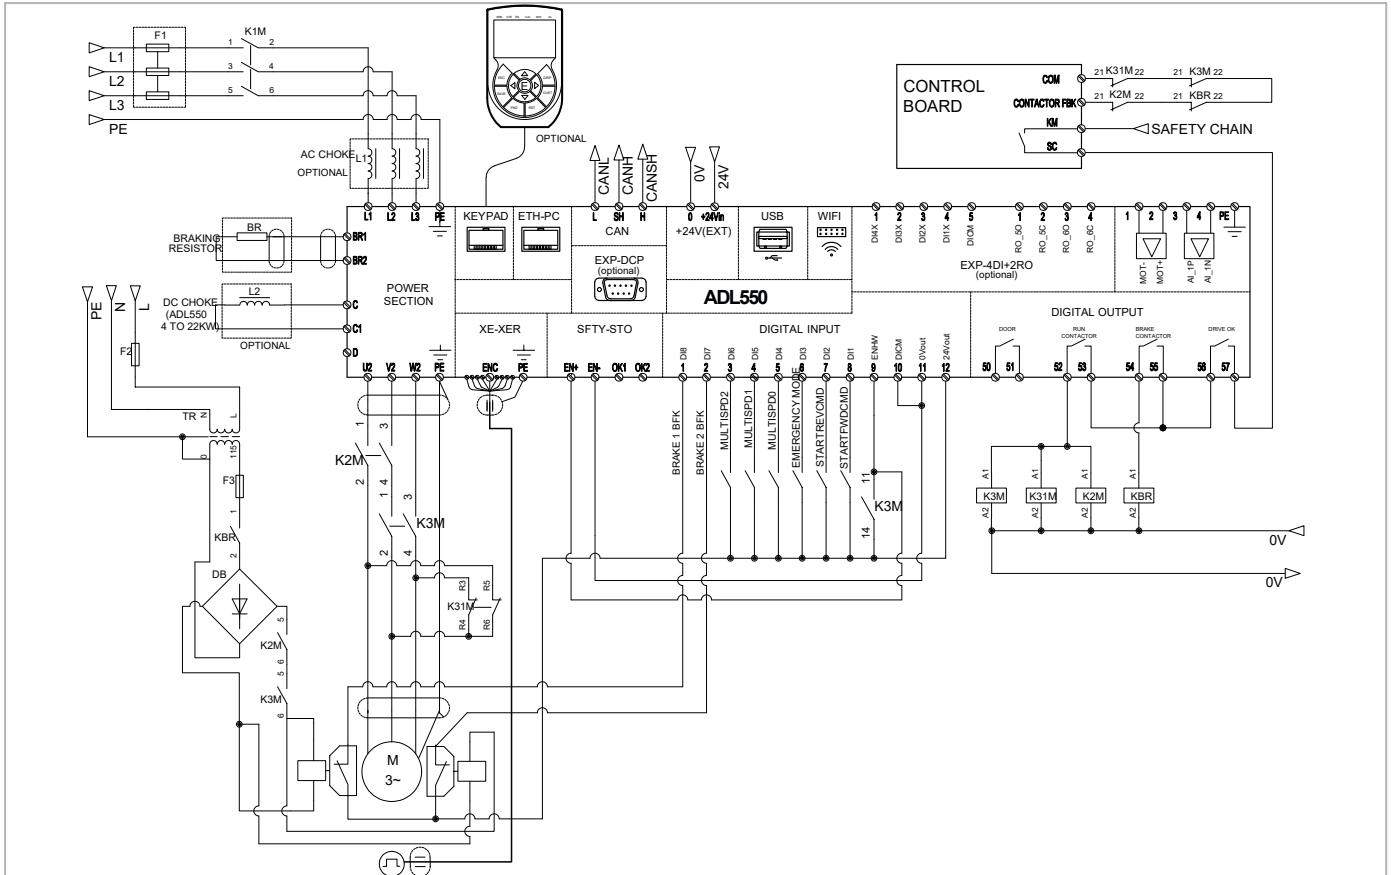


Figure 5.1: ADL500 connection diagram for brake monitoring

This shows that :

- A) The ADL500 controls brake activation/deactivation via relay BR
- B) Both brake feedback signals are sent to the ADL500 inputs
- C) The ADL500 signals any malfunctions (including brake malfunctions) to the system control unit via internal relay DRIVE OK.
- D) The system control unit blocks the system brake in safety by deactivating contactors K2M and K3M.

According to an alternative arrangement, the ADL500 closes/opens contactors K2M and K3M but the power supply to the coils and to the ADL500 commands comes from the external, i.e. a control unit.

The purpose of the brake fault alarm is to check whether the states of the two feedback signals from the brake are consistent and, in case of doubt, to include a function whereby the ADL500 drive stops the system. The procedure for including the alarm is described below.

### A.4.2 Configuration of the brake fault alarm

#### • Activation of the brake fault alarm function.

The installer must have previously located the necessary digital inputs of the ADL500 drive and connected the corresponding wires to the feedback signals on these inputs. Note that depending on the type of wiring arrangement, the brake feedback signals are normally asserted (brake closed – digital input to 1) or normally not asserted (brake closed – digital input to 0).

The brake fault alarm function envisages signals that are normally asserted. If the wiring is functionally inverted, simply negate the corresponding digital inputs in the ADL500 configuration.

To configure the brake fault alarm function, proceed as follows:

1. In the SAFETY menu , change the setting of parameter 11252 **Brake Fbk A3 Sel** (default **Null**) and select the digital input corresponding to the second brake feedback signal If **Brake Fbk A3 Sel** is set to a value other than **Null**, the brake fault alarm function is automatically enabled.
2. Next select the digital input corresponding to the first brake feedback signal in parameter 11236 **Brake fbk src** (menu LIFT IN).

The brake fault function is enabled. The installer in charge of the system must test the function each time it is activated or modified, following the brake fault test procedure.

- **Resetting the brake fault alarm**

1. Open the LIFT ALARM menu and check the setting of parameter 11204 **Brake activity** = Disable.
2. In the SAFETY menu, select parameter 11268 **Reset Brake Alarm** (default 0).
3. The system asks for a code, enter release code 5313.
4. Check again to see whether the **Brake Alarm** has been reset.

- **Disabling the brake fault alarm**

1. In the SAFETY menu, change the setting of parameter 11252 **Brake Fbk A3 Sel** to **Null** The brake fault alarm function is disabled.
2. If the new configuration does not manage any brake feedback signals, change the setting of parameter 11236 **Brake Fbk Sel** (menu LIFT IN) to [3708] **Brake cont mon**.

- **Brake fault alarm test procedure**

Proceed as follows:

1. Disconnect the wire connecting the first brake feedback signal to the relative digital input.
2. Try re-starting from the floor with the feedback signal disconnected. If the lift car does not move (correct behaviour), proceed to step 3. If the lift car moves, the alarm is not working properly. Check the various parts of the system.
3. If the brake fault alarm is connected, reset it and proceed to step 4. If the alarm is not connection, re-check the various parts of the system.
4. Repeat steps 1, 2 and 3, disconnecting the second brake feedback signal from the corresponding input.

If the procedure is successful, the brake fault alarm will function properly.

Depending on the setting of the parameter 11204 brake activity an alarm is generated that can be a single warning or immediately blocking or can lock the drive at the end of the ride. If, depending on the activity set, the alarm does not activate as intended, then the various parts of the brake feedback control circuit must be checked.

With parameter 11204 set in Ingora the alarm is ignored and the drive normally starts at the arrival of the commands. With parameter 11204 set in warning a warning appears on the keypad as soon as the brake feedback circuit is not consistent with the brake status.

With parameter 11204 set in deactivate drive the drive is immediately disabled as soon as the brake feedback circuit is not consistent with the brake status.

With parameter 11204 set in lift fast stop the drive is disabled as soon as the brake feedback circuit is not consistent with the brake status.

With parameter 11204 set in lift stop the drive is disabled at the end of the ride.

#### **A.4.3 Maintenance of the failure function Brake**

The installer will repeat the brake failure alarm test procedure following periodic plant inspections or brake indications. The installer will check the alarm log for any anomalies at any time.

The brake air alarm test procedure can also be carried out by closing the contact during the ride while the brake is still open. Depending on how the 11204 parameter is set, which defines how the lift should behave in the event of an alarm, the engine stops immediately or when the ride is over.

#### A.4.4 Troubleshooting

Fault	Possible cause	Solution
<b>Motor does not run, the brake fault alarm is triggered continuously</b>	Feedback signals disconnected/incorrectly connected	Re-check brake feedback signal wiring and electric levels
	Brake feedback not configured correctly	Check PAR 11236 <b>Brake fbk src</b> , PAR 11252 <b>Brake fbk A3 sel</b> configuration. Check correct signal operation (electric levels) and invert digital inputs if necessary
	Monitoring time too short in relation to system response times	Set a longer PAR 11206 <b>Brake Hold Off time</b>
<b>The motor runs even with the feedback signals disconnected</b>	The brake fault alarm is not connected.	Check the setting of PAR 11252 <b>Brake Fbk Sel A3</b> .
	Incorrect PAR 11252 <b>Brake fbk A3 sel</b> / PAR 11236 <b>Brake fbk src</b> setting.	PAR 11252 <b>Brake fbk A3 sel</b> and PAR 11236 <b>Brake fbk src</b> must not be set to <b>Null</b> or <b>Brake Cont Mon</b> .

## HW + Quick Start Manual

Serie: ADL500

Revisione: 1.0

Data: 09/02/2024

Codice: 1S95QSEN

WEG Automation Europe S.r.l.

Via Giosuè Carducci, 24

21040 Gerenzano (VA) · Italy

[info.motion@weg.net](mailto:info.motion@weg.net)

Technical Assistance: [technohelp@weg.net](mailto:technohelp@weg.net)

Customer Service: [salesmotion@weg.net](mailto:salesmotion@weg.net)