



## Part-turn actuators

SQ 05.2 – SQ 14.2

SQR 05.2 – SQR 14.2

Control unit: electronic (MWG)

with actuator controls

AC 01.2 Non-Intrusive

### Control

→ Parallel

Profibus DP

Profinet

Modbus RTU

Modbus TCP/IP

Foundation Fieldbus

HART



**Read operation instructions first.**

- Observe safety instructions.
- These operation instructions are part of the product.
- Retain operation instructions during product life.
- Pass on instructions to any subsequent user or owner of the product.

**Purpose of the document:**

This document contains information for installation, commissioning, operation and maintenance staff. It is intended to support device installation and commissioning.

**Reference documents:**

- Manual (Operation and setting ) of actuator controls AC 01.2 Parallel

Reference documents can be downloaded from the Internet ([www.auma.com](http://www.auma.com)) or ordered directly from AUMA (refer to <Addresses>).

<b>Table of contents</b>	<b>Page</b>
<b>1. Safety instructions.....</b>	<b>5</b>
1.1. Basic information on safety	5
1.2. Range of application	5
1.3. Applications in Ex zone 22 (option)	6
1.4. Warnings and notes	6
1.5. References and symbols	7
<b>2. Identification.....</b>	<b>8</b>
2.1. Name plate	8
2.2. Short description	11
<b>3. Transport, storage and packaging.....</b>	<b>13</b>
3.1. Transport	13
3.2. Storage	14
3.3. Packaging	15
<b>4. Assembly.....</b>	<b>16</b>
4.1. Mounting position	16
4.2. Handwheel fitting	16
4.3. Part-turn actuator to valve: mount	16
4.3.1. Output drive for coupling	17
4.3.1.1. Part-turn actuator (with coupling): mount to valve	17
4.4. Mounting positions of local controls	20
4.4.1. Mounting positions: modify	20
<b>5. Electrical connection.....</b>	<b>21</b>
5.1. Basic information	21
5.2. S/SH electrical connection (AUMA plug/socket connector)	23
5.2.1. Terminal compartment : open	24
5.2.2. Cable connection	25
5.2.3. Terminal compartment : close	26
5.3. Accessories for electrical connection	27
5.3.1. Actuator controls on wall bracket	27
5.3.2. Parking frame	28
5.3.3. DS intermediate frame for double sealing	28

5.3.4.	External earth connection	29
<b>6.</b>	<b>Operation</b> .....	<b>30</b>
6.1.	Manual operation	30
6.1.1.	Manual operation: engage	30
6.1.2.	Manual operation: disengage	30
6.2.	Motor operation	30
6.2.1.	Local actuator operation	30
6.2.2.	Actuator operation from remote	31
6.3.	Menu navigation via push buttons (for settings and indications)	32
6.3.1.	Menu layout and navigation	33
6.4.	User level, password	34
6.4.1.	Password entry	34
6.4.2.	Password change	35
6.5.	Language in the display	35
6.5.1.	Language change	35
<b>7.</b>	<b>Indications</b> .....	<b>37</b>
7.1.	Indications during commissioning	37
7.2.	Indications in the display	37
7.2.1.	Feedback indications from actuator and valve	38
7.2.2.	Status indications according to AUMA classification	40
7.2.3.	Status indications according to NAMUR recommendation	41
7.3.	Indication lights of local controls	43
7.4.	Mechanical position indication (self-adjusting)	43
7.5.	Mechanical position indication via indicator mark	44
<b>8.</b>	<b>Signals (output signals)</b> .....	<b>45</b>
8.1.	Status signals via output contacts (digital outputs)	45
8.1.1.	Assignment of outputs	45
8.1.2.	Coding the outputs	45
8.2.	Analogue signals (analogue outputs)	45
<b>9.</b>	<b>Commissioning (basic settings)</b> .....	<b>46</b>
9.1.	End stops in part-turn actuator	46
9.1.1.	End stop CLOSED: set	47
9.1.2.	End stop OPEN: set	47
9.2.	Type of seating: set	48
9.3.	Torque switching: set	49
9.4.	Limit switching: set	51
9.5.	Test run	52
9.5.1.	Direction of rotation at mechanical position indicator: check	53
9.5.2.	Limit switching: check	53
<b>10.</b>	<b>Commissioning (settings in the actuator)</b> .....	<b>55</b>
10.1.	Switch compartment: open/close	56
10.2.	Mechanical position indicator (self-adjusting)	56
10.2.1.	Mechanical position indicator: set	56
10.2.2.	Gear stage of the reduction gearing: test/set	57
10.3.	Mechanical position indication via indicator mark (not self-adjusting)	58
10.3.1.	Mechanical position indicator: set	58
10.3.2.	Gear stage of the reduction gearing: test/set	59

<b>11.</b>	<b>Corrective action.....</b>	<b>61</b>
11.1.	Faults during commissioning	61
11.2.	Fault indications and warning indications	61
11.3.	Fuses	65
11.3.1.	Fuses within the actuator controls	65
11.3.2.	Fuse replacement	65
11.3.2.1.	Replace fuses F1/F2.	65
11.3.2.2.	Test/replace fuses F3/F4	66
11.3.3.	Motor protection (thermal monitoring)	66
<b>12.</b>	<b>Servicing and maintenance.....</b>	<b>68</b>
12.1.	Preventive measures for servicing and safe operation	68
12.2.	Maintenance	68
12.3.	Disposal and recycling	68
<b>13.</b>	<b>Technical data.....</b>	<b>70</b>
13.1.	Technical data Part-turn actuator	70
13.2.	Technical data Actuator controls	72
<b>14.</b>	<b>Spare parts.....</b>	<b>77</b>
14.1.	Part-turn actuators SQ 05.2 – SQ 14.2/SQR 05.2 – SQR 14.2	77
14.2.	AC 01.2 actuator controls with S electrical connection	79
<b>15.</b>	<b>Certificates.....</b>	<b>81</b>
15.1.	Declaration of Incorporation and EU Declaration of Conformity	81
	<b>Index.....</b>	<b>82</b>
	<b>Addresses.....</b>	<b>85</b>

## 1. Safety instructions

### 1.1. Basic information on safety

**Standards/directives** Our products are designed and manufactured in compliance with recognised standards and directives. This is certified in a Declaration of Incorporation and an EU Declaration of Conformity.

The end user or the contractor must ensure that all legal requirements, directives, guidelines, national regulations and recommendations with respect to assembly, electrical connection, commissioning and operation are met at the place of installation.

**Safety instructions/warnings** All personnel working with this device must be familiar with the safety and warning instructions in this manual and observe the instructions given. Safety instructions and warning signs on the device must be observed to avoid personal injury or property damage.

**Qualification of staff** Assembly, electrical connection, commissioning, operation, and maintenance must be carried out by suitably qualified personnel authorised by the end user or contractor of the plant only.

Prior to working on this product, the staff must have thoroughly read and understood these instructions and, furthermore, know and observe officially recognised rules regarding occupational health and safety.

**Commissioning** Prior to commissioning, it is important to check that all settings meet the requirements of the application. Incorrect settings might present a danger to the application, e.g. cause damage to the valve or the installation. The manufacturer will not be held liable for any consequential damage. Such risk lies entirely with the user.

**Operation** Prerequisites for safe and smooth operation:

- Correct transport, proper storage, mounting and installation, as well as careful commissioning.
- Only operate the device if it is in perfect condition while observing these instructions.
- Immediately report any faults and damage and allow for corrective measures.
- Observe recognised rules for occupational health and safety.
- Observe national regulations.
- During operation, the housing warms up and surface temperatures > 60 °C may occur. To prevent possible burns, we recommend checking the surface temperature using an appropriate thermometer and wearing protective gloves, if required, prior to working on the device.

**Protective measures** The end user or the contractor are responsible for implementing required protective measures on site, such as enclosures, barriers, or personal protective equipment for the staff.

**Maintenance** To ensure safe device operation, the maintenance instructions included in this manual must be observed.

Any device modification requires prior written consent of the manufacturer.

### 1.2. Range of application

AUMA part-turn actuators are designed for the operation of industrial valves, e.g. butterfly valves and ball valves.

Other applications require explicit (written) confirmation by the manufacturer.

The following applications are not permitted, e.g.:

- Industrial trucks according to EN ISO 3691
- Lifting appliances according to EN 14502
- Passenger lifts according to DIN 15306 and 15309
- Service lifts according to EN 81-1/A1

- Escalators
- Continuous duty
- Buried service
- Continuous submersion (observe enclosure protection)
- Potentially explosive areas, with the exception of zone 22
- Radiation exposed areas in nuclear power plants

No liability can be assumed for inappropriate or unintended use.

Observance of these operation instructions is considered as part of the device's designated use.

**Information** These operation instructions are only valid for the "clockwise closing" standard version, i.e. driven shaft turns clockwise to close the valve.

**1.3. Applications in Ex zone 22 (option)**

Actuators of the indicated series basically meet the requirements for applications in dust hazardous locations of ZONE 22 in compliance with the ATEX directive 2014/34/EU.

To comply with all requirements of the ATEX directive, observe the following points:

- Actuators are marked with the explosion protection designation II3D... for use in ZONE 22.
- Maximum surface temperature of actuators
  - T150 °C for ambient temperatures up to +60 °C or
  - T190 °C for ambient temperatures up to +80 °C.

Increased dust deposit on the equipment was not considered for the determination of the maximum surface temperature.

- The following conditions must be fulfilled to respect the maximum permissible surface temperatures at the actuator:
  - Respecting types of duty and technical manufacturer data
  - Correct connection of thermal motor protection (thermoswitches or PTC thermistor)

Table 1:

Ambient temperature	Tripping temperature Thermal motor protection	Maximum surface temperature
up to +60 °C	140 °C	T150 °C
up to +80 °C	155 °C	T190 °C

- The connector may only be connected or disconnected when not live.
- The cable glands and cable entries used have to meet the requirements of category II3D and must at least comply with enclosure protection IP67.
- The actuators must be connected by means of an external earth connection (accessory part) to the equipotential earth bonding or integrated into an earthed piping system.
- As a general rule, the requirements of IEC 60079 Parts 14 and 17 must be respected in dust hazardous locations. During commissioning, service, and maintenance, special care as well as qualified and trained personnel are required for safe actuator operation.

**1.4. Warnings and notes**

The following warnings draw special attention to safety-relevant procedures in these operation instructions, each marked by the appropriate signal word (DANGER, WARNING, CAUTION, NOTICE).



**Indicates an imminently hazardous situation with a high level of risk. Failure to observe this warning could result in death or serious injury.**



Indicates a potentially hazardous situation with a medium level of risk. Failure to observe this warning could result in death or serious injury.



Indicates a potentially hazardous situation with a low level of risk. Failure to observe this warning may result in minor or moderate injury. May also be used with property damage.



Potentially hazardous situation. Failure to observe this warning may result in property damage. Is not used for personal injury.

### Arrangement and typographic structure of the warnings



#### Type of hazard and respective source!

*Potential consequence(s) in case of non-observance (option)*

- Measures to avoid the danger
- Further measure(s)

Safety alert symbol  warns of a potential personal injury hazard.  
The signal word (here: DANGER) indicates the level of hazard.

## 1.5. References and symbols

The following references and symbols are used in these instructions:

**Information** The term **Information** preceding the text indicates important notes and information.

 Symbol for CLOSED (valve closed)

 Symbol for OPEN (valve open)

 Important information before the next step. This symbol indicates what is required for the next step or what has to be prepared or observed.

#### **Via the menu to parameter**

Describes the path within the menu to the parameter. By using the push buttons of the local controls you may quickly find the desired parameter in the display.

#### **Reference to other sections**

Terms in brackets shown above refer to other sections of the document which provide further information on this topic. These terms are either listed in the index, a heading or in the table of contents and may easily be located.

## 2. Identification

### 2.1. Name plate

Each device component (actuator, actuator controls, motor) is equipped with a name plate.

Figure 1: Arrangement of name plates



- [1] Actuator name plate
- [2] Actuator controls name plate
- [3] Motor name plate
- [4] Additional plate, e.g. KKS plate (Power Plant Classification System)

#### Actuator name plate

Figure 2: Actuator name plate (example)




**auma** (= manufacturer logo)

- [1] Name of manufacturer
- [2] Address of manufacturer
- [3] **Type designation**
- [4] **Order number**
- [5] **Actuator serial number**
- [6] Operating time in [s] for a part-turn movement of 90°
- [7] Torque range in direction CLOSE
- [8] Torque range in direction OPEN
- [9] Type of lubricant
- [10] Permissible ambient temperature
- [11] Can be assigned as an option upon customer request
- [12] Enclosure protection
- [13] **Data Matrix code**

**Actuator controls name plate**

Figure 3: Name plate for actuator controls (example)

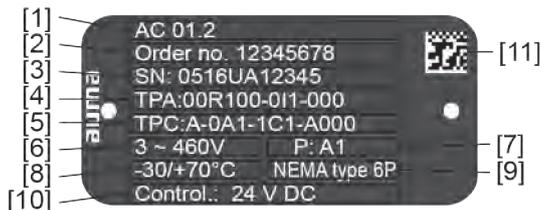

**auma** (= manufacturer logo)

- [1] **Type designation**
- [2] **Order number**
- [3] **Serial number**
- [4] **Actuator terminal plan**
- [5] Actuator controls terminal plan
- [6] Mains voltage
- [7] **AUMA power class for switchgear**
- [8] Permissible ambient temperature
- [9] Enclosure protection
- [10] **Control**
- [11] Data Matrix code

**Motor name plate**

Figure 4: Motor name plate (example)



**auma** (= manufacturer logo);

- [1] Motor type
- [2] Motor article number
- [3] Serial number
- [4] Service factor
- [5] Phase, mains voltage
- [6] Horse power
- [7] Full load current (corresponds to approx. 35% of maximum torque)
- [8] Type of duty
- [9] Speed
- [10] Motor protection (temperature protection)
- [11] Insulation class
- [12] Mains frequency
- [13] Locked rotor current (Starting current)
- [14] Data Matrix code

**Descriptions referring to name plate indications**

**Type designation** Figure 5: Type designation (example)



1. Type and size of actuator
2. Flange size

**Type and size**

These instructions apply to the following devices types and sizes:

- Type SQ = Part-turn actuators for open-close duty  
Sizes and generation: 05.2, 07.2, 10.2, 12.2, 14.2
- Type SQR = Part-turn actuators for modulating duty  
Sizes and generation: 05.2, 07.2, 10.2, 12.2, 14.2
- Type AC = AUMATIC actuator controls  
Size and generation: 01.2

**Order number** The product can be identified using this number and the technical data as well as order-related data pertaining to the device can be requested.

Please always state this number for any product inquiries.

On the Internet at <http://www.auma.com> > Service & Support > myAUMA, we offer a service allowing authorised users to download order-related documents such as wiring diagrams and technical data (both in German and English), inspection certificate and the operation instructions when entering the order number.

**Actuator serial number**

Table 2:

Description of the serial number (with example 0516US12345)		
05	16	US12345
05	Positions 1+2: Assembly in week = week 05	
	16	Positions 3+4: Year of manufacture = 2016
	US12345	Internal number for unambiguous product identification

**Actuator terminal plan** Position 9 after **TPA**: Position transmitter version

**I, Q** = MWG (Magnetic limit and torque transmitter)

**AUMA power class for switchgear**

The switchgear used in the actuator controls (reversing contactors/thyristors) are classified according to AUMA power classes (e.g. A1, B1, ....). The power class defines the max. permissible rated power (of the motor) the switchgear has been designed for. The rated power (nominal power) of the actuator motor is indicated in kW on the motor name plate. For the assignment of the AUMA power classes to the nominal power of the motor types, refer to the separate electrical data sheets.

For switchgear without assignment to any power classes, the actuator controls name plate does not indicate the power class but the max. rated power in kW.

**Control**

Table 3:

Control examples (indications on actuator controls name plate)	
Input signal	Description
24 V DC	Control voltage 24 V DC for OPEN - CLOSE control via digital inputs (OPEN, STOP, CLOSE)
48 V DC	Control voltage 48 V DC OPEN - CLOSE control via digital inputs (OPEN, STOP, CLOSE)
60 V DC	Control voltage 60 V DC OPEN - CLOSE control via digital inputs (OPEN, STOP, CLOSE)
115 V AC	Control voltage 115 V AC for OPEN - CLOSE control via digital inputs (OPEN, STOP, CLOSE)
0/4 – 20 mA	Input current for setpoint control via analog input

**Data Matrix code** When registered as authorised user, you may use our **AUMA Assistant App** to scan the Data Matrix code and directly access the order-related product documents without having to enter order number or serial number.

Figure 6: Link to AUMA Assistant App:



For further Service & Support, software/apps/... refer to [www.auma.com](http://www.auma.com).

**2.2. Short description**

**Part-turn actuator** Definition in compliance with EN 15714-2/EN ISO 5211:  
 A part-turn actuator is an actuator which transmits a torque to the valve for less than one full revolution. It need not be capable of withstanding thrust.  
 AUMA part-turn actuators SQ 05.2 – SQ 14.2/SQR 05.2 – SQR 14.2 are driven by an electric motor. For manual operation, a handwheel is provided. Switching off in end positions may be either by limit or torque seating. Actuator controls are required to operate or process the actuator signals.

**Actuator controls** AC 01.2 actuator controls are used to operate AUMA actuators and are supplied ready for use. The actuator controls may be mounted directly to the actuator or separately on a wall bracket.

The functions of AC 01.2 actuator controls include standard valve control in OPEN-CLOSE duty, positioning, process control, logging of operating data right through to diagnostic functions.

**Local controls/ AUMA software** Operation, setting, and display can be performed directly at actuator controls or alternatively from Remote via binary input signals.

The following options are available at the actuator controls in local operation:

- The actuator can be operated via the push buttons of the local controls or settings can be made in the actuator controls menu. The display shows information on the actuator as well as menu settings (contents of these instructions).
- Using the AUMA CDT software for Windows-based notebooks or the AUMA Assistant App for Android-based devices, data can be uploaded and read whereas settings can be modified and stored. The connection between computer and actuator controls is wireless via Bluetooth interface (not included in these instructions). AUMA CDT software can be downloaded free of charge from our website [www.auma.com](http://www.auma.com).

**Intrusive - Non-Intrusive**

- Intrusive version (control unit: electromechanical):  
 Limit and torque setting is performed via switches in the actuator.

- Non-Intrusive version (control unit: electronic):  
Limit and torque setting is performed via the controls, without removal of actuator or actuator controls covers. For this purpose, the actuator is equipped with an MWG (magnetic limit and torque transmitter), also capable to supply analogue torque feedback signals/torque indication and analog position feedback signals/position indication at the actuator controls output.

### 3. Transport, storage and packaging

#### 3.1. Transport

For transport to place of installation, use sturdy packaging.



#### Hovering load!

*Risk of death or serious injury.*

- Do NOT stand below hovering load.
- Attach ropes or hooks for the purpose of lifting by hoist only to housing and NOT to handwheel.
- Actuators mounted on valves: Attach ropes or hooks for the purpose of lifting by hoist to valve and NOT to actuator.
- Actuators mounted to gearboxes: Attach ropes or hooks for the purpose of lifting by hoist only to the gearbox using eyebolts and NOT to the actuator.
- Actuators mounted to controls: Attach ropes or hooks for the purpose of lifting by hoist only to the actuator and NOT to the controls.
- Respect total weight of combination (actuator, actuator controls, gearbox, valve)
- Secure load against falling down, sliding or tilting.
- Perform lift trial at low height to eliminate any potential danger e.g. by tilting.

Figure 7: Example: Lifting the actuator



Table 4:

Weight for AC 01.2 actuator controls	
with electrical connection type:	Weight approx. lbs [kg]
AUMA plug/socket connector with screw-type connection	15 [7]

Table 5:

<b>Dimensions Part-turn actuators SQ 05.2 – SQ 14.2 / SQR 05.2 – SQR 14.2 with 3-phase AC motors</b>		
Type designation	Weight <sup>1)</sup>	Weight with base and lever <sup>2)</sup>
Actuator	approx. lbs [kg]	approx. lbs [kg]
SQ 05.2/ SQR 05.2	46 [21]	60 [27]
SQ 07.2/ SQR 07.2	46 [21]	60 [27]
SQ 10.2/ SQR 10.2	57 [26]	68 [31]
SQ 12.2/ SQR 12.2	77 [35]	95 [43]
SQ 14.2/ SQR 14.2	97 [44]	121 [55]

- 1) Indicated weight includes AUMA NORM part-turn actuator with 3-phase AC motor, electrical connection in standard version, unbored coupling and handwheel. For other output drive types, heed additional weights.
- 2) Indicated weight includes AUMA NORM part-turn actuator with 3-phase AC motor, electrical connection in standard version, and handwheel, including base and lever. For other output drive types, heed additional weights.

Table 6:

<b>Dimensions Part-turn actuators SQ 05.2 – SQ 14.2 / SQR 05.2 – SQR 14.2 with 1-phase AC motors</b>		
Type designation	Weight <sup>1)</sup>	Weight with base and lever <sup>2)</sup>
Actuator	approx. lbs [kg]	approx. lbs [kg]
SQ 05.2/ SQR 05.2	50 [23]	63 [29]
SQ 07.2/ SQR 07.2	50 [23]	63 [29]
SQ 10.2/ SQR 10.2	61 [28]	70 [32]
SQ 12.2/ SQR 12.2	81 [37]	99 [45]
SQ 14.2/ SQR 14.2	101 [46]	125 [57]

- 1) Indicated weight includes AUMA NORM part-turn actuator with 1-phase AC motor, electrical connection in standard version, unbored coupling and handwheel. For other output drive types, heed additional weights.
- 2) Indicated weight includes AUMA NORM part-turn actuator with 1-phase AC motor, electrical connection in standard version, and handwheel, including base and lever. For other output drive types, heed additional weights.

**3.2. Storage**

**NOTICE**

**Danger of corrosion due to inappropriate storage!**

- Store in a well-ventilated, dry room.
- Protect against floor dampness by storage on a shelf or on a wooden pallet.
- Cover to protect against dust and dirt.
- Apply suitable corrosion protection agent to uncoated surfaces.

**NOTICE**

**Damage on display caused by temperatures below permissible level!**

- AC actuator controls **MUST NOT** be stored below –30 °C.

**Long-term storage**

For long-term storage (more than 6 months), observe the following points:

1. Prior to storage:  
Protect uncoated surfaces, in particular the output drive parts and mounting surface, with long-term corrosion protection agent.
2. At an interval of approx. 6 months:  
Check for corrosion. If first signs of corrosion show, apply new corrosion protection.

### **3.3. Packaging**

Our products are protected by special packaging for transport when leaving the factory. The packaging consists of environmentally friendly materials which can easily be separated and recycled. We use the following packaging materials: wood, cardboard, paper, and PE foil. For the disposal of the packaging material, we recommend recycling and collection centers.


**4. Assembly**

**4.1. Mounting position**

The product described in this document can be operated in any mounting position.  
Restriction: When using oil instead of grease within the actuator gear housing, the hollow shaft mounting position must be perpendicular, with the flange pointing downward. The type of lubricant used is indicated on the actuator name plate (short designation **F**...= grease; **O**...= oil).

**4.2. Handwheel fitting**

Figure 8: Handwheel

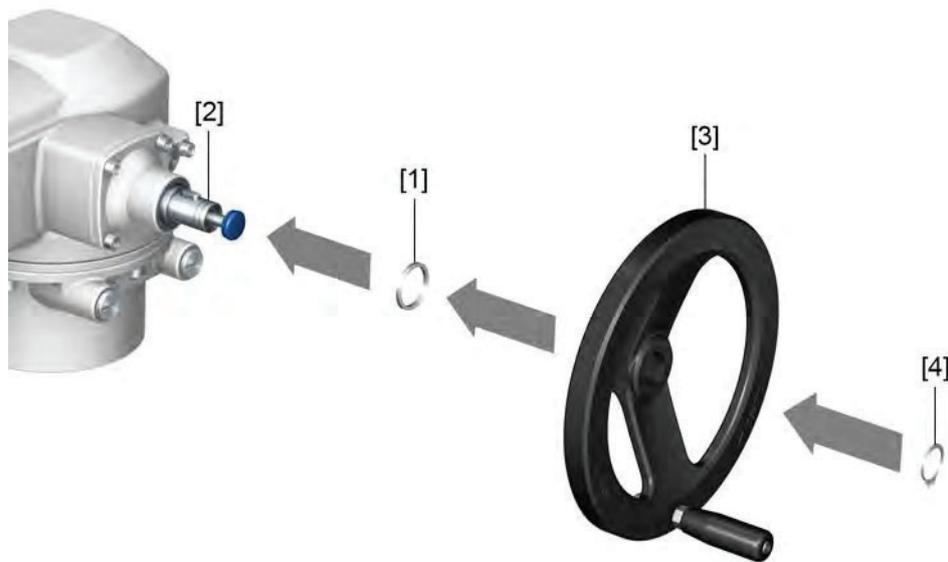

- [1] Spacer
- [2] Input shaft
- [3] Handwheel
- [4] Retaining ring

1. If required, fit spacer [1] onto input shaft [2].
2. Slip handwheel [3] onto input shaft.
3. Secure handwheel [3] using the retaining ring [4] supplied.

**Information** The retaining ring [4] (together with these operation instructions) is stored in a weatherproof bag, which is attached to the device prior to delivery.

**4.3. Part-turn actuator to valve: mount**

**NOTICE**


**Danger of corrosion due to damage to paint finish and condensation!**

- ☒ Touch up damage to paint finish after work on the device.
- ☒ After mounting, connect the device immediately to electrical mains to ensure that heater minimises condensation.

The part-turn actuator is mounted to the valve using a coupling (standard) or via lever. Separate instructions are available for actuator mounting to the valve when equipped with base and lever.

### 4.3.1. Output drive for coupling

**Design** Figure 9: Valve attachment via coupling

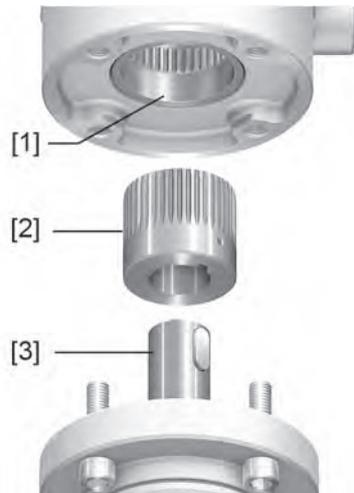

- [1] Actuator worm wheel with internal splines
- [2] Splined plug-in coupling
- [3] Valve shaft (example with key)

- Application**
- For valve attachments according to MSS SP-101
  - For rotating, non-rising valve stem

#### 4.3.1.1. Part-turn actuator (with coupling): mount to valve


Unbored couplings or couplings with pilot bore must be machined to match the valve shaft prior to mounting the part-turn actuator to the valve (e.g. with bore and keyway, two-flat or square bore).

- Information**
- Assemble valve and part-turn actuator in the same end position. As standard, the part-turn actuator is supplied in end position CLOSED.
- Recommended mounting position for **butterfly valves**: End position CLOSED.
  - Recommended mounting position for **ball valves**: End position OPEN.

- Assembly steps**
1. If required, move part-turn actuator in same end position as valve using the handwheel.
  2. Clean mounting faces, thoroughly degrease uncoated mounting surfaces.
  3. Apply a small quantity of grease to the valve shaft [2].

- Place coupling [1] onto valve shaft [2] and secure against axial slipping by using a grub screw [3] or a clamping washer and a screw with curved spring lock washer [4]. Thereby, ensure that dimensions X, Y or L are observed (refer to figure and table <Mounting positions for coupling>).

Figure 10: Examples: Fit coupling

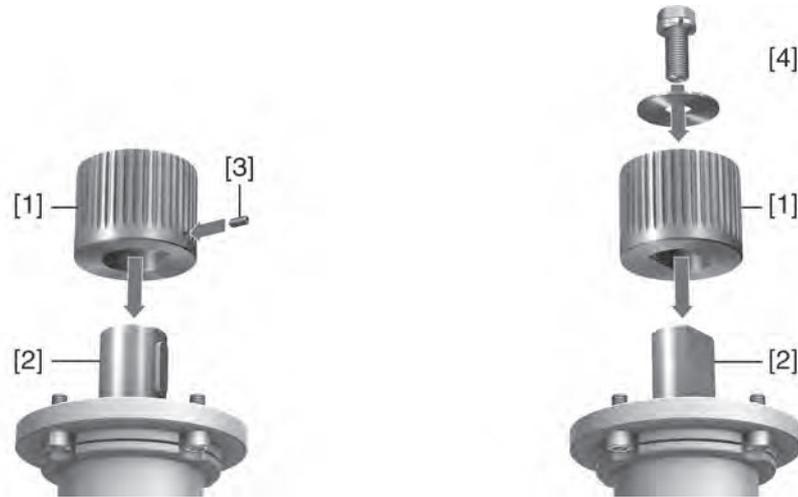

- [1] Coupling
- [2] Valve shaft
- [3] Grub screw
- [4] Clamping washer and screw with curved spring lock washer

Figure 11: Mounting positions for coupling

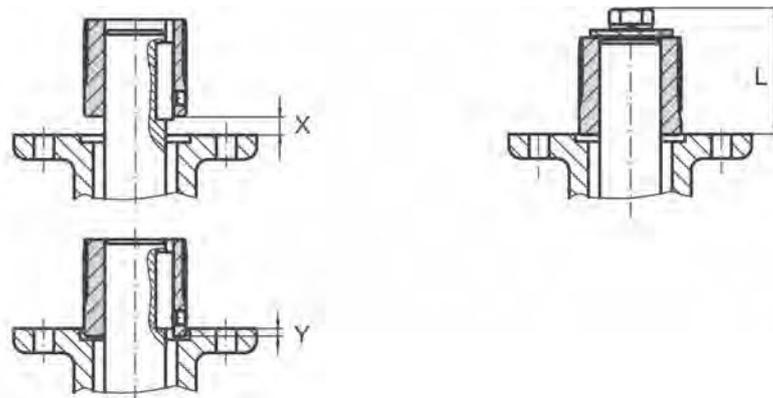



Table 7:

Mounting position of the coupling within fitting dimensions according to AUMA definition											
Dimensions [mm]	SQ 05.2		SQ 07.2			SQ 10.2		SQ 12.2		SQ 14.2	
EN ISO 5211	FA05	FA07	FA05	FA07	FA10	FA10	FA12	FA12	FA14	FA14	FA16
X max.	3	3	3	3	3	4	4	5	5	8	8
Y max.	2	2	2	2	2	5	5	10	10	10	10
L max.	40	40	40	40	66	50	82	61	101	75	125

- Apply non-acidic grease at splines of coupling (e.g. Gleitmo by Fuchs).

6. Fit part-turn actuator. If required, slightly turn part-turn actuator until splines of coupling engage.

Figure 12:

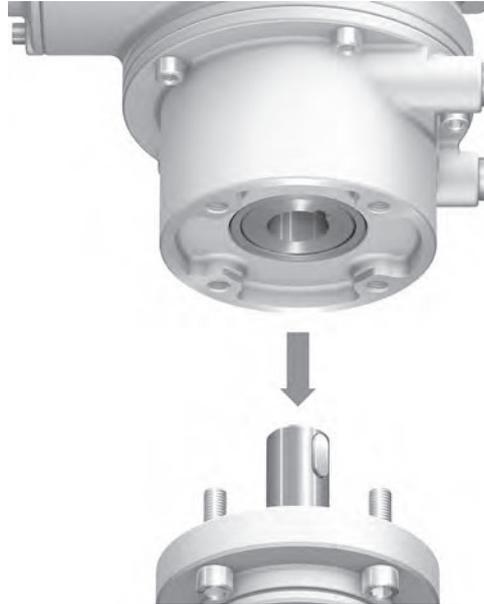

**Information** Ensure that the spigot (if provided) fits uniformly in the recess and that the flanges are in complete contact.

7. If flange bores do not match thread:
  - 7.1 Slightly rotate handwheel until bores line up.
  - 7.2 If required, shift part-turn actuator by one tooth on the coupling.

8. Fasten part-turn actuator with screws.

**Information:** We recommend applying liquid thread sealing material to the screws to avoid contact corrosion.

9. Fasten screws crosswise to a torque according to table.

Table 8:

Tightening torques for screws	
Threads	Tightening torque [ft-lb]
	Strength class A2-80/A4-80
1/4" [M6]	7 [10]
5/16" [M8]	18 [24]
3/8" [M10]	35 [48]
1/2" [M12]	60 [82]
5/8" [M16]	148 [200]
3/4" [M20]	289 [392]

**4.4. Mounting positions of local controls**

Figure 13: Mounting positions



The mounting position of the local controls is implemented according to the order. If, after mounting the actuator to the valve or the gearbox on site, the local controls are in an unfavourable position, the mounting position can be changed at a later date. Four mounting positions shifted by respectively 90° are possible (by maximum 180° into one direction).

**4.4.1. Mounting positions: modify**

**DANGER**

**Hazardous voltage!**

*Risk of electric shock.*

→ Disconnect device from the mains before opening.

**NOTICE**

**Electrostatic discharge ESD!**

*Risk of damage to electronic components.*

→ Earth both operators and devices.

1. Loosen screws and remove the local controls.
2. Check whether O-ring is in good condition, correctly insert O-ring.
3. Turn local controls into new position and re-place.

**NOTICE**

**Cable damage due to twisting or pinching!**

*Risk of functional failures.*

- Turn local controls by a maximum of 180°.
- Carefully assemble local controls to avoid pinching the cables.

4. Fasten screws evenly crosswise.

## 5. Electrical connection

### 5.1. Basic information



#### Danger due to incorrect electrical connection

*Failure to observe this warning can result in death, serious injury, or property damage.*

- The electrical connection must be carried out exclusively by suitably qualified personnel.
- Prior to connection, observe basic information contained in this chapter.
- After connection but prior to applying the voltage, observe the <Commissioning> and <Test run> chapters.

#### Wiring diagram/terminal plan

The pertaining wiring diagram/terminal plan (in German or English) is attached to the device in a weather-proof bag, together with these operation instructions. It can also be requested from AUMA (state order number, refer to name plate) or downloaded directly from the Internet (<http://www.auma.com>).


#### Permissible networks (supply networks)

Actuator controls (actuators) are suitable for use in TN and TT networks with directly earthed star point for mains voltage up to maximum 690 V AC. Use in IT networks for nominal voltages up to maximum 600 V AC are permissible. For IT network, a suitable, approved insulation monitor measuring the pulse code is required.

#### Current type, mains voltage, mains frequency

Type of current, mains voltage and mains frequency must match the data on the actuator controls and motor name plates. Also refer to chapter <Identification>/<Name plate>.

Figure 14: Motor name plate (example)

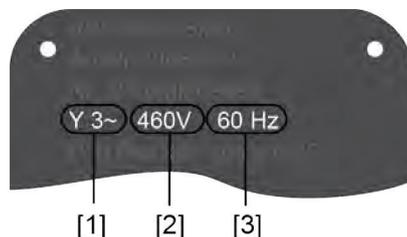

- [1] Type of current
- [2] Mains voltage
- [3] Mains frequency (for 3-phase and 1-phase AC motors)

#### External supply of the electronics

For external electronics supply with 24 V DC and simultaneous use of DC motors (24 V DC, 48 V DC, 60 V DC, 110 V DC, 220 V DC), the 24 V DC controls' voltage supply should be ensured via the XK25/26 terminals, separately from the power supply (U1, V1). In case of common supply using a single cable (links from U1, V1 with XK25/26, for 24 V DC only !!!), short-term excess or falling below the permissible voltage limits can be the consequence during switching (24 V DC +10 %/-10 %). Any possibly incoming operation commands are not executed outside the admissible limit values. The actuator controls briefly signal a fault condition.

#### Protection and sizing on site

For short-circuit protection and for disconnecting the actuator from the mains, fuses and disconnect switches have to be provided by the customer.

The current values for sizing the protection can be derived from the current consumption of the motor (refer to motor name plate) plus the current consumption of actuator controls.

We recommend adapting the switchgear sizing to the max. current ( $RTA/I_{max}$ ) and selecting and setting the overcurrent protection device in compliance with the indications in the electrical data sheet.

Table 9:

Current consumption of actuator controls		
Mains voltage	Max. current consumption	
Permissible variation of the mains voltage	±10 %	±30 %
100 to 120 V AC	750 mA	1,000 mA
208 to 240 V AC	400 mA	750 mA
380 to 500 V AC	250 mA	400 mA
515 to 690 V AC	200 mA	400 mA

Table 10:

Maximum permissible protection		
Switchgear (switchgear with power class) <sup>1)</sup>	Rated power	max. protection
Reversing contactor A1	up to 1.5 kW	16 A (gL/gG)
Thyristor B1	up to 1.5 kW	16 A (g/R) I <sup>2</sup> t<1,500A <sup>2</sup> s

1) The AUMA power class (A1, B1, ...) is indicated on the actuator controls name plate

Consider the motor starting current ( $LRA/I_a$ ) (refer to electrical data sheet) when selecting the circuit breaker. We recommend tripping characteristics D or K for circuit breakers in accordance with IEC 60947-2. For controls with thyristors, we recommend safety fuses instead of circuit breakers.

We recommend refraining from using residual current devices (RCD). However, if an RCD is used within the mains, the residual current device must be of type B.

For actuator controls equipped with a heating system and external electronics power supply, the fuses for the heating system have to be provided by the customer (refer to wiring diagram F4 ext.)

Table 11:

Fuse for heating system		
Designation in wiring diagram = F4 ext.		
External power supply	115 V AC	230 V AC
Fuse	2 A T	1 A T

If actuator controls are mounted separately from actuator (actuator controls on wall bracket): Consider length and cross section of connecting cable when defining the protection required.

### Potential of customer connections

All input signals (control inputs) must be supplied with the same potential.

All output signals (status signals) must be supplied with the same potential.

### Safety standards

Safety measures and safety equipment must comply with the respectively valid national on site specifications. All externally connected devices shall comply with the relevant safety standards for the place of installation.

### Connecting cables

- We recommend using connecting cables and connecting terminals according to rated current ( $FLA/I_n$ ) (refer to motor name plate or electrical data sheet).
- For device insulation, appropriate (voltage-proof) cables must be used. Specify cables for the highest occurring rated voltage.
- Use connecting cable with appropriate minimum rated temperature.
- For connecting cables exposed to UV radiation (outdoor installation), use UV resistant cables.
- For the connection of position transmitters, screened cables must be used.


### Cable installation in accordance with EMC

Signal and fieldbus cables are susceptible to interference. Motor cables are interference sources.

- Lay cables being susceptible to interference or sources of interference at the highest possible distance from each other.
- The interference immunity of signal and fieldbus cables increases if the cables are laid close to the earth potential.
- If possible, avoid laying long cables and make sure that they are installed in areas being subject to low interference.
- Avoid parallel paths with little cable distance of cables being either susceptible to interference or interference sources.

**5.2. S/SH electrical connection (AUMA plug/socket connector)**

Figure 15: S and SH electrical connection

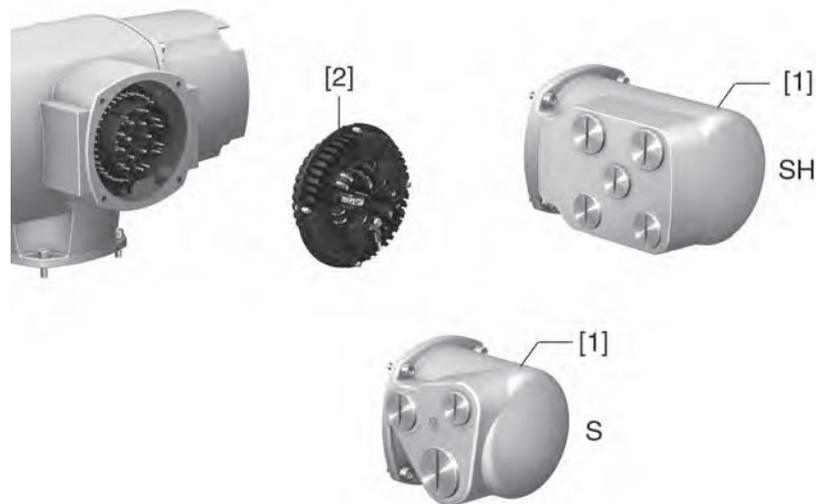

- [1] Cover
- [2] Socket carrier with screw-type terminals

**Short description** Plug-in electrical connection with screw-type terminals for power and control contacts. Control contacts also available as crimp-type connection as an option.

S version (standard) with three cable entries. SH version (enlarged) with additional cable entries. For cable connection, remove the AUMA plug/socket connector and the socket carrier from cover.


**Technical data**

Table 12:

Electrical connection via AUMA plug/socket connector		
	Power contacts	Control contacts
No. of contacts max.	6 (3 equipped) + protective earth conductor (PE)	50 pins/sockets
Designation	U1, V1, W1, U2, V2, W2, PE	1 to 50
Connection voltage max.	750 V	250 V
Rated current max.	25 A	16 A
Type of customer connection	Screw connection	Screw connection, crimp-type (option)
Connection diameter max.	AWG 10 [6 mm <sup>2</sup> ] (flexible) AWG 8 [10 mm <sup>2</sup> ] (solid)	AWG 14 [2.5 mm <sup>2</sup> ] (flexible or solid)

**5.2.1. Terminal compartment : open**

Figure 16: Open terminal compartment

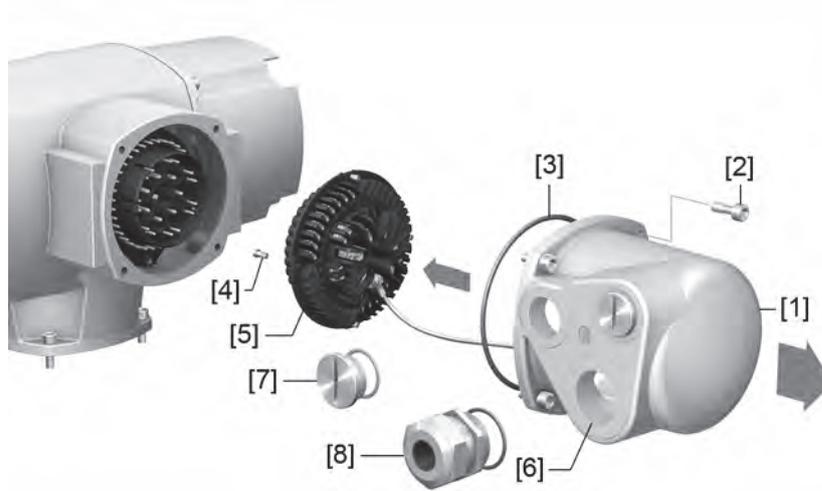

- [1] Cover (figure shows S version)
- [2] Screws for cover
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable entry
- [7] Blanking plugs
- [8] Cable gland (not included in delivery)

**⚠ DANGER****Hazardous voltage!***Risk of electric shock.*

→ Disconnect device from the mains before opening.

1. Loosen screws [2] and remove cover [1].
2. Loosen screws [4] and remove socket carrier [5] from cover [1].
3. Insert cable glands [8] suitable for connecting cables.
- The enclosure protection IP... stated on the name plate is only ensured if suitable cable glands are used.

Figure 17: Example: Name plate for enclosure protection IP68



4. Seal unused cable entries [6] with suitable blanking plugs [7].

**5.2.2. Cable connection**

Table 13:

Terminal cross sections and terminal tightening torques		
Designation	Terminal cross sections	Tightening torques
Power contacts (U1, V1, W1, U2, V2, W2)	1.0 – 6 mm <sup>2</sup> (flexible) 1.5 – 10 mm <sup>2</sup> (solid)	0.9 – 1.1 ft-lb [1.2 – 1.5 Nm]
Protective earth connection ⊕ (PE)	1.0 – 6 mm <sup>2</sup> (flexible) with ring lugs 1.5 – 10 mm <sup>2</sup> (solid) with loops	0.9 – 1.6 ft-lb [1.2 – 2.2 Nm]
Control contacts (1 to 50)	0.25 – 2.5 mm <sup>2</sup> (flexible) 0.34 – 2.5 mm <sup>2</sup> (solid)	0.9 – 0.5 ft-lb [0.5 – 0.7 Nm]

1. Remove cable sheathing.
2. Insert the wires into the cable glands.
3. Fasten cable glands with the specified torque to ensure required enclosure protection.
4. Strip wires.  
→ Controls approx. 6 mm, motor approx. 10 mm
5. For flexible cables: Use wire end sleeves.
6. Connect cables according to order-related wiring diagram.




**In case of a fault: Hazardous voltage while protective earth conductor is NOT connected!**

*Risk of electric shock.*

- Connect all protective earth conductors.
- Connect PE connection to external protective earth conductor of connecting cables.
- Start running the device only after having connected the protective earth conductor.

7. Tighten PE conductors firmly to PE connection using ring lugs (flexible cables) or loops (solid cables).

Figure 18: Protective earthing

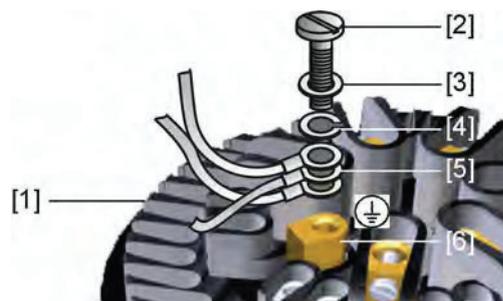


- [1] Socket carrier
- [2] Screw
- [3] Washer
- [4] Lock washer
- [5] Protective earth with ring lugs/loops
- [6] Protective earthing, symbol: ⊕

8. For shielded cables: Link the cable shield end via the cable gland to the housing (earthing).

**5.2.3. Terminal compartment : close**

Figure 19: Close terminal compartment

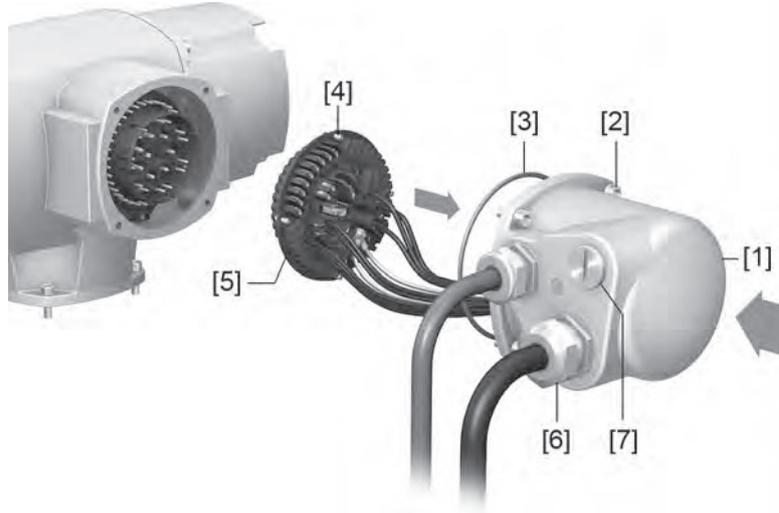

- [1] Cover (figure shows S version)
- [2] Screws for cover
- [3] O-ring
- [4] Screws for socket carrier
- [5] Socket carrier
- [6] Cable gland (not included in delivery)
- [7] Blanking plug

**⚠ WARNING****Short-circuit due to pinching of cables!**

*Risk of electric shock and functional failures.*


→ Carefully fit socket carrier to avoid pinching the cables.

1. Insert the socket carrier [5] into the cover [1] and fasten with screws [4].
2. Clean sealing faces of cover [1] and housing.
3. Check whether O-ring [3] is in good condition, replace if damaged.
4. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the O-ring and insert it correctly.
5. Fit cover [1] and fasten screws [2] evenly crosswise.
6. Fasten cable glands and blanking plugs applying the specified torque to ensure the required enclosure protection.

### 5.3. Accessories for electrical connection

#### 5.3.1. Actuator controls on wall bracket

**Design** Figure 20: Design principle with wall bracket

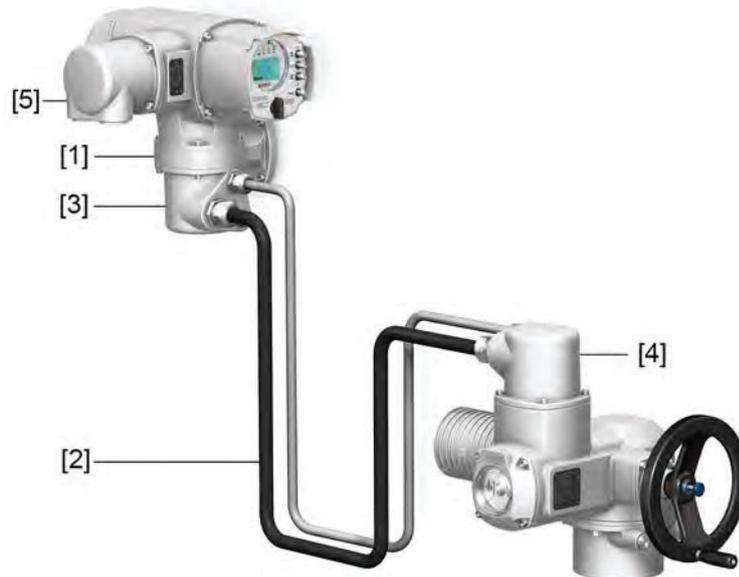

- [1] Wall bracket
- [2] Connecting cables
- [3] Electrical connection of wall bracket (XM)
- [4] Electrical connection of actuator (XA)
- [5] Electrical connection of actuator controls (XK) - customer plug

**Application** The wall bracket allows separate mounting of actuator controls and actuator.

- If the actuator cannot be accessed safely.
- If the actuator is subjected to high temperatures.
- In case of heavy vibration of the valve.

#### Observe prior to connection

- Permissible length of connecting cables: max. 100 m.
- We recommend: AUMA cable set LSW20.
- If the AUMA cable set is not used:
  - Use suitable flexible and screened connecting cables.
  - Use separate, CAN bus data cable for MWG of 120 Ohm character impedance (e.g. UNITRONIC BUS-FD P CAN UL/CSA - 2 x 2 x 0.5 mm<sup>2</sup>, manufacturer: Lapp).
  - Data cable connection: XM2-XA2 = CAN L, XM3-XA3 = CAN H.
  - Voltage supply MWG: XM6-XA6 = GND, XM7-XA7 = + 24 V DC (refer to wiring diagram).
  - For the electrical connection at wall bracket [3], the terminals are made as crimp connections.
  - Use a suitable four indent crimp tool for crimping.
  - Cross sections for flexible wires:
    - Control cables: max. 0.75 to 1.5 mm<sup>2</sup>
    - Mains connection: max. 2.5 to 4 mm<sup>2</sup>
- When using connecting cables, e.g. of the heater, requiring direct wiring from the actuator to the XK customer connector (XA-XM-XK, refer to wiring diagram), these connecting cables must be subject to an insulation test in compliance with EN 50178. Connecting cables for MWG do not belong to this group. They may **not** be subjected to an insulation test.

**5.3.2. Parking frame**

Figure 21: Parking frame, example with plug/socket connector and cover




**Application** Parking frame for safe storage of a disconnected plug or cover.

For protection against touching the bare contacts and against environmental influences.

**5.3.3. DS intermediate frame for double sealing**

Figure 22: Electrical connection with DS intermediate frame

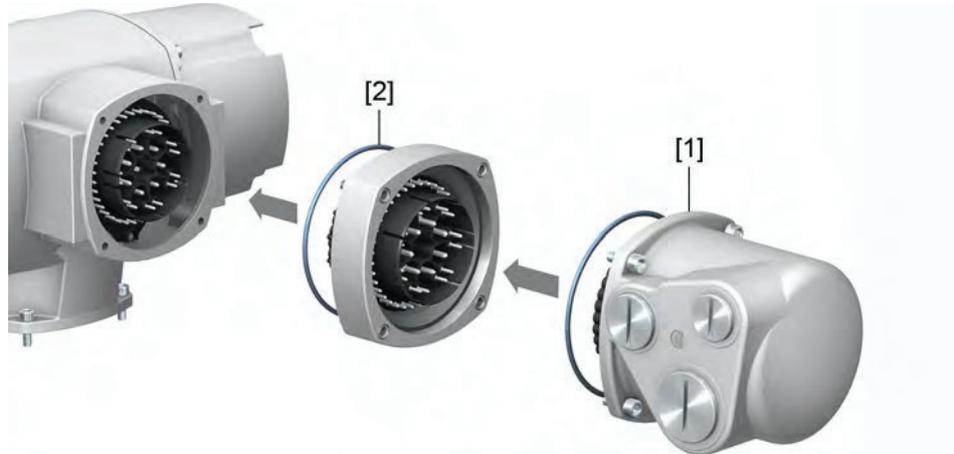

[1] Electrical connection

[2] DS intermediate frame

**Application** When removing the electrical connection or due to leaky cable glands, there is a potential risk of ingress of dust and water into the housing. This is prevented effectively by inserting the double sealed intermediate frame [2] between the plug/socket connector [1] and the housing of the device. The enclosure protection of the device (NEMA type 6P) will not be affected, even if the electrical connection [1] is removed.

**5.3.4. External earth connection**

Figure 23: Earth connection for part-turn actuator



**Application** External earth connection (U-bracket) for connection to equipotential compensation.

Table 14:

Terminal cross sections and earth connection tightening torques		
Conductor type	Terminal cross sections	Tightening torques
Solid wire and stranded	AWG 14 [6 mm <sup>2</sup> ] to AWG 10 [2,5 mm <sup>2</sup> ]	2 - 3 ft-lb [3-4 Nm]
Fine stranded	AWG 12 [1,5 mm <sup>2</sup> ] to AWG 16 [4 mm <sup>2</sup> ]	2 - 3 ft-lb [3-4 Nm]

For fine stranded (flexible) wires, connection is made via cable lugs/ring terminals. When connecting two individual wires with a U-bracket, cross sections have to be identical.

## 6. Operation

### 6.1. Manual operation

For purposes of setting and commissioning, in case of motor or power failure, the actuator may be operated manually. Manual operation is engaged by an internal change-over mechanism.

#### 6.1.1. Manual operation: engage

**NOTICE****Damage at the motor coupling due to faulty operation!**

→ Engage manual operation only during motor standstill.

1. Press push button.



2. Turn handwheel in desired direction.
  - To close the valve, turn handwheel clockwise:
  - ↪ Drive shaft (valve) turns clockwise in direction CLOSE.

#### 6.1.2. Manual operation: disengage

Manual operation is automatically disengaged when motor is started again. The handwheel does not rotate during motor operation.

### 6.2. Motor operation

Perform all commissioning settings and the test run prior to motor operation.

**NOTICE****Valve damage due to incorrect basic setting!**

→ Prior to electrical operation of the actuator, the basic settings i.e. type of seating, torque and limit switching have to be completed.

#### 6.2.1. Local actuator operation

Local actuator operation is performed using the local controls push buttons of actuator controls.

Figure 24: Local controls



- [1] Push button for operation command in direction OPEN
- [2] Push button STOP
- [3] Push button for operation command in direction CLOSE
- [4] Push button RESET
- [5] Selector switch



**Hot surfaces, e.g. possibly caused by high ambient temperatures or strong direct sunlight!**

*Danger of burns*

→ Verify surface temperature and wear protective gloves.

→ Set selector switch [5] to position **Local control** (LOCAL).



↪ The actuator can now be operated using the push buttons [1 – 3]:

- Run actuator in direction OPEN: Press push button [1]
- Stop actuator: Press push button STOP [2].
- Run actuator in direction CLOSE: Press push button [3]

**Information**

OPEN and CLOSE operation commands can be given either in push-to-run or in self-retaining operation mode. In self-retaining mode, the actuator runs to the defined end position after pressing the button, unless another command has been received beforehand. For further information, please refer to Manual (Operation and setting).

**6.2.2. Actuator operation from remote**




**Risk of immediate actuator operation when switching on!**

*Risk of personal injuries or damage to the valve*

- If the actuator starts unexpectedly: Immediately turn selector switch to position **0** (OFF).
- Check input signals and functions.

→ Set selector switch to position **Remote control** (REMOTE).

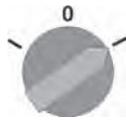


➔ Now, it is possible to operate the actuator via remote control, via operation commands (OPEN, STOP, CLOSE) or analogue setpoints (e.g. 0 – 20 mA).

**Information** For actuators equipped with a positioner, it is possible to change over between **OPEN - CLOSE control** (Remote OPEN-CLOSE) and **setpoint control** (Remote SET-POINT). Selection is made via MODE input, e.g. based on a 24 V DC signal (refer to wiring diagram).

**6.3. Menu navigation via push buttons (for settings and indications)**


Menu navigation for display and setting is made via the push buttons [1 – 4] of the local controls.

Set the selector switch [5] to position **0** (OFF) when navigating through the menu.

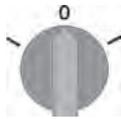

The bottom row of the display [6] serves as navigation support and explains which push buttons [1 – 4] are used for menu navigation.

Figure 25:

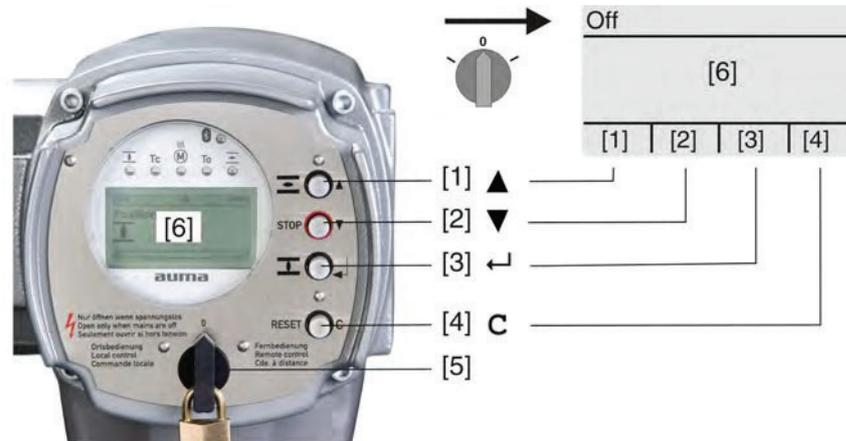

[1–4] Push buttons or navigation support

[5] Selector switch

[6] Display

Table 15: Important push button functions for menu navigation

Push buttons	Navigation support on display	Functions
[1] ▲	Up ▲	Change screen/selection Change values Enter figures from 0 to 9
[2] ▼	Down ▼	Change screen/selection Change values Enter figures from 0 to 9
[3] ←	Ok	Confirm selection
	Save	Save
	Edit	Enter <Edit> menu
	Details	Display more details


Push buttons	Navigation support on display	Functions
[4] C	Setup	Enter Main menu
	Esc	Cancel process
		Return to previous display

- Backlight**
- The display is illuminated in white during normal operation. It is illuminated in red in case of a fault.
  - The screen illumination is brighter when operating a push button. If no push button is operated for 60 seconds, the display will become dim again.

### 6.3.1. Menu layout and navigation

**Groups** The indications on the display are divided into 3 groups:


Figure 26: Groups

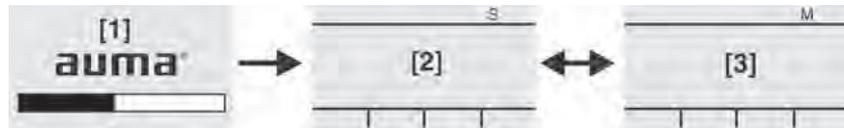

- [1] Startup menu
- [2] Status menu
- [3] Main menu

**ID** Status menu and main menu are marked with an ID.

Figure 27: Marking with ID

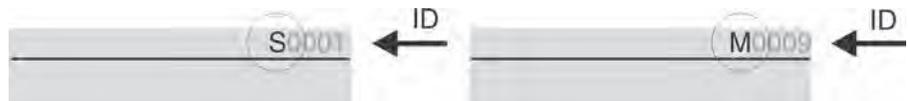


- S ID starts with S = status menu
- M ID starts with M = main menu

**Group selection** It is possible to select between status menu **S** and main menu **M**:

For this, set selector switch to **0** (OFF), hold down push button **C** for approx. 2 seconds until a screen containing the ID **M...** appears.

Figure 28: Select menu groups

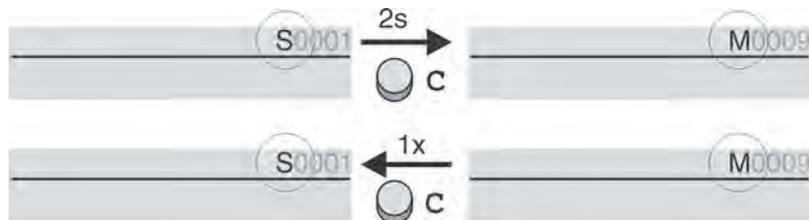


You return to the status menu if:

- the push buttons on the local controls have not been operated within 10 minutes
- or by briefly pressing **C**

**Direct display via ID** When entering the ID within the main menu, screens can be displayed directly (without clicking through).

Figure 29: Direct display (example)

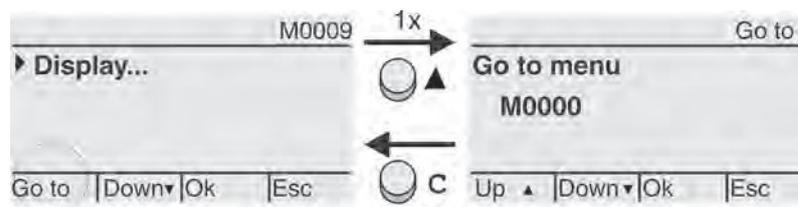

Display indicates in the bottom row: **Go to**

1. Press push button **▲ Go to**.  
Display indicates: **Go to menu M0000**
2. Use push buttons **▲▼ Up ▲ Down ▼** to select figures 0 to 9.
3. Press push button **◀ Ok** to confirm first digit.
4. Repeat steps 2 and 3 for all further digits.
5. To cancel the process: Press **C Esc**.

## 6.4. User level, password

**User level** The user level defines which menu items or parameters can be displayed or modified by the active user.

There are 6 different user levels. The user level is indicated in the top row:

Figure 30: User level display (example)



**Password** A password must be entered to allow parameter modification. The display indicates: **Password 0\*\*\***

A specific password is assigned to each user level and permits different actions.

Table 16:

User levels and authorisations	
Designation (user level)	Authorisation/password
Observer (1)	Verify settings No password required
Operator (2)	Change settings Default factory password: 0000
Maintenance (3)	Reserved for future extensions
Specialist (4)	Change device configuration e.g. type of seating, assignment of output contacts Default factory password: 0000
Service (5)	Service staff Change configuration settings
AUMA (6)	AUMA administrator

### 6.4.1. Password entry

1. Select desired menu and hold down push button **◀** for approx. 3 seconds.  
➡ Display indicates the set user level, e.g. **Observer (1)**
2. Select higher user level via **▲ Up ▲** and confirm with **◀ Ok**.  
➡ Display indicates: **Password 0\*\*\***
3. Use push buttons **▲▼ Up ▲ Down ▼** to select figures 0 to 9.
4. Confirm first digit of password via push button **◀ Ok**.

5. Repeat steps 1 and 2 for all further digits.
- ➔ Having confirmed the last digit with **↵ Ok**, access to all parameters within one user level is possible if the password entry is correct.

### 6.4.2. Password change

Only the passwords of same or lower access level may be changed.


Example: If the user is signed in as **Specialist (4)**, he/she can change passwords as for password levels (1) through (4).

M ▶ **Device configuration M0053**  
**Service functions M0222**  
**Change passwords M0229**

Menu item **Service functions M0222** is only visible, if user level **Specialist (4)** or higher is selected.

#### Select main menu

1. Set selector switch to position **0** (OFF).

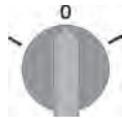

2. Press push button **C Setup** and hold it down for approx. 3 seconds.
- ➔ Display goes to main menu and indicates: ▶ **Display...**

#### Change passwords

3. Select parameter **Change passwords** either:
  - click via the menu **M ▶** to parameter, or
  - via direct display: press **▲** and enter ID **M0229**
- Display indicates: ▶ **Change passwords**
- The user level is indicated in the top row (1 – 6), e.g.:



- For user level 1 (view only), passwords cannot be changed. To change passwords, you must change to a higher user level. For this, enter a password via a parameter.
4. For a user level between 2 and 6: Press push button **↵ Ok**.
- ➔ The display indicates the highest user level, e.g.: **For user 4**
5. Select user level via push buttons **▲▼ Up ▲ Down ▼** and confirm with **↵ Ok**.
- ➔ Display indicates: ▶ **Change passwords Password 0\*\*\***
6. Enter current password (→ enter password).
- ➔ Display indicates: ▶ **Change passwords Password (new) 0\*\*\***
7. Enter new password (→ enter password).
- ➔ Display indicates: ▶ **Change passwords For user 4** (example)
8. Select next user level via push buttons **▲▼ Up ▲ Down ▼** or cancel the process via **Esc**.


### 6.5. Language in the display

The AUMATIC actuator controls display is multilingual.

#### 6.5.1. Language change

M ▶ **Display... M0009**  
**Language M0049**

**Select main menu** 1. Set selector switch to position **0** (OFF).

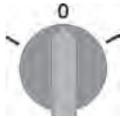

2. Press push button **C Setup** and hold it down for approx. 3 seconds.

↪ Display goes to main menu and indicates: ▶ **Display...**

**Change language**

3. Press **← Ok**.

↪ Display indicates: ▶ **Language**

4. Press **← Ok**.

↪ Display indicates the selected language, e.g.: ▶ **Deutsch**

5. The bottom row of the display indicates:

→ **Save** → continue with step 10

→ **Edit** → continue with step 6

6. Press **← Edit**.

↪ Display indicates: ▶ **Observer (1)**

7. Select user level via **▲▼ Up ▲ Down ▼** resulting in the following significations:

→ black triangle: ▶ = current setting

→ white triangle: ▷ = selection (not saved yet)

8. Press **← Ok**.

↪ Display indicates: **Password 0\*\*\***

9. Enter password (→ enter password).

↪ Display indicates: ▶ **Language** and **Save** (bottom row)

**Language selection**

10. Select new language via **▲▼ Up ▲ Down ▼** resulting in the following significations:

→ black triangle: ▶ = current setting

→ white triangle: ▷ = selection (not saved yet)

11. Confirm selection via **← Save**.


↪ The display changes to the new language. The new language selection is saved.

**7. Indications**

**7.1. Indications during commissioning**

**LED test** When switching on the power supply, all LEDs on the local controls illuminate for approx. 1 second. This optical feedback indicates that the voltage supply is connected to the controls and all LEDs are operable.

Figure 31: LED test

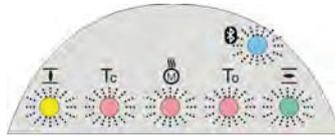


**Language selection** During the self-test, the language selection can be activated so that the selected language is immediately indicated in the display. For this, set selector switch to position **0** (OFF).

**Activate language selection:**

1. Display indicates in the bottom row: **Language selection menu? 'Reset'**
2. Press push button **RESET** and hold it down until the following text is displayed in the bottom line: **Language menu loading, please wait.**

Figure 32: Self-test

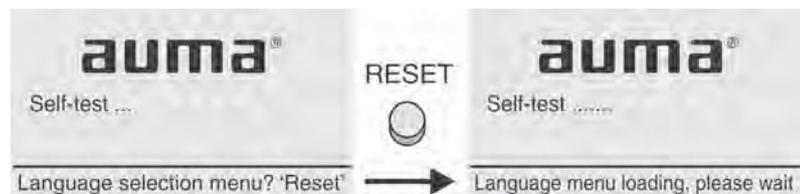

The language selection menu follows the startup menu.


**Startup menu** The current firmware version is displayed during the startup procedure:

Figure 33: Startup menu with firmware version: 04.00.00–xxxx



If the language selection feature has been activated during the self-test, the menu for selecting the display language will now be indicated. For further information on language setting, please refer to chapter <Language in the display>.

Figure 34: Language selection

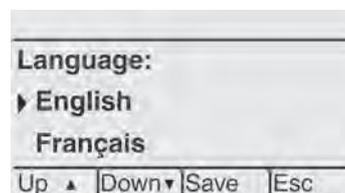


If no entry is made over a longer period of time (approx. 1 minute), the display automatically returns to the first status indication.

**7.2. Indications in the display**

**Status bar** The status bar (first row in the display) indicates the operation mode [1], the presence of an error [2] and the ID number [3] of the current display indication.

Figure 35: Information in the status bar (top)

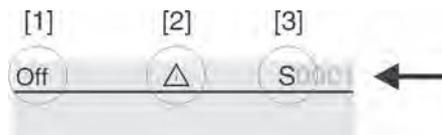


- [1] Operation mode
- [2] Error symbol (only for faults and warnings)
- [3] ID number: S = Status page

**Navigation support**

If further details or information are available with reference to the display, the following indications **Details** or **More** appear in the navigation support (bottom display row). Then, further information can be displayed via the ← push button.

Figure 36: Navigation support (bottom)

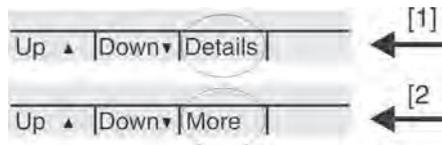

- [1] shows list with detailed indications
- [2] shows further available information

The navigation support (bottom row) is faded out after approx. 3 seconds. Press any push button (selector switch in position 0 (OFF)) to fade in the navigation support.


**7.2.1. Feedback indications from actuator and valve**

Display indications depend on the actuator version.

**Valve position (S0001)**


- S0001 on the display indicates the valve position in % of the travel.
- The bar graph display appears after approx. 3 seconds.
- When issuing an operation command, an arrow indicates the direction (OPEN/CLOSE).

Figure 37: Valve position and direction of operation

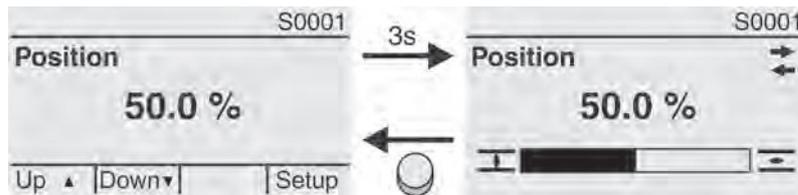

Reaching the preset end positions is additionally indicated via ⊥ (CLOSED) and ⊢ (OPEN) symbols.

Figure 38: End position CLOSED/OPEN reached

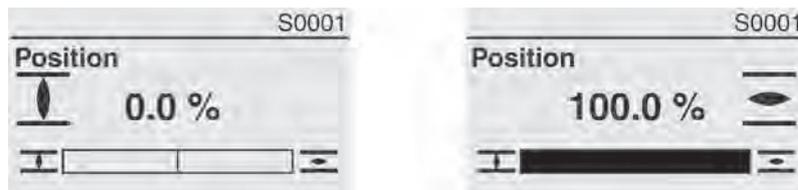


- 0% Actuator is in end position CLOSED
- 100% Actuator is in end position OPEN

**Torque (S0002)**

- S0002 on the display indicates the torque applied at the actuator output.
- The bar graph display appears after approx. 3 seconds.

Figure 39: Torque

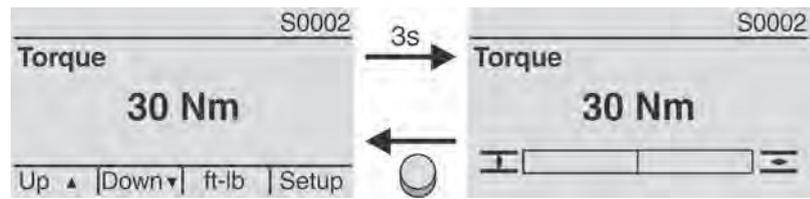

**Select unit** The push button  allows to select the unit displayed (percent %, Newton metre Nm or "foot-pound" ft-lb)

Figure 40: Units of torque



**Display in percent** 100 % indication equals the max. torque indicated on the name plate of the actuator.

Example: SA 07.6 with 20 – 60 Nm.

- 100 % corresponds to 60 Nm of nominal torque.
- 50 % corresponds to 30 Nm of nominal torque.

**Operation commands (S0003)**


The display S0003 indicates:

- active operation commands, like e.g.: Operation in direction CLOSE or in direction OPEN
- the actual value E2 as bar graph indication and as value between 0 and 100 %.
- for setpoint control (positioner): setpoint E1
- for stepping mode or for intermediate positions with operation profile: pivot points and operation behaviour of pivot points

The navigation support (bottom row) is faded out after approx. 3 seconds and the axis/axes for pivot point display are shown.

**OPEN - CLOSE control** Active operation commands (OPEN, CLOSE, ...) are shown above the bar graph display. The figure below shows the operation command in direction CLOSE.

Figure 41: Display for OPEN - CLOSE control

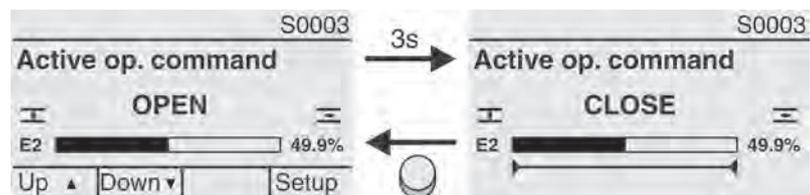


E2 Actual position value

**Setpoint control** If the positioner is enabled and activated, the bar graph indication for E1 (position setpoint) is displayed.

The direction of the operation command is displayed by an arrow above the bar graph indication. The figure below shows the operation command in direction CLOSE.

Figure 42: Indication for setpoint control (positioner)

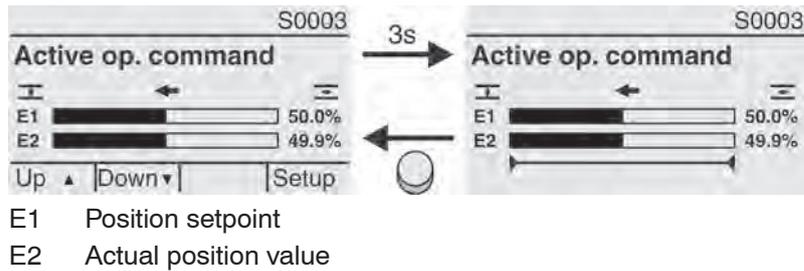

**Pivot point axis**

The pivot points and their operation behaviour (operation profile) are shown on the pivot point axis by means of symbols.

The symbols are only displayed if at least one of the following functions is activated:

Operation profile M0294

Timer CLOSE M0156

Timer OPEN M0206

Figure 43: Examples: on the left pivot points (intermediate positions); on the right stepping mode



Table 17: Symbols along the pivot point axis

Symbol	Pivot point (intermediate position) with operation profile	Stepping mode
	Pivot point without reaction	End of stepping mode
◀	Stop during operation in direction CLOSE	Start of stepping mode in direction CLOSE
▶	Stop during operation in direction OPEN	Start of stepping mode in direction OPEN
◆	Stop during operation in directions OPEN and CLOSE	–
◁	Pause for operation in direction CLOSE	–
▷	Pause for operation in direction OPEN	–
◇	Pause for operation in directions OPEN and CLOSE	–

**7.2.2. Status indications according to AUMA classification**


These indications are available if the parameter **Diagnostic classific. M0539** is set to **AUMA**.

**Warnings (S0005)**

If a warning has occurred, the display shows **S0005**:

- the number of warnings occurred
- a blinking question mark after approx. 3 seconds

Figure 44: Warnings

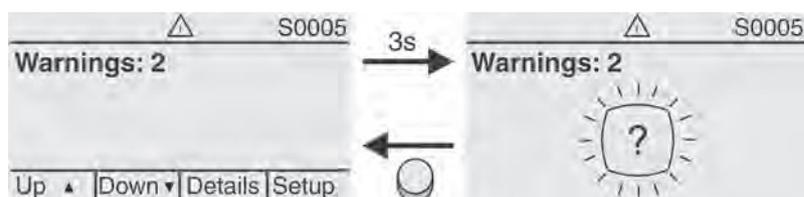

For further information, please also refer to <Corrective action>.


**Not ready REMOTE (S0006)**

The S0006 display shows indications of the Not ready REMOTE group.

If such an indication has occurred, the display shows S0006:

- the number of indications occurred
- a blinking crossbar after approx. 3 seconds

Figure 45: Not ready REMOTE indications

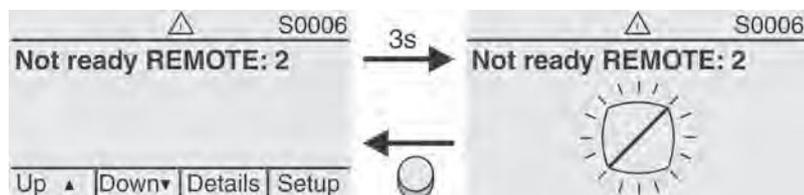


For further information, please also refer to <Corrective action>.

**Fault (S0007)**

If a fault has occurred, the display shows S0007:

- the number of faults occurred
- a blinking exclamation mark after approx. 3 seconds

Figure 46: Fault

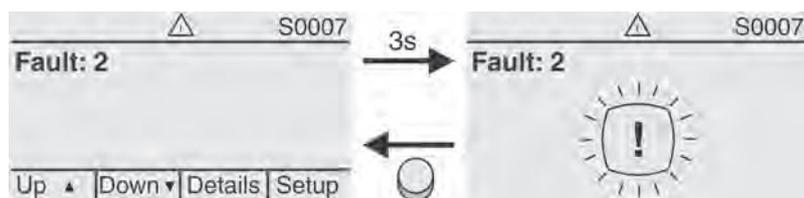

For further information, please also refer to <Corrective action>.

**7.2.3. Status indications according to NAMUR recommendation**

These indications are available, if the parameter **Diagnostic classific. M0539** is set to **NAMUR**.


**Out of Specification (S0008)**

The S0008 indication shows out of specification indications according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows S0008:

- the number of indications occurred
- a blinking triangle with question mark after approx. 3 seconds

Figure 47: Out of specification

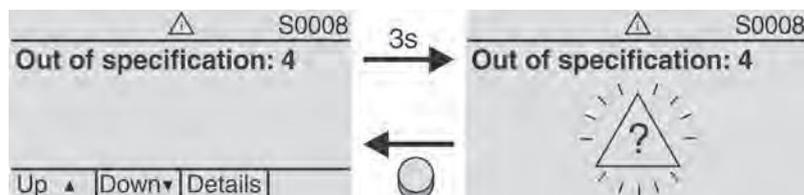

For further information, please also refer to <Corrective action>.


**Function check (S0009)**

The S0009 indication shows function check indications according to NAMUR recommendation NE 107.

If an indication has occurred via the function check, the display shows S0009:

- the number of indications occurred
- a blinking triangle with a spanner after approx. 3 seconds

Figure 48: Function check

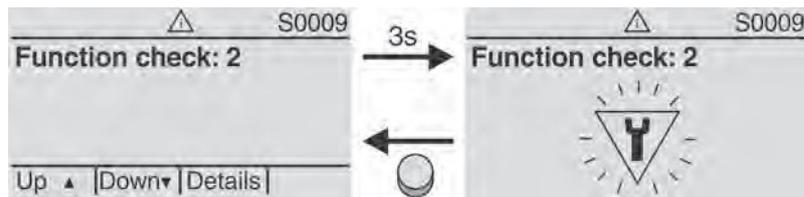

For further information, please also refer to <Corrective action>.


### Maintenance required (S0010)

The S0010 indication shows maintenance indications according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows S0010:

- the number of indications occurred
- a blinking square with an oilcan after approx. 3 seconds

Figure 49: Maintenance required

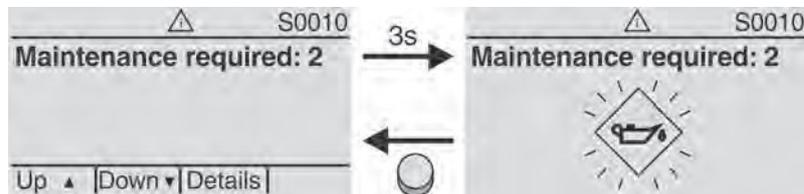

For further information, please also refer to <Corrective action>.


### Failure (S0011)

The S0011 indication shows the causes of the failure indication according to NAMUR recommendation NE 107.

If such an indication has occurred, the display shows S0011:

- the number of indications occurred
- a blinking circle with a cross after approx. 3 seconds

Figure 50: Failure

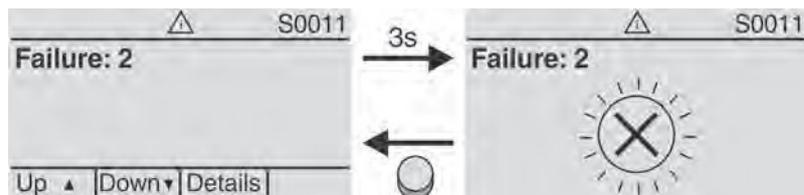

For further information, please also refer to <Corrective action>.

**7.3. Indication lights of local controls**

Figure 51: Arrangement and signification of indication lights



- [1] Marking with figures 1 – 6 (standard)
- [2] Marking with symbols (option)
- 1 End position CLOSED reached (blinking: operation in direction CLOSE)
- 2 Torque fault CLOSE
- 3 Motor protection tripped
- 4 Torque fault OPEN
- 5 End position OPEN reached (blinking: operation in direction OPEN)
- 6 Bluetooth connection

**Modify indication light assignment (indications)**

Different indications can be assigned to LEDs 1 – 5.

- M ▷ **Device configuration M0053**
- Local controls M0159**
- Indication light 1 (left) M0093**
- Indication light 2 M0094**
- Indication light 3 M0095**
- Indication light 4 M0096**
- Indicat. light 5 (right) M0097**
- Signal interm. pos. M0167**

**Default values (Europe):**

- Indication light 1 (left) = End p. CLOSED, blink**
- Indication light 2 = Torque fault CLOSE**
- Indication light 3 = Thermal fault**
- Indication light 4 = Torque fault OPEN**
- Indicat. light 5 (right) = End p. OPEN, blink**
- Signal interm. pos. = OPEN/CLOSED = On**

**Further setting values:**

Refer to Manual (Operation and setting).

**7.4. Mechanical position indication (self-adjusting)**

Figure 52: Mechanical position indicator



- [1] End position OPEN reached
- [2] End position CLOSED reached

- Characteristics**
- Independent of power supply
  - Used as running indication: Indicator disc (with arrow  $\Rightarrow$ ) rotates during actuator operation and continuously indicates the valve position  
(For “clockwise closing version”, the arrow rotates in clockwise direction for operation in direction CLOSE)
  - Indicates that end positions (OPEN/CLOSED) have been reached  
Arrow  $\Rightarrow$  points to symbol  $\overline{\text{O}}$  (OPEN) or  $\overline{\text{I}}$  (CLOSED)
  - Self-adjusting when increasing the swing angle

**7.5. Mechanical position indication via indicator mark**

Figure 53: Mechanical position indicator



- [1] End position OPEN reached
- [2] End position CLOSED reached
- [3] Indicator mark at cover

- Characteristics**
- Independent of power supply
  - Used as running indication: Indicator disc rotates during actuator operation and continuously indicates the valve position  
(For “clockwise closing version”, the symbols  $\overline{\text{O}}$ / $\overline{\text{I}}$  rotate in counterclockwise direction for operation in direction CLOSE)
  - Indicates that end positions (OPEN/CLOSED) have been reached  
(Symbols  $\overline{\text{O}}$  (OPEN)/  $\overline{\text{I}}$  (CLOSED) point to the indicator mark  $\blacktriangle$  at cover)

## 8. Signals (output signals)

### 8.1. Status signals via output contacts (digital outputs)

**Characteristics** Output contacts are used to send status signals (e.g. reaching the end positions, selector switch position, faults...) as binary signals to the control room.

Status signals only have two states: active or inactive. Active means that the conditions for the signal are fulfilled.

#### 8.1.1. Assignment of outputs

The output contacts (outputs DOUT 1 – 12) can be assigned to various signals.

Required user level: **Specialist (4)** or higher.

M ▶ **Device configuration M0053**  
**I/O interface M0139**  
**Digital outputs M0110**  
**Signal DOUT 1 M0109**

Table 18: Default values

Output	Default value:	Output	Default value:
Signal DOUT 1	Fault	Signal DOUT 7	Thermal fault
Signal DOUT 2	End position CLOSED	Signal DOUT 8	OPEN
Signal DOUT 3	End position OPEN	Signal DOUT 9	Limit switch CLOSED
Signal DOUT 4	Selector sw. REMOTE	Signal DOUT 10	Limit switch OPEN
Signal DOUT 5	Torque fault CLOSE	Signal DOUT 11	Torque sw. CLOSED
Signal DOUT 6	Torque fault OPEN	Signal DOUT 12	Torque sw. OPEN

#### 8.1.2. Coding the outputs

The output signals **Coding DOUT 1 – Coding DOUT 12** can be set either to high active or low active.

- High active = output contact closed = signal active
  - Low active = output contact open = signal active
- Signal active means that the conditions for the signal are fulfilled.

Required user level: **Specialist (4)** or higher.

M ▶ **Device configuration M0053**  
**I/O interface M0139**  
**Digital outputs M0110**  
**Coding DOUT 1 M0102**

**Default values:**

**Coding DOUT 1 = Low active**  
**Coding DOUT 2 – Coding DOUT 12 = High active**

### 8.2. Analogue signals (analogue outputs)


**Valve position** Signal: E2 = 0/4 – 20 mA (galvanically isolated)  
 Designation in the wiring diagram: AOUT1 (position)

**Torque feedback** Signal: E6 = 0/4 – 20 mA (galvanically isolated)  
 Designation in the wiring diagram: AOUT2 (torque)

For further information on this topic, please refer to Manual (Operation and setting).

## 9. Commissioning (basic settings)

1. Set selector switch to position **0** (OFF).

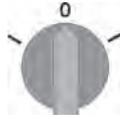

**Information:** The selector switch is not a mains switch. When positioned to **0** (OFF), the actuator cannot be operated. The controls' power supply is maintained.

2. Switch on the power supply.

**Information:** Observe heat-up time for ambient temperatures below  $-30\text{ °C}$ .

3. Perform basic settings.

### 9.1. End stops in part-turn actuator

The internal end stops limit the swing angle. They protect the valve in case of limit switching failure during motor operation and serve the purpose as limitation for manual operation via handwheel. They may not be used for torque tripping in end positions during standard operation.

End stop setting is generally performed by the valve manufacturer **prior** to installing the valve into the pipework.



#### Exposed, rotating parts (discs/balls) at the valve!

*Pinching and damage by valve or actuator.*

- End stops should be set by suitably qualified personnel only.
- Never completely remove the setting screws [2] and [4] to avoid grease leakage.
- Observe dimension  $T_{\min}$ .


#### Information

- The swing angle set in the factory is indicated on the name plate:  
Figure 54: Example: Name plate Swing angle



- The setting sequence depends on the valve:
  - Recommendation for **butterfly valves**: Set end stop CLOSED first.
  - Recommendation for **ball valves**: Set end stop OPEN first.

Figure 55: End stop

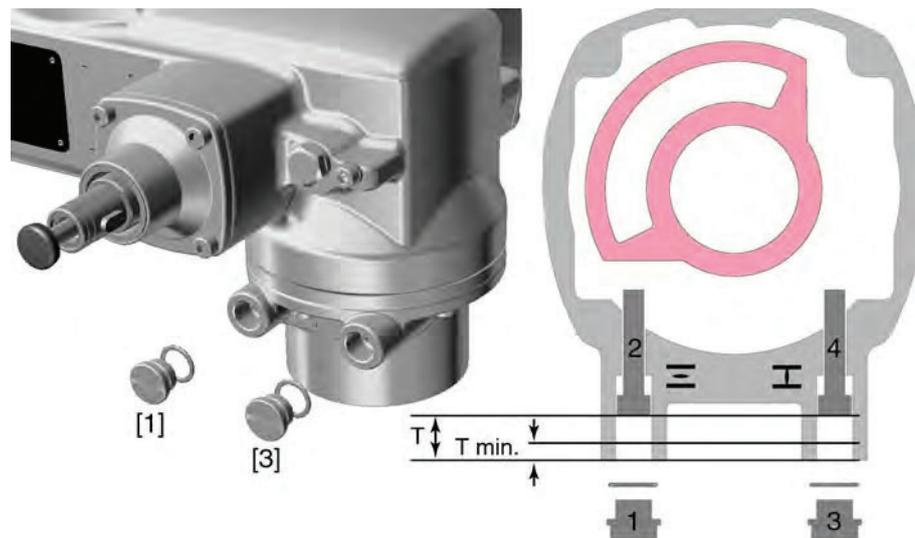

- [1] Screw plug for end stop OPEN
- [2] Setting screw for end stop OPEN
- [3] Screw plug for end stop CLOSED
- [4] Setting screw for end stop CLOSED

Dimensions/sizes	05.2	07.2	10.2	12.2	14.2
T (for 90°)	17	17	20	23	23
T <sub>min.</sub>	11	11	12	13	12

### 9.1.1. End stop CLOSED: set

1. Remove screw plug [3].
2. Move valve to end position CLOSED with handwheel.
3. If the valve end position is not reached:
  - Slightly turn setting screw [4] counterclockwise until valve end position CLOSED can be safely set.
  - ➔ Turning the setting screw [4] clockwise results in a smaller swing angle.
  - ➔ Turning the setting screw [4] counterclockwise results in a larger swing angle.



4. Turn setting screw [4] clockwise to the stop.
  - ➔ This completes the setting of end stop CLOSED.
5. Check O-ring in screw plug and replace if damaged.
6. Fasten and tighten screw plug [3].

Having completed this procedure, the end position detection CLOSED can be set immediately.

### 9.1.2. End stop OPEN: set

**Information** In general, the end stop OPEN does not have to be set.

1. Remove screw plug [1].
2. Move valve to end position OPEN with handwheel.

3. If the valve end position is not reached:
  - Slightly turn setting screw [2] counterclockwise until valve end position OPEN can be safely set.
  - ↪ Turning the setting screw [2] clockwise results in a smaller swing angle.
  - ↪ Turning the setting screw [2] counterclockwise results in a larger swing angle.



4. Turn setting screw [2] clockwise to the stop.
  - ↪ This completes the setting of end stop OPEN.
5. Check O-ring in screw plug and replace if damaged.
6. Fasten and tighten screw plug [1].

Having completed this procedure, the end position detection OPEN can be set immediately.

## 9.2. Type of seating: set

### NOTICE

#### Valve damage due to incorrect setting!

- The type of seating must suit the valve.
- Only change the setting with the consent of the valve manufacturer.

- M ▷ Customer settings M0041  
 Type of seating M0012  
 End position CLOSED M0086  
 End position OPEN M0087

Default value: Limit

#### Setting values:

- Limit Seating in end positions via limit switching.  
 Torque Seating in end positions via torque switching.

- Select main menu 1. Set selector switch to position 0 (OFF).



2. Press push button **C Setup** and hold it down for approx. 3 seconds.
  - ↪ Display goes to main menu and indicates: ▶ Display...

- Select parameter 3. Select parameter either:

- click via the menu M ▷ to parameter, or
- via direct display: Press ▲ and enter ID M0086 or M0087

- ↪ Display indicates: End position CLOSED

- CLOSE or OPEN 4. Use ▲ ▼ Up ▲ Down ▼ to select:

- ▶ End position CLOSED
- ▶ End position OPEN

- ↪ The black triangle ▶ indicates the current selection.

- 5. Press **↵** **Ok**.
- ➔ Display indicates the current setting: **Limit** or **Torque**
- ➔ The bottom row of the display indicates either:
  - **Edit** → continue with step 6
  - **Save** → continue with step 10
- 6. Press **↵** **Edit**.
- ➔ Display indicates: ▶ **Specialist (4)**
- User login** 7. Use **▲ ▼ Up ▲ Down ▼** to select user:  
**Information:** Required user level: **Specialist (4)** or higher
- ➔ The symbols have the following meaning:
  - black triangle: ▶ = current setting
  - white triangle: ▷ = selection (not saved yet)
- 8. Press **↵** **Ok**.
- ➔ Display indicates: **Password 0\*\*\***
- 9. Enter password (→ enter password).
- ➔ The screen indicates the pre-set type of seating (▶ **Limit** or ▶ **Torque**) by means of a black triangle ▶.
- Change settings** 10. Use **▲ ▼ Up ▲ Down ▼** to select new setting.
- ➔ The symbols have the following meaning:
  - black triangle: ▶ = current setting
  - white triangle: ▷ = selection (not saved yet)
- 11. Confirm selection via **↵** **Save**.
- ➔ The setting for the type of seating is complete.
- 12. Back to step 4 (CLOSED or OPEN): Press **↵** **Esc** .

**9.3. Torque switching: set**

Once the set torque is reached, the torque switches will be tripped (overload protection of the valve).

**Information** The torque switches may also trip during manual operation.

**NOTICE**

**Valve damage due to excessive tripping torque limit setting!**

- The tripping torque must suit the valve.
- Only change the setting with the consent of the valve manufacturer.

- M ▶ **Customer settings M0041**
- Torque switching M0013**
- Trip torque CLOSE M0088**
- Trip torque OPEN M0089**

**Default value:** According to order data

**Setting range:** Torque range according to actuator name plate

- Select main menu** 1. Set selector switch to position **0** (OFF).



- 2. Press push button **C Setup** and hold it down for approx. 3 seconds.
- ➔ Display goes to main menu and indicates: ▶ **Display...**

- Select parameter** 3. Select parameter either:
- click via the menu **M ▶** to parameter, or
  - via direct display: press **▲** and enter ID **M0088**.
- ↪ Display indicates: **Trip torque CLOSE**
- CLOSE or OPEN** 4. Use **▲▼ Up ▲ Down ▼** to select:
- ▶ **Trip torque CLOSE**
  - ▶ **Trip torque OPEN**
- ↪ The black triangle ▶ indicates the current selection.
5. Press **↵ Ok**.
- ↪ Display shows the set value.
- ↪ The bottom row indicates: **Edit Esc**
6. Press **↵ Edit**.
- ↪ Display indicates:
- **Specialist (4)** → continue with step 7
  - in bottom row **Up ▲ Down ▼ Esc** → continue with step 11
- User login** 7. Use **▲▼ Up ▲ Down ▼** to select user:
- Information:** Required user level: **Specialist (4)** or higher.
- ↪ The symbols have the following meanings:
- black triangle: ▶ = current setting
  - white triangle: ▷ = selection (not saved yet)
8. Press **↵ Ok**.
- ↪ Display indicates: **Password 0\*\*\***
9. Enter password (→ enter password).
- ↪ Display shows the set value.
- ↪ The bottom row indicates: **Edit Esc**
10. Press **↵ Edit**.
- Change value** 11. Enter new value for tripping torque via **▲▼ Up ▲ Down ▼**.
- Information:** The adjustable torque range is shown in round brackets.
12. Save new value via **↵ Save**.
- ↪ The tripping torque is set.
13. Back to step 4 (CLOSED or OPEN): Press **↵ Esc**.
- Information** The following fault signals are issued if the torque setting performed has been reached **in mid-travel**:
- In the display of the local controls: Status indication **S0007 Fault = Torque fault OPEN** or **Torque fault CLOSE**
- The fault has to be acknowledged before the operation can be resumed. The acknowledgement is made:
1. either by an operation command in the opposite direction.
    - For **Torque fault OPEN**: Operation command in direction **CLOSE**
    - For **Torque fault CLOSE**: Operation command in direction **OPEN**
  2. or, in case the torque applied is lower than the preset tripping torque:
    - in selector switch position **Local control** (LOCAL) via push button **RESET**.
    - in selector switch position **Remote control** (REMOTE):
      - via a digital (I/O interface) with the Reset command if a digital input is configured for **RESET** signal.

**9.4. Limit switching: set**

**NOTICE**

**Valve damage at valve/gearbox due to incorrect setting!**

- When setting with motor operation: Stop actuator **prior** reaching end of travel (press STOP push button).
- Allow for overrun when selecting limit seating.

M ▷ **Customer settings M0041**  
**Limit switching M0010**  
**Set end pos.CLOSED? M0084**  
**Set end pos. OPEN? M0085**

**Select main menu**

1. Set selector switch to position **0** (OFF).



2. Press push button **C** and hold it down for approx. 3 seconds.  
 ↳ Display goes to main menu and indicates: ▶ **Display...**

**Select parameter**

3. Select parameter either:
  - click via the menu **M ▷** to parameter, or
  - via direct display: press **▲** and enter ID **M0084**.
- ↳ Display indicates: **Set end pos.CLOSED?**

**CLOSED or OPEN**

4. Select via **▲ ▼ Up ▲ Down ▼**:
  - ▶ **Set end pos.CLOSED? M0084**
  - ▶ **Set end pos. OPEN? M0085**
- ↳ The black triangle ▶ indicates the current selection.
5. Press **↵ Ok**.

**User login**

- ↳ The display indicates either:
  - **Set end pos.CLOSED? CMD0009** → continue with step 9
  - **Set end pos. OPEN? CMD0010** → continue with step 12
  - **Specialist (4)** → continue with step 6
6. Use **▲ ▼ Up ▲ Down ▼** to select user:  
**Information:** Required user level: **Specialist (4)** or higher
- ↳ The symbols have the following meaning:
  - black triangle: ▶ = current setting
  - white triangle: ▷ = selection (not saved yet)
7. Press **Ok** to confirm selected user.
- ↳ Display indicates: **Password 0\*\*\***
8. Enter password (→ enter password).
- ↳ The display indicates either:
  - **Set end pos.CLOSED? CMD0009** → continue with step 9
  - **Set end pos. OPEN? CMD0010** → continue with step 12

**Set end position  
CLOSED** **CMD0009**

9. Set end position CLOSED again :
  - 9.1 For large strokes: Set selector switch in position **Local control** (LOCAL) and operate actuator in motor operation via push button  (CLOSE) in direction of the end position.  
**Information:** Stop actuator **before** reaching end of travel (press **STOP** push button to avoid damage).
  - 9.2 Engage manual operation.
  - 9.3 Turn handwheel until valve is closed.
  - 9.4 Set selector switch to position **0** (OFF).  
→ Display indicates: **Set end pos.CLOSED? Yes No**

**Confirm new end position**

10. Press  **Yes** to confirm new end position.  
→ Display indicates: **End pos. CLOSED set!**  
→ The left LED is illuminated (standard version) and thus indicates that the end position CLOSED setting is complete.



11. Make selection:
  - **Edit** → back to step 9: Set end position CLOSED "once again"
  - **Esc** → back to step 4; either set end position OPEN or exit the menu.

**Set end position OPEN** **CMD0010**

12. Re-set end position OPEN:
  - 12.1 For large strokes: Set selector switch in position **Local control** (LOCAL) and operate actuator in motor operation via push button  (OPEN) in direction of the end position.  
**Information:** Stop actuator **before** reaching end of travel (press **STOP** push button to avoid damage).
  - 12.2 Engage manual operation.
  - 12.3 Turn handwheel until valve is open.
  - 12.4 Set selector switch to position **0** (OFF).  
→ Display indicates: **Set end pos. OPEN? Yes No**

**Confirm new end position**

13. Press  **Yes** to confirm new end position.  
→ Display indicates: **End pos. OPEN set!**  
→ The right LED is illuminated (standard version) and thus indicates that the end position OPEN setting is complete.



14. Make selection:
  - **Edit** → back to step 12: Set end position OPEN "once again"
  - **Esc** → back to step 4; either set end position CLOSED or exit the menu.

**Information** If an end position cannot be set: Check the type of control unit in actuator.

**9.5. Test run**

Only perform test run only once all settings previously described have been performed.

**9.5.1. Direction of rotation at mechanical position indicator: check**

**NOTICE**

**Valve damage due to incorrect direction of rotation!**

- If the direction of rotation is wrong, switch off immediately (press STOP).
- Eliminate cause, i.e. correct phase sequence for cable set wall bracket.
- Repeat test run.

**Information**

Switch off before reaching the end position.

1. Move actuator manually to intermediate position or to sufficient distance from end position.
2. Switch on actuator in direction CLOSE and observe the direction of rotation on the mechanical position indication:

→ **For self-adjusting mechanical position indication:**

- ↪ The direction of rotation is correct if the actuator operates in direction **CLOSE** and arrow  $\Rightarrow$  turns **clockwise** in direction CLOSE (symbol  $\overline{\text{I}}$ ).

Figure 56: Direction of rotation  $\Rightarrow$  (for “clockwise closing” version)



→ **For mechanical position indication via indicator mark: (not self-adjusting)**

- ↪ The direction of rotation is correct if the actuator operation in direction **CLOSE** and the symbols  $\overline{\text{I}}$  turn **counterclockwise**:

Figure 57: Direction of rotation  $\overline{\text{I}}$  (for “clockwise closing” version)



**9.5.2. Limit switching: check**

1. Set selector switch to position **Local control (LOCAL)**.



2. Operate actuator using push buttons OPEN, STOP, CLOSE.
  - ↳ The limit switching is set correctly if (default indication):
    - the yellow indication light/LED1 is illuminated in end position CLOSED
    - the green indication light/LED5 is illuminated in end position OPEN
    - the indication lights go out after travelling into opposite direction.
  - ↳ The limit switching is set incorrectly if:
    - the actuator comes to a standstill before reaching the end position
    - one of the red indication lights/LEDs is illuminated (torque fault)
    - the status indication **S0007** in the display signals a fault.
3. If the end position setting is incorrect: Reset limit switching.

## 10. Commissioning (settings in the actuator)

Figure 58: Mechanical position indicator (self-adjusting)



The actuator is supplied with the swing angle set in the factory in compliance with the order. The mechanical position indication is set to this swing angle.

If the factory swing angle is changed at a later date, the position indicator must be adapted to the new swing angle:

- Increasing the swing angle: The mechanical position indication automatically adjusts with the subsequent operation.
- Decreasing the swing angle: The mechanical position indication must be newly set (refer to the subsequent chapters).


Figure 59: Mechanical position indication via indicator mark (not self-adjusting)



In case the mechanical position indication integrated within the actuator is NOT self-adjusting, the switch compartment must be opened for mechanical position indication adjustment when commissioning.

**10.1. Switch compartment: open/close**

Figure 60: Open/close switch compartment

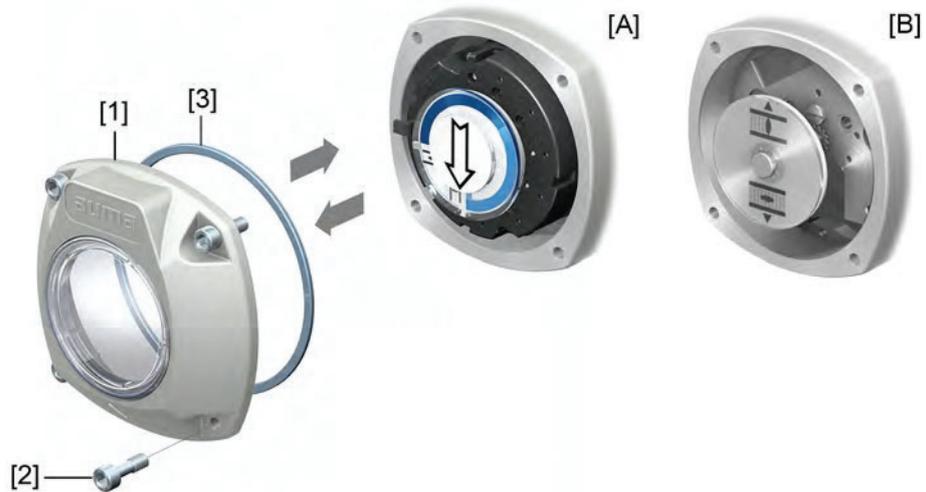

- [A] Mechanical position indication (self-adjusting)
- [B] Mechanical position indication via indicator mark

- |              |   |
|--------------|---|
| <b>Open</b>  | 1. Open Loosen screws [2] and remove cover [1] from the switch compartment.                             |
| <b>Close</b> | 2. Clean sealing faces of housing and cover.  |
|              | 3. Check whether O-ring [3] is in good condition, replace if damaged.                                   |
|              | 4. Apply a thin film of non-acidic grease (e.g. petroleum jelly) to the O-ring and insert it correctly. |
|              | 5. Place cover [1] on switch compartment.   |
|              | 6. Fasten screws [2] evenly crosswise.  |

**10.2. Mechanical position indicator (self-adjusting)**

Figure 61: Mechanical position indicator (self-adjusting)



The self-adjusting mechanical position indicator shows the valve position by means of an arrow  $\Downarrow$ . When correctly set, the arrow points to symbol  $\equiv$  (OPEN) or  $\perp$  (CLOSED) in the end positions.


**Information** The position indications is housed in the actuator switch compartment. Opening the switch compartment for manual setting is only necessary if the gear stage setting must be modified or if the factory settings of predefined end position CLOSED (or OPEN) must be adapted when commissioning.

**10.2.1. Mechanical position indicator: set**

1. Move valve to end position CLOSED.

2. Push both lower discs with the symbols  $\equiv$  (OPEN) and  $\perp$  (CLOSED) towards each other. The disc with the arrow is thereby  $\Rightarrow$  is driven:

Figure 62: Setting position in CLOSED

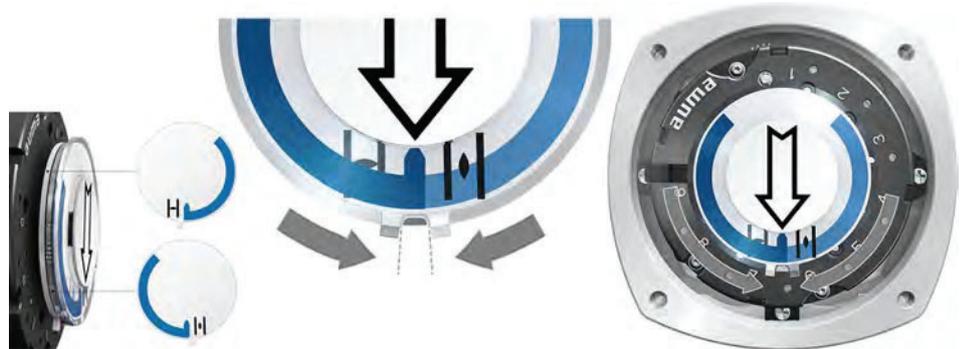

3. Move actuator to end position OPEN.
- The arrow  $\Rightarrow$  rotates in direction OPEN driving the indicator disc with symbol  $\equiv$  (OPEN) until the actuator stops in position OPEN.

Figure 63: Operation in direction OPEN (left) and position OPEN (right)



4. Check settings:
  - The setting of the mechanical position indicator is correct, if the angle between the symbols  $\equiv$  (OPEN) and  $\perp$  (CLOSED) ranges between approx. 120° and 280°.
  - If all three discs are turned at the same time, the indicator can be shifted in steps of 15°. Individual shifts of 5° are possible.
  - If the indicator is rotated too far (more than 280°) or if the angle is too small (below 120°), adapt the gear stage setting to the actuator swing angle. Refer to <Gear stage of the reduction gearing: test/set>.

### 10.2.2. Gear stage of the reduction gearing: test/set

The test/setting is only required if the mechanical position indicator cannot be correctly set or if another swing angle range is ordered subsequently, for example, 120° ±15° instead of 90° ±15° (replacement by the AUMA Service only).

1. Refer to table and check if swing angle corresponds to the setting of the reduction gearing (stages 1– 9).

Table 19:

Actuator swing angle and suitable reduction gearing setting				
	SQ 05.2 / SQ 07.2	SQ 10.2	SQ 12.2	SQ 14.2
30° +/-15°	2	2	3	4
60° +/-15°	3	3	4	5
90° +/-15°	3	3	4	6
120° +/-15°	3	4	5	6
150° +/-15°	4	4	5	6
180° +/-15°	4	4	5	7
210° +/-15°	4	5	6	7
290° +/-70°	5	5	6	7

2. To modify settings, lift the lever at the reduction gearing and engage at the selected stage.

Figure 64: Set reduction gearing



### 10.3. Mechanical position indication via indicator mark (not self-adjusting)

Figure 65: Mechanical position indication via indicator mark



The mechanical position indicator shows the valve position via two indicator discs with symbols  $\overline{\text{I}}$  (OPEN) and  $\text{I}$  (CLOSED). When correctly set, the symbols OPEN/CLOSED point to the indicator mark  $\blacktriangle$  at the cover in the end positions.

#### Setting elements

The position indications is housed in the actuator switch compartment. The switch compartment must be opened to perform any settings. Refer to <Switch compartment: open/close>.

#### 10.3.1. Mechanical position indicator: set

- ✓ If options (e.g. potentiometer, position transmitter) are available: Only set mechanical position indication once all optional equipment have been successfully set.

1. Move valve to end position CLOSED.

2. Turn lower indicator disc until symbol  (CLOSED) is in alignment with the ▲ mark on the cover.



3. Move actuator to end position OPEN.
4. Hold lower indicator disc in position and turn upper disc with symbol  (OPEN) until it is in alignment with the ▲ mark on the cover.



5. Move valve to end position CLOSED again.
6. Check settings:  
If the symbol  (CLOSED) is no longer in alignment with ▲ mark on the cover:  
→ Repeat setting procedure.

### 10.3.2. Gear stage of the reduction gearing: test/set

This test/setting is only required if a different swing angle range was integrated subsequently into the actuator.

**Information** The adjustable swing angle range is available in the order-related technical data sheet (e.g. "90° +/-15°").

1. Pull off indicator disc using a spanner as lever if required.




2. Refer to table and check if swing angle of the actuator corresponds to the setting of the reduction gearing (stages 1– 9).  
 If the setting is **not correct**: continue with step 4.  
 If the setting is correct: continue with step 7.

Table 20:

Actuator swing angle and suitable reduction gearing setting				
	SQ 05.2/SQ 07.2	SQ 10.2	SQ 12.2	SQ 14.2
30° +/-15°	2	2	3	4
60° +/-15°	3	3	4	5
90° +/-15°	3	3	4	6
120° +/-15°	3	4	5	6
150° +/-15°	4	4	5	6
180° +/-15°	4	4	5	7
210° +/-15°	4	5	6	7
290° +/-70°	5	5	6	7

3. Loosen screw [1].
4. Set crown wheel [2] to desired level according to table.
5. Tighten screw [1].
6. Place indicator disc on shaft.
7. Set mechanical position indicator.

Figure 66: Control unit with reduction gearing

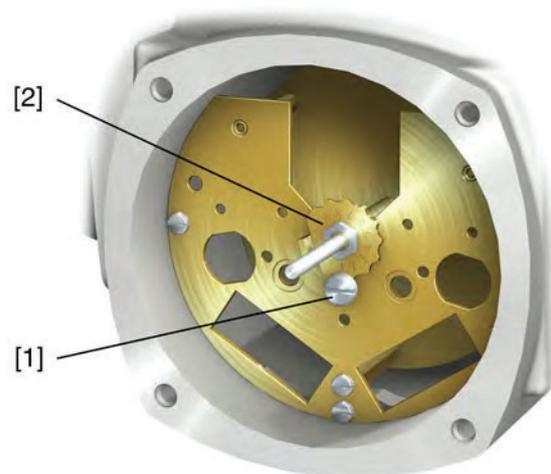

- [1] Screw
- [2] Crown wheel

## 11. Corrective action

### 11.1. Faults during commissioning

Table 21:

Faults during operation/commissioning		
Fault	Description/cause	Remedy
Mechanical position indicator cannot be set.	Reduction gearing is not suitable for actuator swing angle.	Set gear stage of the reduction gearing. The control unit might have to be exchanged.
In spite of correct setting of mechanical limit switching, actuator operates into the valve or actuator end position.	The overrun was not considered when setting the limit switching. The overrun is generated by the inertia of both the actuator and the valve and the delay time of the actuator controls.	<ul style="list-style-type: none"> <li>Determine overrun: Overrun = travel covered from switching off until complete standstill.</li> <li>Set limit switching again considering the overrun. (Turn handwheel back by the amount of the overrun)</li> </ul>

### 11.2. Fault indications and warning indications

**Faults** interrupt or prevent the electrical actuator operation. In the event of a fault, the display backlight is red.

**Warnings** have no influence on the electrical actuator operation. They only serve for information purposes. The display remains white.

**Collective signals** include further indications. They can be displayed via the **Details** push button. The display remains white.

Table 22:

Faults and warnings via status indications in the display		
Indication on display	Description/cause	Remedy
S0001	Instead of the valve position, a status text is displayed.	For a description of the status texts, refer to Manual (Operation and setting).
S0005 Warnings	Collective signal 02: Indicates the number of active warnings.	For indicated value > 0: Press push button <b>Details</b> . For details, refer to <Warnings and Out of specification> table.
S0006 Not ready REMOTE	Collective signal 04: Indicates the number of active signals.	For indicated value > 0: Press push button <b>Details</b> . For details, refer to <Not ready REMOTE and Function check> table.
S0007 Fault	Collective signal 03: Indicates the number of active faults. The actuator cannot be operated.	For indicated value > 0: Press push button <b>Details</b> to display a list of detailed indications. For details, refer to <Faults and Failure> table.
S0008 Out of specification	Collective signal 07: Indication according to NAMUR recommendation NE 107 Actuator is operated outside the normal operation conditions.	For indicated value > 0: Press push button <b>Details</b> . For details, refer to <Warnings and Out of specification> table.
S0009 Function check	Collective signal 08: Indication according to NAMUR recommendation NE 107 The actuator is being worked on; output signals are temporarily invalid.	For indicated value > 0: Press push button <b>Details</b> . For details, refer to <Not ready REMOTE and Function check> table.
S0010 Maintenance required	Collective signal 09: Indication according to NAMUR recommendation NE 107 Recommendation to perform maintenance.	For indicated value > 0: Press push button <b>Details</b> to display a list of detailed indications.
S0011 Failure	Collective signal 10: Indication according to NAMUR recommendation NE 107 Actuator function failure, output signals are invalid	For indicated value > 0: Press push button <b>Details</b> to display a list of detailed indications. For details, refer to <Faults and Failure> table.

Table 23:

Warnings and Out of specification		
Indication on display	Description/cause	Remedy
Config. warning	Collective signal 06: Possible cause: Configuration setting is incorrect. The device can still be operated with restrictions.	Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Internal warning	Collective signal 15: Device warnings The device can still be operated with restrictions.	Press push button  Details to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
24 V DC external	The external 24 V DC voltage supply of the controls has exceeded the power supply limits.	Check 24 V DC voltage supply.
Wrn op.mode run time	Warning on time max. running time/h exceeded	<ul style="list-style-type: none"> <li>Check modulating behaviour of actuator.</li> <li>Check parameter <b>Perm. run time M0356</b>, re-set if required.</li> </ul>
Wrn op.mode starts	Warning on time max. number of motor starts (starts) exceeded	<ul style="list-style-type: none"> <li>Check modulating behaviour of actuator.</li> <li>Check parameter <b>Permissible starts M0357</b>, re-set if required.</li> </ul>
Failure behav. active	The failure behaviour is active since all required setpoints and actual values are incorrect.	Verify signals: <ul style="list-style-type: none"> <li>Setpoint E1</li> <li>Actual value E2</li> <li>Actual process value E4</li> </ul>
Wrn input AIN 1	Warning: Loss of signal analogue input 1	Check wiring.
Wrn input AIN 2	Warning: Loss of signal analogue input 2	Check wiring.
Wrn setpoint position	Warning: Loss of signal setpoint position Possible causes: For an adjusted setpoint range of e.g. 4 – 20 mA, the input signal is 0 (signal loss). For a setpoint range of 0 – 20 mA , monitoring is not possible.	Check setpoint signal.
Op. time warning	The set time (parameter <b>Perm.op. time, manual M0570</b> ) has been exceeded. The preset operating time is exceeded for a complete travel from end position OPEN to end position CLOSED.	The warning indications are automatically cleared once a new operation command is executed. <ul style="list-style-type: none"> <li>Check valve.</li> <li>Check parameter <b>Perm.op. time, manual M0570</b>.</li> </ul>
Wrn controls temp.	Temperature within controls housing too high.	Measure/reduce ambient temperature.
Time not set	Real time clock has not yet been set.	Set time.
RTC voltage	Voltage of the RTC button cell is too low.	Replace button cell.
PVST fault	Partial Valve Stroke Test (PVST) could not be successfully completed.	Check actuator (PVST settings).
PVST abort	Partial Valve Stroke Test (PVST) was aborted or could not be started.	Perform RESET or restart PVST.
Wrn no reaction	No actuator reaction to operation commands within the set reaction time.	<ul style="list-style-type: none"> <li>Check movement at actuator.</li> <li>Check parameter <b>Reaction time M0634</b>.</li> </ul>
Torque wrn OPEN	Limit value for torque warning in direction OPEN exceeded.	Check parameter <b>Wrn torque OPEN M0768</b> , re-set if required.
Torque wrn CLOSE	Limit value for torque warning in direction CLOSE exceeded.	Check parameter <b>Wrn torque CLOSE M0769</b> , re-set if required.
SIL fault <sup>1)</sup>	SIL sub-assembly fault has occurred.	Refer to separate Manual Functional Safety.
PVST required	Execution of PVST (Partial Valve Stroke Tests) is required.	
Maintenance required	Maintenance is required.	
FQM fail safe fault <sup>2)</sup>	FQM fault	Checking and fault remedy are required. Refer to FQM operation instructions.

1) For actuators controls in SIL version

2) For actuators with fail safe unit

Table 24:

Faults and Failure		
Indication on display	Description/cause	Remedy
Configuration error	Collective signal 11: Configuration error has occurred.	Press push button <b>Details</b> to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Config. error REMOTE	Collective signal 22: Configuration error has occurred.	Press push button <b>Details</b> to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Internal error	Collective signal 14: Internal error has occurred.	AUMA service Press push button <b>Details</b> to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Torque fault CLOSE	Torque fault in direction CLOSE	Perform one of the following measures: <ul style="list-style-type: none"> <li>Issue operation command in direction OPEN.</li> <li>Set selector switch to position <b>Local control (LOCAL)</b> and reset fault indication via push button <b>RESET</b>.</li> </ul>
Torque fault OPEN	Torque fault in direction OPEN	Perform one of the following measures: <ul style="list-style-type: none"> <li>Issue operation command in direction CLOSE.</li> <li>Set selector switch to position <b>Local control (LOCAL)</b> and reset fault indication via push button <b>RESET</b>.</li> </ul>
Phase fault	<ul style="list-style-type: none"> <li>When connecting to a 3-ph AC system and with internal 24 V DC supply of the electronics: Phase 2 is missing.</li> <li>When connecting to a 3-ph or 1-ph AC system and with external 24 V DC supply of the electronics: One of the phases L1, L2 or L3 is missing.</li> </ul>	Test/connect phases.
Incorrect phase seq	The phase conductors L1, L2 and L3 are connected in the wrong sequence. Only applicable if connected to a 3-ph AC system.	Correct the sequence of the phase conductors L1, L2 and L3 by exchanging two phases.
Mains quality	Due to insufficient mains quality, the controls cannot detect the phase sequence (sequence of phase conductors L1, L2 and L3) within the pre-set time frame provided for monitoring.	<ul style="list-style-type: none"> <li>Check mains voltage. For 3-phase/1-phase AC current, the permissible variation of the mains voltage is <math>\pm 10\%</math> (option <math>\pm 30\%</math>). The permissible variation of the mains voltage is <math>\pm 5\%</math></li> <li>Check parameter <b>Tripping time M0172</b>, extend time frame if required.</li> </ul>
Thermal fault	Motor protection tripped	<ul style="list-style-type: none"> <li>Cool down, wait.</li> <li>If the fault indication display persists after cooling down:                             <ul style="list-style-type: none"> <li>Set selector switch to position <b>Local control (LOCAL)</b> and reset fault indication via push button <b>RESET</b>.</li> </ul> </li> <li>Check fuses.</li> </ul>
Fault no reaction	No actuator reaction to operation commands within the set reaction time.	Check movement at actuator.
Poti Out of Range	Potentiometer is outside the permissible range.	Check device configuration: Parameter <b>Low limit Usan M0832</b> must be less than parameter <b>Volt.level diff. potent. M0833</b> .
LPV not ready <sup>1)</sup>	LPV: Lift Plug Valve function The master actuator signals a fault	
Wrn input AIN 1	Loss of signal analogue input 1	Check wiring.

Faults and Failure		
Indication on display	Description/cause	Remedy
Wrn input AIN 2	Loss of signal analogue input 2	Check wiring.
Incorrect rotary direct.	Contrary to the configured direction of rotation and the active operation command, the motor turns into the wrong direction.	Check operation command control. For 3-phase AC current mains, activate phase monitoring (parameter <b>Adapt rotary dir.</b> M0171). Check device configuration setting (parameter <b>Closing rotation</b> M0176). To delete the fault indication: Disconnect actuator controls from the mains and perform reboot.
FQM collective fault <sup>2)</sup>	Collective signal 25:	Press push button <b>Details</b> to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).

- 1) For lift plug valve product variant  
2) For actuators equipped with fail safe-unit

Table 25:

Not ready REMOTE and Function check (collective signal 04)		
Indication on display	Description/cause	Remedy
Wrong oper. cmd	Collective signal 13: Possible causes: <ul style="list-style-type: none"> <li>Several operation commands (e.g. OPEN and CLOSE simultaneously, or OPEN and SET-POINT operation simultaneously)</li> <li>A setpoint is present and the positioner is not active</li> </ul>	<ul style="list-style-type: none"> <li>Check operation commands (reset/clear all operation commands and send one operation command only).</li> <li>Set parameter <b>Positioner</b> to <b>Function active</b>.</li> <li>Check setpoint.</li> </ul> Press push button <b>Details</b> to display a list of individual indications. For a description of the individual signals, refer to Manual (Operation and setting).
Sel. sw. not REMOTE	Selector switch is not in position REMOTE.	Set selector switch to position REMOTE.
Service active	Operation via service interface (Bluetooth) and AUMA CDT service software.	Exit service software.
Disabled	Actuator is in operation mode Disabled.	Check setting and status of function <Local controls enable>.
EMCY stop active	The EMERGENCY stop switch has been operated. The motor control power supply (contactors or thyristors) is disconnected.	<ul style="list-style-type: none"> <li>Enable EMERGENCY stop switch.</li> <li>Reset EMERGENCY stop state by means of Reset command.</li> </ul>
EMCY behav. active	Operation mode EMERGENCY is active (EMERGENCY signal was sent). 0 V are applied at the EMERGENCY input.	<ul style="list-style-type: none"> <li>Detect cause for EMERGENCY signal.</li> <li>Verify failure source.</li> <li>Apply +24 V DC at EMERGENCY input.</li> </ul>
I/O interface	The actuator is controlled via the I/O interface (parallel).	Check I/O interface.
Handwheel active	Manual operation is activated.	Start motor operation.
Interlock	An interlock is active.	Check interlock signal.
Interlock by-pass	By-pass function is interlocked.	Check states of main and by-pass valve.
PVST active	Partial Valve Stroke Test (PVST) is active.	Wait until PVST function is complete.
SIL function active <sup>1)</sup>	SIL function is active	

- 1) For actuators controls in SIL version

**11.3. Fuses**

**11.3.1. Fuses within the actuator controls**

**F1/F2**

Table 26:

<b>Primary fuses F1/F2 (for power supply unit)</b>		
G fuse	F1/F2	AUMA art. no.
Size	6.3 x 32 mm	
Reversing contactors Power supply ≤ 500 V	1 A T; 500 V	K002.277
Reversing contactors Power supply > 500 V	2 A FF; 690 V	K002.665
Thyristor units for motor power up to 1.5 kW	1 A T; 500 V	K002.277
Thyristor units for motor power up to 3.0 kW		
Thyristor units for motor power up to 5.5 kW		

**F3 Internal 24 V DC supply**

Table 27:

<b>Secondary fuses F3 (internal 24 V DC supply)</b>		
G fuse according to IEC 60127-2/III	F3	AUMA art. no.
Size	5 x 20 mm	
Voltage output (power supply unit) = 24 V	2.0 A T; 250 V	K006.106
Voltage output (power supply unit) = 115 V	2.0 A T; 250 V	K006.106

**F4**

Table 28:

<b>Secondary fuse F4 (internal AC supply)<sup>1)</sup></b>		
G-fuse according to IEC 60127-2/III	F4	AUMA art. no.
Size	5 x 20 mm	
Voltage output (power supply unit) = 24 V	1.25 A T; 250 V	K001.184
Voltage output (power supply unit) = 115 V	—	—

1) Fuse for: Switch compartment heater, reversing contactor control, PTC tripping device (at 24 V AC only), at 115 V AC also control inputs OPEN, STOP, CLOSE

**F5 Automatic reset fuse as short-circuit protection for external 24 V DC supply for customer (see wiring diagram)**

**11.3.2. Fuse replacement**

**11.3.2.1. Replace fuses F1/F2.**




**Hazardous voltage!**

*Risk of electric shock.*

→ Disconnect device from the mains before opening.

1. Remove electrical connection from actuator controls.  
 → Refer to <Disconnection from the mains> chapter.


Figure 67:

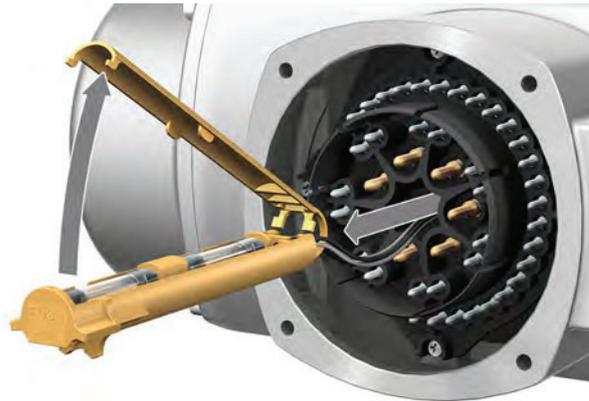

2. Pull fuse holder out of pin carrier, open fuse cover and replace old fuses by new ones.

### 11.3.2.2. Test/replace fuses F3/F4

1. Loosen screws [1] and remove cover [2] on the rear of the actuator controls. Figure 68:

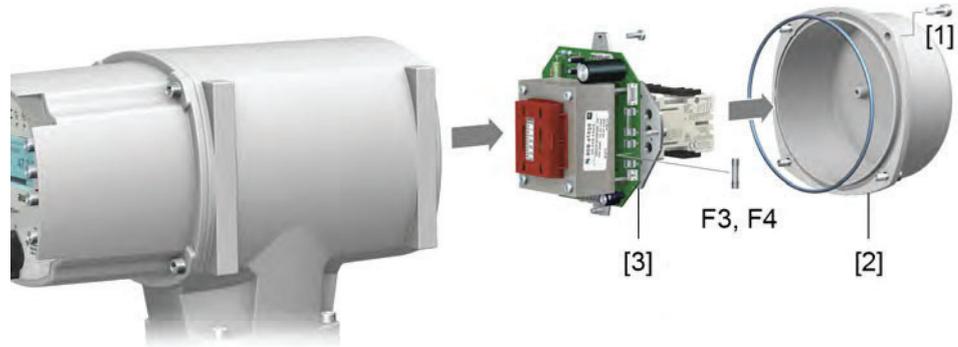

- Check fuses.**
2. The power supply unit has measurement points (solder pins) allowing to perform a resistance (continuity) measurement:

Table 29:

Checking	Measuring points
F3	MTP5 – MTP6
F4	MTP7 – MTP8

3. To replace defective fuses: Carefully loosen power supply unit [3] and pull out. (The fuses are on the equipped part of the power supply board.)

**NOTICE**

**Cable damage due to pinching!**

*Risk of functional failures.*

→ Carefully assemble power supply unit to avoid pinching the cables.

### 11.3.3. Motor protection (thermal monitoring)

In order to protect against overheating and impermissibly high surface temperatures at the actuator, PTC thermistors or thermoswitches are embedded in the motor winding. Motor protection trips as soon as the max. permissible winding temperature has been reached.

The actuator is switched off and the following signals are given:

- LED 3 (motor protection tripped) on the local controls is illuminated.
- The status indication S0007 or S0011 Failure displays a fault.. The fault Details is displayed when selecting Thermal fault.

The motor has to cool down before operation can be resumed.

Depending on the parameter setting (motor protection behaviour), the fault signal is either automatically reset or the the fault signal has to be reset using **RESET** push button with selector switch position **Local operation** (LOCAL).

## 12. Servicing and maintenance



### Damage caused by inappropriate maintenance!

- Servicing and maintenance must be carried out exclusively by suitably qualified personnel having been authorised by the end user or the contractor of the plant. Therefore, we recommend contacting our service.
- Only perform servicing and maintenance tasks when the device is switched off.

### AUMA Service & Support

AUMA offers extensive service such as servicing and maintenance as well as customer product training. For the relevant contact addresses, please refer to <Addresses> in this document or to the Internet ([www.auma.com](http://www.auma.com))

### 12.1. Preventive measures for servicing and safe operation

The following actions are required to ensure safe device operation:

#### 6 months after commissioning and then once a year

- Carry out visual inspection:  
Check cable entries, cable glands, blanking plugs, etc. for correct tightness and sealing.  
Consider torques according to manufacturer's details.
- Check fastening screws between actuator and gearbox/valve for tightness. If required, fasten screws while applying the tightening torques as indicated in chapter <Assembly>.
- When rarely operated: Perform test run.

#### For enclosure protection NEMA type 6P

After submersion:

- Check actuator.
- In case of ingress of water, locate leaks and repair. Dry device correctly and check for proper function.

### 12.2. Maintenance

- Lubrication**
- In the factory, the gear housing is filled with grease.
  - Grease change is performed during maintenance
    - Generally after 4 to 6 years for modulating duty.
    - Generally after 6 to 8 years if operated frequently (open-close duty).
    - Generally after 10 to 12 years if operated rarely (open-close duty).
  - We recommend exchanging the seals when changing the grease.
  - No additional lubrication of the gear housing is required during operation.

### 12.3. Disposal and recycling

Our devices have a long lifetime. However, they have to be replaced at one point in time. The devices have a modular design and may, therefore, easily be separated and sorted according to materials used, i.e.:

- electronic scrap
- various metals
- plastics
- greases and oils

The following generally applies:

- Greases and oils are hazardous to water and must not be released into the environment.
- Arrange for controlled waste disposal of the disassembled material or for separate recycling according to materials.

- Observe the national regulations for waste disposal.

## 13. Technical data

**Information** The following tables include standard and optional features. For detailed information on the customer-specific version, refer to the order-related data sheet. The technical data sheet can be downloaded from the Internet in both German and English at <http://www.auma.com> (please state the order number).

### 13.1. Technical data Part-turn actuator

Features and functions	
Type of duty (Part-turn actuators for open-close duty)	with 3-phase AC motor: Short-time duty S2 - 15 min, classes A and B according to EN 15714-2 with 1-phase AC motor: Short-time duty S2 - 10 min, classes A and B according to EN 15714-2 For nominal voltage, +40 °C ambient temperature and at load with 35 % of the max. torque
Type of duty (Part-turn actuators for modulating duty)	Standard: with 3-phase AC motor: Intermittent duty S4 - 25 %, class C according to EN 15714-2 with 1-phase AC motor: Intermittent duty S4 - 20%, class C according to EN 15714-2 Option: With 3-phase AC motor: Intermittent duty S4 - 50 %, class C according to EN 15714-2 For nominal voltage, +40 °C ambient temperature and at modulating torque load.
Motors	Standard: 3-phase AC asynchronous motor, type IM B9 according to IEC 60034-7, IC410 cooling procedure according to IEC 60034-6 Option: 1-phase AC motor with integral permanent split capacitor (PSC), type IM B9 according to IEC 60034-7, IC410 cooling procedure according to IEC 60034-6
Mains voltage, mains frequency	Refer to motor name plate Permissible variation of mains voltage: ±10 % Permissible variation of mains frequency: ±5 %
Overvoltage category	Category III according to IEC 60364-4-443
Insulation class	Standard: F, tropicalized Option: H, tropicalized
Motor protection	Standard: Thermoswitches (NC) Option: PTC thermistors (according to DIN 44082)
Motor heater (option)	Voltages: 110 – 120 V AC, 220 – 240 V AC or 380 – 480 V AC for 3-phase AC motors Power: 12.5 W
Swing angle	Standard: Adjustable between 75° and < 105° Option: 15° to < 45°, 45° to < 75°, 105° to < 135°, 135° to < 165°, 165° to < 195°, 195° to < 225°
Self-locking	Yes (Part-turn actuators are self-locking if the valve position cannot be changed from standstill while torque acts upon the output drive.)
Manual operation	Manual drive for setting and emergency operation, handwheel does not rotate during electrical operation. Option: Handwheel lockable Handwheel stem extension Power tool for emergency operation with square 30 mm or 50 mm
Indication for manual operation (option)	Indication whether manual operation is active/not active via single switch (1 change-over contact)
Splined coupling for connection to the valve shaft	Standard: Coupling without bore Options: Machined coupling with bore and keyway, square bore or bore with two-flats according to ANSI B17.1
Valve attachment	Dimensions according to MSS SP-101 without spigot

<b>With base and lever (option)</b>	
Swing lever	Made of spheroidal cast iron with two or three bores for fixing a lever arrangement. Considering the installation conditions, the lever may be mounted to the output shaft in any desired position.
Ball joints (option)	Two ball joints matching the lever, including lock nuts and two welding nuts, suitable for pipe according to dimension sheet
Fixing	Base with four holes for fastening screws

<b>Electronic control unit (option, only in combination with actuator controls: AC)</b>	
Non-Intrusive setting	Magnetic limit and torque transmitter (MWG) Turns per stroke: 1 to 500 (standard) or 10 to 5,000 (option)
Position feedback signal	Via actuator controls
Torque feedback signal	Via actuator controls
Mechanical position indicator	Continuous self-adjusting indication with symbols OPEN and CLOSED
Running indication	Blinking signal via actuator controls
Heater in switch compartment	Resistance type heater with 5 W, 24 V AC

<b>Service conditions</b>	
Use	Indoor and outdoor use permissible
Mounting position	Any position
Installation altitude	≤ 2,000 m above sea level > 2,000 m above sea level on request
Ambient temperature	Refer to actuator name plate
Humidity	Up to 100 % relative humidity across the entire permissible temperature range
Enclosure protection according to EN 60529	Standard: NEMA type 6P with AUMA 3-phase AC motor/1-phase AC motor For special motors differing enclosure protection available (refer to motor name plate)
	Option: Terminal compartment additionally sealed against interior of actuator (double sealed)
	According to AUMA definition, enclosure protection NEMA type 6P meets the following requirements: <ul style="list-style-type: none"> <li>• Depth of water: maximum 26 feet head of water</li> <li>• Duration of continuous immersion in water: Max. 96 hours</li> <li>• Up to 10 operations during continuous immersion</li> <li>• Modulating duty is not possible during continuous immersion</li> </ul> For exact version, refer to actuator controls name plate.
Pollution degree according to IEC 60664-1	Pollution degree 4 (when closed), pollution degree 2 (internal)
Vibration resistance according to IEC 60068-2-6	2 g, 10 to 200 Hz (AUMA NORM), 1 g, 10 to 200 Hz (for actuators with AM or AC integral controls) Resistant to vibration during start-up or for failures of the plant. However, a fatigue strength may not be derived from this. Valid for part-turn actuators in version AUMA NORM and in version with integral actuator controls, each with AUMA plug/socket connector. Not valid in combination with gearboxes.
Corrosion protection	Standard: KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution.
	Option: KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution. KX-G: Same as KX, however aluminium-free version (outer parts)
Coating	Double layer powder coating Two-component iron-mica combination
Colour	Standard: AUMA silver-grey (similar to RAL 7037)
	Option: Available colours on request
Lifetime	AUMA part-turn actuators meet or even exceed the lifetime requirements of EN 15714-2. Detailed information can be provided on request.

<b>Further information</b>	
EU Directives	Electromagnetic Compatibility (EMC): (2014/30/EU) Low Voltage Directive: (2014/35/EU) Machinery Directive: (2006/42/EC)

Technical data for handwheel activation switches	
Mechanical lifetime	10 <sup>6</sup> starts
Silver plated contacts:	
U min.	12 V DC
U max.	250 V AC
I max. AC current	3 A at 250 V (inductive load, cos phi = 0.8)
I max. DC current	3 A at 12 V (resistive load)

### 13.2. Technical data Actuator controls

Features and functions	
Power supply	Refer to name plate Permissible variation of mains voltage: ±10 % Permissible variation of mains voltage: ±30 % (optional) Permissible variation of mains frequency: ±5 %
External supply of the electronics (option)	24 V DC +20 %/-15 % Current consumption: Basic version approx. 250 mA, with options up to 500 mA External power supply must have reinforced insulation against mains voltage in accordance with IEC 61010-1 and may only be supplied by a circuit limited to 150 VA in accordance with IEC 61010-1.
Current consumption	Current consumption of the actuator controls depending on mains voltage: For permissible variation of mains voltage of ±10 %: <ul style="list-style-type: none"> <li>• 100 to 120 V AC = max. 740 mA</li> <li>• 208 to 240 V AC = max. 400 mA</li> <li>• 380 to 500 V AC = max. 250 mA</li> <li>• 515 to 690 V AC = max. 200 mA</li> </ul> For permissible variation of mains voltage of ±30 %: <ul style="list-style-type: none"> <li>• 100 to 120 V AC = max. 1,200 mA</li> <li>• 208 to 240 V AC = max. 750 mA</li> <li>• 380 to 500 V AC = max. 400 mA</li> <li>• 515 to 690 V AC = max. 400 mA</li> </ul>
Overvoltage category	Category III according to IEC 60364-4-443
Rated power	The actuator controls are designed for the nominal motor power, refer to motor name plate
Switchgear	Standard: Reversing contactors (mechanically and electrically interlocked) for AUMA power classes A1/A2 Options: Reversing contactors (mechanically and electrically interlocked) for AUMA power class A3 Thyristor unit for mains voltage up to 500 V AC (recommended for modulating actuators) for AUMA power classes B1, B2 and B3  The reversing contactors are designed for a lifetime of 2 million starts. For applications requiring a high number of starts, we recommend the use of thyristor units. For the assignment of AUMA power classes, please refer to Electrical data on actuator
Control inputs	6 digital inputs: OPEN, STOP, CLOSE, EMERGENCY (via opto-isolator, thereof OPEN, STOP, CLOSE with one common and EMERGENCY without common, respect minimum pulse duration for modulating actuators).
Control voltage/current consumption for control inputs	Standard: 100 – 120 V AC, current consumption : approx. 15 mA per input Options: 48 V DC, current consumption: approx. 7 mA per input 60 V DC, current consumption: approx. 9 mA per input 100 – 125 V DC, current consumption : approx. 15 mA per input 24 V DC, current consumption: approx. 10 mA per input  All input signals must be supplied with the same potential.

Features and functions		
Status signals (output signals)	Standard:	<ul style="list-style-type: none"> <li>• 6 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 5 change-over contacts with one common, max. 250 V AC, 1 A (resistive load), 1 potential-free change-over contact, max. 250 V AC, 5 A (resistive load)</li> </ul> </li> </ul>
	Options:	<ul style="list-style-type: none"> <li>• 6 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 5 potential-free NO contacts with one common, max. 250 V AC, 1 A (resistive load)</li> <li>Default configuration: End position CLOSED, end position OPEN, selector switch REMOTE, SIL function active, SIL fault, torque fault CLOSE, torque fault OPEN</li> <li>- 1 potential-free change-over contact, max. 250 V AC, 5 A (resistive load)</li> <li>Default configuration: Collective fault signal (torque fault, phase failure, motor protection tripped)</li> </ul> </li> <li>• Analogue output signal for position feedback                             <ul style="list-style-type: none"> <li>- Galvanically isolated position feedback 0/4 – 20 mA (load max. 500 Ω)</li> </ul> </li> <li>• 12 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 10 potential-free NO contacts, 5 with one common each, max. 250 V AC, 1 A (resistive load), 2 potential-free change-over contacts, max. 250 V AC, 5 A (resistive load)</li> </ul> </li> <li>• 6 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 6 potential-free change-over contacts without one common, per contact max. 250 V AC, 5 A (resistive load)</li> </ul> </li> <li>• 10 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 10 potential-free change-over contacts without one common, per contact max. 250 V AC, 5 A (resistive load)</li> </ul> </li> <li>• 6 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 4 mains failure proof potential-free NO contacts with one common, max. 250 V AC, 1 A (resistive load), 1 potential-free NO contact, max. 250 V AC, 1 A (resistive load), 1 potential-free change-over contact, max. 250 V AC, 5 A (resistive load)</li> </ul> </li> <li>• 6 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 4 mains failure proof potential-free NO contacts, max. 250 V AC, 5 A (resistive load), 2 potential-free change-over contacts, max. 250 V AC, 5 A (resistive load),</li> </ul> </li> <li>• 12 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 8 mains failure proof potential-free NO contacts, max. 250 V AC, 1 A (resistive load), 2 potential-free NO contacts, max. 250 V AC, 1 A (resistive load), 2 potential-free change-over contacts, max. 250 V AC, 5 A (resistive load)</li> </ul> </li> <li>• 12 programmable output contacts:                             <ul style="list-style-type: none"> <li>- 8 mains failure proof potential-free NO contacts, max. 250 V AC, 5 A (resistive load), 4 potential-free change-over contacts, max. 250 V AC, 5 A (resistive load),</li> </ul> </li> </ul> <p>All output signals must be supplied with the same potential.</p>
Voltage output	Standard:	Auxiliary voltage 115 V AC: max. 30 mA for supply of control inputs, galvanically isolated from internal voltage supply (Not possible in combination with PTC tripping device)
	Option:	Auxiliary voltage 24 V DC: max. 100 mA for supply of control inputs, galvanically isolated from internal voltage supply.
Analogue output (option)	2 Analog outputs: With position transmitter option: Output of travel and torque as continuous values between 0/4 and 20 mA	
Analogue input (option)	2 Analog inputs: With positioner/process controller option: Input of actual position value/actual process value as continuous values between 0/4 and 20 mA	

Features and functions	
Local controls	<p>Standard:</p> <ul style="list-style-type: none"> <li>Selector switch: LOCAL - OFF - REMOTE (lockable in all three positions)</li> <li>Push buttons OPEN, STOP, CLOSE, RESET                             <ul style="list-style-type: none"> <li>Local STOP The actuator can be stopped via push button STOP of local controls if the selector switch is in position REMOTE. (Not activated when leaving the factory.)</li> </ul> </li> <li>Special colours for the indication lights:                             <ul style="list-style-type: none"> <li>End position CLOSED (green), torque fault CLOSE (blue), torque fault OPEN (yellow), motor protection tripped (violet), end position OPEN (red)</li> </ul> </li> <li>Graphic LC display: illuminated</li> </ul> <p>Option:</p> <ul style="list-style-type: none"> <li>6 indication lights:                             <ul style="list-style-type: none"> <li>End position and running indication CLOSED (yellow), torque fault CLOSE (red), motor protection tripped (red), torque fault OPEN (red), end position and running indication OPEN (green), Bluetooth (blue)</li> </ul> </li> </ul>
Bluetooth Communication interface	<p>Bluetooth class II chip, version 2.1: With a range up to 10 m in industrial environments, supports the SPP Bluetooth profile (Serial Port Profile).</p> <p>Required accessories:</p> <ul style="list-style-type: none"> <li>AUMA CDT (Commissioning and Diagnostic Tool for Windows-based PC)</li> <li>AUMA Assistant App (Commissioning and Diagnostic Tool for Android devices)</li> </ul>
Application functions	<p>Standard:</p> <ul style="list-style-type: none"> <li>Selectable type of seating, limit or torque seating for end position OPEN and end position CLOSED</li> <li>Torque by-pass: Adjustable duration (with adjustable peak torque during start-up time)</li> <li>Start and end of stepping mode as well as ON and OFF times can be set individually for directions OPEN and CLOSE, 1 to 1,800 seconds</li> <li>Any 8 intermediate positions: can be set between 0 and 100 %, reaction and signal behaviour programmable</li> <li>Running indication blinking: can be set</li> </ul> <p>Options:</p> <ul style="list-style-type: none"> <li>Positioner                             <ul style="list-style-type: none"> <li>Position setpoint via analog input 0/4 input 0/4 – 20 mA</li> <li>Programmable behavior on loss of signal</li> <li>Automatic adaptation of dead band (adaptive behaviour selectable)</li> <li>Split range operation</li> <li>MODE input for selecting between OPEN-CLOSE and setpoint control</li> </ul> </li> <li>PID process controller: with adaptive positioner, via 0/4 – 20 mA analogue inputs for process setpoint and actual process value</li> <li>Automatic deblocking: Up to 5 operation trials, travel time in opposite direction can be set</li> <li>Static and dynamic torque recording for both rotation directions with torque measurement flange as additional accessory</li> </ul>
Safety functions	<p>Standard:</p> <ul style="list-style-type: none"> <li>EMERGENCY operation (programmable behaviour)                             <ul style="list-style-type: none"> <li>Digital input: Low active</li> <li>Reaction can be selected: Stop, run to end position CLOSED, run to end position OPEN, run to intermediate position</li> <li>Torque monitoring can be by-passed during EMERGENCY operation</li> <li>Thermal protection can be by-passed during EMERGENCY operation (only in combination with thermoswitch within actuator, not with PTC thermistor).</li> </ul> </li> </ul> <p>Options:</p> <ul style="list-style-type: none"> <li>Enabling local controls via digital input Enable LOCAL. Thus, actuator operation can be enabled or disabled via push buttons on the local controls.</li> <li>Interlock for main/by-pass valve: Enabling the operation commands OPEN or CLOSE via two digital inputs</li> <li>EMERGENCY Stop push button (latching): interrupts electrical operation, irrespective of the selector switch positions.</li> <li>PVST (Partial Valve Stroke Test): programmable to check the function of both actuator and actuator controls: Direction, stroke, operation time, reversing time</li> </ul>
Monitoring functions	<ul style="list-style-type: none"> <li>Valve overload protection: adjustable, results in switching off and generates fault signal</li> <li>Motor temperature monitoring (thermal monitoring): results in switching off and generates fault indication</li> <li>Monitoring the heater within actuator: generates warning signal</li> <li>Monitoring of permissible on-time and number of starts: adjustable, generates warning signal</li> <li>Operation time monitoring: adjustable, generates warning signal</li> <li>Phase failure monitoring: results in switching off and generates fault signal</li> <li>Automatic correction of rotation direction upon wrong phase sequence (3-ph AC current)</li> </ul>

Features and functions					
Diagnostic functions	<ul style="list-style-type: none"> <li>• Electronic device ID with order and product data</li> <li>• Logging of operating data: A resettable counter and a lifetime counter each for::                             <ul style="list-style-type: none"> <li>- Motor running time, number of starts, torque switch trippings in end position CLOSED, limit switch trippings in end position CLOSED, torque switch trippings in end position OPEN, limit switch trippings in end position OPEN, torque faults CLOSE, torque faults OPEN, motor protection trippings</li> </ul> </li> <li>• Time-stamped event report with history for setting, operation and faults</li> <li>• Status signals according to NAMUR recommendation NE 107: "Failure", "Function check", "Out of specification", "Maintenance required"</li> <li>• Torque characteristics (for version with MWG in actuator):                             <ul style="list-style-type: none"> <li>- 3 torque characteristics (torque-travel characteristic) for opening and closing directions can be saved separately.</li> <li>- Torque characteristics stored can be shown on the display.</li> </ul> </li> </ul>				
Motor protection evaluation	<table border="0"> <tr> <td>Standard:</td> <td>Monitoring the motor temperature in combination with thermostiches within actuator motor</td> </tr> <tr> <td>Options:</td> <td> <ul style="list-style-type: none"> <li>• Thermal overload relay in controls combined with thermal switches within actuator</li> <li>• PTC tripping device in combination with PTC thermistors within actuator motor</li> </ul> </td> </tr> </table>	Standard:	Monitoring the motor temperature in combination with thermostiches within actuator motor	Options:	<ul style="list-style-type: none"> <li>• Thermal overload relay in controls combined with thermal switches within actuator</li> <li>• PTC tripping device in combination with PTC thermistors within actuator motor</li> </ul>
Standard:	Monitoring the motor temperature in combination with thermostiches within actuator motor				
Options:	<ul style="list-style-type: none"> <li>• Thermal overload relay in controls combined with thermal switches within actuator</li> <li>• PTC tripping device in combination with PTC thermistors within actuator motor</li> </ul>				
ACV 01.2 heating system (option)	Temperature versions below –30 °C incl. heating system for connection to external power supply 230 V AC or 115 V AC or internal version 400 V AC				
Electrical connection	<table border="0"> <tr> <td>Standard:</td> <td>AUMA plug/socket connector with screw-type connection</td> </tr> <tr> <td>Option:</td> <td>Gold-plated control plug (sockets and plugs)</td> </tr> </table>	Standard:	AUMA plug/socket connector with screw-type connection	Option:	Gold-plated control plug (sockets and plugs)
Standard:	AUMA plug/socket connector with screw-type connection				
Option:	Gold-plated control plug (sockets and plugs)				
Threads for cable entries	<table border="0"> <tr> <td>Standard:</td> <td>Metric threads</td> </tr> <tr> <td>Options:</td> <td> <ul style="list-style-type: none"> <li>• NPT threads, Pg threads, G-threads</li> <li>• Terminals or crimp-type connection</li> </ul> </td> </tr> </table>	Standard:	Metric threads	Options:	<ul style="list-style-type: none"> <li>• NPT threads, Pg threads, G-threads</li> <li>• Terminals or crimp-type connection</li> </ul>
Standard:	Metric threads				
Options:	<ul style="list-style-type: none"> <li>• NPT threads, Pg threads, G-threads</li> <li>• Terminals or crimp-type connection</li> </ul>				
Wiring diagram	Refer to name plate				

Further options for Non-intrusive version with MWG in the actuator	
Setting of limit and torque switching via local controls	
Torque feedback signal	Galvanically isolated analog output 0/4 output 0/4 – 20 mA (load max. 500 Ω).

Service conditions					
Use	Indoor and outdoor use permissible				
Mounting position	Any position				
Installation altitude	≤ 2 000 m above sea level > 2,000 m above sea level, on request				
Ambient temperature	Refer to name plate of actuator controls				
Humidity	Up to 100 % relative humidity across the entire permissible temperature range				
Enclosure protection according to EN 60529	<table border="0"> <tr> <td>Standard:</td> <td>NEMA type 6P</td> </tr> <tr> <td>Option:</td> <td>Terminal compartment additionally sealed against interior of actuator controls (double sealed)</td> </tr> </table> <p>According to AUMA definition, enclosure protection IP68 meets the following requirements:</p> <ul style="list-style-type: none"> <li>• Depth of water: Maximum 8 m head of water</li> <li>• Duration of continuous immersion in water: Maximum 96 hours</li> <li>• Up to 10 operations during continuous immersion</li> <li>• Modulating duty is not possible during continuous immersion.</li> </ul> <p>For exact version, refer to actuator controls name plate.</p>	Standard:	NEMA type 6P	Option:	Terminal compartment additionally sealed against interior of actuator controls (double sealed)
Standard:	NEMA type 6P				
Option:	Terminal compartment additionally sealed against interior of actuator controls (double sealed)				
Pollution degree according to IEC 60664-1	Pollution degree 4 (when closed), pollution degree 2 (internal)				
Corrosion protection	<table border="0"> <tr> <td>Standard:</td> <td>KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution.</td> </tr> <tr> <td>Option:</td> <td>KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution.</td> </tr> </table>	Standard:	KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution.	Option:	KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution.
Standard:	KS: Suitable for use in areas with high salinity, almost permanent condensation, and high pollution.				
Option:	KX: Suitable for use in areas with extremely high salinity, permanent condensation, and high pollution.				

Technical data


Service conditions	
Coating	Double layer powder coating Two-component iron-mica combination
Colour	Standard: AUMA silver-grey (similar to RAL 7037)
	Option: Available color on request
Accessories	
Wall bracket	For actuator controls mounted separately from the actuator, including plug/socket connector. Connecting cable on request. Recommended for high ambient temperatures, difficult access, or in case of heavy vibration during service. Cable length between actuator and actuator controls is max. 100 m (Not suitable for version with potentiometer in the actuator). Instead of the potentiometer, the actuator has to be equipped with an electronic position transmitter. (MWG requires a separate data cable.)
Programming software	AUMA CDT (Commissioning and Diagnostic Tool for Windows-based PC) AUMA Assistant App (Commissioning and Diagnostic Tool for Android devices)
Torque measurement flange DMF	Accessory for torque measurement for SA/SAR 07.2 – SA/SAR 16.2
Further information	
Weight	Approx. 7 kg (with AUMA plug/socket connector)
EU Directives	Electromagnetic Compatibility (EMC): (2014/30/EU) Low Voltage Directive: (2014/35/EU) Machinery Directive: (2006/42/EC)



Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type	Ref. no.	Designation	Type
001.0	Housing	Sub-assembly	553.0	Mechanical position indicator	Sub-assembly
005.0	Drive shaft	Sub-assembly	554.0	Socket carrier for motor plug/socket connector with cable harness	Sub-assembly
005.1	Motor coupling	Sub-assembly	556.0	Potentiometer as position transmitter	Sub-assembly
005.3	Manual drive coupling		556.1	Potentiometer without slip clutch	Sub-assembly
006.0	Worm wheel	Sub-assembly	557.0	Heater	Sub-assembly
009.0	Manual gearing	Sub-assembly	558.0	Blinker transmitter including pins at wires (without impulse disc and insulation plate)	Sub-assembly
017.0	Torque lever		559.0–1	Electromechanical control unit with switches, including torque switching heads	Sub-assembly
018.0	Gear segment	Sub-assembly	559.0–2	Electronic control unit with magnetic limit and torque transmitter (MWG)	Sub-assembly
019.0	Crown wheel		560.0–1	Switch stack for direction OPEN	Sub-assembly
022.0	Drive pinion II for torque switching	Sub-assembly	560.0–2	Switch stack for direction CLOSE	Sub-assembly
023.0	Output drive wheel for limit switching	Sub-assembly	560.1	Switch for limit/torque	Sub-assembly
024.0	Drive wheel for limit switching	Sub-assembly	560.2–1	Switch case for direction OPEN	
025.0	Locking plate	Sub-assembly	560.2–2	Switch case for direction CLOSE	
058.0	Cable for protective earth	Sub-assembly	566.0	RWG position transmitter	Sub-assembly
070.0	Motor (incl. ref. no. 079.0)	Sub-assembly	566.1	Potentiometer for RWG without slip clutch	Sub-assembly
079.0	Planetary gearing for motor drive	Sub-assembly	566.2	Position transmitter board for RWG	Sub-assembly
155.0	Reduction gearing	Sub-assembly	566.3	Cable set for RWG	Sub-assembly
500.0	Cover	Sub-assembly	567.1	Slip clutch for potentiometer	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly	583.0	Motor coupling on motor shaft	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly	583.1	Pin for motor coupling	Sub-assembly
503.0	Socket for controls	Sub-assembly	584.0	Retaining spring for motor coupling	
504.0	Socket for motor		596.0	Output drive flange with end stop	Sub-assembly
505.0	Pin for controls	Sub-assembly	612.0	Screw plug for end stop	Sub-assembly
506.0	Pin for motor	Sub-assembly	614.0	EWG position transmitter	Sub-assembly
507.0	Cover for electrical connection	Sub-assembly	627.0	MWG 05.03 cover	
525.0	Coupling	Sub-assembly	629.0	Pinion shaft	Sub-assembly
539.0	Screw plug	Sub-assembly	S1	Seal kit, small	Set
542.0	Handwheel with ball handle		S2	Seal kit, large	Set

**14.2. AC 01.2 actuator controls with S electrical connection**

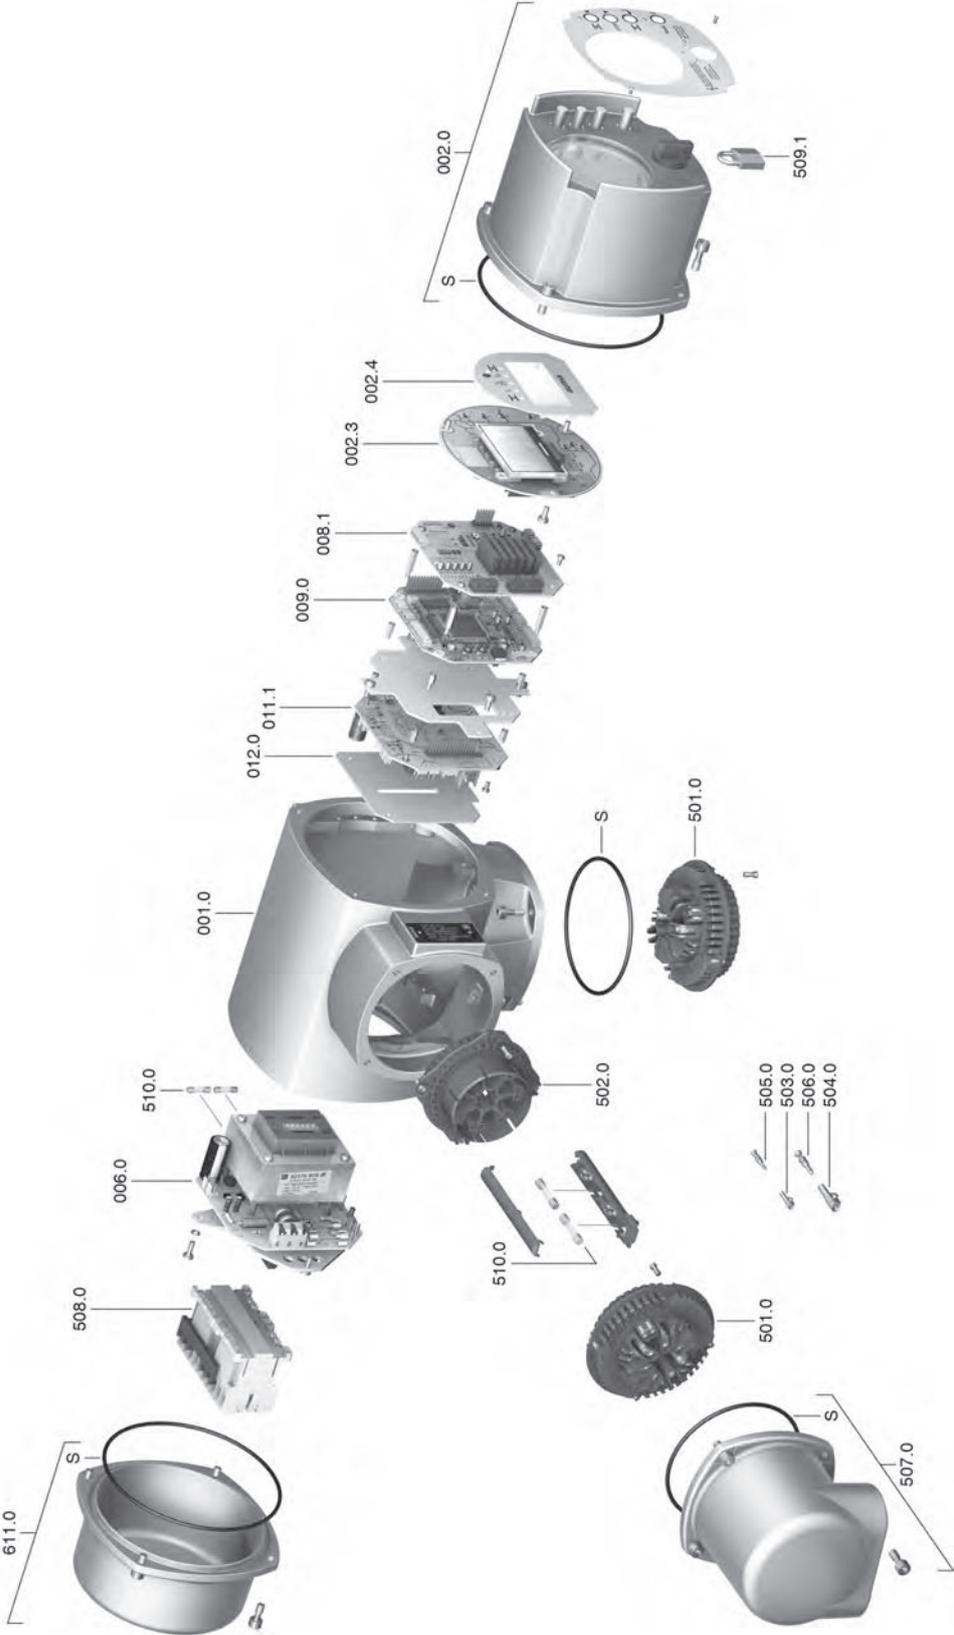

Please state device type and our order number (see name plate) when ordering spare parts. Only original AUMA spare parts should be used. Failure to use original spare parts voids the warranty and exempts AUMA from any liability. Representation of spare parts may slightly vary from actual delivery.

Ref. no.	Designation	Type
001.0	Housing	Sub-assembly
002.0	Local controls	Sub-assembly
002.3	Local controls board	Sub-assembly
002.4	Face plate for display	
006.0	Power supply unit	Sub-assembly
008.1	Fieldbus board	
009.0	Logic board	Sub-assembly
011.1	Relay board	Sub-assembly
012.0	Option board	
050.1	Fieldbus connection board	Sub-assembly
500.0	Cover	Sub-assembly
501.0	Socket carrier (complete with sockets)	Sub-assembly
502.0	Pin carrier without pins	Sub-assembly
503.0	Socket for controls	Sub-assembly
504.0	Socket for motor	Sub-assembly
505.0	Pin for controls	Sub-assembly
506.0	Pin for motor	Sub-assembly
507.0	Electrical connection for fieldbus without connection board (050.1)	Sub-assembly
507.1	Frame for electrical connection	Sub-assembly
508.0	Switchgear	Sub-assembly
509.1	Padlock	Sub-assembly
510.0	Fuse kit	Kit
611.0	Cover	Sub-assembly
S	Seal kit	Set

## 15. Certificates

**Information** Certificates are valid as from the indicated date of issue. Subject to changes without notice. The latest versions are attached to the device upon delivery and also available for download at <http://www.auma.com>.

### 15.1. Declaration of Incorporation and EU Declaration of Conformity

AUMA Riester GmbH & Co. KG  
Aumastr. 1  
79379 Müllheim, Germany  
[www.auma.com](http://www.auma.com)

Tel +49 7631 809-0  
Fax +49 7631 809-1250  
[info@auma.com](mailto:info@auma.com)



#### EU Declaration of Conformity / Declaration of Incorporation in compliance with Machinery Directive

for electric actuators of the following type designations:

**SA 07.2, SA 07.6, SA 10.2, SA 14.2, SA 14.6, SA 16.2,  
SAR 07.2, SAR 07.6, SAR 10.2, SAR 14.2, SAR 14.6, SAR 16.2  
SQ 05.2, SQ 07.2, SQ 10.2, SQ 12.2, SQ 14.2  
SQR 05.2, SQR 07.2, SQR 10.2, SQR 12.2, SQR 14.2**

in versions:

**AUMA NORM  
AUMA SEMIPACT SEM 01.1, SEM 02.1  
AUMA MATIC AM 01.1, AM 02.1  
AUMATIC AC 01.2**

AUMA Riester GmbH & Co. KG as manufacturer declare herewith, that the above mentioned actuators meet the basic requirements of the following Directives:

**2014/30/EU (EMC Directive)  
2006/42/EC (Machinery Directive)**

The following harmonised standards in terms of the specified directives have been applied:

**Directive 2014/30/EU**

EN 61000-6-4:2007 / A1:2011  
EN 61000-6-2:2005 / AC:2005

**Directive 2006/42/EC**

EN ISO 12100:2010  
EN ISO 5210:1996

AUMA actuators are designed for the operation of industrial valves. Putting into service is prohibited until the final machinery has been declared in conformity with the provisions of Directive 2006/42/EC.

The following basic requirements in compliance with Annex I of the Directive are respected:

Appendix I, articles 1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.6, 1.3.1, 1.3.7, 1.5.1, 1.6.3, 1.7.1, 1.7.3, 1.7.4

The manufacturer shall be obligated to electronically submit the documents for the partly completed machinery to national authorities on request. The relevant technical documentation pertaining to the machinery described in Annex VII, part B has been prepared.

Authorised person for documentation: Peter Malus, Aumastrasse 1, 79379 Müllheim, Germany

Furthermore, the essential health and safety requirements in compliance with Directive 2014/35/EU (Low Voltage Directive) are fulfilled by applying the following harmonised standards, as far as applicable for the products:

EN 60204-1:2006 / A1:2009 / AC:2010  
EN 60034-1:2010 / AC:2010  
EN 50178:1997

Müllheim, 2016-04-01

  
H. Newerla, Managing Director

This declaration does not contain any guarantees. The safety instructions in product documentation supplied with the devices must be observed. Non-concerted modification of the devices voids this declaration.

Y006.332/003/en/1.16

## Index

### A

Accessories (electrical connection)	27
Actual value - indication on display	39
Actuator controls terminal plan	9
Actuator operation at the local controls	30
Actuator operation from remote	31
Actuator terminal plan	9, 10
Ambient temperature	8, 9, 71, 75
Analogue signals	45
Applications	5
Assembly	16
Assistant App	11
AUMA Assistant App	11

### C

Cables	22
Cable set	27
Certificates	81
Coating	76
Colour	76
Commissioning	5
Commissioning (indications on display)	37
Connecting cable	27
Connecting cables	22
Control	9, 11
Control inputs Potential	22
Control voltage	11
Corrective action	61
Corrosion protection	14, 71, 75
Coupling	17
Current consumption	21
Current type	21

### D

Data Matrix code	11
Declaration of Incorporation	81
Device type	10
Digital outputs	45
Direct display via ID	33
Direction of rotation	53
Directives	5
Display (indications)	37
Disposal	68
Double sealed	28

### E

Earth connection	29
Electrical connection	21
EMC	22
Enclosure protection	8, 9, 9, 71, 75
End stops	46
Error - indication on display	37
EU Declaration of Conformity	81

### F

Failure - indication on display	42
Fault	61
Fault - indication on display	41
Features and functions	75
Flange size	10
Frequency range	21
Function check - indication on display	41
Fuses	65

### H

Handwheel	16
Heating system	22
Humidity	71

### I

Identification	8
Indication lights	43
Indications	37
Indications on display	37
Indicator disc	43, 56, 58
Indicator mark	44
Input current	11
Input signal	11
Input signals Potential	22
Inspection certificate	10
Installation altitude	75
Insulation class	9
Intermediate frame	28
Intermediate position indication via LEDs	43
Intrusive	11

### L

Language in the display	35
LEDs (indication lights)	43
Local actuator operation	30
Local control	30
Local controls	30
Local setting	32
Lubrication	68

<b>M</b>		<b>R</b>	
Main menu	33	Range of application	5
Mains frequency	9, 9	Rated current	9
Mains voltage	9, 9, 21	Rated power	9
Maintenance	5, 68, 68	Recycling	68
Maintenance required - indication on display	42	Reduction gearing	59
Manual operation	30	Remote actuator operation	31
Mechanical position indicator	43, 44, 56, 58	Residual current device (RCD)	22
Mechanical position indicator (self-adjusting)	56	Running indication	43, 44
Menu navigation	32	<b>S</b>	
Motor operation	30	Safety instructions	5
Motor protection	9	Safety instructions/warnings	5
Motor type	9	Safety measures	22
Mounting position	75	Safety standards	22
<b>N</b>		Self-retaining	31
Name plate	8	Serial number	8, 9, 10
Non-Intrusive	11	Service	68
Not ready REMOTE - indication on display	41	Servicing	68
<b>O</b>		Setpoint - indication on display	39
Operating time	8	Short-circuit protection	21
Operation	5, 30	Signals	45
Operation commands - indications on display	39	Signals (analogue)	45
Order number	8, 9, 10	Size	10
Out of specification - indication on display	41	Spare parts	77
Output contacts	45	Speed	9
Output signals	45	Standards	5
Output signals Potential	22	Status menu	33
Overvoltage category	72	Status signals	45
<b>P</b>		Status signals Potential	22
Packaging	15	Storage	14
Parking frame	28	Supply networks	21
Password	34	Support	68
Password change	35	<b>T</b>	
Password entry	34	Technical data	70
Positioner - indication on display	39	Temperature protection	9
Position indicator	43, 44, 56, 58	Terminal plan	21
Position transmitter	10	Test run	52
Power class	9	Torque - indication on display	38
Power class for switchgear	10	Torque range	8
Power factor	9	Torque switching	49
Power supply of electronics	21	Transport	13
Protection on site	21	Type (device type)	10
Protective measures	5	Type designation	8, 9
Push-to-run operation	31	Type of current	9
<b>Q</b>		Type of duty	9
Qualification of staff	5	Type of lubricant	8
		Type of networks	21
		<b>U</b>	
		User level	34
		<b>V</b>	
		Valve position - indication on display	38
		Voltage range	21

Index

**W**

Wall bracket	27
Warnings - indication on display	40
Wiring diagram	10, 21

**Y**

Year of manufacture	10
Year of production	10

## Europe

### AUMA Riester GmbH & Co. KG

Location Muellheim  
**DE 79373 Muellheim**  
 Tel +49 7631 809 - 0  
 info@auma.com  
 www.auma.com

Location Ostfildern-Nellingen  
**DE 73747 Ostfildern**  
 Tel +49 711 34803 - 0  
 riester@auma.com

Service-Center Bayern  
**DE 85386 Eching**  
 Tel +49 81 65 9017- 0  
 Service.SCB@auma.com

Service-Center Köln  
**DE 50858 Köln**  
 Tel +49 2234 2037 - 900  
 Service@sck.auma.com

Service Center Magdeburg  
**DE 39167 Niederndodeleben**  
 Tel +49 39204 759 - 0  
 Service@scm.auma.com

AUMA-Armaturentriebe Ges.m.b.H.  
**AT 2512 Tribuswinkel**  
 Tel +43 2252 82540  
 office@auma.at  
 www.auma.at

AUMA BENELUX B.V. B. A.  
**BE 8800 Roeselare**  
 Tel +32 51 24 24 80  
 office@auma.be  
 www.auma.nl

ProStream Group Ltd.  
**BG 1632 Sofia**  
 Tel +359 2 9179-337  
 valtchev@prostream.bg  
 www.prostream.bg

OOO "Dunkan-Privod"  
**BY 220004 Minsk**  
 Tel +375 29 6945574  
 belarus@auma.ru  
 www.zatvor.by

AUMA (Schweiz) AG  
**CH 8965 Berikon**  
 Tel +41 566 400945  
 RettichP.ch@auma.com

AUMA Servopohony spol. s.r.o.  
**CZ 250 01 Brandýs n.L.-St.Boleslav**  
 Tel +420 326 396 993  
 auma-s@auma.cz  
 www.auma.cz

IBEROPLAN S.A.  
**ES 28027 Madrid**  
 Tel +34 91 3717130  
 iberoplan@iberoplan.com

AUMA Finland Oy  
**FI 02230 Espoo**  
 Tel +358 9 5840 22  
 auma@auma.fi  
 www.auma.fi

AUMA France S.A.R.L.  
**FR 95157 Taverny Cedex**  
 Tel +33 1 39327272  
 info@auma.fr  
 www.auma.fr

AUMA ACTUATORS Ltd.  
**GB Clevedon, North Somerset BS21 6TH**  
 Tel +44 1275 871141  
 mail@auma.co.uk  
 www.auma.co.uk

D. G. Bellos & Co. O.E.  
**GR 13673 Acharnai, Athens**  
 Tel +30 210 2409485  
 info@dgbellos.gr

APIS CENTAR d. o. o.  
**HR 10437 Bestovje**  
 Tel +385 1 6531 485  
 auma@apis-centar.com  
 www.apis-centar.com

Fabo Kereskedelmi és Szolgáltató Kft.  
**HU 8800 Nagykanizsa**  
 Tel +36 93/324-666  
 auma@fabo.hu  
 www.fabo.hu

Falkinn HF  
**IS 108 Reykjavik**  
 Tel +00354 540 7000  
 os@falkinn.is  
 www.falkinn.is

AUMA ITALIANA S.r.l. a socio unico  
**IT 20023 Cerro Maggiore (MI)**  
 Tel +39 0331 51351  
 info@auma.it  
 www.auma.it

AUMA BENELUX B.V.  
**LU Leiden (NL)**  
 Tel +31 71 581 40 40  
 office@auma.nl

NB Engineering Services  
**MT ZBR 08 Zabbar**  
 Tel + 356 2169 2647  
 nikibel@onvol.net

AUMA BENELUX B.V.  
**NL 2314 XT Leiden**  
 Tel +31 71 581 40 40  
 office@auma.nl  
 www.auma.nl

SIGUM A. S.  
**NO 1338 Sandvika**  
 Tel +47 67572600  
 post@sifag.no

AUMA Polska Sp. z o.o.  
**PL 41-219 Sosnowiec**  
 Tel +48 32 783 52 00  
 biuro@auma.com.pl  
 www.auma.com.pl

AUMA-LUSA Representative Office, Lda.  
**PT 2730-033 Barcarena**  
 Tel +351 211 307 100  
 geral@aumalusa.pt

SAUTECH  
**RO 011783 Bucuresti**  
 Tel +40 372 303982  
 office@sautech.ro

OOO PRIWODY AUMA  
**RU 141402 Khimki, Moscow region**  
 Tel +7 495 221 64 28  
 amarusia@auma.ru  
 www.auma.ru

OOO PRIWODY AUMA  
**RU 125362 Moscow**  
 Tel +7 495 787 78 21  
 amarusia@auma.ru  
 www.auma.ru

AUMA Scandinavia AB  
**SE 20039 Malmö**  
 Tel +46 40 311550  
 info.scandinavia@auma.com  
 www.auma.se

ELSO-b, s.r.o.  
**SK 94901 Nitra**  
 Tel +421 905/336-926  
 office@elsob.sk  
 www.elsob.sk

Auma Endüstri Kontrol Sistemleri Limited  
 Sirketi  
**TR 06810 Ankara**  
 Tel +90 312 217 32 88  
 info@auma.com.tr

AUMA Technology Automations Ltd  
**UA 02099 Kiev**  
 Tel +38 044 586-53-03  
 auma-tech@aumatech.com.ua

## Africa

Solution Technique Contrôle Commande  
**DZ Bir Mourad Rais, Algiers**  
 Tel +213 21 56 42 09/18  
 stcco@wissal.dz

A.T.E.C.  
**EG Cairo**  
 Tel +20 2 23599680 - 23590861  
 contactus@atec-eg.com

SAMIREG  
**MA 203000 Casablanca**  
 Tel +212 5 22 40 09 65  
 samireg@menara.ma

MANZ INCORPORATED LTD.  
**NG Port Harcourt**  
 Tel +234-84-462741  
 mail@manzincorporated.com  
 www.manzincorporated.com

AUMA South Africa (Pty) Ltd.  
**ZA 1560 Springs**  
 Tel +27 11 3632880  
 aumasa@mweb.co.za

## America

AUMA Argentina Rep.Office  
**AR Buenos Aires**  
 Tel +54 11 4737 9026  
 contacto@aumaargentina.com.ar

AUMA Automação do Brazil Ltda.  
**BR Sao Paulo**  
 Tel +55 11 4612-3477  
 contato@auma-br.com

TROY-ONTOR Inc.  
**CA L4N 8X1 Barrie, Ontario**  
 Tel +1 705 721-8246  
 troy-ontor@troy-ontor.ca

AUMA Chile Representative Office  
**CL 7870163 Santiago**  
 Tel +56 2 2821 4108  
 claudio.bizama@auma.com

B & C Biosciences Ltda.  
**CO Bogotá D.C.**  
 Tel +57 1 349 0475  
 proyectos@bycenlinea.com  
 www.bycenlinea.com

AUMA Región Andina & Centroamérica  
**EC Quito**  
 Tel +593 2 245 4614  
 auma@auma-ac.com  
 www.auma.com

Corsusa International S.A.C.  
**PE Miraflores - Lima**  
 Tel +511444-1200 / 0044 / 2321  
 corsusa@corsusa.com  
 www.corsusa.com

Control Technologies Limited  
**TT Marabella, Trinidad, W.I.**  
 Tel + 1 868 658 1744/5011  
 www.ctltech.com

AUMA ACTUATORS INC.  
**US PA 15317 Canonsburg**  
 Tel +1 724-743-2862  
 mailbox@auma-usa.com  
 www.auma-usa.com

Suplibarca  
**VE Maracaibo, Estado, Zulia**  
 Tel +58 261 7 555 667  
 suplibarca@intercable.net.ve

## Asia

AUMA Actuators UAE Support Office  
**AE 287 Abu Dhabi**  
 Tel +971 26338688  
 Nagaraj.Shetty@auma.com

AUMA Actuators Middle East  
**BH 152 68 Salmabad**  
 Tel +97 3 17896585  
 salesme@auma.com

Mikuni (B) Sdn. Bhd.  
**BN KA1189 Kuala Belait**  
 Tel + 673 3331269 / 3331272  
 mikuni@brunet.bn

AUMA Actuators (China) Co., Ltd.  
**CN 215499 Taicang**  
 Tel +86 512 3302 6900  
 mailbox@auma-china.com  
 www.auma-china.com

PERFECT CONTROLS Ltd.  
**HK Tsuen Wan, Kowloon**  
 Tel +852 2493 7726  
 joeip@perfectcontrols.com.hk

PT. Carakamas Inti Alam  
**ID 11460 Jakarta**  
 Tel +62 215607952-55  
 auma-jkt@indo.net.id

AUMA INDIA PRIVATE LIMITED.  
**IN 560 058 Bangalore**  
 Tel +91 80 2839 4656  
 info@auma.co.in  
 www.auma.co.in

ITG - Iranians Torque Generator  
**IR 13998-34411 Teheran**  
 +982144545654  
 info@itg-co.ir

Trans-Jordan Electro Mechanical Supplies  
**JO 11133 Amman**  
 Tel +962 - 6 - 5332020  
 Info@transjordan.net

AUMA JAPAN Co., Ltd.  
**JP 211-0016 Kawasaki-shi, Kanagawa**  
 Tel +81-(0)44-863-8371  
 mailbox@auma.co.jp  
 www.auma.co.jp

DW Controls Co., Ltd.  
**KR 153-702 Gasan-dong, GeumChun-Gu,, Seoul**  
 Tel +82 2 2624 3400  
 import@actuatorbank.com  
 www.actuatorbank.com

Al-Arfaj Engineering Co WLL  
**KW 22004 Salmiyah**  
 Tel +965-24817448  
 info@arfajengg.com  
 www.arfajengg.com

TOO "Armaturny Center"  
**KZ 060005 Atyrau**  
 Tel +7 7122 454 602  
 armacentre@bk.ru

Network Engineering  
**LB 4501 7401 JBEIL, Beirut**  
 Tel +961 9 944080  
 nabil.ibrahim@networkenglb.com  
 www.networkenglb.com

AUMA Malaysia Office  
**MY 70300 Seremban, Negeri Sembilan**  
 Tel +606 633 1988  
 sales@auma.com.my

Mustafa Sultan Science & Industry Co LLC  
**OM Ruwi**  
 Tel +968 24 636036  
 r-negi@mustafasultan.com

FLOWTORK TECHNOLOGIES CORPORATION  
**PH 1550 Mandaluyong City**  
 Tel +63 2 532 4058  
 flowtork@pldtdsl.net

M & C Group of Companies  
**PK 54000 Cavalry Ground, Lahore Cantt**  
 Tel +92 42 3665 0542, +92 42 3668 0118  
 sales@mcss.com.pk  
 www.mcss.com.pk

Petrogulf W.L.L.  
**QA Doha**  
 Tel +974 44350151  
 pgulf@qatar.net.qa

AUMA Saudi Arabia Support Office  
**SA 31952 Al Khobar**  
 Tel + 966 5 5359 6025  
 Vinod.Fernandes@auma.com

AUMA ACTUATORS (Singapore) Pte Ltd.  
**SG 569551 Singapore**  
 Tel +65 6 4818750  
 sales@auma.com.sg  
 www.auma.com.sg

NETWORK ENGINEERING  
**SY Homs**  
 +963 31 231 571  
 eyad3@scs-net.org

Sunny Valves and Intertrade Corp. Ltd.  
**TH 10120 Yannawa, Bangkok**  
 Tel +66 2 2400656  
 mainbox@sunnyvalves.co.th  
 www.sunnyvalves.co.th

Top Advance Enterprises Ltd.  
**TW Jhonghe City, Taipei Hsien (235)**  
 Tel +886 2 2225 1718  
 support@auma-taiwan.com.tw  
 www.auma-taiwan.com.tw

AUMA Vietnam Hanoi RO  
**VN Hanoi**  
 +84 4 37822115  
 chiennguyen@auma.com.vn

## Australia

BARRON GJM Pty. Ltd.  
**AU NSW 1570 Artarmon**  
 Tel +61 2 8437 4300  
 info@barron.com.au  
 www.barron.com.au





AUMA Actuators, Inc.

100 Southpointe Blvd  
USA Canonsburg PA 15317  
Tel +1 724-743-2862  
Fax +1 724-743-4711  
mailbox@auma-usa.com  
www.auma-usa.com

Y005.955/065/us/1.18