



QFX5200 Switch Hardware Guide



Modified: 2019-04-11

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

QFX5200 Switch Hardware Guide

Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xiii
	Documentation and Release Notes	xiii
	Using the Examples in This Manual	xiii
	Merging a Full Example	xiv
	Merging a Snippet	xiv
	Documentation Conventions	xv
	Documentation Feedback	xvii
	Requesting Technical Support	xvii
	Self-Help Online Tools and Resources	xviii
	Creating a Service Request with JTAC	xviii
Chapter 1	Overview	19
	QFX5200 System Overview	19
	QFX5200 Switch Description	19
	QFX5200 Hardware	20
	Benefits of QFX5200 Switches	21
	QFX5200-32C Channelization	21
	QFX5200-32C-L Channelization	22
	QFX5200-48Y Channelization	22
	System Software	22
	QFX5200 Hardware Component Overview	22
	QFX5200 Component Redundancy	23
	QFX5200 Field-Replaceable Units	24
	QFX5200 Port Panels	25
	QFX5200-32C and QFX5200-32C-L Port Panel	25
	Network Ports	25
	Channelizing Interfaces	26
	Network Port LEDs	26
	QFX5200-48Y Port Panel	29
	Network Ports	29
	Port Groups	30
	Network Port LEDs	31
	QFX5200 Switch Management	32
	QFX5200 Management Panel Overview	33
	QFX5200-32C and QFX5200-32C-L Management Panel	33
	QFX5200-32C and QFX5200-32C-L Management Port and Console Port LEDs	34
	QFX5200-48Y Management Panel	35

	QFX5200-48Y Management Port LEDs	36
	QFX5200 Chassis Status LEDs	36
	QFX5200-32C and QFX5200-32C-L Chassis Status LEDs	37
	QFX5200-48Y Chassis Status LEDs	40
	QFX5200 Cooling System	41
	QFX5200 Cooling System Description	41
	Fan Modules	41
	Do Not Install Components with Different Airflow or Wattage in the Switch	45
	QFX5200-32C and QFX5200-32C-L Fan Module LED	46
	QFX5200 Power System	47
	QFX5200 AC Power Supply Description	48
	QFX5200 AC Power Specifications	49
	QFX5200 Power Cord Specifications	50
	QFX5200 AC Power Supply LEDs	52
	QFX5200 DC Power Supply Description	53
	QFX5200 DC Power Specifications	55
	QFX5200 DC Power Supply LEDs	56
Chapter 2	Site Planning, Preparation, and Specifications	59
	QFX5200 Site Preparation Checklist	59
	Planning a Virtual Chassis Deployment using QFX Devices	60
	Valid Configurations for a QFX Virtual Chassis	61
	Valid Configurations for a QFX5110 Virtual Chassis	61
	Valid Configurations for a QFX5200 Virtual Chassis	62
	VC Deployment Checklist	62
	QFX5200 Site Guidelines and Requirements	64
	QFX5200 Environmental Requirements and Specifications	64
	General Site Guidelines	66
	QFX5200 Grounding Cable and Lug Specifications	66
	QFX5200 Clearance Requirements for Airflow and Hardware Maintenance	67
	QFX5200 Chassis Physical Specifications	68
	QFX5120 Site Electrical Wiring Guidelines	69
	QFX5200 Rack Requirements	69
	QFX5200 Cabinet Requirements	70
	QFX5200 Network Cable and Transceiver Planning	71
	Determining QFX5200 Optical Interface Support	71
	Cable Specifications for QSFP+ and QSFP28 Transceivers	72
	Understanding QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion	74
	Signal Loss in Multimode and Single-Mode Fiber-Optic Cables	74
	Attenuation and Dispersion in Fiber-Optic Cable	74
	Calculating Power Budget and Power Margin for Fiber-Optic Cables	75
	Calculating Power Budget for Fiber-Optic Cable	75
	Calculating Power Margin for Fiber-Optic Cable	76

	QFX5200 Management Cable Specifications and Pinouts	77
	Cable Specifications for Console and Management Connections for the QFX Series	77
	RJ-45 Management Port Connector Pinout Information	78
	Console Port Connector Pinouts for the QFX Series	78
	RJ-45 Port, QSFP+ Port, QSFP28 Port, SFP+ Port, and SFP Port Connector Pinout Information	79
	USB Port Specifications for the QFX Series	85
Chapter 3	Initial Installation and Configuration	87
	QFX5200 Installation Overview	87
	Overview of Installing the QFX5200	87
	QFX5200 Installation Safety Guidelines	88
	Unpacking and Mounting the QFX5200	88
	Unpacking a QFX5200	88
	Registering Products—Mandatory for Validating SLAs	90
	Mounting a QFX5200 in a Rack or Cabinet	90
	Before You Begin Rack Installation	91
	Four Post Installation Procedure for QFX5200-32C or QFX5200-32C-L	92
	Four Post Installation Procedure for QFX5200-48Y	94
	Connecting the QFX5200 to External Devices	97
	Connecting the QFX5200 Grounding Cable	98
	Connecting a Device to a Network for Out-of-Band Management	99
	Connecting a Device to a Management Console by Using an RJ-45 Connector	100
	Connecting the QFX5200 to Power	101
	Connecting AC Power to a QFX5200	102
	Connecting DC Power to a QFX5200	104
	Before You Begin	104
	Connecting DC Power to a QFX5200-32C	105
	Connecting DC Power to a QFX5200-48Y	108
	Performing the Initial Software Configuration for QFX5200 Switches	110
Chapter 4	Maintaining Components	113
	Maintaining QFX5200 Cooling System	113
	Removing a Fan Module from a QFX5200	113
	Installing a Fan Module in a QFX5200	115
	Maintaining QFX5200 Power System	116
	Removing a Power Supply from a QFX5200	116
	Installing a Power Supply in a QFX5200	118
	Maintaining Transceivers and Fiber Optic Cables on QFX5200	120
	QFX5200-32C-L Time Allowance	120
	Removing a Transceiver	120
	Installing a Transceiver	123
	Disconnecting a Fiber-Optic Cable	125
	Connecting a Fiber-Optic Cable	126
	Maintaining Fiber-Optic Cables	126
	Powering Off a QFX5200	127

Chapter 5	Troubleshooting Hardware	133
	Troubleshooting the QFX5200	133
	QFX5200 Troubleshooting Resources Overview	133
	QFX Series Alarm Messages Overview	134
	Chassis Alarm Messages	134
Chapter 6	Contacting Customer Support and Returning the Chassis or Components	141
	Contacting Customer Support to Obtain Return Material Authorization	141
	Returning the QFX5200 Chassis or Components	142
	Locating the Serial Number on a QFX5200 Device or Component	142
	Listing the Chassis and Component Details Using the CLI	142
	Locating the Chassis Serial Number ID Label on a QFX5200	144
	Locating the Serial Number ID Labels on FRU Components	145
	Returning a Hardware Component to Juniper Networks, Inc.	145
	Guidelines for Packing Hardware Components for Shipment	146
	Packing a QFX5200 Device or Component for Shipping	146
	Packing a QFX5200 Switch for Shipping	147
	Packing QFX5200 Components for Shipping	147
Chapter 7	Safety and Compliance Information	149
	General Safety Guidelines and Warnings	150
	Definitions of Safety Warning Levels	151
	Qualified Personnel Warning	152
	Warning Statement for Norway and Sweden	153
	Fire Safety Requirements	153
	Fire Suppression	153
	Fire Suppression Equipment	153
	Installation Instructions Warning	154
	Chassis and Component Lifting Guidelines	155
	Restricted Access Warning	155
	Ramp Warning	156
	Rack-Mounting and Cabinet-Mounting Warnings	157
	Grounded Equipment Warning	161
	Laser and LED Safety Guidelines and Warnings	161
	General Laser Safety Guidelines	162
	Class 1 Laser Product Warning	162
	Class 1 LED Product Warning	162
	Laser Beam Warning	163
	Radiation from Open Port Apertures Warning	163
	Maintenance and Operational Safety Guidelines and Warnings	164
	Battery Handling Warning	165
	Jewelry Removal Warning	166
	Lightning Activity Warning	167
	Operating Temperature Warning	167
	Product Disposal Warning	169
	General Electrical Safety Guidelines and Warnings	169
	Action to Take After an Electrical Accident	170
	Prevention of Electrostatic Discharge Damage	171

AC Power Electrical Safety Guidelines	172
AC Power Disconnection Warning	173
DC Power Electrical Safety Guidelines	173
DC Power Copper Conductors Warning	174
DC Power Disconnection Warning	174
DC Power Grounding Requirements and Warning	176
DC Power Wiring Sequence Warning	177
DC Power Wiring Terminations Warning	178
Multiple Power Supplies Disconnection Warning	179
TN Power Warning	180
Agency Approvals and Compliance Statements for the QFX5200	181
Agency Approvals for the QFX Series	181
Statements of Volatility for Juniper Network Devices	182

List of Figures

Chapter 1	Overview	19
	Figure 1: QFX5200-32C Port Panel	20
	Figure 2: QFX5200-48Y Port Panel	21
	Figure 3: QFX5200-32C and QFX5200-32C-L Port Panel	25
	Figure 4: QFX5200-32C and QFX5200-32C-L Port LEDs	27
	Figure 5: Port Panel of QFX5200-48Y	29
	Figure 6: QFX5200-48Y QSFP28 Port LEDs	31
	Figure 7: QFX5200-48Y SFP28 Port LEDs	32
	Figure 8: QFX5200-32C and QFX5200-32C-L, FRU End	33
	Figure 9: Management Panel Components on QFX5200-32C and QFX5200-32C-L	34
	Figure 10: QFX5200-48Y Port Panel	35
	Figure 11: Management Panel Components on QFX5200-48Y	36
	Figure 12: Locating Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L	37
	Figure 13: Locating Chassis Status LEDs on QFX5200-48Y	40
	Figure 14: QFX5200-32C and QFX5200-32C-L Fan Modules	42
	Figure 15: QFX5200-48Y Fan Module	42
	Figure 16: Air In Airflow Through QFX5200-32C and QFX5200-32C-L	44
	Figure 17: Air Out Airflow Through QFX5200-32C and QFX5200-32C-L	44
	Figure 18: Air In Airflow Through QFX5200-48Y	45
	Figure 19: Air Out Airflow Through QFX5200-48Y	45
	Figure 20: Fan Module LED in a QFX5200-32C or QFX5200-32C-L Switch	46
	Figure 21: 850 W AC Power Supply for QFX5200-32C and QFX5200-32C-L	48
	Figure 22: 650 W AC Power Supply for QFX5200-48Y	48
	Figure 23: Power Supply Handle Detail	49
	Figure 24: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L Switches	52
	Figure 25: AC Power Supply LED on a QFX5200-48Y Switch	52
	Figure 26: QFX5200-32C DC Power Supply	54
	Figure 27: QFX5200-48Y DC Power Supply	54
	Figure 28: QFX5200-32C DC Power Supply Faceplate	55
	Figure 29: QFX5200-48Y DC Power Supply Faceplate	55
	Figure 30: DC Power Supply Faceplate on a QFX5200-32C	56
	Figure 31: DC Power Supply Faceplate on a QFX5200-48Y	57
Chapter 2	Site Planning, Preparation, and Specifications	59
	Figure 32: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-32C and QFX5200-32C-L	67
	Figure 33: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-48Y	68

Chapter 3	Initial Installation and Configuration	87
	Figure 34: Attaching Mounting Rails to the QFX5200-32C or QFX5200-32C-L	93
	Figure 35: Attach QFX5200-32C or QFX5200-32C-L Switch to Rack	93
	Figure 36: Slide Mounting Blade into Mounting Rail	94
	Figure 37: Align the Front Mounting Bracket and Secure with Screws	94
	Figure 38: Align Holes for Mounting Rail and Attach with Screws	95
	Figure 39: Attach the Front Mounting Bracket to the Rack	95
	Figure 40: Slide Blades into Mounting Rails and Attach to the Rack	96
	Figure 41: Lock the Mounting Rails to the Rack	96
	Figure 42: Connecting a Grounding Cable to a QFX5200-32C and QFX5200-32C-L	99
	Figure 43: RJ-45 Connector on an Ethernet Cable	100
	Figure 44: Connecting a Device to a Network for Out-of-Band Management . . .	100
	Figure 45: RJ-45 Connector on an Ethernet Cable	101
	Figure 46: Connecting a Device to a Management Console Through a Console Server	101
	Figure 47: Connecting a Device Directly to a Management Console	101
	Figure 48: Connecting an AC Power Cord to an AC Power Supply in a QFX5200-32C and QFX5200-32C-L	103
	Figure 49: DC Power Supply Faceplate for a QFX5200-32C	107
	Figure 50: Securing Ring Lugs to the Terminals on the QFX5200-32C DC Power Supply	108
	Figure 51: Connecting DC Power Cable to QFX5200-48Y	109
Chapter 4	Maintaining Components	113
	Figure 52: Removing a Fan Module from a QFX5200-32C or QFX5200-32C-L . .	114
	Figure 53: Removing a Fan Module from a QFX5200-48Y	114
	Figure 54: Installing a Fan Module in a QFX5200-32C and QFX5200-32C-L . . .	116
	Figure 55: Installing a Fan Module in a QFX5200-48Y	116
	Figure 56: Removing a Power Supply from a QFX5200-32C or a QFX5200-32C-L	118
	Figure 57: Removing a Power Supply from a QFX5200-48Y	118
	Figure 58: Installing a Power Supply in a QFX5200-32C or a QFX5200-32C-L . .	119
	Figure 59: Installing a Power Supply in a QFX5200-48Y	119
	Figure 60: Removing an SFP, SFP+, XFP, or a QSFP+ Transceiver	122
	Figure 61: Installing a Transceiver	125
	Figure 62: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Device	126
Chapter 6	Contacting Customer Support and Returning the Chassis or Components	141
	Figure 63: Location of the Serial Number ID Label on a QFX5200-32C or a QFX5200-32C-L Switch	145
Chapter 7	Safety and Compliance Information	149
	Figure 64: Placing a Component into an Antistatic Bag	171

List of Tables

	About the Documentation	xiii
	Table 1: Notice Icons	xv
	Table 2: Text and Syntax Conventions	xvi
Chapter 1	Overview	19
	Table 3: QFX5200 Hardware Components	22
	Table 4: FRUs in a QFX5200 Switch	24
	Table 5: QFX5200-32C and QFX5200-32C-L Access Port and Uplink LED Locations	27
	Table 6: Network Port LEDs on QSFP28 Ports on a QFX5200-32C and QFX5200-32C-L Switch	27
	Table 7: Network Port Link/Activity LEDs on QSFP+ Ports on a QFX5200-32C and QFX5200-32C-L	28
	Table 8: Available Port Groups for QFX5200-48Y	30
	Table 9: QFX5200-48Y Access Port and Uplink LED Locations	31
	Table 10: Network Port LEDs on a QFX5200-48Y Switch	32
	Table 11: Management Ports LEDs on a QFX5200-32C and QFX5200-32C-L	35
	Table 12: Console Port LED on a QFX5200-32C and QFX5200-32C-L	35
	Table 13: Management Port LEDs on a QFX5200-48Y Switch	36
	Table 14: Console Port LED on a QFX5200-48Y	36
	Table 15: Interpreting Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L	39
	Table 16: Interpreting Chassis Status LEDs on a QFX5200-48Y	40
	Table 17: Fan Modules in QFX5200 Switches	43
	Table 18: Fan Tray LED in a QFX5200-32C or QFX5200-32C-L Switch	46
	Table 19: Color Indicators for Airflow Direction	49
	Table 20: AC Power Specifications for a QFX5200	50
	Table 21: AC Power Cord Specifications	51
	Table 22: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L	52
	Table 23: AC Power Supply LED on a QFX5200-48Y	53
	Table 24: DC Power Specifications for a QFX5200	56
	Table 25: DC Power Supply LEDs on a QFX5200-32C	57
	Table 26: DC Power Supply LED on a QFX5200-48Y	57
Chapter 2	Site Planning, Preparation, and Specifications	59
	Table 27: Site Preparation Checklist	59
	Table 28: Deployment Checklist	62
	Table 29: QFX5200 Switch Environmental Tolerances	65
	Table 30: Physical Specifications for the QFX5200	68
	Table 31: Site Electrical Wiring Guidelines	69
	Table 32: Rack Requirements for the QFX5200	70

	Table 33: Cabinet Requirements for the QFX5200	71
	Table 34: QSFP+ and QSFP28 Optical Module Receptacle Pinouts	72
	Table 35: QSFP+ MPO Fiber-Optic Crossover Cable Pinouts	73
	Table 36: Estimated Values for Factors Causing Link Loss	76
	Table 37: Cable Specifications for Console and Management Connections for the QFX Series	77
	Table 38: RJ-45 Management Port Connector Pinout Information	78
	Table 39: Console Port Connector Pinouts for the QFX Series	79
	Table 40: 10/100/1000BASE-T Ethernet Network Port Connector Pinout Information for EX4300 Switches Except EX4300-48MP and EX4300-48MP-S Switches	79
	Table 41: 10/100/1000BASE-T Ethernet Network Port and 100/1000/2500/5000/10000BASE-T Ethernet Network Port Connector Pinout Information for EX4300-48MP and EX4300-48MP-S Switches . . .	80
	Table 42: SFP Network Port Connector Pinout Information	81
	Table 43: SFP+ Network Port Connector Pinout Information	82
	Table 44: QSFP+ and QSFP28 Network Port Connector Pinout Information	83
Chapter 3	Initial Installation and Configuration	87
	Table 45: Inventory of Components Supplied with a QFX5200 Device	89
Chapter 5	Troubleshooting Hardware	133
	Table 46: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y	135
	Table 47: Chassis Alarm Messages for QFX5200-32C-L	138

About the Documentation

- Documentation and Release Notes on page xiii
- Using the Examples in This Manual on page xiii
- Documentation Conventions on page xv
- Documentation Feedback on page xvii
- Requesting Technical Support on page xvii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xsl; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

Table 1 on page xv defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xvi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast <i>(string1 string2 string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	}

GUI Conventions


Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

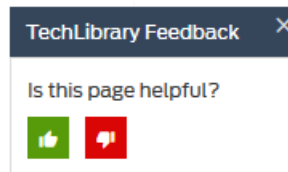

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

CHAPTER 1

Overview

- [QFX5200 System Overview on page 19](#)
- [QFX5200 Port Panels on page 25](#)
- [QFX5200 Switch Management on page 32](#)
- [QFX5200 Cooling System on page 41](#)
- [QFX5200 Power System on page 47](#)

QFX5200 System Overview

- [QFX5200 Switch Description on page 19](#)
- [QFX5200 Component Redundancy on page 23](#)
- [QFX5200 Field-Replaceable Units on page 24](#)

QFX5200 Switch Description

The QFX5200 line of switches are highly-flexible, fixed-configuration data center switches designed for spine and leaf connectivity in the Layer 3 fabrics for cloud and web services. The QFX5200 models provide a choice of 10GbE, 25GbE, 40GbE, 50GbE, and 100GbE interface speeds for server and intra-fabric connectivity.

This topic covers:

- [QFX5200 Hardware on page 20](#)
- [Benefits of QFX5200 Switches on page 21](#)
- [QFX5200-32C Channelization on page 21](#)
- [QFX5200-32C-L Channelization on page 22](#)
- [QFX5200-48Y Channelization on page 22](#)
- [System Software on page 22](#)
- [QFX5200 Hardware Component Overview on page 22](#)

QFX5200 Hardware

QFX5200 line of switches offer compact 1 U models that provide a line rate configuration packet performance, very low latency, and a rich set of Layer 3 features.

- [QFX5200-32C and QFX5200-32C-L Hardware on page 20](#)
- [QFX5200-48Y Hardware on page 21](#)


QFX5200-32C and QFX5200-32C-L Hardware

The QFX5200-32C and QFX5200-32C-L are compact 1 U standalone switches that provides a line rate configuration packet performance, very low latency, and a rich set of Layer 3 features. The routing engine and control plane are driven by the 1.8 Ghz quad-core Intel CPU with 16 GB of memory and two 32 GB solid-state drives (SSD) for storage. The QFX5200-32C models run standard Junos Operating System (OS); the QFX5200-32C-L models run Junos OS Evolved.

As shown in [Figure 1 on page 20](#), the QFX5200-32C and QFX5200-32C-L are 100 Gigabit Ethernet top-of-rack switches that support both quad small form-factor pluggable (QSFP+), 100-Gbps QSFP+ (QSFP28) transceivers, and break out cables in the 32 QSFP28 sockets. The ports 0 through 31 can be configured as either uplinks or as access ports. The QSFP28 ports are configured as 100-Gigabit Ethernet ports by default, but can also be configured to speeds of 50, 40, 25, or 10-Gigabit Ethernet.

The QFX5200-32C and QFX5200-32C-L comes standard with redundant fans and redundant power supplies. Switches can be ordered with either ports-to-FRUs or FRUs-to-ports airflow. The QFX5200-32C is available with AC or DC power supplies; the QFX5200-32C-L is available only with AC power supplies.

Figure 1: QFX5200-32C Port Panel

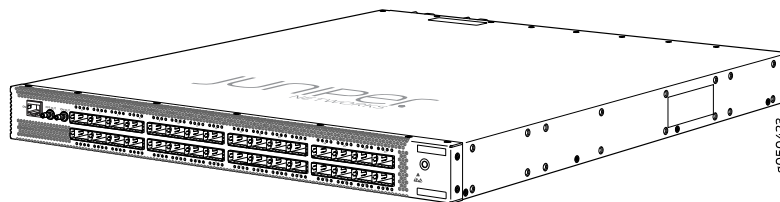

The QFX5200-32C-L is supported as a standalone switch (Junos OS Evolved Release 18.3R1 and later).

The QFX5200-32C can be used as:

- A standalone switch (Junos OS Release 15.1X53-D30 and later).
- A member in an all QFX5200-32C Virtual Chassis (Junos OS Release 17.3R2 and later).

You can create an all QFX5200-32C Virtual Chassis with up to three members. The QFX5200-32C is used in all three member roles: master RE, backup RE, and line card.

- A satellite device in a Junos Fusion Provider Edge system (Junos OS Release 18.1R2 and later). A switch in standalone mode must be converted to a satellite device.

QFX5200-48Y Hardware

The QFX5200-48Y is a flexible top-of-rack switch for data centers with the need for native 25 Gbps port speeds. The 48 small form-factor pluggable 28 (SFP28) ports support 10 Gbps or native 25 Gbps speeds, and the 6 QSFP28 support either 40 Gbps or 100 Gbps speeds. The 48 SFP28 default to 10 Gigabit Ethernet and must be configured in groups of four ports to support 25 Gigabit Ethernet. You can alternate each group of four ports with either 10 Gbps or 25 Gbps across the 48 ports. For details on configuring the SFP28 ports, see [“Port Groups” on page 30](#).


The 6 QSFP28 ports auto-detect the optic speed of transceivers and set the port speed accordingly.

The routing engine and control plane of the switch are driven by the 2.20 Ghz quad-core Intel CPU with 16 GB of memory and a 32 GB solid-state drive (SSD) for storage. The QFX5200-48Y provides an aggregate throughput of 3.6 Tbps (full duplex).

As shown in [Figure 2 on page 21](#), the QFX5200-48Y has a 1 U form factor and comes standard with redundant fans and redundant power supplies. The switch can be ordered with either ports-to-FRUs or FRUs-to-ports airflow and with AC or DC power supplies.

The QFX5200-48Y is supported on Junos OS Release 18.1R1 and later.

Figure 2: QFX5200-48Y Port Panel

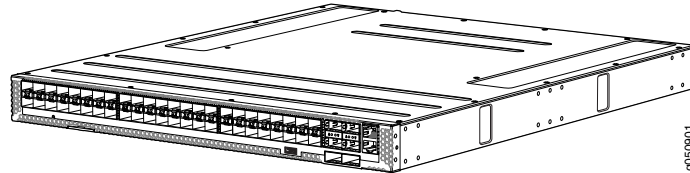

Benefits of QFX5200 Switches

QFX5200 switches offer:

- Future proof and investment protection
- Open and standards based for multi-vendor networks
- Support for Zero Touch Provisioning (ZTP) for simplified operation

QFX5200-32C Channelization

Starting in Junos OS Release 17.3R1, ports are channelized automatically by detecting the cable type. The mode and number of channels are set based on the channel link status:

- When the port is configured for 40-Gigabit Ethernet and a 4x10G breakout cable is detected, the system converts the port into 4 independent 10-Gigabit Ethernet ports
- When the port is configured for 100-Gigabit Ethernet and a 2x50G breakout cable is detected, the system converts the port into 2 independent 50-Gigabit Ethernet ports

- When the port is configured for 100-Gigabit Ethernet and a 4x25G breakout cable is detected, the system converts the port into 4 independent 25-Gigabit Ethernet ports

QFX5200-32C-L Channelization

Starting in Junos OS Evolved Release 18.3R1, ports can be channelized by configuration.

- When the port is configured for 40-Gigabit Ethernet and a 4x10G breakout cable is detected, the system converts the port into 4 independent 10-Gigabit Ethernet ports
- When the port is configured for 100-Gigabit Ethernet and a 4x25G breakout cable is detected, the system converts the port into 4 independent 25-Gigabit Ethernet ports

QFX5200-48Y Channelization

Channelization is not supported on the QFX5200-48Y..

System Software

Customers who purchase a QFX5200-32C or QFX5200-48Y may either enable the Junos OS by purchasing a Junos OS Base Services license. Customers purchasing a QFX5200-32C-L enable Junos OS Evolved by purchasing a Junos OS Evolved Base Services license.

QFX Series devices use the Junos OS, which provides Layer 2 and Layer 3 switching, routing, and security services. The Junos image is installed on one of the 32 GB solid state drives. The Junos OS Evolved software running on the QFX5200-32C-L does not support Layer 2 features.

For more information about which features are supported on QFX Series devices, see [Feature Explorer](#).

You manage the switch using the Junos OS command-line interface (CLI), accessible through the console and out-of-band management ports on the device.

QFX5200 Hardware Component Overview

The QFX5200 supports the components in listed in alphabetic order.

Table 3: QFX5200 Hardware Components

Component	Chassis Model	Spare Juniper Model Number	CLI Output
Chassis	QFX5200-32C	Not available	QFX5200-32C-32Q
	QFX5200-32C-L	QFX5200-32C-CHAS	QFX5200-32C-L
	QFX5200-48Y	QFX5200-48Y-CHAS	QFX5200-48Y

Table 3: QFX5200 Hardware Components (continued)

Component	Chassis Model	Spare Juniper Model Number	CLI Output
Fan module	QFX5200-32C and QFX5200-32C-L	QFX5200-32C-FANAFI (FRUs to ports airflow)	Fan tray n fan-n Back to Front Airflow - AFI
		QFX5200-32C-FANAFO (Ports to FRUs airflow)	Fan tray n fan-n Front to Back Airflow - AFO
	QFX5200-48Y	QFX520048Y-FAN-AI (FRUs to ports airflow)	Fan tray n fan-n Back to Front Airflow - AFI
		QFX520048Y-FAN-AO (Ports to FRUs airflow)	Fan tray n fan-n Front to Back Airflow - AFO
Power supplies	QFX5200-32C and QFX5200-32C-L	JPSU-850W-AC-AFI (FRUs to ports airflow)	AC AFI 850W PSU
		JPSU-850W-AC-AFO (Ports to FRUs airflow)	AC AFO 850W PSU
	QFX5200-32C	JPSU-850W-DC-AFI (FRUs to ports airflow)	DC AFI 850W PSU
		JPSU-850W-DC-AFO (Ports to FRUs airflow)	DC AFO 850W PSU
	QFX5200-48Y	QFX520048Y-APSU-AI (FRUs to ports airflow)	AC AFI 650W PSU
		QFX520048Y-APSU-AO (Ports to FRUs airflow)	AC AFO 650W PSU
		QFX520048Y-DPSU-AI (FRUs to ports airflow)	DC AFI 650W PSU
		QFX520048Y-DPSU-AO (Ports to FRUs airflow)	DC AFO 650W PSU

- See Also**
- [QFX5200 Port Panels on page 25](#)
 - [QFX5200 Cooling System on page 41](#)

QFX5200 Component Redundancy

The following hardware components provide redundancy on a QFX5200 switch:

- **Power supplies**—The QFX5200 switches have one or two power supplies. Each power supply provides power to all components in the switch. If two power supplies are installed, the two power supplies provide full power redundancy to the device. If one power supply fails or is removed, the second power supply balances the electrical load without interruption.

To provide power redundancy to the system both power supplies must be installed. Connect power source feed A to one power supply and power source feed B to the second power supply.



CAUTION: Do not connect feed A and feed B to the same power supply input terminal.

- Cooling system—The QFX5200-32C and QFX5200-32C-L switch models have five fan modules. The QFX5200-48Y switch models has six fan modules. If a fan module fails and is unable to keep the QFX5200 switch within the desired temperature thresholds, chassis alarms occur and the QFX5200 switch can shut down.

QFX5200 Field-Replaceable Units

Field-replaceable units (FRUs) are components that you can replace at your site. The QFX5200 device FRUs are hot-insertable and hot-removable: you can remove and replace one of them without powering off the switch or disrupting the switching function.



CAUTION: Replace a failed power supply with a new power supply within one minute of removal to prevent chassis overheating. The switch continues to operate with only one power supply running. Replace a failed fan module with a new fan module within one minute of removal to prevent chassis overheating. Do not operate the switch with missing FRUs for longer than one minute.

Table 4 on page 24 lists the FRUs for the QFX5200 device and actions to take before removing them.

Table 4: FRUs in a QFX5200 Switch

FRU	Required Action
Power supplies	None.
Fan modules	None.
Optical transceivers	None. We recommend that you disable the interface using the set interfaces <i>interface-name</i> disable command before you remove the transceiver. See “Disconnecting a Fiber-Optic Cable” on page 125



NOTE: If you have a Juniper Care service contract, register any addition, change, or upgrade of hardware components at <https://www.juniper.net/customers/support/tools/updateinstallbase/>. Failure to do so can result in significant delays if you need replacement parts. This note does not apply if you replace existing components with the same type of component.

Related Documentation

- [QFX5200 Cooling System on page 41](#)

- [QFX5200 Power System on page 47](#)

QFX5200 Port Panels


- [QFX5200-32C and QFX5200-32C-L Port Panel on page 25](#)
- [QFX5200-48Y Port Panel on page 29](#)

QFX5200-32C and QFX5200-32C-L Port Panel

The port panel of the QFX5200-32C supports port configuration speeds of 100, 50, 40, 25, or 10 Gigabit Ethernet. The port panel of the QFX5200-32C-L supports port configuration speeds of 100, 45, 25, or 10 Gigabit Ethernet. The QFX5200-32C and QFX5200-32C-L uses 28-Gbps quad small-form factor pluggable plus (QSFP28) sockets that are configured as 100 Gigabit Ethernet ports by default. Any of the 32 ports 0 through 31 can be configured as uplinks or as access ports.

[Figure 3 on page 25](#) shows the port panel of the QFX5200-32C and QFX5200-32C-L.

Figure 3: QFX5200-32C and QFX5200-32C-L Port Panel

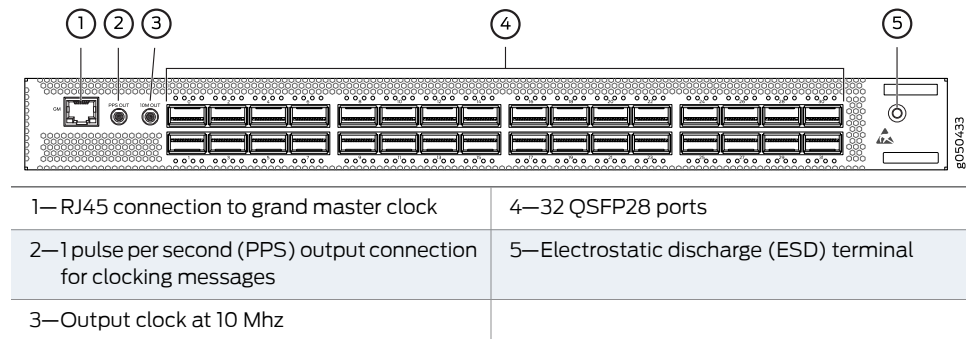

This topic describes:

- [Network Ports on page 25](#)
- [Channelizing Interfaces on page 26](#)
- [Network Port LEDs on page 26](#)

Network Ports

The QFX5200-32C and QFX5200-32C-L network ports, (0 to 31) support:

- 100 Gbps QSFP28 transceivers
- 40 Gbps QSFP+ transceivers
- 100 Gbps active optical cables (AOC)



NOTE: For interoperability with other QFX Series switches, ensure auto-negotiation on the QFX5200-32C is disabled.

- 40 Gbps AOC
- QSFP28 direct attach copper (DAC) cables
- QSFP+ DAC cables
- (QFX5200-32C only) QSFP+ to QSFP+ direct attach copper breakout (DACBO) cables (100 Gbps breaks out to 50 Gbps)
- QSFP+ to QSFP+ DACBO cables (100 Gbps breaks out to 25 Gbps)
- QSFP+ to SFP+ DACBO cables (40 Gbps breaks out to 10 Gbps)

Channelizing Interfaces

For downstream traffic, the QFX5200-32C has 32 physical or 128 logical ports (32 x 4) that can be used for port channelization. The 100 Gigabit Ethernet ports can be channelized using breakout cables either to 2 independent downstream 50 Gigabit Ethernet or to 4 independent 25 Gigabit Ethernet ports. The default 100 Gigabit Ethernet ports can also be configured as 40 Gigabit Ethernet. In this configuration, the port can either operate as a dedicated 40 Gigabit Ethernet ports or can be channelized to 4 independent 10 Gigabit Ethernet ports using breakout cables.

The QFX5200-32C ports support auto-channelization starting in Junos OS Release 15.1X53-D230.

The QFX5200-32C-L ports support channelization, but not auto-channelization. The QFX5200-32C-L has 32 physical or 128 logical ports (32 x 4) that can be used for port channelization. The 100 Gigabit Ethernet ports can be channelized using breakout cables to 4 independent 25 Gigabit Ethernet ports. The default 100 Gigabit Ethernet ports can also be configured as 40 Gigabit Ethernet. In this configuration, the port can either operate as a dedicated 40 Gigabit Ethernet port or can be channelized to 4 independent 10 Gigabit Ethernet ports using breakout cables. Channelization is supported by port configuration starting in Junos OS Evolved Release 18.3R1.

Network Port LEDs

The Link/Activity LED configuration for QFX5200-32C and QFX5200-32C-L switches use bi-colored LEDs. The link LED indicates link activity or a fault. See [Table 5 on page 27](#).

Table 5: QFX5200-32C and QFX5200-32C-L Access Port and Uplink LED Locations

Port Type	Indicators	Location
-----------	------------	----------

QSFP28 and
QSFP+

Speed
Link
Status
Channelization

Figure 4: QFX5200-32C and QFX5200-32C-L Port LEDs

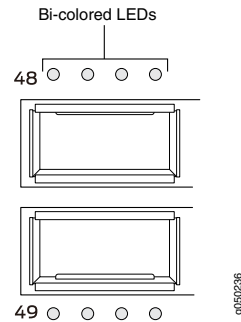


Table 6 on page 27 describes how to interpret the QSFP28 port LEDs.

Table 6: Network Port LEDs on QSFP28 Ports on a QFX5200-32C and QFX5200-32C-L Switch

Color	State	QFX5200-32C and QFX5200-32C-L Description
Unlit	Off	The port is administratively disabled, there is no power, the link is down, or there is a fault. When configured for 25-Gigabit Ethernet, the LED remains unlit only if all four of the 25-Gigabit Ethernet QSFP+ breakout links are down.
Green	On steadily	A link is established, but there is no link activity. When configured for 25-Gigabit Ethernet, the LED is lit green when at least one of the four 25-Gigabit Ethernet QSFP+ breakout links is established.
	Blinking	A link is established, and there is link activity. When configured for 25-Gigabit Ethernet, the LED is lit green when at least one of the four 25-Gigabit Ethernet QSFP+ breakout links is established.
Amber	Blinking	The beacon is enabled on the port.

You can use the **show chassis led** operational CLI command to view the status of both the chassis alarms and the network port status. This example is from a QFX5200-32C-L system:

```
user@host> show chassis led
```

```
-----
LEDs status:
Alarm LED : Off
Beacon LED: Off
System LED: Green
Master LED: Green
```

Interface	STATUS LED	LINK/ACTIVITY LED
et-0/0/0	N/A	Green
et-0/0/1	N/A	Off
et-0/0/2	N/A	Off
et-0/0/3	N/A	Off
et-0/0/4	N/A	Off
et-0/0/5	N/A	Off
et-0/0/6	N/A	Off
et-0/0/7	N/A	Off
et-0/0/8	N/A	Off
et-0/0/9	N/A	Off
et-0/0/10	N/A	Off
et-0/0/11	N/A	Off
et-0/0/12	N/A	Green
et-0/0/13	N/A	Off
et-0/0/14	N/A	Green
et-0/0/15	N/A	Green
et-0/0/16	N/A	Off
et-0/0/17	N/A	Off
et-0/0/18	N/A	Off
et-0/0/19	N/A	Off
et-0/0/20	N/A	Off
et-0/0/21	N/A	Off
et-0/0/22	N/A	Green
et-0/0/23	N/A	Green
et-0/0/24	N/A	Green
et-0/0/25	N/A	Green
et-0/0/26	N/A	Green
et-0/0/27	N/A	Green
et-0/0/28	N/A	Green
et-0/0/29	N/A	Off
et-0/0/30	N/A	Off
et-0/0/31	N/A	Off

As shown in [Table 7 on page 28](#), there are four bi-color LEDs for each QSFP+ port. The first LED is used and the remaining LEDs are not used when the interface is configured for 100-Gigabit Ethernet and connected to a QSFP28 transceiver. All four LEDs are used when the interface is configured for 25-Gigabit Ethernet and the port is connected using an optical splitter cable or a copper DACBO cable. [Table 7 on page 28](#) describes how to interpret the QSFP+ LEDs.

Table 7: Network Port Link/Activity LEDs on QSFP+ Ports on a QFX5200-32C and QFX5200-32C-L

Color	State	Description
Unlit	Off	The port is administratively disabled, there is no power, the link is down, or there is a fault. NOTE: When configured for 10-Gigabit Ethernet, the LED remains unlit only if all four of the 10-Gigabit Ethernet SFP+ breakout links are down.


Table 7: Network Port Link/Activity LEDs on QSFP+ Ports on a QFX5200-32C and QFX5200-32C-L (continued)

Color	State	Description
Green	On steadily	A link is established, but there is no link activity. NOTE: When configured for 10-Gigabit Ethernet, the LED is lit green when at least one of the four 10-Gigabit Ethernet SFP+ breakout links is established.
	Blinking	A link is established, and there is link activity. NOTE: When configured for 10-Gigabit Ethernet, the LED is lit green when at least one of the four 10-Gigabit Ethernet SFP+ breakout links is established.
Amber	Blinking	All four LEDs blink to indicate the beacon function was enabled on the port.

QFX5200-48Y Port Panel

The port panel of the QFX5200-48Y supports port configuration speeds of 100 or 40 Gigabit Ethernet, and 25 or 10 Gigabit Ethernet. The QFX5200-48Y has 48 small form-factor pluggable 28 (SFP28) ports (0 through 47) that can be configured as either 10 Gigabit Ethernet or 25 Gigabit Ethernet. The QFX5200-48Y also has six quad small form-factor pluggable (QSFP28) ports (48 through 53 that can be configured as either 100 Gigabit Ethernet or 40 Gigabit Ethernet. The SFP28 ports default to 10 Gigabit Ethernet but can be configured in groups of four ports to 25 Gbps speeds. The QSFP28 ports auto-sense the speed of inserted optics and configure the port to the appropriate speed for that transceiver. See [Figure 5 on page 29](#).

Figure 5: Port Panel of QFX5200-48Y

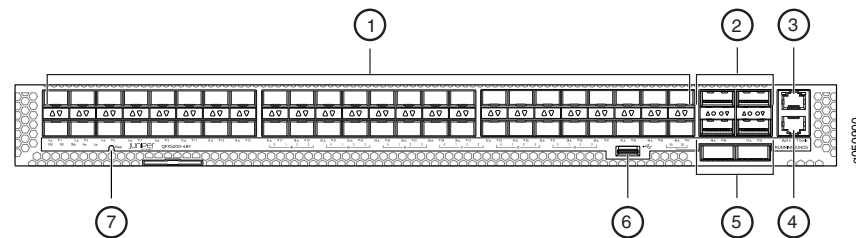

1—48 SFP28 ports	5—2 QSFP28 ports
2—4 QSFP28 ports	6—USB port
3—RJ45 management port	7—System status LEDs
4—RJ45 console	

- [Network Ports on page 29](#)
- [Port Groups on page 30](#)
- [Network Port LEDs on page 31](#)

Network Ports

The QFX5200-48Y ports, (0 to 47) are normally used as access ports. They support:

- 10 Gbps SFP+ transceivers
- 10 Gbps direct attach copper (DAC) cables
- 25 Gbps SFP28 transceivers
- 25 Gbps SFP28 DAC cables

The QFX5200-48Y ports, (48 to 53) are normally used as uplinks. They support:

- 25 Gbps active optical cables (AOC)
- 40 Gbps QSFP+ transceivers
- 40 Gbps DACBO cables (40 Gbps to 10 Gbps)
- 100 Gbps QSFP28 transceivers
- 100 Gbps AOC

Port Groups

The 48 SFP28 ports default to 10 Gigabit Ethernet but can be configured to 25 Gigabit Ethernet by port groups. The SFP28 ports are divided into 12 port groups, with four contiguous ports in each port group. Each port group can be configured to either 10 Gbps or 25 Gbps speeds, but mixing port speeds within a port group is not allowed. See [Table 8 on page 30](#)

Table 8: Available Port Groups for QFX5200-48Y

Port Groups
0 – 3
4 – 7
8 – 11
12 – 15
16 – 19
29 – 23
24 – 27
28 – 31
32 – 35
36 – 39
40 – 43
44 – 47

Use the **set chassis fpc** command to set an SFP28 port group to either 10 Gbps or 25 Gbps speeds. You will receive a warning message that you are changing the port configuration for the four ports. Committing the change does cause the FPC to reboot. For example, to change ports **0** through **3** to 25 Gbps from the default 10 Gbps, issue the following command:

```
[edit]
user@host# set chassis fpc 0 pic 0 port 0 speed 25g
user@host# commit

warning: 25g config will be applied to ports 0 to 3

{master:0}[edit]
root@sw-symphony-03# commit
configuration check succeeds
commit complete
```

Network Port LEDs

The QFX5200-48Y uses bi-colored LEDs to indicate link and activity on the port. SFP28 ports have a single green/amber LED. QSFP28 ports have four blue/amber ports. Only the first (left-most) LED is used. See [Table 9 on page 31](#) and [Table 10 on page 32](#).



NOTE: The up and down arrow LEDs for QSFP28 ports 48, 49, 51, and 52 are not used.

Table 9: QFX5200-48Y Access Port and Uplink LED Locations

Port Type	Indicators	Location
QSFP28	Speed Link Status	<p><i>Figure 6: QFX5200-48Y QSFP28 Port LEDs</i></p>

Table 9: QFX5200-48Y Access Port and Uplink LED Locations (continued)

Port Type	Indicators	Location
SFP28	Speed Link Status	<p>Figure 7: QFX5200-48Y SFP28 Port LEDs</p>

Table 10: Network Port LEDs on a QFX5200-48Y Switch

Transceives Supported	Color	State	LED Description
SFP28	Unlit	Off	The port is administratively disabled, there is no power, the link is down, or there is a fault.
	Amber	On steadily	A link is established for 10 Gbps or 25 Gbps, but there is no activity.
		Blinking	A link is established for 10 Gbps or 25 Gbps and there is link activity.
QSFP28	Unlit	Off	The port is administratively disabled, there is no power, the link is down, or there is a fault.
	Green	On steadily	A link is established for 40 Gbps or 100 Gbps, but there is no activity.
		Blinking	A link is established for 40 Gbps or 100 Gbps and there is link activity.

- Related Documentation**
- [QFX5200 Field-Replaceable Units on page 24](#)
 - [Channelizing Interfaces on QFX5200-32C Switches](#)
 - [Installing and Removing QFX5200 Hardware Components](#)

QFX5200 Switch Management

- [QFX5200 Management Panel Overview on page 33](#)
- [QFX5200 Chassis Status LEDs on page 36](#)

QFX5200 Management Panel Overview

The management panel allows you to have a management channel into the switch that is separate from production traffic. The management panel is found on the Field Replaceable Unit (FRU) end of the QFX5200-32C and QFX5200-32C-L and on the port panel of the QFX5200-48Y.


This topic covers:

- [QFX5200-32C and QFX5200-32C-L Management Panel on page 33](#)
- [QFX5200-32C and QFX5200-32C-L Management Port and Console Port LEDs on page 34](#)
- [QFX5200-48Y Management Panel on page 35](#)
- [QFX5200-48Y Management Port LEDs on page 36](#)

QFX5200-32C and QFX5200-32C-L Management Panel


The management panel of the QFX5200-32C and QFX5200-32C-L is found on the Field Replaceable Unit (FRU) end of the switch next to the fan modules. See [Figure 8 on page 33](#) to locate the management panel.

Figure 8: QFX5200-32C and QFX5200-32C-L, FRU End

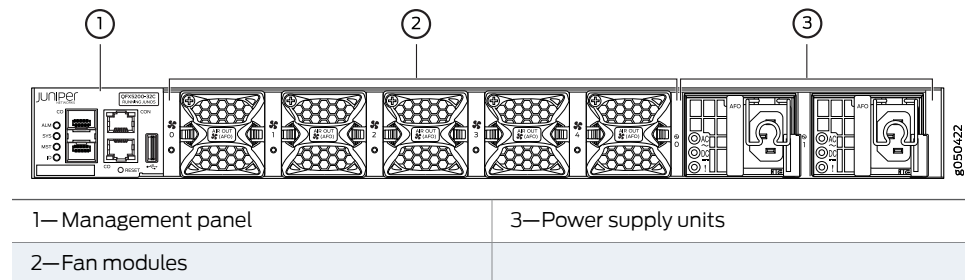

[Figure 9 on page 34](#) describes the connections and components of the QFX5200-32C and QFX5200-32C-L management panel.

Figure 9: Management Panel Components on QFX5200-32C and QFX5200-32C-L

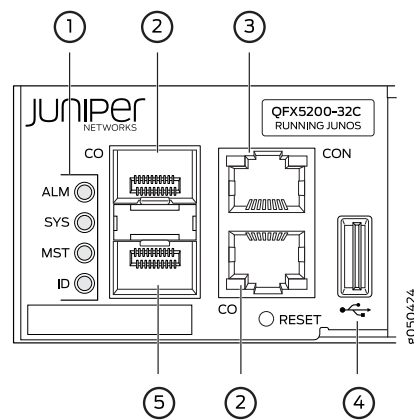

1—Status LEDs	4—USB port
2—QFX5200-32C—Use CO for the em0 interface using either RJ-45 (1000 Base-T) or fiber SFP connections. QFX5200-32C-L—use CO for the re0:mgmt-0 management interface.	5—For QFX5200-32C only—em1—SFP management Ethernet port (C1) Cage (socket for either 1 GbE copper SFP or fiber SFP).QFX5200-32C-L does not support a second management interface.
3—RJ-45 console port (CON)	

The management panel consists of the following components:

- Chassis status LEDs
- Switch product number
- Management Ports CO and C1
 - CO—Use the RJ-45 connectors for 10/100/1000 BaseT or to cable a virtual management Ethernet (VME) interface for spine members in a VCF. See [“Connecting a Device to a Network for Out-of-Band Management” on page 99](#).



NOTE: For product SKUs with CO available in both copper and fiber, the copper CO has priority over fiber CO.

- C1—Use the SFP connector for 1000 BaseX on QFX5200-32C only.
- USB port for image updates.
- Console port (RJ-45) to support RS-232 serial ports. The LEDs above the port indicate status and link.

QFX5200-32C and QFX5200-32C-L Management Port and Console Port LEDs

The management ports and console port on a QFX5200-32C and QFX5200-32C-L have two LEDs that indicate link status and link activity. The management ports are labeled **CO** for 10/100/1000 BASE-T and **C1** for 10/100/1000 BASE-T and SFP 1000 BASE-X connections. The left LED indicates status; the right LED indicates link/activity.

Table 11 on page 35 describes the management ports and Table 12 on page 35 the console LED.

Table 11: Management Ports LEDs on a QFX5200-32C and QFX5200-32C-L

LED	Color	State	Description
Link/Activity	Unlit	Off	No link is established, there is a fault, or the link is down.
	Green	On steadily	A link is established, but there is no link activity.
		Blinking or flickering	A link is established, and there is link activity.
Status	Unlit	Off	Either the port speed is 10 M or the link is down.
	Green	On steadily	The port speed is 1000 M.
	Amber	On steadily	The port speed is 100 M.


Table 12: Console Port LED on a QFX5200-32C and QFX5200-32C-L

LED	Color	State	Description
Status	Unlit	Off	The console is off.
	Green	On steadily	The console is on.

QFX5200-48Y Management Panel

The management panel of the QFX5200-48Y is found on the port panel next to right of the quad small-form factor pluggable plus (QSFP28) ports. See Figure 10 on page 35 to locate the management panel.


Figure 10: QFX5200-48Y Port Panel

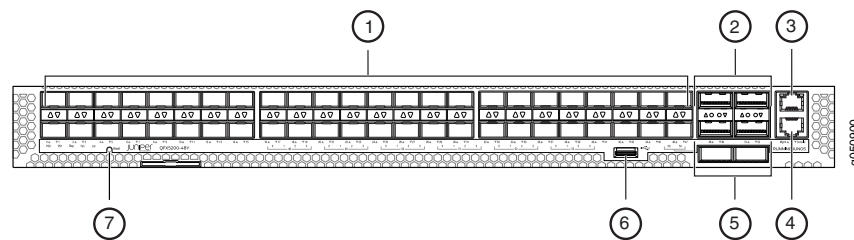

1— 48 SFP28 ports	5— 2 QSFP28 ports
2— 4 QSFP28 ports	6— USB port
3— RJ45 management port	7— System status LEDs
4— RJ45 console	

Figure 11 on page 36 describes the connections and components of the QFX5200-48Y management panel.

Figure 11: Management Panel Components on QFX5200-48Y

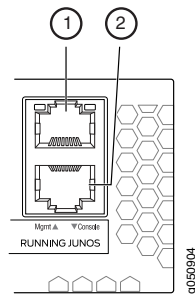

1—em0—RJ-45 (1000 BASE-T) management Ethernet port (Mgmt)	2—RJ-45 console port (Console)
--	---

QFX5200-48Y Management Port LEDs

The management port and console port on a QFX5200-48Y have two LEDs that indicate link status and link activity. The management port is labeled **Mgmt** for 10/100/1000 BASE-T connections. The left LED indicates status; the right LED indicates link/activity.

Table 13 on page 36 describes the management port LEDs.

Table 13: Management Port LEDs on a QFX5200-48Y Switch

LED	Color	State	Description
Link/Activity	Green	Unlit	No link is established, there is a fault, or the link is down.
		On steadily	A link is established, but there is no link activity.
		Blinking or flickering	A link is established, and there is link activity.
Status	Green	Unlit	The link is down.
		On steadily	The link is up.

Table 14: Console Port LED on a QFX5200-48Y

LED	Color	State	Description
Status	Green	Unlit	The console is off.
		On steadily	The console is on.

QFX5200 Chassis Status LEDs

The QFX5200 has a series of LEDs that indicate system status. The QFX5200-32C and QFX5200-32C-L have four chassis status LEDs on the management panel; the QFX5200-48Y has five chassis status LEDs on the port panel.


This topic includes:

- [QFX5200-32C and QFX5200-32C-L Chassis Status LEDs on page 37](#)
- [QFX5200-48Y Chassis Status LEDs on page 40](#)

QFX5200-32C and QFX5200-32C-L Chassis Status LEDs

The QFX5200-32C and QFX5200-32C-L have four status LEDs on the FRU side of the chassis, next to the management ports (see [Figure 12 on page 37](#)).

Figure 12: Locating Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L

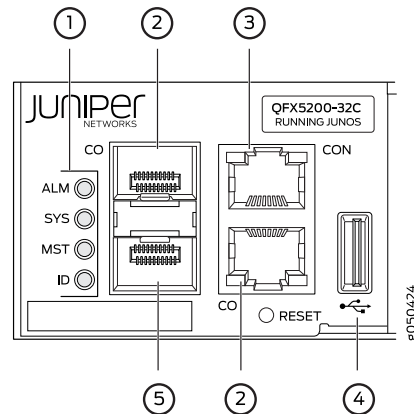

1— Status LEDs	4—USB port
2—QFX5200-32C—Use CO for the em0 interface using either RJ-45 (1000 Base-T) or fiber SFP connections. QFX5200-32C-L —use CO for the re0:mgmt-0 management interface.	5—For QFX5200-32C only—em1—SFP management Ethernet port (C1) Cage (socket for either 1 GbE copper SFP or fiber SFP).QFX5200-32C-L does not support a second management interface.
3—RJ-45 console port (CON)	

Use the **show chassis** operational CLI command to view the state of chassis LEDs and the network LEDs when remote from the device. This example is from a QFX5200-32C-L:

```
user@host> show chassis led
```

```
-----
LEDs status:
  Alarm LED : Off
  Beacon LED: Off
  System LED: Green
  Master LED: Green
```

```
Interface          STATUS LED    LINK/ACTIVITY LED
-----
et-0/0/0           N/A          Green
et-0/0/1           N/A          Off
et-0/0/2           N/A          Off
et-0/0/3           N/A          Off
et-0/0/4           N/A          Off
et-0/0/5           N/A          Off
et-0/0/6           N/A          Off
et-0/0/7           N/A          Off
```

et-0/0/8	N/A	Off
et-0/0/9	N/A	Off
et-0/0/10	N/A	Off
et-0/0/11	N/A	Off
et-0/0/12	N/A	Green
et-0/0/13	N/A	Off
et-0/0/14	N/A	Green
et-0/0/15	N/A	Green
et-0/0/16	N/A	Off
et-0/0/17	N/A	Off
et-0/0/18	N/A	Off
et-0/0/19	N/A	Off
et-0/0/20	N/A	Off
et-0/0/21	N/A	Off
et-0/0/22	N/A	Green
et-0/0/23	N/A	Green
et-0/0/24	N/A	Green
et-0/0/25	N/A	Green
et-0/0/26	N/A	Green
et-0/0/27	N/A	Green
et-0/0/28	N/A	Green
et-0/0/29	N/A	Off
et-0/0/30	N/A	Off
et-0/0/31	N/A	Off

[Table 15 on page 39](#) describes the chassis status LEDs on a QFX5200-32C and QFX5200-32C-L, their colors and states, and the status they indicate. You can view the colors of the three LEDs remotely through the CLI by issuing the operational mode command **show chassis lcd**.

Table 15: Interpreting Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L

Name	Color	State	Description
ALM—Alarm	Unlit	Off	The switch is halted or there is no alarm.
	Red	On steadily	A major hardware fault has occurred, such as a temperature alarm or power failure, and the switch has halted. Power off the QFX5200-32C or QFX5200-32C-L by setting the AC power source outlet to the OFF (O) position, or unplugging the AC power cords. Correct any voltage or site temperature issues, and allow the switch to cool down. Power on the QFX5200-32C and QFX5200-32C-L. Monitor the power supply and fan LEDs to help determine where the error is occurring.
	Amber	On steadily	A minor alarm has occurred, such as a software error. Power off the QFX5200-32C or QFX5200-32C-L by setting the AC power source outlet to the OFF (O) position, or unplugging the AC power cords. Power on the QFX5200-32C or QFX5200-32C-L and monitor the status LEDs to ensure that Junos OS boots properly.
SYS—System	Unlit	Off	The switch is powered off or halted.
	Green	On steadily	Junos OS for QFX Series is loaded on the switch.
MST—Master RE in a QFX5200-32C Virtual Chassis	Unlit	Off	The switch is standalone.
	Green	On steadily	The switch is operating as the master RE in a QFX5200-32C Virtual Chassis.
ID—Identification	Unlit	Off	The beacon feature is not enabled on the switch. This feature is enabled using the request chassis beacon fpc 0 on operational CLI command.
	Blue	Blinking	The beacon feature is enabled on the switch. This feature is disabled using the request chassis beacon fpc 0 off operational CLI command.


TIP: To find the status of the beacon, use the **show chassis beacon** operational CLI command.

```
user@host> show chassis beacon fpc 0
FPC 0          OFF
```

QFX5200-48Y Chassis Status LEDs

The QFX5200-48Y switch has five status LEDs on the port side of the chassis, (see Figure 13 on page 40.)

Figure 13: Locating Chassis Status LEDs on QFX5200-48Y

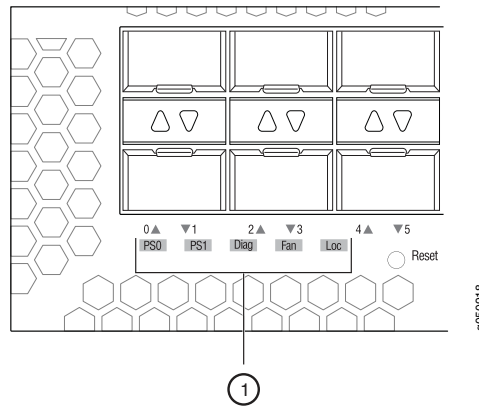

1— Chassis status LEDs

Table 16 on page 40 describes the chassis status LEDs on a QFX5200-48Y, their colors and states, and the status they indicate.

Table 16: Interpreting Chassis Status LEDs on a QFX5200-48Y

Name	Color	State	Description
PS1	Unlit	Off	Power supply not present.
(Power Supply Status)	Green	On steadily	Power supply is working correctly.
	Amber	On steadily	Power supply is faulty
PS2	Unlit	Off	Power supply not present.
(Power Supply Status)	Green	On steadily	Power supply is working correctly.
	Amber	On steadily	Power supply present but faulty.
Diag	Green	On steadily	System self-diagnostic test successfully completed.
(Diagnostic)	Amber	On steadily	System self-diagnostic test has detected a fault. (Fan, thermal or any interface fault.)

Table 16: Interpreting Chassis Status LEDs on a QFX5200-48Y (continued)

Name	Color	State	Description
FAN	Unlit	Off	The switch is powered off.
	Green	On steadily	Fan operating normally.
	Amber	On steadily	Fan present but faulty.
LOC	Unlit	Off	Not a switch to trace its location.
	Amber	Flashing	Flashing by remote management command. Assists the technician in finding the right device for service in the rack.

- Related Documentation**
- [show chassis alarms](#)
 - [request chassis beacon](#)

QFX5200 Cooling System

- [QFX5200 Cooling System Description on page 41](#)
- [QFX5200-32C and QFX5200-32C-L Fan Module LED on page 46](#)

QFX5200 Cooling System Description

The cooling system in an QFX5200-32C and QFX5200-32C-L consists of five fan modules and a single fan in each power supply; QFX5200-48Y cooling system consists of six fan modules and a single fan in each power supply. The switch can be set up to work in one of two airflow directions:

- Airflow In—Air comes into the switch through the vents in the field-replaceable units (FRUs)
- Airflow Out—Air comes into the switch through the vents in the port panel.



CAUTION: Airflow In and Airflow Out fans and power supplies cannot be mixed in the same chassis.

This topic describes:

- [Fan Modules on page 41](#)
- [Do Not Install Components with Different Airflow or Wattage in the Switch on page 45](#)

Fan Modules

The fan modules in QFX5200 devices are hot-insertable and hot-removable field-replaceable units (FRUs). These fan modules are designed for one of the two available airflow directions (Airflow In or Airflow Out). The fan modules are also

color-coded for the airflow direction as well. The fan modules are installed in the fan module slots on the FRU panel.

The QFX5200-32C and QFX5200-32C-L fan modules have five fan modules numbered 0 through 4 when counting from left to right.

The QFX5200-48Y fan modules have six fan modules numbered 0 through 5 when counting from left to right.

Figure 14 on page 42 and Figure 15 on page 42 shows the fan modules.

Figure 14: QFX5200-32C and QFX5200-32C-L Fan Modules


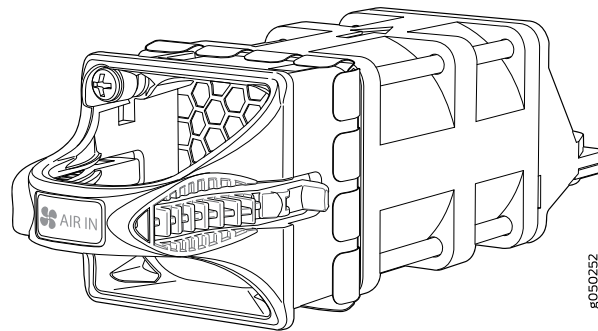


Figure 15: QFX5200-48Y Fan Module



You remove and replace a fan module from the FRU end of the chassis. The switch continues to operate for a limited period of time (30 seconds) during the replacement of the fan module without thermal shutdown.

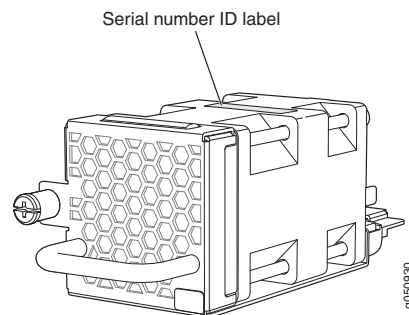

NOTE: All fan modules must be installed for optimal operation of the switch.

The fan modules are available in four product SKUs that have different airflow directions—FRU-to-port airflow and port-to-FRU airflow. On legacy switches or switches with LCDs, this airflow is also called front-to-back and back-to-front. Table 17 on page 43 lists the available fan module product SKUs and the direction of airflow in them:

Table 17: Fan Modules in QFX5200 Switches

Fan Module	Airflow Diagram	Label on the Fan Module	Color of Fan Module	Direction of Airflow in the Fan Module	Power Supplies
QFX5200-32C-FANAFI <i>NOTE:</i> Used for both QFX5200-32C-AFI and QFX5200-32C-LAFI	Figure 16 on page 44	AIR IN	Juniper Azure Blue	FRU-to-port, that is, air comes in from the end of the switch with the fans; air exhausts from the switch end with ports (also known as back-to-front airflow).	You must install only power supplies that have AIR IN labels in switches in which the fan modules have AIR IN labels.
QFX5200-32C-FANAFO <i>NOTE:</i> Used for both QFX5200-32C-AFO and QFX5200-32C-LAFO	Figure 17 on page 44	AIR OUT	Juniper Gold	Port-to-FRU, that is, air comes in through vents on the end with ports; air exhausts out the end with the fans (also known as front-to-back airflow).	You must install only power supplies that have AIR OUT labels in switches in which the fan modules have AIR OUT labels.
QFX5200-48Y-FAN-AFI	Figure 18 on page 45	AIR IN	Blue	FRU-to-port, that is, air comes in from the end of the switch with the fans; air exhausts from the switch end with ports (also known as back-to-front airflow).	You must install only power supplies that have AIR IN labels in switches in which the fan modules have AIR IN labels.
QFX5200-48Y-FAN-AFO	Figure 19 on page 45	AIR OUT	Red	Port-to-FRU, that is, air comes in through vents on the end with ports; air exhausts out the end with the fans (also known as front-to-back airflow).	You must install only power supplies that have AIR OUT labels in switches in which the fan modules have AIR OUT labels.

In data center deployments, position the switch in such a manner that the **AIR IN** labels on switch components are next to the cold aisle, and **AIR OUT** labels on switch components are next to the hot aisle.

Figure 16: Air In Airflow Through QFX5200-32C and QFX5200-32C-L

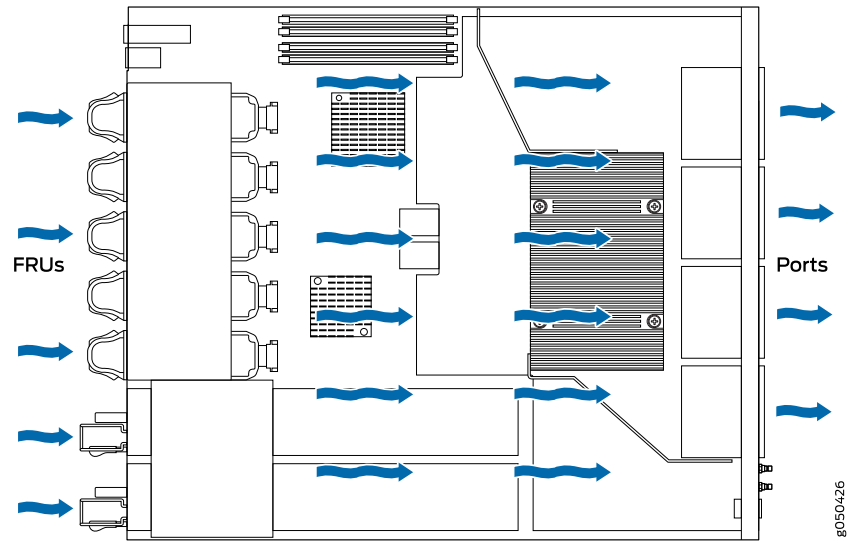


Figure 17: Air Out Airflow Through QFX5200-32C and QFX5200-32C-L

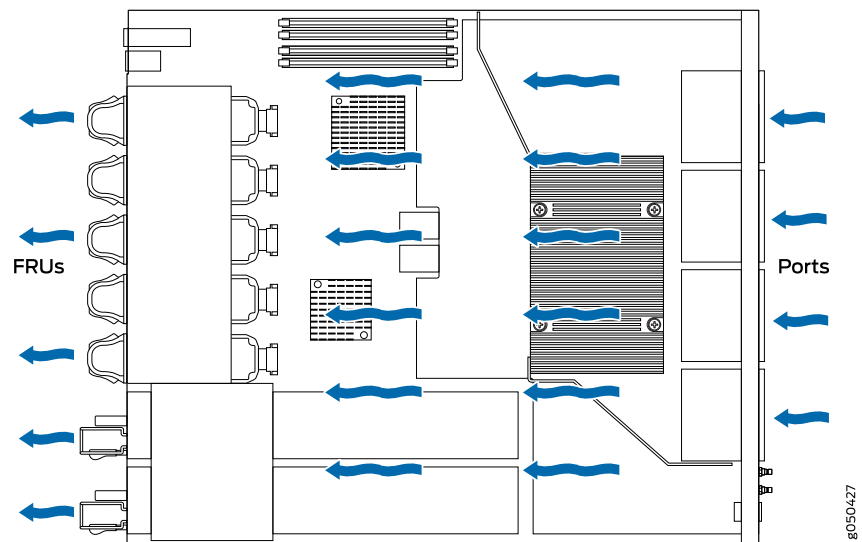


Figure 18: Air In Airflow Through QFX5200-48Y


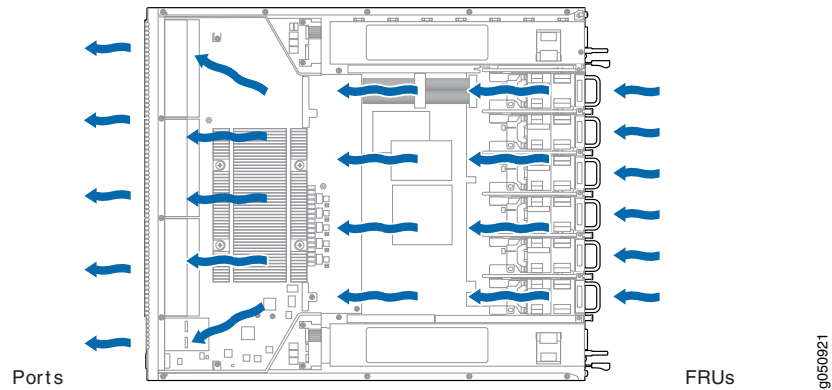


Figure 19: Air Out Airflow Through QFX5200-48Y

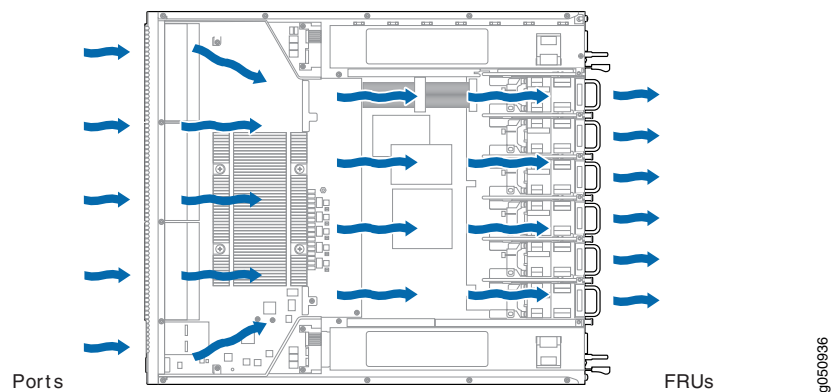

Do Not Install Components with Different Airflow or Wattage in the Switch

Do not mix power supplies with different airflow. If the power supplies are color-coded, ensure they are either all match. Likewise, ensure that all fan modules have the same airflow and match the airflow of the power supplies. Fan modules are also color-coded that match the power supplies.

Mixing components with different airflows in the same chassis hampers the performance of the cooling system of the switch and leads to overheating of the chassis.



CAUTION: The system raises an alarm if a fan module fails or if the ambient temperature inside the chassis rises above the acceptable range. If the temperature inside the chassis rises above the threshold temperature, the system shuts down automatically.

Do not mix fan modules with different wattage. Only use the replacement fan modules that are designed for use with your product number. See [Table 17 on page 43](#) for the correct part number for your QFX5200 device.




CAUTION: Do not mix AC and DC power supplies in the same QFX5200-32C or QFX5200-32C-L chassis. You may mix AC and DC power supplies in the same QFX5200-48Y chassis, but the fans and power supplies must have the same airflow direction. Also note that load sharing is not the same for AC and DC power supplies.

However if you need to convert a QFX5200 device to have a different airflow, you can change the airflow pattern. To convert an **AIR IN** product SKU to an **AIR OUT** product SKU or an **AIR OUT** product SKU to an **AIR IN** product SKU, you must replace all of the fans and power supplies at one time to use the new direction. The system raises an alarm when the system is converted, which is normal.

QFX5200-32C and QFX5200-32C-L Fan Module LED

On the QFX5200-32C and QFX5200-32C-L switches the fan module LEDs are located on the chassis next to the fan module slot. QFX5200-48Y fan modules do not have LED indicators. [Figure 20 on page 46](#) shows the location of the fan module LEDs next to the fan module on a QFX5200-32C and QFX5200-32C-L switch.

Figure 20: Fan Module LED in a QFX5200-32C or QFX5200-32C-L Switch

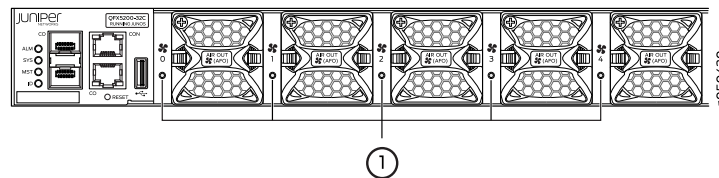

1— Fan module LED	
-------------------	--

[Table 18 on page 46](#) describes the function of the fan tray LED.

Table 18: Fan Tray LED in a QFX5200-32C or QFX5200-32C-L Switch

Name	Color	State	Description
Fan	Green	On steadily	The fan module is operating normally. The system has verified that the module is engaged, that the airflow is in the correct direction, and that the fan is operating correctly.
	Amber	Blinking	An error has been detected in the fan module. Replace the fan module as soon as possible. Either the fan has failed or it is seated incorrectly. To maintain proper airflow through the chassis, leave the fan module installed in the chassis until you are ready to replace it.

Under normal operating conditions, the fan modules operate at a moderate speed. Temperature sensors in the chassis monitor the temperature within the chassis.

The system raises an alarm if a fan module fails or if the ambient temperature inside the chassis rises above the acceptable range. If the temperature inside the chassis rises above the threshold temperature, the system shuts down automatically. Use the **show chassis fan** and on Junos OS Evolved systems the **show system alarms** operational CLI command. For example:

```
user@host> show chassis fan
```

Item	Status	% RPM	Measurement
Fan Tray 0 Fan 1	Ok	104%	19081 RPM
Fan Tray 0 Fan 2	Ok	107%	22500 RPM
Fan Tray 1 Fan 1	Ok	105%	19217 RPM
Fan Tray 1 Fan 2	Ok	103%	21686 RPM
Fan Tray 2 Fan 1	Ok	104%	19014 RPM
Fan Tray 2 Fan 2	Ok	104%	21951 RPM
Fan Tray 3 Fan 1	Ok	104%	18947 RPM
Fan Tray 3 Fan 2	Ok	102%	21428 RPM
Fan Tray 4 Fan 1	Ok	101%	18556 RPM
Fan Tray 4 Fan 2	Ok	101%	21259 RPM

For Junos OS Evolved systems only:

```
user@host> show system alarms
```

```
8 alarms currently active
Alarm time          Class  Description
2018-10-11 15:55:58 UTC Major  Fan Tray 0 Failure
2018-10-11 15:55:58 UTC Major  Fan Tray 1 Failure
2018-10-11 15:55:58 UTC Major  Fan Tray 2 Failure
2018-10-11 15:55:58 UTC Major  Fan Tray 3 Failure
2018-10-11 15:55:58 UTC Major  Fan Tray 4 Failure
```

Related Documentation • [Maintaining QFX5200 Cooling System on page 113](#)

QFX5200 Power System

- [QFX5200 AC Power Supply Description on page 48](#)
- [QFX5200 AC Power Specifications on page 49](#)
- [QFX5200 Power Cord Specifications on page 50](#)
- [QFX5200 AC Power Supply LEDs on page 52](#)
- [QFX5200 DC Power Supply Description on page 53](#)
- [QFX5200 DC Power Specifications on page 55](#)
- [QFX5200 DC Power Supply LEDs on page 56](#)

QFX5200 AC Power Supply Description

The two power supplies in QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs). The power supplies are installed in the switch at the factory. You can install replacement power supplies from the management panel without powering off the switch or disrupting the switching function. QFX5200 switches can operate with one PSU, but two power supplies are required to run without error messages and to have redundancy. See [Figure 21 on page 48](#) and [Figure 22 on page 48](#) for examples of QFX5200 AC power supplies.


The AC power supply in QFX5200-32C and QFX5200-32C-L switches is 850 W; the AC power supply in QFX5200-48Y switches is 650 W. Be sure to use the correct power supply for your chassis product SKU (see [Table 19 on page 49](#)).



CAUTION: Do not mix power supplies with different airflow or different wattage. The system raises an alarm when a power supply having a different airflow or wattage is inserted into the chassis.


You may mix AC and DC power supplies with the same airflow in QFX5200-48Y, but load sharing is different between the two designs.

Figure 21: 850 W AC Power Supply for QFX5200-32C and QFX5200-32C-L

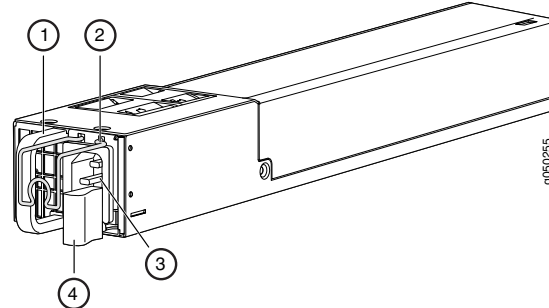


1—Handle	3—AC appliance inlet
2—Security latch	4—Ejector lever

Figure 22: 650 W AC Power Supply for QFX5200-48Y

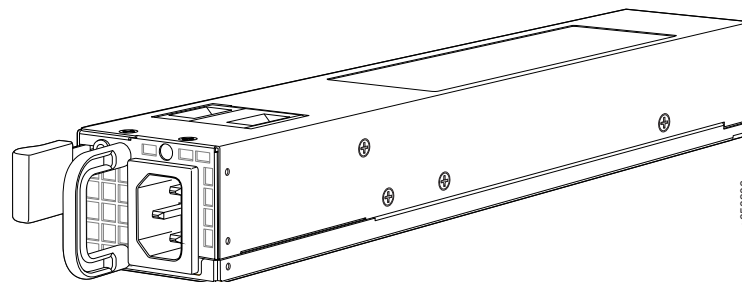

The power supply provides FRU-to-port or port-to-FRU airflow depending on the product SKU you purchase. The power supplies have color-coded indicators to indicate the airflow direction. Either the PSU handle or the panel behind the handle are color-coded. See [Figure 23 on page 49](#) for an example of the QFX5200-32C and QFX5200-32C-L power supplies and [Table 19 on page 49](#) to determine the airflow of the PSU.

Figure 23: Power Supply Handle Detail

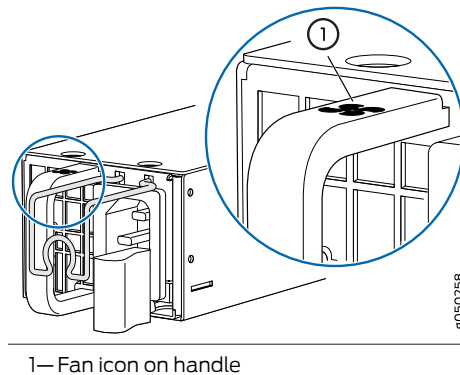

1— Fan icon on handle

Table 19: Color Indicators for Airflow Direction

Model	Part Number	Airflow Direction	Color Indicator
QFX5200-32C and QFX5200-32C-L	JPSU-850W-AC-AFI	Airflow In (FRU-to port)	Juniper Azure Blue handle
	JPSU-850W-AC-AFO	Airflow Out (port-to-FRU)	Juniper Gold handle
QFX5200-48Y	QFX520048Y-APSU-AI	Airflow In	Blue panel
	QFX520048Y-APSU-AO	Airflow Out	Red panel



CAUTION: Verify that the airflow direction on the power supply handle matches the direction of airflow in the chassis. Ensure that each power supply you install in the chassis has the same airflow direction. If you install power supplies with two different airflow directions, Junos OS raises an alarm. If you need to convert the airflow pattern on a chassis, you must change out all the fans and power supplies at one time to use the new direction.

To supply sufficient power, terminate the DC input wiring on a facility DC source that is capable of supplying a minimum of 7 A at –48 VDC.

To avoid electrical injury, carefully follow instructions in [“Connecting AC Power to a QFX5200” on page 102](#).

QFX5200 AC Power Specifications

[Table 20 on page 50](#) describes the AC power specifications for a QFX5200.

Table 20: AC Power Specifications for a QFX5200

Item	Specification	
AC input voltage	Operating range: <ul style="list-style-type: none"> • 100 / 240 VAC 	
AC input line frequency	50–60 Hz	
AC input current rating	QFX5200-32C and QFX5200-32C-L	4.5 A at 100–120 VAC 2.0 A at 200–240 VAC
	QFX5200-48Y	7.8 A at 100–120 VAC 3.8 A at 200–240 VAC
Typical power consumption	QFX5200-32C and QFX5200-32C-L	380 W
	QFX5200-48Y	382 W
Maximum power consumption	QFX5200-32C and QFX5200-32C-L	480 W
	QFX5200-48Y	430 W

QFX5200 Power Cord Specifications

Detachable AC power cords are shipped with the chassis, if you include them as part of your order. The coupler is type C13 as described by International Electrotechnical Commission (IEC) standard 60320. The plug at the male end of the power cord fits into the power source outlet that is standard for your geographical location.



NOTE: In North America, AC power cords must not exceed 14.75 feet (approximately 4.5 meters) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). The cords that can be ordered for the QFX Series switches are in compliance.

Table 21 on page 51 lists AC power cord specifications provided for each country or region.

Table 21: AC Power Cord Specifications

Country/Region	Electrical Specifications	Plug Standards	Shipped Juniper Model Number	Spare Juniper Model Number	Graphic
Australia	250 VAC, 10 A, 50 Hz	AS/NZ 3109-1996	CG_CBL-C13-06-AU	CBL-EX-PWR-C13-AU	
Brazil	250 VAC, 10 A, 50 Hz	NBR 14136 Type BR/3		CBL-PWR-C15M-HITEMP-BR	
China	250 VAC, 10 A, 50 Hz	GB 1002-1996	CG_CBL-C13-06-CH	CBL-EX-PWR-C13-CH	
Europe (except Italy, Switzerland, and United Kingdom)	250 VAC, 10 A, 50 Hz	CEE (7) VII	CG_CBL-C13-06-EU	CBL-EX-PWR-C13-EU	
Israel	250 VAC, 10 A, 50 Hz	SI 32/1971 Type IL/3G	CBL_CBL-C13-06-IL	CBL-EX-PWR-C13-IL	
Italy	250 VAC, 10 A, 50 Hz	CEI 23-16/VII	CG_CBL-C13-06-IT	CBL-EX-PWR-C13-IT	
Japan	125 VAC, 12 A, 50 Hz or 60 Hz	JIS C8303	CG_CBL-C13-06-JP	CBL-EX-PWR-C13-JP	
North America	125 VAC, 13 A, 60 Hz 250 VAC, 13 A, 60 Hz 250 VAC, 13 A, 60 Hz	CAN/CSA No. 49-92 NEMA L6-15 NEMA 6-15	CG_CBL-C13-06-US	CBL-EX-PWR-C13-US CBL-PW-C13-250-US CBL-PWR-C13-250-US	
South Africa and India	250 VAC, 10 A, 50 Hz	SABS 164/1:1992 Type ZA/3		CBL-PWR-C15M-HITEMP-SA	
South Korea	250 VAC, 10 A, 60 Hz 250 VAC, 13 A, 60 Hz	KSC 8305; K60884-1	CG_CBL-C13-06-KR	CBL-EX-PWR-C13-KR	
Switzerland	250 VAC, 10 A, 50 Hz	SEV 1011 SEV 1991; EN 60320 C13	CG_CBL-C13-06-SZ	CBL-EX-PWR-C13-SZ	
Taiwan	125 VAC, 11 A and 15 A, 50 Hz	NEMA 5-15P Type N5-15P	CG_CBL-C13-06-TW	CBL-EX-PWR-C13-TW	
United Kingdom	250 VAC, 10 A, 50 Hz	BS 1363/A	CG_CBL-C13-06-UK	CBL-EX-PWR-C13-UK	

QFX5200 AC Power Supply LEDs

The QFX5200-32C and QFX5200-32C-L uses three LEDs to indicate power status, while the QFX5200-48Y has a single bi-colored LED for power status. [Figure 24 on page 52](#) shows the location of the LEDs on the QFX5200-32C power supply. [Figure 25 on page 52](#) shows the LED location on a QFX5200-48Y power supply.

Figure 24: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L Switches


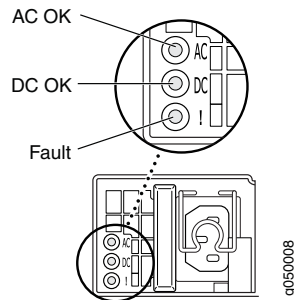


Figure 25: AC Power Supply LED on a QFX5200-48Y Switch

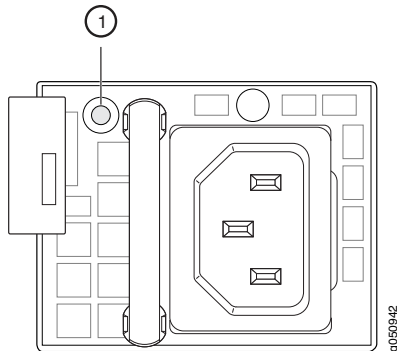

1— Bi-colored LED

[Table 22 on page 52](#) and [Table 23 on page 53](#) describe the LED behavior on the AC power supplies.

Table 22: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L

LED	Color	State	Description
AC OK	Unlit	Off	The power supply is disconnected from power, or power is not coming into the power supply.
	Green	On steadily	Power is coming into the power supply.
DC OK	Unlit	Off	The power supply is disconnected from power, or the power supply is not sending out power correctly.
	Green	On steadily	The power supply is sending out power correctly.

Table 22: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L (continued)

LED	Color	State	Description
Fault	Amber	On steadily	An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.



NOTE: If the AC OK LED and the DC OK LED are unlit, either the AC power cord is not installed properly or the power supply fuse has failed. If the AC OK LED is lit and the DC OK LED is unlit, the AC power supply is installed properly, but the power supply has an internal failure.

Table 23: AC Power Supply LED on a QFX5200-48Y


Color	State	Description
Unlit	Off	The power supply is disconnected from power, or power is not coming into the power supply.
Green	Blinking	The PSU is in standby mode. Power is coming into the power supply at +5V.
	On steadily	The power supply is sending out power correctly.
Alternating red/green	Blinking	Power supply warning. Check the logs for related messages.
Red	On steadily	An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.
	Blinking	The internal fan in the power supply has failed. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.

QFX5200 DC Power Supply Description

The power supplies in QFX5200 switches (see [Figure 26 on page 54](#) and [Figure 27 on page 54](#)) are hot-removable and hot-insertable field-replaceable units (FRUs). You can install the power supplies without powering off the switch or disrupting the switching function. QFX5200 switches can operate with one PSU, but two power supplies are required to run without error messages and to have redundancy.


The DC power supply in QFX5200-32C is 1100 W with dual feeds for power resiliency.

Figure 26: QFX5200-32C DC Power Supply

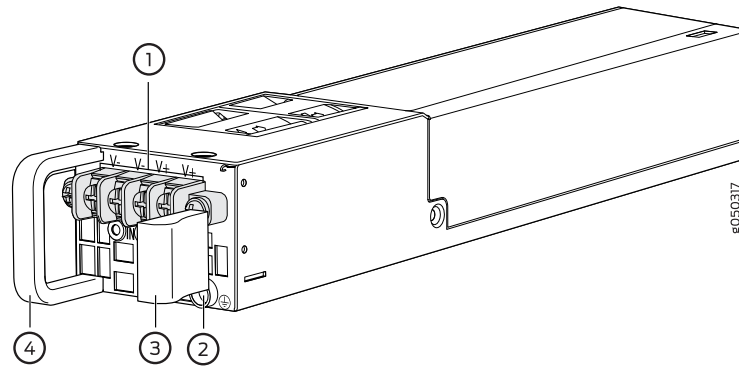


1— Terminal block	3—Ejector lever
2—ESD grounding point	4—Handle

Figure 27: QFX5200-48Y DC Power Supply

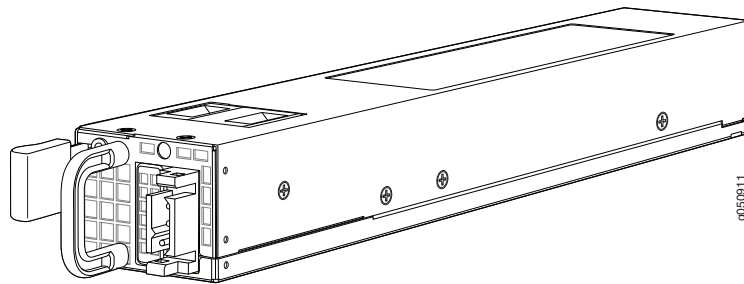


NOTE: The DC power supply in the switch has four terminals labeled V-, V-, V+, and V+ (see [Figure 28 on page 55](#) and [Figure 29 on page 55](#)) for connecting DC power source cables labeled positive (+) and negative (-).

Figure 28: QFX5200-32C DC Power Supply Faceplate

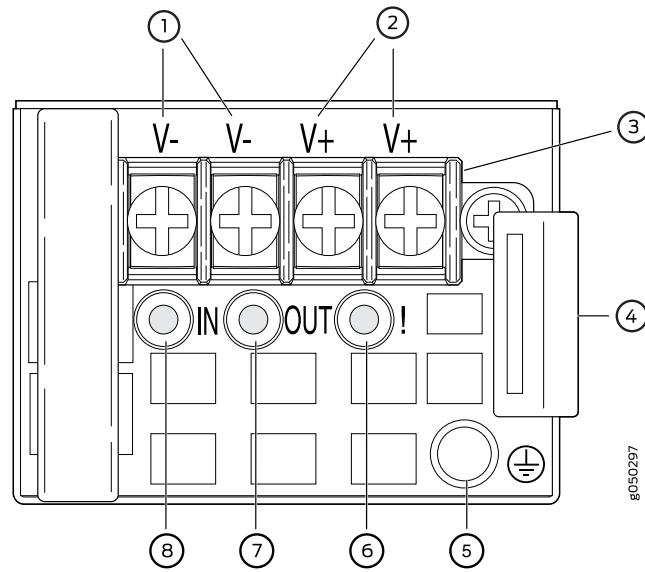

1—Shunt negative input terminals (-48V)	5—ESD grounding point
2—Shunt positive input terminals (+RTN)	6—Fault LED
3—Terminal block	7—Output LED
4—Ejector lever	8—Input LED

Figure 29: QFX5200-48Y DC Power Supply Faceplate

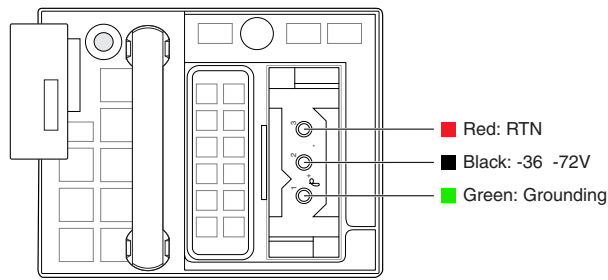

To avoid electrical injury, carefully follow instructions in “[Maintaining QFX5200 Power System](#)” on page 116.

QFX5200 DC Power Specifications

Table 24 on page 56 describes the QFX5200 DC power specifications.


Table 24: DC Power Specifications for a QFX5200

Item	Model	Specifications
DC input voltage	QFX5200-32C	<ul style="list-style-type: none"> Rated operating voltage: -48 VDC to -60 VDC Operating voltage range: -40 VDC through -72 VDC
	QFX5200-48Y	Rated operating voltage: -48 VDC to -60 VDC
DC input current rating	QFX5200-32C	10 A maximum
	QFX5200-48Y	-48 VDC to -60 VDC: 21A -36 VDC to -72 VDC: 25A to 11A
Typical power consumption	QFX5200-32C	300 W
	QFX5200-48Y	315 W
Maximum power consumption	QFX5200-32C	385 W
	QFX5200-48Y	470 W

QFX5200 DC Power Supply LEDs


Figure 30 on page 56 and Figure 31 on page 57 show the location of the LEDs on the QFX5200-32C DC power supply.

Figure 30: DC Power Supply Faceplate on a QFX5200-32C

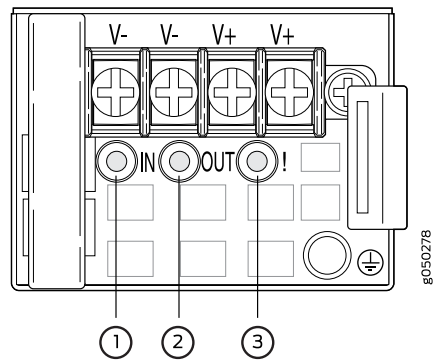

1—Input LED	3—Fault LED
2—Output LED	

Figure 31: DC Power Supply Faceplate on a QFX5200-48Y

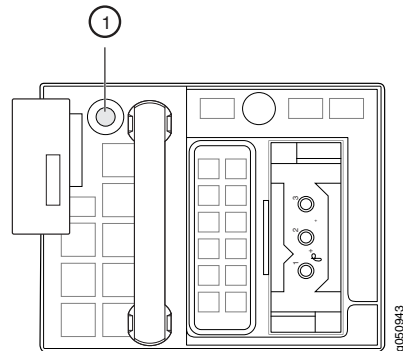

1— Bi-colored LED



CAUTION: The V+ terminals are shunted internally together, as are the V- terminals. The same polarity terminal can be wired together from the same source to provide an additional current path in a higher power chassis. Do not connect the terminals to different sources.

Table 25 on page 57 and Table 26 on page 57 describe the LEDs on the DC power supplies.

Table 25: DC Power Supply LEDs on a QFX5200-32C

Name	Color	State	Description
Input	Unlit	Off	The power supply is disconnected from power, or power is not coming into the power supply.
	Green	On steadily	Power is coming into the power supply.
Output	Unlit	Off	The power supply is disconnected from power, or the power supply is not sending out power correctly.
	Green	On steadily	The power supply is sending out power correctly.
Fault	Amber	On steadily	An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.

Table 26: DC Power Supply LED on a QFX5200-48Y

Color	State	Description
Unlit	Off	The power supply is disconnected from power, or power is not coming into the power supply.

Table 26: DC Power Supply LED on a QFX5200-48Y (continued)

Color	State	Description
Green	Blinking	The PSU is in standby mode. Power is coming into the power supply at +5V.
	On steadily	The power supply is sending out power correctly.
Alternating red/green	Blinking	Power supply warning. Check the logs for related messages.
Red	On steadily	An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.
	Blinking	The internal fan in the power supply has failed. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.

Related Documentation • [Maintaining QFX5200 Power System on page 116](#)

CHAPTER 2

Site Planning, Preparation, and Specifications

- [QFX5200 Site Preparation Checklist on page 59](#)
- [Planning a Virtual Chassis Deployment using QFX Devices on page 60](#)
- [QFX5200 Site Guidelines and Requirements on page 64](#)
- [QFX5200 Network Cable and Transceiver Planning on page 71](#)
- [QFX5200 Management Cable Specifications and Pinouts on page 77](#)

QFX5200 Site Preparation Checklist

The checklist in [Table 27 on page 59](#) summarizes the tasks you need to perform when preparing a site for a QFX5200 installation.

Table 27: Site Preparation Checklist

Item or Task	For More Information	Performed By	Date
Architecture			
Determine whether the QFX5200-32C will operate as a standalone switch or as a member in a Virtual Chassis. QFX5200-48Y and QFX5200-32C-L are supported only as standalone switches.	“Planning a Virtual Chassis Deployment using QFX Devices” on page 60		
Environment			
Verify that environmental factors such as temperature and humidity do not exceed switch tolerances.	“QFX5200 Environmental Requirements and Specifications” on page 64		
Power			
Measure the distance between external power sources and switch installation site.			
Calculate the power consumption and requirements.	“QFX5200 Power System” on page 47		
Rack or Cabinet			

Table 27: Site Preparation Checklist (continued)

Item or Task	For More Information	Performed By	Date
Verify that your rack or cabinet meets the minimum requirements for the installation of the switch.	“QFX5200 Rack Requirements” on page 69 “QFX5200 Cabinet Requirements” on page 70 “Determining QFX5200 Optical Interface Support” on page 71		
Plan rack or cabinet location, including required space clearances.	“QFX5200 Clearance Requirements for Airflow and Hardware Maintenance” on page 67		
Secure the rack or cabinet to the floor and building structure.			
Cables			
Acquire cables and connectors:	“Determining QFX5200 Optical Interface Support” on page 71		
<ul style="list-style-type: none"> Determine the number of cables needed based on your planned configuration. Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected. 			
Plan the cable routing and management.			

- Related Documentation**
- [General Safety Guidelines and Warnings on page 150](#)
 - [QFX5200 Installation Overview on page 87](#)

Planning a Virtual Chassis Deployment using QFX Devices

You can deploy QFX Series switches as members in three types of Virtual Chassis:

- QFX Virtual Chassis (QFX3500, QFX3600, QFX5100, and EX4300)
- QFX5110 Virtual Chassis (QFX5110 and QFX5100)
- QFX5200 Virtual Chassis (QFX5200-32C only)

QFX Virtual Chassis and QFX5110 Virtual Chassis allow you to interconnect a mixture of up to ten switches into one logical device and manage the device as a single chassis. QFX5200 Virtual Chassis is limited to three QFX5200-32C members.

A Virtual Chassis configuration has two Routing Engines—the master switch and the backup switch. All other participating switches operate as line cards. You create a Virtual Chassis by cabling the switches in a ring topology and configuring SFP+, QSFP+, or QSFP28 interfaces into Virtual Chassis ports (VCPs). VCPs are responsible for passing

all data and control traffic between member switches in the Virtual Chassis. All non-channelized QSFP28 or QSFP+ uplink interfaces on the switches can be configured into VCPs. All fixed SFP+ interfaces can also be configured into VCPs.

All members of the Virtual Chassis are required to run the same Junos OS Release. You can check the version and release by issuing the **show chassis version** CLI command.

This topic covers:

- [Valid Configurations for a QFX Virtual Chassis on page 61](#)
- [Valid Configurations for a QFX5110 Virtual Chassis on page 61](#)
- [Valid Configurations for a QFX5200 Virtual Chassis on page 62](#)
- [VC Deployment Checklist on page 62](#)

Valid Configurations for a QFX Virtual Chassis

Valid configurations are:

- All QFX5100 members (homogenous)—Supported QFX5100 models are:
 - QFX5100-24Q
 - QFX5100-48S
 - QFX5100-48T
 - QFX5100-96S
- All QFX3600 members (homogenous)
- All QFX3500 members (homogenous)
- A mixture of QFX3600 and QFX3500 members (heterogeneous)
- A mixture of QFX5100, QFX3600, and QFX3500 members (heterogeneous)—use the QFX5100 switches as master RE and backup RE whenever possible.
- A mixture of QFX5100, QFX3600, QFX3500, and EX4300 members (heterogeneous). EX4300 switches as the master RE or backup RE is not supported; use QFX5100 switches in these roles whenever possible.

An all EX4300 member is simply considered an EX4300 Virtual Chassis. See *Understanding EX Series Virtual Chassis*.

If the QSFP+ interfaces are not available for VCP, 10-Gigabit interfaces can be used.

Valid Configurations for a QFX5110 Virtual Chassis

Valid configurations are:

- All QFX5110 members (homogenous)—Supported QFX5110 models are:
 - QFX5110-32Q
 - QFX5110-48S

- A mixture of QFX5110 and QFX5100 members (homogenous)—use the QFX5110 models as the master RE and backup RE. Use the following QFX5100 switches in the line card role:
 - QFX5100-24Q
 - QFX5100-48S
 - QFX5100-48T
 - QFX5100-96S

Valid Configurations for a QFX5200 Virtual Chassis

You can create an all QFX5200-32C Virtual Chassis with up to three members. Use the QFX5200-32C in all three member roles: master RE, backup RE, and line card. Configure the Virtual Chassis Ports (VCPs) as 40-Gigabit Ethernet only. QFX5200-48Y is not supported in a QFX5200 Virtual Chassis.

VC Deployment Checklist

Use [Table 28 on page 62](#) to plan your deployment:

Table 28: Deployment Checklist

Item or Task	For More Information	Performed By	Date
Components			
Determine the number of devices in the Virtual Chassis and the role of each device (master RE, backup RE, or linecard).	<i>Understanding QFX Series Virtual Chassis</i> <i>Understanding Virtual Chassis Components</i>		
NOTE: A Virtual Chassis is not constrained to a single building; the limits for the optic cable are the only consideration.			
Environment			
Evaluate the provisioning options and determine the configuration method that applies to your deployment.	<i>Configuring a QFX Series Virtual Chassis</i>		
Power			
Measure the distance between external power sources and switch installation site.			

Table 28: Deployment Checklist (continued)

Item or Task	For More Information	Performed By	Date
Calculate the power consumption and requirements.	<p><i>QFX5110 AC Power Specifications</i></p> <p><i>AC Power Specifications for a QFX5100 Device</i></p> <p><i>AC Power Specifications for a QFX3600 or QFX3600-I Device</i></p> <p><i>AC Power Specifications for a QFX3500 Device</i></p> <p><i>AC Power Specifications for an EX4600 Switch</i></p> <p><i>AC Power Supply Specifications for EX4300 Switches</i></p>		
Rack or Cabinet			
Verify that your rack or cabinet meets the minimum requirements for the installation of the switch.	<p><i>QFX5110 Rack Requirements</i></p> <p><i>Rack Requirements for a QFX5100 Device</i></p> <p><i>Cabinet Requirements for a QFX5100 Device</i></p> <p><i>Rack Requirements for a QFX3600 or QFX3600-I Device</i></p> <p><i>Cabinet Requirements for a QFX3600 or QFX3600-I Device</i></p> <p><i>Rack Requirements for a QFX3500 Device</i></p> <p><i>Cabinet Requirements for a QFX3500 Device</i></p> <p><i>Rack Requirements for an EX4600 Switch</i></p> <p><i>Cabinet Requirements for an EX4600 Switch</i></p> <p><i>Rack Requirements for a EX4300 Device</i></p> <p><i>Cabinet Requirements for a EX4300 Device</i></p>		
Plan rack or cabinet location, including required space clearances.	<p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX5100 Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX3600 or QFX3600-I Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX3500 Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for an EX4600 Switch</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for EX4300 Switches</i></p>		
Secure the rack or cabinet to the floor and building structure.			

Table 28: Deployment Checklist (continued)

Item or Task	For More Information	Performed By	Date
Cables			
Acquire cables and connectors:	<ul style="list-style-type: none"> Cable Specifications for QSFP+ and QSFP28 Transceivers on page 72 Cable Specifications for Console and Management Connections for the QFX Series on page 77 Understanding EX Series Switches Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion Understanding QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 74 		
<ul style="list-style-type: none"> Determine the number of cables needed based on your planned configuration. Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected. 			
Plan the cable routing and management.			

- Related Documentation**
- [QFX5110 Site Preparation Checklist](#)
 - [Site Preparation Checklist for a QFX5100 Device](#)
 - [Site Preparation Checklist for a QFX3600 or QFX3600-I Device](#)
 - [Site Preparation Checklist for a QFX3500 Device](#)
 - [Site Preparation Checklist for EX4300 Switches](#)

QFX5200 Site Guidelines and Requirements

- [QFX5200 Environmental Requirements and Specifications on page 64](#)
- [General Site Guidelines on page 66](#)
- [QFX5200 Grounding Cable and Lug Specifications on page 66](#)
- [QFX5200 Clearance Requirements for Airflow and Hardware Maintenance on page 67](#)
- [QFX5200 Chassis Physical Specifications on page 68](#)
- [QFX5120 Site Electrical Wiring Guidelines on page 69](#)
- [QFX5200 Rack Requirements on page 69](#)
- [QFX5200 Cabinet Requirements on page 70](#)

QFX5200 Environmental Requirements and Specifications

The switch must be installed in a rack or cabinet. It must be housed in a dry, clean, well-ventilated, and temperature-controlled environment.

Follow these environmental guidelines:

- The site must be as dust-free as possible, because dust can clog air intake vents and filters, reducing the efficiency of the switch cooling system.

- Maintain ambient airflow for normal switch operation. If the airflow is blocked or restricted, or if the intake air is too warm, the switch might overheat, leading to the switch temperature monitor shutting down the device to protect the hardware components.

Table 29 on page 65 provides the required environmental conditions for normal switch operation.

Table 29: QFX5200 Switch Environmental Tolerances

Description	Model	Tolerance
Altitude	QFX5200-32C and QFX5200-32C-L	No performance degradation to 6,562 feet (2000 meters)
	QFX5200-48Y	No performance degradation to 13,000 feet (3,962 meters)
Relative humidity, operating	QFX5200-32C and QFX5200-32C-L	<p>Normal operation ensured in relative humidity range of 5% through 90%, noncondensing</p> <ul style="list-style-type: none"> • Short-term operation ensured in relative humidity range of 5% through 93%, noncondensing <p>NOTE: As defined in NEBS GR-63-CORE, Issue 3, short-term events can be up to 96 hours in duration but not more than 15 days per year.</p>
	QFX5200-48Y	Normal operation ensured in relative humidity range of 5% through 93%, noncondensing for airflow out (AFO) models and 10% through 93%, noncondensing for airflow in (AFI) models
Temperature	QFX5200-32C and QFX5200-32C-L	<ul style="list-style-type: none"> • Normal operation ensured in temperature range of 32° F through 104° F (0° C through 40° C) • Nonoperating storage temperature in shipping container: -40° F through 158° F (-40° C through 70° C)
	QFX5200-48Y	<ul style="list-style-type: none"> • Normal operation ensured in temperature range of 32° F through 113° F (0° C through 45° C) for AFO models, 32° F through 104° F (0° C through 40° C) for AFI models • Nonoperating storage temperature in shipping container: -40° F through 158° F (-40° C through 70° C) for both AFO and AFI
Seismic	QFX5200 all models	Designed to comply with Zone 4 earthquake requirements per NEBS GR-63-CORE, Issue 3.



NOTE: Install QFX Series devices only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.

General Site Guidelines

Efficient device operation requires proper site planning and maintenance and proper layout of the equipment, rack or cabinet (if used), and wiring closet.

To plan and create an acceptable operating environment for your device and prevent environmentally caused equipment failures:

- Keep the area around the chassis free from dust and conductive material, such as metal flakes.
- Follow prescribed airflow guidelines to ensure that the cooling system functions properly and that exhaust from other equipment does not blow into the intake vents of the device.
- Follow the prescribed electrostatic discharge (ESD) prevention procedures to prevent damaging the equipment. Static discharge can cause components to fail completely or intermittently over time.
- Install the device in a secure area, so that only authorized personnel can access the device.

QFX5200 Grounding Cable and Lug Specifications

For installations that require a separate grounding conductor to the chassis, the switch must be adequately grounded before power is connected to ensure proper operation and to meet safety and electromagnetic interference (EMI) requirements. To ground a QFX5200-32C or QFX5200-32C-L, connect a grounding cable with a grounding lug to earth ground and then attach it to the chassis.



NOTE: A ground connection to the protective earthing terminal is not required for an AC-powered switch. The AC power cords provide adequate grounding when you connect the power supply in the switch to a grounded AC power outlet by using the AC power cord appropriate for your geographical location.



WARNING: The switch is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth ground for installations that require a separate grounding conductor to the chassis.



WARNING: To comply with GR-1089 requirements, all intra-building copper cabling used for SFP+ and QSFP+ ports must be shielded and grounded at both ends.



CAUTION: Before switch installation begins, a licensed electrician must attach a cable lug to the grounding cables that you supply. See “[Connecting the QFX5200 Grounding Cable](#)” on page 98. A cable with an incorrectly attached lug can damage the switch.

Before connecting the switch to earth ground, review the following information:

- The grounding lug required for a QFX5200-32C or a QFX5200-32C-L is a Panduit LCD10-10A-L or equivalent (not provided). The grounding lug should accommodate 14–10 AWG (2–5.3 mm²) stranded wire. The grounding lug required for a QFX5200-48Y is tin-plated brass 4.3 mm ring terminal that supports 18–14 AWG (0.8–2 mm²) and an M4 screw.
- The grounding cable that you provide for a QFX5200-32C or QFX5200-32C-L must be 14 AWG (2 mm²), minimum 60° C wire, or as permitted by the local code.
- For QFX5200-32C or a QFX5200-32C-L, ensure you have two SAE 10-32 washers and screws to attach the cable and bracket (not provided).

QFX5200 Clearance Requirements for Airflow and Hardware Maintenance

When planning the site for installing a QFX5200, you must allow sufficient clearance around the installed chassis (see [Figure 32 on page 67](#) and [Figure 33 on page 68](#)).

Figure 32: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-32C and QFX5200-32C-L


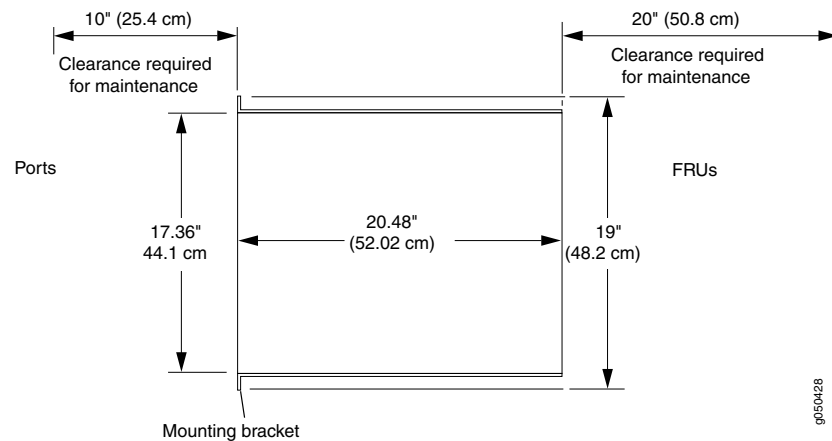


Figure 33: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-48Y

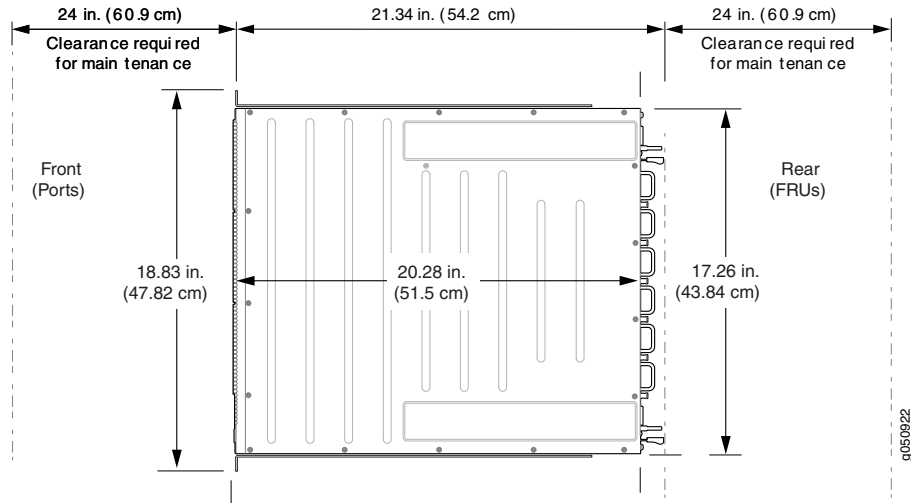

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. See “[QFX5200 Cooling System Description](#)” on page 41 for more information about the airflow through the chassis.
- If you are mounting a QFX5200 in a rack or cabinet with other equipment, ensure that the exhaust from other equipment does not blow into the intake vents of the chassis.
- Leave at least 24 in. (61 cm) both in front of and behind the QFX5200. For service personnel to remove and install hardware components, you must leave adequate space at the front and back of the switch. NEBS GR-63 recommends that you allow at least 30 in. (76.2 cm) in front of the rack or cabinet and 24 in. (61 cm) behind the rack or cabinet.

QFX5200 Chassis Physical Specifications

The QFX5200 is a rigid sheet-metal structure that houses the hardware components. [Table 30 on page 68](#) summarizes the physical specifications of the QFX5200.

Table 30: Physical Specifications for the QFX5200

Product SKU	Height	Width	Depth	Weight
QFX5200-32C and QFX5200-32C-L	1.72 in. (4.3 cm)	17.36 in. (44.1 cm)	20.48 in. (52 cm)	23.5 lbs (10.66 kg)
QFX5200-48Y	1.71 in. (4.34 cm)	17.25 in. (43.81 cm)	20.27 in. (51.48 cm)	30.00 lbs (13.60 kg)

QFX5120 Site Electrical Wiring Guidelines

Table 31 on page 69 describes the factors you must consider while planning the electrical wiring at your site.



WARNING: It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.

Table 31: Site Electrical Wiring Guidelines

Site Wiring Factor	Guidelines
Signaling limitations	<p>If your site experiences any of the following problems, consult experts in electrical surge suppression and shielding:</p> <ul style="list-style-type: none"> Improperly installed wires cause radio frequency interference (RFI). Damage from lightning strikes occurs when wires exceed recommended distances or pass between buildings. Electromagnetic pulses (EMPs) caused by lightning damage unshielded conductors and electronic devices.
Radio frequency interference	<p>To reduce or eliminate RFI from your site wiring, do the following:</p> <ul style="list-style-type: none"> Use a twisted-pair cable with a good distribution of grounding conductors. If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.
Electromagnetic compatibility	<p>If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, seek expert advice.</p> <p>Some of the problems caused by strong sources of electromagnetic interference (EMI) are:</p> <ul style="list-style-type: none"> Destruction of the signal drivers and receivers in the device Electrical hazards as a result of power surges conducted over the lines into the equipment

QFX5200 Rack Requirements

QFX5200 switches are designed to be installed on four-post racks.

Rack requirements consist of:

- Rack type
- Mounting bracket hole spacing
- Rack size and strength

Table 32 on page 70 provides the rack requirements and specifications for the QFX5200.

Table 32: Rack Requirements for the QFX5200

Rack Requirement	Guidelines
Rack type	<p>Use a four-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75 in. or 4.45 cm) increments and that meets the size and strength requirements to support the weight.</p> <p>A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association.</p>
Mounting bracket hole spacing	The holes in the mounting brackets are spaced at 1 U (1.75 in. or 4.45 cm), so that the switch can be mounted in any rack that provides holes spaced at that distance.
Rack size and strength	<ul style="list-style-type: none"> Ensure that the rack complies with the standards for a 19-in. or 23-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association. A 600-mm rack as defined in the four-part <i>Equipment Engineering (EE); European telecommunications standard for equipment practice</i> (document numbers ETS 300 119-1 through 119-4) published by the European Telecommunications Standards Institute (http://www.etsi.org > http://www.etsi.org). <p>The horizontal spacing between the rails in a rack that complies with this standard is usually wider than the device's mounting brackets, which measure 19 in. (48.26 cm) from outer edge to outer edge. Use approved wing devices to narrow the opening between the rails as required.</p> <ul style="list-style-type: none"> Ensure that the rack rails are spaced widely enough to accommodate the switch chassis' external dimensions. The outer edges of the front-mounting brackets extend the width to 19 in. (48.26 cm). For four-post installations, the front and rear rack rails must be spaced between 23.6 in. (60 cm) and 36 in. (91.4 cm) front-to-back. The rack must be strong enough to support the weight of the switch. Ensure that the spacing of rails and adjacent racks allows for proper clearance around the switch and rack.
Rack connection to building structure	<ul style="list-style-type: none"> Secure the rack to the building structure. If earthquakes are a possibility in your geographical area, secure the rack to the floor. Secure the rack to the ceiling brackets as well as wall or floor brackets for maximum stability.

QFX5200 Cabinet Requirements

You can mount the QFX5200 in an enclosure or cabinet that contains a four-post 19-in. open rack as defined in *Cabinets, Racks, Panels, and Associated Equipment* (document number EIA-310-D) published by the Electronics Industry Association.

Cabinet requirements consist of:

- Cabinet size and clearance
- Cabinet airflow requirements

Table 33 on page 71 provides the cabinet requirements and specifications for the QFX5200.

Table 33: Cabinet Requirements for the QFX5200

Cabinet Requirement	Guidelines
Cabinet size and clearance	The minimum cabinet size for accommodating a QFX5200 device is 36 in. (91.4 cm) deep. Large cabinets improve airflow and reduce the chance of overheating.
Cabinet airflow requirements	<p>When you mount the switch in a cabinet, ensure that ventilation through the cabinet is sufficient to prevent overheating.</p> <ul style="list-style-type: none"> • Ensure that the cool air supply you provide through the cabinet adequately dissipates the thermal output of the switch (or switches). • Ensure that the cabinet allows the chassis hot exhaust air to exit the cabinet without recirculating into the switch. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. • The QFX5200 fans exhaust hot air either through the vents on the port panel or through the fans and power supplies. Install the switch in the cabinet in a way that maximizes the open space on the FRU side of the chassis. This maximizes the clearance for critical airflow. • Route and dress all cables to minimize the blockage of airflow to and from the chassis. • Ensure that the spacing of rails and adjacent cabinets allows for the proper clearance around the switch and cabinet.

- Related Documentation**
- [QFX5200 Installation Overview on page 87](#)
 - [Connecting the QFX5200 Grounding Cable on page 98](#)
 - [QFX5200 Cooling System Description on page 41](#)

QFX5200 Network Cable and Transceiver Planning

- [Determining QFX5200 Optical Interface Support on page 71](#)
- [Cable Specifications for QSFP+ and QSFP28 Transceivers on page 72](#)
- [Understanding QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 74](#)
- [Calculating Power Budget and Power Margin for Fiber-Optic Cables on page 75](#)

Determining QFX5200 Optical Interface Support

You can find information about the optical transceivers supported on your Juniper device by using the Hardware Compatibility Tool. In addition to transceiver and connection type, the optical and cable characteristics—where applicable—are documented for each transceiver. The Hardware Compatibility Tool enables you to search by product, displaying all the transceivers supported on that device, or category, by interface speed or type. The list of supported transceivers for the QFX5200-32C and QFX5200-32C-L is located at <https://apps.juniper.net/hct/product/#prd=QFX5200-32C> and <https://apps.juniper.net/hct/product/#prd=QFX5200-48Y>



CAUTION: If you face a problem running a Juniper Networks device that uses a third-party optic or cable, the Juniper Networks Technical Assistance Center (JTAC) can help you diagnose the source of the problem. Your JTAC engineer might recommend that you check the third-party optic or cable and potentially replace it with an equivalent Juniper Networks optic or cable that is qualified for the device.



NOTE: For interoperability with other QFX Series switches, ensure auto-negotiation on the QFX5200 is disabled.

Cable Specifications for QSFP+ and QSFP28 Transceivers

The 40-Gigabit Ethernet QSFP+ and 100-Gigabit Ethernet QSFP28 transceivers that are used in QFX Series switches use 12-ribbon multimode fiber crossover cables with female MPO/UPC connectors. The fiber can be either OM3 or OM4. These cables are not sold by Juniper Networks.



CAUTION: To maintain agency approvals, use only a properly constructed, shielded cable.



TIP: Ensure that you order cables with the correct polarity. Vendors refer to these crossover cables as *key up to key up*, *latch up to latch up*, *Type B*, or *Method B*. If you are using patch panels between two QSFP+ or QSFP28 transceivers, ensure that the proper polarity is maintained through the cable plant.

Table 34 on page 72 describes the signals on each fiber. Table 35 on page 73 shows the pin-to-pin connections for proper polarity.

Table 34: QSFP+ and QSFP28 Optical Module Receptacle Pinouts

Fiber	Signal
1	Tx0 (Transmit)
2	Tx1 (Transmit)
3	Tx2 (Transmit)
4	Tx3 (Transmit)
5	Unused
6	Unused

Table 34: QSFP+ and QSFP28 Optical Module Receptacle Pinouts (continued)

Fiber	Signal
7	Unused
8	Unused
9	Rx3 (Receive)
10	Rx2 (Receive)
11	Rx1 (Receive)
12	Rx0 (Receive)

Table 35: QSFP+ MPO Fiber-Optic Crossover Cable Pinouts

Pin	Pin
1	12
2	11
3	10
4	9
5	8
6	7
7	6
8	5
9	4
10	3
11	2
12	1

Understanding QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

To determine the power budget and power margin needed for fiber-optic connections, you need to understand how signal loss, attenuation, and dispersion affect transmission. The QFX Series uses various types of network cables, including multimode and single-mode fiber-optic cables.

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cables on page 74](#)
- [Attenuation and Dispersion in Fiber-Optic Cable on page 74](#)

Signal Loss in Multimode and Single-Mode Fiber-Optic Cables

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent light sources. They spray varying wavelengths of light into the multimode fiber, which reflect the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding (layers of lower refractive index material in close contact with a core material of higher refractive index), higher-order mode loss occurs. Together, these factors reduce the transmission distance of multimode fiber compared to that of single-mode fiber.

Single-mode fiber is so small in diameter that rays of light reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared to multimode fiber, single-mode fiber has a higher bandwidth and can carry signals for longer distances. It is consequently more expensive.

For information about the maximum transmission distance and supported wavelength range for the types of single-mode and multimode fiber-optic cables that are connected to the QFX Series, see [the Hardware Compatibility Tool](#). Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

Attenuation and Dispersion in Fiber-Optic Cable

An optical data link functions correctly provided that modulated light reaching the receiver has enough power to be demodulated correctly. Attenuation is the reduction in strength of the light signal during transmission. Passive media components such as cables, cable splices, and connectors cause attenuation. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode and single-mode transmission. An efficient optical data link must transmit enough light to overcome attenuation.

Dispersion is the spreading of the signal over time. The following two types of dispersion can affect signal transmission through an optical data link:

- Chromatic dispersion, which is the spreading of the signal over time caused by the different speeds of light rays.

- Modal dispersion, which is the spreading of the signal over time caused by the different propagation modes in the fiber.

For multimode transmission, modal dispersion, rather than chromatic dispersion or attenuation, usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion limits the maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be within the limits specified for the type of link in the Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

Calculating Power Budget and Power Margin for Fiber-Optic Cables

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

1. [Calculating Power Budget for Fiber-Optic Cable on page 75](#)
2. [Calculating Power Margin for Fiber-Optic Cable on page 76](#)

Calculating Power Budget for Fiber-Optic Cable

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget, which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of power budget (P_B), you assume minimum transmitter power (P_T) and minimum receiver sensitivity (P_R):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

Calculating Power Margin for Fiber-Optic Cable

After calculating a link's power budget, you can calculate the power margin (P_M), which represents the amount of power available after subtracting attenuation or link loss (LL) from the power budget (P_B). A worst-case estimate of P_M assumes maximum LL:

$$P_M = P_B - LL$$

P_M greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 36 on page 76](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

Table 36: Estimated Values for Factors Causing Link Loss

Link-Loss Factor	Estimated Link-Loss Value
Higher-order mode losses	Single-mode—None Multimode—0.5 dB
Modal and chromatic dispersion	Single-mode—None Multimode—None, if product of bandwidth and distance is less than 500 MHz-km
Connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	Single-mode—0.5 dB/km Multimode—1 dB/km

The following sample calculation for a 2-km-long multimode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 36 on page 76](#) to calculate link loss (LL) as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km} (1 \text{ dB/km}) - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 36 on page 76](#) to calculate link loss (LL) as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km} (0.5 \text{ dB/km}) - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both examples, the calculated power margin is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

Related Documentation

- [Maintaining Transceivers and Fiber Optic Cables on QFX5200 on page 120](#)

QFX5200 Management Cable Specifications and Pinouts

- [Cable Specifications for Console and Management Connections for the QFX Series on page 77](#)
- [RJ-45 Management Port Connector Pinout Information on page 78](#)
- [Console Port Connector Pinouts for the QFX Series on page 78](#)
- [RJ-45 Port, QSFP+ Port, QSFP28 Port, SFP+ Port, and SFP Port Connector Pinout Information on page 79](#)
- [USB Port Specifications for the QFX Series on page 85](#)

Cable Specifications for Console and Management Connections for the QFX Series

[Table 37 on page 77](#) lists the specifications for the cables that connect the QFX Series to a management device.



NOTE: The QFX Series can be configured with SFP management ports that support 1000BASE-SX transceivers. See the [Hardware Compatibility Tool](#) for more on the fiber-optic cables required for use with these transceivers.

Table 37: Cable Specifications for Console and Management Connections for the QFX Series

Port on QFX Series Device	Cable Specification	Cable Supplied	Maximum Length	Device Receptacle
Console port	RS-232 (EIA-232) serial cable	One 7-foot (2.13-meter) long RJ-45 patch cable and RJ-45 to DB-9 adapter	7 feet (2.13 meters)	RJ-45

Table 37: Cable Specifications for Console and Management Connections for the QFX Series (continued)

Port on QFX Series Device	Cable Specification	Cable Supplied	Maximum Length	Device Receptacle
Management port	Category 5 cable or equivalent suitable for 1000BASE-T operation	One 7-foot (2.13-meter) long RJ-45 patch cable	328 feet (100 meters)	RJ-45

RJ-45 Management Port Connector Pinout Information

Table 38 on page 78 provides the pinout information for the RJ-45 connector for the management port on Juniper Networks devices.

Table 38: RJ-45 Management Port Connector Pinout Information

Pin	Signal	Description
1	TRP1+	Transmit/receive data pair 1
2	TRP1-	Transmit/receive data pair 1
3	TRP2+	Transmit/receive data pair 2
4	TRP3+	Transmit/receive data pair 3
5	TRP3-	Transmit/receive data pair 3
6	TRP2-	Transmit/receive data pair 2
7	TRP4+	Transmit/receive data pair 4
8	TRP4-	Transmit/receive data pair 4

Console Port Connector Pinouts for the QFX Series

The console port (labeled **CON**, or **CONSOLE**) is an RS-232 serial interface that uses an RJ-45 connector to connect to a console management device. The default baud rate for the console port is 9600 baud.

Table 39 on page 79 provides the pinout information for the RJ-45 console connector. An RJ-45 cable and RJ-45 to DB-9 adapter are supplied with the QFX Series device.



NOTE: If your laptop or PC does not have a DB-9 male connector pin and you want to connect your laptop or PC directly to a QFX Series device, use a combination of the RJ-45 cable and RJ-45 to DB-9 adapter supplied with the device and a USB to DB-9 male adapter. You must provide the USB to DB-9 male adapter.

Table 39: Console Port Connector Pinouts for the QFX Series

Pin	Signal	Description
1	RTS Output	Request to send
2	DTR Output	Data terminal ready
3	TxD Output	Transmit data
4	Signal Ground	Signal ground
5	Signal Ground	Signal ground
6	RxD Input	Receive data
7	DCD Input	Data carrier detect
8	CTS Input	Clear to send

RJ-45 Port, QSFP+ Port, QSFP28 Port, SFP+ Port, and SFP Port Connector Pinout Information

The Tables in this topic describe the connector pinout information for the RJ-45, QSFP+, QSFP28, SFP+, and SFP ports.

- [Table 40 on page 79](#)—10/100/1000BASE-T Ethernet network port connector pinout information for EX4300 switches, except EX4300-48MP and EX4300-48MP-S switches
- [Table 41 on page 80](#)—10/100/1000BASE-T Ethernet network port and 100/1000/2500/5000/10000BASE-T Ethernet network port connector pinout information for EX4300-48MP and EX4300-48MP-S switches
- [Table 42 on page 81](#)—SFP network port connector pinout information
- [Table 43 on page 82](#)—SFP+ network port connector pinout information
- [Table 44 on page 83](#)—QSFP+ and QSFP28 network module ports connector pinout information

Table 40: 10/100/1000BASE-T Ethernet Network Port Connector Pinout Information for EX4300 Switches Except EX4300-48MP and EX4300-48MP-S Switches

Pin	Signal	Description
1	TRPI+	Transmit/receive data pair 1 Negative Vport (in PoE models)
2	TRPI-	Transmit/receive data pair 1 Negative Vport (in PoE models)

Table 40: 10/100/1000BASE-T Ethernet Network Port Connector Pinout Information for EX4300 Switches Except EX4300-48MP and EX4300-48MP-S Switches (continued)

Pin	Signal	Description
3	TRP2+	Transmit/receive data pair 2 Positive Vport (in PoE models)
4	TRP3+	Transmit/receive data pair 3
5	TRP3-	Transmit/receive data pair 3
6	TRP2-	Transmit/receive data pair 2 Positive Vport (in PoE models)
7	TRP4+	Transmit/receive data pair 4
8	TRP4-	Transmit/receive data pair 4

Table 41: 10/100/1000BASE-T Ethernet Network Port and 100/1000/2500/5000/10000BASE-T Ethernet Network Port Connector Pinout Information for EX4300-48MP and EX4300-48MP-S Switches

Pin	Signal	Description
1	TRP1+	Transmit/receive data pair 1 Negative Vport 1
2	TRP1-	Transmit/receive data pair 1 Negative Vport 1
3	TRP2+	Transmit/receive data pair 2 Positive Vport 1
4	TRP3+	Transmit/receive data pair 3 Positive Vport 2
5	TRP3-	Transmit/receive data pair 3 Positive Vport 2
6	TRP2-	Transmit/receive data pair 2 Positive Vport 1
7	TRP4+	Transmit/receive data pair 4 Negative Vport 2

Table 41: 10/100/1000BASE-T Ethernet Network Port and 100/1000/2500/5000/10000BASE-T Ethernet Network Port Connector Pinout Information for EX4300-48MP and EX4300-48MP-S Switches (continued)

Pin	Signal	Description
8	TRP4-	Transmit/receive data pair 4 Negative Vport 2



NOTE:

The Ethernet cables that you use to connect to the RJ-45 network ports on EX4300-48MP and EX4300-48MP-S switches and provide 95 W power over 4 pair wire must meet the following specifications related to deployment, temperature rise, category, IEEE, UL, NEC, and local electric codes to ensure proper performance and to not exceed rated temperature and ampacity of cables:

- The cables must be shielded RJ-45 cables.
- The cables must be rated for IEEE 802.3 BT, TIA standards, and UL-LP.
- The cables must follow NEC 725.144 article and local electric code.
- The operating temperature of the cable must be rated at 15° C more than the ambient temperature.

Table 42: SFP Network Port Connector Pinout Information

Pin	Signal	Description
1	VeeT	Module transmitter ground
2	TX_Fault	Module transmitter fault
3	TX_Disable	Transmitter disabled
4	SDA	2-wire serial interface data line
5	SCL-	2-wire serial interface clock
6	MOD_ABS	Module absent
7	RS	Rate select
8	RX_LOS	Receiver loss of signal indication
9	VeeR	Module receiver ground
10	VeeR	Module receiver ground
11	VeeR	Module receiver ground

Table 42: SFP Network Port Connector Pinout Information (continued)

Pin	Signal	Description
12	RD-	Receiver inverted data output
13	RD+	Receiver noninverted data output
14	VeeR	Module receiver ground
15	VccR	Module receiver 3.3 V supply
16	VccT	Module transmitter 3.3 V supply
17	VeeT	Module transmitter ground
18	TD+	Transmitter noninverted data input
19	TD-	Transmitter inverted data input
20	VeeT	Module transmitter ground

Table 43: SFP+ Network Port Connector Pinout Information

Pin	Signal	Description
1	VeeT	Module transmitter ground
2	TX_Fault	Module transmitter fault
3	TX_Disable	Transmitter disabled
4	SDA	2-wire serial interface data line
5	SCL-	2-wire serial interface clock
6	MOD_ABS	Module absent
7	RS0	Rate select 0, optionally controls SFP+ module receiver
8	RX_LOS	Receiver loss of signal indication
9	RS1	Rate select 1, optionally controls SFP+ transmitter
10	VeeR	Module receiver ground
11	VeeR	Module receiver ground
12	RD-	Receiver inverted data output
13	RD+	Receiver noninverted data output

Table 43: SFP+ Network Port Connector Pinout Information (continued)

Pin	Signal	Description
14	VeeR	Module receiver ground
15	VccR	Module receiver 3.3 V supply
16	VccT	Module transmitter 3.3 V supply
17	VeeT	Module transmitter ground
18	TD+	Transmitter noninverted data input
19	TD-	Transmitter inverted data input
20	VeeT	Module transmitter ground

Table 44: QSFP+ and QSFP28 Network Port Connector Pinout Information

Pin	Signal
1	GND
2	TX2n
3	TX2p
4	GND
5	TX4n
6	TX4p
7	GND
8	ModSelL
9	LPMode_Reset
10	VccRx
11	SCL
12	SDA
13	GND
14	RX3p
15	RX3n

Table 44: QSFP+ and QSFP28 Network Port Connector Pinout Information (continued)

Pin	Signal
16	GND
17	RX1p
18	RX1n
19	GND
20	GND
21	RX2n
22	RX2p
23	GND
24	RX4n
25	RX4p
26	GND
27	ModPrsL
28	IntL
29	VccTx
30	Vcc1
31	Reserved
32	GND
33	TX3p
34	TX3n
35	GND
36	TX1p
37	TX1n
38	GND

USB Port Specifications for the QFX Series

The following Juniper Networks USB flash drives have been tested and are officially supported for the USB port in the QFX Series:

- RE-USB-1G-S—1-gigabyte (GB) USB flash drive (except QFX3100 Director device)
- RE-USB-2G-S—2-GB USB flash drive (except QFX3100 Director device)
- RE-USB-4G-S—4-GB USB flash drive



CAUTION: Any USB memory product not listed as supported for the QFX Series has not been tested by Juniper Networks. The use of any unsupported USB memory product could expose your device to unpredictable behavior. Juniper Networks Technical Assistance Center (JTAC) can provide only limited support for issues related to unsupported hardware. We strongly recommend that you use only supported USB flash drives.



CAUTION: Remove the USB flash drive before upgrading Junos OS or rebooting a QFX Series device. Failure to do so could expose your device to unpredictable behavior.



NOTE: Executing the request system snapshot CLI command on a QFX3500 device requires an external USB flash drive with at least 4 GB of free space. We recommend using the RE-USB-4G-S flash drive.



NOTE: USB flash drives used with the QFX Series device must support USB 2.0 or later.

Related Documentation

- [Connecting the QFX5200 to External Devices on page 97](#)

CHAPTER 3

Initial Installation and Configuration

- [QFX5200 Installation Overview on page 87](#)
- [Unpacking and Mounting the QFX5200 on page 88](#)
- [Connecting the QFX5200 to External Devices on page 97](#)
- [Connecting the QFX5200 to Power on page 101](#)
- [Performing the Initial Software Configuration for QFX5200 Switches on page 110](#)

QFX5200 Installation Overview

- [Overview of Installing the QFX5200 on page 87](#)
- [QFX5200 Installation Safety Guidelines on page 88](#)

Overview of Installing the QFX5200

You can mount a QFX5200:

- Flush with the front of a 19-in. four-post rack. Use the standard mounting brackets provided with the switch for this configuration.
- (QFX5200-32C and QFX5200-32C-L) Recessed 2 in. (5 cm) from the front of a 19-in. four-post rack. Use the extension bracket provided in the standard mounting kit for this configuration. Recessed mounting is primarily used in enclosed cabinets.

To install and connect a QFX5200:

1. Follow the instructions in [“Unpacking a QFX5200” on page 88](#).
2. Determine how the switch is to be mounted.

Flush or recessed mounted in a rack or cabinet, see [“Mounting a QFX5200 in a Rack or Cabinet” on page 90](#).
3. Follow the instructions in:
 - a. [Connecting the QFX5200 Grounding Cable on page 98](#)
 - b. [“Connecting AC Power to a QFX5200” on page 102](#) or [“Connecting DC Power to a QFX5200” on page 104](#), or [Connecting DC Power to a QFX5200-48Y on page 108](#)

- c. [Registering Products—Mandatory for Validating SLAs on page 90](#)
4. Follow the instructions in [“Performing the Initial Software Configuration for QFX5200 Switches” on page 110.](#)

QFX5200 Installation Safety Guidelines

The weight of a fully -loaded QFX5200-32C and QFX5200-32C-L switch chassis is approximately 23.5 lb (10.66 kg); and a QFX5200-48Y weighs between 20.78 lbs (9.43 kg) to 21.16 (9.6 kg) with power supplies and fans installed. Observe the following guidelines for lifting and moving a QFX5200:



CAUTION: If you are installing the QFX5200 above 60 in. (152.4 cm) from the floor, either remove the power supplies, fan modules, and any expansion modules before attempting to install the switch, or ask someone to assist you during the installation.

- Before installing a QFX5200, read the guidelines in [“QFX5200 Site Preparation Checklist” on page 59](#) to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Before lifting or moving the QFX5200, disconnect all external cables.
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

Related Documentation

- [QFX5200 Site Guidelines and Requirements on page 64](#)
- [Installation Instructions Warning on page 154](#)
- [General Safety Guidelines and Warnings on page 150](#)

Unpacking and Mounting the QFX5200

- [Unpacking a QFX5200 on page 88](#)
- [Registering Products—Mandatory for Validating SLAs on page 90](#)
- [Mounting a QFX5200 in a Rack or Cabinet on page 90](#)

Unpacking a QFX5200

The QFX5200 switch chassis is a rigid sheet-metal structure that houses the hardware components. A QFX5200 is shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box and quick start instructions.



CAUTION: The QFX5200 is maximally protected inside the shipping carton. Do not unpack the switch until you are ready to begin installation.

To unpack a QFX5200:

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the system components.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box and verify the contents against the inventory included in the box. [Table 45 on page 89](#) lists the inventory of components supplied with a QFX5200.
5. Pull out the packing material holding the switch in place.
6. Verify the chassis components received:
 - Two power supplies
 - Five fan modules for QFX5200-32C or QFX5200-32C-L and six fan modules for QFX5200-48Y
7. Save the shipping carton and packing materials in case you need to move or ship the switch later.

Table 45: Inventory of Components Supplied with a QFX5200 Device

Component	Quantity
Chassis with five or six fan modules and two power supplies	1
Fan modules	5 (QFX5200-32C or QFX5200-32C-L) 6 (QFX5200-48Y)
Power supplies	2
Rack mount kit for QFX5200-32C or QFX5200-32C-L	1
<ul style="list-style-type: none"> • Front mounting brackets • Rear mounting blades • Extension brackets • Flathead screws (Phillips, M4 x 6mm) 	<ul style="list-style-type: none"> • 2 • 2 • 2 • 12
The order number for a spare rack mount kit is EX-4PST-RMK.	

Table 45: Inventory of Components Supplied with a QFX5200 Device (continued)

Component	Quantity
Rack mount kit for QFX5200-48Y	1
<ul style="list-style-type: none"> • Front mounting brackets • Rear mounting brackets • Flathead screws (Phillips, M4 x 6mm) • Washer head screws 	<ul style="list-style-type: none"> • 2 • 2 • 12 • 2
The order number for a spare rack mount kit is QFX520048Y-RMKT.	
RJ-45 cable and RJ-45 to DB-9 adapter	1
Rack mount assembly drawing	1
Power cords with plugs appropriate to your geographical location	2
Documentation roadmap card	1
Warranty	1

Registering Products—Mandatory for Validating SLAs

Register all new Juniper Networks hardware products and changes to an existing installed product using the Juniper Networks website to activate your hardware replacement service-level agreements (SLAs).



CAUTION: Register product serial numbers on the Juniper Networks website and update the installation base data if there is any addition or change to the installation base or if the installation base is moved. Juniper Networks will not be held accountable for not meeting the hardware replacement service-level agreement for products that do not have registered serial numbers or accurate installation base data.

Register your product(s) at: <https://tools.juniper.net/svcreg/SRegSerialNum.jsp>.
Update your install base at: <https://www.juniper.net/customers/csc/management/updateinstallbase.jsp>.

Mounting a QFX5200 in a Rack or Cabinet

You can mount all QFX5200 switches on a four post 19-in. rack or cabinet using the mounting kit provided with the switch.

For four post rack or cabinet installations, the mounting kit contains two front mounting rails with two matching rear mounting blades. This configuration allows either end of the

switch to be mounted flush with the rack and still be adjustable for racks with different depths.

(The remainder of this topic uses “rack” to mean “rack or cabinet.”) The front and rear rack rails must be spaced between 28 in. (71.1 cm) and 36 in. (91.4 cm) front to back.

This topic describes:

- [Before You Begin Rack Installation on page 91](#)
- [Four Post Installation Procedure for QFX5200-32C or QFX5200-32C-L on page 92](#)
- [Four Post Installation Procedure for QFX5200-48Y on page 94](#)

Before You Begin Rack Installation

Before you begin mounting a QFX5200 switch in the rack or cabinet:

1. Ensure that you understand how to prevent electrostatic discharge (ESD) damage. See [“Prevention of Electrostatic Discharge Damage” on page 171](#).
2. Verify that the site meets the requirements described in [“QFX5200 Site Preparation Checklist” on page 59](#).
3. Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
4. Read [“General Site Guidelines” on page 66](#), with particular attention to [“QFX5200 Installation Safety Guidelines” on page 88](#).
5. Remove the switch from the shipping carton (see [“Unpacking a QFX5200” on page 88](#)).
6. Ensure that you have the following parts and tools available to mount the switch in a rack:
 - ESD grounding strap (not provided).
 - Blades, rails, or brackets (provided).
 - For four-post installations:
 - One pair of rear mounting blades. These mounting blades support the rear of the chassis and must be installed (provided).
 - One pair of front mounting rails. The mounting blades slide into the mounting rails to support the switch (provided).
 - Screws to secure the mounting rails to the chassis (provided).
 - Twelve screws for QFX5200-32C or QFX5200-32C-L

- Twenty screws for QFX5200-48Y
- Eight screws to secure the chassis and rear installation blades to the rack (not provided).
- Appropriate screwdriver for the mounting screws (not provided).
- Two power cords with plugs appropriate to your geographical location (provided).
- RJ-45 cable and RJ-45 to DB-9 serial port adapter (provided).
- Management host, such as a PC laptop, with a serial port (not provided).

Optional equipment: Grounding cable kit with bracket, lug, and three nuts with integrated washers.



WARNING: A QFX5200 switch must be supported at all four corners. Mounting the chassis using only the front brackets will damage the chassis and can result in serious bodily injury.



CAUTION: All QFX5200 switches require two people for installation, one person to lift the switch into place and another person to attach the switch to the rack. If you are installing the QFX5200 switch above 60 in. (152.4 cm) from the floor, you can remove the power supplies and fan modules to minimize the weight before attempting to install the switch.




CAUTION: If you are mounting multiple switches on a rack, mount the switch in the lowest position of the rack first. Proceed to mount the rest of the switches from the bottom to the top of the rack to minimize the risk of the rack toppling.

Four Post Installation Procedure for QFX5200-32C or QFX5200-32C-L

To mount the QFX5200-32C or QFX5200-32C-L on four posts in a rack using the provided mounting kit:


1. Attach the ESD grounding strap to your bare wrist and to a site ESD point.
2. Decide whether the Field Replaceable Unit (FRU) end of the switch or the port end is to be placed at the front of the rack. Position the switch in such a manner that the **AIR IN** labels on components are next to the cold aisle and **AIR OUT** labels on components are next to the hot aisle.
3. Align the holes in the mounting rail with the holes on the side of the chassis. See [Figure 34 on page 93](#) to see the proper alignment for the QFX5200-32C or QFX5200-32C-L switch.

Figure 34: Attaching Mounting Rails to the QFX5200-32C or QFX5200-32C-L

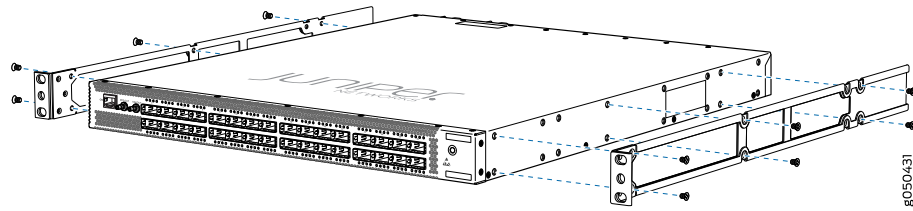


4. Attach the mounting rail to the switch using the mounting screws. Tighten the screws.
5. Repeats steps 3 and 4 on the opposite side of the switch.
6. Have one person grasp both sides of the switch, lift it, and position it in the rack so that the front bracket is aligned with the rack holes.
7. Have a second person secure the front of the switch to the rack using four mounting screws (and cage nuts and washers if your rack requires them.) Tighten the screws. See [Figure 35 on page 93](#) for an example of connecting the mounting rails and blades to a QFX5200-32C or QFX5200-32C-L.

Figure 35: Attach QFX5200-32C or QFX5200-32C-L Switch to Rack

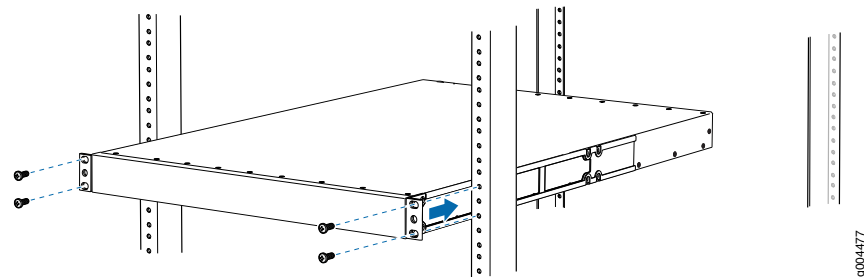

8. Continue to support the switch while sliding the rear mounting-blades into the channel of the side mounting-rails and securing the blades to the rack. Use the four mounting screws (and cage nuts and washers if your rack requires them) to attach each blade to the rack. Tighten the screws. See [Figure 36 on page 94](#).

Figure 36: Slide Mounting Blade into Mounting Rail

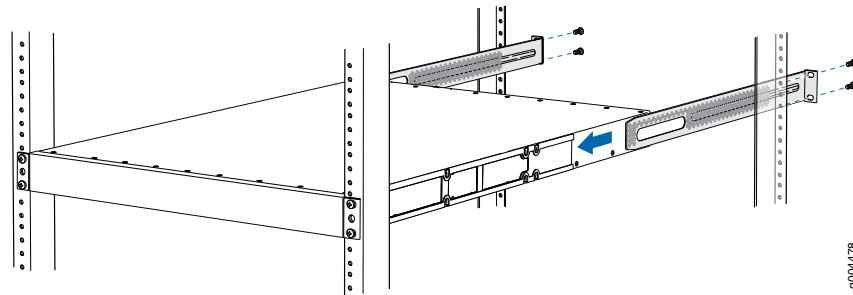


9. Ensure that the switch chassis is level by verifying that all the screws on the front of the rack are aligned with the screws at the back of the rack.

Four Post Installation Procedure for QFX5200-48Y

To mount the QFX5200-48Y on four posts in a rack using the provided mounting kit:

1. Attach the ESD grounding strap to your bare wrist and to a site ESD point.
2. Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
3. Decide whether the FRU end of the switch or the port end is to be placed at the front of the rack. For airflow in (AFI) installations, position the switch with the blue components next to the cold aisle and for airflow out (AFO) installations, position the switch with the red components next to the hot aisle.
4. Align the holes in the front mounting bracket with the holes on the side of the chassis so that the bracket is flush with the port panel. See [Figure 37 on page 94](#).


Figure 37: Align the Front Mounting Bracket and Secure with Screws

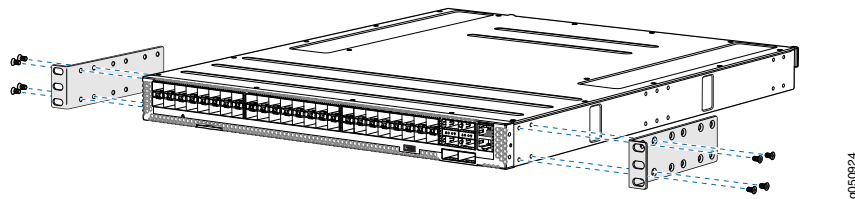

5. Using a Phillips screwdriver, attach the front mounting bracket to the switch using four of the flat head screws in the holes closest to the port panel. Tighten the screws.
6. Repeat Steps 4 and 5 on the opposite side of the switch.


7. Align the holes in the adjustable mounting rail with the remaining holes in the chassis. The alignment should permit two screws at mid-chassis and four screws nearest the power supplies. The adjustable blades fit standard racks between 22.05 in. (56 cm) to 29.5 in. (75 cm).
8. Attach the adjustable mounting rail to the chassis using the Phillips screwdriver and six of the flat head screws. Tighten the screws. See [Figure 38 on page 95](#).

Figure 38: Align Holes for Mounting Rail and Attach with Screws

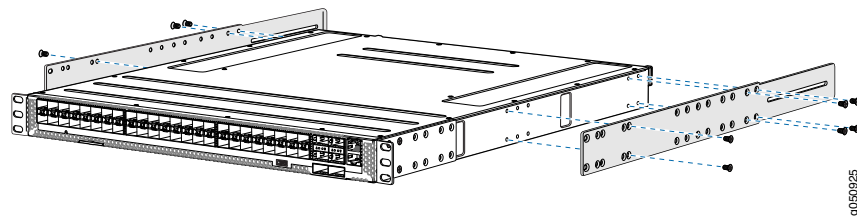


9. Repeat Steps 7 and 8 on the opposite side of the switch.
10. Have one person grasp both sides of the unit, lift it, and position it in the rack so that the front mounting bracket is aligned with the rack holes.
11. Have a second person secure the front of the device to the rack using four mounting screws (and cage nuts and washers if your rack requires them). Tighten the screws. See [Figure 39 on page 95](#).

Figure 39: Attach the Front Mounting Bracket to the Rack

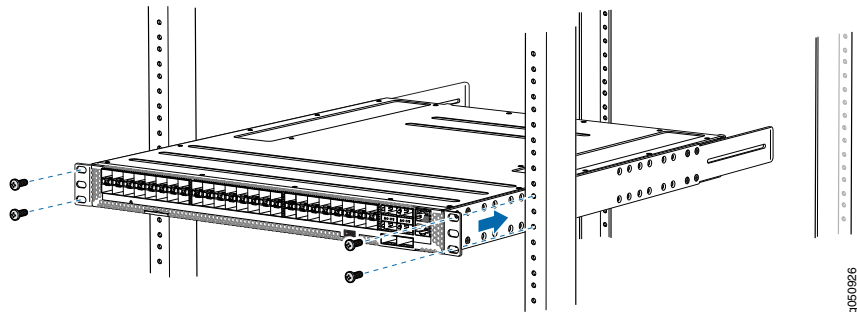

12. Continue to support the switch while sliding the rear mounting brackets into the channel of the adjustable mounting blades and securing the blades and the brackets to the rack. Use four mounting screws (and cage nuts and washers if your rack requires them) to attach the blades and rear mounting brackets to the rack. Tighten the screws. See [Figure 40 on page 96](#).


Figure 40: Slide Blades into Mounting Rails and Attach to the Rack

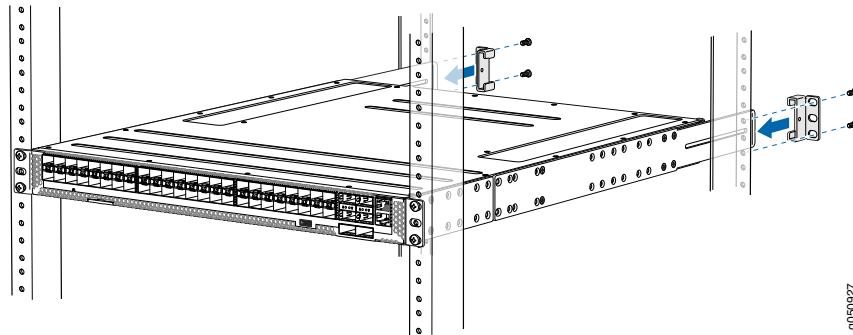

13. Ensure that the chassis is level by verifying that all the screws on the front of the rack are aligned with the screws at the back of the rack.

14. Secure the mounting rails to the rear mounting brackets using the two washer head screws. Tighten the screws. See [Figure 41 on page 96](#).

Figure 41: Lock the Mounting Rails to the Rack

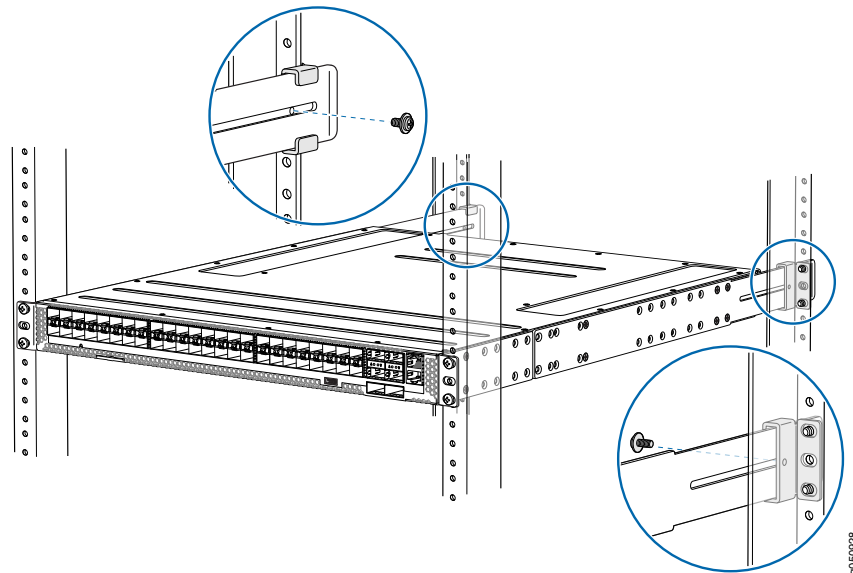

15. Attach a grounding cable to earth ground and then attach it to the chassis grounding points.

Related Documentation

- [Rack-Mounting and Cabinet-Mounting Warnings on page 157](#)
- [Connecting the QFX5200 to Power on page 101](#)
- [Connecting the QFX5200 Grounding Cable on page 98](#)

Connecting the QFX5200 to External Devices

- [Connecting the QFX5200 Grounding Cable on page 98](#)
- [Connecting a Device to a Network for Out-of-Band Management on page 99](#)
- [Connecting a Device to a Management Console by Using an RJ-45 Connector on page 100](#)

Connecting the QFX5200 Grounding Cable

To ensure proper operation and to meet safety electromagnetic interference (EMI) requirements, you must connect the QFX5200 to earth ground before you connect it to power. You must use the protective earthing terminal on the side of the switch chassis to connect the device to earth ground.

For QFX5200-32C and QFX5200-32C-L installations that require a separate grounding conductor to the chassis, you must attach a grounding cable with a grounding lug through the QFX5200-32C and QFX5200-32C-L left front mounting bracket to connect to the earth ground. See [Figure 42 on page 99](#).



NOTE: A ground connection to the protective earthing terminal is not required for an AC-powered switch. The AC power cords provide adequate grounding when you connect the power supply in the switch to a grounded AC power outlet by using the AC power cord appropriate for your geographical location.



CAUTION: Before you connect earth ground to the protective earthing terminal of a QFX5200-32C or QFX5200-32C-L, ensure that a licensed electrician has attached an appropriate grounding lug to the grounding cable that you supply. Using a grounding cable with an incorrectly attached lug can damage the switch.



NOTE: Mount your switch in the rack or cabinet before attaching the grounding lug to the switch. See [“Mounting a QFX5200 in a Rack or Cabinet” on page 90](#).

Ensure that you have the following parts and tools available:


- Grounding cable for your QFX5200 device—The grounding cable must be 14 AWG (2 mm²), minimum 90° C wire, or as permitted by the local code (not provided).
- (QFX5200-32C and QFX5200-32C-L) Grounding lug for your grounding cable—The grounding lug required is a Panduit LCD10-10A-L or equivalent (not provided).
- For QFX5200-32C and QFX5200-32C-L, two 10-32 x 0.25 screws with #10 split-lock washers—Two screws are used to secure the grounding lug to the grounding lug bracket protective earthing terminal. These screws and washers are not provided.
- For QFX5200-48Y, two 4.3 ring terminals, 14-18 AWG, and the provided M4 screw with star washer.
- Number 2 screwdriver.

An AC-powered QFX5200 switch chassis gains additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using an AC power cord appropriate for your geographical location. See [“QFX5200 Power Cord Specifications” on page 50](#).

To connect earth ground to a QFX5200-32C or QFX5200-32C-L:

1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
2. Place the grounding lug attached to the grounding cable over the protective earthing terminal.
3. Secure the grounding lug to the protective earthing terminal with two screws and washers. See [Figure 42 on page 99](#).

Figure 42: Connecting a Grounding Cable to a QFX5200-32C and QFX5200-32C-L

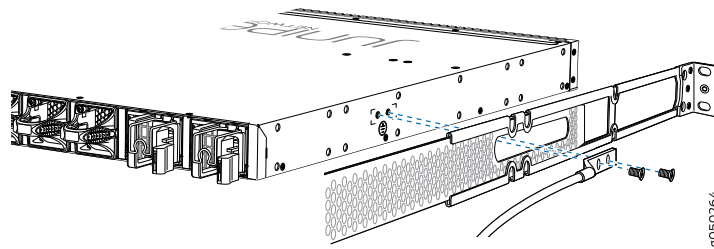

4. Dress the grounding cable and ensure that it does not touch or block access to other device components and that it does not drape where people could trip over it.

To connect earth ground to a QFX5200-48Y:

1. Ensure the rack is properly grounded and is in compliance with ETSI ETS 300 253.
2. Verify that there is a good electrical connection to the grounding point on the rack.
3. Attach the ring terminals to each end of the #14 AWG grounding wire.
4. Connect one of the ring terminals to the grounding point on the FRU panel.
5. Connect the other ring terminal to the rack ground.




CAUTION: Do not remove the earth connection until all power supply connections are disconnected.

Connecting a Device to a Network for Out-of-Band Management

You can monitor and manage these devices by using a dedicated management channel. Each device has a management port to which you can connect an Ethernet cable with an RJ-45 connector. Use the management port to connect the device to the management device.

Ensure that you have an Ethernet cable that has an RJ-45 connector at either end. [Figure 43 on page 100](#) shows the RJ-45 connector of the Ethernet cable supplied with the device.


Figure 43: RJ-45 Connector on an Ethernet Cable



To connect a device to a network for out-of-band management (see [Figure 44 on page 100](#)):

1. Connect one end of the Ethernet cable to the management port (labeled **MGMT** or **ETHERNET**) on the device.
2. Connect the other end of the Ethernet cable to the management device.

Figure 44: Connecting a Device to a Network for Out-of-Band Management

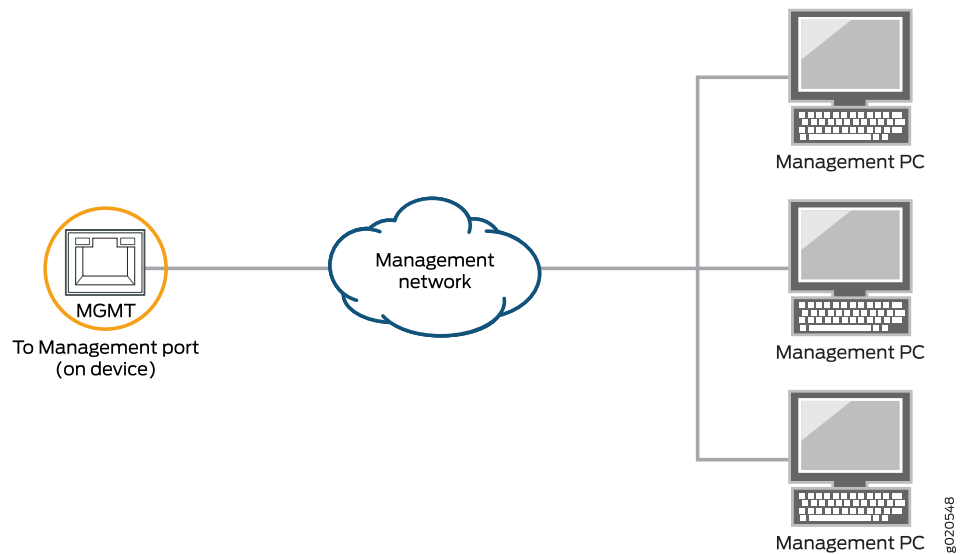


Connecting a Device to a Management Console by Using an RJ-45 Connector

You can configure and manage these devices by using a dedicated management channel. Each device has a console port to which you can connect an Ethernet cable with an RJ-45 connector. Use the console port to connect the device to the console server or management console. The console port accepts a cable that has an RJ-45 connector.

Ensure that you have an Ethernet cable that has an RJ-45 connector at either end. One such cable and an RJ-45 to DB-9 serial port adapter are supplied with the device.

[Figure 45 on page 101](#) shows the RJ-45 connector of the Ethernet cable.

Figure 45: RJ-45 Connector on an Ethernet Cable



NOTE: If your laptop or PC does not have a DB-9 male connector pin and you want to connect your laptop or PC directly to the device, use a combination of the RJ-45 to DB-9 female adapter supplied with the device and a USB to DB-9 male adapter. You must provide the USB to DB-9 male adapter.

To connect the device to a management console (see [Figure 46 on page 101](#) and [Figure 47 on page 101](#)):

1. Connect one end of the Ethernet cable to the console port (labeled **CON**, **CONSOLE**, or **CON1**) on the device.
2. Connect the other end of the Ethernet cable to the console server (see [Figure 46 on page 101](#)) or management console (see [Figure 47 on page 101](#)).

Figure 46: Connecting a Device to a Management Console Through a Console Server


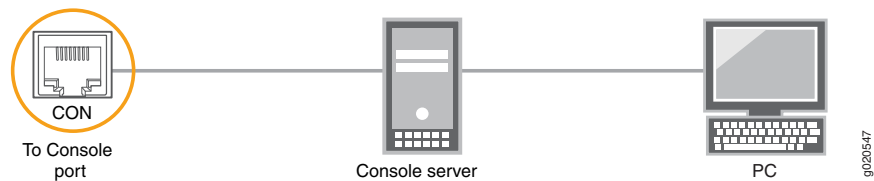


Figure 47: Connecting a Device Directly to a Management Console

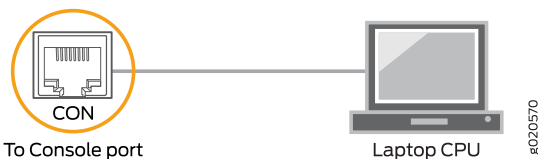

Related Documentation

- [General Safety Guidelines and Warnings on page 150](#)
- [Grounded Equipment Warning on page 161](#)
- [Connecting the QFX5200 to Power on page 101](#)

Connecting the QFX5200 to Power

- [Connecting AC Power to a QFX5200 on page 102](#)
- [Connecting DC Power to a QFX5200 on page 104](#)

Connecting AC Power to a QFX5200

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.

Ensure that you have a power cord appropriate for your geographical location available to connect AC power to the switch.

Before you begin connecting AC power to the switch:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage”](#) on page 171).
- Ensure that you have connected the switch chassis to earth ground.



CAUTION: Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit).

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground before you connect it to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see [“Connecting the QFX5200 Grounding Cable”](#) on page 98. The switch gains additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using the AC power cord appropriate for your geographical location (see [“QFX5200 Power Cord Specifications”](#) on page 50).

- Install the power supply in the chassis. For instructions on installing a power supply in a QFX5200, see [“Installing a Power Supply in a QFX5200”](#) on page 118.



NOTE: Each power supply must be connected to a dedicated power source outlet.

To connect AC power to a QFX5200:

1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Ensure that the power supplies are fully inserted in the chassis and the latches are secure. If only one power supply is installed, ensure that a blank cover panel is installed over the second power supply slot.


3. Locate the power cord or cords shipped with the switch; the cords have plugs appropriate for your geographical location.



WARNING: Ensure that the power cord does not block access to device components or drape where people can trip on it.

4. Connect each power supply to the power sources. Insert the coupler end of the power cord into the AC power cord inlet on the AC power supply faceplate.
5. For QFX5200-32C and QFX5200-32C-L models, push the power cord retainer onto the power cord (see [Figure 48 on page 103](#)). Power cord retainers are not available for QFX5200-48Y PSUs.

Figure 48: Connecting an AC Power Cord to an AC Power Supply in a QFX5200-32C and QFX5200-32C-L

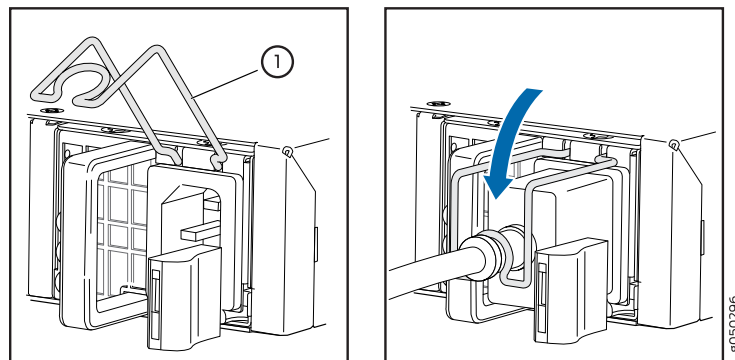

1— Power cord retainer

6. If the AC power source outlet has a power switch, set it to the OFF (O) position.



NOTE: The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.

7. Insert the power cord plug into an AC power source outlet.
8. If the AC power source outlet has a power switch, set it to the ON (I) position.
9. Verify that the AC and DC LEDs on each power supply are lit green.

If the amber fault LED is lit, remove power from the power supply, and replace the power supply (see [“Removing a Fan Module from a QFX5200” on page 113](#)). Do not remove the power supply until you have a replacement power supply ready: the power supplies or a blank cover panel must be installed in the switch to ensure proper airflow.



CAUTION: Replace a failed power supply with a blank panel or new power supply within 1 minute of removal to prevent chassis overheating.



CAUTION: A system reboot with Routing Engine FPGA version 7.1 might not successfully boot the Junos OS software. In case of a system reboot failure, you need to power cycle the switch. To check the current FPGA version, issue the `show chassis firmware` command.

Connecting DC Power to a QFX5200

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.



WARNING: A DC-powered QFX5200 is intended for installation only in a restricted access location.



NOTE: The battery returns of the DC power supply must be connected as an isolated DC return (DC-I).



NOTE: The QFX5200-32C-L is only available for AC.

This topic includes:

- [Before You Begin on page 104](#)
- [Connecting DC Power to a QFX5200-32C on page 105](#)
- [Connecting DC Power to a QFX5200-48Y on page 108](#)

Before You Begin

Before you begin connecting DC power to the switch:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage” on page 171](#)).
- Ensure that you have connected the switch chassis to earth ground.



CAUTION: Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply.

A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit).

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground before you connect it to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see [“Connecting the QFX5200 Grounding Cable” on page 98](#).

- Install the power supply in the chassis. For instructions on installing a power supply in a QFX5200, see [“Installing a Power Supply in a QFX5200” on page 118](#).

Ensure that you have the following parts and tools available:

- For QFX5200-32C–DC power source cables (14–16 AWG) with ring lug (Molex 190700069 or equivalent) (not provided)
- For QFX5200-48Y–DC power source cables (12 AWG) with ring lug (provided)
- Phillips (+) screwdriver, number 2 (not provided)
- Multimeter (not provided)

[Connecting DC Power to a QFX5200-32C](#)

To connect DC power to a QFX5200-32C:

1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the –48V and RTN DC cables to chassis ground:
 - The cable with very low resistance (indicating a closed circuit) to chassis ground is positive (+) and will be installed on the V+ (return) DC power input terminal.
 - The cable with very high resistance (indicating an open circuit) to chassis ground is negative (–) and will be installed on the V– (input) DC power input terminal.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the DC power input terminals on each power supply.

3. Ensure that the input circuit breaker is open so that the voltage across the DC power source cable leads is 0 V and that the cable leads do not become active while you are connecting DC power.



NOTE: The V+ terminals are referred to as +RTN, and V– terminals are referred to as –48 V in “DC Power Wiring Sequence Warning” on page 177 and “DC Power Electrical Safety Guidelines” on page 173.

4. Ensure that the power supplies are fully inserted in the chassis.
5. Remove the terminal block cover. The terminal block cover is a piece of clear plastic that snaps into place over the terminal block (see [Figure 49 on page 107](#)).
6. Remove the screws on the terminals using the screwdriver. Save the screws.



WARNING: Ensure that the power cables do not block access to device components or drape where people can trip on them.

7. Connect each power supply to the power sources. Secure power source cables to the power supplies by screwing the ring lugs attached to the cables to the appropriate terminals by using the screw from the terminals (see [Figure 49 on page 107](#) and [Figure 50 on page 108](#)).

The QFX5200-32C is designed to operate with a DC power supply that has a single, non-redundant, feed input. For source redundancy, two DC power supplies must be installed in QFX5200-32C; connect source (A) to one power supply and connect source (B) to the second power supply. This configuration provides the commonly deployed A/B feed redundancy for the system.

The terminal block of the power supply has four terminals labeled V+, V+, V–, and V– for connecting DC power source cables labeled positive (+) and negative (–). The V+ terminals are shunted internally together, as are the V– terminals.




CAUTION: The connection between each power source and power supply must include a circuit breaker.

Do not connect two sources to a single power supply because doing so can potentially cause circulating current in feed wires whenever there is any difference in the voltage of the two sources.

- a. Secure the ring lug of the positive (+) DC power source cable to the V+ terminal on the DC power supply.

- b. Secure the ring lug of the negative (–) DC power source cable to the V– terminal on the DC power supply.
- c. Tighten the screws on the power supply terminals until snug using the screwdriver. Do not overtighten—apply between 5 in-lb (0.56 Nm) and 6 in-lb (0.68 Nm) of torque to the screws.

Figure 49: DC Power Supply Faceplate for a QFX5200-32C

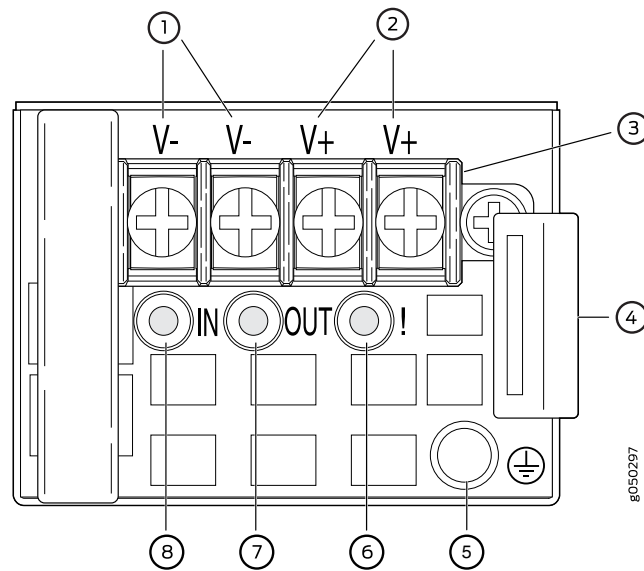


1— Shunt negative input terminals (+RTN)	5—ESD grounding point
2— Shunt positive input terminals (-48V)	6—Fault LED
3— Terminal block	7—Output LED
4—Ejector lever	8—Input LED



CAUTION: The V+ terminals are shunted internally together, as are the V- terminals. The same polarity terminal can be wired together from the same source to provide an additional current path in a higher power chassis. Do not connect the terminals to different sources.

Figure 50: Securing Ring Lugs to the Terminals on the QFX5200-32C DC Power Supply

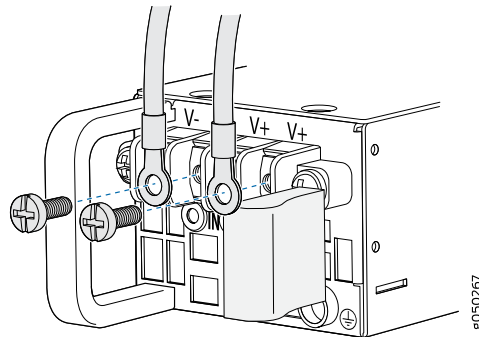

8. Replace the terminal block cover.

9. Close the input circuit breaker.



NOTE: The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.


10. Verify that the **IN** and **OUT** LEDs on the power supply are lit green and are on steadily.

Connecting DC Power to a QFX5200-48Y

To connect DC power to a QFX5200-48Y:

1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Ensure that the input circuit breaker is open so that the voltage across the DC power source cable leads is 0 V and that the cable leads do not become active while you are connecting DC power.
3. Ensure that the power supplies are fully inserted in the chassis.
4. Connect each power supply to the power source by inserting the DC connector of the provided power cable into the power supply. See [Figure 51 on page 109](#).

Figure 51: Connecting DC Power Cable to QFX5200-48Y

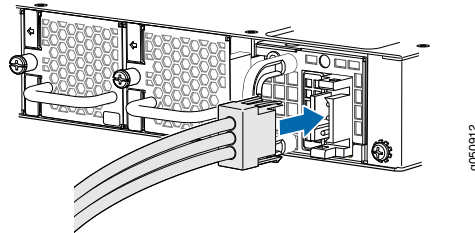

5. Connect each power cable to the power sources. Secure power source cables to the power supplies by screwing the ring lugs attached to the cables to the appropriate terminals
 - Connect the ring lug of the green-yellow cable to earth ground.
 - Connect the ring lug of the black cable to the negative (–) DC power source.
 - Connect the ring lug of the red cable to the positive (+) DC power source.

The QFX5200-48Y is designed to operate with a DC power supply that has a single, non-redundant, feed input. For source redundancy, two DC power supplies must be installed in QFX5200-48Y; connect source (A) to one power supply and connect source (B) to the second power supply. This configuration provides the commonly deployed A/B feed redundancy for the system.



CAUTION: The connection between each power source and power supply must include a circuit breaker.

Do not connect two sources to a single power supply because doing so can potentially cause circulating current in feed wires whenever there is any difference in the voltage of the two sources.

6. Close the input circuit breaker.



NOTE: The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.

7. Verify that the LED on each power supply is lit green and on steadily.

Related Documentation

- [QFX5200 Power System on page 47](#)
- [QFX5200 Power Cord Specifications on page 50](#)

Performing the Initial Software Configuration for QFX5200 Switches

You must perform the initial configuration of the QFX5200 through the console port using the CLI or through Zero Touch Provisioning (ZTP). In order to use ZTP to provision the device, you must have access to a Dynamic Host Control Protocol (DHCP) server, and a File Transfer Protocol (anonymous FTP), Hypertext Transfer Protocol (HTTP), or Trivial File Transfer Protocol (TFTP) server on which the software image and configuration files are stored. For more information about using ZTP for provisioning the device, see [Understanding Zero Touch Provisioning](#) in the *Installation and Upgrade Guide*.

Before you begin connecting and configuring a QFX5200, set the following parameter values on the console server or PC:

- Baud Rate—9600
- Flow Control—None
- Data—8
- Parity—None
- Stop Bits—1
- DCD State—Disregard

To connect and configure the switch from the console:

1. Connect the console port to a laptop or PC using the supplied RJ-45 cable and RJ-45 to DB-9 adapter. The console (**CON**) port is located on the management panel of the switch.
2. Log in as **root**. There is no password. If the software booted before you connected to the console port, you might need to press the Enter key for the prompt to appear.

```
login: root
```

3. Start the CLI.

```
root@% cli
```

4. Enter configuration mode.

```
root> configure
```

5. Add a password to the root administration user account.

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

6. (Optional) Configure the name of the switch. If the name includes spaces, enclose the name in quotation marks (" ").

```
[edit]
root@# set system host-name host-name
```

7. Configure the default gateway.

- For standard Junos OS systems:

```
[edit]
root@# set routing-options static route default next-hop address
```

- For Junos OS Evolved systems:

```
[edit]
root@# set system management-instance
root@# set routing-instances mgmt_junos routing-options static route prefix/prefix-length
next-hop default-gateway-ip-address
```

8. Configure the IP address and prefix length for the switch management interface.

- For standard Junos OS systems:

```
[edit]
root@# set interfaces em0 unit 0 family inet address ip-address/prefix-length
```

- For Junos OS Evolved systems:

```
[edit]
root@# set interfaces re0:mgmt-0 unit 0 family inet address ip-address/prefix-length
```



CAUTION: Although the CLI permits you to configure two management Ethernet interfaces within the same subnet, only one interface is usable and supported.



NOTE: On the QFX5200-32C, management ports em0 (labeled C0) and em1 (labeled C1) are found on the FRU end of the switch. On the QFX5200-32C-L, one management interface is supported: re0:mgmt-0 (labeled C0 on the FRU end of the switch. Management port C1 is not supported on the QFX5200-32C-L. The C0 management port supports both fiber and copper connections. On the QFX5200-48Y, the management port em0 is the top right-hand RJ-45 port on the port panel.

9. (Optional) Configure the static routes to remote prefixes with access to the management port.

```
[edit]
root@# set routing-options static route remote-prefix next-hop destination-ip retain
no-readvertise
```

10. Enable services such as SSH and Telnet.



NOTE: You will not be able to log in to the switch as the root user through Telnet. Root login is allowed only through SSH.

- The default option for SSH is **yes**. Select this to enable SSH.
- The default option for Telnet is **no**. Change this to **yes** to enable Telnet.

**Related
Documentation**

- [QFX5200 Installation Overview on page 87](#)

Maintaining Components

- [Maintaining QFX5200 Cooling System on page 113](#)
- [Maintaining QFX5200 Power System on page 116](#)
- [Maintaining Transceivers and Fiber Optic Cables on QFX5200 on page 120](#)
- [Powering Off a QFX5200 on page 127](#)

Maintaining QFX5200 Cooling System

- [Removing a Fan Module from a QFX5200 on page 113](#)
- [Installing a Fan Module in a QFX5200 on page 115](#)

Removing a Fan Module from a QFX5200

The fan modules in QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs): you can remove and replace them without powering off the switch or disrupting switch functions.



CAUTION: Replace a failed fan module with a new fan module within 1 minute of removal to prevent chassis overheating. Before removing the fan module, ensure you have a replacement fan module at hand.

Before you remove a fan module from a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage” on page 171](#)).

Ensure that you have the following parts and tools available to remove a fan module from a QFX5200:

- ESD grounding strap
- Antistatic bag or an antistatic mat

To remove a fan module from a QFX5200-32C or a QFX5200-32C-L (see [Figure 52 on page 114](#) and [Figure 53 on page 114](#)):

1. Place the antistatic bag or the antistatic mat on a flat, stable surface.
2. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.
3. Using a Phillips screwdriver, loosen the locking screw (3 or 4 turns).
4. On QFX5200-32C and QFX5200-32C-L models, grasp the handle on the fan module and squeeze the outside of the handle to release the module. On QFX5200-48Y models, use a screwdriver to loosen the captive screw with 3 or 4 turns.



WARNING: To avoid injury, do not touch the fan with your hands or any tools as you slide the fan module out of the chassis—the fan might still be running.

5. Pull firmly to slide the fan module halfway out of the chassis.
6. When the fan stop spinning, use your other hand to support the fan and slide the fan module completely out of the chassis.
7. Place the fan module in the antistatic bag or on the antistatic mat placed on a flat, stable surface.

Figure 52: Removing a Fan Module from a QFX5200-32C or QFX5200-32C-L


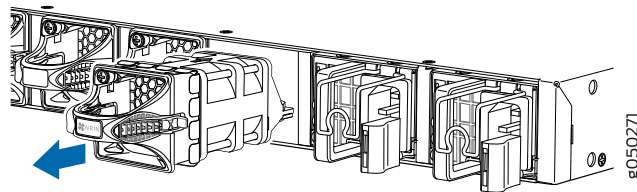


Figure 53: Removing a Fan Module from a QFX5200-48Y



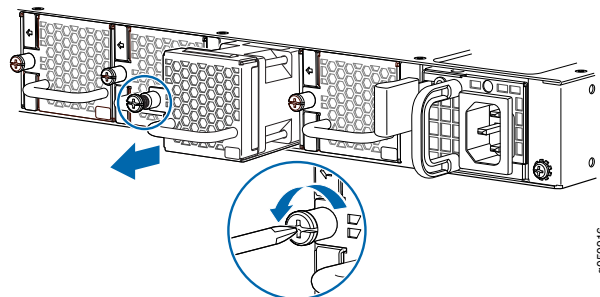

NOTE: When a fan module is removed, the CLI message **Fan/Blower is Absent** is logged in the system log, and the system raises a minor alarm.

Installing a Fan Module in a QFX5200

The fan modules in a QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs): you can remove and replace them without powering off the switch or disrupting switch functions.



CAUTION: Replace a failed fan module with a new fan module within 1 minute of removal to prevent chassis overheating. Before removing the fan module, ensure you have a replacement fan module at hand.



NOTE: The fan module provides FRU-to-port or port-to-FRU airflow depending on the switch product SKU you purchase. In legacy switches, or switches with an LCD, this airflow is called front to back and back to front.

Before you install a fan module in a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage” on page 171](#)).

To install a fan module in a QFX5200 (see [Figure 54 on page 116](#) and [Figure 55 on page 116](#)):

1. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.
2. Taking care not to touch the connectors, remove the fan module from its bag.
3. Align the module with the open slot on the management panel of the chassis and slide it in until it is fully seated.



CAUTION: Damage can occur if you attempt to install a fan module into a chassis with a different airflow direction. Compare the switch product SKU with the airflow marking on the handle to ensure that you are installing a fan module with the same airflow direction as the chassis. The fan modules are designed so that they can only be inserted into the QFX5200 product SKU that supports the same airflow type. See [“QFX5200 Cooling System” on page 41](#) for more information.

4. On QFX5200-48Y models, use a Phillips screwdriver to turn the locking screw until it is tight.

Figure 54: Installing a Fan Module in a QFX5200-32C and QFX5200-32C-L


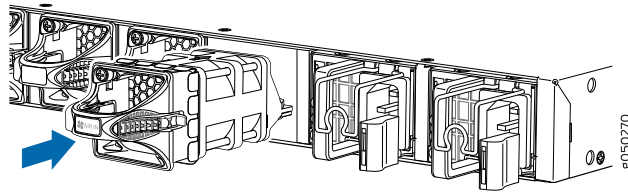


Figure 55: Installing a Fan Module in a QFX5200-48Y

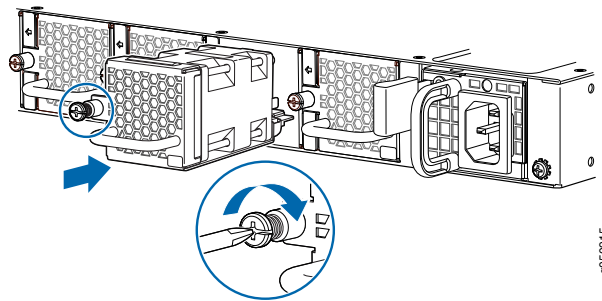

- Related Documentation**
- [QFX5200 Cooling System on page 41](#)
 - [QFX5200 Field-Replaceable Units on page 24](#)
 - [QFX5200 Switch Management on page 32](#)

Maintaining QFX5200 Power System

- [Removing a Power Supply from a QFX5200 on page 116](#)
- [Installing a Power Supply in a QFX5200 on page 118](#)

Removing a Power Supply from a QFX5200

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.

Before you remove a power supply from a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage” on page 171](#)).

Ensure that you have the following parts and tools available to remove a power supply from a QFX5200:

- ESD grounding strap
- Antistatic bag or an antistatic mat
- Phillips (+) screwdriver, number 2 (DC power supply)



CAUTION: Replace the power supply with a new power supply within 1 minute of removal to prevent chassis overheating.

To remove a power supply from a QFX5200 (see [Figure 56 on page 118](#) and [Figure 57 on page 118](#)):

1. Place the antistatic bag or the antistatic mat on a flat, stable surface.
2. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.



NOTE: If only one power supply is installed in your QFX5200, you need to power off the switch before removing the power supply. See [“Powering Off a QFX5200” on page 127](#).

3. Disconnect power to the switch:
 - AC power supply—If the AC power source outlet has a power switch, set it to the OFF (O) position. If the AC power source outlet does not have a power switch, gently pull out the male end of the power cord connected to the power source outlet.
 - DC power supply—Switch the circuit breaker on the panel board that services the DC circuit to the OFF position.
4. Remove the power source cable from the power supply faceplate:
 - AC power supply—Remove the power cord from the power supply faceplate by detaching the power cord retainer and gently pulling out the female end of the power cord connected to the power supply faceplate.
 - DC power supply—On QFX5200-32C,, remove the screws securing the ring lugs attached to the power source cables to the power supply using the screwdriver, and remove the power source cables from the power supply. Replace the screws on the terminals and tighten them.
On QFX5200-48Y, remove the power source cables from the power supply
5. Slide the locking lever toward the handle until it stops.
6. Grasp the power supply handle and pull firmly to slide the power supply halfway out of the chassis.

7. Place one hand under the power supply to support it and slide it completely out of the chassis. Take care not to touch power supply components, pins, leads, or solder connections.
8. Place the power supply in the antistatic bag or on the antistatic mat placed on a flat, stable surface.

Figure 56: Removing a Power Supply from a QFX5200-32C or a QFX5200-32C-L


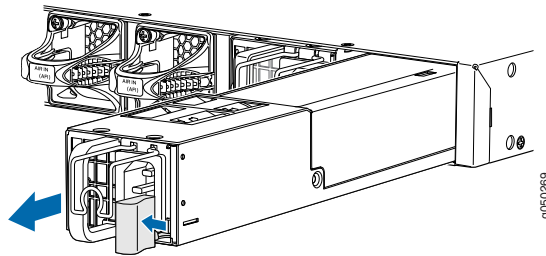


Figure 57: Removing a Power Supply from a QFX5200-48Y

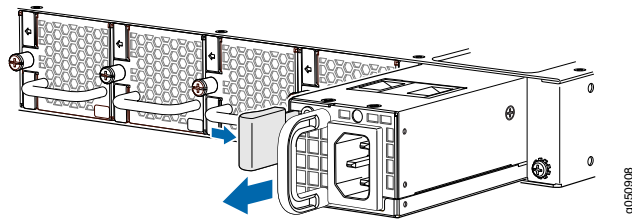

Installing a Power Supply in a QFX5200

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.

- Before you install a power supply in a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see [“Prevention of Electrostatic Discharge Damage”](#) on page 171).
- Ensure that the airflow direction of the power supply is the same as the chassis. Labels on the power supply handle indicate the direction of airflow. See [“QFX5200 Cooling System”](#) on page 41 for more information.

To install a power supply in a QFX5200 (see [Figure 58](#) on page 119 and [Figure 59](#) on page 119):

1. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.

2. Taking care not to touch power supply components, pins, leads, or solder connections, remove the power supply from its bag.



CAUTION: Verify that the direction of the arrow on the power supply handle matches the direction of airflow in the chassis. Ensure that each power supply you install in the chassis has the same airflow direction. If you install power supplies with two different airflow directions, Junos OS raises an alarm, and the status (ALM) LED blinks amber.

3. Using both hands, place the power supply in the power supply slot on the FRU panel of the switch and slide it in until it is fully seated and the locking lever slides into place.

Figure 58: Installing a Power Supply in a QFX5200-32C or a QFX5200-32C-L


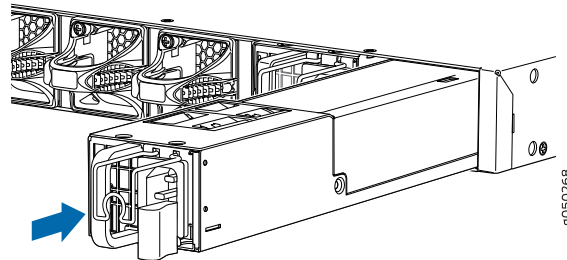


Figure 59: Installing a Power Supply in a QFX5200-48Y



NOTE: Each power supply must be connected to a dedicated power source outlet.

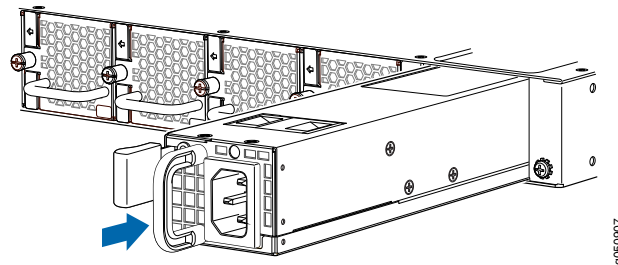

NOTE: If you have a Juniper Care service contract, register any addition, change, or upgrade of hardware components at <https://www.juniper.net/customers/support/tools/updateinstallbase/>. Failure to do so can result in significant delays if you need replacement parts. This note does not apply if you replace existing components with the same type of component.

- Related Documentation**
- [QFX5200 Power System on page 47](#)
 - [Connecting the QFX5200 to Power on page 101](#)
 - [QFX5200 Field-Replaceable Units on page 24](#)

Maintaining Transceivers and Fiber Optic Cables on QFX5200

- [QFX5200-32C-L Time Allowance on page 120](#)
- [Removing a Transceiver on page 120](#)
- [Installing a Transceiver on page 123](#)
- [Disconnecting a Fiber-Optic Cable on page 125](#)
- [Connecting a Fiber-Optic Cable on page 126](#)
- [Maintaining Fiber-Optic Cables on page 126](#)

QFX5200-32C-L Time Allowance



NOTE: When removing and inserting optics in Junos OS Evolved systems, maintain a 5 second pause between removing the optic and inserting an optic in a port.

Removing a Transceiver

The transceivers for Juniper Networks devices are hot-removable and hot-insertable field-replaceable units (FRUs). You can remove and replace them without powering off the device or disrupting device functions.



NOTE: After you remove a transceiver or when you change the media-type configuration, wait for 6 seconds for the interface to display the operational commands.

Before you begin removing a transceiver from a device, ensure that you have taken the necessary precautions for the safe handling of lasers (see [“Laser and LED Safety Guidelines and Warnings” on page 161](#)).

Ensure that you have the following parts and tools available:

- An antistatic bag or an antistatic mat
- Rubber safety caps to cover the transceiver and fiber-optic cable connector
- A dust cover to cover the port or a replacement transceiver

[Figure 60 on page 122](#) shows how to remove a QSFP+ transceiver. The procedure is the same for all types of transceivers except the QSFP28 and CFP transceivers.

To remove a transceiver from a device:

1. Place the antistatic bag or antistatic mat on a flat, stable surface.
2. Wrap and fasten one end of the ESD wrist strap around your bare wrist, and connect the other end of the strap to the ESD point on the switch.
3. Label the cable connected to the transceiver so that you can reconnect it correctly.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

4. Remove the cable connected to the transceiver. Cover the transceiver and the end of each fiber-optic cable connector with a rubber safety cap immediately after disconnecting the fiber-optic cables.

5. To remove an SFP, SFP+, XFP, or a QSFP+ transceiver:

- a. By using your fingers, pull open the ejector lever on the transceiver to unlock the transceiver.




CAUTION: Before removing the transceiver, make sure that you open the ejector lever completely until you hear it click. This prevents damage to the transceiver.

- b. Grasp the transceiver ejector lever and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

Figure 60: Removing an SFP, SFP+, XFP, or a QSFP+ Transceiver

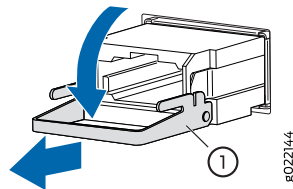

1—Ejector lever

To remove a CFP transceiver:

- a. Loosen the screws on the transceiver by using your fingers.
- b. Grasp the screws on the transceiver and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

6. By using your fingers, grasp the body of the transceiver and pull it straight out of the port.

7. Place the transceiver in the antistatic bag or on the antistatic mat placed on a flat, stable surface.
8. Place the dust cover over the empty port or install the replacement transceiver.

Installing a Transceiver

The transceivers for Juniper Networks devices are hot-removable and hot-insertable field-replaceable units (FRUs). You can remove and replace them without powering off the device or disrupting the device functions.



NOTE: After you insert a transceiver or after you change the media-type configuration, wait for 6 seconds for the interface to display operational commands.



NOTE: We recommend that you use only optical transceivers and optical connectors purchased from Juniper Networks with your Juniper Networks device.



CAUTION: If you face a problem running a Juniper Networks device that uses a third-party optic or cable, the Juniper Networks Technical Assistance Center (JTAC) can help you diagnose the source of the problem. Your JTAC engineer might recommend that you check the third-party optic or cable and potentially replace it with an equivalent Juniper Networks optic or cable that is qualified for the device.

Before you begin to install a transceiver in a device, ensure that you have taken the necessary precautions for safe handling of lasers (see [“Laser and LED Safety Guidelines and Warnings”](#) on page 161).

Ensure that you have a rubber safety cap available to cover the transceiver.

[Figure 61 on page 125](#) shows how to install a QSFP+ transceiver. The procedure is the same for all types of transceivers except the QSFP28 and CFP transceivers.

To install a transceiver:



CAUTION: To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

1. Wrap and fasten one end of the ESD wrist strap around your bare wrist, and connect the other end of the strap to the ESD point on the switch.
2. Remove the transceiver from its bag.
3. Check to see whether the transceiver is covered with a rubber safety cap. If it is not, cover the transceiver with a rubber safety cap.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.

4. If the port in which you want to install the transceiver is covered with a dust cover, remove the dust cover and save it in case you need to cover the port later. If you are hot-swapping a transceiver, wait for at least 10 seconds after removing the transceiver from the port before installing a new transceiver.
5. Using both hands, carefully place the transceiver in the empty port. The connectors must face the chassis.




CAUTION: Before you slide the transceiver into the port, ensure that the transceiver is aligned correctly. Misalignment might cause the pins to bend, making the transceiver unusable.

6. Slide the transceiver in gently until it is fully seated. If you are installing a CFP transceiver, tighten the captive screws on the transceiver by using your fingers.
7. Remove the rubber safety cap when you are ready to connect the cable to the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

Figure 61: Installing a Transceiver

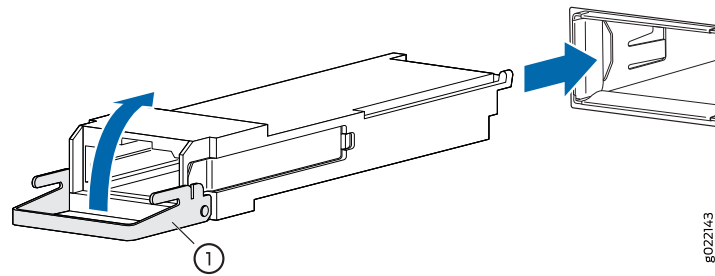

1— Ejector lever

Disconnecting a Fiber-Optic Cable

Juniper Networks devices have field-replaceable unit (FRU) optical transceivers to which you can connect fiber-optic cables.

Before you begin to disconnect a fiber-optic cable from an optical transceiver, ensure that you have taken the necessary precautions for safe handling of lasers. See [“Laser and LED Safety Guidelines and Warnings” on page 161](#).

Ensure that you have the following parts and tools available:

- A rubber safety cap to cover the transceiver
- A rubber safety cap to cover the fiber-optic cable connector

To disconnect a fiber-optic cable from an optical transceiver installed in the device:

1. Disable the port in which the transceiver is installed by issuing the following command:

```
[edit interfaces]
user@device# set interface-name disable
```



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

2. Carefully unplug the fiber-optic cable connector from the transceiver.
3. Cover the transceiver with a rubber safety cap.



WARNING: Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and prevents accidental exposure to laser light.

4. Cover the fiber-optic cable connector with the rubber safety cap.

Connecting a Fiber-Optic Cable

Before you begin to connect a fiber-optic cable to an optical transceiver installed in a device, ensure that you have taken the necessary precautions for safe handling of lasers (see “[Laser and LED Safety Guidelines and Warnings](#)” on page 161).


To connect a fiber-optic cable to an optical transceiver installed in a device:



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

1. If the fiber-optic cable connector is covered with a rubber safety cap, remove the cap. Save the cap.
2. Remove the rubber safety cap from the optical transceiver. Save the cap.
3. Insert the cable connector into the optical transceiver (see [Figure 62 on page 126](#)).

Figure 62: Connecting a Fiber-Optic Cable to an Optical Transceiver Installed in a Device

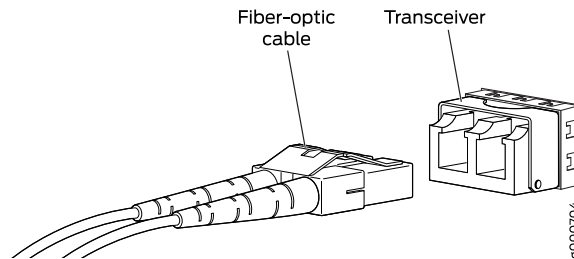

4. Secure the cables so that they do not support their own weight. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on a loop helps cables maintain their shape.



CAUTION: Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

Do not let fiber-optic cables hang free from the connector. Do not allow fastened loops of cables to dangle, which stresses the cables at the fastening point.

Maintaining Fiber-Optic Cables

Fiber-optic cables connect to optical transceivers that are installed in Juniper Networks devices.

To maintain fiber-optic cables:

- When you unplug a fiber-optic cable from a transceiver, place rubber safety caps over the transceiver and on the end of the cable.
- Anchor fiber-optic cables to prevent stress on the connectors. When attaching a fiber-optic cable to a transceiver, be sure to secure the fiber-optic cable so that it does not support its own weight as it hangs to the floor. Never let a fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cables beyond their minimum bend radius. Bending fiber-optic cables into arcs smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cables in and out of optical instruments can damage the instruments, which are expensive to repair. Attach a short fiber extension to the optical equipment. Any wear and tear due to frequent plugging and unplugging is then absorbed by the short fiber extension, which is easier and less expensive to replace than the instruments.
- Keep fiber-optic cable connections clean. Microdeposits of oil and dust in the canal of the transceiver or cable connector can cause loss of light, reduction in signal power, and possibly intermittent problems with the optical connection.
 - To clean the transceiver canal, use an appropriate fiber-cleaning device such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions in the cleaning kit you use.
 - After cleaning the transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit such as the Opptex Cletop-S Fiber Cleaner. Follow the directions in the cleaning kit you use.

Related Documentation

- [QFX5200 Network Cable and Transceiver Planning on page 71](#)

Powering Off a QFX5200



NOTE: Use the following procedure to turn off power on a QFX5200 standalone switch.

Before you remove the power cord to power off a QFX5200:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage. See [“Prevention of Electrostatic Discharge Damage” on page 171](#).
- Ensure that you do not need to forward traffic through the switch.

Ensure that you have the following parts and tools available to power off the switch:

- An ESD grounding strap

- An external management device such as a PC
- An RJ-45 to DB-9 rollover cable to connect the external management device to the console port

To power off a QFX5200 switch:

1. Connect to the switch using one of the following methods:
 - Connect a management device to the console (**CON**) port on a QFX5200. For instructions about connecting a management device to the console (**CON**) port, see [“Connecting a Device to a Management Console by Using an RJ-45 Connector” on page 100](#).
 - You can shut down the QFX5200 from a management device on your out-of-band management network. For instructions about connecting a management device to the management (**CO**) port, see [“Connecting a Device to a Network for Out-of-Band Management” on page 99](#).
2. Shut down Junos OS from the external management device.

For Junos OS Evolved systems:

- a. Issue the **request system shutdown power-off** operational mode CLI command. This command shuts down the switch gracefully and preserves system state information. A message appears on the console, confirming that the operating system has halted.

On Junos OS Evolved systems, you see the following output:

```
user@host>request system shutdown power-off
Power off the system ? [yes,no] (n) yes

poweroff the system at Tue Sep 18 11:15:27 2018
```

For standard Junos OS systems:

- a. Issue the **request system halt** operational mode CLI command. This command shuts down the switch gracefully and preserves system state information. A message appears on the console, confirming that the operating system has halted.

You see the following output (or something similar, depending on the hardware being shut down) after entering the command:

```
Shutdown NOW!
System going down IMMEDIATELY

Terminated
Poweroff for hypervisor to respawn
Oct 25 10:35:05 init: event-processing (PID 1114) exited with status=1
Oct 25 10:35:05 init: packet-forwarding-engine (PID 1424) exited with
status=8
.
.
Waiting (max 60 seconds) for system process `vnlru_mem' to stop...done
Waiting (max 60 seconds) for system process `vnlru' to stop...done
Waiting (max 60 seconds) for system process `bufdaemon' to stop...done
Waiting (max 60 seconds) for system process `syncer' to stop...
Syncing disks, vnodes remaining...0 0 0 0 done

syncing disks... All buffers synced.
Uptime: 11h0m30s
Normal shutdown (no dump device defined)
unloading fpga driver
unloading fx-scpld
Powering system off using ACPI
kvm: 28646: cpu0 disabled perfctr wrmsr: 0xc1 data 0xabcd
pci-stub 0000:01:00.2: transaction is not cleared; proceeding with reset
anyway
pci-stub 0000:01:00.1: transaction is not cleared; proceeding with reset
anyway
hub 1-1:1.0: over-current change on port 1
Stopping crond: [ OK ]
Stopping libvirtd daemon: [ OK ]
Shutting down ntpd: [ OK ]
Shutting down system logger: [ OK ]
Shutting down sntpc: [ OK ]
Stopping sshd: [ OK ]
Stopping vehostd: [ OK ]
Stopping watchdog: [ OK ]
Stopping xinetd: [ OK ]
Sending all processes the TERM signal... [ OK ]
Sending all processes the KILL signal... [ OK ]
Saving random seed: [ OK ]
Syncing hardware clock to system time [ OK ]
Turning off swap: [ OK ]
Unmounting file systems: [ OK ]
init: Re-executing /sbin/init
Halting system...
System halted.
```



CAUTION: Wait at least 60 seconds after first seeing the final message before following the instructions in Step 4 and Step 5 to power off the

switch.

3. Attach the grounding strap to your bare wrist and to a site ESD point.
4. Disconnect power to the switch by performing one of the following tasks:
 - AC power supply—If the AC power source outlet has a power switch, set it to the OFF (O) position. If the AC power source outlet does not have a power switch, gently pull out the male end of the power cord connected to the power source outlet.
 - DC power supply—Switch the circuit breaker on the panel board that services the DC circuit to the OFF position.
5. Remove the power source cable from the power supply faceplate:
 - AC power supply—Remove the power cord from the power supply faceplate by detaching the power cord retainer and gently pulling out the female end of the power cord connected to the power supply faceplate.
 - DC power supply—Remove the screws securing the ring lugs attached to the power source cables to the power supply using the screwdriver, and remove the power source cables from the power supply. Replace the screws on the terminals and tighten them.
6. Uncable the switch before removing it from the rack or cabinet.

**Related
Documentation**

- [Connecting the QFX5200 to Power on page 101](#)

CHAPTER 5

Troubleshooting Hardware

- [Troubleshooting the QFX5200 on page 133](#)

Troubleshooting the QFX5200

- [QFX5200 Troubleshooting Resources Overview on page 133](#)
- [QFX Series Alarm Messages Overview on page 134](#)
- [Chassis Alarm Messages on page 134](#)

QFX5200 Troubleshooting Resources Overview

To troubleshoot a QFX5200, you use the Junos OS CLI, alarms, and LEDs on the network ports, management panel, and components.

- LEDs—When the Routing Engine detects an alarm condition, it lights the red or yellow alarm LED on the management panel as appropriate. In addition, you can also use component LEDs and network port LEDs to troubleshoot the QFX5200. For more information, see the following topics:
 - [QFX5200 Chassis Status LEDs on page 36](#)
 - [QFX5200 Management Panel Overview on page 33](#)
 - [QFX5200-32C and QFX5200-32C-L Port Panel on page 25](#)
 - [QFX5200-48Y Port Panel on page 29](#)
 - [QFX5200-32C and QFX5200-32C-L Fan Module LED on page 46](#)
 - [QFX5200 AC Power Supply LEDs on page 52](#)
 - [QFX5200 DC Power Supply LEDs on page 56](#)
- CLI—The CLI is the primary tool for controlling and troubleshooting hardware, Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the ping and traceroute utilities. For information about using the CLI to troubleshoot Junos OS, see the appropriate Junos OS configuration guide.
- JTAC—If you need assistance during troubleshooting, you can contact the Juniper Networks Technical Assistance Center (JTAC) by using the Web or by telephone. If

you encounter software problems, or problems with hardware components not discussed here, contact JTAC.

- Knowledge Base articles—[Knowledge Base](#).

See Also • *Contacting Customer Support*

QFX Series Alarm Messages Overview

When a QFX Series switch detects an alarm condition, it lights the red or yellow alarm LED on the management panel as appropriate. To view a more detailed description of the alarm cause, issue the **show chassis alarms** CLI command:

```
user@host> show chassis alarms

6 alarms currently active
Alarm time           Class  Description
2018-02-07 12:12:18 PST Major  FPC Management1 Ethernet Link Down
2018-02-07 12:11:54 PST Minor  FPC0: LED 3:Alarm LED Read Error
2018-02-07 12:11:54 PST Minor  FPC0: LED 3:Alarm LED Write Error
2018-02-07 12:11:54 PST Major  FPC0: PEM 1 Not Supported
2018-02-07 12:11:54 PST Major  FPC0: PEM 0 Not Supported
2018-02-07 12:11:54 PST Major  FPC0: PEM 0 Not Powered
```

For Junos OS Evolved systems, **show system alarms** CLI command indicates major and minor alarms on the system. In this example from a Junos OS Evolved system, a fan tray error is shown in slot 4.

```
user@host> show system alarms

2 alarms currently active
Alarm time           Class  Description
2018-11-15 11:52:22 PST Major  Fan Tray 4 Failure  <<<<<
2018-11-15 10:40:08 PST Minor  Host 0 Disk 2 Labelled incorrectly
```

Chassis Alarm Messages

Chassis alarms indicate a failure on the device or one of its components. Chassis alarms are preset and cannot be modified.

Chassis alarms on QFX5200 devices have two severity levels:

- Major (red)—Indicates a critical situation on the device that has resulted from one of the conditions described in [Table 46 on page 135](#). A red alarm condition requires immediate action.
- Minor (yellow)—Indicates a noncritical condition on the device that, if left unchecked, might cause an interruption in service or degradation in performance. A yellow alarm condition requires monitoring or maintenance.

[Table 46 on page 135](#) describes the chassis alarm messages on QFX5200-32C and QFX5200-48Y devices. For QFX5200-32C-L devices see [Table 47 on page 138](#).

Table 46: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y

Component	Alarm Type	CLI Message	Recommended Action
Fans	Major (red)	Fan Failure	Replace the fan module and report the failure to customer support.
		Fan I2C Failure	Check the system log for one of the following error messages and report the message to customer support: <ul style="list-style-type: none"> • CM ENV Monitor: Get fan speed failed. • <i>fan-number</i> is NOT spinning @ correct speed, where <i>fan-number</i> can be 1, 2, 3, 4, or 5.
		Fan <i>fan-number</i> Not Spinning	Remove and check the fan module for obstructions, and then reinsert the fan module. If the problem persists, replace the fan module.
	Minor (yellow)	Fan/Blower Absent	Check the system log for the error message <i>fan-number Absent</i> , where <i>fan-number</i> can be 1, 2, 3, 4, or 5. Install fan modules in the slots where they are absent.

Table 46: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (continued)

Component	Alarm Type	CLI Message	Recommended Action
Power supplies	Major (red)	PEM <i>pem-number</i> Airflow not matching Chassis Airflow	Replace the power supply with a power supply that supports the same airflow direction as supported by the chassis.
		PEM <i>pem-number</i> I2C Failure	Check the system log for one of the following error messages and report the message to customer support: <ul style="list-style-type: none"> I2C Read failed for device <i>number</i>, where <i>number</i> where number ranges from 123 through 125. PS <i>number</i>: Transitioning from online to offline, where power supply <i>number</i> is 1 or 2.
		PEM <i>pem-number</i> is not powered	Check the power cord connection and reconnect, if necessary.
		PEM <i>pem-number</i> is not supported	Replace the power supply with a supported power supply.
		PEM <i>pem-number</i> Not OK	Indicates a problem with the incoming AC power or outgoing DC power. Report the error to customer support.
	Minor (yellow)	PEM <i>pem-number</i> Absent	Reboot the switch after removing one of the power supply. The switch can continue to operate with a single power supply. OR Replace the removed power supply and reboot the switch.
		PEM <i>pem-number</i> Power Supply Type Mismatch	Check whether there is a mix of AC and DC power supplies in the same chassis. Reboot the switch with only AC or only DC power supplies.
PEM <i>pem-number</i> Removed		Replace the removed power supply or reboot the switch. The switch can continue to operate with a single power supply.	

Table 46: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (continued)

Component	Alarm Type	CLI Message	Recommended Action
Temperature sensors	Major (red)	<i>sensor-location</i> Temp Sensor Fail	Check the system log for the following error message and report the message to customer support: Temp sensor <i>sensor-number</i> failed , where <i>sensor-number</i> ranges from 1 through 10.
		<i>sensor-location</i> Temp Sensor Too Hot	Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor. If the condition persists, the device might shut down.
	Minor (yellow)	<i>sensor-location</i> Temp Sensor Too Warm	Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor.
Routing Engine	Minor (yellow)	RE <i>RE number</i> /var partition usage is high	Clean up the system file storage space on the switch. For more information, see <i>Cleaning Up the System File Storage Space</i> .
	Major (red)	RE <i>RE number</i> /var partition is full	Clean up the system file storage space on the switch. For more information, see <i>Cleaning Up the System File Storage Space</i> .
	Minor (yellow)	Rescue configuration is not set	Use the request system configuration rescue save command to set the rescue configuration. For more information, see <i>Setting or Deleting the Rescue Configuration</i> .
		Feature usage requires a license or License for <i>feature</i> expired	Install the required license for the feature specified in the alarm. For more information, see <i>Software Features That Require Licenses on the QFX Series</i> .

Table 46: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (continued)

Component	Alarm Type	CLI Message	Recommended Action
Management Ethernet interface	Major (red)	Management Ethernet 1 Link Down	<p>Check whether a cable is connected to the management Ethernet interface, or whether the cable is defective. Replace the cable, if required.</p> <p>On models that have both em0 and em1 management interfaces available, you must connect both interfaces. If both interfaces are not connected, the alarm is raised. However, the alarm has no service impact.</p> <p>If you are unable to resolve the problem, open a support case by using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-5822 (tollfree, US or 1-408-745-9500 (from outside the United States)).</p>

Junos OS Evolved systems, such as QFX5200-32C-L are based on a new alarm infrastructure, not all power supplies and fan alarms are supported. Table 47 on page 138 shows these alarms.

Table 47: Chassis Alarm Messages for QFX5200-32C-L

Component	Alarm Type	CLI Message	Recommended Action
Fans	Red (major)	Fan Tray <i>fan-tray-number</i> Absent	Install fan modules in the slots where they are absent.
		Fan Tray <i>fan-tray-number</i> Failure	Remove and check fan module for obstructions. Reinsert the fan module. If the problem persists, replace the fan module.
	Yellow (minor)	FAN <i>fan-number</i> Fan Sensor Fail	Remove and check fan module for obstructions. Reinsert the fan module. If the problem persists, check the system log for the message related to the sensor and report the message to customer service.
Power Supplies	Red (major)	PEM <i>pem-number</i> Not Powered	Install a power supply into the empty slot and ensure the power supply is powered.

Table 47: Chassis Alarm Messages for QFX5200-32C-L (continued)

Component	Alarm Type	CLI Message	Recommended Action
Temperature sensors	Major (red)	FPC 0 Temperature Hot	Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor. If the condition persists, the device might shut down.
	Minor (yellow)	FPC 0 Temperature Warm	Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor.
		FPC 0 Temp Sensor Fail	Check the system log for the following error message and report the message to customer support:
Management Ethernet interface	Major (red)	Management interface <i>management-interface-name</i> down on <i>node</i>	Check whether a cable is connected to the management Ethernet interface, or whether the cable is defective. Replace the cable, if required.

- Related Documentation**
- [Definitions of Safety Warning Levels on page 151](#)
 - [Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types](#)
 - [alarm](#)

CHAPTER 6

Contacting Customer Support and Returning the Chassis or Components

- [Contacting Customer Support to Obtain Return Material Authorization on page 141](#)
- [Returning the QFX5200 Chassis or Components on page 142](#)

Contacting Customer Support to Obtain Return Material Authorization

If you are returning a device or hardware component to Juniper Networks for repair or replacement, obtain a Return Material Authorization (RMA) number from Juniper Networks Technical Assistance Center (JTAC).

After locating the serial number of the device or hardware component you want to return, open a service request with Juniper Networks Technical Assistance Center (JTAC) on the Web or by telephone.

Before you request an RMA number from JTAC, be prepared to provide the following information:

- Your existing service request number, if you have one
- Serial number of the component
- Your name, organization name, telephone number, fax number, and shipping address
- Details of the failure or problem
- Type of activity being performed on the device when the problem occurred
- Configuration data displayed by one or more **show** commands

You can contact JTAC 24 hours a day, seven days a week on the Web or by telephone:

- Service Request Manager: <https://support.juniper.net/support>
- Telephone: +1-888-314-JTAC (+1-888-314-5822), toll free in U.S., Canada, and Mexico



NOTE: For international or direct-dial options in countries without toll free numbers, see <https://support.juniper.net/support/>.

If you are contacting JTAC by telephone, enter your 12-digit service request number followed by the pound (#) key for an existing case, or press the star (*) key to be routed to the next available support engineer.

The support representative validates your request and issues an RMA number for return of the component.

Returning the QFX5200 Chassis or Components

- [Locating the Serial Number on a QFX5200 Device or Component on page 142](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 145](#)
- [Guidelines for Packing Hardware Components for Shipment on page 146](#)
- [Packing a QFX5200 Device or Component for Shipping on page 146](#)

Locating the Serial Number on a QFX5200 Device or Component

If you are returning a switch or component to Juniper Networks for repair or replacement, you must locate the serial number of the switch or component. You must provide the serial number to the Juniper Networks Technical Assistance Center (JTAC) when you contact them to obtain a Return Materials Authorization (RMA).

If the switch is operational and you can access the command-line interface (CLI), you can list serial numbers for the switch and for some components with a CLI command. If you do not have access to the CLI or if the serial number for the component does not appear in the command output, you can locate the serial number ID label on the switch or component.



NOTE: If you want to find the serial number ID label on a component, you need to remove the component from the switch chassis, for which you must have the required parts and tools available.

- [Listing the Chassis and Component Details Using the CLI on page 142](#)
- [Locating the Chassis Serial Number ID Label on a QFX5200 on page 144](#)
- [Locating the Serial Number ID Labels on FRU Components on page 145](#)

Listing the Chassis and Component Details Using the CLI

To list the QFX5200 switch and components and their serial numbers, use the **show chassis hardware** CLI operational mode command. The following examples shows the output for the QFX5200-32C models.

```
user@device> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Pseudo CB 0
Routing Engine 0      BUILTIN    BUILTIN       QFX Routing Engine
FPC 0              650-059719 WH3615220019 Qfx5200-32c-32q
```

```

CPU
PIC 0
  Xcvr 0      REV 740-038623  BUILTIN  BUILTIN  FPC CPU 32X40G/32X100G-QSFP
  Xcvr 1      REV 01 740-032986  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 2      REV 01 740-038624  BUILTIN  BUILTIN  QSFP+-40G-SR4
  Xcvr 3      REV 01 740-038624  BUILTIN  BUILTIN  QSFP+-40G-CU3M
  Xcvr 4      REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU3M
  Xcvr 5      REV 01 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 6      REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 7      REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 8      REV 01 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 9      REV 01 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 10     REV 01 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 11     REV 01 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 12     REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 13     REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 14     REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 15     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 16     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 17     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 18     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 19     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 20     REV 01 740-038624  BUILTIN  BUILTIN  QSFP+-40G-CU3M
  Xcvr 21     REV 01 740-032986  BUILTIN  BUILTIN  QSFP+-40G-SR4
  Xcvr 22     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 23     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 24     REV 740-044512  BUILTIN  BUILTIN  QSFP+-40G-CU50CM
  Xcvr 26     REV 01 740-053203  BUILTIN  BUILTIN  QSFP+-40G-ACU7M
  Xcvr 27     REV 740-038623  BUILTIN  BUILTIN  QSFP+-40G-CU1M
  Xcvr 28     REV 01 740-052307  BUILTIN  BUILTIN  QSFP+-40G-ACU7M
  Xcvr 29     REV 01 740-052307  BUILTIN  BUILTIN  QSFP+-40G-ACU7M
  Xcvr 30     REV 01 740-032986  BUILTIN  BUILTIN  QSFP+-40G-SR4
  Xcvr 31     REV 01 740-032986  BUILTIN  BUILTIN  QSFP+-40G-SR4
Fan Tray 0
Back Airflow - AFO
Fan Tray 1
Back Airflow - AFO
Fan Tray 2
Back Airflow - AFO
Fan Tray 3
Back Airflow - AFO
Fan Tray 4
Back Airflow - AFO

{master:0}

```

The next example shows the output from the QFX5200-32C-L models.

```

user@device> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
PSM 0        REV 05  740-053352  1GD18230909  JPSU-850W-AC-AFO
PSM 1        REV 05  740-053352  1GD18230901  JPSU-850W-AC-AFO
Routing Engine 0
CB 0         REV 02  650-088479  WN0218310472  RE-QFX5200-32C-32Q
FPC 0
PIC 0        BUILTIN  BUILTIN     QFX5200-32C-32Q
PIC 0        BUILTIN  BUILTIN     32X40G/32X100G-QSFP

```

```

Xcvr 0      REV 01  740-058734  1ACQ130900E  QSFP-100GBASE-SR4
Xcvr 1      REVy01 740-038624  APF15170031W72 QSFP+-40G-CU3M
Xcvr 2      REVy01 740-038625  APF165100537Y2 QSFP+-40G-CU5M
Xcvr 3      REVy01 740-038625  APF165100538UE QSFP+-40G-CU5M
Xcvr 4      REVy01 740-038625  APF165100538AB QSFP+-40G-CU5M
Xcvr 5      REVy01 740-038624  APF1515003985L QSFP+-40G-CU3M
Xcvr 6      REV 01  740-032986  QF3608R5     QSFP+-40G-SR4
Xcvr 7      REV 01  740-046565  QG1502LM     QSFP+-40G-SR4
Xcvr 8      REV 01  740-032986  QB500134     QSFP+-40G-SR4
Xcvr 9      REV 01  740-067442  QI110561     QSFP+-40G-SR4
Xcvr 10     REV 01  740-032986  QB341588     QSFP+-40G-SR4
Xcvr 11     REVy01 740-038624  APF151500398DK QSFP+-40G-CU3M
Xcvr 12     REV 01  740-058734  1ACQ110401G  QSFP-100GBASE-SR4
Xcvr 13     REVy01 740-038624  APF15150039844 QSFP+-40G-CU3M
Xcvr 14     REV 01  740-058734  1ACQ104202B  QSFP-100GBASE-SR4
Xcvr 15     REV 01  740-061405  1ACQ13140NX  QSFP-100GBASE-SR4
Xcvr 16     REV 01  740-032986  QF4900G4     QSFP+-40G-SR4
Xcvr 17     REVy01 740-038624  APF15150039889 QSFP+-40G-CU3M
Xcvr 18     REV 01  740-046565  QF33003P     QSFP+-40G-SR4
Xcvr 19     REV 01  740-052665  QH5002AK     QSFP+-40G-SR4
Xcvr 20     REV 01  740-032986  QD477662     QSFP+-40G-SR4
Xcvr 21     REV 01  740-067442  QI1200SR     QSFP+-40G-SR4
Xcvr 22     REV 01  740-061405  1ECQ11200A9  QSFP-100GBASE-SR4
Xcvr 23     REV 01  740-061405  1ACQ131416W  QSFP-100GBASE-SR4
Xcvr 24     REV 01  740-061405  1ACQ131417A  QSFP-100GBASE-SR4
Xcvr 25     REV 01  740-061405  1ACQ131417W  QSFP-100GBASE-SR4
Xcvr 26     REV 01  740-061405  1ECQ1044045  QSFP-100GBASE-SR4
Xcvr 27     REV 01  740-058734  1ACQ111308Y  QSFP-100GBASE-SR4
Xcvr 28     REV 01  740-058734  1ACQ1305019  QSFP-100GBASE-SR4
Xcvr 29     REV 01  740-052665  QH5002CM     QSFP+-40G-SR4
Xcvr 30     REV 01  740-052665  QH5002D0     QSFP+-40G-SR4
Xcvr 31     REV 01  740-058734  1ECQ11210G1  QSFP-100GBASE-SR4
Fan Tray 0  QFX5200 Fan Tray
Fan Tray 1  QFX5200 Fan Tray
Fan Tray 2  QFX5200 Fan Tray
Fan Tray 3  QFX5200 Fan Tray
Fan Tray 4  QFX5200 Fan Tray

user@device

```




NOTE: You must remove the fan module to read the fan serial number from the serial number ID label. The fan module serial number cannot be viewed through the CLI. Fan Tray 2 refers to the third module from the left, counting from 0.

Locating the Chassis Serial Number ID Label on a QFX5200

The location for the chassis serial number ID label is located on the right side of the QFX5200-32C and QFX5200-32C-L port panel. See [Figure 63 on page 145](#) for an example of where to find the serial number ID.

Figure 63: Location of the Serial Number ID Label on a QFX5200-32C or a QFX5200-32C-L Switch

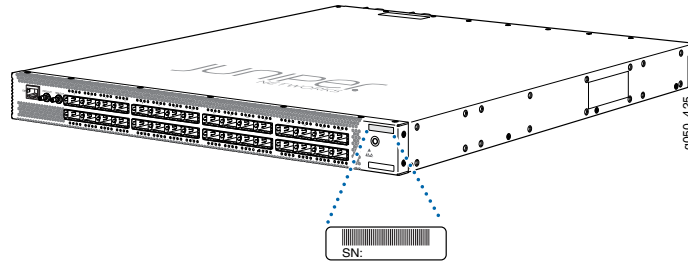

The serial number is also available in the output of the **show chassis hardware** operational mode CLI command.

Locating the Serial Number ID Labels on FRU Components

The power supplies and fan modules installed in a QFX5200 are field-replaceable units (FRUs). For each FRU, you must remove the FRU from the switch chassis to see the FRU serial number ID label.

- AC power supply—The serial number ID label is on the top of the AC power supply.
- Fan module—The serial number ID label is on the top of the fan module.

See Also • *Returning a QFX5200 or Component for Repair or Replacement*

Returning a Hardware Component to Juniper Networks, Inc.

In the event of a hardware failure, please contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



NOTE: Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support Web page at <https://support.juniper.net/support/>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Service Request Manager link at <https://support.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
 - Part number and serial number of component
 - Your name, organization name, telephone number, and fax number
 - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the component for shipment.

Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



CAUTION: Do not stack any of the hardware components.

Packing a QFX5200 Device or Component for Shipping

If you are returning a QFX5200 or component to Juniper Networks for repair or replacement, pack the item as described in this topic.

Before you pack a QFX5200 or component:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage. See [“Prevention of Electrostatic Discharge Damage” on page 171](#).
- Retrieve the original shipping carton and packing materials. Contact your JTAC representative if you do not have these materials, to learn about approved packing materials. See *Contacting Customer Support to Obtain a Return Materials Authorization for a QFX Series Device or Component*.

Ensure that you have the following parts and tools available:

- ESD grounding strap.
- Antistatic bag, one for each component.
- If you are returning the chassis, an appropriate screwdriver for the mounting screws used on your rack or cabinet.

This topic describes:

- [Packing a QFX5200 Switch for Shipping on page 147](#)
- [Packing QFX5200 Components for Shipping on page 147](#)

[Packing a QFX5200 Switch for Shipping](#)

To pack a QFX5200 for shipping:

1. Power down the switch and remove the power cables. See [“Powering Off a QFX5200” on page 127](#).
2. Remove the cables that connect the QFX5200 to all external devices.
3. Remove all field-replaceable units (FRUs) from the switch.
4. Have one person support the weight of the switch while another person unscrews and removes the mounting screws.
5. Remove the switch from the rack or cabinet (see [“QFX5200 Installation Safety Guidelines” on page 88](#)) and place the switch in an antistatic bag.
6. Place the switch in the shipping carton.
7. Place the packing foam on top of and around the switch.
8. If you are returning accessories or FRUs with the switch, pack them as instructed in [“Packing QFX5200 Components for Shipping” on page 147](#).
9. Replace the accessory box on top of the packing foam.
10. Close the top of the cardboard shipping box and seal it with packing tape.
11. Write the RMA number on the exterior of the box to ensure proper tracking.

[Packing QFX5200 Components for Shipping](#)



CAUTION: Do not stack switch components. Return individual components in separate boxes if they do not fit together on one level in the shipping box.

To pack and ship QFX5200 components:

- Place individual FRUs in antistatic bags.
- Ensure that the components are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Close the top of the cardboard shipping box and seal it with packing tape.
- Write the RMA number on the exterior of the box to ensure proper tracking.

**Related
Documentation**

- [Contacting Customer Support to Obtain Return Material Authorization on page 141](#)

CHAPTER 7

Safety and Compliance Information

- General Safety Guidelines and Warnings on page 150
- Definitions of Safety Warning Levels on page 151
- Qualified Personnel Warning on page 152
- Warning Statement for Norway and Sweden on page 153
- Fire Safety Requirements on page 153
- Installation Instructions Warning on page 154
- Chassis and Component Lifting Guidelines on page 155
- Restricted Access Warning on page 155
- Ramp Warning on page 156
- Rack-Mounting and Cabinet-Mounting Warnings on page 157
- Grounded Equipment Warning on page 161
- Laser and LED Safety Guidelines and Warnings on page 161
- Radiation from Open Port Apertures Warning on page 163
- Maintenance and Operational Safety Guidelines and Warnings on page 164
- General Electrical Safety Guidelines and Warnings on page 169
- Action to Take After an Electrical Accident on page 170
- Prevention of Electrostatic Discharge Damage on page 171
- AC Power Electrical Safety Guidelines on page 172
- AC Power Disconnection Warning on page 173
- DC Power Electrical Safety Guidelines on page 173
- DC Power Copper Conductors Warning on page 174
- DC Power Disconnection Warning on page 174
- DC Power Grounding Requirements and Warning on page 176
- DC Power Wiring Sequence Warning on page 177
- DC Power Wiring Terminations Warning on page 178
- Multiple Power Supplies Disconnection Warning on page 179
- TN Power Warning on page 180

- [Agency Approvals and Compliance Statements for the QFX5200 on page 181](#)
- [Statements of Volatility for Juniper Network Devices on page 182](#)

General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.
- Ensure that the separate protective earthing terminal provided on this device is permanently connected to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.
- Some parts of the chassis, including AC and DC power supply surfaces, power supply unit handles, SFB card handles, and fan tray handles might become hot. The following label provides the warning of the hot surfaces on the chassis:



- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

Definitions of Safety Warning Levels

The documentation uses the following levels of safety warnings (there are two *Warning* formats):



NOTE: You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.



CAUTION: You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.



WARNING: This symbol alerts you to the risk of personal injury from a laser.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

Qualified Personnel Warning



WARNING: Only trained and qualified personnel should install or replace the device.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

Warning Statement for Norway and Sweden



WARNING: The equipment must be connected to an earthed mains socket-outlet.

Advarsel Apparatet skal kobles til en jordet stikkontakt.

Varning! Apparaten skall anslutas till jordat nätuttag.

Fire Safety Requirements

In the event of a fire emergency, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use

this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

Installation Instructions Warning



WARNING: Read the installation instructions before you connect the device to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

Attention Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

Chassis and Component Lifting Guidelines

- Before moving the device to a site, ensure that the site meets the power, environmental, and clearance requirements.
- Before lifting or moving the device, disconnect all external cables and wires.
- As when lifting any heavy object, ensure that most of the weight is borne by your legs rather than your back. Keep your knees bent and your back relatively straight. Do not twist your body as you lift. Balance the load evenly and be sure that your footing is firm.
- Use the following lifting guidelines to lift devices and components:
 - Up to 39.7 lb (18 kg): One person.
 - 39.7 lb (18 kg) to 70.5 lb (32 kg): Two or more people.
 - 70.5 lb (32 kg) to 121.2 lb (55 kg): Three or more people.
 - Above 121.2 lbs (55 kg): Material handling systems (such as levers, slings, lifts and so on) must be used. When this is not practical, specially trained persons or systems must be used (riggers or movers).

Restricted Access Warning



WARNING: This unit is intended for installation in restricted access areas. A restricted access area is an area to which access can be gained only by service personnel through the use of a special tool, lock and key, or other means of security, and which is controlled by the authority responsible for the location.

Waarschuwing Dit toestel is bedoeld voor installatie op plaatsen met beperkte toegang. Een plaats met beperkte toegang is een plaats waar toegang slechts door servicepersoneel verkregen kan worden door middel van een speciaal instrument, een slot en sleutel, of een ander veiligheidsmiddel, en welke beheerd wordt door de overheidsinstantie die verantwoordelijk is voor de locatie.

Varoitus Tämä laite on tarkoitettu asennettavaksi paikkaan, johon pääsy on rajoitettua. Paikka, johon pääsy on rajoitettua, tarkoittaa paikkaa, johon vain huoltohenkilöstö pääsee jonkin erikoistyökalun, lukkoon sopivan avaimen tai jonkin muun turvalaitteen avulla ja joka on paikasta vastuussa olevien toimivaltaisten henkilöiden valvoma.

Attention Cet appareil est à installer dans des zones d'accès réservé. Ces dernières sont des zones auxquelles seul le personnel de service peut accéder en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout

autre moyen de sécurité. L'accès aux zones de sécurité est sous le contrôle de l'autorité responsable de l'emplacement.

Warnung Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt ist ein Bereich, zu dem nur Wartungspersonal mit einem Spezialwerkzeugs, Schloß und Schlüssel oder anderer Sicherheitsvorkehrungen Zugang hat, und der von dem für die Anlage zuständigen Gremium kontrolliert wird.

Avvertenza Questa unità deve essere installata in un'area ad accesso limitato. Un'area ad accesso limitato è un'area accessibile solo a personale di assistenza tramite un'attrezzo speciale, lucchetto, o altri dispositivi di sicurezza, ed è controllata dall'autorità responsabile della zona.

Advarsel Denne enheten er laget for installasjon i områder med begrenset adgang. Et område med begrenset adgang gir kun adgang til servicepersonale som bruker et spesielt verktøy, lås og nøkkel, eller en annen sikkerhetsanordning, og det kontrolleres av den autoriteten som er ansvarlig for området.

Aviso Esta unidade foi concebida para instalação em áreas de acesso restrito. Uma área de acesso restrito é uma área à qual apenas tem acesso o pessoal de serviço autorizado, que possua uma ferramenta, chave e fechadura especial, ou qualquer outra forma de segurança. Esta área é controlada pela autoridade responsável pelo local.

¡Atención! Esta unidad ha sido diseñada para instalarse en áreas de acceso restringido. Área de acceso restringido significa un área a la que solamente tiene acceso el personal de servicio mediante la utilización de una herramienta especial, cerradura con llave, o algún otro medio de seguridad, y que está bajo el control de la autoridad responsable del local.

Varning! Denna enhet är avsedd för installation i områden med begränsat tillträde. Ett område med begränsat tillträde får endast tillträdas av servicepersonal med ett speciellt verktyg, lås och nyckel, eller annan säkerhetsanordning, och kontrolleras av den auktoritet som ansvarar för området.

Ramp Warning



WARNING: When installing the device, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

Rack-Mounting and Cabinet-Mounting Warnings

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



WARNING: To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The device must be installed in a rack that is secured to the building structure.
- The device should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting the device on a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.

- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.

- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, oerriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
 - Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
 - Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
 - Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.
-

Grounded Equipment Warning



WARNING: The device is intended to be grounded. During normal use, ensure that you have connected earth ground to the chassis.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.

Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

Laser and LED Safety Guidelines and Warnings

Juniper Networks devices are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per EN 60825-1 requirements.

Observe the following guidelines and warnings:

- [General Laser Safety Guidelines on page 162](#)
- [Class 1 Laser Product Warning on page 162](#)
- [Class 1 LED Product Warning on page 162](#)
- [Laser Beam Warning on page 163](#)

General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Class 1 Laser Product Warning



WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.

Avvertenza Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.

Class 1 LED Product Warning



WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.

Avvertenza Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.

Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

Advarsel Stirr eller se ikke direkte p strlen med optiske instrumenter.

Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

¡**Atención!** No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

Radiation from Open Port Apertures Warning



WARNING: Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

Maintenance and Operational Safety Guidelines and Warnings

While performing the maintenance activities for devices, observe the following guidelines and warnings:

- [Battery Handling Warning on page 165](#)
- [Jewelry Removal Warning on page 166](#)
- [Lightning Activity Warning on page 167](#)
- [Operating Temperature Warning on page 167](#)
- [Product Disposal Warning on page 169](#)

Battery Handling Warning



WARNING: Replacing a battery incorrectly might result in an explosion. Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Waarschuwing Er is ontploffingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

Advarsel Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los

objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledning. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.

Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature. To

prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

Waarschuwing Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

Varoitus Ettei Juniper Networks switch-sarjan reititin ylikuumentuusi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

Attention Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

Warnung Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

Avvertenza Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

Advarsel Unngå overoppheting av eventuelle rutere i Juniper Networks switch Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

Aviso Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

¡Atención! Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aperturas para ventilación.

Varning! Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen

inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this device must be handled according to all national laws and regulations.

Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

General Electrical Safety Guidelines and Warnings



WARNING: Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metallically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metallically to OSP wiring.



CAUTION: Before removing or installing components of a device, connect an electrostatic discharge (ESD) grounding strap to an ESD point and wrap and fasten the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the device.

- Install the device in compliance with the following local, national, and international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that grounding surfaces are cleaned and brought to a bright finish before grounding connections are made.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install equipment that appears to be damaged.

Action to Take After an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

Prevention of Electrostatic Discharge Damage

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD wrist strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 64 on page 171](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.




WARNING: For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD wrist strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 64 on page 171](#)). If you are returning a component, place it in an antistatic bag before packing it.

Figure 64: Placing a Component into an Antistatic Bag

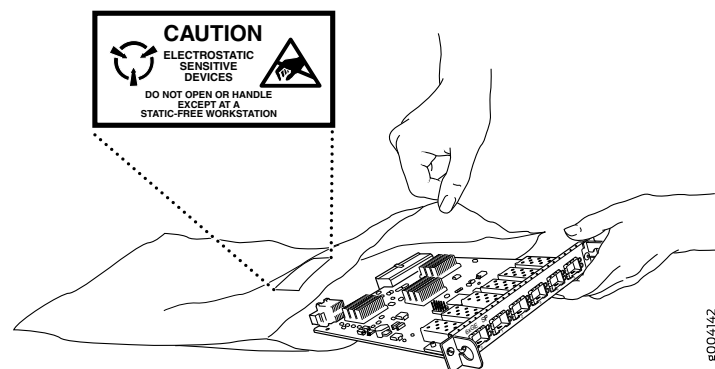



CAUTION: ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

AC Power Electrical Safety Guidelines



CAUTION: For devices with AC power supplies, an external surge protective device (SPD) must be used at the AC power source.

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:

“CAUTION: THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”

“ATTENTION: CET APPAREIL COMPORTE PLUS D'UN CORDON D'ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D'ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”

- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker (2-pole circuit breaker or 4-pole circuit breaker based on your device) rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

Power Cable Warning (Japanese)

WARNING: The attached power cable is only for this product. Do not use the cable for another product.

注意

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

9017253

AC Power Disconnection Warning



WARNING: Before working on the device or near power supplies, unplug all the power cords from an AC-powered device.

Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

Varoitus Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut på vekselstrømsenheter.

Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

DC Power Electrical Safety Guidelines

- A DC-powered device is equipped with a DC terminal block that is rated for the power requirements of a maximally configured device.

Incorporate an easily accessible disconnect device into the facility wiring. Be sure to connect the ground wire or conduit to a solid office earth ground. A closed loop ring is recommended for terminating the ground conductor at the ground stud.

- Run two wires from the circuit breaker box to a source of 48 VDC.
- A DC-powered device that is equipped with a DC terminal block is intended only for installation in a restricted-access location. In the United States, a restricted-access

area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



NOTE: Primary overcurrent protection is provided by the building circuit breaker. This breaker must protect against excess currents, short circuits, and earth grounding faults in accordance with NEC ANSI/NFPA 70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.
- For personal safety, connect the green and yellow wire to safety (earth) ground at both the device and the supply side of the DC wiring.
- The marked input voltage of -48 VDC for a DC-powered device is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the device is a positive ground system, you must connect the positive lead to the terminal labeled **RTN**, the negative lead to the terminal labeled -48 VDC, and the earth ground to the device grounding points.

DC Power Copper Conductors Warning



WARNING: Use copper conductors only.

Waarschuwing Gebruik alleen koperen geleiders.

Varoitus Käytä vain kuparijohtimia.

Attention Utilisez uniquement des conducteurs en cuivre.

Warnung Verwenden Sie ausschließlich Kupferleiter.

Avvertenza Usate unicamente dei conduttori di rame.

Advarsel Bruk bare kobberledninger.

Aviso Utilize apenas fios condutores de cobre.

¡Atención! Emplee sólo conductores de cobre.

Varning! Använd endast ledare av koppar.

DC Power Disconnection Warning



WARNING: Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate

the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

Waarschuwing Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

Varoitus Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

Attention Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifiez que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

Warnung Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

Avvertenza Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

Advarsel Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

Aviso Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

¡Atención! Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para

asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

Varning! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.

DC Power Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



WARNING: When you install the device, the ground connection must always be made first and disconnected last.

Waarschuwing Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

Varoitus Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

Attention Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

Warnung Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

Avvertenza In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

Advarsel Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

Aviso Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

¡Atención! Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

Varning! Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

DC Power Wiring Sequence Warning



WARNING: Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then –48 V to –48 V. When disconnecting power, the proper wiring sequence is –48 V to –48 V, +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

Waarschuwing De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en –48 V naar –48 V. De juiste bedradingsvolgorde losgemaakt is en –48 V naar –48 V, +RTN naar +RTN, aarde naar aarde.

Varoitus Oikea yhdistettävä kytkentäjäristys on maajohto maajohtoon, +RTN varten +RTN, –48 V varten –48 V. Oikea irrotettava kytkentäjäristys on –48 V varten –48 V, +RTN varten +RTN, maajohto maajohtoon.

Attention Câblez l'alimentation d'alimentation CC En utilisant les crochets appropriés à l'extrémité de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis –48 V à –48 V. En débranchant la puissance, l'ordre approprié de câblage est –48 V à –48 V, +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

Warnung Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlusssequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann –48V zu –48V. Die richtige Sequenz zum Abtrennen der Stromversorgung ist –48V zu –48V, +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

Avvertenza Mostra la morsettiera dell'alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

Advarsel Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, –48 V til –48 V. Riktig frakoples tilkoplingssekvens er –48 V til –48 V, +RTN til +RTN, jord til jord.

Aviso Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se muele para moler, +RTN a +RTN, entonces –48 V a –48 V. Al desconectar potencia, la secuencia apropiada del cableado es –48 V a –48 V, +RTN a +RTN, entonces molió para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

¡Atención! Wire a fonte de alimentação de DC Usando os talões apropriados na extremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então -48 V a -48 V. Ao desconectar a potência, a seqüência apropriada da fiação é -48 V a -48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

Warning! Korrekt kopplingssekvens ar jord till jord, +RTN till +RTN, -48 V till -48 V. Korrekt kopplas kopplingssekvens ar -48 V till -48 V, +RTN till +RTN, jord till jord.

DC Power Wiring Terminations Warning



WARNING: When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

Waarschuwing Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Varoitus Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitäntää, esimerkiksi suljettua silmukkaa tai kourumaista liitäntää, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitäntöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

Attention Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

Warnung Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

Avvertenza Quando occorre usare trecce, usare connettori omologati, come quelli a occhiello o a forcilla con linguette rivolte verso l'alto. I connettori

devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

Advarsel Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og ledaren.

Aviso Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

¡Atención! Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Varning! När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

Multiple Power Supplies Disconnection Warning



WARNING: The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

Waarschuwing Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

Varoitus Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

Attention Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

Warnung Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

Avvertenza Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

Advarsel Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

Aviso Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

¡Atención! Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

Varning! Denna enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

TN Power Warning



WARNING: The device is designed to work with a TN power system.

Waarschuwing Het apparaat is ontworpen om te functioneren met TN energiesystemen.

Varoitus Koje on suunniteltu toimimaan TN-sähkövoimajärjestelmien yhteydessä.

Attention Ce dispositif a été conçu pour fonctionner avec des systèmes d'alimentation TN.

Warnung Das Gerät ist für die Verwendung mit TN-Stromsystemen ausgelegt.

Avvertenza Il dispositivo è stato progettato per l'uso con sistemi di alimentazione TN.

Advarsel Utstyret er utfomet til bruk med TN-strømsystemer.

Aviso O dispositivo foi criado para operar com sistemas de corrente TN.

¡Atención! El equipo está diseñado para trabajar con sistemas de alimentación tipo TN.

Varning! Enheten är konstruerad för användning tillsammans med elkraftssystem av TN-typ.

Agency Approvals and Compliance Statements for the QFX5200

See the following topics for agency and compliance information:

- [Agency Approvals for the QFX Series on page 181](#)

Agency Approvals for the QFX Series

The QFX Series complies with the following standards:

- Safety
 - CAN/CSA-C22.2 No. 60950-1 Safety of Information Technology Equipment
 - UL 62368-1 Audio/Video, Information and Communication Technology Equipment-Safety
 - IEC 62368-1: 2014 Audio/Video, Information and Communication Technology Equipment–Safety
 - IEC 60950-1:2005/A2:2013 Information Technology Equipment -Safety (All country deviations): CB Scheme
 - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
- Electromagnetic Compatibility (EMC)
 - EN 300 386 V1.6.1 (2012) Telecom Network Equipment–EMC requirements
 - EN 55024: 1998/A1:2001/A2:2003 Information Technology Equipment Immunity Characteristics
 - TEC/SD/DD/EMC-221–India EMC standard
 - EN 301 489-1 V1.92 (2011-09)–EMC and Radio spectrum Matters
 - EN 55024
 - CISPR 24
 - BSMI, Class A
 - CNS 13438
- Electromagnetic Interference (EMI)
 - FCC 47 CFR Part 15, Class A (2009) USA Radiated Emissions
 - EN 55022 Class A (2010) European Radiated Emissions
 - VCCI Class A:(2010) Japanese Emissions
 - BSMI CNS 13438 and NCC C6357 Class A Taiwan Radiated Emissions
 - AS/NZS CISPR 22:2009: Class A, Australian/New Zealand Radiated Emissions
- Immunity

- EN 55024: 1998/A1:2001/A2:2003 Information Technology Equipment Immunity Characteristics
- EN-61000-3-2 (2006) Power Line Harmonics
- EN-61000-3-3 (2013) Power Line Voltage Fluctuations
- EN-61000-4-2 (2009) Electrostatic Discharge
- EN-61000-4-3 (2007) Radiated Immunity
- EN-61000-4-4 (2012) Electrical Fast Transients
- EN-61000-4-5 (2006) Surge
- EN-61000-4-6 (2009) Immunity to Conducted Disturbances
- EN-61000-4-11 (2004) Voltage Dips and Sags

Related Documentation

- [General Safety Guidelines and Warnings on page 150](#)

Statements of Volatility for Juniper Network Devices

A *statement of volatility*—sometimes known as *letter of volatility*—identifies the volatile and non-volatile storage components in Juniper Networks devices, and describes how to remove non-volatile storage components from the device.



NOTE: Statements of volatility are not available for all Juniper Networks devices.

CTP Series:

- [CTP2000](#)

EX Series:

- [EX2200 and EX2200-C](#)
- [EX2300-24P, EX2300-24T, and EX2300-24T-DC](#)
- [EX2300-48P and EX2300-48T](#)
- [EX2300-C](#)
- [EX3300](#)
- [EX3400-24P, EX3400-24T, EX3400-24T-DC](#)
- [EX3400-48P, EX3400-48T, EX3400-48T-AFI](#)
- [EX4200](#)
- [EX4300](#)
- [EX4300-48MP](#)

- EX4500
- EX4550
- EX4600
- EX8200
- XRE200 External Routing Engine

LN Series:

- LN1000-CC

MX Series:

- M7i
- M7i Compact Forwarding Engine Board (CFEB)
- M40e and M10i
- M320
- MX5, MX10, MX40, and MX80
- MX240, MX480, and MX960
- RE-A-2000 Route Engine
- RE-S-X6-64G Routing Engine

QFX Series:

- QFX3008-I
- QFX3100
- QFX3500
- QFX3600
- QFX5100-24Q
- QFX5100-48S
- QFX5100-48T
- QFX5110-32Q
- QFX5110-48S
- QFX5200
- QFX5200-32C
- QFX10008 and QFX10016

SRX Series:

- SRX100
- SRX110
- SRX210B
- SRX210H-POE
- SRX210H-P-MGW
- SRX220
- SRX240H
- SRX240H-POE
- SRX300
- SRX320
- SRX340 and SRX345
- SRX550
- SRX650
- SRX1400
- SRX1500
- SRX3400 and SRX3600
- SRX5400, SRX5600, and SRX5800
- SRX-MP-1SERIAL
- SSG-520M

T Series:

- RE-A-2000 Route Engine