

AGATWNPME01B

TWINNING KIT

For Single-Stage and Two-Stage, Variable Speed Condensing and Non-Condensing Gas Furnaces

Installation Instructions

NOTE: Read the entire instruction manual before starting the installation.

SAFETY CONSIDERATIONS



WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, other conditions, which could result in personal injury or death. Consult a qualified service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified service agency must use only factory-authorized kits or accessories when modifying this product.



WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD


Failure to follow this warning could result in dangerous operation, personal injury, death, or property damage.

Furnaces shall NOT be twinned (i.e. tandem or staged operation) unless approved in factory technical specifications literature for the furnace. A factory authorized, field-supplied Twinning Kit MUST be used. Consult furnace pre-sale literature for specific models approved for twinning and the correct twinning kit. Twinned furnaces must be installed on both a common supply AND a common return duct system as shown in the Twinning Kit Installation Instructions. Only two furnaces can be twinned on a common supply and return duct system using a factory authorized twinning kit.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions include in literature and attached to the unit. Consult local building codes, the current editions of the National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1 and the National Electrical Code (NEC) NFPA 70.

In Canada, refer to the current editions of the National Standards of Canada CAN/CSA-B149.1 and .2 Natural Gas and Propane Installation Codes, and Canadian Electrical Code CSA C22.1

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

TABLE OF CONTENTS

SAFETY CONSIDERATIONS	1
TABLE OF CONTENTS	1
INTRODUCTION	2
DESCRIPTION AND USAGE	3
SECTION 1	3
DUCT CONNECTIONS - ALL MODELS	3
ELECTROSTATIC DISCHARGE (ESD) PRECAUTION	5
SECTION 2	5
GENERAL - ALL ORIENTATIONS	5
INSTALL FURNACES	5
UPFLOW INSTALLATION	5
DOWNFLOW INSTALLATIONS	6
HORIZONTAL INSTALLATION	6
GENERAL	6
SECTION 3	12
CONNECT ELECTRICAL COMPONENTS	12
TWINNING KIT HARNESS CONNECTIONS	12
CONNECT ELECTRICAL COMPONENTS - COOLING	17
THERMOSTAT CONNECTIONS	17
VENTING	21
GAS SUPPLY PIPING	21
CONDENSING FURNACE CONDENSATE DRAIN CONNECTIONS	21
START-UP AND ADJUSTMENT	21
SEQUENCE OF OPERATION	22

! WARNING

ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any installation or modification. Follow the operating instructions on the label attached to the furnace.

! CAUTION

CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

! WARNING

UNIT AND PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in unit and property damage. Do not use this Twinning Kit with any models not listed or with earlier series of the models shown in [Table 1](#). Incorrect blower operation or auxiliary limit operation may result.

Refer to the unit rating plate to determine the Series designation of the furnace.

INTRODUCTION

This twinning kit is used to twin two furnaces with variable-speed constant-torque ECM blower motors and controlled by a mechanical thermostat. An electronic User Interface cannot be used and is not approved for twinned furnaces.

This furnace twinning kit permits two furnaces to operate together like one larger two-stage furnace on the same duct work. The furnaces must be installed with common supply and return plenums. For upflow installations, the common return plenum or platform must use some or all of the bottom return opening as shown in the DUCT CONNECTIONS section. This kit ensures both furnace blowers operate simultaneously so air flows through the duct work rather than recirculating in a loop between the furnaces.

Twinned two-stage furnaces can only operate as staged units. With the two-stage furnaces, low-heat in both furnaces is used for first-stage heat, and high-heat in both furnaces is used for second-stage heat. Two-stage furnaces can be configured to use a field supplied single-stage thermostat and the furnace control staging algorithm or can be configured to use a field supplied two-stage thermostat to control the staging. Refer to the CONNECT ELECTRICAL COMPONENTS section for two-stage thermostat details.

Cooling units used with twinned furnaces must be single-stage A/C unit(s). Heat pumps cannot be twinned with gas furnaces.

When installing twinned outdoor units with twinned gas furnaces, it is necessary to use a field-supplied 24-VAC pilot-duty relay and a field-supplied 24-VAC/115-VAC transformer as shown in the individual wiring diagrams to prevent overloading furnace 24-VAC/115-VAC transformer.

Table 1 – Models

90+% VCT-ECM Models (Condensing Furnaces)								
GG96VTAA	926TA, 926TB	926SA	59TP6A, 59TP6B	59SP6A	PG96VAT, PG96VTA	F9MVE, G9MVE	F96VTN, G96VTN	N96VSN
42060B	42060	42060	060--14	060--14	42060B	0601714	0601714	0601714
48080B	48080	48080	080--16	080--16	48080B	0801716	0801716	0801716
-	60080	60080	080--20	080--20	60080C	-	0802120	0802120
60100C	60100	60100	100--20	100--20	60100C	1002120	1002120	1002120
66120D	66120	66120	120--22	120--22	66120D	1202422	1202422	1202422
All Minor Series	All Minor Series	All Minor Series	All Minor Series	All Minor Series	VAT Series A Not Permitted	A2 Series	All Minor Series	All Minor Series

80+% VCT-ECM Models (Non-Condensing Furnaces)									
314AAV	314JAV SERIES B	820TA, 821TA	58CTW	58CTY SERIES 110	58TP0A, 58TP1A	F8MVL, G8MVL	PG80VTL	PG8JVB	F80VTL, G80VTL
-	-	48070	-	-	070--16	-	48070B	-	0701716
048090	048090	48090	090--16	090--16	090--16	902116	48090B	048090	-
-	-	60090	-	-	090--20	-	60090B	-	0902120
066110	066110	66110	110--22	110--22	110--22	1102122	66110C	066110	1102122
066135	066135	66135	135--22	135--22	135--22	1352422	66135D	066135	-
Series A Not Permitted	Series A Not Permitted	All Minor Series	Series 100 Not Permitted	Series 100 Not Permitted	All Minor Series	B Series	All Minor Series	Series A Not Permitted	-

! CAUTION

UNIT AND PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in unit and property damage. Do not use this Twinning Kit with any models not listed or with earlier series of the models shown in [Table 1](#). Incorrect blower operation or auxiliary limit operation may result.

Refer to the unit rating plate to determine the Series designation of the furnace.

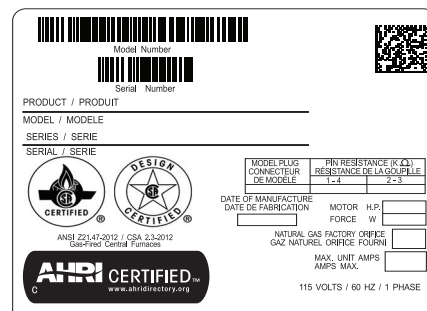


Fig. 1 – Location of Condensing Model and Series

L14F017

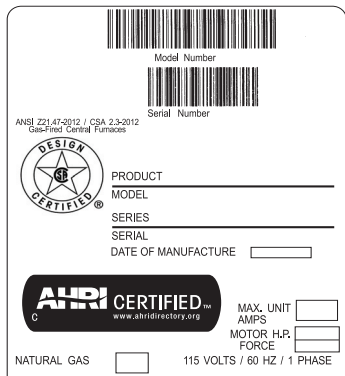


Fig. 2 – Location of Non-Condensing Model and Series L14F018
Table 2 – Kit Contents

QUANTITY	DESCRIPTION
1	Extension Harness Assembly
1	Main Twinning Harness Assembly
1	Secondary Twinning Harness Assembly
3	Wiring Labels
1	Reference Label
1	Instructions
1	Loose Parts Bag-Includes:
2	Communication Connector
1	Snap Bushings
1	Wire Tie
2	7/8 in. Cable Clamps
11	#6 x 3/4 in. Screws
1	Screw with 3/8 in. formed washer

DESCRIPTION AND USAGE

IMPORTANT: Only the furnace sizes listed in [Table 1](#) can be twinned with this kit. Both furnaces must have the same product number, including heating and cooling sizes, to achieve correct operation. One furnace is the Main furnace and the other furnace is the Secondary furnace. The Main furnace controls the operation of the Secondary furnace. All control connections are made to the Main furnace and Main furnace wiring harness.

Twinned furnaces in these instructions are also referred to as the left-hand furnace (LH) and right hand furnace (RH) or back-to-back.

NOTE: To determine referencing of Left Hand (LH) and Right Hand (RH) furnace:

- a. In the Side-by-Side, upflow and downflow applications, reference the furnaces from the front, as you would see them in the upflow application, see [Fig. 4](#) and [Fig. 5](#). The LH furnace is the Main furnace and the RH furnace is the Secondary furnace.
- b. In the Back-to-Back, upflow, downflow and horizontal applications, reference the furnaces from the side of the external extension harness. The LH furnace is the Main furnace and the RH furnace is the Secondary furnace, as you would see them in the upflow application, see [Fig. 3](#) and [Fig. 5](#).

Kit contents are shown in [Table 2](#).

! WARNING

UNIT AND PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in unit and property damage. A non-condensing furnace shall NOT be twinned with a condensing furnace. Two-stage condensing or non-condensing furnaces shall not be twinned with any single-stage furnace. Do not twin furnaces that have a different number of blower motor speed taps together. Furnaces shall only be twinned in the positions shown. Communicating variable-speed furnaces shall not be twinned.

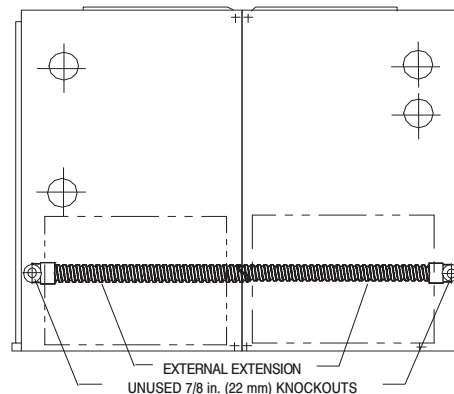


Fig. 3 – External Extension L11F102

SECTION 1
DUCT CONNECTIONS - ALL MODELS

For all furnaces: All furnaces must have a common supply plenum attached to the furnaces or evaporator coils prior to any branch supply trunk or take-off. The height of the plenum should be at least as high (upflow/downflow) or as long (horizontal) as the width of one furnace. Supply air dampers, when used, should be installed in the branch ducts, not in the common plenum. Fire or smoke dampers, when required by code, may be installed in the common plenum. Refer to the damper manufacturer’s ratings installation instructions for proper application. The damper should not create undue restriction in the open position.

All furnaces must be installed to ensure sufficient return air to both furnaces:

For upflow furnaces: A combination of one full side of each and bottom inlet plenum or bottom only inlet plenum shall be used for return air to each furnace. The preferred method is to have all return air brought into the bottom of the furnaces through a common bottom plenum. The bottom return-air plenum shall be at least as high as the width of the furnace bottom return-air opening. For example, if two 17-1/2 in. (445 mm) wide furnaces are twinned together, the full height common return air plenum must be at least 17-1/2 in. (445 mm) tall. When there are height limitations, the bottom return-air plenum height can be reduced to 8 in. (203 mm) minimum if one entire side return-air opening of each furnace is used in conjunction with the bottom return opening. The rear of the furnace casing cannot be used for all or part of the return air connection. If rear return air connections are required, connect the return air duct to the rear of the return air plenum. Connect all return trunks or branch return ducts to common return plenum, see [Fig. 4](#).

For downflow and horizontal furnaces: All return air must be brought into the bottom opening of the furnace through a common return air plenum. The return-air plenum shall be at least as long (horizontal) or tall (downflow) as the width of the furnace return-air opening. Connect all return trunks or branch return ducts to common return plenum, see [Fig. 5](#).



! WARNING

FIRE HAZARD

Failure to follow this warning could result in improper auxiliary limit operation, fire, personal injury or death.

Do not remove the center return air partitions between the furnaces.

NOTE: Throughout these instructions, when the furnace installed side-by-side, the left-hand (LH) side will be referred to as the LH furnace, and the furnace installed on the right-hand (RH) side as the RH furnace. When the furnaces are installed back-to-back, the left-hand (LH) side will be referred to as the LH furnace, and the furnace installed on the right-hand (RH) side as the RH furnace when viewed from the side with the extension harness installed.

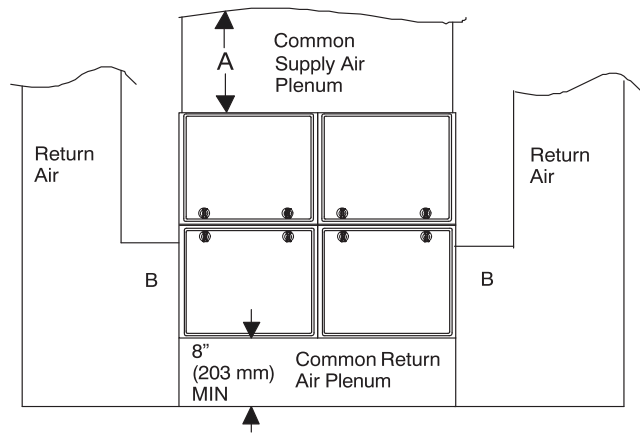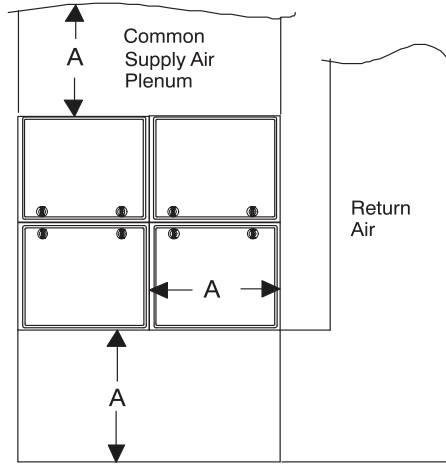

Representative drawing only, some models may vary in appearance.

L11F093 / L11F094

NOTE: Upflow - Single Return

Return duct cannot obstruct access to either furnace
Return Air can enter through any combination of:



- a. Left side only
- a. Right side only
- b. Bottom only
- c. Back of platform when height of platform equals Dimension "A" as shown

NOTE: Upflow - Two Returns

When furnaces are installed back-to-back (not shown), return duct **MUST** connect to the common return plenum and side inlet of **BOTH** surfaces.

Return duct cannot obstruct access to either furnace.

Fig. 4 – Upflow Ductwork Connections
(Condensing model shown - comparable to Non-Condensing model)

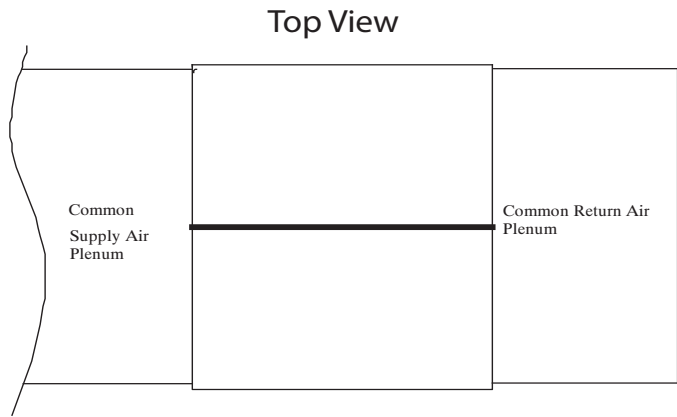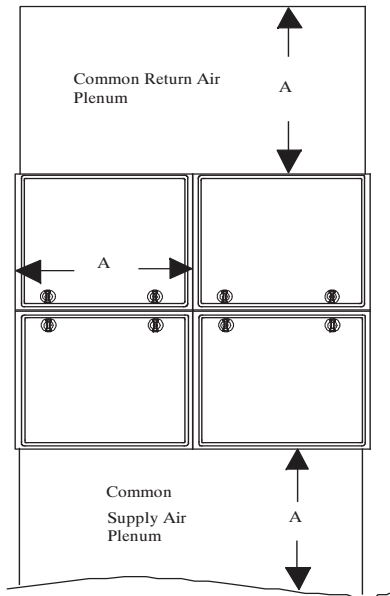

Representative drawing only, some models may vary in appearance.

L11F095A

NOTE: Downflow Application

Do not connect return air to any side of the furnace
Connect return air plenum as shown

NOTE: Horizontal Application

Do not connect return air to any side of the furnace.
Do not stack condensing furnaces on top of each other.
Horizontal stacking only permitted with mid-efficiency furnaces.
Back-to-back installations, platform or suspended is approved for all models.

For back-to-back installations, Dimension "A" is measured across the front of one furnace, similar to upflow/downflow installations.

NOTE: Refer to the Installation, Start-Up, and Operating Instructions supplied with each furnace for information on venting, clearances, start-up, maintenance, and other information not covered in this publication.

Fig. 5 – Downflow/Horizontal Ductwork Connections
(Condensing model shown - comparable to Non-Condensing model)

ELECTROSTATIC DISCHARGE (ESD) PRECAUTION

! CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit and component damage.

Failure to follow this caution could result in unit and component damage. Electrostatic discharge can affect electronic components. Take Precautions during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and hand tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic discharge by putting the furnace, the control and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. **DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S ELECTROSTATIC CHARGE TO GROUND.**
2. Firmly touch a clean, unpainted, metal surface of the furnace chassis which is close to the control. Tools held in a person's hand during grounding will be satisfactorily discharged.
3. After touching the chassis you may proceed to service the control or connecting wires as long as you do nothing that recharges your body with static electricity (for example; **DO NOT** move or shuffle your feet, **DO NOT** touch ungrounded objects, etc.).
4. If you touch ungrounded objects (recharge your body with static electricity), firmly touch furnace again before touching control or wires.
5. Use this procedure for installed and uninstalled (ungrounded) furnaces.
6. Before removing a new control from its container, discharge your body's electrostatic charge to ground to protect the control from damage. If the control is to be installed in a furnace, follow items 1 through 5 before bringing the control or yourself into contact with the furnace. Put all used **AND** new controls into containers before touching ungrounded objects.
7. An ESD service kit (available from commercial sources) may also be used to prevent ESD damage.

**SECTION 2
GENERAL - ALL ORIENTATIONS
INSTALL FURNACES**

NOTE: Multipoise units can be installed in UPFLOW, DOWNFLOW, or HORIZONTAL configurations.

Refer to furnace Installation, Start-Up, and Operating Instructions or Product Specifications for appearance and dimensional drawing of twinned furnaces and their connection locations.

NOTE: Follow all clearances for combustibles and service as shown in the individual furnace installation instructions

1. Select two identical heating and airflow furnaces, see [Table 1](#).
2. Remove bottom closure panels from both furnaces, see [Fig. 6](#).
 - a. Remove main and blower access doors.
 - b. Remove screws from front filler panel, and bottom closure panel (when used).
 - c. Rotate front filler panel downward to remove.
 - d. Remove bottom closure panel and set aside.
 - e. Reinstall front filler panel.

3. Apply two factory-supplied foam strips to mating side of one furnace. Locate strips equal distance from top and bottom as shown in [Fig. 8](#).
4. Refer to the appropriate orientation to install the furnaces.


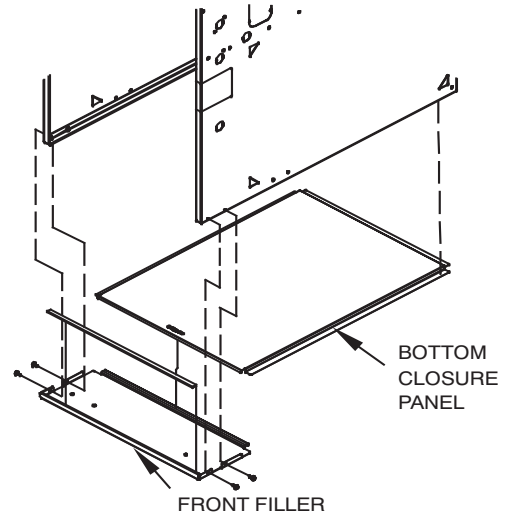


Fig. 6 – Removing Non-Condensing Bottom Closure Panel L11F004

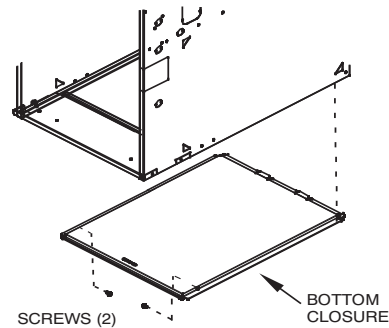

Representative drawing. Models may vary.

1. Lay furnace on the back or side
2. Remove the two (2) screws that secure the bottom closure panel to the furnace casing and remove the panel

Fig. 7 – Removing Condensing Bottom Closure Panel A170123

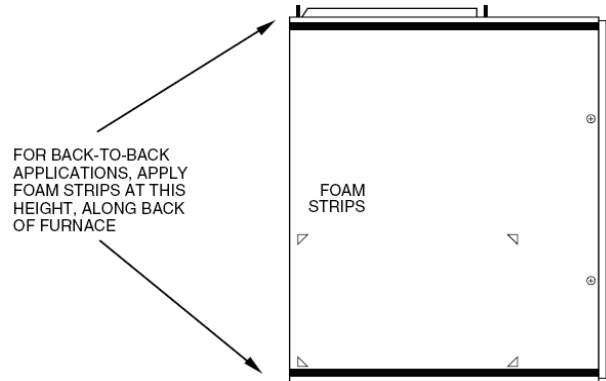


Fig. 8 – Location of Foam Strips A170124

UPFLOW INSTALLATION

NOTE: When the furnaces are positioned back-to-back, the external extension harness cannot be used on the same side of the furnace that the return air ducts connect to. Locate harness on opposite side of furnace where return air is used.

1. Remove the 7/8 in. (22 mm) knockout in the mating side of each furnace blower compartment. Remove one right side knockout

from one furnace and the left side knockout from the other furnace. The furnace with the right side knockout removed will become the Main furnace in side-by-side applications. In back-to-back applications, either furnace can be the Main furnace.

2. For side-by-side applications insert one snap bushing through each 7/8 in. (22 mm) knockout.
3. Position furnaces against each other on common return-air plenum, see Fig. 4. For side-by-side installations, adjust and shim each furnace to align 7/8 in. (22 mm) knockout in blower compartment, which will be used for wire routing between furnaces.
4. Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below discharge air flange, from inside top of discharge opening and through both furnaces, see Fig. 9.
5. Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
6. Bend or remove flanges on supply air outlet of furnace as shown in furnace installation instructions.
7. Install indoor coil(s) and/or common supply plenum on supply air outlet of furnace. Seal all duct connections to furnace with code approved tape or sealant.
8. Connect common return plenum on furnace. Seal all duct connections to furnace with code approved tape or sealant.

cased indoor coil is used, install the furnaces on accessory combustible floor bases. For side-by-side installations, adjust and shim each furnace to align unused 7/8 in. (22 mm) knockout in blower compartment, which will be used for wire routing between furnaces.

5. Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below return air flange, from inside top of return air opening and through both furnaces, see Fig. 10.
6. Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
7. Connect common return plenum to furnaces. Seal all duct connections to furnace with code approved tape or sealant.

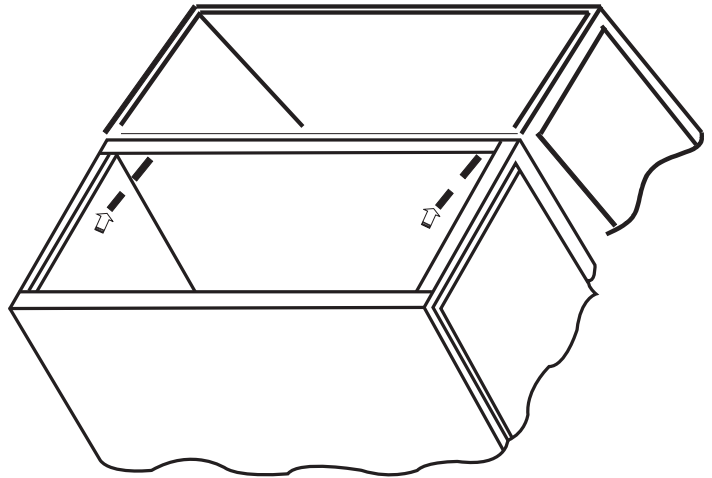


Fig. 10 – Attaching Furnaces Together at Return Air Opening A02219A

! WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in unit damage, fire, personal injury or death.

DO NOT use the back of the furnace for return-air duct connections as limit cycling and unsafe operation will occur.

9. Refer to the furnace installation instructions to complete the remaining furnace installation.

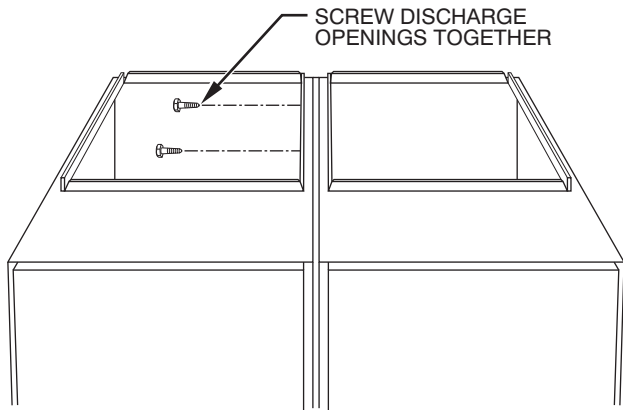


Fig. 9 – Furnaces Together at Discharge Opening A93539

DOWNFLOW INSTALLATIONS

1. Remove the 7/8 in. (22 mm) knockout in the mating side of each furnace blower compartment. Remove one right side knockout from one furnace and the left side knockout from the other furnace. The furnace with the right side knockout removed will become the Main furnace in side-by-side applications. In back-to-back applications, either furnace can be the Main furnace.
2. Insert one snap bushing through each 7/8 in. (22 mm) knockout.
3. Bend or remove flanges on supply air outlet of furnace as shown in furnace installation instructions
4. Position furnaces in the downflow position on the entering air-side of indoor coils and or common supply plenum. If no approved

! WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in unit damage, fire, personal injury or death.

DO NOT use the back or side of the furnace for return-air duct connections as limit cycling and unsafe operation will occur.

8. Follow individual furnace installation instructions for downflow applications. This includes, but not limited to: condensate trap, condensate/inducer housing tubing, pressure switch tubing venting and electrical connections.
9. Go to Connect Electrical Components

**HORIZONTAL INSTALLATION
GENERAL**

When twinning furnaces in the horizontal position, consideration must be made to the type of building construction. Attic floors should be constructed to support normal live and dead loads of the furnaces and the person(s) servicing them. Trusses, wood and metal are engineered for specific applications, and may not support the weight of two (2) furnaces suspended from the top chords or by the bottom chords of the trusses. Long horizontals spans may flex or sag, resulting in damage to the building. Contact the truss manufacturer for additional design and engineering assistance. Do not suspend condensing furnaces with straps or suspend furnaces from roof decking.

On condensing furnaces, allow a minimum of 2 in. (51 mm) clearance below the unit for condensate drain connections.

Attic Platform Back-to-Back Installations - Non-Condensing and Condensing Furnaces

- Construct a platform from 3/4 in. (19 mm) (nominal plywood), extending out 30 inches (762 mm) from the front of each furnace, see Fig. 11 and Fig. 12.
- Maintain all clearances to combustibles per the furnace Installation, Start-up and Operating Instructions.
- Follow all additional building codes.
- Long truss spans may require additional support along the bottom chord of the truss. Consult the truss manufacturer's guidelines for engineering assistance.
- Long rafter or attic joist spans may require additional support along the bottom of the rafter or joist. Consult local or regional building codes for design and loading requirements.
- Lay both furnaces in the required orientation with the knockouts in the blower compartment facing upward.
- Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below return air flange, from inside top of return air opening and through both furnaces, see Fig. 10.
- Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
- Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below discharge air flange, from inside top of discharge opening and through both furnaces, see Fig. 9.
- Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
- Install indoor coil(s) and/or common supply plenum on supply air outlet of furnace. Seal all duct connections to furnace with code approved tape or sealant.
- Connect common return plenum to furnaces. Seal all duct connections to furnace with code approved tape or sealant.
- Follow individual furnace installation instructions for horizontal applications. This includes, but not limited to: condensate trap, condensate/inducer housing tubing, pressure switch tubing venting and electrical connections.
- Go to Connect Electrical Components.
- Drill four 5/16 in. (8 mm) holes through the angle iron and through each side of the casing for the suspension rods as shown in Fig. 14.
- Lay furnaces back-to-back on a flat surface with 7/8 in. knock-outs facing upward.
- Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below return air flange, from inside top of return air opening and through both furnaces, see Fig. 10.
- Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
- Drill two 1/8 in. (3 mm) holes, approximately 1 in. (25 mm) below discharge air flange, from inside top of discharge opening and through both furnaces, see Fig. 9.
- Drive one factory-supplied No. 6 x 3/4 in. (19 mm) LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
- Insert the 1/4 in. (6 mm) threaded rod through each hole in the furnace and through the angle iron. Secure the threaded rod to the angle iron with a washer, lock washer and nut.
- To prevent the rod from falling out of the furnace, install a washer, lock washer and nut on portion of the threaded rod above the furnace.
- Raise and suspend the furnaces using the appropriate lift and secure the threaded rod with the appropriate field-supplied hardware. Use locking hardware such as lock washers and jamb nuts to prevent nuts or bolts from loosening.
- Install indoor coil(s) and/or common supply plenum on supply air outlet of furnace. Seal all duct connections to furnace with code approved tape or sealant.
- Connect common return plenum to furnaces. Seal all duct connections to furnace with code approved tape or sealant.
- Follow individual furnace installation instructions for horizontal applications. This includes, but not limited to: condensate trap, condensate/inducer housing tubing pressure switch tubing venting and electrical connections.
- Go to Connect Electrical Components.

WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in unit damage, fire, personal injury or death.

DO NOT use the back or side of the furnace for return-air duct connections as limit cycling and unsafe operation will occur.

Horizontal Suspended Installation - Condensing Models

- Furnaces may be suspended using two (2) pieces of 1-1/2 in. x 1-1/2 in. x 1/4 in. (38 mm x 38 mm x 6 mm) thick cold rolled angle iron underneath each furnace and four (4) 3/8 in. (10 mm) diameter threaded rods. Angle iron must be positioned as shown in Fig. 14.
- Unistrut or similar material may be used, provided that the furnaces do not sag in the middle or bend or twist at the support ends. The support material must be secured to the bottom of each furnace in a manner similar to securing angle iron to the furnace.
- Each piece of angle iron must be secured to the bottom of each furnace with at least two (2) #8 x 3/4 in. (19 mm) sheet metal screws.

WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in unit damage, fire, personal injury or death.

DO NOT use the back or side of the furnace for return-air duct connections as limit cycling and unsafe operation will occur.

Horizontal Suspended Installation - Non-Condensing Models

- Furnaces may be suspended using two (2) pieces of 1-1/2 in. x 1-1/4-in x 1/4 underneath the furnaces and four (4) 3/8 in. diameter threaded rods. Angle iron must be positioned as shown in Fig. 15.
- Allow for at least 9 inches (229 mm) in front of each door for door removal.
- Each piece of angle iron must be secured to the bottom of each furnace with at least two (2) #8 x 3/4 in. sheet metal screws.
- Maintain all clearances to combustibles per the furnace Installation, Start-up and Operating Instructions.
- Unistrut or similar material may be used, provided that the furnaces do not sag in the middle or bend or twist at the support ends. The support material must be secured to the bottom of each furnace in a manner similar to securing angle iron to the furnace.
- For All Horizontal applications:
Return air can only be connected to bottom opening of furnace. A

common return air plenum is required for proper auxiliary limit switch operation.

7. Apply two factory-supplied foam strips to the back of each furnace. Locate strips equal distance from top and bottom as shown in [Fig. 8](#). Trim off excess material.
8. Determine which side of furnace will be used to route external extension harness. Remove 7/8 in. diameter accessory hole knockouts in blower compartment side selected to attach harness to, see [Fig. 3](#).
9. Position furnaces back-to-back on attic platform or suspended supports. Adjust and shim each furnace to align both furnaces. Follow all clearance to combustible material.
10. If furnaces are installed closer than 12 inches above a deck made from combustible material, provide rollout protection as shown in the furnace installation instructions. The bottom closure pan may be used for this purpose.

NOTE: DO NOT lay furnace down flat on the side that external extension harness is installed. Raise furnace up a minimum of 1-1/2 inches (38 mm) above deck so harness does not rub on casing or deck.

11. Drill two 1/8 in. holes, approximately 1 in. (25 mm) below discharge flange, from inside top of discharge opening and through both furnaces, see [Fig. 9](#). Drill two 1/8 in. holes, approximately 1 in. (25 mm) below return air flange, from inside top of return air opening and through both furnaces. (Use [Fig. 10](#) as an example).
12. Drive one factory-supplied No. 6 x 3/4 in. LG screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
13. Connect return- and supply-air ducts to furnaces. Seal duct connections to prevent air leakage.
14. Move 115V junction box JB in either furnace from left-hand side to right-hand side if required. Refer to furnace installation instructions for complete details.
15. Go to Section 3, Connect Electrical Components.

Horizontal, Stacked Together - for Non-Condensing ONLY

For attic installations on a platform, see [Fig. 13](#):


1. Construct a platform from 3/4 in. (nominal) plywood, extending out 30 inches (762 mm) from the front of each furnace.
2. Maintain all clearances to combustibles per the furnace Installation, Start-up and Operating Instructions.
3. Follow all additional building codes.
4. Long truss spans may require additional support along the bottom chord of the truss. Consult the truss manufacturer's guidelines for engineering assistance.
5. Long rafter or attic joist spans may require additional support along the bottom of the rafter or joist. Consult local or regional building codes for design and loading requirements.

For suspended installations, see [Fig. 16](#). (Not recommended for wood trusses unless approved by the truss manufacturer or other approved engineering methods):

1. Furnaces may be suspended using two pieces of 1-1/2 in. x 1-1/2 in. x 1/4 in. thick cold rolled angle iron underneath the furnaces and four 3/8 in. diameter threaded rods.
2. Allow for at least 9 inches (229 mm) in front of each door for door removal.
3. Each piece of angle iron must be secured to the bottom of each furnace with at least two #8 x 3/4 in. sheet metal screws.
4. Maintain all clearances to combustibles per the furnace Installation, Start-up and Operating Instructions.
5. Unistrut or similar material may be used, provided that the furnaces do not sag in the middle or bend or twist at the support ends. The


support material must be secured to the bottom of each furnace in a manner similar to securing angle iron to the furnace.

6. For all horizontal applications: Return air can only be connected to bottom opening of furnace.
7. Apply two factory-supplied foam strips to mating side of each furnace. Locate strips equal distance from top and bottom as shown in [Fig. 8](#).
8. Remove 7/8 in. diameter accessory hole knockouts in blower compartment from mating sides of furnaces.
9. Insert a plastic snap bushing through the 7/8 in. knockouts from the outside of the casing.
10. Position furnaces on top of each other on platform or suspended supports. Adjust and shim each furnace to align 7/8 in. diameter holes in both furnaces.
11. Drill two 1/8 in. holes, approximately 1 in. (25 mm) below discharge flange, from inside top of discharge opening and through both furnaces, see [Fig. 9](#). Drill two 1/8 in. holes, approximately 1 in. (25 mm) above return air opening flange, from inside blower compartment and through both furnaces, see [Fig. 10](#).
12. Drive one factory-supplied screw through each hole and tighten until furnaces are secure and foam strips have sealed gap between furnaces.
13. Connect return- and supply-air ducts to furnaces. Seal duct connections to prevent air leakage.
14. Move 115V junction box JB in RH furnace (as viewed from the upflow position) from left-hand side to right-hand side. Refer to furnace installation instructions for complete details.
15. Go to Section 3, Connect Electrical Components.

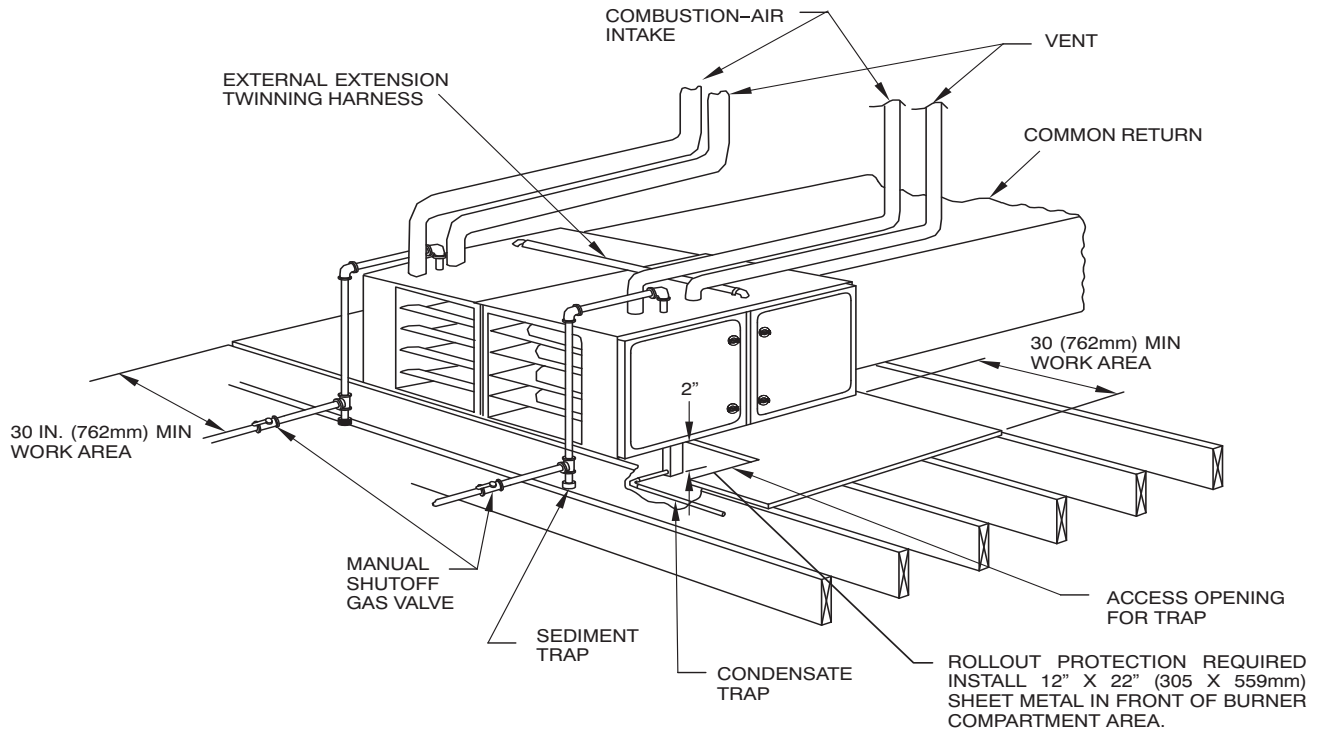


Representative drawing only, some models may vary in appearance.
Fig. 11 – Platform Installation of Condensing Furnace

L11F0101

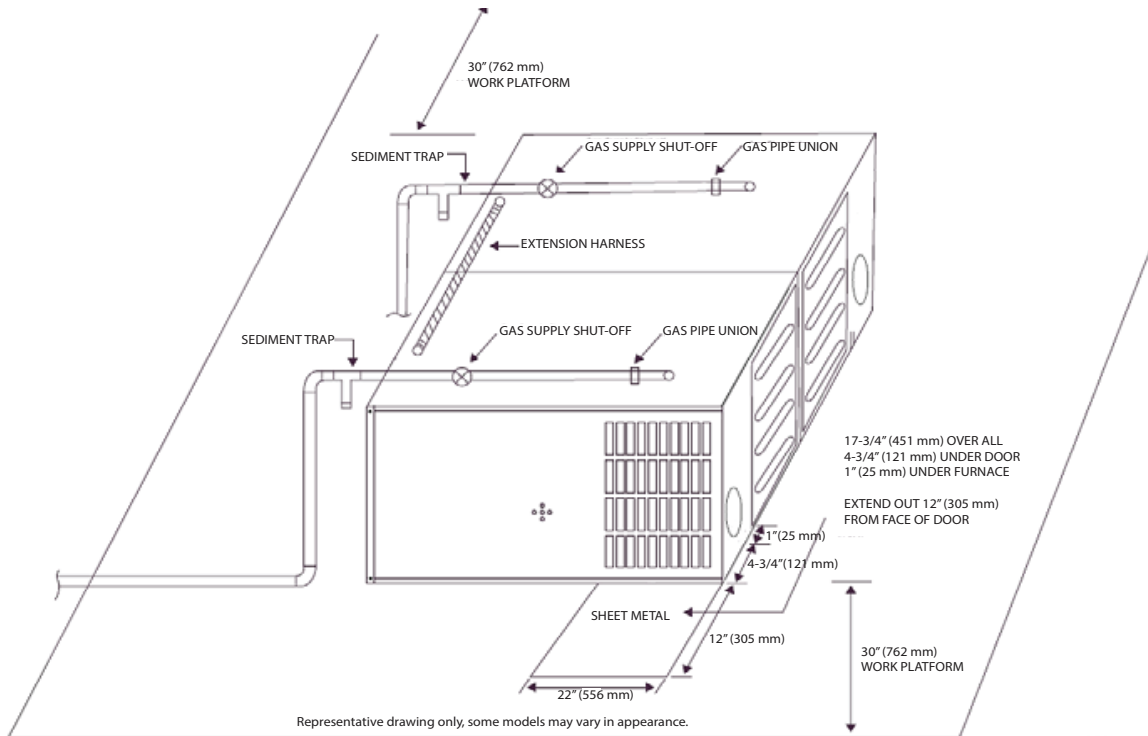


Representative drawing only, some models may vary in appearance.
Fig. 12 – Platform Installation of Non-Condensing Furnace

L14F013

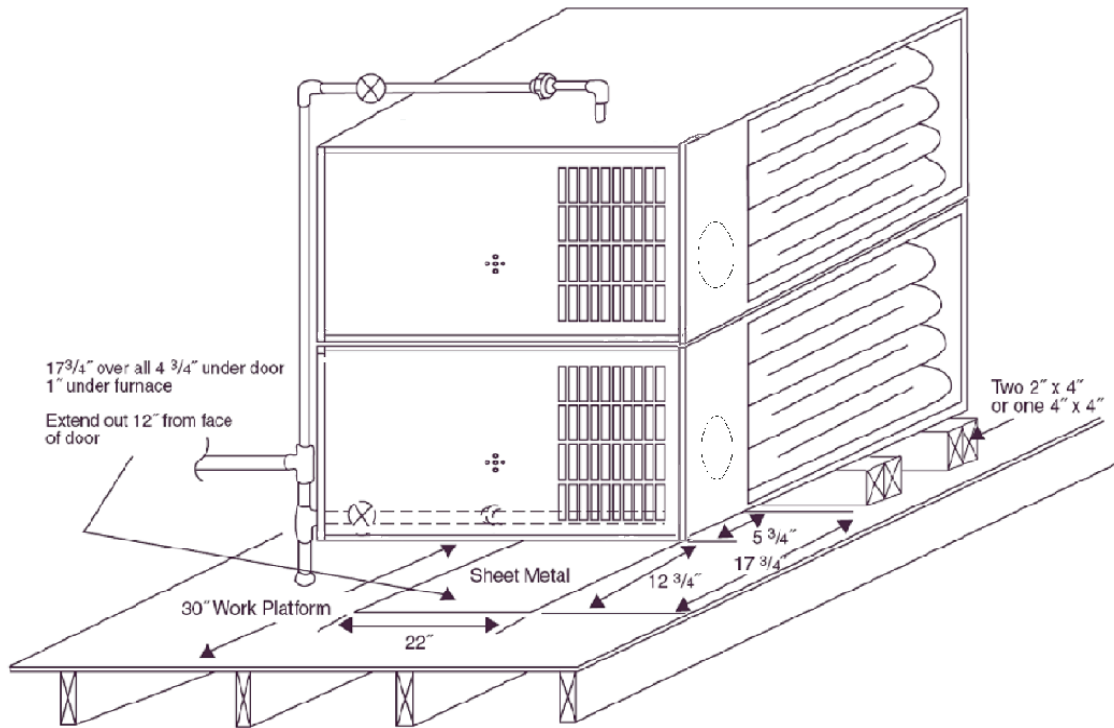


Representative drawing only, some models may vary in appearance.
Fig. 13 – Platform Installation of Stacked Non-Condensing Furnaces

A10277

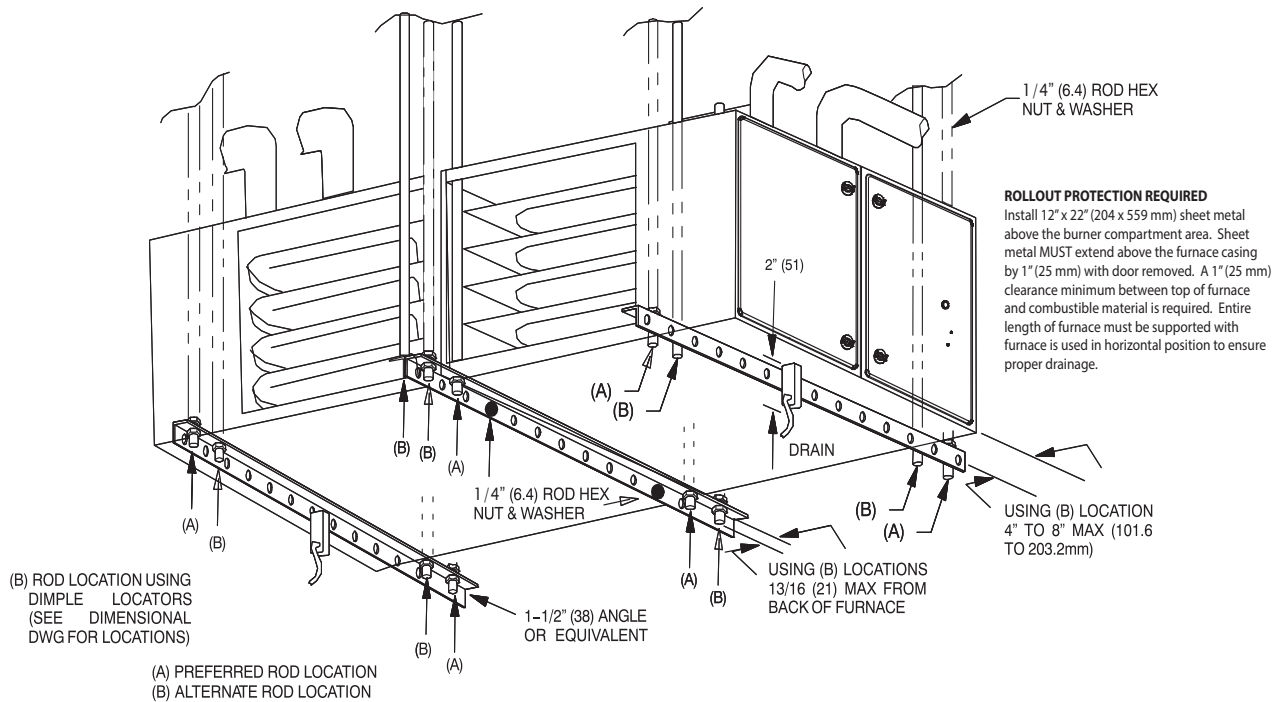


Representative drawing only, some models may vary in appearance.
Fig. 14 – Suspended Installation of a Condensing Furnace

L14F014A

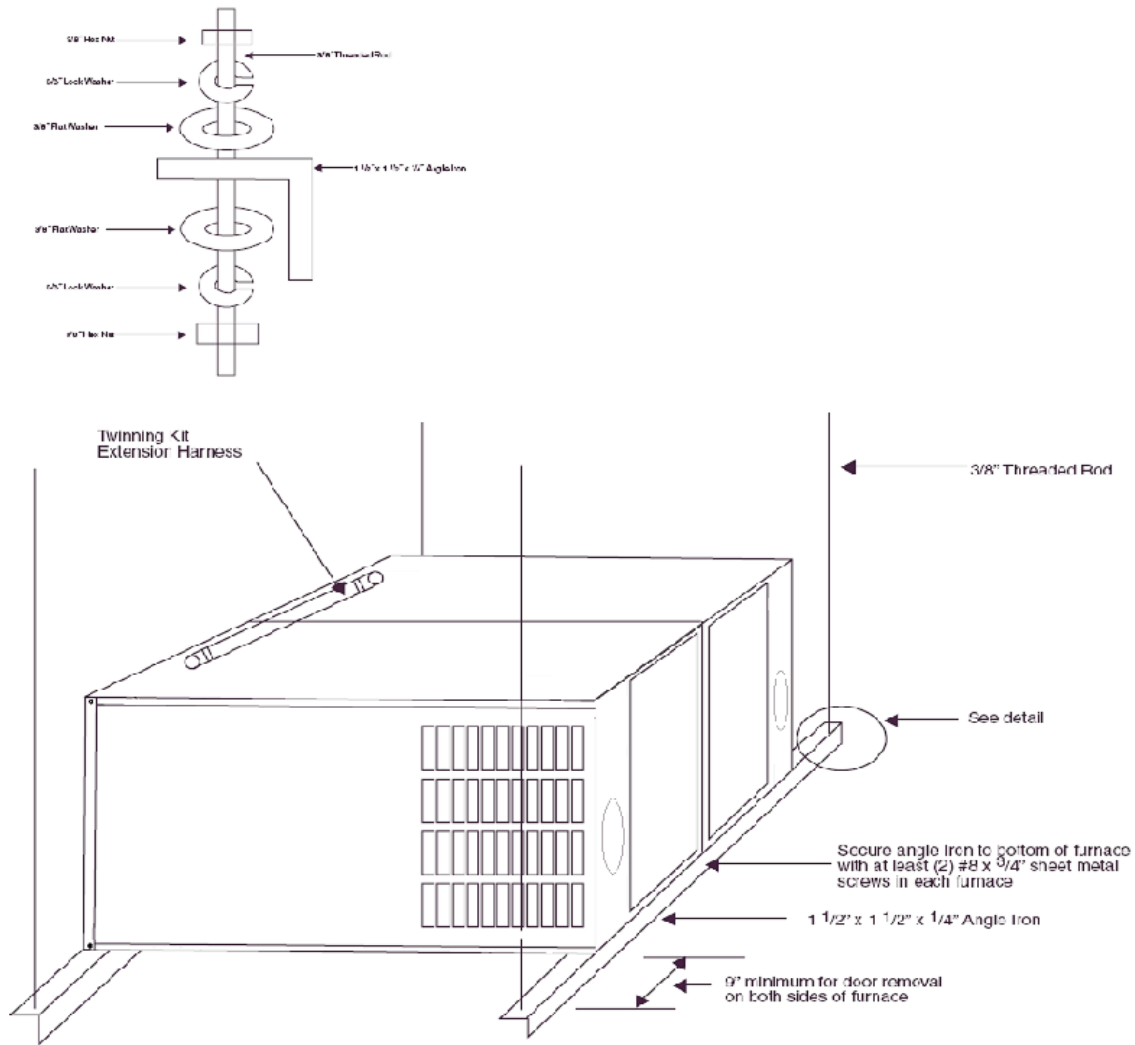

Representative drawing only, some models may vary in appearance.
Fig. 15 – Suspended Installation of a Non-Condensing Furnace

A10276

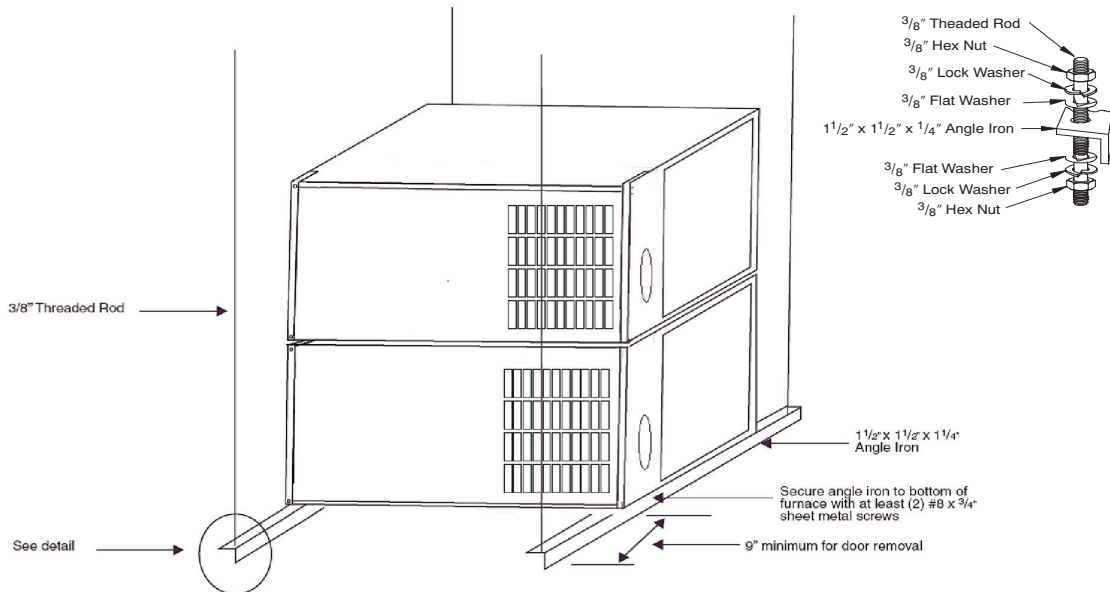

Representative drawing only, some models may vary in appearance.
Fig. 16 – Suspended Installation of Stacked Non-Condensing Furnaces

A10278

SECTION 3

CONNECT ELECTRICAL COMPONENTS

WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in fire, personal injury or death.

Make no connections between the R 24-VAC connection in one furnace and the R 24-VAC connection in other furnace.

See Electrostatic Discharge Precaution Section.

NOTE: All electrical power connections must be made through exposed outer side of each furnace. Do not common connect any connection other than supply- and return-air ducts.

- Side-by-side furnaces in the upflow and downflow position, the LH furnace line voltage connections must be made on the left side of the furnace. The RH furnace line voltage connections must be made on the right hand side of the casing.
- Horizontal back-to-back installations, electrical connections should be made on the sides of the furnace facing up.
- Upflow and downflow back-to-back installations can use either side of the furnace for line voltage electrical connections.

115-VAC Connections to Furnace

Each furnace shall be connected to its own 115-VAC power supply. The twinning kit installation interconnects the furnaces, allowing them to operate as a single furnace. The L1 (black) connection to each furnace must be connected to circuit breakers connected to the same service panel 115-VAC phase leg.

WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

NOTE: If the furnaces are not connected to the same phase leg of the electrical power supply, the furnaces will not operate properly.

- On single-phase (residential) systems, each furnace circuit breaker should be located directly across from each other in service panel, or each furnace circuit breaker should be located on the same side of service panel, but must skip one space to be connected to the same leg of the single-phase power supply.
- On 3-phase (commercial) systems, each furnace circuit breaker should be located directly across from each other in service panel, or each furnace circuit breaker should be located on the same side of service panel, but must skip two spaces to be connected to the same leg of the 3-phase power supply.

The proper 115-VAC phasing of furnace connections permits 24-VAC transformer phasing as described below.

Phasing of the connected 24-VAC transformer secondary circuits can be determined with the LED status of both furnaces.

See furnace Installation, Start-Up, and Operating Instructions and status code labels on blower doors. The furnaces' transformers' black leads should be connected to L1 connectors and white leads to L2 connectors on controls. If one or both LEDs are rapidly flashing after installation of

this twinning kit, disconnect the ABCD terminal of LH furnace and observe LED at each furnace.

To verify that the furnaces are in phase, check from Main furnace L1 to Secondary furnace L1 with a voltmeter. If the furnaces are in phase, the voltage potential between both furnaces will be ZERO.

If:

- Both LEDs are on continuously: System phasing is okay.
- One or both LEDs are rapidly flashing:
 - Line voltage polarity is reversed.
 - Furnace(s) are not grounded
 - Transformer polarity is reversed.
- One LED is off, one LED is on continuously:
 - The 24-VAC circuit is inoperative on furnace with LED light off.
 - Check transformers, auxiliary limits, and door switches in both furnaces and correct problem.
 - Reconnect lead at ABCD terminal of LH furnace and observe LED at each furnace. The LEDs will glow steady for proper phasing.

TWINNING KIT HARNESS CONNECTIONS

NOTE: There are three harnesses included in this kit. If the furnaces are side-by-side, only the Main and Secondary harnesses are required. If the furnaces are installed back-to-back, the extension harness included in the kit must be used.

Extension harness is shown in [Fig. 17](#).

To install the Extension harness on back-to-back furnace, follow the steps in [Fig. 17](#). For other orientations, omit this step.

The Main furnace end of the harness is identified by a white label marked "MAIN" on the label near the end of the extension harness. The Secondary furnace end of the harness is identified by a white label marked "Secondary" on the label near the end of the extension harness.

1. Verify the knockouts are removed from the same side of each furnace blower compartment.
2. Remove the locknut from each end of the 1/2 in. BX connector
3. Route the 4-pin plug, the 2-pin plug, and three wires of the Main furnace end of the Extension harness one at a time through the knockout into the Main furnace blower compartment.
4. Insert the plugs and wires through the locknut of the 1/2 in. BX connector and tighten the locknut on the BX connector.
5. Route the 4-pin plug, the 2-pin plug, and three wires of the Secondary furnace end of the Extension harness one at a time through the knockout into the Secondary furnace blower compartment.
6. Insert the plugs and wires through the locknut of the 1/2 in. BX connector and tighten the locknut on the BX connector.

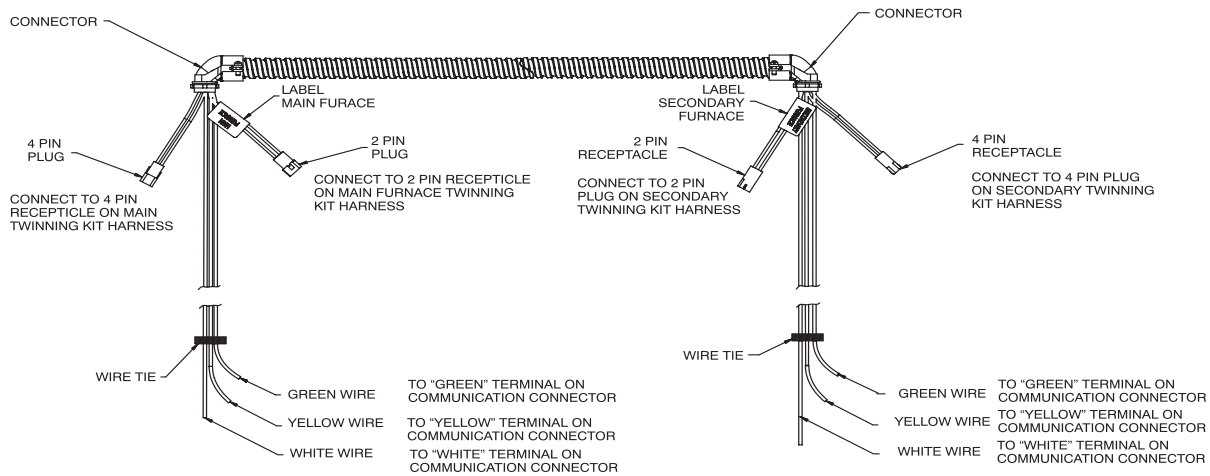


Fig. 17 – Extension Harness

L14F011

Install Main Twinning Kit Harness

NOTE: If the furnaces are installed back-to-back, verify which furnace is the Main furnace before installing Twinning Kit Harnesses. Refer to the tag on the ends of the Extension harness used for back-to-back installations.

The Main Twinning Kit harness is identified by a white label marked “MAIN” on the label near the two pin receptacle of the Main Auxiliary Limit Switch (ALS-M) leads. The Twinning Kit Relay (TKR) and Main Auxiliary Limit Switch (ALS-M) mount to the blower housing as shown in Fig. 19. The individual leads are labeled on the harness, see Fig. 21. Refer to Fig. 20 for location of control board components. Connect the Main Twinning Kit harness to furnace control board as follows:

1. Remove the Red transformer lead from the “SEC-1” terminal on the Main furnace control board.
2. Connect the Red transformer lead removed from the Main furnace control board to the Red wire labeled “TRANS” on the Main Twinning Kit harness.
3. Connect the Orange wire labeled “SEC 1” to the “SEC-1” terminal on the Main furnace control board.
4. Connect the Black wire with the fork terminal labeled “C” on the TKR to the “COM/24V” terminal on the thermostat strip of the Main furnace control board.
5. Install the Twinning Kit Relay, (TKR)
 - a. For single-stage operation of single-stage furnace connect the white wire with the fork terminal labeled “W” on the TKR to the “W” terminal on the thermostat strip of the Main furnace control board, see Fig. 31.
 - b. For staged operation of single-stage furnaces with a two-stage thermostat, remove the fork terminal from the terminal on the TKR and discard. The thermostat W2 lead is spliced into this wire. Refer to Fig. 30 and Thermostat Connections section for details.
 - c. For operation of two-stage furnaces with a single-stage or two-stage thermostat, connect the white wire with the fork terminal on the TKR to the “W/W1” terminal on the thermostat strip of the Main furnace control board. Refer to Fig. 29 and Thermostat Connections section for details.
6. If using the extension harness, connect the 2-pin and 4-pin plugs of the main twinning harness to the 2-pin and 4-pin plugs of the extension harness. If the extension harness is not being used, go to “Install Secondary Twinning Harness.”

Install Secondary Twinning Kit Harness

The Secondary Twinning Kit harness is identified by a white label marked “SECONDARY” on the label near the two pin plug of the Auxiliary Limit Switch (ALS-S) leads. The Door Interlock Relay (ILR)

and Secondary Auxiliary Limit Switch (ALS-M) mount to the blower housing as shown in Fig. 19. The individual leads are labeled on the harness, see Fig. 22. Connect the Secondary Twinning Kit harness to furnace control board as follows:

1. Connect the Black wire with the fork terminal labeled “C SECONDARY” to the “COM/24V” terminal on the thermostat strip of the Secondary furnace control board.
2. Connect the White wire with the fork terminal labeled “W SECONDARY” to the “W” or “W/W1” terminal on the thermostat strip of the Secondary furnace control board.
3. Connect the Red wire with the fork terminal labeled “R SECONDARY” to the “R” terminal on the thermostat strip of the Secondary furnace control board.
4. Remove the Red transformer lead from the “SEC-1” terminal on the Secondary furnace control board.
5. Connect the Red wire with the piggy-back terminal labeled “SEC-1” on the ILR to the “SEC-1” terminal on the Secondary furnace control board.
6. Connect the Red transformer lead to the piggy back terminal of the Red wire connected to the “SEC-1” terminal on the Secondary furnace control board.
7. Remove the Blue transformer lead from the “SEC-2” terminal on the Secondary furnace control board.
8. Connect the Black wire with the piggy-back terminal labeled “C” on the ILR to the “SEC-2” terminal on the Secondary furnace control board.
9. Connect the Blue transformer lead to the piggy back terminal of the Black wire connected to the “SEC-2” terminal on the Secondary furnace control board.
10. If using the extension harness, connect the 2-pin and 4-pin plugs of the secondary twinning kit harness to the 2-pin and 4-pin plugs of the extension harness. If the extension harness is not being used, connect the 2-pin and 4-pin plugs of the secondary twinning kit harness to the 2-pin and 4-pin plugs of the main twinning kit harness.

Install Communication (PL7) Connector

There are two Communication Connectors that provide communication from the Main furnace to the Secondary furnace.

In side-by-side installations, remove the green yellow and white wires from the extension harness. Route the three wires through the snap bushing in the blower compartment of the furnaces.

Connect the wires to each PL7 plug as follows:

1. Green to Green on the Communication Connector.
2. Yellow to Yellow on the Communication Connector.
3. White to White on the Communication Connector.

4. Red on the Communication Connector is not used.

Insert the communication Connector in the PL7 receptacle on each of the furnace controls, see Fig. 20.

In back-to-back installation, the Extension harness should have already been installed. Locate the green yellow, and white wires from the extension harness and connect the wires to the Communication Connector as shown above.


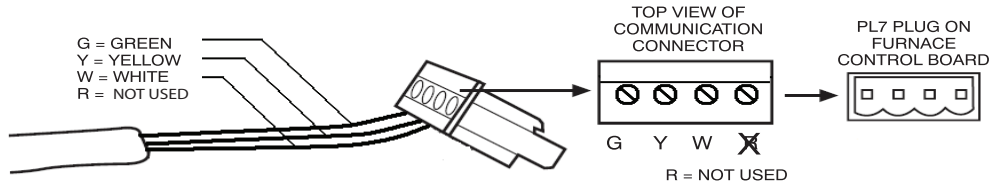


Fig. 18 – Twinning Communication Connection

L14F006A

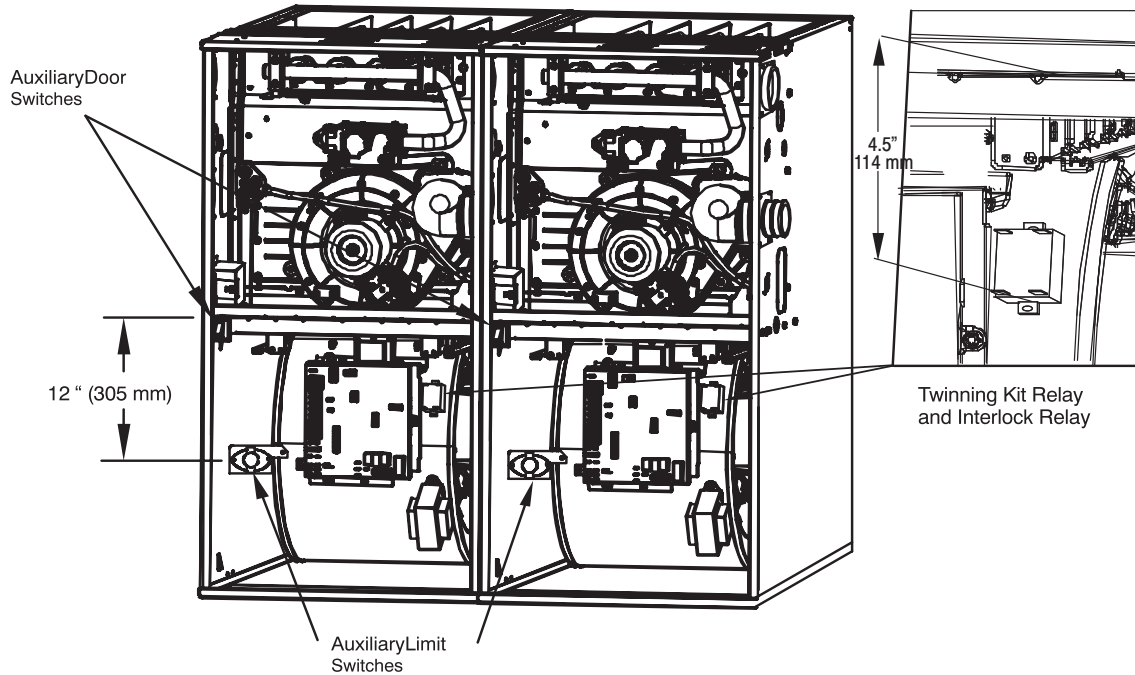


Representative drawing only, some models may vary in appearance.

L12F009

NOTE:

- Mount Twinning Kit Relay (TKR) and Interlock Relay (ILR) on furnace blower housing as shown.
- Twinning Kit Relay (TKR) mounts on LH Furnace blower housing
- Interlock Relay (ILR) mounts on RH furnace blower housing.
- Locations for Twinning Kit Relay (TKR), Interlock Relay (ILR) and Auxiliary Limits (ALS-M & ALS-S) same for mid-efficiency furnaces.

Fig. 19 – Mounting Twinning Kit Relay

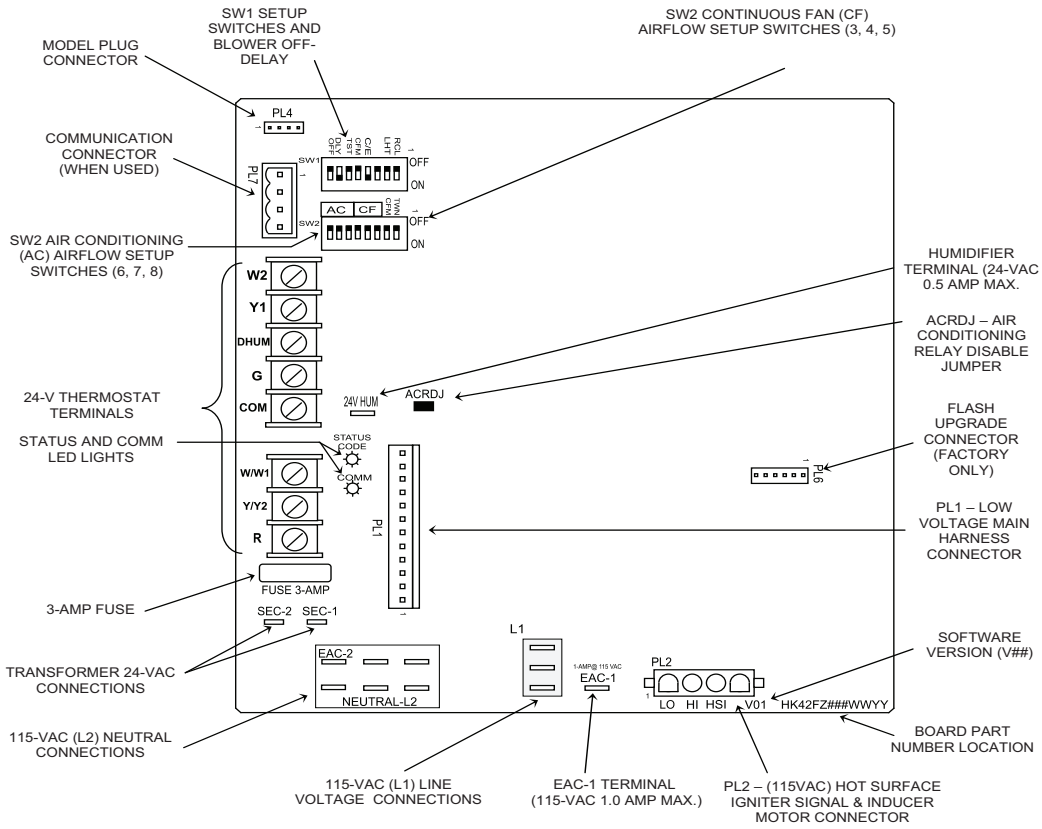

Representative drawing only, some models may vary in appearance.
Fig. 20 – Example of Variable Speed Furnace Control

A190044

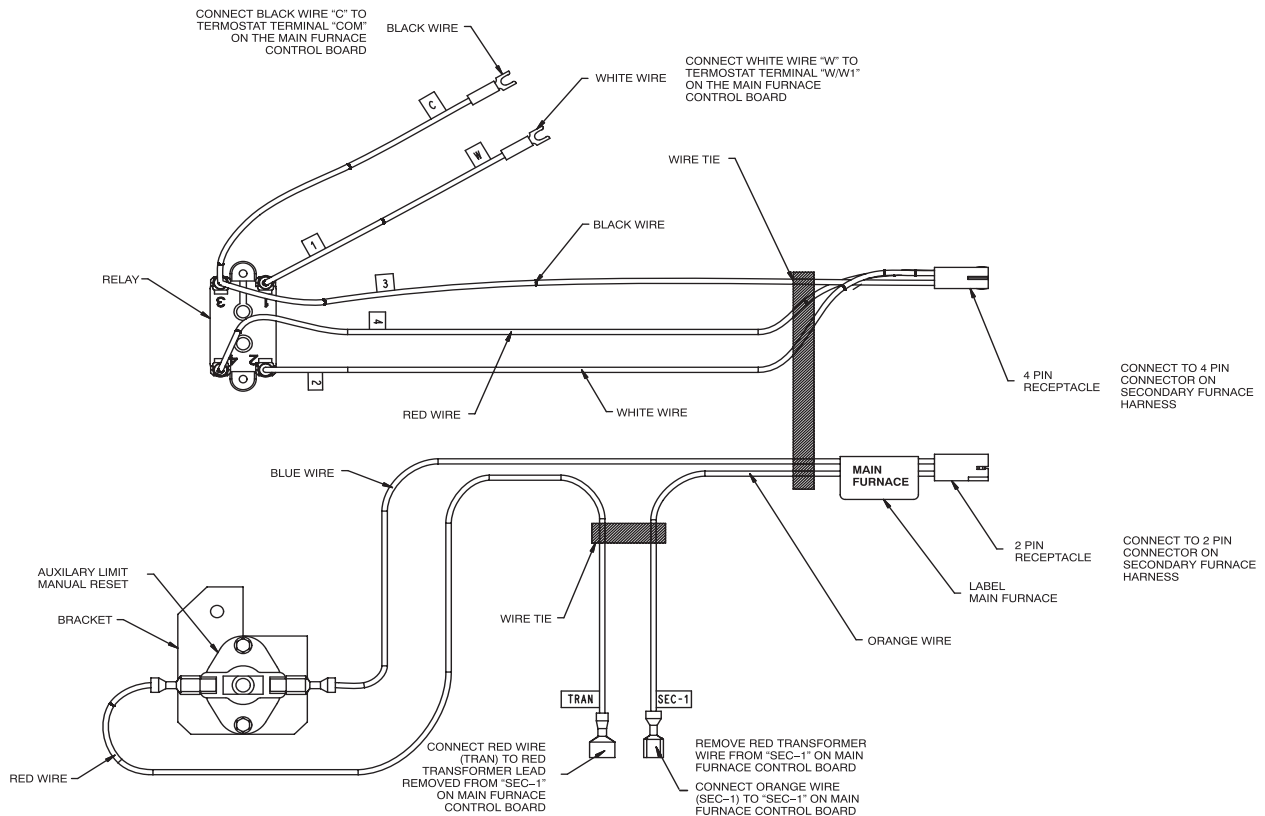


Fig. 21 – Main Harness

L14F008

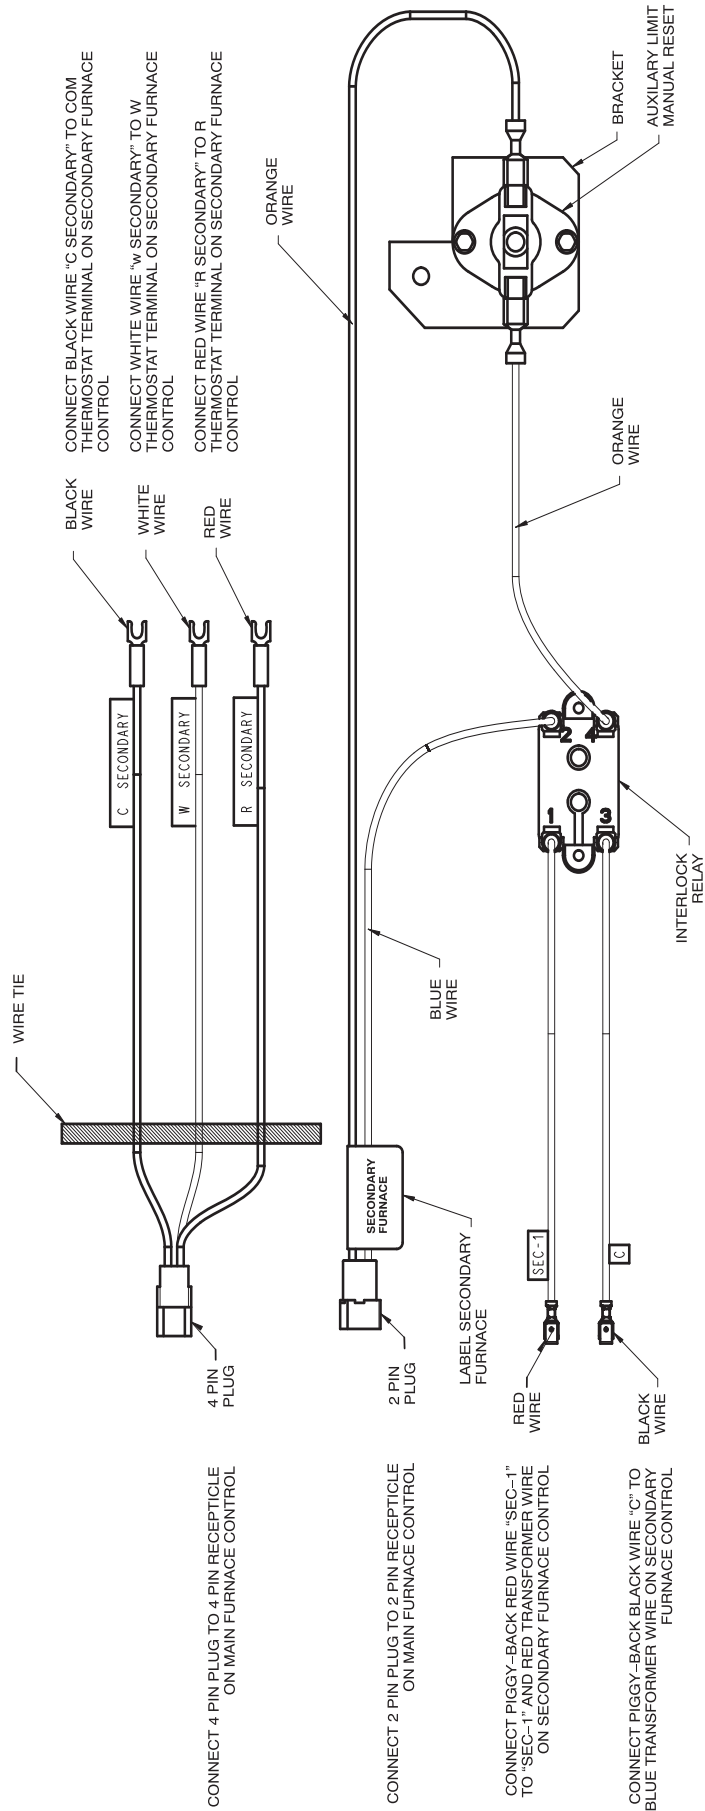


Fig. 22 – Secondary Harness

L14F007

CONNECT ELECTRICAL COMPONENTS - COOLING

! WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

NOTE: Cooling units used with twinned furnaces **MUST** be single-stage A/C units. **HEAT PUMPS CANNOT BE TWINNED** with gas furnaces.

When installing twinned outdoor units with twinned gas furnaces, it is necessary to use field-supplied 24-VAC pilot-duty relay(s) and a field-supplied 24-VAC/115-VAC transformer as shown in the individual wiring diagrams to prevent overloading furnace 24-VAC/115-VAC transformer. Transformer VA rating must be able to handle the load imposed on it by the outdoor unit contactor(s).

1. Connect the L1 lead of the field-supplied transformer line voltage lead to L1 on Main furnace control board.
2. Connect the Neutral lead of the field-supplied transformer to an open Neutral terminal on the Main furnace control board.

NOTE: If sufficient room is available in the control box of the outdoor unit, a 24-VAC/240-VAC transformer may be used. Connect line voltage leads of the transformer to the appropriate connection locations on the outdoor unit, Refer to the outdoor unit wiring diagram for specific details.

For Two-Stage A/C Operation with a Two-Stage Thermostat

See Fig. 23

In this configuration, the A/C unit(s) are staged on and run as controlled by the thermostat. It will be necessary to supply two pilot duty relays for staged A/C operation. One A/C unit will be the first stage unit, the other A/C unit will be the second stage unit. Both furnaces come on in high cooling airflow, regardless of A/C staging.

1. Connect one coil terminal of each of the pilot duty relay together.
2. Connect these two terminals to the "COM/24V" of the furnace control board.
3. Select one of the relays to be the relay for first stage cooling. Connect the coil terminal of this relay to the "Y/Y2" terminal of the furnace control board.
4. The other relay is the second stage cooling relay. The coil terminal of this relay will connect to the "Y/Y2" terminal of the thermostat.
5. Connect the R terminal of the field-supplied transformer to the open contact of each pilot duty relay.
6. Connect the other open contact of the first stage cooling relay to the wire for Y terminal of the first stage contactor.
7. Connect the other open contact of the first stage cooling relay to the wire for Y terminal of the second stage contactor.
8. Connect the Common terminal of the contactor(s) to the C terminal of the field supplied transformer.

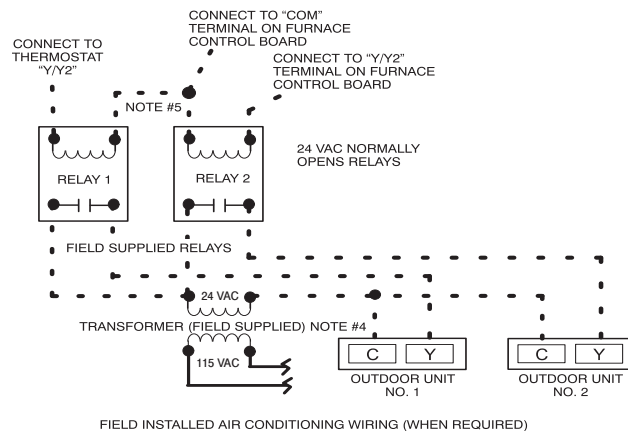


Fig. 23 – Field-Installed A/C Wiring (when required)

L14F004

For Single-Stage A/C Operation with a Single-Stage Thermostat

In this configuration, the A/C unit(s) run as a single unit. It will be necessary to supply a pilot duty relay for A/C operation.

1. Connect one coil terminal of the pilot duty relay to "COM/24V" of the furnace control board.
2. Connect the other coil terminal of this relay to the "Y/Y2" terminal of the furnace control board.
3. Connect the R terminal of the field-supplied transformer to the open contact of the pilot duty relay.
4. Connect the other open contact of the first stage cooling relay to the wire for Y terminal of each outdoor unit contactor.
5. Connect the Common terminal of the contactor(s) to the C terminal of the field supplied transformer.

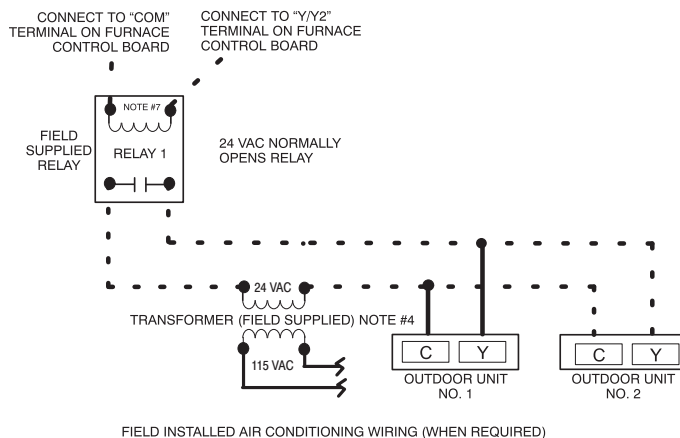


Fig. 24 – Field-Installed A/C Wiring (when required)

L14F005

THERMOSTAT CONNECTIONS

! WARNING

UNIT DAMAGE AND FIRE HAZARD

Failure to follow this warning could result in fire, personal injury or death.

Make no connections between the connector in one furnace and the connector in other furnace.

NOTE: All thermostat connections **MUST** be made at the Main furnace control board. Do not make any thermostat connections to the Secondary furnace control board.

Two-Stage Furnaces with Single-Stage Thermostat (Field Supplied)

See Fig. 29 and Table 4

NOTE: This application allows both two stage furnaces to operate in low heat for first-stage heat mode or both furnaces to operate in high heat for second-stage heat mode as determined by the staging algorithm of the Main furnace control. See furnace Installation, Start-Up, and Operating Instructions for further details on this heating mode.

To operate furnaces in two stage heating mode when a single-stage thermostat controls the staging:

1. Connect thermostat W1 lead to “W/W1” on Main furnace control board.
2. Turn LHT set-up switch on Main furnace control board to “OFF” see Fig. 25.
3. Turn LHT set-up switch on RH control board to “ON.”
4. Connect cooling thermostat lead Y to “Y/Y2” on the Main furnace control board.
5. Connect the G thermostat lead to the “G” terminal on the Main furnace control board.
6. Connect thermostat R lead to “R” terminal on Main furnace control.
7. Connect thermostat C or COM lead to the “COM/24V” terminal on the Main furnace control board.

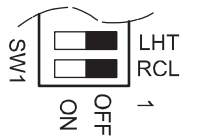
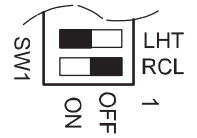

THERMOSTAT TYPE	MAIN (LH) LHT SW1-2	
ONE STAGE THERMOSTAT	OFF	
	SECONDARY (RH) LHT SW1-2	
	ON	

Fig. 25 – Furnace Thermostat Switch L14F009

Two-Stage Furnaces with Two-Stage Thermostat (Field Supplied)

See Fig. 29 and Table 4

To operate furnaces in two stage heating mode when a two-stage thermostat controls the staging:

1. Connect thermostat W1 lead to “W/W1” on Main furnace control board.
2. Connect thermostat W2 to “W2” on Main furnace control board.
3. Turn LHT set-up switch on Main furnace control board to “ON,” see Fig. 26.
4. Turn LHT set-up switch on RH control board to “ON.”
5. Connect first stage cooling thermostat lead Y1 to “Y/Y2” on the Main furnace control board.
6. Connect the second stage cooling thermostat lead Y/Y2 to the pilot duty relay coil for the second stage contactor.
7. Connect the G thermostat lead to the “G” terminal on the Main furnace control board.
8. Connect thermostat R lead to “R” terminal on Main furnace control.
9. Connect thermostat C or COM lead to the “COM/24V” terminal on the Main furnace control board.


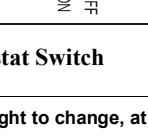

THERMOSTAT TYPE	MAIN (LH) LHT SW1-2	
TWO STAGE THERMOSTAT	ON	
	SECONDARY (RH) LHT SW1-2	
	ON	

Fig. 26 – Furnace Thermostat Switch L14F010

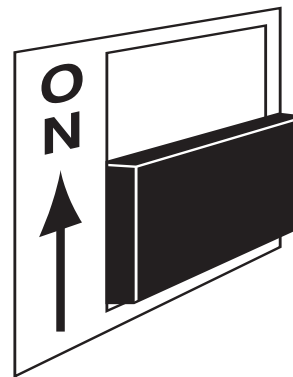


Fig. 27 – Example of Setup Switch in OFF Position A07907

Single-Stage Furnaces with Single-Stage Thermostat (Field Supplied)

See Fig. 31 and Table 3

NOTE: This application allows both furnaces to operate together as a single unit. See furnace Installation, Start-Up, and Operating Instructions for further details on this heating mode.

1. Connect thermostat W lead to “W” on the Main furnace control board.
2. Connect thermostat Y lead to “Y or Y/Y2” on the Main furnace control board.
3. Connect the G thermostat lead to the “G” terminal on the Main furnace control board.
4. Connect thermostat R lead to “R” terminal on Main furnace control.
5. Connect thermostat C or COM lead to the “COM/24V” terminal on the Main furnace control board.

Single-Stage Furnaces and A/C with Two-Stage Thermostat (Field Supplied)

See Fig. 30 and Table 3


NOTE: This application allows single--stage furnaces to operate with one furnace or with both furnaces as determined by a two-stage thermostat.

1. Connect thermostat W1 lead to “W” on the Main furnace control board.
2. Connect thermostat W2 lead to White wire labeled “W” on the twinning kit relay (TKR).
3. Connect first stage cooling thermostat lead Y1 to “Y/Y2” on the Main furnace control board.
4. Connect the second stage cooling thermostat lead Y/Y2 to the pilot duty relay coil for the second stage contactor.
5. Connect the G thermostat lead to the “G” terminal on the Main furnace control board.
6. Connect thermostat R lead to “R” terminal on Main furnace control.
7. Connect thermostat C or COM lead to the “COM/24V” terminal on the Main furnace control board.
8. Connect the G thermostat lead to the “G” terminal on the Main furnace control board.
9. Connect thermostat R lead to “R” terminal on Main furnace control.
10. Connect thermostat C or COM lead to the “COM/24V” terminal on the Main furnace control board.

Address Furnace Control Boards for Twinning

Each furnace control board must be addressed for twinned operation. Addressing is achieved through DIP switches “TWN” located above the AC and CFM Dip switch on SW2.

To address each control board, configure the DIP switches as shown below:

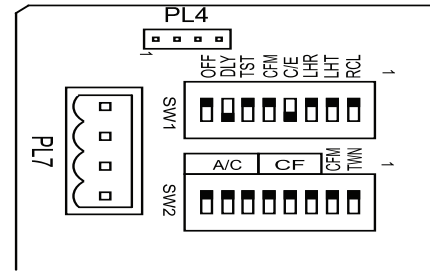

The DIP switch configuration for each furnace is shown at the top of the wiring label, see Fig. 28 and Fig. 29.

Fig. 28 – DIP Switch Configuration

A150026

Table 3 – Single-Stage Furnace Thermostat Connections

Single-Stage Heating and Cooling with Single-Stage Thermostat Using Two Single-Stage Furnaces		
C	C	Transformer Common
R	R	Power from control board to thermostat.
W	W	Starts LH and RH furnaces in heating.
Y	Y/Y2	Energizes accessory cooling relay to start both A/C units for cooling.
G	G	Starts both indoor fans on cooling speed (with Y/Y2 energized).
Dehum*	Dehum*	Reduces airflow in cooling mode to from cooling speed to heating speed when Dehum input is removed.
Two-Stage Heating with Two-Stage Thermostat Using Single-Stage Furnaces		
C	C	Transformer Common
R	R	Power from control board to thermostat.
W1	W	Starts LH furnaces in first stage heating.
W2	None	Thermostat W2 wired directly to RH accessory relay to start RH furnace for second stage heating.
Y 1	Y/Y2	Energizes accessory cooling relay to start LH and A/C unit for first stage cooling and cooling speed blower.
Y2	None	Thermostat Y2 wired directly to RH accessory relay to start RH A/C for second stage cooling*.
G	G	Starts both indoor fans on cooling speed (with Y/Y2 energized).
Dehum*	Dehum*	Reduces airflow in cooling mode to 90% of high cooling airflow when Dehum input is removed

*. Dehum is not available on all thermostats or control boards

Table 4 – Two-Stage Furnace Thermostat Connections

Two-Stage Heating with Single-Stage Thermostat Using Two-Stage Furnaces		
C	C	Transformer Common
R	R	Power from control board to thermostat.
W	W/W1	Starts LH and RH furnaces in low heat or high heat, as determined by LH furnace control board.
Y 1	Y/Y2	Energizes accessory cooling relay to start both A/C units for cooling*.
G	G	Starts both indoor fans on cooling speed (with Y/Y2 energized).
Dehum*	Dehum†	Reduces airflow in cooling mode to 90% of high cooling airflow when Dehum input is removed.
Two-Stage Heating with Two-Stage Thermostat Using Two-Stage Furnaces		
C	C	Transformer Common
R	R	Power from control board to thermostat.
W1	W/W1	Starts both furnaces in low heat for first stage heating.
W2	W2	Starts both furnaces in high heat for second stage heating.
Y 1	Y/Y2	Energizes accessory cooling relay to start LH A/C unit for first stage cooling*.
Y2	None	Thermostat Y2 wired directly to RH accessory relay to start RH A/C for second stage cooling*.
G	G	Starts both indoor fans on cooling speed (with Y/Y2 energized).
Dehum*	Dehum†	Reduces airflow in cooling mode to 90% of high cooling airflow when Dehum input is removed.

*. Do not remove ACRDJ from furnace control boards

†. Dehum is not available on all thermostats or control boards

LHT switches must be in correct configuration

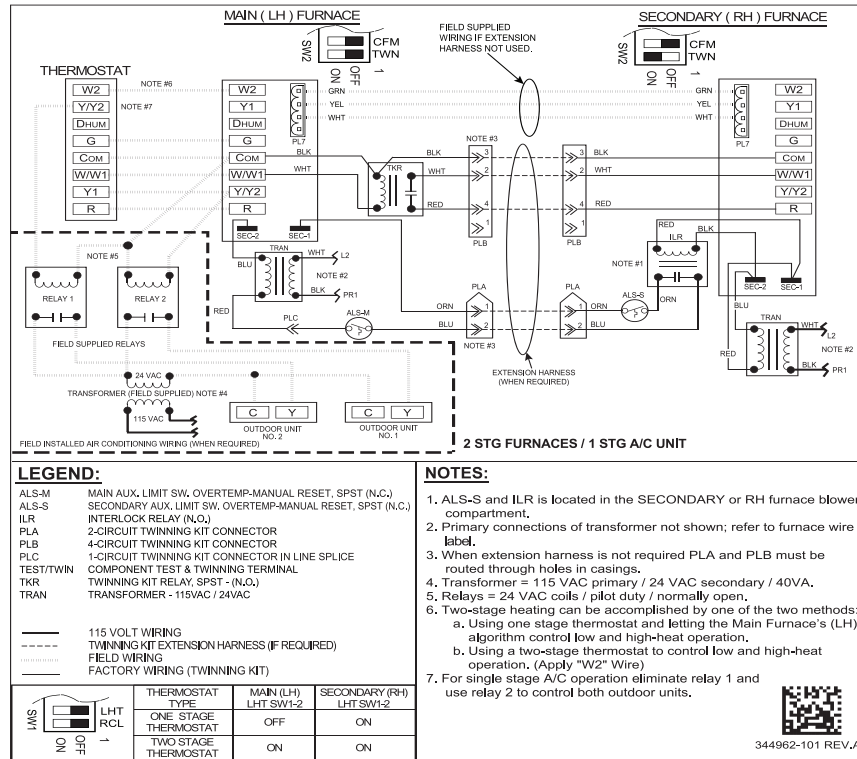


Fig. 29 – Two-Stage Furnace with Single- or Two-Stage Thermostat (Field Supplied)

A190208

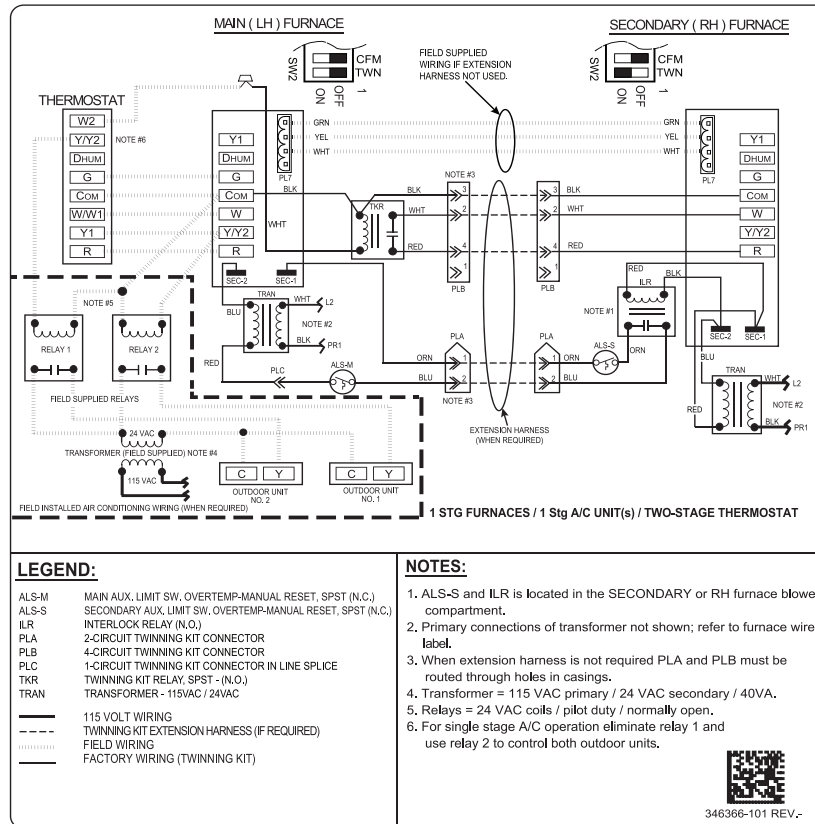


Fig. 30 – Single-Stage Furnace with Two-Stage Thermostat (Field Supplied)

A200260

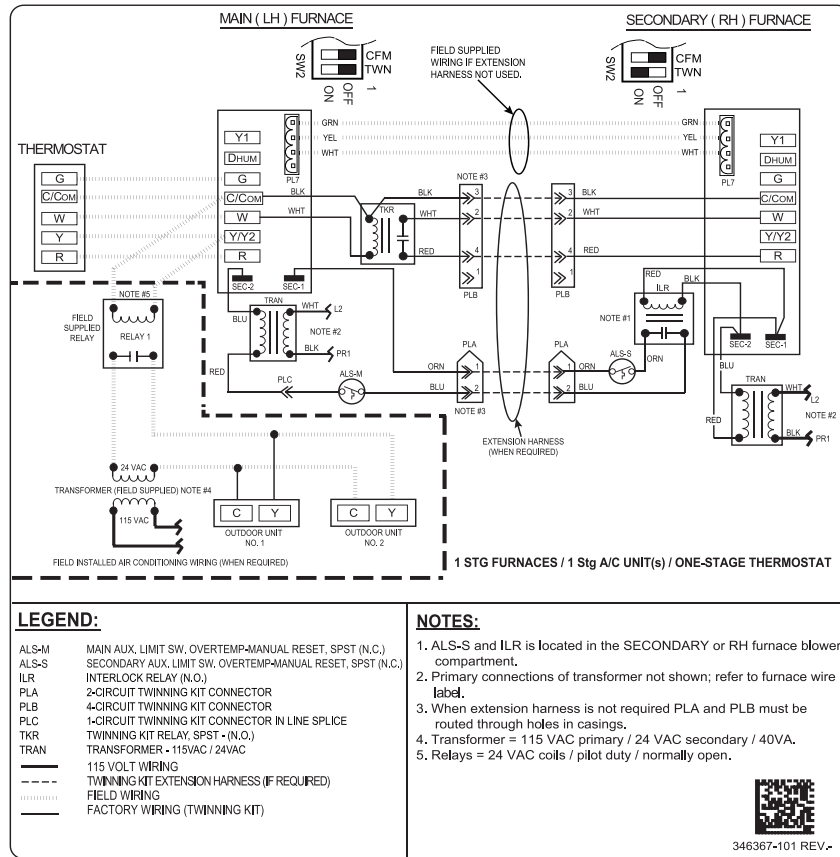


Fig. 31 – Single-Stage Furnace with Single-Stage Thermostat (Field Supplied)

Table 5 – Continuous Fan Operation

THERMOSTAT CONNECTIONS	CONTROL BOARD CONNECTION	ACTION
R	R	Power from control board to thermostat
G	G	Operates fan speed at continuous fan selection.

VENTING

Refer to Installation, Start-Up, and Operating Instructions supplied with each furnace for venting information. Do not common-vent or breach-vent condensing furnaces. Refer to furnace installation instructions for allowable configurations and proper termination. It is important that vent terminations be made as shown to avoid recirculation of flue gases.

GAS SUPPLY PIPING

All gas connections must be made through exposed outer side of each furnace. Do not common connect any connection other than supply and return-air ducts. Furnaces are recommended to be provided with a single shutoff valve. However, individual shutoff valves may be required by local codes or jurisdictions. Refer to Installation, Start-Up, and Operating Instructions provided with each furnace for additional gas supply information.

CONDENSING FURNACE CONDENSATE DRAIN CONNECTIONS

The condensate trap for a condensing furnace is factory installed in the furnace vestibule and factory connected for UPFLOW applications. Install condensate trap such that field drain connections are on the left side for LH (MAIN) furnace and on right side for RH (SECONDARY) furnace.

The condensate trap must be relocated for downflow and horizontal applications.

See furnace Installation, Start-Up, and Operating Instructions for details on relocating the condensate and attaching field drain connections.

Indoor coil condensate drains must not be hard piped to condensing furnace condensate drain. Route indoor coil condensate drains separately to a code-approved drain.

Indoor coil condensate drains may be combined with furnace condensate drains provided a stand-pipe connection (air gap) is made in the condensate drainage system. Refer to the furnace installation instructions for additional details.

Slope all drain lines at least 1/4 in. per foot. Support or clamp all drain lines to prevent damage to the drain line.

START-UP AND ADJUSTMENT

! WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

Refer to Installation, Start-Up, and Operating Instructions supplied with furnace for detailed information.

1. Shut off all power and gas to both furnaces.
2. Position blower off delay switches on controls in BOTH furnaces to the SAME desired blower off delay in heating. See furnace Installation, Start-Up, and Operating Instruction for further details.

3. Attach twinning connection wiring label above the existing furnace wiring label on the inside of the LH furnace blower door. Use the following labels for the following applications:
4. Attach twinning reference label 346369-101 on the outside of blower access door of RH furnace.
5. Manually close the door switch on both furnaces.
6. Turn on power and gas to furnaces.
7. Using the appropriate section below, operate furnaces through two cycles in each mode to confirm correct operation by operating only the thermostat.
 - a. Single- or two-stage gas heating thermostat R to W/W1 for low-heat. Single-stage thermostat with adaptive heating mode causes furnace to operate in low-heat mode for up to 16 minutes (for first cycle after power up and other cycles are calculated based on run time), and then furnace automatically switches to high-heat. First stage of a two-stage thermostat without adaptive heating mode causes furnace to operate in low-heat mode indefinitely.
 - b. First and second stage of two-stage heating thermostat R to W/W1 and W2 for high-heat.
 - c. Thermostat R to G for continuous fan, see [Table 5](#).
 - d. Cooling thermostat R to G and Y/Y2 for single-speed cooling blower or for two-stage cooling high-cool blower.
8. Reinstall doors on both furnaces.
9. Instruct user in operation of furnaces and thermostat.



A200259

Fig. 32 – Example of Twinning Reference Label

SEQUENCE OF OPERATION

See condensing furnace twinning connection and schematic wiring diagrams while reviewing sequence of operation.

Twinning operation is controlled by LH or MAIN furnace. The Communication (PL7) Connector wires ensures the two furnaces coordinate their blower operation. When either furnace requires blower operation, both furnace blowers operate at same speed. Both furnaces operate simultaneously in the same mode: heat, cool, or continuous fan. Exceptions can occur if a safety switch on either furnace is opened by a problem (such as pressure switch, flame roll-out switch, main limit switch, twinning kit auxiliary limit switch, or flame-proving sensor). In such a case, the other furnace continues to operate unless open switch is the flame roll-out, main limit, or twinning kit auxiliary limit switch, in which case both furnaces respond.

Before performing component test, disconnect Communication (PL7) Connector from LH furnace control. After removing, component test can

be initiated on each furnace individually as stated in Installation, Start-Up, and Operating Instructions.

SINGLE-STAGE HEAT, SINGLE-STAGE FURNACES WITH SINGLE-STAGE THERMOSTAT

1. Operation in all modes (sequence of operation) is the same for twinned furnaces as for an individual furnace. See furnace Installation, Start-Up, and Operating Instructions for more information on the sequence of operation.

SINGLE-STAGE HEAT, SINGLE-STAGE FURNACES WITH TWO-STAGE THERMOSTAT

1. The two-stage thermostat determines if furnaces are operating in first-stage heat (LH furnace operates in heat while RH furnace blower operates but RH furnace is not heating) or if furnaces are operating in second-stage heat (both furnace operate in heat), depending on how many thermostat stages are calling for heat. If two-stage cooling used, Y1 from the thermostat will initiate both furnace blowers to the cooling speed and the first A/C unit. Y2 from the thermostat will go directly to the outdoor unit and initiate the second A/C unit.
2. Operation in all modes (sequence of operation) is the same for twinned furnaces as for an individual furnace. See furnace Installation Start-Up, and Operating Instructions for more information on sequence of operation.

TWO-STAGE HEAT, TWO-STAGE FURNACES WITH SINGLE-STAGE THERMOSTAT

NOTE: See Electrical Connections for control board wiring and LHT switch setup.

1. LH furnace control determines whether furnaces are both operating in low-heat or high-heat, depending on the control’s adaptive gas heating mode when the R-to-W/W1 circuit is closed in LH furnace.
2. Operation in all modes (sequence of operation) is the same for twinned furnaces as for an individual furnace. See furnace Installation, Start-Up, and Operating Instructions for more information on sequence of operation.

TWO-STAGE HEAT, TWO-STAGE FURNACES WITH TWO-STAGE GAS-HEAT THERMOSTAT

NOTE: See Electrical Connections for control board wiring and LHT switch setup.

1. The two-stage thermostat (NOT the furnace control’s adaptive gas heating mode) determines whether furnaces are both operating in low-heat or high-heat, depending on whether one or both thermostat stages (W/W1 or W/W1 and W2) are calling for heat.
2. Operation in all modes (sequence of operation) is the same for twinned furnaces as for an individual furnace. See furnace Installation, Start-Up, and Operating Instructions for more information on sequence of operation.