

Service Service Service

CDR802/00S/01S
CDR820/00/17
CDR822/00S/01S



Service Manual

SERVICING

For servicing CDR8xx the set has to be divided into two parts:

1. Except for the CD-R/W module all workshops can repair the set on component level.
The Switched Mode Power Supply unit will be exchanged completely in case of a failure.

2.The **CD-R/W module** can only be repaired on component level with the help of ComPair.

With this tool diagnosing of the set can be done in an interactive way. In this tool also the adjustment procedure has been implemented. The adjustment is absolutely necessary in case the CDR-Main Board and/or CD drive (CDR Loader) is disconnected from the matched production combination.

Only designated workshops can perform these repairs!

Please send the complete set to the designated workshop.



Available circuit descriptions: *The Basics of Compact Disc Recordable/Rewritable* 4822 725 25242
3rd generation Compact Disc Recording 3104 125 40100
(*with reference to description of the Basic Engine*)
2nd line Service Manual CDR Mozart Module 3122 785 60030

TABLE OF CONTENTS

	chapter
Technical Specification and Measurement setup.....	1-1, 1-2
Location of printed circuit boards.....	1-3
Warnings & Safety	2-1
Brief Operating Instructions	3-1 to 3-3
Dismantling Instructions.....	4-1 to 4-9
Service hints	5-1 to 5-5
Service Test Program	5-6 to 5-8
BLOCK DIAGRAMS	6-1 to 6-5
WIRING DIAGRAM.....	6-6
POWER BOARD (for orientation only)	7-1 to 7-2
DISPLAY BOARD	7-3 to 7-5
KEY left BOARD	7-6
FRONT LED BOARD.....	7-6
INTERFACE BOARD.....	7-7 to 7-8

	chapter
HEADPHONE BOARD	7-9
3CDC MODULE	8-1 to 8-9
EXPLODED VIEWS	
apparatus	10-1
3CDC module	8-8 to 8-9
MECHANICAL PARTSLIST see Exploded views	
ELECTRICAL PARTSLIST.....	10-2 ff

© Copyright 2001 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by MS 0137 Service Audio Printed in The Netherlands Subject to modification

(GB) 3103 785 25100



PHILIPS

**CLASS 1
LASER PRODUCT**

TECHNICAL SPECIFICATION

General:

Mains voltage	: 220V-240V / 50-60Hz for /00 100V-240V /50-60Hz for /01 120V / 60Hz for /17
Power consumption	: ≤ 18W ≤ 1W in stand by

Input / Output:

Analog in:

input sensitivity	: ≤250mV _{rms}
max. input voltage	: 2,8V _{rms}
input impedance	: 47kΩ

Analog out:

output level	: 2V _{rms} ±2dB
output impedance	: 300Ω

Microphone in:*

input sensitivity	: ≤1mV _{rms}
max. input voltage	: 50mV _{rms}
input impedance	: 2kΩ

Digital in (acc. IEC958):

input level	: 0,5V _{pp}
input impedance	: 75Ω

Digital out (acc. IEC958):

output level	: 0,5V _{pp}
output impedance	: 75Ω

Headphone:

output level	: max. 5V _{rms} at 100kΩ
output impedance	: 120Ω
frequency response:	20 - 20.000 Hz ±3dB (typ. ±2dB)
distortion	: ≤ 0,01% at 1 kHz and -6dB output level at 120Ω
channel difference	: ≤ 3dB at 1 kHz
channel crosstalk	: -73dB at 1kHz (typ. -80dB)

AUDIO PERFORMANCE

3CDC module: To be measured on ANALOG OUT socket.

frequency response	: 20 - 20.000 Hz ±0,3dB
signal/noise ratio	: ≥ 114dB (120dB A-weighted)
distortion	: -90dB at 1 kHz (-95dB typ.)
channel difference	: ≤ 0,3dB at 1 kHz
channel crosstalk	: -95dB at 1kHz(-100dB typ.)
de emphasis	: 0 or 15/50µs switched automatically by subcode on the disc

laser

output power	: 500µW
wave length	: 780 ±20nm

CD-RW module: To be measured on ANALOG OUT socket.

frequency response	: 20 - 20.000 Hz ±0,3dB (±0,5dB recording)
signal/noise ratio	: ≥ 114dB (120dB A-weighted)
distortion	: -90dB at 1 kHz (-85dB recording)
channel difference	: ≤ 0,3dB at 1 kHz (≤ 0,5dB recording)
channel crosstalk	: -95dB at 1kHz (-85dB recording)
de emphasis	: 0 or 15/50µs switched automatically by subcode on the disc

laser (laser class 3B)

output power	: 1mW max. during reading 20mW max. during writing
wave length	: 780 ±20nm

TECHNICAL SPECIFICATION

Remote Control:

RC5 commands **RC283505**


RC KEY	SYSTEM CODE		COMMAND CODE
	CD	CDR	
Standby	20	26	12
BRIGHTNESS	20	26	71
TRACK INCR.	-	26	114
CD TEXT	20	26	88
1	20	26	01
2	20	26	02
3	20	26	03
4	20	26	04
5	20	26	05
6	20	26	06
7	20	26	07
8	20	26	08
9	20	26	09
TEXT EDIT	20	26	82
0	20	26	00
PROGRAM	20	26	36
NO	20	26	49
YES	20	26	87
▶ PLAY	20	26	53
◀	20	26	33
▶	20	26	32
■ STOP	20	26	54
◀◀	20	26	50
▶▶	20	26	52
⏸ PAUSE	20	26	48
SHUFFLE	20	26	28
REPEAT	20	26	29
CD1	20	20	55
CD2	20	20	56
CD3	20	20	57
CDR	26	26	63


RC5 code RC283505, 130300

MEASUREMENT SETUP

CD

Use Audio Signal Disc SBC429 4822 397 30184
(replaces test disc 3)

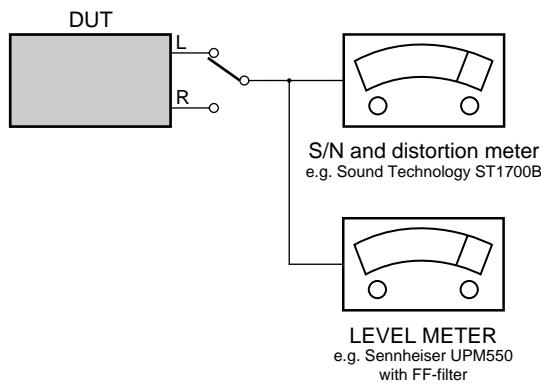

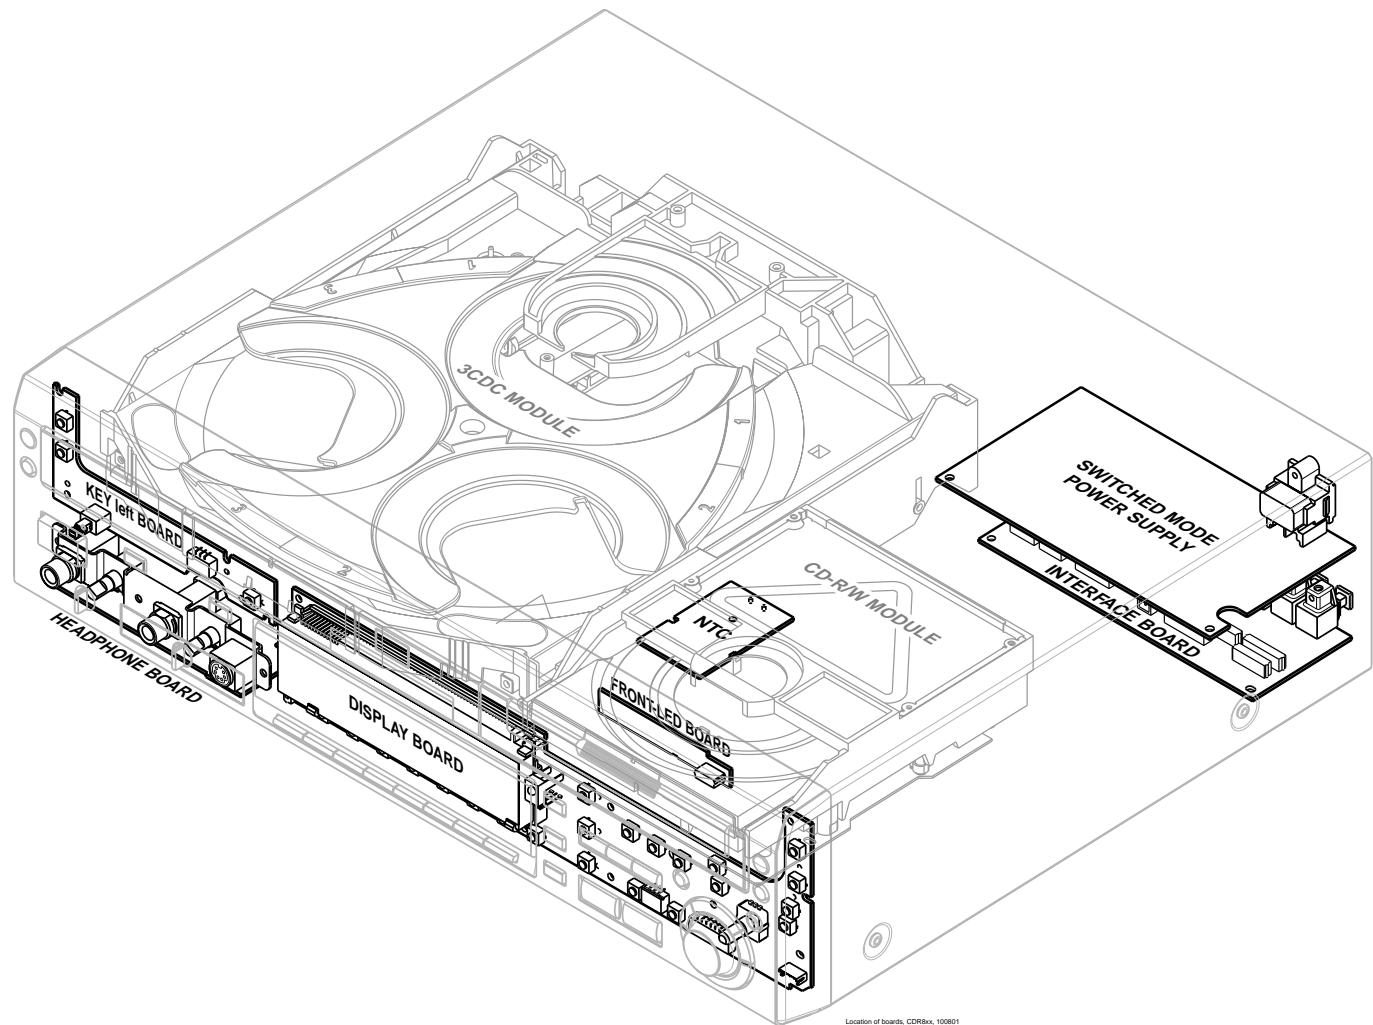LOCATION OF PRINTED BOARDS

picture 1

WARNINGS & SAFETY

(GB) WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.
When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.



(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.
Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfileer le bracelet serti d'une résistance de sécurité.
Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).
Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.
Sorgen Sie dafür, daß Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.
Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

(NL) WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).
Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.
Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).
La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cautela alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.
Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB) AVAILABLE ESD PROTECTION EQUIPMENT :

anti-static table mat	large 1200x650x1.25mm small 600x650x1.25mm
anti-static wristband	
connection box (3 press stud connections, 1MΩ)	4822 395 10223
extendible cable (2m, 2MΩ, to connect wristband to connection box)	4822 320 11307
connecting cable (3m, 2MΩ, to connect table mat to connection box)	4822 320 11305
earth cable (1MΩ, to connect any product to mat or to connection box)	4822 320 11306
KIT ESD3 (combining all 6 prior products - small table mat)	4822 320 11308
wristband tester	4822 310 10671
	4822 344 13999

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Safety components are marked by the symbol

(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

Les composants de sécurité sont marqués

SAFETY



(NL)

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.
De Veiligheidsonderdelen zijn aangeduid met het symbool

(I)

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.
Componenti di sicurezza sono marcati con

(GB)

DANGER: Invisible laser radiation when open.
AVOID DIRECT EXPOSURE TO BEAM.

**CLASS 1
LASER PRODUCT**

(S) Varning !

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

(DK) Advarsel !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

(FIN) Varoitus !

Avatussa laitteessa ja suojalukiukseen ohitettaessa olet alittuna näkymättömälle laserisäteilylle. Älä katso sääteeseen !

(GB)

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.

The leakage current must not exceed 0.5mA.

(F)


"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

BRIEF OPERATING INSTRUCTIONS

The following excerpt of the Owner's Manual serves as a very short introduction to the set.
The complete Owners Manual can be downloaded in several languages from the Internet site of
Philips Customer Care Center "P3C": <http://130.144.192.42/cgi-bin/newmpr/debt.pl>

Controls

English

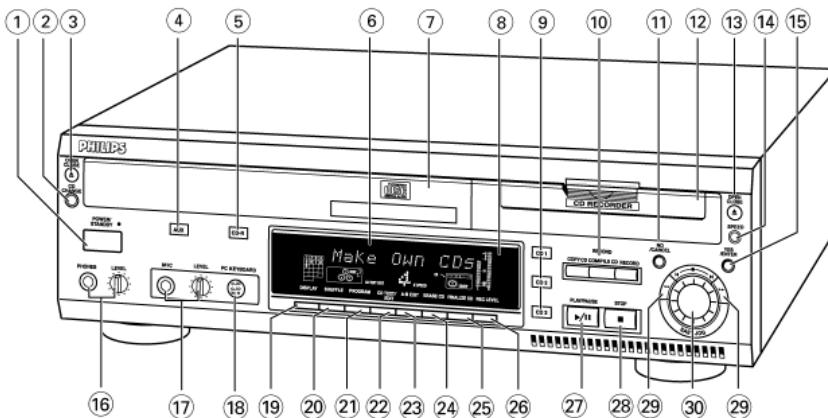

Controls

General

- ① **POWER**
switches the CD recorder/changer ON and OFF
- ② **STANDBY indicator**
lights up when the set is in Standby
- ④ **AUX**
selects external input
- ⑤ **CDR**
selects CD recorder
- ⑥ **Display**
information screen
- ⑧ **IR sensor**
receives signals from the remote control
- ⑨ **CD 1, 2, 3**
selects CD changer and switches to CD 1, 2 or 3
- ⑪ **NO/CANCEL**
cancels a selection
- ⑯ **YES/ENTER**
confirms a selection
- ⑯ **PHONES**
jack for headphones
- ⑰ **LEVEL**
headphones volume control
- ⑯ **MIC(phono)**
microphone jack
- ⑰ **LEVEL**
microphone volume control
- ⑱ **PC KEYBOARD**
PC keyboard connection
- ⑲ **DISPLAY**
selects display information

CDR82x only

- ⑳ **SHUFFLE**
plays discs in changer and recorder or program in random order

- ㉑ **PROGRAM**
opens/closes program memory

- ㉒ **CD TEXT/edit**
- makes CD text scroll over display once
- opens Text Edit mode

- ㉓ **PLAY/PAUSE ▶/II**
starts play/interrupts play/recording

- ㉔ **STOP ■**
stops playback or recording

- ㉕ **◀◀ ▶▶**
- searches backward (◀◀) and forward (▶▶)
- controls the cursor in various menus

- ㉖ **◀ EASY JOG ▶**
selects next/previous menu item or track

CD changer

- ㉗ **CD CHANGE**
selects next disc in CD changer

- ㉘ **OPEN/CLOSE ▲**
opens/closes changer tray

- ㉙ **Disc tray**

- ㉚ **A-B EDIT**
opens A-B Edit mode to create your own 'tracks'

CD recorder

- ㉛ **Recording keys**
COPY CD - selects high speed with auto finalize recording mode

- COMPILE CD** - selects high speed recording mode/opens program memory

- RECORD** - selects other recording modes

- ㉜ **Disc tray**


- ㉝ **OPEN/CLOSE ▲**
opens/closes recorder tray

- ㉞ **SPEED** CDR82x only
selects recording speed

- ㉟ **ERASE CD**
erases recordings on CDRW

- ㉟ **FINALIZE CD**
finalizes/unfinalizes disc

- ㉟ **REC(ording) LEVEL**
enables the EASY JOG key to set the recording level control

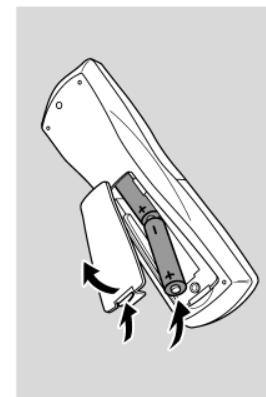
Remote control**Inserting batteries in the remote control**

- 1 Open the battery compartment cover.
- 2 Insert 2 batteries (AA, LR6 or UM-3; as supplied) as shown.
- 3 Replace the cover.


Note: We recommend you use 2 batteries of the same type and condition.

Batteries contain chemical substances, so they should be disposed of properly.

Note: Unless stated otherwise all controls are on the front of the recorder. When provided on the remote control you can also use the corresponding buttons, after selecting CD recorder or CD changer.

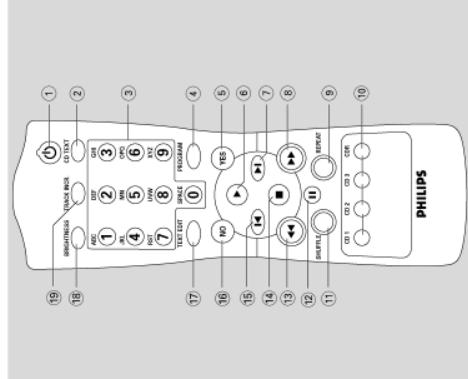Connections**English****English****Remote control commands**

- ① **①** switches to Standby
- ② **CD TEXT** scrolls CD text
- ③ **Number/alphabet keys 0 - 9**
 - selects track by number
 - selects character for text input
- ④ **SPACE** inserts space during text input
- ⑤ **PROGRAM** opens/closes program memory
- ⑥ **YES** confirms a selection
- ⑦ **REPEAT**
 - searches forward
 - cursor control in various menus
- ⑧ **REPEAT** repeat play
- ⑨ **TEXT EDIT** opens Text Edit mode
- ⑩ **CD 1, 2, 3** selects disc in CD changer
- ⑪ **SHUFFLE** plays all discs or program in random order
- ⑫ **II** interrupts playback/recording
- ⑬ **◀** searches backward
 - cursor control in various menus
- ⑭ **■** stops playback or recording
- ⑮ **▶** selects previous menu item or track
- ⑯ **NO** cancels a selection
- ⑰ **BRIGHTNESS** sets the brightness of the display
- ⑱ **TRACK INCR(ement)**
 - selects automatic track increment mode
 - increments track number during recording
- ⑲ **PROGRAM**
 - increments track number during recording
- ⑳ **REPEAT**
 - cursor control in various menus

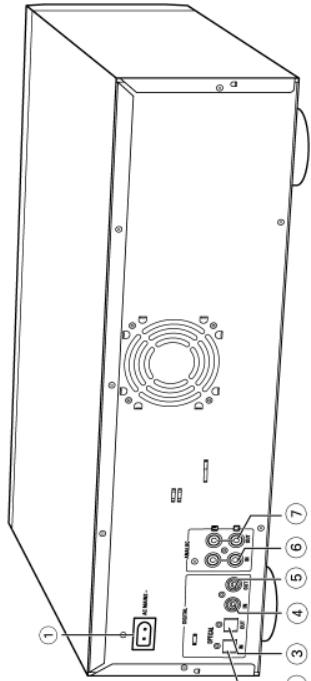Installation**Setup recommendations**

- Place the set on a solid, vibration free surface.
- Make sure there is sufficient space around the set to prevent overheating.
- Do not place the set near a source of heat, or in direct sunlight.
- Do not use the set under extremely damp conditions.
- If the set is placed in a cabinet, make sure that a 2.5 cm space is repower free on all sides of the CD recorder for proper ventilation.
- Activate mobile phones near to the set may cause malfunctions.
- Place the set below your receiver.

Connections general**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON**

- For playback on both recorder deck and changer deck the set should be connected to your amplifier/receiver. For this the following outputs are present:
- Digital optical output (OPTICAL OUT);
 - Digital coaxial output (DIGITAL OUT);
 - Analog output (ANALOG OUT).

- For external recording the following inputs are present:
- Digital optical input (OPTICAL IN);
 - Digital coaxial input (DIGITAL IN);
 - Analog input (ANALOG IN).
- These inputs can be connected to the corresponding output(s) of your amplifier/receiver or directly to the corresponding output(s) of the external source. Record players cannot be connected directly to the set.

- The connections you make will depend upon the possibilities your audio equipment offers and how you are going to use the set. Please refer to the user manuals for your other audio equipment first.

Digital recordings (optical or coaxial) give the best performance in audio and usability.


If possible, always make both digital and analog connections. In this way you can always make analog recordings when digital recording is not possible.

BRIEF OPERATING INSTRUCTIONS

Installation

Analog connections


These connections are required for playback and recording via an amplifier/receiver equipped with an analog in- and outputs.

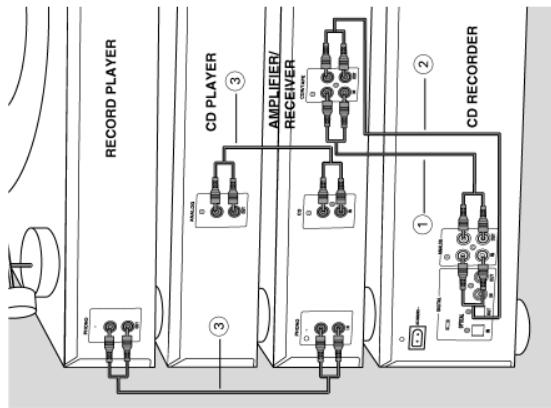

Digital connections


Direct digital coaxial connection

This connection is required for direct recording from a digital coaxial source (e.g. a CD player, DVD, DAT).

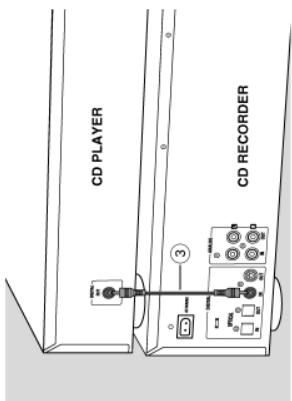

Direct digital optical connection

This connection is required for direct recording from a digital optical source (e.g. a CD player, DVD, DAT).

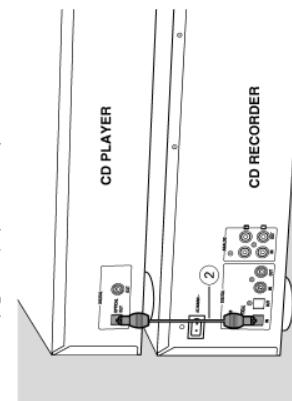


English

English

Power supply

Digital optical connections via a digital receiver


If you have a receiver with digital optical in- and outputs, these connectors allow you to make digital recordings from various sources, connected to the receiver.

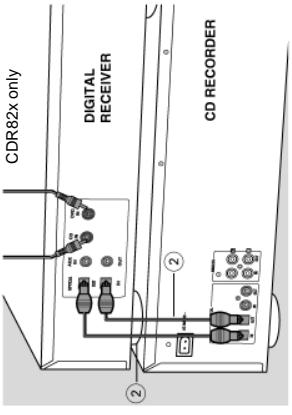

Demo mode

Digital coaxial connections via a digital receiver

If you have a receiver with digital coaxial in- and outputs, these connectors allow you to make digital recordings from various sources, connected to the receiver.

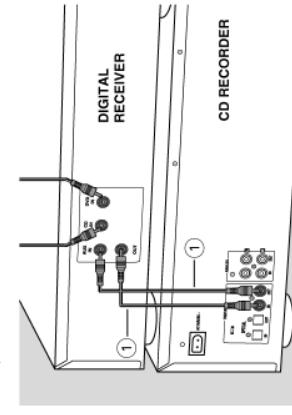

- Connect a digital coaxial cord between the DIGITAL IN-jack on the set and the DIGITAL OUT-jack of the digital source.
→ Recording can now be done via the digital coaxial input (AUX Digital).
- Any digital device, connected to the digital input jacks of the digital receiver (e.g. CD and DVD) can now be used as recording source.

13

14

3-3

The type plate is located on the rear of the set.

1 Check whether the power voltage as shown on the type plate corresponds to your local power voltage. If it does not, consult your dealer or service organisation.

2 Make sure all connections have been made before switching on the AC power supply.

3 Connect the power cord supplied to AC MAINS ~ and to the wall outlet. This switches on the AC power supply.


4 Press POWER to switch on the set.
→ Welcome To PHILIPS Audio will be displayed.

5 When the set is switched off, it is still consuming some power. To disconnect the set from the power completely, remove the power plug from the wall outlet.

To cancel demo mode

Keep STOP ■ on the set pressed for at least 5 seconds.

→ The demo mode is cancelled permanently.

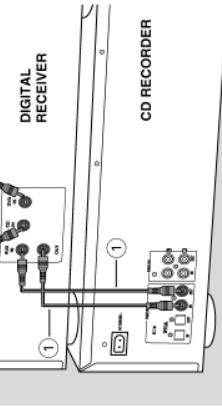


- Connect a digital coaxial cord between the DIGITAL IN- and OUT-jacks on the set and the (digital) AUX in- and output jacks on the digital receiver.
→ Any digital device, connected to the digital input jacks of the digital receiver (e.g. CD and DVD) can now be used as recording source.

Digital optical connections via a digital receiver

The demo mode displays various features of the set and will start automatically when no key has been pressed for several minutes or during Standby mode.

Press POWER again to switch off the set.

When the set is switched off, it is still consuming some power. To disconnect the set from the power completely, remove the power plug from the wall outlet.

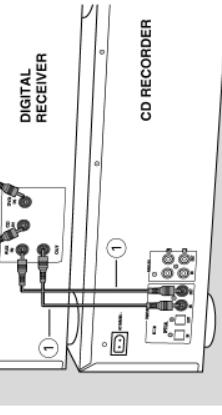


- Connect a digital coaxial cord between the DIGITAL IN- and OUT-jacks on the set and the (digital) AUX in- and output jacks on the digital receiver.
→ Any digital device, connected to the digital input jacks of the digital receiver (e.g. CD and DVD) can now be used as recording source.

DISMANTLING INSTRUCTIONS

Dismantling the Top Cover

- Remove 9 screws as shown in picture 2.
- Raise top cover at the rear and pull it backwards.

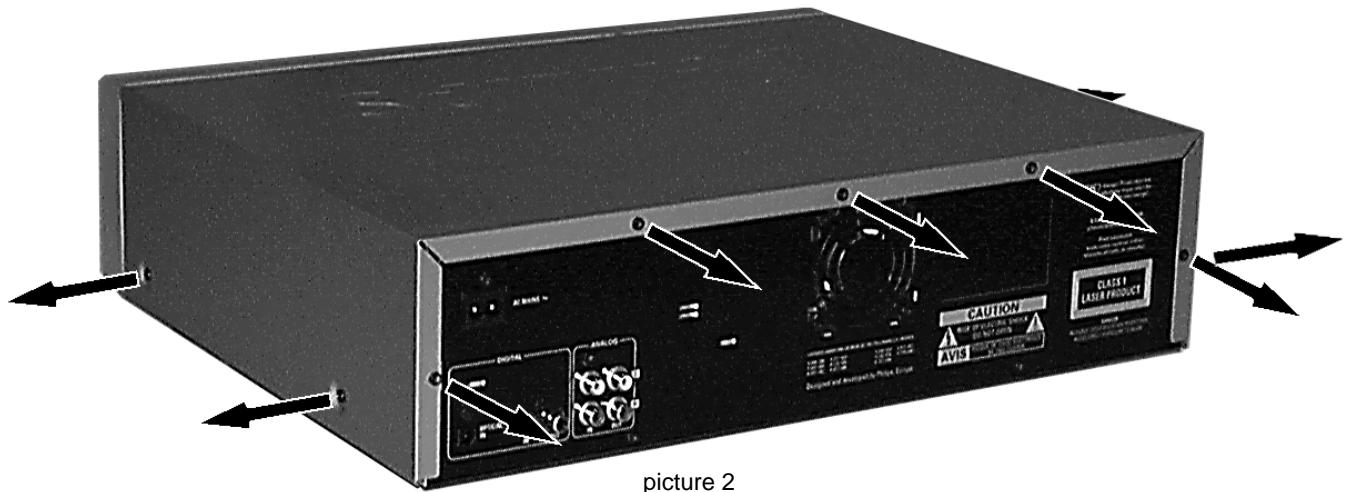

Dismantling the Tray Covers

To dismantle the ornamental cover, the tray has to be moved out first.


This can either be done by activating the Open/Close-key or manually.

In order to avoid unnecessary loading it is recommended to move the tray out manually a few centimetres.



To release the tray manually proceed as shown in pictures 3, 4 and 5. The tray will move out a little.

Afterwards it can be pulled out as far as convenient.

Release tray of 3 Disc Changer

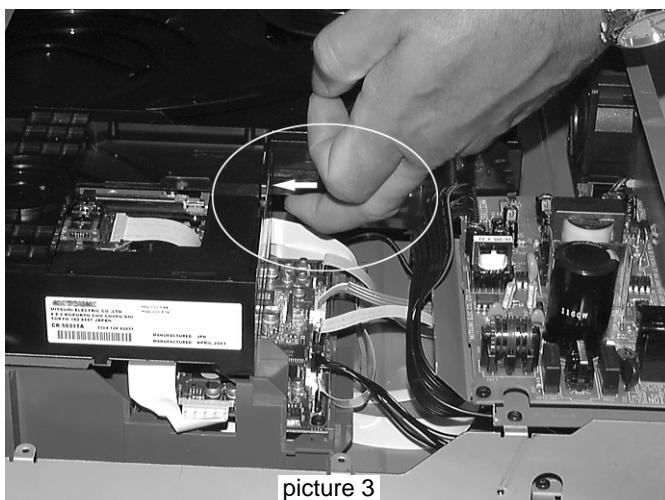


Release tray of CDR module

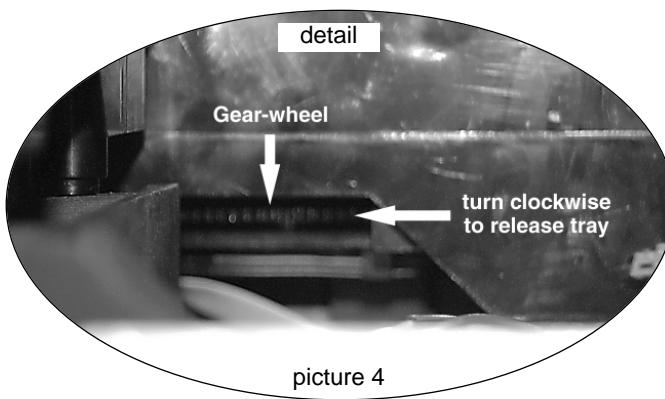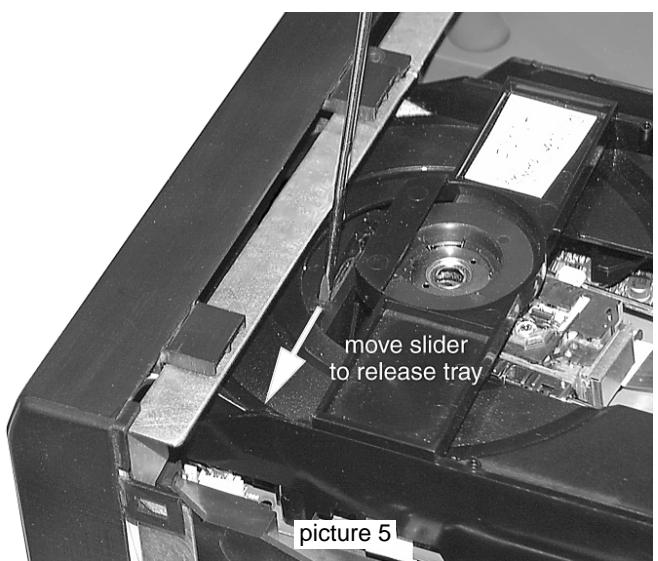

DISMANTLING INSTRUCTIONS


Dismantling the Tray Covers

continued

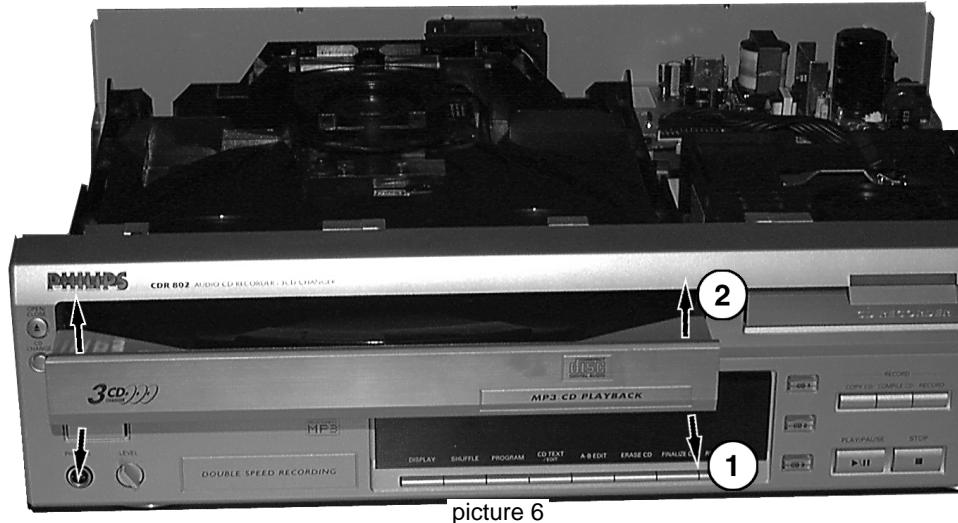

picture 6


- To release the cover from the catch on the tray, pull it frontwards on bottom side as shown in picture 6 and 7.
- Pull the cover up.

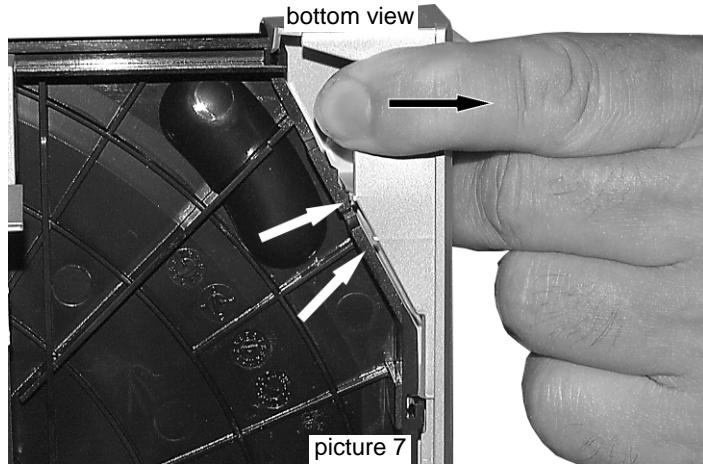

picture 7

**Dismantling the ornamental cover
from the CDR-tray
functions in the same manner.**

Dismantling the Front Cabinet


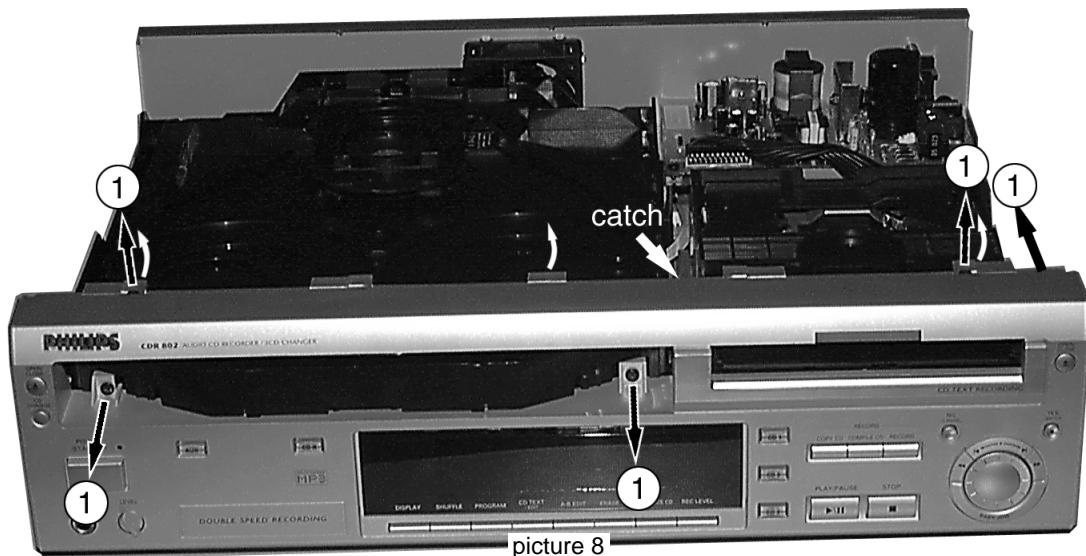


picture 8

- Remove top cover and ornamental covers from the trays first → see description on page 4-1.
- Move trays back to *closed* position.
- Loosen 5 screws as shown in pictures 8 and 9.
- Release catches on top (as shown in picture 8) and catch on frame of CDR module (see also picture 10).
- Turn front cabinet away.
- Place front cabinet as shown in picture 11.

DISMANTLING INSTRUCTIONS

Dismantling the *Front Cabinet* continued

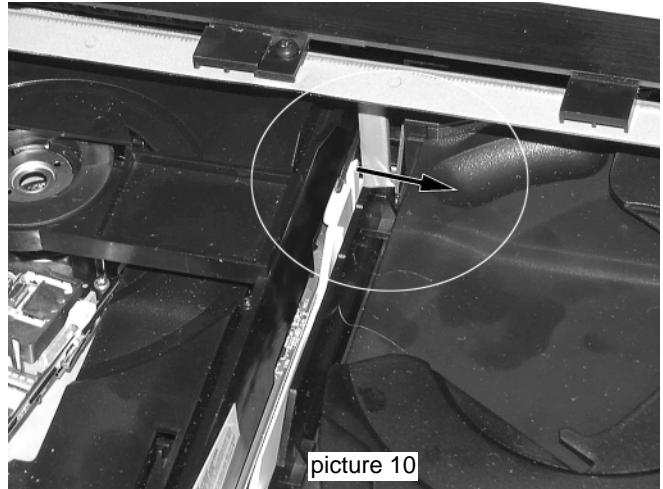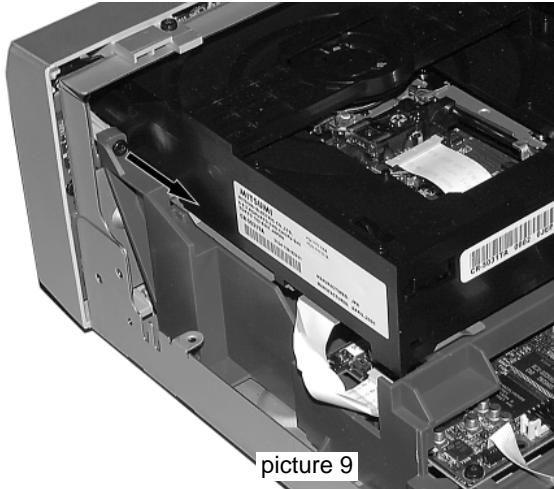

DISMANTLING INSTRUCTIONS

Dismantling the 3CDC module




picture 12

- Remove top cover and ornamental cover from the tray first → see description on page 4-1.
- Loosen 2 screws on front side → see picture 12.



picture 13


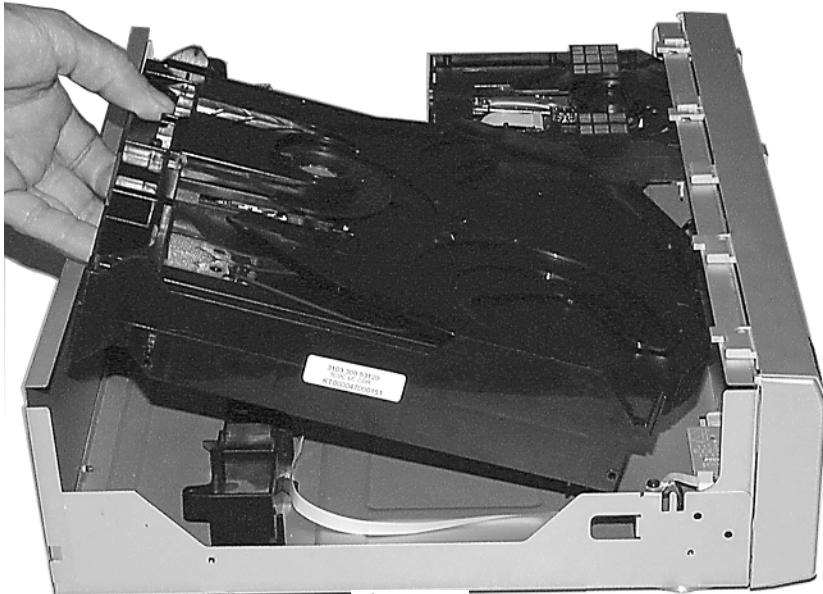


picture 14

DISMANTLING INSTRUCTIONS

Dismantling the *CDR module*

- Remove top cover and ornamental cover from the tray first
→ see description on page 4-1.
- move tray back to *closed* position.
- to dismantle the **complete module**:
 - loosen 1 screw to bottom cabinet on rear side (see picture 16) and 1 screw to front cabinet (see picture 17)
 - disengage catch to front (see picture 15)
 - move module backwards until catches to bottom cabinet become free and pull it up.

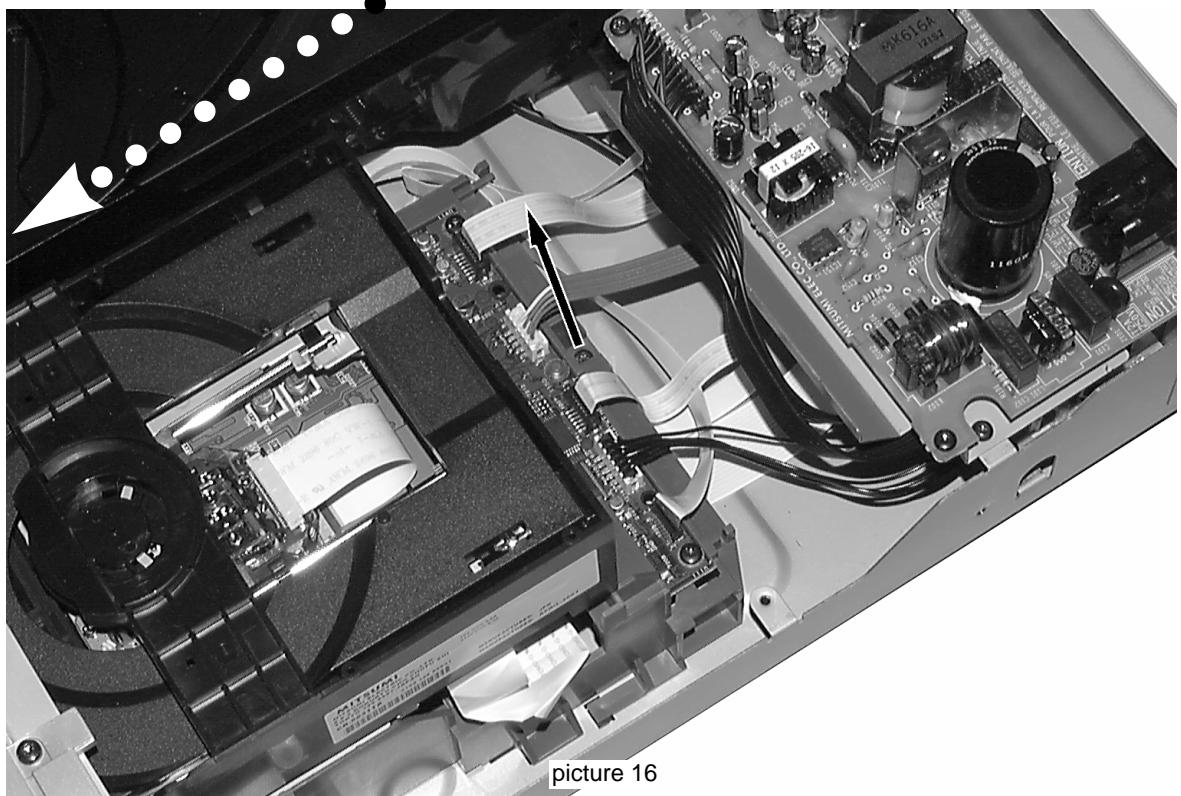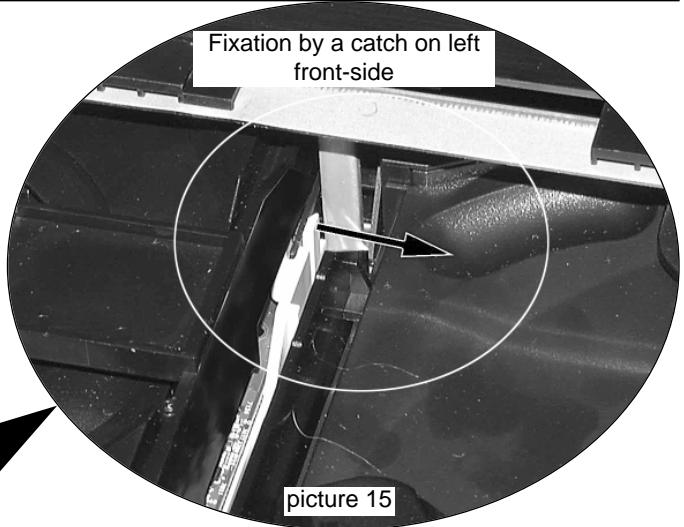

DISMANTLING INSTRUCTIONS

Dismantling the **CDR module**

continued


- Remove top cover and ornamental cover from the tray first
→ see description on page 4-1.
- to dismantle the **Loader module**:
 - move tray completely out.
 - loosen 4 screws to frame as shown in picture 18.
 - put the module to a proper service position.
→ see also chapter SERVICE HINTS.



picture 18

- to dismantle the **MOZART Board**:

- loosen 2 screws to frame as shown in picture 19.
- unlock flex foil connector and disconnect flex wire.
- pull the board out of it's guidings (backwards).
- place the Mozart board to a proper service position.
→ see also chapter SERVICE HINTS.

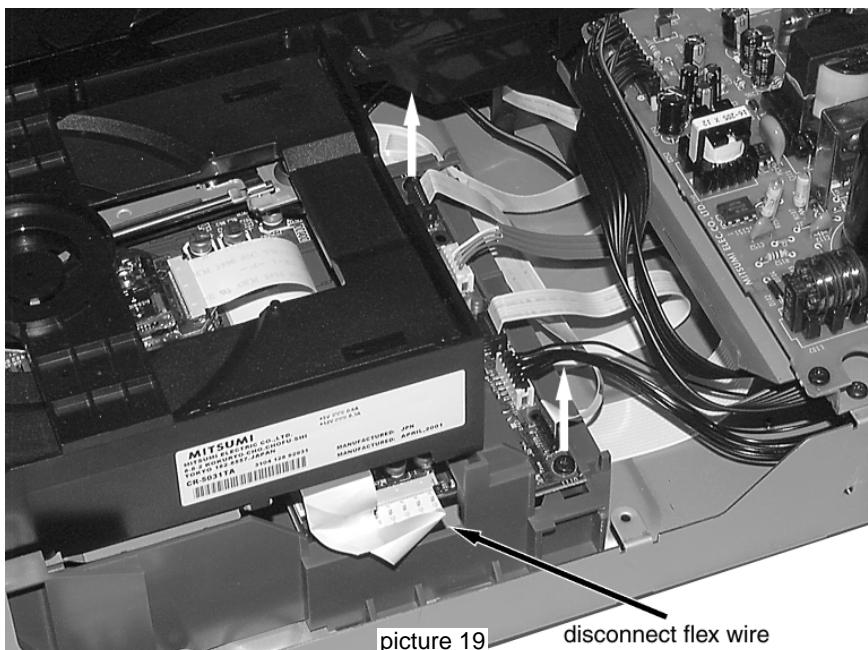


picture 19

disconnect flex wire

DISMANTLING INSTRUCTIONS

Dismantling the *Power board*


- Remove top cover first → see description on page 4-1.
- Loosen 3 screws as indicated in picture 20.
- Move the board backwards to release the mains socket.
- Lift it on the rear and turn it out.

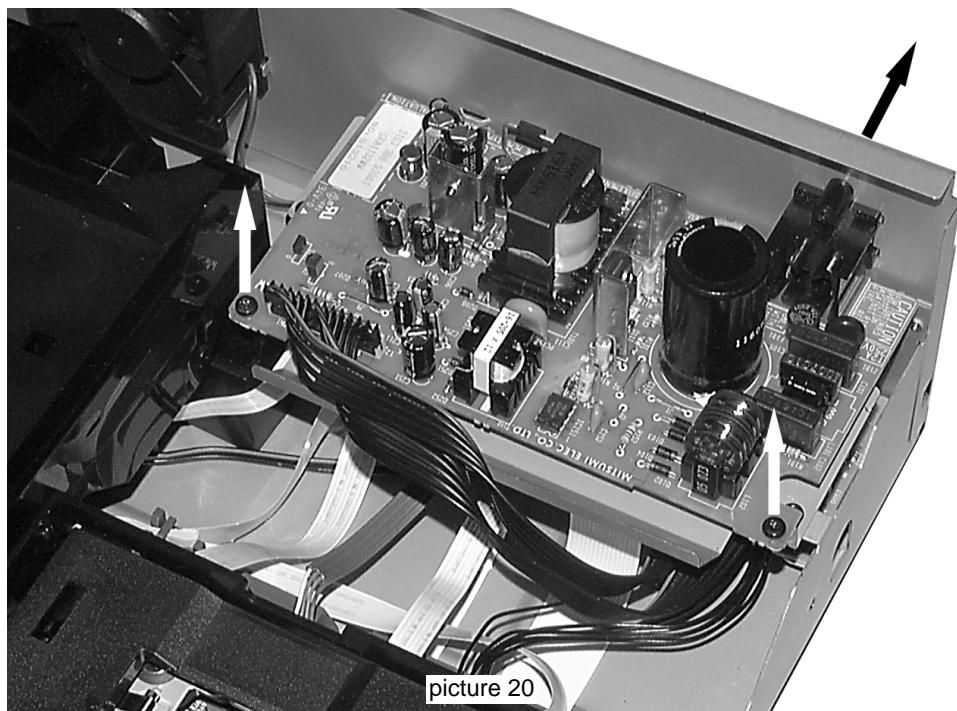

DISMANTLING INSTRUCTIONS

Dismantling the *Interface Board*

- Remove top cover first → see description on page 4-1.
- Remove Power board inclusive metal screening plate.
 - Loosen 4 screws as indicated in picture 21.
 - Move the combination backwards to release the mains socket.
 - Lift it on the rear and turn it out.

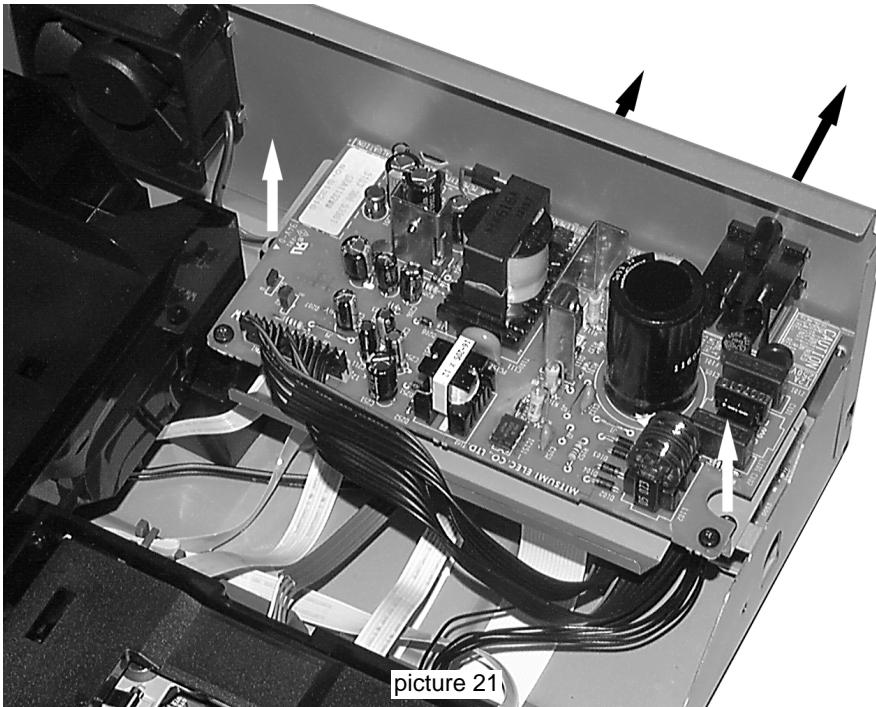

- Loosen 1 screw from the board and 3 (4) screws from sockets at the rear plate.
- Move the Interface board backwards to release the sockets.
- place the Interface board to a proper service position.
→ see also chapter SERVICE HINTS.




DISMANTLING INSTRUCTIONS

Dismantling the *Interface Board* alternative



- Remove top cover first → see description on page 4-1.
- Loosen 2 screws as shown in picture 23.
- Disengage catches to bottom bottom cabinet.
- Move rear plate backwards and turn it to a proper service position
→ see picture 24.

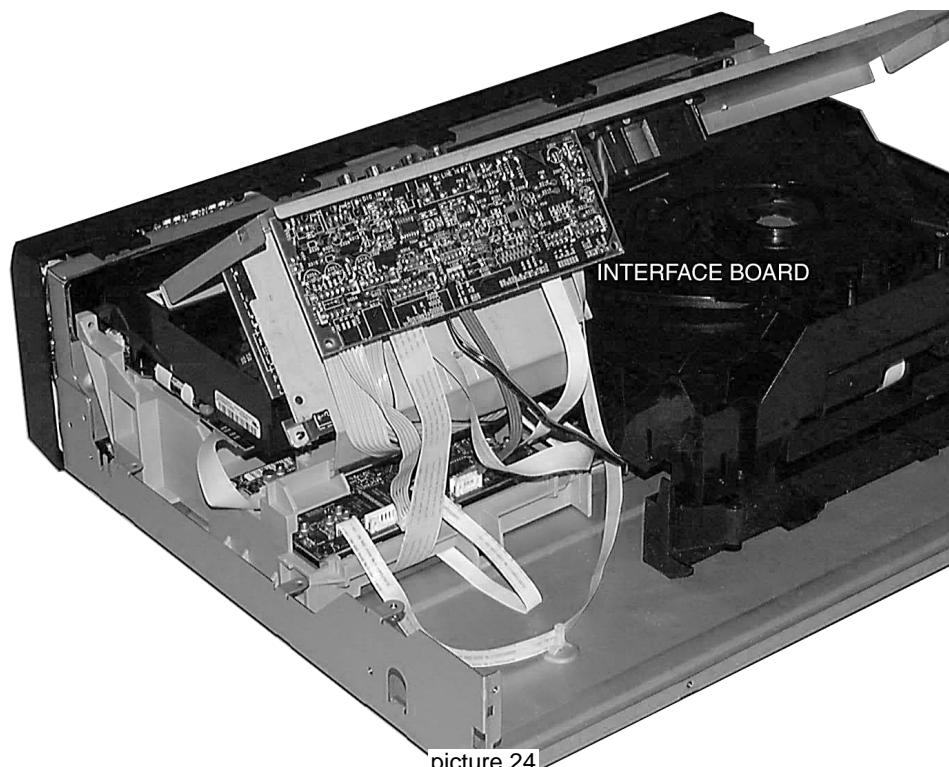

SERVICE HINTS

SERVICE TOOLS

TORX T10 screwdriver with shaftlength 150mm 4822 395 50423
TORX screwdriver set SBC 163 4822 295 50145

Audio signal disc SBC 429 4822 397 30184
Playability test disc SBC 444 4822 397 30245
Test disc 5 (disc without errors) +
Test disc 5A (disc with dropout errors, black spots and fingerprints)
SBC 426/426A 4822 397 30096
Burn in test disc (65 min. 1kHz signal at -30dB level without "pause") ... 4822 397 30155

DEALER MODE

The sets are equipped with a special DEALER MODE.
This mode blocks the trays of the CDC- and CDR module to prevent customers from fetching out CDs from exhibition sets.

The Dealer mode can be switched on/off as follows:

- 1) Switch the set with the Remote Control to [Standby]
- 2) Press the [DISPLAY] key at least for 5s
→ Display shows

TRAYS LOCKED else UNLOCKED

DEMO MODE


The DEMO MODE displays various features of the set and will start automatically when no key has been pressed for several minutes or during Standby mode.

The Demo mode can be switched on/off as follows:

- 1) Switch the set with the Remote Control to [Standby]
- 2) Press the [STOP] key on the set at least for 5s
→ Display shows

DEMO ON else DEMO OFF

HANDLING CHIP COMPONENTS

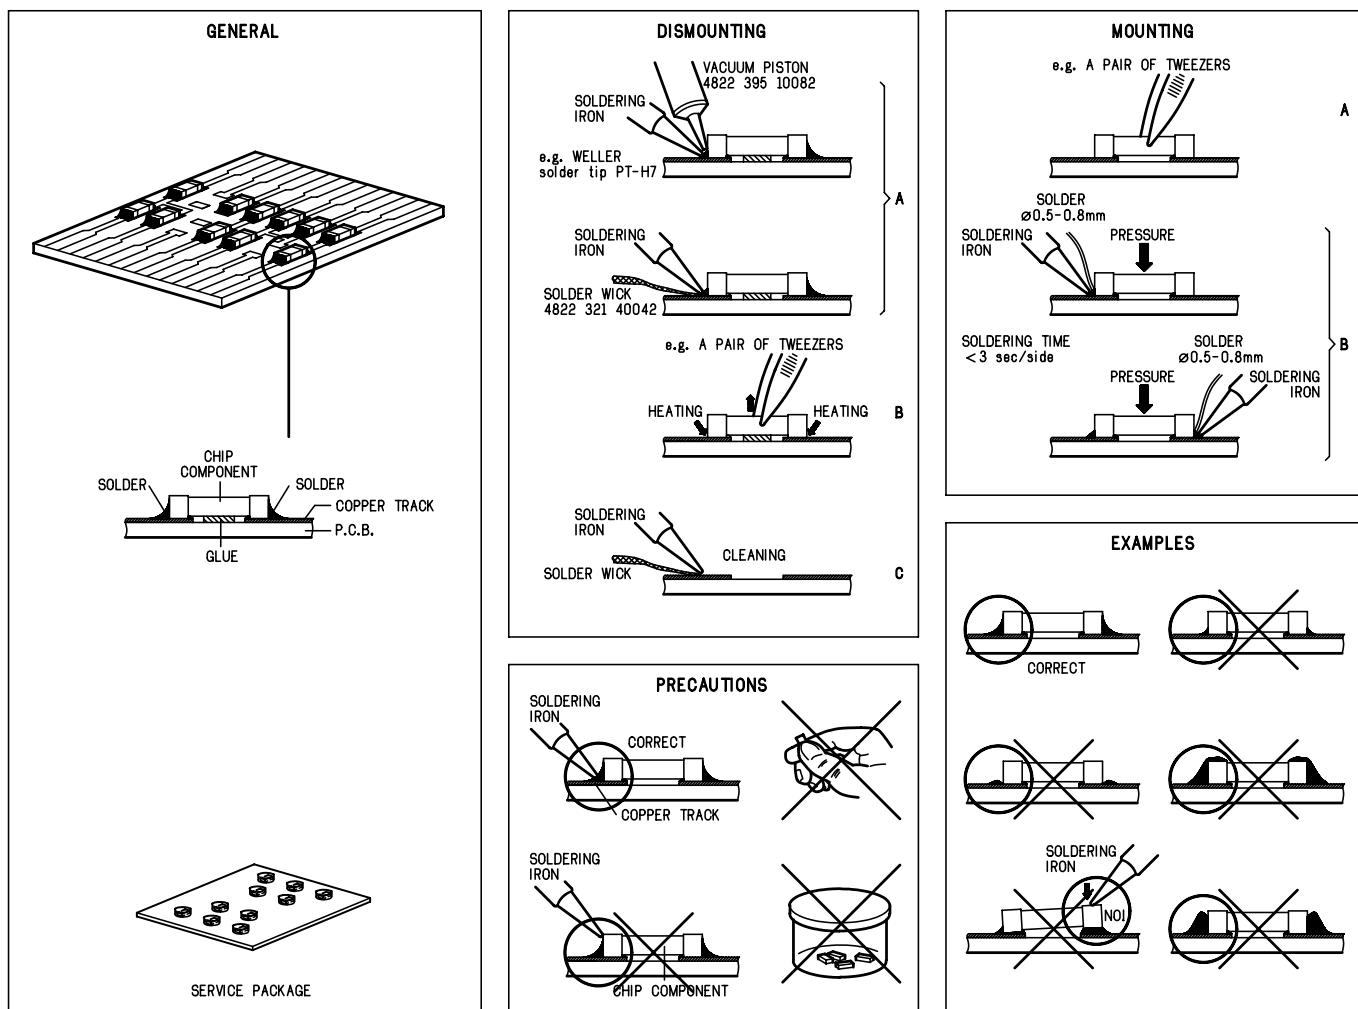


SERVICE HINTS

General Service position


For measurements on: Power Board

For manual release of: 3CDC tray

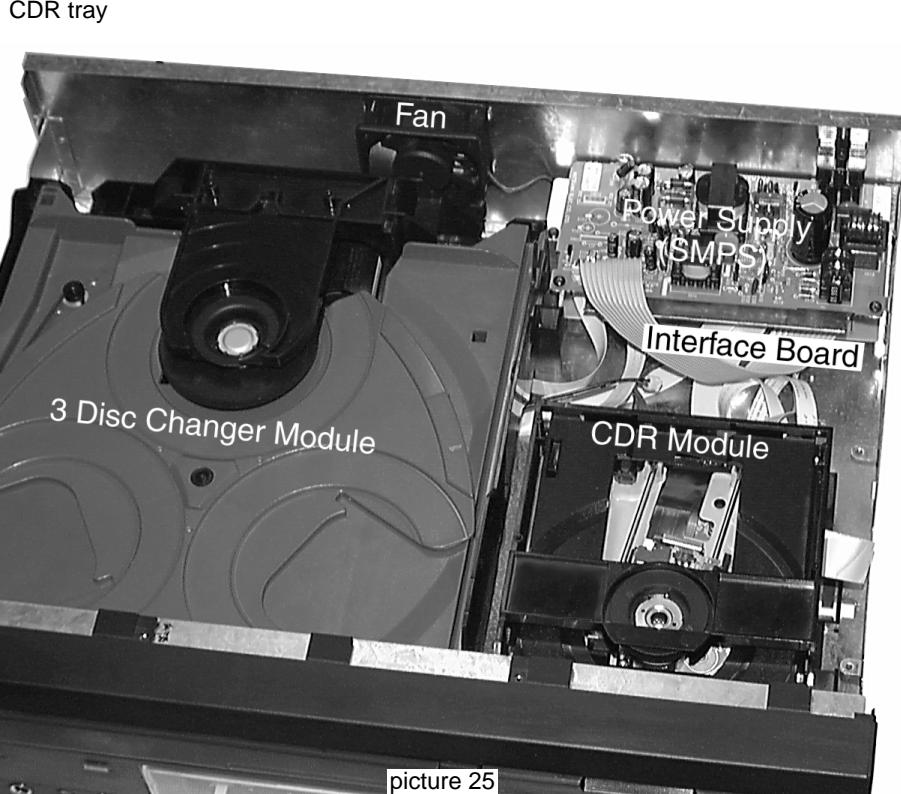


Service position *Front Board*

For dismantling instructions see chapter 4-1 to 4-3

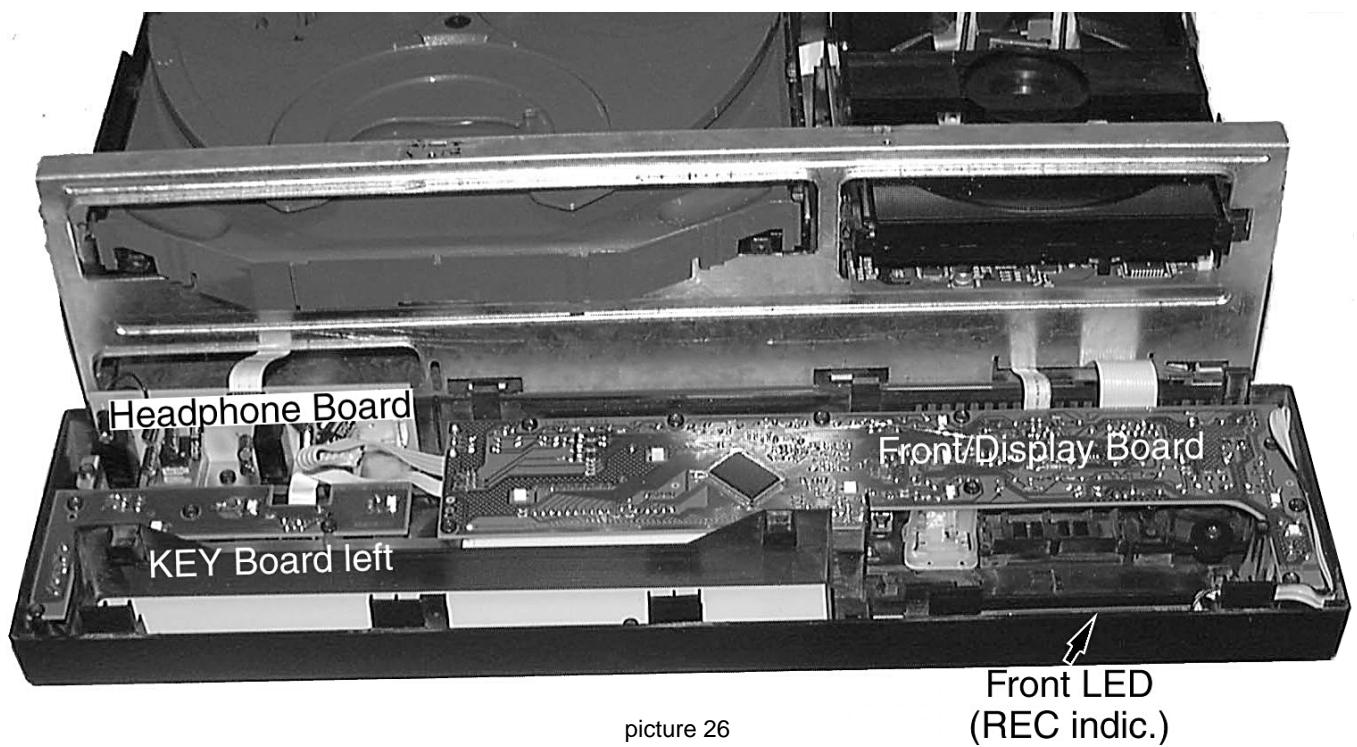


SERVICE HINTS

Service position 3CDC Module

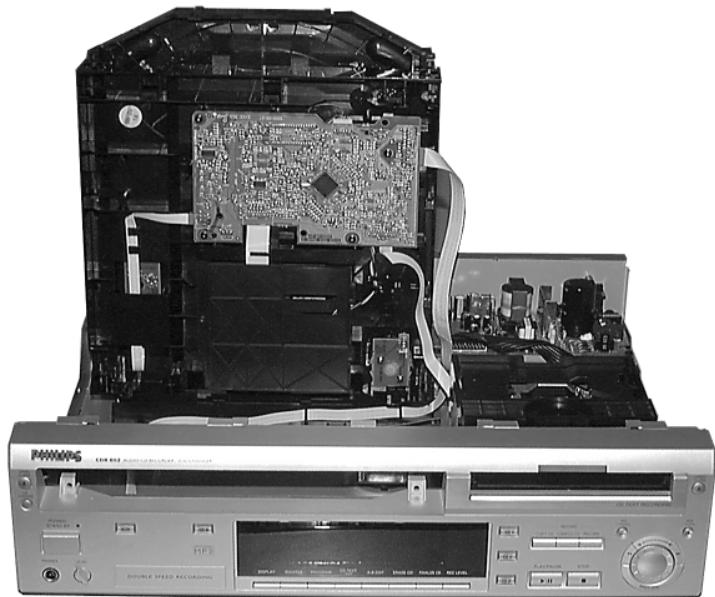

picture 27


For dismantling instructions see chapter 4-4.

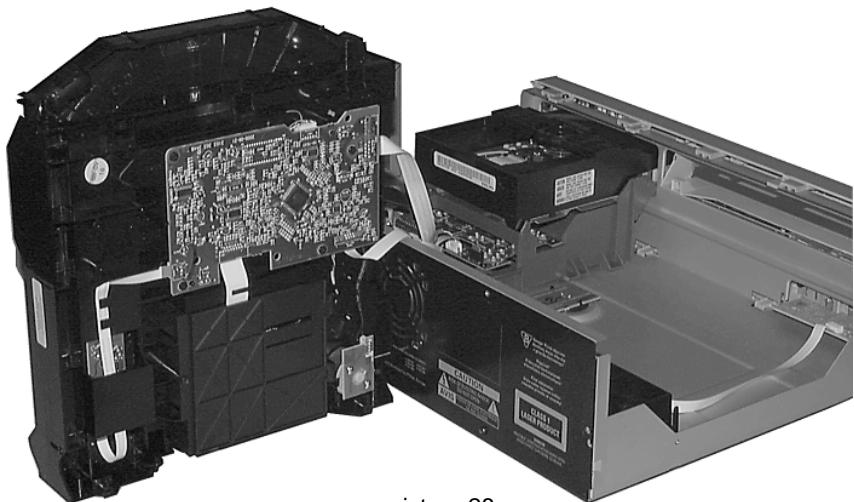

picture 28

Service position CDR Module

For dismantling instructions see chapter 4-5.

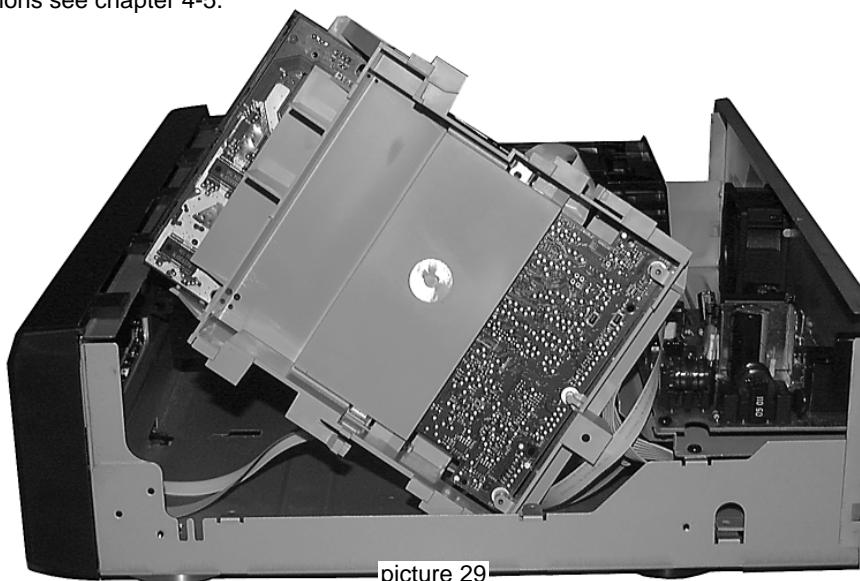


picture 29

SERVICE HINTS

Service position *CDR Loader* (Basic Engine)


For dismantling instructions see chapter 4-6.

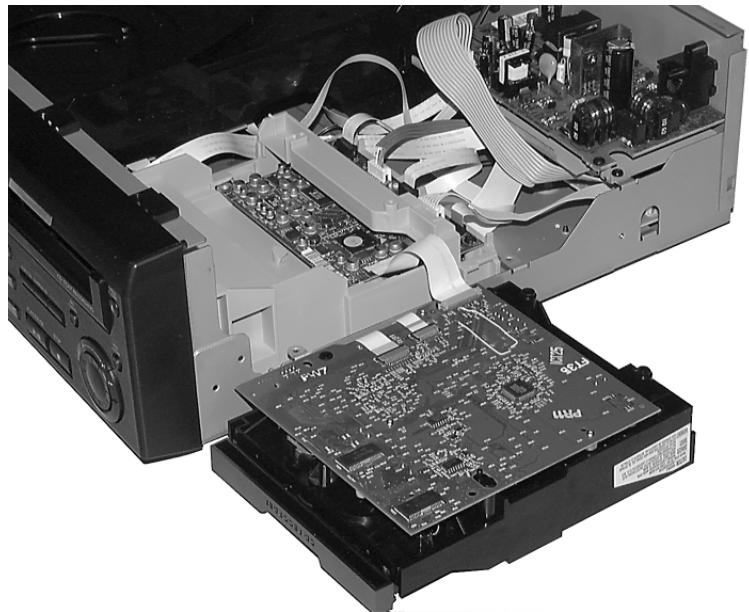


picture 30

Service position *MOZART Board* (Back-end)

For dismantling instructions see chapter 4-6.

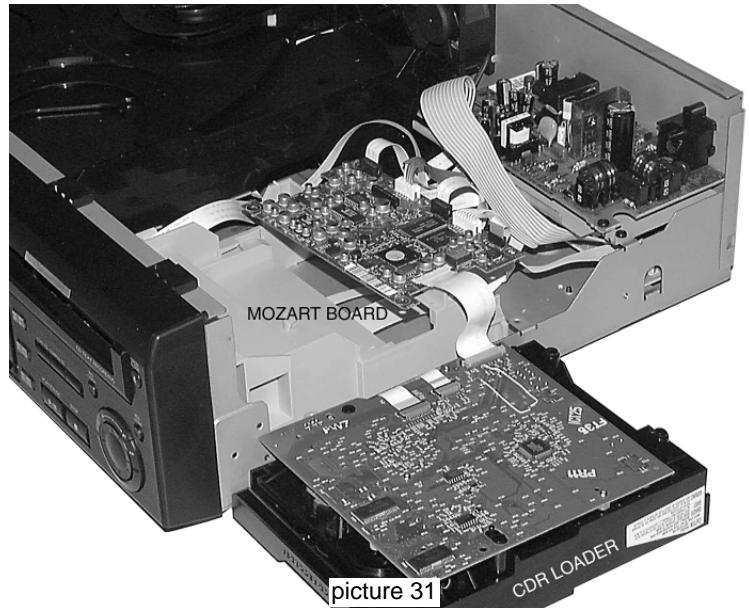

picture 31

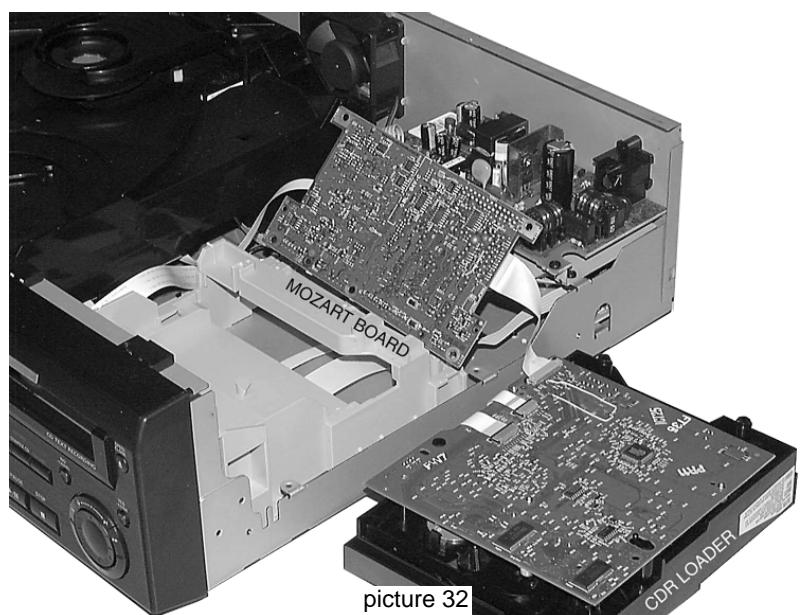


picture 32

SERVICE HINTS

Service position *Power Board*


For dismantling instructions see chapter 4-7.

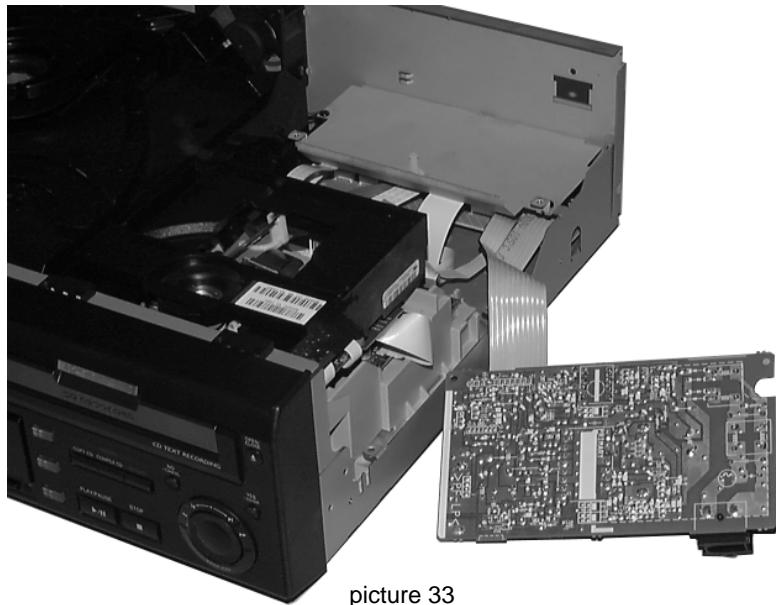

picture 33


Service position *Interface Board*

For dismantling instructions see chapter 4-8.

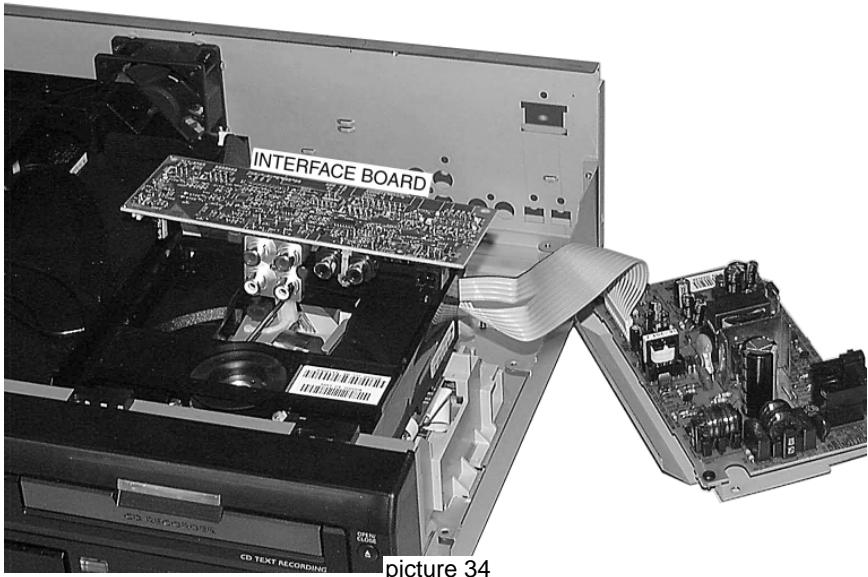

picture 34

For dismantling instructions see chapter 4-9.

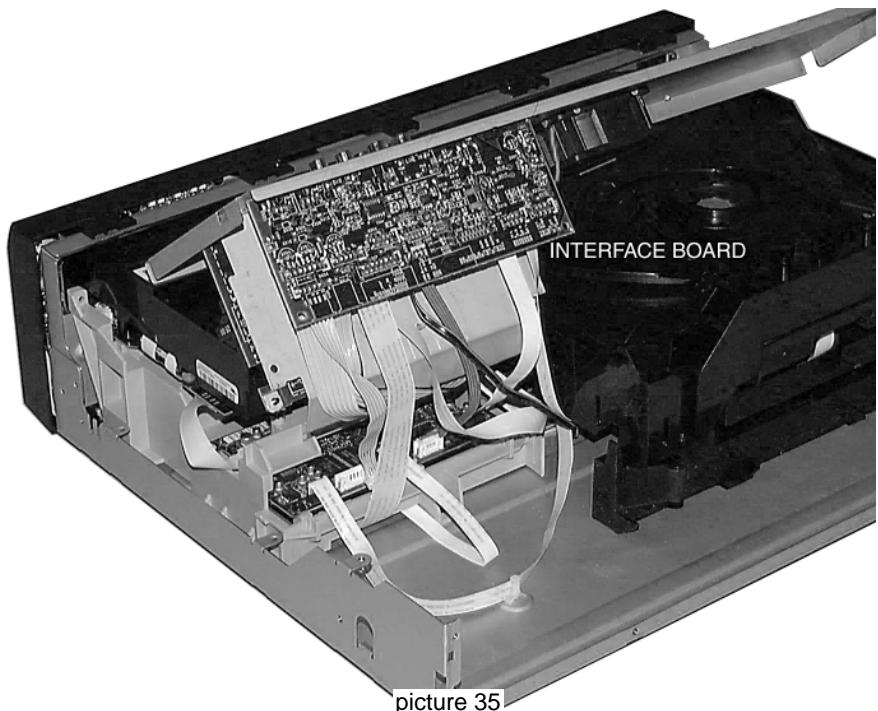

picture 35

SERVICE TESTPROGRAM

VARIOUS TEST

Test planned for future software versions
- not implemented in all sets

END-USER DIAGNOSTICS (CDR module)

To enter
END-USER DIAGNOSTICS
hold PLAY & REC LEVEL
buttons depressed while
plugging mainscord in.
On/Off switch in pos. ON

Insert CD-DA disc
before starting the test

Display shows for 3s each:
• Software version of
MOZART (flash ROM 7101)
• Software version of
basic engine processor
(flash EPROM 7017)

SDRAM TEST 7100
Display shows:
BTST 1

CHECKSUM TEST 7101
Display shows:
BTST2


ERASE TEST 7101
Display shows:
BTST3

COMMUNICATION TEST
(UART-BUS)
Display shows:
BTST4

TEST O.K.? Y
Flash Proms are set
to default settings.

Display shows:
FILED
Display shows:
PASSED

Plug mains cord off
to exit
END-USER DIAGNOSTICS

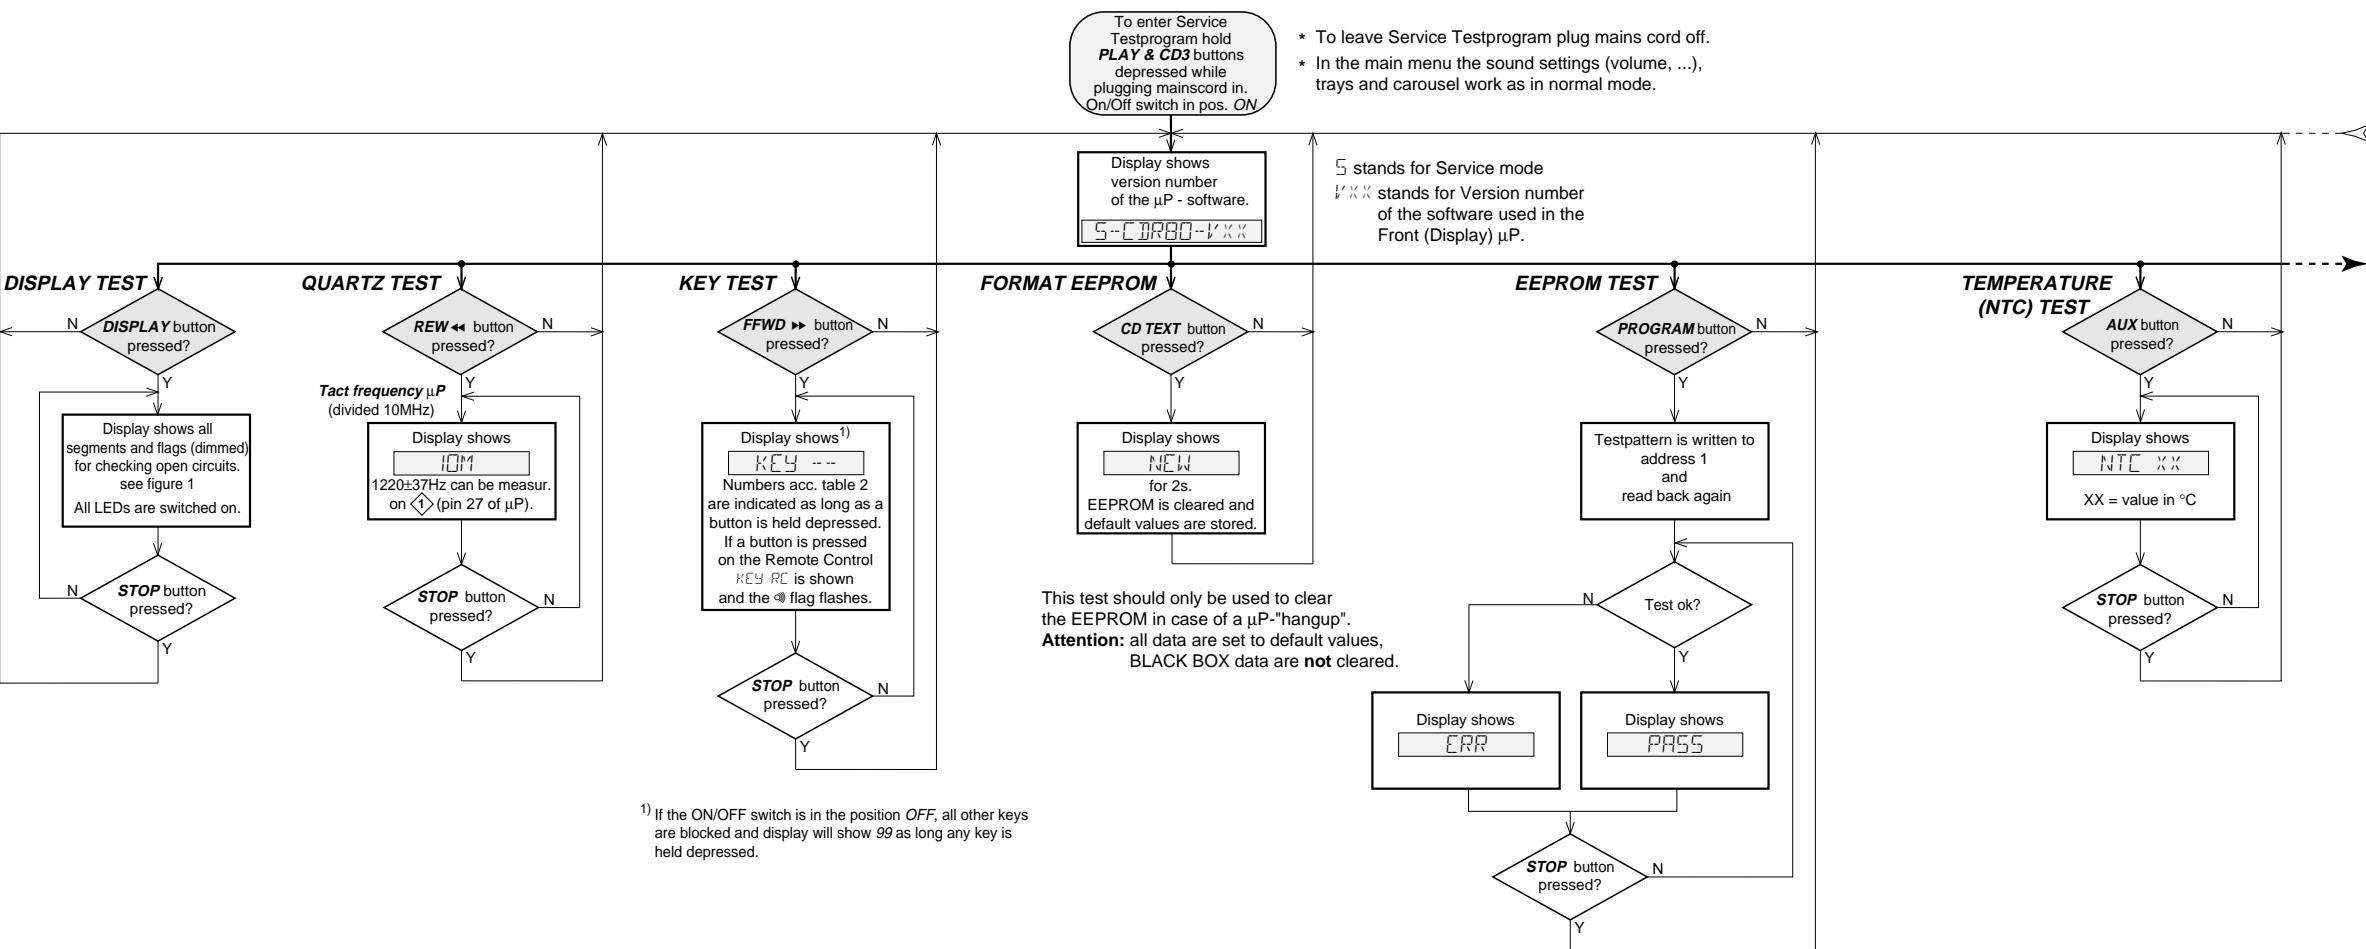

¹⁾ If the ON/OFF switch is in the position OFF, all other keys are blocked and display will show 99 as long any key is held depressed.

KEY CODES

KEY	KEY CODE	KEY	KEY CODE
OPEN/CLOSE (CDC)	0	CD1	14
CD CHANGE	1	COPY CD	15
AUX	2	COMPILE CD	16
CDR	3	RECORD	17
DISPLAY	4	PLAY/PAUSE	18
SHUFFLE	5	◀	20
PROGRAM	6	▶	22
NO /CANCEL	21	YES /ENTER	23
CD TEXT /EDIT	7	SPEED (CDR820 only))	24
A-B EDIT	8	FINALIZE CD	10
ERASE CD	9	OPEN/CLOSE (CDR)	25
FINALIZE CD	10	REC LEVEL	11
REC LEVEL	11	ON/OFF	99
CD3	12	STOP	exit test
CD2	13		

table 2



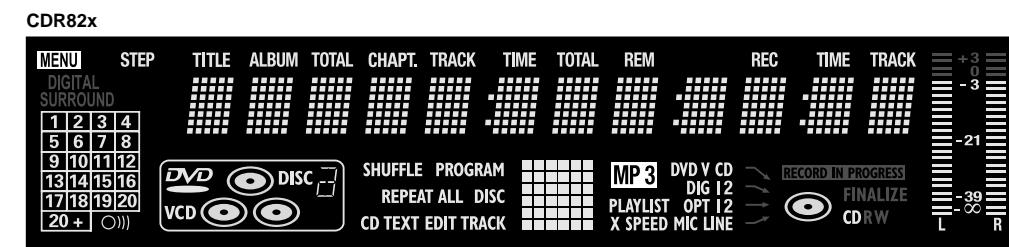


fig. 1

SERVICE TESTPROGRAM

CDR MODULE

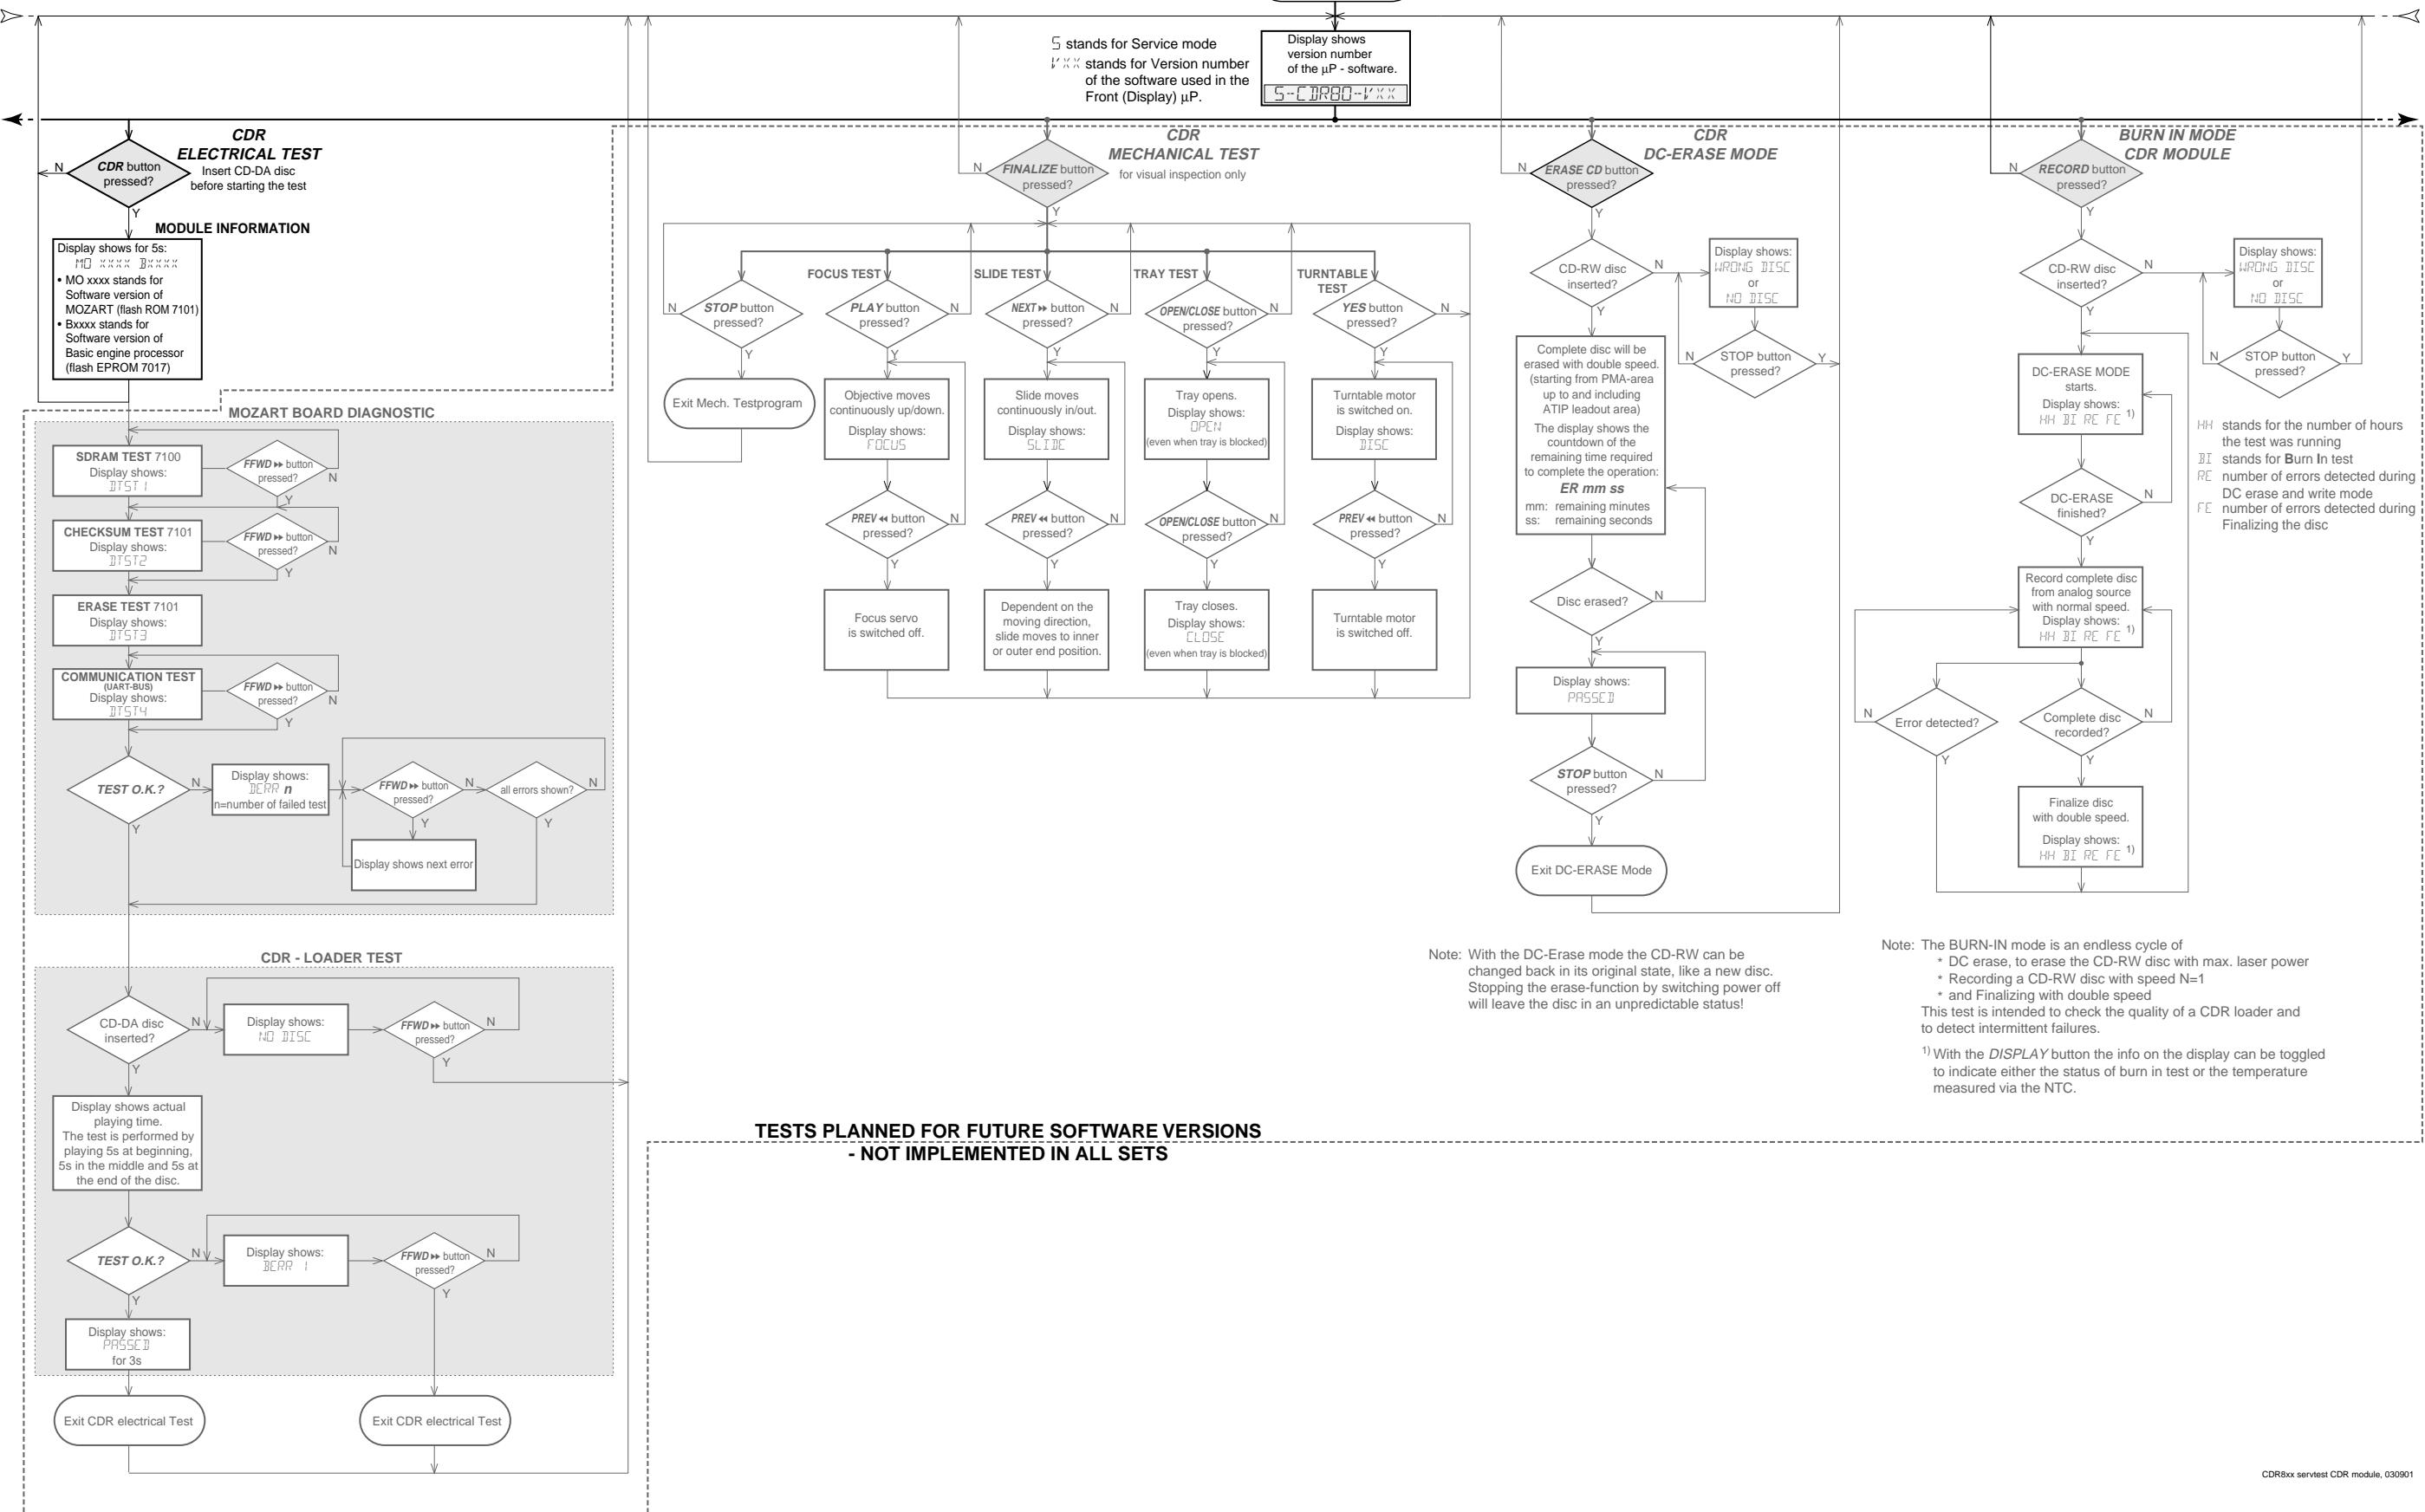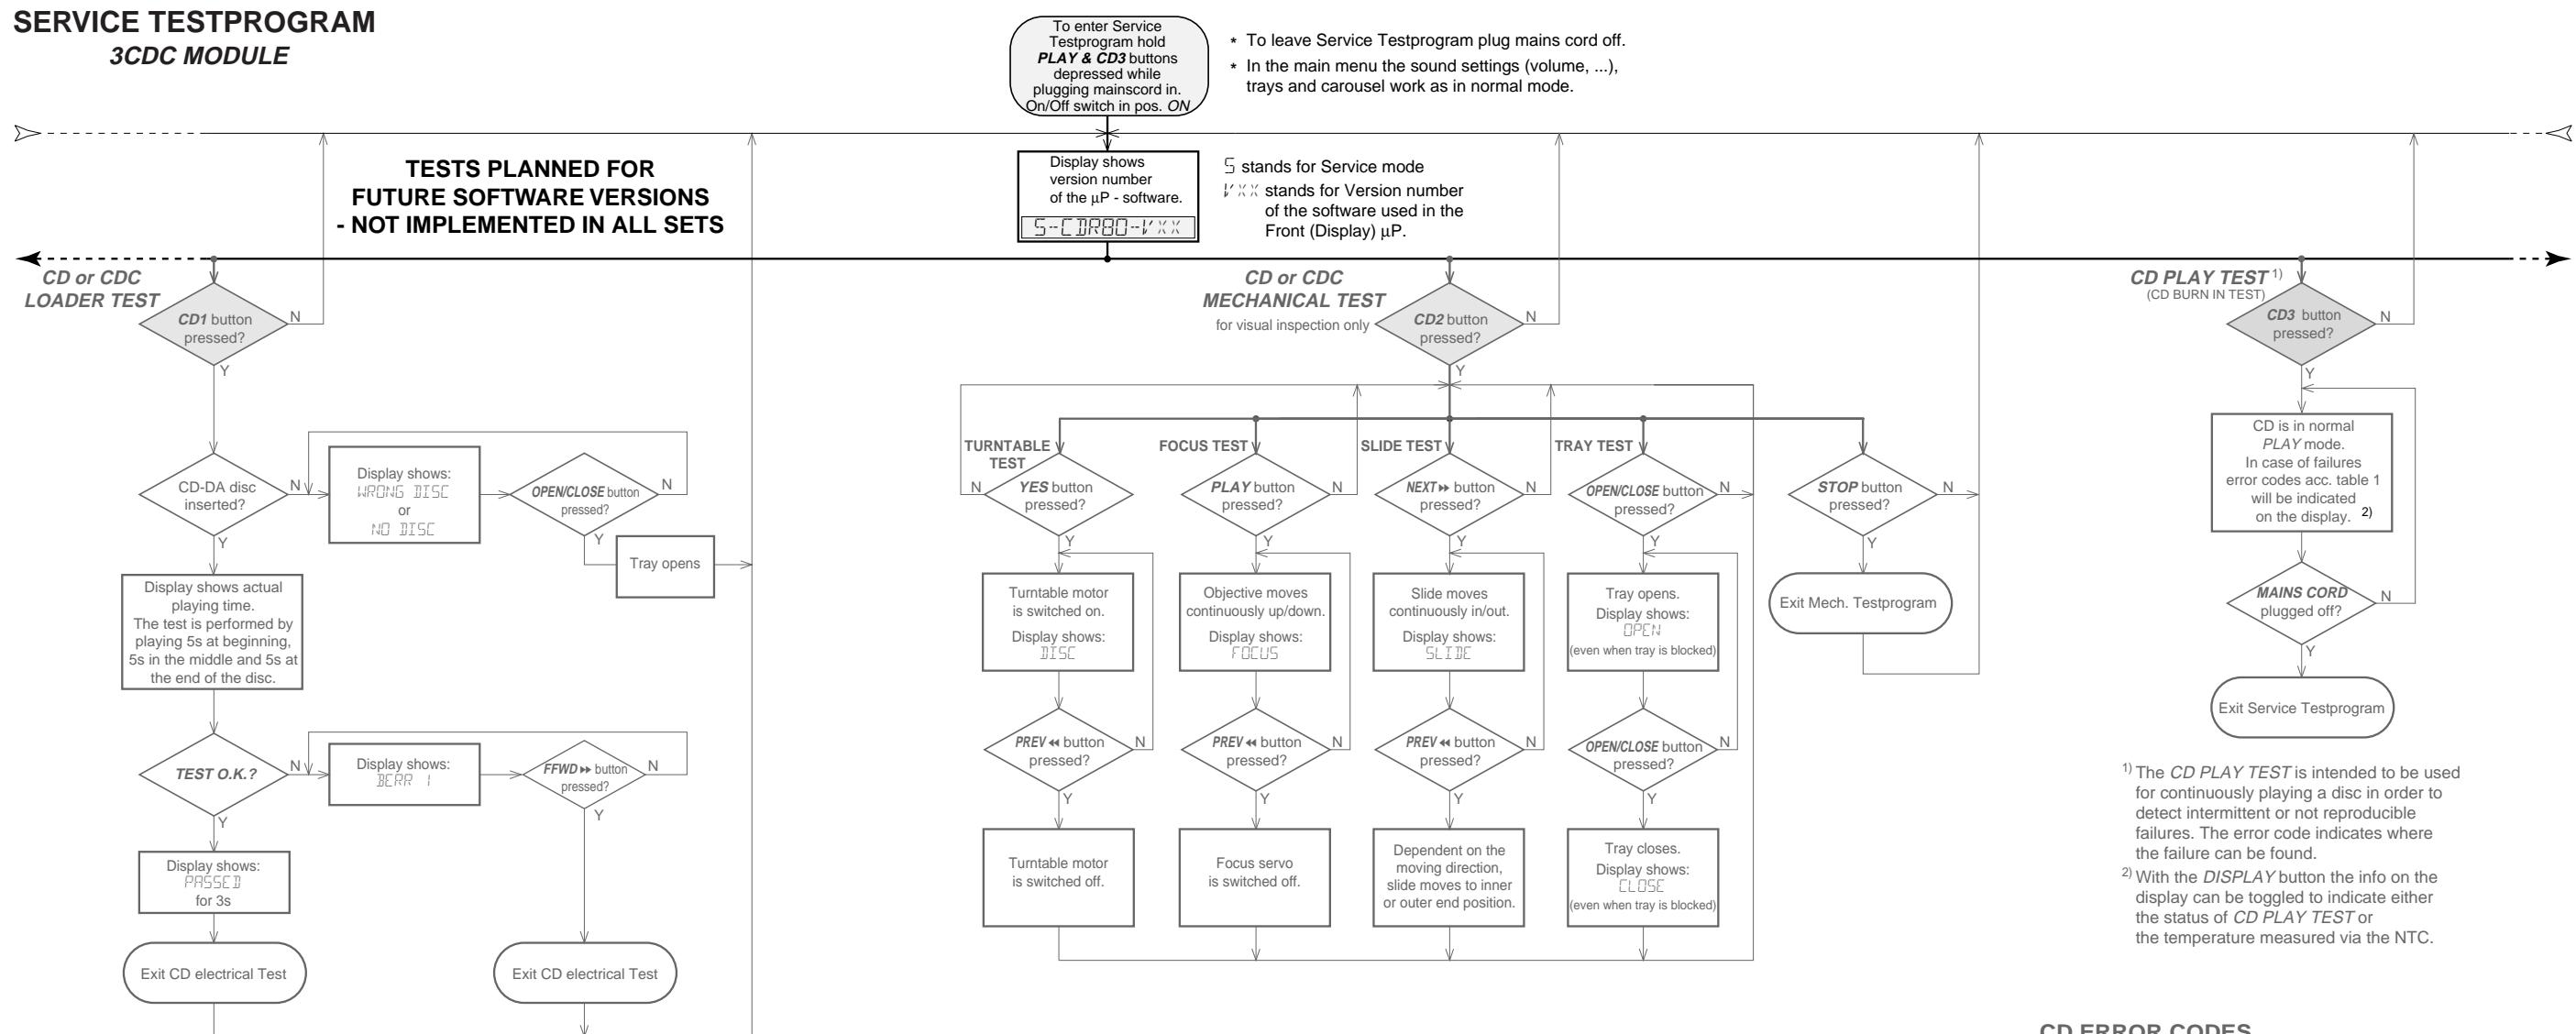

SERVICE TESTPROGRAM
3CDC MODULE


¹⁾ The **CD PLAY TEST** is intended to be used for continuously playing a disc in order to detect intermittent or not reproducible failures. The error code indicates where the failure can be found.

²⁾ With the **DISPLAY** button the info on the display can be toggled to indicate either the status of **CD PLAY TEST** or the temperature measured via the NTC.


CD ERROR CODES


Error number	Error description	Error type
E1000	Focus Error Triggered when the focus is lost for more than 250ms while playing the CD.	W
E1001	Radial error Triggered when the radial servo is not on track for a certain time during playing the CD.	W
E1002	Slide-in error Generated when the inner-switch did not close within approx. 6s when the pick up is moved inside. Inner-switch or slide motor problems.	W
E1003	Slide-out error Generated when the inner-switch did not open within approx. 250ms when the pick up is moved from the inner position outside. Inner-switch or slide motor problems.	W
E1005	Jump error. Triggered when the servo processor counts too less tracks in a defined time during JUMPS. This can be caused by a disturbed HF-signal (the tracks cannot be recognized exactly), slide motor problems, track servo problems or scratched discs.	W
E1006	Subcode Error No valid subcode for 300ms during PLAY .	W
E1007	PLL lock error When no valid subcode was found within 300ms PLL is checked. If PLL is locked E1006 will be indicated else E1007 and the servo is stopped and restarted once again to recover (as if the user would have pressed STOP and then PLAY immediately).	W
E1008	Disc motor error Generated when the CD could not reach 75% of speed during startup within 1,2s.	W
E1020	Focus Search Error Triggered when the focus could not be found within 4s when starting up the CD.	F


table 1


Error type: W = Warning → set continues operation, message remains on the display until next error occurs or any key is pressed.

F = Fatal Error → set stops operation, message remains on the display.

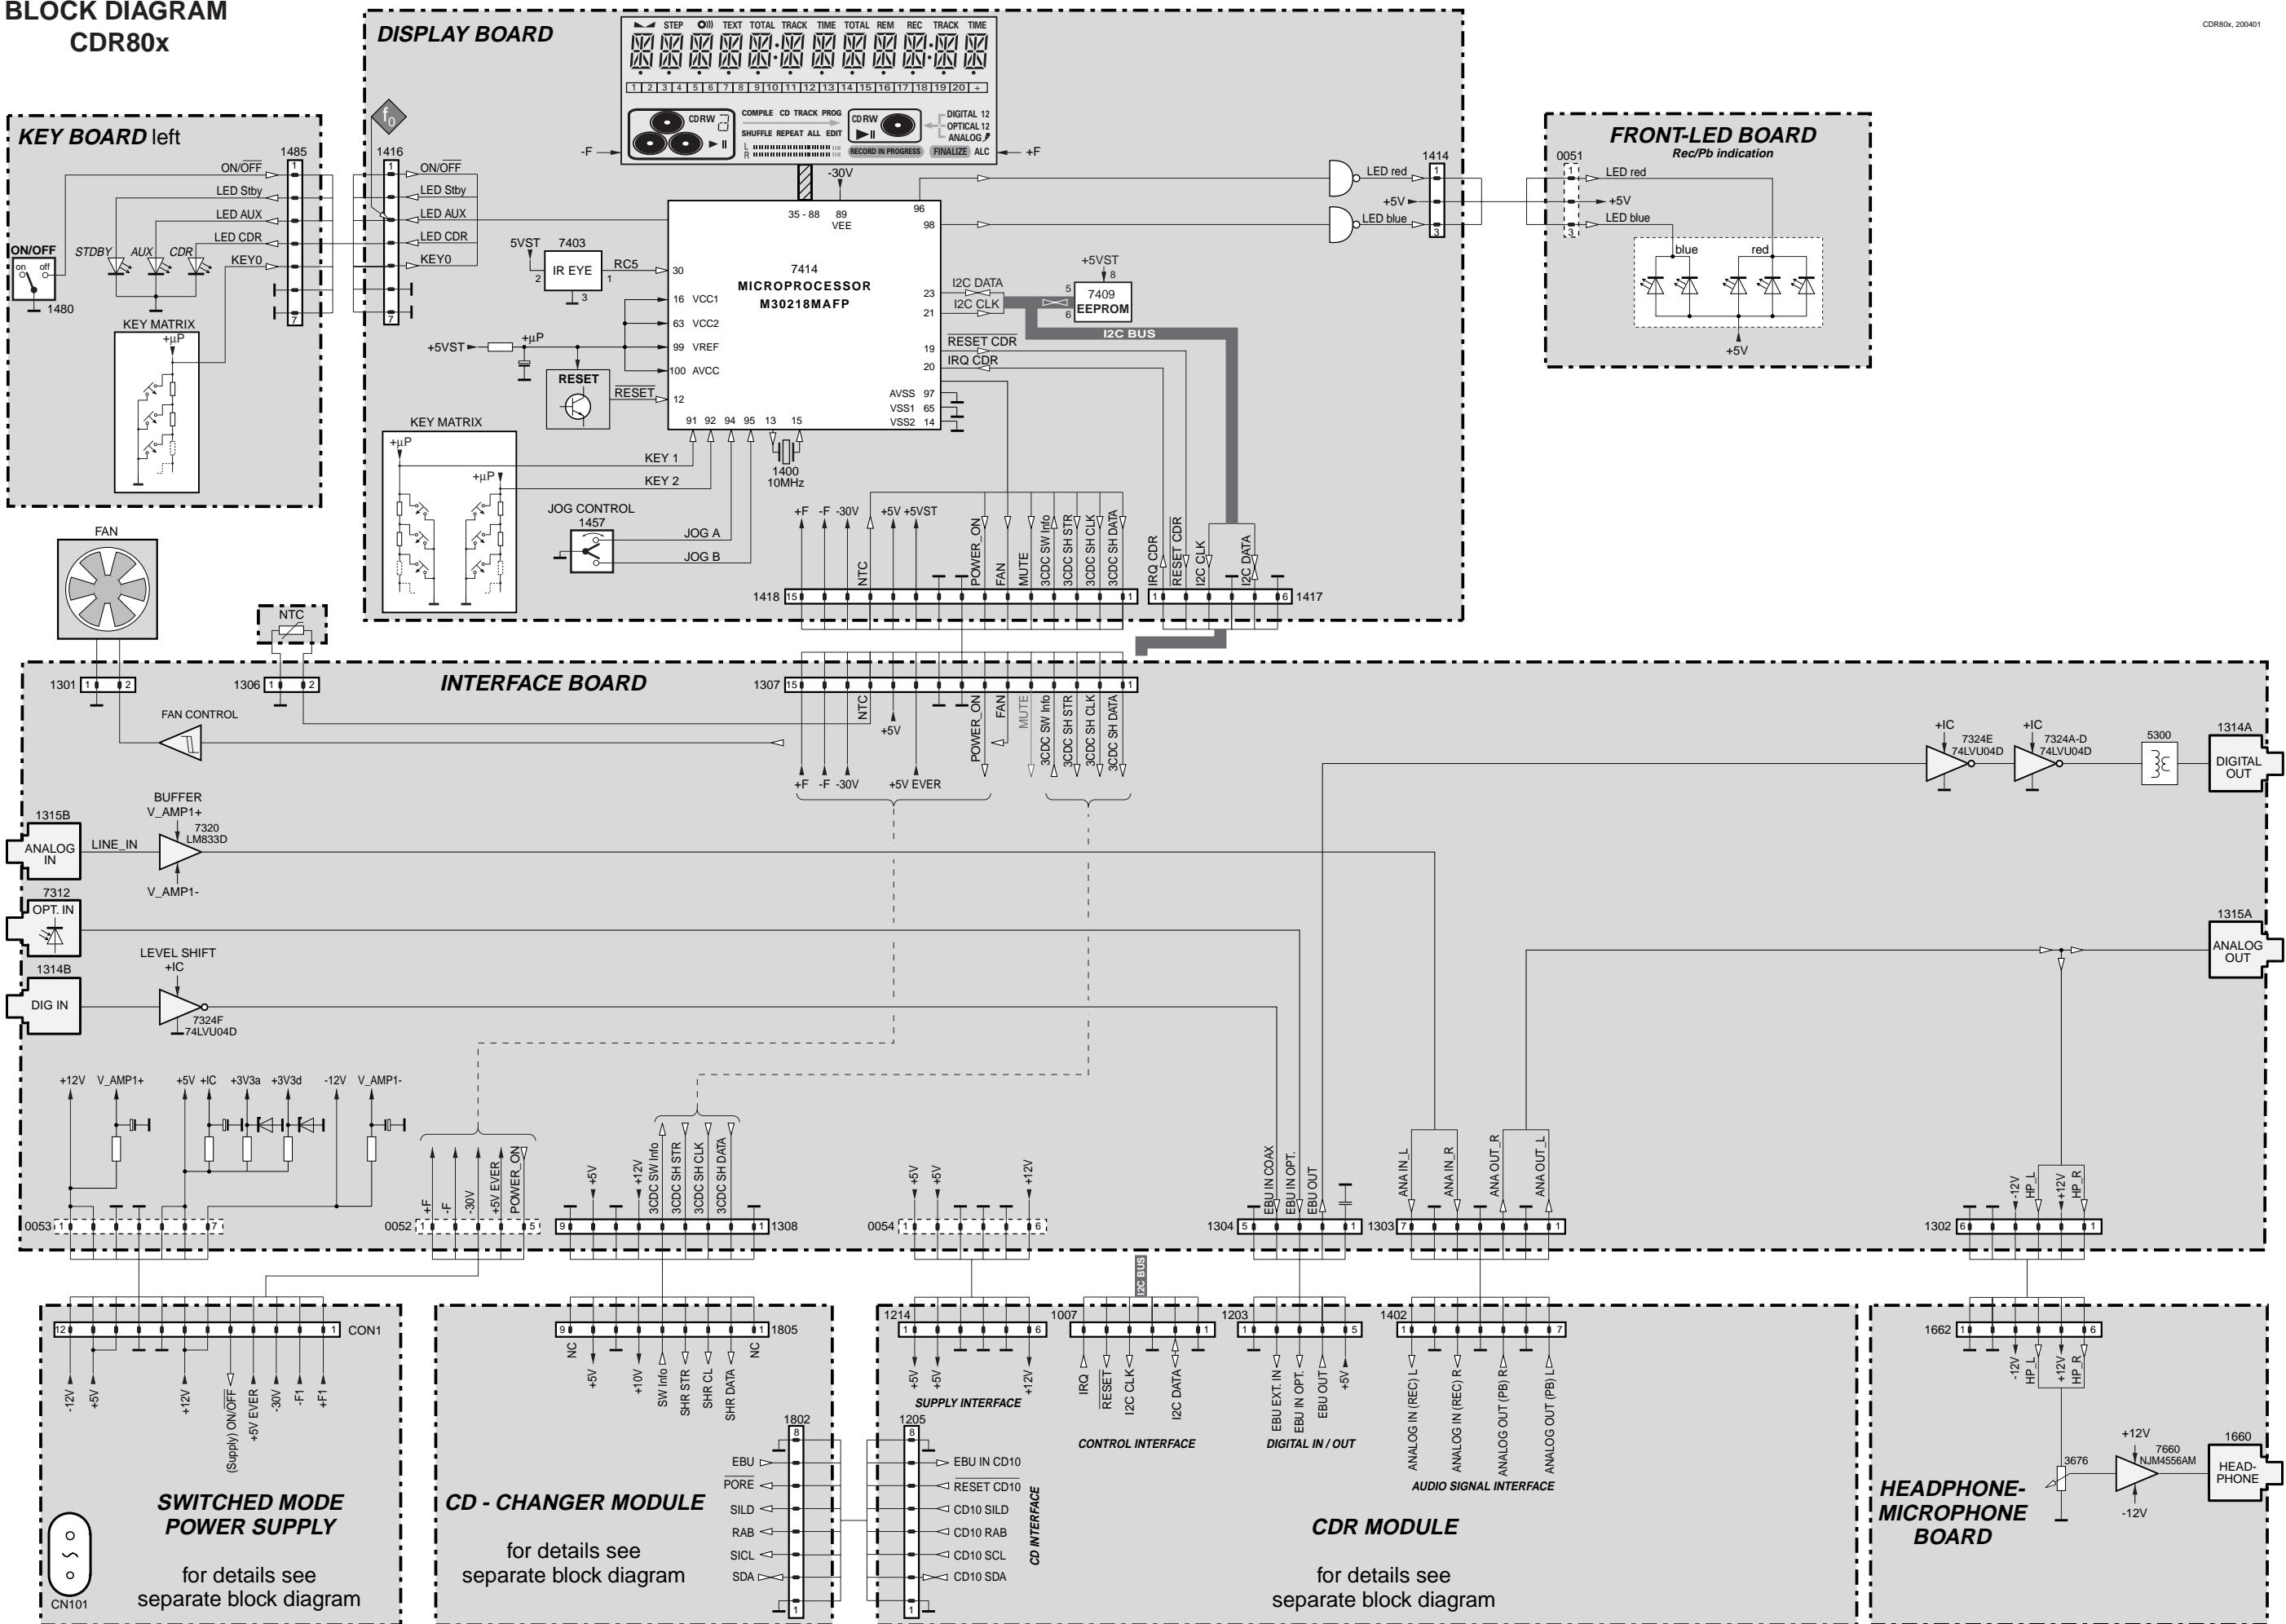BLOCK DIAGRAM
CDR80x

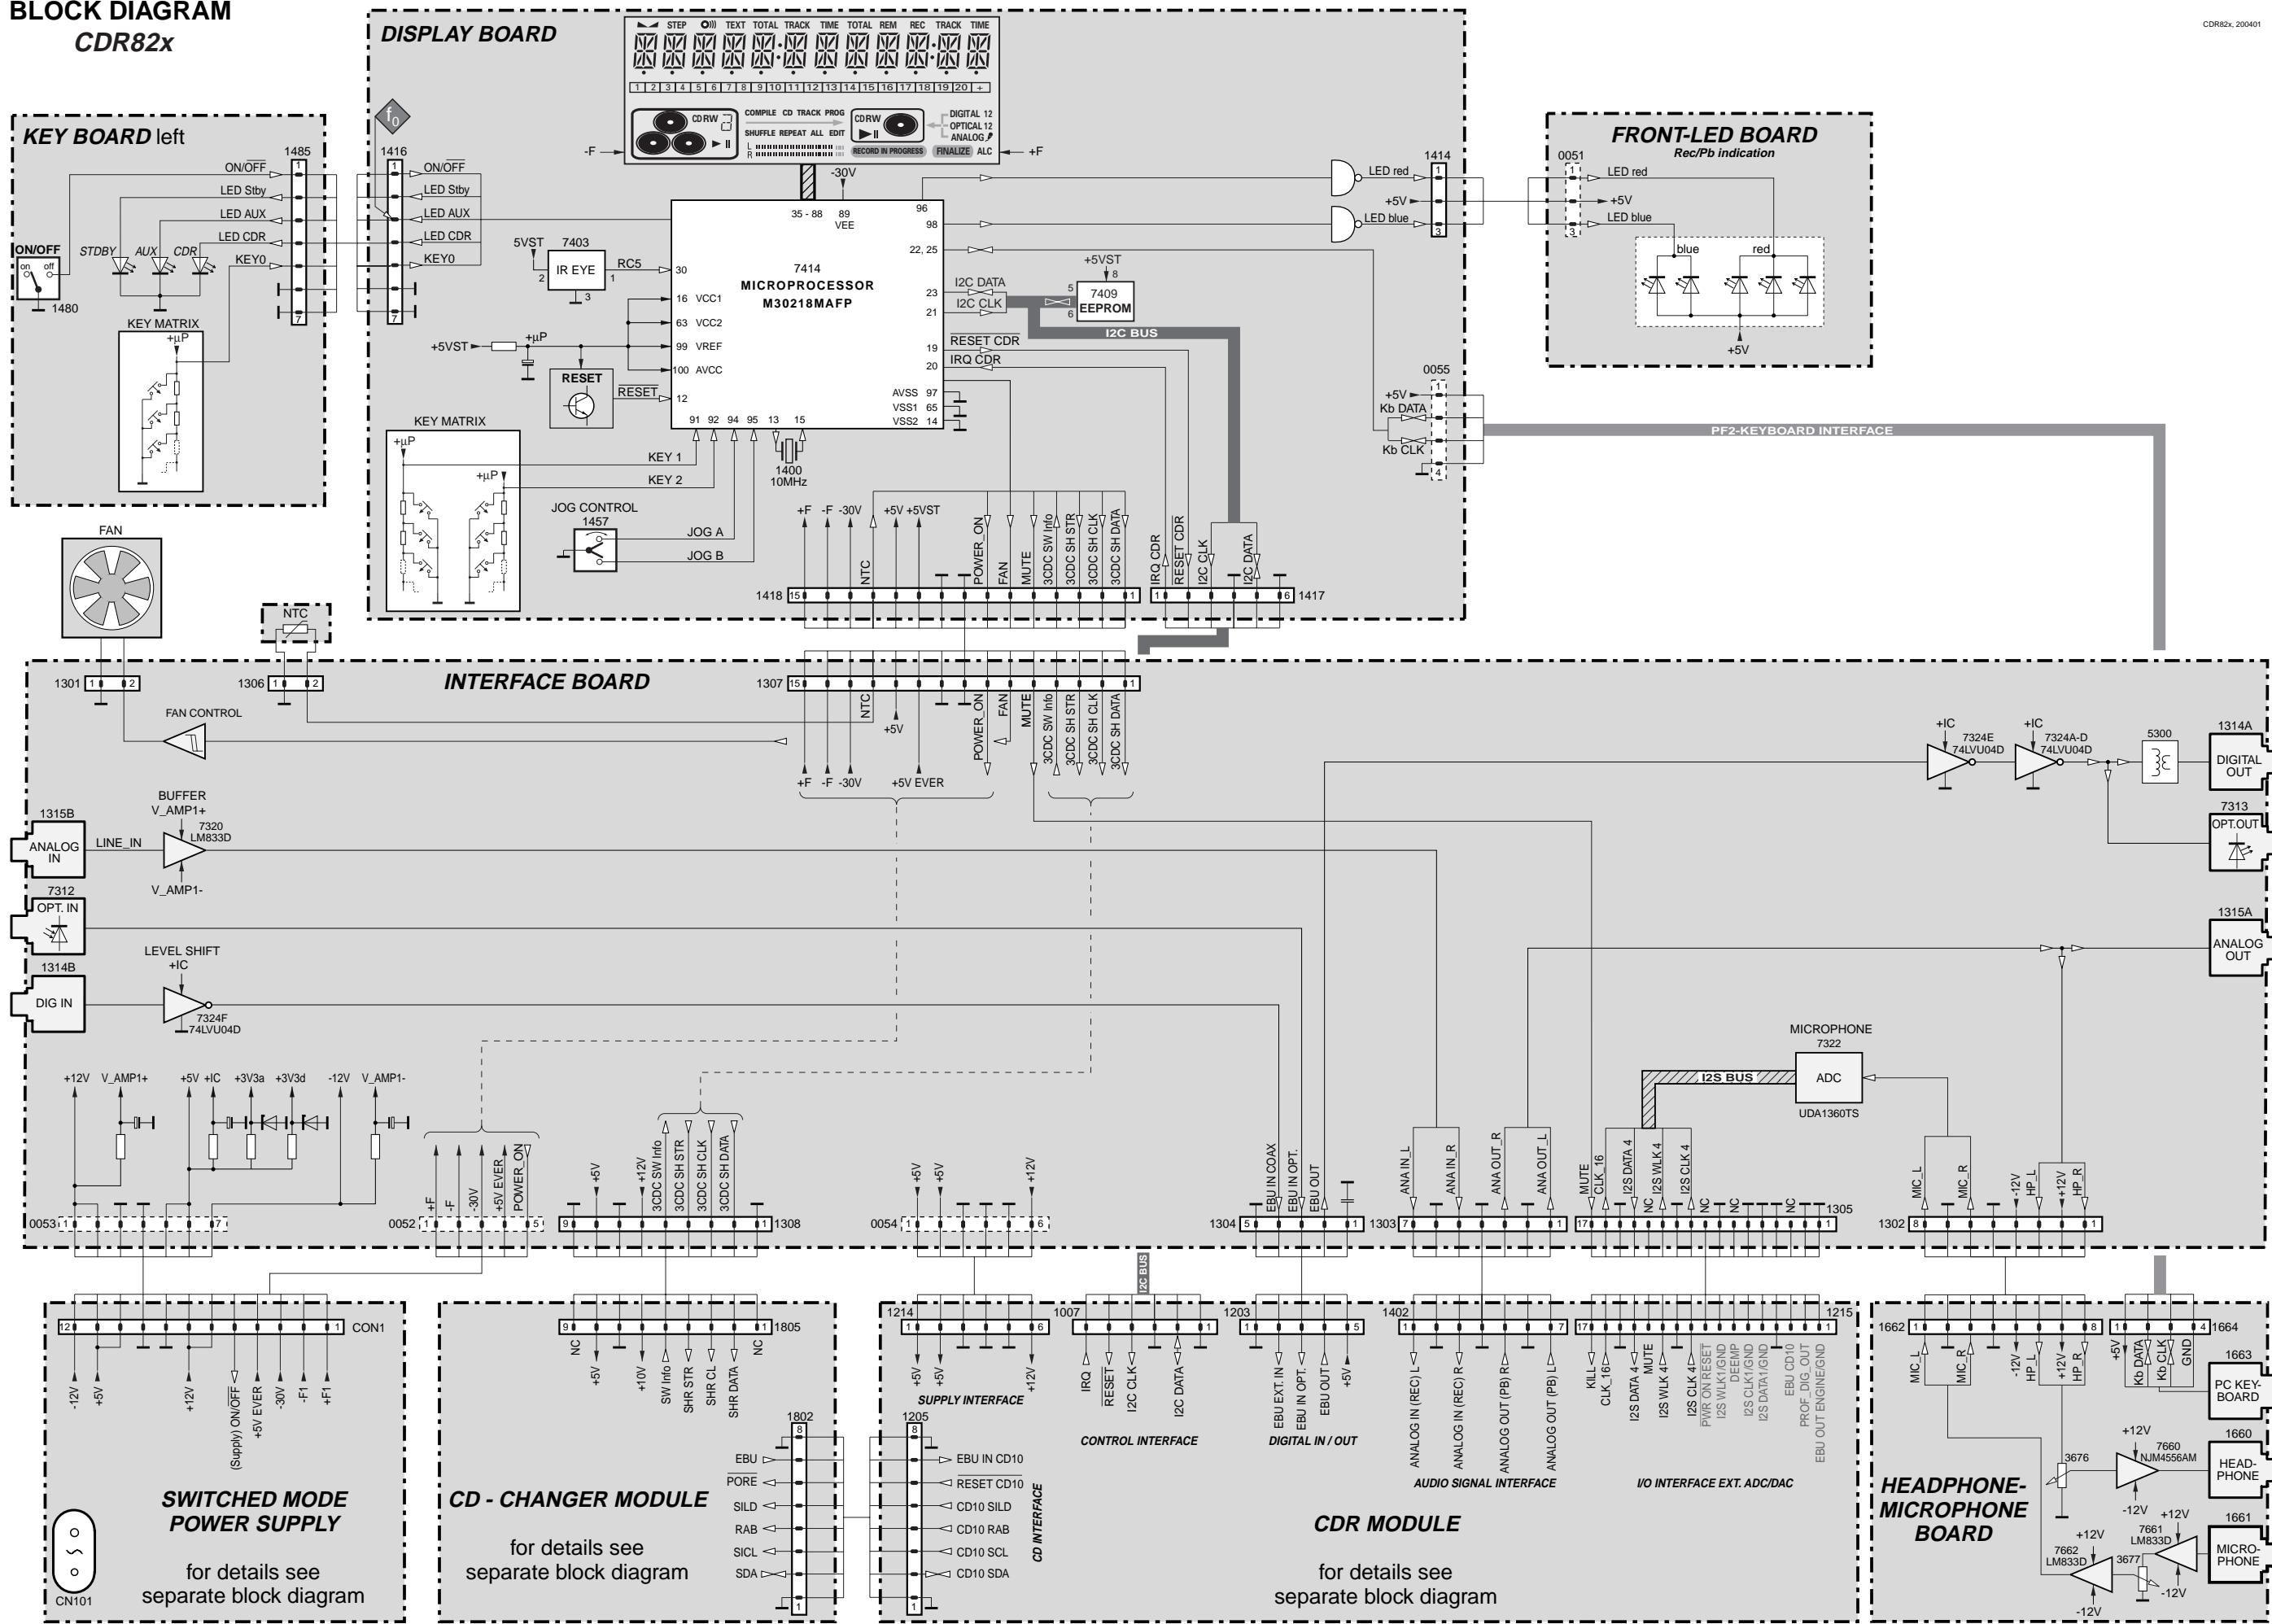
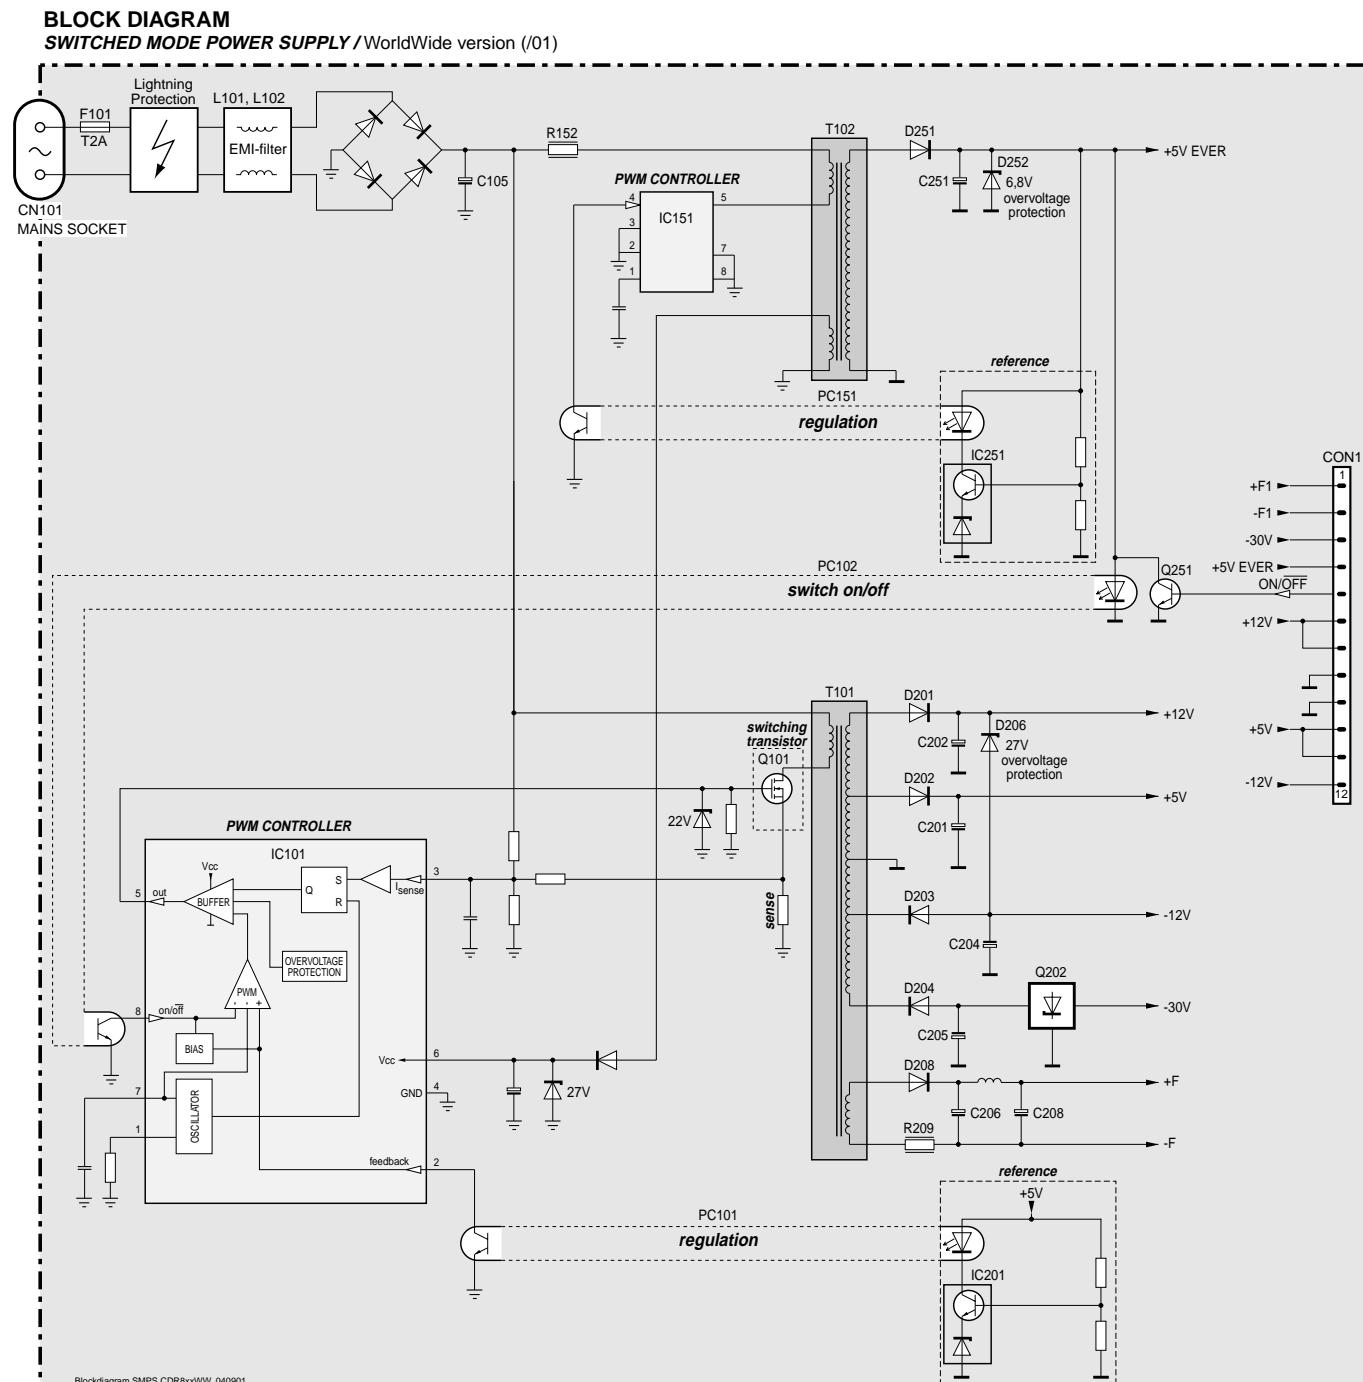
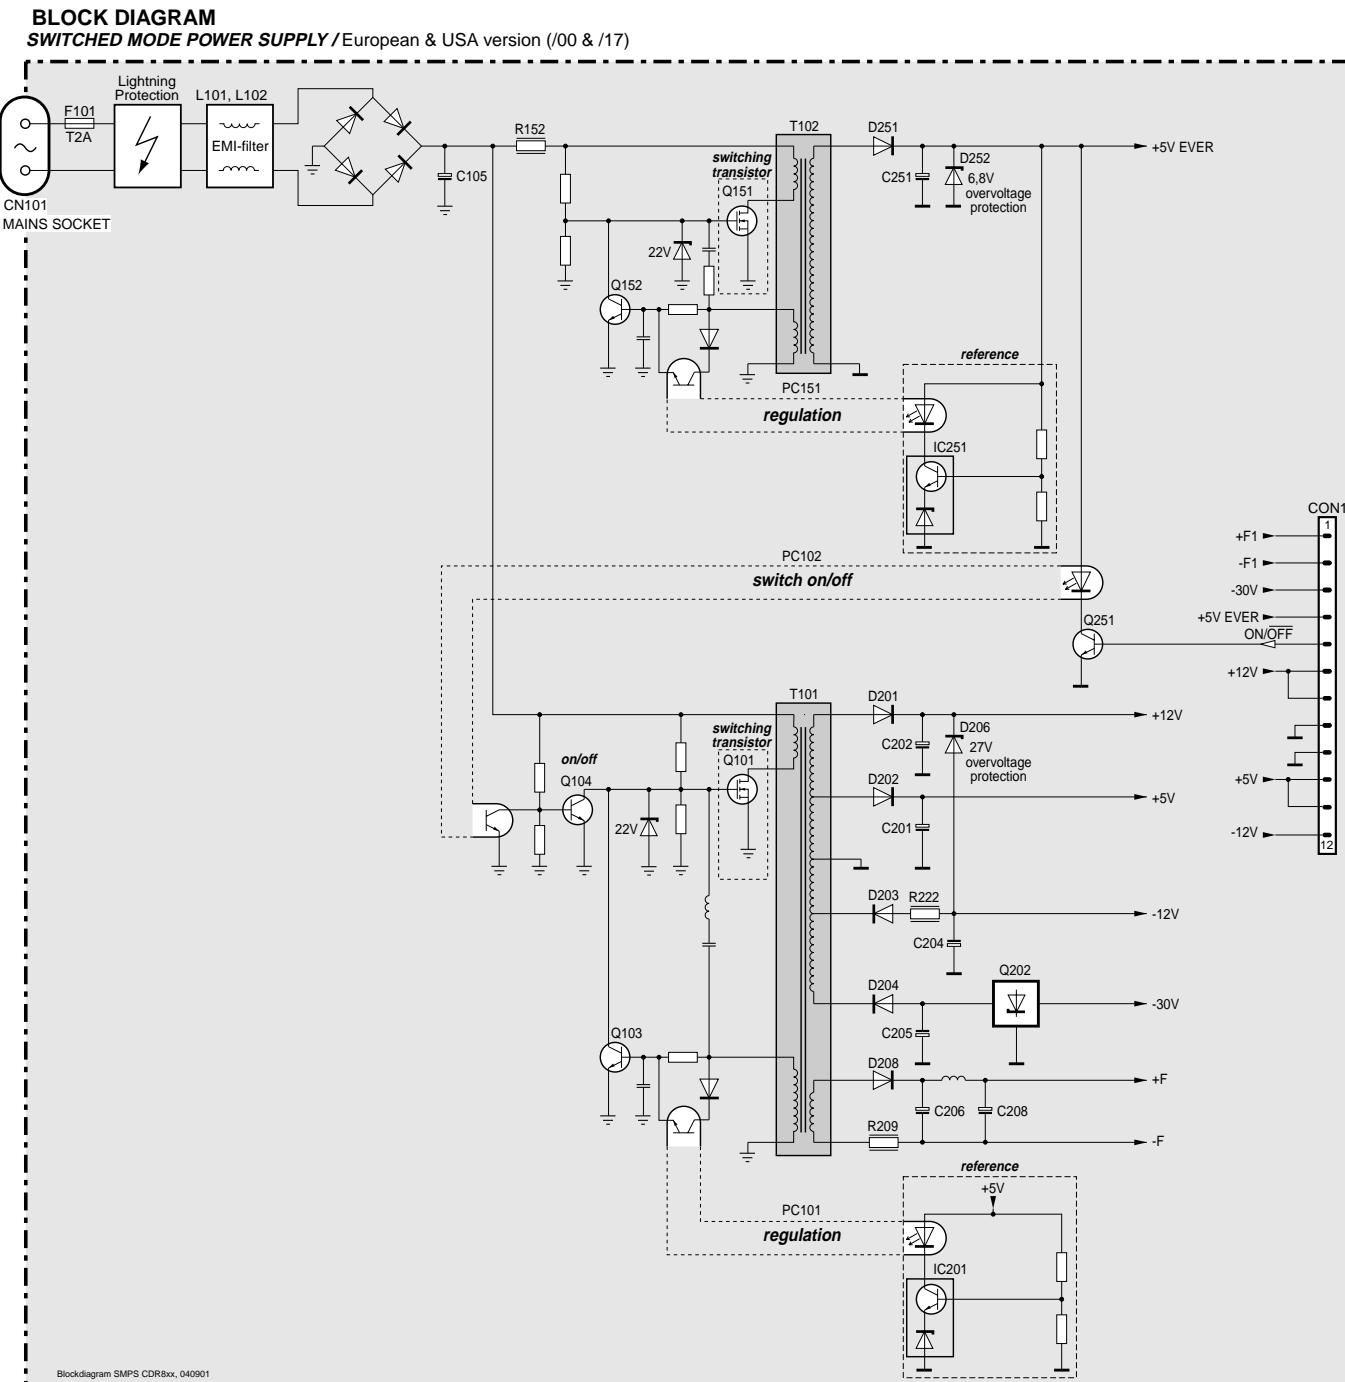
BLOCK DIAGRAM
CDR82x

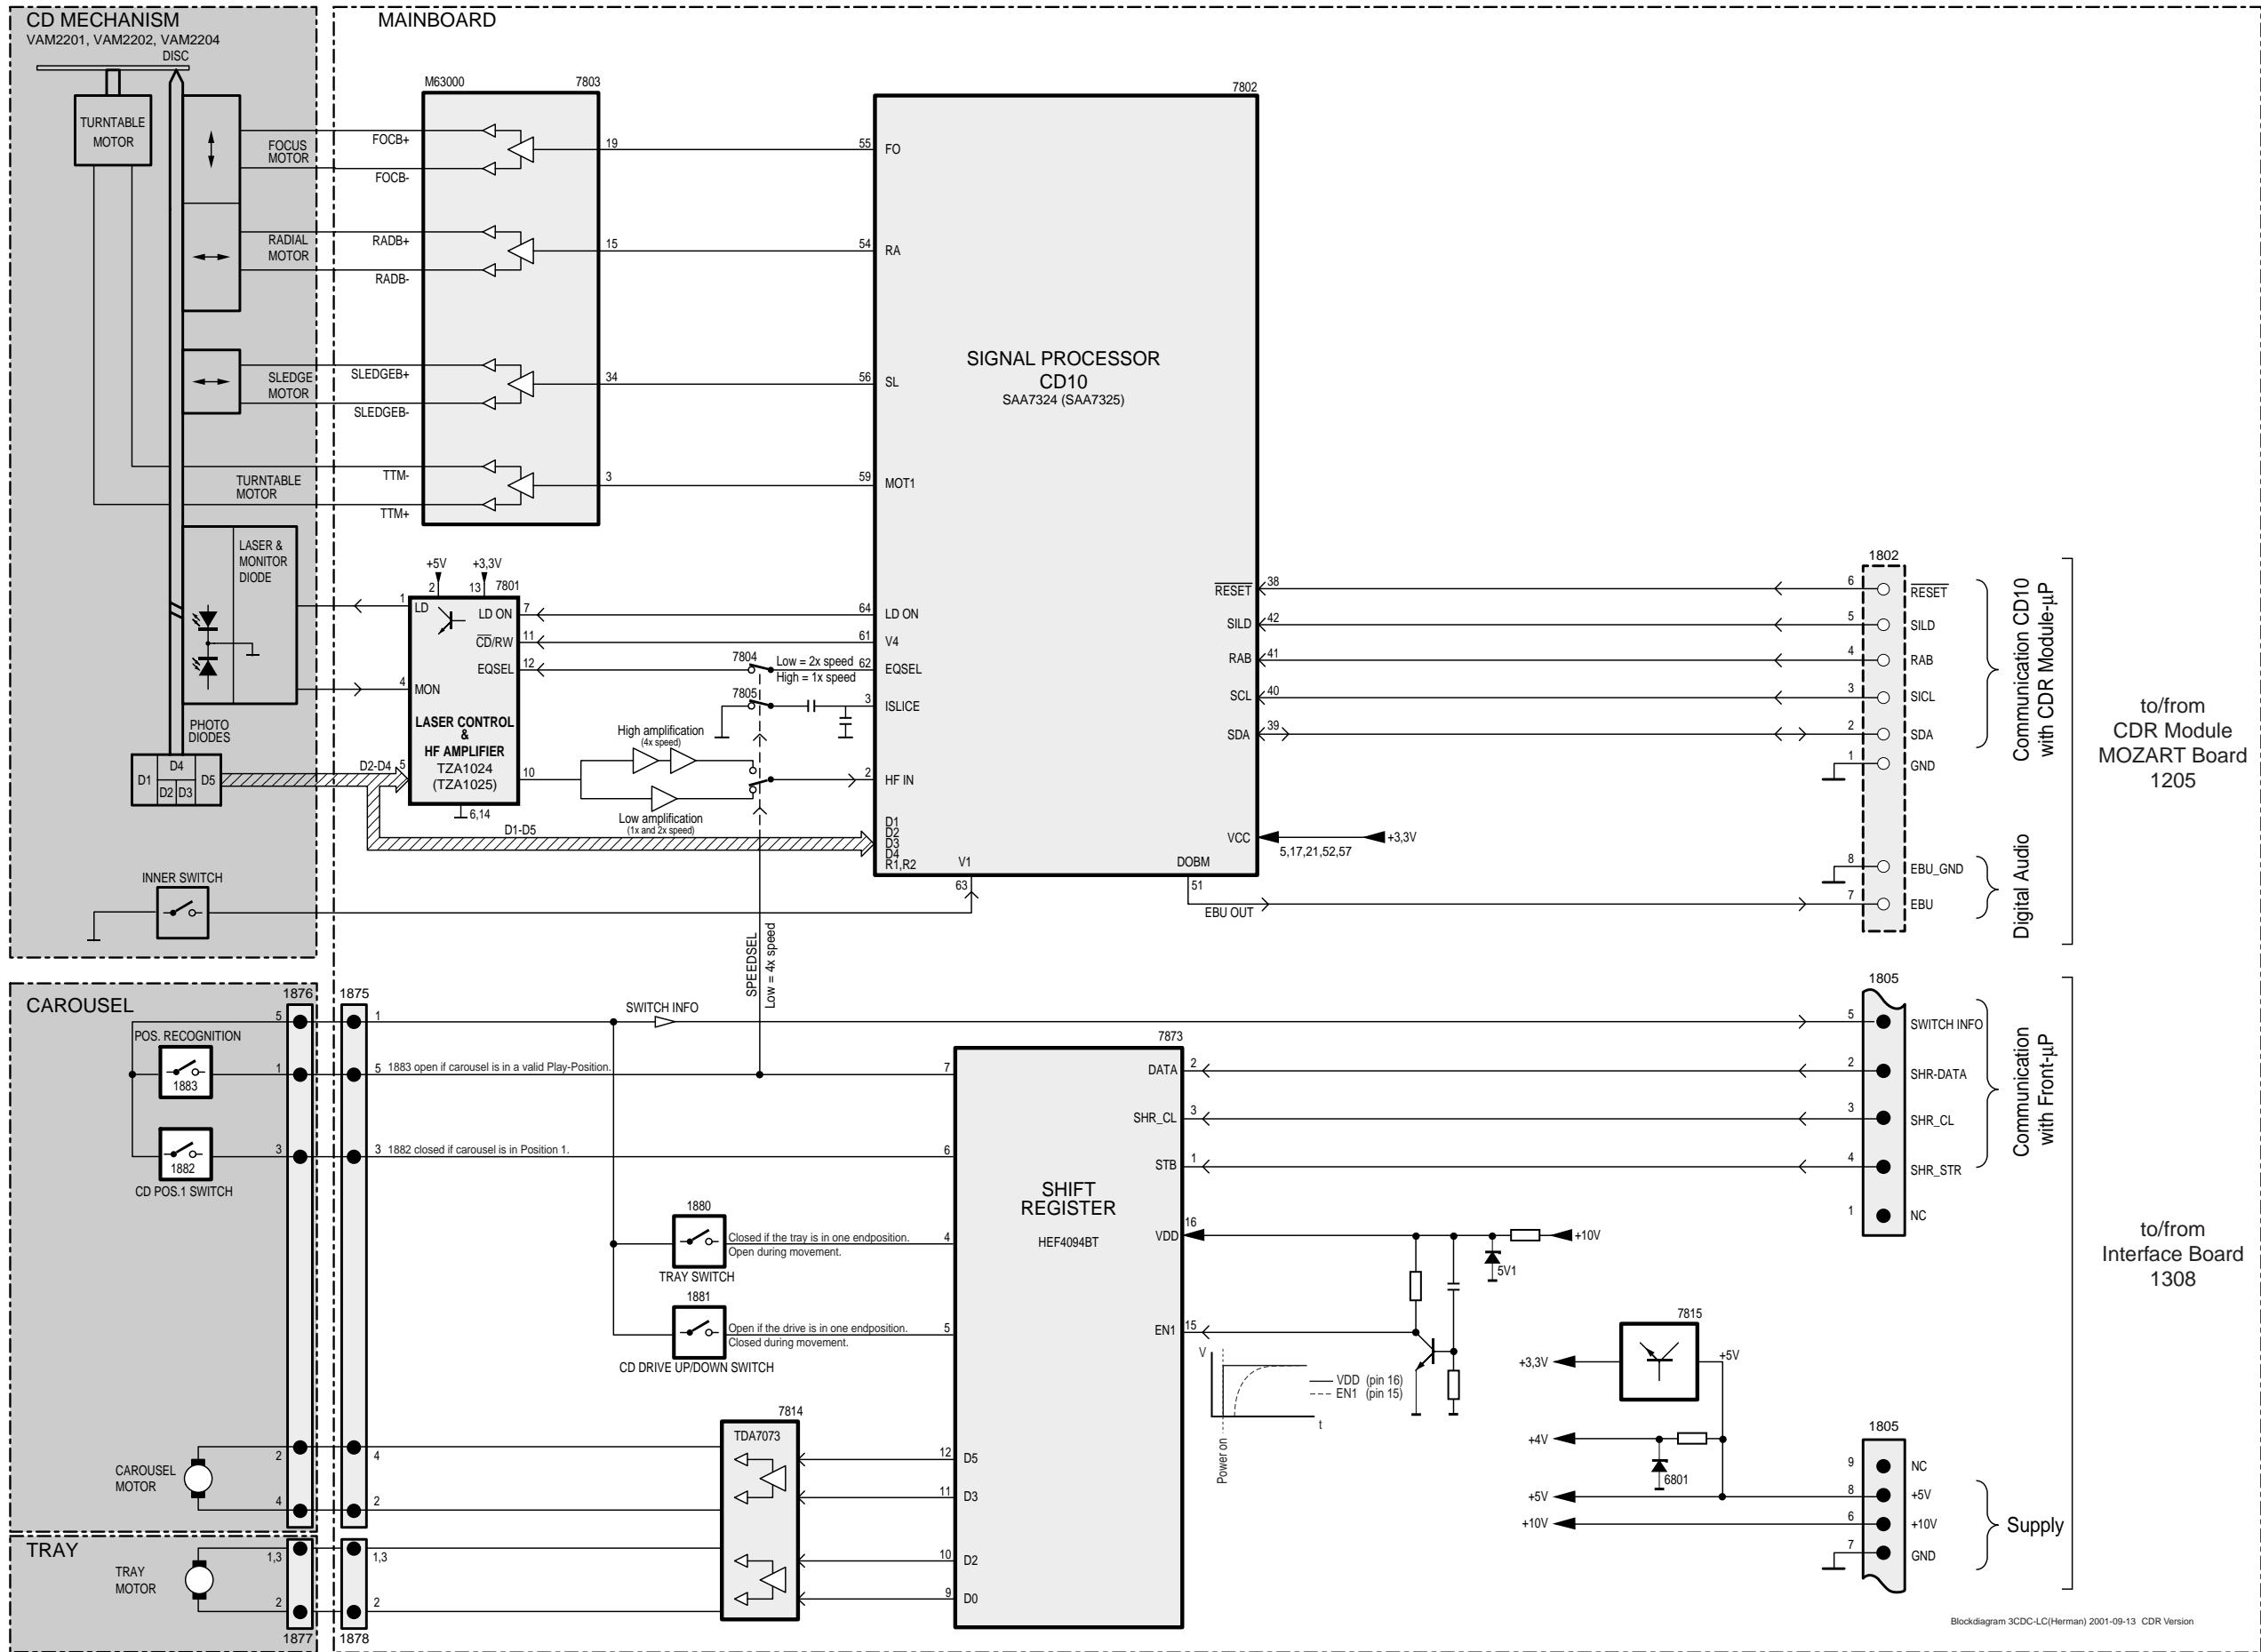
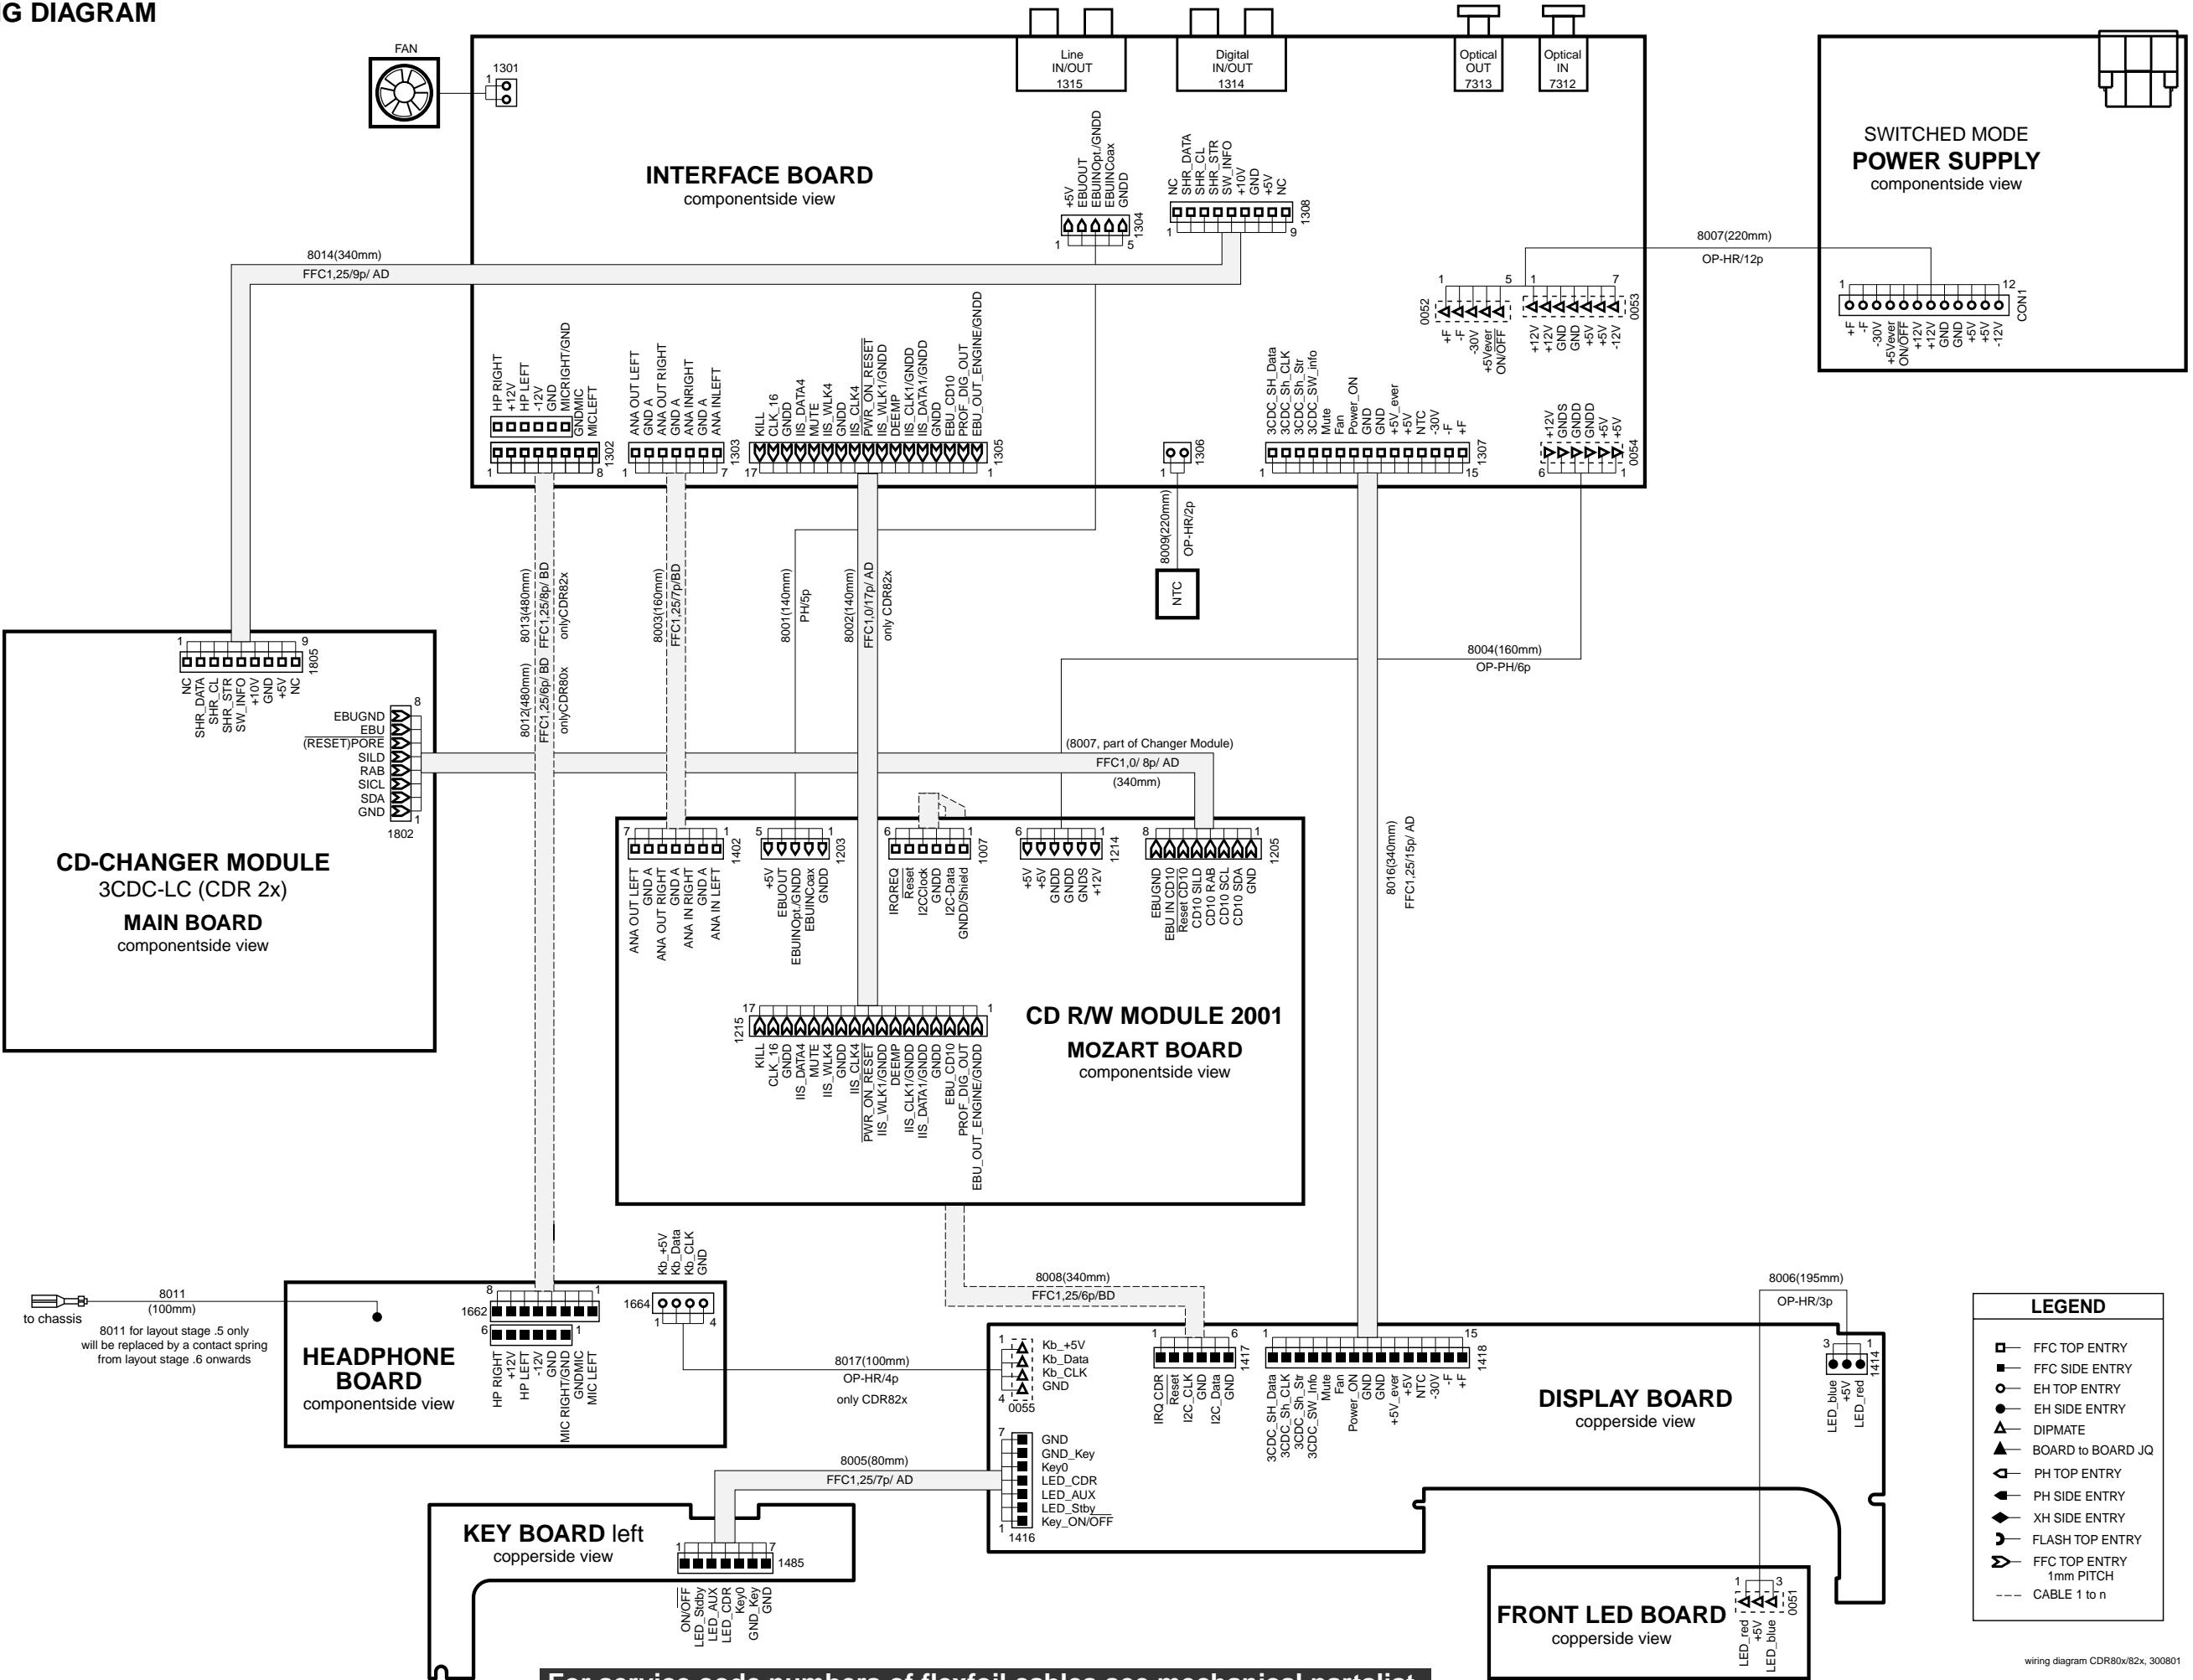
**BLOCK DIAGRAM
3CDC MODULE**

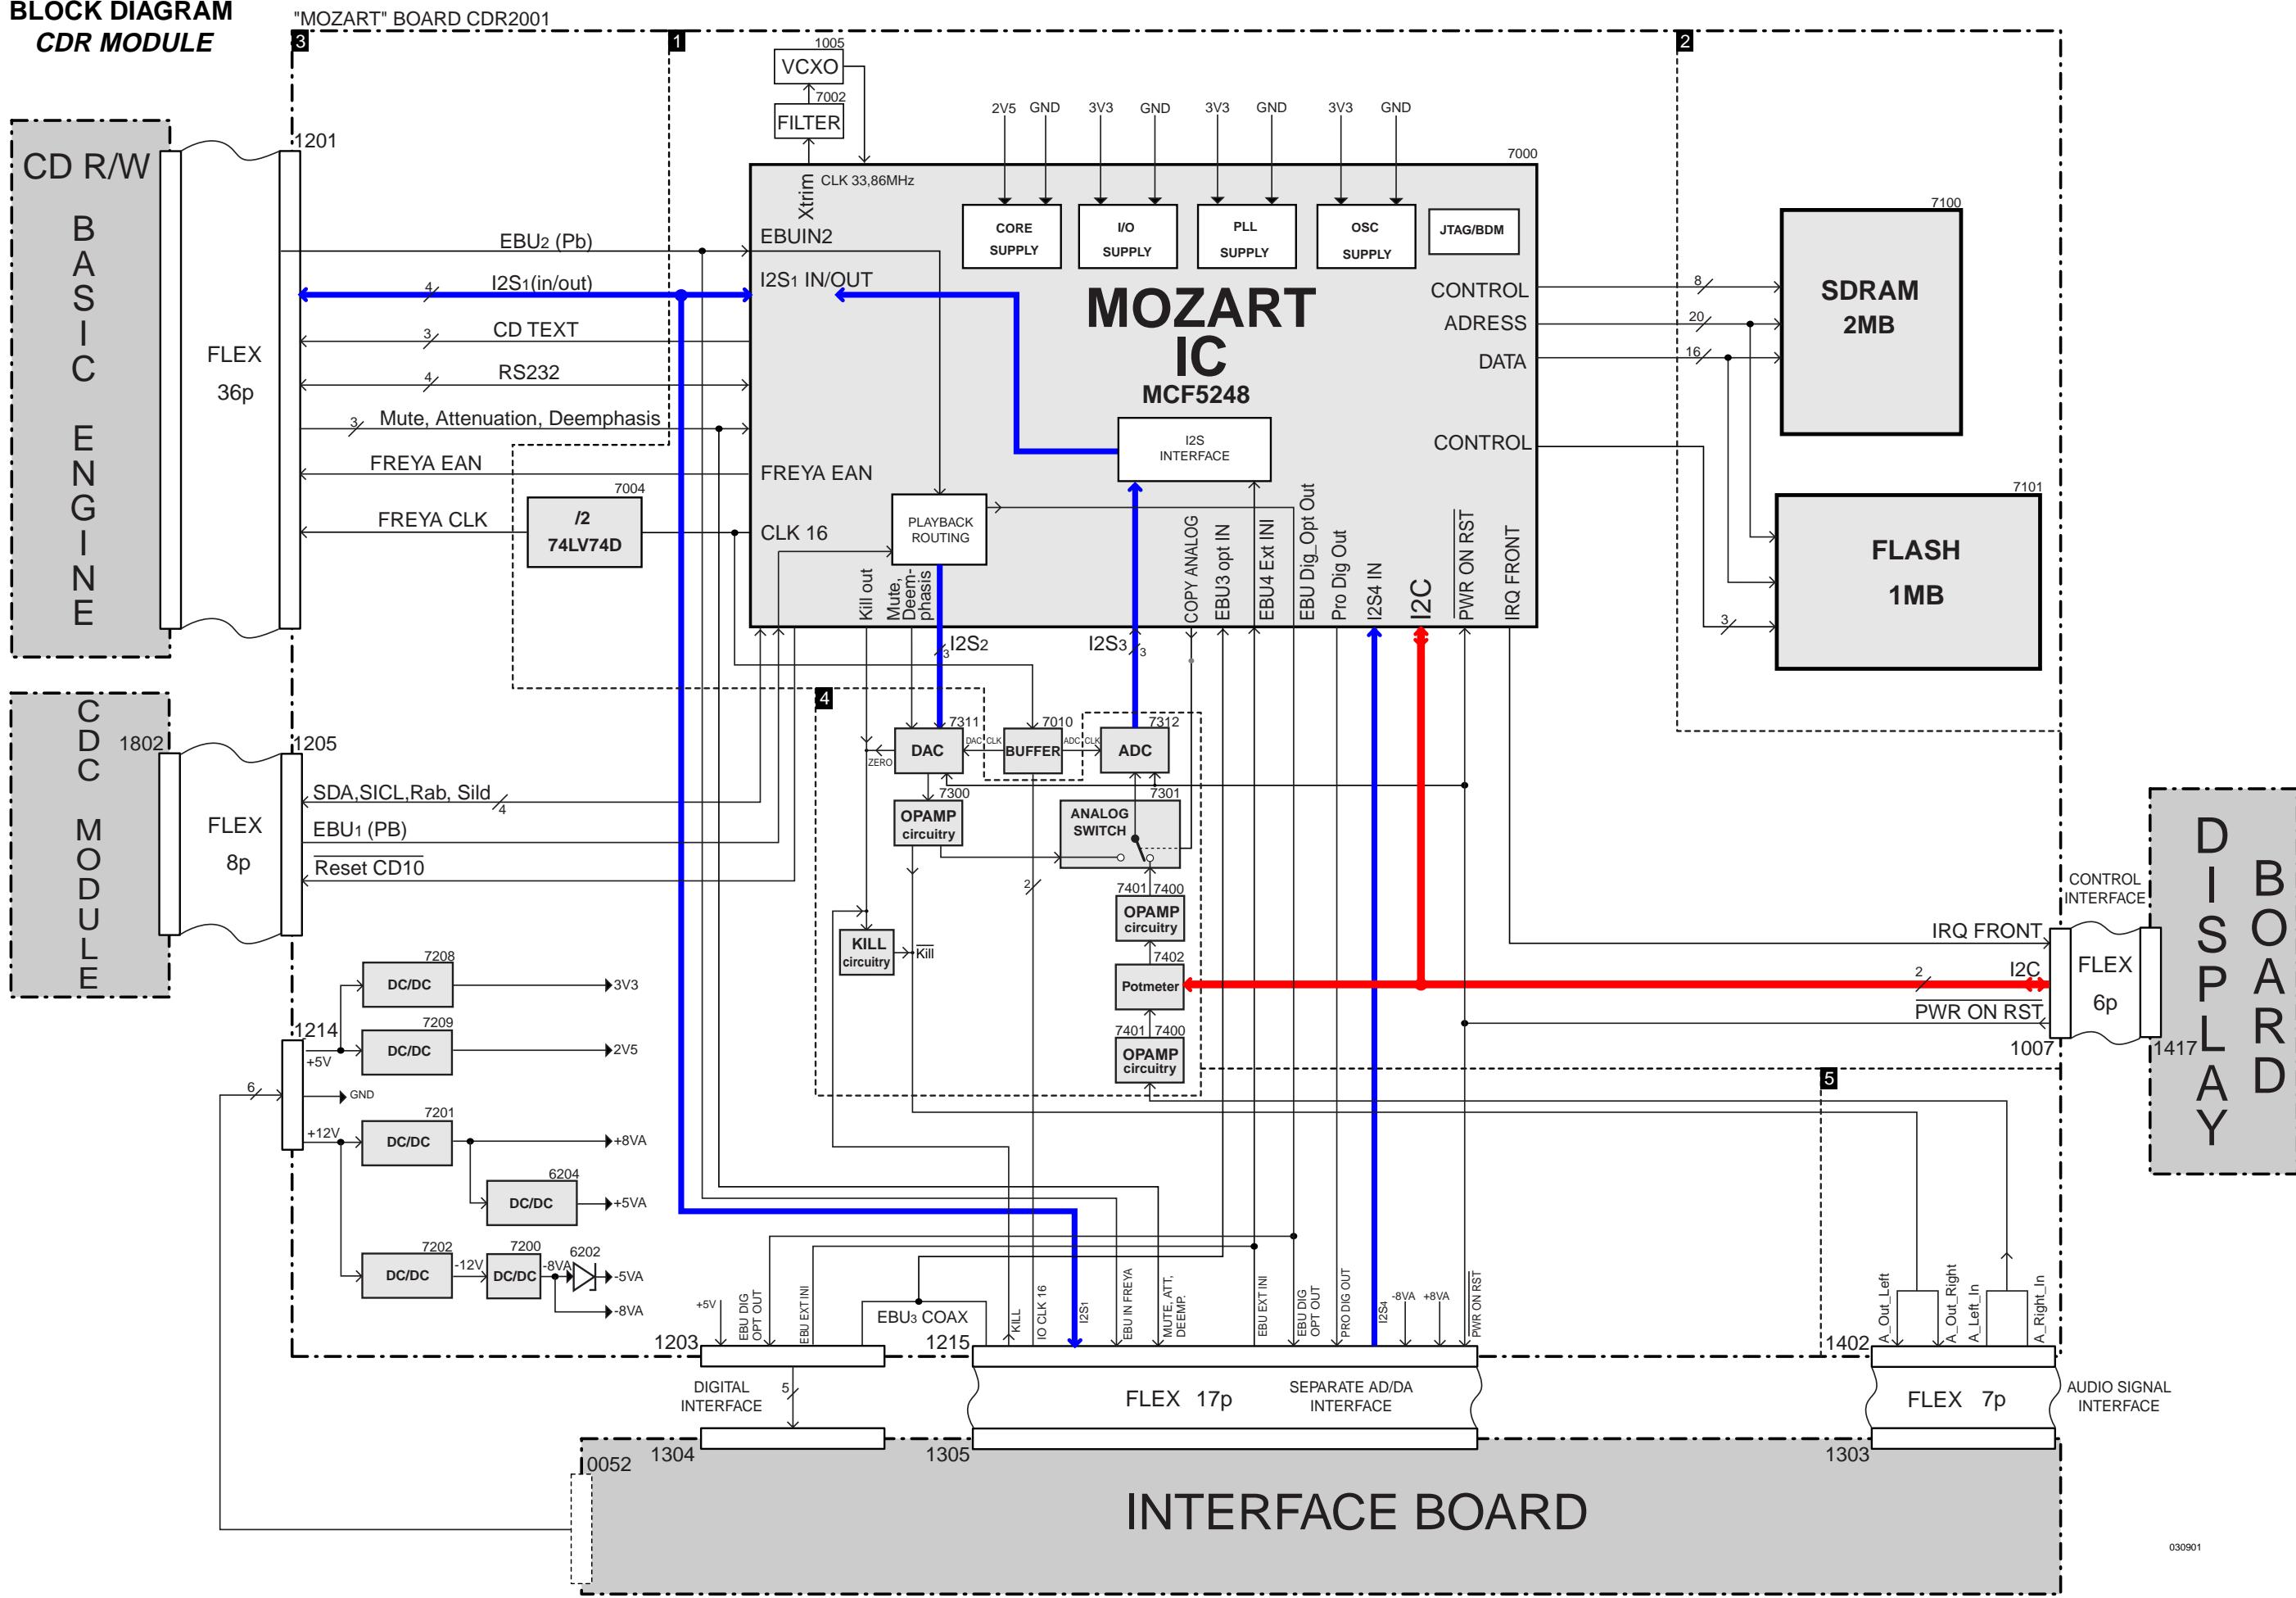
**BLOCK DIAGRAM
CDR MODULE**


INTERFACE BOARD


BLOCK DIAGRAM POWER SUPPLY




WIRING DIAGRAM

Switched Mode Power Supply / EU + USA version (/00/17)


for orientation only

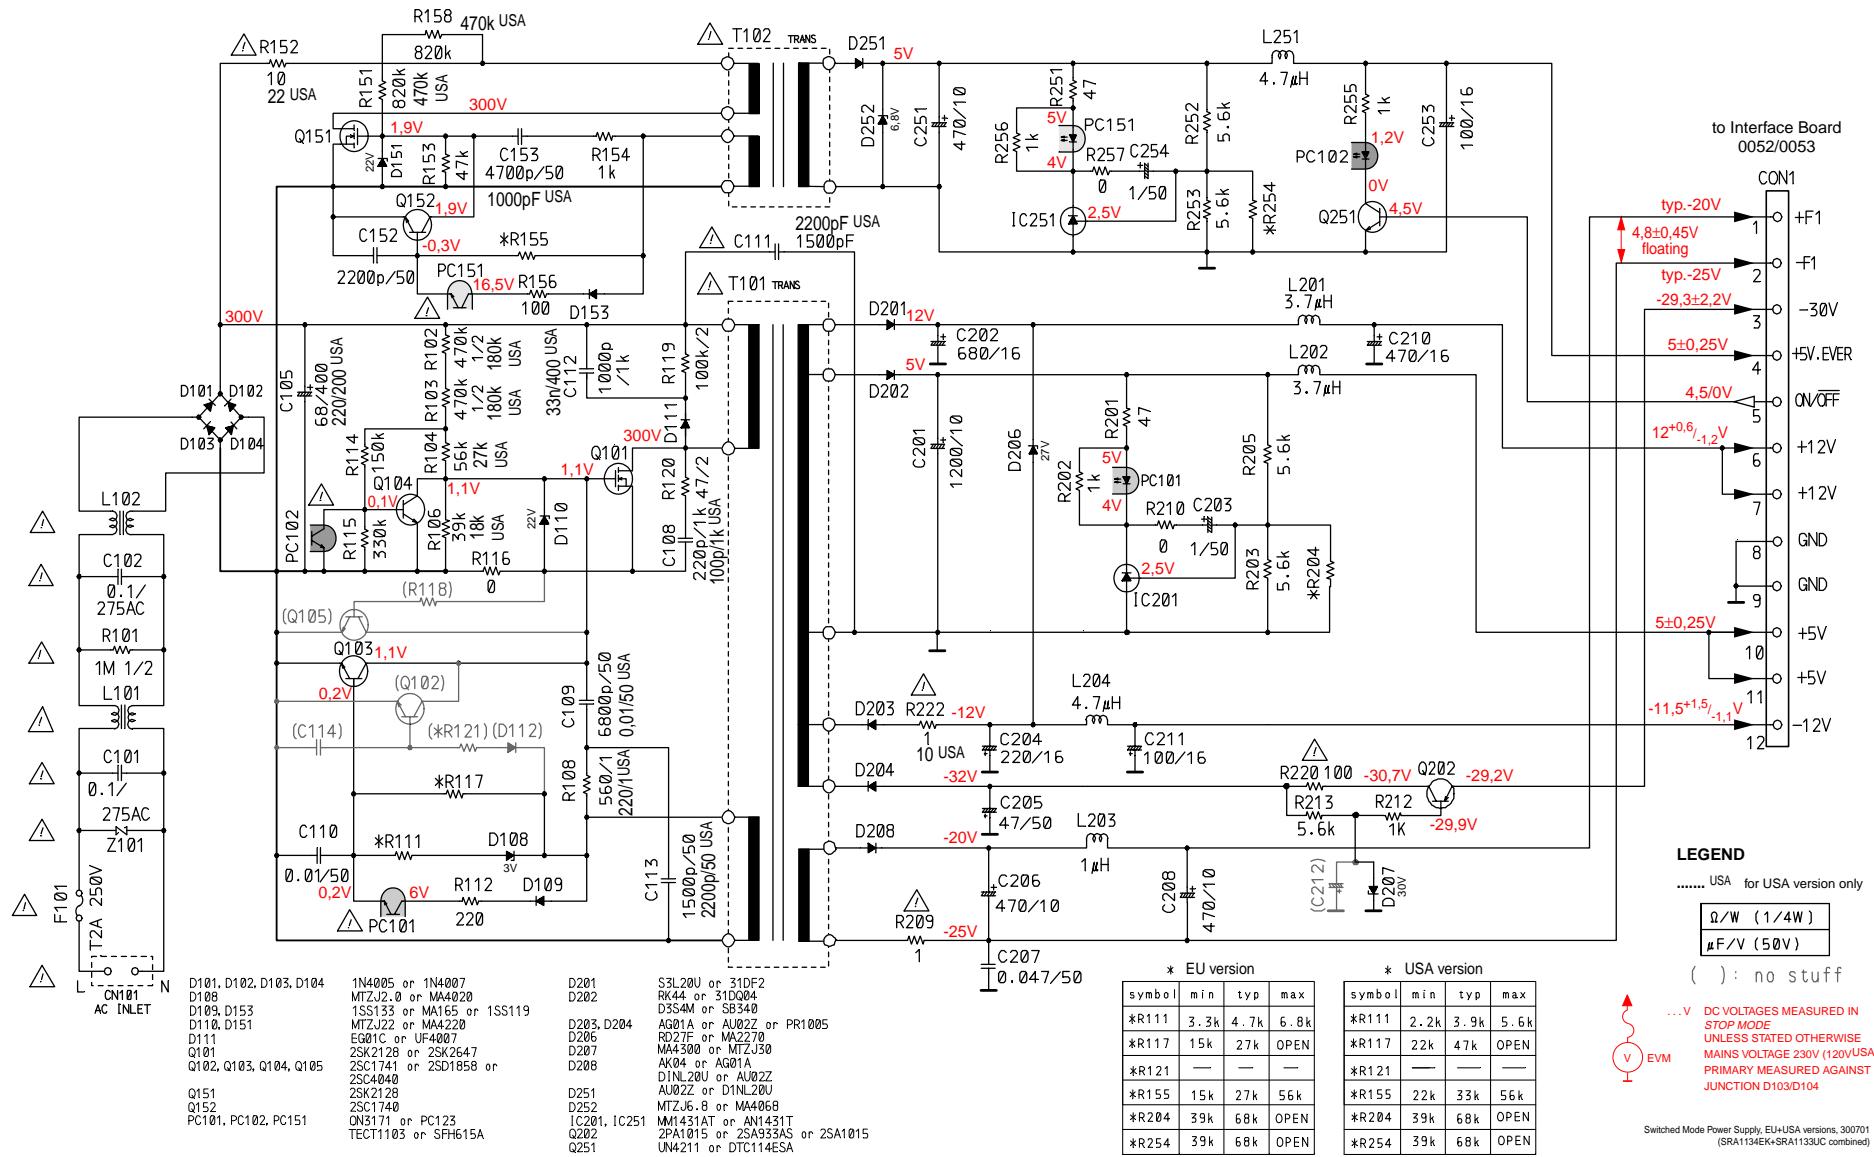


POWER BOARD / component side view

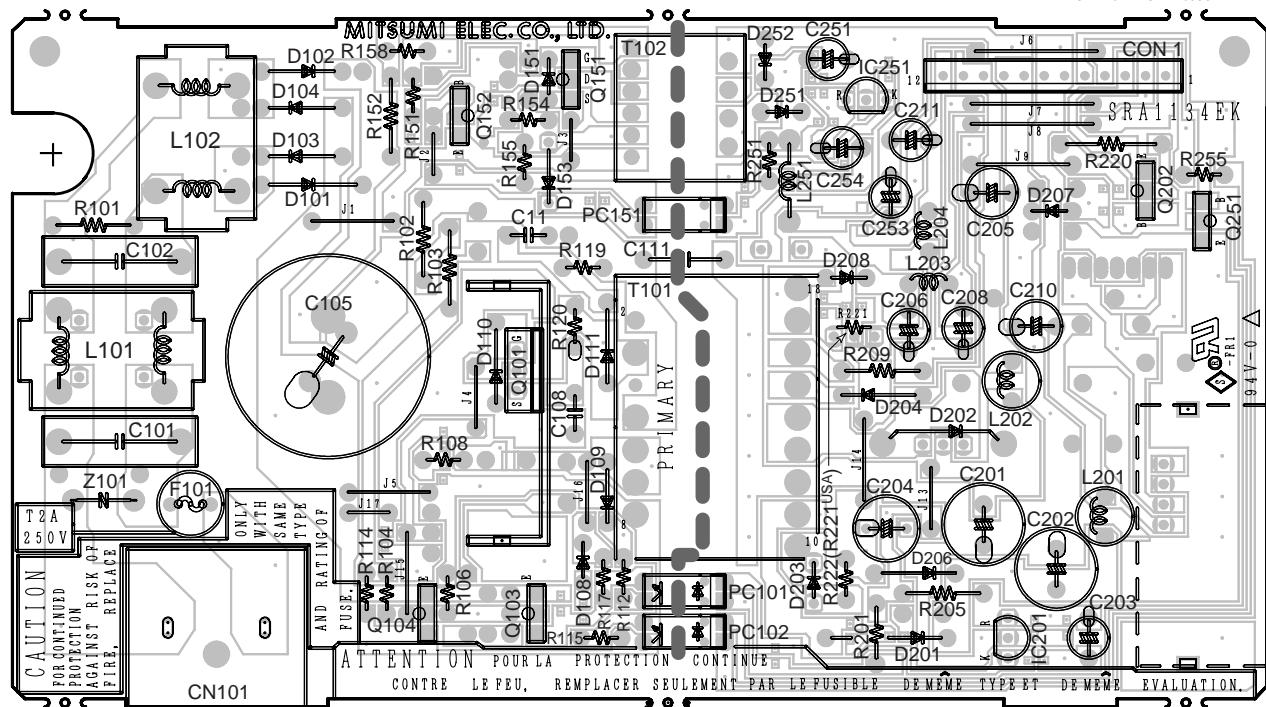

POWER BOARD / copper side view

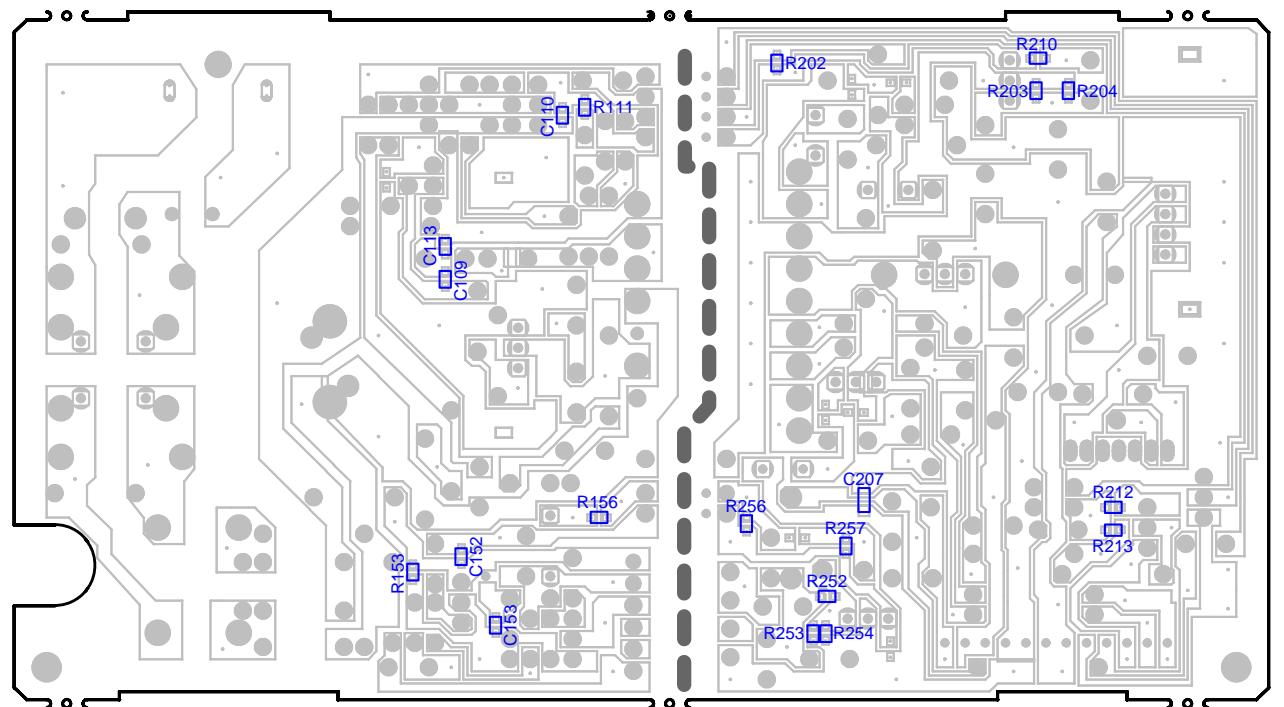


Switched Mode Power Supply / World Wide version (/01)

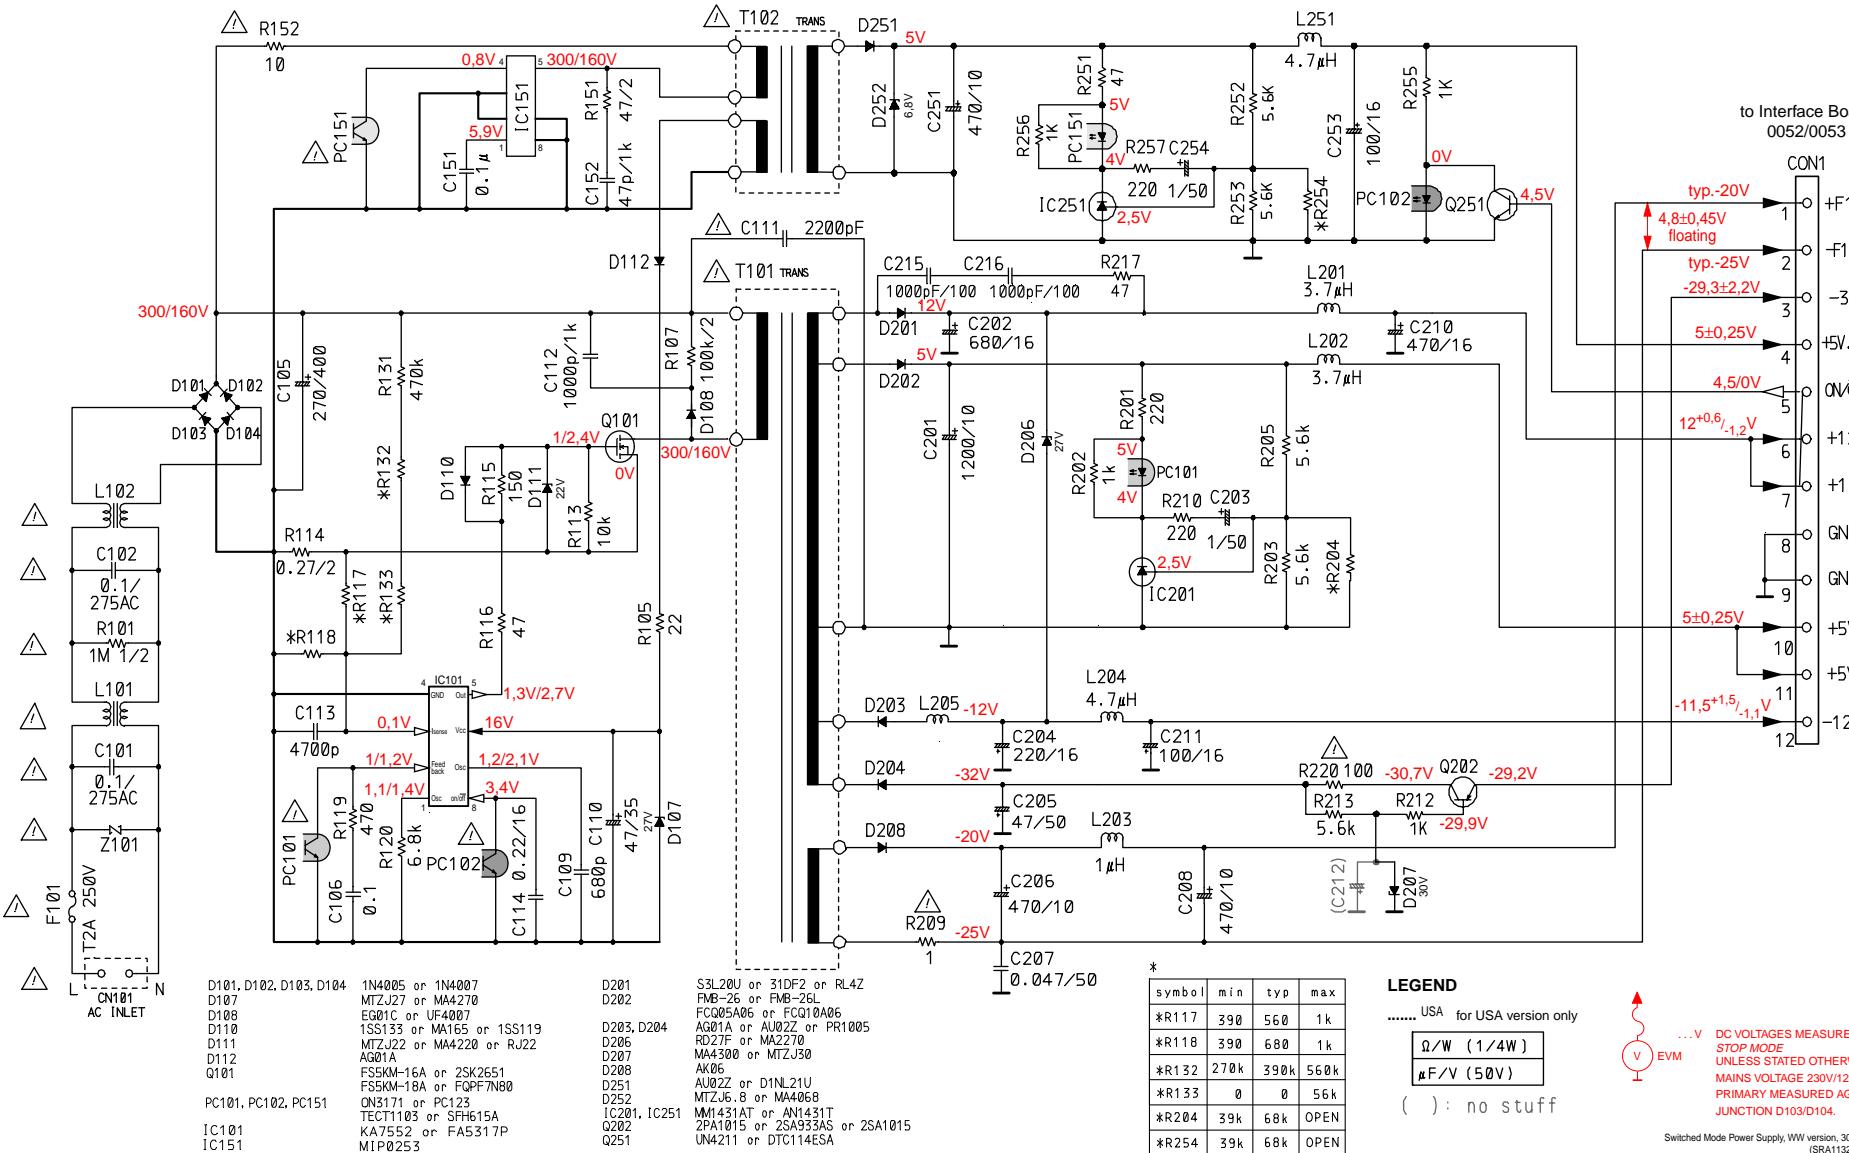

7-2


POWER BOARD / component side view


World Wide version

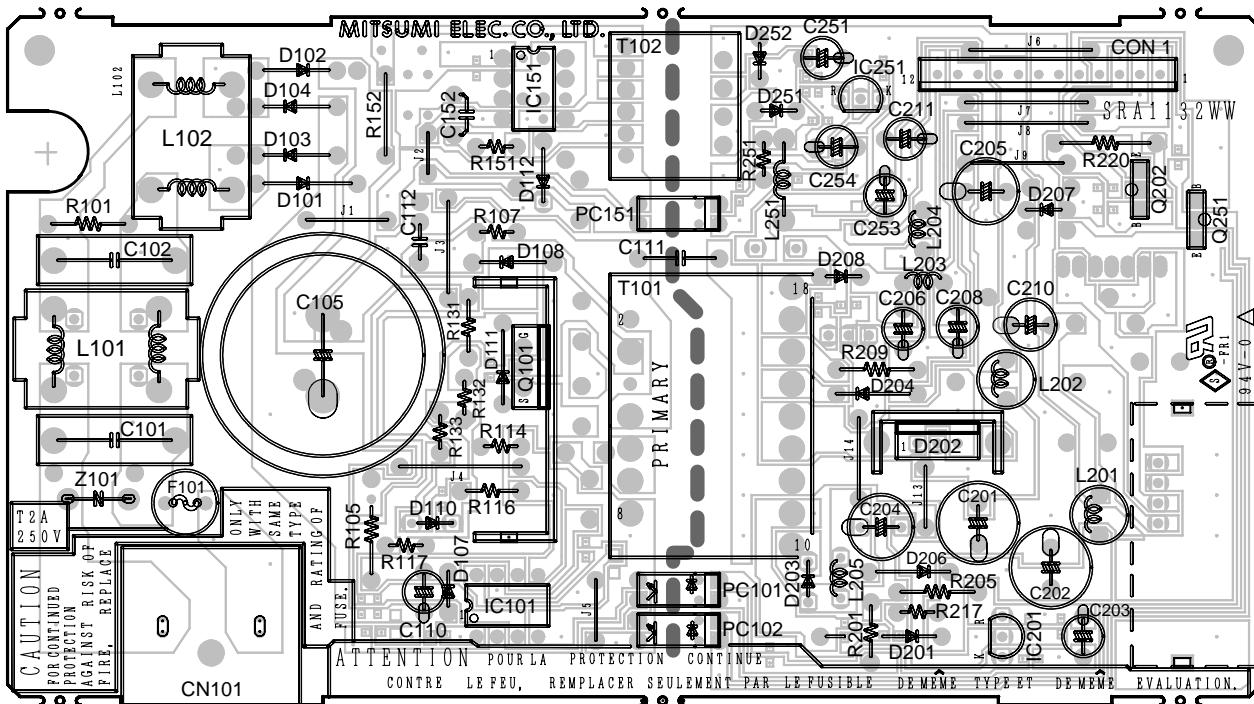

POWER BOARD / copper side view

World Wide version

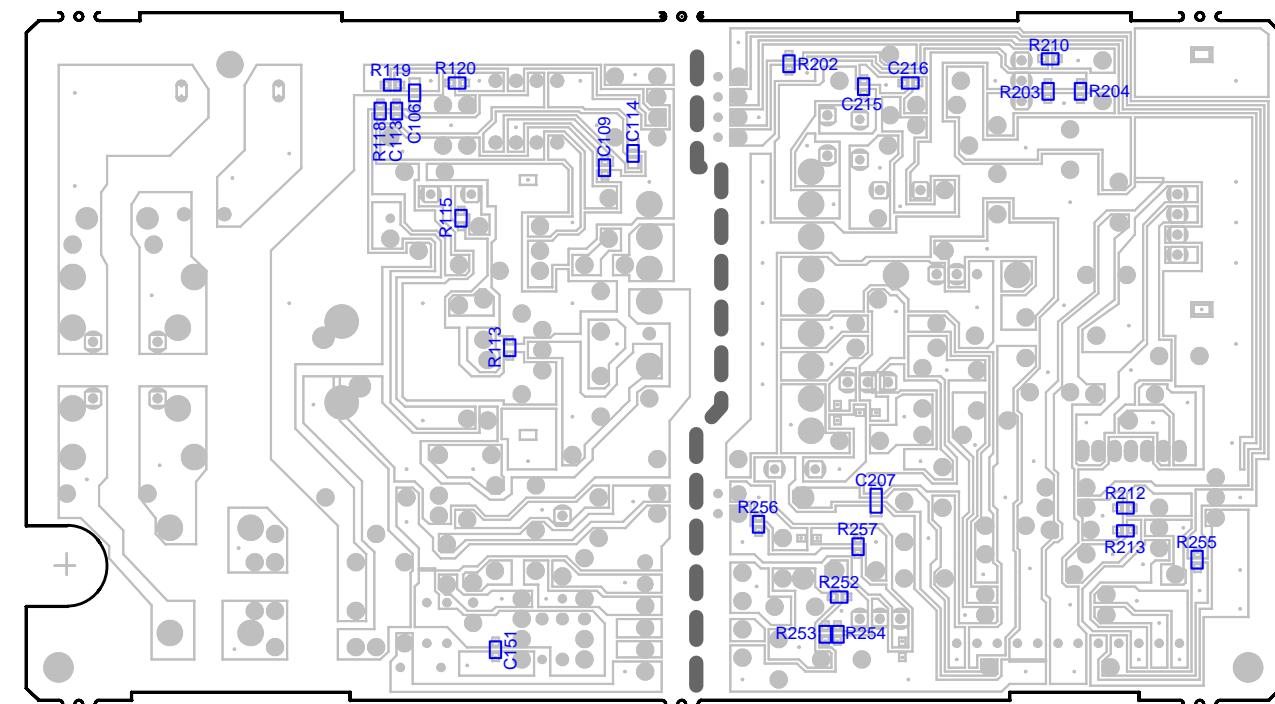

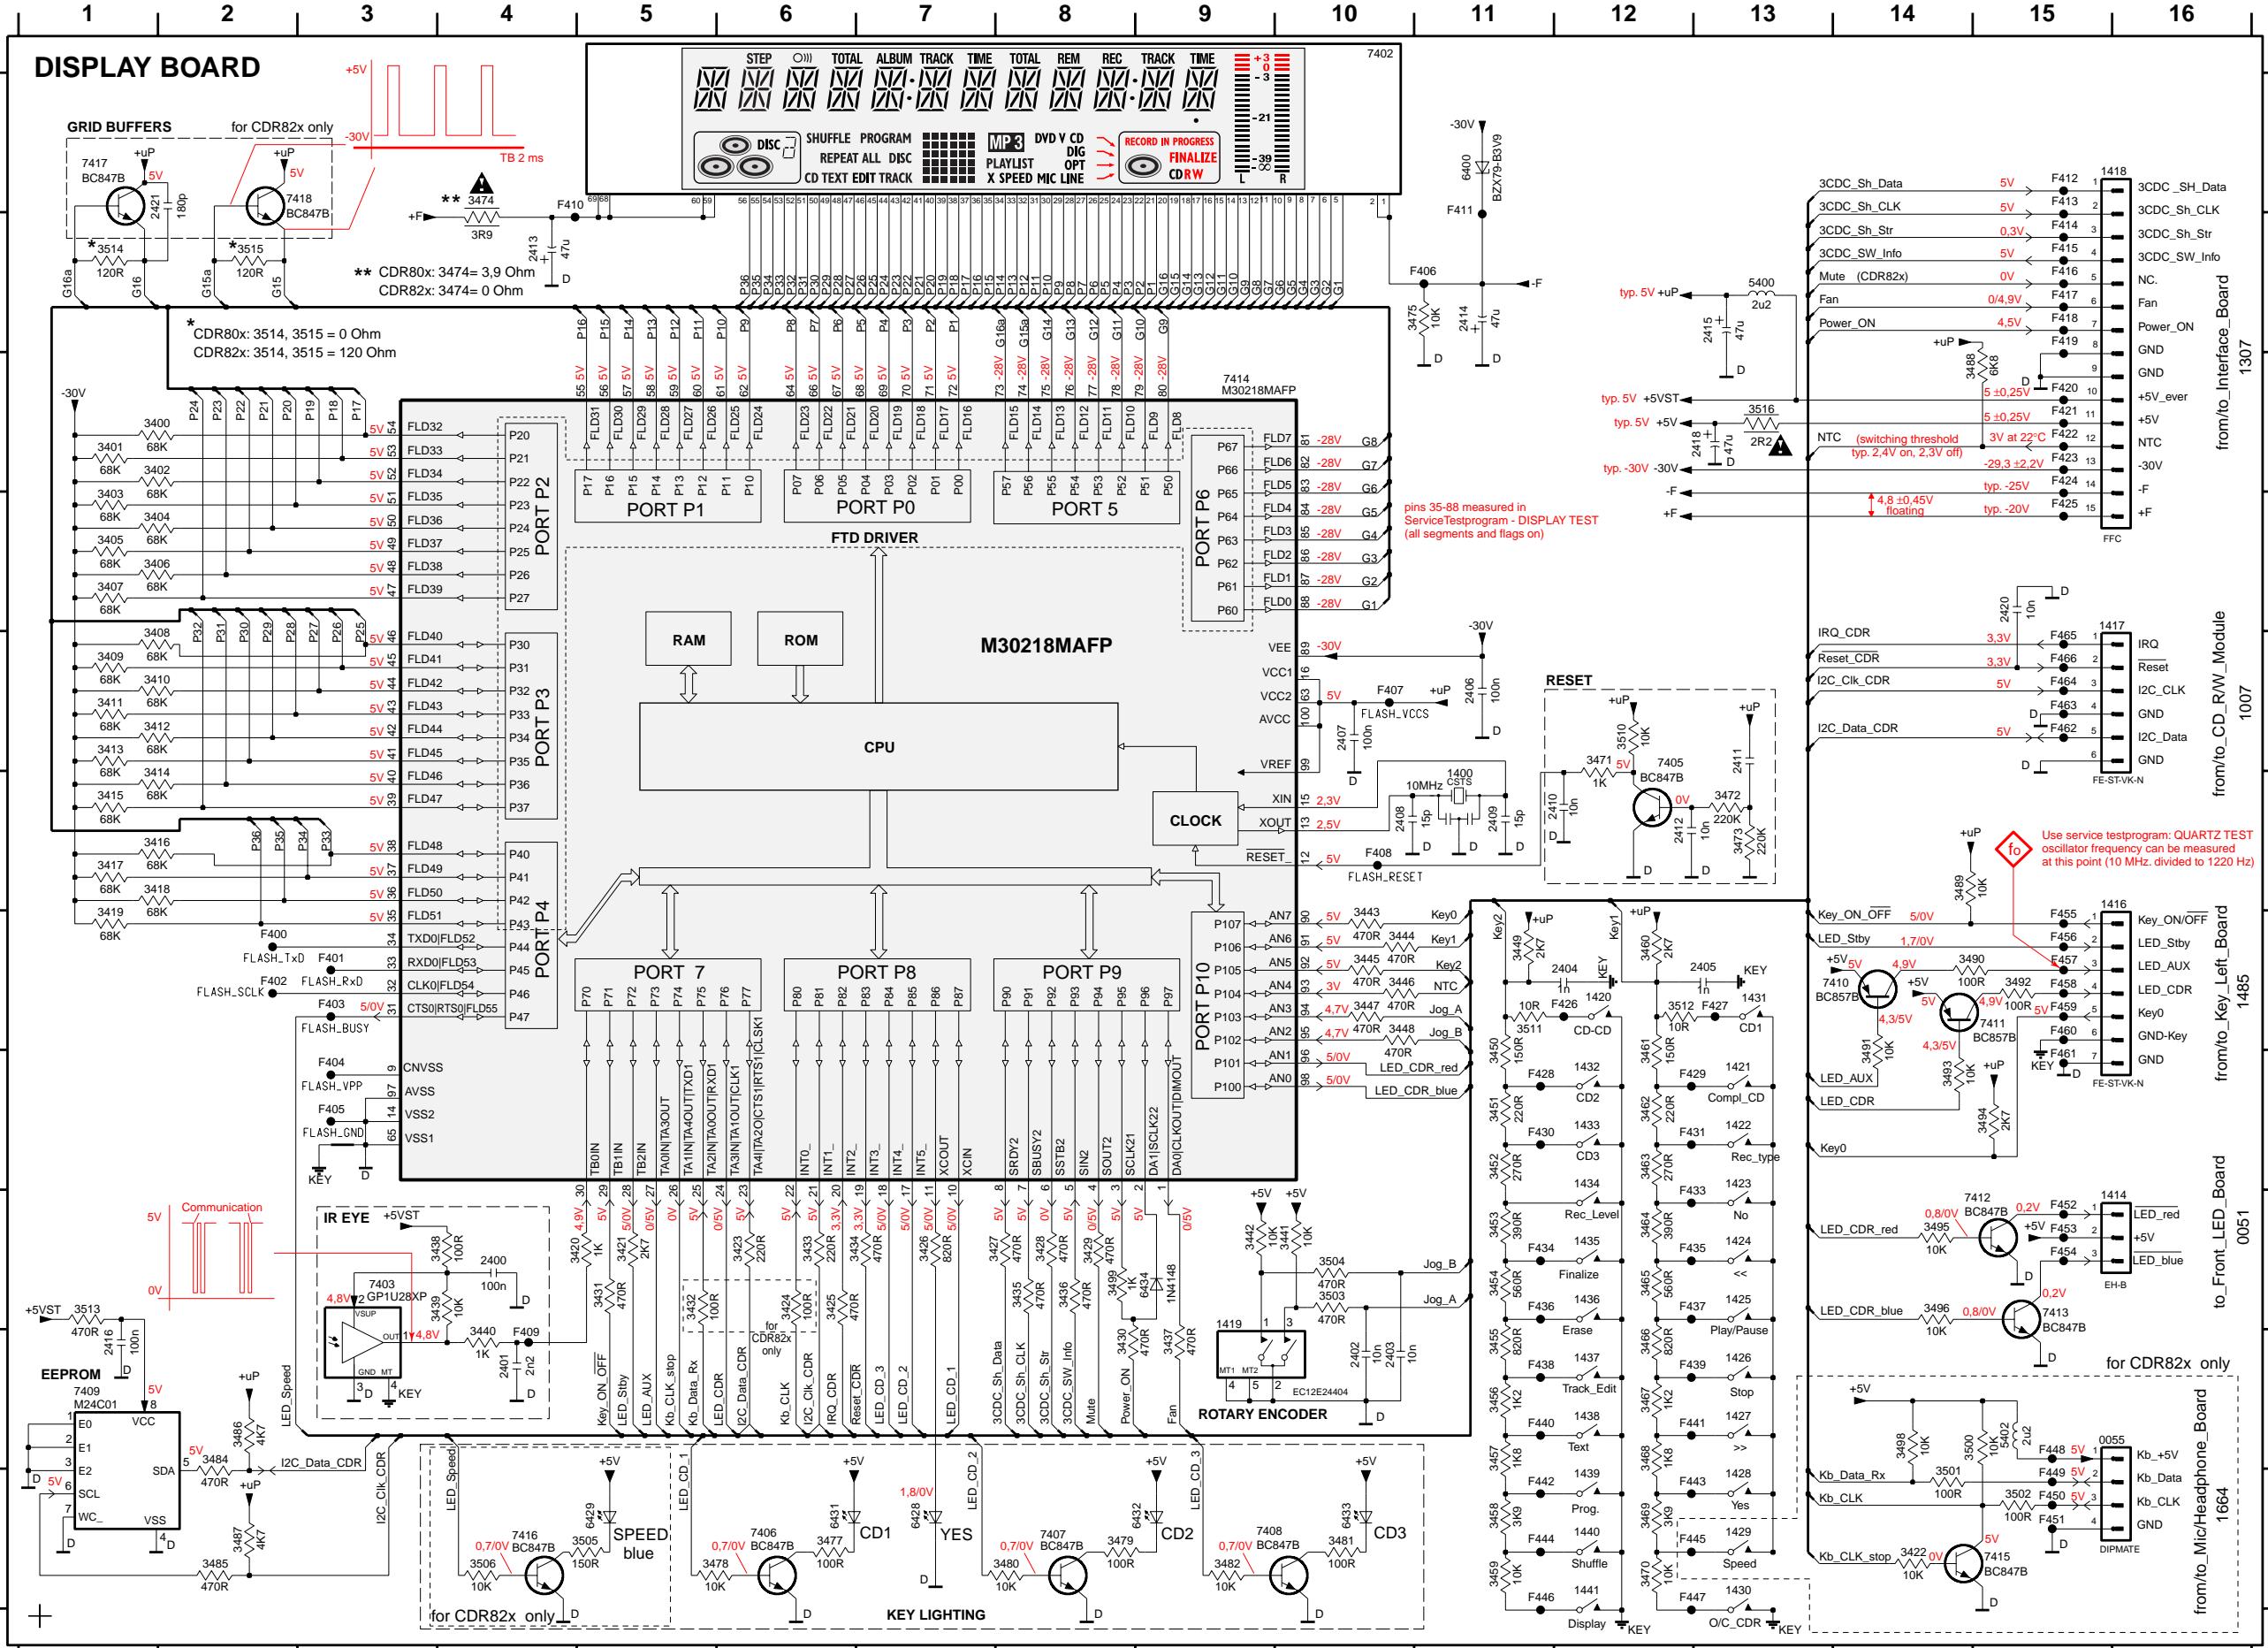


0055 J15	3478 K5
1404 I15	3479 K8
1414 I15	3480 K8
1416 F15	3481 K10
1417 D15	3482 K9
1418 A15	3484 J2
1419 I9	3485 K2
1420 G12	3486 J2
1421 H13	3487 K2
1422 H13	3488 C15
1423 H13	3489 F14
1424 H13	3490 G14
1425 H13	3491 H14
1426 J13	3492 G15
1427 J13	3493 H14
1428 K13	3494 H15
1429 K13	3495 H14
1430 K13	3496 H14
1431 G13	3498 J14
1432 H12	3499 H8
1433 H12	3500 J15
1434 H12	3501 K14
1435 I12	3502 H10
1437 J12	3504 H10
1438 J12	3505 K5
1439 K12	3506 K4
1440 K12	3510 E12
1441 K12	3511 G11
2400 I4	3512 G12
2401 J4	3513 I1
2402 J10	3514 B1
2403 J10	3515 B2
2404 G12	3516 C13
2405 G13	3500 B13
2406 E11	3502 A11
2407 E10	6428 K7
2408 F10	6429 K5
2410 F12	6431 K6
2411 E13	6432 K9
2412 F12	6433 K10
2413 B4	6434 I9
2414 B11	7402 A10
2415 B13	7403 I3
2416 J1	7405 E12
2418 C13	7406 K6
2420 D15	7407 K8
2421 A2	7408 K9
3400 C1	7409 J1
3401 C1	7410 G13
3402 C1	7411 G15
3403 D1	7412 I4
3404 D1	7413 I5
3405 D1	7414 C9
3406 D1	7415 K15
3407 D1	7416 K4
3408 E1	7417 A1
3409 E1	7418 A2
3410 E1	7400 G2
3411 E1	7401 G3
3412 E1	7402 G2
3413 E1	7403 G3
3414 F1	7404 H3
3415 F1	7405 H3
3416 F1	7406 B11
3417 F1	7407 E10
3418 F1	7408 F10
3419 G1	7409 J4
3420 I5	7410 A4
3421 I5	7411 B11
3422 K14	7412 A15
3423 I6	7413 A15
3424 I6	7414 B15
3425 I6	7415 B15
3426 I7	7417 B15
3427 I8	7418 B15
3428 I8	7419 B15
3429 I8	7420 C15
3430 J8	7421 C15
3431 I5	7422 C15
3432 I5	7423 C15
3433 I6	7424 C15
3434 I7	7425 D15
3435 I8	7426 G12
3436 I8	7427 G13
3437 J9	7428 H11
3438 I4	7429 H12
3439 I4	7430 H11
3440 J4	7431 H12
3442 I9	7433 I2
3443 G10	7434 I1
3444 G10	7435 I1
3445 G10	7436 J1
3446 G10	7437 J2
3447 G10	7438 J1
3448 G10	7439 J2
3449 G11	7440 J1
3450 H11	7441 J2
3451 H11	7442 K11
3452 I11	7443 K12
3453 I11	7444 K15
3455 J11	7445 K12
3456 J11	7446 K12
3457 J11	7447 J5
3458 K11	7449 K15
3459 L12	7450 K15
3460 G12	7451 K15
3461 H12	7452 K15
3462 H12	7453 I5
3463 H12	7454 I5
3464 I12	7455 G15
3465 I12	7456 G15
3466 J12	7457 G15
3467 J12	7458 G15
3468 J12	7459 G15
3469 J12	7460 G15
3470 K12	7461 G15
3471 E12	7462 E15
3472 F13	7463 E15
3473 F13	7464 E15
3474 A4	7465 E15
3475 B11	7466 E15
3476 K6	

from/to_Interface_Board 1307
from/to_CD_RW_Module 1007
from/to_Key_Left_Board 1485
to_Front_LED_Board 0051
from/to_Mic/Headphone_Board 1664
...V DC VOLTAGES MEASURED IN STOP MODE
.../...V off/on

0055 J15 3478 K5
1404 I15 3479 K8
1414 I15 3480 K8
1416 F15 3481 K10
1417 D15 3482 K9
1418 A15 3484 J2
1419 I9 3485 K2
1420 G12 3486 J2
1421 H13 3487 K2
1422 H13 3488 C15
1423 H13 3489 F14
1424 H13 3490 G14
1425 H13 3491 H14
1426 J13 3492 G15
1427 J13 3493 H14
1428 K13 3494 H15
1429 K13 3495 H14
1430 K13 3496 H14
1431 G13 3498 J14
1432 H12 3499 H8
1433 H12 3500 J15
1434 H12 3501 K14
1435 I12 3502 H10
1437 J12 3504 H10
1438 J12 3505 K5
1439 K12 3506 K4
1440 K12 3510 E12
1441 K12 3511 G11
2400 I4 3512 G12
2401 J4 3513 I1
2402 J10 3514 B1
2403 J10 3515 B2
2404 G12 3516 C13
2405 G13 3500 B13
2406 E11 3502 A11
2407 E10 6428 K7
2408 F10 6429 K5
2410 F12 6431 K6
2411 E13 6432 K9
2412 F12 6433 K10
2413 B4 6434 I9
2414 B11 7402 A10
2415 B13 7403 I3
2416 J1 7405 E12
2418 C13 7406 K6
2420 D15 7407 K8
2421 A2 7408 K9
3400 C1 7409 J1
3401 C1 7410 G13
3402 C1 7411 G15
3403 D1 7412 I4
3404 D1 7413 I5
3405 D1 7414 C9
3406 D1 7415 K15
3407 D1 7416 K4
3408 E1 7417 A1
3409 E1 7418 A2
3410 E1 7400 G2
3411 E1 7401 G3
3412 E1 7402 G2
3413 E1 7403 G3
3414 F1 7404 H3
3415 F1 7405 H3
3416 F1 7406 B11
3417 F1 7407 E10
3418 F1 7408 F10
3419 G1 7409 J4
3420 I5 7410 A4
3421 I5 7411 B11
3422 K14 7412 A15
3423 I6 7413 A15
3424 I6 7414 B15
3425 I6 7415 B15
3426 I7 7417 B15
3427 I8 7418 B15
3428 I8 7419 B15
3429 I8 7420 C15
3430 J8 7421 C15
3431 I5 7422 C15
3432 I5 7423 C15
3433 I6 7424 C15
3434 I7 7425 D15
3435 I8 7426 G12
3436 I8 7427 G13
3437 J9 7428 H11
3438 I4 7429 H12
3439 I4 7430 H11
3440 J4 7431 H12
3442 I9 7433 I2
3443 G10 7434 I1
3444 G10 7435 I1
3445 G10 7436 J1
3446 G10 7437 J2
3447 G10 7438 J1
3448 G10 7439 J2
3449 G11 7440 J1
3450 H11 7441 J2
3451 H11 7442 K11
3452 I11 7443 K12
3453 I11 7444 K15
3455 J11 7445 K12
3456 J11 7446 K12
3457 J11 7447 J5
3458 K11 7449 K15
3459 L12 7450 K15
3460 G12 7451 K15
3461 H12 7452 K15
3462 H12 7453 I5
3463 H12 7454 I5
3464 I12 7455 G15
3465 I12 7456 G15
3466 J12 7457 G15
3467 J12 7458 G15
3468 J12 7459 G15
3469 J12 7460 G15
3470 K12 7461 G15
3471 E12 7462 E15
3472 F13 7463 E15
3473 F13 7464 E15
3474 A4 7465 E15
3475 B11 7466 E15
3476 K6


2400	B8	2405	B10	2410	A7	2421	C5	3404	C4	3409	C3	3414	C3	3419	C2	3426	A8	3431	B3	3437	B7	3443	C7	3448	C7	3456	A5	3461	B11	3469	C14	3475	B13	3484	B11	3489	B3	3494	C7	3504	B14	3514	C5	4405	C9	6432	B9	7408	A8	7413	A14	7418	C5
2401	A5	2406	C7	2411	A8	3400	C4	3405	C4	3410	C3	3415	C3	3421	B3	3427	B7	3433	A6	3438	B11	3444	C7	3449	C7	3457	A4	3462	B11	3470	D14	3478	B7	3485	B11	3490	B3	3495	C7	3505	A14	3515	C6	4407	B9	6433	A9	7409	B12	7414	B6		
2402	B14	2407	A6	2412	A7	3401	C4	3406	C4	3411	C3	3416	C3	3422	A3	3428	B7	3434	A6	3439	B8	3445	C7	3453	A7	3458	A3	3466	A11	3471	A7	3479	B9	3486	B10	3491	S3	3496	B9	3510	A7	4401	B9	6428	C14	7405	A7	7410	B3	7415	A3		
2403	B14	2408	A7	2416	B12	3402	C4	3407	C4	3412	C3	3417	C3	3423	A6	3429	B7	3435	B7	3441	B14	3446	C7	3454	A6	3459	A2	3467	A14	3472	A7	3480	A6	3487	B10	3492	A3	3499	B7	3511	B10	4402	B7	6429	D14	7406	B10	7411	A3	7416	A14		
2404	C8	2409	A7	2420	A11	3403	C4	3408	C3	3413	C3	3418	C2	3425	A6	3430	B7	3436	B7	3442	B14	3447	C7	3455	A6	3460	C7	3468	B14	3473	A7	3481	A8	3488	C7	3493	A3	3503	B13	3512	C10	4404	B9	6431	C9	7407	B10	7412	A14	7417	C5		

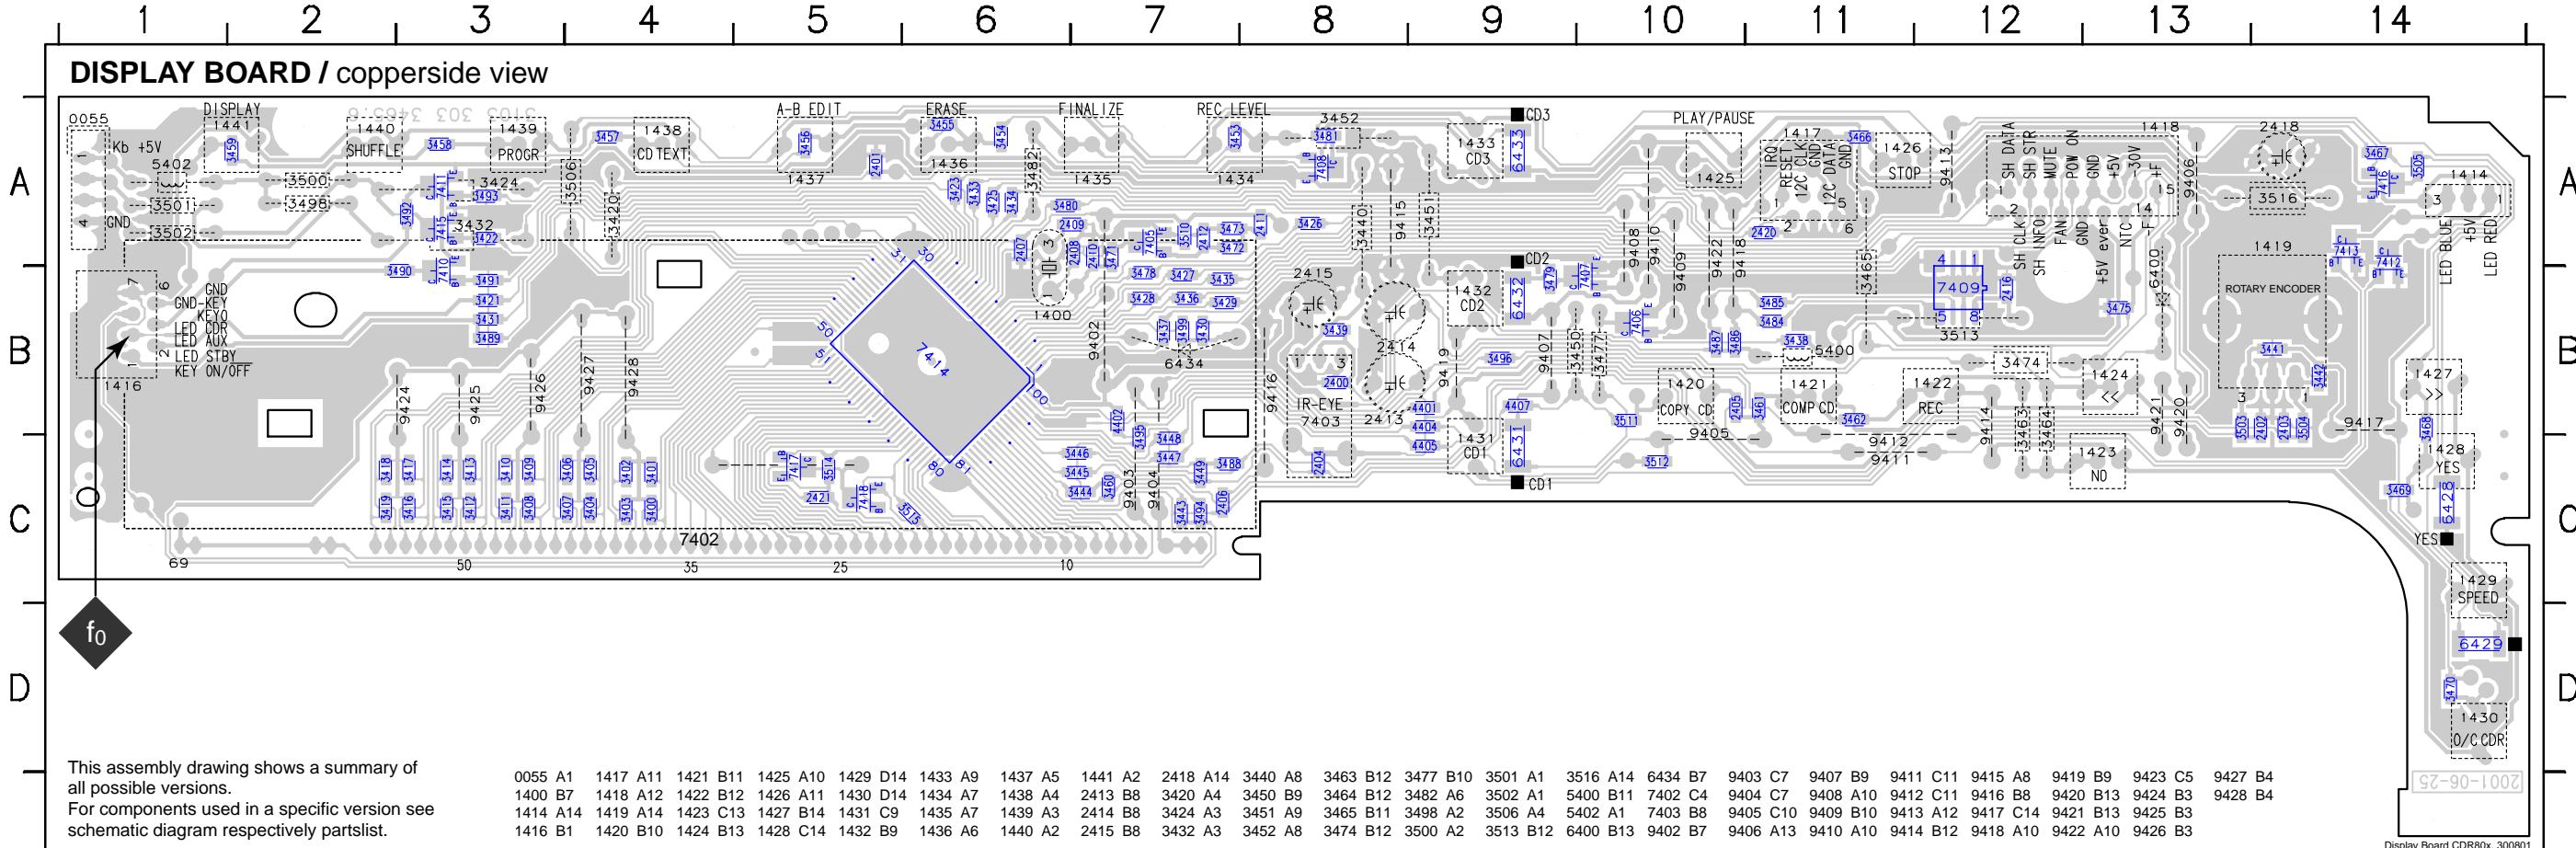


This assembly drawing shows a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.

0055	A1	1417	A11	1421	B11	1425	A10	1429	D14	1433	A9	1437	A5	1441	A2	2418	A14	3440	A8	3463	B12	3477	B10	3501	A1	3516	A14	6434	B7	9403	C7	9407	B9	9411	C11	9415	A8	9419	B9	9423	C5	9427	B1
1400	B7	1418	A12	1422	B12	1426	A11	1430	D14	1434	A7	1438	A4	2413	B8	3420	A4	3450	B9	3464	B12	3482	A6	3502	A1	5400	B11	7402	C4	9404	C7	9408	A10	9412	C11	9416	B8	9420	B13	9424	B3	9428	B1
1414	A14	1419	A14	1423	C13	1427	B14	1431	C9	1435	A7	1439	A3	2414	B8	3424	A3	3451	A9	3465	B11	3498	A2	3506	A4	5402	A1	7403	B8	9405	C10	9409	B10	9413	A12	9417	C14	9421	B13	9425	B3		
1416	B1	1420	B10	1424	B13	1428	C14	1432	B9	1436	A6	1440	A2	2415	B8	3432	A3	3452	A8	3474	B12	3500	A2	3513	B12	6400	B13	9402	B7	9406	A13	9410	A10	9414	B12	9418	A10	9422	A10	9426	B3		


Display Board CDR80x_300801

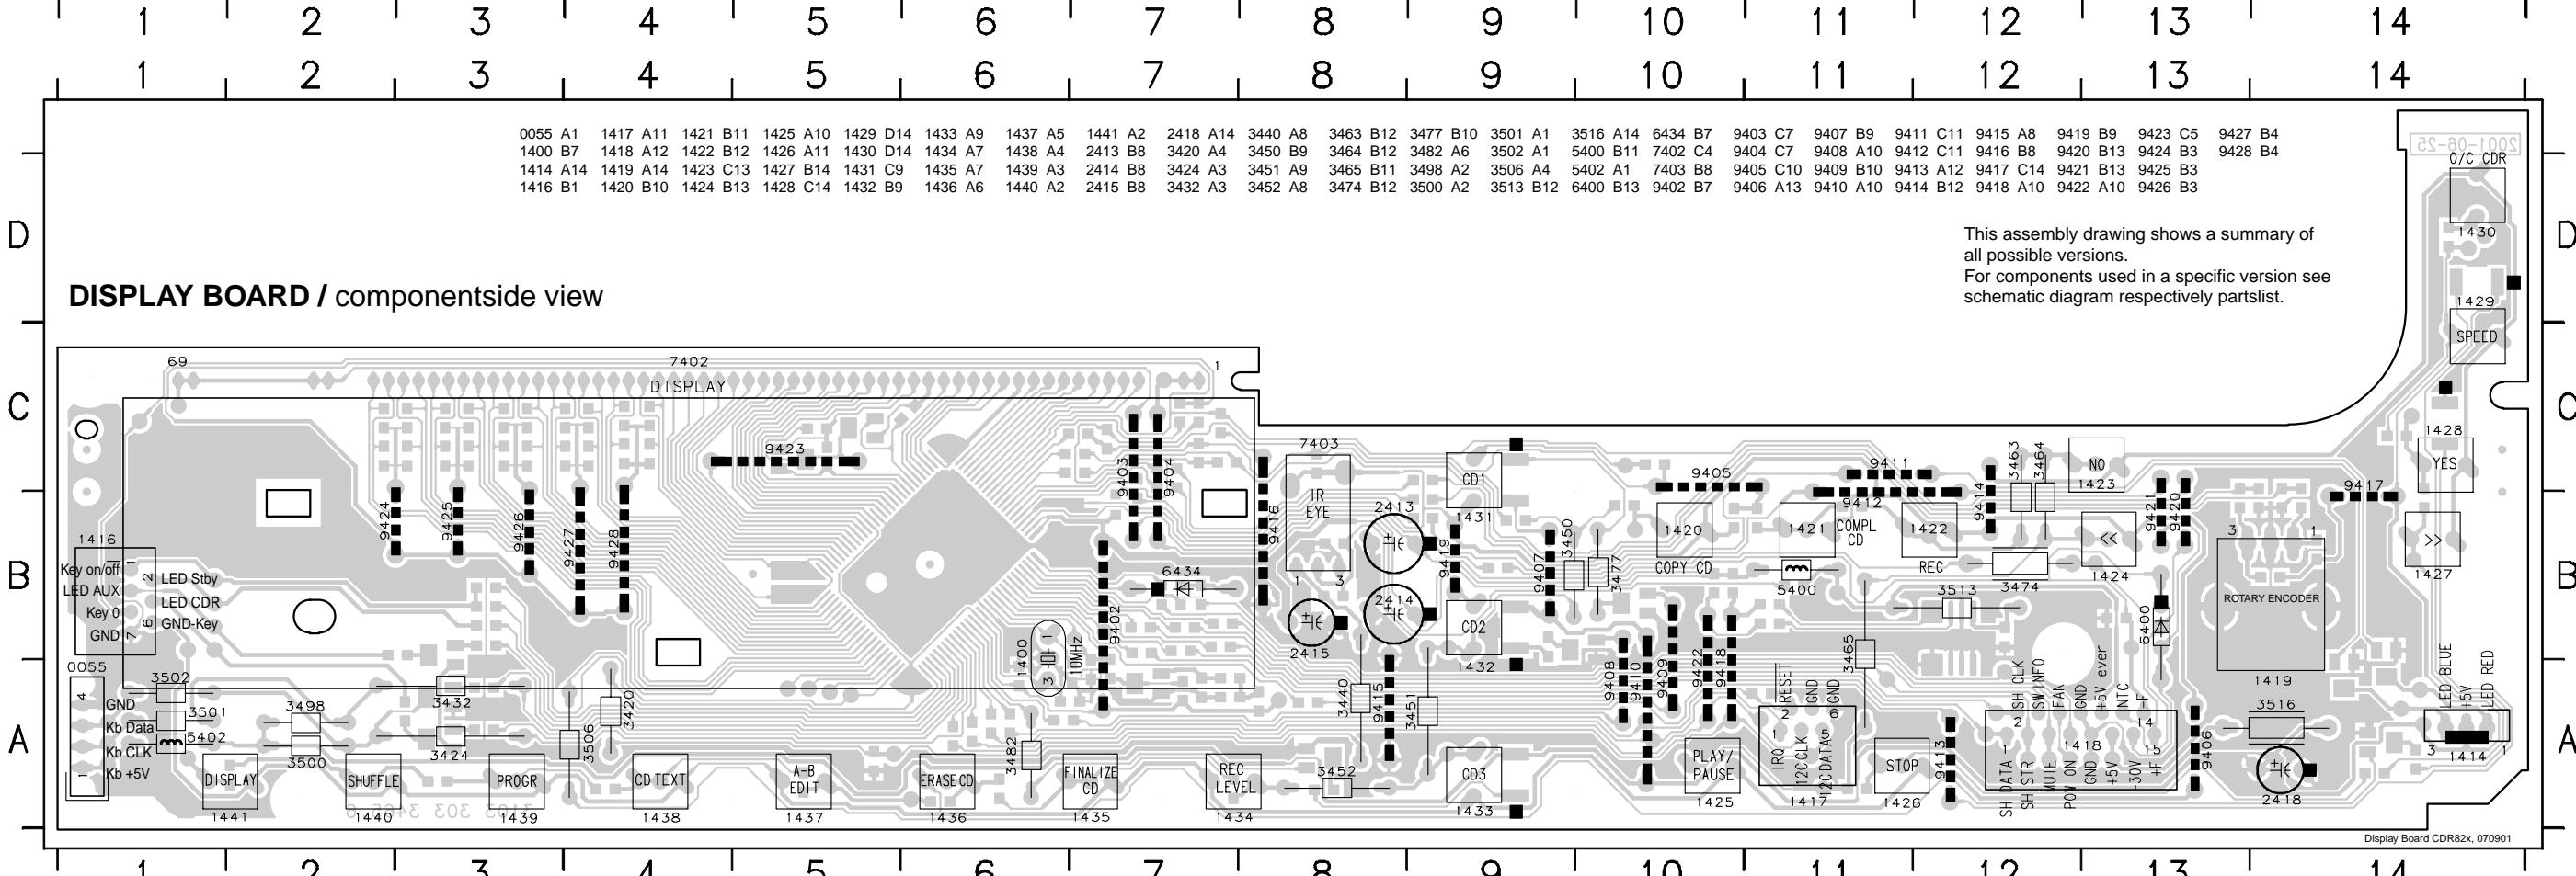

DISPLAY CONNECTION CDR80x

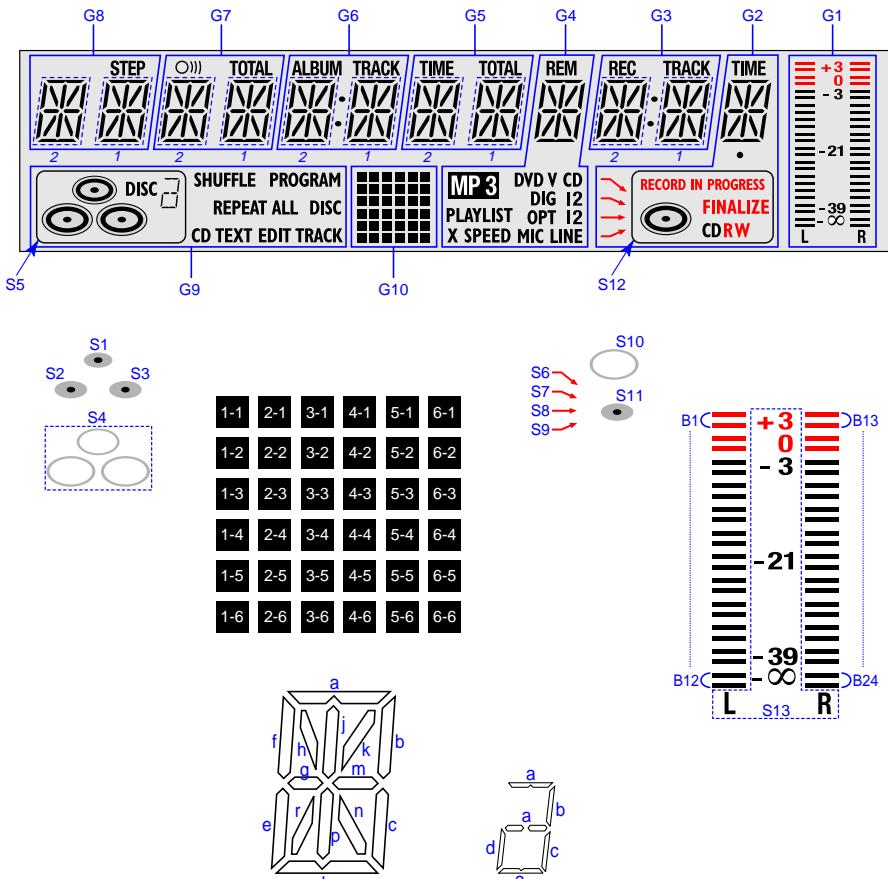

DISPLAY CONNECTION CDR82x

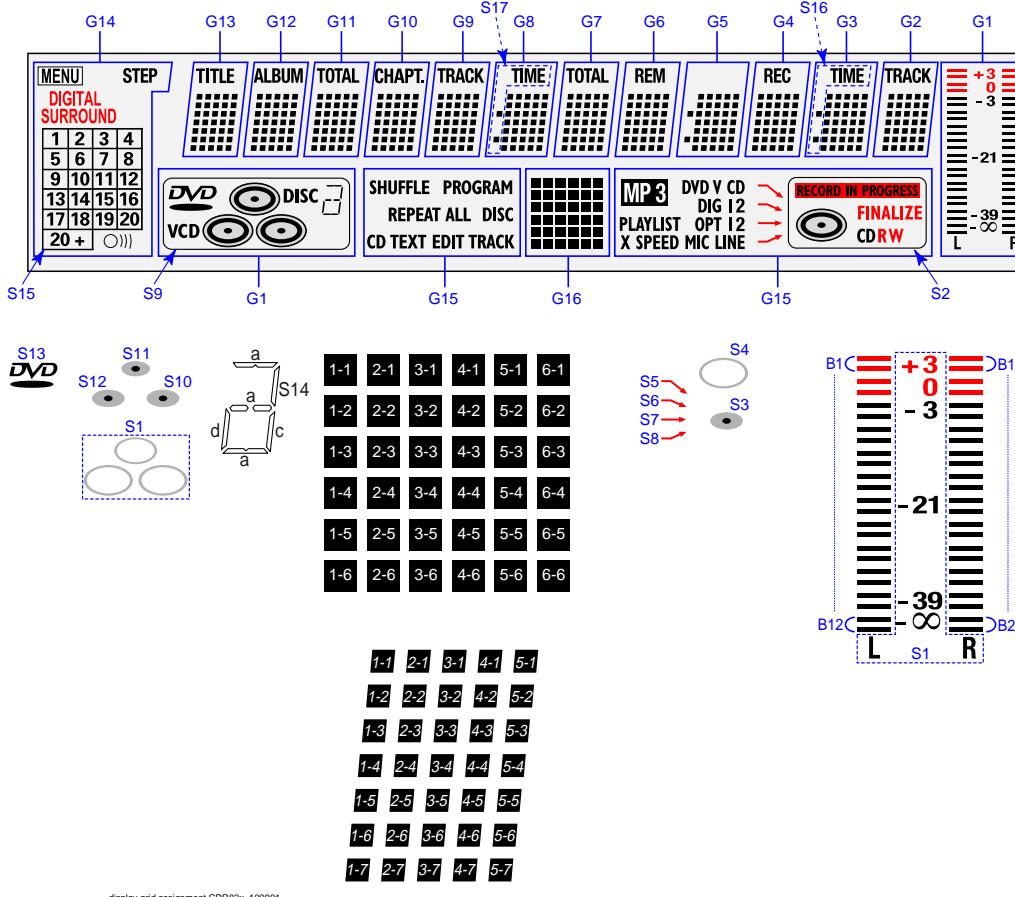

Pin	20	6	7	8	9	10	11	12	13	17	16	15	14	5	19	18	
	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12	G13	G14	G15	G16	
42	P1	S9	TRACK	S16	REC	:	REM	TOTAL	S17	TRACK	CHAPT.	TOTAL	ALBUM	TITLE	PROGRAM	TRACK	6-6
43	P2	B1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	1-1	20 +	EDIT	5-6	
44	P3	B13	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	2-1	20	TEXT	4-6	
45	P4	S10	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	3-1	19	DVD V CD	3-6	
46	P5	S12	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	4-1	18	W	2-6	
47	P6	CD	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	5-1	17	R	1-6	
48	P7	V	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	1-2	16	CD RW	6-5	
49	P8	B2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	2-2	15	S4	5-5	
50	P9	B14	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	3-2	14	S3	4-5	
51	P10	B3	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	4-2	13	LINE	3-5	
52	P11	B15	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	5-2	12	MIC	2-5	
53	P12	S13	DVD	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	1-3	11	SPEED	1-5	
54	P13	S1	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	2-3	10	X	6-4	
55	P14	S11	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	3-3	9	DISC	5-4	
56	P15	d	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	4-3	8	ALL	4-4	
41	P16	a	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	5-3	7	REPEAT	3-4	
40	P17	c	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	1-4	6	PLAYLIST	2-4	
39	P18	B4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4	5	OPT	1-4	
38	P19	B16	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	3-4	4	OPT 1	6-3	
37	P20	S14	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	4-4	3	OPT 2	5-3	
36	P21	B5	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	5-4	2	S8	4-3	
35	P22	B17	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1-5	1	FINALIZE	3-3	
34	P23	B6	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	2-5	S15	S7	2-3	
33	P24	B18	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	3-5	SURROUND	DIG	1-3
32	P25	B7	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	4-5	DIGITAL	DIG 1	6-2
31	P26	B19	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	5-5	MENU	DIG 2	5-2
30	P27	B8	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	1-6	-	S6	4-2	
29	P28	B20	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	2-6	-	DVD	3-2	
28	P29	B9	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	3-6	-	V	2-2	
27	P30	B21	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	4-6	-	CD	1-2	
26	P31	B10	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	5-6	-	SHUFFLE	6-1	
25	P32	B22	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	1-7	-	PROGRAM	5-1	
24	P33	B11	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	2-7	-	S5	4-1	
23	P34	B23	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	3-7	-	MP3	3-1	
22	P35	B12	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	4-7	-	REC IN PROGR	2-1	
21	P36	B24	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	5-7	STEP	S2	1-1

1480 A5 1483 C5 2480 C3 3522 D4 6481 B3 F481 C2 F484 D4 F487 B2 F490 C1
 1481 E5 1484 C5 3520 C4 3523 D4 6482 B3 F482 C4 F485 E4 F488 B2 F489 C1
 1482 D5 1485 B1 3521 C4 6480 B3 F480 B2 F483 D4 F486 B2 F489 C1

KEY-LEFT BOARD


A

B

C

D

E

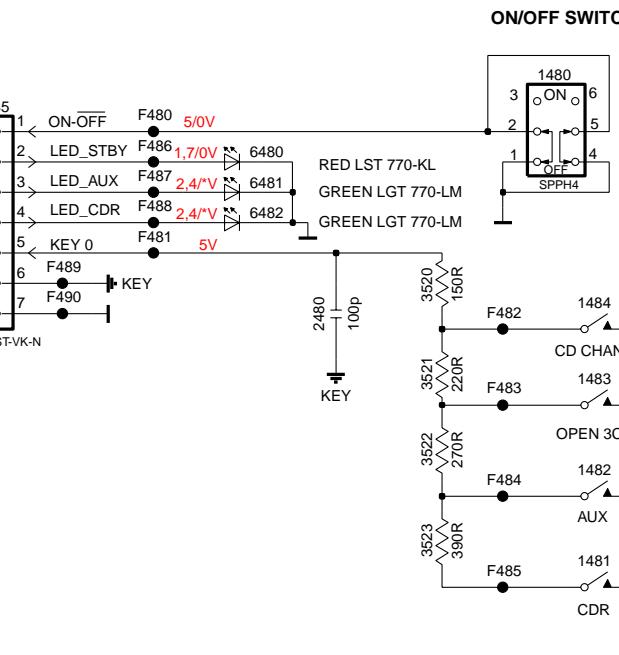

to/from Display Board 1416

...V DC VOLTAGES MEASURED IN STOP MODE
UNLESS STATED OTHERWISE
.../...V on/off (*) means "floating, not defined"

ON/OFF SWITCH

Key left CDR8xx, 040901

A

B

C

D

E

0051 B1 3531 C3 3533 D3 6490 B3 6492 B3 6494 C3 F495 B1 F497 B1
 3530 B3 3532 B3 3534 C3 6491 C3 6493 D3 F495 B1 F497 B1

FRONT-LED BOARD (RECORDING INDICATION)

A

B

C


D

A

B

C

D

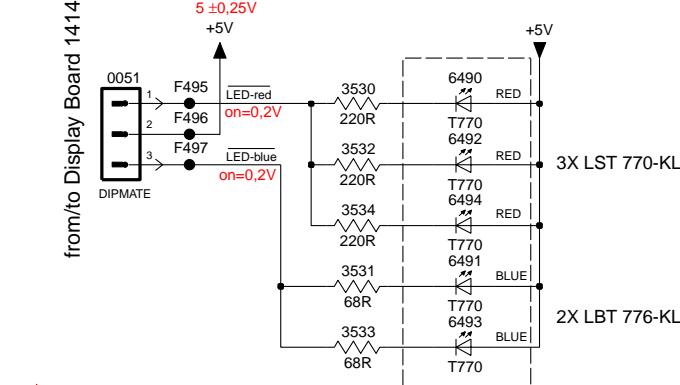

...V DC VOLTAGES MEASURED IN
STOP MODE
UNLESS STATED OTHERWISE

Front LED CDR8xx, 040901

2480 A2 3520 A2 3521 B1 3523 A6 6480 A2 6481 A4 6482 A6

KEY LEFT BOARD / copperside view

A

B

C

A

B

C

1480 A2 1481 A6 1482 A4 1483 C1 1484 B1 1485 A5 3522 A3 9480 A6 9481 A4 9482 A2 9483 A1

Key Left CDR8xx, 300801

0051 A5 3531 A3 3533 A2 6490 A3 6492 A2 6494 A1
 3530 A4 3532 A2 3534 A1 6491 A3 6493 A2


FRONT LED BOARD / copperside view

A

B

C

Front LED Board CDR8xx, 020801

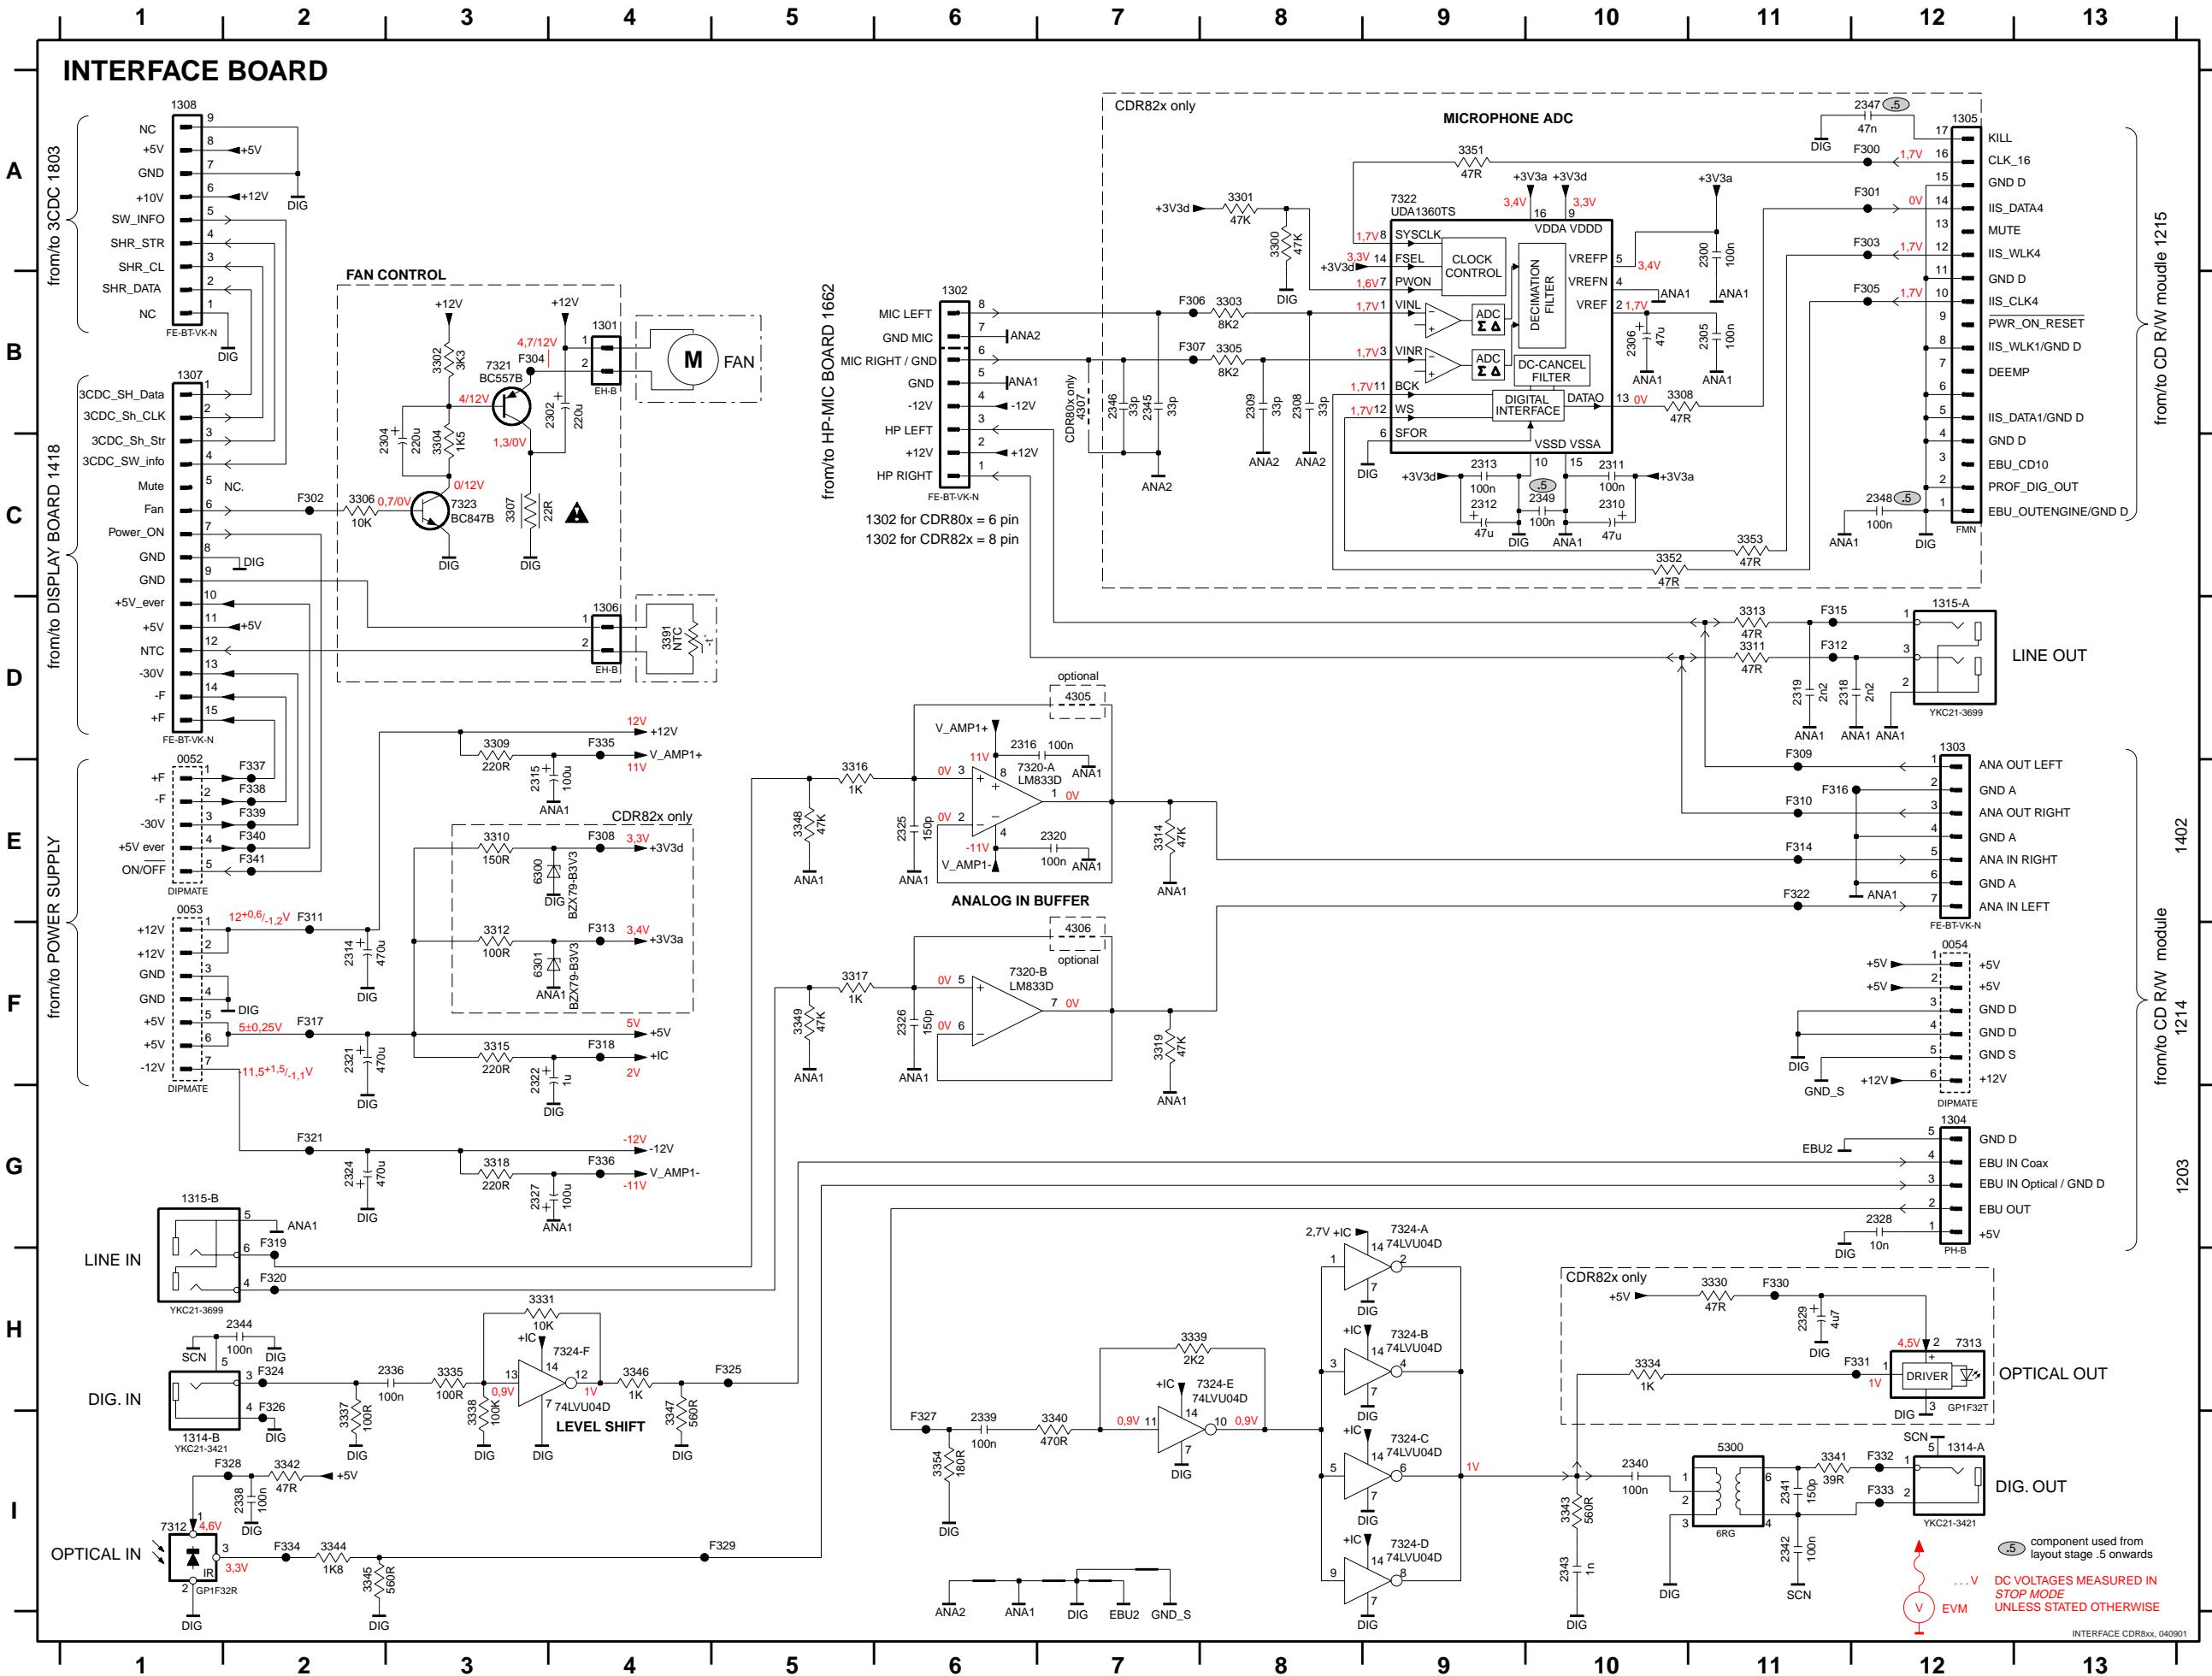


0052 E1	F304 B3
0053 E1	F305 B2
0054 F12	F306 B7
1301 B4	F307 B7
1302 B6	F308 E4
1303 D12	F309 D1
1304 G12	F310 E11
1305 A12	F311 E2
1306 D4	F312 D11
1307 B1	F313 F4
1308 A1	F314 E11
1314-A I12	F315 D11
1314-B I1	F316 E11
1315-A C12	F317 F2
1315-B G1	F318 F4
2300 A11	F319 G2
2302 B4	F320 H2
2304 C3	F321 G2
2305 B11	F322 H5
2306 B10	F323 H8
2308 B8	F324 H2
2310 C10	F325 I6
2311 C10	F326 I2
2312 C9	F327 I5
2314 F2	F328 I2
2315 E3	F329 I2
2316 D6	F330 I1
2318 D11	F331 I2
2319 D11	F332 I2
2320 E7	F333 I4
2321 F2	F334 E2
2322 F3	F335 E2
2324 G2	F336 E2
2325 E6	F337 E2
2326 F6	F338 E2
2327 G3	F339 E2
2328 G12	F340 E2
2329 H11	F341 E2
2336 H3	
2338 I2	
2339 I6	
2340 I10	
2341 I11	
2342 I11	
2343 I10	
2344 H2	
2345 B7	
2347 A12	
2348 C12	
2349 C10	
3300 A8	
3301 A8	
3302 B3	
3303 B8	
3304 C3	
3305 B8	
3306 C2	
3307 C3	
3308 B10	
3309 D3	
3310 E3	
3311 D11	
3312 F3	
3313 D11	
3314 E7	
3315 F3	
3316 E5	
3317 F5	
3318 G3	
3319 H11	
3320 H10	
3321 H2	
3322 H3	
3323 H7	
3324 I7	
3325 I1	
3326 I2	
3327 I0	
3328 I1	
3329 H7	
3330 I1	
3331 H3	
3332 H10	
3333 H3	
3334 H2	
3335 H7	
3336 H1	
3337 H2	
3338 H3	
3339 H7	
3340 I7	
3341 I1	
3342 I2	
3343 I0	
3344 I2	
3345 I2	
3346 H4	
3347 H4	
3348 E5	
3349 F5	
3350 A9	
3351 C10	
3352 C10	
3353 C11	
3354 I6	
3355 I6	
4305 D7	
4306 F7	
4307 B7	
5300 I11	
6300 E3	
7311 F3	
7312 H12	
7320-A E6	
7320-B F6	
7321 B3	
7322 A9	
7323 C3	
7324-A G9	
7324-B H9	
7324-C I9	
7324-D I9	
7324-E I8	
7324-F H4	
F300 A12	
F301 A12	
F302 C2	
F303 A12	

Component used from layout stage .5 onwards

DC VOLTAGES MEASURED IN STOP MODE UNLESS STATED OTHERWISE


INTERFACE CDR8xx_040901


0052	B3	1302	C8	1306	C4	1315	A5	2310	B7	2318	A6	2324	B1	3309	B4	3342	A1	6301	B6	9301	C4	9305	B5	9309	A6	9313	A7	9317	B7
0053	B1	1303	C7	1307	C4	2302	B8	2312	B6	2319	A6	2327	B6	3315	B2	3351	B6	7312	A1	9302	C2	9306	B2	9310	B8	9314	C2	9318	B5
0054	C1	1304	B4	1308	B4	2304	A8	2314	B2	2321	B2	2329	B2	3318	B1	5300	B3	7313	A2	9303	B4	9307	C5	9311	A7	9315	B8	9319	C2
1301	A8	1305	C6	1314	A3	2306	B7	2315	B5	2322	B3	3307	B8	3330	A1	6300	C5	7321	B8	9304	B3	9308	C5	9312	A3	9316	B7	9320	B2

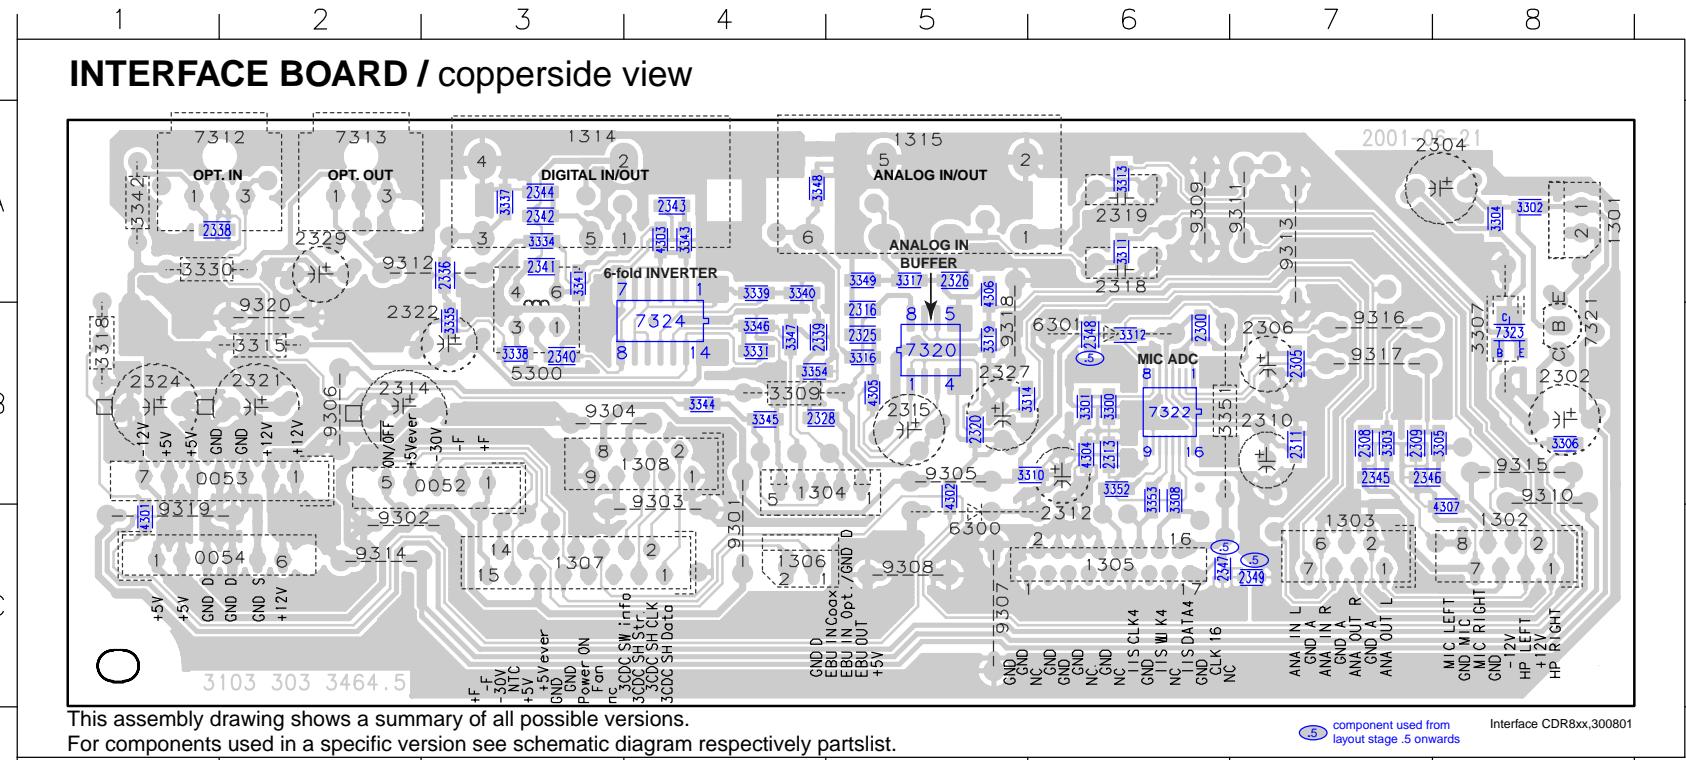


1	2	3	4	5	6	7	8	7324	B4
2300 B6	2311 B7	2325 B5	2338 A1	2342 A3	2346 B7	3300 B6	3304 A8	3310 B6	3314 B5
2305 B7	2313 B6	2326 A5	2339 B4	2343 A4	2347 C6	3301 B6	3305 B8	3311 A6	3316 B5
2308 B7	2316 B5	2328 B4	2340 B3	2344 A3	2348 B6	3302 A8	3306 B8	3312 B6	3317 A5
2309 B7	2320 B5	2336 A3	2341 A3	2345 B7	2349 C7	3303 B7	3308 B6	3313 A6	3319 B5
								3337 A3	3341 A3
								3346 B4	3352 B6
								4302 B5	4306 A5
								7323 B8	

0052	B6	1302	C1	1306	C5	1315	A4	2310	B2	2318	A3	2324	B8	3309	B5	3342	A8	6301	B3	9301	C5	9305	B4	9309	A3	9313	A2	9317	B2
0053	B8	1303	C2	1307	C5	2302	B1	2312	B3	2319	A3	2327	B3	3315	B7	3351	B3	7312	A7	9302	C7	9306	B7	9310	B1	9314	C7	9318	B3
0054	C8	1304	B5	1308	B5	2304	A1	2314	B7	2321	B7	2329	B7	3318	B8	5300	B6	7313	A7	9303	B5	9307	C4	9311	A2	9315	B1	9319	C7
1301	A1	1305	C3	1314	A6	2306	B2	2315	B4	2322	B6	3307	B1	3330	A8	6300	C4	7321	B1	9304	B6	9308	C4	9312	A6	9316	B2	9320	B7

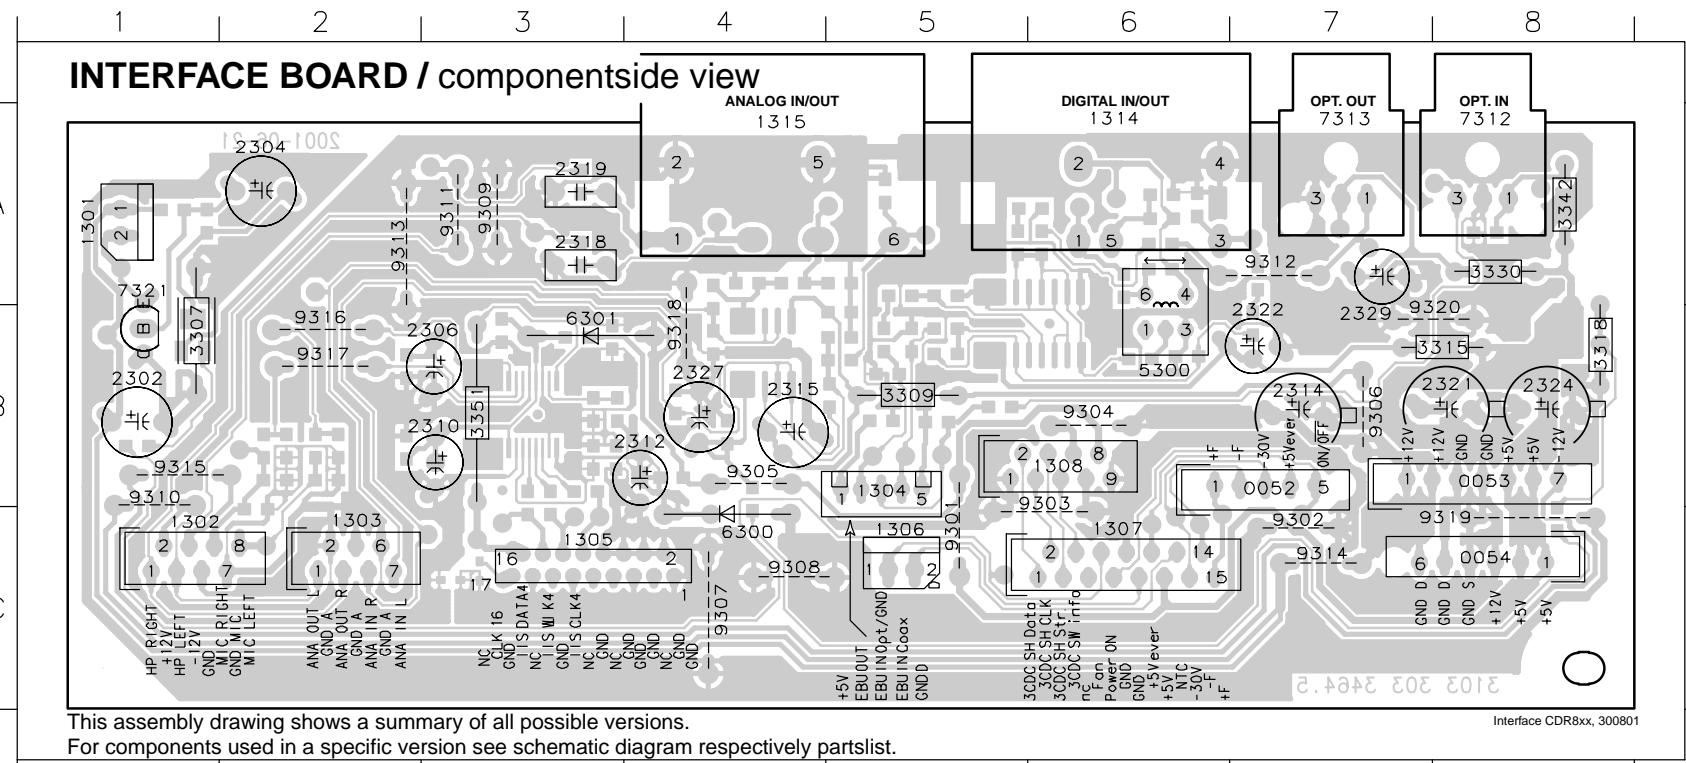


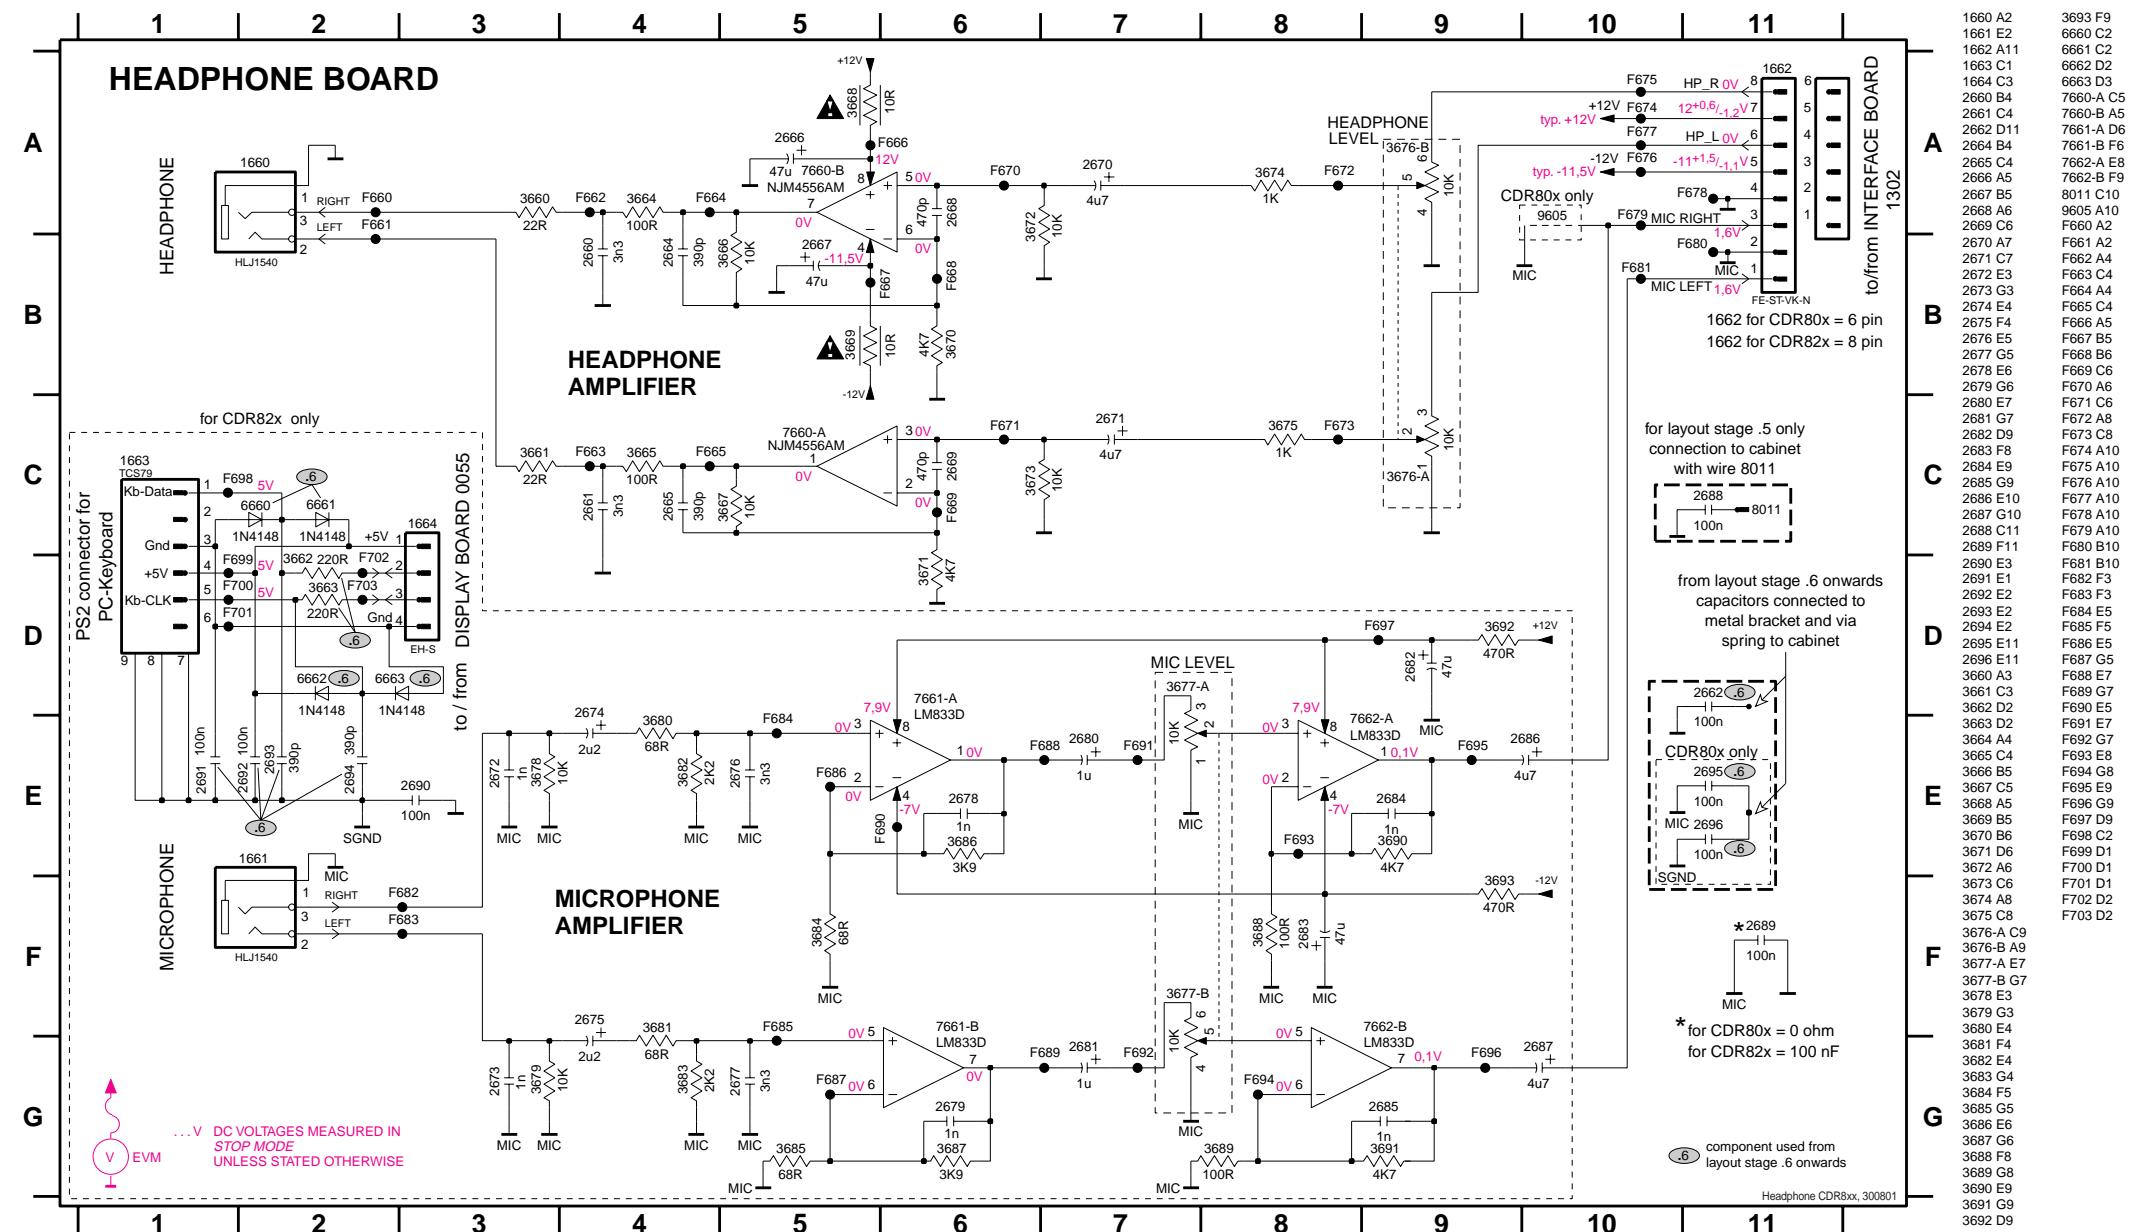

1660	C1	1663	C7	2667	A3	2674	B4	2681	A7	2686	A5	3669	A3	3692	A6	6661	B7	8011	A1	9603	B5
1661	C5	1664	A7	2670	A2	2675	B4	2682	A6	2687	A5	3676	C2	3693	A6	6662	B7	9601	A4	9605	A5
1662	A4	2666	A2	2671	B2	2680	B7	2683	A7	3668	A3	3677	C6	6660	B7	6663	B7	9602	A6	9606	C6

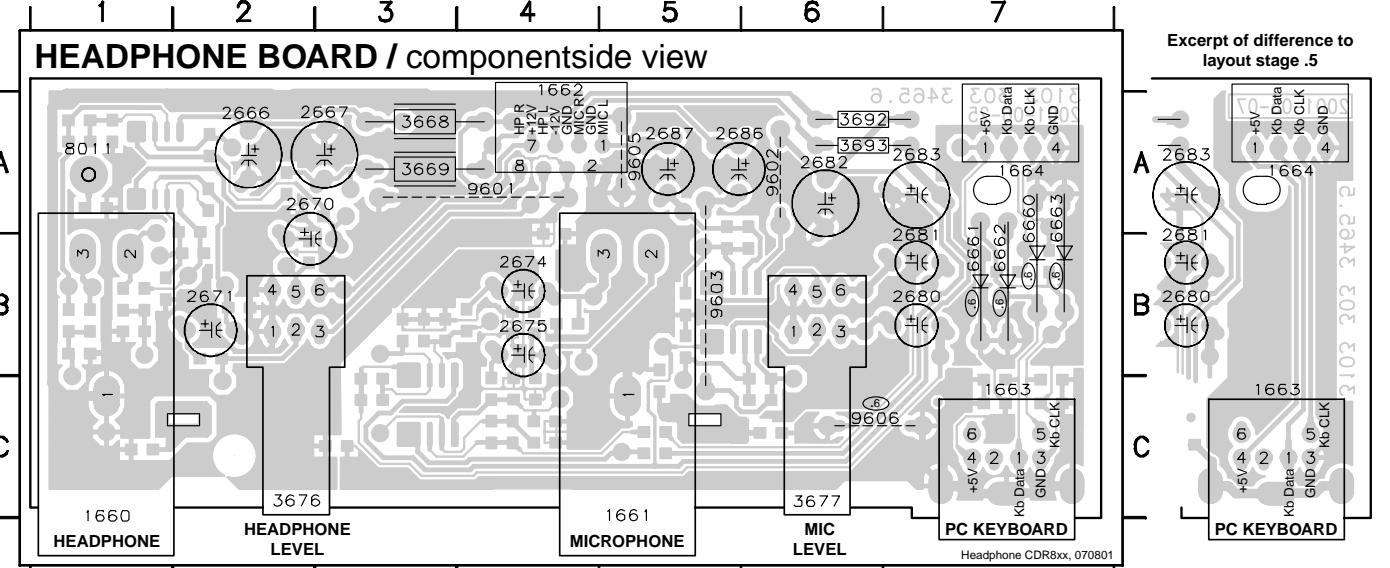

This assembly drawing shows a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.

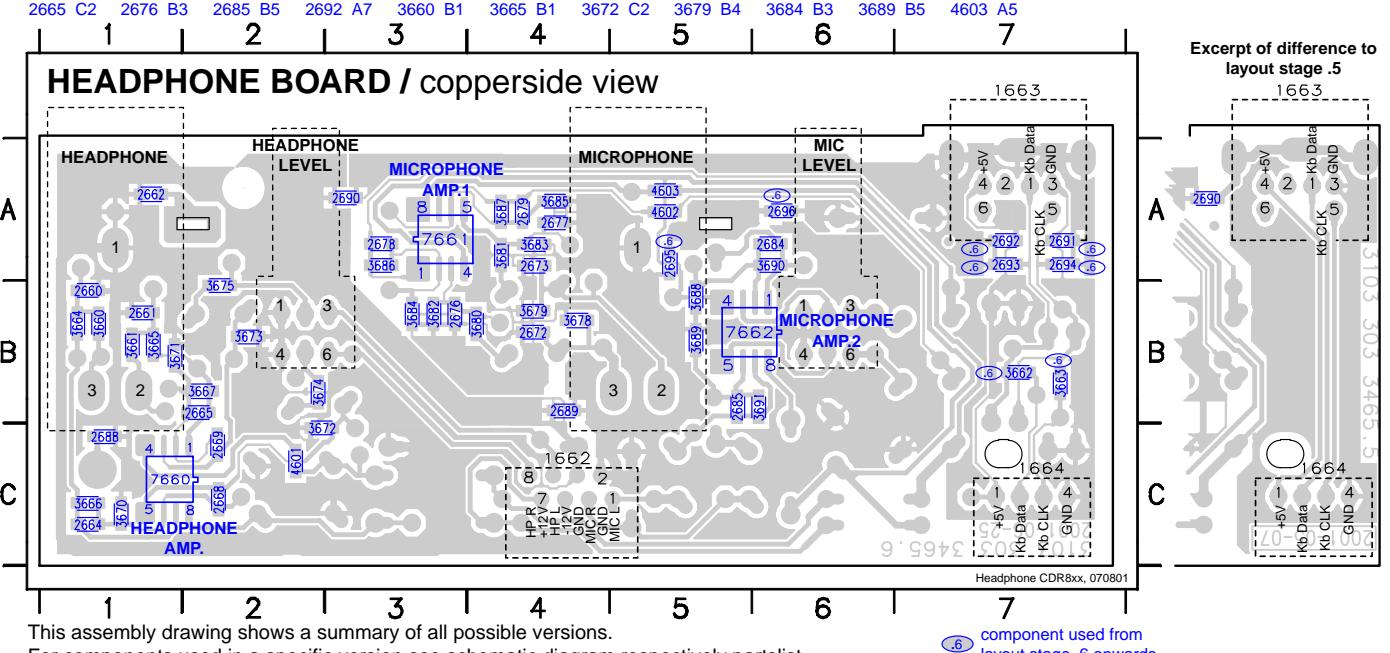



3CDC-LC-CDR

(3 Disc Carousel Changer)

Layout stage .6

TABLE OF CONTENTS

Service Hints	8-1
Wiring	8-2
Blockdiagram	8-3
Component Layout Main Board	8-4
Circuit Diagram part 1	8-5
Component Layout Main Board	8-6
Circuit Diagram part 2	8-7
Circuit Diagram part 3	8-8
Exploded View	8-8



Service hints

CAUTION


CHARGED CAPACITORS ON THE SERVO BOARD MAY DAMAGE THE CD DRIVE ELECTRONICS WHEN CONNECTING A NEW CD MECHANISM. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**


ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.

The following steps have to be done when replacing the CD mechanism:

1. Disconnect flexfoil cable from the old CD drive
2. Put a paperclip onto the flexfoil cable to short-circuit the contacts (fig.1)
3. Remove the old CD drive
4. Remove paperclip from the flexfoil cable and connect it to the new CD drive
5. Position the new CD drive on its studs
6. Remove solder joint from the Laser unit (see below)

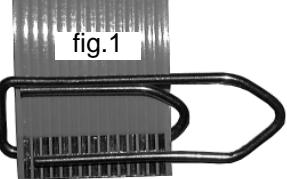


Attention: The laser diode of this CD drive is protected against ESD by a solder joint which short-circuits the laser diode to ground.
For proper functionality of the CD drive this solder joint must be removed **after** connecting the drive to the set.

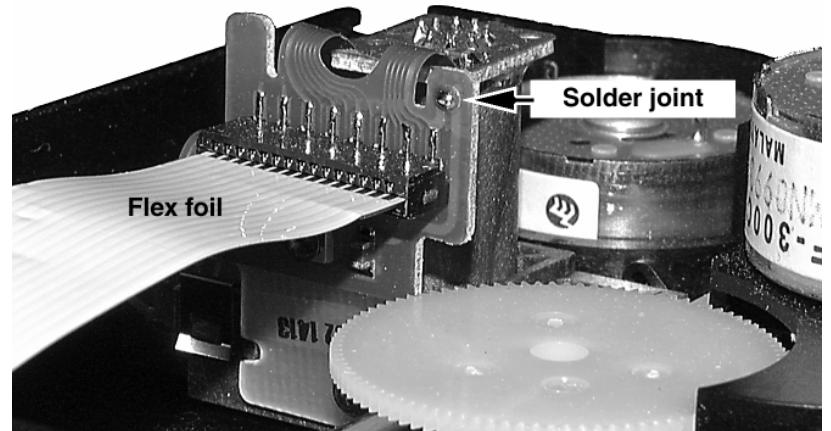

Emergency open

In case of a Supply fault, the tray can be opened manually.



1. Remove the top cover of the set to get access to the Changer Module.
2. Turn gearwheel clockwise (as shown in picture below).

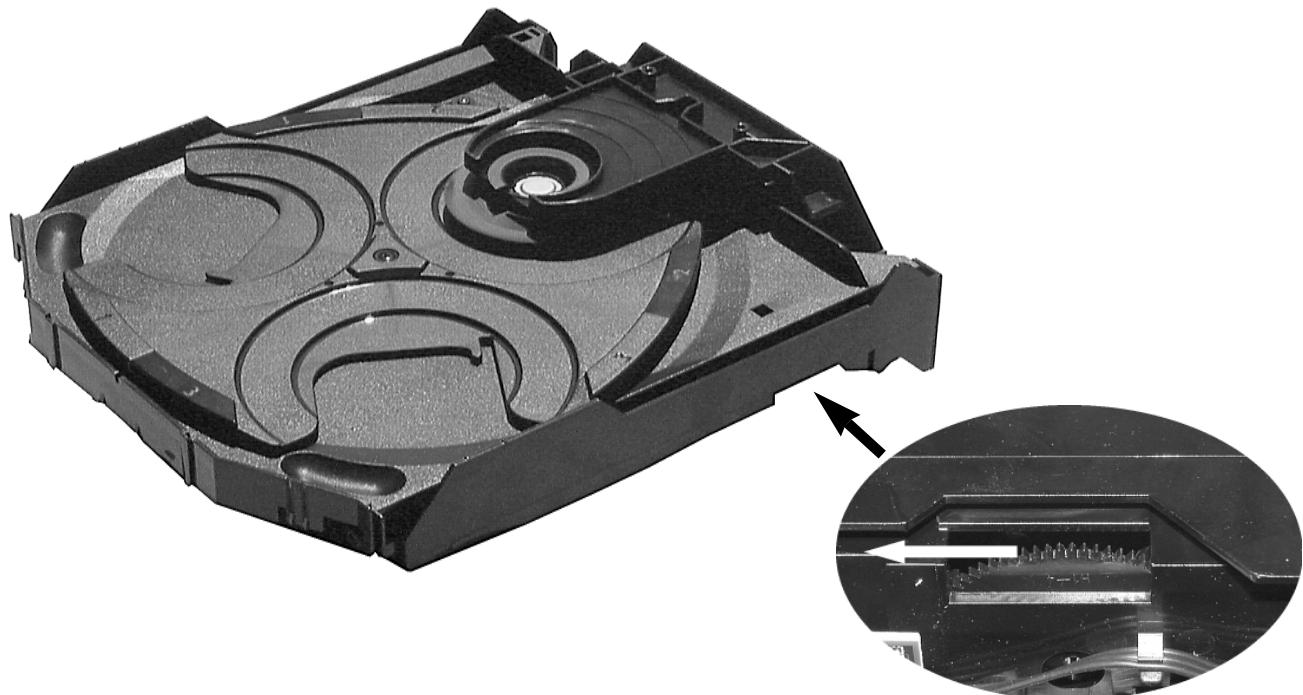


Service hints

Dismantling of Tray

1. Open the tray.
2. Release 2x catch as shown in fig. 2 and Detail A
3. Pull tray out.

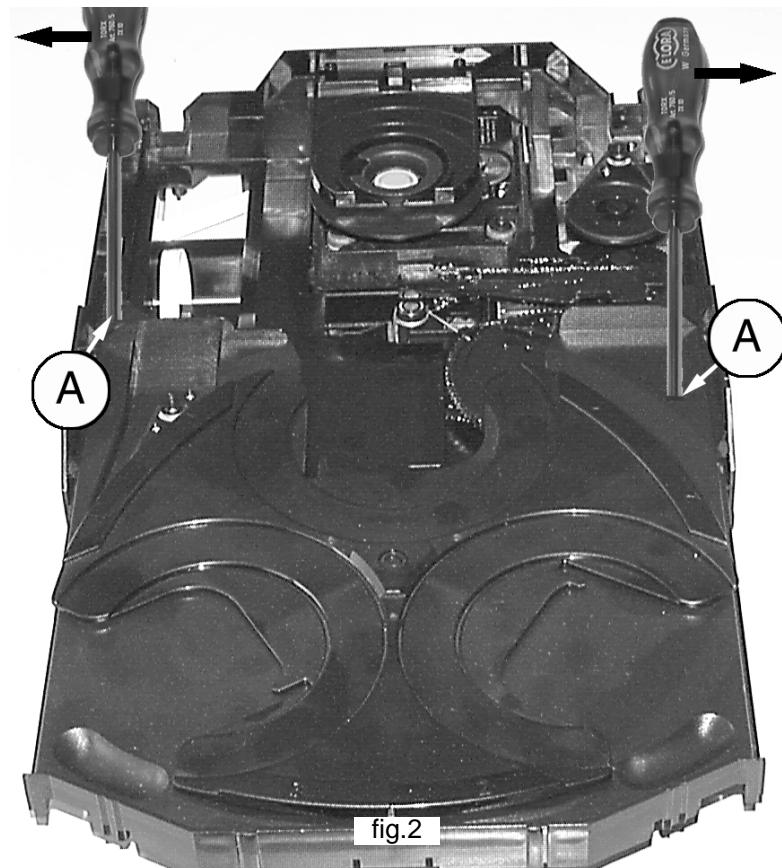
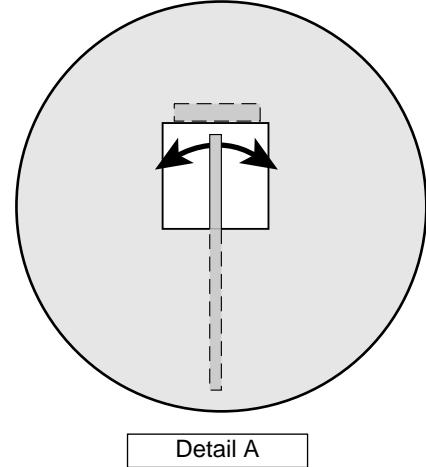


Wiring

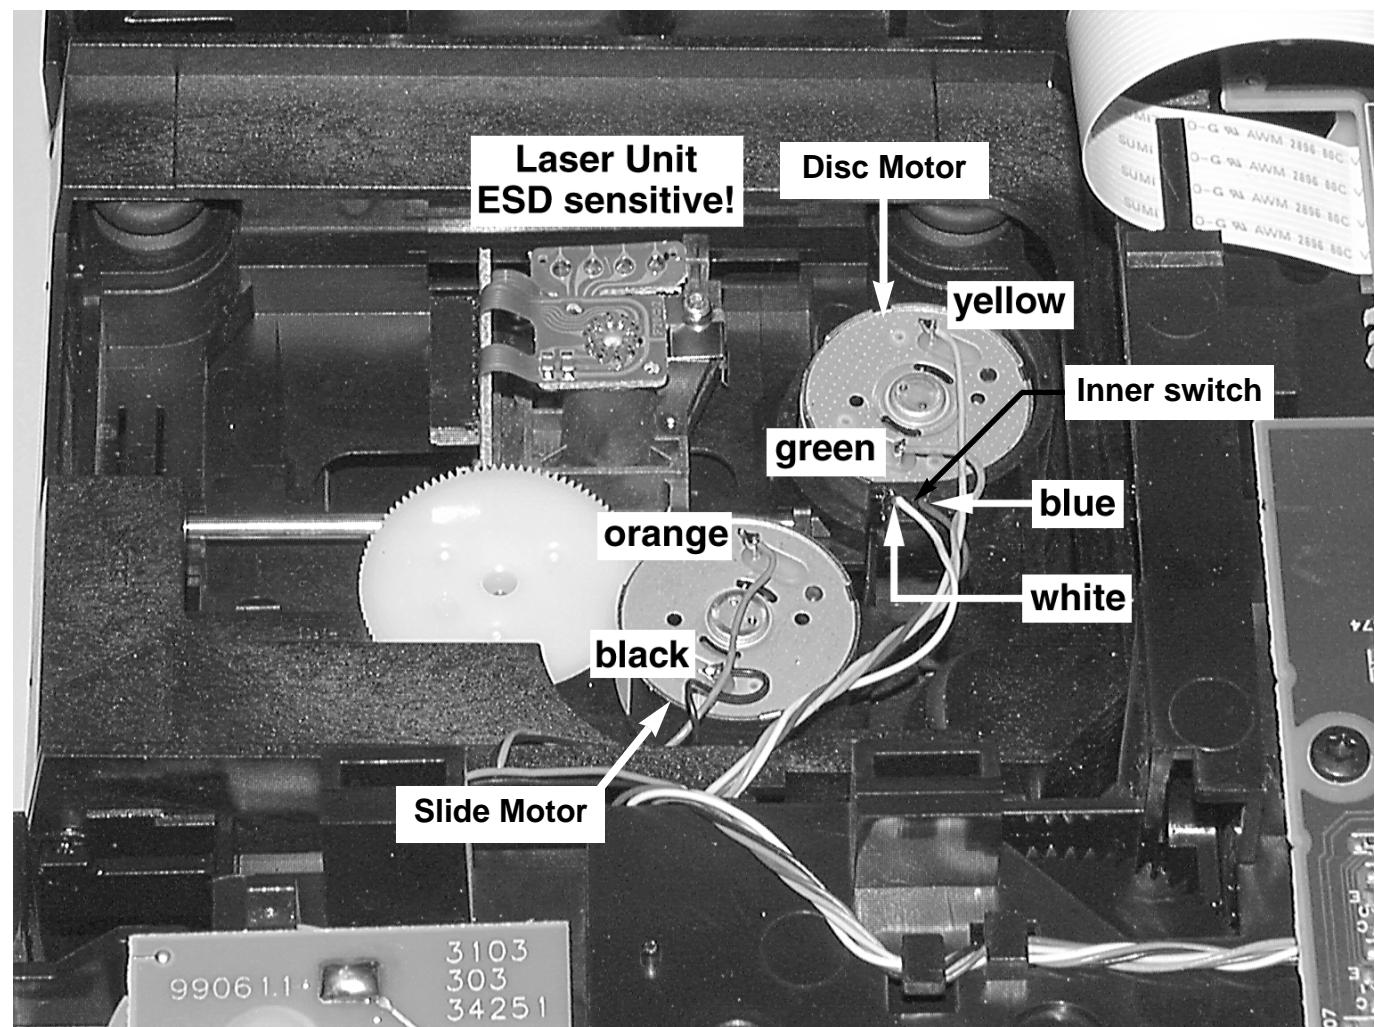



Assembling of Tray


1. Turn Cam (pos. 48) clockwise to end position.
2. If necessary - move Guiding (pos. 49) to the right end position.
3. Insert the Tray.

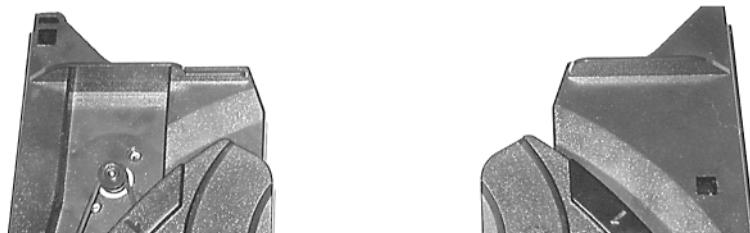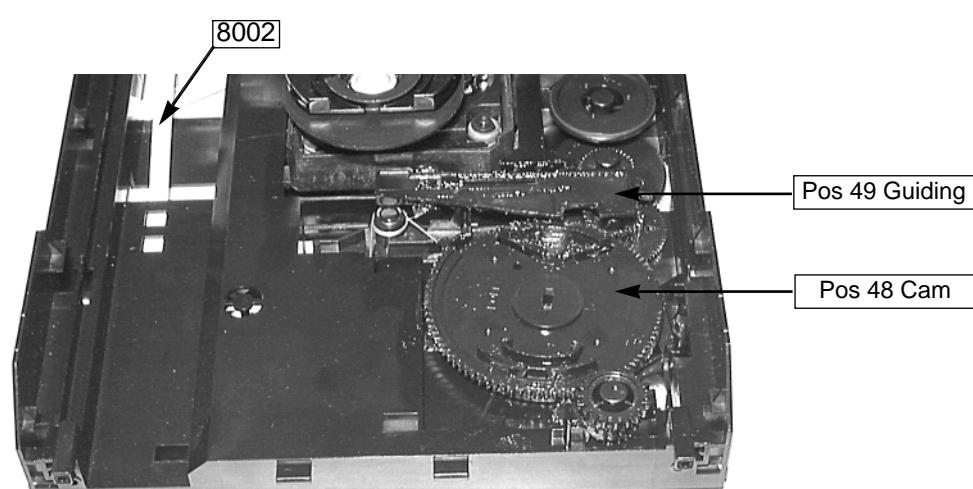


Service Position

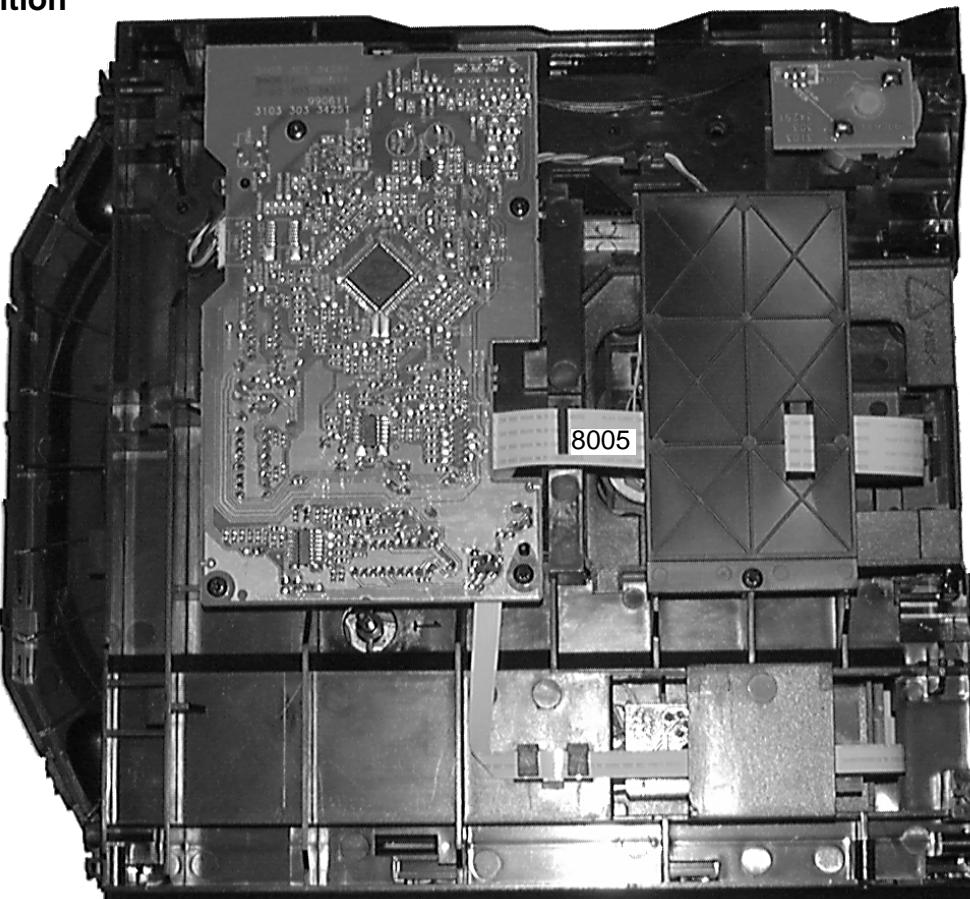

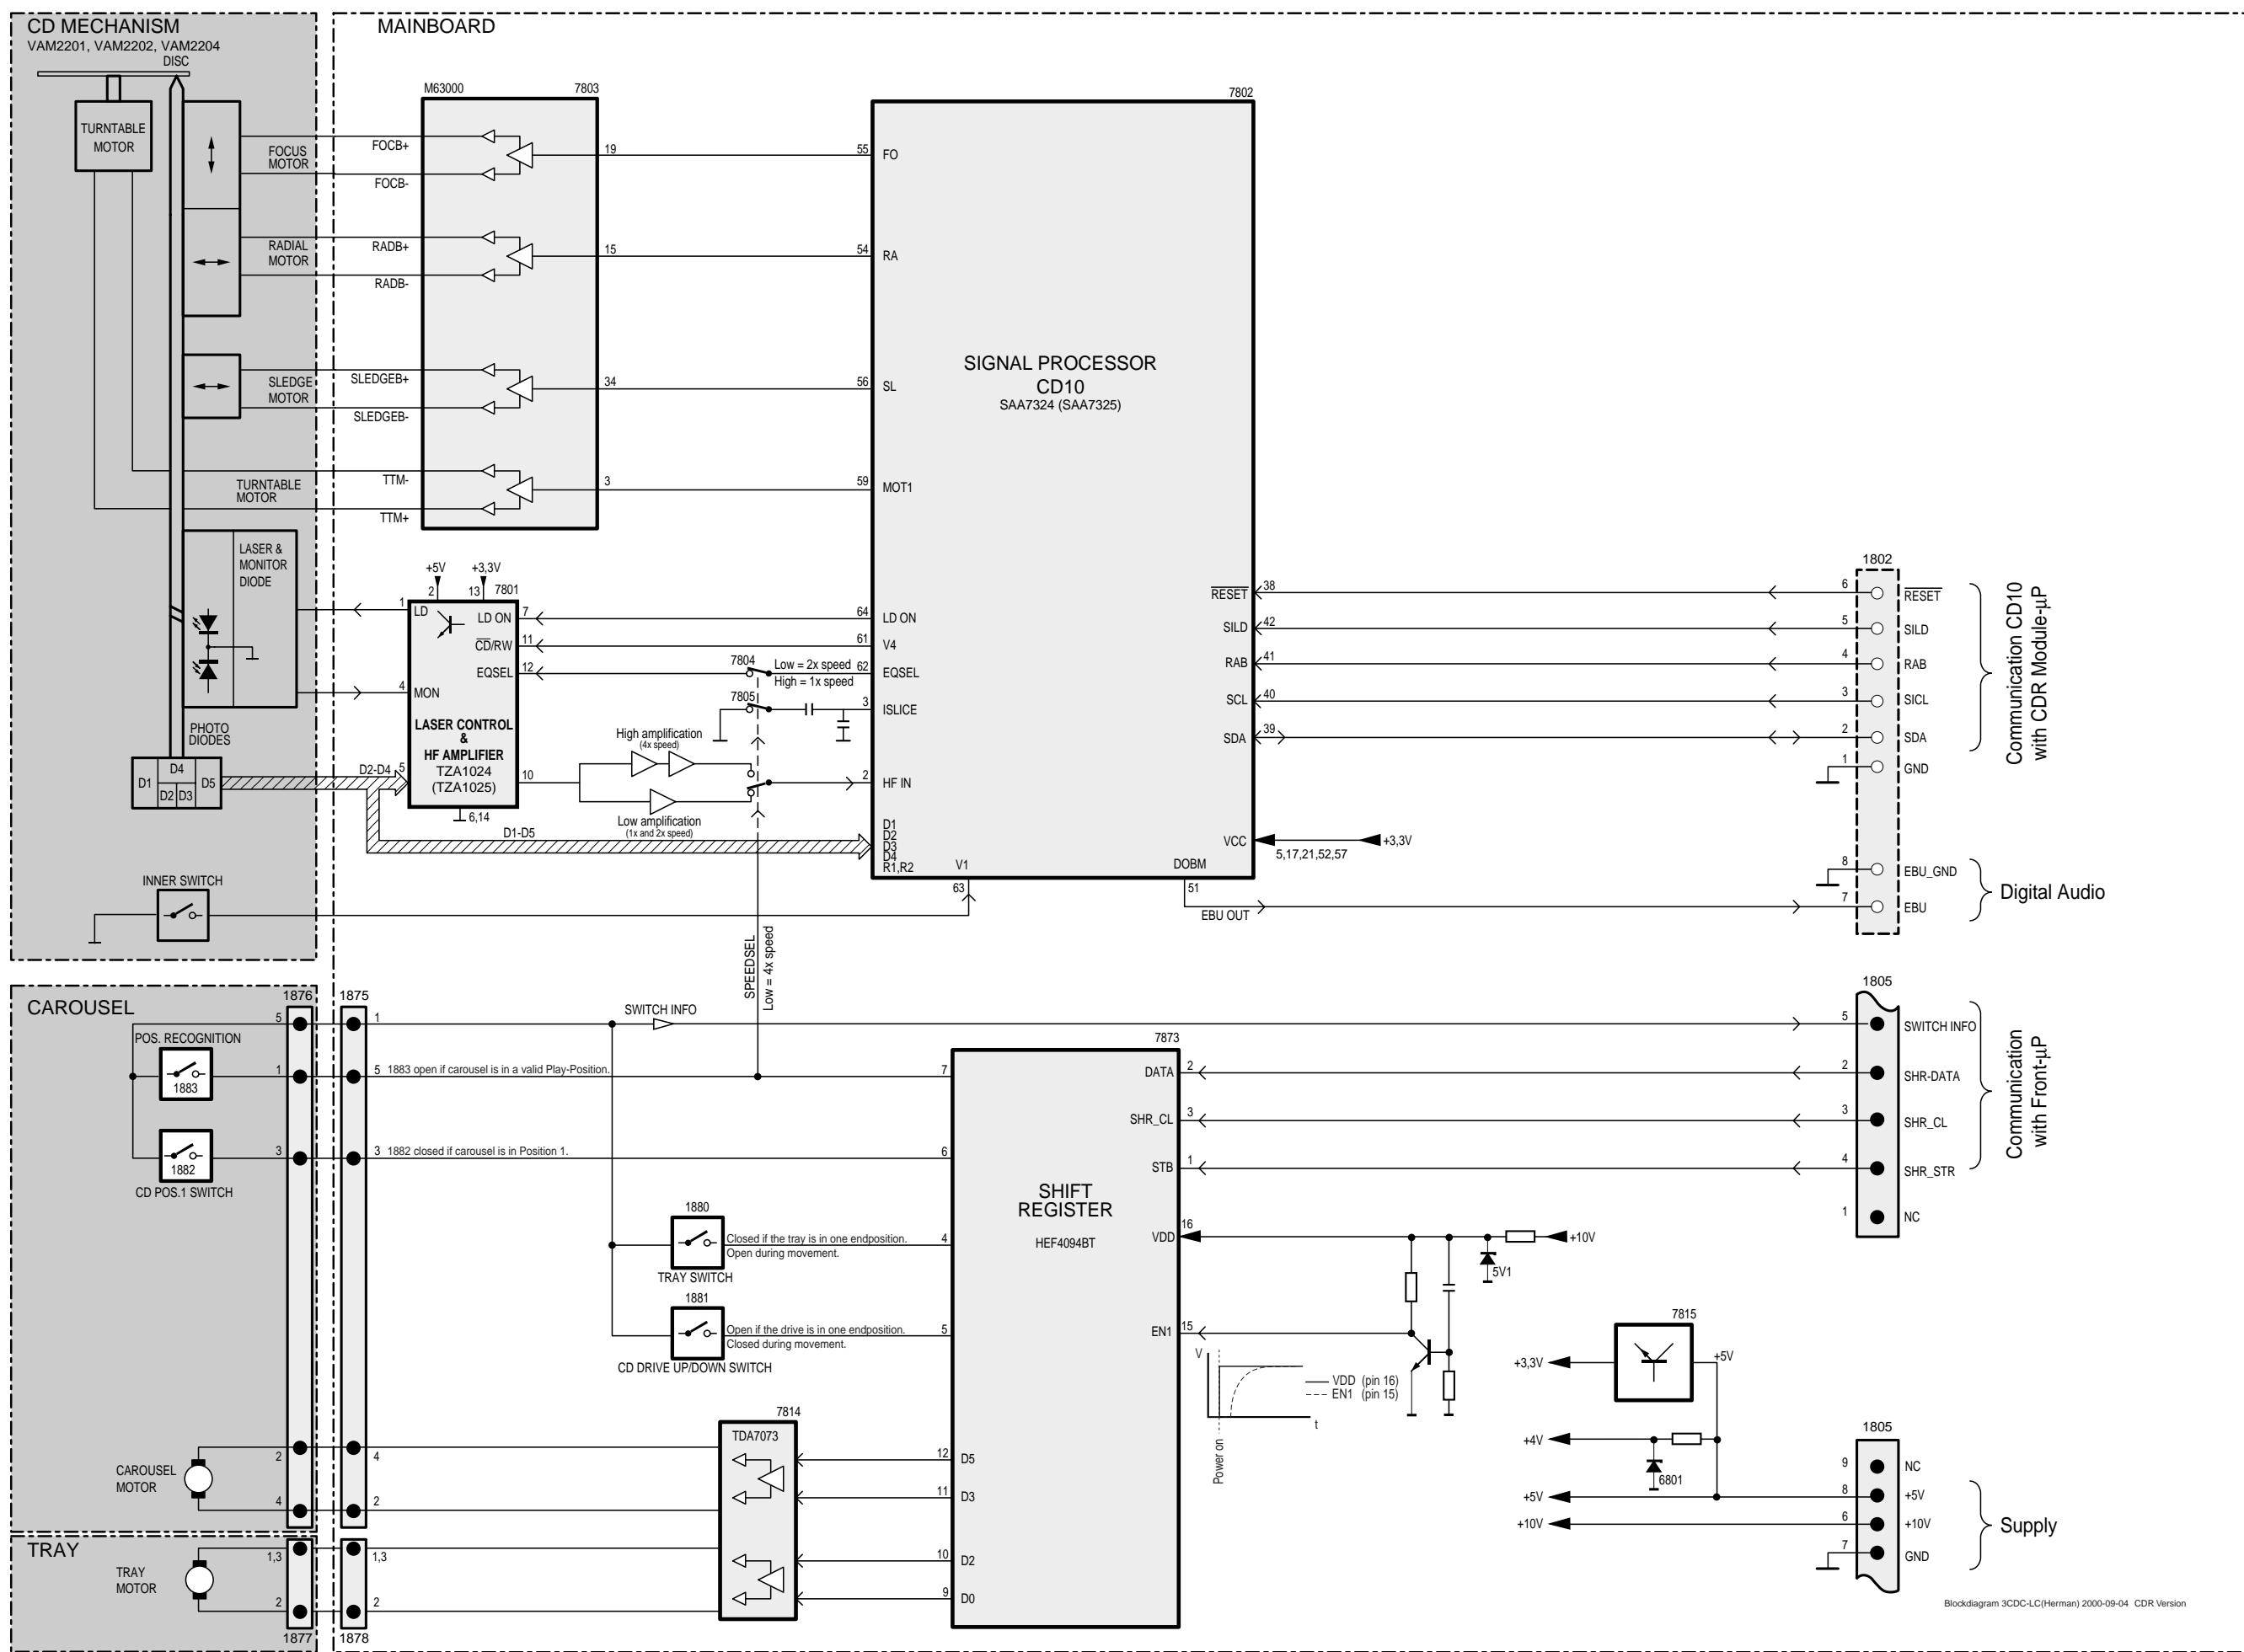BLOCK DIAGRAM 3CDC-LC CDR Version

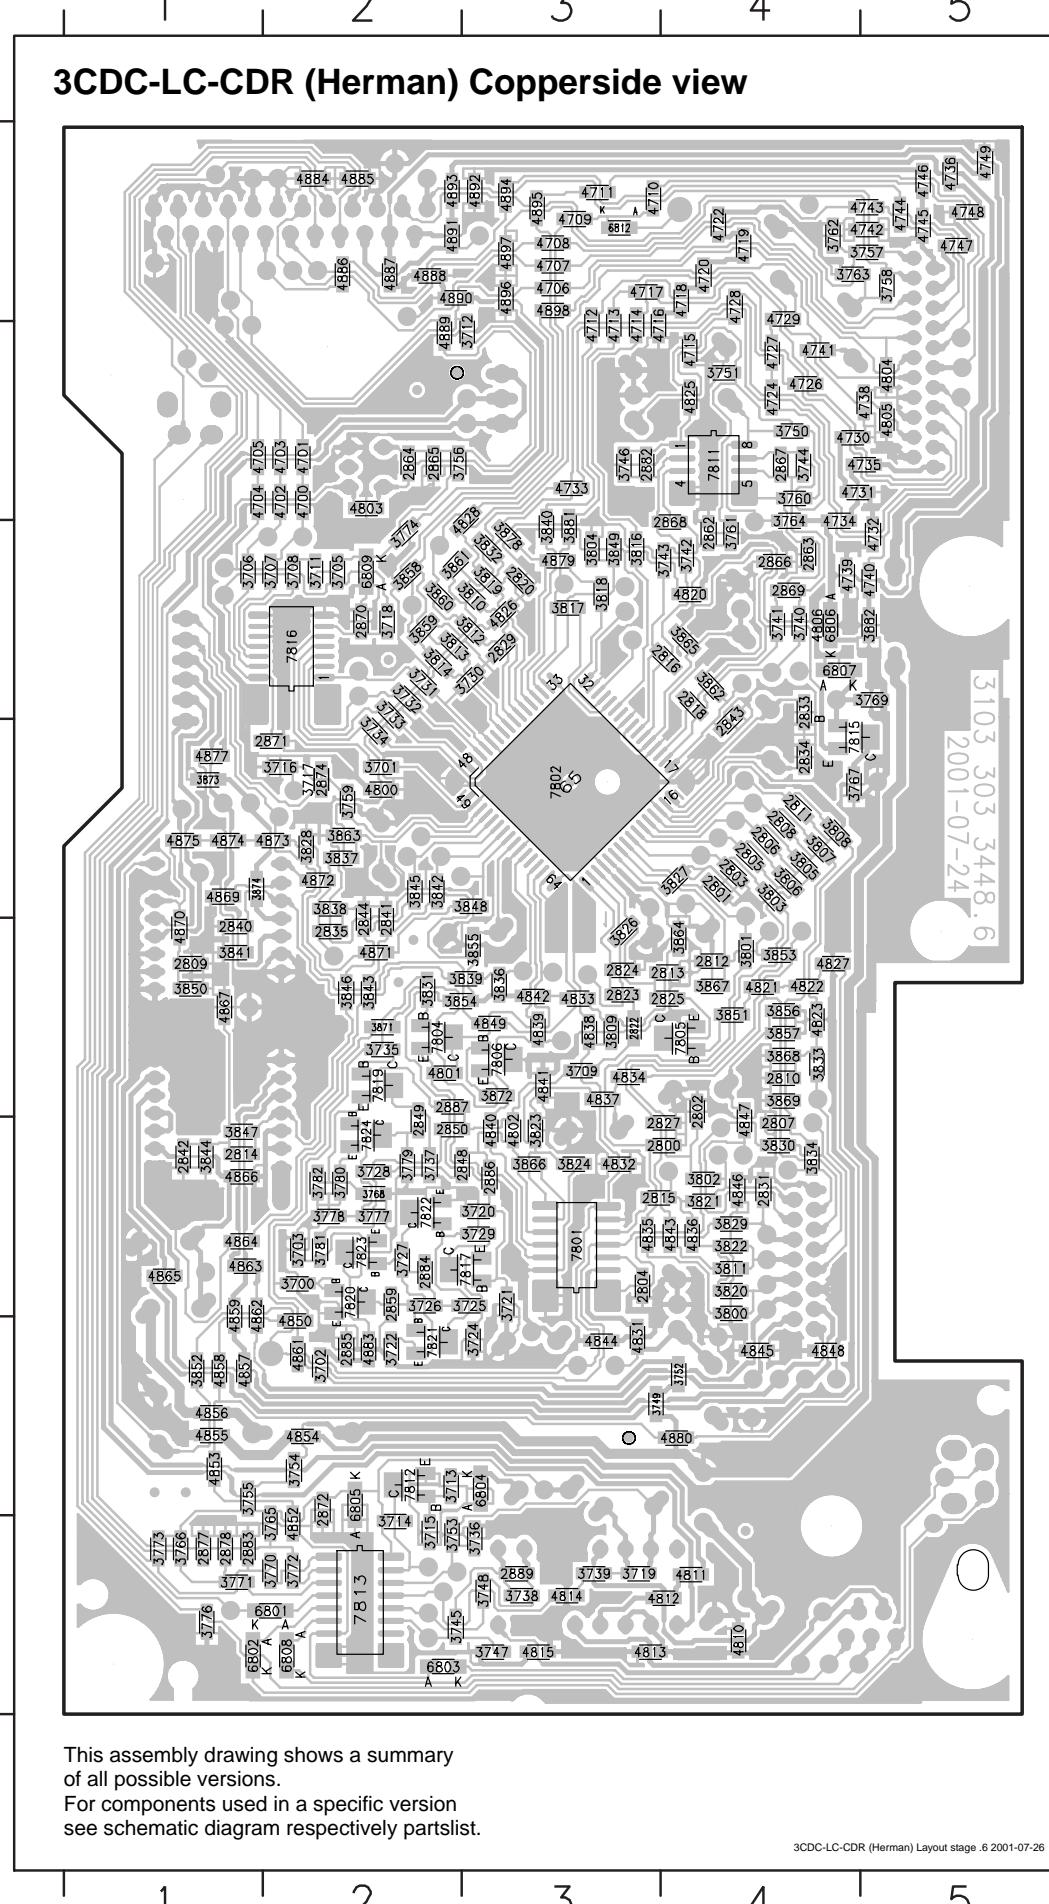


Mapping		Copperside	Componentside
A		2800 F4 3734 D2 3845 D2 4815 H3 7817 F3 0801 A4	
B		2801 D4 3735 E2 3846 E2 4820 C4 7819 E2 0802 G2	
C		2802 E4 3736 H3 3847 F1 4821 E4 7820 F2 1800 F4	
D		2803 D4 3737 F2 3848 D3 4822 E4 7821 G2 1801 C1	
E		2804 F3 3738 H3 3849 C3 4823 E4 7822 F2 1802 B5	
F		2805 D4 3739 H3 3850 E1 4825 B4 7823 F2 1805 A2	
G		2806 D4 3740 C4 3851 E4 4826 C3 7824 F2 1810 D4	
H		2807 F4 3741 C4 3852 G1 4827 E4 1875 H5	
I		2808 D4 3742 C4 3853 E4 4828 C3 1878 B3	
A		2809 E1 3743 C4 3854 E2 4831 G3 1880 B1	
B		2810 E4 3744 B4 3855 E3 4832 F3 1881 C5	
C		2811 D4 3745 H2 3856 E4 4833 E3 2817 F4	
D		2812 E4 3746 B3 3857 E4 4834 E3 2819 E4	
E		2813 E4 3747 H3 3858 C2 4835 F3 2821 C4	
F		2814 F1 3748 H3 3859 C2 4836 F4 2826 D3	
G		2815 F3 3749 G3 3860 C2 4837 E3 2828 D2	
H		2816 C4 3750 B4 3861 C2 4838 E3 2836 F3	
I		2818 C4 3751 B4 3862 C4 4839 E3 2837 D4	
A		2820 C3 3752 G4 3863 D2 4840 F3 2838 E3	
B		2822 E3 3753 H2 3864 E4 4841 E3 2839 F1	
C		2823 E3 3754 G2 3865 C4 4842 E3 2845 C4	
D		2824 E3 3755 G1 3866 F3 4843 F4 2846 G1	
E		2825 E4 3756 H2 3867 E4 4844 G3 2860 G3	
F		2827 F4 3757 A5 3868 E4 4845 G4 2861 B5	
G		2829 C3 3758 A5 3869 E4 4846 F4 2873 H4	
H		2831 F4 3759 D2 3871 E2 4847 F4 2876 B3	
I		2833 C4 3760 B4 3872 E3 4848 G4 2879 B4	
A		2834 D4 3761 C4 3873 D1 4849 E3 2880 A4	
B		2835 E2 3762 A4 3874 D1 4850 G2 2881 G3	
C		2840 E1 3763 D4 3878 C3 4852 H2 3775 G4	
D		2841 E2 3764 C4 3881 C3 4853 G1 3815 G4	
E		2842 F1 3765 H2 3882 C5 4854 G2 3835 F1	
F		2843 D4 3766 H1 4700 B2 4855 G1 5802 B2	
G		2844 E2 3767 D4 4701 B2 4856 G1 6810 G2	
H		2848 F2 3768 F2 4702 B2 4857 G1 6811 C5	
I		2849 F2 3769 C5 4703 B2 4858 G1 7803 E1	
A		2850 F2 3770 H2 4704 B1 4859 F1 7814 H3	
B		2859 F2 3771 H1 4705 B1 4861 G2 2862 C4	
C		2863 C4 3772 H2 4706 A3 4862 F1 2864 B2	
D		2865 B2 3774 C2 4708 A3 4864 F1 2866 C4	
E		2867 B4 3776 F2 4710 A3 4866 F1 2868 C4	
F		2869 C4 3777 F2 4712 B3 4869 D1 2870 C2	
G		2871 C2 3781 F2 4714 B3 4871 E2 2872 G2	
H		2874 D2 3800 F4 4716 B3 4873 D2 2877 H1	
I		2878 H1 3803 D4 4719 A4 4877 D1 2882 B3	
A		2883 H1 3805 D4 4722 A4 4880 G4 2884 F2	
B		2885 G2 3807 D4 4726 B4 4884 A2 2886 F2	
C		3808 D4 4727 B4 4885 A2 2887 E2 3809 E3	
D		4728 A4 4886 A2 2888 H3 3810 C3	
E		4729 A4 4887 A2 3700 F2 3811 F4	
F		4730 B4 4888 A2 3701 C3 3812 C3	
G		4731 B4 4889 B2 3702 C2 3813 C2	
H		4732 B4 4890 B2 3703 C2 3814 C2	
I		4733 B4 4891 B2 3704 C2 3815 C2	
A		4734 B4 4892 B2 3705 C2 3816 C2	
B		4735 B4 4893 B2 3706 C2 3817 C2	
C		4736 B4 4894 B2 3707 C2 3818 C2	
D		4737 B4 4895 B2 3708 C2 3819 C2	
E		4738 B4 4896 B2 3709 C2 3820 C2	
F		4739 B4 4897 B2 3710 C2 3821 C2	
G		4740 B4 4898 B2 3711 C2 3822 C2	
H		4741 B4 4899 B2 3712 C2 3823 C2	
I		4742 B4 4900 B2 3713 C2 3824 C2	
A		4743 B4 4901 B2 3714 C2 3825 C2	
B		4744 B4 4902 B2 3715 C2 3826 C2	
C		4745 B4 4903 B2 3716 C2 3827 C2	
D		4746 B4 4904 B2 3717 C2 3828 C2	
E		4747 B4 4905 B2 3718 C2 3829 C2	
F		4748 B4 4906 B2 3719 C2 3830 C2	
G		4749 B4 4907 B2 3720 C2 3831 C2	
H		4750 B4 4908 B2 3721 C2 3832 C2	
I		4751 B4 4909 B2 3722 C2 3833 C2	
A		4752 B4 4910 B2 3723 C2 3834 C2	
B		4753 B4 4911 B2 3724 C2 3835 C2	
C		4754 B4 4912 B2 3725 C2 3836 C2	
D		4755 B4 4913 B2 3726 C2 3837 C2	
E		4756 B4 4914 B2 3727 C2 3838 C2	
F		4757 B4 4915 B2 3728 C2 3839 C2	
G		4758 B4 4916 B2 3729 C2 3840 C2	
H		4759 B4 4917 B2 3730 C2 3841 C2	
I		4760 B4 4918 B2 3731 C2 3842 C2	
A		4761 B4 4919 B2 3732 C2 3843 C2	
B		4762 B4 4920 B2 3733 C2 3844 C2	

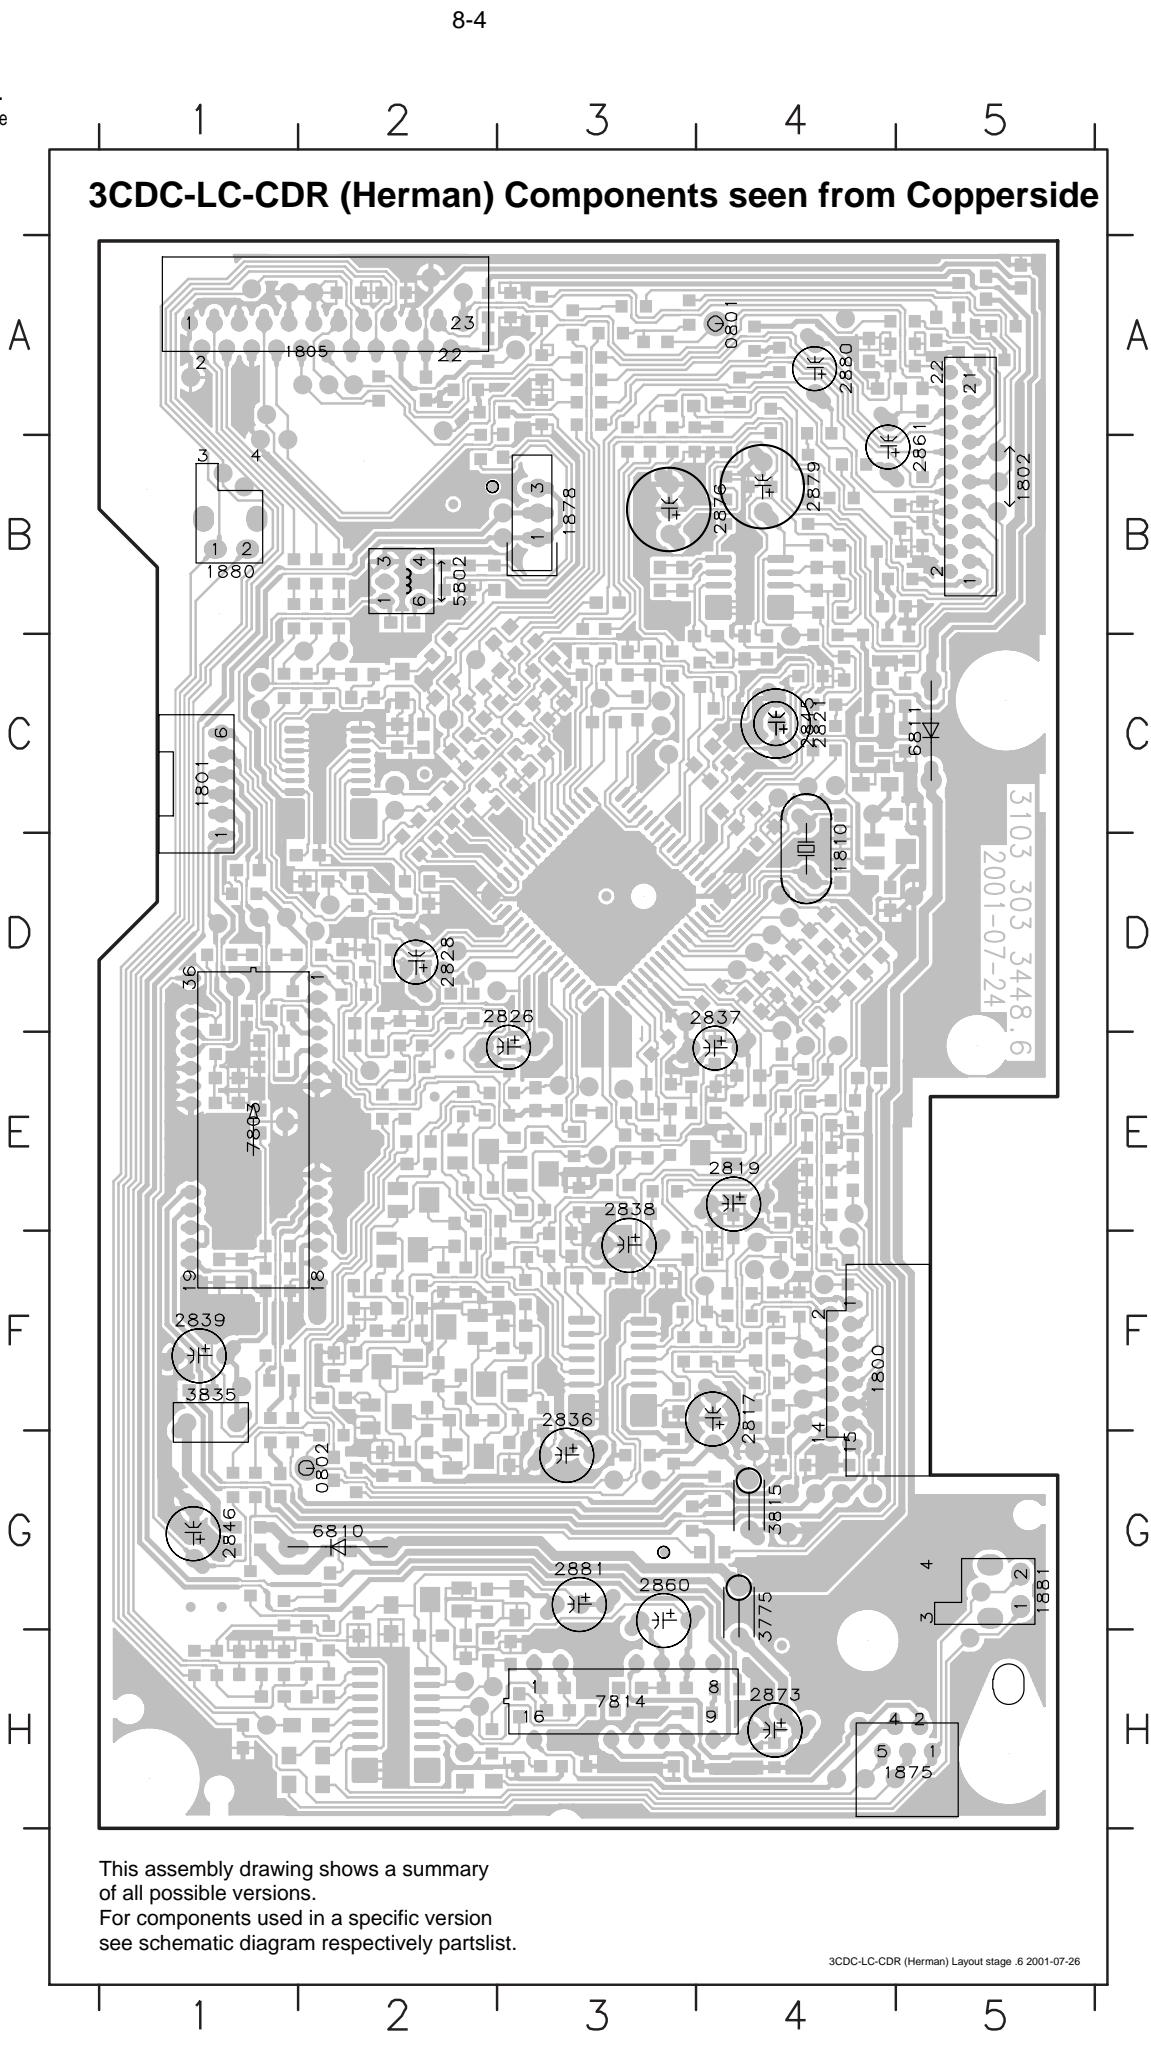

1800	C1	2803	B5	2808	A5	2815	D5	2830	H6	2839	G5	2846	H5	2859	D12	2887	E12	3721	C10	3727	C12	3778	E10	3800	B4	3806	B4	3820	D4	3830	D4	3836	H6	3842	F6	3847	G5	3856	C2	3869	A4	7803	E3	7820	D11
1801	G1	2804	D6	2809	I5	2817	E5	2831	E4	2840	H5	2846	D9	2878	D10	3700	D11	3722	D9	3779	D10	3801	B4	3807	A4	3821	C4	3831	F8	3843	I5	3847	I5	3857	C2	3872	E8	7804	E8	7821	C12				
2800	C4	2805	B5	2810	A4	2819	C2	2832	I6	2841	F6	2849	E11	2884	C11	3702	C9	3724	C11	3729	C12	3780	E10	3802	B4	3808	A4	3822	C4	3833	A3	3838	I5	3844	F5	3850	I5	3863	A13	3873	G2	7806	E5	7822	C13
2801	C5	2806	A5	2811	A5	2827	B4	2835	I5	2842	F5	2850	D14	2885	C9	3703	D13	3725	C11	3735	E11	3781	D13	3803	B4	3811	B4	3824	D8	3834	A3	3839	H6	3845	G6	3852	H5	3866	D8	3874	H2	7817	C10	7823	C13
2802	B4	2807	A4	2814	G5	2828	A13	2836	E8	2844	G6	2851	E9	2886	C9	3720	C10	3726	C11	3777	D10	3782	E12	3805	A4	3815	E5	3829	E4	3835	G5	3841	H5	3846	G6	3854	E8	3868	A4	7801	D6	7819	E11	7824	E10

3CDC-LC part 1

HF-Amplifier & Laser power control

HF-Amplifier for quad speed versions only

CD Drive

Servo Driver

Motor Driver

FROM SIGNALPROCESSOR

TO SIGNALPROCESSOR


*** marked components only foreseen**

EYE-PATTERN

DC voltages measured in PLAY MODE with following conditions:

- +10V = 10V
- +5V = 5V

3CDC-LC-CDR (Herman) Copperside view

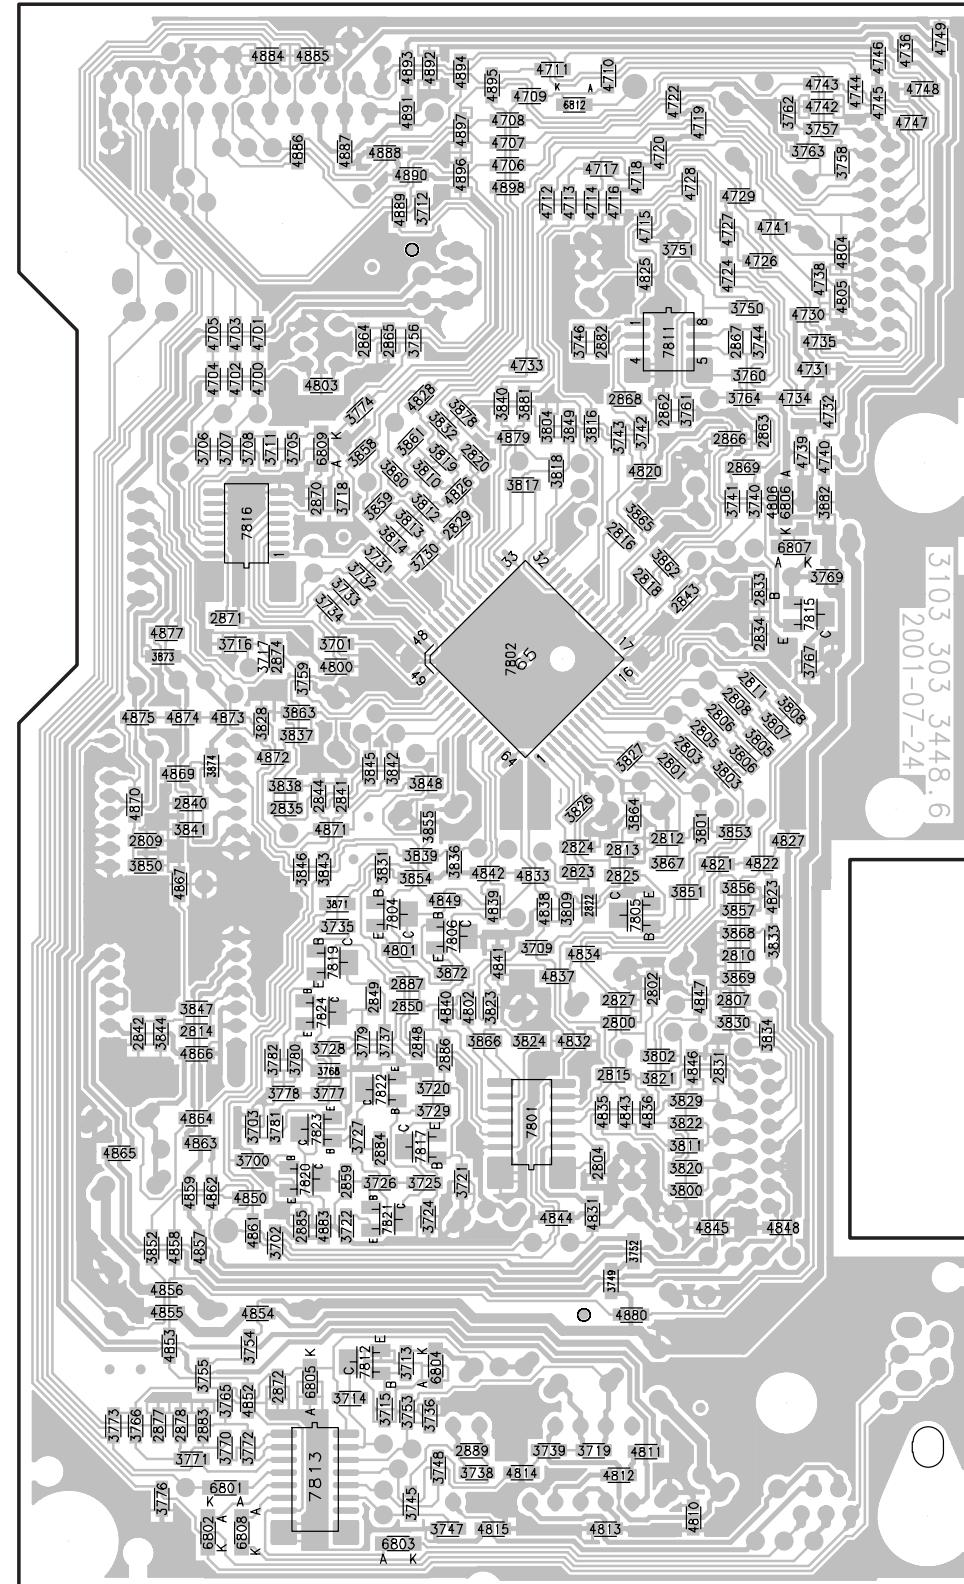


This assembly drawing shows a summary of all possible versions.

For components used in a specific version
see schematic diagram respectively partslist.

Mapping

Copperside						Componentside					
2800	F4	3734	D2	3845	D2	4815	H3	7817	F3	0801	A4
2801	D4	3735	E2	3846	E2	4820	C4	7819	E2	0802	G2
2802	E4	3736	H3	3847	F1	4821	E4	7820	F2	1800	F4
2803	D4	3737	F2	3848	D3	4822	E4	7821	G2	1801	C1
2804	F3	3738	H3	3849	C3	4823	E4	7822	F2	1802	B5
2805	D4	3739	H3	3850	E1	4825	B4	7823	F2	1805	A2
2806	D4	3740	C4	3851	E4	4826	C3	7824	F2	1810	D4
2807	F4	3741	C4	3852	G1	4827	E4			1875	H5
2808	D4	3742	C4	3853	E4	4828	C3			1878	B3
2809	E1	3743	C4	3854	E2	4831	G3			1880	B1
2810	E4	3744	B4	3855	E3	4832	F3			1881	G5
2811	D4	3745	H2	3856	E4	4833	E3			2817	F4
2812	E4	3746	B3	3857	E4	4834	E3			2819	E4
2813	E4	3747	H3	3858	C2	4835	F3			2821	C4
2814	F1	3748	H3	3859	C2	4836	F4			2826	D3
2815	F3	3749	G3	3860	C2	4837	E3			2828	D2
2816	C4	3750	B4	3861	C2	4838	E3			2836	F3
2818	C4	3751	B4	3862	C4	4839	E3			2837	D4
2820	C3	3752	G4	3863	D2	4840	F3			2838	E3
2822	E3	3753	H2	3864	E4	4841	E3			2839	F1
2823	E3	3754	G2	3865	C4	4842	E3			2845	C4
2824	E3	3755	G1	3866	F3	4843	F4			2846	G1
2825	E4	3756	B2	3867	E4	4844	G3			2860	G3
2827	F4	3757	A5	3868	E4	4845	G4			2861	B5
2829	C3	3758	A5	3869	E4	4846	F4			2873	H4
2831	F4	3759	D2	3871	E2	4847	F4			2876	B3
2833	C4	3760	B4	3872	E3	4848	G4			2879	B4
2834	D4	3761	C4	3873	D1	4849	E3			2880	A4
2835	E2	3762	A4	3874	D1	4850	G2			2881	G3
2840	E1	3763	A4	3878	C3	4852	H2			3775	G4
2841	E2	3764	C4	3881	C3	4853	G1			3815	G4
2842	F1	3765	H2	3882	C5	4854	G2			3835	F1
2843	D4	3766	H1	4700	B2	4855	G1			5802	B2
2844	E2	3767	D4	4701	B2	4856	G1			6810	G2
2848	F2	3768	F2	4702	B2	4857	G1			6811	C5
2849	F2	3769	C5	4703	B2	4858	G1			7803	E1
2850	F2	3770	H2	4704	B1	4859	F1			7814	H3
2859	F2	3771	H1	4705	B1	4861	G2				
2862	C4	3772	H2	4706	A3	4862	F1				
2863	C4	3773	H1	4707	A3	4863	F1				
2864	B2	3774	C2	4708	A3	4864	F1				
2865	B2	3776	H1	4709	A3	4865	F1				
2866	C4	3777	F2	4710	A3	4866	F1				
2867	B4	3778	F2	4711	A3	4867	E1				
2868	C4	3779	F2	4712	B3	4869	D1				
2869	C4	3780	F2	4713	B3	4870	E1				
2870	C2	3781	F2	4714	B3	4871	E2				
2871	D2	3782	F2	4715	B4	4872	D2				
2872	G2	3800	F4	4716	B3	4873	D2				
2874	D2	3801	E4	4717	A3	4874	D1				
2877	H1	3802	F4	4718	A4	4875	D1				
2878	H1	3803	D4	4719	A4	4877	D1				
2882	B3	3804	C3	4720	A4	4879	C3				
2883	H1	3805	D4	4722	A4	4880	G4				
2884	F2	3806	D4	4724	B4	4883	G2				
2885	G2	3807	D4	4726	B4	4884	A2				
2886	F3	3808	D4	4727	B4	4885	A2				
2887	E2	3809	E3	4728	A4	4886	A2				
2889	H3	3810	C3	4729	A4	4887	A2				
3700	F2	3811	F4	4730	B4	4888	A2				
3701	D2	3812	C3	4731	B4	4889	B2				
3702	G2	3813	C2	4732	C5	4890	A2				
3703	F2	3814	C2	4733	B3	4891	A2				
3705	C2	3816	C3	4734	C4	4892	A3				
3706	C1	3817	C3	4735	B5	4893	A2				
3707	C2	3818	C3	4736	A5	4894	A3				
3708	C2	3819	C3	4738	B5	4895	A3				
3709	E3	3820	F4	4739	C4	4896	A3				
3711	C2	3821	F4	4740	C5	4897	A3				
3712	B3	3822	F4	4741	B4	4898	A3				
3713	G2	3823	F3	4742	A5	6801	H2				
3714	H2	3824	F3	4743	A5	6802	H1				
3715	H2	3826	E3	4744	A5	6803	H2				
3716	D2	3827	D4	4745	A5	6804	G3				
3717	D2	3828	D2	4746	A5	6805	G2				
3718	C2	3829	F4	4747	A5	6806	C4				
3719	H3	3830	F4	4748	A5	6807	C4				
3720	F3	3831	E2	4749	A5	6808	H2				
3721	F3	3832	C3	4800	D2	6809	C2				
3722	G2	3833	E4	4801	E2	6812	A3				
3724	G3	3834	F4	4802	F3	7801	F3				
3725	F3	3836	E3	4803	B2	7802	D3				
3726	F2	3837	D2	4804	B5	7804	E2				
3727	F2	3838	D2	4805	B5	7805	E4				
3728	F2	3839	E3	4806	C4	7806	E3				
3729	F3	3840	C3	4810	H4	7811	B4				
3730	C3	3841	E1	4811	H4	7812	G2				
3731	C2	3842	D2	4812	H4	7813	H2				
3732	C2	3843	E2	4813	H3	7815	D4				
3733	C2	3844	F1	4814	H3	7816	C2				


3CDC-LC-CDR (Herman) Components seen from Copperside

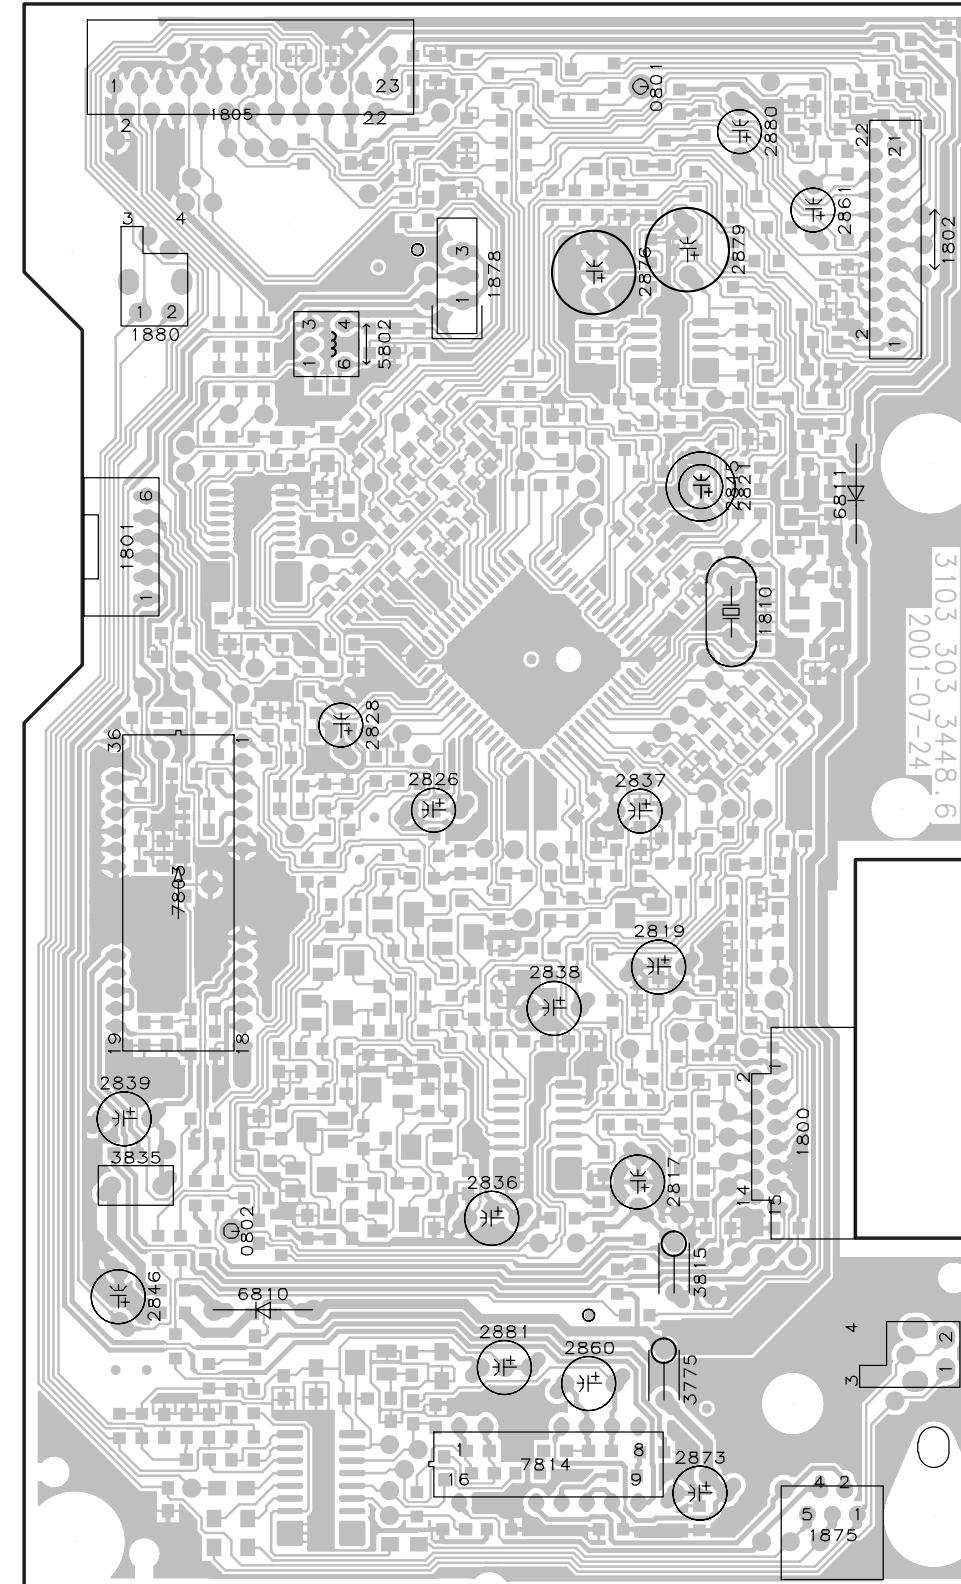




This assembly drawing shows a summary of all possible versions.

For components used in a specific version
see schematic diagram respectively partslist.

1802	C14	2813	A3	2820	G5	2824	B3	2829	G5	2837	B4	2845	C7	3716	F2	3767	E11	3809	B2	3813	F5	3823	A4	3828	B3	3851	A3	3858	G4	3861	G4	3865	D7	6811	G11	7802	C5		
1803	G14	2816	D7	2822	A3	2825	A3	2833	B6	2838	A4	3709	A3	3717	G2	3769	F11	3810	G5	3814	F4	3826	B3	3832	G6	3853	A4	3859	G4	3862	B7	3867	A4	6812	B2	7802	A3	7815	F11
1810	B6	2818	C7	2823	B3	2826	D3	2834	B6	2843	C7	3712	G2	3759	F2	3804	F7	3812	F5	3819	G5	3827	B4	3849	F6	3855	D2	3860	G4	3864	A4	6807	F11	7802	A3	7815	F11		

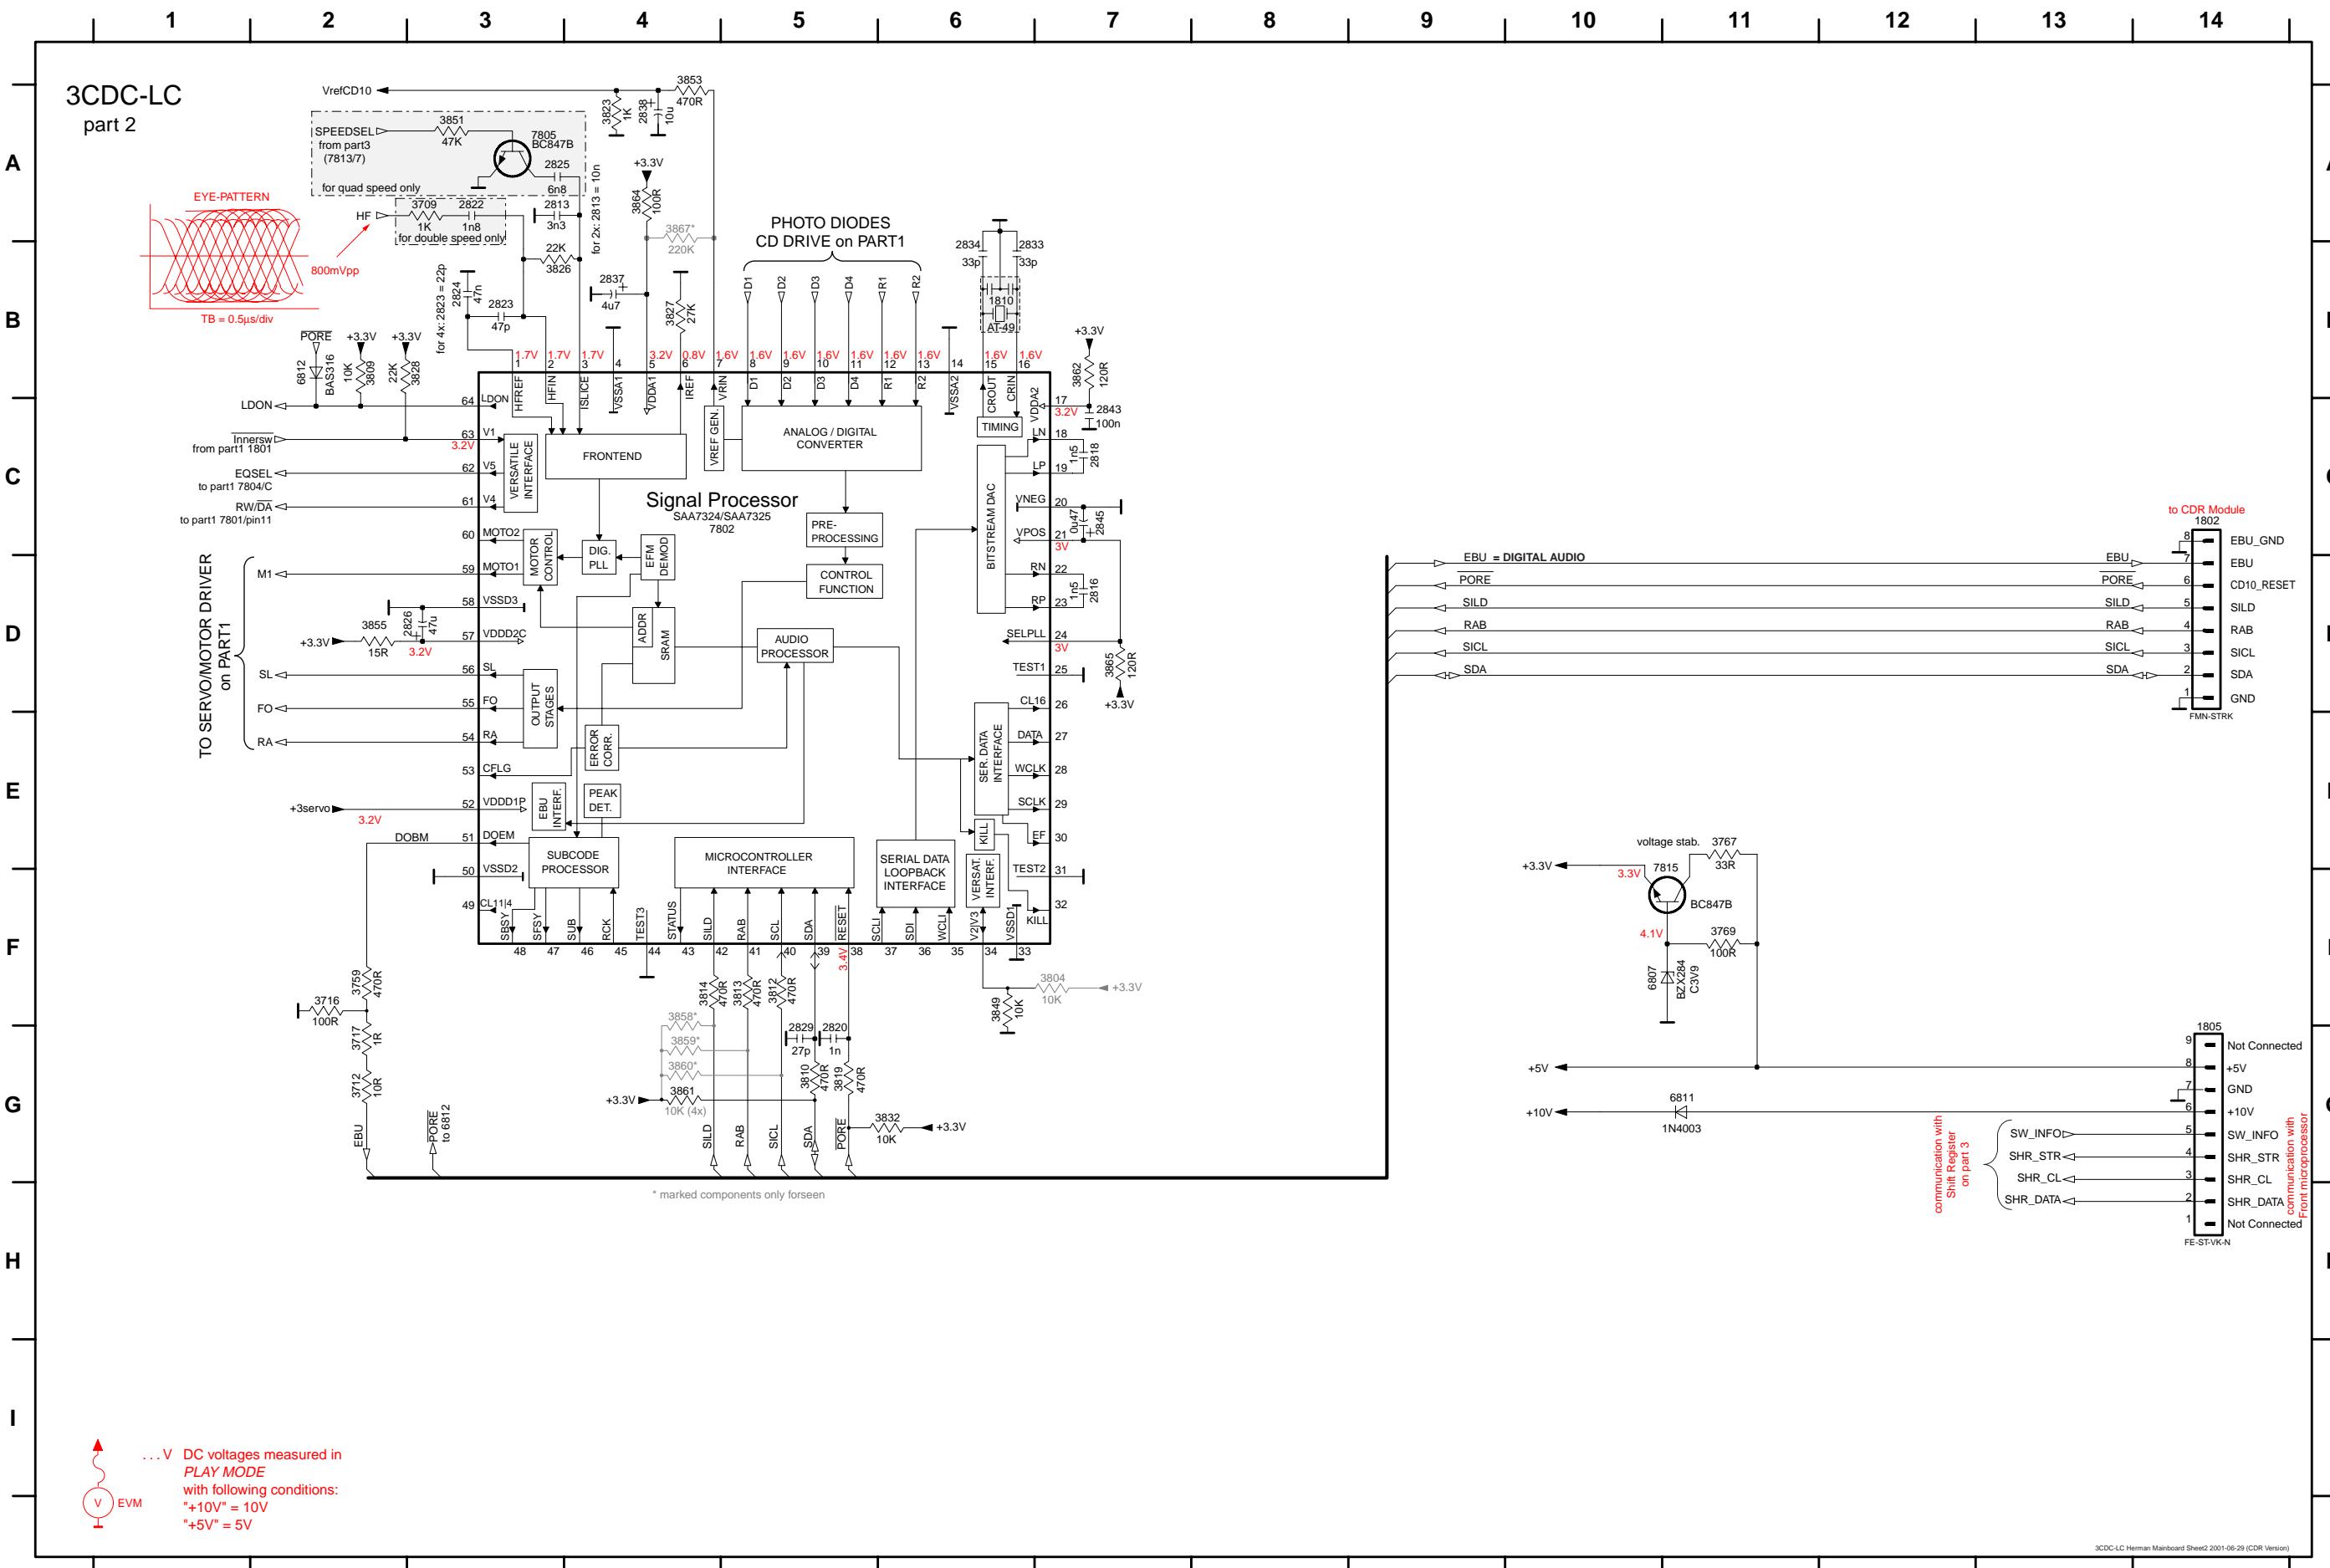


1875	F3	1876	B3	1880	B2	1883	E4	2878	C6	3714	A5	3739	D2	3754	A3	3771	C5	6801	B3	6808	B3	8003	F1
1875	E5	1876	F3	1881	B2	2860	D2	2881	C6	3715	B5	3745	D3	3755	A3	3772	C5	6802	B3	7812	A5		
1875	B3	1876	E5	1882	B2	2872	A3	2883	C6	3719	D2	3747	C3	3765	B6	3773	B6	6803	B3	7813	A4		
1875	A2	1877	F1	1882	E4	2873	E1	2889	D2	3736	C1	3748	D2	3766	B6	3775	E1	6804	B5	7814	E1		
1876	A1	1878	F1	1883	B2	2877	C6	3713	A5	3738	D2	3753	D2	3770	C5	3878	A2	6805	A4	8002	E5		

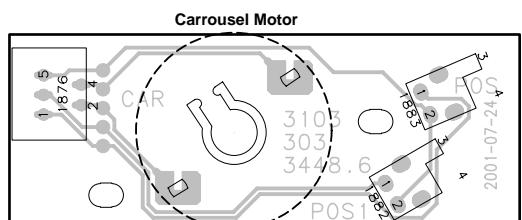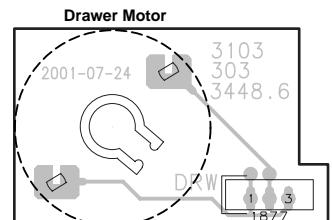
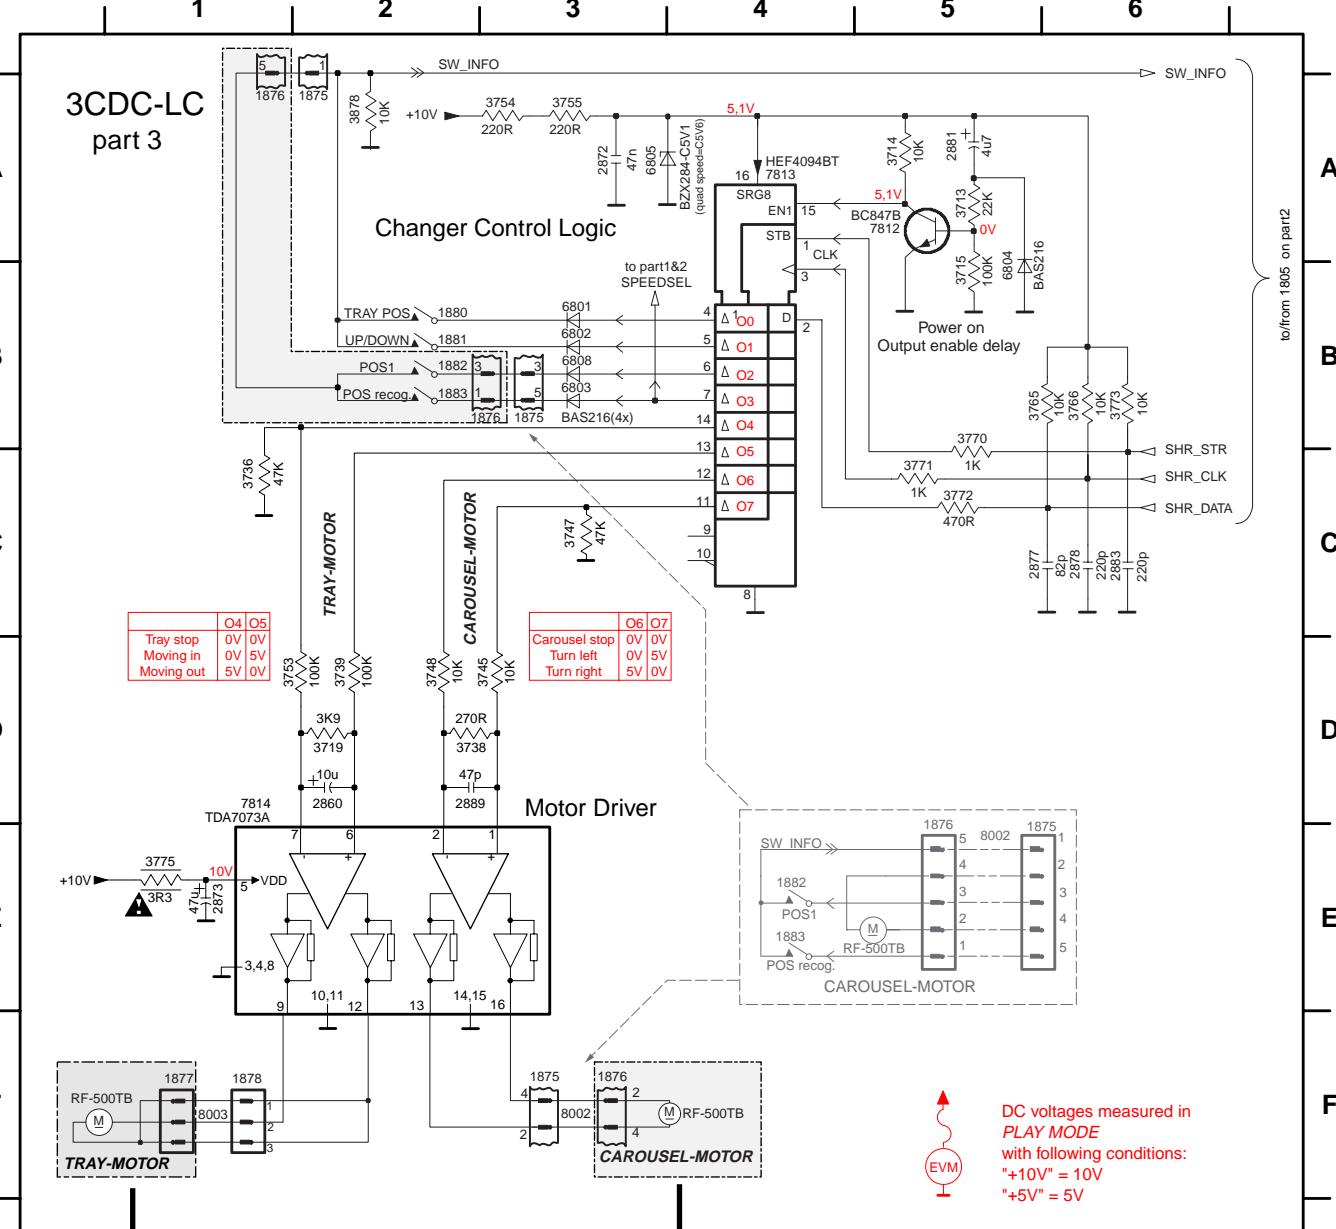


EXPLODED VIEW (Drawer)

Drawer bottom view

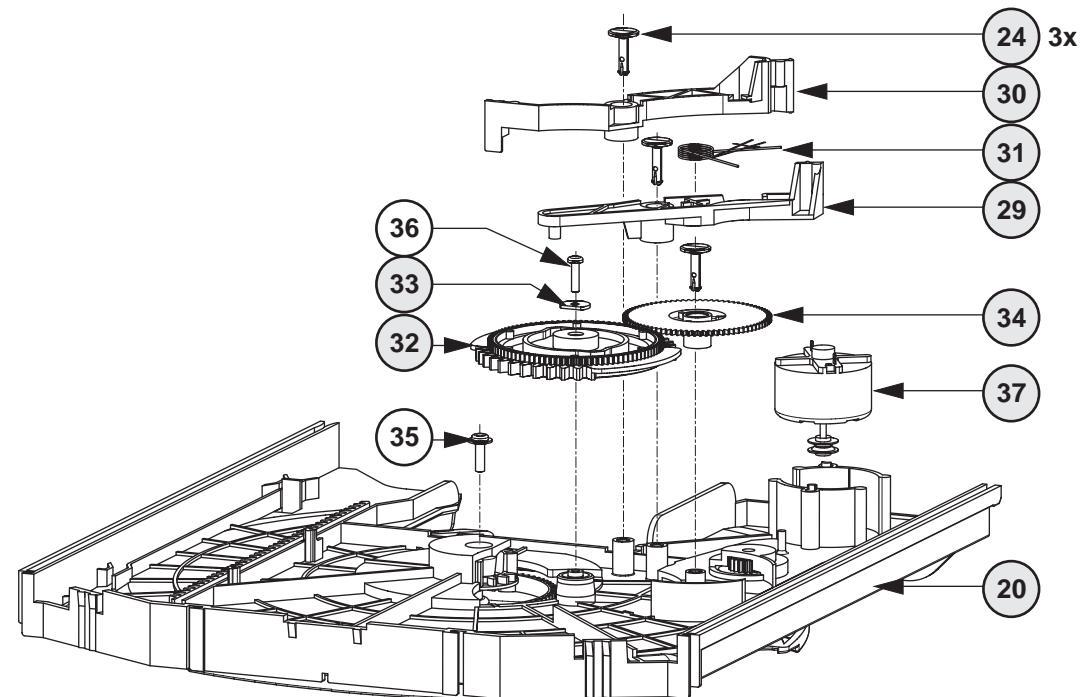


Drawer top view

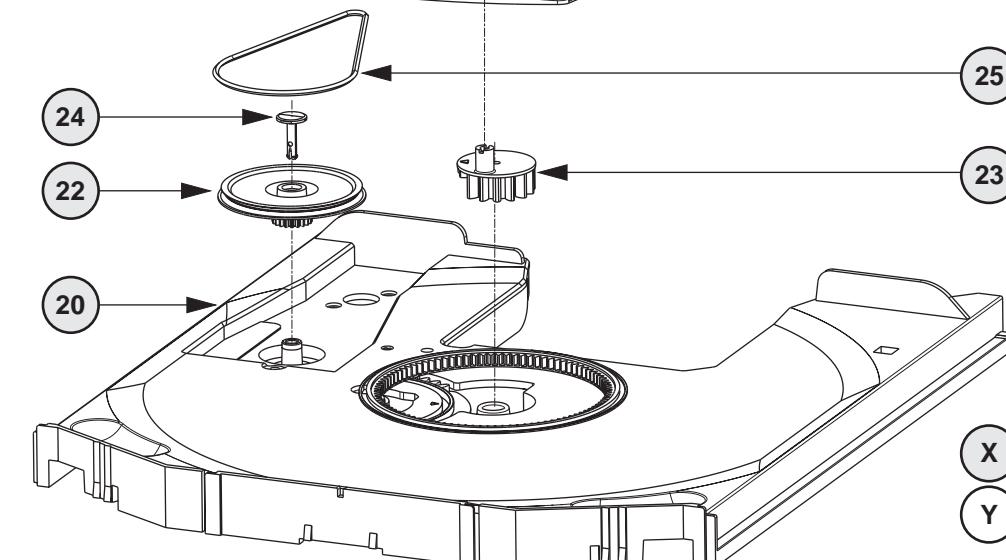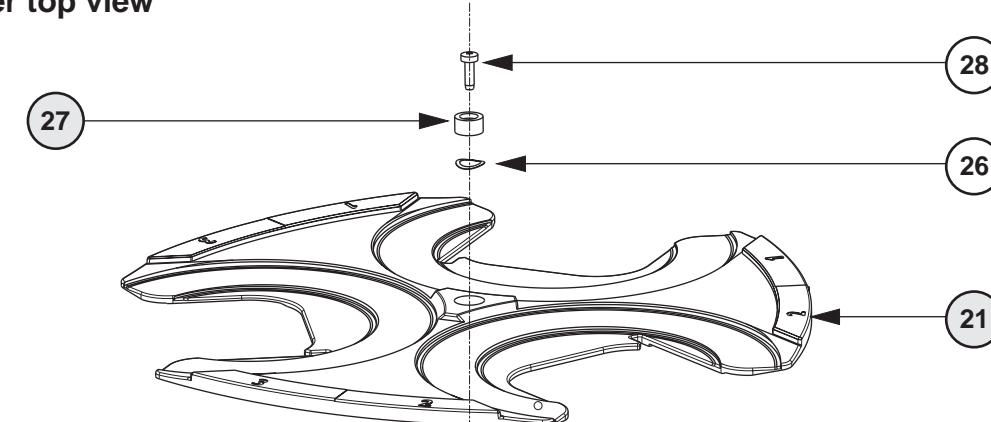

- (X) spare part
- (Y) non spare part

EXPLODED VIEW (3CDC-LC MODULE)MECHANICAL PARTS *Drawer* → Chapter 8-8


20	3103 304 69310	DRAWER BLACK
21	3103 304 69320	CAROUSEL BLACK
22	3103 304 07120	PULLEY DRAWER BLACK
23	3103 304 06850	ECCENTRIC GEAR WHEEL
24	3103 304 07110	NAIL FIXATION BLACK
25	3103 304 66850	DRIVING BELT CAROUSEL
27	4822 532 12365	BUSH DRAWER (height=5,5mm, d=9,4mm)
29	3103 304 66550	BRACKET-DISC
30	3103 304 66520	TUMBLER
31	3103 301 06470	SPRING-DISC
32	3103 304 06920	CONTROL-DISC
34	3103 304 06870	GEAR-1
37	4822 361 10753	CAROUSEL MOTOR

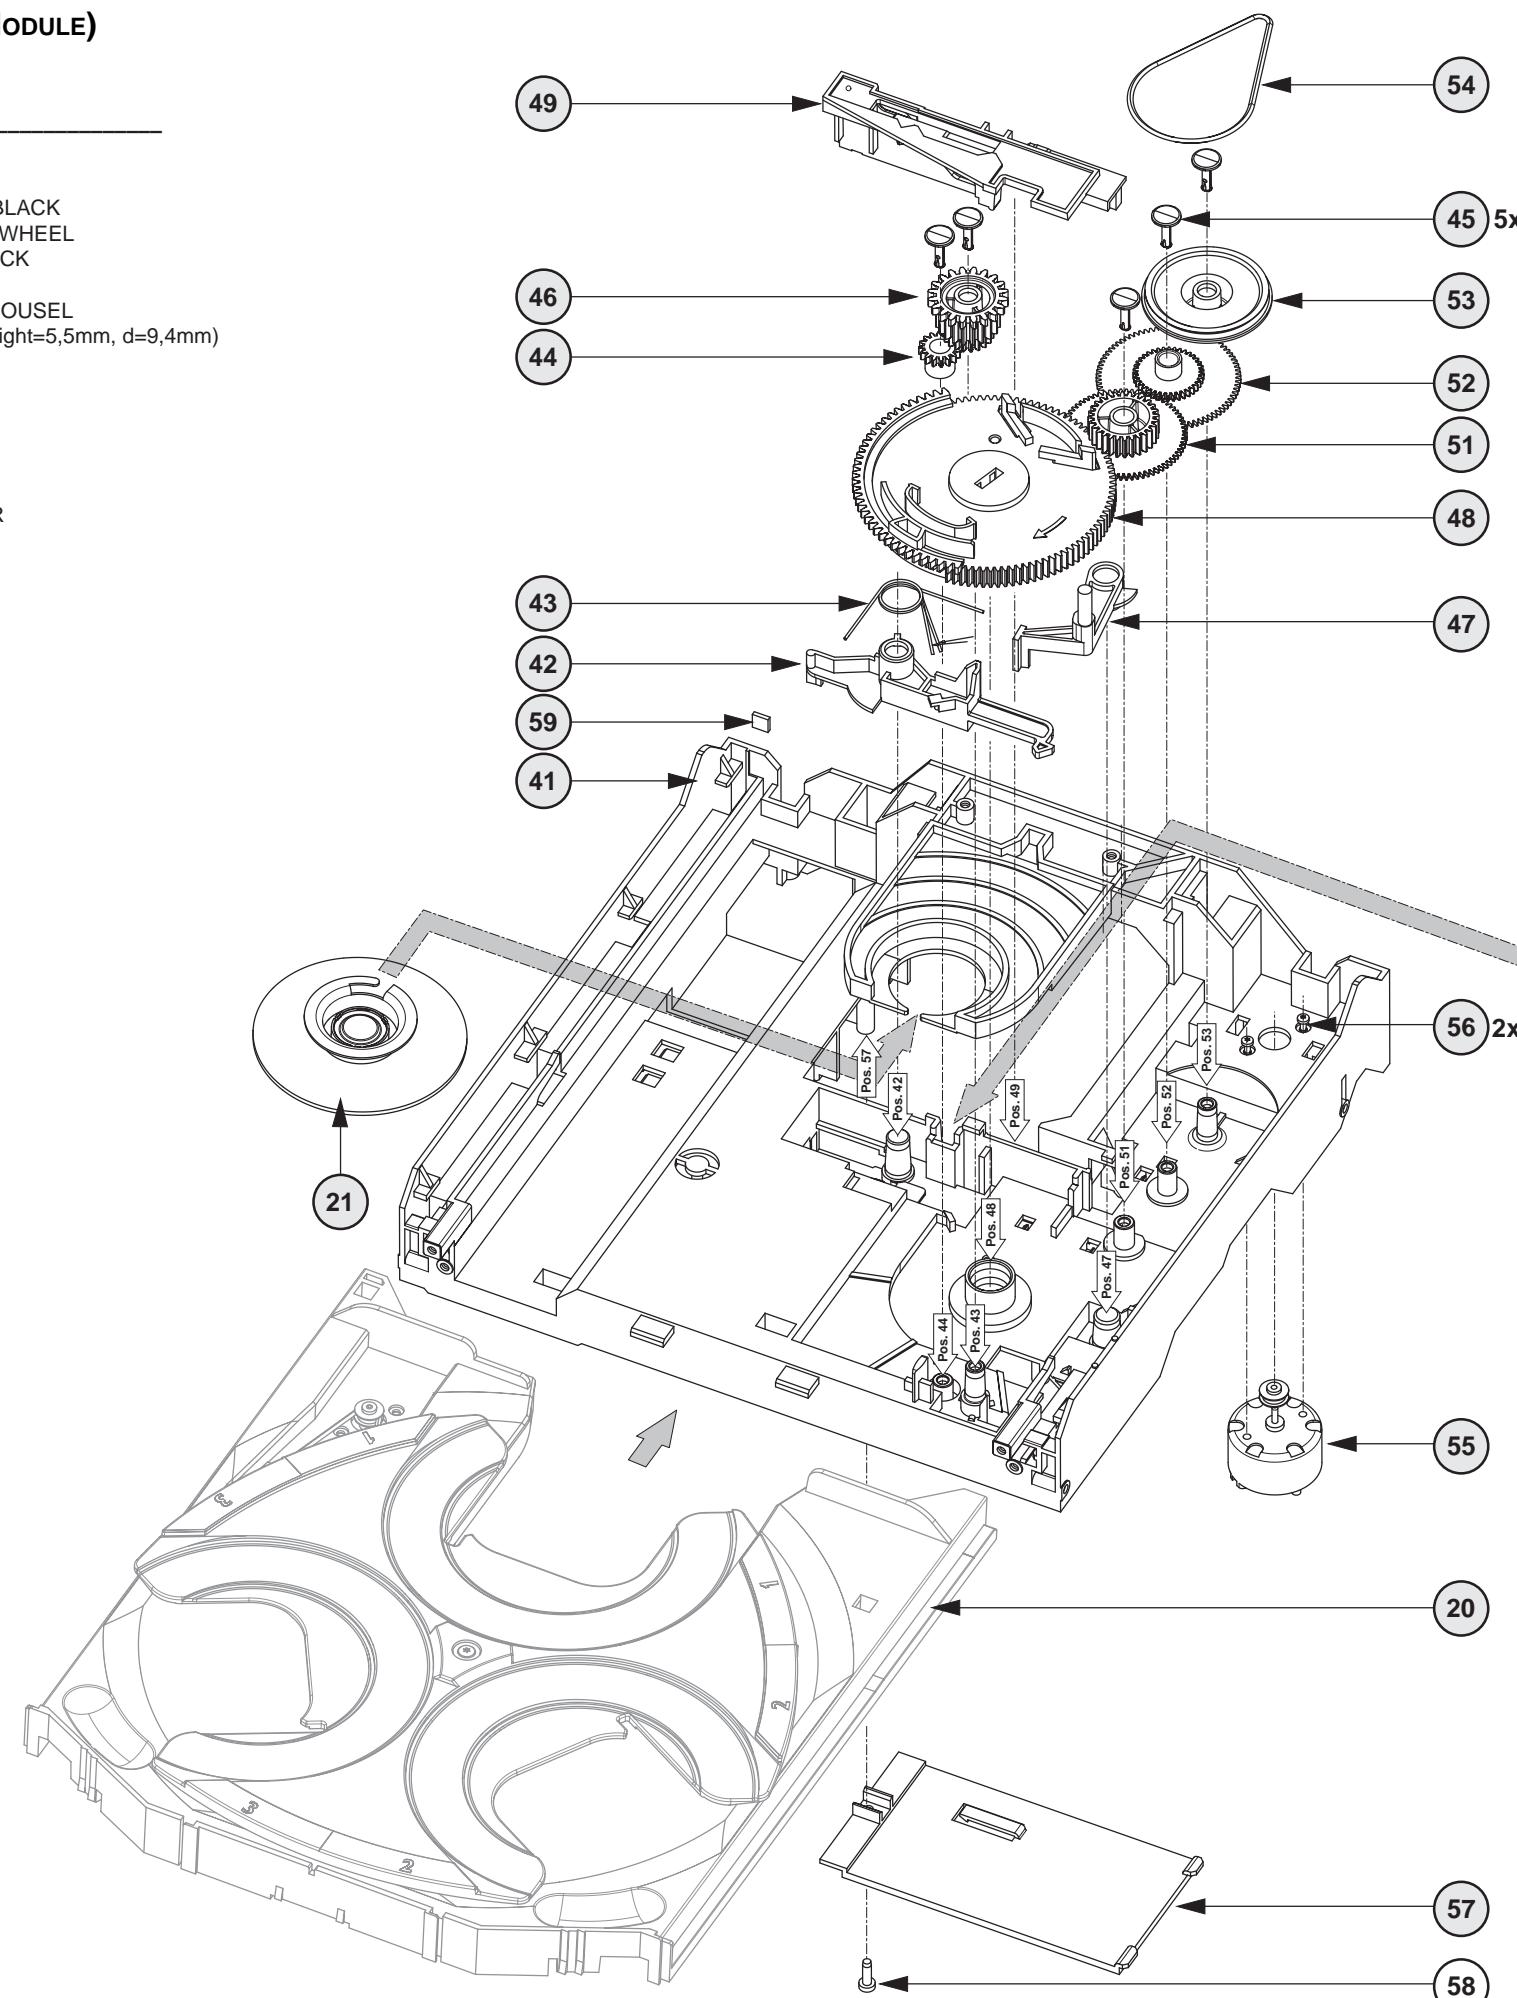MECHANICAL PARTS *Loader* → this page

20	3103 304 69310	DRAWER BLACK
21	3140 117 58650	CLAMPER ASSY-VAM
30	3103 304 66560	SUPPORT
31	4822 529 10386	RUBBER DAMPER CD DRIVE, REAR
32	4822 529 10386	RUBBER DAMPER CD DRIVE, FRONT
33	3103 304 06970	WASHER
35	9305 022 30207	CD Drive VAM2202/07
35	9305 022 30409	CD Drive VAM2204/09
41	3103 304 66480	FRAME
42	3103 304 66540	BRACKET-GUIDING
43	3103 301 06460	SPRING-GUIDING
44	3103 304 06890	GEAR-3
45	3103 304 07110	NAIL FIXATION BLACK
46	3103 304 06880	GEAR-2
47	3103 304 66530	BRACKET-LOAD
48	3103 304 06910	CAM
49	3103 304 66510	GUIDING
51	3103 304 06900	GEAR-4
52	3103 304 06870	GEAR-1
53	3103 304 06960	PULLEY-FRAME
54	3103 304 66910	DRIVING-BELT-DRAWER
55	4822 361 10753	TRAY MOTOR
56	4822 502 12548	SCREW M2,6 x 3,5
57	3103 304 68890	COVER-VAM
59	4822 466 12146	RUBBER

for Double speed
for Quad speed

EXPLODED VIEW / *apparatus*

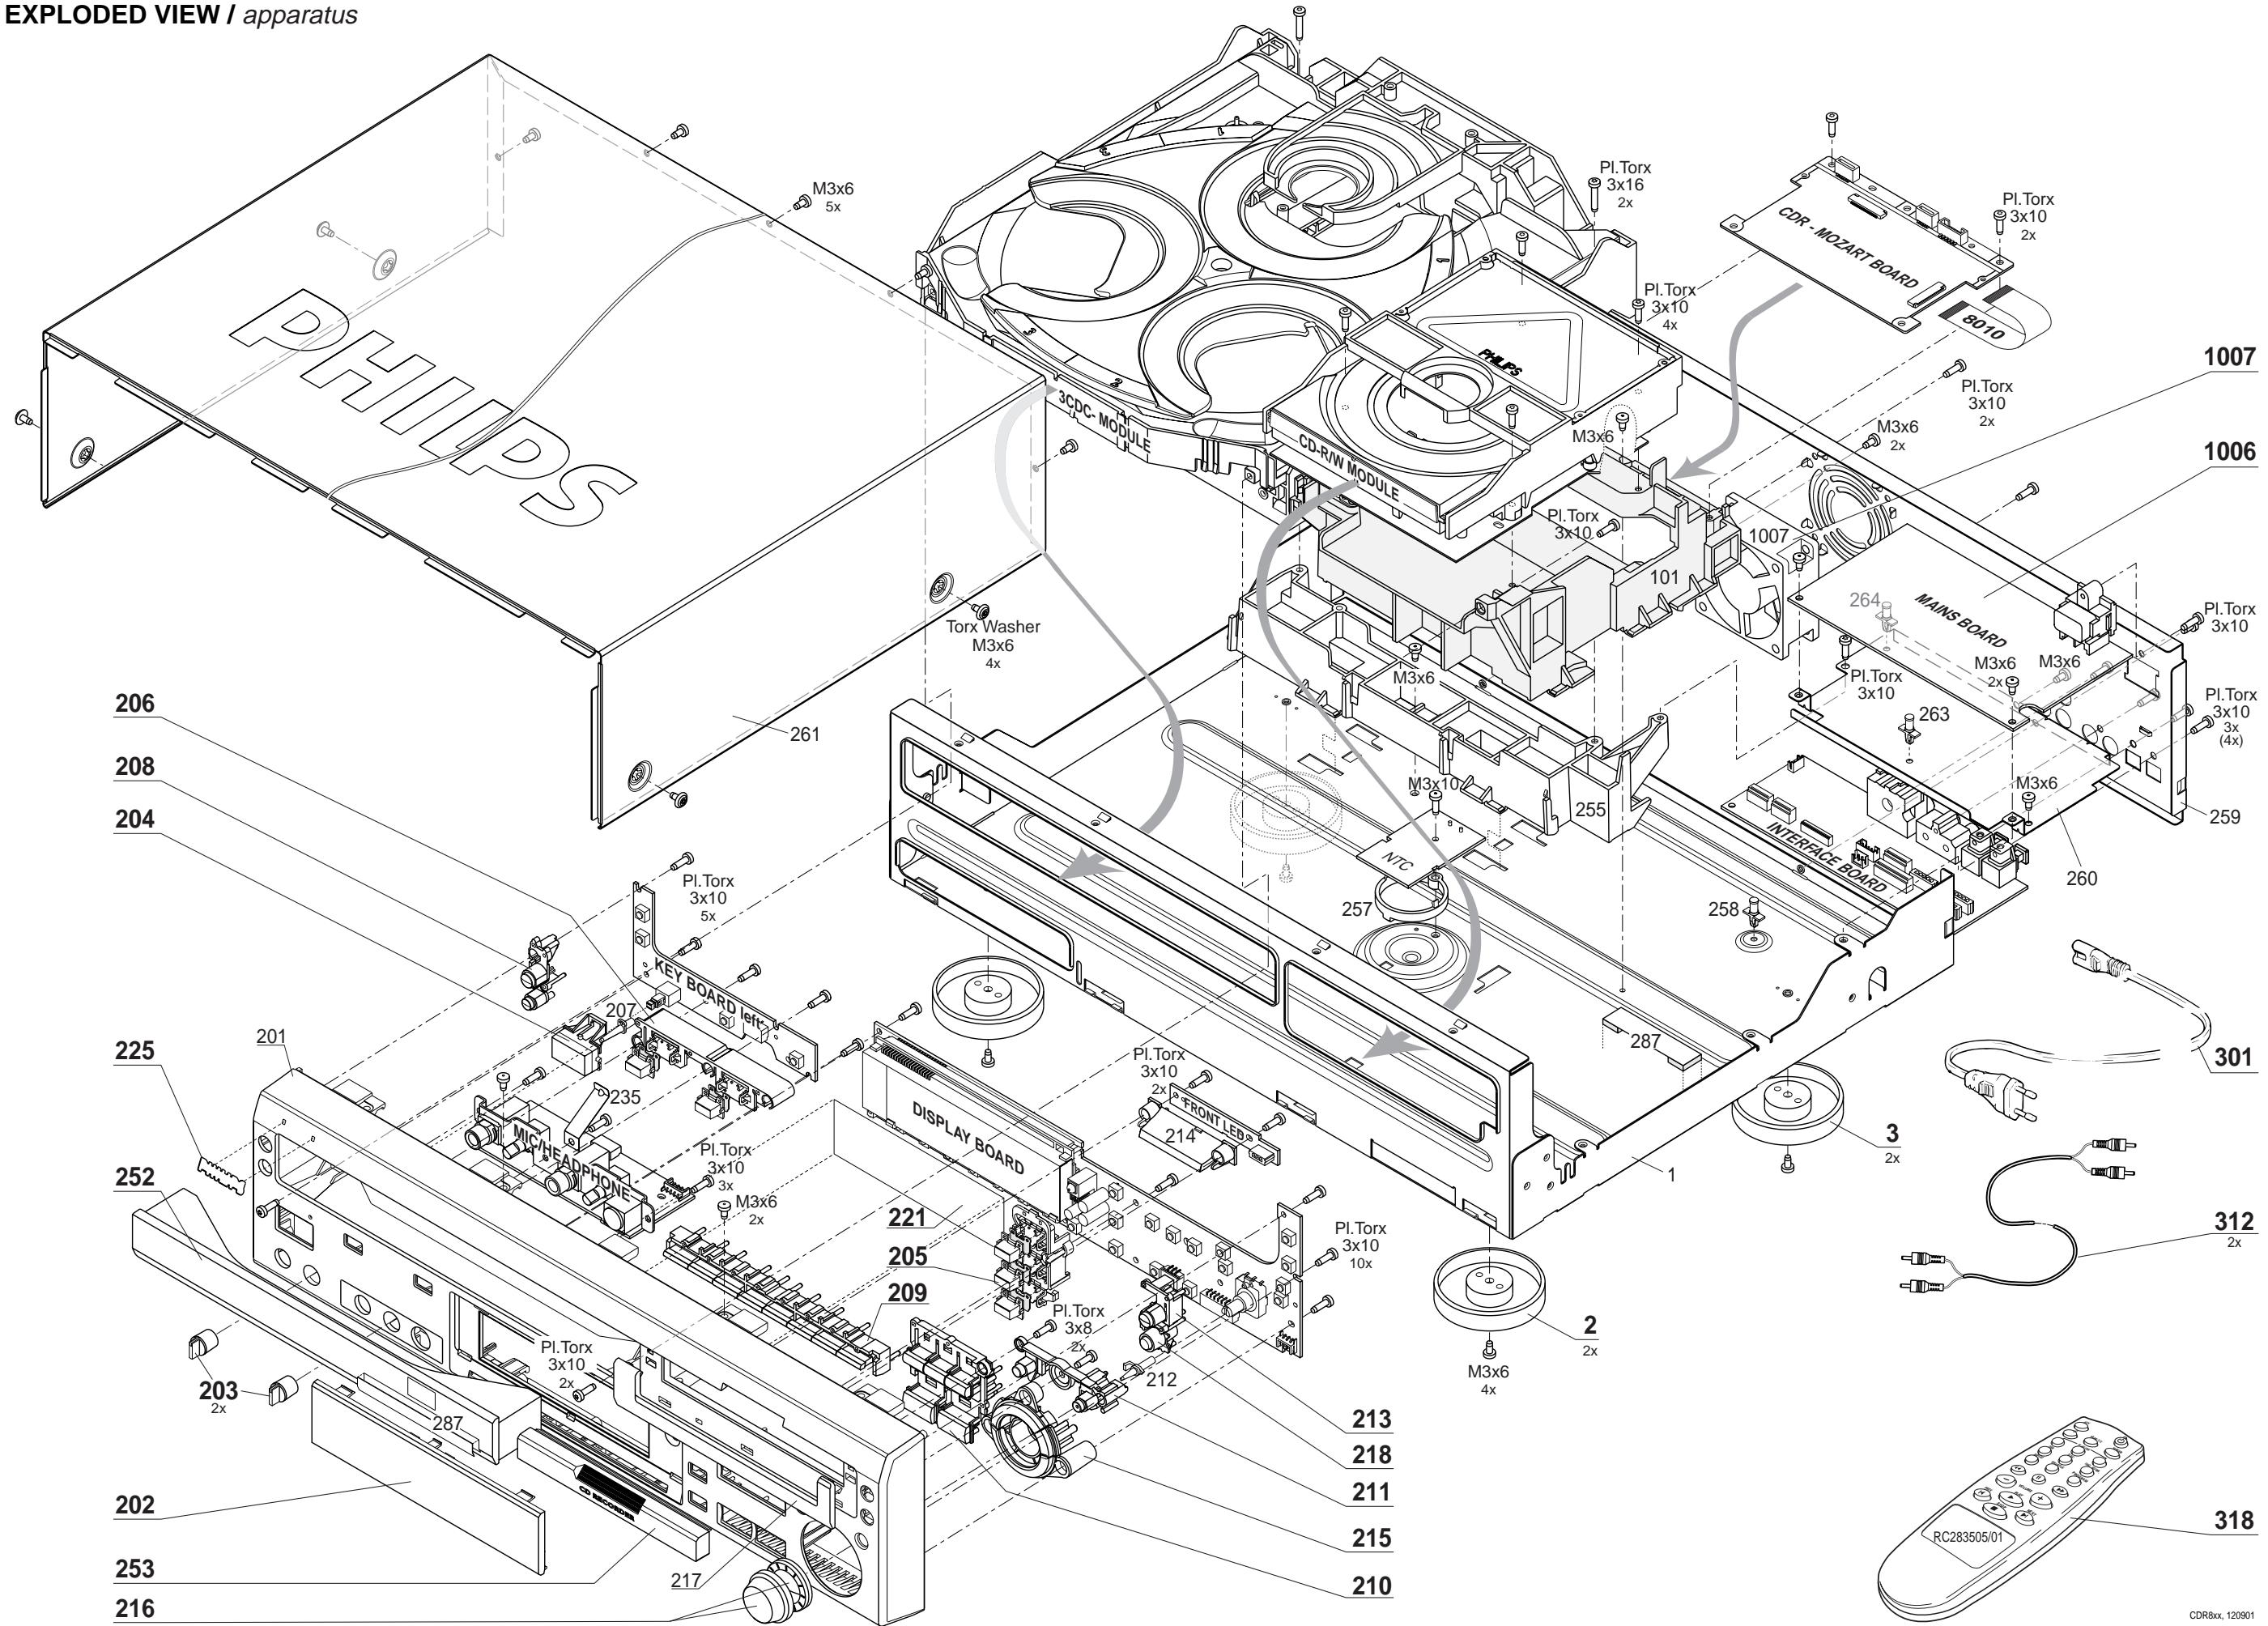

MECHANICAL PARTSLIST apparatus**ELECTRICAL PARTSLIST DISPLAY BOARD****MECHANICAL PARTS**

2	4822 462 11174	FOOT, SILVER
3	4822 462 11174	FOOT, SILVER
3	4822 462 42158	FOOT, BLACK
202	3103 308 10050	DISPLAY-WINDOW, PRINTED
203	3103 304 70030	KNOB, BLACK

203	3103 308 10390	KNOB, SILVER
204	3103 304 69990	BUTTON, POWER ON/OFF, BLACK
204	3103 308 10350	BUTTON, POWER ON/OFF, SILVER
205	3103 308 10070	BUTTONSET, CD1-3
206	3103 308 10080	BUTTONSET, AUX-CDR

208	3103 308 10060	BUTTONSET, OPEN/CL 3CDC, BLACK
208	3103 308 10370	BUTTONSET, OPEN/CL 3CDC, SILVER
209	3103 304 70050	BUTTONSET, DISPLAY, BLACK
209	3103 308 10410	BUTTONSET, DISPLAY, SILVER
210	3103 308 10090	BUTTONSET, PLAY-STOP, BLACK

210	3103 308 10430	BUTTONSET, PLAY-STOP, SILVER
211	3103 304 70080	BUTTONSET, YES-NO, BLACK
211	3103 308 10450	BUTTONSET, YES-NO, SILVER
213	3103 308 10100	BUTTONSET, OPEN/CL CDR, BLACK
213	3103 308 10470	BUTTONSET, OPEN/CL CDR , SILVER

215	3103 308 10120	BUTTONSET, PREV-NEXT, BLACK
215	3103 308 10510	BUTTONSET, PREV-NEXT, SILVER

CDR80x:		
216	3103 304 70130	KNOB, JOG-ROTARY CDR80x, BLACK
216	3103 308 10530	KNOB, JOG-ROTARY CDR80x, SILVER

CDR82x:		
216	3103 304 70950	KNOB, JOG-ROTARY CDR82x, BLACK
216	3103 308 10780	KNOB, JOG-ROTARY CDR82x, SILVER

218	3103 308 10110	BUTTON, SPEED, BLACK
218	3103 308 10490	BUTTON, SPEED, SILVER
221	3103 304 70590	FILTER FOIL, FTD-CDR80x/82x
225	3139 240 00040	WORDMARK „PHILIPS“ SILVER BACKGR.

CDR80x:		
252	3103 308 10010	ORNAMENT. COVER, 3CDC, BLACK
252	3103 308 10270	ORNAMENT. COVER, 3CDC, SILVER

CDR82x:		
252	3103 308 11970	ORNAMENT. COVER, 3CDC, BLACK
252	3103 308 11980	ORNAMENT. COVER, 3CDC, SILVER

CDR80x:		
253	3103 308 10030	ORNAMENTAL COVER, CDR, BLACK
253	3103 308 10310	ORNAMENTAL COVER, CDR, SILVER

CDR82x:		
253	3103 308 10040	ORNAMENTAL COVER, CDR, BLACK
253	3103 308 10330	ORNAMENTAL COVER, CDR, SILVER

MISCELLANEOUS

301	2422 070 98151	MAINS CORD, EUROPE
301	2422 070 98152	MAINS CORD, USA
312	3103 308 92610	AUDIO CABLE STEREO CINCH 1.5m
318	3139 228 84060	REMOTE CONTROL, RC283505/01, black

1006	3103 308 53880	POWER BOARD, SMPS CDR8xx/00
1006	3103 308 53890	POWER BOARD, SMPS CDR8xx/17
1006	3103 308 53900	POWER BOARD, SMPS CDR8xx/01
1007	3103 308 52950	FAN, KD120 6PTS 3 - C112

8002	3103 308 92940	FLEXFOIL CABLE, 17P, 140mm AD
8003	3103 308 92950	FLEXFOIL CABLE, 7P, 160mm BD
8005	3139 110 34470	FLEXFOIL CABLE, 7P, 80mm AD
8008	3139 110 34680	FLEXFOIL CABLE, 6P, 340mm BD
8012	3139 110 35380	FLEXFOIL CABLE, 6P, 480mm BD

8013	3139 110 35390	FLEXFOIL CABLE, 8P, 480mm BD
8014	3103 308 92810	FLEXFOIL CABLE, 9P, 340mm AD
8016	3139 110 35420	FLEXFOIL CABLE, 15P, 340mm AD

MISCELLANEOUS

1416	4822 267 10956	FFC-CONNECTOR, 7P, SIDE ENTRY
1417	4822 265 11207	FFC-CONNECTOR, 6P, SIDE ENTRY
1418	4822 265 10979	FFC-CONNECTOR, 15P, SIDE ENTRY
1419	2422 129 16545	ROTARY ENCODER, JOG CONTROL
1420	4822 276 13775	TACT SWITCH

1421	4822 276 13775	TACT SWITCH
1422	4822 276 13775	TACT SWITCH
1423	4822 276 13775	TACT SWITCH
1424	4822 276 13775	TACT SWITCH
1425	4822 276 13775	TACT SWITCH

1426	4822 276 13775	TACT SWITCH
1427	4822 276 13775	TACT SWITCH
1428	4822 276 13775	TACT SWITCH
1429	4822 276 13775	TACT SWITCH
1430	4822 276 13775	TACT SWITCH

1431	4822 276 13775	TACT SWITCH
1432	4822 276 13775	TACT SWITCH
1433	4822 276 13775	TACT SWITCH
1434	4822 276 13775	TACT SWITCH
1435	4822 276 13775	TACT SWITCH

1436	4822 276 13775	TACT SWITCH
1437	4822 276 13775	TACT SWITCH
1438	4822 276 13775	TACT SWITCH
1439	4822 276 13775	TACT SWITCH
1440	4822 276 13775	TACT SWITCH

1441	4822 276 13775	TACT SWITCH
7402	3103 308 53960	DISPLAY, FTD CDR8xx
7402	3103 308 53970	DISPLAY, FTD CDR820
7403	4822 130 10165	GP1U28XP, IR EYE

2400©	4822 126 14305	100nF 10% 16V
2401©	4822 126 14238	2,2nF 10% 50V
2402©	5322 126 11583	10nF 10% 63V
2403©	5322 126 11583	10nF 10% 63V
2404©	5322 126 11578	1nF 10% 63V

2405©	5322 126 11578	1nF 10% 63V
2406©	4822 126 14585	100nF 10% 50V
2407©	4822 126 14305	100nF 10% 16V
2408©	4822 122 33752	15pF 5% 50V
2409©	4822 122 33752	15pF 5% 50V

2410©	5322 126 11583	10nF 10% 63V
2411©	3198 017 44740	470nF 20% 10V
2412©	5322 126 11583	10nF 10% 63V
2413	4822 124 41751	47μF 20% 16V
2414	4822 124 41751	47μF 20% 16V

2415	4822 124 40433	47μF 20% 25V
2416©	4822 126 14305	100nF 10% 16V
2418	4822 124 40433	47μF 20% 25V
2420©	5322 126 11583	10nF 10% 63V
2421©	4822 126 14508	180pF 5% 50V

RESISTORS

ELECTRICAL PARTSLIST DISPLAY BOARD**RESISTORS**

3410© 4822 051 30683 68kΩ 5% 0,06W
 3411© 4822 051 30683 68kΩ 5% 0,06W
 3412© 4822 051 30683 68kΩ 5% 0,06W
 3413© 4822 051 30683 68kΩ 5% 0,06W
 3414© 4822 051 30683 68kΩ 5% 0,06W

3415© 4822 051 30683 68kΩ 5% 0,06W
 3416© 4822 051 30683 68kΩ 5% 0,06W
 3417© 4822 051 30683 68kΩ 5% 0,06W
 3418© 4822 051 30683 68kΩ 5% 0,06W
 3419© 4822 051 30683 68kΩ 5% 0,06W

3420 4822 050 11002 1kΩ 5% 0,2W
 3421© 4822 051 30272 2,7kΩ 5% 0,06W
 3422© 4822 051 30103 10kΩ 5% 0,06W
 3423© 4822 051 30221 220Ω 5% 0,06W
 3424 4822 116 52175 100Ω 5% 0,5W

3425© 4822 051 30471 470Ω 5% 0,06W
 3426© 4822 117 12968 820Ω 5% 0,06W
 3427© 4822 051 30471 470Ω 5% 0,06W
 3428© 4822 051 30471 470Ω 5% 0,06W
 3429© 4822 051 30471 470Ω 5% 0,06W

3430© 4822 051 30471 470Ω 5% 0,06W
 3431© 4822 051 30471 470Ω 5% 0,06W
 3432 4822 116 52175 100Ω 5% 0,5W
 3433© 4822 051 30221 220Ω 5% 0,06W
 3434© 4822 051 30471 470Ω 5% 0,06W

3435© 4822 051 30471 470Ω 5% 0,06W
 3436© 4822 051 30471 470Ω 5% 0,06W
 3437© 4822 051 30471 470Ω 5% 0,06W
 3438© 4822 051 30101 100Ω 5% 0,06W
 3439© 4822 051 30103 10kΩ 5% 0,06W

3440 4822 050 11002 1kΩ 5% 0,2W
 3441© 4822 051 30103 10kΩ 5% 0,06W
 3442© 4822 051 30103 10kΩ 5% 0,06W
 3443© 4822 051 30471 470Ω 5% 0,06W
 3444© 4822 051 30471 470Ω 5% 0,06W

3445© 4822 051 30471 470Ω 5% 0,06W
 3446© 4822 051 30471 470Ω 5% 0,06W
 3447© 4822 051 30471 470Ω 5% 0,06W
 3448© 4822 051 30471 470Ω 5% 0,06W
 3449© 4822 051 30272 2,7kΩ 5% 0,06W

3450 4822 116 83868 150Ω 5% 0,5W
 3451 4822 116 83872 220Ω 5% 0,5W
 3452 4822 116 83876 270Ω 5% 0,16W
 3453© 4822 051 30391 390Ω 5% 0,06W
 3454© 4822 051 30561 560Ω 5% 0,06W

3455© 4822 117 12968 820Ω 5% 0,06W
 3456© 4822 117 11817 1,2kΩ 1% 0,06W
 3457© 4822 117 12903 1,8kΩ 1% 0,06W
 3458© 4822 051 30392 3,9kΩ 5% 0,06W
 3459© 4822 051 30103 10kΩ 5% 0,06W

3460© 4822 051 30272 2,7kΩ 5% 0,06W
 3461© 4822 051 30151 150Ω 5% 0,06W
 3462© 4822 051 30221 220Ω 5% 0,06W
 3463 4822 116 83876 270Ω 5% 0,16W
 3464 4822 116 83881 390Ω 5% 0,5W

3465 4822 116 52226 560Ω 5% 0,5W
 3466© 4822 117 12968 820Ω 5% 0,06W
 3467© 4822 117 11817 1,2kΩ 1% 0,06W
 3468© 4822 117 12903 1,8kΩ 1% 0,06W
 3469© 4822 051 30392 3,9kΩ 5% 0,06W

3470© 4822 051 30103 10kΩ 5% 0,06W
 3471© 4822 051 30102 1kΩ 5% 0,06W
 3472© 4822 117 12891 220kΩ 1% 0,06W

RESISTORS

3473© 4822 117 12891 220kΩ 1% 0,06W
 3474▲ 4822 052 10398 3,9Ω 5% 0,33W for CDR82x
 3475© 4822 051 30103 10kΩ 5% 0,06W
 3477 4822 116 52175 100Ω 5% 0,5W
 3478© 4822 051 30103 10kΩ 5% 0,06W

3479© 4822 051 30101 100Ω 5% 0,06W
 3480© 4822 051 30103 10kΩ 5% 0,06W
 3481© 4822 051 30101 100Ω 5% 0,06W
 3482 4822 050 21003 10kΩ 2% 0,25W
 3484© 4822 051 30471 470Ω 5% 0,06W

3485© 4822 051 30471 470Ω 5% 0,06W
 3486© 4822 051 30472 4,7kΩ 5% 0,06W
 3487© 4822 051 30472 4,7kΩ 5% 0,06W
 3488© 4822 051 30682 6,8kΩ 5% 0,06W
 3489© 4822 051 30103 10kΩ 5% 0,06W

3490© 4822 051 30101 100Ω 5% 0,06W
 3491© 4822 051 30103 10kΩ 5% 0,06W
 3492© 4822 051 30101 100Ω 5% 0,06W
 3493© 4822 051 30103 10kΩ 5% 0,06W
 3494© 4822 051 30272 2,7kΩ 5% 0,06W

3495© 4822 051 30103 10kΩ 5% 0,06W
 3496© 4822 051 30103 10kΩ 5% 0,06W
 3498 4822 050 21003 10kΩ 2% 0,25W
 3499© 4822 051 30102 1kΩ 5% 0,06W
 3500 4822 050 21003 10kΩ 2% 0,25W

3501 4822 116 52175 100Ω 5% 0,5W
 3502 4822 116 52175 100Ω 5% 0,5W
 3503© 4822 051 30471 470Ω 5% 0,06W
 3504© 4822 051 30471 470Ω 5% 0,06W
 3505© 4822 051 30151 150Ω 5% 0,06W

3506 4822 050 21003 10kΩ 2% 0,25W
 3510© 4822 051 30103 10kΩ 5% 0,06W
 3511© 4822 051 30109 10Ω 5% 0,06W
 3512© 4822 051 30109 10Ω 5% 0,06W
 3513 4822 116 83883 470Ω 5% 0,16W

3514© 4822 051 30008 CHIP JUMPER 0603 for CDR80x
 3514© 4822 051 30121 120Ω 5% 0,0625W for CDR82x
 3515© 4822 051 30008 CHIP JUMPER 0603 for CDR80x
 3515© 4822 051 30121 120Ω 5% 0,0625W for CDR82x
 3516▲ 4822 052 10228 2,2Ω 5% 0,33W

4401© 4822 051 30008 CHIP JUMPER 0603
 4402© 4822 051 30008 CHIP JUMPER 0603
 4404© 4822 051 30008 CHIP JUMPER 0603
 4405© 4822 051 30008 CHIP JUMPER 0603
 4407© 4822 051 30008 CHIP JUMPER 0603

COILS
 1400 2422 540 98526 RESONATOR 10MHz
 5400 4822 157 62552 2,2μH
 5402 4822 157 62552 2,2μH

DIODES
 6400 3198 010 53980 DIO REG BZX79-B3V9
 6428© 9322 147 85685 LST770-KL, LED RED
 6429© 9322 147 83685 LBT776-K1L1, LED BLUE
 6431© 9322 147 84685 LGT770-LM, LED GREEN
 6432© 9322 147 84685 LGT770-LM, LED GREEN
 6433© 9322 147 84685 LGT770-LM, LED GREEN
 6434 4822 130 30621 1N4148

TRANSISTORS

7405© 4822 130 60511 BC847B
 7406© 4822 130 60511 BC847B
 7407© 4822 130 60511 BC847B
 7408© 4822 130 60511 BC847B
 7410© 4822 130 60373 BC856B

7411© 4822 130 60373 BC856B
 7412© 4822 130 60511 BC847B
 7413© 4822 130 60511 BC847B
 7415© 4822 130 60511 BC847B
 7416© 4822 130 60511 BC847B

7417© 4822 130 60511 BC847B
 7418© 4822 130 60511 BC847B

INTEGRATED CIRCUITS

7409© 9965 000 04931 M24C01-WMN6, EEPROM
 7414© 9322 158 24671 M30218FCFP, µP, FLASH VERSION

MISCELLANEOUS

1480 2422 128 02929 SWITCH, POWER ON/OFF
 1481 4822 276 13775 TACT SWITCH
 1482 4822 276 13775 TACT SWITCH
 1483 4822 276 13775 TACT SWITCH
 1484 4822 276 13775 TACT SWITCH
 1485 4822 267 10956 FFC-CONNECTOR, 7P, SIDE ENTRY

CAPACITORS

2480© 4822 122 31765 100pF 5% 50V

RESISTORS

3520© 4822 051 30151 150Ω 5% 0,06W
 3521© 4822 051 30221 220Ω 5% 0,06W
 3522 4822 116 83876 270Ω 5% 0,16W
 3523© 4822 051 30391 390Ω 5% 0,062W

DIODES

6480© 9322 147 85685 LST770-KL, LED RED
 6481© 9322 147 84685 LGT770-LM, LED GREEN
 6482© 9322 147 84685 LGT770-LM, LED GREEN

ELECTRICAL PARTSLIST FRONT LED BOARD

RESISTORS

3530© 4822 051 30221 220Ω 5% 0,06W
 3531© 4822 051 30689 68Ω 5% 0,0625W
 3532© 4822 051 30221 220Ω 5% 0,06W
 3533© 4822 051 30689 68Ω 5% 0,0625W
 3534© 4822 051 30221 220Ω 5% 0,06W

DIODES

6490© 9322 147 85685 LST770-KL, LED RED
 6491© 9322 147 83685 LBT776-K1L1, LED BLUE
 6492© 9322 147 85685 LST770-KL, LED RED
 6493© 9322 147 83685 LBT776-K1L1, LED BLUE
 6494© 9322 147 85685 LST770-KL, LED RED

ELECTRICAL PARTSLIST HEADPHONE BOARD**MISCELLANEOUS**

1660	4822 267 31453	HEADPHONE SOCKET 6,3mm
1661	4822 267 31453	MICROPHONE SOCKET 6,3mm
1662	4822 265 11207	FFC-CON., 6P, SIDE ENTRY for CDR80x
1662	4822 265 11535	FFC-CON., 8P, SIDE ENTRY for CDR82x
1663	2422 026 05245	SOCKET, PS2 PC-KEYBOARD

RESISTORS

3677	4822 101 21199	POTMETER 2x10KΩ
3678©	4822 051 30103	10kΩ 5% 0,06W
3679©	4822 051 30103	10kΩ 5% 0,06W
3680©	4822 051 30689	68Ω 5% 0,06W
3681©	4822 051 30689	68Ω 5% 0,06W

CAPACITORS

2660©	5322 126 11579	3,3nF 10%	63V
2661©	5322 126 11579	3,3nF 10%	63V
2662©	4822 126 14305	100nF 10%	16V layout stage .6
2664©	4822 126 14315	390pF 5%	50V
2665©	4822 126 14315	390pF 5%	50V

3682©	4822 051 30222	2,2kΩ 5% 0,06W
3683©	4822 051 30222	2,2kΩ 5% 0,06W
3684©	4822 051 30689	68Ω 5% 0,06W
3685©	4822 051 30689	68Ω 5% 0,06W
3686©	4822 051 30392	3,9kΩ 5% 0,06W

2666	4822 124 81286	47µF 20%	16V
2667	4822 124 81286	47µF 20%	16V
2668©	4822 126 13881	470pF 5%	50V
2669©	4822 126 13881	470pF 5%	50V
2670	4822 124 12032	4,7µF 20%	50V

3687©	4822 051 30392	3,9kΩ 5% 0,06W
3688©	4822 051 30101	100Ω 5% 0,06W
3689©	4822 051 30101	100Ω 5% 0,06W
3690©	4822 051 30472	4,7kΩ 5% 0,06W
3691©	4822 051 30472	4,7kΩ 5% 0,06W

2671	4822 124 12032	4,7µF 20%	50V
2672©	5322 126 11578	1nF 10%	63V
2673©	5322 126 11578	1nF 10%	63V
2674	4822 124 22652	2,2µF 20%	50V
2675	4822 124 22652	2,2µF 20%	50V

3692	4822 116 83883	470Ω 5% 0,16W
3693	4822 116 83883	470Ω 5% 0,16W
4601©	4822 051 30008	CHIP JUMPER 0603
4602©	4822 051 30008	CHIP JUMPER 0603
4603©	4822 051 30008	CHIP JUMPER 0603

DIODES

2676©	5322 126 11579	3,3nF 10%	63V
2677©	5322 126 11579	3,3nF 10%	63V
2678©	3198 016 31020	1nF 5%	25V
2679©	3198 016 31020	1nF 5%	25V
2680	4822 124 22651	1µF 20%	50V

INTEGRATED CIRCUITS

2681	4822 124 22651	1µF 20%	50V
2682	4822 124 81286	47µF 20%	16V
2683	4822 124 81286	47µF 20%	16V
2684©	3198 016 31020	1nF 5%	25V
2685©	3198 016 31020	1nF 5%	25V

7660©	4822 209 31378	NJM4556M, 2-FOLD OP-AMP.
7661©	4822 209 30095	LM833D, 2-FOLD OP-AMP.
7662©	4822 209 30095	LM833D, 2-FOLD OP-AMP.

2686	4822 124 12032	4,7µF 20%	50V
2687	4822 124 12032	4,7µF 20%	50V
2688©	4822 126 14305	100nF 10%	16V layout stage .5
2689©	4822 126 14305	100nF 10%	16V for CDR82x
2689©	4822 051 30008	CHIP JUMPER 0603	for CDR80x

2690©	4822 126 14305	100nF 10%	16V
2691©	4822 126 14305	100nF 10%	16V
2692©	4822 126 14305	100nF 10%	16V
2693©	4822 126 14315	390pF 5%	50V
2694©	4822 126 14315	390pF 5%	50V

2695©	4822 126 14305	100nF 10%	16V
2696©	4822 126 14305	100nF 10%	16V

RESISTORS

3660©	4822 117 12139	22Ω 5%	0,06W
3661©	4822 117 12139	22Ω 5%	0,06W
3662©	4822 051 30221	220Ω 5%	0,06W
3663©	4822 051 30221	220Ω 5%	0,06W
3664©	4822 051 30101	100Ω 5%	0,06W
3665©	4822 051 30101	100Ω 5%	0,06W
3666©	4822 051 30103	10kΩ 5%	0,06W
3667©	4822 051 30103	10kΩ 5%	0,06W
3668▲	4822 052 10109	10Ω 5%	NFR
3669▲	4822 052 10109	10Ω 5%	NFR
3670©	4822 051 30472	4,7kΩ 5%	0,06W
3671©	4822 051 30472	4,7kΩ 5%	0,06W
3672©	4822 051 30103	10kΩ 5%	0,06W
3673©	4822 051 30103	10kΩ 5%	0,06W
3674©	4822 051 30102	1kΩ 5%	0,06W
3675©	4822 051 30102	1kΩ 5%	0,06W
3676	4822 101 21199	POTMETER 2x10KΩ	

ELECTRICAL PARTSLIST INTERFACE BOARD**MISCELLANEOUS**

1302	4822 265 11515	FFC-CON., 8P, TOP ENTRY	for CDR82x
1302	4822 267 10731	FFC-CON., 6P, TOP ENTRY	for CDR80x
1303	4822 267 10953	FFC-CON., 7P, TOP ENTRY	
1305	2422 025 17066	FFC-CON., 17P, TOP ENTRY	for CDR82x
1307	4822 265 10981	FFC-CON., 15P, TOP ENTRY	
1308	2422 025 14518	FFC-CON., 9P, TOP ENTRY	
1314	4822 267 31448	CINCH SOCKET, 2-FOLD	
1315	4822 265 11151	CINCH SOCKET, 4-FOLD	
7312	9322 155 48687	OPTICAL IN CONNECT. GP1FA550RZ	
7313	9322 155 28667	OPTICAL OUT CONNECT. GP1FA550TZ	

CAPACITORS

2300©	4822 126 14305	100nF	10%	16V
2302	4822 124 40196	220µF	20%	16V
2304	4822 124 40196	220µF	20%	16V
2305©	4822 126 14305	100nF	10%	16V
2306	4822 124 40433	47µF	20%	25V
2308©	2222 867 15339	33pF	5%	50V
2309©	2222 867 15339	33pF	5%	50V
2310	4822 124 40433	47µF	20%	25V
2311©	4822 126 14305	100nF	10%	16V
2312	4822 124 40433	47µF	20%	25V
2313©	4822 126 14305	100nF	10%	16V
2314	4822 124 80791	470µF	20%	16V
2315	4822 124 40207	100µF	20%	25V
2316©	4822 126 14305	100nF	10%	16V
2318	4822 121 70654	2,2nF	10%	50V
2319	4822 121 70654	2,2nF	10%	50V
2320©	4822 126 14305	100nF	10%	16V
2321	4822 124 80791	470µF	20%	16V
2322	4822 124 21913	1µF	20%	63V
2324	4822 124 80791	470µF	20%	16V
2325©	4822 122 33753	150pF	5%	50V
2326©	4822 122 33753	150pF	5%	50V
2327	4822 124 40207	100µF	20%	25V
2328©	5322 126 11583	10nF	10%	63V
2329	4822 124 40769	4,7µF	20%	100V
2336©	4822 126 14305	100nF	10%	16V
2338©	4822 126 14305	100nF	10%	16V
2339©	4822 126 14305	100nF	10%	16V
2340©	4822 126 14305	100nF	10%	16V
2341©	4822 122 33753	150pF	5%	50V
2342©	4822 126 14305	100nF	10%	16V
2343©	3198 016 31020	1nF	5%	25V
2344©	4822 126 14305	100nF	10%	16V
2345©	2222 867 15339	33pF	5%	50V
2346©	2222 867 15339	33pF	5%	50V
2347©	3198 024 44730	47nF	5%	50V
2348©	4822 126 14305	100nF	10%	16V
2349©	4822 126 14305	100nF	10%	16V

RESISTORS

3300©	4822 117 12925	47kΩ	1%	0,06W
3301©	4822 117 12925	47kΩ	1%	0,06W
3302©	4822 051 30332	3,3kΩ	5%	0,06W
3303©	4822 117 12902	8,2kΩ	1%	0,06W
3304©	4822 051 30152	1,5kΩ	5%	0,06W
3305©	4822 117 12902	8,2kΩ	1%	0,06W
3306©	4822 051 30103	10kΩ	5%	0,06W
3307▲	4822 052 10229	22Ω	5%	0,33W
3308©	4822 051 30479	47Ω	5%	0,06W
3309	4822 116 83872	220Ω	5%	0,5W

RESISTORS

3310©	4822 051 30151	150Ω	5%	0,06W
3311©	4822 051 30479	47Ω	5%	0,06W
3312©	4822 051 30101	100Ω	5%	0,06W
3313©	4822 051 30479	47Ω	5%	0,06W
3314©	4822 117 12925	47kΩ	1%	0,06W

3315	4822 116 83872	220Ω	5%	0,5W
3316©	4822 051 30102	1kΩ	5%	0,06W
3317©	4822 051 30102	1kΩ	5%	0,06W
3318	4822 116 83872	220Ω	5%	0,5W
3319©	4822 117 12925	47kΩ	1%	0,06W

3330	4822 116 52195	47Ω	5%	0,5W
3331©	4822 051 30103	10kΩ	5%	0,06W
3334©	4822 051 30102	1kΩ	5%	0,06W
3335©	4822 051 30101	100Ω	5%	0,06W
3337©	4822 051 30101	100Ω	5%	0,06W

3338©	4822 117 13632	100kΩ	1%	0,06W
3339©	4822 051 30222	2,2kΩ	5%	0,06W
3340©	4822 051 30471	470Ω	5%	0,06W
3341©	2120 108 91909	39Ω	5%	
3342	4822 116 52195	47Ω	5%	0,5W

3343©	4822 051 30561	560Ω	5%	0,06W
3344©	4822 117 12903	1,8kΩ	1%	0,06W
3345©	4822 117 11449	2,2kΩ	1%	0,1W
3346©	4822 051 30102	1kΩ	5%	0,06W
3347©	4822 051 30561	560Ω	5%	0,06W

3348©	4822 117 12925	47kΩ	1%	0,06W
3349©	4822 117 12925	47kΩ	1%	0,06W
3351	4822 116 52195	47Ω	5%	0,5W
3352©	4822 051 30479	47Ω	5%	0,06W
3353©	4822 051 30479	47Ω	5%	0,06W

COILS

5300	2422 536 00019	TRANSFORMER, DIGITAL OUT
------	----------------	--------------------------

DIODES

6300	3198 010 53380	BZX79-B3V3
6301	3198 010 53380	BZX79-B3V3

TRANSISTORS

7321	4822 130 44568	BC557B
7323©	4822 130 60511	BC847B

INTEGRATED CIRCUITS

7320©	4822 209 30095	LM833D, 2-FOLD OP-AMP.
7322©	9352 615 37118	UDA1360TS/N1, A/D-CONVERTER
7324©	4822 209 17235	74LVU04D, 6-FOLD INVERTER

ELECTRICAL PARTSLIST 3CDC-LC-CDR**MISCELLANEOUS**

35 9305 022 30207 CD Drive VAM2202/07 for Double speed
 35 9305 022 30409 CD Drive VAM2204/09 for Quad speed
 37 4822 361 10753 CAROUSEL MOTOR
 55 4822 361 10753 TRAY MOTOR
 1800 4822 265 10925 FFC-CONNECTOR 15P, SIDE ENTRY

1802 2422 025 16833 FFC-CONNECTOR, 8P, SIDE ENTRY
 1805 4822 265 11531 FFC-CONNECTOR, 9P, SIDE ENTRY
 1875 4822 267 10958 FFC-CONNECTOR, 5P, SIDE ENTRY
 1876 2422 025 08332 FFC-CONNECTOR, 5P, SIDE ENTRY
 1880 4822 276 13503 SWITCH, Tray position

1881 4822 276 13503 SWITCH, Drive up/down
 1882 4822 276 13503 SWITCH, Position1 recognized
 1883 4822 276 13503 SWITCH, valid position recognized
 8002 3103 308 91990 FLEXFOIL CABLE, 5P, 200mm AD
 8005 3103 308 91980 FLEXFOIL CABLE, 15P, 170mm AD

8007 3139 110 53540 FLEXFOIL CABLE, 8P, 340mm AD

CAPACITORS

2800© 4822 126 10326 180pF 5% 50V
 2801© 4822 126 13883 220pF 5% 50V
 2802© 4822 126 14508 180pF 5% 50V
 2803© 4822 126 13883 220pF 5% 50V
 2804© 4822 126 13193 4,7nF 10% 63V

2805© 4822 126 13883 220pF 5% 50V
 2806© 4822 126 13883 220pF 5% 50V
 2807© 5322 122 31863 330pF 5% 50V
 2808© 4822 126 13883 220pF 5% 50V
 2809© 4822 126 13879 220nF 20% 16V

2810© 4822 126 10326 180pF 5% 50V
 2811© 4822 126 13883 220pF 5% 50V
 2812© 3198 017 34730 47nF 10% 16V
 2813© 4822 122 33177 10nF 20% 50V
 2813© 4822 122 33891 3,3nF 10% 63V

2814© 4822 122 33216 270pF 5% 50V
 2815© 4822 126 14076 220nF 20% 25V
 2816© 4822 126 13344 1,5nF 5% 63V
 2817 4822 124 40769 4,7µF 20% 100V
 2818© 4822 126 13344 1,5nF 5% 63V

2819 4822 124 40769 4,7µF 20% 100V
 2820© 5322 126 11578 1nF 10% 63V

2822© 2228 861 15182 1,8nF 5% 50V
 2823© 4822 122 33777 47pF 5% 63V for Double speed
 2823© 5322 122 32658 22pF 5% 50V for Quad speed

2824© 4822 126 13751 47nF 10% 50V
 2825© 5322 122 31866 6,8nF 10% 63V
 2826 4822 124 12362 47µF 20% 4V
 2827© 5322 122 34099 470pF 10% 63V
 2828 4822 124 12362 47µF 20% 4V

2829© 4822 126 11669 27pF 10% 50V
 2831© 4822 126 13751 47nF 10% 50V
 2833© 2222 867 15339 33pF 5% 50V
 2834© 2222 867 15339 33pF 5% 50V
 2835© 3198 017 34730 47nF 10% 16V

2836 4822 124 40769 4,7µF 20% 100V
 2837 4822 124 22726 4,7µF 20% 35V
 2839 4822 124 40433 47µF 20% 25V
 2840© 4822 126 13751 47nF 10% 50V
 2841© 4822 122 33575 220pF 5% 50V

2842© 4822 126 13883 220pF 5% 50V
 2843© 4822 126 14585 100nF 10% 50V
 2844© 5322 126 10794 220pF 10% 50V
 2845 5322 124 41948 0,47µF 20% 50V
 2848© 4822 126 14585 100nF 10% 50V

2849© 4822 126 14585 100nF 10% 50V
 2850© 5322 122 32268 470pF 10% 50V
 2859© 4822 126 13956 68pF 5% 63V

CAPACITORS

2860 4822 124 11947 10µF 20% 16V
 2866© 4822 126 13751 47nF 10% 50V
 2872© 3198 017 34730 47nF 10% 16V
 2873 4822 124 80231 47µF 20% 16V
 2877© 4822 126 14226 82pF 5% 50V

2878© 4822 126 13883 220pF 5% 50V
 2881 4822 124 40769 4,7µF 20% 100V
 2883© 4822 126 13883 220pF 5% 50V
 2884© 5322 122 33861 120pF 5% NPO
 2885© 4822 126 14043 1µF 20% 16V

2886© 4822 122 33177 10nF 20% 50V
 2887© 5322 126 10511 1nF 5% 50V
 2889© 4822 122 33777 47pF 5% 63V

RESISTORS

2822© 4822 051 20008 CHIP JUMPER 0805
 3700© 4822 117 12925 47kΩ 1% 0,06W
 3702© 4822 117 12521 68Ω 1% 0,1W
 3703© 4822 051 20332 3,3kΩ 5% 0,1W
 3709© 4822 051 10102 1kΩ 2% 0,25W

3709© 4822 051 20008 CHIP JUMPER 0805
 3712© 4822 117 12917 1Ω 5% 0,06W
 3713© 4822 051 30223 22kΩ 5% 0,06W
 3714© 4822 051 30103 10kΩ 5% 0,06W
 3715© 4822 117 13632 100kΩ 1% 0,06W

3716© 4822 051 30101 100Ω 5% 0,06W
 3717© 4822 117 12917 1Ω 5% 0,06W
 3719© 4822 051 30392 3,9kΩ 5% 0,06W
 3720© 4822 051 30562 5,6kΩ 5% 0,06W
 3721© 4822 051 30223 22kΩ 5% 0,06W

3722© 4822 051 30392 3,9kΩ 5% 0,06W
 3724© 4822 117 12955 2,7kΩ 1% 0,1W
 3725© 4822 117 13577 330Ω 1% 0,1W
 3726© 4822 051 30271 270Ω 5% 0,06W
 3727© 4822 051 30102 1kΩ 5% 0,06W

3728© 4822 051 30102 1kΩ 5% 0,06W
 3729© 4822 117 11817 1,2kΩ 1% 0,06W
 3730© 4822 051 20333 33kΩ 5% 0,1W
 3735© 4822 051 30223 22kΩ 5% 0,06W
 3736© 4822 117 12925 47kΩ 1% 0,06W

3737© 4822 051 20334 330kΩ 5% 0,1W
 3738© 4822 051 30271 270Ω 5% 0,06W
 3739© 4822 117 13632 100kΩ 1% 0,06W
 3745© 4822 117 10833 10kΩ 1% 0,1W
 3747© 4822 117 12925 47kΩ 1% 0,06W

3748© 4822 051 30103 10kΩ 5% 0,06W
 3749© 4822 117 12521 68Ω 1% 0,1W
 3752© 4822 117 12521 68Ω 1% 0,1W
 3753© 4822 117 13632 100kΩ 1% 0,06W
 3754© 4822 117 11503 220Ω 5% 0,1W

3755© 4822 117 11503 220Ω 5% 0,1W
 3759© 4822 051 20471 470Ω 5% 0,1W
 3765© 4822 051 30103 10kΩ 5% 0,06W
 3766© 4822 117 10833 10kΩ 1% 0,1W
 3767© 4822 051 30339 33Ω 5% 0,06W

3768© 4822 051 20334 330kΩ 5% 0,1W
 3769© 4822 051 30101 100Ω 5% 0,06W
 3770© 4822 051 30102 1kΩ 5% 0,06W
 3771© 4822 051 30102 1kΩ 5% 0,06W
 3772© 4822 051 30471 470Ω 5% 0,06W

3773© 4822 117 10833 10kΩ 1% 0,1W
 3775▲ 4822 052 10338 3,3Ω 5% NFR25
 3776© 4822 051 30103 10kΩ 5% 0,06W
 3777© 4822 051 30393 39kΩ 5% 0,06W
 3778© 4822 051 30223 22kΩ 5% 0,06W

ELECTRICAL PARTSLIST 3CDC-LC-CDR

RESISTORS				RESISTORS			
3779© 4822 117 11454	820Ω	1%	0,1W	3874© 4822 051 20008	CHIP JUMPER 0805		
3780© 4822 051 30471	470Ω	5%	0,06W	3878© 4822 117 11503	220Ω	5%	0,1W
3781© 4822 051 30561	560Ω	5%	0,06W	3881© 4822 117 11503	220Ω	5%	0,1W
3782© 4822 051 30333	33kΩ	5%	0,06W	4706© 4822 051 20008	CHIP JUMPER 0805		
3800© 4822 051 30563	56kΩ	5%	0,06W	4709© 4822 051 20008	CHIP JUMPER 0805		
3801© 4822 051 30103	10kΩ	5%	0,06W	4710© 4822 051 20008	CHIP JUMPER 0805		
3802© 4822 117 11148	56kΩ	1%	0,1W	4711© 4822 051 20008	CHIP JUMPER 0805		
3803© 4822 117 10833	10kΩ	1%	0,1W	4724© 4822 051 20008	CHIP JUMPER 0805		
3805© 4822 051 30103	10kΩ	5%	0,06W	4726© 4822 051 20008	CHIP JUMPER 0805		
3806© 4822 051 30103	10kΩ	5%	0,06W	4729© 4822 051 20008	CHIP JUMPER 0805		
3807© 4822 051 30103	10kΩ	5%	0,06W	4730© 4822 051 20008	CHIP JUMPER 0805		
3808© 4822 051 30103	10kΩ	5%	0,06W	4731© 4822 051 30008	CHIP JUMPER 0603		
3809© 4822 051 30103	10kΩ	5%	0,06W	4732© 4822 051 20008	CHIP JUMPER 0805		
3810© 4822 051 30471	470Ω	5%	0,06W	4733© 4822 051 30008	CHIP JUMPER 0603		
3811© 4822 051 20273	27kΩ	5%	0,1W	4736© 4822 051 30008	CHIP JUMPER 0603		
3812© 4822 051 20471	470Ω	5%	0,1W	4738© 4822 051 30008	CHIP JUMPER 0603		
3813© 4822 051 20471	470Ω	5%	0,1W	4739© 4822 051 30008	CHIP JUMPER 0603		
3814© 4822 051 20471	470Ω	5%	0,1W	4740© 4822 051 30008	CHIP JUMPER 0603		
3815▲ 4822 052 10478	4,7Ω	5%	NFR25	4743© 4822 051 20008	CHIP JUMPER 0805		
3819© 4822 051 20471	470Ω	5%	0,1W	4744© 4822 051 30008	CHIP JUMPER 0603		
3820© 4822 051 30472	4,7kΩ	5%	0,06W	4747© 4822 051 20008	CHIP JUMPER 0805		
3821© 4822 051 20472	4,7kΩ	5%	0,1W	4748© 4822 051 20008	CHIP JUMPER 0805		
3822© 4822 051 30272	2,7kΩ	5%	0,06W	4749© 4822 051 30008	CHIP JUMPER 0603		
3823© 4822 051 30102	1kΩ	5%	0,06W	4800© 4822 051 30008	CHIP JUMPER 0603		
3824© 4822 051 30102	1kΩ	5%	0,06W	4801© 4822 051 30008	CHIP JUMPER 0603		
3826© 4822 051 20223	22kΩ	5%	0,1W	4802© 4822 051 30008	CHIP JUMPER 0603		
3827© 4822 051 20273	27kΩ	5%	0,1W	4803© 4822 051 30008	CHIP JUMPER 0603		
3828© 4822 051 30223	22kΩ	5%	0,06W	4805© 4822 051 30008	CHIP JUMPER 0603		
3829© 4822 117 13608	4,7Ω	5%	0,06W	4806© 4822 051 20008	CHIP JUMPER 0805		
3830© 4822 116 83933	15kΩ	1%	0,1W	4810© 4822 051 20008	CHIP JUMPER 0805		
3831© 4822 117 10837	100kΩ	1%	0,1W	4811© 4822 051 20008	CHIP JUMPER 0805		
3832© 4822 117 10833	10kΩ	1%	0,1W	4812© 4822 051 20008	CHIP JUMPER 0805		
3833© 4822 051 30223	22kΩ	5%	0,06W	4813© 4822 051 20008	CHIP JUMPER 0805		
3834© 4822 051 20223	22kΩ	5%	0,1W	4814© 4822 051 20008	CHIP JUMPER 0805		
3835▲ 2120 660 90046	0,27Ω	20%	PTC	4815© 4822 051 20008	CHIP JUMPER 0805		
3836© 4822 117 12889	270kΩ	1%	0,06W	4820© 4822 051 20008	CHIP JUMPER 0805		
3837© 4822 117 10833	10kΩ	1%	0,1W	4821© 4822 051 20008	CHIP JUMPER 0805		
3838© 4822 051 30103	10kΩ	5%	0,06W	4822© 4822 051 20008	CHIP JUMPER 0805		
3839© 4822 117 10834	47kΩ	1%	0,1W	4823© 4822 051 30008	CHIP JUMPER 0603		
3841© 4822 051 20273	27kΩ	5%	0,1W	4826© 4822 051 20008	CHIP JUMPER 0805		
3842© 4822 117 10834	47kΩ	1%	0,1W	4827© 4822 051 30008	CHIP JUMPER 0603		
3843© 4822 117 10834	47kΩ	1%	0,1W	4828© 4822 051 30008	CHIP JUMPER 0603		
3844© 4822 117 12864	82kΩ	5%	0,6W	4829© 4822 051 20008	CHIP JUMPER 0805		
3845© 4822 117 10834	47kΩ	1%	0,1W	4830© 4822 051 20008	CHIP JUMPER 0805		
3846© 4822 117 10834	47kΩ	1%	0,1W	4831© 4822 051 20008	CHIP JUMPER 0805		
3847© 4822 117 11148	56kΩ	1%	0,1W	4832© 4822 051 30008	CHIP JUMPER 0603		
3848© 4822 117 10837	100kΩ	1%	0,1W	4833© 4822 051 20008	CHIP JUMPER 0805		
3849© 4822 051 30103	10kΩ	5%	0,06W	4834© 4822 051 20008	CHIP JUMPER 0805		
3850© 4822 051 30183	18kΩ	5%	0,06W	4835© 4822 051 20008	CHIP JUMPER 0805		
3851© 4822 117 10834	47kΩ	1%	0,1W	4836© 4822 051 20008	CHIP JUMPER 0805		
3852© 4822 051 10102	1kΩ	2%	0,25W	4837© 4822 051 20008	CHIP JUMPER 0805		
3853© 4822 051 20471	470Ω	5%	0,1W	4838© 4822 051 30008	CHIP JUMPER 0603		
3854© 4822 051 30101	100Ω	5%	0,06W	4839© 4822 051 20008	CHIP JUMPER 0805		
3855© 4822 117 12971	15Ω	5%	0,06W	4840© 4822 051 20008	CHIP JUMPER 0805		
3856© 4822 117 12521	68Ω	1%	0,1W	4841© 4822 051 20008	CHIP JUMPER 0805		
3857© 4822 117 12521	68Ω	1%	0,1W	4842© 4822 051 20008	CHIP JUMPER 0805		
3861© 4822 051 30103	10kΩ	5%	0,06W	4843© 4822 051 20008	CHIP JUMPER 0805		
3862© 4822 051 20121	120Ω	5%	0,1W	4844© 4822 051 20008	CHIP JUMPER 0805		
3863© 4822 051 30339	33Ω	5%	0,06W	4845© 4822 051 20008	CHIP JUMPER 0805		
3864© 4822 051 30101	100Ω	5%	0,06W	4846© 4822 051 20008	CHIP JUMPER 0805		
3865© 4822 051 30121	120Ω	5%	0,06W	4847© 4822 051 20008	CHIP JUMPER 0805		
3866© 4822 051 30103	10kΩ	5%	0,06W	4848© 4822 051 20008	CHIP JUMPER 0805		
3871© 4822 117 11149	82kΩ	1%	0,1W	4849© 4822 051 30008	CHIP JUMPER 0603		
3872© 4822 051 20472	4,7kΩ	5%	0,1W	4850© 4822 051 20008	CHIP JUMPER 0805		
3873© 4822 051 20008	CHIP JUMPER 0805			4852© 4822 051 20008	CHIP JUMPER 0805		

ELECTRICAL PARTSLIST 3CDC-LC-CDR**RESISTORS**

4853© 4822 051 20008 CHIP JUMPER 0805
 4854© 4822 051 30008 CHIP JUMPER 0603
 4855© 4822 051 20008 CHIP JUMPER 0805
 4856© 4822 051 20008 CHIP JUMPER 0805
 4857© 4822 051 30008 CHIP JUMPER 0603

4858© 4822 051 20008 CHIP JUMPER 0805
 4859© 4822 051 20008 CHIP JUMPER 0805
 4861© 4822 051 20008 CHIP JUMPER 0805
 4862© 4822 051 20008 CHIP JUMPER 0805
 4863© 4822 051 20008 CHIP JUMPER 0805

4864© 4822 051 20008 CHIP JUMPER 0805
 4865© 4822 051 30008 CHIP JUMPER 0603
 4866© 4822 051 20008 CHIP JUMPER 0805
 4867© 4822 051 30008 CHIP JUMPER 0603
 4869© 4822 051 20008 CHIP JUMPER 0805

4870© 4822 051 20008 CHIP JUMPER 0805
 4871© 4822 051 20008 CHIP JUMPER 0805
 4872© 4822 051 20008 CHIP JUMPER 0805
 4873© 4822 051 20008 CHIP JUMPER 0805
 4874© 4822 051 20008 CHIP JUMPER 0805

4875© 4822 051 20008 CHIP JUMPER 0805
 4877© 4822 051 30008 CHIP JUMPER 0603
 4880© 4822 051 20008 CHIP JUMPER 0805
 4883© 4822 051 20008 CHIP JUMPER 0805
 4884© 4822 051 20008 CHIP JUMPER 0805

4885© 4822 051 20008 CHIP JUMPER 0805
 4887© 4822 051 30008 CHIP JUMPER 0603
 4888© 4822 051 20008 CHIP JUMPER 0805
 4890© 4822 051 20008 CHIP JUMPER 0805
 4891© 4822 051 30008 CHIP JUMPER 0603

4893© 4822 051 20008 CHIP JUMPER 0805
 4895© 4822 051 20008 CHIP JUMPER 0805
 4896© 4822 051 20008 CHIP JUMPER 0805
 4897© 4822 051 20008 CHIP JUMPER 0805
 4898© 4822 051 20008 CHIP JUMPER 0805

COILS

1810 4822 242 10849 CRYSTAL 8,46MHz

DIODES

6801© 4822 130 83757 BAS216
 6802© 4822 130 83757 BAS216
 6803© 4822 130 83757 BAS216
 6804© 4822 130 83757 BAS216
 6805© 4822 130 10648 BZX284-C5V6 for Quad speed
 6805© 4822 130 11383 BZX284-C5V1 for Double speed
 6807© 4822 130 11366 BZX284-C3V9
 6808© 4822 130 83757 BAS216
 6810 4822 130 31878 1N4003G
 6811 4822 130 31878 1N4003G
 6812© 4822 130 11397 BAS316

TRANSISTORS

7804© 4822 130 60511 BC847B
 7805© 4822 130 60511 BC847B
 7806© 4822 130 60511 BC847B
 7812© 4822 130 60511 BC847B
 7815© 4822 130 60511 BC847B
 7817© 5322 130 42718 BFS20
 7819© 4822 130 60511 BC847B
 7820© 4822 130 60511 BC847B
 7821© 5322 130 42718 BFS20
 7822 4822 130 42131 BF550
 7823© 5322 130 42718 BFS20
 7824© 5322 130 42718 BFS20

INTEGRATED CIRCUITS

7801© 4822 209 17286 TZA1024T/N1, HF-AMPLIFIER
 7802© 9352 684 20557 SAA7325H/T/M2B, SIGNAL PROCESSOR
 7803© 9322 158 56682 M63000SP, MOTOR DRIVER
 7813© 5322 209 11306 HEF4094BT, SHIFT REGISTER
 7814 4822 209 32852 TDA7073A/N2, MOTOR DRIVER