



Synology Network Video Recorder NVR216 with Surveillance Station

User's Guide

Table of Contents

Chapter 1: Before You Start

Chapter 2: Hardware Setup

Tools and Parts for Drive Installation.....	6
Install Drives.....	6
Start Up Your NVR.....	8

Chapter 3: Install DSM and Surveillance Station on NVR

Install DSM with Web Assistant.....	9
Get Your NVR Ready.....	10
Learn More.....	10

Chapter 4: Get Started with Surveillance Station

Add an IP Camera to Surveillance Station.....	11
Monitor Camera Feeds with Live View.....	14
Playback Video Recordings with Timeline.....	19
Manage Archived Video Recordings.....	19
Authorize User Privileges.....	20
Discover More Features with Add-ons.....	22

Chapter 5: Setup and Operate Surveillance Station Local Display

Connect a Monitor to Your NVR.....	23
Navigate Local Display Desktop.....	24
Function Limitations.....	26
System.....	27

Appedix A: Specifications







Appedix B: LED Indicator Table

Before You Start


Thank you for purchasing Synology Network Video Recorder (NVR). NVR combines the network-attached storage (NAS) with PC-less configuration, operation, and local display of the network video recording package – Surveillance Station. Before setting up your new NVR, please check the package contents to verify that you have received the items below. Also, make sure to read the safety instructions carefully to avoid harming yourself or damaging your NVR.

Note: All images below are for illustrative purposes only, and may differ from the actual product.

Package Contents

Main unit x 1	AC power cord
	
	AC power adapter x 1
	
Screws for drives x 10	RJ-45 LAN cable x 1
	
	Screws for fixing the Synology case x 3
	

Synology NVR at a Glance

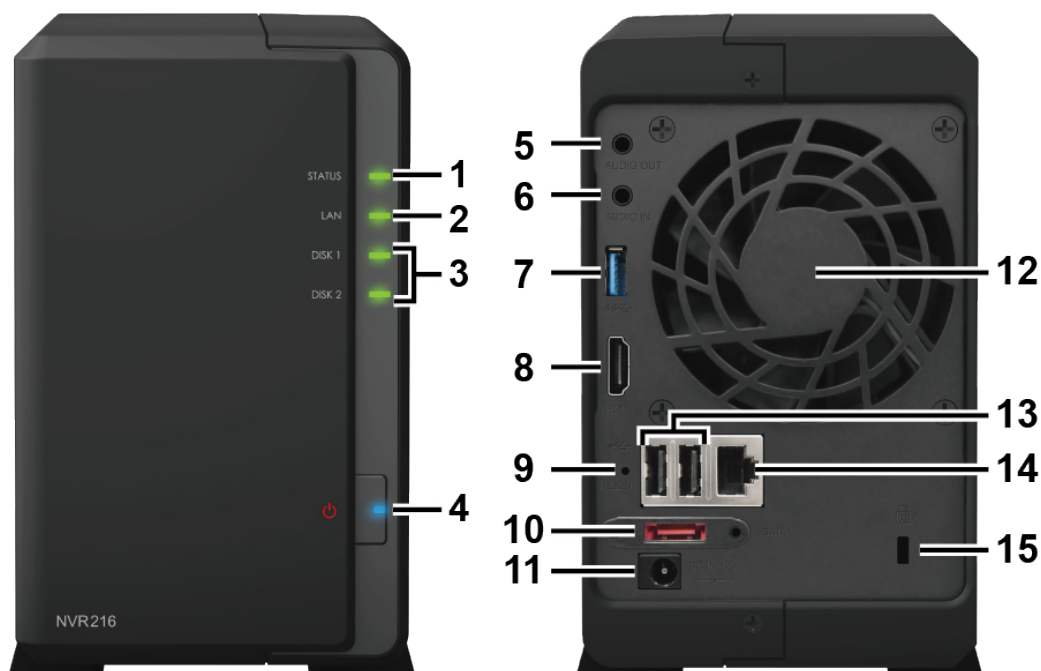









No.	Article Name	Location	Description
1	Status Indicator	Front Panel	Displays the status of the system. For more information, see "Appendix B: LED Indicator Table".
2	LAN Indicator		Displays the status of the network connection. For more information, see "Appendix B: LED Indicator Table".
3	Disk Indicator		Displays the status of the installed drive. For more information, see "Appendix B: LED Indicator Table".
4	Power Button and Indicator		<ol style="list-style-type: none"> 1. Press to power on the NVR. 2. To power off the NVR, press and hold until you hear a beep sound and the Power LED starts blinking.
5	Audio Output	Back Panel	Connect an external speaker or earphone here.
6	Audio Input		Connect a microphone here.
7	USB 3.0 Port		Connect external drives or supported USB devices ¹ to the NVR here.
8	HDMI Output		Connect an HDMI cable here.
9	RESET Button		<ol style="list-style-type: none"> 1. Press and hold until you hear a beep sound to restore the default IP address, DNS server, and password for the admin account. 2. Press and hold until you hear a beep sound, then press and hold again until you hear three beep sounds to return the NVR to "Not Installed" status so that DiskStation Manager (DSM) can be reinstalled.
10	eSATA Port		Connect to Synology Expansion Unit ² here.
11	Power Port		Connect the AC power adapter here.
12	Fan		Disposes of excess heat and cools the system. If the fan malfunctions, the NVR will emit a beeping sound.
13	USB 2.0 Port		Connect external drives or supported USB devices ¹ to the NVR here.
14	LAN Port		Connect an RJ-45 network cable here.
15	Kensington Security Slot		Attach a Kensington security lock here.

¹ Supported USB devices include USB drive, mouse, keyboard, and uninterruptible power supply (UPS). Any other devices are not supported on your NVR.

² For more information about Synology Expansion Unit supported by your NVR, please visit www.synology.com.

Safety Instructions

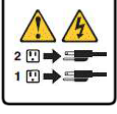	<p>Keep away from direct sunlight and away from chemicals. Make sure the environment does not experience abrupt changes in temperature or humidity.</p>
	<p>Place the product right side up at all times.</p>
	<p>Do not place near any liquids.</p>
	<p>Before cleaning, unplug the power cord. Wipe with damp paper towels. Do not use chemical or aerosol cleaners.</p>
	<p>To prevent the unit from falling over, do not place on carts or any unstable surfaces.</p>
	<p>The power cord must plug in to the correct supply voltage. Make sure that the supplied AC voltage is correct and stable.</p>
	<p>To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.</p>
	<p>Risk of explosion if battery is replaced with an incorrect type. Dispose of used batteries appropriately.</p>

Hardware Setup


Tools and Parts for Drive Installation

- A screwdriver
- At least one 3.5" or 2.5" SATA drive (please visit www.synology.com for compatible drive models.)

Warning: If you install a drive that contains data, the system will format the drive and erase all existing data. Please back up any important data before installation.


Install Drives

- 1 Push the upper case in the direction as shown below. Lift the upper case and set it aside.

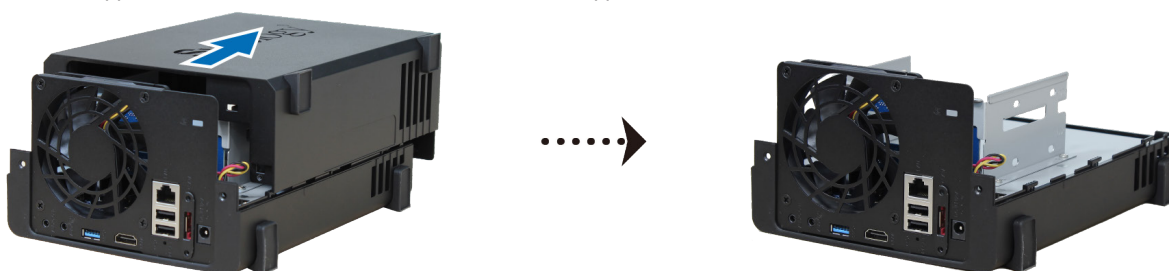


- 2 Install drives:

- **For 3.5" drives:** Slide the drive into the drive bay, and push it all the way until it's firmly connected to the SATA connector. Secure the drive with the screws provided.

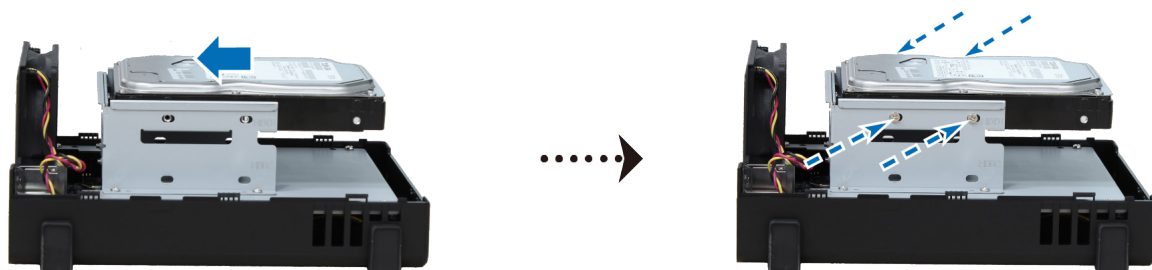


- **For 2.5" drives:**

- a Place the drive in the 2.5" Disk Holder (Type C, sold separately), and then tighten the 2.5" screws to secure the drive.

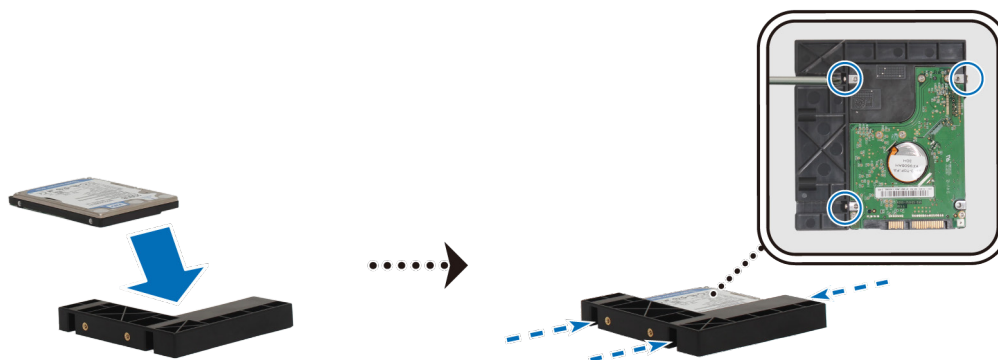


b Slide the 2.5" Disk Holder into the drive bay, and push it all the way until the drive is firmly connected to the SATA connector. Secure the Disk Holder with the provided screws.

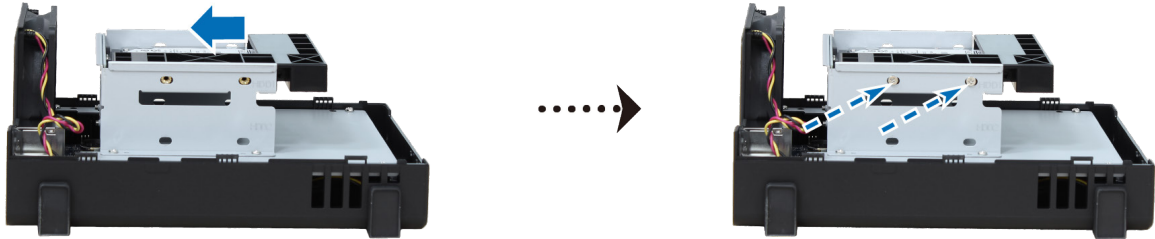


3 Repeat the steps above to install the other drive if you have prepared one.

4 The position of drives is as follows:

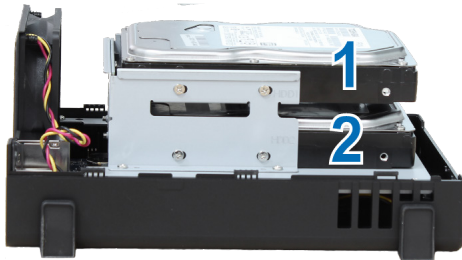

Note: If you want to create a RAID volume, we recommend that all installed drives are of the same size to make the best use of drive capacity.

5 Replace the upper case, and tighten the screws on the back panel.

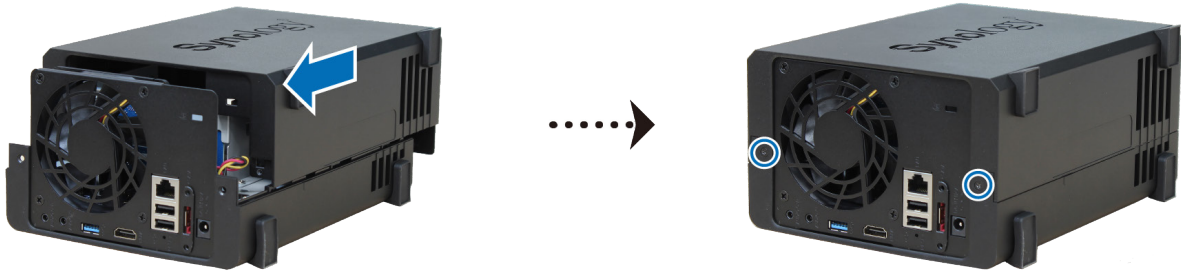

Start Up Your NVR

- 1 Connect one end of the AC power adapter to the power port of the NVR. Connect the other end to a power outlet.
- 2 Use the LAN cable to connect the NVR to your switch, router, or hub.
- 3 Press the power button to turn on the NVR.



Congratulations! Your NVR is now online and detectable from a network computer.

Install DSM and Surveillance Station on NVR

After hardware setup is finished, please install DiskStation Manager (DSM) – Synology's browser-based operating system – on your NVR.

Install DSM with Web Assistant

Your NVR comes with a built-in tool called **Web Assistant** that helps you download the latest version of DSM from the Internet and install it on your NVR. To use Web Assistant, please follow the steps below.

- 1 Power on the NVR.
- 2 Open a web browser on a computer connected to the same network as the NVR.
- 3 Enter either of the following into the address bar of your browser:
 - a find.synology.com
 - b `nvr:5000`
- 4 Web Assistant will be launched in your web browser. It will search for and find the NVR within the local network. The status of the **NVR** should be **Not Installed**.



- 5 Click **Connect** to start the setup process and follow the onscreen instructions.

Note:

1. The NVR must be connected to the Internet to install DSM with Web Assistant.
2. Suggested browsers: Chrome, Firefox.
3. If you accidentally leave the installation process before it is finished, login to the DSM as **admin** (default administrative account name) with the password left blank.

Get Your NVR Ready

After you finish installing DSM, the system will guide you through the initial configuration of DSM, as well as the installation of Surveillance Station. To get your NVR ready, please follow the steps below.

- 1 Create an account of DSM by entering **Server name**, **Username**, and **Password**. When you finish, please click **Next** to continue.

- 2 Specify how and when the system will update DSM for your NVR. When you finish, please click **Next** to continue.

- 3 After you finish the initial configuration of DSM, your NVR is ready to install Surveillance Station. Please click **Install** to start the installation of Surveillance Station.


Note: If the installation of Surveillance Station was not completed, please go to **Package Center** in DSM to install **Surveillance Station** manually.

Learn More

Congratulations! Your NVR is now ready for action. For more information or online resources about your NVR, please visit www.synology.com.

Get Started with Surveillance Station


Assuming that your Synology NVR has been connected to the local network and successfully installed DSM and Surveillance Station 8.0 (or above), this chapter will guide you through the main features of Surveillance Station, including configuring IP Camera, monitoring camera feeds with Live View, playing back recordings with Timeline and Recording, and other related add-ons. If you have not yet completed hardware and software setup, please refer to the previous chapters before proceeding. To launch Surveillance Station, please go to **Main Menu > Surveillance Station** in DSM.

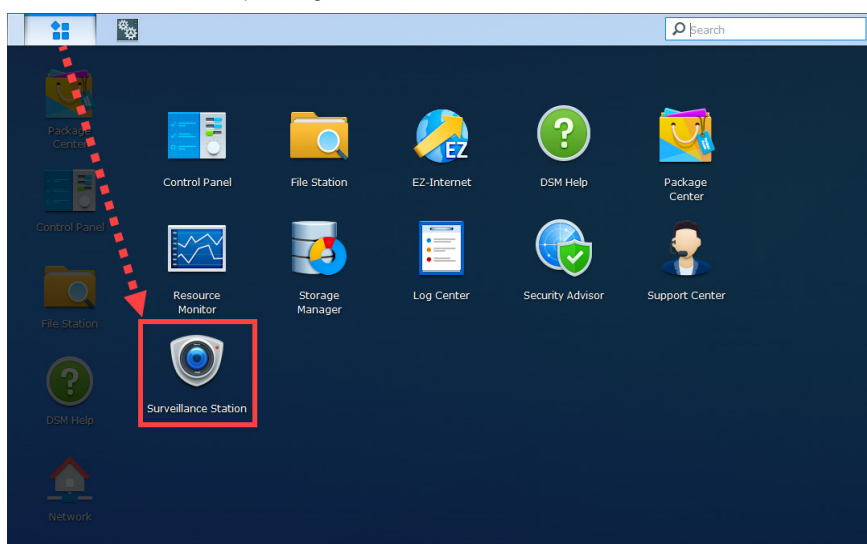

Add an IP Camera to Surveillance Station

With Surveillance Station, you can leverage your IP cameras connected to the same local area network as your NVR. To add an IP camera to Surveillance Station, please do the following:

- 1 Make sure you have powered on your IP camera which was connected to the local area network.
- 2 Go to Surveillance Station **Main Menu > IP Camera**.

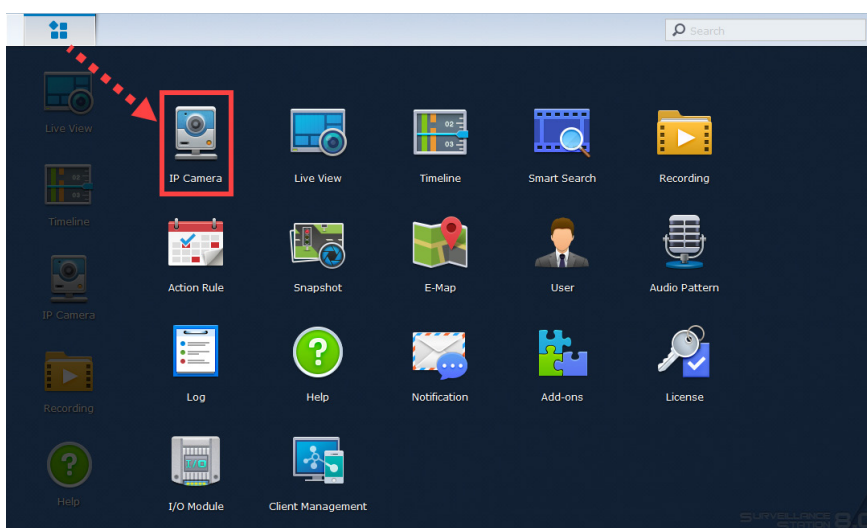

Note: For more information on Surveillance Station **Main Menu** and **Taskbar**, please refer to Surveillance Station **Help > Surveillance Station Desktop**.


- 3 Click **Add > Add Camera** to launch **Add Camera Wizard**.
- 4 To easily start with IP camera configuration, you can select **Quick Setup** and click **Next**.

- 5 Click the search icon to search for all the IP cameras correctly connected to your local area network.

Add Camera Wizard

Information

Name:

IP address: 

Port:

Brand:

Camera model:

Username:

Password:

Note: You can also manually enter the camera's information, including **Name**, **IP address**, **Port**, **Brand**, **Camera model**, **Username**, and **Password**.

- 6 In the **Camera Search Result** window, select an IP camera you wish to add to Surveillance Station, and click **OK**.

Camera search result

Synology Supported Cameras | General Interface (ONVIF) |


Brand	Model	IP Address	Port	MAC Address
AXIS	P1346	10.13.23.46	80	00:40:8C:C1:73:F8
Vivotek	IP8155HP	10.13.20.26	80	00:04:29:0C:CD:01
ABUS	TVIP91100	10.13.22.250	80	8C:11:CB:06:00:E0

- 7 You can click **Test Connection** to check if your IP camera has been correctly configured. Click **Finish** to complete the procedure.

Add Camera Wizard

Information

Name:

IP address: 

Port:

Brand:


Camera model:

Video format:

Audio format:

Username:

Password:




You can now operate various network video recording features of Surveillance Station with your IP camera. To configure further settings for your IP cameras, such as recording, live view, and event detection settings, please refer to corresponding articles under Surveillance Station **Help > IP Camera > Configure Camera Settings**.

Note: Your NVR comes with 4 pre-installed licenses. You can add up to 9 cameras or I/O modules by adding more licenses (sold separately).

Monitor Camera Feeds with Live View

In **Live View**, you can monitor real-time video feeds from IP cameras paired with your NVR, capture snapshots, or adjust camera feeds with pan, tilt, and zoom (PTZ) controls. Camera feeds can be arranged in layouts and customized depending on your individual surveillance needs.

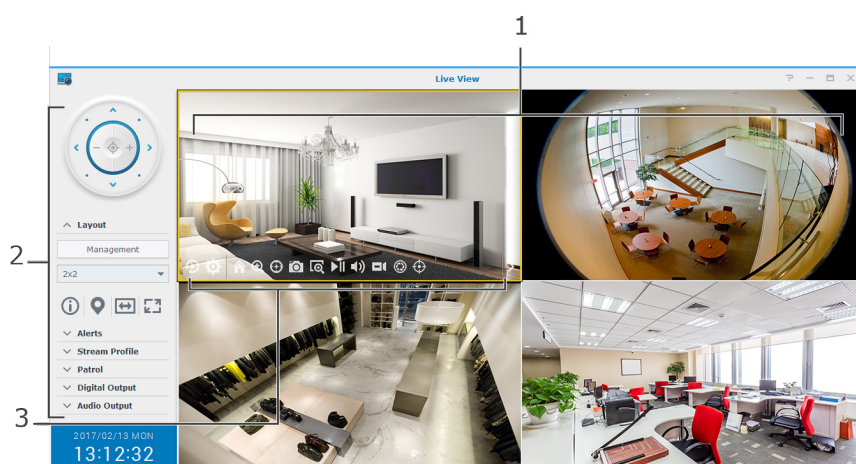


No.	Name	Function	
1	Live View Layout	Displays video feeds from IP cameras.	
2	Left Panels	PTZ Controls	Adjust angle and zoom of cameras that support PTZ (pan, tilt, zoom) controls. These controls are grayed out when the selected camera does not support PTZ controls. Functions of the buttons are listed as follows: 1. Arrow buttons adjust the angle of the currently selected camera. 2. Home button returns the selected camera to its default position. 3. Plus and minus buttons adjust the optical zoom of the selected camera.
		Layout Panel	Edit live view layouts, or enable/disable layout related features here. For quick configuration of your camera feed layout, please refer to "Start Monitoring by Configuring Live View Layout" section below.
		Alerts Panel	Manage alerts settings or display alerted video clips here. For quick configuration of live view analytics, please refer to "Get Alerted with Live View Analytics" section below.
		Stream Profile	Switch stream profile here. For more information, please refer to Surveillance Station Help > Live View > Monitor Live Views .
		Patrol Panel	Switch patrol settings here. For quick setup of patrol paths and schedules, please refer to "Setup Scheduled Patrol with PTZ Control and Action Rule" section below.
	Digital Output/Audio Output	Activate/deactivate digital output and/or audio output here.	
3	On-screen Buttons	Hover the pointer over the selected camera feed to display the on-screen buttons. These buttons will show according to the features supported by your cameras. For more information, please refer to Surveillance Station Help > Live View > Monitor Live Views .	

Start Monitoring by Configuring Live View Layout

To configure your live view layout and start monitoring your camera feeds, please do the following:


- 1 Click **Management** on the **Layout Panel**.
- 2 Select your preferred type of live view layout. For details, please refer to Surveillance Station **Help > Live View > Monitor Live Views**.
- 3 Drag an IP camera and drop it onto a certain channel of the layout. Repeat this step to display more video feeds on your live view layout.
- 4 According to your surveillance requirements, you can add more layouts by clicking the plus button, enter the **Name**, and repeat steps 2 and 3. After finishing the configuration, you can quickly switch among the saved layouts on the **Layout Panel**.
- 5 Click **Save** to finish the configuration.

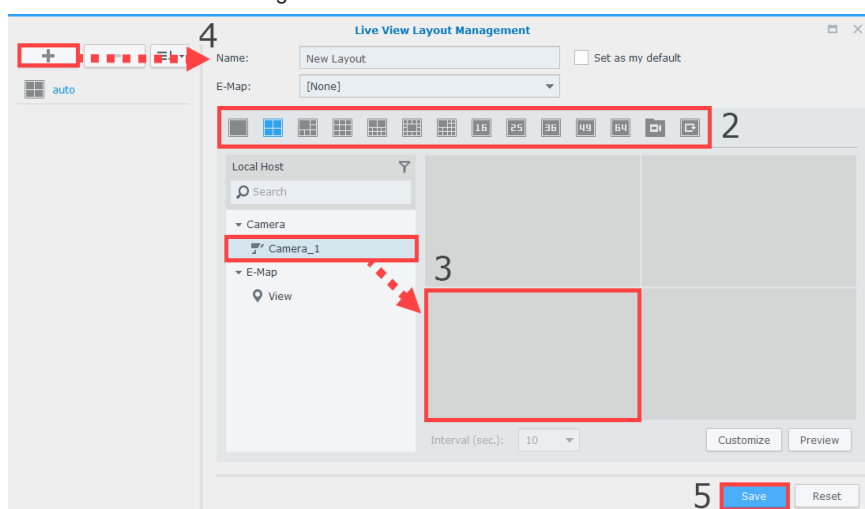

Get Alerted with Live View Analytics


With Alerts feature, you can easily choose from several alert events for your IP cameras, and track suspicious events intelligently to trigger recording on-the-fly. For more information, please refer to Surveillance Station **Help > Live View > Alerts**. To track events with live view analytics, please do the following:

- 1 Go to Surveillance Station **Main Menu > IP Camera**, select a camera, and click **Live View Analytics**.
- 2 Select an **Analytics Type** from the drop-down list. For detailed functions and settings of each analytics type, please refer to Surveillance Station **Help > IP Camera > Live View Analytics**.
- 3 You can click **Simulation** to fine-tune the sensitivity, detection zone, and object size for individual cameras to obtain the best results. To stop simulation mode, please click the button again.
- 4 Click **Save** to finish Live View Analytics settings.

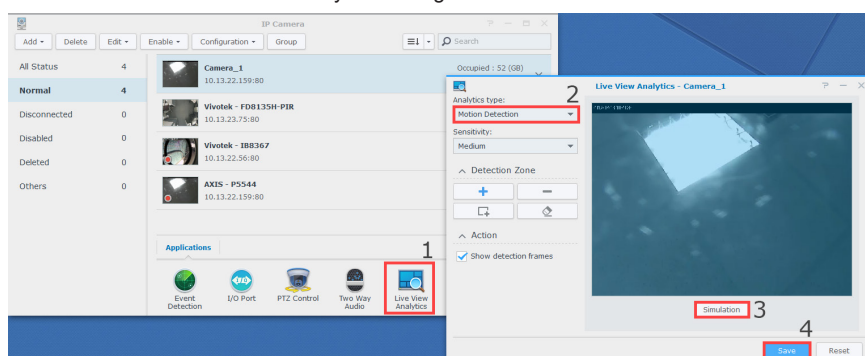

- 5 Go to Surveillance Station **Main Menu > Live View**, and click **Management** on the **Alerts Panel**.


- 6 Tick the **Alert** checkbox for the Live View Analytics item which was just now configured in **IP Camera**.
- 7 Click **Save** to finish the configuration. Now you can track alerted video clips by clicking **Alert Panel** on **Alerts Panel**.

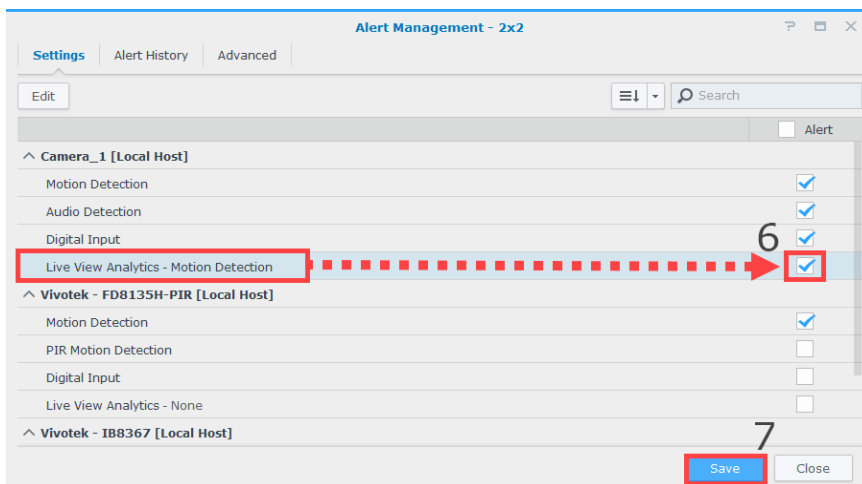


Setup Scheduled Patrol with PTZ Control and Action Rule

If your IP cameras support PTZ control and preset position, you can customize several preset positions, and setup patrol paths composed of a serial concatenation of existing preset positions. To setup patrol paths, please do the following:

- 1 Go to Surveillance Station **Main Menu** > **IP Camera**, select a PTZ-supported camera, and click **PTZ Control**.
- 2 Click the plus button to add a preset position.
- 3 Enter the **Name** of the newly added preset position, and specify the moving **Speed** (if supported by your camera).
- 4 Adjust your desired viewing angle with the on-screen PTZ controls. Repeat steps 2 to 4 to add more preset positions.
- 5 Click **Save** to finish the preset position settings.

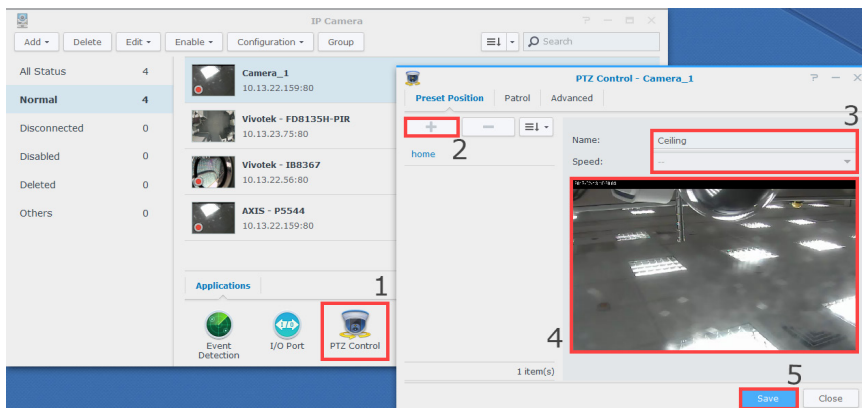


- 6 Go to **Patrol** tab in **PTZ Control**.
- 7 Click the plus button to add a patrol path.
- 8 Enter the **Name** of the newly added patrol path. Select **Interval (sec.)** to have the patrol repeat after a specified time in seconds. Specify **Speed** to adjust the moving speed level when patrol is executing (if camera supported).
- 9 Add preset positions from **All Presets** list to **Included Presets** list. Adjust the preset positions' sequence by clicking the **Up** or **Down** arrow.
- 10 Click **Save** to finish the patrol settings.

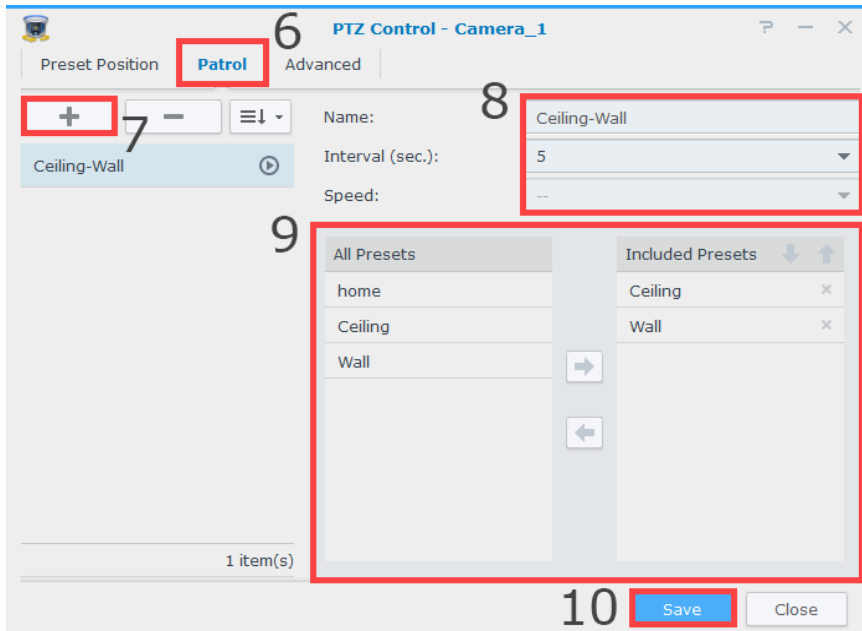


Now you can switch patrol paths on **Patrol Panel**. To automatically repeat the set up patrol path, please do the following:


- 11 Go to Surveillance Station **Main Menu** > **Action Rule**.
- 12 Click **Add** to create an action rule.
- 13 Enter the **Name** of the action rule, and set the **Rule Type** as **Scheduled**.
- 14 Click **Next** to continue.

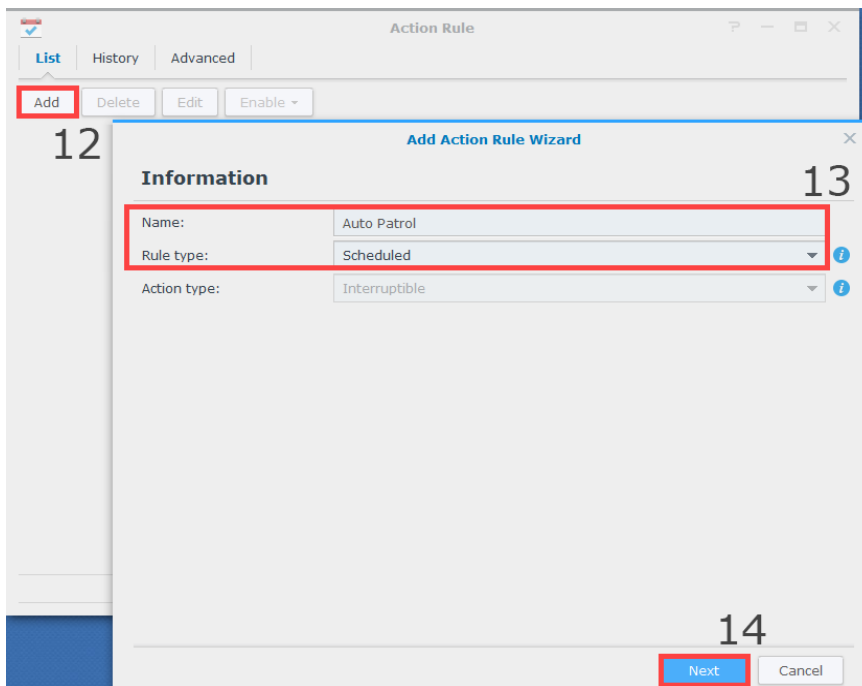

- 15 Set the **Action Device** as **Camera**. Select the **Device** as the PTZ camera you have configured preset positions and patrol paths. Select **Action** as **Patrol**. Specify the **Patrol** path you have configured. Specify your preferred **Loops per cycle** and **Interval**.
- 16 Click **Next** to continue.

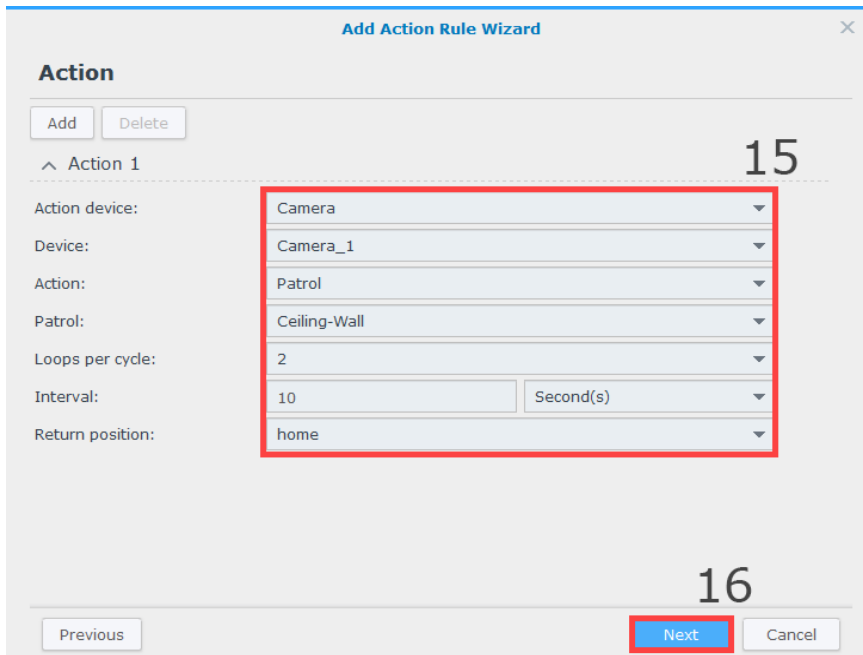


- 17 Determine when the action rule will be active by selecting cells on the grid. You can select an entire day by clicking on a day and a specific time by clicking on the hour.
- 18 Click **Finish** to complete the configuration.

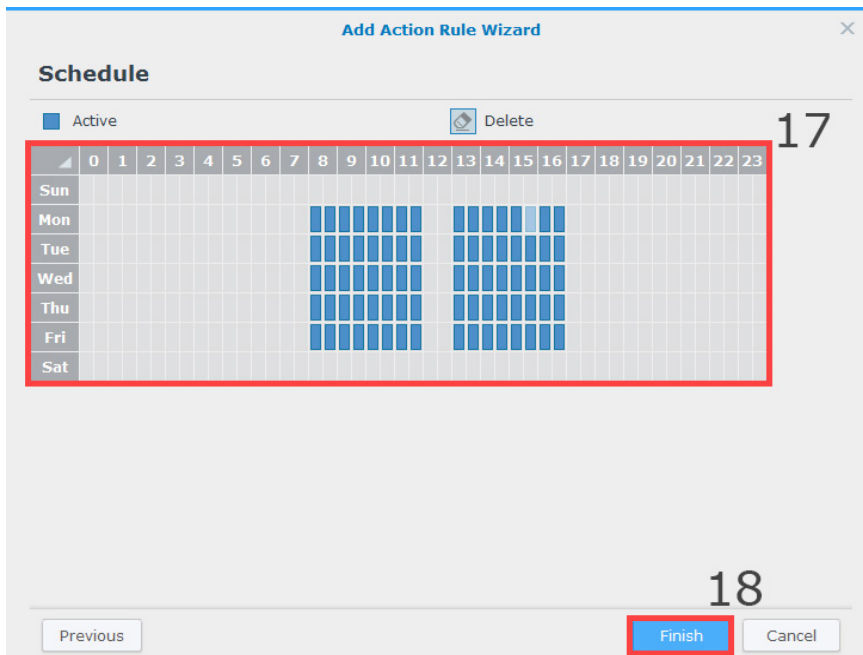

Playback Video Recordings with Timeline

In **Timeline**, you can play back recordings that were captured with IP cameras and stored on your NVR. Recordings can be filtered based on camera or date. In addition, footage recorded at different times or with different cameras can be watched simultaneously, allowing you to easily have a full understanding of the entire environment.

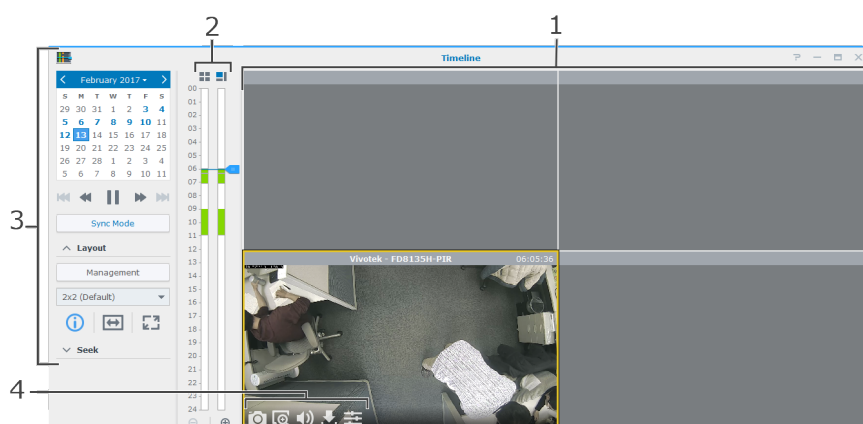

No.	Name	Function	
1	Recordings Viewer	Displays video feeds from IP cameras. Click a camera feed to select it. Once a camera feed is selected, you can use Controller Panel to change viewing options. The currently selected camera feed is highlighted with a yellow frame. Double-clicking any camera feed enlarges the image of that feed. Double-clicking again returns to the normal layout.	
2	Timeline	Search for recordings according to time captured. There are two columns, the left one representing all camera feeds, and the right one representing the currently selected camera feed.	
3	Left Panel	Controller Panel	Controls for recordings playback. Controller functions are listed as follows: <ol style="list-style-type: none"> Choose to play back recordings captured on specific dates of the calendar. Any dates that have recordings are shown in blue. Control recording playback with the buttons below the calendar, including play/pause, fast forward/slow motion, next/previous, and next frame/previous frame.
		Layout Panel	Edit timeline layouts, or enable/disable layout related features here. For basic information on configuring layout, please refer to "Start Monitoring by Configuring Live View Layout" section above.
		Seek Panel	Specify the hour , minute , and second , and click Go To to quickly search the specific time in a camera feed. You can also launch Smart Search to obtain more accurate search results. For more information, please refer to Surveillance Station Help > Smart Search .
4	On-screen Buttons	Hover the pointer over the selected camera feed to display the on-screen buttons. For more information, please refer to Surveillance Station Help > Timeline Playback > Work with Timeline .	

Manage Archived Video Recordings

In **Recording**, you can view a list of footage recorded with IP cameras. Recording files can be played back, downloaded, or locked to ensure important recordings are not accidentally deleted.

Recordings are saved on the NVR. Recordings can be filtered according to source server, camera, recording mode, lock status, or start/end time. You can define what recordings are displayed by clicking the button with magnifying glass icon on the top right corner and configuring filter criteria.

Download Recorded Video Files to PC


To download a recording from the NVR to your PC, you can simply right-click on the recording you wish to download, and click **Download**.

Lock a Recording to Prevent Deletion

Important recordings can be locked in order to ensure they are not accidentally deleted when the system wipes old files. To lock recordings, you can simply right-click on the recording you wish to lock, and click **Lock**.

Truncate a Video File in Process of Being Recorded

If you wish to truncate the video clip which is being recorded, please right-click on the clip marked "- Recording", and select **Truncate the recording** to immediately stop recording and archive the recorded portion.

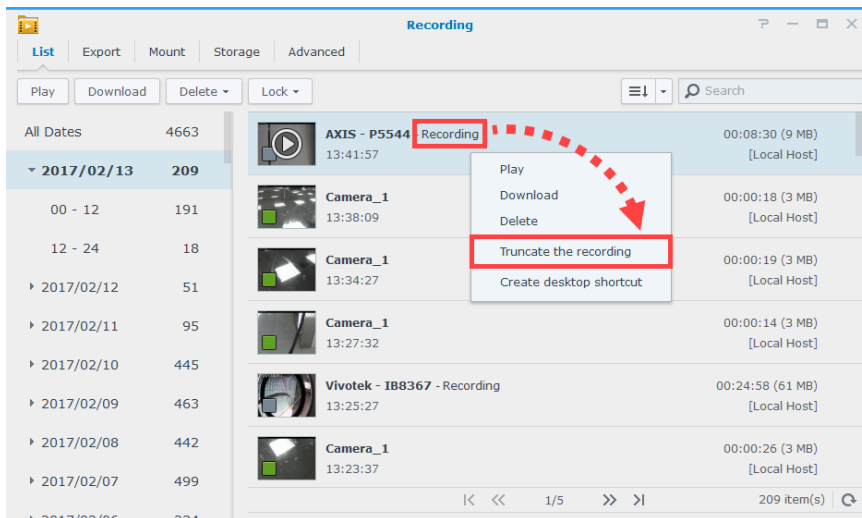

Note: Surveillance Station will start another clip for continuous recording. For more information, please refer to Surveillance Station **Help > Recording > List**.

Authorize User Privileges


In **User**, you can create user accounts for individual members of your family or business. Creating users allows you to flexibly manage permissions for each person, such as the privileges of live-viewing and playing back, and the privileges of editing or viewing for individual e-maps, live view layouts, and more advanced features.

Note: The users that are configured here are different from the Administrator/Spectator for Local Display. For more information, please refer to "Chapter 5: Setup and Operate Surveillance Station Local Display".

Create a User of Spectator Type

You can authorize limited permissions of certain features to your staff members in charge of the safeguard, while reserving the privileges of other advanced configurations. To quickly create a user of **Spectator** type, please do the following:

- 1 Go to Surveillance Station **Main Menu > User**.
- 2 Click **Add** in the **List** tab.
- 3 Enter the **User name**, **Description**, and **Password** for the new user. You can specify his or her **Display language**, and upload a **Photo** for the user.
- 4 Click **Next** to continue.

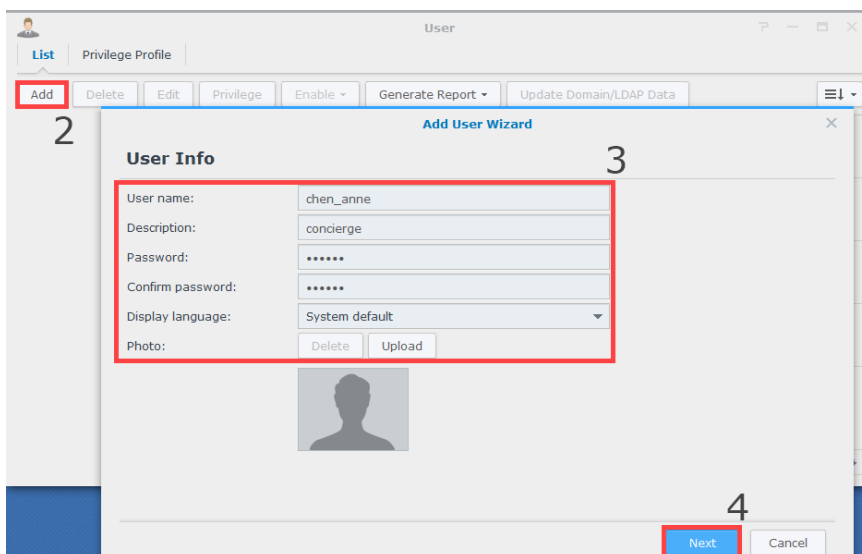

- 5 Select **Choose an existing privilege profile**, and select the default **All-Object Spectator (Spectator)** from the drop-down list.

Note: You can also choose **Create a new privilege profile** to customize the privileges that you wish to grant to the new user. For more information, please refer to Surveillance Station **Help > User > List**.

- 6 Click **Next** to continue.

The screenshot shows the 'Add User Wizard' dialog box at the 'Privilege Profile' step. The 'Choose an existing privilege profile' radio button is selected. The 'Privilege profile:' dropdown menu is set to 'All-Object Manager (Manager)'. The 'Next' button at the bottom right is highlighted with a red box. A large number '5' is overlaid on the right side of the dialog, and a large number '6' is overlaid on the 'Next' button.

- 7 After checking the profile information, click **Finish** to complete the procedure.

The screenshot shows the 'Add User Wizard' dialog box at the 'Profile Information' step. The 'Advanced' tab is selected. The 'Authorized' column shows checkmarks for various permissions under 'Live View' and 'Recording'. The 'Finish' button at the bottom right is highlighted with a red box. A large number '7' is overlaid on the bottom left of the dialog.

Advanced	Authorized
^ Live View	
Manual recording	✓
Take snapshots	✓
^ Recording	
Play recordings	✓
Download recordings	✓
Lock recordings	✓
Delete recordings	✓
Take snapshots	✓
Export recordings	✓

Discover More Features with Add-ons

Synology Surveillance Station provides varieties of add-ons to enhance your surveillance abilities and incorporate more supplementary features. You can leverage the following Surveillance Station add-ons on your NVR:

Local Display

Local Display is designed to support local live view, playback, and managements of your NVR. You can update it in Surveillance Station [Main Menu > Add-ons](#) or download it directly from Synology's [Download Center](#). For more information, please see "Chapter 5: Setup and Operate Surveillance Station Local Display".

Note: Surveillance Station Local Display is activated by default. To disable Local Display feature, please go to Surveillance Station [Main Menu > Add-ons](#) to stop this add-on.

Device Pack

Device Pack enhances the camera compatibility of Surveillance Station. You can update it in Surveillance Station [Main Menu > Add-ons](#) or download it directly from Synology's [Download Center](#). For more information, please go to [Help > Add-ons > Device Pack](#) in Surveillance Station.

CMS

In a Central Management System (CMS), your NVR can be set as a **recording server** to create a larger surveillance network. To enable the CMS feature, please go to Surveillance Station [Main Menu > Add-ons](#) to run this add-on. For more information, please refer to the articles under [Help > Add-ons > CMS](#) in Surveillance Station.

VisualStation

Synology VisualStation is a live view and playback solution designed to supplement and enhance your Surveillance Station configuration. With a **VisualStation** device, you can enjoy the rich features of Surveillance Station without the need to constantly keep a computer running. To start using your VisualStation feature, please go to Surveillance Station [Main Menu > Add-ons](#) to run this add-on. For more information, please go to [Help > Add-ons > VisualStation](#) in Surveillance Station, as well as the user's guide for your Synology VisualStation product.

Joystick

For quicker and more flexible deployment, Surveillance Station has integrated joystick control and offers you an alternative way to manage your camera preview and live view. To start using a joystick, please plug in a joystick to your computer, and go to Surveillance Station [Main Menu > Add-ons](#) to run this add-on. For more information, please go to [Help > Add-ons > Joystick](#) in Surveillance Station.

Axis Door Controller


Axis Door Controller allows Surveillance Station to interface with your Axis controller. In Surveillance Station [Main Menu > Axis Door Controller](#), you can centrally manage controllers, cardholders, and logs, as well as pair a camera with your controller to monitor a particular door and provide enhanced situational awareness. Before using your access control system, please go to Surveillance Station [Main Menu > Add-ons](#) to run this add-on. For more information, please refer to the articles under [Help > Add-ons > Axis Door Controller](#) in Surveillance Station.

Setup and Operate Surveillance Station Local Display

Connect a Monitor to Your NVR


Having set up your NVR with DSM and Surveillance Station installed, you can leverage the local display feature of the network video recording system. Please prepare an HDMI monitor and an HDMI cable, and do the following:

- 1 Connect one end of the HDMI cable to the HDMI port of the NVR, and connect the other end to a monitor. You need at least a mouse connected to a USB 2.0 port of the NVR to conduct basic operations. You can plug in a keyboard to the other USB 2.0 port to facilitate your operations.

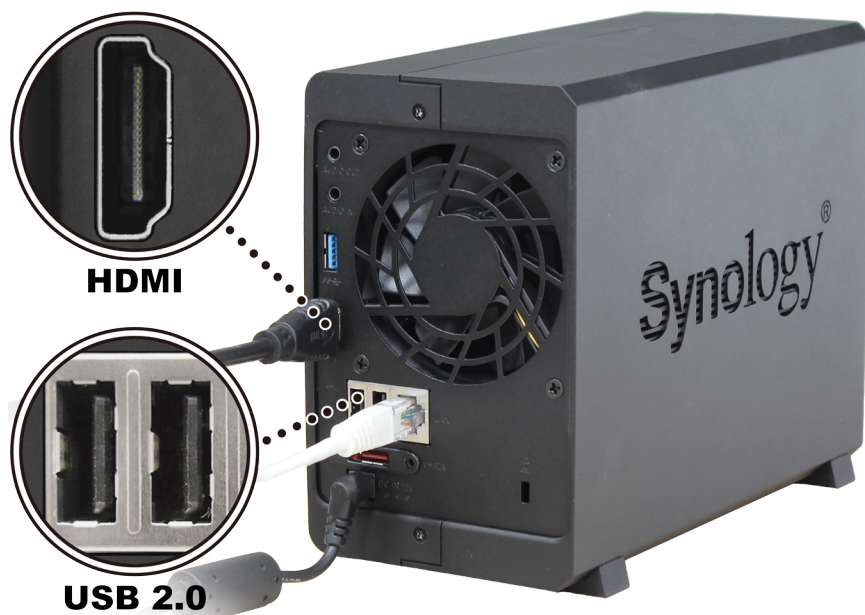

Note: We recommend that the USB 3.0 port is reserved for connection to an external storage device.

- 2 Power on your monitor, and login to Surveillance Station Local Display.

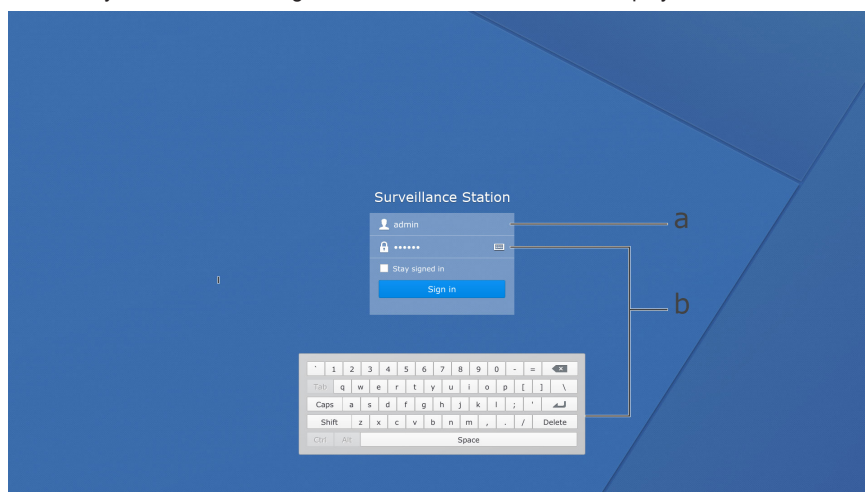

- a Choose to login as **Administrator** or **Spectator**, enter the password, and click **Sign in**.
- b To enter the password, if no keyboard is connected to your NVR, you can click the keyboard icon to open the on-screen keyboard.

Note: Default password of Local Display **Administrator** and **Spectator** is kept empty. To change the passwords, please refer to the "Options" section below. You can also login to your NVR from a PC browser and configure the settings in Surveillance Station **Main Menu > Local Display**.

Navigate Local Display Desktop

Surveillance Station Local Display delivers a consistent user experience. You can easily switch between the operations in Local Display on a monitor directly connected to your NVR, and in Surveillance Station and DSM on your PC.




No.	Name	Function
1	Main Menu	<p>This menu includes the following applications: Live View, Timeline, Recording, IP Camera, E-Map, Snapshot, License, Log, and System.</p> <p>Note:</p> <ol style="list-style-type: none"> 1. For System, please refer to the "System" section below for details. 2. For the other applications, please refer to the corresponding articles in Surveillance Station Help. 3. Certain surveillance features are unavailable in the Local Display environment. Please refer to the "Function Limitations" section below for details.
2	Resource Monitor	Monitor basic information of your NVR's performances, including CPU and RAM usage, and data transfer speeds. You can determine to show/hide the resource monitor in Local Display Options > Others .
3	USB Device	View and/or eject the USB external devices plugged in to your NVR.
4	Notifications	View and/or clear notifications, such as system messages, warnings, etc.
5	Options	<p>This menu includes the following:</p> <ol style="list-style-type: none"> 1. Options: Configure the settings related to Local Display login. Please refer to the "Options" section below. 2. Reboot: Reboot your NVR. 3. Shutdown: Shutdown your NVR. 4. Logout: Sign out from Local Display.

Options

The **Options** window contains the following three tabs:

- 1 **Account:** Change the password and display language for the currently logged in Local Display user.

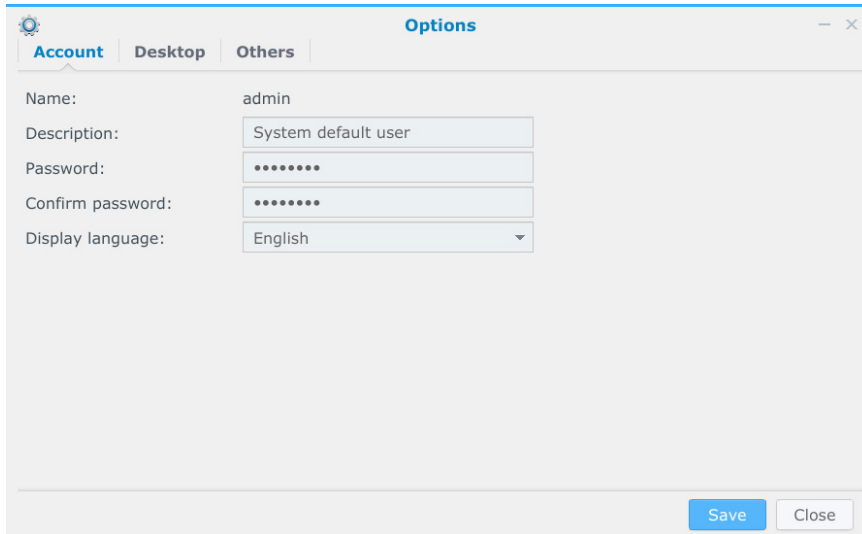


The screenshot shows the 'Options' window with the 'Account' tab selected. The window title is 'Options'. The tabs are 'Account', 'Desktop', and 'Others'. The 'Account' tab is active. The settings are as follows:

Name:	admin
Description:	System default user
Password:	••••••
Confirm password:	••••••
Display language:	English

At the bottom right, there are 'Save' and 'Close' buttons.

- 2 **Desktop:** Customize the text/background color and wallpaper for your desktop.

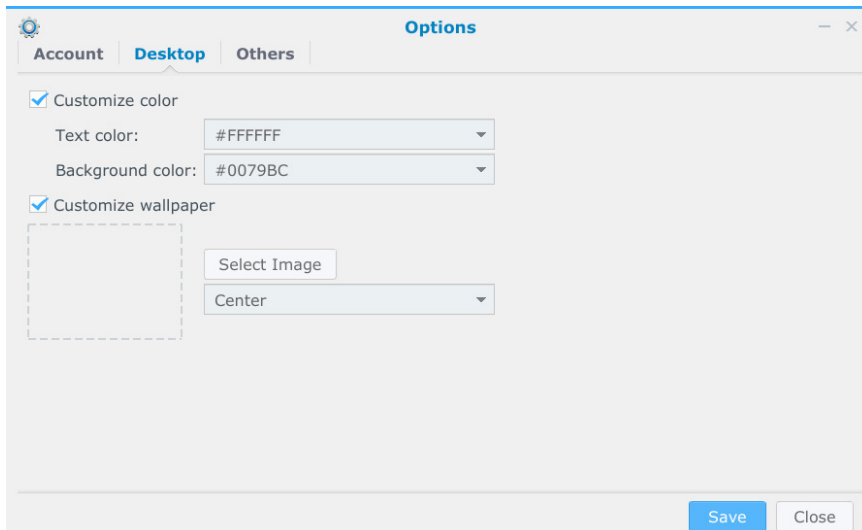


The screenshot shows the 'Options' window with the 'Desktop' tab selected. The window title is 'Options'. The tabs are 'Account', 'Desktop', and 'Others'. The 'Desktop' tab is active. The settings are as follows:

<input checked="" type="checkbox"/> Customize color	
Text color:	#FFFFFF
Background color:	#0079BC
<input checked="" type="checkbox"/> Customize wallpaper	
Select Image	
Center	

At the bottom right, there are 'Save' and 'Close' buttons.

- 3 **Others:** You can determine to show/hide resource monitor, as well as other settings related to Local Display login. For more information, please refer to Surveillance Station **Help** > **Surveillance Station Desktop** > **Options** > **Others**.

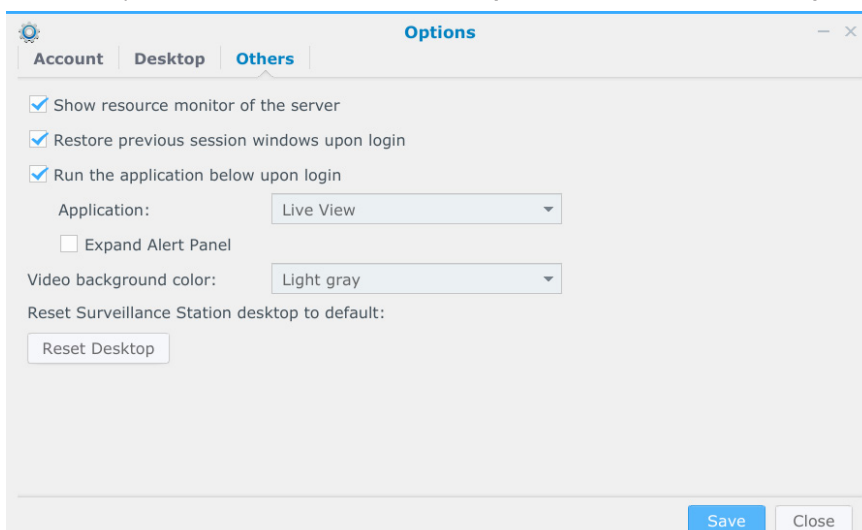

The screenshot shows the 'Options' window with the 'Others' tab selected. The window title is 'Options'. The tabs are 'Account', 'Desktop', and 'Others'. The 'Others' tab is active. The settings are as follows:

<input checked="" type="checkbox"/> Show resource monitor of the server	
<input checked="" type="checkbox"/> Restore previous session windows upon login	
<input checked="" type="checkbox"/> Run the application below upon login	
Application:	Live View
<input type="checkbox"/> Expand Alert Panel	
Video background color:	Light gray
Reset Surveillance Station desktop to default:	
Reset Desktop	

At the bottom right, there are 'Save' and 'Close' buttons.

Note: If Local Display is set to run **Live View** or **Live View - Full Screen** upon login, you can tick/untick the checkbox to determine whether to expand Alert Panel automatically.

Function Limitations

In order to optimize the overall performances of Local Display on your NVR, certain functions can only be operated in the Surveillance Station package via a PC. For detailed information, please see the following:

Apps	Function Limitations
Live View	Live View Analytics is not supported in Local Display.
Smart Search	Smart Search features are not supported in Local Display
IP Camera	Live View Analytics, Fisheye Dewarping are not supported in Local Display.

System

In **System**, you can view the the information of your NVR and configure settings for Surveillance Station.

Information

In the **Information** tab, you can view the basic information of your NVR and the following items:

- 1 Version information of **DSM**, **Surveillance Station**, **Local Display**, and **Device Pack**
- 2 Time server and time zone
- 3 External devices

Storage

In the **Storage** tab, you can view the information of the volumes and drives in your NVR, as well as configure the **Cache Management** setting. You can also configure the Cache Management setting in DSM **Main Menu > Storage Manager > HDD/SSD > General**. For more information, please refer to DSM **Help > Storage Manager > HDD/SSD**.

Network

In the **Network** tab, you can configure the network settings of your NVR. You can also configure the settings in DSM **Main Menu > Control Panel > Network > Network Interface**. For more information, please refer to DSM **Help > Control Panel > Connectivity > Network**.

Time

In the **Time** tab, you can view the current time, and configure time settings. You can also configure the settings in DSM **Main Menu > Control Panel > Regional Options > Time**. For more information, please refer to DSM **Help > Control Panel > System > Regional Options > Time**.

Firmware Upgrade

In the **Firmware Upgrade** tab, you can monitor the version status of your Surveillance Station package, and determine to enable/disable auto-update of Surveillance Station.

Note:

1. If you enable **auto-update**, Surveillance Station will be automatically updated to the latest version. During the installation of the new version, Local Display will be temporarily out of service.
2. If you disable **auto-update**, when a new version of Surveillance Station is available, you can click **Update Now** to manually install the latest version.

Specifications

Item	NVR216
Internal Drive	3.5" / 2.5" SATA x 2
Maximum Raw Capacity	<ul style="list-style-type: none"> • 20 TB (2 x 10 TB HDD) • 70 TB with DX513 (expansion unit)
External Device Port	<ul style="list-style-type: none"> • USB 3.0 x 1 • USB 2.0 x 2 • eSATA x 1 • HDMI Output x 1 • Audio Output x 1 • Audio Input x 1
Supported Video Output Resolution	1920 x 1080 (1080p), 60 Hz
LAN Port	1GbE (RJ-45) x 1
Size (H x W x D) (mm)	165 x 100 x 225.5
Weight (kg)	0.9
Supported Client	<ul style="list-style-type: none"> • Windows 7 onward • Mac OS X 10.7 onward • Ubuntu 12 onward
Supported Browser	<ul style="list-style-type: none"> • On Windows: Firefox, IE 11 onwards (exclude Microsoft Edge) • On OS X: Safari 7.0 onwards
File System	<ul style="list-style-type: none"> • Internal: ext4 • External: ext4, ext3, FAT, NTFS, HFS+ (read only)
Supported RAID Type	<ul style="list-style-type: none"> • Basic • JBOD • RAID 0 • RAID 1 • RAID 5 • RAID 6 (with expansion unit) • Synology Hybrid RAID (Up to 2-Disk Fault Tolerance with expansion unit)
Agency Certification	• FCC Class B • CE Class B • BSMI Class B
Scheduled Power On/Off	Yes
Wake on LAN	Yes
Language Localization	<ul style="list-style-type: none"> • English • Deutsch • Français • Italiano • Español • Dansk • Norsk • Svensk • Nederlands • Русский • Polski • Magyar • Português do Brasil • Português Europeu • Türkçe • Český • 日本語 • 한국어 • 繁體中文 • 简体中文
Environment Requirement	<ul style="list-style-type: none"> • Line voltage: 100V to 240V AC • Frequency: 50/60Hz • Operating Temperature: 40 to 113°F (5 to 45°C) • Storage Temperature: -5 to 140°F (-20 to 60°C) • Relative Humidity: 5% to 95% RH

Note: Model specifications are subject to change without notice. Please refer to www.synology.com for the latest information.

LED Indicator Table

LED Indicator	Color	Status	Description
Power	Blue	Static	Powered on
		Blinking	Booting up / Shutting down
	Off	Powered off	
STATUS	Green	Static	Volume normal
	Orange	Blinking	Volume degraded / Volume crashed
			Volume not created
			DSM not installed
Off	HDD hibernation		
LAN	Green	Static	Network connected
		Blinking	Network active
	Off	No network	
DISK	Green	Static	Drive ready and idle
		Blinking	Accessing drive
	Orange	Static	Drive error / Port disabled ¹
	Off	No internal drive	

Note: Model specifications are subject to change without notice. Please refer to www.synology.com for the latest information.

¹ Please try to restart your NVR or re-insert the drive(s), and then run the HDD/SSD manufacturer's diagnostic tool to check the health status of the drive(s). If you can log into DSM, please run the built-in S.M.A.R.T. test to scan the drive(s). If the problem remains unresolved, please contact Synology Technical Support for help.

SYNOLOGY, INC.
END USER LICENSE AGREEMENT

IMPORTANT—READ CAREFULLY: THIS END USER LICENSE AGREEMENT ("EULA") IS A LEGAL AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR A LEGAL ENTITY) AND SYNOLOGY, INC. ("SYNOLOGY") FOR THE SYNOLOGY SOFTWARE INSTALLED ONTO THE SYNOLOGY PRODUCT PURCHASED BY YOU (THE "PRODUCT"), OR LEGALLY DOWNLOADED FROM WWW.SYNOLOGY.COM, OR ANY OTHER CHANNEL PROVIDED BY SYNOLOGY ("SOFTWARE").

YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA BY USING THE PRODUCTS CONTAINING THE SOFTWARE, INSTALLING THE SOFTWARE ONTO THE PRODUCTS OR DEVICE CONNECTED TO THE PRODUCTS. IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, DO NOT USE THE PRODUCTS CONTAINING THE SOFTWARE OR DOWNLOAD THE SOFTWARE FROM WWW.SYNOLOGY.COM, OR ANY OTHER CHANNEL PROVIDED BY SYNOLOGY. INSTEAD, YOU MAY RETURN THE PRODUCT TO THE RESELLER WHERE YOU PURCHASED IT FOR A REFUND IN ACCORDANCE WITH THE RESELLER'S APPLICABLE RETURN POLICY.

Section 1. Limited Software License. Subject to the terms and conditions of this EULA, Synology grants you a limited, non-exclusive, non-transferable, personal license to install, run and use one copy of the Software loaded on the Product or on your device connected to the Product solely relating to your authorized use of the Product.

Section 2. Documentation. You may make and use a reasonable number of copies of any documentation provided with the Software; provided that such copies will only be used for internal business purposes and are not to be republished or redistributed (either in hard copy or electronic form) to any third party.

Section 3. Backup. You may make a reasonable number of copies of the Software for backup and archival purposes only.

Section 4. Updates. Any software provided to you by Synology or made available on the Synology website at www.synology.com ("Website") or any other channel provided by Synology that updates or supplements the original Software is governed by this EULA unless separate license terms are provided with such updates or supplements, in which case, such separate terms will govern.

Section 5. License Limitations. The license set forth in Sections 1, 2 and 3 applies only to the extent that you have ordered and paid for the Product and states the entirety of your rights with respect to the Software. Synology reserves all rights not expressly granted to you in this EULA. Without limiting the foregoing, you shall not authorize or permit any third party to: (a) use the Software for any purpose other than that in connection with the Product; (b) license, distribute, lease, rent, lend, transfer, assign or otherwise dispose of the Software; (c) reverse engineer, decompile, disassemble or attempt to discover the source code of or any trade secrets related to the Software, except and only to the extent that such conduct is expressly permitted by applicable law notwithstanding this limitation; (d) adapt, modify, alter, translate or create any derivative works of the Software; (e) remove, alter or obscure any copyright notice or other proprietary rights notice on the Software or Product; or (f) circumvent or attempt to circumvent any methods employed by Synology to control access to the components, features or functions of the Product or Software. Subject to the limitations specified in this Section 5, you are not prohibited from providing any services hosted by Synology Product to any third party for commercial purpose.

Section 6. Open Source. The Software may contain components licensed to Synology under the GNU General Public License ("GPL Components"), currently available at <http://www.gnu.org/licenses/gpl.html>. The terms of the GPL will control solely with respect to the GPL Components to the extent that this EULA conflicts with the requirements of the GPL with respect to your use of the GPL Components, and, in such event, you agree to be bound by the GPL with respect to your use of such components.

Section 7. Audit. Synology will have the right to audit your compliance with the terms of this EULA. You agree to grant

Synology a right to access to your facilities, equipment, books, records and documents and to otherwise reasonably cooperate with Synology in order to facilitate any such audit by Synology or its agent authorized by Synology.

Section 8. Ownership. The Software is a valuable property of Synology and its licensors, protected by copyright and other intellectual property laws and treaties. Synology or its licensors own all rights, titles and interests in and to the Software, including but not limited to copyright and any other intellectual property rights.

Section 9. Limited Warranty. Synology provides a limited warrant that the Software will substantially conform to Synology's published specifications for the Software, if any, or otherwise set forth on the Website, for a period required by your local law. Synology will use commercially reasonable efforts to, in Synology's sole discretion, either correct any such nonconformity in the Software or replace any Software that fails to comply with the foregoing warranty, provided that you give Synology written notice of such noncompliance within the warranty period. The foregoing warranty does not apply to any noncompliance resulting from any: (w) use, reproduction, distribution or disclosure not in accordance with this EULA; (x) any customization, modification or other alteration of the Software by anyone other than Synology; (y) combination of the Software with any product, services or other items provided by anyone other than Synology; or (z) your failure to comply with this EULA.

Section 10. Support. During the period specified in the Section 9, Synology will make available to you the support services. Following the expiration of the applicable period, support for Software may be available from Synology upon written request.

Section 11. Disclaimer of Warranties. EXCEPT AS EXPRESSLY SET FORTH ABOVE, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS. SYNOLOGY AND ITS SUPPLIERS HEREBY DISCLAIM ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR USE, TITLE AND NONINFRINGEMENT, WITH REGARD TO THE SOFTWARE. WITHOUT LIMITING THE FOREGOING, SYNOLOGY DOES NOT WARRANT THAT THE SOFTWARE WILL BE FREE OF BUGS, ERRORS, VIRUSES OR OTHER DEFECTS.

Section 12. Disclaimer of Certain Damages. IN NO EVENT WILL SYNOLOGY OR ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL OR SIMILAR DAMAGES OR LIABILITIES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO LOSS OF DATA, INFORMATION, REVENUE, PROFIT OR BUSINESS) ARISING OUT OF OR RELATING TO THE USE OF OR INABILITY TO USE THE SOFTWARE OR OTHERWISE UNDER OR IN CONNECTION WITH THIS EULA OR THE SOFTWARE, WHETHER BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT

LIABILITY OR OTHER THEORY EVEN IF SYNOLOGY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Section 13. Limitation of Liability. SYNOLOGY'S AND ITS SUPPLIERS' LIABILITY ARISING OUT OF OR RELATING TO THE USE OF OR INABILITY TO USE THE SOFTWARE OR OTHERWISE UNDER OR IN CONNECTION WITH THIS EULA OR THE SOFTWARE IS LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT REGARDLESS OF THE AMOUNT OF DAMAGES YOU MAY INCUR AND WHETHER BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHER THEORY. The foregoing disclaimer of warranties, disclaimer of certain damages and limitation of liability will apply to the maximum extent permitted by applicable law. The laws of some states/jurisdictions do not allow the exclusion of implied warranties or the exclusion or limitation of certain damages. To the extent that those laws apply to this EULA, the exclusions and limitations set forth above may not apply to you.

Section 14. Export Restrictions. You acknowledge that the Software is subject to U.S. export restrictions. You agree to comply with all applicable laws and regulations that apply to the Software, including without limitation the U.S. Export Administration Regulations.

Section 15. Termination. Without prejudice to any other rights, Synology may terminate this EULA if you do not abide by the terms and conditions contained herein. In such event, you must cease use of the Software and destroy all copies of the Software and all of its component parts.

Section 16. Assignment. You may not transfer or assign your rights under this EULA to any third party, except for that pre-installed in the Products. Any such transfer or assignment in violation of the foregoing restriction will be void.

Section 17. Applicable Law. Unless expressly prohibited by local law, this EULA is governed by and construed in accordance with the laws of the Republic of China (R.O.C. or Taiwan) without regard to any conflict of law principles to the contrary.

Section 18. Dispute Resolution. Any dispute, controversy or claim arising out of or relating to this EULA will be resolved exclusively and finally by arbitration conducted by three neutral arbitrators in accordance with the procedures of the R.O.C. Arbitration Law and related enforcement rules. In such cases, the arbitration will be limited solely to the dispute between you and Synology. The arbitration, or any portion of it, will not be consolidated with any other arbitration and will not be conducted on a class-wide or class action basis. The arbitration shall take place in Taipei, Taiwan, R.O.C., and the arbitration proceedings shall be conducted in English or, if both parties so agree, in Mandarin Chinese. The arbitration award shall be final and binding on the parties and may be enforced in any court having jurisdiction. You understand that, in the absence of this provision, you would have had a right to litigate any such dispute, controversy or claim in a court, including the right to litigate claims on a class-wide or class-action basis, and you expressly and knowingly waives those rights and agrees to resolve any disputes through binding arbitration in accordance with the provisions of this Section 18. Nothing in this Section shall be deemed to prohibit or restrict Synology from seeking injunctive relief or seeking such other rights and remedies as it may have at law or equity for any actual or threatened breach of any provision of this EULA relating to Synology's intellectual property rights.

Section 19. Attorneys' Fees. In any arbitration, mediation, or other legal action or proceeding to enforce rights or remedies under this EULA, the prevailing party will be entitled to recover, in addition to any other relief to which it may be entitled, costs and reasonable attorneys' fees.

Section 20. Severability. If any provision of this EULA is held by a court of competent jurisdiction to be invalid, illegal, or unenforceable, the remainder of this EULA will remain in full force and effect.

Section 21. Entire Agreement. This EULA sets forth the entire agreement of Synology and you with respect to the Software and the subject matter hereof and supersedes all prior and contemporaneous understandings and agreements whether written or oral. No amendment, modification or waiver of any of the provisions of this EULA will be valid unless set forth in a written instrument signed by the party to be bound thereby.

SYNOLOGY, INC.
LIMITED PRODUCT WARRANTY

THIS LIMITED WARRANTY ("WARRANTY") APPLIES TO THE PRODUCTS (AS DEFINED BELOW) OF SYNOLOGY, INC. AND ITS AFFILIATES, INCLUDING SYNOLOGY AMERICA CORP, (COLLECTIVELY, "SYNOLOGY"). YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS WARRANTY BY OPENING THE PACKAGE CONTAINING AND/OR USING THE PRODUCT. IF YOU DO NOT AGREE TO THE TERMS OF THIS WARRANTY, DO NOT USE THE PRODUCT. INSTEAD, YOU MAY RETURN THE PRODUCT TO THE RESELLER WHERE YOU PURCHASED IT FOR A REFUND IN ACCORDANCE WITH THE RESELLER'S APPLICABLE RETURN POLICY.

Section 1. Definitions. (a) "New Product", including: (1) "Category I Product" means Synology product models RS810+, RS810RP+, RX410, all FS-series models, all DS/RS NAS models with the XS+/XS suffix (except RS3413xs+) in or after 13-series, all DX/RX/RXD expansion units with 12 or more drive bays in or after 13-series, 10GbE NIC, DDR4-2133 and DDR3-1600 memory modules. (2) "Category II Product" means Synology product models RS3413xs+, RS3412xs, RS3412RPxs, RS3411xs, RS3411RPxs, RS2211+, RS2211RP+, RS411, RS409RP+, RS409+, RS409, RS408-RP, RS408, RS407, DS3612xs, DS3611xs, DS2411+, DS1511+, DS1010+, DS509+, DS508, EDS14, RX1211, RX1211RP, RX4, DX1211, DX510, DX5, NVR216, VS360HD, VS240HD, and all other memory modules not included in Category I. (3) "Category III Product" means Synology product models that apply with the following requirements: all DS NAS models without the XS+/XS suffix and with 5 and more drive bays in or after 12-series, all RS NAS models without the XS+/XS suffix in or after 12-series, and all DX/RX expansion units with 4 or 5 drive bays in or after 12-series. (4) "Category IV Product" means all other Synology product models purchased by Customer after March 1, 2008. (5) "Category V Product" means all other Synology product models purchased by Customer before February 29, 2008. (b) "Refurbished Product" means all Synology products which have been refurbished and sold directly by Synology through Online Store, not including those sold by an authorized Synology distributor or reseller. (c) "Customer" means the original person or entity purchasing the Product from Synology or an authorized Synology distributor or reseller. (d) "Online Store" means an online shop operated by Synology or Synology's affiliate. (e) "Product" means a New Product or a Refurbished Product and any hardware incorporated into the Product by Synology and any accompanying documentation. (f) "Software" means the Synology proprietary software that accompanies the Product when purchased by Customer, is downloaded by Customer at the Web Site, or is pre-installed on the Product by Synology, and includes any firmware, associated media, images, animations, video, audio, text and applets incorporated into the software or Product and any updates or upgrades to such software. (g) "Warranty Period" means the period commencing on the date the Product is purchased by Customer and ending (1) five years after such date for Category I Products; (2) three years after such date for Category II & III Products; or (3) two years after such date for Category IV Products; or (4) one year after such date for Category V Products; or (5) 90 days after such date for Refurbished Products, except for those sold as "as is" or with "no warranty" on Online Store. (h) "Web Site" means the Synology web site located at www.synology.com.

Section 2. Limited Warranty and Remedies

2.1 Limited Warranty. Subject to Section 2.6, Synology warrants to Customer that each Product (a) will be free of material defects in workmanship and (b) under normal use will perform substantially in accordance with Synology's published specifications for the Product during the Warranty Period. Synology warrants the Software as set forth in the accompanying end user license agreement provided with the Product, if any. Synology provides no warranty to Refurbished Product sold as "as is" or with "no warranty" on Online Store.

2.2 Exclusive Remedy. If Customer gives notice of noncompliance with any of the warranties set forth in Section 2.1 within the applicable Warranty Period in the manner set forth below, then, upon verification of the noncompliance by Synology, Synology will, at Synology's option: (a) use commercially reasonable efforts to repair the Product, or (b) replace the noncomplying Product or part thereof upon return of the complete Product in accordance with Section 2.3. The foregoing sets forth Synology's entire liability and Customer's sole and exclusive remedy for any breach of warranty under Section 2.1 or any other defect or deficiency in the Product. Customer will reasonably assist Synology to diagnose and validate any nonconformity with the Product. The warranty set forth in Section 2.1 does not include: (1) any warranty relating to the Software; (2) physical installation or removal of the Product from Customer's site; (3) visits to Customer's site; (4) labor necessary to effect repairs or replace defective parts other than during Synology's or its contracted service providers' normal local business hours, exclusive of weekends and service providers' holidays; (5) any work with any third party equipment or software; (6) any warranty of the hard disk if installed by Customer or any other third party; or (7) any warranty of compatibility with the hard disk.

2.3 Return. Any Product returned by Customer under Section 2.2 must be assigned a Return Merchandise Authorization ("RMA") number by Synology before shipment and must be returned in accordance with Synology's then current RMA procedures. Customer may contact any authorized Synology distributor or reseller or Synology Support to obtain assistance in obtaining an RMA, and must provide proof of purchase and product serial number when asking for such assistance. For warranty claims, Customer must return the complete Product to Synology in accordance with this Section 2.3 to be eligible for coverage under this Warranty. Any Product returned without an RMA number, or any Product that has been disassembled (except under the direction of Synology) will be refused and returned to Customer at Customer's expense. Any Product that has been assigned a RMA number must be returned in the same condition as it was received from Synology to the address designated by Synology, freight pre-paid, in packaging sufficient to protect the contents thereof and with the RMA number prominently displayed on the outside of the box. Customer is responsible for insurance and risk of loss with respect to returned items until they are properly received by Synology. A Product issued a RMA number must be returned within fifteen (15) days after issuance of the applicable RMA number.

2.4 Replacement by Synology. If Synology elects to replace any Product under this Warranty set forth in Section 2.1, then Synology will ship a replacement Product at Synology's expense via the shipping method selected by Synology after receipt of the nonconforming Product returned in accordance with Section 2.3 and validation by Synology that the Product does not conform to the warranty. In some countries, Synology may at its own discretion apply the Synology Replacement Service to certain Products, through which Synology will ship a replacement Product to Customer before its receipt of the nonconforming Product returned by Customer ("Synology Replacement Service").

2.5 Support. During the Warranty Period, Synology will make available to Customer the support services. Following

the expiration of the applicable Warranty Period, support for Products may be available from Synology upon written request.

2.6 Exclusions. The foregoing warranties and warranty obligations do not apply to any Product that (a) has been installed or used in a manner not specified or described in the Product specifications; (b) has been repaired, modified or altered by anyone other than Synology or its agent or designee; (c) has been in any way misused, abused, or damaged; (d) has been used with items not provided by Synology other than the hardware or software for which the Product is designed; or (e) otherwise fails to conform to the Product specifications and such failure is attributable to causes not within or under Synology's control. Further, the foregoing warranties will be void if (1) Customer disassembles the Product except as authorized by Synology; (2) Customer fails to implement any correction, modification, enhancement, improvement or other update made available to Customer by Synology; or (3) Customer implements, installs or uses any correction, modification, enhancement, improvement or other update made available by any third party. The warranty set forth in Section 2.1 will terminate upon Customer's sale or transfer of the Product to a third party.

2.7 Disclaimer of Warranties. THE WARRANTIES, OBLIGATIONS, AND LIABILITIES OF SYNOLOGY AND THE REMEDIES OF CUSTOMER SET FORTH IN THIS WARRANTY ARE EXCLUSIVE AND IN SUBSTITUTION FOR, AND CUSTOMER HEREBY WAIVES, RELEASES AND DISCLAIMS, ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES OF SYNOLOGY AND ALL OTHER RIGHTS, CLAIMS AND REMEDIES OF CUSTOMER AGAINST SYNOLOGY, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, WITH RESPECT TO THE PRODUCT, ACCOMPANYING DOCUMENTATION OR SOFTWARE AND ANY OTHER GOODS OR SERVICES DELIVERED UNDER THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO ANY: (A) IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE; (B) IMPLIED WARRANTY ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING, OR USAGE OF TRADE; (C) CLAIM OF INFRINGEMENT OR MISAPPROPRIATION; OR (D) CLAIM IN TORT (WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, PRODUCT LIABILITY OR OTHER THEORY). SYNOLOGY MAKES NO GUARANTEE AND SPECIFICALLY DISCLAIMS ANY WARRANTY THAT THE DATA OR INFORMATION STORED ON ANY SYNOLOGY PRODUCT WILL BE SECURE AND WITHOUT RISK OF DATA LOSS. SYNOLOGY RECOMMENDS THAT CUSTOMER TAKES APPROPRIATE MEASURES TO BACK UP THE DATA STORED ON THE PRODUCT. SOME STATES/JURISDICTIONS DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO CUSTOMER.

Section 3. Limitations of Liability

3.1 Force Majeure. Synology will not be liable for, or be considered to be in breach of or default under this Warranty on account of, any delay or failure to perform as required by this Warranty as a result of any cause or condition beyond its reasonable control (including, without limitation, any act or failure to act by Customer).

3.2 Disclaimer of Certain Damages. IN NO EVENT WILL SYNOLOGY OR ITS SUPPLIERS BE LIABLE FOR THE COST OF COVER OR FOR ANY INCIDENTAL, INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL OR SIMILAR DAMAGES OR LIABILITIES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO LOSS OF DATA, INFORMATION, REVENUE, PROFIT OR BUSINESS) ARISING OUT OF OR RELATING TO THE USE OR INABILITY TO USE THE PRODUCT, ANY

ACCOMPANYING DOCUMENTATION OR SOFTWARE AND ANY OTHER GOODS OR SERVICES PROVIDED UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHER THEORY EVEN IF SYNOLOGY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

3.3 Limitation of Liability. SYNOLOGY'S AND ITS SUPPLIERS' LIABILITY ARISING OUT OF OR RELATING TO THE USE OR INABILITY TO USE THE PRODUCT, ANY ACCOMPANYING DOCUMENTATION OR SOFTWARE AND ANY OTHER GOODS OR SERVICES PROVIDED UNDER THIS WARRANTY IS LIMITED TO THE AMOUNT ACTUALLY PAID BY CUSTOMER FOR THE PRODUCT REGARDLESS OF THE AMOUNT OF DAMAGES CUSTOMER MAY INCUR AND WHETHER BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHER THEORY. The foregoing disclaimer of certain damages and limitation of liability will apply to the maximum extent permitted by applicable law. The laws of some states/jurisdictions do not allow exclusion or limitation of certain damages. To the extent that those laws apply to the Product, the exclusions and limitations set forth above may not apply to Customer.

Section 4. Miscellaneous

4.1 Proprietary Rights. The Product and any accompanying Software and documentation provided with the Product include proprietary and intellectual property rights of Synology and its third party suppliers and licensors. Synology retains and reserves all right, title, and interest in the intellectual property rights of the Product, and no title to or ownership of any intellectual property rights in or to the Product, any accompanying Software or documentation and any other goods provided under this Warranty is transferred to Customer under this Warranty. Customer will (a) comply with the terms and conditions of the Synology end user license agreement accompanying any Software furnished by Synology or an authorized Synology distributor or reseller; and (b) not attempt to reverse engineer any Product or component thereof or accompanying Software or otherwise misappropriate, circumvent or violate any of Synology's intellectual property rights.

4.2 Assignment. Customer will not assign any of its rights under this Warranty directly, by operation of law or otherwise, without the prior written consent of Synology.

4.3 No Additional Terms. Except as expressly permitted by this Warranty, neither party will be bound by, and each party specifically objects to, any term, condition or other provision that conflicts with the provisions of this Warranty that is made by the other party in any purchase order, receipt, acceptance, confirmation, correspondence or otherwise, unless each party specifically agrees to such provision in writing. Further, if this Warranty conflicts with any terms or conditions of any other agreement entered into by the parties with respect to the Product, this Warranty will prevail unless the other agreement specifically references the sections of this Warranty that it supersedes.

4.4 Applicable Law. Unless expressly prohibited by local law, this Warranty is governed by the laws of the State of Washington, U.S.A. without regard to any conflict of law principles to the contrary. The 1980 U.N. Convention on Contracts for the International Sale of Goods or any successor thereto does not apply.

4.5 Dispute Resolution. Any dispute, controversy or claim arising out of or relating to this Warranty, the Product or services provided by Synology with respect to the Product or the relationship between Customers residing within the United States and Synology will be resolved exclusively and finally by arbitration under the current commercial rules of the American Arbitration Association, except as otherwise provided below. The arbitration will be conducted before a

single arbitrator, and will be limited solely to the dispute between Customer and Synology. The arbitration, or any portion of it, will not be consolidated with any other arbitration and will not be conducted on a class-wide or class action basis. The arbitration shall be held in King County, Washington, U.S.A. by submission of documents, by telephone, online or in person as determined by the arbitrator at the request of the parties. The prevailing party in any arbitration or legal action occurring within the United States or otherwise shall receive all costs and reasonable attorneys' fees, including any arbitration fee paid by the prevailing party. Any decision rendered in such arbitration proceedings will be final and binding on the parties, and judgment may be entered thereon in any court of competent jurisdiction. Customer understands that, in the absence of this provision, Customer would have had a right to litigate any such dispute, controversy or claim in a court, including the right to litigate claims on a class-wide or class-action basis, and Customer expressly and knowingly waives those rights and agrees to resolve any disputes through binding arbitration in accordance with the provisions of this Section 4.5. For Customers not residing within the United States, any dispute, controversy or claim described in this section shall be finally resolved by arbitration conducted by three neutral arbitrators in accordance with the procedures of the R.O.C. Arbitration Law and related enforcement rules. The arbitration shall take place in Taipei, Taiwan, R.O.C., and the arbitration proceedings shall be conducted in English or, if both parties so agree, in Mandarin Chinese.

The arbitration award shall be final and binding on the parties and may be enforced in any court having jurisdiction. Nothing in this Section shall be deemed to prohibit or restrict Synology from seeking injunctive relief or seeking such other rights and remedies as it may have at law or equity for any actual or threatened breach of any provision of this Warranty relating to Synology's intellectual property rights.

4.6 Attorneys' Fees. In any arbitration, mediation, or other legal action or proceeding to enforce rights or remedies under this Warranty, the prevailing party will be entitled to recover, in addition to any other relief to which it may be entitled, costs and reasonable attorneys' fees.

4.7 Export Restrictions. You acknowledge that the Product may be subject to U.S. export restrictions. You will comply with all applicable laws and regulations that apply to the Product, including without limitation the U.S. Export Administration Regulations.

4.8 Severability. If any provision of this Warranty is held by a court of competent jurisdiction to be invalid, illegal, or unenforceable, the remainder of this Warranty will remain in full force and effect.

4.9 Entire Agreement. This Warranty constitutes the entire agreement, and supersedes any and all prior agreements, between Synology and Customer related to the subject matter hereof. No amendment, modification or waiver of any of the provisions of this Warranty will be valid unless set forth in a written instrument signed by the party to be bound thereby.