

SERVICE MANUAL

P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)

notebook



Notebook Computer

P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
November 2015

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.



About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
 - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 9.23A (**180** Watts) minimum AC/DC Adapter.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.

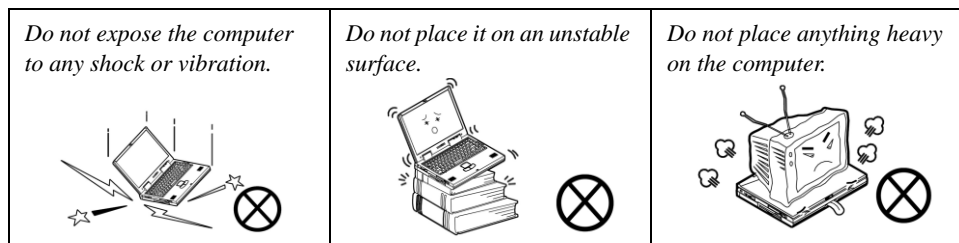


2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

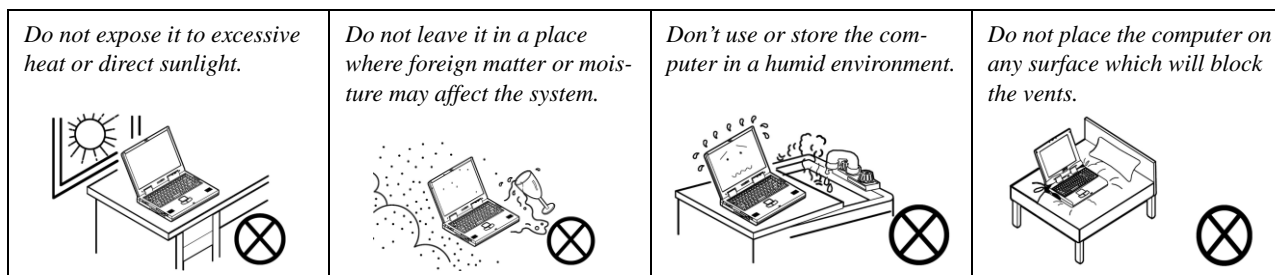

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

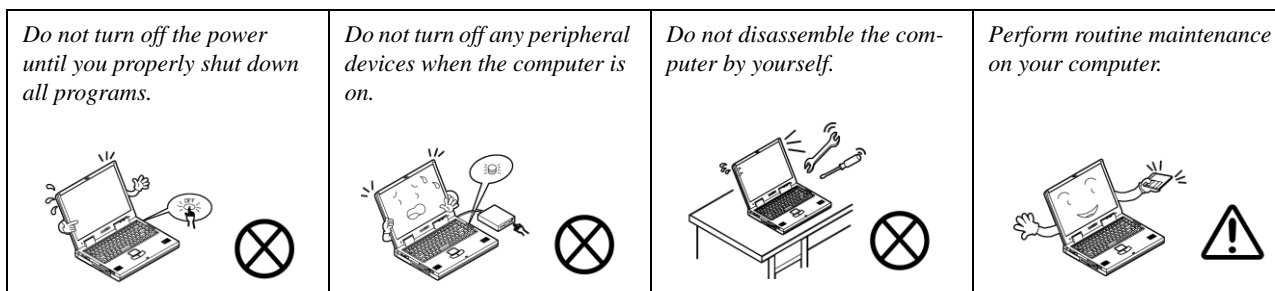


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

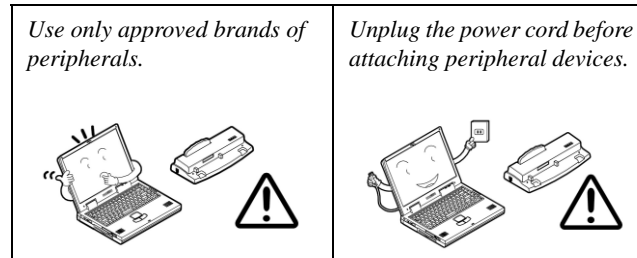

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

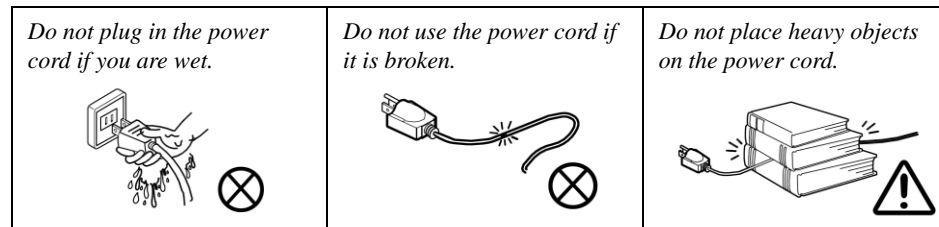

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 135 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

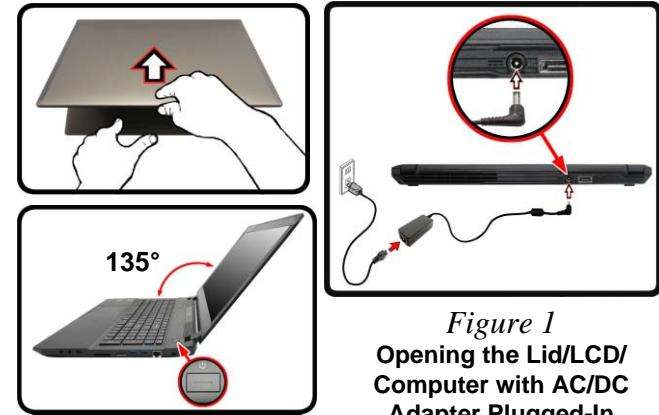



Figure 1
**Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In**


Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

Click the icon  in the **Start Screen** and choose **Shut down** from the menu.



Or

Right-click the **Start button**  at the bottom of the **Start Screen** or the **Desktop** and choose **Shut down or sign out** > **Shut down** from the context menu.

Contents

Introduction	1-1	Main Board	A-5
Overview	1-1	HDD	A-6
Specifications	1-2	LCD	A-7
External Locator - Top View with LCD Panel Open	1-4	LCD (Sharp)	A-8
External Locator - Front & Right Side Views	1-5	Schematic Diagrams.....	B-1
External Locator - Left Side & Rear View	1-6	System Block Diagram	B-2
External Locator - Bottom View	1-7	Processor 1/7	B-3
Mainboard Overview - Top (Key Parts)	1-8	Processor 2/7	B-4
Mainboard Overview - Bottom (Key Parts)	1-9	Processor 3/7	B-5
Mainboard Overview - Top (Connectors)	1-10	Processor 4/7	B-6
Mainboard Overview - Bottom (Connectors)	1-11	Processor 5/7	B-7
Disassembly	2-1	Processor 6/7	B-8
Overview	2-1	Processor 7/7	B-9
Maintenance Tools	2-2	DDR4 CHA SO-DIMM_0	B-10
Connections	2-2	DDR4 CHA SO-DIMM_1	B-11
Maintenance Precautions	2-3	DDR4 CHB SO-DIMM_0	B-12
Disassembly Steps	2-4	DDR4 CHB SO-DIMM_1	B-13
Removing the Keyboard	2-5	Panel, Inverter	B-14
Removing the Battery	2-6	Redriver	B-15
Removing the Hard Disk Drive	2-8	Mini DP Port E	B-16
Removing the System Memory (RAM)	2-10	Mini DP Port F	B-17
Removing the M.2 SSD Module	2-13	HDMI Connector	B-18
Removing the Wireless LAN Module	2-14	VGA PCI Express	B-19
Wireless LAN, Combo, 3G & LTE Module Cables	2-15	VGA Frame Buffer Partition	B-20
Removing and Installing the 3G/SATA Module	2-16	Frame Buffer Partition A	B-21
Part Lists	A-1	Frame Buffer Partition B	B-22
Part List Illustration Location	A-2	Frame Buffer Partition A_B	B-23
Top	A-3	GPU Frame Buffer Partition	B-24
Bottom	A-4	Frame Buffer Partition C	B-25
		Frame Buffer Partition D	B-26

Preface


Frame Buffer Partition C_D	B-27	PEX_VDD, 3V3_AON, 3V3_RUN	B-59
GPU Decoupling	B-28	NVVDD Phase 1 & 2	B-60
DACA Interface & XTAL	B-29	FBVDDQ	B-61
IFP I/O Interface	B-30	VCC_Core & VCCSA	B-62
Misc - GPIO, I2C and ROM	B-31	VCore & VCCSA Output Stage	B-63
GPU NVVDD, FBVDDQ, and GND	B-32	VCCGT	B-64
PCH 1/9	B-33	VCCGT Output Stage	B-65
PCH 2/9	B-34	P650RE Audio Board A	B-66
PCH 3/9	B-35	P650RE Power Board	B-67
PCH 4/9	B-36	P650RE HDD Board	B-68
PCH 5/9	B-37	P650RE LED Board	B-69
PCH 6/9	B-38	Finger Sensor Board	B-70
PCH 7/9	B-39	P650RE Click Board	B-71
PCH 8/9	B-40	P650RE USB Board 1/3	B-72
PCH 9/9	B-41	P650RE USB Board 2/3	B-73
USB3.0	B-42	P650RE USB Board 3/3	B-74
USB Charger	B-43	P670RE USB Board 1/3	B-75
M.2 3G + M.2 SATA	B-44	P670RE USB Board 2/3	B-76
M.2 WLAN+BT, PCIE4X SSD	B-45	P670RE USB Board 3/3	B-77
Realtek ALC892	B-46	P670RE LED Board	B-78
TPA2008D2	B-47	P655RE Power Board	B-79
Subwoofer	B-48	P655RE LED Board	B-80
KBC-ITE IT8587	B-49	Updating the FLASH ROM BIOS..... C-1	
TPM, CCD, TP	B-50	Download the BIOS	C-1
Fan, LID, KB, LED	B-51	Unzip the downloaded files to a bootable CD/DVD or	
Connector	B-52	USB Flash drive	C-1
DDR 1.2V / 0.6VS	B-53	Set the computer to boot from the external drive	C-1
VDD3, VDD5	B-54	Use the flash tools to update the BIOS	C-2
5V, 5VS, 3.3V, 3.3VS, 3.3VA	B-55	Restart the computer (booting from the HDD)	C-2
Power 1.0V, VCCIO	B-56		
AC_In, Charger	B-57		
1.0DX_VCCSTG/VCCSFR_OC/2.5V	B-58		

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the *P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)* series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 8.1*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The *P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)* series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications

Latest Specification Information

The specifications listed in this section are correct at the time of going to press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for details.

G-SYNC Support

NVIDIA® G-SYNC™ Technology is supported by some LCD panels and GTX 970M/980M series video adapters only (contact your distributor or supplier for details).

CPU Speed & Computer in DC Mode

Note that when the computer is in DC mode (powered by the battery only) the CPU may not run at full speed. This is a design feature implemented in order to protect the battery.

SO-DIMM Memory Types

All SO-DIMM memory modules installed in the system should be identical (the same size and brand) in order to prevent unexpected system behavior.

Do not mix SO-DIMM memory module sizes and brands otherwise unexpected system problems may occur.

Processor Options

i7-6820HK (2.70GHz)

8MB Smart Cache, 14nm, DDR4-2133MHz, TDP 45W
Support Intel® XTU over-clocking technology on i7-6820HK

i7-6700HQ (2.60GHz)

6MB Smart Cache, 14nm, DDR4-2133MHz,
TDP 45W

Core Logic

Intel® HM170 Express Chipset

LCD Options

15.6" (39.62cm), 16:9, QFHD (3840x2160)/FHD (1920x1080)

BIOS

AMI BIOS (64Mb SPI Flash-ROM)

Memory

Four 260 Pin SO-DIMM Sockets Supporting **DDR4 2133MHz** Memory

Memory Expandable from **4GB (minimum)** up to **64GB (maximum)**

Security

Security (Kensington® Type) Lock Slot
BIOS Password
Intel PTT for Systems Without TPM Hardware
(**Factory Option**) TPM 2.0
(**Factory Option**) Fingerprint Reader Module

Video Adapter Options

Microsoft Hybrid Graphics Mode or Discrete Graphics Mode

Supports up to 4 Active Displays

Intel Integrated GPU

Intel® HD Graphics 530

Dynamic Frequency
Intel Dynamic Video Memory Technology
Microsoft DirectX®12 Compatible

NVIDIA® Discrete GPU

NVIDIA® GeForce GTX 970M

(**Factory Option**) 6GB GDDR5 Video RAM
Or
(**Factory Option**) 3GB GDDR5 Video RAM
Microsoft DirectX®12 Compatible

Audio

High Definition Audio Compliant Interface
S/PDIF Digital Output
Two Speakers
Sound Blaster X-Fi MB5
ANSP™ 3D sound technology on headphone output
Built-In Array Microphone

Note: External 5.1CH Audio Output Supported by Headphone, Microphone and S/PDIF Out Jacks

Storage

(**Factory Option**) Two **SATA** M.2 2280 SSDs supporting RAID level 0/1

Or

(**Factory Option**) One **PCIe Gen3 x4** M.2 2280 SSD

Two changeable 2.5" (6cm) **7.0mm (h) SATA** (Serial) Hard Disk Drives/Solid State Drives (SSD) supporting RAID level 0/1

Or

One changeable 2.5" (6cm) **9.5mm (h) SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)

Or

One changeable 2.5" (6cm) **7.0mm/9.5mm (h) SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)

Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

Keyboard

Full-size Winkey **Illuminated White-LED** Keyboard (with numeric keypad)

Communication

Built-In Gigabit Ethernet LAN

2.0M FHD PC Camera Module

(**Factory Option - Model A Only**) M.2 **3G/4G** Module

WLAN/ Bluetooth M.2 Modules:

(**Factory Option**) Intel® Wireless-AC 8260 Wireless LAN (**802.11ac**) + Bluetooth **4.1**

(**Factory Option**) Intel® Wireless-N 7265 Wireless LAN (**802.11b/g/n**) + Bluetooth **4.0**

(**Factory Option**) Intel® Wireless-AC 3165 Wireless LAN (**802.11ac**) + Bluetooth **4.0**

(**Factory Option**) Qualcomm® Atheros Killer™ Wireless-AC 1535 Wireless LAN (**802.11ac**) + Bluetooth **4.1**

(**Factory Option**) Third-Party Wireless LAN **802.11b/g/n** + Bluetooth **4.0**

Interface

Four USB 3.0 Ports (Including one AC/DC Powered USB port)

One HDMI-Out Port

Two Mini DisplayPorts (1.2)

One S/PDIF Out Jack

One Headphone/Speaker-Out Jack

One Microphone-In Jack

One RJ-45 LAN Jack

One DC-In Jack

M.2 Slots

Slot 1 for **Combo WLAN and Bluetooth** Module

Slot 2 for **SATA** or **PCIe Gen3 x4 SSD**

Slot 3 for **SATA SSD**

Or

(**Factory Option**) Slot 3 for **3G/4G** Module

Note: (Factory Option) LTE-1/LTE-2 Antenna

**M.2 SSD Limitation**

When slot 3 has an M.2 SATA SSD installed, then slot 2 will not be available for M.2 PCIe SSDs.

Card Reader

Embedded Multi-In-1 Push-Push Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC/ SDXC

Environmental Spec**Temperature**

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Power

Embedded 4-Cell Polymer Battery Pack, 60WH

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19.5V, 9.23A (**180W**)

Dimensions & Weight

385mm (w) * 271mm (d) * 25mm (h)

2.6kg (Barebone with 60WH Battery)

Or

385mm (w) * 271mm (d) * 28.8mm (h)

2.6kg (Barebone with 60WH Battery)

Or

385mm (w) * 271mm (d) * 26.9mm (h)

2.7kg (Barebone with 60WH Battery)

Introduction

External Locator - Top View with LCD Panel Open

Figure 1
Top View

1. PC Camera
2. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated.*
3. Built-In Array Microphone
4. LCD
5. Speakers
6. Power Button
7. Keyboard
8. Touchpad & Buttons
9. Fingerprint Reader (Optional)



External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Indicator

FRONT VIEW



RIGHT SIDE VIEW

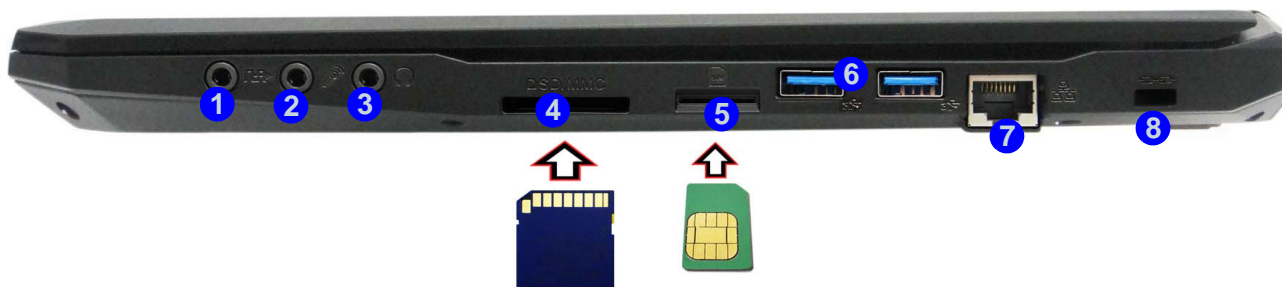


Figure 3
Right Side View

1. S/PDIF-Out Jack
2. Microphone-In Jack
3. Headphone-Out Jack
4. Multi-in-1 Card Reader
5. USIM Card Reader (for 3G/4G USIM Cards)
6. USB 3.0 Ports
7. RJ-45 LAN Jack
8. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Vent
2. HDMI-Out Port
3. Powered USB 3.0 Port
4. Mini DisplayPorts

LEFT SIDE VIEW



Figure 5
Rear View

1. Vent
2. DC-In Jack
3. USB 3.0 Port

REAR VIEW



External Locator - Bottom View

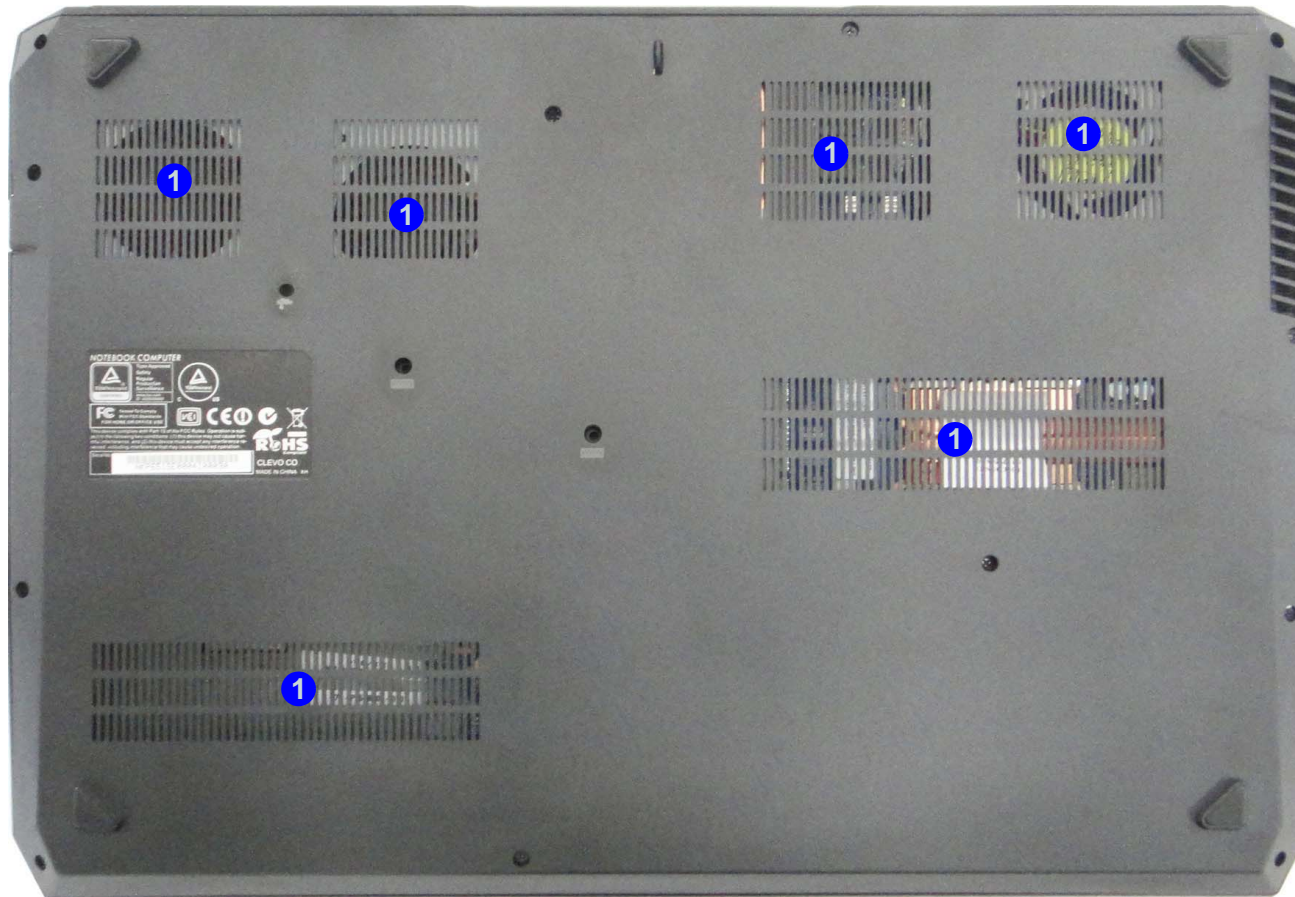


Figure 6
Bottom View

1. Vent



Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. Memory Slots
DDR4 SO-DIMM
2. KBC-ITE IT8587
3. CMOS Battery

Mainboard Overview - Top (Key Parts)

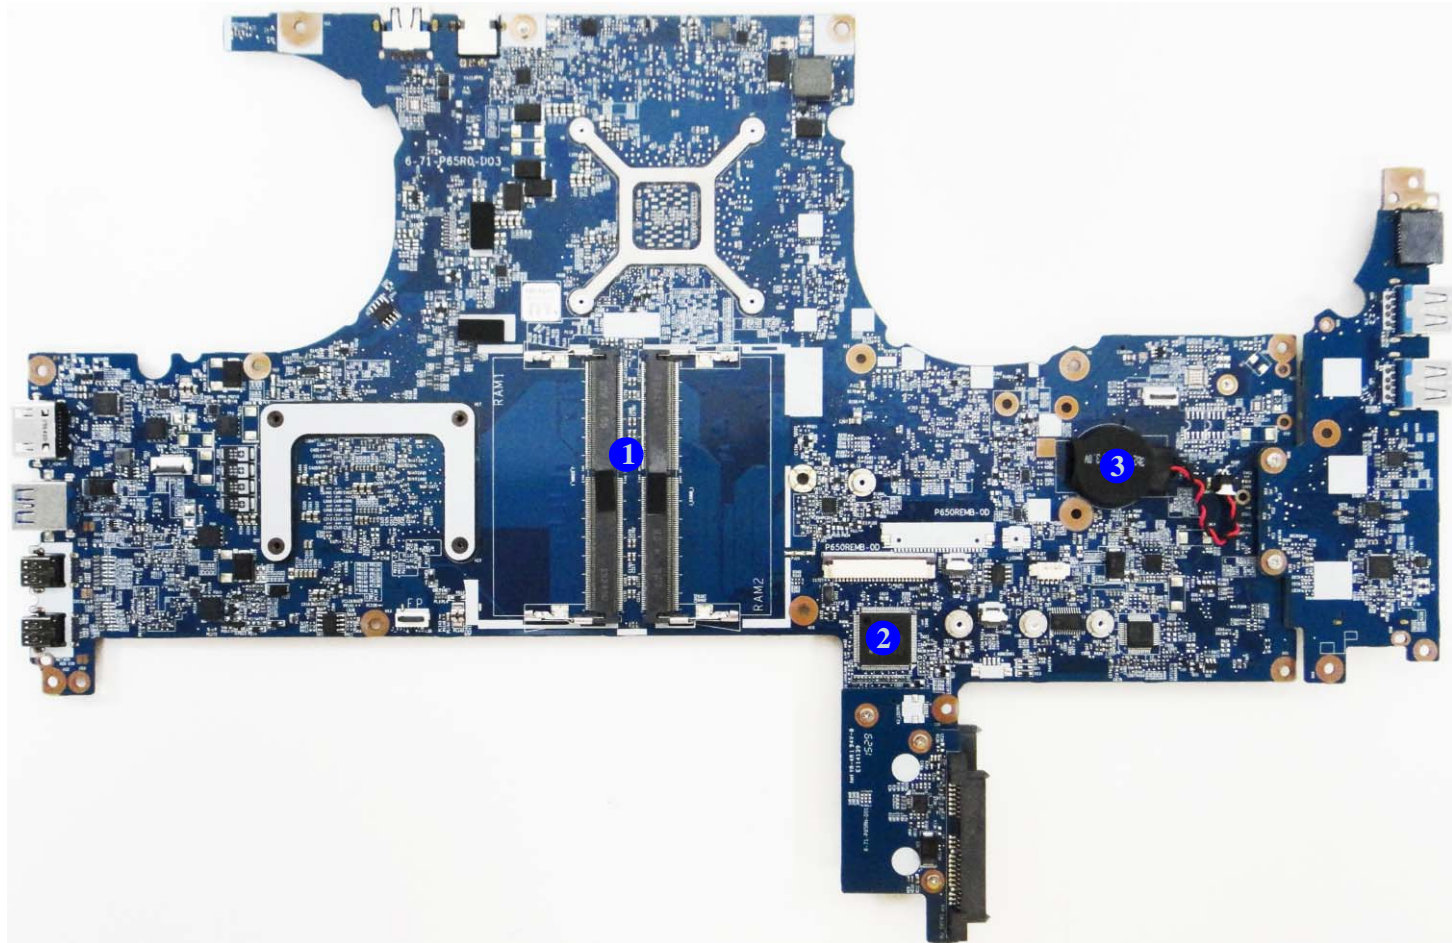

Mainboard Overview - Bottom (Key Parts)

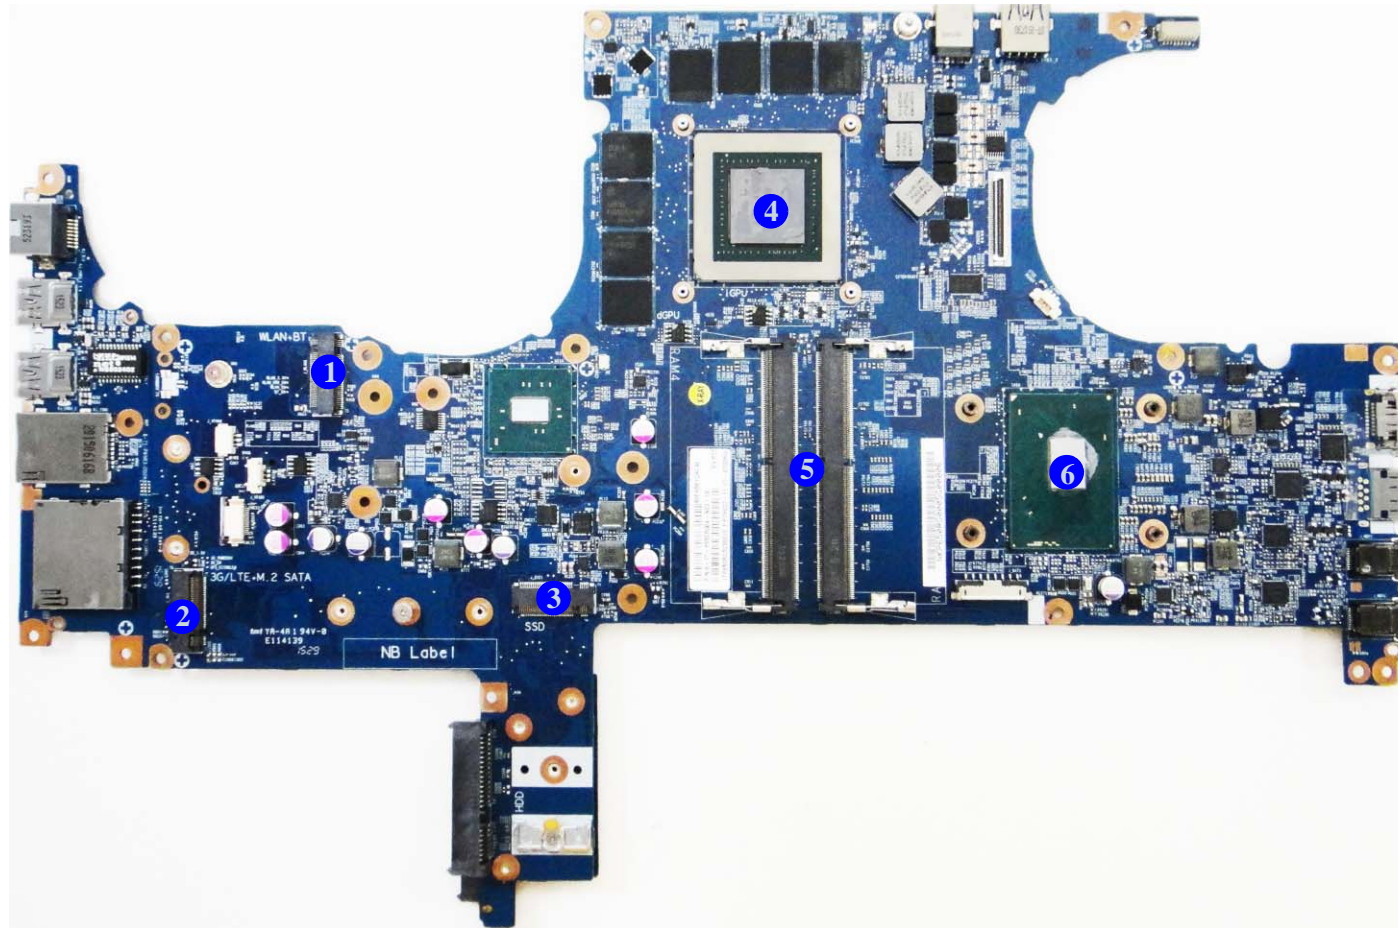


Figure 8
**Mainboard Bottom
Key Parts**


1. Mini-Card Connector (WLAN Module)
2. Mini-Card Connector (M.2 3G/SATA Module)
3. Mini-Card Connector (M.2 PCIE/SATA SSD Module)
4. GPU-GTX970M
5. Memory Slots (DDR4 SO-DIMM)
6. CPU

Introduction

Figure 9
**Mainboard Top
Connectors**

1. HDMI-Out Port
2. Powered USB Port 3.0 Connector
3. Mini Display Port
4. USB Port 3.0 Connector
5. DC-In Jack
6. Keyboard Cable Connector
7. TP Connector
8. Speaker Connector
9. HDD Connector
10. RJ-45 LAN Jack

Mainboard Overview - Top (Connectors)

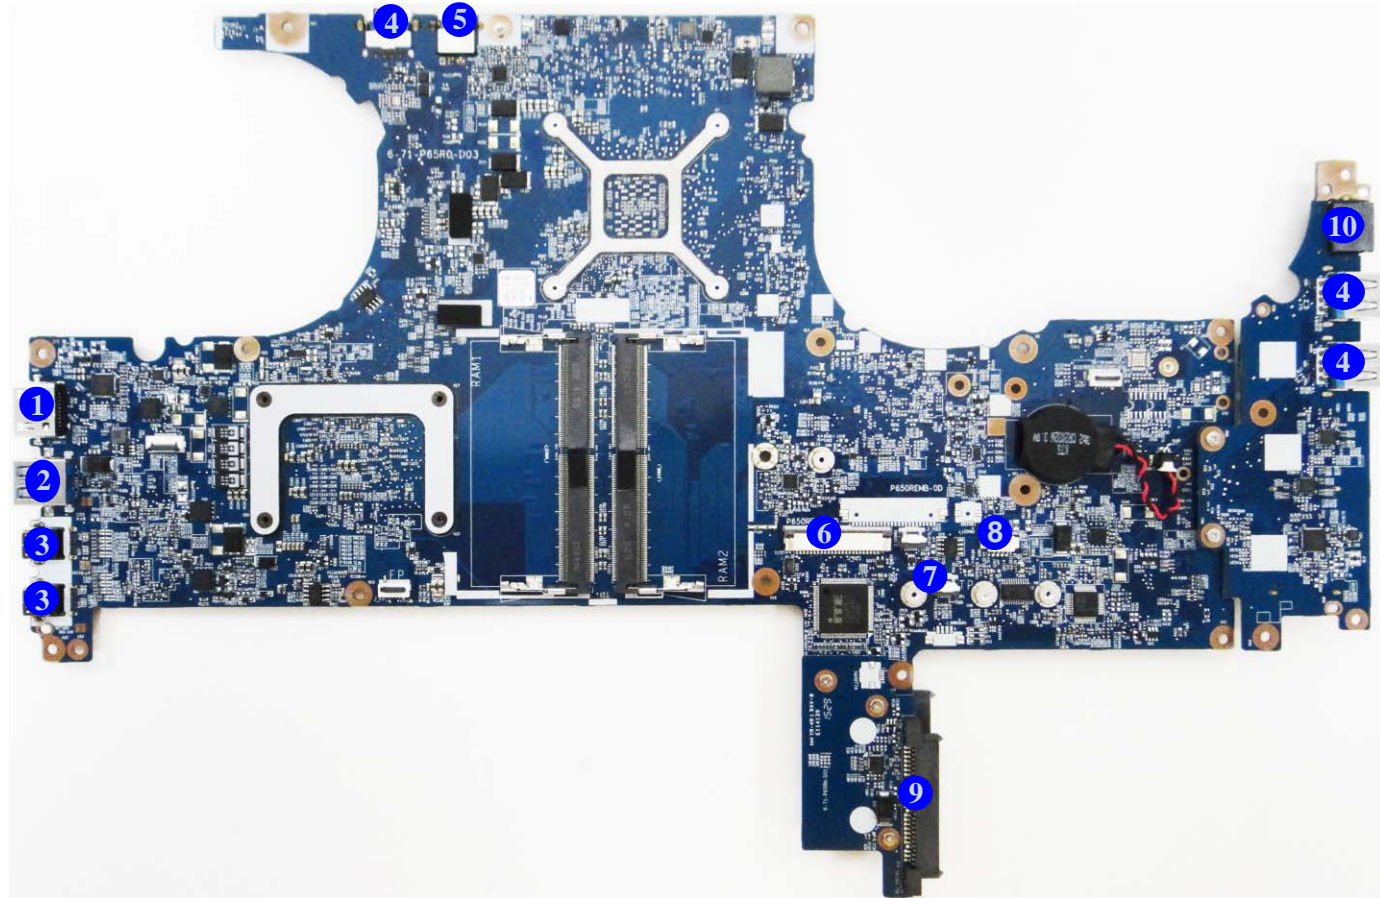

Mainboard Overview - Bottom (Connectors)

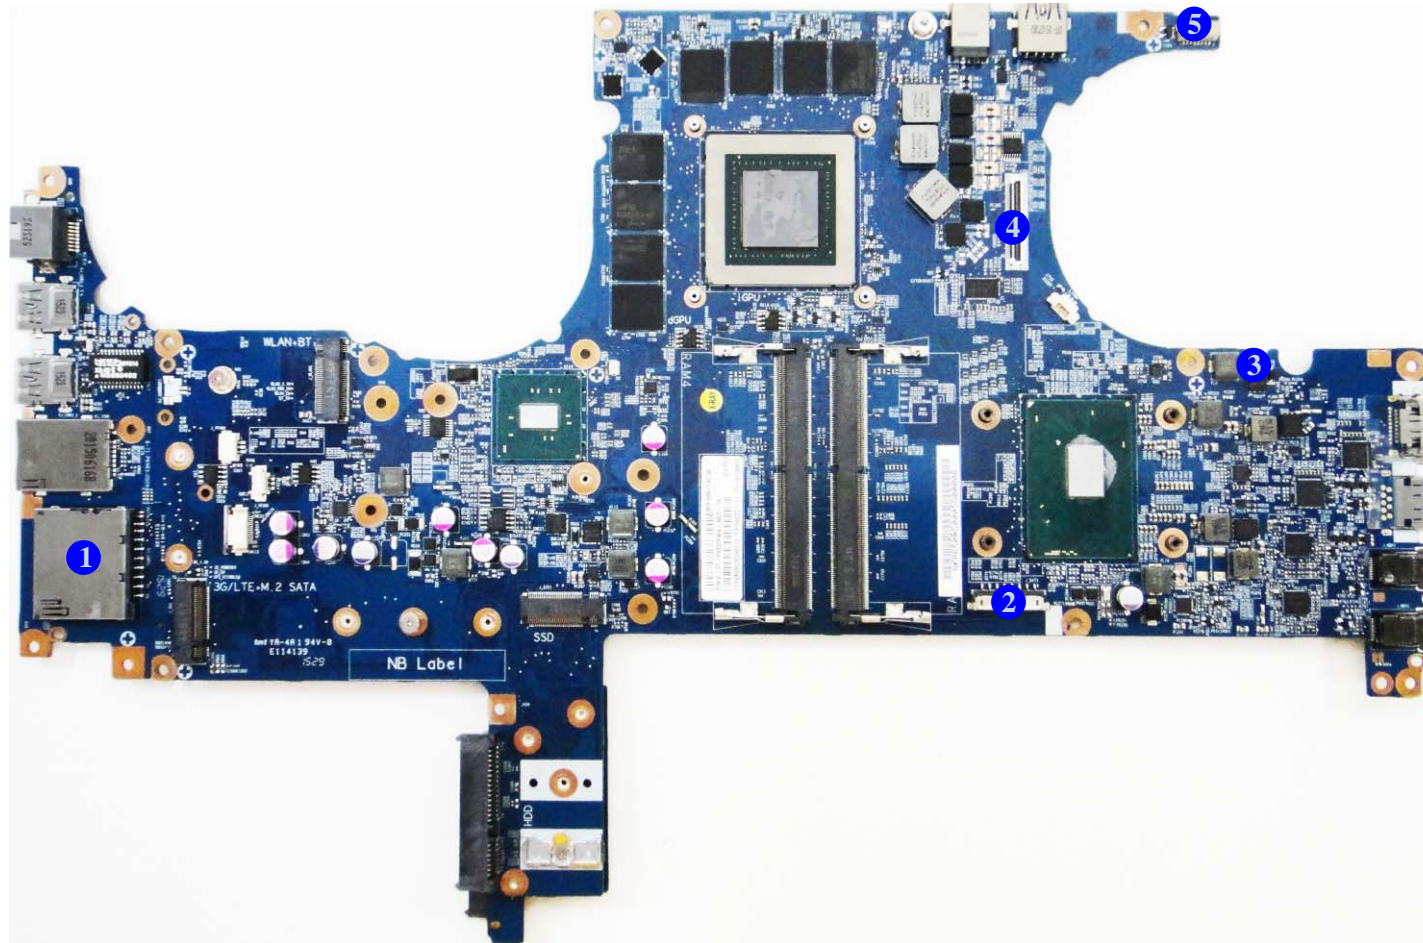


Figure 10
**Mainboard Bottom
Connectors**

1. Multi-in-1 Card Reader
2. Battery Connector
3. Fan Connector
4. LCD Cable Connector
5. CCD Connector


Chapter 2: Disassembly



Overview

This chapter provides step-by-step instructions for disassembling the *P650RE6(-G)* / *P651RE6(-G)* / *P650RE3(-G)* / *P651RE3(-G)* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

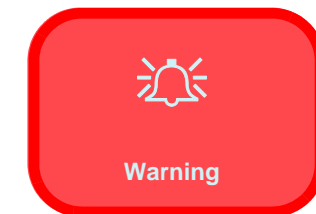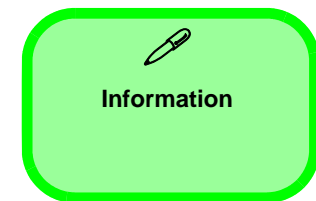

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Keyboard:

1. Remove the keyboard *page 2 - 5*

To remove the Battery:

1. Remove the battery *page 2 - 6*

To remove the HDD:

1. Remove the battery *page 2 - 6*
2. Remove the HDD *page 2 - 8*

To remove the System Memory:

1. Remove the battery *page 2 - 6*
2. Remove the system memory *page 2 - 10*

To remove the M.2 SSD:

1. Remove the battery *page 2 - 6*
2. Remove the SSD *page 2 - 13*

To remove the Wireless LAN Module:

1. Remove the battery *page 2 - 6*
2. Remove the WLAN *page 2 - 14*

To remove and install the 3G/SATA Module:

1. Remove the battery *page 2 - 6*
2. Remove the 3G *page 2 - 16*
3. Remove the SATA *page 2 - 17*
4. Install the 3G/SATA *page 2 - 18*

Removing the Keyboard

1. Turn **off** the computer, turn it over.
2. Remove screws **1** - **2** from the bottom of the computer.
3. Open it up with the LCD on a flat surface before pressing at point **3** to release the keyboard module (use the special eject stick **4** to do this) while releasing the keyboard in the direction of the arrow **5** as shown (*Figure 1a*).
4. Carefully lift the keyboard **6** up, being careful not to bend the keyboard ribbon cable **7**. Disconnect the keyboard ribbon cable **7** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **8** away from the base (*Figure 1b*).
5. Carefully lift the keyboard **6** off the computer (*Figure 1c*).


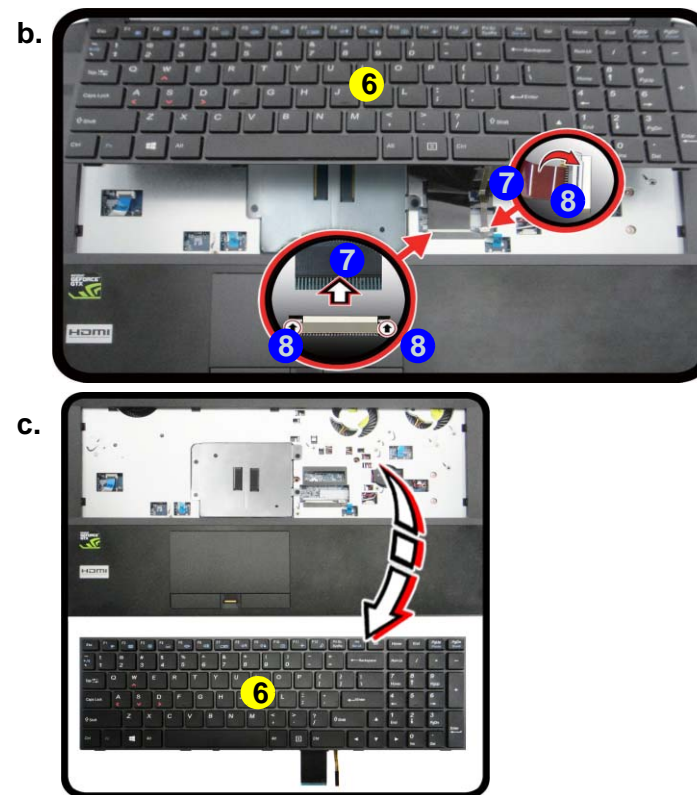


Figure 1
Keyboard Removal

- a. Remove the screws from the bottom of the computer and then eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.
- b. Lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
- c. Remove the keyboard.

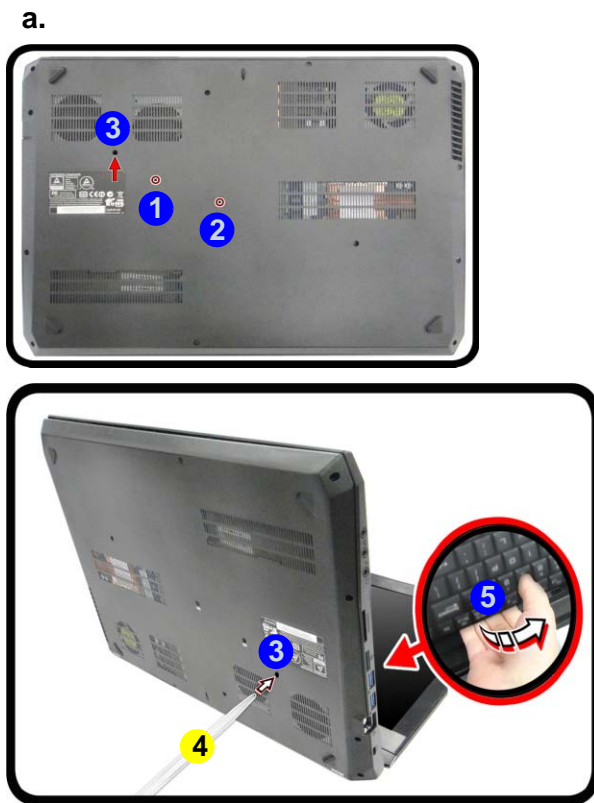

Re-inserting the Keyboard

When re-inserting the keyboard firstly, align the keyboard tabs at the bottom of the keyboard with the slots in the case.



4. Eject Stick
6. Keyboard

- 2 Screws


Disassembly

Figure 2
Battery Removal

- Remove the SD card cover and screws.
- Remove the bottom case.
- Locate the battery.

Removing the Battery

- Turn the computer off, and turn it over.
- Remove the SD card cover **1** and screws **2** - **15** (*Figure 2a*).
- Carefully lift the bottom case **16** up in the direction of the arrow **17** and remove it (*Figure 2b*).
- The battery will be visible at point **18** on the computer (*Figure 2c*).

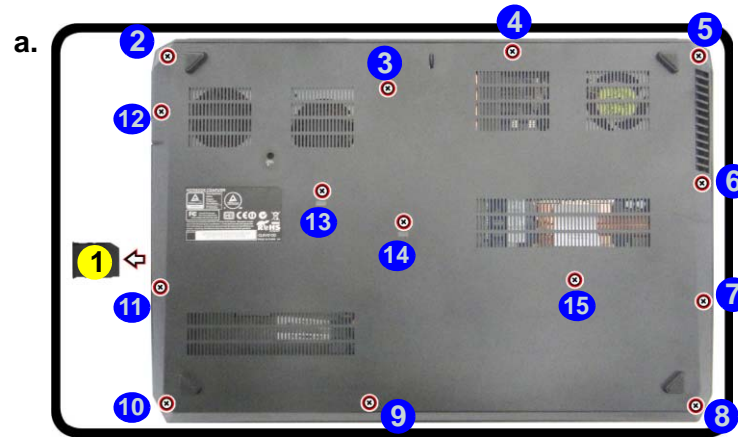

Screw Size

Note that the size of screws **2** & **5** is M2.5 x 8L.



1. SD Card Cover
16. Bottom Case

- 14 Screws

- Carefully disconnect the cable **19**, then remove screws **20** - **22** (*Figure 3b*).
- Lift the battery **23** off the computer (*Figure 3e*).
- Reinsert the bottom case starting from point **24** as shown (*Figure 3f*) to avoid damaging the rear eSATA/USB 3.0 port. Tighten the screws to secure the bottom case in place.


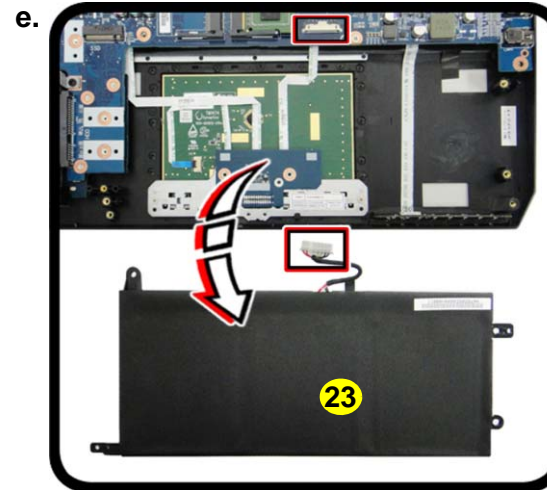


Figure 3
Battery Removal
(cont'd.)

- Disconnect the cable and remove the screws.
- Lift the battery off the computer.
- Reinsert the bottom case and tighten the screws.

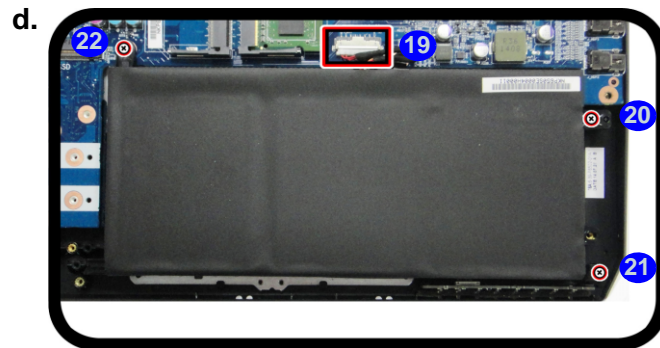

24. Battery

- 4 Screws

Disassembly

Figure 4
**HDD Assembly
Removal**


- Locate the HDD.
- Remove the screws.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm or 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Disassembly Process

- Turn **off** the computer, and remove the battery ([page 2 - 6](#)).
- The HDD will be visible at point **1** on the mainboard ([Figure 4a](#)).
- Remove screws **2** - **5** from the HDD assembly ([Figure 4b](#)).

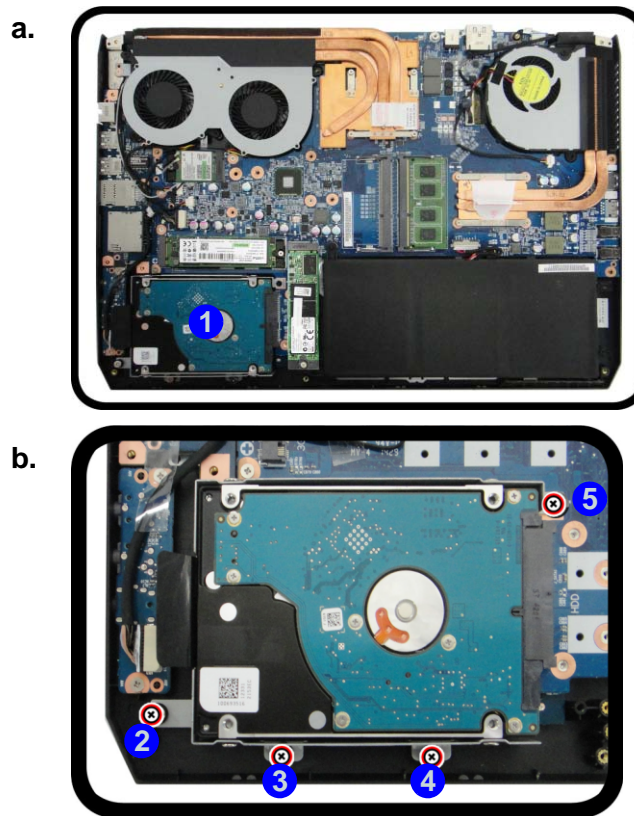

- Hard Disk

 - 4 Screws



HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.




You have all the CD-ROMs and FDDs required to install your operating system and programs.


If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

4. Slightly lift and pull the hard disk in the direction of arrow 6 (Figure 5c).
5. Lift the hard disk assembly 7 out of the bay 8 (Figure 5d).
6. Remove screws 9 - 16 and bracket 17 from the hard disk 18 (Figure 5e).
7. Reverse the process to install a new hard disk (do not forget to replace the screws).

Figure 5
HDD Assembly
Removal (cont'd.)

- c. Slightly lift and pull the HDD in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and bracket from the HDD.

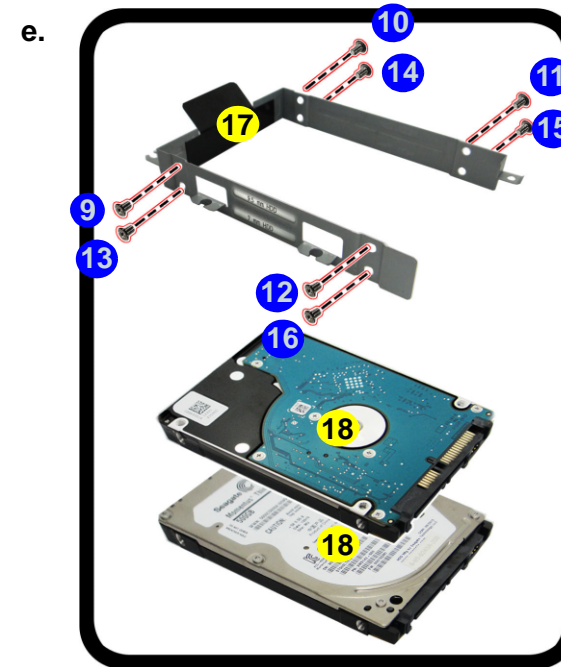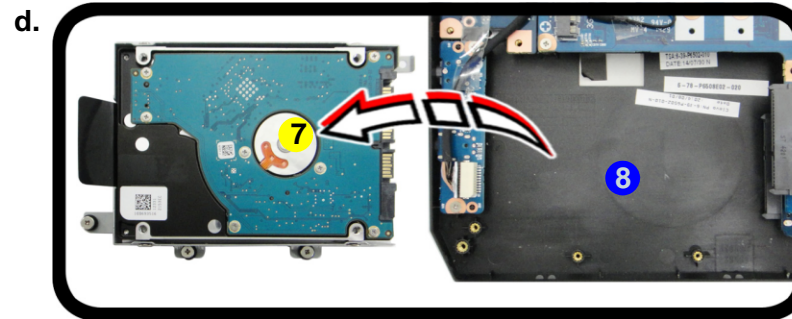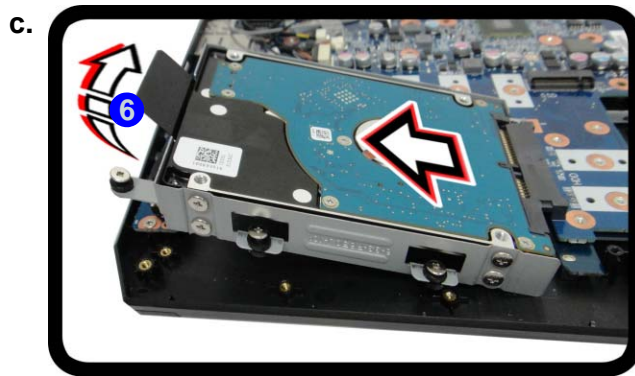




Installing 9.5mm or 7mm HDD

Note that the hard disks pictured on the following pages are all 7mm(h) hard disk drive.

In some cases 9.5mm(h) hard disk drives will be installed. It can be installed on either upper or lower slot.

There are two hard disk drive options:
Two changeable 2.5" (6cm) **7.0mm** (h) **SATA** (Serial) Hard Disk Drives/Solid State Drives (SSD) supporting RAID level 0/1
 Or
One changeable 2.5" (6cm) **9.5mm** (h) **SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)

For more information, contact your distributor/supplier, and bear in mind your warranty terms.



7. HDD Assembly
 17. HDD Bracket
 18. HDD

- 8 Screws

Disassembly

Figure 6
RAM-1 Module Removal


- The RAM modules will be visible at point ①.
- Remove the screws and lift the shielding plate out.

Removing the System Memory (RAM)

The computer has four memory sockets for 260 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR4 2133 MHz. The main memory can be expanded up to 64GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory-1 Upgrade Process

- Turn **off** the computer, turn it over, remove the keyboard ([page 2 - 5](#)).
- The RAM modules will be visible at point ① after removing the shielding plate ([Figure 6a](#)).
- Remove screws ② - ⑤ and lift the shielding plate ⑥ off the computer ([Figure 6b](#)).

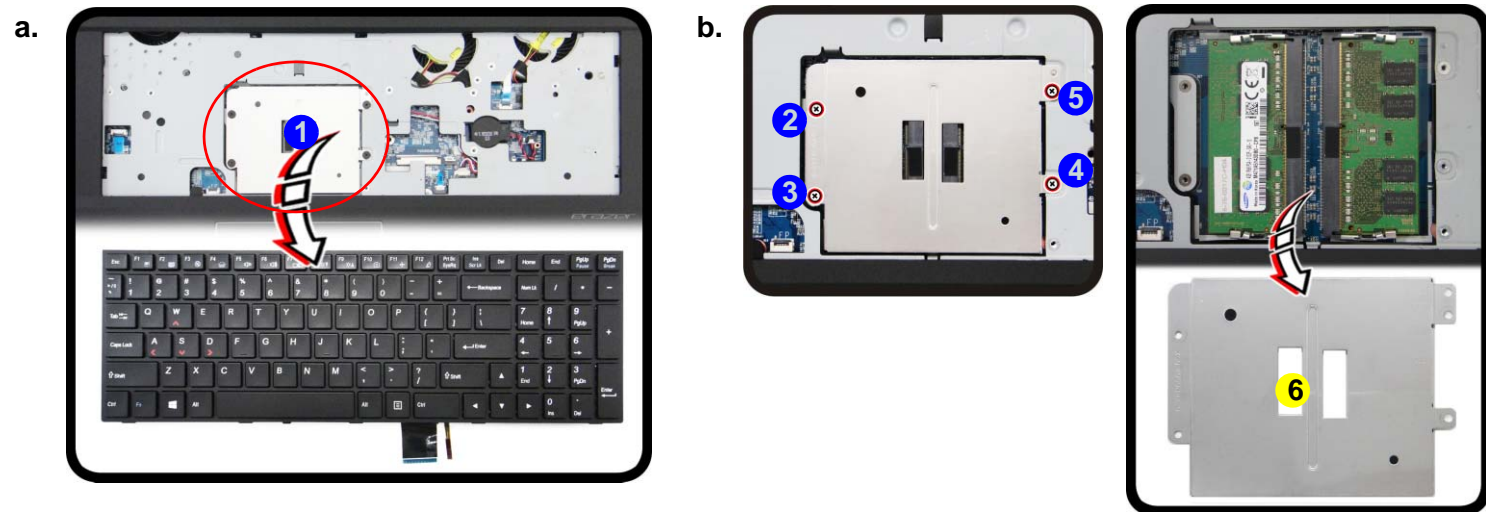

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.





6. RAM Shielding Plate

- 4 Screws

- Gently pull the two release latches (7 & 8) on the sides of the memory socket in the direction indicated by the arrows (Figure 8c). The RAM module 9 will pop-up (Figure 8d), and you can then remove it.
- Pull the latches to release the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.

Figure 7
RAM-1 Module
Removal (cont'd)

- Pull the release latches.
- Remove the module.

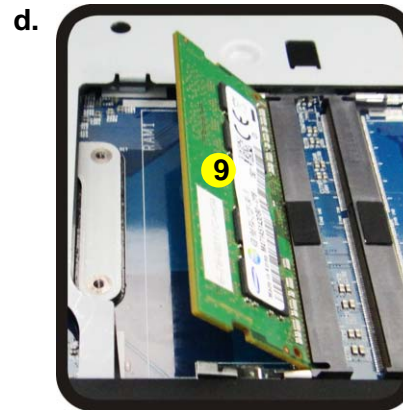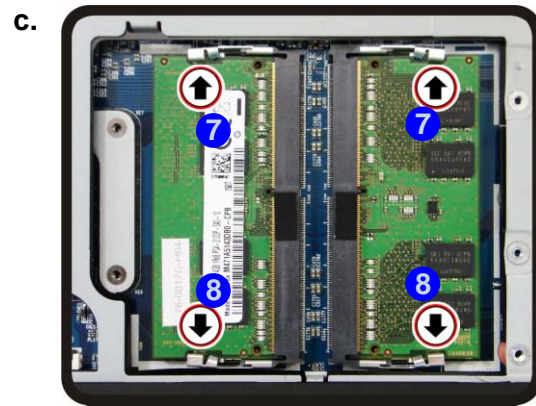

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



9. RAM Module

Disassembly

Figure 8
RAM-2 Module Removal

- The RAM modules will be visible at point **1** on the mainboard.
- Pull the release latches.
- Remove the module.



Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



4. RAM Module




Memory-2 Upgrade Process

- Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
- The RAM-2 modules will be visible at point **1** on the mainboard ([Figure 8a](#)).
- Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 8b](#)). The RAM module **4** will pop-up ([Figure 8c](#)), and you can then remove it.
- Pull the latches to release the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
- Replace the bottom cover and the screws (see [page 2 - 6](#)).
- Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

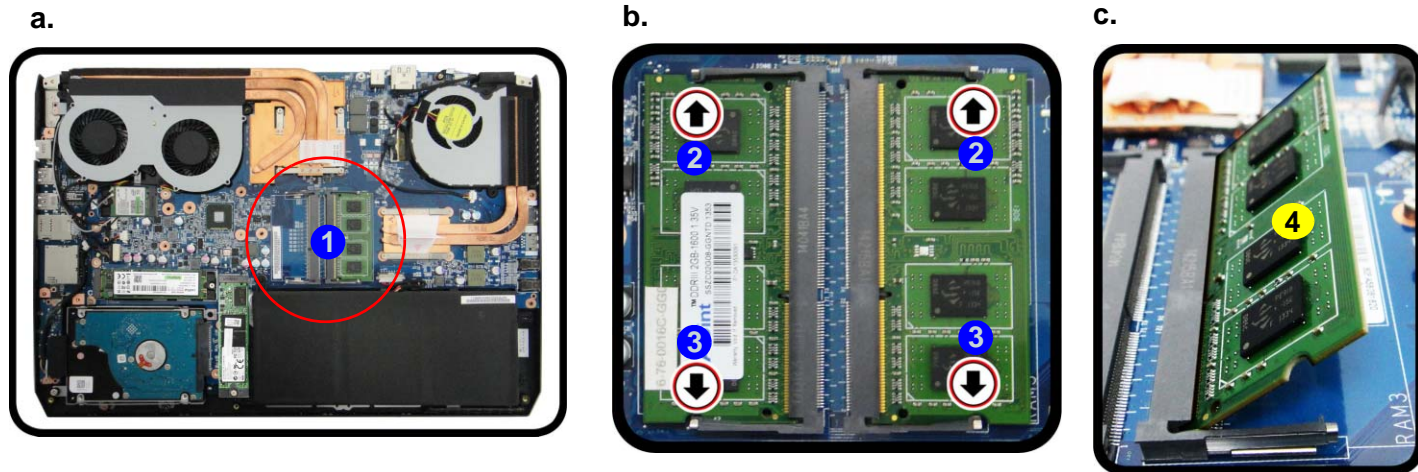

Removing the M.2 SSD Module

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
2. The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 9a](#)).
3. Remove the screw **2** ([Figure 9b](#))
4. The M.2 SSD module **3** ([Figure 9c](#)) will pop-up, and you can remove it from the computer.

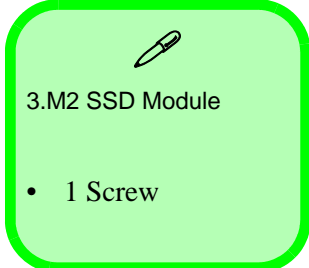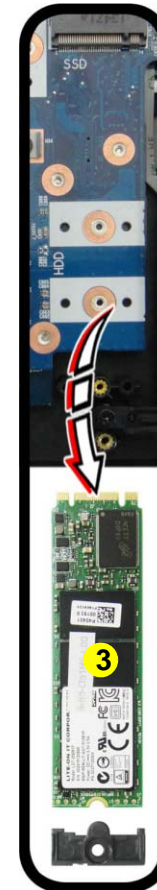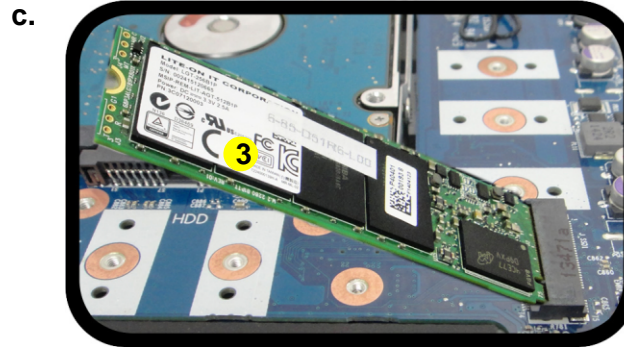

3.M2 SSD Module

- 1 Screw

Figure 9
M.2 SSD Module Removal

- a. Locate the M.2 SSD.
- b. Remove the screw.
- c. The M.2 SSD module will pop up.

Disassembly

Figure 10
**Wireless LAN
 Module Removal**

- Locate the WLAN.
- Disconnect the cables **2** and remove the screw.
- The WLAN module will pop up.




Note: Make sure you reconnect the antenna cable to the “1 + 2” socket (*Figure 10b*).

5. Wireless LAN Module

- 1 Screw

Removing the Wireless LAN Module

- Turn **off** the computer, turn it over, remove the battery (*page 2 - 6*).
- The Wireless LAN module will be visible at point **1** on the mainboard (*Figure 10a*).
- Carefully disconnect the cables **2** & **3**, and then remove the screw **4** (*Figure 10b*).
- The Wireless LAN module **5** (*Figure 10c*) will pop-up, and you can remove it from the computer.

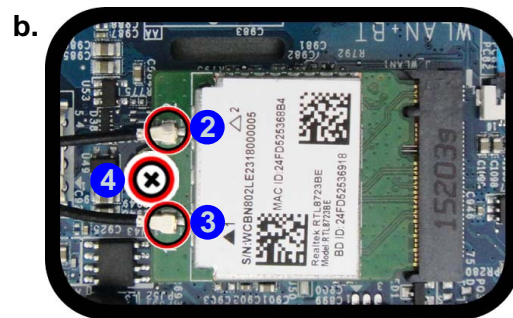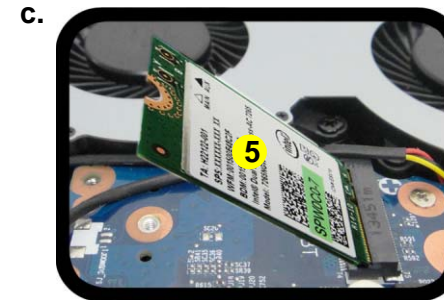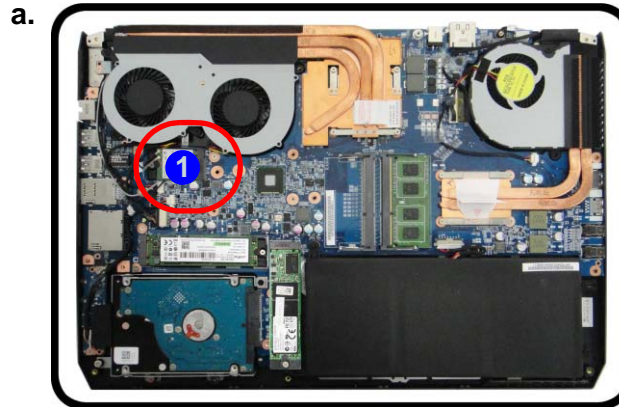

Wireless LAN, Combo, 3G & LTE Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	
LTE Broadband	LTE 1	Black	Black
	LTE 2	Gray	
3G Broadband	3G 1	Black	Black
	3G 2	Gray	

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Removing and Installing the 3G/SATA Module




Figure 11

3G Module Removal

- Locate the module.
- Disconnect the cables and remove the screw.
- The module will pop-up.
- Lift the module up off the socket.

3G Module Removal Procedure

- Turn off the computer, remove the battery ([page 2 - 6](#)).
- Locate the module, it is visible at point **1** ([Figure 11a](#)).
- Carefully disconnect the cables **2** & **3**, and then remove the screw **4** from the module ([Figure 11b](#)).
- The module **3** will pop-up ([Figure 11c](#)).
- Lift the module **5** up and off the computer ([Figure 11d](#)).

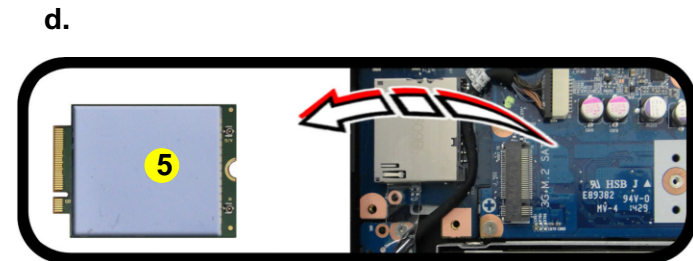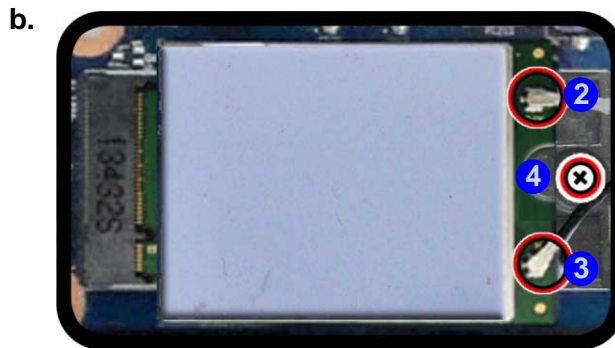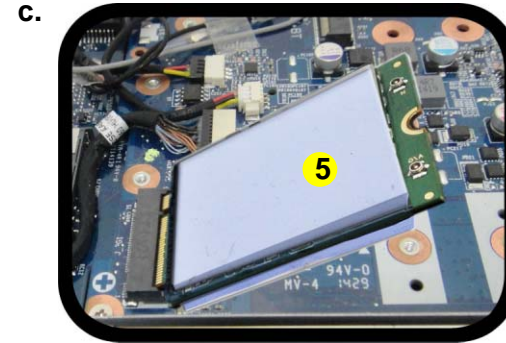

5. 3G Module

- 1 Screw


SATA Module Removal Procedure

1. Turn off the computer, remove the battery ([page 2 - 6](#)).
2. Locate the module, it is visible at point **1** ([Figure 12a](#)).
3. Remove the screw **2** from the module ([Figure 12b](#)).
4. The module **3** will pop-up ([Figure 12c](#)).
5. Lift the module **3** up and off the computer ([Figure 12d](#)).



Figure 12
SATA Module Removal

- a. Locate the module.
- b. Disconnect the cables and remove the screw.
- c. The module will pop-up.
- d. Lift the module up off the socket.



3. SATA Module

- 1 Screw



Disassembly

Figure 13
3G/SATA Module Installation

- Place the thermal pad.
- Insert the module.
- Tighten the screw.

3G/SATA Installation Procedure

- Place the thermal pad **1** on the module as shown (*Figure 13a*).
- Insert the module **2** in the computer (*Figure 13b*).
- Tighten the screw **3** to secure it in place (*Figure 13c*).

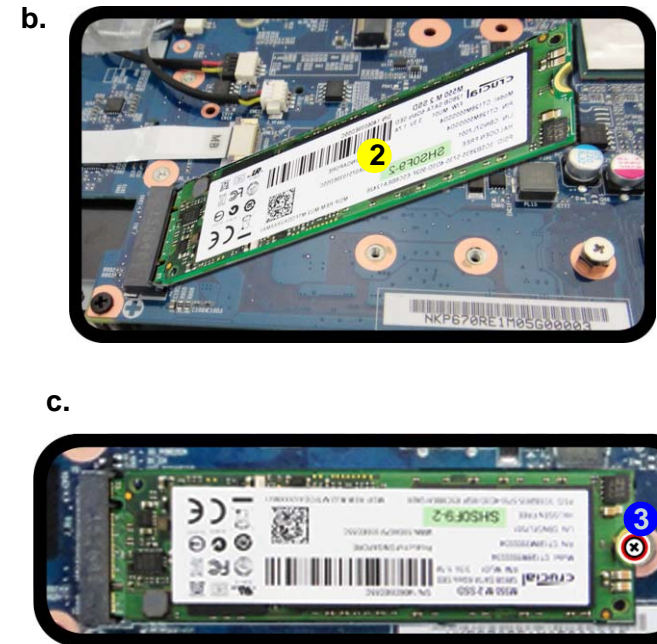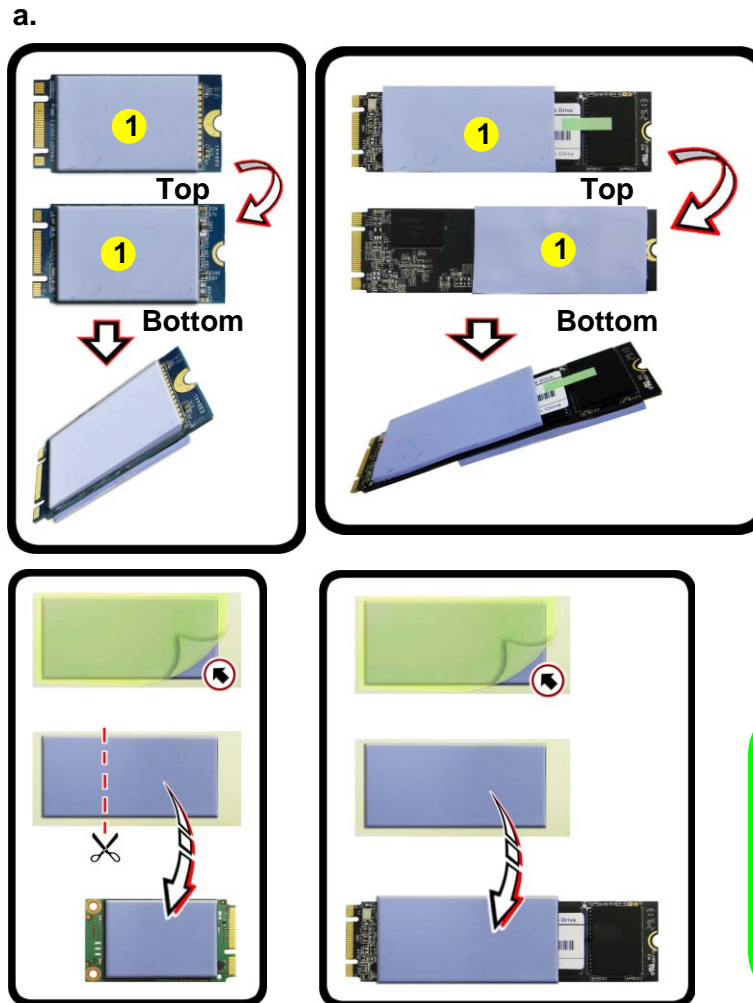

- Thermal Pad
- M2 SATA Module

- 1 Screw



Thermal Pad

Be sure to place the thermal pad's adhesive side down onto the module surface.

The thermal pad needs to be cut (along the two markers as shown) to fit the corresponding size of the module.

Appendix A:Part Lists

This appendix breaks down the *P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
Main Board	<i>page A - 5</i>
HDD	<i>page A - 6</i>
LCD	<i>page A - 7</i>
LCD (Sharp)	<i>page A - 8</i>

Top

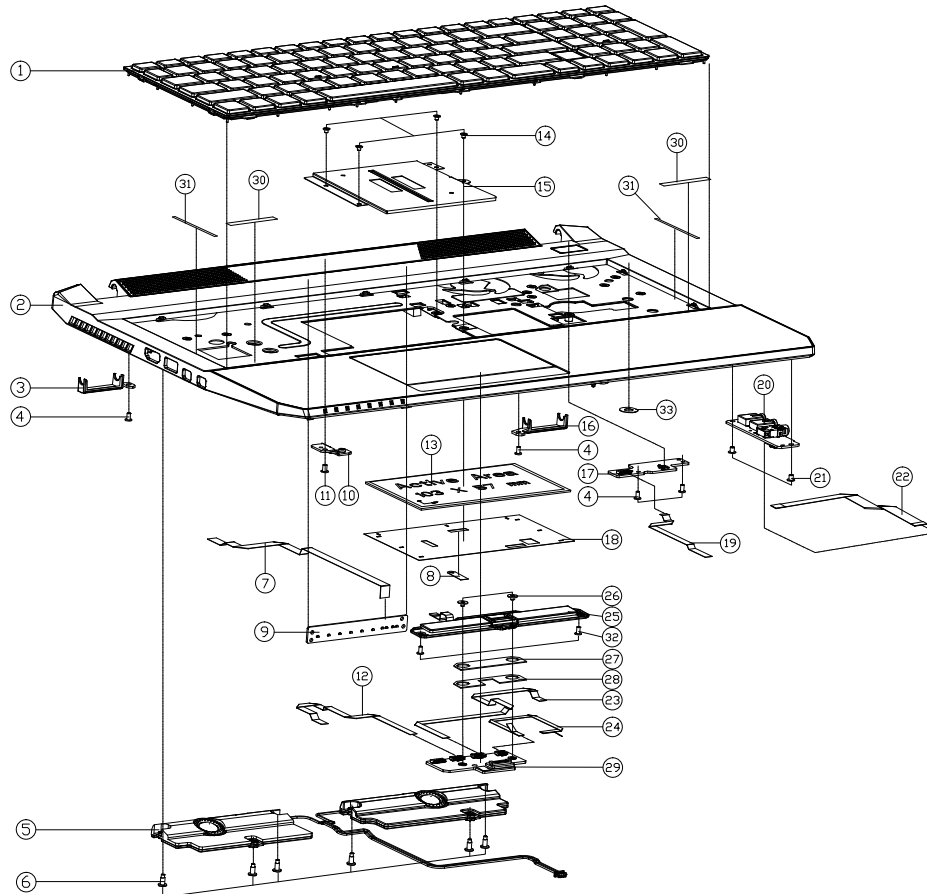


ITEM	PART NAME	PART NO	REMARK
1	WIRE M TO GND W/SHIELDING P650E BLACK COILATION VTH VIBR KEY + GND FRAME	6-80-P6500-013-1	
2	TOP CASE MODULE (DNKYDKKAPDK) P650SE	6-39-P6502-018-N	
2	TOP CASE MODULE (DNKYDKKAPDK) P65ISE	6-39-P6512-017-N	
3	HINGE COVER L (TELJIN TN3715BX-CM262BX) P650SE	6-42-P6502-0L2	
4	SCREW M2*4L KI NI ICT NY (OD=Ø4.0,DT=0.5)	6-35-B1120-4RA	
5	SPRINGABLE FRONT RIL 54X9 15.2 2V 4T EFB9229 L-28.5MM R-23.0MM P650E	6-23-5P650-0S1	
6	SCREW M2*6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
7	FFC CABLE LED TO MB (P=45) 184.5MM 60V 12PIN P650E	6-43-P6500-040	
8	BOTTOM CASE GASKET 3 (30*7*0.1) P650SE	6-47-00190-254	BITCH 6-47-00190-209
9	LED BOARD V2.0 P650RE6	6-77-P65R4-D02	
10	SPK BRK-3 (SECC T=1.0MM) P650SE	6-33-P6502-031	
11	SCREW M2.5*4L KI BK/D ICT NY	6-35-B4125-4RA	
12	FFC CABLE FINGER TO MB (P=45) 123.5MM 60V 4PIN P650E	6-43-P6500-051	ONLY FOR W/FINGER
13	TOUCH PAD SYNAPTICS TM-8363-001 P750M (ØØ*6.0MM)	6-49-P75D3-010	
14	SCREW M2*2L KI BK/Z ICT NY (Ø6,T=0.5)	6-35-B6120-2RC	
15	DDR BRACKET (SUS304) P650SE	6-33-P6502-050	
16	HINGE COVER R MODULE P650SE	6-42-P6502-R00	
17	POWER BOARD V1.0 P650RE6	6-77-P65RC-D01	
18	TOUCH PAD MYLAR PET (125*66.8) P650SE	6-40-P6502-031	
19	FFC CABLE POWER TO MB (P=140) 92.5MM 60V 4PIN P650E	6-43-P6500-030	
20	AUDIO BOARD V2.0 P650RE6	6-77-P65R8-D02	
21	SCREW M2.5*3L KI NI ICT NY	6-35-B1125-3R0	
22	FFC CABLE AUDIO TO MB(PITCH=0.5) 94.6MM 300V 15PIN P650E	6-43-P6500-071	
23	FFC CABLE TRANSFER TO MB (P=45) 194.5MM 60V 6PIN P650RE6	6-43-P65R0-011	
24	FFC CABLE TP TO CLICK (P=45) 100.8MM 60V 8PIN P650RE6	6-43-P65R0-021	
25	FUNCTION KEY FOR CLICK BUTTON MIDDLE W/FINGER P650RE6	6-23-KP65R-022	
25	FUNCTION KEY FOR CLICK BUTTON MIDDLE W/FINGER P650RE6	6-23-KP65R-012	
26	SCREW M2*2L KI BK/Z ICT NY(Ø6,T=0.6)	6-35-B6120-2RE	
27	CLICK W/D FP MYLAR PET (48*14*0.5T) P650SE	6-40-P6502-080	ONLY FOR W/D FINGER
28	CLICK W/FINGER MYLAR PET (48*14*0.3T) P650SE	6-40-P6502-040	ONLY FOR W/FINGER
29	CLICK BOARD V2.0 (W/F/FINGER SENSOR BOARD V1.0) P650RE6	6-77-P65RA-N02	
29	CLICK BOARD V2.0 (W/D FP) P650RE6	6-77-P65R2-D02-1	
30	MYLAR MAGNET 35*5*0.3MM FOR W740SU	6-40-W7402-080	
31	TOP CASE GAP MYLAR(SØ4.5*1.0T) FOR P650SE	6-40-P6502-0A0	
32	SCREW M2*3L KI NI ICT NY (OD=Ø4.5,DT=0.4)	6-35-B1120-3RE	
33	WASHER Ø6*Ø3*0.3t (MYLAR)	6-37-02000-601	

Figure A - 1
Top


Bottom

Figure A - 2
Bottom

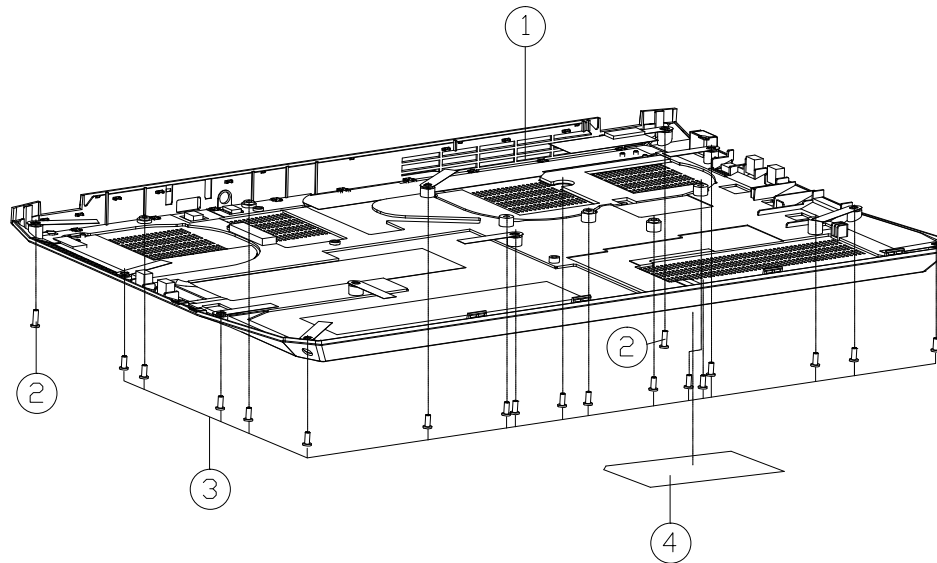

ITEM	PART NAME	PART NO	REMARK
1	BOTTOM CASE MODULE P650RE6	6-39-P65R3-011	
1	BOTTOM CASE MODULE P651RE6	6-39-P6513-E11	
2	SCREW M2.5*6L KI BK/Z NY ICT	6-35-B6125-8R0	
3	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
4	PRODUCT LABEL FOR P650RE6	6-45-P650RE63-010	
4	PRODUCT LABEL FOR P651RE6	6-45-P651RE63-010	
4	PRODUCT LABEL FOR P650RE3	6-45-P650RE33-010	
4	PRODUCT LABEL FOR P651RE3	6-45-P651RE33-010	
4	PRODUCT LABEL FOR P650RE6-G	6-45-P650RE6G-010	
4	PRODUCT LABEL FOR P650RE3-G	6-45-P650RE3G-010	
4	PRODUCT LABEL FOR P651RE6-G	6-45-P651RE6G-010	
4	PRODUCT LABEL FOR P651RE3-G	6-45-P651RE3G-010	
4	PRODUCT LABEL FOR P650RA	6-45-P650RA03-010	
4	PRODUCT LABEL FOR P651RA	6-45-P651RA03-010	

Main Board


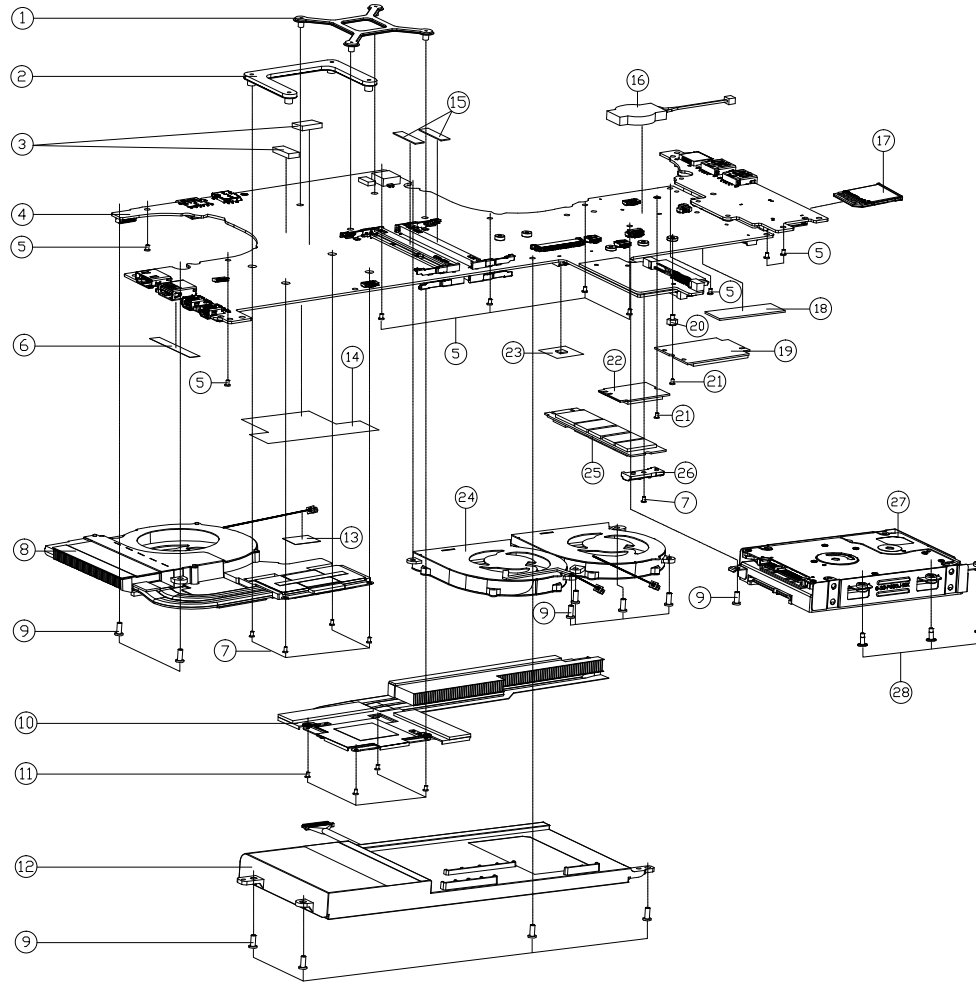


ITEM	PART NAME	PART NO	REMARK
1	VGA SUPPORTER SUS430 X720XKESHOLD	6-33-K720S-040-1	
2	CPU SUPPORT BRACKET SECC T-15 P50MM	6-33-XS10S-011	
3	RUBBER MB SILICON G0 DEGREE P650SE	6-47-P6502-030	
4	RUBBER MB SILICON G0 DEGREE P650SE	6-77-P650REGA-N03-A	
4	RUBBER MB SILICON G0 DEGREE P650SE	6-77-P650REGA-N03-B	
4	RUBBER MB SILICON G0 DEGREE P650SE	6-77-P650REGA-N03-1R	
4	RUBBER MB SILICON G0 DEGREE P650SE	6-77-P650REGA-N03-A	
4	RUBBER MB SILICON G0 DEGREE P650SE	6-77-P650RADA-N03-B	
5	SCREW M2.5X3L KI NI ICT NY	6-35-B1125-3R0	
6	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
7	SCREW M4X3L KI NI ICT NY (D0=4.5,D1=0.4)	6-35-B1120-3RE	
8	CPU HEATSINK METAL/GRAPH CASTING/FAN MIDDLE P650G	6-31-P65R2-G01	
9	SCREW M2.5X6L K BZ ICT NY	6-35-82125-6RA	
10	GPU HEATSINK MODULE P650SE	6-31-P650N-201	
11	SCREW M4X3SL KCTH2 D=4.5 BZ ICT NY	6-35-82116-3R5	
12	W/O THERMAL PAD 20X20 P650SE	6-87-P650S-425R	
12	W/O THERMAL PAD 20X20 P650SE	6-87-P650S-4U31	
13	TAPE MYLAR TRANSPARENT (C)MYLAR P650M	6-40-P1803-020	
14	EMI SHIELD ON MB AL FOIL-FET 42.9X76.2 P650SE	6-47-P650S-020	
15	SATA SOCKET RUBBER(GRAPH) SILICONE P650R6G	6-47-P65RS-011	
16	SATA SOCKET RUBBER(GRAPH) SILICONE P650R6G	6-23-B2015-TE0	
17	SATA SOCKET RUBBER(GRAPH) SILICONE P650R6G	6-42-W9708-010	
18	THERMAL PAD NEGRO (CARBON)17MM FOR H-SATA P650G	6-48-P650S-030	
19	CPU COOLING PADS NEGRO 17MM X 17MM X 0.5MM FOR CPU COOLING P650G	6-88-S210V-8800	OPTION
19	W/O THERMAL PAD 20X20 P650SE	6-88-W3306-8841	OPTION
20	SCREW M4X3L KI NI ICT NY (D0=4.5, D1=0.4)	6-35-ZA120-2R5	
21	SCREW M4X3L KI NI ICT NY (D0=4.5, D1=0.4)	6-35-B1120-2R0	
22	W/O THERMAL PAD 20X20 P650SE	6-88-N25JF-4200	OPTION
22	W/O THERMAL PAD 20X20 P650SE	6-88-W95LF-4240	OPTION
22	W/O THERMAL PAD 20X20 P650SE	6-88-N240F-4200	OPTION
22	W/O THERMAL PAD 20X20 P650SE	6-88-P75DF-9600	OPTION
22	W/O THERMAL PAD 20X20 P650SE	6-88-S210F-9400	OPTION
22	W/O THERMAL PAD 20X20 P650SE	6-88-N170F-5100	OPTION
23	AL FOIL+THERMAL PAD 20X20 P650SE	6-40-P650S-020	
24	GPU FAN MODULE (FORCECOOL) P650SE	6-31-P6502-201	
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D241T-101	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D241T-S02	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D245A-101	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D244J-Z02	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D515B-S00	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D51R0-100	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D515B-S01	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D51R6-L01	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D515A-100	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D515B-101	OPTION
25	SATA 2.5" 7MM BULKY CRACKLE METAL/GRAPHIC BRASS SHIELD MLC	6-85-D51R6-L00	OPTION
26	HEAT SUPPORT 4H (KAS) PA-727 P650SE	6-42-P6503-031	
27	W/O HDD ASS'Y P650SE	6-79-P650SEJ-010	
27	W/O HDD ASS'Y P650SE	6-79-P650SEJ-020	
27	W/O 2ND HDD ASS'Y P650SE	6-79-P650SEJ-030	
27	W/O 2ND HDD ASS'Y P650SE	6-79-P650SEJ-040	
28	SCREW M4X3L KI NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	FOR P650SE H3 FOR P650SE H1

Figure A - 3
Main Board


HDD

Figure A - 4
HDD

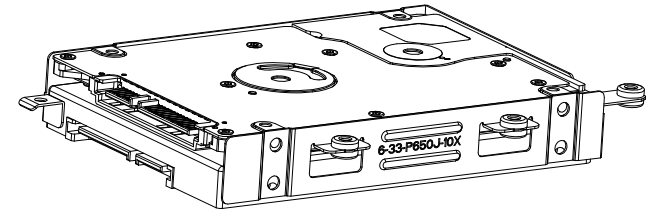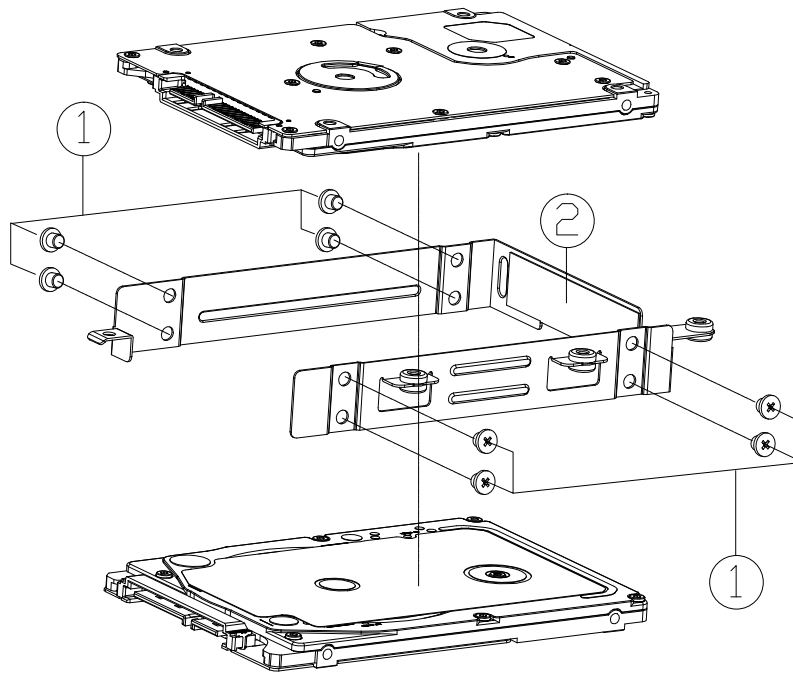

ITEM	PART NAME	PART NO	REMARK
1	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	
2	2 IN 1 HDD BRACKET MODULE P650SE	6-33-P650J-100	

LCD

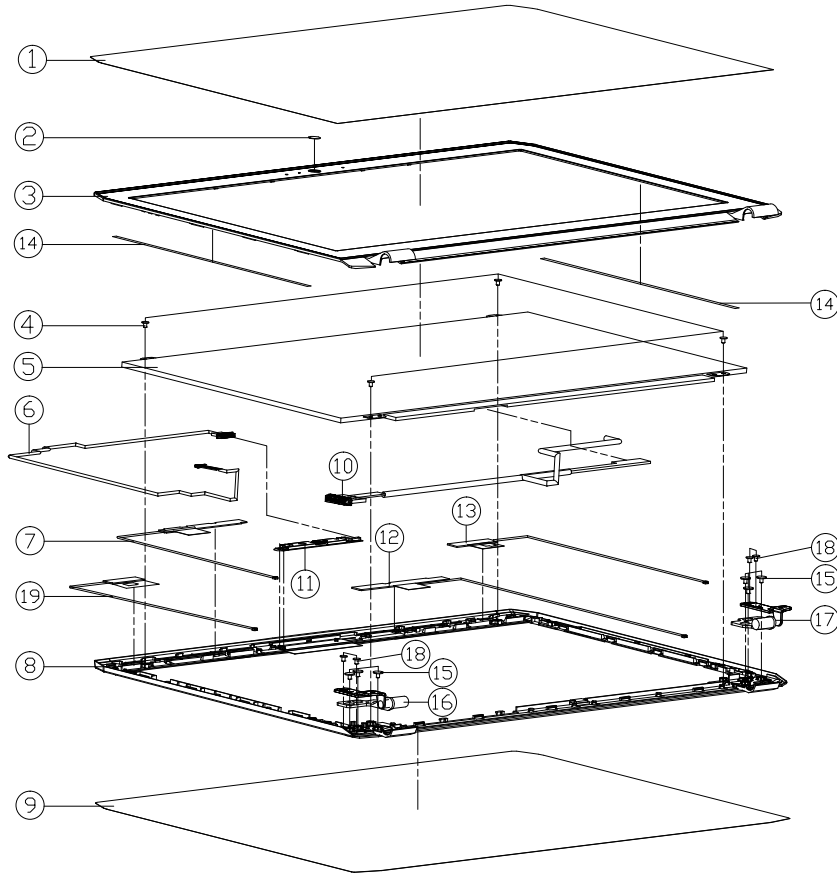


ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR (PET+3M8915) P650SE	6-40-P6501-010	
2	CCD LENS PMMA P650SE	6-42-P6501-010	
3	LCD FRONT COVER MODULE P650SE	6-39-P6501-015	
4	SCREW M2*2.5L KI BK/Z ICT NY 1# \varnothing 3.5 T=0.5	6-35-B6120-2RD	
5	LCD 15.6" FHD/IPS/EDP AU BUS6480L1 (64HVA) 0N7 LED 3.2MM	6-50-LB232-G10	OPTION
5	LCD 15.6" FHD EDP (PLS) SAMSUNG LTN156HL01-002 0N7 LED 3.2MM	6-50-LB232-M02	OPTION
5	LCD 15.6" WHD QLED TYPE (COP) PLS SAMSUNG LTN156HL01-M " SUPPORT 5.0V 6-50VC "LED 2.9MM 600D	6-50-L1226-M02	OPTION
5	LCD 15.6" WHD (COP) SAMSUNG LTN156HL01-M " SUPPORT 5.0V 6-50VC "LED 2.9MM	6-50-L1226-M03	OPTION
5	LCD 15.6" FHD (COP) (IPS/PLS) SAMSUNG LTN156HL01-002 0N7 LED 3.2MM	6-50-LB232-M00	OPTION
5	LCD 15.6" FHD/IPS/EDP LG LP156W46-SPH 0N7 QLED SUPPORT 5.0V 6-50VC " 3.2MM	6-50-LB232-L04	OPTION
6	WIRE CALBE. FOR CCD 535MM 30V 8PIN (CMD) P650SE	6-43-P650T-011-1	
7	ANTENNA PCB 3G/LTE. JEM LITE-2 PCB 0.8/0.6/0.6/0.6/0.6/0.6/0.6/0.6/0.6/0.6/0.6 L=90MM P650E	6-23-7P650-072	必須先鋪3G/LTE-1天線 才可以鋪LTE-2天線
8	LCD BACK COVER MODULE P650SE	6-39-P6501-025	
8	LCD BACK COVER MODULE P651SE	6-39-P6511-024	
9	LCD BACK COVER PROTECTION MYLAR (PET+3M8915) P650SE	6-40-P6501-020	
10	WIRE CONTROL CABLE FOR GROUND 270MM 30V 3P 0.4CM/THL CONDUIT P650E	6-43-P6501-032-1C	
10	WIRE CABLE FOR COPLAND/RED 270MM 30V 3P 0.4CM/THL CONDUIT P650E	6-43-P6501-042-1C	
11	UNC COVER BUSH FOR INNOVATION FOR THE SIM COVER P650E FURNS VALLD Worry INC	6-88-P650C-4900	OPTION
12	ANTENNA PCB 3G/LTE. JEM LITE-1 PCB 0.8/0.6/0.6/0.6/0.6/0.6/0.6/0.6/0.6/0.6 L=60MM P650E	6-23-7P650-060	需要鋪3G/LTE 模組 必須先鋪3G/LTE-1天線
13	ANTENNA IPEX4 WLAN JEM WLI PCB 2.4G/5G L=500MM P650SE	6-23-7P650-041	OPTION
14	FRONT COVER GLUE UPD (NITTD) 5000 180*340L15) FOR W655S2	6-40-W6551-020	
15	SCREW M2*2L KI BK/Z ICT NY(\varnothing 8,T=0.6)	6-35-B6120-2RE	
16	LCD HINGE L (SK7) P650SE	6-33-P6501-0L3	
17	LCD HINGE R SK7 P650SE	6-33-P6501-0R3	
18	SCREW M2.5*3L KI NI ICT NY	6-35-B1125-3R0	
19	ANTENNA IPEX4 WLAN JEM MLI PCB 2.4G/5G CABLE BLACK L=800MM P650SE	6-23-7P650-052	

Figure A - 5
LCD

LCD (Sharp)

Figure A - 6
LCD (Sharp)

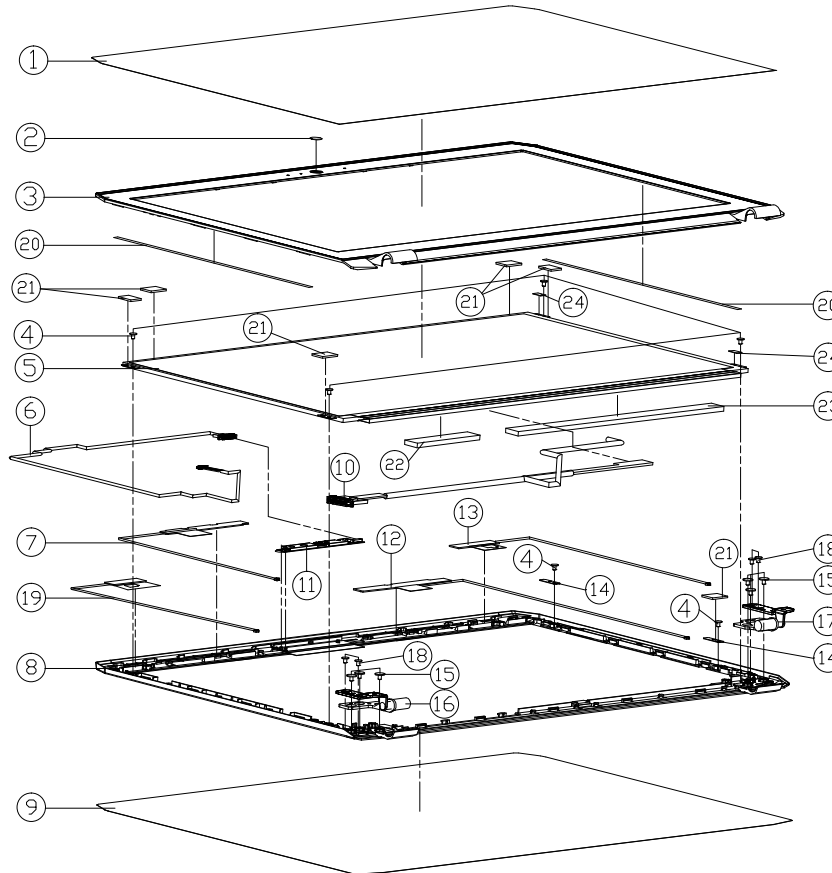

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION MYLAR (PET-388915) P650SE	6-40-P6501-010	
2	CCD LENS PMMA P650SE	6-42-P6501-010	
3	LCD FRONT COVER MODULE P650SE	6-39-P6501-015	
4	SCREW M2*2.5L KI BK/Z ICT NY 1# #3.5 T=0.5	6-35-B6120-2RD	
5	LCD ISG W/FD C/P IPS MODE SHARP LUGSOLANA LED 33MM F/W UP/DATE	6-50-L1231-A01	
6	WIRE CALBE FOR CCD 535MM 30V BPIN (CMD) P650SE	6-43-P650T-011-1	
7	ANTENNA PEEM 341E JEM L1E-1 PCB 1450/1450/1450/2262/2662 L=500MM P650SE	6-23-7P650-072	必須先匯30V/LTE-A7天線 才可以匯LTE-2天線
8	LCD BACK COVER MODULE P650SE	6-39-P6501-025	
8	LCD BACK COVER MODULE P651SE	6-39-P6511-024	
9	LCD BACK COVER PROTECTION MYLAR (PET-388915) P650SE	6-40-P6501-020	
10	WIRE COAXIAL CABLE FOR EP30SHRP 220MM 3V 4P 01 (CN/TL CON/LR/RS/7) P650SE	6-43-P6501-052-1C	
11	WIRE COAXIAL CABLE FOR 180V6V10V 20FIB 5W 0022P P650SE FIBRES W/LED V18V9V 10V	6-88-P650C-4900	OPTION
12	ANTENNA PEEM 341E JEM L1E-1 PCB 1450/1450/1450/2262/2662 L=500MM P650SE	6-23-7P650-060	需匯出30V/LTE 線組 必須此30V/LTE-A7天線
13	ANTENNA IPEX4 W/LAN JEM W/L PCB 246/56 L=500MM P650SE	6-23-7P650-041	OPTION
14	LCD PANEL BRACKET (SECC) P650SE	6-33-P6501-010	ONLY FOR SHARP
15	SCREW M2*2L KI BK/Z ICT NY(#8,T=0.6)	6-35-B6120-2RE	
16	LCD HINGE L (SK7) P650SE	6-33-P6501-0L3	
17	LCD HINGE R SK7 P650SE	6-33-P6501-0R3	
18	SCREW M2.5*3L KI NI ICT NY	6-35-B1125-3R0	
19	ANTENNA IPEX4 W/LAN JEM W/L PCB 246/56 CABLE BLACK L=800MM P650SE	6-23-7P650-052	
20	FRONT COVER GLUE UPD ONITTO 5000 180*340L5) FOR W655S2	6-40-W6551-020	
21	SPONGE(10*7*2.5T)FDR P650SA	6-47-0019A-10Q	
22	SHARP PANEL SPONGE (47*8*2T) (CR4382+3M467) P650SE	6-47-0019A-471	
23	SHARP PANEL SPONGE (210*8*2T) (CR4382+3M467) P650SE	6-47-0019A-215	
24	MYLAR<10*6*0.2T>FDR P650SE	6-40-00150-10L	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *P650RE6(-G) / P651RE6(-G) / P650RE3(-G) / P651RE3(-G)* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>GPU Frame Buffer Partition - Page B - 24</i>	<i>Realtek ALC892 - Page B - 46</i>	<i>P650RE HDD Board - Page B - 68</i>
<i>Processor 1/7 - Page B - 3</i>	<i>Frame Buffer Partition C - Page B - 25</i>	<i>TPA2008D2 - Page B - 47</i>	<i>P650RE LED Board - Page B - 69</i>
<i>Processor 2/7 - Page B - 4</i>	<i>Frame Buffer Partition D - Page B - 26</i>	<i>Subwoofer - Page B - 48</i>	<i>Finger Sensor Board - Page B - 70</i>
<i>Processor 3/7 - Page B - 5</i>	<i>Frame Buffer Partition C_D - Page B - 27</i>	<i>KBC-ITE IT8587 - Page B - 49</i>	<i>P650RE Click Board - Page B - 71</i>
<i>Processor 4/7 - Page B - 6</i>	<i>GPU Decoupling - Page B - 28</i>	<i>TPM, CCD, TP - Page B - 50</i>	<i>P650RE USB Board 1/3 - Page B - 72</i>
<i>Processor 5/7 - Page B - 7</i>	<i>DACA Interface & XTAL - Page B - 29</i>	<i>Fan, LID, KB, LED - Page B - 51</i>	<i>P650RE USB Board 2/3 - Page B - 73</i>
<i>Processor 6/7 - Page B - 8</i>	<i>IFP I/O Interface - Page B - 30</i>	<i>Connector - Page B - 52</i>	<i>P650RE USB Board 3/3 - Page B - 74</i>
<i>Processor 7/7 - Page B - 9</i>	<i>Misc - GPIO, I2C and ROM - Page B - 31</i>	<i>DDR 1.2V / 0.6VS - Page B - 53</i>	<i>P670RE USB Board 1/3 - Page B - 75</i>
<i>DDR4 CHA SO-DIMM_0 - Page B - 10</i>	<i>GPU NVVDD, FBVDDQ, and GND - Page B - 32</i>	<i>VDD3, VDD5 - Page B - 54</i>	<i>P670RE USB Board 2/3 - Page B - 76</i>
<i>DDR4 CHA SO-DIMM_1 - Page B - 11</i>	<i>PCH 1/9 - Page B - 33</i>	<i>5V, 5VS, 3.3V, 3.3VS, 3.3VA - Page B - 55</i>	<i>P670RE USB Board 3/3 - Page B - 77</i>
<i>DDR4 CHB SO-DIMM_0 - Page B - 12</i>	<i>PCH 2/9 - Page B - 34</i>	<i>Power 1.0V, VCCIO - Page B - 56</i>	<i>P670RE LED Board - Page B - 78</i>
<i>DDR4 CHB SO-DIMM_1 - Page B - 13</i>	<i>PCH 3/9 - Page B - 35</i>	<i>AC_In, Charger - Page B - 57</i>	<i>P655RE Power Board - Page B - 79</i>
<i>Panel, Inverter - Page B - 14</i>	<i>PCH 4/9 - Page B - 36</i>	<i>I.O DX_VCCSTG/VCCSFR_OC/2.5V - Page B - 58</i>	<i>P655RE LED Board - Page B - 80</i>
<i>Redriver - Page B - 15</i>	<i>PCH 5/9 - Page B - 37</i>	<i>PEX_VDD, 3V3_AON, 3V3_RUN - Page B - 59</i>	
<i>Mini DP Port E - Page B - 16</i>	<i>PCH 6/9 - Page B - 38</i>	<i>NVVDD Phase 1 & 2 - Page B - 60</i>	
<i>Mini DP Port F - Page B - 17</i>	<i>PCH 7/9 - Page B - 39</i>	<i>FBVDDQ - Page B - 61</i>	
<i>HDMI Connector - Page B - 18</i>	<i>PCH 8/9 - Page B - 40</i>	<i>VCC_Core & VCCSA - Page B - 62</i>	
<i>VGA PCI Express - Page B - 19</i>	<i>PCH 9/9 - Page B - 41</i>	<i>VCore & VCCSA Output Stage - Page B - 63</i>	
<i>VGA Frame Buffer Partition - Page B - 20</i>	<i>USB3.0 - Page B - 42</i>	<i>VCCGT - Page B - 64</i>	
<i>Frame Buffer Partition A - Page B - 21</i>	<i>USB Charger - Page B - 43</i>	<i>VCCGT Output Stage - Page B - 65</i>	
<i>Frame Buffer Partition B - Page B - 22</i>	<i>M.2 3G + M.2 SATA - Page B - 44</i>	<i>P650RE Audio Board A - Page B - 66</i>	
<i>Frame Buffer Partition A_B - Page B - 23</i>	<i>M.2 WLAN+BT, PCIE4X SSD - Page B - 45</i>	<i>P650RE Power Board - Page B - 67</i>	

Table B - 1
SCHEMATIC
DIAGRAMS




Version Note


The schematic diagrams in this chapter are based upon version 6-7P-P65RC-003. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

Sheet 1 of 79
System Block
Diagram

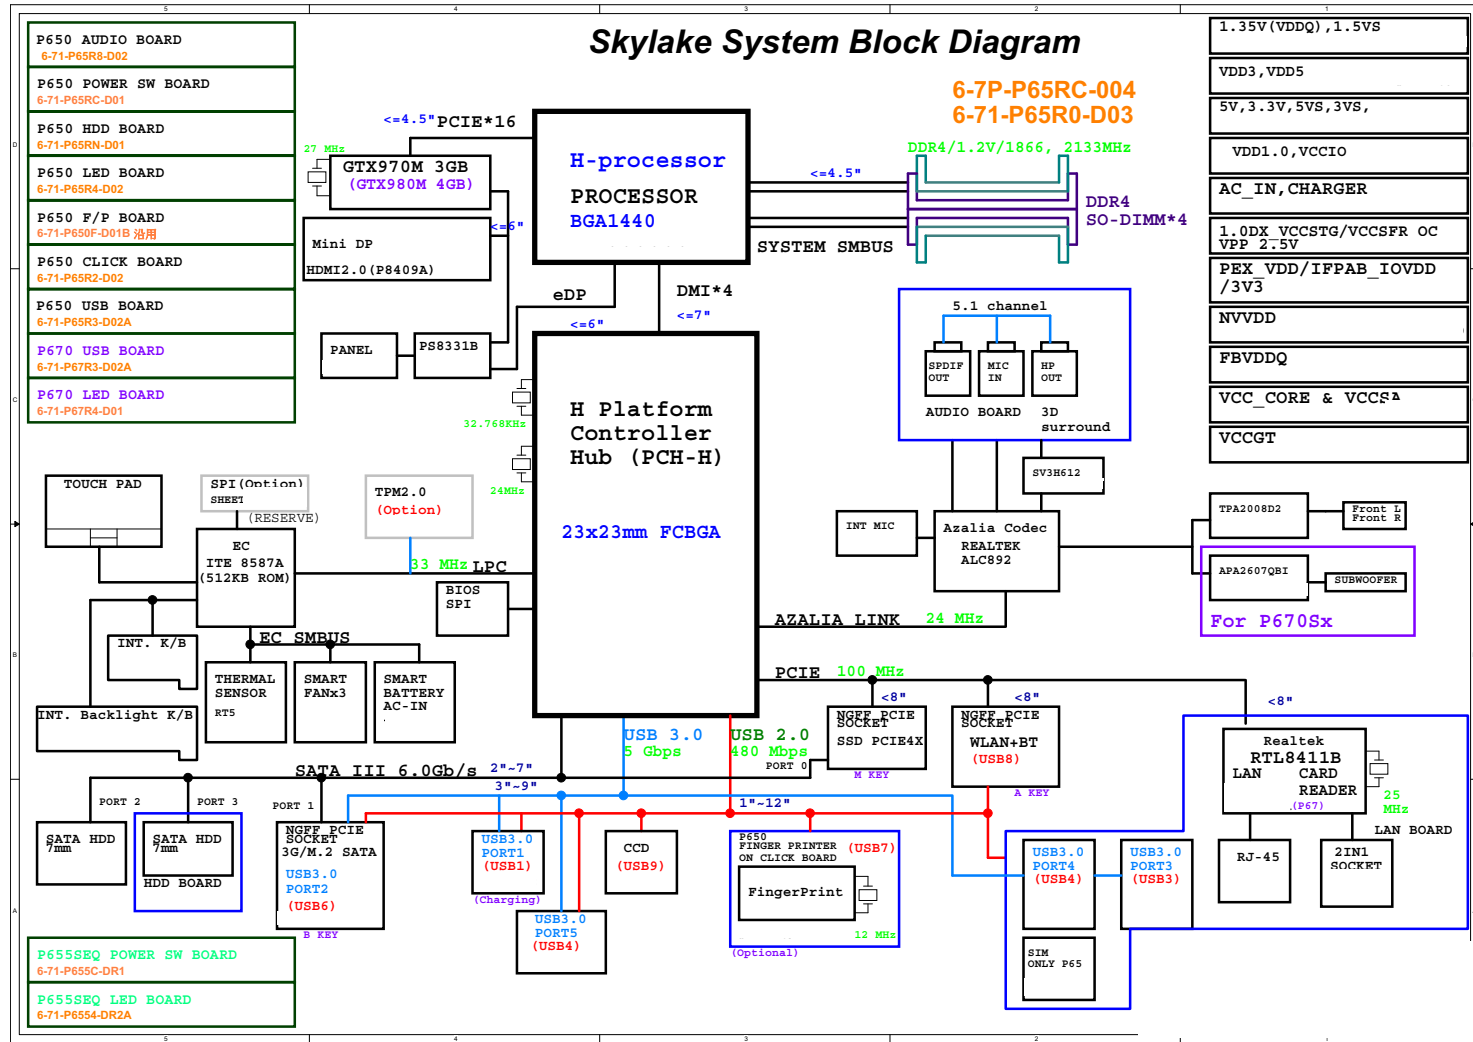


Processor 1/7

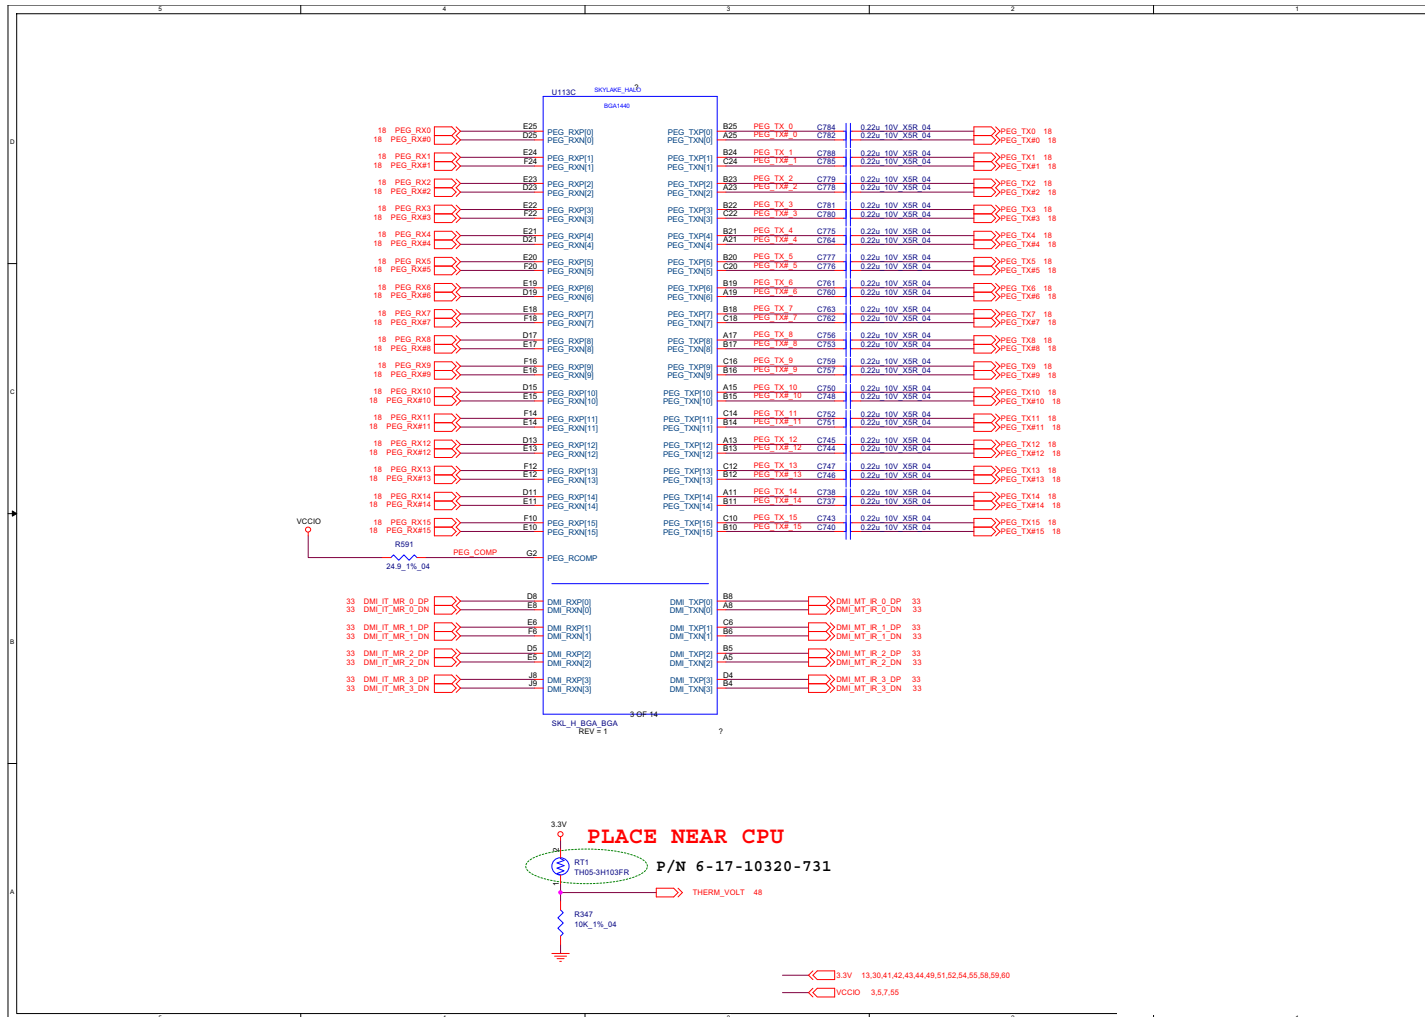

Sheet 2 of 79
Processor 1/7

B.Schematic Diagrams

Processor 3/7

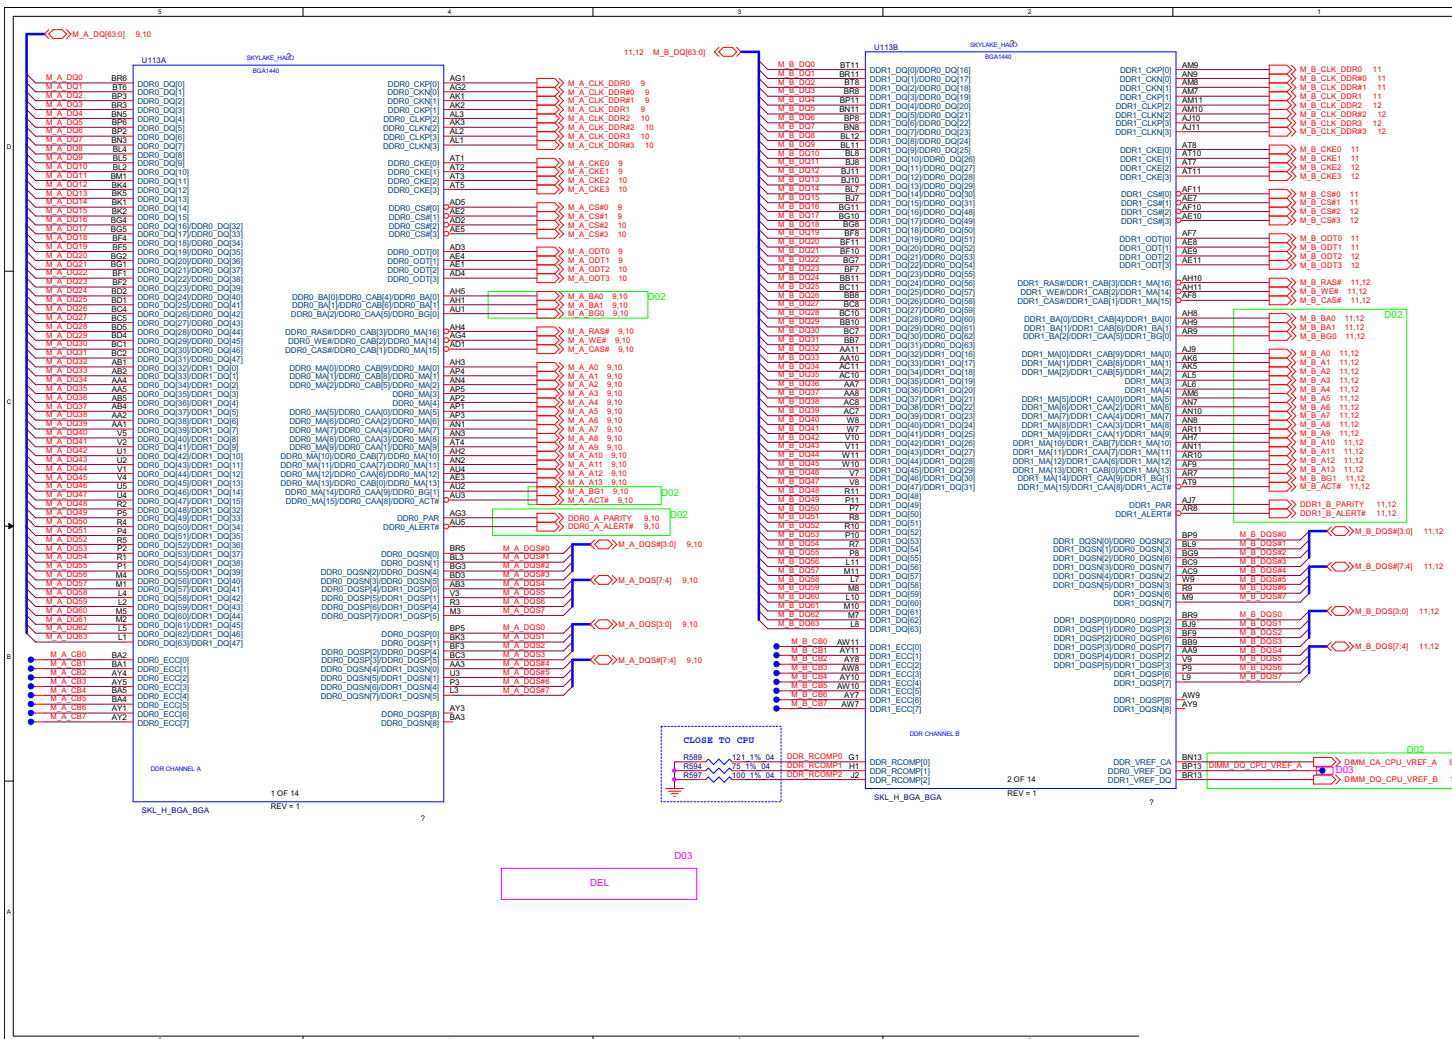


B.Schematic Diagrams


Sheet 4 of 79
Processor 3/7

Schematic Diagrams

Processor 4/7

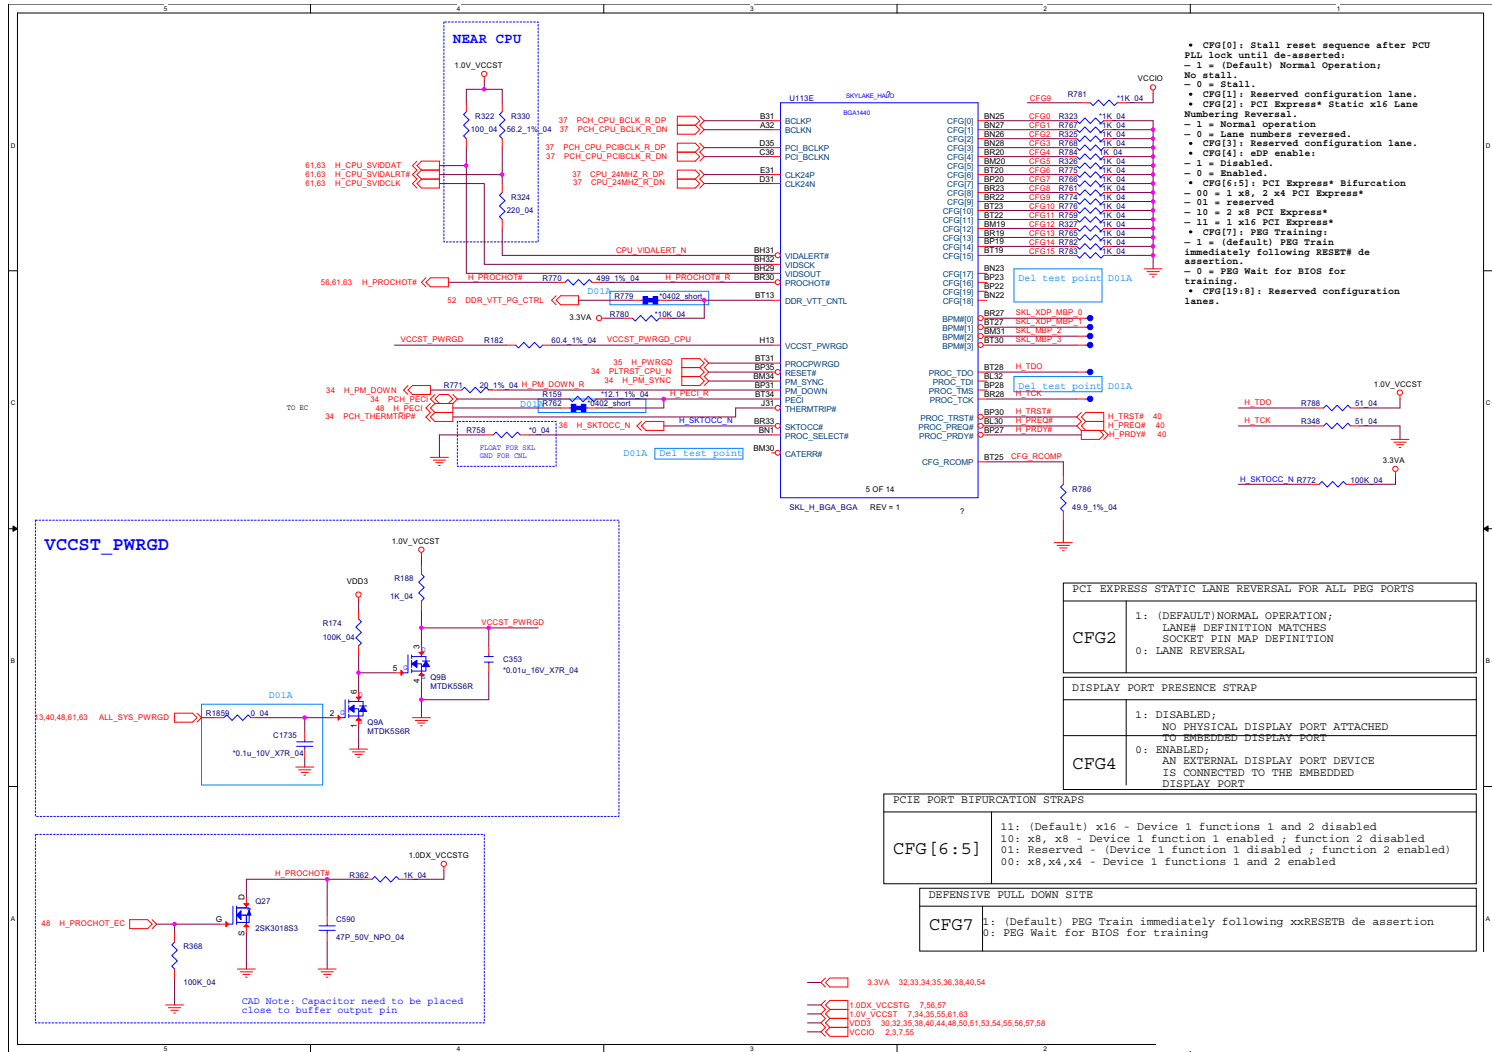

Processor 5/7

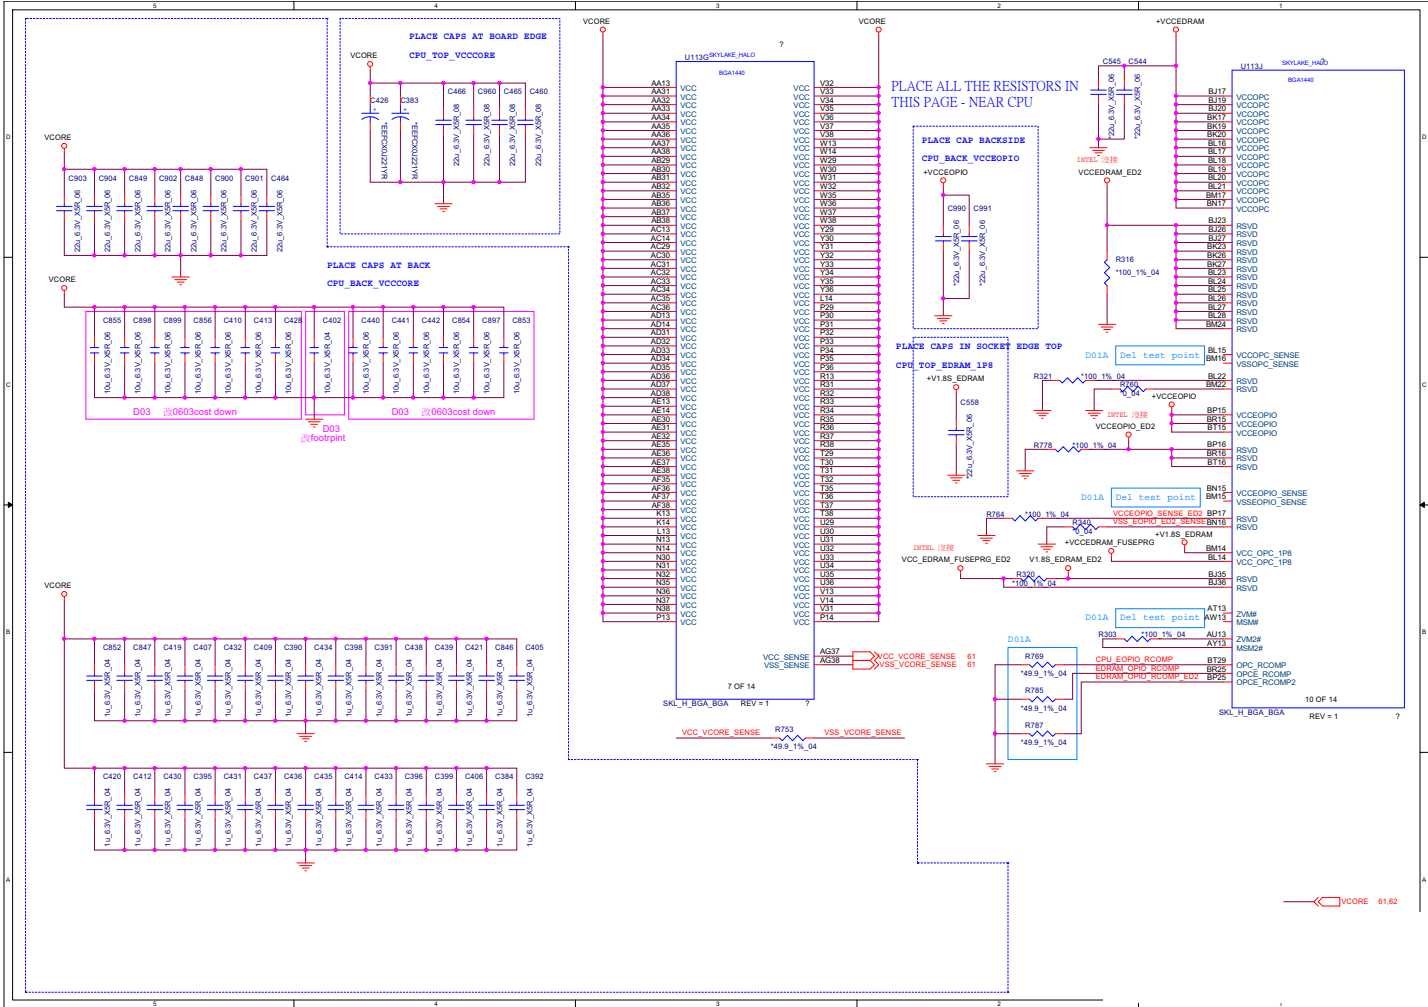

B.Schematic Diagrams


Sheet 6 of 79
Processor 5/7

Schematic Diagrams


Processor 6/7

B.Schematic Diagrams

Sheet 7 of 79
Processor 6/7

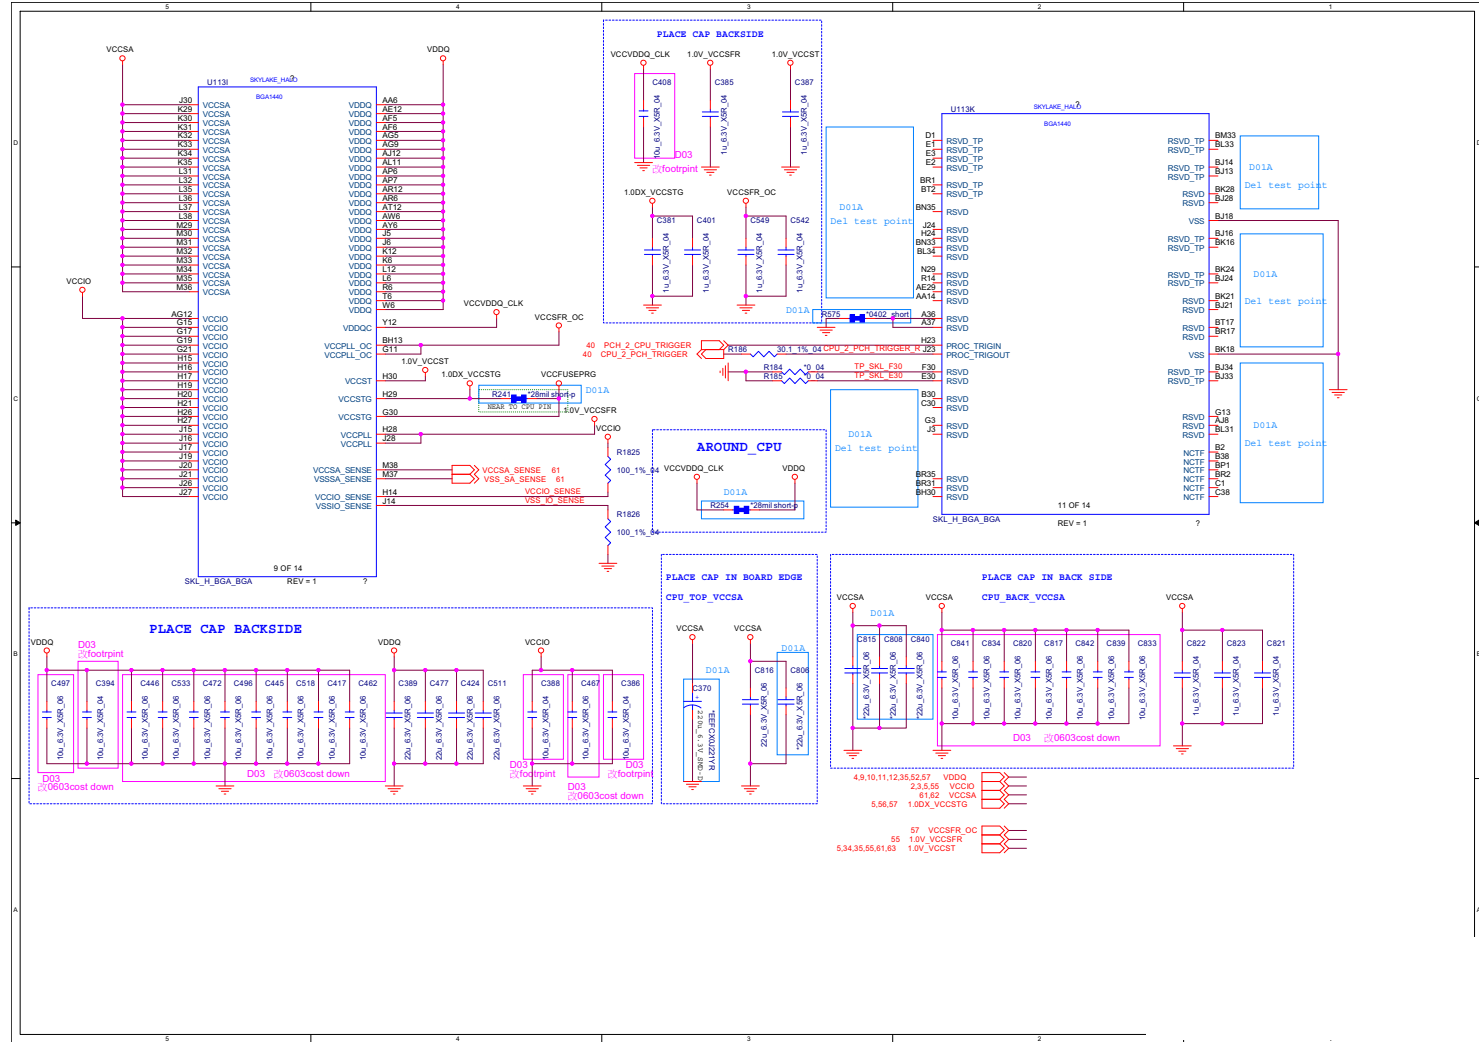


Processor 7/7

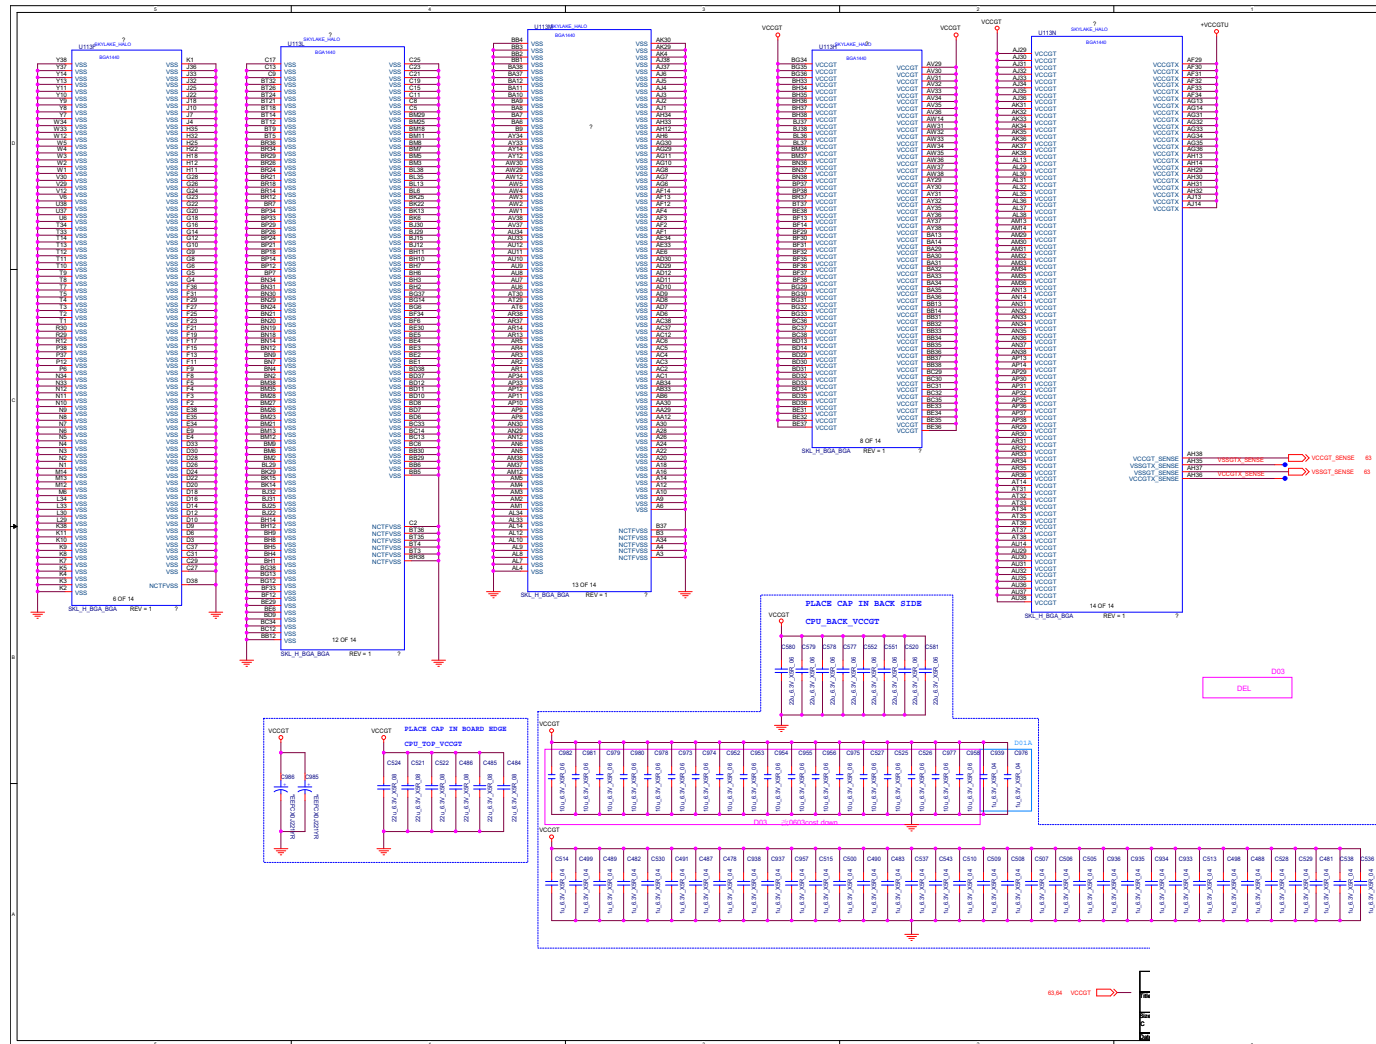

Sheet 8 of 79
Processor 7/7


B.Schematic Diagrams

DDR4 CHA SO-DIMM_0

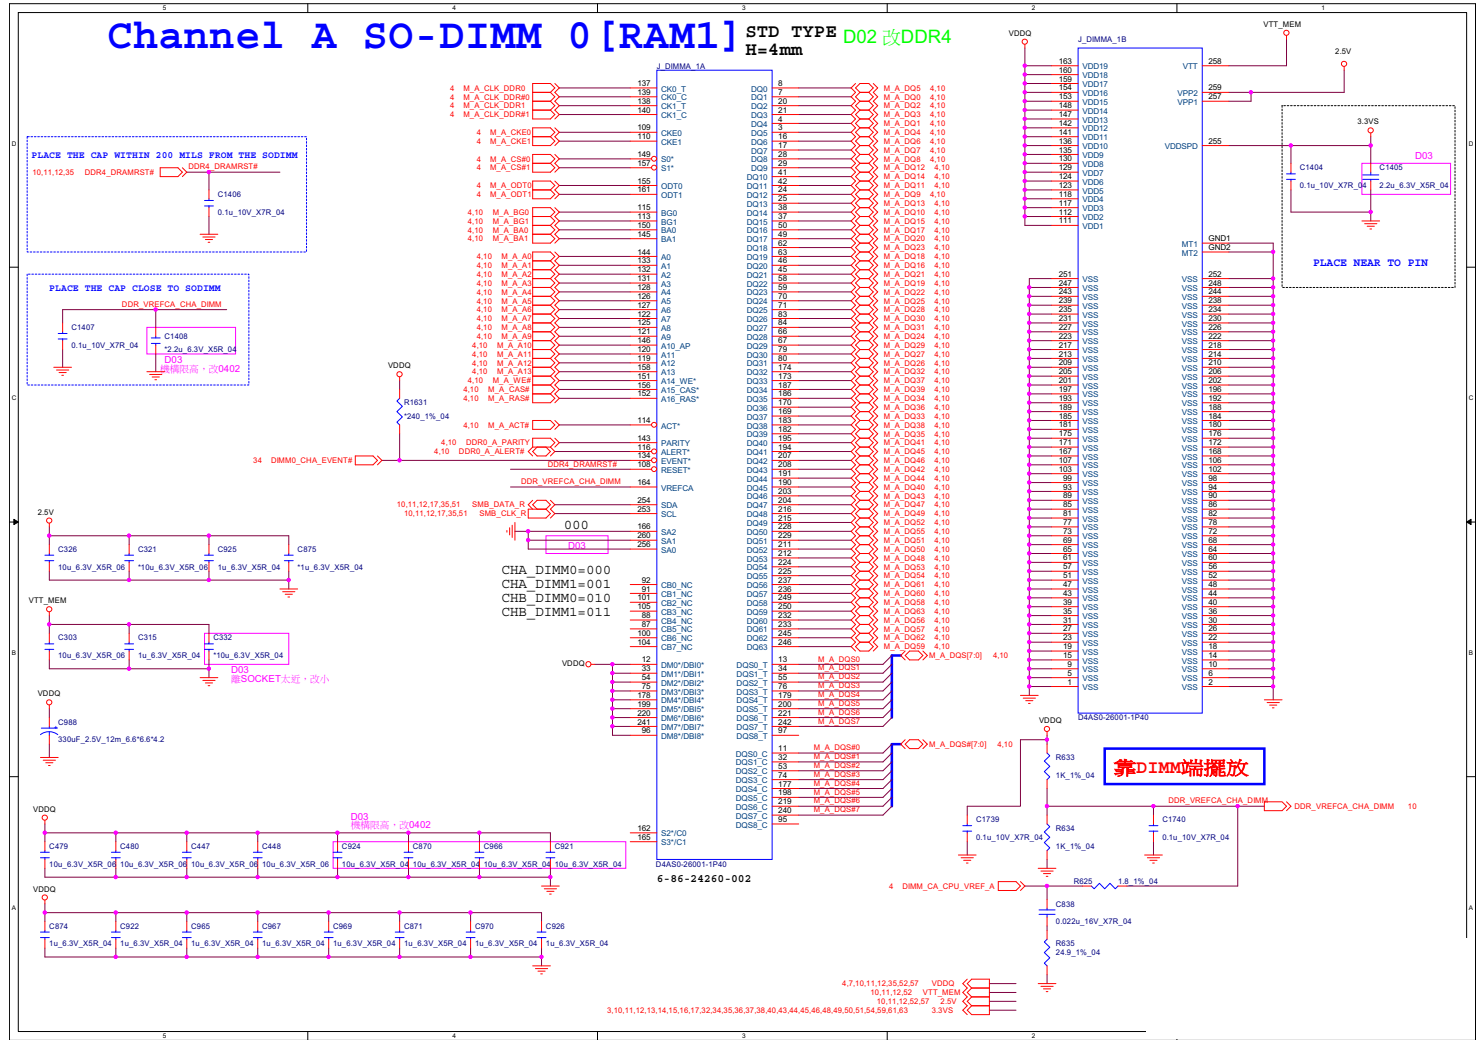

Sheet 9 of 79
DDR4 CHA SO-DIMM_0


DDR4 CHB SO-DIMM_1

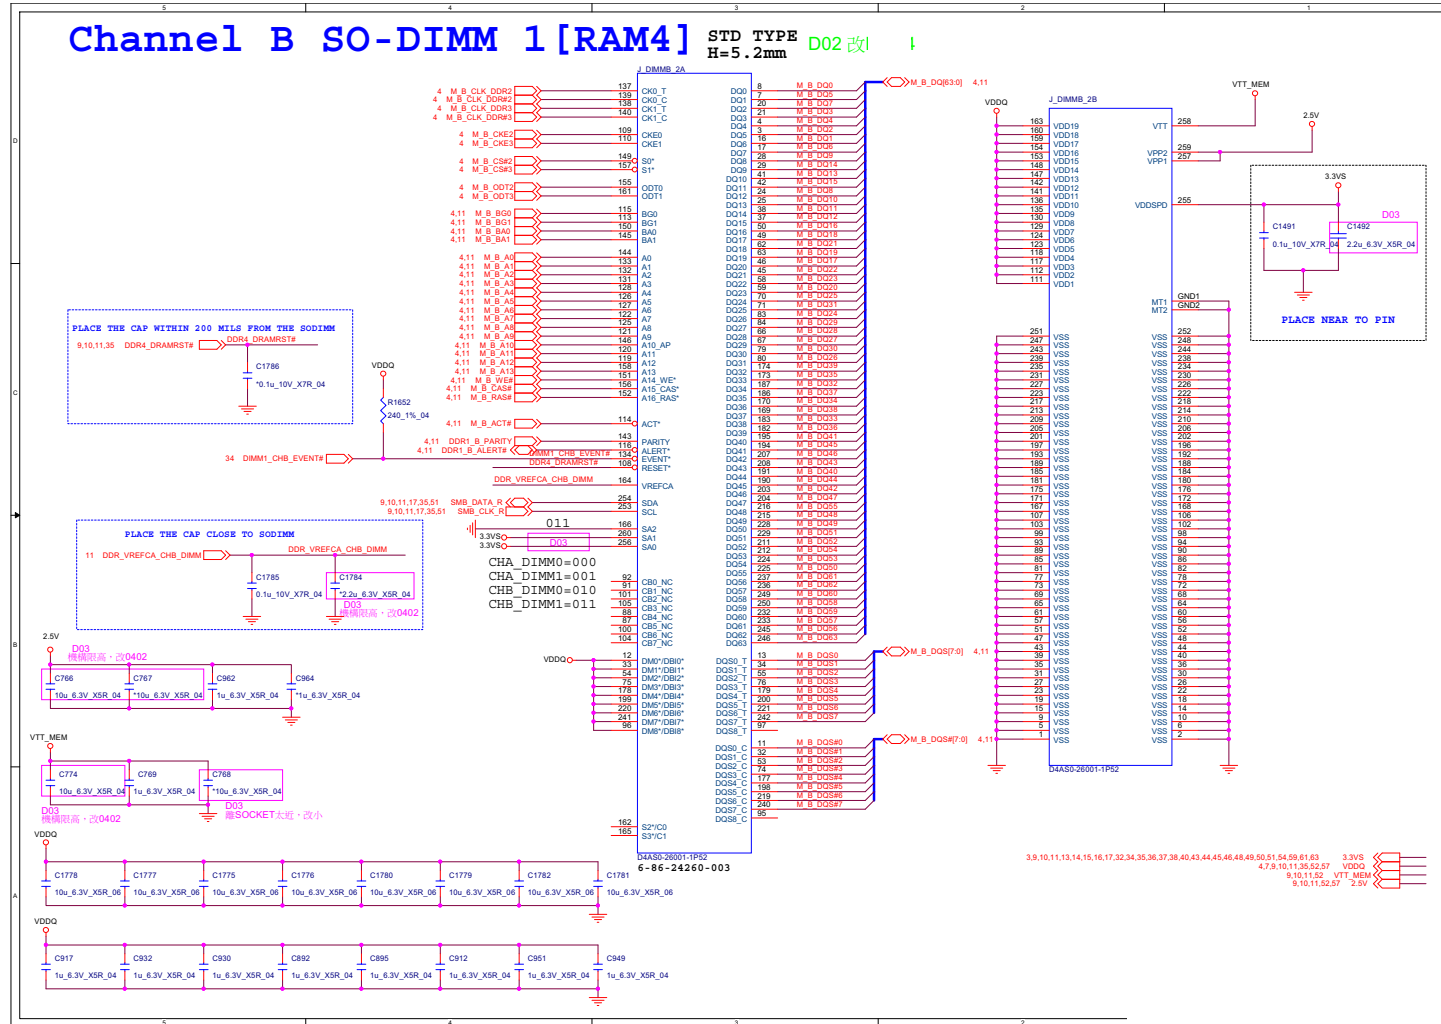

Sheet 12 of 79
 DDR4 CHB SO-DIMM_1




Panel, Inverter

Sheet 13 of 79
Panel, Inverter

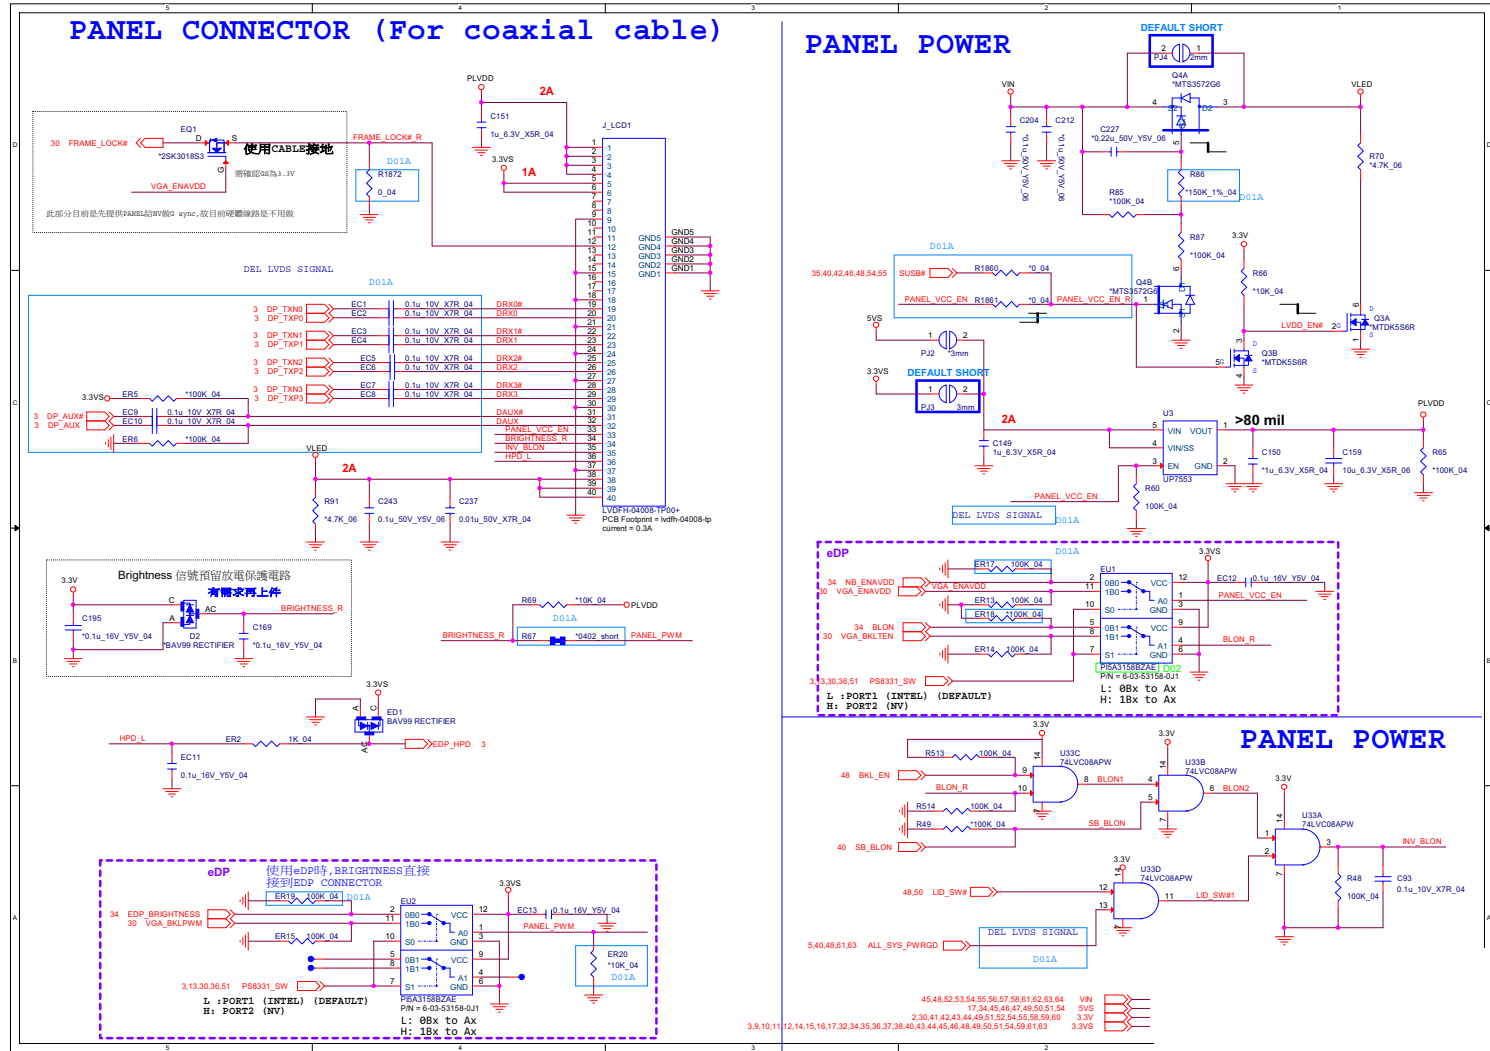

Redriver

	SN75DP130SS	PS8330B		TI 6-02-75130-BQ0	PARADA 6-03-08330-030
pin2	1uF GND	2.2uF GND	pin2	U39 SN75DP130SSRGZR	PS8330B 2.2u_6.3V_X5R_04 0_04
pin3	*10K VCC, *10K GND	GND	pin3	R618 *10K_04	4.99K_1%_04 10K_04
pin4	x	*4.7K VCC, *4.7K GND	pin7	R627 X	10K_04
pin5	x	*4.7K VCC, *4.7K GND	pin35	R619 X	2.2u_6.3V_X5R_04
pin7	x	4.99K GND	pin35	C828 0.22u_10V_X5R_04	
pin35	0.22uF GND	10K VCC, 2.2uF GND	pin2	U44 SN75DP130SSRGZR	PS8330B 2.2u_6.3V_X5R_04 0_04
pin40	x	*4.7K VCC, *4.7K GND	pin3	R694 *10K_04	4.99K_1%_04 10K_04
pin46	x	x	pin7	R726 X	10K_04
			pin35	R691 X	2.2u_6.3V_X5R_04
			pin35	C890 0.22u_10V_X5R_04	

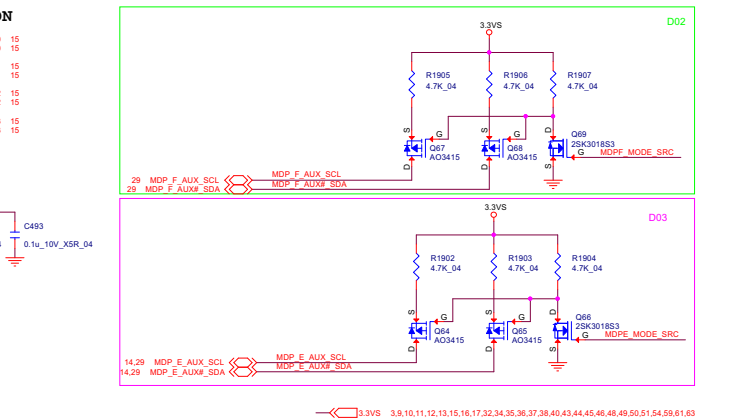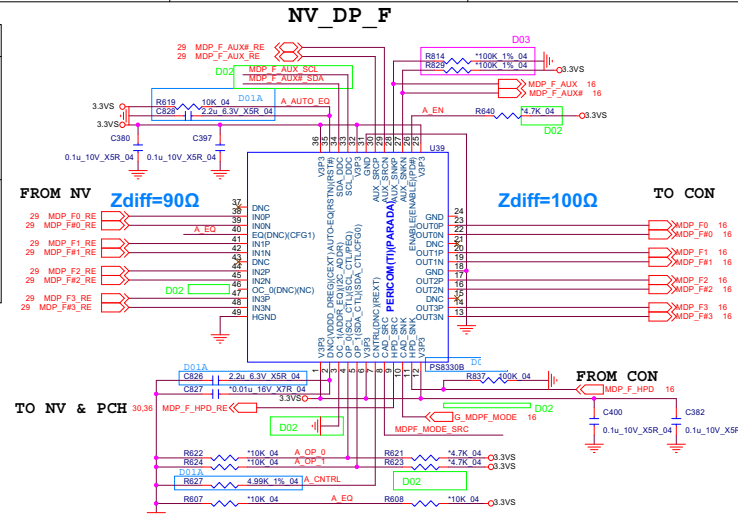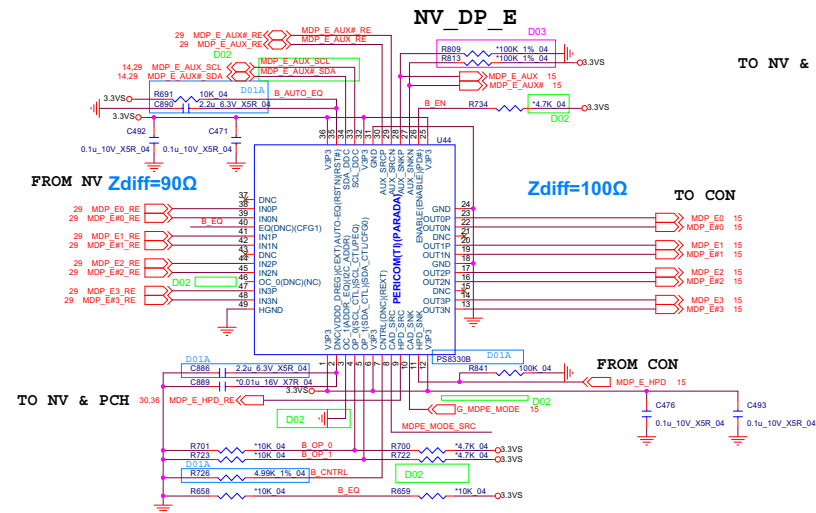


Sheet 14 of 79
Redriver


B.Schematic Diagrams

Mini DP Port E

Sheet 15 of 79
Mini DP Port E

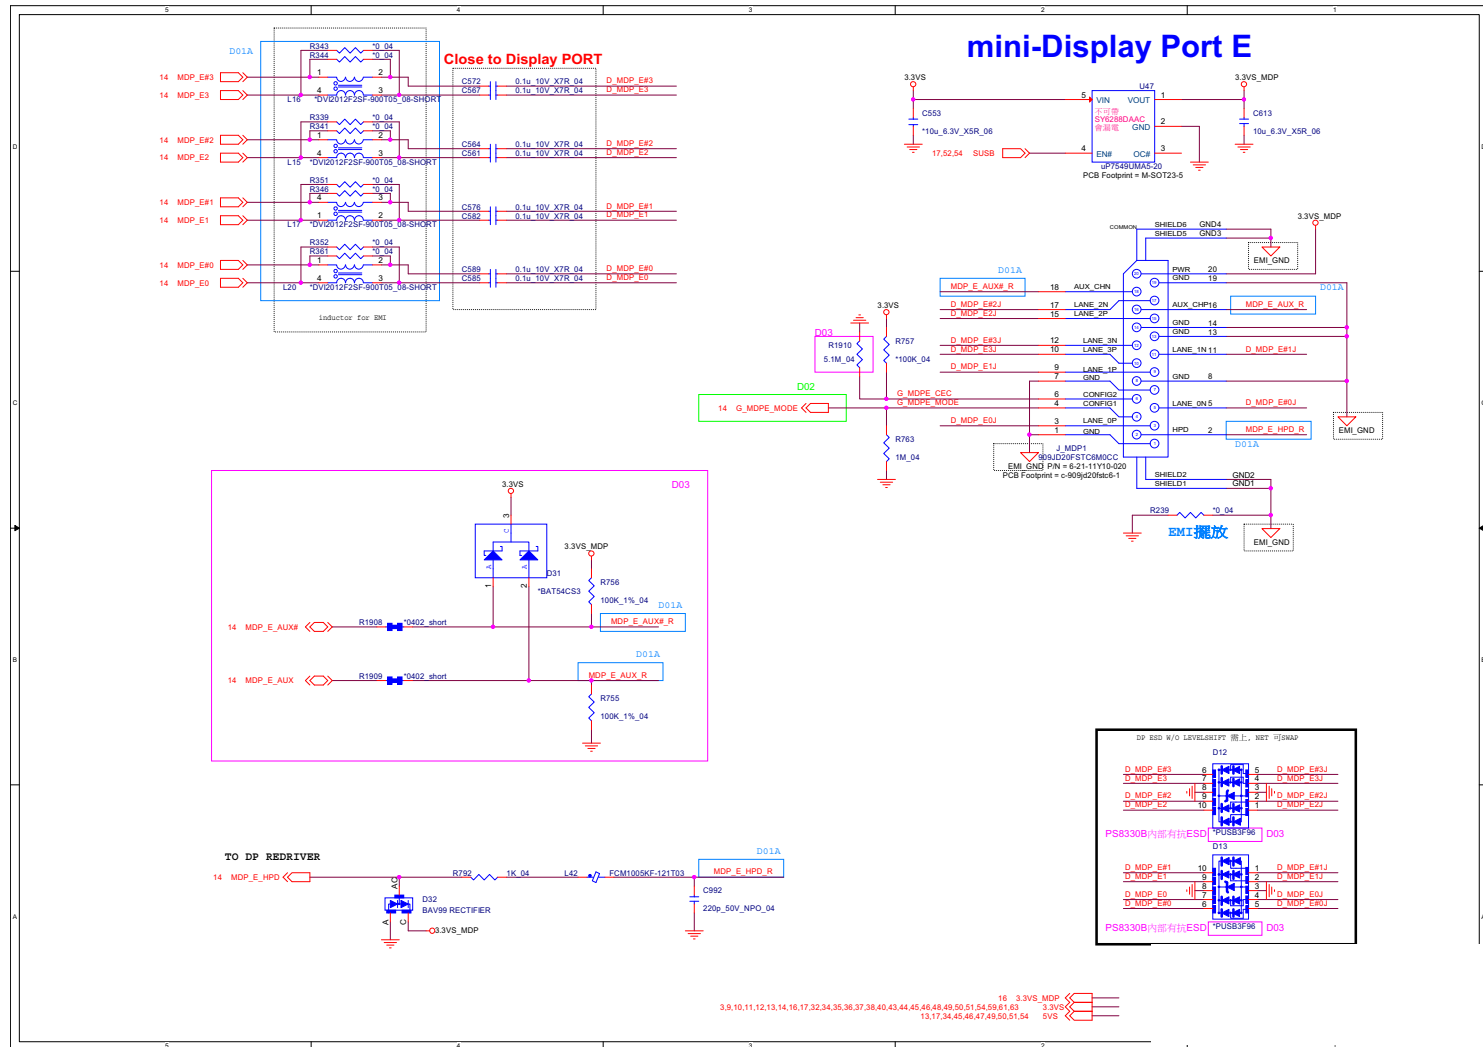

Mini DP Port F

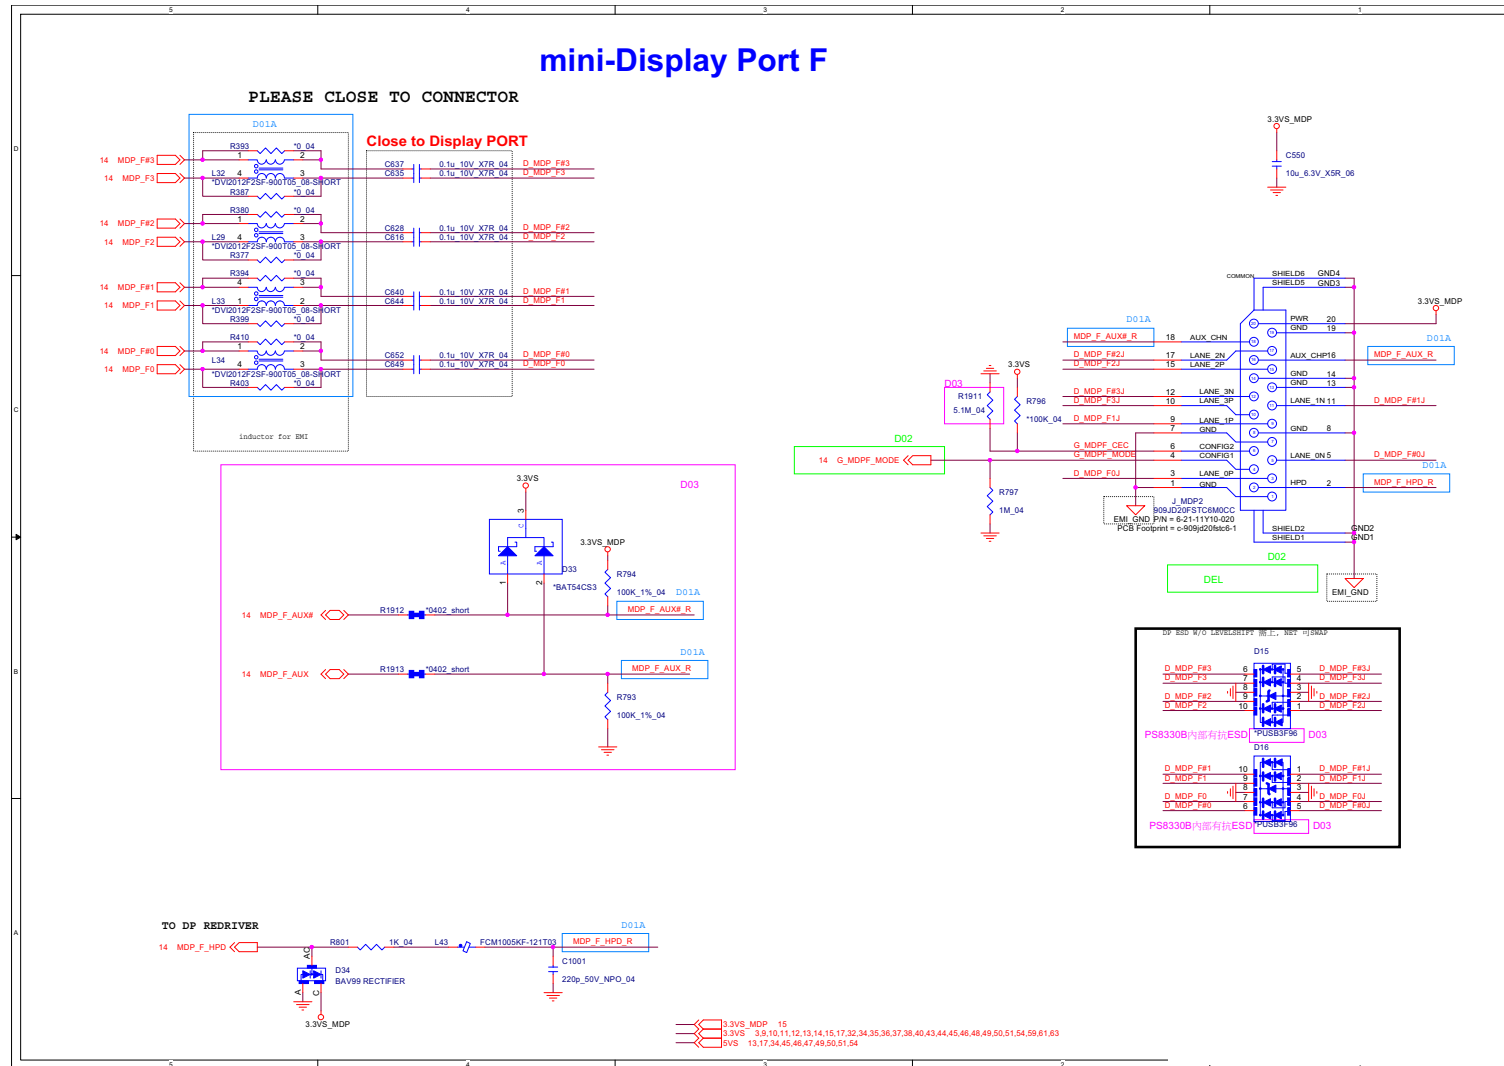


Sheet 16 of 79
Mini DP Port F


B.Schematic Diagrams

HDMI Connector

Sheet 17 of 79
HDMI Connector

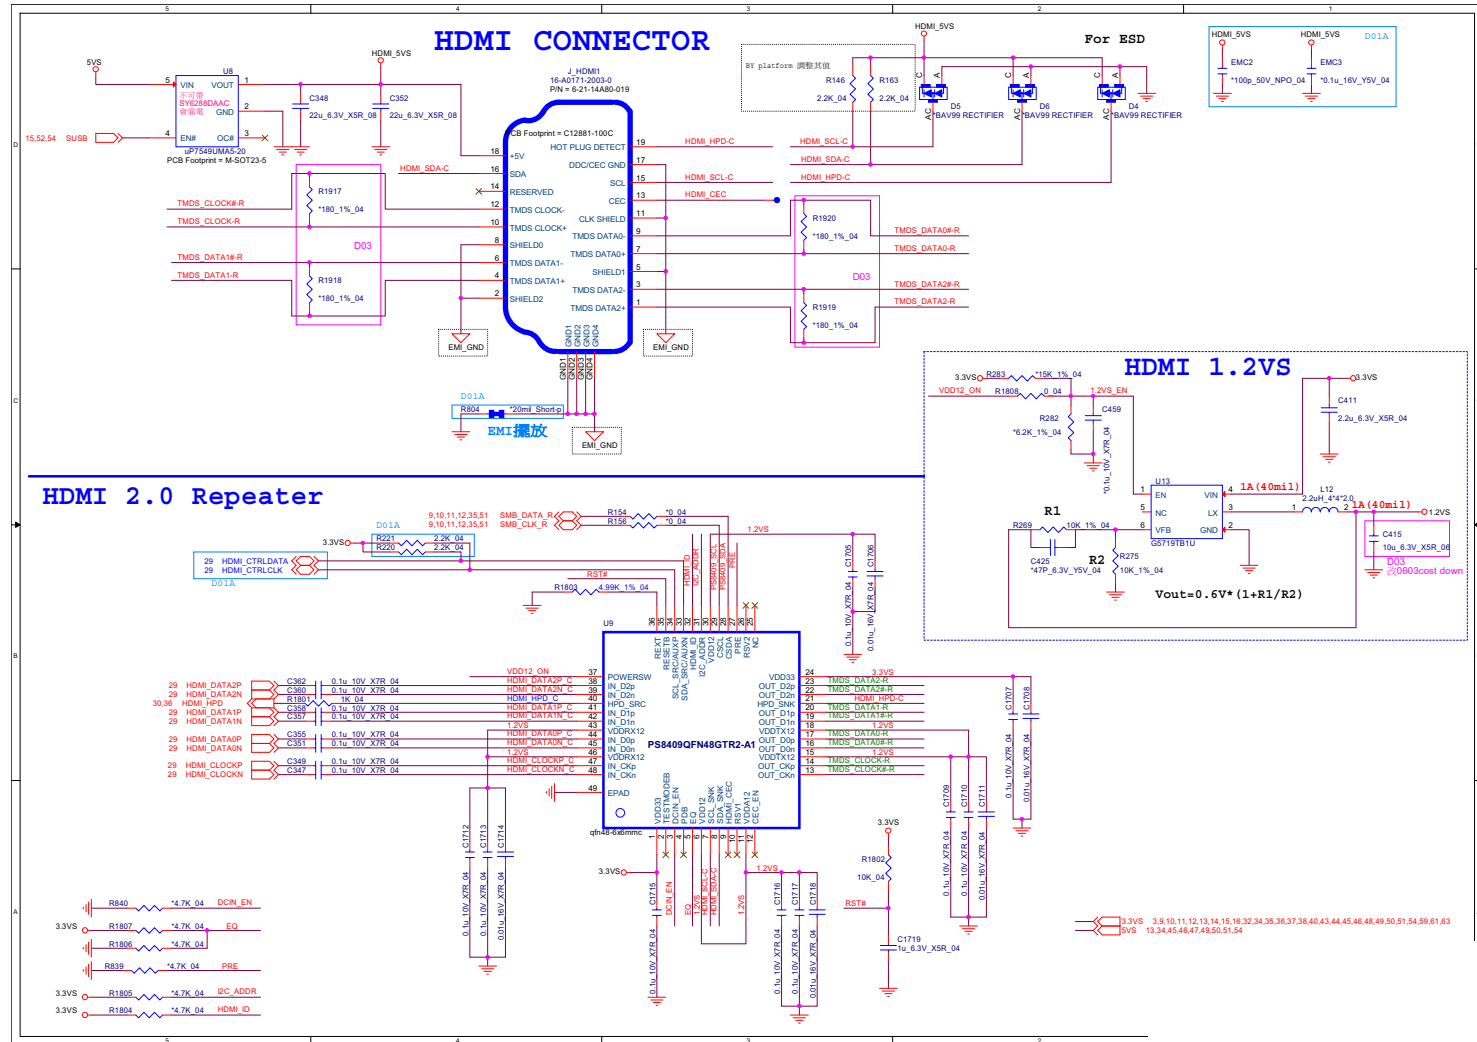


VGA PCI Express

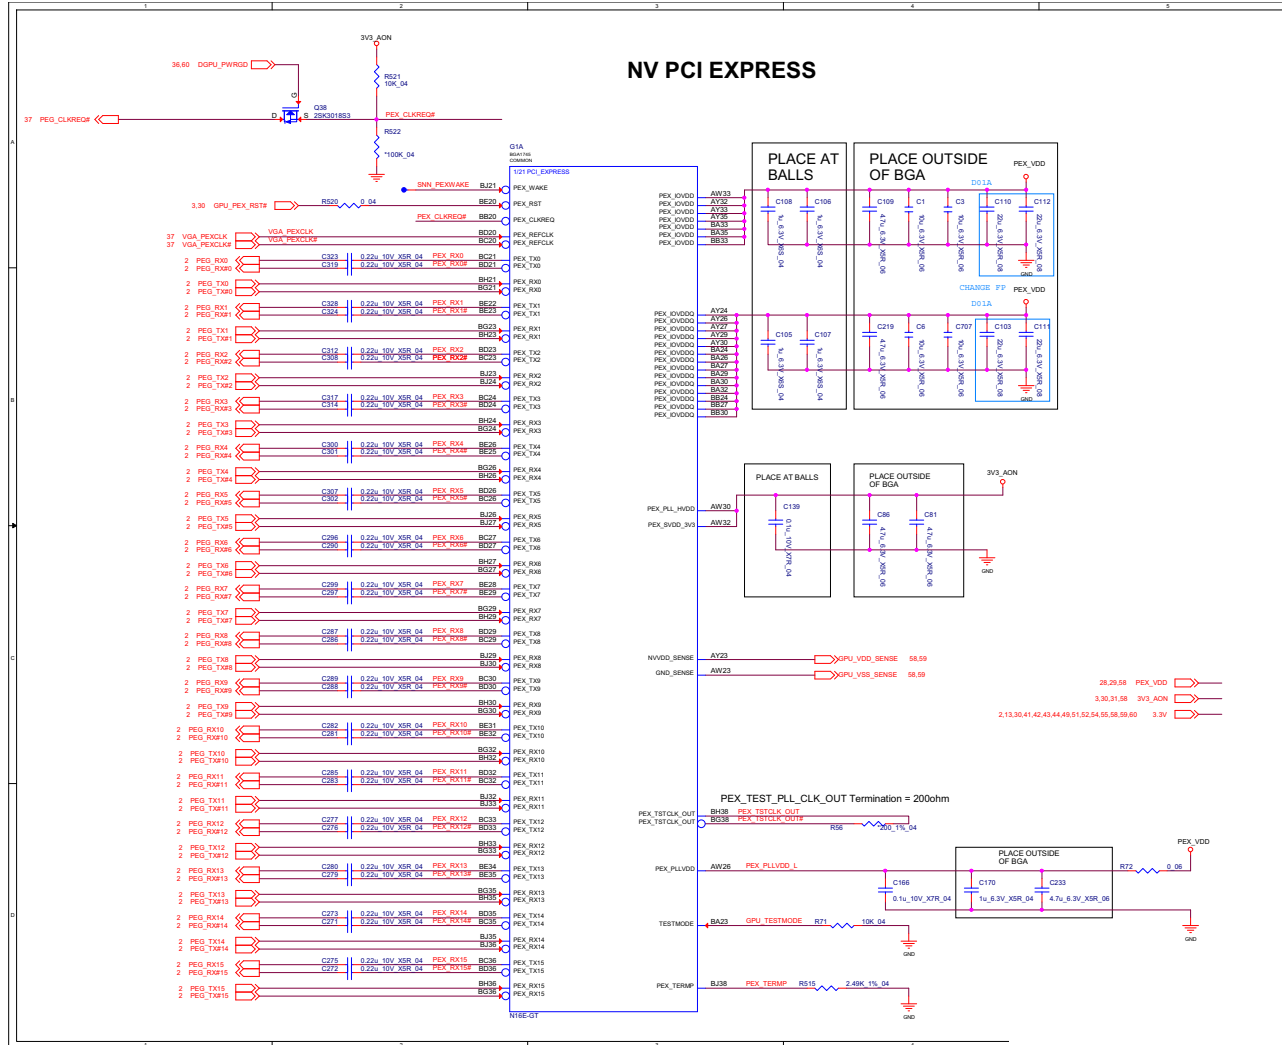


Sheet 18 of 79
VGA PCI Express

VGA Frame Buffer Partition

Sheet 19 of 79
VGA Frame Buffer Partition

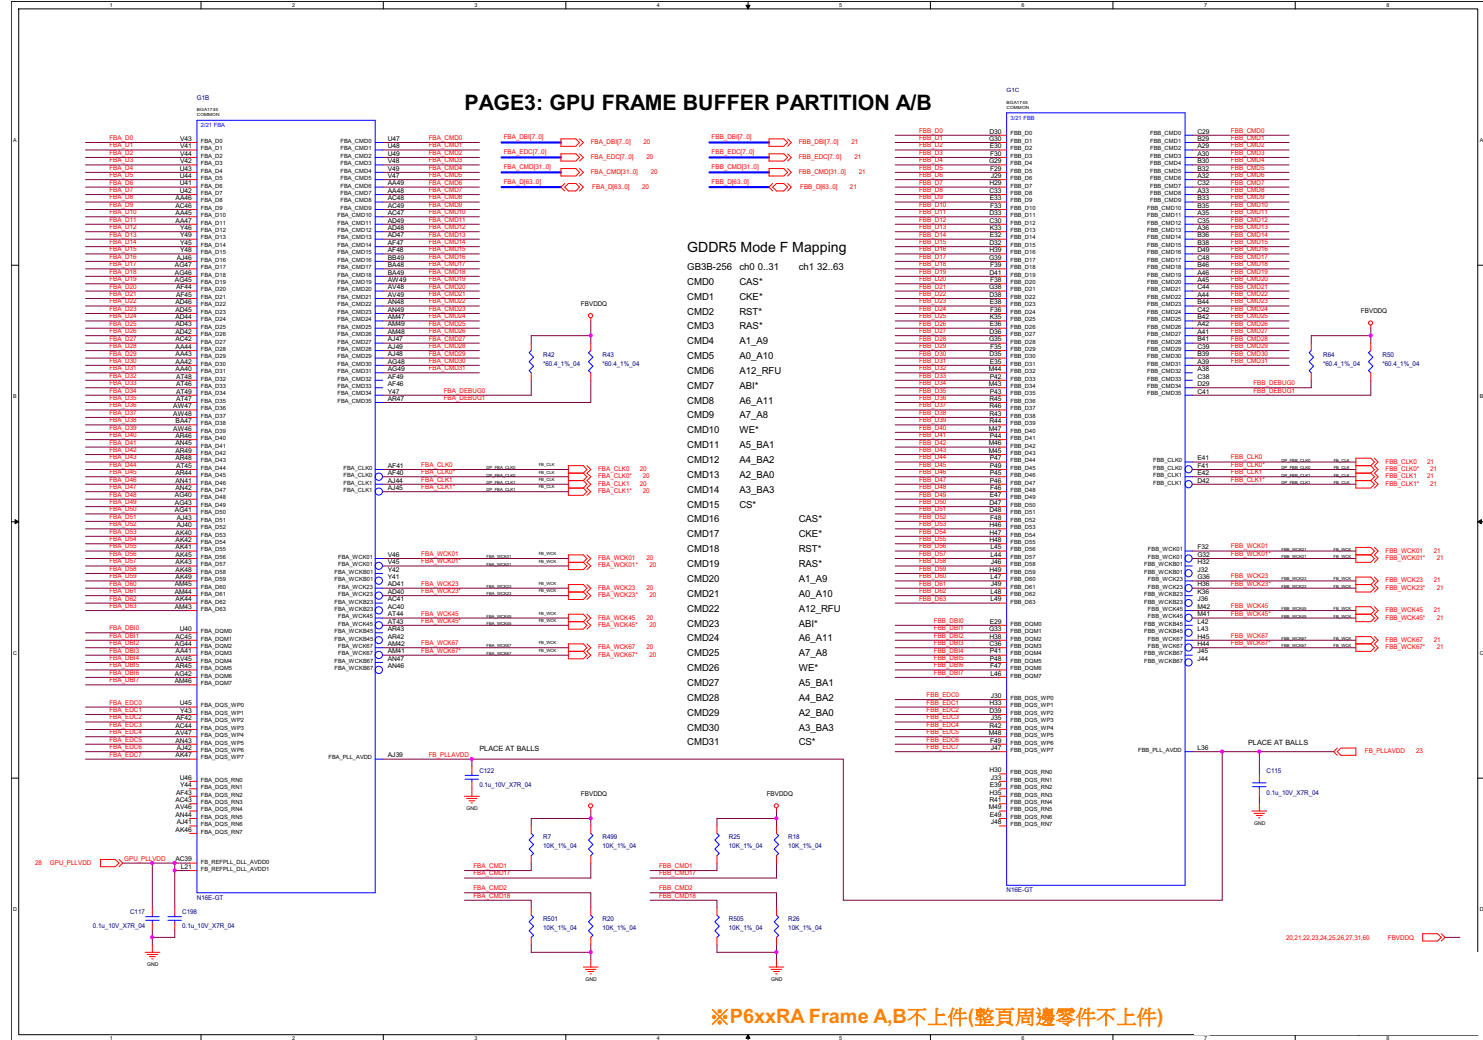

Frame Buffer Partition A

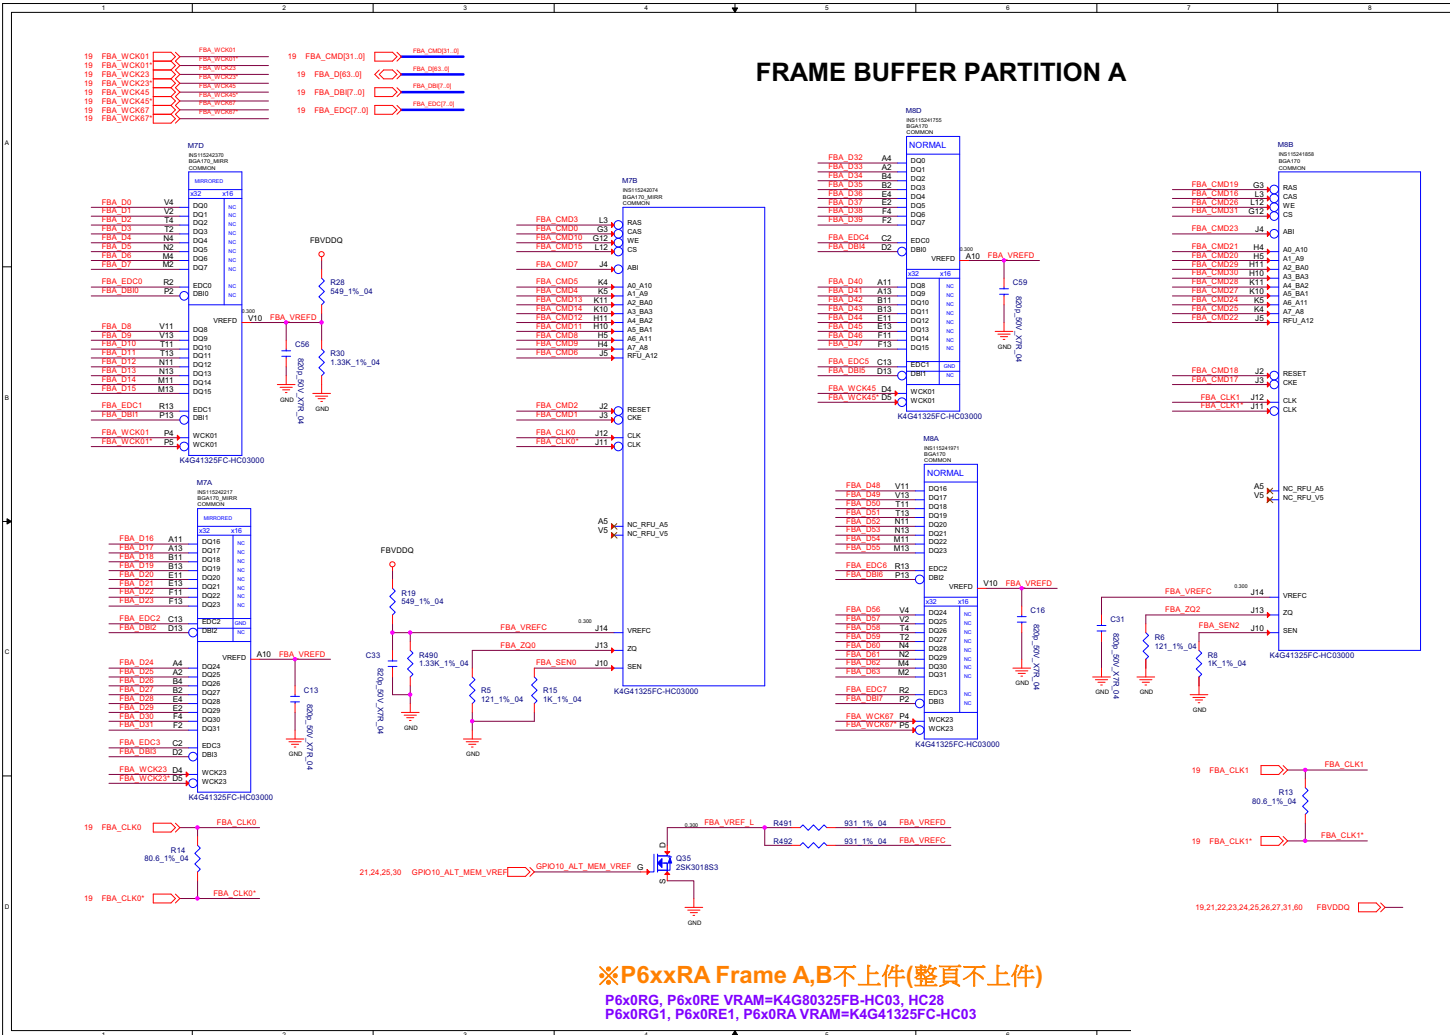


Sheet 20 of 79
Frame Buffer
Partition A


B.Schematic Diagrams

Frame Buffer Partition B

Sheet 21 of 79
Frame Buffer
Partition B

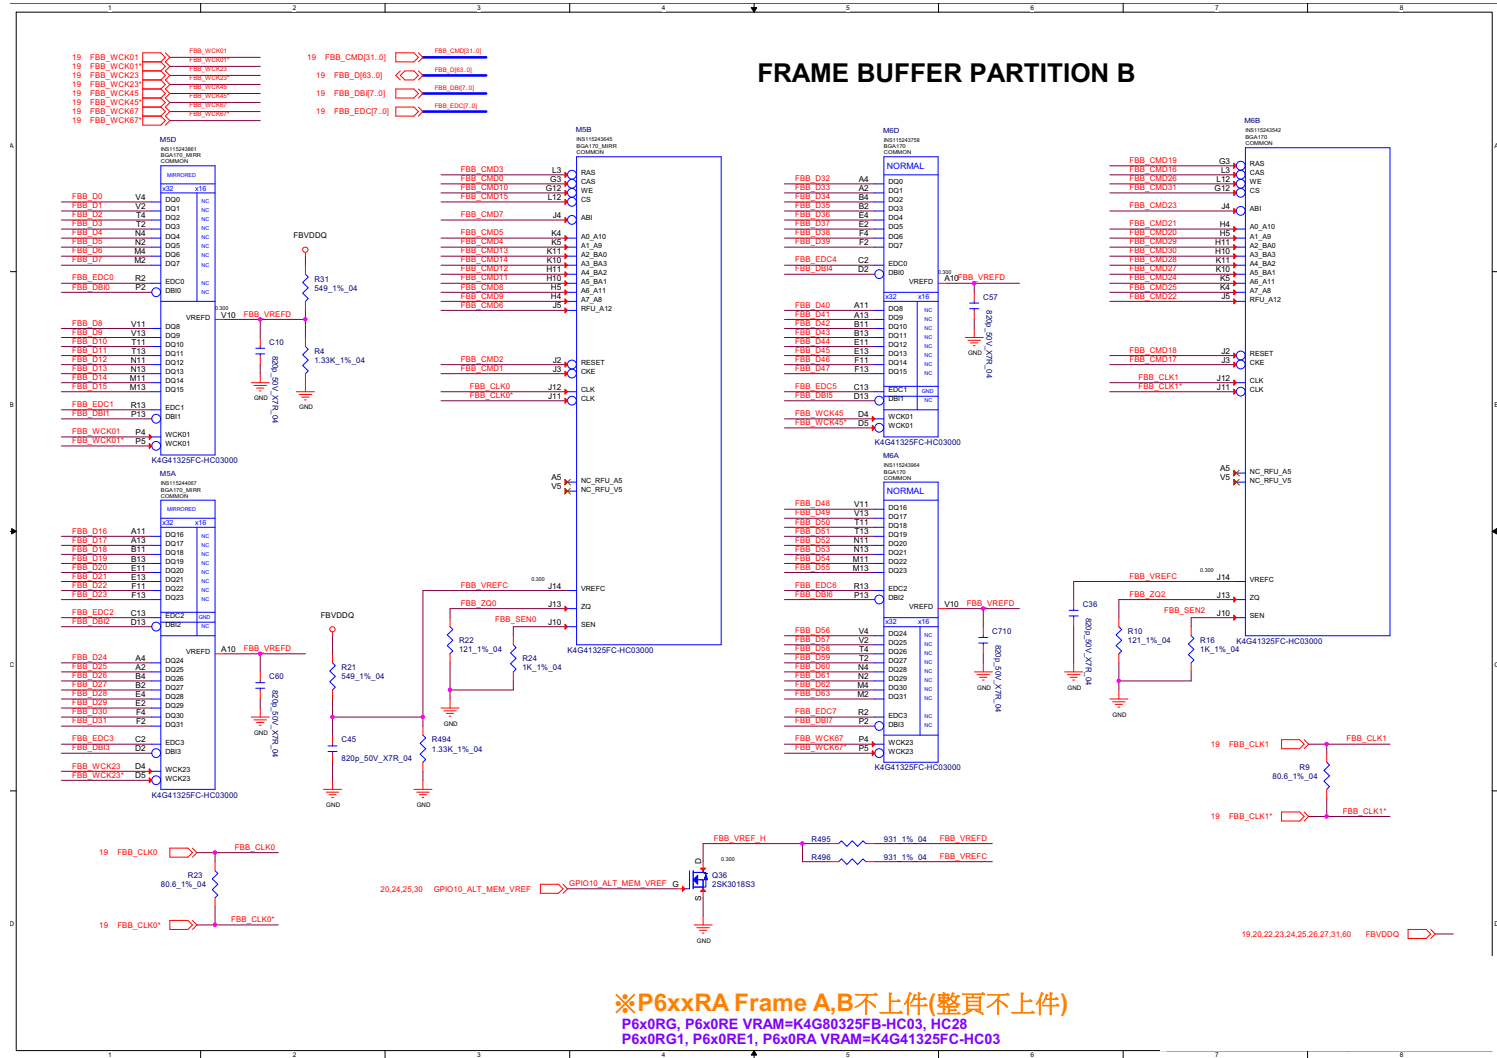

Frame Buffer Partition A_B

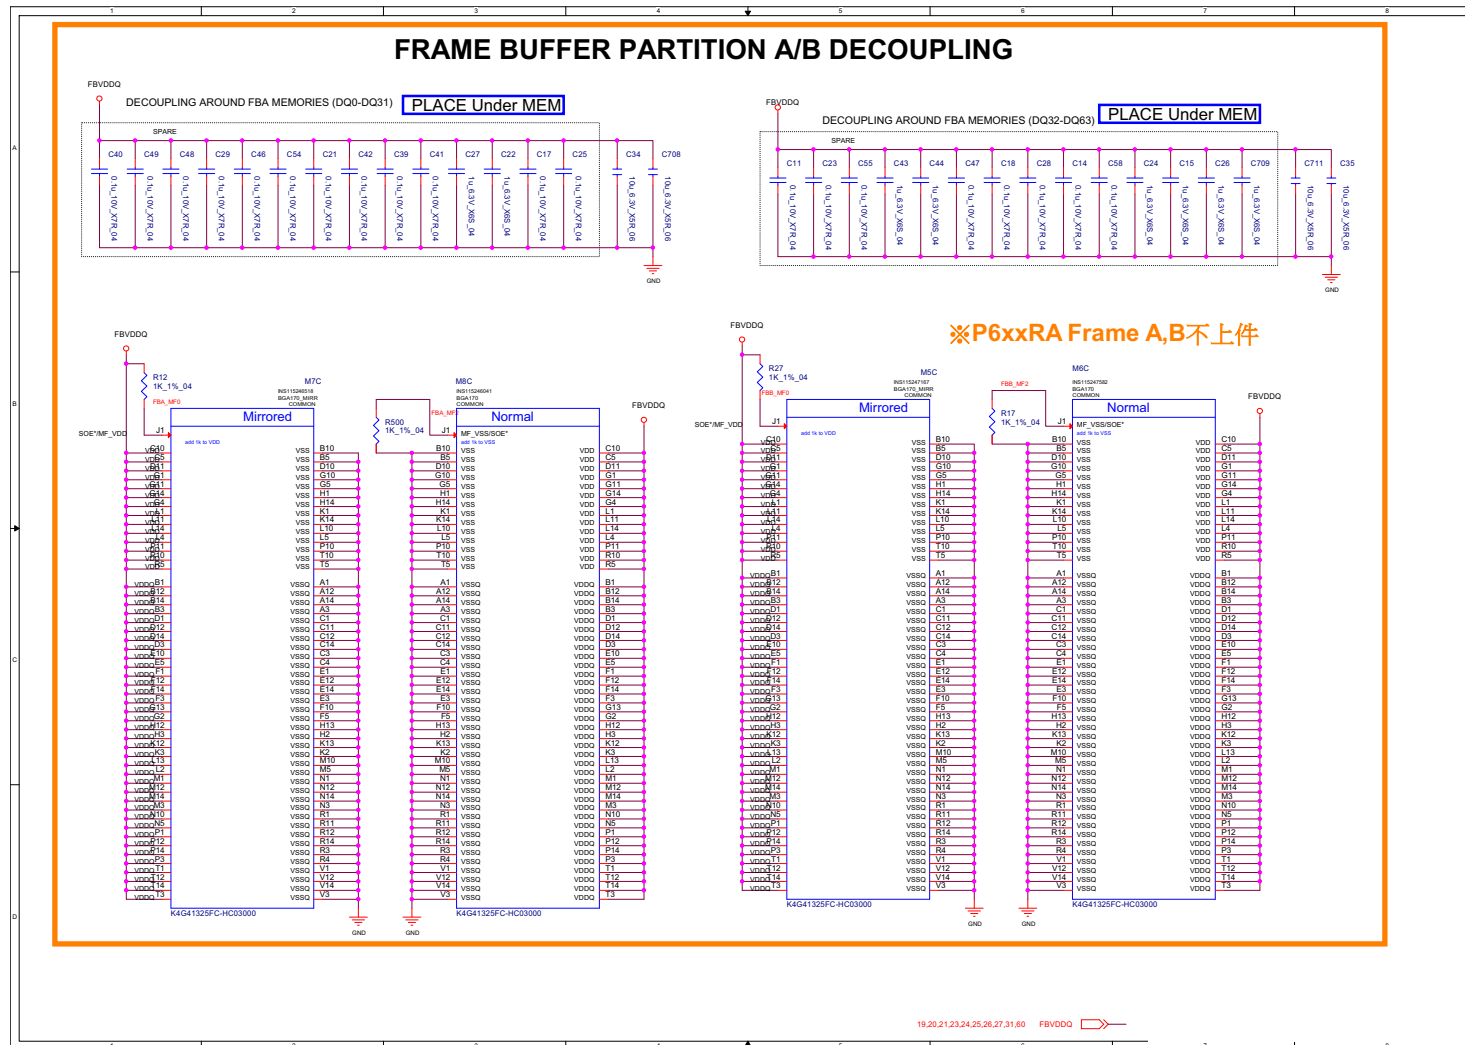


Sheet 22 of 79
Frame Buffer
Partition A_B

B.Schematic Diagrams


GPU Frame Buffer Partition

Sheet 23 of 79
GPU Frame Buffer Partition

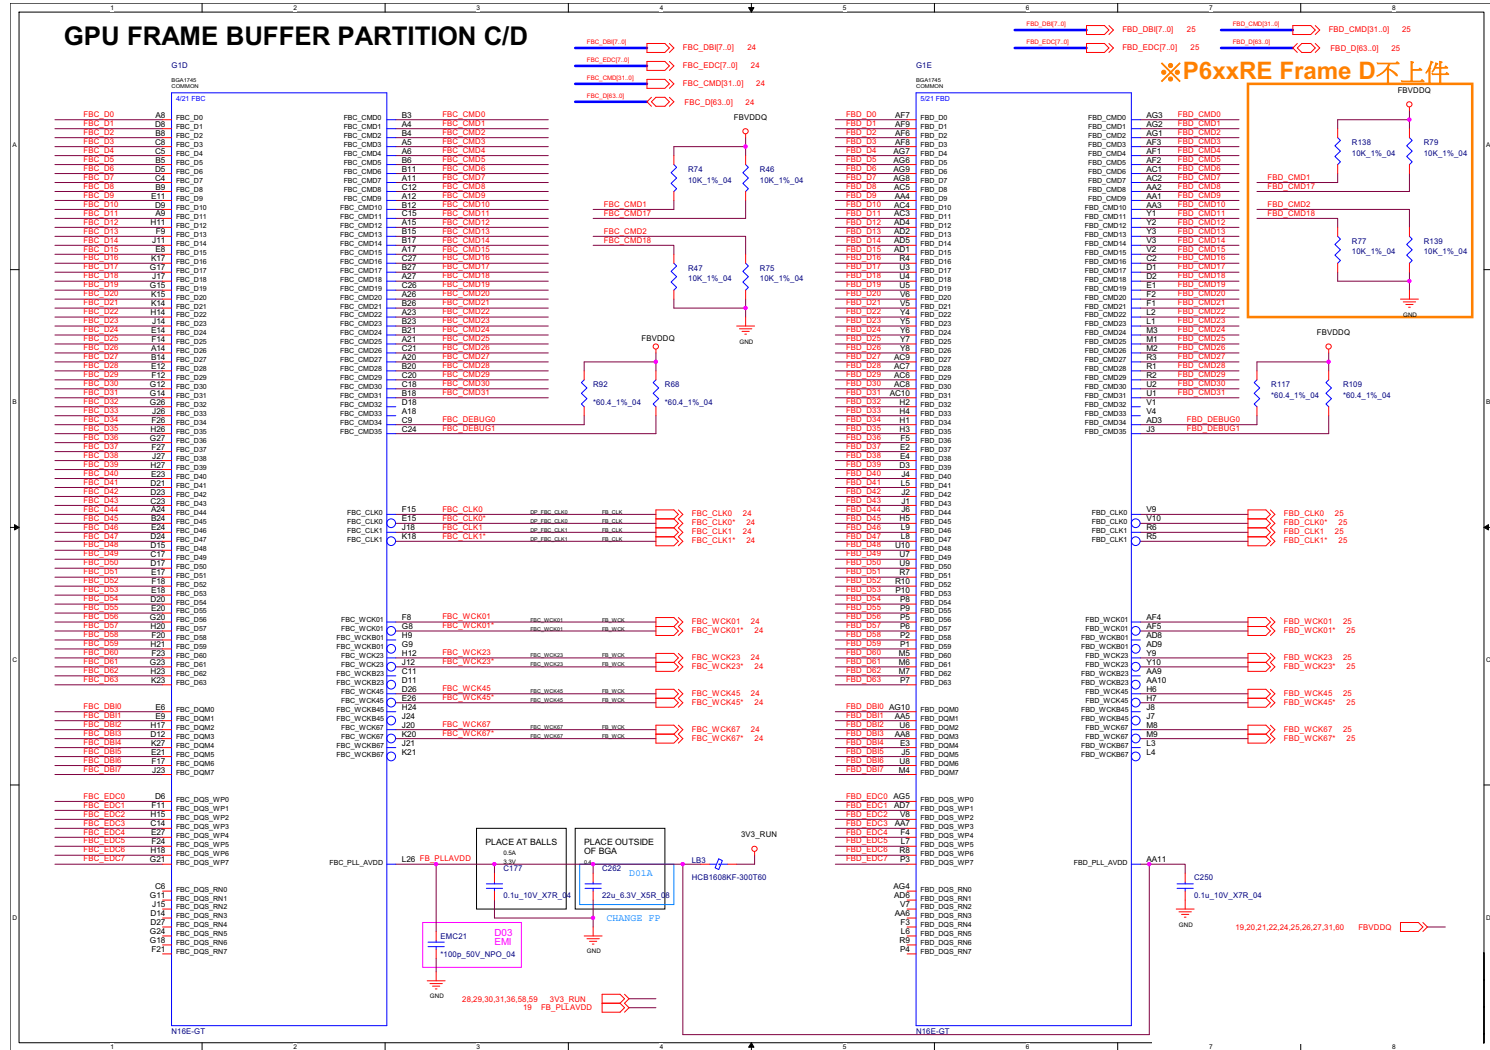





Frame Buffer Partition D

Sheet 25 of 79
Frame Buffer
Partition D

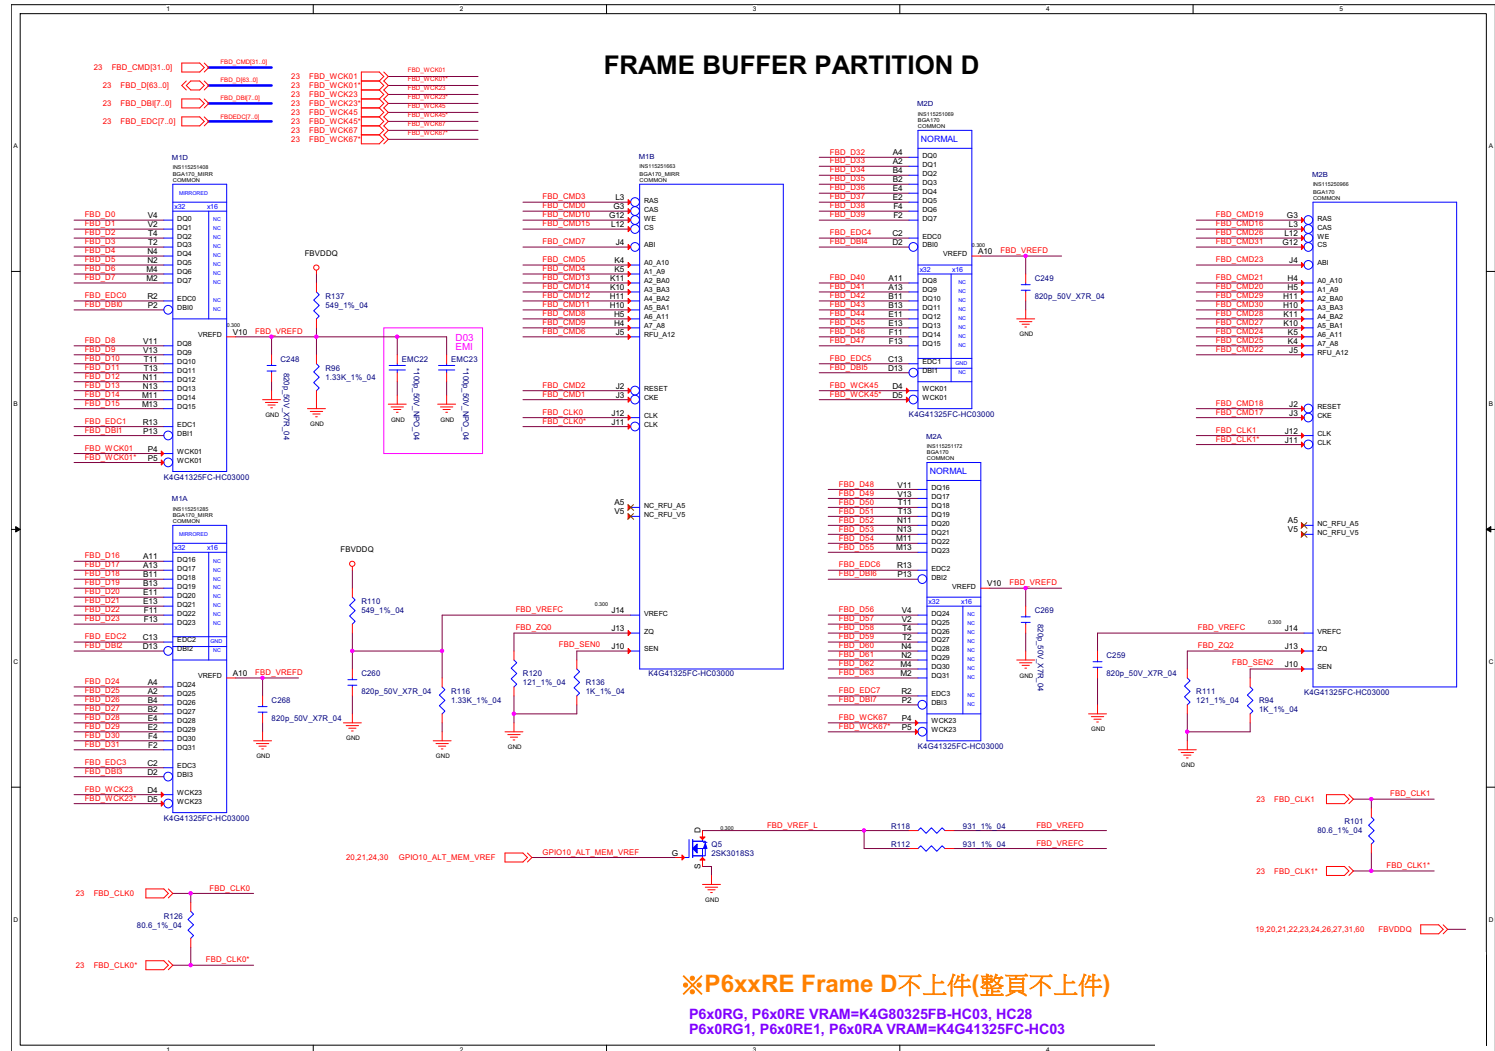

Frame Buffer Partition C_D

FRAME BUFFER PARTITION C/D DECOUPLING

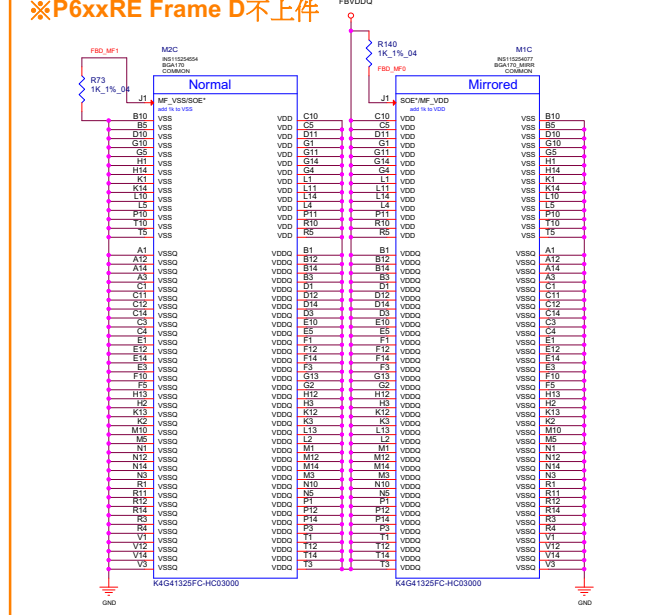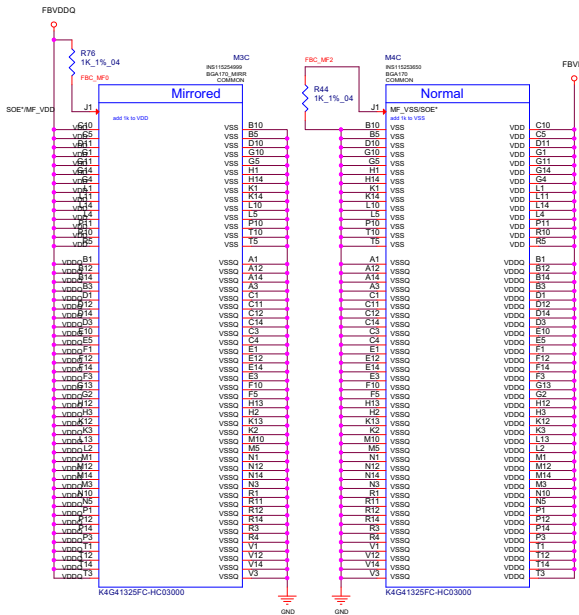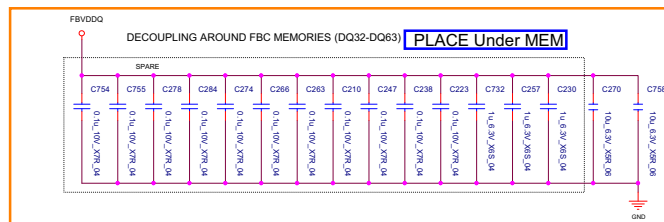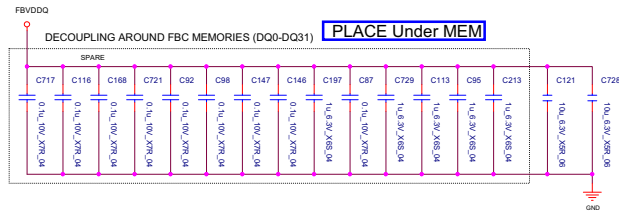


※P6xxRE Frame D不上件

Sheet 26 of 79
Frame Buffer
Partition C_D


B.Schematic Diagrams

GPU Decoupling

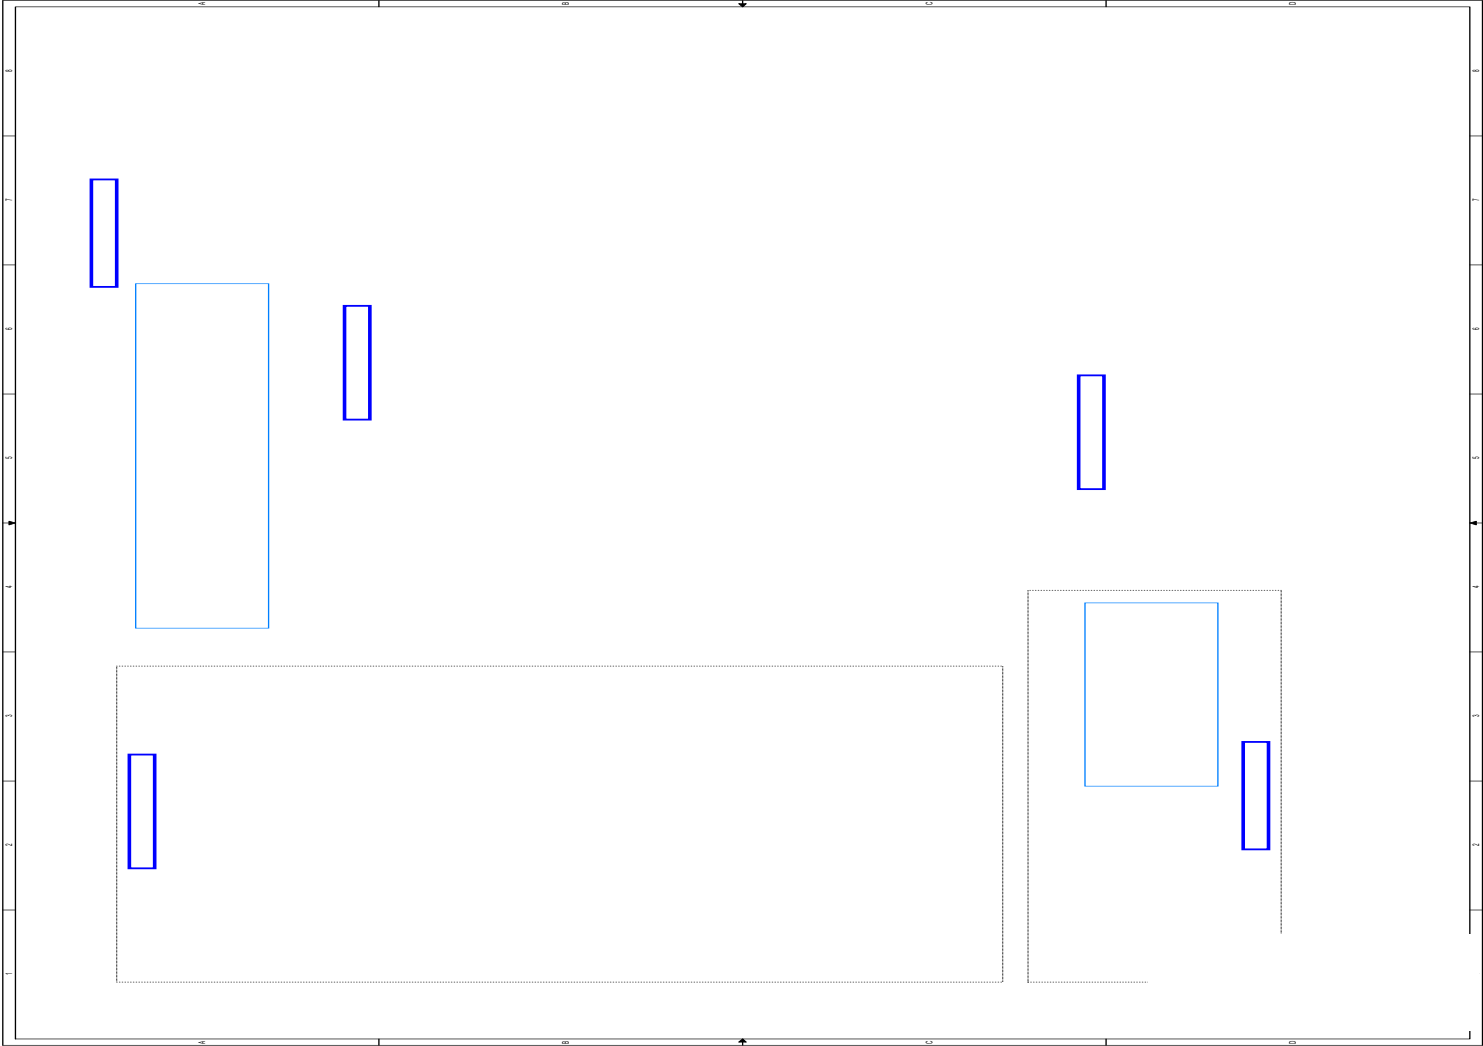


Sheet 27 of 79
GPU Decoupling

DACA Interface & XTAL

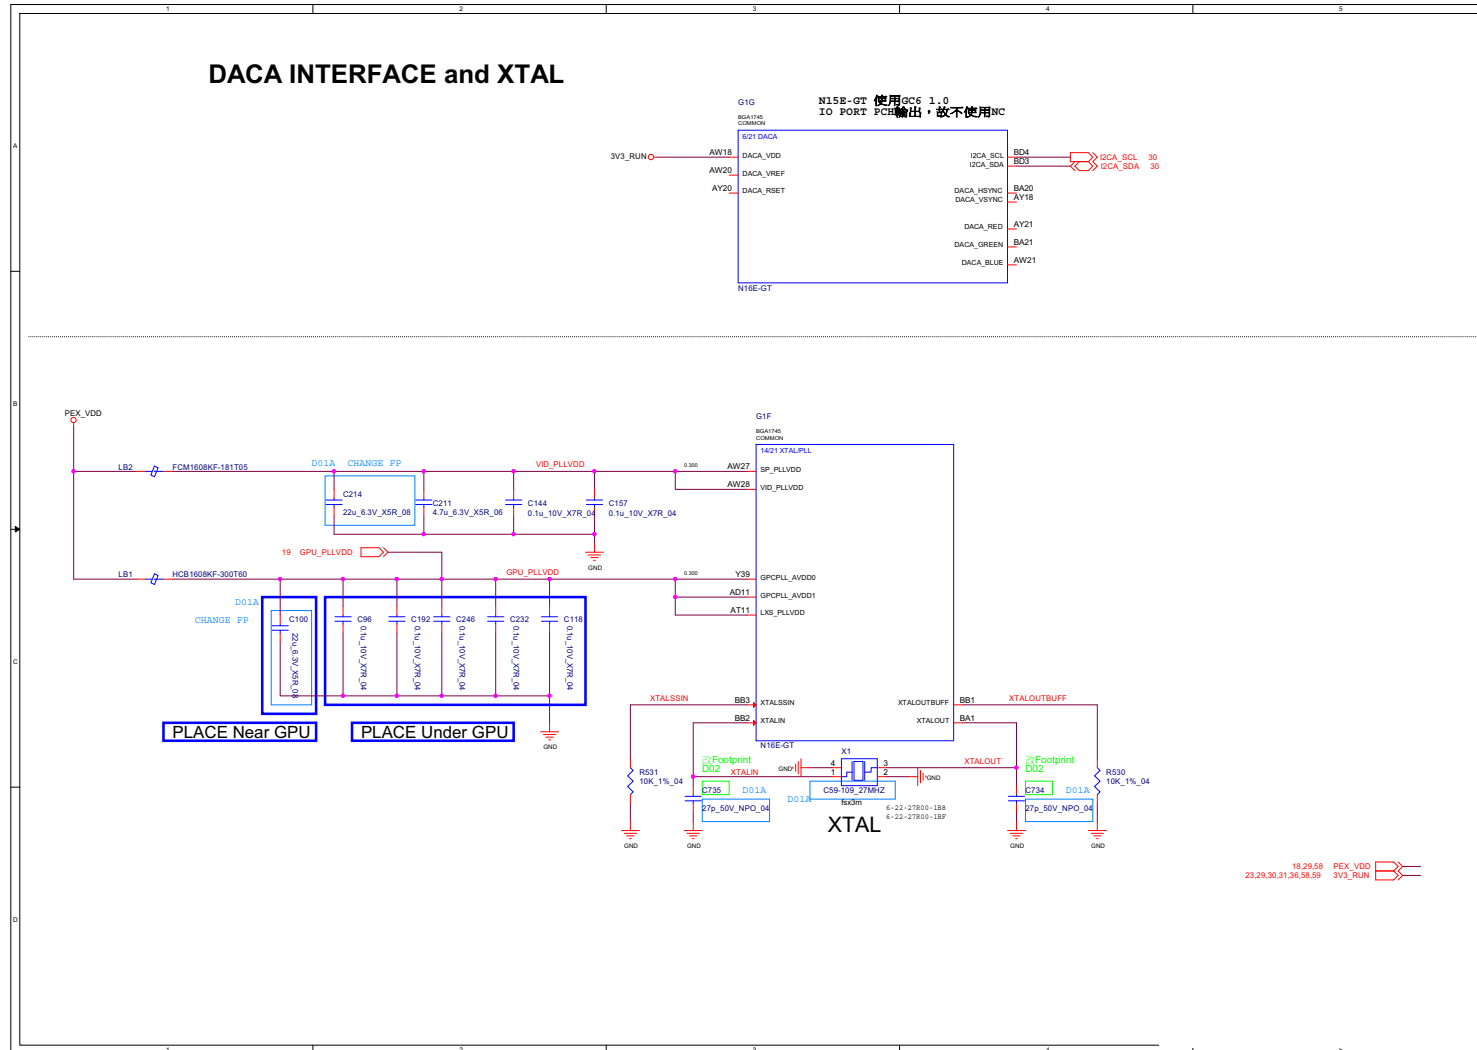


Sheet 28 of 79
DACA Interface and
XTAL

IFP I/O Interface

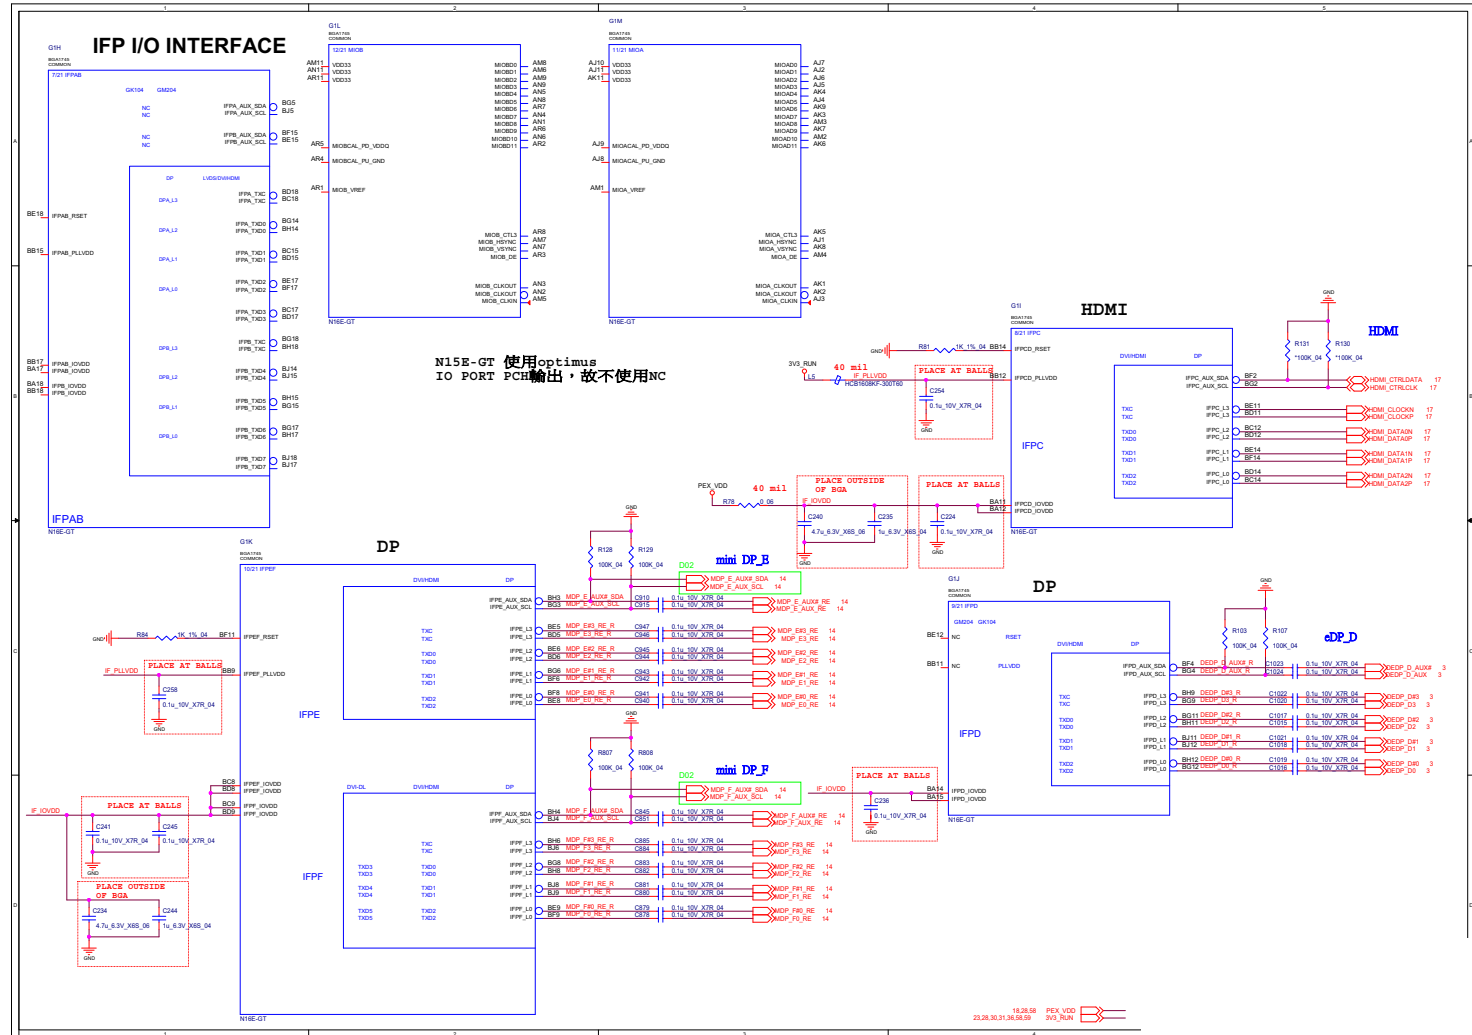


Sheet 29 of 79
IFP I/O Interface

Misc - GPIO, I2C and ROM

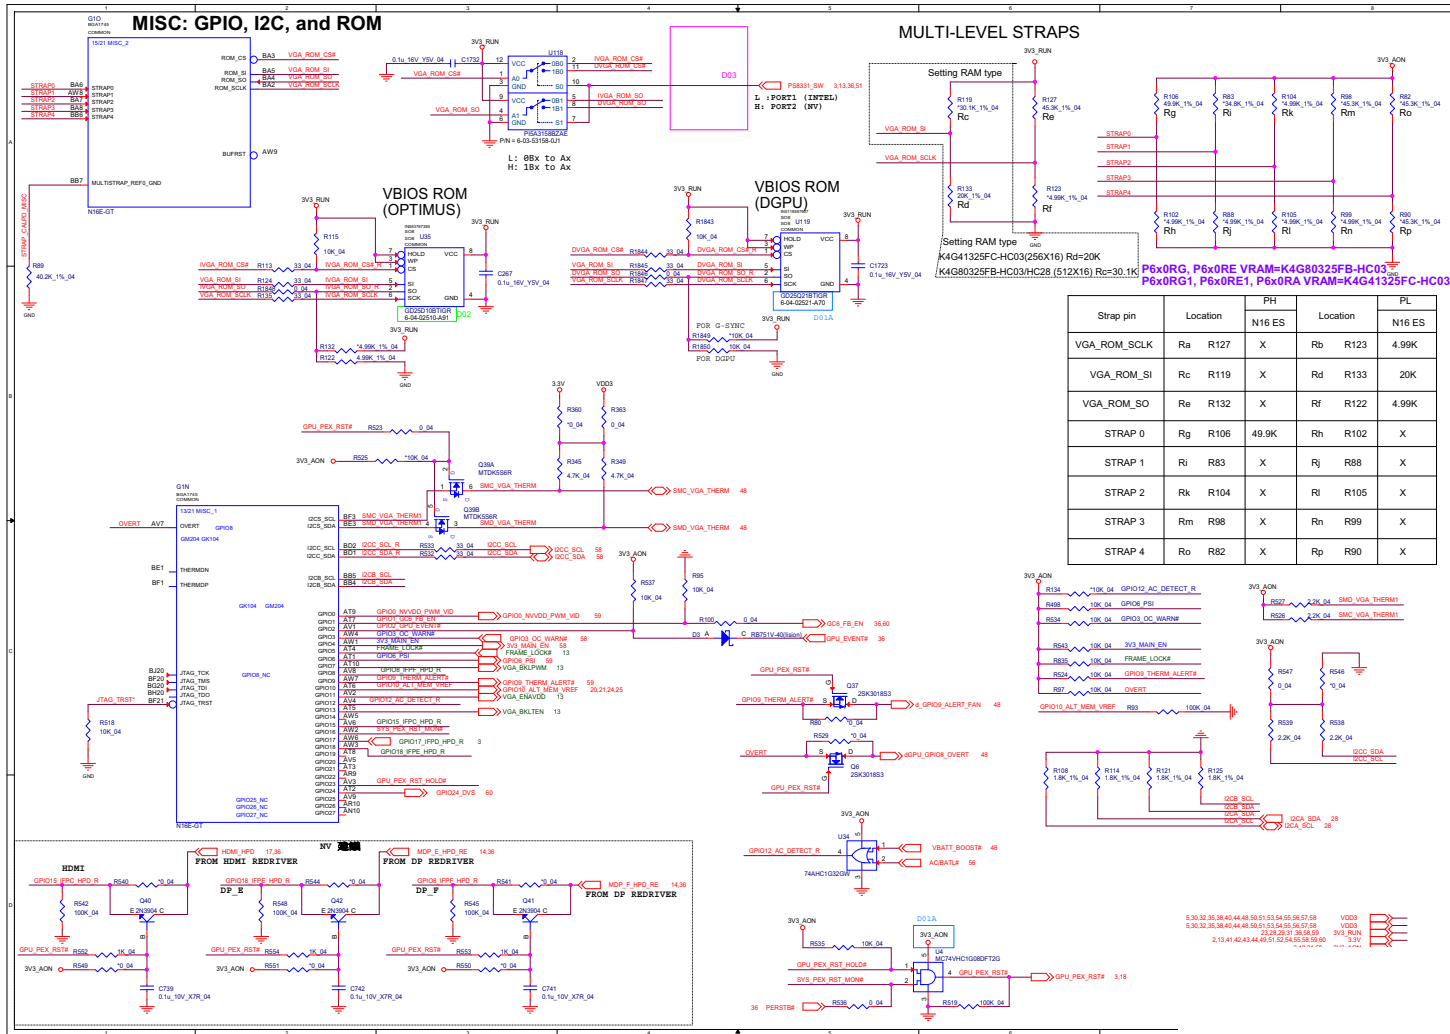

PCH 1/9

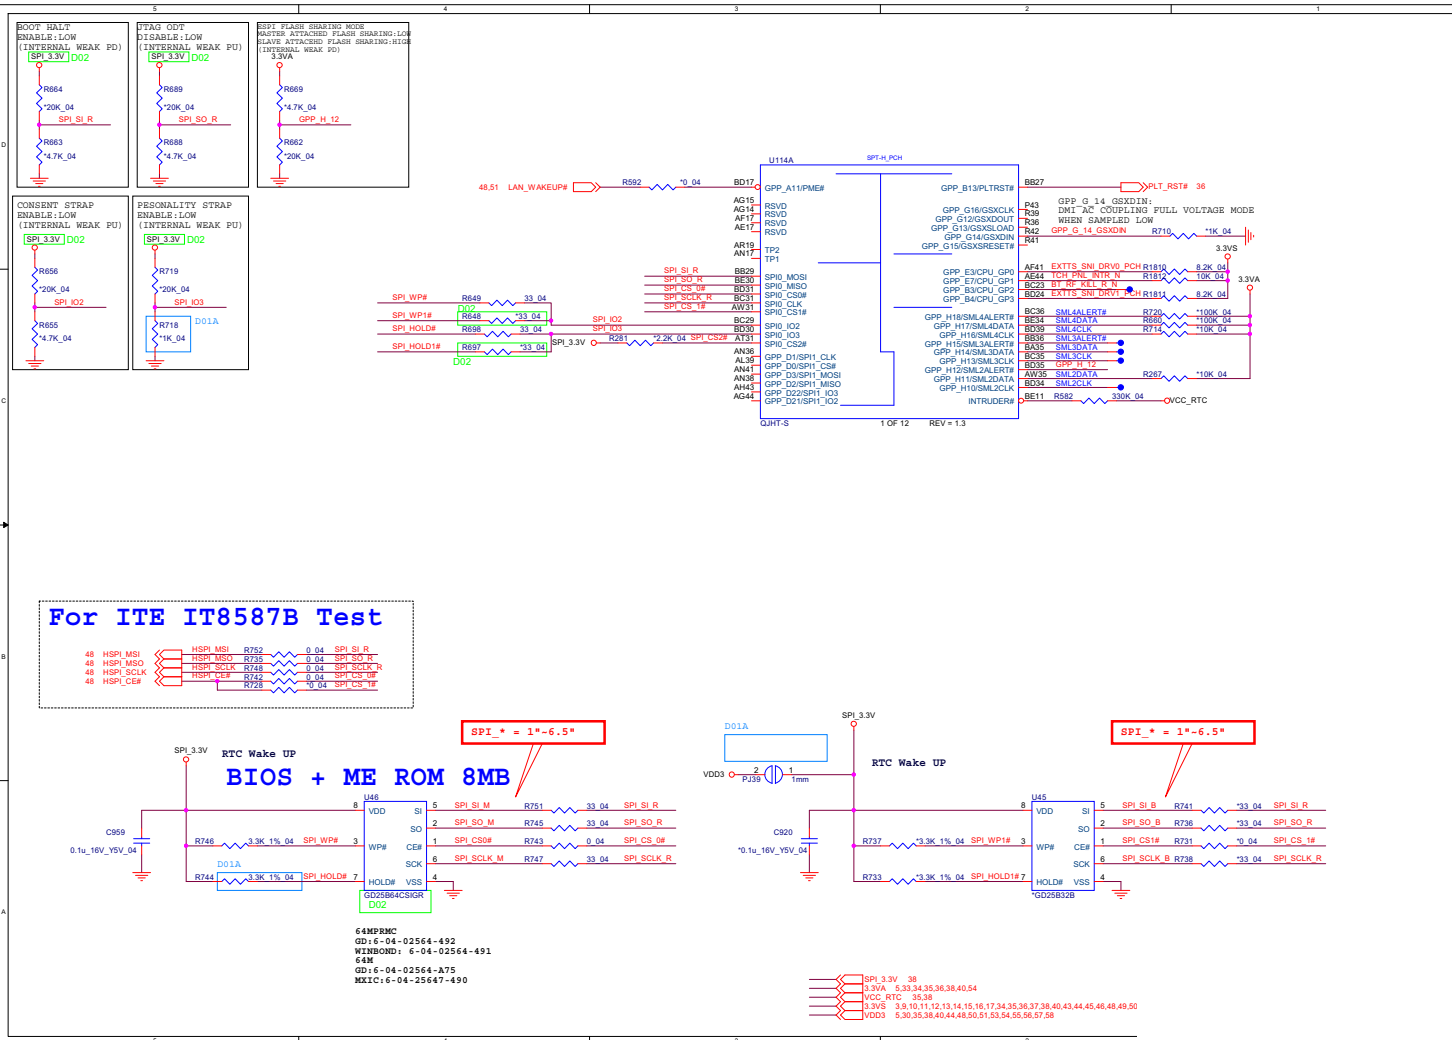


Sheet 32 of 79
PCH 1/9


B. Schematic Diagrams

PCH 2/9

Sheet 33 of 79
PCH 2/9

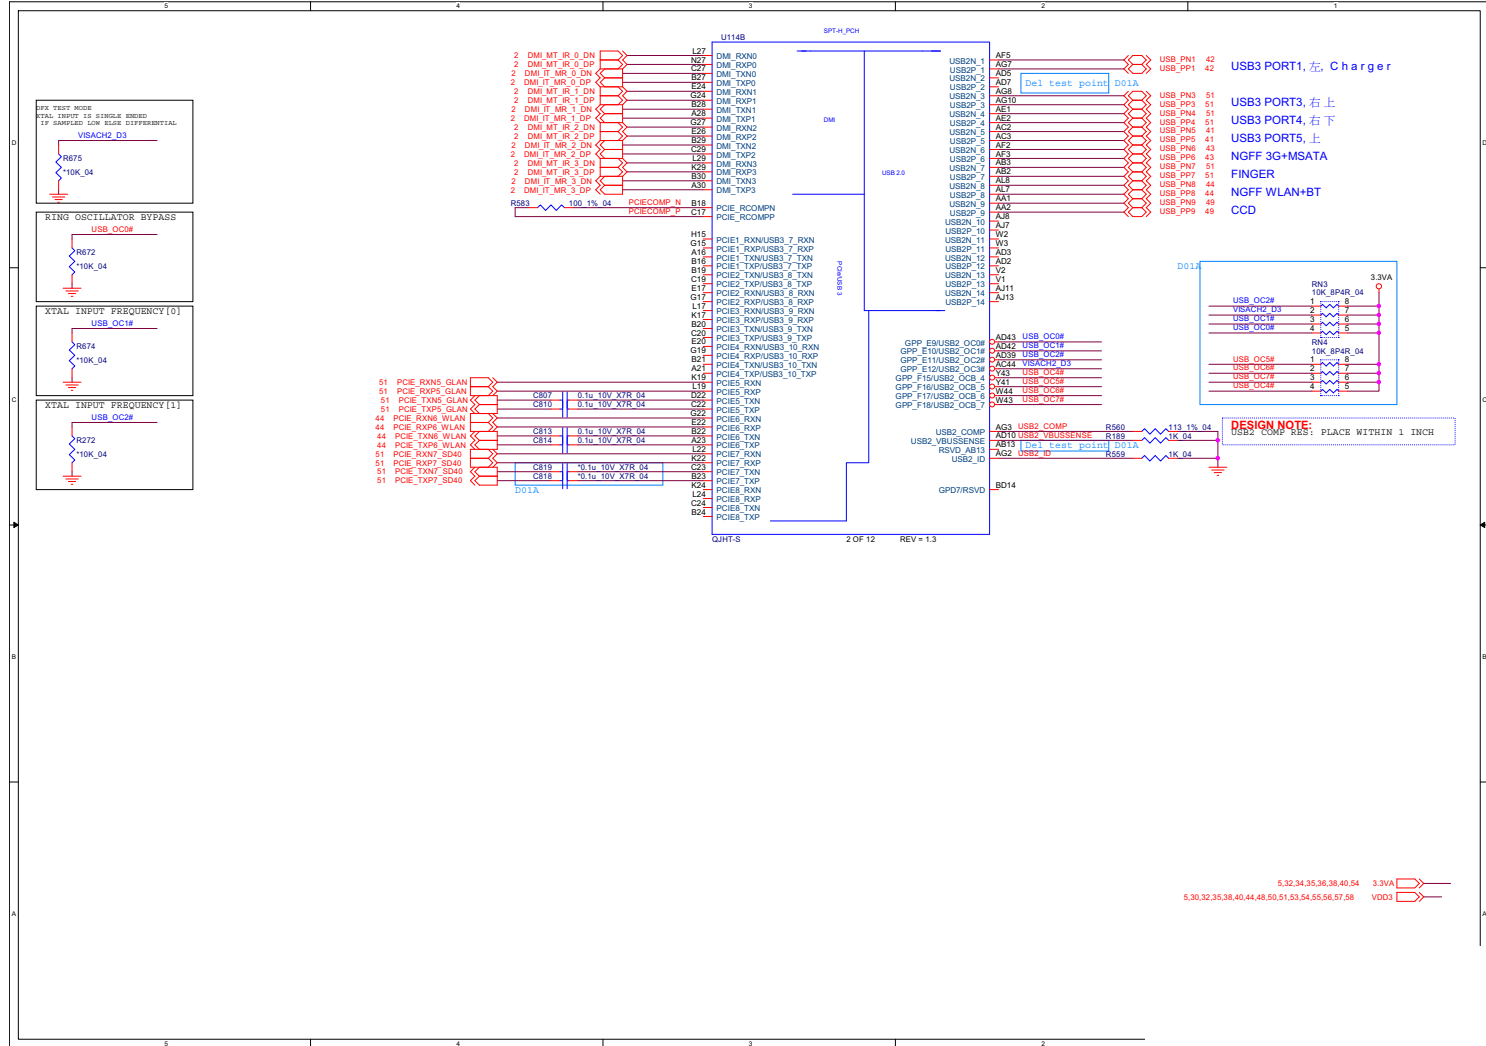

PCH 3/9

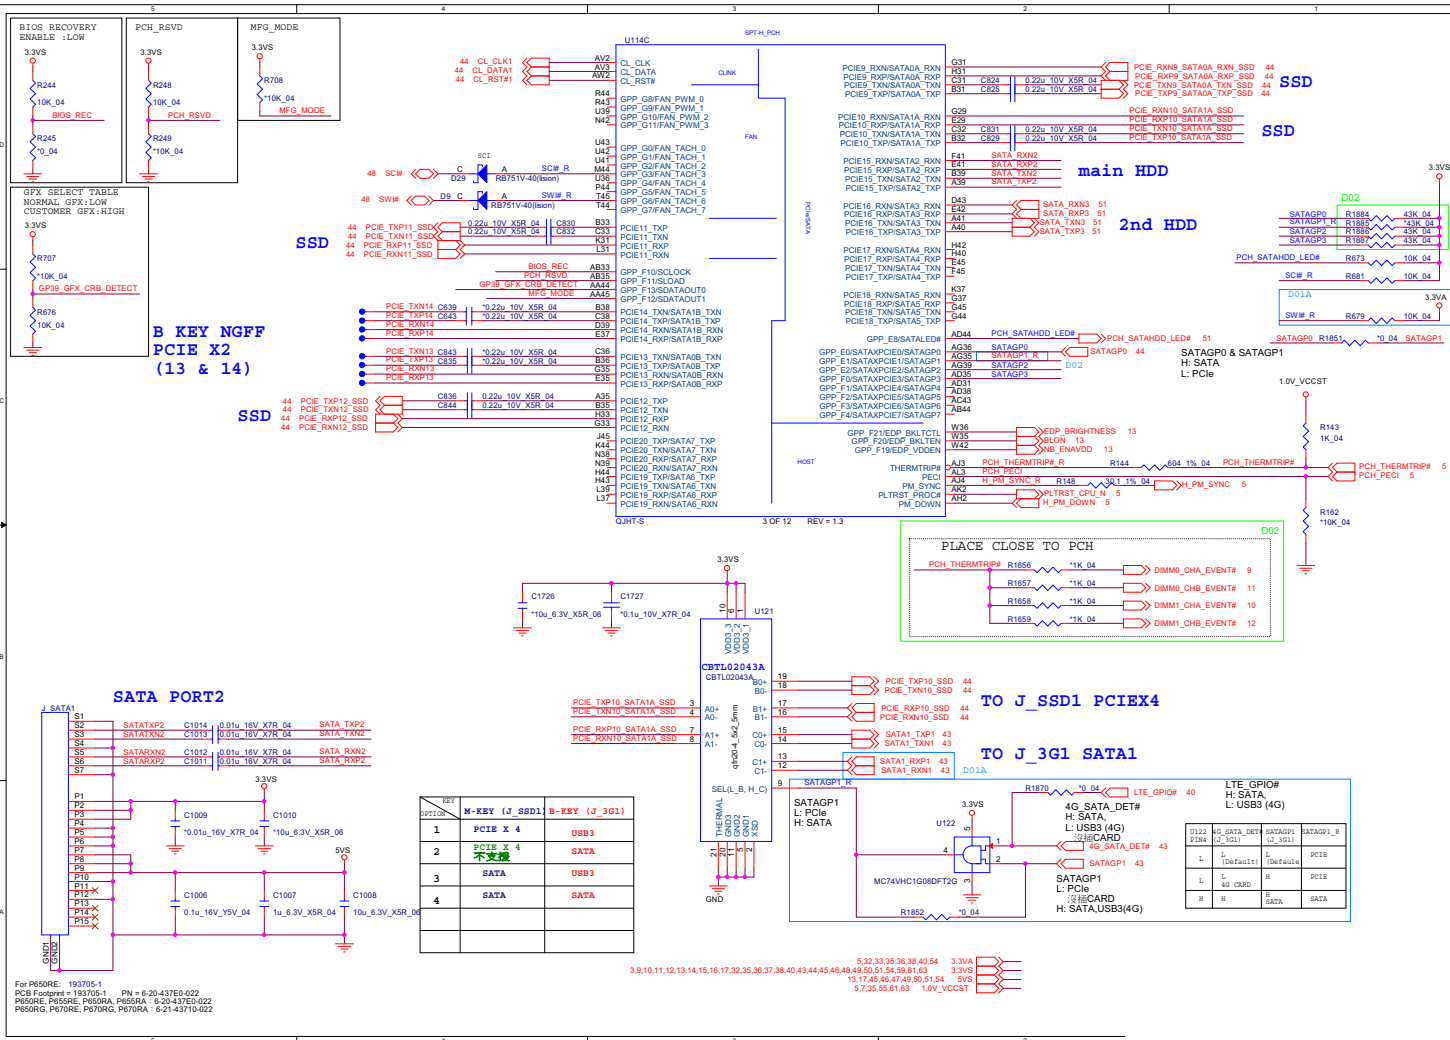










Sheet 34 of 79
PCH 3/9

B.Schematic Diagrams

Schematic Diagrams

PCH 4/9


Sheet 35 of 79
PCH 4/9

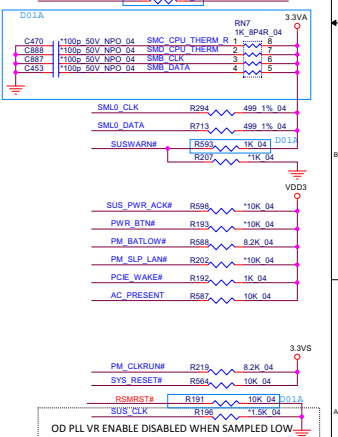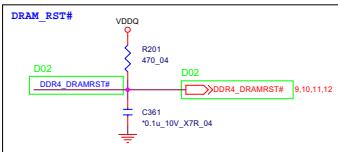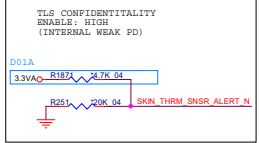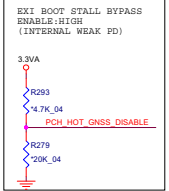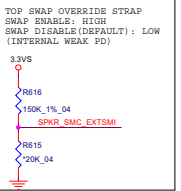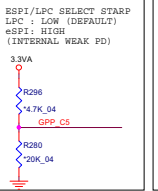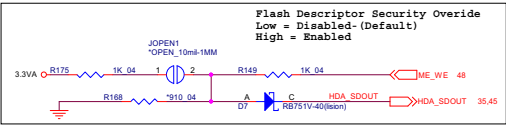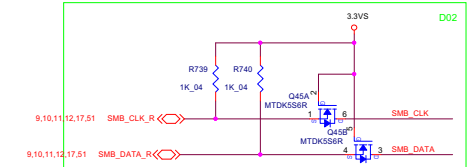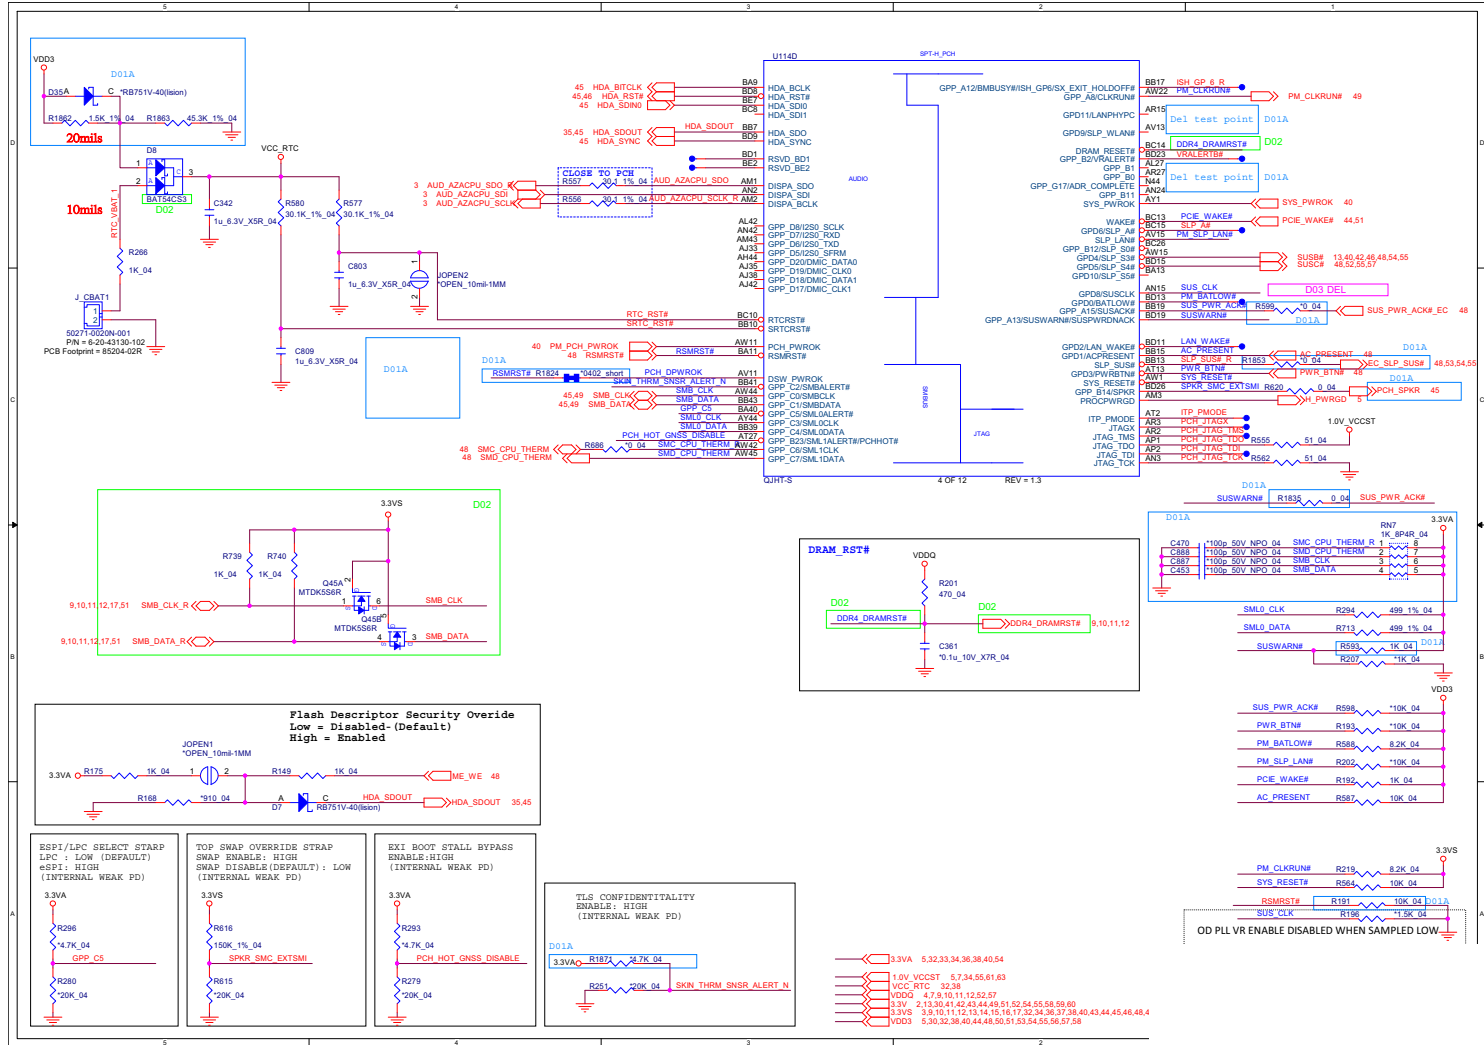

3.3VAC	5.32,33,34,36,38,40,54
1.0V_VCCST	5.7,34,55,61,63
VCC_RTC	32,38
VDD0	4.7,5.10,11,12,62,67
3.3V	2.13,30,41,42,43,44,48,51,52,54,55,59,60
3.3V8	3.8,10,11,12,15,16,15,16,17,32,34,36,37,38,40,43,44,45,46,48,4
VDD3	5,30,32,38,40,44,48,50,51,53,54,55,56,57,58

B.Schematic Diagrams

PCH 5/9

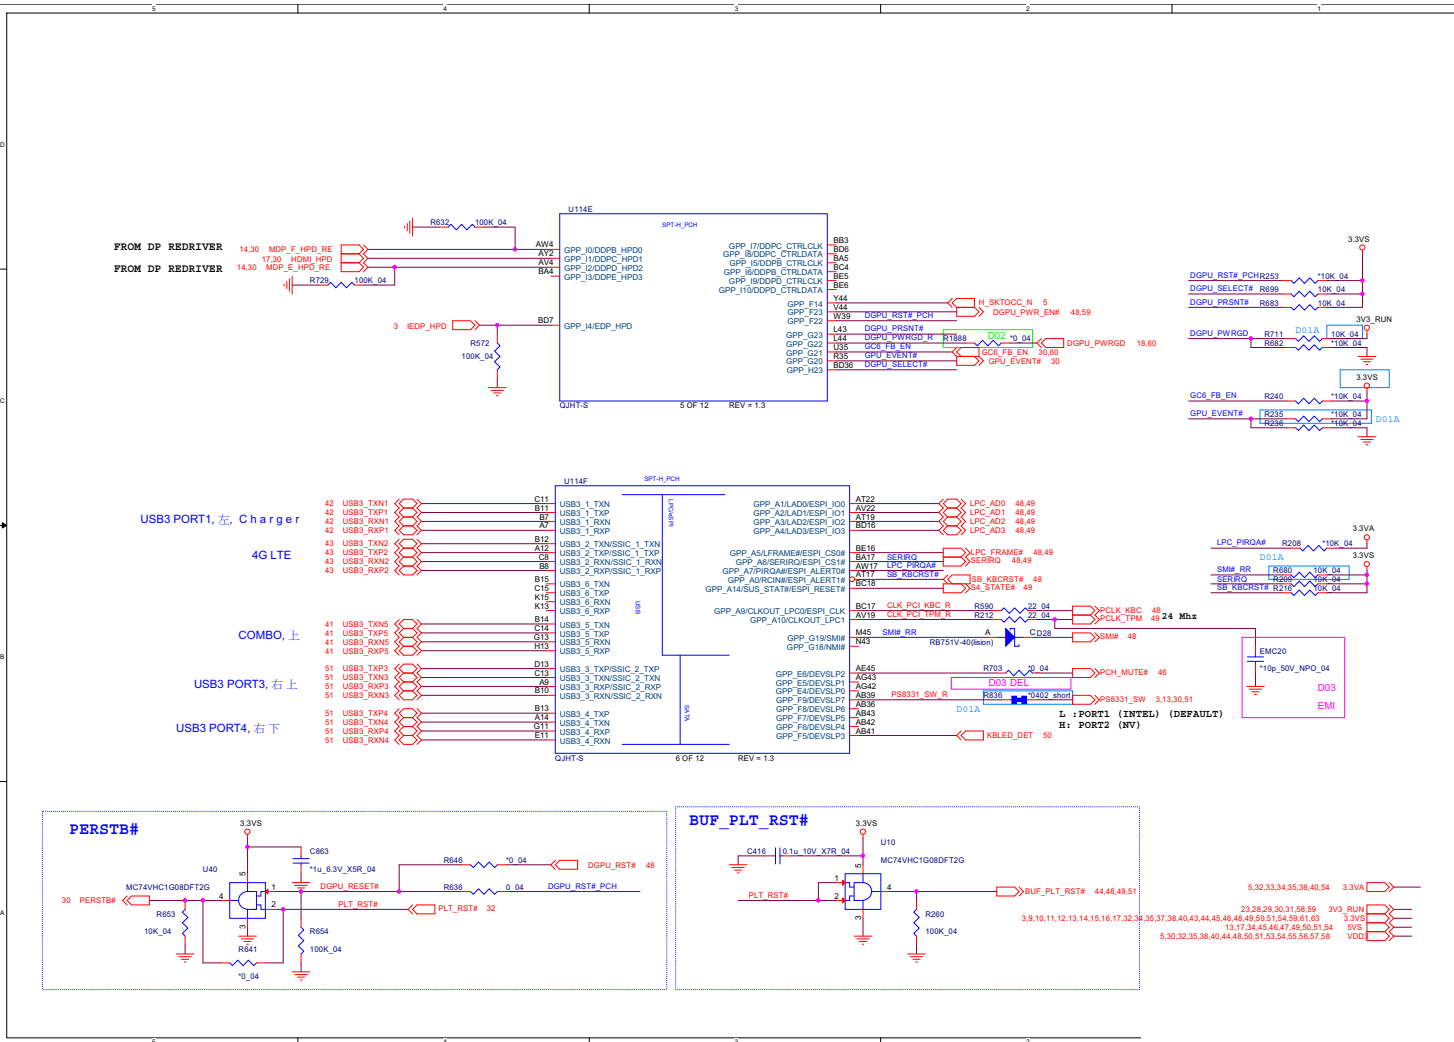


Sheet 36 of 79
PCH 5/9

B.Schematic Diagrams

PCH 6/9

Sheet 37 of 79
PCH 6/9

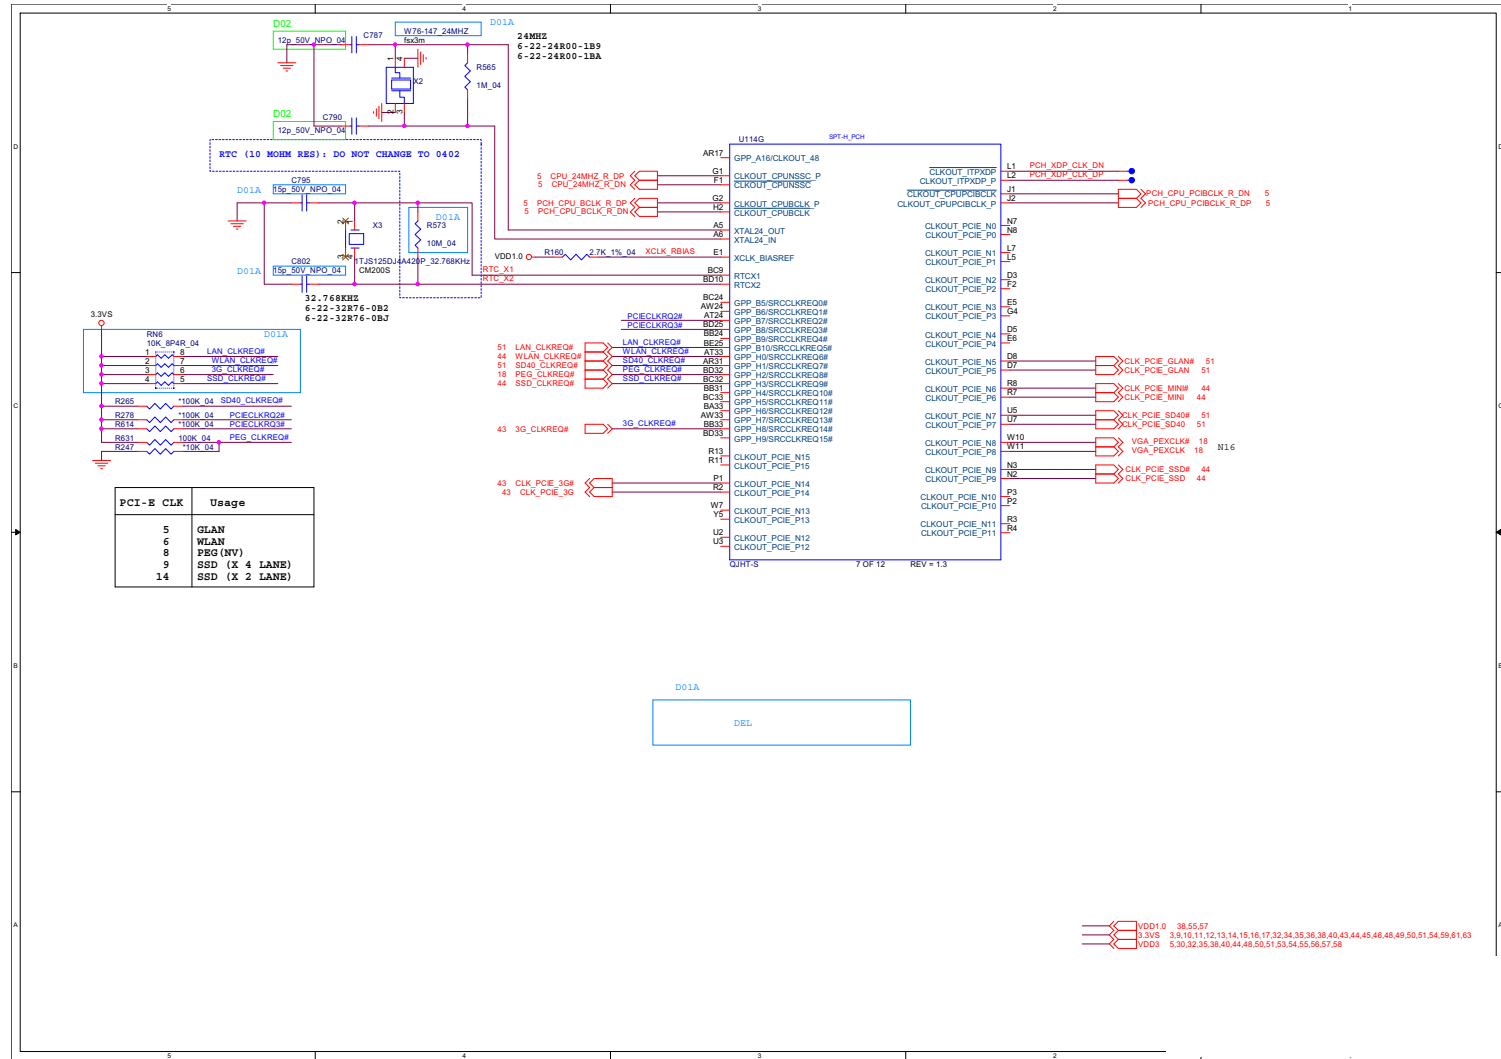

PCH 8/9




Sheet 39 of 79
PCH 8/9


B.Schematic Diagrams

USB3.0

Sheet 41 of 79
USB3.0

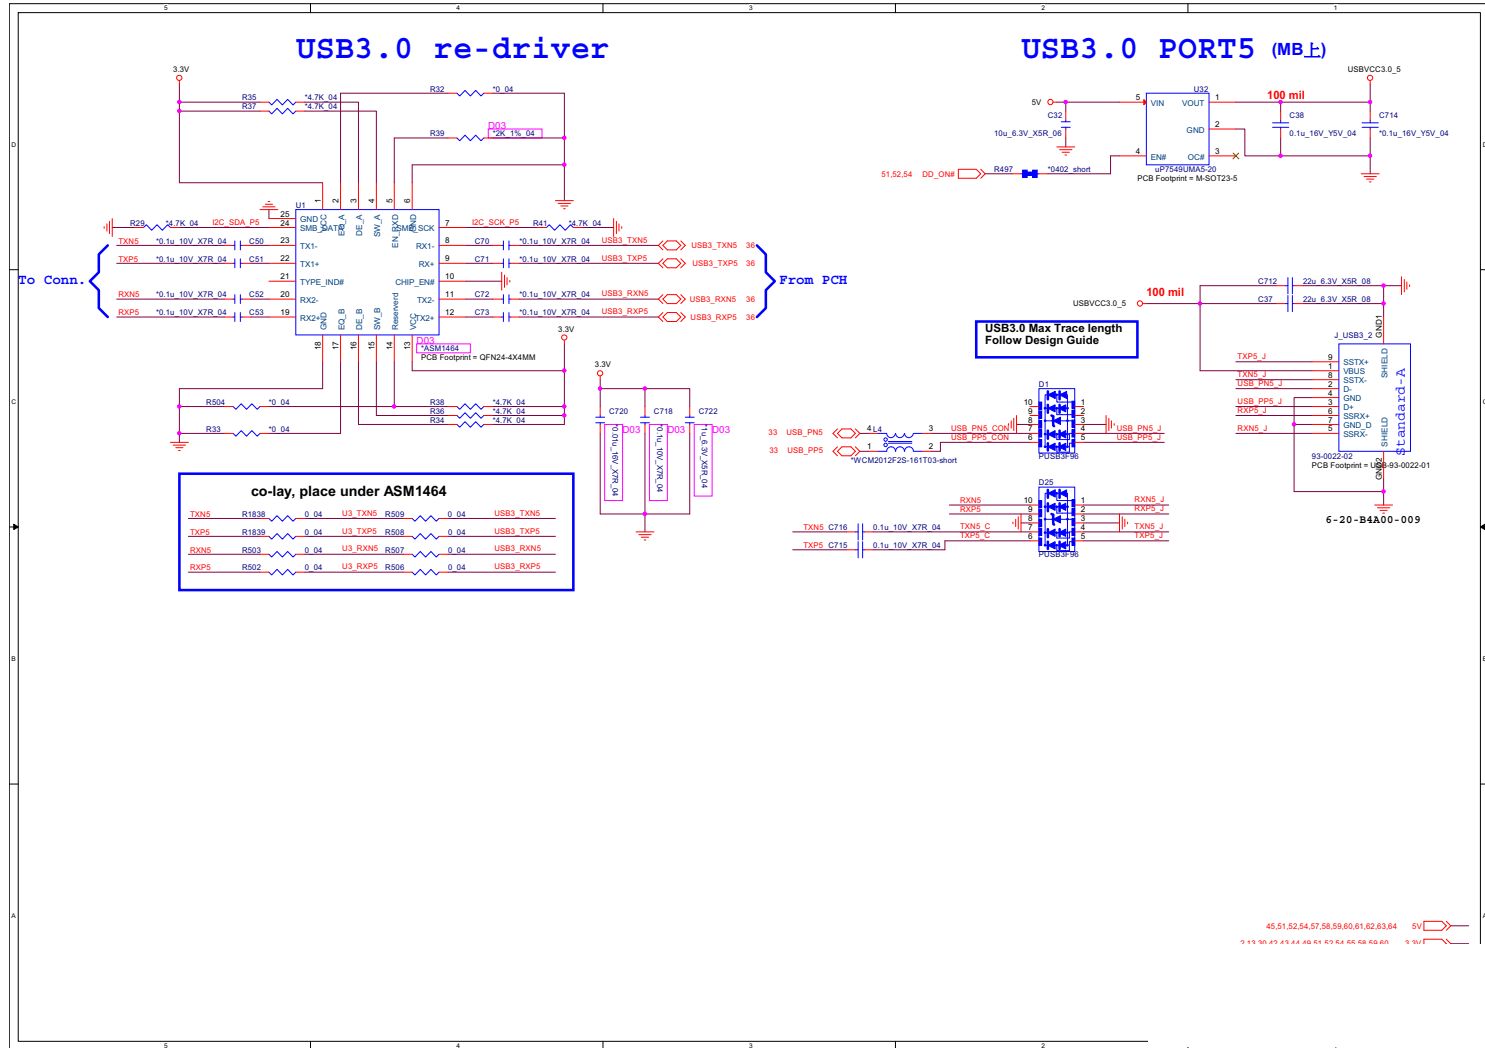

USB Charger

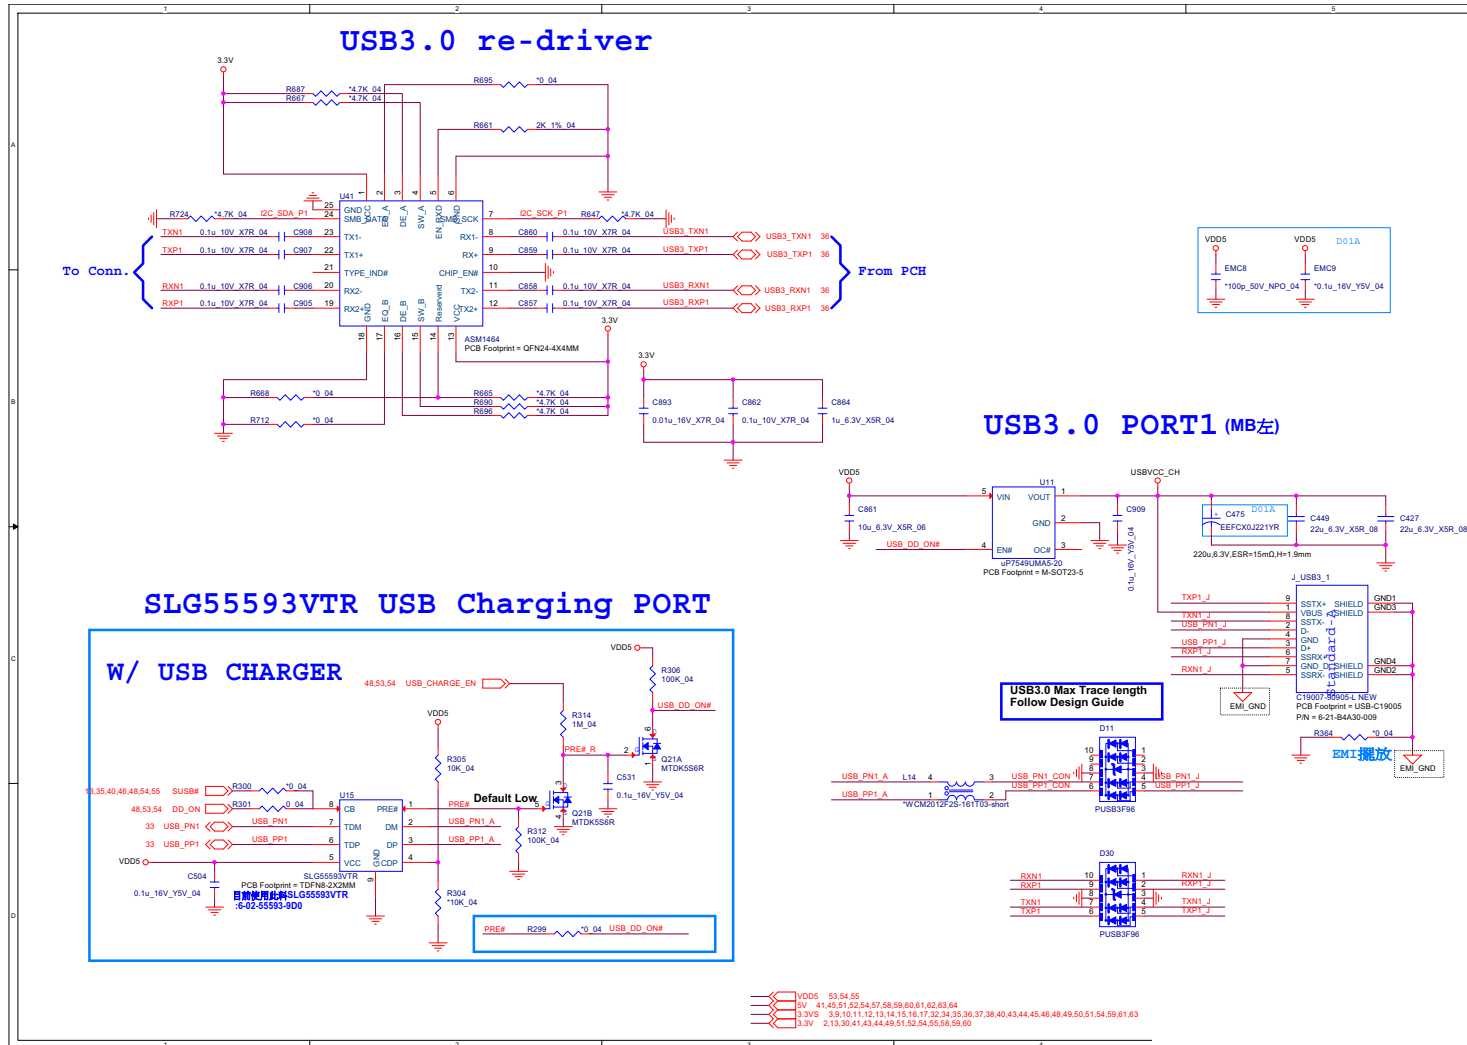


Sheet 42 of 79
USB Charger


B.Schematic Diagrams

M.2 3G + M.2 SATA

Sheet 43 of 79
M.2 3G + M.2 SATA

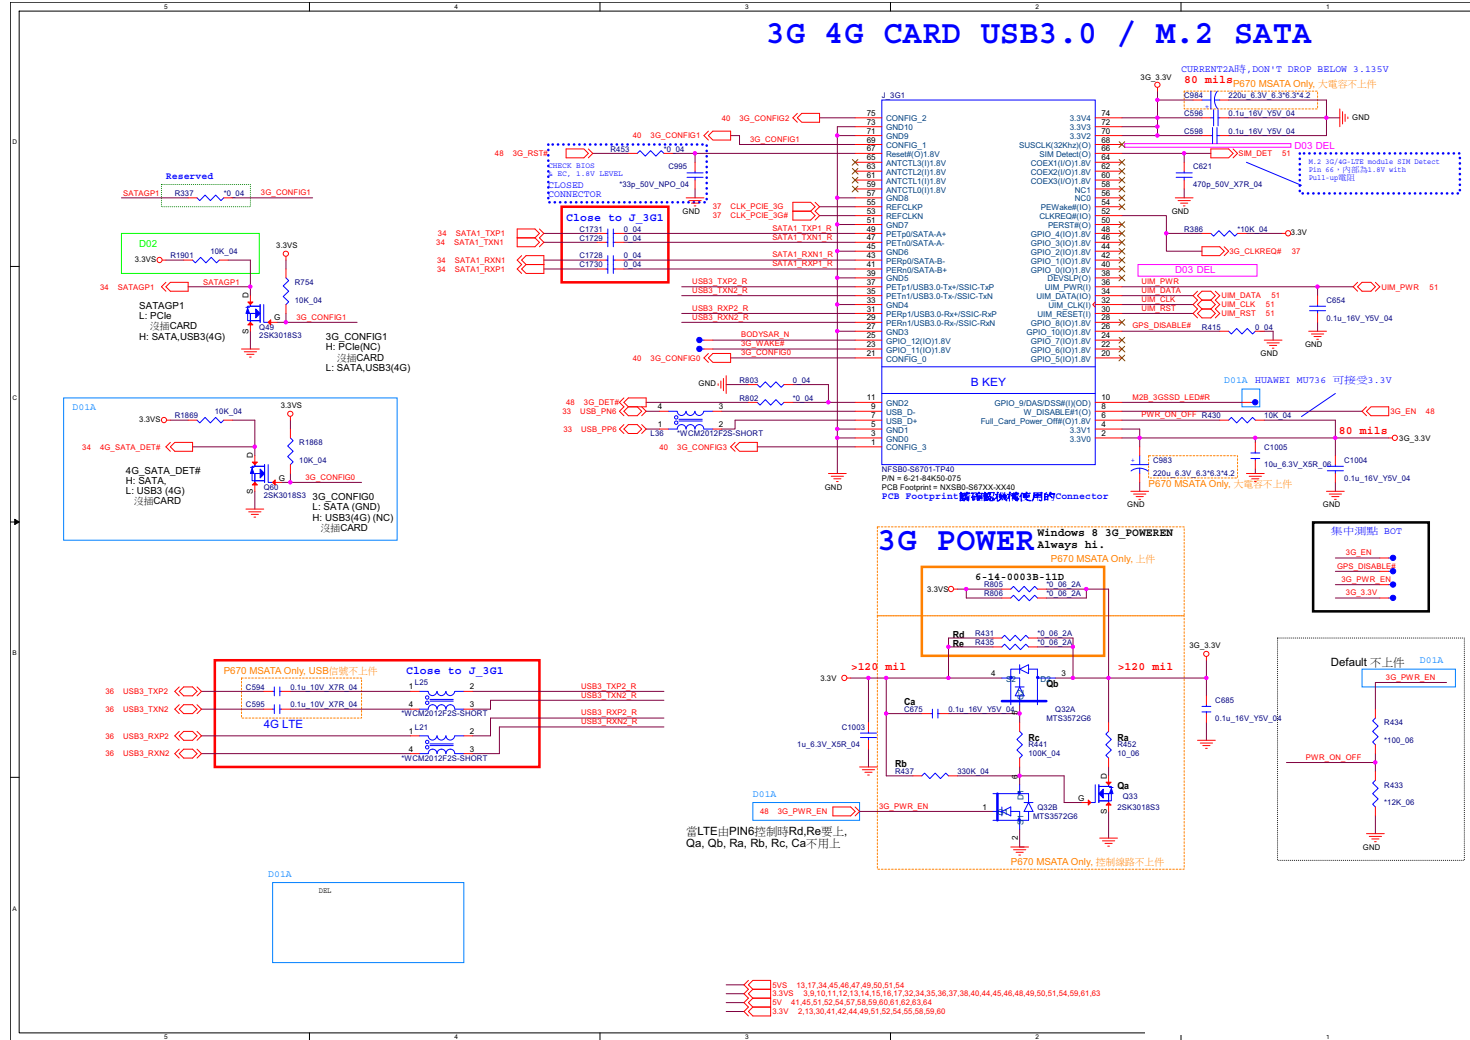


M.2 WLAN+BT, PCIE4X SSD

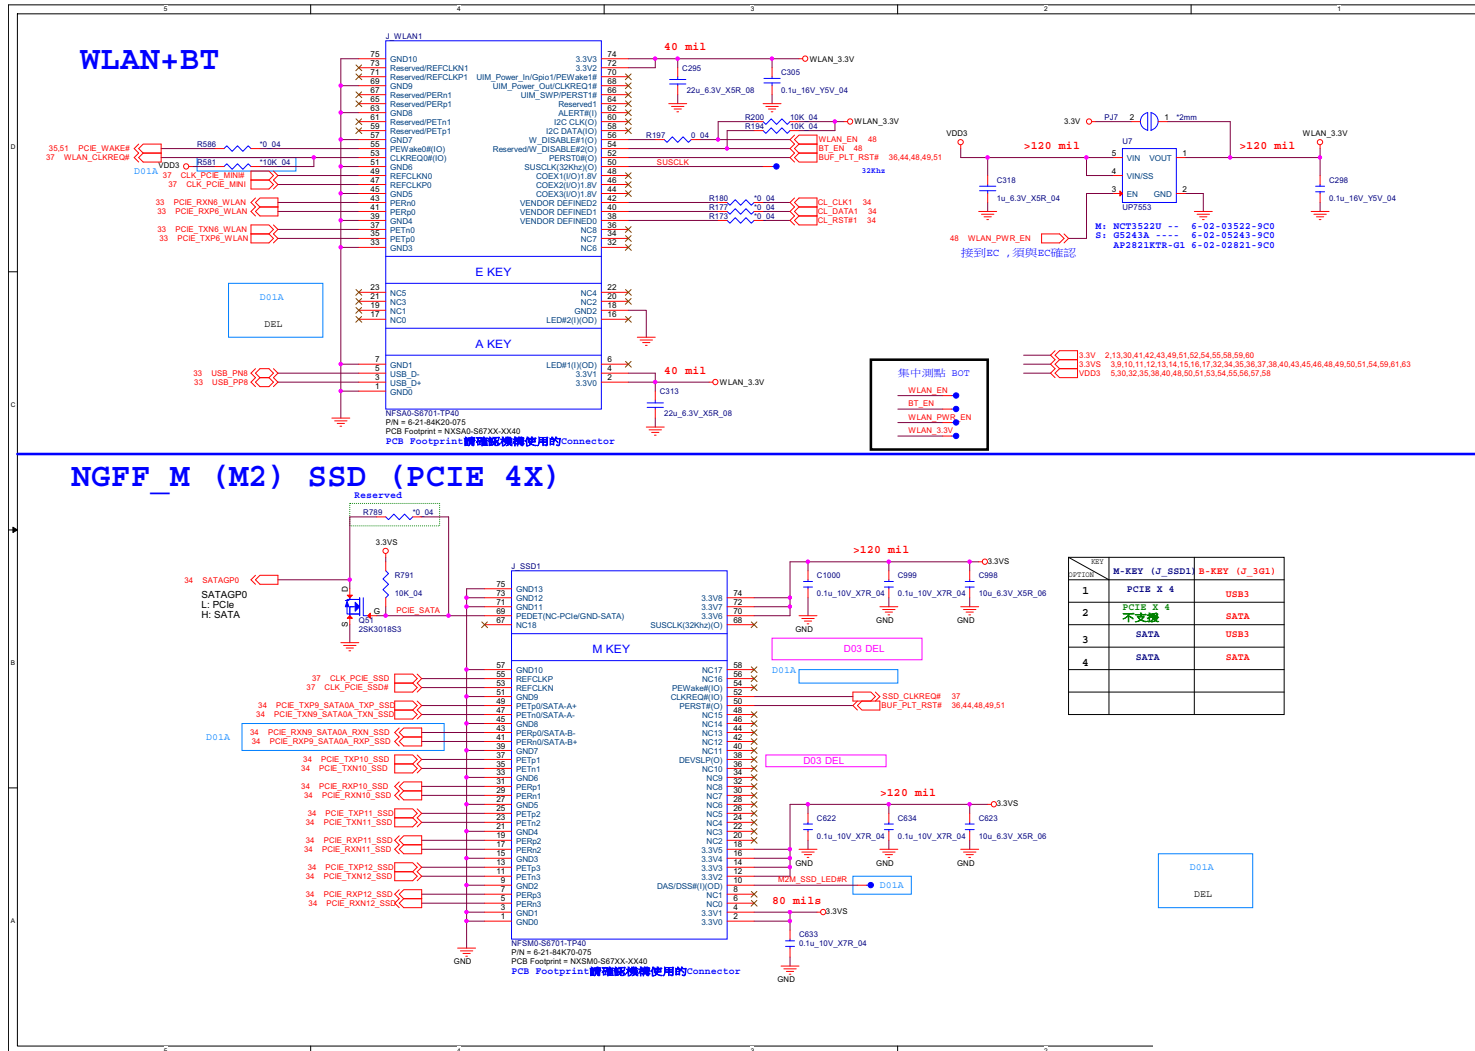


Sheet 44 of 79
M.2 WLAN+BT,
PCIE4X SSD

Realtek ALC892

Sheet 45 of 79
Realtek ALC892

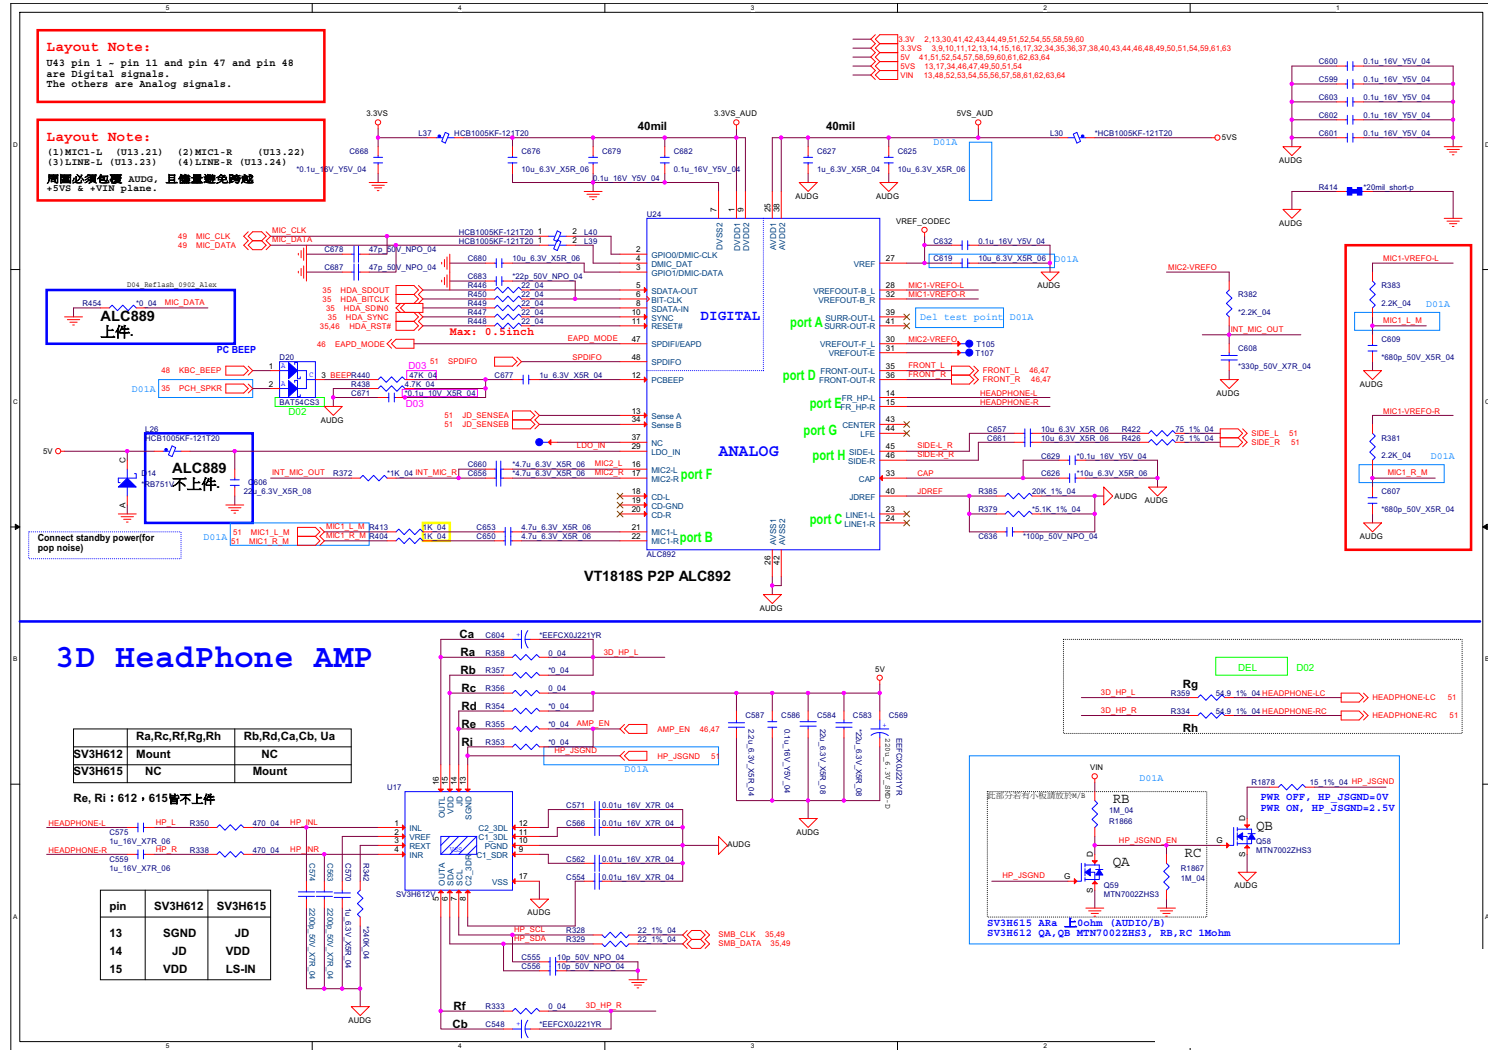


TPA2008D2

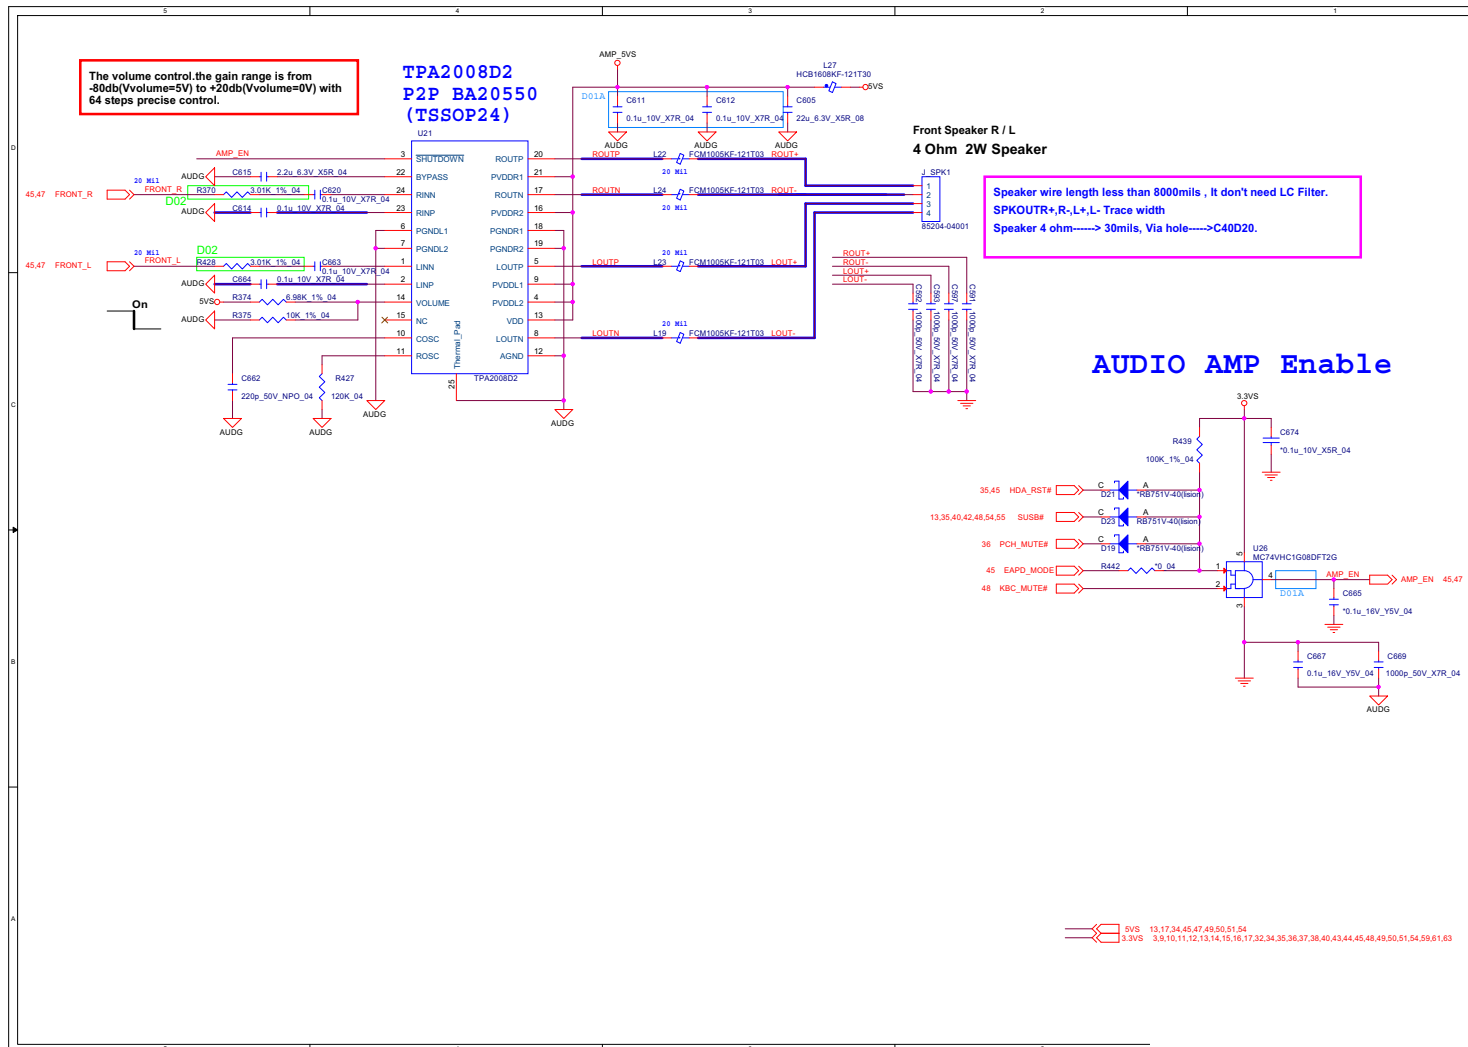

Sheet 46 of 79
TPA2008D2


Subwoofer

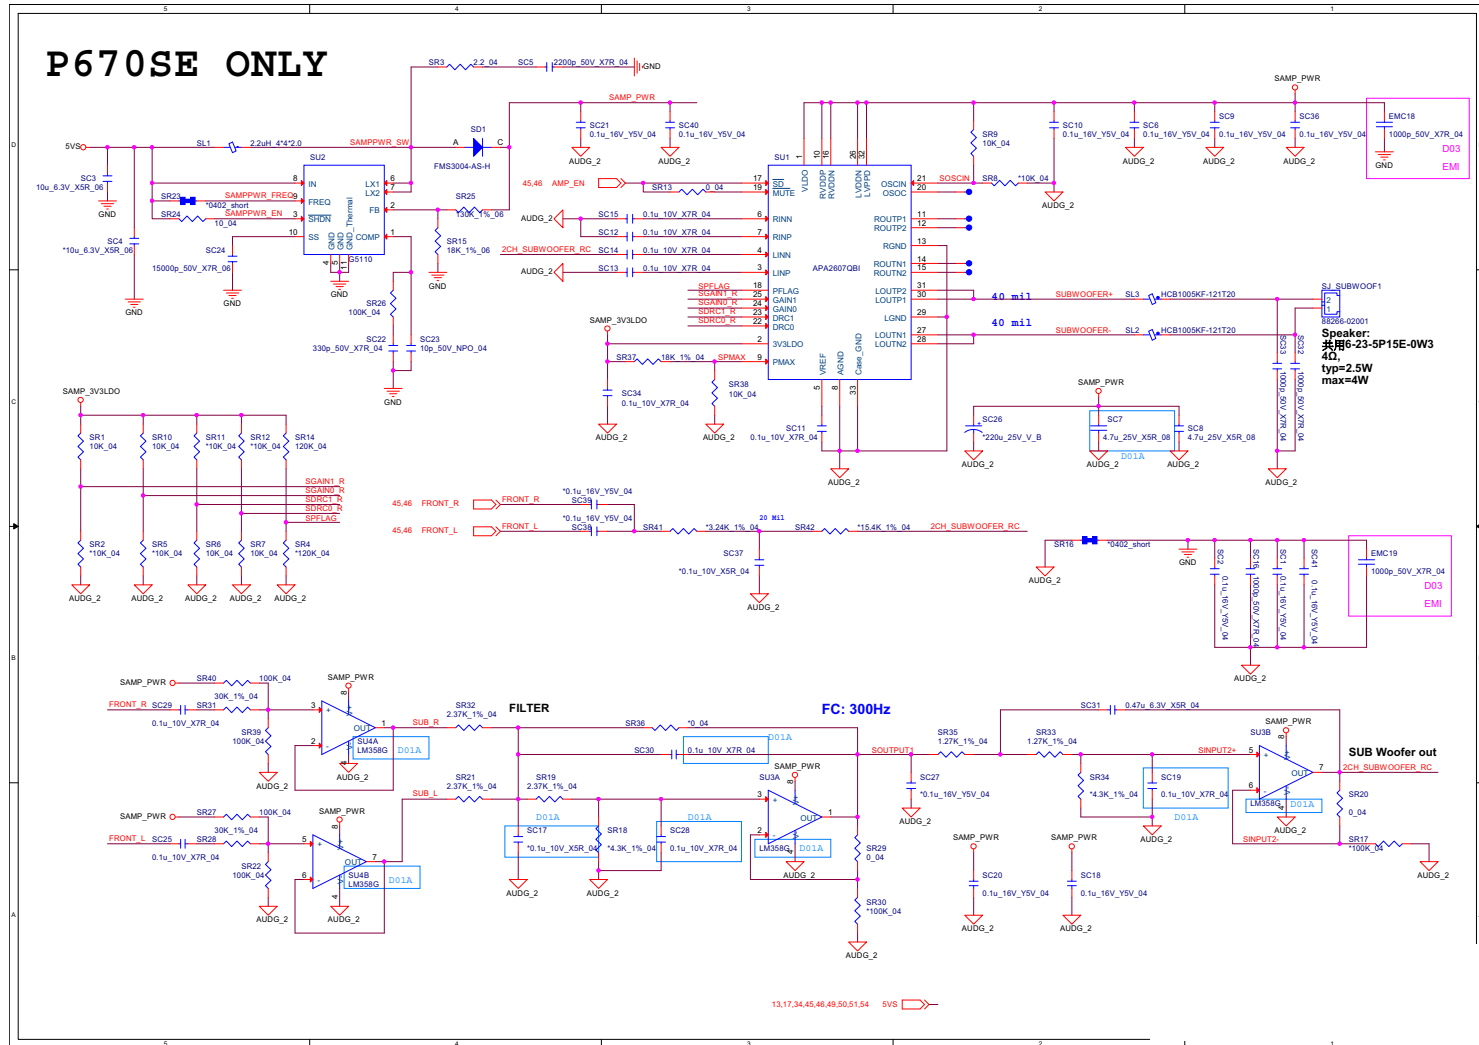

Sheet 47 of 79
Subwoofer

B.Schematic Diagrams

KBC-ITE IT8587

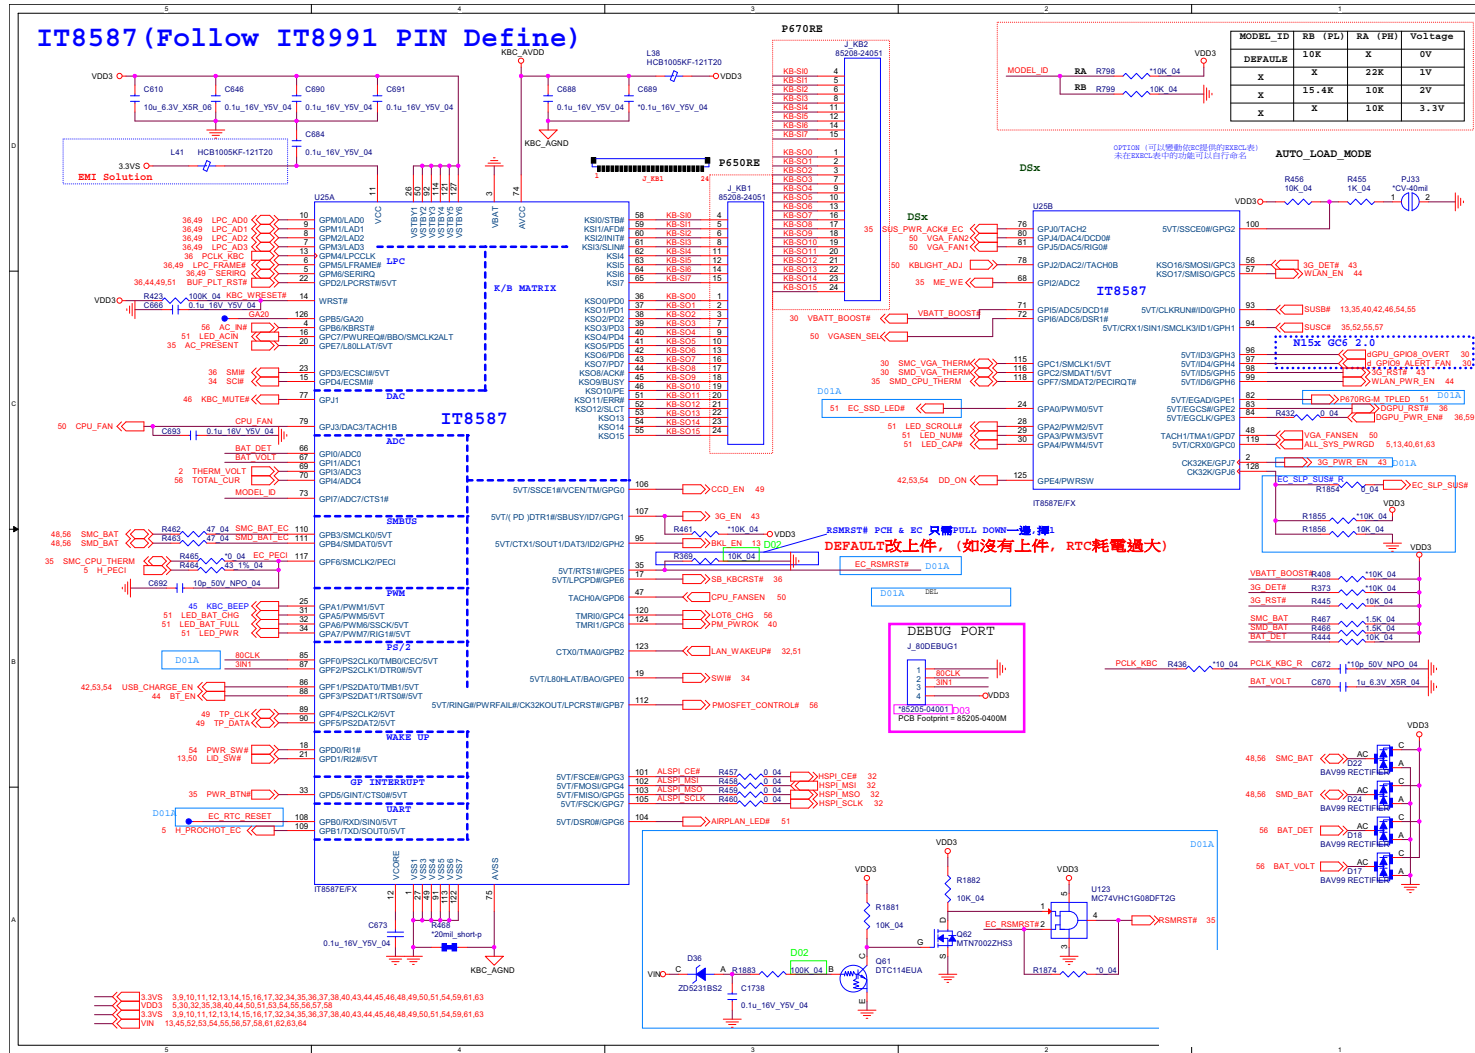

Sheet 48 of 79
KBC-ITE IT8587


B.Schematic Diagrams

Schematic Diagrams


TPM, CCD, TP

B. Schematic Diagrams

Sheet 49 of 79
TPM, CCD, TP

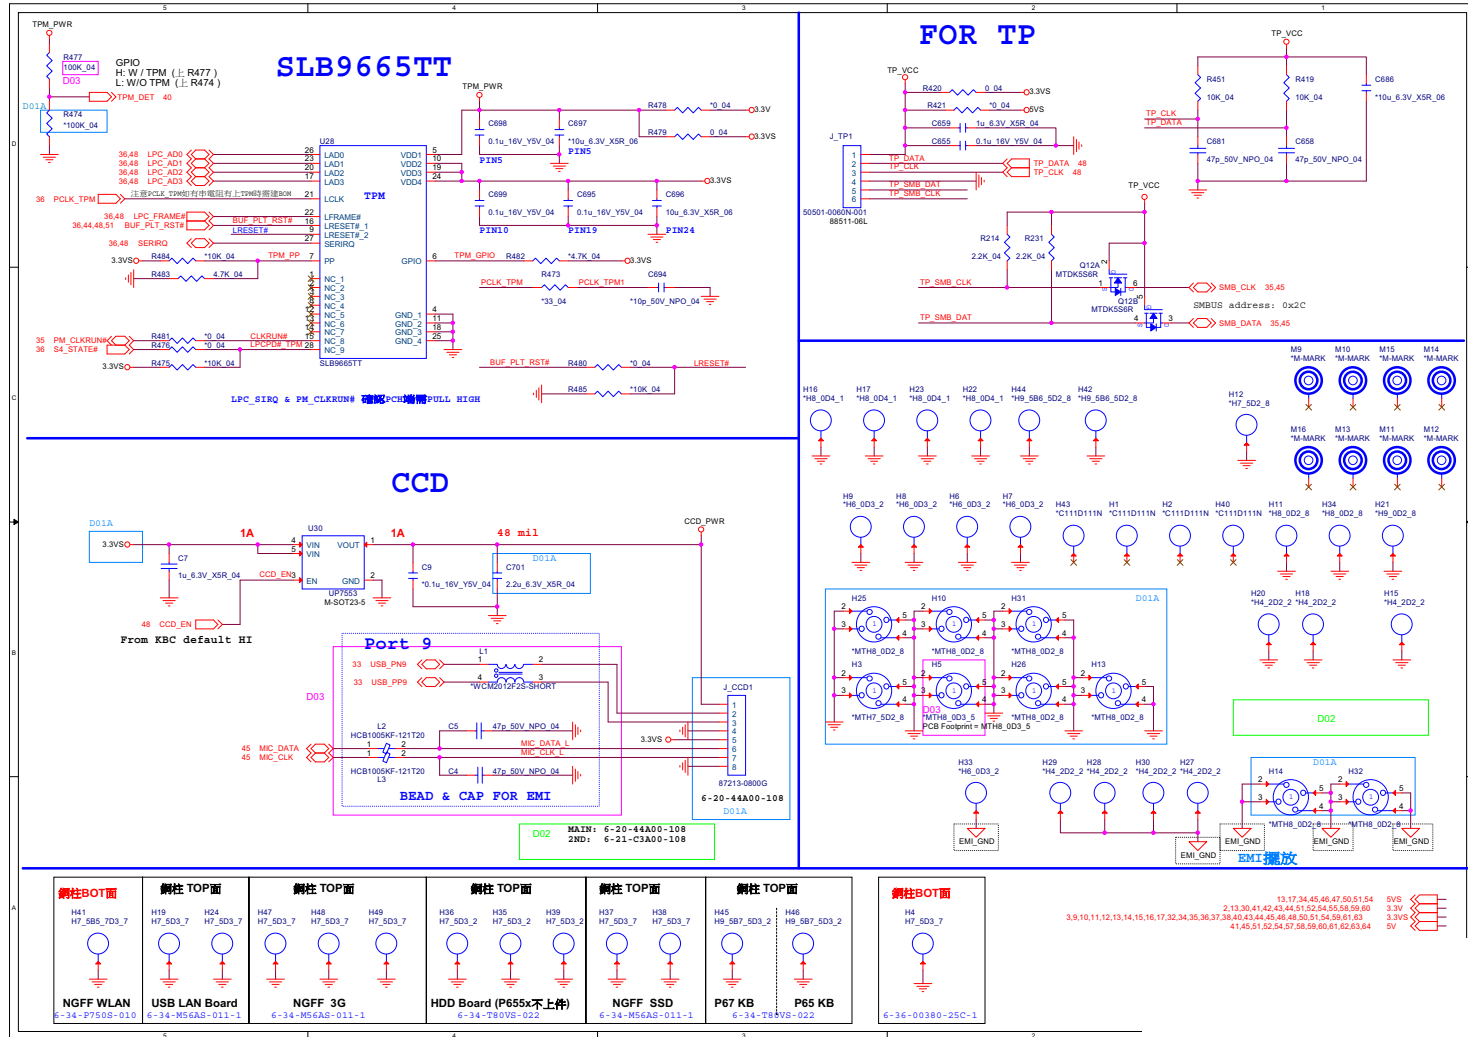

Fan, LID, KB, LED

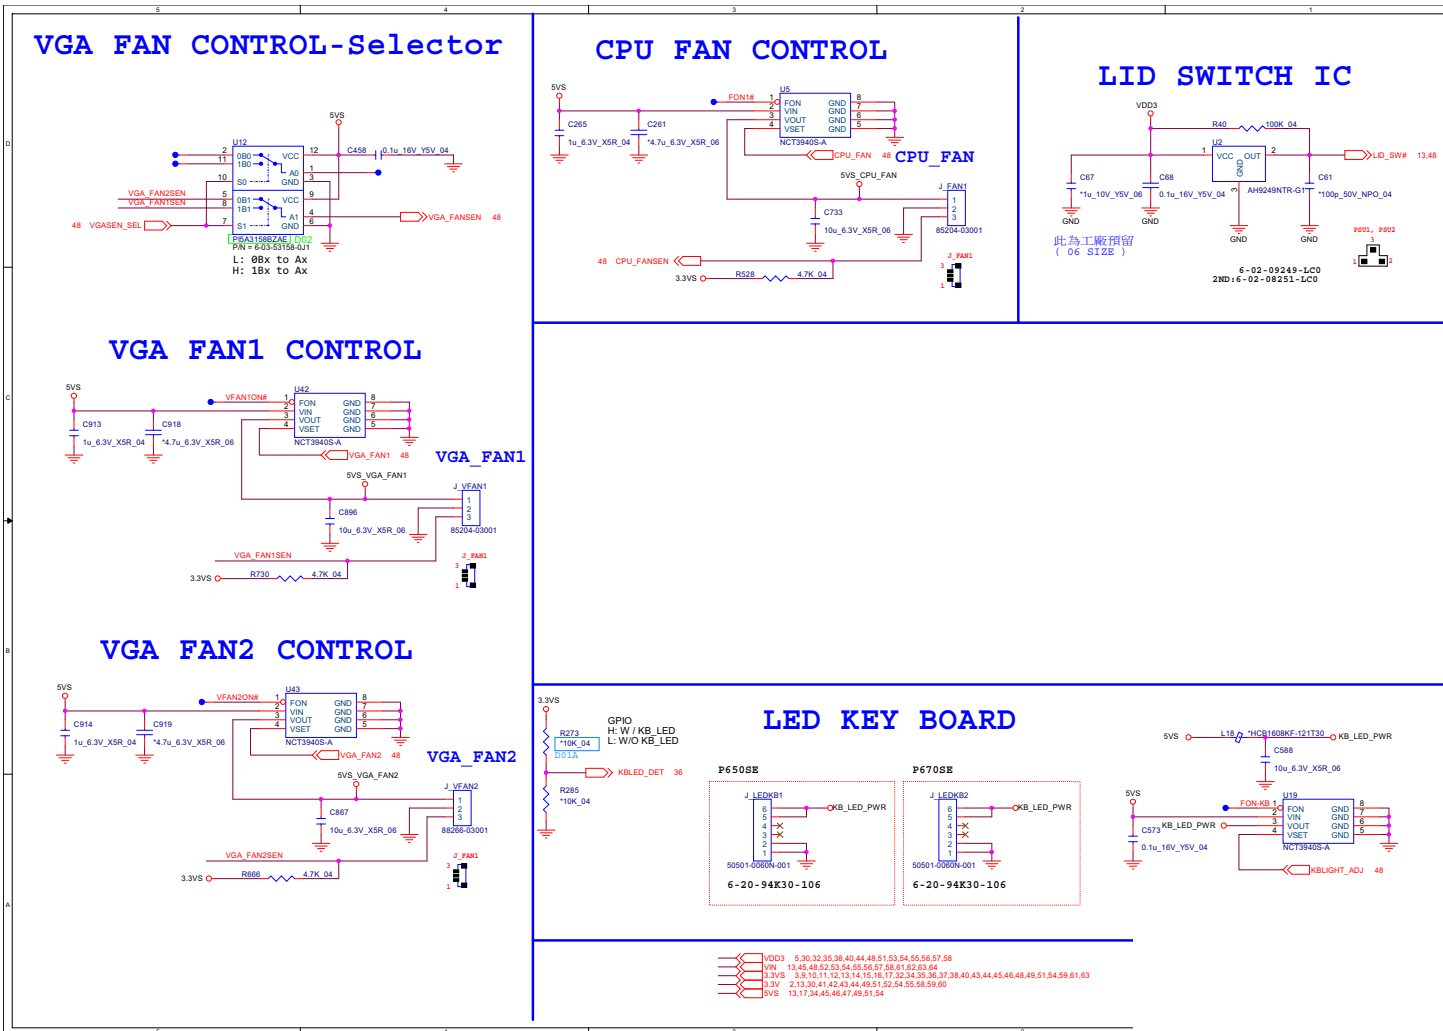


B.Schematic Diagrams


Sheet 50 of 79
Fan, LID, KB, LED

Connector

Sheet 51 of 79
Connector

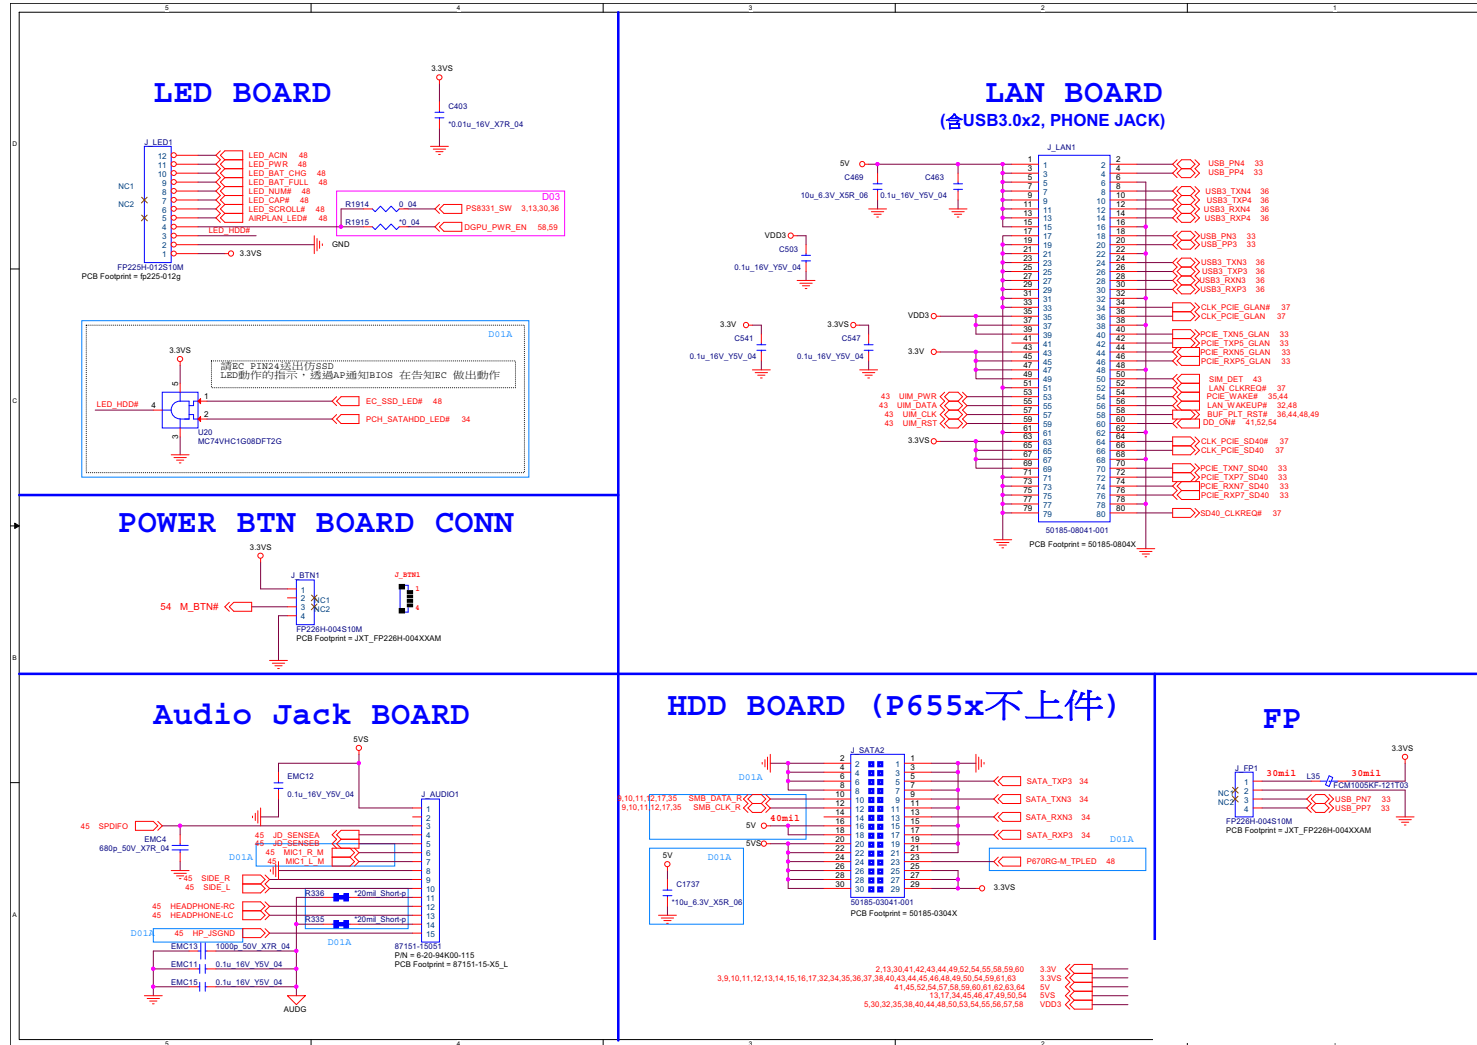


DDR 1.2V / 0.6VS

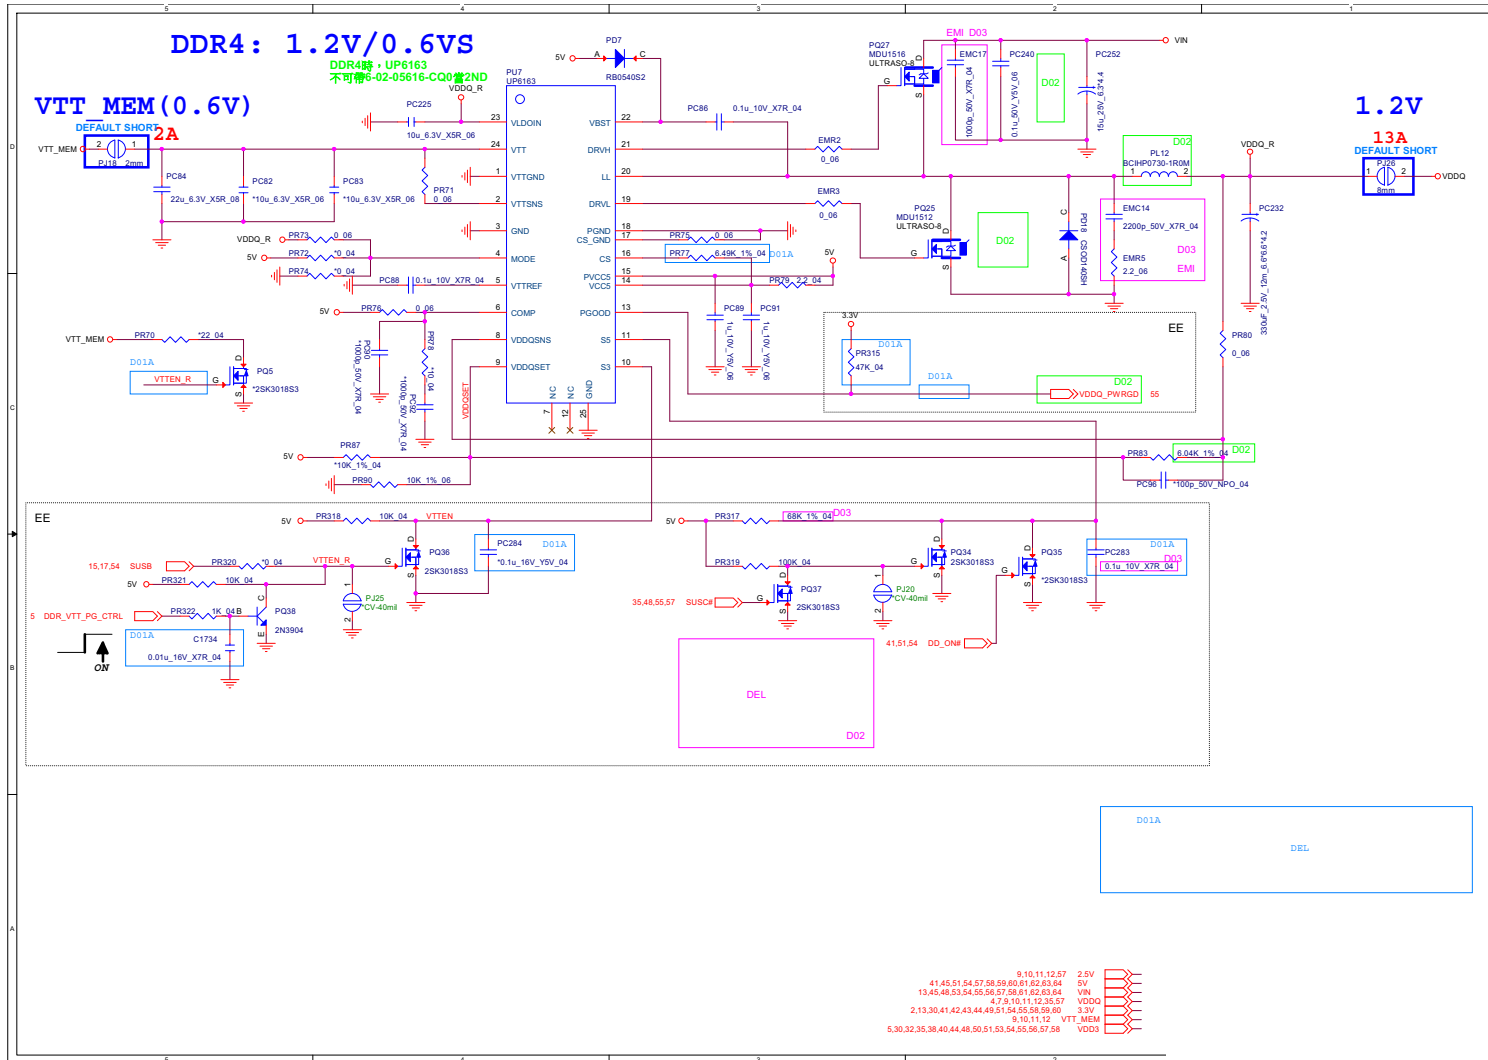


Sheet 52 of 79
DDR 1.2V / 0.6VS

VDD3, VDD5

Sheet 53 of 79
VDD3, VDD5

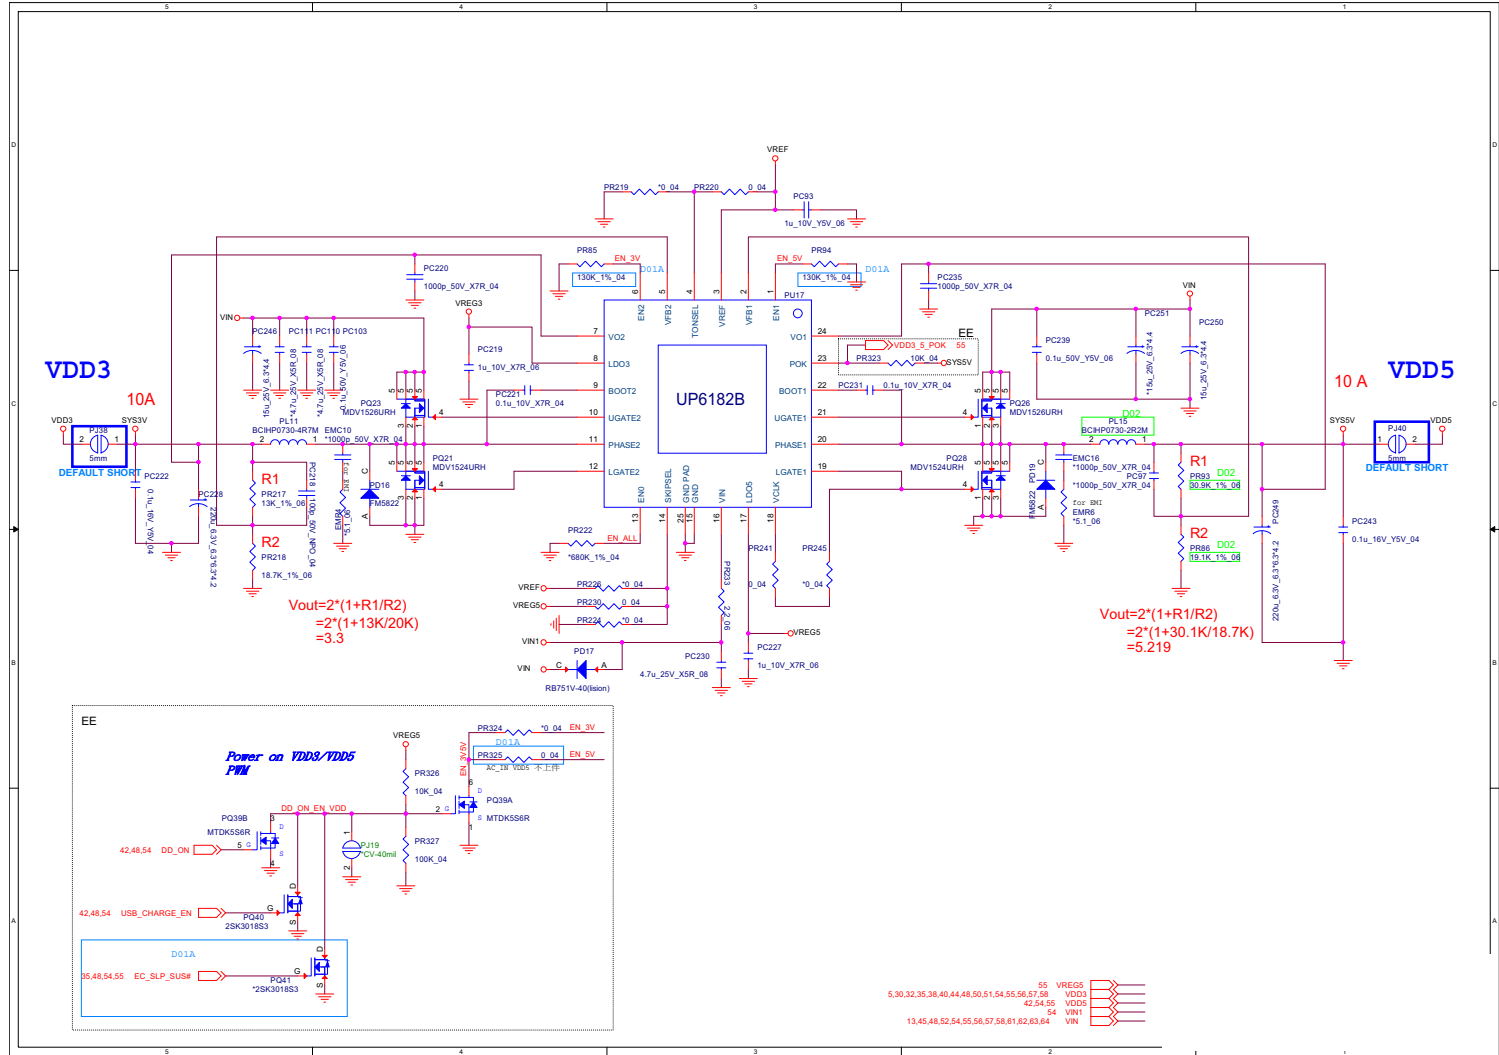

5V, 5VS, 3.3V, 3.3VS, 3.3VA

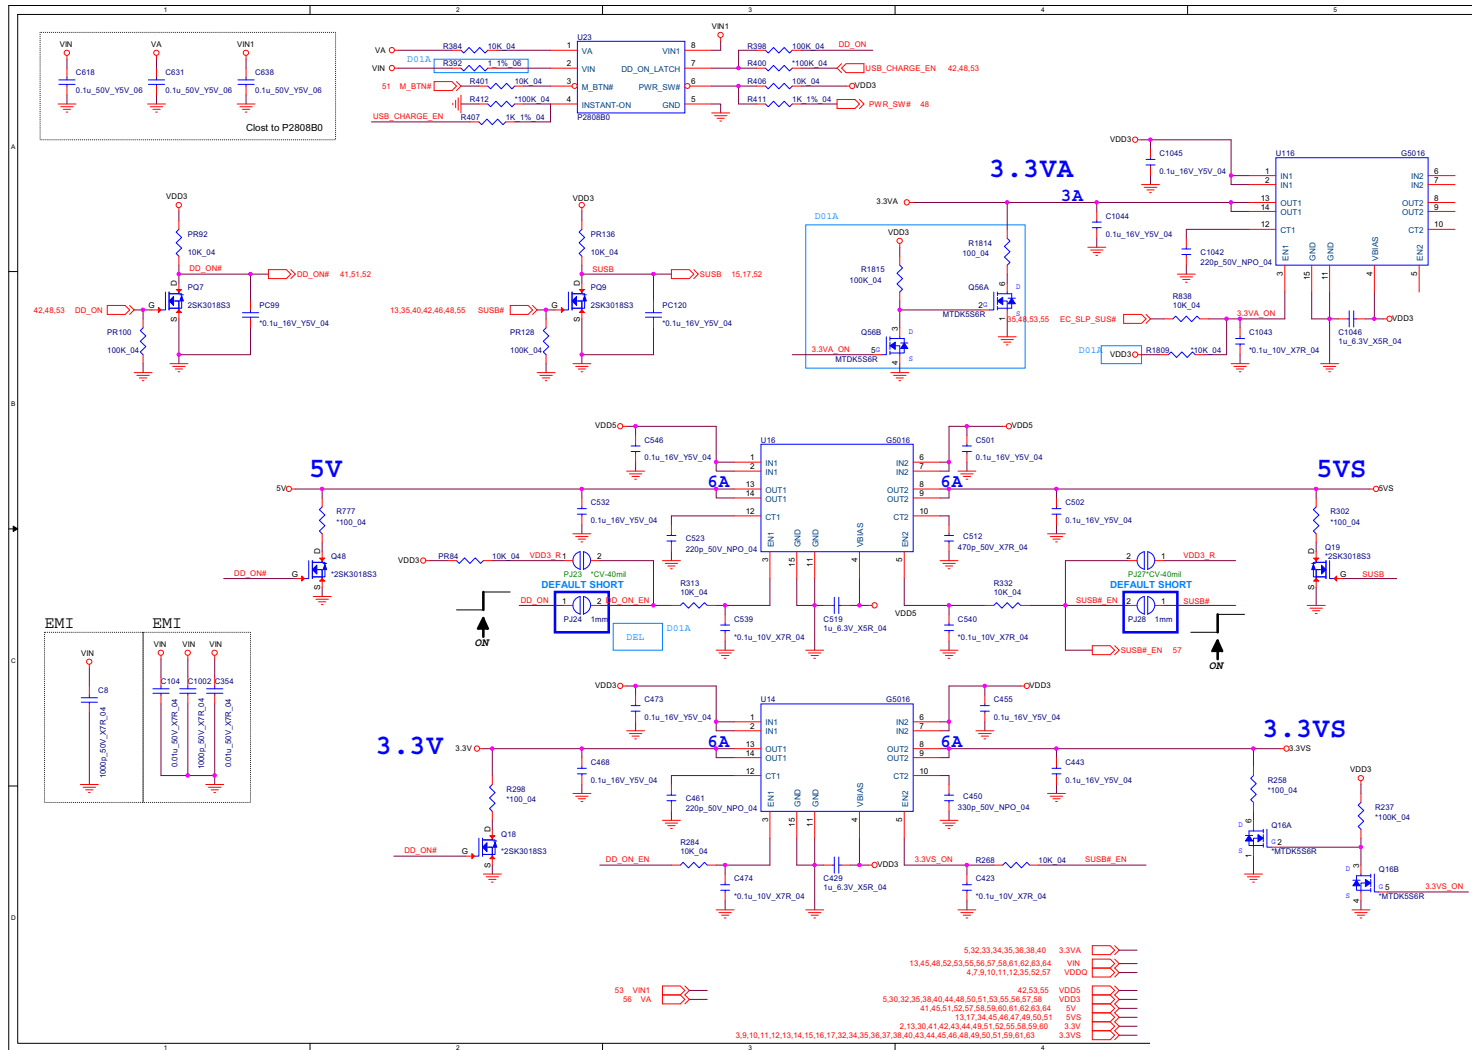


Sheet 54 of 79
5V, 5VS, 3.3V,
3.3VS, 3.3VA

B.Schematic Diagrams

Schematic Diagrams


Power 1.0V, VCCIO

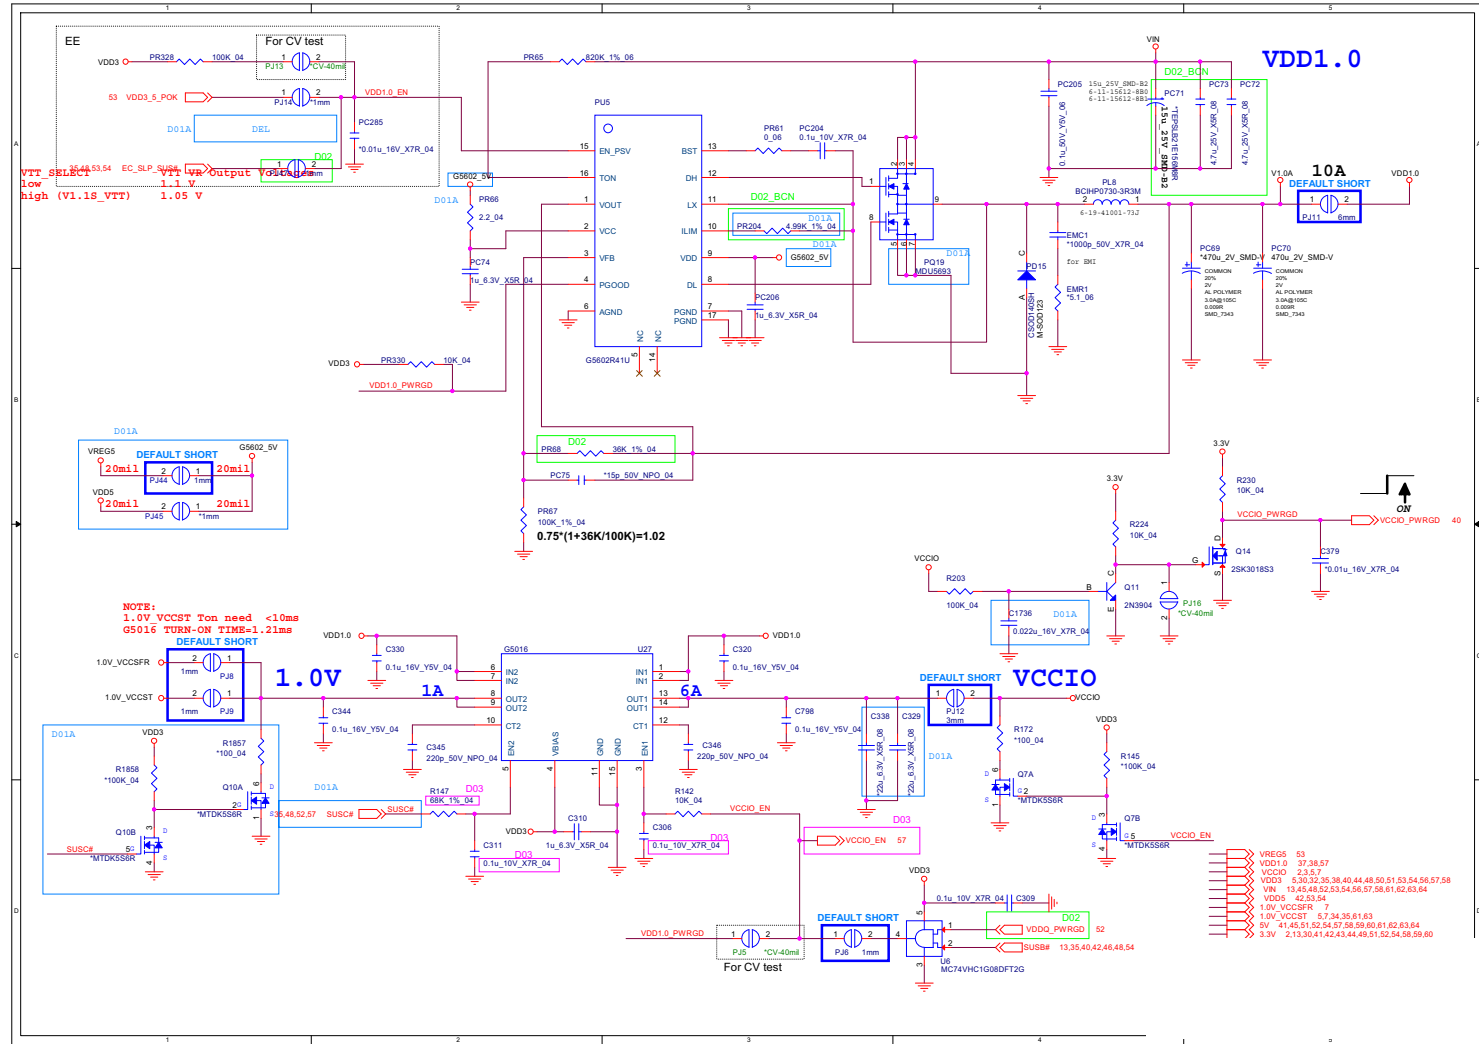

Sheet 55 of 79
Power 1.0V, VCCIO

B.Schematic Diagrams

AC_In, Charger

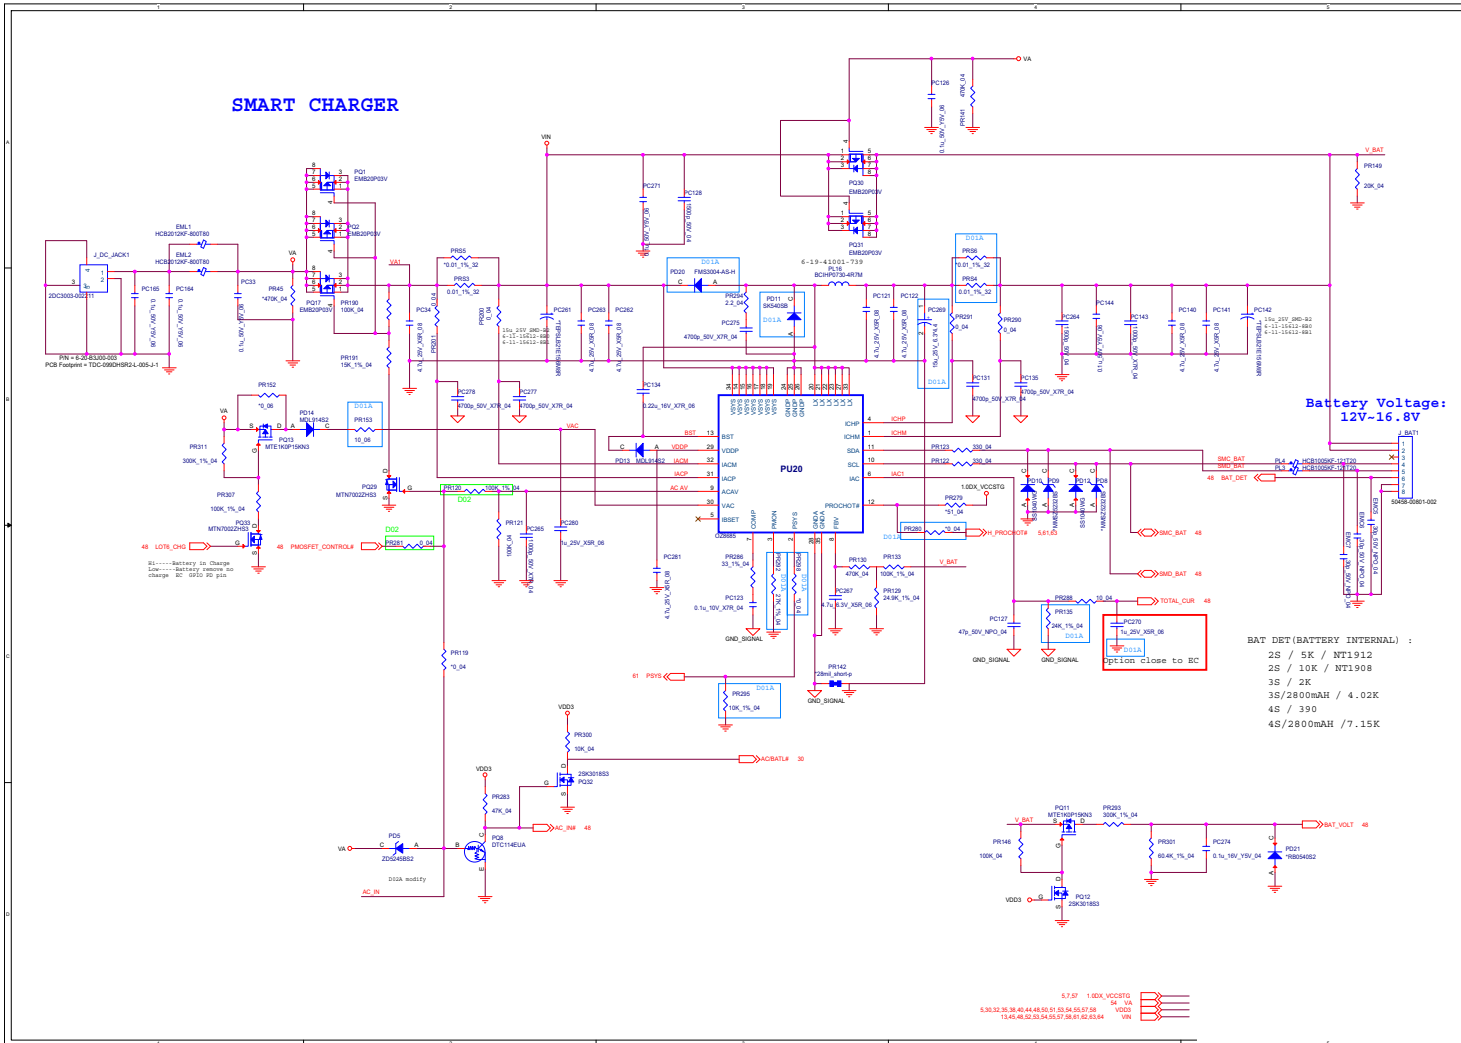


Sheet 56 of 79
AC_In, Charger

Schematic Diagrams


1.0DX_VCCSTG/VCCSFR_OC/2.5V

B.Schematic Diagrams

Sheet 57 of 79
1.0DX_VCCSTG/
VCCSFR_OC/2.5V

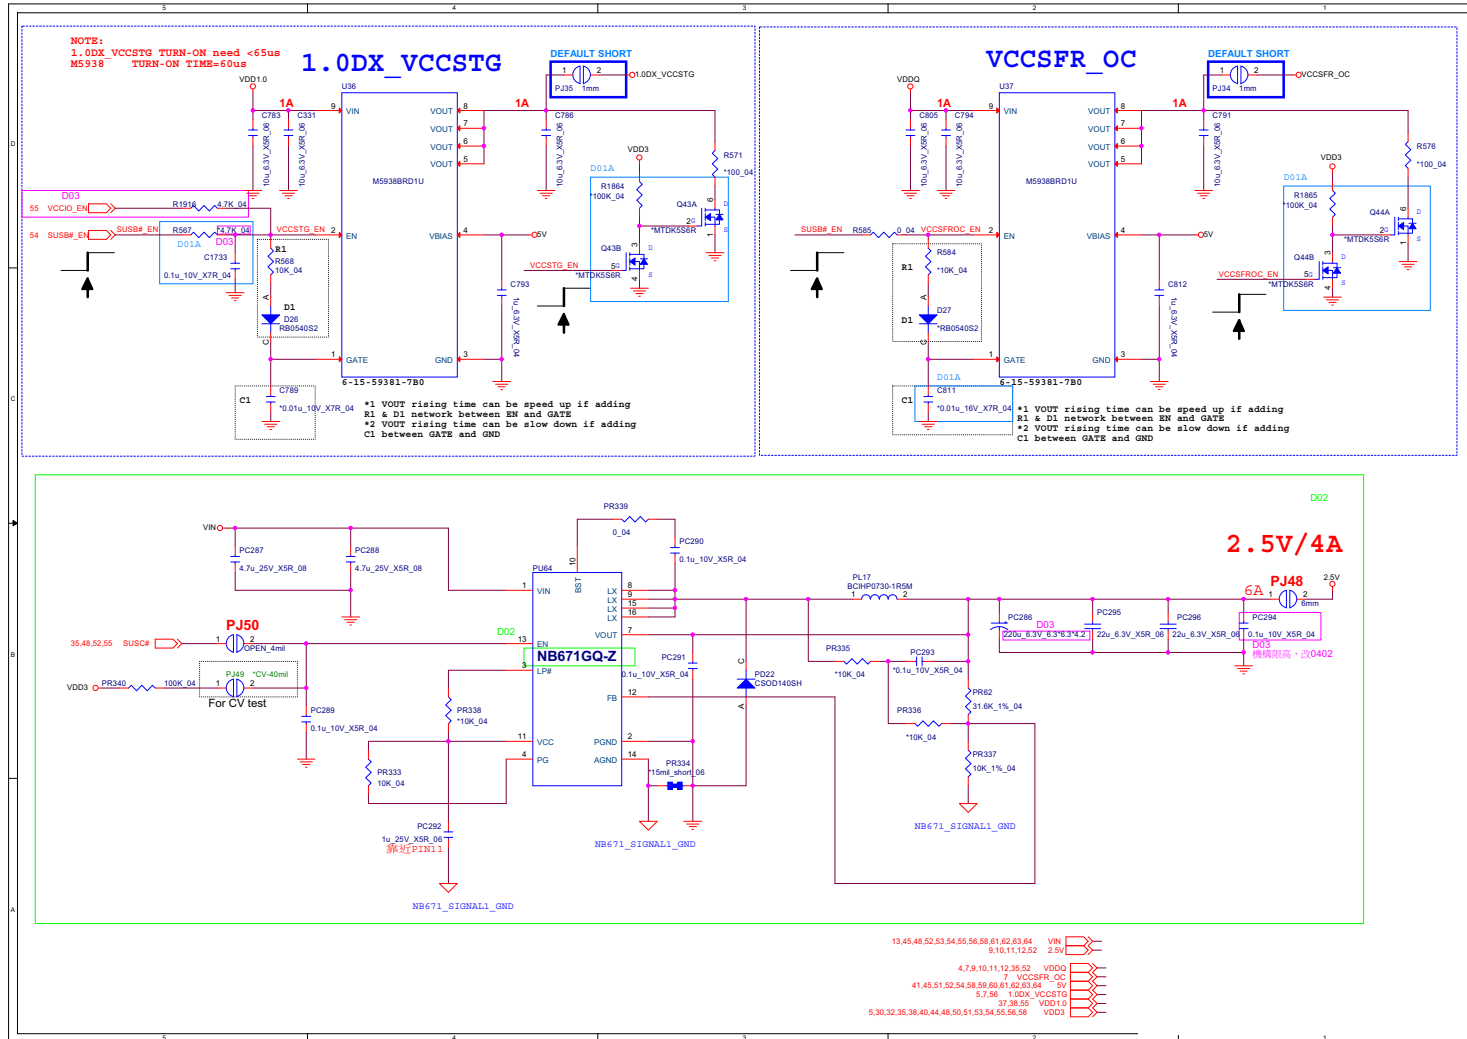

PEX_VDD, 3V3_AON, 3V3_RUN

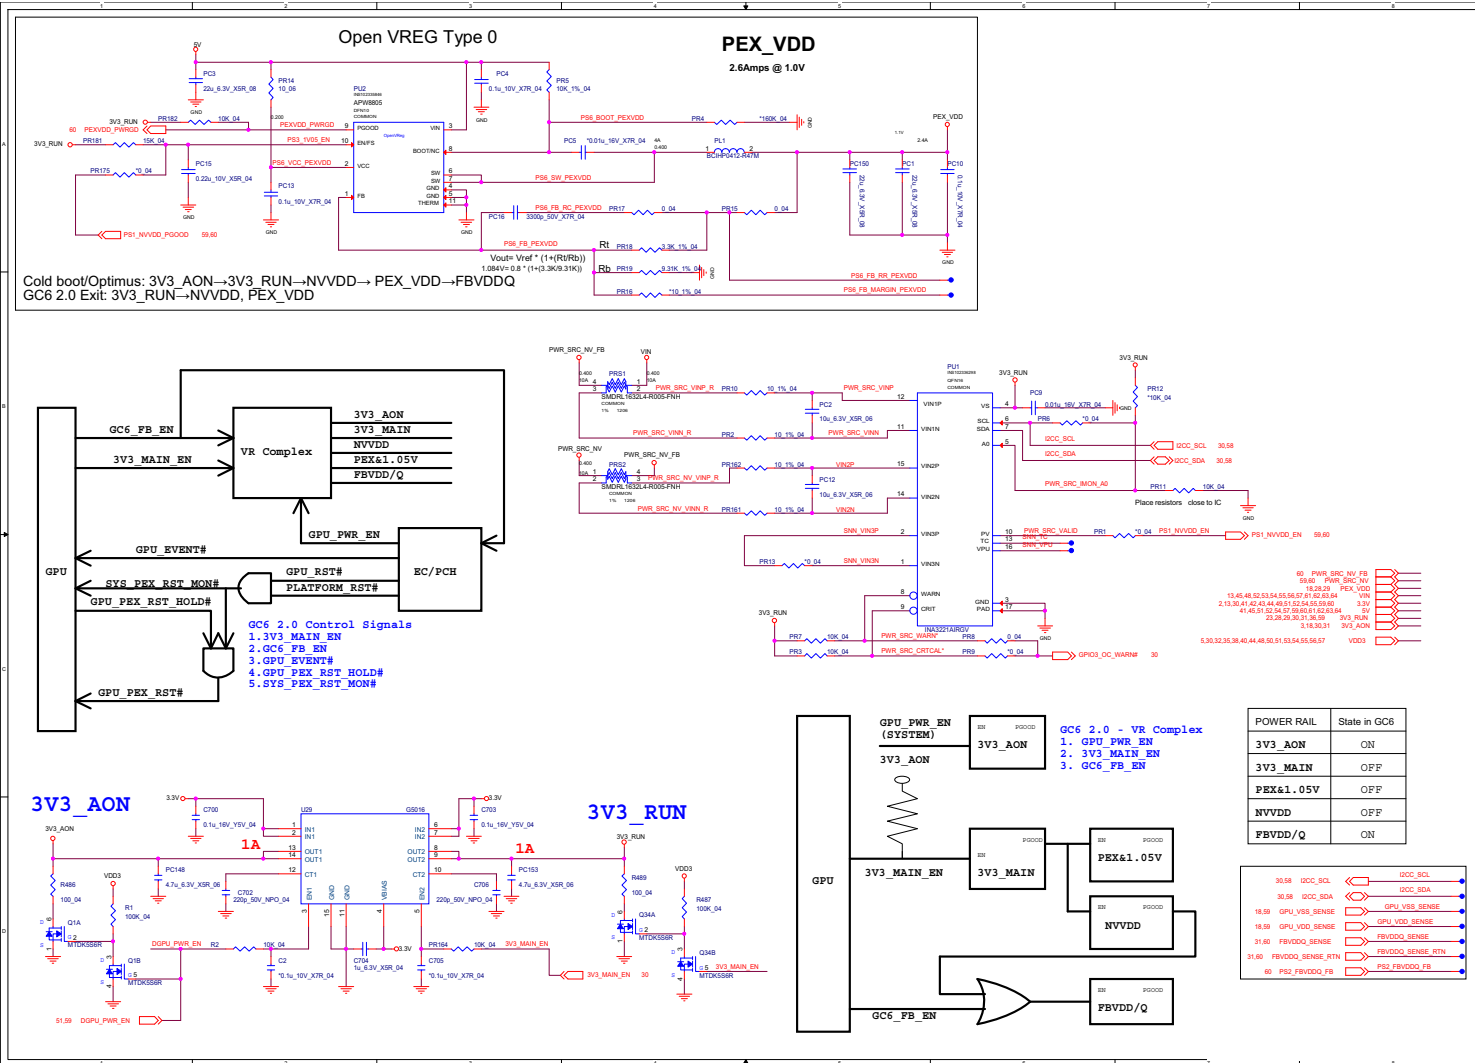


Sheet 58 of 79
PEX_VDD,
3V3_AON,
3V3_RUN

B.Schematic Diagrams


Schematic Diagrams

NVDD Phase 1 & 2

Sheet 59 of 79
NVDD Phase 1 & 2

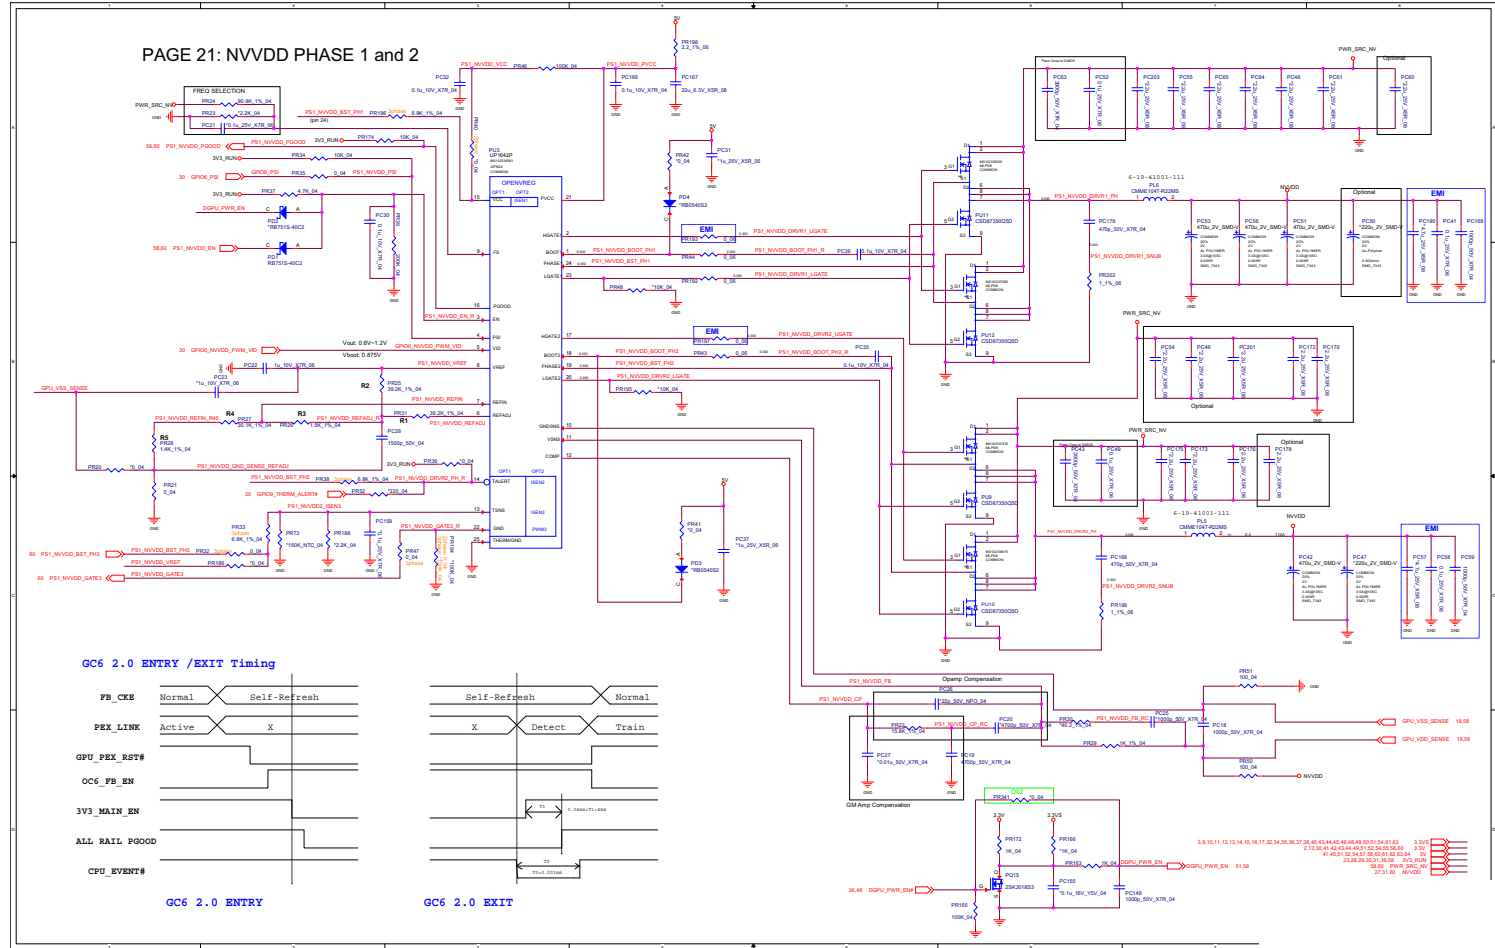


VCore & VCCSA Output Stage

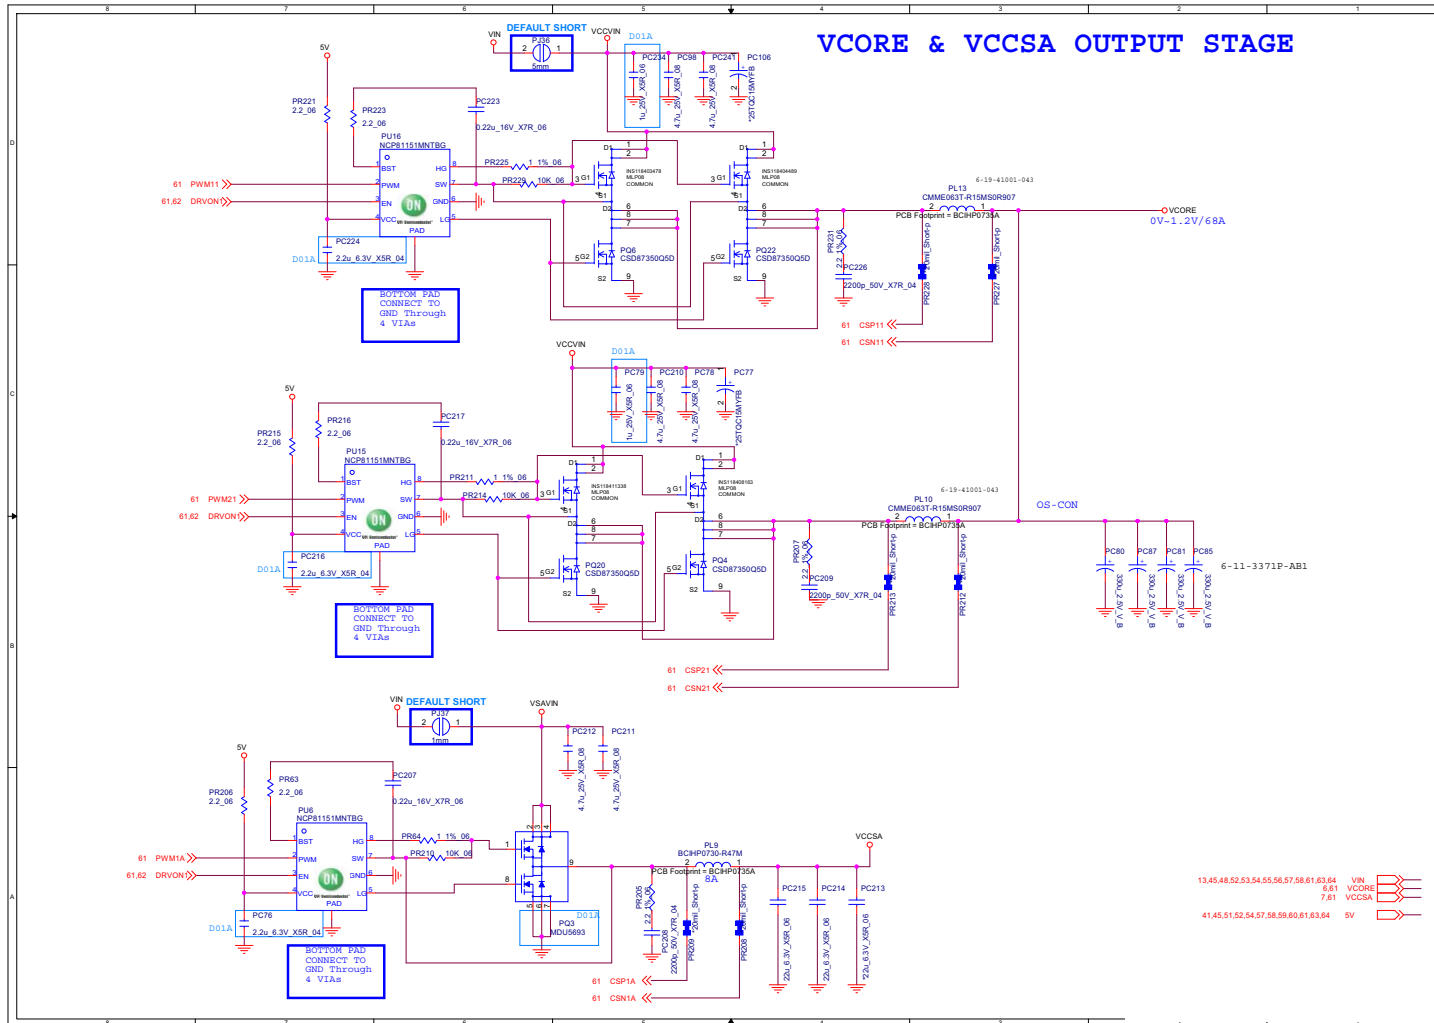

Sheet 62 of 79
VCore & VCCSA
Output Stage

B.Schematic Diagrams

VCCGT Output Stage

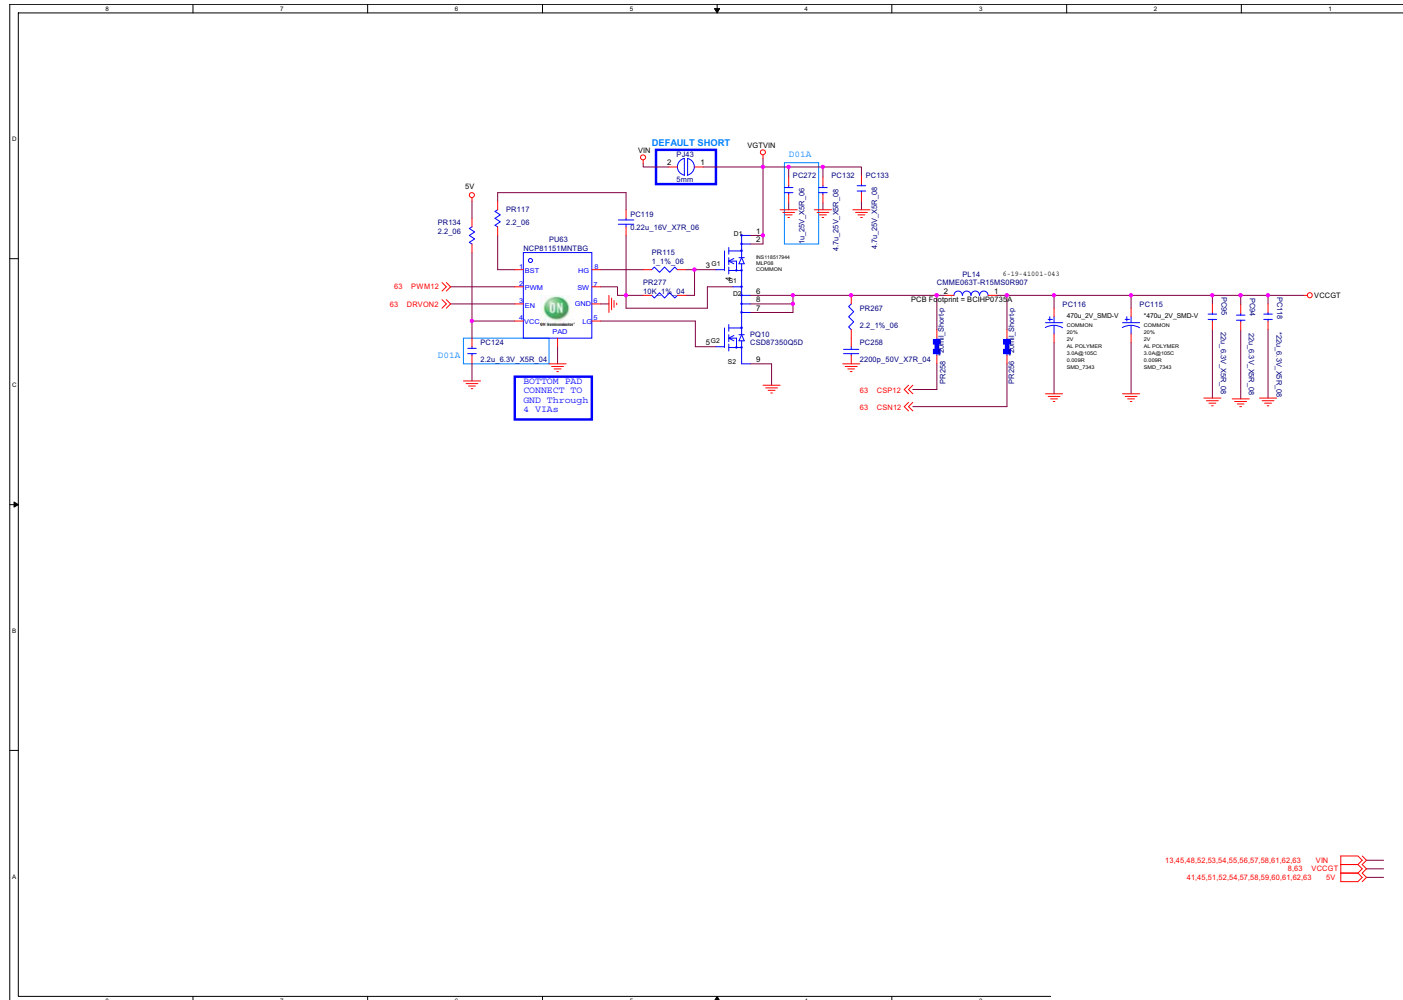


Sheet 64 of 79
VCCGT Output Stage


B.Schematic Diagrams

P650RE Audio Board A

Sheet 65 of 79
P650RE Audio
Board A

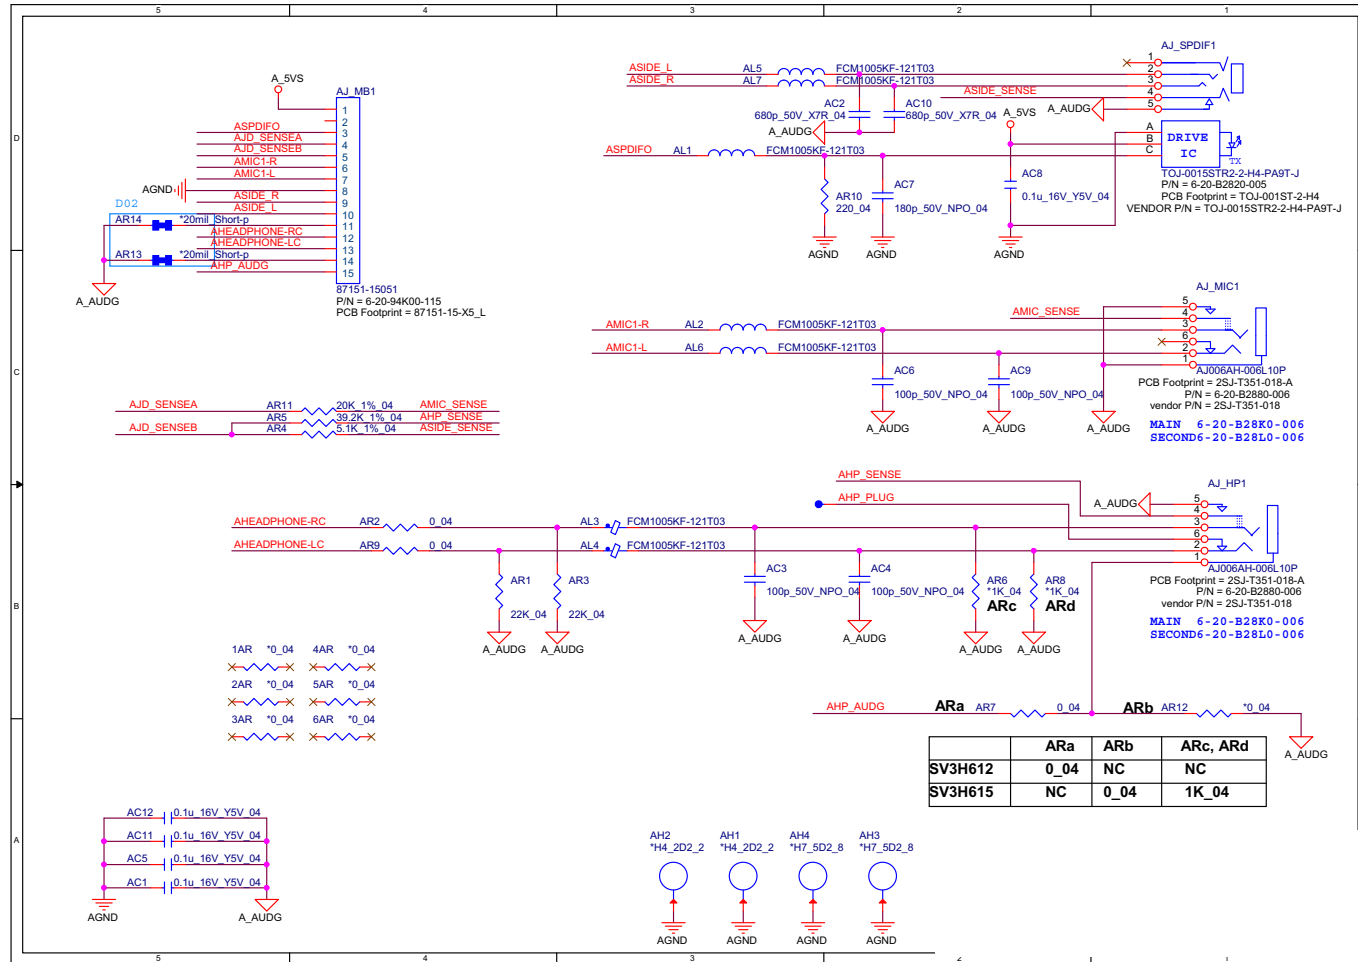

P650RE Power Board

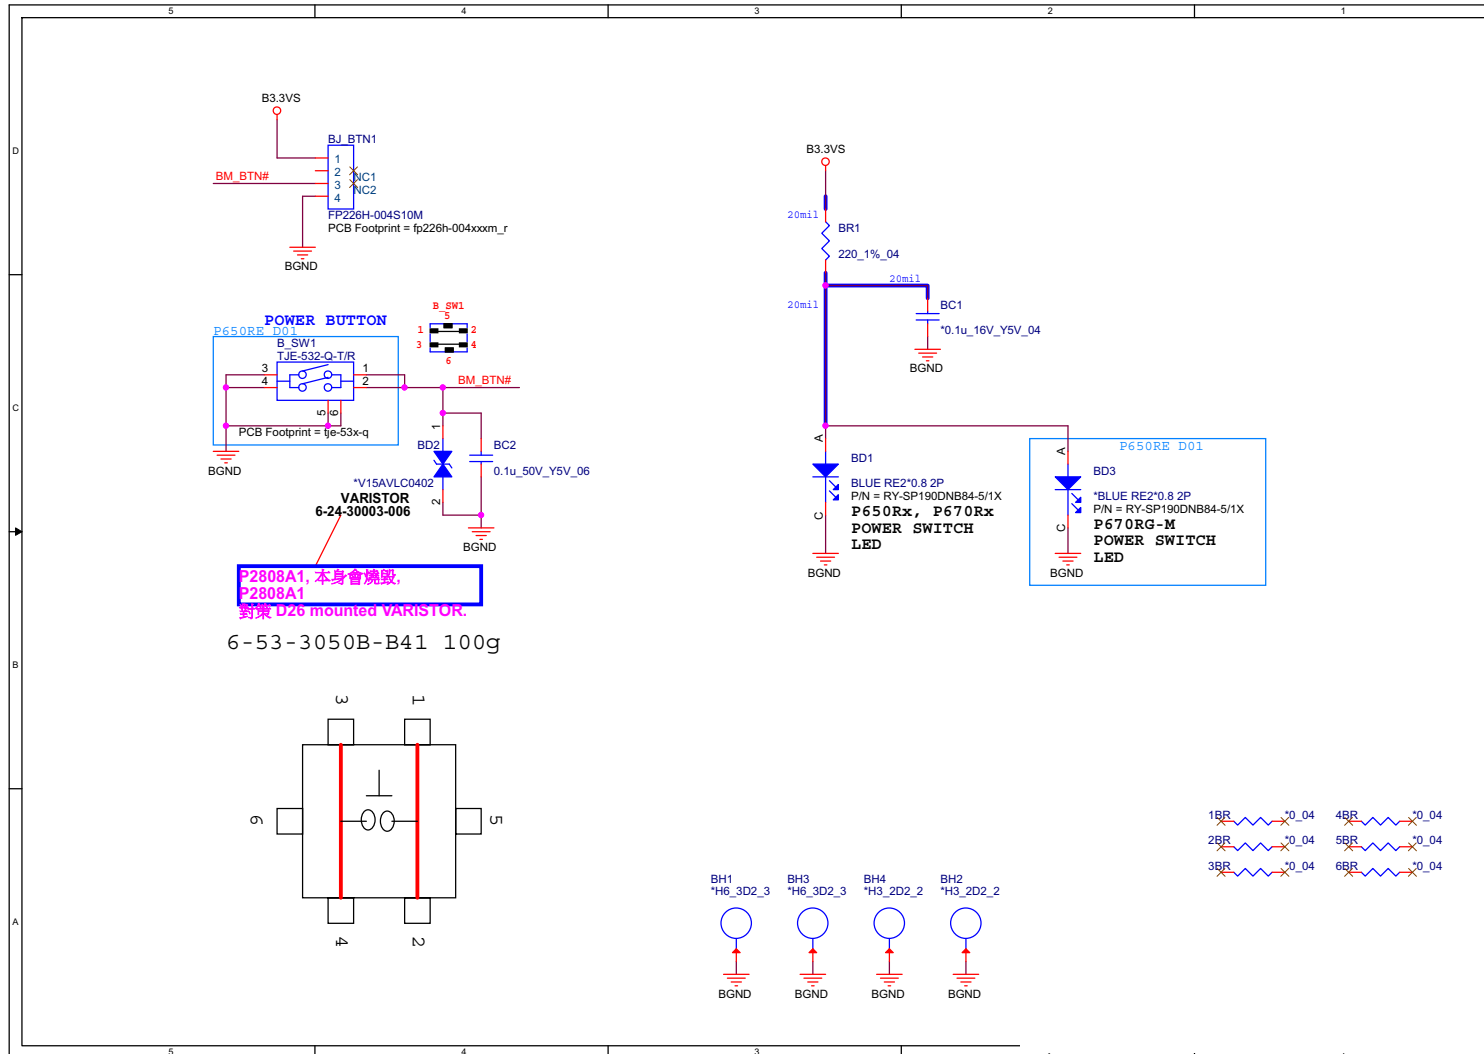


Sheet 66 of 79
P650RE Power Board


B.Schematic Diagrams

P650RE HDD Board

Sheet 67 of 79
P650RE HDD Board

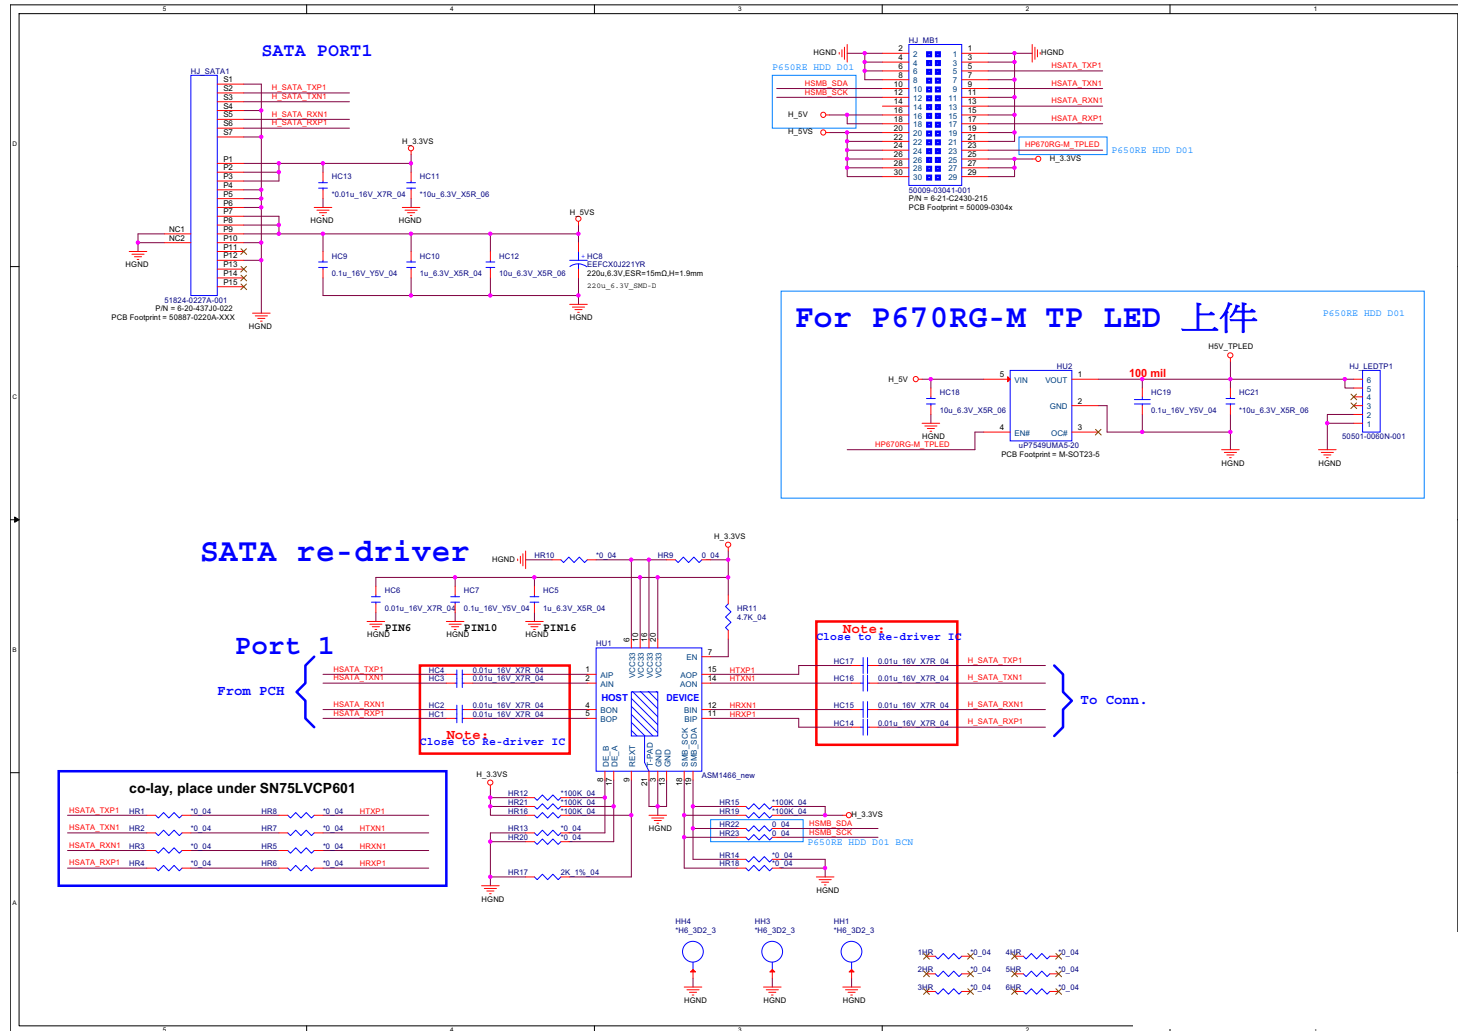

P650RE LED Board

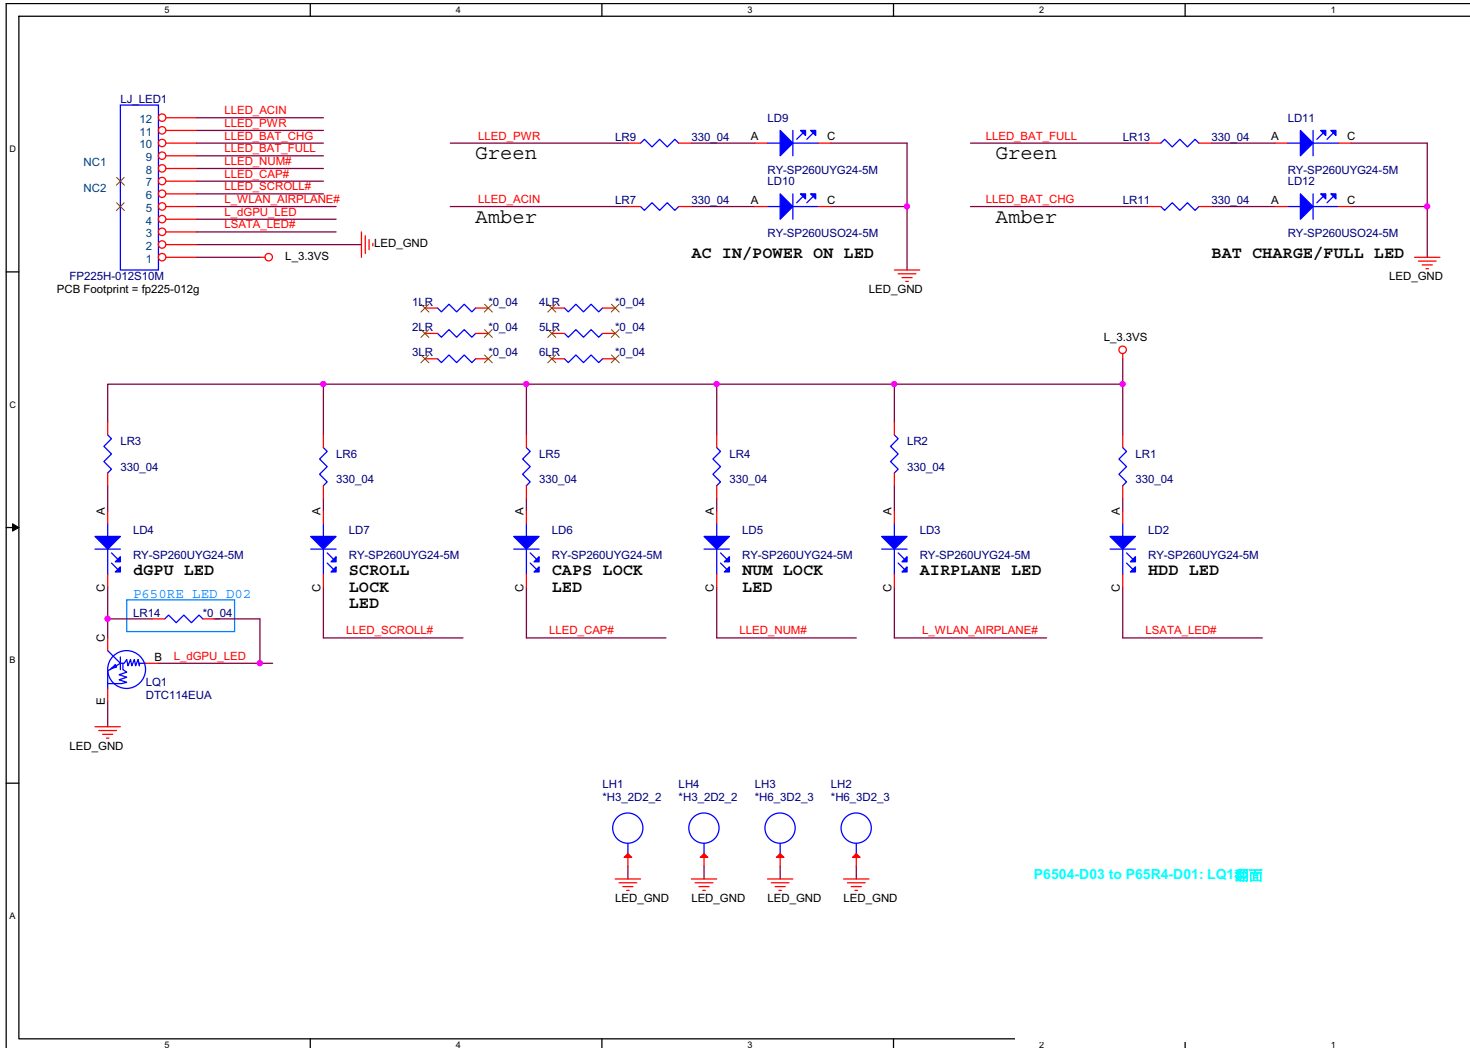


Sheet 68 of 79
P650RE LED Board

B.Schematic Diagrams


P6504-D03 to P65R4-D01: LQ1翻面

Finger Sensor Board

Sheet 69 of 79
Finger Sensor
Board

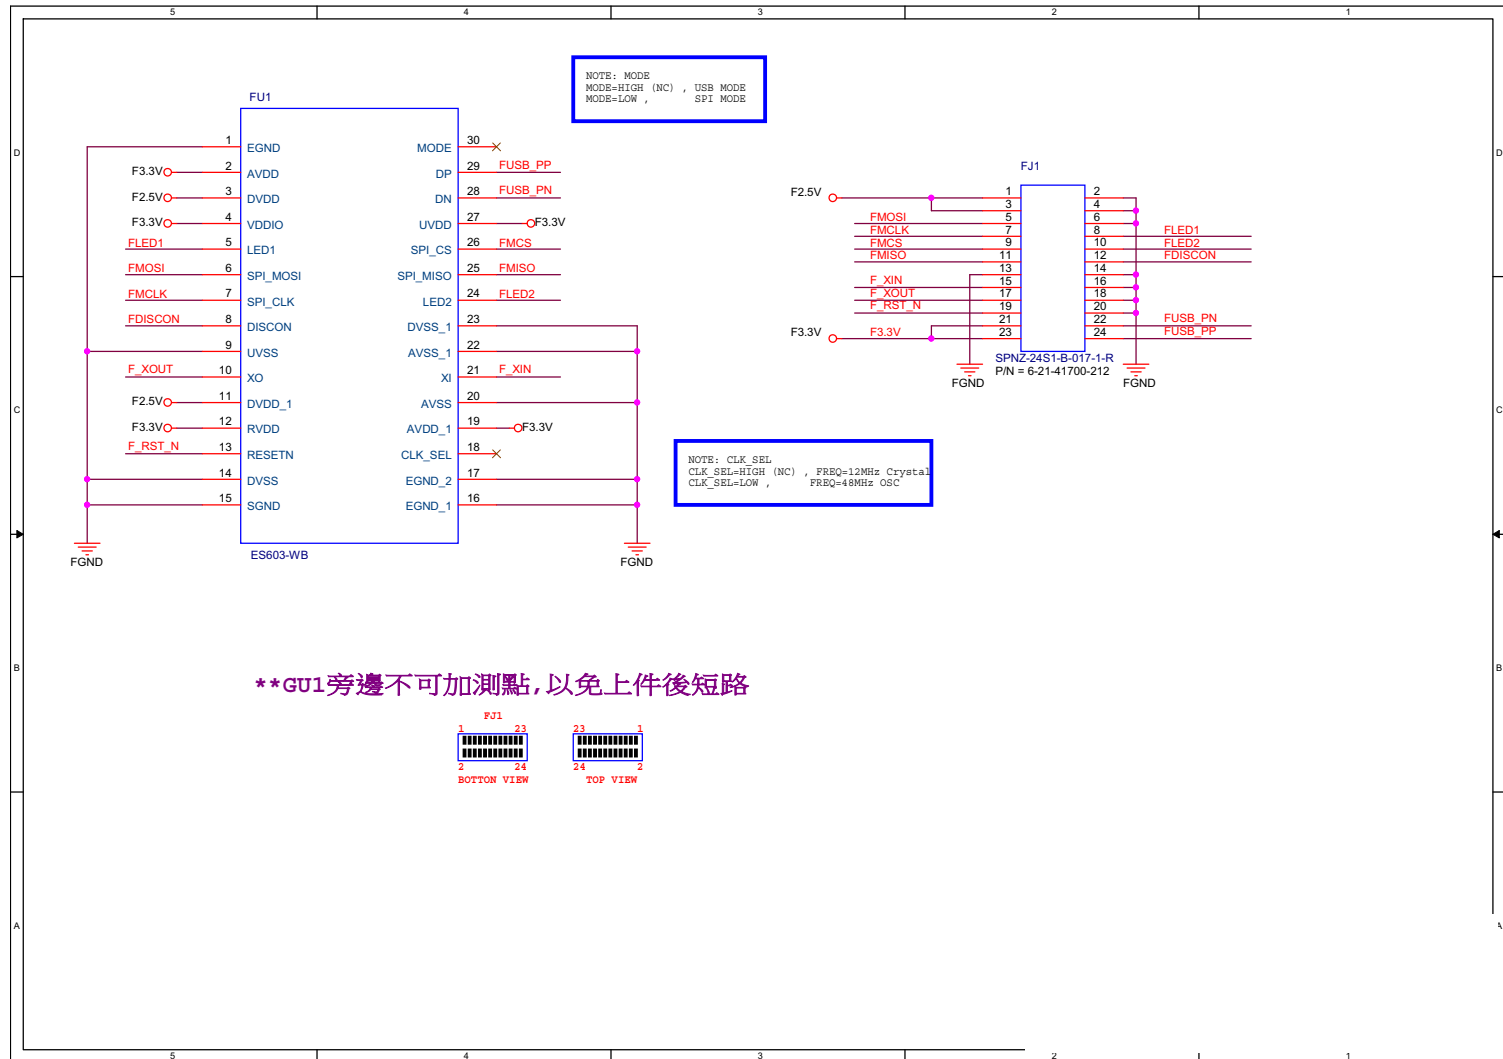


P650RE USB Board 2/3

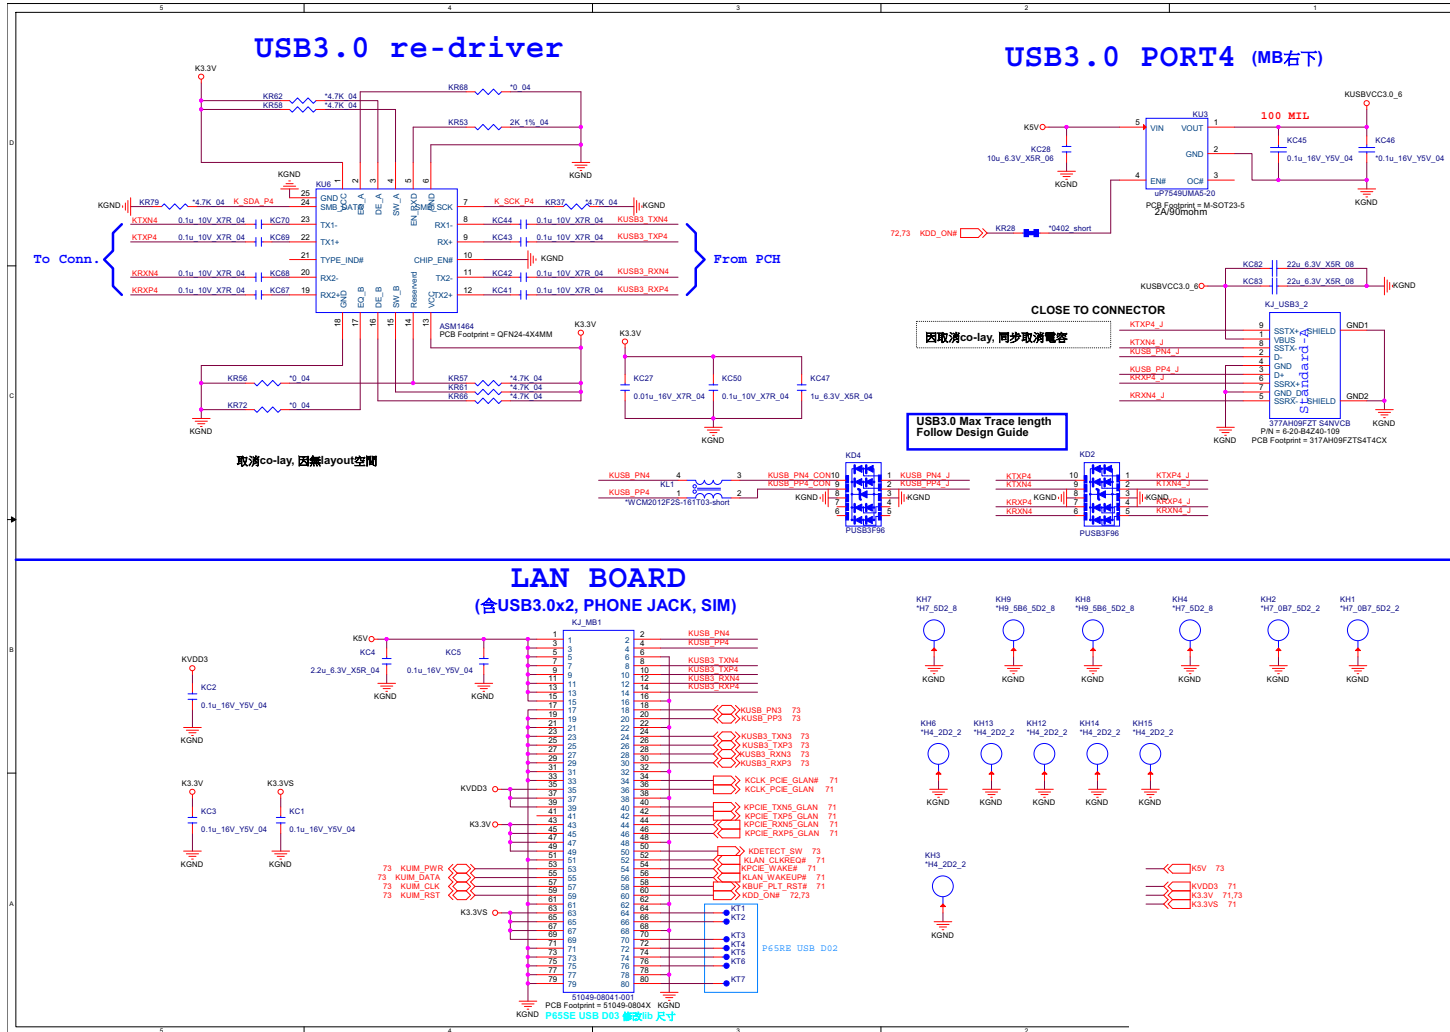

Sheet 72 of 79
P650RE USB Board
2/3


B.Schematic Diagrams

P670RE USB Board 3/3

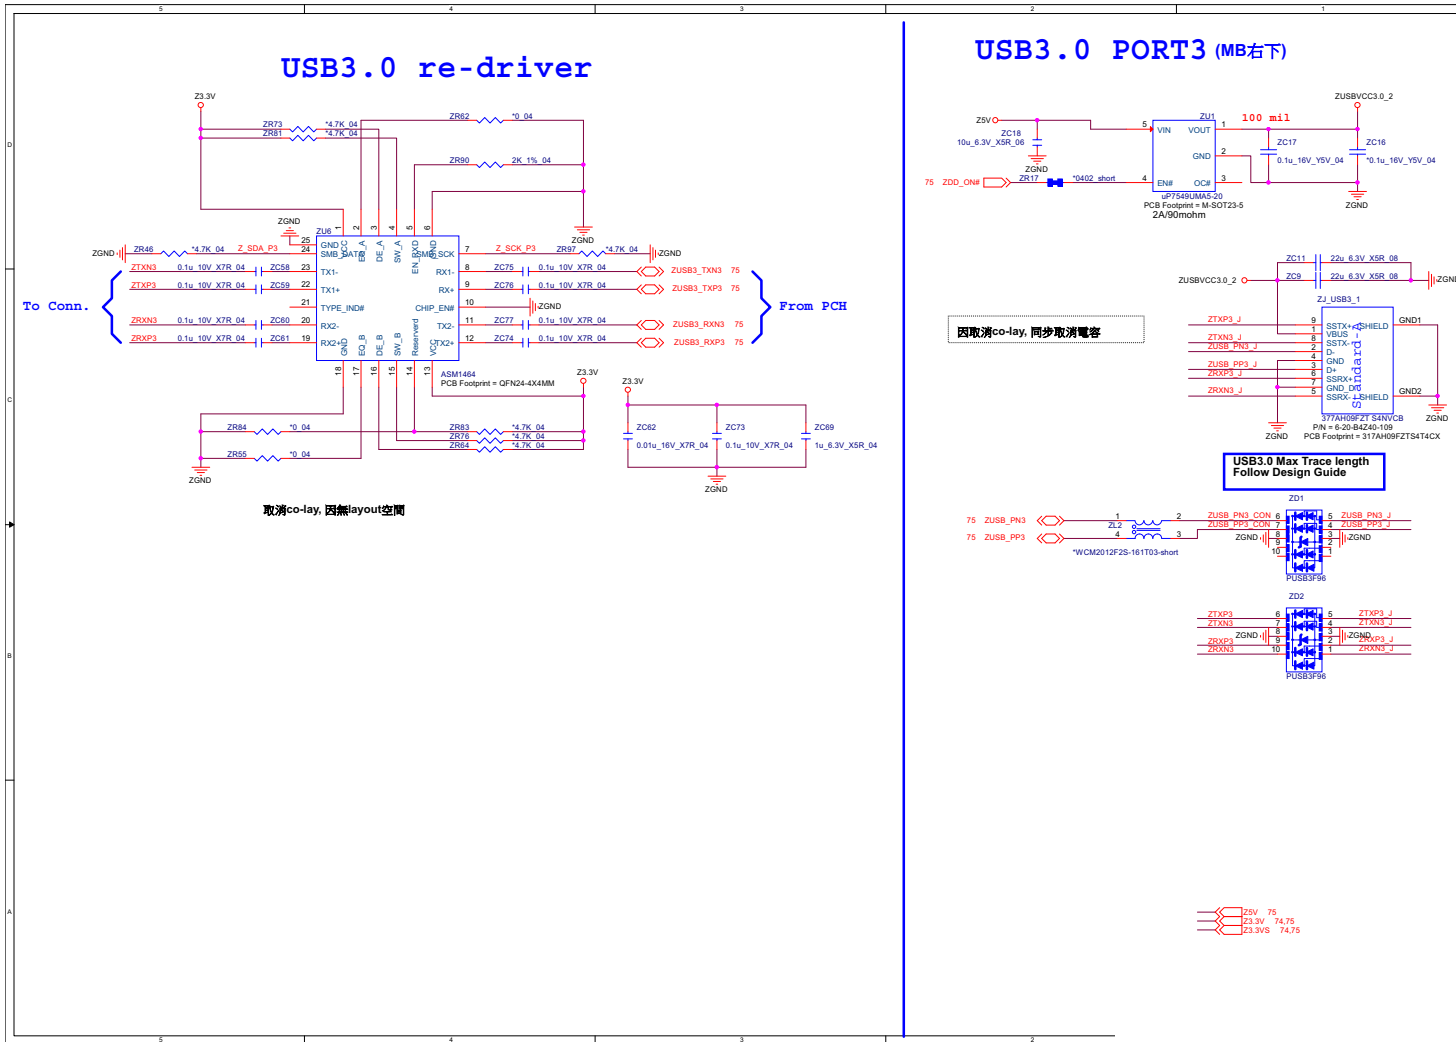

Sheet 76 of 79
P670RE USB Board
3/3


P670RE LED Board

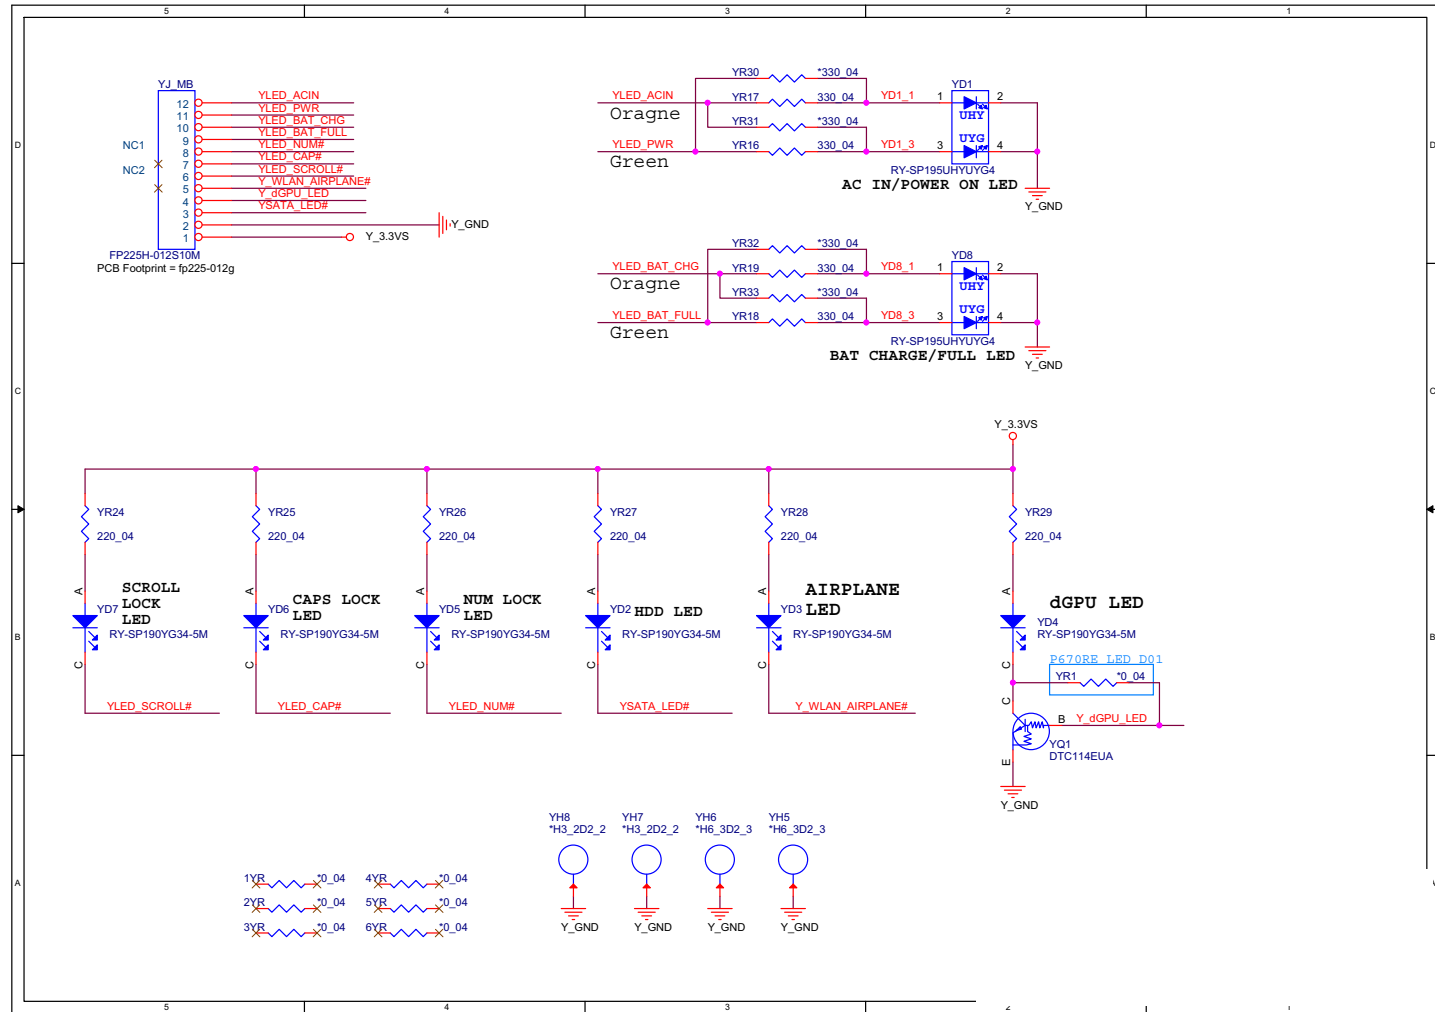

Sheet 77 of 79
P670RE LED Board

B.Schematic Diagrams


P655RE Power Board

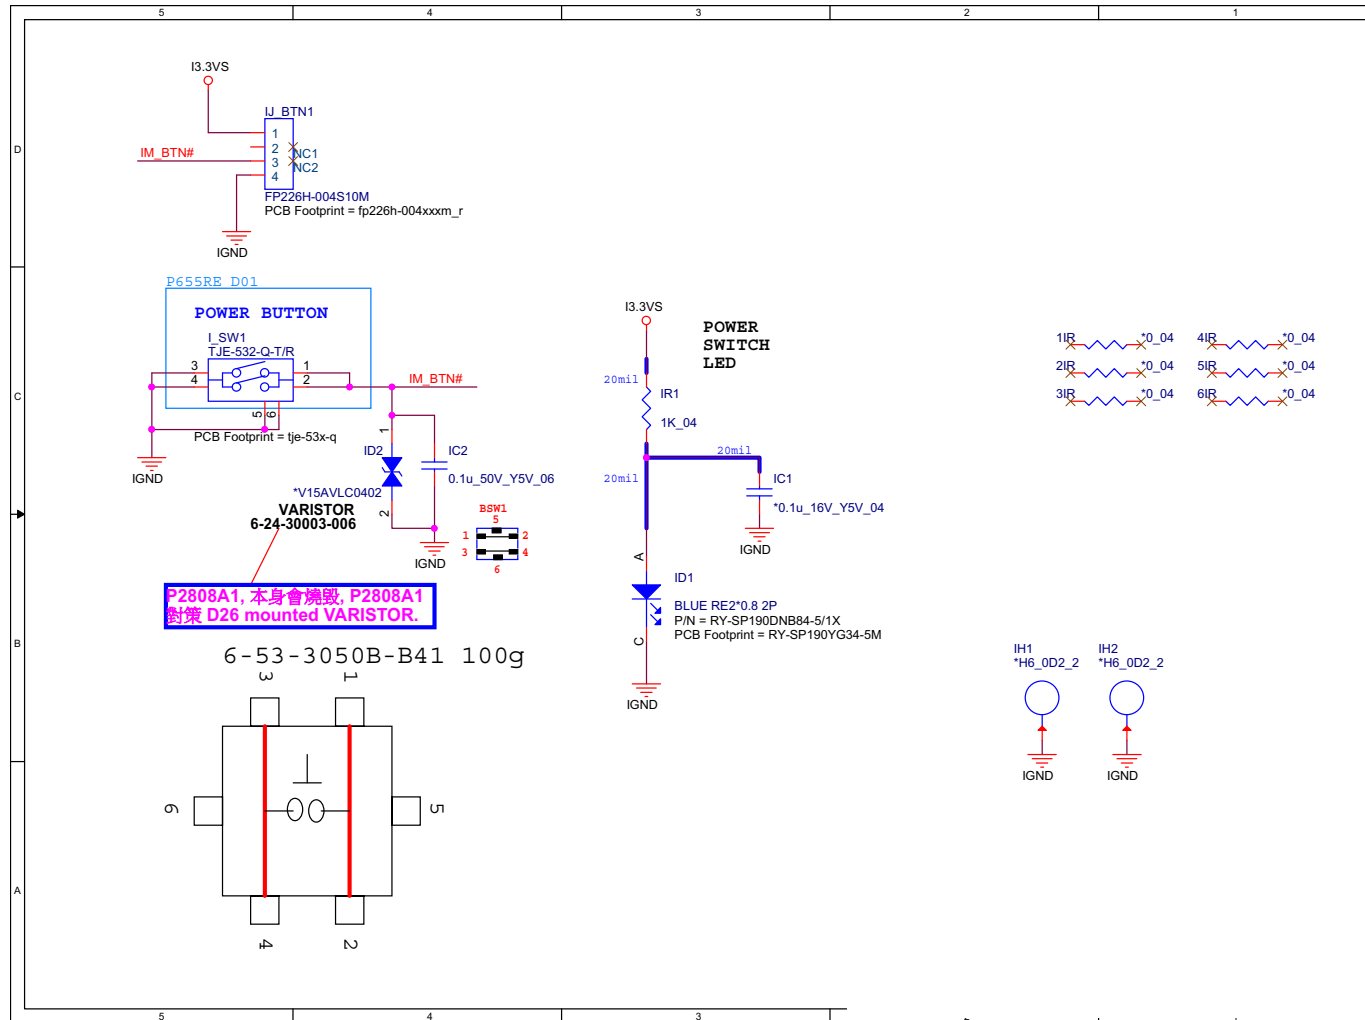

Sheet 78 of 79
P655RE Power Board

B.Schematic Diagrams

P655RE LED Board

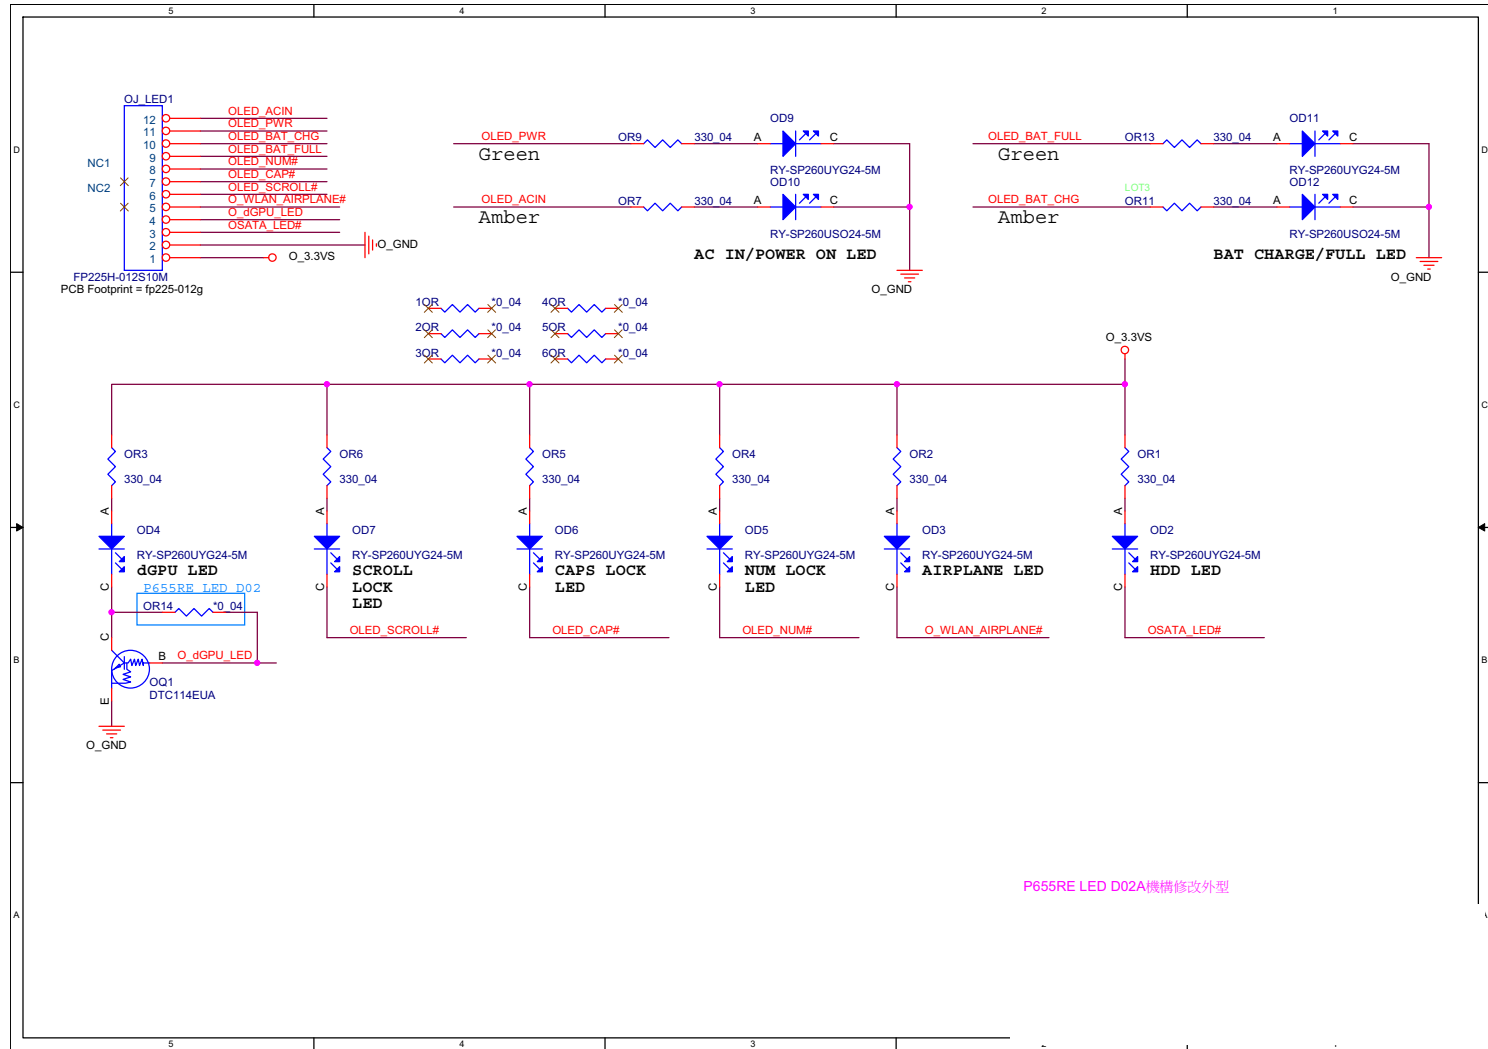

Sheet 79 of 79
P655RE LED Board

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore you may not downgrade your BIOS to an older version after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

```
fsX:\> Flash.nsh
```

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.